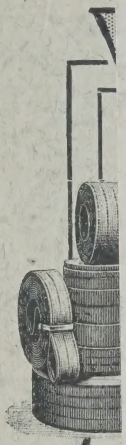
THE ENGINEER'S YEAR-BOOK FOR 1922

THE UNIVERSITY
OF ILLINOIS
LIBRARY
REMOTE STORAGE
620.8
En32
v.29
MECHANICAL ENGINEERING
LIBRARY

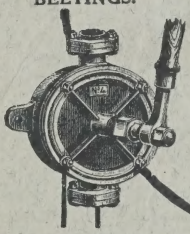


Leather (best En
and rawhide), also
(reg.) Balata, Canv
BELTINGS.


Autopositive
RS
for all pressures.




The 'super-lubricants' for engines, machinery and power plants.



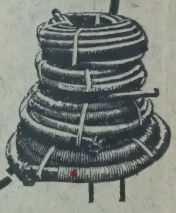Semi-Rotary Wing Lift and Force **PUMPS.**



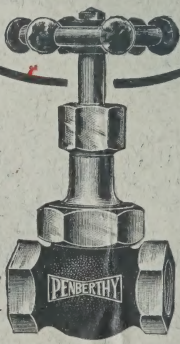'Jones-Willcox' Patent Wirebound (non-rubber) **HOSE.**



'Penberthy' Brass Regrinding, Gate, Check, and Compodisk Valves.

Jointings, Fittings, and Tools of every description.

Quotations upon Application.

W. H. WILLCOX & CO. LTD., 32-38 Southwark St., LONDON, S.E. 1.

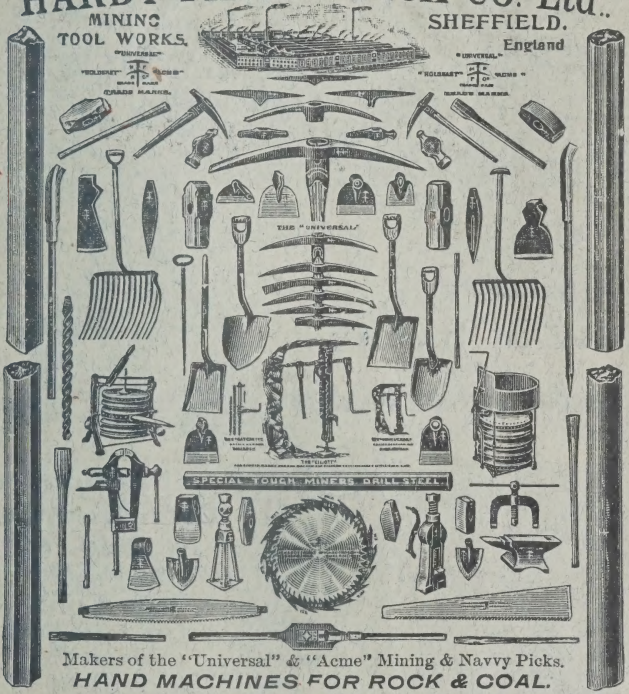
Telegraphic Address:
'HARDYPICK, SHEFFIELD.'

THE

Telephone:
CENTRAL 157.

HARDY PATENT PICK CO. Ltd.

MINING TOOL WORKS, SHEFFIELD. England



Makers of the "Universal" & "Acme" Mining & Navvy Picks.

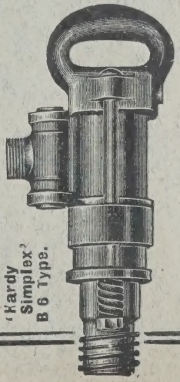
HAND MACHINES FOR ROCK & COAL.

and all Mining, Quarry, Contractors', and Agricultural Tools.

MINER'S DRILL STEEL
HIGH SPEED ,,
CRUCIBLE CAST ,,
} Of all grades and for all purposes


'HARDY' ROCK DRILLS AND COAL CUTTERS.
Driven by Compressed Air or Steam.
Simplest and best Machines extant for Mines and Quarries.

'HARDY SIMPLEX' HAMMER DRILL.
Lightest and Handiest Drill on the Market.



'Hardy Simplex' B 6 Type.

London Office: 17 QUEEN VICTORIA ST., E.C. 4.

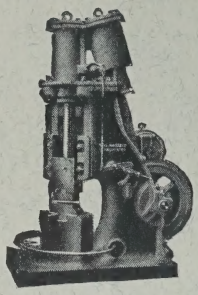SMITHY & FORGE EQUIPMENT




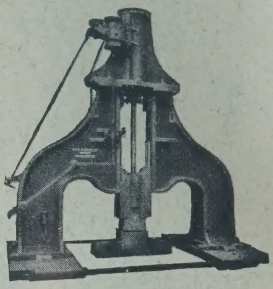Pneumatic
POWER HAMMERS
½ cwt. to 20 cwt.
Over 3,000 sold.
(*See page* 1024.)



STEAM HAMMERS
(*See page* 1021.)

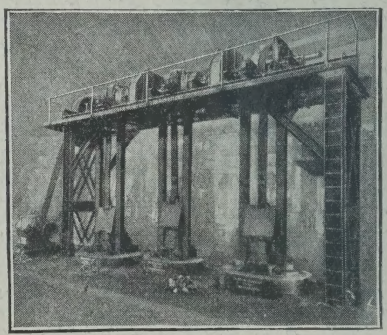COMPRESSED AIR HAMMERS
(*See page* 1027.)



Friction
Drop Stamps
Weight of Tup
3 cwt. to 6 tons.

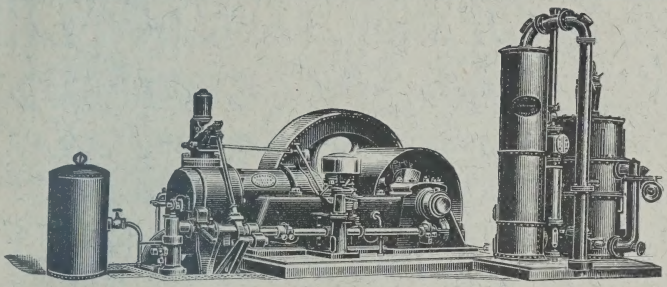
TUP & DIE
4 cwt. to 10 tons.
(*See page* 1028.)

Steam
Drop Stamps

B. & S. MASSEY LTD.
MANCHESTER.

OFFICES :—
LONDON : 28 Victoria Street, S.W. 1.
BELFAST : 93 Ann Street.
GLASGOW : 110 Bothwell Street.
NEWPORT : Dock Street.
AGENTS—France and Belgium, Italy, Spain, Holland, Canada, South Africa, South America, etc.

REMOTE STORAGE



OUR GAS ENGINES combine massive construction with elegance of design, and are the outcome of a unique experience in the manufacture of high-class steam and internal combustion engines. They are made in all sizes up to 300 B.H.P.

Paxman

Steam Engines and Boilers of all sizes and types, Superheaters, &c.

DAVEY, PAXMAN & CO. Ltd.,
(Branch of Agricultural & General Engineers, Ltd.),
Colchester, and Central House, Kingsway, W.C. 2.

G.H.W.

THE SHROPSHIRE IRON CO., LTD.

Hadley, near Wellington, Salop.

London Office: 10 BUSH LANE, CANNON STREET, E.C. 4.

Telegrams: 'Sun Wellington, Salop.' 'Sunbrand, Cannon, London.'
Telephone: No. 11 Wellington, Salop. 5959 Central, London.

TRADE MARKS.

'SUN BRAND.'
IRON. COPPER. HOOPS.

IRON. DRAWN WIRE.

STEEL WIRE AND BARS, AND HOOPS.

IRON, STEEL, COPPER & BRONZE.

PUDDLED IRON. In Billets and Bars.

BARS (Iron and Steel). Round, Square, Flat, Half-round, Oval, Tip (plain and grooved), Small Sections, etc.

HOOPS (Iron and Steel). Bedstead Strip, Coopers' Hoops (cut nosed, punched and splayed), Baling Hoops (with Studs or Buckles), Packing Hoops, General Warehouse Hoops, etc.

ROLLED COILED RODS. In Iron and Steel for Fencing, Drawing down, etc.

DRAWN WIRE (Iron and Steel). Bright, Annealed, Galvanized, Tinned, Telegraph, Telephone, Cable, Rigging, Rope, Bottling, Fencing, etc.

COPPER AND BRONZE WIRE. Telegraph, Telephone, Trolley, Cable, Radial, Tapes, Binders, etc.

BARB WIRE, STRAND WIRE, STAPLES, etc.

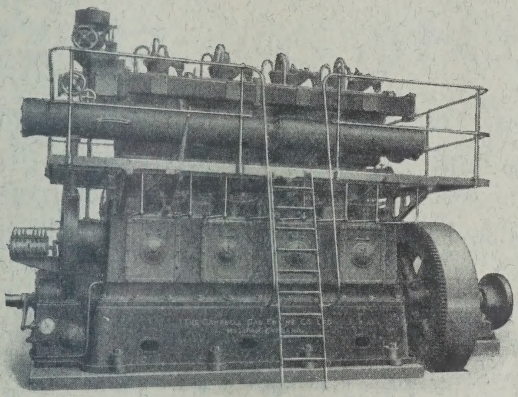
CONTRACTORS to H.M. GOVERNMENT (Admiralty, G.P.O., India Office, War Office and the Colonies), English and Foreign Railways, etc

SYDNEY: BRONZE MEDAL, 1879. **NEW ZEALAND: GOLD MEDAL, 1882.**
LIVERPOOL: SILVER MEDAL, 1882. **ADELAIDE: GOLD MEDAL, 1887.**
FRANCO-BRITISH: GRAND PRIX (Highest Award) 1908.

CAMPBELL

VERTICAL

GAS ENGINES



THE IDEAL ENGINES FOR ELECTRIC GENERATING SETS.

All parts are easily accessible. Cylinders and all Enclosed Bearings have forced lubrication. The Cyclic variation is low. Workmanship and Material of the highest class throughout.

STANDARD SIZES - - 60 to 600 B.H.P.

THE CAMPBELL GAS ENGINE CO., LTD.

HALIFAX, ENGLAND.

See also announcements facing text pages 1645 and 1692.

The Engineer

IS WRITTEN BY EXPERTS FOR EXPERTS

and is therefore indispensable to Engineers in all branches of the Profession, for whom it provides on all matters of interest

THE LATEST AND MOST TRUSTWORTHY INFORMATION

A Weekly Feature is the Sheet showing

CURRENT PRICES for METALS, ferrous and non-ferrous, FUELS, solid and liquid.

The Engineer.

ESTABLISHED

1856.


The Engineer.

Established 1856. Registered as a Newspaper.

OFFICE FOR ADVERTISEMENTS & PUBLICATION, 35, NORFOLK ST., STRAND, LONDON, W.C. 2

Vol. CXXXI.—No. 3391 LONDON, FRIDAY EVENING, JANUARY 21, 1921. [Price 1s. 2d.

The Engineer

PRINCIPAL CONTENTS OF THIS ISSUE.

Progress in Dock and Harbour Work.
Is Lubrication a Chemical Phenomenon?
Trestle Viaducts on the G.W.R.
Unemployment.
Short Histories of Famous Firms. No. X.—Longridge & Co. of Bedlington.
Wages and Sympathy.
Gauging with Dial Instruments.
Concrete Mixing Machines.
A New Hydraulic Valve.
Shipbuilding in 1920.

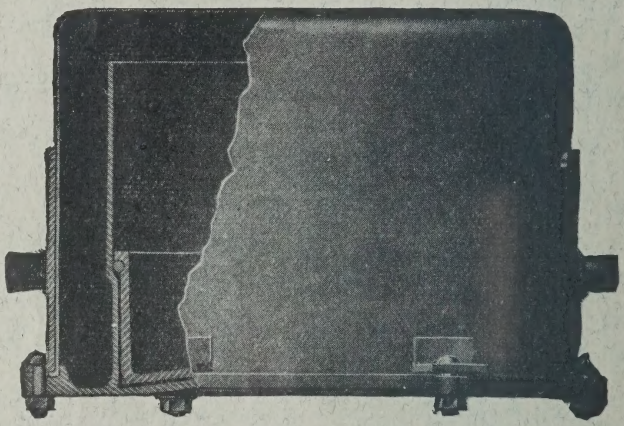
EDITORIAL and PUBLICATION OFFICES:

33 NORFOLK STREET, STRAND, LONDON, W.C. 2.

Improved Brake Cylinder
"L" Type (Patented)

High-Powered Cylinder with Solid Drawn Casing

Giving Increased Power and Reduced Weight



Cylinder easily removed from casing
No Foundation Ring
No Riveted Seams, Caulking or Leakage

Manufacturers of

Vacuum Brake Equipment

Suitable for all classes of Steam and Electric Rolling Stock

THE CONSOLIDATED BRAKE AND ENGINEERING CO. LTD.

15 Dean's Yard, Westminster, London, S.W. 1

Telegrams—'Vacuo, Vic, London.' Telephone—3987 Victoria.
Codes—A.B.C. (5th Edition) and Bentley's.

WESTINGHOUSE

AIR BRAKES

for

Heavy and Light Traction by Steam or Electricity.

BOILER FEED PUMPS

STEAM HEATING AT ATMOSPHERIC PRESSURE

For Railway Carriages and House Warming.

AIR COMPRESSORS AND VACUUM & WATER PUMPS

For Railway and Industrial Service.

Electro-Pneumatic VALVE GEAR

For Floating Docks.

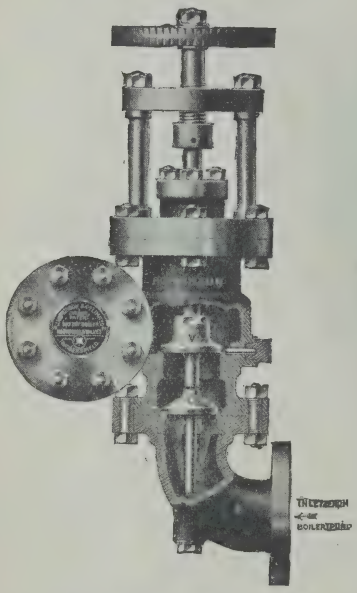
Manufactured by **THE WESTINGHOUSE BRAKE AND SAXBY SIGNAL CO. LTD.**

82 York Road, King's Cross, London, N.1.

See pages 630-635, 1080, 1081 and 2117.

FOR HIGH PRESSURE AND
SUPERHEATED STEAM.

HOPKINSON'S
Valves and
PATENT SAFETY BOILER MOUNTINGS.



HOPKINSON'S
'ACCESSIBLE'
CHECK
FEED
VALVE

Fig. 1300 BRONZE
Fig. 1320 CAST IRON
Fig. 1322 CAST STEEL

All Fitted with
HOPKINSON'S
'PLATNAM' Metal
Valves and Seats.

J. HOPKINSON & CO., LTD.,

Telegrams:
'HOPKINSON
HUDDERSFIELD.'

BRITANNIA WORKS,
HUDDERSFIELD.

Telephone:
1269
HUDDERSFIELD.

LONDON: Imperial House, Kingsway, W.C. 2.

A513/1084.

SECONDHAND & NEW

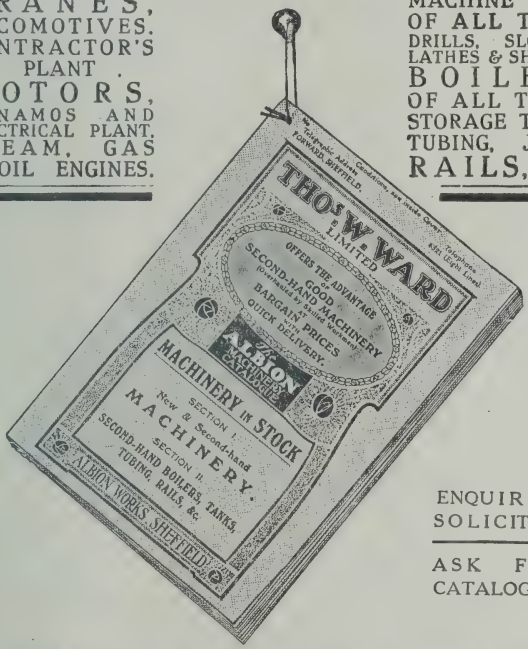
MACHINERY

TO SUIT ALL REQUIREMENTS.

CATALOGUE SENT FREE ON APPLICATION.

CRANES,
LOCOMOTIVES,
CONTRACTOR'S
PLANT
MOTORS,
DYNAMOS AND
ELECTRICAL PLANT,
STEAM, GAS
& OIL ENGINES.

MACHINE TOOLS
OF ALL TYPES.
DRILLS, SLOTTERS,
LATHES & SHAPERS,
BOILERS
OF ALL TYPES.
STORAGE TANKS,
TUBING, JOISTS,
RAILS, Etc.



ENQUIRIES
SOLICITED.

ASK FOR
CATALOGUE.

THOS. W. WARD LIMITED

Albion Works - SHEFFIELD.

Telegrams: 'FORWARD, SHEFFIELD.' Telephones: 4321 (8 lines).

THE

HULBURD

Patent Mechanical Boiler Cleaners

(HULBURD, HORNISH, and others' COMBINED PATENTS),

AS SUPPLIED TO 40 BRITISH RAILWAYS,

PREVENT SCALE.

REMOVE ALL DEPOSIT WITHOUT CHANGE OF WATER.

LOCOMOTIVES running 10,000 to 14,000 miles without Washing Out.

'SERVO' PATENT STEAM REGULATORS.

UPWARDS OF 10,000 IN USE.

Patent 'VALVELESS' Force-Feed Lubricators

Positive in Action. No Valves or Springs to become deranged.
All Mechanism Working in Oil.

HULBURDS' PATENT

'SEAMLESS' SOFT COPPER JOINTINGS

(Cut from the Solid and Machined all over)

FOR ALL PURPOSES

UP TO 2,000 LBS. PER SQ. IN.

HAND SCRAPING OF JOINT FACES UNNECESSARY.

ANY SIZE
ANY SHAPE

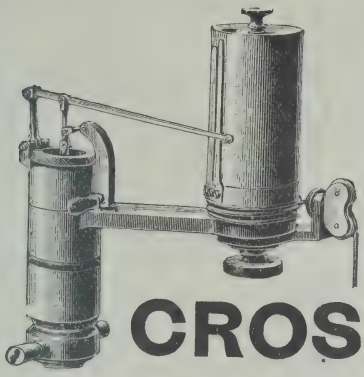
REQUIRE NO RED LEAD OR OTHER FILLINGS.

List of Sections and Prices on application.

THE

HULBURD ENGINEERING COMPANY, LTD.,


St. Benet Chambers, Fenchurch Street, LONDON, E.C. 3.




Standard Inside Spring High Speed Indicator.

USE CROSBY INDICATORS.

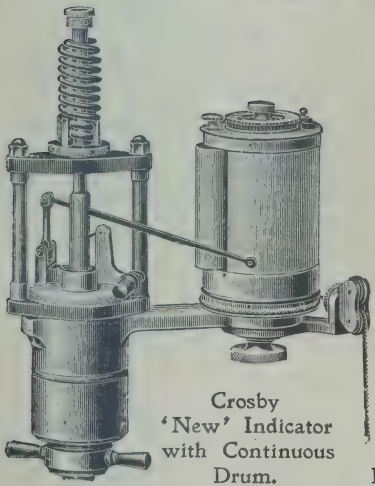Noted for Accuracy and Excellence of Workmanship.



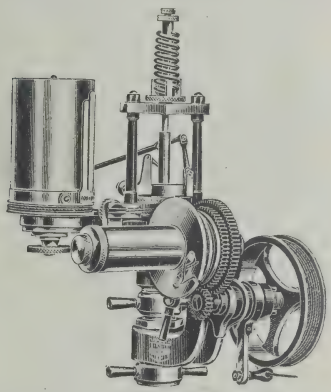Crosby 'New' Indicator with Continuous Drum.



New No. 2 Outside Spring Indicator with Crosby Reducing Wheel.

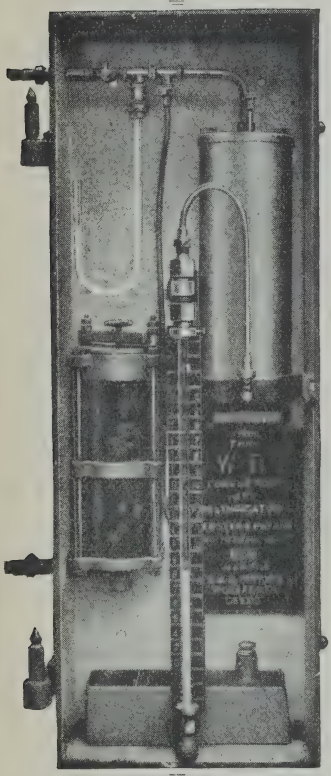
Send for NEW INDICATOR PAMPHLET.

Telegrams: 'CROSBY, LONDON.' Telephone 4343 Museum.

CROSBY VALVE & ENGINEERING CO. Ltd.,

41 & 42 Foley Street, LONDON, W. 1.

Engineering Works, Gas Companies, Generating Stations, etc., throughout the World are installing the . .



W.R. CO_2 INDICATORS

and SAVING 10% to 20%

W.R. CO_2 INDICATORS show the percentage of CO_2 in the flue gases leaving the boiler. They show the immediate effect of adjustments in draught, stoker feed or oil or gas burners, enabling the men to check their own waste.

Simple, strongly built and absolutely dependable. Not expensive to buy or instal. No liquid absorbents or chemicals to spill or give trouble.

An unfailing tell-tale of boiler furnace efficiency every time the engineer or owner enters the boiler house.

Installed on many of the largest Atlantic Liners

Write for our Free Booklet.

W.R. PATENTS, LTD.
139 QUEEN VICTORIA ST.
LONDON, E.C. 4.

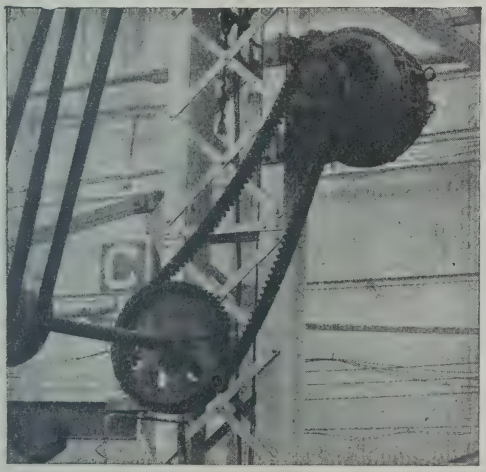
Telephone: CITY 3729.

Telegrams: 'AGGRACED CENT.'

A POWER SAVER
FOR POWER USERS

Achieve the best results by using a

WESTINGHOUSE - MORSE
'ROCKER-JOINT' CHAIN DRIVE




WESTINGHOUSE-MORSE CHAINS are made in **160** different sizes, the pitches ranging from ½ in. to 3 in., and Drives of from ¼ h.p. to 5,000 h.p. are in satisfactory operation throughout the World.

Manufactured by

The WESTINGHOUSE MORSE CHAIN CO. LTD.

31 The Chaineries, LETCHWORTH, HERTS.

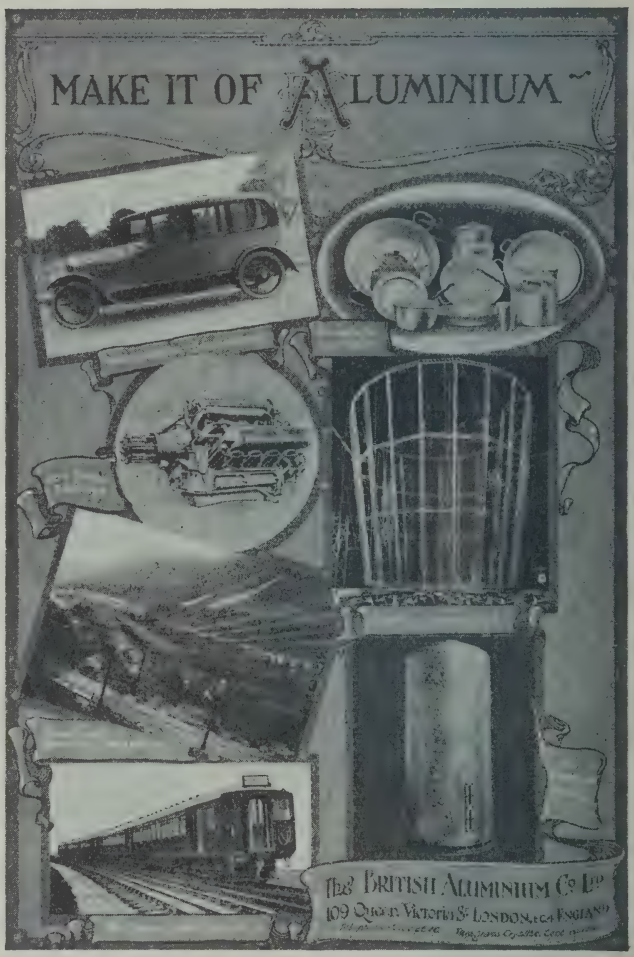(See article pages 868–870.)



Booklet—'USES OF ALUMINIUM'—free on request.

UNITED BRASSFOUNDERS & ENGINEERS LIMITED.

UBEL UBEL


GUNMETAL VALVES, COCKS & GENERAL STEAM FITTINGS



Brass, Gunmetal, Cast and Malleable Iron Steam, Air and Water Fittings. Wheel Valves, Fullway Valves, Plug and Gland Cocks, Pressure, Vacuum and Hydraulic Gauges and Lubricating Devices.

See also Announcement facing page 1500.

CAST IRON STOP & SLUICE VALVES, COCKS & FITTINGS



Cast Iron Stop and Sluice Valves, Plug and Gland Cocks, Soft Cast Iron and Malleable Pipe Fittings, Steam Traps, Pickering Type and other Engine Governors, Safety Valves, High Steam and Low Water Alarms, and Boiler Mountings of all kinds.

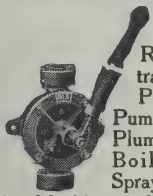
PLUMBERS' BRASSWORK & General SANITARY FITTINGS



Reliable Plumbers' Brasswork and Sanitary Fittings, Screw-down Bib and Stop Cocks, Bath and Lavatory Cocks and Fittings, Flushing Cisterns, Ball Valves, Soil Pipe Connections, Polished Brass, Copper and Plated Towel Rails. Copper Boilers and Cylinders.

Write for Catalogue Sections "H" & "W."

SEMI-ROTARY (Double & Quadruple Acting), &c., PUMPS



Double and Quadruple Acting Semi-Rotary Pumps. Contractors' Pumps, Ships' Pumps, Rotary Suds Pumps for Machine Tools, Plumbers' Force Pumps, Boiler Test Pumps, Spraying and Limewashing Machines and Syringes.

See also Announcement facing page 1138.

INJECTORS, EJECTORS & GENERAL JET APPLIANCES



Makers of Injectors, Ejectors, Water Heaters, &c., of all leading types, Penberthy Type Injectors, Water Raisers, &c. Giffard, Gresham Hall, & Schäffer Type Injectors, &c., &c.

See also Announcement facing page 1505.

EXTRUDED BRASS & BRONZE BARS & 'STELLA' ALLOYS



Makers of all Sections of High Speed Turning and Screwing Extruded Brass Bar. Brass Bolts and Nuts, and General Turned Work from the Bar. 'Stella' Brand Alloys, and 'Stella' Anti-friction Metals.

See also Announcement facing page 2235.

Codes:—A B C 5th Edition; Lieber.
Telephone: 3134 Central (3 lines).
Telegrams: 'Stork,' Manchester.

United Brassfounders and Engineers Limited

FIVE WORKS — HEAD OFFICE EMPRESS FOUNDRY — UBEL — 3,000 WORKERS — CORNBROOK MANCHESTER ENGLAND

Depots also at London, Glasgow, Newcastle, Birmingham, Belfast, Cardiff, and all principal world centres.

The ENGLISH ELECTRIC Company Limited

Electrical, Mechanical, Hydraulic and General Engineers and Contractors.

WORKS:

DICK, KERR WORKS, PRESTON. ORDNANCE WORKS, COVENTRY. PHŒNIX WORKS, BRADFORD. SIEMENS WORKS, STAFFORD. WILLANS WORKS, RUGBY.

BRANCH OFFICES IN THE UNITED KINGDOM.

Birmingham Central House, New Street.
Bradford - Phœnix Works, Thornbury.
Cardiff - 89 St. Mary Street.
Glasgow - Baltic Chambers, 40 Wellington Street.
Liverpool - 329 Tower Buildings Water Street.
Manchester 196 Deansgate.
Newcastle - 64-68 Collingwood Bldngs.
Sheffield - Foster's Buildings, 22 High Street.

BRANCH OFFICES ABROAD.

Argentine - Balcarce 278, Buenos Ayres,
Brazil - 46 Avenida Rio Branco, Rio de Janeiro.
Canada - 319 Transportation Building, Montreal.
India - Clive Buildings, 8 Clive Street, Calcutta.
India - Sidhwa Building, 22 Ballard Pier, Bombay.
India - Smith's Corner, Mount Road, Madras.
Japan - 3 Itchome, Uchisaiwaicho, Kojimachi-Ku, Tokio.
New Zealand Dominion Farmer's Institute, Featherston St., Wellington.
South Africa 85, St. George's Street, Capetown.
Straits Settlements 1, 2, 6, and 9 Winchester House, Singapore.

ASSOCIATES ABROAD.

Australia - The English Electric Company of Australia, Limited, 77 King Street, Sydney, N.S.W.
Belgium - Constructions Electriques de Belgique, 29 Quai de Coronmeuse, Liége.
China - Messrs Jardine, Matheson & Company, Limited, Engineering Department, 8a Yuen-Ming-Yuen Road, Shanghai.
France - Constructions Electriques de France, 19 Rue Louis le Grand, Paris.

HEAD OFFICE:

Queen's House, Kingsway, London, W.C. 2

SEE ALSO OUR ADVERTISEMENTS FACING PAGES 667, 1177, 1558, 1673 & 1908.

SIEMENS BROTHERS & Co.

LIMITED.

Manufacturers of

CABLES & WIRES

FOR TELEGRAPHY, TELEPHONY AND THE TRANSMISSION OF POWER.

ACCESSORIES

FOR CABLE LAYING, JOINTING AND REPAIRING.

OVERHEAD EQUIPMENT

FOR TELEGRAPH, TELEPHONE AND POWER TRANSMISSION LINES.

TELEGRAPHS & TELEPHONES.

RAILWAY, MARINE, MINE & FACTORY SIGNALS.

PRIMARY CELLS,

— FLUID & DRY. —

FIRE ALARMS. **ELECTRIC EXPLODERS.**

TORSIONMETERS (HOPKINSON-THRING).

PYROMETERS. **EBONITE.**

&c., &c.

Contractors for the manufacture, laying and maintenance of

SUBMARINE, OVERHEAD & UNDERGROUND CABLES.

Registered Office:

CAXTON HOUSE, WESTMINSTER, LONDON, S.W. 1.

Telegrams: 'Siemens, Vic. London.' Telephone: Victoria 9390.

General Offices and Works:

WOOLWICH, LONDON, S.E. 18.

Telegrams: 'Siemens, Woolwich.' Telephone: City 6400.

OXYGEN

For the cutting and welding of metals

If you are not yet making use of Oxygen for Cutting, and the Oxy-Acetylene Welding Process, or wish to hear of the latest improvements in both, write to the British Oxygen Company.

THE BRITISH OXYGEN COMPANY, the Founders of the Oxygen Industry, have highly equipped and up-to-date factories in all the important British Industrial Centres, capable of producing over

2,000,000 CUBIC FT. OF OXYGEN DAILY.



The Company are the foremost manufacturers in Great Britain of—

Oxygen Metal-Cutting Apparatus, Oxy-acetylene, Oxy-hydrogen and Oxy-coal Gas Welding Blowpipes, High Pressure Gas Regulators, etc.

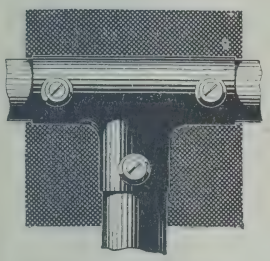
For catalogues and full particulars apply to any of the Company's Works:

Angel Road, Upper Edmonton, N.18. North Wembley, Middlesex. Tunnel Avenue, East Greenwich. Shields Road, Walker Gate, Newcastle. Lower Walsall St., Wolverhampton. Terry Road, Coventry. Great Marlborough St., Manchester Rosehill, Polmadie, Glasgow. East Moors, Cardiff. Savile St., Sheffield. Bromborough Port, Nr. Birkenhead. Lodge Road, Hockley, Birmingham. Knowsley Road, Bootle, Nr. Liverpool. Saville Green, York Road, Leeds.

THE BRITISH OXYGEN CO LTD


BRANCHES IN ALL THE PRINCIPAL INDUSTRIAL CENTRES.

Angel Road, Upper Edmonton, LONDON, N.18.



SIMPLEX

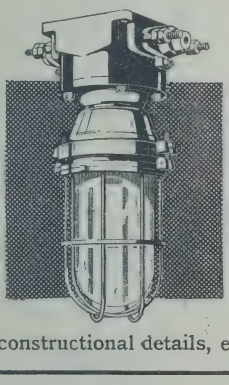THE Simplex 'Terra-grip' System—the new Continuity System of Conduit Wiring—has been introduced to provide a cheaper means of ample and permanent electrical conductivity in light gauge unscrewed conduit installations than is possible with heavier grip systems; and, in fact, is such that an installation erected on this system costs but little more than one on the ordinary socket joint principle. Constructional details and evidence of its remarkable efficiency, together with full range of priced fittings, are contained in List No. 893. Copies on application.



THE Simplex Colliery Lighting System, designed, manufactured, and now being supplied by Simplex Conduits Ltd., comprises a complete range of carefully designed water-tight Junction Boxes fitted with 'easy wiring' interiors and having clamping and bonding glands for use in conjunction with S.W.A. twin V.I.R. cables up to 7/.036.

The excellency of the design and the interchangeability of the component parts (which are reduced to a minimum), has strongly impressed all Colliery Managers, Engineers, and Store-keepers to whom the System has been introduced. For full constructional details, etc., write for Booklet No. 861.

SIMPLEX CONDUITS LTD.

HEAD OFFICE AND WORKS:

GARRISON LANE, BIRMINGHAM.

LONDON: 113–117 Charing Cross Road, W.C.

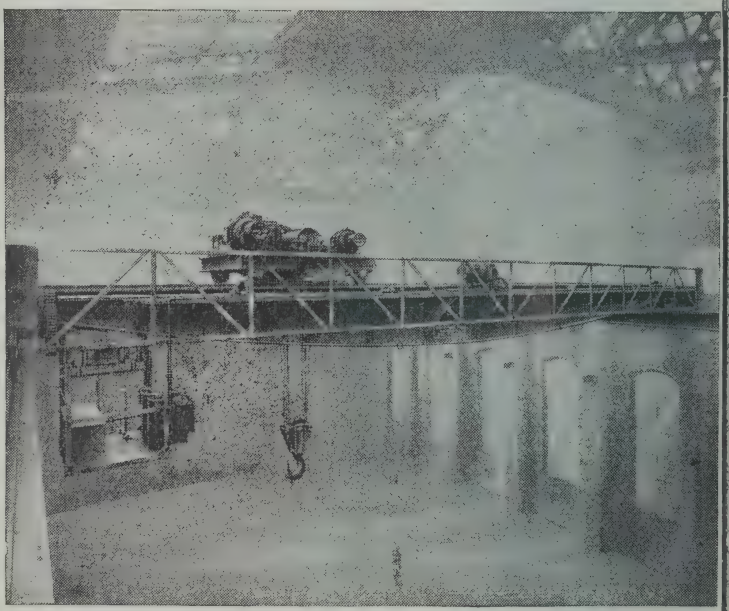
MANCHESTER - 16 Corporation Street
GLASGOW - - 72a Waterloo Street
NEWCASTLE - - 72 St. Mary's Place
BRISTOL - - 10-11 Denmark Street
LIVERPOOL - - 96 Whitechapel
NOTTINGHAM Maypole Yard, Long Row
BIRMINGHAM - - 41 Church Street
LEEDS - - 6 White Horse Street
SWANSEA - - 5 College Street
CARDIFF - - 4 Westgate Street
SHEFFIELD - 281-3 Attercliffe Common
And at IPSWICH and DUNDEE.

HOLT & WILLETTS

. MAKERS OF .

LIFTING MACHINERY,

Lion Works, CRADLEY HEATH




CONTRACTORS TO
H.M. ADMIRALTY, WAR OFFICE, THE INDIA OFFICE, THE CROWN AGENTS FOR THE COLONIES, THE INDIAN STATE RAILWAYS, &c.

Hydraulic, Electric and Hand-power Lifts,
Electric and Hand-power Cranes, all types,
Crab-winches, Hydraulic, and Screw Jacks,
Electric Lifting Blocks, Pulley Blocks, &c.


HERBERT W.
PERIAM, LTD.
Floodgate Street
Works,
BIRMINGHAM.
Telegrams:
"FLOODGATE, BIRMINGHAM."

Turbine Pumps

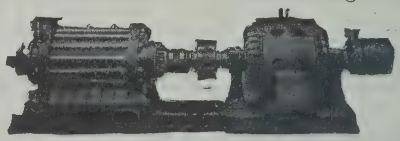For all Duties. We manufacture Colliery and Mining Pumps, Sinking Pumps, Water Supply Pumps, Irrigating and Circulating Pumps, Boiler Feed Pumps and Well Pumps—ANY CAPACITY—ANY HEAD—ANY SPEED. The Design is correct, the best workmanship is employed, and the highest quality material used.



Our engineers are at your service to advise on all pumping matters. Advise us of your requirements.

Mather

PARK WORKS,
MANCHESTER.

Textile Machinery

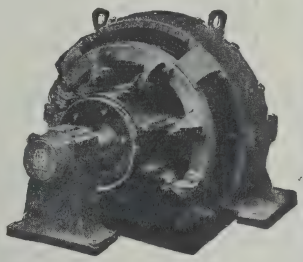
There is no want in connection with the equipment of Bleaching, Printing, Dyeing, and Finishing Works which we cannot fulfil. Write us your requirements. We shall be pleased to submit estimates and specifications.

Some Specialities:

Gas Singeing Machines, Spray Damping Machines, High-Speed Stentering Machines, High-Speed Beetling Machines, Calenders for all purposes, Open Soaping Ranges, Mather Kiers, Mercerising Ranges, Printing Machines, Filter Presses, Dyeing Machines for Cops, Cheeses, Raw Cotton, etc.

Electrical Machinery

We specialise in the manufacture of high-grade electrical machinery, and undertake the complete electrical equipment of Mines, Collieries, Ironworks, Textile Factories, Bleach Print and Dye Works, Paper Mills, Central Stations, &c. &c. Our Electrical Plant, because of its sound engineering, high-class materials and expert workmanship, has gained for us an enviable reputation for sterling quality.



& Platt, LTD.

14 GREAT SMITH STREET,
LONDON, S.W. 1.

"*Simplex*"
Fire Extincteurs

"Simplex" Extincteurs are unequalled as first-aid fire appliances. They are strongly constructed, easy to handle and operate, and most efficient in fire extinguishing qualities. The chemical used does not deteriorate—it is as efficient after ten years as on the day the extincteur was first charged.

Supplied to the British Government in huge quantities.



GOOD-BYE BROKEN TOOLS!

Chisels, Sates, Pneumatic and Shock Tools—how many do YOU break every month?

"PAX NON-BREAK" STEEL

(Oil-Hardening) is our newest product and we're proud of it. Greater cutting efficiency, longer life, effective on all materials —even with a steam hammer drive. *YOU CAN'T BREAK IT!*

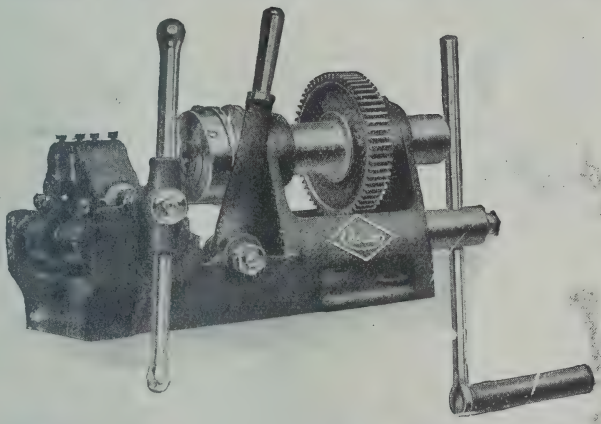
Send for Pamphlet M.E. 9 and a sample.

SANDERSON BROTHERS & NEWBOULD LTD.,

SHEFFIELD.

THOMAS CHATWIN


LIMITED.————BIRMINGHAM.



NEW TYPE BENCH SCREWING MACHINE **1.C.**


Send for Particulars. Range $\frac{1}{4}$-1" Bolt or Gas.

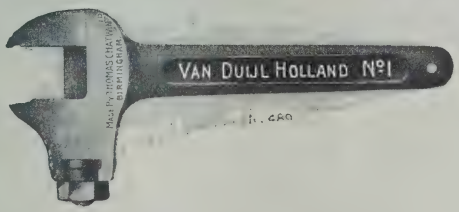SHIFTING SPANNER.



Size	No. 0	No. 1	No. 2	No. 3	No. 4	No. 5	No. 6
Spans -	$\frac{7}{8}$-in.	1-in.	$1\frac{3}{8}$-in.	$1\frac{5}{8}$-in.	1 13/16-in.	$2\frac{3}{8}$-in.	$\frac{1}{8}$n.

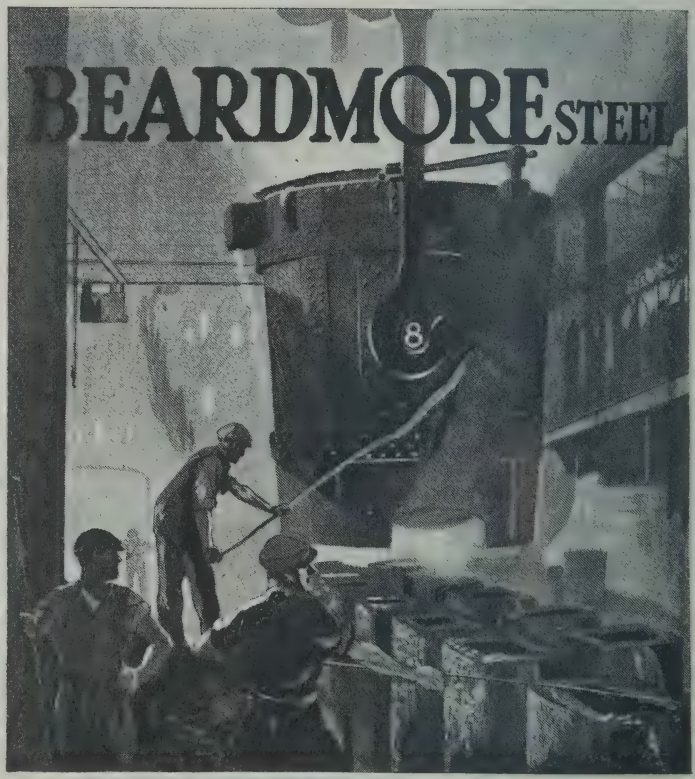
ALL PARTS:—FORGED STEEL, INTERCHANGEABLE, HARDENED.



STEEL SHEETS, SHIP AND BOILER PLATES AND SECTIONS

These essential products are produced in large quantities at the Steel Works of Parkhead and of Mossend

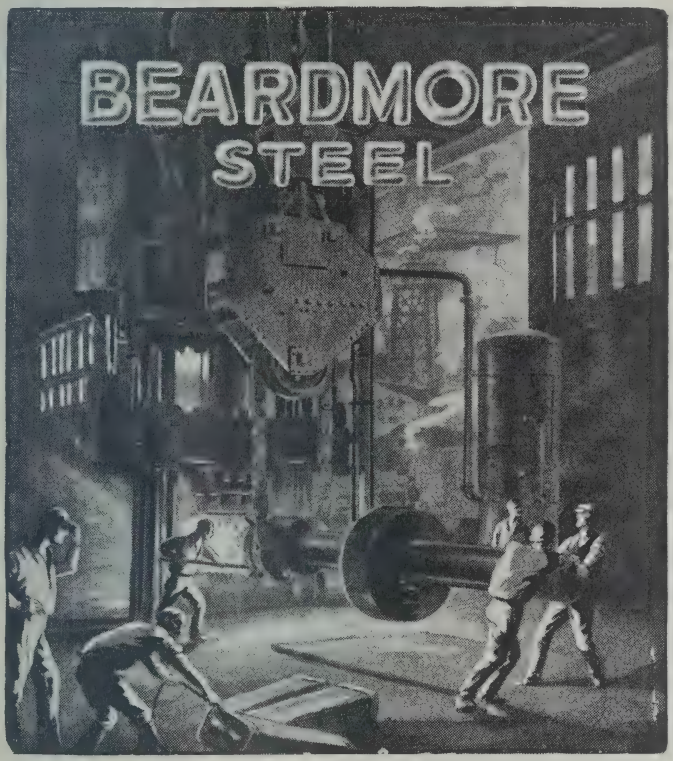
WILLIAM
BEARDMORE
AND COMPANY LIMITED
PARKHEAD LONDON OFFICE 58 VICTORIA ST SW1. GLASGOW



The above fairly represents the class of work turned out at Parkhead Forge, Glasgow. Extensive plant to overtake large quantity requirements

STEEL FORGINGS
OF EVERY DESCRIPTION

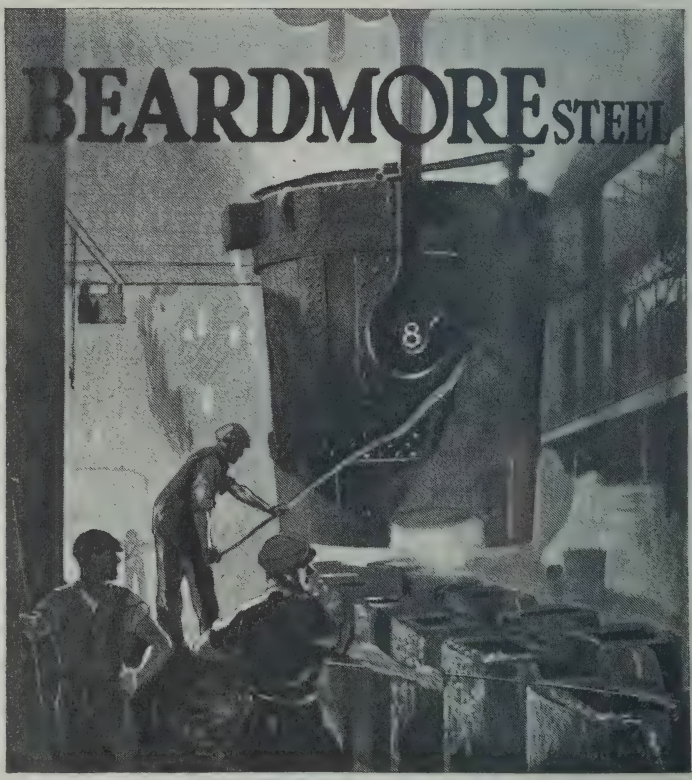
WILLIAM
BEARDMORE
AND COMPANY LIMITED
PARKHEAD LONDON OFFICE 36 VICTORIA ST. SW1. GLASGOW



STEEL SHEETS, SHIP AND BOILER PLATES AND SECTIONS

These essential products are produced in large quantities at the Steel Works of Parkhead and of Mossend

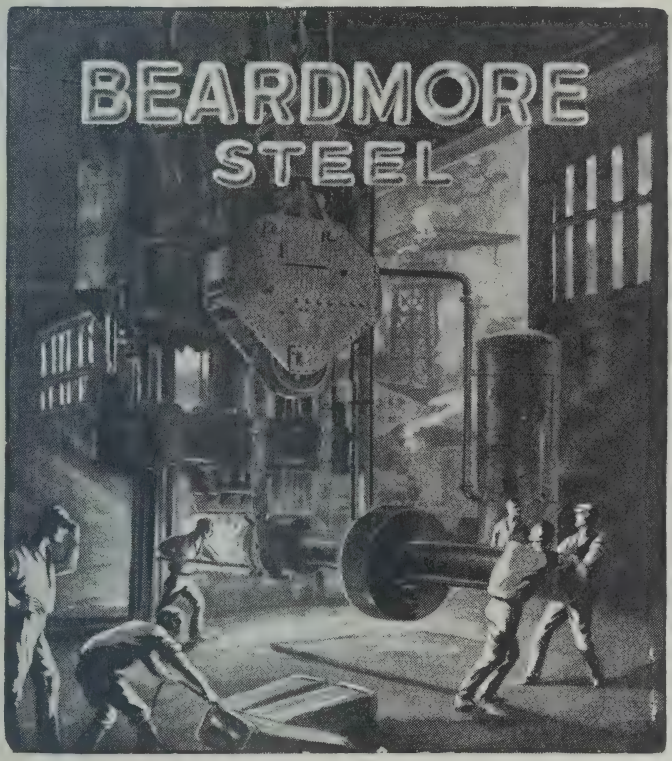WILLIAM
BEARDMORE
AND COMPANY LIMITED
PARKHEAD LONDON OFFICE: 38 VICTORIA ST. S.W.1. GLASGOW



The above fairly represents the class of work turned out at Parkhead Forge, Glasgow. Extensive plant to overtake large quantity requirements

STEEL FORGINGS
OF EVERY DESCRIPTION

WILLIAM
BEARDMORE
AND COMPANY LIMITED
PARKHEAD LONDON OFFICE 36 VICTORIA ST. SW1. GLASGOW

EXTRUDED BRASS

SHAPES & SECTIONS SCREWING & FORGING RODS.

YELLOW METAL, RED METAL, NAVAL BRASS, BRONZES.

Special alloys to Engineers' Specifications.

Tubes.

BRASS, COPPER, ETC. SEAMLESS & BRAZED.
SHAPED and ORNAMENTAL.

Metals.

BRASS, COPPER, BRONZE, NICKEL, SHEETS, STRIPS, ETC.

JAMES BOOTH & Co. (1915) Ltd.

(VICKERS LIMITED, Proprietors),

BIRMINGHAM.

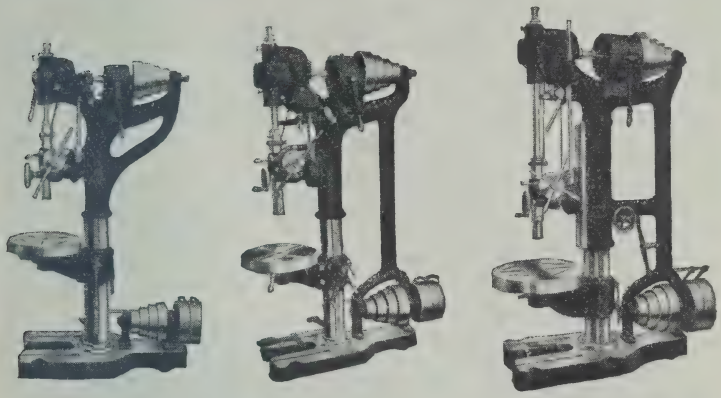
On Admiralty, War Office, Colonial and Foreign Government Lists.

Telegrams: 'BOOTH, BIRMINGHAM.' Telephone: EAST 985. Private Exchange.

Head Office:

ARGYLE STREET WORKS, BIRMINGHAM.

Specialities : Drilling & Grinding Machines & 'J. & S.' Small Tools.



'J. & S.' MACHINES

are absolutely superior to any other Drilling Machines on the market. They are more massive, have greater driving power, and the gears are heavier and stronger all through. Power for Power, our 21 in. machine compares favourably with other makers' 25in. and 28in., and our 27in. and 30 in. with any other 36in.

Catalogues on application.

Jones & Shipman Ltd

Manufacturers of Modern Machine Tools.

LEICESTER, ENGLAND.

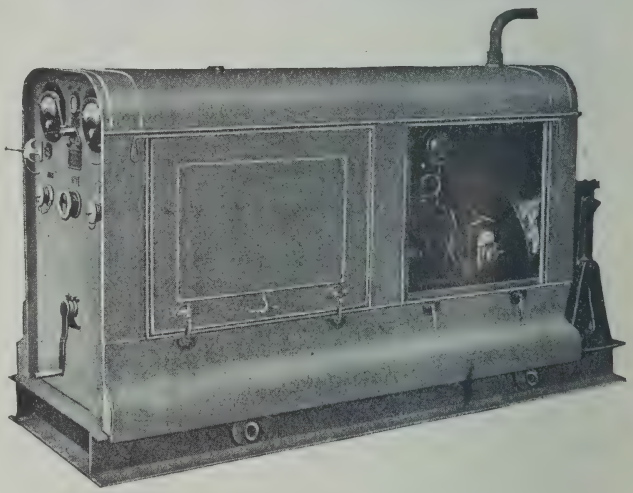
AND AT
163 KING STREET EAST,
TORONTO.

AND
10 SUMMER ROW,
BIRMINGHAM.

A.W.P.
ELECTRIC ARC WELDING

APPROVED BY

Lloyd's Register of Shipping, the British Corporation for the Survey and Registry of Shipping, and Bureau Veritas.



COMPLETE PLANTS SUPPLIED

A.W.P. Electrodes give equally good results on either Direct or Alternating Current. Made in 14 Types, to suit all classes of iron and steel, including special Electrodes for cast iron.

Write for Catalogue and Price List

ALLOY WELDING PROCESSES, Ltd.

14-20 CHURCH STREET, ISLINGTON, LONDON, N. 1.

'Phone: NORTH 2050. Telegrams: ALWEPROL, NORDO, LONDON.

Registered Offices: 14-16 *Cockspur Street, London, S.W.* 1.

OXY-ACETYLENE WELDING

CO. LTD.,

21A St. Vincent Crescent,
Finnieston, GLASGOW.

Telegrams: 'Brazing.' Telephones: Central 4637-38.

❖

Specialists in Welding, Brazing, and Metal Cutting.

CASTINGS, FORGINGS, etc., in any material, when repaired by our processes, indistinguishable from new.

ALL WORK DONE UNDER GUARANTEE.

❖

REPAIRS, up to 5 tons in weight, done on premises by Oxy-Acetylene or Electric Processes, or Brazing.

Boiler Repairs, Welded Steel Pipe Lines of any capacity undertaken on site.

Welded Steel Moulding Boxes supplied to customers' own specification and requirements.

Power Transmission *by* High Pressure Oil

(HELE-SHAW SYSTEM)

High-speed variable capacity Pumps with positive action for Power purposes. Oil Pressures up to 2500 lbs. per square in.

Variable Speed Transmission Gears for any power with an infinitely variable range of speed in either direction. High efficiency with easy control.

HYDRAULIC GEARS LTD.

BEAVOR LANE,
HAMMERSMITH, LONDON, W. 6.

Telephone: Hammersmith 1933.

Telegrams: Hygearlim, London.

FOR

HYDRAULIC MACHINERY

SEND TO

HOLLINGS & GUEST,

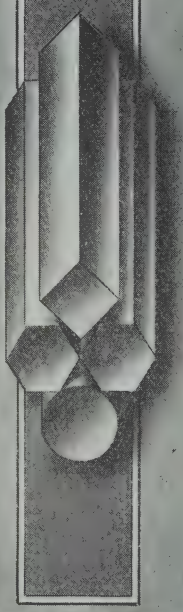
LIMITED,

THIMBLE MILL LANE,

BIRMINGHAM,

ENGLAND.

HALESOWEN STEEL Co Limited.



BRIGHT DRAWN STEELS
FOR ALL PURPOSES.

CARBON, ALLOY AND HEAT TREATED STEELS TO CONFORM TO ANY SPECIFICATION, PHYSICAL OR ANALYTICAL.

FREE CUTTING AUTOMATIC QUALITY OUR SPECIALITY.

WE GUARANTEE OUR OUTPUT TO BE THE LARGEST IN GREAT BRITAIN.

HALESOWEN,

BIRMINGHAM, ENGLAND.

SWAN, HUNTER, & WIGHAM RICHARDSON,

LIMITED.

WALLSEND-ON-TYNE.

Also at

Neptune Works, Walker, Newcastle-on-Tyne,

and

Southwick, near Sunderland.

LONDON OFFICE: 21 Russell Square, W.C.1.

CONTRACTORS TO
THE BRITISH ADMIRALTY,
FOREIGN & COLONIAL GOVERNMENTS

Builders and Repairers

of all classes of

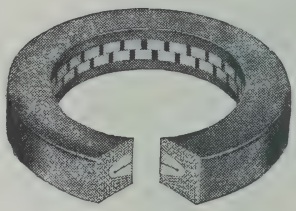
STEAMSHIPS, MARINE ENGINES,
BOILERS, FLOATING DOCKS, &c.

NEPTUNE MARINE OIL-ENGINES.

See page 2046.

Licensees for Robinson's Marine Superheaters.

BELDAM'S PILOT



PACKINGS

and

JOINTING

FOR STEAM, WATER, AND AMMONIA.

Sole Patentees and Manufacturers— ESTD. 1876.

THE BELDAM PACKING & RUBBER Co. Ltd.,

29 Gracechurch Street, London, E.C. 3.

Works: BRENTFORD, MIDDLESEX.

Telegrams: 'VEEPILOT, LED.' Telephone Nos.: AVENUE 5204 & 1982. Codes: A B C, 5th EDITION. A B C, 6th ED. (5 letters) & BENTLEYS.

MICA

CANADIAN and INDIAN MICA—CUT, SLAB and SPLITTINGS.
Minimum Stock, 200,000 lbs.

RESISTIT "BAKELITE" TUBES, SHEETS, and BOBBINS for OIL SWITCH GEAR for TRANSFORMERS, etc.

DYNAMO TAPES, HOLLOW BRAID, EMPIRE CLOTH and TAPES.

PEERLESS LEATHEROID INSULATION.

VULCANISED FIBRE, SHEET, TUBE and ROD.

EBONITE, SHEET, TUBE and ROD.

PRESSPAHN and INSULATING PAPERS, FELTS, BAIZE.

ELECTRICAL, PURE RUBBER and ADHESIVE TAPES.

ASBESTOS WOVEN TAPES for FIELD COILS.

ASBESTOS RIBBONS, PAPER and SHEETS.

PURE COTTON DUCKS, DRILLS and CAMBRICS.

Contractors to War Office and Admiralties, British, American, Russian, Italian and French Governments

ESTABLISHED 1868

ATTWATER & SONS

PRESTON, ENGLAND

Dustless (Concrete) Floors that never wear out

If you are building a new Factory take the precaution of having the floors laid with a mixture of cement and 'Ferrolithic.' This adds but little to the cost and is more than justified by reason of the fact that subsequent repairs are eliminated. Floors laid with

Ferrolithic

CONCRETE HARDENER FOR FLOORS

never wear into ruts like ordinary concrete floors. They are as hard as iron, and are wear, oil, and water proof; the most durable floors known and quite dustless —an important factor where machinery is installed. A 'Ferrolithic' Floor will last the life of the building.

Complete specifications are contained in our booklet. A postcard will bring it to your desk by return.

BUILDING PRODUCTS Limited

45 Columbia House, 44-46 King's Road
Sloane Square, London, S.W. 3

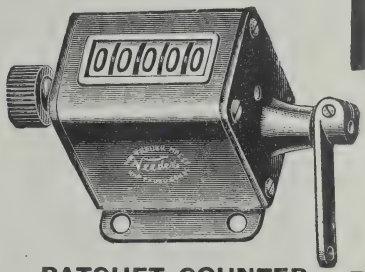
Specialists in Auxiliaries for Concrete Structures

Telegrams: 'Bylprodia, Sloane, London.' Telephone: Victoria 2590

Veeder COUNTERS

for every required purpose


SMALL — COMPACT
DURABLE — STRONG




RATCHET COUNTER
with reset action, enabling instrument to be reset to ZERO at any time



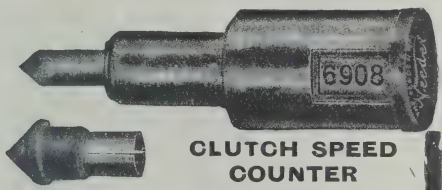REVOLUTION COUNTER
without reset



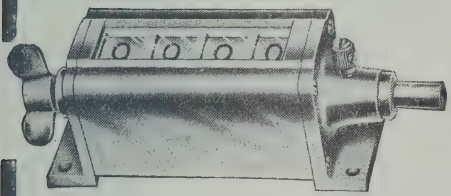CLUTCH SPEED COUNTER
for finding revs. per minute made by a shaft or any other revolving part



'SETBACK' and 'LOCKED' COUNTERS
for Presses, Looms, Stamping Machines, or any Machine on which an accurate record of parts made is required

LARGE SETBACK ROTARY RATCHET COUNTER

MARKT & Co. (London) Ltd., 98-100 Clerkenwell Rd., LONDON, E.C. 1.

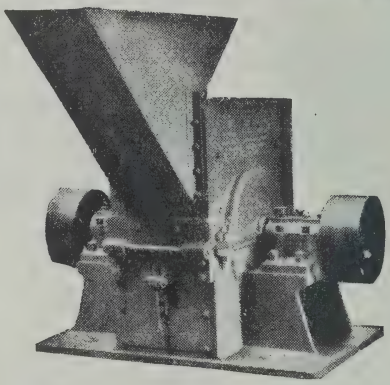
—THE PATENT—

'LIGHTNING'

CRUSHER

—AND—

PULVERIZER



Telephone No.:
City 4656.

Telegrams & Cables:
'Agenciador, London.'

Code used:
Bentley's.

Unequalled for reducing Hard Materials such as Shingle, Gravel, Flint, Silica, etc. ; and for output.

FOR CONCRETE CONSTRUCTION, ROAD MAKING AND MAINTENANCE WORK.

Supplied to the Admiralty, War Office, Road Board, County and Borough Councils, Building and Road Contractors.

The Patent Lightning Crusher Co., Ltd.,

14a Rosebery Avenue . . . LONDON, E.C. 1

Air Compressors
and
Pneumatic Tools

The Ingersoll-Rand Company are the largest builders of Air Compressors, Pneumatic Tools and other air-operated appliances in the World, and as a result of over half-a-century's experience in their manufacture retain the foremost position as suppliers of the most complete and up-to-date line of equipment of this class. We can supply Air Compressors to suit every requirement, and efficient and reliable Pneumatic Tools for all classes of work.

RIVETERS
CHIPPERS
BOLT DRIVERS
DRILLS
HOISTS

CORE BREAKERS
SAND RAMMERS
CAULKING MACHINES
AND EVERY
PNEUMATIC TOOL
OF PROVED VALUE

Write to us for full particulars

INGERSOLL-RAND COMPANY LTD.

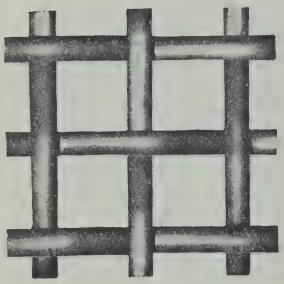
165 QUEEN VICTORIA ST., LONDON, E.C. 4.

GLASGOW: 20 Renfrew Street. **MANCHESTER:** 196 Deansgate.
Offices: The World Over.

F. W. POTTER and CO.

Manufacturers,
PHIPP STREET
LONDON E.C. 2

Woven Wire




WIRE CLOTH .
WIRE GAUZE or
WIRE SIEVING

Made in all Metals

ACCURATELY WOVEN TRUE TO GAUGE

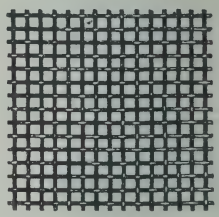Made in all Meshes and Strengths




Also Wireworkers, Engineers, Ironworkers

Makers of

Fans, Gear Wheels, Machinery Guards, Sheet Iron Pipes

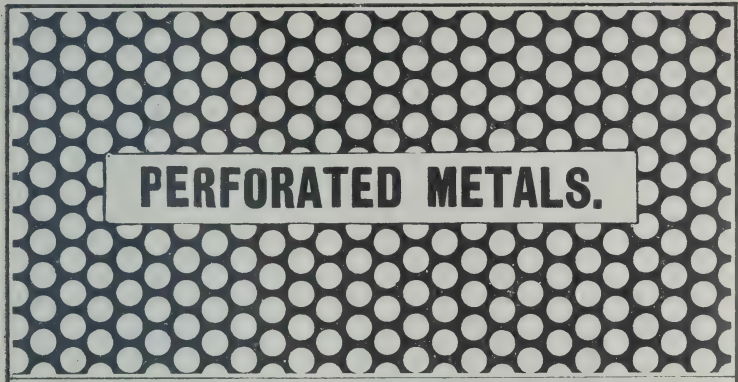Telegrams : 'Wirework, Finsquare, London.' Telephone : London Wall 5970-5971.



G. A. HARVEY & CO.

(LONDON) LTD.

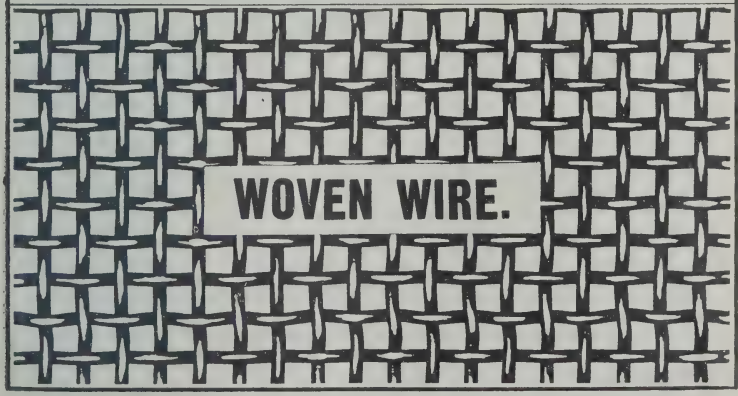
GREENWICH METAL WORKS,

LONDON, S.E. 7, Eng.

City Office : SUFFOLK HOUSE, LAURENCE POUNTNEY HILL, E.C. 4.

TELEGRAMS : 'CHEAPER-CHAR, LONDON.'
TELEPHONES : CITY 8630, GREENWICH 20 (Pte. Exchange to all Depts.)

ENGINEERS, PERFORATORS, TANK MAKERS, SHEET IRON WORKERS, GALVANIZERS, ZINC AND COPPER WORKERS, WIRE WORKERS AND WEAVERS, STEEL OFFICE AND FACTORY EQUIPMENT.



1837. *1922.*



HENLEY CABLES

Insulated with Rubber, Paper, Bitumen, Gutta Percha, Varnished Cambric, etc.

Makers of Electric Cable, since the commencement of electrical transmission, we have advanced and developed with the Electrical Industry. Henley Cables have always been in the front rank for quality, and have always borne an unequalled reputation.

W. T. Henley's Telegraph Works Co. Ltd.
Blomfield Street, London, E.C. 2

129

Revised and Published Annually

Price 30s. 0d. net in Great Britain

THE ENGINEER'S YEAR-BOOK

OF

FORMULÆ, RULES, TABLES, DATA, & MEMORANDA

FOR 1922

A COMPENDIUM OF THE MODERN PRACTICE OF

CIVIL, MECHANICAL, ELECTRICAL, MARINE, GAS, AERO, MINE, & METALLURGICAL ENGINEERING

COMPILED AND EDITED BY

H. R. KEMPE, M.Inst.C.E.,

M.I.Mech.E., M.I.E.E.,

CONSULTING ENGINEER; FORMERLY PRINCIPAL STAFF ENGINEER AND ELECTRICIAN TO THE BRITISH POST OFFICE

AND

W. HANNEFORD SMITH

M.Inst.Met.

WITH THE COLLABORATION OF A CORPS OF SPECIALISTS

(29TH YEAR OF PUBLICATION)

With 2250 illustrations specially engraved for the work

Published for the Proprietors (Smith, Kempe, & Smith) by

CROSBY LOCKWOOD AND SON

7 STATIONERS' HALL COURT, LUDGATE HILL, LONDON, E.C. 4

and sold by all Booksellers in the United Kingdom, the Overseas Dominions, India, and abroad

1922

THE PAXMAN Positive Valve Gear engines are suitable for boiler pressures up to 200 lb. per square inch, with a total steam temperature up to 600 degrees Fahr.

The economy of the steam consumption of these engines is remarkable, it being possible to obtain one-horse power for every 9½ to 10½ lb. of superheated steam.

With an installation comprising our 'Economic' type of boiler and Positive Valve Gear engine combined, we are able to guarantee consumptions of 1·1 to 1·2 lb. of coal per I.H.P. per hour under suitable conditions.

Paxman

Steam Engines and Boilers of all types.
Superheaters, Gas Engines & Producers.

DAVEY, PAXMAN & CO. Ltd.,
(Branch of Agricultural & General Engineers, Ltd.),
Colchester, and Central House, Kingsway, W.C. 2.

SEP 1 9'22 Anell

PREFACE TO FIRST EDITION (1894).

The importance and value of such a work as The Engineer's Year-Book need hardly be insisted on. Perhaps there is no professional man who *needs* a Year-Book more than the Engineer of the present day, seeing that his duties are so multifarious and the requirements of his position so constantly varying. Yet, while other professions have their Year-Books, until now none has been provided for the Engineer; it is confidently believed that the present volume will meet a want that is constantly experienced by Practical Men in every branch of Engineering.

The aim of the compiler has been to produce a work which, being carefully brought up to date, shall take its place as the standard Book of Reference in the profession, and include only such Modern Formulæ, Rules, Tables, and Data as are required by the Engineer from day to day in the practical work of his calling, including Civil, Mechanical, Marine, Electrical, and Mine Engineering. The work is accordingly divided into Thirty-one Sections, each Section forming practically a complete treatise on its particular subject, and the whole embracing the present practice of Engineering.

The great advances made in Science, as applied to Engineering, during the last quarter of a century have fixed immutably many new principles, laws, and practical data. These, as well as the like particulars of older practice, have been carefully compiled from the best authorities, and find their place in The Engineer's Year-Book, whilst a large amount of original matter, presented in a handy and concise form, is also included in the volume.

In the work of compilation, most valuable assistance has been rendered by numerous practising Engineers, including those of the principal English Railway Companies, and of the Queensland Government, as well as by

502750

Girder Manufacturers, Boiler and Engine Makers, and many other persons of experience. Every available work has been searched through and consulted for information, but in making use of particulars so obtained the compiler has been at pains to trace the matter to its original source, so as to determine its authoritative value, and in every case where it appeared necessary he has redrawn existing figures and verified current formulæ, so that clearness and accuracy might be ensured.

Obviously a work of this nature, to fulfil its purpose of being kept up to date, will require periodical revision, and it is accordingly intended to REISSUE IT FROM YEAR TO YEAR. The facilities thus afforded for thorough revision throughout the volume will make it practicable to *insert every year new matter of importance in any Section*, and render the book at all times a safe and reliable DAILY REFERENCE BOOK for the PRACTICAL ENGINEER.

Kindly criticism and help towards making the work as complete and as useful as possible are earnestly invited, and any suggestions, addressed to the care of the Publishers, with this object, will be gladly received, and, as far as possible, acted upon.

I have to thank Mr. H. HARTNELL, Technical Officer of the Engineer-in-Chief's Office, for great assistance rendered in the work of compilation.

Finally, I think more than a word of thanks is due to the printers, Messrs. SPOTTISWOODE & Co., for the able manner in which they have executed the difficult task of concisely and clearly arranging the letter-press.

H. R. KEMPE.

ENGINEER-IN-CHIEF'S OFFICE,
GENERAL POST OFFICE, LONDON:
January 1894.

PREFACE TO 1922 EDITION.

In the preparation of the present issue of The Engineer's Year-Book, the numerous Associate-Editors and Contributors (who have been selected for their expert knowledge of the particular branches with which they deal) have subjected their respective sections to a thorough revision, making important alterations and additions in order that Modern Engineering practice may be the standard throughout the volume. Not only have new sections been introduced and old matter rearranged, but much information which advances in practice have rendered obsolete, has been excised, so that the actual number of new pages is greatly in excess of that indicated by the numerical pagination total, which has now reached nearly 2650, an increase of over 2000 upon that of the first issue.

Special prominence should be given to the fact that the important section relating to Steam Power has been entirely recast and largely rewritten by Dr. T. B. Morley, M.I.Mech.E.; whilst among other sections which have also been rewritten or largely added to for the present issue, are the following, the authorities responsible being quoted in brackets :—

'Electrical Engineering'; 'Electric Traction' (A. H. Allen, M.I.E.E.).

'Acetylene' (Charles Bingham).

'Internal Combustion Engines' (A. Vincent Clarke, A.M.Inst.C.E., M.I.Mech.E., A.M.I.E.E.).

'Harbours,' 'Docks,' and 'Navigable Waterways' (Dr. Brysson Cunningham, F.R.S.E., M.Inst.C.E.).

'Steam Turbines' (H. L. Guy, A.M.Inst.C.E.).

'Pulverised Coal' (L. C. Harvey).

'Naval Architecture' and 'Marine Engineering' (Professor P. A. Hillhouse, D.Sc., M.I.N.A., and James Thomson, M.I.N.A.).

'Metering of Water, Air, Gas, and Steam' (J. L. Hodgson, B.Sc., A.M.I.C.E.).

'Locomotives' and 'Railway Rolling Stock' (H. Holcroft, M.I.Loco.E.).

'Cranes and Lifting Appliances' (J. H. Huntley, M.I.E.S.).

'Aircraft' (Major D. H. KENNEDY, F.R.Aë.S., R.A.F.).
'Coal and Metalliferous Mining' and 'Mine Valuation' (Professor HENRY LOUIS, D.Sc., M.Inst.C.E.).
'Gas and Gasworks Practice' (ALWYNE MEADE, A.M.Inst.C.E.).
'Fuels: Solid, Liquid, and Gaseous' (HAROLD MOORE, M.Sc., F.C.S.).
'Cost Data' (JOHN T. REA).
'Oxy-Acetylene and Electric Welding and Cutting' (D. RICHARDSON, Wh.Ex., A.M.I.M.E.).
'Mortars,' 'Concretes,' 'Cements' and 'Plasters' (ALFRED B. SEARLE).
'Machine Tools,' 'Workshop Practice,' 'Power Transmission,' and 'Bearings' (DEMPSTER SMITH, M.B.E., M.Sc., M.I.Mech.E.).

The official permission given by the several Institutions of Civil, Mechanical, and Electrical Engineers, and of Naval Architects, for extracts to be published from their proceedings (a privilege which, it is needless to say, is of exceptional value) has been fully taken advantage of.

As the object of the work is to combine scientific with commercial information, the introduction of matter of an advertising character (but which has been inserted in harmony with the general scheme of the book) has been inevitable. Great care, however, has been exercised to ensure that such information shall be of the highest class, and the sole responsibility for its insertion rests on the Editor-in-Chief.

Invaluable assistance in the revision and preparation of the work has been rendered by Mr. FRANCIS C. SMITH, also by Mr. W. HANNEFORD SMITH, who for the past fourteen years has most ably discharged the duties of Assistant Editor-in-Chief. In this respect it is not too much to claim that the engineering profession owes to Messrs. SMITH a debt of gratitude, for it is largely due to their initiative and zealous help that the work has attained to its present standard of excellence and comprehensiveness.

Thanks are also due to numerous other contributors for useful matter supplied, and for practical suggestions.

Friendly criticism calculated to increase the utility of the work will be welcomed at all times and as far as possible acted upon.

H. R. KEMPE.

4 LUDGATE HILL, LONDON, E.C. 4.
March 1922.

LIST OF ASSOCIATE-EDITORS AND CONTRIBUTORS.

The names of numerous other authorities who have furnished valuable information, or assisted in the revision of this work, are acknowledged in the text.

Contributor.	*Subject.*
A. H. Allen, M.I.E.E.	Electrical Engineering; Electric Traction; the Metric System.
H. N. Allott, M.Inst.C.E.	Arrangement and Construction of Engineering Workshops.
The Astronomer Royal	Astronomy.
S. W. Attwell, National Physical Laboratory.	Measures.
W. Valentine Ball, M.A., O.B.E., Barrister-at-Law.	Law affecting Engineers.
Charles Bingham	Acetylene.
W. Alden Brown, F.G.S., A.M.I.Mech.E.	Portland Cement.
D. Brownlie, B.Sc., A.M.Inst.C.E.	Steam Boiler Plants.
G. A. Burls, M.Inst.C.E.	Internal Combustion Engines, Catenary Curve, Hyperbolic Functions.
Edward Butler, M.I.Mech.E.	Wind and Wind Mills.
A. P. Chalkley, B.Sc., A.M.Inst.C.E.	Marine Oil Engines.
A. Vincent Clarke, A.M.Inst.C.E., M.I.Mech.E., A.M.I.E.E.	Internal Combustion Engines, Power Gas, Motor Cars, and data for other sections.
Brysson Cunningham, D.Sc., F.R.S.E., M.Inst.C.E.	Harbour and Dock Engineering; Navigable Waterways.
Alexander Drew, M.I.Mech.E., M.C.I.	Structural Engineering and Reinforced Concrete Construction.
Owen W. Ellis, M.Sc. (Birm.), A.M.I.C.E.	Metallurgy and Metallurgical Practice.
Prof. John Goodman, M.Inst.C.E., M.I.Mech.E.	Lubrication, Ball and Roller Bearings; Conveyors; and data for various other sections.
James Gordon, A.M.I.Mech.E.	Hydraulics.
H. L. Guy, A.M.Inst.C.E., A.M.I.Mech.E.	Steam Turbines.
R. T. Hancock, A.Inst.M.M.	Mining; Surveying; Levelling.
P. W. Harley, M.I.Mech.E.	Data for various sections.
H. Hartnell, A.M.I.E.E.	Tables and data for various sections.
L. C. Harvey	Pulverised Coal.
W. H. Hatfield, D.Met.	Strength of Steel.
Prof. Percy A. Hillhouse, D.Sc., M.I.N.A.	Naval Architecture and Marine Engineering.
Prof. W. R. Hodgkinson, F.R.S.E., C.B.E.	Explosives.
J. L. Hodgson, B.Sc., A.M.Inst.C.E.	Metering of Water, Air, Gas, and Steam; Dynamometers.
H. Holcroft, M.Inst.Loco.E.	Locomotives; Railway Rolling Stock.

LIST OF ASSOCIATE-EDITORS AND CONTRIBUTORS—*cont.*

Contributor.	*Subject.*
J. H. Horobin, Engineer, G.P.O., London.	Steam and Power Plants, Hydraulics, and data for other sections.
Alexander L. Howard	Timber.
John H. Huntley, M.I.E.S.	Cranes and Lifting Appliances.
Major D. H. Kennedy, R.A.F.	Aircraft.
Colin Livingston	Blast-furnace Practice.
Professor Henry Louis, M.A., D.Sc., M.Inst.C.E., F.G.S.	Mining; Mine Valuation.
J. F. Maryon, M.I.Mech.E.	Hydraulics.
Alwyne Meade, A.M.Inst.C.E.	Gas and Gasworks Practice.
R. Fairfax Middleton, A.M.Inst.C.E.	Waterworks Engineering.
H. A. Miles	Engineering Drawings; Photo Copying.
Harold Moore, M.Sc., F.C.S.	Fuels: Solid, Liquid, and Gaseous.
T. B. Morley, D.Sc., M.I.Mech.E.	Steam Power Engineering.
E. W. L. Nicol, M.I.M.E.	Coke as a Boiler Fuel.
W. C. Popplewell, M.Sc., A.M.Inst.C.E.	Valve Gears.
J. Roger Preston, Member Inst. of Heating Engineers	Heating by Hot Water Steam, Gas, etc.
J. T. Rea	Cost data relating to Engineering Works.
C. G. Redfern, A.M.I.Mech.E. Chartered Patent Agent.	Patents, Trade Marks, and Designs.
D. Richardson, Wh. Ex., A.M.I.M.E., Capt. R.A.F.	Oxy-Acetylene and Electric Welding and Cutting.
H. F. Rutter, M.Inst.C.E.	Water Filtration.
Reginald Ryves, A.M.Inst.C.E.	Roads and Pavements, Irrigation, Rainfall, Bridges, Struts, Columns, Piles, etc.
A. Hugh Seabrook, M.I.Mech.E., M.I.E.E.	Charts of Amortisation and Thermal Efficiencies.
Alfred B. Searle	Mortars, Concretes, Cements and Plasters; Clays and Allied Products used by Engineers; Grinding, Abrasives, and Polishing Appliances.
C. Seymour, District Engineer, Midland Great Western Railway of Ireland.	Railways; Piles, Pile-driving, Dams, Caissons, and data for other sections.
E. J. Silcock, M.Inst.C.E., F.G.S., F.S.I.	Sewerage, Sewage Disposal, and House Drainage.
Fred Simpson, A.M.Inst.C.E.	Refrigeration, Ice Making, and Cold Storage
Dempster Smith, M.B.E., M.Sc., M.I.Mech.E.	Machine Tools, Workshop Practice, Power Transmission, Bearings.
Herbert Stone	Timber.
R. A. Sturgeon, A.M.Inst.C.E.	Air Compressors; Helical Springs.
Arthur Surveyer, M.Inst.C.E., M.Can.Soc.C.E.	Water Power Development.
James Thomson, M.I.N.A.	Marine Engineering.
Robert S. Vesey, Memb. Soc. of Chemical Industry	Timber Creosoting.
G. Stanley Walpole, D.Sc., F.I.C.	Timber Seasoning.
H. Raynar Wilson	Railway Signals.

ENGINEERING STANDARDS.

By special permission of the British Engineering Standards Association the Editors have been enabled to include, in abstract form, the following Specifications and Recommendations of the Association :—

No. 1. 1920. Rolled Sections for Structural Purposes.
„ 2 1903. *Tramway Rails and Fishplates.
„ 6. 1904. Rolled Sections for Structural Purposes.
„ 7. 1919. Copper Conductors, Insulated Annealed for Electric Power and Light.
„ 8. 1904. Tubular Tramway Poles.
„ 9. 1909. *Bull-head Railway Rails.
„ 10. 1904. Pipe Flanges.
„ 11. 1909. *Flat-bottom Railway Rails.
„ 12. 1920. Portland Cement.
„ 13. 1910. Structural Steel for Shipbuilding.
„ 15. 1912. Structural Steel for Bridges and General Building Construction.
„ 21. 1909. Pipe Threads.
„ 23. 1905. Trolley Groove and Wire.
„ 24. 1911–1921. Material used in the Construction of Railway Rolling Stock, Parts I. to VI.
„ 27. 1906. Limit Gauges for Running Fits.
„ 28. 1908. Nuts, Bolt Heads, and Spanners.
„ 31. 1910. Steel Conduits for Electrical Wiring.
„ 37 1919. Electricity Meters.
„ 40. 1908. Cast-iron Spigot and Socket Low-pressure Heating Pipes.
„ 41. 1908. Cast-iron Spigot and Socket Flue or Smoke Pipes.
„ 43. 1909. Charcoal Iron Lapwelded Boiler Tubes.
„ 53. 1913. Cold Drawn Weldless Steel Tubes for Locomotive Boilers.
„ 57. 1920. Heads for British Association Screws.
„ 65. 1914. Salt Glazed Ware Pipes.
„ 72. 1917. Electrical Machinery.
„ 78. 1917. Cast-iron Pipes for Water, Gas, and Sewage.
„ 84. 1918. Fine Screw Threads and their Tolerances. Superseding parts of Nos. 20 and 38.
„ 91. 1921. Electric Cable Soldering Sockets.
„ 102. 1921. Tramway Axles.
„ 109. 1921. Switches.
„ 110. 1921. Circuit Breakers.
„ 115. 1921. Metallic Resistance Materials for Electrical Purposes.
„ 132. 1 20. Steam Turbines for Electrical Plant.
„ 133. 1921. Vacuum Tungsten Filament Electric Lamps.
„ 135. 1921. Benzol for Motor Fuel.
„ 139. 1921. Red Fir Wood Poles for Telegraph and Telephone Lines.
„ 144. 1921. Creosote for the Preservation of Timber.

C.L. (M) 7270—1919. British Standard Whitworth Screw Threads.

Complete (official) copies of the Association's Reports may be obtained from the Secretary, Charles Le Maistre, A.M.Inst.C.E., 28 Victoria Street, Westminster, S.W. 1, or Messrs. Crosby Lockwood & Son, each at 1s. net.

* Revised editions of these three Specifications are approaching completion and are expected to be published in the early future.



Furniture's part in Office Organisation

Apart from the material conveniences well-designed furniture affords in the office, it creates an atmosphere which induces better work and which cannot fail to affect, to your advantage, those with whom you seek business.

We provide everything for the well-appointed office.

FILING CABINETS
DESKS, TABLES, CHAIRS
TIME RECORDERS
ENVELOPE SEALERS
ENVELOPE ADDRESSING
MACHINES, TYPEWRITERS
LOOSE LEAF LEDGERS.

Your personal inspection, without obligation, is invited.

Modern Office Equipment Co. Ltd
8 Waterloo Street, Glasgow.

CONTENTS.

SECTION		PAGE
	SUMMARY OF ENGINEERING PROGRESS DURING 1921	lxiv
I.	MATHEMATICAL TABLES AND FORMULÆ—THE SLIDE RULE	1
II.	FORCES AND POWERS	115
III.	SURVEYING—ASTRONOMY IN FIELD WORK—DRAWING	141
IV.	HEAT—SOUND—OPTICS	183
V.	WEIGHTS AND SPECIFIC GRAVITIES—TENSILE STRENGTH OF MATERIALS—STRENGTH OF WIRE, CHAINS, AND ROPES—LATERAL STRENGTH OF MATERIALS—TESTS OF STEEL AND IRON—STRENGTH OF TUBES, RINGS, AND CHAINS	207
VI.	STRUCTURAL ENGINEERING	287
VII.	WOODEN BEAMS—STRUTTING AND PUGGING—ROOFING MATERIALS—FLOORS—PARTITIONS—STAIRS	323
VIII.	BUILDING MATERIALS AND CONSTRUCTION	355
IX.	CLAYS AND ALLIED PRODUCTS USED BY ENGINEERS	421
X.	REINFORCED CONCRETE CONSTRUCTION	435
XI.	EARTHWORK — EXCAVATION — FOUNDATIONS — PILING — RETAINING WALLS — STAGINGS — SHORING — CHIMNEYS — ARCHES — PIERS—BRIDGES	479
XII.	RAILWAYS — PERMANENT WAY — LOCOMOTIVES — ROLLING STOCK — SIGNALS—COST OF RAILWAYS	533
XIII.	ELECTRIC TRACTION	667
XIV.	ROADS AND PAVEMENTS	701
XV.	ENGINEERING WORKSHOPS—WORKSHOP PRACTICE	745
XVI.	FLOUR, COTTON, OIL, AND SUGAR MILLS	765
XVII.	CRANES AND LIFTING APPLIANCES—AERIAL ROPEWAYS—CONVEYORS	783
XVIII.	POWER TRANSMISSION — BELTING — ROPE DRIVING — CLUTCHES—CHAIN GEARING—TOOTH GEARING	829
XIX.	BEARING PRESSURES—BALL AND ROLLER BEARINGS—LUBRICATION AND LUBRICANTS—SHAFTING AND SHAFTS—SPRINGS	897
XX.	MACHINE TOOLS — TOOL STEEL — TOOLS — GRINDING, ABRASIVES, AND POLISHING APPLIANCES—POWER HAMMERS	939
XXI.	SCREW THREADS—SCREWS—BOLTS AND NUTS, ETC.	1031
XXII.	THE ATMOSPHERE—WIND—WIND MILLS—AIR-RESISTANCE—TRANSMISSION OF POWER BY COMPRESSED AIR — AIR COMPRESSORS—PNEUMATIC DESPATCH TUBES	1069
XXIII.	REFRIGERATION—ICE MAKING—COLD STORAGE	1095
XXIV.	*Part I*: HYDRAULICS—*Part II*: PUMPS—*Part III*: WATER POWER DEVELOPMENT — *Part IV*: TURBINES AND HYDRO-ELECTRIC PLANTS—*Part V*: HYDRAULIC MACHINERY	1125
XXV.	SANITARY ENGINEERING — IRRIGATION — RAINFALL — WELLS — —WATERWORKS—FLOW OF WATER IN PIPES AND CHANNELS	1245
XXVI.	METERING OF WATER, AIR, GAS, AND STEAM	1311
XXVII	HARBOURS—DOCKS—QUAY-SIDE APPLIANCES—GRAVING AND FLOATING DOCKS—DREDGING—SUBAQUEOUS ROCK REMOVAL—CHANNEL DEMARCATION—BUOYS—LIGHTSHIPS—LIGHTHOUSES—DIVING	1323

SECTION		PAGE
XXVIII.	Navigable Waterways — River Canalisation — Lift — Traction and Haulage—Ship Canals	1365
XXIX.	*Part I*: Steam—Properties of Steam—Flow of Steam—Efficiencies of Engines—The Indicator. *Part II*: Boilers and Boiler Fittings—Boiler Design—Boiler Shells—Riveting Rules and Regulations—Boiler Tubes—Boiler Setting—Steam Pipes—Preventives of Scale and Corrosion—Water Softening—Feed Water Regulators—Steam Regulators—Oil Separators—Boiler Cleaners—Valves—Duty of Boilers—Rules and Regulations for Steamship Boilers—Boiler Inspection and Legislation—Types of Boilers—Boiler Fittings. *Part III*: Superheated Steam—Superheaters—Steam Jackets—Economisers—Water Cooling—Steam Dryers and Purifiers—Evaporators—Heat Accumulators. *Part IV*: Engine Types for Various Duties—Weights of Engines. *Part V*: Steam Turbines. *Part VI*: Engine Design—M.E.P.—Cylinder Ratios—Stresses—Bearing Pressures—Frames—Cylinders—Bearings—Flywheels—Governors—Pistons—Packings—Valve Gears—Link Motions—Condensers and Air Pumps	1391
XXX.	*Part I*: Power Gas. *Part II*: Gas Engines. *Part III*: Oil Engines. *Part IV*: Hot Air Engines. *Part V*: Aero and Motor Car Engines—Motor Cars. *Part VI*: Aircraft	1635
XXXI.	Fuels: Solid, Liquid, and Gaseous	1767
XXXII.	Electrical Engineering—Supply Cables—Electric Light Mains—Conduits—Electro-Chemistry—Accumulators—Generators—Converters—Motors—Alternating Currents—Transformers—Instruments—Meters—Telegraphy and Telephony—Wireless Telegraphy	1855
XXXIII.	Naval Architecture and Marine Engineering—Stability, and Trim—Weights of Hull and Machinery—Resistance of Ships—Admiralty Coefficients—Economical Speeds—Coal Consumption—Rudders—Estimating Horse-Power—Designing Marine Engines and Boilers—Turbines—Reduction Gear—Turbine Machinery—Condensing Plants—Diesel Engines—Propellers	1973
XXXIV.	Gas—Gas Works—Acetylene Gas—Petrol Air Gas	2063
XXXV.	Heating Buildings by Steam, Hot Water, and Gas—Ventilation—Lighting—Fire Extinction	2103
XXXVI.	Mining and Mining Machinery—Mineral Valuation	2153
XXXVII.	Metallurgy	2235
XXXVIII.	Explosives	2349
XXXIX.	Workshop Recipes and Processes—Painting—Lacquers and Bronzes—Varnishes—Cements and Glues—Lubricants and Oils—Cleaning-Compositions—Copying-Processes, etc.	2353
XL.	Lengths—Surfaces—Weights—Capacities—Wire Gauges—Foreign Weights, Measures, and Money, with their English Equivalents—The Metric System	2381
XLI.	Patents, Trade Marks, and Designs	2407
XLII.	Cost Data relating to Engineering Works	2413
XLIII.	Legal Notes for Engineers	2441
INDEX		2451
Directory of Engineering Manufacturers, etc.		2521
Glossaries of Trade Terms in French, Italian, Spanish, and Russian.		2613

WROUGHT IRON AND STEEL

TUBES

For Gas, Water, Steam, and Air.

HIGH PRESSURE

MAIN STEAM PIPE

INSTALLATIONS

With Welded-on Flanges.

LIGHT STEEL TUBES

WITH LOOSE FLANGE JOINTS

FOR MINING PURPOSES.

BORING TUBES AND FITTINGS.

STEEL CASTINGS. STEEL PLATES.

ASHFORD'S PATENT TUBE WELL STRAINER.

STEWARTS AND LLOYDS, Ltd.

GLASGOW. BIRMINGHAM. LONDON.

WROUGHT IRON AND STEEL

TUBES

AND

Fittings

STEWARTS AND LLOYDS, Ltd.,

41 Oswald Street,	GLASGOW
Broad Street Chambers,	BIRMINGHAM
Nile Street,	BIRMINGHAM
Winchester House, Old Broad Street,	LONDON, E.C. 2.
157 Upper Thames St.,	LONDON, E.C. 4.
63 Paradise Street,	LIVERPOOL
84 Deansgate,	MANCHESTER
132 Bute Street,	CARDIFF
Hannah Street,	CARDIFF
Neville Street, and Sovereign Street,	LEEDS
47 Blonk Street,	SHEFFIELD

WORKS:

GLASGOW and BIRMINGHAM.

SUMMARY OF
ENGINEERING PROGRESS
DURING 1921.

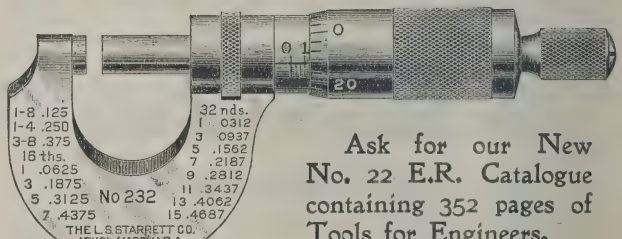
For 'Directory of Engineering Manufacturers and Buyers' Guide,' with Glossaries of French, Italian, Spanish, and Russian trade terms, see pages at end of book.

STARRETT MICROMETERS

are

The Standard of Accuracy

the World over.



Ask for our New No. 22 E.R. Catalogue containing 352 pages of Tools for Engineers.

STARRETT TOOLS

are for Sale by First-Class Tool Dealers.

We carry complete stocks of PRECISION TOOLS, BEVELS, CALIPERS & DIVIDERS, CENTRE TESTERS, CLAMPS, DRILL BLOCKS, GAUGES, HACK SAWS and FRAMES, LEVELS, MICROMETERS, RULES, SCRIBERS, SPEED INDICATORS, SQUARES, TEST INDICATORS, etc.

L. S. STARRETT CO. (Great Britain) Ltd.

35-36-37 Upper Thames St.,

LONDON, E.C. 4.

Telephone No. City 3078 (2 lines).

Telegraphic Address: 'ENGTOOLS, PHONE, LONDON.'

THE PAST YEAR'S PROGRESS.

(*Abstracted from the Engineering Section of 'The Times' Trade Supplement, January,* 1922.)

SHIPBUILDING AND MARINE ENGINEERING.

Costs of construction are now considerably lower than they were six months ago, but they are still so much higher than the market price of new tonnage that no contracts can be obtained for ordinary trading steamers. There are, at the moment, a considerable number of cargo steamers of about 8,000 tons deadweight on the stocks, the contract price of which, or the ultimate anticipated price after all costs have been paid, will be about £300,000. Of these, any one can be obtained for £150,000, and in some cases the owners would be quite willing to accept £100,000. No vessels are being ordered now at anything like even the last-named figure. Somewhere between £10 and £15 per ton deadweight is the maximum named when vessels of the type are mentioned, and no business is being done at that price.

According to the statistics compiled by *The Glasgow Herald*, there were launched, during the year, some 2,402 vessels, of 5,189,493 tons and 4,552,643 h.p., which represented a decrease, as compared with the previous year, of 872 vessels, 1,757,691 tons, and 2,185,237 h.p. But of this decrease 406 vessels, 1,439,332 tons, and 1,686,431 h.p. were in the United States alone, while in the United Kingdom the falling off amounted to 365 vessels, of only 544,656 tons and 381,318 h.p. All the British tonnage consisted of ships of thoroughly efficient types.

An output of 804 vessels of 1,596,272 tons and 1,318,788 h.p. is probably only about half of what United Kingdom shipyards and engine-shops are capable. Nearly 1,600,000 tons of new shipping were launched, containing a much larger proportion of geared turbine cargo steamers, oil tankers, and motor-propelled ships than the output of any previous year; also there were launched a small number of liners of the most efficient kind, and the most exactly adapted for their respective services, ever constructed.

There were three outstanding types of vessels built during 1921—geared turbine steamers, oil-tankers, and motor ships. The majority of the oil-tankers were designed for propulsion by geared turbines, so that the two classes overlap to a certain extent. The new adaptation of the steam turbine has been found to be suitable for vessels of practically all sizes and speeds. The internal-combustion engine has been proved thoroughly successful in the propulsion of vessels of certain sizes and speeds, and none of those companies which has adopted it seems in the least inclined to revert to steam; instead, some of the Continental firms who had fleets

composed partly of steamers and partly of motor ships have given up steamers altogether and propose in future to put their dependence wholly in motor-propelled vessels. It is the case, however, that the range of service of the marine internal-combustion engine is still somewhat restricted, that motor ships cannot be shifted about from one trade to another so freely as steamers, that this type of machinery is still being made only in a limited number of powers, and that it is not yet so free from the danger of breakdown as is the steam engine. Notwithstanding these disadvantages the motor ship is making very notable progress. The 1921 output of vessels of the type was more than double that of any previous year. The ships completed aggregated 333,475 tons dead weight, while, in addition, vessels representing 239,850 tons were launched and were being fitted out when the year closed. In the vessels completed, Diesel engines of 126,500 h.p. were installed, while for those fitting out, engines of nearly 100,000 h.p. had been, or were being, constructed. During the year the Burmeister and Wain engine was fitted to a preponderating number of British-built vessels—constructed almost wholly on the Clyde ; but there were also completed in the United Kingdom large vessels having Werkspoor, Sulzer, Camellaird-Fullagar, North British Diesel, and Beardmore-Tosi engines respectively, as well as several for propulsion by Vickers' engines.

Two firms are said to have abandoned the double-reduction geared turbine and to be going back to reciprocating engines for their new construction, owing to trouble not only with the gears but also with the turbines.

Messrs. Robey, of Lincoln, are understood to be completing a three-cylinder inverted vertical marine unit of the uniflow type, and German makers have adopted drop-valve engines to some extent. It appears probable that progress will be in the direction of modifying the standardised form of reciprocating engine in such a way as to give indicator cards more nearly approaching the theoretical best than can be obtained with the ordinary slide valve and its gear. The success of cam-operated valves in internal-combustion engines is overcoming the prejudice of marine steam engineers against valves and gear functioning in a similar manner, and it seems likely that land practice in this respect will be followed to a greater extent in marine work.

There has been little opportunity to ascertain the reliability and longevity of the highly loaded gears which have been fitted in some ships, such as the Anchor Liner *Cameronia*. In the discussion on Messrs. Walker and Cook's paper at the spring meetings of the Institution of Naval Architects, it was stated that this ship's gears had given every satisfaction so far, and it appears that this early promise has been substantiated in subsequent running. It was emphasised also that such a result can be expected only with first-class material and workmanship, and with skilled attention on service, and this view is confirmed by unfortunate experiences with other ships in which the equipment was not of so high an order of excellence.

The floating frame does not yet find favour in this country, though the necessity for preserving the alignment irrespective of movement of the

ships' seatings is recognised to be of vital importance. In this connection reference may be made to a patent (No. 168,926) of the Metropolitan-Vickers Company for diagonally bracing the seating external to the gearing; it is understood that this scheme has been adopted in a Dutch steamer. The so-called 'nodal' drive has been installed in the *Vandyck* (built for Messrs. Lamport and Holt by Messrs. Workman, Clark and Co.), and also partially in the Canadian Pacific Railway's *Empress of Canada* at Fairfield. A further development is the substitution of spur for helical gears, with teeth cut and ground according to the system devised by the Maag Gear Company, of Zurich. Gearing of this kind has been fitted in the French steamer *Thorium* and the Danish vessel *Niobe*, but the tooth loadings quoted in a paper on the subject read by Engineer Lieutenant-Commander Le Mesurier before the North-East Coast Institution of Engineers and Shipbuilders are very high for spur gears, and it is doubtful whether the plan will commend itself to British engineers.

Interest in stainless steel as a material for turbine blades was renewed by the exhibition at Sheffield of a turbine in which blades of that material had been run for a prolonged period with satisfactory results, and a great extension of its use appears probable.

Among the more notable ships of the year were the *Cameronia*, *Scythia*, *Montcalm*, and *Empress of Canada*, all twin-screw vessels having double-reduction gearing and turbine machinery of the impulse type. In the first three there are three turbines to each screw, but in the last the high-pressure and low-pressure turbines are coupled in tandem and drive the out-board first-reduction pinions, while the in-board pinions are driven by the first and second intermediate pressure turbines similarly coupled. In the *Moreton Bay* and *Largs Bay*, compound turbines of the Parsons variety are fitted. An unusual arrangement was adopted in the *Giulio Cesare*, in which two high-pressure units drive two shafts through single-reduction gears, and two low-pressure units another pair of shafts though similar but separate gears. The greatest departure from standard practice was in the *Pacific*, the machinery of which consists of a single Ljungström oppositely rotating unit driving double-reduction gearing through a reversing clutch of the plate type. So far the equipment has justified itself, as the ship has completed two round voyages to the Far East and back on a consumption of 1 lb. of coal per shaft horse-power hour—a figure so far unapproached by any other system of steam propulsion. After some 60,000 miles of sea service the machinery, including the clutch, was said to be in perfect condition, which is remarkable for an installation of 2,000 h.p. transmitted through a reversing gear of this description. The credit for this performance, which seems to be largely overlooked in this country, is due to the Swedish Ljungström Company.

The Scotch boiler still holds its own in merchant ships to the almost complete exclusion of the water-tube type, except for cross-Channel craft. Some of the German liners handed over to this country are, however, fitted with a three-drum type of water-tube boiler, and in the case of the *Majestic* it is estimated that some 2,000 tons of material, exclusive of water, have been saved by the substitution of Yarrow-type for cylindrical boilers.

Oil-firing continues to grow in popularity, and the success of the *Aquitania* since she was converted from coal has been so great that the Cunard Company are fitting the *Mauretania* and *Berengaria* in like fashion; the *Empress of France* is also to be converted.

Superheated steam is being more generally applied, most owners being now convinced that the cost of installing the necessary plant is repaid by the economy gained.

The tendency to instal rotary in place of reciprocating auxiliaries, which was noticeable in 1920, shows a further increase, and the provision of turbine-driven extraction pumps, combined with steam ejectors for air-pumping plant, promises to become standard for turbine work. Messrs. Weir are also adopting steam ejectors in conjunction with their Dual-type air pumps, and are eliminating a source of loss by omitting the cooler usually fitted.

There has been a considerable advance in the electric drive, particularly in the United States. Several mercantile vessels of the steam-electric class have been completed and are in service, including the *Invincible*, *Cuba*, *Eclipse*, and *Independence*, and very favourable reports have been received of the *San Benito*, recently put in service by Messrs. Workman, Clark and Company, the machinery of which is similar. The Japanese have completed a ship, the *Biyo Maru*, fitted with Ljungström turbo-electric machinery on the model of the *Wulsty Castle*, and it is reported that the Japanese Government has ordered in the United States a large tank steamer to be equipped with electric drive. The trial results obtained with the U.S. battleships appear to have fulfilled expectations, and four coastguard vessels are in hand.

INTERNAL COMBUSTION ENGINES.

Most of the manufacturers of stationary oil engines who have built up their reputation during the past fifteen or twenty years with the low-compression horizontal class of motor have now adopted some form of high-compression engine, which in several cases, as, for instance, the Ruston Hornsby sets, is built with a power of 200 b.h.p. per cylinder. The compression pressure varies from 300 lb. to 425 lb. per sq. in., the former representing the figure employed in the Crossley type and the latter that in the Ruston Hornsby engine. In all cases, mechanical injection of fuel is used. The difference in thermal efficiency with the varying types does not appear to be considerable, and in the larger engines built in 1921 a brake thermal efficiency of 35 per cent. was attained at the working load, corresponding with a fuel consumption of about 0·42 lb. per b.h.p. hour when running on Diesel fuel of 0·91 specific gravity. Heavier grades of fuel oil have been satisfactorily used, and tar oil has been adopted in certain cases. With the latter it is usual to fit a second pump on the engine to supply the oil for pilot ignition before the main fuel charge enters the cylinder. The amount of pilot oil required has been found to be in the neighbourhood of 6 per cent. of the total fuel supplied when the engine is running at its full load, but it is to be noted that this quantity does not diminish with the load.

This fuel consumption is about equal to that attained on corresponding

Diesel motors and is lower than with Semi-Diesel engines, and as the high-compression horizontal oil engine would appear to be cheaper to build than either of the other two, it is likely to make considerable headway for stationary purposes in the course of the next few years. It is satisfactory to record that this development is due almost wholly to British engineers, as the type has not yet made its appearance on a large scale either in America or on the Continent.

Comparatively few innovations have been made to existing designs of Diesel engines, but there is a tendency towards higher speed of rotation, and in some cases engines have been built up to 400 and 500 b.h.p. operating at 375 r.p.m. Important experiments have been carried out by two of the leading Diesel engine manufacturing firms, one in this country and one on the Continent, with a new system of solid injection of fuel at a much lower compression than that now used, which is 4,000 lb. per sq. in. in the Vickers engine, and 9,000 lb. in the Doxford motor. The experiments with this new method have proved successful, and it is anticipated that stationary high-speed engines fitted with the new device will be standardised during the present year.

Among the numerous large marine Diesel engines that were put to practical test for the first time in 1921 greatest interest attaches to those of the opposed piston design built respectively by Messrs. Cammell Laird and Messrs. Doxford. The standard 3,000 i.h.p. Doxford engine has the highest cylinder output of any Diesel motor yet manufactured commercially, this being 750 i.h.p., or about 650 b.h.p. at the low speed of 77 r.p.m. The engine is, further, remarkable for the adoption of solid injection of fuel and the employment of the extremely moderate compression pressure of 300 lb. per sq. in. The first examples of the four-cycle engines of the North British Diesel Engine Works were completed, and, although embodying no radical departures from orthodox practice, were noteworthy as being wholly of British design. A new Burmeister and Wain long-stroke Diesel motor was brought out with a stroke-bore ratio exceeding two to one and running at 85 r.p.m; the object of this is to produce a type specially suited for installation in single-screw ships where low propeller speed is desirable.

Substantial progress was made in improving the design of the Semi-Diesel engine during the past year. Two entirely new engines were brought out in this country, one by Marshall, Sons, and Co., in both the horizontal and the vertical forms, and the other by J. S. White and Co., of Cowes, embodying a new system of supercharging which, it is believed, will tend to higher efficiency.

Progress was made with the Still combined steam and oil engine, and the first large engine of a commercial type was completed and thoroughly tested by Scott's Shipbuilding Company. The results achieved in the test appear to bear out some of the claims made for the engine. The fuel consumption, allowing for the power required for operating all auxiliaries, such as the scavenging, lubricating oil, circulating water and fuel oil pumps, was found to be 0·375 lb. per b.h.p. hour at full load, corresponding with a brake thermal efficiency of 37·7 per cent.

Little that is new has to be recorded in connection with gas engines in 1921. A good deal of work was carried out on the Smith gas producer. It has been adapted mainly for driving commercial vehicles and motor craft and is standardised in sizes suitable for running engines from 35 to 100 h.p.

COAL MINING.

It is estimated that 45 per cent. of the coal produced at the collieries in the United Kingdom consists of coal under $1\frac{1}{2}$ in. to $1\frac{3}{4}$ in. in size—that is to say, putting the annual output, in normal times, at 260,000,000 tons, 117,000,000 tons consist of what is called 'small' or slack coal. The quantity of small coal at present washed is estimated at about 15,000,000 tons, and 18,000,000 tons of small are consumed at the collieries. Deducting these quantities, a balance of 84,000,000 is left, much of which would be improved by washing, for from 1,000 analytical tests made of this coal it contains, on the average, not less than 12 per cent. of ash, which by washing could be reduced to 5 per cent. The results obtained in improved calorific value, higher selling price, and saving in transport seem to warrant the more extensive cleaning of coal in the United Kingdom.

A type of coal-washing plant which has recently been introduced into Great Britain from Belgium for washing slack coal, and which is likely to prove very successful owing to its efficiency and the simplicity of its construction, is the 'Rheolaveur.' The medium employed for separating the coal from the dirt is an upward current of water which passes through slots placed at intervals in a channel or trough along which the coal is borne by a current of water. The mixture of the coal and dirt stratifies in the trough; the lighter (coal) particles do not pass through the slots, but the heavier (dirt) particles do. A comparatively weak upward current of water suffices to ensure that only the dirt, usually in the form of shale, passes through the slots and is rejected. The apparatus is so constructed that the coal can be automatically returned to the coal bunker and re-washed if necessary. It is stated that all the labour needed for the plant is one man (a mechanic) in charge and two youths. In one case where there are two washeries, each of a capacity of 70 tons per hour, the circulation water required is not more than 77,000 gallons per hour, and the same water can be used over and over again. The power required to work the washery is 35 h.p.

Several installations of fine coal recovery plants using the froth flotation process are now in course of erection in the United Kingdom—namely, at Oughterside Collieries in Cumberland, at Skinningrove Iron and Steel Works in Yorkshire, at the Team Valley By-Product Works near Gateshead, and at Ashington in Northumberland. The pioneer plant in Aberaman continued in operation throughout the year.

The recovery process appears to be peculiarly suitable where a super-clean product for the manufacture of metallurgical coke is desired, but where a second-class product is required, for, say, boiler firing, it can also be obtained. It has been demonstrated that the process is capable of converting a semi-coking into a coking coal by separating the portion which

has coking properties from that which has none, rendering the former available for coking and the latter for boiler firing or any other purpose.

It has been shown at Aberaman that 98·8 per cent. of the true coal present is recoverable, the cleaned product carrying only 1·2 per cent. of free dirt. The physical strength of the coke made from coal cleaned by the froth flotation process proves to be greater than that of ordinary coke. In one example the strength of the coke to resist crushing was 2,076 lbs. per sq. in., as against 1,500 lbs., the average strength previously obtained from the same coke, but uncleaned.

A development is the discovery by Minerals Separation, Ltd., of a new method of briquetting. Experiments on a large scale have been carried out at the works of the Powell Duffryn Steam Coal Company, South Wales. The process consists in adding a suitable binding medium, less in quantity than that employed in ordinary briquetting, to the original product, when agglomeration takes place so readily that apparently only the application of pressure is required to produce a satisfactory briquette; that is to say, the briquettes are produced directly from the wet fine coal recovered by the flotation process. The ordinary method of making briquettes is to dry the crushed coal, mechanically mix the coal and binding material, and subject the mixture to the briquetting press.

Since the issue of the report on mechanical coal cutting by the North of England Institute of Mechanical Engineers in 1905, the increase in point of number of collieries at which mechanical cutters are in use has been over 128 per cent., and in the number of machines in use over 346 per cent., while the total output of minerals obtained by mechanical machines increased from 4·0 per cent. in 1906 to 12·8 per cent. in 1920. There is a limit to the extent to which mechanical cutters can be applied profitably, and this limit is determinable by the natural conditions of coal in the seam itself and the character of the roof and floor of the seam. There is, however, as yet no hint that this limit has been reached.

The Powell Duffryn Company are putting down a central compressed air generating plant in their new Bargoed power-house with the intention of distributing compressed air at 85 lbs. pressure by a system of welded steel pipes varying in diameter from 28 ins. to 12 ins., and linking together their various collieries, which are eight or ten miles apart. The compressed air will be produced by three 40,000 cu. ft. per minute steam turbine-driven rotary compressors, each turbine being upwards of 7,000 h.p. capacity. The pressure drop is calculated not to exceed 10 per cent. at the pit top when all the collieries are taking their maximum load. A number of expansion joints are provided in the pipe line.

FUEL UTILISATION.

It cannot be said that the past year was marked by any outstanding developments that can be recorded as distinct advances in the various branches of fuel technology.

Some considerable extension was noticeable in the use of coke as a fuel

for motor transport, and one well-known firm of steam wagon manufacturers who have designed a special boiler for use with this fuel stated that, with a load of 6 tons, a mileage of 15 per cwt. of coke may be regarded as an average consumption. With coke at 45*s.* per ton, this would amount to 2*d.* per vehicle mile. Mr. Thomas Clarkson expressed the opinion that from the standpoint of running costs there is little to choose between lorries which raise steam with coke and those which convert the same fuel into producer gas. The conclusions he arrived at were that petrol at 2*s.* 4*d.* per gallon costs 4*d.* per vehicle mile with a 3-ton lorry, that steam raised by means of coke costs 1*d.* per vehicle mile, and that producer gas costs about two-thirds of a penny. The additional expense incurred, however, in the maintenance of the producer and engine, turned the scale in favour of utilising the coke for steam.

It should be noted that a plant for firing a Stirling boiler with powdered coal on the Holbeck system was put down at the electricity works of the Hammersmith Corporation. In this instance the coal is made as required in a self-contained turbo-pulveriser, and the system operates under a slight vacuum, so that there should be no chance of coal dust escaping into the atmosphere.

The Distillers' Company has been conducting experimental work abroad on power alcohol and, it was said, is in a position to supply seven million gallons a year from its own distilleries. The product (known as D.C.L. fuel) consists of a mixture of 50 per cent. alcohol, 25 per cent. benzol, and 25 per cent. paraffin. Sir Charles Bedford announced the completion of tests designed to show that alcohol may be produced commercially in Burma as a product of the paper industry which it is proposed to start there. Interest was aroused by the claim put forward by Mr. G. C. Calvert with regard to his process for producing synthetic alcohol from water gas. Full details of the method were not divulged by the inventor; but, briefly, it consists in passing water gas mixed with other gases (according to the product required) through special plant, the alcohol being thrown down in a receiver. In the case of methyl alcohol a yield of 80 per cent. of the theoretical is said to be obtained.

In its second memorandum on motor fuel, published at the end of the year, the Fuel Research Board summarised the results of inquiries made in the Dominions and Colonies as to the possible commercial production of alcohol from materials containing sugar or starch, but held out little hope that such production could be in excess of local needs.

In October the experimental works of Low Temperature Carbonisation, Limited, at Barugh, near Barnsley, were thrown open for inspection of the improvements which have been introduced in connection with the plant for making 'Coalite.' Two main difficulties had attended the operation of the earlier plant, one of which was the inability to discharge rapidly the semi-coke from the retort, while trouble was experienced in making the material of such a character as to preclude disintegration when handled and transported.

A new domestic fuel, known as 'Anthra-coal,' attracted some notice during the year. It consists of a dense coke formed by distilling a mixture

of small anthracite coal and coal-tar pitch. The proportion of pitch used in the mixture is about 16 per cent., and when discharged from the carbonising chamber the fuel remains in large and hard masses without tendency to disintegrate.

Tests carried out during the year would seem to indicate that gas producers are certainly practicable for vehicles of the heavy industrial type. A demonstration was given in April with two 3-ton lorries operated with the Parker plant which entails an additional weight of about 400 lbs., or, say, about 8 lbs. to 10 lbs. per b.h.p. The cost of fitting the plant is about £150. About 15 minutes is required to kindle the fire and get the producer in working order. It was pointed out that a 3-ton lorry can carry a full load at the same speed as with petrol, for 100 miles, on a consumption of 300 lbs. of coke, costing 10*s.* 9*d.*, with coke at £4 per ton, whereas the same vehicle, doing the same work, would consume about 17 gallons of petrol. With several three-ton lorries equipped with the plant, which had been running for some time, the fuel costs were given as 1·32*d.* per mile, or 0·35*d.* per net ton-mile. The producers can also be worked on charcoal, or even vegetable refuse, in tropical countries, where coke and petrol are unobtainable except at very high prices. Converted into ton-mile statistics it was shown that the fuel costs averaged 0·15*d.* per gross ton-mile, and 0·36*d.* per net ton-mile.

GAS ENGINEERING.

Early in the year two separate committees were appointed to investigate the situation as regards inert constituents and carbon monoxide, and their findings occasioned a great deal of relief to gas engineers. The Inerts Committee decided that the restriction of incombustibles was unnecessary, though at some future date it might be advisable to reconsider the matter. It was recommended, in fact, that there should be a further inquiry after the industry had had sufficient time to settle down to the new conditions, and a period of grace of three years was proposed. In connection with the limitation of carbon monoxide it will be recalled that a similar inquiry was held in 1898, when restriction was advocated. Sir William Pearce presided over the committee of last year; and, though considerable evidence was brought forward on behalf of those who supported restriction, it was inferred that interference at that juncture might hamper economic development, and it was decided to recommend no alteration of existing practice.

Instruments designed for the purpose of giving a continuous record of the calorific power of towns' gas have assumed a new and considerable importance under the Gas Regulation Act, for the Act prescribes that the official testing apparatus shall in the case of those undertakings selling more than 100 million cubic feet of gas per annum include a recording calorimeter. During the past year the regulation was not enforced, for the Gas Referees were unable to come to a definite decision as to whether or not the recording instruments available were sufficiently accurate and sensitive to warrant their use for penalty purposes. Trials were made with a number of the better-known instruments, and considerable interest

was displayed in the model upon which Professor C. V. Boys (one of the Referees) has been at work for some time.

In the Metropolitan area the system was adopted of taking spot tests for calorific power at intervals throughout each day (*i.e.* in the case of the South Metropolitan Gas Company it was prescribed that three tests should be taken daily at intervals of not less than three hours between each test), the average of the readings representing the calorific power of the gas as supplied.

An examination of the available carbonisation systems indicates that in the way of producing cheap therms the ' complete gas ' plant is without rival, providing that consistent working results can be obtained which are commensurate with theoretical conceptions. During the past year the improved results obtained with the steamed vertical retort placed this system in the forefront of carbonisation processes. Research was continued by both the Fuel Research Board and the Gas Investigation Committee, and it was a matter of some interest to note that in parallel experiments the results of the two bodies were not altogether in agreement.

A report which must be looked upon as classical as regards its relation to the technical development of carbonisation was that issued during June by the Director of Fuel Research (Sir George Beilby). It had been common knowledge for some years that an enhanced yield of therms was assured with steaming so long as gas having a calorific power of from 400 to 450 B.Th.U. could be established as a saleable commodity. But it was not equally certain what would be the effect of steaming on the other products. It can now be said that there are also gains in the yields of tar and ammonia. Some sacrifice in the quantity and perhaps the quality of the coke must be faced, but is more than compensated for by the gains in the other products. So far as cost of labour is concerned, the greatly increased turnover per retort removes this item from the debit to the credit side of the account, even if more highly skilled workers are employed. Sir George Beilby concluded his report with the confident assertion that by moderate steaming at moderate temperatures the output of therms in the form of gas of good and saleable quality from a unit plant can be greatly increased, while the cost per therm will be correspondingly reduced. Provisionally, he regarded 20 per cent. of steam as representing the upper limit to which steaming could be economically carried, but pointed out that the figure must be definitely determined for different coals.

In practical operation the efficiency of water-gas plants continued to be improved, the most noteworthy features being the increased attention given to ' self-steaming ' processes effected with the aid of a waste heat boiler, and the introduction of a Davison and Partner controller for automatically effecting graduation of steam flow in accordance with the temperature of the fuel bed.

In the final report of the Nitrogen Products Committee, which was issued in August, reference was made to the use of coke for boiler firing. It was stated that boilers fired with broken gas coke and coke breeze were becoming more numerous, and with properly arranged furnaces and forced

draught were giving good results. From data supplied by users and by boilermakers it appears that thermal efficiencies of about 70 per cent. for a boiler alone can be obtained, and the Committee expressed the opinion that with the addition of superheaters and economisers the average working efficiency should rise to about 75 per cent. The results, however, must be largely dependent upon the amount of moisture in the coke and upon the draught available.

The principle of selling gas by 'therms' has definitely removed any incentive to operate the 'stripping' process, for it is apparent that benzene vapour is now a far more valuable product than liquid benzol. The difficulty, therefore, which was experienced in obtaining supplies of this motor fuel is likely to remain.

OIL AND ITS USE.

In the oil industries the past year was one full of remarkable contrasts as compared with its predecessor. During 1920, records of all kinds in the United States petroleum industry were broken, and, according to the U.S. Geological Survey, the domestic production reached the startling total of 443 million barrels, or an increase approaching 20 per cent. over the previous year. This remarkable advance in output was mainly due to the stimulus of high price levels, which resulted in the working of many small wells, the cleaning out of old ones, and intensive drilling in fields where under ordinary conditions the prospective returns would not be deemed commensurate with the risk. During at least a portion of 1921, however, it would seem that the oil industry in the States was in a condition of chaos; not only was the situation affected by a substantial decline in wholesale prices, but it was influenced by the general trade stagnation, tightness of money, and struggle for supremacy which exists between producers and refiners.

In England, so far as the well-known Hardstoft boring was concerned, it was stated in March that 500 tons of crude oil had been produced from this well and had been sold to the Anglo-American Company for £22 10*s.* per ton. It was anticipated that the yield could be increased by pumping, and arrangements were made for carrying out a pumping test as soon as the necessary plant could be obtained. Towards the end of the year it was announced that the several wells in Derbyshire which had failed to yield oil were to be plugged, while the Staffordshire well at Apedale was also abandoned. In fact, only two borings were continued by the Government through its petroleum managers—namely, those at Werrington, in North Staffordshire, and at D'Arcy in Scotland. At the West Calder well in Scotland, boring was suspended some time ago, when the well had reached a depth of some 4,000 ft., but in this case there was some prospect of experiments being resumed.

Considerable interest attached to the huge plant at Skewen, near Swansea, although reticence continued to be observed as to the details of the Anglo-Persian Oil Company's intentions. Operations began in March, and between then and October the importation of crude and other oils exceeded 200,000 tons. Pipe lines were run between the Llandarcy

refineries and Swansea docks, and a new development arising out of the establishment of the works was the bunkering of ships with oil.

In a paper before the Institution of Petroleum Technologists, Mr. A. Beeby Thompson discussed the chief sources of waste in oil-fields, and gave a brief description of the ways and means of reducing losses, improving extraction ratios, and lowering costs.

Renewed attention was given to the problem of converting mineral oils into products bearing the characteristics of vegetable and animal oils, or into the fatty acids required for soap manufacture.

In spite of its many advantages, oil found some difficulty in holding its own in the latter part of the year, when certain grades of coal were obtainable at so low a price as 21*s.* per ton. In these circumstances, in some instances there was a reversion to the use of coal. As regards comparative costs of operation of stationary boilers some interesting figures were given by the engineer of the Hull Corporation Tramways. In this case the oil used had a calorific power of 18,750 B.Th.U. per lb., and its cost was £5 5*s.* per ton. The amount consumed per unit of electricity generated was 2·17 lbs., and the cost per unit was 1·223*d.* In the case of coal the quantity consumed per unit was 3·6 lb., which gave a price per unit of 0·86*d.* For fuel only, therefore, coal proved the cheaper, but if the many subsidiary advantages of oil had been taken into account there would probably have been little difference between the two systems.

In the application of oil fuel to locomotive firing, experience showed that the efficiency of oil compared with coal under service conditions is 1·75 to 1, when all factors are taken into account.

NITROGEN PRODUCTS.

Chief interest attaches to the work conducted by Claude, who has demonstrated the possibility of employing extraordinarily high pressure for the direct synthesis of ammonia. Experimental data have shown that for a given temperature the proportion of nitrogen and hydrogen remaining combined under conditions of equilibrium increases rapidly with the rise of pressure, and the lower the temperature the higher the proportion of combination. Claude finds it most effective to work at about 600° C., and he uses a pressure of nearly 6 tons per sq. in. in contrast with the 1·5 tons per sq. in. employed by Haber. A large-scale Claude plant has been in operation in France for some time, and in this country the Cumberland Coal, Power, and Chemicals Company recently acquired three collieries with coke-oven plant capable of dealing with 1,000 tons of coal per week, the gas from which will be employed in a Claude plant to be erected in Cumberland. In connection with hydrogen production Claude showed that, starting with coke-oven gas, the application of ether as a solvent at pressures of about 1,000 atmospheres and temperatures of about −50° C. very readily yields hydrogen containing less than 0·2 per cent. of carbon monoxide.

The British Cyanides Company continued at Birmingham their large-scale experiments on the fixation of nitrogen by the barium process; but, while these experiments were to an extent successful, no conclusions as to

the commercial applicability of the method were arrived at. The works at Dagenham, erected by the Nitrogen Products Company during the war, for the manufacture of ammonium nitrate from cyanamide by the Ostwald process, were closed down during the year. The Bucher process for the production of cyanides was handicapped by the serious nature of the corrosion which occurs in the plant. Before it can be considered successful, therefore, considerable progress must be made in structural design.

AERONAUTICS.

Among the machines which, although not yet in actual use, were designed during 1921 are the two de Havilland biplanes, D.H.32 and D.H.34. These two types are very similar, except for their engines. The former has a Rolls-Royce Eagle, and carries seven or eight passengers; while the 34 has a Napier Lion, and carries 10 passengers or a cargo of 2,000 lbs. at a cruising speed of about 105 miles an hour. Compared with the majority of machines that have been in use during 1921, this is an excellent performance, especially coupled with the very reasonable power expenditure per passenger carried. As several of these machines have been ordered for use during this year, a much better economy in running is expected on the London-Paris service. Another de Havilland machine which gives promise of great things, although it is at present in the experimental stage, is the D.H.29, a cantilever monoplane with cabin accommodation for 10 passengers; this machine is also fitted with a Napier Lion engine, and its power expenditure is only 45 h.p. per passenger carried, which is very reasonable in view of the high performance of the machine.

Of other purely commercial machines built during 1921 mention may be made of the Bristol 10-seater, also with Napier engine, which has accommodation in its cabin for eight passengers, while if desired an extra passenger can be carried in the pilot's cockpit. Used as a cargo machine the capacity is slightly over 2,000 lbs., and the cruising speed is well above 100 miles an hour, so that the Bristol should also do good work when it is put on the air service in the spring.

It is satisfactory to be able to record that the unit form of construction has gained considerably in favour, owing probably to a closer co-operation between those who build aeroplanes and those who run them. With the engine so mounted that it can be removed as a complete unit, with its cowling, oil tank, &c., by undoing a few bolts and disconnecting the petrol pipes, the task of changing an engine is greatly simplified. Thus an aeroplane need not be kept idle while its engine is being overhauled.

A very exhaustive series of experiments have been carried out on the Handley Page slotted wing, and it has been found that not only the shape of the slot but also its angle and the size of the slot in a wing have a very marked effect on the results. Maximum lift coefficients of 2 (absolute) have been reached, but these occur at very large angles and with a multi-slot arrangement. Even with a single slot, however, and with ailerons so mounted that the slot between them and the main wing is opened or closed as the aileron is pulled down or up, it has been found that an increase in

lift of about 60 per cent. is attainable. This means, according to some calculations made by Mr. Handley Page, that for a machine of the usual dimensions, having a landing speed of 50 miles an hour and a maximum speed of 130 miles, the power required is reduced from 346 h.p. to 208 h.p. The resulting economy in running is very great, and when further experiments have been made on the gear for opening and closing the slots such wings should soon come into general use.

As regards what might be termed normal development, two outstanding events have taken place in the aero engine world. One was the production, by the Napier firm, of a single-power unit developing 1,000 h.p. The Napier Cub marks the high-water mark in single-power units, and its application will follow in the ordinary course of events as soon as certain of its infant ailments have been remedied. The experience of the last year appears to indicate that twin-engined machines are no more reliable than are single-engined ones, and it may therefore be that in the future the twin-engined aeroplane will disappear. Certainly, if sufficient reliability can be provided in one unit, it is more efficient than two placed on the wings. The Napier Cub has not yet had an opportunity of proving itself in practice, but probably more will be heard of it shortly.

The second event was the success of the Bristol Jupiter in passing its Air Ministry's type tests. These are very rigorous, and the Jupiter is the first large air-cooled engine to pass them. This is a splendid testimony to the excellence of the engine, and, given the reliability which the tests appear to indicate it possesses, the air-cooled engine is simpler to run than the water-cooled, there being no radiator, water, or piping to look after. There are rumours of several commercial types of machines being fitted with this engine in the spring.

The world's altitude record was beaten and a new one established, by the American airman, Lieutenant Macready, who reached a corrected altitude of 40,800 ft. He was flying a Lepere biplane (the same as that used by Schroeder in the previous record altitude flight) with a Liberty engine fitted with a supercharger and a variable pitch airscrew.

CEMENT AND CONCRETE INDUSTRY.

The Concrete Utilities Bureau have continued their useful work of making known the many uses of Portland cement concrete. Their exhibit at the Royal Agricultural Show, held at Derby, was a striking illustration of the surprisingly varied purposes to which this material is applicable. A similar demonstration, but of permanent character, was provided by the collection of concrete products at Grosvenor Road, where over 300 exhibits were on view. A recent extension of the activities of the Bureau takes the form of a travelling exhibit which will visit all the more important agricultural shows during the season. The first visit was made to the Altrincham Show, where much interest was aroused by various concrete products and by demonstrations of concrete moulding. The propaganda work of the Bureau also includes the issue of numerous pamphlets, and during last year the first book in Great Britain on the

subject of concrete roads was issued for the Bureau by Concrete Publications, Limited.

Concrete roads continue to make steady progress in different parts of the country. In one London borough, where 25 roads have been remade in concrete, 15 other roads are being similarly treated. The most important example, however, is the new north circular road, starting at Ealing and passing through Willesden and Edmonton to the East End, whence it is proposed to continue the highway to Southend. In its final form this road will include two 24 ft. roadways, a 20 ft. roadway for tramway or high-speed traffic, and two 16 ft. footways. The part now under construction for the Middlesex County Council comprises only one 24 ft. roadway with suitable provision for pedestrians.

The need for improved bridges has been duly recognised by the Ministry of Transport, under whose sanction various reinforced concrete bridges were constructed or begun during last year. One of these is Muskham Bridge, near Newark, carrying the Great North Road over the Trent, and including two 100 ft. span river arches. Another bridge of greater magnitude is that near the mouth of the River Loughor, in South Wales. This structure will be 720 ft. in length, with eighteen 40 ft. girder spans, and it is being built in two parallel halves, so that a roadway may be kept open for traffic continuously.

The British Reinforced Concrete Engineering Company, of Manchester, were engaged in constructing arterial roads in Middlesex and several main roads in provincial towns.

One of the most important works carried out by Messrs. Christiani and Neilsen was a jetty at Purfleet for Messrs. Jurgens. The jetty has an arm extending for a length of 652 ft. at right angles to the shore and measuring 31 ft. in width. At the end of this arm is the jetty proper, 525 ft. long by 40 ft. wide. The structure is founded on 389 reinforced concrete piles, ranging up to 75 ft. long, and is intended for use by ships up to 10,000 deadweight capacity.

In London, the Coignet system was adopted in the interior construction of a large new building for a firm of opticians in Great Portland Street. The walls of this building are also of concrete, faced with stone on the principal façade. No bricks were used, as it was one of the conditions laid down when the plans were sanctioned that brickwork should be eliminated so as to obviate any hindrance to the execution of housing schemes.

The Expanded Metal Company supplied considerable quantities of their material as reinforcement for foundations, floors, roofs, staircases, galleries, and other structural details in buildings, and also for employment in various classes of engineering construction.

Some of the more important works carried out by Johnson's Reinforced Concrete Engineering Company, of Manchester, were a jetty on the Thames for the British Petroleum Company, the Barton Electric Power Station and gasworks extensions for the Manchester Corporation, extensions for the Scunthorpe gasworks, a building at an approximate cost of £100,000 for the Co-operative Wholesale Society at Irlam, and a hydro-electric power station at Linton Falls, including the construction of extensive retaining walls and pile foundations for the turbine house and other buildings.

The London Structural Company were engaged during the early part of 1921 in the construction of concrete houses under the 'Dorlonco' patent, and were responsible for the production of the housing schemes for Chichester, Banbury, and High Wycombe. The company also completed machine shops and warehouses, covering 25,000 sq. ft., in Whitechapel, and specially lined tanks for the storage of wine, beer, and other liquids.

Two very large warehouses, completed by Messrs. L. G. Mouchel and Partners for the tobacco trade, represent 4,600,000 cu. ft. and 2,520,000 cu. ft. capacity respectively. Office buildings of considerable magnitude were constructed in South Wales.

Messrs. J. and W. Stewart erected some concrete dwelling-houses for demonstration purposes at Acton and Belfast, grain silo and flour mill buildings in Dublin, a mill building and various bunkers for cement works in Ireland, a turbine house and refinery for oil works, a pit-head gear frame, and concrete pile foundations in several parts of the country.

The Trussed Concrete Steel Company were responsible for the application of reinforced concrete in the erection of some important buildings, including the Manchester Royal Exchange opened by the King in November, a large shoe factory in course of construction at Kettering, an eight-storey bank building in Waterloo Place for Messrs. Cox and Co., new glass works at Doncaster, and the new grandstand at the All-England Tennis Ground, Wimbledon, this structure having seats for 10,000 spectators, in addition to the usual standing room.

ELECTRICAL ENGINEERING.

In many districts the capital station is already in the making. At Edinburgh, Sheffield, Rotherham, Glasgow, Manchester, Nottingham, and in the London district there are large schemes in progress or in contemplation.

One of the most interesting new types of lamps produced during the past year is the neon-filled lamp, which represents an attempt to provide a lamp of low candle power and small current consumption, which can be used on the ordinary lighting circuit.

With the object of enabling current to be supplied at minimum rates, the whole question of the utilisation of home water resources has been investigated. The final report of the Water Power Resources Committee, issued in December, indicated that some 210,000 kw. of electrical energy could be developed continuously day and night throughout the year at economic costs, from the British water-power schemes which have been investigated. The point of interest is that the commercial output of power of the commercially practicable schemes is equal to about 40 per cent. of the total output in the year 1917–18 of the public electricity supply undertakings operated by steam power, and equivalent to that obtained by the consumption of some 3,000,000 tons of coal. Nothing, even of a preliminary character, was done towards carrying out the Severn barrage hydro-electric scheme.

Work is proceeding on the completion of the London and North Western electrification scheme, and the Brighton Railway is making steady progress with the conversion of an additional mileage of steam routes to electric traction, as a preliminary to the conversion of the main line, for which plans have been prepared. Other companies have had the details of large scale conversions of steam tracks worked out, and the publication of the final report of the Ministry of Transport Electrification Committee in September led to a general renewal of interest in electric railway projects. The Great Eastern, the South Eastern and Chatham, the London and South Western, the Lancashire and Yorkshire, and the North Eastern are all prepared to start work if the necessary capital can be found on reasonable terms. There is a tendency to call a halt until the prices at which the work can be executed fall to a lower level.

The report of the Ministry of Transport Committee makes it clear that the whole of the electrical equipment and rolling stock of home railways will be standardised. This should not only serve to cheapen the cost of the work, but will facilitate the running of through services.

The only railway other than the Brighton which has definitely announced its intention to work main-line services electrically is the North Eastern, and having regard to the likelihood that the work of converting the main York-Newcastle line and other routes may be undertaken in the near future, both freight and passenger electric locomotives have been designed at the Darlington works of that railway. The freight locomotives have been built, and the passenger engine, which is designed for a maximum safe speed of ninety miles an hour, is now under construction. The motor equipment of each of the freight locomotives consists of four totally enclosed motors, each driving an axle through single-reduction twin-gearing. Two motors are fitted in each bogie, and are each wound for 750 volts, the pair in each bogie being connected permanently in series. Each motor is capable of developing 270 b.h.p. at a speed of twenty miles an hour for one hour with forced ventilation, the h.p. for continuous rating being 182. The main traction motors of the passenger engine, which are of the twin armature type, are rigidly fixed to the main frame of the locomotive. The high tension apparatus is arranged in one of the sloping ends, and the other sloping end contains an electric boiler for supplying steam for train heating. The capacity of the locomotive will be 1,800 h.p. one hour rating, or 1,260 h.p. continuous rating. The electrical equipment is being provided by the Metropolitan Vickers Company.

In regard to telephones, perhaps the outstanding achievements of the past year—because financial consideration has had less weight here than elsewhere—are the improvements made or initiated in Post Office telegraph and telephonic equipment. A number of new multiple exchanges operated on the manual system were opened in provincial towns, and seven new exchanges were opened in the London area, while work on many new exchanges and extensions is in progress. New automatic exchanges were completed at Hurley and Ramsay, and have been ordered for Broughty Ferry, Dundee, Southampton, Swansea, and Sketty. Extensions have been ordered for the automatic exchanges at Grimsby, Leeds, Paisley,

and Stockport. The further developments of automatic exchange switching in the Post Office system were the subject of much consideration and study during the year, particularly with reference to the complex conditions applying to London, and, in a less degree, to the principal provincial cities. It is anticipated, as a result, that a considerable advance in the development and extension of automatic systems in Great Britain will be made in the near future. It is claimed that the British Post Office telephone system already serves a larger proportion of its subscribers by means of automatic exchange plant than any other extensive telephone administration in the world.

Considerable progress was also made during the year with the Post Office programme of constructing a complete underground network of main telephone cables. The design of the main cable system has been profoundly modified by the introduction of the thermionic valve and its adaptation as a telephone repeater or relay. Progress in the laying of the new system of main cables is, as the result of this invention, now making rapid progress. About 1,880 miles of ducts and 1,055 miles of main cable, representing a wire mileage of 320,000 miles, had been laid up to the end of 1921.

The use of the Baudot duplex printing telegraph system developed by the Post Office Engineering Department has been considerably extended during the last twelve months, both on the inland telegraph service and on telegraph lines to the Continent. Chief among the latter are the two London-Amsterdam circuits, which for many years were worked with Baudot quadruple simplex sets giving four hand-speed channels per circuit. They are now each equipped with Baudot triple duplex sets giving six hand-speed channels per circuit, an increase in carrying capacity of 50 per cent.

Another important step is the use of Baudot duplex working to serve more than two stations per circuit.

An extensive system of underground cables for the improvement of the telegraph service between important towns is also in course of provision. The lines to France, Belgium, Denmark, Sweden, Norway, America, and other countries are already carried on underground cables in England. Underground cables are now being laid to the coast for the circuits to Holland and Germany.

The cable services to the Continent are supplemented by means of the Post Office wireless stations at Stonehaven and Caister, both of which are now equipped for high-speed transmission at 100 words per minute. Stonehaven communicates with Berlin, Posen, and Budapest; Caister is used for a service to Amsterdam. The Stonehaven-Berlin and Caister-Amsterdam channels are both controlled by land line from the Central Telegraph Office in London, and the former works as a high-speed duplex service. The Aldershot-Cologne wireless service, installed by the Army for the use of the Army of Occupation, is also being used by the Post Office for the same purpose. With distant control from the Central Telegraph Office in London and from the German Post Office to the Cologne station, a high-speed through commercial service is maintained.

The valve in its 'triode' form has become commonplace in reception, various modifications have been introduced, and a 'tetrode' valve, replacing three triodes, has been put into commercial service in the mercantile marine. In transmission the field of the valve has been extended to considerably higher powers, and it is evident that the limit has not yet been reached. There are in use at the present time valve transmitters producing aerial currents of between 300 and 400 amperes, and it is claimed that currents of 1,000 amperes are practicable.

The 1920 recommendation of the Imperial Wireless Telegraphy Committee, in favour of the valve transmitter, has been endorsed by the subsequently appointed committee of experts known as the Wireless Telegraphy Commission, and although the first two of the Imperial stations are equipped with arc transmitters there is little doubt that the valve will be installed in the others. The two stations in question, Leafield, near Oxford, which was opened in August last, and Abu Zabal, near Cairo, which is to be opened shortly, were under construction at the time of the presentation of the Committee's report, and, in view of the probability of international agreement regarding the prohibition of the use of transmitters emitting harmonic waves, it does not seem unlikely that the valve transmitter will be installed eventually at both these stations.

In the United States the multiple-tuned antenna has been introduced, and is installed at the new Long Island station of the Radio Corporation of America. The British Marconi Company has developed a screening system which greatly reduces transmission losses, and is in use at the transatlantic stations at Clifden and Carnarvon.

The past year saw the production of a general purpose commercial type of directional receiver. With this instrument a zero or blind point can be put on a jamming station, and interference, even on the working wavelength, can be cut out by this means in all cases where the direction of the jamming station differs sufficiently from that of the station to be received. Recent experience has shown also that directional reception is of considerable advantage during periods of atmospheric disturbance. The Franklin directional receiving system, which provides three independent zero points, has now been in use at the British transatlantic receiving stations for upwards of a year, and the results obtained with this system, under commercial conditions, leave no doubt that directional reception is to be an important factor in future developments.

The research on which Senator Marconi was engaged during the latter part of 1920 and the beginning of 1921 has resulted in the production of a new receiver designed for auto working. It is understood that this receiver has been in commercial service during the last few months, and that at speeds over forty words per minute the results show a marked improvement over those obtainable with the best apparatus previously available.

METAL INDUSTRIES.

The main subject which received attention on the technical side is the cleaning of blast-furnace gases. Some useful experimental work has been done at Skinningrove, and good results have been obtained from the

plant put up at Jarrow, some statistics concerning which were made public at the meeting of the Iron and Steel Institute. What it has meant in this case is that the power supply for the whole of the works, which formerly had to be bought, is now being obtained from the cleaned waste gases. It is estimated that if the process were generally adopted, from three to four million horse-power could be produced from waste blast-furnace gases, and the electrical equipment of works could be developed at much lower costs than by any other means.

With regard to raw materials, important results have followed the opening up of new British deposits of iron ore in Lincolnshire, Northamptonshire, and elsewhere, while the acquisition by France of areas which have made her the possessor of the largest iron ore resources in Europe has offered new sources to British ironmasters.

An interesting feature of the year was the development of a stainless iron similar to the stainless steel with which engineers are now familiar. The composition of rustless iron (carbon, 0·7; silicon, 0·8; manganese, 0·12; chrome, 11·7; and nickel, 0·57) is, except for a variation in the carbon content, the same as that of the steel possessing similar qualities, and it has properties which should ensure for it a wide range of use.

The greater use which is being made of the electric furnace is an outstanding feature. Among the new installations are the large mixers of 400 and 500 tons capacity acquired by the United Steel Companies and the Parkgate Iron and Steel Company, the new section mill at the works of the last-named company, the new tilting furnace for Frodingham, the Koppers coke oven plant at the United Steel Company's works at Rotherham, and the modern tire plant laid down at Messrs. Cammell, Laird's Penistone works.

An interesting contribution on defects in steel was that made to the Iron and Steel Institute by Mr. H. Brearley, on the welding of steel in relation to the occurrence of pipe blowholes and segregates in ingots.

As in the case of the iron and steel branch, non-ferrous metal manufacturers have devoted a good deal of attention to the investigation of the causes of failure of metals in service. A noteworthy example of work in this field is the research work into the cause of season cracking in brass. The conclusion has been reached that this phenomenon occurs only in material which is maintained in a state of stress either by external constraint or more frequently by internal stress, though it seems probable that some additional agency is required to cause failure. With regard to methods of prevention, the research carried out at Woolwich Arsenal suggests that a suitably controlled low temperature annealing which would not affect the hardness of the material may be the best safeguard. The whole subject of failure in metals under internal stress was brought up at a joint gathering of many interests under the auspices of the Faraday Society. In the case of lead it would appear that where this metal is employed as sheathing for telegraph cables the cause of failure is excessive external strain, and that in season cracking it is impossible to disregard the influence of corrosion as at least a secondary cause. Failures in brass ingots due to casting have also been the subject of experiment, and a

method appears to have been evolved which reduces large percentages of waste to negligible proportions.

Other investigations, the results of which have been made public through the Institute of Metals or elsewhere, include those on the nickel-aluminium-copper alloys with high percentages of copper and on the influence of the addition of lead to gunmetal. The latter research, which was carried out at Messrs. W. H. Allen and Sons, showed that up to about 1·5 per cent. of lead the strength and ductility of sand-cast Admiralty gunmetal is increased, but the hardness diminished. A larger addition of lead brings an increase in hardness and a falling off in the other qualities.

MOTOR CARS.

Manufacturers have concentrated upon economical two- and four-seater cars rated at from 8 to 15 h.p., capable of carrying their loads over any main roads at good average speeds, and yet showing petrol consumptions of from 30 to 40 miles per gallon. Several of the leading large-car makers have entered the field of the smaller or economy car, and are supplementing their larger 20 to 30 h.p. models with others of 10 to 15 h.p. There is also a tendency to extend the light car in each direction ; smaller cars of from 5 to 8 h.p., fitted with two- or four-cylinder engines, are appearing, while at the other end of the scale the 1,500 c.c. class has extended to the 2,000 c.c., or new two-litre class. In France, considerable attention has recently been given to the ultra-light car.

In the 10 to 20 h.p., or average car class, about 90 per cent. of the engines are of the four-cylinder type ; there was no encroachment of the six-cylinder model on this class of car during the past year. The six, straight-eight, **V**-eight, and 12-cylinder engines are characteristic of the higher powered and more expensive cars ; the second of these types has made a noticeable advance in popularity, as a result of its racing successes.

In the two-cylinder type, the horizontal opposed arrangement has proved very satisfactory upon certain light cars produced by well-known large-car manufacturers ; about 25 per cent. of the smallest light cars are now fitted with air- or water-cooled two-cylinder opposed engines.

Sleeve-valve engines appear to be on the increase ; about 20 per cent. of the more expensive types of car are fitted with them, and one or two new patterns show great promise. The rotary valve was represented by one example at last year's motor show.

The side-by-side valve system is still the most popular in the lower and medium sizes of engine ; about 70 per cent. of last year's engines were fitted with such valves. In many cases, however, it has been superseded by the overhead valve, which has gained many fresh adherents in the case of higher powered engines.

The use of detachable cylinder heads is still slowly increasing, and about 50 per cent. of the engines are now thus fitted.

A novelty in engine cooling exists in one successful two-cylinder **V**-type engine, in which the cylinder barrels are made to project into the crank-case, and together with the inner side of the piston are cooled by the oil-spray

in the crank-case, an additional quantity of lubricant being carried for the purpose.

About 50 per cent. of last year's cars were fitted with four speeds, as against about 45 per cent. with three speeds and about 5 per cent. with two speeds or variable gear. An innovation in the disposition of the gear box has been made in the case of one or two well-known light cars, by combining the gear box with the forward end of the torque tube ; this arrangement diminishes the number of universal joints, renders the clutch more accessible, and lessens the engine unit weight.

The straight-bevel drive, which hitherto had practically monopolised the final drive, has been very definitely supplanted by the spiral bevel ; about 70 per cent. of modern cars are now fitted with the latter, as against about 20 per cent. with the straight bevel and 10 per cent. with worm drive.

In clutches the chief change was in the direction of the dry single-plate type. The decline of the leather-cone type was most marked. The multi-plate clutch is retained in Continental and in the larger British cars. About 35 per cent. of last year's cars had the single-plate clutch, about 25 per cent. the fabric-covered cone clutch, about 25 per cent. the multi-plate type, and about 15 per cent. the leather cone type.

As regards the steering, the sector-shaped worm-wheel is being replaced by the complete wheel, so that increased life may be attained by turning the wheel around to an unworn portion when it is worn in one place. An improved design of the Marle's steering system is also finding favour.

LOCOMOTIVES.

One of the most interesting engines of the year is the 4–6–0 four-cylinder type, of which a number has been built for fast goods traffic by the Great Central Railway in its Gorton shops or have been obtained from private builders. These locomotives are similar to the older Valour class of four-cylinder express passenger engines, except as regards the size of the coupled wheels, which are 5 ft. 8 ins. instead of 6 ft. 9 ins. in diameter. The cylinders are each 16 ins. by 26 ins., the boiler pressure is 200 lbs., the evaporative surface 2,044 ft., and the grate area 26 sq. ft. A Robinson superheater is fitted. The engine weighs 81½ tons, and the engine and tender combined 130 tons. Other engines of this class are under construction at Gorton and by outside firms for delivery during the present year, but no more will be ordered from outside firms at present. There are now in hand at Gorton Works 4–6–2 passenger tank engines, with cylinders 20 ins. in diameter by 26 ins. stroke, with 5 ft. 7 ins. coupled wheels ; and 4–4–0 express passenger engines of the 'Modified Director' class, with cylinders 20 ins. in diameter by 26 ins. stroke, and coupled wheels 6 ft. 9 ins. diameter. A Great Central engine of the standard 2–8–0 type during the past year was fitted with a new boiler of special design, giving a firebox of very large capacity. This boiler is intended to be heated by liquid, colloidal or pulverised fuel or bituminous coal. The engine has recently been put into regular service, and is now under observation with oil fuel,

after which trials with colloidal fuels and pulverised and bituminous coal will be made.

A new design of three-cylinder express passenger locomotive was introduced by the Caledonian Railway. The cylinders are all of 18½ ins. diameter by 26 ins. stroke, and piston valves are fitted in conjunction with Walschaert valve gear. One pair of cylinders is placed outside the frame and the other cylinder inside, the outside pair being connected to the middle pair of coupled wheels, and the inside cylinder driving the leading pair. The coupled wheels are 6 ft. 1 in. in diameter, and the wheel base is 15 ft. The tractive effort is large for Caledonian practice, being 28,000 lbs. The tender is of the six-wheeled type, having a water capacity of 4,500 gallons. A number of 4–6–0 two-cylinder express passenger locomotives were also constructed. The weight of the engine and tender of the three-cylinder type in working order is 129 tons, and of the two-cylinder 121½ tons.

The North British Company either at Cowlairs or at contractors' works, including the North British Locomotive Company, have had built nineteen superheater goods engines with cylinders 19½ ins. by 26 ins., two Atlantics, and six 4–4–2 passenger tank engines with coupled wheels 5 ft. 9 ins. in diameter.

The feature of the work done in the Midland locomotive shops is the 0–10–0 engine designed for work on the famous Lickey incline, one of the steepest gradients on any English main line. There are four cylinders cast in pairs all 16¾ ins. in diameter and 28 ins. in stroke. The cross port system is adopted. The piston valves, which by reason of this arrangement can supply both cylinders on one side, are of 10 ins. diameter and are driven by Walschaert gearing. The coupled wheels are of the comparatively small diameter of 4 ft. 7½ ins., but the wheel base is large, being 20 ft. 11 ins. The engine has a tractive effort of no less than 43,212 lbs.

On the Great Western Railway the chief interest in the work at Swindon was the bringing up to date of a mixed traffic engine of the 2–8–0 type. A new boiler was fitted, and the steam admission pipes are now taken through the smoke-box and coupled externally to the cylinders. Ten of these were completed last year, and a number of the same type are now going through the shops. The stock of the 2–6–0 class was considerably augmented, no fewer than seventy-two having been turned out during the twelve months.

At Eastleigh the London and South Western Railway have built a few tank engines which embody new features. Some of these are of the six-wheels and others of the eight-wheels coupled type, the latter being intended for the working of heavy goods trains. The total evaporative surface is 1,406 sq. ft., and a superheater of the Eastleigh pattern is fitted.

SECTION I

MATHEMATICAL TABLES AND FORMULÆ — ALGEBRAICAL SIGNS, SYMBOLS, AND FORMULÆ — INTEREST — ANNUITIES — SINKING FUND — PRESENT VALUE — AMORTIZATION — PROGRESSION — SERIES — PERMUTATIONS AND COMBINATIONS — TRIGONOMETRY — PRACTICAL GEOMETRY — MENSURATION — CIRCLE AREAS AND CIRCUMFERENCES — CIRCLE SEGMENTS — CONIC SECTIONS — CURVES — THE CALCULUS — SQUARES — CUBES — ROOTS — RECIPROCALS — LOGARITHMS — EXPONENTIAL AND HYPERBOLIC FUNCTIONS — SINES — TANGENTS, ETC. — THE SLIDE RULE.

SECTION I

ALGEBRA — INTEREST — ANNUITIES — SINKING FUND — PRESENT VALUE — AMORTIZATION — DIFFERENTIAL AND INTEGRAL CALCULUS—GEOMETRY—LONGIMETRY — PLANIMETRY — STEREOMETRY — CONIC SECTIONS — CURVES — THE CIRCLE — TRIGONOMETRY — SQUARES — ROOTS — RECIPROCALS — LOGARITHMS — HYPERBOLIC FUNCTIONS—SLIDE RULE.

ALGEBRA.

Ratio.

Ratio is the relation of one quantity to another in respect of magnitude.

The magnitudes of two quantities of the *same kind* may be compared in two ways :—

(1.) By finding their difference, or how much one is greater than the other. This gives the *Arithmetical Ratio* of the quantities.

(2.) By finding how many times the one contains the other. This determines their *Geometrical Ratio*, or, simply, their *Ratio*.

For example, if a and b be the measures of two quantities, their *Arithmetical Ratio* is $a-b$, and their (*Geometrical*) *Ratio* is $a : b$ or $\frac{a}{b}$; a and b are called the *Terms* of the ratio ; a is called the *Antecedent*, and b the *Consequent*. The ratios $a^2 : b^2$, $a^3 : b^3$, $\sqrt{a} : \sqrt{b}$, and $\sqrt[3]{a} : \sqrt[3]{b}$ are called respectively the *duplicate*, the *triplicate*, the *subduplicate*, and the *subtriplicate* ratio of $a : b$.

If $\frac{a}{b} = \frac{c}{d} = \frac{e}{f} = \cdots$ each of these ratios is equal to $\frac{a+c+e+\cdots}{b+d+f+\cdots}$. The application of this principle greatly simplifies many problems.

Proportion.

Proportion is the equality of two ratios. The ratio of $a : b$ will be equal to $c : d$ if $\frac{a}{b} = \frac{c}{d}$, and the four numbers represented by a, b, c, d are then said to be *proportionals*.

The proportion is usually stated thus :—$a : b = c : d$, or $a : b :: c : d$ (read a is to b as c is to d). The two terms a and d are called the *extremes*, and b and c the *means*.

If a, b, c, d be proportionals, the product of the *extremes* is equal to the product of the *means*. or,

$$ad = bc.$$

Conversely, if $ad = bc$,

$a : b = c : d.$ $\quad a : c = b : d.$ $\quad d : b = c : a.$ $\quad d : c = b : a.$

Also, if $a : b :: c : d$,

$a+b : b = c+d : d.$ $\quad a-b : b = c-d : d.$ $\quad a+b : a-b = c+d : c-d.$

Arithmetical Progression.

An *Arithmetical Progression* is a series of numbers which increase or decrease by a *constant difference*. Thus 1, 3, 5, 7, 9 ; 10, 8, 6, 4, 2 are *arithmetical progressions*, the constant difference being 2 in the first series and -2 in the second.

Let a = the first term of the series. z = the last term. n = the number of terms.
d = the constant difference. S = the sum of all the terms.

$$a = z - d(n-1). \qquad a = \frac{2S}{n} - z. \qquad a = \frac{S}{n} - \frac{d}{2}(n-1). \qquad z = a + d(n-1).$$

$$z = \frac{2S}{n} - a. \qquad z = \frac{S}{n} + \frac{d}{2}(n-1). \qquad n = \frac{z-a}{d} + 1. \qquad n = \frac{2S}{a+z}.$$

$$d = \frac{z-a}{n-1}. \qquad d = \frac{(z+a)(z-a)}{2S-a-z}. \qquad d = \frac{2(S-an)}{n(n-1)}. \qquad d = \frac{2(zn-S)}{n(n-1)}.$$

$$S = \frac{n(a+z)}{2}. \qquad S = \frac{(a+z)(z+d-a)}{2d}. \qquad S = n\left[a + \frac{d}{2}(n-1)\right].$$

$$S = n\left[z - \frac{d}{2}(n-1)\right]. \qquad a = \frac{d}{2} \pm \sqrt{\left(z + \frac{d}{2}\right)^2 - 2dS}.$$

$$z = \frac{d}{2} \pm \sqrt{\left(a - \frac{d}{2}\right)^2 + 2dS}. \qquad n = \frac{1}{2} - \frac{a}{d} \pm \sqrt{\left(\frac{1}{2} - \frac{a}{d}\right)^2 + \frac{2S}{d}}.$$

$$n = \frac{1}{2} + \frac{z}{d} \pm \sqrt{\left(\frac{1}{2} + \frac{z}{d}\right)^2 - \frac{2S}{d}}.$$

When the series is a decreasing one make the first term $= z$, and the last term $= a$.

The *Arithmetical Mean* of two quantities, A and B, $= \frac{A+B}{2}$.

Geometrical Progression.

A *Geometrical Progression* is a series of numbers which increase or decrease by a *constant factor*, or *common ratio*. For example, 2, 4, 8, 16, 32 ; 4, $-\frac{1}{2}$, $\frac{1}{16}$, $-\frac{1}{128}$, $\frac{1}{1024}$, are Geometrical Progressions, the constant factor being 2 in the first series and $-\frac{1}{8}$ in the second.

Let a = the first term. z = the last term. n = the number of terms.
r = the constant factor. S = the sum of the terms.

$$a = \frac{z}{r^{n-1}}. \qquad a = S - r(S-z). \qquad a = S\frac{r-1}{r^n-1}. \qquad z = ar^{n-1}.$$

$$z = S - \frac{S-a}{r}. \qquad z = S\left(\frac{r-1}{r^n-1}\right)r^{n-1}. \qquad r = \sqrt[n-1]{\frac{z}{a}}. \qquad r = \frac{S-a}{S-z}.$$

$$ar^n + S - rS - a = 0. \qquad S = \frac{a(r^n-1)}{r-1}. \qquad S = \frac{a(1-r^n)}{1-r}. \qquad S = \frac{rz-a}{r-1}.$$

$$S = \frac{z(r^n-1)}{(r-1)r^{n-1}}. \qquad n = 1 + \frac{\log z - \log a}{\log r}. \qquad n = 1 + \frac{\log z - \log a}{\log (S+a) - \log (S-z)}.$$

$$n = \frac{\log [a + S(r-1)] - \log a}{\log r}. \qquad n = 1 + \frac{\log z - \log [zr - S(r-1)]}{\log r}. \qquad S = \frac{z\sqrt[n-1]{z} - a\sqrt[n-1]{a}}{\sqrt[n-1]{z} - \sqrt[n-1]{a}}.$$

The *Geometric Mean* of two quantities, A and B, $= \sqrt{AB}$.

Harmonical Progression.

Quantities are said to be in *Harmonical Progression* when any three consecutive terms being taken, the first is to the third as the difference between the first and second is to the difference between the second and third. Thus, if a, b, c be the consecutive terms in a series, then, if $a : c :: a - b : b - c$, a, b, c are in harmonical progression. If quantities are in harmonical progression, their reciprocals are in arithmetical progression.

There is no method by which the sum of an harmonic series can be found.

The *Harmonic Mean* of two quantities, A and B, $= \frac{2AB}{A+B}$.

Simple Interest.

Interest is money paid for the use of other money lent for a certain time at a fixed rate per cent.

Let P = the *Principal*, or money lent, in pounds. R = the *Rate per Cent.*, or interest of £100 for one year. I = the *Interest*. A = the *Amount*, or principal + interest. T = the *Time* in years.

Then

$$I = \frac{P \times T \times R}{100}. \qquad R = \frac{100 \times I}{PT}. \qquad P = \frac{100 \times I}{RT}. \qquad T = \frac{100 \times I}{PR}.$$

$$A = P + I = \frac{P(100 + RT)}{100}. \qquad P = \frac{100 \times A}{100 + RT}.$$

If the *Time* (T) be given in *months*, *weeks*, or *days*, multiply the 100 in the above equations by 12, 52, or 365 as the case requires.

Compound Interest.

In *Compound Interest*, the interest due at the end of the first period is added to the principal, and the *amount* thus obtained is taken as the principal in calculating the interest for the next period, and so on.

Let P = Principal. A = Amount. r = Interest on £1 for a year or given period. n = Number of years, or periods.

Then

$$A = P(1+r)^n. \qquad P = \frac{A}{(1+r)^n}. \qquad r = \sqrt[n]{\frac{A}{P}} - 1. \qquad n = \frac{\log A - \log P}{\log (1+r)}.$$

Compound Interest Table.

Showing the sum to which £1 will increase at *Compound Interest* during any number o years not exceeding 50; interest being calculated to and added on at the end of every year.

No. of Years	2½ per cent.	3 per cent.	4 per cent.	5 per cent.	6 per cent.
1	1·02500	1·030000	1·040000	1·050000	1·060000
2	1·05063	1·060900	1·081600	1·102500	1·123600
3	1·07689	1·092727	1·124864	1·157625	1·191016
4	1·10381	1·125509	1·169859	1·215506	1·262477
5	1·13141	1·159274	1·216653	1·276282	1·338226
6	1·15969	1·194052	1·265319	1·340096	1·418519
7	1·18869	1·229874	1·315932	1·407100	1·503630
8	1·21840	1·266770	1·368569	1·477455	1·593848
9	1·24886	1·304773	1·423312	1·551328	1·689479
10	1·28008	1·343916	1·480244	1·628895	1·790848
11	1·31209	1·384234	1·539454	1·710339	1·898299
12	1·34489	1·425761	1·601032	1·795856	2·012196
13	1·37851	1·468534	1·665074	1·885649	2·132928
14	1·41297	1·512590	1·731676	1·979932	2·260904
15	1·44830	1·557967	1·800944	2·078928	2·396558
16	1·48451	1·604706	1·872981	2·182875	2·540352
17	1·52162	1·652848	1·947901	2·292018	2·692773
18	1·55966	1·702433	2·025817	2·406619	2·854339
19	1·59865	1·753506	2·106849	2·526950	3·025600
20	1·63862	1·806111	2·191123	2·653298	3·207135
21	1·67958	1·860295	2·278768	2·785963	3·399564
22	1·72157	1·916103	2·369919	2·925261	3·603537
23	1·76461	1·973587	2·464716	3·071524	3·819750
24	1·80873	2·032794	2·563304	3·225100	4·048935
25	1·85394	2·093778	2·665836	3·386355	4·291871
26	1·90029	2·156591	2·772470	3·555673	4·549383
27	1·94780	2·221289	2·883369	3·733456	4·822346
28	1·99650	2·287928	2·998703	3·920129	5·111687
29	2·04641	2·356566	3·118651	4·116136	5·418388
30	2·09757	2·427262	3·243398	4·321942	5·743491
31	2·15001	2·500080	3·373133	4·538039	6·088101
32	2·20376	2·575083	3·508059	4·764941	6·453387
33	2·25885	2·652335	3·648381	5·003189	6·840590
34	2·31532	2·731905	3·794316	5·253348	7·251025
35	2·37321	2·813862	3·946089	5·516015	7·686087
36	2·43254	2·898278	4·103933	5·791816	8·147252
37	2·49335	2·985227	4·268090	6·081407	8·636087
38	2·55568	3·074783	4·438813	6·385457	9·154252

COMPOUND INTEREST TABLE (*continued*).

No. of Years	2½ per cent.	3 per cent.	4 per cent.	5 per cent.	6 per cent.
39	2·61957	3·167027	4·616366	6·704751	9·703507
40	2·68506	3·262038	4·801021	7·039989	10·285718
41	2·75219	3·359899	4·993061	7·391988	10·902861
42	2·82100	3·460696	5·192784	7·761588	11·557033
43	2·89152	3·564517	5·400495	8·149667	12·250455
44	2·96381	3·671452	5·616515	8·557150	12·985482
45	3·03790	3·781596	5·841176	8·985008	13·764611
46	3·11385	3·895044	6·074823	9·434258	14·590487
47	3·19170	4·011895	6·317816	9·905971	15·465917
48	3·27149	4·132252	6·570528	10·401270	16·393872
49	3·35328	4·256219	6·833349	10·921333	17·377504
50	3·43711	4·383906	7·106683	11·467400	18·420154

Present Value and Discount.

The *present value* or *present worth* of an amount due at some future time is the sum which, together with its interest from the present time to the time when payment is due, will be equal to the given amount. For example, the present value of £412 due 9 months hence at 4 per cent. simple interest is £400, since £400 + its interest for 9 months = £412. *True discount* is the difference between the amount and its present value; or, in other words, it is the *interest* on the *present value* for the given period. Ordinary commercial, or *banker's discount*, is *interest* on the *amount* of the debt, and is therefore always greater than the true discount. In the above example the true discount of £412 = £12; the banker's discount = £12 7*s.* $2\frac{2}{5}$*d.*

Let A = amount of debt. P = present value. D = true discount. D_b = banker's discount.
r = interest of £1 for one year. n = number of years.

Then

$$A = P(1 + nr). \qquad A = \frac{D(1 + nr)}{nr}. \qquad P = \frac{A}{1 + nr}.$$

$$D = A - P = A - \frac{A}{1 + nr} = \frac{Anr}{1 + nr}.$$

$$D_b = Anr. \qquad r = \frac{A - P}{Pn}. \qquad n = \frac{A - P}{Pr}.$$

Annuities.

An *annuity* is a fixed sum of money paid periodically. An annuity, N, is left unpaid for n years; to find the whole amount, A, allowing simple interest (interest on £1 for one year = r) :—

$$A = nN + \frac{n(n-1)}{2} rN.$$

If compound interest allowed :—

$$A = \frac{(1 + r)^n - 1}{r} N.$$

To find the present value, P, of an annuity, N, to continue for n years, allowing compound interest :—

$$P = \frac{1 - (1 + r)^{-n}}{r} N.*$$

[If simple interest be reckoned in calculating the present value of an annuity, the results obtained will be untrustworthy.]

The present value of a perpetual annuity is obtained by making n infinite in formula (*), which then becomes

$$P = \frac{N}{r}.$$

If mN is the present value of an annuity, N, the annuity is said to be worth *m years' purchase.* The number of years' purchase, m, of a perpetual annuity is :—

$$m = \frac{1}{r} = \frac{100}{\text{rate per cent.}}.$$

A debt, D, bearing compound interest is diminished by an annual payment, N; to find the debt, d, after n years, and the time, m, when it will be fully paid :—

$$d = \frac{(Dr - N)(1 + r)^n + N}{r}.$$

$$m = \frac{\log N - \log (N - Dr)}{\log (1 + r)}.$$

If $N = Dr$, then $m = \infty$, or the debt D will never be paid. If $N < Dr$ the debt will be increased. To find the yearly payment, N, which will pay a debt, D, in n years at r per cent. compound interest :—

$$N = \frac{Dr(1 + r)^n}{(1 + r)^n - 1}.$$

ANNUITY TABLE.

Showing the Amount of an Annuity of £1 for any number of Years not exceeding 50, and for various rates of Interest.

No. of Years	3 per cent.	3½ per cent.	4 per cent.	4½ per cent.	5 per cent.	6 per cent.
1	1·00000	1·00000	1·00000	1·00000	1·00000	1·00000
2	2·03000	2·03500	2·04000	2·04500	2·05000	2·06000
3	3·09090	3·10622	3·12160	3·13702	3·15250	3·18360
4	4·18362	4·21494	4·24646	4·27819	4·31012	4·37461
5	5·30913	5·36246	5·41632	5·47070	5·52563	5·63709
6	6·46840	6·55015	6·63297	6·71689	6·80191	6·97531
7	7·66246	7·77940	7·89829	8·01915	8·14200	8·39383
8	8·89233	9·05168	9·21422	9·38001	9·54910	9·89746
9	10·15910	10·36849	10·58279	10·80211	11·02656	11·49131
10	11·46387	11·73139	12·00610	12·28820	12·57789	13·18079
11	12·80779	13·14199	13·48635	13·84117	14·20678	14·97164
12	14·19202	14·60196	15·02580	15·46403	15·91712	16·86994
13	15·61779	16·11303	16·62683	17·15991	17·71298	18·88213
14	17·08632	17·67698	18·29191	18·93210	19·59863	21·01506
15	18·59891	19·29568	20·02358	20·78405	21·57856	23·27596
16	20·15688	20·97102	21·82453	22·71933	23·65749	25·67252
17	21·76158	22·70501	23·69751	24·74170	25·84036	28·21287
18	23·41443	24·49969	25·64541	26·85508	28·13238	30·90565
19	25·11686	26·35718	27·67122	29·06356	30·53900	33·75999
20	26·87037	28·27968	29·77807	31·37142	33·06595	36·78559
21	28·67648	30·26947	31·96920	33·78313	35·71925	39·99272
22	30·53678	32·32890	34·24796	36·30337	38·50521	43·39229
23	32·45288	34·46041	36·61788	38·93702	41·43047	46·99582
24	34·42647	36·66652	39·08260	41·68919	44·50199	50·81557
25	36·45926	38·94985	41·64590	44·56521	47·72709	54·86451
26	38·55304	41·31310	44·31174	47·57065	51·11345	59·15638
27	40·70963	43·75906	47·08421	50·71132	54·66912	63·70576
28	42·93092	46·29062	49·96758	53·99333	58·40258	68·52811
29	45·21885	48·91079	52·96628	57·42303	62·32271	73·63979
30	47·57541	51·62267	56·08493	61·00706	66·43884	79·05818
31	50·00267	54·42947	59·32833	64·75238	70·76078	84·80167
32	52·50275	57·33450	62·70146	68·66624	75·29882	90·88977
33	55·07784	60·34121	66·20952	72·75620	80·06377	97·34316
34	57·73017	63·45315	69·85790	77·03025	85·06695	104·18375
35	60·46201	66·67401	73·65222	81·49661	90·32030	111·43477
36	63·27594	70·00760	77·59831	86·16396	95·83632	119·12086
37	66·17422	73·45786	81·70224	91·04134	101·62813	127·26811
38	69·15944	77·02889	85·97033	96·13820	107·70954	135·90420
39	72·23423	80·72490	90·40914	101·46442	114·09502	145·05845
40	75·40125	84·55027	95·02551	107·03032	120·79977	154·76196
41	78·66329	88·50953	99·82653	112·84668	127·83976	165·04768
42	82·02319	92·60737	104·81959	118·92478	135·23175	175·95054
43	85·48389	96·84862	110·01238	125·27640	142·99333	187·50757
44	89·04840	101·23833	115·41287	131·91384	151·14300	199·75803
45	92·71986	105·78167	121·02939	138·84996	159·70015	212·74351
46	96·50145	110·48403	126·87056	146·09821	168·68516	226·50812
47	100·39650	115·35097	132·94539	153·67263	178·11942	241·09861
48	104·40839	120·38825	139·26320	161·58790	188·02539	256·56452
49	108·54064	125·60184	145·83373	169·85935	198·42656	272·95840
50	112·79686	130·99791	152·60708	178·50302	209·34799	290·33590

ANNUITY TABLE.

Showing the present value of annuities payable at the end of each year for the given number of years at various rates of interest per cent.

No. of Years.	¾ per cent.	⅞ per cent.	1 per cent.	1⅛ per cent.	1¼ per cent.	1⅜ per cent.	1½ per cent.	1⅝ per cent.	1¾ per cent.	1⅞ per cent.	2 per cent.	2½ per cent.
1	0·99256	0·99133	0·99010	0·98888	0·98765	0·98644	0·98522	0·98401	0·98280	0·98160	0·98039	0·97561
2	1·97772	1·97405	1·97040	1·96675	1·96312	1·95949	1·95588	1·95229	1·94870	1·94512	1·94156	1·92742
3	2·95556	2·94826	2·94099	2·93374	2·92653	2·91935	2·91220	2·90508	2·89798	2·89092	2·88388	2·85602
4	3·92611	3·91401	3·90197	3·88998	3·87806	3·86619	3·85438	3·84264	3·83094	3·81931	3·80773	3·76197
5	4·88944	4·87138	4·85343	4·83558	4·81784	4·80019	4·78264	4·76520	4·74786	4·73061	4·71346	4·64583
6	5·84560	5·82045	5·79548	5·77066	5·74601	5·72152	5·69719	5·67301	5·64900	5·62514	5·60143	5·50813
7	6·79464	6·76129	6·72819	6·69534	6·66273	6·63035	6·59821	6·56631	6·53464	6·50320	6·47199	6·34939
8	7·73661	7·69397	7·65168	7·60973	7·56812	7·52686	7·48593	7·44532	7·40505	7·36511	7·32548	7·17014
9	8·67158	8·61856	8·56602	8·51395	8·46235	8·41120	8·36052	8·31028	8·26049	8·21115	8·16224	7·97087
10	9·59958	9·53513	9·47130	9·40811	9·34553	9·28355	9·22218	9·16141	9·10122	9·04162	8·98259	8·75206
11	10·52067	10·44374	10·36763	10·29232	10·21780	10·14407	10·07112	9·99893	9·92749	9·85680	9·78685	9·51421
12	11·43491	11·34448	11·25508	11·16669	11·07931	10·99292	10·90751	10·82305	10·73955	10·65698	10·57534	10·25776
13	12·34235	12·23740	12·13374	12·03134	11·93018	11·83025	11·73153	11·63400	11·53764	11·44244	11·34837	10·98319
14	13·24302	13·12258	13·00370	12·88637	12·77055	12·65623	12·54338	12·43198	12·32201	12·21344	12·10625	11·69091
15	14·13700	14·00008	13·86505	13·73189	13·60055	13·47101	13·34323	13·21720	13·09288	12·97024	12·84926	12·38138
16	15·02431	14·86997	14·71787	14·56800	14·42029	14·27473	14·13126	13·98987	13·85050	13·71312	13·57771	13·05500
17	15·90502	15·73231	15·56225	15·39480	15·22992	15·06755	14·90765	14·75018	14·59508	14·44233	14·29187	13·71220
18	16·77918	16·58717	16·39827	16·21241	16·02955	15·84962	15·67256	15·49833	15·32686	15·15811	14·99203	14·35336
19	17·64683	17·43462	17·22601	17·02093	16·81931	16·62108	16·42617	16·23452	16·04606	15·86073	15·67846	14·97889
20	18·50802	18·27471	18·04555	17·82045	17·59932	17·38207	17·16864	16·95893	16·75288	16·55041	16·35143	15·58916
21	19·36280	19·10752	18·85698	18·61107	18·36970	18·13275	17·90014	17·67177	17·44755	17·22739	17·01121	16·18455
22	20·21121	19·93311	19·66038	19·39290	19·13056	18·87324	18·62082	18·37320	18·13027	17·89192	17·65805	16·76541
23	21·05331	20·75153	20·47582	20·16604	19·88204	19·60369	19·33086	19·06342	18·80125	18·54421	18·29220	17·33211
24	21·88915	21·56286	21·24339	20·93057	20·62423	20·32423	20·03041	19·74261	19·46069	19·18451	18·91393	17·88499
25	22·71876	22·36715	22·02316	21·68659	21·35727	21·03500	20·71961	20·41093	20·10878	19·81201	19·52346	18·42438
26	23·54219	23·16446	22·79520	22·43421	22·08125	21·73613	21·39863	21·06856	20·74573	20·42995	20·12104	18·95061
27	24·35949	23·95485	23·55961	23·17351	22·79630	22·42775	22·06762	21·71568	21·37173	21·03553	20·70690	19·46402
28	25·17071	24·73839	24·31644	23·90458	23·50252	23·10999	22·72672	22·35246	21·98655	21·62397	21·28127	19·96489
29	25·97589	25·51513	25·06579	24·62752	24·20002	23·78297	23·37608	22·97905	22·59160	22·21347	21·84438	20·45355
30	26·77508	26·28514	25·80771	25·34242	24·88891	24·44683	24·01584	23·59562	23·18585	22·78623	22·39646	20·93029
31	27·56832	27·04846	26·54229	26·04936	25·56929	25·10168	24·64615	24·20233	23·76988	23·34844	22·93770	21·39541
32	28·35565	27·80517	27·26959	26·74844	26·24127	25·74765	25·26714	24·79934	24·34386	23·90031	23·46833	21·84918
33	29·13712	28·55531	27·98969	27·43975	26·90496	26·38486	25·87895	25·38681	24·90797	24·44203	23·98856	22·29188
34	29·91278	29·29894	28·70267	28·12336	27·56046	27·01342	26·48173	25·96488	25·46238	24·97377	24·49859	22·72379

No. of Years.	¼ per cent.	⅞ per cent.	1 per cent.	1⅛ per cent.	1¼ per cent.	1⅜ per cent.	1½ per cent.	1⅝ per cent.	1¾ per cent.	1⅞ per cent.	2 per cent.	2½ per cent.
35	30·68266	30·03613	29·40858	28·79936	28·20786	27·63346	27·07559	26·53370	26·00725	25·49572	24·99862	23·14516
36	31·44681	30·76692	30·10751	29·46785	28·84727	28·24509	27·66068	27·09343	26·54275	26·00807	25·48884	23·55625
37	32·20527	31·49137	30·79951	30·12890	29·47878	28·84843	28·23713	27·64422	27·06904	26·51099	25·96945	23·95732
38	32·95808	32·20954	31·48466	30·78260	30·10250	29·44358	28·80505	28·18619	27·58628	27·00465	26·44064	24·34860
39	33·70529	32·92147	32·16303	31·42902	30·71852	30·03065	29·36458	28·71950	28·09463	27·48923	26·90259	24·73034
40	34·44694	33·62723	32·83469	32·06825	31·32693	30·60977	29·91585	29·24428	28·59423	27·96489	27·35548	25·10278
41	35·18307	34·32687	33·49969	32·70037	31·92784	31·18103	30·45896	29·76067	29·08524	28·43179	27·79949	25·46612
42	35·91371	35·02045	34·15811	33·32546	32·52132	31·74454	30·99405	30·26880	29·56780	28·89010	28·23479	25·82061
43	36·63892	35·70800	34·81001	33·94600	33·10748	32·30041	31·52123	30·76881	30·04207	29·33998	28·66156	26·16645
44	37·35873	36·38959	35·45545	34·55485	33·68640	32·84874	32·04062	31·26082	30·50817	29·78157	29·07996	26·50385
45	38·07318	37·06527	36·09451	35·15931	34·25817	33·38964	32·55234	31·74496	30·96626	30·21504	29·49016	26·83302
46	38·78231	37·73509	36·72724	35·75705	34·82288	33·92319	33·05649	32·22137	31·41647	30·64053	29·89231	27·15417
47	39·48617	38·39910	37·35370	36·34813	35·38062	34·44951	33·55319	32·69015	31·85894	31·05819	30·28658	27·46748
48	40·18478	39·05734	37·97396	36·93264	35·93148	34·96869	34·04255	33·15144	32·29380	31·46816	30·67312	27·77315
49	40·87820	39·70988	38·58808	37·51064	36·47554	35·48083	34·52468	33·60535	32·72118	31·87059	31·05208	28·07137
50	41·56645	40·35676	39·19612	38·08222	37·01288	35·98602	34·99969	34·05201	33·14121	32·26561	31·42361	28·36231

No. of Years.	3 per cent.	3½ per cent.	4 per cent.	5 per cent.	6 per cent.	7 per cent.	8 per cent.	9 per cent.	10 per cent.	12 per cent.	15 per cent.
1	0·97087	0·96618	0·96154	0·95238	0·94340	0·93458	0·92593	0·91743	0·90909	0·89286	0·86957
2	1·91347	1·89969	1·88609	1·85941	1·83339	1·80802	1·78326	1·75911	1·73554	1·69005	1·62571
3	2·82861	2·80164	2·77509	2·72325	2·67301	2·62432	2·57710	2·53129	2·48685	2·40183	2·28323
4	3·71710	3·67308	3·62990	3·54595	3·46511	3·38721	3·31213	3·23972	3·16987	3·03735	2·85498
5	4·57971	4·51505	4·45182	4·32948	4·21236	4·10020	3·99271	3·88965	3·79079	3·60478	3·35216
6	5·41719	5·32855	5·24214	5·07569	4·91732	4·76654	4·62288	4·48592	4·35526	4·06131	3·78448
7	6·23028	6·11454	6·00205	5·78637	5·58238	5·38929	5·20637	5·03295	4·86842	4·56376	4·16042
8	7·01969	6·87396	6·73274	6·46321	6·20979	5·97130	5·74664	5·53482	5·33493	4·96764	4·48732
9	7·78611	7·60769	7·43533	7·10782	6·80169	6·51523	6·24689	5·99525	5·75902	5·32825	4·77158
10	8·53020	8·31661	8·11090	7·72173	7·36009	7·02358	6·71008	6·41766	6·14457	5·65022	5·01877
11	9·25262	9·00155	8·76048	8·30641	7·88687	7·49867	7·13896	6·80519	6·49506	5·93770	5·23371
12	9·95400	9·66333	9·38507	8·86325	8·38384	7·94269	7·53608	7·16073	6·81369	6·19437	5·42062
13	10·63496	10·30274	9·98565	9·39357	8·85268	8·35765	7·90378	7·48690	7·10336	6·42355	5·58315
14	11·29607	10·92052	10·56312	9·89864	9·29498	8·74547	8·24424	7·78615	7·36669	6·62817	5·72448

ANNUITY TABLE—*continued.*

No. of Years.	3 per cent.	3½ per cent.	4 per cent.	5 per cent.	6 per cent.	7 per cent.	8 per cent.	9 per cent.	10 per cent.	12 per cent.	15 per cent.
15	11·93794	11·51741	11·11839	10·37966	9·71225	9·10791	8·55948	8·06069	7·60608	6·81086	5·84737
16	12·56110	12·03412	11·65230	10·83777	10·10590	9·44665	8·85137	8·31256	7·82371	6·97399	5·95423
17	13·16612	12·65132	12·16567	11·27407	10·47726	9·76322	9·12164	8·54363	8·02155	7·11963	6·04716
18	13·75351	13·18968	12·65930	11·68959	10·82760	10·05909	9·37189	8·75563	8·20141	7·24967	6·12797
19	14·32380	13·70984	13·13394	12·08532	11·15812	10·33560	9·60360	8·95011	8·36492	7·36578	6·19823
20	14·87747	14·21240	13·59033	12·46221	11·46992	10·59401	9·81815	9·12855	8·51356	7·46944	6·25933
21	15·41502	14·69797	14·02916	12·82115	11·76408	10·83553	10·01680	9·29224	8·64869	7·56200	6·31246
22	15·93692	15·16712	14·45112	13·16300	12·04158	11·06124	10·20074	9·44243	8·77154	7·64465	6·35866
23	16·44361	15·62041	14·85684	13·48857	12·30338	11·27219	10·37106	9·58021	8·88322	7·71843	6·39884
24	16·93554	16·05837	15·24696	13·79864	12·55036	11·46933	10·52876	9·70661	8·98474	7·78432	6·43377
25	17·41315	16·48151	15·62208	14·09394	12·78336	11·65358	10·67478	9·82258	9·07704	7·84314	6·46415
26	17·87684	16·89035	15·98277	14·37519	13·00317	11·82578	10·80998	9·92897	9·16095	7·89566	6·49056
27	18·32703	17·28536	16·32959	14·64303	13·21053	11·98671	10·93516	10·02658	9·23722	7·94255	6·51353
28	18·76411	17·66702	16·66306	14·89813	13·40616	12·13711	11·05108	10·11613	9·30657	7·98422	6·53351
29	19·18845	18·03577	16·98371	15·14107	13·59072	12·27767	11·15841	10·19828	9·36961	8·02181	6·55088
30	19·60044	18·39205	17·29203	15·37245	13·76483	12·40904	11·25778	10·27365	9·42691	8·05518	6·56598
31	20·00043	18·73628	17·58849	15·59281	13·92909	12·53181	11·34980	10·34280	9·47901	8·08499	6·57911
32	20·38877	19·06887	17·87355	15·80268	14·08404	12·64656	11·43500	10·40624	9·52638	8·11159	6·59053
33	20·76579	19·39021	18·14765	16·00255	14·23023	12·75379	11·51389	10·46444	9·56943	8·13535	6·60046
34	21·13184	19·70068	18·41120	16·19290	14·36814	12·85401	11·58693	10·51784	9·60857	8·15656	6·60910
35	21·48722	20·00066	18·66461	16·37419	14·49825	12·94767	11·65457	10·56682	9·64416	8·17550	6·61661
36	21·83225	20·29049	18·90828	16·54685	14·62099	13·03521	11·71719	10·61176	9·67651	8·19241	6·62314
37	22·16724	20·57053	19·14258	16·71129	14·73678	13·11702	11·77518	10·65299	9·70592	8·20751	6·62881
38	22·49246	20·84109	19·36786	16·86789	14·84602	13·19347	11·82887	10·69082	9·73265	8·22099	6·63375
39	22·80822	21·10250	19·58448	17·01704	14·94907	13·26493	11·87858	10·72552	9·75696	8·23303	6·63805
40	23·11477	21·35507	19·79277	17·15909	15·04630	13·33171	11·92461	10·75736	9·77905	8·24378	6·64178
41	23·41240	21·59910	19·99305	17·29437	15·13802	13·39412	11·96723	10·78657	9·79914	8·25337	6·64502
42	23·70136	21·83488	20·18563	17·42321	15·22454	13·45245	12·00670	10·81337	9·81740	8·26194	6·64785
43	23·98190	22·06269	20·37079	17·54591	15·30617	13·50696	12·04324	10·83795	9·83400	8·26959	6·65030
44	24·25427	22·28279	20·54884	17·66277	15·38318	13·55791	12·07707	10·86051	9·84909	8·27642	6·65244
45	24·51871	22·49545	20·72004	17·77407	15·45583	13·60552	12·10840	10·88120	9·86281	8·28252	6·65429
46	24·77545	22·70092	20·88465	17·88007	15·52437	13·65002	12·13741	10·90018	9·87528	8·28796	6·65591
47	25·02471	22·89944	21·04294	17·98102	15·58903	13·69161	12·16427	10·91760	9·88662	8·29282	6·65731
48	25·26671	23·09124	21·19513	18·07716	15·65003	13·73047	12·18914	10·93358	9·89693	8·29716	6·65853
49	25·50166	23·27656	21·34147	18·16872	15·70757	13·76680	12·21216	10·94823	9·90630	8·30104	6·65959
50	25·72976	23·45562	21·48218	18·25593	15·76186	13·80075	12·23348	10·96168	9·91481	8·30450	6·66051

(*Henry Louis.*)

SINKING FUND TABLE.

Showing Annual Amount to be set aside at the *end* of each year and accumulated at Compound Interest, in order to provide 100*l.* at the end of a given number of Years.

Years. (*n*)	(R) 3½ per cent.	4 per cent.	4½ per cent.	5 per cent.	5½ per cent.	6 per cent.	Years. (*n*)
	(A) £	£	£	£	£	£	
1	100·000	100·000	100·000	100·000	100·000	100·000	1
2	49·140	49·019	48·900	48·780	48·675	48·544	2
3	32·193	32·035	31·877	31·721	31·573	31·411	3
4	23·725	23·549	23·374	23·201	23·031	22·859	4
5	18·648	18·463	18·279	18·097	17·916	17·740	5
6	15·267	15·076	14·888	14·702	15·829	14·336	6
7	12·854	12·661	12·470	12·282	12·096	11·914	7
8	11·047	10·853	10·661	10·472	10·288	10·104	8
9	9·644	9·449	9·257	9·069	8·884	8·702	9
10	8·524	8·329	8·138	7·950	7·768	7·587	10
11	7·609	7·415	7·225	7·039	6·858	6·679	11
12	6·848	6·655	6·466	6·282	6·103	5·928	12
13	6·206	6·014	5·827	5·645	5·469	5·296	13
14	5·657	5·467	5·282	5·102	4·928	4·759	14
15	5·182	4·994	4·811	4·634	4·463	4·296	15
16	4·768	4·582	4·401	4·227	4·058	3·895	16
17	4·404	4·220	4·042	3·870	3·705	3·545	17
18	4·081	3·899	3·724	3·554	3·392	3·236	18
19	3·794	3·614	3·441	3·274	3·115	2·962	19
20	3·536	3·358	3·187	3·024	2·868	2·719	20
21	3·303	3·128	2·960	2·799	2·647	2·501	21
22	3·093	2·920	2·754	2·597	2·447	2·305	22
23	2·902	2·731	2·568	2·414	2·272	2·128	23
24	2·727	2·559	2·399	2·247	2·104	1·968	24
25	2·567	2·401	2·244	2·095	1·955	1·823	25
26	2·420	2·257	2·102	1·956	1·820	1·690	26
27	2·285	2·124	1·972	1·829	1·695	1·570	27
28	2·160	2·001	1·852	1·712	1·582	1·459	28
29	2·044	1·888	1·741	1·604	1·477	1·358	29
30	1·937	1·783	1·639	1·505	1·381	1·265	30
31	1·837	1·685	1·544	1·413	1·292	1·179	31
32	1·744	1·595	1·456	1·328	1·210	1·100	32
33	1·657	1·510	1·374	1·249	1·134	1·027	33
34	1·576	1·431	1·298	1·175	1·063	·960	34
35	1·500	1·358	1·227	1·107	·998	·897	35
36	1·428	1·289	1·160	1·043	·937	·840	36
37	1·361	1·224	1·098	0·984	·880	·786	37
38	1·298	1·163	1·040	·928	·827	·736	38
39	1·239	1·106	0·985	·876	·778	·689	39
40	1·183	1·052	·934	·828	·732	·646	40
41	1·130	1·002	·886	·782	·689	·606	41
42	1·080	0·954	·841	·739	·649	·568	42
43	1·032	·909	·798	·699	·611	·533	43
44	0·988	·866	·758	·661	·576	·501	44
45	·945	·826	·720	·626	·543	·470	45
46	·905	·788	·684	·593	·512	·442	46
47	·867	·752	·651	·561	·483	·415	47
48	·830	·718	·619	·532	·456	·390	48
49	·796	·686	·589	·504	·430	·366	49
50	·763	·655	·560	·477	·406	·344	50
51	·732	·626	·533	·453	·384	·324	51
52	·702	·598	·508	·429	·362	·305	52
53	·674	·572	·483	·407	·342	·287	53

SINKING FUND TABLE—*continued.*

Years. (*n*)	(R) 3½ per cent.	4 per cent.	4½ per cent.	5 per cent.	5½ per cent.	6 per cent.	Years. (*n*)
	(A)						
	£	£	£	£	£	£	
54	0·647	0·547	0·460	0·387	0·323	0·270	54
55	·621	·523	·439	·366	·305	·254	55
56	·597	·500	·418	·348	·289	·239	56
57	·573	·479	·398	·330	·273	·225	57
58	·551	·458	·380	·313	·258	·212	58
59	·529	·439	·362	·298	·244	·199	59
60	·509	·420	·345	·283	·231	·188	60
61	·489	·402	·329	·268	·218	·177	61
62	·470	·385	·314	·255	·206	·166	62
63	·452	·369	·300	·242	·195	·157	63
64	·435	·354	·286	·230	·185	·148	64
65	·419	·339	·273	·219	·175	·139	65
66	·403	·325	·260	·208	·165	·131	66
67	·388	·311	·249	·198	·157	·124	67
68	·373	·298	·237	·188	·148	·116	68
69	·359	·286	·227	·179	·140	·110	69
70	·346	·274	·216	·170	·133	·103	70
72	·321	·252	·197	·153	·119	·092	72
74	·298	·232	·180	·139	·107	·082	74
76	·276	·214	·164	·126	·096	·073	76
78	·257	·197	·150	·114	·087	·064	78
80	·238	·181	·137	·103	·077	·057	80
82	·221	·167	·125	·093	·069	·051	82
84	·206	·154	·114	·084	·062	·045	84
86	·191	·142	·104	·076	·056	·040	86
88	·178	·131	·095	·069	·050	·036	88
90	·166	·121	·087	·063	·045	·032	90
92	·154	·111	·080	·057	·040	·028	92
94	·143	·103	·073	·051	·036	·025	94
96	·134	·095	·067	·046	·032	·022	96
98	·124	·087	·061	·042	·029	·020	98
100	·116	·081	·056	·038	·026	·018	100

Example :—

Required the amount which should be set aside at the end of each year to form a Fund, at 4 per cent. interest, to replace, in 20 years, 5,000*l.* expended in the installation of electric light plant.

$$\text{Annual amount} = \frac{5{,}000l.}{100} \times 3{\cdot}358 = 167{\cdot}9l. = 167l.\ 18s.$$

Formula :—

$$A = \frac{R}{\left(1 + \frac{R}{100}\right)^{n} - 1},$$

where,

A = amount; R = rate per cent. per annum; n = number of years.

If the annual amount to be set aside at the *beginning* of each year is required, then the formula is :—


$$A = \frac{R}{\left(1 + \frac{R}{100}\right)^{n} - 1} \times \frac{100}{100 + R} = \frac{R}{\left(1 + \frac{R}{100}\right)^{n+1} - \left(1 + \frac{R}{100}\right)}$$

Present Value Table.

Present value of £1 due at the end of any one of a given number of years at various rates of interest per cent.

No. of Years.	1½ per cent.	1¾ per cent.	2 per cent.	2½ per cent.	3 per cent.	3½ per cent.	4 per cent.	4½ per cent.
1	0·98522	0·98280	0·98039	0·97561	0·97087	0·96618	0·96154	0·95694
2	0·97066	0·96590	0·96117	0·95181	0·94260	0·93351	0·92456	0·91573
3	0·95632	0·94929	0·94232	0·92860	0·91514	0·90194	0·88900	0·87630
4	0·94218	0·93296	0·92385	0·90595	0·88849	0·87144	0·85480	0·83856
5	0·92826	0·91691	0·90573	0·88385	0·86261	0·84197	0·82193	0·80245
6	0·91454	0·90114	0·88797	0·86230	0·83748	0·81350	0·79031	0·76790
7	0·90103	0·88564	0·87056	0·84127	0·81309	0·78599	0·75992	0·73483
8	0·88771	0·87041	0·85349	0·82075	0·78941	0·75941	0·73069	0·70319
9	0·87459	0·85544	0·83676	0·80073	0·76642	0·73373	0·70259	0·67290
10	0·86167	0·84073	0·82035	0·78120	0·74409	0·70892	0·67556	0·64393
11	0·84893	0·82627	0·80426	0·76214	0·72242	0·68495	0·64958	0·61620
12	0·83639	0·81206	0·78849	0·74356	0·70138	0·66178	0·62460	0·58966
13	0·82403	0·79809	0·77303	0·72542	0·68095	0·63940	0·60057	0·56427
14	0·81185	0·78436	0·75788	0·70773	0·66112	0·61778	0·57748	0·53997
15	0·79985	0·77087	0·74301	0·69047	0·64186	0·59689	0·55526	0·51672
16	0·78803	0·75762	0·72845	0·67362	0·62317	0·57671	0·53391	0·49447
17	0·77639	0·74459	0·71416	0·65720	0·60502	0·55720	0·51337	0·47318
18	0·76491	0·73178	0·70016	0·64117	0·58739	0·53836	0·49363	0·45280
19	0·75361	0·71919	0·68643	0·62553	0·57029	0·52016	0·47464	0·43330
20	0·74247	0·70682	0·67297	0·61028	0·55368	0·50257	0·45639	0·41464
21	0·73150	0·69467	0·65978	0·59539	0·53755	0·48557	0·43883	0·39679
22	0·72069	0·68272	0·64684	0·58086	0·52189	0·46915	0·42196	0·37970
23	0·71004	0·67098	0·63416	0·56670	0·50669	0·45329	0·40573	0·36335
24	0·69954	0·65944	0·62172	0·55288	0·49193	0·43796	0·39012	0·34770
25	0·68921	0·64810	0·60953	0·53939	0·47761	0·42315	0·37512	0·33273

No. of Years.	5 per cent.	6 per cent.	7 per cent.	8 per cent.	9 per cent.	10 per cent.	12 per cent.	15 per cent.
1	0·95238	0·94340	0·93458	0·92593	0·91743	0·90910	0·89286	0·86957
2	0·90703	0·89000	0·87344	0·85734	0·84168	0·82645	0·79719	0·75614
3	0·86384	0·83962	0·81630	0·79383	0·77218	0·75131	0·71178	0·65752
4	0·82270	0·79209	0·76290	0·73503	0·70843	0·68301	0·63552	0·57175
5	0·78353	0·74726	0·71299	0·68058	0·64993	0·62092	0·56743	0·49718
6	0·74622	0·70496	0·66634	0·63017	0·59627	0·56447	0·50663	0·43233
7	0·71068	0·66506	0·62275	0·58349	0·54703	0·51316	0·45235	0·37594
8	0·67684	0·62741	0·58201	0·54027	0·50187	0·46651	0·40388	0·32690
9	0·64461	0·59190	0·54393	0·50025	0·46043	0·42410	0·36061	0·28426
10	0·61391	0·55839	0·50835	0·46319	0·42241	0·38554	0·32197	0·24719
11	0·58468	0·52679	0·47509	0·42888	0·38753	0·35049	0·28748	0·21494
12	0·55684	0·49697	0·44401	0·39711	0·35553	0·31863	0·25668	0·18691
13	0·53032	0·46884	0·41496	0·36770	0·32618	0·28966	0·22917	0·16253
14	0·50507	0·44230	0·38782	0·34046	0·29925	0·26333	0·20462	0·14133
15	0·48102	0·41727	0·36245	0·31524	0·27454	0·23939	0·18270	0·12289
16	0·45811	0·39365	0·33873	0·29189	0·25187	0·21763	0·16312	0·10686
17	0·43630	0·37136	0·31657	0·27027	0·23107	0·19784	0·14564	0·09293
18	0·41552	0·35034	0·29586	0·25025	0·21199	0·17986	0·13004	0·08081
19	0·39573	0·33051	0·27651	0·23171	0·19449	0·16351	0·11611	0·07027
20	0·37689	0·31180	0·25842	0·21455	0·17843	0·14864	0·10367	0·06110
21	0·35894	0·29416	0·24151	0·19866	0·16370	0·13513	0·09256	0·05313
22	0·34185	0·27751	0·22571	0·18394	0·15018	0·12285	0·08264	0·04620
23	0·32557	0·26180	0·21095	0·17032	0·13778	0·11168	0·07379	0·04017
24	0·31007	0·24698	0·19715	0·15770	0·12640	0·10153	0·06588	0·03493
25	0·29530	0·23300	0·18425	0·14602	0·11597	0·09230	0·05882	0·03038

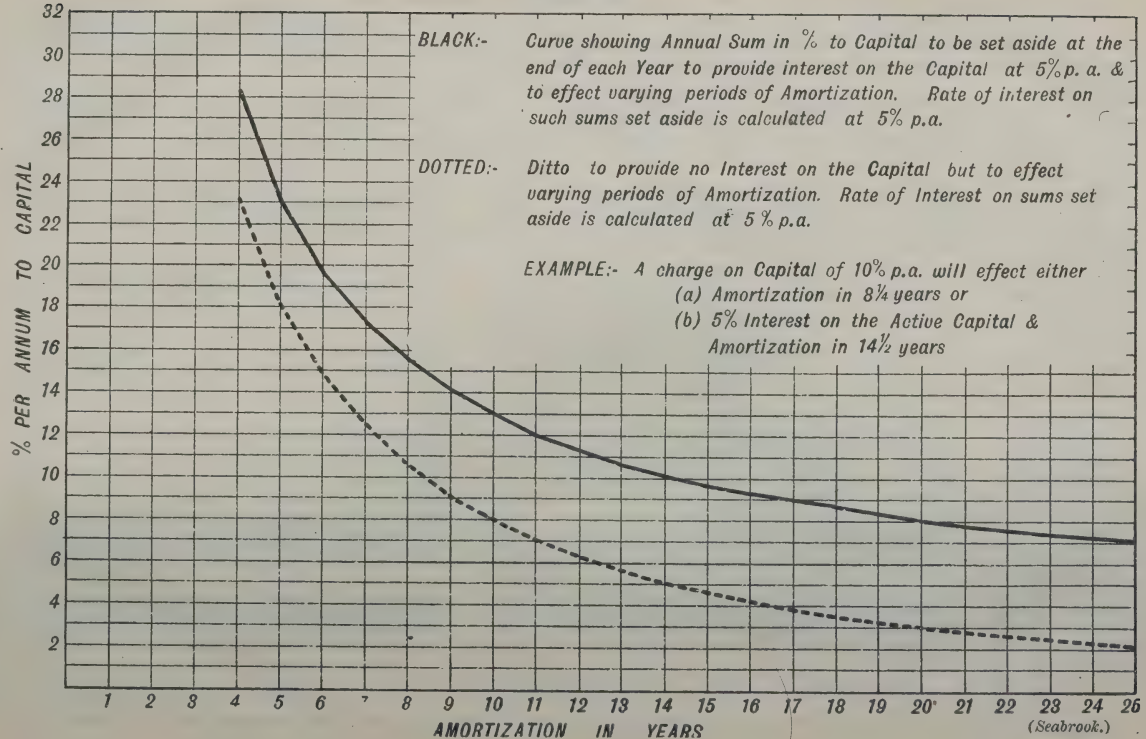
BLACK:- Curve showing Annual Sum in % to Capital to be set aside at the end of each Year to provide interest on the Capital at 5% p. a. & to effect varying periods of Amortization. Rate of interest on such sums set aside is calculated at 5% p.a.
DOTTED:- Ditto to provide no Interest on the Capital but to effect varying periods of Amortization. Rate of Interest on sums set aside is calculated at 5 % p.a.
EXAMPLE:- A charge on Capital of 10% p.a. will effect either
(a) Amortization in 8¼ years or
(b) 5% Interest on the Active Capital & Amortization in 14½ years
% PER ANNUM TO CAPITAL
32 30 28 26 24 22 20 18 16 14 12 10 8 6 4 2
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26
AMORTIZATION IN YEARS
(Seabrook.)

Binomial Theorem and Series.

This theorem is exceedingly useful in many algebraical operations, particularly in finding the terms of an infinite quotient; it enables the mechanical labour of multiplication in working out the expansion of an expression of the form $(a+b)^n$ to be greatly abridged.

$$(a+b)^n = a^n + na^{n-1}b + \frac{n(n-1)}{1.2}a^{n-2}b^2 + \frac{n(n-1)(n-2)}{1.2.3}a^{n-3}b^3 + \&c.$$

$$(1+x)^n = 1 + nx + \frac{n(n-1)}{1.2}x^2 + \frac{n(n-1)(n-2)}{1.2.3}x^3 + \&c.$$

$$\left(1+\frac{1}{n}\right)^n = e, \text{ if } n \text{ is very large.} \qquad e = 2{\cdot}71828.$$

$$\frac{1}{1+x} = 1 - x + x^2 - x^3 + x^4 - x^5 + \&c.$$

$$\log_e x = x - 1 - \tfrac{1}{2}(x-1)^2 + \tfrac{1}{3}(x-1)^3 - \tfrac{1}{4}(x-1)^4 + \&c.$$

$$\log(1+x) = x - \frac{x^2}{2} + \frac{x^3}{3} - \frac{x^4}{4} + \&c.$$

$$a^x = 1 + Ax + \frac{A^2x^2}{1.2} + \frac{A^3x^3}{1.2.3} + \frac{A^4x^4}{1.2.3.4} + \&c.,$$

where $A = \log_e a$.

Also,

$$a^x = 1 + x\left\{a - 1 - \tfrac{1}{2}(a-1)^2 + \tfrac{1}{3}(a-1)^3 - \tfrac{1}{4}(a-1)^4 + \&c.\right\}.$$

$$e^x = 1 + x + \frac{x^2}{1.2} + \frac{x^3}{1.2.3} + \frac{x^4}{1.2.3.4} + \&c.$$

$$\sin h = h - \frac{h^3}{1.2.3} + \frac{h^5}{1.2.3.4.5} - \frac{h^7}{1.2.3.4.5.6.7} + \&c.$$

$$\cos h = 1 - \frac{h^2}{1.2} + \frac{h^4}{1.2.3.4} - \frac{h^6}{1.2.3.4.5.6} + \&c.$$

Square Root.

To find $\sqrt{N}$ when N is very nearly a square :—

$$\text{If } N = a^2 + x, \ \sqrt{N} = a + \frac{x}{2a}, \text{ if } x \text{ is small and } a \text{ great.}$$

From which we obtain this practical rule :—'Having found the square root of the integer part of a number, consisting partly of integers and partly of decimals, the remainder of the root may be found by dividing $N - a^2$, *i.e.* x, by $2a$.'

EXAMPLE.—Find the square root of 124·25.

$$\text{Here } N = 121 + 3{\cdot}25 = a^2 + 3{\cdot}25 \ ; \ \therefore a = 11.$$

$$\frac{x}{2a} = \frac{3{\cdot}25}{22} = {\cdot}14. \quad \therefore \ \sqrt{N} = 11{\cdot}14.$$

Again, if $N = a^n + b$, and $\sqrt[n]{N}$ be required, then

$$\sqrt[n]{N} = a\left\{1 + \frac{b}{na^n} - \frac{n-1}{2n^2}\cdot\frac{b^2}{a^{2n}} + \frac{(n-1)(2n-1)}{1.2.3n^3}\cdot\frac{b^3}{a^{3n}} + \&c.\right\}.$$

EXAMPLE.—Find the 5th root of 35.

$$\text{Here } N = 35 = 32 + 3 = 2^5\left(1 + \frac{3}{2^5}\right);$$

$$\therefore \ a = 2, \ b = 3, \ n = 5.$$

$$\therefore \ \sqrt[5]{35} = 2\left\{1 + \frac{3}{5 \times 32} - \frac{4 \cdot 3^2}{2 \times 5^2 \times (32)^2} + \frac{4 \cdot 3 \cdot 3^3}{2 \times 3 \times 5^3 \times (32)^3} - \&c.\right\}.$$

Permutations.

The different arrangements that can be made of any number of quantities are called *Permutations.*

If ${}^nV_r$ represent the variations of n things taken r together,

$${}^nV_r = n(n-1)(n-2)(n-3) \ \ldots \ (n-r+1).$$

The number of *permutations* of n things (all different), *i.e.*, of n things taken *all* together, is equal to the product of the first n digits.

Combinations.

The different collections that can be made of any number of things, without regard to their order, are called *combinations*.

If ${}^nC_r$ be the number of combinations of n things taken r together, then

$$ {}^nC_r = \frac{n(n-1)(n-2)\ \ldots\ \{n-(r-1)\}}{1.2.3\qquad\qquad r}. $$

The number of combinations of n things taken r together equals the number of combinations of n things taken $(n-r)$ together.

Miscellaneous.

$a^0 = 1.$ $\quad \frac{a}{0} = \infty.$ $\quad \log_a a = 1.$ $\quad$ If $a^x = b$, $x = \frac{\log b}{\log a}.$ $\quad$ If $e^x = b$, $x = \log_e b.$

DIFFERENTIAL AND INTEGRAL CALCULUS.

DIFFERENTIAL CALCULUS.

General Formulæ.

Differential Coefficient of a Simple Function :— $\quad u = x^n + c \qquad \frac{du}{dx} = nx^{n-1}.$

If $u = az$, where z is a function of x, and a is a constant,

$$ \frac{du}{dx} = a\frac{dz}{dx}. $$

Differential Coefficient of a Product :—The differential coefficient of the product of the functions equals the sum of the products of each function into the differential coefficient of the other.

$$ u = zv \qquad \frac{du}{dx} = z\frac{dv}{dx} + v\frac{dz}{dx}. $$

Differential Coefficient of a Quotient :— $\quad u = \frac{z}{v} \qquad \frac{du}{dx} = \frac{1}{v^2}\left\{ v\frac{dz}{dx} - z\frac{dv}{dx} \right\}.$

$u = z^n \qquad \frac{du}{dx} = nz^{n-1}\frac{dz}{dx}.$ $\qquad u = (a^2 + x^2)^n \qquad \frac{du}{dx} = n(a^2 + x^2)^{n-1}2x.$

Differential Coefficient of a Square Root.—The differential coefficient of the square root of any quantity is equal to the differential of the quantity under the square root divided by twice the square root of the quantity itself.

$$ u = \sqrt{a + bx + cx^2} \qquad \frac{du}{dx} = \frac{b + 2cx}{2\sqrt{a + bx + cx^2}}. $$

$u = x(a - x) \qquad \frac{du}{dx} = a - 2x.$ $\qquad u = \frac{x}{\sqrt{1 + x^2}} \qquad \frac{du}{dx} = \frac{1}{(1 + x^2)^{\frac{3}{2}}}.$

$u = \sqrt{\frac{1 - \sqrt{x}}{1 + \sqrt{x}}} \qquad \frac{du}{dx} = -\frac{1}{2(1 + \sqrt{x})\sqrt{x - x^2}}.$ $\qquad u = (1 + x)\sqrt{1 - x^2} \qquad \frac{du}{dx} = \frac{1 - x - 2x^2}{\sqrt{1 - x^2}}.$

Angular Functions.

$u = \sin x \qquad \frac{du}{dx} = \cos x.$ $\qquad u = \cos x \qquad \frac{du}{dx} = -\sin x.$

$u = \tan x \qquad \frac{du}{dx} = 1 + \tan^2 x = \sec^2 x = \frac{1}{\cos^2 x}.$

$u = \sec x \qquad \frac{du}{dx} = \tan x \sec x.$ $\qquad u = \text{versin } x \qquad \frac{du}{dx} = \sin x.$

$u = \cot x \qquad \frac{du}{dx} = -(1 + \cot^2 x) = \frac{1}{\sin^2 x} = -\text{cosec}^2 x$

$u = \text{cosec } x \qquad \frac{du}{dx} = -\cot x \text{ cosec } x.$

$u = \sin z \qquad \frac{du}{dx} = \cos z\frac{dz}{dx}$ $\qquad u = \cos z \qquad \frac{du}{dx} = -\sin z\frac{dz}{dx}$; and so on.

EXAMPLE.—Find that angle (x) which increases twice as fast as its sine.

Let $u = \sin x$; $du = \cos x \,.\, dx$.

But $du = \frac{1}{2}dx$; therefore $\cos x = \frac{1}{2}$; therefore $x = 60°$.

$u = \sin^{-1}x \quad \frac{du}{dx} = \frac{1}{\sqrt{1-x^2}}$. $\quad u = \cos^{-1}x \quad \frac{du}{dx} = -\frac{1}{\sqrt{1-x^2}}$. $\quad u = \tan^{-1}x \quad \frac{du}{dx} = \frac{1}{1+x^2}$.

$u = \sin^{-1}x \quad \frac{du}{dx} = \frac{1}{x\sqrt{x^2-1}}$. $\quad u = \cot^{-1}x \quad \frac{du}{dx} = -\frac{1}{1+x^2}$. $\quad u = \operatorname{cosec}^{-1}x \quad \frac{du}{dx} = -\frac{1}{x\sqrt{x^2-1}}$.

$u = \operatorname{versin}^{-1}x \quad \frac{du}{dx} = \frac{1}{\sqrt{2x-x^2}}$.

$u = \sin^{-1}\frac{x}{a} \quad \frac{du}{dx} = \frac{1}{\sqrt{a^2-x^2}}$. $\quad u = \cos^{-1}\frac{x}{a} \quad \frac{du}{dx} = -\frac{1}{\sqrt{a^2-x^2}}$. $\quad u = \tan^{-1}\frac{x}{a} \quad \frac{du}{dx} = \frac{a}{\sqrt{a^2-x^2}}$.

$u = \sin^{-1}z \quad \frac{du}{dx} = \frac{\frac{dz}{dx}}{\sqrt{1-z^2}}$,

and so on.

Exponential and Logarithmic Functions.

$u = a^x \quad \frac{du}{dx} = \mathrm{A}a^x$, where $\mathrm{A} = \log_e a$, $\qquad u = e^x \quad \frac{du}{dx} = e^x$,

$u = \log_a x \quad \frac{du}{dx} = \frac{1}{\mathrm{A}} \cdot \frac{1}{x}$, $\qquad u = \log_e x \quad \frac{du}{dx} = \frac{1}{x}$,

or the differential coefficient of the logarithm of a function equals the differential coefficient of the function divided by the function itself.

$u = \log_a z \quad \frac{du}{dx} = \frac{1}{\mathrm{A}} \cdot \frac{1}{z} \cdot \frac{dz}{dx}$ $\qquad u = \frac{e^x - e^{-x}}{e^x + e^{-x}} \quad \frac{du}{dx} = \frac{4}{(e^x + e^{-x})^2}$.

$u = x^x \quad \frac{du}{dx} = x^x(1 + \log_e x)$. $\qquad u = x^{\frac{1}{x}} \quad \frac{du}{dx} = \frac{x^{\frac{1}{x}}}{x^2}\log_e\left(\frac{e}{x}\right)$.

Maxima and Minima.

To find the maximum or minimum value of x in an expression differentiate and equate to zero.

EXAMPLE 1.—If $u = x(a - x)$, to find the value of x which makes $x(a - x)$ a maximum.

$$u = x(a-x) = ax - x^2; \quad \frac{du}{dx} = a - 2x = 0 \text{ at a maximum;}$$

therefore

$$a = 2x, \quad \text{or } x = \frac{a}{2}.$$

EXAMPLE 2.—To determine the proportions of a beam of rectangular section which will give the greatest *moment of resistance*.

Let b = breadth of beam, x = depth of beam.

Put $b + x = n$, or, $b = n - x$.

The moment of resistance, u, of the beam is

$$u = bx^2,$$
$$u = (n - x)x^2 = nx^2 - x^3;$$

$$u = bx^2,$$
$$u = (h - x)x^2 = nx^2 - x^3;$$

to obtain the value of x, which makes u a minimum, we have

$$\frac{du}{dx} = 2nx - 3x^2 = 0; \text{ therefore } 2n = 3x;$$

or, since $n = b + x$, therefore $2b + 2x = 3x$;

that is $2b = x$, or, $b = \frac{x}{2}$.

If it is not known whether the expression has a maximum or a minimum, to find whether $u = f(x)$ contains any maxima or minima, put $\frac{du}{dx} = 0$, substitute the values of x thus found in $\frac{d^2u}{dx^2}$; if the result be positive, there are minima; if negative, maxima.

Functions of Two Variables.

$$u = x^m y^n \qquad \frac{du}{dx} = x^{m-1}y^{n-1}(mydx + nzdy).$$

Curves.

Differential Coefficient of Area of Curve.

$$\frac{dA}{dx} = y.$$

Differential Coefficient of Length of Curve.

$$\frac{ds}{dx} = \sqrt{1 + \frac{dy^2}{dx^2}}.$$

Differential Coefficient of Length of Tangent to any Curve.

$$\frac{dt}{dx} = y\sqrt{1 + \frac{dx^2}{dy^2}}.$$

Differential Coefficient of Surface of Solid.

$$\frac{dS}{dx} = 2\pi y\sqrt{1 + \frac{dy^2}{dx^2}} = 2\pi y\frac{ds}{dx}.$$

INTEGRAL CALCULUS.

General Formulæ.

Integral of a Simple Function.

$$\int ax^m dx = \frac{a}{m+1} \cdot x^{m+1} + C. \qquad \int ax^{-1} = a \log_e x + C.$$

$$\int \frac{dz}{\frac{dx}{x^z}} = \int \frac{dz}{dx} \cdot x^{-z} = \log z + C,$$

or, if there be a fraction in which the numerator is the derivative of the denominator, the integral is the logarithm of the denominator.

$$\int \left\{ \frac{dp}{dx} + \frac{dq}{dx} + \frac{dr}{dx} + \text{\&c.} \right\} = \int \frac{d}{dx}(p + q + r + \text{\&c.})dx = p + q + r + \text{\&c.},$$

or, the integral of the sum of any number of differential coefficients = sum of the integrals of each differential coefficient.

$$\int z^m dx \cdot \frac{dz}{dx} = \frac{z^{m+1}}{m+1} + C,$$

or, increase the index by unity, divide by the index so increased, and by the differential coefficient of the quantity under the index.

$$\int \frac{dx}{a + bx^2} = \frac{1}{\sqrt{ab}} \tan^{-1}\left(x\sqrt{\frac{b}{a}}\right). \qquad \int \frac{x}{\sqrt{a^2 - x^2}} dx = -\sqrt{a^2 - x^2}.$$

$$\int \frac{dx}{\sqrt{a^2 - x^2}} = \sin^{-1}\frac{x}{a}. \qquad \int \frac{-dx}{\sqrt{a^2 - x^2}} = \cos^{-1}\frac{x}{a}.$$

$$\int \frac{adx}{x^2 - a^2} = \frac{1}{2}\log_e\left(\frac{x-a}{x+a}\right). \qquad \int a^x dx = \frac{a^x}{\log_e a}. \qquad \int \frac{dx}{x - x^2} = \log_e \frac{x}{1-x}.$$

$$\int e^{ax}dx = \frac{e^{ax}}{a}. \qquad \int \frac{d\theta}{\sin\theta} = \log_e \tan\frac{\theta}{2}. \qquad \int \frac{d\theta}{\cos\theta} = \log_e \tan\left\{\frac{\pi}{4} + \frac{\theta}{2}\right\}.$$

$$\int \frac{d\theta}{\sin\theta\cos\theta} = \log\tan\theta. \qquad \int \frac{dx}{1+x+x^2} = \frac{2}{\sqrt{3}}\tan^{-1}\left\{\frac{2x+1}{\sqrt{3}}\right\} \text{ (a useful integral).}$$

$$\int \frac{4dx}{(x+4)^2} = \frac{-4}{x+4}. \qquad \int \frac{dx}{(x+2)^2} = \frac{-1}{x+2}. \qquad \int \frac{2xdx}{(x^2+1)(x^2+3)} = \log_e \sqrt{\frac{x^2+1}{x^2+3}}.$$

$$\int \frac{dx}{1+3x+2x^2} = \log_e \frac{2x+1}{x+1}. \qquad \int \frac{dx}{x(x^3+1)} = \log \sqrt[3]{\frac{x^3}{x^3+1}}.$$

$$\int \frac{dx}{x\sqrt{x+a}} = \frac{2}{\sqrt{a}}\log_e \frac{\sqrt{x}}{\sqrt{a+x}+\sqrt{a}}. \qquad \int \frac{dx}{\sqrt{1+x-x^2}} = \sin^{-1}\frac{2x-1}{\sqrt{5}}.$$

$$\int \frac{dx}{x\sqrt{1+x+x^2}} = \log_e \frac{2+x-2\sqrt{1+x+x^2}}{-3x}. \qquad \int \frac{x^2dx}{\sqrt{a^2-x^2}} = \frac{a^2}{a}\sin^{-1}\frac{x}{a} - \left(a+\frac{x}{2}\right)\sqrt{a^2-x^2}.$$

$$\int \frac{x^2dx}{\sqrt{1-x^2}} = \frac{1}{2}\sin^{-1}x - \frac{x}{2}\sqrt{1-x^2}. \qquad \int e^x x dx = e^x x - e^x. \qquad \int e^{-x} x dx = -e^{-x}x - e^{-x}.$$

$$\int e^x x^2 dx = e^x x^2 - 2\int e^x x dx. \qquad \int e^{-x} x^2 dx = -e^{-x}x^2 + 2\int e^{-x} x dx.$$

$$\int \frac{dx}{\sqrt{1-x^2}} = \sin^{-1}x. \qquad \int \frac{-dx}{\sqrt{1-x^2}} = \cos^{-1}x.$$

$$\text{Length of curve} = \int \sqrt{1+\frac{dy^2}{dx^2}}\,dx. \qquad \text{Area of curve} = \int y dx.$$

$$\text{Surface of solid body} = 2\pi\int y\sqrt{1+\frac{dy^2}{dx^2}}\,dx. \qquad \text{Volume of solid body} = \pi\int y^2 dx.$$

Examples of Use of Integral Calculus.

Example 1.—To determine the moment of friction of the end of the screw of a screw-jack.

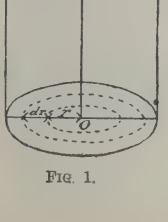


Fig. 1.

Let Q be the pressure along the axis of the screw, μ the coefficient of friction, and ρ the radius of the pivot (say in inches), then pressure per square inch will be $\frac{Q}{\pi\rho^2}$, and consequently $\frac{\mu Q}{\pi\rho^2}$ will be the friction per square inch; hence, if we consider a small ring enclosed between two circles whose radii are respectively r and $r+dr$, its area will ultimately equal $2\pi r dr$, and the pressure on it will equal $\frac{2\mu Q}{\rho^2}rdr$. Now the friction at any point of this ring acts in a direction perpendicular to the radius at that point, and hence the sum of the moments of the friction on this ring with respect to the axis will ultimately equal

$$\frac{2\mu Q}{\rho^2}r^2dr.$$

To obtain the whole friction, u, we must integrate this expression between the limits $r = 0$ and $r = \rho$, that is

$$u = \int_{\rho}^{0}\frac{2\mu Q}{\rho^2}r^2dr, \quad \text{or,} \quad u = \frac{2\mu Q}{\rho^2}\int_{\rho}^{o} r^2dr = \frac{2\mu Q}{\rho^2}\left(\frac{\rho^3}{3}\right) = \frac{2}{3}\rho\mu Q.$$

GEOMETRY.

CONSTRUCTIONS.

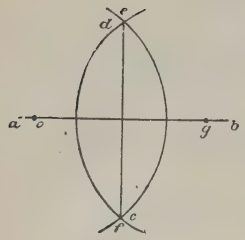


FIG. 2.

To divide a given line, *ab*, into two equal parts.

From its ends *a* and *b* as centres, and with any radius greater than one-half of *ab*, describe the arcs *c* and *d*, and join *ef*. If the line *ab* is very long, first lay off equal distances, *ao* and *bg*, each way from the ends, so as to approach conveniently near to each other; and then proceed as if *og* were the line to be divided. Or measure *ab* by a scale, and thus ascertain its centre.

To divide a given line, *mn*, into any given number of equal parts.

From *m* and *n* draw any two parallel lines, *mo* and *na*, to an indefinite distance, and on them, from *m* and *n*, step off the required number of equal parts of any convenient length; finally, join the corresponding points thus stepped off. Or only one line, as *mo*, may be drawn and stepped off, as to *s*; then join *sn*; and draw the other short lines parallel to it.

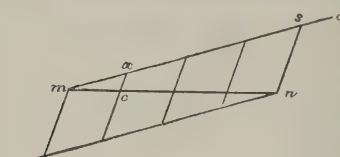


FIG. 3.

To divide a given line, *mn*, into two parts which shall have a given proportion to each other.

This is done on the same principle as the last; thus, let the proportion be as 1 to 3. First draw any line, *mo*, and with any convenient opening of the dividers make *mx* equal to one step, and *xs* equal to three steps. Join *sn*; and parallel to it draw *xc*. Then *mc* is to *cn* as 1 is to 3.

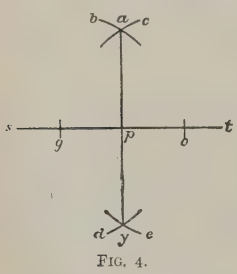


FIG. 4.

From any given point, *p*, on a line, *st*, to draw a perpendicular, *pa*.

From *p*, with any convenient opening of the dividers, step off the equals *po*, *pg*. From *o* and *g* as centres, with any opening greater than half *og*, describe the two short arcs *b* and *c*, and join *ap*. Or, still better, describe four arcs, and join *ay*.

Or from *p* with any convenient scale describe two short arcs, *g* and *c*, one of them with a radius 3, and the other with a radius 4. Then from *g*, with a radius 5, describe the arc *b*. Join *pa*.

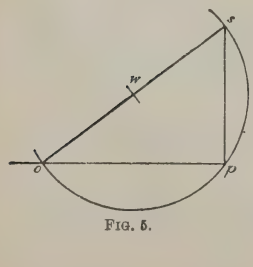


FIG. 5.

If the point p *is at one end of the line, or very near it*, extend the line, if possible, and proceed as above. But if this cannot be done, then from any convenient point, *w*, open the dividers to *p*, and describe the semicircle *spo*; through *ow* draw *ows*; join *ps*.

Or use the foregoing process with radii 3, 4, and 5.

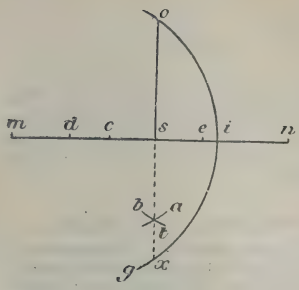


FIG. 6.

From a given point, *o*, to let fall a perpendicular, *os*, to a given line, *mn*.

From *o* measure to the line *mn* any two equal distances, *oc*, *oe*; and from *c* and *e* as centres, with any opening greater than half of *ce*, describe the two arcs *a* and *b*; join *ot*. Or from any point, as *d* on the line, open the dividers to *o*, and describe the arc *og*; make *ix* equal to *io*, and join *ox*.

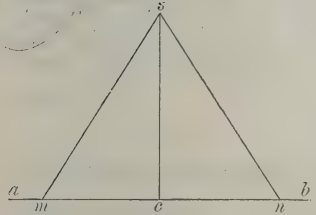


FIG. 7.

If the line ab *is on the ground*, and a perpendicular is required to be drawn from *c*, first measure off any two equal distances, *cm*, *cn*. At *m* and *n* hold the ends of a piece of string, tape-line, or chain, *msn*; then tighten out the string, &c., as shown by *msn*, *s* being its centre. Then will *sc* be the required perpendicular.

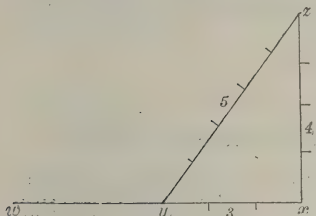


FIG. 8.

If the perpendicular, xz, *is to be drawn from the end of the line* wx, first measure *xy* upon the line, and equal to three feet; then, holding the end of a tape-line at *x*, and its nine-feet mark at *y*, hold the four-feet mark at *z*, keeping *zx* and *zy* equally stretched. Then *zx* will be the required perpendicular, because 3, 4, and 5 make the sides of a right-angled triangle. Instead of 3, 4, and 5, any multiples of those numbers may be used, such as 6, 8, and 10, or 9, 12, 15, &c.; also, instead of feet we may use yards, chains, &c.




FIG. 9.

Through a given point, *a*, to draw a line, *ac*, parallel to another line, *ef*.

With the perpendicular distance *ae*, from any point, *n*, on *ef*, describe an arc, *t*; draw *ac* just touching the arc.

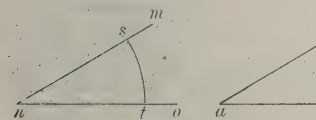


FIG. 10.

At any point, *a*, in a line *ab*, to make an angle, *cab*, equal to a given angle, *mno*.

From *n* and *a*, with any convenient radius, describe the arcs *st*, *de*; measure *st*, and make *de* equal to it; through *ad* draw *ac*.

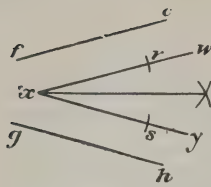


FIG. 11.

Bisection of an Angle.

Let *wxy* be the angle

From *x* set off any two equal distances, *xr*, *xs*. From *r* and *s*, with any radius, describe two arcs intersecting, as at *o*, and join *ox*. If the two sides of the angle do not meet, as *cf* and *gh*, either first extend them until they do meet, or else draw lines, *xw* and *xy*, parallel to them, and at equal distances from them, so as to meet; then proceed as before.

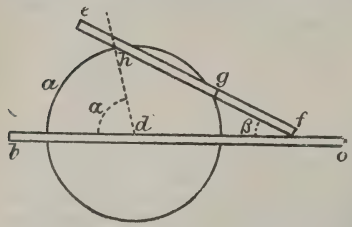


FIG. 11A.

Trisection of an Angle.

a is a circle, of which *d* is the centre. *bc* is a ruler whose upper edge touches the centre *d*. *a* is the angle whose trisection is required. *ef* is a second ruler which has a mark at *g*, the distance *gf* being equal to the radius of the circle. At the point *h* a pin is inserted, on which the ruler *ef* can slide. To obtain a trisection of the angle *a*, slide the corner of the ruler *ef* along *bc* until the mark *g* comes on the circumference of the circle. Then the angle β will be equal to $\alpha \div 3$.

(*H. R. Kempe.*)

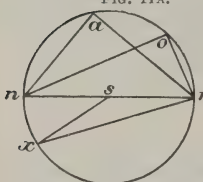


FIG. 12.

Angles at the circumference of a Semicircle.

All angles, as *nam*, *nom*, at the circumference of a semicircle, and standing on its diameter, *nm*, are right angles; or, as it is usually expressed, *all angles in a semicircle are right angles.* An angle, *nsx*, at the centre of a circle is twice as great as an angle, *nmx*, at the circumference, when both stand upon the same arc, *nx*.

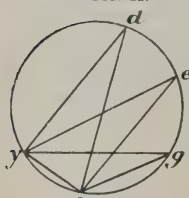


FIG. 13.

Angles at the circumference of a Circle.

All angles, as *ydp*, *yep*, *ygp*, at the circumference of a circle, and standing upon the same arc, as *yp*, are equal to each other; or, as usually expressed, *all angles in the same segment of a circle are equal.*

Angles in a Parallelogram.

A parallelogram is any four-sided straight-lined figure whose opposite sides are equal, as *abcd*; or a square, &c. Any line drawn across a parallelogram between two opposite angles is called a *diagonal*, as *ac* or *bd*. A diagonal divides a parallelogram into two equal parts, as does also any line, *mn*, drawn through the centre of either diagonal; and, moreover, the line *mn* itself is divided into two equal parts by the diagonal. Two diagonals bisect each other; they also divide the parallelogram into four triangles of equal area. The sum of the two angles at the ends of any one side is=180°; thus, $dab + abc = abc + bcd = 180°$; and the sum of the four angles, *dab*, *abc*, *bcd*, *cda* = 360°.

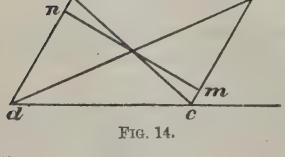


FIG. 14.

The sum of the squares of the four sides is equal to the sum of the squares of the two diagonals.

To construct an Ellipse.

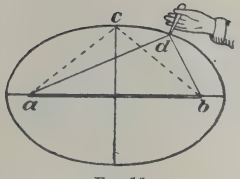


FIG. 15.

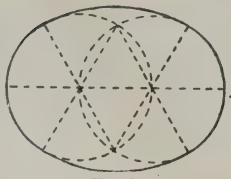


FIG. 16.

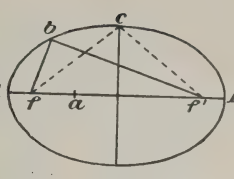


FIG. 17.

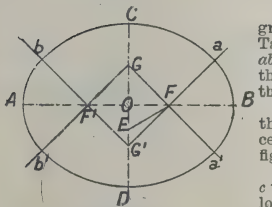


FIG. 18.

(1.) Having given the two axes, fig. 15, set off from c half the great axis at a and b, which are the two foci in the ellipse. Take an endless string as long as the three sides in the triangle abc, fix two pins or nails in the foci, one in a and one in b, lay the string round a and b, stretch it with a pencil, d, which then will describe the desired ellipse.

(2.) Divide the long axis, fig. 16, into three equal parts, draw the two circles, and where they intersect one another are the centres for the tangent arcs of the ellipse, as shown by the figure.

(3.) Given the two axes, fig. 17, set off half the long axis from c to f f', which will be the two foci in the ellipse. Divide the long axis into any number of parts, say a to be a division point. Take Aa as radius and f as centre, and describe a circle arc about b; take aB as radius and f as centre, describe another circle arc about b; then the intersection b is a point in the ellipse, and so the whole ellipse can be constructed.

(4.) Let A B, C D, fig. 18, be the major and minor axes of an ellipse with centre at O.

1. With distance A O cut off C E on C D. 2. From E at 60° with C E, draw E F. 3. From F at 45°, draw diagonal lines.

Then from G as a centre strike the arc a' D b', and from G' strike the arc a C b; also from F strike the arc a A a', and from F' strike the arc b B b'; then the figure will be very approximately an ellipse provided the ratio of the major to the minor axis is not greater than 3·2.

(*D. A. Coates*, '*The Engineer*,' *October* 13, 1911.)

To construct a Cycloid.



FIG. 19

On the line AB lay off any points, 1, 2, 3, 4, &c.; draw perpendicular lines at each point, and on each describe circles equal to the generating circle.

On the circum. of the circle at } 1 lay off 1.1′=A.1.
" " 2 lay off 2.2′=A.2.
" " 3 lay off 3.3′=A.3.

and so on; the points 1′, 2′, 3′, 4′, 5′, are points of the curve.

To construct a Screw Helix.

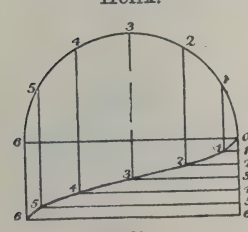


FIG. 20.

In a given Circle to inscribe any Regular Polygon.

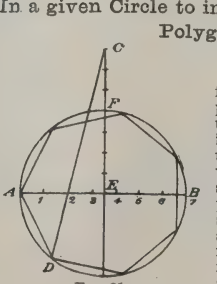


FIG. 21.

Draw the diameter, AB; from E, the centre, erect the perpendicular, EFC, cutting the circle at F. Divide EF into four equal parts, and set three parts from F to C. Divide the diameter, AB, into as many equal parts as the polygon is required to have sides. From C, through the second division in the diameter, draw CD. Join AD; it will be the side of the polygon required.

LONGIMETRY.

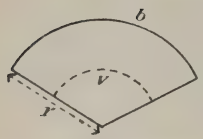


FIG. 22.

$$b = \frac{\pi r v}{180} = 0{\cdot}0175 r v,$$

$$= \frac{8p - c}{3}, \text{ approximately, where } p = \text{chord of half the arc, and } c = \text{chord of whole arc.}$$

$$v = \frac{180 b}{\pi r} = 57{\cdot}296 \frac{b}{r}.$$



FIG. 23.

$$w = 180 - \frac{v}{2},$$

$$v = 2(180° - w).$$

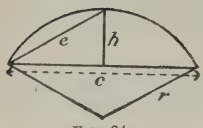


FIG. 24.

$$r = \frac{c^2 + 4h^2}{8h} = \frac{e^2}{2h},$$

$$c = 2\sqrt{2hr - h^2}.$$

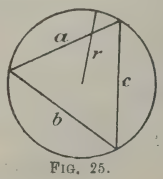


FIG. 25.

$$r = \frac{ac}{2\sqrt{a^2 - \left(\frac{a^2+b^2-c^2}{2b}\right)^2}}.$$

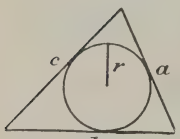


FIG. 26.

$$r = \frac{b\sqrt{a^2 - \left(\frac{a^2+b^2-c^2}{2b}\right)^2}}{a+b+c}.$$

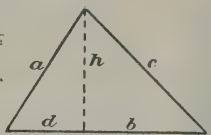


FIG. 27.

$$c^2 = a^2 + b^2 - 2bd,$$

$$h = \sqrt{a^2 - d^2},$$

$$d = \frac{a^2+b^2-c^2}{2b}.$$

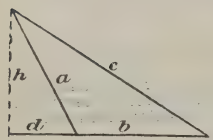


FIG. 28.

$$c^2 = a^2 + b^2 + 2bd,$$

$$h^2 = \sqrt{a^2 - d^2},$$

$$d = \frac{c^2 - a^2 - b^2}{2b}.$$

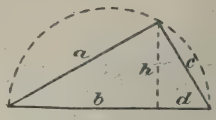


FIG. 29.

$$a : b = h : c,$$

$$h = \frac{ac}{b} = \frac{ad}{c},$$

$$d = \frac{c^2}{b} = \frac{ch}{a}.$$

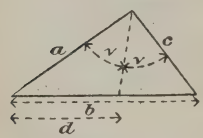


FIG. 30.

$$a : c = d : (b - d),$$

$$d = \frac{ab}{c+a}.$$

$$v = v.$$

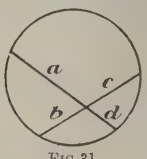


FIG. 31.

$$a : c = b : d,$$

$$ad = bc.$$

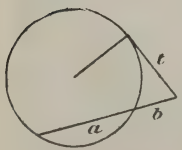


FIG. 32.

$$a : t = t : b,$$

$$t^2 = ab.$$

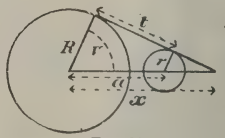


FIG. 33.

$$x = \frac{aR}{R - r},$$

$$a = \sqrt{t^2 + (R-r)^2},$$

$$t = \sqrt{a^2 - (R-r)^2},$$

$$\sin v = \frac{t}{a}.$$

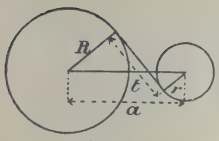


FIG. 34.

$t = \sqrt{a^2 - (R+r)^2}$,
$a = \sqrt{t^2 + (R+r)^2}$.



FIG. 35.

$l = \pi r n = \frac{\pi r^2}{P}$,
$n = \frac{l}{\pi r} = \frac{r}{P}$,
$P = \frac{\pi r^2}{l} = \frac{r}{n}$,
P = pitch.
l = length of spiral.
n = number of turns.

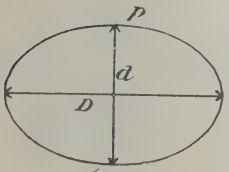


FIG. 36.

Ellipse.

$p = 2\sqrt{D^2 + 1{\cdot}4674d^2}$.

p = length of periphery.

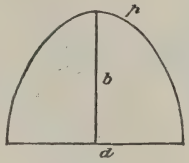


FIG. 37.

Parabola.

$p = \sqrt{a^2 + 1{\cdot}3333b^2}$.

p = length of periphery, not including base.

PLANIMETRY.

A = area.

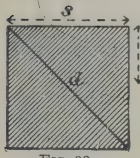


FIG. 38.

Square.

$A = s^2 = 4b^2$
$= 0{\cdot}5d^2$.




FIG. 39.

Rectangle.

$A = ab$
$= b\sqrt{d^2 - b^2}$.

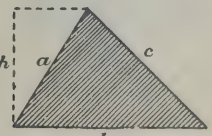


FIG. 40.

Triangle.

$A = \frac{bh}{2} = \frac{1}{2}bh$
$= \frac{b}{2}\sqrt{a^2 - \left(\frac{a^2 + b^2 - c^2}{2b}\right)^2}$.

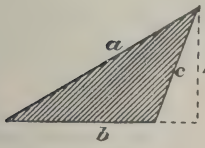


FIG. 41.

Triangle.

$A = \frac{1}{2}bh$
$= \frac{b}{2}\sqrt{a^2 - \left(\frac{c^2 - a^2 - b^2}{2b}\right)^2}$.

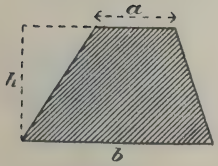


FIG. 42.

Quadrangle.

$A = \frac{1}{2}h(a+b)$.

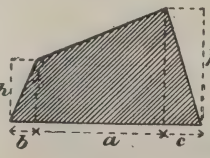


FIG. 43.

Quadrangle.

$A = \frac{1}{2}(a[h+h'] + bh + ch')$.

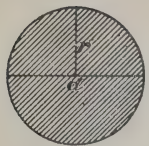


FIG. 44.

Circle Plane.

$A = \pi r^2 = 0{\cdot}785d^2$

$= \frac{pr}{2} = 0{\cdot}0796p^2.$

p = length of periphery.

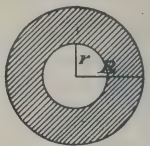


FIG. 45.

Circle Ring.

$A = \pi(R^2 - r^2)$

$= \pi(R + r)(R - r)$

$= 0{\cdot}785(D^2 - d^2).$

$D = 2R, \quad d = 2r.$

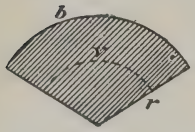


FIG. 46.

Sector.

$A = \frac{1}{2}br$

$= \frac{\pi r^2 v}{360} = \frac{r^2 v}{114{\cdot}5}.$

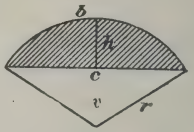


FIG. 47.

Segment.

$A = \frac{1}{2}[br - c(r - h)]$

$= \frac{\pi r^2 v}{360} \mp \frac{c}{2}(r - h),$

$= \frac{h^3}{2c} + \frac{2}{3}ch,$

approximately.



FIG. 48.

Quadrant.

$A = 0{\cdot}785r^2 = 0{\cdot}3927c^2.$

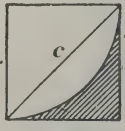


FIG. 49.

Corner Segment.

$A = 0{\cdot}215r^2 = 0{\cdot}1075c^2.$

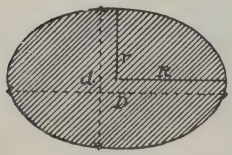


FIG. 50.

Ellipse.

$A = \pi Rr = 0{\cdot}785Dd.$

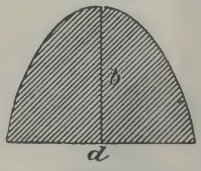


FIG. 51.

Parabola.

$A = \frac{2}{3}bd.$

Irregular Curvilinear Figure—Weddle's Rule.

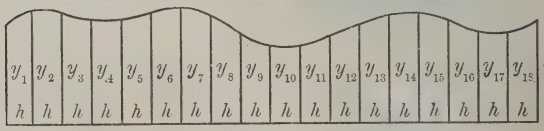


FIG. 52.

$$\text{Area} = \tfrac{3}{10}h\{y_1 + y_2 + y_5 + y_7 + y_9 + y_{11} + y_{13} + y_{15} + y_{17} + y_{19} + 5(y_2 + y_4 + y_6 + y_8 + y_{10} + y_{12} + y_{14} + y_{16} + y_{18}) + y_4 + y_7 + y_{10} + y_{13} + y_{16}\}$$

$$= \tfrac{3}{10}h\{\text{sum of odd} + 5\ (\text{sum of even}) + \text{sum of every third, excluding extremes}\}$$

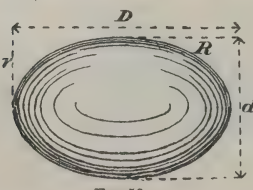


FIG. 53.

Prolate Spheroid.

$S = \frac{4\pi}{\sqrt{2}} \cdot r\sqrt{R^2 + r^2}$

$= 8{\cdot}88r\sqrt{R^2 + r^2} = 2{\cdot}22d\sqrt{D^2 + d^2}.$

Oblate Spheroid.

$S = \frac{4\pi}{\sqrt{2}} \cdot R\sqrt{R^2 + r^2}.$

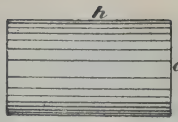


FIG. 54.

Cylinder.

$S = 2\pi rh = \pi dh = 3{\cdot}1416dh,$

$h = \frac{S}{2\pi r} = \frac{S}{\pi d} = \frac{S}{3{\cdot}1416d}.$



FIG. 55.

Sphere.

$S = 4\pi r^2 = 12{\cdot}56r^2 = \pi d^2.$

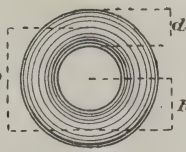


FIG. 56.

Forus.

$S = 4\pi^2 Rr = 39{\cdot}44Rr$

$= 9{\cdot}86Dd.$



FIG. 57.

Sphere Sector.

$S = \frac{\pi r}{2}(4h + c).$



FIG. 58.

Circle Zone.

$S = 2\pi rh = \frac{\pi}{4}(4h^2 + c^2).$

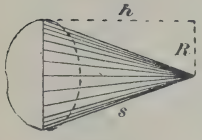


FIG. 59.

Cone.

$S = \pi Rs$

$= \pi R\sqrt{R^2 + h^2}.$

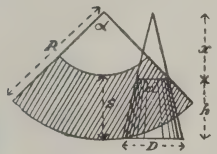


FIG. 60.

Cone.

$x = \frac{dh}{D - d},$

$R = s + \frac{ds}{D - d}$

$= \frac{\pi s}{2}(D + d)$

$= \frac{180D}{R} = \frac{180(D - d)}{s}.$

STEREOMETRY.

C = *Solid Content.*

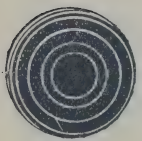


FIG. 61.

Sphere.

$C = \frac{4\pi r^3}{3} = 4{\cdot}189r^3$

$= \frac{\pi d^3}{6} = 0{\cdot}524d^3.$



FIG. 62.

Forus.

$C = 2\pi^2 Rr^2$

$= 19{\cdot}74Rr^2$

$= 2{\cdot}463Dd^2.$

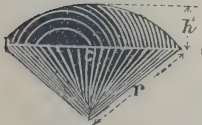


FIG. 63.

Sphere Sector.

$C = \frac{2}{3}\pi r^2 h = 2{\cdot}0944r^2 h$

$= \frac{2}{3}\pi r^2(r \mp \sqrt{r^2 - \frac{1}{4}c^2}).$

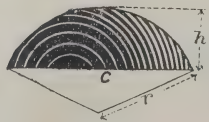


FIG. 64.

Circle Zone.

$C = \pi h^2(r - \frac{1}{3}h)$

$= \pi h^2\left(\frac{c^2 + 4h^2}{8h} - \frac{1}{3}h\right)$

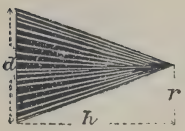


FIG. 65.

Cone.

$$C=\frac{\pi r^2 h}{3}=1{\cdot}047r^2h$$
$$=0{\cdot}2618d^2h.$$

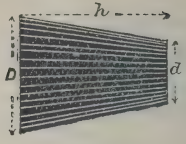


FIG. 66.

Conic Frustum.

$$C=\tfrac{1}{12}\pi h(D^2+Dd+d^2)$$
$$=\tfrac{1}{3}\pi h(R^2+Rr+r^2),$$
$$R=\frac{D}{2},\quad r=\frac{d}{2}.$$

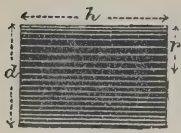


FIG. 67

Cylinder.

$$C=\pi r^2h=0{\cdot}785d^2h$$
$$=\frac{p^2h}{4\pi}=0{\cdot}0796p^2h.$$

p = length of periphery.

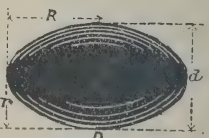


FIG. 68.

Prolate Spheroid.

$$C=\frac{4}{3}\pi Rr^2=4{\cdot}189Rr^2$$
$$=\frac{1}{6}\pi Dd^2=\cdot5236Dd^2.$$

Oblate Spheroid.

$$C=\frac{4}{3}\pi R^2r=4{\cdot}189R^2r$$
$$=\frac{1}{6}\pi D^2d=\cdot5236D^2d.$$

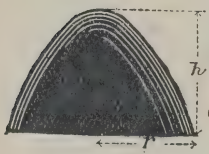


FIG. 69.

Paraboloid.

$$C=\tfrac{1}{2}\pi r^2h=1{\cdot}5708r^2h.$$

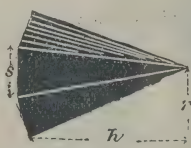


FIG. 70.

Pyramid.

$$C=\frac{1}{3}ah$$
$$=\frac{nsh}{6}\sqrt{r^2-\frac{s^2}{4}}.$$

a = area of base.
n = number of sides.

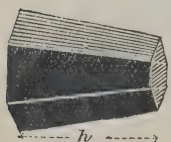


FIG. 71.

Pyramidic Frustum.

$$C=\frac{h}{3}(A+a+\sqrt{Aa}).$$

A and a = areas of the two ends.

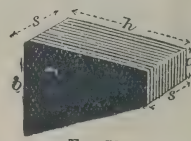


FIG. 72.

Wedge Frustum.

$$C=\frac{hs}{2}(a+b).$$

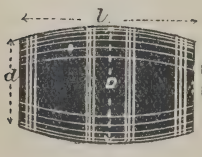


FIG. 73.

Cask

$C = \cdot000032149l\,[(39D^2+26Dd+25d^2)$ gallons; l, D, and d being in inches.

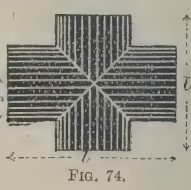


FIG. 74.

Cylinder Sections.

$$C=\pi r^2\left(l+l'-\frac{16}{3}r\right)$$
$$=\pi r^2(l+l')-5{\cdot}333r^3$$

If l is inclined at an angle ϕ (less than 90°) to l', then
$C=\pi r^2(l+l')-5{\cdot}333r^3$ cosecant ϕ.

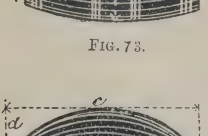


FIG. 75.

Parabolic Spindle.

$$C=\frac{2}{15}\pi d^2c=\cdot419d^2c.$$

Circular Spindle.

$$C=\frac{\pi}{32}\left(\frac{d^4}{l}+\frac{13}{3}d^2l\right)=\cdot0982\left(\frac{d^4}{l}+4{\cdot}333d^2l\right),\text{ approximately.}$$

If $l = nd$,

$$C=\cdot0982d^3\left(\frac{1}{n}+4{\cdot}333n\right),\text{ approximately.}$$

(*H. R. Kempe.*)

CONIC SECTIONS.

A *Cone* is a figure described by the revolution of a right-angled triangle about one of its legs, or it is a solid having a circle for its base, and terminated in a vertex.

Conic Sections are the figures made by a plane cutting a cone.

The *Axis* is the line about which the triangle revolves.

The *Base* is the circle which is described by the revolving base of the triangle.

If a cone is cut by a plane through the vertex and base, the section will be a triangle.

If a cone is cut by a plane parallel to its base, the section will be a circle.

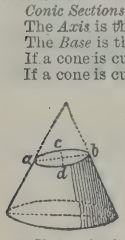


FIG. 76.

An *Ellipse* is a figure generated by an oblique plane cutting a cone above its base.

The *transverse axis* or diameter is the longest right line that can be drawn in it, as *ab*, fig. 76.

The *conjugate axis* or diameter is a line drawn through the centre of the ellipse perpendicular to the transverse axis, as *cd*.

A *Parabola* is a figure generated by a plane cutting a cone parallel to its side, as *abc*, fig. 77.

The *axis* is a right line drawn from the vertex to the middle of the base, as *bo*.

A parabola has no conjugate diameter.

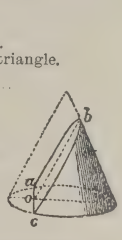


FIG. 77.

An *Hyperbola* is a figure generated by a plane cutting a cone at any angle with the base greater than that of the side of the cone, as *abc*, fig. 78.

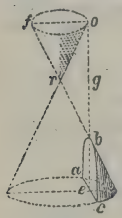


FIG. 78.

The *transverse axis* or diameter, *ob*, is that part of the axis, *eb*, which, if continued, as at *o*, would join an opposite cone, *ofr*.

The *conjugate axis* or diameter is a right line drawn through the centre, *g*, of the transverse axis, and perpendicular to it.

The straight line through the *foci* is the indefinite transverse axis; that part of it between the vertices of the curves, as *ob*, is the definite transverse axis. Its middle point, *g*, is the centre of the curve.

The *eccentricity* of a hyperbola is the ratio obtained by dividing the distance from the centre to either *focus* by the semi-transverse axis.

The *asymptotes* of a hyperbola are two right lines to which the curve continually approaches, touches at an infinite distance, but does not pass; they are prolongations of the diagonals of the rectangle constructed on the extremes of the axes.

Two hyperbolas are *conjugate* when the transverse axis of the one is the conjugate of the other, and *vice versâ*.

General Definitions.

An *Ordinate* is a right line from any point of a curve to either of the diameters, *ae* and *do*, fig. 79; *ab* and *df* are double ordinates.

An *Abscissa* is that part of the diameter which is contained between the vertex and an ordinate, as *ce*, *go*.

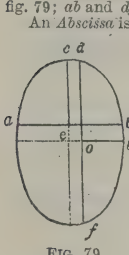


FIG. 79.

The *parameter of any diameter* is equal to four times the distance from the *focus* to the vertex of the curve; the parameter of the axis is the least possible, and is termed the parameter of the curve.

The *parameter of the curve of a conic section* is equal to the chord of the curve drawn through the *focus* perpendicular to the axis.

The *parameter of the transverse axis* is the least, and is termed the parameter of the curve.

The *parameter of a conic section* and the *foci* are sufficient elements for the construction of the curve.

In the *Parabola*, the parameter of any diameter is a third proportional to the abscissa and ordinate of any point of the curve, the abscissa and ordinate being referred to that diameter and the tangent at its vertex.

In the *Ellipse* and *Hyperbola* the parameter of any diameter is a third proportional to the diameter and its conjugate.

A *focus* is a point on the principal axis where the double ordinate to the axis, through the point, is equal to the parameter, as *ef*, fig. 80. It may be determined arithmetically thus: Divide the square of the ordinate by four times the abscissa, and the quotient will give the focal distance, *gs*, fig. 80.

A *Conoid* is a warped surface generated by a right line being moved in such a manner that it will touch a straight line and curve, and continue parallel to a given plane. The straight line and curve are called *directrices*, the plane a plane *directrix*, and the moving line the *generatrix*.

The *Directrix* of a conic section is a straight line such that the ratio obtained by dividing the distance from any point of the curve to it by the distance from the same point to the focus shall be constant. It is always perpendicular to the principal axis.

THE ELLIPSE.

To compute the Parameter of an Ellipse, the Transverse and Conjugate Diameters being given (fig. 80).

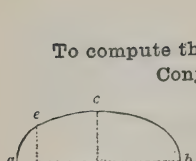


FIG. 80.

RULE.—Divide the square of the conjugate diameter by the transverse diameter, and the quotient is equal to the parameter.

EXAMPLE.—In the ellipse (fig. 80), the transverse and conjugate diameters, *gb*, *ck*, are 30 and 20.

Then $\frac{20 \times 20}{30} = 13{\cdot}333 = \textit{parameter.}$

The parameter of the curve = *ef*, a double ordinate passing through the focus, *s*.

To compute the Ordinate of an Ellipse, the Transverse and Conjugate Diameters and the Abscissa being given (fig. 81).

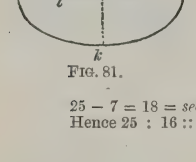


FIG. 81.

RULE.—As the transverse diameter is to the conjugate, so is the square root of the product of the abscissæ to the ordinate which divides them.

Or, $\frac{d}{D}\sqrt{a'(D-a')} = y$, D *representing the transverse diameter, d the conjugate, a' the lesser abscissa, and y the ordinate.*

EXAMPLE.—The transverse diameter, *gb*, of an ellipse (fig. 81) is 25 (D); the conjugate, *ck*, is 16 (*d*); and the abscissa, *gi*, 7 (*a'*); what is the length, *y*, of the ordinate, *ie*?

$25 - 7 = 18 = \textit{second abscissa}$; $\sqrt{7 \times 18} = 11{\cdot}225 = \textit{square root of the abscissæ.}$
Hence 25 : 16 :: 11·225 : 7·184 *inches = length of the ordinate.*

To compute the Abscissæ of an Ellipse, the Transverse and Conjugate Diameters and the Ordinate being given (fig. 81).

RULE.—As the conjugate diameter is to the transverse, so is the square root of the difference of the squares of the ordinate and semi-conjugate to the distance between the ordinate and centre; and this distance being added to, or subtracted from, the semi-transverse, will give the abscissæ required.

Or

$$\frac{D}{d}\sqrt{\left(\frac{d}{2}\right)^2 - y^2} = x, \text{ and } \begin{cases} D \div 2 + x = a, \\ D \div 2 - x = a', \end{cases} \textit{ x representing the distance obtained, and a, a', the greater and lesser abscissæ.}$$

EXAMPLE.—The transverse diameter, *gb*, of an ellipse (fig. 81) is 25 (D); the conjugate, *ck*, 16 (*d*); and the ordinate, *ie*, 7·184 (*y*); what are the abscissæ, *bi*, *gi*?

$\sqrt{8^2 - 7{\cdot}184^2} = 3{\cdot}519943 = \textit{square root of difference of squares of semi-conjugate and ordinate.}$

Hence, as 16 : 25 :: 3·52 : 5·5 = *distance between ordinate and centre.*

Then $\left.\begin{array}{l} 25 \div 2 = 12{\cdot}5, \text{ and } 12{\cdot}5 + 5{\cdot}5 = 18 = bi, \\ 25 \div 2 = 12{\cdot}5, \text{ and } 12{\cdot}5 - 5{\cdot}5 = \ 7 = gi, \end{array}\right\}$ *abscissæ.*

To compute the Transverse Diameter of an Ellipse, the Conjugate, Ordinate, and Abscissa being given (fig. 81).

RULE.—To or from the semi-conjugate, according as the greater or lesser abscissa is used, add or subtract the square root of the difference of the square of the ordinate and semi-conjugate. Then, as this sum or difference is to the abscissa, so is the conjugate to the transverse.

Or,

$$\frac{ad}{\frac{d}{2} \pm \sqrt{y^2 - \left(\frac{d}{2}\right)^2}} = \text{D}.$$

EXAMPLE.—The conjugate diameter, *ck*, of an ellipse (fig. 81) is 16 (*d*); the ordinate, *ie*, is 7·184 (*y*); and the abscissæ, *bi*, *ig*, are 18 (*a*) and 7 (*a'*); what is the length of the transverse diameter (D)?

$(16 \div 2)^2 - 7{\cdot}184^2 = 3{\cdot}52$ = *square root of difference of squares of ordinate and semi-conjugate.*
$16 \div 2 + 3{\cdot}52 : 18 :: 16 : 25$; $16 \div 2 - 3{\cdot}52 : 7 :: 16 : 25$ = *transverse diameter.*

To compute the Conjugate Diameter of an Ellipse, the Transverse Diameter, Ordinate, and Abscissa being given (fig. 81).

RULE.—As the square root of the product of the abscissæ is to the ordinate, so is the transverse diameter to the conjugate.

Or,

$$y\text{D} \div \sqrt{a \times a'} = d.$$

EXAMPLE.—The transverse diameter, *gb*, of an ellipse (fig. 81) is 25 (D); the ordinate, *ie*, is 7·184 (*y*); and the abscissæ, *bi* and *ig*, 18 (*a*) and 7 (*a'*); what is the length (*d*) of the conjugate diameter?

$\sqrt{18 \times 7} = 11{\cdot}225$ = *square root of product of abscissæ.*
$11{\cdot}225 : 7{\cdot}184 :: 25 : 16$ = *conjugate diameter.*

To compute the Circumference of an Ellipse (fig. 81).

RULE.—Multiply the square root of half the sum of the squares of the two diameters by 3·1416.

Or,

$$\sqrt{\frac{\text{D}^2 + d^2}{2}} \times 3{\cdot}1416 = \textit{circumference.}$$

EXAMPLE.—The transverse and conjugate diameters, *gb* and *ck*, of an ellipse (fig. 81) are 24 and 20; what is its circumference?

$\frac{24^2 + 20^2}{2} = 488$, and $\sqrt{488} = 22{\cdot}09$ = *square root of half the sum of the squares of the diameters.*

Hence $22{\cdot}09 \times 3{\cdot}1416 = 69{\cdot}398$ = *circumference.*

To compute the Area of an Ellipse (fig. 81).

RULE.—Multiply the diameters together, and the product by ·7854. Or, multiply one diameter by ·7854, and the product by the other.

Or,

$$\text{D} \times d \times {\cdot}7854 = \textit{area.}$$

EXAMPLE.—The transverse diameter of an ellipse, *gb*, fig. 81, is 12 (D), and its conjugate, *ck*, 9 (*d*); what is its area?

$12 \times 9 \times {\cdot}7854 = 84{\cdot}8232$ = *product of diameters and* ·7854 = *area.*

To compute the Area of a Segment of an Ellipse when its Base is parallel to either Axis, as *ein*, fig. 82.

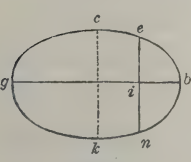


FIG. 82.

Ascertain the segment of the circle described upon the same axis to which the base of the segment is perpendicular. Then, as this axis is to the other axis, so is the circular segment to the elliptical segment.

EXAMPLE.—The axis to which the base of the segment is perpendicular is 50, and the height of the segment, 25. *Also, the area of the segment is one-half of that of a circle of* 50 *diameter*

$$= \frac{1963{\cdot}4954}{2} = 981{\cdot}7477.$$

Hence $50 : 70 :: 981{\cdot}75 : 1374{\cdot}45$ = *area of elliptic segment.*

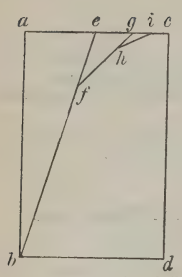


FIG. 83.

THE PARABOLA.

To draw a Parabola, the Base and Height being given (fig. 83).

Required a semi-parabola of which *bd* is an ordinate, the corresponding height being *ab*.

Bisect *ac* and draw *eb*. Make *ef* = one-quarter of *be*. Bisect *ec* and draw *fg*. Make *gh* = one-quarter of *fg* and join *h* to the bisection, *i*, of *gc*. (*C. H. Wingfield.*)

To compute either Ordinate or Abscissa of a Parabola, the other Ordinate and the Abscissæ, or the other Abscissa and the Ordinates, being given (fig. 84).

RULE.—As either abscissa is to the square of its ordinate, so is the other abscissa to the square of its ordinate.

Or,

$$\frac{y^2 \times a'}{a} = y'^2. \qquad \frac{y'^2 \times a}{a'} = y^2.$$

$$\frac{y^2 \times a'}{y'^2} = a. \qquad \frac{y'^2 \times a}{y^2} = a'.$$

Or, as the square root of any abscissa is to its ordinate, so is the square root of any other abscissa to its ordinate. Hence

$$\frac{y \times \sqrt{a'}}{\sqrt{a}} = y'.$$

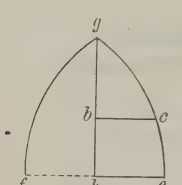


FIG. 84.

EXAMPLE 1.—The abscissa, *gb*, of the parabola, fig. 84, is 9 (*a*) ; its ordinate, *bc*, 6 (*y*) ; what is the ordinate, *ke* (*y'*), the abscissa of which, *gk*, is 16 (*a'*).

9 : 6^2 :: 16 : 64, and $\sqrt{64} = 8 = \textit{length of ordinate.}$

Or, $\sqrt{9} : 6 :: \sqrt{16} : 8 = \textit{ordinate.}$

EXAMPLE 2.—The abscissæ of a parabola are 9 (*a'*) and 16 (*a*), and their corresponding ordinates 6 (*y'*) and 8 (*y*) ; any three of these being taken, it is required to find the fourth.

$$\sqrt{\frac{6^2 \times 16}{9}} = 8 = \textit{ordinate.} \qquad \sqrt{\frac{8^2 \times 9}{16}} = 6 = \textit{ordinate.}$$

$$\frac{6^2 \times 16}{8^2} = 9 = \textit{lesser abscissa.} \qquad \frac{8^2 \times 9}{6^2} = 16 = \textit{abscissa.}$$

To compute the Length of the Curve of a Parabola cut off by a Double Ordinate (fig. 84).

RULE.—To the square of the ordinate add $\frac{4}{3}$ of the square of the abscissa, and the square root of this sum, multiplied by two, will give the length of the curve nearly.

Or,

$$\sqrt{\left(y^2 + \frac{4a^2}{3}\right)}2 = \textit{length of curve.}$$

EXAMPLE.—The ordinate, *ke*, fig. 84, is 8 (*y*), and its abscissa, *gk*, 16 (*a*) ; what is the length of the curve *fge* ?

$$8^2 + \frac{4 \times 16^2}{3} = 405{\cdot}333 = \textit{sum of square of the ordinate and } \tfrac{4}{3} \textit{ of the square of the abscissa, and}$$

$\sqrt{405{\cdot}333} = 20{\cdot}133$, which $\times\ 2 = 40{\cdot}267 = \textit{length.}$

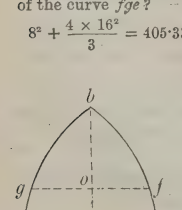


FIG. 85.

To compute the Area of a Parabola (fig. 85).

RULE.—Multiply the base (*a*) by the height (*h*), and take $\frac{2}{3}$ of the product.

Or,

$$\frac{2}{3}a \times h = \textit{area.}$$

EXAMPLE.—What is the area of the parabola *abc*, fig. 85, the height, *be*, being 16 (*h*), and the base, or double ordinate, *ac*, 16 (*a*) ?

$16 \times 16 = 256 = \textit{product of base and height, and } \frac{2}{3} \textit{ of } 256 = 170{\cdot}667 = \textit{area.}$

To compute the Area of a Segment of a Parabola (fig. 85).

RULE.—Multiply the difference of the cubes of the two ends of the segment, *ac*, *qf*, by twice its altitude, *eo*, and divide the product by three times the difference of the squares of the ends.

Or,

$$\frac{(l^3 - l'^3)2h}{(l^2 - l'^2)3} = \textit{area, } l \textit{ and } l' \textit{ representing the lengths of the base and lesser ends.}$$

EXAMPLE 1.—The ends of a segment of a parabola, *ac* and *qf*, fig. 85, are 10 (*l*) and 6 (*l'*), and the height, *eo*, is 10 (*h*); what is its area?

$(10^3 - 6^3)(2 \times 10) = 15680 =$ *difference of cubes of the ends* × *twice the height.*
$15680 \div (10^2 - 6^2)3 = 81{\cdot}667 =$ *preceding product* ÷ 3 *times the difference of the squares of the ends* = *area.*

Any parabolic segment is equal to a parabola of the same altitude, the base of which is equal to the base of the segment, increased by a third proportional to the sum of the two ends and the lesser end.

EXAMPLE 2.—In Example 1 the base and end are 10 and 6.

Then $10 + 6 : 6 :: 6 : 2{\cdot}25 =$ *third proportional to the sum of the two ends and the lesser end.*
Hence $10 + 2{\cdot}25 = 12{\cdot}25 =$ *sum of length of base of parabola and third proportional; and the area, the height being* 10, $= 81{\cdot}667$.

THE HYPERBOLA.

To compute the Ordinate of an Hyperbola, the Transverse and Conjugate Diameters and the Abscissæ being given (fig. 86).

RULE.—As the transverse diameter is to the conjugate, so is the square root of the product of the abscissæ to the ordinate required.

Or,

$$\frac{d \times \sqrt{a \times a'}}{\mathrm{D}} = \textit{ordinate.}$$

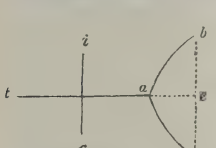


FIG. 86.

EXAMPLE.—The hyperbola *abc*, fig. 86, has a transverse diameter, *at*, of 120 (D); a conjugate, *if*, of 72 (*d*); and the abscissa *ae* is 40 (*a*); what is the length of the ordinate *ec*?

$40 + 120 = a' =$ *sum of lesser abscissa and axis = greater abscissa.*

$120 : 72 :: \sqrt{40 \times 160} : 48 =$ *ordinate.*

In hyperbolas the lesser abscissa, added to the axis (the transverse diameter), gives the greater.

The difference of two lines drawn from the *foci* of any hyperbola to any point in the curve is equal to its transverse diameter.

To compute the Abscissa of an Hyperbola, the Transverse and Conjugate Diameters and the Ordinate being given (fig. 86).

RULE.—As the conjugate diameter is to the transverse, so is the square root of the sum of the squares of the ordinate and semi-conjugate to the distance between the ordinate and the centre, or half the sum of the abscissæ. Then the sum of this distance and the semi-transverse will give the greater abscissa, and their difference the lesser abscissa.

Or,

$$\frac{\mathrm{D}\sqrt{y^2 + (d \div 2)^2}}{d} = \frac{a + a'}{2} = \textit{half the sum of the abscissæ.}$$

$$\frac{a + a'}{2} + \frac{t}{2} = a, \quad \text{and} \quad \frac{a + a'}{2} - \frac{t}{2} = a'.$$

EXAMPLE.—The transverse diameter, *at*, of a hyperbola (fig. 86) is 120 (D); the conjugate, *if*, 72 (*d*); and the ordinate, *ec*, 48 (*y*); what are the lengths of the abscissæ, *te* and *ae*?

$72 : 120 :: \sqrt{48^2 + (72 \div 2)^2} = 60 : 100 =$ *half the sum of the abscissæ.*
$100 + (120 \div 2) = 160 =$ *above sum added to the semi-transverse = the greater abscissa*; and
$100 - (120 \div 2) = 40 =$ *above sum subtracted from the semi-transverse = the lesser abscissa.*

To compute the Conjugate Diameter of an Hyperbola, the Transverse Diameter, the Abscissæ, and Ordinate being given (fig. 86).

RULE.—As the square root of the product of the abscissæ is to the ordinate, so is the transverse diameter to the conjugate.

Or,

$$\frac{y\mathrm{D}}{\sqrt{a \times a'}} = \textit{conjugate diameter.}$$

EXAMPLE.—The transverse diameter, *at*, of a hyperbola (fig. 86) is 120 (D); the ordinate, *ec*, 8 (*y*); and the abscissæ, *te* and *ae*, 160 (*a*) and 40 (*a'*); what is the length of the conjugate, *if*?

$$\sqrt{40 \times 160} = 80 \;:\; 48 \;::\; 120 \;:\; 72 = \textit{conjugate.}$$

To compute the Transverse Diameter of an Hyperbola, the Conjugate, the Ordinate, and an Abscissa being given (fig. 86).

RULE.—Add the square of the ordinate to the square of the semi-conjugate, and extract the square root of their sum.

Take the sum or difference of the semi-conjugate and this root, according as the greater or lesser abscissa is used.* Then, as the square of the ordinate is to the product of the abscissa and conjugate, so is the sum or difference above ascertained to the transverse diameter required.

Or,

$$a \text{ or } a' \times d \times \left\{ \sqrt{y^2 + (d \div 2)^2} \pm (d \div 2) \right\} \div y^2 = \textit{transverse diameter.}$$

EXAMPLE.—The conjugate diameter, *if*, of a hyperbola (fig. 86) is 72 (*d*); the ordinate *ec*, 48 (*y*); and the lesser abscissa, *ae*, 40 (*a'*); what is the length of the transverse diameter, *at*?

$\sqrt{48^2 + (72 \div 2)^2} = 60 =$ *square root of the squares of the ordinate and semi-conjugate.*
$60 + (72 \div 2) = 96 =$ *sum of above root and the semi-conjugate* (the lesser abscissa being used).
$40 \times 72 = 2880 =$ *product of abscissa and conjugate.*
$48^2 : 2880 :: 96 : 120 =$ *transverse diameter.*

To compute the Length of any Arc of an Hyperbola, commencing at the Vertex (fig. 87).

RULE.—To 19 times the transverse diameter add 21 times the parameter of the axis, and multiply the sum by the quotient of the lesser abscissa divided by the transverse diameter.

To 9 times the transverse diameter add 21 times the parameter, and multiply the sum by the quotient of the lesser abscissa divided by the transverse diameter.

To each of the products thus ascertained add 15 times the parameter, and divide the former by the latter; then this quotient, being multiplied by the ordinate, will give the length of the arc nearly.

Or,

$$\frac{(19\mathrm{D} + 21p)\,\frac{a}{\mathrm{D}} + 15p}{(9\mathrm{D} + 21p)\,\frac{a}{\mathrm{D}} + 15p} \times y = \textit{arc nearly.}$$




FIG. 87.

EXAMPLE.—In the hyperbola *gbc*, fig. 87, the transverse diameter is 120 (D), the conjugate 80 (*d*), the ordinate, *ec*, 48 (*y*), and the lesser abscissa, *ge*, 40 (*a'*); what is the length of the arc *gb*?

$$120 : 80 :: 80 : 53{\cdot}3333 = \textit{parameter.}$$

$$\left\{(19 \times 120) + (21 \times 53{\cdot}3333)\right\} \times \frac{40}{120} = 1133{\cdot}3333 = \textit{product of the sum of 19 times the transverse and 21 times the parameter, by the quotient of the lesser abscissa and the transverse.}$$

* When the greater abscissa is used, the difference is taken, and *vice versâ*.

$(9 \times 120) + (21 \times 53{\cdot}3333) \times \frac{40}{120} = 733{\cdot}3333 =$ *product of the sum of* 9 *times the transverse and* 21 *times the parameter, by the quotient of the lesser abscissa and transverse.*

$1133{\cdot}333 + (15 \times 53{\cdot}333) \div (733{\cdot}333 + (15 \times 53{\cdot}333)) = 1{\cdot}2609 =$ *quotient of former product and* 15 *times the parameter ÷ latter product and* 15 *times the parameter.*

$1{\cdot}2609 \times 48 = 60{\cdot}5232 =$ *above quotient × the ordinate = length.*

As the transverse diameter is to the conjugate, so is the conjugate to the parameter.

To compute the Area of an Hyperbola, the Transverse, Conjugate, and Lesser Abscissa being given (fig. 87).

RULE.—To the product of the transverse diameter and lesser abscissa add $\frac{4}{7}$ of the square of this abscissa, and multiply the square root of the sum by 21.

Add 4 times the square root of the product of the transverse diameter and lesser abscissa to the product last ascertained, and divide the sum by 75.

Divide 4 times the product of the conjugate diameter and lesser abscissa by the transverse diameter, and this last quotient, multiplied by the former, will give the area nearly.

Or,

$$\frac{21\sqrt{\mathrm{D}a' + \frac{5}{7}a'^2} + 4\sqrt{\mathrm{D}a'}}{75} \times \frac{4da'}{\mathrm{D}} = area.$$

EXAMPLE.—The transverse diameter of an hyperbola (fig. 87) is 60 (D), the conjugate 36 (d), and the lesser abscissa or height, ge, 20 (a') ; what is the area of the figure ?

$60 \times 20 + \frac{4}{7}$ of $20^2 = 1485{\cdot}7143 =$ *sum of the product of the transverse and abscissa and* $\frac{4}{7}$ *of the square of the abscissa.*

$\sqrt{1485{\cdot}7143} \times 21 = 809{\cdot}424 = 21$ *times the square root of the above sum.*

$\sqrt{60 \times 20} \times 4 + 809{\cdot}424 = 947{\cdot}988 =$ *sum of above result and the root of* 4 *times the product of the transverse and abscissa.*

$947{\cdot}988 \div 75 = 12{\cdot}6398 =$ *quotient of above result ÷* 75.

$\frac{36 \times 20 \times 4}{60} \times 12{\cdot}6398 = 606{\cdot}7104 =$ *product of* 4 *times the product of the conjugate and abscissa ÷ the transverse and the above quotient = area.*

CYCLOIDAL CURVES.

The Cycloid.

A Cycloid is the curve formed by any point, p, on a circle, npq, whose radius $on = a$, rolling on a line, BC.




FIG. 88.

$Am = x$, $pm = y$, a = radius of generating circle.

Bn = arc $pn = a\theta$. $(\theta = pon.)$

Arc $Ap = 2\sqrt{2ax} = 2 \times$ chord of corresponding arc of generating circle.

Circumference BAC $= 8a$, BC $= 2\pi a$.

Area $= 3 \times$ area of generating circle $= 3\pi a^2$.

Convex surface of cycloid of revolution about base $= \frac{64}{3}\pi a^2$.

Convex surface of cycloid of revolution about axis $= 8\pi a^2\left(\pi - \frac{4}{3}\right)$.

Volume of cycloid revolving about its base, BC $= 5\pi^2 a^3$.

Volume of cycloid revolving round its axis, AD $= \frac{\pi}{6}(9\pi^2 - 16)a^3$.

The Trochoid.

The Trochoid is the curve traced by a point *within* the circumference of the circle which rolls on a straight line.

The Epicycloid and Hypocycloid.

The Epicycloid is formed by any point in a circle rolling on the convex arc of another circle; the Hypocycloid is formed by any point in a circle rolling on the concave arc of another circle.
a and b are the radii of the fixed and rolling circles.

Length of arc of epicycloid after one revolution of generating circle $= \frac{8b}{a}(a + b)$.

Length of arc of hypocycloid after one revolution of generating circle $= \frac{8b}{a}(a - b)$.

Area of epicycloid between curve and fixed circle after one revolution of rolling circle $\Big\} = \pi b^2\left(3 + \frac{2b}{a}\right)$.

Area of hypocycloid between curve and fixed circle after one revolution of rolling circle $\Big\} = \pi b^2\left(3 - \frac{2b}{a}\right)$.

EQUATIONS TO CURVES.

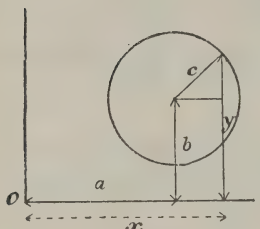


FIG. 89.

Circle.

General equation: $x^2 + y^2 - 2ax - 2by + a^2 + b^2 - c^2 = 0$.

If origin O is on the circumference, then $x^2 + y^2 - 2ax = 0$.

Equation to tangent: $y = mx + c\sqrt{1 + m^2}$,

where $m = -\frac{x'}{y'}$, x' and y' being the co-ordinates of the point on the circle at which the tangent is drawn.

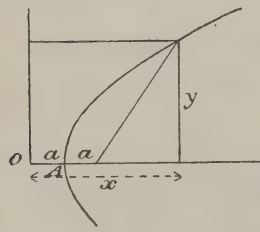


FIG. 90.

Parabola.

General equation: $y^2 = 4a(x - a)$.

If origin O is at A, then $y^2 = 4ax$.

Equation to tangent: $y = mx + \frac{a}{m}$,

where $m = \frac{2a}{y'}$, y' being the ordinate of the point on the curve at which the tangent is drawn.

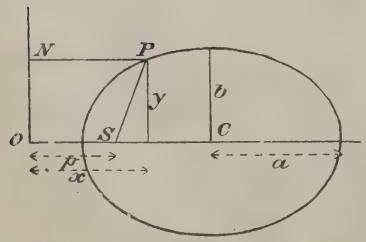


FIG. 91.

Ellipse.

$\frac{SP}{PN} = e =$ *less than* unity.

General equation: $y^2 + (x - p)^2 = e^2x^2$.

If the origin is at the centre, C, then—

$$y^2 = \frac{b^2}{a^2}(a^2 - x^2).$$

Equation to tangent: $y = mx + \sqrt{a^2m^2 + b^2}$, where $-\frac{b^2x'}{a^2y'} = m$, x' and y' being the co-ordinates of the point on the circle at which the tangent is drawn.

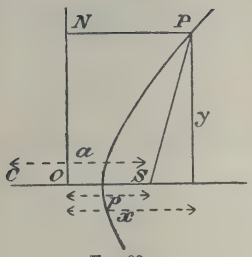


FIG. 92.

Hyperbola.

$$\frac{SP}{PN} = e = \textit{greater than} \text{ unity.}$$

General equation : $y^2 + (x - p)^2 = e^2x^2$.

If the origin is at the centre, C, then $y^2 = \frac{b^2}{a^2}(x^2 - a^2)$.

where $b^2 = (e^2 - 1)a^2$.

Equation to tangent : $y = mx + \sqrt{m^2a^2 - b^2}$.

The Logarithmic Curve.

In this curve the abscissa is the logarithm of the ordinate.

General equation : $y = a^x$,

where a is the base of the system.

Cycloidal Curves.

No rational algebraical equation expressing the relation of x to y can be found in the case of the Cycloid, Trochoid, Epicycloid, or Hypocycloid.

THE CATENARY.

(G. A. Burls.)

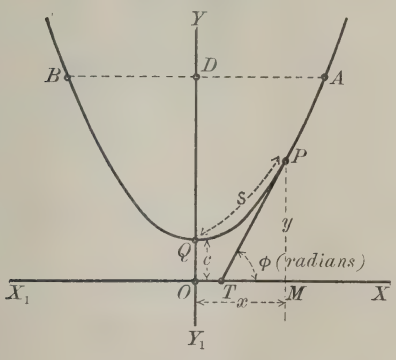


FIG. 93.

This is the curve in which a uniform, perfectly flexible, but inextensible, cord or chain hangs under the action of gravity. The weight of any portion of such a chain is proportional to its length, and accordingly it is usual to take as unit weight that of unit length of the chain.

Let A B (fig. 93) be the points of suspension; Q the lowest point; c the length of chain the weight of which is equal to the tension at Q. Take $QO = c$; then the equation to the curve referred to OX and OY as axes is:—

$$y = \frac{c}{2}\left\{ e^{\frac{x}{c}} + e^{-\frac{x}{c}} \right\} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (1)$$

which is very simply expressed in the notation of hyperbolic functions thus:—

$$\frac{y}{c} = \cosh. \frac{x}{c} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (2)$$

By aid of the table, pp. 103–104, the curve may readily be plotted.

The slope at any point P is given by:—

$$\tan \phi = \frac{dy}{dx} = \sinh. \frac{x}{c} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (3)$$

and is also at once given by the table.

If the tension at P be equal to the weight of T units of length of the chain, then it is easily shown that:—

$$T = y = PM \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (4)$$

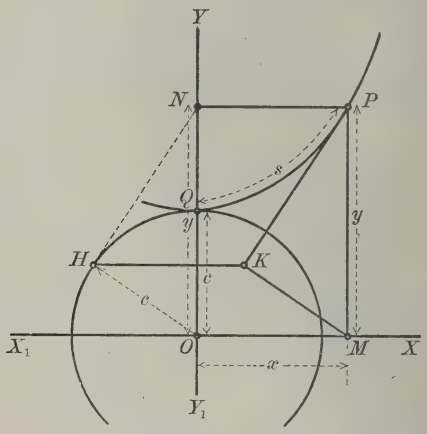


FIG. 94.

If the length of the chain from Q to P be denoted by s, then:—

$$s = c \sinh. \frac{x}{c} = c \tan \phi \quad . \quad . \quad . \quad . \quad . \quad . \quad (5)$$

Another simple and easily established expression for s is:—

$$s^2 = y^2 - c^2 \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (6)$$

With O as centre (fig. 94) and $OQ = c$ as radius, describe a circle.

Let P $(x\ y)$ be any point on the catenary ; draw the co-ordinates PM and PN.

From N draw NH, touching the circle at H ; and join OH.

Then ON $= y$. OH $= c$. Also as OHN is 90° :—

$$NH^2 = ON^2 - OH^2 = y^2 - c^2 = s^2 = QP^2, \text{ by (6).}$$

Thus NH is equal to the length of the arc QP of the catenary.

Also from (5) :—Tan $\phi = \frac{s}{c} = \frac{NH}{HO}$ = tan HON ; thus HON $= \phi$, and accordingly NH is parallel to the tangent to the catenary at P.

Through H draw HK parallel to OX meeting the tangent through P at K ; join KM. Then the triangles PKM and NHO are in all respects equal. And evidently K may be regarded as the free end of a string being unwound from the catenary, starting from Q, since PK = the arcual length PQ. Thus K is a point on the involute of the catenary starting from Q ; this involute is called the tractrix.

To find the catenary of given length, through any two points.

In fig. 95, given :—

$$P_1E = a = x_2 - x_1 ; \quad EP_2 = b = y_2 - y_1 ; \quad P_1P_2 = s$$

to find the axes, and the equation to P_1P_2.

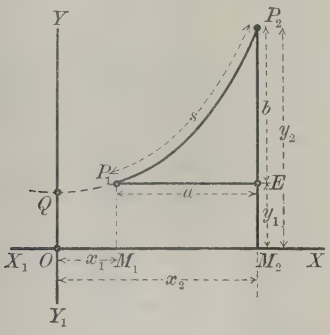


FIG. 95.

The value of c must first be found which satisfies the equation :—

$$\cosh.\frac{a}{c} = 1 + \frac{\frac{1}{2}(s^2 - b^2)}{c^2} \quad . \quad . \quad . \quad . \quad . \quad . \quad (7)$$

This is easily done by trial by aid of the table on pp. 103–104.

Knowing c we next find $(x_2 + x_1)$ from the equation :—

$$\coth.\frac{x_2 + x_1}{2c} = \frac{s}{b} \quad . \quad . \quad . \quad . \quad . \quad . \quad (8)$$

and as $x_2 - x_1 = a$, x_2 and x_1 are known.

Then as $y_1 = c \cosh.\frac{x_1}{c}$, $y_2 = c \cosh.\frac{x_2}{c}$, y_1 and y_2 are also known. Thus the axes are located and the equation is found.

s and l (= AB, fig. 93) are commonly known. Let $\frac{s}{l} = k$; then k is known.

c may now be found by aid of the equation:—

$$\frac{\sinh.\left(\frac{l}{2c}\right)}{\left(\frac{l}{2c}\right)} = k \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (9)$$

To facilitate the use of this equation the table on page 39 has been prepared, giving a sufficient range of values of $\frac{\sinh.\theta}{\theta}$ for ordinary practice. From this table, in any specific case θ is at once recognised; then $\frac{l}{2c} = \theta$, so that

$$c = \frac{l}{2\theta} \quad . \quad . \quad . \quad . \quad (10)$$

and is at once determined.

Knowing c, all the quantities connected with the curve are immediately determinable by aid of the equations above given.

Spirals.

The Spiral of Archimedes.—In this spiral the radius vector varies directly as the angle described.

General equation: $r = a\theta$,

where $a = \frac{c}{2\pi}$ if c be the value of r when $\theta = 2\pi$.

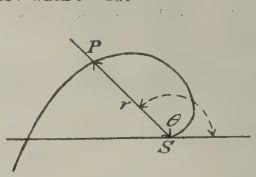


FIG. 96.

Let a line revolve uniformly round S, while a point, P, moves uniformly from S along it; then P will trace the Spiral of Archimedes.

The Logarithmic Spiral.—Here the angle described is the logarithm of the radius vector.

General equation: $r = a^{\theta}$.

It is also called the equiangular spiral, since it cuts the radius at a constant angle.

The Hyperbolic Spiral.—In this spiral as the angle increases at a uniform rate the radius vector decreases at an hyperbolic rate.

General equation: $r = \frac{a}{\theta}$.

TABLE OF VALUES OF $\frac{\text{Sinh. } \theta}{\theta}$.

(*G. A. Burls.*)

θ	$\frac{\text{Sinh. } \theta}{\theta}$	θ	$\frac{\text{Sinh. } \theta}{\theta}$	θ	$\frac{\text{Sinh. } \theta}{\theta}$	θ	$\frac{\text{Sinh. } \theta}{\theta}$
0	1	·61	1·06318	1·21	1·2626	1·81	1·6427
·01	1·0000167	·62	1·06531	1·22	1·2673	1·82	1·6510
·02	1·0000667	·63	1·06748	1·23	1·2719	1·83	1·6594
·03	1·0001500	·64	1·06968	1·24	1·2767	1·84	1·6678
·04	1·0002667	·65	1·07192	1·25	1·2815	1·85	1·6763
·05	1·0004167	·66	1·07420	1·26	1·2864	1·86	1·6850
·06	1·0006001	·67	1·07651	1·27	1·2913	1·87	1·6936
·07	1·0008169	·68	1·07887	1·28	1·2963	1·88	1·7023
·08	1·0010670	·69	1·08126	1·29	1·3013	1·89	1·7112
·09	1·0013505	·70	1·08369	1·30	1·3064	1·90	1·7201
·10	1·0016675	·71	1·08616	1·31	1·3116	1·91	1·7291
·11	1·0020179	·72	1·08867	1·32	1·3168	1·92	1·7381
·12	1·0024017	·73	1·09122	1·33	1·3220	1·93	1·7472
·13	1·0028190	·74	1·09381	1·34	1·3274	1·94	1·7564
·14	1·0032698	·75	1·09644	1·35	1·3329	1·95	1·7657
·15	1·0037542	·76	1·0991	1·36	1·3380	1·96	1·7751
·16	1·0042721	·77	1·1018	1·37	1·3435	1·97	1·7845
·17	1·0048236	·78	1·1045	1·38	1·3490	1·98	1·7941
·18	1·0054087	·79	1·1073	1·39	1·3546	1·99	1·8037
·19	1·0060275	·80	1·1101	1·40	1·3602	2·0	1·8134
·20	1·0066800	·81	1·1130	1·41	1·3659	2·1	1·9151
·21	1·0073662	·82	1·1159	1·42	1·3716	2·2	2·0259
·22	1·0080862	·83	1·1188	1·43	1·3774	2·3	2·1465
·23	1·0088400	·84	1·1218	1·44	1·3832	2·4	2·2776
·24	1·0096276	·85	1·1249	1·45	1·3891	2·5	2·4201
·25	1·0104492	·86	1·1279	1·46	1·3951	2·6	2·5749
·26	1·01130	·87	1·1310	1·47	1·4011	2·7	2·7430
·27	1·01219	·88	1·1342	1·48	1·4072	2·8	2·9257
·28	1·01312	·89	1·1374	1·49	1·4133	2·9	3·1239
·29	1·01407	·90	1·1406	1·50	1·4195	3·0	3·3393
·30	1·01507	·91	1·1438	1·51	1·4258	3·1	3·5730
·31	1·01609	·92	1·1471	1·52	1·4321	3·2	3·8268
·32	1·01716	·93	1·1505	1·53	1·4384	3·3	4·1024
·33	1·01825	·94	1·1539	1·54	1·4449	3·4	4·4016
·34	1·01938	·95	1·1573	1·55	1·4513	3·5	4·7264
·35	1·02054	·96	1·1608	1·56	1·4579	3·6	5·0793
·36	1·02174	·97	1·1643	1·57	1·4645	3·7	5·4625
·37	1·02297	·98	1·1679	1·58	1·4712	3·8	5·8788
·38	1·02424	·99	1·1715	1·59	1·4779	3·9	6·3310
·39	1·02554	1·0	1·1752	1·60	1·4847	4·0	6·8225
·40	1·02688	1·01	1·1789	1·61	1·4916	4·1	7·357
·41	1·02825	1·02	1·1826	1·62	1·4985	4·2	7·937
·42	1·02966	1·03	1·1864	1·63	1·5055	4·3	8·568
·43	1·03110	1·04	1·1902	1·64	1·5125	4·4	9·254
·44	1·03258	1·05	1·1941	1·65	1·5197	4·5	10·001
·45	1·03409	1·06	1·1980	1·66	1·5269	4·6	10·812
·46	1·03564	1·07	1·2020	1·67	1·5341	4·7	11·696
·47	1·03723	1·08	1·2060	1·68	1·5414	4·8	12·656
·48	1·03885	1·09	1·2101	1·69	1·5489	4·9	13·702
·49	1·04050	1·10	1·2142	1·70	1·5562	5·0	14·841
·50	1·04220	1·11	1·2183	1·71	1·5637	5·1	16·080
51	1·04392	1·12	1·2226	1·72	1·5713	5·2	17·430
·52	1·04568	1·13	1·2268	1·73	1·5790	5·3	18·899
·53	1·04748	1·14	1·2311	1·74	1·5867	5·4	20·500
·54	1·04931	1·15	1·2354	1·75	1·5945	5·5	22·244
·55	1·05118	1·16	1·2398	1·76	1·6024	5·6	24·145
·56	1·05309	1·17	1·2443	1·77	1·6103	5·7	26·216
·57	1·05504	1·18	1·2488	1·78	1·6183	5·8	28·474
·58	1·05702	1·19	1·2533	1·79	1·6264	5·9	30·935
·59	1·05903	1·20	1·2579	1·80	1·6345	6·0	33·619
·60	1·06109						

Involute of a Circle.

This curve is described by the extremity of a string which is uncoiled from the circumference of a circle.

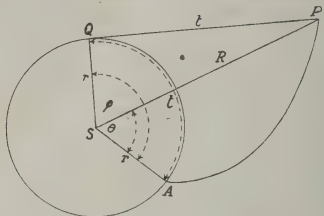


FIG. 97.

A, the point from which the string began to be unwrapped; QP (at right angles to QS), the string once coincident with, and therefore equal to, the arc AQ; ϕ, the angle QSA; θ, the angle PSA; join SP, then $t = \phi r \frac{2\pi}{360}$, in angular measure $= \phi r$, in circular measure; also

$$\theta = \frac{\sqrt{R^2 - r^2}}{r} - \tan^{-1}\frac{\sqrt{R^2 - r^2}}{r}, \text{ in circular measure.}$$

$\left(\tan^{-1}\frac{\sqrt{R^2-r^2}}{r}\right.$ is the angle (in circular measure) whose tangent is $\left.\frac{\sqrt{R^2-r^2}}{r}\right)$.

THE CIRCLE.

Formulæ.

d = diameter. r = radius. p = periphery or circumference. A = area.

π = ratio of circumference to diameter.

Periphery or Circumference.

$p = \pi d = 3{\cdot}14159d.$

$= 2\pi r = 6{\cdot}2832r.$

$= 2\sqrt{\pi A} = 3{\cdot}54\sqrt{A}.$

$= \frac{2A}{r} = \frac{4A}{d}.$

Diameter and Radius.

$d = \frac{p}{\pi} = \frac{p}{3{\cdot}14159}.$

$= 2\sqrt{\frac{A}{\pi}} = 1{\cdot}12838\sqrt{A}.$

$r = \frac{p}{2\pi} = \frac{p}{6{\cdot}2832}$

$= \sqrt{\frac{A}{\pi}} = 0{\cdot}56419\sqrt{A}.$

Area.

$A = \frac{\pi d^2}{4} = 0{\cdot}7854d^2.$

$= \pi r^2 = 3{\cdot}14159r^2.$

$= \frac{p^2}{4\pi} = \frac{p^2}{12{\cdot}566}.$

$= \frac{pr}{2} = \frac{pd}{4}.$

$\pi = 3{\cdot}1415926536.$

An approximate value of π is $\frac{22}{7}$, but a *much nearer* value is $\frac{355}{113}$, which is true as far as six places of decimals. The last fraction is easily remembered by writing down the first three odd numbers twice and dividing them in the middle, thus, 113 | 355.

$2\pi = 6{\cdot}283185.$	$6\pi = 18{\cdot}849556.$	$\frac{\pi}{2} = 1{\cdot}570796.$	$\frac{\pi}{8} = 0\ 392699.$	$\frac{1}{\pi} = 0{\cdot}318310.$	$\frac{6}{\pi} = 1{\cdot}909859.$	
$3\pi = 9{\cdot}424778.$	$7\pi = 21{\cdot}991148.$	$\frac{\pi}{3} = 1\ 047197.$	$\frac{\pi}{12} = 0{\cdot}261799.$	$\frac{2}{\pi} = 0{\cdot}636619.$	$\frac{8}{\pi} = 2{\cdot}546478.$	
$4\pi = 12{\cdot}566370.$	$8\pi = 25{\cdot}132741.$	$\frac{\pi}{4} = 0{\cdot}785398.$	$\frac{2\pi}{3} = 2{\cdot}094394.$	$\frac{3}{\pi} = 0{\cdot}954929.$	$\frac{12}{\pi} = 3{\cdot}819718.$	
$5\pi = 15{\cdot}707963.$	$9\pi = 28{\cdot}274334.$	$\frac{\pi}{6} = 0{\cdot}523599.$	$\frac{\pi}{360} = 0{\cdot}008726.$	$\frac{4}{\pi} = 1{\cdot}273239.$	$\frac{360}{\pi} = 114{\cdot}5915.$	
$\pi^2 = 9{\cdot}869650.$	$\sqrt{\pi} = 1{\cdot}772453.$	$\sqrt{\frac{1}{\pi}} = 0{\cdot}564189.$	$\sqrt{\frac{\pi}{2}} = 1{\cdot}253314.$	$\sqrt{\frac{2}{\pi}} = 0{\cdot}797884$	$\text{Log } \pi = 0{\cdot}49714987.$	

CIRCUMFERENCE AND AREA OF CIRCLES.

TABLE I.—Diameters advancing by Units.*

Diameter.	Circum.	Area.	Diameter.	Circum.	Area.	Diameter.	Circum.	Area.	Diameter.	Circum.	Area.
1	3·1416	0·7854	61	191·64	2922·5	121	380·13	11499	181	568·63	25730
2	6·2832	3·1416	62	194·78	3019·1	122	383·27	11690	182	571·77	26016
3	9·4248	7·0686	63	197·92	3117·2	123	386·42	11882	183	574·91	26302
4	12·566	12·5664	64	201·06	3217·0	124	389·56	12076	184	578·05	26590
5	15·708	19·6350	65	204·20	3318·3	125	392·70	12272	185	581·19	26880
6	18·850	28·2743	66	207·35	3421·2	126	395·84	12469	186	584·34	27172
7	21·991	38·4845	67	210·49	3525·7	127	398·98	12668	187	587·48	27465
8	25·133	50·2655	68	213·63	3631·7	128	402·12	12868	188	590·62	27759
9	28·274	63·6173	69	216·77	3739·3	129	405·27	13070	189	593·76	28055
10	31·416	78·54	70	219·91	3848·5	130	408·41	13273	190	596·90	28353
11	34·558	95·03	71	223·05	3959·2	131	411·55	13478	191	600·04	28652
12	37·699	113·10	72	226·19	4071·5	132	414·69	13685	192	603·19	28953
13	40·841	132·73	73	229·34	4185·4	133	417·83	13893	193	606·33	29255
14	43·982	153·94	74	232·48	4300·8	134	420·97	14103	194	609·47	29559
15	47·124	176·71	75	235·62	4417·9	135	424·12	14314	195	612·61	29865
16	50·265	201·06	76	238·76	4536·5	136	427·26	14527	196	615·75	30172
17	53·407	226·98	77	241·90	4656·6	137	430·40	14741	197	618·89	30481
18	56·549	254·47	78	245·04	4778·4	138	433·54	14957	198	622·04	30791
19	59·690	283·53	79	248·19	4901·7	139	436·68	15175	199	625·18	31103
20	62·832	314·16	80	251·33	5026·6	140	439·82	15394	200	628·32	31416
21	65·973	346·36	81	254·47	5153·0	141	442·96	15615	201	631·46	31731
22	69·115	380·13	82	257·61	5281·0	142	446·11	15837	202	634·60	32047
23	72·257	415·48	83	260·75	5410·6	143	449·25	16061	203	637·74	32365
24	75·398	452·39	84	263·89	5541·8	144	452·39	16286	204	640·89	32685
25	78·540	490·87	85	267·04	5674·5	145	455·53	16513	205	644·03	33006
26	81·681	530·93	86	270·18	5808·8	146	458·67	16742	206	647·17	33329
27	84·823	572·56	87	273·32	5944·7	147	461·81	16972	207	650·31	33654
28	87·965	615·75	88	276·46	6082·1	148	464·96	17203	208	653·45	33979
29	91·106	660·52	89	279·60	6221·1	149	468·10	17437	209	656·59	34307
30	94·248	706·86	90	282·74	6361·7	150	471·24	17671	210	659·73	34636
31	97·389	754·77	91	285·88	6503·9	151	474·38	17908	211	662·88	34967
32	100·53	804·25	92	289·03	6647·6	152	477·52	18146	212	666·02	35299
33	103·67	855·30	93	292·17	6792·9	153	480·66	18385	213	669·16	35633
34	106·81	907·92	94	295·31	6939·8	154	483·81	18627	214	672·30	35968
35	109·96	962·11	95	298·45	7088·2	155	486·95	18869	215	675·44	36305
36	113·10	1017·88	96	301·59	7238·2	156	490·09	19113	216	678·58	36644
37	116·24	1075·21	97	304·73	7389·8	157	493·23	19359	217	681·73	36984
38	119·38	1134·11	98	307·88	7543·0	158	496·37	19607	218	684·87	37325
39	122·52	1194·59	99	311·02	7697·7	159	499·51	19856	219	688·01	37668
40	125·66	1256·63	100	314·16	7854·0	160	502·65	20106	220	691·15	38013
41	128·81	1320·25	101	317·30	8011·9	161	505·80	20358	221	694·29	38360
42	131·95	1385·44	102	320·44	8171·3	162	508·94	20612	222	697·43	38708
43	135·09	1452·20	103	323·58	8332·3	163	512·08	20867	223	700·58	39057
44	138·23	1520·52	104	326·73	8494·9	164	515·22	21124	224	703·72	39408
45	141·37	1590·43	105	329·87	8659·0	165	518·36	21382	225	706·86	39761
46	144·51	1661·90	106	333·01	8824·7	166	521·50	21642	226	710·00	40115
47	147·65	1734·94	107	336·15	8992·0	167	524·65	21904	227	713·14	40471
48	150·80	1809·55	108	339·29	9160·9	168	527·79	22167	228	716·28	40828
49	153·94	1885·74	109	342·43	9331·3	169	530·93	22432	229	719·42	41187
50	157·08	1963·5	110	345·58	9503·3	170	534·07	22698	230	722·57	41548
51	160·22	2042·8	111	348·72	9676·9	171	537·21	22966	231	725·71	41910
52	163·36	2123·7	112	351·86	9852·0	172	540·35	23235	232	728·85	42273
53	166·50	2206·2	113	355·00	10028·8	173	543·50	23506	233	731·99	42638
54	169·65	2290·2	114	358·14	10207·0	174	546·64	23779	234	735·13	43005
55	172·79	2375·8	115	361·28	10386·9	175	549·78	24053	235	738·27	43374
56	175·93	2463·0	116	364·42	10568·3	176	552·92	24328	236	741·42	43744
57	179·07	2551·8	117	367·57	10751·3	177	556·06	24606	237	744·56	44115
58	182·21	2642·1	118	370·71	10935·9	178	559·20	24885	238	747·70	44488
59	185·35	2734·0	119	373·85	11122·0	179	562·35	25165	239	750·84	44863
60	188·50	2827·4	120	376·99	11310·0	180	565·49	25447	240	753·98	45239

* For Diameters advancing by 'Tenths,' shift the decimal point one place to the left for Circumferences, and two p'aces to the left for Areas.

EXAMPLE.—What is the circumference and the area of a circle whose diameter is 1·7 (i.e. 17 tenths)?
Circumference = 5·3407; Area = 2·2698.

TABLE I. (*continued*).

Diameter.	Circum.	Area.	Diameter.	Circum.	Area.	Diameter.	Circum.	Area.	Diameter.	Circum.	Area.
241	757·12	45617	305	958·19	73062	369	1159·25	106941	433	1360·31	147254
242	760·27	45996	306	961·33	73542	370	1162·39	107521	434	1363·45	147934
243	763·41	46377	307	964·47	74023	371	1165·53	108103	435	1366·59	148617
244	766·55	46759	308	967·61	74506	372	1168·67	108687	436	1369·73	149301
245	769·69	47144	309	970·75	74991	373	1171·81	109272	437	1372·88	149987
246	772·83	47529	310	973·89	75477	374	1174·96	109858	438	1376·02	150674
247	775·97	47916	311	977·04	75964	375	1178·10	110447	439	1379·16	151363
248	779·12	48305	312	980·18	76454	376	1181·24	111036	440	1382·30	152053
249	782·26	48695	313	983·32	76945	377	1184·38	111628	441	1385·44	152745
250	785·40	49087	314	986·46	77437	378	1187·52	112221	442	1388·58	153439
251	788·54	49481	315	989·60	77931	379	1190·66	112815	443	1391·73	154134
252	791·68	49876	316	992·74	78427	380	1193·81	113411	444	1394·87	154830
253	794·82	50273	317	995·88	78924	381	1196·95	114009	445	1398·01	155528
254	797·96	50671	318	999·03	79423	382	1200·09	114608	446	1401·15	156228
255	801·11	51071	319	1002·17	79923	383	1203·23	115209	447	1404·29	156930
256	804·25	51472	320	1005·31	80425	384	1206·37	115812	448	1407·43	157633
257	807·39	51875	321	1008·45	80928	385	1209·51	116416	449	1410·58	158337
258	810·53	52279	322	1011·59	81433	386	1212·65	117021	450	1413·72	159043
259	813·67	52685	323	1014·73	81940	387	1215·80	117628	451	1416·86	159751
260	816·81	53093	324	1017·88	82448	388	1218·94	118237	452	1420·00	160460
261	819·96	53502	325	1021·02	82958	389	1222·08	118847	453	1423·14	161171
262	823·10	53913	326	1024·16	83469	390	1225·22	119459	454	1426·28	161883
263	826·24	54325	327	1027·30	83982	391	1228·36	120072	455	1429·42	162597
264	829·38	54739	328	1030·44	84496	392	1231·50	120687	456	1432·57	163313
265	832·52	55155	329	1033·58	85012	393	1234·65	121304	457	1435·71	164030
266	835·66	55572	330	1036·73	85530	394	1237·79	121922	458	1438·85	164748
267	838·81	55990	331	1039·87	86049	395	1240·93	122542	459	1441·99	165468
268	841·95	56410	332	1043·01	86570	396	1244·07	123163	460	1445·13	166190
269	845·09	56832	333	1046·15	87092	397	1247·21	123786	461	1448·27	166914
270	848·23	57256	334	1049·29	87616	398	1250·35	124410	462	1451·42	167639
271	851·37	57680	335	1052·43	88141	399	1253·50	125036	463	1454·56	168365
272	854·51	58107	336	1055·58	88668	400	1256·64	125664	464	1457·70	169093
273	857·66	58535	337	1058·72	89197	401	1259·78	126293	465	1460·84	169823
274	860·80	58965	338	1061·86	89727	402	1262·92	126923	466	1463·98	170544
275	863·94	59396	339	1065·00	90259	403	1266·06	127556	467	1467·12	171287
276	867·08	59828	340	1068·14	90792	404	1269·20	128190	468	1470·27	172021
277	870·22	60263	341	1071·28	91327	405	1272·35	128825	469	1473·41	172757
278	873·36	60699	342	1074·42	91863	406	1275·49	129462	470	1476·55	173494
279	876·50	61136	343	1077·57	92401	407	1278·63	130100	471	1479·69	174234
280	879·65	61575	344	1080·71	92941	408	1281·77	130741	472	1482·83	174974
281	882·79	62016	345	1083·85	93482	409	1284·91	131382	473	1485·97	175716
282	885·93	62458	346	1086·99	94025	410	1288·05	132025	474	1489·11	176460
283	889·07	62902	347	1090·13	94569	411	1291·19	132670	475	1492·26	177205
284	892·21	63347	348	1093·27	95115	412	1294·34	133317	476	1495·40	177952
285	895·35	63794	349	1096·42	95662	413	1297·48	133965	477	1498·54	178701
286	898·50	64242	350	1099·56	96211	414	1300·62	134614	478	1501·68	179451
287	901·64	64692	351	1102·70	96762	415	1303·76	135265	479	1504·82	180203
288	904·78	65144	352	1105·84	97314	416	1306·90	135918	480	1507·96	180956
289	907·92	65597	353	1108·98	97868	417	1310·04	136572	481	1511·11	181711
290	911·06	66052	354	1112·12	98423	418	1313·19	137228	482	1514·25	182467
291	914·20	66508	355	1115·27	98980	419	1316·33	137885	483	1517·39	183225
292	917·35	66966	356	1118·41	99538	420	1319·47	138544	484	1520·53	183984
293	920·49	67426	357	1121·55	100098	421	1322·61	139205	485	1523·67	184745
294	923·63	67887	358	1124·69	100660	422	1325·75	139867	486	1526·81	185508
295	926·77	68349	359	1127·83	101223	423	1328·89	140531	487	1529·96	186272
296	929·91	68813	360	1130·97	101788	424	1332·04	141196	488	1533·10	187038
297	933·05	69279	361	1134·11	102354	425	1335·18	141863	489	1536·24	187805
298	936·19	69747	362	1137·26	102922	426	1338·32	142531	490	1539·38	188574
299	939·34	70215	363	1140·40	103491	427	1341·46	143201	491	1542·52	189345
300	942·48	70686	364	1143·54	104062	428	1344·60	143872	492	1545·66	190117
301	945·62	71158	365	1146·68	104635	429	1347·74	144545	493	1548·81	190890
302	948·76	71631	366	1149·82	105209	430	1350·88	145220	494	1551·95	191665
303	951·90	72107	367	1152·96	105785	431	1354·03	145896	495	1555·09	192442
304	955·04	72583	368	1156·11	106362	432	1357·17	146574	496	1558·23	193221

TABLE I. (*continued*).

Diameter.	Circum.	Area.	Diameter.	Circum.	Area.	Diameter.	Circum.	Area.	Diameter.	Circum.	Area.
497	1561·37	194000	561	1762·43	247181	625	1963·50	306796	689	2164·56	372845
498	1564·51	194782	562	1765·58	248063	626	1966·64	307779	690	2167·70	373928
499	1567·65	195565	563	1768·72	248947	627	1969·78	308763	691	2170·84	375013
500	1570·80	196350	564	1771·86	249832	628	1972·92	309748	692	2173·98	376099
501	1573·94	197136	565	1775·00	250719	629	1976·06	310736	693	2177·12	377187
502	1577·08	197923	566	1778·14	251607	630	1979·20	311725	694	2180·27	378276
503	1580·22	198713	567	1781·28	252497	631	1982·35	312715	695	2183·41	379367
504	1583·36	199504	568	1784·42	253388	632	1985·49	313707	696	2186·55	380459
505	1586·50	200296	569	1787·57	254281	633	1988·63	314700	697	2189·69	381554
506	1589·65	201090	570	1790·71	255176	634	1991·77	315696	698	2192·83	382649
507	1592·79	201886	571	1793·85	256072	635	1994·91	316692	699	2195·97	383746
508	1595·93	202683	572	1796·99	256970	636	1998·05	317690	700	2199·11	384845
509	1599·07	203482	573	1800·13	257869	637	2001·19	318690	701	2202·26	385945
510	1602·21	204282	574	1803·27	258770	638	2004·34	319692	702	2205·40	387047
511	1605·35	205084	575	1806·42	259672	639	2007·48	320695	703	2208·54	388151
512	1608·50	205887	576	1809·56	260576	640	2010·62	321699	704	2211·68	389256
513	1611·64	206692	577	1812·70	261482	641	2013·67	322705	705	2214·82	390363
514	1614·78	207499	578	1815·84	262389	642	2016·90	323713	706	2217·96	391471
515	1617·92	208307	579	1818·98	263298	643	2020·04	324722	707	2221·11	392580
516	1621·06	209117	580	1822·12	264208	644	2023·19	325733	708	2224·25	393692
517	1624·20	209928	581	1825·27	265120	645	2026·33	326745	709	2227·39	394805
518	1627·35	210741	582	1828·41	266033	646	2029·47	327759	710	2230·53	395919
519	1630·49	211556	583	1831·55	266948	647	2032·61	328775	711	2233·67	397035
520	1633·63	212372	584	1834·69	267865	648	2035·75	329792	712	2236·81	398153
521	1636·77	213189	585	1837·83	268783	649	2038·89	330810	713	2239·96	399272
522	1639·91	214008	586	1840·97	269702	650	2042·04	331831	714	2243·10	400393
523	1643·05	214829	587	1844·11	270624	651	2045·18	332853	715	2246·24	401515
524	1646·20	215651	588	1847·26	271547	652	2048·32	333876	716	2249·38	402639
525	1649·34	216475	589	1850·40	272471	653	2051·46	334901	717	2252·52	403765
526	1652·48	217301	590	1853·54	273397	654	2054·60	335927	718	2255·66	404892
527	1655·62	218128	591	1856·68	274325	655	2057·74	336955	719	2258·81	406020
528	1658·76	218956	592	1859·82	275254	656	2060·88	337985	720	2261·95	407150
529	1661·90	219787	593	1862·96	276184	657	2064·03	339016	721	2265·09	408282
530	1665·04	220618	594	1866·11	277117	658	2067·17	340049	722	2268·23	409416
531	1668·19	221452	595	1869·25	278051	659	2070·31	341083	723	2271·37	410550
532	1671·33	222287	596	1872·39	278986	660	2073·45	342119	724	2274·51	411687
533	1674·47	223123	597	1875·53	279923	661	2076·59	343157	725	2277·65	412825
534	1677·61	223961	598	1878·67	280862	662	2079·73	344196	726	2280·80	413965
535	1680·75	224801	599	1881·81	281802	663	2082·88	345237	727	2283·94	415106
536	1683·89	225642	600	1884·96	282743	664	2086·02	346279	728	2287·08	416248
537	1687·04	226484	601	1888·10	283687	665	2089·16	347323	729	2290·22	417393
538	1690·18	227329	602	1891·24	284631	666	2092·30	348368	730	2293·36	418539
539	1693·32	228175	603	1894·38	285578	667	2095·44	349415	731	2296·50	419686
540	1696·46	229022	604	1897·52	286526	668	2098·58	350464	732	2299·65	420835
541	1699·60	229871	605	1900·66	287475	669	2101·73	351514	733	2302·79	421986
542	1702·74	230722	606	1903·81	288426	670	2104·87	352565	734	2305·93	423139
543	1705·88	231574	607	1906·95	289379	671	2108·01	353618	735	2309·07	424292
544	1709·03	232428	608	1910·09	290333	672	2111·15	354673	736	2312·21	425447
545	1712·17	233283	609	1913·23	291289	673	2114·29	355730	737	2315·35	426604
546	1715·31	234140	610	1916·37	292247	674	2117·43	356788	738	2318·50	427762
547	1718·45	234998	611	1919·51	293206	675	2120·58	357847	739	2321·64	428922
548	1721·59	235858	612	1922·65	294166	676	2123·72	358908	740	2324·78	430084
549	1724·73	236720	613	1925·80	295128	677	2126·86	359971	741	2327·92	431247
550	1727·88	237583	614	1928·94	296092	678	2130·00	361035	742	2331·06	432412
551	1731·02	238448	615	1932·08	297057	679	2133·14	362101	743	2334·30	433578
552	1734·16	239314	616	1935·22	298024	680	2136·28	363168	744	2337·34	434746
553	1737·30	240182	617	1938·36	298992	681	2139·42	364237	745	2340·49	435916
554	1740·44	241051	618	1941·50	299962	682	2142·57	365308	746	2343·63	437087
555	1743·58	241922	619	1944·65	300934	683	2145·71	366380	747	2346·77	438259
556	1746·73	242795	620	1947·79	301907	684	2148·85	367453	748	2349·91	439433
557	1749·87	243669	621	1950·93	302882	685	2151·99	368528	749	2353·05	440609
558	1753·01	244545	622	1954·07	303858	686	2155·13	369605	750	2356·19	441786
559	1756·15	245422	623	1957·21	304836	687	2158·27	370684	751	2359·34	442965
560	1759·29	246301	624	1960·35	305815	688	2161·42	371764	752	2362·48	444146

TABLE I. (*continued*).

Diameter.	Circum.	Area.	Diameter.	Circum.	Area.	Diameter.	Circum.	Area.	Diameter.	Circum.	Area.
753	2365·62	445328	815	2560·40	521681	877	2755·18	604073	939	2949·96	692502
754	2368·76	446511	816	2563·54	522962	878	2758·32	605451	940	2953·10	693978
755	2371·90	447697	817	2566·68	524245	879	2761·46	606831	941	2956·24	695455
756	2375·04	448883	818	2569·82	525529	880	2764·60	608212	942	2959·38	696934
757	2378·19	450072	819	2572·96	526814	881	2767·74	609595	943	2962·52	698415
758	2381·33	451262	820	2576·11	528102	882	2770·88	610980	944	2965·66	699897
759	2384·47	452453	821	2579·25	529391	883	2774·03	612366	945	2968·81	701380
760	2387·61	453646	822	2582·39	530681	884	2777·17	613754	946	2971·95	702865
761	2390·75	454841	823	2585·53	531973	885	2780·31	615143	947	2975·09	704352
762	2393·89	456037	824	2588·67	533267	886	2783·45	616534	948	2978·23	705840
763	2397·04	457234	825	2591·81	534562	887	2786·59	617927	949	2981·37	707330
764	2400·18	458434	826	2594·96	535858	888	2789·73	619321	950	2984·51	708822
765	2403·32	459635	827	2598·10	537157	889	2792·88	620717	951	2987·65	710315
766	2406·46	460837	828	2601·24	538456	890	2796·02	622114	952	2990·80	711809
767	2409·60	462041	829	2604·38	539758	891	2799·16	623513	953	2993·94	713307
768	2412·74	463247	830	2607·52	541061	892	2802·30	624913	954	2997·08	714803
769	2415·88	464454	831	2610·66	542365	893	2805·44	626315	955	3000·22	716303
770	2419·03	465663	832	2613·81	543671	894	2808·58	627718	956	3003·36	717804
771	2422·17	466873	833	2616·95	544979	895	2811·73	629124	957	3006·50	719306
772	2425·31	468085	834	2620·09	546288	896	2814·87	630530	958	3009·65	720810
773	2428·45	469298	835	2623·23	547599	897	2818·01	631938	959	3012·79	722316
774	2431·59	470513	836	2626·37	548912	898	2821·15	633348	960	3015·93	723823
775	2434·73	471730	837	2629·51	550226	899	2824·29	634760	961	3019·07	725332
776	2437·88	472948	838	2632·65	551541	900	2827·43	636173	962	3022·21	726842
777	2441·02	474168	839	2635·80	552858	901	2830·58	637587	963	3025·35	728354
778	2444·16	475389	840	2638·94	554177	902	2833·72	639003	964	3028·50	729867
779	2447·30	476612	841	2642·08	555497	903	2836·86	640421	965	3031·64	731382
780	2450·44	477836	842	2645·22	556819	904	2840·00	641840	966	3034·78	732899
781	2453·58	479062	843	2648·36	558142	905	2843·14	643261	967	3037·92	734417
782	2456·73	480290	844	2651·50	559467	906	2846·28	644683	968	3041·06	735937
783	2459·87	481519	845	2654·65	560794	907	2849·42	646107	969	3044·20	737458
784	2463·01	482750	846	2657·79	562122	908	2852·57	647533	970	3047·34	738981
785	2466·15	483982	847	2660·93	563452	909	2855·71	648960	971	3050·49	740506
786	2469·29	485216	848	2664·07	564783	910	2858·85	650388	972	3053·63	742032
787	2472·43	486451	849	2667·21	566116	911	2861·99	651818	973	3056·77	743559
788	2475·58	487688	850	2670·35	567450	912	2865·13	653250	974	3059·91	745088
789	2478·72	488927	851	2673·50	568786	913	2868·27	654684	975	3063·05	746619
790	2481·86	490167	852	2676·64	570124	914	2871·42	656118	976	3066·19	748151
791	2485·00	491409	853	2679·78	571463	915	2874·56	657555	977	3069·34	749685
792	2488·14	492652	854	2682·92	572803	916	2877·70	658993	978	3072·48	751221
793	2491·28	493897	855	2686·06	574146	917	2880·84	660433	979	3075·62	752758
794	2494·42	495143	856	2689·20	575490	918	2883·98	661874	980	3078·76	754296
795	2497·57	496391	857	2692·34	576835	919	2887·12	663317	981	3081·90	755837
796	2500·71	497641	858	2695·49	578182	920	2890·27	664761	982	3085·04	757378
797	2503·85	498892	859	2698·63	579530	921	2893·41	666207	983	3088·19	758922
798	2506·99	500145	860	2701·77	580880	922	2896·55	667654	984	3091·33	760466
799	2510·13	501399	861	2704·91	582232	923	2899·69	669103	985	3094·47	762013
800	2513·27	502655	862	2708·05	583585	924	2902·83	670554	986	3097·61	763561
801	2516·42	503912	863	2711·19	584940	925	2905·97	672006	987	3100·75	765111
802	2519·56	505171	864	2714·34	586297	926	2909·11	673460	988	3103·89	766662
803	2522·70	506432	865	2717·48	587655	927	2912·26	674915	989	3107·04	768215
804	2525·84	507694	866	2720·62	589014	928	2915·40	676372	990	3110·18	769769
805	2528·98	508958	867	2723·76	590375	929	2918·54	677831	991	3113·32	771325
806	2532·12	510223	868	2726·90	591738	930	2921·68	679291	992	3116·46	772882
807	2535·27	511490	869	2730·04	593102	931	2924·82	680752	993	3119·60	774441
808	2538·41	512758	870	2733·19	594468	932	2927·96	682216	994	3122·74	776002
809	2541·55	514028	871	2736·33	595835	933	2931·11	683680	995	3125·88	777564
810	2544·69	515300	872	2739·47	597204	934	2934·25	685147	996	3129·03	779128
811	2547·83	516573	873	2742·61	598575	935	2937·39	686615	997	3132·17	780693
812	2550·97	517848	874	2745·75	599947	936	2940·53	688084	998	3135·31	782260
813	2554·11	519124	875	2748·89	601320	937	2943·67	689555	999	3138·45	783828
814	2557·26	520402	876	2752·04	602696	938	2946·81	691028			

CIRCUMFERENCE AND AREA OF CIRCLES.

TABLE II.—Diameters advancing by 8ths.

Diameter.	Circ.	Area.
1/32	·0981	·00076
1/16	·1963	·00306
3/32	·3926	·01227
1/8	·5890	·02761
5/32	·7854	·04908
3/16	·9817	·07669
7/32	1·178	·1104
1/4	1·374	·1503
9/32	1·570	·1963
5/16	1·767	·2485
11/32	1·963	·3067
3/8	2·159	·3712
13/32	2·356	·4417
7/16	2·552	·5184
15/32	2·748	·6013
1/2	2·945	·6902
17/32	3·141	·7854
9/16	3·534	·9940
19/32	3·927	1·227
5/8	4·319	1·484
21/32	4·712	1·767
11/16	5·105	2·073
23/32	5·497	2·405
3/4	5·890	2·761
25/32	6·283	3·141
13/16	6·675	3·546
27/32	7·068	3·976
7/8	7·461	4·430
29/32	7·854	4·908
15/16	8·246	5·411
31/32	8·639	5·939
1	9·032	6·491
1 1/32	9·424	7·068
1 1/16	9·817	7·669
1 3/32	10·21	8·295
1 1/8	10·60	8·946
1 5/32	10·99	9·621
1 3/16	11·38	10·320
1 7/32	11·78	11·044
1 1/4	12·17	11·793
1 9/32	12·56	12·566
1 5/16	12·95	13·364
1 11/32	13·35	14·186
1 3/8	13·74	15·033
1 13/32	14·13	15·904
1 7/16	14·52	16·800
1 15/32	14·92	17·720
1 1/2	15·31	18·665
1 17/32	15·70	19·635
1 9/16	16·10	20·629
1 19/32	16·49	21·647
1 5/8	16·88	22·690
1 21/32	17·27	23·758
1 11/16	17·67	24·850
1 23/32	18·06	25·967
1 3/4	18·45	27·108
1 25/32	18·84	28·274
1 13/16	19·24	29·464
1 27/32	19·63	30·679
1 7/8	20·02	31·919
1 29/32	20·42	33·183
1 15/16	20·81	34·471
1 31/32	21·20	35·784
2	21·57	37·122
2 1/32	21·99	38·484
2 1/16	22·38	39·871
2 3/32	22·77	41·282
2 1/8	23·16	42·718
2 5/32	23·56	44·178
2 3/16	23·95	45·663
2 7/32	24·34	47·173
2 1/4	24·74	48·707
2 9/32	25·13	50·265
2 5/16	25·52	51·848
2 11/32	25·91	53·456
2 3/8	26·31	55·088
2 13/32	26·70	56·745
2 7/16	27·09	58·426
2 15/32	27·48	60·132
2 1/2	27·88	61·862
2 17/32	28·27	63·617
2 9/16	28·66	65·396
2 19/32	29·05	67·200
2 5/8	29·45	69·029
2 21/32	29·84	70·882
2 11/16	30·23	72·759
2 23/32	30·63	74·662
2 3/4	31·02	76·588
2 25/32	31·41	78·539
2 13/16	31·80	80·515
2 27/32	32·20	82·516
2 7/8	32·59	84·540
2 29/32	32·98	86·590
2 15/16	33·37	88·664
2 31/32	33·77	90·762
3	34·16	92·885
3 1/32	34·55	95·033
3 1/16	34·95	97·205
3 3/32	35·34	99·402
3 1/8	35·73	101·62
3 5/32	36·12	103·86
3 3/16	36·52	106·13
3 7/32	36·91	108·43
3 1/4	37·30	110·75
3 9/32	37·69	113·09
3 5/16	38·09	115·46
3 11/32	38·48	117·85
3 3/8	38·87	120·27
3 13/32	39·27	122·71
3 7/16	39·66	125·18
3 15/32	40·05	127·67
3 1/2	40·44	130·19
3 17/32	40·84	132·73
3 9/16	41·23	135·29
3 19/32	41·62	137·88
3 5/8	42·01	140·50
3 21/32	42·41	143·13
3 11/16	42·80	145·80
3 23/32	43·19	148·48
3 3/4	43·58	151·20
3 25/32	43·98	153·93
3 13/16	44·37	156·69
3 27/32	44·76	159·48
3 7/8	45·16	162·29
3 29/32	45·55	165·13
3 15/16	45·94	167·98
3 31/32	46·33	170·87
4	46·73	173·78
4 1/32	47·12	176·71
4 1/16	47·51	179·67
4 3/32	47·90	182·65
4 1/8	48·30	185·66
4 5/32	48·69	188·69
4 3/16	49·08	191·74
4 7/32	49·48	194·82
4 1/4	49·87	197·93
4 9/32	50·26	201·06
4 5/16	50·65	204·21
4 11/32	51·05	207·39
4 3/8	51·44	210·59
4 13/32	51·83	213·82
4 7/16	52·22	217·07
4 15/32	52·62	220·35
4 1/2	53·01	223·65
4 17/32	53·40	226·98
4 9/16	53·79	230·33
4 19/32	54·19	233·70
4 5/8	54·58	237·10
4 21/32	54·97	240·52
4 11/16	55·37	243·97
4 23/32	55·76	247·45
4 3/4	56·16	250·94
4 25/32	56·54	254·46
4 13/16	56·94	258·01
4 27/32	57·33	261·58
4 7/8	57·72	265·18
4 29/32	58·11	268·80
4 15/16	58·51	272·44
4 31/32	58·90	276·11
5	59·29	279·81
5 1/32	59·69	283·52
5 1/16	60·08	287·27
5 3/32	60·47	291·03
5 1/8	60·86	294·83
5 5/32	61·26	298·64
5 3/16	61·65	302·48
5 7/32	62·04	306·35
5 1/4	62·43	310·24
5 9/32	62·83	314·16
5 5/16	63·22	318·09
5 11/32	63·61	322·06
5 3/8	64·01	326·05
5 13/32	64·40	330·06
5 7/16	64·79	334·10
5 15/32	65·18	338·16
5 1/2	65·58	342·25
5 17/32	65·97	346·36
5 9/16	66·36	350·49
5 19/32	66·75	354·65
5 5/8	67·15	358·84
5 21/32	67·54	363·05
5 11/16	67·93	367·28
5 23/32	68·32	371·54
5 3/4	68·72	375·82
5 25/32	69·11	380·13
5 13/16	69·50	384·46
5 27/32	69·90	388·82
5 7/8	70·29	393·20
5 29/32	70·68	397·60
5 15/16	71·07	402·03
5 31/32	71·47	406·49
6	71·86	410·97
6 1/32	72·25	415·47
6 1/16	72·64	420·00
6 3/32	73·04	424·55
6 1/8	73·43	429·13
6 5/32	73·82	433·73
6 3/16	74·21	438·30
6 7/32	74·61	443·01
6 1/4	75·	447·69
6 9/32	75·39	452·39
6 5/16	75·79	457·11
6 11/32	76·18	461·86
6 3/8	76·57	466·63
6 13/32	76·96	471·43
6 7/16	77·36	476·25
6 15/32	77·75	481·10
6 1/2	78·14	485·97
6 17/32	78·54	490·87
6 9/16	78·93	495·79
6 19/32	79·32	500·74
6 5/8	79·71	505·71
6 21/32	80·10	510·70
6 11/16	80·50	515·72
6 23/32	80·89	520·70
6 3/4	81·28	525·83
6 25/32	81·68	530·93
6 13/16	82·07	536·04
6 27/32	82·46	541·18
6 7/8	82·85	546·35
6 29/32	83·25	551·54
6 15/16	83·64	556·76
6 31/32	84·03	562·00
7	84·43	567·26
7 1/32	84·82	572·55
7 1/16	85·21	577·87
7 3/32	85·60	583·20
7 1/8	86·	588·57
7 5/32	86·39	593·95
7 3/16	86·78	599·37
7 7/32	87·17	604·80
7 1/4	87·57	610·26
7 9/32	87·96	615·75
7 5/16	88·35	621·26
7 11/32	88·75	626·79
7 3/8	89·14	632·35
7 13/32	89·53	637·94
7 7/16	89·92	643·54
7 15/32	90·32	649·18
7 1/2	90·71	654·83
7 17/32	91·10	660·52
7 9/16	91·49	666·22
7 19/32	91·89	671·95
7 5/8	92·28	677·71
7 21/32	92·67	683·49
7 11/16	93·06	689·29
7 23/32	93·46	695·12
7 3/4	93·85	700·98

TABLE II. (*continued*).

Diameter.	Circ.	Area.
30	94·24	706·86
	94·64	712·76
¼	95·03	718·69
	95·42	724·64
½	95·81	730·61
	96·21	736·61
¾	96·60	742·64
	96·99	748·69
31	97·38	754·76
	97·78	760·86
¼	98·17	766·99
	98·56	773·14
½	98·96	779·31
	99·35	785·51
¾	99·74	791·73
	100·1	797·97
32	100·5	804·24
	100·9	810·54
¼	101·3	816·86
	101·7	823·21
½	102·1	829·57
	102·4	835·97
¾	102·8	842·39
	103·2	848·83
33	103·6	855·30
	104·	861·79
¼	104·4	868·30
	104·8	874·84
½	105·2	881·41
	105·6	888·00
¾	106·	894·61
	106·4	901·25
34	106·8	907·92
	107·2	914·61
¼	107·5	921·32
	107·9	928·06
½	108·3	934·82
	108·7	941·60
¾	109·1	948·41
	109·5	955·25
35	109·9	962·11
	110·3	968·99
¼	110·7	975·90
	111·1	982·84
½	111·5	989·80
	111·9	996·78
¾	112·3	1003·7
	112·7	1010·8
36	113·	1017·8
	113·4	1024·9
¼	113·8	1032·0
	114·2	1039·1
½	114·6	1046·3
	115·	1053·5
¾	115·4	1060·7
	115·8	1067·9
37	116·2	1075·2
	116·6	1082·4
¼	117·	1089·7
	117·4	1097·1
½	117·8	1104·4
	118·2	1111·8
¾	118·6	1119·2
	118·9	1126·6
38	119·3	1134·1
	119·7	1141·5
¼	120·1	1149·0
	120·5	1156·6
½	120·9	1164·1
	121·3	1171·7
¾	121·7	1179·3
	122·1	1186·9
39	122·5	1194·5
	122·9	1202·2
¼	123·3	1209·9
	123·7	1217·6
½	124·	1225·4
	124·4	1233·1
¾	124·8	1240·9
	125·2	1248·7
40	125·6	1256·6
	126·	1264·5
¼	126·4	1272·3
	126·8	1280·3
½	127·2	1288·2
	127·6	1296·2
¾	128·	1304·2
	128·4	1312·2
41	128·8	1320·2
	129·1	1328·3
¼	129·5	1336·4
	129·9	1344·5
½	130·3	1352·6
	130·7	1360·8
¾	131·1	1369·0
	131·5	1377·2
42	131·9	1385·4
	132·3	1393·7
¼	132·7	1401·9
	133·1	1410·2
½	133·5	1418·6
	133·9	1426·9
¾	134·3	1435·3
	134·6	1443·7
43	135·	1452·2
	135·4	1460·6
¼	135·8	1469·1
	136·2	1477·6
½	136·6	1486·1
	137·	1494·7
¾	137·4	1503·3
	137·8	1511·9
44	138·2	1520·5
	138·6	1529·1
¼	139·	1537·8
	139·4	1546·5
½	139·8	1555·2
	140·1	1564·0
¾	140·5	1572·8
	140·9	1581·6
45	141·3	1590·4
	141·7	1599·2
¼	142·1	1608·1
	142·5	1617·0
½	142·9	1625·9
	143·3	1634·9
¾	143·7	1643·8
	144·1	1652·8
46	144·5	1661·9
	144·9	1670·9
¼	145·2	1680·0
	145·6	1689·1
½	146·	1698·2
	146·4	1707·3
¾	146·8	1716·5
	147·2	1725·7
47	147·6	1734·9
	148·	1744·1
¼	148·4	1753·4
	148·8	1762·7
½	149·2	1772·0
	149·6	1781·3
¾	150·	1790·7
	150·4	1800·1
48	150·7	1809·5
	150·1	1818·9
¼	151·5	1828·4
	151·9	1837·9
½	152·3	1847·4
	152·7	1856·9
¾	153·1	1866·5
	153·5	1876·1
49	153·9	1885·7
	154·3	1895·3
¼	154·7	1905·0
	155·1	1914·7
½	155·5	1924·4
	155·9	1934·1
¾	156·2	1943·9
	156·6	1953·6
50	157·	1963·5
	157·4	1973·3
¼	157·8	1983·1
	158·2	1993·0
½	158·6	2002·9
	159·	2012·8
¾	159·4	2022·8
	159·8	2032·8
51	160·2	2042·8
	160·6	2052·8
¼	161·	2062·9
	161·3	2072·9
½	161·7	2083·0
	162·1	2093·2
¾	162·5	2103·3
	162·9	2113·5
52	163·3	2123·7
	163·7	2133·9
¼	164·1	2144·1
	164·5	2154·4
½	164·9	2164·7
	165·3	2175·0
¾	165·7	2185·4
	166·1	2195·7
53	166·5	2206·1
	166·8	2216·6
¼	167·2	2227·0
	167·6	2237·5
½	168·	2248·0
	168·4	2258·5
¾	168·8	2269·0
	169·2	2279·6
54	169·6	2290·2
	170·	2300·8
¼	170·4	2311·4
	170·8	2322·1
½	171·2	2332·8
	171·6	2343·5
¾	172·	2354·2
	172·3	2365·0
55	172·7	2375·8
	173·1	2386·6
¼	173·5	2397·4
	173·9	2408·3
½	174·3	2419·2
	174·7	2430·1
¾	175·1	2441·0
	175·5	2452·0
56	175·9	2463·0
	176·3	2474·0
¼	176·7	2485·0
	177·1	2496·1
½	177·5	2507·1
	177·8	2518·2
¾	178·2	2529·4
	178·6	2540·5
57	179·	2551·7
	179·4	2562·9
¼	179·8	2574·1
	180·2	2585·4
½	180·6	2596·7
	181·	2608·0
¾	181·4	2619·3
	181·8	2630·7
58	182·2	2642·0
	182·6	2653·4
¼	182·9	2664·9
	183·3	2676·3
½	183·7	2687·8
	184·1	2699·3
¾	184·5	2710·8
	184·9	2722·4
59	185·3	2733·9
	185·7	2745·5
¼	186·1	2757·1
	186·5	2768·8
½	186·9	2780·5
	187·3	2792·2
¾	187·7	2803·9
	188·1	2815·6
60	188·4	2827·4
	188·8	2839·2
¼	189·2	2851·0
	189·6	2862·8
½	190·	2874·7
	190·4	2886·6
¾	190·8	2898·5
	191·2	2910·5

TABLE II. (*continued*).

Diameter.	Circ.	Area.
61	191·6	2922·4
	192·	2934·4
¼	192·4	2946·4
	192·8	2958·5
½	193·2	2970·5
	193·6	2982·6
¾	193·9	2994·7
	194·3	3006·9
62	194·7	3019·0
	195·1	3031·2
¼	195·5	3043·4
	195·9	3055·7
½	196·3	3067·9
	196·7	3080·2
¾	197·1	3092·5
	197·5	3104·8
63	197·9	3117·2
	198·3	3129·6
¼	198·7	3142·0
	199·	3154·4
½	199·4	3166·9
	199·8	3179·4
¾	200·2	3191·9
	200·6	3204·4
64	201·	3216·9
	201·4	3229·5
¼	201·8	3242·1
	202·2	3254·8
½	202·6	3267·4
	203·	3280·1
¾	203·4	3292·8
	203·8	3305·5
65	204·2	3318·3
	204·5	3331·0
¼	204·9	3343·8
	205·3	3356·7
½	205·7	3369·5
	206·1	3382·4
¾	206·5	3395·3
	206·9	3408·2
66	207·3	3421·2
	207·7	3434·1
¼	208·1	3447·1
	208·5	3460·1
½	208·9	3473·2
	209·3	3486·3
¾	209·7	3499·3
	210·	3512·5
67	210·4	3525·6
	210·8	3538·8
¼	211·2	3552·0
	211·6	3565·2
½	212·	3578·4
	212·4	3591·7
¾	212·8	3605·0
	213·2	3618·3
68	213·6	3631·6
	214·	3645·0
¼	214·4	3658·4
	214·8	3671·8
½	215·1	3685·2
	215·5	3698·7
¾	215·9	3712·2
	216·3	3725·7
69	216·7	3739·2
	217·1	3752·8
¼	217·5	3766·4
	217·9	3780·0
½	218·3	3793·6
	218·7	3807·3
¾	219·1	3821·0
	219·5	3834·7
70	219·9	3848·4
	220·3	3862·2
¼	220·6	3875·9
	221·	3889·8
½	221·4	3903·6
	221·8	3917·4
¾	222·2	3931·3
	222·6	3945·2
71	223·	3959·2
	223·4	3973·1
¼	223·8	3987·1
	224·2	4001·1
½	224·6	4015·1
	225·	4029·2
¾	225·4	4043·2
	225·8	4067·3
72	226·1	4071·5
	226·5	4085·6
¼	226·9	4099·8
	227·3	4114·0
½	227·7	4128·2
	228·1	4142·5
¾	228·5	4156·7
	228·9	4171·0
73	229·3	4185·3
	229·7	4199·7
¼	230·1	4214·1
	230·5	4228·5
½	230·9	4242·9
	231·3	4257·3
¾	231·6	4271·8
	232·	4286·3
74	232·4	4300·8
	232·8	4315·3
¼	233·2	4329·9
	233·6	4344·5
½	234·	4359·1
	234·4	4373·8
¾	234·8	4388·4
	235·2	4403·1
75	235·6	4417·8
	236·	4432·6
¼	236·4	4447·3
	236·7	4462·1
½	237·1	4476·9
	237·5	4491·8
¾	237·9	4506·6
	238·3	4521·5
76	238·7	4536·4
	239·1	4551·4
¼	239·5	4566·3
	239·9	4581·3
½	240·3	4596·3
	240·7	4611·3
¾	241·1	4626·4
	241·5	4641·5
77	241·9	4656·6
	242·2	4671·7
¼	242·6	4686·9
	243·	4702·1
½	243·4	4717·3
	243·8	4732·5
¾	244·2	4747·7
	244·6	4763·0
78	245·	4778·3
	245·4	4793·7
¼	245·8	4809·0
	246·2	4824·4
½	246·6	4839·8
	247·	4855·2
¾	247·4	4870·7
	247·7	4886·1
79	248·1	4901·6
	248·5	4917·2
¼	248·9	4932·7
	249·3	4948·3
½	249·7	4963·9
	250·1	4979·5
¾	250·5	4995·1
	250·9	5010·8
80	251·3	5026·5
	251·7	5042·2
¼	252·1	5058·0
	252·5	5073·7
½	252·8	5089·5
	253·2	5105·4
¾	253·6	5121·2
	254·	5137·1
81	254·4	5153·0
	254·8	5168·9
¼	255·2	5184·8
	255·6	5200·8
½	256·	5216·8
	256·4	5232·8
¾	256·8	5248·8
	257·2	5264·9
82	257·6	5281·0
	258·	5297·1
¼	258·3	5313·2
	258·7	5329·4
½	259·1	5345·6
	259·5	5361·8
¾	259·9	5378·0
	260·3	5394·3
83	260·7	5410·6
	261·1	5426·9
¼	261·5	5443·2
	261·9	5459·6
½	262·3	5476·0
	262·7	5492·4
¾	263·1	5508·8
	263·5	5525·3
84	263·8	5541·7
	264·2	5558·2
¼	264·6	5574·8
	265·	5591·3
½	265·4	5607·9
	265·8	5624·5
¾	266·2	5641·1
	266·6	5657·8
85	267·	5674·5
	267·4	5691·2
¼	267·8	5707·9
	268·2	5724·6
½	268·6	5741·4
	268·9	5758·2
¾	269·3	5775·0
	269·7	5791·9
86	270·1	5808·8
	270·5	5825·7
¼	270·9	5842·6
	271·3	5859·5
½	271·7	5876·5
	272·1	5893·5
¾	272·5	5910·5
	272·9	5927·6
87	273·3	5944·6
	273·7	5961·7
¼	274·1	5978·9
	274·4	5996·0
½	274·8	6013·2
	275·2	6030·4
¾	275·6	6047·6
	276·	6064·8
88	276·4	6082·1
	276·8	6099·4
¼	277·2	6116·7
	277·6	6134·0
½	278·	6151·4
	278·4	6168·8
¾	278·8	6186·2
	279·2	6203·6
89	279·6	6221·1
	279·9	6238·6
¼	280·3	6256·1
	280·7	6273·0
½	281·1	6291·2
	281·5	6308·8
¾	281·9	6326·4
	282·3	6344·0
90	282·7	6361·7
	283·1	6379·4
¼	283·5	6397·1
	283·9	6414·8
½	284·3	6432·6
	284·7	6450·4
¾	285·1	6468·2
	285·4	6486·0
91	285·8	6503·8
	286·2	6521·7
¼	286·6	6539·6
	287·	6557·6
½	287·4	6575·5
	287·8	6593·5
¾	288·2	6611·5
	288·6	6629·5

TABLE II. (*continued*).

Diameter.	Circ.	Area.
92	289·	6647·6
	289·4	6665·7
¼	289·8	6683·8
	290·2	6701·9
½	290·5	6720·0
	290·9	6738·2
¾	291·3	6756·4
	291·7	6776·4
93	292·1	6792·9
	292·5	6811·1
¼	292·9	6829·4
	293·3	6847·8
½	293·7	6866·1
	294·1	6884·5
¾	294·5	6902·9
	294·9	6921·3
94	295·3	6939·7
	295·7	6958·2
¼	296·	6976·7
	296·4	6995·2
½	296·8	7013·8
	297·2	7032·3
¾	297·6	7050·9
	298·	7069·5
95	298·4	7088·2
	298·8	7106·9
¼	299·2	7125·5
	299·6	7144·3
½	300·	7163·0
	300·4	7181·8
¾	300·8	7200·5
	301·2	7219·4
96	301·5	7238·2
	301·9	7257·1
¼	302·3	7275·9
	302·7	7294·9
½	303·1	7313·8
	303·5	7332·8
¾	303·9	7351·7
	304·3	7370·7
97	304·7	7389·8
	305·1	7408·8
¼	305·5	7427·9
	305·9	7447·0
½	306·3	7466·2
	306·6	7485·3
¾	307·	7504·5
	307·4	7523·7
98	307·8	7542·9
	308·2	7562·2
¼	308·6	7581·5
	309·	7600·8
½	309·4	7620·1
	309·8	7639·4
¾	310·2	7658·8
	310·6	7678·2
99	311·	7697·7
	311·4	7717·1
¼	311·8	7736·6
	312·1	7756·1
½	312·5	7775·6
	312·9	7795·2
¾	313·3	7814·7
	313·7	7834·3
100	314·1	7853·9
	314·5	7853·6
¼	314·9	7893·3
	315·3	7913·1
½	315·7	7932·7
	316·	7942·4
¾	316·4	7972·2
	316·8	7991·9

AREA OF CIRCLES AND SQUARES.

TABLE OF THE AREAS OF CIRCLES AND OF THE SIDES OF SQUARES OF THE SAME AREA.

Diam. of Circle in Ins.	Area of Circle in Sq. Ins.	Sides of Square of same Area in Sq. Ins.	Diam. of Circle in Ins.	Area of Circle in Sq. Ins.	Sides of Square of same Area in Sq. Ins.	Diam. of Circle in Ins.	Area of Circle in Sq. Ins.	Sides of Square of same Area in Sq. Ins.
1	·785	·89	17	226·98	15·07	33	855·30	29·25
1½	1·767	1·33	17½	240·53	15·51	33½	881·41	29·69
2	3·142	1·77	18	254·47	15·95	34	907·92	30·13
2½	4·909	2·22	18½	268·80	16·40	34½	934·82	30·57
3	7·069	2·66	19	283·53	16·84	35	962·11	31·02
3½	9·621	3·10	19½	298·65	17·28	35½	989·80	31·46
4	12·566	3·54	20	314·16	17·72	36	1017·88	31·90
4½	15·904	3·99	20½	330·06	18·17	36½	1046·35	32·35
5	19·635	4·43	21	343·36	18·61	37	1075·21	32·79
5½	23·758	4·87	21½	363·05	19·05	37½	1104·47	33·23
6	28·274	5·32	22	380·13	19·50	38	1134·12	33·68
6½	33·183	5·76	22½	397·61	19·94	38½	1164·16	34·12
7	38·485	6·20	23	415·48	20·38	39	1194·59	34·56
7½	44·179	6·65	23½	433·74	20·83	39½	1225·42	35·01
8	50·266	7·09	24	452·39	21·27	40	1256·64	35·45
8½	56·745	7·53	24½	471·44	21·71	40½	1288·25	35·89
9	63·617	7·98	25	490·88	22·16	41	1320·26	36·34
9½	70·882	8·42	25½	510·71	22·60	41½	1352·66	36·78
10	78·540	8·86	26	530·93	23·04	42	1385·45	37·22
10½	86·590	9·30	26½	551·55	23·49	42½	1418·63	37·66
11	95·03	9·75	27	572·56	23·93	43	1452·20	38·11
11½	103·87	10·19	27½	593·96	24·37	43½	1486·17	38·55
12	113·10	10·63	28	615·75	24·81	44	1520·53	38·99
12½	122·72	11·08	28½	637·94	25·26	44½	1555·29	39·44
13	132·73	11·52	29	660·52	25·70	45	1590·43	39·88
13½	143·14	11·96	29½	683·49	26·14	45½	1625·97	40·32
14	153·94	12·41	30	706·86	26·59	46	1661·91	40·77
14½	165·13	12·85	30½	730·62	27·03	46½	1698·23	41·21
15	176·72	13·29	31	754·77	27·47	47	1734·95	41·65
15½	188·69	13·74	31½	779·31	27·92	47½	1772·06	42·10
16	201·06	14·18	32	804·25	28·36	48	1809·56	42·58
16½	213·83	14·62	32½	829·58	28·80	48½	1847·46	42·98

TABLE OF THE AREAS OF CIRCLES AND OF THE SIDES OF SQUARES (*continued*)

Diam. of Circle in Ins.	Area of Circle in Sq. Ins.	Sides of Square of same Area in Sq. Ins.	Diam. of Circle in Ins.	Area of Circle in Sq. Ins.	Sides of Square of same Area in Sq. Ins.	Diam. of Circle in Ins.	Area of Circle in Sq. Ins.	Sides of Square of same Area in Sq. Ins.
49	1885·75	43·43	53	2206·19	46·97	57	2551·76	50·51
49½	1924·43	43·87	53½	2248·01	47·41	57½	2596·73	50·96
50	1963·50	44·31	54	2290·23	47·86	58	2642·09	51·40
50½	2002·97	44·75	54½	2332·83	48·30	58½	2687·84	51·84
51	2042·83	45·20	55	2375·83	48·74	59	2733·98	52·29
51½	2083·08	45·64	55½	2419·23	49·19	59½	2780·51	52·73
52	2123·72	46·08	56	2463·01	49·63	60	2827·74	53·17
52½	2164·76	46·53	56½	2507·19	50·07	60½	2874·76	53·62

TABLE OF SEGMENTS, CHORDS, ZONES, &c., OF A CIRCLE.

To find the Angle of an Arc of a Circle.

RULE.—Divide the chord of the arc by its height, and find the quotient in the first column. The corresponding number in the *second* column is the angle of the arc in degrees of the circle.

To find the Radius of an Arc of a Circle.

RULE.—Divide the chord of the arc by its height, and find the quotient in the first column. The corresponding number in the *third* column, multiplied by the chord, is the radius of the arc.

To find the Length of an Arc of a Circle.

RULE.—Divide the chord of the arc by its height, and find the quotient in the first column. The corresponding number in the *fourth* column, multiplied by the chord, is the length of the arc.

To find the Area of a Segment of a Circle.

RULE.—Divide the chord of the segment by its height, and find the quotient in the first column. The corresponding number in the *fifth* column, multiplied by the square of the chord, is the area of the segment.

To find the Surface of a Circle Zone.

RULE.—Divide the chord of the zone by its height, and find the quotient in the first column. The corresponding number in the *sixth* column, multiplied by the *square* of the chord, is the surface of the zone.

To find the Solidity of a Circle Zone.

RULE.—Divide the chord of the zone by its height, and find the quotient in the first column. The corresponding number in the *seventh* column, multiplied by the *cube* of the chord, is the solidity of the zone.

To find the Chord of an Arc of a Circle.

RULE.—In column *eight* find the chord corresponding to the angle of the arc given in column two, and multiply the value by the radius of the circle.

FORMULÆ.

The following are the formulæ from which the values in the following tables (pp. 50-55) were calculated :—

Col. 1. $2 \cot \frac{v}{4}$.

Col. 3. $\frac{\operatorname{cosec} \frac{v}{2}}{2}$.

Col. 4. $\frac{\operatorname{cosec} \frac{v}{2}}{2} \times \frac{\pi v}{180}$.

Col. 5. $\frac{\operatorname{cosec}^2 \frac{v}{2}}{8}\left(\frac{\pi v}{180} - \sin v\right)$.

Col. 6. $\frac{\pi}{4 - 2 \operatorname{versin} \frac{v}{2}}$.

Col. 7. $\frac{\pi}{24}\left(\operatorname{cosec} \frac{v}{2} - \cot \frac{v}{2}\right)^2 \left(2 \operatorname{cosec} \frac{v}{2} + \cot \frac{v}{2}\right)$.

Col. 8. Ordinary Table of Chords.

TABLE OF SEGMENTS, CHORDS,

$\frac{c}{h}$ (Chord divided by height.) 		Centre Angle v. 	Radius r. 		Circular Arc b. 	
1.	Logarithm.	2.	3.	Logarithm.	4.	Logarithm.
458·3633	2·6612099	1	57·29650	1·7581281	1·000015	·0000067
229·1773	2·3601716	2	28·64934	1·4571147	1·000051	·0000223
152·7800	2·1840666	3	19·10077	1·2810510	1·000097	·0000423
114·5799	2·0591085	4	14·32685	1·1561508	1·000203	·0000883
91·65870	1·9621737	5	11·46278	1·0592904	1·000318	·0001380
76·37692	1·8829621	6	9·553660	·9801698	1·000457	·0001986
65·46053	1·8159795	7	8·190203	·9132947	1·000622	·0002700
57·27251	1·7579462	8	7·167793	·8553855	1·000812	·0003527
50·90340	1·7067468	9	6·372747	·8043267	1·001029	·0004465
45·80753	1·6609369	10	5·736856	·7586740	1·001270	·0005513
41·63766	1·6194863	11	5·216714	·7173971	1·001537	·0006671
38·16227	1·5816342	12	4·783385	·6797354	1·001830	·0007940
35·22112	1·5468031	13	4·416836	·6451112	1·002148	·0009319
32·69971	1·5145439	14	4·102753	·6130755	1·002492	·0010810
30·51410	1·4845006	15	3·830647	·5832723	1·002862	·0012410
28·60133	1·4563863	16	3·592648	·5554147	1·003257	·0014121
26·91325	1·4299662	17	3·382733	·5292679	1·003678	·0015942
25·41241	1·4050458	18	3·196227	·5046376	1·004124	·0017875
24·06924	1·3814625	19	3·029429	·4813608	1·004597	·0019918
22·86010	1·3590782	20	2·879385	·4592998	1·005095	·0022073
21·76584	1·3377755	21	2·743702	·4383370	1·005619	·0024336
20·77079	1·3174531	22	2·620421	·4183712	1·006163	·0026685
19·86202	1·2980234	23	2·507925	·3993147	1·006746	·0029199
19·02873	1·2794098	24	2·404866	·3810911	1·007349	·0031798
18·26187	1·2615452	25	2·310112	·3636332	1·007978	·0034510
17·55377	1·2443705	26	2·222706	·3468820	1·008632	·0037328
16·89791	1·2278331	27	2·141828	·3307847	1·009313	·0040258
16·28869	1·2118862	28	2·066782	·3152948	1·010021	·0043303
15·72128	1·1964880	29	1·996964	·3003704	1·010755	·0046458
15·19151	1·1816009	30	1·931851	·2859738	1·011515	·0049724
14·69572	1·1671909	31	1·870988	·2720712	1·012302	·0053103
14·23074	1·1532275	32	1·813977	·2586319	1·013116	·0056593
13·79376	1·1396827	33	1·760468	·2456282	1·013957	·0060195
13·38231	1·1265312	34	1·710152	·2330347	1·014825	·0063910
12·99421	1·1137498	35	1·662754	·2208282	1·015719	·0067736
12·62750	1·1013175	36	1·618034	·2089876	1·016641	·0071675
12·28046	1·0892147	37	1·575772	·1974936	1·017590	·0075727
11·95153	1·0774235	38	1·535776	·1863281	1·018567	·0079897
11·63931	1·0659274	39	1·497871	·1754747	1·019569	·0084167
11·34256	1·0547112	40	1·461902	·1649183	1·020600	·0088556
11·06014	1·0437608	41	1·427725	·1546447	1·021659	·0093060
10·79103	1·0330631	42	1·395213	·1446408	1·022745	·0097674
10·53430	1·0226058	43	1·364251	·1348946	1·023860	·0102405
10·28911	1·0123777	44	1·334733	·1253946	1·025002	·0107247
10·05468	1·0023682	45	1·306563	·1161303	1·026172	·0112202
9·830314	·9925674	46	1·279652	·1070920	1·027371	·0117272
9·615371	·9829660	47	1·253921	·0982703	1·028598	·0122455
9·409260	·9735555	48	1·229295	·0896567	1·029853	·0127753
9·211441	·9643276	49	1·205710	·0812430	1·031137	·0133165
9·021417	·9552748	50	1·183100	·0730217	1·032450	·0138691
8·838728	·9463898	51	1·161410	·0649856	1·033792	·0144331
8·662952	·9376659	52	1·140585	·0571280	1·035163	·0150087
8·493696	·9290967	53	1·120579	·0494426	1·036563	·0155958
8·330600	·9206763	54	1·101344	·0419232	1·037993	·0161943
8·173325	·9123988	55	1·082840	·0345644	1·039452	·0168046
8·021562	·9042589	56	1·065027	·0273607	1·040941	·0174261
7·875019	·8962516	57	1·047628	·0203071	1·042460	·0180594
7·733426	·8883719	58	1·031333	·0133988	1·044009	·0187042
7·596532	·8806154	59	1·015386	·0066312	1·045588	·0193606
7·464102	·8729775	60	1·000000	·0000000	1·047198	·0200287

ZONES, &c., OF A CIRCLE.

Area of Segment. 		Surface of Zone. 		Solidity of Zone. 		Chord c. 	
5.	Logarithm.	6.	Logarithm.	7.	Logarithm.	8.	Logarithm.
·0014642	$\bar{3}$·1655947	·785413	1·8950982	·000855	$\bar{4}$·9321857	·0174530	2·2418701
·0029548	3·4705319	·785458	1·8951229	·001713	3·2338129	·0349048	2·5428853
·0043562	3·6391063	·785533	1·8951643	·002570	3·4099350	·0523538	2·7189490
·0058293	3·7656199	·785637	1·8952222	·003428	3·5349925	·0697990	2·8438492
·0072793	3·8620906	·785772	1·8952966	·004285	3·6319520	·0872388	2·9407096
·0087348	3·9412515	·785937	1·8953875	·005143	3·7111997	·1046720	1·0198302
·0101893	2·0081472	·786131	1·8954951	·006001	3·7782223	·1220970	1·0867053
·0116472	2·0662225	·786356	1·8956191	·006860	3·8362961	·1395130	1·1446145
·0131014	2·1173178	·786611	1·8957598	·007719	3·8875342	·1569182	1·1956733
·0145601	2·1631631	·786895	1·8959170	·008578	3·9334001	·1743114	1·2413260
·0160182	2·2046145	·787210	1·8960908	·009439	3·9749177	·1916916	1·2826029
·0174809	2·2425642	·787555	1·8962811	·010300	2·0128218	·2090570	1·3202646
·0189407	2·2773969	·787931	1·8964880	·011161	2·0477078	·2264064	1·3548888
·0204028	2·3096895	·788336	1·8967116	·012024	2·0800570	·2437386	1·3869245
·0218670	2·3397892	·788772	1·8969516	·012888	2·1101811	·2610524	1·4167277
·0233309	2·3679317	·789239	1·8972083	·013752	2·1383810	·2783462	1·4445853
·0247990	2·3944348	·789735	1·8974816	·014618	2·1648914	·2956188	1·4707321
·0262660	2·4193942	·790263	1·8977716	·015485	2·1899099	·3128690	1·4953624
·0277361	2·4430448	·790821	1·8980782	·016353	2·2135941	·3300952	1·5186392
·0292078	2·4654999	·791410	1·8984015	·017222	2·2360887	·3472964	1·5407002
·0306814	2·4868762	·792029	1·8987413	·018093	2·2575050	·3644710	1·5616630
·0321556	2·5072573	·792680	1·8990979	·018965	2·2779476	·3816180	1·5816288
·0336335	2·5267721	·793362	1·8994712	·019838	2·2975021	·3987358	1·6006853
·0351121	2·5454567	·794074	1·8998612	·020713	2·3162460	·4158234	1·6189089
·0365937	2·5634069	·794818	1·9002679	·021590	2·3342478	·4328792	1·6363668
·0380773	2·5806663	·795594	1·9006914	·022468	2·3515653	·4499022	1·6531180
·0395629	2·5972882	·796400	1·9011315	·023348	2·3682498	·4668908	1·6692153
·0410512	2·6133265	·797240	1·9015888	·024230	2·3843512	·4838438	1·6847052
·0425422	2·6288197	·798110	1·9020629	·025114	2·3999093	·5007600	1·6996296
·0440360	2·6438076	·799012	1·9025532	·025999	2·4149612	·5176380	1·7140262
·0455323	2·6583195	·799944	1·9030597	·026887	2·4295418	·5344768	1·7279288
·0470316	2·6723902	·800911	1·9035843	·027777	2·4436829	·5512748	1·7413681
·0485336	2·6860426	·801910	1·9041258	·028669	2·4574102	·5680306	1·7543718
·0500391	2·6993092	·802940	1·9046830	·029563	2·4707502	·5847434	1·7669653
·0515472	2·7122049	·804003	1·9052578	·030460	2·4837260	·6014116	1·7791718
·0530589	2·7247583	·805101	1·9058502	·031359	2·4963593	·6180340	1·7910124
·0545737	2·7369833	·806229	1·9064585	·032260	2·5086679	·6346094	1·8025064
·0560920	2·7489009	·807392	1·9070844	·033164	2·5206716	·6511364	1·8136719
·0576139	2·7605275	·808588	1·9077271	·034071	2·5323857	·6676138	1·8245253
·0591394	2·7718771	·809817	1·9083871	·034981	2·5438268	·6840402	1·8350817
·0606689	2·7829661	·811080	1·9090637	·035893	2·5550075	·7004148	1·8453553
·0622020	2·7938041	·812377	1·9097578	·036808	2·5659411	·7167358	1·8553592
·0637392	2·8044067	·813708	1·9104685	·037726	2·5766411	·7330024	1·8651054
·0649804	2·8127826	·815073	1·9111965	·038647	2·5871177	·7492132	1·8756054
·0668258	2·8249447	·816474	1·9119422	·039571	2·5973819	·7653668	1·8838697
·0683755	2·8349008	·817908	1·9127043	·040499	2·6074438	·7814622	1·8929080
·0699298	2·8446625	·819377	1·9134840	·041430	2·6173122	·7974982	1·9017297
·0714883	2·8542351	·820882	1·9142809	·042364	2·6269960	·8134732	1·9103433
·0730516	2·8636299	·822423	1·9150951	·043302	2·6365038	·8293864	1·9187570
·0746196	2·8728529	·823999	1·9159267	·044243	2·6458425	·8452366	1·9269783
·0761941	2·8819212	·825612	1·9167757	·045188	2·6550198	·8610222	1·9350144
·0777702	2·8908134	·827260	1·9176422	·046136	2·6640413	·8767422	1·9428720
·0793532	2·8995645	·828945	1·9185256	·047089	2·6729168	·8923956	1·9505574
·0809413	2·9081701	·830667	1·9194270	·048045	2·6816485	·9079810	1·9580768
·0825347	2·9166367	·832426	1·9203458	·049005	2·6902441	·9234972	1·9654356
·0841336	2·9249696	·834222	1·9212817	·049970	2·6987084	·9389432	1·9726393
·0857380	2·9331735	·836056	1·9222354	·050939	2·7070465	·9543176	1·9796929
·0873483	2·9412545	·837928	1·9232068	·051912	2·7152636	·9696192	1·9866012
·0889642	2·9492153	·839838	1·9241957	·052889	2·7233648	·9848472	1·9933688
·0905861	2·9570616	·841788	1·9252025	·053871	2·7313537	1·0000000	0·0000000

$\frac{c}{h}$ (Chord divided by height.) 		Centre Angle v. 	Radius r. 		Circular Arc b. 	
1.	Logarithm.	2.	3.	Logarithm.	4.	Logarithm.
7·335915	·8654543	61	·9851470	1·9935011	1·048838	·0207083
7·211767	·8580417	62	·9708020	1·9871307	1·050509	·0213997
7·091465	·8507360	63	·9569404	1·9808849	1·052211	·0221028
6·974829	·8435336	64	·9435400	1·9747603	1·053945	·0228178
6·861689	·8364310	65	·9305796	1·9687535	1·055709	·0235443
6·751887	·8294252	66	·9180392	1·9628612	1·057505	·0242824
6·645272	·8225028	67	·9059004	1·9570805	1·059334	·0250329
6·541705	·8156910	68	·8941456	1·9514083	1·061194	·0257946
6·441053	·8089569	69	·8827588	1·9458420	1·063086	·0265684
6·343190	·8023077	70	·8717234	1·9403787	1·065012	·0273544
6·247998	·7957409	71	·8610256	1·9350160	1·066969	·0281520
6·155367	·7892540	72	·8506507	1·9297513	1·068959	·0289612
6·065191	·7828445	73	·8405863	1·9245824	1·070983	·0297827
5·977370	·7765101	74	·8308202	1·9195070	1·073041	·0306163
5·891810	·7702487	75	·8213397	1·9145229	1·075132	·0314616
5·808422	·7640581	76	·8121343	1·9096280	1·077256	·0323190
5·727120	·7579363	77	·8031939	1·9048204	1·079416	·0331887
5·647826	·7518813	78	·7945077	1·9000982	1·081610	·0340706
5·570461	·7458912	79	·7860669	1·8954595	1·083837	·0349640
5·494955	·7399641	80	·7778620	1·8909025	1·086100	·0358697
5·421237	·7340984	81	·7698845	1·8864256	1·088399	·0367882
5·349243	·7282923	82	·7621265	1·8820271	1·090732	·0377184
5·278910	·7225442	83	·7545801	1·8777054	1·093102	·0386608
5·210178	·7168526	84	·7472383	1·8734591	1·095508	·0396159
5·142991	·7112158	85	·7400936	1·8692867	1·097951	·0405831
5·077296	·7056325	86	·7330890	1·8651567	1·100354	·0415326
5·013040	·7001011	87	·7263080	1·8611578	1·102946	·0425543
4·950174	·6946204	88	·7197786	1·8571987	1·105501	·0435590
4·888651	·6891891	89	·7133590	1·8533082	1·108090	·0445755
4·828427	·6838057	90	·7071068	1·8494850	1·110720	·0456048
4·769459	·6784691	91	·7010160	1·8457279	1·113388	·0466468
4·711705	·6731781	92	·6950868	1·8420359	1·116094	·0477011
4·655126	·6679315	93	·6892991	1·8384078	1·118840	·0487681
4·599685	·6627281	94	·6836636	1·8348425	1·121625	·0498478
4·545346	·6575669	95	·6781707	1·8313391	1·124450	·0509401
4·492074	·6524469	96	·6728163	1·8278965	1·127314	·0520451
4·439835	·6473669	97	·6675963	1·8245139	1·130220	·0531630
4·388599	·6423259	98	·6625063	1·8211901	1·133166	·0542936
4·338335	·6373231	99	·6575434	1·8179245	1·136153	·0554371
4·289014	·6323575	100	·6527036	1·8147160	1·139182	·0565934
4·240607	·6274280	101	·6479834	1·8115639	1·142253	·0577627
4·193087	·6225339	102	·6433797	1·8084674	1·145367	·0589450
4·146429	·6176743	103	·6388930	1·8054256	1·148524	·0601402
4·100608	·6128482	104	·6345091	1·8024379	1·151724	·0613486
4·055599	·6080550	105	·6302361	1·7995033	1·154968	·0625700
4·011379	·6032937	106	·6260678	1·7966214	1·158256	·0638047
3·967927	·5985637	107	·6220012	1·7937913	1·161588	·0650525
3·925221	·5938641	108	·6180340	1·7910124	1·164967	·0663136
3·883240	·5891942	109	·6141635	1·7882840	1·168390	·0675879
3·841964	·5845533	110	·6103872	1·7856055	1·171859	·0688756
3·801375	·5799407	111	·6067031	1·7829763	1·175375	·0701767
3·761453	·5753556	112	·6031090	1·7803958	1·178938	·0714912
3·722181	·5707975	113	·5996024	1·7778634	1·182549	·0728192
3·683542	·5662656	114	·5961816	1·7753786	1·186208	·0741609
3·645519	·5617593	115	·5928445	1·7729408	1·189914	·0755160
3·608096	·5572780	116	·5895891	1·7705495	1.193671	·0768849
3·571257	·5528211	117	·5864138	1·7682042	1·197477	·0782674
3·534988	·5483880	118	·5833168	1·7659044	1·201334	·0796639
3·499274	·5439780	119	·5802961	1·7636496	1·205241	·0810740
3·464102	·5395906	120	·5773502	1·7614394	1·209200	·0824980

ZONES, &c., OF A CIRCLE (*continued*).


Area of Segment. 		Surface of Zone. 		Solidity of Zone. 		Chord c. 	
5.	Logarithm.	6.	Logarithm.	7.	Logarithm.	8.	Logarithm.
·0922141	2·9647972	·843775	1·9262265	·054857	2·7392346	1·0150768	·0064989
·0938482	2·9724261	·845802	1·9272689	·055849	2·7470117	1·0300762	·0128693
·0954887	2·9799522	·847869	1·9283286	·056845	2·7546888	1·0449972	·0191151
·0971356	2·9873783	·849976	1·9294067	·057845	2·7622693	1·0598386	·0252397
·0987883	2·9947054	·852123	1·9305026	·058851	2·7697568	1·0745992	·0312465
·1004493	1·0019472	·854311	1·9316159	·059862	2·7771536	1·0892780	·0371388
·1021166	1·0090962	·856540	1·9327476	·060879	2·7844656	1·1038740	·0429195
·1037906	1·0161582	·858810	1·9338971	·061900	2·7916935	1·1183858	·0485917
·1054720	1·0231370	·861123	1·9350651	·062928	2·7988412	1·1328124	·0541580
·1071606	1·0300352	·863477	1·9362510	·063960	2·8059104	1·1471528	·0596213
·1088565	1·0368544	·865875	1·9374552	·064999	2·8129048	1·1614060	·0649840
·1105601	1·0435983	·868315	1·9386772	·066043	2·8198266	1·1755706	·0702487
·1122713	1·0502690	·870799	1·9399178	·067093	2·8266780	1·1896456	·0754176
·1139905	1·0568689	·873327	1·9411768	·068150	2·8334669	1·2036300	·0804930
·1157177	1·0634001	·875899	1·9424542	·069212	2·8401800	1·2175228	·0854771
·1174531	1·0698645	·878516	1·9437497	·070281	2·8468350	1·2313230	·0903720
·1191968	1·0762646	·881179	1·9450639	·071356	2·8534287	1·2450292	·0951796
·1209490	1·0826023	·883887	1·9463967	·072437	2·8599628	1·2586408	·0999018
·1227097	1·0888794	·886642	1·9477483	·073526	2·8664402	1·2721564	·1045405
·1244795	1·0950979	·889443	1·9491183	·074621	2·8728619	1·2855752	·1090975
·1262583	1·1012598	·892292	1·9505071	·075723	2·8792303	1·2988960	·1135744
·1280460	1·1073663	·895189	1·9519146	·076833	2·8855469	1·3121180	·1179729
·1298431	1·1134190	·898134	1·9533410	·077950	2·8918135	1·3252400	·1222946
·1316500	1·1194204	·901128	1·9547865	·079073	2·8980307	1·3382612	·1265409
·1334661	1·1253711	·904172	1·9562509	·080205	2·9042026	1·3511804	·1307133
·1352923	1·1312732	·907265	1·9577342	·081345	2·9103285	1·3639968	·1348133
·1371284	1·1371277	·910409	1·9592366	·082492	2·9164105	1·3767092	·1388422
·1389748	1·1429361	·913604	1·9607581	·083647	2·9224500	1·3893168	·1428013
·1408316	1·1487004	·916852	1·9622992	·084810	2·9284487	1·4018186	·1466918
·1426990	1·1544211	·920151	1·9638591	·085982	2·9344078	1·4142136	·1505150
·1445772	1·1601000	·923504	1·9654386	·087162	2·9403284	1·4265008	·1542721
·1464664	1·1657380	·926910	1·9670376	·088351	2·9462122	1·4386796	·1579641
·1483668	1·1713367	·930371	1·9686563	·089549	2·9520600	1·4507488	·1615922
·1502784	1·1768966	·933887	1·9702942	·090756	2·9578736	1·4627074	·1651575
·1522017	1·1824196	·937459	1·9719521	·091972	2·9636535	1·4745546	·1686609
·1541368	1·1879065	·941087	1·9736295	·093197	2·9694015	1·4862896	·1721035
·1560839	1·1933582	·944772	1·9753270	·094432	2·9751177	1·4979114	·1754861
·1580432	1·1987759	·948516	1·9770447	·095676	2·9808048	1·5094192	·1788099
·1600146	1·2041598	·952317	1·9787814	·096931	2·9864623	1·5208120	·1820755
·1619994	1·2095134	·956177	1·9805384	·098196	2·9920920	1·5320888	·1852840
·1639967	1·2148351	·960099	1·9823158	·099471	2·9976949	1·5432492	·1884361
·1660072	1·2201269	·964080	1·9841133	·100756	1·0032722	1·5542920	·1915326
·1680310	1·2253893	·968125	1·9859313	·102053	1·0088238	1·5652164	·1945744
·1700684	1·2306238	·972231	1·9877697	·103360	1·0143517	1·5760216	·1975621
·1721196	1·2358303	·976401	1·9896282	·104678	1·0198564	1·5867006	·2004967
·1741849	1·2410106	·980635	1·9915076	·106008	1·0253391	1·5972710	·2033786
·1762645	1·2461650	·984935	1·9934075	·107350	1·0308003	1·6077138	·2062087
·1783590	1·2512948	·989300	1·9953281	·108703	1·0362411	1·6180340	·2089876
·1804680	1·2564001	·993735	1·9972707	·110068	1·0416620	1·6282310	·2117160
·1825916	1·2614810	·998233	1·9992321	·111446	1·0470646	1·6383040	·2143945
·1847318	1·2665417	1·00280	·0012156	·112836	1·0524488	1·6482524	·2170237
·1868871	1·2715793	1·00744	·0032201	·114239	1·0578163	1·6580752	·2196042
·1890582	1·2765957	1·01215	·0052458	·115656	1·0631668	1·6677716	·2221366
·1912457	1·2815918	1·01693	·0072930	·117085	1·0685023	1·6773412	·2246214
·1934497	1·2865682	1·02179	·0093614	·118528	1·0738225	1·6867828	·2270592
·1956705	1·2915254	1·02672	·0114513	·119986	1·0791289	1·6960962	·2294505
·1979185	1·2964646	1·03172	·0135630	·121457	1·0844217	1·7052804	·2317958
·2001639	1·3013858	1·03680	·0156963	·122942	1·0897016	1·7143346	·2340956
·2024370	1·3062900	1·04196	·0178515	·124443	1·0949696	1·7232584	·2363504
·2047282	1·3111778	1·04720	·0200292	·125958	1·1002270	1·7320508	·2385606

$\frac{c}{h}$ (Chord divided by height.) 		Centre Angle v. 	Radius r. 		Circular Arc b. 	
1.	Logarithm.	2.	3	Logarithm.	4.	Logarithm.
3·429457	·5352253	121	·5744776	1·7592732	1·213210	·0839359
3·395326	·5308815	122	·5716770	1·7571507	1·217272	·0853880
3·361698	·5265587	123	·5689465	1·7550715	1·221389	·0868541
3·328560	·5222563	124	·5662850	1·7530351	1·225558	·0883341
3·295898	·5179738	125	·5636910	1·7510411	1·229782	·0898286
3·263703	·5137107	126	·5611631	1·7490891	1·234062	·0913371
3·231964	·5094665	127	·5587001	1·7471788	1·238396	·0928599
3·200669	·5052408	128	·5563009	1·7453098	1·242788	·0943971
3·169808	·5010330	129	·5539642	1·7434818	1·247236	·0959490
3·139371	·4968427	130	·5516890	1·7416943	1·251742	·0975150
3·109348	·4926694	131	·5494738	1·7399471	1·256308	·0990957
3·079730	·4885126	132	·5473181	1·7382398	1·260930	·1006913
3·050507	·4843720	133	·5452205	1·7365722	1·265614	·1023013
3·021670	·4802471	134	·5431808	1·7349439	1·270357	·1039261
2·993212	·4761374	135	·5411961	1·7333547	1·275163	·1055660
2·965122	·4720426	136	·5392672	1·7318041	1·280030	·1072204
2·937393	·4679621	137	·5373931	1·7302921	1·284960	·1088900
2·910018	·4638957	138	·5355726	1·7288183	1·289955	·1105748
2·882988	·4598429	139	·5338046	1·7273824	1·295014	·1122746
2·856296	·4558032	140	·5320888	1·7259842	1·300138	·1139897
2·829935	·4517764	141	·5304242	1·7246234	1·305329	·1157199
2·803897	·4477620	142	·5288102	1·7232999	1·310284	·1173658
2·778175	·4437596	143	·5272461	1·7220134	1·315912	·1192269
2·752764	·4397690	144	·5257311	1·7207637	1·321306	·1210036
2·727656	·4357896	145	·5242646	1·7195505	1·326770	·1227958
2·702845	·4318211	146	·5228458	1·7183737	1·332306	·1246041
2·678325	·4278632	147	·5214744	1·7172330	1·337912	·1264277
2·654090	·4239156	148	·5201497	1·7161284	1·343591	·1282675
2·630134	·4199778	149	·5188711	1·7150595	1·349345	·1301233
2·606451	·4160495	150	·5176381	1·7140262	1·355173	·1319949
2·583036	·4121304	151	·5164501	1·7130284	1·361076	·1338827
2·559883	·4082202	152	·5153069	1·7120659	1·367057	·1357868
2·536988	·4043184	153	·5142074	1·7111385	1·373116	·1377074
2·514345	·4004248	154	·5131521	1·7102461	1·379253	·1396441
2·491948	·3965390	155	·5121397	1·7093885	1·385471	·1415976
2·469794	·3926608	156	·5111702	1·7085656	1·391770	·1435676
2·447878	·3887897	157	·5102432	1·7077773	1·398152	·1455545
2·426194	·3849255	158	·5093582	1·7070234	1·404616	·1475579
2·404739	·3810679	159	·5085151	1·7063039	1·411167	·1495785
2·383507	·3772165	160	·5077132	1·7056185	1·417802	·1516159
2·362495	·3733710	161	·5069525	1·7049673	1·424526	·1536706
2·341699	·3695311	162	·5062325	1·7043501	1·431338	·1557425
2·321114	·3656965	163	·5055530	1·7037667	1·438241	·1578317
2·300737	·3618669	164	·5049136	1·7032172	1·445234	·1599385
2·280563	·3580421	165	·5043143	1·7027014	1·452321	·1620626
2·260589	·3542216	166	·5037548	1·7022193	1·459502	·1642049
2·240811	·3504052	167	·5032348	1·7017707	1·466778	·1663646
2·221225	·3465926	168	·5027541	1·7013557	1·474152	·1685423
2·201828	·3427835	169	·5023125	1·7009740	1·481623	·1707380
2·182617	·3389775	170	·5019100	1·7006258	1·489196	·1729521
2·163588	·3351745	171	·5015461	1·7003109	1·496871	·1751844
2·144737	·3313741	172	·5012209	1·7000292	1·504648	·1774350
2·126063	·3275761	173	·5009343	1·6997808	1·512531	·1797044
2·107560	·3237800	174	·5006862	1·6995656	1·520520	·1819923
2·089227	·3199857	175	·5004763	1·6993835	1·528617	·1842988
2·071061	·3161928	176	·5003046	1·6992346	1·536826	·1866248
2·053057	·3124011	177	·5001714	1·6991189	1·545145	·1889695
2·035215	·3086103	178	·5000762	1·6990362	1·553580	·1913335
2·017530	·3048200	179	·5000190	1·6989865	1·562129	·1937169
2·000000	·3010300	180	·5000000	1·6989700	1·570796	·1961199

ZONES, &c., OF A CIRCLE—(*continued*).

Area of Segment. 		Surface of Zone. 		Solidity of Zone. 		Chord *c*. 	
5.	Logarithm.	6.	Logarithm.	7.	Logarithm.	8.	Logarithm.
·2070378	1·3160498	1·05251	·0222277	·127489	1·1054730	1·7407114	·2407268
·2093661	1·3209065	1·05791	·0244490	·129036	1·1107095	1·7492394	·2428493
·2117135	1·3257487	1·06339	·0266927	·130598	1·1159369	1·7576342	·2449285
·2140804	1·3305770	1·06895	·0289588	·132177	1·1211554	1·7658952	·2469649
·2164670	1·3353918	1·07460	·0312472	·133772	1·1263658	1·7740216	·2489589
·2188736	1·3401935	1·08033	·0335582	·135385	1·1315695	1·7820130	·2509109
·2213008	1·3449831	1·08616	·0358923	·137014	1·1367662	1·7898688	·2528212
·2237490	1·3497610	1·09207	·0382490	·138662	1·1419567	1·7975880	·2546902
·2262183	1·3545279	1·09807	·0406289	·140327	1·1471420	1·8051706	·2565182
·2287093	1·3592839	1·10416	·0430315	·142011	1·1523227	1·8126156	·2583057
·2312223	1·3640299	1·11034	·0454576	·143714	1·1574990	1·8199226	·2600529
·2337578	1·3687662	1·11662	·0479071	·145436	1·1626719	1·8270910	·2617602
·2363162	1·3734936	1·12300	·0503800	·147178	1·1678417	1·8341202	·2634278
·2388978	1·3782122	1·12948	·0528768	·148939	1·1730095	1·8410098	·2650561
·2415033	1·3829231	1·13605	·0553973	·150721	1·1781750	1·8477590	·2666453
·2441327	1·3876261	1·14273	·0579414	·152525	1·1833396	1·8543678	·2681959
·2467870	1·3923223	1·14950	·0605100	·154349	1·1885034	1·8608352	·2697079
·2494664	1·3970120	1·15639	·0631027	·156195	1·1936671	1·8671608	·2711817
·2521711	1·4016954	1·16337	·0657194	·158064	1·1988318	1·8733444	·2726176
·2549020	1·4063732	1·17047	·0683609	·159955	1·2039972	1·8793852	·2740158
·2576593	1·4110459	1·17768	·0710269	·161869	1·2091643	1·8852830	·2753766
·2604444	1·4157151	1·18500	·0737178	·163808	1·2143337	1·8910372	·2767001
·2632558	1·4203781	1·19243	·0764336	·165770	1·2195060	1·8966474	·2779866
·2660960	1·4250383	1·19998	·0791747	·167757	1·2246815	1·9021130	·2792363
·2689646	1·4296953	1·20765	·0819408	·169770	1·2298611	1·9074340	·2804495
·2718626	1·4343495	1·21544	·0847325	·171809	1·2350449	1·9126096	·2816263
·2747904	1·4390015	1·22335	·0875496	·173874	1·2402342	1·9176394	·2827670
·2777482	1·4436513	1·23138	·0903928	·175966	1·2454289	1·9225234	·2838716
·2807370	1·4482996	1·23954	·0932617	·178086	1·2506298	1·9272610	·2849405
·2837573	1·4529471	1·24783	·0961566	·180234	1·2558374	1·9318516	·2859738
·2868098	1·4575941	1·25626	·0990779	·182411	1·2610520	1·9362952	·2869716
·2898950	1·4622406	1·26481	·1020257	·184618	1·2662749	1·9405914	·2879341
·2930138	1·4668880	1·27350	·1050000	·186856	1·2715059	1·9447398	·2888615
·2961664	1·4715358	1·28233	·1080012	·189124	1·2767458	1·9487402	·2897539
·2993536	1·4761847	1·29131	·1110294	·191423	1·2819943	1·9525920	·2906115
·3025768	1·4808357	1·30042	·1140847	·193756	1·2872544	1·9562952	·2914344
·3058357	1·4854882	1·30969	·1171676	·196121	1·2925247	1·9598494	·2922227
·3091315	1·4901433	1·31910	·1202777	·198521	1·2978058	1·9632544	·2929766
·3124651	1·4948015	1·32867	·1234160	·200955	1·3030986	1·9665098	·2936961
·3158368	1·4994628	1·33839	·1265818	·203425	1·3084036	1·9696156	·2943815
·3192480	1·5041281	1·34827	·1297762	·205931	1·3137215	1·9725712	·2950327
·3226990	1·5087976	1·35831	·1329990	·208475	1·3190531	1·9753766	·2956499
·3261910	1·5134718	1·36851	·1362500	·211056	1·3243979	1·9780318	·2962333
·3297241	1·5181508	1·37889	·1395301	·213677	1·3297582	1·9805362	·2967828
·3333002	1·5228356	1·38944	·1428392	·216338	1·3351328	1·9828898	·2972986
·3369194	1·5275261	1·40016	·1461776	·219040	1·3405234	1·9830924	·2977807
·3405830	1·5322229	1·41106	·1495452	·221784	1·3459305	1·9871438	·2982293
·3442921	1·5369271	1·42214	·1529430	·224571	1·3513541	1·9890438	·2986443
·3480468	1·5416378	1·43341	·1563704	·227403	1·3567953	1·9907924	·2990260
·3518490	1·5463565	1·44487	·1598282	·230279	1·3622543	1·9923894	·2993742
·3556993	1·5510831	1·45652	·1633163	·233202	1·3677319	1·9938346	·2996891
·3595990	1·5558186	1·46837	·1668349	·236172	1·3732290	1·9951281	·2999708
·3635486	1·5605626	1·48042	·1703847	·239191	1·3787456	1·9962696	·3002192
·3675496	1·5653160	1·49267	·1739654	·242261	1·3842826	1·9972590	·3004344
·3716031	1·5700794	1·50514	·1775777	·245381	1·3898411	1·9980964	·3006165
·3757104	1·5748533	1·51782	·1812216	·248554	1·3954205	1·9987816	·3007654
·3798722	1·5796376	1·53073	·1848979	·251781	1·4010229	1·9993146	·3008811
·3840814	1·5844233	1·54385	·1886059	·255063	1·4066474	1·9996954	·3009638
·3883651	1·5892403	1·55721	·1923464	·258402	1·4122959	1·9999238	·3010135
·3926989	1·5940597	1·57080	·1961199	·261799	1·4179687	2·0000000	·3010300


Area of segment ABC = tabular value a corresponding to $\frac{h}{d}$, multiplied by d^2.




Example:—If $d = 48$ ins., $h = 5$ ins.; then $\frac{h}{d} = \frac{5}{48} = \cdot104$; tabular value a corresponding to $\cdot104 = \cdot04330$; then area of segment ABC $= \cdot04330 \times 48 \times 48 = 99{\cdot}76$ sq. ins.

$\frac{h}{d}$	a	$\frac{h}{d}$	a	$\frac{h}{d}$	a	$\frac{h}{d}$	a	$\frac{h}{d}$	a	$\frac{h}{d}$	a
·001	·000042	·057	·01782	·112	·04826	·168	·08704	·223	·1306	·279	·1791
·002	·000119	·058	·01830	·113	·04889	·169	·08779	·224	·1314	·280	·1800
·003	·000219	·059	·01877	·114	·04952	·170	·08854	·225	·1323		
·004	·000337	·060	·01924	·115	·05017			·226	·1331	·281	·1809
·005	·000470			·116	·05080	·171	·08929	·227	·1339	·282	·1818
·006	·000618	·061	·01972	·117	·05115	·172	·09004	·228	·1348	·283	·1827
·007	·000779	·062	·02020	·118	·05209	·173	·09080	·229	·1356	·284	·1836
·008	·000951	·063	·02068	·119	·05274	·174	·09155	·230	·1365	·285	·1845
·009	·001135	·064	·02117	·120	·05339	·175	·09231			·286	·1854
·010	·001329	·065	·02166			·176	·09307	·231	·1373	·287	·1863
		·066	·02215	·121	·05405	·177	·09384	·232	·1382	·288	·1872
·011	·001533	·067	·02265	·122	·05469	·178	·09460	·233	·1390	·289	·1881
·012	·001746	·068	·02315	·123	·05535	·179	·09537	·234	·1398	·290	·1890
·013	·001968	·069	·02366	·124	·05600	·180	·09613	·235	·1407		
·014	·002199	·070	·02417	·125	·05666			·236	·1415	·291	·1900
·015	·002438			·126	·05733	·181	·09690	·237	·1424	·292	·1909
·016	·002685	·071	·02468	·127	·05799	·182	·09767	·238	·1432	·293	·1918
·017	·002940	·072	·02520	·128	·05866	·183	·09845	·239	·1441	·294	·1927
·018	·003202	·073	·02571	·129	·05933	·184	·09922	·240	·1449	·295	·1936
·019	·003471	·074	·02624	·130	·06000	·185	·1000			·296	·1945
·020	·003748	·075	·02676			·186	·1008	·241	·1458	·297	·1954
		·076	·02729	·131	·06067	·187	·1016	·242	·1467	·298	·1963
·021	·004031	·077	·02782	·132	·06135	·188	·1023	·243	·1475	·299	·1973
·022	·004322	·078	·02836	·133	·06203	·189	·1031	·244	·1484	·300	·1982
·023	·004618	·079	·02889	·134	·06271	·190	·1039	·245	·1492		
·024	·004921	·080	·02944	·135	·06339			·246	·1501	·301	·1991
·025	·005230			·136	·06407	·191	·1047	·247	·1510	·302	·2000
·026	·005546	·081	·02998	·137	·06476	·192	·1055	·248	·1518	·303	·2010
·027	·005867	·082	·03053	·138	·06545	·193	·1063	·249	·1527	·304	·2018
·028	·006194	·083	·03108	·139	·06614	·194	·1071	·250	·1535	·305	·2028
·029	·006527	·084	·03163	·140	·06683	·195	·1078			·306	·2037
·030	·006865	·085	·03219			·196	·1086	·251	·1544	·307	·2046
		·086	·03275	·141	·06753	·197	·1094	·252	·1553	·308	·2055
·031	·007209	·087	·03331	·142	·06823	·198	·1102	·253	·1561	·309	·2065
·032	·007558	·088	·03387	·143	·06892	·199	·1110	·254	·1570	·310	·2074
·033	·007913	·089	·03444	·144	·06963	·200	·1118	·255	·1579		
·034	·008273	·090	·03501	·145	·07033			·256	·1588	·311	·2083
·035	·008638			·146	·07103	·201	·1126	·257	·1596	·312	·2092
·036	·009008	·091	·03559	·147	·07174	·202	·1134	·258	·1605	·313	·2102
·037	·009383	·092	·03616	·148	·07245	·203	·1142	·259	·1614	·314	·2111
·038	·009763	·093	·03674	·149	·07316	·204	·1150	·260	·1623	·315	·2120
·039	·01015	·094	·03732	·150	·07387	·205	·1158			·316	·2129
·040	·01054	·095	·03791			·206	·1167	·261	·1631	·317	·2139
		·096	·03850	·151	·07459	·207	·1175	·262	·1640	·318	·2148
·041	·01093	·097	·03909	·152	·07531	·208	·1183	·263	·1649	·319	·2157
·042	·01133	·098	·03968	·153	·07603	·209	·1191	·264	·1658	·320	·2167
·043	·01173	·099	·04028	·154	·07675	·210	·1199	·265	·1667		
·044	·01214	·100	·04088	·155	·07747			·266	·1675	·321	·2176
·045	·01255			·156	·07819	·211	·1207	·267	·1684	·322	·2185
·046	·01297	·101	·04148	·157	·07892	·212	·1215	·268	·1693	·323	·2195
·047	·01339	·102	·04208	·158	·07965	·213	·1223	·269	·1702	·324	·2204
·048	·01382	·103	·04269	·159	·08038	·214	·1232	·270	·1711	·325	·2213
·049	·01425	·104	·04330	·160	·08111	·215	·1240			·326	·2223
·050	·01468	·105	·04391			·216	·1248	·271	·1720	·327	·2232
		·106	·04452	·161	·08185	·217	·1256	·272	·1729	·328	·2242
·051	·01512	·107	·04514	·162	·08258	·218	·1265	·273	·1738	·329	·2251
·052	·01556	·108	·04576	·163	·08332	·219	·1273	·274	·1746	·330	·2260
·053	·01601	·109	·04638	·164	·08406	·220	·1281	·275	·1755		
·054	·01646	·110	·04701	·165	·08480			·276	·1764	·331	·2270
·055	·01691			·166	·08554	·221	·1289	·277	·1773	·332	·2279
·056	·01737	·111	·04763	·167	·08629	·222	·1298	·278	·1782	·333	·2289


$\frac{h}{d}$ less than ·500



$\frac{h}{d}$ greater than ·500



$\frac{h}{d}$	a	$\frac{h}{d}$	a	$\frac{h}{d}$	a	$\frac{h}{d}$	a	$\frac{h}{d}$	a	$\frac{h}{d}$	a
·334	·2298	·391	·2846	·448	·3408	·504	·3967	·561	·4535	·618	·5096
·335	·2307	·392	·2855	·449	·3418	·505	·3977	·562	·4545	·619	·5106
·336	·2317	·393	·2865	·450	·3428	·506	·3987	·563	·4555	·620	·5115
·337	·2326	·394	·2875			·507	·3997	·564	·4565		
·338	·2336	·395	·2885	·451	·3438	·508	·4007	·565	·4575	·621	·5125
·339	·2345	·396	·2895	·452	·3448	·509	·4017	·566	·4585	·622	·5135
·340	·2355	·397	·2904	·453	·3458	·510	·4027	·567	·4595	·623	·5144
		·398	·2914	·454	·3468			·568	·4605	·624	·5154
·341	·2364	·399	·2924	·455	·3478	·511	·4037	·569	·4615	·625	·5164
·342	·2374	·400	·2934	·456	·3488	·512	·4047	·570	·4625	·626	·5174
·343	·2383			·457	·3498	·513	·4057			·627	·5183
·344	·2393	·401	·2943	·458	·3507	·514	·4067	·571	·4635	·628	·5193
·345	·2402	·402	·2953	·459	·3517	·515	·4077	·572	·4645	·629	·5203
·346	·2412	·403	·2963	·460	·3527	·516	·4087	·573	·4654	·630	·5212
·347	·2421	·404	·2973			·517	·4097	·574	·4664		
·348	·2431	·405	·2983	·461	·3537	·518	·4107	·575	·4674	·631	·5222
·349	·2440	·406	·2993	·462	·3547	·519	·4117	·576	·4684	·632	·5232
·350	·2450	·407	·3002	·463	·3557	·520	·4127	·577	·4694	·633	·5241
		·408	·3012	·464	·3567			·578	·4704	·634	·5251
·351	·2459	·409	·3022	·465	·3577	·521	·4137	·579	·4714	·635	·5260
·352	·2469	·410	·3032	·466	·3587	·522	·4147	·580	·4724	·636	·5270
·353	·2478			·467	·3597	·523	·4157			·637	·5280
·354	·2488	·411	·3042	·468	·3607	·524	·4167	·581	·4733	·638	·5289
·355	·2498	·412	·3052	·469	·3617	·525	·4177	·582	·4743	·639	·5299
·356	·2507	·413	·3061	·470	·3627	·526	·4187	·583	·4753	·640	·5308
·357	·2517	·414	·3071			·527	·4197	·584	·4763		
·358	·2526	·415	·3081	·471	·3637	·528	·4207	·585	·4773	·641	·5318
·359	·2536	·416	·3091	·472	·3647	·529	·4217	·586	·4783	·642	·5328
·360	·2546	·417	·3101	·473	·3657	·530	·4227	·587	·4793	·643	·5337
		·418	·3111	·474	·3667			·588	·4802	·644	·5347
·361	·2555	·419	·3121	·475	·3677	·531	·4237	·589	·4812	·645	·5356
·362	·2565	·420	·3130	·476	·3687	·532	·4247	·590	·4822	·646	·5366
·363	·2574			·477	·3697	·533	·4257			·647	·5376
·364	·2584	·421	·3140	·478	·3707	·534	·4267	·591	·4832	·648	·5385
·365	·2594	·422	·3150	·479	·3717	·535	·4277	·592	·4842	·649	·5395
·366	·2603	·423	·3160	·480	·3727	·536	·4287	·593	·4852	·650	·5404
·367	·2613	·424	·3170			·537	·4297	·594	·4861		
·368	·2622	·425	·3180	·481	·3737	·538	·4307	·595	·4871	·651	·5414
·369	·2632	·426	·3190	·482	·3747	·539	·4317	·596	·4881	·652	·5423
·370	·2642	·427	·3200	·483	·3757	·540	·4327	·597	·4891	·653	·5433
		·428	·3209	·484	·3767			·598	·4901	·654	·5442
·371	·2651	·429	·3219	·485	·3777	·541	·4337	·599	·4910	·655	·5452
·372	·2661	·430	·3229	·486	·3787	·542	·4347	·600	·4920	·656	·5461
·373	·2671			·487	·3797	·543	·4356			·657	·5471
·374	·2680	·431	·3239	·488	·3807	·544	·4366	·601	·4930	·658	·5480
·375	·2690	·432	·3249	·489	·3817	·545	·4376	·602	·4940	·659	·5490
·376	·2700	·433	·3259	·490	·3827	·546	·4386	·603	·4950	·660	·5499
·377	·2710	·434	·3269			·547	·4396	·604	·4959		
·378	·2719	·435	·3279	·491	·3837	·548	·4406	·605	·4969	·661	·5509
·379	·2729	·436	·3289	·492	·3847	·549	·4416	·606	·4981	·662	·5518
·380	·2739	·437	·3300	·493	·3857	·550	·4426	·607	·4989	·663	·5528
		·438	·3309	·494	·3867			·608	·4999	·664	·5537
·381	·2748	·439	·3319	·495	·3877	·551	·4436	·609	·5008	·665	·5547
·382	·2758	·440	·3328	·496	·3887	·552	·4446	·610	·5018	·666	·5556
·383	·2768			·497	·3897	·553	·4456			·667	·5565
·384	·2777	·441	·3338	·498	·3907	·554	·4466	·611	·5028	·668	·5575
·385	·2787	·442	·3348	·499	·3917	·555	·4476	·612	·5038	·669	·5584
·386	·2797	·443	·3358	·500	·3927	·556	·4486	·613	·5047	·670	5594
·387	·2807	·444	·3368			·557	·4496	·614	·5057		
·388	·2816	·445	·3378	·501	·3937	·558	·4506	·615	·5067	·671	·5603
·389	·2826	·446	·3388	·502	·3947	·559	·4516	·616	·5077	·672	·5612
·390	·2836	·447	·3398	·503	·3957	·560	·4526	·617	·5086	·673	·5622



$\frac{h}{d}$	a	$\frac{h}{d}$	a	$\frac{h}{d}$	a	$\frac{h}{d}$	a	$\frac{h}{d}$	a	$\frac{h}{d}$	a
·674	·5631	·730	·6143	·785	·6614	·841	·7050	·897	·7427	·952	·7716
·675	·5641			·786	·6622	·842	·7058	·898	·7433	·953	·7720
·676	·5650	·731	·6152	·787	·6631	·843	·7065	·899	·7439	·954	·7724
·677	·5659	·732	·6161	·788	·6639	·844	·7072	·900	·7445	·955	·7728
·678	·5669	·733	·6170	·789	·6647	·845	·7079			·956	·7733
·679	·5678	·734	·6179	·790	·6655	·846	·7087	·901	·7451	·957	·7737
·680	·5687	·735	·6187			·847	·7094	·902	·7457	·958	·7741
		·736	·6196	·791	·6663	·848	·7101	·903	·7463	·959	·7745
·681	·5699	·737	·6205	·792	·6671	·849	·7108	·904	·7469	·960	·7749
·682	·5706	·738	·6214	·793	·6679	·850	·7115	·905	·7475		
·683	·5715	·739	·6223	·794	·6687			·906	·7481	·961	·7753
·684	·5725	·740	·6231	·795	·6696	·851	·7122	·907	·7487	·962	·7756
·685	·5734			·796	·6704	·852	·7129	·708	·7492	·963	·7760
·686	·5743	·741	·6240	·797	·6712	·853	·7137	·909	·7498	·964	·7764
·687	·5752	·742	·6249	·798	·6720	·854	·7144	·910	·7504	·965	·7768
·688	·5762	·743	·6258	·799	·6728	·855	·7151			·966	·7771
·689	·5771	·744	·6266	·800	·6736	·856	·7158	·911	·7510	·967	·7775
·690	·5780	·745	·6275			·857	·7165	·912	·7515	·968	·7778
		·746	·6284	·801	·6744	·858	·7172	·913	·7521	·969	·7782
·691	·5799	·747	·6292	·802	·6752	·859	·7179	·914	·7527	·970	·7785
·692	·5808	·748	·6301	·803	·6760	·860	·7186	·915	·7532		
·693	·5817	·749	·6310	·804	·6768			·916	·7538	·971	·7789
·694	·5826	·750	·6319	·805	·6776	·861	·7193	·917	·7543	·972	·7792
·695	·5836			·806	·6783	·862	·7199	·918	·7549	·973	·7795
·696	·5845	·751	·6327	·807	·6791	·863	·7206	·919	·7554	·974	·7799
·697	·5854	·752	·6336	·808	·6799	·864	·7213	·920	·7560	·975	·7802
·698	·5863	·753	·6344	·809	·6807	·865	·7220			·976	·7805
·699	·5872	·754	·6353	·810	·6815	·866	·7227	·921	·7565	·977	·7808
·700	·5872	·755	·6362			·867	·7234	·922	·7570	·978	·7811
		·756	·6370	·811	·6823	·868	·7241	·923	·7576	·979	·7814
·701	·5881	·757	·6379	·812	·6831	·869	·7247	·924	·7581	·980	·7817
·702	·5891	·758	·6387	·813	·6838	·870	·7254	·925	·7586		
·703	·5900	·759	·6396	·814	·6846			·926	·7592	·981	·7819
·704	·5909	·760	·6405	·815	·6854	·871	·7261	·927	·7597	·982	·7822
·705	·5918			·818	·6862	·872	·7267	·928	·7602	·983	·7825
·706	·5927	·761	·6413	·817	·6870	·873	·7274	·929	·7607	·984	·7827
·707	·5936	·762	·6422	·818	·6877	·874	·7281	·930	·7612	·985	·7830
·708	·5945	·763	·6430	·819	·6885	·875	·7287			·986	·7832
·709	·5954	·764	·6439	·820	·6893	·876	·7294	·931	·7617	·987	·7834
·710	·5964	·765	·6447			·877	·7301	·932	·7622	·988	·7837
		·766	·6456	·821	·6900	·878	·7307	·933	·7627	·989	·7839
·711	·5973	·767	·6464	·822	·6908	·879	·7314	·934	·7632	·990	·7841
·712	·5982	·768	·6472	·823	·6916	·880	·7320	·935	·7637		
·713	·5991	·769	·6481	·824	·6923			·936	·7642	·991	·7843
·714	·6000	·770	·6489	·825	·6931	·881	·7327	·937	·7647	·992	·7844
·715	·6009			·826	·6938	·882	·7333	·938	·7652	·993	·7846
·716	·6018	·771	·6498	·827	·6946	·883	·7340	·939	·7657	·994	·7848
·717	·6027	·772	·6506	·828	·6954	·884	·7346	·940	·7662	·995	·7849
·718	·6036	·773	·6515	·829	·6961	·885	·7352			·996	·7851
·719	·6045	·774	·6523	·830	·6969	·886	·7359	·941	·7666	·997	·7852
·720	·6054	·775	·6531			·887	·7365	·942	·7671	·998	·7853
		·776	·6540	·831	·6976	·888	·7371	·943	·7676	·999	·7854
·721	·6063	·777	·6548	·832	·6984	·889	·7378	·944	·7680	1·000	·7854
·722	·6072	·778	·6556	·833	·6991	·890	·7384	·945	·7685		
·723	·6081	·779	·6565	·834	·6999			·946	·7689		
·724	·6090	·780	·6573	·835	·7006	·891	·7390	·947	·7694		
·725	·6099			·836	·7013	·892	·7396	·948	·7698		
·726	·6107	·781	·6581	·837	·7021	·893	·7403	·949	·7703		
·727	·6116	·782	·6589	·838	·7028	·894	·7409	·950	·7707		
·728	·6125	·783	·6598	·839	·7036	·895	·7415				
·729	·6134	·784	·6606	·840	·7043	·896	·7421	·951	·7712		

TRIGONOMETRY.

Trigonometry is the science in which the relations subsisting between the sides and angles of a triangle are investigated. The science is called *plane* trigonometry or *spherical* trigonometry according as the triangle is formed on a plane surface or on a spherical surface. Plane trigonometry also includes all algebraical investigations with respect to plane angles, whether forming a triangle or not.

Measurement of Angles.

In practice the *right angle*, or some fraction of it, is always taken as the unit of angular measurement. It is divided into 90 equal parts, called degrees (°), each degree into 60 minutes (′), and each minute into 60 seconds (″). The *centesimal* method, in which the right angle is divided into 100 equal parts (grades), &c., is not used even in France, where it was first proposed. In theoretical investigations, what is termed the *circular measure* of angles is frequently employed. In this system the unit of measurement is the *radian*—that is, the angle which at the centre of the circle stands on an arc equal in length to the radius of the circle. The radian $= \frac{2 \text{ right angles}}{\pi}$ $= 57{\cdot}295779 \ldots$ degrees. Since π radians $= 2$ right angles, π ($= 3{\cdot}14159 \ldots$ radians) is often used to denote an angle of 180°. Similarly, $\frac{\pi}{2} = 90°$, $\frac{\pi}{4} = 45°$, &c. Rectangular measure may be expressed in circular measure, and *vice versâ*, by means of the following formulæ :—

$$D = \frac{180\theta}{\pi}, \qquad \theta = \frac{\pi D}{180},$$

in which D = the number of *degrees*, and θ = the number of *radians* in the given angle.

A triangle contains seven quantities—namely, three sides, three angles, and the surface. When any three of these quantities are given, the four remaining ones can by them be ascertained (one side or the area must be one of the given quantities). This operation is called *solving the triangle*, and is simply an application of arithmetic to geometrical objects.

For the foundation of the above-mentioned solution there are assumed eight *trigonometrical functions*, as follows :—

Let ABC (fig. 98) be a right-angled triangle, C being the right angle ; then

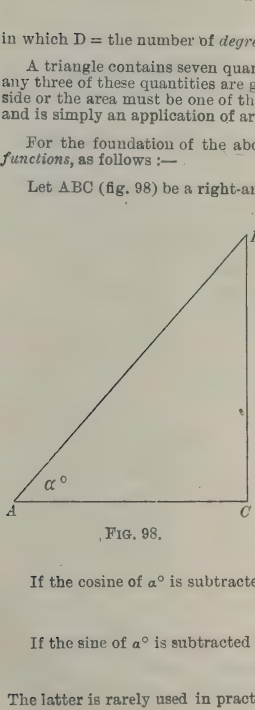


FIG. 98.

$$\frac{BC}{AB}, \text{ or } \frac{\text{perpendicular}}{\text{hypotenuse}} = \text{sine } \alpha°.$$

$$\frac{AC}{AB}, \text{ or } \frac{\text{base}}{\text{hypotenuse}} = \text{cosine } \alpha°.$$

$$\frac{BC}{AC}, \text{ or } \frac{\text{perpendicular}}{\text{base}} = \text{tangent } \alpha°.$$

$$\frac{AC}{BC}, \text{ or } \frac{\text{base}}{\text{perpendicular}} = \text{cotangent } \alpha°.$$

$$\frac{AB}{AC}, \text{ or } \frac{\text{hypotenuse}}{\text{base}} = \text{secant } \alpha°.$$

$$\frac{AB}{BC}, \text{ or } \frac{\text{hypotenuse}}{\text{perpendicular}} = \text{cosecant } \alpha°.$$

If the cosine of $\alpha°$ is subtracted from unity, the remainder is called the *versed sine* of $\alpha°$; i.e.

$$1 - \cos \alpha° = \text{versin } \alpha°.$$

If the sine of $\alpha°$ is subtracted from unity, the remainder is called the *coversed sine* of $\alpha°$; i.e.,

$$1 - \sin \alpha° = \text{coversin } \alpha°.$$

The latter is rarely used in practice.

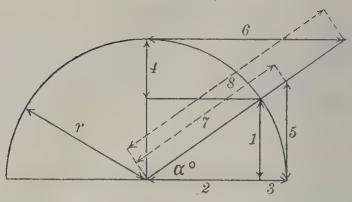


FIG. 99.

If in the figure (fig. 99) the radius r is unity, the values of the different lengths 1, 2, 3, 4, 5, 6, 7, 8, represent the values of the trigonometrical functions of the angle $\alpha°$ as follows :—

1	represents	the	value of	sine $\alpha°$.	5	represents	the value of	tan $\alpha°$.
2	,,	,,	,,	cosine $\alpha°$.	6	,,	,,	,, cot $\alpha°$.
3	,,	,,	,,	versin $\alpha°$.	7	,,	,,	,, sec $\alpha°$.
4	,,	,,	,,	coversin $\alpha°$.	8	,,	,,	,, cosec $\alpha°$.

The *complement* of an angle $\alpha° = 90° - \alpha°$. The *supplement* of an angle $\alpha° = 180° - \alpha°$

Relations of Trigonometrical Functions to each other.

$$\operatorname{cosec} \alpha = \frac{1}{\sin \alpha}. \qquad \sec \alpha = \frac{1}{\cos \alpha}. \qquad \cot \alpha = \frac{1}{\tan \alpha}.$$

$$\tan \alpha = \frac{\sin \alpha}{\cos \alpha}. \qquad \cot \alpha = \frac{\cos \alpha}{\sin \alpha}. \qquad \sin^2 \alpha + \cos^2 \alpha = 1.$$

$$\tan^2 \alpha + 1 = \sec^2 \alpha. \qquad \cot^2 \alpha + 1 = \operatorname{cosec}^2 \alpha.$$

$$\sin \alpha = \sqrt{1 - \cos^2 \alpha} = \frac{1}{\sqrt{1 + \cot^2 \alpha}} = \frac{\tan \alpha}{\sqrt{1 + \tan^2 \alpha}}. \qquad \cos \alpha = \sqrt{1 - \sin^2 \alpha} = \frac{1}{\sqrt{1 + \tan^2 \alpha}}.$$

$$\tan \alpha = \frac{\sin \alpha}{\sqrt{1 - \sin^2 \alpha}}. \qquad \cot \alpha = \frac{\sqrt{1 - \sin^2 \alpha}}{\sin \alpha} \qquad \operatorname{cosec} \alpha = \sqrt{1 + \cot^2 \alpha} = \frac{\sqrt{1 + \tan^2 \alpha}}{\tan \alpha}.$$

$$\sec \alpha = \sqrt{1 + \tan^2 \alpha}. \qquad \operatorname{versin} \alpha = 1 - \frac{1}{\sqrt{1 + \tan^2 \alpha}}.$$

$$\sin \alpha = \sin (180 - \alpha) = - \sin (180 + \alpha).$$
$$\cos \alpha = - \cos (180 - \alpha) = - \cos (180 + \alpha).$$
$$\tan \alpha = - \tan (180 - \alpha) = \tan (180 + \alpha).$$
$$\cot \alpha = - \cot (180 - \alpha) = \cot (180 + \alpha).$$
$$\sec \alpha = - \sec (180 - \alpha) = - \sec (180 + \alpha).$$
$$\operatorname{cosec} \alpha = \operatorname{cosec} (180 - \alpha) = - \operatorname{cosec} (180 + \alpha).$$
$$\operatorname{versin} (180 - \alpha) = 1 + \cos \alpha.$$
$$\sin \alpha = - \cos (90 + \alpha). \qquad \cos \alpha = \sin (90 + \alpha).$$

$$\sin (\alpha + \beta) = \sin \alpha \cos \beta + \cos \alpha \sin \beta.$$
$$\sin (\alpha - \beta) = \sin \alpha \cos \beta - \cos \alpha \sin \beta.$$
$$\cos (\alpha + \beta) = \cos \alpha \cos \beta - \sin \alpha \sin \beta.$$
$$\cos (\alpha - \beta) = \cos \alpha \cos \beta + \sin \alpha \sin \beta.$$
$$\tan (\alpha + \beta) = \frac{\tan \alpha + \tan \beta}{1 - \tan \alpha \tan \beta}.$$
$$\tan (\alpha - \beta) = \frac{\tan \alpha - \tan \beta}{1 + \tan \alpha \tan \beta}.$$
$$\sin (\alpha + \beta) \sin (\alpha - \beta) = \sin^2 \alpha - \sin^2 \beta = \cos^2 \beta - \cos^2 \alpha.$$
$$\cos (\alpha + \beta) \cos (\alpha - \beta) = \cos^2 \alpha - \sin^2 \beta = \cos^2 \beta - \sin^2 \alpha.$$

$$\sin 2\alpha = 2\sin\alpha\cos\alpha = \frac{2\tan\alpha}{1+\tan^2\alpha}.$$

$$\cos 2\alpha = \cos^2\alpha - \sin^2\alpha = 1 - 2\sin^2\alpha = 2\cos^2\alpha - 1 = \frac{1-\tan^2\alpha}{1+\tan^2\alpha}.$$

$$\tan 2\alpha = \frac{2\tan\alpha}{1-\tan^2\alpha}. \qquad \cot 2\alpha = \frac{\cot^2\alpha - 1}{2\cot\alpha}.$$

$$\sin 3\alpha = 3\sin\alpha - 4\sin^3\alpha. \qquad \cos 3\alpha = 4\cos^3\alpha - 3\cos\alpha.$$

$$\tan 3\alpha = \frac{3\tan\alpha - \tan^3\alpha}{1 - 3\tan^2\alpha}.$$

$$\sin\frac{\alpha}{2} = \sqrt{\frac{1-\cos\alpha}{2}}. \qquad \cos\frac{\alpha}{2} = \sqrt{\frac{1+\cos\alpha}{2}}.$$

$$\tan\frac{\alpha}{2} = \sqrt{\frac{1-\cos\alpha}{1+\cos\alpha}} = \frac{1-\cos\alpha}{\sin\alpha} = \frac{-1 \pm \sqrt{1+\tan^2\alpha}}{\tan\alpha}.$$

CHANGES IN VALUE AND SIGN OF TRIGONOMETRICAL RATIOS.

—	0° . . . 90°	90° . . . 180°	180° . . . 270°	270° . . . 360°
Sine	positive 0 . . . 1	positive 1 . . . 0	negative 0 . . . −1	negative −1 . . . 0
Cosine . . .	positive 1 . . . 0	negative 0 . . . −1	negative −1 . . . 0	positive 0 . . . 1
Tangent . .	positive 0 . . . ∞	negative ∞ . . . 0	positive 0 . . . ∞	negative ∞ . . . 0
Cosecant . . .	positive ∞ . . . 1	positive 1 . . . ∞	negative ∞ . . . −1	negative −1 . . . ∞
Secant . . .	positive 1 . . . ∞	negative ∞ . . . −1	negative −1 . . . ∞	positive ∞ . . . 1
Cotangent . .	positive ∞ . . . 0	negative 0 . . . ∞	positive ∞ . . . 0	negative 0 . . . ∞

TABLE OF VALUES OF TRIGONOMETRICAL RATIOS OF ANGLES.

—	0°	30°	45°	60°	90°	120°	135°	150°	180°
Sine . . .	0	$\frac{1}{2}$	$\frac{1}{\sqrt{2}}$	$\frac{\sqrt{3}}{2}$	1	$\frac{\sqrt{3}}{2}$	$\frac{1}{\sqrt{2}}$	$\frac{1}{2}$	0
Cosine. . .	1	$\frac{\sqrt{3}}{2}$	$\frac{1}{\sqrt{2}}$	$\frac{1}{2}$	0	$-\frac{1}{2}$	$-\frac{1}{\sqrt{2}}$	$-\frac{\sqrt{3}}{2}$	−1
Tangent . .	0	$\frac{1}{\sqrt{3}}$	1	$\sqrt{3}$	∞	$-\sqrt{3}$	−1	$-\frac{1}{\sqrt{3}}$	0
Cotangent .	∞	$\sqrt{3}$	1	$\frac{1}{\sqrt{3}}$	0	$-\frac{1}{\sqrt{3}}$	−1	$-\sqrt{3}$	∞
Secant . . .	1	$\frac{2}{\sqrt{3}}$	$\sqrt{2}$	2	∞	−2	$-\sqrt{2}$	$-\frac{2}{\sqrt{3}}$	−1
Cosecant . .	∞	2	$\sqrt{2}$	$\frac{2}{\sqrt{3}}$	1	$\frac{2}{\sqrt{3}}$	$\sqrt{2}$	2	∞
Circular Measure	$\frac{\pi}{\infty}$	$\frac{\pi}{6}$	$\frac{\pi}{4}$	$\frac{\pi}{3}$	$\frac{\pi}{2}$	$\frac{2\pi}{3}$	$\frac{3\pi}{4}$	$\frac{5\pi}{6}$	π

Formulæ for Right-angled Triangles.

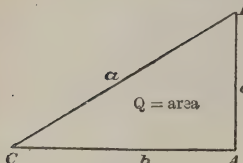


FIG. 100.

$$a = \sqrt{b^2+c^2} = \frac{c}{\sin C} = \frac{b}{\cos C} = 2\sqrt{\frac{Q}{\sin 2C}}.$$

$$b = a\cos C = c\cot C = a\sin B = c\tan B = \sqrt{\frac{2Q}{\tan C}}$$

$$Q = \frac{a^2\sin 2C}{4} = \frac{b^2\tan C}{2} = \frac{c^2\sin 2C}{2} = \frac{c\sqrt{(a+c)(a-c)}}{2}.$$

$$\sin C = \frac{c}{a};\ \cos C = \frac{b}{a};\ \tan C = \frac{c}{b} = \frac{2Q}{b^2};\ \sin 2C = \frac{4Q}{a^2}.$$

Formulæ for Oblique-angled Triangles.

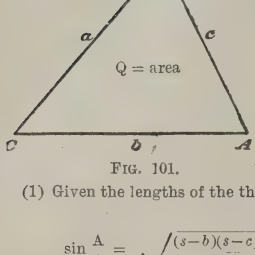


FIG. 101.

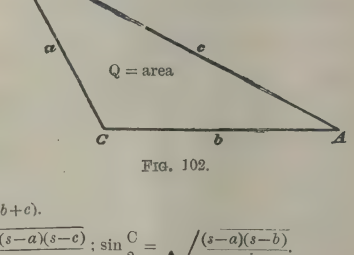


FIG. 102.

(1) Given the lengths of the three sides, a, b, c.

$$s = \tfrac{1}{2}(a+b+c).$$

$$\sin\frac{A}{2} = \sqrt{\frac{(s-b)(s-c)}{bc}};\ \sin\frac{B}{2} = \sqrt{\frac{(s-a)(s-c)}{ac}};\ \sin\frac{C}{2} = \sqrt{\frac{(s-a)(s-b)}{ab}}.$$

$$\cos\frac{A}{2} = \sqrt{\frac{s(s-a)}{bc}};\quad \cos\frac{B}{2} = \sqrt{\frac{s(s-b)}{ac}};\quad \cos\frac{C}{2} = \sqrt{\frac{s(s-c)}{ab}}.$$

$$\tan\frac{A}{2} = \sqrt{\frac{(s-b)(s-c)}{s(s-a)}};\ \tan\frac{B}{2} = \sqrt{\frac{(s-a)(s-c)}{s(s-b)}};\ \tan\frac{C}{2} = \sqrt{\frac{(s-a)(s-b)}{s(s-c)}}.$$

(2) Given one side and two adjacent angles, viz. a, B, C.

$$A = 180 - (B+C);\qquad b = a\frac{\sin B}{\sin A};\qquad c = a\frac{\sin C}{\sin A}.$$

(3) Given two sides and the included angle, viz. b, c, A.

$\tan\frac{B-C}{2} = \frac{b-c}{b+c}\cot\frac{A}{2}$, from which $\frac{B-C}{2}$ can be determined; then $B = \frac{B-C}{2} + 90 - \frac{A}{2}$.

(4) Given two sides and the angle opposite one of them, viz. a, b, A.

$$\sin B = \frac{b}{a}\sin A;\qquad C = 180 - (A+B);\qquad b = a\frac{\sin C}{\sin A},$$

in which if

A is not less than 90°	C must be acute :
a is less than b sin A	there is no solution ;
a equals b sin A	C is a right angle ;
a is greater than b sin A	C may be acute or obtuse ;
a equals or is greater than b	C must be acute.

$$Q = \frac{bc\sin A}{2} = \frac{ac\sin B}{2} = \frac{ab\sin C}{2} = \frac{c^2\sin A\sin B}{2\sin(A+B)} = \sqrt{s(s-a)(s-b)(s-c)}.$$

$$a = \sqrt{\frac{2Q\sin A}{\sin B\sin(A+B)}};\qquad b = \sqrt{\frac{2Q\sin B}{\sin C\sin(B+C)}};\qquad c = \sqrt{\frac{2Q\sin C}{\sin A\sin(A+C)}}$$

$$a = \sqrt{b^2+c^2-2bc\cos A}.$$

NATURAL SINES, TANGENTS, &c.

	Sine.	Tang.	Cotang.	Cosine.	
0 Deg.					
0′	·0000000	·000000	Infinite	1·000000	60
1	·0002909	·000291	3437·746	1·000000	59
2	·0005818	·000582	1718·873	·9999998	58
3	·0008727	·000872	1145·915	·9999996	57
4	·0011636	·001163	859·4363	·9999993	56
5	·0014544	·001454	687·5488	·9999989	55
6	·0017453	·001745	572·9572	·9999985	54
7	·0020362	·002036	491·1060	·9999979	53
8	·0023271	·002327	429·7175	·9999973	52
9	·0026180	·002618	381·9709	·9999966	51
10	·0029089	·002908	343·7737	·9999958	50
11	·0031998	·003199	312·5213	·9999949	49
12	·0034907	·003490	286·4777	·9999939	48
13	·0037815	·003781	264·4408	·9999928	47
14	·0040724	·004072	245·5519	·9999917	46
15	·0043633	·004363	229·1816	·9999905	45
16	·0046542	·004654	214·8576	·9999892	44
17	·0049451	·004945	202·2187	·9999878	43
18	·0052360	·005236	190·9841	·9999863	42
19	·0055268	·005526	180·9322	·9999847	41
20	·0058177	·005817	171·8854	·9999831	40
21	·0061086	·006108	163·7001	·9999813	39
22	·0063995	·006399	156·2590	·9999795	38
23	·0066904	·006690	149·4650	·9999776	37
24	·0069813	·006981	143·2371	·9999756	36
25	·0072721	·007272	137·5075	·9999736	35
26	·0075630	·007563	132·2185	·9999714	34
27	·0078539	·007854	127·3213	·9999692	33
28	·0081448	·008145	122·7739	·9999668	32
29	·0084357	·008436	118·5401	·9999644	31
30	·0087265	·008726	114·5886	·9999619	30
31	·0090174	·009017	110·8920	·9999593	29
32	·0093083	·009308	107·4264	·9999567	28
33	·0095992	·009599	104·1709	·9999539	27
34	·0098900	·009890	101·1069	·9999511	26
35	·0101809	·010181	98·21794	·9999482	25
36	·0104718	·010472	95·48947	·9999452	24
37	·0107627	·010763	92·90848	·9999421	23
38	·0110535	·011054	90·46333	·9999389	22
39	·0113444	·011345	88·14357	·9999357	21
40	·0116353	·011636	85·93979	·9999323	20
41	·0119261	·011927	83·84350	·9999289	19
42	·0122170	·012217	81·84704	·9999254	18
43	·0125079	·012508	79·94343	·9999218	17
44	·0127987	·012799	78·12634	·9999181	16
45	·0130896	·013090	76·39000	·9999143	15
46	·0133805	·013381	74·72916	·9999105	14
47	·0136713	·013672	73·13899	·9999065	13
48	·0139622	·013963	71·61507	·9999025	12
49	·0142530	·014254	70·15334	·9998984	11
50	·0145439	·014545	68·75008	·9998942	10
51	·0148348	·014836	67·40185	·9998900	9
52	·0151256	·015127	66·10547	·9998856	8
53	·0154165	·015418	64·85800	·9998812	7
54	·0157073	·015709	63·65674	·9998766	6
55	·0159982	·016000	62·49915	·9998720	5
56	·0162890	·016291	61·38290	·9998673	4
57	·0165799	·016582	60·30582	·9998625	3
58	·0168707	·016873	59·26587	·9998577	2
59	·0171616	·017164	58·26117	·9998527	1
60	·0174524	·017455	57·28996	·9998477	0′
					89 Deg.

	Cosine.	Cotan.	Tang.	Sine.	

	Sine.	Tang.	Cotang.	Cosine.	
1 Deg.					
0′	·0174524	·017455	57·28996	·9998477	60
5	·0189066	·018910	52·88211	·9998213	55
10	·0203608	·020365	49·10388	·9997927	50
15	·0218149	·021820	45·82935	·9997620	45
20	·0232690	·023275	42·96407	·9997292	40
25	·0247230	·024730	40·43583	·9996943	35
30	·0261769	·026185	38·18845	·9996573	30
35	·0276309	·027641	36·17759	·9996182	25
40	·0290847	·029097	34·36777	·9995770	20
45	·0305385	·030552	32·73026	·9995336	15
50	·0319922	·032008	31·24157	·9994881	10
55	·0334459	·033464	29·88229	·9994405	5
60	·0348995	·034920	28·63625	·9993908	0′
					88 Deg.
2 Deg.					
0′	·0348995	·034920	28·63625	·9993908	60
5	·0363530	·036377	27·48985	·9993390	55
10	·0378065	·037833	26·43160	·9992851	50
15	·0392598	·039290	25·45170	·9992290	45
20	·0407131	·040746	24·54175	·9991709	40
25	·0421663	·042203	23·69453	·9991106	35
30	·0436194	·043660	22·90376	·9990482	30
35	·0450724	·045118	22·16398	·9989837	25
40	·0465253	·046575	21·47040	·9989171	20
45	·0479781	·048033	20·81882	·9988484	15
50	·0494308	·049491	20·20555	·9987775	10
55	·0508835	·050949	19·62729	·9987046	5
60	·0523360	·052407	19·08113	·9986295	0′
					87 Deg.
3 Deg.					
0′	·0523360	·052407	19·08113	·9986295	60
5	·0537883	·053866	18·56447	·9985524	55
10	·0552406	·055325	18·07497	·9984731	50
15	·0566928	·056784	17·61055	·9983917	45
20	·0581448	·058243	17·16933	·9983082	40
25	·0595967	·059702	16·74961	·9982225	35
30	·0610485	·061162	16·34985	·9981348	30
35	·0625002	·062622	15·96866	·9980450	25
40	·0639517	·064082	15·60478	·9979530	20
45	·0654031	·065543	15·25705	·9978589	15
50	·0668544	·067004	14·92441	·9977627	10
55	·0683055	·068465	14·60591	·9976645	5
60	·0697565	·069926	14·30066	·9975641	0′
					86 Deg.
4 Deg.					
0′	·0697565	·069926	14·30066	·9975641	60
5	·0712073	·071388	14·00785	·9974615	55
10	·0726580	·072850	13·72673	·9973569	50
15	·0741085	·074312	13·45662	·9972502	45
20	·0755589	·075775	13·19688	·9971413	40
25	·0770091	·077238	12·94692	·9970304	35
30	·0784591	·078701	12·70620	·9969173	30
35	·0799090	·080165	12·47422	·9968022	25
40	·0813587	·081629	12·25050	·9966849	20
45	·0828082	·083093	12·03462	·9965655	15
50	·0842576	·084558	11·82616	·9964440	10
55	·0857067	·086023	11·62476	·9963204	5
60	·0871557	·087488	11·43005	·9961947	0′
					85 Deg.

	Cosine.	Cotan.	Tang.	Sine.	

NATURAL SINES, TANGENTS, &c. (*continued*).

	Sine.	Tang.	Cotang.	Cosine.	
5 Deg.					
0′	·0871557	·087488	11·43005	·9961947	60
5	·0886046	·088954	11·24171	·9960669	55
10	·0900532	·090420	11·05943	·9959370	50
15	·0915016	·091887	10·88292	·9958049	45
20	·0929499	·093354	10·71191	·9956708	40
25	·0943979	·094821	10·54615	·9955345	35
30	·0958458	·096289	10·38539	·9953962	30
35	·0972934	·097757	10·22942	·9952557	25
40	·0987408	·099225	10·07803	·9951132	20
45	·1001881	·100694	9·931008	·9949685	15
50	·1016351	·102164	9·788173	·9948217	10
55	·1030819	·103634	9·649347	·9946729	5
60	·1045285	·105104	9·514364	·9945219	0′
					84 Deg.
6 Deg.					
0′	·1045285	·105104	9·514364	·9945219	60
5	·1059748	·106575	9·383066	·9943688	55
10	·1074210	·108046	9·255303	·9942136	50
15	·1088669	·109517	9·130934	·9940563	45
20	·1103126	·110989	9·009826	·9938969	40
25	·1117580	·112462	8·891850	·9937355	35
30	·1132032	·113935	8·776887	·9935719	30
35	·1146482	·115409	8·664822	·9934062	25
40	·1160929	·116883	8·555546	·9932384	20
45	·1175374	·118357	8·448957	·9930685	15
50	·1189816	·119832	8·344955	·9928965	10
55	·1204256	·121308	8·243448	·9927224	5
60	·1218693	·122784	8·144346	·9925462	0′
					83 Deg.
7 Deg.					
0′	·1218693	·122784	8·144346	·9925462	60
5	·1233128	·124261	8·047564	·9923679	55
10	·1247560	·125738	7·953022	·9921874	50
15	·1261990	·127216	7·860642	·9920049	45
20	·1276416	·128694	7·770350	·9918204	40
25	·1290841	·130173	7·682076	·9916337	35
30	·1305262	·131652	7·595754	·9914449	30
35	·1319681	·133132	7·511317	·9912540	25
40	·1334096	·134612	7·428706	·9910610	20
45	·1348509	·136094	7·347881	·9908659	15
50	·1362919	·137575	7·268725	·9906687	10
55	·1377327	·139058	7·191245	·9904694	5
60	·1391731	·140540	7·115369	·9902681	0′
					82 Deg.
8 Deg.					
0′	·1391731	·140540	7·115369	·9902681	60
5	·1406132	·142024	7·041048	·9900646	55
10	·1420531	·143508	6·968233	·9898590	50
15	·1434926	·144993	6·896879	·9896514	45
20	·1449319	·146478	6·826943	·9894416	40
25	·1463708	·147964	6·758382	·9892298	35
30	·1478094	·149451	6·691156	·9890159	30
35	·1492477	·150938	6·625225	·9887998	25
40	·1506857	·152426	6·560553	·9885817	20
45	·1521234	·153914	6·497104	·9883615	15
50	·1535607	·155404	6·434842	·9881392	10
55	·1549978	·156893	6·373735	·9879148	5
60	·1564345	·158384	6·313751	·9876883	0′
					81 Deg.
	Cosine.	Cotan.	Tang.	Sine.	

	Sine.	Tang.	Cotang.	Cosine.	
9 Deg.					
0′	·1564345	·158384	6·313751	·9876883	60
5	·1578708	·159875	6·254858	·9874598	55
10	·1593069	·161367	6·197027	·9872291	50
15	·1607426	·162860	6·140230	·9869964	45
20	·1621779	·164353	6·084438	·9867615	40
25	·1636129	·165847	6·029624	·9865246	35
30	·1650476	·167342	5·975764	·9862856	30
35	·1664819	·168838	5·922832	·9860445	25
40	·1679159	·170334	5·870804	·9858013	20
45	·1693495	·171831	5·819657	·9855561	15
50	·1707828	·173329	5·769368	·9853087	10
55	·1722156	·174827	5·719917	·9850593	5
60	·1736482	·176327	5·671281	·9848078	0′
					80 Deg.
10 Deg.					
0′	·1736482	·176327	5·671281	·9848078	60
5	·1750803	·177827	5·623442	·9845542	55
10	·1765121	·179327	5·576378	·9842985	50
15	·1779435	·180829	5·530072	·9840407	45
20	·1793746	·182331	5·484505	·9837808	40
25	·1808052	·183835	5·439659	·9835189	35
30	·1822355	·185339	5·395517	·9832549	30
35	·1836654	·186843	5·352062	·9829888	25
40	·1850949	·188349	5·309279	·9827206	20
45	·1865240	·189855	5·267151	·9824504	15
50	·1879528	·191363	5·225664	·9821781	10
55	·1893811	·192871	5·184803	·9819037	5
60	·1908090	·194380	5·144554	·9816272	0′
					79 Deg.
11 Deg.					
0′	·1908090	·194380	5·144554	·9816272	60
5	·1922365	·195890	5·104902	·9813486	55
10	·1936636	·197400	5·065835	·9810680	50
15	·1950903	·198912	5·027339	·9807853	45
20	·1965166	·200424	4·989402	·9805005	40
25	·1979425	·201938	4·952012	·9802136	35
30	·1993679	·203452	4·915157	·9799247	30
35	·2007930	·204967	4·878824	·9796337	25
40	·2022176	·206483	4·843004	·9793406	20
45	·2036418	·208000	4·807685	·9790455	15
50	·2050655	·209518	4·772856	·9787483	10
55	·2064888	·211036	4·738508	·9784490	5
60	·2079117	·212556	4·704630	·9781476	0′
					78 Deg.
12 Deg.					
0′	·2079117	·212556	4·704630	·9781476	60
5	·2093341	·214077	4·671212	·9778441	55
10	·2107561	·215598	4·638245	·9775386	50
15	·2121777	·217121	4·605720	·9772311	45
20	·2135988	·218644	4·573628	·9769215	40
25	·2150194	·220169	4·541960	·9766098	35
30	·2164396	·221694	4·510708	·9762960	30
35	·2178593	·223221	4·479863	·9759802	25
40	·2192786	·224748	4·449418	·9756623	20
45	·2206974	·226276	4·419364	·9753423	15
50	·2221158	·227806	4·389694	·9750203	10
55	·2235337	·229336	4·360400	·9746962	5
60	·2249511	·230868	4·331475	·9743701	0′
					77 Deg.
	Cosine.	Cotan.	Tang.	Sine.	

NATURAL SINES, TANGENTS, &c. (*continued*).

	Sine.	Tang.	Cotang.	Cosine.	
13 Deg.					
0′	·2249511	·230868	4·331475	·9748701	60
5	·2263680	·232400	4·302913	·9740419	55
10	·2277844	·233934	4·274706	·9737116	50
15	·2292004	·235468	4·246848	·9733792	45
20	·2306159	·237004	4·219331	·9730449	40
25	·2320309	·238541	4·192151	·9727084	35
30	·2334454	·240078	4·165299	·9723699	30
35	·2348594	·241617	4·138771	·9720294	25
40	·2362729	·243157	4·112561	·9716867	20
45	·2376859	·244698	4·086662	·9713421	15
50	·2390984	·246240	4·061070	·9709953	10
55	·2405104	·247783	4·035777	·9706466	5
60	·2419219	·249328	4·010780	·9702957	0′
				76 Deg.	
14 Deg.					
0′	·2419219	·249328	4·010780	·9702957	60
5	·2433329	·250873	3·986073	·9699428	55
10	·2447433	·252420	3·961651	·9695879	50
15	·2461533	·253967	3·937509	·9692309	45
20	·2475627	·255516	3·913642	·9688719	40
25	·2489716	·257066	3·890044	·9685108	35
30	·2503800	·258617	3·866713	·9681476	30
35	·2517879	·260169	3·843642	·9677825	25
40	·2531952	·261723	3·820828	·9674152	20
45	·2546019	·263278	3·798266	·9670459	15
50	·2560082	·264833	3·775951	·9666746	10
55	·2574139	·266390	3·753881	·9663012	5
60	·2588190	·267949	3·732050	·9659258	0′
				75 Deg.	
15 Deg.					
0′	·2588190	·267949	3·732050	·9659258	60
5	·2602237	·269508	3·710455	·9655484	55
10	·2616277	·271069	3·689092	·9651689	50
15	·2630312	·272631	3·667957	·9647873	45
20	·2644342	·274194	3·647046	·9644037	40
25	·2658366	·275758	3·626356	·9640181	35
30	·2672384	·277324	3·605883	·9636305	30
35	·2686396	·278891	3·585624	·9632408	25
40	·2700403	·280459	3·565574	·9628490	20
45	·2714404	·282029	3·545732	·9624552	15
50	·2728400	·283599	3·526093	·9620594	10
55	·2742390	·285172	3·506655	·9616616	5
60	·2756374	·286745	3·487414	·9612617	0′
				74 Deg.	
16 Deg.					
0′	·2756374	·286745	3·487414	·9612617	60
5	·2770352	·288320	3·468367	·9608598	55
10	·2784324	·289896	3·449512	·9604558	50
15	·2798290	·291473	3·430844	·9600499	45
20	·2812251	·293052	3·412362	·9596418	40
25	·2826205	·294632	3·394063	·9592318	35
30	·2840153	·296213	3·375943	·9588197	30
35	·2854096	·297796	3·358000	·9584056	25
40	·2868032	·299380	3·340232	·9579895	20
45	·2881963	·300965	3·322636	·9575714	15
50	·2895887	·302552	3·305209	·9571512	10
55	·2909805	·304141	3·287948	·9567290	5
60	·2923717	·305730	3·270852	·9563048	0′
				73 Deg.	
	Cosine.	Cotan.	Tang.	Sine.	

	Sine.	Tang.	Cotang.	Cosine.	
17 Deg.					
0′	·2923717	·305730	3·270852	·9563048	60
5	·2937623	·307321	3·253918	·9558785	55
10	·2951522	·308914	3·237143	·9554502	50
15	·2965416	·310508	3·220526	·9550199	45
20	·2979303	·312103	3·204063	·9545876	40
25	·2993184	·313700	3·187754	·9541533	35
30	·3007058	·315298	3·171594	·9537170	30
35	·3020926	·316898	3·155584	·9532786	25
40	·3034788	·318499	3·139719	·9528382	20
45	·3048643	·320102	3·123999	·9523958	15
50	·3062492	·321706	3·108421	·9519514	10
55	·3076334	·323312	3·092983	·9515050	5
60	·3090170	·324919	3·077683	·9510565	0′
					72 Deg.
18 Deg.					
0′	·3090170	·324919	3·077683	·9510565	60
5	·3103999	·326528	3·062520	·9506061	55
10	·3117822	·328138	3·047491	·9501536	50
15	·3131638	·329750	3·032595	·9496991	45
20	·3145448	·331363	3·017830	·9492426	40
25	·3159250	·332978	3·003193	·9487842	35
30	·3173047	·334595	2·988685	·9483237	30
35	·3186836	·336213	2·974301	·9478612	25
40	·3200619	·337833	2·960042	·9473966	20
45	·3214395	·339454	2·945905	·9469301	15
50	·3228164	·341077	2·931888	·9464616	10
55	·3241926	·342701	2·917990	·9459911	5
60	·3255682	·344327	2·904210	·9455186	0′
					71 Deg.
19 Deg.					
0′	·3255682	·344327	2·904210	·9455186	60
5	·3269430	·345955	2·890546	·9450441	55
10	·3283172	·347584	2·876997	·9445675	50
15	·3296906	·349215	2·863560	·9440890	45
20	·3310634	·350848	2·850234	·9436085	40
25	·3324355	·352482	2·837019	·9431260	35
30	·3338069	·354118	2·823912	·9426415	30
35	·3351775	·355756	2·810913	·9421550	25
40	·3365475	·357395	2·798019	·9416665	20
45	·3379167	·359036	2·785230	·9411760	15
50	·3392852	·360679	2·772544	·9406835	10
55	·3406531	·362324	2·759960	·9401891	5
60	·3420201	·363970	2·747477	·9396926	0′
					70 Deg.
20 Deg.					
0′	·3420201	·363970	2·747477	·9396926	60
5	·3433865	·365618	2·735093	·9391942	55
10	·3447521	·367268	2·722807	·9386938	50
15	·3461171	·368919	2·710618	·9381913	45
20	·3474812	·370572	2·698525	·9376869	40
25	·3488447	·372227	2·686526	·9371806	35
30	·3502074	·373884	2·674621	·9366722	30
35	·3515693	·375543	2·662808	·9361618	25
40	·3529306	·377203	2·651086	·9356495	20
45	·3542910	·378866	2·639454	·9351352	15
50	·3556508	·380530	2·627912	·9346189	10
55	·3570097	·382196	2·616457	·9341007	5
60	·3583679	·383864	2·605089	·9335804	0′
					69 Deg.
	Cosine.	Cotan.	Tang.	Sine.	

NATURAL SIGNS, TANGENTS, &c. *(continued)*.

	Sine.	Tang.	Cotang.	Cosine.	
21 Deg.					
0′	·3583679	·383864	2·605089	·9335804	60
5	·3597254	·385533	2·593806	·9330582	55
10	·3610821	·387205	2·582609	·9325340	50
15	·3624380	·388878	2·571495	·9320079	45
20	·3637932	·390554	2·560464	·9314797	40
25	·3651476	·392231	2·549516	·9309496	35
30	·3665012	·393910	2·538647	·9304176	30
35	·3678541	·395591	2·527859	·9298835	25
40	·3692061	·397274	2·517150	·9293475	20
45	·3705574	·398959	2·506519	·9288096	15
50	·3719079	·400646	2·495966	·9282696	10
55	·3732577	·402335	2·485488	·9277277	5
60	·3746066	·404026	2·475086	·9271839	0′
				68 Deg.	
22 Deg.					
0′	·3746066	·404026	2·475086	·9271839	60
5	·3759547	·405719	2·464759	·9266380	55
10	·3773021	·407413	2·454506	·9260902	50
15	·3786486	·409110	2·444325	·9255405	45
20	·3799944	·410809	2·434217	·9249888	40
25	·3813393	·412510	2·424180	·9244351	35
30	·3826834	·414213	2·414213	·9238795	30
35	·3840268	·415918	2·404316	·9233220	25
40	·3853693	·417625	2·394488	·9227624	20
45	·3867110	·419334	2·384729	·9222010	15
50	·3880518	·421046	2·375037	·9216375	10
55	·3893919	·422759	2·365411	·9210722	5
60	·3907311	·424474	2·355852	·9205049	0′
				67 Deg.	
23 Deg.					
0′	·3907311	·424474	2·355852	·9205049	60
5	·3920695	·426192	2·346358	·9199356	55
10	·3934071	·427912	2·336928	·9193644	50
15	·3947439	·429633	2·327563	·9187912	45
20	·3960798	·431357	2·318260	·9182161	40
25	·3974148	·433084	2·309020	·9176391	35
30	·3987491	·434812	2·299842	·9170601	30
35	·4000825	·436542	2·290725	·9164791	25
40	·4014150	·438275	2·281669	·9158963	20
45	·4027467	·440010	2·272672	·9153115	15
50	·4040775	·441747	2·263735	·9147247	10
55	·4054075	·443487	2·254857	·9141361	5
60	·4067366	·445228	2·246036	·9135455	0′
				66 Deg.	
24 Deg.					
0′	·4067366	·445228	2·246036	·9135455	60
5	·4080649	·446972	2·237273	·9129529	55
10	·4093923	·448718	2·228567	·9123584	50
15	·4107189	·450467	2·219917	·9117620	45
20	·4120445	·452217	2·211323	·9111637	40
25	·4133693	·453970	2·202784	·9105635	35
30	·4146932	·455726	2·194299	·9099613	30
35	·4160163	·457483	2·185869	·9093572	25
40	·4173385	·459243	2·177492	·9087511	20
45	·4186597	·461006	2·169167	·9081432	15
50	·4199801	·462771	2·160895	·9075333	10
55	·4212996	·464538	2·152675	·9069215	5
60	·4226183	·466307	2·144506	·9063078	0′
				65 Deg.	

	Sine.	Tang.	Cotang.	Cosine.	
25 Deg.					
0′	·4226183	·466307	2·144506	·9063078	60
5	·4239360	·468079	2·136389	·9056922	55
10	·4252528	·469853	2·128321	·9050746	50
15	·4265687	·471630	2·120303	·9044551	45
20	·4278838	·473409	2·112334	·9038338	40
25	·4291979	·475191	2·104415	·9032105	35
30	·4305111	·476975	2·096543	·9025853	30
35	·4318234	·478762	2·088720	·9019582	25
40	·4331348	·480551	2·080943	·9013292	20
45	·4344453	·482342	2·073214	·9006982	15
50	·4357548	·484136	2·065531	·9000654	10
55	·4370634	·485933	2·057895	·8994307	5
60	·4383711	·487732	2·050303	·8987940	0′
				64 Deg.	
26 Deg.					
0′	·4383711	·487732	2·050303	·8987940	60
5	·4396779	·489534	2·042757	·8981555	55
10	·4409838	·491338	2·035256	·8975151	50
15	·4422887	·493145	2·027799	·8968727	45
20	·4435927	·494954	2·020386	·8962285	40
25	·4448957	·496766	2·013016	·8955824	35
30	·4461978	·498581	2·005689	·8949344	30
35	·4474990	·500398	1·998405	·8942844	25
40	·4487992	·502218	1·991163	·8936326	20
45	·4500984	·504041	1·983963	·8929789	15
50	·4513967	·505866	1·976805	·8923234	10
55	·4526941	·507694	1·969687	·8916659	5
60	·4539905	·509525	1·962610	·8910065	0′
				63 Deg.	
27 Deg.					
0′	·4539905	·509525	1·962610	·8910065	60
5	·4552859	·511358	1·955573	·8903453	55
10	·4565804	·513195	1·948577	·8896822	50
15	·4578739	·515033	1·941620	·8890171	45
20	·4591665	·516875	1·934702	·8883503	40
25	·4604580	·518719	1·927822	·8876815	35
30	·4617486	·520567	1·920982	·8870108	30
35	·4630382	·522417	1·914179	·8863383	25
40	·4643269	·524269	1·907414	·8856639	20
45	·4656145	·526125	1·900687	·8849876	15
50	·4669012	·527983	1·893997	·8843095	10
55	·4681869	·529845	1·887343	·8836295	5
60	·4694716	·531709	1·880726	·8829476	0′
				62 Deg.	
28 Deg.					
0′	·4694716	·531709	1·880726	·8829476	60
5	·4707553	·533576	1·874145	·8822638	55
10	·4720380	·535446	1·867600	·8815782	50
15	·4733197	·537319	1·861090	·8808907	45
20	·4746004	·539195	1·854615	·8802014	40
25	·4758801	·541074	1·848176	·8795102	35
30	·4771588	·542955	1·841770	·8788171	30
35	·4784364	·544840	1·835399	·8781222	25
40	·4797131	·546728	1·829062	·8774254	20
45	·4809888	·548618	1·822759	·8767268	15
50	·4822634	·550512	1·816489	·8760263	10
55	·4835370	·552409	1·810252	·8753239	5
60	·4848096	·554309	1·804047	·8746197	0′
				61 Deg.	

Cosine.	Cotan.	Tang.	Sine.

NATURAL SINES, TANGENTS, &c. (*continued*).

	Sine.	Tang.	Cotang.	Cosine.	
29 Deg.					
0′	·4848096	·554309	1·804047	·8746197	60
5	·4860812	·556211	1·797875	·8739137	55
10	·4873517	·558117	1·791736	·8732058	50
15	·4886212	·560026	1·785628	·8724960	45
20	·4898897	·561939	1·779552	·8717844	40
25	·4911572	·563854	1·773507	·8710710	35
30	·4924236	·565772	1·767494	·8703557	30
35	·4936889	·567694	1·761511	·8696386	25
40	·4949532	·569619	1·755559	·8689196	20
45	·4962165	·571547	1·749637	·8681988	15
50	·4974787	·573478	1·743745	·8674762	10
55	·4987399	·575412	1·737883	·8667517	5
60	·5000000	·577350	1·732050	·8660254	0′
					60 Deg.
30 Deg.					
0′	·5000000	·577350	1·732050	·8660254	60
5	·5012591	·579291	1·726247	·8652973	55
10	·5025170	·581235	1·720473	·8645673	50
15	·5037740	·583182	1·714728	·8638355	45
20	·5050298	·585133	1·709011	·8631019	40
25	·5062846	·587087	1·703323	·8623664	35
30	·5075384	·589045	1·697663	·8616292	30
35	·5087910	·591005	1·692030	·8608901	25
40	·5100426	·592969	1·686426	·8601491	20
45	·5112931	·594937	1·680848	·8594064	15
50	·5125425	·596908	1·675298	·8586619	10
55	·5137908	·598882	1·669775	·8579155	5
60	·5150381	·600860	1·664279	·8571673	0′
					59 Deg.
31 Deg.					
0′	·5150381	·600860	1·664279	·8571673	60
5	·5162842	·602841	1·658809	·8564173	55
10	·5175293	·604826	1·653366	·8556655	50
15	·5187733	·606814	1·647949	·8549119	45
20	·5200161	·608806	1·642557	·8541564	40
25	·5212579	·610801	1·637191	·8533992	35
30	·5224986	·612800	1·631851	·8526402	30
35	·5237381	·614803	1·626536	·8518793	25
40	·5249766	·616809	1·621246	·8511167	20
45	·5262139	·618818	1·615982	·8503522	15
50	·5274502	·620832	1·610741	·8495860	10
55	·5286853	·622848	1·605526	·8488179	5
60	·5299193	·624860	1·600334	·8480481	0′
					58 Deg.
32 Deg.					
0′	·5299193	·624869	1·600334	·8480481	60
5	·5311521	·626893	1·595167	·8472765	55
10	·5323839	·628921	1·590023	·8465030	50
15	·5336145	·630953	1·584904	·8457278	45
20	·5348440	·632988	1·579807	·8449508	40
25	·5360724	·635027	1·574735	·8441720	35
30	·5372996	·637070	1·569685	·8433914	30
35	·5385257	·639116	1·564659	·8426091	25
40	·5397507	·641167	1·559655	·8418249	20
45	·5409745	·643221	1·554674	·8410390	15
50	·5421971	·645279	1·549715	·8402513	10
55	·5434187	·647341	1·544779	·8394618	5
60	·5446390	·649407	1·539865	·8386706	0′
					57 Deg.
	Cosine.	Cotan.	Tang.	Sine.	

	Sine.	Tang.	Cotang.	Cosine.	
33 Deg.					
0′	·5446390	·649407	1·539865	·8386706	60
5	·5458583	·651477	1·534972	·8378775	55
10	·5470763	·653551	1·530102	·8370827	50
15	·5482932	·655628	1·525253	·8362862	45
20	·5495090	·657710	1·520426	·8354878	40
25	·5507236	·659796	1·515620	·8346877	35
30	·5519370	·661885	1·510835	·8338858	30
35	·5531492	·663979	1·506071	·8330822	25
40	·5543603	·666076	1·501328	·8322768	20
45	·5555702	·668178	1·496605	·8314696	15
50	·5567790	·670284	1·491903	·8306607	10
55	·5579865	·672394	1·487222	·8298500	5
60	·5591929	·674508	1·482561	·8290376	0′
					56 Deg.
34 Deg.					
0′	·5591929	·674508	1·482561	·8290376	60
5	·5603981	·676626	1·477919	·8282234	55
10	·5616021	·678749	1·473298	·8274074	50
15	·5628049	·680875	1·468696	·8265897	45
20	·5640066	·683006	1·464114	·8257703	40
25	·5652070	·685141	1·459552	·8249491	35
30	·5664062	·687281	1·455009	·8241262	30
35	·5676043	·689424	1·450485	·8233015	25
40	·5688011	·691572	1·445980	·8224751	20
45	·5699968	·693724	1·441494	·8216469	15
50	·5711912	·695881	1·437026	·8208170	10
55	·5723844	·698042	1·432578	·8199854	5
60	·5735764	·700207	1·428148	·8191520	0′
					55 Deg.
35 Deg.					
0′	·5735764	·700207	1·428148	·8191520	60
5	·5747672	·702377	1·423736	·8183169	55
10	·5759568	·704551	1·419342	·8174801	50
15	·5771452	·706730	1·414967	·8166416	45
20	·5783323	·708913	1·410609	·8158013	40
25	·5795183	·711100	1·406270	·8149593	35
30	·5807030	·713293	1·401948	·8141155	30
35	·5818864	·715489	1·397644	·8132701	25
40	·5830687	·717691	1·393357	·8124229	20
45	·5842497	·719897	1·389087	·8115740	15
50	·5854294	·722107	1·384835	·8107234	10
55	·5866080	·724322	1·380600	·8098710	5
60	·5877853	·726542	1·376381	·8090170	0′
					54 Deg.
36 Deg.					
0′	·5877853	·726542	1·376381	·8090170	60
5	·5889613	·728767	1·372180	·8081612	55
10	·5901361	·730996	1·367995	·8073038	50
15	·5913096	·733230	1·363827	·8064446	45
20	·5924819	·735469	1·359676	·8055837	40
25	·5936530	·737712	1·355541	·8047211	35
30	·5948228	·739961	1·351422	·8038569	30
35	·5959913	·742214	1·347319	·8029909	25
40	·5971586	·744472	1·343233	·8021232	20
45	·5983246	·746735	1·339162	·8012538	15
50	·5994893	·749003	1·335107	·8003827	10
55	·6006528	·751276	1·331068	·7995100	5
60	·6018150	·753554	1·327044	·7986355	0′
					53 Deg.
	Cosine.	Cotan.	Tang.	Sine.	

NATURAL SINES, TANGENTS, &c. *(continued)*.

	Sine.	Tang.	Cotang.	Cosine.	
37 Deg.					
0′	·6018150	·753554	1·327044	·7986355	60
5	·6029760	·755836	1·323036	·7977594	55
10	·6041356	·758124	1·319044	·7968815	50
15	·6052940	·760417	1·315066	·7960020	45
20	·6064511	·762715	1·311104	·7951208	40
25	·6076069	·765018	1·307157	·7942379	35
30	·6087614	·767327	1·303225	·7933533	30
35	·6099147	·769640	1·299308	·7924671	25
40	·6110666	·771958	1·295405	·7915792	20
45	·6122173	·774282	1·291517	·7906896	15
50	·6133666	·776611	1·287644	·7897983	10
55	·6145147	·778946	1·283786	·7889054	5
60	·6156615	·781285	1·279941	·7880108	0′
					52 Deg.
38 Deg.					
0′	·6156615	·781285	1·279941	·7880108	60
5	·6168069	·783630	1·276111	·7871145	55
10	·6179511	·785980	1·272295	·7862165	50
15	·6190939	·788336	1·268494	·7853169	45
20	·6202355	·790697	1·264706	·7844157	40
25	·6213757	·793064	1·260932	·7835127	35
30	·6225146	·795435	1·257172	·7826082	30
35	·6236522	·797813	1·253426	·7817019	25
40	·6247885	·800196	1·249693	·7807940	20
45	·6259235	·802584	1·245974	·7798845	15
50	·6270571	·804979	1·242268	·7789733	10
55	·6281894	·807378	1·238576	·7780604	5
60	·6293204	·809784	1·234897	·7771460	0′
					51 Deg.
39 Deg.					
0′	·6293204	·809784	1·234897	·7771460	60
5	·6304500	·812195	1·231231	·7762298	55
10	·6315784	·814611	1·227578	·7753121	50
15	·6327053	·817034	1·223938	·7743926	45
20	·6338310	·819462	1·220312	·7734716	40
25	·6349553	·821896	1·216698	·7725489	35
30	·6360782	·824336	1·213097	·7716246	30
35	·6371998	·826782	1·209508	·7706986	25
40	·6383201	·829233	1·205932	·7697710	20
45	·6394390	·831691	1·202369	·7688418	15
50	·6405566	·834154	1·198818	·7679110	10
55	·6416728	·836624	1·195279	·7669785	5
60	·6427876	·839099	1·191753	·7660444	0′
					50 Deg.
40 Deg.					
0′	·6427876	·839099	1·191753	·7660444	60
5	·6439011	·841581	1·188239	·7651087	55
10	·6450132	·844068	1·184737	·7641714	50
15	·6461240	·846562	1·181247	·7632325	45
20	·6472334	·849062	1·177769	·7622919	40
25	·6483414	·851568	1·174303	·7613497	35
30	·6494480	·854080	1·170849	·7604060	30
35	·6505533	·856599	1·167407	·7594606	25
40	·6516572	·859124	1·163976	·7585136	20
45	·6527598	·861655	1·160557	·7575650	15
50	·6538609	·864192	1·157149	·7566148	10
55	·6549607	·866736	1·153753	·7556630	5
60	·6560590	·869286	1·150368	·7547096	0′
					49 Deg.
	Cosine.	Cotan.	Tang.	Sine.	

	Sine.	Tang.	Cotang.	Cosine.	
41 Deg.					
0′	·6560590	·869286	1·150368	·7547096	60
5	·6571560	·871843	1·146994	·7537546	55
10	·6582516	·874406	1·143632	·7527980	50
15	·6593458	·876976	1·140281	·7518398	45
20	·6604386	·879552	1·136941	·7508800	40
25	·6615300	·882135	1·133612	·7499187	35
30	·6626200	·884725	1·130294	·7489557	30
35	·6637087	·887321	1·126987	·7479912	25
40	·6647959	·889924	1·123690	·7470251	20
45	·6658817	·892534	1·120405	·7460574	15
50	·6669661	·895150	1·117130	·7450881	10
55	·6680490	·897773	1·113866	·7441173	5
60	·6691306	·900404	1·110612	·7431448	0′
					48 Deg.
42 Deg.					
0′	·6691306	·900404	1·110612	·7431448	60
5	·6702108	·903041	1·107369	·7421708	55
10	·6712895	·905685	1·104136	·7411953	50
15	·6723668	·908336	1·100914	·7402181	45
20	·6734427	·910994	1·097702	·7392394	40
25	·6745172	·913659	1·094500	·7382592	35
30	·6755902	·916331	1·091308	·7372773	30
35	·6766618	·919010	1·088126	·7362940	25
40	·6777320	·921696	1·084955	·7353090	20
45	·6788007	·924390	1·081793	·7343225	15
50	·6798681	·927091	1·078642	·7333345	10
55	·6809339	·929799	1·075500	·7323449	5
60	·6819984	·932515	1·072368	·7313537	0′
					47 Deg.
43 Deg.					
0′	·6819984	·932515	1·072368	·7313537	60
5	·6830613	·935238	1·069246	·7303610	55
10	·6841229	·937968	1·066134	·7293668	50
15	·6851830	·940706	1·063031	·7283710	45
20	·6862416	·943451	1·059938	·7273736	40
25	·6872988	·946204	1·056854	·7263748	35
30	·6883546	·948964	1·053780	·7253744	30
35	·6894089	·951732	1·050715	·7243724	25
40	·6904617	·954508	1·047659	·7233690	20
45	·6915131	·957291	1·044613	·7223640	15
50	·6925630	·960082	1·041576	·7213574	10
55	·6936114	·962881	1·038548	·7203494	5
60	·6946584	·965688	1·035530	·7193398	0′
					46 Deg.
44 Deg.					
0′	·6946584	·965688	1·035530	·7193398	60
5	·6957039	·968503	1·032520	·7183287	55
10	·6967479	·971326	1·029520	·7173161	50
15	·6977905	·974156	1·026528	·7163019	45
20	·6988315	·976995	1·023546	·7152863	40
25	·6998711	·979842	1·020572	·7142691	35
30	·7009093	·982697	1·017607	·7132504	30
35	·7019459	·985560	1·014651	·7122303	25
40	·7029811	·988431	1·011703	·7112086	20
45	·7040147	·991311	1·008764	·7101854	15
50	·7050469	·994199	1·005834	·7091607	10
55	·7060776	·997095	1·002913	·7081345	5
60	·7071068	1·00000	1·000000	·7071068	0′
					45 Deg.
	Cosine.	Cotan.	Tang.	Sine.	

SPHERICAL TRIGONOMETRY.

Spherical Trigonometry treats of triangles which are drawn (or imagined to be) on the surface of a sphere. Their sides are arcs of the great circle of the sphere, and are measured by the angle of the arc. Therefore the trigonometrical functions bear quite a different relation to the sides.

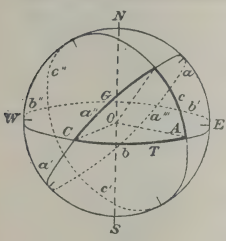


FIG. 103.

Every section of a sphere cut by a plane is a *circle*. A line drawn through the centre and at right angles to the sectional circle is called an *axis*, and the two points where the axis meets the surface of the sphere are called the *poles* of the sectional circle.

When the cutting-plane goes through the centre of the sphere, it will pass through the great circle, and is then called the *Equator* for the poles. Axis = NS. Equator = GETW.

Three great circle-planes, $a\,a'\,a''\,a'''$, $b\,b'\,b''$, and $c\,c'\,c''$, cutting a sphere, NESW, will form a solid angle at the centre O, and a triangle ABC on the surface of the sphere, in which the arcs a, b, c, are the sides. The angles formed by each two planes are congruent to each of the appertinent angles A, B, and C.

Spherical Distances.

For the spherical distances, let

l = lower latitude, in degrees from the equator.
l' = highest latitude " " "
C = course, from the latitude l to l'.
C′ = course, from the latitude l' to l.
d = shortest distance between l and l', in degrees of the great circle.
L = difference in longitude between l and l', in degrees, or time.
$\tan m = \cot l' \cos \mathrm{L}$.
$n = 90 \mp l - m$
$-\ l$, when l and l' are on one side of the equator.
$+\ l$, when l is on one side, and l' on the other. Then

$$\cos d = \frac{\sin l' \cos n}{\cos m}. \qquad \sin \mathrm{C} = \frac{\sin \mathrm{L} \cos l'}{\sin d}. \qquad \sin \mathrm{C}' = \frac{\sin \mathrm{L} \cos l}{\sin d}.$$

Formulæ for Right-angled Spherical Triangles.

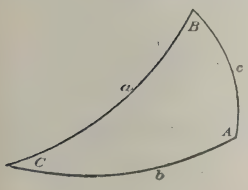


FIG. 104.

$$\sin b = \sin a \sin \mathrm{B}. \qquad \tan c = \tan a \cos \mathrm{B}.$$
$$\cot \mathrm{C} = \cos a \tan \mathrm{B}. \qquad \tan c = \sin b \tan \mathrm{C}.$$
$$\cos a = \cos b \cos c. \qquad \cos \mathrm{B} = \cos b \sin \mathrm{C}.$$
$$\tan a = \frac{\tan b}{\cos \mathrm{C}}. \qquad \sin c = \frac{\tan b}{\tan \mathrm{B}}.$$
$$\sin a = \frac{\sin b}{\sin \mathrm{B}}. \qquad \sin \mathrm{C} = \frac{\cos \mathrm{B}}{\cos b}.$$
$$\cos c = \frac{\cos a}{\cos b}. \qquad \sin \mathrm{B} = \frac{\sin b}{\sin a}.$$
$$\cos \mathrm{C} = \frac{\tan b}{\tan a}. \qquad \tan \mathrm{C} = \frac{\tan c}{\sin b}.$$

$$\tan \mathrm{B} = \frac{\tan b}{\sin c}. \qquad \cos c = \frac{\cos \mathrm{C}}{\sin \mathrm{B}}. \qquad \cos b = \frac{\cos \mathrm{B}}{\sin \mathrm{C}}. \qquad \cos a = \frac{\cot \mathrm{C}}{\tan \mathrm{B}}.$$

Formulæ for Oblique-angled Spherical Triangles.

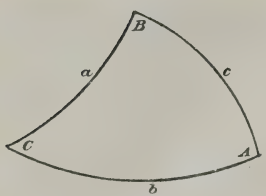


FIG. 105.

$$\sin a : \sin b = \sin A : \sin B. \qquad \sin b : \sin c = \sin B : \sin C.$$

$$\sin a = \frac{\sin b \sin A}{\sin B}. \qquad \sin b = \frac{\sin c \sin B}{\sin C}.$$

$$\tan \tfrac{1}{2}(a+b) = \tan \tfrac{1}{2}c \, \frac{\cos \tfrac{1}{2}(A-B)}{\cos \tfrac{1}{2}(A+B)}.$$

$$\tan \tfrac{1}{2}(a-b) = \tan \tfrac{1}{2}c \, \frac{\sin \tfrac{1}{2}(A-B)}{\sin \tfrac{1}{2}(A+B)}.$$

$$\tan \tfrac{1}{2}(B+C) = \cot \tfrac{1}{2}A \, \frac{\cos \tfrac{1}{2}(b-c)}{\cos \tfrac{1}{2}(b+c)}.$$

$$\tan \tfrac{1}{2}(B-C) = \cot \tfrac{1}{2}A \, \frac{\sin \tfrac{1}{2}(b-c)}{\sin \tfrac{1}{2}(b+c)}.$$

$$\cot \tfrac{1}{2}A = \tan \tfrac{1}{2}(B-C) \frac{\sin \tfrac{1}{2}(b+c)}{\sin \tfrac{1}{2}(b-c)}. \qquad \tan \tfrac{1}{2}c = \tan \tfrac{1}{2}(a-b) \frac{\sin \tfrac{1}{2}(A+B)}{\sin \tfrac{1}{2}(A-B)}.$$

$$\tan \tfrac{1}{2}(m+n) \tan \tfrac{1}{2}(m-n) = \tan \tfrac{1}{2}(a+c) \tan \tfrac{1}{2}(a-c).$$

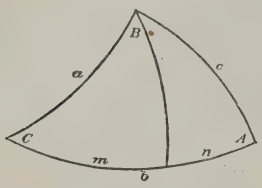


FIG. 106.

$$\tan m = \tan a \cos C. \qquad \tan C = \frac{\sin (b-m) \tan A}{\sin m}.$$

$$\cos C = \frac{\cos a \cos (b-m)}{\cos m}. \qquad \cos n = \frac{\cos c \cos m}{\cos c}.$$

$$b = m \pm n.$$

$$s = \tfrac{1}{2}(a+b+c). \qquad S = \tfrac{1}{2}(A+B+C).$$

$$\sin \tfrac{1}{2}A = \sqrt{\frac{\sin (s-c) \sin (s-b)}{\sin b \sin c}}. \qquad \sin \tfrac{1}{2}a = \sqrt{\frac{\cos S \cos (S-A)}{\sin B \sin C}}.$$

To find the Area of a Spherical Triangle.

Let Q be the area of the triangle in square degrees ; if R = radius of the sphere, the length of one degree will be

$$= \frac{2\pi R}{360}, \text{ or one square degree} = \frac{R^2}{3285{\cdot}58}.$$

$$\cot \tfrac{1}{2}Q = \frac{\cot \tfrac{1}{2}c \cot \tfrac{1}{2}a + \cos B}{\sin B}. \qquad \sin \tfrac{1}{2}Q = \frac{\sin \tfrac{1}{2}c \sin \tfrac{1}{2}a \sin B}{\cos \tfrac{1}{2}b}.$$

The sum of the three angles in a spherical triangle is greater than two right angles, and less than six right angles

SQUARES—CUBES—ROOTS—RECIPROCALS.

TABLE OF SQUARES, CUBES, SQUARE AND CUBE ROOTS, AND RECIPROCALS, OF NUMBERS FROM 1 TO 1,000.

Number.	Squares.	Cubes.	$\sqrt{\text{Roots.}}$	$\sqrt[3]{\text{Roots.}}$	Reciprocals.	Number.	Squares.	Cubes.	$\sqrt{\text{Roots.}}$	$\sqrt[3]{\text{Roots.}}$	Reciprocals.
1	1	1	1·0000000	1·0000000	1·000000000	81	6561	531441	9·0000000	4·3267487	·012345679
2	4	8	1·4142136	1·2599210	·500000000	82	6724	551368	9·0553851	4·3444815	·012195122
3	9	27	1·7320508	1·4422496	·333333333	83	6889	571787	9·1104336	4·3620707	·012048193
4	16	64	2·0000000	1·5874011	·250000000	84	7056	592704	9·1651514	4·3795191	·011904762
5	25	125	2·2360680	1·7099759	·200000000	85	7225	614125	9·2195445	4·3968296	·011764706
6	36	216	2·4494897	1·8171206	·166666666	86	7396	636056	9·2736185	4·4140049	·011627907
7	49	343	2·6457513	1·9129312	·142857143	87	7569	658503	9·3273791	4·4310476	·011494253
8	64	512	2·8284271	2·0000000	·125000000	88	7744	681472	9·3808315	4·4479692	·011363636
9	81	729	3·0000000	2·0800837	·111111111	89	7921	704969	9·4339811	4·4647451	·011235955
10	100	1000	3·1622777	2·1544347	·100000000	90	8100	729000	9·4868330	4·4814047	·011111111
11	121	1331	3·3166248	2·2239801	·090909091	91	8281	753571	9·5393920	4·4979414	·010989011
12	144	1728	3·4641016	2·2894286	·083333333	92	8464	778688	9·5916630	4·5143574	·010869565
13	169	2197	3·6055513	2·3513347	·076923077	93	8649	804357	9·6436508	4·5306549	·010752688
14	196	2744	3·7416574	2·4101422	·071428571	94	8836	830584	9·6953597	4·5468359	·010638298
15	225	3375	3·8729833	2·4662121	·066666667	95	9025	857375	9·7467943	4·5629026	·010526316
16	256	4096	4·0000000	2·5198421	·062500000	96	9216	884736	9·7979590	4·5788570	·010416667
17	289	4913	4·1231056	2·5712816	·058823529	97	9409	912673	9·8488578	4·5947009	·010309278
18	324	5832	4·2426407	2·6207414	·055555556	98	9604	941192	9·8994949	4·6104363	·010204082
19	361	6859	4·3588989	2·6684016	·052631579	99	9801	970299	9·9498744	4·6260650	·010101010
20	400	8000	4·4721360	2·7144177	·050000000	100	10000	1000000	10·0000000	4·6415888	·010000000
21	441	9261	4·5825757	2·7589243	·047619048	101	10201	1030301	10·0498756	4·6570095	·009900990
22	484	10648	4·6904158	2·8020393	·045454545	102	10404	1061208	10·0995049	4·6723287	·009803922
23	529	12167	4·7958315	2·8438670	·043478261	103	10609	1092727	10·1488916	4·6875482	·009708738
24	576	13824	4·8989795	2·8844991	·041666667	104	10816	1124864	10·1980390	4·7026694	·009615385
25	625	15625	5·0000000	2·9240177	·040000000	105	11025	1157625	10·2469508	4·7176940	·009523810
26	676	17576	5·0990195	2·9624960	·038461538	106	11236	1191016	10·2956301	4·7326235	·009433962
27	729	19683	5·1961524	3·0000000	·037037037	107	11449	1225043	10·3440804	4·7474594	·009345794
28	784	21952	5·2915026	3·0365889	·035714286	108	11664	1259712	10·3923048	4·7622032	·009259259
29	841	24389	5·3851648	3·0723168	·034482759	109	11881	1295029	10·4403065	4·7768562	·009174312
30	900	27000	5·4772256	3·1072325	·033333333	110	12100	1331000	10·4880885	4·7914199	·009090909
31	961	29791	5·5677644	3·1413806	·032258065	111	12321	1367631	10·5356538	4·8058955	·009009009
32	1024	32768	5·6568542	3·1748021	·031250000	112	12544	1404928	10·5830052	4·8202845	·008928571
33	1089	35937	5·7445626	3·2075343	·030303030	113	12769	1442897	10·6301458	4·8345881	·008849558
34	1156	39304	5·8309519	3·2396118	·029411765	114	12996	1481544	10·6770783	4·8488076	·008771930
35	1225	42875	5·9160798	3·2710663	·028571429	115	13225	1520875	10·7238053	4·8629442	·008695652
36	1296	46656	6·0000000	3·3019272	·027777778	116	13456	1560896	10·7703296	4·8769990	·008620690

37	1369	50653	6·0827625	3·3322218	·027027027	117	13689	1601613	10·8166538	4·8909732	·008547009
38	1444	54872	6·1644140	3·3619754	·026315789	118	13924	1643032	10·8627805	4·9048681	·008474576
39	1521	59319	6·2449980	3·3912114	·025641026	119	14161	1685159	10·9087121	4·9186847	·008403361
40	1600	64000	6·3245553	3·4199519	·025000000	120	14400	1728000	10·9544512	4·9324242	·008333333
41	1681	68921	6·4031242	3·4482172	·024390244	121	14641	1771561	11·0000000	4·9460874	·008264463
42	1764	74088	6·4807407	3·4760266	·023809524	122	14884	1815848	11·0453610	4·9596757	·008196721
43	1849	79507	6·5574385	3·5033981	·023255814	123	15129	1860867	11·0905365	4·9731898	·008130081
44	1936	85184	6·6332496	3·5303483	·022727273	124	15376	1906624	11·1355287	4·9866310	·008064516
45	2025	91125	6·7082039	3·5568933	·022222222	125	15625	1953125	11·1803399	5·0000000	·008000000
46	2116	97336	6·7823300	3·5830479	·021739130	126	15876	2000376	11·2249722	5·0132979	·007936508
47	2209	103823	6·8556546	3·6088261	·021276600	127	16129	2048383	11·2694277	5·0265257	·007874016
48	2304	110592	6·9282032	3·6342411	·020833333	128	16384	2097152	11·3137085	5·0396842	·007812500
49	2401	117649	7·0000000	3·6593057	·020408163	129	16641	2146689	11·3578167	5·0527743	·007751938
50	2500	125000	7·0710678	3·6840314	·020000000	130	16900	2197000	11·4017543	5·0657970	·007692308
51	2601	132651	7·1414284	3·7084298	·019607843	131	17161	2248091	11·4455231	5·0787531	·007633588
52	2704	140608	7·2111026	3·7325111	·019230769	132	17424	2299968	11·4891253	5·0916434	·007575758
53	2809	148877	7·2801099	3·7562858	·018867925	133	17689	2352637	11·5325626	5·1044687	·007518797
54	2916	157464	7·3484692	3·7797631	·018518519	134	17956	2406104	11·5758369	5·1172299	·007462687
55	3025	166375	7·4161985	3·8029525	·018181818	135	18225	2460375	11·6189500	5·1299278	·007407407
56	3136	175616	7·4833148	3·8258624	·017857143	136	18496	2515456	11·6619038	5·1425632	·007352941
57	3249	185193	7·5498344	3·8485011	·017543860	137	18769	2571353	11·7046999	5·1551367	·007299270
58	3364	195112	7·6157731	3·8708766	·017241379	138	19044	2628072	11·7473401	5·1676493	·007246377
59	3481	205379	7·6811457	3·8929965	·016949153	139	19321	2685619	11·7898261	5·1801015	·007194245
60	3600	216000	7·7459667	3·9148676	·016666667	140	19600	2744000	11·8321596	5·1924941	·007142857
61	3721	226981	7·8102497	3·9364972	·016393443	141	19881	2803221	11·8743421	5·2048279	·007092199
62	3844	238328	7·8740079	3·9578915	·016129032	142	20164	2863288	11·9163753	5·2171034	·007042254
63	3969	250047	7·9372539	3·9790571	·015873016	143	20449	2924207	11·9582607	5·2293215	·006993007
64	4096	262144	8·0000000	4·0000000	·015625000	144	20736	2985984	12·0000000	5·2414828	·006944444
65	4225	274625	8·0622577	4·0207256	·015384615	145	21025	3048625	12·0415946	5·2535879	·006896552
66	4356	287496	8·1240384	4·0412401	·015151515	146	21316	3112136	12·0830460	5·2656374	·006849315
67	4489	300763	8·1853528	4·0615480	·014925373	147	21609	3176523	12·1243557	5·2776321	·006802721
68	4624	314432	8·2462113	4·0816551	·014705882	148	21904	3241792	12·1655251	5·2895725	·006756757
69	4761	328509	8·3066239	4·1015661	·014492754	149	22201	3307949	12·2065556	5·3014592	·006711409
70	4900	343000	8·3666003	4·1212853	·014285714	150	22500	3375000	12·2474487	5·3132928	·006666667
71	5041	357911	8·4261498	4·1408178	·014084517	151	22801	3442951	12·2882057	5·3250740	·006622517
72	5184	373248	8·4852814	4·1601676	·013888889	152	23104	3511008	12·3288280	5·3368033	·006578947
73	5329	389017	8·5440037	4·1793390	·013698630	153	23409	3581577	12·3693169	5·3484812	·006535948
74	5476	405224	8·6023253	4·1983364	·013513514	154	23716	3652264	12·4096736	5·3601084	·006493506
75	5625	421875	8·6602540	4·2171633	·013333333	155	24025	3723875	12·4498996	5·3716854	·006451613
76	5776	438976	8·7177979	4·2358236	·013157895	156	24336	3796416	12·4899960	5·3832126	·006410256
77	5929	456533	8·7749644	4·2543210	·012987013	157	24649	3869893	12·5299641	5·3946907	·006369427
78	6084	474552	8·8317609	4·2726586	·012820513	158	24964	3944312	12·5698051	5·4061202	·006329114
79	6241	493039	8·8881944	4·2908404	·012658228	159	25281	4019679	12·6095202	5·4175015	·006289308
80	6400	512000	8·9442719	4·3088695	·012500000	160	25600	4096000	12·6491106	5·4288352	·006250000

TABLE OF SQUARES, CUBES, SQUARE AND CUBE ROOTS, AND RECIPROCALS (*continued*).

Number.	Squares.	Cubes.	$\sqrt{\text{Roots.}}$	$\sqrt[3]{\text{Roots.}}$	Reciprocals.	Number.	Squares.	Cubes.	$\sqrt{\text{Roots.}}$	$\sqrt[3]{\text{Roots.}}$	Reciprocals.
161	25921	4173281	12·6885775	5·4401218	·006211180	245	60025	14706125	15·6524758	6·2573248	·004081633
162	26244	4251528	12·7279221	5·4513618	·006172840	246	60516	14886936	15·6843871	6·2658266	·004065041
163	26569	4330747	12·7671453	5·4625556	·006134969	247	61009	15069223	15·7162336	6·2743054	·004048583
164	26896	4410944	12·8062485	5·4737037	·006097561	248	61504	15252992	15·7480157	6·2827613	·004032258
165	27225	4492125	12·8452326	5·4848066	·006060606	249	62001	15438249	15·7797338	6·2911946	·004016064
166	27556	4574296	12·8840987	5·4958647	·006024096	250	62500	15625000	15·8113883	6·2996053	·004000000
167	27889	4657463	12·9228480	5·5068784	·005988024	251	63001	15813251	15·8429795	6·3079935	·003984064
168	28224	4741632	12·9614814	5·5178484	·005952381	252	63504	16003008	15·8745079	6·3163596	·003968254
169	28561	4826809	13·0000000	5·5287748	·005917160	253	64009	16194277	15·9059737	6·3247035	·003952569
170	28900	4913000	13·0384048	5·5396583	·005882353	254	64516	16387064	15·9373775	6·3330256	·003937008
171	29241	5000211	13·0766968	5·5504991	·005847953	255	65025	16581375	15·9687194	6·3413257	·003921569
172	29584	5088448	13·1148770	5·5612978	·005813953	256	65536	16777216	16·0000000	6·3496042	·003906250
173	29929	5177717	13·1529464	5·5720546	·005780347	257	66049	16974593	16·0312195	6·3578611	·003891051
174	30276	5268024	13·1909060	5·5827702	·005747126	258	66564	17173512	16·0623784	6·3660968	·003875969
175	30625	5359375	13·2287566	5·5934447	·005714286	259	67081	17373979	16·0934769	6·3743111	·003861004
176	30976	5451776	13·2664992	5·6040787	·005681818	260	67600	17576000	16·1245155	6·3825043	·003846154
177	31329	5545233	13·3041347	5·6146724	·005649718	261	68121	17779581	16·1554944	6·3906765	·003831418
178	31684	5639752	13·3416641	5·6252263	·005617978	262	68644	17984728	16·1864141	6·3988279	·003816794
179	32041	5735339	13·3790882	5·6357408	·005586592	263	69169	18191447	16·2172747	6·4069585	·003802281
180	32400	5832000	13·4164079	5·6462162	·005555556	264	69696	18399744	16·2480768	6·4150687	·003787879
181	32761	5929741	13·4536240	5·6566528	·005524862	265	70225	18609625	16·2788206	6·4231583	·003773585
182	33124	6028568	13·4907376	5·6670511	·005494505	266	70756	18821096	16·3095064	6·4312276	·003759398
183	33489	6128487	13·5277493	5·6774114	·005464481	267	71289	19034163	16·3401346	6·4392767	·003745318
184	33856	6229504	13·5646600	5·6877340	·005434783	268	71824	19248832	16·3707055	6·4473057	·003731343
185	34225	6331625	13·6014705	5·6980192	·005405405	269	72361	19465109	16·4012195	6·4553148	·003717472
186	34596	6434856	13·6381817	5·7082675	·005376344	270	72900	19683000	16·4316767	6·4633041	·003703704
187	34969	6539203	13·6747943	5·7184791	·005347594	271	73441	19902511	16·4620776	6·4712736	·003690037
188	35344	6644672	13·7113092	5·7286543	·005319149	272	73984	20123648	16·4924225	6·4792236	·003676471
189	35721	6751269	13·7477271	5·7387936	·005291005	273	74529	20346417	16·5227116	6·4871541	·003663004
190	36100	6859000	13·7840488	5·7488971	·005263158	274	75076	20570824	16·5529454	6·4950653	·003649635
191	36481	6967871	13·8202750	5·7589652	·005235602	275	75625	20796875	16·5831240	6·5029572	·003636364
192	36864	7077888	13·8564065	5·7689982	·005208333	276	76176	21024576	16·6132477	6·5108300	·003623188
193	37249	7189057	13·8924440	5·7789966	·005181347	277	76729	21253933	16·6433170	6·5186839	·003610108
194	37636	7301384	13·9283883	5·7889604	·005154639	278	77284	21484952	16·6733320	6·5265189	·003597122
195	38025	7414875	13·9642400	5·7988900	·005128205	279	77841	21717639	16·7032931	6·5343351	·003584229
196	38416	7529536	14·0000000	5·8087857	·005102041	280	78400	21952000	16·7332005	6·5421326	·003571429
197	38809	7645373	14·0356688	5·8186479	·005076142	281	78961	22188041	16·7630546	6·5499116	·003558719
198	39204	7762392	14·0712473	5·8284867	·005050505	282	79524	22425768	16·7928556	6·5576722	·003546099
199	39601	7880599	14·1067360	5·8382725	·005025126	283	80089	22665187	16·8226038	6·5654144	·003533569
200	40000	8000000	14·1421356	5·8480355	·005000000	284	80656	22906304	16·8522995	6·5731385	·003521127

201	40401	8120601	14·1774469	5·8577660	·004975124	285	81225	23149125	16·8819430	6·5808443	·003508772
202	40804	8242408	14·2126704	5·8674673	·004950495	286	81796	23393656	16·9115345	6·5885323	·003496503
203	41209	8365427	14·2478068	5·8771307	·004926108	287	82369	23639903	16·9410743	6·5962023	·003484321
204	41616	8489664	14·2828569	5·8867653	·004901961	288	82944	23887872	16·9705627	6·6038545	·003472222
205	42025	8615125	14·3178211	5·8963685	·004878049	289	83521	24137569	17·0000000	6·6114890	·003460208
206	42436	8741816	14·3527001	5·9059406	·004854369	290	84100	24389000	17·0293864	6·6191060	·003448276
207	42849	8869743	14·3874946	5·9154817	·004830918	291	84681	24642171	17·0587221	6·6267054	·003436426
208	43264	8998912	14·4222051	5·9249921	·004807692	292	85264	24897088	17·0880075	6·6342874	·003424658
209	43681	9129329	14·4568323	5·9344721	·004784689	293	85849	25153757	17·1172428	6·6418522	·003412969
210	44100	9261000	14·4913767	5·9439220	·004761905	294	86436	25412184	17·1464282	6·6493998	·003401361
211	44521	9393931	14·5258390	5·9533418	·004739336	295	87025	25672375	17·1755640	6·6569302	·003389831
212	44944	9528128	14·5602198	5·9627320	·004716981	296	87616	25934336	17·2046505	6·6644437	·003378378
213	45369	9663597	14·5945195	5·9720926	·004694836	297	88209	26198073	17·2336879	6·6719403	·003367003
214	45796	9800344	14·6287388	5·9814240	·004672897	298	88804	26463592	17·2626765	6·6794200	·003355705
215	46225	9938375	14·6628783	5·9907264	·004651163	299	89401	26730899	17·2916165	6·6868831	·003344482
216	46656	10077696	14·6969385	6·0000000	·004629630	300	90000	27000000	17·3205081	6·6943295	·003333333
217	47089	10218313	14·7309199	6·0092450	·004608295	301	90601	27270901	17·3493516	6·7017593	·003322259
218	47524	10360232	14·7648231	6·0184617	·004587156	302	91204	27543608	17·3781472	6·7091729	·003311258
219	47961	10503459	14·7986486	6·0276502	·004566210	303	91809	27818127	17·4068952	6·7165700	·003301330
220	48400	10648000	14·8323970	6·0368107	·004545455	304	92416	28094464	17·4355958	6·7239508	·003289474
221	48841	10793861	14·8660687	6·0459435	·004524887	305	93025	28372625	17·4642492	6·7313155	·003278689
222	49284	10941048	14·8996644	6·0550489	·004504505	306	93636	28652616	17·4928557	6·7386641	·003267974
223	49729	11089567	14·9331845	6·0641270	·004484305	307	94249	28934443	17·5214155	6·7459967	·003257329
224	50176	11239424	14·9666295	6·0731779	·004464286	308	94864	29218112	17·5499288	6·7533134	·003246753
225	50625	11390625	15·0000000	6·0822020	·004444444	309	95481	29503629	17·5783958	6·7606143	·003236246
226	51076	11543176	15·0332964	6·0911994	·004424779	310	96100	29791000	17·6068169	6·7678995	·003225806
227	51529	11697083	15·0665192	6·1001702	·004405286	311	96721	30080231	17·6351921	6·7751690	·003215434
228	51984	11852352	15·0996689	6·1091147	·004385965	312	97344	30371328	17·6635217	6·7824229	·003205128
229	52441	12008989	15·1327460	6·1180332	·004366812	313	97969	30664297	17·6918060	6·7896613	·003194888
230	52900	12167000	15·1657509	6·1269257	·004347826	314	98596	30959144	17·7200451	6·7968844	·003184713
231	53361	12326391	15·1986842	6·1357924	·004329004	315	99225	31255875	17·7482393	6·8040921	·003174603
232	53824	12487168	15·2315462	6·1446337	·004310345	316	99856	31554496	17·7763888	6·8112847	·003164557
233	54289	12649337	15·2643375	6·1534495	·004291845	317	100489	31855013	17·8044938	6·8184620	·003154574
234	54756	12812904	15·2970585	6·1622401	·004273504	318	101124	32157432	17·8325545	6·8256242	·003144654
235	55225	12977875	15·3297097	6·1710058	·004255319	319	101761	32461759	17·8605711	6·8327714	·003134796
236	55696	13144256	15·3622915	6·1797466	·004237288	320	102400	32768000	17·8885438	6·8399037	·003125000
237	56169	13312053	15·3948043	6·1884628	·004219409	321	103041	33076161	17·9164729	6·8470213	·003115265
238	56644	13481272	15·4272486	6·1971544	·004201681	322	103684	33386248	17·9443584	6·8541240	·003105590
239	57121	13651919	15·4596248	6·2058218	·004184100	323	104329	33698267	17·9722008	6·8612120	·003095975
240	57600	13824000	15·4919334	6·2144650	·004166667	324	104976	34012224	18·0000000	6·8682855	·003086420
241	58081	13997521	15·5241747	6·2230843	·004149378	325	105625	34328125	18·0277564	6·8753433	·003076923
242	58564	14172488	15·5563492	6·2316797	·004132231	326	106276	34645976	18·0554701	6·8823888	·003067485
243	59049	14348907	15·5884573	6·2402515	·004115226	327	106929	34965783	18·0831413	6·8894188	·003048104
244	59536	14526784	15·6204994	6·2487998	·004098361	328	107584	35287552	18·1107703	6·8964345	·003048780

TABLE OF SQUARES, CUBES, SQUARE AND CUBE ROOTS, AND RECIPROCALS (*continued*).

Number.	Squares.	Cubes.	$\sqrt{\text{Roots.}}$	$\sqrt[3]{\text{Roots.}}$	Reciprocals.	Number.	Squares.	Cubes.	$\sqrt{\text{Roots.}}$	$\sqrt[3]{\text{Roots.}}$	Reciprocals.
329	108241	35611289	18·1383571	6·9034359	·003039514	413	170569	70444997	20·3224014	7·4470343	·002421308
330	108900	35937000	18·1659021	6·9104232	·003030303	414	171396	70957944	20·3469899	7·4530399	·00241546 9
331	109561	36264691	18·1934054	6·9173964	·003021148	415	172225	71473375	20·3715488	7·4590359	·002409639
332	110224	36594368	18·2208672	6·9243556	·003012048	416	173056	71991296	20·3960781	7·4650223	·002406846
333	110889	36926037	18·2482876	6·9313008	·003003003	417	173889	72511713	20·4205779	7·4709991	·002398082
334	111556	37259704	18·2756669	6·9382321	·002994012	418	174724	73034632	20·4450483	7·4769664	·002392344
335	112225	37595375	18·3030052	6·9451496	·002985075	419	175561	73560059	20·4694895	7·4829242	·002386635
336	112896	37933056	18·3303028	6·9520533	·002976190	420	176400	74088000	20·4939015	7·4888724	·002380952
337	113569	38272753	18·3575598	6·9589434	·002967359	421	177241	74618461	20·5182845	7·4948113	·002375297
338	114244	38614472	18·3847763	6·9658198	·002958580	422	178084	75151448	20·5426386	7·5007406	·002369668
339	114921	38958219	18·4119526	6·9726826	·002949853	423	178929	75686967	20·5669638	7·5066607	·002364066
340	115600	39304000	18·4390889	6·9795321	·002941176	424	179776	76225024	20·5912603	7·5125715	·002358491
341	116281	39651821	18·4661853	6·9863681	·002932551	425	180625	76765625	20·6155281	7·5184730	·002352941
342	116964	40001688	18·4932420	6·9931906	·002923977	426	181476	77308776	20·6397674	7·5243652	·002347418
343	117649	40353607	18·5202592	7·0000000	·002915452	427	182329	77854483	20·6639783	7·5302482	·002341920
344	118336	40707584	18·5472370	7·0067962	·002906977	428	183184	78402752	20·6881609	7·5361221	·002336449
345	119025	41063625	18·5741756	7·0135791	·002898551	429	184041	78953589	20·7123152	7·5419867	·002331002
346	119716	41421736	18·6010752	7·0203490	·002890173	430	184900	79507000	20·7364414	7·5478423	·002325581
347	120409	41781923	18·6279360	7·0271058	·002881844	431	185761	80062991	20·7605395	7·5536888	·002320186
348	121104	42144192	18·6547581	7·0338497	·002873563	432	186624	80621568	20·7846097	7·5595263	·002314815
349	121801	42508549	18·6815417	7·0405806	·002865330	433	187489	81182737	20·8086520	7·5653548	·002309469
350	122500	42875000	18·7082869	7·0472987	·002857143	434	188356	81746504	20·8326667	7·5711743	·002304147
351	123201	43243551	18·7349940	7·0540041	·002849003	435	189225	82312875	20·8566536	7·5769849	·002298851
352	123904	43614208	18·7616630	7·0606967	·002840909	436	190096	82881856	20·8806130	7·5827865	·002293578
353	124609	43986977	18·7882942	7·0673767	·002832861	437	190969	83453453	20·9045450	7·5885793	·002288330
354	125316	44361864	18·8148877	7·0740440	·002824859	438	191844	84027672	20·9284495	7·5943633	·002283105
355	126025	44738875	18·8414437	7·0806988	·002816901	439	192721	84604519	20·9523268	7·6001385	·002277904
356	126736	45118016	18·8679623	7·0873411	·002808989	440	193600	85184000	20·9761770	7·6059049	·002272727
357	127449	45499293	18·8944436	7·0939709	·002801120	441	194481	85766121	21·0000000	7·6116626	·002267574
358	128164	45882712	18·9208879	7·1005885	·002793296	442	195364	86350888	21·0237960	7·6174116	·002262443
359	128881	46268279	18·9472953	7·1071937	·002785515	443	196249	86938307	21·0475652	7·6231519	·002257336
360	129600	46656000	18·9736660	7·1137866	·002777778	444	197136	87528384	21·0713075	7·6288837	·002252252
361	130321	47045881	19·0000000	7·1203674	·002770082	445	198025	88121125	21·0950231	7·6346067	·002247191
362	131044	47437928	19·0262976	7·1269360	·002762431	446	198916	88716536	21·1187121	7·6403213	·002242152
363	131769	47832147	19·0525589	7·1334925	·002754821	447	199809	89314623	21·1423745	7·6460272	·002237136
364	132496	48228544	19·0787840	7·1400370	·002747253	448	200704	89915392	21·1660105	7·6517247	·002232143
365	133225	48627125	19·1049732	7·1465695	·002739726	449	201601	90518849	21·1896201	7·6574138	·002227171
366	133956	49027896	19·1311265	7·1530901	·002732240	450	202500	91125000	21·2132034	7·6630943	·002222222
367	134689	49430863	19·1572441	7·1595988	·002724796	451	203401	91733851	21·2367606	7·6687665	·002217295
368	135424	49836032	19·1833261	7·1660957	·002717391	452	204304	92345408	21·2602916	7·6744303	·002212389

369	136161	50243409	19·2003727	7·1725809	·002710027	453	205209	92959677	21·2837967	7·6800857	·002207506
370	136900	50653000	19·2353841	7·1790544	·002702703	454	206116	93576664	21·3072758	7·6857328	·002202643
371	137641	51064811	19·2613608	7·1855162	·002695418	455	207025	94196375	21·3307290	7·6913717	·002197802
372	138384	51478848	19·2873015	7·1919663	·002688172	456	207936	94818816	21·3541565	7·6970023	·002192982
373	139129	51895117	19·3132079	7·1984050	·002680965	457	208849	95443993	21·3775583	7·7026246	·002188184
374	139876	52313624	19·3390796	7·2048322	·002673797	458	209764	96071912	21·4009346	7·7082388	·002183406
375	140625	52734375	19·3649167	7·2112479	·002666667	459	210681	96702579	21·4242853	7·7138448	·002178649
376	141376	53157376	19·3907194	7·2176522	·002659574	460	211600	97336000	21·4476106	7·7194426	·002173913
377	142129	53582633	19·4164878	7·2240450	·002652520	461	212521	97972181	21·4709106	7·7250325	·002169197
378	142884	54010152	19·4422221	7·2304268	·002645503	462	213444	98611128	21·4941853	7·7306141	·002164502
379	143641	54439939	19·4679223	7·2367972	·002638521	463	214369	99252847	21·5174348	7·7361877	·002159827
380	144400	54872000	19·4935887	7·2431565	·002631579	464	215296	99897344	21·54[illegible]6592	7·7417532	·002155172
381	145161	55306341	19·5192213	7·2495045	·002624672	465	216225	100544625	21·5638587	7·7473109	·002150538
382	145924	55742968	19·5448203	7·2558415	·002617801	466	217156	101194696	21·5870331	7·7528606	·002145923
383	146689	56181887	19·5703858	7·2621675	·002610966	467	218089	101847563	21·6101828	7·7584023	·002141328
384	147456	56623104	19·5959179	7·2684824	·002604167	468	219024	102503232	21·6333077	7·7639361	·002136752
385	148225	57066625	19·6214169	7·2747864	·002597403	469	219961	103161709	21·6564078	7·7694620	·002132196
386	148996	57512456	19·6468827	7·2810794	·002590674	470	220900	103823000	21·6794834	7·7749801	·002127660
387	149769	57960603	19·6723156	7·2873617	·002583979	471	221841	104487111	21·7025344	7·7804904	·002123142
388	150544	58411072	19·6977156	7·2936330	·002577320	472	222784	105154048	21·7255610	7·7859928	·002118644
389	151321	58863869	19·7230829	7·2998936	·002570694	473	223729	105828817	21·7485632	7·7914875	·002114165
390	152100	59319000	19·7484177	7·3061436	·002564103	474	224676	106496424	21·7715411	7·7969745	·002109705
391	152881	59776471	19·7737199	7·3123828	·002557545	475	225625	107171875	21·7944947	7·8024538	·002105263
392	153664	60236288	19·7989899	7·3186114	·002551020	476	226576	107850176	21·8174242	7·8079254	·002100840
393	154449	60698457	19·8242276	7·3248295	·002544529	477	227529	108531333	21·8403297	7·8133892	·002096486
394	155236	61162984	19·8494332	7·3310369	·002538071	478	228484	109215352	21·8632111	7·8188456	·002092050
395	156025	61629875	19·8746069	7·3372339	·002531646	479	229441	109902239	21·8860686	7·8242942	·002087683
396	156816	62099136	19·8997487	7·3434205	·002525253	480	230400	110592000	21·9089023	7·8297353	·002083333
397	157609	62570773	19·9248588	7·3495966	·002518892	481	231361	111284641	21·9317122	7·8351688	·002079002
398	158404	63044792	19·9499373	7·3557624	·002512563	482	232324	111980168	21·9544984	7·8405949	·002074689
399	159201	63521199	19·9749844	7·3619178	·002506266	483	233289	112678587	21·9772610	7·8460134	·002070393
400	160000	64000000	20·0000000	7·3680630	·002500000	484	234256	113379904	22·0000000	7·8514244	·002066116
401	160801	64481201	20·0249844	7·3741979	·002493766	485	235225	114084125	22·0227155	7·8568281	·002061856
402	161604	64964808	20·0499377	7·3803227	·002487562	486	236196	114791256	22·0454077	7·8622242	·002057613
403	162409	65450827	20·0748599	7·3864373	·002481390	487	237169	115501303	22·0680765	7·8676130	·002053388
404	163216	65939264	20·0997512	7·3925418	·002475248	488	238144	116214272	22·0907220	7·8729944	·002049180
405	164025	66430125	20·1246118	7·3986363	·002469136	489	239121	116930169	22·1133444	7·8783684	·002044990
406	164836	66923416	20·1494417	7·4047206	·002463054	490	240100	117649000	22·1359436	7·8837352	·002040816
407	165649	67419143	20·1742410	7·4107950	·002457002	491	241081	118370771	22·1585198	7·8890946	·002036660
408	166464	67917312	20·1990099	7·4168595	·002450980	492	242064	119095488	22·1810730	7·8944468	·002032520
409	167281	68417929	20·2237484	7·4229142	·002444988	493	243049	119823157	22·2036033	7·8997917	·002028398
410	168100	68921000	20·2484567	7·4289589	·002439024	494	244036	120553784	22·2261108	7·9051294	·002024291
411	168921	69426531	20·2731349	7·4349938	·002433090	495	245025	121287375	22·2485955	7·9104599	·002020202
412	169744	69934528	20·2977831	7·4410189	·002427184	496	246016	122023936	22·2710575	7·9157832	·002016129

TABLE OF SQUARES, CUBES, SQUARE AND CUBE ROOTS, AND RECIPROCALS (*continued*).

Number.	Squares.	Cubes.	$\sqrt{\text{Roots.}}$	$\sqrt[3]{\text{Roots.}}$	Reciprocals.	Number.	Squares.	Cubes.	$\sqrt{\text{Roots.}}$	$\sqrt[3]{\text{Roots.}}$	Reciprocals.
497	247009	122763473	22·2934968	7·9210994	·002012072	581	337561	196122941	24·1039416	8·3443410	·001721170
498	248004	123505992	22·3159136	7·9264085	·002008032	582	338724	197137368	24·1246762	8·3491256	·001718213
499	249001	124251499	22·3383079	7·9317104	·002004008	583	339889	198155287	24·1453929	8·3539047	·001715266
500	250000	125000000	22·3606798	7·9370053	·002000000	584	341056	199176704	24·1660919	8·3586784	·001712329
501	251001	125751501	22·3830293	7·9422931	·001996008	585	342225	200201625	24·1867732	8·3634466	·001709402
502	252004	126506008	22·4053565	7·9475739	·001992032	586	343396	201230056	24·2074369	8·3682095	·001706485
503	253009	127263527	22·4276615	7·9528477	·001988072	587	344569	202262003	24·2280829	8·3729668	·001703578
504	254016	128024064	22·4499443	7·9581144	·001984127	588	345744	203297472	24·2487113	8·3777188	·001700680
505	255025	128787625	22·4722051	7·9633743	·001980198	589	346921	204336469	24·2693222	8·3824653	·001697793
506	256036	129554216	22·4944438	7·9686271	·001976285	590	348100	205379000	24·2899156	8·3872065	·001694915
507	257049	130323843	22·5166605	7·9738731	·001972387	591	349281	206425071	24·3104916	8·3919428	·001692047
508	258064	131096512	22·5388553	7·9791122	·001968504	592	350464	207474688	24·3310501	8·3966729	·001689189
509	259081	131872229	22·5610283	7·9843444	·001964637	593	351649	208527857	24·3515913	8·4013981	·001686341
510	260100	132651000	22·5831796	7·9895697	·001960784	594	352836	209584584	24·3721152	8·4061180	·001683502
511	261121	133432831	22·6053091	7·9947883	·001956947	595	354025	210644875	24·3926218	8·4108326	·001680672
512	262144	134217728	22·6274170	8·0000000	·001953125	596	355216	211708736	24·4131112	8·4155419	·001677852
513	263169	135005697	22·6495033	8·0052049	·001949318	597	356409	212776173	24·4335834	8·4202460	·001675042
514	264196	135796744	22·6715681	8·0104032	·001945525	598	357604	213847192	24·4540385	8·4249448	·001672241
515	265225	136590875	22·6936114	8·0155946	·001941748	599	358801	214921799	24·4744765	8·4296383	·001669449
516	266256	137388096	22·7156334	8·0207794	·001937984	600	360000	216000000	24·4948974	8·4343267	·001666667
517	267289	138188413	22·7376341	8·0259574	·001934236	601	361201	217081801	24·5153013	8·4390098	·001663894
518	268324	138991832	22·7596134	8·0311287	·001930502	602	362404	218167208	24·5356883	8·4436877	·001661130
519	269361	139798359	22·7815715	8·0362935	·001926782	603	363609	219256227	24·5560583	8·4483605	·001658375
520	270400	140608000	22·8035085	8·0414515	·001923077	604	364816	220348864	24·5764115	8·4530281	·001655629
521	271411	141420761	22·8254244	8·0466030	·001919386	605	366025	221445125	24·5967478	8·4576906	·001652893
522	272484	142236648	22·8473193	8·0517479	·001915709	606	367236	222545016	24·6170673	8·4623479	·001650165
523	273529	143056667	22·8691933	8·0568862	·001912046	607	368449	223648543	24·6373700	8·4670001	·001647446
524	274576	143877824	22·8910463	8·0620180	·001908397	608	369664	224755712	24·6576560	8·4716471	·001644737
525	275625	144703125	22·9128785	8·0671432	·001904762	609	370881	225866529	24·6779254	8·4762892	·001642036
526	276676	145531576	22·9346899	8·0722620	·001901141	610	372100	226981000	24·6981781	8·4809261	·001639344
527	277729	146363183	22·9564806	8·0773743	·001897533	611	373321	228099131	24·7184142	8·4855579	·001636661
528	278784	147197952	22·9782506	8·0824800	·001893939	612	374544	229220928	24·7386338	8·4901848	·001633987
529	279841	148035889	23·0000000	8·0875794	·001890359	613	375769	230346397	24·7588368	8·4948065	·001631321
530	280900	148877000	23·0217289	8·0926723	·001886792	614	376996	231475544	24·7790234	8·4991233	·001628664
531	281961	149721291	23·0434372	8·0977589	·001883239	615	378225	232608375	24·7991935	8·5040350	·001626016
532	283024	150568768	23·0651252	8·1028390	·001879699	616	379456	233744896	24·8193473	8·5086417	·001623377
533	284089	151419437	23·0867928	8·1079128	·001876173	617	380689	234885113	24·8394847	8·5132435	·001620746
534	285156	152273304	23·1084400	8·1129803	·001872659	618	381924	236029032	24·8596058	8·5178403	·001618123
535	286225	153130375	23·1300670	8·1180414	·001869159	619	383161	237176659	24·8797106	8·5224331	·001615509
536	287296	153990656	23·1516738	8·1230962	·001865672	620	384400	238328000	24·8997992	8·5270189	·001612903

537	288369	154854153	23·1732605	8·1281447	·001862197
538	289444	155720872	23·1948270	8·1331870	·001858736
539	290521	156590819	23·2163735	8·1382230	·001855288
540	291600	157464000	23·2379001	8·1432529	·001851852
541	292681	158340421	23·2594067	8·1482765	·001848429
542	293764	159220088	23·2808935	8·1532939	·001845018
543	294849	160103007	23·3023604	8·1583051	·001841621
544	295936	160989184	23·3238076	8·1633102	·001838235
545	297025	161878625	23·3452351	8·1683092	·001834862
546	298116	162771336	23·3666429	8·1733020	·001831502
547	299209	163667323	23·3880311	8·1782888	·001828154
548	300304	164566592	23·4093998	8·1832695	·001824818
549	301401	165469149	23·4307490	8·1882441	·001821494
550	302500	166375000	23·4520788	8·1932127	·001818182
551	303601	167284151	23·4733892	8·1981753	·001814882
552	304704	168196608	23·4946802	8·2031319	·001811594
553	305809	169112377	23·5159520	8·2080825	·001808318
554	306916	170031464	23·5372046	8·2130271	·001805054
555	308025	170953875	23·5584380	8·2179657	·001801802
556	309136	171879616	23·5796522	8·2228985	·001798561
557	310249	172808693	23·6008474	8·2278254	·001795332
558	311364	173741112	23·6220236	8·2327463	·001792115
559	312481	174676879	23·6431808	8·2376614	·001788909
560	313600	175616000	23·6643191	8·2425706	·001785714
561	314721	176558481	23·6854386	8·2474740	·001782531
562	315844	177504328	23·7065392	8·2523715	·001779359
563	316969	178453547	23·7276210	8·2572635	·001776199
564	318096	179406144	23·7486842	8·2621492	·001773050
565	319225	180362125	23·7697286	8·2670294	·001769912
566	320356	181321496	23·7907545	8·2719039	·001766784
567	321489	182284263	23·8117618	8·2767726	·001763668
568	322624	183250432	23·8327506	8·2816355	·001760563
569	323761	184220009	23·8537209	8·2864928	·001757469
570	324900	185193000	23·8746728	8·2913444	·001754386
571	326041	186169411	23·8956063	8·2961903	·001751313
572	327184	187149248	23·9165215	8·3010304	·001748252
573	328329	188132517	23·9374184	8·3058651	·001745201
574	329476	189119224	23·9582971	8·3106941	·001742160
575	330625	190109375	23·9791576	8·3155175	·001739130
576	331776	191102976	24·0000000	8·3203353	·001736111
577	332929	192100033	24·0208243	8·3251475	·001733102
578	334084	193100552	24·0416306	8·3299542	·001730104
579	335241	194104539	24·0624188	8·3347553	·001727116
580	336400	195112000	24·0831891	8·3395509	·001724138
621	385641	239483061	24·9198716	8·5316009	·001610306
622	386884	240641848	24·9399278	8·5361780	·001607717
623	388129	241804367	24·9599679	8·5407501	·001605136
624	389376	242970624	24·9799920	8·5453173	·001602564
625	390625	244140625	25·0000000	8·5498797	·001600000
626	391876	245314376	25·0199920	8·5544372	·001597444
627	393129	246491883	25·0399681	8·5589899	·001594896
628	394384	247673152	25·0599282	8·5635377	·001592357
629	395641	248858189	25·0798724	8·5680807	·001589825
630	396900	250047000	25·0998008	8·5726189	·001587302
631	398161	251239591	25·1197134	8·5771523	·001584786
632	399424	252435968	25·1396102	8·5816809	·001582278
633	400689	253636137	25·1594913	8·5862047	·001579779
634	401956	254840104	25·1793566	8·5907238	·001577287
635	403225	256047875	25·1992063	8·5952380	·001574803
636	404496	257259456	25·2190404	8·5997476	·001572327
637	405769	258474853	25·2388589	8·6042525	·001569859
638	407044	259694072	25·2586619	8·6087526	·001567398
639	408321	260917119	25·2784493	8·6132480	·001564945
640	409600	262144000	25·2982213	8·6177388	·001562500
641	410881	263374721	25·3179778	8·6222248	·001560062
642	412164	264609288	25·3377189	8·6267063	·001557632
643	413449	265847707	25·3574447	8·6311830	·001555210
644	414736	267089984	25·3771551	8·6356551	·001552795
645	416025	268336125	25·3968502	8·6401226	·001550388
646	417316	269585136	25·4165302	8·6445855	·001547988
647	418609	270840023	25·4361947	8·6490437	·001545595
648	419904	272097792	25·4558441	8·6534974	·001543210
649	421201	273359449	25·4754784	8·6579465	·001540832
650	422500	274625000	25·4950976	8·6623911	·001538462
651	423801	275894451	25·5147016	8·6668310	·001536098
652	425104	277167808	25·5342907	8·6712665	·001533742
653	426409	278445077	25·5538647	8·6756974	·001531394
654	427716	279726264	25·5734237	8·6801237	·001529052
655	429025	281011375	25·5929678	8·6845456	·001526718
656	430336	282300416	25·6124969	8·6889630	·001524390
657	431649	283593393	25·6320112	8·6933759	·001522070
658	432964	284890312	25·6515107	8·6977843	·001519751
659	434281	286191179	25·6709953	8·7021882	·001517451
660	435600	287496000	25·6904652	8·7065877	·001515152
661	436921	288804781	25·7099203	8·7109827	·001512859
662	438244	290117528	25·7293607	8·7153734	·001510574
663	439569	291434247	25·7487864	8·7197596	·001508296
664	440896	292754944	25·7681975	8·7241414	·001506024

TABLE OF SQUARES, CUBES, SQUARE AND CUBE ROOTS, AND RECIPROCALS (*continued*).

Number.	Squares.	Cubes.	√Roots.	∛Roots.	Reciprocals.	Number.	Squares.	Cubes.	√Roots.	∛Roots.	Reciprocals.
665	442225	294079625	25·7875939	8·7285187	·001503759	749	561001	420189749	27·3678644	9·0815631	·001335113
666	443556	295408296	25·8069758	8·7328918	·001501502	750	562500	421875000	27·3861279	9·0856030	·001333333
667	444889	296740963	25·8263431	8·7372604	·001499250	751	564001	423564751	27·4043792	9·0896392	·001331558
668	446224	298077632	25·8456960	8·7416246	·001497006	752	565504	425259008	27·4226184	9·0936719	·001329787
669	447561	299418309	25·8650343	8·7459846	·001494768	753	567009	426957777	27·4408455	9·0977010	·001328021
670	448900	300763000	25·8843582	8·7503401	·001492537	754	568516	428661064	27·4590604	9·1017265	·001326260
671	450241	302111711	25·9036677	8·7546913	·001490313	755	570025	430368875	27·4772633	9·1057485	·001324503
672	451584	303464448	25·9229628	8·7590383	·001488095	756	571536	432081216	27·4954542	9·1097669	·001322751
673	452929	304821217	25·9422435	8·7633809	·001485884	757	573049	433798093	27·5136330	9·1137818	·001321004
674	454276	306182024	25·9615100	8·7677192	·001483680	758	574564	435519512	27·5317998	9·1177931	·001319261
675	455625	307546875	25·9807621	8·7720532	·001481481	759	576081	437245479	27·5499546	9·1218010	·001317523
676	456976	308915776	26·0000000	8·7763830	·001479290	760	577600	438976000	27·5680975	9·1258053	·001315789
677	458329	310288733	26·0192237	8·7807084	·001477105	761	579121	440711081	27·5862284	9·1298061	·001314060
678	459684	311665752	26·0384331	8·7850296	·001474926	762	580644	442450728	27·6043475	9·1338034	·001312336
679	461041	313046839	26·0576284	8·7893466	·001472754	763	582169	444194947	27·6224546	9·1377971	·001310616
680	462400	314432000	26·0768096	8·7936593	·001470588	764	583696	445943744	27·6405499	9·1417874	·001308901
681	463761	315821241	26·0959767	8·7979679	·001468429	765	585225	447697125	27·6586334	9·1457742	·001307190
682	465124	317214568	26·1151297	8·8022721	·001466276	766	586756	449455096	27·6767050	9·1497576	·001305483
683	466489	318611987	26·1342687	8·8065722	·001464129	767	588289	451217663	27·6947648	9·1537375	·001303781
684	467856	320013504	26·1533937	8·8108681	·001461988	768	589824	452984832	27·7128129	9·1577139	·001302083
685	469225	321419125	26·1725047	8·8151598	·001459854	769	591361	454756609	27·7308492	9·1616869	·001300390
686	470596	322828856	26·1916017	8·8194474	·001457726	770	592900	456533000	27·7488739	9·1656565	·001298701
687	471969	324242703	26·2106848	8·8237307	·001455604	771	594441	458314011	27·7668868	9·1696225	·001297017
688	473344	325660672	26·2297541	8·8280099	·001453488	772	595984	460099648	27·7848880	9·1735852	·001295337
689	474721	327082769	26·2488095	8·8322850	·001451379	773	597529	461889917	27·8028775	9·1775445	·001293661
690	476100	328509000	26·2678511	8·8365559	·001449275	774	599076	463684824	27·8208555	9·1815003	·001291990
691	477481	329939371	26·2868789	8·8408227	·001447178	775	600625	465484375	27·8388218	9·1854527	·001290323
692	478864	331373888	26·3058929	8·8450854	·001445087	776	602176	467288576	27·8567766	9·1894018	·001288660
693	480249	332812557	26·3248932	8·8493440	·001443001	777	603729	469097433	27·8747197	9·1933474	·001287001
694	481636	334255384	26·3438797	8·8535985	·001440922	778	605284	470910952	27·8926514	9·1972897	·001285347
695	483025	335702375	26·3628527	8·8578489	·001438849	779	606841	472729139	27·9105715	9·2012286	·001283697
696	484416	337153536	26·3818119	8·8620952	·001436782	780	608400	474552000	27·9284801	9·2051641	·001282051
697	485809	338608873	26·4007576	8·8663375	·001434720	781	609961	476379541	27·9463772	9·2090962	·001280410
698	487204	340068392	26·4196896	8·8705757	·001432665	782	611524	478211768	27·9642629	9·2130250	·001278772
699	488601	341532099	26·4386081	8·8748099	·001430615	783	613089	480048687	27·9821372	9·2169505	·001277139
700	490000	343000000	26·4575131	8·8790400	·001428571	784	614656	481890304	28·0000000	9·2208726	·001275510
701	491401	344472101	26·4764046	8·8832661	·001426534	785	616225	483736625	28·0178515	9·2247914	·001273885
702	492804	345948108	26·4952826	8·8874882	·001424501	786	617796	485587656	28·0356915	9·2287068	·001272265
703	494209	347428927	26·5141472	8·8917063	·001422475	787	619369	487443403	28·0535203	9·2326189	·001270648
704	495616	348913664	26·5329983	8·8959204	·001420455	788	620944	489303872	28·0713377	9·2365277	·001269036

705	497025	350402625	26·5518361	8·9001304	·001418440
706	498436	351895816	26·5706605	8·9043366	·001416431
707	499849	353393243	26·5894716	8·9085387	·001414427
708	501264	354894912	26·6082694	8·9127369	·001412429
709	502681	356400829	26·6270539	8·9169311	·001410437
710	504100	357911000	26·6458252	8·9211214	·001408451
711	505521	359425431	26·6645833	8·9253078	·001406470
712	506944	360944128	26·6833281	8·9294902	·001404494
713	508369	362467097	26·7020598	8·9336687	·001402525
714	509796	363994344	26·7207784	8·9378433	·001400560
715	511225	365525875	26·7394839	8·9420140	·001398601
716	512656	367061696	26·7581763	8·9461809	·001396648
717	514089	368601813	26·7768557	8·9503438	·001394700
718	515524	370146232	26·7955220	8·9545029	·001392758
719	516961	371694959	26·8141754	8·9586581	·001390821
720	518400	373248000	26·8328157	8·9628095	·001388889
721	519841	374805361	26·8514432	8·9669570	·001386963
722	521284	376367048	26·8700577	8·9711007	·001385042
723	522729	377933067	26·8886593	8·9752406	·001383126
724	524176	379503424	26·9072481	8·9793766	·001381215
725	525625	381078125	26·9258240	8·9835089	·001379310
726	527076	382657176	26·9443872	8·9876373	·001377410
727	528529	384240583	26·9629375	8·9917620	·001375516
728	529984	385828352	26·9814751	8·9958829	·001373626
729	531441	387420489	27·0000000	9·0000000	·001371742
730	532900	389017000	27·0185122	9·0041134	·001369863
731	534361	390617891	27·0370117	9·0082229	·001367989
732	535824	392223168	27·0554985	9·0123288	·001366120
733	537289	393832837	27·0739727	9·0164309	·001364256
734	538756	395446904	27·0924344	9·0205293	·001362398
735	540225	397065375	27·1108834	9·0246239	·001360544
736	541696	398688256	27·1293199	9·0287149	·001358696
737	543169	400315553	27·1477439	9·0328021	·001356852
738	544644	401947272	27·1661554	9·0368857	·001355014
739	546121	403583419	27·1845544	9·0409655	·001353180
740	547600	405224000	27·2029140	9·0450419	·001351351
741	549081	406869021	27·2213152	9·0491142	·001349528
742	550564	408518488	27·2396769	9·0531831	·001347709
743	552049	410172407	27·2580263	9·0572482	·001345895
744	553536	411830784	27·2763634	9·0613093	·001344086
745	555025	413493625	27·2946881	9·0653677	·001342282
746	556516	415160936	27·3130006	9·0694220	·001340483
747	558009	416832723	27·3313007	9·0734726	·001338688
748	559504	418508992	27·3495887	9·0775197	·001336898
749	561001	420189749	27·3678644	9·0815632	·001335113
750	562500	421875000	27·3861279	9·0856032	·001333333
751	564001	423564751	27·4043792	9·0896396	·001331558
752	565504	425259008	27·4226184	9·0936725	·001329787
753	567009	426957777	27·4408455	9·0977019	·001328021
754	568516	428661064	27·4590604	9·1017278	·001326260
755	570025	430368875	27·4772633	9·1057503	·001324503
756	571536	432081216	27·4954542	9·1097693	·001322751
757	573049	433798093	27·5136330	9·1137849	·001321004
758	574564	435519512	27·5317998	9·1177970	·001319261
759	576081	437245479	27·5499546	9·1218057	·001317523
760	577600	438976000	27·5680975	9·1258110	·001315789
761	579121	440711081	27·5862284	9·1298129	·001314060
762	580644	442450728	27·6043475	9·1338114	·001312336
763	582169	444194947	27·6224546	9·1378065	·001310616
764	583696	445943744	27·6405499	9·1417982	·001308901
765	585225	447697125	27·6586334	9·1457865	·001307190
766	586756	449455096	27·6767050	9·1497715	·001305483
767	588289	451217663	27·6947648	9·1537531	·001303781
768	589824	452984832	27·7128129	9·1577313	·001302083
769	591361	454756609	27·7308492	9·1617062	·001300390
770	592900	456533000	27·7488739	9·1656778	·001298701
771	594441	458314011	27·7668868	9·1696460	·001297017
772	595984	460099648	27·7848880	9·1736109	·001295337
773	597529	461889917	27·8028776	9·1775725	·001293661
774	599076	463684824	27·8208555	9·1815308	·001291990
775	600625	465484375	27·8388218	9·1854858	·001290323
776	602176	467288576	27·8567765	9·1894375	·001288660
777	603729	469097433	27·8747197	9·1933860	·001287001
778	605284	470910952	27·8926514	9·1973312	·001285347
779	606841	472729139	27·9105715	9·2012731	·001283697
780	608400	474552000	27·9284801	9·2052119	·001282051
781	609961	476379541	27·9463772	9·2091474	·001280410
782	611524	478211768	27·9642629	9·2130797	·001278772
783	613089	480048687	27·9821372	9·2170088	·001277139
784	614656	481890304	28·0000000	9·2209346	·001275510
785	616225	483736625	28·0178515	9·2248572	·001273885
786	617796	485587656	28·0356915	9·2287767	·001272265
787	619369	487443403	28·0535203	9·2326929	·001270648
788	620944	489303872	28·0713377	9·2366060	·001269036
789	622521	491169069	28·0891438	9·2404333	·001267427
790	624100	493039000	28·1069386	9·2443355	·001265823
791	625681	494913671	28·1247222	9·2482344	·001264223
792	627264	496793088	28·1424946	9·2521300	·001262626
793	628849	498677257	28·1602557	9·2560224	·001261034
794	630436	500566184	28·1780056	9·2599114	·001259446
795	632025	502459875	28·1957444	9·2637973	·001257862
796	633616	504358336	28·2134720	9·2676798	·001256281
797	635209	506261573	28·2311884	9·2715592	·001254705
798	636804	508169592	28·2488938	9·2754352	·001253133
799	638401	510082399	28·2665881	9·2793081	·001251564
800	640000	512000000	28·2842712	9·2831777	·001250000
801	641601	513922401	28·3019434	9·2870444	·001248439
802	643204	515849608	28·3196045	9·2909072	·001246883
803	644809	517781627	28·3372546	9·2947671	·001245330
804	646416	519718464	28·3548938	9·2986239	·001243781
805	648025	521660125	28·3725219	9·3024775	·001242236
806	649636	523606616	28·3901391	9·3063278	·001240695
807	651249	525557943	28·4077454	9·3101750	·001239157
808	652864	527514112	28·4253408	9·3140190	·001237624
809	654481	529475129	28·4429253	9·3178599	·001236094
810	656100	531441000	28·4604989	9·3216975	·001234568
811	657721	533411731	28·4780617	9·3255320	·001233046
812	659344	535387328	28·4956137	9·3293634	·001231527
813	660969	537367797	28·5131549	9·3331916	·001230012
814	662596	539353144	28·5306852	9·3370167	·001228501
815	664225	541343375	28·5482048	9·3408386	·001226994
816	665856	543338496	28·5657137	9·3446575	·001225499
817	667489	545338513	28·5832119	9·3484731	·001223990
818	669124	547343432	28·6006993	9·3522857	·001222494
819	670761	549353259	28·6181760	9·3560952	·001221001
820	672400	551368000	28·6356421	9·3599016	·001219512
821	674041	553387661	28·6530976	9·3637049	·001218027
822	675684	555412248	28·6705424	9·3675051	·001216545
823	677329	557441767	28·6879766	9·3713022	·001215067
824	678976	559476224	28·7054002	9·3750963	·001213592
825	680625	561515625	28·7228132	9·3788873	·001212121
826	682276	563559976	28·7402157	9·3826752	·001210654
827	683929	565609283	28·7576077	9·3864600	·001209190
828	685584	567663552	28·7749891	9·3902419	·001207729
829	687241	569722789	28·7923601	9·3940206	·001206273
830	688900	571787000	28·8097206	9·3977964	·001204819
831	690561	573856191	28·8270706	9·4015691	·001203369
832	692224	575930368	28·8444102	9·4053387	·001201923

TABLE OF SQUARES, CUBES, SQUARE AND CUBE ROOTS, AND RECIPROCALS (*continued*).

Number.	Squares.	Cubes.	$\sqrt{\text{Roots.}}$	$\sqrt[3]{\text{Roots.}}$	Reciprocals.	Number.	Squares.	Cubes.	$\sqrt{\text{Roots.}}$	$\sqrt[3]{\text{Roots.}}$	Reciprocals.
833	693889	578009537	28·8617394	9·4091054	·001200480	917	840889	771095213	30·2820079	9 7153051	·001090513
834	695556	580093704	28·8790582	9·4128690	·001199041	918	842724	773620632	30·2985148	9·7188354	·001089325
835	697225	582182875	28·8963666	9·4166297	·001197605	919	844561	776151559	30·3150128	9·7223631	·001088139
836	698896	584277056	28·9136646	9·4203873	·001196172	920	846400	778688000	30·3315018	9·7258883	·001086957
837	700569	586376253	28·9309523	9·4241420	·001194743	921	848241	781229961	30·3479818	9·7294109	·001085776
838	702244	588480472	28·9482297	9·4278936	·001193317	922	850084	783777448	30·3644529	9·7329309	·001084599
839	703921	590589719	28·9654967	9·4316423	·001191895	923	851929	786330467	30·3809151	9·7364484	·001083423
840	705600	592704000	28·9827535	9·4353880	·001190476	924	853776	788889024	30·3973683	9·7399634	·001082251
841	707281	594823321	29·0000000	9·4391307	·001189061	925	855625	791453125	30·4138127	9·7434758	·001081081
842	708964	596947688	29·0172363	9·4428704	·001187648	926	857476	794022776	30·4302481	9·7469857	·001079914
843	710649	599077107	29·0344623	9·4466072	·001186240	927	859329	796597983	30·4466747	9·7504930	·001078749
844	712336	601211584	29·0516781	9·4503410	·001184834	928	861184	799178752	30·4630924	9·7539979	·001077586
845	714025	603351125	29·0688837	9·4540719	·001183432	929	863041	801765089	30·4795013	9·7575002	·001076426
846	715716	605495736	29·0860791	9·4577999	·001182033	930	864900	804357000	30·4959014	9·7610001	·001075269
847	717409	607645423	29·1032644	9·4615249	·001180638	931	866761	806954491	30·5122926	9·7644974	·001074114
848	719104	609800192	29·1204396	9·4652470	·001179245	932	868624	809557568	30·5286750	9·7679922	·001072961
849	720801	611960049	29·1376046	9·4689661	·001177856	933	870489	812166237	30·5450487	9·7714845	·001071811
850	722500	614125000	29·1547595	9·4726824	·001176471	934	872356	814780504	30·5614136	9·7749743	·001070664
851	724201	616295051	29·1719043	9·4763957	·001175088	935	874225	817400375	30·5777697	9·7784616	·001069519
852	725904	618470208	29·1890390	9·4801061	·001173709	936	876096	820025856	30·5941171	9·7819466	·001068376
853	727609	620650477	29·2061637	9·4838136	·001172333	937	877969	822656953	30·6104557	9·7854288	·001067236
854	729316	622835864	29·2232784	9·4875182	·001170960	938	879844	825293672	30·6267857	9·7889087	·001066098
855	731025	625026375	29·2403830	9·4912200	·001169591	939	881721	827936019	30·6431069	9·7923861	·001064963
856	732736	627222016	29·2574777	9·4949188	·001168224	940	883600	830584000	30·6594194	9·7958611	·001063830
857	734449	629422793	29·2745623	9·4986147	·001166861	941	885481	833237621	30·6757233	9·7993336	·001062699
858	736164	631628712	29·2916370	9·5023078	·001165501	942	887364	835896888	30·6920185	9·8028036	·001061571
859	737881	633839779	29·3087018	9·5059980	·001164144	943	889249	838561807	30·7083051	9·8062711	·001060445
860	739600	636056000	29·3257566	9·5096854	·001162791	944	891136	841232384	30·7245830	9·8097362	·001059322
861	741321	638277381	29·3428015	9·5133699	·001161440	945	893025	843908625	30·7408523	9·8131989	·001058201
862	743044	640503928	29·3598365	9·5170515	·001160093	946	894916	846590536	30·7571130	9·8166591	·001057082
863	744769	642735647	29·3768616	9·5207303	·001158749	947	896809	849278123	30·7733651	9·8201169	·001055966
864	746496	644972544	29·3938769	9·5244063	·001157407	948	898704	851971392	30·7896086	9·8235723	·001054852
865	748225	647214625	29·4108823	9·5280794	·001156069	949	900601	854670349	30·8058436	9·8270252	·001053741
866	749956	649461896	29·4278779	9·5317497	·001154734	950	902500	857375000	30·8220700	9·8304757	·001052632
867	751689	651714363	29·4448637	9·5354172	·001153403	951	904401	860085351	30·8382879	9·8339238	·001051525
868	753424	653972032	29·4618397	9·5390818	·001152074	952	906304	862801408	30·8544972	9·8373695	·001050420
869	755161	656234909	29·4788059	9·5427437	·001150748	953	908209	865523177	30·8706981	9·8408127	·001049318
870	756900	658503000	29·4957624	9·5464027	·001149425	954	910116	868250664	30·8868904	9·8442536	·001048218
871	758641	660776311	29·5127091	9·5500589	·001148106	955	912025	870983875	30·9030743	9·8476920	·001047120
872	760384	663054848	29·5296461	9·5537123	·001146789	956	913936	873722816	30·9192497	9·8511280	·001046025

873	762129	665338617	29·5465734	9·5573630	·001145475	957	915849	876467493	30·9354166	9·8545617	·001044932
874	763876	667627624	29·5634910	9·5610108	·001144165	958	917764	879217912	30·9515751	9·8579929	·001043841
875	765625	669921875	29·5803989	9·5646559	·001142857	959	919681	881974079	30·9677251	9·8614218	·001042753
876	767376	672221376	29·5972972	9·5682982	·001141553	960	921600	884736000	30·9838668	9·8648483	·001041667
877	769129	674526133	29·6141858	9·5719377	·001140251	961	923521	887503681	31·0000000	9·8682724	·001040583
878	770884	676836152	29·6310648	9·5755745	·001138952	962	925444	890277128	31·0161248	9·8716941	·001039501
879	772641	679151439	29·6479342	9·5792085	·001137656	963	927369	893056347	31·0322413	9·8751135	·001038422
880	774400	681472000	29·6647939	9·5828397	·001136364	964	929296	895841344	31·0483494	9·8785305	·001037344
881	776161	683797841	29·6816442	9·5864682	·001135074	965	931225	898632125	31·0644491	9·8819451	·001036269
882	777924	686128968	29·6984848	9·5900937	·001133787	966	933156	901428696	31·0805405	9·8853574	·001035197
883	779689	688465387	29·7153159	9·5937169	·001132503	967	935089	904231063	31·0966236	9·8887673	·001034126
884	781456	690807104	29·7321375	9·5973373	·001131222	968	937024	907039232	31·1126984	9·8921749	·001033058
885	783225	693154125	29·7489496	9·6009548	·001129944	969	938961	909853209	31·1287648	9·8955801	·001031992
886	784996	695506456	29·7657521	9·6045696	·001128668	970	940900	912673000	31·1448230	9·8989830	·001030928
887	786769	697864103	29·7825452	9·6081817	·001127396	971	942841	915498611	31·1608729	9·9023835	·001029866
888	788544	700227072	29·7993289	9·6117911	·001126126	972	944784	918330048	31·1769145	9·9057817	·001028807
889	790321	702595369	29·8161030	9·6153977	·001124859	973	946729	921167317	31·1929479	9·9091776	·001027749
890	792100	704969000	29·8328678	9·6190017	·001123596	974	948676	924010424	31·2089731	9·9125712	·001026694
891	793881	707347971	29·8496231	9·6226030	·001122334	975	950625	926859375	31·2249900	9·9159624	·001025641
892	795664	709732288	29·8663690	9·6262016	·001121076	976	952576	929714176	31·2409987	9·9193513	·001024590
893	797449	712121957	29·8831056	9·6297975	·001119821	977	954529	932574833	31·2569992	9·9227379	·001023541
894	799236	714516984	29·8998328	9·6333907	·001118568	978	956484	935441352	31·2729915	9·9261222	·001022495
895	801025	716917375	29·9165506	9·6369812	·001117818	979	958441	938313739	31·2889757	9·9295042	·001021450
896	802816	719323136	29·9332591	9·6405690	·001116071	980	960400	941192000	31·3049517	9·9328839	·001020408
897	804609	721734273	29·9499583	9·6441542	·001114827	981	962361	944076141	31·3209195	9·9362613	·001019168
898	806404	724150792	29·9666481	9·6477367	·001113586	982	964324	946966168	31·3368792	9·9396363	·001018330
899	808201	726572699	29·9833287	9·6513166	·001112347	983	966289	949862087	31·3528308	9·9430092	·001017294
900	810000	729000000	30·0000000	9·6548938	·001111111	984	968256	952763904	31·3687743	9·9463797	·001016260
901	811801	731432701	30·0166621	9·6584684	·001109878	985	970225	955671625	31·3847097	9·9497479	·001015228
902	813604	733870808	30·0333148	9·6620403	·001108647	986	972196	958585256	31·4006369	9·9531138	·001014199
903	815409	736314327	30·0499584	9·6656096	·001107420	987	974169	961504803	31·4165561	9·9564775	·001013171
904	817216	738763264	30·0665928	9·6691762	·001106195	988	976144	964430272	31·4324673	9·9598389	·001012146
905	819025	741217625	30·0832179	9·6727403	·001104972	989	978121	967361669	31·4483704	9·9631981	·001011122
906	820836	743677416	30·0998339	9·6763017	·001103753	990	980100	970299000	31·4642654	9·9665549	·001010101
907	822649	746142643	30·1164407	9·6798604	·001102536	991	982081	973242271	31·4801525	9·9699095	·001009082
908	824464	748613312	30·1330383	9·6834166	·001101322	992	984064	976191488	31·4960315	9·9732619	·001008065
909	826281	751089429	30·1496269	9·6869701	·001100110	993	986049	979146657	31·5119025	9·9766120	·001007049
910	828100	753571000	30·1662063	9·6905211	·001098901	994	988036	982107784	31·5277655	9·9799599	·001006036
911	829921	756058031	30·1827765	9·6940694	·001097695	995	990025	985074875	31·5436206	9·9833055	·001005025
912	831744	758550528	30·1993377	9·6976151	·001096491	996	992016	988047936	31·5594677	9·9866488	·001004016
913	833569	761048497	30·2158899	9·7011583	·001095290	997	994009	991026973	31·5753068	9·9899900	·001003009
914	835396	763551944	30·2324329	9·7046989	·001094092	998	996004	994011992	31·5911380	9·9933289	·001002004
915	837225	766060875	30·2489669	9·7082369	·001092896	999	998001	997002999	31·6069613	9·9966656	·001001001
916	839056	768575296	30·2654919	9·7117723	·001091703	1000	1000000	1000000000	31·6227766	10·0000000	·001000000

TABLE OF FOURTH POWERS.

Numbers.	Fourth Powers.	Numbers.	Fourth Powers.	Numbers.	Fourth Powers.	Numbers.	Fourth Powers.
1·00	1	9·00	6561	17·00	83521	24·75	375232·8164
1·25	2·4414	9·25	7320·9414	17·25	88543·4414	25·00	390625
1.50	5·0625	9·50	8145·0625	17·50	93789·0625	25·25	406485·9414
1·75	9·3789	9·75	9036·8789	17·75	99264·3789	25·50	422825·0625
2·00	16	10·00	10000	18·00	104976	25·75	439651·8789
2·25	25·6289	10·25	11038·1289	18·25	110930·6289	26·00	456976
2·5	39·0625	10·50	12155·0625	18·50	117135·0625	26·25	474807·1289
2·75	57·1914	10·75	13354·6914	18·75	123596·1914	26·50	493155·0625
3·00	81	11·00	14641	19·00	130321	26·75	512029·6914
3·25	111·5664	11·25	16018·0664	19·25	137316·5664	27·00	531441
3·50	150·0625	11·50	17490·0625	19·50	144590·0625	27·25	551399·0664
3·75	197·7539	11·75	19061·2539	19·75	152148·7539	27·50	571914·0625
4·00	256	12·00	20736	20·00	160000	27·75	592996·2539
4·25	326·2539	12·25	22518·7539	20·25	168151·2539	28·00	614656
4·50	410·0625	12·50	24414·0625	20·50	176610·0625	28·25	636903·7539
4·75	509·0064	12·75	26426·5664	20·75	185384·0664	28·50	659750·0625
5·00	625	13·00	28561	21·00	194481	28·75	683205·5664
5·25	759·6914	13·25	30822·1914	21·25	203908·6914	29·00	707281
5·50	915·0625	13·50	33215·0625	21·50	213675·0625	29·25	731987·1914
5·75	1093·1289	13·75	35744·6289	21·75	223788·1289	29·50	757335·0625
6·00	1296	14·00	38416	22·00	234256	29·75	783335·6289
6·25	1525·8789	14·25	41234·3789	22·25	245086·8789	30·00	810000
6·50	1785·0625	14·50	44205·0625	22·50	256289·0625	30·25	837339·3789
6·75	2075·9414	14·75	47333·4414	22·75	267870·9414	30·50	865365·0625
7·00	2401	15·00	50625	23·00	279841	30·75	894088·4414
7·25	2762·8164	15·25	54085·3164	23·25	292207·8164	31·00	923521
7·50	3164·0625	15·50	57720·0625	23·50	304980·0625	31·25	953674·3164
7·75	3607·5039	15·75	61535·0039	23·75	318166·5039	31·50	984560·0625
8·00	4096	16·00	65536	24·00	331776	31·75	1016190·0039
8·25	4632·5039	16·25	69729·0039	24·25	345817·5039	32·00	1048576
8·50	5220·0625	16·50	74120·0625	24·50	360300·0625	32·25	1081730·0039
8·75	5861·8164	16·75	78715·3164				

LOGARITHMS.

COMMON LOGARITHMS OF NUMBERS, FROM 1 TO 9,999.

No.	0	1	2	3	4	5	6	7	8	9	
0	—	000000	301030	477121	602060	698970	778151	845098	903090	954243	
1	000000	041393	079181	113943	146128	176091	204120	230449	255273	278754	
2	301030	322219	342423	361728	380211	397940	414973	431364	447158	462398	
3	477121	491362	505150	518514	531479	544068	556303	568202	579784	591065	
4	602060	612784	623249	633468	643453	653213	662758	672098	681241	690196	
5	698970	707570	716003	724276	732394	740363	748188	755875	763428	770852	
6	778151	785330	792392	799341	806180	812913	819544	826075	832509	838849	
7	845098	851258	857332	863323	869232	875061	880814	886491	892095	897627	
8	903090	908485	913814	919078	924279	929419	934498	939519	944483	949390	
9	954243	959041	963788	968483	973128	977724	982271	986772	991226	995635	

No.	0	1	2	3	4	5	6	7	8	9	D.
100	000000	000434	000868	001301	001734	002166	002598	003029	003461	003891	432
101	004321	004751	005181	005609	006038	006466	006894	007321	007748	008174	428
102	008600	009026	009451	009876	010300	010724	011147	011570	011993	012415	424
103	012837	013259	013680	014100	014521	014940	015360	015779	016197	016616	419
104	017033	017451	017868	018284	018700	019116	019532	019947	020361	020775	415
105	021189	021603	022016	022428	022841	023252	023664	024075	024486	024896	411
106	025306	025715	026125	026533	026942	027350	027757	028164	028571	028978	408
107	029384	029789	030195	030600	031004	031408	031812	032216	032619	033021	404

COMMON LOGARITHMS OF NUMBERS (*continued*).

No.	0	1	2	3	4	5	6	7	8	9	D.
108	033424	033826	034227	034628	035029	035430	035830	036230	036629	037028	400
109	037426	037825	038223	038620	039017	039414	039811	040207	040602	040998	396
110	041393	041787	042182	042576	042969	043362	043755	044148	044540	044932	393
111	045323	045714	046105	046495	046885	047275	047664	048053	048442	048830	389
112	049218	049606	049993	050380	050766	051153	051538	051924	052309	052694	386
113	053078	053463	053846	054230	054613	054996	055378	055760	056142	056524	383
114	056905	057286	057666	058046	058426	058805	059185	059563	059942	060320	379
115	060698	061075	061452	061829	062206	062582	062958	063333	063709	064083	376
116	064458	064832	065206	065580	065953	066326	066699	067071	067443	067815	373
117	068186	068557	068928	069298	069668	070038	070407	070776	071145	071514	369
118	071882	072250	072617	072985	073352	073718	074085	074451	074816	075182	366
119	075547	075912	076276	076640	077004	077368	077731	078094	078457	078819	363
120	079181	079543	079904	080266	080626	080987	081347	081707	082067	082426	360
121	082785	083144	083503	083861	084219	084576	084934	085291	085647	086004	357
122	086360	086716	087071	087426	087781	088136	088490	088845	089198	089552	354
123	089905	090258	090611	090963	091315	091667	092018	092370	092721	093071	351
124	093422	093772	094122	094471	094820	095169	095518	095866	096215	096562	349
125	096910	097257	097604	097951	098298	098644	098990	099335	099681	100026	346
126	100371	100715	101059	101403	101747	102091	102434	102777	103119	103462	343
127	103804	104146	104487	104828	105169	105510	105851	106191	106531	106871	340
128	107210	107549	107888	108227	108565	108903	109241	109579	109916	110253	338
129	110590	110926	111263	111599	111934	112270	112605	112940	113275	113609	335
130	113943	114277	114611	114944	115278	115611	115943	116276	116608	116940	332
131	117271	117603	117934	118265	118595	118926	119256	119586	119915	120245	330
132	120574	120903	121231	121560	121888	122216	122544	122871	123198	123525	327
133	123852	124178	124504	124830	125156	125481	125806	126131	126456	126781	325
134	127105	127429	127753	128076	128399	128722	129045	129368	129690	130012	322
135	130334	130655	130977	131298	131619	131939	132260	132580	132900	133219	320
136	133539	133858	134177	134496	134814	135133	135451	135769	136086	136403	318
137	136721	137037	137354	137671	137987	138303	138618	138934	139249	139564	316
138	139879	140194	140508	140822	141136	141450	141763	142076	142389	142702	313
139	143015	143327	143639	143951	144263	144574	144885	145196	145507	145818	311
140	146128	146438	146748	147058	147367	147676	147985	148294	148603	148911	309
141	149219	149527	149835	150142	150449	150756	151063	151370	151676	151982	308
142	152288	152594	152900	153205	153510	153815	154120	154424	154728	155032	304
143	155336	155640	155943	156246	156549	156852	157154	157457	157759	158061	302
144	158362	158664	158965	159266	159567	159868	160168	160469	160769	161068	300
145	161368	161667	161967	162266	162564	162863	163161	163460	163758	164055	298
146	164353	164650	164947	165244	165541	165838	166134	166430	166726	167022	296
147	167317	167613	167908	168203	168497	168792	169086	169380	169674	169968	294
148	170262	170555	170848	171141	171434	171726	172019	172311	172603	172895	292
149	173186	173478	173769	174060	174351	174641	174932	175222	175512	175802	290
150	176091	176381	176670	176959	177248	177536	177825	178113	178401	178689	288
151	178977	179264	179552	179839	180126	180413	180699	180986	181272	181558	286
152	181844	182129	182415	182700	182985	183270	183555	183839	184123	184407	284
153	184691	184975	185259	185542	185825	186108	186391	186674	186956	187239	282
154	187521	187803	188084	188366	188647	188928	189209	189490	189771	190051	281
155	190332	190612	190892	191171	191451	191730	192010	192289	192567	192846	279
156	193125	193403	193681	193959	194237	194514	194792	195069	195346	195623	277
157	195900	196176	196453	196729	197005	197281	197556	197832	198107	198382	275
158	198657	198932	199206	199481	199755	200029	200303	200577	200850	201124	274
159	201397	201670	201943	202216	202488	202761	203033	203305	203577	203848	272
160	204120	204391	204663	204934	205204	205475	205746	206016	206286	206556	270
161	206826	207096	207365	207634	207904	208173	208441	208710	208979	209247	269
162	209515	209783	210051	210319	210586	210853	211121	211388	211654	211921	267
163	212188	212454	212720	212986	213252	213518	213783	214049	214314	214579	266
164	214844	215109	215373	215638	215902	216166	216430	216694	216957	217221	264
165	217484	217747	218010	218273	218536	218798	219060	219323	219585	219846	262
166	220108	220370	220631	220892	221153	221414	221675	221936	222196	222456	260
167	222716	222976	223236	223496	223755	224015	224274	224533	224792	225051	259

COMMON LOGARITHMS OF NUMBERS *(continued)*.

No.	0	1	2	3	4	5	6	7	8	9	D.
168	225309	225568	225826	226084	226342	226600	226858	227115	227372	227630	257
169	227887	228144	228400	228657	228913	229170	229426	229682	229938	230193	256
170	230449	230704	230960	231215	231470	231724	231979	232234	232488	232742	254
171	232996	233250	233504	233757	234011	234264	234517	234770	235023	235276	253
172	235528	235781	236033	236285	236537	236789	237041	237292	237544	237795	251
173	238046	238297	238548	238799	239049	239299	239550	239800	240050	240300	250
174	240549	240799	241048	241297	241546	241795	242044	242293	242541	242790	249
175	243038	243286	243534	243782	244030	244277	244525	244772	245019	245266	247
176	245513	245759	246006	246252	246499	246745	246991	247237	247482	247728	246
177	247973	248219	248464	248709	248954	249198	249443	249687	249932	250176	244
178	250420	250664	250908	251151	251395	251638	251881	252125	252368	252610	243
179	252853	253096	253338	253580	253822	254064	254306	254548	254790	255031	242
180	255273	255514	255755	255996	256237	256477	256718	256958	257198	257439	240
181	257679	257918	258158	258398	258637	258877	259116	259355	259594	259833	239
182	260071	260310	260548	260787	261025	261263	261501	261739	261976	262214	238
183	262451	262688	262925	263162	263399	263636	263873	264109	264346	264582	236
184	264818	265054	265290	265525	265761	265996	266232	266467	266702	266937	235
185	267172	267406	267641	267875	268110	268344	268578	268812	269046	269279	234
186	269513	269746	269980	270213	270446	270679	270912	271144	271377	271609	233
187	271842	272074	272306	272538	272770	273001	273233	273464	273696	273927	232
188	274158	274389	274620	274850	275081	275311	275542	275772	276002	276232	230
189	276462	276692	276921	277151	277380	277609	277838	278067	278296	278525	229
190	278754	278982	279211	279439	279667	279895	280123	280351	280578	280806	228
191	281033	281261	281488	281715	281942	282169	282396	282622	282849	283075	227
192	283301	283527	283753	283979	284205	284431	284656	284882	285107	285332	225
193	285557	285782	286007	286232	286456	286681	286905	287130	287354	287578	224
194	287802	288026	288249	288473	288696	288920	289143	289366	289589	289812	223
195	290035	290257	290480	290702	290925	291147	291369	291591	291813	292034	222
196	292256	292478	292699	292920	293141	293363	293584	293804	294025	294246	221
197	294466	294687	294907	295127	295347	295567	295787	296007	296226	296446	219
198	296665	296884	297104	297323	297542	297761	297979	298198	298416	298635	218
199	298853	299071	299289	299507	299725	299943	300161	300378	300595	300813	217
200	301030	301247	301464	301681	301898	302114	302331	302547	302764	302980	216
201	303196	303412	303628	303844	304059	304275	304491	304706	304921	305136	215
202	305351	305566	305781	305996	306211	306425	306639	306854	307068	307282	214
203	307496	307710	307924	308137	308351	308564	308778	308991	309204	309417	213
204	309630	309843	310056	310268	310481	310693	310906	311118	311330	311542	212
205	311754	311966	312177	312389	312600	312812	313023	313234	313445	313656	211
206	313867	314078	314289	314499	314710	314920	315130	315340	315551	315760	210
207	315970	316180	316390	316599	316809	317018	317227	317436	317646	317854	209
208	318063	318272	318481	318689	318898	319106	319314	319522	319730	319938	208
209	320146	320354	320562	320769	320977	321184	321391	321598	321805	322012	207
210	322219	322426	322633	322839	323046	323252	323458	323665	323871	324077	206
211	324282	324488	324694	324899	325105	325310	325516	325721	325926	326131	205
212	326336	326541	326745	326950	327155	327359	327563	327767	327972	328176	205
213	328380	328583	328787	328991	329194	329398	329601	329805	330008	330211	203
214	330414	330617	330819	331022	331225	331427	331630	331832	332034	332236	202
215	332438	332640	332842	333044	333246	333447	333649	333850	334051	334253	201
216	334454	334655	334856	335057	335257	335458	335658	335859	336059	336260	200
217	336460	336660	336860	337060	337260	337459	337659	337858	338058	338257	199
218	338456	338656	338855	339054	339253	339451	339650	339849	340047	340246	198
219	340444	340642	340841	341039	341237	341435	341632	341830	342028	342225	197
220	342423	342620	342817	343014	343212	343409	343606	343802	343999	344196	197
221	344392	344589	344785	344981	345178	345374	345570	345766	345962	346157	196
222	346353	346549	346744	346939	347135	347330	347525	347720	347915	348110	195
223	348305	348500	348694	348889	349083	349278	349472	349666	349860	350054	194
224	350248	350442	350636	350829	351023	351216	351410	351603	351796	351989	193
225	352183	352375	352568	352761	352954	353147	353339	353532	353724	353916	192
226	354108	354301	354493	354685	354875	355068	355260	355452	355643	355834	191
227	356026	356217	356408	356599	356790	356981	357172	357363	357554	357744	191

COMMON LOGARITHMS OF NUMBERS (*continued*).

No.	0	1	2	3	4	5	6	7	8	9	D.
228	357935	358125	358316	358506	358696	358886	359076	359266	359456	359646	190
229	359835	360025	360215	360404	360593	360783	360972	361161	361350	361539	189
230	361728	361917	362105	362294	362482	362671	362859	363048	363236	363424	188
231	363612	363800	363988	364176	364363	364551	364739	364926	365113	365301	187
232	365488	365675	365862	366049	366236	366423	366610	366796	366983	367169	187
233	367356	367542	367729	367915	368101	368287	368473	368659	368845	369030	186
234	369216	369401	369587	369772	369958	370143	370328	370513	370698	370883	185
235	371068	371253	371437	371622	371806	371991	372175	372360	372544	372728	184
236	372912	373096	373280	373464	373647	373831	374015	374198	374382	374565	184
237	374748	374932	375115	375298	375481	375664	375846	376029	376212	376394	183
238	376577	376759	376942	377124	377306	377488	377670	377852	378034	378216	182
239	378398	378580	378761	378943	379124	379306	379487	379668	379849	380030	181
240	380211	380392	380573	380754	380934	381115	381296	381476	381656	381837	181
241	382017	382197	382377	382557	382737	382917	383097	383277	383456	383636	179
242	383815	383995	384174	384353	384533	384712	384891	385070	385249	385428	179
243	385606	385785	385964	386142	386321	386499	386677	386856	387034	387212	178
244	387390	387568	387746	387923	388101	388279	388456	388634	388811	388989	177
245	389166	389343	389520	389698	389875	390051	390228	390405	390582	390759	177
246	390935	391112	391288	391464	391641	391817	391993	392169	392345	392521	176
247	392697	392873	393048	393224	393400	393575	393751	393926	394101	394277	175
248	394452	394627	394802	394977	395152	395326	395501	395676	395850	396025	175
249	396199	396374	396548	396722	396896	397071	397245	397419	397592	397766	174
250	397940	398114	398287	398461	398634	398808	398981	399154	399328	399501	173
251	399674	399847	400020	400192	400365	400538	400711	400883	401056	401228	173
252	401401	401573	401745	401917	402089	402261	402433	402605	402777	402949	172
253	403121	403292	403464	403635	403807	403978	404149	404320	404492	404663	171
254	404834	405005	405176	405346	405517	405688	405858	406029	406199	406370	171
255	406540	406710	406881	407051	407221	407391	407561	407731	407901	408070	170
256	408240	408410	408579	408749	408918	409087	409257	409426	409595	409764	169
257	409933	410102	410271	410440	410609	410777	410946	411114	411283	411451	169
258	411620	411788	411956	412124	412293	412461	412629	412796	412964	413132	168
259	413300	413467	413635	413803	413970	414137	414305	414472	414639	414806	167
260	414973	415140	415307	415474	415641	415808	415974	416141	416308	416474	167
261	416641	416807	416973	417139	417306	417472	417638	417804	417970	418135	166
262	418301	418467	418633	418798	418964	419129	419295	419460	419625	419791	165
263	419956	420121	420286	420451	420616	420781	420945	421110	421275	421439	165
264	421604	421768	421933	422097	422261	422426	422590	422754	422918	423082	164
265	423246	423410	423574	423737	423901	424065	424228	424392	424555	424718	163
266	424882	425045	425208	425371	425534	425697	425860	426023	426186	426349	163
267	426511	426674	426836	426999	427161	427324	427486	427648	427811	427973	162
268	428135	428297	428459	428621	428783	428944	429106	429268	429429	429591	162
269	429752	429914	430075	430236	430398	430559	430720	430881	431042	431203	161
270	431364	431525	431685	431846	432007	432167	432328	432488	432649	432809	160
271	432969	433130	433290	433450	433610	433770	433930	434090	434249	434409	160
272	434569	434729	434888	435048	435207	435367	435526	435685	435844	436004	159
273	436163	436322	436481	436640	436799	436957	437116	437275	437433	437592	159
274	437751	437909	438067	438226	438384	438542	438701	438859	439017	439175	158
275	439333	439491	439648	439806	439964	440122	440279	440437	440594	440752	157
276	440909	441066	441224	441381	441538	441695	441852	442009	442166	442323	157
277	442480	442637	442793	442950	443106	443263	443419	443576	443732	443889	156
278	444045	444201	444357	444513	444669	444825	444981	445137	445293	445449	156
279	445604	445760	445915	446071	446226	446382	446537	446692	446848	447003	155
280	447158	447313	447468	447623	447778	447933	448088	448242	448397	448552	155
281	448706	448861	449015	449170	449324	449478	449633	449787	449941	450095	154
282	450249	450403	450557	450711	450865	451018	451172	451326	451479	451633	154
283	451786	451940	452093	452247	452400	452553	452706	452859	453012	453165	153
284	453318	453471	453624	453777	453930	454082	454235	454387	454540	454692	153
285	454845	454997	455150	455302	455454	455606	455758	455910	456062	456214	152
286	456366	456518	456670	456821	456973	457125	457276	457428	457579	457731	152
287	457882	458033	458184	458336	458487	458638	458789	458940	459091	459242	151

COMMON LOGARITHMS OF NUMBERS (*continued*).

No.	0	1	2	3	4	5	6	7	8	9	D.
288	459392	459543	459694	459845	459995	460146	460296	460447	460597	460748	150
289	460898	461048	461198	461348	461499	461649	461799	461948	462098	462248	150
290	462398	462548	462697	462847	462997	463146	463296	463445	463594	463744	149
291	463893	464042	464191	464340	464490	464639	464788	464936	465085	465234	149
292	465383	465532	465680	465829	465977	466126	466274	466423	466571	466719	148
293	466868	467016	467164	467312	467460	467608	467756	467904	468052	468200	148
294	468347	468495	468643	468790	468938	469085	469233	469380	469527	469675	147
295	469822	469969	470116	470263	470410	470557	470704	470851	470998	471145	147
296	471292	471438	471585	471732	471878	472025	472171	472318	472464	472610	146
297	472756	472903	473049	473195	473341	473487	473633	473779	473925	474071	146
298	474216	474362	474508	474653	474799	474944	475090	475235	475381	475526	146
299	475671	475816	475962	476107	476252	476397	476542	476687	476832	476976	145
300	477121	477266	477411	477555	477700	477844	477989	478133	478278	478422	145
301	478566	478711	478855	478999	479143	479287	479431	479575	479719	479863	144
302	480007	480151	480294	480438	480582	480725	480869	481012	481156	481299	144
303	481443	481586	481729	481872	482016	482159	482302	482445	482588	482731	143
304	482874	483016	483159	483302	483445	483587	483730	483872	484015	484157	143
305	484300	484442	484585	484727	484869	485011	485153	485295	485437	485579	142
306	485721	485863	486005	486147	486289	486430	486572	486714	486855	486997	142
307	487138	487280	487421	487563	487704	487845	487986	488127	488269	488410	141
308	488551	488692	488833	488974	489114	489255	489396	489537	489677	489818	141
309	489958	490099	490239	490380	490520	490661	490801	490941	491081	491222	140
310	491362	491502	491642	491782	491922	492062	492201	492341	492481	492621	140
311	492760	492900	493040	493179	493319	493458	493597	493737	493876	494015	139
312	494155	494294	494433	494572	494711	494850	494989	495128	495267	495406	139
313	495544	495683	495822	495960	496099	496238	496376	496515	496653	496791	138
314	496930	497068	497206	497344	497483	497621	497759	497897	498035	498173	138
315	498311	498448	498586	498724	498862	498999	499137	499275	499412	499550	138
316	499687	499824	499962	500099	500236	500374	500511	500648	500785	500922	137
317	501059	501196	501333	501470	501607	501744	501880	502017	502154	502291	137
318	502427	502564	502700	502837	502973	503109	503246	503382	503518	503655	136
319	503791	503927	504063	504199	504335	504471	504607	504743	504878	505014	136
320	505150	505286	505421	505557	505693	505828	505964	506099	506234	506370	136
321	506505	506640	506776	506911	507046	507181	507316	507451	507586	507721	135
322	507856	507991	508126	508260	508395	508530	508664	508799	508934	509068	135
323	509203	509337	509471	509606	509740	509874	510009	510143	510277	510411	134
324	510545	510679	510813	510947	511081	511215	511349	511482	511616	511750	134
325	511883	512017	512151	512284	512418	512551	512684	512818	512951	513084	133
326	513218	513351	513484	513617	513750	513883	514016	514149	514282	514415	133
327	514548	514681	514813	514946	515079	515211	515344	515476	515609	515741	133
328	515874	516006	516139	516271	516403	516535	516668	516800	516932	517064	132
329	517196	517328	517460	517592	517724	517855	517987	518119	518251	518382	132
330	518514	518646	518777	518909	519040	519171	519303	519434	519566	519697	131
331	519828	519959	520090	520221	520353	520484	520615	520745	520876	521007	131
332	521138	521269	521400	521530	521661	521792	521922	522053	522183	522314	131
333	522444	522573	522705	522835	522966	523096	523226	523356	523486	523616	130
334	523746	523876	524006	524136	524266	524396	524526	524656	524785	524915	130
335	525045	525174	525304	525434	525563	525693	525822	525951	526081	526210	129
336	526339	526469	526598	526727	526856	526985	527114	527243	527372	527501	129
337	527630	527759	527888	528016	528145	528274	528402	528531	528660	528788	129
338	528917	529045	529174	529302	529430	529559	529687	529815	529943	530072	128
339	530200	530328	530456	530584	530712	530840	530968	531096	531223	531351	128
340	531479	531607	531734	531862	531990	532117	532245	532372	532500	532627	128
341	532754	532882	533009	533136	533264	533391	533518	533645	533772	533899	127
342	534026	534153	534280	534407	534534	534661	534787	534914	535041	535167	127
343	535294	535421	535547	535674	535800	535927	536053	536179	536306	536432	126
344	536558	536685	536811	536937	537063	537189	537315	537441	537567	537693	126
345	537819	537945	538071	538197	538322	538448	538574	538699	538825	538951	126
346	539076	539202	539327	539452	539578	539703	539829	539954	540079	540204	125
347	540329	540455	540580	540705	540830	540955	541080	541205	541330	541454	125

COMMON LOGARITHMS OF NUMBERS (*continued*).

No.	0	1	2	3	4	5	6	7	8	9	D.
348	541579	541704	541829	541953	542078	542203	542327	542452	542576	542701	125
349	542825	542950	543074	543199	543323	543447	543571	543696	543820	543944	124
350	544068	544192	544316	544440	544564	544688	544812	544936	545060	545183	124
351	545307	545431	545555	545678	545802	545925	546049	546172	546296	546419	124
352	546543	546666	546789	546913	547036	547159	547282	547405	547529	547652	123
353	547775	547898	548021	548144	548267	548389	548512	548635	548758	548881	123
354	549003	549126	549249	549371	549494	549616	549739	549861	549984	550106	123
355	550228	550351	550473	550595	550717	550840	550962	551084	551206	551328	122
356	551450	551572	551694	551816	551938	552060	552181	552303	552425	552547	122
357	552668	552790	552911	553033	553155	553276	553398	553519	553640	553762	121
358	553883	554004	554126	554247	554368	554489	554610	554731	554852	554973	121
359	555094	555215	555336	555457	555578	555699	555820	555940	556061	556182	121
360	556303	556423	556544	556664	556785	556905	557026	557146	557267	557387	120
361	557507	557627	557748	557868	557988	558108	558228	558349	558469	558589	120
362	558709	558829	558948	559068	559188	559308	559428	559548	559667	559787	120
363	559907	560026	560146	560265	560385	560504	560624	560743	560863	560982	119
364	561101	561221	561340	561459	561578	561698	561817	561936	562055	562174	119
365	562293	562412	562531	562650	562769	562887	563006	563125	563244	563362	119
366	563481	563600	563718	563837	563955	564074	564192	564311	564429	564548	119
367	564666	564784	564903	565021	565139	565257	565376	565494	565612	565730	118
368	565848	565966	566084	566202	566320	566437	566555	566673	566791	566909	118
369	567026	567144	567262	567379	567497	567614	567732	567849	567967	568084	118
370	568202	568319	568436	568554	568671	568788	568905	569023	569140	569257	117
371	569374	569491	569608	569725	569842	569959	570076	570193	570309	570426	117
372	570543	570660	570776	570893	571010	571126	571243	571359	571476	571592	117
373	571709	571825	571942	572058	572174	572291	572407	572523	572639	572755	116
374	572872	572988	573104	573220	573336	573452	573568	573684	573800	573915	116
375	574031	574147	574263	574379	574494	574610	574726	574841	574957	575072	116
376	575188	575303	575419	575534	575650	575765	575880	575996	576111	576226	115
377	576341	576457	576572	576687	576802	576917	577032	577147	577262	577377	115
378	577492	577607	577722	577836	577951	578066	578181	578295	578410	578525	115
379	578639	578754	578868	578983	579097	579212	579326	579441	579555	579669	114
380	579784	579898	580012	580126	580241	580355	580469	580583	580697	580811	114
381	580925	581039	581153	581267	581381	581495	581608	581722	581836	581950	114
382	582063	582177	582291	582404	582518	582631	582745	582858	582972	583085	114
383	583199	583312	583426	583539	583652	583765	583879	583992	584105	584218	113
384	584331	584444	584557	584670	584783	584896	585009	585122	585235	585348	113
385	585461	585574	585686	585799	585912	586024	586137	586250	586362	586475	113
386	586587	586700	586812	586925	587037	587149	587262	587374	587486	587599	112
387	587711	587823	587935	588047	588160	588272	588384	588496	588608	588720	112
388	588832	588944	589056	589167	589279	589391	589503	589615	589726	589838	112
389	589950	590061	590173	590284	590396	590507	590619	590730	590842	590953	112
390	591065	591176	591287	591399	591510	591621	591732	591843	591955	592066	111
391	592177	592288	592399	592510	592621	592732	592843	592954	593064	593175	111
392	593286	593397	593508	593618	593729	593840	593950	594061	594171	594282	111
393	594393	594503	594614	594724	594834	594945	595055	595165	595276	595386	110
394	595496	595606	595717	595827	595937	596047	596157	596267	596377	596487	110
395	596597	596707	596817	596927	597037	597146	597256	597366	597476	597586	110
396	597695	597805	597914	598024	598134	598243	598353	598462	598572	598681	110
397	598791	598900	599009	599119	599228	599337	599446	599556	599665	599774	109
398	599883	599992	600101	600210	600319	600428	600537	600646	600765	600864	109
399	600973	601082	601191	601299	601408	601517	601625	601734	601843	601951	109
400	602060	602169	602277	602386	602494	602603	602711	602819	602928	603036	108
401	603144	603253	603361	603469	603577	603686	603794	603902	604010	604118	108
402	604226	604334	604442	604550	604658	604766	604874	604982	605089	605197	108
403	605305	605413	605521	605628	605736	605844	605951	606059	606166	606274	108
404	606381	606489	606596	606704	606811	606919	607026	607133	607241	607348	107
405	607455	607562	607669	607777	607884	607991	608098	608205	608312	608419	107
406	608526	608633	608740	608847	608954	609061	609167	609274	609381	609488	107
407	609594	609701	609808	609914	610021	610128	610234	610341	610447	610554	107

COMMON LOGARITHMS OF NUMBERS (*continued*).

No.	0	1	2	3	4	5	6	7	8	9	D.
408	610660	610767	610873	610979	611086	611192	611298	611405	611511	611617	106
409	611723	611829	611936	612042	612148	612254	612360	612466	612572	612678	106
410	612784	612890	612996	613102	613207	613313	613419	613525	613630	613736	106
411	613842	613947	614053	614159	614264	614370	614475	614581	614686	614792	106
412	614897	615003	615108	615213	615319	615424	615529	615634	615740	615845	105
413	615950	616055	616160	616265	616370	616476	616581	616686	616790	616895	105
414	617000	617105	617210	617315	617420	617525	617629	617734	617839	617943	105
415	618048	618153	618257	618362	618466	618571	618676	618780	618884	618989	105
416	619093	619198	619302	619406	619511	619615	619719	619824	619928	620032	104
417	620136	620240	620344	620448	620552	620656	620760	620864	620968	621072	104
418	621176	621280	621384	621488	621592	621695	621799	621903	622007	622110	104
419	622214	622318	622421	622525	622628	622732	622835	622939	623042	623146	104
420	623249	623353	623456	623559	623663	623766	623869	623973	624076	624179	103
421	624282	624385	624488	624591	624695	624798	624901	625004	625107	625210	103
422	625312	625415	625518	625621	625724	625827	625929	626032	626135	626238	103
423	626340	626443	626546	626648	626751	626853	626956	627058	627161	627263	103
424	627366	627468	627571	627673	627775	627878	627980	628082	628185	628287	102
425	628389	628491	628593	628695	628797	628900	629002	629104	629206	629308	102
426	629410	629512	629613	629715	629817	629919	630021	630123	630224	630326	102
427	630428	630530	630631	630733	630835	630936	631038	631139	631241	631342	102
428	631444	631545	631647	631748	631849	631951	632052	632153	632255	632356	101
429	632457	632559	632660	632761	632862	632963	633064	633165	633266	633367	101
430	633468	633569	633670	633771	633872	633973	634074	634175	634276	634376	101
431	634477	634578	634679	634779	634880	634981	635081	635182	635283	635383	101
432	635484	635584	635685	635785	635886	635986	636087	636187	636287	636388	100
433	636488	636588	636688	636789	636889	636989	637089	637189	637290	637390	100
434	637490	637590	637690	637790	637890	637990	638090	638190	638290	638389	100
435	638489	638589	638689	638789	638888	638988	639088	639188	639287	639387	100
436	639486	639586	639686	639785	639885	639984	640084	640183	640283	640382	100
437	640481	640581	640680	640779	640879	640978	641077	641177	641276	641375	99
438	641474	641573	641672	641771	641871	641970	642069	642168	642267	642366	99
439	642465	642563	642662	642761	642860	642959	643058	643156	643255	643354	99
440	643453	643551	643650	643749	643847	643946	644044	644143	644242	644340	98
441	644439	644537	644636	644734	644832	644931	645029	645127	645226	645324	98
442	645422	645521	645619	645717	645815	645913	646011	646110	646208	646306	98
443	646404	646502	646600	646698	646796	646894	646992	647089	647187	647285	98
444	647383	647481	647579	647676	647774	647872	647969	648067	648165	648262	98
445	648360	648458	648555	648653	648750	648848	648945	649043	649140	649237	97
446	649335	649432	649530	649627	649724	649821	649919	650016	650113	650210	97
447	650308	650405	650502	650599	650696	650793	650890	650987	651084	651181	97
448	651278	651375	651472	651569	651666	651762	651859	651956	652053	652150	97
449	652246	652343	652440	652536	652633	652730	652826	652923	653019	653116	97
450	653213	653309	653405	653502	653598	653695	653791	653888	653984	654080	96
451	654177	654273	654369	654465	654562	654658	654754	654850	654946	655042	96
452	655138	655235	655331	655427	655523	655619	655715	655810	655906	656002	96
453	656098	656194	656290	656386	656482	656577	656673	656769	656864	656960	96
454	657056	657152	657247	657343	657438	657534	657629	657725	657820	657916	96
455	658011	658107	658202	658298	658393	658488	658584	658679	658774	658870	95
456	658965	659060	659155	659250	659346	659441	659536	659631	659726	659821	95
457	659916	660011	660106	660201	660296	660391	660486	660581	660676	660771	95
458	660865	660960	661055	661150	661245	661339	661434	661529	661623	661718	95
459	661813	661907	662002	662096	662191	662286	662380	662475	662569	662663	94
460	662758	662852	662947	663041	663135	663230	663324	663418	663512	663607	94
461	663701	663795	663889	663983	664078	664172	664266	664360	664454	664548	94
462	664642	664734	664830	664924	665018	665112	665206	665299	665393	665487	94
463	665581	665675	665769	665862	665956	666050	666143	666237	666331	666424	94
464	666518	666612	666705	666799	666892	666986	667079	667173	667266	667360	94
465	667453	667546	667640	667733	667826	667920	668013	668106	668199	668293	93
466	668386	668479	668572	668665	668759	668852	668945	669038	669131	669224	93
467	669317	669410	669503	669596	669689	669782	669875	669967	670060	670153	93

COMMON LOGARITHMS OF NUMBERS (*continued*).

No.	0	1	2	3	4	5	6	7	8	9	D.
468	670246	670339	670431	670524	670617	670710	670802	670895	670988	671080	93
469	671173	671265	671358	671451	671543	671636	671728	671821	671913	672005	92
470	672098	672190	672283	672375	672467	672560	672652	672744	672836	672929	92
471	673021	673113	673205	673297	673390	673482	673574	673666	673758	673850	92
472	673942	674034	674126	674218	674310	674402	674494	674586	674677	674769	92
473	674861	674953	675045	675137	675228	675320	675412	675503	675595	675687	92
474	675778	675870	675962	676053	676145	676236	676328	676419	676511	676602	92
475	676694	676785	676876	676968	677059	677151	677242	677333	677424	677516	91
476	677607	677698	677789	677881	677972	678063	678154	678245	678336	678427	91
477	678518	678609	678700	678791	678882	678973	679064	679155	679246	679337	91
478	679428	679519	679610	679700	679791	679882	679973	680063	680154	680245	91
479	680336	680426	680517	680607	680698	680789	680879	680970	681060	681151	91
480	681241	681332	681422	681513	681603	681693	681784	681874	681964	682055	90
481	682145	682235	682326	682416	682506	682596	682686	682777	682867	682957	90
482	683047	683137	683227	683317	683407	683497	683587	683677	683767	683857	90
483	683947	684037	684127	684217	684307	684396	684486	684576	684666	684756	90
484	684845	684935	685025	685114	685204	685294	685383	685473	685563	685652	90
485	685742	685831	685921	686010	686100	686189	686279	686368	686458	686547	90
486	686636	686726	686815	686904	686994	687083	687172	687261	687351	687440	89
487	687529	687618	687707	687796	687886	687975	688064	688153	688242	688331	89
488	688420	688509	688598	688687	688776	688865	688953	689042	689131	689220	89
489	689309	689398	689486	689575	689664	689753	689841	689930	690019	690107	89
490	690196	690285	690373	690462	690550	690639	690728	690816	690905	690993	89
491	691081	691170	691258	691347	691435	691524	691612	691700	691789	691877	88
492	691965	692053	692142	692230	692318	692406	692494	692583	692671	692759	88
493	692847	692935	693023	693111	693199	693287	693375	693463	693551	693639	88
494	693727	693815	693903	693991	694078	694166	694254	694342	694430	694517	88
495	694605	694693	694781	694868	694956	695044	695131	695219	695307	695394	88
496	695482	695569	695657	695744	695832	695919	696007	696094	696182	696269	87
497	696356	696444	696531	696618	696706	696793	696880	696968	697055	697142	87
498	697229	697317	697404	697491	697578	697665	697752	697839	697926	698014	87
499	698101	698188	698275	698362	698449	698535	698622	698709	698796	698883	87
500	698970	699057	699144	699231	699317	699404	699491	699578	699664	699751	87
501	699838	699924	700011	700098	700184	700271	700358	700444	700531	700617	87
502	700704	700790	700877	700963	701050	701136	701222	701309	701395	701482	86
503	701568	701654	701741	701827	701913	701999	702086	702172	702258	702344	86
504	702431	702517	702603	702689	702775	702861	702947	703033	703119	703205	86
505	703291	703377	703463	703549	703635	703721	703807	703893	703979	704065	86
506	704151	704236	704322	704408	704494	704579	704665	704751	704837	704922	86
507	705008	705094	705179	705265	705350	705436	705522	705607	705693	705778	86
508	705864	705949	706035	706120	706206	706291	706376	706462	706547	706632	85
509	706718	706803	706888	706974	707059	707144	707229	707315	707400	707485	85
510	707570	707655	707740	707826	707911	707996	708081	708166	708251	708336	85
511	708421	708506	708591	708676	708761	708846	708931	709015	709100	709185	85
512	709270	709355	709440	709524	709609	709694	709679	709863	709948	710033	85
513	710117	710202	710287	710371	710456	710540	710625	710710	710794	710879	85
514	710963	711048	711132	711217	711301	711385	711470	711554	711639	711723	84
515	711807	711892	711976	712060	712144	712229	712313	712397	712481	712566	84
516	712650	712734	712818	712902	712986	713070	713154	713238	713323	713407	84
517	713491	713575	713659	713742	713826	713910	713994	714078	714162	714246	84
518	714330	714414	714497	714581	714665	714749	714833	714916	715000	715084	84
519	715167	715251	715335	715418	715502	715586	715669	715753	715836	715920	84
520	716003	716087	716170	716254	716337	716421	716504	716588	716671	716754	83
521	716838	716921	717004	717088	717171	717254	717338	717421	717504	717587	83
522	717671	717754	717837	717920	718003	718086	718169	718253	718336	718419	83
523	718502	718585	718668	718751	718834	718917	719000	719083	719165	719248	83
524	719331	719414	719497	719580	719663	719745	719828	719911	719994	720077	83
525	720159	720242	720325	720407	720490	720573	720655	720738	720821	720903	83
526	720986	721068	721151	721233	721316	721398	721481	721563	721646	721728	83
527	721811	721893	721975	722058	722140	722222	722305	722387	722469	722552	82

COMMON LOGARITHMS OF NUMBERS (*continued*).

No.	0	1	2	3	4	5	6	7	8	9	D.
528	722634	722716	722798	722881	722963	723045	723127	723209	723291	723374	82
529	723456	723538	723620	723702	723784	723866	723948	724030	724112	724194	82
530	724276	724358	724440	724522	724604	724685	724767	724849	724931	725013	82
531	725095	725176	725258	725340	725422	725503	725585	725667	725748	725830	82
532	725912	725993	726075	726156	726238	726320	726401	726483	726564	726646	82
533	726727	726809	726890	726972	727053	727134	727216	727297	727379	727460	81
534	727541	727623	727704	727785	727866	727948	728029	728110	728191	728273	81
535	728354	728435	728516	728597	728678	728759	728841	728922	729003	729084	81
536	729165	729246	729327	729408	729489	729570	729651	729732	729813	729893	81
537	729974	730055	730136	730217	730298	730378	730459	730540	730621	730702	81
538	730782	730863	730944	731024	731105	731186	731266	731347	731428	731508	81
539	731589	731669	731750	731830	731911	731991	732072	732152	732233	732313	81
540	732394	732474	732555	732635	732715	732796	732876	732956	733037	733117	80
541	733197	733278	733358	733438	733518	733598	733679	733759	733839	733919	80
542	733999	734079	734160	734240	734320	734400	734480	734560	734640	734720	80
543	734800	734880	734960	735040	735120	735200	735279	735359	735439	735519	80
544	735599	735679	735759	735838	735918	735998	736078	736157	736237	736317	80
545	736397	736476	736556	736635	736715	736795	736874	736954	737034	737113	80
546	737193	737272	737352	737431	737511	737590	737670	737749	737829	737908	79
547	737987	738067	738146	738225	738305	738384	738463	738543	738622	738701	79
548	738781	738860	738939	739018	739097	739177	739256	739335	739414	739493	79
549	739572	739651	739731	739810	739889	739968	740047	740126	740205	740284	79
550	740363	740442	740521	740600	740678	740757	740836	740915	740994	741073	79
551	741152	741230	741309	741388	741467	741546	741624	741703	741782	741860	79
552	741939	742018	742096	742175	742254	742332	742411	742489	742568	742647	79
553	742725	742804	742882	742961	743039	743118	743196	743275	743353	743431	78
554	743510	743588	743667	743745	743823	743902	743980	744058	744136	744215	78
555	744293	744371	744449	744528	744606	744684	744762	744840	744919	744997	78
556	745075	745153	745231	745309	745387	745465	745543	745621	745699	745777	78
557	745855	745933	746011	746089	746167	746245	746323	746401	746479	746556	78
558	746634	746712	746790	746868	746945	747023	747101	747179	747256	747334	78
559	747412	747489	747567	747645	747722	747800	747878	747955	748033	748110	78
560	748188	748266	748343	748421	748498	748576	748653	748731	748808	748885	77
561	748963	749040	749118	749195	749272	749350	749427	749504	749582	749659	77
562	749736	749814	749891	749968	750045	750123	750200	750277	750354	750431	77
563	750508	750586	750663	750740	750817	750894	750971	751048	751125	751202	77
564	751279	751356	751433	751510	751587	751664	751741	751818	751895	751972	77
565	752048	752125	752202	752279	752356	752433	752509	752586	752663	752740	77
566	752816	752893	752970	753047	753123	753200	753277	753353	753430	753506	77
567	753583	753660	753736	753813	753889	753966	754042	754119	754195	754272	77
568	754348	754425	754501	754578	754654	754730	754807	754883	754960	755036	76
569	755112	755189	755265	755341	755417	755494	755570	755646	755722	755799	76
570	755875	755951	756027	756103	756180	756256	756332	756408	756484	756560	76
571	756636	756712	756788	756864	756940	757016	757092	757168	757244	757320	76
572	757396	757472	757548	757624	757700	757775	757851	757927	758003	758079	76
573	758155	758230	758306	758382	758458	758533	758609	758685	758761	758836	76
574	758912	758988	759063	759139	759214	759290	759366	759441	759517	759592	76
575	759668	759743	759819	759894	759970	760045	760121	760196	760272	760347	75
576	760422	760498	760573	760649	760724	760799	760875	760950	761025	761101	75
577	761176	761251	761326	761402	761477	761552	761627	761702	761778	761853	75
578	761928	762003	762078	762153	762228	762303	762378	762453	762529	762604	75
579	762679	762754	762829	762904	762978	763053	763128	763203	763278	763353	75
580	763428	763503	763578	763653	763727	763802	763877	763952	764027	764101	75
581	764176	764251	764326	764400	764475	764550	764624	764699	764774	764848	75
582	764923	764998	765072	765147	765221	765296	765370	765445	765520	765594	75
583	765669	765743	765818	765892	765966	766041	766115	766190	766264	766338	74
584	766413	766487	766562	766636	766710	766785	766859	766933	767007	767082	74
585	767156	767230	767304	767379	767453	767527	767601	767675	767749	767823	74
586	767898	767972	768046	768120	768194	768268	768342	768416	768490	768564	74
587	768638	768712	768786	768860	768934	769008	769082	769156	769230	769303	74

COMMON LOGARITHMS OF NUMBERS (*continued*).

No.	0	1	2	3	4	5	6	7	8	9	D.
588	769377	769451	769525	769599	769673	769746	769820	769894	769968	770042	74
589	770115	770189	770263	770336	770410	770484	770557	770631	770705	770778	74
590	770852	770926	770999	771073	771146	771220	771293	771367	771440	771514	74
591	771587	771661	771734	771808	771881	771955	772028	772102	772175	772248	73
592	772322	772395	772468	772542	772615	772688	772762	772835	772908	772981	73
593	773055	773128	773201	773274	773348	773421	773494	773567	773640	773713	73
594	773786	773860	773933	774006	774079	774152	774225	774298	774371	774444	73
595	774517	774590	774663	774736	774809	774882	774955	775028	775100	775173	73
596	775246	775319	775392	775465	775538	775610	775683	775756	775829	775902	73
597	775974	776047	776120	776193	776265	776338	776411	776483	776556	776629	73
598	776701	776774	776846	776919	776992	777064	777137	777209	777282	777354	73
599	777427	777499	777572	777644	777717	777789	777862	777934	778006	778079	72
600	778151	778224	778296	778368	778441	778513	778585	778658	778730	778802	72
601	778874	778947	779019	779091	779163	779236	779308	779380	779452	779524	72
602	779596	779669	779741	779813	779885	779957	780029	780101	780173	780245	72
603	780317	780389	780461	780533	780605	780677	780749	780821	780893	780965	72
604	781037	781109	781181	781253	781324	781396	781468	781540	781612	781684	72
605	781755	781827	781899	781971	782042	782114	782186	782258	782329	782401	72
606	782473	782544	782616	782688	782759	782831	782902	782974	783046	783117	72
607	783189	783260	783332	783403	783475	783546	783618	783689	783761	783832	71
608	783904	783975	784046	784118	784189	784261	784332	784403	784475	784546	71
609	784617	784689	784760	784831	784902	784974	785045	785116	785187	785259	71
610	785330	785401	785472	785543	785615	785686	785757	785828	785899	785970	71
611	786041	786112	786183	786254	786325	786396	786467	786538	786609	786680	71
612	786751	786822	786893	786964	787035	787106	787177	787248	787319	787390	71
613	787460	787531	787602	787673	787744	787815	787885	787956	788027	788098	71
614	788168	788239	788310	788381	788451	788522	788593	788663	788734	788804	71
615	788875	788946	789016	789087	789157	789228	789299	789369	789440	789510	71
616	789581	789651	789722	789792	789863	789933	790004	790074	790144	790215	70
617	790285	790356	790426	790496	790567	790637	790707	790778	790858	790918	70
618	790988	791059	791129	791199	791269	791340	791410	791480	791550	791620	70
619	791691	791761	791831	791901	791971	792041	792111	792181	792252	792322	70
620	792392	792462	792532	792602	792672	792742	792812	792882	792952	793022	70
621	793092	793162	793231	793301	793371	793441	793511	793581	793651	793721	70
622	793790	793860	793930	794000	794070	794139	794209	794279	794349	794418	70
623	794488	794558	794627	794697	794767	794836	794906	794976	795045	795115	70
624	795185	795254	795324	795393	795463	795532	795602	795672	795741	795811	70
625	795880	795949	796019	796088	796158	796227	796297	796366	796436	796505	69
626	796574	796644	796713	796782	796852	796921	796990	797060	797129	797198	69
627	797268	797337	797406	797475	797545	797614	797683	797752	797821	797890	69
628	797960	798029	798098	798167	798236	798305	798374	798443	798513	798582	69
629	798651	798720	798789	798858	798927	798996	799065	799134	799203	799272	69
630	799341	799409	799478	799547	799616	799685	799754	799823	799892	799961	69
631	800029	800098	800167	800236	800305	800373	800442	800511	800580	800648	69
632	800717	800786	800854	800923	800992	801061	801129	801198	801266	801335	69
633	801404	801472	801541	801609	801678	801747	801815	801884	801952	802021	69
634	802089	802158	802226	802295	802363	802432	802500	802568	802637	802705	69
635	802774	802842	802910	802979	803047	803116	803184	803252	803321	803389	68
636	803457	803525	803594	803662	803730	803798	803867	803935	804003	804071	68
637	804139	804208	804276	804344	804412	804480	804548	804616	804685	804753	68
638	804821	804889	804957	805025	805093	805161	805229	805297	805365	805433	68
639	805501	805569	805637	805705	805773	805841	805908	805976	806044	806112	68
640	806180	806248	806316	806384	806451	806519	806587	806655	806723	806790	68
641	806858	806926	806994	807061	807129	807197	807264	807332	807400	807467	68
642	807535	807603	807670	807738	807806	807873	807941	808008	808076	808143	68
643	808211	808279	808346	808414	808481	808549	808616	808684	808751	808818	67
644	808886	808953	809021	809088	809156	809223	809290	809358	809425	809492	67
645	809560	809627	809694	809762	809829	809896	809964	810031	810098	810165	67
646	810233	810300	810367	810434	810501	810569	810636	810703	810770	810837	67
647	810904	810971	811039	811106	811173	811240	811307	811374	811441	811508	67

COMMON LOGARITHMS OF NUMBERS (*continued*).

No.	0	1	2	3	4	5	6	7	8	9	D.
648	811575	811642	811709	811776	811843	811910	811977	812044	812111	812178	67
649	812245	812312	812379	812445	812512	812579	812646	812713	812780	812847	67
650	812913	812980	813047	813114	813181	813247	813314	813381	813448	813514	67
651	813581	813648	813714	813781	813848	813914	813981	814048	814114	814181	67
652	814248	814314	814381	814447	814514	814581	814647	814714	814780	814847	67
653	814913	814980	815046	815113	815179	815246	815312	815378	815445	815511	66
654	815578	815644	815711	815777	815843	815910	815976	816042	816109	816175	66
655	816241	816308	816374	816440	816506	816573	816639	816705	816771	816838	66
656	816904	816970	817036	817102	817169	817235	817301	817367	817433	817499	66
657	817565	817631	817698	817764	817830	817896	817962	818028	818094	818160	66
658	818226	818292	818358	818424	818490	818556	818622	818688	818754	818820	66
659	818885	818951	819017	819083	819149	819215	819281	819346	819412	819478	66
660	819544	819610	819676	819741	819807	819873	819939	820004	820070	820136	66
661	820201	820267	820333	820399	820464	820530	820595	820661	820727	820792	66
662	820858	820924	820989	821055	821120	821186	821251	821317	821382	821448	66
663	821514	821579	821645	821710	821775	821841	821906	821972	822037	822103	65
664	822168	822233	822299	822364	822430	822495	822560	822626	822691	822756	65
665	822822	822887	822952	823018	823083	823148	823213	823279	823344	823409	65
666	823474	823539	823605	823670	823735	823800	823865	823930	823996	824061	65
667	824126	824191	824256	824321	824386	824451	824516	824581	824646	824711	65
668	824776	824841	824906	824971	825036	825101	825166	825231	825296	825361	65
669	825426	825491	825556	825621	825686	825751	825815	825880	825945	826010	65
670	826075	826140	826204	826269	826334	826399	826464	826528	826593	826658	65
671	826723	826787	826852	826917	826981	827046	827111	827175	827240	827305	65
672	827369	827434	827499	827563	827628	827692	827757	827821	827886	827951	65
673	828015	828080	828144	828209	828273	828338	828402	828467	828531	828595	64
674	828660	828724	828789	828853	828918	828982	829046	829111	829175	829239	64
675	829304	829368	829432	829497	829561	829625	829690	829754	829818	829882	64
676	829947	830011	830075	830139	830204	830268	830332	830396	830460	830525	64
677	830589	830653	830717	830781	830845	830909	830973	831037	831102	831166	64
678	831230	831294	831358	831422	831486	831550	831614	831678	831742	831806	64
679	831870	831934	831998	832062	832126	832189	832253	832317	832381	832445	64
680	832509	832573	832637	832700	832764	832828	832892	832956	833020	833083	64
681	833147	833211	833275	833338	833402	833466	833530	833593	833657	833721	64
682	833784	833848	833912	833975	834039	834103	834166	834230	834294	834357	64
683	834421	834484	834548	834611	834675	834739	834802	834866	834929	834993	64
684	835056	835120	835183	835247	835310	835373	835437	835500	835564	835627	63
685	835691	835754	835817	835881	835944	836007	836071	836134	836197	836261	63
686	836324	836387	836451	836514	836577	836641	836704	836767	836830	836894	63
687	836957	837020	837083	837146	837210	837273	837336	837399	837462	837525	63
688	837588	837652	837715	837778	837841	837904	837967	838030	838093	838156	63
689	838219	838282	838345	838408	838471	838534	838597	838660	838723	838786	63
690	838849	838912	838975	839038	839101	839164	839227	839289	839352	839415	63
691	839478	839541	839604	839667	839729	839792	839855	839918	839981	840043	63
692	840106	840169	840232	840294	840357	840420	840482	840545	840608	840671	63
693	840733	840796	840859	840921	840984	841046	841109	841172	841234	841297	63
694	841359	841422	841485	841547	841610	841672	841735	841797	841860	841922	63
695	841985	842047	842110	842172	842235	842297	842360	842422	842484	842547	62
696	842609	842672	842734	842796	842859	842921	842983	843046	843108	843170	62
697	843233	843295	843357	843420	843482	843544	843606	843669	843731	843793	62
698	843855	843918	843980	844042	844104	844166	844229	844291	844353	844415	62
699	844477	844539	844601	844664	844726	844788	844850	844912	844974	845036	62
700	845098	845160	845222	845284	845346	845408	845470	845532	845594	845656	62
701	845718	845780	845842	845904	845966	846028	846090	846151	846213	846275	62
702	846337	846399	846461	846523	846585	846646	846708	846770	846832	846894	62
703	846955	847017	847079	847141	847202	847264	847326	847388	847449	847511	62
704	847573	847634	847696	847758	847819	847881	847943	848004	848066	848128	62
705	848189	848251	848312	848374	848435	848497	848559	848620	848682	848743	62
706	848805	848866	848928	848989	849051	849112	849174	849235	849297	849358	61
707	849419	849481	849542	849604	849665	849726	849788	849849	849911	849972	61

COMMON LOGARITHMS OF NUMBERS (*continued*).

No.	0	1	2	3	4	5	6	7	8	9	D.
708	850033	850095	850156	850217	850279	850340	850401	850462	850524	850585	61
709	850646	850707	850769	850830	850891	850952	851014	851075	851136	851197	61
710	851258	851320	851381	851442	851503	851564	851625	851686	851747	851809	61
711	851870	851931	851992	852053	852114	852175	852236	852297	852358	852419	61
712	852480	852541	852602	852663	852724	852785	852846	852907	852968	853029	61
713	853090	853150	853211	853272	853333	853394	853455	853516	853577	853637	61
714	853698	853759	853820	853881	853941	854002	854063	854124	854185	854245	61
715	854306	854367	854428	854488	854549	854610	854670	854731	854792	854852	61
716	854913	854974	855034	855095	855156	855216	855277	855337	855398	855459	61
717	855519	855580	855640	855701	855761	855822	855882	855943	856003	856064	61
718	856124	856185	856245	856306	856366	856427	856487	856548	856608	856668	60
719	856729	856789	856850	856910	856970	857031	857091	857152	857212	857272	60
720	857332	857393	857453	857513	857574	857634	857694	857755	857815	857875	60
721	857935	857995	858056	858116	858176	858236	858297	858357	858417	858477	60
722	858537	858597	858657	858718	858778	858838	858898	858958	859018	859078	60
723	859138	859198	859258	859318	859379	859439	859499	859559	859619	859679	60
724	859739	859799	859859	859918	859978	860038	860098	860158	860218	860278	60
725	860338	860398	860458	860518	860578	860637	860697	860757	860817	860877	60
726	860937	860996	861056	861116	861176	861236	861295	861355	861415	861475	60
727	861534	861594	861654	861714	861773	861833	861893	861952	862012	862072	60
728	862131	862191	862251	862310	862370	862430	862489	862549	862608	862668	60
729	862728	862787	862847	862906	862966	863025	863085	863144	863204	863263	60
730	863323	863382	863442	863501	863561	863620	863680	863739	863799	863858	59
731	863917	863977	864036	864096	864155	864214	864274	864333	864392	864452	59
732	864511	864570	864630	864689	864748	864808	864867	864926	864985	865045	59
733	865104	865163	865222	865282	865341	865400	865459	865519	865578	865637	59
734	865696	865755	865814	865874	865933	865992	866051	866110	866169	866228	59
735	866287	866346	866405	866465	866524	866583	866642	866701	866760	866819	59
736	866878	866937	866996	867055	867114	867173	867232	867291	867350	867409	59
737	867467	867526	867585	867644	867703	867762	867821	867880	867939	867998	59
738	868056	868115	868174	868233	868292	868350	868409	868468	868527	868586	59
739	868644	868703	868762	868821	868879	868938	868997	869056	869114	869173	59
740	869232	869290	869349	869408	869466	869525	869585	869642	869701	869760	59
741	869818	869877	869935	869994	870053	870111	870170	870228	870287	870345	59
742	870404	870462	870521	870579	870638	870696	870755	870813	870872	870930	58
743	870989	871047	871106	871164	871223	871281	871339	871398	871456	871515	58
744	871573	871631	871690	871748	871806	871865	871923	871981	872040	872098	58
745	872156	872215	872273	872331	872389	872448	872506	872564	872622	872681	58
746	872739	872797	872855	872913	872972	873030	873088	873146	873204	873262	58
747	873321	873379	873437	873495	873553	873611	873669	873727	873785	873844	58
748	873902	873960	874018	874076	874134	874192	874250	874308	874366	874424	58
749	874482	874540	874598	874656	874714	874772	874830	874888	874945	875003	58
750	875061	875119	875177	875235	875293	875351	875409	875466	875524	875582	58
751	875640	875698	875756	875813	875871	875929	875987	876045	876102	876160	58
752	876218	876276	876333	876391	876449	876507	876564	876622	876680	876737	58
753	876795	876853	876910	876968	877026	877083	877141	877199	877256	877314	58
754	877371	877429	877487	877544	877602	877659	877717	877774	877832	877889	58
755	877947	878004	878062	878119	878177	878234	878292	878349	878407	878464	57
756	878522	878579	878637	878694	878752	878809	878866	878924	878981	879039	57
757	879096	879153	879211	879268	879325	879383	879440	879497	879555	879612	57
758	879669	879726	879784	879841	879898	879956	880013	880070	880127	880185	57
759	880242	880299	880356	880413	880471	880528	880585	880642	880699	880756	57
760	880814	880871	880928	880985	881042	881099	881156	881213	881271	881328	57
761	881385	881442	881499	881556	881613	881670	881727	881784	881841	881898	57
762	881955	882012	882068	882126	882183	882240	882297	882354	882411	882468	57
763	882525	882581	882639	882695	882752	882809	882866	882923	882980	883037	57
764	883093	883150	883207	883264	883321	883377	883434	883491	883548	883605	57
765	883661	883718	883775	883832	883888	883945	884002	884059	884115	884172	57
766	884229	884285	884342	884399	884455	884512	884569	884625	884682	884739	57
767	884795	884852	884909	884965	885022	885078	885135	885192	885248	885305	57

COMMON LOGARITHMS OF NUMBERS (*continued*).

No.	0	1	2	3	4	5	6	7	8	9	D.
768	885361	885418	885474	885531	885587	885644	885700	885757	885813	885870	57
769	885926	885983	886039	886096	886152	886209	886265	886321	886378	886434	56
770	886491	886547	886604	886660	886716	886773	886829	886885	886942	886996	56
771	887054	887111	887167	887223	887280	887336	887392	887449	887505	887561	56
772	887617	887674	887730	887786	887842	887898	887955	888011	888067	888123	56
773	888179	888236	888292	888348	888404	888460	888516	888573	888629	888685	56
774	888741	888797	888853	888909	888965	889021	889077	889134	889190	889246	56
775	889302	889358	889414	889470	889526	889582	889638	889694	889750	889806	56
776	889862	889918	889974	890030	890086	890141	890197	890253	890309	890365	56
777	890421	890477	890533	890589	890645	890700	890756	890812	890868	890924	56
778	890980	891035	891091	891147	891203	891259	891314	891370	891426	891482	56
779	891537	891593	891649	891705	891760	891816	891872	891928	891983	892039	56
780	892095	892150	892206	892262	892317	892373	892429	892484	892540	892595	56
781	892651	892707	892762	892818	892873	892929	892985	893040	893096	893151	56
782	893207	893262	893318	893373	893429	893484	893540	893595	893651	893706	56
783	893762	893817	893873	893928	893984	894039	894094	894150	894205	894261	55
784	894316	894371	894427	894482	894538	894593	894648	894704	894759	894814	55
785	894870	894925	894980	895036	895091	895146	895201	895257	895312	895367	55
786	895423	895478	895533	895588	895644	895699	895754	895809	895864	895920	55
787	895975	896030	896085	896140	896195	896251	896306	896361	896416	896471	55
788	896526	896581	896636	896692	896747	896802	896857	896912	896967	897022	55
789	897077	897132	897187	897242	897297	897352	897407	897462	897517	897572	55
790	897627	897682	897737	897792	897847	897902	897957	898012	898067	898122	55
791	898176	898231	898286	898341	898396	898451	898506	898561	898615	898670	55
792	898725	898780	898835	898890	898944	898999	899054	899109	899164	899218	55
793	899273	899328	899383	899437	899492	899547	899602	899656	899711	899766	55
794	899821	899875	899930	899985	900039	900094	900149	900203	900258	900312	55
795	900367	900422	900476	900531	900586	900640	900695	900749	900804	900859	55
796	900913	900968	901022	901077	901131	901186	901240	901295	901349	901404	55
797	901458	901513	901567	901622	901676	901731	901785	901840	901894	901948	54
798	902003	902057	902112	902166	902221	902275	902329	902384	902438	902492	54
799	902547	902601	902655	902710	902764	902818	902873	902927	902981	903036	54
800	903090	903144	903199	903253	903307	903361	903416	903470	903524	903578	54
801	903633	903687	903741	903795	903849	903904	903958	904012	904066	904120	54
802	904174	904229	904283	904337	904391	904445	904499	904553	904607	904661	54
803	904716	904770	904824	904878	904932	904986	905040	905094	905148	905202	54
804	905256	905310	905364	905418	905472	905526	905580	905634	905688	905742	54
805	905796	905850	905904	905958	906012	906066	906119	906173	906227	906281	54
806	906335	906389	906443	906497	906551	906604	906658	906712	906766	906820	54
807	906874	906927	906981	907035	907089	907143	907196	907250	907304	907358	54
808	907411	907465	907519	907573	907626	907680	907734	907787	907841	907895	54
809	907949	908002	908056	908110	908163	908217	908270	908324	908378	908431	54
810	908485	908539	908592	908646	908699	908753	908807	908860	908914	908967	54
811	909021	909074	909128	909181	909235	909289	909342	909396	909449	909503	54
812	909556	909610	909663	909716	909770	909823	909877	909930	909984	910037	53
813	910091	910144	910197	910251	910304	910358	910411	910464	910518	910571	53
814	910624	910678	910731	910784	910838	910891	910944	910998	911051	911104	53
815	911158	911211	911264	911317	911371	911424	911477	911530	911584	911637	53
816	911690	911743	911797	911850	911903	911956	912009	912063	912116	912169	53
817	912222	912275	912328	912381	912435	912488	912541	912594	912647	912700	53
818	912753	912806	912859	912913	912966	913019	913072	913125	913178	913231	54
819	913284	913337	913390	913443	913496	913549	913602	913655	913708	913761	53
820	913814	913867	913920	913973	914026	914079	914132	914184	914237	914290	53
821	914343	914396	914449	914502	914555	914608	914660	914713	914766	914819	53
822	914872	914925	914977	915030	915083	915136	915189	915241	915294	915347	53
823	915400	915453	915505	915558	915611	915664	915716	915769	915822	915875	53
824	915927	915980	916033	916085	916138	916191	916243	916296	916349	916401	53
825	916454	916507	916559	916612	916664	916717	916770	916822	916875	916927	53
826	916980	917033	917085	917138	917190	917243	917295	917348	917400	917453	53
827	917506	917558	917611	917663	917716	917768	917820	917873	917925	917978	52

COMMON LOGARITHMS OF NUMBERS (*continued*).

No.	0	1	2	3	4	5	6	7	8	9	D.
828	918030	918083	918135	918188	918240	918293	918345	918397	918450	918502	52
829	918555	918607	918659	918712	918764	918816	918869	918921	918973	919026	52
830	919078	919130	919183	919235	919287	919340	919392	919444	919496	919549	52
831	919601	919653	919706	919758	919810	919862	919914	919967	920019	920071	52
832	920123	920176	920228	920280	920332	920384	920436	920489	920541	920593	52
833	920645	920697	920749	920801	920853	920906	920958	921010	921062	921114	52
834	921166	921218	921270	921322	921374	921426	921478	921530	921582	921634	52
835	921686	921738	921790	921842	921894	921946	921998	922050	922102	922154	52
836	922206	922258	922310	922362	922414	922466	922518	922570	922622	922674	52
837	922725	922777	922829	922881	922933	922985	923037	923089	923140	923192	52
838	923244	923296	923348	923399	923451	923503	923555	923607	923658	923710	52
839	923762	923814	923865	923917	923969	924021	924072	924124	924176	924228	52
840	924279	924331	924383	924434	924486	924538	924589	924641	924693	924744	52
841	924796	924848	924899	924951	925003	925054	925106	925157	925209	925261	52
842	925312	925364	925415	925467	925518	925570	925621	925673	925725	925776	52
843	925828	925879	925931	925982	926034	926085	926137	926188	926240	926291	51
844	926342	926394	926445	926497	926548	926600	926651	926702	926754	926805	51
845	926857	926908	926959	927011	927062	927114	927165	927216	927268	927319	51
846	927370	927422	927473	927524	927576	927627	927678	927730	927781	927832	51
847	927883	927935	927986	928037	928088	928140	928191	928242	928293	928345	51
848	928396	928447	928498	928549	928601	928652	928703	928754	928805	928857	51
849	928908	928959	929010	929061	929112	929163	929215	929266	929317	929368	51
850	929419	929470	929521	929572	929623	929674	929725	929776	929827	929879	51
851	929930	929981	930032	930083	930134	930185	930236	930287	930338	930389	51
852	930440	930491	930542	930592	930643	930694	930745	930796	930847	930898	51
853	930949	931000	931051	931102	931153	931204	931254	931305	931356	931407	51
854	931458	931509	931560	931610	931661	931712	931763	931814	931865	931915	51
855	931966	932017	932068	932118	932169	932220	932271	932322	932372	932423	51
856	932474	932524	932575	932626	932677	932727	932778	932829	932879	932930	51
857	932981	933031	933082	933133	933183	933234	933285	933335	933386	933437	51
858	933487	933538	933589	933639	933699	933740	933791	933841	933892	933943	51
859	933993	934044	934094	934145	934195	934246	934296	934347	934397	934448	51
860	934498	934549	934599	934650	934700	934751	934801	934852	934902	934953	50
861	935003	935054	935104	935154	935205	935255	935306	935356	935406	935457	50
862	935507	935558	935608	935658	935709	935759	935809	935860	935910	935960	50
863	936011	936061	936111	936162	936212	936262	936313	936363	936413	936463	50
864	936514	936564	936614	936665	936715	936765	936815	936865	936916	936966	50
865	937016	937066	937117	937167	937217	937267	937317	937367	937418	937468	50
866	937518	937568	937618	937668	937718	937769	937819	937869	937919	937969	50
867	938019	938069	938119	938169	938219	938269	938320	938370	938420	938470	50
868	938520	938570	938620	938670	938720	938770	938820	938870	938920	938970	50
869	939020	939070	939120	939170	939220	939270	939320	939369	939419	939469	50
870	939519	939569	939619	939669	939719	939769	939819	939869	939918	939968	50
871	940018	940068	940118	940168	940218	940267	940317	940367	940417	940467	50
872	940516	940566	940616	940666	940716	940765	940815	940865	940915	940964	50
873	941014	941064	941114	941163	941213	941263	941313	941362	941412	941462	50
874	941511	941561	941611	941660	941710	941760	941809	941859	941909	941958	50
875	942008	942058	942107	942157	942207	942256	942306	942355	942405	942455	50
876	942504	942554	942603	942653	942702	942752	942801	942851	942901	942950	50
877	943000	943049	943099	943148	943198	943247	943297	943346	943396	943445	49
878	943495	943544	943593	943643	943692	943742	943791	943841	943890	943939	49
879	943989	944038	944088	944137	944186	944236	944285	944335	944384	944433	49
880	944483	944532	944581	944631	944680	944729	944779	944828	944877	944927	49
881	944976	945025	945074	945124	945173	945222	945272	945321	945370	945419	49
882	945469	945518	945567	945616	945665	945715	945764	945813	945862	945912	49
883	945961	946010	946059	946108	946157	946207	946256	946305	946354	946403	49
884	946452	946501	946551	946600	946649	946698	946747	946796	946845	946894	49
885	946943	946992	947041	947090	947140	947189	947238	947287	947336	947385	49
886	947434	947483	947532	947581	947630	947679	947728	947777	947826	947875	49
887	947924	947973	948022	948070	948119	948168	948217	948266	948315	948364	49

COMMON LOGARITHMS OF NUMBERS (*continued*).

No.	0	1	2	3	4	5	6	7	8	9	D.
888	948413	948462	948511	948560	948609	948657	948706	948755	948804	948853	49
889	948902	948951	948999	949048	949097	949146	949195	949244	949292	949341	49
890	949390	949439	949488	949536	949585	949634	949683	949731	949780	949829	49
891	949878	949926	949975	950024	950073	950121	950170	950219	950267	950316	49
892	950365	950414	950462	950511	950560	950608	950657	950706	950754	950803	49
893	950851	950900	950949	950997	951046	951095	951143	951192	951240	951289	49
894	951338	951386	951435	951483	951532	951580	951629	951677	951726	951775	49
895	951823	951872	951920	951969	952017	952066	952114	952163	952211	952260	48
896	952308	952356	952405	952453	952502	952550	952599	952647	952696	952744	48
897	952792	952841	952889	952938	952986	953034	953083	953131	953180	953228	48
898	953276	953325	953373	953421	953470	953518	953566	953615	953663	953711	48
899	953760	953808	953856	953905	953953	954001	954049	954098	954146	954194	48
900	954243	954291	954339	954387	954435	954484	954532	954580	954628	954677	48
901	954725	954773	954821	954869	954918	954966	955014	955062	955110	955158	48
902	955207	955255	955303	955351	955399	955447	955495	955543	955592	955640	48
903	955688	955736	955784	955832	955880	955928	955976	956024	956072	956120	48
904	956168	956216	956265	956313	956361	956409	956457	956505	956553	956601	48
905	956649	956697	956745	956793	956840	956888	956936	956984	957032	957080	48
906	957128	957176	957224	957272	957320	957368	957416	957464	957512	957559	48
907	957607	957655	957703	957751	957799	957847	957894	957942	957990	958038	48
908	958086	958134	958181	958229	958277	958325	958373	958421	958468	958516	48
909	958564	958612	958659	958707	958755	958803	958850	958898	958946	958994	48
910	959041	959089	959137	959185	959232	959280	959328	959375	959423	959471	48
911	959518	959566	959614	959661	959709	959757	959804	959852	959900	959947	48
912	959995	960042	960090	960138	960185	960233	960281	960328	960376	960423	48
913	960471	960518	960566	960613	960661	930709	960756	960804	960851	960894	48
914	960946	960994	961041	961089	961136	961184	961231	961279	961326	961374	47
915	961421	961469	961516	961563	961611	961658	961706	961753	961801	961848	47
916	961895	961943	961990	962038	962085	962132	962180	962227	962275	962325	47
917	962369	962417	962464	962511	962559	962606	962653	962701	962748	962795	47
918	962843	962890	962937	962985	963032	963079	963126	963174	963221	963268	47
919	963316	963363	963410	963457	963504	963552	963599	963646	963693	963741	47
920	963788	963835	963882	963929	963977	964024	964071	964118	964165	964212	47
921	964260	964307	964354	964401	964448	964495	964542	964590	964637	964684	47
922	964731	964778	964825	964872	964919	964966	965013	965061	965108	965155	47
923	965202	965249	965296	965343	965390	965437	965484	965531	965578	965625	47
924	965672	965719	965766	965813	965860	965907	965954	966001	966048	966095	47
925	966142	966189	966236	966283	966329	966376	966423	966470	966517	966564	47
926	966611	966658	966705	966752	966799	966845	966892	966939	966986	967033	47
927	967080	967127	967173	967220	967267	967314	967361	967408	967454	967501	47
928	967548	967595	967642	967688	967735	967782	967829	967875	967922	967969	47
929	968016	968062	968109	968156	968203	968249	968296	968343	968390	968436	47
930	968483	968530	968576	968623	968670	968716	968763	968810	968856	968903	47
931	968950	968996	969043	969090	969136	969183	969229	969276	969323	969369	47
932	969416	969462	969509	969556	969602	969649	969695	969742	969789	969835	47
933	969882	969928	969975	970021	970068	970114	970161	970207	970254	970300	47
934	970347	970393	970440	970486	970533	970579	970626	970672	970719	970765	46
935	970812	970858	970904	970951	970997	971044	971090	971137	971183	971229	46
936	971276	971322	971369	971415	971461	971508	971554	971601	971647	971693	46
937	971740	971786	971832	971879	971925	971971	972018	972064	972110	972157	46
938	972203	972249	972295	972342	972388	972434	972481	972527	972573	972619	46
939	972666	972712	972758	972804	972851	972897	972943	972989	973035	793082	46
940	973128	973174	973220	973266	973313	973359	973405	973451	973497	973543	46
941	973590	973636	973682	973728	973774	973820	973866	973913	973959	974005	46
942	974051	974097	974143	974189	974235	974281	974327	974374	974420	974466	46
943	974512	974558	974604	974650	974696	974742	974798	974834	974880	974926	46
944	974972	975018	975064	975110	975156	975202	975248	975294	975340	975386	46
945	975432	975478	975524	975570	975616	975662	975707	975753	975799	975845	46
946	975891	975937	975983	976029	976075	976121	976167	976212	976258	976304	46
947	976350	976396	976442	976488	976533	976579	976625	976671	976717	976763	46

COMMON LOGARITHMS OF NUMBERS (*continued*).

No.	0	1	2	3	4	5	6	7	8	9	D.
948	976808	976854	976900	976946	976992	977037	977083	977129	977175	977220	46
949	977266	977312	977358	977403	977449	977495	977541	977586	977632	977678	46
950	977724	977769	977815	977861	977906	977952	977998	978043	978089	978135	46
951	978181	978226	978272	978317	978363	978409	978454	978500	978546	978591	46
952	978637	978683	978728	978774	978819	978865	978911	978956	979002	979047	46
953	979093	979138	979184	979230	979275	979321	979366	979412	979457	979503	46
954	979548	979594	979639	979685	979730	979776	979821	979867	979912	979958	46
955	980003	980049	980094	980140	980185	980231	980276	980322	980367	980412	45
956	980458	980503	980549	980594	980640	980685	980730	980776	980821	980867	45
957	980912	980957	981003	981048	981093	981139	981184	981229	981275	981320	45
958	981366	981411	981456	981501	981547	981592	981637	981683	981728	981773	45
959	981819	981864	981909	981954	982000	982045	982090	982135	982181	982226	45
960	982271	982316	982362	982407	982452	982497	982543	982588	982633	982678	45
961	982723	982769	982814	982859	982904	982949	982994	983040	983085	983130	45
962	983175	983220	983265	983310	983356	983401	983446	983491	983536	983581	45
963	983626	983671	983716	983762	983807	983852	983897	983942	983987	984032	45
964	984077	984122	984167	984212	984257	984302	984347	984392	984437	984482	45
965	984527	984572	984617	984662	984707	984752	984797	984842	984887	984932	45
966	984977	985022	985067	985112	985157	985202	985247	985292	985337	985382	45
967	985426	985471	985516	985561	985606	985651	985696	985741	985786	985830	45
968	985875	985920	985965	986010	986055	986100	986144	986189	986234	986279	45
969	986324	986369	986413	986458	986503	986548	986593	986637	986682	986727	45
970	986772	986817	986861	986906	986951	986996	987040	987085	987130	987175	45
971	987219	987264	987309	987353	987398	987443	987488	987532	987577	987622	45
972	987666	987711	987756	987800	987845	987890	987934	987979	988024	988068	45
973	988113	988157	988202	988247	988291	988336	988381	988425	988470	988514	45
974	988559	988604	988648	988693	988737	988782	988826	988871	988916	988960	45
975	989005	989049	989094	989138	989183	989227	989272	989316	989361	989405	45
976	989450	989494	989539	989583	989628	989672	989717	989761	989806	989850	44
977	989895	989939	989983	990028	990072	990117	990161	990206	990250	990294	44
978	990339	990383	990428	990472	990516	990561	990605	990650	990694	990738	44
979	990783	990827	990871	990916	990960	991004	991049	991093	991137	991182	44
980	991226	991270	991315	991359	991403	991448	991492	991536	991580	991625	44
981	991669	991713	991758	991802	991846	991890	991935	991979	992023	992067	44
982	992111	992156	992200	992244	992288	992333	992377	992421	992465	992509	44
983	992554	992598	992642	992686	992730	992774	992819	992863	992907	992951	44
984	992995	993039	993083	993127	993172	993216	993260	993304	993348	993392	44
985	993436	993480	993524	993568	993613	993657	993701	993745	993789	993833	44
986	993877	993921	993965	994009	994053	994097	994141	994185	994229	994273	44
987	994317	994361	994405	994449	994493	994537	994581	994625	994669	994713	44
988	994757	994801	994845	994889	994933	994977	995021	995065	995108	995152	44
989	995196	995240	995284	995328	995372	995416	995460	995504	995547	995591	44
990	995635	995679	995723	995767	995811	995854	995898	995942	995986	996030	44
991	996074	996117	996161	996205	996249	996293	996337	996380	996424	996468	44
992	996512	996555	996599	996643	996687	996731	996774	996818	996862	996906	44
993	996949	996993	997037	997080	997124	997168	997212	997255	997299	997343	44
994	997386	997430	997474	997517	997561	997605	997648	997692	997736	997779	44
995	997823	997867	997910	997954	997998	998041	998085	998129	998172	998216	44
996	998259	998303	998347	998390	998434	998477	998521	998564	998608	998652	44
997	998695	998739	998782	998826	998869	998913	998956	999000	999043	999087	44
998	999131	999174	999218	999261	999305	999348	999392	999435	999479	999522	44
999	999565	999609	999652	999696	999739	999783	999826	999870	999913	999957	43

Characteristic of log. of number containing one or more integral figs. is one *less* than the number of integral figs., and is positive.

Characteristic of log. of a number wholly decimal is one *more* than number of noughts at commencement of decimal, and is negative.

To multiply by logs., add logs., and find corresponding numbers.

To divide by logs., subtract logs., and find corresponding numbers.

To extract the root, divide log. by index, and find corresponding numbers.

To obtain any power, multiply log. by index, and find corresponding numbers.

Use of Differences.

Ex. 1.—Find the log. of 32685.

Difference (D) for 326 = 133 | log. 32680 = 4·514282†

133 × 5 = 665*

4·5143485

In all cases last fig. of * must be set one beyond last fig. of †.

Ex. 2.—Find number corresponding to log. 3·774743

Given log. . . . 3·774743

Nearest log. in table . . 3·774736 = log. 5953

Divide by Difference (D) 73)7 ·01

Required number = 5953·1

Hyperbolic or Natural Logarithms.

Hyp. log. = Common log. × 2·30258509. Common log. = Hyp. log. × ·43429448

No.	~0·0	0·1	0·2	0·3	0·4	0·5	0·6	0·7	0·8	0·9
0	$-\infty$	$\bar{3}$·69742	$\bar{2}$·39056	$\bar{2}$·79602	$\bar{1}$·08371	$\bar{1}$·30685	$\bar{1}$·48918	$\bar{1}$·64332	$\bar{1}$·77685	$\bar{1}$·89463
1	0·00000	$\bar{0}$·09530	0·18213	0·26234	0·33646	0·40546	0·46998	0·53063	0·58776	0·64181
2	0·69315	0·74190	0·78843	0·83287	0·87544	0·91629	0·95548	0·99323	1·02962	1·06473
3	1·09861	1·13140	1·16314	1·19594	1·22373	1·25276	1·28090	1·30834	1·33406	1·36099
4	1·38629	1·41096	1·43505	1·45859	1·48161	1·50408	1·52603	1·54753	1·56859	1·58922
5	1·60944	1·62922	1·64865	1·66770	1·68633	1·70475	1·72276	1·74046	1·75785	1·77495
6	1·79175	1·80827	1·82545	1·84055	1·85629	1·87180	1·88658	1·90218	1·91689	1·93149
7	1·94591	1·96006	1·97406	1·98787	2·00149	2·01490	2·02816	2·04115	2·05415	2·06690
8	2·07944	2·09190	2·10418	2·11632	2·12830	2·14007	2·15082	2·16338	2·17482	2·18615
9	2·19722	2·20837	2·21932	2·23014	2·24085	2·25129	2·26191	2·27228	2·28255	2·29171

No.	0	1	2	3	4	5	6	7	8	9
10	2·30258	2·39789	2·48491	2·56494	2·63906	2·70805	2·77259	2·83321	2·89037	2·94444
20	·99573	3·04452	3·09104	3·13549	3·17805	3·21888	3·25810	3·29584	3·33220	3·36730
30	3·40120	·43399	·46574	·49651	·52636	·55535	·58352	·61092	·63759	·66356
40	·68888	·71357	·73767	·76120	·78419	·80666	·82864	·85015	·87120	·89182
50	·91202	·93183	·95124	·97029	·98898	4·00733	4·02535	4·04305	4·06044	4·07754
60	4·09434	4·11087	4·12713	4·14313	4·15888	·17439	·18965	·20469	·21951	·23411
70	·24849	·26268	·27667	·29046	·30406	·31749	·33073	·34380	·35671	·36945
80	·38203	·39445	·40672	·41884	·43082	·44265	·45435	·46591	·47734	·48864
90	·49981	·51086	·52179	·53260	·54329	·55388	·56435	·57471	·58497	·59512
100	4·60517	4·61512	4·62497	4·63473	4·64439	4·65396	4·66343	4·67283	4·68213	4·69135
110	·70048	·70953	·71849	·72739	·73619	·74493	·75359	·76217	·77068	·77912
120	·78749	·79579	·80402	·81218	·82028	·82831	·83628	·84418	·85203	·85981
130	·86753	·87519	·88280	·89035	·89784	·90527	·91265	·91998	·92725	·93447
140	·94164	·94876	·95583	·96284	·96981	·97673	·98360	·99043	·99721	5·00394
150	5·01063	5·01728	5·02388	5·03044	5·03695	5·04342	5·04985	5·05624	5·06259	5·06890
160	·07517	·08140	·08760	·09375	·09986	·10594	·11199	·11799	·12396	·12990
170	·13580	·14166	·14749	·15329	·15905	·16478	·17048	·17615	·18178	·18738
180	·19295	·19850	·20400	·20948	·21493	·22035	·22574	·23111	·23644	·24175
190	·24702	·25227	·25750	·26269	·26786	·27300	·27811	·28320	·28826	·29330
200	5·29832	5·30330	5·30826	5·31320	5·31812	5·32301	5·32787	5·33272	5·33754	5·34233
210	·34711	·35186	·35658	·36129	·36597	·37064	·37528	·37989	·38450	·38907
220	·39363	·39816	·40268	·40717	·41164	·41610	·42053	·42495	·42934	·43372
230	·43808	·44242	·44674	·45104	·45532	·45958	·46383	·46806	·47227	·47646
240	·48064	·48479	·48893	·49306	·49716	·50126	·50533	·50939	·51343	·51745
250	5·52146	5·52545	5·52943	5·53339	5·53733	5·54126	5·54517	5·54907	5·55296	5·55683
260	·56068	·56452	·56834	·57215	·57595	·57973	·58349	·58725	·59098	·59471
270	·59842	·60212	·60580	·60947	·61313	·61677	·62040	·62402	·62762	·63121
280	·63479	·63835	·64191	·64544	·64897	·65249	·65599	·65948	·66296	·66642
290	·66988	·67332	·67675	·68017	·68358	·68697	·69036	·69373	·69709	·70044
300	5·70378	5·70711	5·71043	5·71373	5·71703	5·72031	5·72358	5·72685	5·73010	5·73334
310	·73657	·73979	·74300	·74620	·74939	·75257	·75574	·75890	·76205	·76519
320	·76832	·77144	·77455	·77765	·78074	·78382	·78690	·78996	·79301	·79606
330	·79909	·80212	·80513	·80814	·81114	·81413	·81711	·82008	·82304	·82600
340	·82894	·83188	·83481	·83773	·84064	·84354	·84644	·84932	·85220	·85507
350	5·85793	5·86078	5·86363	5·86647	5·86929	5·87212	5·87493	5·87773	5·88053	5·88332

HYPERBOLIC FUNCTIONS.

(G. A. Burls.)

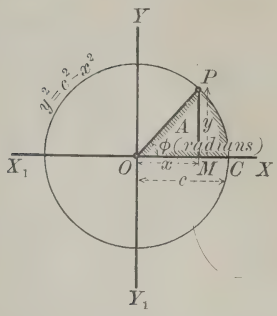


FIG. 107.

In the circle (fig. 107) $y^2=c^2-x^2$ if A denotes the area of the sector OCP and if ϕ be the angle COP, *in radians*, then :—

$$\phi = \frac{2}{c^2}.A \qquad (1)$$

and, by definition, we have also :—

$$\left.\begin{aligned} \frac{y}{c} &= \frac{PM}{OC} = \sin\phi \\ \frac{x}{c} &= \frac{OM}{OC} = \cos\phi \\ \frac{y}{x} &= \frac{PM}{OM} = \tan\phi \end{aligned}\right\} \qquad (2)$$

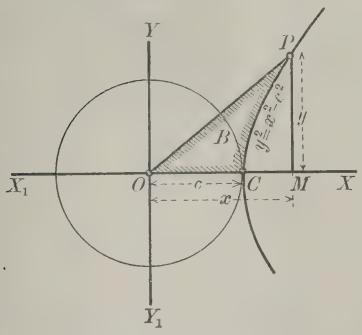


FIG. 108.

Similarly, in the rectangular hyperbola (fig. 108) $y^2=x^2-c^2$ it is found convenient to define corresponding ratios thus :—

$$\left.\begin{aligned} \frac{y}{c} &= \frac{PM}{OC} = \text{sinh.}\,\theta \\ \frac{x}{c} &= \frac{OM}{OC} = \text{cosh.}\,\theta \\ \frac{y}{x} &= \frac{PM}{OM} = \text{tanh.}\,\theta \end{aligned}\right\} \qquad (3)$$

Where θ is a quantity such that if B be the area of the hyperbolic sector OCP :—

$$\theta = \frac{2}{c^2}.B \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (4)$$

In ordinary notation, $\phi = \sin^{-1}\frac{y}{c}$; similarly it may be shown that $\theta = \text{Log}_e\left(\frac{x+y}{c}\right)$.

Just as in the ordinary trigonometrical or 'circular' functions we have the fundamental identities :—

$$\left.\begin{aligned} \cos^2\phi + \sin^2\phi &= 1 \\ \sec^2\phi &= 1 + \tan^2\phi \\ \text{cosec}^2\phi &= 1 + \cot^2\phi \end{aligned}\right\} \text{etc.,}$$

so also in the hyperbolic functions we have :—

$$\left.\begin{aligned} \cosh^2\theta - \sinh^2\theta &= 1 \\ \text{sech}^2\theta &= 1 - \tanh^2\theta \\ \text{cosech}^2\theta &= \coth^2\theta - 1 \end{aligned}\right\} \text{etc.}$$

Moreover, the exponential values of the functions show corresponding similarities ; thus we have, ι denoting $\sqrt{-1}$:—

$$\sin\phi = \frac{1}{2\iota}\left\{e^{\iota\phi} - e^{-\iota\phi}\right\} = \phi - \frac{\phi^3}{\lfloor 3} + \frac{\phi^5}{\lfloor 5} - \frac{\phi^7}{\lfloor 7} + \cdots$$

while :

$$\sinh\theta = \frac{1}{2}\left\{e^{\theta} - e^{-\theta}\right\} = \theta + \frac{\theta^3}{\lfloor 3} + \frac{\theta^5}{\lfloor 5} + \frac{\theta^7}{\lfloor 7} + \cdots$$

And again :

$$\cos\phi = \frac{1}{2}\left\{e^{\iota\phi} + e^{-\iota\phi}\right\} = 1 - \frac{\phi^2}{\lfloor 2} + \frac{\phi^4}{\lfloor 4} - \frac{\phi^6}{\lfloor 6} + \cdots$$

while :

$$\cosh\theta = \frac{1}{2}\left\{e^{\theta} + e^{-\theta}\right\} = 1 + \frac{\theta^2}{\lfloor 2} + \frac{\theta^4}{\lfloor 4} + \frac{\theta^6}{6} + \cdots$$

Relation between the *quantity* θ and the *radian-angle* ϕ :—

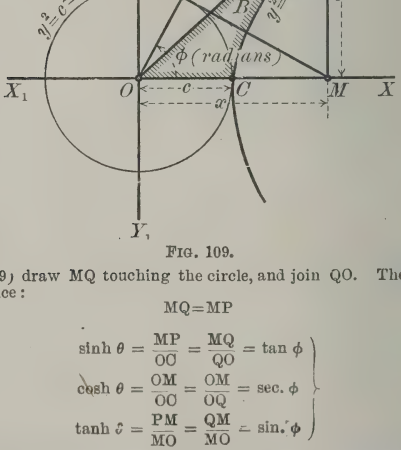


FIG. 109.

From M (fig. 109) draw MQ touching the circle, and join QO. Then $MQ^2 = OM^2 - OQ^2 = x^2 - c^2 = y^2 = PM^2$; hence :

$$MQ = MP$$

Consequently :

$$\left.\begin{aligned} \sinh\theta &= \frac{MP}{OC} = \frac{MQ}{QO} = \tan\phi \\ \cosh\theta &= \frac{OM}{OC} = \frac{OM}{OQ} = \sec.\phi \\ \tanh\theta &= \frac{PM}{MO} = \frac{QM}{MO} = \sin.\phi \end{aligned}\right\}$$

Discussion of many problems is much facilitated by use of hyperbolic functions ; see, for example, 'The Catenary,' p. 35.

TABLE OF EXPONENTIAL AND HYPERBOLIC FUNCTIONS.

θ	e^{θ}	$e^{-\theta}$	cosh θ*	sinh θ†	θ	e^{θ}	$e^{-\theta}$	cosh θ*	sinh θ†
·00	1·00000	1·00000	1·00000	·00000	·60	1·82212	·54881	1·18547	·63665
·01	1·01005	·99005	1·00005	·01000	·61	1·84043	·54335	1·19189	·64854
·02	1·02021	·98020	1·00020	·02000	·62	1·85893	·53794	1·19844	·66049
·03	1·03045	·97045	1·00045	·03000	·63	1·87761	·53259	1·20510	·67251
·04	1·04081	·96080	1·00080	·04001	·64	1·89648	·52729	1·21189	·68459
·05	1·05127	·95123	1·00125	·05002	·65	1·91554	·52205	1·21879	·69675
·06	1·06184	·94177	1·00180	·06004	·66	1·93479	·51685	1·22582	·70897
·07	1·07251	·93239	1·00245	·07006	·67	1·95424	·51171	1·23297	·72126
·08	1·08329	·92312	1·00320	·08009	·68	1·97388	·50662	1·24025	·73363
·09	1·09417	·91393	1·00405	·09012	·69	1·99372	·50158	1·24765	·74607
·10	1·10517	·90484	1·00500	·10017	·70	2·01375	·49659	1·25517	·75858
·11	1·11628	·89583	1·00606	·11022	·71	2·03399	·49164	1·26282	·77117
·12	1·12750	·88692	1·00721	·12029	·72	2·05443	·48675	1·27059	·78384
·13	1·13883	·87810	1·00846	·13037	·73	2·07508	·48191	1·27850	·79659
·14	1·15027	·86936	1·00982	·14046	·74	2·09594	·47711	1·28652	·80941
·15	1·16183	·86071	1·01127	·15056	·75	2·11700	·47237	1·29468	·82232
·16	1·17351	·85214	1·01283	·16068	·76	2·13828	·46767	1·30297	·83530
·17	1·18530	·84366	1·01448	·17082	·77	2·15977	·46301	1·31139	·84838
·18	1·19722	·83527	1·01624	·18097	·78	2·18147	·45841	1·31994	·86153
·19	1·20925	·82696	1·01810	·19115	·79	2·20340	·45384	1·32862	·87478
·20	1·22140	·81873	1·02007	·20134	·80	2·22554	·44933	1·33743	·88811
·21	1·23368	·81058	1·02213	·21155	·81	2·24791	·44486	1·34638	·90152
·22	1·24608	·80252	1·02430	·22178	·82	2·27050	·44043	1·35547	·91503
·23	1·25860	·79453	1·02657	·23203	·83	2·29332	·43605	1·36468	·92863
·24	1·27125	·78663	1·02894	·24231	·84	2·31637	·43171	1·37404	·94233
·25	1·28403	·77880	1·03141	·25261	·85	2·33965	·42741	1·38353	·95612
·26	1·29693	·77105	1·03399	·26294	·86	2·36316	·42316	1·39316	·97000
·27	1·30996	·76338	1·03667	·27329	·87	2·38691	·41895	1·40293	·98398
·28	1·32313	·75578	1·03946	·28367	·88	2·41090	·41478	1·41284	·99806
·29	1·33643	·74826	1·04235	·29408	·89	2·43513	·41066	1·42289	1·01224
·30	1·34986	·74082	1·04534	·30452	·90	2·45960	·40657	1·43309	1·02652
·31	1·36343	·73345	1·04844	·31499	·91	2·48432	·40252	1·44342	1·04090
·32	1·37713	·72615	1·05164	·32549	·92	2·50929	·39852	1·45390	1·05539
·33	1·39097	·71892	1·05495	·33602	·93	2·53451	·39455	1·46453	1·06998
·34	1·40495	·71177	1·05836	·34659	·94	2·55998	·39063	1·47530	1·08468
·35	1·41907	·70469	1·06188	35719	·95	2·58571	·38674	1·48623	1·09948
·36	1·43333	·69768	1·06550	·36783	·96	2·61170	·38289	1·49729	1·11440
·37	1·44773	·69073	1·06923	·37850	·97	2·63794	·37908	1·50851	1·12943
·38	1·46228	·68386	1·07307	·38921	·98	2·66446	·37531	1·51988	1·14457
·39	1·47698	·67706	1·07702	·39996	·99	2·69123	·37158	1·53141	1·15383
·40	1·49182	·67032	1·08107	·41075	1·00	2·71828	·36788	1·54308	1·17520
·41	1·50682	·66365	1·08523	·42158	1·01	2·74560	·36422	1·55491	1·19069
·42	1·52196	·65705	1·08950	·43246	1·02	2·77319	·36059	1·56689	1·20630
·43	1·53726	·65051	1·09388	·44337	1·03	2·80107	·35701	1·57904	1·22203
·44	1·55271	·64404	1·09837	·45434	1·04	2·82922	·35345	1·59134	1·23788
·45	1·56831	·63763	1·10297	·46534	1·05	2·85765	·34994	1·60379	1·25386
·46	1·58407	·63128	1·10768	·47640	1·06	2·88637	·34646	1·61641	1·26996
·47	1·59999	·62500	1·11250	·48750	1·07	2·91538	·34301	1·62919	1·28619
·48	1·61607	·61878	1·11743	·49865	1·08	2·94468	·33960	1·69214	1·30254
·49	1·63232	·61263	1·12247	·50985	1·09	2·97427	·33622	1·65525	1·31903
·50	1·64872	·60653	1·12763	·52110	1·10	3·00417	·33287	1·66852	1·33565
·51	1·66529	·60050	1·13289	·53240	1·11	3·03436	·32956	1·68196	1·35240
·52	1·68203	·59452	1·13827	·54375	1·12	3·06485	·32628	1·69557	1·36929
·53	1·69893	·58860	1·14377	·55516	1·13	3·09566	·32303	1·70934	1·38631
·54	1·71601	·58275	1·14938	·56663	1·14	3·12677	·31982	1·72329	1·40347
·55	1·73325	·57695	1·15510	·57815	1·15	3·15819	·31664	1·73741	1·42078
·56	1·75067	·57121	1·16094	·58973	1·16	3·18993	·31349	1·75171	1·43822
·57	1·76827	·56553	1·16690	·60137	1·17	3·22199	·31037	1·76618	1·45581
·58	1·78604	·55990	1·17297	·61307	1·18	3·25437	·30728	1·78083	1·47355
·59	1·80399	·55433	1·17916	·62483	1·19	3·28708	·30422	1·79565	1·49143

* $\cosh\theta = \frac{e^{\theta}+e^{-\theta}}{2}$. † $\sinh\theta = \frac{e^{\theta}-e^{-\theta}}{2}$

EXPONENTIAL AND HYPERBOLIC FUNCTIONS—*continued.*

θ	e^{θ}	$e^{-\theta}$	cosh θ*	sinh θ†	θ	e^{θ}	$e^{-\theta}$	cosh θ*	sinh θ†
1·20	3·32012	·30119	1·81066	1·50946	1·81	6·11045	·16365	3·13705	2·97340
1·21	3·35348	·29820	1·82584	1·52764	1·82	6·17186	·16203	3·16694	3·00492
1·22	3·38719	·29523	1·84121	1·54598	1·83	6·23389	·16041	3·19715	3·03674
1·23	3·42123	·29229	1·85676	1·56447	1·84	6·29654	·15882	3·22768	3·06886
1·24	3·45561	·28938	1·87250	1·58311	1·85	6·35982	·15724	3·25853	3·10129
1·25	3·49034	·28650	1·88842	1·60192	1·86	6·42374	·15567	3·28970	3·13403
1·26	3·52542	·28365	1·90454	1·62088	1 87	6·48830	·15412	3·32121	3·16709
1·27	3·56085	·28083	1·92084	1·64001	1·88	6·55350	·15259	3·35305	3·20046
1·28	3·59664	·27804	1·93734	1·65930	1·89	6·61937	·15107	3·38522	3·23415
1·29	3·63279	·27527	1·95403	1·67876	1·90	6·68589	·14957	3·41773	3·26816
1·30	3·66930	·27253	1·97091	1·69838	1·91	6·75309	·14808	3·45058	3·30250
1·31	3·70617	·26982	1·98800	1·71818	1·92	6·82096	·14661	3·48378	3·33718
1·32	3·74342	·26714	2·00528	1·73814	1·93	6·88951	·14515	3·51733	3·37218
1·33	3·78104	·26448	2·02276	1·75828	1·94	6·95875	·14370	3·55123	3·40752
1·34	3·81904	·26185	2·04044	1·77860	1·95	7·02869	·14227	3·58548	3·44321
1·35	3·85743	·25924	2·05833	1·79909	1·96	7·09933	·14086	3 62009	3·47923
1·36	3·89619	·25666	2·07643	1·81977	1·97	7·17068	·13946	3·65507	3·51561
1·37	3·93535	·25411	2·09473	1·84062	1·98	7·24274	·13807	3·69041	3·55234
1·38	3·97490	·25158	2·11324	1·86166	1·99	7·31553	·13670	3·72611	3·58942
1·39	4·01485	·24908	2·13196	1·88289	2·0	7·38906	·13534	3·76220	3·62686
1·40	4·05520	·24660	2·15090	1·90430	2·1	8·16617	·12246	4·14431	4·02186
1·41	4·09596	·24414	2·17005	1·92591	2·2	9·02501	·11080	4·56791	4·45711
1·42	4·13712	·24171	2·18942	1·94770	2·3	9·97418	·10026	5·03722	4·93696
1·43	4·17870	·23931	2·20900	1·96970	2·4	11·0232	·09072	5·55695	5·46623
1·44	4·22070	·23693	2·22881	1·99188	2·5	12·1825	·08208	6·13229	6·05020
1·45	4·26311	·23457	2·24884	2·01428	2·6	13·4637	·07427	6·76900	6·69473
1·46	4·30596	·23224	2·26910	2·03686	2·7	14·8797	·06721	7·47347	7·40626
1·47	4·34924	·22993	2·28958	2·05965	2·8	16·4446	·06081	8·25273	8·19192
1·48	4·39295	·22764	2·31029	2·08265	2·9	18·1741	·05502	9·11458	9·05956
1·49	4·43710	·22537	2·33123	2·10586	3·0	20·0855	·04979	10·0677	10·0179
1·50	4·48169	·22313	2·35241	2·12928	3·1	22·1980	·04505	11·1215	11·0765
1·51	4·52673	·22091	2·37382	2·15291	3·2	24·5325	·04076	12·2866	12·2459
1·52	4·57223	·21871	2·39547	2·17676	3·2	27·1126	·03688	13·5747	13·5379
1·53	4·61818	·21654	2·41736	2·20082	3·4	29·9641	·03337	14·9987	14·9654
1·54	4·66459	·21438	2·43949	2·22510	3·5	33·1155	·03020	16·5728	16·5426
1·55	4·71147	·21225	2·46186	2·24961	3·6	36·5982	·02732	18·3128	18·2855
1·56	4·75882	·21014	2·48448	2·27434	3·7	40·4473	·02472	20·2360	20·2113
1·57	4·80665	·20805	2·50735	2·29930	3·8	44·7012	·02237	22·3618	22·3394
1·58	4·85496	·20598	2·53047	2·32449	3·9	49·4024	·02024	24·7113	24·6911
1·59	4·90375	·20393	2·55384	2·34991	4·0	54·5982	·01832	27·3082	27·2899
1·60	4·95303	·20190	2·57746	2·37557	4·1	60·3403	·01657	30·1784	30·1619
1·61	5·00281	·19989	2·60135	2·40146	4·2	66·6863	·01500	33·3507	33·3357
1·62	5·05309	·19790	2·62549	2·42760	4·3	73·6998	·01357	36·8567	36·8431
1·63	5·10387	·19593	2·64990	2·45397	4·4	81·4509	·01228	40·7316	40·7193
1·64	5·15517	·19398	2·67457	2·48059	4·5	90·0171	·01111	45·0141	45·0030
1·65	5·20698	·19205	2·69951	2·50746	4·6	99·4843	·01005	49·7472	49·7371
1·66	5·25931	·19014	2·72472	2·53459	4·7	109·947	·00910	54·9781	54·9690
1·67	5·31217	·18825	2·75021	2·56196	4·8	121·510	·00823	60·7593	60·7511
1·68	5·36556	·18637	2·77596	2·58959	4·9	134·290	·00745	67·1486	67·1412
1·69	5·41948	·18452	2·80200	2·61748	5·0	148·413	·00674	74·2099	74·2032
1·70	5·47395	·18268	2·82832	2·64563	5·1	164·022	·00610	82·0140	82·0079
1·71	5·52896	·18087	2·85491	2·67405	5·2	181·272	·00552	90·6388	90·6333
1·72	5·58453	·17907	2·88180	2·70273	5·2	200·337	·00499	100·171	100·167
1·73	5·64065	·17728	2·90897	2·73168	5·4	221·406	·00452	110·705	110·701
1·74	5·69734	·17552	2·93643	2·76091	5·5	244·692	·00409	122·348	122·344
1·75	5·75460	·17377	2·96419	2·79041	5·6	270·426	·00370	135·215	135·211
1·76	5·81244	·17204	2·99224	2·82020	5·7	298·867	·00335	149·435	149·432
1·77	5·87085	·17033	3·02059	2·85026	5·8	330·300	·00303	165·151	165·148
1·78	5·92986	·16864	3·04925	2·88061	5·9	365·037	·00274	182·520	182·517
1·79	5·98945	·16696	3·07821	2·91125	6·0	403·429	·00248	201·716	201·713
1·80	6·04965	·16530	3·10747	2·94217					

* $\cosh\theta = \frac{e^{\theta}+e^{-\theta}}{2}$. † $\sinh\theta = \frac{e^{\theta}-e^{-\theta}}{2}$

DECIMAL EQUIVALENTS OF FRACTIONS.

Sixty-fourths, Thirty-seconds, Sixteenths, Eighths, and Quarters.

Fraction.	Decimal.	Fraction.	Decimal.	Fraction.	Decimal.	Fraction.	Decimal.
$\frac{1}{64}$	·015625	$\frac{17}{64}$	·265625	$\frac{33}{64}$	·515625	$\frac{49}{64}$	·765625
$\frac{2}{64}$ or $\frac{1}{32}$	·031250	$\frac{18}{64}$ or $\frac{9}{32}$	·281250	$\frac{34}{64}$ or $\frac{17}{32}$	·531250	$\frac{50}{64}$ or $\frac{25}{32}$	·781250
$\frac{3}{64}$	·046875	$\frac{19}{64}$	·296875	$\frac{35}{64}$	·546875	$\frac{51}{64}$	·796875
$\frac{4}{64}$ or $\frac{1}{16}$	·062500	$\frac{20}{64}$ or $\frac{5}{16}$	·312500	$\frac{36}{64}$ or $\frac{9}{16}$	·562500	$\frac{52}{64}$ or $\frac{13}{16}$	·812500
$\frac{5}{64}$	·078125	$\frac{21}{64}$	·328125	$\frac{37}{64}$	·578125	$\frac{53}{64}$	·828125
$\frac{6}{64}$ or $\frac{3}{32}$	·093750	$\frac{22}{64}$ or $\frac{11}{32}$	·343750	$\frac{38}{64}$ or $\frac{19}{32}$	·593750	$\frac{54}{64}$ or $\frac{27}{32}$	·843750
$\frac{7}{64}$	·109375	$\frac{23}{64}$	·359375	$\frac{39}{64}$	·609375	$\frac{55}{64}$	·859375
$\frac{8}{64}$ or $\frac{1}{8}$	·125000	$\frac{24}{64}$ or $\frac{3}{8}$	·375000	$\frac{40}{64}$ or $\frac{5}{8}$	·625000	$\frac{56}{64}$ or $\frac{7}{8}$	·875000
$\frac{9}{64}$	·140625	$\frac{25}{64}$	·390625	$\frac{41}{64}$	·640625	$\frac{57}{64}$	·890625
$\frac{10}{64}$ or $\frac{5}{32}$	·156250	$\frac{26}{64}$ or $\frac{13}{32}$	·406250	$\frac{42}{64}$ or $\frac{21}{32}$	·656250	$\frac{58}{64}$ or $\frac{29}{32}$	·906250
$\frac{11}{64}$	·171875	$\frac{27}{64}$	·421875	$\frac{43}{64}$	·671875	$\frac{59}{64}$	·921875
$\frac{12}{64}$ or $\frac{3}{16}$	·187500	$\frac{28}{64}$ or $\frac{7}{16}$	·437500	$\frac{44}{64}$ or $\frac{22}{32}$	·687500	$\frac{60}{64}$ or $\frac{15}{16}$	·937500
$\frac{13}{64}$	·203125	$\frac{29}{64}$	·453125	$\frac{45}{64}$	·703125	$\frac{61}{64}$	·953125
$\frac{14}{64}$ or $\frac{7}{32}$	·218750	$\frac{30}{64}$ or $\frac{15}{32}$	·468750	$\frac{46}{64}$ or $\frac{23}{32}$	·718750	$\frac{62}{64}$ or $\frac{31}{32}$	·968750
$\frac{15}{64}$	·234375	$\frac{31}{64}$	·484375	$\frac{47}{64}$	·734375	$\frac{63}{64}$	·984375
$\frac{16}{64}$ or $\frac{1}{4}$	·250000	$\frac{32}{64}$ or $\frac{1}{2}$	·500000	$\frac{48}{64}$ or $\frac{3}{4}$	·750000	1	1·000000

Twelfths, Sixths, and Thirds.

Fraction.	Decimal.	Fraction.	Decimal.	Fraction.	Decimal.	Fraction.	Decimal.
$\frac{1}{12}$	·083333	$\frac{4}{12}$ or $\frac{1}{3}$	·333333	$\frac{7}{12}$	·583333	$\frac{10}{12}$ or $\frac{5}{6}$	·833333
$\frac{2}{12}$ or $\frac{1}{6}$	·166667	$\frac{5}{12}$	·416667	$\frac{8}{12}$ or $\frac{2}{3}$	·666667	$\frac{11}{12}$	·916667
$\frac{3}{12}$ or $\frac{1}{4}$	·250000	$\frac{6}{12}$ or $\frac{1}{2}$	·500000	$\frac{9}{12}$ or $\frac{3}{4}$	·750000	1	1·000000

Fifths.

Fraction.	Decimal.	Fraction.	Decimal.	Fraction.	Decimal.	Fraction.	Decimal.
$\frac{1}{5}$	·200000	$\frac{2}{5}$	·400000	$\frac{3}{5}$	·600000	$\frac{4}{5}$	·800000

Sevenths.

Fraction.	Decimal.	Fraction.	Decimal.	Fraction.	Decimal.	Fraction.	Decimal.
$\frac{1}{7}$	·142857	$\frac{3}{7}$	·428571	$\frac{5}{7}$	·714285	—	—
$\frac{2}{7}$	·285714	$\frac{4}{7}$	·571428	$\frac{6}{7}$	·857142	—	—

Ninths.

Fraction.	Decimal.	Fraction.	Decimal.	Fraction.	Decimal.	Fraction.	Decimal.
$\frac{1}{9}$	·111111	$\frac{3}{9}$ or $\frac{1}{3}$	·333333	$\frac{5}{9}$	·555556	$\frac{7}{9}$	·777778
$\frac{2}{9}$	·222222	$\frac{4}{9}$	·444444	$\frac{6}{9}$ or $\frac{2}{3}$	·666667	$\frac{8}{9}$	·888889

THE SLIDE-RULE.

On the face of the ordinary (e.g. 10 in.) slide-rule, four scales, usually referred to as the A, B, C and D scales, are marked. A and D are on the rule, top and bottom, whilst B and C are marked upon the slide, and when the latter has not been moved either to the right or left, the divisions on A and B and also on C and D coincide. The graduation of the divisions of each of the scales is logarithmic, that is to say, the distance from the initial point of a scale to any number thereon represents the logarithm of that number.

The A and B scales are divided into primary graduations representing the logs of the numbers from unity to 100, and these divisions are each subdivided into ten secondary divisions. These, towards the left-hand side of the scales, are further subdivided, but as, in the progression towards the right-hand side, the primary divisions approach one another rapidly, it is not possible to carry the extreme sub-division throughout the scale. Inspection of any rule will show the extent to which such subdivision is practicable.

The C and D scales are divided similarly to the A and B scales, but here there are only ten primary divisions spread over the same length of scale as the 100 in the A and B scales. This admits of a greatly extended subdivision, affording a somewhat greater facility for accuracy in calculation. It may be observed here that the ratio between the two sets of scales involves the fact that the figures on the A and B scales are the squares of those on the C and D scales; conversely the figures on the C and D scales are of course the square roots of those on the A and B scales.

Most rules are also provided with a sliding runner, referred to as the 'Cursor,' which is enabled to slide along the length of the rule parallel to the scales. The cursor usually consists of a small frame carrying a glass window upon which a transverse hair line is marked, or else it is provided with four indices arranged in a transverse straight line. The cursor enables the figures or graduations of the slide to be set readily against those on the fixed scales, and also enables any reading to be marked temporarily during the manipulations of the rule.

It may be added that the extreme left- and right-hand graduations of the scales are referred to as the left- and right-hand indices respectively.

Multiplication.

$$(a \times b \times c \ldots n = x)$$

It is obvious that although the figures on the scales start with unity, any multiple or submultiple of the value of 10 may be assigned to the indices provided that such value is adhered to throughout each complete operation. This holds good whatever be the nature of the calculation involved.

To multiply, the left-hand index of the slide is set to the multiplicand on the rule, and against the multiplier on the slide will be read the product on the rule. In this operation the length equivalent to the log of the first number is added to the length corresponding to the log of the second. Should there be more than two factors, the result of the first setting as above is not read, but the cursor is set thereto and the slide index brought up to the cursor setting, when the product is read as before, and so on to any number of factors. As continuous progression of the slide from left to right would bring the ultimate reading beyond the scale, it should be noted that the right-hand index may be used to set to the cursor; this will bring the product within the scale.

The number of digits, i.e. the position of the decimal point, may be evident from the factors. If such be not clear, however, it may be taken that the *sum* of the digits in the factors *less* the number of times the slide has been projected to the right will give the number of digits in the product. On some rules the cursor is provided with a movable index for registering the number of times the slide has been projected to the right.

Division.

$$\left(\frac{a}{b} = x\right)$$

This involves the *subtraction* of the logs of the numbers, therefore the process is exactly the reverse of multiplication, i.e. the divisor on the slide is set to the dividend on the rules, and against the index of the slide will be the quotient on the rule. The number of digits is found by *adding* the number of times the slide is projected to the right, to the *difference* between the divisor and dividend.

Proportion—Direct and Inverse.

$$\text{Direct } \left(a : b :: c : x, \text{ or, } c \times \frac{b}{a} = x\right)$$

Bring the first term on the slide to the second on the rule, move the cursor to the third on the slide, and read the fourth on the rule.

$$\text{Mean proportional } \left(\frac{a}{x} = \frac{x}{c}\right)$$

Set index on B to a on A, bring cursor to C on B; read under cursor x on D.

The procedure for inverse proportion is the same, save that the slide is *inverted*, so as to bring the A and C scales into juxtaposition.

Squares and Square Roots.

Squares and square roots are found by setting the cursor and reading from D to A or *vice versâ*.

TRADE **STANLEY** MARK



English Drawing Instruments made throughout in our own factories by British labour.

SURVEYING and DRAWING INSTRUMENTS and every appliance for the CIVIL and MECHANICAL ENGINEER, ARCHITECT and SURVEYOR.

Please send for our 'L.11' Catalogue, post free.

W. F. STANLEY & CO. LTD.

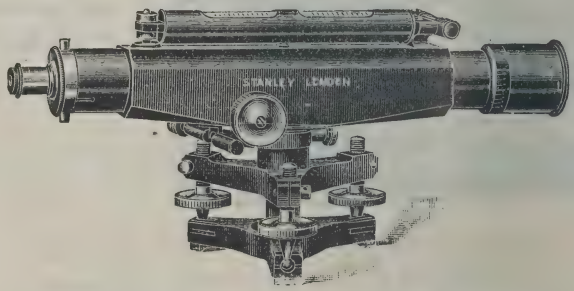
Head Offices and Showrooms:—

286 HIGH HOLBORN, LONDON, W.C. 1

TRADE **STANLEY** MARK

The Largest Manufacturers of SURVEYING and DRAWING INSTRUMENTS in the World.

All our INSTRUMENTS are made throughout in our own factories, and are of the very highest quality.



Stanley's New Engineers' Level. With proper care will last in adjustment a lifetime.

Please send for our 'L.11' Catalogue, post free.

W. F. STANLEY & CO. LTD.

Head Offices and Showrooms :—

286 HIGH HOLBORN, LONDON, W.C.1

Cubes and Cube Roots.

Cubes and cube roots as well as all higher powers and roots are best found by the use of logs, which may be read on the back of the slide of most rules if the C index be set to the number whose log is required on D. The log is then multiplied or divided by the power involved. On certain rules the D scale is replaced by a log of a log scale designed by Professor Perry; this facilitates the finding of high powers and roots; thus

$a^n = x$; set the index on C to a on D; against or on C, read x on D.

$\sqrt[n]{a} = x$, or, $a^{\frac{1}{n}} = x$. Set n on C to a on D; against index on C, read x on D.

Sines and Tangents.

These may be found by setting the slide as in the case of the log of a number, the values being marked on the back of the slide with the log values.

On the back of most rules will be found a number of 'gauge points' useful for various special calculations.

For other and more extended applications of the slide-rule one of the many manuals specially devoted to the subject should be consulted, notably those by Blaine or Pickworth.

THE FULLER SLIDE-RULE.

(*W. F. Stanley & Co. Ltd.*)

For accurate calculations this is one of the best slide-rules invented. It is equal to an ordinary straight slide-rule 83 ft. 4 ins. in length, and its value can hardly be over-estimated. Those who have once become familiar with the instrument will never dispense with its use.

The rule (fig. 110) consists of a cylinder (*d*) that can be moved up and down upon, and turned round, an axis (*f*), which is held by a handle (*e*). Upon this cylinder is wound in a spiral a single logarithmic scale. Fixed to the handle is an index (*b*). Two other indices (*c* and *a*), whose distance apart is the axial length of the complete spiral, are fixed to the cylinder *g*. This cylinder slides in *f* like a telescope tube, and thus enables the operator to place these indices in any required position relative to *d*; *n* and *m* are two scales, the one on the piece carrying the movable indices, the other on the cylinder *d*.

This rule possesses advantages over the flat edge-to-edge form besides that of increased length of scale. The setting and reading are performed by indices, and not by scale against scale, and this is very much less troublesome. Also, multiplications and divisions containing a series of factors can be worked with the greatest facility, and as the logarithms of numbers by the use of scales *m* and *n* are easily read, the powers and roots of numbers are within the capacity of the instrument.

An additional improvement has now been effected in these rules, by adapting the case to support them when in use, thus overcoming the objection of being always obliged to hold them in the hand.

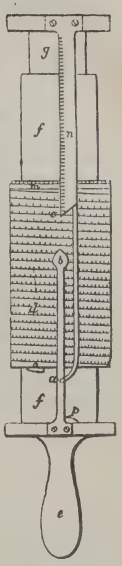


FIG. 110.

Rules for Instruments with one Fixed and two Movable Indices.

The fixed index will be denoted by F.
The top movable index will be denoted by A.
The lower ,, ,, ,, B.
When the indices are to be moved the term Set is used.
When the cylinder has to be moved the term Bring is used.

Multiplication.

$(a \times b)$
- Bring A to F
- Set A to 100
- Bring (*b*) to A or B
- Product read at F

$(a \times b \times c)$
- Bring (*a*) to F
- Set A to 100
- Bring (*b*) to A or B
- Set A to 100
- Bring (*c*) to A or B
- Product read at F

$(a \times b \times c \times d)$
- Bring (*a*) to F
- Set A to 100
- Bring (*b*) to A or B
- Set A to 100
- Bring (*c*) to A or B
- Set A to 100
- Bring (*d*) to A or B
- Product read at F

It will be seen that a similar sequence of operations applies to finding the product of any number of factors.

General Rule for the Number of Figures in the Product.

The *maximum* number of figures in the product is the algebraic sum of the number of figures in the factors, and this maximum results when all the factors (except the first) have to be brought to B. For each time a factor is brought to A, ONE is to be deducted from that sum.

So that if, during the operation, the number of times a factor has to be brought to A is noted, then the number of figures in the product is the sum of the number of figures in the factors (which is at once evident on inspection), less the number noted.

Thus, in the case of multiplying two factors together, the number of figures in the product is the sum or sum − 1, according as the second factor is brought to B or A.

Division.

$\frac{a}{m}$ { Bring (a) to F; Set A or B to (m); Bring 100 to A; Quotient read at F

$\frac{a \times b}{m}$ { Bring (a) to F; Set A or B to (m); Bring (b) to A or B; Quotient read at F

$\frac{a \times b \times c}{m}$ { Bring (a) to F; Set A or B to (m); Bring (b) to A or B; Set A to 100; Bring (c) to A or B; Quotient read at F

$\frac{a}{m \times n}$ { Bring (a) to F; Set A or B to (m); Bring 100 to A; Set A or B to (n); Bring 100 to A; Quotient read at F

$\frac{a \times b}{m \times n}$ { Bring (a) to F; Set A or B to (m); Bring (b) to A or B; Set A or B to (n); Bring (100) to A; Quotient read at F

$\frac{a \times b \times c}{m \times n}$ { Bring (a) to F; Set A or B to (m); Bring (b) to A or B; Set A or B to (n); Bring (c) to A or B; Quotient read at F

It will be seen that a similar sequence of operations applies to the division of the product of any number of factors by the product of any number of other factors.

General Rule for the Number of Figures in the Quotient.

The *maximum* number of figures in the quotient is the algebraic difference between the sum of the number of figures in the factors of the numerator and those of the denominator + (ONE) *for each factor of the denominator*, and this maximum results when A has to be set to *all* the factors of the denominator and all the factors of the numerator (except the first) brought to B.

One is to be deducted from the maximum number of figures each time B is set to a factor of the denominator or a factor of the numerator is brought to A.

So that if the number of times during the operation B is set to a factor of the denominator and a factor of the numerator is brought to A is noted, then the number of figures in the quotient is the maximum number of figures as found above (which is at once evident on inspection), less the number noted.

Thus, in the case of dividing one factor by another, the number of figures in the quotient is the difference or difference + 1, according as B or A is set to the divisor.

It should be remarked that the sequence of operations in *every case* is the same both for multiplication and division. The sequence of operations is :—First factor of numerator—First factor of denominator—Second factor of numerator—Second factor of denominator; and so on, commencing with the first factor of numerator at F, and ending by reading the quotient at F. If the above be written thus, this is at once evident.

$$a \times b = \frac{a \times b}{1}. \qquad a \times b \times c = \frac{a \times b \times c}{1 \times 1}. \qquad \frac{a}{m} = \frac{a \times 1}{m}.$$

$$\frac{a \times b \times c}{m} = \frac{a \times b \times c}{m \times 1}. \qquad \frac{a}{m \times n} = \frac{a \times 1 \times 1}{m \times n}. \qquad \frac{a \times b}{m \times n} = \frac{a \times b \times 1}{m \times n}.$$

This is important, as it is easy to remember. Also it will be seen, and should be remembered, that all factors of the numerator (except the first) are *Brought* to the movable index, and the movable index is *Set* to all factors of the denominator. Upon the upper movable index is marked - MUL., and on the lower one, - DIV. These are to remind the operator that when a factor of the numerator is *brought* to the upper index, and when the lower index is *set* to a factor of the denominator, 1 is to be deducted from the maximum number of figures that can occur in the result.

To Reduce Shillings to Decimals of a Pound.

Divide the number of shillings by 2 and point off one place. Thus 17 shillings ÷ 2 = 8·5 = £0·85.

To reduce pence to decimals of a pound multiply the pence by 4 for rough approximation and point off three places thus, 4 pence × 4 = 16 = £0·016. For accuracy multiply this last number by 4 and add the result with two figures overlapping to the right thus, 0·016 × 4 = 0·064. Then

0·016
064
0·01664

Any degree of accuracy can be reached by multiplying the last product by 4 and adding to the previous sum as before with two overlapping figures to the right, thus

$$\cdot 01664 + (064 \times 4) = \cdot 01664$$
$$256$$
$$\cdot 0166656$$

The absolute value of 4 pence is of course ·016. For purposes of the slide rule it is only needful at most, to go to the second multiplication, and this can be done mentally. Thus 5 pence is easily set down as £0·0208.

Conversions by the Slide-Rule—Gauge Points.

The application of the rule for problems involving proportion enables the implement readily to be used for conversions from values in one term to equivalent values in another. The following table, compiled from various sources, enables such conversions to be performed with accuracy. For instance, the circumference of any circle whose diameter is given may be read on the rule against the diameter on the slide if the value 226 on the slide is set to the value 710 on the rule, and so on.

Table of Gauge Points for Ordinary Slide-Rule.

Known Value on Slide.	Required Value on Rule.	Set to.	
		On Slide.	On Rule.
Circle, diameter	Circle, circumference	226	710
Circle, diameter	Circle, side of inscribed square	99	70
Circle, diameter	Circle, side of equal square	79	70
Circle, diameter	Circle, side of equal equilateral triangle	72	97
Circle, circumference	Circle, side of inscribed square	40	9
Circle, circumference	Circle, side of equal square	39	11
Circle, area	Inscribed square area	300	191
Square, side	Square, diagonal	70	99
Inches	Centimetres	50	127
Inches, eighths	Millimetres	40	127
Feet	Metres	292	89
Yards	Metres	35	32
Miles	Kilometres	87	140
Square inches	Square centimetres	31	200
Square feet	Square metres	140	13
Square yards	Square metres	161	51
Square miles	Square kilometres	112	290
Acres	Hectares	42	17
Cubic inches	Cubic centimetres	36	590
Cubic feet	Cubic metres	106	3
Cubic feet	Litres	3	85
Cubic yards	Cubic metres	51	39
Gallons	U.S. gallons	5	6
Bushels	Cubic metres	110	4
Ounces (avoirdupois)	Grammes	67	1900
Ounces (avoirdupois)	Kilogrammes	670	19
Pounds (avoirdupois)	Kilogrammes	280	127
Hundredweights	Kilogrammes	5	254
Tons	Tonnes	62	63
Feet per second	Metres per minute	7	128
Feet per second	Miles per hour	22	15
Feet per minute	Miles per hour	264	3
Yards per minute	Miles per hour	88	3
Miles per hour	Metres per minute	12	322
Knots (nauts) per hour	Metres per hour	33	38
Pounds per square inch	Kilogrammes per sq. centimetre	128	9
Pounds per square inch	Atmospheres	485	33

TABLE OF GAUGE POINTS FOR ORDINARY SLIDE-RULE—(*continued*).

Known Value on Slide.	Required Value on Rule.	Set to. On Slide.	Set to. On Rule.
Pounds per square inch	Water head, feet	13	30
Pounds per square inch	Water head, metres	33	25
Pounds per square inch	Inches, mercury gauge	25	51
Inches, water gauge	Pounds per square inch	360	13
Inches, water gauge	Inches, mercury gauge	14	1
Inches, mercury gauge	Atmospheres	30	1
Atmospheres	Kilos per square cm.	89	92
Pounds per square foot	Kilos per square metre	87	425
Pounds per lineal foot	Kilos per lineal metre.	41	61
Pounds per lineal mile	Kilos per kilometre	71	20
Pounds per cubic foot	Kilos per cubic metre	39	625
Cubic feet of water	Weight in pounds	17	1060
Cubic feet of water	Gallons (imperial)	17	106
Gallons of water	Weight, kilos	108	490
Pounds of water (fresh)	Pounds of water (sea).	38	39
British thermal unit	Calories	250	63
British thermal unit per pound	Calories per kilogramme	9	5
Foot pounds	Kilogrammetres	340	47
Horse-power	Force de cheval	72	73
Pounds per H.P.	Kilos per cheval	300	134
Horse-power per hour	Kilowatts (B.T.U.)	134	100
Watts	Horse-power.	5	·0067

The foregoing table is based on the assumption that the C and D scales of the rule are used. Certain values, however, cannot be read owing to the projection of the slide off the rule. If these be required, the cursor should be set to whichever index on C falls on the rule, and then the other index moved to coincide with the cursor line. If in this operation the slide be moved from left to right, the results must be multiplied by 10. If the slide be moved in the opposite direction the results should be divided by 10.

The A and B scales can be used conveniently if less accuracy is admissible. In this case the gauge points should be chosen on the left-hand side of the rule and the results read on the right and multiplied by 10.

SLIDE RULE CONSTANTS FOR BAR WEIGHTS.

If W = weight in lbs.; D = diam. in ins. of round bars; S = side in ins. of square bars; A and B = sides in ins. of rectangular bars; L = length in ins.; C = weight of 1 cub. in. of the material, then for

round bars, $W = \left(\frac{D}{e_1}\right)^2 L$; square bars, $W = \left(\frac{S}{e^2}\right) L$; rectangular bars, $W = \frac{AB}{e_3} L$;

in which e_1, e_2, and e_3 have the following values:—

Material.	Round Bars. e_1 (ins.).	Round Bars. e_1 (ft.).	Square Bars. e_2 (ins.).	Square Bars. e_2 (ft.).	Rectangular Bars. e_3 (ins.).	Rectangular Bars. e_3 (ft.).
Aluminium	3·71	1·071	3·29	0·950	10·82	0·903
Brass 80/20	2·023	0·584	1·795	0·518	3·221	0·268
„ 70/30	2·047	0·591	1·816	0·524	3·298	0·275
„ 60/40	2·052	0·593	1·951	0·525	3·314	0·276
Naval brass	2·035	0·588	1·805	0·521	3·258	0·271
Gunmetal	2·01	0·580	1·781	0·514	3·176	0·265
Muntz metal	2·072	0·598	1·838	0·531	3·378	0·281
Copper	2·0	0·577	1·773	0·512	3·145	0·262
Cast iron	2·212	0·638	1·961	0·566	3·846	0·321
Wrought iron	2·123	0·613	1·883	0·544	3·546	0·296
Steel	2·115	0·611	1·876	0·542	3·522	0·294

(*C.A.P., in 'Machinery.'*)

Averaging Experimental Results.*

Arrange the results *in order of magnitude* and plot them at equal intervals along a base line, as in fig. 111, which represents the values of breaking tests of Portland cement made after 28 days in each case, the height of the base line being, for convenience, taken as 600 lbs. per

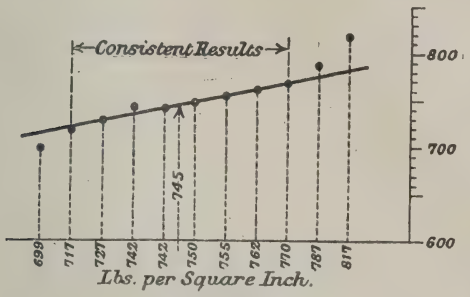


Fig. 111.

sq. in. It is now easy to draw a *straight* line through a large proportion of the dots with certainty as to its position, and to discard the discrepant values. The line will not usually be horizontal, though it would be so with experiments giving identical results. The centre of the line through the consistent results will give the mean height required, which in this case is 745 lbs. (or strictly 745·6 lbs.) per sq. in., instead of the arithmetical mean, which is 751·6.

---

* C. H. Wingfield, *Engineering*, August 13, 1917.

SECTION II

STATICS—CENTRE OF GRAVITY—LEVERS—PULLEYS—PARALLELOGRAM OF FORCES—INCLINED PLANE—DYNAMICS—MOVING BODIES—ACCELERATION—WORK—PENDULUM—OSCILLATION AND PERCUSSION—GYRATION—INERTIA—BALLISTIC PENDULUM—POWER BRAKES—ANIMAL POWER


SECTION II

STATICS — CENTRE OF GRAVITY — LEVERS — PULLEYS — PARALLELOGRAM OF FORCES — INCLINED PLANE — DYNAMICS — MOVING BODIES — ACCELERATION — WORK — PENDULUM — OSCILLATION AND PERCUSSION — GYRATION — INERTIA — BALLISTIC PENDULUM — POWER BRAKES — ANIMAL POWER.

STATICS.

CENTRE OF GRAVITY.

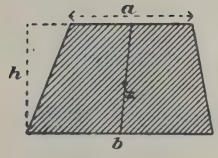PLANE FIGURES.



Quadrangle.
a *and* b *parallel.*

$$z = \frac{h}{2} - \frac{h}{6}\left(\frac{b-a}{b+a}\right).$$

FIG. 172.



Triangle.

$$z = \frac{h}{3}.$$


FIG. 173.



Half a Circle Plane or Elliptic Plane.

$$z = 0{\cdot}424r.$$

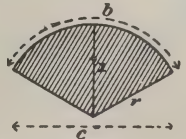
FIG. 174.



Circle Sector.

$$z = \frac{2cr}{3b}.$$

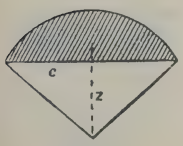FIG. 175.



Circle Segment.

$$z = \frac{c^3}{12a}.$$

a = area.

FIG. 176.



Parabola.

$$z = \frac{2h}{5}.$$

FIG. 177.

Shell or Convex Surface, and Solid Figures.

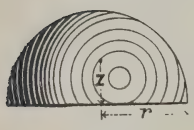


Fig. 178.

Half Sphere.

Convex surface, $z = \frac{1}{2}r$.
Solid, $z = \frac{3}{8}r$.

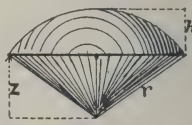


Fig. 179.

Spherical Sector.

Solid, $z = \frac{1}{4}\left(r - \frac{h}{2}\right)$.



Fig. 180.

Spherical Segment.

Convex surface, $z = \frac{h}{2}$.

Solid, $z = \frac{h}{2} \cdot \left[\frac{2r^2 + h^2}{3r^2 + h^2}\right]$.

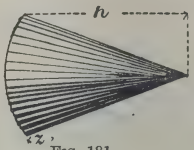


Fig. 181.

Cone.

Shell, $z = \frac{h}{3}$.

Solid, $z = \frac{h}{4}$.

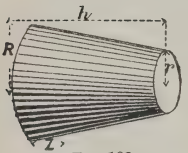


Fig. 182.

Conic Frustum.

Convex surface, $z = \frac{h}{2} - \frac{h}{6}\left[\frac{R - r}{R + r}\right]$. Solid, $z = \frac{h}{4} \cdot \left[\frac{R^2 + r(2R + 3r)}{R^2 + r(R + r)}\right]$.

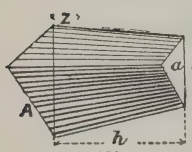


Fig. 183.

Pyramidal Frustum.

Solid, $z = \frac{h}{4}\left[\frac{A + 3a + 2\sqrt{Aa}}{A + a + \sqrt{Aa}}\right]$.

A and a = areas of the two bases.

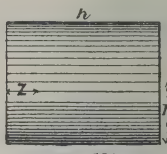


Fig. 184.

Cylindric Surface with a Bottom in one End.

$z = \frac{h}{r + 2h}$.

Circumferential Figures.




Fig. 185.

Circle Arc or Elliptic Arc.

$z = \frac{cr}{b} = \frac{c\sqrt{4h^2 + c^2}}{4b}$.



Fig. 186.

Half a circumference of a Circle or Ellipse.

$z = 0{\cdot}6367r$.

LEVERS.

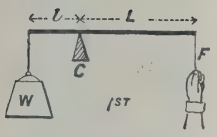


FIG. 187.

$F : W = l : L,$

$FL = Wl.$

$F = \frac{Wl}{L},$

$W = \frac{FL}{l}.$

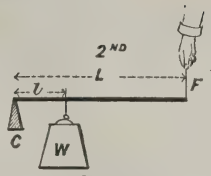


FIG. 188.

$F : W = l : L,$

$FL = Wl.$

$F = \frac{Wl}{L},$

$W = \frac{FL}{l}.$

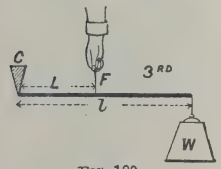


FIG. 189.

$F : W = l : L,$

$FL = Wl.$

$F = \frac{Wl}{L},$

$W = \frac{FL}{l}.$

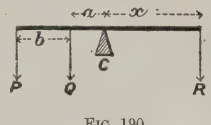


FIG. 190.

To find the fulcrum, C, when three forces act on one lever.

$Rx = Qa + P(b+a),$

$x = \frac{Qa + P(b+a)}{R}.$

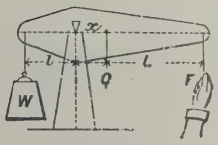


FIG. 191.

Q = weight of the lever.
x = distance from the centre of gravity of the lever to the fulcrum.

$F = \frac{Wl - Qx}{L},$

$W = \frac{FL + Qx}{l}.$

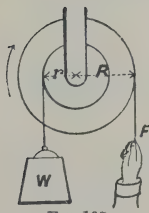


FIG. 192.

$F : W = r : R,$

$FR = Wr.$

$F = \frac{Wr}{R}, \quad R = \frac{Wr}{F},$

$W = \frac{RF}{r}, \quad r = \frac{RF}{W}.$

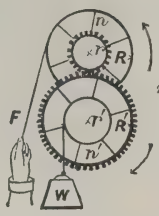


FIG. 193.

$F = \frac{Wrr'}{RR'}, \qquad W = \frac{FRR'}{rr'}.$

n, n' = numbers of revolutions of the wheels.

$n : n' = R' : r, \quad v : v' = RR' : rr'.$

v = velocity of F,

v' = velocity of W.

PULLEYS.

$\frac{v'}{v}$ = ratio of distances moved by W and F.

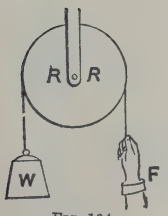


FIG. 194.

A single fixed Pulley.

$F : W = R : R,$

or $F = W.$

$\frac{v'}{v} = 1.$

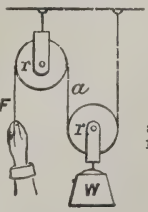


FIG. 195.

A single movable Pulley.

$F : W = r : 2r,$

or $F = \frac{1}{2}W.$

If the force F be applied at a and act upwards, the result will be the same.

$\frac{v'}{v} = 2.$




FIG. 196.

A double movable Pulley.

$F : W = r : 4r$,

or $F = \frac{1}{4}W$.

$\frac{v'}{v} = 4$.




FIG. 197.

A double movable Pulley.

$F = \frac{1}{4}W$.

$\frac{v'}{v} = 4$.

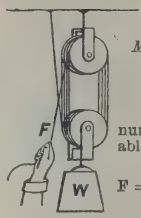


FIG. 198.

Multiple movable Pulley.

Let n = any number of movable pulleys, then

$F = \frac{W}{2n}$, $\frac{v'}{v} = 2n$.

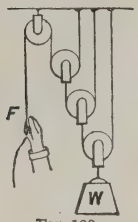


FIG. 199.

Compound Pulleys.

n = number of movable pulleys.

$F = \frac{W}{2^n}$, $W = 2^n F$,

$\frac{v'}{v} = 2^n$.

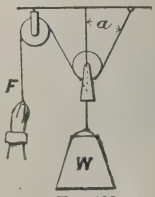


FIG. 200.

An oblique fixed Pulley.

$F : W = \sec \alpha : 2$.

$W = \frac{2F}{\sec \alpha}$, $F = \frac{W \sec \alpha}{2}$.

PARALLELOGRAM OF FORCES.

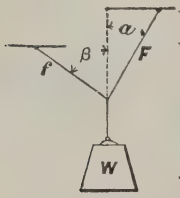


FIG. 201.

$W : F = \sin(\alpha+\beta) : \sin \beta$,

$W : f = \sin(\alpha+\beta) : \sin \alpha$.

$F = \frac{W \sin \beta}{\sin(\alpha+\beta)}$,

$f = \frac{W \sin \alpha}{\sin(\alpha+\beta)}$,

$W^2 = F^2 + f^2 - 2Ff \cos(\alpha+\beta)$.

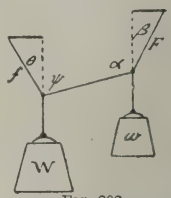


FIG. 202.

$F = \frac{w \sin \alpha}{\sin(\alpha+\beta)}$,

$f = \frac{W \sin \psi}{\sin(\psi+\theta)}$.

INCLINED PLANE.

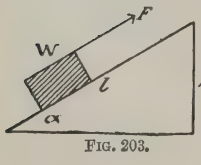


FIG. 203.

No Friction.

$F = \frac{Wh}{l} = W \sin \alpha$,

$W = \frac{Fl}{h} = \frac{F}{\sin \alpha}$.

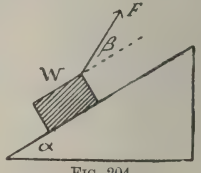


FIG. 204.

No Friction.

$F = W \frac{\sin \alpha}{\cos \beta}$,

$W = F \frac{\cos \beta}{\sin \alpha}$.

Friction.

$$F = W \frac{\mu \cos \alpha + \sin \alpha}{\mu \sin \beta + \cos \beta},$$

where μ = coefficient of friction.

$$F = W \frac{\sin(\phi + \alpha)}{\cos(\beta - \phi)},$$

where ϕ = limiting angle of resistance.

$\mu = \tan \phi$.

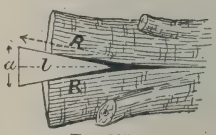


FIG. 205.

Wedge.

$F = \frac{Ra}{l}$,

$R = \frac{Fl}{a}$.

F = force required to drive the wedge.

Force Acting at an Angle.




Fig. 206.

Let the line F represent the magnitude and direction of a force acting at an angle α to move the body B on the line CD; then the line a represents a part of F which presses the body B against CD, and the line b represents the magnitude of the force which actually moves the body B.

$$b = \sqrt{F^2 - a^2}, \quad b = F \cos \alpha.$$

Force by a Screw.

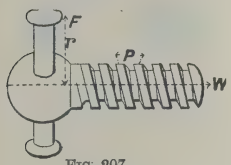


Fig. 207.

P = pitch of the screw (distance between threads).

r = radius on which the force F acts.

$\pi = 3{\cdot}1416$.

$$F : W = P : 2\pi r.$$

$$F = \frac{WP}{2\pi r}, \qquad W = \frac{F 2\pi r}{P}.$$

DYNAMICS.

Uniform Motion.

s = space passed through in time t. v = velocity.

$$s = vt.$$

FALLING BODIES.

Body Falling Freely.

s = space passed through in time t. v = velocity at end of time t.
g = coefficient of terrestrial acceleration = 32·2.

$$s = \tfrac{1}{2}gt^2. \qquad v = gt. \qquad v^2 = 2gs.$$

Body Thrown Downward.

If body is *thrown downward* with a velocity V,

$$v = V + gt. \qquad s = Vt + \tfrac{1}{2}gt^2. \qquad v^2 = V^2 + 2gs.$$

Body Thrown Upward.

If body is *thrown upward* with a velocity V,

$$v = V - gt. \qquad s = Vt - \tfrac{1}{2}gt^2. \qquad v^2 = V^2 - 2gs.$$

IMPACT OF BODIES.

The Bodies inelastic.



Fig. 208.

The Bodies move in the same direction.

$$v'(M+m) = MV + mv,$$

$$v' = \frac{MV + mv}{M+m}.$$



Fig. 209.

The Bodies move in opposite directions.

$$v'(M+m) = MV - mv,$$

$$v' = \frac{MV - mv}{M+m}.$$



Fig. 210.

Only one Body in motion.

$$v'(M+m) = MV,$$

$$v' = \frac{MV}{M+m}.$$

IMPACT OF BODIES.

The Bodies elastic.

$\left\{\begin{matrix} K = \text{coefficient of elasticity of } \frac{M}{m} \\ k = \quad " \quad " \quad : " \end{matrix}\right\}$



FIG. 211.

The Bodies move in the same direction.

$$V' = \frac{V(M - Km) + vm(1+K)}{M+m}.$$

$$v' = \frac{MV(1+k) + v(m - kM)}{M+m}.$$



FIG. 212.

The Bodies move in opposite directions.

$$V' = \frac{V(M - Km) - vm(1+K)}{M+m},$$

$$v' = \frac{MV(1+k) - v(m - kM)}{M+m}.$$




FIG. 213.

Only one Body in motion.

$$V' = \frac{V(M - Km)}{M+m},$$

$$v' = \frac{VM(1+k)}{M+m}.$$

ACCELERATION.

ACCELERATION PRODUCED BY A GIVEN PRESSURE.

If body (W lbs.) be on a perfectly smooth horizontal plane, and be acted upon by a pressure, P, acceleration, f, is

$$f = \frac{P}{W} g;$$

Where g = coefficient of terrestrial acceleration = 32·2.
If coefficient of friction on plane = μ.

$$f = \frac{P - \mu W}{W} g.$$

INCLINED PLANE.

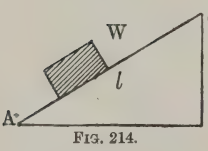


FIG. 214.

WORK ON AN INCLINED PLANE.

W = weight of body in pounds. μ = coefficient of friction.

Work in moving body from A to C = W ($\mu l + h$).
" " " C to A = W ($\mu l - h$).

TABLE OF COEFFICIENTS OF FRICTION.

Sliding Surface.	Coefficient (μ)
Wood on Wood:—	
Ash on Oak, fibres parallel to motion	·40
Beech " " " " "	·36
Elm " " " " "	·43
" " " moving fibres at right angles to the others, and to motion	·45
Fir " " fibres parallel to motion	·36
Oak " " " " "	·48
" " " moving fibres at right angles to the others, and to motion	·32
" " " fibres at right angles to motion	·34
" " " moving fibres on end, resting fibres parallel to motion	·19
White Pine on White Pine, fibres parallel to motion	·40
Wood on Wood, soaped	·2 to ·04

TABLE OF COEFFICIENTS OF FRICTION—*continued.*

Sliding Surface.	Coefficient (μ)
Metal on Wood—	
Wrought Iron on Elm, fibres parallel to motion	·25
" " " Oak, " " "	·62
Cast Iron on Elm, " " "	·20
" " " Oak, " " "	·49
Copper " " "	·62
Brass " Pine, " " "	·19
" " Mahogany " " "	·24
Steel " Pine, " " "	·16
" " Mahogany, " " "	·18
Metal on Metal:—	
Wrought Iron on Wrought Iron, fibres parallel to motion	·14
" " " Cast " " " "	·19
" " " Brass, " " "	·17
Cast " " Cast Iron	·15
" " " Brass	·15
Steel on Steel (*Trautwine*)	·14
" " Cast Iron	·20
" " Brass	·15
Copper on Cast Iron	·19
Metal on Metal (average), dry	·17
" " " " wet and clean	·30
" " " " damp and slimy	·14
Leather on Metal:—	
Leather on Metal, dry	·56
" " " wet	·36
" " " greasy	·23
" " " oily	·15
Wood on Stone:—	
Oak, across the grain, on hard or soft Limestone	·38
Metal on Stone:—	
Wrought Iron on soft Limestone, well dressed	·49
" " " hard " " "	·24
" " " " " " wet	·30
" " " " Marble, sawn (*Trautwine*)	·17
Stone on Stone, or Brickwork:—	
Polished Marble on polished Marble (*Trautwine*)	·16
" " " common Brick	·44
Soft Limestone, well dressed, on soft Limestone, well dressed	·64
Hard " " " " hard " "	·38
" " " " " soft " "	·67
Common Brick on soft Limestone, well dressed	·65
" " " hard " "	·60
" " " common Brick	·64
Masonry on dry Clay	·51
" " wet "	·33
Miscellaneous:—	
Leather on Oak	·27 to ·38
Hemp " " dry	·53
" " " wet	·33
Ferodo fibre on Metal	·4 to ·8
" bonded asbestos on Metal	·3
Smooth surface continually greased	·05

WORK.

ACCUMULATED WORK.

W = weight of body. V = velocity.

$$\text{Work accumulated} = \frac{WV^2}{2g};$$

Where g = coefficient of terrestrial acceleration = 32·2.

If body changes its velocity from V to V_1,

$$\text{Work gained or lost} = \pm \frac{W(V^2 - V_1^2)}{2g}.$$

Accumulated Work.

(Continued.)

If a shot of weight P is fired into a mass of weight W with a velocity V,

$$\text{Work accumulated in shot} = \frac{V^2P}{2g}.$$

$$\text{Work lost} = \frac{PW}{2g(W+P)}V^2. \qquad \text{Work remaining} = \frac{V^2}{2g}\cdot\frac{P^2}{W+P}.$$

Gravity.

g = acceleration in centimetres per second due to gravity. l = length of seconds pendulum in centimetres.

Values of g in various Localities.

Place.	Latitude.	g.	l.
Equator	°	978·1	99·103
Greenwich	51·29	981·17	99·413
Paris	48·50	980·94	99·39
Berlin	52·30	981·25	99·422
Dublin	53·21	981·32	99·429
Glasgow	55° 52′ 42·″8	981·44	99·442
Edinburgh	55·57	981·54	99·451
N. Pole	90°	983·11	99·61

THE PENDULUM.

Simple Pendulum.




Fig. 215

l=length of pendulum in inches. t=time in secs. of one oscillation (the time of moving from the highest point on one side to the highest point on the other). g=coefficient of terrestrial acceleration at equator=32·097 ft. per sec.=385·163 ins. per sec. π=3·1416.

$$t = \pi\sqrt{\frac{l}{g}} = 3{\cdot}1416\sqrt{\frac{l}{385{\cdot}163}} = \frac{\sqrt{l}}{6{\cdot}247}.$$

Length of seconds pendulum at equator=39·0265 ins.

If L=latitude,

$$l = 39{\cdot}0265 + {\cdot}1608\sin^2 \text{L, for a 1-second pendulum.}$$

Compound Pendulum.



Fig. 216.

o = centre of suspension. l = equivalent length of simple pendulum to give the same time of oscillation. W = weight of lower bob. w = weight of upper bob.

Fig. 216, $l = \dfrac{a^2W + b^2w}{aW - bw}$; Fig. 216A, $l = \dfrac{a^2W + b^2w}{aW + bw}$.

The length is actually the distance of the *centre of suspension* from the *centre of oscillation* (this is the same as the *centre of percussion*), the *centre of oscillation* being that point at which, if all the matter were collected, the time of oscillation would remain unaltered.

In case fig. 216A, if w = W, then rate of oscillation will be greatest if w is put in such a position that $b = (\sqrt{2} - 1)a$, in which case $l = 2(\sqrt{2} - 1)a$.—*H.R.K.*




Fig. 216A.

Conical Pendulum.

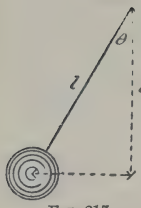


Fig. 217.

t=time of one revolution, g=coefficient of terrestrial acceleration = 32·2, π=3·1416.

$$t = 2\pi\sqrt{\frac{a}{g}}.$$

This formula is correct irrespective of the length, l, of the rod (fig. 217).

Governor of Steam Engine.

θ = angle (fig. 217) corresponding to a given period of rotation, t, g = coefficient of terrestrial acceleration = 32·2, π = 3·1416.

$$l = \frac{t^2 g}{4\pi^2 \cos\theta}.$$

CENTRE OF OSCILLATION OR PERCUSSION.




Fig. 218.

The *Centre of Oscillation* is that point in a vibrating body where, if all the matter were collected, the time of vibration would be unchanged.

The *Centre of Percussion* is that point in a revolving body at which, upon the point striking against an immovable obstacle, the whole of the motion of the body is destroyed. The centres of oscillation and percussion are the same.

o = centre of suspension. r = radius of cylinder. a = half length.

$$l = \frac{16a^2 + 3r^2}{12a} = \frac{4a}{3} + \frac{r^2}{4a}.$$

If r is small,

$$l = \frac{4a}{3}$$

i.e. in a bar the centre of oscillation or percussion is at a point distant from the centre of suspension two-thirds of the *total* length of the bar.

CENTRIFUGAL FORCE.

F = *Centrifugal Force*, in pounds.
M = the *Mass* or weight of the revolving body, in pounds.
v = *Velocity* of the revolving body, in feet per second.
R = *Radius* of the circle in which the body revolves, in feet.
n = number of *Revolutions* per minute.
g = coefficient of terrestrial acceleration = 32·2. π = 3·1416.

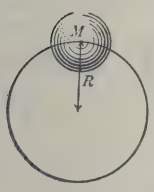


Fig. 219.

$$F = \frac{Mv^2}{gR} = \frac{Mv^2}{32{\cdot}16R}. \qquad F = \frac{4MR\pi^2n^2}{60^2g} = \frac{MRn^2}{2933}.$$

$$M = \frac{FgR}{v^2} = \frac{2933F}{Rn^2}. \qquad R = \frac{Mv^2}{Fg} = \frac{2933F}{Mn^2}.$$

$$n = \sqrt{\frac{2933F}{MR}}. \qquad v = \sqrt{\frac{FRg}{M}}.$$



Fig. 220.

Centrifugal force of a ring.

$$F = \frac{Mn^2\sqrt{R^2 + r^3}}{4150}.$$


Fig. 221.

Centrifugal force of a grindstone, circle-plane, cylinder, rotating round its centre.

$$F = \frac{MRn^2}{4150}.$$




FIG. 222.

Centrifugal force of a cylinder rotating round the diameter of its base.

$$F = \frac{Mn^2\sqrt{4l^2 + 3r}}{10260},$$

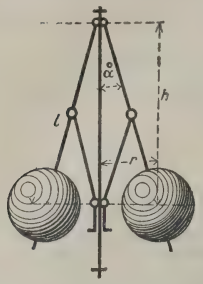


FIG. 223.

Governor.

$$n = \frac{60}{2\pi}\sqrt{\frac{g}{h}} = \frac{54{\cdot}16}{\sqrt{h}} = \frac{54{\cdot}16}{\sqrt{l\cos a}},$$

$$h = \frac{2933}{n^2}, \quad l = \frac{2933}{n^2\cos a} = \frac{h}{\cos a},$$

$$\cos a = \frac{2933}{n^2 l} = \frac{h}{l}, \quad r = \sqrt{l^2 - h^2}.$$

RADIUS OF GYRATION.

The *Centre of Gyration* is that point at which, if all the revolving matter were collected, it would obtain equal angular velocity from, and sustain equal resistance to, the force that gives the rotary motion. The *Radius of Gyration* (x) is the distance of the centre of gyration from the axis, A.

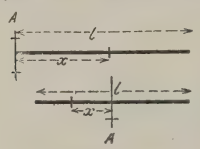


FIG. 224.

A Line or Bar.

$x = 0{\cdot}5775l,$

$x = 0{\cdot}2887l.$

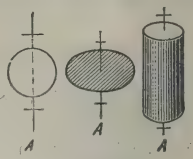


FIG. 225.

A Circumference round its Diameter.

A Circle-plane round its Centre.

A Cylinder round its Axis.

$x = 0{\cdot}7071r.$



FIG. 226.

A Circle-plane round its Diameter.

$x = 0{\cdot}5r.$



FIG. 227.

A Sphere round its Diameter.

Convex surface.
$x = 0{\cdot}8165r.$

Solid.
$x = 0{\cdot}6324r.$

Where r = radius.

FIG. 229.

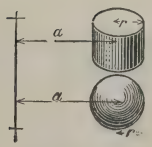


FIG. 228.

Cylinder.

$$x = \sqrt{a^2 + \tfrac{1}{2}r^2},$$

Sphere.

$$x = \sqrt{a^2 + \tfrac{2}{5}r^2}.$$

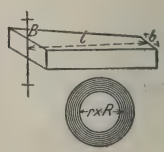


FIG. 230.

Wedge.

$$x = 0{\cdot}204\sqrt{12l^2 + B^2 + b^2}.$$

Ring.

$$x = \sqrt{\frac{R^2 + r^2}{2}}.$$

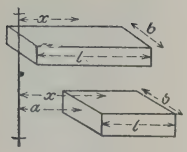


FIG. 231.

Parallelopiped.

$$x = \sqrt{\frac{4l^2 + b^2}{12}}.$$

$$x = \sqrt{\frac{4l^2 + b^2}{12} + a^2 + al}.$$

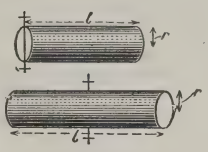


FIG. 232.

Cylinder.

$$x = \sqrt{\frac{4l^2 + 3r^2}{12}}.$$

$$x = \sqrt{\frac{l^2 + 3r^2}{12}}.$$

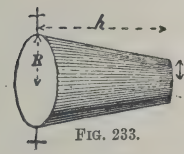


FIG. 233.

Conic Frustum.

$$x = \sqrt{\frac{h}{10}\left(\frac{R^2 + 3Rr + Rr^2}{R^2 + Rr + r^2}\right) + \frac{3}{20}\left(\frac{R^5 - r^5}{R - r^3}\right)}.$$

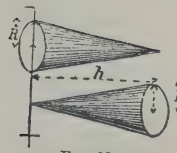


FIG. 234.

Cone.

$$x = \sqrt{\frac{2h^2 + 3R^2}{20}},$$

$$x = \sqrt{\frac{12h^2 + 3R^2}{20}}.$$

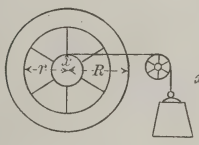


FIG. 235.

Flywheel.

$$x = \sqrt{\frac{R^2 + r^2}{2}},$$

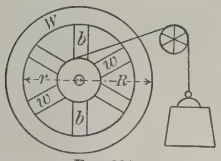


FIG. 236.

Flywheel with Arms.

$$x^2(W + w) = W\frac{R^2 + r^2}{2} + w\frac{4r^2 + b^2}{12},$$

$$= \sqrt{\frac{6W(R^2 + r^2) + w(4r^2 + b^2)}{12(W + w)}}.$$

MOMENTS OF INERTIA.

If each element of the mass of any solid body be supposed to be multiplied by the square of its perpendicular distance from a given line or axis, the sum of all these products is called the moment of inertia of the body with respect to that axis. The following Table gives the most useful cases :

M = mass of the body. I = moment of inertia.

Uniform thin rod, axis at end, length = l . . . . . $I = M\frac{l^2}{3}$.

" " " through middle, length = l . . . . . $I = M\frac{l^2}{12}$.

Rectangular lamina, axis through centre and parallel to one of sides, a and b lengths of sides, a the side bisected . . . . . $I = M\frac{a^2}{12}$.

Rectangular lamina, axis through centre and parallel to one of sides, a and b lengths of sides, b the side bisected . . . . . $I = M\frac{b^2}{12}$.

Rectangular lamina, axis through centre and perpendicular to the plane, a and b lengths of sides . . . . . $I = M\frac{a^2 + b^2}{12}$.

Rectangular parallelopiped, axis through centre and perpendicular to a side, a, b, and c lengths of sides :

1. Axis perpendicular to side contained by a and b . . . . $I = M\frac{a^2 + b^2}{12}$.

2. „ „ „ „ a „ c . . . . $I = M\frac{a^2 + c^2}{12}$.

3. „ „ „ „ b „ c . . . . $I = M\frac{b^2 + c^2}{12}$.

Circular plate, axis through centre perpendicular to the plate, radius $= r$. $I = M\frac{r^2}{2}$.

Circular plate, axis any diameter, radius $= r$ . . . . . $I = M\frac{r^2}{4}$.

Circular ring, axis through centre perpendicular to plane of ring, outer radius $= R$, inner radius $= r$ . . . . . $I = M\frac{R^2 + r^2}{2}$.

Circular ring, axis any diameter . . . . . $I = M\frac{R^2 + r^2}{4}$.

Right cylinder, axis the axis of figure, r = radius of section . . . $I = M\frac{r^2}{2}$.

Right cylinder, axis through centre perpendicular to axis of cylinder of length, l . . . . . $I = M\left(\frac{l^2}{12} + \frac{r^2}{4}\right)$.

Hollow cylinder, axis the axis of figure, outer radius $= R$, inner radius $= r$. $I = M\left(\frac{R^2 + r^2}{2}\right)$

Right cone, axis the axis of figure, r = radius of base . . . . . $I = \frac{3}{10}Mr^2$.

Sphere, axis any diameter, r = radius . . . . . $I = \frac{2}{5}Mr^2$.

ENERGY OF A ROTATING BODY.

The energy of a rotating body $= \frac{1}{2}\omega^2 I$, ω being the angular velocity, and I the moment of inertia.

BALLISTIC PENDULUM.

W = weight of pendulum. P = weight of a shot fired into W. V = velocity of shot. θ = angle through which pendulum moves. n = number of vibrations per minute pendulum makes. a = distance from centre of suspension of point at which shot enters block. h = distance of centre of gravity of pendulum weight with shot in it from centre of suspension. g = coefficient of terrestrial acceleration = 32·2. $\pi = 3{\cdot}1416$.

$$V = \frac{W + P}{P} \frac{120g \sin \frac{\theta^\circ}{2}}{\pi n} \frac{h}{a}$$

BRAKES FOR POWER MEASUREMENT.

Hirn's Rope Brake.

A convenient form of brake for power measurement is one consisting of a band of rope enveloping the fly-wheel of the engine being measured.

Fig. 237, p. 127, represents the rope brake as arranged by Mr. B. H. Thwaite for the purpose. It consists of a band of rope carrying five wood blocks, with side flanges to hold the brake on the wheel. Each end of the rope is attached to a spring balance.

The net pull upon the wheel rim is the difference of the two spring balance readings, and the power developed by the engine is

$$(W - w) \times D\pi \times N \div 33{,}000 = \text{B.H.P.},$$

Where

W = the reading of the large balance or the pull in pounds.
w = the reading of the small balance or the pull in pounds.
D = the diameter in feet of the rim on which the brake lies.
N = revolutions per minute.
B.H.P. = brake horse-power.
$\pi = 3{\cdot}1416$.

The results of the formula are slightly below the actual power, owing to the brake belt not being absolutely flexible. French engineers measure D at the centre of the rope thickness, an error perhaps slightly in the other direction.

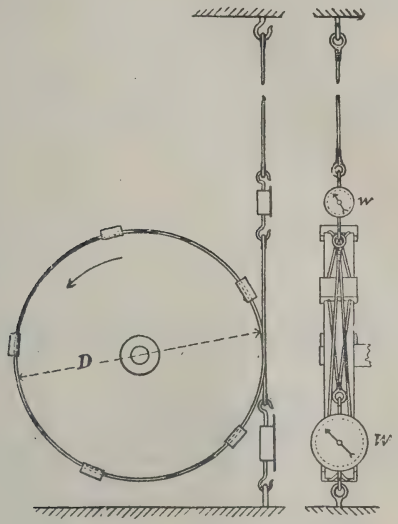


FIG. 237.

For the large spring balance a weight may be substituted.

A rope brake never sticks, nor does it ever suddenly lose its grip.

The Prony Brake.

This form of brake is not now much used, but it is useful for small power measurements. In its simple form, fig. 238, it consists of a couple of wooden blocks clipped upon the pulley or shaft

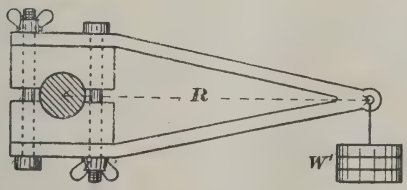


FIG. 238

transmitting the power to be indicated. Attached to the blocks is a lever, to which is hung a scale pan or a spring balance. The diameter D in the formula for Thwaite's brake is, in the case of the Prony brake, double the radius R measured to the point of suspension of the pan, and $W - w$ is the weight W'.

The difficulty with the Prony Brake is the constant vibration of the weighted arm. The

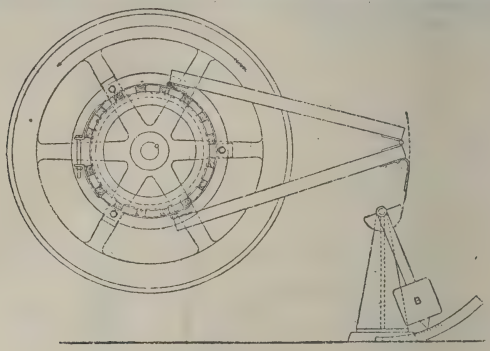


FIG. 239.

difficulty has been reduced at Purdue University by the addition of a pendulum lever weight, B (fig. 239), the quadrant of which may be divided by actual weight determination.

Ringelmann's Brake.

In the brake of M. Ringelmann (fig. 240) the brake band is a strap of iron, on which, by a hook, C, is suspended a weight, Q. If the wheel runs faster and lifts the weight, the hook travels in the direction of the arrow, and *vice versa*. The brake is in two halves, A and B, joined by a tightening screw at V, and by a peculiar joint at E, shown enlarged in fig. 241. The sector, S S, which carries the ends of the brake straps, is held by a pair of cords, *mas* and *s'bnp*, the first fixed to a regulating roller, *m*, attached to the floor; the

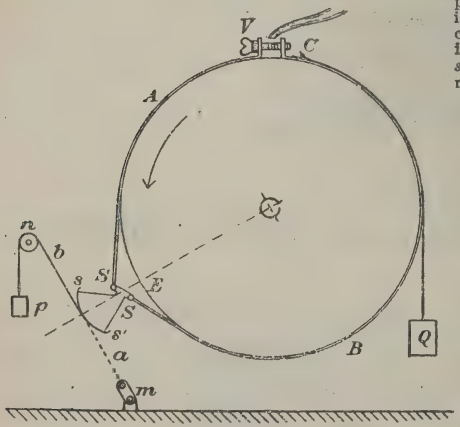


FIG. 240.

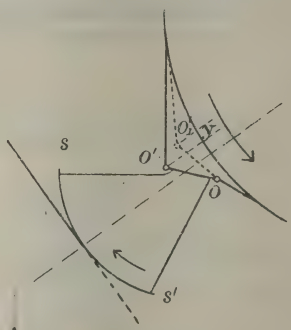


FIG. 241.

second to a small weight, *p*, over a pulley, *n*. The mean position of the sector is as shown, the cords *b* and *a* being in one straight line. If in the course of a test the brake is pulled round, the point O (fig. 241) is lowered, the sector rolls on the cord, and the point O' comes to O',, lengthening the brake strap by the amount *y*. Soap and water is kept flowing on at the point V. The tension of the brake is thus maintained to a constant power, and the lubrication is also constant, so that the motor is compelled to exercise a constant power. This brake was used for the testing of small motors at Meaux by M. Ringelmann in 1894.

Hydraulic Brake.

Professor Reynold's hydraulic brake consists of a fan working inside a cylindrical casing of water. A weighted arm is attached to the casing, and measures the work absorption just as in the rope brake. Water is continually run through the casing, and comes out at a higher temperature, and the rise in temperature may be used as an approximate check upon the power if the quantity of water be known and its rise of temperature noted.

Water-pipe Absorption Dynamometer.

In place of ropes the encircling band may be made of flexible water-pipes, the rim being of wood. Water is circulated through the pipes to keep them cool. Each band of $\frac{3}{8}$ in. iron pipe on

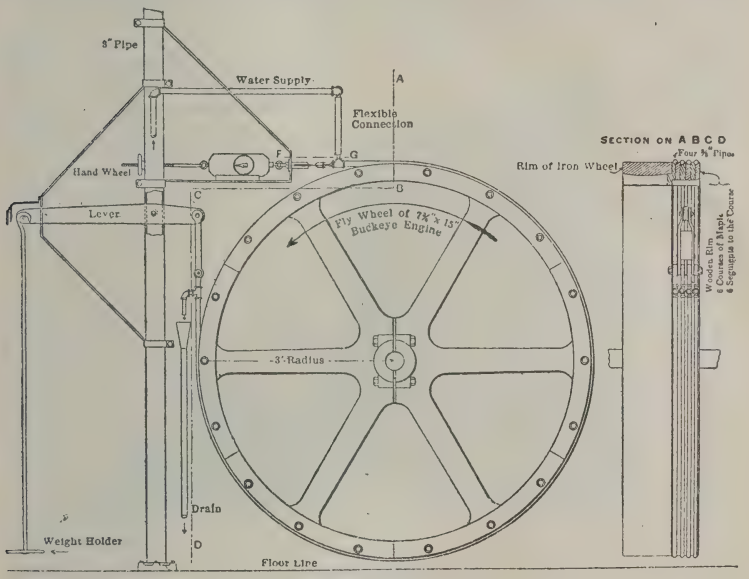


FIG. 242.

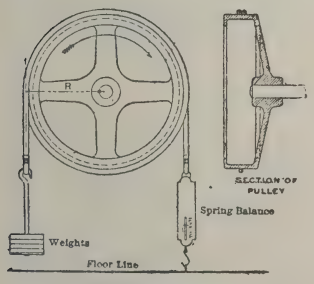


FIG. 243.

a 6 ft. wooden rim will absorb 10 horse-power at 150 revolutions. Fig. 242, as used at Purdue University, shows a brake of this description.

Cooling Brake Rims.

In many cases the inside of a brake rim is of trough form (fig. 243), which will hold water when revolving, by virtue of the centrifugal action. The trough being filled with water is kept to (at most) 212° F. by the evaporation of the water, which is kept constantly running into the rim in a small stream.

Another means of cooling is to encircle a sheet-steel brake band with iron wire netting, which holds by capillary action water poured on it; this evaporates and cools the strap. Surplus water runs off at the bottom of the band.

The Alden Brake.

This brake consists, for 200 horse-power, of a 56-inch disc of cast iron revolving between two plates of copper, containing cylinder oil, which is circulated from the circumference towards the centre. Outside the copper plates water circulates at about 15 lbs. pressure, and serves both to cool the plates and maintain contact pressure on the moving disc. By circulating more water the brake resistance may be sensibly increased through the diminished viscosity of the oil, and *vice versa*. This brake is said to run for hours at great constancy, and to be nearly perfect in its action.

The Brotherhood Fluid Friction Dynamometer.

This arrangement (*Peter Brotherhood Ltd., Peterborough*) is specially suitable for high and moderate speed testing. All power given to the machine is recorded accurately; no losses in shaft bearings, etc., have to be allowed for, as the friction of bearings is measured by the dynamometer and included in the readings; no calibration is required. Calculations involve simple multiplication only from the direct readings of a spring balance or weighing machine; no clutch is required. Motors under test may be started up with the brake set for full loads, the torque at the lowest speeds being extremely small and rising rapidly as the normal speed is reached. The resistance rises very rapidly with increase of speed and also diminishes rapidly with decrease in speed, so that the brake is self-governing, and any sudden increase in friction is impossible. The machine is extremely accurate, the only power not recorded being the infinitesimal friction between the casing and its supporting roller bearings. The casing rests freely on the rollers, and motion at the supports only occurs when the load is changing, and is then very small, so that no measurable energy is absorbed. The constants may be verified by use of a rule and standard weights only, the only factors being the distance from the shaft centre to the point of application of the spring balance, and the readings of the spring balance which may be directly tested by deadweights. This feature enables the user to check the readings immediately before and after each test if desired.

The principle employed is that of the frictional resistance between fluids and rotating plates. Several perforated annular plates are secured to the casing of the brake, and between each pair a disc rotates with the shaft. The rotating discs run near the fixed plates, but do not touch them. On the introduction of water or other fluid into the casing, friction is set up between the fluid and the plates. The moment of the frictional resistance between the fluid and the fixed plates is measured by means of a spring balance acting at a convenient radius, the casing being free to rotate within limits on trunnions and anti-friction rollers. A platform weighing machine may be substituted for the spring balance if preferred. The energy delivered to the dynamometer is transformed by fluid friction into heat which is absorbed by the fluid; as no solid friction occurs, unequal heating and seizing of surfaces cannot arise. The quantity of water flowing through the dynamometer need be only sufficient to absorb the power and keep the temperature down to the desired limits. For example, when absorbing 100 b.h.p., assuming that the temperature of the water supply is 60°F., and that the water is raised to 160°F. before leaving the casing, about 5 gallons per minute would be sufficient. This water enters and leaves the casing quietly—no water is splashed about. The load on the motor at any desired speed can be quickly and smoothly adjusted by varying the amount in the casing; any desired quantity of water may be retained, and therefore any load may be steadily maintained, although water is flowing through continuously. For short tests sufficient water may be placed in the casing, and no continuous flow provided. This feature is of great use in comparing and calibrating motors, engines, etc. With these dynamometers a constant and definite torque resistance will always be obtained at any given speed and with a definite quantity of water in the casing. It is thus easy to adjust the machine to give a predetermined load curve. This feature has been found of great value in testing engines for marine propulsion, the dynamometer resistance varying with speed proportionally in precisely the same way as the speed and power of a marine propeller varies.

The Froude Water Dynamometer.

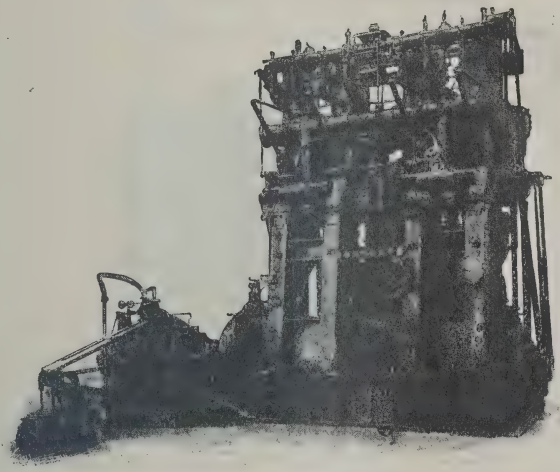
This dynamometer (*Heenan & Froude Ltd., Worcester*) is made in two types, viz.:—

1. The 'Standard Dynamometer,' which is used for testing all types of engines at a constant speed, such as large gas engines, Diesel engines, or steam turbines.

2. The 'Sluice Gear Dynamometer,' which is used for testing high-speed petrol engines where the speed varies over a very large range.

The Standard machine consists of a rotor revolving in water contained in the casing; the latter is suitably mounted on anti-friction rollers and connected to a water supply. The rotor is fixed on a shaft which projects on either side of the casing and to which the engine or motor to be tested is coupled. Each face of the rotor is formed with a semi-elliptical annular channel divided into a number of compartments by oblique vanes as shown in fig. 244. The corresponding

FROUDE
DYNAMOMETERS



SCIENTIFICALLY ACCURATE

Adopted by the ADMIRALTY, WAR OFFICE and AIR MINISTRY.

HEENAN & FROUDE, LTD.
WORCESTER, ENGLAND.

F. 130

SWAINS' BLOCKS



FOR ILLUSTRATING

JOHN SWAIN & SON Ltd.

PHOTO-ENGRAVERS &
ART REPRODUCERS BY
ALL PROCESSES

LONDON: 89-90 SHOE LANE, E.C.
GLASGOW: 332, Argyle Street.
MANCHESTER: 10, New Brown Street.
BRISTOL: 43, Broad Street.
PARIS: 34, Bde. des Italiens.
Works: BARNET.

faces of the casing are formed of similar channels divided in the same way. The channels on the rotor and the casing thus form two complete annular channels of elliptical cross-section, each channel being divided into compartments by means of the oblique vanes. When in action the water in each annular channel is rotated continuously by the forces imparted to it by the rotor, and passes from one compartment into the next, and so on. An extremely high speed of rotation of the water is obtained, and the power put into the dynamometer is, by the hydraulic friction, converted into heat which passes away in the water issuing from the machine. The motion of the water causes the rotor to re-act on the casing, which tends to turn on its supporting

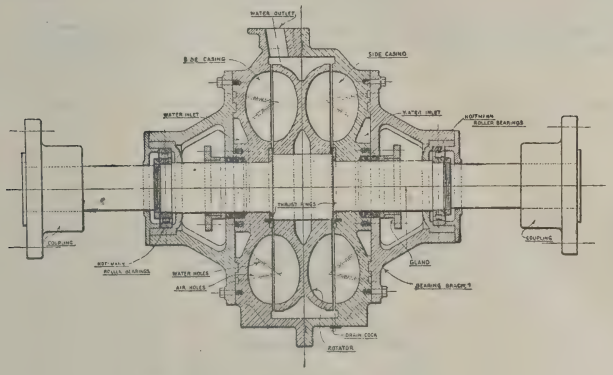


FIG. 244.

rollers; this is prevented by means of an extension arm at the end of which are suspended a number of balance weights. These weights are arranged to re-act upon the power-absorbing portion of the apparatus in such a way that they are kept suspended in mid-air, and thus represent the net weight which is being lifted by the balance-arm at a given radius. The torque is thus known and from it the horse-power is obtained by a simple formula. An automatic valve for controlling the flow of water through the machine is mounted on the outlet from the casing. The balance weights tend to depress the arm, which by an arrangement of valve gear causes the automatic valve to choke back the flow of water and thereby maintain a lifting effort sufficient to keep the weights floating. A lever is fitted for the purpose of quickly throwing the load on or off. The rollers supporting the casing are mounted on ball bearings, so that the machine is very sensitive in its action. As the friction of the dynamometer shaft in the glands, as well as other solid and hydraulic friction, all react on the casing, no error is introduced on this account.

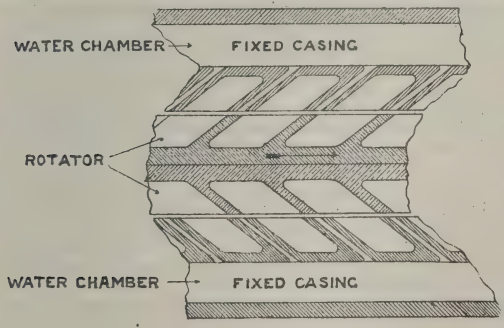


FIG. 245.

In the Sluice Gear type of dynamometer the rotor and casing are constructed on similar lines to the Standard machine, but the method of controlling the power absorbed by the dynamos meter is different. In this machine the casing is always full of water, and the output is varied by inserting plates, or sluices, between the rotor and casing. These sluices are operated by a hand wheel placed in a suitable position as shown in fig. 245. As this machine can absorb a

very large range of powers at any particular speed, it is suitable for testing high-speed petrol engines, with the following advantages :—

(1) Should the engine falter, the load automatically falls off, and it is thus given an opportunity to pick up again. (2) The power absorbed by the brake can be altered while running, by turning a single hand-wheel. (3) No resistance is offered at the starting-up : the engine, therefore, can be stopped and restarted without altering the adjustment of the brake. (4) The rotating parts are comparatively light, and have little momentum, so that the machine can be stopped very quickly should this be necessary on account of engine trouble. (5) No attention need be paid to the brake while carrying out tuning-up adjustments. The tester may adjust the carburettor, ignition, etc., without altering the setting of the sluice-gear control, and any increase in output will be automatically registered on the spring balance.

To measure the torque exerted on the casing, a spring balance is fitted at the end of the arm, so that the pull can be read direct. The horse-power is calculated from the formula :—

$$\text{B.H.P.} = \frac{\text{W} \times \text{N}}{\text{K}},$$

where W = the load on the arm in lbs. ; N = revolutions per minute ; K = constant.

The Fan Dynamometer.

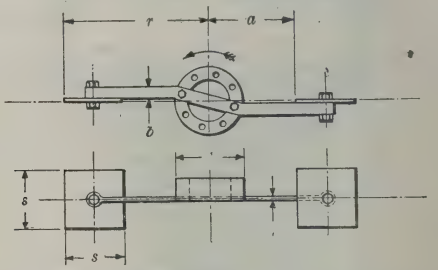


FIG. 246.

If w = torque driving the fan in inch-lbs ;
w_b = resisting torque due to the blades alone ;
w_a = " " " arms "
N = revs. per min. of the fan ;
s = length of side of square blades or diameter of round blades in inches
r, a, b, t, and c are other dimensions in inches ;
W = density of the fluid in which the fan rotates, in lbs. per cubic foot,
= 62·33 for water at 50° F. $= \frac{1{\cdot}317 \times \text{barometric pressure in inches of mercury}}{460 + \text{temp. in } ^\circ\text{F.}}$;
H.P. = horse-power absorbed by fan ;
K = a coefficient depending upon the value of r/s and upon the shape of the blade; see values tabulated below for square and circular blades having square edges.

Values of r/s	2·5	3·0	3·5	4·0	4·5	5·0	5·5	6·0	6·5	9·0	12·0
K for circular blades	1·69	1·69	1·66	1·63	1·60	1·59	1·58	1·575	1·575	1·575	1·575
K for square blades	2·25	2·28	2·24	2·18	2·16	2·12	2·10	2·08	2·04	2·04	2·04

σ = a coefficient depending upon the ratio b/t.

Values of b/t	2	3	6
Values of σ	1·3	0·94	0·62

Then :—
$w_a = 0{\cdot}35 \times 10^{-8}\sigma\text{N}^2a\text{W}$; $w_b = \text{KN}^2r^3s^2\text{W}$: $w = w_a + w_b$*; H.P. $= w\text{N}^3/3{,}6000$.

* For this relation to hold, t must be less than $\frac{s}{7}$

Notes on the Fan Dynamometer.

Care should be taken that the arms and fastenings are amply strong enough to withstand the centrifugal stresses. For reasonably accurate work, with fans rotating in air, one side of the fan should be completely free from obstruction for a distance of at least '3 *r*' inches from the plane of rotation, and on the other side 'C' should not exceed '*a*.' Also the floor should be distant at least '*r*' inches. The linear velocity of the centre of the blades must not exceed, say, 350 ft. per second. In order to compute W with accuracy, the barometric pressure, and the temperature of the air at the periphery of the fan should be taken. Fans rotating in water must have at least as much clearance around them as is specified above, and must not be rotated at such a speed as to produce cavitation. To facilitate work in the test-shop the 'H.P., Rev.' curves for each blade used should be plotted on logarithmic paper for some standard value of W. Since the H.P. varies approximately as N^3, N should be observed with great accuracy—a speedometer is usually not sufficiently accurate.

See also Hodgson, *Proc. Inst. Automobile Engineers*, March 1916.

(*J. L. Hodgson.*)

The Torsion Meter.

(*Hopkinson-Thring Patent.*)

The Hopkinson-Thring Torsion Meter (*Messrs. Siemens Bros. & Co. Ltd.*) has been designed for determining the power transmitted by turbine and other shafts. It requires only a very short length of shaft, is extremely compact and strong, and it gives a direct reading of the torsion on the shaft. The zero point of the apparatus can readily be ascertained by barring the shaft. The instrument offers also a simple means of determining the friction of the shafts themselves.

The principle of the apparatus consists in the observation of the twist between two adjacent points on the shaft by means of two beams of light projected on to a scale from a fixed and a movable mirror.

A diagrammatic arrangement of the complete apparatus is shown in end elevation and plan in fig. 247. A collar R, clamped to the shaft of which the torque has to be measured, is provided with a flange projecting at right angles to the shaft and an extension. A sleeve T, provided with a similar flange and extension at one end, is clamped at its further end on to the shaft in such a manner that its flange is close to that on the collar R, whilst its extension overlaps that of the collar R, on which it is supported to keep it concentric. Both the collar and sleeve are quite rigid, so that when the shaft is twisted by the transmission of power the flange on the sleeve T will move relatively to that on the collar R, the movement being equal to that between the two parts of the shaft on which these fittings are clamped. This movement is made visible by one or more systems of torque mirrors mounted between the two flanges, which reflect a beam of light, projected from a lamp, on to a scale divided in a suitable manner on ground glass.

Each system of torque mirrors consists of a mounting, pivoted top and bottom on one or other of the flanges, in which two mirrors are arranged back to back. This mounting is provided with an arm, the end of which is connected by a flat spring to an adjustable stop on the other flange. Any relative movement of the two flanges will turn the torque mirror and thereby cause the beam of light to move on the scale, the deflection produced being directly proportional to the torque applied to the shaft. Hence, if the rigidity of the material and the number of revolutions per minute are known, the h.p. transmitted can be arrived at immediately.

With the arrangement described, a reflection will be received from each mirror at every half revolution of the shaft; but where the torque varies during a revolution (as with reciprocating engines), a second system of mirrors may be arranged at right angles to the first system, so that four readings can be taken during one revolution; or, if two scales are used, eight readings can be taken.

Fig. 248 shows how the beam of light reflected by the mirror when in its highest position passes through the upper part of the scale; while the second reflection will occur when the mirror is in the position occupied by the zero mirror, the beam of light passing through the lower part of the scale. The position of the torque mirror in fig. 248 is such that if the reflected beam strikes the scale to the right of the zero line, when the shaft has made a further half revolution, the reflected beam from the other mirror will strike the scale to the left of the zero line.

The fixed mirror is attached to one of the flanges (in fig. 247 to the flange of the sleeve T). This must be adjusted so that the beam of light reflected from it is received at the same point on the scale as those from the movable mirrors when there is no torque on the shaft. To facilitate the erection and adjustment of the apparatus, the box containing the scale and carrying the lamp is fitted with trunnions, so that it can be inclined as required.

HOPKINSON-THRING TORSION METER.

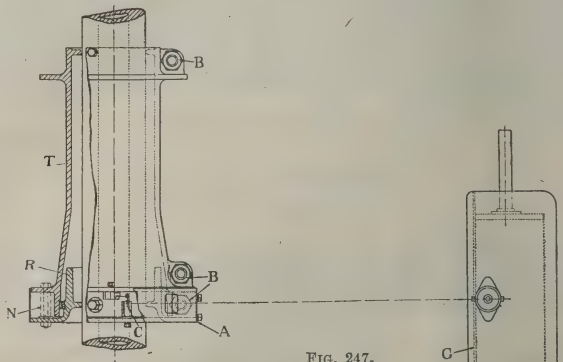


FIG. 247.


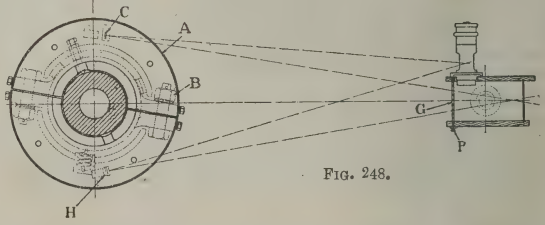


FIG. 248.

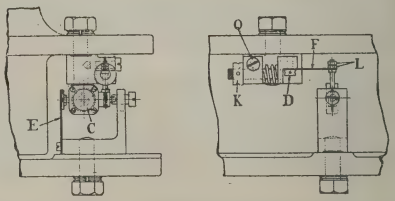

If the position of the apparatus on the shaft becomes altered relatively to the scale, owing to the warming up of the shaft or from other causes, this is indicated immediately to the observer by an alteration in the position of the zero as reflected by the fixed mirror. Hence the scale zero may be adjusted, if desired, by moving the scale so that its zero coincides with the reflection from the fixed mirror, but this is not necessary to obtain a correct result, since the mean of the two readings will be the same. It will readily be understood that, as a movement of the torque mirrors can only occur through a relative movement of the two flanges, the vibration of the shaft or of the ship will not influence the readings in any way.

The apparatus is made in seven standard sizes, to fit shafts from 1 up to 21 inches in diameter, the overall length of the meters being 13½ to 58¼ inches. All sizes have been in practical operation for a considerable time, with entirely satisfactory results, in warships and other turbine-driven steamers, running at speeds up to 1,500 revolutions per minute. The smaller sizes of the instrument are designed to run up to 3,000 revolutions per minute.

ANIMAL POWER.

MEN.

The mean effect of the power of a man, unaided by a machine, working to the best practicable advantage, is the raising of 70 lbs., 1 foot in a second, for 10 hours in a day.

Two men, working at a windlass with the handles at right angles to each other, can raise 70 lbs. more easily than one man can 30 lbs.

A man of ordinary strength exerts a force of 30 lbs., for 10 hours in a day, with a velocity of 2½ feet per second = 4,500 lbs. raised 1 foot in a minute = ·2 of the work of a horse.

A man can travel, without a load, on level ground, during 8½ hours a day, at the rate of 3·7 miles an hour, or 31½ miles a day. He can carry 111 lbs. 11 miles in a day.

A porter going short distances, and returning unloaded, can carry 135 lbs. 7 miles a day. He can transport, in a wheelbarrow, 150 lbs. 10 miles in a day.

WEIGHT OF CROWDS.

Experiments carried out by Professor L. J. Johnson, of Harvard University, show that it is possible for this to reach the high figure of 181·3 lbs. per square foot of floor surface. If the crowd jumps, the apparent load may be 50 per cent. more than the steady load, and running four abreast will show a similar result. A weight of 140 lbs. per square foot is quite possible where there are throngs of people; while a load of 80 lbs. per square foot is quite common in buildings and private houses where social gatherings are frequent, and a maximum of 40 lbs. or 45 lbs. is far short of what actually does prevail.

HORSES.

A horse can travel 400 yards, at a walk, in 4½ minutes; at a trot, in 2 minutes; and at a gallop, in 1 minute. A draught horse can draw 1,600 lbs. 23 miles a day, weight of carriage included. The ordinary work of a horse may be stated at 22,500 lbs., raised 1 foot in a minute, for 8 hours a day. In a horse-mill a horse moves at the rate of 3 feet in a second. The diameter of the track should not be less than 25 feet. A horse can exert a horse-power hour for but six hours a day. One machinery horse-power is equivalent to that of 4½ horses. The strength of a horse is equivalent to that of 5 men.

TABLE OF THE AMOUNT OF LABOUR A HORSE OF AVERAGE STRENGTH IS CAPABLE OF PERFORMING, AT DIFFERENT VELOCITIES, ON CANALS, RAILROADS, AND TURNPIKES.

Velocity per Hour.	Duration of Work.	Useful Effect for 1 Day, drawn 1 Mile.			Velocity per Hour.	Duration of Work.	Useful Effect for 1 Day, drawn 1 Mile.		
		On a Canal.	On a Railroad.	On a Turnpike.			On a Canal.	On a Railroad.	On a Turnpike.
Miles.	Hours.	Tons.	Tons.	Tons.	Miles.	Hours.	Tons.	Tons.	Tons.
2½	11·5	520	115	14·0	6	2·000	30·0	48·0	6·0
3	8·0	243	92	12·0	7	1·500	19·0	41·0	5·1
4	4·5	102	72	9·0	8	1·125	12·8	36·0	4·5
5	2·9	52	57	7·2	10	0·750	6·6	28·8	3·6

A horse in a mill can produce an effect of 106 lbs., at a velocity of 3 feet in a second, for 8 hours in a day. A mule can produce, under a like velocity and time, an effect of 71 lbs.; and an ass, 37 lbs.

An ox, walking at a velocity of 2 feet in a second (1·34 miles per hour) will exert a pull of 154 lbs. for 8 hours in a day.

The draught of man and animals by traces is as follows:

Man, 150 lbs. | Horse, 600 lbs. | Mule, 500 lbs. | Ass, 360 lbs.

A man rowing a boat 1 mile in 7 minutes performs the labour, while rowing, of 6 fully-worked labourers at ordinary occupations of 10 hours.

The force of traction on a railroad or turnpike is constant, but the mechanical power necessary to move the carriage increases as the velocity.

Labour upon Embankments.

Single Horse and Cart.—A horse with a loaded dirt-cart, employed in excavation and embankment, will make 100 lineal feet of trip, or 200 feet in distance per minute, while moving. The time lost in loading, dumping, awaiting, etc.=4 minutes per load.

A medium labourer will load with a cart in 10 hours, the following earths, measured in the bank:

Gravelly Earth, 10; *Loam*, 12; *Sandy Earth*, 14 cubic yards.

Carts are loaded as follows: *Descending Hauling*, $\frac{1}{3}$ of a cubic yard in bank; *Level Hauling*, $\frac{2}{3}$ of a cubic yard in bank; *Ascending Hauling*, $\frac{1}{2}$ of a cubic yard in bank.

Loosening, etc.—In *Loam*, a three-horse plough will loosen from 250 to 800 cubic yards per day of 10 hours.

TABLE SHOWING THE AMOUNT OF LABOUR PRODUCED BY ANIMAL POWER.

Manner of Application.	Power.	Velocity per Second.	Weight Raised, Foot per Minute.	Horses Power for the Period given.
10 Hours per Day.	Lbs.	Feet.	Lbs.	No.
Man throwing earth with a shovel a height of 5 feet	6	$1\frac{1}{5}$	480	3·7
Man wheeling a loaded barrow up an inclined plane height one-twelfth of length	132	$\frac{5}{8}$	4,950	90·0
Man raising and pitching earth in a shovel to a horizontal distance of 13 feet	6	$2\frac{1}{4}$	810	14·7
Man pushing and drawing alternately in a vertical direction	13	$2\frac{1}{2}$	1,950	35·5
Man transporting weight upon a barrow, and returning unloaded	132	1	7,920	144·0
Man walking upon a level	143	5	42,900	780·0
Horse drawing a four-wheeled carriage at a walk	154	3	27,720	504·0
Horse with load upon his back at a walk	264	$3\frac{3}{4}$	59,400	1080·0
Horse transporting a loaded waggon, and returning unloaded at a walk	1,540	2	184,800	3360·0
Horse drawing a loaded waggon at a walk	1,540	$3\frac{3}{4}$	346,500	6300·0
8 Hours per Day.				
Man ascending a slight elevation, unloaded	143	$\frac{1}{2}$	4,290	62·0
Man walking, and pushing or drawing in a horizontal direction	26	2	3,120	45·2
Man turning a crank	18	$2\frac{1}{2}$	2,700	39·0
Man upon a treadmill	140	$\frac{1}{2}$	4,200	60·9
Man rowing	26	5	7,800	113·0
Horse upon a revolving platform, at a walk	100	3	18,000	260·8
Ox upon a revolving platform, at a walk	132	2	15,840	229·5
Mule upon a revolving platform, at a walk	66	3	11,880	172·2
6 Hours per Day.				
Man transporting a weight upon his back, and returning unloaded	140	$1\frac{3}{4}$	14,700	160·5
Man transporting a weight upon his back up a slight elevation, and returning unloaded	140	$\frac{1}{5}$	1,680	19·0
Man raising a weight by the hands	44	$\frac{1}{2}$	1,320	14·4

In advocating the employment of mechanical tractors on the farm, *Modern Farming* states that the horse eats annually the product of five acres. According to Edison, the efficiency of the horse is about 2 per cent.

Notes on Animal Power.

(*R. T. Hancock.*)

The amount of foot-lbs. of energy which a man engaged on heavy labour can exert during a working day is entirely bound up with fatigue and opportunity for recovery from fatigue, and is a question of physiology rather than of dynamics. The number of hours constituting a working day and the opportunities given during the working day for at least partial replacement of the waste of the muscle tissues are the governing factors. All forms of human energy, physical or mental, are similarly conditioned. All unnecessary motions or distractions produce fatigue just as much as if they formed part of the useful work done, and correspondingly reduce the useful work possible. The basis of the subject is fully treated by Taylor in his 'Principles of Scientific Management.' Instances are given of the great increase in work possible by careful attention to length of working day, provision of short periods for rest, fixing the actual percentage of the working day during which the labourer can remain under load, the optimum load, and the planning of the work to enable it to be done with the minimum of motions. The performance of labourers loading pig-iron from the ground into railroad cars an average distance of 36 ft. away was raised from 12½ to 47½ tons per man per day; of labourers shovelling iron-ore from cars, from 16 to 59 tons per day; and the number of bricks laid by a bricklayer, from 120 to 350 per hour.

The average labourer is not only incapable of planning his work so as to effect it with the least waste of energy, but many of the conditions affecting its amount are not under his control, but that of the management. The intelligence of the labourer of course plays no small part, but it is the function of scientific management, according to Taylor, to train each individual to follow the routine which the management has evolved as tending to maximum production for a given expenditure of energy. The expenditure of energy by the labourer, or the amount of fatigue involved, being much the same as where no system is followed, the increased production benefits chiefly the employer who has made this state of things possible, and the extra pay which the labourer may receive bears only a small proportion to the extra useful work he accomplishes. Even in highly skilled and specialised trades the improvement in output following on the adoption of scientific systems of work-planning is very great, but its principal field would appear to lie in the improvement of the performance of the lowest and most unintelligent class of labour. As instancing the differences which already exist due solely to the class of labour employed, Hoover ('Principles of Mining') considers that in the simplest forms of mining work, such as shovelling or tramming, one white labourer equals two to three members of the coloured races, and in the more highly skilled branches such as mechanics, the proportion rises to 1 to 7, or even 1 to 11. As under the principles laid down by Taylor the labourer eventually ceases to use any initiative of his own but becomes practically an automaton, it would appear possible to train the lowest type of labour so that they could eventually replace on an equal footing men whose higher attributes fit them for a better class of work.


SECTION III

SURVEYING—SURVEYING INSTRUMENTS—ASTRONOMY—ASTRONOMY IN FIELDWORK—DRAWING

(With contributions by R. T. Hancock, Assoc.Inst.M.M., H. A. Miles, Reginald Ryves, A.M.I.C.E., Fred. Simpson, A.M.I.C.E., and others.)

C. F. CASELLA & CO. LTD.

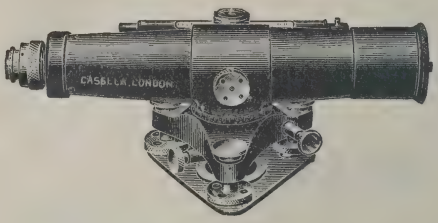Makers of Surveying, Drawing and other Scientific Instruments




New Model
DUMPY
LEVEL

(See page 160)

New Model
FIVE INCH
THEODOLITE

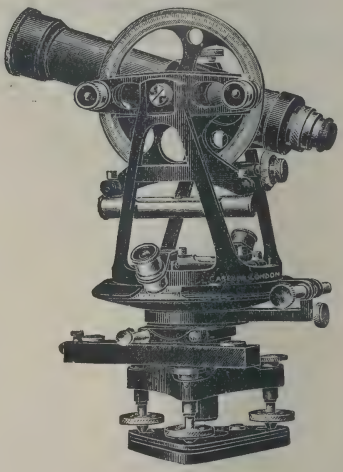(See page 160)



Write for Pamphlets describing these Instruments. They have novel features.

49 & 50 PARLIAMENT STREET, LONDON, S.W. 1

SECTION III

SURVEYING.

Chaining.

Chains.—The surveying chain is 22 yards = 66 feet long. It consists of 100 links, and each link = 7·92 inches. This chain is known as 'Gunter's' chain.

Another chain is known as the '100-foot' chain, and consists of 100 links, each 1 foot long. It is used almost exclusively for work done abroad.

A third form is the 'Decimetre' chain; this is divided into 100 links, each of which measures a decimetre = ·328 foot.

Chain Measurement.—The most careful measurement that can be made with the common surveying chain is liable to an error of $\frac{1}{800}$ of the distance measured, and an ordinary measurement across fields, &c., to an error of $\frac{1}{500}$.

Chain measurement alone will not suffice for a greater extent than a square mile on a scale of 6 inches to a mile; or than $\frac{1}{16}$ square mile on a scale of 20 inches to a mile.

Arrows.—With each chain 10 arrows or pins of strong wire about $1\frac{1}{2}$ feet long, and preferably having a piece of red cloth tied to the ring of each, are carried.

Ranging.

Poles and Ranging Rods.—The former are poles of red pine about 15 feet high, 2 inches thick at the bottom and $\frac{3}{4}$ inch at the top; each should be shod with an iron shoe. The ranging rods are about 6 feet high, and have a white and red flag about 9 inches square at the top.

Offset Staff.—A narrow slip of deal about $1\frac{1}{2}$ inches wide, 1 inch thick, and 10 links long, divided into links. It is used for the purpose of measuring small distances from the line to hedges, &c.

The statute acre in England consists of 10 square chains, that is, of 10 square blocks of land whose length and breadth are 1 chain each; or, taking 10 blocks as one whole block, then an acre is equal to the area of a rectangle whose base is 10 chains and perpendicular 1 chain; or to any other rectangle, the product of whose base and perpendicular also equals 10 chains: thus, 4 chains base with $2\frac{1}{2}$ chains perpendicular, and 2 chains base with 5 chains perpendicular, are each equal to 1 acre.

With any quantity less than 1 chain, to bring feet into links add $\frac{1}{2}$ more; to bring links into feet take $\frac{1}{2}$ less.

Mensuration.

To find the Area of a Triangle when the Base and Perpendicular Height are given.—Multiply the base by half the height, or *vice versâ*.

To find the Area of a Triangle when the Three Sides are given.—Take half the sum of the sides, subtract each side severally from this sum, then multiply this and the three remainders together, and take the square root for the area.

To find the Area of a Rectangular Figure.—Multiply the length by the breadth; the product will be the area.

To find the Area of a Trapezoid.—Multiply half the sum of the two parallel sides by the distance between them.

To find the Area of a Parallelogram whose Angles are not Right Angles. Multiply the length of any one of the sides by the perpendicular let fall on it from the angle opposite that side.

To find the Area of a Trapezium.—Divide the trapezium into two triangles, and find the areas of the latter by the first rule.

To find the Area of an Irregular Polygon.—Divide the polygon into trapeziums and triangles, and find the sum of the areas of each.

To find the Area of an Irregular Figure.—Draw the figure on fine cardboard or thin sheet-metal, cut the same carefully out, and weigh it with an accurate balance. Then this weight, compared with the weight of a piece of the cardboard or metal of a definite size—say 1 inch square—gives at once the area required.

Calculation of Areas from Co-Ordinates.

If necessary adjust the traverse so that the co-ordinates correctly close the figure.

Consider each line round the figure, not the stations.

Take the total, or reduced, departures of the stations at each end of one line, add them algebraically, and divide by two. This gives the 'middle departure' of that line.

Repeat for all the lines of the figure.

It makes no difference from what initial point the departures are reckoned, whether from one of the stations on the figure, or from another point either inside or outside the figure.

Taking each line round the figure in order—it makes no difference which way round—take the difference between the reduced latitudes of the stations at each end of the line. The result is the same as the actual amount of Northing or Southing made by that particular line.

Multiply these results for each line by the middle departure of the same line, paying attention to the algebraic sign of each factor, and add all the results together algebraically.

The result is the area of the figure in squares of the units employed in measuring the length of the sides.

If these are feet, then

divide by 27,878,400 (Log 7·445 2678) for sq. miles; divide by 43,560 (Log 4·639 0878) for acres.

In the logarithmic computation of middle departures by latitudes, it is convenient to use the arithmetical complements of the logs given in preceding paragraph, adding all three logs, and thus avoiding taking out differences.

The terms latitude and departure are mutually interchangeable throughout the above.

TRIANGULATION.

For large surveys a base line is accurately measured and triangles built upon it, the sides being for 6 inches scale from $\frac{3}{4}$ to $1\frac{1}{2}$ mile. Each point should, if possible, be fixed by three distances.

Example.—AB (fig. 106) is the base line; C, D, E, F are convenient points to be fixed by triangulation.

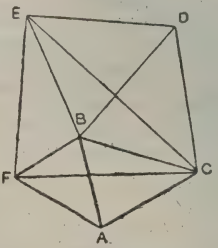


Fig. 106.

AC, AF, BF and BC being obtained, two values of FC can then be found from FBC and FAC, and then two values of FE from FEB and FEC, and so on. In plotting the triangulation the long lines EF, FC, EC should be first laid down.

AB = 5,230 feet measured by chain.
BAC = 55° 30′ 15″
CBA = 64° 21′ 25″ } measured by instrument.
BCA = 60° 8′ 20″

$$BC = \frac{AB \sin BAC}{\sin BCA}.$$

Log AB = 3·7185017
Log sin BAC = 9·9196154
13·6381171
Log sin BCA = 9·9381368
Log BC = 3·6999803
BC = 4970

The triangles are then broken up into smaller ones and measured by the chain.

Simson's Rule for Area Computation.




FIG. 107.

Divide base into any even number of equal parts, and measure length of perpendiculars or ordinates through each division.

If S = sum of lengths of first (f) and last (l) ordinates; E = sum of lengths of intermediate even ordinates; N = sum of lengths of intermediate odd ordinates; d = common distance between ordinates; then

$$\text{Area} = \frac{S + 4E + 2N}{3} \times d.$$

See also Weddle's Rule, p. 24.

Rate of Surveying.

The average daily progress of a good surveyor in England, surveying with one chainman, for the 6-inch-to-a-mile scale, is, according to Frome—

Close large village	about	5 acres.
Villages and surrounding fields, etc.	„	14 acres.
Close country, gentlemen's houses, etc.	„	20 acres.
Medium country, ordinary fields, and scattered farms	„	30 to 32 acres.
Open moorland, with roads, streams, boundaries, cart tracks, etc. (no fields)	„	55 acres.

A survey of a piece of country of about 6 square miles, on a scale of 6 inches to a mile (which would comprise measuring and levelling base line, triangulating, finding variation of the compass, traversing the principal roads, filling in detail by prismatic compass, contouring to every 25 feet, and completing fair plan), would take a good surveyor thirty working days.

A greater area takes less time in proportion, for the base is the same, as also variation of compass and part of the triangulation.

To ascertain the Distance of an Inaccessible Object.

To measure a Base Line across a River.

Let DA (fig. 108) be the direction of the line which has been measured up to the river. It is required to ascertain the distance BA at once upon the ground, so as to continue the measurement of the line.

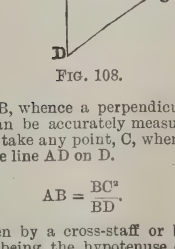


FIG. 108.

On the line DA take any point, B, whence a perpendicular, BC, can be taken, which will be free from obstruction, so that BC can be accurately measured; carry the range on across the river, and at A set up a flag; on BC take any point, C, whence A can be seen; and at C erect a perpendicular to AC, intersecting the line AD on D.

Measure DB; then

$$AB = \frac{BC^2}{BD}.$$

These angles can either be taken by a cross-staff or by the chain, with the distances of 30 links, 40 links, and 50 links; 50 being the hypotenuse of a right-angled triangle when the base and perpendicular are respectively 30 and 40.

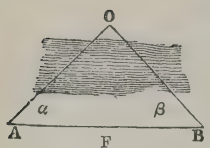


FIG. 109.

To measure the Width of a River with the Base Line alongside of it.

Take at the ends of the base line, AB (fig. 109), with a theodolite, the angles α and β, made between the base line and a flag, O, placed at the edge, on the other side of the river; then width OF is

$$OF = AB \frac{\tan \alpha \tan \beta}{\tan \alpha + \tan \beta}.$$

To find the Distance of one Object from another, where a River divides them, without using the Theodolite.

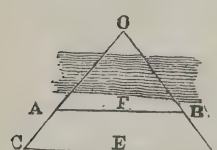


FIG. 110.

Let O and A (fig. 110) be the given objects, and AO the distance required. From A draw AB at *any* angle to AO, and produce OA to C, measuring AC about one-third length of AB; from C measure CD, parallel to AB, OBD being in one straight line. To make CD parallel to AB, at A and B erect equal perpendiculars, which can be done either by a cross-staff or by means of the unit proportion of the sides of a right-angled triangle, viz. 3, 4, and 5, or any multiples of them whatever. Then

$$AO = \frac{AB \cdot CA}{CD - AB}.$$

If the perpendicular distance OF be required, then this can be obtained by the formula—

$$OF = FE \frac{OA}{AC}.$$

Or we can so select the point A as to have OAC at right angles to the river, and make AB and CD at right angles to OAC, when AO, given by the foregoing formula, gives, of course, the required perpendicular distance.

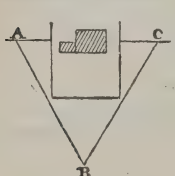


FIG. 111.

To continue the Measurement and Direction of a given Line when any Obstacle stands in the way, which cannot be crossed but can be avoided by going to the right or left.

At any point, A (fig. 111), on the given line, AC, take an angle with the given line, of 120° if you would turn to the left, or 240° if to the right, as in the present case, and proceed measuring to B till an angle of 60° made with this line towards the first line, AC, will carry you clear of the obstacle. Take this angle, ABC, 60°, and measure BC the same distance as AB; the point C will then be on the given line, and AC will be equal to AB or BC. By taking an angle of 240° with the line BC, the range of the line can be continued.

General Remarks.

1. Avoid taking bearings and distances along a circuitous boundary line like *abc* (fig. 112), but run the straight line *ac*, and at right angles to it measure offsets to the crooked line. 2. If it is desired to survey a straight line from *a* to *c*, but the instrument cannot be directed precisely towards *c*, on account of intervening obstacles, first run a trial line, *am*, as nearly in the proper direction as can be guessed. Measure *mc*, and calculate a distance, *y*, say, so that *am* is to *mc* as is 100 ft. to *y*. Lay off *ao* equal to 100 ft., and *os* equal to *y*, and run the final line *asc*. Or, if *mc* is quite small, calculate offsets like *os* for every 100 ft. along *am*. 3. When *c* is visible from *a*, but the intervening ground difficult to measure along on account of marshes, &c., extend the side *ya* to good ground at *t*; then, making the angle *ytd* equal to *yac*, run the line *tn* to that point, *d*, at which the angle *ndc* is found by trial to be equal to the angle *atd*. It will rarely be necessary to make more than one trial for this point *d*;

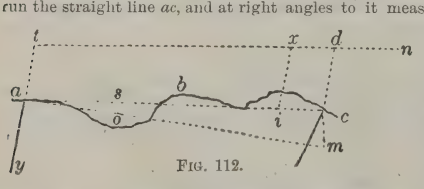


FIG. 112.

for, suppose it to be made at x, see where it strikes ac at i; measure ic, and continue from x, making $xd = ic$. 4. In the case of a very irregular piece of land, or a lake (fig. 113), surround it by straight lines. Survey these, and at right angles to them measure offsets to the crooked boundary. 5. When between two objects, m and n (fig. 114), and it is wished to place oneself in range with them, lay a straight rod, cb, on the ground, and point it to one of the objects, m; then go to the end c, and see if it points to the other object; if it does not, then, by successive trials, find the position, ed, in which the rod points to both objects, and consequently is in range with them. If no rod is at hand, two stones will answer, or two chain-pins. A plumb-line (a pebble tied to a piece of thread) will add to the accuracy of ranging the rod, or stones, &c.



FIG. 113.




FIG. 114.

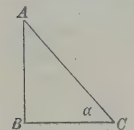


FIG. 115.

TO MEASURE THE HEIGHT OF AN OBJECT.

When the Base is Accessible.

Measure any distance from the base of the object as nearly equal as possible to the height, and take the angle of elevation by the theodolite.

Let BA (fig. 115) be the object; measure BC, and take the angle a; then

$$BA = BC \tan a.$$

When the Object is Inaccessible.

If the object be inaccessible, so that DB *cannot be measured*, range DB (fig. 116) on to C, and taking BC nearly equal to DB, measure BC, and at B and C take the angles of elevation, a and a_1; then

$$AD = BC \tan a_1 \left(\frac{\tan a}{\tan a - \tan a_1} \right).$$

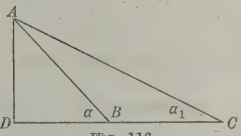


FIG. 116.

CHAINING ON SLOPES.

A = angle of slope with horizon. L = length of line chained on slope.

l = length of line reduced to the horizontal.

$$l = L \cos A.$$

TABLE OF DEDUCTIONS OR ADDITIONS TO BE MADE PER 100 FEET IN CHAINING OVER SLOPING GROUND

In order to reduce the inclined measurements to horizontal ones.

Slope in Deg.	Deduct Feet.	Rise in 100 ft. Hor.	Slope in Deg.	Deduct Feet.	Rise in 100 ft. Hor.	Slope in Deg.	Deduct Feet.	Rise in 100 ft. Hor.	Slope in Deg.	Deduct Feet.	Rise in 100 ft. Hor.
¼	·001	·436	5¼	·420	9·189	10¼	1·596	18·08	15¼	3·521	27·26
½	·004	·873	½	·460	9·629	½	1·675	18·53	½	3·637	27·73
¾	·009	1·309	¾	·503	10·07	¾	1·755	18·99	¾	3·754	28·20
1	·015	1·746	6	·548	10·51	11	1·837	19·44	16	3·874	28·67
¼	·024	2·182	¼	·594	10·95	¼	1·921	19·89	¼	3·995	29·15
½	·034	2·619	½	·643	11·39	½	2·008	20·35	½	4·118	29·62
¾	·047	3·055	¾	·693	11·84	¾	2·095	20·80	¾	4·243	30·10
2	·061	3·492	7	·745	12·28	12	2·185	21·26	17	4·370	30·57
¼	·077	3·929	¼	·800	12·72	¼	2·277	21·71	¼	4·498	31·05
½	·095	4·366	½	·856	13·17	½	2·370	22·17	½	4·628	31·53
¾	·115	4·803	¾	·913	13·61	¾	2·466	22·63	¾	4·760	32·01
3	·137	5·241	8	·973	14·05	13	2·563	23·09	18	4·894	32·49
¼	·161	5·678	¼	1·035	14·50	¼	2·662	23·55	¼	5·030	32·98
½	·187	6·116	½	1·098	14·95	½	2·763	24·01	½	5·168	33·46
¾	·214	6·554	¾	1·164	15·39	¾	2·866	24·47	¾	5·307	33·95
4	·244	6·993	9	1·231	15·84	14	2·970	24·93	19	5·448	34·43
¼	·275	7·431	¼	1·300	16·29	¼	3·077	25·40	¼	5·591	34·92
½	·308	7·870	½	1·371	16·73	½	3·185	25·86	½	5·736	35·41
¾	·343	8·309	¾	1·444	17·18	¾	3·295	26·33	¾	5·882	35·90
5	·381	8·749	10	1·519	17·63	15	3·407	26·79	20	6·031	36·40

The foregoing table gives deductions or additions to be made every 100 ft. as actually chained along sloping ground in order to reduce the sloping measurements to horizontal ones. Even when it is so nearly level that the eye cannot detect the slope, an over-measurement of an inch or two in 100 ft. may readily occur. It is plain that if we measure all the undulations of the ground we shall get greater totals than if we measure horizontally, as is *supposed* always to be done; but since few surveyors pretend to measure horizontally until the slope becomes apparent to the eye, their lines are usually too long by from 1 to 2 inches in 100 ft. To counteract this to some extent chains are frequently made from 1 to 2 inches longer than 100 ft.; and for ordinary purposes the precaution is a good one. When greater accuracy is required the chainmen should be attended by a third person, with a rod and slope-level, for taking the inclinations of the ground. These deductions being made, the remainder will be the actual horizontal distance.

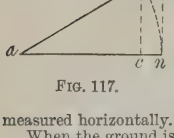


FIG. 117.

For example, in fig. 117 each 100 ft. *ao* measured up or down the slope *ae* plainly corresponds to the shorter horizontal distance, *ac*, the difference or deduction being *cn*. Taking *ao* as radius, then *ac* is the cosine, and *cn* the versed sine of the angle *ean* of the slope. Therefore *ao* multiplied by the nat. cosine of the angle *ean* gives the reduced horizontal distance, *ac*, which, taken from *ao*, gives the deduction *cn* of our table.

But if, while chaining along the slope *ae*, we wish to drive stakes that shall correspond with horizontal distances, *an*, of 100 ft., it is evident that we must add *cn* to each 100 ft. *ao*, as shown at *xe*, and the stake must be driven at *e* instead of at *o*. Observe that $xe = cn$ must be measured horizontally.

When the ground is very sloping all this calculation may be avoided, where great accuracy is most required, by actually holding the chain horizontal, as nearly as can be judged by eye, and finding, by means of a plumb-line, where its raised end would strike the ground. A whole chain at a time cannot be measured in this way, but shorter distances must be taken, as the ground requires—at times, on very steep ground, not more than 5 or 10 ft.

The following short rules may be used for finding the approximate correction to be made :—

(1.)

Square the number of degrees in the slope, multiply by $1\frac{1}{2}$, and obtain correction in hundredths of a foot.

Example.—10° slope. $10^2 \times 1\frac{1}{2} = 150$, or 1·50 ft. correction.

(2.)

Square the rise in feet per 100 ft. horizontal, and divide by 2; this gives correction in hundredths of a foot.

Example.—10 ft. rise in 100. $10^2 \div 2 = 50$, or 0·50 ft. correction.

SCALES FOR SURVEYS.

Ordnance Survey Scales.

VARIOUS SCALES OF MAPS OF GREAT BRITAIN AND IRELAND.

Natural Scales.	Inches to one Statute Mile.	Statute Miles to one Inch.	Chains to one Inch.	REMARKS.
$\frac{1}{500}$	126·720	0·0079	0·63$\dot{1}$	Town maps.
$\frac{1}{528}$	120·000	0·008$\dot{3}$	0·6$\dot{6}$	
$\frac{1}{1056}$	60·000	0·01$\dot{6}$	1·$\dot{3}$	
$\frac{1}{2500}$	25·344	0·0395	3·15$\dot{6}$	Cadastral, or parish, maps of the United Kingdom.
$\frac{1}{2640}$	24·000	0·041$\dot{6}$	3·$\dot{3}$	Map of Alnwick.
$\frac{1}{5280}$	12·000	0·08$\dot{3}$	6·$\dot{6}$	Special maps of districts around London and Plymouth.
$\frac{1}{10560}$	6·000	0·1$\dot{6}$	13·$\dot{3}$	County maps of United Kingdom, and special maps.
$\frac{1}{15840}$	4·000	0·25	20·0	Special index.
$\frac{1}{63360}$	1·000	1·0	80·0	General map of United Kingdom, and special maps.

Small-Scale Maps of Great Britain and Ireland.

Fifteen miles to one inch: British Isles.

Ten miles to one inch: Great Britain: (*a*) in outline, with water coloured blue; (*b*) hills shaded, water blue, roads sienna. Ireland: (*a*) outline engraved; (*b*) hills shaded, water blue, roads sienna.

Four miles to one inch: England: (*a*) engraved in outline; (*b*) conspicuously coloured. Also county maps with main roads coloured. Ireland and Scotland: (*a*) outline, water blue; (*b*) coloured. County maps of Scotland.

Two miles to one inch: England and Scotland; coloured.

One mile to one inch: England: (*a*) in outline with *contours*; (*b*) hills shaded in brown; (*c*) hills shaded in black; (*d*) coloured, with *contours* in red. Ireland: (*a*) in outline; latest editions with *Contours*; (*b*) hills shaded in black (unrevised); (*c*) coloured; (*d*) in outline, with *boundaries* of counties and urban and rural districts in red. Scotland: (*a*) in outline, with contours; (*b*) hills shaded in brown, zincographed; (*c*) hills shaded in black (unrevised); (*d*) coloured.

Maps of the India Survey Department.

One mile to one inch: Topographical maps; about one-eighth of the total number has been published (1914).

Four miles to one inch: Prepared in sheets of one degree by one degree. Publication only recently begun.

Thirty-two miles to one inch: The outline engraving of this new map of India and adjacent countries is completed. The hills are shown in the 'layer' system. (*a*) A new edition of the railway, canal, and road map of India. (*b*) A new map of India and adjacent countries, hills shown on the 'layer' system. (*c*) A new edition of the map showing railway stations.

DIP OF HORIZON.

d = dip of horizon, in seconds. h = height of observer's eye, in feet.

s = distance of horizon, in statute miles. n = distance of horizon, in nautical miles.

$d = 57{\cdot}4\sqrt{h}$; approximate, varying with temperature. $h = {\cdot}666s^2 = {\cdot}86n^2$.

Table of Dip and Distance of Horizon at Various Heights.

h.	s.	n.	d.	h.	s.	n.	d.
Feet.	Miles.	Miles.	′ ″	Feet.	Miles.	Miles.	′ ″
5	2·739	2·411	2 8·35	80	10·959	9·644	8 33·4
10	3·874	3·409	3 1·51	90	11·624	10·229	9 4·54
15	4·745	4·176	3 42·31	100	12·253	10·783	9 34
20	5·480	4·822	4 16·7	150	15·007	13·206	11 43
25	6·126	5·391	4 47	200	17·329	15·249	13 31·76
30	6·711	5·906	5 14·39	300	21·223	18·676	16 34·2
35	7·249	6·379	5 39·58	400	24·507	21·566	19 8
40	7·749	6·819	6 3·03	500	27·399	24·111	21 23·5
45	8·219	7·233	6 25·05	1,000	38·749	34·099	30 15·1
50	8·664	7·624	6 45·88	2,000	54·799	48·223	42 47
60	9·491	8·352	7 24·62	3,000	67·115	59·061	51 23·9
70	10·252	9·021	8 0·24	4,000	77·498	68·198	60 30·3

To reduce a Measured Base to the Level of the Sea.

Let r represent the radius of the earth corresponding to the base b at the level of the sea, and $r + a$ the radius referred to the level of the measured base, B; then

$$r + a : r :: B : b, \quad \text{or,} \quad b = B \times \frac{r}{r+a}, \quad \text{and,} \quad B - b = B - B\frac{r}{r+a} = B\left(1 - \frac{r}{r+a}\right)$$

$$= B\left(\frac{a}{r+a}\right) = B\left(\frac{\frac{a}{r}}{1+\frac{a}{r}}\right) = \frac{Ba}{r}\left(\frac{1}{1+\frac{a}{r}}\right) = \frac{Ba}{r}\left(1 - \frac{a}{r} + \frac{a^2}{r^2} - \text{\&c.}\right) = B\left(\frac{a}{r} - \frac{a^2}{r^2} + \frac{a^3}{b^3} - \text{\&c.}\right).$$

But the radius of the earth being very great in comparison with the difference of level, a, we have the correction, $B - b$, or d, say, sufficiently accurate by retaining only the first term. Hence

$$d = \frac{Ba}{r} \text{ is the value to be deducted from the measured base.}$$

Spherical Excess.

$$E, \text{ in seconds} = \frac{S}{r_2 \sin 1''} = \frac{ab \sin C}{2r^2 \sin 1''}$$

S = the area of the triangle. r = the radius of the earth.

$$S = \frac{ab \sin C}{2} = \sqrt{s(s-a)(s-b)(s-c)}, \quad s \text{ being} = \frac{a+b+c}{2}.$$

Between latitudes 45° and 25° the spherical excess amounts to about 1′ for an area of 75·5 square miles.

Hence, if the area in square miles be known, a close approximation to the spherical excess will be had by dividing the area by 75·5. Log mean radius of the earth in yards = 6·8427917. If the three angles of a triangle are assumed to have been equally well determined, the previous determination of the spherical excess is not necessary for the calculation of the sides, though it will be required for estimating the relative value of the observations. For the sides of a spherical triangle may be computed as if they were rectilineal if one-third the excess of the sum of the three angles above 180° is deducted from each of the three observed angles, in which case

$$\text{side } b = \text{side } a \sin (B - \tfrac{1}{3}E) \div \sin (A - \tfrac{1}{3}E).$$




FIG. 118.

SURVEYING SOUNDINGS.

To determine the position of any sounding, A (fig. 118), when afloat, take simultaneously the bearings of three known objects on shore, B, C, D, plot the angles on tracing-paper, and move them on plan until the lines cut the points B, C, D.

Another method.—B, C, and D being known points on shore, and the angles BAC, CAD having been measured—

Double the angle BAC, and deduct this doubled angle from 180°. Halve the remainder, and set off from B and C angles, each equal to the half remainder—that is, BCE, CBE; then BE = EC. With E as a centre and radius EC, describe the circle BCA. Then the point A will be in the circumference of this circle.

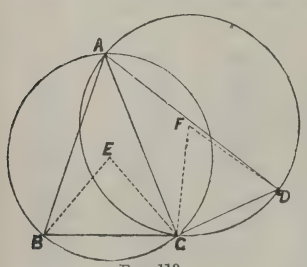



FIG. 119.

In like manner, double the angle CAD and proceed as before; the point A will be in the circumference of the circle CAD. Being in the circumference of the two circles, the point A will therefore be at the intersection of the two.

Suppose the angle BAC to have been 40°, CAD 30°, the double of BAC is 80°; then 180° − 80° = 100°, which divided by 2 gives 50°. Set off from B and C angles equal to 50°. In like manner, 2CAD = 60°, and 180° − 60° = 120°; half 120° = 60°; from C and D set off 60°. With E and F as centres (fig. 119), and radii EB, FC, describe the two circles, whose intersection determines the position, A, of the observer.

W. H. HARLING'S
Improved Pocket Theodolite.

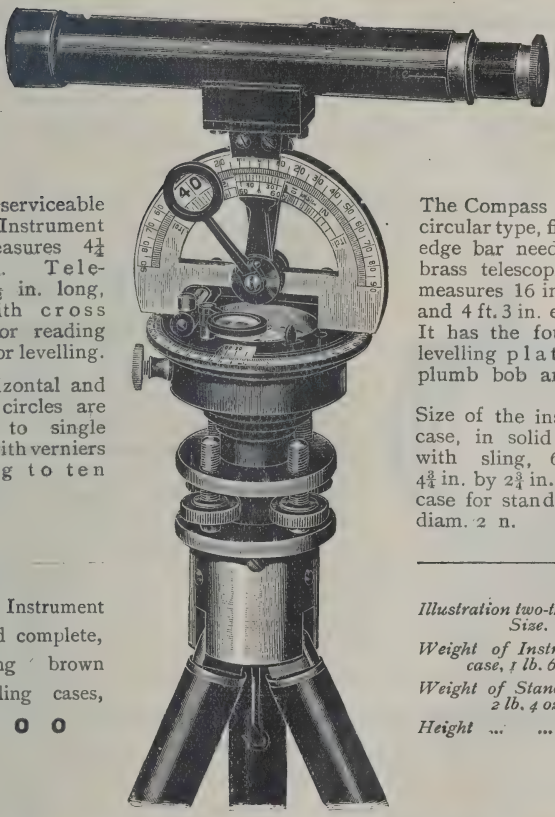A MOST USEFUL AND COMPACT INSTRUMENT FOR ENGINEERS, ARCHITECTS AND SURVEYORS.



This serviceable little Instrument only measures 4¼ in. high. Telescope 5½ in. long, fitted with cross webbs for reading off staff, or levelling.

The horizontal and vertical circles are divided to single degrees with verniers reading to ten minutes.

The Compass is of the circular type, fitted with edge bar needle. The brass telescopic stand measures 16 in. closed, and 4 ft. 3 in. extended. It has the four screw levelling plates, also plumb bob and hook.

Size of the instrument case, in solid leather with sling, 6 in. by 4¾ in. by 2¾ in. Size of case for stand, 16 in., diam. 2 n.

Price of Instrument and Stand complete, in strong brown leather sling cases,

£15 0 0

Illustration two-thirds Full Size.

Weight of Instrument in case, 1 lb. 6 oz.


Weight of Stand in case. 2 lb. 4 oz.

Height ... ... 4 ft. 7 in

W. H. HARLING,

117 MOORGATE, LONDON, E.C. 2.

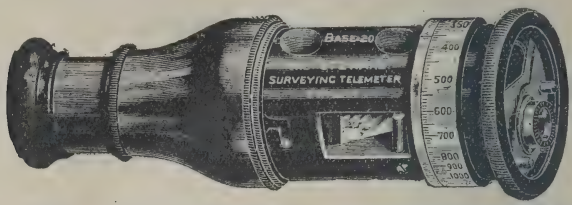ESTABLISHED 1851.



THE 'STEWARD' POCKET SURVEYING TELEMETER with sighting telescope, will rapidly determine and mechanically compute the distance of any object within the range of vision. In Topographical Survey from a fixed point any number of minor points can be located and their distances determined from the fixed point and from each other. Distances are indicated on the scale in terms of units of the base, so that any system of measurement can be employed. Size 4½ by 1½ inches.

In Leather Sling Case - - £11 10 0

With Booklet of Instructions.



THE 'STEWARD'

Hypsometric Aneroid.

Constructed to eliminate many common sources of error. Reads to 5 feet or 2 metres without a vernier. No calculation necessary. No parallactic error. Altitude scale automatically locks. Movement compensated for temperature. Diameter of dial 3¼ inches. Aneroid fixed to leather sling case, cannot drop to ground. Swing thermometer for ascertaining air temperature.

Range of Altitude Scale	6,000 feet, reading to 5 feet	..	**£13**	**10**	**0**
Ditto ditto	10,000 feet, ditto	..	**13**	**15**	**0**
Ditto ditto	2,000 metres, reading to 2 metres		**13**	**10**	**0**
Ditto ditto	3,000 metres, ditto		**13**	**15**	**0**

These Aneroids can also be supplied with scales for higher altitudes.

THE FERGUSON SOLAR CHRONOMETER gives mean or standard time in any locality without calculation. It can be placed in the meridian by its own indications, and does not need a level surface or to be permanently fixed **£6 15 0**

J. H. STEWARD, Ltd., Opticians & Instrument Makers, 406 and 457 STRAND, LONDON.

Established 1852.

To reduce a Sounding to Low Water.

h = vertical rise of tide, in feet. h' = height of tide above low water, in feet, at the time t'.
t = time between high and low water. t' = time from time of sounding to low water, in hours.

$$\frac{h}{2}\left(1 \mp \cos\frac{180t'}{t}\right) = h' ; \; - \cos \text{ when } \frac{180t'}{t} < 90°, \text{ and } + \cos \text{ when } > 90°.$$

EXAMPLE.—Low water occurring at 3.45, and high water at 10.15 P.M., a sounding taken at 5.30 P.M. was 18·25 feet; what was the depth at low water, the vertical rise being 10 feet?

$$h = 10 \textit{ feet}; \; t = 5h.\ 30m. - 3h.\ 45m. = 1h.\ 45m. = 1{\cdot}75 \textit{ hours}.$$
$$t = 10h.\ 15m. - 3h.\ 45m. = 6h.\ 30m. = 6{\cdot}5 \textit{ hours}.$$

Then

$$\frac{10}{2}\left(1 \mp \cos\frac{180 \times 1{\cdot}75}{6{\cdot}5}\right) = 5(1 - 48°\ 27') = 5 \times (1 - {\cdot}662) = 1{\cdot}69 \textit{ feet}.$$

Sounding	18·25 *feet*.
Reduction	1·69 ,,
	16·56 ,,

SURVEYING INSTRUMENTS.

(W. F. Stanley.)

THE PLAIN THEODOLITE.

In this instrument (fig. 119A) there is a horizontal circle reading to minutes by two verniers, and a vertical half circle reading also to minutes by a single vernier—both readings being provided with clamps to fix the telescope nearly to the reading required, and tangent screws to make the final adjustment. Below the horizontal divided limb of this theodolite a separate axis is formed, so that every reading may be set to start from zero. The telescope has two turned collars which rest in a cradle formed of Y-form supports. This form of cradle permits the telescope to be revolved upon its axis to set it in collimation with the object glass, by adjustment of the spider webs in front of the eye-piece until the revolution of the telescope does not appear to displace any small object observed. A magnetic needle of about three inches in length is placed in a compass box over the axis of the instrument. In old instruments this is very difficult to read, from interference of vision by the standards of the telescope. In modern instruments (fig. 119A) an aluminium ring compass is provided, which is read from one side by a microscope. This theodolite is set up upon a tripod stand and adjusted to level, before commencing a survey, by four adjusting screws (parallel plate screws) which are used oppositely to tip the instrument one way or the other until the bubbles of the level tubes on the limb are brought to the centre of their run. As the pressure of these parallel plate screws must be more or less according to the force used, the axis is slightly distorted by them; dull bubble tubes have therefore to be used. Where greater exactness is required, the support, as of every scientific instrument, is placed upon three points only, an arrangement which is termed the tribrach system, and which admits of quick adjustment.

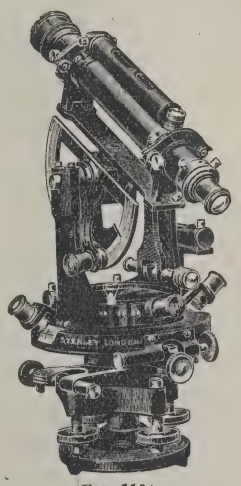


FIG. 119A.

To set up a Tribrach.—Place the level linable with either pair of screws B.C. (fig. 119B, p. 150), and bring the bubble to the centre of its run. Then place the level at right angles to this, so that the screw A comes opposite the centre of the telescope. Bring the bubble to the centre of its run. Now return to first position to see that this is right. If not exact, repeat the operation.

With tribrach support a modern well-ground bubble will read sensibly to five seconds of arc, or, if required in high-class work, even to a single second or less.

ADJUSTMENT OF THE THEODOLITE.

(R. T. Hancock.)

The first and most important adjustment consists in correctly levelling the instrument with its vertical axis pointing truly to the zenith, every time it is set up. Other errors in adjustment can be corrected or compensated by special methods of observation, but correct results are impossible if the theodolite is out of level. This adjustment must precede all others.

Set the instrument up firmly with its legs well spread and bring it approximately level by means of the base adjusting screws, with the aid of the bubble tubes on the vernier plate. Place the telescope as nearly horizontal as possible, with the vertical arc clamped to zero if desired, and bring it over one pair of the base levelling screws, or parallel to a pair in the case of a tribrach base, and observe the position of one end of the bubble of the telescope level in relation to the gradations on the tube. Select and use one end throughout, say, the end of the bubble nearest the eyepiece. Revolve the upper part of the theodolite through 180°, bring the bubble back half way, if it has moved, by means of the base levelling screws. Check by turning the instrument back to its original position. If the bubble remains in its mean position, turn the upper part of the instrument through 90°, so that telescope lies over the other pair of levelling screws, or the remaining one of the tribrach, and bring the bubble to the same position by these. Finally check by turning the instrument slowly through 360°, and see that the bubble remains unmoved. If not, repeat adjustment from the beginning. The bubble may not finally occupy the centre of its tube : this is unimportant. What is important is that it should not move when the instrument is revolved about its vertical axis. If the bubbles of the levels on the vernier plate are not well centered when the instrument is thus levelled, it will be convenient to make them so now by means of the turret screws at the ends of the cases, so that a close approximation to true levels may be obtained when setting up on future occasions. It should make no difference in levelling up whether the two plates revolve together or whether the lower is clamped and the upper free. If it does, it shows that the cones require regrinding.

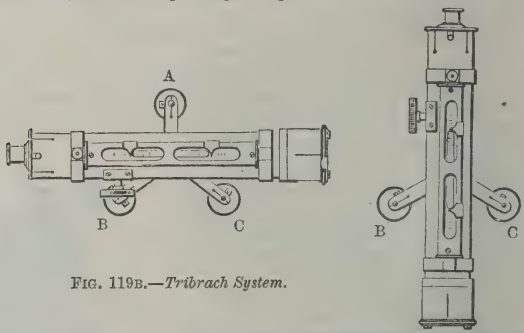


FIG. 119B.—*Tribrach System.*

Adjustment for parallax consists in moving the eyepiece in or out, altering the focus of the object glass to correspond, until the crosshairs of the diaphragm do not appear to move relative to the point viewed when the eye is moved slightly from side to side of the lens opening. Care should be taken not to revolve the eyepiece tube in its casing, as this affects the optical centering of the system of lenses. For this reason the lens cell and its casing are usually provided with corresponding marks by the maker.

The transit axis upon which the telescope swings should be accurately at right angles with the vertical axis of the instrument. The adjustment of this is effected by sliding bearings at the top of the standards, but in cheaper instruments no provision for adjustment in this respect is made, the makers supposedly securing it once and for all by correctly proportioning the height of the standards. Direct the telescope to some high object, such as the finial of a spire. Depress the telescope and mark on the ground the point where the intersection of the hairs falls. Transit the telescope, sight up again, and mark where the intersection falls on the ground the second time. Raise or lower one bearing so that the intersection falls one-quarter of the distance between the marks from the second mark. Check, and repeat if necessary.

The collimation line may be defined as a line joining the optical centre of the object glass and the intersection of the crosshairs. To make it at right angles to the axis on which the telescope swings, set up, level, and sight to a well-defined mark about 100 feet away ; transit the telescope, and mark where the intersection falls in the opposite direction, at about the same distance away and on the same level as near as may be. Revolve the plates through 180° about, and sight to the original mark. Again transit, and mark the new point of intersection, if altered, near the former one. Measure a point one-fourth of the distance between the two from the latter, and move the diaphragm carrying the crosshairs by means of the adjusting screws holding it in the telescope until the intersection covers the measured mark. It will be necessary to loosen all four screws to do this, but care should be taken not to move the diaphragm up or down more than can be helped, and to keep the crosshairs vertical and horizontal. Check by transiting back again to the original mark, which will now not fall under the crosshairs ; bring it under the intersection by the slow motion tangent screw, and transit back again. The intersection should now fall half way between the two original marks.

Having performed the foregoing adjustments we now have the vertical axis of the instrument pointing truly to the zenith, the horizontal axis on which the telescope swings truly at right angles

to the vertical axis, and the line of collimation truly at right angles to the horizontal axis. The collimation line then lies wholly in a vertical plane cutting the horizontal axis at right angles, but does not necessarily lie parallel to the axis of the level on the telescope in that plane. It can be made to do so by altering the lie of one or the other, and in order to avoid disturbing the adjustment just completed, it is better to bring the axis of the telescope-level parallel to the collimation line as it now lies. This is why it was recommended not to disturb the up-and-down position of the collimation line more than can be helped, so as to avoid the necessity for much alteration in the telescope level. This adjustment is not really required for the theodolite, unless it is intended to use it occasionally as a level, and the surveyor who desires to effect it can proceed as described below for the level, except that after setting up beyond the levelled pegs, the telescope is lowered or raised by the slow-motion tangent screw of the vertical arc till the crosshairs read the same on both pegs; the bubble of the telescope level is then brought to the centre of its run by altering the capstan-headed screws at each end of its casing.

Everest's Theodolite.

This instrument was much used in the survey of India, and is a modification of the plain theodolite, in which the cradle fitting, somewhat liable to derangement from its light loose parts, is replaced by a telescope fixed in a solid collar. The segments of arc of this theodolite are used upon each side of the axis, so that double vernier reading may be employed to vertical angles. It was the first English-made theodolite in which the tribrach system of adjustment was employed, and is still considered to be an excellent instrument for survey upon fairly level country.

Lister's Inclinometer.

The construction (fig. 119c) is similar to that of a plain theodolite, but with the addition of an extra vertical axis to the telescope, carried through the horizontal axis at right angles. By this means the telescope can be moved upon this supplementary vertical axis in a plane of any inclination desired, so that if the horizontal axis is set to the slope of a railway cutting a large number of pegs may be set out continuously with the same setting by direct observation through

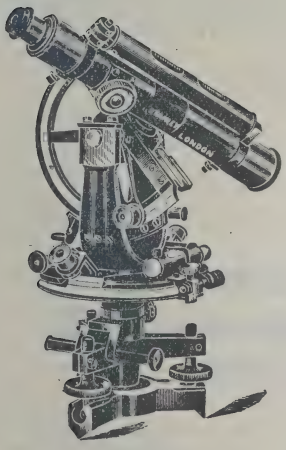


Fig. 119c.

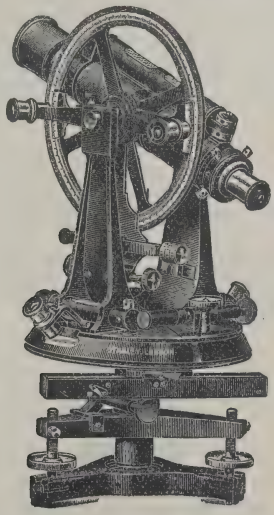


Fig. 119d.

the telescope across any irregularity or inclination of the land surface. The slopes for curves also are readily pegged by means of the special horizontal angle repeater with which the instrument is fitted, so that one angle only need be set and that can be repeated round a curve until complete, when the angle repeater is simply released to return to a straight line.

The instrument is readily made into an ordinary surveying theodolite by fixing the telescope by means of a catch, which places it firmly true to the reading of the arc and limb.

Transit Theodolite.

In modern practice this instrument (fig. 119D), in some form, is generally used. Its great merit is that the telescope being placed high enough above the limb to revolve over half a revolution on its axis, a direct fore-and-back sight can be taken in line with its centre, and, as this may also be done by moving the reading through 180°, it is a good test for the division and the true centering of the instrument. Except for the transitting telescope the general principle of structure of this theodolite is the same as that of the plain theodolite above described. The height necessary for the telescope is generally somewhat reduced by replacing the circular magnetic compass by a magnetic needle placed in a trough under the limb. The needle can move only 20° of arc, but, as it can be brought co-incident with the magnetic north by the lower adjustment of the axis of the theodolite, this arc is quite sufficient. It possesses the advantage of having a longer needle placed in clear daylight for observation. With the bad object-glasses formerly used the cradle adjustment in Y's was necessary for true collimation. In modern instruments the object glasses are truly centered so that the webs or other indices may be placed exactly in the axis of the telescope. On this point, in the old pieced-up instruments every severe shake or journey threw the instrument out of adjustment, and it was necessary that the experienced surveyor should have every facility for restoring this. In modern good work with refined apparatus for adjustment, a permanent index, or diaphragm, as it is termed, may be fixed to position by the maker, which will remain in perfect adjustment with careful usage the whole life of the surveyor. As this index matter is a subject not too well known, it will be discussed further on.

Notes on Diaphragms.

Spider's Webs (fig. 119E)—the oldest form of telescope index—are clear and good, but very delicate, sagging with damp and breaking by tension if they remain so long in the instrument as to become very dry. Unless the user is specially skilled, the re-webbing and re-adjustment must be done by an optician.

Lines on Glass (fig. 119F).—These are accurate and permanent. The presence of the glass diaphragm obstructs a little light at all times, but the great defect of this diaphragm is that it becomes bedewed by changes of temperature and requires cleaning. Where glass is fitted it should be easily removable with means of returning it exactly to its former adjustment.

Point Diaphragms (fig. 119G) should be formed of very sharp fine needle points made of platinum-iridium alloy, which is as hard as finely-tempered steel and is non-corrosive.

This index gives the most exact reading and is permanent, so that an instrument with points will remain in adjustment for many years. In case of dust on the points this can be removed gently with a camel hair brush. The only objection made to this diaphragm is that it requires great care in bringing an object exact to reading, but certainly not greater care than is always desirable. Its precision may be demonstrated most simply. Upon first impression the




Fig. 119E.




Fig. 119F.




Fig. 119G.

point may not appear so fine as a web. Practically it is more exact, as it does not cover the reading, as will be seen by the magnified appearance of the readings (fig. 119H).

Both these readings are of ·4 upwards of the black band, but this quantity is less clear with the web W W than with the point P. This principle is most important with subtense measuring as will be shown presently.

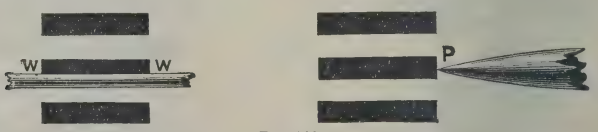


Fig. 119H.

Some objections have been made by railway engineers to the large size of the transit theodolite, as they do not require the vertical circle except occasionally in mountainous districts. To meet this difficulty Messrs. W. F. Stanley & Co. Ltd. have made a transit theodolite (fig. 119I) as low and as portable as the plain theodolite. This transits over the eye end only, which is loaded by a heavy casting to balance the object end, which is made in aluminium for lightness.

Tunnelling Transit Theodolite.

This is a most useful form (fig. 119K) for all underground work. It is built very low and the telescope transits. The vertical axis is made hollow, so that any angle to about 10° may be read

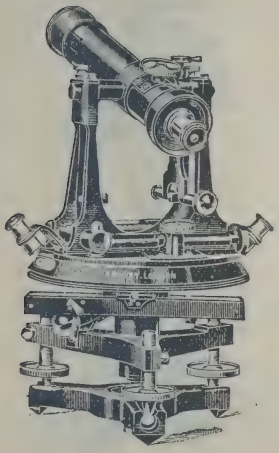


FIG. 119I.

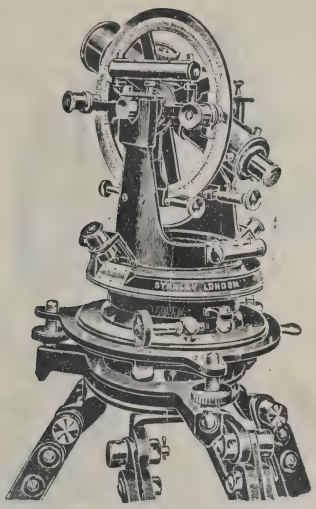


FIG. 119K.

directly below the vertical. This will be found very useful in transferring lines underground from the surface, by sighting down a shaft, and also for plumbing. The hollow centre is supported upon a sliding fitting so that it may be displaced 1½ in. about the centre of the tripod and clamped to its position. It is a form of theodolite most convenient for the mining engineer, in which a long diagonal eye-piece permits a surface line to be observed from the bottom of a deep shaft.

DUNBAR SCOTT'S AUXILIARY TOP AND SIDE TELESCOPE.

Is fitted to theodolites for reading steeper horizontal angles than can be read with the ordinary telescope, also precipitous vertical angles. The zenith-nadir telescope is placed on top of telescope for the former and upon the outside of the standards to project beyond the limb for the latter. This telescope can also be removed so that the instrument then becomes an ordinary transit theodolite.

MICROMETRIC THEODOLITES.

In modern practice for superior triangulation, a vernier reading does not give the necessary accuracy, so the more exact system of reading by a microscope provided with a fine scale in the focus of the eye-piece is employed; over this scale an adjustable web is moved by a fine screw with divided head. With this appliance (fig. 119L, page 154) much finer divisions may be made upon the instrument, and the micrometer scale will subdivide these divisions to read to any exactness desired. Micrometers were formerly employed upon large theodolites only. In modern practice they are used for as small as five-inch circles. The precision of the micrometric system may be shown in that a vernier on a six-inch theodolite can only be made to read satisfactorily 20 seconds of arc. The micrometer on the same instrument will read clearly five seconds. As a rule six-inch instruments are made to read to five seconds; five-inch, to ten seconds; eight-inch, to two seconds; ten-inch, to single seconds. It is necessary with micrometric instruments, even five-inch, that they should be figured at every degree; large instruments to half degrees. The micrometric theodolite is made the same in general structure as the ordinary transit, except for the micrometer.

THE OMNIMETER.

The omnimeter (fig. 120, page 154) is an instrument in which the tangent to a radius reads direct from the axis of the telescope to a rule or stadia of constant length, so that the subtense angle varies with the distance. The instrument consists of a theodolite to which the subtense tangential system is added. In the construction of the instrument there are two sights, one, a telescope to sight the object, and the other, a powerful compound microscope to read divisions upon a tangential scale. The telescope and microscope are united together at 90° to each other with their axes exactly crossing the transverse axis of the theodolite, so as to move together through the

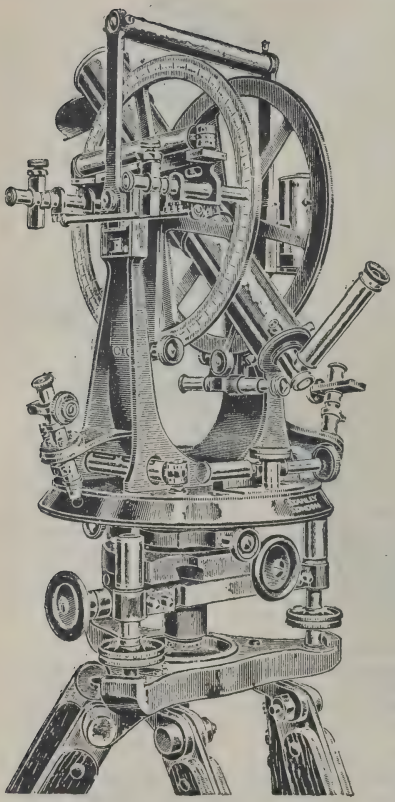


FIG. 119L.

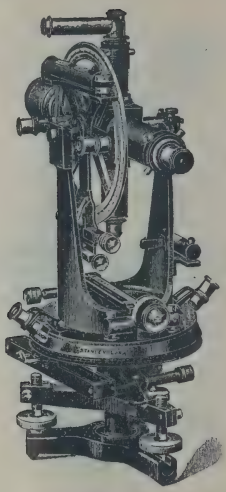


FIG. 120

same amount of angle by the motion of the telescope in traversing the azimuth. A delicate level is placed upon the telescope, and when the bubble is in the centre of its run the scale is at right angles to the axis of the microscope. The scale, which lies flat on the limb at a central distance of six inches, is four inches long, placed in a sliding fitting to adjust longitudinally to its central position by means of a micrometer screw. It is generally divided into 100 parts for numerical calculation. The divisions are subdivided by shorter lines, making the total division 200. The micrometer screw has fifty threads to the inch, and moves over one of the divisions of the scale only. The micrometer head is divided into 100, numbered at the tens ; a vernier placed against the head subdivides each of these divisions into five, making the total micrometer 500 for one complete revolution. The total division of the four-inch scale therefore becomes : 200 (divisions of scale) × 500 (micrometer) = 100,000 in four inches. The scale is placed centrally to the instrument, so that when the telescope is level the microscope is vertical, and reads 50,000 when in perfect adjustment.

The mathematical theory of the instrument is very simple :

In fig. 121, O is the centre point of the axis of rotation, directly over the divided scale, AB ; O*b*, the base line of the instrument, which may be found by experiment or by calculation ; *mn*, a staff of known length, say 10 feet ; *b*, the departure-point of the scale when the telescope is parallel to AB ; in this position, from the nature of the construction, the microscope points in the direction of the line O*b*, which is perpendicular to AB.

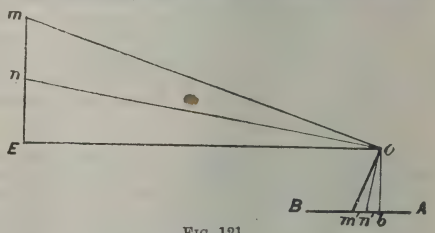


FIG. 121.

Then if the telescope be pointed to *m*, the microscope will be directed to *m'*, the line O*m'* being

perpendicular to the line Om. Again, if the telescope be directed to the point n, the microscope will be in the direction of On' and perpendicular to On. Omn and $Om'n'$ being similar triangles, we have $m'n' : Ob :: mn : OE$; the perpendicular distance from the line mnE passing through the staff mn, $\therefore OE = \frac{mn \times Ob}{m'n'}$; $m'n' : bn' :: mn : n$E, consequently the altitude nE $= \frac{mn \times bn'}{m'n'}$, or $= \frac{bn' \times OE}{Ob}$.

The perpendicular Ob, which is termed the base line of the instrument, when the temperature is not very variable, may be found very accurately by taking OE about 100 feet, and placing the 10-foot staff, mn, as shown in fig. 121; for we have $Ob = \frac{m'n' \times OE}{mn}$.

Let $m'n'$ be $= 47{,}735 - 46{,}015 = 1{,}720$, as in the example we have taken; and suppose the staff $mn = 10$ feet between the upper and lower marks, $Ob = 6$ inches (by construction), therefore $Ob = 150{,}000$ equal parts, when 4 inches contain 100,000 such parts.

$$\therefore OE = \frac{mn \times Ob}{m'n'} = \frac{10 \times 150{,}000}{1{,}720} = 872{\cdot}09 \text{ feet.}$$

Hence, for calculating distances we have the following easy rule: Multiply the length of the staff in feet by the length of the base of the instrument in micrometric equal parts, and divide the product by the difference of the two micrometer readings (of the staff); the quotient will be the required distance.

Subtense Measurements. Tacheometers.

It is quite common at present to place a pair of webs—or much better, a pair of points—in the diaphragm of a theodolite or level, these being at such a distance from each other that they will by vision correspond to a measurement (upon a distant levelling staff), which is proportional to the base of the subtense angle, so as to show thereby, in the space between the lines or points, the true distance of the instrument from the staff. Fig. 121A shows the form these points appear in focus of the eye piece. By the employment of this system chain measurements are entirely dispensed with, and the system has the merit of a simple sight measurement, as upon a rule, without any calculation. Theoretically it is scarcely as exact as the work of the Omnimeter, as there is great difficulty of exact adjustment of the points without the use of complicated optical means, but practically, as testified in some recent work by the Surveyor-General of Lagos and Nigeria, a good instrument in correct adjustment may be read within less than ·001

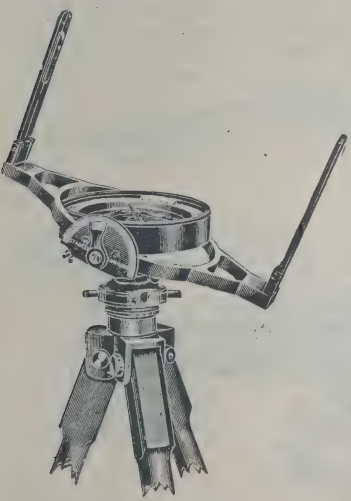


FIG. 121A.

FIG. 121B.

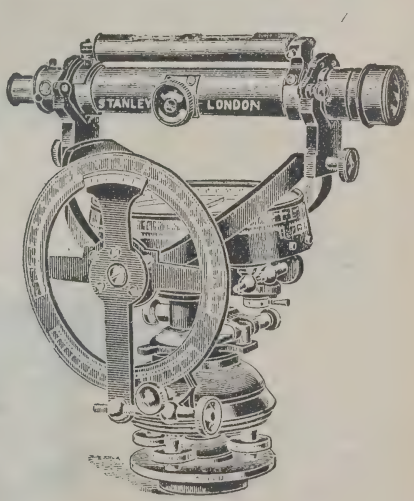


FIG. 121C.

of total distance, which is nearer than is possible by chaining over uneven ground. One merit over the Omnimeter is that the instrument is not touched by the hand during the observation of the points, cut by vision upon the staff, which give the distance.

Mining Surveying Instruments.

Where the mining theodolite cannot be conveniently used, in consequence of the absence of height of gallery, constant short turns or otherwise, as also for economy, some form of mining dial is used. One of the most general is Hedley's (fig. 121B, page 155). This being sighted only, it permits the eye to take observation from nearly the top of a gallery or cutting. The sights rock on an axis to any desired inclination, which may be read off on a small divided arc on the side. The compass reads by an edge bar needle. Dials of various patterns are made into instruments nearly resembling theodolites, the important points being observed that the instrument must be low and light, and read as nearly as possible at its highest part. The tripod of a dial is made with the legs to separate about the centre so that the instrument may be brought low, or what is better with sliding legs to adjust to any height required.

Stanley's Cranked Gimbal Dial.

This instrument (fig. 121C, page 155) is fitted with sliding stand with solid head, and an improved form of ball head to give the necessary amount of tip to the instrument, when the tripod is upon sloping ground, to bring it level. It has clamp and tangent movement to the lower axis, also to the limb, which is outside reading by two verniers to single minutes. The gimbal is cranked so that the telescope will read 90° both ways, thus enabling a bearing to be taken of any object upon the surface from the top of the shaft, and a line being sighted at the bottom of the shaft in the same vertical plane with it, without changing the horizontal adjustment of the instrument. It is also useful for taking vertical sights up a shaft. The vertical arc has a clamp and tangent, and is divided to read single minutes. The telescope is fitted with stadia points for reading distances *without the use of a chain*. It is also fitted with folding sights for use without the telescope and a needle pin to lock compass at zero. The entire instrument is constructed as low as possible for use in shallow workings.

The Dumpy Level.

This is a perfect knock-about instrument. If stations are taken at equal distances apart, say one chain, this form of level will act correctly although out of adjustment. Thus with the level

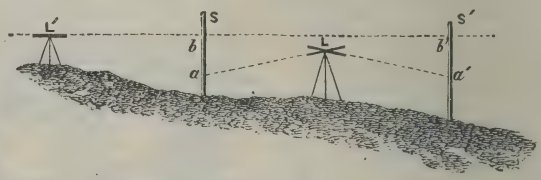


Fig. 121D.

at L (fig. 121D). place a staff vertically at one chain distance from the instrument at S. The inaccurate instrument will read the staff at A. Now place the staff vertically at S'. It will read at A'. The distances and verticality being equal, A and A' will be level. If we now place

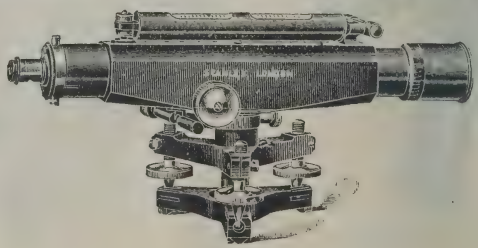


Fig. 121E.

the level at some distant position nearly in line L′ and adjust the level by the bubble screw to read equal distances above *a* and *a′* as *b* and *b′*, the level must be true.

The stability of the level, without increase of weight, has always been a very desirable consideration with all engineers. This is best attained by shaping the level as nearly as possible out of solid castings. Fig. 121F (page 156) shows a level made in this way, and it is the strongest and most compact level made.

Adjustment of the Level.

(*R. T. Hancock.*)

Select a fairly level piece of ground, set up the instrument, carefully levelled up as described or the theodolite (p. 149), and drive a peg at a distance of 100 feet or so away. Hold the levelling staff on the peg and note the exact reading. On the opposite side of the instrument, and exactly the same distance away, set another peg, driving it down till the staff held on it reads exactly the same as on the first peg. The tops of the pegs are then on the same level, independent of instrument error. Set up on the prolongation of the line beyond one of the pegs, level up carefully, and make the crosshairs read the same on both pegs by raising or lowering the diaphragm cell by means of the screws holding it in the telescope tube. The collimation line is now horizontal.

It is not necessary to level the pegs if the difference in level is noted, and the crosshairs are altered to read the same difference. To facilitate the adjustment in this case, set up beyond the pegs at a distance which bears some simple relation to the distance between the pegs, make a sketch of the position of instrument and staffs, insert readings and distances, and calculate the amount it is necessary to alter the reading on either staff (by moving the crosshairs), on the principle of similar triangles.

The telescope bubble may not finally occupy the centre of its tube when the collimation has been put horizontal as described. This is unimportant, as the instrument can always be correctly levelled up if the procedure as described for the theodolite is followed, in fact the central position of the bubble should never be relied on as a test for levelling up, even if it has once been secured by adjustment. It may be brought to the centre of its run by adjusting the screws holding the level to the telescope, care being necessary not to disturb the instrument.

The Gradiometer.

This instrument (fig. 121F) (*Stanley's patent*) is designed for taking vertical inclines at fixed small angles for railways, irrigation, drainage works, &c., &c., by means of an open extended scale, which may be conveniently and distinctly read without the use of a vernier.

It is also the most rapid levelling instrument yet made, as the telescope can be put level instantly at any sight by moving the drum, without any setting up whatever by the levelling screws. When the drum is at zero it forms an ordinary level of the most approved form. The gradiometric arrangement is effected by the telescope being mounted in trunnions, one being adjustable vertically: the amount of elevation or depression being indicated by a drum graduated to read rise or fall from 1 in 12 to 1 in 1,200.

The additional parts do not increase the size, and add little to the weight.

By its use a great saving of work is effected; for instance, a town drainage in which it is desired to work out an inclination which the levels indicate to have a fall of, say, 10 feet between the extreme points. If the line which the drainage is intended to take is measured, then however angular or zigzag it may be, the length of that line will be that into which the 10 feet is to be divided: thus if the line of streets measure 5,000 feet, this gives 1 foot in 500. Therefore if the drum is set to that proportion, then all the pipes may be laid directly without further setting.

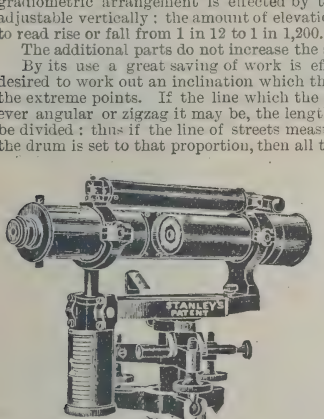


Fig. 121F.

For levelling on steep inclines the instrument also saves a great number of settings up, as instead of levelling for say every 14 feet rise or fall, the gradient of the total distance can be taken, and also the distance, by stadia reading, and by reference to a gradient table the difference of level can at once be seen. Telemetrical readings at great distance may also be taken with accuracy by this instrument.

This gradiometer has been adopted by the Government for producing contour maps.

Box Sextant.

This is the most convenient instrument for filling in details of work performed by the theodolite, or for small surveys. It is constructed upon the principle of the nautical sextant, but the arrangement is made very portable by being placed in a circular box. The radius arm reads to single minutes. It is provided with dark glasses for adjustment upon the sun.

The adjustment is best performed by setting the sextant so that the sun appears a perfectly cir-

cular disc in the telescope with the index at zero. In defect of the sun some distant object may be taken, such as one edge of a chimney, house, or flagstaff, this object being looked at through the eye-hole and horizon glass. Turn the index arm, by means of the large mill-headed screw, until the reflected image of the selected object coincides in the horizon glass with the object seen direct. Having effected this, the vernier should then be examined, to note whether the zero-point of the vernier coincides with the zero-point of the arc. If this coincidence occurs, and the observed object be distant *fully half a mile*, then the instrument is in horizontal adjustment, but if the two zero-points do not agree, the index arm is moved until they do, and the key placed in the key-holes by the side of the sextant to move the horizon glass by which the reflected image of the distant object is made to coincide with the object seen direct through the lower part of the horizon glass. The key is inserted in the keyhole on the *top* of the instrument when it is required to move the image up or down for vertical adjustment. In all cases it is better to see that a perfect disc of the sun appears in the telescope when the index is at zero.

The Plane Table.

This instrument is now generally used in new countries and in our colonies, for filling in details of work with the theodolite. It has the great merit that an intelligent native without technical education can be instructed to do valuable detail work with it. In its simplest form

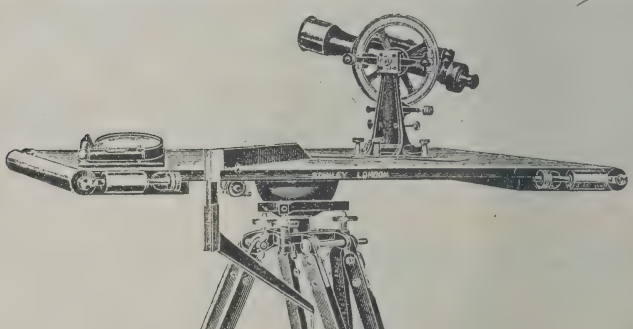


Fig. 122.

it consists of a sighted rule placed on a small board supported by a light tripod, the work being performed on the surface of paper. Many civil engineers find its work extremely convenient, because this work being made most definite by sketches upon the paper used, from these sketches they have a certainty of position in making maps from the same; so that they employ plane tables with all the refinement of means of observation possessed by the theodolite. One of these instruments is shown by fig. 122.

Prismatic Compass.

Details of small surveys or filling-in work are made by this compass, which is sighted for observation of direction, so that the eye may also see the compass ring by reflection through a prism at the instant of sighting. A reflector is commonly fixed to the forward sight so that distant objects may be seen up or down hill. The instrument is generally held in the hand for work, but where greater refinement is desired it is supported on a tripod stand. 2½ in. or 3 in. instruments are used by hand; 3½ in., 4 in., and 4½ in. are each set on a stand.

The Abney Reflecting Level.

A small level to hold in the hand. For flying work and approximate measurements from bench marks on an ordnance map the instrument is very useful. It may be used to level uphill from or to a bench mark by setting to zero and taking successive horizontal sights to points on the ground such as a stone or a daisy. The observer walks to the daisy and takes another forward sight, and so on up to the point whose level is required. Then the difference of level is the height of the observer's eye × number of sights taken. Or if the site is visible from the bench mark it can be sighted at once, the bubble being brought to the line of sight and the angle of the vernier arm read. The distance horizontally can be measured on the map, and the difference of elevation is this length multiplied by the tangent of the angle.

(See also 'Surveying and Levelling Instruments,' Stanley: published by E. and F. N. Spon.)

The Steward Surveying Telemeter.

(J. H. Steward, Ltd.)

This Pocket Telemeter (fig. 122A) is especially useful when the survey of a tract of country, a preliminary survey for a railway, or some topographical reconnaissance, has to be made in a short space of time, and when the transport of cumbersome instruments is inconvenient. The size of the telemeter is $4\frac{1}{2} \times 1\frac{1}{4}$ in., and its weight 10 oz.

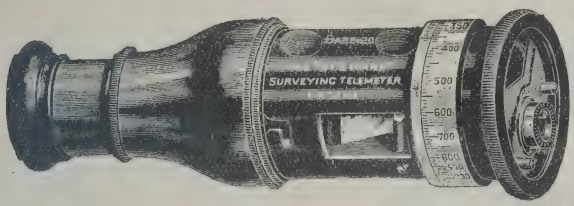


FIG. 122A.

The arrangement consists of two plane mirrors mounted upon pivots and serving as index and horizon mirrors. The mirrors are mounted upon a base enclosed in a metal tube, to one end of which is attached a small sighting telescope. To the other end is adapted a movable collar, connected to the index mirror by means of a metal arm. By rotating this collar the index mirror is moved in azimuth, and the angular displacement is measured by reference to a graduated scale upon the exterior of the collar. When the scale is set to zero the mirrors form an optical square and reflect a right angle. A small toothed wheel attached to a screw acts on the horizon mirror so that the angle of double reflection can be varied about 5 degrees out of the right angle, in order to facilitate the determination of the direction of the base.

The scale of distances is divided upon the German silver rotating collar, each division representing 10 units of distance. Any unit of measurement may be employed with the Telemeter, the graduations showing the range in terms of units of the base.

The principle of the Telemeter is to measure the two angles at the extremities of the base, forming a triangle with the object of which the distance is required. The distance or range of the object is read directly from a scale graduated on the instrument, and is expressed in terms of units of the base, so that any scale of measurement (yards, feet, metres, etc.) may be employed. The scale of distances is computed for a base of 20 units, and as the unit of measurement employed may be of any length, it follows that distances of any length can be determined, the limit of distance being governed by the length of base that can be employed and the visibility of the object. The instrument is also adapted for use with a base which is of constant ratio to the distance of the object.

The accuracy of the indications is assured by empirically graduating the scale. The results obtained with the Telemeter have been most satisfactory, the mean error working out at less than 1 per cent.

The Steward Hypsometric Aneroid, with Swing Thermometer.

(J. H. Steward, Ltd.)

This aneroid (fig. 122B) is constructed so as to eliminate the many sources of error present in aneroids of ordinary construction and to facilitate operations by doing away with the necessity of calculations.

The altitude scale is regularly divided, to the left for 'ascents' and to the right for 'descents,' and forms a complete circle of equal divisions closed at the two extremities. The zero of the altitude scale can be displaced relatively to the barometric scale and set opposite the index hand at any point of the barometric scale without introducing an error; consequently it is only necessary to set the zero to the index hand by means of the rack and pinion at one station, and the index hand will indicate the difference in altitude at the next station. The divisions are so arranged that with an altitude scale extending up to 10,000 feet, differences as small as five

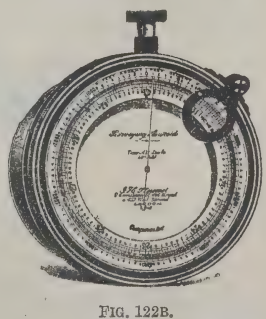


FIG. 122B.
The Steward Hypsometric Aneroid.

feet or less can be read without the application of a vernier ; and by a special arrangement of the reading lens there is no error of parallax. The movement being compensated, changes of temperature do not affect the readings. The aneroid is read and set without removing it from its case, and the altitude scale is automatically locked so that it cannot shift during transit. The diameter of the dial is 3¼ in. A small swing thermometer, for ascertaining the air temperature, to make the correction for difference in the weight and volume of the atmosphere, is carried in a pocket at the back of the case.

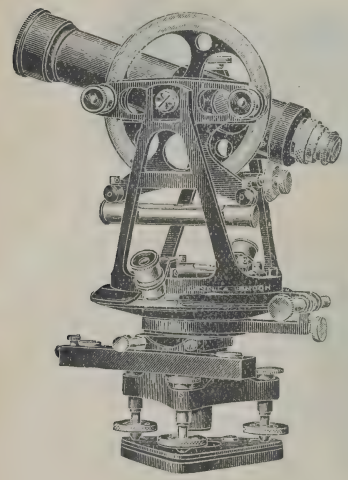


FIG. 122C.

THE CASELLA THEODOLITE.

C. F. Casella & Co. Ltd.)

In recent years, the tendency of many British makers of surveying instruments has been to design lighter and more compact models than those previously in use. Strength has not been sacrificed to lightness in weight, nor convenience to a compact design, for these newer models are often both stronger and more convenient.

The theodolite shown by fig. 122C has several special features. It has internal focusing for the telescope, an improved trough compass (watertight and easily taken to pieces), a screw-focusing eyepiece, and a simple but effective centering head. The clamps operate on the axes of circles, and not on the peripheries, and are therefore less liable to strain the instrument. The horizontal circle is 5 in. in diameter and the vernier gives readings to 20 or 30 seconds. The vertical circle is 4 in. in diameter, with readings to 30 or 60 seconds. The instrument packs into a case measuring only 14 × 8 × 7 in., and the weight of the instrument and its case is only 16 lb.

THE CASELLA DUMPY LEVEL

(*C. F. Casella & Co. Ltd.*)

The Dumpy Level, fig 122D, is very much smaller in build than the pre-war pattern, although the telescope itself is larger and has specially good optical properties. The centre of gravity

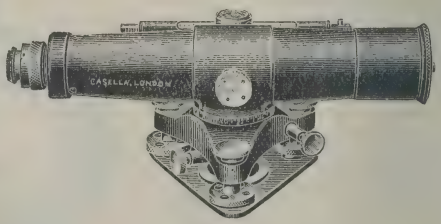


FIG. 122D.

of the instrument is low, and the danger of a fall injuring it is very much reduced. It is sometimes fitted with a divided horizontal ring, reading to 1° or 0·5°, which is used for contour work or for setting out angles of buildings, etc.

The tripod stands of both these instruments are light though rigid.

TO FIND THE VARIATION OF THE COMPASS.

1. By the Pole Star (Polaris).

The pole star is on the meridian, either above or below the pole, when a vertical plane passes through it, and the bright star at the root of the tail of the Great Bear ϵ Ursæ Majoris (Alioth). Thus, during the twenty-four hours, two opportunities will be presented of finding the pole star on the meridian. Set up a fine plumb-line in a convenient place, free from currents of air, and the observer, placing himself behind the thread, waits until the moment when the two stars are hidden by the thread. If the bearing of the pole star be then read, it will show the variation of the compass. But as it is not very easy to read a compass at night, it is best to fix a stick with a light on it in the line of the pole star, and as far off as possible, the line joining the observer's position, and the light is the meridian line, and its bearing may be read in the morning.

2. By a Single Altitude of the Sun.

1. Compare watch with chronometer to get correct mean time.

2. Note readings of barometer and thermometer.

3. Adjust theodolite and note index error.

4. Set up instrument at . . . . . Δ station; make the temporary adjustments, and set instrument at 360° on . . . . . Δ station.

5. About three hours from 12 o'clock, morning or afternoon, unclamp upper horizontal plate and vertical arc. See that the dark eye-piece is down, and move upper part of instrument till the sun is in the field of object glass. Clamp upper horizontal plate and vertical arc, and with the two tangent screws follow (morning observation) the sun's movement till the sun's upper limb just touches the intersection of the cross-hairs. Note the time by watch, and read on horizontal arc the azimuth, and on vertical arc the altitude of $\odot$, sun's upper limb.

6. Unclamp horizontal plate, and either with a slight motion, or, if plate be clamped, wholly with tangent screw, follow the sun's motion in azimuth till the sun's lower limb ($\subset$) becomes tangent to the intersection of cross-hairs, the vertical arc being untouched. Note the time and the reading on the horizontal arc.

7. The mean of the times and the mean of the azimuths will give the time and azimuth at which the vertical reading of the arc denotes the apparent altitude of the sun's centre $\odot$.

8. Correct apparent altitude, $\odot$.

Correction 1. For index error of instrument. Correction 2. For refraction, modified by barometric and thermometric readings; corrections to be found in tables in Frome's 'Surveying,' Drayson, or Chambers. Correction 3. For parallax. To be found in tables in 'Nautical Almanac,' and modified to noted altitude by formula :—Sin par in alt. = sin hor. par. × cos. alt.

9. Apparent altitude thus corrected gives true alt. $\odot$.

10. The true alt. $\odot$ subtracted from 90° gives the zenith distance ZS.

11. As the altitude of the elevated pole is equal to the latitude of the place, 90° minus latitude = zenith distance of the pole, viz. PZ.

12. The declination of the sun is given in the 'Nautical Almanac,' page 1, of each month, for each day at apparent noon. The variation of declination for each hour is also given, and the direction of declination, N. or S. Hence the declination at the time of observation is obtained. If the time of observation be 9 A.M., and declination increasing, the correction for three hours' variation must be subtracted from the declination at apparent noon, *vice versâ* if the declination be decreasing.

13. Then we have the three sides of the astronomical triangle to ascertain the angle Z, which is the measure of the angular deviation of the sun from the true meridian.

14. Compute the angle Z by the formula

$$\cos \frac{Z}{2} = \sqrt{\frac{\sin S \sin (S - PS)}{\sin PZ \sin ZS}}$$

where $S = \frac{1}{2}$ sum of the three sides of the triangle.

15. The magnetic bearing of the Δ station from which the sun's azimuth was taken should be noted two or three times with great care. If possible a stand to be used for the compass.

16. Then, knowing the sun's azimuth from a station and the direction of that station as regards the magnetic north, we get the deviation of the sun from the magnetic north. The computed angle, Z, is the deviation of the sun from the true north, and the difference of the two deviations is the variation of the compass.

17. Note that for afternoon observations the computed angle, Z, is to be subtracted from 360° before comparison with sun's magnetic bearing.

Annual Compass Variation.

The mean declination at Greenwich for 1920 was 14° 8′· 7 W. The average rate of decrease is 9′·5.

TO DETERMINE THE SOUTH BY MEANS OF A WATCH.

Point the hour hand of the watch at the sun, then half-way round (clockwise) between the hour hand and 'XII' on the dial points 'south.' Thus, suppose it to be 8 P.M., point the hour hand at the sun, then the 'IIII' of the dial points to south. In southern latitudes, to find 'north,' point 'XII' at the sun, then half-way round between 'XII' and the hour is due 'north.'

TO DETERMINE A TRUE EAST AND WEST.

This is easily obtained as follows :—Set up a *vertical* rod (any size) on a flat floor. Describe a circle round the base about twice (this varies with the latitude) the height of the rod. Some time in the forenoon mark the point where the shadow of the rod just touches the circle, and repeat this in the afternoon on the other side of the circle; mark this point also. A line through these points will be true east and west.

This method is a useful one for setting sun-dials, setting out buildings, etc.

As a guide to the true north, the following notes as to the whereabouts of the pole star at convenient hours in the evening or night will be useful, and correct enough for the purpose for the next hundred years.

The times given (Greeenwich mean time) are for the first day of each month, and become about 4 minutes (3 mins. 59·34 secs.) *less* every day.

Month.	1° W.	True N.	1° E.	Month.	1° W.	True N.	1° E
January .	9·45	6·30	..	July . .	..	..	9·45
February .	7·45	..	..	August .	..	..	7·45
March . .	11·15	..	..	September .	..	..	11·15
April . .	9·15	12·30	..	October .	..	12·30	9·15
May . .	7·15	10·30	..	November .	..	10·30	7·15
June . .	..	8·30	11·45	December .	..	8·30	5·15

EQUATION OF TIME.

TABLE SHOWING TIME TO BE ADDED TO OR SUBTRACTED FROM SUNDIAL TIME IN ORDER TO OBTAIN TRUE OR CLOCK TIME.

Date.	Minutes (approximate).	Date.	Minutes (approximate).	Date.	Minutes (approximate).	Date.	Minutes (approximate).
Jan. 1	+ 4	Mar. 28	+ 5	Aug. 9	+ 5	Oct. 27	−16
„ 3	+ 5	April 1	+ 4	„ 15	+ 4	Nov. 15	−15
„ 5	+ 6	„ 4	+ 3	„ 20	+ 3	„ 20	−14
„ 7	+ 7	„ 7	+ 2	„ 24	+ 2	„ 24	−13
„ 9	+ 8	„ 11	+ 1	„ 28	+ 1	„ 27	−12
„ 12	+ 9	„ 15	0	„ 31	0	„ 30	−11
„ 15	+10	„ 19	− 1	Sept. 3	− 1	Dec. 2	−10
„ 18	+11	„ 24	− 2	„ 6	− 2	„ 5	− 9
„ 21	+12	„ 30	− 3	„ 9	− 3	„ 7	− 8
„ 25	+13	May 13	− 4	„ 12	− 4	„ 9	− 7
„ 31	+14	„ 29	− 3	„ 15	− 5	„ 11	− 6
Feb. 10	+15	June 5	− 2	„ 18	− 6	„ 13	− 5
„ 21	+14	„ 10	− 1	„ 21	− 7	„ 16	− 4
„ 27	+13	„ 15	0	„ 24	− 8	„ 18	− 3
Mar. 4	+12	„ 20	+ 1	„ 27	− 9	„ 20	− 2
„ 8	+11	„ 25	+ 2	„ 30	−10	„ 22	− 1
„ 12	+10	„ 29	+ 3	Oct. 3	−11	„ 24	0
„ 15	+ 9	July 5	+ 4	„ 6	−12	„ 26	+ 1
„ 19	+ 8	„ 11	+ 5	„ 10	−13	„ 28	+ 2
„ 22	+ 7	„ 28	+ 6	„ 14	−14	„ 30	+ 3
„ 25	+ 6			„ 19	−15		

LENGTH OF A DEGREE IN LATITUDE AND LONGITUDE.

Lat.	Degree of Longitude.		Degree of Latitude.		Lat.	Degree of Longitude.		Degree of Latitude.	
$\phi°$	Stat. Miles.	Naut. Miles.	Stat. Miles.	Naut. Miles.	$\phi°$	Stat. Miles.	Naut. Miles.	Stat. Miles.	Naut. Miles.
0	69·174	60·000	68·711	59·598	45	49·002	42·503	69·053	59·895
1	69·162	59·991	68·711	59·598	46	48·136	41·752	69·077	59·916
2	69·132	59·964	68·712	59·599	47	47·261	40·993	69·089	59·926
3	69·080	59·918	68·713	59·600	48	46·372	40·222	69·101	59·937
4	69·006	59·854	68·715	59·602	49	45·469	39·439	69·113	59·947
5	68·911	59·774	68·718	59·604	50	44·552	38·643	69·125	59·958
6	68·798	59·674	68·720	59·606	51	43·621	37·836	69·137	59·968
7	68·661	59·557	68·723	59·609	52	42·677	37·017	69·149	59·978
8	68·505	59·420	68·725	59·611	53	41·719	36·186	69·160	59·988
9	68·327	59·265	68·730	59·615	54	40·749	35·345	69·172	59·998
10	68·130	59·094	68·734	59·618	55	39·766	34·492	69·183	60·008
11	67·912	58·905	68·739	59·622	56	38·771	33·629	69·195	60·018
12	67·673	58·698	68·744	59·627	57	37·765	32·777	69·206	60·028
13	67·413	58·473	68·749	59·631	58	36·746	31·896	69·216	60·037
14	67·133	58·230	68·755	59·637	59	35·716	30·979	69·227	60·046
15	66·832	57·969	68·761	59·642	60	34·675	30·076	69·238	60·056
16	66·511	57·690	68·767	59·647	61	33·623	29·163	69·248	60·064
17	66·172	57·396	68·774	59·653	62	32·561	28·242	69·258	60·073
18	65·810	57·080	68·780	59·658	63	31·488	27·312	69·268	60·082
19	65·428	56·751	68·789	59·666	64	30·406	26·374	69·277	60·089
20	65·028	56·404	68·796	59·672	65	29·315	25·427	69·287	60·098
21	64·608	56·040	68·804	59·679	66	28·215	24·479	69·296	60·106
22	64·167	55·654	68·813	59·687	67	27·106	23·511	69·303	60·112
23	63·709	55·260	68·822	59·695	68	25·988	22·594	69·313	60·121
24	63·228	54·843	68·830	59·702	69	24·862	21·565	69·321	60·128
25	62·731	54·411	68·840	59·710	70	23·729	20·582	69·329	60·135
26	62·212	53·961	68·849	59·718	71	22·589	19·598	69·336	60·140
27	61·676	53·496	68·859	59·727	72	21·441	18·597	69·343	60·147
28	61·119	53·013	68·869	59·736	73	20·287	17·596	69·350	60·153
29	60·550	52·520	68·879	59·744	74	19·126	16·590	69·357	60·158
30	59·957	52·005	68·890	59·754	75	17·960	15·562	69·363	60·164
31	59·347	51·476	68·901	59·763	76	16·788	14·561	69·368	60·168
32	58·718	50·933	68·911	59·772	77	15·611	13·540	69·374	60·174
33	58·071	50·372	68·923	59·782	78	14·429	12·515	69·379	60·177
34	57·409	49·795	68·935	59·792	79	13·242	11·486	69·383	60·181
35	56·726	49·203	68·946	59·802	80	12·051	10·453	69·387	60·185
36	56·027	48·597	68·957	59·812	81	10·857	9·417	69·391	60·188
37	55·312	47·976	68·968	59·822	82	9·659	8·378	69·394	60·191
38	54·579	47·232	68·980	59·832	83	8·458	7·336	69·397	60·193
39	53·829	46·583	68·992	59·842	84	7·254	6·292	69·400	60·196
40	53·064	46·027	69·004	59·853	85	6·049	5·247	69·402	60·198
41	52·282	45·348	69·016	59·863	86	4·842	4·199	69·404	60·200
42	51·483	44·655	69·028	59·874	87	3·632	3·151	69·405	60·200
43	50·670	43·950	69·041	59·885	88	2·422	2·102	69·406	60·201
44	49·840	43·230	69·053	59·895	89	1·211	1·051	69·406	60·201
45	48·996	42·503			90	0·000	0·000		

Length of a degree of longitude at $\phi°$ latitude $= \cos \phi_1° \times 69{\cdot}174$ statute miles; where $\tan \phi_1° = \frac{b}{a} \tan \phi°$; a = equatorial radius (3963·36 miles), and b = polar radius (3950·06 miles);

$\frac{b}{a} = \frac{3950{\cdot}04}{3963{\cdot}36} = {\cdot}99664.$

Example: What is the length of a degree of longitude at 50° latitude?

$\tan 50° = 1{\cdot}1917536$, therefore,

$\tan \phi_1° = {\cdot}99664 \times 1{\cdot}1917536 = 1{\cdot}1877493 = \tan 49° 54' 18''$; $\cos 49° 54' 18'' = {\cdot}6440569$ therefore length of degree $= {\cdot}6440569 \times 69{\cdot}174 = 44{\cdot}552$ statute miles.

Length of a degree of latitude at $\phi°$ latitude ($\phi°$ being at the middle of the arc) $= 69{\cdot}174$ $({\cdot}99330 + {\cdot}01005 \sin^2 \phi°) = 68{\cdot}711 + {\cdot}6952 \sin^2 \phi°$ statute miles.

Example: What is the length of a degree of latitude between 30° and 31°?

$\phi° = 30° 30'$, $\sin 30° 30' = {\cdot}5075384$, therefore length of degree $= 68{\cdot}711 + {\cdot}6952 \times {\cdot}5075384 \times {\cdot}5075384 = 68{\cdot}711 + {\cdot}179 = 68{\cdot}890$ statute miles. (*H. R. Kempe.*)

APPROXIMATE DISTANCE OF OBJECTS WHEN FIRST SEEN AT SEA, THE OBSERVER'S EYE BEING SUPPOSED AT SEA LEVEL.

Height. Feet.	Distance. Naut. Miles.	Height. Feet.	Distance. Naut. Miles.	Height. Feet.	Distance. Naut. Miles.	Height. Feet.	Distance. Naut. Miles.	Height. Feet.	Distance. Naut. Miles.	Height. Feet.	Distance. Naut. Miles.
1	1·1	22	5·4	43	7·5	120	12·6	300	19·9	520	26·2
2	1·6	23	5·5	44	7·6	125	12·9	310	20·2	540	26·7
3	2·0	24	5·6	45	7·7	130	13·1	320	20·6	560	27·2
4	2·3	25	5·7	46	7·8	135	13·4	330	20·9	580	27·7
5	2·6	26	5·9	47	7·9	140	13·6	340	21·2	600	28·1
6	2·8	27	6·0	48	8·0	145	13·8	350	21·5	620	28·6
7	3·0	28	6·1	49	8·1	150	14·1	360	21·8	640	29·1
8	3·2	29	6·2	50	8·2	160	14·5	370	22·1	660	29·5
9	3·4	30	6·3	55	8·5	170	15·0	380	22·4	680	29·9
10	3·6	31	6·4	60	8·9	180	15·4	390	22·7	700	30·4
11	3·8	32	6·5	65	9·3	190	15·8	400	23·0	720	30·8
12	4·0	33	6·6	70	9·6	200	16·3	410	23·2	740	31·2
13	4·1	34	6·7	75	9·9	210	16·7	420	23·6	760	31·7
14	4·3	35	6·8	80	10·3	220	17·0	430	23·8	780	32·1
15	4·4	36	6·9	85	10·6	230	17·4	440	24·1	800	32·5
16	4·6	37	7·0	90	10·9	240	17·8	450	24·4	820	32·9
17	4·7	38	7·1	95	11·2	250	18·1	460	24·7	840	33·3
18	4·9	39	7·2	100	11·5	260	18·5	470	24·9	860	33·7
19	5·0	40	7·3	105	11·8	270	18·9	480	25·2	880	34·1
20	5·1	41	7·4	110	12·1	280	19·2	490	25·5	900	34·5
21	5·3	42	7·5	115	12·3	290	19·6	500	25·7	920	34·9

Example : From what distance will a hill 300 feet high be visible to an observer 20 feet above the sea ?

To an observer on the summit of the hill the horizon would be 19·9 miles distant, and to the observer in the example it would be 5·1 miles distant, hence two such observers facing one another would just see each other at a distance of 19·9 + 5·1 = 25 miles, which is therefore the distance the hill will be visible.

ASTRONOMY.

The Earth and Sun.

Equatorial radius of the earth = 6,378,200 metres (3963·30 miles) (*Helmert*) = 6,378,388 metres (3963·42 miles) (*Hayford*) ; mean value, 6,378,294 metres (3963·36 miles). Polar radius of the earth = 6,356,818 metres (3950·01 miles) (*Helmert*) = 6,356,909 metres (3950·06 miles) (*Hayford*) ; mean value, 6,356,864 metres (3950·04 miles).

Length of 1° of longitude = $6{,}378{,}294 \times \frac{2\pi}{360}$ = 111,322 metres (69·174 miles).

Equatorial horizontal parallax of sun (angle under which the equatorial radius of the earth would appear at the sun's centre) = 8″·80. Mean distance of sun from earth = $\frac{3963{\cdot}23}{\text{sine } 8''{\cdot}80}$ = $\frac{3963{\cdot}23}{{\cdot}000042664}$ = 92,890,000 miles. Maximum distance (1st July) = 93,950,000 miles. Minimum distance (1st Jan.) = 90,950,000 miles.

Angle under which the radius of the sun would appear at the earth's centre, at the earth's mean distance from the sun = 16′ 1″·18 (*Auwers*).

Radius of sun = $3963{\cdot}23 \frac{\text{sine } 16'1''{\cdot}18}{\text{sine } 8''{\cdot}8} = 3963{\cdot}23 \frac{{\cdot}0045699}{{\cdot}000042664}$ = 424,500 miles.

None of the foregoing numerical values can be accepted as absolute, as authorities are not agreed on the subject.

IDENTIFICATION OF STARS.

In stellar observations for time, latitude, or azimuth, the star selected for observation may be conveniently found from the following notes, which describe the relative positions of the larger stars in the constellations. The angular distance between two stars can be closely estimated by comparison with half the distance between the observer's zenith and the horizon—i.e. 45°.

(*a*) In the constellation *Ursa Major* the two well-known stars α and β (THE POINTERS) point directly to POLARIS, the Pole star. The latter also forms the end or tail of *Ursa Minor*.

(*b*) If the curve of the tail of *Ursa Major* be continued, about 30° along it will be found ARCTURUS (α *Boötes*).

(*c*) A line from POLARIS at right angles to the line from THE POINTERS gives 50° from the former, CAPELLA (*α Auriga*).

(*d*) A line from POLARIS through the last star but one of the tail of *Ursa Major* passes through SPICA, 30° beyond ARCTURUS.

(*e*) The POINTERS' line continued through POLARIS for 60° indicates THE GREAT SQUARE OF PEGASUS. The star in the corner opposite to the Pole is MARKAB.

(*f*) Midway between the SQUARE and POLARIS is the constellation *Cassiopeia* (five stars grouped like W).

(*g*) A diagonal through the SQUARE S.E. to N.W. produced 40° gives DENEB (*α Cygni*).

(*h*) 25° further and 10° to the right the same line gives VEGA (*α Lyræ*), a large white star.

(*j*) 35° south of DENEB and VEGA is ALTAIR (*α Aquilae*). This star is between two companions, and forms the apex of an isosceles triangle with DENEB and VEGA.

(*k*) A line from POLARIS through CAPELLA will touch RIGEL, 65° from CAPELLA. This line passes between ALDEBARAN (*α Tauri*), 10° west and 30° from CAPELLA, and BETELGEUSE, 10° east and 40° from CAPELLA. RIGEL and BETELGEUSE are diagonal stars in *Orion*.

(*l*) A line from ALDEBARAN through *Orion's Belt* passes near SIRIUS (*α Canis Majoris*) at an equal distance from ALDEBARAN. This is the brightest star in the heavens.

(*m*) 50° east of BETELGEUSE, forming nearly an equilateral triangle with BETELGEUSE and SIRIUS, is PROCYON.

(*n*) 30° north of PROCYON is CASTOR, and 5° S.E. of CASTOR is POLLUX.

(*o*) The apex of an isosceles triangle with CASTOR and PROCYON, 45° east, is REGULUS (*α Leonis*).

(*p*) Eastward from PROCYON to REGULUS 30° is DENEBOLA. DENEBOLA forms an equilateral triangle with ARCTURUS and SPICA.

ASTRONOMY IN FIELD WORK.

(*Fred. Simpson, A.M.I.C.E.*)

Choice of Instrument.

Choice of Instrument.—The most suitable instrument is the Transit Theodolite provided with a delicate level attached to the vernier arms of the vertical circle, and a sensitive striding level for use on the pivots of the horizontal axis. See figs. 119K, 119L, pp. 153-154. The adjustments must be made as perfectly as possible, and the residual index error carefully ascertained. The value of a division of each of the sensitive levels should be determined, and the position of the bubbles should be noted at the time of observing, and an allowance made for any variation in their readings. The most suitable form of diaphragm for astronomical work is that with simple vertical and horizontal cross hairs. For night work on stars it is necessary to illuminate the cross hairs, if the instrument is not provided with an illuminated axis; a lamp held a little distance in front of, and a little on one side of the object glass, may be used for this purpose.

With the ordinary eyepiece, altitudes exceeding 60° cannot be conveniently taken; for greater altitudes some form of diagonal attachment to the eyepiece is required. A makeshift arrangement can be improvised with a small piece of mirror held in the hand, or provisionally attached in front of the eyepiece at an angle of 45° to the axis of the telescope.

In observing the sun, a very convenient method, less trying to the eyes, is to cast the image of the sun and cross hairs on to a piece of white paper or card (to act as a screen) held about

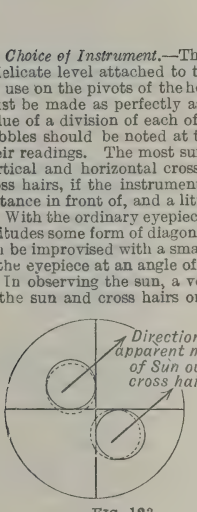


FIG. 123.

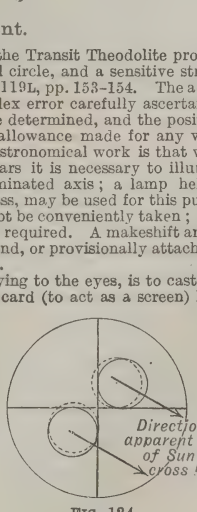


FIG. 124.

three or four inches from the eyepiece; the telescope must be focused for long-distance vision, with the cross hairs in focus; the telescope is then directed to the sun, and the eyepiece drawn out until perfect images of the sun and cross hairs are projected on the screen, the diameter of the image of the sun being smaller as the eyepiece is withdrawn. If the telescope inverts with direct vision, the image on the screen will be erect.

The limbs of the sun are observed when tangential to the respective cross hairs; the image of the sun should be allowed to leave one cross hair clamped a little in advance and followed with the other cross hair, using the tangent motion, so that the moving hair is brought tangential to the other limb as the first limb is just leaving the fixed hair; in this way only one hand is

occupied with the tangent motion. The correction for semi-diameter must be applied to the readings in altitude and azimuth. In the case of the altitudes, the correction for semi-diameter is applied as taken from the Almanac; in that of the azimuths, the correction to be applied to the horizontal circle reading is approximately the semi-diameter, taken from the Almanac, multiplied by the secant of the angle of altitude. These corrections apply to observations taken on any one limb of the sun to reduce the reading to the centre of the sun; but by taking the means of pairs of observations, on the upper and lower limbs for altitude, and on the right and left limbs for azimuth, the necessity for correction for semi-diameter is eliminated.

In a double observation on upper and lower and right and left limbs, a pair of observations are made, one in which the horizontal hair is fixed in advance, the vertical hair being moved by the tangent motion of the horizontal circle; the other observation is then made with the vertical hair fixed in advance, the tangent motion of the vertical circle being then used to follow the lower or upper limb with the horizontal cross hair, up to the time of the vertical hair, with the right or left limb which is being observed.

The cross hair which is being moved should always be kept slightly on the disc of the sun, up to the time of contact with the other hair, as it becomes indistinct when off the disc.

The means of the circle readings of the altitudes and azimuths taken in this way will be thus reduced to the centre, and will correspond to the mean of the times of observations, and no correction for semi-diameter is required.

Altitudes require correction for index error (+ or −), for refraction corresponding to altitude (always −), parallax (in case of sun or planets) corresponding to altitude (always +); semi-diameter in case of sun or planets, + if lower limb is observed, − if the upper; this correction is eliminated if observations on upper and lower limbs are combined.

Refraction.—The mean refraction values are near enough for ordinary purposes when the altitude observed is over 20°, but for lower altitudes a correction may be necessary, corresponding to the altitude, temperature, and barometric pressure; refraction decreasing with higher temperature and increasing with higher barometric pressure.

Parallax.—The horizontal parallax of the sun is approximately 9″, and for any given altitude = 9 × cosine of altitude, in seconds.

Declination as taken from the Almanacs must be corrected to correspond to the time of observation referred to time at the principal meridian adopted in the Almanac; generally it is sufficient to know his time to within ten minutes in spring or autumn, or within thirty minutes in summer or winter.

Latitude.

Latitude may be deduced from a single altitude of a star, or the upper or lower limb of the sun, when crossing the meridian. This altitude is corrected for index error and refraction in the case of a star; in that of the sun a further correction is required for parallax and semi-diameter to reduce the altitude to the sun's centre. The declination is corrected to the time of observation.

In the case of the sun, and of stars with declination less than the latitude if of the same name:—
Latitude = 90° − (altitude + declination), if declination is of the opposite name to latitude.
Latitude = 90° − (altitude − declination), if declination is of the same name as latitude.
In case of stars with declination of the same name, but greater than latitude:—
Latitude = (altitude + declination) − 90° at the upper transit.
Latitude = altitude + (90° − declination) at lower transit of circumpolar stars.

More exact determination of the meridian altitude can be obtained from a series of ex-meridian altitudes taken about the time of the star or sun's meridian passage, provided three altitudes are taken at equal intervals of time, or equal intervals of azimuth (it is immaterial what intervals are taken, but they must be equal and not extend more than about twenty minutes on either side of the meridian passage).

The corrected altitude at the meridian may be obtained by the following reduction:—

Subtract the lowest altitude from the other two and let these differences, reduced to seconds, be denoted by d_1 and d_2; then the meridian altitude will be = lowest altitude + $\frac{(4d_1 - d_2)^2}{8(2d_1 - d_2)}$ seconds.

EXAMPLE.—Three altitudes of the upper limb of the sun were taken at intervals of 6 minutes as follows:

	38° 10′ 35″	38° 12′ 40″	38° 12′ 30″
+ correction	2 17	− 38 10 35	− 38 10 35
= altitude on meridian, upper limb	38 12 52	2 05 = 125″	1 55 = 115′

$$\frac{(4 \times 125 - 115)^2}{8(2 \times 125 - 115)} = 137'' = 2' 17''.$$

Time and Azimuth.

Time and Azimuth from sun or star altitudes.

Let a = altitude observed (corrected for under error and refraction in case of star, as well as for parallax and semi-diameter in case of sun);

l = latitude;

p = polar distance = 90° − declination, if latitude and declination are of the same name, = 90° + declination, if latitude and declination are of different names.

$$s = \frac{a + l + p}{2};$$

then,

$$\log \sin \tfrac{1}{2} \text{ Hour Angle} = \frac{\log \sec l + \log \operatorname{cosec} p + \log \cos s + \log \sin (s - a)}{2}$$

$$\log \cos \tfrac{1}{2} \text{ Azimuth} = \frac{\log \sec a + \log \sec l + \log \cos s + \log \cos (s - p)}{2}$$

The Hour Angle in arc is reduced to time; if from a P.M. observation of the sun this will be Apparent Time P.M., but if from an A.M. observation this Hour Angle in time should be deducted from 12, the result being Apparent Time A.M. To arrive at Mean Time, the Equation of Time must be added or subtracted as directed in the Almanac, this Equation of Time being first corrected to correspond to the approximate time of the observation at the principal meridian to which the Almanac refers.

In star observations for time, the Hour Angle found and reduced to time is deducted from or added to the Right Ascension of the star (deducted from if before the meridian transit, but added to if after), this gives the Sidereal Time of observation. Take the Right Ascension of the Mean Sun for the previous noon from the Almanac, and correct this to the meridian of the place of observation; this deducted from the Sidereal Time of observation, and the difference reduced to Solar Time, will give the Mean Time of the observation.

	h. m. s.	h. m. s.
E.g., suppose Hour Angle found after transit of meridian		4 30 24
Right Ascension of star		8 10 43
Sidereal Time at observation		12 41 07
R.A. Mean Sun	1 35 28	
Correction for longitude 3 h. 54 m. West	+ 38	
		1 36 06
Interval in Sidereal Time from Mean Noon		11 05 01
Correction of interval, Sidereal to Mean Time		− 1 49
Mean Time of observation		11 03 12

The horizontal circle reading of the azimuth found as above should be corrected for the inclination of the horizontal axis of the vertical circle as denoted by the reading of the cross striding level; the difference of level in seconds of arc multiplied by the tangent of the altitude taken will give the correction to the horizontal circle reading this being added if the left-hand pivot is highest, and subtracted if the right-hand pivot is highest. The circle reading of some distant well-defined object should be used as a Reference Point to which the azimuth observed will then be connected.

In a series of observations where the sun has been utilised in the daytime, and it is desired to connect up a series of observations on stars, the adjustment of the instrument should be carefully gone over after sundown, and when the instrument has attained an even temperature, the Reference Point being utilised to check the results of the day observations with those of the night.

The degree of accuracy of the results will depend upon the care taken to eliminate slight errors in the data assumed or instrumental defects. In the case of observations for time, the taking of the mean of a combination of A.M. and P.M. observations will to a great extent eliminate the slight errors that may be due to instrumental defects, incorrect latitude assumed, or almanac corrections to date. The same remarks apply also to Azimuth except that the cross level error can only be eliminated by observations taken with reversed positions of vertical axis. In observations for latitude the errors of the instrument can be to a great extent corrected by taking the mean of meridian observations on stars to the north and to the south of the zenith.

EXAMPLE (in time and azimuth; P.M. observation). Data: latitude (l) 53° 29′ 05″ N.; corrected declination, 0° 35′ 13″ S.; corrected altitude of the sun's centre (a) 20° 37′ 18″; polar distance (p) 90° + 0° 35′ 13″ = 90° 35′ 13″.

Time.

	h. m. s.	
a =	20 37 18	
l =	53 29 05	log sec 0·22546
p =	90 35 13	log cosec 0·00002
	2)164 41 36	
s =	82 20 48	log cos 9·12444
$s-a$ =	61 43 30	log sin 9·94482
		2)19·29474
½-hour angle	26 21 30	log sin 9·64787
	2	
hour angle	52 43 00 in arc	
	4	
hour angle	3 30 52 in time	

Azimuth.

	° ′ ″	
a =	20 37 18	log sec 0·02876
l =	53 29 05	log sec 0·22546
p =	90 35 13	
	2)164 41 36	
	82 20 48	log cos 9·12444
$(p-s)$ =	8 14 25	log cos 9·99549
		2)19·37415
	60 53 30	log cos 9·68707
	2	

Azimuth N. 121 47 00 W.

Azimuth from Greatest Elongation of Circumpolar Stars.

At instant of greatest elongation :—

$$\sin \text{Azimuth} = \cos d \sec l;$$
$$\cos \text{Hour Angle} = \tan l \cot d;$$
$$\sin \text{Altitude} = \sin d \operatorname{cosec} l.$$

The Hour Angle, reduced to time, is added to the Right Ascension of the star if the Greatest Elongation is to the west of the meridian, or subtracted if to the east; this will give the Sidereal time of the Greatest Elongation. The sidereal time of the mean sun's passage of meridian for the succeeding noon subtracted from this will give the sidereal interval of time from noon, which, reduced to mean time, will give the Mean Time of Greatest Elongation. The altitude at Greatest Elongation is useful in setting the instrument for the observation.

Without knowledge of the latitude the Azimuth may be obtained from two observations on stars, one to the east, the other to the west of the meridian, and from the horizontal angle between them, which will be the sum of their Azimuths. Let this angle be denoted by $A + A_1$), and let d and d' be the respective declinations of the stars used, then,

$$\tan\left(\frac{A - A_1}{2}\right) = \tan\frac{d + d_1}{2} \times \tan\frac{d - d_1}{2} \times \tan\left(\frac{A + A_1}{2}\right),$$

giving the half difference of Azimuths, which added to and subtracted from the half sum of Azimuths will give A and A, respectively. The latitude can then be computed from one of the Azimuths and found by formula

$$\cos l = \cos d \operatorname{cosec} A.$$

EXAMPLE.—Taking stars β Crucis (d_1 = 59° 06′ 30″S.); γ Hydri (d = 74° 33′ 59′ S.); angle between their Greatest Elongations 57° 33′ 33″ (= A + A_1).

$\frac{d + d_1}{2}$ =	66° 50′ 14½″	l tan 0·36874
$\frac{d - d_1}{2}$ =	7 43 44½	l tan 9·13264
$\frac{A + A_1}{2}$ =	28 46 46½	l tan 9·73980
$\frac{A - A_1}{2}$ =	9 53 05	l tan 9·24118
	± 28 46 46½	
Greatest Elongation γ Hydri	18 53 41½	
" " β Crucis	38 39 51	

The latitude may then be calculated as follows, from γ Hydri :—

Azimuth	18° 53′ 41½″	l cosec	0·48968
d	74 33 59	l cos	9·42508
		l cos	9·91476

latitude = 34 43 55 S.

To reduce Mean Solar Time intervals to Sidereal Time intervals (approximate).

Reduce interval into hours and decimals of an hour, multiply by 10 and diminish product by $\frac{1}{70}$; the result will be correction in seconds to be *added* to Mean Time interval.

	h. m. s.	
EXAMPLE.	16 30 18 M.T.	16·505 × 10 = 165·05
Correction	+ 2 42·7	$-\frac{1}{70}$ 2·36
	16 33 00·7 Sidereal T.	162·69 sec.
		= 2 m. 42·69 sec.

To reduce Sidereal to Mean Time intervals.

Reduce intervals into hours and decimals of an hour, multiply by 10 and diminish product by $\frac{1}{60}$; the result will be correction to be *subtracted* from Sidereal Time interval.

	h. m. s.	
EXAMPLE.	16 33 00·7 Sid. T.	16·5502 × 10 = 165·50
Correction	− 2 42·7	$-\frac{1}{60}$ 2·76
	16 30 18 M.T.	162·74 sec.
		= 2 m. 42·74 sec.

The error in using these approximations will be less than $\frac{1}{10}$ second in a 24-hour interval.

Longitude by Moon Culminating Stars.

This is the most convenient method for determining the longitude when the Mean Time at Greenwich is not accurately known, the only requirements being a well adjusted transit theodolite, a watch whose rate can be depended upon for a short interval of time but whose actual error need not be known, and a Nautical Almanac.

The moon varies comparatively rapidly in Right Ascension (R.A.), but its R.A. at the instant of its transit across the plane of the meridian can be accurately determined by comparing its time of transit with that of a star or stars which pass the meridian about the same time.

The theodolite is adjusted with its line of collimation in the plane of the meridian by the aid of one of the methods before described for obtaining azimuths ; the times of transit, over the centre thread, of the selected stars of reference and the moon's bright limb are carefully noted.

The intervals (reduced to Sidereal Time) between the times of transit of the respective stars and the time of transit of the moon's bright limb, added to the R.A. of the respective stars (in the case of stars which transit before the moon), or subtracted from the R.A. of any stars which transit after the moon, will give the R.A. of the moon's bright limb at the instant of its transit over the meridian.

We have, under the heading of ' Moon Culminating Stars,' the R.A. of the moon's bright limb at its transit at Greenwich, and also the variation of the moon's R.A. in one hour of longitude expressed in seconds ; the difference between the R.A. of the moon's bright limb when passing the meridian of Greenwich and the R.A. as found when passing the meridian at the place of observation gives the change of R.A., and this difference (reduced to seconds), being divided by the variation corresponding to one hour difference of longitude, will give the difference of longitude between Greenwich and the place of observation expressed in hours and fractions of an hour.

Under the same heading of ' Moon Culminating Stars ' will be found convenient pairs of stars which transit within half an hour or so of the time of transit of the moon and which have a declination nearly that of the moon so that a slight movement of the telescope of the instrument

in altitude will bring them within its field. As these stars are generally of small magnitude and not easily distinguishable it is advisable to (approximately) calculate the altitude at which they cross the meridian ; the instrument may then be set in advance so that the star will cross approximately in the centre of the field. Any of the stars catalogued in the Nautical Almanac of greater magnitude, and easily distinguishable, may be used, but their declination and R.A. should not differ much from those of the moon.

When the longitude of the place of observation differs considerably from that of Greenwich, the ' variation for one hour ' given in the tables should be corrected by interpolation to correspond to the approximate middle interval of time between the transit at Greenwich and that of the observed transit.

Let

t_1, t_2 be the observed times of transit of the star and the moon's bright limb ;

RA_1, RA_2 be the Right Ascensions of the star and the moon's bright limb taken from the catalogue ;

c the hourly variation (corrected, if necessary, to the middle time) ;

then the longitude in time $= \dfrac{(t_1 - t_2) - (RA_1 - RA_2)}{c}$,

the interval $(t_1 - t_2)$ if in Mean Time must be reduced to Sidereal Time,

$(RA_1 - RA_2)$ must be expressed in seconds,

the longitude will be expressed in hours and fractions of an hour, and to the west if positive and to the east if negative.

Timing Observations.

When working with an assistant the time may be noted at the instant a signal is given by the observer, but when observing alone it is difficult to note the exact time of contact or transit on watch or chronometer when the hands are employed in manipulating the instrument and the eye engaged in taking the sight.

In this case a convenient method is to use a watch whose time of beat is known (in modern watches usually $\frac{1}{5}$ second) ; this watch should be in such a position that the beats are distinctly heard, for example, suspended over the ear from the cap, in a small bag or watch pocket. The beats are then counted from the instant of contact or transit and continued until the seconds finger of the standard timepiece can be noted on some convenient second ; this time noted, less the number of beats of the auxiliary watch, reduced to seconds and fractions, will be the actual time of the observation.

As probably some little time may elapse after the observation before the standard timepiece can be read, especially at night where a lamp has to be used, this extended counting of beats of say $\frac{1}{5}$ second becomes difficult when arriving at the double syllable numbers ; but by adding a ' dummy ' syllable to the first twelve counted and then continuing with ' thir-teen,' ' four-teen,' and so on, giving one syllable to each beat, the counting of $\frac{1}{5}$ seconds becomes quite easy, even if carried to 100 beats and over, e.g taking the dummy syllable as ' and,' and starting the instant of observation with ' nought,' the counting would continue :—' nought-and,' ' one-and,' ' two-and,' ' three-and,' . . . ' 'leven-and,' ' twelve-and,' ' thir-teen,' ' four-teen,' . . . ' twen-ty,' ' twent'-one,' and so on. Then taking the first syllable as units and the second syllable as half, the counted beats multiplied by 4 and divided by 10 will give the required intervals in seconds and tenths, in the case of the auxiliary watch beating fifths of seconds.

Taking examples, say the beats counted between the instant of observation and the time noted on the timepiece was on the first syllable to thirty-seven, the time at that beat being 3 hrs. 47 mins. 15 secs. ; then the interval to be deducted would be $\dfrac{37 \times 4}{10} = 14{\cdot}8$ seconds.

and the corrected time of the observation would then be 3 hrs. 47 mins. 15 secs. $- 14{\cdot}8$ secs $= 3$ hrs. 47 mins. $0{\cdot}2$ secs. In another case, say the second syllable of ' nine-and ' corresponded to 6 hrs 23 mins. 55 secs. on the timepiece, the correction would then be $\dfrac{9\frac{1}{2} \times 4}{10} = 3{\cdot}8$ seconds,

and the corrected time of observation 6 hrs. 23 mins. 55 secs. $- 3{\cdot}8$ secs. $=$ 6 hrs. 23 mins. $51{\cdot}2$ secs.

This method of measuring short intervals of time is useful in other instances ; for example, in estimating distances by the velocity of sound, etc.

TABLE OF MEAN REFRACTIONS.

Corresponding to altitudes, A; at 50° F. and Barometer 29½ ins.

A	0′	5′	10′	15′	20′	25′	30′	35′	40′	45′	50′	55′
°	′ ″	′ ″	′ ″	′ ″	′ ″	′ ″	′ ″	′ ″	′ ″	′ ″	′ ″	′ ″
0	34 54	33 51	32 49	31 50	30 52	29 57	29 3	28 12	27 23	26 35	25 50	25 6
1	24 25	23 45	23 7	22 30	21 56	21 23	20 51	20 21	19 52	19 24	18 58	18 33
2	18 7	17 45	17 23	17 1	16 41	16 20	16 1	15 42	15 23	15 5	14 48	14 31
3	14 15	13 59	13 44	13 29	13 15	13 1	12 48	12 36	12 24	12 12	12 1	11 50
4	11 39	11 28	11 18	11 8	10 59	10 49	10 40	10 30	10 21	10 12	10 3	9 55
5	9 47	9 39	9 31	9 23	9 16	9 9	9 2	8 55	8 48	8 54	8 36	8 29
6	8 23	8 17	8 12	8 6	8 0	7 55	7 49	7 44	7 39	7 34	7 29	7 24
7	7 20	7 15	7 11	7 6	7 2	6 57	6 53	6 49	6 45	6 42	6 37	6 33
8	6 30	6 26	6 22	6 18	6 15	6 12	6 8	6 5	6 2	5 59	5 55	5 52
9	5 49	5 46	5 43	5 40	5 38	5 35	5 32	5 29	5 26	5 24	5 21	5 19
10	5 16	5 14	5 11	5 9	5 6	5 4	5 2	4 59	4 57	4 55	4 53	4 51
11	4 49	4 46	4 44	4 42	4 40	4 38	4 36	4 34	4 32	4 30	4 29	4 27
12	4 25	4 23	4 21	4 20	4 18	4 16	4 15	4 13	4 11	4 10	4 8	4 7
13	4 5	4 3	4 2	4 0	3 59	3 57	3 56	3 54	3 53	3 52	3 50	3 49
14	3 47	3 46	3 45	3 43	3 42	3 41	3 39	3 38	3 37	3 36	3 35	3 33
15	3 32	3 31	3 30	3 29	3 27	3 26	3 25	3 24	3 23	3 22	3 21	3 20
16	3 19	3 18	3 16	3 15	3 14	3 13	3 12	3 11	3 10	3 9	3 8	3 7
17	3 7	3 6	3 5	3 4	3 3	3 2	3 1	3 0	2 59	2 58	2 57	2 57
18	2 56	2 55	2 54	2 53	2 52	2 52	2 51	2 50	2 49	2 48	2 48	2 47
19	2 46	2 45	2 45	2 44	2 43	2 42	2 42	2 41	2 40	2 39	2 39	2 38
20	2 37	2 37	2 36	2 35	2 35	2 34	2 33	2 33	2 32	2 31	2 31	2 30
21	2 29	2 29	2 28	2 27	2 27	2 26	2 26	2 25	2 24	2 24	2 23	2 22
22	2 22	2 21	2 21	2 20	2 20	2 19	2 18	2 18	2 17	2 17	2 16	2 16
23	2 15	2 15	2 14	2 14	2 13	2 13	2 12	2 11	2 11	2 10	2 10	2 9
24	2 9	2 8	2 8	2 7	2 7	2 7	2 6	2 6	2 5	2 5	2 4	2 4

A	0′	10′	20′	30′	40′	50′	A	0′	10′	20′	30′	40′	50′
°	′ ″	′ ″	′ ″	′ ″	′ ″	′ ″	°	′ ″	′ ″	′ ″	′ ″	′ ″	′ ″
25	2 3	2 2	2 1	2 0	2 0	1 59	40	1 9	1 8	1 8	1 8	1 7	1 7
26	1 58	1 57	1 56	1 55	1 54	1 54	41	1 6	1 6	1 6	1 5	1 5	1 4
27	1 53	1 52	1 51	1 50	1 50	1 49	42	1 4	1 4	1 3	1 3	1 3	1 2
28	1 48	1 47	1 47	1 46	1 45	1 45	43	1 2	1 1	1 1	1 1	1 0	1 0
29	1 44	1 43	1 42	1 42	1 41	1 40	44	1 0	59	59	59	58	58
30	1 40	1 39	1 38	1 38	1 37	1 36	45	58	57	57	57	56	56
31	1 36	1 35	1 35	1 34	1 33	1 33	46	56	55	55	55	54	54
32	1 32	1 32	1 31	1 30	1 30	1 29	47	54	54	54	53	53	52
33	1 29	1 28	1 27	1 27	1 26	1 26	48	52	52	51	51	51	50
34	1 25	1 25	1 24	1 24	1 23	1 23	49	50	50	50	49	49	49
35	1 22	1 22	1 21	1 21	1 20	1 20	50	48	48	48	48	47	47
36	1 19	1 19	1 18	1 18	1 17	1 17	51	47	46	46	46	46	45
37	1 16	1 16	1 16	1 15	1 15	1 14	52	45	45	45	44	44	44
38	1 14	1 13	1 13	1 12	1 12	1 12	53	43	43	43	43	42	42
39	1 11	1 11	1 10	1 10	1 10	1 9	54	42	42	41	41	41	41

A	0°	1°	2°	3°	4°	5°	6°	7°	8°	9°
°	″	″	″	″	″	″	″	″	″	″
50	48	47	45	43	42	40	39	37	36	35
60	33	32	31	29	28	27	26	25	23	22
70	21	20	19	18	17	15	14	13	12	11
80	10	9	8	7	6	5	4	3	2	1

SUN'S PARALLAX IN ALTITUDE.

A	0°	10°	20°	30°	40°	50°	60°	70°	80°	90°
Parallax	9″	9″	8″	8″	7″	6″	5″	3″	2″	0″

GRAPHIC METHOD OF FINDING TIME AND AZIMUTH FROM ALTITUDE OF SUN OR STAR.

Describe a circle, fig. 125, of any convenient radius through the centre O; draw diameter MOM. From O draw PO making angle POM equal to the latitude; draw OQ at right angles to PO. Through O draw OA, making AOM equal to the corrected altitude, and OD, making DOQ equal to the corrected declination, and on the side of OQ towards P if the declination and latitude are of the same name, or on the opposite side if of different names.

Through A draw AA, parallel to MM, and through D draw DD, parallel to QO, intersecting AA_1 in S.

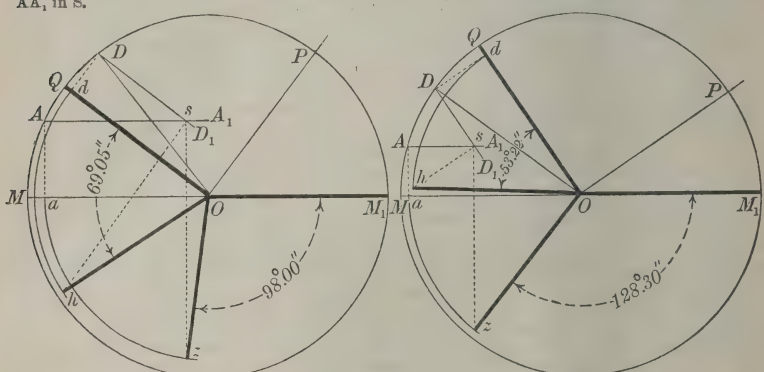


FIG. 125.

Data.	Result.	Data.	Result.
Lat. 53° 30′ N.	Azimuth N. 98° 00′ W.	Lat. 34° 30′ S.	Azimuth S. 128° 30′ W.
Dec. 14° 50′ N.	Hour Angle 69° 05′	Dec. 19° 50′ N.	Hour Angle 53° 22′
Alt. 24° 20′ P.M.		Alt. 15° 40′ P.M.	

To find the Azimuth.

Drop a perpendicular from A to OM, intersecting this latter in a; from centre O and radius Oa draw arc az, and from s draw sz perpendicular to MOM_1, intersecting arc az in z; through z draw Oz. Then the angle M_1Oz will represent the azimuth from the elevated pole east or west of the meridian according as the time (A.M. or P.M.) at which the observation was made.

To find the Hour Angle.

Draw Dd at right angles to QO, and with centre O and radius Od draw arc dh; from s draw line sh perpendicular to QO, intersecting arc dh in h; draw line Oh. Then QOh will be the hour angle at the time of observation before or after apparent noon.

This diagrammatic method may be utilised for approximate determination of other problems, such as azimuth and time of sun or stars at instant of rising or setting; altitude and azimuth at a given time; or for altitude and time of passing prime vertical.

GEODETIC FORMULÆ.

From measurements made of various meridians and parallels it has been found that the earth has the form of an ellipsoid of revolution with its greatest diameter at the equator and its least between the poles; and that the radius of curvature of the meridian varies with the latitude, being least at the equator and greatest at the poles, so that the length of a degree of latitude is more at the poles than at the equator. The length of a degree of longitude varies also with the latitude, being greatest at the equator and zero at the poles.

In treating with measurements of an extensive character over the surface of the earth, it is necessary to take into account its ellipsoidal shape, and it is convenient to employ certain approximations, so that spherical trigonometry may be used in the solution of the problems involved. The following formulæ enable the radius of a spherical surface to be found that approximates most nearly to the ellipsoidal surface embracing the area under consideration.

In these formulæ

a = the equatorial radius of the earth; e = the eccentricity; ϕ = the mean latitude; A = the azimuth.

$$\text{Radius of curvature of meridian} = Q = \frac{a(1-e^2)}{\sqrt{(1-e^2\sin^2\phi)^3}}.$$

$$\text{Radius of curvature of normal section perpendicular to meridian} = N = \frac{a}{\sqrt{(1-e^2\sin^2\phi)}}.$$

Radius of curvature of a normal section which cuts meridian at an angle A

$$= \frac{QN}{Q \sin^2 A + N \cos^2 A}.$$

Radius of curvature of an area of the earth's surface, or mean curvature $= \sqrt{QN}$.

Radius of a parallel of latitude $= N \cos \phi = \frac{a \cos \phi}{\sqrt{1 - e^2 \sin^2 \phi}}$

The logarithms of the most probable values of the constants used above are as follows (taking a in statute miles):—

$$\log. a = 3{\cdot}59806. \qquad \log. e^2 = 7{\cdot}83047. \qquad \log. (1 - e^2) = 9{\cdot}99853.$$

Adopting the radius which most nearly corresponds to the surface considered at the mean latitude ϕ, any measured length l on this surface may be reduced to arc by one of the following formulæ, ρ being the radius adopted reduced to the same unit as l:—

$\frac{l \times 57{\cdot}2958}{\rho}$ in degrees of arc; $\frac{\times 3437{\cdot}747}{\rho}$ in minutes of arc; $\frac{l \times 20626{\cdot}5}{\rho}$ in seconds of arc.

The table on page 163, 'Length of a Degree in Latitude and Longitude,' is calculated from the accepted dimensions of the earth. Values for intermediate latitudes may be obtained from this table, by interpolating, with sufficient exactitude for most purposes. The length of a degree on a great circle at right angles to the meridian at a given latitude may be obtained by multiplying the length of a degree of longitude (as taken from the table) by the secant of the latitude.

Convergence of Meridians.

In traverses and route surveys, a survey line is referred to a meridian at a certain point crossing the meridian with an azimuth A, this line, if continued in the same direction, having increased or diminished azimuths. The differences of azimuth can be approximately determined by calculating the convergence of the meridian corresponding to a given unit departure at the mean of the latitudes, and multiplying this by the departure as calculated from the traverse. To obtain the azimuth on crossing the second meridian, the convergence obtained in the manner just explained is added to or subtracted from the azimuth crossing the first meridian, being added where the latitude is increased and subtracted where the latitude is diminished.

The convergence, corresponding to various unit lengths of departure, may be calculated by the following formulæ, with sufficient approximation for use in ordinary traverse surveying. The length of a degree of longitude corresponding to the mean latitude is taken in miles from table, page 163, interpolating if necessary; then:—

Log. of convergence in seconds per mile of departure
$= \log. \sin \phi + 3{\cdot}55620 - \log.$ miles per 1° longitude.

Log. of convergence in seconds per 1,000 feet of departure
$= \log. \sin \phi + 2{\cdot}83367 - \log.$ miles per 1° longitude.

Log. of convergence in seconds per 1,000 metres of departure
$= \log. \sin \phi + 3{\cdot}34966 - \log.$ miles per 1° longitude.

To range a parallel of latitude by setting out chords of a given length:—

The chords are ranged making an angle to the meridian of 90° half the angle of convergence corresponding to the length of the chord at the proposed latitude. The succeeding chords will have an angle of deflection from the preceding chord produced, equal to the convergence corresponding to the length of chord used.

To range a parallel of latitude by means of offsets:—

A line is run, perpendicular to the meridian, then the lengths of offsets are equal to the distances along this perpendicular line multiplied by the sine of half the angle of convergence corresponding to the lengths.

If the offsets are equidistant the length of the second offset will be four times the length of the first; the third, nine times the first, and so on; the n^{th} offset will be n^2 times the length of the first.

Horizontal Sun Dial.

On a line NS, fig. 125A, mark off a convenient length NO: from O set off a line towards L, making an angle NOL equal to the latitude of the position (taken in diagram 53° 30′), and from N draw a perpendicular to OL, cutting the latter in point L. From N and with length NL mark off a point C in the line NS, and with C as centre and the same length NL as radius describe the quadrant NQ and join NQ with a straight line.

Divide the quadrant NQ into six equal parts (each corresponding to one hour) and from these divisions on the arc draw lines towards the centre C and mark the points at which these radial lines cross the line NQ.

From O draw a line perpendicular to NS and mark off OE equal to CQ and join NE.

From each division on line NQ draw a line parallel to NS, marking where this line crosses the line NE in each case.

Then lines drawn from O through each of these points, marked off in NE, will be the dial lines corresponding to the hour divisions on the quadrant from which they were found respectively.

Having completed the divisions of one quadrant, these angles may be transferred to the other quadrants but in reverse order (VI–VII equals VI–V, VI–VIII equals VI–IIII, and so on).

An allowance must be made for the thickness of the style between the AM and PM portions of the dial, the AM dial being exactly similar to the PM dial but drawn with the XII lines the thickness of the style apart.

The style is constructed with the angle of inclination of the inclined face equal to the latitude of the site, its lower point at O and its upper towards the elevated pole, so that its

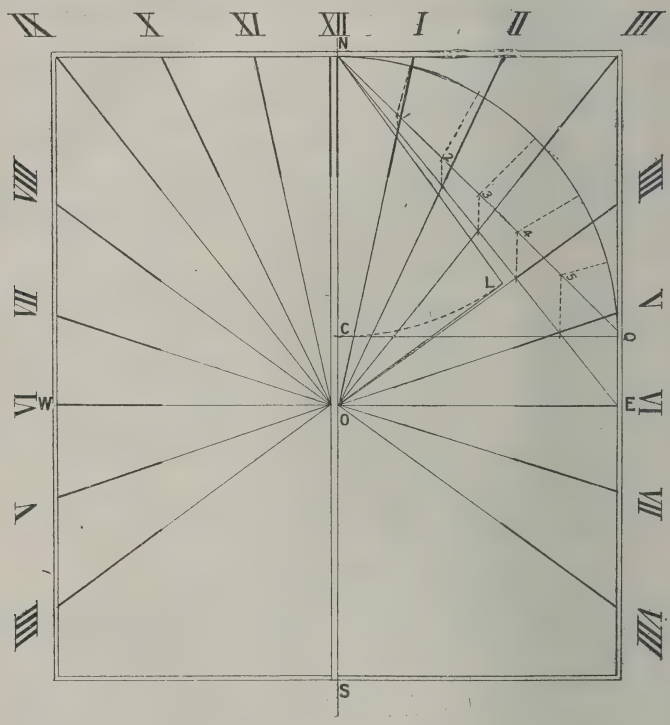


FIG. 125A.

plane is in that of the meridian, the XII (noon) lines pointing towards the north in northern latitudes or towards the south in southern latitudes, and the VI–VI lines pointing east and west, so that the upper face of the style will be parallel to the Polar axis. The plane of the dial should be perfectly level.

(Methods of fixing the direction of the true north and south line will be found on page 162.)

The time indicated by the dial is sun time, and to get mean time the table of Equation of Time, page 162, should be applied as there directed. To arrive at standard time a constant correction must be applied according to the difference of longitude between the dial and the standard meridian (Greenwich in Great Britain) adopted in the country (subtracted if to the east or added if to the west).

The dial angles may be calculated if preferred by formula :

$$\tan t = \sin l \tan h ;$$

where

t = angle at O from NO to the hour line on dial corresponding to h ; l = latitude of position

h = hour angle.

DRAWING.

(H. A. Miles.)

Engineering drawings are usually required for one of two purposes, viz. as illustrations or for workshop use. The former, which are not necessarily to scale, or dimensioned, may be either 'line' or 'wash' drawings—the first for preference—or prepared from photographs in the following manner A bromide print is outlined and worked up with waterproof ink, after which the photographic image is bleached out. This is useful in complicated perspective views, or where the skill of the draughtsman is not equal to elaborate freehand work.

For reproduction purposes, drawings should always be prepared to an enlarged scale—twice full size is usual. If a scale is necessary it should be *drawn* (not denoted in words), so as to be reduced proportionately with the illustration to which it refers. Bold and striking effects should be aimed at, simplicity rather than elaboration being most effective. Shade lines and dotted hidden details are both useful, and surface lining, B, fig. 126, is sometimes necessary, but care must be taken to avoid overcrowding. A good rule is never to introduce a superfluous line or to omit one which is necessary.

The best material is 'Turkey Mill' paper or 'Bristol Board,' but it is sometimes advantageous to use tracing cloth, and (provided it is not yellow) good results will be secured with this. The blackest of black ink should be employed. All artists' colourmen now stock the liquid carbon or waterproof ink, and process black, either of which will be found suitable.

For workshop purposes a drawing should be looked upon as a book explaining the designer's views—it should be easily 'read' by the mechanic, and must contain all information necessary for the construction of the item represented. To this end there are certain conventions generally

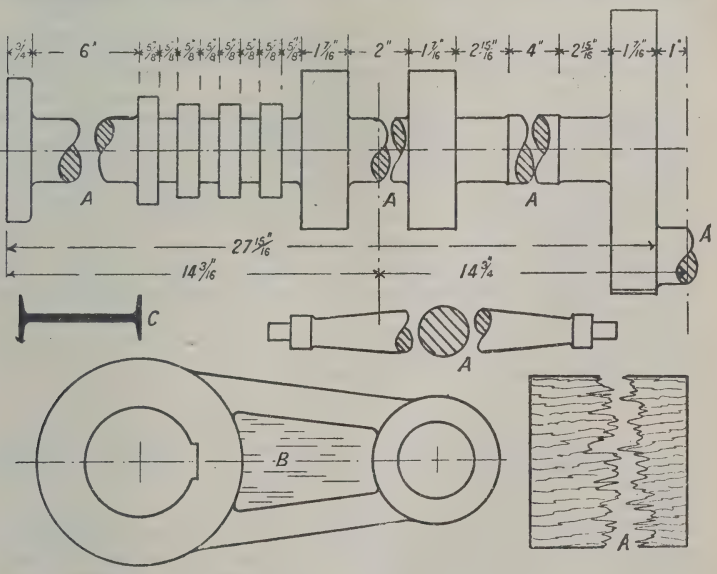


FIG. 126.

employed, and in the same shop these always mean the same thing, but unfortunately, owing to the absence of a recognised standard, each firm is at liberty to please itself, and consequently there is no uniformity.

The conventions which follow are those most frequently employed :—

Construction and visible boundaries . . . .

Ditto hidden from view .

Centre or pitch lines .

Projection lines . . .

Dimension lines . . . 1′. 3″

One view of an article is seldom sufficient for a proper understanding of its construction and plans, elevations and sections are usually given, minor details being generally drawn separately and frequently to an enlarged scale.

All such drawings should be fully dimensioned. Where a number of small dimensions combine to make up a total, the overall should be given, not only to save time, but to act as a check upon the others.

Where coloured drawings are desired to indicate sections, the following will meet requirements :—

Cast iron	Neutral tint or Payne's grey.
Wrought iron	Prussian blue.
Steel	Violet carmine.
Copper	Crimson lake, little gamboge.
Brass	Gamboge, little burnt umber.
Lead	Indian ink and Prussian blue.
Brickwork	Light red, little crimson lake.
Wood	Yellow ochre and burnt sienna.

In each case the section is coloured a considerably deeper shade of the same tint than the other parts of the drawing.

In building plans (otherwise uncoloured) prepared to show alterations or additions to existing premises, it is a common practice to colour new work red.

Different methods of lining are sometimes employed to represent different materials, but if followed to any extent this is likely to lead to mistakes unless supplemented by a key or written explanation, in which case it can scarcely be considered necessary.

A very general practice is to adopt C (fig. 127) for all metals ; to line up woodwork in imitation of the grain A (fig. 127) ; and to use as few others as possible—the material being specified in words thus :—' Brass '—' Copper 75 mils '—' Spring Steel 22 S.W.G.'—etc.

It is obviously impossible to fix any definite spacing between the lines. Small details must necessarily be treated differently from larger surfaces, and very large areas need only be sectioned around their boundaries.

Typical specimens of various section conventions are shown in fig. 127. Where two pieces of material butt against each other, the section lining should run in opposite directions ; if three meet, the lines running in the same direction should break joint. (D, fig. 127.)

Small or thin sections such as boiler plates, engine beds, girders, joists, etc., may be blacked in solid. (C, fig. 126.)

Long details such as columns, shafting, pipes, etc., need not necessarily be shown full length, and in such cases break lines, A, fig. 126, are employed. Should the diameter vary, one or more sections may be shown, as in the firebar example.

For PHOTO-COPYING OF DRAWINGS see Index.

Patent Specification Drawings.

All necessary information will be found in a pamphlet entitled ' Instructions to Applicants for Patents,' published by and obtainable free on application at the Patent Office, 25 Southampton Buildings, Chancery Lane, London, W.C., or it will be sent free on receipt of 1*d.* for postage.

One point to remember in this class of work is that the 13-inch side of each sheet is bound up with the specification, and should be looked upon as the left-hand side. All lettering, etc., should therefore be upright, viz., not facing different ways.

For whatever purpose drawings are prepared, they will inevitably indicate to the expert eye the character of the draughtsman. One man scarcely varies the thickness of his lines, muddles his lettering, and does not space his work out to advantage. Another has the knack of ' displaying ' his work, as a printer would say ; his construction lines are bold and the others thin, his lettering varies according to whether it is of major or minor importance—heavy block, small capitals, or small italics being used as considered advisable ; all his details are nicely spaced, and the whole effect is one of neatness, clearness, and completeness.

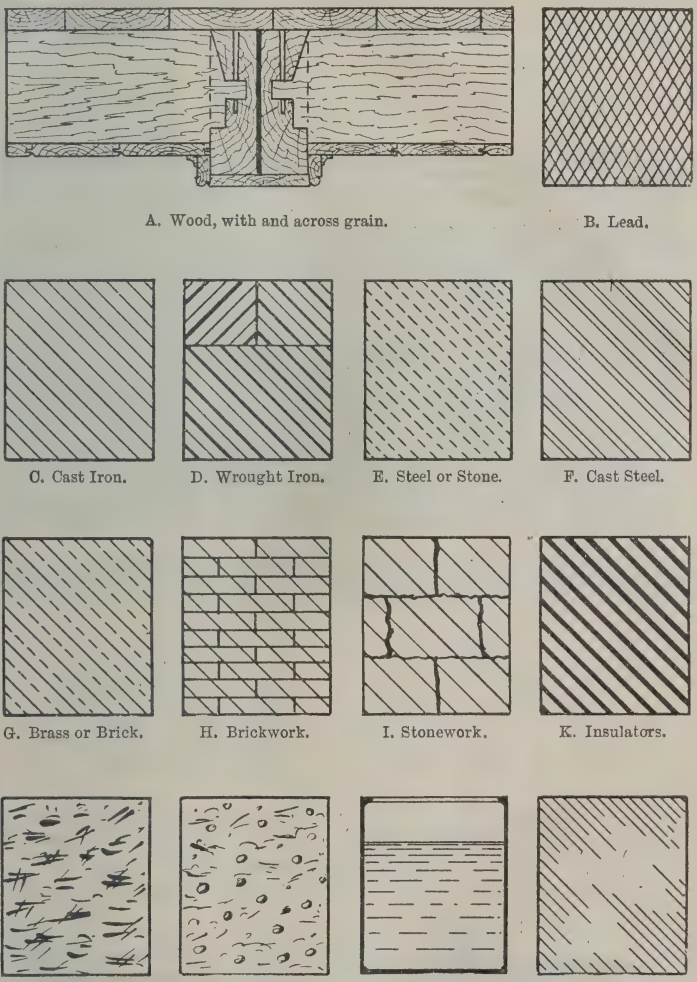

A. Wood, with and across grain.
B. Lead.
C. Cast Iron.
D. Wrought Iron.
E. Steel or Stone.
F. Cast Steel.
G. Brass or Brick.
H. Brickwork.
I. Stonework.
K. Insulators.
L. Earth.
M. Concrete.
N. Water.
O. Glass.

FIG. 127.

THE CLINOGRAPH


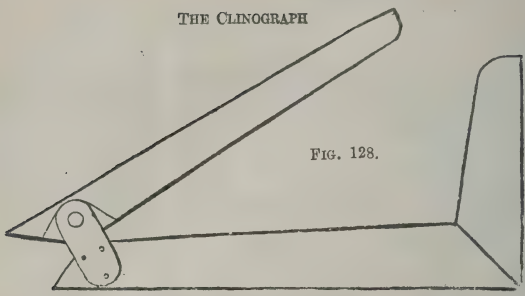


FIG. 128.

This instrument, figs. 128, 129, 130 (*Harrison's Patent*), manufactured by Messrs. W. H. Barling, is a set square with a swivelling blade, used in conjunction with a tee-square, for drawing lines parallel, perpendicular, or symmetrically inclined to any given line or direction.


With one edge of the instrument resting against the edge of the tee-square, the blade can be instantly set to the required position, and the friction of the joint is sufficient to hold it firmly while in use.

For drawing parallel lines it is slid along the tee-square to any part of the drawing paper. For perpendicular or symmetrical lines, after being set, it is turned with its other edge against the tee-square, or with its other face on the paper, as the case may be, after which it is slid into any position as before. As one edge always rests against the tee-square, the discomfort attending the ordinary methods of drawing inclined lines is avoided, and such work is greatly facilitated, whilst at the same time greater accuracy is secured. The instrument is made in pearwood, mahogany, and mahogany with ebony edges, and transparent celluloid, in three sizes, 7 ins., 9 ins., and 12 ins.

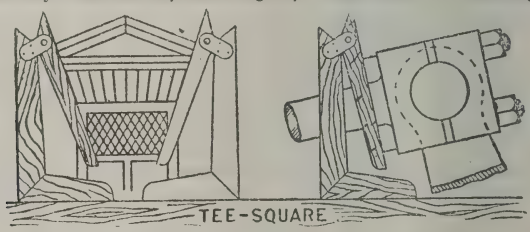

Used for symmetrical figures. Used in machine drawing.

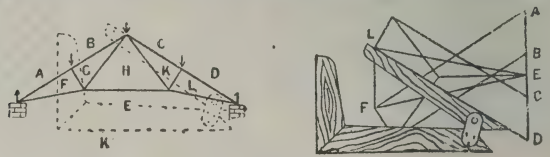FIG. 129.



Used for graphic statics.

FIG. 130.

STANLEY'S PATENT DRAWING PEN.

This pen (fig. 131) is made with one nib to swivel round, so that it can be opened out for clearing, the arrangement being such that it locks back again in exact position, and the adjustment for the thickness of line is not interfered with.


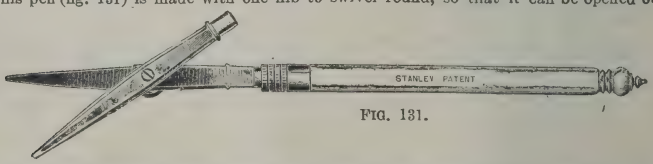


FIG. 131.

Modern Style, British Made Drawing Instruments of the highest quality and finish.

Manufactured in London by W. H. HARLING. *Established* 1851.

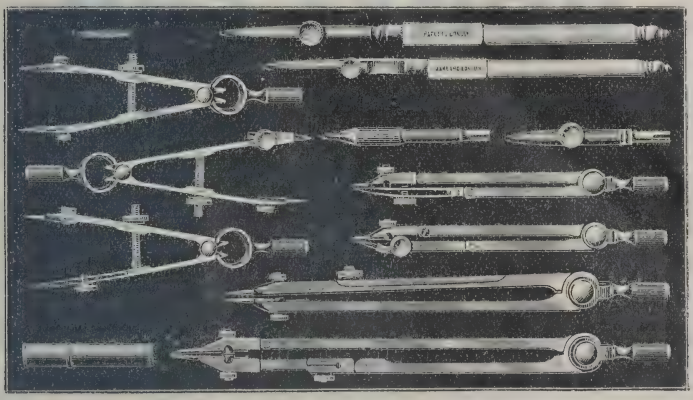Seventy years experience are behind these instruments and every piece is guaranteed.



B.E. 110 STANDARD SET, as illustrated, containing: Half-Set and Lengthening Bar; Hair Spring Divider; Bow Pen; Bow Pencil; Three Spring Bows; Two Drawing Pens, with aluminium handles; Case of Leads; Two Spare Needles and Key, in neat Wallet Case .. .. £ 4 10 6

THE SAME SET, fitted with square ivory handle Pens and centre screw Spring Bows .. .. £ 4 18 0

You should see Harling's New Quick Set Drawing Pen.

Particulars on request.

Illustrated Catalogue giving particulars of Sets from 20/- value, and separate Instruments, will be sent on receipt of business card.



W. H. HARLING,

Mathematical, Drawing and Surveying Instrument Manufacturer

117 MOORGATE, LONDON, E.C. 2,

And GROSVENOR WORKS, CLAPTON, E. 5.

ESTABLISHED 1851. *Telegrams:* 'CLINOGRAPH, LONDON.

E. 178

THE

SURVEYOR

AND

Municipal and County Engineer.

Proprietors: ST. BRIDE'S PRESS, LTD.

Every Friday, 6d.
Yearly (post free) 28/-, United Kingdom; 32/-, Abroad.

For Municipal and County Engineers and Surveyors: Consulting Engineers for Municipal Works: Architects, Quantity Surveyors, Builders: Contractors for Municipal Works and Supplies: Members of Local Authorities: and all interested in the Constructional side of Local Government enterprise.

For Advertising, apply:

C. S. MASON,

ST. BRIDE'S HOUSE, 24 BRIDE LANE, FLEET ST., E.C. 4.

Telegrams: "MUNICIPIUM, FLEET, LONDON." (2 words.)
Telephone: CITY, 1046.

A Steel Drawing-board Edge.

One of the difficulties a draughtsman quite frequently bumps up against is that of trying to draw long lines parallel to each other. When drawn, he often finds that, instead of being parallel throughout, they are from $\frac{1}{16}$ to $\frac{1}{4}$ in. farther apart at one end than the other. This condition is almost surely to be found in steam-heated offices, where the cross-grained end of the board is depended upon to make a straight edge upon which the head of the T-square is expected to slide.

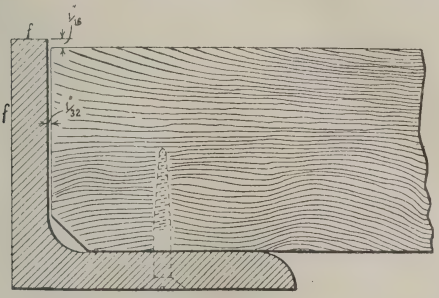


Fig. 132.

Fig. 132 shows an arrangement fitted to a board to overcome this difficulty, and found to answer the purpose admirably. The straight edge is made from a piece of angle iron 2 by 2 by $\frac{1}{4}$-in. ground or otherwise finished on the top and outside edges to ensure its being perfectly straight. The top edges project about $\frac{1}{16}$ in. above the surface of the drawing-board to give the T-square clearance above the drawing-pins when sliding up and down, and small particles of dirt are thus prevented from being ground into the paper. The angle iron is fastened to the drawing-board by two wood screws about $1\frac{1}{2}$ in. long, screwed in about 5 ins. from each end of the angle iron. The screw hole in one end should be slightly slotted to take care of swelling and shrinking of the wood. (*W. F.*, '*Machinery.*')

Kink for Draughtsmen.

Draughtsmen who find that the jaws of the lead-holding clamp of a compass have become so smooth that it is difficult to tighten them sufficiently to hold the lead, can easily overcome this difficulty in the following way. First remove the clamping screw and insert a tap in place of the lead; then press the jaws together gently with the fingers and run the tap backwards and forwards five or six times, this will roughen the jaws so that they will grip the lead firmly.

(*O. T. R.*, '*Machinery.*')

SECTION IV

HEAT — SOUND — OPTICS

SECTION IV

HEAT—SOUND—OPTICS.

HEAT.

TABLE FOR THE CONVERSION OF DEGREES ON THE CENTIGRADE THERMOMETER INTO THOSE OF FAHRENHEIT'S SCALE.

°Cent.	° Fahr.	°Cent.	° Fahr.	°Cent.	° Fahr.	°Cent.	° Fahr.	°Cent.	° Fahr.	°Cent.	° Fahr.
−100	−148·0	− 55	− 67·0	−10	14·0	35	95·0	80	176·0	125	257·0
− 99	−146·2	− 54	− 65·2	− 9	15·8	36	96·8	81	177·8	126	258·8
− 98	−144·4	− 53	− 63·4	− 8	17·6	37	98·6	82	179·6	127	260·6
− 97	−142·6	− 52	− 61·6	− 7	19·4	38	100·4	83	181·4	128	262·4
− 96	−140·8	− 51	− 59·8	− 6	21·2	39	102·2	84	183·2	129	264·2
− 95	−139·0	− 50	− 58·0	− 5	23·0	40	104·0	85	185·0	130	266·0
− 94	−137·2	− 49	− 56·2	− 4	24·8	41	105·8	86	186·8	131	267·8
− 93	−135·4	− 48	− 54·4	− 3	26·6	42	107·6	87	188·6	132	269·6
− 92	−133·6	− 47	− 52·6	− 2	28·4	43	109·4	88	190·4	133	271·4
− 91	−131·8	− 46	− 50·8	− 1	30·2	44	111·2	89	192·2	134	273·2
− 90	−130·0	− 45	− 49·0	0	32·0	45	113·0	90	194·0	135	275·0
− 89	−128·2	− 44	− 47·2	+ 1	33·8	46	114·8	91	195·8	136	276·8
− 88	−126·4	− 43	− 45·4	2	35·6	47	116·6	92	197·6	137	278·6
− 87	−124·6	− 42	− 43·6	3	37·4	48	118·4	93	199·4	138	280·4
− 86	−122·8	− 41	− 41·8	4	39·2	49	120·2	94	201·2	139	282·2
− 85	−121·0	− 40	− 40·0	5	41·0	50	122·0	95	203·0	140	284·0
− 84	−119·2	− 39	− 38·2	6	42·8	51	123·8	96	204·8	141	285·8
− 83	−117·4	− 38	− 36·4	7	44·6	52	125·6	97	206·6	142	287·6
− 82	−115·6	− 37	− 34·6	8	46·4	53	127·4	98	208·4	143	289·4
− 81	−113·8	− 36	− 32·8	9	48·2	54	129·2	99	210·2	144	291·2
− 80	−112·0	− 35	− 31·0	10	50·0	55	131·0	100	212·0	145	293·0
− 79	−110·2	− 34	− 29·2	11	51·8	56	132·8	101	213·8	146	294·8
− 78	−108·4	− 33	− 27·4	12	53·6	57	134·6	102	215·6	147	296·6
− 77	−106·6	− 32	− 25·6	13	55·4	58	136·4	103	217·4	148	298·4
− 76	−104·8	− 31	− 23·8	14	57·2	59	138·2	104	219·2	149	300·2
− 75	−103·0	− 30	− 22·0	15	59·0	60	140·0	105	221·0	150	302·0
− 74	−101·2	− 29	− 20·2	16	60·8	61	141·8	106	222·8	151	303·8
− 73	− 99·4	− 28	− 18·4	17	62·6	62	143·6	107	224·6	152	305·6
− 72	− 97·6	− 27	− 16·6	18	64·4	63	145·4	108	226·4	153	307·4
− 71	− 95·8	− 26	− 14·8	19	66·2	64	147·2	109	228·2	154	309·2
− 70	− 94·0	− 25	− 13·0	20	68·0	65	149·0	110	230·0	155	311·0
− 69	− 92·2	− 24	− 11·2	21	69·8	66	150·8	111	231·8	156	312·8
− 68	− 90·4	− 23	− 9·4	22	71·6	67	152·6	112	233·6	157	314·6
− 67	− 88·6	− 22	− 7·6	23	73·4	68	154·4	113	235·4	158	316·4
− 66	− 86·8	− 21	− 5·8	24	75·2	69	156·2	114	237·2	159	318·2
− 65	− 85·0	− 20	− 4·0	25	77·0	70	158·0	115	239·0	160	320·0
− 64	− 83·2	− 19	− 2·2	26	78·8	71	159·8	116	240·8	161	321·8
− 63	− 81·4	− 18	− 0·4	27	80·6	72	161·6	117	242·6	162	323·6
− 62	− 79·6	− 17	+ 1·4	28	82·4	73	163·4	118	244·4	163	325·4
− 61	− 77·8	− 16	3·2	29	84·2	74	165·2	119	246·2	164	327·2
− 60	− 76·0	− 15	5·0	30	86·0	75	167·0	120	248·0	165	329·0
− 59	− 74·2	− 14	6·8	31	87·8	76	168·8	121	249·8	166	330·8
− 58	− 72·4	− 13	8·6	32	89·6	77	170·6	122	251·6	167	332·6
− 57	− 70·6	− 12	10·4	33	91·4	78	172·4	123	253·4	168	334·4
− 56	− 68·8	− 11	12·2	34	93·2	79	174·2	124	255·2	169	336·2

TABLE FOR THE CONVERSION OF DEGREES (*continued*).

°Cent.	° Fahr.	°Cent.	° Fahr.	°Cent.	° Fahr.	°Cent.	° Fahr.	°Cent.	° Fahr.	°Cent.	° Fahr.
170	338·0	210	410·0	250	482·0	290	554·0	330	626·0	440	824
171	339·8	211	411·8	251	483·8	291	555·8	331	627·8	450	842
172	341·6	212	413·6	252	485·6	292	557·6	332	629·6	460	860
173	343·4	213	415·4	253	487·4	293	559·4	333	631·4	470	878
174	345·2	214	417·2	254	489·2	294	561·2	334	633·2	480	896
175	347·0	215	419·0	255	491·0	295	563·0	335	635·0	482	900
176	348·8	216	420·8	256	492·8	296	564·8	336	636·8	490	914
177	350·6	217	422·6	257	494·6	297	566·6	337	638·6	500	932
178	352·4	218	424·4	258	496·4	298	568·4	338	640·4	538	1000
179	354·2	219	426·2	259	498·2	299	570·2	339	642·2	593	1100
180	356·0	220	428·0	260	500·0	300	572·0	340	644·0	600	1112
181	357·8	221	429·8	261	501·8	301	573·8	341	645·8	649	1200
182	359·6	222	431·6	262	503·6	302	575·6	342	647·6	700	1292
183	361·4	223	433·4	263	505·4	303	577·4	343	649·4	704	1300
184	363·2	224	435·2	264	507·2	304	579·2	344	651·2	760	1400
185	365·0	225	437·0	265	509·0	305	581·0	345	653·0	800	1472
186	366·8	226	438·8	266	510·8	306	582·8	346	654·8	815	1500
187	368·6	227	440·6	267	512·6	307	584·6	347	656·6	871	1600
188	370·4	228	442·4	268	514·4	308	586·4	348	658·4	900	1652
189	372·2	229	444·2	269	516·2	309	588·2	349	660·2	926	1700
190	374·0	230	446·0	270	518·0	310	590·0	350	662·0	982	1800
191	375·8	231	447·8	271	519·8	311	591·8	351	663·8	1000	1832
192	377·6	232	449·6	272	521·6	312	593·6	352	665·6	1037	1900
193	379·4	233	451·4	273	523·4	313	595·4	353	667·4	1093	2000
194	381·2	234	453·2	274	525·2	314	597·2	354	669·2	1100	2012
195	383·0	235	455·0	275	527·0	315	599·0	355	671·0	1148	2100
196	384·8	236	456·8	276	528·8	316	600·8	356	672·8	1200	2192
197	386·6	237	458·6	277	530·6	317	602·6	357	674·6	1300	2372
198	388·4	238	460·4	278	532·4	318	604·4	358	676·4	1400	2552
199	390·2	239	462·2	279	534·2	319	606·2	359	678·2	1500	2732
200	392·0	240	464·0	280	536·0	320	608·0	360	680·0	1600	2912
201	393·8	241	465·8	281	537·8	321	609·8	370	698	1700	3092
202	395·6	242	467·6	282	539·6	322	611·6	371	700	1800	3272
203	397·4	243	469·4	283	541·4	323	613·4	380	716	1900	3452
204	399·2	244	471·2	284	543·2	324	615·2	390	734	2000	3632
205	401·0	245	473·0	285	545·0	325	617·0	400	752	2100	3812
206	402·8	246	474·8	286	546·8	326	618·8	410	770	2200	3992
207	404·6	247	476·6	287	548·6	327	620·6	420	788	2300	4172
208	406·4	248	478·4	288	550·4	328	622·4	426	800	2400	4352
209	408·2	249	480·2	289	552·2	329	624·2	430	806	2500	4532

TABLE FOR THE CONVERSION OF DEGREES ON THE FAHRENHEIT THERMOMETER INTO THOSE OF THE CENTIGRADE SCALE.

°Fahr.	° Cent.	°Fahr.	° Cent.	°Fahr.	° Cent.	°Fahr.	° Cent.	°Fahr.	° Cent.	°Fahr.	° Cent.
212	100·0	193	89·4	174	78·8	155	68·3	136	57·7	117	47·2
211	99·4	192	88·8	173	78·3	154	67·7	135	57·2	116	46·6
210	98·8	191	88·3	172	77·7	153	67·2	134	56 6	115	46·1
209	98·3	190	87·7	171	77·2	152	66·6	133	56·1	114	45·5
208	97·7	189	87·2	170	76·6	151	66·1	132	55·5	113	45·0
207	97·2	188	86·6	169	76·1	150	65·5	131	55·0	112	44·4
206	96·6	187	86·1	168	75·5	149	65·0	130	54·4	111	43·8
205	96·1	186	85·5	167	75·0	148	64·4	129	53·8	110	43·3
204	95·5	185	85·0	166	74·4	147	63·8	128	53·3	109	42·7
203	95·0	184	84·4	165	73·8	146	63·3	127	52·7	108	42·2
202	94·4	183	83·8	164	73·3	145	62·7	126	52·2	107	41·6
201	93·8	182	83·3	163	72·7	144	62·2	125	51·6	106	41·1
200	93·3	181	82·7	162	72·2	143	61·6	124	51·1	105	40·5
199	92·7	180	82·2	161	71·6	142	61·1	123	50·5	104	40·0
198	92·2	179	81·6	160	71·1	141	60·5	122	50·0	103	39·4
197	91·6	178	81·1	159	70·5	140	60·0	121	49·4	102	38·8
196	91·1	177	80·5	158	70·0	139	59·4	120	48·8	101	38·3
195	90·5	176	80·0	157	69·4	138	58·8	119	48·3	100	37·7
194	90·0	175	79·4	156	68·8	137	58·3	118	47·7	99	37·2

TABLE FOR THE CONVERSION OF DEGREES (*continued*).

°Fahr.	° Cent.	°Fahr.	° Cent.	°Fahr.	° Cent.	°Fahr.	° Cent.	°Fahr.	° Cent.	°Fahr.	° Cent.
98	36·6	76	24·4	53	11·6	30	— 1·1	8	−13·3	−14	−25·5
97	36·1	75	23·8	52	11·1	29	— 1·6	7	−13·8	−15	−26·1
96	35·5	74	23·2	51	10·5	28	— 2·2	6	−14·4	−16	−26·6
95	35·0	73	22·7	50	10·0	27	— 2·7	5	−15·0	−17	−27·2
94	34·4	72	22·2	49	9·0	26	— 3·3	4	−15·5	−18	−27·7
93	33·8	71	21·6	48	8·8	25	— 3·8	3	−16·1	−19	−28·3
92	33·3	70	21·1	47	8·3	24	— 4·4	2	−16·6	−20	−28·8
91	32·7	69	20·5	46	7·7	23	— 5·0	1	−17·2	−21	−29·4
90	32·2	68	20·0	45	7·2	22	— 5·5	0	−17·7	−22	−30·0
89	31·6	67	19·4	44	6·6	21	— 6·1	— 1	−18·3	−23	−30·5
88	31·1	66	18·9	43	6·1	20	— 6·6	— 1	−18·8	−24	−31·1
87	30·5	65	18·3	42	5·5	19	— 7·2	— 3	−19·4	−25	−31·6
87	30·5	64	17·7	41	5·0	18	— 7·7	— 4	−20·0	−26	−32·2
86	30·0	63	17·2	40	4·4	17	— 8·3	— 5	−20·5	−27	−32·7
85	39·4	62	16·6	38	3·3	16	— 8.8	— 6	−21·1	−28	−33·3
84	28·8	61	16·1	37	2·7	15	— 9·5	— 7	−21·6	−29	−33·8
83	28·3	60	15·5	36	2·2	14	−10·0	— 8	−22·2	−30	−34·4
82	27·7	59	15·0	35	1·6	13	−10·5	— 9	−22·7	−31	−35·0
81	27·2	58	14·4	34	1·1	12	−11·1	−10	−23·3	−32	−35·5
80	26·6	57	13·8	33	0·5	11	−11·6	−11	−23·8	−33	−36·1
79	26·1	56	13·3	32	0·0	10	−12·2	−12	−24·4	−34	−36·6
78	25·5	55	12·7	31	−0·5	9	−12·7	−13	−25·0	−35	−37·2
77	25·0	54	12·2								

Miscellaneous Temperatures.

Description.	° F.	° C.	Description.	° F.	° C.
In the Bessemer furnace	4000	2204	A comfortable room	70	21·1
Puddling furnace	3500	1927	Mean temperature of ocean	62	16·6
Cupola	3000	1649	1 alcohol, 1 water freezes	— 7	−21·6
Heat of common fire	1100	593·3	Mean temperature of poles	— 13	−25·0
Red heat in daylight	1070	571·1	Interstellar space	Abs. 0	
Iron red in dark	752	400·0	Greatest natural cold	— 56	−48·5
Mean temp. of earth	50	10·0	Vinous fermentation	65	18·3
,, ,, torrid zone	75	23·8	Acetous fermentation begins	78	25·5
,, ,, temp. zone	50	10·0	Acetification ends	88	31·1
,, ,, polar region	20	6·6	Phosphorus takes fire	112	44·4
Highest temp. of wind	117	47·2	Greatest artificial cold produced (*Kamerlwigh Onnes*)	−458·5	−237·0
Temp. of human blood	98	36·6			

Temperature required to Ignite different Substances

Name of Substance.	° F.	° C.	Name of Substance.	° F.	° C.
Phosphorus, transparent	112	44·4	Rifle-powder	550	287·8
Bisulphide of carbon	300	143·3	Forced gunpowder	560	293·3
Fulminating powder	370	187·8	Picrate powder for torpedoes	570	299·0
Fulminate of mercury	390	198·9	Charcoal from willow wood	660	349·0
Gun-cotton	430	221·1	Picrate powder for cannon	720	382·2
Nitro-glycerine	490	254·4	Very dry pine wood	800	426·7
Phosphorus, amorphous	500	260·0	Dry oak wood	900	480·2


See also page 201, Flash Temperatures.

VALUES OF DEGREES.

°C. contain °F.			°F. contain °C.		
1 = 1·8	4 = 7·2	7 = 12·6	1 = 0·56	4 = 2·22	7 = 3·89
2 = 3·6	5 = 9·0	8 = 14·4	2 = 1·11	5 = 2·78	8 = 4·44
3 = 5·4	6 = 10·8	9 = 16·2	3 = 1·67	6 = 3·33	9 = 5·00

$$C^\circ = \frac{5}{9}(F^\circ - 32^\circ) = \frac{F^\circ - 32^\circ}{1{\cdot}8}. \qquad F^\circ = \frac{9}{5}C^\circ + 32^\circ = 1{\cdot}8\ C^\circ + 32^\circ.$$

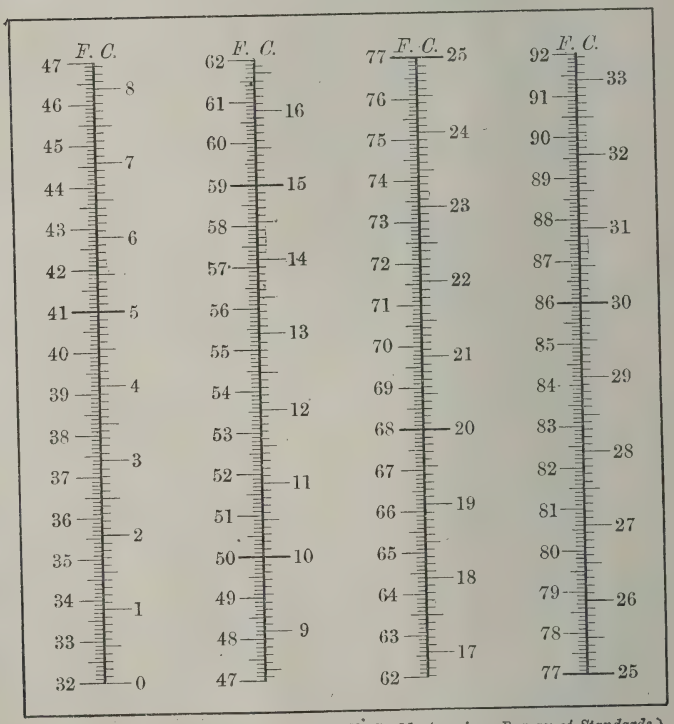THERMOMETER SCALE CONVERSION CHART.



(*R. E. Gould, American Bureau of Standards.*)

FIG. 133

Melting Points of Chemical Elements.

The following table gives the melting points of chemical elements and is reproduced from a circular issued by the U.S. Bureau of Standards. The value of the melting points used by the Bureau as standard temperatures for the calibration of thermometers and pyrometers are indicated in italics. The other values have been assigned after a careful survey of all the available data.

Element.	°F.	°C.	Element.	°F.	°C.
Helium	<−456	<−271	Barium	1560	850
Hydrogen	−434	−259	Praseodymium	1725	940?
Neon	−423	−253?	Germanium	1756	958
Fluorine	−369	−223	*Silver*	1761	960·5
Oxygen	−360	−218	Glucinum	—	>Ag
Nitrogen	−346	−210	Radium	—	?
Argon	−306	−188	*Gold*	1945·5	1063·0
Krypton	−272	−169	*Copper*	1981·5	1083·0
Xenon	−220	−140	Manganese	2237	1225
Chlorine	−150·5	−101·5	Yttrium	—	?
Mercury	− 37·7	− 38·7	Samarium	2370–2550	1300–1400
Bromine	+ 18·9	− 7·3	Scandium	—	?
Cæsium	79	26	Silicon	2588	1420
Gallium	86	30	*Nickel*	2646	1452
Rubidium	100	38	Cobalt	2714	1490
Phosphorus	111·4	44	Chromium	2750	1510
Potassium	144	62·3	*Iron*	2768	1520
Sodium	207·5	97·5	*Palladium*	2820	1549
Iodine	236·5	113·5	Zirconium	3100	1700?
Sulphur	S_{I} 235·0	112·8	Thorium	>3090	>1700
	S_{II} 246·6	119·2		<Pt.	<Pt.
	S_{III} 224·2	106·8	Vanadium	3150	1730?
Indium	311	155	*Platinum*	3191	1755
Lithium	367	186	Beryllium	>3270	>1800?
Selenium	422–428	217–220	Ytterbium	—	?
Tin	449·4	231·9	Titanium	3450	1900?
Bismuth	520	271	Rhodium	3525	1940
Thallium	576	302	Ruthenium	>3550	>1950
Cadmium	609·6	320·9	Columbium (Niobium)	4000	2200?
Lead	621·1	327·4	Boron	4000–4500	2200–2500
Zinc	786·9	419·4	Iridium	4170	2300?
Antimony	1166	630·0	Uranium	—	?
Cerium	1184	640	Molybdenum	4500	2500?
Magnesium	1204	651	Osmium	4900	2700?
Aluminium	1217·7	658·7	Tantalum	5160	2850
Calcium	1490	810	*Tungsten*	5430	3000
Lanthanum	1490	810?	Carbon	>6500 for p=1 At.	>3600 for p=1 A.
Strontium	—	>Ca<Ba?			
Neodymium	1544	840?			
Arsenic	1560	850?			

? Volatilise, but do not melt.

Various Substances.

Solids.	°F.	°C.	Solids.	°F.	°C.
Litharge	1739°	954°	Ice of milk	30°	− 1·1°
Slag of copper	2462	1350	,, sea-water	28	− 2·2
,, tin	2402	1318	,, vinegar	28	− 2·2
Puddle slag	2606	1430	,, strong wine	20	− 6·6
Sodic nitrate	591	310·5	,, ,, brandy	7	− 13·9
Potassium nitrate	642	339	Ice of oil of turpentine	14	− 1
Beeswax (white)	155	68	1 snow, 1 salt	0·00	− 1 8
,, (yellow)	142	61	1 alcohol, 1 water	− 7	− 21·6
Spermaceti	142	61	Cyanogen	− 30	− 34·4
Yellow wax	143·6	62	Oil of vitriol	− 30	− 35
Olive oil	92	33	Sulphuric ether	− 47	− 43·9
Tallow	36	2·2	Sulphurous acid	− 105	− 76
Ice of water	32	0·000	Nitrous oxide	− 150	−101

MELTING POINTS OF ALLOYS.

Bismuth.	Lead.	Tin.	Melting Point.		Bismuth.	Lead.	Tin.	Melting Point.	
			° F.	° C.				° F.	° C.
50	31·2	18·8	201	94	16·6	33·2	50·2	316	158
47	35·5	17·7	208	98	16	36	48	311	155
42·1	42·1	15·8	226	108	15·3	38·8	45·9	309	154
40	40	20	235	113	14·8	40·2	45	307	153
36·5	36·5	27	243	117	14	43	43	309	154
33·3	33·3	33·3	253	123	13·7	44·8	41·5	320	160
30·8	38·4	30·8	266	130	13·3	46·6	40·1	329	165
28·5	43	28·5	270	132	12·8	49	38·2	342	172
25	50	25	300	149	12·5	50	37·5	352	178
23·5	47	29·5	304	151	11·7	46·8	41·5	333	167
22·2	44·4	33·4	289	143	11·4	45·6	43	329	165
21	42	57	289	143	11·2	44·4	44·4	320	160
20	40	40	293	145	10·8	43·2	46	318	159
19	38	43	298	148	10·5	42	47·5	320	160
18·1	36·2	45·7	304	151	10·2	41	49·8	322	161
17·3	34·6	48·1	311	155	10	40	50	324	162

The addition of cadmium gives alloys of still lower melting point. The following table includes the best known of these :—

Alloy.	Cadmium.	Lead.	Tin.	Bismuth.	Melting Point.	
					° F.	° C.
Fusible alloy . .	12·5	25	12·5	50	149	65
Lipowitzs' alloy .	10	26·6	13·3	50·1	158	70
Woods' alloy . .	15·4	30·8	15·4	38·4	160	71
Fusible alloy . .	34·5	27·5	10	27·5	167	75
" " . .	6·2	34·5	9·3	50	171	77
" " . .	25	25	50	—	187	86
" " . .	16·6	—	33·3	50·1	203	95
" " . .	11·1	—	33·3	55·6	203	95
" " . .	25	—	25	50	203	95

(*Parkes and Martin.*)

MELTING POINTS OF THE CHEMICAL ELEMENTS.

The following are the melting points in C.° on the thermo-dynamic scale used by the Washington Bureau of Standards as standard temperatures in the standardisation of thermometers and pyrometers :—Mercury 38·9°, tin 231·9°, cadmium 320·9°, lead 327·4°, zinc 419·4°, antimony 630·0°, aluminium 658·7°, silver 960·5°, gold 1061·0°, copper 1083·0°, nickel 1452°, iron 1530°, palladium 1549°, platinum 1755°, tungsten 3000°. At temperatures of 1000° the uncertainty is of the order 0·1°, for platinum 5°, and for tungsten 100°. A further table of other standard temperatures is given in which the following are included :—Normal boiling point of oxygen 183·0°, sublimation of carbon dioxide in an inert liquid 78·5°, normal boiling points of water 100°, naphthalene 217·96°, benzo-phenone 305·9°, sulphur 444·6°, freezing point of sodium chloride 801°.

In the *Physical Review* the melting-point in C.° of rhodium is estimated to be at 1907° or 1968°, and that of iridium at 2292° or 2388°. That of silicon is placed at 1434° or 1452°, and that of palladium at 1548° or 1576°. The reason for two figures being given in each case is due to the fact that the calculations are based on different estimates of the melting-point of platinum, which has been placed at 1745° by some experimenters, and at 1789° by others.

MELTING POINTS OF REFRACTORY MATERIALS.*

The melting-points in C.° of various samples of fire-brick, as determined in an electric vacuum furnace, the temperature being measured with an optical pyrometer, were as follows :—Kaolin, 1740° ; pure alumina, 2010° ; pure silica, 1600° ; bauxite, 1820° ; bauxite clay, 1795° ; chromite, 2180° ; magnesite brick, 2165°. (*W. M. Barr, in 'Industrial Engineering.'*)

* See also 'Refractory Materials,' page 426.

COLOUR OF DIFFERENT TEMPERATURES.

Colour.	F.°	C.°	Colour.	F.°	C.°	Colour.	F.°	C.°
Faint Red	960	516	Bright Cherry Red	1830	999	Bright White Heat	2550	1399
Dull Red	1290	699	Orange	2010	1099			
Brilliant Red	1470	743	Bright Orange	2190	1199	Brilliant White Heat	2750	1510
Cherry Red	1650	899	White Heat	2370	1299			

(*Becquerel.*)

Freezing Mixtures.

Mixture.	Reduction in Temperature.	Mixture.	Reduction in Temperature
1 part nitre 1 part sal ammoniac 2 parts water	40° F.; 4·4° C.	5 parts hydrochloric acid 8 parts crystallised sulphate of soda	50° F.; 10° C.
Equal parts crystallised nitrate of ammonia and water	46° F.; 7·7° C.	2 parts powdered ice or fresh snow 1 part common salt	a temperature of −4° F.; −20° C.
Equal parts crystallised nitrate of ammonia (powdered), crystallised carbonate of soda (powdered), and water	57° F.; 13·8° C.	3 parts crystallised chloride of calcium (cooled to 32°) 2 parts fresh snow	a temperature of −50° F.; −45·6° C.

Non-freezing Mixtures.

Common Salt (Sodium Chloride).				Commercial Calcium Chloride.			
Lbs. per Gal.	Freezing Point, F.°	Lbs. per Gal.	Freezing Point, F.°	Lbs. per Gal.	Freezing Point, F.°	Lbs. per Gal.	Freezing Point, F.°
½	24 above zero	2	6 above zero	½	29 above zero	3½	6 below zero
1	18 „	2½	3 „	1	27 „	4	17 „
1½	15 „	2½	1 „	1½	23 „	4½	27 „
1½	12 „	3	3 below zero	2	18 „	5	39 „
1¾	9 „	3½	8 „	2½	4 „	5½	54 „

The salt should be thoroughly dissolved, or the results will not be satisfactory. Calcium chloride is said to be superior to sodium chloride in that it does not corrode steel tanks and barrel hoops. Where calcium chloride is used, the wooden barrels should first be well coated inside with asphaltum, or a mixture of crude paraffin and resin, to prevent the shrinking of the staves and subsequent leakage.

Glycerine is recommended for use in chemical fire extinguishers. It has no effect upon metals, but has a tendency to disintegrate rubber. It has been stated, however, that the continued use of glycerine in water renders it liable to a decomposition that would develop compounds having a corrosive action on metals. The following proportions may be used :—

Glycerine, pounds per gallon	3½	5½	(One gall. of glycerine
Temp. solution will withstand	+ 10° F.	− 10° F.	weighs 10½ lbs.)

Denatured alcohol has advantages over both glycerine and calcium chloride, in water solutions, as it has no injurious effect on either metal or rubber. A solution of about 50 per cent. is inflammable, but it would rarely be necessary to have a solution of over 30 per cent.

A 20 per cent. solution freezes at + 10° F. | A 40 per cent. solution freezes at − 20° F.
30 „ „ „ − 5° F. | 50 „ „ „ − 35° F.

Freezing Temperatures.

Sea water, −2·5° C., 27·5° F.; Mercury, −38·8° C., −37·8° F.; Acetone, −95° C., −139° F.; Pratt's petrol spirit, −128° C., −198° F.

Temperature of the Atmosphere

diminishes according to the height above the earth's surface. In the Temperate Zone a diminution of 1° C. corresponds in the mean to an ascent of 180 yards. As the mean of a series of observations made during balloon ascents, a diminution of 1° C. corresponded to an increase in height of 232 yards.

According to Kropotkin, the temperature above the earth's surface decreases 3° to 5° F. for each 1,000 ft. The average temperature at an altitude of 20,000 ft. is 13° below 0° F.; at 25,000 ft. it is 35° below 0° F.; these low temperatures prevail all the year round. The ratio of decrease in temperature, which is 3° F. for each 1,000 ft. at the lower strata, is twice as great at the highest levels, but varies from summer to winter to the extent of about 20° F. (See also page 1069.)

The Mean Daily Temperature is that obtained by adding together twenty-four hourly observations and dividing by 24, the temperature being taken of the air, and not of the ground. The temperature of a month is the mean of those of thirty days, and the temperature of the year is the mean of those of twelve months. The mean temperature of London is 8·28° C., or 46·9° F.; the mean in summer is 62° F., and in winter 40° F.

Temperature of Seas and Lakes.

The temperature of the sea under the Torrid Zone is always about 26° to 27° C. at the surface; it diminishes as the depth increases, and in temperate as well as in tropical regions the temperature of the sea at great depths is between 2·5° and 3·5° C. The average winter temperature of the sea round the coast of England is higher than that of the land. The mean annual temperature of the surface of the sea round England is 49° F.; the mean surface temperature of the Indian Ocean is 89° F., and of the Red Sea 94° F. The temperature of lakes at their surface may be 20° to 25° C. in summer; the temperature of the bottom, 4° C., which is that of the maximum density of water. The Great Geyser, in Iceland, at a depth of 66 feet, has a temperature of 124° C.

Temperature of the Earth.

The average increase in temperature is 1° C. for every 27·4 metres of descent, which is at the rate of 100° F. per mile. Cordier says 1° C. for every 25 metres, or 1° F. in 45 feet.

Another statement is that the increase in temperature of the earth's strata shows a mean average for the entire earth surface of 1° F. for every 56 ft. of depth.

Specific Heat.

M = weight of body. T = temperature of body. C = specific heat of body.
m = weight of cold water. t = temperature of cold water.
θ = temperature of water after body has been plunged into it.

$$C = \frac{m(\theta - t)}{M(T - \theta)}$$

Specific Heat of Substances at Ordinary Temperatures.

Element.	Specific Heat of Equal Weights.	Element.	Specific Heat of Equal Weights.	Element.	Specific Heat of Equal Weights.
Diamond	·1468	Cast-iron (white)	·1298	Palladium	·0523
Graphite	·2018	„ (grey)	·1216	Rhodium	·0580
Wood charcoal	·2415	Cast-steel (hard)	·1185	Osmium	·0306
Coke	·2000	„ (soft)	·1166	Iridium	·0326
Average coal	·2412	Mild steel	·1158	Iodine	·0541
Clinkers	·1674	Wrought-iron	·1146	Bromine (solid)	·0843
Petroleum	·4340	Nickel	·1086	„ (liquid)	·1060
Silicon (fused)	·1750	Cobalt	·1070	Potassium	·1696
„ (crystallised)	·1767	Manganese	·1217	Sodium	·2934
Boron (crystallised)	·2500	Tin	·0562	Lithium	·9408
Firebrick	·2000	Tungsten	·0334	Phosphorus	·1887
Sulphur (native)	·1776	Molybdenum	·0722	Arsenic	·0814
„ (purified)	·2026	Copper	·0965	Antimony	·0508
Selenium	·0837	Gunmetal	·0952	Bismuth	·0308
Tellurium	·0474	Brass	·0940	Thallium	·0326
Magnesium	·2499	Lead	·0314	Silver	·0570
Zinc	·0956	Mercury (solid)	·0319	Gold	·0324
Cadmium	·0567	„ (liquid)	·0333	Water	1·0000
Aluminium	·2143	Platinum	·0324	Ice	·5040

Specific Heat of Gases at High Temperatures.

$CO_2 = 0{\cdot}1477 + 0{\cdot}000176t.$ | $N = 0{\cdot}170 + 0{\cdot}0000872t.$
$H_2O = 0{\cdot}3211 + 0{\cdot}000219t.$ | $O = 0{\cdot}1488 + 0{\cdot}0000763t.$

Where t = Centigrade temperature.

(*Mallard and Le Chatelier.*)

SPECIFIC HEAT OF GASES PER LB. AT HIGH TEMPERATURES.

(*Based on Mallard and Le Chatelier's results.*)

Temperature.		CO_2.	CO & N.	O	H.
F.°	C.°				
200	932	·198	·241	·211	3·37
400	204	·210	·245	·214	3·41
600	316	·222	·247	·216	3·45
800	427	·235	·250	·218	3·49
1,000	538	·247	·252	·220	3·53
1,200	649	·260	·255	·223	3·57
1,400	760	·272	·257	·225	3·60
1,600	871	·285	·260	·227	3·64
1,800	981	·297	·261	·230	3·67
2,000	1,093	·310	·265	·231	3·70

(*G. H. Gill.*)

Latent Heat.

Equal weights of water, one quantity at 0° C., and the other at 100° C., when mixed have a temperature of 50° C.; but equal weights of ice and water, the former at 0° C., and the latter at 100° C., when mixed have a temperature of 10·6° C.

The conversion of a cube of ice 3-feet side into water at 0° would absorb the whole heat emitted by the combustion of a bushel of coal.

Absolute Zero of Temperature.

459° below Fahr. zero, or 273° below Cent. zero.

HEAT GENERATED BY THE COMBUSTION OF ONE POUND OF CARBON.

State of Carbon.	Product of Combustion.	British Thermal Units per Pound.
Diamond	Carbon monoxide	3,915
,,	,, dioxide	14,146
Graphite	,, ,,	14,222
Amorphous	,, monoxide	4,415
,,	,, dioxide	14,647
Gaseous	,, monoxide	10,232
,,	,, dioxide	20,463
2⅓ lb. Carbon monoxide	,, ,,	10,231

HEAT ABSORBED IN THE METAMORPHIC CONVERSIONS OF CARBON.

State of Carbon.	Product of Metamorphism.	British Thermal Units per Pound.
Diamond	Gas	6,316
Graphite	,,	6,241
Amorphous	,,	5,817
Diamond	Amorphous	499
,,	Graphite	74·7
Graphite	Amorphous	424

Comparison of Hydrometer Scales.

(Compiled by Kestner Evaporator and Engineering Co. Ltd.)

Degrees Twaddell.	Sp. Gr.	Degrees Baume.	Approximate Degrees Brix at 15° C.	Degrees Twaddell.	Sp. Gr.	Degrees Baume.	Approximate Degrees Brix at 15° C.
1	1·005	0·7	1·3	52	1·260	29·7	55·2
2	1·010	1·4	2·5	54	1·270	30·6	56·6
3	1·015	2·1	3·7	56	1·280	31·5	58·5
4	1·020	2·7	4·9	58	1·290	32·4	60·2
5	1·025	3·4	5·9	60	1·300	33·3	62·0
6	1·030	4·1	7·2	62	1·310	34·2	63·8
7	1·035	4·7	8·3	64	1·320	35·0	65·4
8	1·040	5·4	9·5	66	1·330	35·8	66·8
9	1·045	6·0	10·6	68	1·340	36·6	68·6
10	1·050	6·7	12·0	70	1·350	37·4	70·0
11	1·055	7·4	13·4	72	1·360	38·2	71·8
12	1·060	8·0	14·5	74	1·370	39·0	73·5
13	1·065	8·7	15·8	76	1·380	39·8	75·0
14	1·070	9·4	17·0	78	1·390	40·5	76·4
15	1·075	10·0	18·2	80	1·400	41·2	77·8
16	1·080	10·6	19·3	82	1·410	42·0	79·5
17	1·085	11·2	20·4	84	1·420	42·7	81·0
18	1·090	11·9	21·6	86	1·430	43·4	82·5
19	1·095	12·4	22·5	88	1·440	44·1	83·8
20	1·100	13·0	23·6	90	1·450	44·8	85·4
21	1·105	13·6	24·6	92	1·460	45·4	86·6
22	1·110	14·2	25·6	94	1·470	46·1	88·0
23	1·115	14·9	26·8	96	1·480	46·8	89·5
24	1·120	15·4	27·6	98	1·490	47·4	90·8
25	1·125	16·0	28·6	100	1·500	48·1	92·2
26	1·130	16·5	29·5	102	1·510	48·7	93·8
27	1·135	17·1	30·5	104	1·520	49·4	95·2
28	1·140	17·7	31·5	106	1·530	50·0	96·8
29	1·145	18·3	32·5	108	1·540	50·6	—
30	1·150	18·8	33·4	110	1·550	51·2	—
31	1·155	19·3	34·4	112	1·560	51·8	—
32	1·160	19·8	35·4	114	1·570	52·4	—
33	1·165	20·3	36·2	116	1·580	53·0	—
34	1·170	20·9	37·4	118	1·590	53·6	—
35	1·175	21·4	38·4	120	1·600	54·1	—
36	1·180	22·0	39·4	122	1·610	54·7	—
37	1·185	22·5	40·4	124	1·620	55·2	—
38	1·190	23·0	41·4	126	1·630	55·1	—
39	1·195	23·5	42·2	128	1·640	56·3	—
40	1·200	24·0	43·2	130	1·650	56·9	—
41	1·205	24·5	44·2	132	1·660	57·4	—
42	1·210	25·0	45·2	134	1·670	57·9	—
43	1·215	25·5	46·2	136	1·680	58·4	—
44	1·220	26·0	47·0	138	1·690	58·9	—
45	1·225	26·4	47·8	140	1·700	59·5	—
46	1·230	26·9	48·8	142	1·710	60·0	—
47	1·235	27·4	49·8	144	1·720	60·4	—
48	1·240	27·9	50·6	146	1·730	60·9	—
49	1·245	28·4	52·0	148	1·740	61·4	—
50	1·250	28·8	53·4	150	1·750	61·8	—

PROPERTIES OF GASES, &c

(W. H. Booth.)

In the tables pages 196 to 199 are given many figures relative to the gases chiefly, which are of interest in questions of heat, combustion, and the gas engine. The figures are principally based on Berthelot's thermal determinations of the calorific capacity of the gramme molecule, the figure for which, if divided by the molecular weight, gives the heat generated per gramme of the substance. An attempt is made to give the correct values of the specific heat at high temperatures, with a view to the bearing of this property on the theory of the gas engine, and the possibly erroneous ideas as to the supposed effects of dissociation, which have been much overrated. The thermo-physical properties of carbon are more fully tabulated than has hitherto been attempted, with a view to explain the variations due to allotropism.

Heat and Combustion.

There are in practice only two elementary fuels, carbon and hydrogen. They generate heat by union with oxygen, and their compounds are also available as fuels.

Heat is measured in units. The British thermal unit B.Th.U. is the amount of heat necessary to raise 1 pound of water 1° F., and its mechanical equivalent is J = 778 pounds raised 1 foot in the latitude of Manchester; this last an unnecessary refinement in engineering.

The metrical or French calorie is the amount of heat necessary to raise 1 gramme of water 1° C. This is the 'petit calorie.' The great calorie is the heat necessary to raise 1 kilogram of water through 1° C. The mechanical equivalent is 427 kilograms raised 1 metre at the latitude of Paris; this latter refinement being unnecessary in engineering. The following table gives the ratios of English and French units:

1 Caloric = ·001 great calorie.	1 B.Th.U. = 1055 joules = 778 foot-pounds (until recently the accepted value was 772)
1 Great calorie = 3·968 B.Th.U.	
1 B.Th.U. = 0·252 great calorie.	1 Great calorie = 3087·3 foot-pounds.
1 Great calorie = 427 kilog. metres.	1 B.Th.U. = 107·6 kilog. metres.

Chemists use somewhat different terms and state calorific measurements in terms of the molecule. The gramme molecule of hydrogen is the unit employed. One gramme molecule of hydrogen, H_2, taken at 0° C. and 760 mm. of pressure of a mercury column, weighs 2 grammes and has a volume of 22·32 litres. The molecular weight of any other simple or compound gas is the weight which occupies the volume occupied by 2 grammes of hydrogen, that is 22·32 litres. The molecular specific heat of a gas is the heat of this volume in 'petit calories.' Then the molecular heat divided by the molecular weight will give the specific heat per unit weight or gramme; and the molecular heat divided by 22·32 will give the specific heat per unit of volume.

The specific heat of a gas is usually stated at constant pressure and at constant volume. In a perfect gas the ratio of these two is about 1·4 at ordinary temperatures. This is an erroneous way of putting it. The difference is really due to work done on the atmosphere in expanding to constant pressure. This work is invariable at 1·94 calories. The true ratio of specific heat at constant pressure or Cp to that at constant volume Cv, is thus properly stated, $Cp = Cv + 1·94$, or usually $= Cv + 2$. Thus, if 22·32 litres of gas are heated 1° C. from 0° C. they will perform work against a column of mercury 760 mm. high to the extent of 1·94 calories at all temperatures. A gas expands when heated 1° C. to an additional bulk $= \frac{1}{273}$ of the bulk occupied at 0° C. Hence the invariable quantity 1·94.

The specific heat of a gas increases with temperature. The number of calories generated by the combustion of a unit weight of a substance if divided by the specific heat of the products of combustion and by the total weight of such products, will give the nominal temperature. The 'theoretical' temperature of combustion is the nominal temperature found by using the specific heat at ordinary temperatures. These nominal temperatures are never attained. The ordinary specific heat of carbon dioxide is quadrupled at 4000° C., and the temperature that might theoretically reach 18000° C., in oxygen in a certain case would not go beyond 4500° C. or thereabouts.

The calorific capacity of fuel may be approximated by calculating the capacity of its constituents of carbon and hydrogen. This is absolutely accurate, subject to allowance for the heat of formation. Thus in the formation of some hydrocarbons, heat is evolved. When these hydrocarbons are burned, the heat which was produced in their original formation cannot be again produced, and the combustion is productive of so much less heat. Others, such, for example, as acetylene, absorb heat when formed, and this substance when burned gives out more heat than corresponds with its carbon and hydrogen. This is one reason for its brilliance, and accounts for its explosive tendency.

HEAT OF COMBUSTION OF SUBSTANCES.

	Calories.	B.Th.U.	Authority.
Cellulose	4,200	7,560	Berthelot
Soft resinous wood	5,050	9,090	Gottlieb
Hard wood	4,750	8,550	„
Peat	5,940	10,692	Bainbridge
Cane sugar	3,961	7,130	Berthelot
Asphalt	9,532	17,159	Slossom & Colburn
Pitch	8,400	15,120	Anon.
Naphthalin	9,690	16,842	Berthelot
Paraffin	11,000	19,800	Mahler
Tallow	9,500	17,100	Stohmann
Sulphur	2,500	4,500	Berthelot
Petroleum	9,600 to 11,000	17,280 to 19,800	Various
Schist oil	9,000 to 10,000	16,200 to 18,000	„
Heavy coal gas oil	8,900	16,020	Ste-Claire Deville
Cotton oil	9,500	17,100	Anon.
Rape oil	9,489	17,080	Stohmann
Olive oil	9,473	17,051	„
Sperm oil	10,000	18,000	Gibson

Combustion of Carbon.

Carbon exists only as a solid and is found in three forms or allotropic modifications : (*a*) the diamond ; (*b*) graphite ; (*c*) amorphous, as charcoal. The heat generated by the perfect combustion of each of these forms is peculiar to that form. Carbon exists in liquid form only in combination with other substances and does not vaporise except at 3600° C. The total heat of combustion of carbon is 11·646 calories per gramme from the state (*a*). Of this amount ·2783 calories disappear in converting the diamond to the amorphous state (*c*) ; 3·231 calories are absorbed in vaporising the carbon ; and 2·4533 calories are set free by its conversion into monoxide CO. 5·684 calories are then produced by the second oxidation of this CO into dioxide $=CO_2$. In practice the only available heat is that which is set free after vaporising the carbon, *i.e.* 8·137 calories. The following table gives these characteristics in brief, of converting 1 gramme of carbon.

	Calories.
1. Converting diamond to graphite	= ·041
2. „ graphite to amorphous	= ·237
3. „ diamond to amorphous (1)+(2)	= ·278
4. „ amorphous to monoxide CO	= 2·453
5. „ monoxide to dioxide	= 5·684
6. Vaporising amorphous carbon (5) − (4)	= 3·231
7. Total energy generated converting carbon vapour to dioxide (1)+(2)+(4)+(5)+(6)	= 11·646
8. Total available heat in practice (7) − (3) − (6)	= 8·137

The difference between (7) and (8) represents expenditure in unlocking the crystal form of the diamond (3) and in converting the carbon to gas (5). The latent heat of vaporisation of carbon is thus 3·231 or about half that of steam.

Hydrogen is known in three states, liquid, solid, and gaseous. The liquid and solid states are those of low temperature. All practical determinations start from the gaseous state. The following figures are found in the combustion of 1 gramme of hydrogen :

	Calories generated.
1. Converting hydrogen to water gas, H_2O,	29·15
2. „ „ „ liquid	34·50
3. „ „ „ solid	35·2

The ordinary available heat is that of (1) only; (2) being only partially secured when the products of combustion are cooled considerably below 100° C.

Stated per pound, carbon yields 14,500 British heat units, and hydrogen 52,000 to 62,100 according to the final temperature. The first oxidation of 1 lb. of carbon to monoxide yields barely 4,500 heat units : the further oxidation of the resulting carbonic oxide yielding fully 10,000 units.

The difference of the two oxidations is due to the rendering latent of about half the heat of the first oxidation in gasifying the solid carbon. The following equivalent units are useful:

1 Calorie per square metre	= 0·369 B.Th.U. per square foot.
1 B.Th.U. per square foot	= 2·713 calorie per square metre.
1 Calorie per kilogram	= 1·800 B.Th.U. per pound.
1 B.Th.U. per pound	= 0·556 calorie per kilogramme.

These calories are the great calories (p. 193).

For thermo-chemical tables of gases see pp. 196 199.

The temperature produced by combustion is largely dependent upon the weight of the resultant product. Thus 1 lb. of hydrogen when burned to water vapour will produce 52,380 heat units, which have to be divided among the 9 lbs. of water. The nominal temperature is 14,375° F. which, however, is based on the supposititious constancy of the specific heat; 1 lb. of carbon, however, which only generates about 14,500 heat units, produces only $3\frac{2}{3}$ lbs. of gas, and the nominal resulting temperature is 18,457. These are for combustion in oxygen. With air the additional weight of nitrogen still further reduces the nominal temperatures to about 5,000° in each case.

The percentage of each constituent of a mixed product must be multiplied by the specific heat in order to find the true valency of that product in the calculation of temperature. To find the mean specific heat of a mixture of gases, the weight of each gas is to be multiplied by its specific heat. The products are to be added together and divided by the sum of the weights of all the gases. The result is the mean specific heat. Then the temperature of combustion is found by dividing the total heat of combustion of the combustible gases by the weight of products and by the mean specific heat.

Similarly the calorific value of a mixed gas is found by multiplying the weight of each gas by its calorific value per pound, adding the products together and dividing by the total weight. The result is the thermal value per pound of the mixed gas.

Boiling-points of Saturated Solutions of Various Salts.

Salt.	C.°	F.°	Salt.	C.°	F.°
Sodic nitrate	120·7	249·5	Hydrosodic phosphate	106·6	224
Potassic nitrate	115·7	240	Sal-ammoniac	114·2	237·6
,, chlorate	104	219·2	Calcic chloride	179·4	355
Sodic chloride	108·2	227	Potassic acetate	169	336
Potassic chloride	108	226·4	,, carbonate	134·7	275
Sodic carbonate	104·6	220	Calcic nitrate	151	304
,, acetate	124·5	256	Strontic chloride	118	244
Baric chloride	104·2	220	Potassic tartrate	114·4	238

Boiling-points of Water at Various Pressures.

Barometer in Inches.

Boiling-point. F.°	Barometer. Inches.	Boiling-point. F.°	Barometer. Inches.	Boiling-point. F.°	Barometer. Inches.	Boiling-point. F.°	Barometer. Inches.
185	17·047	193	20·254	201	23·937	209	28·183
186	17·421	194	20·687	202	24·441	210	28·744
187	17·803	195	21·124	203	25·014	211	29·331
188	18·196	196	21·576	204	25·468	212	29·922
189	18·593	197	22·030	205	25·992	213	30·516
190	18·992	198	22·498	206	26·529	214	31·120
191	19·407	199	22·965	207	27·068	215	31·730
192	19·822	200	23·454	208	27·614	216	32·350

Barometer in Millimètres.

Boiling-point. C.°	Barometer. Millimètres.	Boiling-point. C.°	Barometer. Millimètres.	Boiling-point. C.°	Barometer. Millimètres.	Boiling-point. C.°	Barometer. Millimètres.
85·5	441·62	89·5	515·53	93·5	599·49	97·5	694·56
86	450·34	90	525·45	94	610·74	98	707·26
86·5	459·21	90·5	535·53	94·5	622·17	98·5	720·15
87	468·22	91	545·78	95	633·78	99	733·21
87·5	477·38	91·5	556·19	95·5	645·57	99·5	746·50
88	486·69	92	566·76	96	657·54	100	760·00
88·5	496·15	92·5	577·50	96·5	669·69	100·5	773·71
89	505·76	93	588·41	97	682·03	101	787·63

Name.	Symbol.	Density. H=1	Molecular Weight.	Lbs. per cubic ft.	Cubic ft. per lb.	Grams per litre.	Litres per gram.	Required to burn one unit. Weight. Air.	Weight. Ox.	Volume Air.	Volume O
Air	O_{23} N_{76} X_1	14·44	—	·08073	12·385	1·29318	·773	—	—	—	—
Ammonia	NH_3	8·5	17	·05324	18·783	·761	1·313	6·13	1·41	3·58	·
Carbon C. Diamond	—	—	12	—	—	—	to CO / „ CO_2	5·797 / 11·594	1·334 / 2·667	—	—
Carbon C. Graphite	—	—	„	—	—	—	to CO_2	do.	do.	—	—
Carbon C. Amorphous	—	—	„	—	—	—	to CO / „ CO_2	„	„	—	—
Carbon C. Vapour	—	12	„	·06696	14·930	1·0727	·932	„	„	9·54	2·0
Carbon dioxide	CO_2	22	44	·12344	8·147	1·967	·508	—	—	—	—
Carbonic oxide	CO	14	28	·07817	12·80	1·2515	·800	2·484	·571	2·381	·
Carbon bisulphide	CS_2	38	76	·21242	4·706	3·4058	·2947	5·478	1·26	14·30	3·0
Hydrogen	H_2	1	2	·00559	178·83	·08961	11·16	34·785	8·000	2·39	·
Oxygen	O_2	16	32	·08926	11·203	1·4298	·699	—	—	—	—
Nitrogen	N_2	14	28	·07845	12·763	1·25616	·796	—	—	—	—
Steam	H_2O	9	18	·05022	19·912	·8047	1·242	—	—	—	—
Steam at 2,000°	H_2O	—	„	—	—	—	—	—	—	—	—
Steam at 4,000°	H_2O	—	„	—	—	—	—	—	—	—	—
Acetylene	C_2H_2	13	26	·07267	13·456	1·190	·840	13·378	3·077	11·93	2·5
Benzene	C_6H_6	39	78	·208	4·808	3·333	·303	13·378	3·077	35·80	7·5
Ethylene	C_2H_4	14	28	·07814	12·797	1·2519	·799	14·903	3·428	14·30	3·0
Ethane	C_2H_6	15	30	·08565	11·950	1·3415	·746	16·484	3·733	16·70	3·5
Methane	CH_4	8	16	·04466	22·391	·7155	1·397	17·392	4·000	9·54	2·0
Ethylene chloride	$C_2H_4Cl_2$	49·5	99	·2767	3·631	4·4357	·22626	3·855	·808	11·93	2·5
Ethyl	C_2H_6O	23	46	·12857	7·775	2·061	·287	9·074	2·037	14·30	3·0
Methyl	CH_4O	16	32	·08926	11·203	1·4298	·699	6·521	1·500	7·15	1·5
Cyanogen	C_2N_2	26	52	·1453	6·88	2·338	·427	5·348	1·23	9·54	2·0
Glycerine	$C_3H_8O_3$	—	92	—	—	—	—	18·148	4·174	16·70	3·5
Blast Furnace Gas. $[CO]_{27}$ N_{65} $(CO_2)_6$ H_2		14±	—	·079	12·65	1·2515	·800	1·00 / ·721	·22 / ·166	·82	·1
Producer Gas, [Sundry]$_{1·5}$	$[CO]_{25}$ N_{69} $[CO_2]2\frac{1}{2}$ $[CH_4]_2$	14±	—	·079	12·65	1·2515	·800	·99 / ·721	·21 / ·166	—	—
Water Gas, $[CO]_{76}$ $[CH_4]_2$ [Sundry]$_{7·5}$ $(CO_2)_{10}$ $N2\frac{1}{2}$		8±	—	·045	22·5	·726	1·40	3·878	·788	—	—
Coal Gas, &c., 16 H_2 $[CH_4]_{57}$ $[CO]_{15}$ N_4		4·7	—	·032	31·6	·516	1·975	13·89	2·81	6·16	1·2
Natural Gas $[CH_4]_{90}$ N_6 [Sundry]		8	—	·045	22·5	·726	1·40	15·00	3·06	—	—

Nominal temp. of combustion.				Heat generated by combustion of one					Heat of formation at 15° per Molecule
Air.		Oxygen.		Lb.	Cubic foot.	Gram.	Litre.	Molecule.	
F.°	C.°	F.°	C.°	B.Th.U.	B.Th.U.	Cal.	Cal.	Cal.	Cal.
—	—	—	—	—	—	—	—	—	—
3762	2090	8278	4599	9666	514·6	5·371	4·087	91·3	{12·2 gas / 16.6 liq.}
{2402 / 4786}	{1317 / 2718}	6880	3804	3915	—	2·175	—	26·1	·50 [1]
		17780	9879	14146	—	7·859	—	94·31	3·34 [2]
4812	2659	17875	9931	14222	—	7·901	—	94·81	{2·84 [2] / — ·50 [3]}
{2673 / 4988}	{1485 / 2753}	7725	4292	4415	—	2·453	—	29·44	— 2·84 [1]
		18440	10226	14647	—	8·137	—	97·65	— 3·34 [3]
6955	3846	25752	14290	20461	1410	11·367	12·193	136·41	{—38·76 [2] / —42·1 [3]}
—	—	—	—	—	—	—	—	—	68·20 [4]
									94·31 [3]
									97·65 [2]
3494	1923	12892	7144	4383	342	2·436	3·047	68·2	{26·1 [3] / 29·4 [2]}
6590	3661	24271	13484	9344	1985	5·197	17·66	394·5	{—25·4 gas / —19 liq.}
—	(Water Vapour)			52290	293	29·15	2·612	{58·3 gas / 69 liq. / 70·4 sol.}	—
4813	2674	12108	6727	62100	347	34·50	3·091		
—	—	—	—	Water Liquid				—	—
—	—	—	—	—	—	—	—	—	—
—	—	—	—	—	—	—	—	{Solid=70·4 / Liq. =69·0 / Gas =58·3} per H_2	
—	—	—	—	—	—	—	—	—	50·6
—	—	—	—	—	—	—	—	—	37·1
6120	3400	20340	11300	21856	1624	12·142	14·46	315·7	—58·1
5022	2790	16830	9350	{18094 / 17930}	3764	{10·052 / 9·960}	33·496	{784·1 gas / 776·9 liq.}	{— 1·8 sol. / — 4·1 liq. / —11·3 gas}
5400	3000	16886	9381	21927	1744	12·182	15·250	341·1	—14·6
4354	2419	14848	8249	22338	1912	12·410	16·641	372·3	23·3
4036	2245	14348	7971	24017	1073	13·343	9·547	213·5	18·9
5144	2858	13179	7321	5490	1511·8	3·050	13·52	302·	{34·4 gas / 41 liq.}
4630	2573	12583	6690	12744	1639·1	7·080	14·54	325·7	{59·8 gas / 69·9 liq.}
4186	2325	10216	5675	9596	856·5	5·331	7·627	170·6	{53·3 gas / 61·7 liq.}
6099	3388	18222	10125	9086	1320·6	5·048	12·02	262·5	{—73·9 gas / —68·5 liq.}
4000	2222	8078	4488	7770	—	4·317	—	397·2	{161·7 liq. / 165·6 sol.}
2160	1200	4500	2500	{1223 to 1237}	{96·7 97·8}	·700	·900	—	—
{3440 / 2160}	{1910 / 1200}	4500	2500	{1265 to 2530}	{100 to 200}	{·773 to 1·370}	{·9674 to 1·713}	—	—
4850	2700	—	—	{4230 to 5458}	{330 to 700}	{2·35 to 3·03}	{3·00 to 6·33}	—	—
4500	2500	—	—	21400	685	11·9	6·099	—	—
4200	2333	—	—	24444	1100	13·58	10·0	—	—

[1] From Graphite. [2] From Amorphous Carbon [3] From Diamond. [4] From Carbonic Oxide.

Name.	Critical T.° and Pressure (Atmospheres).				Temp.		Density of liquid.
	Lower limit.		Upper limit.		Boil.	Fusion.	
	T.°C. Absol.	Atmos.	T.°C.	Atmos.	C.°	C.°	Water =
Air	133	39	−192·2	—	−192·2	—	·933
Ammonia	403	115	—	—	− 38·5	− 75	·636
Carbon C. Diamond	—	—	—	—	3600	—	—
Carbon C. Graphite	—	—	—	—	,,	—	—
Carbon C. Amorphous	—	—	—	—	,,	—	—
Carbon C. Vapour	—	—	—	—	,,	—	—
Carbon dioxide	306	77	—	—	− 78·2	−115	·83
Carbonic oxide	137·5	35·5	—	—	− 190	−207	—
Carbon bisulphide	546	77·9	277·55	95·86	46·2	−116	1·298
Hydrogen	39	20	—	—	− 243	—	·071
Oxygen	154·2	50·8	—	—	−181·4	−211+	1·124
Nitrogen	127	35	—	—	−194·4	−203	·855
Steam	—	—	370	195·5	100	0	1·00
Steam at 2,000°	—	—	—	—	—	—	—
Steam at 4,000°	—	—	—	—	—	—	—
Acetylene	310	68	—	—	− 85	− 81	·451
Benzene	569·7	60·5	—	—	80·8	4·5	·899
Ethylene	283	51	—	—	−103	−169	—
Ethane	307	50·2	—	—	− 93	−151+	—
Methane	200	56·8	—	—	−164	−185·5	·415
Ethylene chloride	—	—	283	—	84·9	—	1·28
Ethyl	235·39	66·78	—	—	78·3	− 90+	·809
Methyl	202·76	72·85	233	69·7	66·8	—	·814
Cyanogen	7·2	3·6	124	61·7	− 20·7	− 40	·87
Glycerine	—	—	—	—	290·4	17	1·267
Blast Furnace Gas	—	—	—	—	—	—	—
Producer Gas &c.	—	—	—	—	—	—	—

[The + sign indicates that the actual temperature is lower than that given.]

Water Gas, &c.	—	—	—	—	—	—	—
Coal Gas, &c.	—	—	—	—	—	—	—
Natural Gas	—	—	—	—	—	—	—

Specific heat. Water =1 Liquid.	Constant Press.	Constant Vol.	Molecular. Constant Press.	Molecular. Constant Vol.	Elementary sp. heat at high temp.	Temp. of ignition.	Heat of solution.	α ✡
—	·2375	·1686	—	—	—	— —	—	·0010
Sol. ·1468 ·285	·508	·391	9·64 gas 15·1 liq.	7·6	8·51+·0053T	— —	4·4	·0071
	—	—	6·85 at	200°	11·3 at 1000° 14·2 „ 2000°	— —	—	—
·2018	—	—	7·12 at	200°	18·8 „ 3600°	— —	—	—
·2415	—	—	4·6 at	100°	—	— —	—	—
—	·285	—	6·85	—	8·42+·00144 T at 1000° to 3600°	— —	—	—
—	·216	·171	8·4 + ·0106 T	6·4+ ·0106T	19·1+·0030 (T− 2000°)=25·1 at 4000°	— —	5·6	·0084
—	·245	·173	6·8	4·8	4·8+·0032(T−1600°)	— —	—	·0010
·20884	·157	·130	21·7 gas 18·2 liq.	—	10+·0746 T 80° to 230°	— —	—	—
—	3·410	2·4146	6·82	4·8	4·8+·0032 (T− 1600°)=14·1 at 4500°	— —	—	·0010
—	·217	·1548	6·95	4·95	4·95+·00324(T−1600°)	— —	—	·0010
—	·244	·173	6·83	4·8	4·8+·0032(T−1600°)	— —	—	·0010
1·0 liq. ·504 solid	·479	·370	8·65	6·65	16·2+·038(T - 2000°)	— —	—	—
—	—	·9	—	16·2	—	— —	—	—
—	—	1·32	—	23·8	—	— —	—	—
—	·373	—	9·7	—	—	580 —	5·3	—
·43602	·3754	·350	34 liq. 29·2 gas (116°to218°)	—	17·45+·0798T	— —	—	·0510
—	·404	·332	9·42 at 0° 14·0 at 200°	—	9·42+·0231T	— —	—	·0137
—	—	—	—	—	—	616 —	—	—
—	·593	·468	9·5 100° to 200°	—	—	667 —	—	—
—	·23	liq.=28·9+·0044T gas=22·7 at 111° to 211°		—	—	— —	—	—
·60 liq. ·50 gas	·451	·320	51·2 liq. 20·8° (110° to 220°		—	— —	2·5	—
·66 liq. ·46 gas	—	—	21·4 liq. 14·7 gas (101°to225°		—	— —	2·0	—
—	—	—	—	—	—	— —	6·8 gas 1·4 liq.	—
—	—	—	—	—	—	— —	5·4	—

[NOTE.—Gases expand by heat to the extent of $\frac{1}{273}$ of their bulk at 0° C. for each degree Centigrade, or $\frac{1}{491{\cdot}4}$ of their bulk at 32° F. for each degree Fahr.

✡ The specific heat of gases varies with the temperature, being more for higher temperatures. At the absolute zero the values of the molecular heat of all gases seem to converge at 6·5 for constant pressure values. Lechatelier therefore gives a formula for specific heat $Cp = 6{\cdot}5 + \alpha T$, where T is the absolute temperature Centigrade and α is a coefficient greater according to the complexity of the molecule. For values of α see table. This has an important bearing on the theory of the gas engine.]

[T = Temperature Centigrade.]

—	—	—	—	—	—	— —	—	—

Dilatation or Expansion of Substances per Degree of Fahrenheit Scale.

Temperatures.	Solids.	Linear. (*a*.)	Surface. (*b*.)	Volume. (*c*.)
32° to 212°	Glass	0·00000478	0·00000956	0·00001434
212 „ 392		0·00000546	0·00001093	0·00001639
392 „ 572		0·00000660	0·00001320	0·00001980
32 „ 212	Wrought iron	0·00000656	0·00001312	0·00001968
212 „ 572		0·00000895	0·00001790	0·00002686
32 „ 212	Soft, good iron	0·00000680	0·00001360	0·00002040
32 „ 212	Cast iron	0·00000618	0·00001236	0·00001854
32 „ 212	„ steel	0·00000600	0·00001200	0·00001800
32 „ 212	Hardened steel	0·00000689	0·00001378	0·00002067
32 „ 212	Copper	0·00000955	0·00001910	0·00002865
212 „ 572		0·00001092	0·00002184	0·00003276
32 „ 212	Lead	0·00001580	0·00003160	0·00004740
32 „ 212	Gold, pure	0·00000815	0·00001630	0·00002445
32 „ 212	„ hammered	0·00000830	0·00001660	0·00002490
32 „ 212	Silver, pure	0·00001060	0·00002120	0·00003180
32 „ 212	„ hammered	0·00001116	0·00002232	0·00003348
32 „ 212	Brass, common cast	0·00001043	0·00002086	0·00003129
32 „ 212	„ wire or sheet	0·00001075	0·00002150	0·00003225
32 „ 212	Platinum, pure	0·00000491	0·00000982	0·00001473
212 „ 572		0·00000520	0·00001040	0·00001560
32 „ 212	Palladium	0·00000555	0·00001110	0·00001665
32 „ 212	Roman cement	0·00000797	0·00001594	0·00002391
32 „ 212	Platinum, hammered	0·00000530	0·00001060	0·00001590
32 „ 212	Zinc, pure or cast	0·00001633	0·00003266	0·00004899
32 „ 212	„ hammered	0·00001722	0·00003444	0·00005166
32 „ 212	Tin, cast	0·00001207	0·00002414	0·00003621
32 „ 212	„ hammered	0·00001500	0·00003000	0·00004500
32 „ 212	Fire-brick	0·00000275	0·00000470	0·00000705
32 „ 212	Good red brick	0·00000305	0·00000610	0·00000915
32 „ 212	Marble	0·00000613	0·00001226	0·00001839
32 „ 212	Granite	0·00000438	0·00000876	0·00001314
32 „ 212	Bismuth	0·00000773	0·00001546	0·00002319
32 „ 212	Antimony	0·00000602	0·00001204	0·00001806
32 „ 212	Palladium	0·00000555	0·00001110	0·00001665
32 „ 212	Mercury	0·00003333	0·00006666	0·00010000
212 „ 392		0·00003416	0·00006833	0·00010250
392 „ 572		0·00003500	0·00007000	0·00010500
32 „ 212	Water	0·00008806	0·00017612	0·00026420
212 „ 392		0·00017066	0·00034133	0·00051020
392 „ 572		0·00018904	0·00037808	0·00056713
32 „ 212	Salt, dissolved	0·00009250	0·00018500	0·00027780
32 „ 212	Sulphuric acid	0·00011111	0·00022222	0·00033333
32 „ 212	Turpentine and ether	0·00012966	0·00025933	0·00038900
32 „ 212	Oil, common	0·00014814	0·00029629	0·00044444
32 „ 212	Alcohol and nitric acid	0·00015151	0·00033302	0·00055555
32 „ 212	All permanent gases	0·00069416	0·00138832	0·00208250

The superficial expansion is twice the linear, and the cubical expansion three times the linear. The coefficient of expansion of an alloy is equal to the mean coefficients of expansion of the volumes of the metals composing it.

If a bar is *increased* in length from l to L by an *increase* of temperature of $t°$, then

$$L = l(1 + at°).$$

If a bar is *decreased* in length from L to l by a *decrease* of temperature $t°$, then

$$l = \frac{L}{1 + at°}.$$

Change in Density of a Body by Change in Heat.

If *decrease* in density be from d to d' by an *increase* of temperature of $t°$, then

$$d' = \frac{d}{1 + ct°}.$$

If *increase* in density be from d' to d by a *decrease* of temperature of $t°$, then

$$d = d'(1 + \alpha t°).$$

1. Solids have a much smaller coefficient of expansion than liquids.
2. The coefficient of expansion of liquids increases with the temperature.
3. The coefficient of expansion of a liquid which only preserves its state under very great pressure is probably very great.

Expansion of Air by Heat.

Dry air expands or contracts uniformly ·002039 its volume per F.° difference under *constant pressure.*

If the *volume is constant* and the pressure varies, then the coefficient per F.° is ·002036.

Flash Temperatures.

Dr. H. Holm finds that the temperature at which substances in contact with atmospheric air at ordinary pressures will catch fire are, among others :—Lighting gas, 600°C ; benzine, 415°C. ; petroleum, 380°C. ; gas oil, 350°C. ; machine oil, 380°C. ; coal tar, 500°C. ; tar oil, 580°C. ; and benzol, 520°C. These temperatures are greatly influenced by the presence of other substances, which act as catalysers. This is especially the case with hydrogen, methane, and ethane, not ethylene or acetylene. Among solids it is the substances with the biggest molecules which most readily burst into flame. As a broad rule, the nearer a substance is to a gaseous condition, the higher the temperature to which it must be exposed before it will kindle : but this depends also on the chemical constitution.

See also page 185.

SOUND.

Velocity of Sound through Air.

v = velocity in feet per second.
t = temperature of the air, Fahr. scale.
D = distance in feet the sound travels in the time, T.

$$v = 1089{\cdot}42\sqrt{1 + 0{\cdot}00208\,(t - 32)}.$$

The velocity of sound in water is about four times that in air.

$$D = 1089{\cdot}42T\sqrt{1 + {\cdot}00208\,(t - 32)},$$

$$T = \frac{D}{v}.$$

Example.—A ship at sea was seen to fire a cannon, and 6·5 seconds afterwards the report was heard ; the temperature of the air was 60°. Required, the distance to the ship.

$$D = 1089{\cdot}42 \times 6{\cdot}5\sqrt{1 + {\cdot}00208\,(60° - 32)} = 7{,}300 \text{ feet, or } 1{\cdot}38 \text{ mile.}$$

The intensity of sound decreases as the square of the distance.

The intensity of sound increases as the square of the amplitude of the vibrations of the sonorous body.

The intensity of sound depends on the density of the air in the place at which it is produced.

The intensity of sound is greater in the direction of the wind than in the contrary direction.

Distances at which Sounds can be Heard.

Descriptions of Sounds.	Audible at a Distance of	
	Feet.	Miles.
A powerful human voice in the open air, no wind	460	0·087
Report of a musket	16,000	3·02
Drum	10,500	2
Music, strong brass band	15,840	3
Cannonading, very strong	575,000	90
In a barely observable breeze a strong human voice with the wind can be heard	15,840	3

Velocity of Sound through Solid Substances in Feet per Second.

Metals.				Woods.			
Lead	4,000	Copper	11,700	Pine	10,900	Elm	13,500
Gold	5,700	Steel wire	15,500	Oak	12,600	Fir	15,200
Silver	8,550	Iron	16,800	Ash	13,300	Aspen	16,700

Speaking-Tubes.

The greatest distance at which a sound signal, strongly and clearly given, can be heard through a straight line of tube, without branches, is about 1,500 ft., and cannot exceed 1,650 ft.

The best sizes for speaking-tubes are 1·2 in. for distances below, and 2·1 ins. for those above 650 ft., in single lines; and for branched systems up to 160 ft., ·80 in.; 160 to 500 ft., 1 in.; 500 to 1,000 ft., 1·3 in.; above 1,000 ft., 2·1 ins. Below 1·2 in. the frictional resistance to the sound waves is too great, and above 2·1 ins. it is beyond the power of the average human voice to set the enclosed air in vibration with the necessary intensity.

The greater the diameter of the tube the louder must the voice and the clearness of the articulation of the speaker be.

Vowel sounds are more readily heard than consonants, and longer rather than short accented ones.

Sheet zinc, on account of its low elasticity, is the best material for tubes, although in most cases galvanised iron may be preferred on account of the readiness with which it transmits knocker signals.

Screwed collars are preferable to flanges for joining the tubes.

The tubes must be as smooth as possible inside, and sudden changes of section are to be avoided.

Although the best method of isolating the tubes is to inclose them in earth or masonry, it will be more convenient in most cases to use earthenware pipes as casings suspended from the roof of the levels, which need only be solidly clamped at the stations.

Changes in the direction of the line and branch connections are best made by curves of not less than 16 ft. radius. When there are many branches, these should be only signalling points, the others being all receiving stations. If, however, a line is required for giving signals from both ends, it may be utilised for intermediate points by short receiving branches, about 16 ft. long, connected with the main line by proper curves. The number of these branches should not, however, be more than two for a 1·6-in. tube of 1,000 ft., or three for one of 2·1 ins. and 1,300 ft. In cases of greater complexity it is better to establish repeating stations at intervals of about 650 ft.

The best call signals for great distances are made by striking the side of the tube; but a bugle may be used, if it is pressed close to the mouthpiece. Whistles are inaudible except at short distances.

The oval or elliptical mouthpieces commonly used on short lines are quite useless. The most convenient arrangement is to make the end of the tube slightly conical, widened to about 1·5 in. in diameter, and cover it with a flat wooden ring, like a telephone, which can be used either for speaking or hearing with the minimum loss of sound.

OPTICS.

LIGHT.

Decomposition of Light in the Spectrum.

Colours.	Maximum Ray.	Combination of Colours.		
		Primary.	*Secondary.*	*Tertiary.*
Violet	Chemical			
Indigo		Blue		
Blue	Electrical	Yellow	Green	
Green				Dark Green
Yellow	Light	Blue	Purple	
Orange		Red		Brown
Red	Heat	Yellow	Orange	
		Red		

All the colours of the spectrum mixed together make white, which is proved by the decomposition of white light, which makes the seven colours.

Velocity of Light.

Velocity of light $= 3 \cdot 004 \times 10^{10}$ cms. per sec. Mean wave length $= 5 \cdot 3 \times 10^{-5}$ cms.

The velocity of light through the atmosphere is 186,330 miles per second (*Newcomb*). The velocity of light through transparent bodies is not known, but probably varies inversely as the square root of the specific gravity of the transparent substance.

Light passes from the sun to the earth ($1{\cdot}487 \times 10^{13}$ cms. = 92,390,000 miles [*Everett*]) in eight minutes, at which velocity light can pass around the earth in one-eighth of a second.

To find the Focal Length of a Convex Mirror.

Use as object an opaque screen, with a hole and pin-point, and painted white, or covered with white paper.

Set up on the bench, in line, say, with the left edge of the hole, the convex mirror and an auxiliary biconvex lens of short focal length (6 ins. or so), and adjust the lens so that the image of the hole and pin-point is formed side by side with the object. The centre of the mirror is now at the point at which the image would be formed by the lens alone ; this position may either be calculated or found (after noting the position of the mirror and then removing it) by means of a screen. Thus the radius is easily measured.

If the focal length of the mirror be greater than f, that of the lens, the simplest way of adjusting is to put the lens as close as possible to the mirror, put the object at principal focus of lens, and move the object back until the image is formed as above.

If, however, the focal length be less, we can be sure of finding the position by putting the mirror at a distance of 4 f from the object, and the lens at 2 f, and moving the lens back until the desired position is reached.

To find the Focal Length of a Concave Lens.

Use an object like the one mentioned above, an auxiliary convex lens (say, 6 ins. focal length) to produce a convergent beam, and an auxiliary plane mirror, placed beyond the concave lens.

Adjust until the image is formed side by side with the object, as before ; then the rays must be emerging parallel to one another from the concave lens, and hence the convergent beam from the convex lens will (when the concave lens and mirror are removed) form an image at the principal focus of the concave lens. A direct measure can thus be made of the focal length.

(*E. Budden.*)

Luminous Energy.

In a series of lectures on ' Flame,' at the Royal Institution, Sir James Dewar illustrated in a striking form a fact which has long occupied the attention of scientists in relation to the energy expended in the production of light. The following figures show how utterly imperfect are the various lighting devices now employed on a basis of scientific efficiency :—

Lighting Device.	Percentage of Light.	Non-Luminous Energy.
Candle	2	98
Oil	2	98
Coal Gas	2	98
Incandescent lamp	3	97
Arc lamp	10	90
Magnesium lamp	15	85
Cuban firefly	99	1

SECTION V

PART I

WEIGHTS AND SPECIFIC GRAVITIES—WEIGHT OF SHEET, BAR, AND BALL METALS—WEIGHT OF PIPES AND TUBES —WEIGHT OF WIRE—WEIGHT OF NAILS AND SCREWS— THICKNESSES OF PIPES — SPECIFICATION FOR CAST IRON PIPES (pp. 207-246)

PART II

TENSILE STRENGTH OF MATERIALS — STRENGTH OF WIRE, CHAINS, AND ROPES — LATERAL STRENGTH OF MATERIALS — ADMIRALTY TESTS OF STEEL AND IRON — LLOYD'S TESTS — BUREAU VERITAS TESTS — INDIAN STATE RAILWAY TESTS — STRENGTH OF TUBES, RINGS AND CHAINS (pp. 247-284)

SECTION V

PART I

WEIGHTS AND SPECIFIC GRAVITIES—WEIGHT OF SHEET, BAR, AND BALL METALS—WEIGHT OF PIPES AND TUBES—WEIGHT OF WIRE—WEIGHT OF NAILS AND SCREWS — THICKNESSES OF PIPES — SPECIFICATION FOR CAST IRON PIPES.

WEIGHTS AND SPECIFIC GRAVITIES.

ATOMIC WEIGHTS.

Name.	Symbol.	Atomic Weight. O = 16.	Atomic Weight. H = 1.	Name.	Symbol.	Atomic Weight. O = 16.	Atomic Weight. H = 1.
Aluminium	Al	27·1	26·78	Glucinum (*Beryllium*)	Gl	9·1	9·03
Antimony	Sb	120·2	119·24	Gold	Au	197·2	195·63
Argon	A	39·88	39·56	Helium	He	3·99	3·93
Arsenic	As	74·96	74·21	Holmium	Ho	163·5	162·2
Barium	Ba	137·37	136·27	Hydrogen	H	1·008	1·00
Bismuth	Bi	208·0	206·34	Indium	In	114·8	113·8
Boron	B	11·0	10·9	Iodine	I	126·92	125·91
Bromine	Br	79·92	79·28	Iridium	Ir	193·1	191·56
Cadmium	Cd	112·4	111·5	Iron	Fe	55·84	55·40
Cæsium	Cs	132·81	131·75	Krypton	Kr	82·92	82·26
Calcium	Ca	40·07	39·77	Lanthanum	La	139·0	137·9
Carbon	C	12·00	11·9	Lead	Pb	207·10	205·45
Cerium	Ce	140·25	139·0	Lithium	Li	6·94	6·88
Chlorine	Cl	35·46	35·17	Lutetium	Lu	174·0	172·5
Chromium	Cr	52·0	51·58	Magnesium	Mg	24·32	24·12
Cobalt	Co	58·97	58·4	Manganese	Mn	54·93	54·4
Columbium (*Niobium*)	Cb	93·5	92·75	Mercury	Hg	200·6	198·41
Copper	Cu	63·57	63·06	Molybdenum	Mo	96·0	95·23
Dysprosium	Dy	162·5	161·2	Neodymium	Nd	144·3	142·5
Erbium	Er	167·7	166·07	Neon	Ne	20·2	20·04
Europium	Eu	152·0	150·8	Nickel	Ni	58·68	58·21
Fluorine	F	19·0	18·8	Niton (radium emanation)	Nt	222·4	220·6
Gadolinium	Gd	157·3	156·05	Nitrogen	N	14·01	13·9
Gallium	Ga	69·9	69·34	Osmium	Os	190·9	189·38
Germanium	Ge	72·5	71·9				

ATOMIC WEIGHTS (*continued*).

Name.	Symbol.	Atomic Weight. O = 16.	Atomic Weight. H = 1.	Name.	Symbol.	Atomic Weight. O = 16.	Atomic Weight. H = 1.
Oxygen	O	16·00	15·87	Sulphur	S	32·07	31·82
Palladium	Pd	106·7	105·85	Tantalum	Ta	181·5	179·6
Phosphorus	P	31·04	30·79	Tellurium	Te	127·5	126·49
Platinum	Pt	195·2	193·65	Terbium	Tb	159·2	158·0
Potassium	K	39·10	38·79	Thallium	Tl	204·0	202·38
Praseodymium	Pr	140·6	139·48	Thorium	Th	232·4	230·57
Radium	Ra	226·4	224·1	Thulium	Tu	168·5	166·8
Rhodium	Rh	102·9	102·08	Tin	Sn	119·0	118·05
Rubidium	Rb	85·45	84·77	Titanium	Ti	48·1	47·7
Ruthenium	Ru	101·7	100·9	Tungsten	W	184·0	182·52
Samarium	Sa	150·4	149·2	Uranium	U	238·5	236·6
Scandium	Sc	44·1	43·75	Vanadium	V	51·0	50·65
Selenium	Se	79·2	78·6	Xenon	X	130·2	129·16
Silicon	Si	28·3	28·07	Ytterbium	Yb	172·0	170·73
Silver	Ag	107.88	107·02	Yttrium	Y	89·0	88·3
Sodium	Na	23.0	22·81	Zinc	Zn	65·37	64·85
Strontium	Sr	87·63	86·93	Zirconium	Zr	90·6	89·88

Specific Gravity.

The specific gravity of any substance in the C.G S. system is its weight in grammes per cubic centimetre.

The relative specific gravity of a body is its weight as compared with that of an equal bulk of some other body which is adopted as a standard of comparison. For other substances than air and gases generally, pure water is the usual standard; and since the weight of a given bulk of water varies somewhat with its temperature, and also with the state of the air, the former is assumed to be 62° F., and the latter at 30 ins. at sea-level. On the Continent of Europe water at its greatest density, or at a temperature of 4° C., = 39·2° F., is taken as the standard. But where extreme scientific accuracy is not aimed at all these considerations may be neglected, and any clear fresh water, at any ordinary temperature—say from 60° to 80°—may be used. From 4° C. water expands regularly as the temperature rises; so that 1,000 parts at 0° C. become at 0° = 1,000·00, at 4° = 999·88, at 10° = 1,000·14, at 20° = 1,001·67, at 30° = 1,004·21, at 40° = 1,007·61, at 50° = 1,011·93, at 60° = 1,016·86, at 70° = 1,022·43, at 80° = 1,028·73, at 90° = 1,035·58, at 100° = 1,043·03. Pure water weighs 62·288 lbs. avoir. per cubic foot (*International Bureau of Standards, Paris*, 1921). The following shows the principal weights, etc., of water.

WATER.

Detail.	Fresh.	Salt.
Greatest density at	39·2° F.	Freezing-point
1 cubic foot at 39·2° F. weighs	62·288 lbs.	64 lbs.
1 cubic inch „ „	·036047 lb.	·037037 lb.
1 cubic foot „ equals	6·2288 gallons	6·3 gallons
1 gallon at 62° F. weighs	10 lbs.	10·3 lbs.
1 ton equals	35·962 cub. ft.	35 cub. ft.
1 ton contains	224 gallons	217 gallons
Freezes at	32° F.	27° F.

See also Section XXIV., HYDRAULICS, p. 1125.

To find Specific Gravity.

Solids.

W = weight of a body in the air.
W = weight of the body (heavier than water) immersed in water.
S = specific gravity of the body.
Then

$$W - W : W = 1 : S. \quad S = \frac{W}{W - W}.$$

When the body is lighter than water, annex to it a heavier body that is able to sink the lighter one.

S = specific gravity of the heavier, annexed body.
s = specific gravity of the lighter body.
W = weight of the two bodies in air.
W = weight of the two bodies in water.
w = weight of the heavier body in air.
w = weight of the lighter body in air.

$$s = \frac{w}{W - W - \frac{w}{S}},$$

A simple way to obtain the specific gravity of a wood is to form it into a parallel rod, and place it vertically in water; then, when in equilibrium, the immersed end is to the whole rod as the specific gravity is to 1.

Liquids.

Measure the weight of a stoppered-glass bottle; then fill the same with distilled water and weigh it again; the difference between the two measurements gives the weight of the distilled water. Then completely empty out the water and refill the bottle with the liquid whose specific gravity is required, and again weigh; this weight less the weight of the bottle gives the weight of the liquid; this weight divided by the weight of the water gives the specific gravity of the liquid.

In practice it is convenient to employ a bottle (called a specific gravity bottle) that holds exactly 10 grammes of distilled water at 4° C., because, when such a bottle is filled with the liquid under trial the weight in centigrammes of the liquid taken at 0° C. represents the specific gravity at once, without calculation. For convenience a counterpoise of brass is adjusted to the weight of the bottle.

Gases.

Measure in the same way as liquids, taking Air as the standard. A large and very light, i.e. thin, glass vessel must be used for the purpose, otherwise the weight of the glass will swamp as it were, the weight of the enclosed gas, and accurate results cannot be obtained. Certain corrections have to be made in practice, for great accuracy.

To find the Specific Gravity of a mixture of given volumes of any number of fluids whose specific gravities are given.

If V_1, V_2, V_3, . . . V_n be the volumes of the fluids whose respective specific gravities are s_1, s_2, s_3, . . . s_n, and S the specific gravity of the mixture, then

$$S = \frac{V_1 s_1 + V_2 s_2 + V_3 s_3 + \ldots V_n s_n}{V_1 + V_2 + V_3 + \ldots V_n}.$$

To find the Specific Gravity of a mixture of given weights of any number of fluids whose specific gravities are given.

If W_1, W_2, W_3, . . . W_n be the weights of the fluids whose respective specific gravities are s_1, s_2, s_3, . . . s_n, and S the specific gravity of the mixture, then

$$S = \frac{W_1 + W_2 + W_3 + \ldots W_n}{\frac{W_1}{s_1} + \frac{W_2}{s_2} + \frac{W_3}{s_3} + \ldots \frac{W_n}{s_n}}$$

To Discover the Adulteration in Metals, or to find the Proportions of Two Ingredients in a Compound.

$$w = \frac{W - s\,(W - W)}{1 - \frac{s}{S}}.$$

EXAMPLE.—A metal compounded of silver and gold weighs, W=6 pounds in the air, and in water, W=5·636 pounds. Required the proportions of silver and gold.

S=19·36 specific gravity of gold. s=10·51 specific gravity of silver.

$$\text{Weight } w = \frac{6 - 10{\cdot}51(6 - 5{\cdot}636)}{1 - \frac{10{\cdot}51}{19{\cdot}36}} = 4{\cdot}755 \text{ pounds of gold.}$$

and 1·245 pounds of silver.

SPECIFIC GRAVITIES AND WEIGHTS OF VARIOUS SOLIDS AND LIQUIDS.

(Specific gravity × 62·32 = weight of cubic foot in lbs.
" " × ·03607 = " " inch ")

Substance	Sp. Gr.	Weight of a Cubic Foot.	Substance.	Sp. Gr.	Weight of a Cubic Foot.	Substance.	Sp. Gr.	Weight of a Cubic Foot.
			Metals.					
		Lbs.			Lbs.			Lbs.
Aluminium, wrought	2·67	167	Iron, white	7·50	467	Palladium	11·40	710
" cast	2·56	160	" grey	7·20	449	Phosphor bronze, cast	8·60	537
Antimony	6·71	418	" Eglinton hot-blast	6·97	435	Platinum, hammered	20·30	1,260
Arsenic	5·76	359		6·98	435	" native	16·00	996
Barium	·47	29		to	to	" rolled	22·10	1,380
Bismuth	9·90	617	" Rennie	7·11	444	Potassium, 50°	·87	54
Boron	2·00	125				Red-lead	8·94	557
Brass, cast	8·10	505	" Mean for ordinary calculations	7·22	450	Rhodium	10·65	663
" sheet, 75 Cu., 25 Zn.	8·45	527	" wrought, least and greatest	7·47 to 7·81	466 to 487	Ruthenium	8·60	536
" yellow, 66 Cu., 34 Zn.	8·30	518				Silicium	4·50	280
" Muntz metal, 60 Cu., 40 Zn.	8·20	511	" common bar	7·55	471	Silver, pure cast	10·47	652
Bromine	3·00	187		7·53	469·5	" " hammered	10·50	654
Bronze (gun-metal)			" puddled slab	to	to	Sodium	·97	60
84 Cu., 16 Tin	8·56	534		7·60	474	Steel, least and greatest density	7·73 to 7·90	435 to 493
83 " 17 "	8·46	528	" various irons, tested by Mr. Kirkaldy	7·5 to 7·8	468 to 486	" homogeneous metal	7·90	493
81 " 19 "	8·46	528				" blistered	7·82	488
" (mill bearings) 79 Cu., 21 Tin	8·73	544	" " average	7·65	477	" crucible, average	7·84	489
90 " 10 "	8·50	530·6	" Yorkshire iron bar	7·76	484	" cast, average	7·85	489·3
Cadmium	8·65	539				" Bessemer, average	7·85	489·6
Calcium	1·58	98	" Lowmoor plates, 1½–3 ins. thick	7·81	487	" Mean for ordinary calculations	7·85	489·6
Chromium	5·00	311				Strontium	2·54	158
Cinnabar	8·10	504	" Mean for ordinary calculations	7·70	480	Tellurium	6·11	381
Cobalt	8·60	536	Lead, cast	11·40	710	Thalium	11·85	738
Columbium	6·00	374	" rolled	11·40	710	Tin, Cornish, hammered	7·39	460
Copper, cast	8·79	547	Lithium	·59	37	" Cornish, pure	7·29	454
" sheet	8·81	549	Magnesium	1·75	109	Titanium	5·30	330
" hammered	8·92	556	Manganese	8·00	498	Tungsten	17·00	1,060
" wire	8·91	555	Mercury — 40°	15·60	972	Uranium	18·33	1,140
Gold, pure cast	19·30	1,200	" + 32°	13 60	847	Wolfram	7·12	443
" hammered	19·40	1,210	" 60°	13·60	847	Zinc, cast	6·86	427
" 22 carats fine	17·50	1,090	" 212°	13·40	835	" rolled	7·19	448
" 20 " "	15·71	978	Molybdenum	8·60	536			
Iridium	18·71	1,170	Nickel, hammered	8·67	541			
hammered	23·00	1,430	" cast	8·28	516			
Iron, cast, least and greatest density	6·90 to 7·50	430 to 467	Osmium	21·4	1,334			

SPECIFIC GRAVITIES AND WEIGHTS OF VARIOUS SOLIDS AND LIQUIDS (*continued*).

Substance.	Specific Gravity.	Weight of a Cubic Foot.	Substance.	Specific Gravity.	Weight of a Cubic Foot.	Substance.	Specific Gravity.	Weight of a Cubic Foot.
			Stones, Earths, &c.					
		Lbs.			Lbs.			Lbs.
Agate	2·59	161	Emery	4·00	249	Pearl, Oriental	2·65	165
Alabaster, white	2·73	170	Flint, black	2·58	161	Peat	·60	37
„ yellow	2·70	168	„ white	2·50	156		1·33	83
Alum	1·71	106	Fluorine	1·32	82	Phosphorus	1·77	110
Amber	1·08	67	Garnet	4·19	261	Plaster of Paris	1·18	73
Ambergris	·87	54	„ black	3·75	233	Plumbago	2·10	131
Asbestos, starry	3·07	191	Glass, bottle	2·73	170	Porcelain, China	2·30	143
Asphaltum	·91	57	„ Crown	2·49	155	Porphyry, red	2·77	173
	1·65	103	„ flint	2·93	182	Pumice-stone	·92	57
Barytes, sulphate	4·00	249		3·20	199	Quartz	2·66	166
	4·87	303	„ green	2·64	164	Red-lead	8·94	557
Basalts	2·74	171	„ optical	3·45	215	Resin	1·09	68
	2·86	178	„ white	2·89	180	Rock, crystal	2·74	171
Borax	1·71	106	„ window	2·64	164	Rotten-stone	1·98	123
Brick	1·90	118	Granite, Egyptian			Ruby	4·28	267
	1·37	85	red	2·65	165	Salt, common	2·13	133
„ fire	2·20	137	„ Patapsco	2·64	164	Saltpetre	2·09	130
„ (pressed) in cement	2·17	135	„ Quincy	2·65	165	Sand, coarse	1·80	112
„ work in mortar	1·80	112	„ Scotch	2·63	164	„ common	1·67	104
	2·00	125	„ Susquehannah	2·70	168	„ damp and loose	1·39	87
Carbon	3·50	219	Gravel, common	1·75	109	„ dried and loose	1·56	97
Cement, Portland	1·30	81	Grindstone	2·14	133	„ dry	1·42	88
„ Roman	1·56	97	Gypsum, opaque	2·17	135	„ siliceous	1·70	106
Chalk	1·52	95	Hone, white, razor	2·88	179	Sapphire	3·99	248
	2·78	173	Hornblende	3·54	220	Schorl	3·17	197
Chrysolite	2·78	173	Iodine	4·94	308	Shale	2·60	162
Clay	1·93	120	Jet	1·30	81	Slate	2·90	181
„ with gravel	2·48	154	Lime, hydraulic	2·75	171		2·67	166
Coal, anthracite	1·44	90	„ quick-	·80	50	„ purple	2·78	173
	1·64	102	Limestone, green	3·18	198	Smalt	2·44	152
„ Cannel	1·24	77	„ white	3·16	197	Spar, calcareous	2·74	171
	1·32	82	Magnesia, carbonate	2·40	149	„ Feld, blue	2·69	168
„ Derbyshire	1·29	80	Marble, Adelaide	2·72	169	„ „ green	2·70	168
„ Newcastle	1·27	79	„ African	2·71	169	„ Fluor	3·40	212
„ Scotch	1·26	79	„ Biscayan, black	2·70	168	Stalactite	2·42	151
	1·30	81	„ Carrara	2·72	169	Stone, Bath	1·96	122
„ Wales, mean	1·32	82	„ common	2·69	168	„ Basalt	2·63	164
Coke	1·00	62	„ Egyptian	2·67	166	„ Bristol	2·51	156
Concrete, mean	2·00	124	„ French	2·65	165	„ Caen, Normandy	2·07	129
Copal	1·05	65	„ Italian, white	2·71	169	„ common	2·52	157
Coral, red	2·70	168	„ Parian	2·84	177	„ Craigleith	2·32	144
„ white	2·55	159	Marl, mean	1·75	109	„ Kentish rag	2·65	165
Cornelian	2·61	163	Mica	2·80	174	„ Portland	2·37	148
Diamond, Oriental	3·52	219	Millstone	2·48	154	„ sandstone	2·20	137
„ Brazilian	3·44	214	Mortar	1·38	86	Sulphur, native	2·03	126
Earth, common soil	2·19	136		1·75	109	Talc, mean	2·50	156
„ loose	1·50	93	Mud	1·63	102	„ black	2·90	181
„ moist sand	2·05	128	Nitre	1·90	118	Tile	1·82	113
„ mould, fresh	2·05	128	Opal	2·11	131	Topaz, Oriental	4·01	250
„ rammed	1·60	100	Oyster-shell	2·09	130	Trap	2·72	169
„ rough sand	1·92	120	Paving-stone	2·42	151	Turquoise	2·75	171
„ with gravel	2·02	126						

SPECIFIC GRAVITIES AND WEIGHTS OF VARIOUS SOLIDS AND LIQUIDS (*continued*).

Substance.	Specific Gravity.	Weight of a Cubic Foot.	Substance.	Specific Gravity.	Weight of a Cubic Foot.	Substance.	Specific Gravity.	Weight of a Cubic Foot.
Miscellaneous.								
		Lbs.			Lbs.			Lbs.
Asphaltum	·91 to 1·65	57 to 103	Gum Arabic	1·45	90	Mastic	1·07	67
Atmospheric air	·00121	·075	Gunpowder, loose	·90	56	Myrrh	1·36	85
Beeswax	·97	60	„ shaken	1·00	62	Opium	1·34	83
Butter	·94	59	„ solid	1·55 to 1·80	97 to 112	Soap, Castile	1·07	57
Camphor	·99	62	Gutta-percha	·98	61	Spermaceti	·94	59
Caoutchouc	·90	56	Horn	1·69	105	Starch	·95	59
Egg	1·09	68	Ice, at 32°	·92	57	Sugar	1·61	100
Fat of beef	·92	57	Indigo	1·01	63	„ ·66	1·33	83
„ hogs	·94	59	Isinglass	1·11	69	Tallow	·94	59
„ mutton	·92	57	Ivory	1·83	114	Wax	·96 to ·97	60
Gamboge	1·22	76	Lard	·95	59			
Liquids.								
Acid, acetic	1·06	66	Alcohol, proof spirit, 50 per cent., 80°	·88	55	Oil, olive	·92	57
„ benzoic, solid	·67	42				„ palm	·97	60
„ citric, solid	1·03	64				„ petroleum	·88	55
„ oxalic „	1·64	102				„ rape	·91	57
„ fluoric	1·50	93	Ammonia, 27·9 per cent.	·89	55	„ sunflower	·93	58
„ hydrochloric	1·20	75	Aquafortis, double	1·30	81	„ turpentine	·87	54
„ nitric	1·22	76	„ single	1·20	75	„ whale	·92	57
„ phosphoric	1·56	97	Beer	1·03	64	Spirit, rectified	·82	51
„ phosphoric, solid	2·80	174	Bitumen, liquid	·85	53	Tar	1·02	64
„ sulphuric	1·85	115	Blood (human)	1·05	65	Vinegar	1·08	67
Alcohol, pure, 60°	·79	49	Brandy, $\frac{5}{6}$ of spirit	·92	57	Water, Dead Sea	1·24	77
„ 95 per cent.	·82	51	Cider	1·02	64	„ 60°	1·00	62
„ 80 „	·86	54	Ether, acetic	·87	54	„ 212°	·96	59
„ 50 „	·93	58	„ muriatic	·85	53	„ distilled, 39°	1·00	62
„ 40 „	·95	59	„ sulphuric	·72	45	„ Mediterranean	1·03	64
„ 25 „	·97	60	Glycerine	1·28	79·5	„ rain	1·00	62
„ 10 „	·99	61	Honey	1·45	90	„ sea	1·03	64
„ 5 „	·99	62	Milk	1·03	64	Wine, Burgundy	·99	62
„ proof spirit, 50 per cent., 60°	·93	58	Oil, anise-seed	·99	62	„ Champagne	1·00	62
			„ codfish	·92	57	„ Madeira	1·04	65
			„ linseed	·94	59	„ port	1·00	62
			„ naphtha	·85	53			
Woods (dry). (*H. Stone.*)								
Acacia or Locust (Robinia)	·58–·83	36–52	Ash, Mountain or Rowan	·57–·94	35½–58½	Blackbutt	·74	46
Alder, black or common	·42–·64	26–39⅝	„ Mountain (of Queensland)	·73	45½	Blackthorn	·67–·71	41⅝–44½
Almond	·85–·88	53–56	„ Nova Scotia	·71	44½	Boxwood, Cape (Gonioma Kamassi)	·93	58
Apple	·66–·84	41–52½	Assegai wood (Cape)	·96	60	„ Cape or East London (Buxus Macowani)	1·19	74
Arbor vitæ	·38–·54	23⅝–33⅝	Bamboo	·40	25	„ English	·99–1·02	61⅞–63½
Ash, American (Fraxinus Americana, L.)	·65–·83	40⅝–52	Bay	·82	51	„ Turkey	1·08	67
„ American, Arkansas or white	·36–·57	22½–35⅝	Beech	·66–·83	41–52	„ West Indian	·79	49
„ European or common	·52–·95	32½–59	„ Cape (Beukenhout)	·63–·74	29½–46	Bulletwood (Mimasops Balata)	·84	67½
			„ Australian white	·53	32¾			
			Birch, American	·60–·77	37½–48			
			„ European	·47–·77	29½–48			

SPECIFIC GRAVITIES AND WEIGHTS OF VARIOUS SOLIDS AND LIQUIDS (*continued*).

Substance.	Specific Gravity.	Weight of a Cubic Foot.
Woods (dry) (continued).		
		Lbs.
Bulletwood, species unknown, but more commonly met with	1·20	75
Butternut, *see* Hickory		
Campeachy, *see* Logwood		
Camphor wood (Borneo)	·90–1·06	55⅝–65⅝
Cedar, Cuba	·37–·53	23¼–33½
„ Pencil or Virginian	·40–·60	25–37½
„ Indian	1·32	82
„ red (Australia)	·43–·59	26⅞–36⅞
„ white (Australia)	·33–·53	20½–33
Charcoal, pine	·44	27½
„ fresh burned	·38	23⅝
„ oak	1·57	98
„ soft wood	·28	17½
„ triturated	1·38	86½
Cherry, American	·59	36¾
„ English	·54–·71	33¾–44⅜
Chestnut, sweet or Spanish	·60–·72	37½–45
„ Horse	·51–·63	32–39¼
Citron	·72	45
Cocus or Cocos	1·48–1·61	92–100
Cogwood, Jamaica	1·08	67
Cork	·24	15
Cottonwood (N. America)	·55	34½
Crabwood (British Guiana)	·63	39¼
Cypress, Spanish	·65	40½
Damson	·76–·84	47½–52½
Degame wood	·79	49
Dogwood, common	·77–·83	48–51½
„ red (American)	·77–·81	48–50½
Ebony, black or Billetwood	·98–1·14	61–71
Ebony, Indian	1·21	75½
„ Macassar	·98–1·24	61–77
„ Purple (Ceylon)	·86	53⅞
Elder	·54–·76	33¾–47¼
Elm, American or Rock	·69–·73	43–45½
„ „ or white	·65	40½
„ common or European	·56–·82	35–51¼
Filbert, *see* Hazel		
Fir, Danzig	·48–·75	29⅞–47
„ Riga	·51–·66	31¾–41
„ Silver	·36–·60	23–37½
„ Spruce	·35–·60	21⅞–37½
Fustic	·63	39
Greenheart, Trop. (America)	1·03–1·20	64–75
„ Demerara	1·02–1·20	63¼–74½
Gum, blue	·69–1·11	43–69
„ grey (Australia)	1·00	62¼
„ red (America) *see* Satin Walnut		
„ Sweet, *see* Satin Walnut		
Hackmatack (American Larch)	·63	39
Hackia	·82–·96	51–59¾
Hawthorn	·81–·91	50½–56⅞
Hazel	·56–·71	35–44¼
Hemlock	·69	23
Hickory, Bitternut	·78	47
„ Butternut or Shellbark	·69–·83	43–52
„ Pig-nut	·79–·82	49¼–51⅛
Holly	·76–·94	47½–58¾
Honeysuckle (New Zealand)	·74–·81	46⅛–50⅛
Hornbeam	·62–·82	38¾–51¼
Ironbark, red (Australia)	·98–1·16	61–72½
Ironwood, Pynkado	1·15–1·27	71⅞–79
Jackwood	·56–·71	35–44⅜
Jarrah	·81–1·05	50⅛–65½
Jasmine	·77	48⅛
Juniper	·53–·70	33–43⅝
Karri	·85–1·02	53–63¾
Kauri or Cowrie Pine	·51–·60	32–37¼
Lancewood (Jamaica or Cuba)	·83–1·01	52–63
Larch	·44–·80	27½–50
„ Russian	·59–·70	36¾–43½
Lemon	·71–·80	44–50
Lignum vitæ Guayaquil	·79	49
„ Jamaica	1·61–1·43	72½–89
„ Maracaibo	1·11	69
Lime or Linden	·32–·59	20–36¾
Locust, *see* Acacia		
Logwood	·92	57
Mahoe, blue	·71–·79	44½–49½

Substance.	Specific Gravity.	Weight of a Cubic Foot.
(H. Stone.)		
		Lbs.
Mahogany, East Indian	·69	43
„ Cuba	·72–·82	44⅝–51
„ Honduras	·56–·69	35–42⅝
„ Mexican	·61–·79	38⅛–49¼
„ Panama	·47	29½
„ red (Australia)	1·11	69
„ Spanish	·86	53¼
Maple, Bird's-eye	·58	36
„ hard	·53–·80	33–50
„ soft	·53–·71	32⅞–44
„ Sugar	·58–·81	36–50½
Mastic	·85	53
Mora	1·08–1·10	67½–68½
Mulberry	·56–·90	35–56
Oak, African	·83–1·09	51½–68
„ American, red	·84–·88	52½–54⅝
„ „ white	·94–1·05	58⅞–65⅝
„ Baltimore	·70–·82	43⅞–51¼
„ Canadian	—	54½
„ Dantzig	·76–·96	47½–56
„ Desert or She-oak (Australia)	1·14	71¼
„ Dutch or Rhenish	·94–1·10	58⅞–68½
„ English	·69–1·04	43–64½
„ Forest or She-oak (Australia)	·78–·85	48½–53
„ Italian or Modena	1·06–1·15	66–71⅞
„ Italian or Tuscan	1·07–1·08	66⅞–67½
„ Sardinian	·95–1·03	59–64
„ Silky (Australia)	·60	37¼
„ Spanish or white (America)	·87–1·00	54¼–62
„ Stettin	·56	35
Olive	·87	54
Orange	·71–·93	44–58
Orham	·51	32
Padouk	·69–1·00	43–62
Pear	·66–·72	41¼–45
„ white (Cape)	·79–·98	49–61
Persimmon	·71–·85	44¼–53
Pine, American Pitch	·50–·92	31¼–57½
„ Corsican	·38–·76	23¾–47½
„ red or yellow (Pinus sylvestris or Scots fir)	·31–·74	19¼–46¼
„ red (Canada)	·51–·59	32–36¾
„ white (Pinus strobus)	·31–·56	19¼–35

SPECIFIC GRAVITIES AND WEIGHTS OF VARIOUS SOLIDS AND LIQUIDS (*continued*).

Substance.	Specific Gravity.	Weight of a Cubic Foot.	Substance.	Specific Gravity.	Weight of a Cubic Foot.	Substance.	Specific Gravity.	Weight of a Cubic Foot.
			Woods (dry) (continued).				(*H. Stone.*)	
		Lbs.			Lbs.			Lbs.
Pine, white (Australia)	·43–·49	27–30½	Quince	·71	44	Teak	·62	38½
„ yellow (Canada)	·43–·60	26½–37½	Rosewood, Indian	·73–1·03	45½–64	Tewart	1·16–1·20	72–74½
Plane, Eastern or European	·49–·68	30½–42½	Sabien	·70	43½	Waibaima	·92	57
„ Western or American	·57	35¼	„ Cuba	·89–·94	55½–58¾	Wallaba	1·05	65½
Plum	·64–·90	40–56	„ fromTunas de Zaza	1·00	62½	Walnut, American or black	·46–·88	28¾–55
Pomegranate	1·36	84½	Sappan	·96–·98	60–61	„ Cape or Stinkwood	—	51¾
Poon	·58	36¼	Sassafras	·48	30	„ English or Italian	·63–·71	39–44½
Poplar, American	·39–·48	24¼–30	Satin-walnut, *see* Walnut			„ Satin, Red Gum, or Californian	·59–·96	36¾–59½
„ aspen	·43–·56	26¾–35	Satinwood(Ceylon)	·98–1·04	61–65	Red Gum		
„ black	·39–·52	24¼–32½	„ (EastIndia)	·79–·98	49–61	Washiba or Bowwood	·88	55
„ white	·40–·57	25–35½	Siniaruba, Bitterwood	·48	30	Whitewood, Canadian or Canary	·45–·62	28–38¾
Purpleheart (BritishGuiana, Kooroobooilli)	·85	53	Spruce, European	·35–·60	21¾–37½	Willow, common or Goat	·43–·63	27–39¼
Purpleheart (BritishGuiana, Marawinaroo)	1·00	62	„ (Canada)	·45–·51	28¼–32	Willow, white	·43–·50	26¾–31½
Purpleheart (Demerara)	·81	50½	Stonewood	·93	58	Yew	·74–·94	46–58½
Quassia	·54	33⅝	Sneezewood	1·08	67½			
			Sycamore, American, *see* Plane					
			„ European	·47–·79	29–49			
			Tamarack, *see* Hackmatack					

SPECIFIC GRAVITIES OF WOODS.

The specific gravity or weight per cubic inch or cubic foot of woods can never be expressed by a fixed value. Wood varies in the same tree from the root to the branches, becoming lighter upwards, and again varies from the lower branches to the top in the reverse way, *i.e.* it becomes heavier upwards. It also varies from within outwards, and also varies according to the time of year, starch being accumulated at one season and used up at another. No two pieces of wood can be found of the same specific gravity except by accident, or by taking two small pieces from the same annual ring, which would rarely occur in practice. Hence it is misleading to work out specific gravities of woods to several places of decimals. Moreover, wood is hygroscopic, and however dry a specimen may be, a different result will be obtained with every movement of the barometer. The term 'dry weight' is merely an expression of convenience, and most of the figures given in the foregoing table have been calculated from specimens which have been kept in a dry room at ordinary temperatures, and which have ceased to lose weight. Wood dried by artificial means at high temperatures gains weight by absorbing moisture, this absorption taking place from the moment the wood is withdrawn from the desiccator.

Drying and Seasoning of Woods.

There is no difference between 'drying' and 'seasoning,' and the terms may be regarded as synonymous. Too rapid drying may be injurious to a wood, and hence seasoning has come to be regarded as something different from drying, but it is only so in certain cases, and is disputed even in these. Some foresters maintain that a few rings of wood nearest the heart pass from the condition of sapwood into that of heartwood during seasoning, and that therefore the amount of useable timber is increased thereby. (*H. Stone.*)

See also page 365.

SPECIFIC GRAVITIES OF EBONITE

Black qualities, approx., 1·2; Red qualities, approx., 1·6; Mottled quality, 1·33.

Specific Gravities of Elastic Fluids.

1 cubic foot of dry atmospheric air at 62° F. and at normal pressure weighs 532·5 troy grains. Its assumed gravity of 1 is the unit for elastic fluids.

Fluid	Specific Gravity Compared with Air.	Fluid.	Specific Gravity Compared with Air.
Atmospheric air	1	Sulphuretted hydrogen	1·17
Ammonia	·589	Sulphurous acid	2·21
Carbonic anhydride	1·52	Steam, 212°	·4883
„ oxide	·972	Smoke of bituminous coal	·102
Carburetted hydrogen	·559	„ coke	·105
Chlorine	2·47	„ wood	·09
Chloro-carbonic	3·389	Vapour of alcohol	1·613
Cyanogen	1·815	„ bisulphide of carbon	2·64
Gas, coal	·4 to ·752	„ bromine	5·1
		„ chloric ether	3·44
Hydrogen	·069	„ ether	2·586
Hydrochloric acid	1·278	„ hydrochloric ether	2·255
Hydrocyanic „	·942	„ iodine	8·675
Nitrogen	·972	„ nitric acid	3·75
Nitric oxide	1·094	„ spirits of turpentine	4·763
Nitrous acid	2·638	„ sulphuric acid	2·7
„ oxide	1·527	„ „ ether	2·586
Oxygen	1·102	„ sulphur	2·214
Phosphuretted hydrogen	1·77	„ water	·623

Reduction of Volume of Liquids under Pressure.

The following shows the percentage of reduction of volume under a pressure of 1 atmosphere (14·7 lbs. per square inch) :—

	Per Cent.		Per Cent.		Per Cent.		Per Cent.
Alcohol	·00216	Ether	·006158	Mercury	·000265	Water	·004663

Weight of Sheet, Bar, and Ball Metals.

Weight of a Square Foot of Sheet Metals.

Thickness.	Weight in Lbs.			Thickness.	Weight in Lbs.		
Inch.	Iron.	Copper.	Brass.	Inch.	Iron.	Copper.	Brass.
½	20·21	23·12	21·87	1/32	2·52	2·89	2·73
·450	18·19	20 80	19·68	·055	2·22	2·54	2·40
·437	17·66	20·20	19·11	·048	1·94	2·22	2·10
7/16	15·15	17·34	16·40	·042	1·69	1·94	1·83
·340	13·74	15·72	14·87	·035	1·41	1·62	1·53
5/16	12·63	14·45	13·67	·033	1·33	1·52	1·44
·284	11·47	13·13	12·42	·029	1·17	1·34	1·27
·261	10·55	12·06	11·41	·028	1·13	1·29	1·22
¼	10·10	11·56	10·94	·025	1·01	1·15	1·09
·217	8·77	10·03	9·49	·021	·85	·97	·92
·208	8·40	9·62	9·10	·020	·81	·92	·87
3/16	7·57	8·67	8·20	·018	·73	·83	·79
·166	6·71	7·67	7·26	·015	·60	·69	·65
·158	6·38	7·30	6·91	·013	·52	·60	·57
·137	5·54	6·33	5·99	·012	·48	·55	·52
⅛	5·05	5·78	5·47	·010	·40	·46	·43
·109	4·40	5·04	4·77	·009	·36	·41	·40
·094	3·80	4·34	4·11	·008	·32	·37	·35
·080	3·23	3·70	3·50	·007	·28	·32	·30
·072	2·91	3·32	3·15	·005	·20	·23	·22

Weight of Sheet, Bar, and Ball Cast Iron.

(1 cubic foot weighs 450 lbs.)

Sheet.			Bar.		Ball.	Sheet.			Bar.		Ball.
Thickness or Diameter.		Weight of a Square Foot.	Weight of a *Square* Bar, 1 Foot long.	Weight of a *Round* Bar, 1 Foot long.	Weight of a Ball.	Thickness or Diameter.		Weight of a Square Foot.	Weight of a *Square* Bar, 1 Foot long.	Weight of a *Round* Bar, 1 Foot long.	Weight of a Ball.
Ins.	Ft.	Lbs.	Lbs.	Lbs.	Lbs.	Ins.	Ft.	Lbs.	Lbs.	Lbs.	Lbs.
$\frac{1}{32}$	·0026	1·173	·003	·002	—	$3\frac{1}{4}$	·2604	117·3	30·52	23·97	4·162
$\frac{1}{16}$	·0052	2·344	·012	·010	—	$\frac{1}{4}$	·2708	121·8	33·01	25·93	4·681
$\frac{3}{32}$	·0078	3·516	·027	·021	·0001	$\frac{3}{8}$	·2813	126·5	35·60	27·95	5·243
$\frac{1}{8}$	·0104	4·687	·048	·038	·0003	$\frac{1}{2}$	·2917	131·2	38·28	30·07	5·846
$\frac{5}{32}$	·0130	5·861	·076	·060	·0005	$\frac{5}{8}$	·3021	135·9	41·07	32·25	6·498
$\frac{3}{16}$	·0156	7·032	·110	·086	·0009	$\frac{3}{4}$	·3125	140·6	43·95	34·51	7·193
$\frac{7}{32}$	·0182	8·203	·150	·118	·0014	$\frac{7}{8}$	·3229	145·3	46·93	36·85	7·934
$\frac{1}{4}$	·0208	9·375	·195	·154	·0021	4	·3333	150·0	50·01	39·27	8·726
$\frac{9}{32}$	·0234	10·54	·247	·194	·0030	$\frac{1}{8}$	·3542	154·7	53·18	41·77	9·572
$\frac{5}{16}$	·0260	11·73	·305	·240	·0042	$\frac{1}{4}$	·3542	159·3	56·46	44·33	10·47
$\frac{11}{32}$	·0287	12·89	·370	·290	·0056	$\frac{3}{8}$	·3646	164·0	59·82	46·99	11·42
$\frac{3}{8}$	·0313	14·06	·440	·346	·0072	$\frac{1}{2}$	·3750	168·7	63·33	49·71	12·43
$\frac{13}{32}$	·0339	15·24	·516	·400	·0092	$\frac{5}{8}$	·3854	173·4	66·86	52·52	13·49
$\frac{7}{16}$	·0365	16·41	·598	·470	·0114	$\frac{3}{4}$	·3958	178·1	70·52	55·39	14·62
$\frac{15}{32}$	·0391	17·56	·687	·540	·0140	$\frac{7}{8}$	·4063	182·8	74·28	58·34	15·81
$\frac{1}{2}$	·0417	18·75	·781	·610	·0170	5	·4167	187·5	78·12	61·37	17·05
$\frac{9}{16}$	·0469	21·10	·989	·777	·0243	$\frac{1}{8}$	·4271	192·2	82·10	64·47	18·35
$\frac{5}{8}$	·0521	23·44	1·221	·959	·0334	$\frac{1}{4}$	·4375	196·9	86·14	67·65	19·73
$\frac{11}{16}$	·0573	25·79	1·478	1·161	·0444	$\frac{3}{8}$	·4479	201·6	90·29	70·52	21·18
$\frac{3}{4}$	·0625	28·12	1·758	1·381	·0575	$\frac{1}{2}$	·4583	206·2	94·54	74·26	22·68
$\frac{13}{16}$	·0677	30·47	2·064	1·621	·0732	$\frac{5}{8}$	·4688	210·9	98·89	77·66	24·27
$\frac{7}{8}$	·0729	32·81	2·393	1·880	·0913	$\frac{3}{4}$	·4792	215·6	103·3	81·16	25·93
$\frac{15}{16}$	·0781	35·16	2·747	2·158	·1124	$\frac{7}{8}$	·4896	220·3	107·9	84·72	27·41
1	·0833	37·50	3·125	2·455	·1363	6	·5000	225·0	112·5	88·36	29·44
$\frac{1}{16}$	·0885	39·84	3·528	2·771	·1636	$\frac{1}{8}$	·5208	234·4	122·1	95·89	33·28
$\frac{1}{8}$	·0938	42·19	3·955	3·107	·1942	$\frac{1}{4}$	·5417	243·8	132·0	103·7	37·44
$\frac{3}{16}$	·0990	44·53	4·407	3·461	·2284	$\frac{3}{8}$	·5625	253·1	142·4	111·9	41·94
$\frac{1}{4}$	·1042	46·87	4·883	3·835	·2664	7	·5833	262·5	153·2	120·2	46·77
$\frac{5}{16}$	·1094	49·22	5·384	4·229	·3084	$\frac{1}{4}$	·6042	271·9	164·2	129·0	51·97
$\frac{3}{8}$	·1146	51·57	5·909	4·640	·3546	$\frac{1}{2}$	·6250	281·3	175·8	138·1	57·54
$\frac{7}{16}$	·1198	53·91	6·461	5·073	·4058	$\frac{3}{4}$	·6458	290·7	187·7	147·4	63·47
$\frac{1}{2}$	·1250	56·26	7·033	5·523	·4603	8	·6667	300·0	200·1	157·0	69·82
$\frac{9}{16}$	·1302	58·60	7·632	5·993	·5204	$\frac{1}{4}$	·6875	309·4	212·7	167·0	76·58
$\frac{5}{8}$	·1354	60·94	8·253	6·484	·5852	$\frac{1}{2}$	·7083	318·8	225·8	177·3	83·74
$\frac{11}{16}$	·1406	63·28	8·900	6·991	·6555	$\frac{3}{4}$	·7292	328·2	239·3	187·9	91·35
$\frac{3}{4}$	·1458	65·63	9·572	7·518	·7310	9	·7500	337·4	253·1	198·8	99·42
$\frac{13}{16}$	·1510	67·97	10·27	8·064	·8122	$\frac{1}{4}$	·7708	346·8	267·4	210·0	107·9
$\frac{7}{8}$	·1563	70·32	10·99	8·630	·8991	$\frac{1}{2}$	·7917	356·2	282·1	221·5	116·8
$\frac{15}{16}$	·1615	72·66	11·73	9·215	·9920	$\frac{3}{4}$	·8125	365·6	297·0	233·3	126·3
2	·1667	75·01	12·50	9·821	1·073	10	·8333	375·0	312·5	245·5	136·3
$\frac{1}{8}$	·1771	79·70	14·11	11·09	1·308	$\frac{1}{4}$	·8542	384·4	328·4	257·8	146·8
$\frac{1}{4}$	·1875	84·40	15·83	12·43	1·554	$\frac{1}{2}$	·8750	393·7	344·5	270·6	157·9
$\frac{3}{8}$	·1979	89·07	17·63	13·85	1·827	$\frac{3}{4}$	·8958	403·1	361·2	283·7	169·3
$\frac{1}{2}$	·2083	93·75	19·54	15·34	2·131	11	·9167	412·5	378·2	297·0	181·5
$\frac{5}{8}$	·2188	98·44	21·54	16·56	2·467	$\frac{1}{4}$	·9375	421·9	395·5	310·6	194·2
$\frac{3}{4}$	·2292	103·2	23·64	18·56	2·835	$\frac{1}{2}$	·9583	431·2	413·3	324·6	207·3
$\frac{7}{8}$	·2396	107·8	25·84	20·29	3·241	$\frac{3}{4}$	·9792	440·6	431·4	338·8	219·2
3	·2500	112·6	28·13	22·10	3·682	12	1 Foot	450·0	450·0	353·4	235·6

YOUNGS

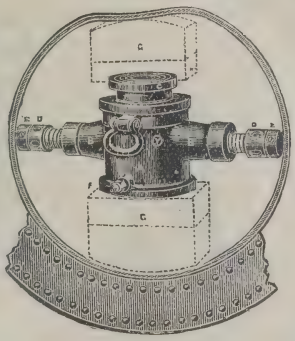
Hydraulic Tools

of all kinds for

Shipyards, Collieries, Railways, Tramways, &c., also all kinds of Lifting Tackle, Pulley Blocks, Crabs, &c.




Hydraulic Lifting Jack.



Hydraulic Ship's Furnace Jack.

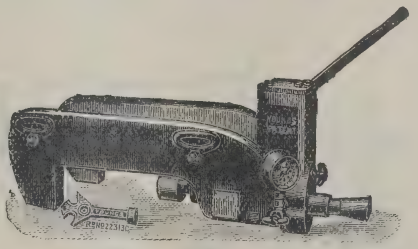WRITE for LIST No. 43.



Youngs' Patent Bolt Forcer.

Ryland St. Works, BIRMINGHAM.

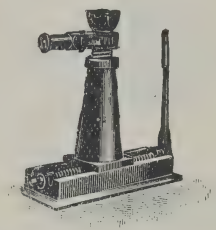


Weston's Block.

LIFTING TACKLE


Of All Kinds.

**Cranes,
Crab Winches,
Pulley Blocks and
Jacks of every
Description.**



Screw Lifting Jack.

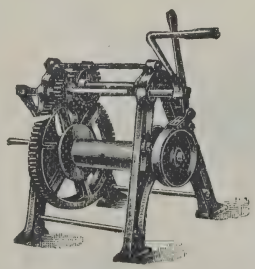WRITE FOR LIST No. 43.



Hoisting Crab.

YOUNGS

Ryland Street Works

BIRMINGHAM.

Weight of Wrought Iron and Steel.

(The Table gives the weights for wrought iron, 1 cubic foot of wrought iron being taken to weigh 485 lbs. For steel an addition of about 1 lb. in 100 lbs. must be made to the tabular amounts.)

Thickness or Diameter in Inches.	Thickness or Diameter in Decimals of a Foot.	Weight of a *Square Foot* in Pounds.	Weight of a *Square* Bar, 1 Foot long, in Pounds.	Weight of a *Round* Bar, 1 Foot long, in Pounds.	Weight of *Balls* in Pounds.	Thickness or Diameter in Inches.	Thickness or Diameter in Decimals of a Foot.	Weight of a *Square Foot* in Pounds.	Weight of a *Square* Bar, 1 Foot long, in Pounds.	Weight of a *Round* Bar, 1 Foot long, in Pounds.	Weight of *Balls* in Pounds.
1/32	·0026	1·263	·0033	·0026	—	3 1/4	·2604	126·3	32·89	25·83	4·484
1/16	·0052	2·526	·0132	·0104	—	1/4	·2708	131·4	35·57	27·94	5·045
3/32	·0078	3·789	·0296	·0233	·0001	1/4	·2813	136·4	38·37	30·13	5·649
1/8	·0104	5·052	·0526	·0414	·0003	1/4	·2917	141·5	41·26	32·41	6·301
5/32	·0130	6·315	·0823	·0646	·0005	1/4	·3021	146·5	44·26	34·76	7·000
3/16	·0156	7·578	·1184	·0930	·0009	1/4	·3125	151·6	47·37	37·20	7·750
7/32	·0182	8·841	·1612	·1266	·0015	1/4	·3229	156·6	50·57	39·72	8·550
1/4	·0208	10·10	·2105	·1653	·0023	1/4	·3333	161·7	53·89	42·33	9·405
9/32	·0234	11·37	·2665	·2093	·0033	1/4	·3438	166·7	57·31	45·01	10·32
5/16	·0260	12·63	·3290	·2583	·0045	1/4	·3542	171·8	60·84	47·78	11·28
11/32	·0287	13·89	·3980	·3126	·0060	1/4	·3646	176·8	64·47	50·63	12·31
3/8	·0313	15·16	·4736	·3720	·0078	1/2	·3750	181·9	68·20	53·57	13·39
13/32	·0339	16·42	·5558	·4365	·0098	1/2	·3854	186·9	72·05	56·59	14·54
7/16	·0365	17·68	·6446	·5063	·0123	3/4	·3958	192·0	75·99	59·69	15·75
15/32	·0391	18·95	·7400	·5813	·0151	3/4	·4063	197·0	80·05	62·87	17·03
1/2	·0417	20·21	·8420	·6613	·0184	5	·4167	202·1	84·20	66·13	18·37
9/16	·0469	22·73	1·066	·8370	·0262	1/4	·4271	207·1	88·47	69·48	19·78
5/8	·0521	25·26	1·316	1·033	·0359	1/4	·4375	212·2	92·83	72·91	21·26
11/16	·0573	27·79	1·592	1·250	·0478	1/4	·4479	217·2	97·31	76·43	22·82
3/4	·0625	30·31	1·895	1·488	·0620	1/2	·4583	222·3	101·9	80·02	24·45
13/16	·0677	32·84	2·223	1·746	·0788	1/2	·4688	227·3	106·6	83·70	26·16
7/8	·0729	35·37	2·579	2·025	·0985	3/4	·4792	232·4	111·4	87·46	27·94
15/16	·0781	37·89	2·960	2·325	·1211	3/4	·4896	237·5	116·3	91·31	29·80
1	·0833	40·42	3·368	2·645	·1470	6	·5000	242·5	121·3	95·23	31·74
1/16	·0885	42·94	3·803	2·986	·1763	1/4	·5208	252·6	131·6	103·3	35·88
1/8	·0938	45·47	4·263	3·348	·2093	1/4	·5417	262·7	142·3	111·8	40·36
3/16	·0990	48·00	4·750	3·730	·2461	1/2	·5625	272·8	153·5	120·5	45·19
1/4	·1042	50·52	5·263	4·133	·2870	7	·5833	282·9	165·0	129·6	50·40
5/16	·1094	53·05	5·802	4·557	·3323	1/4	·6042	293·0	177·0	139·0	56·00
3/8	·1146	55·57	6·368	5·001	·3820	1/2	·6250	303·1	189·5	148·8	62·00
7/16	·1198	58·10	6·960	5·466	·4365	3/4	·6458	313·2	202·3	158·9	68·40
1/2	·1250	60·63	7·578	5·952	·4960	8	·6667	323·3	215·6	169·3	75·24
9/16	·1302	63·15	8·223	6·458	·5606	1/4	·6875	333·4	229·3	180·1	82·52
5/8	·1354	65·68	8·893	6·985	·6306	1/2	·7083	343·5	243·4	191·1	90·25
11/16	·1406	68·20	9·591	7·533	·7062	3/4	·7292	353·6	247·9	202·5	98·45
3/4	·1458	70·73	10·31	8·101	·7876	9	·7500	363·8	272·8	214·3	107·1
13/16	·1510	73·26	11·07	8·690	·8750	1/4	·7708	373·9	288·2	226·3	116·3
7/8	·1563	75·78	11·84	9·300	·9688	1/2	·7917	384·0	304·0	238·7	126·0
15/16	·1615	78·31	12·54	9·930	1·069	3/4	·8125	394·1	320·2	251·5	136·2
2	·1667	80·83	13·47	10·58	1·176	10	·8333	404·2	336·8	264·5	146·9
1/8	·1771	85·89	15·21	11·95	1·410	1/4	·8542	414·3	353·9	277·9	158·2
1/4	·1875	90·94	17·05	13·39	1·674	1/2	·8750	424·4	371·3	291·6	170·1
3/8	·1979	95·99	19·00	14·92	1·969	3/4	·8958	434·5	389·2	305·7	182·6
1/2	·2083	101·0	21·05	16·53	2·296	11	·9167	444·6	407·5	320·1	195·6
5/8	·2188	106·1	23·21	18·23	2·658	1/4	·9375	454·7	426·3	334·8	209·2
3/4	·2292	111·2	25·47	20·01	3·056	1/2	·9583	464·8	445·4	349·8	223·5
7/8	·2396	116·2	27·84	21·87	3·492	3/4	·9792	474·9	465·0	365·2	238·4
3	·2500	121·3	30·31	23·81	3·968	12	1 Foot	485·0	485·0	380·9	253·9

WEIGHT OF BALLS OF VARIOUS METALS.

Diameter	Cast Lead.	Cast Copper.	Cast Brass.	Cast Iron.	Diameter	Cast Lead.	Cast Copper.	Cast Brass.	Cast Iron.
Ins.	Lbs.	Lbs.	Lbs.	Lbs.	Ins.	Lbs.	Lbs.	Lbs.	Lbs.
$\frac{1}{2}$	·026	·021	·019	·017	5	26·0	20·8	18·6	17·0
$\frac{3}{4}$	·088	·070	·063	·058	$\frac{1}{4}$	30·1	24·1	21·5	19·8
1	·209	·167	·148	·136	$\frac{1}{2}$	34·7	27·7	24·7	22·7
$\frac{1}{4}$	·408	·325	·290	·266	$\frac{3}{4}$	39·6	31·7	28·3	25·9
$\frac{1}{2}$	·705	·562	·501	·460	6	45·0	36·0	32·0	29·4
$\frac{3}{4}$	1·12	·893	·795	·731	$\frac{1}{4}$	57·2	45·8	40·8	37·4
2	1·67	1·33	1·19	1·07	7	71·5	57·2	50·9	46·8
$\frac{1}{4}$	2·38	1·90	1·69	1·55	$\frac{1}{2}$	88·0	70·3	62·6	57·5
$\frac{1}{2}$	3·25	2·60	2·32	2·13	8	106	85·3	76·0	69·8
$\frac{3}{4}$	4·34	3·47	3·09	2·83	$\frac{1}{2}$	127	102	91·2	83·7
3	5·63	4·50	4·01	3·68	9	151	121	108	99·4
$\frac{1}{4}$	7·15	5·72	5·10	4·68	$\frac{1}{2}$	178	143	127	117
$\frac{1}{2}$	8·94	7·14	6·36	5·85	10	208	167	148	136
$\frac{3}{4}$	11·0	8·79	7·83	7·19	$\frac{1}{2}$	241	193	172	158
4	13·4	10·7	9·50	8·73	11	277	222	198	182
$\frac{1}{4}$	16·0	12·8	11·4	10·5	$\frac{1}{2}$	317	253	226	207
$\frac{1}{2}$	18·9	15·2	13·5	12·4	12	360	288	257	236
$\frac{3}{4}$	22·7	17·9	15·9	14·6					

WEIGHT OF FLAT ROLLED IRON PER FOOT RUN.

Width.	Thickness of Metal in Parts of an Inch.											
	$\frac{1}{16}$	$\frac{1}{8}$	$\frac{3}{16}$	$\frac{1}{4}$	$\frac{5}{16}$	$\frac{3}{8}$	$\frac{7}{16}$	$\frac{1}{2}$	$\frac{5}{8}$	$\frac{3}{4}$	$\frac{7}{8}$	1
Ins.	Lb.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.
1	·2083	·4166	·6250	·8333	1·042	1·250	1·458	1·666	2·083	2·500	2·916	3·333
$\frac{1}{4}$	·2344	·4688	·7033	·9375	1·172	1·406	1·640	1·875	2·344	2·812	3·280	3·75
$\frac{1}{2}$	·2605	·5210	·7810	1·042	1·303	1·563	1·823	2·083	2·605	3·125	3·646	4·166
$\frac{3}{4}$	·2865	·5730	·8595	1·146	1·432	1·719	2·006	2·292	2·864	3·438	4·012	4·583
1	·3125	·6250	·9375	1·250	1·562	1·875	2·188	2·500	3·125	3·750	4·375	5·000
$\frac{1}{4}$	·3385	·6771	1·015	1·354	1·692	2·031	2·370	2·708	3·384	4·062	4·740	5·416
$\frac{1}{2}$	·3646	·7292	1·094	1·458	1·823	2·188	2·550	2·916	3·646	4·375	5·105	5·833
$\frac{3}{4}$	·3906	·7812	1·172	1·562	1·953	2·344	2·735	3·125	3·906	4·688	5·470	6·25
2	·4166	·8333	1·25	1·666	2·083	2·500	2·916	3·333	4·166	5·000	5·833	6·666
$\frac{1}{4}$	·4427	·8855	1·328	1·771	2·214	2·656	3·098	3·542	4·428	5·312	6·196	7·083
$\frac{1}{2}$	·4688	·9375	1·406	1·875	2·344	2·812	3·281	3·750	4·688	5·624	6·562	7·500
$\frac{3}{4}$	·4948	·9895	1·484	1·979	2·474	2·968	3·463	3·958	4·948	5·936	6·926	7·916
3	·5210	1·042	1·562	2·083	2·605	3·125	3·646	4·166	5·210	6·250	7·291	8·333
$\frac{1}{4}$	·5470	1·094	1·641	2·187	2·735	3·282	3·829	4·375	5·470	6·564	7·658	8·750
$\frac{1}{2}$	·5730	1·146	1·719	2·292	2·865	3·438	4·011	4·583	5·730	6·876	8·022	9·166
$\frac{3}{4}$	·5990	1·198	1·797	2·396	2·995	3·594	4·193	4·792	5·990	7·188	8·386	9·583
3	·625	1·250	1·875	2·500	3·125	3·750	4·375	5·000	6·250	7·500	8·750	10·00
$\frac{1}{4}$	·6515	1·303	1·954	2·605	3·257	3·908	4·560	5·210	6·514	7·816	9·120	10·42
$\frac{1}{2}$	·6770	1·354	2·031	2·708	3·385	4·062	4·739	5·416	6·770	8·124	9·478	10·83
$\frac{3}{4}$	·7031	1·406	2·109	2·812	3·516	4·218	4·921	5·625	7·032	8·436	9·842	11·25
4	·7291	1·458	2·188	2·916	3·646	4·375	5·105	5·833	7·291	8·750	10·21	11·66
$\frac{1}{4}$	·7555	1·511	2·266	3·021	3·777	4·533	5·288	6·042	7·554	9·066	10·58	12·08
$\frac{1}{2}$	·7812	1·562	2·343	3·125	3·906	4·686	5·468	6·25	7·812	9·372	10·94	12·50
$\frac{3}{4}$	·8070	1·614	2·421	3·229	4·035	4·842	5·65	6·458	8·070	9·684	11·30	12·92

WEIGHT OF FLAT ROLLED IRON PER FOOT RUN (*continued*).

Width.	Thickness of Metal in Parts of an Inch.											
	1/16	1/8	3/16	1/4	5/16	3/8	7/16	1/2	5/8	3/4	7/8	1
Ins.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.
4	·3333	1·666	2·500	3·333	4·166	5·000	5·833	6·666	8·333	10·00	11·66	13·33
1/16	·8595	1·719	2·578	3·438	4·297	5·166	6·016	6·875	8·594	10·31	12·03	13·75
1/8	·8855	1·771	2·656	3·542	4·427	5·312	6·198	7·083	8·854	10·62	12·40	14·16
3/16	·9115	1·823	2·734	3·646	4·557	5·468	6·380	7·291	9·114	10·94	12·76	14·58
1/4	·9375	1·875	2·812	3·750	4·687	5·624	6·562	7·500	9·374	11·25	13·12	15·00
5/16	·9636	1·927	2·891	3·854	4·818	5·782	6·745	7·708	9·636	11·56	13·49	15·42
3/8	·9895	1·979	2·968	3·958	4·947	5·936	6·926	7·917	9·894	11·87	13·85	15·83
7/16	1·016	2·031	3·048	4·062	5·080	6·096	7·112	8·125	10·16	12·19	14·22	16·25
5	1·042	2·083	3·125	4·166	5·210	6·25	7·291	8·333	10·42	12·50	14·58	16·66
1/16	1·068	2·136	3·204	4·271	5·340	6·408	7·476	8·542	10·68	12·81	14·95	17·08
1/8	1·094	2·188	3·282	4·375	5·470	6·564	7·658	8·750	10·94	13·13	15·31	17·50
3/16	1·120	2·240	3·360	4·479	5·600	6·720	7·840	8·958	11·20	13·44	15·68	17·92
1/4	1·146	2·292	3·438	4·584	5·730	6·876	8·022	9·167	11·46	13·75	16·04	18·33
5/16	1·172	2·344	3·516	4·687	5·860	7·032	8·204	9·375	11·72	14·06	16·40	18·75
3/8	1·198	2·396	3·594	4·791	5·990	7·188	8·386	9·583	11·98	14·37	16·77	19·16
7/16	1·224	2·448	3·672	4·896	6·120	7·344	8·568	9·792	12·24	14·69	17·13	19·58
6	1·250	2·500	3·750	5·000	6·250	7·500	8·750	10·00	12·50	15·00	17·50	20·00
1/16	1·276	2·552	3·828	5·104	6·380	7·656	8·932	10·21	12·76	15·31	17·86	20·42
1/8	1·302	2·604	3·906	5·208	6·510	7·812	9·114	10·42	13·02	15·62	18·23	20·83
3/16	1·328	2·657	3·984	5·313	6·640	7·968	9·297	10·63	13·28	15·93	18·59	21·25
1/4	1·354	2·708	4·063	5·417	6·770	8·126	9·480	10·83	13·54	16·25	18·96	21·66
5/16	1·381	2·761	4·143	5·521	6·906	8·286	9·668	11·04	13·81	16·57	19·33	22·08
3/8	1·406	2·813	4·218	5·625	7·030	8·436	9·843	11·25	14·06	16·87	19·69	22·50
7/16	1·432	2·864	4·296	5·729	7·160	8·592	10·02	11·46	14·32	17·18	20·04	22·92
7	1·458	2·916	4·375	5·833	7·291	8·750	10·20	11·66	14·58	17·50	20·42	23·33
1/16	1·484	2·969	4·452	5·938	7·420	8·904	10·39	11·87	14·84	17·81	20·78	23·75
1/8	1·511	3·021	4·533	6·042	7·555	9·066	10·58	12·08	15·11	18·13	21·16	24·16
3/16	1·536	3·073	4·608	6·146	7·680	9·216	10·75	12·29	15·36	18·43	21·50	24·58
1/4	1·562	3·125	4·686	6·250	7·810	9·372	10·93	12·50	15·62	18·74	21·86	25·00
5/16	1·588	3·177	4·764	6·354	7·940	9·528	11·12	12·71	15·88	19·05	22·24	25·42
3/8	1·615	3·229	4·845	6·458	8·075	9·690	11·31	12·92	16·15	19·38	22·62	25·83
7/16	1·641	3·281	4·923	6·562	8·205	9·846	11·48	13·13	16·41	19·69	22·96	26·25
8	1·666	3·333	5·000	6·666	8·333	10·00	11·66	13·33	16·66	20·00	23·33	26·66
1/16	1·693	3·386	5·079	6·771	8·455	10·15	11·85	13·54	16·91	20·30	23·70	27·08
1/8	1·719	3·438	5·157	6·875	8·595	10·31	12·03	13·75	17·19	20·61	24·06	27·50
3/16	1·745	3·489	5·235	6·979	8·725	10·47	12·21	13·96	17·45	20·94	24·42	27·92
1/4	1·771	3·542	5·313	7·083	8·855	10·63	12·40	14·17	17·71	21·26	24·80	28·33
5/16	1·797	3·594	5·391	7·188	8·985	10·78	12·58	14·37	17·97	21·56	25·16	28·75
3/8	1·823	3·646	5·469	7·292	9·115	10·94	12·76	14·58	18·23	21·88	25·52	29·17
7/16	1·849	3·698	5·547	7·396	9·245	11·09	12·94	14·79	18·49	22·18	25·88	29·58
9	1·875	3·750	5·625	7·500	9·375	11·25	13·12	15·00	18·75	22·50	26·24	30·00
1/16	1·901	3·802	5·703	7·604	9·505	11·41	13·31	15·21	19·00	22·81	26·62	30·42
1/8	1·927	3·854	5·781	7·708	9·635	11·56	13·49	15·42	19·27	23·12	26·98	39·83
3/16	1·953	3·906	5·859	7·812	9·765	11·72	13·67	15·62	19·53	23·44	27·34	31·25
1/4	1·979	3·958	5·937	7·916	9·895	11·87	13·85	15·84	19·79	23·74	27·70	31·67
5/16	2·005	4·010	6·015	8·021	10·02	12·03	14·04	16·04	20·04	24·06	28·08	32·08
3/8	2·031	4·062	6·093	8·125	10·16	12·18	14·21	16·25	20·32	24·36	28·42	32·50
7/16	2·057	4·114	6·171	8·229	10·29	12·34	14·40	16·46	20·58	24·68	28·80	32·92
10	2·083	4·166	6·250	8·333	10·41	12·50	14·58	16·66	20·82	25·00	29·16	33·33
1/16	2·109	4·219	6·327	8·438	10·55	12·65	14·76	16·87	21·10	25·30	29·52	33·75
1/8	2·135	4·270	6·405	8·541	10·67	12·81	14·94	17·08	21·34	25·62	29·88	34·17
3/16	2·162	4·323	6·486	8·646	10·81	12·97	15·13	17·29	21·62	25·94	30·26	34·58
1/4	2·188	4·375	6·564	8·750	10·94	13·13	15·31	17·50	21·88	26·26	30·62	35·00
5/16	2·214	4·427	6·642	8·854	11·07	13·28	15·50	17·71	22·14	26·56	31·00	35·42
3/8	2·239	4·479	6·717	8·958	11·20	13·43	15·67	17·92	22·40	26·86	31·34	35·83
7/16	2·266	4·531	6·798	9·062	11·33	13·59	15·86	18·12	22·66	27·18	31·72	36·25
11	2·291	4·583	6·873	9·166	11·46	13·75	16·04	18·33	22·90	27·50	32·08	36·66
1/16	2·318	4·636	6·954	9·271	11·59	13·91	16·22	18·54	23·18	27·82	32·44	37·08
1/8	2·344	4·688	7·032	9·375	11·72	14·06	16·40	18·75	23·44	28·12	32·80	37·50
3/16	2·370	4·740	7·110	9·479	11·85	14·22	16·59	18·96	23·70	28·44	33·18	37·92
1/4	2·395	4·791	7·185	9·582	11·97	14·37	16·76	19·16	23·94	28·74	33·52	38·33
5/16	2·422	4·844	7·266	9·688	12·11	14·53	16·95	19·37	24·22	29·06	33·90	38·75
3/8	2·448	4·896	7·344	9·792	12·24	14·68	17·13	19·58	24·48	29·36	34·26	39·16
7/16	2·474	4·948	7·422	9·896	12·37	14·84	17·32	19·79	24·74	29·68	34·64	39·58
12	2·500	5·000	7·500	10·00	12·50	15·00	17·50	20·00	25·00	30·00	35·00	40·00

Weight of Flat Steel per Foot Run.

Width.	Thickness of Metal in Parts of an Inch.							
	$\frac{1}{8}$	$\frac{1}{4}$	$\frac{3}{8}$	$\frac{1}{2}$	$\frac{5}{8}$	$\frac{3}{4}$	$\frac{7}{8}$	1
Ins.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.
$\frac{1}{8}$	·0532	·1063	·1595	·2127	·2658	·3190	·3722	·4253
$\frac{1}{2}$	·2127	·4253	·6380	·8507	1·063	1·276	1·489	1·701
$\frac{5}{8}$	·2658	·5317	·7975	1·063	1·329	1·595	1·861	2·127
$\frac{3}{4}$	·3190	·6380	·9570	1·276	1·595	1·914	2·233	2·552
$\frac{7}{8}$	·3722	·7443	1·117	1·489	1·861	2·233	2·605	2·977
1	·4253	·8507	1·276	1·701	2·127	2·552	2·976	3·403
$1\frac{1}{8}$	·4785	·9570	1·436	1·914	2·393	2·871	3·350	3·828
$1\frac{1}{4}$	·5317	1·063	1·595	2·127	2·658	3·190	3·722	4·253
$1\frac{3}{8}$	·5849	1·170	1·755	2·339	2·924	3·509	4·094	4·679
$1\frac{1}{2}$	·6380	1·276	1·914	2·552	3·190	3·828	4·466	5·104
$1\frac{3}{4}$	·7444	1·489	2·233	2·977	3·722	4·466	5·211	5·955
2	·8507	1·701	2·552	3·402	4·253	5·104	5·955	6·806
$2\frac{1}{4}$	·9570	1·914	2·871	3·828	4·785	5·742	6·699	7·656
$2\frac{1}{2}$	1·063	2·127	3·190	4·253	5·317	6·380	7·444	8·507
$2\frac{3}{4}$	1·170	2·339	3·509	4·679	5·849	7·018	8·188	9·358
3	1·276	2·552	3·828	5·104	6·380	7·656	8·932	10·208
$3\frac{1}{4}$	1·382	2·765	4·147	5·530	6·912	8·294	9·677	11·059
$3\frac{1}{2}$	1·489	2·977	4·466	5·955	7·444	8·932	10·421	11·910
$3\frac{3}{4}$	1·595	3·190	4·785	6·380	7·975	9·570	11·165	12·760
4	1·701	3·403	5·104	6·806	8·507	10·208	11·910	13·611
$4\frac{1}{4}$	1·808	3·615	5·423	7·231	9·039	10·846	12·654	14·462
$4\frac{1}{2}$	1·914	3·828	5·742	7·656	9·570	11·484	13·398	15·313
$4\frac{3}{4}$	2·020	4·041	6·061	8·082	10·102	12·122	14·143	16·163
5	2·127	4·254	6·380	8·507	10·634	12·760	14·887	17·014
$5\frac{1}{2}$	2·339	4·679	7·018	9·358	11·697	14·037	16·376	18·715
6	2·552	5·104	7·656	10·208	12·761	15·313	17·865	20·417

Weight of Round, Octagonal, and Square Steel per Foot Run.

Diam.	Round.	Octag.	Square.	Diam.	Round.	Octag.	Square.	Diam.	Round.	Octag.	Square.
In.	Lb.	Lb.	Lb.	Ins.	Lbs.	Lbs.	Lbs.	Ins.	Lbs.	Lbs.	Lbs.
$\frac{1}{16}$	·010	·011	·013	$\frac{8}{8}$	1·044	1·101	1·329	$1\frac{8}{8}$	5·053	5·230	6.433
$\frac{1}{8}$	·041	·044	·053	$\frac{11}{16}$	1·263	1·332	1·608	$1\frac{1}{2}$	6·013	6·343	7·656
$\frac{3}{16}$	·094	·099	·119	$\frac{3}{4}$	1·503	1·586	1·914	$1\frac{5}{8}$	7·057	7·444	8·985
$\frac{1}{4}$	·167	·176	·213	$\frac{13}{16}$	1·764	1·861	2·246	$1\frac{3}{4}$	8·185	8·633	10·421
$\frac{5}{16}$	·261	·275	·332	$\frac{7}{8}$	2·046	2 158	2·605	$1\frac{7}{8}$	9·396	9·910	11·963
$\frac{3}{8}$	·376	·396	·478	$\frac{15}{16}$	2·349	2·478	2·991	2	10·690	11·276	13·611
$\frac{7}{16}$	·511	·539	·651	1	2·673	2·819	3·403	$2\frac{1}{4}$	13·530	14·271	17·227
$\frac{1}{2}$	·668	·706	·851	$1\frac{1}{8}$	3·382	3·568	4·307	$2\frac{1}{2}$	16·703	17·618	21·267
$\frac{9}{16}$	·845	·892	1·077	$1\frac{1}{4}$	4·176	4·405	5·317	$2\frac{3}{4}$	20·211	21·318	25·734

Diam. of octagon steel is measured across sides.
Weight of hexagon steel, measured across sides, = weight of square steel × ·866.

Weight of Rolled Lead, Copper, and Brass: Sheets and Bars.

Thickness or Diameter, or Side.	Lead.			Copper.			Brass.			Thickness or Diameter, or Side.
	Sheets, per Square Foot.	Square Bars, 1 Foot long.	Round Bars, 1 Foot long.	Sheets, per Square Foot.	Square Bars, 1 Foot long.	Round Bars, 1 Foot long.	Sheets, per Square Foot.	Square Bars, 1 Foot long.	Round Bars, 1 Foot long.	
Ins.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Ins.
$\frac{1}{32}$	1·86	·005	·004	1·44	·004	·003	1·36	·004	·003	$\frac{1}{32}$
$\frac{1}{16}$	3·72	·019	·015	2·89	·015	·012	2·71	·014	·011	$\frac{1}{16}$
$\frac{3}{32}$	5·58	·044	·034	4·33	·034	·027	4·06	·032	·025	$\frac{3}{32}$
$\frac{1}{8}$	7·44	·078	·061	5·77	·060	·047	5·42	·056	·044	$\frac{1}{8}$
$\frac{5}{32}$	9·30	·121	·095	7·20	·094	·074	6·75	·088	·069	$\frac{5}{32}$
$\frac{3}{16}$	11·2	·174	·137	8·66	·135	·106	8·13	·127	·100	$\frac{3}{16}$
$\frac{7}{32}$	13·0	·237	·187	10·1	·184	·144	9·50	·173	·136	$\frac{7}{32}$
$\frac{1}{4}$	14·9	·310	·244	11·5	·240	·189	10·8	·226	·177	$\frac{1}{4}$
$\frac{5}{16}$	18·6	·485	·381	14·4	·376	·295	13·5	·353	·277	$\frac{5}{16}$
$\frac{3}{8}$	22·3	·698	·548	17·3	·541	·425	16·3	·508	·399	$\frac{3}{8}$

WEIGHT OF ROLLED LEAD, COPPER, AND BRASS: SHEETS AND BARS—*continued.*

Thickness or Diameter, or Side.	LEAD.			COPPER.			BRASS.			Thickness or Diameter, or Side.
	Sheets per Square Foot.	Square Bars, 1 Foot long.	Round Bars, 1 Foot long.	Sheets, per Square Foot.	Square Bars, 1 Foot long.	Round Bars, 1 Foot long.	Sheets, per Square Foot.	Square Bars, 1 Foot long.	Round Bars, 1 Foot long.	
Ins.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Ins.
7/16	26·0	·950	·746	20·2	·735	·578	19·0		·543	7/16
1/2	29·8	1·24	·974	23·1	·962	·755	21·7		·709	1/2
9/16	33·5	1·57	1·23	26·0	1·22	·955	24·3	1·14	·900	9/16
5/8	37·2	1·94	1·52	28·9	1·50	1·18	27·1	1·41	1·11	5/8
11/16	40·9	2·34	1·84	31·7	1·82	1·43	29·8	1·70	1·34	11/16
3/4	44·6	2·79	2·19	34·6	2·16	1·70	32·5	2·03	1·60	3/4
13/16	48·3	3·27	2 57	37·5	2·55	1·99	35·2	2·38	1·87	13/16
7/8	52·1	3·80	2·98	40·4	2·94	2·31	37·9	2·76	2·17	7/8
15/16	56·0	4·37	3·42	43·3	3·38	2·65	40·6	3·18	2·49	15/16
1	59·5	4·96	3·90	46·2	3·85	3·02	43·3	3·61	2·84	1
1 1/8	66·9	6·27	4·92	52·0	4·87	3·82	48·7	4·57	3·60	1 1/8
1 1/4	74·4	7·75	6·09	57·7	6·01	4·72	54·2	5·64	4·43	1 1/4
1 3/8	81·8	9·37	7·37	63·5	7·28	5·72	59·6	6·82	5·37	1 3/8
1 1/2	89·3	11·2	8·77	69·3	8·65	6·80	65·0	8·12	6·38	1 1/2
1 3/4	104	15·2	11·9	80·8	11·8	9·25	75·9	11·1	8·68	1 3/4
2	119	19·8	15·6	92·3	15·4	12·1	86·7	14·4	11·3	2

WEIGHT OF SHEET LEAD.

Lbs. per Sq. Ft.	Thickness. Inch.	Lbs. per Sq. Ft.	Thickness. Inch.	Lbs. per Sq. Ft.	Thickness. Inch.	Lbs. per Sq. Ft.	Thickness. Inch.	Lbs. per Sq. Ft.	Thickness. Inch.	Lbs. per Sq. Ft.	Thickness. Inch.
2·5	·042	4	·068	6	102	8	·136	10	·170	14	·237
3	·051	5	·085	7	119	9	·153	12	·203	16	·271

WEIGHT OF SHEET ZINC.

Gauge No.	Approximate Thickness.		Approximate weight per square foot.			Approximate weight of Sheets.								
						36 ins. × 72 ins.			36 ins. × 84 ins.			36 ins. × 96 ins.		
	In.	Mm.	lbs.	oz.	drms.	lbs.	oz.	drms.	lbs.	oz.	drms.	lbs.	oz.	drms.
3	0·007	0·171	...	3	15	4	6	14	5	2	11	5	14	8
4	0·008	0·209	...	4	13	5	6	10	6	5	1	7	3	8
5	0·010	0·247	...	5	11	6	6	6	7	7	7	8	8	8
6	0·011	0·291	...	6	11	7	8	6	8	12	7	10	0	8
7	0·013	0·337	...	7	12	8	11	8	10	2	12	12	10	0
8	0·015	0·386	...	8	14	9	15	12	11	10	6	13	5	0
9	0·018	0·450	...	10	5	11	9	10	13	8	9	15	7	8
10	0·020	0·500	...	11	7	12	13	14	15	0	3	17	2	8
12	0·026	0·660	...	15	2	17	0	4	19	13	10	22	11	0
14	0·032	0·820	1	2	12	21	1	8	24	9	12	28	2	0
16	0·043	1·080	1	8	12	27	13	8	32	7	12	37	2	0
18	0·053	1·340	1	14	11	34	8	6	40	4	7	46	0	8
20	0·063	1·600	2	4	10	41	3	4	48	1	2	54	15	0
22	0·077	1·960	2	12	14	50	7	12	58	14	6	67	5	0
24	0·091	2·320	3	5	3	59	13	6	69	12	15	79	12	8
26	0·105	2·680	3	13	7	69	1	14	80	10	3	92	2	8

SPECIFICATION OF SHEET METALS.

When specifying for sheet metals, care should be taken that the nature of the gauge is stated i.e. whether it is S.W.G., B.W.G., or Trade Gauge. In the case of 'Sheet Zinc,' for example, the Trade Gauge No. 20 is ·063 in. (see above, and Index, 'Sheet Zinc Trade Gauge'), but this if expressed in S.W.G. is 0·36 in. (see Index, 'Standard Wire Gauge').

WEIGHT AND AREA OF ALUMINIUM BAR AND STRIP.

Dimensions.				Area.		Weight.		Ampères at 600 per sq. in.
Inches.		Millimetres.		Sq. in.	Sq. mm.	Lbs./ft.	Kg./m.	
6	1/2	152	12·7	3·00	1,940	3·52	5·25	1,800
6	3/8	152	9·52	2·25	1,450	2·64	3·94	1,350
6	1/4	152	6·35	1·50	968	1·76	2·62	900
5	1/2	127	12·7	2·50	1,610	2·94	4·37	1,500
5	3/8	127	9·52	1·87	1,210	2·20	3·28	1,120
5	1/4	127	6·35	1·25	806	1·47	2·19	750
5	3/16	127	4·76	·937	605	1·10	1·64	562
4 1/2	1/2	114	12·7	2·25	1,450	2·64	3·94	1,350
4 1/2	3/8	114	9·52	1·69	1,090	1·98	2·95	1,010
4 1/2	1/4	114	6·35	1·12	726	1·32	1·97	675
4 1/2	3/16	114	4·76	·844	544	·991	1·47	506
4	1/2	102	12·7	2·00	1,290	2·35	3·50	1,200
4	3/8	102	9·52	1·50	967	1·76	2·62	900
4	1/4	102	6·35	1·00	645	1·17	1·75	600
3 1/2	1/4	88·9	6·35	·875	564	1·03	1·53	525
3 1/4	1/2	82·5	12·7	1·62	1,050	1·91	2·84	975
3 1/4	1/4	82·5	6·35	·812	524	·955	1·42	487
3	1/4	76·2	6·35	·750	484	·881	1·31	450
3	3/16	76·2	4·76	·562	363	·661	·983	337
2 3/4	1/4	69·4	6·35	·687	444	·808	1·20	412
2 9/16	3/8	65·1	9·52	·961	619	1·13	1·68	576
2 1/2	1/2	63·5	12·7	1·25	806	1·47	2·19	750
2 1/2	5/16	63·5	7·94	·781	504	·918	1·37	469
2 1/2	1/4	63·5	6·35	·625	403	·734	1·09	375
2 1/4	3/4	57·1	19·0	1·69	1,090	1·98	2·95	1,010
2 1/4	1/2	57·1	12·7	1·12	726	1·32	1·97	675
2 1/4	3/8	57·1	9·52	·844	544	·991	1·47	506
2 1/4	5/16	57·1	7·94	·703	454	·826	1·23	422
2 1/4	1/4	57·1	6·35	·562	363	·661	·983	337
2 1/4	3/16	57·1	4·76	·422	272	·496	·738	253
2	1/2	50·8	12·7	1·00	645	1·17	1·75	600
2	3/8	50·8	9·52	·750	484	·881	1·31	450
2	5/16	50·8	7·94	·625	403	·734	1·09	375
2	1/4	50·8	6·35	·500	323	·587	·875	300
2	3/16	50·8	4·76	·375	242	·441	·656	225
2	1/8	50·8	3·17	·250	161	·294	·437	150
1 13/16	5/16	46·0	7·94	·566	365	·665	·990	340
1 3/4	3/8	44·4	15·9	1·09	706	1·28	1·91	656
1 3/4	5/16	44·4	7·94	·547	353	·642	·956	328
1 3/4	1/4	44·4	6·35	·437	282	·514	·765	262
1 3/4	1/8	44·4	3·17	·219	141	·257	·383	131
1 5/8	1/4	41·3	6·35	·406	262	·477	·710	244
1 5/8	3/16	41·3	4·76	·305	197	·358	·533	183
1 1/2	1/2	38·1	12·7	·750	484	·881	1·31	450
1 1/2	3/8	38·1	9·52	·562	363	·661	·983	337
1 1/2	1/4	38·1	6·35	·375	242	·441	·666	225
1 1/2	3/16	38·1	4·76	·281	181	·330	·492	169
1 1/2	1/8	38·1	3·17	·187	121	·220	·328	112
1 7/16	1/4	36·5	3·17	·180	116	·211	·314	108
1 5/16	1/4	33·3	3·17	·164	106	·193	·287	98·4
1 1/4	3/8	31·7	9·52	·469	302	·551	·820	281
1 1/4	5/16	31·7	7·94	·391	252	·459	·683	234
1 1/4	1/4	31·7	6·35	·312	202	·367	·547	187
1 1/4	3/16	31·7	4·76	·234	151	·275	·410	141
1 1/4	1/8	31·7	3·17	·156	101	·183	·273	93·7
1 1/4	3/32	31·7	2·38	·117	75·6	·138	·205	70·3

(The British Aluminium Co. Ltd.)

WEIGHT IN POUNDS PER FOOT OF SHEET ALUMINIUM.

Size.		Thickness.			Size.		Thickness.		
S.W.G. Gauge.	Birmingham Sheet Metal Gauge.	In.	Mm.	Weight in Lbs. per Sq. Ft.	S.W.G. Gauge.	Birmingham Sheet Metal Gauge.	In.	Mm.	Weight in Lbs. per Sq. Ft.
		·375	9·525	5·18	15	21	·068	1·727	·940
3/0		·372	9·449	5·14		20	·065	1·651	·898
2/0		·348	8·839	4·81	16		·064	1·626	·885
1/0		·324	8·229	4·48		19	·063	1·600	·870
		·312	7·937	4·31			·062	1·587	·857
1	40	·300	7·620	4·15		18	·060	1·524	·829
	39	·289	7·341	3·99	17		·056	1·422	·774
	38	·278	7·061	3·84		17	·055	1·397	·760
2		·276	7·010	3·81		16	·051	1·295	·705
	37	·270	6·858	3·73	18		·048	1·219	·663
3		·252	6·401	3·48		15	·047	1·194	·649
	36	·250	6·350	3·45		14	·042	1·067	·580
	35	·238	6·045	3·29	19		·040	1·016	·552
4		·232	5·893	3·20		13	·038	·965	·525
	34	·216	5·486	2·98	20		·036	·914	·497
5		·212	5·385	2·93		12	·035	·889	·484
	33	·200	5·080	2·76	21		·032	·813	·482
6		·192	4·877	2·65		11	·031	·793	·429
		·187	4·762	2·58	22		·028	·711	·387
	32	·182	4·623	2·52		10	·027	·686	·373
7		·176	4·470	2·43	23		024	·610	·332
	31	·166	4·216	2·29		9	·023	·584	·318
8		·160	4·064	2·21	24		·022	·559	·304
	30	·150	3·810	2·07		8	·021	·533	·290
9		·144	3·658	1·99	25		·020	·508	·276
	29	·136	3·454	1·88		7	·019	·483	·262
10		·128	3·251	1·77	26		·018	·457	·249
		·125	3·175	1·73	27		·0164	·416	·227
	28	·124	3·150	1·71		6	·0160	·406	·221
11		·116	2·946	1·60			·0156	·397	·215
	27	·112	2·845	1·55	28		·0148	·376	·204
12		·104	2·642	1·44		5	·0140	·356	·193
	26	·100	2·540	1·38	29		·0136	·345	·188
13		·092	2·337	1·27	30		·0124	·315	·171
	25	·090	2·286	1·24		4	·0120	·305	·166
	24	·082	2·082	1·13		3	·0105	·254	·145
14		·080	2·032	1·11		2	·0090	·229	·125
	23	·077	1·956	1·07		1	·0080	·203	·111
15	22	·072	1·829	·995					

(The British Aluminium Co. Ltd.)

WEIGHT OF ANGLE AND TEE IRON PER FOOT RUN.

Breadth (Flanges Added).	Thickness in Fractions of an Inch.													
	$\frac{3}{16}$	$\frac{1}{4}$	$\frac{5}{16}$	$\frac{3}{8}$	$\frac{7}{16}$	$\frac{1}{2}$	$\frac{9}{16}$	$\frac{5}{8}$	$\frac{11}{16}$	$\frac{3}{4}$	$\frac{13}{16}$	$\frac{7}{8}$	$\frac{15}{16}$	1
Ins.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.
2	1·13	1·46	1·76	2·03										
$2\frac{1}{4}$	1·29	1·67	2·02	2·34										
$2\frac{1}{2}$	1·45	1·88	2·28	2·66	3·01									
$2\frac{3}{4}$	1·60	2·08	2·54	2·97	3·37									
3	1·76	2·29	2·80	3·28	3·74	4·17								
$3\frac{1}{4}$	1·91	2·50	3·06	3·59	4·10	4·58								
$3\frac{1}{2}$	2·07	2·71	3·32	3·91	4·47	5·00	5·51							
$3\frac{3}{4}$	2·23	2·92	3·58	4·22	4·83	5·42	5·98							
4	2·38	3·13	3·84	4·53	5·20	5·83	6·45	7·03						
$4\frac{1}{4}$	2·54	3·33	4·10	4·84	5·56	6·25	6·91	7·55						
$4\frac{1}{2}$	2·70	3·54	4·36	5·16	5·92	6·67	7·38	8·07	8·74					
$4\frac{3}{4}$	2·85	3·75	4·62	5·47	6·29	7·08	7·85	8·59	9·31					
5	3·01	3·96	4·88	5·78	6·65	7·50	8·32	9·11	9·88	10·63				
$5\frac{1}{4}$	3·16	4·17	5·14	6·09	7·02	7·92	8·79	9·64	10·46	11·25				
$5\frac{1}{2}$	3·32	4·38	5·40	6·41	7·38	8·33	9·26	10·16	11·03	11·88	12·70			
$5\frac{3}{4}$	3·48	4·58	5·66	6·72	7·75	8·75	9·73	10·68	11·60	12·50	13·37			
6	3·63	4·79	5·92	7·03	8·11	9·17	10·20	11·20	12·17	13·13	14·05	14·95		
$6\frac{1}{4}$	3·79	5·00	6·18	7·34	8·48	9·58	10·66	11·72	12·75	13·75	14·73	15·68		
$6\frac{1}{2}$	3·95	5·21	6·45	7·66	8·84	10·00	11·13	12·24	13·32	14·38	15·40	16·41	17·38	
$6\frac{3}{4}$	4·10	5·42	6·71	7·97	9·21	10·42	11·60	12·76	13·89	15·00	16·08	17·13	18·16	
7	4·26	5·63	6·97	8·28	9·57	10·83	12·07	13·28	14·47	15·63	16·76	17·86	18·95	20·00
$7\frac{1}{4}$	4·41	5·83	7·23	8·59	9·93	11·25	12·54	13·80	15·04	16·25	17·43	18·59	19·73	20·83
$7\frac{1}{2}$	4·57	6·04	7·49	8·91	10·30	11·67	13·01	14·32	15·61	16·88	18·11	19·32	20·51	21·67
$7\frac{3}{4}$	4·73	6·25	7·75	9·22	10·66	12·08	13·48	14·84	16 18	17·50	18·79	20·05	21·29	22·50
8	4·88	6·46	8·01	9·53	11·03	12·50	13·95	15·36	16·76	18·13	19·47	20·78	22·07	23·33
$8\frac{1}{4}$	5·04	6·67	8·27	9·84	11·39	12·92	14·41	15·89	17·33	18·75	20·14	21·51	22·85	24·17
$8\frac{1}{2}$	5·20	6·88	8·53	10·16	11·76	13·33	14·88	16·41	17·90	19·38	20·82	22·24	23·63	25·00
$8\frac{3}{4}$	5·35	7·08	8·79	10·47	12·12	13·75	15·35	16·93	18·48	20·00	21·50	22·97	24·41	25·83
9	5·51	7·29	9·05	10·78	12·49	14·17	15·82	17·45	19·05	20·63	22·17	23·70	25·20	26·67
$9\frac{1}{4}$	5·66	7·50	9·31	11·09	12·85	14·58	16·29	17·97	19·62	21·25	22·85	24·43	25·98	27·50
$9\frac{1}{2}$	5·82	7·71	9·57	11·41	13·22	15·00	16·76	18·49	20·19	21·88	23·53	25·16	26·76	28·33
$9\frac{3}{4}$	5·98	7·92	9·83	11·72	13·58	15·42	17·23	19·01	20·77	22·50	24·20	25·88	27·54	29·17

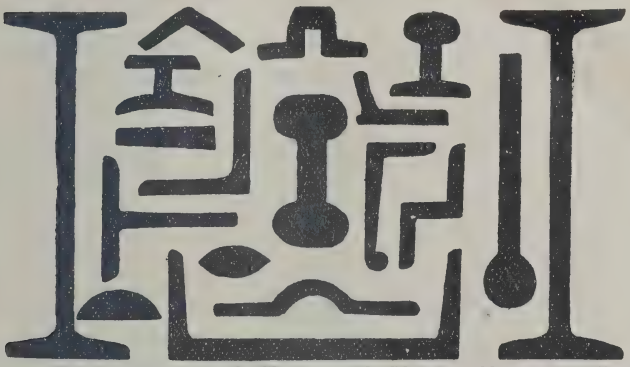
HENDERSON & GLASS,

Steel and Iron Merchants, LIVERPOOL.

Extensive and assorted Stocks of every description and section of Material for Engineers, Shipbuilders, Ironfounders, Contractors, &c., in Iron and Siemens-Martin Steel; also

ROLLED STEEL GIRDERS AND JOISTS.

All sizes from 3 to 20 inches deep and up to 40 feet lengths.




Ship, Boiler, Flitch and Chequered Plates, Channels, Round, Square, Flat Bars, Angles, &c.

COMPOSITE AND BUILT GIRDERS.

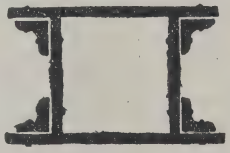QUOTATIONS AND SECTION SHEETS ON APPLICATION.





Telegraphic Address—
'VULCAN,'
LIVERPOOL.

Telephone Numbers—
443, 791 and 3711 Central.





SHIPMENT ORDERS PROMPTLY EXECUTED. CORRESPONDENCE SOLICITED.

Offices and Warehouses:

18, 20, & 22 VULCAN STREET, LIVERPOOL.

List of Steel Joists and Channels in Stock, see following page.

F. 224

Telegraphic Address—'VULCAN,' LIVERPOOL. **TELEPHONE Nos. 443, 791, & 3711 CENTRAL.**

HENDERSON & GLASS,

LIVERPOOL,

HAVE IN STOCK TO-DAY THE UNDERNOTED

ROLLED STEEL JOISTS AND GIRDERS.

DIMENSIONS, WEIGHTS PER FOOT, AND SAFE DISTRIBUTED LOADS OF **JOISTS,** IN STOCK, READY FOR IMMEDIATE DELIVERY.

Sections and weights per foot		6 ft. Tons	8 ft. Tons	10 ft. Tons	12 ft. Tons	14 ft. Tons	16 ft. Tons	18 ft. Tons	20 ft. Tons	22 ft. Tons	24 ft. Tons	26 ft. Tons	28 ft. Tons	30 ft. Tons	32 ft. Tons	34 ft. Tons	36 ft. Tons
	lbs.																
3 × 1¼ ...	4	1·17	·89	·69	·57	·50											
3 × 3 ...	8½	2·60	1·96	1·54	1·26	1·08											
4 × 1⅝ ...	5½	2·05	1·55	1·22	1·00	·87											
4 × 3 ...	9½	4·08	3·00	2·40	2·00	1·70											
4½ × 1⅝ ...	7	3·08	2·30	1·84	1·54	1·30											
5 × 3 ...	11	5·16	3·80	3·00	2·50	2·20	1·90	1·70	1·50								
5 × 4¼ ...	18	9·40	6·77	5·64	4·63	4·00	3·46	3·07	2·77								
6 × 3 ...	12	6·68	4·92	4·17	3·42	2·96	2·58	2·28	2·06	1·87	1·71	1·58					
6 × 5 ...	25	16 32	12 25	10 00	8·50	7·20	6·40	5·60	5·10	4 80	4·30	3·95	3·55				
7 × 4 ...	16	12·96	9·60	7·80	6·50	5·60	4·70	4·20	3·80	3·50	3 25	3·00	2·78	2·60			
8 × 4 ...	18	17·00	12·50	10·20	8·30	7·28	6·37	5·66	5·10	4·65	4·30	3 95	3·68	3·40			
8 × 5 ...	28		16·30	13·00	10·80	9·30	8·10	7·20	6·50	5·90	5·40	5·00	4·70	4·10			
8 × 6 ...	35		18·40	14·32	11·76	10·14	9·20	8·50	7·60	6·90	6·33	5·86	5·37	5 00	4 69		
9 × 4 ...	21		13·52	11·25	9·21	7·98	6·96	6·14	5·56	5·05	4·60	4·26	3 85	3·68	3·46	3·25	3·07
9 × 7 ...	58			34·20	28·90	24·30	21·40	19·20	17·10	15·40	14·60	13·00	12·10	11·60	10 60	9·60	9·00
10 × 5 ...	30			16·75	13·75	11·86	10·26	9·13	8·26	7·45	6·85	6·18	5·91	5·49	5·15	4·84	4·56
10 × 6 ...	42			23·00	19·00	16·50	14·40	12·70	11·55	10·40	9·50	8·75	8·20	7·60	7·10	6·70	6·35
12 × 5 ...	32			27·55	23·00	19 50	17·40	15·30	13·75	12·50	11 50	10·60	9·90	9·25	8·65	8·10	7·20
12 × 6 ...	44			31·16	25·65	22·27	19·53	17·34	15 78	14·21	13·10	12·12	11·40	10·56	10·00	9·62	9·00
14 × 6 ...	47			36·08	29·80	25·70	22·37	20·01	18·10	16·49	15·13	13·80	13 25	12·36	11·57	10·97	10·44
16 × 6 ...	62			63·12	52·43	45·00	39·25	35·00	31 20	28·24	25·80	23·77	22·00	21·00	19·60	18·70	17·00
18 × 7 ...	75			71·00	58·32	50·29	43·54	38·72	34 96	31·60	29·07	26·62	25·05	23·25	21·86	20·53	19·36
20 × 7½ ...	89			93·90	76·32	65·81	56·99	50·68	45·74	41 86	38·05	35·17	32·79	30·42	28·60	26·88	25·34
24 × 7½ ...	100			110·00	92·00	78·90	69·00	61·30	55·20	50·20	46·00	42·50	39·40	36·70	34·50	32·50	30.00

STEEL CHANNELS IN STOCK.

2 × 1½ × 1½ about 4½ lbs. per ft. } In 22, 23 and 24
3 × 1½ „ 6 „ „ } feet lengths.

4 × 2 × 2	about	8 lbs. per ft.	
5 × 2½ × 2½	„	11 „ „	In 18, 21, 23, 25, 30, and 35 ft. lengths.
6 × 3 × 3	„	16 „ „	
8 × 3½ × 3½	„	23 „ „	
10 × 3½ × 3½	„	23½ „ „	
12 × 3½ × 3½	„	26 „ „	

The Safe Carrying Loads are approximate, and not guaranteed excepting by special agreement.

WEIGHT OF ANGLE AND TEE IRON PER FOOT RUN (*continued*).

Breadth (Flanges Added).	Thickness in Fractions of an Inch.												
	3/16	1/4	5/16	3/8	7/16	1/2	9/16	5/8	11/16	3/4	13/16	7/8	15/16	1
Ins.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.
10	6·13	8·13	10·09	12·03	13·95	15·83	17·70	19·53	21·34	23·13	24·88	26·61	28·32	30·00
10¼	6·29	8·33	10·35	12·34	14·31	16·25	18·16	20·05	21·91	23·75	25·56	27·34	29·10	30·83
10½	6·45	8·54	10·61	12·66	14·67	16·67	18·63	20·57	22·49	24·38	26·24	28·07	29·88	31·67
10¾	6·60	8·75	10·87	12·97	15·04	17·08	19·10	21·09	23·06	25·00	26·91	28·80	30·66	32·50
11	6·76	8·96	11·13	13·28	15·40	17·50	19·57	21·61	23·63	25·63	27·59	29·53	31·45	33·33
11¼	..	9·17	11·39	13·59	15·77	17·92	20·04	22·13	24·21	26·25	28·27	30·26	32·23	34·17
11½	..	9·38	11·65	13·91	16·13	18·33	20·51	22·66	24·78	26·88	28·95	30·99	33·01	35·00
11¾	..	..	11·91	14·22	16·50	18·75	20·98	23·18	25·35	27·50	29·62	31·72	33·79	35·83
12	..	..	12·17	14·53	16·86	19·17	21·45	23·70	25·92	28·13	30·30	32·45	34·57	36·67
12¼	..	..	..	14·84	17·23	19·58	21·91	24·22	26·50	28·75	30·98	33·18	35·35	37·50
12½	..	..	..	15·16	17·59	20·00	22·38	24·74	27·07	29·38	31·65	33·91	36·13	38·33
12¾	..	..	..	..	17·96	20·42	22·85	25·26	27·64	30·00	32·33	34·64	36·91	39·17
13	..	..	..	..	18·32	20·83	23·32	25·78	28·22	30·63	33·01	35·36	37·70	40·00
13½	..	..	..	..	..	21·67	24·26	26·82	29·36	31·88	34·36	36·82	39·26	41·67
14	..	..	..	..	..	22·50	25·20	27·86	30·51	33·13	35·72	38·28	40·82	43·33
14½	..	..	..	..	..	23·33	26·13	28·91	31·65	34·38	37·07	39·74	42·38	45·00
15	..	..	..	..	..	24·17	27·07	29·95	32·80	35·63	38·42	41·20	43·95	46·67

(Henderson & Glass.)

WEIGHT OF ANGLE AND TEE STEEL PER FOOT RUN.

Breadth (Flanges added.)	Thickness in Fractions of an Inch.											
	3/16	1/4	5/16	3/8	7/16	1/2	9/16	5/8	11/16	3/4	13/16	7/8
Ins.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.
2	1·16	1·49	1·79	2·07								
2¼	1·32	1·70	2·06	2·39								
2½	1·47	1·91	2·32	2·71	3·07							
2¾	1·63	2·13	2·59	3·03	3·44							
3	1·79	2·34	2·86	3·35	3·81	4·25						
3¼	1·95	2·55	3 12	3·67	4·18	4·68						
3½	2·11	2·76	3·39	3·98	4·56	5·10	5·62					
3¾	2·27	2·98	3·65	4·30	4·93	5·53	6·10					
4	2·43	3·19	3·92	4·62	5·30	5·95	6·57	7·17				
4¼	2·59	3·40	4·18	4·94	5·67	6·38	7·05	7·70				

WEIGHT OF ANGLE AND TEE STEEL PER FOOT RUN—*continued.*

Breadth (Flanges added).	Thickness in Fractions of an Inch.											
	3/16	1/4	5/16	3/8	7/16	1/2	9/16	5/8	11/16	3/4	13/16	7/8
Ins.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.
4½	2·75	3·61	4·45	5·26	6·04	6·80	7·53	8·23	8·91			
4¾	2·91	3·83	4·72	5·58	6·42	7·23	8·01	8·77	9·50			
5	3·07	4·04	4·98	5·90	6·79	7·65	8·49	9·30	10·08	10·84		
5¼	3·23	4·25	5·25	6·22	7·16	8·08	8·97	9·83	10·67	11·48		
5½	3·39	4·46	5·51	6·53	7·53	8·50	9·44	10·36	11·25	12·11	12·95	
5¾	3·55	4·68	5·78	6·85	7·90	8·93	9·92	10·89	11·83	12·75	13·64	
6	3·71	4·89	6·04	7·17	8·27	9·35	10·40	11·42	12·42	13·39	14·33	15·25
6¼	3·87	5·10	6·31	7·49	8·65	9·78	10·88	11·95	13·00	14·03	15·02	15·99
6½	4·02	5·31	6·57	7·81	9·02	10·20	11·36	12·48	13·59	14·66	15·71	16·73
6¾	4·18	5·53	6·84	8·13	9·39	10·63	11·83	13·02	14·17	15·30	16·40	17·48
7	4·34	5·74	7·11	8·45	9·76	11·05	12·31	13·55	14·76	15·94	17·09	18·22
7¼	4·50	5·95	7·37	8·77	10·13	11·48	12·79	14·08	15·34	16·58	17·78	18·97
7½	4·66	6·16	7·64	9·08	10·51	11·90	13·27	14·61	15·92	17·21	18·47	19·71
7¾	4·82	6·38	7·90	9·40	10·88	12·33	13·75	15·14	16·51	17·85	19·17	20·45
8	4·98	6·59	8·17	9·72	11·25	12·75	14·22	15·67	17·09	18·49	19·86	21·20
8¼	5·14	6·80	8·43	10·04	11·62	13·18	14·70	16·20	17·68	19·13	20·55	21·94
8½	5·30	7·01	8·70	10·36	11·99	13·60	15·18	16·73	18·26	19·76	21·24	22·68
8¾	5·46	7·23	8·97	10·68	12·37	14·03	15·66	17·27	18·85	20·40	21·93	23·43
9	5·62	7·44	9·23	11·00	12·74	14·45	16·14	17·80	19·43	21·04	22·62	24·17
9¼	5·78	7·65	9·50	11·32	13·11	14·88	16·62	18·33	20·02	21·68	23·31	24·92
9½	5·94	7·86	9·76	11·63	13·48	15·30	17·09	18·86	20·60	22·31	24·00	25·66
9¾	6·10	8·08	10·03	11·95	13·85	15·73	17·57	19·39	21·18	22·95	24·69	26·40
10	6·26	8·29	10·29	12·27	14·22	16·15	18·05	19·92	21·77	23·59	25·38	27·15
10¼	6·42	8·50	10·56	12·59	14·60	16·58	18·53	20·45	22·35	24·23	26·07	27·89
10½	6·57	8·71	10·82	12·91	14·97	17·00	19·01	20·98	22·94	24·86	26·76	28·63
10¾	6·73	8·93	11·09	13·23	15·34	17·43	19·48	21·52	23·52	25·50	27·45	29·38
11	6·89	9·14	11·36	13·55	15·71	17·85	19·96	22·05	24·11	26·14	28·14	30·12
11¼	—	9·35	11·62	13·87	16·08	18·38	20·44	22·58	24·69	26·78	28·83	30·87
11½	—	9·56	11·89	14·18	16·46	18·70	20·92	23·11	25·27	27·41	29·52	31·61
11¾	—	—	12·15	14·50	16·83	19·13	21·40	23·64	25·86	28·05	30·22	32·36
12	—	—	12·42	14·82	17·20	19·55	21·87	24·17	26·44	28·69	30·91	33·10

(*Henderson & Glass.*)

EBONITE SHEET.

Thickness.			Approx. Weight per Sheet.					
			36 × 18 ins. (914× 457 m/m.)		24 × 24 ins. (610 × 610 m/m.)		36 × 24 ins. (914 × 610 m/m.)	
Ins.	Ins.	m/m.	lbs.	kgs.	lbs.	kgs.	lbs.	kgs.
...	0·015	0·38	0·42	0·19	0·37	0·17	0·56	0·25
...	0·025	0·64	0·70	0·32	0·63	0·29	0·94	0·43
...	0·040	1·02	1·12	0·51	1·00	0·45	1·50	0·68
...	0·060	1·52	1·68	0·76	1·50	0·68	2·25	1·02
...	0·090	2·29	2·52	1·14	2·25	1·02	3·37	1·53
1/8	0·125	3·18	3·51	1·59	3·12	1·42	4·69	2·13
3/16	0·187	4·75	5·26	2·39	4·67	2·12	7·01	3·18
1/4	0·250	6·35	7·02	3·18	6·25	2·84	9·38	4·26
5/16	0·312	7·93	8·77	3·98	7·80	3·54	11·70	5·31
3/8	0·375	9·53	10·55	4·79	9·37	4·25	14·06	6·38
7/16	0·437	11·10	12·29	5·58	10·92	4·95	16·40	7·44
1/2	0·500	12·70	14·04	6·37	12·50	5·67	18·75	8·51
5/8	0·625	15·88	17·55	7·96	15·62	7·09	23·43	10·63
3/4	0·750	19·05	21·06	9·55	18·74	8·50	28·12	12·76
7/8	0·875	22·23	24·60	11·16	21·86	9·91	32·80	14·88
1	1·000	25·40	28·12	12·76	25·00	11·34	37·50	17·01

EBONITE ROD.

Diameter.			Approx. Weight per 100 metres.	Diameter.			Approx. Weight per 100 metres.
Ins.	Ins.	m/m.	Lbs.	Ins.	Ins.	m/m.	Lbs.
1/64	0·0156		0·032	1/2	0·500		33·50
	0·0197	1/2	0·052	7/2	0·532	13½	37·85
1/32	0·0312		0·13	9/16	0·562		42·33
	0·0394	1	0·20		0·571	14½	43·66
1/16	0·0625		0·52	19/32	0·594		47·28
	0·0689	1¾	0·63		0·610	15½	49·90
	0·0787	2	0·83	5/8	0·625		52·35
3/32	0·0937		1·18		0·630	16	53·17
	0·0984	2½	1·29	21/32	0·656		57·67
1/8	0·125		2·09		0·669	17	60·00
	0·137	3½	2·54	11/16	0·687		63·25
5/32	0·157	4	3·23		0·709	18	67·30
3/16	0·187		4·69	23/32	0·719		69·27
7/32	0·217	5½	6·28		0·728	18½	71·08
1/4	0·250		8·37	3/4	0·750		75·37
	0·256	6½	8·77		0·768	19½	78·98
9/32	0·282		10·65	25/32	0·781		81·72
	0·295	7½	11·68		0·787	20	83·08
5/16	0·312		13·05	13/16	0·812		88·35
	0·315	8	13·29		0·827	21	91·60
11/32	0·344		15·86	27/32	0·844		95·45
3/8	0·375	9½	18·85		0·866	22	100·5
13/32	0·406		22·09	7/8	0·875		102·6
	0·413	10½	22·90	29/32	0·905	23	110·0
7/16	0·437		25·60	15/16	0·937		117·6
	0·453	11½	27·47		0·945	24	120·0
15/32	0·468		29·35	1	1·000	25·4	134·0
	0·472	12	29·90				

(*Siemens Bros. & Co.*)

Weight of Pipes and Tubes.

WEIGHT OF WROUGHT-IRON PIPES PER FOOT RUN.

Bore.	Thickness of Metal in Parts of an Inch.							
	1/16	1/8	3/16	1/4	5/16	3/8	7/16	1/2
Ins.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.
1/4	·21	·5	·9	1·3	1·9	2·5	3·1	3·9
3/8	·3	·7	1·1	1·6	2·3	2·9	3·8	4·6
1/2	·4	·83	1·4	2·0	2·7	3·5	4·3	5·3
5/8	·46	1·1	1·6	2·3	3·1	3·9	4·9	5·9
3/4	·54	1·2	1·9	2·6	3·5	4·5	5·5	6·6
7/8	·6	1·3	2·1	2·9	3·9	4·9	6·1	7·3
1	·7	1·5	2·4	3·3	4·3	5·5	6·7	7·9
1 1/4	·87	1·8	2·9	3·9	5·2	6·4	7·8	9·3
1 1/2	1·0	2·1	3·3	4·7	5·9	7·4	8·9	10·6
1 3/4	1·2	2·5	3·8	5·3	6·8	8·4	10·1	11·9
2	1·4	2·8	4·3	5·9	7·6	9·5	11·3	13·2
2 1/4	1·53	3·1	4·8	6·6	8·5	10·4	12·4	14·5
2 1/2	1·7	3·5	5·3	7·3	9·3	11·4	13·6	15·9
2 3/4	1·9	3·8	5·8	7·9	10·1	12·4	14·7	17·2
3	2·03	4·1	6·3	8·6	10·9	13·3	15·9	18·5

WEIGHTS OF GAS AND STEAM PIPE.

Gas Sizes.	Gas Pipe.	Steam Pipe.	Gas Sizes	Gas Pipe.	Steam Pipe.
Ins.	Lbs. per Ft.	Lbs. per Ft.	Ins.	Lbs. per Ft.	Lbs. per Ft.
1/8	·27	·32	1 3/4	3·642	4·356
1/4	·40	·486	2	4·21	5·07
3/8	·56	·68	2 1/4	4·614	5·49
1/2	·84	1·01	2 1/2	5·349	6·333
3/4	1·20	1·43	2 3/4	5·874	6·953
1	1·67	2·01	3	6·347	7·52
1 1/4	2·34	2·80	3 1/2	7·213	8·551
1 1/2	3·10	3·76	4	8·097	9·601

(*John Russell & Co., Ltd.*)

STANDARD WEIGHTS AND DIMENSIONS OF CAST-IRON WATER-MAIN PIPES.

Internal Diam. of Pipe.	Length of each Pipe.	Depth of Socket.	Thickness of Metal.	Mean Weight of each Pipe.	Internal Diam. of Pipe.	Length of each Pipe.	Depth of Socket.	Thickness of Metal.	Mean Weight of each Pipe.
Ins.	Ft. Ins.	Ins.	Ins.	cwt. qrs. lbs.	Ins.	Ft. Ins.	Ins.	Ins.	cwt. qrs. lbs.
2	6 3	3	5/16	0 2 0	18	12 4½	4½	3/4	14 2 16
3	9 4	3	3/8	1 0 14	19	12 4½	4½	—	—
4	9 4	3	3/8	1 2 0	20	12 4½	4½	3/4	20 0 0
5	9 4	3½	7/16	2 0 0	21	12 4½	4½	—	—
6	9 4	3½	7/16	2 2 0	22	12 4½	4½	3/4	22 3 14
7	9 4	3½	1/2	3 1 14	23	12 4	5	—	—
8	9 4	4	1/2	3 2 0	24	12 4	5	7/8	24 0 0
9	9 4	4	1/2	4 2 0	26	12 5	5	—	—
10	9 4	4	9/16	5 1 0	28	12 5	5	—	—
11	12 4	4 1/2	5/8	—	30	12 5	5	1	35 3 0
12	12 4½	4½	5/8	8 2 0	32	12 5	5	—	—
13	12 4½	4½	—	—	34	12 5	5	—	—
14	12 4½	4½	5/8	10 2 0	36	12 5	5	1	41 0 0
15	12 4½	4½	5/8	11 2 0	40	12 5	5	1 1/8	48 2 0
16	12 4½	4½	5/8	13 2 0	42	12 5	5	1 1/8	50 2 0
17	12 4½	4½	—	—	48	12 5½	5½	1 1/8	64 0 0

(*The Stavely Coal and Iron Co.*)

WEIGHT OF ORDINARY COPPER PIPES PER FOOT RUN.

Bore.	Thickness of Metal in Parts of an Inch.						
	1/16	1/8	3/16	1/4	5/16	3/8	7/16
Ins.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.
1/2	·23	·56	·99	1·51	2·13	2·83	3·64
1/2	·42	·94	1·56	2·27	3·07	3·97	4·96
3/4	·61	1·32	2·13	3·02	4·02	5·11	6·29
1	·80	1·70	2·69	3·78	4·96	6·24	7·61
1 1/4	·99	2·08	3·26	4·54	5·91	7·38	8·94
1 1/2	1·18	2·46	3·83	5·29	6·85	8·51	10·26
1 3/4	1·37	2·84	4·40	6·05	7·80	9·64	11·58
2	1·56	3·22	4·96	6·81	8·75	10·78	12·91
2 1/4	1·75	3·59	5·53	7·56	9·69	11·92	14·23
2 1/2	1·94	3·97	6·10	8·32	10·64	13·06	15·56
2 3/4	2·13	4·35	6·67	9·08	11·59	14·19	16·88
3	2·31	4·73	7·24	9·74	12·53	15·32	18·21

WEIGHT OF ORDINARY BRASS PIPES PER FOOT RUN.

Bore.	Thickness of Metal in Parts of an Inch.						
	1/16	1/8	3/16	1/4	5/16	3/8	7/16
Ins.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.
1/4	·22	·53	·94	1·43	2·01	2·68	3·44
1/2	·40	·89	1·47	2·15	2·91	3·75	4·70
3/4	·58	1·25	2·01	2·86	3·80	4·83	5·95
1	·76	1·61	2·55	3·58	4·70	5·92	7·25
1 1/4	·94	1·96	3·09	4·31	5·64	6·98	8·46
1 1/2	1·12	2·34	3·67	5·01	6·49	8·05	9·71
1 3/4	1·33	2·66	4·14	5·70	7·36	9·11	10·94
2	1·48	3·04	4·69	6·44	8·27	10·20	12·21
2 1/4	1·65	3·40	5·23	7·16	9·17	11·27	13·46
2 1/2	1·83	3·75	5·77	7·87	10·06	12·35	14·72
2 3/4	2·01	4·11	6·31	8·59	10·96	13·42	15·97
3	2·19	4·47	6·84	9·31	11·85	14·69	17·42

WEIGHT OF LEAD PIPES, SIZES AND WEIGHTS USUALLY MANUFACTURED.

Bore.	Length.	Weight and Thickness of each Length.					
		Common.		Middling.		Strong.	
		Thickness.	Weight.	Thickness.	Weight.	Thickness.	Weight.
Ins.	Ft.	In.	Lbs.	In.	Lbs.	In.	Lbs.
1/2	15	·11	16	·15	22	·17	26
3/4	15	·12	24	·13	27	·15	30
1	15	·12	30	·15	39	·16	42
1 1/4	12	·14	36	·16	44	·20	53
1 1/2	12	·16	48	·18	56	·21	67
2	10	·15	50	·18	60	·21	70
2 1/2	10	·17	70	·21	86	·24	100

FORMULÆ FOR WEIGHT OF LEAD PIPING.

$15{\cdot}517\,(D-t)\,t$ lbs. per foot; $81930\,(D-t)\,t$ lbs. per mile; $36{\cdot}576\,(D-t)\,t$ tons per mile; where D = external diameter in inches, t = thickness in inches.

APPROXIMATE WEIGHTS
(Based on the Imperial

Thickness, I.W.G. Ins. m/m.	15 ·072 1·829	14 ·080 2·032	13 ·092 2·337	12 ·104 2·642	11 ·116 2·946	10 ·128 3·251	9 ·144 3·658	8 ·160 4·064	7 ·176 4·470	6 ·192 4·877	5 ·212 5·385
External Diam. Ins.											WEIGHT PER
1	0·700	0·771	0·875	0·976	1·074	1·169	1·291	1·407	1·519	1·624	1·749
1⅛	0·794	0·875	0·995	1·112	1·226	1·336	1·479	1·617	1·749	1·876	2·027
1¼	0·888	0·980	1·116	1·248	1·377	1·504	1·668	1·826	1·979	2·127	2·304
1⅜	0·982	1·085	1·236	1·384	1·529	1·671	1·856	2·036	2·210	2·378	2·582
1½	1·077	1·190	1·356	1·520	1·681	1·839	2·045	2·245	2·440	2·630	2·859
1⅝	1·171	1·294	1·477	1·656	1·833	2·007	2·233	2·455	2·671	2·881	3·137
1¾	1·265	1·399	1·597	1·793	1·985	2·174	2·422	2·664	2·901	3·132	3·414
1⅞	1·359	1·504	1·718	1·929	2·137	2·342	2·610	2·873	3·131	3·384	3·692
2	—	1·608	1·838	2·065	2·288	2·509	2·799	3·083	3·362	3·635	3·969
2⅛	—	1·713	1·959	2·201	2·440	2·677	2·987	3·292	3·592	3·886	4·247
2¼	—	1·818	2·079	2·337	2·592	2·844	3·176	3·502	3·822	4·138	4·524
2⅜	—	—	2·199	2·473	2·744	3·012	3·364	3·711	4·053	4·389	4·802
2½	—	—	2·320	2·609	2·896	3·179	3·553	3·921	4·283	4·640	5·079
2⅝	—	—	2·440	2·745	3·048	3·347	3·741	4·130	4·514	4·892	5·357
2¾	—	—	2·561	2·882	3·200	3·514	3·930	4·339	4·744	5·143	5·634
2⅞	—	—	2·681	3·018	3·351	3·682	4·118	4·549	4·974	5·394	5·912
3	—	—	2·802	3·154	3·503	3·850	4·307	4·758	5·205	5·646	6·189
3⅛	—	—	—	3·290	3·655	4·017	4·495	4·968	5·435	5·897	6·467
3¼	—	—	—	3·426	3·807	4·185	4·684	5·177	5·665	6·148	6·744
3⅜	—	—	—	3·562	3·959	4·352	4·872	5·387	5·896	6·400	7·022
3½	—	—	—	3·698	4·111	4·520	5·061	5·596	6·126	6·651	7·299
3⅝	—	—	—	3·835	4·262	4·687	5·249	5·806	6·357	6·902	7·577
3¾	—	—	—	3·971	4·414	4·855	5·438	6·015	6·587	7·154	7·854
3⅞	—	—	—	4·107	4·566	5·022	5·626	6·224	6·817	7·405	8·132
4	—	—	—	4·247	4·718	5·190	5·815	6·434	7·048	7·656	8·410
4⅛	—	—	—	4·506	5·022	5·525	6·192	6·853	7·509	8·159	8·965
4¼	—	—	—	4·776	5·325	5·860	6·569	7·272	7·969	8·662	9·520
4⅜	—	—	—	5·056	5·631	6·195	6·946	7·690	8·430	9·164	10·075
5	—	—	—	5·336	5·937	6·530	7·323	8·109	8·891	9·667	10·630
5¼	—	—	—	5·600	6·243	6·866	7·700	8·528	9·352	10·170	11·185
5½	—	—	—	5·876	6·549	7·201	8·077	8·947	9·812	10·672	11·740
5¾	—	—	—	6·152	6·857	7·536	8·454	9·366	10·273	11·175	12·295
6	—	—	—	6·432	7·164	7·871	8·831	9·785	10·734	11·678	12·850
6½	—	—	—	6·715	7·471	8·213	9·208	10·204	11·195	12·180	13·405
6½	—	—	—	7·000	7·778	8·555	9·585	10·623	11·655	12·683	13·960
6¾	—	—	—	7·273	8·087	8·897	9·962	11 042	12·116	13·186	14·515
7	—	—	—	7·556	8·393	9·239	10·339	11·460	12·577	13·688	15·070
7¼	—	—	—	7·834	8·700	9·581	10·716	11·880	13·038	14·191	15·625
7½	—	—	—	8·115	9·007	9·923	11·083	12·300	13·499	14·694	16·180
7¾	—	—	—	8·383	9·314	10·265	11·460	12·720	13·959	15·196	16·735
8	—	—	—	8·664	9·621	10·607	11·847	13·135	14·420	15·699	17·290
8½	—	—	—	8·943	9·928	10·949	12·224	13·554	14·880	16·204	17·845
8½	—	—	—	9·227	10·235	11·291	12·601	13·973	15·340	16·710	18·400
8¾	—	—	—	9·516	10·542	11·633	12·978	14·400	15·800	17·216	18·955
9	—	—	—	9·807	10·850	11·985	13·355	14·818	16·260	17·722	19·510
9¼	—	—	—	10·073	11·158	12·327	13·732	15·230	16·720	18·230	20·065
9½	—	—	—	10·342	11·466	12·669	14·109	16·656	17·180	18·738	20·620
9¾	—	—	—	10·604	11·774	13·011	14·486	16·070	17·640	19·230	21·175
10	—	—	—	10·878	12·082	13·353	14·863	16·507	18·100	19·735	21·730
10¼	—	—	—	11·156	12·390	13·695	15·240	16·922	18·563	20·242	22·285
10½	—	—	—	11·428	12·698	14·042	15·617	17·344	19·024	20·753	22·840
10¾	—	—	—	11·687	13·006	14·384	15·994	17·768	19·482	21·255	23·395
11	—	—	—	11·952	13·314	14·726	16·371	18·185	19·940	21·756	23·950
11½	—	—	—	12·516	13·930	15·410	17·125	19·016	20·860	22·758	25·053
12	—	—	—	13·050	14·550	16·100	17·878	19·855	21·780	23·760	26·200

OF WROUGHT IRON TUBES.
Standard Wire Gauge.)

4 ·232 5·893	3 ·252 6·401	2 ·276 7·010	1 ·300 7·620	1/8 ·125 3·175	5/16 ·187 4·762	1/4 ·250 6·350	5/16 ·313 7·937	3/8 ·375 9·525	7/16 ·437 11·112	1/2 ·500 12·700	Thickness, I.W.G. Ins. m/m.
FOOT IN POUNDS.											External Diam. Ins.
1·866	1·974	2·092	2·199	1·145	1·595	1·963	2·250	2·454	2·577	2·618	1
2·169	2·304	2·454	2·592	1·309	1·841	2·291	2·659	2·945	3·150	3·272	1¼
2·473	2·634	2·815	2·984	1·473	2·086	2·618	3·068	3·436	3·723	3·927	1½
2·777	2·963	3·176	3·377	1·636	2·332	2·945	3·477	3·927	4·295	4·581	1⅝
3·081	3·293	3·538	3·770	1·800	2·577	3·272	3·886	4·418	4·868	5·236	1¾
3·384	3·623	3·899	4·163	1·963	2·822	3·600	4·295	4·909	5·440	5·890	1⅞
3·688	3·953	4·260	4·555	2·127	3·068	3·927	4·704	5·400	6·013	6·545	2
3·992	4·283	4·621	4·948	2·291	3·313	4·254	5·113	5·890	6·586	7·199	2¼
4·295	4·613	4·983	5·341	2·454	3·559	4·581	5·522	6·381	7·159	7·854	2
4·599	4·943	5·344	5·733	2·618	3·804	4·909	5·931	6·872	7·731	8·508	2¼
4·903	5·273	5·705	6·126	2·782	4·050	5·236	6·340	7·363	8·304	9·163	2½
5·206	5·602	6·067	6·519	2·945	4·295	5·563	6·749	7·854	8·877	9·817	2⅝
5·510	5·932	6·428	6·911	3·109	4·541	5·890	7·159	8·345	9·449	10·472	2¾
5·814	6·262	6·789	7·304	3·272	4·786	6·218	7·568	8·836	10·022	11·126	2⅞
6·117	6·592	7·150	7·697	3·436	5·031	6·545	7·977	9·327	10·595	11·781	3
6·421	6·922	7·512	8·090	3·600	5·277	6·872	8·386	9·818	11·167	12·435	3¼
6·725	7·252	7·873	8·482	3·763	5·522	7·200	8·795	10·308	11·740	13·090	3
7·028	7·582	8 234	8·875	3 927	5·768	7·527	9·204	10·799	12·313	13·744	3½
7·332	7·911	8·596	9·268	4·091	6·013	7·854	9·613	11·290	12·885	14·399	3¾
7·636	8·241	8·957	9·660	4·254	6·259	8·181	10·022	11·781	13·458	15·053	3⅞
7·940	8 571	9·318	10·053	4·418	6·504	8·508	10·431	12·272	14·031	15·708	4
8·243	8·901	9·679	10·446	4·581	6·750	8·836	10·840	12·763	14·604	16·362	4¼
8·547	9·231	10·041	10·838	4·745	6·995	9·163	11·249	13·254	15·176	17·017	4⅜
8·851	9 561	10·402	11·231	4·908	7·240	9·490	11·658	13·745	15·749	17·671	4½
9·154	9·891	10·763	11·624	5·072	7·486	9·817	12·067	14·235	16·322	18·326	4
9·762	10·550	11·486	12·409	5·400	7·977	10·472	12·885	15·217	17·467	19·635	4¼
10·369	11·210	12·208	13·195	5·727	8·468	11·126	13·704	16·199	18·612	20·944	4½
10·976	11·870	12·931	13·980	6·054	8·959	11·781	14·522	17·181	19·758	22·253	4¾
11·584	12·530	13·654	14·765	6·381	9·450	12·435	15·340	18·162	20·903	23·562	5
12·191	13·189	14·376	15·551	6·709	9·940	13·090	16·158	19·144	22·048	24·871	5¼
12·798	13·849	15·099	16·336	7·036	10·431	13·744	16·976	20·126	23·194	26·180	5½
13·406	14·509	15·821	17·122	7·363	10·922	14·399	17·794	21·108	24·339	27·489	5¾
14·013	15·169	16·544	17·907	7·690	11·413	15·053	18·612	22·090	25·485	28·798	6
14·621	15·828	17·266	18·692	8·017	11·904	15·708	19·430	23·071	26·630	30·107	6¼
15·228	16·488	17·989	19·478	8·345	12·395	16·362	20·249	24·053	27·775	31·416	6½
15·835	17·184	18·712	20·263	8·672	12·886	17·017	21·067	25·035	28·921	32·725	6¾
16·443	17·807	19·434	21·048	8·999	13·376	17·671	21·885	26·017	30·066	34·034	7
17·050	18·467	20·157	21·834	9·327	13·867	18·326	22·703	26·998	31·212	35·343	7¼
17·658	19 127	20·879	22·619	9·654	14·358	18·980	23·521	27·980	32·357	36·652	7½
18·265	19·787	21·602	23·405	9·981	14·849	19·635	24 339	28·962	33·502	37·961	7¾
18·872	20·446	22·324	24·190	10·308	15·340	20·289	25·157	29·944	34·648	39·270	8
19·480	21·106	23·047	24·976	10·636	15·831	20·944	25·975	30·925	35·793	40·579	8¼
20·087	21·766	23·769	25·761	10·963	16·322	21·598	26·794	31·907	36·938	41·888	8½
20·694	22·426	24·492	26·546	11·290	16·813	22·253	27·612	32·889	38·084	43·197	8¾
21·302	23·085	25·215	27·332	11·617	17·303	22·907	28·430	33·871	39 229	44·506	9
21·909	23·745	25·937	28·117	11·945	17·794	23·562	29·248	34·852	40·375	45·815	9¼
22·517	24·405	26·660	28·903	12·272	18·285	24·216	30·066	35·834	41·520	47·124	9½
23·124	25·065	27·382	29·688	12·599	18·776	24·871	30·884	36·816	42·665	48·433	9¾
23·731	25 724	28·105	30·473	12·926	19·267	25·525	31·702	37·708	43·811	49·742	10
24·338	26·383	28·828	31·258	13·253	19·758	26·179	32·520	38·780	45·957	51·052	10¼
24·945	27 042	29·551	32·043	13·580	20·249	26·833	33·338	39·762	46·103	52·361	10½
25·535	27·702	30·274	32·828	13·910	20·740	27·487	34·156	40·744	47·250	53·670	10¾
26·162	28·362	31·002	33·613	14·237	21·231	28·141	34·974	41·726	48·396	54·980	11
27·376	29·682	32·445	35·183	14·897	22·213	29·450	36·610	43·690	50·690	57·600	11½
28·590	31·002	33·891	36·753	15·550	23·195	30·758	38·246	45·654	52·984	60·215	12

(John Spencer, Ltd.)

Weight of Cast-Iron Pipes per Foot Run.

Inner Diam. or Bore in Inches.	Thickness of Metal in Inches.												
	¼	⅜	½	⅝	¾	⅞	1	1⅛	1¼	1⅜	1½	1¾	2
	Wt. in Lbs.	Wt. in Lbs.	Wt. in Lbs.	Wt. in Lbs.	Wt. in Lbs.	Wt. in Lbs.	Wt. in Lbs.	Wt. in Lbs.	Wt. in Lbs.	Wt. in Lbs.	Wt. in Lbs.	Wt. in Lbs.	Wt. in Lbs.
1	3·07	5·07	7·38	9·99	12·9	16·2	19·7	23·5	27·7	32·1	36·9	47·4	59·1
1¼	3·69	6·00	8·61	11·5	14·8	18·3	22·2	26·3	30·8	35·5	40·6	51·7	64·0
1½	4·30	6·92	9·84	13·1	16·6	20·5	24·6	29·1	33·8	38·9	44·3	56·0	68·9
1⅝	4·92	7·84	11·1	14·6	18·5	22·6	27·1	31·8	36·9	42·3	48·0	60·3	73·8
2	5·53	8·76	12·3	16·2	20·3	24·8	29·5	34·6	40·0	45·7	51·7	64·6	78·7
2¼	6·15	9·69	13·5	17·7	22·2	26·9	32·0	37·4	43·1	49·0	55·4	68·9	86·7
2½	6·76	10·6	14·8	19·2	24·0	29·1	34·5	40·1	46·1	52·4	59·1	73·2	88·6
2⅝	7·37	11·5	16·0	20·8	25·9	31·2	36·9	42·9	49·2	55·8	62·7	77·5	93·5
3	7·98	12·5	17·2	22·3	27·7	33·4	39·4	45·7	52·3	59·2	66·4	81·8	98·4
3¼	8·60	13·4	18·5	23·8	29·5	35·5	41·8	48·3	55·4	62·3	70·1	86·1	103
3½	9·21	14·3	19·7	25·4	31·4	37·7	44·3	51·2	58·4	65·9	73·8	90·4	108
3⅝	9·83	15·2	20·9	26·9	33·2	39·8	46·8	54·0	61·5	69·3	77·5	94·7	113
4	10·3	16·1	22·2	28·5	35·1	42·0	49·2	56·7	64·6	72·7	81·2	99·0	118
4¼	11·1	17·1	23·4	30·0	36·9	44·1	51·7	59·5	67·7	76·1	84·9	103	123
4½	11·7	18·0	24·6	31·5	38·8	46·3	54·1	62·3	70·7	79·5	88·6	108	128
4⅝	12·3	18·9	25·8	33·1	40·6	48·5	56·6	65·0	73·8	83·9	92·3	112	133
5	12·9	19·8	27·1	34·6	42·5	50·6	59·1	67·8	76·9	87·2	96·0	116	138
5¼	13·5	20·8	28·3	36·1	44·3	52·8	61·5	70·6	80·0	90·6	99·6	121	143
5½	14·2	21·7	29·5	37·7	46·1	54·9	64·0	73·3	83·0	94·0	103	125	148
5⅝	14·8	22·6	30·8	39·2	48·0	57·1	66·4	76·1	86·1	97·4	107	129	153
6	15·4	23·5	32·0	40·8	49·8	59·2	68·9	78·9	89·2	99·8	111	134	158
6½	16·6	25·4	34·5	43·8	53·5	63·5	73·8	84·4	95·3	107	118	142	167
7	17·8	27·2	36·9	46·9	57·2	67·8	78·7	89·4	102	113	126	151	177
7½	19·1	29·1	39·4	50·0	60·9	72·1	83·7	95·5	108	120	133	159	187
8	20·3	30·9	41·8	53·1	64·6	76·4	88·6	101	114	127	140	168	197
8½	21·5	32·8	44·3	56·1	68·3	80·7	93·5	107	120	134	148	177	207
9	22·8	34·6	46·8	59·2	72·0	85·1	98·4	112	126	140	155	185	217
9½	24·0	36·4	49·2	62·3	75·7	89·3	103	118	132	147	163	194	226
10	25·1	38·3	51·7	65·3	79·4	93·6	108	123	138	154	170	202	235
10½	26·4	40·1	54·1	68·4	83·0	97·9	113·2	129	145	161	177	211	245
11	27·6	42·0	56·6	71·5	86·7	102	118	134	151	168	185	220	255
11½	28·8	43·8	59·1	74·6	90·4	107	123	140	157	174	192	228	265
12	30·0	45·7	61·5	77·7	94·1	111	128	145	163	181	199	237	275
13	32·5	49·4	66·4	83·8	102	120	138	156	175	195	214	254	294
14	35·0	53·1	71·4	89·4	109	128	148	168	188	208	229	271	314
15	37·4	56·7	76·3	96·1	116	137	158	179	200	222	244	289	334
16	39·1	60·4	81·2	102	124	145	167	190	212	235	258	306	353
17	42·3	64·1	86·1	108	131	154	177	201	225	249	273	323	373
18	44·8	67·8	91·0	115	139	163	187	212	237	262	288	340	393
19	47·3	71·5	96·0	121	146	171	197	223	249	276	303	357	412
20	49·7	75·2	101	127	153	180	207	234	261	289	317	375	432
21	52·2	78·9	106	133	161	188	217	245	274	303	332	392	452
22	54·6	82·6	111	139	168	196	227	256	286	316	347	409	471
23	57·1	86·3	116	145	175	206	236	267	298	330	362	426	491
24	59·6	89·9	121	152	183	214	246	278	311	343	375	444	511
25	62·0	93·6	126	158	190	223	256	289	323	357	391	461	531
26	64·5	97·3	131	164	198	231	266	300	335	370	406	478	550
27	66·9	101	135	170	205	240	276	311	348	384	421	495	570
28	69·4	105	140	176	212	249	286	323	360	397	436	512	590
29	71·8	109	145	182	220	257	295	334	372	411	450	530	609
30	74·2	112	150	188	227	266	305	345	384	424	465	547	629
31	76·7	116	155	195	234	275	315	356	397	438	480	564	649
32	79·1	120	160	201	242	283	325	367	409	451	495	581	668
33	81·6	123	165	207	249	292	335	378	421	465	509	598	688
34	84·1	127	170	213	257	300	345	389	434	479	524	616	709
35	86·5	131	175	219	264	309	354	400	446	492	539	633	726
36	89·0	134	180	225	271	318	364	411	458	506	554	650	746
42	104	156	210	262	315	370	423	478	532	588	644	753	864
48	119	178	239	298	359	422	482	544	605	669	733	856	982

ESTABLISHED 1837.

Contractors to the Admiralty, War Office, &c.

THE CLAY CROSS CO., LTD.,

Near CHESTERFIELD.



Clay Cross Foundry—General View of Pipe Bank.

COLLIERY PROPRIETORS. **House, Steam and Gas Coal.**

MAKERS OF

Patent Fuel Economisers. Gas and Water Pipes. Cast-iron Tanks. Tubbing and Curbs. Columns and Castings for Sewerage, Gas, and Water Works. Pig Iron. Lime. Coke. Bricks. Slag. Tarred Slag. Sulphate of Ammonia. Tar. Benzol.

Telegraphic Code used :—A B C (5th Edition).

Telegrams : 'JACKSON, CLAYCROSS.'

Telephone : 479 CHESTERFIELD.

SPOTTISWOODE BALLANTYNE

& COMPANY LTD.

GENERAL PRINTERS
LITHOGRAPHERS &
ELECTROTYPERS

Solicit your Inquiries for high-class Printing. ¶ Clever artists, modern types, and the latest labour-saving machinery enable them to produce superior work at minimum cost. ¶ If desired, preliminary sketches submitted with estimates. *Established* 1739

AT THE SIGN OF THE FALCON



1 NEW STREET SQUARE
LONDON
E.C.4

Telephone : Holborn 2260 (5 lines)

Telegrams : "Spottiswoode, Phone, London"

Dimensions.			Spigot and Faucet Joints.			Turned and Bored Joints.			Flanged Joints.					
Inside Diameter.	(A) Thickness of Metal.	Length exclusive of Faucet.	Average Weight per Pipe.			Average Weight per Pipe.			Inside Diameter.	(B) Thickness of Metal.	Length over Flanges.	Average Weight per Pipe.		
Ins.	Ins.	Ft.	Cwts.	Qrs.	Lbs.	Cwts.	Qrs.	Lbs.	Ins.	Ins.	Ft.	Cwts.	Qrs.	Lbs.
¾	7/32	4½			14½				2	5/16	6		1	21
1	¼	6			22		1	0	2½	5/16	9		3	2
1¼	¼	6			26		1	5	2½	½	9	1	1	7
1½	¼	6		1	2		1	7	3	5/16	9	1	0	0
1½	9/32	6		1	7		1	13	3	⅜	9	1	0	13
2	¼	6		1	14		1	20	3	½	9	1	2	0
2	5/16	6		1	22		2	0	3	⅝	9	2	0	0
2	11/32	6		2	0		2	8	3½	⅜	9	1	1	3
2½	5/16	6		2	0		2	7	3½	½	9	1	3	0
2½	5/16	9		3	0		3	10	4	⅜	9	1	1	21
2½	11/32	9		3	14		3	21	4	7/16	9	1	2	24
3	5/16	9		3	14		3	21	4	½	9	2	0	0
3	11/32	9	1	0	0	1	0	7	4	⅝	9	2	2	4
3	⅜	9	1	0	10	1	0	17	4½	½	9	2	0	21
3½	5/16	9	1	0	14	1	0	21	4½	9/16	9	2	2	0
4	11/32	9	1	1	14	1	1	21	5	½	9	2	1	21
4	⅜	9	1	2	0	1	2	7	5	⅝	9	3	0	14
4½	11/32	9	1	2	14	1	2	21	5½	½	9	2	2	14
5	⅜	9	1	3	14	1	3	21	6	7/16	9	2	2	0
5	13/32	9	2	0	0	2	0	7	6	½	9	2	3	14
5½	⅜	9	2	0	11	2	0	18	6	⅝	9	3	2	14
6	13/32	9	2	1	14	2	1	14	7	½	9	3	1	7
6	7/16	9	2	2	0	2	2	9						
7	7/16	9	2	3	14	2	3	24						
7	½	9	3	1	4	3	1	14						

(*Macfarlane, Strang & Co., Ltd.*)

Standard Weights of Cast-Iron Water-Pipe Fittings.

Internal Diameter of Pipes and Fittings in Inches.

Description.	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
	c.q.lbs.	c.q.lbs.	c.q.lbs.	c.q.lbs.	c.q.lbs.	c.q.lbs.	c.q.lbs.	c.q.lbs.	c.q.lbs.	c.q.lbs.	c.q.lbs.	c.q.lbs.	c.q.lbs.	c.q.lbs.	c.q.lbs.	c.q.lbs.
Pipes	0 2 0	1 0 14	1 2 0	2 0 0	2 2 0	3 1 14	3 2 0	4 1 0	6 3 0		8 2 0		10 2 0	11 2 0	13 2 0	
Bends $\frac{1}{16}$-in.	0 1 6	0 2 0	0 3 4	1 0 0	1 1 7	1 3 7	2 2 0	3 0 4	3 2 0		4 1 9		5 3 0	6 0 0	7 0 0	
Bends $\frac{1}{8}$ in.	0 1 7	0 2 2	0 3 0	0 3 27	1 1 7	1 3 25	2 2 7	3 0 4	3 1 14		4 1 7		5 2 0	6 1 0	6 3 0	
Bends $\frac{1}{4}$ in.	0 1 7	0 2 7	0 3 7	1 0 16	1 2 0	1 3 14	2 2 7	3 0 21	3 1 21		4 1 0		5 3 0	6 2 6	7 1 0	
Cross-pipe	0 2 21	0 3 18	1 0 14	1 1 7	1 3 21	2 1 21	2 3 0	4 0 0	4 3 0		6 2 0		6 2 0	10 0 0	10 2 0	
S bend	0 1 21	0 2 0	0 3 21	1 0 4	1 3 0	2 0 0	2 3 0	3 1 0	3 3 0		5 2 0					
Bevel arm-piece or Y-piece spigots	0 2 0	0 3 0	1 0 7	1 1 14	1 2 7	2 0 9	2 3 0	3 1 0	4 1 0		6 2 0	Made to Drawings.				
Bevel arm-piece or Y-piece sockets	0 2 7	0 3 14	1 0 21	1 2 0	1 3 0	2 1 7	2 3 0	3 1 0	4 3 0		6 2 0					
Arm-pipe or branch	0 3 0	0 3 21	1 1 0	1 1 21	1 3 7	2 1 14	3 0 0	3 2 0	4 3 14		5 2 0		8 0 0	9 1 0	9 2 14	
Tee-pipe	0 1 7	0 3 0	1 0 0	1 1 13	1 2 4	2 1 0	3 1 0	3 2 14	4 0 0		5 1 7		7 2 14	9 0 0	9 1 0	
Wash-out pipe	0 2 14	0 2 21	0 3 21	1 0 16	1 1 14	1 2 14	1 3 20	2 2 0	3 0 0		1 2 0		1 3 0	2 0 0	2 3 0	
Collar or thimble	0 0 20	0 0 24	0 1 4	0 1 14	0 2 0	0 2 21	0 3 14	1 0 0	1 1 10		1 2 2		1 3 14	1 3 25	2 0 18	
Cap	0 0 12	0 0 18	0 0 24	0 1 2	0 1 12	0 2 0	0 2 14	0 3 0	0 3 9		1 0 4		1 1 21	1 2 7	1 3 0	
Reducers	3″–2″ 0 1 0	4″–3″ 0 2 0	5″–4″ 0 2 7	6″–5″ 0 3 14	7″–6″ 1 0 0	8″–7″ 1 1 10	9″–8″ 1 3 21	10″–9″ 2 0 0	12″–10″ 2 3 21		14″–12″ 3 3 18	Made to Drawings.				

Description.	18	19	20	21	22	23	24	26	28	30	32	34	36	40	42	48
	c.q.lbs.	c.q.lbs.	c.q.lbs.	c.q.lbs.	c.q.lbs.	c.q.lbs.	c.q.lbs.	c.q.lbs.	c.q.lbs.	c.q.lbs.	c.q.lbs.	c.q.lbs.	c.q.lbs.	c.q.lbs.	c.q.lbs.	c.q.lbs.
Pipes	14 2 16		20 0 0		22 3 14		24 0 0			35 3 0			41 0 0	48 2 0	50 2 0	64 0 0
Bends $\frac{1}{16}$ in.	7 3 7		9 1 21													
Bends $\frac{1}{8}$ in.	7 2 7		11 1 14				13 0 7			18 3 0						
Bends $\frac{1}{4}$ in.	7 3 16		10 3 21				13 1 6									
Cross-pipe	11 2 0		14 0 0				17 0 0									
S bend																
Bevel arm-piece or Y-piece spigots																
Bevel arm-piece or Y-piece sockets								Made	Specially to Drawings.							
Arm-pipe or branch	10 2 0		12 0 0				15 0 0									
Tee-pipe	10 1 0		11 2 0				14 1 10									
Wash-out pipe	3 1 0		4 0 0													
Collar or thimble	3 0 25		3 2 10				5 2 10									
Cap	2 1 0		3 0 0				4 2 10									
Reducers																

Pipes 2-in. bore in 6 ft. 3 ins. lengths; 3-in. bore to 9 ins., 9 ft. 4 ins. lengths; 9-in. bore to 48 ins., 12 ft. 4 ins. lengths.

The pipes are vertically cast in dry sand, socket down, and are tested to a pressure of 500 feet head (216 lbs. per sq. in.) of water; the fittings are tested to the same pressure. *(The Staveley Coal and Iron Co.)*

APPROXIMATE WEIGHT OF SOCKET PIPES AND FITTINGS.

Socket Pipes.

Inside Diam.	Length ex. Socket.	Depth of Socket.	Diam. of Socket.	Weight per Length.	Inside Diam.	Length ex. Socket.	Depth of Socket.	Diam. of Socket.	Weight per Length.
ins.	ft. ins.	ins.	ins.	c. q. lbs.	ins.	ft. ins.	ins.	ins.	c. q. lbs.
1½	6 0	2¾	3¼	1 0 to 1 10 / 1 14	6	9 0	4½	7½	2 1 14 / 2 1 21 / 2 2 0
2	6 0	3	3¼	1 21 / 2 0	7	9 0	5	8¾	2 3 14 to 3 0 0
2½	6 0	3½	3¾	2 0 to 2 14 / 3 14	8	9 0	5	9¾	3 1 14 to 3 3 0
3	9 0	3½	4¼	3 21 / 1 0 0	9	9 0	5	10¾	3 3 14 to 4 2 0
3½	9 0	4	4¾	1 1 0 / 1 1 14	10	9 0	5	11¾	4 2 0 / 5 0 0
4	9 0	4	5½	1 1 21 / 1 2 0	12	9 0	5	13¾	5 3 0 / 6 2 0
4½	9 0	4	6	1 3 2 / 1 3 14	12	12 0	5	13¾	8 3 0
5	9 0	4½	6½	1 3 21 / 2 0 0					

Connections.

Description.	1½ in.	2 in.	2½ in.	3 in.	3½ in.	4 in.	5 in.	6 in.	7 in.	8 in.	9 in.	10 in.	12 in.
	q. lbs.	c.q.lbs.	c.q.lbs.	c.q.lbs.	c.q.lbs.	c.q.lbs.	c.q.lbs.	c.q.lbs.	c.q.lbs.	c.q.lbs.	c.q.lbs.	c.q.lbs.	c.q.lbs.
Elbow	10	19	26	1 6	1 16	2 0	3 0	3 18	1 1 24	1 2 14	2 0 10	2 3 0	—
¼ bend	13	26	1 6	1 10	1 22	2 8	1 0 0	1 1 14	2 0 20	2 3 21	3 0 14	4 1 12	4 2 0
⅛ ,,	13	24	25	1 7	—	2 0	3 26	1 1 8	1 3 22	2 3 20	3 1 14	3 2 0	3 8 0
¼ ,,	—	20	25	1 8	—	1 27	2 25	1 1 0	—	—	3 0 0	3 1 7	4 0 14
Tee	1 7	1 18	2 5	2 24	3 6	3 19	1 0 21	1 2 10	2 2 7	3 0 18	4 0 16	4 1 0	5 2 0
Branch	1 9	1 24	2 12	3 0	—	1 0 10	1 1 14	1 2 14	3 0 0	3 1 6	3 3 24	4 2 10	5 2 21
Collar	11	16	20	26	1 2	1 16	1 20	2 10	3 0	3 17	3 10	1 0 14	1 2 0
Syphon bend ,,													
Plug pipe	—	1 10	1 20	1 25	—	2 12	2 27						
End plug pipe	—	—	—	2 20	—	2 26	3 12						
,, ,, New Style													
Ducksfoot bend	—	1 16	—	2 7	—	3 16							
Syphon and cover	3 26	1 2 0	—	2 0 0	—	2 1 0	2 2 14	3 1 21	5 0 21	5 1 14	6 0 14	7 0 0	8 1 0
,, ,, new style	—	1 1 17	—	1 3 16	—	2 0 25	3 0 15	3 0 21	—	3 2 7	—	—	9 3 0
Cross	—	1 27	—	3 16	—	1 0 16	1 2 12	2 0 4					
Double bend 4½ cen.	—	—	—	1 16	—	2 7							
,, 6 ,,	—	—	—	1 17	—	2 10							
,, 7 ,,													
,, 9 ,,	—	—	—	1 18	—	2 14							
,, 12 ,,	—	—	—	1 28	—	3 0							
,, 13½ ,,	—	—	—	2 0	—	3 0							
,, 15 ,,													
,, 18 ,,													
,, 21 ,,													
Cap	8	8	9	15	18	23	1 1	1 8	1 24	2 10	2 22	3 12	1 1 20
Angle branch	—	1 24	—	3 0	—	3 24	1 1 14	1 3 14					

Reducing Pipes.

Size.	c. q. lb.	Size.	c. q. lb.	Size.	q.lb.	Size.	q.lb.	Size.	lbs.
12 in. to 10 in.	3 0 7	8 in. to 6 in.	1 3 14	5 in. to 4 in.	3 10	2 to 1¼ in.	1 6	3 to 2 in., 2 in. socket	25
10 ,, 9	3 0 2	7 ,, 6	1 2 0	5 ,, 3	3 0 6	,, 5 in., 5 in. socket	2 14		
10 ,, 8	2 2 25	7 ,, 5	1 1 21	4 ,, 3	2 18 6	,, 4 ,, ,,	1 25		
9 ,, 8	2 1 20	6 ,, 5	1 0 8	4 ,, 2	2 8 5	,, 4 ,, ,,	1 18		
9 ,, 7	2 0 8	6 ,, 4	1 0 4	3 ,, 2½	2 6 4	,, 3 ,, ,,	1 9		
8 ,, 7	2 0 0	6 ,, 3	1 0 0	3 ,, 2	1 24	,, 2 ,, ,,	1 3		

(Bailey, Pegg & Co.)

WEIGHT OF SEAMLESS COPPER TUBES.

S.W.G.	Thickness of Copper.																						
	000	000	00	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
Inches.	·400	·372	·348	·324	·300	·276	·252	·232	·212	·192	·176	·160	·144	·128	·116	·104	·092	·080	·072	·064	·056	·048	·040	·036
F=full. B=bare.	13/32B	3/8B	11/32F	21/64B	19/64F	9/32B	1/4F	15/64B	7/32B	3/16F	11/64F	5/32F	9/64F	1/8F	7/64F	7/64B	8/32	5/64F	5/64B	1/16F	1/16B	3/64F	3/64B	1/32F
Millimètres.	10·160	9·449	8·839	8·229	7·620	7·010	6·401	5·893	5·385	4·877	4·470	4·064	3·658	3·251	2·946	2·262	2·337	2·032	1·829	1·626	1·422	1·219	1·016	0·914
Internal Diam.	Weight of a Lineal Foot in Pounds.																							
Inches. Mm.																								
1/8 3·2	2·54	2·24	1·99	1·76	1·54	1·34	1·15	1·00	·86	·74	·64	·55	·47	·39	·34	·29	·24	·20	·17	·15	·12	·10	·08	·07
1/4 6·3	3·14	2·80	2·52	2·25	2·00	1·76	1·53	1·35	1·18	1·03	·91	·79	·69	·58	·51	·44	·38	·32	·28	·24	·21	·17	·14	·12
3/8 9·5	3·75	3·36	3·04	2·74	2·45	2·17	1·91	1·70	1·50	1·32	1·17	1·04	·90	·78	·69	·60	·52	·44	·39	·34	·29	·25	·20	·18
1/2 12·7	4·35	3·92	3·57	3·23	2·90	2·59	2·29	2·05	1·83	1·61	1·44	1·28	1·12	·97	·86	·76	·66	·56	·50	·44	·38	·32	·26	·23
5/8 15·9	4·96	4·49	4·10	3·72	3·36	3·01	2·67	2·40	2·15	1·90	1·70	1·52	1·34	1·17	1·04	·92	·80	·68	·61	·53	·46	·39	·32	·29
3/4 19·0	5·56	5·05	4·62	4·21	3·81	3·43	3·05	2·76	2·47	2·19	1·97	1·76	1·56	1·36	1·21	1·07	·94	·80	·72	·63	·55	·46	·38	·34
7/8 22·2	6·17	5·61	5·15	4·70	4·26	3·84	3·44	3·11	2·79	2·48	2·24	2·00	1·77	1·55	1·39	1·23	1·08	·92	·82	·73	·63	·54	·44	·40
1 25·4	6·77	6·17	5·67	5·19	4·72	4·26	3·82	3·46	3·11	2·77	2·50	2·24	1·99	1·75	1·57	1·39	1·21	1·04	·93	·82	·71	·61	·50	·45
1 1/8 28·6	7·38	6·74	6·20	5·68	5·17	4·68	4·20	3·81	3·43	3·06	2·77	2·49	2·21	1·94	1·74	1·55	1·35	1·17	1·04	·92	·80	·68	·56	·51
1 1/4 31·7	7·98	7·30	6·73	6·17	5·62	5·09	4·58	4·16	3·75	3·35	3·04	2·73	2·43	2·13	1·92	1·70	1·49	1·29	1·15	1·02	·88	·75	·62	·56
1 3/8 34·9	8·59	7·86	7·25	6·66	6·08	5·51	4·96	4·51	4·07	3·64	3·30	2·97	2·65	2·33	2·09	1·86	1·63	1·41	1·26	1·11	·97	·83	·68	·61
1 1/2 38·1	9·19	8·42	7·78	7·15	6·53	5·93	5·34	4·86	4·39	3·93	3·57	3·21	2·86	2·52	2·27	2·02	1·77	1·53	1·37	1·21	1·05	·90	·74	·67
1 5/8 41·3	9·80	8·99	8·31	7·64	6·99	6·35	5·72	5·21	4·71	4·22	3·83	3·45	3·08	2·71	2·44	2·17	1·91	1·65	1·48	1·31	1·14	·97	·81	·72
1 3/4 44·4	10·40	9·55	8·83	8·13	7·44	6·76	6·10	5·56	5·03	4·51	4·10	3·70	3·30	2·91	2·62	2·33	2·05	1·77	1·59	1·40	1·22	1·04	·87	·78
1 7/8 47·6	11·01	10·11	9·36	8·62	7·89	7·18	6·48	5·91	5·35	4·80	4·37	3·94	3·52	3·10	2·79	2·49	2·19	1·89	1·70	1·50	1·31	1·12	·93	·83
2 50·8	11·61	10·67	9·88	9·11	8·35	7·60	6·86	6·26	5·67	5·09	4·63	4·18	3·73	3·29	2·97	2·65	2·33	2·01	1·80	1·60	1·39	1·19	·99	·89
2 1/8 54·0	12·22	11·24	10·41	9·60	8·80	8·02	7·25	6·61	5·99	5·38	4·90	4·42	3·95	3·49	3·14	2·80	2·47	2·13	1·91	1·69	1·48	1·26	1·05	·94
2 1/4 57·1	12·82	11·80	10·94	10·09	9·25	8·43	7·63	6·97	6·31	5·67	5·16	4·66	4·17	3·68	3·32	2·96	2·61	2·25	2·02	1·79	1·56	1·33	1·11	1·00
2 3/8 60·3	13·43	12·36	11·46	10·58	9·71	8·85	8·01	7·32	6·63	5·96	5·43	4·91	4·39	3·88	3·50	3·12	2·75	2·38	2·13	1·89	1·65	1·41	1·17	1·05
2 1/2 63·5	14·03	12·92	11·99	11·07	10·16	9·27	8·39	7·67	6·95	6·25	5·70	5·15	4·61	4·07	3·67	3·28	2·88	2·50	2·24	1·98	1·73	1·48	1·23	1·10
2 5/8 66·7	14·64	13·49	12·52	11·56	10·62	9·69	8·77	8·02	7·28	6·54	5·96	5·39	4·82	4·26	3·85	3·43	3·02	2·62	2·35	2·08	1·82	1·55	1·29	1·16
2 3/4 69·8	15·24	14·05	13·04	12·05	11·07	10·10	9·15	8·37	7·60	6·83	6·23	5·63	5·04	4·46	4·02	3·59	3·16	2·74	2·46	2·18	1·90	1·62	1·35	1·21
2 7/8 73·0	15·85	14·61	13·57	12·54	11·52	10·52	9·53	8·72	7·92	7·12	6·50	5·87	5·26	4·65	4·20	3·75	3·30	2·86	2·57	2·27	1·99	1·70	1·41	1·27
3 76·2	16·45	15·17	14·09	13·03	11·98	10·94	9·91	9·07	8·24	7·41	6·76	6·12	5·48	4·84	4·37	3·90	3·44	2·98	2·68	2·37	2·07	1·77	1·47	1·32
3 1/8 82·5	17·66	16·30	15·15	14·01	12·88	11·77	10·68	9·77	8·88	7·99	7·29	6·60	5·91	5·23	4·72	4·22	3·72	3·22	2·89	2·57	2·24	1·91	1·59	1·43
3 1/4 88·9	18·87	17·42	16·20	14·99	13·79	12·61	11·44	10·47	9·52	8·58	7·83	7·08	6·35	5·62	5·07	4·53	4·00	3·46	3·11	2·76	2·41	2·06	1·71	1·54
3 3/8 95·2	20·08	18·55	17·25	15·97	14·70	13·44	12·20	11·18	10·16	9·16	8·36	7·57	6·78	6·00	5·42	4·85	4·28	3·71	3·33	2·95	2·58	2·20	1·83	1·65
4 101·6	21·29	19·67	18·30	16·95	15·61	14·28	12·96	11·88	10·80	9·74	8·89	8·05	7·22	6·39	5·78	5·16	4·55	3·95	3·55	3·15	2·75	2·35	1·95	1·76
4 1/4 107·9	22·50	20·80	19·36	17·93	16·51	15·11	13·72	12·58	11·44	10·32	9·42	8·54	7·65	6·78	6·13	5·48	4·83	4·19	3·76	3·34	2·92	2·50	2·08	1·87
4 1/2 114·3	23·71	21·93	20·41	18·91	17·42	15·95	14·49	13·28	12·08	10·90	9·96	9·02	8·09	7·17	6·48	5·79	5·11	4·43	3·98	3·53	3·09	2·64	2·20	1·97
4 3/4 120·6	24·92	23·05	21·46	19·89	18·33	16·78	15·25	13·98	12·73	11·48	10·49	9·50	8·53	7·55	6·83	6·11	5·39	4·67	4·20	3·73	3·26	2·79	2·32	2·08
5 127·0	26·13	24·18	22·51	20·87	19·23	17·62	16·01	14·68	13·37	12·06	11·02	9·99	8·96	7·94	7·18	6·42	5·67	4·92	4·42	3·92	3·42	2·93	2·44	2·19
5 1/4 133·3	27·34	25·30	23·57	21·85	20·14	18·45	16·77	15·39	14·01	12·64	11·55	10·47	9·40	8·33	7·53	6·74	5·95	5·16	4·64	4·11	3·59	3·08	2·56	
5 1/2 139·7	28·55	26·43	24·62	22·83	21·05	19·29	17·54	16·09	14·65	13·22	12·08	10·96	9·83	8·71	7·88	7·05	6·22	5·40	4·85	4·31	3·76	3·22	2·68	
5 3/4 146·0	29·76	27·55	25·67	23·81	21·96	20·12	18·30	16·79	15·29	13·80	12·62	11·44	10·27	9·10	8·23	7·36	6·50	5·64	5·07	4·50	3·93	3·37	2·80	
6 152·4	30·97	28·68	26·72	24·79	22·86	20·95	19·06	17·49	15·93	14·38	13·15	11·92	10·70	9·49	8·58	7·68	6·78	5·88	5·29	4·69	4·10	3·51	2·92	

THE BROUGHTON COPPER CO. Ld.,

Telegrams:
'COPPER CO.'

MANCHESTER.

TELEPHONE:
6624 Central.

Copper Smelters and Manufacturers.

INGOTS, PLATES, SHEETS, RODS, &c., in COPPER & YELLOW METAL.

COPPER, BRASS, & BRONZE TUBES & CYLINDERS

OF ALL DESCRIPTIONS.

Electro-Coppering, Copper-Coated Cylinders, Shafts, Rams for Hydraulic Presses, &c.

HIGH-CONDUCTIVITY COPPER TUBES, RODS, STRIPS, DYNAMO CONNECTIONS, CABLE SOCKETS, COMMUTATOR BARS, SECTIONS, &c.

Phosphor Copper and Bronze, Manganese Bronze, Aluminium Copper, Nickel-Copper, and other Copper Alloys, Babbitt Metals, &c.

ALSO AT

DITTON COPPER WORKS, WIDNES. 6 BROAD STREET PLACE, LONDON. HYDE PARK STREET, GLASGOW.

THE BROUGHTON COPPER CO. Ld.,

Telegrams: 'COPPER CO.'

MANCHESTER.

TELEPHONE: 6624 Central.

Copper Smelters and Manufacturers.

INGOTS, PLATES, SHEETS, RODS, &c., in COPPER & YELLOW METAL.

COPPER, BRASS, & BRONZE TUBES & CYLINDERS

OF ALL DESCRIPTIONS.

Electro-Coppering, Copper-Coated Cylinders, Shafts, Rams for Hydraulic Presses, &c.

HIGH-CONDUCTIVITY COPPER TUBES, RODS, STRIPS, DYNAMO CONNECTIONS, CABLE SOCKETS, COMMUTATOR BARS, SECTIONS, &c.

Phosphor Copper and Bronze, Manganese Bronze, Aluminium Copper, Nickel-Copper, and other Copper Alloys, Babbitt Metals, &c.

ALSO AT

DITTON COPPER WORKS, WIDNES. 6 BROAD STREET PLACE, LONDON. HYDE PARK STREET, GLASGOW

F. 237

S.W.G.	Thickness of Copper.																							
	0000	000	00	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
Inches.	·400	·372	·348	·324	·300	·276	·252	·232	·212	·192	·176	·160	·144	·128	·116	·104	·092	·080	·072	·064	·056	·048	·040	·036
F=full. B=bare.	13/32B	3/8B	11/32F	21/64B	19/64F	9/32B	1/4F	15/64B	7/32B	3/16F	11/64F	5/32F	9/64F	1/8F	7/64F	7/64B	3/32	5/64F	5/64B	1/16F	1/16B	3/64F	3/64B	1/32F
Millimètres.	10·160	9·449	8·839	8·229	7·620	7·010	6·401	5·893	5·385	4·877	4·470	4·064	3·658	3·251	2·946	2·642	2·337	2·032	1·829	1·626	1·422	1·219	1·016	·914
Internal Diam.	Weight of a Lineal Foot in Pounds.																							
Inches. Mm.																								
6¼ 158·7	32·18	29·80	27·78	25·77	23·77	21·79	19·82	18·19	16·57	14·96	13·68	12·41	11·14	9·88	8·93	7·99	7·06	6·13	5·51	4·89	4·27	3·66		
6½ 165·1	33·39	30·93	28·83	26·75	24·68	22·62	20·58	18·89	17·21	15·54	14·21	12·89	11·57	10·26	9·28	8·31	7·34	6·37	5·72	5·08	4·44	3·80		
6¾ 171·4	34·60	32·05	29·88	27·73	25·59	23·46	21·35	19·60	17·85	16·12	14·75	13·37	12·01	10·65	9·63	8·62	7·61	6·61	5·94	5·28	4·61	3·95		
7 177·8	35·81	33·18	30·93	28·71	26·49	24·29	22·11	20·30	18·50	16·70	15·28	13·86	12·44	11·04	9·99	8·94	7·89	6·85	6·16	5·47	4·78	4·09		
7¼ 184·1	37·02	34·30	31·99	29·69	27·40	25·13	22·87	21·00	19·14	17·29	15·81	14·34	12·88	11·42	10·34	9·25	8·17	7·09	6·38	5·66	4·95			
7½ 190·5	38·23	35·43	33·04	30·67	28·31	25·96	23·63	21·70	19·78	17·87	16·34	14·83	13·32	11·81	10·69	9·57	8·45	7·34	6·60	5·86	5·12			
7¾ 196·8	39·44	36·55	34·09	31·65	29·22	26·80	24·39	22·40	20·42	18·45	16·88	15·31	13·75	12·20	11·04	9·88	8·73	7·58	6·81	6·05	5·29			
8 203·2	40·65	37·68	35·14	32·63	30·12	27·63	25·16	23·10	21·06	19·03	17·41	15·79	14·19	12·59	11·39	10·20	9·01	7·82	7·03	6·24	5·46			
8¼ 209·5	41·86	38·80	36·20	33·61	31·03	28·47	25·92	23·81	21·70	19·61	17·94	16·28	14·62	12·97	11·74	10·51	9·28	8·06	7·25	6·44				
8½ 215·9	43·07	39·93	37·25	34·59	31·94	29·30	26·68	24·51	22·34	20·19	18·47	16·76	15·06	13·36	12·09	10·82	9·56	8·30	7·47	6·63				
8¾ 222·2	44·28	41·05	38·30	35·57	32·84	30·14	27·44	25·21	22·98	20·77	19·00	17·25	15·49	13·75	12·44	11·14	9·84	8·55	7·68	6·82				
9 228·6	45·49	42·18	39·35	36·55	33·75	30·97	28·21	25·91	23·63	21·35	19·54	17·73	15·93	14·13	12·79	11·45	10·12	8·79	7·90	7·02				
9¼ 234·9	46·70	43·30	40·41	37·53	34·66	31·81	28·97	26·61	24·27	21·93	20·07	18·21	16·36	14·52	13·14	11·77	10·40	9·03	8·12					
9½ 241·3	47·91	44·43	41·46	38·51	35·57	32·64	29·73	27·31	24·91	22·51	20·60	18·70	16·80	14·91	13·49	12·08	10·68	9·27	8·34					
9¾ 247·6	49·12	45·55	42·51	39·49	36·47	33·48	30·49	28·02	25·55	23·09	21·13	19·18	17·24	15·30	13·84	12·40	10·95	9·51	8·55					
10 254·0	50·33	46·68	43·56	40·47	37·38	34·31	31·25	28·72	26·19	23·67	21·67	19·67	17·67	15·68	14·20	12·71	11·23	9·76	8·77					
10¼ 260·3	51·54	47·80	44·62	41·45	38·29	35·15	32·02	29·42	26·83	24·25	22·20	20·15	18·11	16·07	14·55	13·03	11·51	10·00						
10½ 266·7	52·75	48·93	45·67	42·43	39·20	35·98	32·78	30·12	27·47	24·83	22·73	20·63	18·54	16·46	14·90	13·34	11·79	10·24						
10¾ 273·0	53·96	50·05	46·72	43·41	40·12	36·81	33·54	30·82	28·11	25·42	23·26	21·12	18·98	16·84	15·25	13·66	12·07	10·48						
11 279·4	55·16	51·18	47·77	44·39	41·01	37·65	34·30	31·52	28·75	26·00	23·80	21·60	19·41	17·23	15·60	13·97	12·34	10·72						
11¼ 285·7	56·37	52·80	48·83	45·37	41·92	38·48	35·06	32·23	29·40	26·58	24·33	22·08	19·85	17·62	15·95	14·28	12·62							
11½ 292·1	57·58	53·43	49·88	46·35	42·83	39·32	35·83	32·93	30·04	27·16	24·86	22·57	20·28	18·01	16·30	14·60	12·90							
11¾ 298·4	58·79	54·55	50·93	47·33	43·73	40·15	36·59	33·63	30·68	27·74	25·39	23·05	20·72	18·39	16·65	14·91	13·18							
12 304·8	60·00	55·68	51·98	48·31	44·64	40·99	37·35	34·33	31·32	28·32	25·92	23·54	21·16	18·78	17·00	15·23	13·46							
12¼ 311·1	61·21	56·80	53·04	49·29	45·55	41·82	38·11	35·03	31·96	28·90	26·46	24·02	21·59	19·17	17·35	15·54								
12½ 317·5	62·42	57·93	54·09	50·26	46·45	42·66	38·88	35·73	32·60	29·48	26·99	24·50	22·03	19·55	17·70	15·86								
12¾ 323·8	63·63	59·05	55·14	51·24	47·36	43·49	39·64	36·44	33·24	30·06	27·52	24·99	22·46	19·94	18·05	16·17								
13 330·2	64·84	60·18	56·19	52·22	48·27	44·33	40·40	37·14	33·88	30·64	28·05	25·47	22·90	20·33	18·41	16·49								
13¼ 336·5	66·05	61·30	57·25	53·20	49·18	45·16	41·16	37·84	34·53	31·22	28·59	25·96	23·33	20·72	18·76									
13½ 342·9	67·26	62·43	58·30	54·18	50·08	46·00	41·92	38·54	35·17	31·80	29·12	26·44	23·77	21·10	19·11									
13¾ 349·2	68·47	63·55	59·35	55·16	50·99	46·83	42·69	39·24	35·81	32·38	29·65	26·92	24·20	21·49	19·46									
14 355·6	69·68	64·68	60·40	56·14	51·90	47·67	43·45	39·94	36·45	32·96	30·18	27·41	24·64	21·88	19·81									
	3·87	3·35	2·93	2·54	2·18	1·84	1·54	1·30	1·09	·89	·75	·62	·50	·40	·33	·26	·20	·15	·12	·10	·08	·06	·04	·03

If the external diameter is given, subtract figure in black type at bottom of column; for example, the weight per lineal foot of a copper tube 2 inches external diameter, 12 S.W.G., is 2·65 − 0·26 = 2·39 *lbs.* The weights are calculated from 12 samples of tubes made from tough copper (specific gravity at 60° F. 8·8917, or ·3209 lb. per cubic inch). Brazed copper tubes weigh more than seamless; but an exact multiple cannot be given. Mandril-drawn brazed tubes weigh the same as seamless tubes. In practice a slight deviation from the above theoretical weights must be expected. To ascertain the weight of a seamless tube of other metal, multiply the weight of a similar copper tube by ·9626 for brass (70 and 30 alloy), by ·86 for wrought iron, by ·81 for cast iron, or by 1·28 for lead. (*The Broughton Copper Co., Ltd.*)

Weight of Seamless Brass Tubes.
(Containing 70 % of copper.)

S.W.G.	Thickness of Brass															
	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
Inches . .	·212	·192	·176	·160	·144	·128	·116	·104	·092	·080	·072	·064	·056	·048	·040	·036
Millimètres	5·385	4·877	4·470	4·064	3·658	3·251	2·946	2·642	2·337	2·032	1·829	1·626	1·422	1·219	1·016	·914
External Diameter.	Weight of a Lineal Foot in Pounds.															
Ins. Mm.																
$\frac{3}{8}$ 9·5	..	..	..	..	..	..	..	..	..	..	..	..	·21	·18	·16	·14
$\frac{7}{16}$ 11·1	..	..	..	..	..	..	..	..	..	..	..	·28	·25	·22	·18	·17
$\frac{1}{2}$ 12·7	..	..	..	..	..	..	..	..	..	..	·36	·32	·29	·25	·21	·19
$\frac{9}{16}$ 15·9	..	..	..	..	..	..	..	..	..	·51	·46	·42	·37	·32	·27	·25
$\frac{5}{8}$ 19·0	..	..	..	..	..	..	..	..	·70	·62	·57	·51	·45	·39	·33	·30
$\frac{7}{8}$ 22·2	..	..	..	..	..	..	..	·93	·84	·74	·67	·60	·53	·46	·39	·35
1 25·4	..	..	..	..	..	..	1·19	1·08	·97	·86	·78	·70	·62	·53	·45	·40
$1\frac{1}{8}$ 28·6	..	..	..	..	..	1·49	1·36	1·24	1·11	·97	·88	·79	·70	·60	·50	
$1\frac{1}{4}$ 31·7	..	..	..	..	..	1·67	1·53	1·39	1·24	1·09	·99	·88	·78	·67	·56	
$1\frac{3}{8}$ 34·9	..	..	..	..	2·06	1·86	1·70	1·54	1·37	1·21	1·09	·98	·86	·74	·62	
$1\frac{1}{2}$ 38·1	..	..	..	..	2·27	2·04	1·87	1·69	1·51	1·32	1·20	1·07	·94	·81	·68	
$1\frac{5}{8}$ 41·3	..	..	..	2·73	2·48	2·23	2·04	1·84	1·64	1·44	1·30	1·16	1·02	·88		
$1\frac{3}{4}$ 44·4	..	..	..	2·96	2·69	2·42	2·21	1·99	1·78	1·56	1·41	1·26	1·10	·95		
$1\frac{7}{8}$ 47·6	..	..	3·48	3·19	2·90	2·60	2·38	2·14	1·91	1·67	1·51	1·35	1·19	1·02		
2 50·8	..	..	3·74	3·43	3·11	2·79	2·54	2·30	2·04	1·79	1·62	1·44	1·27	1·09		
$2\frac{1}{8}$ 54·0	..	4·32	3·99	3·66	3·32	2·98	2·71	2·45	2·18	1·90	1·72	1·54	1·35			
$2\frac{1}{4}$ 57·1	..	4·60	4·25	3·89	3·53	3·16	2·88	2·60	2·31	2·02	1·83	1·63	1·43			
$2\frac{3}{8}$ 60·3	5·34	4·88	4·51	4·13	3·74	3·35	3·05	2·75	2·45	2·14	1·93	1·72	1·51			
$2\frac{1}{2}$ 63·5	5·65	5·16	4·76	4·36	3·95	3·54	3·22	2·90	2·58	2·25	2·04	1·81	1·59			
$2\frac{5}{8}$ 66·7	5·96	5·44	5·02	4·59	4·16	3·72	3·39	3·05	2·71	2·37	2·14	1·91	1·67			
$2\frac{3}{4}$ 69·8	6·27	5·72	5·28	4·83	4·37	3·91	3·56	3·20	2·85	2·49	2·24	2·00	1·76			
$2\frac{7}{8}$ 73·0	6·57	6·00	5·53	5·06	4·58	4·09	3·73	3·36	2·98	2·60	2·35	2·09	1·84			
3 76·2	6·88	6·28	5·79	5·29	4·79	4·28	3·90	3·51	3·11	2·72	2·45	2·19	1·92			
$3\frac{1}{4}$ 79·3	7·19	6·56	6·04	5·52	5·00	4·47	4·06	3·66	3·25	2·84	2·56	2·28				
$3\frac{1}{2}$ 82·5	7·50	6·84	6·30	5·76	5·21	4·65	4·23	3·81	3·38	2·95	2·66	2·37				
$3\frac{3}{4}$ 85·7	7·81	7·12	6·56	5·99	5·42	4·84	4·40	3·96	3·52	3·07	2·77	2·47				
$3\frac{1}{4}$ 88·9	8·12	7·40	6·81	6·22	5·63	5·03	4·57	4·11	3·65	3·19	2·87	2·56				
$3\frac{3}{8}$ 92·0	8·43	7·68	7·07	6·46	5·84	5·21	4·74	4·26	3·78	3·30	2·98	2·65				
$3\frac{1}{2}$ 95·2	8·73	7·95	7·32	6·69	6·05	5·40	4·91	4·42	3·92	3·42	3·08	2·75				
$3\frac{7}{8}$ 98·4	9·04	8·23	7·58	6·92	6·26	5·58	5·08	4·57	4·05	3·53	3·19	2·84				
4 101·6	9·35	8·51	7·84	7·15	6·47	5·77	5·25	4·72	4·19	3·65	3·29	2·93				
$4\frac{1}{4}$ 107·9	9·97	9·07	8·35	7·62	6·88	6·14	5·58	5·02	4·45	3·88	3·50					
$4\frac{1}{2}$ 114·3	10·59	9·63	8·86	8·09	7·30	6·52	5·92	5·32	4·72	4·12	3·71					
$4\frac{3}{4}$ 120·6	11·20	10·19	9·37	8·55	7·72	6·89	6·26	5·63	4·99	4·35						
5 127·0	11·82	10·75	9·89	9·02	8·14	7·26	6·60	5·93	5·26	4·58						
$5\frac{1}{4}$ 133·3	12·44	11·31	10·40	9·48	8·56	7·63	6·93	6·23	5·53							
$5\frac{1}{2}$ 139·7	13·05	11·87	10·91	9·95	8·98	8·01	7·27	6·53	5·79							
$5\frac{3}{4}$ 146·0	13·67	12·43	11·42	10 41	9·40	8·38	7·61	6·84								
6 152·4	14·29	12·99	11·94	10·88	9·82	8·75	7·95									
Per cent. .	*103·4*	*105·2*	*102·1*	*102·9*	*102·6*	*104·4*	*103·3*	*104·6*	*103·1*	*103·6*	*100·0*	*101·5*	*103·5*	*102·0*	*104·8*	*97·3*

The figures in italics show the difference in percentage of weight of brass tubes made to the B.W.G. and the S.W.G., the latter being taken at 100.

The above weights, multiplied by ·994, give the weight of a brass tube 2 and 1 alloy.

These weights are calculated from the specific gravity of 16 samples of tubes, from various makers, each of the samples being 1 foot long × $1\frac{3}{8}$ inch external diameter × 14 B.W.G., which was found to be 8·558, or ·3089 lb. per cubic inch, for the alloy of 70 and 30, and 8·508 specific gravity, or ·3071 lb. per cubic inch, for the alloy of 2 and 1 at a temperature of 60° F.

To ascertain the weight of a seamless tube of copper, multiply the weight of a similar brass tube by 1·0388.

S.W.G. No	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	S.W.G No.
Thickness ins.	·300	·276	·252	·232	·212	·192	·176	·160	·144	·128	·116	·104	·092	·080	·072	·064	·056	·048	·040	·036	·032	·028	·024	·022	Thickness ins.
Thickness mm	7·62	7·00	6·40	5·89	5·38	4·87	4·46	4·06	3·66	3·25	2·94	2·64	2·34	2·03	1·83	1·62	1·42	1·22	1·02	·914	·812	·711	·610	·559	mm
Outside Diameter ins.	mm.																								Outside Diameter ins.	mm.
3/16	4·76	—	—	—	—	—	—	—	—	—	—	—	—	—	—	·029	·027	·025	·022	·020	·018	·016	·014	·013	3/16	4·76
1/4	6·35	—	—	—	—	—	—	—	—	—	—	—	·050	·047	·044	·041	·036	·031	·029	·026	·023	·020	·019		1/4	6·35
3/8	9·52	—	—	—	—	—	—	—	—	—	·111	·104	·096	·087	·080	·073	·066	·058	·049	·045	·040	·035	·031	·028	3/8	9·52
1/2	12·7	—	—	—	—	—	—	—	·189	·176	·165	·152	·139	124	113	·102	·092	·080	·067	·061	·054	·048	·043	·039	1/2	12·7
5/8	15·9	—	—	—	—	—	·292	·275	·256	·235	·219	·200	·181	·161	·146	·132	·116	·101	·087	·079	·071	·062	·053	·049	5/8	15·9
3/4	19·0	—	—	—	·420	·394	·373	·349	·321	·294	·270	·246	·223	·199	·180	·162	·143	·124	·104	·095	·085	·075	·065	·060	3/4	19·0
7/8	22·2	—	—	·580	·550	·520	·484	·454	·423	·388	·353	·325	·297	·267	·235	·216	·192	·170	·146	·123	·112	·100	·088	·076	·069	7/8	22·2
1	25·4	·775	·740	·700	·656	·615	·575	·535	·497	·455	·412	·379	·345	·309	·272	·247	·221	·197	·168	·141	·126	·114	·100	·086	·079	1	25·4
1 1/4	28·6	·915	·872	·810	·761	·715	·663	·616	·570	·521	·472	·433	392	·352	309	·280	·250	·221	·190	·160	·143	·128	·113	·098	·091	1 1/4	28·6
1 1/2	31·8	1·05	·990	·926	·870	·813	·751	·699	·646	·588	·531	·486	·441	·393	·346	·314	·282	·246	·212	·178	·160	·144	·127	·109	·100	1 1/2	31·8
1 3/4	34·9	1·18	1·18	1·04	·980	·910	·840	·776	·716	·653	·590	·540	·489	·436	·382	·347	·310	·270	·235	·196	·176	·159	·139	·120	·112	1 3/4	34·9
1 7/8	38·1	1·33	1·25	1·16	1·09	1·01	·931	·862	·793	·722	·649	·594	·537	·479	·420	·380	·340	·300	·260	·218	·196	·174	·154	·134	·122	1 7/8	38·1
1 5/8	41·3	1·47	1·37	1·27	1·19	1·10	1·02	·943	·865	·788	·708	·648	584	·522	·457	·412	·370	·323	·280	·234	·208	·188	—	—	—	1 5/8	41·3
1 3/4	44·5	1·61	1·50	1·39	1·30	1·21	1·10	1·02	·943	·852	·767	·701	·632	·564	·494	·446	·398	·350	·300	·252	·230	·203	—	—	—	1 3/4	44·5
1 7/8	47·6	1·75	1·63	1·51	1·41	1·30	1·19	1·10	1·01	·920	·826	·754	·681	·605	·530	·480	·426	·376	·323	—	—	—	—	—	—	1 7/8	47·6
2	50·8	1·89	1·76	1·63	1·51	1·40	1·28	1·19	1·09	·986	·882	·804	·728	·648	·566	·510	·458	·400	·344	—	—	—	—	—	—	2	50·8
2 1/8	53·9	2·03	1·89	1·73	1·62	1·50	1·37	1·27	1·16	1·06	·945	·880	·776	·690	·605	·541	·494	·423	·376	—	—	—	—	—	—	2 1/8	53·9
2 1/4	57·1	2·16	2·01	1·86	1·73	1·60	1·46	1·35	1·23	1·12	1·00	·913	·825	·735	·642	·575	·511	·453	·388	—	—	—	—	—	—	2 1/4	57·1
2 3/8	60·3	2·30	2·14	1·98	1·84	1·69	1·55	1·43	1·31	1·19	1·06	·968	·872	·776	·681	·598	·552	·470	·411	—	—	—	—	—	—	2 3/8	60·3
2 1/2	63·5	2·44	2·27	2·10	1·95	1·80	1·64	1·51	1·39	1·25	1·12	1·02	·921	·820	·717	645	·576	·506	·435	—	—	—	—	—	—	2 1/2	63·5
2 5/8	66·6	2·58	2 40	2·21	2·05	1·89	1·72	1·59	1·46	1·32	1·18	1·08	·970	·862	·752	·658	·611	·517	·458	—	—	—	—	—	—	2 5/8	66·6
2 3/4	69·8	2·72	2·53	2·35	2·17	2·00	1·82	1·67	1·53	1·39	1·24	1·13	1·01	·900	·789	705	·630	·550	·475	—	—	—	—	—	—	2 3/4	69·8
2 7/8	73·0	2·86	2·65	2·45	2·27	2·09	1·90	1·75	1·61	1·45	1·30	1·18	1·07	·946	·823	·728	·670	·576	·505	—	—	—	—	—	—	2 7/8	73·0
3	76·2	2·99	2·78	2·56	2·37	2·18	1·99	1·84	1·68	1·51	1·35	1·23	1 11	·989	·875	·770	·690	—	—	—	—	—	—	—	—	3	76·2
3 1/4	82·6	3·27	3·03	2·79	2·58	2·38	2·16	2·00	1·83	1·65	1·47	1·34	1·20	1·06	·935	·835	·750	—	—	—	—	—	—	—	—	3 1/4	82·6
3 1/2	88·9	3·55	3·29	3·03	2·81	2·58	2·35	2·16	1·96	1·78	1·59	1·44	1·30	1·15	1·00	·900	·800	—	—	—	—	—	—	—	—	3 1/2	88·9
3 3/4	95·2	3·83	3·64	3·25	3·01	2·77	2·53	2·33	2·12	1·91	1·71	1·55	1·40	1·25	1·19	—	—	—	—	—	—	—	—	—	—	3 3/4	95·2
4	102	4·10	3·80	3·49	3·23	2·97	2·70	2·49	2·27	2·05	1·83	1·67	1·50	1·32	—	—	—	—	—	—	—	—	—	—	—	4	102
4 1/4	108	4·38	4·05	3·72	3·45	3·16	2·88	2·65	2·42	2·19	1·95	1·77	1·59	1·41	—	—	—	—	—	—	—	—	—	—	—	4 1/4	108
4 1/2	114	4·66	4·31	3·96	3·66	3·36	3·06	2·82	2·57	2·32	2·07	1·88	1·69	—	—	—	—	—	—	—	—	—	—	—	—	4 1/4	114
4 3/4	121	4·94	4·57	4·19	3·88	3·56	3·24	2·98	2·72	2·45	2·19	1·99	1·79	—	—	—	—	—	—	—	—	—	—	—	—	4 3/4	121
5	127	5·21	4·82	4·42	4·09	3·76	3·41	3·14	2·86	2·58	2·31	2·10	1·88	—	—	—	—	—	—	—	—	—	—	—	—	5	127
5 1/4	133	5·49	5·07	4·65	4·30	3·95	3·59	3·30	3·01	2·72	2·43	2·20	1·98	—	—	—	—	—	—	—	—	—	—	—	—	5 1/4	133
5 1/2	140	5·77	5·33	4·89	4 52	4·15	3·77	3·47	3·16	2·85	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	5 1/2	140
5 3/4	146	6·05	5·59	5·11	4·73	4·34	3·95	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	5 3/4	146
6	152	6·33	5·84	5·34	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	6	152

	Aluminium	Brass	Copper
Specific Gravity ...	2·71	8·62	8·95
Ratio of Weights...	1·00	3·23	3·33

TINPLATES.

Principal Denominations and Sizes.

Mark.	Size.	Sheets per Box.	Weight per Box.	Thicknesses of Sheets.		Mark.	Size.	Sheets per Box.	Weight per Box.	Thicknesses of Sheets.	
	Ins.		Lbs.	Mm.	In.		Ins.		Lbs.	Mm.	In.
IC	14×10	225	108	0·313	0·0123	IC	28×20	56	108	0·315	0·0123
IX	,,	,,	136	0·395	0·0155	IX	,,	,,	136	0·396	0·0155
IXX	,,	,,	156	0·453	0·0179	IC	20×10	225	154	0·313	0·0123
IXXX	,,	,,	176	0·511	0·0201	IX	,,	,,	194	0·394	0·0155
IC	20×14	112	108	0·315	0·0123	IC	14×18⅞	124	110	0·309	0·0122
ICL	,,	,,	100	0·292	0·0114	IC	14×19¼	120	110	0·311	0·0122
ICL	,,	,,	95	0·277	0·0109	IC	30×21	112	243	0·315	0·0124
ICL	,,	,,	90	0·262	0·0103	CL	,,	,,	224	0·290	0·0114
ICL	,,	,,	85	0·248	0·0997	CLL	,,	,,	190	0·246	0·0097
ICL	,,	,,	80	0·233	0·0091	CLLL	,,	,,	176	0·228	0·0090
IX	,,	,,	136	0·396	0·0155	CLLLL	,,	,,	160	0·207	0·0081
IXX	,,	,,	156	0·455	0·0179	DC	17×12½	100	94	0·404	0·0160
IXXX	,,	,,	176	0·513	0·0201	DX	,,	,,	122	0·525	0·0206
IXXXX	,,	,,	196	0·571	0·0223	DXX	,,	,,	143	0·615	0·0242
IC	28×20	,,	216	0·315	0·0124	DXXX	,,	,,	164	0·706	0·0278
IX	,,	,,	272	0·396	0·0156	DXXXX	,,	,,	185	0·796	0·0313

Weights in Lbs. per Foot Super and Equivalent S.W.G.

Mark.	Weight.	S.W.G.	Mark.	Weight.	S.W.G.
IC	0·514	30	DXXX	1·138	22
IX	0·643	27	DXXXX	1·281	21
IXX	0·739	26	SDC	0·733	26
IXXX	0·836	25	SDX	0·825	25
IXXXX	0·932	23	SDXX	0·916	24
DC	0·664	27	SDXXX	1·008	23
DX	0·854	24	SDXXXX	1·100	22
DXX	0·996	23			

Approximate Weight of Single Plates.

Mark.	Weight per Plate.	Size of Plate, Ins.	Weight per Plate.	Size of Plate, Ins.	Weight per Plate.	Size of Plate, Ins.
	lb. oz.		lb. oz.		lb. oz.	
IC	0 8		1 0		2 0	
IX	0 10		1 4		2 8	
IXX	0 11½	14 × 10	1 7	14 × 20	2 14	28 × 20
IXXX	0 13		1 10		3 4	
IXXXX	0 14½		1 13		3 10	
DC	0 15⅝		1 15⅝		3 14⅞	
DX	1 4½		2 8½		5 0⅝	
DXX	1 7⅝	17 × 12½	2 15	17 × 25	5 14	34 × 25
DXXX	1 10⅞		3 5¼		6 11½	
DXXXX	1 14¼		3 12½		7 9	
SDC	0 13½		1 10⅞			
SDX	0 15⅝		1 14½			
SDXX	1 0¾	15 × 11	2 1½	15 × 22	—	—
SDXXX	1 2⅞		2 5			
SDXXXX	1 4⅛		2 8¼			

WEIGHT AND DIMENSIONS OF HOOP-IRON PER FOOT RUN.

B. W. Gauge.	Width.	Weight.	B. W. Gauge.	Width.	Weight.	B. W. Gauge.	Width.	Weight.	B. W. Gauge.	Width.	Weight.
	Ins.	Lbs.		Ins.	Lb.		Ins.	Lb.		Ins.	Lb.
11	2⅜	1·1577	13	2	·6332	15	1½	·3637	18	1	·1616
12	2¼	·9178	13	1¾	·5540	15	1⅜	·3334	19	⅞	·1237
12	2	·7342	14	1¾	·4715	16	1¼	·2652	20	¾	·0884
13	2¼	·7123	14	1½	·4042	17	1⅛	·2084	21	⅝	·0694

WEIGHT OF WIRE PER 100 FEET.

B. W. Gauge.	Diam. in Decimals of an Inch.	Iron.	Steel.	Brass.	Copper.	B. W. Gauge.	Diam. in Decimals of an Inch.	Iron.	Steel.	Brass.	Copper.
		Lbs.	Lbs.	Lbs.	Lbs.			Lbs.	Lbs.	Lbs.	Lbs.
0	·340	30·582	30·919	33·427	35·170	19	·042	·466	·471	·510	·536
1	·312	25·753	26·036	28·148	29·616	20	·035	·324	·327	·344	·372
2	·284	21·338	21·573	23·322	24·539	21	·033	·288	·291	·314	·331
3	·261	18·022	18·220	19·698	20·725	22	·029	·222	·224	·243	·255
4	·239	15·112	15·278	16·517	17·378	23	·028	·207	·209	·226	·238
5	·217	12·458	12·595	13·616	14·326	24	·025	·164	·166	·179	·189
6	·208	11·446	11·572	12·510	13·173	25	·021	·116	·118	·127	·134
7	·187	9·251	9·353	10·112	10·639	26	·020	·105	·107	·115	·121
8	·166	7·290	7·370	7·968	8·384	27	·018	·085	·086	·093	·098
9	·158	6·604	6·677	7·219	7·595	28	·015	·059	·060	·065	·068
10	·137	4·965	5·020	5·427	5·710	29	·013	·044	·045	·048	·051
11	·125	4·134	4·179	4·518	4·754	30	·012	·038	·038	·041	·043
12	·109	3·143	3·178	3·435	3·615	31	·010	·026	·026	·028	·030
13	·094	2·338	2·363	2·555	2·688	32	·009	·021	·021	·023	·024
14	·080	1·693	1·712	1·851	1·947	33	·008	·016	·017	·018	·019
15	·072	1·371	1·387	1·499	1·577	34	·007	·013	·013	·014	·014
16	·063	1·050	1·062	1·148	1·208	35	·005	·006	·006	·007	·007
17	·055	·800	·809	·874	·920	36	·004	·004	·004	·004	·005
18	·048	·609	·616	·666	·701						

TABLE OF WEIGHT OF CASTINGS IN PROPORTION TO THE MAKE OF PATTERNS OF DIFFERENT MATERIALS.

A Pattern weighing 1 lb.	Will Weigh when Cast in				
	Cast Iron.	Zinc.	Copper.	Yellow Brass.	Gun-metal.
	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.
Mahogany	8	8	10	9·8	10
White pine	14	14·5	18	17·5	17·8
Yellow pine	13	12·6	16	15·5	16
Cedar	11·5	11·4	14·5	14	14·5
Maple	10	9·8	12·5	12	12·4

NUMBER OF COLD PUNCHED NUTS PER 100 POUNDS.

Size.	Square.	Hexagon.	Size.	Square.	Hexagon	Size.	Square.	Hexagon.
$\frac{3}{16}$ inch	2,694	2,944	$\frac{3}{4}$ inch	412	496	$1\frac{1}{8}$ inch	126	156
$\frac{1}{4}$,,	1,200	1,440	$\frac{7}{8}$,,	258	314	$1\frac{1}{4}$,,	104	121
$\frac{5}{16}$,,	758	900	1 ,,	171	201	$1\frac{1}{2}$,,	60	68

WEIGHT OF NUT AND BOLT-HEADS.

Head and Nut.	Diameter of Bolt in Inches.												
	$\frac{1}{4}$	$\frac{3}{8}$	$\frac{1}{2}$	$\frac{5}{8}$	$\frac{3}{4}$	$\frac{7}{8}$	1	$1\frac{1}{4}$	$1\frac{1}{2}$	$1\frac{3}{4}$	2	$2\frac{1}{2}$	3
	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.
Hexagon .	·017	·057	·128	·267	·43	·73	1·1	2·14	3·77	5·62	8·75	17·2	28·8
Square .	·021	·070	·164	·321	·553	·882	1·31	2·56	4·42	7·00	10·5	21·0	36·4

Weight of Washers per 100.

Size.	Weight.	Size.	Weight.	Size.	Weight.	Size.	Weight.
In.	Lbs.	In.	Lbs.	Ins.	Lbs.	Ins.	Lbs.
$\frac{3}{8}$	$1\frac{3}{4}$	$\frac{5}{8}$	$6\frac{3}{4}$	1	$10\frac{3}{4}$	$1\frac{1}{4}$	24
$\frac{1}{2}$	$2\frac{1}{4}$	$\frac{7}{8}$	$8\frac{1}{2}$	$1\frac{1}{8}$	$18\frac{3}{4}$	$1\frac{1}{2}$	30
$\frac{5}{8}$	$4\frac{1}{2}$						

Weight of Wrought-iron Nails per 1,000.

Name.	Lgth	Weight per 1000.	Name.	Lgth	Weight per 1000.	Name.	Lgth	Weight per 1000.
	Ins.	Lbs. Ozs.		Ins.	Lbs. Ozs.		Ins.	Lbs. Ozs.
Spike	5	100 0	Clasp, strong	$2\frac{1}{2}$	12 0	Tacks, clout	$\frac{3}{4}$	1 12
"	6	200 0	" "	$2\frac{3}{4}$	14 0	Tacks, cut	$1\frac{1}{16}$	14
"	7	300 0	" "	$3\frac{1}{2}$	20 0	" "	$\frac{7}{8}$	12
"	8	450 0	" "	$3\frac{3}{4}$	25 0	" "	$\frac{15}{16}$	10
"	9	600 0	" "	$3\frac{3}{4}$	32 0	Trunk	$1\frac{3}{4}$	1 4
"	10	750 0	" "	4	40 0	"	1	1 12
Rose	$\frac{7}{8}$	2 0	Clasp, cut	$1\frac{1}{4}$	3 0	"	$1\frac{1}{4}$	2 12
"	$1\frac{1}{4}$	4 0	" "	$1\frac{3}{8}$	3 8	"	$1\frac{3}{4}$	5 0
"	$1\frac{3}{4}$	7 0	" "	2	8 0	Brads, wrought	$\frac{3}{4}$	8
"	2	10 0	" "	$2\frac{1}{4}$	12 0	" "	$\frac{3}{4}$	12
"	$2\frac{1}{2}$	16 0	Clout	$\frac{3}{4}$	2 8	" "	1	14
"	$2\frac{3}{4}$	20 0	Clout, fine	1	2 0	" "	$1\frac{1}{4}$	1 12
"	$3\frac{1}{4}$	28 0	" "	$1\frac{1}{4}$	3 0	" "	$1\frac{1}{2}$	2 12
"	$3\frac{3}{4}$	36 0	" "	$1\frac{3}{8}$	4 0	" "	2	4 0
"	4	50 0	" "	$1\frac{1}{4}$	5 0	Brads, flooring	$2\frac{1}{4}$	10 0
"	$4\frac{1}{2}$	70 0	Clout, strong	$1\frac{3}{8}$	5 0	" "	$2\frac{1}{2}$	15 0
"	5	90 0	" "	$1\frac{1}{2}$	9 0	" "	$3\frac{1}{4}$	20 0
Rose, fine drawn	4	40 0	" "	$1\frac{3}{4}$	16 0	Brads, cut	$\frac{15}{16}$	5
" " "	$5\frac{1}{4}$	80 0	" "	2	23 0	" "	$1\frac{3}{4}$	12
Rose, stamped	$1\frac{1}{4}$	4 0	" "	$2\frac{1}{4}$	32 0	" "	1	1 0
" "	$1\frac{1}{2}$	5 0	" "	$2\frac{1}{2}$	40 0	" "	$1\frac{1}{4}$	1 4
" "	2	7 0	" "	3	50 0	Glaziers' sprigs	$\frac{1}{2}$	4
" "	$2\frac{1}{2}$	11 0	" "	$3\frac{1}{4}$	60 0	" "	$\frac{3}{4}$	14
" "	3	25 0	" "	$3\frac{3}{4}$	80 0	Horseshoe	2	5 8
Clasp, fine	1	1 12	Clout, tinned	$1\frac{1}{2}$	4 0	"	$2\frac{1}{8}$	7 0
" "	$1\frac{1}{4}$	2 8	" "	$1\frac{3}{4}$	7 0	"	$2\frac{1}{4}$	8 8
" "	$1\frac{1}{2}$	4 0	Tacks, Flemish	$\frac{7}{8}$	4	"	$2\frac{3}{8}$	10 0
" "	2	6 0	" "	$\frac{15}{16}$	6	"	$2\frac{1}{2}$	11 0
" "	$2\frac{1}{2}$	10 0	" "	1	8	"	$2\frac{3}{4}$	13 8
" "	$3\frac{1}{4}$	18 0	" "	$\frac{9}{16}$	14	Cart-tyre	$3\frac{1}{2}$	187 8
Clasp, strong	$1\frac{1}{2}$	7 0	Tacks, clout	$1\frac{1}{4}$	3 8	" "	4	218 12
" "	$2\frac{1}{4}$	10 0	" "	$\frac{15}{16}$	2 12	Mop	$5\frac{1}{2}$	58 0

Weight of Wrought Copper Nails per 1,000.

Name.	Length.	Weight per 1000.	Name.	Length.	Weight per 1000.	Name.	Length.	Weight per 1000.
	Ins.	Lbs. Ozs.		Ins.	Lbs. Ozs.		Ins.	Lbs. Ozs.
Diehead	5	80 6	Rose, strong	1	3 4	Rose, fine	$2\frac{3}{4}$	18 11
"	5	116 4	Rose, fine	$\frac{7}{8}$	1 12	" "	3	30 1
"	4	80 1	" "	1	2 5	" "	4	50 6
"	3	40 0	" "	$1\frac{1}{4}$	4 7	Jagged	$1\frac{3}{4}$	8 4
"	$2\frac{1}{2}$	29 4	" "	$1\frac{1}{2}$	5 5	Brads	2	6 5
"	$2\frac{1}{4}$	14 12	" "	$1\frac{3}{4}$	6 3	"	$1\frac{1}{2}$	3 0
Rose, strong	2	11 4	" "	2	10 2	Tacks	$\frac{3}{4}$	1 15
" "	$1\frac{1}{2}$	9 9	" "	$2\frac{1}{4}$	10 3	" "	$\frac{1}{2}$	13
" "	$1\frac{1}{4}$	5 3	" "	$2\frac{1}{2}$	14 6	" "	$\frac{3}{8}$	10

Weight of Screws per 1,000.

Name.	Length.	Weight per 1000.	Name.	Length.	Weight per 1000.	Name.	Length.	Weight per 1000.
	Ins.	Lbs. Ozs.		Ins.	Lbs. Ozs.		Ins.	Lbs. Ozs.
Strong .	3½	28 0	Middling .	2¾	16 0	Fine . .	2¾	14 0
„ .	3	24 0	„ .	2½	16 0	„ . .	2½	14 0
„ .	2¾	24 0	„ .	2	14 0	„ . .	2¼	13 0
„ .	2½	22 0	„ .	1¾	14 0	„ . .	2	13 0
„ .	2	22 0	„ .	1½	13 0	„ . .	1¾	12 0
„ .	1½	20 0	„ .	1¼	13 0	„ . .	1½	11 0
„ .	1¼	18 0	„ .	1	12 0	„ . .	1¼	10 0
„ .	1	16 0	„ .	⅞	11 0	„ . .	1	8 0
„ .	⅞	14 0	„ .	¾	10 0	„ . .	⅞	8 0
„ .	¾	13 0	„ .	⅝	9 0	„ . .	¾	7 0
„ .	⅝	13 0	„ .	½	9 0	„ . .	⅝	6 0
Middling .	5	24 0	„ .	⅜	7 0	„ . .	½	6 0
„ .	4	20 0	Fine . .	3½	18 0	„ . .	⅜	3 0
„ .	3½	20 0	„ . .	3¼	16 0	„ . .	¼	3 0
„ .	3	16 0	„ . .	3	16 0			

Composition Nails.

Gauge	Thick.	Length.	In 1 lb.	Gauge	Thick.	Length.	In 1 lb.	Gauge	Thick.	Length.	In 1 lb.
No.	In.	Ins.	Num.	No.	In.	Ins.	Num.	No.	In.	Ins.	Num.
1	·04	⅜	290	7	·1	1⅛	184	12	·12	2	64
2	·05	½	260	8	·1	1¼	168	13	·13	2¼	59
3	·06	1	212	9	·11	1½	110	14	·14	2½	51
4	·07	1½	201	10	·11	1⅝	101	15	·15	2¾	43
5	·08	1¼	199	11	·12	1¾	74	16	·16	3	35
6	·09	1	190								

Brazers' Copper Rivets.

Gauge	Diameter.	Length.	In 10 lbs.	Gauge	Diameter.	Length.	In 10 lbs.	Gauge	Diameter.	Length.	In 10 lbs.
No.	In.	In.	Num.	No.	In.	Ins.	Num.	No.	Ins.	Ins.	Num.
1	3/16	½	2,384	7	⅜	15/16	334	12	11/16	1 9/16	53·8
2	¼	½	1,018	8	7/16	1	210	13	¾	1⅝	41·6
3	¼	9/16	983	9	½	1 3/16	141	14	13/16	1 13/16	32·8
4	5/16	9/16	573	10	9/16	1 5/16	99·5	15	⅞	2 1/16	26·3
5	5/16	⅝	516	11	⅝	1 7/16	71·9	16	1	2⅜	16·7
6	⅜	⅞	357								

Iron Rivets.

Gauge	Diameter.	Length.	In 10 lbs.	Gauge	Diameter.	Length.	In 10 lbs.	Gauge	Diameter.	Length.	In 10 lbs.
No.	In.	In.	Num.	No.	In.	Ins.	Num.	No.	In.	Ins.	Num.
0	3/16	¼	3280	6	⅜	15/16	380	11	11/16	1 9/16	61·3
1		½	1276	7	7/16	1	239	12	¾	1¾	47·3
2	¼	9/16	1130	8	½	1 3/16	160	13	13/16	1 13/16	37·3
3	5/16	9/16	654	9	9/16	1 5/16	112	14	⅞	2 1/16	30
4	5/16	⅝	589	10	⅝	1 7/16	81·7	15	1	2⅜	19
5	⅜	⅞	407								

APPROXIMATE WEIGHT OF PIPE JOINTING MATERIALS PER JOINT.

Spigot and Faucet Pipes.			Flanged Pipes.						
			India Rubber.			Bolts and Nuts.			
Inside Diam.*	Lead	Rope Yarn.	Inside Diam.*	Faced all over.	Faced on Strips.	No.	Diam.	Length.	Weight.
Ins.	Lbs.	Ozs.	Ins.	Ozs.	Ozs.		Ins.	Ins.	Lbs.
¾	⅛	¾	2	1⅝	⅝	4	½	2⅜	1¼
1	⅜	1	2½	1¾	1⅛	4	½	2½	1½
1¼	1	1	2½	2	1⅓	4	9/16	2½	1½
1½	1¼	1	3	2	2	4	9/16	2⅝	1½
1½	1¼	1	3	2	2	4	9/16	2⅝	1½
2	1½	1¼	3	2	2	4	9/16	2⅝	1½
2	1⅝	1¼	3	2	2	4	9/16	2⅝	1½
2	1¾	1¼	3½	2½	2⅔	4	9/16	2⅝	1½
2½	2	1½	3½	2½	2⅔	4	9/16	2⅝	1½
2½	2	1⅝	4	2⅝	3⅛	4	9/16	2¾	1⅝
2½	2	1½	4	2⅝	3¼	4	9/16	2¾	1⅝
3	2¼	2	4	2⅝	3¼	4	9/16	2¾	1⅝
3	2¼	2	4	2⅝	3¼	4	9/16	2¾	1⅝
3	2¼	2	4½	3	4	4	⅝	3	2¼
3½	2⅝	2½	4½	3	4	4	⅝	3	2¼
4	3⅛	2½	5	3½	5	6	⅝	3	3½
4	3⅛	2¾	5	3½	5	6	⅝	3	3½
4½	3¾	3½	5½	3¾	5½	6	⅝	3	3½
5	6	4	6	4¼	6	6	⅝	3	3½
5	6	4	6	4¼	6	6	⅝	3	3½
5½	7	4½	6	4¼	6	6	⅝	3	3½
6	8	5½	7	5¼	8	6	⅝	3½	3½
6	8	5½							
7	8½	6¼							
7	8½	6¼							

(*Macfarlane, Strang & Co., Ltd.*)

* For thickness of metal see columns (A) and (B), page 233.

THICKNESSES OF PIPES.

1. Iron Water Piping.			2. Hydraulic Piping. Wrought Iron. To Stand 4,000 lbs. per Square Inch Pressure.			3. Hydraulic Piping. Cast Iron. To stand 200 lbs. per Square Inch Pressure.	
Internal Diameter of Pipe, in Inches.	External Diameter of Pipe, in Inches.	Number of Threads per Inch Whitworth Standard.	Internal Diameter of Pipe, in Inches.	External Diameter of Pipe, in Inches.	Number of Threads per Inch.	Internal Diameter of Pipe, in Inches.	Thickness of Pipe, in Inches.
⅜	·665	19	⅜	¾	14	1⅛	7/16
½	·822	14	½	1	14	1¼	7/16 ½
⅝	1·034	14	⅝	1⅛	14	2	
1	1·302	11	¾	1¼	11	2¼	9/16
1¼	1·492	11	⅞	1⅜	11	2½	9/16
1¼	1·650	11	1	1½	11	3	⅝
1⅜	1·745	11	1⅛	1⅝	11	3¼	⅝
1½	1·882	11	1¼	1¾	11	4	¾
1⅝	2·021	11	1⅜	1⅞	11	5	⅞
1¾	2·047	11	1½	2	11	6	1
1⅞	2·245	11	1⅝	2⅛	11		
2	2·347	11					
2⅛	2·467	11					
2¼	2·587	11					
2⅜	2·794	11					
2½	3·001	11					

BRITISH STANDARD SPECIFICATION FOR CAST-IRON PIPES AND SPECIAL CASTINGS FOR WATER GAS AND SEWAGE.*

(No. 78–1917).

(*Abstract.*)

2. The metal used for casting the pipes shall be pig iron alone, or pig iron and scrap, and shall be remelted in the cupola or air furnace. The pig iron shall be best tough grey foundry pig iron, and the scrap shall be clean, unburnt and of good quality. There shall be no admixture of cinder iron or any material calculated to render the metal inferior in quality, and the resulting casting shall not be white or vitreous on fracture.

7. The tensile breaking strength of the metal shall be not less than 9½ tons per square inch.

11. The straight pipes shall be cast vertically, in dry sand moulds formed from turned iron patterns and in accurately faced and truly jointed boxes, and without the use of core nails, chaplets, or thickness pieces, or any substitute therefor. They shall be cast with a sufficient head of metal to ensure soundness, which head shall be afterwards cut off in a lathe and the finished pipe left the length and shape required. All straight spigot and socket pipes shall be cast socket downwards.

22. The straight pipes shall, before being coated, respectively withstand the following hydraulic test pressures without showing any leakage, sweating, or other defect of any kind :—

	Gas.	Water.		
	Class A.	Class B.	Class C.	Class D.
Test pressure in feet head . .	200	400	600	800

While under the test pressure each pipe shall be smartly struck with a suitable hand hammer weighing not less than one and a half pounds.

BRITISH STANDARD CAST-IRON PIPES FOR WATER, GAS AND SEWAGE.

Standard Thicknesses and External Diameters for Spigot and Socket and Flange Straight Pipes.

Nominal Internal Diameter of Pipe (ins.)	Gas. Class A. Test Pressure 200 ft. hd.		Water and Sewage. Class B. Test Pressure 400 ft. hd.		Class C. Test Pressure 600 ft. hd.		Class D. Test Pressure 800 ft. hd.		Nominal Internal Diameter of Pipe (ins.)
	Thickness. (ins.)	External Diameter. (ins.)	Thickness. (ins.)	External Diameter. (ins.)	Thickness. (ins.)	External Diameter. (ins.)	Thickness. (ins.)	External Diameter. (ins.)	
3	·38	3·76	·38	3·76	·38	3·76	·40	3·76	3
4	·39	4·80	·39	4·80	·40	4·80	·46	4·80	4
5	·41	5·90	·41	5·90	·45	5·90	·52	5·90	5
6	·43	6·98	·43	6·98	·49	6·98	·57	6·98	6
7	·45	8·06	·45	8·06	·53	8·06	·61	8·06	7
8	·47	9·14	·47	9·14	·57	9·14	·65	9·14	8
9	·49	10·20	·49	10·20	·60	10·20	·69	10·20	9
10	·52	11·26	·52	11·26	·63	11·26	·73	11·26	10
12	·55	13·14	·57	13·14	·69	13·60	·80	13·60	12
14	·57	15·22	·61	15·22	·75	15·72	·86	15·72	14
15	·59	16·26	·63	16·26	·77	16·78	·89	16·78	15
16	·60	17·30	·65	17·30	·80	17·84	·92	17·84	16
18	·63	19·38	·69	19·38	·85	19·96	·98	19·96	18
20	·65	21·46	·73	21·46	·89	22·06	1·03	22·06	20
21	·67	22·50	·75	22·50	·92	23·12	1·06	23·12	21

* By permission of the British Engineering Standards Association.

BRITISH STANDARD CAST-IRON PIPES FOR WATER, GAS AND SEWAGE—(*contd.*).

Nominal Internal Diameter of Pipe (ins.)	Gas.		Water and Sewage.						Nominal Internal Diameter of Pipe (ins.)
	Class A.		Class B.		Class C.		Class D.		
	Test Pressure 200 ft. hd.		Test Pressure 400 ft. hd.		Test Pressure 600 ft. hd.		Test Pressure 800 ft. hd.		
	Thickness. (ins.)	External Diameter. (ins.)	Thickness. (ins.)	External Diameter. (ins.)	Thickness. (ins.)	External Diameter. (ins.)	Thickness. (ins.)	External Diameter. (ins.)	
22	·68	23·54	·77	23·54	·94	24·16	1·08	24·16	22
24	·71	25·60	·80	25·60	·98	26·26	1·13	26·26	24
26	·74	27·66	·83	27·66	1·02	28·36	1·18	28·36	26
27	·75	28·70	·85	28·70	1·04	29·40	1·20	29·40	27
28	·76	29·72	·86	29·72	1·06	30·44	1·22	30·44	28
30	·79	31·78	·89	31·78	1·09	32·52	1·26	32·52	30
32	·82	33·84	·92	33·84	1·13	34·62	1·31	34·62	32
33	·83	34·88	·94	34·88	1·15	35·66	1·33	35·66	33
36	·87	37·96	·98	37·96	1·20	38·76	1·38	38·76	36
38	·90	40·02	1·01	40·02	1·23	40·84	1·42	40·84	38
40	·92	42·06	1·03	42·06	1·26	42·92	1·46	42·92	40
42	·95	44·12	1·06	44·12	1·30	45·00	1·50	45·00	42
44	·98	46·16	1·08	46·16	1·33	47·06	1·53	47·06	44
46	1·00	48·22	1·11	48·22	1·36	49·14	1·57	49·14	46
48	1·03	50·26	1·13	50·26	1·38	51·20	1·60	51·20	48

NOTE.—It is suggested that the working pressures should not exceed one-half of the respective test pressures.

SECTION V

PART II

TENSILE STRENGTH OF MATERIALS — STRENGTH OF WIRE, CHAINS, AND ROPES—LATERAL STRENGTH OF MATERIALS—ADMIRALTY TESTS OF STEEL AND IRON —LLOYD'S TESTS—BUREAU VERITAS TESTS—INDIAN STATE RAILWAY TESTS—STRENGTH OF TUBES, RINGS AND CHAINS.

STRENGTH OF MATERIALS.

This Table shows the weight a column can bear with *safety* when the weight presses through the length of the column. The tabular number is the weight in pounds or tons per square inch on the transverse section of a column of a length less than twelve times its smallest thickness.

RESISTANCE TO COMPRESSION.



FIG. 381.

Kind of Material.	Lbs.	Tons.
Oak of good quality	432	·1885
„ common	280	·125
Spruce, red (Sapin rouge)	540	·241
„ white (Sapin blanc)	140	·6256
Iron, wrought	14,400	6·43
„ cast	28,750	12·85
Basalt	2,875	1·285
Granite, hard	1,000	·446
„ common	575	·256
Marble, hard	1,435	·640
„ common	431	·192
Sandstone, hard	1,295	·577
„ loose	5·6	·0025
Brick, good quality	175	·078
„ common	58	·0259
Limestone of hardest kind	720	·321
„ common	432	·193
Plaster of Paris	86	·0384
Mortar, good quality, and 18 months old	58	·0259
„ common	36	·016

When the length or height of the column is more than twelve times its smallest thickness, divide the tabular weight by the corresponding number in the following Table :

Length ÷ thickness	12	18	24	30	36	42	48	54	60
Divide by	1·2	1·6	2	2·8	4	5	6	8	12

TENSILE STRENGTH OF MATERIALS.

Weight or Power required to Tear Asunder One Square Inch.

TENSILE STRENGTH OF WOODS.

Woods.	Lbs.	Woods.	Lbs.	Woods.	Lbs.
Ash	14000	Lignum-vitæ	11800	Pear	9800
Bay	14000	Locust	20500	Pine, pitch	12000
Beech	11500	Mahogany	21000	„ larch	9500
Box	20000	„ Spanish	12000	„ American, white	11800
Cedar	11400	„ „	8000	Poplar	7000
Chestnut, sweet	10500	Maple	10500	Spruce, white	10290
Cypress	6000	Oak, American, white	11500	Sycamore	13000
Deal, Christiania	12400	„ English	10000	Teak	14000
Elm	13400	„ seasoned	13600	Walnut	7800
Lance	23000	„ African	14500	Willow	13000

TENSILE STRENGTH OF RUBBER.

Plantation rubber of good average quality should have a tensile strength of from 2,300 lbs. to 2,400 lbs. per square inch.

TENSILE STRENGTH OF METALS.

Metals.	Lbs.	Metals.	Lbs.	Metals.	Lbs.
Copper, wrought	34000	Iron, English bar	56000	Lead, milled	3320
„ rolled	36000	„ rivets, American	53300	„ wire	2580
„ cast, American	24250	„ „ English	65000	Platinum wire	53000
„ wire	61200	„ bolts	52250	Silver, cast	40000
„ bolt	36800	„ hammered	53913	Steel, cast, maximum	142000
Iron, cast, Low Moor		„ „ mean of		„ „ mean	88657
No. 2	14076	English	53900	„ blistered, soft	133000
„ „ Clyde No. 1	16125	„ crank-shaft	44750		104000
„ „ „ No. 3	23468	„ turnings	55800	„ shear	124000
„ „ Calder No. 1	13735	„ plates, boiler, American	48000	„ chrome, mean	170980
„ „ Stirling, mean	25764		62000	„ puddled, extreme	173817
„ „ mean of American	31829	„ plates, mean of English	51000	„ plates, lengthwise	96300
„ „ mean of English	19484	„ „ crosswise	48800	„ „ crosswise	93700
„ wrought wire	103000	„ plates, lengthwise	53800	„ razor	150000
„ best Swedish bar	72000	„ inferior, bar	30000	Tin, cast, block	5000
„ Russian bar	59500	„ wire, American	73600	„ Banca	2122
		„ scrap	53400	Zinc	3500
		Lead, cast	1800	„ sheet	16000

Lake Superior and Iron Mountain charcoal bloom iron has resisted 90,000 lbs. per square inch.

TENSILE STRENGTH OF ALLOYS.*

Alloys.	Lbs.	Alloys.	Lbs.
Gold 5, copper 1	50000	Copper 10, tin 1	32000
Brass	42000	„ 8, „ 1 (gun-metal)	30000
„ yellow	18000	„ 8, „ 1 (gun-metal, small bars)	50000
Bronze, least	17698	Tin 10, antimony 1	11000
„ greatest	56788	Delta bronze, No. 1 alloy	111600

* See also Section XXXVII., METALLURGY.

High-Class Engineering Alloys

'DELTA' BRAND

(REGISTERED TRADE MARK)

BRONZE, BRASS, YELLOW METAL, NAVAL BRASS, COPPER, &c.,

Castings, Forgings, Stampings, Pressings, Sheets, Tubes, Wire, Rods of any Section,

FOR

Marine Engineering, Shipbuilding, Mining, Sanitary and Electrical Work, Chemical Factories, Gas and Water Works, Gunpowder Magazines, etc.

Strongest Malleable Bronzes;
Acid-proof and other Corrosion-resisting Alloys;
Improved Bearing Metals;
White Anti-friction Metals, etc.

Supplied to British Admiralty, War Office, and other Tests and Specifications.

For prices and particulars please apply to:

The Delta Metal Company, Ltd.

EAST GREENWICH, LONDON, S.E. 10
(or Dartmouth Street, BIRMINGHAM).

On the lists of the Admiralty, War Office, Ministry of Munitions, Air Ministry, India Office, Post Office, Crown Agents for the Colonies, Principal Foreign Governments, Railway and Steamship Companies, etc.

When ordering, kindly specify the exact Brand or number of metal or material required. [SEE OTHER SIDE.

THE DELTA METAL CO., LTD.

LONDON AND BIRMINGHAM,

ORIGINAL AND LARGEST MANUFACTURERS OF

HIGH-SPEED

BRASS TURNING & SCREWING RODS,

SOLE MAKERS OF

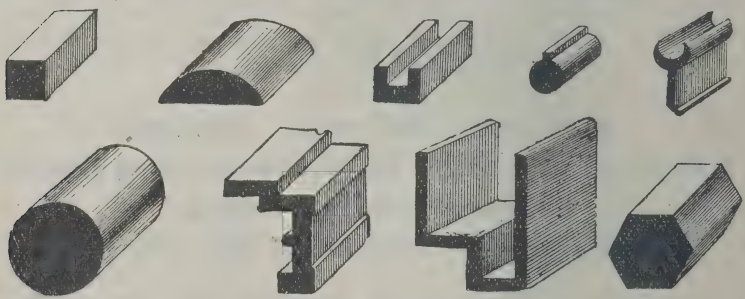
EXTRUDED RODS AND SECTIONS

'DELTA' BRAND

(REGISTERED TRADE MARK)

Brass, Yellow Metal, Red Metal, Naval Brass, Copper, Manganese Bronze, Aluminium Bronze, etc.

Round, Square, Hexagon, Flat, Angle, Tee, Channel.
Any Special Section to Pattern or Drawing.



REGISTERED TRADE-MARKS:

DELTA **DELTOID** **DIXTRUDO** **DIXTAMPO**

For prices and particulars please apply to :

The Delta Metal Company, Ltd.

EAST GREENWICH, LONDON, S.E.10

(or Dartmouth Street, BIRMINGHAM).

On the lists of the Admiralty, War Office, Air Ministry, Ministry of Munitions, India Office, Post Office, Crown Agents for the Colonies, Principal Foreign Governments, Railway and Steamship Companies, etc.

When ordering, kindly specify the exact Brand or number of metal or material required. [SEE OTHER SIDE.

F. 249

TENSILE TEST OF DELTA BRONZE No. I, EXTRUDED.

Made by Mr. R. H. Harry Stanger, Broadway Testing Works, Westminster.

Description.	Diameter. Inches.	Area. Square Inches.	Ultimate Strength. Tons per Sq. In.	Elongation per Cent. on 2 inches.	Reduction of Area Per Cent.
Extruded bar. Delta bronze No. I	0·502	0·1979	49 82	26·0	24·9

TENSILE TESTS OF DELTA BRONZE No. I, CAST.

Made by Mr. W. H. Stanger, M.I.C.E., F.C.S., Broadway Testing Works, Westminster.

Diameter. Inches.	Area. Square Inches.	Ultimate Strength. Tons per Square Inch	Elongation per Cent. on 2 Inches.	Reduction of Area per Cent.
0·500	0·1963	40·75	18·6	23·9
0·500	0·1963	40·75	19·4	20·1
0·500	0·1963	40·80	23·0	22·2
0·500	0·1963	41·30	20·0	20·4
0·501	0·1971	41·40	—	—
0·501	0·1971	41·50	20·5	19·3
0·500	0·1963	40·50	20·5	20·8
0·491	0·1893	40·46	18·0	17·9
Tensile strength, mean of 8 tests 40·93 tons per square inch.				

Tensile Strength of Metals at Different Temperatures.

TENSILE STRENGTH OF IRON, STEEL, AND CAST IRON AT HIGH AND LOW TEMPERATURES.

The tensile strength of wrought iron or steel appears to be a minimum at about 70° F., and increases as the temperature is changed, becoming 20 per cent. greater at about 500° F. There are indications of a brittle region at the temperature of steam at 5 to 10 lbs. pressure. Iron at low temperatures, while increasing in strength, retains its ductility.

The tensile strength of cast iron begins to decrease at as low a temperature as 200° F., and at a dull red heat, say about 1,000° F., its strength is reduced by one-third; at 1,240° F. it is reduced to zero.

THE EFFECT OF SUPERHEATED STEAM TEMPERATURES ON STEEL.

Based upon Experiments made in the Brown-Firth Research Laboratories, Sheffield

(*Contributed by W. H. Hatfield, D.Met.*)

Steam at 400 lbs. per sq. in. pressure and 350° of superheat probably represents the highest temperature at which steam is likely to be used. This corresponds to about 845° F. or 452° C. As the testing temperature increases from atmospheric to about 500° C. most types of steel show first an increase of strength, then a decrease. A mild carbon steel which at ordinary temperatures gave 27·2 tons per sq. in. maximum stress with 38 per cent. elongation gave at 200° C. 30 tons per sq. in. and 27 per cent. elongation, at 300° C. 32·3 tons per sq. in. with 23 per cent. elongation, but at 400° C. fell to 25·1 tons per sq. in. maximum stress with 37·6 per cent. elongation. At 550° C. the maximum stress was only 16·8 tons per sq. in. Carbon steel of higher carbon content shows a similar order of changes, but there is in some cases a slight decrease in strength at about 100° C. before the increase takes place. The temperatures at which

the steel has its maximum strength varies with the steel, a higher carbon generally bringing the maximum at a lower temperature. A 52-ton carbon steel gave 50 tons per sq. in. at 100° C., 53 tons per sq. in. at 200° C., 58 tons at 310° C., 48·5 tons per sq. in. at 420° C., and so on. A nickel chrome steel, which gave 37 tons per sq. in. and 30 per cent. elongation at ordinary temperatures, gave only 32·4 tons per sq. in. at 200° C.; 29 per cent. elongation followed by an increase of strength to 34·2 tons per sq. in., with 33 per cent. elongation at 410° C. Beyond this temperature the strength fell off rapidly.

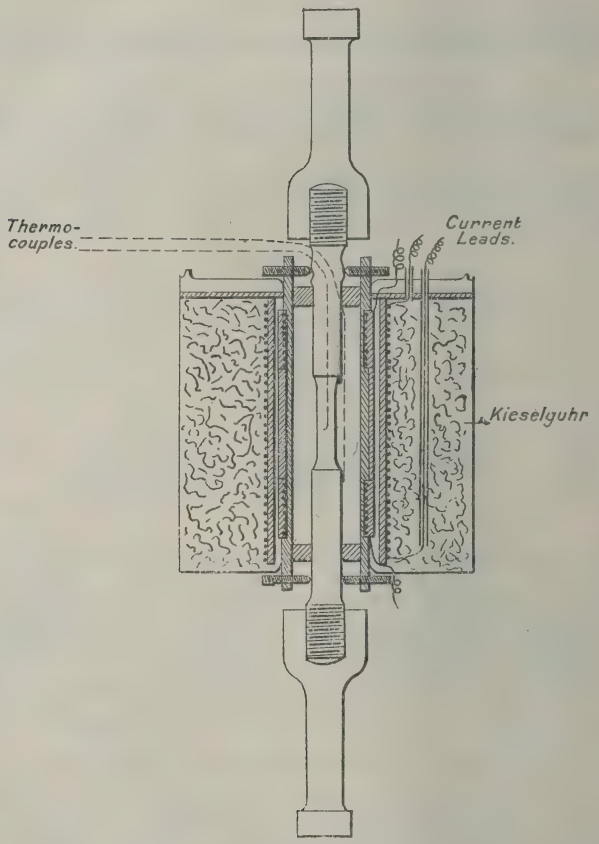


FIG. 381A.

Tests in Firth's stainless steel, which had a strength of 55·0 tons per sq. in. and 21 per cent. elongation at ordinary temperature, retained a strength of 45·0 tons per sq. in. with 22 per cent. elongation at 410° C., after falling slightly below this strength at 300° C. A specimen of high speed tool steel in an annealed condition showed a gradual reduction in strength as the temperature increased. The values were 50 tons per sq. in., and 21·6 per cent. elongation at ordinary temperature, and 36·4 tons per sq. in. 19·2 per cent. elongation at 460° C. This stainless steel and high speed steel retain their strength to a considerable degree up to 600° C.

A further test on nickel steel showed a decrease of strength from 48·6 tons per sq. in. to 39·2 tons per sq. in. at 250° C., followed by an increase to 43 tons per sq. in. at 350° C., and a further decrease to 32·7 tons per sq. in. at 500° C. The elongations per cent. at these temperatures were, ordinary 23·2 per cent. ; 250° C., 21 per cent. ; 350° C., 19 per cent. ; 500° C., 2¼ per cent.

For use in steam turbines, the above properties require careful consideration, since, of course, the design and strength of the parts should be based on the properties of the material at the actual working temperature.

For making the above determinations, a special small electric furnace (fig. 381A) was constructed and used for heating the specimens. An iron tube about 7¼ ins. long and 1½ ins. internal diameter and $\frac{3}{16}$ in. thick was turned down, except about 1½ in. length at each end, to about $\frac{3}{7}$ in. thickness. The main heating coil was a spiral of nichrome wire wrapped on a silica tube of 2¼ ins. diameter and fixed concentrically with the iron tube. Auxiliary heating coils were added at each end of the turned portion of the central tube, being separated from the latter by a layer of mica, and covered with a coating of refractory cement. A cylindrical metal box surrounded the whole, the space being filled with refractory material (kieselguhr). The object of the metal tube was to equalise the temperatures over the central portion of the furnace, and the end heating coils were added to compensate for the heat lost by radiation at the ends of the furnace. The tests were carried out in the Olsen testing machine. The test piece was 10 ins. long, having the test portion 1½ in. parallel, by 357 mils diameter (i.e. $\frac{1}{10}$ sq. in. cross section). This was located axially in the furnace by three set screws carried at each end of the iron tube. The screwed ends of the test piece were connected to the shackles of the machine by special gluts of 25 per cent. nickel steel, which has fairly low heat-conducting properties. This was found to be necessary in order to prevent the shackles and attachments of the machine from heating up unduly. The weight of the furnace was carried by the test piece itself from its upper end, a groove being turned on the test piece so that the upper set screws could be screwed tightly on it. The lower set screws were turned so as to only bear lightly on the test piece, thus permitting the lower portion of the latter to pass through easily, when elongation and fracture took place during the test. The heating coils, in series with a suitable resistance, were connecting across the 200-volt. A.C. supply mains. The temperature was measured by means of two thermo-electric couples, which had been previously calibrated. One was placed with the junction at the centre of the parallel portion of the test piece, and the other just above the end of the 'radius' so as to detect any variation in the temperature. The couples were tied in position on the test piece by fine wire previous to inserting in the furnace. To prevent any air current passing through the furnace the ends of the tube were packed with asbestos packing.

Strength of Steel at very High Temperatures.

(W. H. Hatfield.)

It frequently happens that engine parts have to work at still higher temperatures than those corresponding to superheated steam. Valves, pistons, and other parts of internal combustion engines, boiler flues, etc., are examples of such parts.

It is generally found that as the temperature rises above 500° C. the mechanical strength falls off fairly rapidly, whatever the composition of the steel. A mild steel of ·14 per cent. carbon content showed a strength of 9 tons per sq. in. at 640° C. and a strength of only 2·5 tons per sq. in. at 850° C. Under such conditions, however, the strength exhibited depends largely on the speed of deformation. A relatively small load will frequently cause a gradual breakdown of the material if the load is maintained. The order of strengths exhibited at 850° C. is somewhat as follows :— Mild carbon steel, higher carbon steel, nickel chrome steel, Firth's stainless steel, tungsten high-speed steel. A sample of the latter gave a strength of 11 tons per sq. in. when tested at 850° C. when suitably hardened and tempered.

It might be of interest to note that a quality of high speed steel having the condition of hardness in which it is employed as a tool (and in which it retains its cutting properties while working at a red-heat) had a strength of 78 tons per sq. in. at a temperature of 625° C.

Tensile Strength of Copper at Different Temperatures.

Temperature, °F . . .	122°	212°	302°	482°	545°	602°	801°	912°	1010°
Lbs. per square inch . .	33,100	32,200	30,900	27,000	25,400	22,300	18,900	14,800	11,100

Copper may suffer considerable loss in strength when exposed for a long period to variable temperatures, even if as low as 400° F. Le Chatelier found that at this temperature the ultimate tenacity of good copper thoroughly annealed is not more than 10 tons per square inch, while this figure cannot be depended on in the case of brazed pipes, as the metal is often seriously injured in the neighbourhood of the joint. Hard copper suffers more than soft annealed copper

from the effects of heat. Le Chatelier's test showed that with a hard copper having a tenacity of 31·5 tons per sq. in., at 60° F. the strength was reduced to 11·4 tons after being exposed to a temperature of 482° F. for 30 minutes. Under the same conditions the tenacity of soft copper was reduced from 15·9 to 10·4 tons per sq. in. Prof. Roberts-Austen showed that minute quantities of impurities in copper seriously affect its tenacity. The presence of one-tenth of 1 per cent. of bismuth reduced the breaking load of a sample from 8 tons per sq. in. at 64° F. to 1·7 tons at 390° F. (*Philip Dawson, M.I.C.E.*)

TENSILE STRENGTH OF DELTA BRONZE NO. IV. AT DIFFERENT TEMPERATURES.

Delta Bronze, No. IV. Cast, tested at increased temperatures by Professor W. C. Unwin had lost :—

At 410° F.	. . . .	5·9	per cent.	of its original strength
„ 506° F.	. . . .	17·6	„	„ „
„ 590° F.	. . . .	33·0	„	„ „

that is to say, at a temperature as high as 590° F. it still retained two-thirds of its original strength.

TENSILE STRENGTH OF GUN-METAL AT DIFFERENT TEMPERATURES.

Gun-metal (9 of copper and 1 of tin) becomes perceptibly softer at 400° F., and at 550° F. its tenacity is reduced one-half; at 1380° F. (750° C.) it almost reaches zero. This is no doubt due to a large extent to the tin element, the melting-point of which is 446° F. But it is not altogether the melting-point of the individual constituents which appear to influence the matter. Copper, for instance (see p. 251), has a high melting-point (1929° F.), but its strength is seriously affected by prolonged exposure to a temperature as low as 400° F. Superheated steam will affect gun-metal (and other alloys) by chemical action, apart from the question of temperature.

REINFORCED SHEET LEAD.

A reinforcement of lead with perforated iron sheet has been found to increase the elastic limit four- to five-fold, and the tensile strength from two- to three-fold, the variations being due to differences in gauge of wire and mesh used. Lateral extensions of 20 per cent. and elongation of 20 per cent. have been obtained. Sheets 4 ft. 6 ins. by 5 ft. 6 ins. have been made. These reinforced sheets may be bent or shaped almost at will, as the lead does not fracture when bent. The sheets may be cut and joints burned together as in ordinary sheet lead. A pipe, 8 ins. in diameter, made up of reinforced lead 0·2 in. thick, when tested for strength, resisted pressures up to 85 lbs. per sq. in.

Stress due to Temperature.

A change of temperature = 16° C. (29° F.) for cast iron, and of 6½° C. (11·7° F.) for wrought iron, will produce 1 ton stress per square inch of section. For 45° C. (81° F.) wrought iron varies $\frac{1}{1800}$ of its length; this will produce 7 tons stress per square inch of section.

Corrosion of Metals.*

RELATIVE CORROSION OF SOFT STEEL, WROUGHT IRON, AND NICKEL STEEL, TAKING WROUGHT IRON AS A STANDARD.

Metal.	Sea Water.	Fresh Water.	Weather.	Average.
Wrought iron . . .	100	100	100	100
Soft steel	114	94	103	103
3 per cent. nickel steel .	83	80	67	77
26 per cent. nickel steel .	32	32	30	31

(*H. M. Howe.*)

COMPARATIVE TESTS WITH WROUGHT IRON, STEEL, AND DELTA BRONZE NO. IV., IMMERSED DURING A PERIOD OF 6½ MONTHS IN ACID MINE WATER.

Details.	Wrought Iron.	Steel.	DELTA BRONZE No. IV.
Weight of bar when put in . . .	1·1805	1 2125	1·2787
Weight of bar after 6½ months . . .	0·6393	0·6614	1·2633
Loss in 6½ months	46·3 per cent.	45·45 per cent.	1·2 per cent.

* See also Section XXXVII., METALLURGY.

Strength of Brickwork.

(Royal Institute of British Architects' Experiments.)

Nature of Brickwork.	Crushing Strength. Tons per Sq. Ft.
London stocks in lime mortar (average workmanship)	12
" " (specially good workmanship)	18½
" cement mortar (average workmanship)	17
" " (specially good workmanship)	39
Gault bricks in lime mortar (average workmanship)	21
" " (specially good workmanship)	31
" cement mortar (average workmanship)	24
" " (specially good workmanship)	50½
Leicester reds in lime mortar (average workmanship)	32
" " (specially good workmanship)	45½
" cement mortar (average workmanship)	54½
" " (specially good workmanship)	84
Staffordshire blues in lime mortar (average workmanship)	74
" " (specially good workmanship)	114
" cement mortar (average workmanship)	77½
" " (specially good workmanship)	119
Fletton bricks in lime mortar (specially good workmanship)	30½
" cement mortar (specially good workmanship)	56

The following table gives the strength of these bricks when tested separately:—

Strength of Bricks.

Description.	London Stocks.	Burham Gaults.	Leicester Reds.	Stafford-shire Blues.	Fletton.
	Tons per Sq. Ft.	Tons per Sq. Ft.	Tons per Sq. Ft.	Tons per Sq. Ft.	Tons per Sq. Ft.
Cracked at	76·2	102·3	248·1	471·6	—
Crushed at	84·3	182·2	382·1	701	220·8

Strength of Masonry.

Masonry will carry safely 2 to 10 tons per square foot, and carefully-built masses of cut and dressed granite may carry 4 times the higher figure.

Adhesive Strength of Mortars.

Nature of Substance.	Tensile Strength, in Pounds per Square Inch.	After Mixture.
		Months.
Common mortar to compact limestone	15	6
" " " brick	33	6
Good hydraulic lime	170	12
Ordinary " "	140 to 100	12
Fat lime	40	12
Good hydraulic mortar	140	12
Ordinary " "	85	12
Good common mortar	50	12
Bad " "	20	12
Cement from chalk lime and blue clay a few days after mixture	125	
Portland cement from compact limestone and clay 30 to 50 days after mixture	1,200 to 1,500	

HOLDING POWER OF GLUE.

Wood.	Pounds per Square Inch across the Grain End to End.	Pounds per Square Inch with the Grain.
Beech	2,133	1,095
Elm	1,436	1,124
Oak	1,735	568
White wood	3,149	341
Maple	1,422	896

Some elaborate tests carried out in Germany proved that joints made with ordinary joiners' glue are strongest when the glue is dissolved in 150 per cent. of water and applied to wood heated to 104° Fah. The joint was dried under a pressure of 284 lbs. per square inch for twenty-four hours, and had a breaking strength of 984 lbs. per square inch. Increases in the proportion of water or the temperature reduced the strength of the joint.

Breaking Stresses of Wire and Wire Ropes.

SIZES, WEIGHTS, LENGTHS, AND BREAKING STRESSES OF ANNEALED AND BRIGHT IRON WIRE (*Rylands'*).

Standard Wire Gauge.	Diameter.		Sectional Area.	Weight of		Length of 1 Cwt.	Breaking Stresses.		Standard Wire Gauge.
				100 Yards.	Mile.		Annealed.	Bright.	
	In.	Mm.	Sq. In.	Lbs.	Lbs.	Yards.	Lbs.	Lbs.	
7/0	·500	12·7	·1963	193·4	3,404	58	10,470	15,700	7/0
6/0	·464	11·8	·1691	166·5	2,930	67	9,017	13,525	6/0
5/0	·432	11·0	·1466	144·4	2,541	78	7,814	11,725	5/0
4/0	·400	10·2	·1257	123·8	2,179	91	6,702	10,052	4/0
3/0	·372	9·4	·1087	107·1	1,885	105	5,796	8,694	3/0
2/0	·348	8·8	·0951	93·7	1,649	120	5,072	7,608	2/0
1/0	·324	8·2	·0824	81·2	1,429	138	4,397	6,595	1/0
1	·300	7·6	·0707	69·6	1,225	161	3,770	5,655	1
2	·276	7·0	·0598	58·9	1,037	190	3,190	4,785	2
3	·252	6·4	·0499	49·1	864	228	2,660	3,990	3
4	·232	5·9	·0423	41·6	732	269	2,254	3,381	4
5	·212	5·4	·0353	34·8	612	322	1,883	2,824	5
6	·192	4·9	·0290	28·5	502	393	1,544	2,316	6
7	·176	4·5	·0243	24·0	422	467	1,298	1,946	7
8	·160	4·1	·0201	19·8	348	566	1,072	1,608	8
9	·144	3·7	·0163	16·0	282	700	869	1,303	9
10	·128	3·3	·0129	12·7	223	882	687	1,030	10
11	·116	3·0	·0106	10·4	183	1,077	564	845	11
12	·104	2·6	·0085	8·4	148	1,333	454	680	12
13	·092	2·3	·0066	6·5	114	1,723	355	532	13
14	·080	2·0	·0050	5·0	88	2,240	268	402	14
15	·072	1·8	·0041	4·0	70	2,800	218	326	15
16	·064	1·6	·0032	3·2	56	3,500	172	257	16
17	·056	1·4	·0025	2·4	42	4,667	131	197	17
18	·048	1·2	·0018	1·8	32	6,222	97	145	18
19	·040	1·0	·0013	1·2	21	9,333	67	100	19
20	·036	0·9	·0010	1·0	18	11,200	55	82	20

WIRE ROPES

Telephones:
5165 } CENTRAL.
5166 }
2673 } BRIDGETON.
2674 }



Telegrams:
'ROPERY, RUTHERGLEN.'

Codes :— Private, Bentley's, Western Union, Marconi International, &c.

MANUFACTURERS OF FLEXIBLE AND SPECIALLY FLEXIBLE WIRE ROPES FOR ALL PURPOSES

WE specialise in the making of very high grade ropes for oil well drilling. Personal investigation of working conditions and long experience in manufacturing for most of the large users enable us to supply drilling ropes of the most satisfactory quality and construction for any conditions.

ALLAN, WHYTE & Co. LTD

CLYDE PATENT WIRE ROPE WORKS,
RUTHERGLEN, GLASGOW.

London Office: 1 EAST INDIA AVENUE, E.C. 3.

Telephone: 8809 CITY.

Telegrams: 'ALWHYTROP, LED, LONDON.'

CONTRACTORS TO ADMIRALTY, WAR OFFICE, COLONIAL AND FOREIGN GOVERNMENTS.

ALLAN, WHYTE & Co. LTD

CLYDE PATENT WIRE ROPE WORKS,
RUTHERGLEN, GLASGOW.

Telephones:
5165 } CENTRAL.
5166 }
2673 } BRIDGETON.
2674 }



Telegrams:
'ROPERY, RUTHERGLEN.'

Codes :—Private, Bentley's, Western Union, Marconi International, &c.

MANUFACTURERS OF FLEXIBLE AND SPECIALLY FLEXIBLE WIRE ROPES FOR ALL PURPOSES.

Recognised as Makers of Ropes of the Highest Quality.

Large Stocks held for immediate delivery in Glasgow, London, etc.

ILLUSTRATED CATALOGUE WILL BE SENT ON REQUEST

London Office: 1 EAST INDIA AVENUE, E.C. 3.

Telephone: 8809 CITY

Telegrams: 'ALWHYTROP, LED, LONDON.'

CONTRACTORS TO ADMIRALTY, WAR OFFICE, COLONIAL AND FOREIGN GOVERNMENTS.

BREAKING STRESSES OF STEEL WIRE (*Rylands'*).

S.W.G.	Annealed.	Bright.	S.W.G.	Annealed.	Bright.	S.W.G.	Annealed.	Bright.
	Lbs.	Lbs.		Lbs.	Lbs.		Lbs.	Lbs.
7/0	13,611	20,310	3	3,458	5,187	12	590	884
6/0	11,722	17,583	4	2,930	4,395	13	461	691
5/0	10,159	15,243	5	2,447	3,672	14	349	523
4/0	8,712	13,067	6	2,007	3,011	15	284	424
3/0	7,534	11,302	7	1,668	2,530	16	223	334
2/0	6,593	9,891	8	1,393	2,091	17	170	256
1/0	5,726	8,573	9	1,130	1,694	18	128	188
1	4,901	7,351	10	893	1,339	19	87	130
2	4,127	6,221	11	734	1,099	20	72	106

BREAKING STRESSES OF IRON AND STEEL WIRE.

Description.	Tons per Square Inch.	Description.	Tons per Square Inch.
Black or annealed iron wire .	25	Crucible cast-steel improved wire	100
Bright hard-drawn „ .	35	'Improved' cast-steel 'plough'	120
Bessemer steel wire . . .	40	Special qualities of tempered	
Mild Siemens-Martin steel wire	60	and improved cast-steel .	150 to 170
Improved ditto . . .	80		

BREAKING STRESSES OF GALVANISED TELEGRAPH WIRE.

(*Post Office Specification.*)

Weight per Mile.			Diameter.			Tests for Strength and Ductility.					
Required Standard.	Allowed.		Required Standard.	Allowed.		Breaking Weight	No. of Twists in 6 ins.	For Breaking Weight	No. of Twists in 6 ins.	For Breaking Weight	No. of Twists in 6 ins.
	Minimum.	Maximum.		Minimum.	Maximum.	Minimum.	Minimum.	not less than	Minimum.	not less than	Minimum.
Lbs.	Lbs.	Lbs.	Mils.	Mils.	Mils.	Lbs.		Lbs.		Lbs.	
800	767	833	242	237	247	2,480	15	2,550	14	2,620	13
600	571	629	209	204	214	1,860	17	1,910	16	1,960	15
450	424	477	181	176	186	1,390	19	1,425	18	1,460	17
400	377	424	171	166	176	1,240	21	1,270	20	1,300	19
200	190	213	121	118	125	620	30	638	28	655	26

BREAKING STRESSES OF HARD-DRAWN COPPER WIRE.

S.W.G.	Diameter.	Weight per Mile.	Breaking Stress.	Twists in 3 Inches.	S. W. G.	Diameter.	Weight per Mile.	Breaking Stress.	Twists in 3 Inches.
	In.	Lbs.	Lbs.			In.	Lbs.	Lbs.	
—*	·242	800	2,490	15 (In 6 Ins.)	—*	·097	150	490	25
—*	·194	600	1,800	20 (In 6 Ins.)	13	·092	132	420	27
—*	·158	400	1,250	25 (In 6 Ins.)	—*	·079	100	330	30
9	·144	324	980	11	15	·072	81	250	33
10	·128	256	700	15	16	·064	64	220	36
11	·116	210	630	20	17	·056	49	150	40
—*	·112	200	650	20	18	·048	36	115	45
12	·104	169	530	25					

* Post Office Specification.

TABLE OF SPECIAL STEEL WIRE CRANE AND LIFT ROPES, UNGALVANISED.
(*Bullivant & Co., Ltd., London.*)

Size Circumference.	Size Diameter.	Flexible. Six Strands each of 12 Wires. Seven Fibre Centres.				Flexible. Six Strands each of 19 Wires. One Fibre Centre.		Extra Flexible. Six Strands each of 24 Wires. Seven Fibre Centres.		Special Extra Flexible. Six Strands each of 37 Wires. One Fibre Centre.	
		Diameter.	Diamr. of Barrel or Sheave round which it may be at a Slow Speed worked.	Approx. Weight per 100 Feet.	Actual Breaking Stress.	Approx. Weight per 100 Feet.	Actual Breaking Stress.	Approx. Weight per 100 Feet.	Actual Breaking Stress.	Approx. Weight per 100 Feet.	Actual Breaking Stress.
Ins.		Mm.	Inches.	Lbs.	Tons.	Lbs.	Tons.	Lbs.	Tons.	Lbs.	Tons.
1	$\frac{5}{16}$	8	6	12	1·9	18	2·8	16	3·0	18	3·5
1¼	—	10	7½	18	2·9	25	4·3	24	5·0	25	4·8
1½	—	12	9	25	4·1	36	6·0	33	7·0	36	7·1
1¾	$\frac{9}{16}$	14	10½	35	5·6	50	8·1	47	9·3	50	9·9
2	$\frac{5}{8}$	16	12	45	7·6	66	11·1	60	12·7	66	13·2
2¼	—	18	13½	60	9·5	84	13·9	78	15·8	84	17·0
2½	$\frac{13}{16}$	20	15	70	11·7	102	17·0	95	19·2	102	20·1
2¾	$\frac{7}{8}$	22	16½	85	14·0	123	20·6	113	23·9	123	24·7
3	$\frac{15}{16}$	24	18	100	16·6	154	25·8	134	28·1	145	29·8
3¼	—	26	19½	120	20·0	184	30·0	159	33·8	172	33·8
3½	1⅛	28	21	140	23·0	217	35·5	188	38·7	198	39·7
3¾	—	30	22½	160	26·3	247	40·4	213	43·9	230	46·0
4	—	32	24	183	29·8	275	45·6	239	50·9	263	52·9
4¼	—	34	25½	200	33·6	308	51·1	275	56·9	295	60·1
4½	—	36	27	234	38·2	350	58·1	312	63·2	333	65·9
4¾	1½	38	—	—	—	392	64·3	344	71·6	369	74·1
5	—	40	—	—	—	420	70·9	378	78·7	409	82·6

TABLE OF ROUND STEEL WIRE ROPES FOR MINING, HAULING, WINDING AND SIMILAR PURPOSES.
(*Bullivant & Co., Ltd., London.*)

Circumference.		Approximate Diameter.		Approx. Weight.	Breaking Stress with soft Centre Wire in Strands.				
					80/90 Tons Sq. In.	90/100 Tons Sq. In.	100/110 Tons Sq. In.	110/120 Tons Sq. In.	120 Tons Sq. In.
Ins.	Mm.	In.	Mm.	Per 100 Ft.-Lbs.	Actual Tons.	Actual Tons.	Actual Tons.	Actual Tons.	Actual Tons.
1	25	$\frac{5}{16}$	8	19	2·9	3·3	3·6	4·0	4·2
1⅛	29	$\frac{3}{8}$	9	24	3·6	4·1	4·5	4·9	5·1
1¼	32	—	10	27	4·5	4·9	5·4	6·0	6·3
1⅜	35	$\frac{7}{16}$	11	34	5·5	6·1	6·7	7·4	7·7
1½	38	—	12	40	6·5	7·1	7·9	8·6	9·0
1⅝	41	$\frac{1}{2}$	13	47	7·4	8·3	9·1	10·1	10·4
1¾	44	$\frac{9}{16}$	14	54	8·7	9·8	10·8	11·9	12·3
1⅞	48	—	15	60	10·0	11·1	12·2	13·5	14·1
2	51	$\frac{5}{8}$	16	72	11·5	12·8	14·2	15·6	16·2
2⅛	54	$\frac{11}{16}$	17	80	12·8	14·3	15·9	17·4	18·1
2¼	57	—	18	87	14·2	16·0	17·6	19·3	20·1
2⅜	60	$\frac{3}{4}$	19	97	16·1	18·0	19·8	21·7	22·7
2½	63	$\frac{13}{16}$	20	107	17·7	19·8	21·8	23·9	25·0

WIRE ROPES

We manufacture the Highest Quality of Wire Ropes for Cranes, Hoists, Transmission of Power, Hawsers, Rigging, Trawl Warps, Aircraft, Ropeways, Tramways, Slipways, Oil Wells, and for all Engineering, Mining and Shipbuilding Purposes, in Sizes, Qualities and Constructions to Suit Every :: Requirement ::

R. S. NEWALL & SON Ltd.

19 ROYAL EXCHANGE SQUARE,

GLASGOW.

Telegrams : 'Renewal, Glasgow.' Telephones : Central 8555 (2 lines).
Codes : All Codes & Hamilton's Wire Rope Phrase Code 1921.

HEAD OFFICE AND WORKS - LINACRE, LIVERPOOL.

R. S. NEWALL & SON Ltd.

19 ROYAL EXCHANGE SQUARE,
GLASGOW.

AND AT LIVERPOOL AND LONDON.



NEWALL'S WIRE ROPES

FOR ALL PURPOSES.

Founded by R. S. NEWALL, Pioneer of the Wire Rope Industry.

BULLIVANTS' TABLE OF ROUND STEEL WIRE ROPES FOR MINING, HAULING, WINDING AND SIMILAR PURPOSES (*continued*).

Circumference.		Approximate Diameter.		Approx. Weight.	Breaking Stress with soft Centre Wire in Strands				
					80/90 Tons. Sq. In.	90/100 Tons. Sq. In.	100/110 Tons Sq. In.	110/120 Tons. Sq. In.	120 Tons Sq. In.
Ins.	Mm.	In.	Mm.	Per 100 Ft.-Lbs.	Actual Tons.	Actual Tons.	Actual Tons.	Actual Tons.	Actual Tons.
$2\frac{5}{8}$	67	—	21	120	19·8	22·0	24·4	26·7	27·8
$2\frac{3}{4}$	70	$\frac{7}{8}$	22	132	21·9	24·5	27·1	29·6	31·0
$2\frac{7}{8}$	73	—	23	140	23·3	26·0	28·8	31·5	32·9
3	76	$\frac{15}{16}$	24	154	25·6	28·7	31·7	34·7	36·2
$3\frac{1}{8}$	79	1	25	168	27·6	30·9	34·1	37·3	39·0
$3\frac{1}{4}$	83	—	26	184	30·2	33·7	37·3	40·8	42·6
$3\frac{3}{8}$	86	$1\frac{1}{16}$	27	196	32·3	36·1	39·9	43·7	45·6
$3\frac{1}{2}$	89	$1\frac{1}{8}$	28	217	35·1	39·2	43·3	47·5	49·6
$3\frac{5}{8}$	92	—	29	232	38·0	42·5	46·9	51·4	53·7
$3\frac{3}{4}$	95	—	30	247	40·4	45·1	49·9	54·6	57·0
$3\frac{7}{8}$	98	$1\frac{1}{4}$	31	262	42·8	47·9	52·9	57·9	60·5
4	102	—	32	275	45·4	50·7	56·0	61·4	64·1

Particulars of ropes with higher breaking stress and larger sizes can be furnished on application to the makers.

RESISTANCE TO TORSIONAL RUPTURE.

RELATIVE POWER OF RESISTANCE TO TORSIONAL RUPTURE BY SHOCK OF VARIOUS WOODS.

White pine	1·00	Yellow pine	3·87
Spruce	1·50	Black walnut	3·95
Red cedar	1·61	Locust	5·80
Spanish mahogany	1·65	Oak	6·60
Ash	2·25	Hickory	6·90
Chestnut	2·40		

In a report issued by the Forest Service of the United States Department of Agriculture, it is stated that a wooden beam can take twice as much deflection under impact as under ordinary rates of loading without showing loss of elasticity. Increased rate of loading is accompanied by an increase in strength.

STIFFNESS.

RELATIVE STIFFNESS OF WOODS.

(Ratio of twisting moment to total angle of torsion.)

White pine	1·00	Red cedar	4·00
Yellow pine, sap	2·25	Spanish mahogany	3·00
,, ,, heart	2·25	Oak	2·53
Spruce	0·67	Hickory	4·1
Ash	1·87	Locust	5·50
Black walnut	2·63	Chestnut	1·60

LATERAL STRENGTH OF MATERIALS.

l = length of beam, in feet.
h = height, b = breadth or thickness, in inches, of the beam where the load is acting.
k = coefficient for the different materials and sections of beams.*
x = coefficient of elasticity of materials (table, page 261) = modulus of elasticity† ÷ 7,000.
f = elastic deflection, in inches.
W = weight, in lbs., which the beam can bear with safety, being about one-quarter of the ultimate load at which the beam would break.

* The value of k varies according to the shape of the beam section (see pages 259-260). For rectangular beams the values are those given in the table, page 261. † See page 263.

EXAMPLE 1 (fig. 382).—A rectangular beam of English oak fastened in a wall projects out $l = 6$ feet 4 inches; $h = 8$ inches, and $b = 5$ inches. Required, what weight, W, it can bear with safety on the end. For English oak, coefficient $k = 25$.

$$W = \frac{25 \times 5 \times 8^2}{6{\cdot}333} = 1{,}263 \text{ lbs.}$$

EXAMPLE 2 (fig. 383).—A cast-iron beam of section fig. 393, with thickness $b = 1{\cdot}25$ inches height $h = 22{\cdot}5$ inches, supported at the two ends in a length $l = 25$ feet. Required, what weight W, it can bear with safety in the middle. For cast iron, coefficient $k = 266$.

$$W = \frac{4 \times 266 \times 1{\cdot}25 \times 22{\cdot}5^2}{25} = 26{,}930 \text{ lbs.} = 12{\cdot}03 \text{ tons.}$$

EXAMPLE 3.—Required the elastic deflection for the same beam and condition as in the last example. Modulus of elasticity $x = 2{,}285$ for cast iron.

$$f = \frac{26325 \times 25^3}{16 \times 2285 \times 1{\cdot}25 \times 22{\cdot}5^3} = {\cdot}79 \text{ inches.}$$

EXAMPLE 4 (fig. 386).—A wrought-iron girder of section fig. 399, consisting of four angle irons of $a = 3{\cdot}5 \times 0{\cdot}5 \times 2 \times 4 = 14$ square inches, the plate being $0{\cdot}5 : 1{\cdot}35 = 0{\cdot}37$ inches thick, and $h = 18$ inches deep by $l = 22$ feet. Required, how much weight, W, evenly distributed, the girder can bear with safety. For wrought iron, coefficient $k = 1040$.

$$W = \frac{8 \times 1040 \times 14 \times 18}{22} = 95{,}302 \text{ lbs.} = 42{\cdot}55 \text{ tons.}$$

If plates are riveted to the angle iron at top and bottom, add that area to a.

EXAMPLE 5 (fig. 404).—The crank $R = 3{\cdot}5$ feet, force $F = 3{,}860$ lbs., length of the shaft $l = 64$ feet, diameter $D = 5{\cdot}25$ inches. Required, the twisting in degrees; the shaft being of wrought iron. For wrought iron, coefficient $x = 4{,}110$.

$$\text{Degrees} = \frac{38{\cdot}4 \times 3860 \times 3{\cdot}5 \times 64}{4110 \times 5{\cdot}25^4} = 10{\cdot}63°.$$

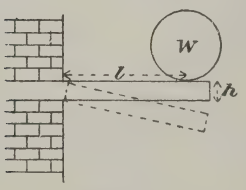


FIG. 382.

$$W = \frac{kbh^2}{l}, \qquad f = \frac{Wl^3}{xbh^3}.$$

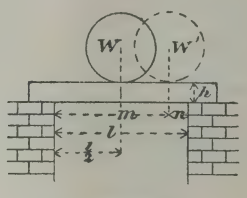


FIG. 383.

$$W = \frac{4kbh^2}{l}, \quad W' = \frac{Wl^3}{4mn}, \quad f = \frac{Wl^3}{16xbh^3}.$$

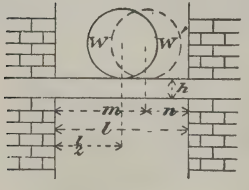


FIG. 384.

$$W = \frac{8kbh^2}{l}, \quad W' = \frac{Wl^3}{4mn}, \quad f = \frac{Wl^3}{32xbh^3}.$$

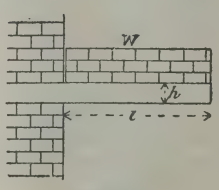


FIG. 385.

$$W = \frac{2kbh^2}{l}, \quad f = \frac{5Wl^3}{2xbh^3}.$$

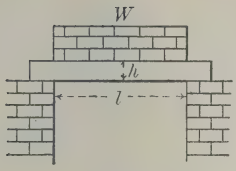


FIG. 386.

$$W = \frac{8kbh^2}{l}, \qquad f = \frac{5Wl^3}{32xbh^3}.$$

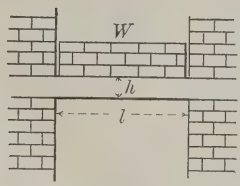


FIG. 387.

$$W = \frac{16kbh^2}{l}, \qquad f = \frac{5Wl^3}{64xbh^3}.$$

VALUES OF COEFFICIENT k FOR BEAMS OF VARIOUS SECTIONS.
(Factor of safety = 4.)




FIG. 388.

Material.	Coefficient k.
Steel	233
Wrought iron	156
Cast iron	154
English oak	25




FIG. 389.

Material.	Coefficient k.
Steel	233
Wrought iron	156
Cast iron	154
English oak	25

$bh^2 = S^3$.



FIG. 390.

Material.	Coefficient k.
Steel	137
Wrought iron	92
Cast iron	91
English oak	15

$bh^2 = D^3$.




FIG. 391.

Material.	Coefficient k.
Steel	137
Wrought iron	92
Cast iron	91
English oak	15

$bh^2 = D^3 - d^3$.



FIG. 392.

Material.	Coefficient k.
Steel	1360
Wrought iron	910

$bh^2 = ah$.
h = height. a = sectional area in square inches.




FIG. 393.

Material.	Coefficient k.
Steel	403
Wrought iron	270
Cast iron	266




FIG. 394.

Material.	Coefficient k.
Steel	367
Wrought iron	246
Cast iron	243




FIG. 395.

Material.	Coefficient k.
Steel	388
Wrought iron	260
Cast iron	236

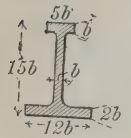


FIG. 396.

Material.	Coefficient k.
Steel	1090
Wrought iron . . .	728
Cast iron	720

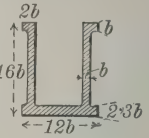


FIG. 397.

Material.	Coefficient k.
Cast iron	923

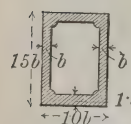


FIG. 398.

Material.	Coefficient k.
Cast iron	821

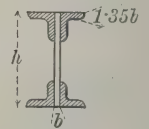


FIG. 399.

Material.	Coefficient k.
Steel	1550
Wrought iron . . .	1040

$bh^2 = ah.$

a = area of all the four angle irons in square inches.

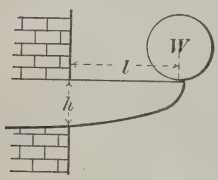


FIG. 400.

A beam fixed at one end and loaded at the other should have the form of a parabola, in which l = abscissa and h = ordinate; y = depth, x = length from W.

$$y = h\sqrt{\frac{x}{l}}.$$

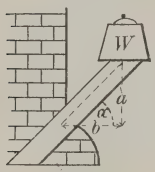


FIG. 401.

$$W = \frac{kbh^2}{l\cos\alpha} = \frac{kbh^2}{b'}.$$

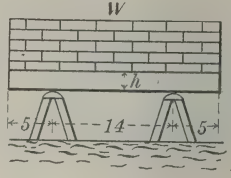


FIG. 402.

$$W = \frac{36kbh^2}{l}.$$

Divide the length into 24 equal parts; place 14 in the middle and 5 at each end.

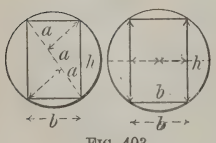


FIG. 403.

TO CUT OUT THE STOUTEST RECTANGULAR BEAM FROM A LOG.

1st case, divide the diameter into 3 equal parts, and draw lines at right angles as represented.

2nd, divide the diameter into 4 equal parts.

(1) $h = 1{\cdot}414\ b$, elastic beams.
(2) $h = 1{\cdot}732\ b$, non-elastic beams.

TWISTING ANGLE OF SHAFTS.

l = length of shaft, in feet. D = diameter of shaft, in inches. R = radius of crank, in feet. F = turning-force, in lbs., applied at pin d at right angles to crank. n = number of revolutions per minute. H = horse-power being transmitted. x = coefficient of Elasticity of metal (See Table, p. 261.).

$$\text{Twisting in degrees} = \frac{38{\cdot}4\text{FR}l}{x\text{D}^4} = \frac{201700\text{H}l}{xn\text{D}^4}$$

Also

$$\text{D} = 4\sqrt{\frac{\text{FR}}{x}} = 70\sqrt[3]{\frac{\text{H}}{xn}}.$$

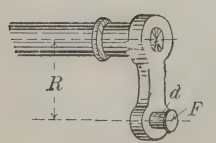


FIG. 404.

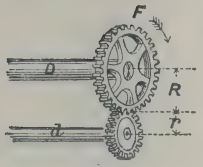


FIG. 405.

l = length of large shaft, D, in feet. D = diameter of large shaft, in inches. d = diameter of small shaft, in inches. R = radius of large wheel, in feet. r = radius of small wheel, in feet. F = turning-point, in lbs., at periphery of large wheel at right angles to radius. n = number of revolutions per minute of large wheel. H = horse-power transmitted by large shaft. x = coefficient of elasticity of metal (see Table below).

$$\text{Twisting in degrees} = \frac{38{\cdot}4\text{FR}l}{x\text{D}^4} = \frac{201700\text{H}l}{xn\text{D}^4}.$$

Also

$$\text{D} = 4\sqrt[3]{\frac{\text{FR}}{x}} = 70\sqrt[3]{\frac{\text{H}}{xn}}. \qquad \text{D} : d = \sqrt[3]{\text{R}} : \sqrt[3]{r}.$$

ABSOLUTE AND ULTIMATE STRENGTH OF MATERIALS.

Kind of Material.	Coefficient k (for Rectangular Beams).				Elasticity.
	Safety.	Short Intervals.	Pressing Circumstances.	Ultimate.	x
Wrought iron	120	162	240	488	4,110
Cast iron	150	200	300	600	2,285
Cast steel, soft	385	519	170	1,540	4,300
„ „ hardened	1,050	1,400	2,100	4,200	6,000
Blistered steel, soft	175	233	350	700	4,200
Brass	58	75	113	226	1,280
Copper	53	71	106	212	2,160
Zinc	15	20	30	61	2,360
Tin	17	23	34	69	
Lead	4	6	9	18	100
Ash	45	56	85	170	221
Hickory	67	90	135	270	
Chestnut, sweet	42	56	85	170	
Oak, white	50	66	100	200	300
„ English	25	33	50	100	248
„ Canadian	37	49	73	147	283
Pine, white	34	45	67	135	
„ yellow	38	50	75	150	268
Teak	51	68	102	205	316

The absolute safety weight is here taken as one-quarter of the ultimate breaking weight, but when the weight is acting at short intervals one-third might be relied upon, or in pressing circumstances one-half, when the materials in the beams are known to be of good quality; but the latter value should never be exceeded.

CRUSHING STRENGTH OF TIMBER.

Approximately the crushing strength (in direction of grain) of timber in lbs. per sq. in. = weight of wood in lbs. per cu. ft. × 165.

(*Percy W. Smith*, exps. made at Northampton Poly. Inst.—*Engineer*, April 10, 1914.)

SAFE LIMIT OF LOADING.

Wood.	Wrought Iron.	Cast Iron.	
$\frac{1}{10}$	$\frac{1}{3}$ to $\frac{1}{5}$	$\frac{1}{4}$ to $\frac{1}{6}$	of the load which would produce rupture.

Wrought iron will resist about two-thirds as much to crushing as to tension.

A triangular beam which has the same area and depth as a rectangular one is only half as strong as the rectangular one.

A beam of cast iron supported at both ends is six times as strong with the apex up as down if fixed at one end and loaded at free end it is six times as strong with apex down as with it up.

The strength of a cylindrical beam to that of a square one of the same area is as

$$1 : \frac{2}{3}\sqrt{\pi}; \quad \text{or} \quad 1 : 1{\cdot}18 \text{ nearly.}$$

Turning iron down has no important effect on the tenacity.

For good pure iron and steel containing no appreciable quantity of the hardening elements other than carbon

$$T = 52{,}625\ (1 + C^2). \qquad (Weyrauch.)$$

TRANSVERSE STRENGTH OF MATERIALS (*Haswell*).

Reduced to the uniform measure of one inch square and one foot in length; weight suspended from one end.

Material.	Breaking Weight.	Value for General Use.
Metals.	Lbs.	
Cast iron, American (means of four divisions of grades)	507	125–160
	632	155–210
	733	180–240
	772	192–250
„ mean by Major Wade	681	170–225
„ West Point Foundry, extreme	980	250–325
„ English, Low Moor, cold blast	472	110–140
„ Ponkey, cold	581	145–190
„ hot blast, mean	500	125–165
„ cold „ „	516	130–170
„ Ystalyfera, cold blast	770	195–255
„ mean of 65 kinds	500	125–165
„ mean of 15 kinds, direct from the pig, cold blast	641	160–215
„ planed bar	518	130–170
„ rough bar	534	133–175
Steel, greatest	1,918	350–450
„ puddled (permanent bend)	800	170–225
Woods.		
Ash	168	55
Beech	130	32
Birch	160	40
Chestnut	160	53
Deal, Christiania	137	45
Elm	125	30
Hickory	250	55
Locust	295	80
Maple	202	65
Norway pine	123	40
Oak, African	208	50
„ American white	230	50
„ „ live	245	55
„ Canadian	146	36
„ Dantzic	122	30
„ English	140	35
„ „ superior	188	45
Pitch pine	136	45
„ American	160	50
Riga fir	94	30
Teak	206	60
White pine	92	30
„ American	130	45
Whitewood	116	38
Wrought Iron.		
American	700	160–200
	650	
	600	

Material.	Breaking Weight.	Value for General Use.
Wrought Iron (continued).	Lbs.	
English	400	100–130
„	550	135–180
Swedish *	665	165–210
Mixture of Cast and Wrought Iron, &c.		
Cast iron, Blaenavon	..	145
„ „ 10 per cent. of wrought	..	175
„ „ 30 per cent. of wrought	..	230
„ „ 50 per cent. of wrought	..	185
„ „ and 2½ per cent. of nickel, mean	..	180
„ „ Stirling, second quality	..	154
„ „ Stirling, third quality	..	125
Copper	..	55
Brass	..	58
Stones (*American*).		
Flagging, blue	31	10
Freestone, Conn.	13	4
„ Dorchester	10·8	3½
„ New Jersey	20·1	6½
	17·8	6
„ New York	24	8
Granite, blue, coarse	18	6
„ Quincy, Mass.	26	8½
Stones (*English*).		
Adelaide marble	4·5	1½
Arbroath	17	5½
Bangor slate	90	30
Bath	5·2	1¾
Caithness paving, Scotland	68	22
Cornish granite	22	7
Craigleith sandstone	10·7	3½
Darley sandstone, Victoria	1·3	4
Kentish rag	35·8	12
Limestone	11	3½
Llangollen slate	43	14
Park Spring sandstone	4·3	1·4
Portland oolite	21·2	7
Valentia paving, Ireland	68·5	23
Welsh „	157	55
Yorkshire, blue	26	8½
„ landing	22·5	7½
„ paving	10·4	3½

* With 840 lbs. the deflection was one inch, and the elasticity of the metal destroyed.

TRANSVERSE STRENGTH OF MATERIALS (*continued*).

Material.	Breaking Weight.	Material.	Breaking Weight.
Concretes.	Lbs.	*Bricks.*	Lbs.
Fire-brick beam, Portland cement .	3·1	Best stock	11·8
„ . sand 3 parts, lime 1 part	·7	Fire-brick	14
Cements.		New brick	10·7
Blue clay and chalk	5·4	Old brick	9·1
Portland	37·5 to 10·2	Stock-brick, well burned . . .	5·8
Sheppey	5	„ inferior, burned . .	2·5

INCREASE IN STRENGTH OF WOODS BY SEASONING.

Wood.	Increase in Strength.	Wood.	Increase in Strength.	Wood.	Increase in Strength.
Ash . .	44·7 per cent.	Elm . .	12·3 per cent.	White pine .	9 per cent.
Beech .	61·9 „	Oak . .	26·1 „		

ELONGATION PRODUCED BY STRESS. YOUNG'S MODULUS OF ELASTICITY (*e*).

If length, L, in feet, of a bar of section A square inches, increases to L + *l* by stress of P lbs., then $l = \frac{LP}{Ae}$.

(1.)

Material.	*e*.	Material.	*e*.	Material.	*e*.
Woods.		*Woods* (continued).		*Metals* (continued).	
Ash	1,600,000	Oak, English and Russian .	1,451,000	Brass wire . .	14,230,000
Beech . . .	1,350,000	„ Dantzic . .	1,191,000	Bronze . . .	9,900,000
Birch, common .	1,562,000	„ American, red .	2,150,000	Copper, cast . .	18,200,000
„ American .	1,258,000	„ African . .	2,283,000	Gun-metal . .	8,800,000
Box	1,856,000	Pine, pitch . .	1,225,000	Iron, cast . .	14,000,000
Cedar . . .	486,000	„ Canada, red .	1,840,000	„ „ average .	22,000,000
Chestnut . . .	1,140,000	„ American, yellow	1,600,000	„ wrought .	16,000,000
Elm	700,000	Teak, Indian . .	2,400,000	„ wire . .	29,000,000
Fir, Christiania .	1,856,000	„ African . .	2,300,000	Lead, sheet . .	25,300,000
„ Riga . . .	1,328,000	Willow . . .	1,400,000	Steel, cast . .	720,000
„ New England .	2,191,000	*Metals.*		Tin, cast . .	29,000,000
„ spruce . .	1,800,000	Brass, cast . .	9,170,000	Zinc . . .	32,000,000
„ larch . . .	900,000			Glass . . .	3,500,000
Kawrie or Cowdie .	2,357,000				13,400,000
Mahogany, Honduras	1,255,000				8,000,000

Electrolytic Copper . . 20,000,000 (*W. B. Woodhouse*).

(2.)

The following were obtained from the flexure of thin strips :—

Material.	Lbs. per sq. in.
Celluloid (1)	347,500
Celluloid (2)	547,000
Drawing-paper (in direction of rolling)	394,000
Drawing-paper (across direction of rolling)	581,500
Thick stiff paper	852,000
Box-wood	174,000
Whalebone	503,000
Copper	15,900,000
Brass	11,600,000
Aluminium-nickel alloy	10,000,000

(*F. H. Hummel*).

BREAKING WEIGHT (*w*) IN CWTS. (DEAD LOAD) OF A RECTANGULAR BEAM OF YELLOW PINE 1 IN. BROAD, SUPPORTED AT BOTH ENDS AND LOADED IN THE CENTRE.

Span in Feet (*s*).	Depth in Inches (*d*).											
	3	4	5	6	7	8	9	10	11	12	13	14
4	7·50	13·33	20·83	30·00	40·83	53·33	67·50	83·33	100·84	120·00	140·84	163·33
6	5·00	8·89	13·89	20·00	27·16	35·56	45·00	55·56	67·22	80·15	93·89	108·90
8	3·75	6·67	10·43	15·00	20·42	26·67	33·75	41·67	50·42	60·00	70·42	81·67
10	3·00	5·33	8·33	12·00	16·33	21·33	27·00	33·33	40·33	48·00	56·33	65·33
12	2·50	4·44	6·94	10·00	13·61	17·78	22·50	27·78	33·61	40·00	46·94	54·44
14	2·14	3·81	5·95	8·57	11·67	15·24	19·29	23·81	28·81	34·25	40·24	46·67
16	1·88	3·33	5·21	7·50	10·20	13·33	16·88	20·83	25·21	30·00	35·21	40·83
18	1·67	2·96	4·63	6·67	8·95	11·85	15·00	18·52	22·41	26·67	31·30	36·30
20	1·50	2·67	4·17	6·00	8·17	10·67	13·50	16·67	20·17	24·00	28·17	32·67
22	1·36	2·42	3·79	5·46	7·42	9·70	12·27	15·15	18·33	21·82	25·61	29·70
24	1·25	2·22	3·47	5·00	6·81	8·90	11·25	13·89	16·81	20·00	23·47	27·22
26	1·15	2·05	3·21	4·62	6·28	8·21	10·38	12·82	15·51	18·46	21·67	25·13
28	1·07	1·99	2·98	4·29	5·83	7·62	9·64	11·90	14·40	17·14	20·12	23·33
30	1·00	1·78	2·78	4·00	5·44	7·11	9·00	11·11	13·44	16·00	18·78	21·78

(Formula : $w = \frac{d^2}{s} \times \frac{20}{6}$; see (10), p. 298.)

EXAMPLE.—To find the breaking weight of a beam of Yellow Pine 18 ft. span, 6 ins. broad, and 12 ins. deep. From table, breaking weight for 1 in. broad and 12 ins. deep is 26·67 cwts.; therefore,

Breaking weight of beam 6 ins. broad = 26·67 × 6 = 160 cwts. (*H. R. Kempe.*)

BRITISH STANDARD SPECIFICATION FOR STRUCTURAL STEEL FOR BRIDGES AND GENERAL BUILDING CONSTRUCTION.*

(No. 15—1912.) (*Abstract.*)

A steel shall be made by the Open Hearth Process (Acid or Basic) unless either process is required or specified, and must not show on analysis more than ·06 per cent. of sulphur or phosphorus.

B steel (which is not intended for bridges, nor for plates ½ in. in thickness or over, or rivet bars) may be made either by the Open Hearth Process (Acid or Basic) unless any one of the four processes is required or specified, and must not show on analysis more than ·08 per cent. of phosphorus, and not more than ·06 per cent. of sulphur.

Plates, sections, and flat bars must show a tensile breaking strength of 28 to 33 tons per sq. in., with an elongation of not less than 20 per cent. for steel of ·375 in. thickness and upwards, and not less than 16 per cent. for steel below ·375 in. thickness.

Round and square bars (other than rivet bars) must show a tensile breaking strength of 28 to 33 tons per sq. in.; the elongation must be not less than 20 or 24 per cent. (according to the form standard test piece used for making the test).

Rivet Bars, 25 to 30 tons per sq. in. breaking strength, and not less than 25 or 30 per cent. elongation (according to the test piece used).

ADMIRALTY TESTS FOR STEEL AND IRON.

TESTS FOR STEEL.

TESTS FOR STEEL ANGLES, ANGLE BULBS, TEES, TEE BULBS, ZED BARS, SHIP PLATES, AND SHIP SHEETS.

(*Abstract.*)

Strips cut lengthwise to have an ultimate tensile strength of not less than 26 and not more than 30 tons per sq. in. of section, with an elongation of 20 per cent. in a length of 8 ins.

Strips cut crosswise or lengthwise 1½ in. wide, heated uniformly to a low cherry-red and cooled in water of about 80° F., must stand bending in a press to a curve of which the inner radius is one and a half times the thickness of the steel tested.

* By permission of the British Engineering Standards Association.

The strips may all be cut in a planing machine, and have the sharp edges taken off.

The ductility of every bar is to be ascertained by the application of the temper test to the shearings, or by bending them cold by the hammer.

Tests for Steel Rivets.

Drawings of 1-inch Ordinary Rivets of the several descriptions specified.

The steel to be free from lamination and injurious surface defects.

One bar is to be taken for tensile testing from every invoice, provided that the number of bars does not exceed fifty. If above that number, one for every additional fifty or portion of fifty. Steel may be received or rejected without a trial of every thickness on the invoice.

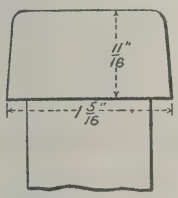


Fig. 406.

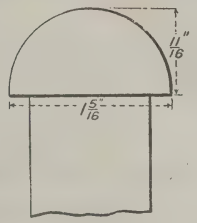


Fig. 407.

The pieces cut out for testing are to be of parallel width from end to end, or for at least 8 inches of length.

When required by the Inspecting Officer a tensile test is to be made from every 'blow.'

The rivets are to be made from British 'acid open-hearth' steel bars having an ultimate tensile strength, for 'boiler' rivets, of not less than 24 and not more than 27 tons per square inch, with

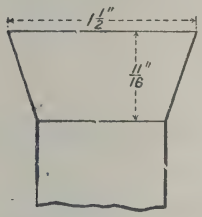


Fig. 408.

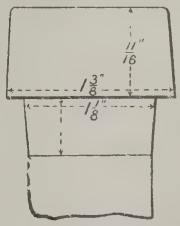


Fig. 409.

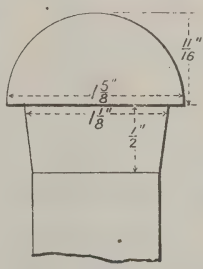


Fig. 410.

a minimum elongation of 25 per cent. in a length of 8 inches; for 'ordinary and screw' rivets, the bars to have an ultimate tensile strength of not less than 26 and not more than 30 tons per square inch, with a minimum elongation of 25 per cent. in a length of 8 inches.

Pieces cut from the bars, heated uniformly to a blood-red, and cooled in water of about 80° F., must stand bending double in a press to a curve of which the inner radius is equal to the radius of the bar tested.

A rivet selected from one hundred to stand the following double tests :—

(*a*) Bending double when cold without fracture, in the manner shown in fig. 411, where the line AB equals one diameter of the rivet.

(*b*) Bending double when hot, and hammered till the two parts of the shank touch, in the manner shown in fig. 412, without fracture.

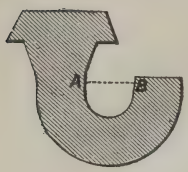


FIG. 411.



FIG. 412.

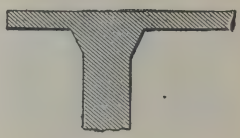


FIG. 413.

(*c*) Flattening of the rivet head, while hot, in the manner shown in fig. 413, without cracking at the edges. The head to be flattened until its diameter is $2\frac{1}{2}$ times the diameter of the shank.

(*d*) The shank of the rivet to be nicked on one side, and bent cold to show the quality of the material.

SCHEDULE OF DIMENSIONS.

Diameter of Rivet.	With Pan or Snap Head and Straight Necks. Fig. 406 or fig. 407.		With Counter-sunk Heads. Fig. 408.		With Pan or Snap Heads and Conical Necks. Fig. 409 or fig. 410.			
	Diam. of Head.	Depth of Head.	Diam. of Head.	Depth of Head.	Diam. of Head.	Depth of Head.	Diam. under Head.	Depth of Cone.
Inch.	Inch.	Inch.	Inch.	Inch.	Inches.	Inch.	Inch.	Inch.
$1\frac{3}{8}$	$1\frac{15}{16}$	1	—	—	2	1	$1\frac{1}{2}$	$\frac{5}{8}$
$1\frac{1}{4}$	$1\frac{11}{16}$	$\frac{7}{8}$	$1\frac{3}{8}$	$\frac{1}{2}$	$1\frac{3}{4}$	$\frac{7}{8}$	$1\frac{3}{8}$	$\frac{9}{16}$
$1\frac{1}{8}$	$1\frac{1}{16}$	$\frac{3}{4}$	$1\frac{5}{16}$	$\frac{7}{16}$	$1\frac{9}{16}$	$\frac{3}{4}$	$1\frac{1}{4}$	$\frac{1}{2}$
1	$1\frac{5}{16}$	$\frac{11}{16}$	$1\frac{1}{4}$	$\frac{7}{16}$	$1\frac{3}{8}$	$\frac{11}{16}$	$1\frac{1}{8}$	$\frac{1}{2}$
$\frac{7}{8}$	$1\frac{3}{16}$	$\frac{5}{8}$	$1\frac{3}{16}$	$\frac{3}{8}$	$1\frac{1}{2}$	$\frac{5}{8}$	$\frac{15}{16}$	$\frac{7}{16}$
$\frac{3}{4}$	$1\frac{1}{16}$	$\frac{9}{16}$	$1\frac{1}{8}$	$\frac{7}{16}$	$1\frac{5}{16}$	$\frac{9}{16}$	$\frac{13}{16}$	$\frac{3}{8}$
$\frac{5}{8}$	$\frac{15}{16}$	$\frac{1}{2}$	1	$\frac{5}{16}$	$\frac{7}{8}$	$\frac{1}{2}$	$\frac{11}{16}$	$\frac{5}{16}$
$\frac{1}{2}$	$\frac{13}{16}$	$\frac{3}{8}$	$\frac{3}{4}$	$\frac{1}{4}$	$\frac{3}{4}$	$\frac{3}{8}$	$\frac{9}{16}$	$\frac{1}{4}$
$\frac{7}{16}$	$\frac{11}{16}$	$\frac{5}{16}$	$\frac{5}{8}$	$\frac{1}{4}$				
$\frac{5}{16}$	$\frac{1}{2}$	$\frac{1}{4}$						
$\frac{1}{4}$	$\frac{7}{16}$	$\frac{3}{16}$						
$\frac{3}{16}$	$\frac{3}{8}$	$\frac{1}{8}$						

TESTS FOR STEEL BARS, FLAT, SEGMENTAL, ROUND, SQUARE, AND HEXAGONAL.

Strips cut lengthwise to have an ultimate tensile strength of not less than 30 and not exceeding 35 tons per square inch of section, with an elongation of 20 per cent. in a length of 8 ins. The steel to stand such forge tests, both hot and cold, as may be sufficient to prove soundness of material and fitness for service.

Strips cut lengthwise $1\frac{1}{2}$ ins. wide, heated uniformly to a low cherry red, and cooled in water of a temperature of 82° F., must stand bending double in a press to a curve of which the inner radius is one and a half times the thickness of the steel tested.

INSTRUCTIONS FOR TREATMENT OF MILD STEEL.

All plates or bars which can be bent *cold* are to be so treated, and if the whole length cannot be bent cold heating is to be had recourse to over as little length as possible.

In cases where plates or bars have to be heated, the greatest care should be taken to prevent any work being done upon the material after it has fallen to the dangerous limit of temperature known as a 'blue heat' —say from 600° to 400° F. Should this limit be reached during working, the plates or bars should be reheated.

Where plates or bars have been heated throughout for bending, flanging, &c., and the work has been completed at one heat, subsequent annealing is unnecessary.

Where simple forge-work has been done, such as the formation of joggles, corners, and easy curves or bends, on portions of plates or bars, and the material has not been much distressed, subsequent annealing is unnecessary.

Plates or bars which have had a large amount of work put upon them while hot, and have had to be reheated, should be subsequently annealed. It is preferred that this annealing should be done simultaneously over the whole of each plate or bar when this can be done conveniently. If it is inconvenient to perform the operation of annealing at one time for the whole of a plate or bar, portions may be annealed separately, proper care being taken to prevent an abrupt termination of the line of heat. If the severe working has been limited to a comparatively small part of a plate or bar, annealing may be limited to the parts which have been heated, the same care being taken to prevent an abrupt termination of the line of heat.

If desired, exceptionally long or quickly curved bars, such as frames, may be formed of shorter pieces with the butts suitably shifted and strapped.

In important cases where any bar or plate shows signs of failure or fracture in working, the details should be forwarded to the Admiralty, in order that instructions may be given as to the disposal of the bar or plate. Failure need not be reported in every case.

It is not necessary to anneal plates or bars after punching as a means of making good damage done in punching. For plating which forms an important feature in the general structural strength, such as the inner and outer bottom plating, deck plating, deck stringers, &c., the butt straps should have the holes drilled or be annealed after the holes are punched. In such bottom plating the countersunk holes should be punched about $\frac{1}{8}$ inch less in diameter than the rivets which are used, the enlargement of the holes being made in the countersinking, which should in all cases be carried through the whole thickness of the plates. All countersinking to be carefully done.

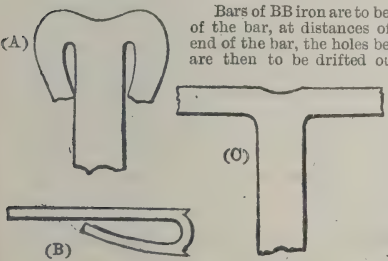
It is important that the whole surface of the bottom plating should be thoroughly cleared of the scale formed in manufacture before any paint or composition is put upon it. All steel plates are to be pickled in the following manner with a view to removing the black oxide or scale:—The plates previous to their being taken in hand for working are to stand a few hours in a liquid consisting of 19 parts of water and one of hydrochloric acid. The plates should be pickled on edge and not laid flat. When plates are removed from the dilute acid bath both the surfaces are to be well brushed and washed to remove any scale which may still adhere to them. They should then be placed in another similar bath filled and kept well supplied with fresh water or be thoroughly washed with a hose, as may be found necessary.

TESTS FOR IRON.

Tests for Bar Iron.

The whole of the samples of every description of iron when tested with the grain are to realise a tensile strength of 22 tons to the square inch.

Forge Test, Hot. BB Bars.



Bars of BB iron are to be punched with a punch one-third the diameter of the bar, at distances of one and a half and three diameters from the end of the bar, the holes being at right angles to one another. The holes are then to be drifted out to one and a quarter times the diameter of the bar. The sides of the holes are then to be split, and the ends must admit of turning back without fracture, as shown by (A).

Broad thick flats may be flattened on the edge to admit of being punched.

A short piece of bar may be flattened down, end on, and punched, as explained above.

Thin flats $\frac{3}{4}$in. thick and below are to be bent to a radius of two and a half times their thickness with the grain, without fracture.

FIG. 414.

B Bars.

The bars are to be punched as in the case of B B iron, and drifted out to one diameter of the bar. Thin flats $\frac{3}{4}$ in. thick and below are to be bent to a radius of three times their thickness with the grain, and if fracture takes place will be rejected. The ends, after punching the holes, must admit of being split and turned back without fracture, as shown by (C).

Forge Tests, Cold.

Samples should be notched and bent, as shown by (B), to show the quality of the iron.

Fire Bars. Forge Test, Hot.

The bars may be flattened at the end to a thickness of $\frac{1}{2}$ in. in either direction.

The standard weight of the bar iron is to be taken at 40 lbs. per sq. ft. for bars of 1 in. thick, and in proportion for bars of all other thicknesses. No bar iron should exceed this prescribed weight, but a latitude of 5 per cent. below this weight will be allowed for thicknesses of $\frac{1}{2}$ an inch and upwards, and of 10 per cent. for less thicknesses. The weight of the iron ordered will be ascertained by weighing the parcel when its weight does not exceed 5 tons, and in lots of 5 tons when its weight exceeds 5 tons.

BRITISH STANDARD SPECIFICATION FOR STRUCTURAL STEEL FOR SHIPBUILDING.*

(No. 13—1910.) (*Abstract.*)

Plates.—The tensile breaking strength of steel plates, determined from Standard test pieces, shall be between the limits of 28 and 32 tons per sq. in. For plates specially intended for cold flanging and marked for identification the tensile breaking strength shall be between the limits of 26 and 30 tons per sq. in. The elongation, measured on a Standard test piece having a gauge length of 8 ins., shall be not less than 20 per cent. for material of ·375 in. in thickness and upwards, and not less than 16 per cent. for material below ·375 in. in thickness.

Angles, Bulb Angles, Channels, etc.—The tensile breaking strength of sectional material, such as angles, bulb angles, channels, etc., shall be between the limits of 28 and 33 tons per sq. in. The elongation, measured on a Standard test piece having a gauge length of 8 ins., shall be not less than 20 per cent. for material of ·375 in. in thickness and upwards, and not less than 16 per cent. for material below ·375 in. in thickness.

Rivet Bars.—The tensile breaking strength of rivet bars shall be between the limits of 25 and 30 tons per sq. in. of section, with an elongation of not less than 25 or 30 per cent. (according to the test piece used).

LLOYD'S TESTS FOR STEEL USED IN SHIPBUILDING. (*Abstract.*)

1. The steel will be required to withstand the tensile and cold and temper bend tests hereafter described, to be applied at the Steel Works under the personal inspection of the Society's surveyors, to samples selected by them from every charge employed in the manufacture of the material, and these samples, when marked by them for testing, should be followed by the surveyors through the different stages of preparation until the tests are completed. At least two tensile tests are to be made from each charge, and an additional tensile test for every variation in thickness of $\frac{3}{20}$ of an inch in the plates or bars made from each charge. A temper bend test is to be made from *each* plate or bar as rolled, and a cold bend test is to be made from each plate or bar tested for tension, and from *all* plates which are to be cold flanged.

2. The tensile tests are to be made upon strips cut lengthwise or crosswise of the plate or bar. They are to be machined to a parallel width for a length of at least 8 inches, and are to have an ultimate tensile strength of not less than 28 and not more than 32 tons per square inch of section. The elongation is to be at least 20 per cent. on a length of 8 inches in samples $\frac{3}{20}$ of an inch and above in thickness, and 16 per cent. in samples below this thickness. Steel plates intended for cold flanging, if specially marked for identification, may be tested to within a minimum limit of 26 tons tensile strength per square inch. Steel angles, channels, and bulbs not exceeding $\frac{1}{20}$ of an inch in thickness may have a maximum tensile strength of 33 tons per square inch of section.

3. Bend tests are to be made upon strips sheared lengthwise or crosswise of the plate or bar. Where the thickness is $\frac{1}{2}$ inch or above, the sharp fin caused by shearing may be removed. They must stand bending double round a curve of which the diameter is not more than three times the thickness.

4. The cold bend tests are to be made from samples as sheared from the plate or bar without annealing.

5. For the temper bends the samples are to be heated to a low cherry red and cooled in water at 82° Fahrenheit.

6. Besides the above tests, samples of the material are to be subjected to additional forge and cold bend tests at the discretion of the surveyors.

7. Should the samples first selected by the surveyors not fulfil the test requirements, duplicate tests may be made; but should these also fail, the plates or bars from which they were cut are to be rejected, and in all such cases further tests are to be made before any material from the same charge can be accepted.

8. Steel used for rivets is to be of special quality, soft and ductile, and samples of the rivets are to be tested by being bent both hot and cold, by flattening down the heads, and by occasional forge tests, in order to satisfy the surveyors of their thorough efficiency.

* By permission of the British Engineering Standards Association.

Chain Cables, Hawsers, &c.

Stud-chain Cables.					Stream, Chain or Steel Wire.							Towline: Hemp or Steel Wire.			
					Chain.				Steel Wire			Hemp	Steel Wire.		
						Minimum Weight.									
Length.	Minimum Size.	Proved to Statutory Test.	Breaking Test.	Minimum Weight.	Length.	Size.	Stud Link.	Short Link.	Size.	Breaking Test.		Length.	Size.	Size.	Breaking Test.
Fms.	Ins.	Tons.	Tons.	Ct. q. lb.	Fm.	Ins.	Ct. q. lb.	Ct. q. lb.	Ins.	Tons		Fm.	Ins.	Ins.	Ins.
120	$\frac{11}{16}$	$8\frac{5}{10}$	$12\frac{3}{4}$	29 0 14	45	$\frac{8}{16}$	6 2 0	7 1 0	—	—		75	$5\frac{1}{2}$	2	7
120	$\frac{12}{16}$	$10\frac{1}{8}$	$15\frac{1}{8}$	34 2 7	45	$\frac{9}{16}$	8 0 0	8 3 0	2	7		75	6	$2\frac{1}{4}$	$9\frac{1}{2}$
135	$\frac{13}{16}$	$11\frac{7}{8}$	$17\frac{8}{10}$	45 3 3	45	$\frac{9}{16}$	8 0 0	8 3 0	2	7		75	6	$2\frac{1}{4}$	$9\frac{1}{2}$
165	$\frac{14}{16}$	$13\frac{3}{8}$	$20\frac{8}{10}$	64 1 11	45	$\frac{10}{16}$	9 3 0	10 2 0	$2\frac{1}{4}$	$9\frac{1}{2}$		75	$6\frac{1}{2}$	$2\frac{1}{4}$	$9\frac{1}{2}$
165	$\frac{15}{16}$	$15\frac{3}{10}$	$23\frac{7}{10}$	74 1 26	45	$\frac{10}{16}$	9 3 0	10 2 0	$2\frac{1}{4}$	$9\frac{1}{2}$		75	7	$2\frac{1}{2}$	$12\frac{1}{2}$
165	1	18	27	84 0 17	45	$\frac{11}{16}$	10 3 19	11 3 19	$2\frac{1}{4}$	$15\frac{1}{2}$		75	$7\frac{1}{2}$	$2\frac{1}{2}$	$12\frac{1}{2}$
165	$1\frac{1}{16}$	$20\frac{3}{10}$	$30\frac{4}{10}$	95 1 9	60	$\frac{11}{16}$	14 2 7	15 3 7	$2\frac{3}{4}$	$15\frac{1}{2}$		75	$7\frac{1}{2}$	$2\frac{1}{2}$	$12\frac{1}{2}$
195	$1\frac{2}{16}$	$22\frac{1}{2}$	$34\frac{1}{8}$	126 1 0	60	$\frac{12}{16}$	17 1 3	18 3 3	$2\frac{3}{4}$	$15\frac{1}{2}$		75	8	$2\frac{3}{4}$	$15\frac{1}{2}$
195	$1\frac{3}{16}$	$25\frac{3}{8}$	38	141 0 16	60	$\frac{13}{16}$	20 1 11	22 0 11	3	18		75	$8\frac{1}{2}$	$2\frac{3}{4}$	$15\frac{1}{2}$
210	$1\frac{4}{16}$	$28\frac{1}{2}$	$42\frac{1}{4}$	168 0 0	60	$\frac{13}{16}$	20 1 11	22 0 11	3	18		75	$8\frac{1}{2}$	$2\frac{3}{4}$	$15\frac{1}{2}$
210	$1\frac{5}{16}$	31	$46\frac{1}{2}$	185 2 12	60	$\frac{14}{16}$	23 1 17	25 1 17	$3\frac{1}{4}$	22		90	9	3	18
210	$1\frac{6}{16}$	34	51	203 0 18	60	$\frac{14}{16}$	23 1 17	25 1 17	$3\frac{1}{4}$	22		90	9	3	18
210	$1\frac{7}{16}$	$37\frac{1}{8}$	$55\frac{5}{8}$	222 1 17	60	$\frac{15}{16}$	24 0 9	29 0 9	$3\frac{1}{4}$	26		90	$9\frac{1}{2}$	$3\frac{1}{4}$	22
210	$1\frac{8}{16}$	$40\frac{5}{10}$	$58\frac{7}{10}$	242 0 5	75	$\frac{15}{16}$	33 3 11	36 1 11	$3\frac{1}{4}$	26		90	10	$3\frac{1}{4}$	22
240	$1\frac{9}{16}$	$43\frac{9}{10}$	$61\frac{4}{10}$	298 2 19	75	1	38 1 0	41 1 0	$3\frac{3}{4}$	29		90	10	$3\frac{1}{2}$	22
240	$1\frac{10}{16}$	$47\frac{5}{10}$	$66\frac{5}{10}$	319 1 17	75	1	38 1 0	41 1 0	$3\frac{3}{4}$	29		90	10	$3\frac{1}{2}$	22
240	$1\frac{11}{16}$	$51\frac{1}{2}$	$71\frac{4}{8}$	344 2 22	75	$1\frac{1}{16}$	43 1 9	46 1 9	4	33		90	11	$3\frac{1}{2}$	26
240	$1\frac{12}{16}$	$55\frac{1}{8}$	$77\frac{1}{8}$	370 1 22	75	$1\frac{1}{16}$	43 1 9	46 1 9	4	33		90	11	$3\frac{1}{2}$	26
240	$1\frac{13}{16}$	$59\frac{1}{8}$	$82\frac{3}{4}$	397 3 6	75	$1\frac{2}{16}$	48 2 6	52 0 6	$4\frac{1}{4}$	35		90	12	4	33
240	$1\frac{14}{16}$	$63\frac{1}{4}$	$88\frac{5}{10}$	425 1 0	75	$1\frac{2}{16}$	48 2 6	52 0 6	$4\frac{1}{4}$	35		100	12	4	33
270	$1\frac{15}{16}$	$67\frac{5}{10}$	$94\frac{5}{10}$	511 1 14	90	$1\frac{2}{16}$	58 1 2	62 1 2	$4\frac{1}{4}$	35		100	12	4	33
270	2	72	$100\frac{8}{10}$	538 3 0	90	$1\frac{3}{16}$	65 0 16	69 2 16	$4\frac{1}{2}$	39		120	12	4	33
270	$2\frac{1}{16}$	$76\frac{5}{10}$	$107\frac{1}{10}$	573 2 14	90	$1\frac{3}{16}$	65 0 16	69 2 16	$4\frac{1}{2}$	39		120	13	$4\frac{1}{2}$	39
270	$2\frac{2}{16}$	$81\frac{1}{4}$	$113\frac{3}{8}$	608 2 14	90	$1\frac{3}{16}$	65 0 16	69 2 16	$4\frac{1}{2}$	39		120	13	$4\frac{1}{2}$	39
270	$2\frac{3}{16}$	$86\frac{1}{2}$	$120\frac{5}{10}$	645 3 0	90	$1\frac{4}{16}$	72 0 0	77 0 0	$4\frac{3}{4}$	47		120	14	$4\frac{3}{4}$	47
270	$2\frac{4}{16}$	$91\frac{3}{4}$	$127\frac{5}{10}$	682 1 11	90	$1\frac{4}{16}$	72 0 0	77 0 0	$4\frac{3}{4}$	47		120	14	5	59
270	$2\frac{5}{16}$	$96\frac{1}{4}$	$134\frac{3}{4}$	720 3 4	90	$1\frac{5}{16}$	79 2 5	85 0 5	5	59		120	15	$5\frac{1}{4}$	65
300	$2\frac{6}{16}$	$101\frac{1}{4}$	$142\frac{1}{10}$	844 1 0	120	$1\frac{5}{16}$	106 0 7	113 1 7	5	59		130	15	$5\frac{1}{2}$	71
300	$2\frac{7}{16}$	$106\frac{9}{10}$	$149\frac{8}{10}$	890 1 4	120	$1\frac{7}{16}$	106 0 7	113 1 7	5	59		130	15	$5\frac{3}{4}$	78
300	$2\frac{8}{16}$	$112\frac{1}{2}$	$157\frac{5}{10}$	940 0 0	120	$1\frac{8}{16}$	116 0 10	124 0 10	$5\frac{1}{4}$	65		130	16	6	85

Steel Wire Standing Rigging.

Size.	Breaking Test.	Size.	Breaking Test.	Size.	Breaking Test.	Size.	Breaking Test.
Inches.	Tons.	Inches.	Tons.	Inches.	Tons.	Inches.	Tons
$5\frac{1}{2}$	58	$4\frac{1}{8}$	32	$3\frac{1}{8}$	$17\frac{1}{2}$	$2\frac{1}{8}$	8
$5\frac{1}{4}$	53	4	30	3	16	2	7
5	48	$3\frac{7}{8}$	28	$2\frac{7}{8}$	$14\frac{1}{2}$	$1\frac{7}{8}$	6
$4\frac{7}{8}$	44	$3\frac{3}{4}$	26	$2\frac{3}{4}$	13	$1\frac{3}{4}$	$5\frac{1}{2}$
$4\frac{3}{4}$	42	$3\frac{5}{8}$	24	$2\frac{5}{8}$	12	$1\frac{5}{8}$	5
$4\frac{5}{8}$	40	$3\frac{1}{2}$	22	$2\frac{1}{2}$	11	$1\frac{1}{2}$	4
$4\frac{1}{2}$	38	$3\frac{3}{8}$	$20\frac{1}{2}$	$2\frac{3}{8}$	10	$1\frac{3}{8}$	$3\frac{1}{4}$
$4\frac{3}{8}$	36	$3\frac{1}{4}$	19	$2\frac{1}{4}$	9	$1\frac{1}{4}$	3
$4\frac{1}{4}$	34						

Iron and Steel Masts, Bowsprits, and Yards.

1. If iron be used in the construction of masts, bowsprits, and yards, it is to be of good malleable quality, quite free from surface or other defects, and to stand a tensile stress of 20 tons to the square inch, and the following bending tests when cold without fracture.

Thickness of Plate.	To Bend Cold through an Angle of		Thickness of Plate.	To Bend Cold through an Angle of	
	With the Grain.	Across the Grain.		With the Grain.	Across the Grain.
Inch.	Degrees	Degrees.	Inch.	Degrees.	Degrees.
$\frac{9}{16}$	25	8	$\frac{5}{16}$	55	17
$\frac{8}{16}$	30	11	$\frac{4}{16}$	65	20
$\frac{7}{16}$	37	13	$\frac{3}{16}$	70	25
$\frac{6}{16}$	47	15			

2. The plates to be bent over a slab, the corner of which should be rounded with a radius of half an inch.

3. If steel be adopted, it is to be of the quality required for ship plates, and subjected to the same tests.

BUREAU VÉRITAS TESTS FOR IRON AND STEEL USED IN SHIPBUILDING.

(Abstract.)

Tests for Iron.

Tests for Tensile Strength.—The samples to have a minimum tensile strength of 22 tons per square inch of the original section with the fibre, and 18½ tons across the fibre, and an elongation at rupture of 7 per cent. with and 4 per cent. across the fibre on a length of 8 inches.

Hot Bending Tests for Plates.—A strip of at least 2 inches cut from the plate, after being heated to a dull red, shall withstand, without any fracture or cracks, being bent to an angle of 140° with the fibre and 90° across the fibre, the radius of bend being 1½ times the thickness of the plate.

Cold Bending Tests for Plates.—A strip of at least 2 inches cut from the plate shall withstand being bent to the following angles without any fracture or cracks :—

Thickness of Plate.	With the Fibre.	Across the Fibre.	Thickness of Plate.	With the Fibre.	Across the Fibre.
Inch.	Degrees.	Degrees.	Inch.	Degrees.	Degrees.
Under $\frac{1}{50}$	90	40	$\frac{28}{50}$ to $\frac{34}{50}$	35	15
$\frac{13}{50}$ to $\frac{18}{50}$	70	30	$\frac{35}{50}$ to $\frac{40}{50}$	25	10
$\frac{19}{50}$ to $\frac{26}{50}$	50	20			

Inside radius of the bend to be 1½ times the thickness of the plate.

Hot Bending Tests for Angle Bars.—Pieces of angle bars being heated red, must stand the following tests without fracture or cracks :—

1. To have their flanges shut until the outside edges touch. 2. To have their flanges flattened out.

Tests for Steel.

Steel Rivets.

Steel bars for rivets should have a tensile strength of from 24 to not exceeding 29 tons per square inch, with a minimum elongation of 25 per cent. in 8 ins., for bars not less than $\frac{3}{32}$ in. diam.

Quenching Tests.—Pieces cut from the rivet bars are to be heated to a dull red and quenched in water at about 82° F., after which they must be able to stand, without showing any fracture, being bent completely double, the two inner edges being hammered flat against each other for the whole of their length.

Crushing Tests.—Short lengths equal to twice the diameter to be compressed cold to half their length without showing any fracture. Other pieces of the same size, heated to a dull red, must stand being compressed to ¼ of their length, after which they will be punched through with a punch ¾ the diam. of the rivet. No cracks are to be developed under this treatment.

Steel Forgings.

Tensile and Elongation Tests.—The tensile strength may be 27 to 32 tons per sq. in. of the original section. When the strength is 32 tons the elongation shall not be less than 23 per cent.

H. J. SKELTON & CO. Ltd.

Royal London House
Finsbury Square
London, E.C. 2.

Telegrams:
'Hiskelton, Finsquare, London.'

Telephone:
2027 Clerkenwell
(3 lines)

Steel

In Dead Soft, Mild and High Tensile Qualities.

Sections. Locomotive Frame Plates. Ship, Tank, Bridge and Boiler Plates. Sheets to 30 B.G. Black, Tinned or Lead Coated, Galvanized (Zinc Coated), Corrugated or Flat.

Rails and Fastenings

For Railways, Tramways, Mines, etc., etc., etc.

Pig Iron

Charcoal, Cold-blast, Hæmatite and Special.

Wrot Iron

Best Yorkshire and British Standard Grades. A B C and D, in round, square and flat Bars, Hoops, Strips and Shapes.

Cast-iron Pipes, Columns, etc.

Tyres, Springs, Forgings, etc.



Reg. Trade Mark

Engineers, Iron and Steel Contractors

to

H.M. Government, Principal Home, Foreign & Colonial Railways.

On Admiralty, War Office and India Office Lists.

BOOKS ON STRUCTURAL PRACTICE.

THE PRINCIPLES OF STRUCTURAL MECHANICS.

Treated without the use of Higher Mathematics. By PERCY J. WALDRAM, Lecturer on Structural Mechanics, Architectural School, Central School of Arts and Crafts, London. 368 pages with over 200 Illustrations. 8vo, cloth gilt. 12*s.* 6*d.* net.

The aim is to impart to the reader from the beginning a firm grip of the vital principles which, by enabling him to fully understand the construction of the formulæ he will use, will put him in a position to handle them with certainty.

'Mr. Waldram has left no essential principle unexplained. . . . The success of the book depends not merely on the author's obvious mastery of his subject in all its aspects and details, but even more on his uncommon gift of lucid explanation. He has achieved the difficult feat of writing with simplicity that is never inane, and with amplification that is without superfluity.'—*The Architect's and Builder's Journal.*

DANGEROUS STRUCTURES AND HOW TO DEAL WITH THEM.

A Handbook for Practical Men. By G. H. BLAGROVE, Certified Surveyor under the London Building Act, 1894. Second Edition, much enlarged. With 35 Illustrations. Crown 8vo, cloth. 5*s.* 6*d.* net.

This volume describes ready means for getting over difficulties which frequently occur in practice, and supplies data from which efficient, and at the same time economical, remedies may be designed to counteract evils arising from structural defects.

LIST OF CHAPTERS.—Foundations—Walls—Piers—Arches and Vaults—Beams, Girders, and Floors—Struts, Columns and Stanchions—Ties, Struts, Roofs, and Framed Structures—Lofty Structures—Shoring—Legal Conditions.

SHORING AND UNDERPINNING.

By C. H. STOCK. Third Edition, revised and enlarged by F. R. FARROW, F.R.I.B.A. With 40 Illustrations. Large 8vo, cloth, gilt. 5*s.* 6*d.* net.

STRESSES AND THRUSTS.

A Text-book on their Determination in Constructional Work, with Examples of the Design of Girders and Roofs. By G. A. T. MIDDLETON, A.R.I.B.A. Third Edition, revised, containing new chapters on Designing Steel Joists and Steel Plate Girders. With 170 Illustrations. Crown 8vo, cloth, gilt. 5*s.* 6*d.* net.

in a length of 4 ins. For less than 32 tons the elongation shall increase in inverse ratio to the strength; therefore 27 tons elongation shall be 26 per cent.

Cold Bending Tests.—A test piece 1 in. square and about 10 ins. long, cut from the forging, must stand being bent double in the form of a U, without showing any sign of a fracture or crack, the internal radius of bend being ¾ in.

Steel Castings.

For stems, stern frames, condensers, engine columns, etc., the tensile strength may reach up to 35 tons per sq. in. of original section, or even to 38 tons when a very fluid steel is required for thin pieces, such as sole plates.

For engine pieces exposed to constantly varying stresses, the upper limit of tensile strength is to be lower than 35 tons. For crank shafts, for instance, it should not exceed 30 tons.

The elongation and tensile strength will be in accordance with the following table.

Cold Bending Tests.—A test piece 1 in. square must be able, without showing any signs of fracture, to be bent to the angle given in the table, with an internal radius of 1½ in.

Percussion Tests.—Pieces 1 in. square, resting in a horizontal position on two supports (knife-edges) spaced 6½ ins. apart, must be able to resist without any fracture a series of shocks caused by a weight of 40 lbs. falling upon them from a gradually increasing height, beginning at 3½ ft. and ending at 5 ft., the increase between two successive tests being 2 ins.

(See also pp. 272 and 273.)

Tests for Chain Cables.

Diameter of Iron.	Stud Chain Cables.		Close-link Chain Cables.		Diameter of Iron.	Stud Chain Cables.	
	Minimum Breaking Stress.	Proof Stress.	Minimum Breaking Stress.	Proof Stress.		Minimum Breaking Stress.	Proof Stress
Inches.	Tons.	Tons.	Tons.	Tons.	Inches.	Tons.	Tons.
1 1/16	12·8	8·5	11·3	5·6	1 13/16	77·1	55·1
1 2/16	15·1	10·1	13·5	6·8	1 14/16	82·8	59·1
1 3/16	17·8	11·9	15·8	7·9	1 15/16	88·5	63·3
1 4/16	20·6	13·8	18·3	9·1	1 16/16	94·5	67·5
1 5/16	23·7	15·8	21·0	10·5	2	100·8	72·0
1	27·0	18·0	24·0	12·0	2 1/16	107·1	76·5
1 1/16	30·4	20·3	27·0	13·5	2 2/16	113·8	81·3
1 2/16	34·1	22·8	30·3	15·1	2 3/16	120·5	86·1
1 3/16	38·0	25·4	33·8	16·9	2 4/16	127·5	91·1
1 4/16	42·1	28·1	37·5	18·8	2 5/16	134·8	96·3
1 5/16	46·5	31·0	41·3	20·6	2 6/16	142·1	101·5
1 6/16	51·0	34·0	45·3	22·6	2 7/16	149·6	106·9
1 7/16	55·6	37·1	49·5	24·8	2 8/16	157·8	112·5
1 8/16	58·7	40·5	54·0	27·0	2 10/16	169·3	120·9
1 9/16	61·4	43·9	58·5	29·3	2 12/16	181·0	129·3

The breaking stress is to be applied to 3 links cut from each 15 fathoms length, the proof to every 15 fathoms length separately.

Tests for Galvanised Steel Wire Ropes.

Size of Steel Wire Ropes.	Equal to Tarred Hemp Ropes.	Breaking Load.	Size of Steel Wire Ropes.	Equal to Tarred Hemp Ropes.	Breaking Load.	Size of Steel Wire Ropes.	Equal to Tarred Hemp Ropes.	Breaking Load.
Circumference in Ins.	Circumference in Ins.	Tons.	Circumference in Ins.	Circumference in Ins.	Tons.	Circumference in Ins.	Circumference in Ins.	Tons.
1	2¾	1·9	2½	6¾	11·9	4	10¾	30·6
1½	4	4·3	3	8	17·2	4½	12	38·7
2	5½	7·6	3½	9¼	23·4	5	12	47·8

Table of Tests for Steel Used in Ship and Engine Construction.

Item.	Tensile and Elongation Tests. Dimensions of Test Pieces.	Tensile Strength. Minimum.	Tensile Strength. Maximum.	Minimum Elongation. For a Thickness of	Minimum Elongation. Percentage.	Bending Tests. Cold Tests. Dimensions of Test Pieces.	Cold Tests. Internal Radius.	Cold Tests. Angle.	Quenching Tests. Dimensions of Test Pieces.	Quenching Tests. Internal Radius.	Quenching Tests. Angle.
	Ins.	Tons per sq. in.	Tons per sq. in.	50ths	In 8 ins.						
Plates	Working length 8 ins. Finished breadth 1¼ ins.	27	32	18 and above	20	Strips 2 ins. wide	Radius equal to thickness of plate	180°	Strips 2 ins. wide	Radius equal to 1½ times the thickness of plate	180°
				16	18						
				14	16						
				12	15						
				10	14						
				8	13						
				6	12						
Rivets	Working length 8 ins.	24	29	32nds	In 8 ins.	Short length of bar.	Bent double.		Short length of bar.	Bent double.	
				13 and above	25%						
				„ under 13	„ 20						

Cold and Hot Crushing Tests.—Short lengths equal to twice their diameter to be compressed cold to half their length; other pieces of same length heated to a dull red must stand being compressed to ¼ of their length, after which they are to be punched through, with a punch having a diameter equal to ⅞ that of the rivet.

Remarks

Tensile and Bending Tests.—One-half of the test pieces to be cut lengthwise from the plate, and the other half crosswise.

Quenching Tests.—The strips to be heated to a dull red and quenched in water of 82° F.

Number of Tests.—The number of tests to be made shall vary with the thickness as shown in the annexed table:—

Thickness.	One set of tests from every	Thickness.	One set of tests from every
50ths	Tons	50ths	Tons
6	2	18	5
8	2½	20	6
10	3	22	7
12	3½	24	8
14	4	28	9
16	4½	32 and above	10

Number of Tests.

Diameter of rivet in 16ths.	One set of tests from every	Diameter of rivet in 16ths.	One set of tests from every
	Tons		Tons
4	0·6	10	5
5	1	12	6·5
6	2	14	8
8	3·5	16	10

Angles	Same conditions as for plates					*Bending and Quenching Tests.*—The bending and quenching tests to be as for plates, and, in addition, a piece about 1½ inches long, cut from the bar, must be opened out and flattened, and then bent over in a direction normal to the flanges, until doubled up, so that both ends touch.			For bars, one set of tests shall be made from each lot of 50 bars supplied, when under 33 feet in length, two sets when of 33 feet and under 50 feet, and three sets when of 50 feet and above.
Steel Forgings	Working length 4 ins. Diameter turned to $\frac{9}{16}$″	27 ,, ,, ,,	29 (28·5) (30) 32	under 13 ,, ,, ,,	In 4 ins. 26% 25 24 23	Test piece 1 in. square and 10 ins. long.	¾ in.	180°	The test pieces to be cut cold after the forging is annealed, and as far as possible to be taken from the end where, when casting the ingot, the metal was run in. *Number of Tests.*—Two tests for any number of forgings resulting from the same charge. One test for each piece will be required when the number of the charge is not known to the surveyor.
Steel for Welding Purposes	L=4 ins. D=$\frac{9}{16}$″	23·5	24·75	under 13	30	*Tests.*—For the forge tests two bars are to be lap-welded at white heat. The weld must be examined after the first or second blows of steam hammer. The test piece must then be crushed by steam-hammer, being placed perpendicular to same. Before re-heating a hole must be punched transversely through the weld by a conical punch, to show the nature of the welded parts and to make sure that the joint is in every respect satisfactory. *Number of Tests.*—One tensile and elongation test. Two series of tests for each charge.			
Nickel Steel Forgings 3·25% nickel 0·35% carbon	L=4 ins. D=$\frac{9}{16}$″	37	42	under 13	20	*Percussion Tests.*—Test piece 1 in. square placed on knife edges 6½ ins. apart. Test weight, 40 lbs. Fall, 9 feet. Number of blows, 15.			The test pieces to be taken after the forging is annealed. *Number of Tests.*—One for each piece.
Steel Castings.	Working length 4 inches. Diameter turned to $\frac{9}{16}$″	28 31 35 38	42 ,, ,, ,,	under 13 ,, ,, ,	In 4 ins. 16% 14 12 10	Test piece 1 in. square	1½ ins.	90° 90° 90° 90°	*Percussion Test.*—Test piece 1″ square placed on knife edges 6½″ apart. Test weight, 40 lbs.; fall, 3½ ft. to 5 ft.; the increase between two successive tests to be 2″. *Hammering Test.*—Hung up freely and hammered. Weight of hammer at least 7 lbs.	In every case one set of tests shall be made from each charge when plates or bars are produced from different charges. The maximum tensile strength shall be: 35 tons for engine castings subject to live load. 30 tons for shafting and mast fittings, and for cast steel anchors. *Number of Tests.*—One for every charge, and one for every large casting.

INDIAN GOVERNMENT TESTS FOR STEEL.

(Abstract.)

Steel Plates (except for Boilers) and Sheets.

Strips cut crosswise or lengthwise are to have an ultimate tensile strength of not less than 26 and not exceeding 30 tons per square inch of section, with an elongation of not less than 20 per cent. in a length of 8 inches. *Sheets of ⅛ inch thickness and under will not be subjected to this test.*

Strips cut crosswise or lengthwise 1½ inches wide, heated uniformly to a low cherry red, and cooled in water of about 80° Fahrenheit, must stand bending double in a press to a curve of which the inner radius is one and a half times the thickness of the steel tested.

The ductility of every plate or sheet will be ascertained by the application of the temper test to the shearings, or by bending them cold and untempered by the hammer. The machine test will be applied to not less than 2 per cent. of the plates or sheets of each thickness subject to this test. Any which do not stand the tests will be rejected.

Bar Steel (all Sections).

The steel is to have an ultimate tensile strength of not less than 26 and not exceeding 30 tons per square inch of section, with a minimum elongation of 20 per cent. in a length of 8 inches.

Pieces heated uniformly to a low cherry red, and cooled in water of about 80° Fahrenheit, must stand bending double, in a press, to a curve of which the inner radius is one and a half times the thickness or diameter of the bar tested.

The ductility of the bars will be ascertained by the application of the temper test to the shearings, and by bending them cold and untempered by the hammer. The machine test will be applied to not less than 2 per cent. of the bars of each section.

Sample pieces will also be taken for testing the welding qualities of the steel by welding two pieces together and bending it the way of the weld when cold.

Steel Boilers.

Plates.

All plates are to be free from lamination and injurious surface defects, and their surfaces are to be quite fair and flat.

The strips are to be of parallel width for at least 8 inches of their length, and are to be cut in a planing machine and have the sharp edges taken off.

Strips cut crosswise and lengthwise are to have an ultimate tensile strength per square inch of original section as follows :—

(*a*) For shell and other plates which are not exposed to flame and which will not be flanged, not less than 27 tons and not exceeding 30 tons, with an elongation of not less than 20 per cent. in a length of 8 inches.

(*b*) For plates which are exposed to flame and plates which are to be flanged, not less than 24 tons and not exceeding 27 tons, with an elongation of not less than 25 per cent. in a length of 8 inches.

Strips cut crosswise and lengthwise 1½ inches wide, heated uniformly to a low cherry red, and cooled in water of about 80° Fahrenheit, must stand bending in a press to a curve of which the inner radius is one-and-a-half times the thickness of the steel tested.

The ductility of every plate will be ascertained by the application of both of these tests to the shearings, both crosswise and lengthwise in every case.

Strips from the plates for furnaces and other parts exposed to flame, and from those requiring flanging, are, in addition, to be tested by welding and forging.

Angles, Flat Bars, etc.

These will be subject to the same tests as plates, but lengthwise only.

Rivets.

The steel for rivets is to have an ultimate tensile strength of not less than 25 and not exceeding 27 tons per square inch of section, with a minimum elongation of 25 per cent. in a length of 8 inches.

The rivets are to stand the following forge tests :—

(*a*) Bending hot and cold without fracture through an angle of 180°.

(*b*) Flattening of the rivet head, while hot, without cracking at the edges. The head to be flattened until its diameter is two and a half times that of the shank.

(*c*) The shank of the rivet to be nicked on one side, and bent over to show the quality of the steel. The shank must bear this test without breaking off short.

BURSTING STRENGTH OF TUBES.

Let p = bursting pressure in lbs. per sq. in. inside tube.
D = outside diameter of tube in inches.
d = inside " " "

Then

$$p = \frac{D^2 - d^2}{D^2 + d^2} f.$$

Values of f.

Steel (60° F.) . . . 95,000	Wrought iron (60° F.) . . 50,000	Copper (rolled) (60° F.) . 35,000
" (800° F.)* . . . 28,800	Cast iron (60° F.) . . . 20,000	" " (640° F.)* 14,700
	Brass (rolled) (60° F.) 30,000	

If t = thickness of tube, and $n = \frac{d}{t}$, then

$$p = \frac{2}{n + 1 + \frac{1}{n+1}} f = \kappa f.$$

TABLE SHOWING VALUES OF κ FOR VARIOUS VALUES OF n.

n	·1	·2	·3	·4	·5	·6	·7	·8	·9	1
κ	·995	·984	·967	·946	·923	·899	·874	·849	·824	·800
n	1·1	1·2	1·3	1·4	1·5	1·6	1·7	1·8	1·9	2
κ	·776	·753	·731	·710	·690	·670	·651	·634	·616	·600
n	2·1	2·2	2·3	2·4	2·5	2·6	2·7	2·8	2·9	3
κ	·584	·569	·555	·541	·528	·516	·504	·492	·481	·471
n	3·1	3·2	3·3	3·4	3·5	3·6	3·7	3·8	3·9	4
κ	·461	·451	·441	·432	·424	·415	·407	·399	·392	·385
n	4·1	4·2	4·3	4·4	4·5	4·6	4·7	4·8	4·9	5
κ	·378	·371	·364	·358	·352	·346	·340	·335	·330	·324
n	5·1	5·2	5·3	5·4	5·5	5·6	5·7	5·8	5·9	6
κ	·319	·314	·310	·305	·301	·296	·292	·288	·284	·280
n	6·1	6·2	6·3	6·4	6·5	6·6	6·7	6·8	6·9	7
κ	·276	·273	·269	·265	·262	·259	·256	·252	·249	·246
n	7·1	7·2	7·3	7·4	7·5	7·6	7·7	7·8	7·9	8
κ	·243	·240	·238	·235	·232	·229	·227	·224	·222	·220
n	8·1	8·2	8·3	8·4	8·5	8·6	8·7	8·8	8·9	9
κ	·217	·215	·213	·210	·208	·206	·204	·202	·200	·198
n	9·1	9·2	9·3	9·4	9·5	9·6	9·7	9·8	9·9	10
κ	·196	·194	·192	·191	·189	·187	·185	·184	·182	·180
n	11	12	13	14	15	16	17	18	19	20
κ	·166	·153	·142	·133	·125	·117	·111	·105	·0998	·0950
n	21	22	23	24	25	26	27	28	29	30
κ	·0907	·0868	·0832	·0799	·0768	·0740	·0713	·0689	·0666	·0645
n	31	32	33	34	35	36	37	38	39	40
κ	·0625	·0606	·0588	·0571	·0555	·0540	·0526	·0513	·0500	·0488
n	41	42	43	44	45	46	47	48	49	50
κ	·0476	·0465	·0454	·0444	·0435	·0425	·0417	·0408	·0400	·0392
n	51	52	53	54	55	56	57	58	59	60
κ	·0384	·0377	·0370	·0364	·0357	·0351	·0345	·0339	·0333	·0328

* *Durston.* *(H. R. Kempe.)*

EXAMPLE (1).—What is the bursting strength of a wrought-iron tube whose bore is 2 ins. (d), and thickness ·1 inch (t)?

$$n = \frac{d}{t} = \frac{2}{\cdot 1} = 20.$$

κ corresponding to 20 is ·095; therefore

$$p = \cdot 095 \times 50{,}000 = 4{,}750 \text{ lbs per sq. in.}$$

If the value of n is not a number whose exact value can be found in the table, then multiply the excess which n has above the next lower value in the table by the difference between the value of κ corresponding to this lower value and the next higher value; then add the result to the lower value of κ, thus:

EXAMPLE (2).—What is the bursting strength of a wrought-iron tube whose bore is 2 ins. (D.), and thickness 1·2 ins. (t)?

$$n = \frac{D}{t} = \frac{2}{1 \cdot 2} = 1 \cdot 67;$$

next lower value of n in the table is 1·6, and

Excess of 1·67 over 1·6 = ·07. Value of κ corresponding to 1·6 = ·670.

Next higher value of κ = ·651;

then

·670 − ·651 = ·019; ·019 × ·07 = ·00133; ·00133 + ·651 = ·65233, the required value of κ;

therefore bursting strength p is

$$p = \cdot 652 \times 50{,}000 = 32{,}600 \text{ lbs. per sq. in.}$$

Values of p for values of $\frac{d}{t}$ exceeding 60 may be calculated very approximately by the formula

$$p = \frac{2}{n+1}, \text{ or } \frac{2t}{d+t}.$$

EXAMPLE (3).—What is the bursting strength of a steel tube 3 ins. in bore and ·045 inch thick?

$$p = \frac{2 \times \cdot 045}{3 + \cdot 045} \times 95{,}000 = \cdot 0296 \times 95{,}000 = 2{,}810 \text{ lbs. per sq. in.}$$

If t is *very* small compared with d, then

$$p = \frac{2t}{d}.$$

STRENGTH OF STEEL TUBES.

1. The length of tube, between transverse joints tending to hold it to a circular form, has no practical influence upon the collapsing pressure of a commercial lap-welded steel tube so long as this length is not less than about six diameters of tube.

2. The formulæ, as based upon the present research, for the collapsing pressure of modern lap-welded Bessemer steel tubes are as follows:—

$$P = 1{,}000 \left(1 - \sqrt{1 - 1{,}600 \frac{t^2}{d^2}}\right) \quad \text{(A)} \qquad P = 86{,}670 \frac{t}{d} - 1{,}386 \quad \text{(B)}$$

Where

P = collapsing pressure, in pounds per square inch; d = outside diameter of tube in inches; t = thickness of wall in inches.

Formula (A) is for values of P less than 580 lbs., or for values of $\frac{t}{d}$ less than 0·023, while formula (B) is for values greater than these.

These formulæ, while strictly correct for tubes that are 20 ft. in length between transverse joints tending to hold them to a circular form, are at the same time substantially correct for all lengths greater than about six diameters. They have been tested for seven diameters, ranging from 3 ins. to 10 ins., in all obtainable commercial thicknesses of wall, and are known to be correct for this range.

3. For the most favourable practical conditions—viz. when the tube is subjected only to stress due to fluid pressure, and only the most trivial loss could result from its failure—a factor of safety of 3 would appear sufficient.

4. When only a moderate amount of loss could result from failure, use a factor of 4.

5. When considerable damage to property and loss of life might result from a failure of the tube, then use a factor of safety of 6.

6. When the conditions of service are such as to cause the tube to become less capable of resisting collapsing pressure, such as the thinning of wall due to corrosion, the weakening of the material due to overheating, the creating of internal stress in the wall of the tube due to unequal heating, vibration, etc., the above factors of safety should be increased in proportion to the severity of these actions. (*R. T. Stewart.*)

Strength of Lead Pipes.

Internal diameter in ins.	½	⅝	¾	1	1¼	1½	2
Thickness in ins.	·2	·2	·22	·2	·21	·24	·24
Weight per ft.	2·3	2·6	3·8	4·1	5·3	7·1	9·2
Bursting pressure in lbs. per sq. in.	1,579	1,349	1,191	911	683	734	498

(*Kirkaldy.*)

Allowable Pressure in Thick Hollow Cylinders.

If P = allowable pressure in lbs. per sq. in.; S_t = allowable working stress of the material in lbs. per sq. in.; K = ratio of the external diameter to the internal diameter; then

$$\frac{P}{S_t} = 0{\cdot}6\,\frac{K^2 - 1}{K^2}.$$

(*Gilbert Cook and Andrew Robertson*, '*Engineering*,' Dec. 15, 1911.)

Chart for Computing Allowable Pressure in Thick Hollow Cylinders.

The chart, fig. 415, prepared by Herman Steiger from the foregoing formula, may be used to determine the allowable pressure for a given cylinder, or to determine the dimensions of a cylinder for a given internal pressure.

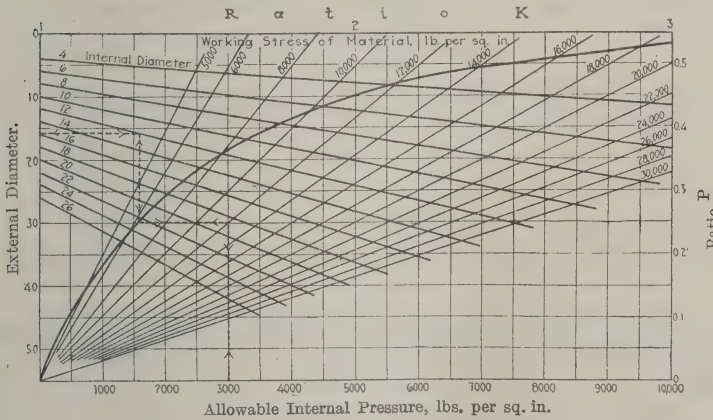


Fig. 415.

Example 1.—Suppose a steel cylinder is 16 ins. outside diameter and 12 ins. inside diameter, and the metal is good for 12,000 lbs. per sq. in. working stress. It is desired to find the allowable

internal pressure.—From the given external diameter, 16 ins., on the vertical scale move horizontally, as shown by the dotted line, to the line marked 12 ins. internal diameter. From this point move vertically to the heavy curved line and then horizontally to the line marked 12,000 lbs. working stress. Directly below this point read off the allowable pressure on the horizontal scale, 3,000 lbs. per sq. in.

Example 2.—Suppose it is desired to know the thickness of a cylinder to stand 3,000 lbs. per sq. in. pressure when the internal diameter is 12 ins. and the allowable stress is 12,000 lbs. per sq. in.—From the 3,000-lb. point on the horizontal scale move upward to the 12,000-lb. stress line and then horizontally to the curved line. From here move vertically to the 12-in. internal diameter line and read off the external diameter, 16 ins., on the left-side scale. (*'Power.'*)

STRENGTH OF IRON CHAINS.

(1.)

A stud link chain of equal dimensions will, within the elastic limit, bear from 20 to 25 per cent. more load than the open link chain. The ultimate strength of the stud link chain is probably less than that of the open link chain.

In the formulæ for the safe loading of chains given by the leading authorities on machine design, the maximum stress to which the link is subjected seems to be underestimated, and the constants are such as to give maximum stresses of from 30,000 lbs. to 40,000 lbs. per sq. in. for full load. The following formulæ are applicable to chains of the usual form :—

$$\left.\begin{aligned} P &= 0{\cdot}4\ sd^2, \text{ for open links} \\ P &= 0{\cdot}5\ sd^2, \text{ for stud links} \end{aligned}\right\} \quad \text{(A)}$$

as compared with Professor Unwin's formulæ :—

$$\begin{aligned} P &= 6\ d^2, \text{ for open links,} \\ P &= 9\ d^2, \text{ for stud links,} \end{aligned}$$

where P denotes the safe load, d the diameter of the stock, and s the maximum permissible tensile stress.

(*C. E. Goodenough and L. E. Moore.*)

In formulæ (A), if d is the diameter in inches (or decimals of an inch) of the bar iron of which the chains are made, and if s be taken of the mean value 35,000, then P in tons will be

$$P = 0{\cdot}4 \times \frac{35000}{2240} d^2 = 6{\cdot}25 d^2, \text{ for open links,}$$

$$P = 0{\cdot}5 \times \frac{35000}{2240} d^2 = 7{\cdot}8 d^2, \text{ for stud links.}$$

(2.)*

d = Number of eighths of an inch in diameter of rod iron of which chain is made ; S = Safe working load in tons.

$$S = d^2 \div 10.$$

(See also Section XVII, Cranes and Crane Appliances, p. 794.)

*See paper read by Mr. Daniel Adamson, M.I.Mech.E., before the Inst., of Mech Engrs. 1913.

(3.)

Ultimate Strength of a Chain.

The ultimate, or breaking, strength of a chain is usually found to lie between 1·5 and 1·7 (average 1·66) times the ultimate strength of the straight bar or stock from which it is formed, instead of twice that amount, as might at first thought be expected because of the doubling of the bar in forming the link.

Safe Load on a Chain.

For chains with open links of the usual form,

$$F = 2{\cdot}5 \times \frac{P}{D^2},$$

For chains with stud links,

$$F = 2 \times \frac{P}{D^2},$$

where, F = extreme fibre stress in tension, in lbs. per sq. in.; D = diameter of stock in ins.; P = chain load, in lbs.

The safe loads for open-link chains given in the table, page 280, have been computed by this formula, using the value of 12,000 lbs. per sq. in. for the allowable maximum fibre stress, and assuming an elastic limit of 24,000 lbs. per sq. in., thus assuring in every case an actual safety factor of at least 2, based on the elastic limit of wrought iron, or more if open-hearths

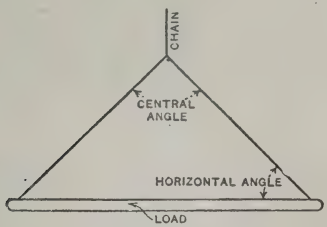


Fig. 416.

low-carbon steel is used. For material possessing an elastic limit of 30,000 lbs. per sq. in., a fibre stress of 15,000 lbs. per sq. in. may be assumed, in which case the tabular values should be increased 25 per cent.

The nominal size of a chain is indicated by the diameter of the steel or iron of the link. The central angle (fig. 416) is the angle between the parts of a double sling; the horizontal angle is the angle between each part of a double sling and a horizontal line. The horizontal collapsing force is the force tending to crush together the load carried between the points of attachment of a double sling. This force must be taken into consideration in the case of hollow castings on similar loads; it may be found by multiplying the total load by the 'factor' given in the table. The safe values given in the table are for single chains. When used double, the values given should be multiplied by 2, and so on in proportion. In a double sling, properly adjusted, each leg carries only its portion of the load; when a double sling is attached to a single chain of the same size, the safe load for the single chain only should be used. When a heavy chain is used in connection with a lighter double sling, the safe load is the smaller of the two tabular values; that is, it is either equal to the safe load of the chain that carries the total load, or to twice the safe load of one part of the sling, whichever value is the smaller.

Example: A safe load for a single $\frac{7}{8}$-in. chain is 3,700 lbs. If this chain is used with a double $\frac{7}{8}$-in. sling attached to the load so as to make a central angle of 15 degrees, each part of the sling has a carrying capacity of 1,880 lbs., so that the double sling has practically the same safe load as the single chain, namely $2 \times 1{\cdot}880 = 3{,}760$ lbs. If a $\frac{7}{8}$-in. double sling is used with this chain, and so attached as to make a central angle of 30 degrees, each part of the sling can safely carry only 1,160 lbs., or a safe load for the double sling so attached is only 2,320 lbs., which, being less than that for the straight chain itself, constitutes the safe load for the combination.

SAFE WORKING LOADS FOR SINGLE OPEN-LINK CHAINS.*

For stud links increase these values 25 per cent.

Diameter.	Central Angle, Degrees.								
	0	15	30	45	60	75	90	105	120
	Horizontal Angle, Degrees.								
	0	82·5	75	67·5	60	52·5	45	37·5	30
	Factors.								
	0	0·06	0·13	0·21	0·29	0·38	0·50	0·65	0·86
	Safe Working Load, Pounds.								
$\frac{1}{4}$	300	295	290	280	260	240	210	180	150
$\frac{3}{8}$	700	695	675	645	605	555	495	425	350
$\frac{5}{8}$	1,200	1,190	1,160	1,110	1,040	950	850	730	600
$\frac{3}{4}$	1,900	1,880	1,835	1,755	1,645	1,505	1,345	1,160	950
$\frac{7}{8}$	2,700	2,675	2,610	2,495	2,340	2,140	1,910	1,645	1,350
$\frac{7}{8}$	3,700	3,665	3,575	3,420	3,205	2,935	2,620	2,255	1,850
1	4,800	4,750	4,640	4,435	4,160	3,810	3,395	2,925	2,400
$1\frac{1}{4}$	7,500	7,425	7,245	6,930	6,495	5,950	5,300	4,570	3,750
$1\frac{3}{8}$	9,100	9,000	8,790	8,410	7,880	7,220	6,435	5,540	4,550
$1\frac{1}{2}$	10,800	10,690	10,435	9,980	9,350	8,565	7,635	6,580	5,400
$1\frac{3}{4}$	14,700	14,555	14,200	13,585	12,730	11,660	10,395	8,950	7,350

* The elastic limit has been assumed as 24,000 pounds per square inch and the maximum allowable fibre stress as 12,000 pounds per square inch.†

If a 1-in. chain is used with a $\frac{7}{8}$-in. double sling making a central angle of 15 degrees, the double sling is capable of carrying a safe load of $2 \times 2{,}675 = 5{,}350$ lbs.; but the straight chain itself can carry a safe load of only 4,800 lbs., which is therefore the proper safe load of the combination. The collapsing or crushing force of this load is $0{\cdot}06 \times 4{,}800 = 288$ lbs. Chains that have been overloaded to such a point as to cause fatigue can be detected, when struck a sharp blow with a hammer, by a characteristic ring. Further proof of such condition can be obtained by placing the link edgewise on an anvil and striking it several sharp blows with a sledge; if it is fatigued, the link will fracture sharply with a decided crystalline appearance. In case a chain is found to contain a link of such a nature, the entire chain should be discarded for all overhead lifting purposes where life might be endangered.

CONNECTING RING.

The connecting ring must be designed to resist the same safe load as the chain. The following formula is recommended :—

$$P = \frac{0{\cdot}617Fd^3}{D} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (B)$$

where, P = safe load; d = diameter of stock in ring;
F = fibre stress of material used; D = main diameter of ring.

(Engineering Experiment Station of the University of Illinois, U.S.A.)

† This is a much lower limit than in the case of British practice (1) and (2).—H. R. KEMPE.

PROPORTIONS OF RINGS FOR STANDARD SHORT-LINK CHAINS.

$\frac{5}{16}$-inch Chain.	$\frac{3}{8}$-inch Chain.	$\frac{7}{16}$-inch Chain.	$\frac{1}{2}$-inch Chain.	$\frac{9}{16}$-inch Chain.	$\frac{5}{8}$-inch Chain.	$\frac{11}{16}$-inch Chain.	$\frac{3}{4}$-inch Chain.	$\frac{13}{16}$-inch Chain.	$\frac{7}{8}$-inch Chain.
Proof Load, $1\frac{1}{8}$ Ton.	Proof Load, $1\frac{5}{8}$ Ton.	Proof Load, $2\frac{1}{4}$ Tons.	Proof Load, 3 Tons.	Proof Load, $3\frac{3}{4}$ Tons.	Proof Load, $4\frac{5}{8}$ Tons.	Proof Load, $5\frac{5}{8}$ Tons.	Proof Load, $6\frac{3}{4}$ Tons.	Proof Load, $7\frac{9}{10}$ Tons.	Proof Load, $9\frac{1}{8}$ Tons.
Minimum Size of Iron in Ring.	Minimum Size of Iron in Ring.	Minimum Size of Iron in Ring.	Minimum Size of Iron in Ring.	Minimum Size of Iron in Ring.	Minimum Size of Iron in Ring.	Minimum Size of Iron in Ring.	Minimum Size of Iron in Ring.	Minimum Size of Iron in Ring.	Minimum Size of Iron in Ring.
Maximum Internal Diameter of Ring.	Maximum Internal Diameter of Ring.	Maximum Internal Diameter of Ring.	Maximum Internal Diameter of Ring.	Maximum Internal Diameter of Ring.	Maximum Internal Diameter of Ring.	Maximum Internal Diameter of Ring.	Maximum Internal Diameter of Ring.	Maximum Internal Diameter of Ring.	Maximum Internal Diameter of Ring.
In. Ins.	In. Ins.	In. Ins.	In. Ins.	In. Ins.	In. Ins.	In. Ins.	In. Ins.	In. Ins.	In. Ins.
$\frac{7}{16}$ 1	$\frac{1}{2}$ $1\frac{1}{16}$	$\frac{5}{8}$ $1\frac{1}{16}$	$\frac{11}{16}$ $1\frac{5}{16}$	$\frac{13}{16}$ $1\frac{5}{8}$	$\frac{7}{8}$ $1\frac{13}{16}$	1 $1\frac{15}{16}$	$1\frac{3}{16}$ $2\frac{1}{4}$	$1\frac{1}{2}$ $2\frac{7}{8}$	$1\frac{3}{4}$ $3\frac{3}{8}$
$\frac{1}{2}$ $1\frac{1}{16}$	$\frac{5}{8}$ $1\frac{9}{16}$	$\frac{3}{4}$ 2	$\frac{7}{8}$ $2\frac{1}{16}$	1 $2\frac{1}{8}$	$1\frac{1}{16}$ $2\frac{5}{16}$	$1\frac{1}{8}$ $2\frac{7}{16}$	$1\frac{5}{16}$ $2\frac{13}{16}$	$1\frac{3}{4}$ $3\frac{3}{8}$	$2\frac{1}{16}$ $3\frac{15}{16}$
$\frac{9}{16}$ $1\frac{3}{16}$	$\frac{3}{4}$ $2\frac{1}{16}$	$\frac{7}{8}$ $2\frac{3}{16}$	1 $2\frac{5}{16}$	$1\frac{1}{16}$ $2\frac{7}{16}$	$1\frac{3}{16}$ $2\frac{9}{16}$	$1\frac{5}{16}$ $2\frac{15}{16}$	$1\frac{7}{16}$ $3\frac{3}{16}$	$2\frac{1}{16}$ $3\frac{15}{16}$	$2\frac{7}{16}$ $4\frac{9}{16}$
$\frac{5}{8}$ $1\frac{5}{16}$	$\frac{7}{8}$ $2\frac{1}{8}$	1 $2\frac{7}{16}$	$1\frac{1}{16}$ $2\frac{11}{16}$	$1\frac{3}{16}$ $2\frac{13}{16}$	$1\frac{5}{16}$ $3\frac{1}{16}$	$1\frac{7}{16}$ $3\frac{5}{16}$	$1\frac{9}{16}$ $3\frac{11}{16}$	$2\frac{3}{16}$ $4\frac{5}{16}$	$2\frac{11}{16}$ $5\frac{3}{16}$
$\frac{11}{16}$ $1\frac{7}{16}$	$\frac{15}{16}$ $2\frac{5}{16}$	$1\frac{1}{16}$ $2\frac{9}{16}$	$1\frac{3}{16}$ $2\frac{15}{16}$	$1\frac{5}{16}$ $3\frac{1}{16}$	$1\frac{7}{16}$ $3\frac{7}{16}$	$1\frac{9}{16}$ $3\frac{13}{16}$	$1\frac{11}{16}$ $4\frac{1}{16}$	$2\frac{5}{16}$ $5\frac{1}{16}$	$2\frac{15}{16}$ $5\frac{15}{16}$
$\frac{3}{4}$ $1\frac{9}{16}$	1 $2\frac{3}{16}$	$1\frac{1}{8}$ $2\frac{11}{16}$	$1\frac{5}{16}$ $3\frac{1}{16}$	$1\frac{7}{16}$ $3\frac{7}{16}$	$1\frac{9}{16}$ $3\frac{11}{16}$	$1\frac{11}{16}$ $4\frac{1}{16}$	$1\frac{13}{16}$ $4\frac{5}{16}$	$2\frac{7}{16}$ $5\frac{5}{16}$	$3\frac{1}{16}$ $6\frac{1}{16}$
$\frac{13}{16}$ $1\frac{11}{16}$	$1\frac{1}{16}$ $2\frac{5}{16}$	$1\frac{3}{16}$ $2\frac{13}{16}$	$1\frac{7}{16}$ $3\frac{3}{16}$	$1\frac{9}{16}$ $3\frac{9}{16}$	$1\frac{11}{16}$ $3\frac{15}{16}$	$1\frac{13}{16}$ $4\frac{3}{16}$	$1\frac{15}{16}$ $4\frac{7}{16}$	$2\frac{9}{16}$ $5\frac{7}{16}$	$3\frac{3}{16}$ $6\frac{3}{16}$
$\frac{7}{8}$ $1\frac{13}{16}$	$1\frac{1}{8}$ $2\frac{7}{16}$	$1\frac{5}{16}$ $2\frac{15}{16}$	$1\frac{9}{16}$ $3\frac{5}{16}$	$1\frac{11}{16}$ $3\frac{11}{16}$	$1\frac{13}{16}$ $4\frac{1}{16}$	$1\frac{15}{16}$ $4\frac{5}{16}$	$2\frac{1}{16}$ $4\frac{9}{16}$	$2\frac{11}{16}$ $5\frac{9}{16}$	$3\frac{5}{16}$ $6\frac{5}{16}$
$\frac{15}{16}$ $1\frac{15}{16}$	$1\frac{3}{16}$ $2\frac{9}{16}$	$1\frac{7}{16}$ $3\frac{1}{16}$	$1\frac{11}{16}$ $3\frac{7}{16}$	$1\frac{13}{16}$ $3\frac{13}{16}$	$1\frac{15}{16}$ $4\frac{3}{16}$	$2\frac{1}{16}$ $4\frac{7}{16}$	$2\frac{3}{16}$ $4\frac{11}{16}$	$2\frac{13}{16}$ $5\frac{11}{16}$	$3\frac{7}{16}$ $6\frac{7}{16}$
1 2	$1\frac{1}{4}$ $2\frac{11}{16}$	$1\frac{1}{2}$ $3\frac{3}{16}$	$1\frac{13}{16}$ $3\frac{9}{16}$	$2\frac{1}{16}$ $3\frac{15}{16}$	$2\frac{3}{16}$ $4\frac{5}{16}$	$2\frac{5}{16}$ $4\frac{9}{16}$	$2\frac{7}{16}$ $4\frac{13}{16}$	$3\frac{1}{16}$ $5\frac{13}{16}$	$3\frac{11}{16}$ $6\frac{11}{16}$

$1\frac{5}{16}$-inch Chain.	1-inch Chain.	$1\frac{1}{16}$-inch Chain.	$1\frac{1}{8}$-inch Chain.	$1\frac{3}{16}$-inch Chain.	$1\frac{1}{4}$-inch Chain.	$1\frac{5}{16}$-inch Chain.	$1\frac{3}{8}$-inch Chain.	$1\frac{7}{16}$-inch Chain.	$1\frac{1}{2}$-inch Chain.
Proof Load, $10\frac{1}{2}$ Tons.	Proof Load, 12 Tons.	Proof Load, $13\frac{1}{2}$ Tons.	Proof Load, $15\frac{1}{8}$ Tons.	Proof Load, $16\frac{9}{10}$ Tons.	Proof Load, $18\frac{3}{4}$ Tons.	Proof Load, $20\frac{5}{8}$ Tons.	Proof Load, $22\frac{5}{8}$ Tons.	Proof Load, $24\frac{3}{4}$ Tons.	Proof Load, 27 Tons.
Minimum Size of Iron in Ring.	Minimum Size of Iron in Ring.	Minimum Size of Iron in Ring.	Minimum Size of Iron in Ring.	Minimum Size of Iron in Ring.	Minimum Size of Iron in Ring.	Minimum Size of Iron in Ring.	Minimum Size of Iron in Ring.	Minimum Size of Iron in Ring.	Minimum Size of Iron in Ring.
Maximum Internal Diameter of Ring.	Maximum Internal Diameter of Ring.	Maximum Internal Diameter of Ring.	Maximum Internal Diameter of Ring.	Maximum Internal Diameter of Ring.	Maximum Internal Diameter of Ring.	Maximum Internal Diameter of Ring.	Maximum Internal Diameter of Ring.	Maximum Internal Diameter of Ring.	Maximum Internal Diameter of Ring.
In. Ins.	In. Ins.	In. Ins.	In. Ins.	In. Ins.	In. Ins.	In. Ins.	In. Ins.	In. Ins.	In. Ins.
$1\frac{5}{16}$ $2\frac{1}{16}$	$1\frac{3}{8}$ $2\frac{3}{16}$	$1\frac{7}{16}$ $3\frac{3}{16}$	$1\frac{9}{16}$ $3\frac{3}{16}$	$1\frac{11}{16}$ $3\frac{9}{16}$	$1\frac{13}{16}$ $3\frac{15}{16}$	$1\frac{15}{16}$ $4\frac{3}{16}$	$2\frac{1}{16}$ $4\frac{7}{16}$	$2\frac{3}{16}$ $4\frac{11}{16}$	$2\frac{5}{16}$ $5\frac{1}{16}$
$1\frac{3}{8}$ $2\frac{1}{16}$	$1\frac{7}{16}$ $3\frac{3}{16}$	$1\frac{9}{16}$ $3\frac{9}{16}$	$1\frac{11}{16}$ $3\frac{15}{16}$	$1\frac{13}{16}$ $4\frac{3}{16}$	$1\frac{15}{16}$ $4\frac{7}{16}$	$2\frac{1}{16}$ $4\frac{11}{16}$	$2\frac{3}{16}$ $5\frac{1}{16}$	$2\frac{5}{16}$ $5\frac{7}{16}$	$2\frac{7}{16}$ $5\frac{13}{16}$
$1\frac{7}{16}$ $2\frac{1}{8}$	$1\frac{1}{2}$ $3\frac{1}{4}$	$1\frac{11}{16}$ $3\frac{11}{16}$	$1\frac{13}{16}$ $4\frac{1}{16}$	$1\frac{15}{16}$ $4\frac{7}{16}$	$2\frac{1}{16}$ $4\frac{13}{16}$	$2\frac{3}{16}$ $5\frac{3}{16}$	$2\frac{5}{16}$ $5\frac{9}{16}$	$2\frac{7}{16}$ $6\frac{1}{16}$	$2\frac{9}{16}$ $6\frac{7}{16}$
$1\frac{1}{2}$ $2\frac{3}{16}$	$1\frac{9}{16}$ $3\frac{5}{16}$	$1\frac{13}{16}$ $4\frac{1}{16}$	$1\frac{15}{16}$ $4\frac{7}{16}$	$2\frac{1}{16}$ $4\frac{13}{16}$	$2\frac{3}{16}$ $5\frac{3}{16}$	$2\frac{5}{16}$ $5\frac{9}{16}$	$2\frac{7}{16}$ $6\frac{1}{16}$	$2\frac{9}{16}$ $6\frac{5}{16}$	$2\frac{11}{16}$ $6\frac{13}{16}$
$1\frac{9}{16}$ $2\frac{5}{16}$	$1\frac{5}{8}$ $3\frac{7}{16}$	$1\frac{15}{16}$ $4\frac{3}{16}$	2 $4\frac{9}{16}$	$2\frac{1}{16}$ $4\frac{15}{16}$	$2\frac{5}{16}$ $5\frac{5}{16}$	$2\frac{7}{16}$ $5\frac{11}{16}$	$2\frac{9}{16}$ $6\frac{5}{16}$	$2\frac{11}{16}$ $6\frac{13}{16}$	$2\frac{13}{16}$ $7\frac{5}{16}$
$1\frac{5}{8}$ $2\frac{7}{16}$	$1\frac{11}{16}$ $3\frac{9}{16}$	2 $4\frac{5}{16}$	$2\frac{1}{16}$ $4\frac{11}{16}$	$2\frac{3}{16}$ $5\frac{1}{16}$	$2\frac{7}{16}$ $5\frac{7}{16}$	$2\frac{9}{16}$ $6\frac{1}{16}$	$2\frac{11}{16}$ $6\frac{7}{16}$	$2\frac{13}{16}$ $6\frac{15}{16}$	$2\frac{15}{16}$ $7\frac{7}{16}$
$1\frac{11}{16}$ $2\frac{9}{16}$	$1\frac{3}{4}$ $3\frac{11}{16}$	$2\frac{1}{16}$ $4\frac{7}{16}$	$2\frac{3}{16}$ $5\frac{1}{16}$	$2\frac{5}{16}$ $5\frac{5}{16}$	$2\frac{9}{16}$ $6\frac{1}{16}$	$2\frac{11}{16}$ $6\frac{7}{16}$	$2\frac{13}{16}$ $6\frac{13}{16}$	$3\frac{1}{16}$ $7\frac{7}{16}$	$3\frac{3}{16}$ $7\frac{15}{16}$
$1\frac{3}{4}$ $2\frac{11}{16}$	$1\frac{13}{16}$ $3\frac{13}{16}$	$2\frac{3}{16}$ $4\frac{9}{16}$	$2\frac{5}{16}$ $5\frac{3}{16}$	$2\frac{7}{16}$ $5\frac{7}{16}$	$2\frac{11}{16}$ $6\frac{3}{16}$	$2\frac{13}{16}$ $6\frac{9}{16}$	$3\frac{1}{16}$ $7\frac{1}{16}$	$3\frac{5}{16}$ $7\frac{13}{16}$	$3\frac{7}{16}$ $8\frac{5}{16}$
$1\frac{13}{16}$ $2\frac{13}{16}$	$1\frac{15}{16}$ $3\frac{15}{16}$	$2\frac{5}{16}$ $4\frac{11}{16}$	$2\frac{7}{16}$ $5\frac{5}{16}$	$2\frac{9}{16}$ $5\frac{9}{16}$	$2\frac{13}{16}$ $6\frac{5}{16}$	$3\frac{1}{16}$ $6\frac{11}{16}$	$3\frac{3}{16}$ $7\frac{3}{16}$	$3\frac{7}{16}$ $7\frac{15}{16}$	$3\frac{9}{16}$ $8\frac{7}{16}$
$1\frac{7}{8}$ $2\frac{15}{16}$	2 $4\frac{1}{16}$	$2\frac{7}{16}$ $4\frac{13}{16}$	$2\frac{9}{16}$ $5\frac{7}{16}$	$2\frac{11}{16}$ $5\frac{11}{16}$	$3\frac{1}{16}$ $6\frac{7}{16}$	$3\frac{5}{16}$ $6\frac{13}{16}$	$3\frac{7}{16}$ $7\frac{5}{16}$	$3\frac{11}{16}$ $8\frac{1}{16}$	$3\frac{13}{16}$ $8\frac{9}{16}$
2 3	$2\frac{1}{16}$ $4\frac{3}{16}$	$2\frac{1}{2}$ $4\frac{15}{16}$	$2\frac{11}{16}$ $5\frac{9}{16}$	$2\frac{13}{16}$ $5\frac{13}{16}$	$3\frac{3}{16}$ $6\frac{9}{16}$	$3\frac{7}{16}$ $7\frac{1}{16}$	$3\frac{9}{16}$ $7\frac{7}{16}$	$3\frac{15}{16}$ $8\frac{3}{16}$	$4\frac{1}{16}$ $8\frac{11}{16}$

(*T. Robson.*)

Precautions in the Use of Chains.

The third Safety Pamphlet issued by the Home Office (Dec. 1920), deals with the use of chains and other lifting gear. It is pointed out that accidents should, according to law, be reported to the factory inspector. The safe working load for chains is given, in tons, as six times the square of its diameter (the American rule is $2{\cdot}8d^2$—which gives a factor of safety of 4·5).

TABLE OF SAFE WORKING LOADS FOR TWO-LEGGED SLINGS.

Chain Diameter, Ins.	Safe Working Loads in Tons and Cwt. for given Angles between Legs.					
	0 Deg.	30 Deg.	60 Deg.	90 Deg.	120 Deg.	150 Deg.
3/16	0-8	0-8	0-7	0-5	0-4	0-2
1/4	0-15	0-14	0-13	0-10	0-7	0-3
5/16	1-3	1-2	1-0	0-16	0-11	0-5
3/8	1-13	1-12	1-9	1-3	0-16	0-8
7/16	3-0	2-17	2-12	2-2	1-10	0-15
1/2	4-13	4-10	4-0	3-6	2-6	1-4
9/16	6-15	6-10	5-17	4-15	3-7	1-14
5/8	9-3	8-17	7-18	6-9	4-11	2-7
1	12-0	11-11	10-7	8-9	6-0	3-1
1 1/8	15-3	14-12	13-2	10-14	7-11	3-18
1 1/4	18-15	18-2	16-5	13-5	9-7	4-16
1 3/8	22-13	21-17	19-12	16-0	11-7	5-17
1 1/2	27-0	26-1	23-8	19-1	13-0	6-19
1 5/8	31-12	30-1	27-8	22-8	15-16	8-3
1 3/4	36-15	35-9	31-16	25-19	18-7	9-9
1 7/8	42-3	40-14	36-10	29-16	21-1	10-17
2	48-0	46-8	41-11	33-18	24-0	12-7
2 1/8	54-2	52-6	46-18	38-5	27-1	13-19
2 1/4	60-15	58-12	52-12	42-19	30-7	15-13
2 3/8	67-12	65-6	58-12	47-16	33-16	17-8
2 1/2	75-0	72-9	65-0	53-0	37-10	19-7

NOTES.

(4) The maximum working load for any short or close-link chain should not exceed $6d^2$ tons, when used under normal conditions without shock ; $5d^2$ tons, where there is any special danger to life or limb, or $3{\cdot}5d^2$ tons where the chain is subjected to shock or heavy wear, or is used for lifts of molten metal or heated liquid ; d being the diameter in inches of the iron of the chain. The maximum working load for a long-link chain should not exceed two-thirds of that for a short-link chain of the same diameter.

(5) When chain slings with two or more legs are used with the legs inclined, care should be taken to ensure that the maximum load in each leg does not exceed that given in recommendation (4) above—see also table.

(8) Slings or other chains should never be shortened by tying knots in them ; and wood or other suitable packing should be provided to prevent the links coming in contact with corners of loads of hard material.

(11) All chains and other lifting appliances should—(*a*) If used for lifting in connection with molten metal or molten slag, be examined at least once in every month and be annealed at least once in every six months ; or (*b*) if used in connection with lifting machinery or plant operated mechanically or electrically, or used for lifting in metal foundries other than that mentioned in paragraph (*a*) above, be examined at least once in every three months and be annealed at least once in every twelve months ; or (*c*) if used for classes of lifts other than those mentioned in (*a*) and (*b*) above, e.g., in connection with hand cranes, be examined at least once in every six months and be annealed at least once in every two years ; or (*d*) if used for holding down any crane or other lifting machinery upon a stage or platform should be examined as far as reasonably practicable, *in situ*, at least once in every three months, and be fully examined and annealed at least once in every twelve months, unless the nature of the operations preclude such examinations and annealing.

(12) A chain or other appliance should not be used for lifting its maximum working load if the wear at any part exceeds 10 per cent. of the nominal dimension of that part, or for lifting any load if it has been subjected to a severe shock or is deformed or otherwise injured.

(13) A chain or other appliance which has been altered or repaired should be re-tested before use.

STRENGTH OF IRON RINGS.

(1.)

Let a = the area in square inches of one side of the link A, which is known when the load to be lifted has been decided on.

Then $\frac{R}{d} \times a$ = area of iron in one side of the ring required in square inches.

The radius R being first decided upon, d, the diameter of the iron, must be assumed, and the area of the ring calculated by the above formula.

Having got the area of one side of the ring in this way, find the diameter to correspond to it.

Should the result be greater than the first assumed diameter of d, the ring is too weak; if the result is less than the first assumed diameter of d, the ring is too strong. A fresh size for d must in either case be adopted until the diameter corresponding to the area calculated by the formula equals the originally assumed diameter of d. This dimension will be the size required. (*Sutton.*)

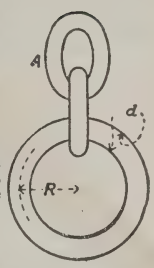


FIG. 417.

(2.)

Let d = diameter of iron of ring in inches; R = radius of ring in inches; d_1 = diameter of iron of chain in inches to lift the given load, the load being in tons.

Then

$$d = \sqrt[3]{R d_1^2}.$$

(See also (B) page 280.)

STRENGTH OF ROPES.*

The following rules are useful for roughly estimating the safe working loads for ropes and chains:—

Hemp Ropes.

C = Circumference of rope in inches; S = Safe working load in cwts.

$$S = C^2.$$

Steel Ropes.

C = Circumference of rope in inches; S = Safe working load in tons.

$$S = C^2 \div 2.$$

From a series of 368 tests of Manila rope in sizes from ½ in. to 4½ in. diameter carried out at the United States Bureau of Standards during the past three or four years it has been found that the average breaking strength of the rope is very closely represented by the formula

$$L = 5000\, d\,(d + 1).$$

TESTING MANILA ROPE.

This test has been adopted by the United States Bureau of Standards: Free the rope from oil, soak it for 20 seconds in a solution of bleaching powder acidulated with acetic acid, rinse in water and then in alcohol, and finally expose the fibres of the rope for a minute to the fumes of ammonia. Manila fibre turns russet brown, while all other rope fibres turn a cherry red.

PRESERVATION OF MANILA AND WIRE ROPES.

Manila ropes and slings and wire cables through neglect do not last as long as they should, because they are allowed to decay and rust, and apart from the waste of not preserving them they are a source of accidents. Ordinary ropes should be painted over with beeswax and resin, about equal parts of each, melted together, and applied with a paint brush. The rusting of wire cables and ropes is arrested by treating them with a mixture of tallow and oil, seven or eight pounds of melted tallow to a gallon of oil, lime being added, when the mixture is cold, until it is thick. The composition is then applied with a brush.

Hemp ropes may be preserved by dipping them when dry into a solution of 1 oz. of sulphate of copper dissolved in 2½ pints of water, and kept in this solution for four days, afterwards being dried; the rope should then be soaked in a solution of 5 ozs. of soap dissolved in 2½ pints of water, and again dried.

---

* See paper read by Mr. Daniel Adamson, M.I.Mech.E., before the Inst. of Mech. Engrs. 1912.

Experience has shown that wire ropes of compound construction, subjected to corrosion influences, are likely to deceive engineers as to the strength remaining in them. Where reduction of diameter or circumference of the rope has taken place, not accounted for by the evidence of wear, the part of the rope under examination should first be fully loaded and then relieved of the load. Any noticeable difference in circumference in these circumstances, and the slackening of the outside wires when the load is off, will indicate that internal corrosion has taken place. The extent of corrosion inside the strand can only be estimated by the slackness of the outside wires. The corrosion between the strands can be further examined by untwisting the rope or displaying the strands sufficiently with a marlin-spike.

SECTION VI

BEAMS — GIRDERS AND GIRDER BRIDGES — STRESSES — BENDING MOMENTS — INFLUENCE VALUES — MOMENT OF INERTIA — DEFLECTION — COLUMNS — STANCHIONS — RIVETING—LOADS ON HIGHWAY AND RAILWAY BRIDGES —STEEL ROOF FRAMING AND COVERINGS — BRITISH STANDARD SECTIONS

Contributed by Alexander Drew, M.I.Mech.E.
(Consulting Structural Engineer).

ALEX. FINDLAY & Co., Ltd.

Structural Engineers,

MOTHERWELL, SCOTLAND.

STEEL BRIDGEWORK,

BUILDINGS,

ROOFS, GIRDERS, Etc.

STEEL PITHEAD FRAMES.

STEEL WAGON UNDERFRAMES.

SPECIALITY:—STAMPED STEEL FLOOR TROUGHING

MARCONI INTERNATIONAL CODE.
A B C CODE, 4th and 5th Editions.

HEAD OFFICE - MOTHERWELL.

London Office: 9 Victoria Street, S.W. 1.

Telegrams: FINDLAY, MOTHERWELL. PARKNEUK, LONDON.

F. 287

SECTION VI

BEAMS — GIRDERS AND GIRDER BRIDGES—STRESSES — BENDING MOMENTS — INFLUENCE VALUES — MOMENT OF INERTIA — DEFLECTION — COLUMNS — STANCHIONS —RIVETING — LOADS ON HIGHWAY AND RAILWAY BRIDGES — STEEL ROOF FRAMING AND COVERINGS— BRITISH STANDARD SECTIONS.

Contributed by Alexander Drew, M.I.Mech.E.
(Consulting Structural Engineer).

STRESSES ON BEAMS AND GIRDERS

When designing framed structures, the external forces (or those acting *on* the structure, are always known or assumed, and from these, and the configuration or design of the structure, the internal stresses set up in the several portions of the structure can be determined.

The external forces may be assumed as acting transversely, i.e., at right angles to the beam, or girder, the supporting forces or reactions necessarily acting parallel to and in the opposite direction to the applied forces. Where any force acts other than transversely, it should be resolved into two component forces, one acting in the direction of the length of the beam (and causing compression or tension throughout the complete cross-section), and the other acting transversely ; to obtain the total stress at any section of the beam, the tension or compression due to the former component must be added algebraically to the stress from the transverse component.

The beam or girder, whatever its form may be, will tend to shear transversely, and to bend under any system of loading, and the values of these tendencies at any section are termed the 'shearing stress ' and the 'bending moment' values at that particular section.

At any vertical section throughout a beam the shearing stress to be resisted is the algebraic sum of all the vertical forces acting to the right or the left of the section chosen ; the forces being reckoned, say, as positive or negative as they act in an upward or downward direction.

For any series of transverse forces W_1, W_2, W_3, etc., acting to one side of the chosen vertical section, the general formula for the shearing stress is :—

$$S=\Sigma W=\pm W_1 \pm W_2 \pm W_3, \text{ etc.} \quad . \quad . \quad . \quad . \quad . \quad . \quad (1)$$

At any vertical section throughout a beam, the bending moment to be resisted is the algebraic sum of the moments of the several vertical forces acting to the right or left of the chosen section, these moments being reckoned, say, as positive or negative as they tend to turn the beam about the section line in a clock-way or anti-clock way.

Thus, for any series of transverse forces W_1, W_2, W_3, etc., acting at the several horizontal distances l_1, l_2, l_3, etc., from the chosen vertical section, the general formula for the bending moment is :—

$$M=\Sigma(Wl)=\pm W_1 l_1 \pm W_2 l_2 \pm W_3 l_3, \text{ etc.} \quad . \quad . \quad . \quad . \quad . \quad . \quad (2)$$

(In the case of uniformly distributed loads the value W is that for the total load under consideration, the horizontal distance being then measured from the chosen section to the centre of the load.)

Where the supports to a beam are not more than two in number, and the ends of the beam are free, the reactions or supporting loads can readily be found by the law of the lever. These values are then added to the list of external forces, and the shearing forces and bending moment values calculated from formulæ (1) and (2).

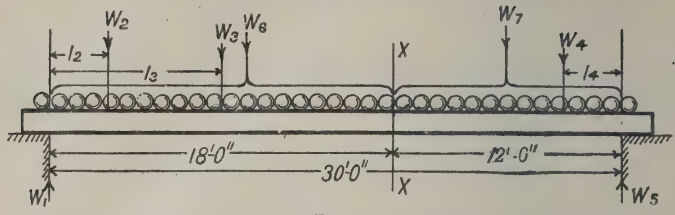


FIG. 1.

EXAMPLE:—A beam 30 ft. clear span between reactions carries three concentrated loads of 150 lbs. each, spaced as shown (fig. 1); weight of beam 60 lbs. per linear foot. l_2, $l_4 = 3'\text{-}0''$, $l_3 = 9'\text{-}0''$.

Reaction, left $= W_1$.	Reaction, right $= W_5$.
Beam $= 30 \times 60 \times \frac{1}{2} = 900$ lbs.	$= 30 \times 60 \times \frac{1}{2} = 900$ lbs.
Load W_2 $= 150 \times \frac{30-3}{30} = 135$,,	$= 150 \times \frac{3}{30} = 15$,,
,, W_3 $= 150 \times \frac{30-9}{30} = 105$,,	$= 150 \times \frac{9}{30} = 45$,,
,, W_4 $= 150 \times \frac{30-27}{30} = 15$,,	$= 150 \times \frac{30-3}{30} = 135$,,
Total $= 1{,}155$ lbs.	Total $= 1{,}095$ lbs.

Shearing stress at Section XX, fig. 1, calculated from left:—

Formula (1) $S = W_1 - (W_2 + W_3 + W_6)$
$= 1{,}155 - [150 + 150 + (60 \times 18)] = 224$ lbs.

Calculated from right $S = W_5 - (W_4 + W_7)$
$= 1{,}095 - [150 + (60 \times 12)] = 224$ lbs.

Bending moment at Section XX, fig. 1, calculated from left:—

Formula (2) $M = W_1 l_1 - (W_2 l_2 + W_3 l_3 + W_6 l_6)$
$= 1{,}155 \times 18 - [(150 \times 15) + (150 \times 9) + (18 \times 60 \times 9) = +7{,}470$ ft. lbs.

and from right, $M = -W_5 l_5 + (W_4 l_4 + W_7 l_7)$
$= -1{,}095 \times 12 + [(150 \times 9) + (60 \times 12 \times 6)] = -7{,}470$ ft. lbs.

Graphic diagrams for shear and bending moment values can be drawn so as to represent these values at all points throughout the length of a beam or girder, and such diagrams can always be used when setting out some preliminary or trial design, or checking a design; when carefully and accurately drawn they can be utilised directly in designing all ordinary structures, thus saving a large amount of time and labour which would be necessary if all required values were calculated arithmetically. Since these diagrams show the variations in stress throughout the beam, they can be further utilised to set out the sections or scantlings of the web and flange members, such as the thickness of the web or shear resisting members, and the cut-off in the flange plates or bending resisting members.

The tables of bending moments and shearing stresses given on pages 292 and 293 embrace all simple conditions for concentrated or uniformly distributed loads. Any complex loading occurring in practice can always be resolved into a series of simple loadings; so that diagrams for each simple loading can be drawn on one base line, and these diagrams combined to produce the required diagram for the complex loading, by adding together the several ordinates at any desired section. An example of this is given in fig. 2.

It should be noted that for any series of concentrated loads the bending moment line will form a polygon, the line changing its direction over each of the loaded points; at each of these points the shearing stress is suddenly changed in value, and the shearing stress diagram takes a stepped outline. For a uniformly distributed load, the bending moment line is always a parabolic curve, while the shearing stress changes by a regular gradation.

When beams or girders are of varying depth, the diagrams on pages 292 and 293, which are based on the condition of uniform depth, must be adjusted, for the following reason:—By formula (3) it will be obvious that the flange stresses are dependent on the depth, and, in fact, *vary inversely as this depth*; it is, therefore, necessary to alter the bending moment heights in the *inverse ratio to the alteration in depth of the beam.* Reducing the depth of a beam increases the bending moment value, and necessitates the increasing of the height of the bending moment diagram. Fig. 3 and brief explanation accompanying same will indicate how this adjustment can be readily carried out.

Where the shearing stress diagram is intended to be used in setting out the varying thickness of the web plate of a beam, the shear stress diagram must similarly be adjusted by altering its heights in *inverse ratio to the alteration in depth of the beam*; a shallower girder necessitates a thicker web, when the shear value remains unaltered (see fig. 3).

When these graphic diagrams on pages 292 and 293 are used in connection with panel or lattice girders, a modification is necessary, since the flange stress remains constant between the points of connection of flange to lattice bars; the diagram becomes stepped in outline, and may not be the same in both flanges (see fig. 4).

For the majority of the simple panel or lattice girders met with in practice, the various stresses can be most readily obtained by the reciprocal diagram method or by the method of moments.

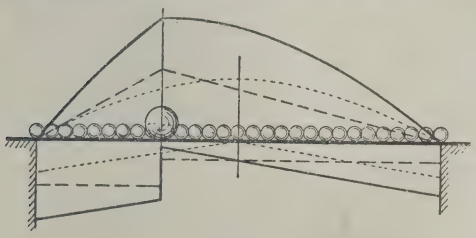


FIG. 2.

This example shows a free-ended beam supporting a uniformly distributed load (see Table 1, type (d)) the bending moment and shearing stress diagrams being indicated by dotted lines; and a single concentrated load (see Table 1, type (e)), the two diagrams being here indicated by broken lines. The combined diagrams for these two loads are shown by full lines, and are got by adding together the two heights at any section, to obtain the new height there.

In some cases, as for girders with fixed ends, negative moments may occur, and these must obviously be added algebraically to the positive moments to obtain the required new combined height.

This figure shows the effect on the bending moment and shearing stress diagrams due to a change in the depth of the girder, and a simple graphic method of indicating this effect on change. The left half of fig. 3 shows diagrams for a free-ended girder of uniform depth carrying a uniformly distributed load (Table 1, type (d)); in the right half of the figure the depth of the girder is reduced as indicated. From the centre to the first section line the depth is uniform, so that the bending moment line remains unaltered, but beyond this section the *height of diagram must be increased in proportion to the reduction in depth of the girder*. This increase can be obtained graphically thus: — Take the vertical section line at point *a*, and draw any line *ab*; on this line mark off *ab* equal to the centre depth of the girder, and *ac* equal to the reduced depth at this section; join *cd* (*d* being at the point of intersection of original diagram line and section line), and draw *be* parallel to *cd* and cutting the section line at *e*. It is obvious that the new vertical heights *ae* and *ad* are proportionate to the original depth and the reduced depth of the girder, or to the lengths *ab* and *ac*, and consequently the adjusted bending moment diagram must pass through the new point *e*. Repeating this operation at a number of other sections will give a series of new points through which the complete adjusted diagram can be drawn.

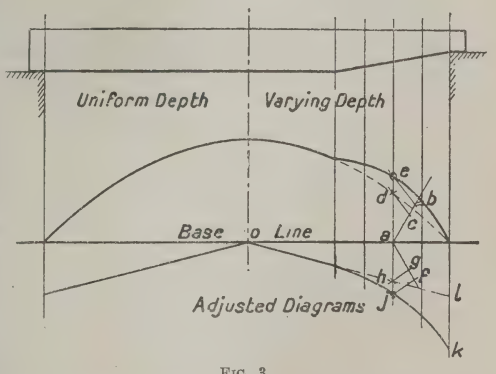


FIG. 3.

Similarly if the shear diagram is to be used for determining the thickness of web plate required, *its depth must first be increased in proportion to the reduction in depth of the girder*, since the sectional area of the web plate is directly proportionate to its depth. Graphically the same operation as above explained can be followed, marking off on the line *af* the lengths *aj* and *ag* equal to the centre and reduced depths of the girder, drawing the lines *gh* and *fj* parallel to one another, and deepening the diagram at this section line to the point *j*. The complete adjusted diagram would take the form of the curved line *ojk*.

In determining the stresses on the several members of a lattice girder such as that outlined

in fig. 4, it is assumed that at the junctions between the several members the connections will allow of free movement, as if pin jointed ; thus the flanges are assumed as hinged at each junction with the lattices, and no allowance is made for the stiffness due to their being actually formed in one piece.

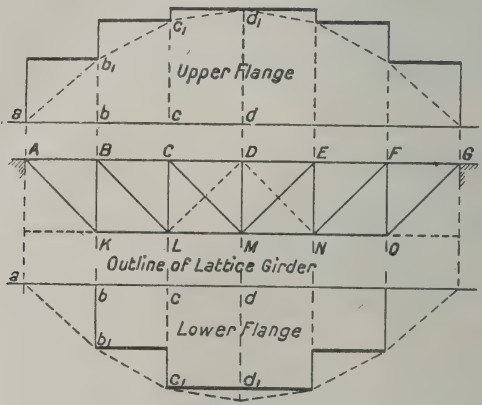


FIG. 4.

This girder rests on abutments at its ends AG, and is loaded at the points BCDEF, say by means of cross girders resting on and fixed to the top flange.

Considering first the load at centre point D, the upper flange does not support it, but the load passes downwards through the vertical strut DM, and is carried by the two inclined ties MC, ME. At the upper ends of these ties the tension due to load at D becomes resolved into compression stress between CE in top flange and compression stress in CL and EN, to which latter stresses must be added a further compression due to loads at points C and E. This transfer of stress is continued to the ends of the girder A and G, the final compression stresses at each end being equal to half the total load, and acting on the bearings at the abutments.

The dotted lines on upper and lower diagrams indicate the bending moment diagrams, and the full lines touching the same show the adjustments necessary owing to the breaking up of flanges and web into a series of members jointed together. The above referred to adjustment is made as follows :—The bending moment diagrams are divided up into sections to correspond with the number of bays in the girder, and as the stress in any section of top or bottom flange must be uniform from joint to joint, the several lines in the diagrams representing the stresses must be parallel to the base line of the diagram throughout the lengths between the joints or junctions between flanges and lattices, all variations in stress taking place suddenly, and being represented by vertical lines in diagram. The stress in the portion AB of upper flange is determined from the moment at point B, and is equal to *bb* ; at BC it is equal to *cc* ; and at centre portion CDE it is equal to *dd*. Similarly in the lower flange, since the girder is complete without any members extending from K or O to the abutments (as dotted lines), the first stressed bar in lower flange is KL, the amount of stress being determined from height *bb* ; the centre portion LMN having its stress determined by the height *cc* ; the stress in the two inclined members CM and EM being equal—on the assumption of equal loads at all upper flange joints—must balance one another, and consequently do not affect the lower flange stress at centre.

Influence Value Tables.

It has already been pointed out on page 288 that the severa lbending moment diagrams given on pages 292 and 293 may be combined to produce one diagram for a series of different loadings.

The same result may be readily obtained, particularly where the value at one particular section is desired, by calculating the bending moment value at that section for each loading, and adding the several values together. This process can be much simplified by the use of the tables on pages 294–296, where the value is given of the effect or influence at a series of other points or sections throughout the length of the beam, of a concentrated load applied at certain points. These values are for a load of unit value for a beam of unit length, and for a beam with free ends, with one end fixed, and with both ends fixed ; end reactions and inflection points are also noted. The brief notes accompanying the tables will explain their application.

INTERNAL STRESSES.

The tendency of a beam to shear, or to deflect, under any system of loading, is opposed by the resistance of the material of which the beam is composed to shearing, or to tension or compression.

It is the general practice to consider the flanges as resisting the bending moment stresses, the web providing the required shear resistance only.

Considering in the first instance the flange stresses, it is evident, if failure is not to occur, that the moment of resistance at all points in every beam or girder must oppose and balance the bending moment there; this resistance moment is the sum of the moments of all the fibre resistances reckoned about the neutral axis. In a beam of ordinary section the resisting fibres lie at various distances from the neutral axis (owing to the thickness of the flanges); but the simplest case is that of a girder with flanges whose thickness is small in comparison to the depth of the girder, so that without material error all the fibres of one flange may be considered to be practically at one distance from the neutral axis. Thus if d = vertical depth of girder between centres of gravity of the two flanges, M= bending moment due to the external loads, we have the general formula,

$$\pm P = \frac{M}{d} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (3)$$

P being the horizontal stress in either of the two flanges, being compressive stress in the one and tensile stress in the other.

Where the flanges of a girder are of considerable thickness in comparison with the depth of the girder, or the beam is of a non-symmetrical or irregular cross-section, the fibres of either flange cannot be considered as practically at one distance from the neutral axis, and it is necessary to take into account the varying distances of the fibres from the neutral axis, in the following manner:—

Under the action of any transverse bending, the intensity of the tensile and compressive stresses varies in different fibres of the beam, being greatest in the extreme fibres at the top and the bottom of the cross-section, while the fibre-stress will be zero at the 'neutral axis.'

Whatever may be the figure of the beam's cross-section, the neutral axis will be a horizontal line drawn through its centre of gravity; and the intensity of the stress in any fibre will be proportional to the vertical distance y of the fibre above or below the neutral axis.

If a denotes the sectional area of any thin layer of fibres lying at the height y above the axis, the total stress in that layer will be proportional to ay, and its moment about the neutral axis will be proportional to $ay \times y = ay^2$. The summation of the quantities ay^2 for the different layers is the so-called 'moment of inertia' of the beam, or

$$I = \Sigma (ay^2) \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (4)$$

When the bending moment, M, due to the external forces has been found in the manner already described, the problem will often be to find the maximum stress per square inch, f, in the extreme layer of fibres; and if y denotes the vertical distance of that layer from the neutral axis, we have

$$f = \frac{My}{I} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (5)$$

Where the section of the beam is symmetrical about the neutral axis, as in rolled joists, y=half the vertical depth of the beam between centres of gravity of the two flanges, or $\frac{1}{2}d$, and for such sections the above formula may be written,

$$f = \frac{Md}{2I} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (6)$$

In the case of cast iron, whose strength in compression is much greater than in tension, the tension flange should be made considerably larger than the compression flange. In rolled steel joists the two flanges are made of equal area, and an approximate value for the moment of resistance may be readily found by adding to the actual area of each flange $\frac{1}{6}$th of the area of the web, and then reckoning the depth d as the depth between the centres of gravity of the two flanges; then with A = area of one flange and $\frac{1}{6}$th web, and F = max. safe stress on steel,

$$\text{Approx. resistance moment} = A \times F \times d \quad . \quad . \quad . \quad . \quad (7)$$

When the thickness of the web is small in comparison with the width of the flanges, the extreme tensile stress, f, under the breaking load, as determined by formula (5) corresponds nearly with the ultimate tensile strength of the material; but should the girder have a very substantial web, or should the section be that of a solid rectangle, the calculated breaking load will generally be found to be lower than the actual breaking load. For such cases see formula on page 298.

TABLE I.—BENDING MOMENTS, SHEARING STRESSES, AND DEFLECTION OF STEEL GIRDERS. Graphic Diagrams and Formulæ.

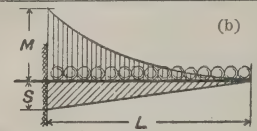
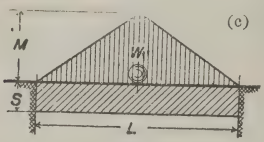
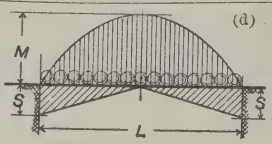
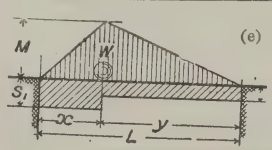
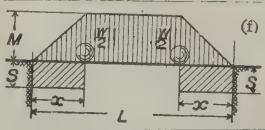
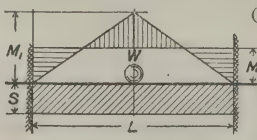
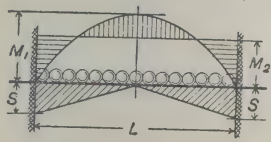
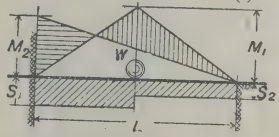
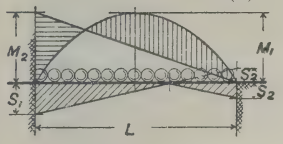
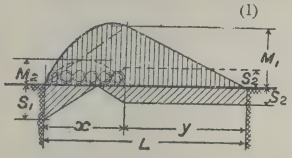
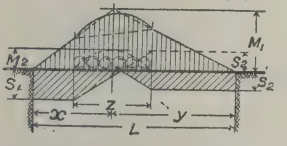
Type.	Formulæ. Bending Moment.	Shearing Stress.	Maximum Deflection.
(a) 	$M = WL$	$S = W$	$\frac{WL^3}{3EI}$
(b) 	$M = \frac{WL}{2}$	$S = W$	$\frac{WL^3}{8EI}$
(c) 	$M = \frac{WL}{4}$	$S = \frac{W}{2}$	$\frac{WL^3}{48EI}$
(d) 	$M = \frac{WL}{8}$	$S = \frac{W}{2}$	$\frac{WL^3}{76{\cdot}8EI}$
(e) 	$M = \frac{Wxy}{L}$	$S_1 = \frac{Wy}{L}$ $S_2 = \frac{Wx}{L}$	$\frac{Wxy(2L-x)}{27EIL} \times \sqrt{3x(2L-x)}$
(f) 	$M = \frac{Wx}{2}$	$S = \frac{W}{2}$	$\frac{Wx(3L^2-4x^2)}{48EI}$
(g) 	$M_1 = \frac{WL}{4}$ $M_2 = \frac{WL}{8}$	$S = \frac{W}{2}$	$\frac{WL^3}{192EI}$

TABLE II.—BENDING MOMENTS, SHEARING STRESSES, AND DEFLECTIONS—*contd.*

Type.	Formulæ. Bending Moment.	Shearing Stress.	Maximum Deflection.
(h) 	$M_1 = \frac{WL}{8}$ $M_2 = \frac{WM}{12}$	$S = \frac{W}{2}$	$\frac{WL^3}{384\,EI}$
(i) 	$M_1 = \frac{WL}{4}$ $M_2 = \frac{3}{16}\frac{W}{L}$	$S_1 = \frac{11}{16}W$ $S_2 = \frac{5}{16}W$	$\frac{WL^3}{107{\cdot}3\,EI}$ at a point ·5528 L from Fixed End
(k) 	$M_1 = \frac{WL}{8}$ $M_2 = \frac{WL}{8}$	$S_1 = \frac{5}{8}W$ $S_2 = \frac{3}{8}W$	$\frac{WL^3}{184{\cdot}6\,EI}$ at a point ·5785 L from Fixed End
(l) 	$M_1 = \frac{Wxy}{2L}$ $M_2 = \frac{Wx}{8}$	$S_1 = \frac{W\left(y+\frac{x}{2}\right)}{L}$ $S_2 = \frac{Wx}{2L}$	—
(m) 	$M_1 = \frac{Wxy}{L}$ $M_2 = \frac{Wz}{8}$	$S_1 = \frac{Wy}{L}$ $S_2 = \frac{Wx}{L}$	—

NOTE.—*All curves in these tables are parabolic curves.*

For an example of the combination of bending moments and shearing stress diagrams, and adjustment of same, see page 289.

TABLE III.—INFLUENCE VALUES.

BEAM FREE AT BOTH ENDS.

Load at Section.	Bending Moment Coefficient at Section noted.																			Left end reaction.	Right end reaction.
	·05	·10	·15	·20	·25	·30	·35	·40	·45	·50	·55	·60	·65	·70	·75	·80	·85	·90	·95		
·05	·047	·045	·042	·040	·037	·035	·032	·030	·027	·025	·022	·020	·017	·015	·013	·010	·007	·005	·002	·95	·05
·10	·045	·090	·085	·080	·075	·070	·065	·060	·055	·050	·045	·040	·035	·030	·025	·020	·015	·010	·005	·90	·10
·15	·042	·085	·127	·120	·112	·105	·097	·090	·082	·075	·067	·060	·052	·045	·037	·030	·022	·015	·007	·85	·15
·20	·040	·080	·120	·160	·150	·140	·130	·120	·110	·100	·090	·080	·070	·060	·050	·040	·030	·020	·010	·80	·20
·25	·037	·075	·112	·150	·187	·175	·162	·150	·137	·125	·112	·100	·087	·075	·062	·050	·037	·025	·112	·75	·25
·30	·035	·070	·105	·140	·175	·210	·195	·180	·165	·150	·135	·120	·105	·090	·075	·060	·045	·030	·015	·70	·30
·35	·032	·065	·097	·130	·162	·195	·227	·210	·192	·175	·157	·140	·122	·105	·087	·070	·052	·035	·017	·65	·35
·40	·030	·060	·090	·120	·150	·180	·210	·240	·220	·200	·180	·160	·140	·120	·100	·080	·060	·040	·020	·60	·40
·45	·027	·055	·087	·110	·137	·165	·192	·220	·247	·225	·202	·180	·157	·135	·112	·090	·067	·045	·022	·55	·45
·50	·025	·050	·075	·100	·125	·150	·175	·200	·225	·250	·225	·200	·175	·150	·125	·100	·075	·050	·025	·50	·50
·55	·022	·045	·067	·090	·112	·135	·157	·180	·202	·225	·247	·220	·192	·165	·137	·110	·082	·055	·027	·45	·55
·60	·020	·040	·060	·080	·100	·120	·140	·160	·180	·200	·220	·240	·210	·180	·150	·120	·090	·060	·030	·40	·60
·65	·017	·035	·052	·070	·087	·105	·122	·140	·157	·175	·192	·210	·227	·195	·162	·130	·097	·065	·032	·35	·65
·70	·015	·030	·045	·060	·075	·090	·105	·120	·135	·150	·165	·180	·195	·210	·175	·140	·105	·070	·035	·30	·70
·75	·012	·025	·037	·050	·062	·075	·087	·100	·112	·125	·137	·150	·162	·175	·187	·150	·112	·075	·037	·25	·75
·80	·010	·020	·030	·040	·050	·060	·070	·080	·090	·100	·110	·120	·130	·140	·150	·160	·120	·080	·040	·20	·80
·85	·007	·015	·022	·030	·037	·045	·052	·060	·067	·075	·082	·090	·097	·105	·112	·120	·127	·085	·042	·15	·85
·90	·005	·010	·015	·020	·025	·030	·035	·040	·045	·050	·055	·060	·065	·070	·075	·080	·085	·090	·045	·10	·90
·95	·002	·005	·007	·010	·013	·015	·017	·020	·022	·025	·027	·030	·032	·035	·037	·040	·042	·045	·047	·05	·95

These tables are calculated for a unit load, and for a girder of unit length ; the length of the girder is divided into 20 equal sections, and the bending moment values are given at each section point for unit load placed on each section line in turn. For any weight and any length of span it is necessary only to multiply the proper tabular coefficient by the number of units in the load and in the span to obtain the actual

TABLE IV.—INFLUENCE VALUES

BEAM FIXED AT RIGHT END.

Load at Section.	Bending Moment Coefficient at Sections noted—(To left of heavy broken line—positive moments; to right—negative).																			Left end reaction.	Right end reaction.	Inflection point.
	·05	·10	·15	·20	·25	·30	·35	·40	·45	·50	·55	·60	·65	·70	·75	·80	·85	·90	·95	1·00			
·05	·046	·042	·039	·035	·031	·027	·024	·020	·016	·012	·009	·005	·001	·002	·006	·010	·014	·017	·021	·025	·925	·075	·333
·10	·042	·085	·078	·070	·063	·055	·048	·040	·033	·025	·018	·010	·003	·005	·012	·020	·027	·034	·042	·049	·851	·149	·331
·15	·039	·078	·116	·105	·094	·083	·072	·061	·050	·038	·027	·016	·005	·007	018	·030	·041	·054	·066	·073	·777	·223	·328
·20	·035	·070	·106	·141	·126	·111	·096	·082	·067	·052	·037	·023	·008	·007	·022	·037	·051	·066	·081	·096	·704	·296	·324
·25	·032	·063	·095	·127	·158	·140	·122	·103	·085	·066	·048	·030	·011	·007	·025	·044	·062	·081	·099	·117	·633	·367	·319
·30	·028	·056	·085	·113	·141	·169	·147	·125	·103	·082	·060	·038	·016	·006	·027	·049	·071	·093	·114	·136	·564	·436	·313
·35	·025	·050	·075	·099	·124	·149	·174	·148	·123	·098	·073	·048	·025	·002	·028	·053	·078	·103	·128	·153	·497	·503	·305
·40	·022	·043	·065	·086	·108	·129	·151	·173	·144	·116	·087	·059	·031	·002	·026	·054	·083	·111	·140	·168	·432	·568	·296
·45	·018	·037	·055	·074	·092	·111	·129	·148	·167	·135	·104	·072	·041	·009	·020	·053	·085	·116	·148	·179	·371	·629	·285
·50	·016	·031	·047	·063	·078	·094	·109	·125	·141	·156	·122	·087	·053	·019	·016	·050	·084	·119	·153	·187	·313	·687	·273
·55	·013	·026	·039	·052	·065	·077	·090	·103	·116	·129	·142	·105	·068	·031	·006	·043	·080	·118	·155	·192	·258	·742	·258
·60	·010	·021	·031	·042	·052	·062	·073	·083	·094	·104	·114	·125	·085	·045	·006	·034	·074	·113	·152	·192	·208	·792	·243
·65	·008	·016	·024	·033	·041	·049	·057	·065	·073	·082	·090	·098	·106	·064	·022	·020	·062	·104	·146	·188	·162	·838	·224
·70	·006	·012	·018	·024	·030	·036	·042	·049	·055	·061	·067	·073	·079	·085	·041	·003	·047	·090	·135	·178	·122	·878	·203
·75	·004	·009	·013	·017	·021	·026	·030	·034	·039	·043	·047	·052	·056	·060	·064	·019	·027	·072	·118	·164	·086	·914	·179
·80	·003	·006	·008	·011	·014	·017	·020	·022	·025	·028	·031	·034	·036	·039	·042	·045	·003	·050	·097	·144	·056	·944	·153
·85	·002	·003	·005	·006	·008	·010	·011	·013	·014	·016	·018	·019	·021	·022	·024	·026	·027	·021	·070	·118	·032	·968	·122
·90	·001	·001	·002	·003	·004	·004	·005	·006	·006	·007	·008	·009	·009	·010	·011	·012	·012	·013	·036	·085	·015	985	·087
·95	·000	·000	·001	·001	·001	·01	·001	·001	·002	·002	·002	·002	·002	·003	·003	·003	·003	·003	·003	·046	·004	·996	·046

bending moment value desired. Thus for a load of 2 tons on a girder of 20 feet span the tabular values multiplied by 2 × 20 will give the actual values in foot-tons.

Taking the above load and span, and a free-ended girder, with load at ¼th span (or line ·25) the bending moment under the load and at centre of span will be respectively (·187 × 2 × 20) 7·48 and (·125 × 2 × 20) 5 foot-tons respectively. For a girder fixed at one end the corresponding values will be (·158 × 2 × 20) 6·32 and (·066 × 2 × 20) 2·64 foot-tons respectively.






TABLE V.—INFLUENCE VALUES.

BEAM FIXED AT BOTH ENDS.

Load at Section.	Bending Moment Coefficient at Sections noted (outside heavy broken lines—negative moment; inside—positive).																					Left end reaction.	Right end reaction.	Left Infl. pt.	Right Infl. pt.
	0	·05	·10	·15	·20	·25	·30	·35	·40	·45	·50	·55	·60	·65	·70	·75	·80	·85	·90	·95	1·00				
·05	·045	·004	·004	·004	·003	·003	·003	·002	·002	·002	·001	·001	·000	·000	·000	·001	·001	·001	·002	·002	·002	·993	·007	·045	·333
·10	·081	·032	·016	·015	·013	·012	·011	·009	·008	·006	·005	·004	·002	·001	·001	·002	·003	·005	·006	·007	·009	·972	·028	·083	·321
·15	·108	·061	·014	·032	·029	·026	·023	·020	·017	·014	·011	·008	·005	·002	·001	·004	·007	·010	·013	·016	·019	·940	·060	·115	·315
·20	·128	·083	·038	·006	·051	·046	·041	·036	·030	·025	·020	·015	·010	·004	·001	·006	·011	·016	·022	·027	·032	·896	·104	·143	·308
·25	·141	·098	·056	·013	·028	·070	·063	·055	·047	·039	·031	·023	·016	·008	·000	·008	·016	·023	·031	·039	·047	·845	·155	·166	·300
·30	·147	·108	·069	·030	·009	·049	·088	·077	·066	·056	·045	·034	·023	·013	·002	·009	·020	·031	·041	·052	·063	·784	·216	·186	·292
·35	·148	·112	·076	·040	·004	·032	·068	·103	·090	·075	·061	·047	·033	·019	·005	·009	·023	·037	·051	·066	·080	·718	·282	·206	·282
·40	·144	·111	·079	·047	·014	·018	·050	·083	·115	·098	·080	·063	·045	·027	·010	·008	·025	·043	·061	·078	·096	·648	·352	·222	·272
·45	·136	·107	·079	·050	·021	·007	·036	·065	·094	·122	·101	·080	·059	·037	·016	·005	·026	·048	·069	·090	·111	·575	·425	·237	·262
·50	·125	·100	·075	·050	·025	·000	·025	·050	·075	·100	·125	·100	·075	·050	·025	·000	·025	·050	·075	·100	·125	·500	·500	·250	·250
·55	·111	·090	·069	·048	·026	·005	·016	·037	·059	·080	·101	·122	·094	·065	·036	·007	·021	·050	·079	·107	·136	·425	·575	·262	·237
·60	·096	·078	·061	·043	·025	·008	·010	·027	·045	·063	·080	·098	·115	·083	·050	·018	·014	·047	·079	·111	·144	·352	·648	·272	·222
·65	·080	·066	·051	·037	·023	·009	·005	·019	·033	·047	·061	·075	·090	·103	·068	·032	·004	·040	·076	·112	·148	·282	·718	·282	·206
·70	·063	·052	·041	·031	·020	·009	·002	·013	·023	·034	·045	·056	·066	·077	·088	·049	·009	·030	·069	·108	·147	·216	·784	·292	·188
·75	·047	·039	·031	·023	·016	·008	·000	·008	·016	·023	·031	·039	·047	·055	·063	·070	·028	·013	·056	·098	·141	·155	·845	·300	·166
·80	·032	·027	·022	·016	·011	·006	·001	·004	·010	·015	·020	·025	·030	·035	·041	·046	·051	·006	·038	·083	·128	·104	·896	·308	·143
·85	·019	·016	·013	·010	·007	·004	·001	·002	·005	·008	·011	·014	·017	·020	·023	·026	·029	·032	·014	·061	·108	·060	·940	·315	·115
·90	·009	·007	·006	·005	·003	·002	·001	·001	·002	·004	·005	·006	·008	·009	·011	·012	·013	·015	·016	·032	·081	·028	·972	·321	·083
·95	·002	·002	·002	·001	·001	·001	·000	·000	·000	·001	·001	·002	·002	·002	·003	·003	·003	·004	·004	·004	·045	·007	·993	·333	·045

In some cases the values are only approximate, since the tabular values give 3 decimal figures only; for example, in the first calculation the full tabular value would be ·1875, and the accurate result 7·5 foot-tons. The values for a load distributed over a part or the whole of the span may be obtained approximately by assuming the total load as formed of a number of equal loads placed at adjoining section points; the result here would generally be near enough to the true value for all practical purposes.

TABLE VI.—MOMENTS OF INERTIA, SECTIONAL AREA, ETC., FOR VARIOUS SIMPLE SECTIONS.

Section.	Area.	Neutral Axis.	Moment of Inertia.
 (a)	$\frac{\pi D^2}{4}$ $\pi = 3{\cdot}1416$	Through centre	$\frac{\pi D^4}{64}$
 (b)	$\frac{\pi(D^2 - d^2)}{4}$	Through centre	$\frac{\pi (D^4 - d^4)}{64}$
 (c)	D^2	Through centre	$\frac{D^4}{12}$
 (d)	D^2	Through centre $y = \frac{D}{1{\cdot}4142}$	$\frac{D^4}{12}$
 (e)	BD	Through centre	$\frac{BD^3}{12}$
 (f)	$BD - bd$	Through centre, parallel to B Through centre, parallel to D	$\frac{BD^3 - bd^3}{12}$ $\frac{DB^3 - db^3}{12}$
 (g)	$\frac{BD}{2}$	$y = \frac{2}{3}D$ Through Base Line, through Apex, and parallel to Base	$\frac{BD^3}{36}$ $\frac{BD^3}{4}$ $\frac{BD^3}{12}$
 (h)	$B(D - d)$	Through centre and parallel to B	$\frac{B(D^3 - d^3)}{12}$

The value for the moment of inertia for the standard steel sections of rolled joists, angles, tees, etc., can be got from the section books issued by many of the rolling-mill companies and constructional engineering contracting firms.

The value for the moment of inertia about any other axis parallel to and at a distance y from the neutral axis $= I$ for neutral axis $+$ (area $\times y^2$) . . . . . (8)

The value for the radius of gyration (see page 299, etc.) is $R = \sqrt{\frac{I}{\text{Area}}}$. (9)

Solid Rectangular Beams.

Where the strength can be shown to vary directly as the breadth of the beam and as the square of the depth, it is better, for the reason given above, to calculate the strength by means of coefficients derived from direct experiments in cross-breaking ; thus

$$\text{Breaking load in tons} = \frac{\text{Breadth in inches} \times \text{depth in inches}^2}{\text{Span in inches}} \times c \times k \quad . \quad . \quad (10)$$

TABLE VII.

Material	Coeff. c.	Ends of Beams.	Coeff. k.
Mild Steel	3·50	One fixed, other end loaded	1
Cast Iron	2·30	,, ,, load distributed	2
Fir (Spruce)	0·60	Both supported, load in centre	4
English Oak	0·75	,, ,, ,, distributed	8
Red Pine	0·65	Both fixed, ,, in centre	6
Yellow Pine	0·50	,, ,, ,, distributed	12
Pitch Pine	0·75		

The factor of safety for steel may be $\frac{1}{4}$th to $\frac{1}{3}$th breaking load ; for the other materials it may vary between $\frac{1}{5}$th and $\frac{1}{7}$th breaking load. If the beam carries a heavy live load the safe load should be further reduced.

Factor of Safety.

The safe working stress is usually taken as some fraction of the ultimate strength of the material ; it requires careful consideration and much experience to decide on the correct value for this fraction. This consideration is further complicated when any portion of the total load is such that it is applied and removed, since these conditions may produce a considerable dynamic effect. Another point which must be kept in view is that the maximum stress, however produced, must be well within the elastic limit of the material, so as to avoid any permanent distortion or set. For mild steel such as is used in general structural work, the ultimate strength will vary from 27 to 32 tons per square inch, with an elastic limit of 14 tons per square inch and upwards : the maximum stress should therefore not exceed 9 to 10 tons per square inch, or say a factor of safety of 3 with respect to the ultimate strength.

Repeated or fluctuating loads.—These can be classed under two heads, first where the load is such as will produce stresses in the structure varying from zero to a maximum ; and second where the load will produce stresses varying from compression to an equal tension.

Wöhler's law of stresses for repeated loading and reversed loading may be briefly indicated thus :—

Class 1.—Static or dead loading	ratio	3
,, 2.—Loads producing stresses varying from zero to maximum . .	,,	2
,, 3.— ,, ,, ,, ,, ,, comp. to equal tension .	,,	1

As the load carried by any structure is always composed partly of dead and partly of live or fluctuating loads, difficulties arise in determining the stresses in the several members of the structure, for the following reasons. The weight of the structure itself provides a necessary dead load, irrespective of any other additional dead load (for example, water flowing into a tank, although actually a live load, is so steadily added to the structure as to be *practically* a dead load), and it is obvious that the dynamic resistance of this dead load must more or less reduce the actual dynamic effect on the structure of any live load. A simple formula has been suggested by Mr. E. H. Stone, M.Inst.C.E., which he calls his ' Range ' formula, and which takes into account the *immediate effect* (due to sudden loading, as when a train passes over a bridge), and the *cumulative effect* (that produced in time by repeated loading and unloading). The former effect, as compared with that due to the same amount of dead load, was deduced from experiments, while the second effect was deduced from Wöhler's experiments : these two effects were then combined in a rational manner to give the total effect of the moving load, as compared with that of an equivalent amount of dead load. Starting with a maximum safe stress for *dead loads alone* of 9 tons per sq. in. for mild steel, Mr. Stone deduced the following formula for obtaining the equivalent dead load stresses for varying percentages of life to dead loads, which would produce an actual maximum stress of 9 tons per sq. in. (p = percentage of live to dead load).

$$\text{Safe working stress} = 9 - (5 \times p) \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (11)$$

The following table is based on this formula :—

TABLE VIII.—DEAD LOAD EQUIVALENTS FOR COMBINED LIVE AND DEAD LOADS.

p	E.D.L.	p	E.D.L.	p	E.D.L.
100	4·00	65	6·89	30	8·55
95	4·49	60	7·20	25	8·69
90	4·95	55	7·49	20	8·80
85	5·39	50	7·75	15	8·89
80	5·80	45	7·99	10	8·95
75	6·19	40	8·20	5	8·99
70	6·55	35	8·39	0	9·00

p = percentage of live load in total load. E.D.L. = equivalent dead load stress.

Deflection of Beams.

Deflection formulæ for various arrangements of loading are given in tables 1 and 2, pages 292 and 293. For structural steel the value of E (the modulus of elasticity) may be taken at 30,000,000 lbs. and the value of W must then be expressed in lbs. also. For the value of E for other materials see page 263.

COLUMNS AND STRUTS.

The strength of columns or struts depend not only on the cross-sectional area of the member, but also on its height or length, and on the condition of fixture of the ends. As the ratio of the length to the least diameter increases, the column becomes more *slim* or liable to fail by bending under its load ; such a ratio might thus be called the *ratio of stiffness or slenderness* of a column, and so that this ratio may be used as a means of comparing the strength or stiffness for columns of varying cross-section, the value for the radius of gyration (see p. 297) of the cross-section should be adopted instead of the diameter, since it is obvious, for example, that the diameters of a square and a round column may be the same, but the stiffness would be quite different.

The ends of columns are divided into three classes or conditions of fixture :—

1. Both ends hinged, or free to move.
2. One end hinged and one end fixed.
3. Both ends fixed.

The limiting values for $\frac{L}{R}$ in the tables on pp. 300, 301 have been taken as 200, and this should very rarely be exceeded, owing to the practical difficulties in producing a perfectly straight long column, and one free from internal stresses ; and also of erecting such a column on rigid foundations, and ensuring a truly central loading.

The formulæ adopted in calculating tables are given under the same.

Eccentric Loads.

Where the load is not applied centrally, as where a beam rests on a bracket attached to a column, considerably increased stresses may arise through the bending tendency introduced.

The equivalent concentric load which would produce the same maximum stress as that due to the actual eccentric load may be found as follows :—

$$\text{EQUIVALENT CONCENTRIC LOAD} = W\left(1 + \frac{xy}{R^2}\right) \quad . \quad . \quad . \quad . \quad . \quad (12)$$

where W = Eccentric load.

x = Distance from neutral axis of stanchion to point of application of load = eccentricity

y = Distance from neutral axis to edge of stanchion nearest load.

R = Radius of gyration of cross section of stanchion about neutral axis at right angles to line of eccentricity

TABLE IX.—MILD STEEL STANCHIONS.

Maximum Safe Stresses per sq. in. of Section. (London Building Act Amendment, 1909.)

L/R	A	B	C	L/R	A	B	C	L/R	A	B	C
2	4·50	5·50	6·50	72	2·70	3·70	4·70	142	—	*1·90*	2·95
4	4·40	5·40	6·40	74	2·65	3·65	4·65	144	—	*1·80*	2·90
6	4·35	5·35	6·35	76	2·60	3·60	4·60	146	—	*1·70*	2·85
8	4·30	5·30	6·30	78	2·55	3·55	4·55	148	—	*1·60*	2·80
10	4·25	5·25	6·25	80	2·50	3·50	4·50	150	—	*1·50*	2·75
12	4·20	5·20	6·20	82	2·45	3·45	4·45	152	—	*1·40*	2·70
14	4·15	5·15	6·15	84	2·40	3·40	4·40	154	—	*1·30*	2·65
16	4·10	5·10	6·10	86	2·35	3·35	4·35	156	—	*1·20*	2·60
18	4·05	5·05	6·05	88	2·30	3·30	4·30	158	—	*1·10*	2·55
20	4·00	5·00	6·00	90	2·25	3·25	4·25	160	—	*1·00*	2·50
22	3·95	4·95	5·95	92	2·20	3·20	4·20	162	—	*·90*	*2·40*
24	3·90	4·90	5·90	94	2·15	3·15	4·15	164	—	*·80*	*2·30*
26	3·85	4·85	5·85	96	2·10	3·10	4·10	166	—	*·70*	*2·20*
28	3·80	4·80	5·80	98	2·05	3·05	4·05	168	—	*·60*	*2·10*
30	3·75	4·75	5·75	100	2·00	3·00	4·00	170	—	*·50*	*2·00*
32	3·70	4·70	5·70	102	*1·90*	2·95	3·95	172	—	*·40*	*1·90*
34	3·65	4·65	5·65	104	*1·80*	2·90	3·90	174	—	*·30*	*1·80*
36	3·60	4·60	5·60	106	*1·70*	2·85	3·85	176	—	*·20*	*1·70*
38	3·55	4·55	5·55	108	*1·60*	2·80	3·80	178	—	*·10*	*1·60*
40	3·50	4·50	5·50	110	*1·50*	2·75	3·75	180	—	*·00*	*1·50*
42	3·45	4·45	5·45	112	*1·40*	2·70	3·70	182	—	—	*1·40*
44	3·40	4·40	5·40	114	*1·30*	2·65	3·65	184	—	—	*1·30*
46	3·35	4·35	5·35	116	*1·20*	2·60	3·60	186	—	—	*1·20*
48	3·30	4·30	5·30	118	*1·10*	2·55	3·55	188	—	—	*1·10*
50	3·25	4·25	5·25	120	*1·00*	2·50	3·50	190	—	—	*1·00*
52	3·20	4·20	5·20	122	*·90*	2·45	3·45	192	—	—	*·90*
54	3·15	4·15	5·15	124	*·80*	2·40	3·40	194	—	—	*·80*
56	3·10	4·10	5·10	126	*·70*	2·35	3·35	196	—	—	*·70*
58	3·05	4·05	5·05	128	*·60*	2·30	3·30	198	—	—	*·60*
60	3·00	4·00	5·00	130	*·50*	2·25	3·25	200	—	—	*·50*
62	2·95	3·95	4·95	132	*·40*	2·20	3·20				
64	2·90	3·90	4·90	134	*·30*	2·15	3·15				
66	2·85	3·85	4·85	136	*·20*	2·10	3·10				
68	2·80	3·80	4·80	138	*·10*	2·05	3·05				
70	2·75	3·75	4·75	140	*·00*	2·00	3·00				

A = Both ends hinged.
B = One end hinged, one end fixed.
C = Both ends fixed.

The above table gives an extension of the empirical working or safe stress values adopted by the London County Council, and embodied in their (General Powers) Act 1909. This table should be used for all districts where the L.C.C. Building Regulations are enforced.

The limit of height of a stanchion should, as a rule, not exceed the lesser of the two following values :—

1. 160 times the least radius of gyration.

2. 40 times the least overall depth or breadth of the section.

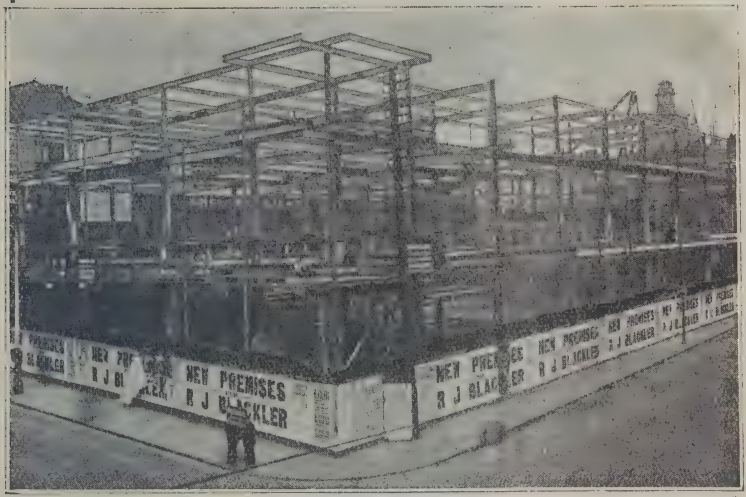
The economical ratio of slenderness for the three types of stanchions, namely the point beyond which the section increases at a greater rate than below this point, occurs at 100, 140, and 160. Below these values the rate varies one ton per sq. in. for each variation of 40 in the $\frac{L}{R}$ values ; above these values the rate of change is two tons, being double

E. C. & J. KEAY

LIMITED,

Engineers and Ironfounders,

James Bridge Works, Darlaston.



STEEL SKELETON-FRAMED BUILDING.

Head Office :

Princes Chambers,
Corporation St.,
BIRMINGHAM.

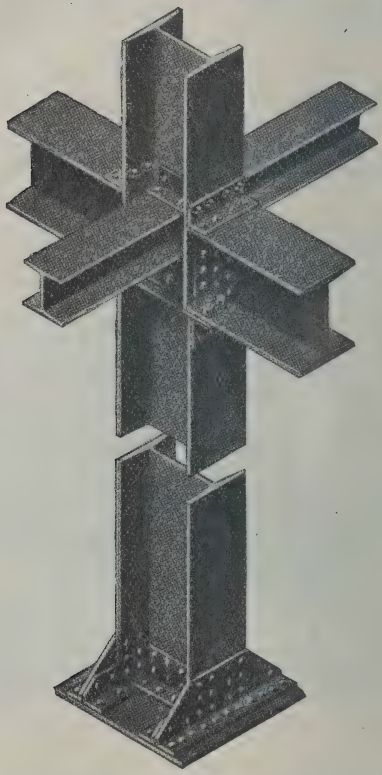
Contractors to :

H.M. ADMIRALTY,
H.M. WAR OFFICE,
H.M. OFFICE OF WORKS.

Telegrams: 'KEAY, BIRMINGHAM.'

BROAD FLANGE BEAMS

(GREY PROCESS).



See page 314.

BROAD FLANGE BEAMS (Grey Process)

save time money and weight they make the best stanchions: they supplant riveted girders. Sizes range from $5\frac{1}{2}'' \times 5\frac{1}{2}''$ to $40'' \times 12''$.

Architects and Engineers are invited to apply for a free copy of Handbook No. 17 for full particulars.

Telephone: LONDON WALL 3552 (2 lines)

R. A. SKELTON & CO.

Contracting Engineers,

Telegrams 'SKELTONICA PHONE LONDON.'

MOORGATE STATION CHAMBERS, MOORFIELDS, LONDON, E.C. 2.

F. 301

TABLE X.—MILD STEEL STANCHIONS.

Maximum Safe Stresses per sq. in. of Section. (Prof. Claxton Fidler's Formulæ.)

L/R	A	B	C	L/R	A	B	C	L/R	A	B	C
2	6·50	6·50	6·50	72	3·72	4·55	5·39	142	1·33	2·17	3·02
4	6·49	6·49	6·50	74	3·61	4·47	5·33	144	1·30	2·13	2·97
6	6·48	6·48	6·49	76	3·50	4·38	5·26	146	1·26	2·08	2·91
8	6·47	6·48	6·49	78	3·39	4·30	5·20	148	1·23	2·04	2·86
10	6·44	6·46	6·48	80	3·28	4·20	5·13	150	1·20	2·00	2·80
12	6·41	6·44	6·47	82	3·18	4·12	5·07	152	1·17	1·96	2·75
14	6·39	6·42	6·46	84	3·08	4·04	5·00	154	1·15	1·92	2·70
16	6·35	6·40	6·45	86	2·99	3·91	4·93	156	1·12	1·88	2·65
18	6·31	6·37	6·43	88	2·89	3·87	4·86	158	1·10	1·85	2·60
20	6·27	6·35	6·42	90	2·80	3·79	4·79	160	1·07	1·81	2·55
22	6·22	6·31	6·40	92	2·72	3·72	4·72	162	1·05	1·77	2·50
24	6·16	6·27	6·38	94	2·63	3·63	4·65	164	1·02	1·74	2·46
26	6·10	6·23	6·36	96	2·55	3·56	4·57	166	1·00	1·70	2·41
28	6·04	6·19	6·34	98	2·47	3·48	4·50	168	·98	1·67	2·37
30	5·97	6·14	6·31	100	2·40	3·42	4·43	170	·96	1·64	2·33
32	5·90	6·09	6·29	102	2·32	3·34	4·36	172	·94	1·61	2·28
34	5·81	6·03	6·26	104	2·26	3·27	4·28	174	·92	1·58	2·24
36	5·73	5·98	6·23	106	2·19	3·20	4·21	176	·90	1·55	2·20
38	5·64	5·92	6·20	108	2·12	3·13	4·14	178	·88	1·52	2·16
40	5·55	5·85	6·16	110	2·06	3·06	4·07	180	·86	1·49	2·12
42	5·45	5·79	6·13	112	2·00	3·00	4·00	182	·84	1·46	2·08
44	5·35	5·72	6·09	114	1·94	2·93	3·93	184	·82	1·43	2·05
46	5·24	5·64	6·05	116	1·89	2·87	3·86	186	·81	1·41	2·01
48	5·13	5·57	6·01	118	1·83	2·80	3·79	188	·79	1·38	1·98
50	5·02	5·50	5·97	120	1·78	2·75	3·72	190	·78	1·36	1·94
52	4·91	5·41	5·92	122	1·73	2·69	3·65	192	·76	1·33	1·91
54	4·79	5·33	5·88	124	1·69	2·63	3·58	194	·75	1·31	1·88
56	4·67	5·25	5·83	126	1·64	2·58	3·52	196	·73	1·28	1·84
58	4·55	5·16	5·78	128	1·60	2·52	3·45	198	·72	1·26	1·81
60	4·43	5·08	5·73	130	1·56	2·47	3·39	200	·70	1·24	1·78
62	4·31	5·00	5·68	132	1·51	2·42	3·32				
64	4·19	4·90	5·62	134	1·47	2·35	3·26				
66	4·07	4·82	5·57	136	1·44	2·32	3·20				
68	3·95	4·73	5·51	138	1·40	2·27	3·14				
70	3·83	4·64	5·45	140	1·36	2·22	3·08				

A = Both ends hinged.
B = One end hinged, one end fixed.
C = Both ends fixed.

The following are the formulæ used in calculating the above table:—

$$\text{Breaking strength in tons per square inch} = \frac{F + f - \sqrt{(F+f)^2 - 2{\cdot}4\,Ff}}{1{\cdot}2} \quad . \quad . \quad (13)$$

= Ultimate compressive strength = 26 tons per square inch in this table.

$$F = \begin{cases} E\pi^2 \times \left(\frac{R}{{\cdot}6L}\right)^2 \text{ for both ends fixed.} \\ E\pi^2 \times \left(\frac{R}{{\cdot}8L}\right)^2 \text{ for one end hinged, one end fixed.} \\ E\pi^2 \times \left(\frac{R}{L}\right)^2 \text{ for both ends hinged,} \end{cases}$$

E = Modulus of elasticity = 12,000 tons.
π = 3·1416.
R = Minimum radius of gyration of cross section.
L = Height of stanchion in inches.

TABLE XI.—CAST-IRON COLUMNS.

Maximum Safe Stresses per sq. in. of Section. (London Building Act Amendment, 1909.)

L/R	Hinged ends.	Hinged and fixed.	Fixed ends.	L/R	Hinged ends.	Hinged and fixed.	Fixed ends.	L/R	Hinged ends.	Hinged and fixed.	Fixed ends.
2	4·4	4·9	5·4	32	2·9	3·4	3·9	62	1·4	1·9	2·4
4	4·3	4·8	5·3	34	2·8	3·3	3·8	64	1·3	1·8	2·3
6	4·2	4·7	5·2	36	2·7	3·2	3·7	66	1·2	1·7	2·2
8	4·1	4·6	5·1	38	2·6	3·1	3·6	68	1·1	1·6	2·1
10	4·0	4·5	5·0	40	2·5	3·0	3·5	70	1·0	1·5	2·0
12	3·9	4·4	4·9	42	2·4	2·9	3·4	72	0·9	1·4	1·9
14	3·8	4·3	4·8	44	2·3	2·8	3·3	74	0·8	1·3	1·8
16	3·7	4·2	4·7	46	2·2	2·7	3·2	76	0·7	1·2	1·7
18	3·6	4·1	4·6	48	2·1	2·6	3·1	78	0·6	1·1	1·6
20	3·5	4·0	4·5	50	2·0	2·5	3·0	80	0·5	1·0	1·5
22	3·4	3·9	4·4	52	1·9	2·4	2·9	82	0·4	0·9	1·4
24	3·3	3·8	4·3	54	1·8	2·3	2·8	84	0·3	0·8	1·3
26	3·2	3·7	4·2	56	1·7	2·2	2·7	86	0·2	0·7	1·2
28	3·1	3·6	4·1	58	1·6	2·1	2·6	88	0·1	0·6	1·1
30	3·0	3·5	4·0	60	1·5	2·0	2·5	90	0·0	0·5	1·0

Riveted Joints in Girderwork.

The riveted joint of a tension-member may fail either by the tearing of the plate, or the shearing of the rivets, or in some special cases by the crippling of the bearing area between plate and shank of rivet.

The tearing of the plates is resisted by the tensile strength of the plate per square inch of area taken over the *net effective section* between rivet holes. When the assumed line of fracture is at right angles to the direction of the pull, the sectional area measured on this line between the rivet-holes is the net effective section. But when the line of fracture may follow a zigzag or inclined direction, the effective sectional area should be taken at about three-fourths of the area measured on such a line. The fraction is not universally applicable, but will generally meet the case of ordinary zigzag riveting.

The shearing of the rivets is resisted by the shearing strength of the rivet-material per square inch of area taken over the effective section of the rivets engaged. Assuming all the rivets to take an equal share in the work, the number of rivets engaged in resisting the total pull upon the tie will be the whole number of rivets in the case of a lap-joint such as that shown in figs. 7 and 8 ; while in the case of a butt joint, such as No. 2 of fig. 9, it will consist only of the rivets employed on either side of the joint. But in any large assemblage of rivets allowance should be made for unequal distribution of the work when calculating the number of rivets required for a joint.

For rivets in ' single shear,' as in the case of lap joints, and in butt joints covered by a single cover-plate, the effective section of each rivet is simply the area of its cross-section. But wherever practicable double cover-plates should be employed, placing the rivets in ' double shear,' and in this case the effective section of each rivet should be reckoned at $1\frac{3}{4}$ times the sectional area of the rivet.

In wrought-iron work the shearing strength of good rivet iron per square inch is fully equal to the tensile strength of the plates ; and the effective rivet section is often made equal to the effective plate section, an allowance of 10 per cent. being sometimes added in the case of large joints.

The shearing strength of steel rivets may be taken at 24 tons per square inch, while the plates have often a tensile strength of 26 to 32 tons ; and the rivet section will generally require to be somewhat greater than the plate section.

The ' efficiency ' of a riveted joint is the ratio between its strength at the weakest part and the strength of the unperforated plate.

RIVETING.

Rivets.

The heads (fig. 5) are usually either snap or pan. Snap heads are used generally in machine riveting. The points are countersunk, conical, or snap ; the former are largely employed in iron shipbuilding, where a flush surface is required, the latter in ordinary boiler and bridge work. Conical, also called *staff* or *hammered*, points are chiefly used where the restricted space only allows of hammering.

The following figures give ordinary proportions of rivet heads in terms of diameter of shank.

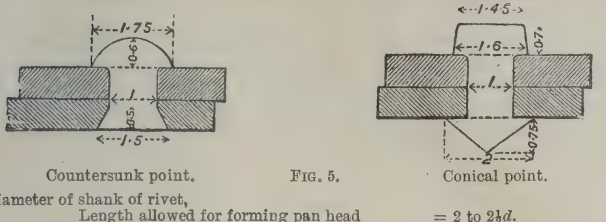


Fig. 5.

If d = diameter of shank of rivet,

Length allowed for forming pan head = 2 to $2\frac{1}{2}d$.
" " " snap head = $1\frac{1}{2}d$.
" " " countersunk head = $1d$.
" " " conical head = $1\frac{1}{2}d$.

When a conical form is given under the rivet head an additional length of about $\frac{1}{4}''$ is usually allowed in making the rivet.

Diameter of Rivets or Rivet Holes.

d = diameter of rivet hole ; t = thickness of thickest plate.

Fairbairn's Rule, commonly used { When t is less than $\frac{1}{2}''$, $d = 2t$. / When t is equal to, or greater than, $\frac{1}{2}''$, $d = 1\frac{1}{4}t$.

With rivets so proportioned the total number in single shear, such as lap, single cover and grouped, joints will, when the resistance to shearing is taken at 4 tons and bearing at 5 tons, depend on the number required for shearing, in $\frac{1}{2}''$ plates and over $\frac{1}{2}''$, and for bearing with plates under $\frac{1}{2}''$ thick.

When more than 2 plates, besides the covers, are riveted together, as in flanges of girders, some engineers add $\frac{1}{16}''$ to d for each extra plate.

Unwin's Rule for Rivets.—$d = 1{\cdot}2\sqrt{t}$.

Rivets of more than $1\frac{1}{8}''$ diameter are rarely used.

The rivet holes are made about $\frac{1}{16}''$ larger than the rivets, to allow for expansion when heated. For ordinary work the proportions of diameter of punch to that of bolster hole in the die varies from 1 : 1·15 to 1 : 1·2 ; the greater the difference, the less cleanly cut will the burr be, but the metal round the hole will be stronger, being less reduced and more compressed. The hole when punched is slightly conical.

It is hardly practicable to temper a punch so as to punch a great number of holes if it is of less diameter than the thickness of the plate, or even with a diameter of equal thickness. Punched holes should never be less than $1\frac{1}{2}$ diameter apart or from edge of plate. For drilled holes the limit may be 1 diameter.

Pitch of rivets = distance from centre to centre of rivet. *Longitudinal pitch* = pitch in direction of stress. *Transverse pitch* = pitch at right angles to stress. *Zigzag pitch* = minimum pitch when placed zigzag ; this should slightly exceed the transverse pitch. *A pitch line* is a straight line running through the centres of a longitudinal or transverse row.

Minimum pitch = $2\frac{1}{2}$ diameters for punched or 2 for drilled holes.

Maximum longitudinal pitch in compression plates = 12 times thickness of weakest outside plate.

BRIDGE RIVETS.

In plate girders the plates are from $\frac{1}{2}''$ to $\frac{1}{2}''$ thick, with rivets $\frac{3}{4}''$ to $1''$ diameter ; usually $4''$ pitch in the top of the girder, $5''$ in the bottom.

Strength of Rivets and Plates.

Mean tensile breaking strength of best rivet iron, such as BBB Staffordshire, best Yorkshire or Lowmoor (and the best only should be used), is from 26·33 tons per square inch (Fairbairn) to 25·98 tons per square inch (Kirkaldy); whilst the contraction of fractured area should not be less than 40 per cent.

Forge Tests for Rivets.—When *cold* they should stand being hammered double, or being upset endways, a $\frac{3}{4}''$ rivet $2\frac{1}{2}''$ long being hammered down to a cylinder $1''$ long, without any sign of cracking. A rivet ready heated for use should now and then be taken, allowed to cool, and treated as above, to see if they are being overheated. Much overheating is detected by the burnt, scaly appearance of the surface of shank ; $\frac{3}{4}''$ or even $1''$ rivets should not be over 20 minutes in the fire. When *hot* the heads should stand hammering down to less than $\frac{1}{8}''$ thick without cracking at edges ; and the stalks should stand having a punch, even more than their own diameter, driven through them without cracking round the hole.

The above tests are equally applicable to steel rivets.

Careful punching does not injure soft plates, but weakens hard or steely iron plates from 15 to 30 per cent.

Sharp edges of drilled holes reduce the shearing resistance of rivets, but rounding the edges of the holes increases resistance of rivet.

Drilled rivet holes reduce the strength of a plate by 1½ per cent., and punched holes about 9 per cent. Punching and counter-sinking reduce the strength 4 per cent., but if the holes are punched, reamered, and countersunk, there is little reduction in the strength of the plate. Comparative tests of high tensile plates, connected by iron and by high tensile rivets, show that ½-in. iron rivets worked cold in single shear have a shearing strength of 3·6 tons compared with 6·6 in the case of high-tensile steel worked cold, and 9·2 in case of the same steel worked hot. For double shear the same figures are 6·6, 13·1, and 18·4. Experiments show that the bearing pressure with high tensile steel rivets does not exceed 60 lbs. per square inch.

(*Sir P. Watts.*)

Riveting.

Riveting gangs consist of a holder-up, two riveters, and one or two boys for heating and supplying rivets. Rivets are heated in a portable hearth or a reverberatory furnace. Before inserting the rivet the plates round the hole should be hammered into positive contact, and the holes ascertained to be concentric.

Riveting hammers vary from 2 to 7 lbs., the holding-up hammer or 'dolly' from 10 to 40 lbs. 130 to 150 rivets is a day's work of 13 hours of a riveting gang. 360 to 720 can be put in by a riveting machine.

Riveted Joints.

The loss of strength is ordinarily, for chain-riveted joints (fig. 6), 15 per cent.; for double-riveted, 30 per cent.; for single-riveted joints, 44 per cent., as compared with the strength of the plate unpunched.



FIG. 6. Grouped Butt Joint. Chain Riveting.




FIG. 7. Lap Joint. Lozenge Riveting.

Zigzag Riveting.—In this (fig. 8) the distance between the transverse pitch lines should be at least two-thirds the transverse pitch of the rivets.

Lozenge Riveting.—Arranging the rivets in this way, as illustrated by the lap-joint of fig. 7, and calculating the plate strength and rivet strength at each of the possible lines of fracture, it is possible to obtain a strength of joint equal to the strength of the whole plate less one rivet hole. With the same efficiency a still better joint for a plate-tie may be made with two cover-plates of lozenge form, the maximum row of rivets being repeated on each side of the butt joint.

Cover-Plates.—In the special case last mentioned the united thickness of the cover-plates will have to be considerably greater than that of the main tie, and will be determined by the net section of cover taken through the maximum row of rivets. In chain riveting generally it would be theoretically sufficient to make the united cover thickness equal to the plate thickness, but in practice it is often made somewhat greater, both in single and double covers. If there is




FIG. 8. Lap Joint. Zigzag Riveting.

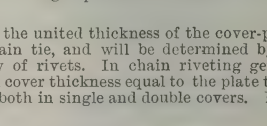


FIG. 9.

a whole plate on one side, as in No. 1, fig. 9, a single cover-plate may be used on the other side equal in thickness to the jointed plate. When the member consists of several thicknesses of plate, as in No. 3, they may with advantage be all jointed between one pair of cover-plates, arranging the several layers to break joint one with another, and leaving between every two joints a space containing a sufficient number of rivets to take up the pull of one layer of plates.

Rolling Load on Railway Bridges.

The effective weight of the rolling load, per foot lineal of each line of way, will depend upon the width of span. The heaviest train would consist of locomotives coupled closely together, but while a bridge of short span might frequently be covered by such a train, or by the two engines that often head the train, a bridge of very long span would never be subjected to such a load per foot lineal over its entire length. But for spans shorter than the length of one engine, the load may be very much greater than the weight of the engine per foot of its extreme length. Taking the worst position of the wheel-loads, and the heaviest class of engines now in use upon English lines of railway, the equivalent distributed load per foot lineal may be estimated as follows :—

For spans of 10 feet, a load of 4·40 tons per foot.						For spans of 100 feet, a load of 2·07 tons per foot.					
„	20	„	„	3·25	„	„	„	150	„	„	2·00	„	„
„	30	„	„	2·88	„	„	„	200	„	„	1·90	„	„
„	60	„	„	2·30	„	„	„	300	„	„	1·75	„	„

In designing cross girders the maximum axle load is taken at 22 tons.

These loads are exclusive of any allowance for impact, which is generally allowed for by varying the unit stress per sq. in. to suit the application of the load :—From 4·5 tons per sq. in. for cross girders to 6·5 tons per sq. in. for main girders 100 feet span and over. The loads given are considered to be the maximum that can be obtained from the present loading gauge of British railways.

Loads on Highway Bridges.*


The following three classes of bridge loading should give suitable provision for all forms of traffic and loading.

Class 1.—Bridges on main thoroughfares in great industrial centres, and within a radius of 25 miles thereof. Will take ordinary boiler trollies and heavy guns.

Class 2.—Bridges on secondary roads in great industrial centres, and on main roads outside a radius of 25 miles. Will take 20-ton rollers, large traction engines, large ploughing engines, L.C.C tramcars, etc.

Class 3.—Bridges on provincial roads other than main roads. Will take 15-ton rollers, ordinary traction engines, ploughing engines, brick trucks, and siege guns.

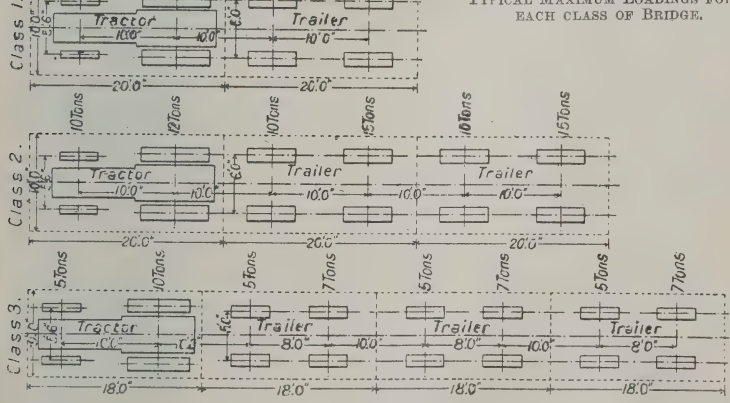Note.—For certain localities, as Leeds, Sheffield, West Bromwich, Salford, etc., a maximum axle load of 35 tons, or a gross load of 70 tons on two axles, with a wheel base of 10 × 6 eet should be provided for.



TYPICAL MAXIMUM LOADINGS FOR EACH CLASS OF BRIDGE.

FIG. 10.

* For further particulars see Joint Committee's Report on Loads on Highway Bridges, published by the Concrete Institute.

Only one of the above loads to be on the bridge at one time.

All loads are axle loads, i.e. on two wheels.

In addition to the above passing loads, 1 cwt. per foot super should be provided for over the part of the bridge not occupied by these loads.

In designing bridges with cross girders, the latter must be sufficient to carry the maximum axle load travelling across the centre of their spans at the given wheel base, in addition to the dead load, and distributed load of 1 cwt. per foot.

In designing arched bridges, the curve of thrust should be drawn when the heaviest axle has reached the centre of the nearest haunch, and again when it has reached the centre of the further haunch ; a further condition, when it has reached the centre of the bridge, should also be taken.

The distribution of point loads through the thickness of the road material may be taken as equal to the depth (i.e. the angle of dispersion can be taken as 45°).

To allow for the virtual increase in the value or intensity of a rolling load by vibration due to irregularities in the road surface, etc., it is suggested that a factor of safety of 4 for spans over 50 feet, and 5 for smaller spans be adopted.

STEEL ROOF FRAMING AND COVERING.

Some points to be considered in designing steel roofing :—

(a) *Nature of Covering.*—If of **corrugated sheeting,** either ridged or curved type may be adopted ; in the latter the joints near crown of roof lie nearly horizontal, and leakage through rain being blown in must not be overlooked. A continuous covering, such as tarred felt or asphalt laid on timber boarding, is applicable to ridged or curved types.

With slates or tiles, the ridged type (except in very large spans) is necessary.

(b) *Rise of Roof.*—Where this is not controlled by architectural requirements, a rise of about $\frac{1}{5}$ span will generally prove most economical. Where water-tightness is essential, $\frac{1}{4}$ rise may be adopted ; a rise of even $\frac{1}{3}$ may be used with slates or tiles. In very exposed positions a low rise of $\frac{1}{8}$ has been provided, but here leakage is likely to prove troublesome.

(c) *Lighting and Ventilation in Roof.*—Skylights can be arranged in any position on the slope of a ridged roof, or set low down on curved roofs. Lights are often combined with ventilators at the centre or ridge of the roof. Ventilation at the ridge may consist merely in slightly raising the ridge cap above the sheets ; by the use of special ridge sheeting (often curved) supported on raised purlins ; or where greater ventilation is desired, the cover may be raised to a considerable height and louvres provided for weather-tightness. See sketch examples.

(d) *Temporary Structures.*—Here the framing and covering can be designed as light as possible, and factor of safety reduced to about 3, since allowance for rusting and general deterioration need not be considered. The self-supporting type of curved roof should be considered in this case.

(e) *Special Headroom* generally requires a special type, as the main tie cannot economically be raised much over $\frac{1}{10}$ rise for ridged or curved trusses of ordinary design. Two suggestions are given in sketch examples to meet this requirement.

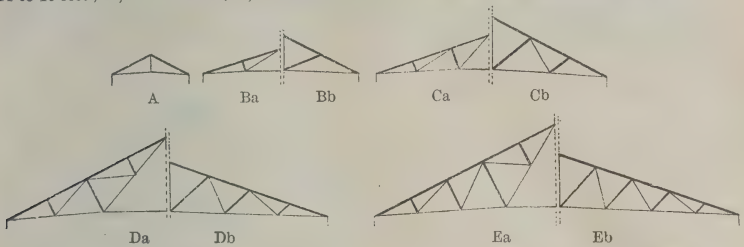
Struts, or members in compression, should be kept as short in length as possible. The strength of *ties* to resist tension is independent of their length, and no consideration on this point is necessary, except that relating to the carrying of their own weight.

The Purlins (or horizontal bearers which carry the weight of the roof covering, and the wind and snow load on the same, and transmit these loads to the roof trussing) should rest, wherever possible, on the rafters close to the points where the struts and ties meet, and stiffen the same ; loads applied between these junction points (usually termed 'joints') may induce considerable *bending stresses* which must be carefully allowed for, generally at considerable expense, owing to the large increase in section which may be necessary.


The unsupported length of the Rafter, that is to say the length between the joints, should not exceed 7 to 8 feet where the purlins are fixed close to the joints ; where purlins occur between the joints, this length should be considerably reduced, or the section of the rafter increased to resist the bending stresses.

In the brief notes accompanying the outline types of roofs shown here, the application of some of the preceding hints will be evident.

For ordinary conditions the types shown below are suitable up to the following spans :—A, 14 to 16 feet; B, 25 to 30 feet; C, 45 to 50 feet; D, 55 to 60 feet; and E, 70 to 80 feet.




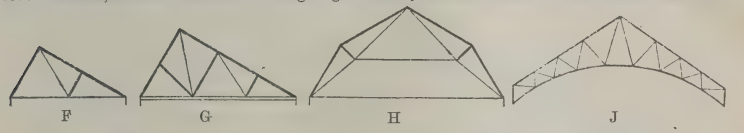The two rises indicated in B to E are $\frac{1}{4}$ span and $\frac{1}{3}$ span. Where special conditions do not arise, the form of bracing should be decided by considerations of length and inclination of the several struts, and convenience for designing efficient junctions between the struts and ties.



Types of ridged roofs designed to provide special lighting, such as is required in spinning and weaving factories, are shown in F and G; the long slope is covered with sheets or slates, and the short, upright slope glazed and turned towards the north, thereby ensuring efficient light free from direct sunshine. These types are frequently called 'Saw Tooth' or 'Northern Light' roofs, and are suitable for spans of 18 to 20 ft., and 25 to 30 ft. respectively.


Types H and J show a high rise, with main tie raised to give increased headroom; the former may frequently be adopted for factories, the lower slopes being glazed and the upper slopes sheeted or slated.



The curved types K, L, and M, are similar to A, B, and C, but arranged for a curved sheet covering, and may be adopted for similar spans.


Types N are in reality curved lattice girders, and may be designed for large spans such as are required for markets, railway stations, public halls, or the like.

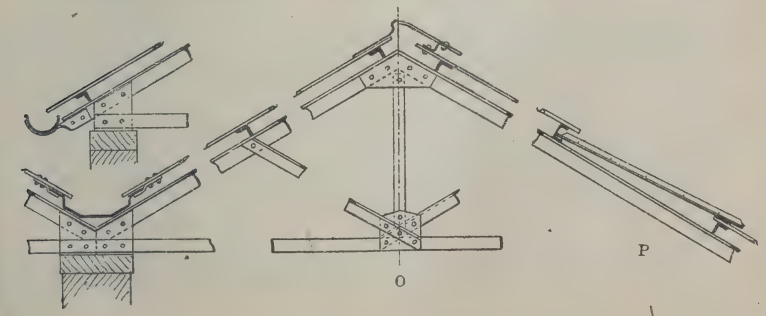Sketch Details.—Sketch O suggests details for a ridged roof, type Bb; on left two spans meet and a valley gutter is provided, and above this a sketch of an eaves gutter. At the apex, or



ridge, an ordinary ridge cap is shown on the left, and on the right a plain ridge cap is slightly raised on light brackets to provide a small amount of ventilation.

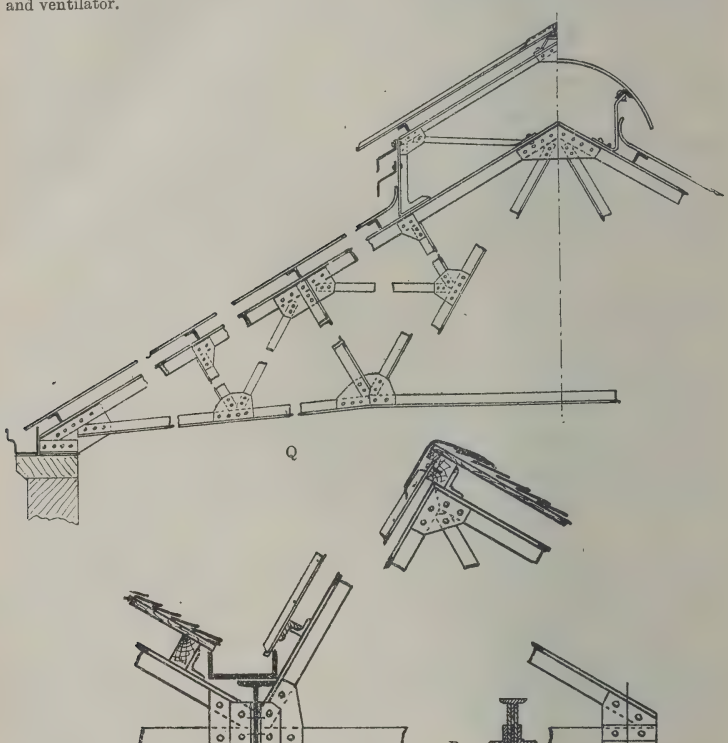Sketch P indicates a skylight in the slope of a roof. Sketch Q gives suggestions for type Da. At apex a simple ventilator is shown on the right, and a larger louvred ventilator on the left. In the latter arrangement the straight cover may be glazed, thus forming a combined skylight and ventilator.



Q

R

Sketch R is that for a 'Northern Light' roof, types F or G. A valley detail (showing this part supported on a rolled steel beam) with valley gutter is given, also an eaves shoe detail. The long slope is covered with timber and slates, and the short slope is glazed.

Corrugated Sheets and Fixings.

Sheets can be procured in lengths from 5 to 10 feet, and in thicknesses from No. 16 to No. 26 B.W.G.; for special or very temporary purposes, No. 28 B.W.G. might be adopted.

Corrugations from 2 inches width in light sheets to 6 inches in heavy sheets may be got, but for usual conditions the following sizes will meet all requirements:—

5–5 inch corrugated sheets (depth of corrugations 1¼ in.)
6–5 " " " (" " " ⅜ ") See Sketch S.
8–3 " " " (" " ¾ ")
10–3 " " " (" " ")

For ordinary conditions, a side lap of one corrugation (see right-hand of Sketch S) would be adopted, but for special water-tightness or stiffness, two corrugations lap could be given (see left

hand of Sketch S). The effective width of the above sheets would be 25 inches or 30 inches, for single lap, and 20 inches or 25 inches for double lap.



S

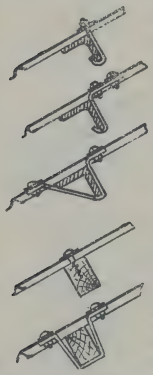
In the 3-inch corrugated sheets, the corresponding widths would be 24 and 30 inches for single lap, and 21 and 27 inches for double lap.

The end lap is generally given at 6 inches.

Sheets should be connected together by means of galvanised rivets or bolts and washers: these would be placed about 9 inches apart along the side laps, and at every second corrugation in the end laps, being in all cases placed on *top* of the corrugations to check leakage. For *double* corrugation side lap, place rivets or bolts in edge of outer sheets 6 inches apart, and 12 inches apart in inner corrugation.

Five-inch corrugations should always be adopted for No. 16 B.W.G. sheets, and may be used for No. 18 or 20 B.W.G.; 3-inch corrugations may be used for 18 or 20 B.W.G., and always for No. 22 B.W.G. and upwards.

In very exposed positions, and particularly with light gauge sheets, Wind Ties of flat or light angle section are sometimes carried along the length of the roof, and held in position by means of the purlin bolts. A line of these wind ties near each eaves level will considerably strengthen the roofing; and it is sometimes also desirable to add ties over some of the intermediate horizontal joints in the roof sheets, to further resist excessive winds.



T

U

V

W

X

In addition to connecting the roof sheets together, they must be securely fixed to the roof purlins, and suggestions for doing this are here indicated:—

Sketch T, simple hook bolt, with nut and washer outside, connecting sheets to steel angle purlin.

Sketch U, similar to above, but formed of flat clip bolted to sheets.

Sketch V, a more secure form of flat clip carried round purlin and connected to sheets by bolts and washers at ends.

Sketch W, galvanised nail or wood screw and washer, for simple connection to timber purlin.

Sketch X, flat stirrup carried round timber purlin; generally made with slight clearance in width, to admit of adjustment due to change of temperature in the sheet covering.

The washers used with the bolts are sometimes formed of lead, or of some special form, to check leakage at the bolt holes. Red lead putty, or rope yarn soaked in red lead paint, is sometimes specified to be placed under the nut or washer, but such special treatment is seldom justifiable, or really necessary.

Corrugated Sheets are generally galvanised, but in localities near the sea, or in manufacturing districts near chemical works where acid fumes are likely to be given off, the galvanising quickly disappears, and the sheets become eaten through and spoiled. In such conditions the galvanised sheets should receive two good coats of metallic oxide paint shortly after erection, or plain corrugated sheets used, these being well tarred and sanded after erection, and at such intervals as may be necessary to efficiently protect the sheets from corrosion.

Self-Supporting Roofing.

This term is generally applied to a type of curved roofing in which the curved rafters of the trussing are dispensed with, their place being supplied by the corrugated sheets themselves.

In the smaller spans, say up to 15 to 20 feet, the roof sheets are connected to timber or steel eaves beams, and the bracing (generally as types K or L) bolted direct to the curved roof sheets.

In the larger spans angle purlins are securely clipped to the curved sheets and extend for the whole length of the roof, and the bracing is bolted to these purlins.

By this method of construction, and the use of corrugated roof sheets of sufficient strength to serve the double purpose of acting as a curved rafter, and as a weather protection, spans over 55 feet have been erected. It will not, however, as a rule be found economical to exceed about 35 feet span with this type of roofing; and as the life of this structure depends on the strength of the covering, it is seldom justifiable to provide self-supporting roofs for permanent use, as this would entail great watchfulness and cost in protecting the sheeting against corrosion or decay.

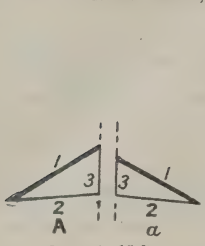
The curved form of covering must be used for this type of roof, and for the larger spans the sheets may be arranged to *break joint* in the longitudinal joints; greater stiffness may be obtained in the complete sheeting by this arrangement of joints. The lower sheets of the roof, which have to resist a much greater strain than the upper ones, are sometimes made of a heavier gauge. Special attention is also necessary to ensure sufficient strength when bolting or riveting the several sheets together.

Ridged Roof Truss Multipliers.


The determination of the stresses in the several members of any roof truss is usually a comparatively simple matter, although a considerable amount of time may sometimes be required to carry out this operation. Where any of the following types of trusses can be adopted, the above calculations can be much simplified and shortened.

For special water-tightness with slate or tile covering, one-third rise shown by capital letters) should be adopted; one-fourth rise is usual for corrugated sheet covering.

Rise of rafters, $\frac{1}{3}$rd and $\frac{1}{4}$th span. Rise of main ties, $\frac{1}{12}$th and $\frac{1}{16}$th span.




Spans to 15 ft.

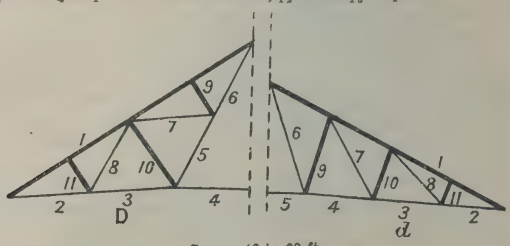


Spans, 46 to 60 ft.

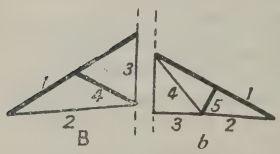Compression shown by heavy lines. Tension shown by light lines.



Spans, 16 to 30 ft.

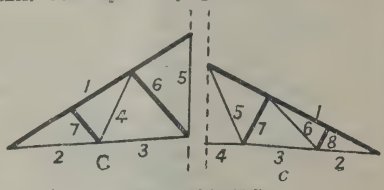

Spans, 31 to 45 ft.

In spans up to 60 feet the rafter is usually kept the same section throughout the full length; the table gives only the max. stress multiplier for rafters.

The max. practical span for any type of truss is indicated by multiplying the numbers of sections formed in the rafters by the joints in the same by $7\frac{1}{2}$ feet. Thus Type B gives $4 \times 7\frac{1}{2} = 30$ feet max. span, and Type D $= 8 \times 7\frac{1}{2} = 60$ feet max. span.

Purlins are assumed to be set at the joints; if not, allowance must be made for the extra stress due to the bending tendency produced.

It is also assumed that the trusses are fixed at both ends; if this is not so, the stress in some members may be increased by about 10 per cent.

The multipliers in the following table are calculated as for *unit load and unit span*. Thus for dead-load stress the actual dead load of truss covering, etc., is multiplied by the particular dead-load multiplier for the required member; for live-load stress, the live load from the actual normal wind pressure on one side of the truss is used along with the particular live-load multiplier. Both stresses added together give the max. stress on the member.

Member.	Type A.		Type *a*.		Type B.		Type *b*.		Type C.		Type *c*.		Type D.		Type *d*.	
	D.L.	L.L.	D.L.	L.L.	D.L.	L.L.	D.L.	L.L.	D.L.	L.L.	D.L.	L.L.	D.L.	L.L.	D.L.	L.L
1	·51	·58	·63	·69	·76	·70	·97	1·04	·86	·85	1·08	1·25	·90	93	1·13	1·37
2	·42	·29	·57	·48	·63	·81	·87	1·12	·72	·98	·96	1·35	·76	1·06	1·12	1·46
3	·07	·05	·07	·06	·31	·34	·55	·45	·58	·63	·77	·92	·65	·81	·87	1·12
4	—	—	—	—	·24	·58	·33	·69	·12	·30	·56	·46	·42	·27	·72	·81
5	—	—	—	—	—	—	·22	·50	·41	·45	·28	·56	·26	·54	·57	·47
6	—	—	—	—	—	—	—	—	·21	·50	·19	·43	·36	·81	·27	·56
7	—	—	—	—	—	—	—	—	·14	·34	·22	·50	·10	·26	·19	·42
8	—	—	—	—	—	—	—	—	—	—	·15	·31	·10	·26	·16	·36
9	—	—	—	—	—	—	—	—	—	—	—	—	·10	·25	·22	·50
10	—	—	—	—	—	—	—	—	—	—	—	—	·21	·50	·17	·37
11	—	—	—	—	—	—	—	—	—	—	—	—	·10	·25	·11	·25

D.L. = Dead Load. L.L. = Live Load.

GALVANISED CORRUGATED IRON SHEETS. Approximate Weight.

(Sheets 26 inches in width ; 8-3 inch corrugations.)

Length of Sheet in Feet.						
5	6	7	8	9	10	B. W. G.
Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	
33¼	40	46½	53½	60	66½	16
26¾	32	37½	42¾	48	53½	18
21½	25½	29¾	34	38½	42½	20
16¾	20	23¼	26½	30	33½	22
13¼	16	18¾	21¼	24	26¾	24
10¼	12½	14½	16½	18¾	20¾	26
9¼	11¼	13	15	16¾	18¾	28

Approximate Number of Sheets per Ton.

Length of Sheet in Feet.						
5	6	7	8	9	10	B. W. G.
67	56	48	42	37	34	16
84	70	60	52	46	42	18
105	88	75	66	58	53	20
134	112	96	84	74	67	22
168	140	120	105	93	84	24
216	180	154	135	120	108	26
240	200	171	150	133	120	28

Approximate weight per 100 superficial feet of Galvanised Corrugated Straight Iron Sheets when fixed on roof.

18	20	22	24	26 W.G.
cwts. qr. lbs.	cwt. qrs. lbs.	cwt. qrs. lbs.	cwt. qr. lbs.	cwt. qr. lbs.
2 1 21	1 3 21	1 2 7	1 1 7	1 0 7

One ton of Galvanised Corrugated Iron Sheets will cover when fixed, and after allowing for laps, the undermentioned areas :—

16	18	20	22	24	26	28	B.W.G.
600	800	1020	1280	1530	2100	2250	Square Feet.

It is a bad practice to fasten zinc-iron sheets together with iron or steel rivets. These soon rust if not painted, and the rust penetrates through the edges of the iron encircling the rivets, and thus proves disastrous. Only zinc, or zinc-covered rivets, should be so used.

The great objection to iron as a roofing material is the drip from the moisture which condenses on the underneath side of it.

PAINTING FOR GALVANISED IRON ROOFS.

Paint adheres badly to new galvanised iron, but after a few years it will do so readily and will add greatly to its life. In order to make paint adhere to new galvanised iron, brush it over with the following mixture : Chloride of Copper, 1 part ; Nitrate of Copper, 1 part ; Salammoniac, 1 part ; Water, 64 parts, to which is added 1 part of Hydrochloric Acid. This mixture turns the galvanised iron black ; it should be left for at least 12 hours before being painted.

It is stated that paint will adhere to galvanised iron if the surface is washed with vinegar before painting.

(See also ' Painting,' Section XXXIX.)

VARNISH FOR GALVANISED IRON ROOFS.

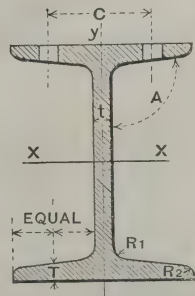
Heat 100 gallons of tar to a low boiling point, and add 100 lbs. of fresh slaked lime, sifted over the top and then worked down. Boil this mixture until it becomes pasty. Let it settle for a few minutes and then add 20 lbs. of tallow and 5 lbs. of powdered resin. Stir until thoroughly mixed and all ingredients dissolved ; then allow to cool. The mixture should not be raised to a higher temperature than 100 degs. F. If too thick, it can be thinned down with paraffin or naphtha.

TRANSVERSE STRENGTH OF CORRUGATED IRON.

If W = breaking weight in tons (distributed) ; L = unsupported length of sheet in inches ; t = thickness of sheet in inches ; b = breadth of sheet in inches ; d = depth of corrugations in inches ;

$$W = \frac{44{\cdot}6\ t\ b\ d}{L}$$

DIMENSIONS AND PROPERTIES OF I BEAMS IN INCH UNITS.



Reference		Size Ins.	Weight per Foot Lbs.	DIAGRAM. Web t	Flange T	Radius R1	Radius R2	Area Sq. Ins.	Moments of Inertia. About X-X	Moments of Inertia. About Y-Y	Radii of Gyration Inches. About X-X	Radii of Gyration Inches. About Y-Y	Section Modulus. About X-X	Centres of Holes. c Ins.	Reference Mark.
B S B	30	24 × 7½	100	·6	1·07	·7	·35	29·4	2654	6·92	9·5	1·5	221·1	4·5	B S B 30
,,	29	20 × 7½	89	·6	1·01	·7	·35	26·17	1670	62·63	7·99	1·54	167·0	4·5	,, 29
A S B	29A	20 × 6½	65	·493	·79	·6	·3	19·12	1178	27·40	7·85	1·20	117 8	3·5	A S B 29A
B S B	28	18 × 7	75	·55	·928	·65	·325	22·06	1149	47·04	7·21	1·46	127·6	4·0	B S B 28
A S B	28A	18 × 6	55	·466	·691	·56	·276	16·18	806·3	20·84	7·06	1·13	89·59	3·5	A S B 28A
B S B	27	16 × 6	62	·55	·847	·65	·325	18·23	725·7	27·08	6·81	1·21	90·71	3·5	B S B 27
,,	26	15 × 6	59	·5	·88	·6	·3	17·35	628·9	28·22	6·02	1·27	83·85	3·5	,, 26
,,	25	15 × 5	42	·42	·647	·52	·26	12·35	428·	11·81	5·88	·978	57·06	2·75	,, 25
,,	24	14 × 6	57	·5	·873	·6	·3	16·76	532·9	27·96	5·63	1·29	76·12	3·5	,, 24
,,	23	14 × 6	46	·4	·698	·5	·25	13·53	440·5	21·6	5·7	1·26	62·92	3·5	,, 23
,,	22	12 × 6	54	·5	·883	·6	·3	15·88	375·5	28·3	4·86	1·33	62·58	3·5	,, 22
,,	21	12 × 6	44	·4	·717	·5	·25	12·94	315·3	22·27	4·93	1·31	52·55	3·5	,, 21
D L B	20A	12 × 5	39	·44	·664	·54	·27	11·47	260·9	12·16	4·77	1·03	43·48	2·75	D L B 20A
B S B		12 × 5	32	·35	·55	·45	·225	9·41	220·	9·753	4·83	1·01	36·66	2·75	B S B 20
,,	19	10 × 8	70	·6	·97	·7	·35	20·6	344·9	71·67	4·09	1·86	68·98	4·75	,, 19
,,	18	10 × 6	42	·4	·736	·5	·25	12·35	211·5	22·95	4·13	1·36	42·3	3·5	,, 18
D L	17A	10 × 5	35	·42	·652	·52	·26	10·29	167·2	11·89	4·03	1·07	33·45	2·75	D L B 17A
B S B	17	10 × 5	30	·36	·552	·46	·23	8·82	145·6	9·79	4·06	1·05	29·12	2·75	B S B 17
A S B	17B	10 × 4·66	25	·3	·491	·41	·19	7·353	122·7	6·778	4·08	·960	24·53	2·5	A S B 17B
B S B	16	9 × 7	58	·55	·924	·65	·325	17·06	229·5	46·3	3·66	1·64	51·0	4·0	B S B 16
D L B	A	9½ × 8½	21·5	·34	·453	·44	·22	6·324	83·41	8·446	3·63	·738	18·03	2·0	D L B 15A
B S B	15	9 × 4	21	·3	·46	·4	·2	6·176	81·1	4·2	3·62	·824	18·02	2 25	B S B 15
,,	14	8 × 6	35	·44	·597	·54	·27	10·29	110·5	17·95	3·27	1·32	27·62	3·5	,, 14
,,	13	8 × 5		·3	·575	·45	·225	8·24	89·32	10·26	3·29	1·11	22·33	2·75	,, 13
,,	12	8 × 4		·28	·402	·38	·19	5·294	55·69	3·578	3·24	·822	13·92	2·25	,, 12
,,	11	7 × 4	16	·25	·387	·35	·175	4·706	39·21	3·414	2·88	·851	11·2	2·25	,, 11
,,	10	6 × 5	25	·41	·52	·51	·255	7·35	43·61	9·116	2·43	1·11	14·53	2·75	,, 10
,,	9	6 × 4½	20	·37	·431	·47	·235	5·88	34·62	5·415	2·42	·959	11·54	2·5	,, 9
,,	8	6 × 3	12	·26	·348	·3	·18	3·53	20·21	1·339	2·39	·616	6·736	1·5	,, 8
,,	7	5 × 4½	18	·29	·448	·39	·195	5·29	22·69	5·664	2·07	1·03	9·076	2·5	,, 7
,,	6	5 × 3	11	·22	·376	·32	·16	3·235	13·61	1·462	2·05	·672	5·444	1·5	,, 6
D L B	5A	4⅞ × 1⅝	10	·32	·48	·32	·16	2·941	9·275	·413	1·78	·375	3·905	—	D L B 5A
B S B	5	4⅞ × 1⅝	6·5	·18	·325	·28	·14	1·912	6·78	·263	1·87	·37	2·888	—	B S B 5
,,	4	4 × 3	9·5	·22	·336	·32	·16	2·794	7·52	1·281	1·64	·677	3·76	1·5	,, 4
D L B	3A	4 × 1⅝	8	·3	·383	·3	·15	2·353	5·828	·324	1·50	·371	2·664	—	D L B 3A
B S B	3	4 × 1½	5	·17	·24	·27	·135	1·47	3·668	·186	1·58	·355	1·834	—	B S B 3
,,	2	3 × 3	8·5	·2	·332	·3	·15	2·5	3·787	1·262	1·28	·71	2·524	1·5	,,
D L B	1A	3⅛ × 1⅛	6	·25	·344	·25	·125	1·765	3·066	·183	1·32	·322	1·763	—	D L B 1A
B S B	1	3 × 1½	4	·16	·248	·26	·13	1·176	1·659	·124	1·18	·324	1·106	—	B S B 1

For	Angle A
B.S.B.'s	98°
D.L.B.'s	98°
A.S.B.'s	99° 27′ 44″

The properties of British Standard Sections in above table are published by permission of the Engineering Standards Association. (*Dorman, Long & Co. Ltd.*)

REDPATH, BROWN
& CO. LTD.
CONSTRUCTIONAL ENGINEERS

Registered Office:
2 St. Andrew Square, EDINBURGH.



All types **Steel Structures**, complete **Steel Frame** or **Composite Buildings** for manufacturing or storage purposes. **Heavy and Light Girder Work, Stanchions, Gantries, Roof-work, Stagings,** Hay Sheds, etc., etc.

DESIGNS made and material systematically marked to ensure easy erection abroad.

Economical designs and estimates on application.

Branches:

EDINBURGH: St. Andrew Steel Works, Albion Road.
Telegrams: 'Redpath, Edinburgh.'

LONDON: 3 Laurence Pountney Hill, E.C. 4.
Telegrams: 'Arbee, Cannon, London.'

MANCHESTER: Westing House Road, Trafford Park.
Telegrams: 'Purlin, Manchester.'

GLASGOW: Office, 19 Waterloo Street.
Telegrams: 'Joists, Glasgow.'

Also at NEWCASTLE, BIRMINGHAM, MIDDLESBRO', BELFAST and DUBLIN.

See also following page.

REDPATH, BROWN

& CO. LTD.

IRON & STEEL MERCHANTS

STOCKHOLDERS

AND CONSTRUCTIONAL ENGINEERS.

Registered Office:
2 St. Andrew Square, EDINBURGH.

Sectional Material of all Standard shapes and sizes for Builders, Engineers, Shipyards and Collieries, cut to any required length and **despatched same day as ordered.**

Stocks of Steel **Joists, Channels, Angles, Tees, Rails, Bars,** etc., always on hand. Tonnage carried largest in the United Kingdom.

Joist sections for **PIT PROPS (STEEL)**; arched type complete with fishplates and bolts; straight beam type, holed if required.
Immediate delivery, any section, any quantity.

PROMPT DESPATCH AND RELIABILITY is a speciality in this department of our business.

BRANCHES: EDINBURGH, GLASGOW, LONDON, MANCHESTER, MIDDLESBRO', BIRMINGHAM, NEWCASTLE, BELFAST and DUBLIN.

See also previous page.

Size.	Weight per Foot.	Safe Loads in Tons Uniformly Distributed. Span in Feet. 2	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	36	40	Deflection Coefficient.	Weight per Foot.	Size.
Ins.	Lbs.																				Lbs.	Ins.
24 × 7½	100					102	92	79	69	61	55	50	46	42	9	36	34	30	27	·00078	100	24 × 7½
20 × 7½	89				94	83	69	59	52	46	41	38	34	32	29	27	26	23	20	·000987	89	20 × 7½
20 × 6½	65				69	59	49	42	37	33	29	27	25	23	21	20	18	16	15	·000987	65	20 × 6½
18 × 7	75				78	64	53	45	40	35	32	29	26	24	22	21	20	17		·00104	75	18 × 7
18 × 6	55				56	45	37	32	28	25	22	20	19	17	16	15	14	12·5	11	·00104	55	18 × 6
16 × 6	62			73	56	45	38	32	28	25	22	20	19	17	16	15	14	12		·00117	62	16 × 6
15 × 6	59			62	52	42	35	30	26		21	19	17	16	15	14	13	11		·00125	59	15 × 6
15 × 5	42			47	35	28	24	20	18	16	14	13	12	11	10	9·5	9			·00125	42	15 × 5
14 × 6	57			50	47	38	31	27	24	21	19	17	16	14	13	12				·00133	57	14 × 6
14 × 6	46			43	39	31	26	22	19	17	15	14	13	12	11	10				·00133	46	14 × 6
12 × 6	54		53	52	39	31	26	22	19	17	15	14	13	12	11	10				·00156	54	12 × 6
12 × 6	44			40	33	26	22	19	16	14	13	12	11	10	9					·00156	44	12 × 6
12 × 5	39		45	36	27	22	18	15	13	12	11	9·9	9·0	8·3	7·7	7·2				·001562	39	12 × 5
12 × 5	32		32	30	23	18	15	13	11	10		8·3	7·6	7	6·5					·00156	32	12 × 5
10 × 8	70			58	43	34	28	24	21	19	17	15	14	13						·001875	70	10 × 8
10 × 6	42			35	26	21	17	15	13	11	10	9·6	8·8	8						·001875	42	10 × 6
10 × 5	35		37	28	21	17	14	12	10	9·3	8·4	7·6	7·0	6·4						·001875	35	10 × 5
10 × 5	30		30	24	18	14	12	10	9	8	7·2	6·6	6	5·6						·001875	30	10 × 5
10 × 4·66	25		24	20	15	12	10	9	8	6·8	6·1	5·6	5·1	4·7	4·4	4·1				·001875	25	10 × 4·66
9 × 7	58		44	42	32	25	21	18	16	14	12	11	10	9·8						·00208	58	9 × 7
9½ × 3½	21·5	26	22	15	11	9·0	7·5	6·4	5·6	5·0	4·5	4·1	3·7	3·5						·002027	21·5	9½ × 3½
9 × 4	21		22	15	11		7·5	6·4	5·6	5	4·5	4	3·7							·00208	21	9 × 4
8 × 6	35		31	23	17	14	11	9·8	8·6	7·7	7	6·3								·00234	35	8 × 6
8 × 5	28		25	18	14	11	9	8	7	6·2	5·5	5								·00234	28	8 × 5
8 × 4	18	19	17	11	8·7	7	5·8	5	4·3	3·8	3·5	3·2								·00234	18	8 × 4
7 × 4	16	15	14	9·4	7	5·6	4·7	4	3·5	3·1	·8	2·5								·00268	16	7 × 4
6 × 5	25	22	18	12		7·3	6	5·2	4·5	4										·003125	25	6 × 5
6 × 4½	20	20	14	9·6	7·2	5·8	4·8	4·1	3·6	3·2										·003125	20	6 × 4½
6 × 3	12	14	8·4	5·6	4·2	3·4	2·8	2·4	2·1	1·9										·003125	12	6 × 3
5 × 4½	18	13	11·3	7·6	5·6	4·5	3·8	3·2	2·8											·00375	18	5 × 4½
5 × 3	11	9·8	6·8	4·5	3·4	2·7	2·3	1·9	1·7											·00375	11	5 × 3
4½ × 1½	10		4·9	3·3	2·4	2·0	1·6	1·4												·00395	10	4½ × 1½
4½ × 1½	6·5	7	3·5	2·4	1·8	1·4	1·2	1												·00395	6·5	4½ × 1½
4 × 3	9·5	7·8	4·7	3·1	2·3	1·9	1·6	1·3												·00469	9·5	4 × 3
4 × 1½	8	6·6	3·3	2·2	1·6	1·3	1·1	·95												·00469	8	4 × 1½
4 × 1½	5	4·6	2·3	1·5	1·1	·91	·76	·65												·00469	5	4 × 1½
3 × 3	8·5	5·3	3·2	2	1·6	1·2		·9												·00625	8·5	3 × 3
3½ × 1½	6	4·4	2·2	1·5	1·1	·88	·78	·63												·005357	6	3½ × 1½
3 × 1½	4	2·8	1·4	·92	·6	·55	·46	·39												·00625	4	3 × 1½

(*Dorman, Long & Co. Ltd.*)

BROAD FLANGE BEAMS AS STANCHIONS. Safe Loads in Tons on Stanchions for Heights of 8 to 32 Feet. (L.C.C. Formula. Ends Fixed.)										SECTION.		BROAD FLANGE BEAMS AS GIRDERS. Safe distributed Loads in Tons for Spans of 8 to 64 Feet.														
8′	10′	12′	14′	16′	18′	20′	24′	28′	32′	Approx. Size. Ins.	Wt. per Foot. Lbs.	8′	10′	12′	14′	16′	18′	20′	24′	28′	32′	36′	40′	44′	48′	56′	64′
33	30	27	24	21	18	13	—	—	—	5½ × 5½	24	8	6	5	4	4	—	—	—	—	—	—	—	—	—	—	—
36	33	30	27	24	21	18	—	—	—	6 × 6	25	9	7	6	5	5	—	—	—	—	—	—	—	—	—	—	—
45	42	38	35	32	28	25	14	—	—	6¼ × 6¼	31	12	10	8	7	6	5	—	—	—	—	—	—	—	—	—	—
49	45	42	39	35	32	28	19	—	—	6½ × 6½	33	14	11	9	8	7	6	—	—	—	—	—	*Figures in italics produce a deflection greater than span ÷ 360.*				
53	49	46	42	39	35	32	25	11	—	7 × 7	35	16	13	11	9	8	7	6	—	—	—	—					
56	53	49	46	43	39	36	29	17	—	7½ × 7½	37	18	14	12	10	9	8	7	—	—	—	—					
68	64	60	56	53	49	45	37	29	12	8 × 8	44	22	18	15	13	11	10	9	—	—	—	—					
72	68	64	61	57	53	49	41	34	18	8½ × 8½	46	25	20	17	14	12	11	10	8	—	—	—					
76	73	69	65	61	57	53	46	38	30	8½ × 8½	48	—	22	18	16	14	12	11	9	—	—	—	—	—	—	—	—
81	77	73	69	65	61	58	50	42	34	9 × 9	51	—	24	20	17	15	13	12	10	—	—	—	—	—	—	—	—
95	91	86	82	78	73	69	60	52	43	9½ × 9½	59	—	29	25	21	18	16	15	12	—	—	—	—	—	—	—	—
100	95	91	87	82	78	74	65	56	48	10 × 10	61	—	32	27	23	20	18	16	13	11	—	—	—	—	—	—	—
104	100	96	91	87	83	78	70	61	53	10½ × 10½	64	—	—	29	25	22	19	17	14	12	—	—	—	—	—	—	—
109	105	100	96	92	87	83	75	66	57	10½ × 10½	66	—	—	32	27	24	21	19	16	13	12	—	—	—	—	—	—
126	121	116	111	107	102	97	88	78	69	11 × 11	76	—	—	37	32	28	25	22	19	16	14	—	—	—	—	—	—
131	126	121	117	112	107	102	93	83	74	11½ × 11½	79	—	—	40	35	30	27	24	20	17	15	13	—	—	—	—	—
136	131	127	122	117	112	108	98	89	79	12 × 12	82	—	—	43	37	32	29	26	22	18	16	14	—	—	—	—	—
151	146	141	135	130	125	119	109	98	87	12½ × 12	91	—	—	51	44	38	34	31	25	22	19	17	15	—	—	—	—
153	148	143	137	132	126	121	110	99	88	13⅛ × 12	92	—	—	—	47	41	37	33	27	23	20	18	16	15	—	—	—
169	163	157	151	145	139	133	121	109	97	14 × 12	101	—	—	—	54	48	42	38	32	27	24	21	19	17	—	—	—
171	165	159	153	147	140	134	122	110	97	15 × 12	103	—	—	—	58	51	45	41	34	29	25	22	20	18	17	—	—
184	177	171	164	157	151	144	131	118	105	16 × 12	110	—	—	—	66	58	51	46	38	33	29	25	23	21	19	—	—
187	180	173	166	160	153	146	133	119	106	17 × 12	112	—	—	—	71	62	55	50	41	35	31	27	25	22	21	18	—
204	196	189	182	174	167	159	145	130	115	18 × 12	122	—	—	—	81	71	63	57	47	41	35	31	28	26	24	20	—
207	199	192	184	176	169	161	146	131	116	19 × 12	124	—	—	—	87	76	68	61	51	43	38	34	30	28	25	22	19
224	216	208	199	191	183	175	158	141	125	20 × 12	135	—	—	—	98	86	76	69	57	49	43	38	34	31	29	24	21
231	222	213	205	196	187	178	161	144	126	22 × 12	139	—	—	—	—	97	86	78	65	55	48	43	39	35	32	28	24
252	243	233	223	214	204	194	175	156	136	24 × 12	153	—	—	—	—	115	102	92	76	65	57	51	46	42	38	33	28
259	249	239	229	219	209	199	179	158	138	26 × 12	157	—	—	—	—	127	113	102	85	72	63	56	51	46	42	36	32
282	271	260	249	237	226	215	193	171	149	28 × 12	171	—	—	—	—	147	131	118	98	84	73	65	59	53	49	42	37
289	278	266	254	243	231	220	196	173	150	30 × 12	176	—	—	—	—	161	143	129	107	92	80	71	64	58	53	46	40
296	284	272	260	248	236	224	200	176	152	32 × 12	181	—	—	—	—	175	155	140	116	100	87	77	70	63	58	50	43
321	308	295	282	268	255	242	215	189	163	34 × 12	196	—	—	—	—	199	177	159	133	114	99	88	79	72	66	57	50
329	315	301	287	274	260	246	218	191	163	36 × 12	201	—	—	—	—	—	191	172	143	123	107	95	86	78	71	61	53
336	322	308	293	279	265	250	222	193	165	38 × 12	206	—	—	—	—	—	204	184	153	131	115	102	92	83	76	65	57
344	329	314	299	284	270	255	225	196	166	40 × 12	211	—	—	—	—	—	219	197	164	141	123	109	98	89	82	70	61

The above tables are as published by Messrs R. A. Skelton & Co, Moorgate Station Chambers, Moorfields, London, E.C 2.

TABLE SHOWING THE WEIGHTS AND DIMENSIONS OF, AND ESTIMATED SAFE PERMANENT DISTRIBUTED LOADS. IN TONS, FOR, VARIOUS COMPOUNDED ROLLED STEEL GIRDERS SUPPORTED AT BOTH ENDS.

No of. Section.	Weight per Ft. in Lbs.	Size in Inches.	Compounded of	Distributed Load, in Tons that 1 Ft. will carry, being 1-4th of the Breaking Strain.	Distributed Load, in Tons that 1 Ft. will carry, being 1-5th of the Breaking Strain.
G1 C1	144	21½ × 12	1 G 1 and 2 ⅝-in. plates	1,533	1,226
G1 C2	260	21½ × 18	2 G 1 „ 2 ⅝ „	2,654	2,123
G1 C3	377	21½ × 24	3 G 1 „ 2 ⅝ „	3,775	3,020
G1 C4	195	22⅛ × 12	1 G 1 „ 4 ⅝ „	2,335	1,868
G1 C5	335	22⅛ × 18	2 G 1 „ 4 ⅝ „	3,821	3,056
G1 C6	480	22⅛ × 24	3 G 1 „ 4 ⅝ „	5,306	4,245
G1 C7	248	23¾ × 12	1 G 1 „ 6 ⅝ „	3,183	2,546
G1 C8	414	23¾ × 18	2 G 1 „ 6 ⅝ „	5,054	4,043
G1 C9	582	23¾ × 24	3 G 1 „ 6 ⅝ „	6,925	5,540
G2 C1	130	19¼ × 12	1 G 2 „ 2 ⅝ „	1,279	1,023
G2 C2	227	19¼ × 16	2 G 2 „ 2 ⅝ „	2,061	1,649
G2 C3	340	19¼ × 24	3 G 2 „ 2 ⅝ „	3,092	2,474
G2 C4	180	20⅝ × 12	1 G 2 „ 4 ⅝ „	2,007	1,606
G2 C5	294	20⅝ × 16	2 G 2 „ 4 ⅝ „	2,989	2,391
G2 C6	440	20⅝ × 24	3 G 2 „ 4 ⅝ „	4,483	3,587
G2 C7	360	21¾ × 16	2 G 2 „ 6 ⅝ „	3,975	3,180
G2 C8	540	21¾ × 24	3 G 2 „ 6 ⅝ „	5,962	4,770
G3 C1	98	17 × 10	1 G 3 „ 2 ⅛ „	808	647
G3 C2	178·5	17 × 14	2 G 3 „ 2 ⅛ „	1,353	1,083
G3 C3	266	17 × 20	3 G 3 „ 2 ⅛ „	1,986	1,589
G3 C4	132	18 × 10	1 G 3 „ 4 ⅛ „	1,228	983
G3 C5	271	19 × 14	2 G 3 „ 6 ⅛ „	2,505	2,004
G3 C6	394	19 × 20	3 G 3 „ 6 ⅛ „	3,618	2,894
G5 C1	77	16 × 10	1 G 5 „ 2 ½ „	618	495
G5 C2	127	16 × 12	2 G 5 „ 2 ½ „	907	725
G5 C3	191	16 × 18	3 G 5 „ 2 ½ „	1,360	1,088
G5 C4	111·25	17 × 10	1 G 5 „ 4 ⅛ „	1,014	811
G5 C5	210	18 × 12	2 G 5 „ 6 ⅛ „	1,813	1,450
G5 C6	315	18 × 18	3 G 5 „ 6 ⅛ „	2,720	2,176
G6 C1	142	14½ × 15	2 G 6 „ 1 ½ „	898	718
G6 C2	93	15 × 10	1 G 6 „ 2 ½ „	684	547
G6 C3	164	15 × 14	2 G 6 „ 2 ½ „	1,137	910
G6 C4	245	15 × 20	3 G 6 „ 2 ½ „	1,667	1,334
G6 C5	127	16 × 10	1 G 6 „ 4 ½ „	1,056	845
G6 C6	212	16 × 14	2 G 6 „ 4 ½ „	1,633	1,306
G6 C7	326	16 × 20	3 G 6 „ 4 ½ „	2,370	1,896

LIMITING DIMENSIONS OF ROLLED STEEL.

Dimensions. O, Ordinary. M, Maximum.	Flat.		Round.		Square.		Angle.		Tee.		Joists.		Channel.	
	O	M	O	M	O	M	O	M	O	M	O	M	O	M
Length in feet	40	60	24	80	24	60	50	60	50	60	36	50	36	60
Width in inches	18	18	4	4	4	4	6×6	8×8	5×3	6×3	24×7½	24×7½	15×4	15×4
Thickness in ins.	1	1	—	—	—	—	⅞	1	⅜	½	½	⅝	⅝	⅝

BRITISH STANDARD SECTIONS.*

The British Engineering Standards Association revised their lists of Rolled Steel Sections for structural purposes on July 1920, and issued the same in August 1920. These comprise seven different sections, viz. (1) Equal Angles, (2) Unequal Angles, (3) Bulb Angles, (4) Bulb Plates, (5) Channels, (6) Beams, and (7) T Bars.

The following are abbreviated tables showing some of the standard dimensions recommended. Attention is directed to the footnotes on pp. 318, 319.

* Abstracted by permission of the British Engineering Standards Association.

BRITISH STANDARD SECTIONS.

EQUAL ANGLES.

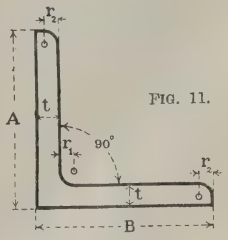


FIG. 11.

BULB PLATES.

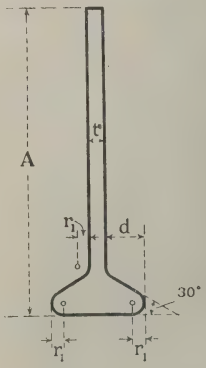


FIG. 15.

BULB ANGLES.

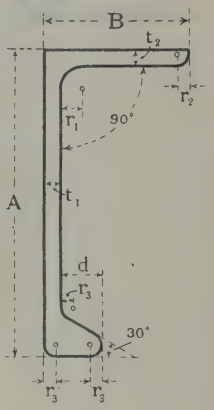


FIG. 14.

UNEQUAL ANGLES

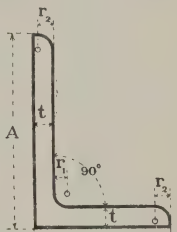


FIG. 12.

T BARS.

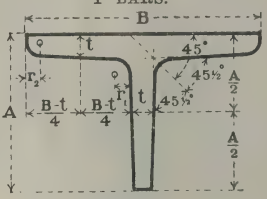


FIG. 13.

BEAMS.

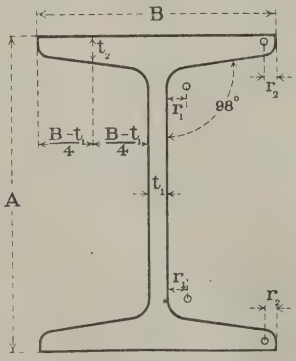


FIG. 17.

CHANNELS.

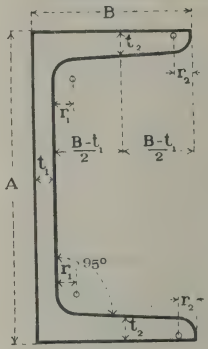


FIG. 16.

EQUAL ANGLES (Fig. 11).

Size. A × B	Standard Thickness. Minimum. t	Mean. t	Maximum t	Maximum Thickness rolled.	Minimum Thickness rolled.	Radii. Root. r_1	Toe. r_2
1 × 1	0·125	—	0·250	0·300	0·125	0·18	0·13
1½ × 1½	0·125	—	0·250	0·350	0·125	0·21	0·15
2 × 2	0·175	—	0·300	0·400	0·175	0·24	0·17
2½ × 2½	0·250	0·375	0·500	0·500	0·200	0·27	0·19
3 × 3	0·250	0·375	0·500	0·525	0·250	0·30	0·21
3½ × 3½	0·300	0·425	0·500	0·575	0·275	0·33	0·23
4 × 4	0·300	0·425	0·500	0·625	0·300	0·36	0·25
6 × 6	0·450	—	0·625	0·775	0·425	0·48	0·34
8 × 8	0·550	—	0·750	0·950	0·550	0·60	0·42

In the complete table sixteen sizes are given. All sizes are in inches.

UNEQUAL ANGLES (Fig. 12).

Size. A × B	Standard Thickness. Minimum. t	Mean. t	Maximum t	Maximum Thickness rolled.	Minimum Thickness rolled.	Radii. Root. r_1	Toe. r_2
2 × 1½	0·175	—	0·300	0·375	0·150	0·23	0·16
3 × 2	0·250	0·375	0·500	0·500	0·200	0·27	0·19
3½ × 2½	0·250	0·375	0·500	0·525	0·250	0·30	0·21
4 × 3	0·300	0·425	0·500	0·575	0·275	0·33	0·23
5 × 4	0·375	—	0·500	0·650	0·325	0·39	0·27
6 × 4	0·375	—	0·500	0·700	0·350	0·42	0·29
8 × 4	—	—	0·625	0·775	0·425	0·48	0·34
9 × 4	—	—	0·650	0·825	0·450	0·51	0·36
10 × 4	—	—	0·675	0·850	0·475	0·54	0·38

In the complete table twenty sizes are given. All sizes are in inches.

T BARS (Fig. 13).

Size. Flange × Web. B × A	Standard Thickness. Minimum. t	Mean. t	Maximum. t	Radii. Root. r_1	Toe. r_2
1 × 1	0·125	0·187	—	0·18	0·13
1½ × 1½	0·187	0·250	—	0·21	0·15
2 × 2	0·250	0·312	0·375	0·24	0·17
2½ × 2½	0·250	0·312	0·375	0·27	0·19
3 × 3	0·312	0·375	0·437	0·30	0·21
4 × 3	0·375	0·500	—	0·30	0·21
5 × 4	0·500	0·625	—	0·39	0·27
6 × 4	0·500	0·625	—	0·42	0·29
6 × 6	0·500	0·625	—	0·48	0·34

In the complete table ten sizes are given. All sizes are in inches.

BULB ANGLES (Fig. 14).

Size.	Standard Thickness.		Max. Web Thickness rolled.	Min. Web Thickness rolled.	Radii.			Bulb.
	Web.	Flange						
A × B	t_1	t_2	t_1	t_1	r_1	r_2	r_3	d
4×2½	0·26		0·46	0·21	0·42	0·21	0·16	0·52
5×2½	0·30		0·50	0·25	0·42	0·21	0·20	0·65
6×3	0·33		0·54	0·28	0·48	0·24	0·24	0·78
7×3	0·38		0·59	0·33	0·48	0·24	0·28	0·91
8×3	0·40		0·61	0·35	0·48	0·24	0·32	1·04
9×3½	0·43		0·65	0·38	0·54	0·27	0·36	1·17
10×3½	0·45		0·67	0·40	0·54	0·27	0·40	1·30
11×3½	0·48		0·70	0·43	0·54	0·27	0·44	1·43
12×4	0·50		0·73	·45	0·60	0·30	0·48	1·56
15×4	0·57		0·82	0·52	0·60	0·30	0·60	1·95

In the complete table eighteen sizes are given. All sizes are in inches.

BULB PLATES (Fig. 15).

Size.	Standard Thickness.	Maximum Thickness rolled.	Minimum Thickness rolled.	Radius.	Bulb.
A	t				a
7	0·35	0·45	0·275	0·28	0·91
10	0·50	0·625	0·375	0·40	1·30

The above table is complete. All sizes are in inches.

CHANNELS (Fig. 16).

Size.		Calculated Weight per Foot in Lbs.	Standard Minimum Thickness.		Radii.	
			Web.	Flange.	Root.	Toe.
A	B		t_1	t_2	r_1	r_2
3	1½	4·60	0·20	0·28	0·30	0·15
4	2	7·09	0·24	0·31	0·36	0·18
5	2½	10·22	0·25	0·38	0·42	0·21
6	3	12·41	0·25	0·38	0·48	0·24
7	3	14·22	0·26	0·42	0·48	0·24
8	3½	20·21	0·32	0·52	0·54	0·27
9	3½	22·27	0·34	0·54	0·54	0·27
10	3½	24·46	0·36	0·56	0·54	0·27
12	3½	25·25	0·35	0·50	0·54	0·27
12	4	31·33	0·40	0·60	0·60	0·30
15	4	36·37	0·41	0·62	0·60	0·30
17	4	44·34	0·48	0·68	0·60	0·30

In the complete table eighteen sizes are given. All sizes are in inches.

The alterations from the original to the revised sections given in this and the preceding page will take place, particularly in the larger sizes, only as the rolls wear out, or break, and thus require replacing. For some time, therefore, it will be necessary to enquire as to sections available.

A. GIRDER SECTIONS (Fig. 17).

Reference Number.	Size.		Approx. Weight per Foot in Lbs.	Standard Thickness.		Radii.	
				Web.	Flange.	Root.	Toe.
	A	B		t_1	t_2	r_1	r_2
NBSB 1	3	1½	4	0·16	0·249	0·25	0·12
,, 2	4	1⅝	5	0·17	0·239	0·27	0·13
,, 3	4½	2	7	0·19	0·322	0·29	0·14
,, 4	5	2½	9	0·20	0·347	0·33	0·16
,, 5	6	3	12	0·23	0·377	0·37	0·18
,, 6	7	3½	15	0·25	0·398	0·41	0·20
,, 7	8	4	18	0·28	0·398	0·45	0·22
,, 8	9	4	21	0·30	0·457	0·45	0·22
,, 9	10	4½	25	0·30	0·505	0·49	0·24
,, 10	12	5	30	0·33	0·507	0·53	0·26
,, 11	13	5	35	0·35	0·604	0·53	0·26
,, 12	14	5½	40	0·37	0·627	0·57	0·28
,, 13	15	6	45	0·38	0·655	0·61	0·30
,, 14	16	6	50	0·40	0·726	0·61	0·30
,, 15	18	6	55	0·42	0·757	0·61	0·30
,, 16	20	6½	65	0·45	0·820	0·65	0·32
,, 17	22	7	75	0·50	0·834	0·69	0·34
,, 18	24	7½	90	0·52	0·984	0·73	0·36

B. HEAVY BEAMS AND PILLARS (Fig. 17).

NBSHB 1	4	3	10	0·24	0·347	0·37	0·18
,, 2	5	4⅛	20	0·29	0·513	0·49	0·24
,, 3	6	5	25	0·33	0·561	0·53	0·26
,, 4	8	6	35	0·35	0·648	0·61	0·30
,, 5	9	7	50	0·40	0·825	0·69	0·34
,, 6	10	6	40	0·36	0·709	0·61	0·30
,, 7	10	8	55	0·40	0·783	0·77	0·38
,, 8	12	8	65	0·43	0·904	0·77	0·38
,, 9	14	8	70	0·46	0·920	0·77	0·38
,, 10	16	8	75	0·48	0·938	0·77	0·38
,, 11	18	8	80	0·50	0·950	0·77	0·38


The above tables are complete. All sizes are in inches.

For a considerable time the majority of the above sections will not be available, owing to the cost of providing the sets of rolls required for each size, and it will be necessary to utilise the present sections. For particulars of these present available sections of beams, a reference should be made to the table on p. 312, where all present British Standard Beams are marked BSB 1 to 30.

SECTION VII

JOINTING BEAMS—TENONS—STRUTTING AND PUGGING—STRENGTH AND STIFFNESS OF BEAMS AND POLES—ROOFS AND ROOFING—FLOORS—JOISTS—FIRE-RESISTING FLOORS—EXPANDED METAL—PARTITIONS—STAIRS

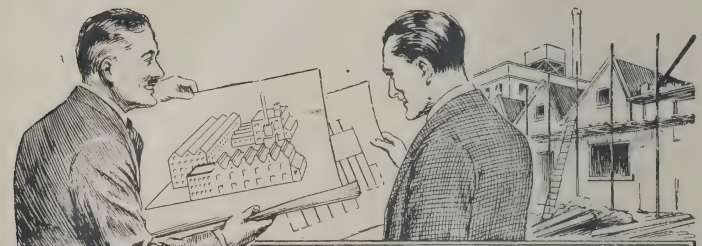(With Contributions by Alexander Drew, M.I.Mech.E., M.C.I., and Reginald Ryves, A.M.Inst.C.E.)



and

RUBEROID ROOFING

Completes the design

ALWAYS specify Ruberoid as the roofing. Lower in prime cost than slates, iron, tiles, zinc, or asphalt, yet it is durable and more reliable. Over and above the wonderful service there is the extra advantage of lightness in weight, which means considerable savings in timber costs. **Ruberoid is an economy from every point of view.** Its record runs back for over 30 years, and it is to-day in use in every town of importance throughout the world on all types of roofs and buildings. Avoid imitations.



Catalogue and Samples FREE.

THE RUBEROID COMPANY LIMITED,
81 Knightrider Street, London, E.C. 4.

SECTION VII

JOINTING BEAMS—TENONS—STRUTTING AND PUGGING—STRENGTH AND STIFFNESS OF BEAMS AND POLES—ROOFS AND ROOFING — FLOORS — JOISTS — FIRE-RESISTING FLOORS — EXPANDED METAL — PARTITIONS —STAIRS.

JOINTING BEAMS.

Fishing.

To resist Tension.—For lengthening ties a plain fished joint is most economical for labour and material. The two ends of the beams are butted together, and secured on each side by means of bolts, as shown by fig. 414, which shows the fishing of a 6-in. × 4-in. beam with an iron plate on one side and a wooden plate on the other, the bolts being 1 in. in diameter with 1½-in. heads, and the washers 2½ ins. × ¼ in.

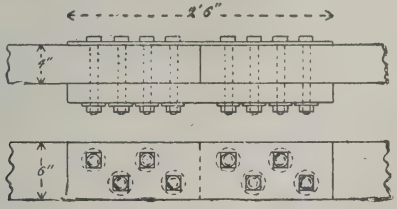


FIG. 414.

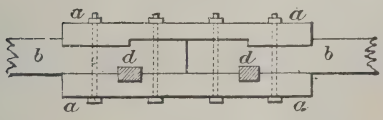


FIG. 415.

Another method is shown by fig. 415.

In this method, in order to relieve the strain on the bolts, the beam is indented or tabled as shown on upper side, or joggles or keys, *d*, *d*, are inserted. In either case the effective area is reduced by the indents or keys. The joint sectional area of the fish-pieces, *a*, *a*, should equal that of the beam, *b*. The joint sectional area of bolts should be at least one-fifth that of timber minus bolt-holes. Bolts are better square than round. Large washers should be under bolt-heads and nuts; for oak the washers should be 2½ times diameter of bolt, and for fir 3½ times.

Scarfing.

To resist Compression (fig. 416).—The bearing surfaces, *e*, *e*, should always be perpendicular to compressing force. Fig. 417 is a more elaborate form.



FIG. 416.



FIG. 417.

The lengths of scarfs should bear the following proportions to the depth :—

Wood.	Without Bolts.	With Bolts.	Bolts and Indents Combined.
Hard wood (oak, ash, elm) . .	6	3	2
Fir and straight-grained woods .	12	6	4

The sum of the depths of the indents should equal $1\frac{1}{2}$ depth of beam.

If assisted by fish-plates, it may be equal to the strength of a simple fished joint, which is as strong as the tie itself, less one rivet hole ; and no advantage is gained by making the joint complicated, but it should be formed similar to that shown by fig. 416.

To resist Tension.—Fig. 418 is often used. It will hold without bolts or straps. At *c* a key or joggle of hard wood is inserted, wedged in so as to tighten the joint moderately ; depth of key




FIG. 418.




FIG. 419.

one-third depth of beam. This joint has only one-third the strength of solid timber tie ; it may be increased by bolting an iron fish-plate on each side, as in fig. 419.




FIG. 420.

To resist Compression and Tension.—Fig. 420 is suitable. The wedges at *c* are only required when bolts are to be added, in which case they are used to bring the parts together before the bolts are inserted, in order to prevent violent strains on the latter.

To resist Cross Strains.—Fig. 421 is the best. The joint at *a*, being in compression, should be kept square ; the lower, having to resist tension, may be oblique. There should be as great a thickness as possible at *b c*. To resist cross-strain, the scarf is strongest when made vertical, *i.e.*, the pressure in the figure being at right angles to the paper.



FIG. 421.



FIG. 422.

To resist Cross Strain and Tension.—The resistance to tension is given by indenting the beam and inserting wedges, as shown in fig. 422.

T Joint.

A very effective method of securing two pieces of wood, A and B, at right angles to each other, is to insert in a mortice hole in B a piece of aluminium *a* which has been drilled with a hole into which an ordinary wood screw *s* is forcibly screwed. The aluminium being comparatively soft enables the wood screw to readily work its way through the hole, whilst it forms a nut which enables the screw to be very tightly screwed up.

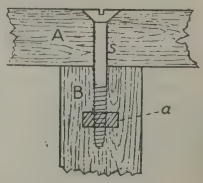


FIG. 422A

Building-up.

For building-up or joggling beams the method shown by fig. 423 may be adopted. This figure shows a portion of a 9 × 18-inch beam, 22 feet long, formed of two 9 × 9-inch beams secured

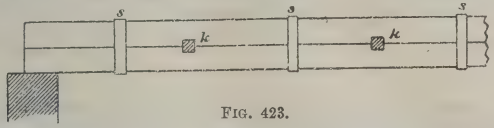


FIG. 423.

by wrought-iron straps, *s*, *s*, *s*, each 2 × $\frac{5}{16}$ inches; keys, *k*, each 2 × 2 inches, prevent the two pieces of which the beam is formed from sliding on one another.

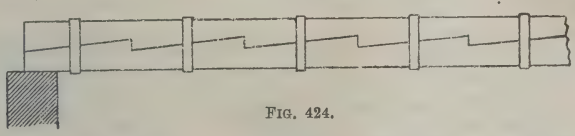


FIG. 424.

Fig. 424 shows a similar beam with the two halves indented the one into the other so as to prevent sliding.

Mortise and Tenon.



FIG. 425.

Mortising Upright into Horizontal.—The tenon, T (fig. 425), is usually one-third breadth of vertical. The pin-hole, if any, is generally placed at one-third length of tenon from shoulder, *s s*, and its diameter=one-fourth thickness of tenon. The mortise is made a little deeper, so that the shoulder may bear well; *r* is the *root*; C, C are the *abutment cheeks*.

Mortising Horizontal Beams.—The tenon is a projection from the end of the cross-beam, fitting closely into a mortise cut in the side of the main beam. It should be at the middle of its depth, so that the centre of the mortise may be at the neutral axis. Practically its lower edge is generally *on* the neutral axis.

Shouldered or Tusk Tenon.

To keep a cross-beam steady in its position a tenon requires length; to bear its share of load it requires depth; but a tenon long and deep would weaken the main beam too much. To avoid this a shouldered tenon is used. G (fig. 426) is the girder of a floor, B the binding joist, *a* the shoulder, *b* the tenon. The shoulder penetrates the girder about one-sixth depth of joist. Depth of tenon about one-sixth depth of joist; length about twice its depth, or it may be carried right through a thin girder and pinned, as in the case of a trimmer running into a trimming joist. Care should be taken that both tenon and shoulder bear exactly. Tredgold says the tenon should be one-third depth of joist above its lower edge. It should be, however, in the neutral axis.



FIG. 426.

Post and Beam Joints.—To frame a horizontal beam into the side of post the 'shouldered tenon' is used, but the long tenon should be on edge or have its narrowest dimensions horizontal.

When the beam rests on the top of the post, a small tenon in centre of post may fit into mortise on the under side of the beam. Or the post may fit into a shallow rectangular notch in beam, the notch being divided into two parts by a *bridle* left uncut in the middle of the notch, about one-fifth breadth of beam.

Wedges.

When the end of the tenon is seen, it is kept tight by driving wedges of hard wood dipped in glue or white-lead between tenon and sides of mortise. When end of tenon is not seen, small wedges, called *fox wedges* (fig. 427), are inserted in saw cuts in end of tenon; when tenon is driven home, they enter and expand it. The mortise is dovetailed or made slightly wider at bottom. This joint, when properly made, has the advantage that the post or style shrinks towards the shoulder and not away from it, and for this reason is sometimes employed for first-class work.



FIG. 427.

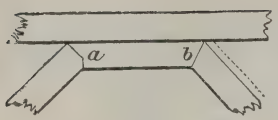


FIG. 428.

Joint of Straining-Beam.

In oblique joints under compression the joint should be either perpendicular to one piece, as at *a* (fig. 428), or bisect the angle, as at *b*; the latter is the best in the case given in the figure. With a thicker strut at *b* it would be as shown by the dotted line.

Joints in carpentry should have white-lead applied with a brush over the surface forming the joint.

Strutting.

Joists laid with boards on top, and lath and plaster underneath, are not found to be sufficient to prevent bending and vibration under pressure. To remedy this, which is injurious to walls and to timber, strutting is placed in straight, continuous rows, at intervals not more than 4 feet apart, which reduces to a great extent the defect.

The following are three methods of strutting :—

Herring-bone Strutting.—This consists of pieces about 2 inches square fixed as shown in fig. 429.

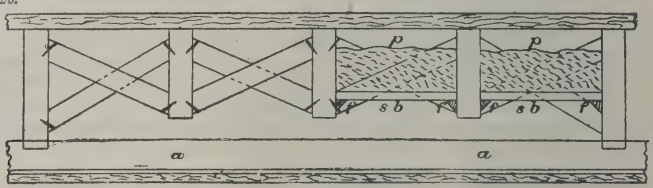


FIG. 429.

It is usual, instead of boring holes for nails, to make a saw cut at ends, and through this channel to drive the nail. By doing this any danger of splitting is avoided. This method has the recommendation that it acts where its leverage to prevent bending is greatest, viz., at the edges of joists, and is used largely in dwelling-houses.



FIG. 430.

Solid Strutting.—1 or 1½-inch boards, nearly the same depth as joists, are cut in tightly, and nailed between joists, as in fig. 430. This method is largely used for floors of factories and heavy buildings; and if cut so that the entire shoulder butts against the joists, is undoubtedly the firmest method; but unless care is exercised, the shoulders are apt to bite on the centre only. Sometimes long bolts, either of round bar or gaspipe, are passed through all the joists, and the strutting squeezed together with the joists and held tightly.

Key Strutting.—In this method struts are tenoned at their ends, and pass through mortises cut in the joists, and are secured with wooden keys. The method is expensive, weakens the joist, and altogether is a defective and unsatisfactory arrangement.

Pugging.

To prevent sound, sound-boarding, *s b* (fig. 429), is supported by fillets, *f*, *f*, cut diagonally out of 2-inch × 1½-inch stuff nailed to bridging joists half-way between floor-boards and ceiling joist, *a*, *a*; over these pugging, *p*, *p*, of coarse plaster about 1½ inch thick is put. Dry moss or a mixture of lime mortar, earth, and smith's ashes, or chopped straw, is sometimes used instead of plaster. Strips of felt are sometimes placed between the joists and boarding to deaden sound.

Strength and Stiffness of Beams and Poles.

b = breadth, d = depth, L = span.

Strength of Rectangular Beams.—For fir, safe distributed dead load, in cwts.

$$= \frac{bd^2 \text{ in inches}}{\text{L in feet}}.$$

For cedar and mahogany, about the same load as for fir.

For larch	¾	Above load for fir.
For beech, Dantzic oak	1½	
For English oak, ash	1½	
For teak	1¾	
For greenheart	2	

This formula gives a theoretical factor of safety of about 8; the practical factor of safety for large scantlings is about 5.

Strength of Circular Poles is $\frac{6}{10}$ strength of square beam, diameter of pole being equal to side of square.

Stiffness of Beams and Poles.—When the beam or pole is loaded with the safe load given above the deflection will be about $\frac{1}{50} \cdot \frac{\text{L}^2 \text{ in feet}}{d \text{ in inches}}$ for fir, oak, mahogany; for teak, about half that for fir.

Deflection of Beams.

In timber beams for permanent purposes, supported or fixed at both ends, the deflection usually allowed is $\frac{1}{450}$ inch per foot run; $\frac{1}{450}$ for those fixed at one end.

$$\text{V} = \frac{n\text{W}c^3}{e\text{I}},$$

where

V = deflection in inches, W = load in pounds, c = length in inches for beams fixed at one end, half length if supported or fixed at both ends; I = moment of inertia, e = modulus of elasticity (page 263)

Description.	Value of n.		
	Uniform Cross Section.	Uniform Strength and Depth.	Uniform Strength and Breadth.
Fixed at one end, loaded at other	$\frac{1}{3}$	$\frac{1}{2}$	$\frac{2}{3}$
" " loaded uniformly	$\frac{1}{8}$	$\frac{1}{4}$	$\frac{1}{2}$
Supported at both ends, loaded in middle	$\frac{1}{6}$	$\frac{1}{4}$	$\frac{1}{3}$
" " loaded uniformly	$\frac{5}{48}$	$\frac{1}{8}$	·1427
Fixed at both ends, loaded in middle	$\frac{1}{24}$		
" " loaded uniformly	$\frac{1}{48}$		

In the case of a beam of uniform strength, fixed at both ends and loaded at a point distant a_1 from one end and a_2 from the other, the deflection at point of application of load is—

$$\text{V} = \frac{(a_1 a_2)^2 \text{W}}{6e\text{I}c}.$$

The greatest deflection is at a point distant from one end $= a_2 - \sqrt{\frac{1}{3}a_2(a_2 - 2a_1)}$, a_2 being the larger division.

TABLE OF MOMENTS OF INERTIA.

Section of Beam.	I =	Section of Beam.	I =
Rectangular and square	$\frac{bd^3}{12}$	Ellipse, vertical semiaxis a, horizontal c	$\frac{\pi}{4}ca^3$
" hollow, $bd - b_1d_1$, also I-shaped section, where d_1 = depth of hollow parts, b_1 = sum of breadths of hollow parts	$\frac{bd^3 - b_1d_1^3}{12}$	Ellipse, hollow	$\frac{\pi}{4}(ca^3 - c_1a_1^3)$
		Semicircle standing with semicircular part up or down	·11r^6
Circle, radius r	$\frac{\pi}{4}r^4$	Isosceles triangle, base = b, height = d, standing on either base or apex	$\frac{bd^3}{36}$
" hollow	$\frac{\pi}{4} \cdot (r^4 - r_1^4)$		

All dimensions in inches; $\pi = 3{\cdot}1416$.

ROOFS.

Weight of Components of Roofs.

	Per Square Foot.
Lead covering, including laps, but not boarding or rolls	5½ lbs. to 8½ lbs.
Zinc „ „ „ 14 to 16 zinc gauge	1½ „ „ 1¾ „
Corrugated iron, galvanised, 16 W.G.	3½ „
„ „ „ 18 W.G.	2½ „
„ „ „ 20 W.G.	2 „
Sheet iron, 16 W.G.	2½ „
„ „ 20 W.G.	1½ „
Slating laid with a 3-inch lap, including nails but not battens or iron laths :	
Doubles, 13 inches × 6 inches, at 18 cwt. per 1,200	8¼ „
Ladies, 16 inches × 8 inches, at 31·5 cwt. per 1,200	8¼ „
Countesses, 20 inches × 10 inches, at 50 cwt. per 1,200	8 „
Duchesses, 24 inches × 12 inches, at 77 cwt. per 1,200	8½ „
Tiles, plain, 11 inches × 7 inches, laid with a 3-inch lap, and pointed with mortar, including laths and absorbed rain	18 „
„ pan, 13½ inches × 9½ inches, laid to 3-inch lap, and pointed with mortar, including laths and rain	12 „
„ Broomhall, laths excluded, rain included	8½ „
„ Italian (ridge and furrow), not including the boarding, but including the mortar and absorbed rain	14 „
Slate battens, 3½ inches × 1 inch :	
For doubles	2 „
For countesses	1¼ „
Slate boarding, ¾ inch thick	2½ „
„ „ 1 inch thick	3½ „
„ „ 1¼ inch thick	4¼ „
Wrought-iron laths, angle irons :	
For duchess slates	2 „
For countess slates	1¾ „
Cast-iron plates, ⅜ inch thick	15 „
Thatch, including battens	6½ „
Felt, asphalted	3 „
Ruberoid	¼ lb. to ½ lb.
Lath-and-plaster ceiling	8 lbs.
Ceiling joists	3 „
Common rafters	3 „
Collar beams	2 „

Framing for wooden roofs, including purlins and ridge boards, but exclusive of tie beams :			
20 feet span, king post, rise one-fourth span	2 lbs. per foot super.		
30 „ „ „ „	2 „	„	„
40 „ queen post „ „	2 „	„	„
50 „ „ „ „	3 „	„	„
60 „ „ „ „	4 „	„	„
Tie beams : 20 feet span, king post	11 lbs. per foot run of tie.		
30 „ „	20 „	„	„
40 „ queen post	18 „	„	„
50 „ „	20 „	„	„
60 „ „	30 „	„	„

Angles of Roofs for Different Coverings.

Kind of Covering.	Inclination to the Horizon.	Height of Roof in Parts of Span.	Kind of Covering.	Inclination to the Horizon.	Height of Roof in Parts of Span.
	° ′			° ′	
Copper	3 50	$\frac{1}{30}$	Thin slabs of stone or flags	29 41	$\frac{2}{7}$
Lead	3 50	$\frac{1}{30}$	Pantiles	24 0	$\frac{3}{8}$
Zinc	4 0	$\frac{1}{25}$	Thatch of straw, &c.	45 0	$\frac{1}{2}$
Slates, large	22 0	$\frac{1}{8}$	Plain tiles	45 0	$\frac{1}{2}$
„ ordinary	26 33	$\frac{1}{4}$	Ruberoid	3 50	$\frac{1}{30}$
Asphalted felt	3 50	$\frac{1}{30}$			



The British Roofing

'ROK' Roofing is made in Britain by British workmen, and is characteristic of British thoroughness.

For works and factories it has no equal. It is impervious to chemical action, whereas iron deteriorates rapidly under fumes. It will outlast iron and is cheaper than slates or tiles.

It is absolutely weather-proof in all climates and under all conditions, it ensures an even temperature, being a perfect non-conductor, and it is permanent, needing no annual tarring or other coating.

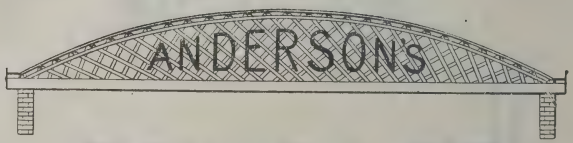
When you buy the BRITISH you buy the BEST—'ROK' is the BRITISH Roofing.

Write a postcard for the illustrated 'ROK' Booklet and keep it by you for reference.

D. ANDERSON & SON, Ltd.,
Lagan Felt Works - - - Belfast
and Roach Road Works, Old Ford, London, E.3.
and at Manchester.

See Pages 337-338.

THE RED HAND  TRADE MARK.



'BELFAST'

ROOFS



COVERED WITH

'ROK' ROOFING

More durable than Iron. Acid and Alkali proof. Clear Span ——— up to 100 feet. ———

Illustrated Catalogue Post Free on Application

D. ANDERSON & SON, LTD.

Dept. 7. Lagan Felt Works, Belfast
ROACH ROAD WORKS, OLD FORD, LONDON, E.3.
and at Manchester.

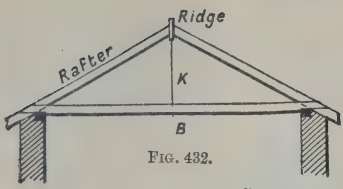


FIG. 432.

Single-span or Couple Roof.

May be used when walls can take the thrust without spreading; when they cannot, insert 4″ × 1″ binders as B (fig. 432), or $\frac{5}{8}$′ iron ties, at about 10′ intervals, supported by a light iron king rod (K).

SCANTLINGS FOR COUPLE ROOFS.

Pitch up to 30°, with countess slates on 1″ boards.

Span.	Rafter.	Ridge Board.	*Ceiling Joist.	Span.	Rafter.	Ridge Board.	*Ceiling Joist.
Feet.	Inches.	Inches.	Inches.	Feet.	Inches.	Inches.	Inches.
8	3 × 2	7 × 1½	4 × 2	14	4½ × 2	7 × 1½	7 × 2
10	3½ × 2	7 × 1½	5 × 2	16	5 × 2	8 × 1½	8 × 2
12	4 × 2	7 × 1½	6 × 2	18	5½ × 2	8 × 1½	9 × 2

Collar-beam Roof.

Ceiling carried on under side of rafter and collar; collar best placed half-way up rafter; used for roofs up to 18′ span, under the same conditions as to wind, walls, and ties as given for couple roofs (fig. 433).

The rafters are nailed to ridge-piece and bird's-mouthed over wall-plate, 1′ apart in the clear, or from centre to centre on very exposed sites.

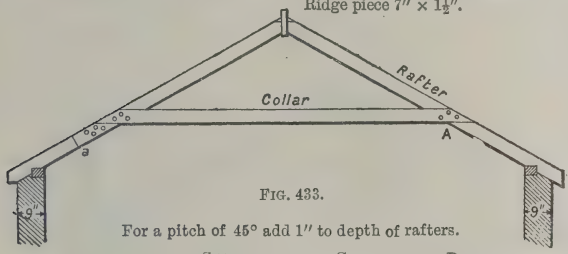


FIG. 433.

For a pitch of 45° add 1″ to depth of rafters.

SCANTLINGS FOR COLLAR-BEAM ROOFS.

Pitch up to 30°. If 45°, add 1″ to depth of rafters.

Span in Feet.	Rafters. For Countess Slates on ¾″ Boards, 1′ clear apart, or centre to centre if very exposed Site.				Collars.	
	† Thrust taken by Walls or Ties, Collars ½ way up.		‡ Tied by Collars ¼ way up to prevent Walls spreading.		From ¼ to ½ way up.	At any Height.
	No Ceiling.	Ceiled to Collars.	No Ceiling.	Ceiled to Collars.	No Ceiling.	Ceiled to Collars.
	Inches.	Inches.	Inches.	Inches.	Inches.	2″ wide × ½″ added to ½″ for every foot run of clear length of underside of collar.
8	1½ × 2½	1⅝ × 3	2¼ × 3¼	2¼ × 3¾	1¾ × 2½	
10	1⅝ × 2½	1⅝ × 3	2¼ × 4	2¼ × 4½	2 × 2½	
12	1⅝ × 2¾	1⅝ × 3½	2¼ × 4½	2¼ × 5	2 × 2⅝	
14	1⅝ × 3	1⅝ × 3½	2½ × 5	2½ × 5½	2 × 3	
16	2 × 3½	2 × 3⅝	2½ × 5½	2½ × 6	2 × 3½	
18	2 × 3¾	2 × 4¼	2½ × 6	2½ × 6½	2 × 4	

* When used they act as ties, B (fig. 432), but without K. † Halve these collars on to rafters without cutting into latter. ‡ These rafters allow of the tension joint (fig. 434, page 330). If the collar is required halfway up, about one-fourth must be added to both breadth and depth of rafters, and ¾ in. to depth of collars. But with unstable walls, ties are far cheaper, and may be at long intervals if secured to wall-plates of sufficient width to take the thrust between the ties.

Fastenings of Collar-beam Roof.—Collars should never cut into rafters unless acting as ties; even then, the rafter being weakened at its weakest point, it has to be strengthened. If the walls, or plates can take the thrust, the collars are struts, and under transverse stress if ceiled. Collar roofs to wooden huts constantly push out the walls, owing to the wall-plate or top sill not being stiff enough. Fig. 434 shows method of fastening collar C to rafter R, when collar acts as a tie,

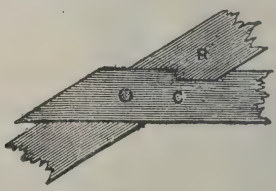


FIG. 434.

and, whether ceiled or not, it is better than a dove-tail; the collar and, rafter are both notched about $\frac{1}{3}''$. When collar is a strut it may be halved on, as at A (fig. 433, p. 329); when intended also to be ceiled it should, in addition, rest on a bearer spiked to side of rafter, as at *a* (fig. 433, p. 329), the rafter being uncut in either case. The rafters abut on the ridge, and are nailed to it. They are bird's-mouthed on to wall-plate.

King-Post Roof.

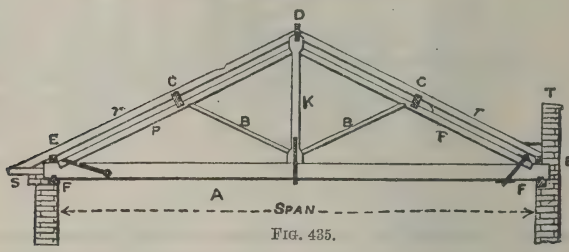


FIG. 435.

Used for spans from 20′ to 30′ (fig. 435).

A, tie-beam; B, braces or struts; C, purlins; D, ridge-board; E, pole-plate; F, wall-plate K, king post; P, principal rafter; *r*, small or common rafter; S, eaves boarding; T, parapet.

SCANTLINGS FOR KING-POST ROOFS.

Span.	Tie Beam. A.	King Post. K.	Principal Rafters. P.	Braces. B.	Purlins. C.	Common Rafters. *r*.	Ridge. D.	Pole-plate. E.
Feet.	Inches.	Inches.	Inches.	Inches.	Inches.	Inches.	Inches.	Inches.
20	$9\frac{1}{2} \times 4$	4×3	4×4	$3\frac{1}{2} \times 2$	$8 \times 4\frac{3}{4}$	$3\frac{1}{2} \times 2$	6×2	4×4
22	$9\frac{1}{2} \times 5$	5×3	5×3	$3\frac{3}{4} \times 2\frac{1}{4}$	$8\frac{1}{2} \times 5$	$3\frac{3}{4} \times 2$	6×2	4×4
24	$10\frac{1}{2} \times 5$	$5 \times 3\frac{1}{2}$	$5 \times 3\frac{1}{2}$	$4 \times 2\frac{1}{2}$	$8\frac{1}{2} \times 5$	4×2	7×2	4×4
26	$11\frac{1}{2} \times 5$	5×4	$5 \times 4\frac{1}{2}$	$4\frac{1}{2} \times 2\frac{1}{2}$	$8\frac{1}{2} \times 5$	$4\frac{1}{2} \times 2$	8×2	4×4
28	$11\frac{1}{2} \times 6$	6×4	$6 \times 3\frac{1}{2}$	$4\frac{1}{2} \times 2\frac{3}{4}$	$8\frac{3}{4} \times 5\frac{1}{4}$	$4\frac{1}{2} \times 2$	8×2	4×4
30	$12\frac{1}{2} \times 6$	$6 \times 4\frac{1}{2}$	6×4	$4\frac{3}{4} \times 3$	$9 \times 5\frac{1}{2}$	$4\frac{3}{4} \times 2$	8×2	4×4

Trusses, 10′ apart; angle of roof, 26° 33′; covering, slate; wood, Baltic pine.

Wall-plates, F, $4'' \times 4''$ to $5'' \times 4''$; if the trusses are over openings the wall-plates should be increased.

Queen-Post Roof.

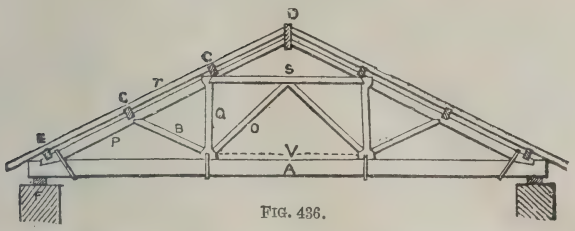


FIG. 436.

Used for spans over 30 and up to 46 feet (fig. 436). The braces, O, are generally omitted, and a straight straining-sill placed at V.

SCANTLINGS FOR QUEEN-POST ROOFS.

Span.	Tie Beam. A.	Queen Posts. Q.	Principal Rafters. P.	Straining Beam. S.	Braces. B.	Purlins. C.	Common Rafters. r.	Ridge. D.	Pole-plate. E.
Feet.	Inches.	Inches.	Inches.	Inches.	Inches.	Inches.	Inches.	Inches.	Inches.
32	10 × 4½	4½ × 4	5 × 4½	6¾ × 4½	3¾ × 2¼	8 × 4¾	3½ × 2	6 × 2	4 × 4
34	10 × 5	5 × 3½	5 × 5	6¾ × 5	4 × 2½	8¼ × 5	3¾ × 2	6 × 2	4 × 4
36	10½ × 5	5 × 4	5 × 5¾	7 × 5	4¼ × 2½	8½ × 5	4 × 2	6 × 2	4 × 4
38	10 × 6	6 × 3¾	6 × 6	7¼ × 6	4½ × 2½	8½ × 5	4 × 2	6 × 2	4 × 4
40	11 × 6	6 × 4	6 × 6	8 × 6	4½ × 2½	8¾ × 5	4¼ × 2	7 × 2	4 × 4
42	11½ × 6	6 × 4½	6¼ × 6	8¼ × 6	4½ × 2¾	8¾ × 5¼	4½ × 2	7 × 2	4 × 4
44	12 × 6	6 × 5	6½ × 6	8½ × 6	4½ × 3	9 × 5	4¾ × 2	8 × 2	4 × 4
46	12½ × 6	6 × 5½	7 × 6	9 × 6	4¾ × 3	9 × 5½	5 × 2	8 × 2	4 × 4

Trusses, 10 apart; pitch of roof, 26° 33′, or ½; countess slates; timber, Baltic pine.
Wall-plates, F, 5″ × 4″ to 6″ × 4″; more if trusses are over openings.

Common Rafters.

12″ from centre to centre, or apart if not very exposed site.

Bearing in Feet.	Breadth in Inches.				
	1¾	2	2¼	2½	3
	Depth in Inches.	Depth in Inches.	Depth in Inches.	Depth in Inches.	Depth in Inches.
5	3	2⅞	2¾		
6	3¼	3⅛	3¼	3½	
8	4⅜	4⅝	4⅜	4½	4
10	6	5¾	5½	5⅝	5
12	7	6¾	6½	6⅝	6
14	8¼	8	7¾	7½	7
16	9½	9¼	8¾	8½	8
18	10½	10½	10	9½	9
20	11¾	11½	11	10½	10

Thin and deep rafters most economical; should not be thinner than 1¾″ to 2″, or may split when boards are nailed to them. For stone or tile covering should be one-third stronger.

Joints of Wooden Roofs.

Joint at Foot of Principal Rafter (fig. 437).—Wood, Northern pine, *i.e.* red fir; rafter, $4'' \times 5''$; tie, $10'' \times 4''$; *ad*, $3''$; tenon, $\frac{1}{3}$ width of rafter.

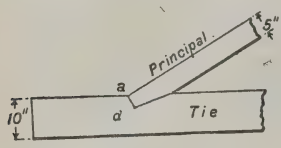


FIG. 437.

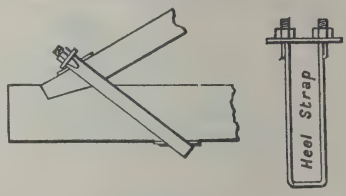


FIG. 438.

Iron Straps to Wood Roofs (fig. 438).—When longest unsupported part of tie beam

= 10 feet, strap should be . . . . . $1\frac{1}{2}'' \times \frac{3}{8}''$;
= 15 feet, " " . . . . . $1\frac{1}{2}'' \times \frac{1}{2}''$;
= 20 feet, " " . . . . . $2'' \times \frac{1}{2}''$.

The straps at the feet of the principal rafters may be of the same section as that for supporting the tie beam; a width less than $1\frac{1}{2}''$ is liable to cut into the fibres of the wood.

The strap in small roofs is generally fixed as shown on left-hand side of fig. 438.

Purlin.—Should be in pieces as long, and as nearly over strut B, as possible (fig. 439). The purlin, C, is notched over principal rafter, P, which is cogged to receive it; notches about $1'' \times 1''$. Common rafter, *r*, is notched on to purlin. The strut or brace, B, is tenoned into the principal rafter, P, as shown.

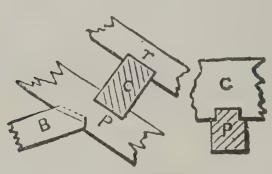


FIG. 439.

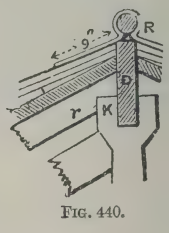


FIG. 440.



FIG. 441.

Ridge Board and Roll.—The ridge board, D (fig. 440), is let into king post, K, as shown. The common rafter, *r*, butts against and is nailed on to ridge board. R shows the ridge roll of wood with lead covering, ridge tiles, or Williams' patent ridge (fig. 441), in two pieces; the ends of the roll butt against each other, and are fixed with white lead, copper dowels, and 2" copper screws.

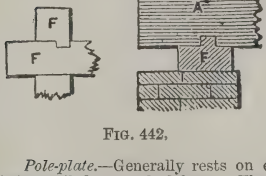


FIG. 442.



FIG. 443.

Wall-plate and Tie Beam.—Fig. 442 shows a wall-plate, F, cogged to receive tie beam, A, which should have a clear space round to prevent rotting. A stone template is sometimes substituted for the wall plate.

F, F, shows joint of wall-plates at angles of buildings, an arrangement which is better than a dovetail.

Rafter bird's-mouthed on to wall-plate or pole-plate, &c., spiked or skew-nailed down to it, is shown by fig. 443.

Pole-plate.—Generally rests on end of tie beam (fig. 435, page 330), or on foot of principal, being nailed or notched down. The position, however, depends upon the nature of the eaves.

King Post.—The king post, K (figs. 435 and 444), suspends the tie beam, with attached ceiling, if any, and also the principals, by means of the braces, B.

The principal rafter should abut square on the king post, as P. When head of post is not sufficiently long for this the joint may be made as P¹. The braces, B, should also abut perpendicularly on the king post. The ends of the principal rafters and braces are mortised into the king post.

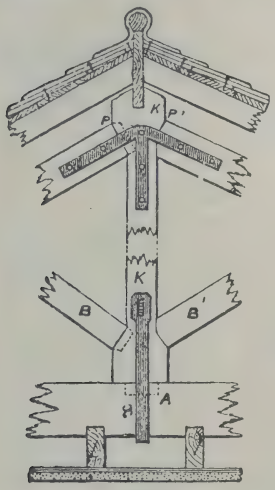


FIG. 444.

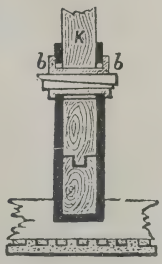


FIG. 445.

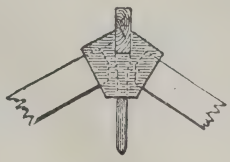


FIG. 446.

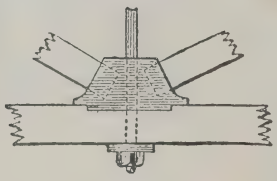


FIG. 447.

The king post is tenoned into the tie beam, A, with a short tenon, and fastened to it by an iron strap or *stirrup* iron. Gibs and cotters, as at *b*, *b* (fig. 445), enable the strap to be raised so as to tighten up the roof.

If a wrought-iron rod is substituted for a king post, its diameter in inches = square root of span of roof in feet × ·02.

Fig. 446 shows cast-iron head to receive rafters, and fig. 447 iron shoe to receive struts; a block of wood is often used for the feet of struts to butt against. When there are no gibs and cotters wedges may be driven in between underside of tie beam and foot of strap to force tie beam against foot of king post.

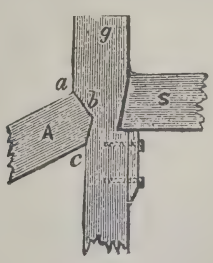


FIG. 448.

Queen Posts.—The abutments of the principal rafter, A, and struts of queen-post roof are the same as for the king-post. Joint of straining beam, S, with queen post, shown in fig. 448. If the head, *g*, of the post is narrow, the end of A should be cut away at an angle, *a b c*, so as to enable it to abut closely against the head; but if the latter is wide enough to admit of it, then the end of A may be cut square. If a wrought-iron rod is substituted for a queen post, diameter in inches = square root of length in feet of that portion of beam supported by queen bolt × ·29.

Pressure of Wind and Weight of Snow on Roofs.

The *Wind Pressure* is usually assumed to be equal to 40 lbs. per foot in cases where the inclination of the roof is 60°; for less angles than this the pressure is taken as follows :—

Inclination	5°	10°	15°	20°	25°	30°	35°	40°	45°	50°	55°	60°
Pressure in lbs. per sq. ft.	5·1	9·6	14·2	18·4	22·6	26·5	30·1	33·3	36·0	38·0	39·4	40·0

The *Weight of Snow* in Great Britain varies from 5 to 11 lbs. per cubic foot. It is not likely to accumulate on roofs to a greater depth than 6 inches; 5 lbs. per superficial foot of horizontal surface covered seems a quite sufficient allowance to make.

In Canada and the United States snow has been found in some instances to weigh as much as 30 lbs. per cubic foot some hours after it has fallen, and an allowance of at least 12 lbs. per superficial foot of horizontal surface covered should be allowed for it.

ROOFING MATERIALS.

Heat-Insulating Value of Roofing Materials.*

A National Physical Laboratory test of roofing by measuring the heat lost from a heated room leads to the remarkable conclusion that the rate of emission of heat by radiation from the covering surface has more effect on the inside temperature than the rate of conduction of heat through the material. This result is of importance in the roofing of large factories of a semi-permanent nature, where the temperature depends more upon the covering than in the case of buildings having a closed air space under the roof.

Old galvanised iron allows more heat to pass than glass, a remarkable result. Slates are good, but in proportion heavy. Deal boarding covered with asphalted felt, though thick, is not so heavy as Welsh slate, and is one of the best insulators. In this case its poor conductivity is evidently not negligible, and in all thick roofing materials it is probably of importance.

HEAT TRANSMITTED THROUGH ROOFING MATERIAL EXPOSED TO STRONG RADIATION.

Material.	Rise of Temperature in Testing Chamber Deg. C. per Minute.	British Thermal Units per 100 sq. ft. per Hour.	Thickness in Inches.	Weight in Pounds per Square Foot.
1. Bright galvanised iron sheet .	0·268	111	0·04	1·6
2. Galvanised iron, blackened below	0·40	108	0·04	1·6
3. Galvanised iron, blackened above	0·93	385	0·04	1·6
4. Galvanised iron, blackened above and below	1·40	581	0·04	1·6
5. Galvanised corrugated iron after one month's exposure to the weather	0·75	310	0·033	1·28
6. Do. one year	1·02	422	0·033	1·28
7. (6) painted black above . .	1·13	472	0·033	1·28
8. Roofing glass, serrated . . .	1·10	453	0·22	2·25
9. Welsh slate	0·81	337	0·17	2·9
10. Westmoreland slate . . .	0·60	248	0·25	4·8
11. ¾-in. T.G. deal covered with asphalted felt	0·30	124	1·0	2·6
12. Corrugated fibrocement after one month in use	0·78	325	0·2	1·8
13. Do. after one year in use . .	0·80	334	0·2	1·8
14. Do. painted dead black . .	0·82	341	0·2	1·8
15. Do. 'aluminium-finished' outside	0·50	207	0·2	1·8
16. Do. laid on top of thin asphalted felt	0·51	211	0·25	2·0

A suggestion was made in the National Physical Laboratory Report that air spaces in roofing materials might be advantageous. A satisfactory means of doing this is to lay corrugated asbestos cement plates on the thinnest asphalted felt or other light sheet material supported by the roof frames. The effect of this is shown by the table to be equal to that of an aluminium surface, and where heat insulation and lightness are of the first importance a strong and efficient roofing can be made in this way at a reasonable cost.

* W. M. Thornton, D.Sc., D.Eng., Armstrong College, Newcastle-on-Tyne; *Engineering*, October 19, 1917.

Bell's Poilite for roofs

Bell's Poilite asbestos-cement Standard tiles give a roof that is fully as durable and strong as the best natural slate roof. They are non-absorbent, fire-resisting and rot-proof, and, because of their light weight, effect great economies in transport, fixing and raftering. A Poilite roof hardens with exposure and is not affected by moisture or frost.

Size—$15\frac{3}{4} \times 15\frac{3}{4}$" for diagonal laying to laps of $2\frac{3}{4}$ up to 4". Approximate number per square, 100 for $3\frac{1}{2}$" lap.

Bell's Poilite corrugated sheets are best adapted for covering with economy of labour the roofs and external walls of large engineering and factory buildings, railway running sheds, breweries and the like, and they can be readily fixed to steel angles or to timber purlins. Their over-all width of 3' $7\frac{1}{4}$" affords a great advantage over corrugated iron sheets, with a standard width of only 27". Further, no painting or treatment of any kind is required to preserve the material. They are light in weight, rot and vermin proof, fire-resisting and non-conductors of heat and electricity.

Bell's United Asbestos Co. Ltd.

Pioneers of the World's Asbestos Industry

Southwark St. London. S.E.1.

Bell's Poilite for walls

Bell's Poilite asbestos-cement flat building sheets are impermeable and fire-resisting, rot and vermin proof, and non-conductors of heat and cold. These qualities render them an ideal material for external and internal linings for walls, partitions and ceilings. They are specially adapted for the ceilings of factories and workshops, entirely obviating the cracks and breakages occurring in plaster ceilings exposed to the vibration of machinery, or to excessive heat or moisture.

Poilite

Bell's Poilite flat building sheets were the first British asbestos-cement building sheets. They are immeasurably superior to plaster or boarding, and are quickly and easily fixed. The appearance of the sheets can be made most attractive by distemper or enamel, and the joints can be covered by wood moulding.



Standard sizes: 8 ft. × 4 ft., 6 ft. × 4 ft., 4 ft. × 4 ft.
$\frac{3}{16}$ in. thick and upwards.

Bell's United Asbestos Co. Ltd.

Pioneers of the World's Asbestos Industry

Southwark St. London. S.E.1.

'Poilite' Roofing Tiles.

'Poilite' is a tough, indestructible and practically unbreakable roofing material manufactured by *Bell's United Asbestos Company, Ltd.*

The constituents are Portland cement with asbestos, the latter being employed in its fiberised form, known as mineral flax, serving the purpose of an aggregate, thereby increasing the initial strength of the cement tenfold.

'Poilite' is produced in specially designed rolling mills, in the form of layers or films of cement and asbestos uniformly distributed and interlaced so as to constitute a species of tough woven fabric. The layers adhere so firmly to each other that, after reaching the mature stage, a 'Poilite' asbestos cement sheet is found on fracture to be void of all stratification or lamination. It will be readily understood that the fibre not only gives the product a pre-eminent degree of incombustibility, resiliency and durability in varying conditions of climate, but also the outstanding advantages of affording immense resistance to transverse mechanical and tensile stresses, which increase in ratio with its age.

The resistance to breakage of 'Poilite' tiles is exceptional. The immense toughness and strength of the tiles eliminates damage or breakage in transit, handling, and fixing. Tensile strength is 5,973 lbs. per square inch; crushing is 7,000 lbs. per square inch.

The weight of 'Poilite' tiles is relatively small, although reaching the necessary degree of resistance they only require to have a thickness of $3\frac{1}{2}$ to 4 millimetres. When laid diagonally, the weight of 'Poilite' roofing is about 22 lbs. per square yard, as compared with 80 lbs. for natural slates and 140 lbs. for ordinary mastic tiles. Lighter framework can therefore be employed when 'Poilite' tiling is used. Rafters can be spaced up to 2 ft. 6 ins. centres.

The tiles are made in terra-cotta and grey colours, and can be cheaply and quickly fixed to closeboarding or wood battens. When fixed diagonally, 85 standard tiles $15\frac{3}{4}$ ins. by $15\frac{3}{4}$ ins. holed for $2\frac{3}{4}$ ins. of lap are required to cover 100 square feet of plain roof area, which is sufficient for roofs with a pitch of 35° and over. For roofs of less pitch the lap should be increased proportionally.

Corrugated Asbestos Cement Sheets ('Poilite' Brand).

These sheets are made to a standard width of 3 ft. $7\frac{5}{16}$ ins., and in various lengths up to 8 ft.; allowing for a horizontal lap of 6 ins. and a side lap of $\frac{1}{2}$ ins., the actual cover of a full size sheet is 7 ft. 6 ins. by 3 ft. $3\frac{5}{16}$ ins. Four sheets will thus practically cover 100 square feet of roof area. In the case of steel framed roofs the sheets are secured to the angle irons with hook-bolts and limpet washers, and on to timber roofs with 3-inch screws and washers.

The weight of material when laid is about 320 lbs. per square.

Purlins can be spaced up to 3 ft. 9 in. centres.

These sheets are especially suitable for covering the roofs of factory buildings, railway and engineering sheds.

'Poilite' Asbestos Cement Building Sheets.

These flat sheets are specially suitable for external and internal wall and ceiling linings.

They are made in standard sizes 4 ft. by 4 ft., 6 ft. by 4 ft., and 8 ft. by 4 ft., from $\frac{3}{16}$ in. thick upwards.

Ceiling sheets $\frac{3}{16}$ in. thick, minimum thickness for walls $\frac{3}{16}$ in. Fire-resisting, damp and vermin proof.

The fire-resisting properties of 'Poilite' are due to the use made of asbestos in its preparation and it is accepted by the L.C.C., County and Borough Surveyors and by Fire Assurance Companies.

'Fibrent' Asbestos-Cement.

'Fibrent,' the registered trade mark for asbestos-cement sheets and slates manufactured by *The British Fibrocement Works, Erith, Kent*, sometimes termed Fibrocement, is a form of concrete or reinforced cement, the mineral fibres fulfilling this function of reinforcement, and the highest grade British Portland cement and specially selected asbestos fibre only being used for the purpose.

'Fibrent' Asbestos-Cement Slates.

These slates, manufactured in diagonal or honeycomb pattern, 12 ins. by 12 ins., $15\frac{1}{2}$ ins. by $15\frac{1}{2}$ ins., and 24 ins. by 24 ins., cut and holed for $2\frac{1}{2}$ ins. or other laps required, are of such compactness that absorption is reduced to approximately a quarter of the weight of water which an ordinary sand-faced roofing tile of good quality and of the same volume would absorb.

By exposure to climatic extremes the slates become absolutely impervious. They are non-conductive of heat or cold, fire resisting to the highest degree, of extreme durability, and possessing considerable elasticity are immune from cracking or scaling under frost or extremes of temperature.

'Fibrent' slates are extremely light, weighing when fixed about 20 lbs. to the square yard, thus great economy may be effected in general roof construction, rafters being spaced at a minimum of 24 ins. to maximum 30 ins. They may be fixed direct to light battens or rough boarding by means of two nails and a copper disc rivet and, invariably, a perfectly satisfactory, inexpensive and effective roof covering is the result. 'Fibrent' has been used upon a number of modern factories where slating is the roof covering with very satisfactory results.

'Fibrent' Asbestos Cement—*continued.*

'FIBRENT' DUCHESS SLATES, size 24 ins. by 12 ins., recently introduced, combine all the advantages of the diagonal or honeycomb patterns, and being fixed with straight cover similar to ordinary natural slates, may be used with quite satisfactory results for private dwelling-houses, etc., the cost of upkeep being reduced to a minimum. They are guaranteed against signs of disintegration during a period of twenty years.

All patterns of 'Fibrent' slates are manufactured in colours grey, red, or blue-black.

'FIBRENT' CORRUGATED ASBESTOS-CEMENT ROOFING AND BUILDING SHEETS,

manufactured upon the principle mentioned above, are the most modern form of product, and combine the advantages of corrugated metallic roofing in point of economy, and in addition they are non-conductive, fire resisting, practically everlasting in their original form, and require no treatment such as painting, etc.

These corrugated sheets are manufactured in lengths 4 ft., 5 ft., 6 ft., 7 ft., 8 ft., 9 ft., or 10 ft., 2 ft. 6 ins. wide, comprising nine 3 in. corrugations, and in standard $\frac{1}{4}$ in. thickness. They are also manufactured to any radius for curved roofs.

'Fibrent' asbestos-cement corrugated sheets are used for roofs upon all classes of commercial and domestic buildings, and are fixed by means of ordinary galvanised drive screws and washers to wood purlins, or by galvanised hook bolts and washers to steel angles, in the same manner as metallic roofing of a similar form.

'FIBRENT' RIDGE TILES,

manufactured in shapes half round, plain angle, or shaped roll, up to 4 ft. lengths, form a very suitable capping for ridge and hips upon all kinds of roofs.

'FIBRENT' FLAT SHEETS

combine all the advantages claimed for the slates and corrugated sheets, and are used with great advantage for external or internal walls, partitions, ceilings, etc. They are fixed by means of ordinary nails, which penetrate quite easily.

The standard sizes of 'Fibrent' flat sheets are 8 ft. by 4 ft., 4 ft. by 4 ft., and 6 ft. by 3 ft.; thicknesses varying from $\frac{1}{8}$ in. to $\frac{1}{2}$ in., intermediate thicknesses being $\frac{5}{32}$ ins., $\frac{3}{16}$ ins., $\frac{1}{4}$ in., $\frac{5}{16}$ in., $\frac{3}{8}$ in. For external walls, where normal strength is required, $\frac{3}{16}$ in. or $\frac{1}{4}$ in. thickness prove perfectly satisfactory, and for internal linings, panels, or walls, $\frac{3}{16}$ in., or for ceilings, $\frac{5}{32}$ in. are most adaptable.

'Fibrent' asbestos-cement flat sheets can be cut to requisite sizes by means of a good hand-saw at the time of fixing, and, in consequence, possibility of waste is obviated.

For panel effect, cover strips, in required widths and thicknesses, are obtainable, and when fixed the sheeting in its entirety may be distempered, enamelled, grained, papered, etc., after an application of concentrated size, thus producing effects which are obtainable with other methods of forming partitions or ceilings.

Ruberoid Roofing.

Ruberoid, an exceptionally light material (made in England and used generally throughout the world for over 30 years), weighing only $\frac{1}{3}$ to $\frac{1}{2}$ lb. per sq. ft., is manufactured in rolls 36 ins. wide, 72 ft. long, containing sufficient material to cover 2 squares. On pitched roofs the Ruberoid is laid from ridge to eaves on wood sheathing boards, which should be close butted. The arris at ridges and hips should be slightly rounded. The strips of Ruberoid are joined by lapping at the seams at least 2 ins. (fig. 470), well coating with Ruberoid cement between the laps and nailing to the boards down centre of each seam, spacing the nails 2 ins. apart. The nail heads and seams are further protected by being painted with Ruberoid cement.

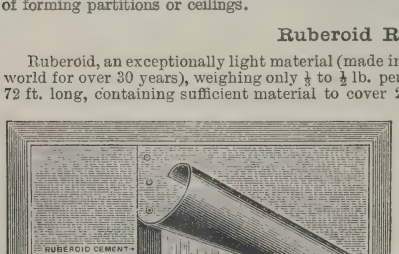


FIG. 470.

On flat roofs of wood the same method is employed. No drips or rolls are needed. Roofs should fall 2 ins. in 10 ft. to allow drainage. Ruberoid can be flashed to parapet walls in the same manner as lead, and box gutters, cesspools and outlets lined with it.

Flat concrete roofs are waterproofed with one or two layers of Ruberoid cemented to the surface of the concrete with Ruberoid compound; the joints in this case are lapped 3 inches. This method of waterproofing is also largely used for cracked concrete and asphalt roofs.

BRITISH FIBROCEMENT WORKS

LTD.

The largest and best equipped Factory in the World.
On H.M. Admiralty and War Office Lists.

Approved by the Ministry of Health for State Housing.



ASBESTOS-CEMENT

Manufactures for Roofs, Walls, Partitions, &c.

CORRUGATED SHEETS

Sizes 4 ft. to 10 ft. Width 30 ins.
Standard $\frac{1}{4}$ in. thickness.
Straight or curved to any radius.

ROOFING TILES

$15\frac{3}{4}'' \times 15\frac{3}{4}''$ $24'' \times 24''$
$24'' \times 12''$

FLAT SHEETS

$8' \times 4'$ $4' \times 4'$ $6' \times 3'$
Thickness $\frac{5}{32}''$, $\frac{3}{16}''$, $\frac{1}{4}''$

Non-conductive. Indestructible. The ideal roofing and constructional material for every building.

SPECIFY 'FIBRENT.'

Also manufacturers of 'Fibrent' High Pressure jointings and boiler coverings.

Manufactured only at **ERITH, KENT,** Head Office and Works.
Telephone: Erith 89.

London Office: 22 Laurence Pountney Lane, E.C. 4.
Telephone: City 2329.

Manchester Office: 97 Bridge Street.
Telephone: City 7856.

Birmingham Office: 14 New Street.
Telephone: Central 7292.

Bristol Office: 28 Baldwin Street.
Telephone: Bristol 272.

Also at Glasgow, Swansea, Cardiff, Belfast and Dublin.

BOOKS for STRUCTURAL ENGINEERS.

Crown 8vo, Limp Cloth, Rounded Corners, 3/- net.

The Reinforced Concrete Regulations of the London County Council.

Made July 1915, under the London County Council General Powers Act, 1909, approved by the Local Government Board, and now in force.

A Handy Guide, containing the Full Official Text, with Explanatory Notes, Diagrams, and Worked Examples.

By EWART S. ANDREWS, B.Sc.Eng., M.C.I.,
Consulting Structural Engineer.

Although these Regulations apply only to the London area, they are likely to be adopted throughout Great Britain, because they contain the most detailed requirements of any official Regulations in the world, and also they have received the approval of the Local Government Board. Provincial authorities who apply for loans upon reinforced concrete construction will probably therefore conform to the Regulations which the Board have already approved.

Crown Octavo. Containing 154 pages. Bound in cloth, 5/- net.

Estimating for Reinforced Concrete Work

A Handbook for Measuring and Pricing Reinforced Concrete. Compiled for the use of Engineers, Architects, and Estimators

By T. E. COLEMAN
(*Major, Staff for Royal Engineer Services*),

Author of 'APPROXIMATE ESTIMATES,' 'THE CIVIL ENGINEER'S COST BOOK,' 'RETAINING WALLS IN THEORY AND PRACTICE,' etc.

This volume is designed to assist Engineers and Architects in the preparation of estimates and bills of quantities for Reinforced Concrete Works. The various notes and data which are ordinarily required for this purpose have here been brought together in a convenient form so as to provide a practical handbook for ready reference.

Full details of the procedure to be adopted in taking off quantities for reinforced concrete buildings, bridges, retaining walls, piles, etc., are given, including the mode of measuring all the various items of materials and workmanship. In addition, a comprehensive series of typical items and descriptions for reinforced concrete are systematically grouped for guidance and reference in preparing Bills of Quantities.

B. T. BATSFORD, LTD., 94 High Holborn, London.

F. 337

A Ruberoid roof being airtight, proper ventilation should be provided at the highest point.

As it is easily laid in position and is unaffected by moist heat it is largely used in tropical countries, particularly on the West Coast of Africa, in India, and South Africa.

Paint does not adhere well to it, and it should not be tarred ; if desired it can be coated with Ruberine roof paint, which is made in three colours, red, green, and black. Ruberoid, being acid and alkali proof, can be safely used on chemical works and other places where it is subjected to fumes, as well as on the sea-coast.

Price of Standard Ruberoid Roofing per roll, to cover 200 sq. ft. of roof, including accessories :—

½-ply Grey	. 29*s.* 0*d.* per roll.	2-ply Red	. 56*s.* 0*d.* per roll.
1-ply „	. 36*s.* 0*d.* „ „	2-ply Grey	. 42*s.* 9*d.* „ „
1-ply Red	. 45*s.* 6*d.* „ „	3-ply „	. 51*s.* 9*d.* „ „

The manufacturers are *The Ruberoid Co. Ltd.*, 28 Waterloo House, Knightrider Street, London, E.C. Prices are quoted on application, fixed complete in any part of the United Kingdom.

Approximate Weight of Ruberoid Roofing.
(Rolls 36 inches wide by 72 feet long.)

½-ply.	1-ply.	2-ply.	3-ply.	1-ply Red.	2-ply Red.
45 lbs.	60 lbs.	85 lbs.	100 lbs.	60 lbs.	85 lbs.

Approximate Number of Super Feet of Roof which can be Covered with 1 Ton.

½-ply.	1-ply.	2-ply.	3-ply.	Red.
9,400	7,100	5,300	4,280	5,000

'Rok' Roofing.

'Rok' roofing (manufactured by ***D.** Anderson & Son, Ltd.*, Lagan Works, Belfast, and Roach Road, Bow, London, E.) forms a permanent and easily applied roof covering, and can be used in place of slates, tiles or corrugated iron. Only the highest grade of wool felt is used in its manufacture. This is saturated with an elastic waterproofing compound, which does not dry out or evaporate in any climate, as it contains no oils, or volatile matter. The coating on the surface is a permanent one, composed of a natural bitumen of very high melting point. There is nothing of an organic nature in either the saturating or coating compound. It is acid and alkali proof and not affected by white ants. It is suitable for pitched, flat, or circular ('Belfast') roofs, and for reinforced concrete roofs it will be found to make a thoroughly water-tight job.

Rain water from roofs covered with it can be used for domestic purposes.

Being an excellent non-conductor, it ensures an even temperature, and is therefore an ideal roofing for hot climates.

It is laid on close jointed boarding, which should not be less than ¾ in. thick, either plain edged or tongued and grooved. The purlins or rafters should be so spaced that there is no appreciable spring in the boarding.

It may be fixed either longitudinally from gable to gable, or vertically from eaves to eaves. It is, however, considered advisable to lay it crosswise to the boarding. The joints should be formed with at least 2 ins. overlap, being stuck together with 'Rok' cement and carefully nailed with tacks not more than 2 ins. apart placed in the centre of the seams. The heads of the tacks where exposed and the outside of the seams should be dressed with 'Rok' cement.

'Rok' roofing is supplied in rolls of 72 ft. by 3 ft. wide, in the following grades :—

½-ply average weight	50 lbs. per roll	. .	Prices furnished on application to the manufacturers.
1-ply „	62 „	. .	
2-ply „	82 „	. .	
3-ply „	104 „	. .	

(The above weights do not include the nails and cements.)

Sufficient tacks and cement to fix the roofing are supplied free by the manufacturers with each roll. Each roll, if carefully laid, should cover 200 sq. ft.

The manufacturers will undertake to carry out the fixing if desired.

'Rok' roofing may also be used on concrete, fixed with special 'Rok' mastic, and it is advisable to write the manufacturers for full directions as to the method of applying.

It may also be used for covering flats and gutters. In this case it is recommended to use two layers, the first layer being tacked to the boarding, and the top layer stuck to the under one with 'Rok' mastic. In this way no nail heads are exposed. Flashings to walls, round lights, etc., may be made in the material.

'Rok' roofing as supplied is a uniform grey colour, but special paint, known as 'Rokolor,' is supplied by the manufacturers in red and green or black.

'Rokalba' (asbestos-coated 'Rok'), having asbestos fibre bedded in the coating on one side, is also manufactured by D. Anderson & Son, Ltd.

The weight of this material is as follows :—

No. 1	average weight	70 lbs.
No. 2	,,	98 ,,
No. 3	,,	120 ,,

(The above weights do not include the nails and cement.

Prices will be furnished on application to the manufacturers. The method of laying 'Rokalba is the same as 'Rok' roofing.

FLOORS.

Single-joisted Floor.

Fig. 471 shows a single set of bearers, *b*, called common or bridging joists, to which ceiling joists, *a*, are attached when desired. The ceiling is more liable to crack with a single than with a double floor, but this may be obviated by making every third or fourth joist deeper, and fastening the ceiling to them only. The ceiling joists are notched, and nailed to the joists *b*.



FIG. 471.

This is the strongest and cheapest floor, the maximum strength to be got from a wooden, untrussed floor being with deep single joists placed close together, and such a floor with a plaster ceiling below is fire-resisting.

Double Floor.

Figs. 472, 473, show a double set of bearers, *i.e.*, binding joists or binders, *d*, and bridging joists, *b*. The binders are the chief supports of the floor, and are generally about 6′ apart. The bridging joists are notched over them, and any ceiling joists, *a*, under them. The bridging as



FIG. 472.




FIG. 473.

well as the ceiling joists can be framed between the binders, or supported by fillets spiked to their sides when it is required to reduce the depth of the floor. The binders rest on stone templates.

Framed Floors

differ from double floors only in having the binders framed into a third set of bearers, called girders.

The girders, *a* (fig. 474), are the chief support ; the binding joists, *d*, are tusk-tenoned into them (fig. 426, page 325) ; the latter support the bridging joists, *b*, and ceiling joists, *c*. The




FIG. 474.

girders should not be more than 8′ to 10′ apart. When the breadth of a girder is considerable it is sometimes sawn down the middle, reversed, and bolted together with sawn sides outwards. slips being placed between to allow air to circulate freely. This allows centre of balk to be examined, and is less liable to rot ; it slightly diminishes strength of girder. Such girders are sometimes strengthened by wrought-iron flitches bolted in between the two halves.

The ends of girders should be on stone templates (fig. 475), and should have a space round them to prevent decay.

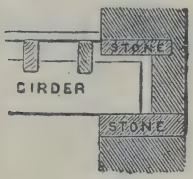


FIG. 475.

Camber of Joists.

Floors, when first framed, should always be kept about $\frac{3}{4}''$ higher in the middle than at the sides of a room; also the ceiling joists should be fixed about $\frac{3}{4}''$ in 20′ higher in the middle than at the sides of room. If laid level they are sure to sag when used.

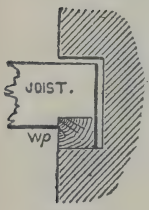


FIG. 476.

Wall-plates for Floors.

On ground-floor generally placed on offset. May be let into wall, care being taken that free space is left round end of joists or girders, as in fig. 476; but, as the wall-plate is perishable, the effective strength of the wall is reduced by the width of the plates. They should, if possible, rest on stone corbels or brick corbel courses. The joists are usually only nailed to the wall-plates, but sometimes notched (fig. 476) or cogged; the latter is quite unnecessary.

For 20′ bearing, wall-plate is $4\frac{1}{2}'' \times 3''$; for 30′ bearing, $6'' \times 4''$; for 40′, $7\frac{1}{2}'' \times 5''$.

(*Tredgold.*)

Wooden Girders for Floors,

10 feet from centre to centre.

b = breadth; d = depth, in inches; L = length, in feet.

$$d = \sqrt[3]{\frac{L^2}{b}} \times 4{\cdot}2 \text{ for fir; by } 4{\cdot}34 \text{ for oak.} \qquad b = \frac{L^2}{d^3} \times 74 \text{ for fir; by } 82 \text{ for oak.}$$

To obtain maximum stiffness make $b = \frac{5}{7}d$.

Girders of Wood with Wrought-iron Flitches.—The wood and iron of these girders bend differently; therefore, only half strength of wood is exerted if the iron is not unduly strained. If thickness of iron is less than $\frac{2}{17}$ that of wood, the beam will be weaker than without iron. If thickness of iron = $\frac{2}{17}$ wood, the beam will have the same strength as if without iron, and be twice as stiff. If thickness of iron exceeds $\frac{2}{17}$ wood, beam will be stronger than plain wooden beam.

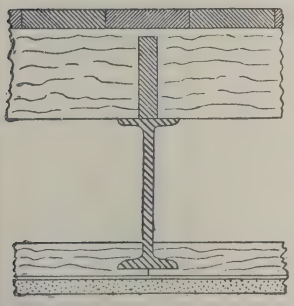


FIG. 477.

Wrought-iron Binders.

Rolled-iron joists are now extensively used as binders, the upper flange of which may support the floor joists, and the lower flange the ceiling joists, as in fig. 477.

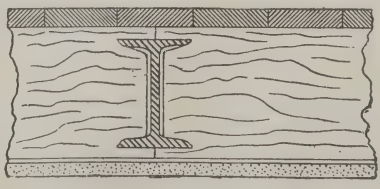


FIG. 478.

When the depth of the floor is required to be as shallow as possible, rolled-iron joists for binders are useful, as the floor may be constructed without increasing the depth required by the bridging joists, as shown in fig. 478.

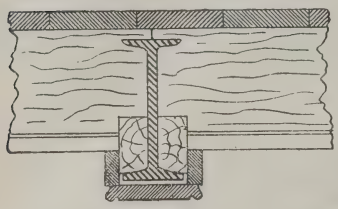


FIG. 479.

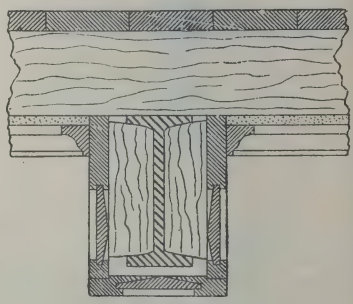


FIG. 480.

Figs. 479 and 480 show rolled-iron joists used as binders, and arranged so as to give the ceiling a panelled appearance.

GIRDERS OF BALTIC YELLOW FIR,

10 feet from centre to centre.

Bearing in Feet.	Depth, 10 Inches.	Depth, 11 Inches.	Depth, 12 Inches.	Depth, 13 Inches.	Depth, 14 Inches.	Depth, 15 Inches.	Depth, 16 Inches.	Depth, 17 Inches.	Depth, 18 Inches.	Depth, 19 Inches.	Depth, 20 Inches.	Depth, 21 Inches.
	Breadth in Inches.											
10	7½	5½	4	3½	2¾	2¼	1¾	..	1¼			
11	9	6¾	5	4¼	3¼	2¾	2¼	..	1¾			
12	10½	8	5¾	5	3¾	3¼	2¾	2¼	2			
13	12½	9½	6¾	5¾	4½	3¾	3	2½	2¼			
14	14½	10¾	7¾	6¾	5¼	4½	3½	3	2½			
15	16½	12½	9	7¾	6	5	4	3½	3			
16	18¾	14	10¼	8¾	7	5¾	4¾	4	3¼			
17	..	16	11¼	9¾	8	6¾	5¼	4½	3¾			
18	..	17¾	13	11	8¾	7¼	6	5	4			
19	..	19¾	14½	12	9¾	8	6½	5½	4¾			
20	..	..	16	13½	10¾	9	7½	6	5¼			
21	..	..	17½	15	12	9¾	8	6¾	5¾			
22	..	..	19½	16½	13	10¾	8¾	7½	6¼			
23	..	..	..	18	14¼	11¼	9½	8	6¾			
24	..	..	..	19½	15½	12¾	10½	8¾	7½			
25	..	..	..	..	16¾	13¾	11¼	9¾	8			
26	..	..	..	..	18¼	15	12¼	10¼	8½			
27	..	..	..	..	19¾	16	13	11	9¼			
28	..	..	..	..	..	17¼	14¼	11¾	10			
29	..	..	..	..	..	18¼	15¼	12¾	10¾			
30	..	..	..	..	..	19¾	16¼	13½	11½	9¾	8½	7¼
31	..	..	..	..	..	..	17¼	14½	12¼	10¼	9	7¾
32	..	..	..	..	..	..	18½	15½	13	11	9½	8¼
33	..	..	..	..	..	..	19¾	16½	14	11¾	10	8¾
34	..	..	..	..	..	..	..	17½	14¾	12¼	10¾	9¼
35	..	..	..	..	..	..	..	18½	15¾	13¼	11½	10
36	..	..	..	..	..	..	..	19½	16½	14	12	10½

SINGLE OR BRIDGING JOISTS OF BALTIC YELLOW FIR,
12′ from centre to centre.

Bearing in Feet.	Breadth, 1½ Inch.	Breadth, 2 Inches.	Breadth, 2½ Inches.	Breadth, 3 Inches.	Breadth, 3⅜ Inches.	Breadth, 4 Inches.
	Depth in Inches.					
5	5¾	5¼	4¾	4⅜	4⅛	4
6	6¼	5¾	5⅜	5	4¾	4½
7	7	6½	6	5½	5¼	5
8	7¾	7	6⅝	6¼	5⅞	5⅝
9	8½	7⅞	6⅞	6½	6	5⅞
10	9	8	7½	7	6¾	6½
11	9½	8⅝	8	7½	7	6⅞
12	10	9½	8½	8	7½	7¼
13	10¾	9¾	9	8½	8	7¾
14	11	10	9½	9	8½	8
15	11½	10½	9⅞	9½	8¾	8½
16	12¼	11	10½	9¾	9¼	8⅞
17	12¾	11½	10¾	10¼	9¾	9¼
18	13¼	12	11¼	10½	10	9½
19	13¾	12½	11½	10¾	10¼	10
20	14¼	13	12	11¼	10¾	10¼
21	14¾	13½	12½	11¾	11	10¾
22	15	13¾	12¾	12	11½	11
23	15½	14	13	12¼	11¾	11¼
24	16	14½	13½	12¾	12	11¾
25	16½	15	14	13	12½	12

For ordinary floors up to 16′ span, with the above scantlings, the joists may safely be spaced 12″ apart, instead of centre to centre. For spans over 16′ stiffness requires them 12″ from centre to centre, and over 20′ the scantlings are rather deficient in stiffness.

Ceiling Joists.

2″ thick is sufficient. They are nailed and notched to the joists.

Rule for Depth of Ceiling Joists.

L = length ; *b* = breadth ; *d* = depth.

If $b = 2''$, then $d = \frac{1}{2}''$ for each foot run of span $= \frac{L}{\sqrt[3]{b}} \times \cdot 64$ for fir ; $\times \cdot 67$ for oak.

CEILING JOISTS OF BALTIC YELLOW FIR,
12″ from centre to centre.

Bearing in Feet.	Breadth, 1½ Inch.	Breadth, 1¾ Inch.	Breadth, 2 Inches.	Breadth, 2¼ Inches.	Breadth, 2½ Inches.	Breadth, 2¾ Inches.	Breadth, 3 Inches.
	Depth in Inches.						
4	2½	2⅜	2				
5	2¾	2⅝	2½				
6	3⅜	3¼	3	2⅞			
7	4	3¾	3½	3⅜	3¼		
8	4½	4⅜	4	3⅞	3¾	3⅝	3½
9	5	4⅞	4½	4⅜	4¼	4⅛	4
10	5¾	5⅜	5	4⅞	4¾	4⅝	4½
11	6¼	5⅞	5½	5⅜	5¼	5¼	5
12	6¾	6½	6	5⅞	5¾	5⅝	5½
13	7½	7	6½	6¼	6	5⅞	5¾
14	8	7½	7	6¾	6½	6⅜	6¼
15	8½	7⅞	7½	7⅜	7¼	7	6¾

(*Tredgold.*)

Ceiling joists should never have very long bearings, particularly those for ceilings next the roof of a house, as long joists are subject to warp, which breaks the plastering.

The distance from centre to centre should never exceed 12″, otherwise the bearing for the laths becomes too long. If the distance from centre to centre exceeds 12″, double laths should be used.

Lintels.

Lintels over doors and windows are of wood, generally 1″ in depth for every foot of span in width, or = $\frac{1}{12}$ span; the weight of the wall above being taken off them by a relieving arch of brick or stone of span equal to their full length. If, as for very cheap and temporary work, no relieving arch is used, they should have a depth of 1¼″ to 1½″ for every foot of span, or more if part of the weight of a floor or roof falls over them. The ends should bear 9″ on the wall, although sometimes only given 4½″.

Details of Flooring Boards.

Thickness of Flooring Boards.—1¼″ in ordinary houses.

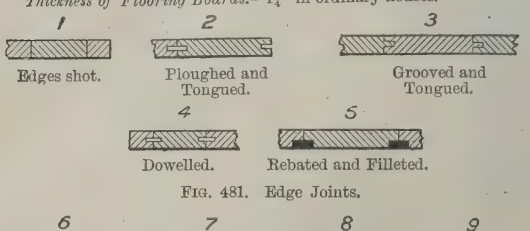


FIG. 481. Edge Joints.

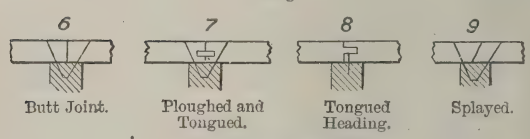


FIG. 482. Heading Joints.

Edge Joints (fig. 481.)—1 is used for inferior floors; 2 and 3 for ordinary floors of a high class; 4 for very superior floors; 5 where the traffic is heavy.

Tongues and Fillets are of wood or hoop iron; the latter, if for good work, should be galvanised. If of wood, should be ¼″ thick, cut across the grain; for strength as well as to prevent splitting, cross or feather tongues are used, the grain running at an angle across the tongue. Iron tongues for 1¼″ boards are 1⅝″ wide, 17 B.W.G.; for 1½″ boards, 1⅞″ wide, of 17 B.W.G.; for 2″ boards 1⅞″ wide, of 15 B.W.G.; for 2½″ and 3″ boards, 1½″ wide, of 15 B.W.G. Tongues are put one-third of depth from bottom of board to give more wear to the upper edges.

Heading Joints.—Fig. 482 shows various forms of heading joints, the inclined black lines being the securing nails.

Secret Joints.

Joints for important or polished floors are secured in such a manner as not to show their fixing, or present gaps or unsightly holes, as would occur in ordinarily fixed flooring, and as they are all fixed on one edge only, are free to shrink or swell without splitting.

Figs. 483, 484, show boards secured by dowel pins and screwed to joists through one edge only, a cheap and effective method, but one which does not prevent dust passing through.

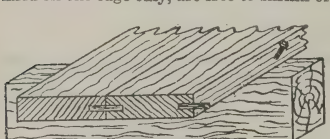


FIG. 483.




FIG. 484.

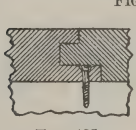


FIG. 485.

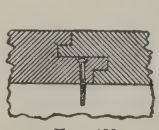


FIG. 486.

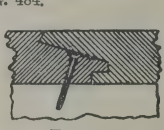


FIG. 487.

Figs. 485 and 486 show the method by rebate, groove and tongue, secured by screws on one edge only. These can be easily fixed or taken up when required, and prevent any dust passing through. The expense of these joints is the great objection to their use. The method shown in fig. 487 possesses the advantages of the two previous joints at a less cost.

Clasp nails or wrought or cut *flooring brads* are used, two to each board, over each joist. The nails should be from 2″ to 2¼″ longer than thickness of board; 3¾″ (32 lbs. to the 1,000) may be used for 1½″ boarding.

Nail heads, for good work, should be punched down, and the holes stopped with lead putty.

Width of Floor Boards.—For important rooms, 4½″; in ordinary rooms, 7″; for common and

temporary purposes, 9″. The narrower the boards, the less they shrink. All the boards should be *listed*, or have the sapwood removed from edges. They should be very well seasoned; if not, they should be temporarily laid, and left a year before being finally laid and nailed down.

Ventilation of Floor Joists, &c.

The spaces between the timbers of floors and flat roofs should be well ventilated by air bricks in walls. Ground below a floor should be thoroughly drained, and covered in some cases with a layer of lime concrete, or with ashes and quicklime.

Fire-Resisting Floors.



FIG. 488.




FIG. 489.

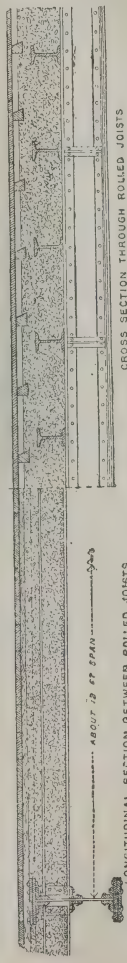


FIG. 490.



FIG. 491.

Expanded Metal.

Expanded Metal as manufactured by *The Expanded Metal Co. Ltd.* (of London and West Hartlepool) is made from sheets of rolled metal, cut and expanded into meshes of various shapes and sizes. Each size of mesh is made in several weights. Each different style and weight has a reference number assigned to it, and may be ordered under such numbers.

Expanded Metal Lathings for Plasterwork.

Expanded Metal Lathings are made from mild steel sheets. They form an ideal key for plaster in ceilings, steelwork encasing, solid and hollow partitions, exterior walls, and other plasterwork. The latest type is known under the trade name of 'BB' Expanded Metal Lathing. All lathing is coated with a mineral oil in process of manufacture, and is dipped once in asphaltum paint at the works. Unpainted lathing is not recommended for plasterwork, and it is advisable to paint all clips, hangers, ceiling bars, etc., as well as the lathings.

'BB' Expanded Metal Lathing supersedes the older types: all are suitable for hair plaster, but the 'BB' and ½-in. meshes are preferable for hairless plaster. The 'BB' and Diamond Mesh Lathings are suitable for all purposes to which metal lathing can be applied; but the Cup Mesh Lathing is not recommended for curved or bent work: all may be used for steelwork encasing. For special ceilings, heavy ornamental plasterwork, heavy facing such as tiling, mosaic, etc., and for exterior work, the heavier lathings should be used, especially in horizontal work.

Expanded Steel Reinforcement for Concrete.

Expanded steel sheets and bars, which are made from mild steel, are specially suitable for reinforcing concrete in foundations, roads, walls, floors, roofs, beams, columns, lintels, arches, bridges, silos, coal pockets, tanks, reservoirs, dams, retaining walls, piers, abutments, pipes, sewers, conduits, etc. Diamond Mesh Expanded Steel of the 3-in. mesh weights is most commonly used for such work, and the 1½-in. and 6-in. meshes may also be used in some cases; the lighter weights of the ¾-in. and 1½-in. meshes are frequently used in concrete for encasing steelwork. Expanded steel, as reinforcement for concrete, has exceptional qualities; it is supplied in flat sheets ready for use, packs closely, and is easily transported and quickly handled. It is simple, economical, and effective. Its total area is available for reinforcement, and it gives a good bond. Being machine made and of meshwork formation, there are no loose strands, the junctions between the meshes being formed and remaining uncut during the process of manufacture. Thus the strands or members are all rigidly connected, and have continuous fibres. The meshes key into each other, and consequently interlock where the sheets overlap at joints. A perfect mechanical as well as cross bond is obtained, for, owing to its rigidly-spaced diagonal meshwork formation, the reinforcement cannot slip within the concrete.

Expanded Steel Reinforcement for Brickwork.

'Exmet' reinforcement for brickwork is specially suitable for reinforcing brickwork, concrete slab constructions, partition slabs, asphalt, etc. It is manufactured from 24, 22 and 20 gauge mild steel, in 2½-in., 7-in., and 12-in. widths, and is supplied in standard coils containing 270 or 75 feet lineal, dipped once in asphaltum paint at the works.

Expanded Metal made-up Goods.

Practically any of the meshes may be used for openwork partitions, shop divisions, fencing, etc.; guards for machinery, windows, trees, etc.; lockers for clothes, tools, etc.; baskets for letters, waste-paper, etc.; and similar articles.

Expanded Metal Lathing and Plaster Partitions.

These are constructed solid or hollow according to requirements.

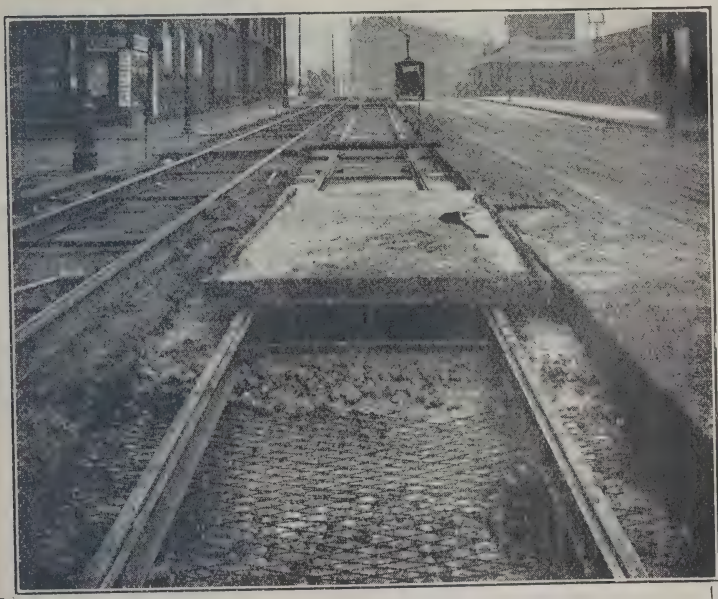
The weight per super foot of surface area, measured one side only, is for 2-in. solid walling about 18 lbs.; and for 6-in. hollow walling about 21 lbs., with a slight increase in weight if the outside skin is back-plastered.

The lighter lathings may be used for both systems, but the heavier lathings are recommended for exterior work.

Solid Partitions, etc.—The metal grounds for solid partitions, etc., are formed of Expanded Metal Lathing securely fastened to ⅜-in. diameter, or other suitable rods, placed vertically 12 ins. to 15 ins. apart. Tension rods are fixed tautly at their ends with screws to timber, hangers or spikes to concrete, and clips to steelwork.

When the metal groundwork is completed it must be temporarily strutted and railed at half height on one side to keep it in a vertical plane. The first or 'render' coat should then be applied on the opposite side, ½ in. thick, and allowed to set hard previous to the second coat being applied. When these two coats are set the temporary supports may be removed, and the reverse side floated. The finishing coat is then applied in the ordinary way. Interior solid partitions are sometimes built only 1½ in. thick, but usually they are made 2 ins. thick; exterior solid walls are generally made 2¼ ins. to 3 ins. thick.

Reinforce Concrete Roads
with
EXPANDED METAL



LEEDS CORPORATION HIGHWAYS AND PERMANENT WAY DEPARTMENT.

CONCRETE TRAMWAY TRACK IN YORK STREET.

REINFORCED WITH EXPANDED METAL.

Engineer:
Mr. E. W. COCKERLINE, A.M.Inst.C.E.I.

General Manager:
Mr. J. B. HAMILTON, C.B.E.

THE EXPANDED METAL COMPANY, LTD.

YORK MANSION, PETTY FRANCE, WESTMINSTER, LONDON, S.W. 1.

EXPANDED METAL

For REINFORCED CONCRETE and FIRE-RESISTING CONSTRUCTION.

EXPANDED STEEL SHEET REINFORCEMENT FOR CONCRETE.

'EXMET' REINFORCEMENT FOR BRICKWORK.

EXPANDED METAL LATHINGS FOR PLASTER.

EXPANDED METAL SHEETS

for use in Fencing, Divisions, Guards, Ventilators, Lockers, Baskets, etc.

MILD STEEL WALL-TIES.

THE

EXPANDED METAL COMPANY

LIMITED,

Patentees and Manufacturers of Expanded Metal.

Head Office :

York Mansion, Petty France, Westminster,

LONDON, S.W. 1.

Telegrams— 'DISTEND, VIC., LONDON.'

Telephones – VICTORIA 8809 (2 Lines).

Works :

Stranton Works, West Hartlepool.

Telephones— WEST HARTLEPOOL 94 (2 Lines).

Telegrams— 'EXPANSION, WEST HARTLEPOOL.'

EXPANDED METAL SUSPENDED CEILINGS.

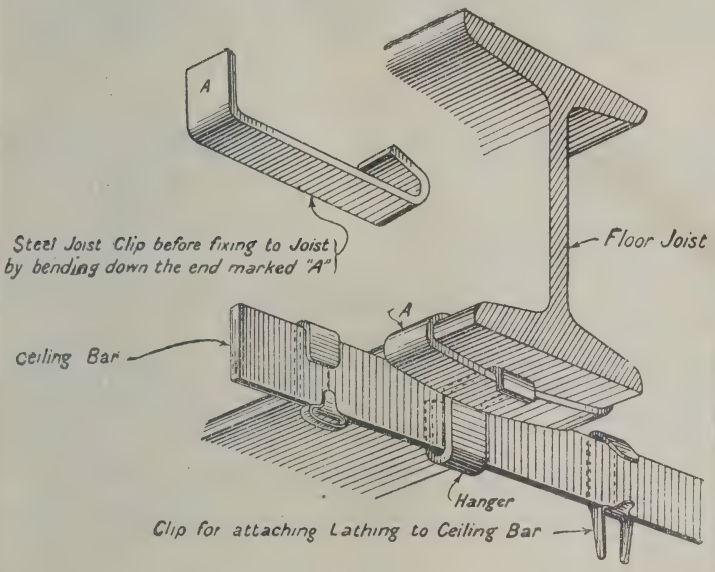


FIG. 491A.

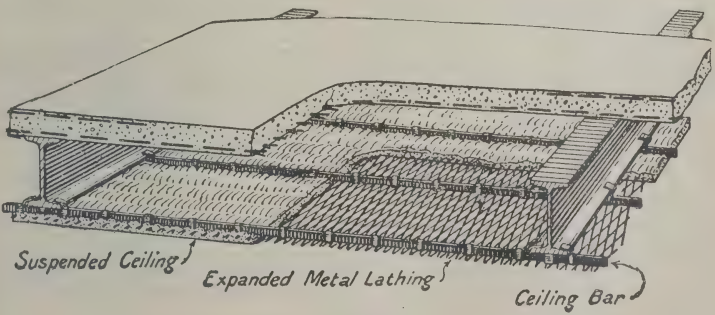


FIG. 491B.

Hollow Partitions, etc.—The metal grounds for hollow partitions, etc., are formed of Expanded Metal Lathing, securely fastened on both sides to steel studs spaced from 12 ins. to 15 ins. apart. These studs are formed of two angle bars, connected by distance straps, having also foot and head pieces, which are holed to allow of the studs being fixed to concrete flooring with spikes or to wood flooring with screws. If the studs have to be fixed to steelwork a clip is riveted to the foot and head pieces to form means of attachment. Another and cheaper form of stud is the rib stud, made from Rib-Mesh Expanded Steel. Overall thickness is regulated by the length of the connecting spacers; 6 ins. is a usual overall dimension, and a $\frac{3}{4}$ in. skin of plaster is sufficient for interior work, and a $1\frac{1}{4}$ in. skin for exterior work. It is wise to back-plaster lathing in exterior work and thus embed it.

Suspended Ceilings.

These ceilings (figs. 491A and 491B) can be suspended at any desired level and to any desired shape. They may be fixed flush with the soffits of floor joists, roof principals, etc., or they can be suspended below them at suitable distance to accommodate pipes, electric wires, etc. The ceilings may be carried to the side walls, in bays or coves of any desired form, for obtaining artistic or decorative effects.

A flat ceiling with hangers varying in length, or a curved ceiling with hangers made to follow the contour, may be suspended below arched flooring, etc.; ceilings suspended from roof principals may be dealt with in the same manner.

For spans of up to 10 feet, flat mild steel bars, of suitable section, are suspended on edge from the joists, etc., at intervals according to the weight of lathing to be used, by means of mild steel hangers specially made for the purpose.

Where bars join they should overlap, at least 2 ins., in a hanger. In wall-end bays the bars should be pinned not less than 2 inches into the masonry. In long spans it is wise, at the half-span, to tie a bearer bar on top of and at right angles to those on edge, to maintain them in a vertical plane. The hangers are secured by screws to timber joists; attached to R.S.J.'s by means of mild-steel clips; bent over tie members of roof trusses, and pinned into reinforced concrete beams. The bars should be wired down to the hangers and at lapped joints to prevent the metal grounds from rising.

The lathing is then fixed to the ceiling bars with lathing clips or with galvanised soft iron wire, and when this is completed the ceiling grounds are ready to receive plaster.

The weight of these suspended ceilings, including metal grounds and plaster, ranges from 9 to 12 lbs. per foot super; and the air space provided affords a perfect fire and sound resisting construction.

Steelwork Encasing.

For plaster work, the lathings, and sometimes the lighter weights in $\frac{3}{4}$ in. mesh, such as No. 38, are used; while for concrete encasing, formed with temporary centering, the lighter weights in $1\frac{1}{2}$ in. mesh, such as No. 6, are recommended.

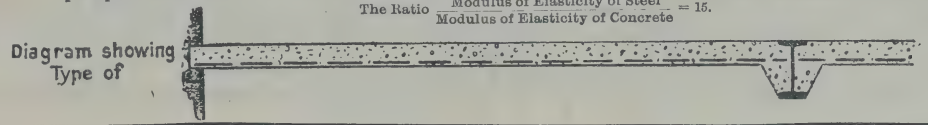
Structural Steelwork Encasings.—In many cases lathing is simply wrapped or bent round the steelwork, secured in position when necessary, and tied together at lapped joints with galvanised soft iron wire, and then covered with plaster. A better system, however, is to use some form of metal cradling, such as $\frac{1}{2}$ in. or $\frac{3}{8}$ in. round rods, bent to the shape of the steelwork, and secured in position, to which to tie the lathing. In high-class work, the encasing round the steelwork should not be less than 2 ins. thick, and should be in one body; this thickness can be best obtained in the following ways:—for plaster finish, by fixing the lathing 2 ins. from the face of the steelwork, filling in the space with concrete, and covering the lathing on the outside with plaster; for concrete finish, by using temporary centering and placing $1\frac{1}{2}$ in. mesh Expanded Metal in the centre of the 2 in. of concrete.

Girder Encasing.—For boxing-in exposed girders, etc., not more than 12 ins. on side or soffit, Expanded Metal Lathing can be wrapped round the beam and secured by staples, tenter hooks, or spikes to the underside of the floor above, or preferably wired to $\frac{3}{8}$ in. round rod cradling fixed at 12 in. to 15 in. centres along the beam. In the first system the long way of the mesh in the lathing should be vertical on the sides and in the second it should be horizontal. For larger section beams the second system should always be used.

Wall Casing or Covering, which is sometimes called deafening, is constructed by means of hold-fasts set into the wall at about 4 ft. centres vertically, and spaced horizontally according to the weight of the lathing to be used. These hold-fasts are holed or hooked at their outer end, and flat bars are either bolted or wired vertically in position, the lathing and plaster being applied as described elsewhere.

These Tables are based on a mixture of Concrete of not less than 4—2—1 by volume; a working stress not exceeding 16,000 lbs. per square inch tension in the Expanded Steel, and 500 lbs. per square inch extreme surface compression in the Concrete.

The Ratio $\frac{\text{Modulus of Elasticity of Steel}}{\text{Modulus of Elasticity of Concrete}} = 15.$



Safe Working Loads per Foot Sup. Supported Slabs. B.M. $= \frac{WL}{8}$.

Span.	½ Cwt.		1 Cwt.		1½ Cwt.		2 Cwt.		2½ Cwt.		3 Cwt.		3½ Cwt.		4 Cwt.		4½ Cwt.		5 Cwt.		5½ Cwt.		6 Cwt.	
	Thickness of Concrete in Inches.	Price List No. of Ex. panded Steel.	Thickness of Concrete in Inches.	Price List No. of Ex. panded Steel.	Thickness of Concrete in Inches.	Price List No. of Ex. panded Steel.	Thickness of Concrete in Inches.	Price List No. of Ex. panded Steel.	Thickness of Concrete in Inches.	Price List No. of Ex. panded Steel.	Thickness of Concrete in Inches.	Price List No. of Ex. panded Steel.	Thickness of Concrete in Inches.	Price List No. of Ex. panded Steel.	Thickness of Concrete in Inches.	Price List No. of Ex. panded Steel.	Thickness of Concrete in Inches.	Price List No. of Ex. panded Steel.	Thickness of Concrete in Inches.	Price List No. of Ex. panded Steel.	Thickness of Concrete in Inches.	Price List No. of Ex. panded Steel.	Thickness of Concrete in Inches.	Price List No. of Ex. panded Steel.
Ft. Ins.																								
3 0	2½	15	2½	15	2½	15	2½	15	2½	15	3	9	3	9	3	9	3	9	3	9	3½	8	3½	8
3 6	2½	15	2½	15	2½	15	2½	9	2½	9	3	9	3	9	3½	8	3½	8	3½	8	4	8	4	8
4 0	2½	15	2½	15	2½	9	3	9	3	9	3	9	3½	8	3½	8	4	8	4	8	4½	61	4½	61
4 6	2½	15	2½	9	2½	9	3	9	3½	8	3½	8	4	8	4	8	4½	61	4½	61	5	61	5	61
5 0	2½	15	2½	9	3	9	3½	8	3½	8	4	8	4½	61	4½	61	5	61	5	61	5½	10	5½	10
5 6	2½	15	3	9	3	9	3½	8	4	8	4½	61	4½	61	5	61	5	61	5½	10	6	10	6	10
6 0	2½	15	3	9	3½	8	4	8	4½	61	4½	61	5	61	5½	10	5½	10	6	10	6½	10	6½	10
6 6	2½	15	3	9	3½	8	4	8	4½	61	5	61	5½	10	6	10	6	10	6½	10	7	62	7	62
7 0	2½	15	3	9	4	8	4½	61	5	61	5½	10	6	10	6½	10	6½	10	7	62	7½	62	7½	62
7 6	3	9	3½	8	4	8	5	61	5½	10	6	10	6½	10	6½	10	7	62	7½	62	8	62	8	62
8 0	3	9	3½	8	4½	61	5	61	5½	10	6	10	6½	10	7	62	7½	62	8	62	8½	30	8½	30
8 6	3	9	4	8	4½	61	5½	10	6	10	6½	10	7	62	7½	62	8	62	8½	30	9	30	9	30
9 0	3	9	4	8	5	61	5½	10	6½	10	7	62	7½	62	8	62	8½	30	9	30	9½	30	10	30
9 6	3	9	4½	61	5	61	6	10	6½	10	7½	62	8	62	8½	30	9	30	9½	30	10	30	10½	68
10 0	3½	8	4½	61	5½	10	6½	10	7	62	7½	62	8½	30	9	30	9½	30	10	30	10½	68	11	68
10 6	3½	8	4½	61	5½	10	6½	10	7½	62	8	62	8½	30	9½	30	10	30	10½	68	11	68	11½	68
11 0	3½	8	5	61	6	10	7	62	7½	62	8½	30	9	30	9½	30	10½	68	11	68	11½	68	12	68
11 6	4	8	5	61	6½	10	7	62	8	62	9	30	9½	30	10	30	10½	68	11½	68	12	68		
12 0	4	8	5½	61	6½	10	7½	62	8½	30	9	30	10	30	10½	68	11	68	12	68				
12 6	4½	8	5½	61	7	62	8	62	8½	30	9½	30	10½	68	11	68	11½	68						
13 0	4½	8	6	10	7	62	8	62	9	30	10	30	10½	68	12	68	12	68						
13 6	4½	61	6	10	7½	62	8½	30	9½	30	10½	68	11	68	12	68								
14 0	5	61	6	10	7½	62	8½	30	10	30	10½	68	11½	68										
14 6	5	61	6½	10	8	62	9	30	10	30	11	68	12	68										
15 0	5	61	6½	10	8	62	9½	30	10½	68	11½	68												

Note.—Generally it is not economical to use thicknesses shown below the zig zag line in the table.

(The Expanded Metal Co., Ltd.)



Safe Working Loads per Foot Sup. Continuous Slabs. BM $\frac{WL}{12}$.

Span.	½ Cwt.		1 Cwt.		1½ Cwt.		2 Cwt.		2½ Cwt.		3 Cwt.		3½ Cwt.		4 Cwt.		4½ Cwt.		5 Cwt.		5½ Cwt.		6 Cwt.	
	Thickness of Concrete in Inches.	Price List No. of Expanded Steel.	Thickness of Concrete in Inches.	Price List No. of Expanded Steel.	Thickness of Concrete in Inches.	Price List No. of Expanded Steel.	Thickness of Concrete in Inches.	Price List No. of Expanded Steel.	Thickness of Concrete in Inches.	Price List No. of Expanded Steel.	Thickness of Concrete in Inches.	Price List No. of Expanded Steel.	Thickness of Concrete in Inches.	Price List No. of Expanded Steel.	Thickness of Concrete in Inches.	Price List No. of Expanded Steel.	Thickness of Concrete in Inches.	Price List No. of Expanded Steel.	Thickness of Concrete in Inches.	Price List No. of Expanded Steel.	Thickness of Concrete in Inches.	Price List No. of Expanded Steel.	Thickness of Concrete in Inches.	Price List No. of Expanded Steel.
Ft. Ins.																								
3 0	2½	15	2½	15	2½	15	2½	15	2½	15	2½	9	2½	9	3	9	3	9	3	9	3	9	3	9
3 6	2½	15	2½	15	2½	15	2½	15	2½	15	2½	9	2½	9	3	9	3	9	3	9	3	9	3	8
4 0	2½	15	2½	15	2½	15	2½	9	3	9	3	9	3	9	3	9	3	9	3½	8	3½	8	3½	8
4 6	2½	15	2½	15	2½	15	2½	9	3	9	3	9	3	9	3½	8	3½	8	4	8	4	8	4	8
5 0	2½	15	2½	15	2½	9	3	9	3	9	3½	8	3½	8	3½	8	4	8	4	8	4½	61	4½	61
5 6	2½	15	2½	15	2½	9	3	9	3½	8	3½	8	4	8	4	8	4½	61	4½	61	5	61	5	61
6 0	2½	15	2½	9	3	9	3	9	3½	8	4	8	4	8	4½	61	4½	61	5	61	5	61	5½	10
6 6	2½	15	2½	9	3	9	3½	8	4	8	4	8	4½	61	5	61	5	61	5½	10	5½	10	6	10
7 0	2½	15	3	9	3½	8	4	8	4	8	4½	61	5	61	5	61	5½	10	5½	10	6	10	6½	10
7 6	2½	15	3	9	3½	8	4	8	4½	61	5	61	5½	10	6	10	6	10	6	10	6½	10	6½	10
8 0	3	15	3	9	3½	8	4	8	4½	61	5	61	5½	10	6	10	6	10	6½	10	7	62	7	62
8 6	3	15	3	9	4	8	4½	61	5	61	5½	10	6	10	6	10	6½	10	7	62	7½	62	7½	62
9 0	3	15	3½	8	4	8	4½	61	5	61	5½	10	6	10	6½	10	7	62	7½	62	7½	62	8	62
9 6	3	9	3½	8	4½	61	5	61	5½	10	6	10	6½	10	7	62	7½	62	7½	62	8	62	8½	30
10 0	3½	9	3½	8	4½	61	5	61	6	10	6½	10	7	62	7½	62	7½	62	8	62	8½	30	9	30
10 6	3½	9	4	8	4½	61	5½	10	6	10	6½	10	7	62	7½	62	8	62	8½	30	9	30	9½	30
11 0	3½	9	4	8	5	61	5½	10	6½	10	7	62	7½	62	8	62	8½	30	9	30	9½	30	9½	30
11 6	4	9	4½	61	5	61	6	10	6½	10	7	62	8	62	8½	30	9	30	9½	30	9½	30	10	30
12 0	4	8	4½	61	5½	10	6	10	7	62	7½	62	8	62	8½	30	9	30	9½	30	10	30	10½	68
12 6	4½	8	4½	61	5½	10	6½	10	7	62	8	62	8½	30	9	30	9½	30	10	30	10½	68	11	68
13 0	4½	8	4½	61	6	10	6½	10	7½	62	8	62	9	30	9½	30	10	30	10½	68	11	68	11½	68
13 6	4½	8	5	61	6	10	7	62	7½	62	8½	30	9	30	9½	30	10½	68	11	68	11½	68	12	68
14 0	5	8	5	61	6½	10	7	62	8	62	9	30	9½	30	10	30	10½	68	11½	68	12	68		
14 6	5	8	5½	10	6½	10	7½	62	8½	30	9	30	10	30	10½	68	11	68	11½	68	12	68		
15 0	5	8	5½	10	6½	10	7½	62	8½	30	9½	30	10	30	10½	68	11½	68	12	68				

Note.—Generally it is not economical to use thicknesses shown below the zigzag line in the table.

The following mixtures of concrete, all parts by measure, are recommended for use with Expanded Steel reinforcement :- *For floors, walls, etc., up to 3½ ins. thick :* 3 parts of aggregate, 1½ parts of sand, to 1 part of Portland cement ; *thicker than 3½ ins. :* 4 parts of aggregate, 2 parts of sand, to 1 part of Portland cement. *For general concrete work such as foundations and heavy work :* 5 parts of aggregate, 2½ parts of sand, to 1 part of Portland cement. *For concrete to retain liquid pressures :* 3 parts of aggregate, 2 parts of sand, to 1 part of Portland cement. The aggregate should be clean sharp broken flint gravel, or hard and durable broken stone. For steelwork encasing, flooring and similar work, if such aggregates are not readily obtainable hard broken brick or hard furnace clinker, or a mixture of the two, free from combustible materials, old mortar, ashes and dust, may be used. Cinders and coke breeze are not recommended for reinforced concrete work. The aggregate should be of various sizes between ¼ in. and ¾ in. for the 4½, 5 and 6—1 mixtures, and from 1½ in. to ¼ in. for the 7½—1 mixture, all fine stuff below ¼ in. may be used in place of sand. The sand should be clean sharp gritty sand consisting of mixed or graded sized grains from ¼ in. down with the coarse grains predominating. Portland cement must be used and it should be in accordance with the requirements of the current British Standard Specification. The concrete should be mixed three times dry and three times after water has been added and must be deposited before the cement has reached its initial set and must not afterwards be disturbed.

(The Expanded Metal Co. Ltd.)

Air-Ducts, False Beams, Cornices, Pillars, Pilasters, etc., can be constructed by means of light steel framework fixed to receive the lathing, and if the cradles cannot be placed sufficiently near each other themselves to take the lathing, $\frac{3}{8}$ in. diam. alignment rods should be wired to the cradles, horizontally or vertically, as the case may be, to form backing for the lathing as well as stiffeners for the cradles.

Expanded Steel Concrete Pipes, Conduits, Sewers, etc., built in situ.

The sheets can be cambered either long way or short way of mesh to suit any requirements. The diagonals of the meshes should run one with, and the other at right angles to, the periphery of the pipe. The reinforcement should not only be laid, but it should also be fixed in place, so that there may be no possibility of its losing its correct position ; it is advisable to clip or wire the sheets together at overlapped joints, and for pressure pipes to allow an overlap of not less than two meshes.

With particular regard to pressure pipes, the concrete forming the main shell should not be depended upon for impermeability, for experience has shown that the tamping seams are to be feared, no matter how carefully fresh material may be added to that which has already been laid.

For pressures of up to 50 feet, a $\frac{3}{4}$-inch facing of cement and sand 1 and 2, laid in one body on the centering immediately before the concrete or on the concrete after the removal of the forms, has proved effective. But for greater pressures the facing should be laminated or put on in coats, the first coat not less than $\frac{1}{2}$-inch of cement and sand 1 to 2 ; the second of about $\frac{1}{4}$-inch, 1 to 1, trowelled to a hard polished surface, and a final wash of thick grout.

Generally speaking, the thickness of the concrete shell should in no place be less than one-twelfth of the greatest internal diameter of the pipe, with an allowance of 1 in. for cover to the reinforcement, whilst the steel should be designed to resist the whole of the tensile stress.

Fire-Resisting Materials.

The best materials to resist fire are brickwork, burnt clay in any form, plaster, and concrete.

Girders and Arches form a heavy floor ; the girders may be protected by blocks of fireclay, or plaster, or concrete. Fire-brick arches 4′ to 12′ span, spandrels filled in and backed up with concrete, or arches may be of concrete only.

Figs. 488 to 491 (page 343) show various forms of fireproof floors. The concrete in some cases is made of calcined gypsum, which does not lose its cohesive power even when raised to a white heat and drenched.

The American Concrete Institute recommends that for fire-resistive construction, limestone, trap rock, blast-furnace slag, and burned clay be given a preference over highly siliceous gravels ; that in cases where gravel aggregate is to be used, with no additional protective material over the concrete, round columns be given a preference over rectangular ones ; and that where gravel aggregate is used all columns, but especially rectangular columns and round columns with spiral reinforcement, be given the additional protection of approximately 1 in. of Portland cement plaster either on metal lath or reinforced by light expanded metal.

Bracket.

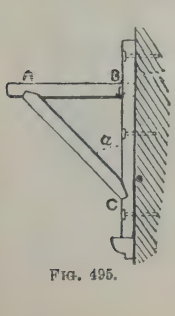


FIG. 495.

If a weight, W, is placed at point A, fig. 495, tension tending to pull bracket out of socket at B

$$= W \tan \alpha = W \frac{AB}{OB}.$$

Compression on $AC = \frac{W}{\cos \alpha} = W \frac{AC}{BC}$. If W is distributed over AB, these strains will be $\frac{1}{2}$ W tan α and $\frac{1}{2} \frac{W}{\cos \alpha}$; and there will be a maximum bending moment on $AB = \frac{W \times AB}{8}$, which is lessened by the tensile stress $\frac{1}{2}$ W tan α, tending to prevent bending and to draw it out at B.

Vertical strain on BC = W.

Partitions.

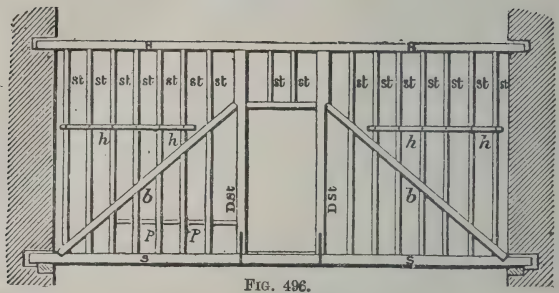


FIG. 496.

Partitions (fig. 496) should be framed so as to be supported only by the walls. *b* braces, H head, S sill, *st* studs, D*st* door-studs.

Dimensions of principal timbers, *b*, H, D*st* :—

4″ × 3″	for a bearing not exceeding	20	feet.
5″ × 3½″	„	„	„	30	„
6′ × 4″	„	„	„	40	„

The filling-in pieces, 'studs,' or 'quarterings,' need not be thicker than 2″, or just sufficient to nail the laths to. They are tenoned to the top and bottom plates, but butted and nailed on to the braces. If they exceed 3′ or 4′ in length they should be strengthened by short struts or horizontal pieces, as at *p*, *p*, called 'nogging pieces,' or, what is better, by a continued rail, *h h*, notched across the uprights and nailed to each. In a brick nogged partition the nogging pieces are essential. They are much thinner than in a lath-and-plaster partition, being about ¾″ thick and 2″ wide, placed at every fourth course of the brickwork in height.

The studs or quarterings for a lath-and-plaster partition should be spaced at from 12″ to 18″ from centre to centre ; in a brick nogged partition they should be 18″, 2′ 3″, or 3′ apart. If a partition is not well framed, or is made with unseasoned timber, the plastering will crack. Weight of a square (100 feet super) of partitioning may be taken at 1,480 to 2,000 lbs.

Slag Wool, packed in the full depth of the joists between ceiling and floors, is an effective deadener of sound, and this method has the advantage of leaving no hollow spaces in which vermin can congregate, or in which fire can work its way unseen. Strips of hair felt should be laid along the joists to prevent continuity of woodwork, otherwise sound will be transmitted through the woodwork itself. The approximate quantity of slag wool required to fill a square yard of flooring, say 9 inches deep, will be 80 lbs., of which the approximate cost is 3*s*. This method is perhaps a little more costly than some architects care to adopt, and lesser thicknesses of slag wool produce very satisfactory results.

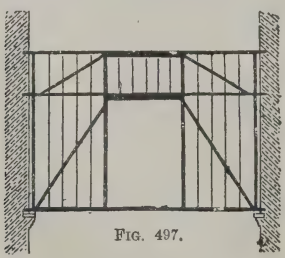


FIG. 497.

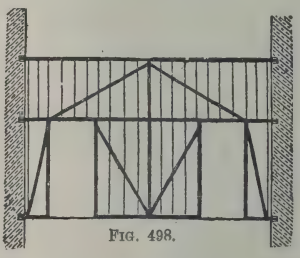


FIG. 498.

Figs. 497 and 498 show arrangements for partitions having doorways ; in both cases the main portion of the partition is suspended from the truss forming the upper part of it (*Tredgold*).

For rendering partitions, as far as possible, sound-proof, 'Willesden Paper' (*The Willesden Paper and Canvas Wo·ks, Ltd*) may be used with advantage ; it is also damp-proof.

Stairs.

Stairs (fig. 499) are described according to their form in plan, viz. :—

1. *Straight—a.*

2. *Dog-legged—b* ; when the flights rise alternately in opposite directions with no interval between the flights.

3. *Open newel—c* ; when the flights are ranged round an open well-hole, with a newel post at each angle.

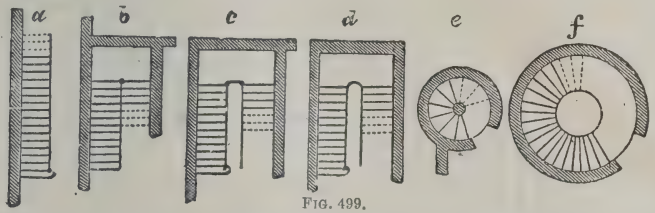


FIG. 499.

4. *Geometrical—d* ; similar to the last but with no newel posts ; the handrail running uninterruptedly from bottom to top. The angles of the well-hole are generally rounded.

5. *Circular newel—e.*

6. *Circular geometrical—f* ; when without a central newel.

Width—Stairs should be 3′ 6″ wide to allow two persons to pass easily.

Tread and Rise.—Tread should be from 9″ to 12″, rise from 6″ to 7½″. Tread increases as rise decreases. The following rules are in use for proportioning rise and tread of steps :—

1st. Tread in inches + twice rise in inches = 24. 2nd. Tread × rise = 66.

Flights.—It is dangerous to have a stair between two floors in one continuous flight. Considering convenience and effect, it is desirable to limit height of one flight to about 7′, and to avoid having two flights in one direction. *Winders* should be avoided if possible.

Handrail.—Upper surface should be from 2′ 7″ to 2′ 9″ above the surface of the tread at the nosings, and on landings from 3′ to 3′ 3″. Or, taking the height at landings as 3′ subtract ½ the rise for height of rail from nosings of steps.

Materials.—In lofty dwellings it is desirable that stairs should be of stone or concrete to be fireproof, at any rate in the lower storeys.

Stone Stairs.—Steps are supported by a wall at one or both sides. When at one side only they are called hanging steps, and should be built at least 9″ into the wall. The bottom step is bedded on the floor, and the lower front edge of each other step rests on the upper back edge of the step below. The best form for the joint is shown in fig. 500, where the face *ab* is at right angles to the general inclination of the stair, and about 1″ wide. Spandrel steps should have the sides which are built into the wall left square.


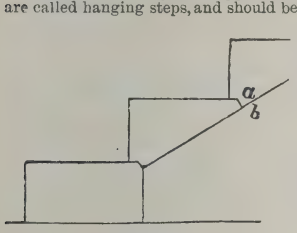


FIG. 500.

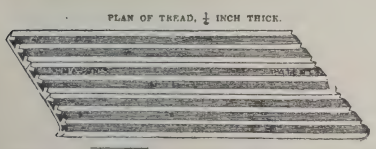Repairing Stone Steps when Worn.—One plan is to fill up the hollows with Portland cement concrete made with fine sharp washed gravel about the size of a pea, 1 part gravel, 1 part cement. The worn part should be chiselled down, so as to give at least ⅜″ thickness of concrete in every part. The edge of concrete steps should always be rounded. Another method is to insert and cement slabs of artificial stone instead of concrete ; the stone known as the 'Silex' brand is very suitable for the purpose.



Lines thus ▬▬ *represent Lead—other parts Chilled Steel, Brass, or other Hardened Metals.*

FIG. 500A.

MASON'S TREADS.

(*Patent.*)

These treads, fig. 500A, which have remarkable unwearable and non-slipping qualities, are adapted to either wood or stone stairs. The arrangement is such that a hard metal withstands the wear, and a soft one gives the foothold.

Wooden Stairs.—Fig. 501.—Treads should be of hard wood, $1\frac{1}{8}$" thick, for steps 4' long, increasing $\frac{1}{8}$" for every additional 6" of length.

The treads and risers are supported by a wall string and an outer string, the former $1\frac{1}{2}$" thick, the latter 2". Treads and risers are housed into the wall string, and secured by wedges.

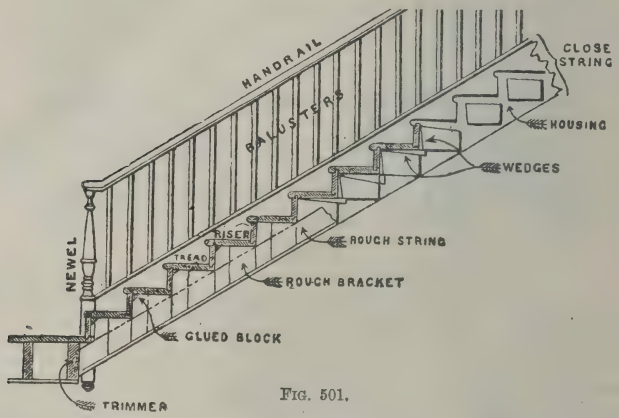


FIG. 501.

The outer ends may be either housed into a close string, or may rest on and be mitred to the notches of an open string.

When stairs are more than 3 ft. wide, treads should be supported by rough strings or carriages fixed underneath and framed into the trimming joists of the landings. Scantlings of rough strings are calculated as bridging joists. Rough brackets are nailed to the side of the rough string to support the treads.

Joints between treads and risers are grooved and tongued, feathered or rebated. The last is the best joint.

'ÆGIS' ASBESTOS-CEMENT BUILDING SHEETS.

8' × 4' or 4' × 4'

These sheets (*Turner Brothers Asbestos Co. Ltd., Rochdale*) are readily worked and quickly fixed with ordinary carpenters' tools.

Ceilings.—For ceilings, sheets $\frac{5}{32}$ in. or $\frac{3}{16}$ in. thick are most suitable, and are nailed to ceiling joists with $1\frac{1}{4}$-in. galvanised or copper nails at not less than $\frac{1}{2}$ in. from edge of sheets, and about 6-in. centres, care being taken that edges butt closely and nail heads are flush.

In forming ceilings, 4-ft. by 4-ft. sheets are recommended. These are quickly and easily handled by the erectors, and the ceilings may be subdivided into panels, the joints being covered with a moulded wood or fillet strip, the result giving a highly decorative effect.

Partitions.—These may be formed with sheets $\frac{3}{16}$ in. to $\frac{1}{2}$ in. thick, nailed as before described to timber studding, spaced at 1 ft. 4 in. or 2 ft. centres. Between the standards, dwangs or struts should be placed to support the ends of the sheets. The joints may be filled before painting, and the whole surface rubbed down in the usual way, or as an alternative covered with moulded wood or fillet strips.

For 'Turners' Roofing Slates,' see p. 411.

SECTION VIII

BUILDING MATERIALS AND CONSTRUCTION

(With Contributions by W. Alden Brown, F.G.S., A. L. Howard, E. A. W. Philips, M.I.C.E., J. T. Rea, A. B. Searle, Robert S. Vesey, G. Stanley Walpole, D.Sc., F.I.C., and other authorities.)

PART I

TIMBER — WOODEN PILLARS — ROOFS — BRICKWORK — WALLS — LONDON BUILDING ACTS — FOUNDATIONS — MASONRY (pp. 355–390)

PART II

MORTARS—CONCRETES—CEMENTS (pp. 391–40)

PART III

LATHING—PLASTERING—SLATING—GLAZING—PAINTING —PAPER-HANGING—PLUMBING—MOULDINGS (pp. 409–418)

BUXTON LIME.

The Buxton Lime Firms Co. Ltd.

The Largest Output of Lime and Limestone in the World.

'OLD BUXTON' LIME FOR PLASTERING HAS NO EQUAL.

LIME

Prepared under Direct Supervision of Experts, for Special Trades, in Special Kilns. In any quantity.

PURE LIMESTONE

FOR ALL PURPOSES.

ANY SIZE—CUBES OR FLAKES.

LIME HYDRATE

(100 % EFFICIENCY).

Agencies throughout Great Britain.

HEAD OFFICE ADDRESS:

The Buxton Lime Firms Co. Ltd., BUXTON.

Telegrams: 'Buxton Lime, Buxton.' Telephone: 312 Buxton.

SECTION VIII

BUILDING MATERIALS AND CONSTRUCTION.

PART I

TIMBER—SEASONING—CREOSOTING—WOODEN PILLARS—ROOFS—BRICKWORK—WALLS—LONDON BUILDING ACTS—FOUNDATIONS—MASONRY.

TIMBER.

(Contributed by Alexander L. Howard.)

In all specifications for building materials and construction, it is customary to use the terms 'Timbering,' 'Joiners' work,' and 'Cabinet work.' The first-named applies only to the wood used in constructional work. These terms are again subdivided into the following :—

Baulks.—Small-sized squares up to 9 ins.

Timber.—Includes everything, whether hewn or sawn, above the size of baulks.

Planks.—Includes everything above 1½ ins. in thickness, and more than 9 ins. in width.

Deals.—Confined entirely to widths of 9 ins. of thicknesses above 1½ ins. Thicknesses less than this are termed deal boards.

Battens.—Includes any thickness above 1½ ins., and over 4 and under 9 ins. in width.

Boards.—Includes everything, whatever the width, of 1½ ins. in thickness and under.

Scantlings.—An inclusive term which covers the whole of the requirements with the exception of prepared floorings, skirting or joiners' work, but which is generally used more particularly to describe small-sized pieces which are not named specifically above, such as 3 ins. × 4 ins., 2½ ins. × 3 ins., etc.

Lumber.—The term used in Canada and the United States for sawn wood of all descriptions.

It is customary in some specifications to require that the boards shall be of deal widths or of batten widths. In such case the above limitations are observed.

For scaffolding, etc., round timber is described by the following terms :—

Scaffold poles.—These range in size from 2½ to 6 ins. in diameter in the middle.

Spars.—Above 6 ins. in diameter in the middle.

Rickers.—Sizes less than the above.

In specifying thicknesses and widths it is customary, except in the case of Government contracts, to accept these after planing ; thus, where 1-in. thickness is specified, the completed work is ⅞ ins. in thickness, while a width of 12 ins. should actually finish a full 11¾ ins.

Timber Measures.

BAULKS AND TIMBER.—Sold at per load of 50 ft. cube. Deals, planks, battens and scantlings at per Petrograd standard. (One standard = 165 ft. cube.)

PREPARED FLOOR BOARDS.—These are usually sold at per square. This is a standard measurement which equals 100 ft. superficial. Till recently it was the trade custom to supply a specific number of feet, according to the width of the board, which should approximate to the square. These were as follows :—

4-in. boards	. . .	300 ft.	
4½	„ . . .	270	„
5	„ . . .	240	„
5½	„ . . .	220	„
6-in. boards	. . .	200 ft.	
6½	„ . . .	190	„
7	„ . . .	180	„

This practice, which was always unsatisfactory owing to the inaccuracy of the figures, has now been discontinued.

LUMBER (see above) AND AUSTRALIAN WOOD.—Sold at per 1,000 ft. of 1-in. superficial measure for all thicknesses of 1 in. and over. Under 1 in. at per 1,000 ft. superficial of their thicknesses. Teak at per load of 50 cub. ft.

Descriptions of Soft Woods.

PINE, SCOTS (*Pinus sylvestris*, Linn.).—Commonly called 'red' or 'yellow,' 'red' or 'yellow fir,' 'yellow deal,' 'deal.' Used for joists, floors, roofs, sash-frames, sashes, doors, centering, scaffolding, piles, etc., that is, for all timbering work in buildings excepting where baulks or logs hewn or square sawn are necessary. When reasonably free from sap and in bright condition is very durable. Archangel, Onega, Petrograd, and a few of the Swedish ports supply the best quality, but good qualities also come from other districts.

SPRUCE (*Picea excelsa*, Link.).—Commonly called 'white,' 'white fir,' 'white deal,' or 'white battens.' Used in Scotland and the north-west districts generally, for timbering work and for floorings, skirtings, and joiners' work of the cheaper class. In the midlands and south used for the latter purposes, but there usually considered unsuitable for timbering work. When used for boards, skirtings, joiners' work, etc., and properly ventilated, is fairly durable, though not in the same degree as Scots pine. Archangel, Onega, Petrograd, and some Swedish ports supply, as with Scots pine, the best quality, though good timber also comes from other districts.

SPRUCE, CANADIAN AND AMERICAN (*Picea alba*, Link.).—Although used to a certain extent in Scotland and the north-west districts, and occasionally elsewhere, it is not suitable for building construction as it is not durable, nor does it possess a sufficient degree of strength for such work.

LARCH (*Larix europæa*, DC.).—Not commonly used for building construction, though its strength and durability would recommend it equally with Scots pine. Although the supplies of British-grown larch are not ordinarily made use of for such work, yet its good qualities recommend it for more general consideration.

PINE, PITCH (*Pinus palustris*, Mill.).—Commonly used for large timbering sizes, joiners' work and flooring. Not usually employed for ordinary timbering work. Stronger than the descriptions named above, and equally durable, but only when completely ventilated. Should not be used for constructional work when thorough ventilation is impossible. Imported in all sizes and descriptions sawn and hewn square of large sizes and long lengths. Planks, deals, battens and boards are imported in three qualities described as 'prime,' 'unsorted or rio,' and 'merchantable.' In the import of square sawn or hewn timber the further standard of quality is indicated by the terms 'long leaf' or 'short leaf.' It is probable that the best quality only, i.e. 'long leaf,' is the produce of *Pinus palustris*, while that described as 'short-leaf' is the produce of many sorts, including the Loblolly pine (*P. taeda*, Linn.).

PINE, RED CANADIAN (*Pinus rubra*, Mich.).—Used commonly in Scotland and the north-west districts, and only occasionally in the south and the midlands. Generally shipped in lengths of from 10-16 ft., though occasionally in shorter lengths; on this account generally unsuitable for timbering work: also in deal and plank sizes, and small quantities of other scantlings. Similar to Scots pine in appearance, though slightly redder in colour. Excellent in constructional and joiners' work, though for the latter, perhaps, rather hard in texture. Very durable in all situations, but requires good ventilation.

PINE, AMERICAN WHITE (*Pinus strobus*, Linn.).—Known in England as 'yellow pine,' in Scotland as 'white pine,' or 'yellow pine,' but in America always as 'white pine.' Formerly used for joiners' work in England and largely so in Scotland and the north-west districts, but of late years has been too expensive for such uses.

PINE, OREGON (*Pseudotsuga Douglasii*, Carr.).—Known also as 'British Columbian pine,' and 'Douglas fir.' Obtainable in very long lengths and large sizes, very free from knots and generally only carrying a moderate amount of sapwood. Not very favourably received hitherto as it is not considered durable. Mostly used for roofing timbers for public buildings and for floorings; also a restricted amount for joiners' work; for this purpose not much in favour as the hard grain rises or the soft grain sinks, so presenting a ridgy surface under paint or varnish.

Descriptions of Hard Woods.

ACACIA (*Robinia Pseudacacia*, Linn.).—Weight, 51 lbs.* Europe. Golden-yellow. Hard, very durable, especially in contact with the ground, and in alternate wet and dry. When well seasoned is stronger, stiffer, and tougher than oak. Used for sills, wall-plates, posts, palings, trenails for ships. Would be well adapted for decorative cabinet work.

ACAPU (*Andira aubletii*).—Weight, 70 lbs. Brazil. Dark brown, very hard, durable and strong; excellent for flooring and frame-work.

ALDER (*Alnus glutinosa*, Gaert.).—Weight, 30 lbs. Great Britain. Brown; very durable under water, works well and easily. Valuable for piles, planking, sluices, pumps, etc. Used also in turnery and for other light purposes; large quantities also in the form of plywood.

ALMOND WOOD, INDIAN (*Chickrassia tabularis*, Adr. Juss.).—Weight, 49 lbs. India. Yellowish to reddish-brown, with beautiful satiny lustre and fine silver grain. Seasons and works well. Used for furniture and carving.

ANJAN (*Hardwickia binata*, Roxb.).—Weight, 82 lbs. India. Dark-red, streaked with black or purple; cross-grained, extremely durable, very hard; liable to split, does not warp. Excellent for sleepers but difficult to work; used for naves for cart-wheels, and for agricultural implements.

---

* Weights given are average dry weight per cubic foot

(*Anogeissus latifolia*, Wall.).—Weight, 62 lbs. India. Purple-brown, shining, very hard, strong, and tough but liable to split in seasoning. Used in shipbuilding, for axles of carts and also for furniture.

ASH, ENGLISH, CANADIAN AND AMERICAN (*Fraxinus excelsior*, Linn., *F. americana*, Linn. etc.). —Weight, 41–46 lbs. The British Isles and North America. White to brownish-white, sometimes with darker streaks. Easily worked, very flexible ; strong, tough and elastic, therefore well adapted for work exposed to sudden shocks and strains. Not durable unless thoroughly ventilated. Largely used in air-craft construction.

ASH, JAPANESE (*F. mandschurica*, Rupr.).—Weight, 34 lbs. Japan. Not so strong or tough as the English species, although strong enough for many purposes, including carriage building. Takes a high finish ; useful for interior fittings and cabinet work. Liable to shrink more in seasoning than English ash, but stands well when seasoned ; has an average weight of from 12 to 15 per cent. less.

BASSWOOD (*Tilia americana*, Linn.).—Weight, 30 lbs. North America. Pure white to whitish-brown, soft, easily worked, durable after seasoning though liable to shrink in the process. Used for turnery, carpentry and furniture, and is especially useful in the pianoforte trade. Should not be confounded (although it generally is) with canary whitewood (*q.v.*).

BEECH (*Fagus sylvatica*, Linn.).—Weight, 42 lbs. Europe. Light, yellowish-brown, showing when cut on the quarter the silvery flecks of the medullary rays. Hard, close, fine and even-grained. Very durable when submerged, therefore suitable for piling ; used also for machinery, chair-making, tool-handles, turnery, and a great variety of other purposes.

BIRCH (*Betula lenta*, Linn.).—Weight, 48 lbs. Europe and North America. Firm, tough ; works up easily to a satiny lustre. Used for wheelwrights' work and for furniture ; large quantities also for plywood.

(*Bischofia javanica*, Blume).—Weight, 45 lbs. India. Red, tough, moderately hard. Though liable to warp and crack above ground, yet when in wet ground or completely submerged is almost imperishable. Suitable for piling and all constructional work, and for building.

BLACKBUTT (*Eucalyptus pilularis*, Sm.).—Weight, 57 lbs. Australia. Light-brown, heavy and somewhat difficult to work owing to interlocked grain ; very strong and durable. Used in large quantities for street paving and for sleepers ; suitable for all constructional work.

BLACKWOOD, AFRICAN (*Dalbergia Melanoxylon*, Guill. and Perr.).—Weight, 74 lbs. Tropical Africa. Sometimes known as Senegal ebony. Dark-brown to jet-black with slightly fragrant scent. Used in turnery and for musical instruments.

BLACKWOOD, AUSTRALIAN (*Acacia Melanoxylon*, R.Br.).—Weight, 45 lbs. Australia. Dark reddish-brown with a lustrous sheen, often beautifully figured. Easily worked, liable to warp unless thoroughly seasoned, but when seasoned stands exceedingly well under the most trying conditions. Useful for all kinds of construction, carpentry and cabinet work. The figured wood is used in the form of veneer for panelling, etc.

BLACKWOOD, BOMBAY. See Rosewood, Indian.

(*Boehmeria rugulosa*, Wedd.).—Weight, 41 lbs. India. Red, moderately hard, smooth and even-grained ; seasons well and is easily cut. A splendid wood for carving ; suitable for turnery.

BOXWOOD (*Buxus sempervirens*, Linn.).—Weight, 30 to 60 lbs. Europe, Asia Minor, etc. Exceedingly hard, very dense and close in the grain. Cuts well without splintering ; susceptible of a fine polish ; liable to split unless carefully and thoroughly seasoned. Used largely for blocks for wood-engraving, also in turnery, for instruments for sports and games, etc., and for a great variety of other purposes.

BOXWOOD, KNYSNA, OR EAST LONDON (*Gonioma Kamassi*, E. Mey.).—Weight, 58 lbs. South Africa. Uses as above.

(*Calophyllum spectabile*, Willd.).—Weight, 38 lbs. India and Ceylon. Shining, light-red, cross-grained ; squares up to 25 ft., siding 18 ins. Used for masts, spars and planking.

CAMPHORWOOD (*Cinnamomum camphora*, Nees.).—Japan. A medium-grained, fragrant, cinnamon-coloured wood. Used for the linings of drawers and cabinets.

CAMPHORWOOD, BORNEO, or KAPOR (*Dryobalanops aromatica*, Gaert.).—Weight, 47 lbs. Malay Peninsula. Straight-grained, hard, tough, and durable. Used for heavy constructional work, planks, beams, piles, etc., and for joiners' work and shipbuilding.

CEDAR.—A name given erroneously to many species of *Juniperus* and *Cedrela*, etc. True cedars are the Himalayan (Deodar), Atlantic and Lebanon cedars.

CEDAR, CIGAR BOX (*Cedrela odorata*, Linn.).—Weight, 30 lbs. Tropical America. Also known as West Indian cedar. A soft, red, fragrant wood ; used as its name implies.

CEDAR, MOULMEIN (*Cedrela Toona*, Roxb.).—Weight, 30 lbs. India. Warm red, durable and easy to work. Used for cabinet-making, furniture, cigar boxes and carving.

CEDAR, PENCIL (*Juniperus virginiana*, Linn.).—Alternatively known as red cedar and Virginian cedar. Weight, 30 lbs. United States. Light, soft and fine-grained. Very durable, especially in contact with the soil. Used chiefly for pencil-making ; also employed, though to a limited extent, for cabinet work and panelling.

CHAPLASH (*Artocarpus Chaplasha*, Roxb.).—Weight, 34 lbs. India. Yellow to brown, even-grained ; seasons well and is durable. Suitable for building and joiners' work ; also for furniture.

CHESTNUT (*Castanea vesca*, Gaert.).—Weight, 30-40 lbs. Europe. Commonly called 'Sweet Chestnut,' or 'Spanish Chestnut.' Light to dark brown ; resembles oak, from which it is only distinguished by the absence of the pronounced medullary ray so evident in that timber, A very valuable wood, insufficiently appreciated. Easier to work than oak, although more tough,

not so strong or stiff. Very durable in water when wholly submerged, or in outdoor work where ventilated, and in joiners', cabinet and panelling work. Does not shrink or swell much; gives way suddenly under cross-strains. Used in the past for roof timbers and panelling; often mixed with oak (a very intelligent manner of use, as, unlike oak, insects, fungus, wood-boring beetles, etc., dislike it, so that its use mixed with oak has helped to preserve the latter from such attacks). Also largely employed for fencing, posts and rails, hop-poles and furniture. Large-sized trees are much spoilt by spiral growth and cup and heart shakes, suggesting careless forestry during growth.

CHESTNUT, HORSE (*Aesculus hippocastanum*, Linn.).—Weight, 30 lbs. Europe. Yellowish-white, soft, and not very durable. Used for rollers in cotton mills.

COCOBOLO.—Weight, 70 lbs. South America. A handsome, rich dark-red wood streaked with black or orange; hard, strong and durable. Used chiefly in the form of veneer for decorative work, such as brush backs, handles, and turnery.

COCOBOLO, INDIAN (*Dalbergia cultrata*, Grah.).—Weight, 70 lbs. Burma. Dark red to purple, streaked with black; very hard. Uses as above.

COCUS-WOOD (*Brya ebenus*, DC.).—Weight, 70 lbs. The West Indies. Dark bronze to brown or purple; very heavy, fine and even-grained, durable. Used for musical instruments and general turnery.

COROMANDEL or CALAMANDER-WOOD (*Diospyros quaesita*, Thw.).—Weight, 57 lbs. Ceylon. Greyish-brown streaked with black. A most valuable ornamental wood, in demand for cabinet work.

CUTCH or KHAIR (*Acacia Catechu*, Willd.).—Weight, 65 lbs. India. A hard wood, varying from light to dark red; seasons well, takes a fine polish and is durable. Employed in house-building, wheelwrights' work and for agricultural implements.

DILO (*Calophyllum inophyllum*, Linn.).—Weight, 42 lbs. India and Burma. Sometimes known as the Alexandrian laurel. Reddish-brown, close-grained. Used in India for such work as shipbuilding, machinery and masts, but would be excellent for cabinet-making.

EBONY (*Diospyros ebenum*, Koenig, etc.).—Weight, 60–80 lbs. India, Ceylon, Africa. Ebonies vary in their degree of blackness, few are jet black; all, however, are heavy, hard and close-grained, and generally durable. Often used in the form of veneer for decorative cabinet work; also employed for inlay and turnery.

ELM, ENGLISH AND AMERICAN (*Ulmus campestris*, Linn., *U. americana*, Linn., etc.).—Weight, 40 lbs. Europe, N. America. Dark-brown, tough, twisted in grain, and therefore difficult to work. Durable both when completely submerged, as in piles, and when perfectly dry, but soon rots when exposed to alternate wet and dry. Warps and twists in seasoning and shrinks very much, but is not liable to split; takes nails well; not so strong, stiff, or tough, as oak. Used largely for piles, water-pipes, pumps, etc., also for coffins, agricultural tools, naves of wheels, sheaves of blocks, keels of ships, and also for chair-making.

ELM, ROCK (*Ulmus racemosa*, Thomas).—Weight, 45 lbs. Canada and the United States. Light yellowish-brown, becoming paler on exposure. Tough, elastic, very strong; durable when submerged or when thoroughly ventilated. Used for boat and ship building, ladders for ships, rubbing pieces, hoops for casks, and many other important works. Supplies of good quality growing scarce.

ELM, WYCH OR SCOTCH (*Ulmus montana*, Smith).—Lighter-brown in colour, softer and more straight-grained and therefore more easily split than English elm. Used largely in chair-making, boat-building, and for agricultural implements.

ENG or IN (*Dipterocarpus tuberculatus*, Roxb.).—Weight, 54 lbs. Burma. This dark reddish-brown wood is one of the valuable timbers of Burma. Very durable and in great demand for house and boat-building. Has been used in this country very successfully for parquet flooring; excellent for all constructional work.

(*Gmelina arborea*, Roxb.).—Weight, 36 lbs. India, Burma. Golden-yellow to greyish-white, with a glossy sheen; soft, even-grained, durable; does not warp or crack, easily worked. Used for furniture, door-panels, carriage-building, boats, light planking, etc., and in all works where shrinkage is to be avoided. Roxburgh, writing considerably over a century ago, spoke of the great value of this wood. Will probably be most appreciated for cabinet work.

GREENHEART, DEMERARA AND SURINAM (*Nectandra rodioei*, Schomb.).—Weight, 70 lbs. British and Dutch Guiana and tropical South America. Dark greenish-brown, clean and straight in the grain, hard and heavy; tough, strong and elastic. Heartwood extremely durable. Resists teredo and therefore largely used for piles, wharves and jetties; also in shipbuilding, machinery and planking; one of the best woods for fishing rods. In strength exceeds most other woods, whether tried by transverse or tensile strain. When tested for crushing force in the direction of the fibres it bears the addition of weight after weight till the crushing force is obtained. It then, with a loud report, gives way suddenly and nothing is left but a loose mass of shapeless fibres.

GREENHEART, BURMA (*Heterophragma adenophyllum*, Seem.).—Weight, 48 lbs. India, Burma, Andaman Islands. Bronze to greenish-yellow, greatly resembling the Surinam. Does not warp or split. Suitable for cabinet work.

GUM, BLUE (*Eucalyptus Globulus*, Labill.).—Weight, 50 lbs. Australia. Light-brown, hard, heavy, tough, elastic; somewhat interlocked grain, durable. Used for shipbuilding, telegraph poles, felloes, shafts, spokes and piles. Employed for the piles in Dover Harbour.

GUM, RED (*E. caloplylla*, R.Br.).—Weight, 60 lbs. Australia. Yellowish-red, fairly dense

and hard, splits readily; the prevalence of gum veins impairs its suitability for constructional work. Not durable underground. Used for axe and other handles, spokes, naves, fencing rails, and agricultural implements.

GURJUN (*Dipterocarpus turbinatus*, Gaert.).—Weight, 50 lbs. Andaman Islands and Burma. Reddish-brown, capable of a smooth finish, durable; possessed of an agreeable aromatic scent which is fairly persistent. Has a close, hard, non-fibrous grain which makes the wood very suitable for a number of purposes where smoothness of surface and hard wear are required. Long lengths and large sizes can be obtained free from all defects, and the supply is expected to be on a very extensive scale. The wood seasons slowly, but although unreliable if unseasoned, when properly dried stands well. Where used for joinery work, cabinet work, ships' fittings, and floorings should always be artificially seasoned. Should be quarter sawn where employed in works of importance. Suitable for all the above named purposes and particularly for floorings, solid and parquet, especially where hard wear is required.

HALDU, INDIAN (*Adina cordifolia*, Hook. f.).—Weight, 42 lbs. India, Burma. Lustrous golden-yellow, even-grained, capable of a fine finish from the tool; durable, seasons well. A beautiful wood for cabinet-making and turnery, and is especially suitable for carving.

HICKORY (*Hicoria alba*, Britt., etc.).—Weight, 50 lbs. North America. Brownish-white to reddish-brown, hard, strong, exceedingly tough, springy and elastic; smooth and straight-grained. Liable to shrink and warp, not durable if exposed. Used very largely for spokes and rims of carriage wheels; also for gunstocks, chair-making, and carriage-building; the best wood yet discovered for golf shafts.

HINOKI (*Cupressus obtusa*, Koch.).—Japan. Yellow to rose-red, sweet-scented, fine-grained, takes a high polish. Used in Japan for decorative work in buildings, etc.

HORNBEAM (*Carpinus betulus*, Linn.).—Weight, 50 lbs. Europe. Yellowish-white; hard, heavy, close-grained; loses much weight in drying, tough and difficult to split. Durable if kept dry, but decays quickly if exposed to wet. Used for cogs, handles, mallets and pianoforte keys.

IROKO (*Chlorophora excelsa*, Benth. and Hook. f.).—Often miscalled African teak. Weight, 40 lbs. Tropical Africa. Yellow to brown, darkening on exposure; strong, straight-grained, very durable. Used as a substitute for teak for gun carriages, joinery and cabinet work, building and constructional work.

IRONBARK (*Eucalyptus leucoxylon*, F. v. M.).—New South Wales. Deep red, hard, heavy, strong, difficult to work. Suitable for piers, wharves, etc., and constructional work generally.

JARRAH (*E. marginata*, Sm.).—Weight, 60 lbs. Western Australia. Reddish in colour, hard, dense, straight-grained, with somewhat interlocked fibres; very durable both in and above ground, and almost non-inflammable. An excellent timber, obtainable in very long lengths and wide widths. Used for all heavy constructional and engineering works, piles for docks, wharves, jetties, and fencing. Excellent for flooring, house-building and for street paving blocks; suitable also for cabinet work.

JARUL (*Lagerstroemia Flos-reginae*, Retz.).—Weight, 43 lbs. India, Burma. Light red and lustrous. Used for shipbuilding, constructional work, and for carts; suitable for cabinet making.

KAKI (*Diospyros Kaki*, Linn. f.).—Japan. Dark grey streaked with black. This is the Japanese ebony. Used in turnery and ornamental work.

KARRI (*Eucalyptus diversicolor*, F. v. M.).—Weight, 63 lbs. Western Australia. Greatly resembles jarrah in appearance; red, dense, tough, elastic; produces timber of exceptional size. Suitable for most of the uses to which jarrah is put, though it is not so durable for underground work or in damp situations. Somewhat prone to dry rot; almost non-inflammable. The heart-wood core should be avoided. When 'Powellised,' is now reported as exceedingly durable and termite-proof for sleepers, etc.

KAURI PINE or COWDIE PINE (*Agathis australis*, Salisb.).—Weight, 38 lbs. New Zealand. Yellowish-white or straw colour, strong, fine, and even-grained; planes well and takes a good polish with a silky lustre on the surface; shrinks very little and is remarkably free from defects. Very valuable for deck planking and for fitments in ships; also used for joiners' work and ornamental purposes.

KEYAKI (*Zelkowa acuminata*, Planch.).—Japan. Hard and strong; lustrous and often highly-figured, when it is used for fine cabinet work. Also employed in building and naval architecture; excellent for carving.

KINGWOOD.—Brazil. A handsome dark brown streaked with crimson to violet and purple, fine grained. Used in fancy cabinet work and turnery, generally in the form of veneer.

LABURNUM (*Cytisus laburnum*, Linn.).—Europe. Dark brown to bronze, hard and close grained; takes a good polish. Used in turnery and for pulleys and blocks.

LANCEWOOD (*Guatteria virgata*, Dun.).—Weight, 50 lbs. Central and South America. Light yellow, hard and close grained, elastic. Used for carts, carriages, and shafts, and also for fishing rods.

LANCEWOOD, BURMA (*Homalium tomentosum*, Benth.).—Weight, 59 lbs. India and Burma. Greyish-brown, fine, close and even grained. Takes a very smooth surface, is apt to split in seasoning, durable. Suitable for furniture.

LANCEWOOD, INDIAN GREY (*Vitex glabrata*, Br.).—Weight, 42 lbs. India, Ceylon. Light greyish-brown with a lustrous sheen and a ripple-like figure. Takes a good polish and would be excellent for furniture.

LAUAN (*Dipterocarpus thurifer*, Blanco).—The Philippine Islands. Dark brown, strong and heavy. Suitable for shipbuilding and furniture.

LAUREL-WOOD. See Walnut, Indian.

LEZA-WOOD (*Lagerstroemia tomentosa*, Presl.).—Weight, 50 lbs. Burma. Grey to greyish-brown, soft, works easily and takes a good polish. Would be suitable for furniture.

LIGNUM-VITAE (*Guaiacum officinale*, Linn.).—Weight, 70 lbs. Central and tropical South America. Dark greenish-brown to black, hard, heavy, strong and close-grained; almost imperishable; liable to cup-shake. Used for pestles, mortars, croquet, and other mallets, and for a great variety of purposes. Has a unique value for propeller shafts for steamers on account of its lubricating qualities.

LIGNUM-VITAE, INDIAN (*Berrya ammonilla*, Roxb.).—Weight, 62 lbs. India. Brown to purplish-red, flecked as in English beech; firm, hard texture, and satiny lustre; has a sticky feeling to the touch, planes well. Suitable for decorative cabinet work and turnery.

LIME (*Tilia cordata*, Miller.).—Weight, 30 lbs. Europe. Pale yellowish-white, soft and light; easily cut and carved; not very durable when exposed to the weather. Excellent for carving, for pianofortes and models of buildings.

LUMBAYAO (*Tarrietia javanica*, Bl.).—Weight, 44 lbs. The Philippines. Dark to light red, light and easy to work. Used for furniture.

MAGNOLIA (*Magnolia acuminata*, Linn.).—Weight, 30 lbs. United States. White, soft, not strong, but very durable. Used for interior fittings and occasionally in cabinet work. Somewhat similar to canary whitewood.

MAHOGANY.—Species uncertain. Supplies received from St. Domingo (Spanish), Cuba, Honduras, Mexico, Panama, Nicaragua, Colombia and the districts of Central America generally; the West Coast of Africa. One of the most valuable of all decorative woods, the merits of which are so universally acknowledged that further description is unnecessary.

MAHWA (*Bassia latifolia*, Roxb.).—Weight, 62 lbs. India, Burma. Reddish brown; used for house-building, furniture, naves of wheels, etc.

MALLET-WOOD, INDIAN (*Schleichera trijuga*, Willd.).—Weight, 68 lbs. India and Burma. Light reddish-brown, seasons well, takes a good polish; strong and durable but somewhat difficult to work. Suitable for handles, agricultural implements, and for furniture.

MAPLE (*Acer saccharinum*, Wang.).—Weight, 40 lbs. Canada and the United States. Creamy to yellowish-white; has a fine, smooth surface and a dense, even grain; tough and strong. Excellent for flooring, especially for hard wear, and for veneering and interior finish; also for furniture. Birds-eye maple is the figured variety, and is appreciated for cabinet work.

MARBLE-WOOD, ANDAMAN (*Diospyros Kurzii*, Hiern.).—Weight, 61 lbs. Andaman Islands. A unique and handsome wood, grey streaked with black, smooth and cold to the touch; liable to shrink and warp unless thoroughly seasoned. Valuable for cabinet work and for walking-sticks, etc.

(*Melia composita*, Willd.).—Weight, 28 lbs. India. Pale brown, resembling cedar in this, as also in grain and texture; durable and light in weight. Suitable for sugar boxes, and for boat and yacht building.

(*Mesua ferrea*, Linn.).—Weight, 72 lbs. India, Burma. Dark red, extremely hard, strong and heavy; good sizes procurable. Suitable for sleepers, wood-paving blocks, etc.

MINGRIS (*Koompassia Beccariana*, Taub.).—Borneo. Light red, very hard and heavy; not durable.

MIRABOW or MIRABOO (*Intsia Bakeri*, Prain.).—Weight, 54 lbs. Borneo. Malay States. Reddish-brown, darkening with age, hard, fine, even-grained; often beautifully figured. Tough, durable, and susceptible of a fine polish. Suitable for decorative furniture.

MORA (*Mora excelsa*, Baill. and Benth.).—Weight, 60 lbs. British and Dutch Guiana. Chestnut-brown, hard, heavy, tough. Usually straight in the grain, but sometimes wavy, which gives a beautiful figure. Takes a good polish, and therefore suitable for furniture. Extremely durable; useful for sleepers, and for beams, keelsons, etc., in shipbuilding; and also in a general way in large scantlings for civil and naval architecture.

MULBERRY, YELLOW (*Morus laevigata*, Wall.).—Weight, 45 lbs. India, Burma. Very beautiful golden to chrome yellow, shining and lustrous; has a pretty silver grain; hard and close grained. Suitable for furniture, turnery, and decorative work generally.

MYALL or VIOLET-WOOD (*Acacia pendula*, A. Cunn.).—Weight, 76 lbs. Australia. Rich dark brown, hard, heavy, close grained, often figured. Has a faint scent of violets. Suitable for veneer, turnery, etc.

NIRI (*Xylocarpus borneensis*, Becc.).—Borneo and the Philippines. Dark red, hard and heavy; fine grained and durable, shrinks little in seasoning. Useful for furniture.

OAK (*Quercus pedunculata*, Ehrh., and *Q. sessiliflora*, Sm., etc.).—Europe etc.

British.—Weight 53 lbs. Light-brown in colour, hard, tough, very strong. Does not easily splinter; durable under water, above ground and in alternate wet and dry. Apt to warp and split in seasoning, but when once thoroughly seasoned few woods stand better. Must not be used in immediate contact with iron. Uses so extensive that it would be impossible to enumerate. Should be more extensively used, however, for panelling and decorative work generally, in place of other supplies which are not so good.

Austrian.—So-called Austrian oak was largely used before the war for decorative panelling, floorings, etc., although in point of fact it was more often specified than supplied. A clean, mild oak, generally free from much defect.

Dantzig.—Similar to the above, though slightly stronger and harder; possesses elasticity in a marked degree.

Riga, Libau, and *Odessa* oak are similar to Austrian. The last-named yields slightly larger dimensions.

French.—Resembles supplies of British, but is generally milder in character.

Italian.—Heavier and less elastic than the British; harder and more difficult to work. No supplies have been forthcoming of late years.

American (*Quercus alba, etc.*).—Weight, 42 lbs. Supplies of American oak include the produce of over twenty-two different botanical species, consequently supplies vary largely in quality, texture, durability and colour. American oak is not employed in the best descriptions of work.

Japanese (*Quercus grossesserrata,* Bl., *Q. crispula, etc.*).—Weight, 40 lbs. Similar in appearance to the European, generally closer in texture; slightly milder than the Austrian, from which it is almost impossible to distinguish it except by examination with the lens. Possesses a very uniform colour. Suitable for the best descriptions of work.

Wainscot.—A term used to describe the produce of any oak when hewn, sawn, or reft on the quarter.

PADAUK, ANDAMAN (*Pterocarpus dalbergioides,* Roxb.).—Weight, 48 lbs. Andaman Islands. A handsome crimson-coloured wood, sometimes streaked with black or brown, often finely figured. Seasons and works well, takes a good polish; shrinks very little, does not crack or split; not subject to dry rot. Excellent for all interior decoration and fittings and for furniture. One of the best woods for gun-carriages and ordnance work; has given good results for flooring. Used in America for such work as the trimming of Pullman cars, the decoration of public and private buildings and for furniture.

PADAUK, BURMA (*P. macrocarpus,* Kurz.).—Weight, 60 lbs. Burma. Resembles the Andaman variety, but is darker in colour, harder and heavier. Used for the same purposes, though possibly a slightly inferior wood.

PARTRIDGE WOOD (*Andira inermis,* Kunth.).—Brazil. Reddish-brown to black, figured and mottled. Used for cabinet work, turnery, umbrella and walking-sticks, etc.

PEAR TREE (*Pyrus communis,* Linn.).—Weight, 50 lbs. Europe. Pale brown, tough and difficult to split; close grained. Cuts with great facility in any direction without splitting, and therefore used largely for carving and wood-engraving; also for musical instruments and for turnery. Needs careful and thorough seasoning.

PLANE (*Platanus occidentalis,* Linn.).—Weight, 30 lbs. North America. Sometimes known as button-wood. Light brownish-yellow, shows a fine figure when cut on the quarter. Used for blocks, screws, etc.

POON (*Calophyllum tomentosum,* Wight.).—Weight, 40 lbs. India. Pale, rather reddish mahogany colour with darker red veins. Close, firm, hard grain; takes a smooth surface, stands well. Suitable for decorative cabinet work.

POPLAR (*Populus alba,* Linn., and *P. nigra,* Linn.).—Weight, 30 lbs. Europe. Light reddish-brown, soft, light; neither strong nor durable. Used for such work as turnery, clog-making, and toys; latterly in much demand for plywood.

PRIMA VERA or WHITE MAHOGANY.—North America. Light creamy yellow, often figured. Used for interior decoration.

PURIRI (*Vitex littoralis,* A. Cunn.).—Weight, 60 lbs. New Zealand. Dark brown, hard, heavy, close grained; very strong and durable. Suitable for heavy constructional work such as piles, posts and sleepers.

PURPLEHEART (*Peltogyne paniculata,* Benth.).—Weight, 50 lbs. Tropical South America. Rich purple, hard, heavy, and lustrous; works well. Used for flooring and all ornamental work such as marquetry and turnery.

PYINMA (*Lagerstroemia hypoleuca,* Kurz.).—Weight, 40 lbs. Andaman Islands. Red, hard, seasons well, durable; easy to work. Suitable for house-building, and for spokes and felloes of wheels.

PYINKADO (*Xylia dolabriformis,* Benth.).—Weight, 60 lbs. India. Rich, warm reddish-brown; close, firm, hard, rather cross-grained texture; cold and sticky to the touch. Very heavy, and becomes harder with age. Extremely durable, probably on account of the resinous substances contained in it. Largely used for railway sleepers. Suitable also for paving blocks, telegraph posts, building, piles, and beams of bridges and similar constructional work.

RASPBERRY-JAM WOOD (*Acacia acuminata,* Benth.).—Weight, 60 lbs. Australia. Dark reddish-brown to purple, streaked with black; has a scent like crushed raspberries; somewhat difficult to work. Used in ornamental cabinet work and turnery.

ROSEWOOD, BAHIA AND RIO (*Dalbergia nigra,* Fr. Allem.).—Weight, 60 lbs. Brazil. The first-named is the superior wood. Dark reddish or purplish-brown, streaked with black; faint scent like rosewater. Dense and heavy, takes a fine polish; liable to heart-shake. Used both solid and in veneer for ornamental cabinet work. Less used now than formerly.

ROSEWOOD, INDIAN (*Dalbergia latifolia,* Roxb.).—Weight, 50 lbs. India. Alternatively known as East Indian or Bombay rosewood and Bombay blackwood. Dark purple streaked with black, hard and close grained; takes a good polish. Available in long lengths and very large sizes of perfect quality. Useful for cabinet work; would be excellent for panelling.

SABICU (*Lysiloma Sabicu,* Benth.).—Weight, 50 lbs. The West Indies. Dark brown, sometimes streaked with black, often finely figured; hard, heavy, close grained; susceptible of a good polish. Used for shipbuilding, interior fittings, cabinet work, furniture, etc.

SAL (*Shorea robusta*, Wall.).—Weight, 60 lbs. Burma. Similar in colour to Indian sal, but more even grained; hard and durable. Used for building and also for small work such as tool handles.

SALMON WOOD, INDIAN (*Eriolaena Candollei*, Wall.).—Weight, 51 lbs. Burma. Bright salmon-red, handsomely marked; hard, shining, close grained, takes a fine polish, seasons well. Suitable for decorative cabinet work, bandings, and inlay.

SANDERS, RED (*Pterocarpus santalinus*, Linn. f.).—Weight, 75 lbs. India. Dark claret-red, sometimes nearly black, streaked with dark violet. Valuable for decorative cabinet work and inlay.

SATINEE (*Ferolia guianensis*, Aubl.).—Weight, 55 lbs. South America. Light reddish-brown, hard, tough, elastic; takes a good polish. Suitable for furniture, also for fishing rods.

SATIN WALNUT (*Liquidambar styraciflua*, Linn.).—Weight, 40 lbs. North America. Should be called gum, by which name it is known in America; has been called hazel pine, sweet gum, and Californian red gum in England. Has no qualities which justify its being called either walnut or pine. Pale reddish-brown, soft, close grained, has a smooth, satiny sheen. Warps and twists badly in drying, and even when seasoned is susceptible to change in the atmosphere. Used for cheap furniture; quite unfitted for street-paving, for which purpose it was tried in London some years ago.

SATINWOOD, WEST INDIAN (*Zanthoxylum*, sp.).—Porto Rico, St. Domingo and the West Indies generally. Chrome yellow to golden, maturing with age to a rose yellow; has a beautiful satiny lustre, often finely figured. Used for the finest cabinet work, brush backs, etc.

SATINWOOD, EAST INDIAN (*Chloroxylon Swietenia*, DC.).—Weight, 60 lbs. Ceylon and occasionally from India. Uses similar to the above.

SISSOO (*Dalbergia Sissoo*, Roxb.).—Weight, 50 lbs. India. Rich warm brown, sometimes streaked with golden or darker brown. Firm, hard, even texture; takes a very smooth surface and a good polish; strong and durable, seasons well. Capable of being carved to any depth in the most intricate shapes without splintering. Suitable for furniture and carving, also for gun-carriage wheels.

STRINGYBARK (*Eucalyptus obliqua*, L'Hérit.).—Weight, 60 lbs. Australia and Tasmania. Brown, hard, heavy, strong, tough and close grained. Splits easily; requires careful seasoning; liable to shakes and gum veins. Useful for a large variety of purposes, including fencing, flooring, piling, paving, mine timbering, and shipbuilding.

SYCAMORE (*Acer Pseudo-platanus*, Linn.).—Weight, 40 lbs. Europe. Yellowish-white, often finely-figured, even grained, lustrous, easily worked; apt to crack and warp during seasoning. Used for rollers for calico printing, also for washing machines, and, in the form of veneer, for panelling in carriages and railway coaches. When stained grey forms the 'greywood' of commerce.

TALLOW-WOOD (*Eucalyptus microcorys*, F. v. M.).—Weight, 60 lbs. Australia. Yellowish-brown, sometimes wavy in grain, strong and durable; liable to shakes. Used for wheelwrights' work, piling, and flooring.

TALLOW-WOOD, INDIAN (*Terminalia Chebula*, Retz.).—Weight, 48 lbs. India. Purplish-grey to brown, with a fine ripple marking. Fairly durable, takes a good polish; cross grained and hard, somewhat difficult to work. Suitable for furniture, house-building, and golf heads.

TAPANG (*Koompassia excelsa*, Taub.).—Borneo. Dark reddish-brown, dense and heavy; durable and strong, but very brittle; obtainable in large sizes. Suitable for heavy constructional work.

TEAK, BORNEO.—This term is an entire misnomer, having been wrongfully applied to a Borneo wood which is certainly not teak; *Tectona grandis* has never been found in Borneo.

TEAK, JAVA (*Tectona grandis*, Linn. f.).—Weight, 43 lbs. Java. Shorter in length and inferior in quality to Indian teak; otherwise similar.

TEAK, MOULMEIN, RANGOON, and BANGKOK (*Tectona grandis*, Linn. f.).—Weight, 45 lbs. India, Burma and Siam. Yellow to brown, darkening with age; moderately hard and strong. Contains an essential oil which acts as a preservative; extremely durable; often unsound at the centre. The chief export timber of India and Burma. Used for an immense variety of purposes; for the backing of armour plates in battleships, also house and boatbuilding and all constructional work; flooring, sleepers, carpentry, carriage-building, etc.

THINGAN (*Hopea odorata*, Roxb.).—Weight, 40 lbs. India. Bright canary yellow, resembling satinwood; mild, straight grain similar to mahogany and of the same texture; very durable. large supplies available in good sizes. Excellent for cabinet work, etc.

THITKA (*Pentace burmanica*, Kurz.).—Weight, 44 lbs. India. Light red, resembling cedar, with a pretty silver grain. Strong and durable; takes a very smooth surface and a fine polish. Suitable for artistic decorative work.

TOTARA (*Podocarpus Totara*, A. Cunn.).—Weight, 30 lbs. New Zealand. Red, fine, and even-grained, hard, heavy, tough, and very durable. Does not warp or twist; resists teredo. Used for piles, sleepers, telegraph poles and general building purposes; suitable also for interior fittings, etc.

TUART (*Eucalyptus gomphocephala*, DC.).—Weight, 70 lbs. Australia. Creamy-yellow, hard, very heavy, tough, durable; has an interlocked grain. One of the strongest timbers known and in demand where special strength and hardness are necessary. Used for railway wagons, engine-bearers, ships' beams, planking, shafts, naves and felloes, and wheelwrights' work generally.

TULIP-WOOD (*Physocalymma scaberrimum*, Pohl.).—Brazil. Striped pink to rose colour. Used chiefly for bandings, inlay, and marquetry.

TULIP-WOOD, INDIAN (*Dalbergia Oliveri*, Gamble).—Weight, 66 lbs. India. Striped pinkish-red; very hard and cross-grained. Suitable for similar purposes to the above.

TUPELO (*Nyssa sylvatica*, Marsh.).—Weight, 40 lbs. North America. Also called tupelo gum. White to light yellow, paling somewhat on exposure to air; smooth and close-grained; liable to warp. Used in a general way as a substitute for whitewood, also for electric casings and for furniture.

VENGAI (*Pterocarpus marsupium*, Roxb.).—Weight, 55 lbs. India. Golden yellowish-brown with lighter and darker streaks; smooth and lustrous; firm and hard with contrary grain; has a good figure when cut on the quarter. Used for cabinet work and interior fittings.

WALNUT (*Juglans regia*, Linn.).—Weight, 40 lbs. Europe and Asia. Greyish-brown, often finely marked and figured; hard, firm, close-grained; takes a good polish. Liable to the attacks of worm (beetle) when used for furniture. The finest wood for gun-stocks, as it withstands shock and does not warp. Used for pianofortes and furniture generally.

WALNUT, BLACK (*Juglans nigra*, Linn.).—Weight, 40 lbs. North America. Chocolate-brown to grey, darkening with age. Easily worked and more durable than European walnut; also less liable to insect attack.

WALNUT, INDIAN (*Albizzia Lebbek*, Benth., and *A. procera*, Benth., *A. odoratissima*, Benth.).—Weight, 46 lbs. India. Rich warm brown, streaked with yellow and black; often has wavy marks and broken roe and mottle. Firm, hard texture; takes a good surface from the tool and has a bright lustre; seasons and stands well; available in large sizes. Suitable for furniture, panelling, veneer, turnery, and all decorative work.

WALNUT, INDIAN BLACK (*Terminalia tomentosa*, W. and A.).—Weight, 55 lbs. India. Dark brown, variegated with darker streaks; needs careful seasoning; large supplies available. Suitable for decorative, cabinet, and instrument work.

WANDOO (*Eucalyptus redunca*, Schau.).—Weight, 70 lbs. Australia. Brownish-red, very hard, strong, dense and durable. Equal to jarrah for railway sleepers; also used for piles, bridge-building, wheelwrights' work, boat-building, fencing, and general building work.

WHITEWOOD, CANARY (*Liriodendron tulipifera*, Linn.).—Weight, 30 lbs. North America. Called in America, poplar, yellow poplar, tulip tree, etc.; known in England as whitewood, canary whitewood, and canary wood; in Scotland, wrongly called basswood. Pale yellow, soft, light, tough; easily worked, takes a good polish and stains well; liable to shrink and warp. Useful for indoor building, joinery, wainscoting, chairmaking, carriage-building, etc.

WILLOW (*Salix alba*, Linn., and *S. coerulea*, Linn.).—Weight, 30 lbs. Europe. White, light, soft, smooth-grained; very durable in water. Used for brake blocks on railway wagons, as it does not readily fire with friction. Largely employed for the making of artificial limbs and for cricket bats.

YACAL (*Shorea*, sp.).—The Philippines, Borneo. Brown, darkening on exposure; good and durable. Used for railroad ties and for constructional work generally.

YANG (*Dipterocarpus*, sp.).—Siam. Similar in all respects to the Eng of Burma (*q.v.*).

YELLOW HEART (*Fagraea fragrans*, Roxb.).—Weight, 60 lbs. Burma. Light yellowish-brown, hard, close-grained, very durable. Used in Burma for house-building, piles and joinery, but in this country, where supplies are now arriving, it will probably be most appreciated as a first-class cabinet-wood.

YELLOW JACK-WOOD (*Artocarpus integrifolia*, Linn. f.).—Weight, 40 lbs. India, Burma. Rich gamboge yellow, darkening somewhat on exposure; has a hard and soft contrary grain. Used for decorative furniture work, brush backs, etc.

YEW (*Taxus baccata*, Linn.).—Weight, 50 lbs. Europe, India, etc. Reddish-brown to amber, often finely figured; very hard, close-grained and heavy. Said to be more durable than other European wood. Tough and elastic. Used for chair-making, walking sticks, furniture; and in the form of veneer for decorative work generally; also for axles, cogs for mill-wheels, etc.

ZEBRA WOOD, RED (*Melanorrhœa usitata*, Wall.).—Weight, 56 lbs. India. Red, with darker red or golden streaks; very hard. Useful for tool handles, and general decorative work. Has been recommended for building, sleepers, gun-stocks, etc.

Durability of Timber.

WOODS WHICH RESIST THE SEA-WORM (*Teredo navalis*).—No complete list of such timbers is possible, for reports vary as to this quality being possessed by any particular timber, while the increase of scientific research and the resultant preventive measures might cause such a list to be considerably enlarged. It is therefore recommended to institute enquiries concerning the timber at the time of purchase.

This same principle should be applied when considering the durability of timber in other particular circumstances.

Strength of Australian Timber.

The following table, compiled by Professor Warren, of the Sydney University, sets forth the respective value of all the Australian best hardwoods in comparison with the Western Australian Jarrah, Karri, and Red Gum :—

Timber.	Weight per Cubic Foot.	Average Strength in Lbs. per Square Inch.			
		Transverse Strength. Modulus of Rupture. 54 ins. × 6 ins. × 4 ins.	Tensile Strength.	Compressive Strength 12 ins. × 3 ins. × 3 ins.	Shearing Strength 6 ins. × 6 ins. × 3 ins.
N.S.W. Timbers :	Lbs.				
Ironbark	75·18	18,204	17,900	10,500	2,200
Tallow-wood	77·06	15,300	13,400	8,500	1,660
Blackbutt	66·69	14,800	21,000	8,600	1,700
Blue gum	73·64	14,700	15,900	7,800	1,800
Grey gum	67·32	17,600	22,000	9,500	2,100
Spotted gum	62·19	15,300	16,400	8,500	2,200
Turpentine	69·34	14,400	17,800	8,500	1,600
Grey or white box	73·62	15,950	21,564	8,021	2,110
Murray red gum	62·19	11,267	13,618	9,397	2,039
Stringybark	71·33	13,083	15,976	6,098	2,089
W.A. Timbers :					
Jarrah	62·0	12,040	16,047	6,839	1,878
Karri	—	11,208	13,920	7,132	1,637
Red Gum	62·5	10,739	22,725	5,476	1,556

Content Sizes and Weights of Timber.

40 cubic feet of unhewn timber
50 " squared "
600 super. feet of 1-inch planks or deals
400 " 1½ " "
300 " 2 " "

240 super. feet of 2½-inch planks or deals
200 " 3 " "
170 " 3½ " "
150 " 4 " "
} = 1 load.

120 deals = 1 hundred. Battens are not over 7 inches wide. Deals are not over 9 inches wide. Planks are mostly 11 inches wide.

One square (100 *feet superficial*) *of flooring requires :—*

12-feet deal boards :—	Number.
Rough	12¼
Edges shot	12½
Wrought and laid folding	13
Wrought and laid straight joint	13½
Wrought, ploughed, and tongued	14

12-feet battens :—	Number
Rough	16
Edges shot	16½
Wrought and laid folding	17
Wrought and laid straight joint	18

Number of cubic feet in one 1 of timber : Ash, 45 ; elm, 60 ; mahogany, 34 ; beech, 51 ; fir, 65 ; oak, 39.

Standards by which Deals are Sold.

Planks, deals, and battens are usually sold by the number required to make up the same cubic content as 6 score or a long hundred of some standard size ; thus, in London the Petrograd standard is used, which with others is given below :—

Standard.	No. of Pieces.	Size.	Feet Cube.	Feet Superficial.
Petrograd	120	12 ft. × 11 ins. × 1½ ins.	= 165	= 1,320
London and Dublin	120	12 ft. × 9 ins. × 3 ins.	= 270	= 1,080
Christiana hundred	120	11 ft. × 9 ins. × 1½ ins.	= 103⅛	= 990
" "	60	15 ft. × 11 ins. × 1½ ins.	= 103⅛	= 825
Quebec short hundred	100	12 ft. × 11 ins. × 2½ ins.	= 229⅙	= 1,100
" long "	120	10 ft. × 11 ins. × 3 ins.	= 275	= 1,000
Drammen	120	9 ft. × 6½ ins. × 2½ ins.	= 121⅝	= 585

Prepared floorboards are sold by the customary square, a given number of feet run, as below varying with the width, so as to approximate to the square of 100 feet superficial :—140 feet run of 9-inch boards, 160 feet of 8-inch, 170 feet of 7½-inch, 180 feet of 7-inch, 185 feet of 6¾-inch 200 feet of 6-inch, 210 feet of 5⅝-inch, 220 feet of 5½-inch, 230 feet of 5¼-inch, 240 feet of 5-inch.

To cut the Best Beam from a Log.

Divide the diameter, *ab* (fig. 668), into three equal parts, *af*, *fe*, *eb*, and from *e* and *f* draw the lines *ed*, *fc*, at right angles to *ab* ; join *ac*, *ad*, *bc*, and *bd* ; then *acbd* is the cross-section of the beam required.




FIG. 668.

To cut the Stiffest Beam from a Log.

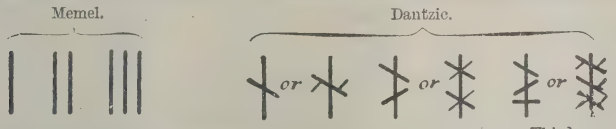
The stiffest cross-section will be that in which the diameter is divided into four equal parts and perpendiculars drawn as above described.

Selection of Timber.

In selecting timber the most convenient sizes are 12 inches square. Choose the highest in colour, where the strong red grain appears to rise to the surface; avoid spongy hearts, porous grain, and dead knots.

SCRIBE MARKS.

The following are the 'scribe marks' indicating the quality of Memel and Dantzic timber :—



Memel timber is generally about 13½ or 14 inches square ; Dantzic timber about 18 or 19 inches. When the *slab deals*, or outsides, have been cut away, the log that remains of this timber is generally 14 to 15 inches square.

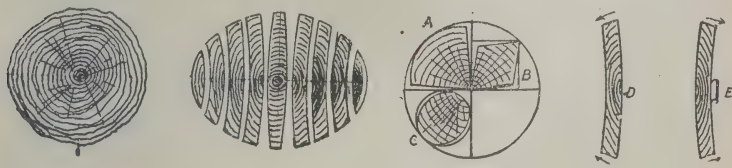


FIG. 668A.

SHRINKAGE OF TIMBER.

A. Sector becomes narrower. B. Square becomes rhomboidal. C. Circle becomes elliptical.

The outside layers contract most, these being youngest. The centre plank will therefore contract at edges, the side planks contracting as at D. If a good shaving is taken off, even thoroughly dried wood will shrink, as in E, the new surface exposed shrinking and drawing the wood inwards.—*Horobin.*

Seasoning Timber.

Timber is improved and rendered less liable to warp by being immersed in water some weeks If long immersed, when exposed to the air it becomes brashy and useless. Seasoned timber should be piled under shelter and kept dry, and should have a free and gentle circulation of air ; bottom layer to be placed on timbers 24 ins. from the ground, and each subsequent layer to have an inch space between.

TIME REQUIRED FOR SEASONING TIMBER.

Oak.—From 4 to 8 square inches, about 6 months; under 12 square inches, 10 months; under 16 square inches, 14 months; under 20 square inches, 18 months; under 24 square inches, 22 months; above 24 square inches, 26 months.

Fir.—Half the foregoing time in each case.

Artificial Seasoning of Timber.

(Contributed by G. Stanley Walpole, D.Sc., F.I.C.)

Artificially seasoned timber, when the seasoning is scientifically carried out, is as good, and, in some cases, better than similar timber which has been seasoned by natural means.

The following show the results of actual tests carried out by a Government Department :—

Nature of Timber.	Natural Seasoning.		Artificial Seasoning.	
	Breaking Load. lbs./sq. ins.	Elastic Limit. lbs./sq. ins.	Breaking Load. lbs./sq. ins.	Elastic Limit. lbs./sq. ins.
American Walnut . .	15,300	7,030	15,000	7,000
Mahogany	11,700	6,230	12,700	6,880
English Ash . . .	10,900	5,500	14,000	7,000
Spruce	8,500	4,500	9,000	4,000

Artificial seasoning, properly carried out, reproduces in the kilns or chambers the best atmospheric conditions, and the process is continuous. With natural seasoning the process of drying frequently comes to a standstill and remains so for long periods owing to adverse weather conditions.

All systems of artificial seasoning depend upon the circulation of air around the timber which is stacked in a kiln or chamber in such a manner that practically the whole surface of the timber is exposed to the currents of air. Such air is warmed to the required degree, but in a correctly designed plant the temperature of the air during any period is limited to that figure, determined by experience, which ensures that evaporation of moisture takes place at a 'safe' rate, the term 'safe' being used to indicate that the material is not deteriorated in any way.

Timber dryers can be divided into two classes; the first those in which the material to be dried is moved through zones of air each differing in temperature and humidity from the neighbouring one. The second type is that in which the timber itself remains stationary, the air conditions being varied throughout the period that the timber is in the kiln. The first type are termed 'Progressive or Tunnel Dryers' and the second type 'Compartment Dryers.'

Progressive dryers may be again divided into two sections; first those employing the use of fans to ensure positive air circulation (Sturtevant type), and secondly those which depend for air circulation upon the difference of temperature between one part of the kiln and another (Erith type). In the case of compartment dryers, fans are almost invariably used, as thermal circulation would not be satisfactory for that type.

The selection of the right class of dryer for any particular duty is a matter of considerable importance, and the following remarks may be of service in guiding manufacturers and others in this matter.

In cases where the duty of the proposed seasoning plant is definitely known in advance and where such duty consists of the drying of large quantities of timber (particularly soft woods) of uniform grade and thickness, the progressive type dryer will probably be found the most economical. In cases where it is impossible to predict the exact duty of the plant, or where many different kinds and thicknesses of timber have to be dealt with, the compartment system will prove more satisfactory, as when properly installed it is very 'elastic' in nature. Further, if there is a possibility that the nature of the trade will alter, according to varying conditions, the compartment system would be preferable to the progressive type, by reason of the fact that, should different classes of timber have to be dealt with, the apparatus, as originally installed, would require very little, if any, modification.

PROGRESSIVE DRYERS.

This type of dryer gets its name from the movement of the timber through the tunnel. The timber is piled on trucks which run on suitable rails right through the tunnel from one end to

the other. The tunnel is first completely filled, and afterwards the introduction of a truck of green timber displaces a similar truck of seasoned material at the opposite end. The movement of the trucks is thus said to be 'progressive.' Briefly, the plant itself comprises a long tunnel constructed of brickwork or concrete or, in some cases, of timber. There are doors at both ends and the necessary rail equipment is also provided upon which the trucks run in passing through the dryer. In the case of the 'fan-less' progressive dryers (Erith type) there are a number of steam pipe coils arranged below the running rails. In cases where the rail level of the kiln must be the same as the general ground level, the spaces for the coils must be excavated, but in other cases it may be possible to raise the rail level of the kiln a few feet in order to give the necessary space for the pipes under the tracks.

In the fan-less (Erith) type of progressive dryer the pipe coils are arranged in such a manner that circulation of air is obtained from end to end of the kiln, and the majority of the heating coils are grouped together near the 'dry end' of the plant. The air in passing over the timber absorbs moisture, and the plant is so arranged that the trucks of green timber meet first of all air having a low temperature and a high humidity. As the truck passes through the dryer it meets air having gradually increasing temperature and decreasing humidity.

The other type of progressive dryer (Sturtevant) depends for air circulation upon centrifugal fans, and this means that the air circulation and temperature are under *separate* control. The arrangement of trucks and rails in this type are generally similar to those for the 'fan-less' system, but in this case no excavations for steam coils are necessary, as the heater is fixed entirely outside the dryer in a small room or shed adjoining. For a given output the ground area occupied by the fan type (Sturtevant) progressive dryer is less than the fan-less (Erith) type. As previously indicated, both systems of tunnel or progressive dryers are suitable for large quantities of uniform timber such as floorboards, match boarding, etc. The application of the progressive systems are, however, somewhat limited, and for cases where a more elastic plant is desired it is undoubtedly better to adopt the

Compartment Dryers.

In this system a number of compartments or kilns are built, generally of brick or concrete, and these are loaded with timber either by hand piling or by truck piling. It should be noted, however, that if truck piling is adopted it is only for convenience in handling the material, and is not essential to the working of the dryer as such. The number of compartments may vary from one to (say) six, all being supplied by one central plant. For a larger number of compartments it is generally desirable to divide the same into groups, each dealt with by a separate plant. Speaking generally, it may be said that for a given output the ground area required for the compartment system is less than with the 'fan-less' progressive type. Further, the compartment system is much more easy to arrange in cramped positions, as with the progressive type a considerable *length* of site is necessary to allow of proper working of the system.

With the compartment system, air is introduced through a duct in each compartment along the side wall near the floor, the air passing over and under the piled timber (which is arranged with its length in the direction of the length of the chamber), and then passes out through a corresponding duct on the opposite side of the kiln. The air circulation is made positive by means of centrifugal fans arranged in a small chamber either at one side or on top of the dryer, and in this system means are provided to enable each compartment to be under separate and independent control both as to temperature and humidity. Thus it is quite possible to deal with very different classes of timber in adjacent compartments simultaneously. Further, the stage of drying reached in each of the different compartments may be quite different, and the benefits of this must be at once apparent to those interested.

A very important adjunct of the compartment system is the *Guide Chart System of Control* (Sturtevant patent). This appears to be a scientific solution of the problem, and the object is to reproduce in each kiln, during the whole period of seasoning, ideal conditions previously determined by investigation and experience. The working of the system is briefly as follows: In each compartment, or kiln, a self-recording hygrometer is arranged, this instrument comprising wet and dry bulb thermometers actuating levers terminating in pen points which rest against a revolving drum rotated by clockwork. A guide chart is used for each variety and thickness of timber, and upon this chart are already marked guide lines indicating both the dry bulb and wet bulb temperatures which should be given from day to day in that particular compartment. This chart is wound on a spool and one end attached to the clock drum which, in rotating, gradually draws the chart off the spool on to the drum. The dampers, etc., in connection with each compartment are operated by hand at intervals, so that the conditions in the compartment correspond to those given by the guide lines on the chart. Thus not only do the guide lines give the conditions to be aimed at, but the pen pointers make a permanent record showing how nearly the actual conditions have approached the ideal conditions. It will thus readily be seen that the Guide Chart System acts also as a check on the attention of the kiln operator.

A large number of guide charts have already been prepared by the Sturtevant Engineering Co. Ltd., to suit various classes and thicknesses of timber, both hard and soft, and once the best conditions for a particular grade of timber have been established, similar conditions for subsequent batches can be reproduced as required.

DECREASE IN DIMENSIONS OF TIMBER BY SEASONING.

Wood.	Shrinkage	Wood.	Shrinkage.
	Inches.		Inches.
Canada cedar	14 to 13¼	Southern pitch pine	18⅜ to 18¼
Elm	11 „ 10⅜	Spruce	8½ „ 8⅜
English oak	12 „ 11⅛	American white pine	12 „ 11⅛
Northern pitch pine	10×10 „ 9¼×9¾	Northern yellow pine	18 „ 17⅛

COMPARATIVE WEIGHT OF GREEN AND SEASONED TIMBER.

Wood.	Weight of Cubic Foot in Lbs.		Wood.	Weight of Cubic Foot in Lbs.	
	Green.	Seasoned.		Green.	Seasoned.
Ash	43⅞–63½	32½–59	Oak	58½–63	43–62½*
Beech	56¼–63½	41–52	Riga fir	23¾–63¾	—

(*Nördlinger.*)

* The similarity in the maximum figures for green weight of all four species, and the near approximation to the weight of a cubic foot of water (62½ lbs.) should be noted.

PERCENTAGE OF LOSS OF WEIGHT IN SEASONING.

Red pine	12 to 25	Larch	16 to 25	Elm	About 40
American yellow pine	18 to 27	Oak, British	16 to 30	Mahogany	16 to 25

Preservation of Timber.

In order to keep timber sound it should be kept free from all moisture and be well ventilated. Some timbers, such as oak, beech, elm, and others, will last for a very long time if kept constantly under water; oak piles have been known, under these conditions, to last hundreds of years. Timber exposed to alternate moisture and dryness lasts a very short time.

Slaked lime hastens decay of timber, which should therefore in buildings be protected against contact with mortar.

Timber is destroyed by either wet- or dry-rot. Both wet- and dry-rot are due to different fungoid growths, and in both cases gases, principally carbon-dioxide and hydrogen, are given off. Dry-rot is usually caused by want of ventilation; damp and moderate warmth encourage it. The sap-wood is usually attacked first. It often occurs where ends of beams are built into walls, where wet and unseasoned timber is painted, where a damp floor is covered with oil-cloth or other impervious covering, and in warm cellars. The seeds of the dry-rot fungi are carried about readily, and once it breaks out in one part of a building the timber in other parts may become infected.

Timber is best preserved by being well seasoned, kept dry, and ventilated.

Painting or tarring will preserve timber, provided the latter is thoroughly dry and well seasoned; otherwise it only confines the sap and moisture and causes rot.

Tredgold doubted the utility of painting timber which was not exposed to the weather.

STERNOCARBOL WOOD PRESERVATIVE.

(*Messrs. Sterns Ltd.*)

This preparation, applied externally with an ordinary brush, soaks into the interior of the wood, and is claimed not only to prevent all kinds of internal decay, but to enable the wood to successfully defend itself against external attack.

STORING LOGS.

Logs stored on skidways or left in the woods during the summer months may be damaged in a number of ways, principally through sap-staining, insect attack, decay, and checking.

Storing under water will prevent 'blue stain,' checking, insect attack, and decay, except that logs in sea-water, where marine borers are active, would be subject to attack. Wood of any species completely submerged in water will resist decay indefinitely. Alternate wetting and drying favour decay. Storing on skids in such a way that the air can circulate freely around each log will prevent the accumulation of moisture and thus retard decay. Such storing, however, is liable to increase checking, and, unless the bark is removed, will have little effect in preventing insect attack. The skids should be situated where there is good air circulation, and they should be raised off the ground. Weeds and brush should be cut down. Peeling the bark completely from the logs will do much to eliminate insect attack and retard decay

by removing the protection required by many insects and by allowing the logs to dry more rapidly. It will favour checking, however. Painting the ends of the logs will very materially retard the loss of moisture and thus retard end checking. If the logs are peeled and properly piled on skids, painting should not increase the danger from decay or sap stain. A yellow ochre or barn paint will do fairly well for the purpose. Painting the peeled surfaces with coal-tar creosote will be useful in preventing sap decay, and if applied soon enough may be effective in retarding sap stain. Any grade of creosote in common use for wood preservation is suitable, and expensive oils are unnecessary. (*'Bulletin of the Hydro-Electric Commission of Ontario.'*)

Preservative Processes.

Charring timber.—The ends of posts sunk into the ground are often charred in order to prevent rot, but recent experiments appear to show that the charring is ineffective and useless.

Vulcanising.—The wood is heated in a closed cylinder from 8 to 12 hours under a pressure of 150 to 200 lbs. per square inch and a temperature of from 300° to 500° F.

Drying.—Compressed, superheated and dried air is circulated in order to remove excessive moisture; it is claimed that the sap undergoes a chemical change and solidifies in the pores as an antiseptic matter in cooling.

Sugared timber.—A paper was read before the British Association at their meeting in 1903 on the preservation, seasoning, and strengthening of timber by means of boiling it in a saccharine solution and afterwards evaporating the moisture in a drying chamber. This process filled the interstices of the wood with a substance akin to the wood itself, rendering it more solid, firm and compact. The dried sap of the sugar-cane acted in timber much as mortar did in a stone wall, binding the otherwise loose materials strongly together.

Different methods of preserving timber by impregnation with solutions of metallic salts, such as bichloride of mercury (*Kyanising*), sulphate of copper (*Boucherising*) and chloride of zinc (*Burnetising*), have met with little success.

In the 'Ferrell' process, the principal constituents of the injected solution are sulphate and chloride of aluminium.

Creosoting.

(Contributed by Robert S. Vesey, Member of the Society of Chemical Industry.)

Modern Methods of Creosoting.

Creosoting is recognised as the most efficient method of preserving timber, and all Railway Companies in this country have their sleepers and crossing timbers treated in this way. The process is also generally used for the preservation of telegraph poles, piles, posts, and the like. Softwood sleepers untreated seldom last more than three to four years, whereas their average life when creosoted is about fifteen years, and even then, in most cases, the sleepers are only removed from the track owing to their having become chair-worn, and thereafter the bulk have many years life in them as siding sleepers or fence posts.

The 'Full Cell' Process of creosoting is generally preferred to the 'Empty Cell' or 'Rüping' Process, which latter principally aims at penetration and the withdrawing of two-thirds of the creosote at the end of the operation. Although only about one-third of the creosote used for the 'Full Cell' process is left in the timber in the case of the Rüping Process, the cost of this treatment is nearly two-thirds the cost of the 'Full Cell,' and in this country it has seldom been made use of.

Construction of Creosoting Plants.

Creosoting is carried out in cylinders or retorts 75 to 105 ft. in length by 7 ft. in diameter, the average plant consisting of three, which are erected upon underground covered storage tanks of $\frac{3}{8}$-in. steel, and usually 7 ft. deep, two of these tanks being used in conjunction with each cylinder. The cylinders are of $\frac{7}{8}$-in. steel plate tested to stand at least 400 lbs. pressure per sq. in., and are each fitted at the bottom with two suction pipes for lifting and dropping the creosote to and from the cylinders; at the top of each there is a vacuum valve, pressure valve, overflow pipe, and safety valve. They are fitted with a railway track of about 2 ft. 6 ins. gauge, to take the steel bogies loaded with the timber which is to be creosoted, and 'holding-down' bars are fitted throughout the entire length to prevent the bogies floating while the process is being carried out; each load is either chained or fixed to the bogie by means of arms. Modern plants are fitted with doors at each end of the cylinders to allow the same to be charged or withdrawn from either end, the doors being fixed to the cylinder and swinging on a projecting arm fixed to the top; they can be easily opened and closed by two men. These doors are sealed with about twenty screws 12 ins. long by $2\frac{1}{2}$ ins. diameter, and are tightened by means of a large hand spanner.

The storage tanks cover the whole area occupied by the cylinders, and generally project about 2 ft. to 3 ft. at the sides, and about the same distance at the ends. This additional length at the ends is left open for a space of about 3 sq. ft. and is necessary for allowing the drainage from the cylinders, at the end of the process, to enter the tanks. A portable bridge of rails connects the creosoting cylinders with the bogie roads in the works, and this is of course removed when the cylinder doors are being opened or closed. The cylinders are usually covered with asbestos

to enable the heat of the creosote to be maintained, although in impregnating the timber there is always a reduction in the temperature of the oil; in some cases steam coils are fitted in the cylinders. The storage tanks should always be fitted with coils to enable the creosote to be kept at a temperature of 140° to 150° F., although in America very much higher temperatures are used. These tanks are used for the filling of the cylinders, and to obtain additional creosote for impregnation a smaller underground tank is installed, which is usually built in concrete and is placed in the boiler-house; it is known as the 'Pressing' tank, and on it are fitted the vacuum and pressure pumps.

Working Process.

About 50 cu. ft. of the timber to be creosoted is selected as an average to test the amount of creosote absorbed, and this is weighed before and after creosoting. Immediately the doors have been screwed down, the vacuum pump is started and the air extracted from the cylinder, about 25 ins. of mercury being obtained. This vacuum being maintained, the suction cocks are opened and the cylinder is nearly filled from the two storage tanks immediately underneath; but to complete the filling, the suction cocks are closed, and the pressure pump used for about two minutes to pump in sufficient creosote, the additional oil being taken from the pressing tank. The operator then records from the gauge the number of gallons of oil in the pressing tank, and continues working the pressure pump until the required number of gallons to impregnate the timber have been injected, the amount varying according to the specification. In the case of well-seasoned Baltic Red Fir or Scots Fir, 8 to 10 lbs. per cu. ft. may be injected with 60 to 80 lbs. pressure per sq. in. As soon as sufficient oil has been injected the pressure pump is stopped, the suction valves opened, and the creosote dropped back into the storage tanks. The cylinder doors are then opened and superfluous oil allowed to drain from the timber, and although circumstances will not always permit, no charge should be withdrawn for at least two hours.

Time taken for Carrying out Process.

However well stowed the bogies might be with the timber to be creosoted, the cylinders are only from 50 to 55 per cent. filled, so that a large quantity of creosote is required in connection with each charge. The following is about the average time taken to carry out the creosoting of seasoned Baltic Red Fir with a modern plant:—

Obtaining 25 in. vacuum and lifting oil from storage tanks to cylinder, and completely filling by means of pressure pump—8 to 10 minutes.

Injecting 10 lbs. of cresote per cu. ft. with pressure pump at 60 to 80 lbs. pressure per sq. in. (not maintained, but which is sufficient to inject this quantity of oil)—6 to 10 minutes.

Dropping creosote to storage tanks at end of process—15 minutes.

During recent years the importation of Oregon and Pitch Pine sleepers has considerably increased, which has necessitated the use of higher pressures for creosoting the same, and much longer time being taken to carry out the process. Seasoned Oregon Pine will seldom take more than 2 to 4 lbs. of creosote per cu. ft. at 200 lbs. pressure maintained for 4 hours with the creosote at 150° F., although if sappy pieces are selected it is possible to inject up to 10 lbs. per cu. ft., but these cases are very exceptional in this country. With the various classes of Pitch Pine met with in England ('Longleaf,' 'Shortleaf,' and 'Loblolly') the absorption varies very considerably, and seasoned hard grown 'Longleaf' Pitch Pine will seldom absorb more than an average of 5 lbs. per cu. ft. with a pressure of 200 lbs. per sq. in. maintained for 4 hours. In the case of 'Shortleaf' the absorption would average 8 to 12 lbs. per cu. ft. with the same pressure and time, but 'Loblolly,' which is very sappy and unsuitable for use where strength is required, will absorb up to 20 lbs. of creosote per cu. ft. Seasoned Portuguese Pine will also absorb 10 to 14 lbs. of creosote with low pressure, but this timber is seldom met with in this country. Seasoned Larchwood (Northern Europe and home-grown) will on the average only absorb 5 to 7 lbs. per cu. ft. with high pressure maintained, as in the case of Oregon Pine. Although other species of timber are creosoted in this country, at least 95 per cent. are of Baltic Red Fir, Scots Fir, Oregon, and Pitch Pine, the majority being Baltic Red Fir, which is nearly always preferred for sleepers.

Specification of Creosote Oil.

There has been a good deal of controversy over the question of the best grade of creosote for use in the preservation of timber, some authorities favouring the naphthalene bases, and others placing more importance upon the tar acids. The following is the *average* specification stipulated by those who have creosoting to carry out in this country:—

1. The creosote used, to be obtained from the distillation of coal-tar, free from all impurities, and to be fluid at 75° F.
2. Specific gravity to be between 1·040 and 1·080 (water at 60° F. being 1·000).
3. To yield not more than 75 per cent. upon being distilled to 600° F.
4. Tar acids, not less than 8 per cent.
5. Water, 3 per cent. maximum.
6. In some cases the percentage of naphthalene is not mentioned; in others a minimum of 10 per cent., and a maximum of 30 per cent., and sometimes the specification states that this is to be kept as low as possible. There is no doubt that in the case of piles which are in contact with water they should be creosoted with oil containing a percentage of naphthalene, as this prevents the exudation of the more fluid parts of the creosote, and also assists in preventing the entrance of the water.

British Standard Specification for Creosote.*

Suitable for the treatment of Railway Sleepers and Telegraph, Telephone, and Hangar Poles
(*Abstract of No. 144—August*, 1921.)

1. The material shall consist essentially of a distillate of coal tar, and shall be free from any admixture of petroleum or similar oils.

2. The specific gravity shall not be less than 1·015, and not more than 1·07 at 38° C. (100° F.) when compared with water at the same temperature.

3. The material shall become completely liquid on being slowly warmed to 38° C. (100° F.) with stirring, and on cooling down shall remain completely liquid after standing for two hours at 32° C. (90° F.).

4. The amount of water in the creosote shall not exceed 3 per cent.

5. When 100 c.c. measured at 38° C. (100° F.) of the dry creosote are distilled from a 250 c.c. distillation flask at such a rate that the distillation is complete in about twenty minutes, there shall distil at 760 m.m. pressure,

up to 205° C. (401° F.)	not more than	7 c.c.
„ 230° C. (446° F.)	„	40 c.c.
„ 315° C. (599° F.)	„	78 c.c.

the volumes of all fractions being measured at 38° C. (100° F.).

The residue above 315° C. (599° F.) shall be soft and not sticky, and its weight shall be not less than 22 gms.

6. The amount of tar acids shall be not less than 5 per cent. and not more than 16 per cent. by volume.

7. The amount of matter insoluble in benzol (benzene) shall not exceed 0·4 per cent. by weight.

B.S.S. Alternative for Scotch Creosote.

Scotch creosote shall conform to the above specification with the following exceptions:—

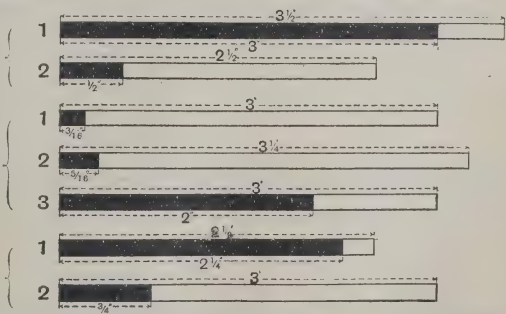
2. The specific gravity shall be not less than 1 at 38° C. (100° F.). In the case of the blast furnace oil the specific gravity may be lower, but shall not be less than 0·940 at 38° C. (100° F.).

5. The distillate at 315° C. (599° F.) shall be not more than 85 c.c. and the residue not less than 15 grms.

6. There shall be no upper limit to the amount of tar acids.

General Notes on Creosoting.

It is erroneous to think that in creosoting under pressure the oil penetrates throughout the timber, as this is not the case, and only occurs when timber is of small dimensions. It may be taken as a general rule in the case of Baltic Red Fir, Pitch Pine, and Oregon, that the timber showing sapwood will readily absorb the creosote, and the reverse is the case with that showing little sapwood. The heart penetration is from $\frac{1}{16}$ in. to $\frac{1}{4}$ in., according to the growth and species. In the case of Baltic Red Fir the impregnation varies considerably, according to the nature of the timber, and in all specifications for creosoting, care should be taken that the words 'average per cu. ft.' are inserted, as to obtain identical impregnation in each piece is impossible. Presuming that an average of 10 lbs. of oil per cu. ft. has been injected into the charge of timber, it does not necessarily mean that the timber which has absorbed 12 lbs. per cu. ft. will last longer than pieces with 8 lbs. per cu. ft., as the latter has a greater percentage of the heart of the tree, which prevents the admission of a large amount of creosote. The oil has done its work as far as possible, and with the smaller impregnation has considerably extended the life of the timber. The following illustrations (which are extremes) show test cores or borings taken from timber of 10 ins. by 5 ins. section showing varying penetrations, the species being creosoted separately:—



* By permission of the British Engineering Standards Association.

The cores are two-thirds the actual size, and the impregnation shown in black.

A Creosoting Plant of the foregoing description would be capable of annually treating over two million cu. ft. of the softwood species referred to, and one million cu. ft. of the hardwood, provided the works were of about 15 acres extent with 5 or 6 travelling cranes for the transportation of the timber.

To ascertain Weight of Timber-work, Timber Flooring.

Multiply breadth in feet by length in feet by the thickness in inches, and by one of the following factors, according to the material: For elm, use 2·92 lbs.; for yellow pine, 3·42 lbs.; for white pine, 2·97 lbs.; for dry oak, 4·85 lbs.

To find the Weight of Timber Beams, Posts, and Joists.

Multiply length in feet by the breadth in inches and the depth in inches, and the product by one of the following factors: For elm, ·243 lbs.; yellow pine, ·285 lbs.; white pine, ·247 lbs.; dry oak, ·404 lbs.

WEIGHT PER THOUSAND (M), FEET BOARD MEASURE.

Wood.	Dry.	Partially Seasoned.	Green.
	Lbs.	Lbs.	Lbs.
Pine and hemlock	2,500	2,750	3,000
Norway and yellow pine	3,000	4,000	5,000
Oak and walnut	4,000	5,000	—
Ash and maple	3,500	4,000	—

AVERAGE WEIGHT PER CUBIC FOOT OF WOODS.

Wood.	Weight.	Wood.	Weight.	Wood.	Weight.	Wood.	Weight.	Wood.	Weight.
	Lbs.		Lbs.		Lbs.		Lbs.		Lbs.
Ash	45	Birch	44·5	Larch	35	Yellow pine	42	White pine	35
Beech	43	Elm	35	Mahogany	50	Oak	58	Yew	50

Wooden Pillars.

APPROXIMATE RULE FOR THE DIMENSIONS OF WOODEN PILLARS.

W = weight in lbs., to be supported by the pillars. L = length of the pillar, in feet. D = diameter of pillar, in inches.

$$D = \sqrt[x]{L\sqrt{W}}.$$

x = ·80 for oak, ·87 for red deal.

Shingles.

1 bundle of 16-inch shingles will cover 30 sq. ft., and 1 bundle of 18-inch shingles, 33 sq. ft. when laid 5½ inches exposed to the weather.

6 pounds of fourpenny nails will lay 1,000 split-pine shingles.

Clapboards.

1 bundle laid 3½ inches exposed to the weather will cover 26 square feet. To be laid with fivepenny nails.

To find Solidity of Round Timber.

WHEN ALL DIMENSIONS ARE IN FEET.
Length × ($\frac{1}{4}$ mean girth)^2 = cubic feet.

WHEN LENGTH IN FEET, GIRTH IN INCHES
Length × ($\frac{1}{4}$ mean girth)^2 ÷ 144 = cubic feet.

WHEN ALL DIMENSIONS ARE IN INCHES.
Length × ($\frac{1}{4}$ mean girth)^2 ÷ 1728 = cubic feet.

To find Solidity of Square Timber.

WHEN ALL DIMENSIONS ARE IN FEET.
Length × breadth × depth = cubic feet.

WHEN ONE DIMENSION IS IN INCHES.
Length × breadth × depth ÷ 12 = cubic feet.

WHEN TWO DIMENSIONS ARE IN INCHES.
Length × breadth × depth ÷ 144 = cubic feet.

For BOARD MEASURE depth always equals 1 inch.

To FIND SURFACE IN SQUARE FEET, proceed as per rules for solidity of square timber.

Roofs.

LOAD ON ROOFS.

Description of Covering.	Per Square of 100 Superficial Feet.	Minimum Slope.	Description of Covering.	Per Square of 100 Superficial Feet.
	Lbs.	Degrees.		Lbs.
Lead covering weighs	784	4	Timber framing for slated or tiled roofs	560 to 672
Zinc	168	4		
Corrugated iron	336	4		
Slates	840 to 1,008	25½ to 30	Additional load for pressure of wind	4,032
Tiles	896 to 1,680	26½ to 30	Ditto for Hurricanes, say	8,960
Boarding ¾ inch thick	290	25		
Boarding 1½ inch thick	580	25		

The angle of gothic roofs should not exceed 60°.

CORRUGATED-IRON ROOFING.

B. Wire Gauge.	Size of Sheets.	Weight per Square.	Square Feet per Ton.	B. Wire Gauge.	Size of Sheets.	Weight per Square.	Square Feet per Ton.
No.	Feet.	Lbs.		No.	Feet.	Lbs.	
16	6 × 2 to 8 × 3	350	800	22	6 × 2 to 7 × 2½	175	1,550
18	6 × 2 to 8 × 3	258	1,000	24	6 × 2 to 7 × 2½	136	1,880
20	6 × 2 to 8 × 3	204	1,250	26	6 × 2 to 7 × 2½	118	2,170

One-tenth of the weight to be added for lappage. Sheets should overlap about 6 inches, and be double riveted at joints. 3 lbs. of rivets required per square of roofing. Purlins should be 6 feet apart. Curved roofs may be made up to 20 feet span without framing; tie-rods 12 feet apart.

ANGLES OF ROOFS.

Proportion of Rise to Span.	Angle.	Slope.	Proportion of Rise to Span.	Angle.	Slope.
	° ′			° ′	
⅛	18 25	3 to 1	⅝	53 0	¾ to 1
¼	26 35	2 to 1	¾	56 20	⅔ to 1
⅜	33 42	1½ to 1	1	63 30	½ to 1
½	45 0	1 to 1			

(See also page 328.)

DIMENSIONS OF PARTS OF WOODEN ROOFS.

Span.	Section.						
	Principal.	Tie Beam.	King Posts.	Queen Posts.	Small Queens.	Straining Beam.	Struts.
Feet.	Inches.	Inches.	Inches.	Inches.	Inches.	Inches.	Inches.
20	4 × 4	9 × 4	4 × 4	..	..	..	3 × 3
25	5 × 4	10 × 5	5 × 5	..	..	..	5 × 3
30	6 × 4	11 × 6	6 × 6	..	..	..	6 × 3
35	5 × 4	11 × 4	..	4 × 4	..	7 × 4	4 × 2
45	6 × 5	13 × 6	..	6 × 6	..	7 × 6	5 × 3
50	8 × 6	13 × 8	..	8 × 8	8 × 4	9 × 6	5 × 3
55	8 × 7	14 × 9	..	9 × 8	9 × 4	10 × 6	5½ × 3
60	8 × 8	15 × 10	..	10 × 8	10 × 4	11 × 6	6 × 3

BRICKWORK.

Bricks.

Description.	Size.	Weight.	Weight Per 1,000.
London stocks . . .	8¾ × 4¼ × 2¾ ins.	6·8 lbs.	60¾ cwt.
Red kiln	8¾ × 4¼ × 2¾ „	7·0 „	63 „
Welsh fire	9 × 4½ × 2¾ „	8·0 „	72 „
Paving	9 × 4½ × 1¾ „	5·0 „	45 „
Dutch clinkers . . .	6¼ × 3 × 1½ „	1·5 „	14 „

8¾ × 4¼ × 2¾ bricks, when laid in cement, occupy a space of 9 × 4½ × 3 ins. approximately.

The thickness of walls is regulated by the size of the bricks, and walls are 4½ ins. or half-brick thick, 9 ins. or 1 brick thick, 14 ins. or 1½ bricks thick. The standard thickness of reduced brickwork is 14 ins., or 1½ bricks.

1 rod of brickwork = 272 superficial ft., 1½ bricks thick ; = 11⅓ cubic yards = 306 cub. ft. ; = 235 ft. of bricks and 71 of mortar ; = 4,300 stock bricks ; = 4,500 place bricks ; = 5,370 stock bricks laid dry ; = 4,900 stock bricks laid dry in wells and circular cesspools ; = 15 tons average weight.

1 load of mortar = 1 cubic yard. 1 load of sand = 1 cubic yard. 1 bag of cement = 3 bushels. 1 sack of cement = 5 bushels.

1 rod of brickwork requires about { 1 cubic yard of stone lime, 3½ cubic yards of sand ; or 1½ yards of chalk lime, 3 yards of drift ; or 36 bushels of cement, 36 bushels of sharp sand.

1 cubic yard of brickwork requires about { 6½ cubic feet of sand. 2½ „ „ lime.

1 load of bricks = 1,000 bricks. 1,000 stock bricks, closely stacked, = 55 ft. cube. 1,000 old bricks, cleaned and loosely stacked, = 70 ft. cube. 1 foot of reduced brickwork = 16 bricks. 1 foot of superficial facing = 7 bricks. 1 foot superficial of gauged arches = 10 bricks. 1 yard superficial in bricknogging, laid flat, = 45 bricks and ⅔ cubic foot of mortar. 1 yard superficial in bricknogging, laid on edge, = 30 bricks and ⅓ cubic foot of mortar.

1 yard of paving = 36 stock bricks laid flat, = 52 bricks on edge, = 82 paving bricks on edge = 125 Dutch clinkers laid flat, = 140 Dutch clinkers on edge, = 136 Dutch clinkers laid herring-bone.

Bricks absorb one-fifth of their weight of water, but the proportion varies greatly Engineering bricks should be quite impervious to water.

A bricklayer's hod will hold 20 bricks, ⅔ cubic foot of mortar, or nearly ½ bushel.

1 rod of brickwork requires 130 gallons of water to slack the lime and mix the mortar.

In a day of 10 hours a bricklayer can lay about 1,500 to 1,600 bricks where the joints are left rough, about 1,000 when both faces are worked fair, or 500 when carefully pointed and faced with picked bricks.

For ordinary purposes, assume roughly that a bricklayer and labourer can, if they choose, turn out 2 cubic yards per diem, containing 800 bricks.

Bonds for Brickwork.

(Revised by E. A. W. Phillips, M.Inst.C.E., M.C.I.)

ENGLISH THIN-WALL BOND (fig. 669) is the simplest for all ordinary work where the walls do not exceed three brick-lengths in thickness. The heading and stretching courses always alternate in this class of bond. No stretchers occur except those seen on faces of walls. No bricks in the same course should break joint with each other. All vertical joints in any course should be covered (by one-quarter brick laps at least) by the courses above and below, and this whether offsets occur or not, or other differences in the thicknesses of the walls.

FLEMISH BOND (fig. 669A) shows headers and stretchers alternately in each course on the faces of walls. Is quite as strong as *English Thin-wall Bond*, since the quarter laps are in



FIG. 669. English Bond.




FIG. 669A. Flemish Bond.



FIG. 669B. English Thick-wall Bond

the same manner equally well maintained. *Flemish Bond* gives a better appearance for 9-inch walls, as a smoother face can be shown on both sides. In *double Flemish Bond*, both back and front of walls show Flemish Bond; in *single Flemish Bond*, one face shows Flemish, the other English, bond, as above.

ENGLISH THICK-WALL BOND (fig. 669B). In this bond, every brick in a stretcher course should be a stretcher, and every brick in a header course should be a header. The bricks not only break joint, by half their lengths, with the bricks in the same description of course (i.e., stretcher or header) next above or below them, but also break joint, by half their lengths, in the same course. This is the strongest form of bond known, and should invariably be used in heavy walling, of 3½ bricks thickness and over. The quoin difficulty is best overcome by having a few specially moulded bricks, one brick-length in length, and ¼ of a brick-length in width, and of the usual thickness. The half-bricks on faces in fig. 669B are shaded.

GARDEN-WALL BOND is the *English Thick-wall Bond* adapted to thin one-brick walling, several courses of stretchers occurring to one course of headers. The same thing may be done with *chimneys*, where the walls are 9 ins. thick.

DIAGONAL BOND and HERRING BONE BOND are only useful for paving. *English Thick-wall Bond* is stronger than either.

HEADER BOND consists entirely of headers, and is used for sharp curved or quick-sweep walls.

STRETCHER BOND, entirely of stretchers, is used in ½-brick walls of all kinds.

Other bonds, Roman bond, and the Sussex bonds, are described in 'Indian Engineering.' See also papers in the Minutes of Proceedings of Civil Engineers, vol. clxxi.

CLOSERS, *b* (figs. 669, 669A), are necessary in every alternate course to close the work on to any vertical line, or to start the bond from it; they run through the thickness of the wall.

QUEEN CLOSERS, as *b*, are ½-headers formed by cutting a brick or a half-brick, called a *bat*, longitudinally in half; ¾-stretchers, or ¾-*bats*, can be used as closers, but not so economically.

KING CLOSERS are bricks cut to a splay, so as to obtain as strong a bond as possible in closing on recessed openings, as for doors and windows.

HOOP-IRON BOND, for walls, is generally formed of hoop iron, from 1 in. to 1½ in. wide and 18 B.W.G. ($\frac{1}{20}$ in.) to 16 B.W.G. ($\frac{1}{16}$ in.) thick; it should be clean bright and bedded in cement, for if allowed to rust it swells and injures the wall; it holds better if the edges are jagged. Useful in erecting works on bad foundations, but must not be relied on to give permanent strength, unless laid as carefully as reinforcement.

WALLS.

General Rules for Building Walls.

To prevent unequal settlement the whole building should be run up together, no part rising more than about 3 ft. above the rest. Work, unless done in cement, should take its bearings gradually; at least a fortnight should be allowed for completing each storey of a high building. New work should never be bonded to old, unless built in cement. The new work should be built into a chase cut in the old work. Bricks and stones should be clean, to allow the mortar to adhere to them, and well wetted, to prevent them absorbing moisture from the mortar. Building should not be carried on in frost, but rain is good. If obliged to be carried on in frost, cement should be used, and it should be covered up with straw or boards every night, for cement which freezes before it has set is worthless.

Terra-cotta air bricks should be built into the wall, below the level of the ground-floor, for ventilation. Holes should be left in the sleeper walls.

Hollow Walls

keep houses dry, and tend to maintain a more equable temperature within them. They may be of two types: capacity walls and walls built of hollow blocks. A *cavity wall* consists of two thicknesses of brickwork separated by an air-space of 2½ ins., sometimes 4½ ins. Exterior wall, 4½ ins. thick; interior wall, of such thickness as will give the whole the necessary stability (9 ins. for two-storeyed building, 4½ ins. for ordinary one-storeyed). The two thicknesses should be tied together by bonding-ties of brick or slate, or wrought-iron ties 1 in. by $\frac{3}{16}$ in. (fig. 670), at horizontal distances of 3 ft., and alternately at vertical intervals of three courses; this requires five ties to the superficial yard. The half-brick thickness is sometimes put on the inside, in which case the weight of roof should fall on the outer thickness of wall. The air-space should be carried round all angles and up to the sides of door- and window-frames, commencing at damp-proof course, which will form its bottom, and ending in a covering course of brickwork which closes the top, so that the air-space has no communication with open air.




FIG. 670.

Walls of *hollow blocks* (fig. 670A) are less liable to accommodate vermin and are less risky as regards fire, as the hollow portions can be divided into a series of independent cells. The blocks may be of concrete or burned clay, the latter being usually preferred, not only on account of their porosity, but also on account of their possessing the advantageous properties of bricks, whilst being much cheaper to erect, as they commonly only measure 12 or 18 ins. by 12 ins. by 9 ins., and so are equivalent to 10 or 16 common bricks. Hollow blocks are usually rectangular tubes, which must be laid in such a manner as to provide a seal where required. Various patents have been granted for making blocks with a sealed hollow coil, but though ingenious they are scarcely a commercial success.




FIG. 670A.

Hollow blocks have ample strength for all ordinary requirements or brickwork, especially if laid in a 1 : 6 cement mortar. Reinforcement may be used if desired, but otherwise the hollows or cores are left 'empty.' The blocks are usually arranged with the hollow or tubular portion vertical, the joints being broken as with masonry and common brickwork. Care should be taken to arrange the detailed dimensions of the buildings so that the blocks need not be cut.

Although the hollow portion of each block may be completely seated, if desired, it is usually better to allow a small opening through which a sufficient current of air may pass, so as to secure efficient removal of moisture and to allow the air, when heated, to expand without being under pressure.

The Damp Course

is placed in a wall, 6 ins. or 9 ins. above the ground line, in order to prevent moisture from the foundations rising in the walls by capillary attraction. The following are the most satisfactory forms of damp course:—

(i) Two courses of impervious bricks (preferably 'Staffordshire blues') laid flat in a mortar composed of 1 part of Portland cement, 5 parts of sand and a waterproofing agent such as 'Pudlo' (page 400). Ordinary lime mortar is useless, as it is too porous.

(ii) One or two courses of slate or thin impervious stone laid in the cement mortar mentioned in (i).

(iii) A layer of waterproofed cement mortar (see (i)) ½ in. to 1 in. thick.

(iv) A mixture of gravel or fine grit and asphalt or tar (preferably heated together) and laid in a thickness of $\frac{5}{8}$ in. to 1 in.

(v) An elastic waterproof material such as bitumen (*George M. Callender & Co. Ltd.*), in roll form, has distinct advantages in cases where settlement in the foundations would break any rigid material, such as slates or mastic asphalt, the material being sufficiently pliable to conform to such settlement. Bitumen damp course is easily handled, even by unskilled workmen, as the material simply requires to be unrolled on to the foundations, a small lap joint being made at the end of each length. It is not necessary to seal the joint, as the weight of the next course of bricks is quite sufficient to keep the damp course in position.

(vi) Hollow tubes of stoneware or other impervious material, set vertically and laid in waterproofed cement mortar as mentioned in (i).

The essential feature of a damp course is that it must be wholly impervious to water, as otherwise it is useless. This important fact is often overlooked, as in the case where good, impervious bricks are laid in a porous lime mortar or in a porous cement-mortar.

Brick Noggings

are thin walls or partitions, usually 4½ ins. thick, constructed with vertical posts framed into top and bottom plates, filled in with brickwork in mortar, either flat or on edge. They require—

Per yard super 45 stock bricks laid flat, and ¾ cubic. ft. mortar.
" 30 " on edge, and ½ " "

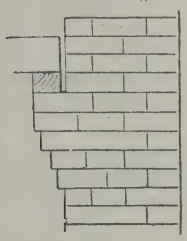


Fig. 671.

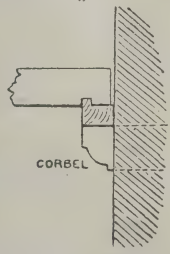


Fig. 672.

Corbelling

(Figs. 671 and 672) keeps joists clear of masonry, and prevents walls from being weakened by the insertion of timber; in brickwork the projections of the courses should not be more than a quarter brick. When great strength is required, they may project only one-eighth brick. Stone corbels should be of York or equally hard stone, about 4 feet from centre to centre, according to depth of wall plate.

Coping.

If of brick, should be the hardest and least porous, set in cement. In stone, should be of as long stones as possible. Fig. 673 shows brick-on-edge coping. The course A may be two courses of



Fig. 673.



Fig. 674.




Fig. 675.

tiles laid in cement, breaking joint, called *tile-creasing*. Fig. 674 shows another form; but moulded brick copings are preferable, being made of various patterns to suit walls of different thicknesses. Fig. 675 is a stone saddle-back coping.

Thickness of Walls.

In walls not more than 30 feet high top storey may be 8½ inches thick.

Thickness of higher walls at top and 16 feet below = 13 inches.

From 16 feet below top to base the wall not to be less than the space contained in the two straight lines drawn from each side of the walls, at the base, to each side of the wall 16 feet below the top.

The thickness to be in no case less than one-fourteenth of the height of the storey; but any additional thickness may be confined to piers whose collective width equals one-fourth length of wall. Footings to be double the width of the base, diminishing in regular offsets half the width of their height.

Cross-walls to be two-thirds of the thickness of the external or party walls, but never less than 8½ inches.

Thickness of Walls of Buildings (Gwilt's Rule).

H = height of wall; L = length between party walls; D = diagonal of face of wall = $\sqrt{H^2+L^2}$; T = thickness of wall; all in feet.

Then

$$T = \frac{HL}{nD},$$

where n = 22 for dwelling-houses of brick, 20 for warehouses of brick, 18 for public buildings of brick.

When the height of wall is less than half its length, then n may be increased to 27, 23, and 20 respectively.

The dimensions in the following Tables may be safely adopted.

THICKNESS OF BRICK EXTERNAL WALLS FOR DIFFERENT SORTS OF ONE-STOREYED BUILDINGS.

Description.	Main Wall.	Piers 2 ft. 3 in. Wide, 10 Feet from Centre to Centre.
Single-storeyed buildings up to 10 feet high and 30 feet wide, with cross-walls every 14 feet	9 inches	
Ditto, with principals, but without cross-walls, any length	9 „	14 inches
Ditto, over 10 feet and not exceeding 20 feet high, with principals, but not cross-walls, any length, width up to 30 feet	14 „	18 „

NOTE.—Where it is not considered advisable to have piers, the greater thickness, *i.e.*, the thickness of the piers, should be adopted.

THICKNESS OF BRICK EXTERNAL WALLS FOR DIFFERENT SORTS OF TWO-STOREYED BUILDINGS.

Description.	Lower Storey.	Upper Storey.
Two-storeyed buildings with cross-walls every 14 feet up to 30-feet span	14 inches	9 inches
Ditto, 30-feet span, with principals, but not cross-walls .	18 „	14 „

Stonework should be, as a rule, one-third thicker than brickwork.

For inhabited buildings the walls are better built hollow.

When concrete (1 Portland cement, 6 ballast) is used, the wall is usually about one-third thicker than brickwork.

Rules for the Walls of Buildings not Public and not of the Warehouse Class.

(*London Building Act*, 57 & 58 *Vict.* 1894.)

According to this Act the external and party walls of dwelling-houses must be made throughout the different storeys of the thickness shown in the following Table, arranged according to the heights and lengths of the walls, and arranged for walls up to 120 feet in height, and supposed to be built of bricks not less than 8½ inches long or of stone or other blocks of hard and incombustible substance, the beds or courses being horizontal, the heights of the storeys being subject to the conditions given after the Table.

TABLE I.

1. Height up to 25 Feet.	Length up to 30 Feet. Not more than two storeys.	Length unlimited. More than two storeys.	
	From base to top of wall, 8½ ins.	Wall below topmost storey, 13 ins. Topmost storey, 8½ ins. Remainder 8½ ins.	
2. Height up to 40 feet.	Length up to 35 Feet.	Length unlimited.	
	Wall below two topmost storeys, 13 ins. Remainder, 8½ ins.	One storey, 17½ ins. Rest of wall below topmost storey, 13 ins. Remainder, 8½ ins.	
3. Height up to 50 Feet.	Length up to 30 Feet.	Length up to 45 Feet.	Length unlimited.
	One storey, 17½ ins. Rest of wall below topmost storey, 13 ins. Remainder, 8½ ins.	Two storeys, 17½ ins. Remainder, 13 ins.	One storey, 21½ ins. One storey, 17½ ins. Remainder, 13 ins.

TABLE I. (*continued*).

4. Height up to 60 Feet.	Length up to 45 Feet. Two storeys, 17½ ins. Remainder, 13 ins.	Length unlimited. One storey, 21½ ins. Two storeys, 17½ ins. Remainder, 13 ins.
5. Height up to 70 Feet.	Length up to 45 Feet. One storey, 21½ ins. Two storeys, 17½ ins. Remainder, 13 ins.	Length unlimited. Each storey below uppermost two storeys to be increased 4½ ins. beyond thicknesses for length up to 45 feet.
6. Height up to 80 Feet.	Length up to 45 Feet. One storey, 21½ ins. Three storeys, 17½ ins. Remainder, 13 ins.	Length unlimited. Each storey below uppermost two storeys to be increased 4½ ins. beyond thicknesses for length up to 45 feet.
7. Height up to 90 Feet.	Length up to 45 Feet. One storey, 26 ins. One storey, 21½ ins. Three storeys, 17½ ins. Remainder, 13 ins.	Length unlimited. Each storey below uppermost two storeys to be increased 4½ ins. beyond thicknesses for length up to 45 feet.
8. Height up to 100 Feet.	Length up to 45 Feet. One storey, 26 ins. Two storeys, 21½ ins. Three storeys, 17½ ins. Remainder, 13 ins.	Length unlimited. Each storey below uppermost two storeys to be increased 4½ ins. beyond thicknesses for length up to 45 feet.
9. Height up to 120 Feet.	Length up to 45 Feet. One storey, 30 ins. Two storeys, 26 ins. Two storeys, 21½ ins. Three storeys, 17½ ins. Remainder, 13 ins.	Length unlimited. Each storey below uppermost two storeys to be increased 4½ ins. beyond thicknesses for length up to 45 feet.

10. If any storey exceeds in height sixteen times the thickness prescribed for the walls of such storey in the above Table, the thickness of each external and party wall throughout such storey shall be increased to one-sixteenth part of the height of the storey, and the thickness of each external and party wall below that storey shall be increased to a like extent; but any such additional thickness may be confined to piers, properly distributed, of which the collective widths amount to one-fourth part of the length of the wall.

11. No storey enclosed with walls less than 13 inches in thickness shall be more than 10 feet in height between the floor and the ceiling thereof, or between the floor and the tie of the roof.

12. All buildings, excepting public buildings and such buildings as are in the Act defined to be buildings of the warehouse class, shall, as respects the thickness of their walls, be subject to the foregoing rules.

Rules for the Walls of Buildings of the Warehouse Class.

(London Building Act.)

The external and party walls of buildings of the warehouse class must at the base be made of not less thickness than that shown in the following Table, arranged for walls up to 120 feet in height, and supposed to be built of bricks not less than 8½ inches, or of stone or other blocks of hard and incombustible substance, the beds or courses being horizontal.

TABLE II.

1. Height up to 25 Feet.	Length unlimited. — Base, 13 inches.		
2. Height up to 30 Feet.	Length up to 45 Feet. — Base, 13 ins.	Length unlimited. — Base, 17½ ins.	
3. Height up to 40 Feet.	Length up to 35 Feet. — Base, 13 ins.	Length up to 45 Feet. — Base, 17½ ins.	Length unlimited. — Base, 21½ ins.
4. Height up to 50 Feet.	Length up to 30 Feet. — Base, 17½ ins.	Length up to 45 Feet. — Base, 21½ ins.	Length unlimited. — Base, 26 ins.
5. Height up to 60 Feet.	Length up to 45 Feet. — Base, 21 ins.	Length unlimited. — Base, 26 ins.	
6. Height up to 70 Feet.	Length up to 45 Feet. — Base, 21½ ins.	Length unlimited. — Length to be increased in thickness from the base up to within 16 ft. from the top of the wall by 4½ ins.	
7. Height up to 80 Feet.	Length up to 45 Feet. — Base, 21½ ins.	Length unlimited. — Length to be increased in thickness from the base up to within 16 ft. from the top of the wall by 4½ ins.	
8. Height up to 90 Feet.	Length up to 45 Feet. — Base, 26 ins.	Length unlimited. — Length to be increased in thickness from the base up to within 16 ft. from the top of the wall by 4½ ins.	
9. Height up to 100 Feet.	Length up to 45 Feet. — Base, 26 ins.	Length unlimited. — Length to be increased in thickness from the base up to within 16 ft. from the top of the wall by 4½ ins.	
10. Height up to 120 Feet.	Length up to 45 Feet. — Base, 31 ins.	Length unlimited. — Length to be increased in thickness from the base up to within 16 ft. from the top of the wall by 4½ ins.	

11. The thickness of the wall at the top, and for 16 feet below the top, shall be 13½ inches; and the intermediate parts of the wall between the base and such 16 feet below the top shall be built solid throughout the space between straight lines drawn on each side of the wall, and joining the thickness at the base to the thickness at 16 feet below the top; nevertheless, in walls not exceeding 30 feet in height the walls of the topmost storey may be 9 inches thick, provided the height of that storey does not exceed 10 feet.

12. If in any storey of a building of the warehouse class the thickness of the wall, as determined by the foregoing Table, is less than one-fourteenth part of the height of such storey, the thickness of the wall shall be increased to one-fourteenth part of the height of the storey, and the thickness of each external and party wall below that storey shall be increased to a like extent; but any such additional thickness may be confined to piers, properly distributed, of which the collective widths amount to one-fourth part of the length of the wall.

13. The thickness of any wall of a building of the warehouse class, if built of materials other than such bricks as aforesaid, shall be deemed to be sufficient if made of the thickness required by the above Tables, or of such other thickness as may be approved by the County Council.

MISCELLANEOUS.

(London Building Act.)

The thickness of a cross-wall shall be two-thirds of the thickness hereinbefore required for an external or party wall of the same dimensions, and belonging to the same class of buildings, but never less than 8½ inches; and no wall subdividing any building shall be deemed to be a cross-wall unless it is carried up to the floor of the topmost storey, and unless in each storey the aggregate extent of the vertical faces or elevations of all the recesses and that of all the openings therein taken together does not exceed one-half of the whole extent of the vertical face or elevation of the wall.

Rules for Structural Steelwork for Buildings.

London County Council Act (1909).

Part IV., section 22, of the London County Council (General Powers) Act, 1909, which came into operation August 16, 1909, makes certain provisions, summarised below, with respect to buildings of iron and steel skeleton construction, and with the foundations, walls, floors, staircases, etc., of such buildings.

(1) All rolled steel shall comply with the British standard specification for structural steel for bridges and general building construction, and every pillar or girder shall be of iron or steel or any other metal which may be standardised by the Engineering Standards Committee.*

(2) The skeleton framework of a building, together with the party wall or walls upon which such framework bears, shall be capable of safely and independently sustaining the whole dead load and superimposed load bearing thereon.

(3) Pillars in external walls to be completely enclosed and protected from the action of fire by a casing of brickwork, etc., or incombustible material, at least 4 inches thick, properly bonded.

(4) Girders in external walls to be similarly encased with brickwork or other incombustible material at least 4 inches thick, properly secured to the adjoining work. The casing on the underside of such girders and to the edges of the flanges, plates, and angles may be not less than 2 inches thick.

(5) All other pillars and girders to be protected from the action of fire by being encased to the satisfaction of the district surveyor to a thickness of not less than 2 inches. The casing on the upper surface of girders and on the lower surface of subsidiary joists may be not less than 1 inch. Wood firrings must not be used in connection with any casing. This subsection does not apply in the case of buildings of only one storey and not more than 25 feet in height.

(6) Girders to be secured against buckling if the length of the girder exceeds thirty times the width of the compression flange. The web of every girder to be secured against buckling when the depth of the web exceeds sixty times the thickness.

(7) The span of a girder must not exceed twenty-four times the depth of the girder unless the calculated deflection is less than one four-hundredth part of the span.

(8) Two or more girders arranged alongside and closely adjacent to one another, so as to act together, must be fixed together by means of iron separators and bolts, or in any efficient manner approved by the district surveyor. Separators or other members acting as separators must not be placed at a distance apart exceeding five times the depth of the girders, and must be placed immediately over all supports and immediately under all concentrated loads.

(9) Girders for supporting external walls must be placed at the floor level of a storey or not more than 5 feet above or below floor level.

(10) Rivets must be used where reasonably practicable. Where bolts are used they must extend through the full thickness of the nuts, and the nuts must be so secured as to avoid risk of their becoming loose. The distance from the edge of a rivet or bolt hole to the edge of the member may not be less than the diameter of the rivet or bolt. Rivets must be so placed that their centres shall not be closer together than three times the diameter of the rivets. The pitch of rivets measured in a continuous straight line in girders, pillars, and roofwork must not exceed sixteen times the thickness of the thinnest member through which they pass.

(11)—(A) An external wall may not be less than 8½ inches thick for the topmost 20 feet of its height, and 13 inches for the remainder of its height below such topmost 20 feet. A less thickness may be allowed in any case in which under the London Building Act, 1894, such less thickness is prescribed.

(B) All party walls shall be of the thicknesses prescribed by the principal Acts.

(C) All brickwork and work in which terra-cotta, concrete, or other similar materials are used must be executed in Portland cement (British standard specification) mortar bedded close up to the metal framework without intervening cavity, and all joints must be made full and solid. In party walls (exclusive of any parts thereof immediately surrounding metal framework), or other internal brickwork not constructed to carry loads or stresses, lime mortar may be used.

(12)—(A) No plate or bar in any steel or wrought-iron pillar may in any part be less than ¼ inch thick, and the bases of all such pillars must be at right angles to the axis.

(B) Joints in such pillars must be close-butted with riveted cover-plates, and joints between such pillars must be properly fixed and made, and, unless unavoidable, no joint may be made between such pillars except as near as practicable to the level of a girder secured to such pillars.

* Now British Engineering Standards Association.

(c) The foot of every such pillar must have a proper base-plate riveted thereto with sufficient gusset pieces to distribute properly the load on the foundations, and the gusset pieces shall have sufficient rivets to transmit the whole of the load on to the base-plates.

(d) Where any pillars are built up hollow the cavities must be filled with concrete or be covered at both ends by metal plates riveted thereto.

(13)—(a) The width of cast-iron pillars may not be less than 5 inches, and the metal may not be in any part less than $\frac{3}{4}$ inch thick or one-twelfth of the least width of such pillar (whichever is the greater).

(b) The cap and base of every pillar must be in one piece with the pillar, or be connected thereto with a turned and bored joint.

(c) The ends of all pillars must be at right angles to the axis.

(d) Joints between such pillars shall be at or as near as practicable to the level of a girder secured to such pillars, and shall be fixed with not fewer than four bolts of not less diameter than the least thickness of metal in the pillar. If more than four bolts are used the diameter of the bolts may be reduced proportionately, but no bolt may be less than $\frac{3}{4}$ inch in diameter.

(e) The base of every such pillar shall have sufficient area to distribute properly the load on the foundations.

(14) The base of every pillar shall be bedded so that the load may be transmitted uniformly to the foundations.

(15) The stress in any metal interposed between the ends of a superimposed pillar and a pillar beneath must not exceed the stress on the superimposed pillar, and the least width across such interposed metal may not be less than the least width of the superimposed pillar.

(16) All floors and staircases (together with their enclosing walls) shall be constructed throughout of fire-resisting materials and be carried upon fire-resisting supports.

(17) All structural metalwork comprised in the skeleton framework of a building must be cleaned of all scale, etc., and be coated with one coat of boiled oil, tar, or paint before erection, and after erection shall receive at least one additional coat. Where embedded or encased in brickwork or other incombustible materials one coat of Portland cement wash applied after erection may be used.

(18)—(a) The dead load of a building consists of the actual weight of walls, floors, roofs, partitions, and all other permanent construction comprised in such building.

(b) The superimposed load in respect of a building consists of all other loads.

(c) For calculating the loads on constructions carrying loads in buildings the superimposed load on each floor and on the roof shall be estimated as equivalent to the following dead load :—

For a floor intended to be used for the purposes of human habitation or domestic purposes, 70 lbs. per square foot of floor area ;

For a floor intended to be used for the purpose of an office, or for any similar purpose, 100 lbs. per square foot.

For a floor intended to be used for the purpose of a workshop or retail shop, 112 lbs. per square foot ;

For every floor in a building of the warehouse class not intended to be used for any of the purposes aforesaid, not less than 224 lbs. per square foot. In every building of the warehouse class a notice shall be exhibited in a conspicuous place on each storey stating the maximum superimposed load per square foot which may be carried on such floor ;

For a roof the plane of which inclines upwards at a greater angle than 20° with the horizontal, the superimposed load (which includes wind pressure) shall be estimated at 28 lbs. per square foot of sloping surface ;

For all other roofs the superimposed load shall be estimated at 56 lbs. per square foot measured on a horizontal plane.

If the superimposed load on any floor or roof is to exceed that specified, such greater load shall be provided for pursuant to subsection (2).

In the case of any floor intended to be used for a purpose for which a superimposed load is not specified, the superimposed load shall be provided for pursuant to subsection (2).

(19) For calculating the total load to be carried on foundations, pillars (including brick pillars), piers, and walls in buildings of more than two storeys in height, the superimposed loads for the roof and topmost storey shall be calculated in full in accordance with the last preceding subsection ; but for the lower storeys a reduction may be allowed, as follows :—

For the storey next below the topmost storey a reduction of 5 per cent. of the full superimposed load ;

For the next succeeding lower storey a reduction of 10 per cent. of the full superimposed load, and for each succeeding lower storey a further reduction of 5 per cent. of the full superimposed load. Provided always that the total reduction in respect of any storey shall not exceed 50 per cent. of the full superimposed load for such storey ;

No such reduction as aforesaid shall be allowed in the case of a building of the warehouse class.

(20) All buildings shall be so designed as to resist safely a wind pressure in any horizontal direction of not less than 30 lbs. per square foot of the upper two-thirds of the surface of such buildings exposed to wind pressure.

(21)—(a) The working stresses on pillars of cast iron or mild steel due to the loads thereon (other than stresses induced by wind pressure) shall not exceed those specified in the two following tables, according to the several ratios therein specified, or a proportionate load for other ratios :—

Cast-iron Pillars.

Ratio of Length to least Radius of Gyration.	Working Stresses in Tons per Square Inch of Net Section.		
	Hinged ends.	One end hinged and one end fixed.	Both ends fixed.
20	3·5	4·0	4·5
30	3·0	3·5	4·0
40	2·5	3·0	3·5
50	2·0	2·5	3·0
60	1·5	2·0	2·5
70	1·0	1·5	2·0
80	0·5	1·0	1·5

Mild Steel Pillars.

Ratio of Length to least Radius of Gyration.	Working Stresses in Tons per Square Inch of Section.		
	Hinged ends.	One end hinged and one end fixed.	Both ends fixed.
20	4·0	5·0	6·0
40	3·5	4·5	5·5
60	3·0	4·0	5·0
80	2·5	3·5	4·5
100	2·0	3·0	4·0
120	1·0	2·5	3·5
140	0·0	2·0	3·0
160		1·0	2·5
180		0·0	1·5
200			0·5
210			0·0

(B) The working stresses on wrought-iron pillars due to the loads (other than wind-pressure stresses) may not exceed two-thirds of the stresses specified for mild steel pillars.

(C) Any pillar eccentrically loaded must have the combined stresses resulting from such eccentricity at any part added to all other stresses at that part, and the sum of the stresses may in no case exceed the working stresses specified.

Provided that working stresses exceeding those specified in paragraphs (A), (B), and (C) by not more than 25 per cent. may be allowed where such excess is due to wind pressure.

(D) The eccentric load of a pillar may be considered to be distributed uniformly over its cross-section area at the next lower level at which it is fixed and secured in the direction of eccentricity.

(22) The working stresses of iron and steel (except in the case of pillars as hereinbefore provided) may not exceed the following :—

Metal.	Working Stresses in Tons per Square Inch.			
	Tension.	Compression.	Shearing.	Bearing.
Cast iron	1·5	8	1·5	10
Wrought iron	5	5	4	7
Mild steel	7·5	7·5	5·5	11

(23) Any rivet used in double shear the working shear may not exceed one and three-quarter times the shear allowed on a rivet used in single shear.

(24) The pressures of foundations on the natural ground may not exceed the following :—

Material.	Tons per Square Foot.
Natural bed of soft clay or wet or loose sand	1
Natural bed of ordinary clay or confined sand	2
Natural bed of compact gravel, London blue clay, or chalk	4

(25) The pressure on concrete foundations may not exceed 12 tons per square foot.

(26) No disengaged brick pillar without lateral supports may have a height of more than six times its least width; but a pillar with lateral supports may have a height between such supports not more than twelve times its least width, but in no case less than 13½ inches.

(27) The pressure on any brickwork may not exceed the following :—

Material.	Tons per Square Foot.
Blue brick in cement mortar	12
Hard brick (including London stock) in cement mortar	8
Ordinary brick in cement mortar	5

(28) The Council may prescribe the materials and the proportions to be used in concrete provided under the provisions of this section.

(29) It shall be lawful to make any addition, alteration, or do other work upon a building in accordance with this section, provided that the loads and stresses in a building so altered are transmitted from the roof to the foundations by a skeleton framework of metal, or partly by a skeleton framework and a party wall, and the foregoing provisions shall apply as if the part so altered were a separate building.

Foundations.

Brick walls are made wider at the base, in order to spread the weight of the building over a larger area and produce an equality of settlement.

Figs. 676 to 682 show sections of footings (the wide courses at the base of a wall) of walls in English bond from one to three bricks in thickness. Trenches are excavated for beds of concrete usually from 2 feet to 7 feet in depth, and 12 inches wider than base of footings (6 inches on each

FIG. 676. Elevation.


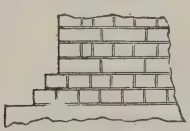


FIG. 677. Section.

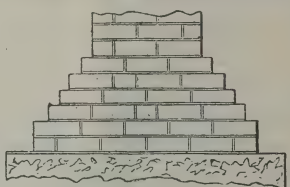

FIG. 678. Frontage for 2½-Brick Wall.



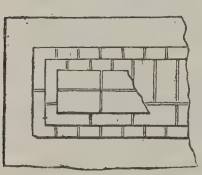


FIG. 679. Plan.



FIG. 680.



FIG. 681.

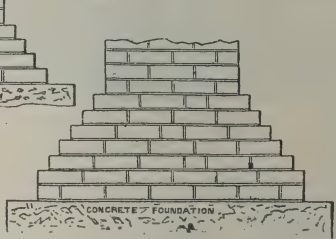


FIG. 682.

side). If the site on which a building is to be built be gravel, sand, or natural virgin soil, no concrete bedding must be used; but otherwise the whole site should be covered with a layer of concrete not less than 6 inches thick.

The foundations of the walls of a building should be on a bed of good concrete not less than 9 inches thick, and projecting at least 4 inches on each side of the lowest course of footings of walls. If the site be upon a natural bed of gravel, concrete is not required.

MASONRY.

Lifting Stones.

There are various ways of laying hold of stones which are too heavy to be moved by hand. The following are those most frequently used :—

1. By a pair of nippers or iron claws or hooks, as in fig. 683, the ends of which catch in holes

made, one in each side of the block, in the same vertical plane as, and at a convenient distance above, the centre of gravity of the block. 2. By a *Lewis*, or iron dovetail, as in fig. 684, made in three pieces, the two outer ones being first dropped into a corresponding dovetailed hole cut in the stone directly over its centre of gravity, then the centre-piece slipped in between them, the suspending-tackle put in its place, and finally a bolt passed through the whole and keyed up. 3. By two curved iron plugs, with a chain passing through eyes in their heads, placed in a dovetailed hole directly over the centre of gravity of the stone, as shown in fig. 685. 4. By an iron conical plug, with an eye at the top for a chain or hook to pass through, placed in a rather

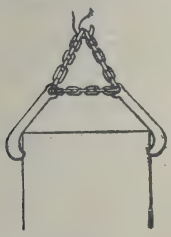


FIG. 683.

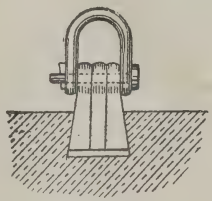


FIG. 684.

larger conical hole directly over the centre of gravity of the stone, with an iron wedge curved so as to fit the plug and the circumference of the hole, tightly driven in by its side, as shown in fig. 686. This plug was used for setting the heavy granite coping on the Thames Embankment

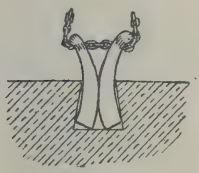


FIG. 685.

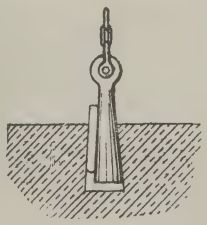


FIG. 686.

wall. 5. By a single iron plug, very slightly tapered, and driven into a cylindrical hole directly over the centre of gravity of the stone. By this simple means hard stones, such as granite, may be lifted with ease, a few side taps being sufficient to loosen the plug when required to be withdrawn.

Setting Stones.

All stones, except under peculiar circumstances, should be laid on their natural or quarry beds, or with their natural beds as far as possible perpendicular to the pressures they have to bear.

All dry and porous stones should be well wetted before being laid, so as not to absorb the moisture required for the proper setting of the mortar. Iron should never be placed in contact with stonework where, by rusting, it might disfigure it with stains, or split the stone, either by its increase in bulk during the process of oxidation, or by its expanding and contracting under the influence of heat and cold.

Descriptions of Masonry.

There are three descriptions of masonry in ordinary use, viz. :—

Rubble. Block-in-Course. Ashlar.

If the stone at disposal is thinly bedded, rough, or intractable, it should be used as *Rubble work*; if obtainable in blocks, and more or less easily wrought, it should be used as *Block-in-Course* or *Ashlar*, according to circumstances.

The various systems are illustrated by figs. 687 to 695.

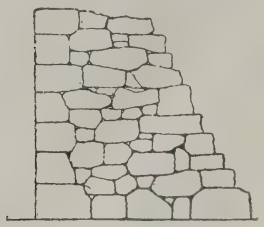


FIG. 687. Common, Rough, Uncoursed, or Random Rubble.

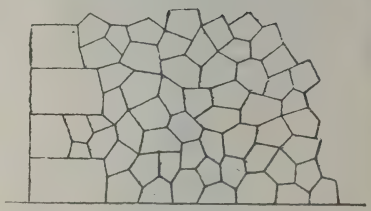


FIG. 688. Random Rubble, with hammer-dressed joints and no spalls on face.

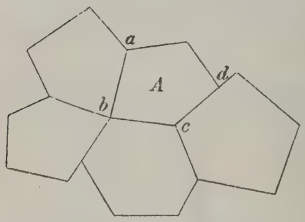


FIG. 689. Hammer-dressed Joints for Random Rubble.

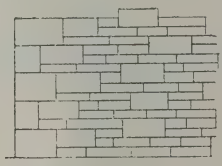


FIG. 690. Irregular-coursed, Random-coursed, Snecked, or Squared Rubble.



FIG. 691. Built up to Courses.

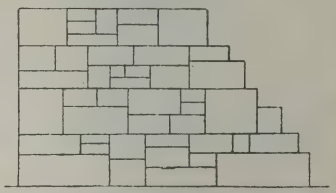


FIG. 692. Built up to Courses, with beds horizontal and joints vertical.

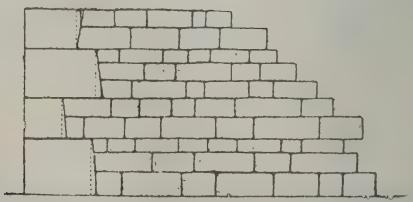


FIG. 693. Coursed Rubble.

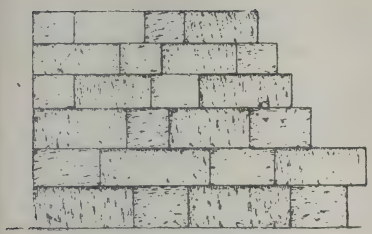


FIG. 694. Block-in-Course.



FIG. 695. Ashlar.

RUBBLE MASONRY.

The best stones for rubble masonry are those that scabble freely, and such as lie in 4 or 5 inch beds. Basalts and stones of a crystalline structure are troublesome to use, as they fly under the hammer ; but granite and sandstones work in well.

Rubble may be either *uncoursed*, *irregular*, or *random-coursed*, *worked up to courses*, or *coursed*, chiefly depending upon the character of the stone at disposal ; some stones, such as Kentish rag, from their intractable nature, and the absence of any distinct lines of bedding, are specially adapted for *uncoursed* rubble, whilst others readily work into courses, and therefore should be used as *coursed* rubble.

In common, rough, uncoursed, or random rubble (fig. 687) the stones are laid at random, without being brought up to any level courses, the only tools required being a trowel, waller's hammer, and plumb or battering rules, as the case may require.

One bond stone should be used to at least every yard super of the face, and these should run about two-thirds to three-fourths through the wall, alternately from the opposite sides ; this, in the case of dwelling-houses, diminishes the chances of damp being transmitted to the interior, and is in all cases much preferable to a smaller number of *through* stones. In boundary and similar walls *through* stones may, of course, be used. In thick walls, such as piers, abutments, and retaining-walls, the bond stones should tail into the work as far as possible ; and the whole should be bonded together in the best way the sizes of the blocks will admit of.

It is necessary to see the bond stones actually built into the wall, for builders are apt to set large stones on edge, running only 3 or 4 inches into the wall, instead of true bond stones—a trick which cannot well be detected after they have once been covered up. In random work (figs. 688 and 689) the stones cleave into irregular shapes, and are fitted closely together. Thus, in order to get A (fig. 689) into place the angles *abc*, *deb*, are taken with the mason's bevel, and the joints are hammered and punched to fit truly. This is the most expensive kind of rubble work, and requires much more skill to build properly than any other class of rubble walling.

If the rubble stone is distinctly bedded, the beds varying much in depth, and often running very thin, the stones should be put together as in fig. 690, in what is called *irregular* or *random-coursed* rubble. The joints in this case are not necessarily vertical ; but in a superior class of the same work all the joints are specified to be vertical and the beds horizontal, by which a more regular appearance is given to the work. The stones are all shaped and roughly squared as required, and hammer or axe faced, in the gross, ready for the waller to set in the wall. This class of masonry is very bold and effective for engineering purposes, when a good proportion of large stones are used, roughly hammer-dressed on face.

Both of the kinds of rubble masonry just described are very commonly worked up at intervals, with the line and level, to level courses, either regular or irregular in depth, the latter being preferable on account of its appearance and more suitable to the irregular sizes of the stones used. From 18 to 14 inches are the ordinary depths of the courses, according to the nature of the stone. Figs. 691 and 692 show both common and irregular coursed rubble worked up to courses ; the latter being also called *coursed header work* when the headers, occurring at intervals, run the full depth of the course. In fig. 693 a superior class of work is shown, the joints being all vertical, by which means a more regular appearance is obtained.

Rankine's 'Civil Engineering,' speaking of coursed rubble (such as fig. 693), says : '*One-fourth part* at least of the face in each course should consist of bond stones or headers, each header to be of the entire depth of the course, of a depth ranging from one and a-half times to double that depth, and of a length extending into the building to from three to five times that depth, as in ashlar. These headers should be roughly squared with the hammer, and their beds hammer-dressed to approximate planes ; and care should be taken not to place the headers of successive courses above each other, for that arrangement would cause a deficiency of bond in the intermediate parts of the course. Between the headers each course is to be built of smaller stones, of which there may be one, two, or more in the depth of the course. These are sometimes roughly squared, so as to have vertical side-joints ; sometimes the stones are taken as they come, so that the side-joints are irregular ; but no side-joint should form an angle with a bed-joint sharper than

60°. Care should be taken, not only that each stone shall rest on its natural bed, but that the sides parallel to that natural bed shall be the largest, so that the stone may be flat, and not be set on edge or on end. However small and irregular the stones may be, care should be taken to make the course break joint. Hollows between the larger stones should be carefully filled with smaller stones, completely embedded in mortar.'

The same authority gives the resistance of good coursed rubble masonry to crushing at about four-tenths of that of single blocks of the stone it is built with.

Coursed, or regular coursed rubble, as shown in fig. 693, is applicable where the beds, though thin, are pretty regular, so that a sufficient number of stones of a uniform depth can be got to allow of their being laid in regular courses of one stone only in depth. Larger stones, often of cut stone, equal in depth to two or three courses of the rubble work, are generally used at the quoins.

Whenever cut-stone is used in connection with rubble work, as at the quoins of a building, the ends adjoining or tailing into the rubble should never be cut square, but be left comparatively rough, so as to harmonise with the masonry in the body of the wall, and not appear as if cut off from it by straight lines.

Dry-walling is the simplest class of rubble work, and consists of stones roughly hammered, and bedded by pinning with spalls, without any mortar. It requires considerable skill to build properly, as its stability depends entirely on the firm bedding and bonding of the different stones. It is chiefly used for fencing land, for railway and canal embankments and cuttings, or at the backs of retaining-walls, to diminish the pressure of the earth on them, and to allow of water finding its way down to the drains below. Such walls—which are generally about 5 feet high, increasing in thickness towards the bottom, and averaging about 18 inches thick—are usually built to lines strained between trestles (fig. 696), in order to avoid plumbing the face.




FIG. 696.

Dry-rubble walling is generally built in courses about 12 inches high, and should have a waterproof top, or *coping*, to keep the water from getting into the body of the work and bursting it in frosty weather. The coping may be made of stones laid on edge in mortar, bituminous concrete, or, for want of anything better, clay puddle, or even sods.

When the stones come out in thin slabs the walls may be specified to be built of 'good sound, flat bedded stones of a fair average size (none less than 6 inches broad across the narrowest part), set dry, and coped with stones, not less than 9 inches deep, set on edge; each coping stone to extend across the full breadth of the wall, and to be properly set in good hydraulic mortar.' A high joint with a projecting ledge is very frequently used to mark the joints of rubble work; this is a bad system, and is sure to peel off under the influence of wet and frost.

A cubic yard of rubble masonry will, as a rule, require $\frac{1}{3}$ cubic yard of mortar and $1\frac{1}{3}$ cubic yard of stone.

BLOCK-IN-COURSE MASONRY.

Block-in-Course (fig. 694, page 387) is a term applied by engineers to a class of masonry much used in piers, abutments, wing walls, &c., when there is a suitable stone in the district and good solid work is required. The stones are all squared and brought to good fair joints, the faces being more or less worked, according to taste, but generally merely hammer-dressed; and the courses consist of single stones only in depth. It chiefly differs from ashlar in the smaller size of the stones and depth of the courses, the stones at command being—ordinarily rougher and more thinly bedded—chiefly *shoddies*, or stones under 12 inches deep, whereas *ashlar* blocks range, as a rule, from 12 inches to 14 inches in depth.

The best stone for the purpose is a hard, self-bedded stone which will work easily into courses from 3 inches to 10 inches or 12 inches in depth, the length of each stone being four or five times its depth. No attention is paid to uniformity in the depth of the courses.

ASHLAR MASONRY

The term *ashlar* is applied to masonry built up of a thick-bedded stone which admits of being scabbled, or sawn into square blocks of given dimensions. It is also used to denote roughly-squared blocks of stone over 12 inches deep, as delivered from the quarry or stonecutter, or as prepared for setting. Ashlar work (fig. 695, page 387) is built in courses of uniform, or nearly uniform, depth—generally from 10 inches to 14 inches—ranging throughout with the quoins and dressings. It goes by different names according to the face put upon the stone, from quarry-pitched or rock ashlar up to wrought ashlar.

No stone should be laid in mortar without being first fitted into place, and any irregularities in shape corrected. Large ashlars are first accurately fitted into place, and then set on a bed of mortar carefully spread out to receive them; after which the vertical joints have to be filled by stopping them up on the outsides with cement, and pouring in cement or mortar grout, which should be worked about with a piece of hoop iron, so as to ensure its completely filling the joints. The beds and joints are worked to plane surfaces, so as to allow of close-fitting joints. These surfaces should not be too smooth, otherwise the mortar will not adhere so well to the stones, but in good work should be true enough to allow of joints not over $\frac{1}{8}$ inch thick; they are generally

either left as they come from the saw (if sufficiently true), or taken out of winding by running chisel draughts round the margins, and dressing them down with the point, as in half-plain work, taking off any parts left projecting beyond the level of the chisel draughts with a chisel.

Proportions for Stones, Bond, &c.

In both block-in-course and ashlar masonry it is necessary to proportion the length, breadth, and thickness of the stones according to their hardness, in order to guard against their breaking across. Rankine says that in the weaker sandstones and granular limestones the length of a stone should not exceed three times its depth, nor the breadth one and a-half to double its depth. In harder stones—such as require 2½ or more tons to the inch to crush them—the length may be four or five times the depth, and the breadth three times the depth.

The best bond in masonry is that which shows on the face of the work alternate headers and stretchers in each course, as in Flemish bond in brickwork, each header coming over the centre of a stretcher in the course below. In such work one-third of the face consists of headers, if the length of the stretchers is twice the breadth of the headers; but as stones are rarely cut to exactly the same dimensions, it may be laid down that not less than one-fourth of the face of the wall should consist of headers, and that the stones should break joint from one to one and a-half times the depth of a course.

The thickness of the joints will vary from ½ to ⅛ inch, according to the smoothness of, or amount of work bestowed upon, the beds, as it must be sufficient to transmit the pressures from stone to stone without permitting of actual contact at any point of their surfaces.

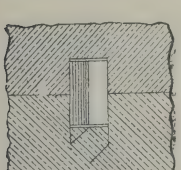


FIG. 696A.

Dowelling.

For securing stones in places where the adhesion of the mortar or cement is not sufficient *dowelling* is the best method. Fig. 696A shows a method of doing this. It consists in making exactly opposite each other, in the two stones two holes, either circular or square in section, and fitting into them a dowel or pin. These may preferably be of good hard slate, run with either brimstone or cement.

Measurement and Valuation of Masonry.

In districts where stone abounds, and forms the principal material for building purposes, ordinary walls are built of rubble stone, and measured by the cubic yard, or some other local standard, such as, in Ireland, by the running perch (21 feet), of a given height and thickness, or by the square perch of 21 feet super, at a standard thickness of 18 inches. In the West of England the square perch is employed, of 18 feet super, at a standard thickness of 2 feet, to which walls of any thickness are reduced; or the price per perch may vary with the thickness of the wall. In other parts masonry walling is measured by the rood of 36 square yards, or 24 cubic yards, the standard thickness being 2 feet; or by the rod of 272 feet super, as in brickwork, at a standard thickness of 18 inches or 2 feet.

In engineering, as distinct from architectural constructions, masonry is rarely valued otherwise than by the cubic yard for the roughest descriptions of work, and by the cubic foot for superior work.

The price in all cases varies with the quality and description of work, as 'coursed' or 'uncoursed,' in 'walling' or 'foundations.'

The superficial content of the surface-work is paid for separately by the square foot, yard, or rood of 36 square yards, including jointing or pointing, and such squaring to beds and joints as may be required, quoins, &c., of selected stones being often paid for at so much extra per foot run.

Superior work, such as squared masonry, whether in walling or dressings, is usually valued by the foot cube as block stone, merely scabbled or sawn to the required dimensions and set. The work upon it is taken separately by the foot super.

When different descriptions of masonry occur in a wall, such as rubble faced with ashlar, instead of cubing out the rubble and ashlar work separately—in which case the latter is valued by the cubic foot prepared and set, including all beds and joints, the facework being taken by the foot superficial as tooled, pointed, &c.—the whole may be taken as rubble masonry, and so much extra allowed per foot superficial for the superior facing, including all extra labour, dressing, and pointing.

When walls are built of rubble masonry, it is invariably cheaper to buy bricks at 30*s.* to 40*s.* per 1,000, and build them into such parts as jambs and arches, the labour upon which would be much less than in those shown on the face of the wall.

The block stone for the cut stonework in a building is ordinarily sold at the quarries, or delivered, by the cubic foot, or in large rough blocks by the ton, of from 13 to 17 cubic feet, according to the description of the stone, 1 inch being allowed each way for irregularities and waste.

QUANTITY OF STONE EQUIVALENT TO 1 TON IN WEIGHT.

Description.	Feet Cube.	Description.	Feet Cube.
Vein marble	13	Cragleith	$14\frac{3}{4}$
Statuary marble and granite	$13\frac{1}{2}$	Portland	15 to 16
Purbeck	14	Derby	15
Yorkshire	12 to 15	Bath	16 to 17

Description.	Feet Super.	Description.	Feet Super.
$3\frac{1}{2}$-inch York paving (tooled)	$58\frac{1}{2}$	3-inch granite	54
3 " " " "	$49\frac{1}{2}$	6 " "	27
$2\frac{1}{2}$ " Purbeck paving	68	7 " curb	23
3 " " "	56		

SECTION VIII

PART II

MORTARS—CONCRETES—CEMENTS—PLASTERS

Revised and amplified by Alfred B. Searle
(Consulting Advisor on Cementitious Materials).

MORTARS.

Mortars are pasty substances which gradually harden on exposure; they are used for uniting stones or bricks in the construction of masonry or brickwork.

The chief kinds of mortar are:

Lime mortar, composed of lime and sand.

Trass mortar, composed of lime, sand, and trass or brick-dust, or of lime and trass without sand.

Cement mortar, composed of Portland cement (or other silicious cement) and sand.

Hydraulic mortar, composed of either hydraulic lime or cement, and sand, and characterised by its power of hardening under water.

Clay mortar, consisting of a mixture of fireclay and crushed firebricks, and used chiefly in the construction of furnaces, kilns, and other structures which have to be heated to high temperatures.

Lime Mortar.

The chief ingredients of ordinary lime mortar are lime and sand, but other materials, such as crushed bricks, ground stone or trass, and waste products such as ground slag, ashes, or coke, may, under suitable conditions, replace some of the sand. The tenacity of the mortar may be increased by the addition of hair or other fibrous material.

The best mortar for use in air * consists of a mixture of lime, sand, and brick-dust, but the latter is usually omitted on account of its cost.

Lime mortars made of fat or pure lime should not be used for roads, bridges, viaducts, waterworks, or any structure exposed to water, and some authorities maintain that even for churches, houses, and other buildings, it should not be used without the addition of trass or its equivalent, so as to prevent the flaking, crusts, and canker which are produced when too fat a lime is used.

Hydraulic lime mortar is composed of hydraulic lime and sand, the proportions varying from 3 to 6 measures for each measure of the lime (see *Lime Concrete*, p. 395). The chief use of this kind of mortar is for structures exposed to water, but unless the hydraulic lime is well selected, the structures may develop crusts and canker. Portland cement mortar is usually much superior to mortar made with hydraulic lime.

Trass Mortar.

Trass mortar is but little used in Great Britain, but has been used extensively abroad, and particularly in the East. The term 'trass mortar' is not confined to mortars containing true trass, but includes those containing similar materials, such as brick- or tile-dust, pozzolana, santorin earth, and other metamorphosed alumina silicates, which combine with free lime to form an indefinite compound having cementitious properties. The use of trass or similar material overcomes the disadvantages which accompany the use of fat-lime. The best proportions for trass mortars are shown in the table on p. 393. An excess of trass does no harm.

Cement Mortar.

Cement mortar consists of a mixture of sand and Portland cement, the usual proportions being 2 to 6 measures of sand to 1 of cement, according to the strength required. The best proportions for various purposes are shown in the table on p. 393. For structures exposed to

* Mortars for use under water are termed *hydraulic* mortars.

the air there should be more than twice as much sand as cement, but for completely waterproof structures the proportion of cement should not be less than half the sand used.

Lime is sometimes added to cement mortar to increase its plasticity and to make it easier to use. The addition of not more than 20 per cent. of hydrated lime slightly increases the strength of the concrete, but if the latter is exposed to water (inch rain), the free lime may be washed out, leaving a porous material which soon flakes and disintegrates when exposed to frost. These drawbacks can be avoided by adding trass instead of lime—a cement mortar composed of two measures of cement, one of trass and six measures of sand, being of wide application and easy to work.

All cement mortars are hydraulic—i.e. they harden readily under water.

Raw Materials for Mortars.

The *lime* should not be too 'fat' or pure, as such lime hardens chiefly by combination with carbon dioxide in the air, and then only externally.

Lean (i.e. less pure) lime * and hydraulic lime, on the contrary, harden in a manner similar to cement. The addition of trass or brick-dust to slaked lime has a similar effect on the manner in which the mortar hardens.

Hydraulic limes differ from the 'fat' or quick limes in consisting of an indefinite compound of lime and clay, which may be regarded as a crude Portland cement (p. 402), containing a large excess of free lime. The hydraulic limes owe their power of setting and hardening under water to this lime-clay compound, and consequently form a stronger brickwork or masonry than is produced by common mortar. Some hydraulic limes consist of a mixture of quicklime, true hydraulic lime, and inert or unburned material; for important work they should be tested and the proportions of these ingredients ascertained, as in hydraulic lime the proportion of cementitious matter present is more important than the percentage of lime.

Lias lime is hydraulic lime obtained from clayey limestones occurring in the Lias formations.

Quicklime should be slaked or hydrated before use; hydraulic lime should be bought in the form of a powder. Slaked lime should pass completely through a 60-mesh sieve, and should not leave more than 8 per cent. residue on a 100-mesh sieve. Hydrated or hydraulic lime should not leave more than 8 per cent. of residue on a 100-mesh sieve.

A hydraulic lime, when mixed with 30–50 per cent. of its weight of water and stored under water at 60° F., should harden sufficiently not to be indented with the finger-nail in about three days.

The *sand* used for mortars should consist of sharp (angular) grains of various sizes. Rounded grains do not interlock sufficiently to produce as strong a mortar.

Crystalline quartz sand is to be preferred to mica or felspar sand; the usual description 'good, clean, sharp sand' is much too wide. The grains of sand which are angular give the best results of tensile strength, those that are round give the highest compression strength. It is advisable to submit the sand to a microscopic examination to ascertain its suitability, as a considerable variation in the strength of mortar may occur, owing to the form and variety of the sand particles. From trials made with mortar composed of 1 of cement and 3 of sand a difference of strength varying from 171 lbs. to 313 lbs. per sq. in. was found, owing entirely to the difference in the sand; normal sand mixed in above proportions gave 256 lbs. per sq. in. in 28 days.

It is very important that the sand used for mortars and concrete should be free from clay and decomposed vegetable matter (*humus*). A simple test, devised by D. Abrams and O. Harder, consists in shaking the sand vigorously with a dilute solution of caustic soda, allowing the sand to settle and noting the colour of the overlying liquid. If it is dark-coloured, the sand is probably unsuitable for use: a pale yellow colour may be neglected.

The grading of the sand, i.e. the proportions of grains of different sizes, deserves far more attention than has yet been paid to it. By the use of a suitably graded sand, it is easy to reduce the proportion of the more expensive lime or cement by about 33 per cent. of that required for a less suitable sand. For most purposes the sand should contain about 30 per cent. of air-spaces or voids between the grains. The proportion of voids may be estimated by filling a measure with sand, and then pouring in water until the water is level with the top of the sand. The ratio of the volume of water, added to the volume of the sand, is that of the volume of the voids to that of the sand.

The *water* used in the preparation of mortar should be free from decaying substances; hence, peaty water should not be used. Apart from this, its source and character are of small importance. Brackish water, and even sea water, does little harm as regards the strength of the mortar, but may cause scum or efflorescence on the structure. If both are available, soft water is better than hard. For cement-sand mortar the average will be about 22 per cent. of the cement and sand by volume, or about 20 per cent. by weight, for trass-cements and mortar 8 to 10 per cent. by volume.

---

* Limes which produce less than twice their volume of slaked lime in the form of an apparently dry powder are termed 'lean' or 'poor' limes.

Proportions for Mortars.

Mortars are usually made largely by guess-work, but to secure the best results—which are often the cheapest, as a large saving can be effected by preventing a waste of lime—it is necessary to determine the best proportion of sand for the particular lime used.

For many purposes, the most suitable proportions are from 2 to 5 measures of sand to 1 measure each of lime and brick-dust, or trass, but the latter is usually omitted, and large quantities of mortar consist of 1 measure of lime to 3 measures of sharp sand. When ashes * or coke dust are used, one measure of these materials usually replaces an equal amount of sand. For the cheapest mortar, 1 part of lime and 4 parts of sand is used, but such a mortar is weaker than is desirable for general work.

According to J. A. van der Kloes, who has investigated the matter very thoroughly, the best proportions for mortars for various purposes are as shown in the following table :—

Number.	Lean Lime.	Fat Lime.	Lime-Putty.		Trass.	Portland Cement.	Trass or Pozzolana Cement.	Sand.
			Solid.	Fluid.				
A.—Waterproof Mortars for Work which is continually under Water.								
I.	1	—	—	—	$1\frac{1}{2}$	—	—	$1\frac{1}{2}$
II.	—	1	—	—	$1\frac{1}{2}$	—	—	2
III. (*a*)	—	—	1	—	3	—	—	4
III. (*b*)	—	—	—	1	$2\frac{1}{4}$	—	—	3
IV.	—	—	—	—	—	1	—	2
V.	—	—	—	—	1	1	—	$2\frac{1}{2}$
VI.	—	—	—	—	—	—	1	1–$1\frac{1}{2}$
B.—Mortars for Quays, Sluice Walls, Damp-proof Courses, etc.								
VII.	1	—	—	—	$1\frac{1}{2}$	—	—	2–$2\frac{1}{2}$
VIII.	—	1	—	—	$1\frac{1}{2}$	—	—	$2\frac{1}{2}$–3
IX. (*a*)	—	—	1	—	3	—	—	5–6
IX. (*b*)	—	—	—	1	$2\frac{1}{4}$	—	—	$3\frac{1}{2}$–$4\frac{1}{2}$
X.	—	—	—	—	—	1	—	3
XI.	—	—	—	—	1	1	—	4
XII.	—	—	—	—	—	—	1	2
C.—Mortars for Foundations and Buildings.								
XIII.	1	—	—	—	$1\frac{1}{2}$	—	—	3–4
XIV.	—	1	—	—	$1\frac{1}{2}$	—	—	4–5
XV. (*a*)	—	—	1	—	3	—	—	8–10
XV. (*b*)	—	—	—	1	$2\frac{1}{4}$	—	—	6–$7\frac{1}{2}$
XVI.	—	—	—	—	—	1	—	3
XVII.	—	—	—	—	1	1	—	4–5
XVIII.	—	—	—	—	—	—	1	$2\frac{1}{2}$–3

For 1 cu. yd. of cement mortar, the following quantities of sand and Portland cement will be required :—

Proportions.		Sand.	Cement.
Cement.	Sand.	Cub. ft.	Lbs.
1	0	—	2,800
1	1	18·8	1,695
1	2	24·9	1,120
1	3	28·7	860
1	4	30·3	682
1	5	31·4	565
1	6	32·2	483

* The use of ashes in mortar is a frequent cause of scum or efflorescence in brickwork.

0·87 cu. ft. of neat cement mortar will result from mixing 0·36 cu. ft. of water with 1 cu. ft. of loose cement.

1 cu. ft. of loose Portland cement will make about—

4·1 cu. ft. of concrete mixed		1 : 2 : 4
5·0	,, ,,	1 : 2½ : 5
5·8	,, ,,	1 : 3 : 6
7·5	,, ,,	1 : 4 : 8

1 cu. ft. of loose Portland cement neat as cement mortar will cover about 10·4 sq. ft., 1 in. thick.
1 cu. ft. of loose Portland cement to 1 sand will cover about 17 sq. ft. 1 in. thick.
1 cu. ft. of loose Portland cement to 2 sand will cover about 25 sq. ft. 1 in. thick.
1 cu. ft. of loose Portland cement to 3 sand will cover about 34 sq. ft. 1 in. thick.
1 cu. ft. of loose Portland cement to 2 sand will lay about 146 bricks with ⅜-in. joint, and 247 bricks with ¼-in. joint.
1 cu. ft. of loose Portland cement to 3 sand will lay about 212 bricks with ⅜-in. joint, and 317 bricks with ¼-in. joint.
1 yd. super. of pointing brickwork in neat cement requires about 8 lbs. of cement.

The proportion of water required varies with the nature of the lime and sand used. (See the par. on *water*, on p. 392.)

Mixing Mortars.

If a mortar is to answer its purpose satisfactorily, it is obvious that the various constituents must be mixed as uniformly and intimately as possible, for wherever sand or other powdery or gritty substances accumulate in the mortar, no hardening or adhesion will take place, and the mortar will be almost useless at such points.

Small quantities of mortar may be mixed by repeatedly turning over the materials with a shovel, and afterwards with a trowel, so as to mix them very thoroughly. As the labour is hard, and workmen are not always sufficiently conscientious, machine-made mortar is often more reliable than that mixed by hand. The most suitable machine for mixing mortar consists of an edge-runner or pan-mill of moderately light construction, in which the materials are treated for 20 to 30 minutes. Some builders introduce large pieces of material into such a mill, and grind them therein. This is not desirable. No pieces larger than ½ in. diameter should be introduced into a mortar mill, and if any materials more than $\frac{1}{16}$ in. diameter are present, the mixing must be prolonged until they have all been reduced to $\frac{1}{32}$ in. or less in diameter.

Choice of Mortar.

Mortar made with ordinary lime should not be exposed to water.

Mortar made with hydraulic lime should not be exposed to running water, unless the mortar also contains trass.

Cement-mortar is best where great strength is required a short time after completing the structure, but where a longer period of hardening is permissible, lime-trass mortar is cheaper and equally durable.

For the interior of kilns, furnaces, and flues, clay mortar should be used.

Coloured Mortars.

TINTS GIVEN TO PORTLAND CEMENT MORTAR CONTAINING TWO PARTS OF RIVER SAND TO ONE PART OF CEMENT.

Pigment.	Weight of Dry Pigment to 100 Pounds of Cement.			
	½ Lb.	1 Lb.	2 Lbs.	4 Lbs.
Lamp black	Light slate	Light gray	Blue gray	Dark blue slate
Prussian blue	Light green slate	Light blue slate	Blue slate	Bright blue slate
Ultramarine blue	—	Light blue slate	Blue slate	Bright blue slate
Yellow ochre	Light green	—	—	Light buff
Burnt umber	Light pinkish slate	Pinkish slate	Dull lavender pink	Chocolate
Venetian red	Slate, pink tinge	Bright pinkish slate	Light dull pink	Dull pink
Chattanooga iron ore	Light pinkish slate	Dull pink	Light terra cotta	Light brick red
Red iron ore	Pinkish slate	Dull pink	Terra cotta	Light brick red

(L. G. Sabin.)

CONCRETES

Concretes are very coarse mortars, containing stones, gravel or ballast, sand, and a binding agent such as lime or cement. They are known by various names, according to the binding agent employed.

Lime concrete usually consists of a mixture of 1 part lime, 4 parts gravel, and 2 parts sand.

The best way of making lime concrete is by mixing together unslaked or hot, fresh-ground lime with sand and ballast, in the required proportions, on a stone, brick, or wooden floor, turning it over twice to dry, and then, as it is shovelled to a third heap, adding from the rose of a watering-can sufficient water only to slake the lime and make the ingredients cling together in a pasty mass, turning it over well as the water is added. Generally speaking, it will take about $\frac{3}{4}$ gallon to each cubic foot of ballast, but much will depend on the nature of the concrete and the dryness of the ballast employed.

Although frequently employed, fat or quick lime should not be used for lime concrete exposed to the weather, only hydraulic lime being suitable.

Beton is a French term, originally applied to lime concrete, but now used for any kind of concrete.

Cement concrete (more commonly known as *concrete* or *mass concrete*) is a mixture of stones, gravel or ballast, sand, and cement. Coke, clinker, and other materials are sometimes used to replace part of the stones, etc.

Breeze concrete consists of a mixture of 3 measures of small pieces of coke (preferably gas-works coke breeze), 1 of sand, and 1 of Portland cement. It is cheap, and nails can readily be driven into it. Its great disadvantage is that, in the event of a conflagration, it may take fire and increase the resulting damage instead of diminishing it.

Concrete made of ashes or clinker is sometimes, but erroneously, termed 'breeze concrete.'

Slag concrete is a mixture of crushed slag and Portland cement. It has been reported as having a greater compressive strength, less weight per cubic yard, and greater resistance to impact than concrete made with natural stone, but various failures which have occurred when slag concrete has been used have made many engineers unwilling to employ it. According to Dr. J. E. Stead, these failures were chiefly due to (1) using too little cement, and (2) the use of fine slag contaminated with ashes and other deleterious substances. In Dr. Stead's opinion, pieces of slag of less than $\frac{1}{2}$-in. diameter should not be employed in concrete. Fine slag, when moistened, is liable to evolve sulphuretted hydrogen, which has a very objectionable odour.

Reinforced concrete or *ferro-concrete* consists of a concrete structure, the strength of which is increased by the immersion of steel rods or wires in the concrete (see Section X, p. 435).

Raw Materials for Concrete.

All concretes consist essentially of a coarse aggregate, a fine aggregate, and a binding material or cement.

The *coarse aggregate* should consist of suitable stone, gravel or ballast, coke breeze, clinker, or other hard material of ample resistance to crushing, low porosity (absorbing less than 6 per cent. of its weight of water), and not liable to rapid disintegration by frost. The aggregate should be clean, and if necessary it should be washed before use. Except for the largest and roughest work, all the pieces of coarse aggregate should pass through a 2-in. ring.

The *fine aggregate* should consist of sharp, quartzose sand, similar to that used for mortar (p. 392). If trass is added, the concrete will be more resistant to water. Wet sand requires more cement than dry sand. The sand should be free from clay, and if necessary should be washed before use.

The *cement* may consist of hydraulic lime, Portland cement, or one of the cruder cements, such as *natural cement*, *Roman cement*, *Grappier cement*, *slag cement* (*iron Portland cement*), or various mixtures of Portland cement with sand, blast furnace slag (*Montan cement*), iron ore, etc.

Of these, Portland cement is the strongest and most reliable. It should conform to the Standard Specification (p. 404) For further information, see pp 402-406.

The *water* used for concrete should be the same as that for mortar (p. 392).

Proportions for Concrete.

To obtain the best results, the proportion of coarse aggregate (stones, gravel, etc.) should be such that the interstices or voids between its particles are wholly filled with sand, the interstices or voids in the sand being then filled with cement; additional cement, sufficient to cover all the particles of aggregate with an adhesive coating, should also be present.

As the determination of the voids is often troublesome, many engineers adopt definite proportions of coarse and fine aggregate and cement. For reinforced concrete work where very good concrete is required, the proportions are usually 1 of Portland cement to 2 of sand to 4 of coarse material. For a medium quality concrete, such as is used for foundations, walls, arches, ordinary floors and stairs, the proportions should be 1 : 2½ : 5. For heavy walls, retaining walls, piers, and abutments which are subjected to considerable strain, the concrete can, however, be poorer, 1 : 3 : 6. Wherever concrete is employed in large masses, and is subjected to simple compression of small intensity, or is used for a backing for brickwork or masonry, or for covering the site of a building to prevent the damp rising from the soil, a still poorer concrete can be used of 1 : 4 : 8. In such work and in foundations large stones (commonly called 'plums') can often be placed by hand in the mass some little distance apart so as to allow them to be surrounded by the concrete; these economise considerably, without greatly reducing the strength of the mass.

For concrete to be used under water, a mixture corresponding to a cement-trass mortar is preferable (see the table on p. 393).

The following table shows the relative weights required to produce the proportions mentioned in the first column; from it the cost of materials per cu. yd. of concrete for various mixtures can be ascertained.

MATERIALS FOR 1 CU. YD. OF CONCRETE.

Based on loose cement weighing 90 lbs. per cu. ft., with an average specific gravity of 3·12 and a cu. ft. of loose, moist, coarse sand weighing 89 lbs. when dried.

Proportions.	Kind of Coarse Material.	Lbs. Portland Cement in 1 cu. yd.	Sand cu. yds. in 1 cu. yd.	Coarse Material, cu. yds. in 1 cu. yd.
1 : 1½ : 3	Shingle (40 per cent. voids)	666	·41	·82
Do.	Broken stone (45 per cent. voids)	697	·43	·86
1 : 1⅔ : 3½	Shingle	610	·42	·84
Do.	Broken stone	640	·44	·88
1 : 2 : 4	Shingle	520	·43	·86
Do.	Broken stone	548	·45	·90
1 : 2½ : 5	Shingle	430	·44	·88
Do.	Broken stone	450	·46	·92
1 : 3 : 6	Shingle	364	·45	·90
Do	Broken stone	383	·47	·94
1 : 4 : 8	Shingle	280	·46	·92
Do.	Broken stone	294	·48	·97

This table does not apply to concrete made with a single aggregate, such as Thames ballast, to which no sand is added, but where proper scientifically proportioned concrete is employed, as should always be the case, the values given in the table are accurate and correspond with experience.

The proportion of water used in mixing concrete is much more important than is commonly realised, as it has a great influence on the strength of the concrete. According to D. A. Abrams,

$$\text{Compressive strength of concrete in lbs. per sq. in.} = \frac{14{,}000}{7x},$$

where x is the ratio (by volume) of water : cement. If this is the case, a comparatively small excess of water must have a very harmful effect. The American practice of using a very wet mixture is not to be recommended where great strength is required.

In measuring out the materials, the fact must not be overlooked that about 34 cu. ft. of stone, sand, and cement will be required for each cu. yd. of concrete, as the sand and cement occupy the interstices between the pieces of coarse aggregate.

Mixing Concrete.

Concrete may be mixed by hand, as described on p. 394, but large quantities are preferably mixed by machinery. Various types of mixing machines have proved satisfactory, but the ones most largely used consist of a cylinder, fitted with baffle plates internally and mounted on trunnions so as to be revolved rapidly.

WORKING CAPACITIES OF STEAM-DRIVEN MIXERS.

(Ransome Machinery Company, 1920, Ltd.)

Standard size of mixer	00	0	1	2	3	4	5
Nominal batch capacity	2 ft.	¼ yard	½ yard	¾ yard	1 yard	1½ yard	2 yard
Capacity of gauging hopper	cu. ft. 3	cu. ft. 7·25	cu. ft. 16	cu. ft. 24	cu. ft. 36	cu. ft. 56	cu. ft. 80
Approximate output per batch of mixed concrete using broken stone	cu. ft. 2	cu. ft. 5	cu. ft. 11	cu. ft. 16	cu. ft. 24	cu. ft. 38	cu. ft. 54
Approximate output per batch of mixed concrete using ballast or gravel	cu. ft. 2·25	cu. ft. 5·5	cu. ft. 12	cu. ft. 18	cu. ft. 27	cu. ft. 42	cu. ft. 60
Average guaranteed output per day (10 hrs.) using broken stone	cu. yds. 22	cu. yds. 55	cu. yds. 118	cu. yds. 180	cu. yds. 270	cu. yds. 415	cu. yds. 592
Average guaranteed output per day (10 hrs.), using ballast or gravel	cu. yds. 25	cu. yds. 60	cu. yds. 133	cu. yds. 200	cu. yds. 300	cu. yds. 470	cu. yds. 660
Maximum output which has been obtained per day (10 hrs.)	cu. yds. 50	cu. yds. 120	cu. yds. 266	cu. yds. 400	cu. yds. 600	cu. yds. 940	cu. yds. 1,320
Brake horse-power required	2	3	6	10	15	20	35

NOTE.—In the production of concrete it is impossible to guarantee definitely the exact amount of mixed material which will be produced from a given quantity of aggregate, owing to the varied nature and size of the stone used, but the above figures, based on actual results, may be taken as approximately correct.

The mixing should be as rapid as possible, consistent with thoroughness, as the concrete should be placed in position before it has begun to set.

Remixed concrete should never be used.

For descriptions of mechanical mixers and further information on mixing concrete, see 'Cement, Concrete, and Bricks,' by A. B. Searle (Constable).

Placing Concrete.

In ordinary foundations, the concrete should be deposited in horizontal layers, not more than a foot thick, and care should be taken to cover any joints in one layer by the succeeding one, as the joint between two days' work is always a weak part; moreover, the last-laid layer should be well wetted, to ensure a proper connection with the next.

The chief mistake made in placing mass concrete is in failing to secure sufficient adhesion to the previously placed material. In reinforced concrete there is often a danger of incomplete filling, particularly around the more complex portions of the reinforcement; this may be minimised by the use of a wetter mixture or by efficient damping or vibration. If the latter is effected mechanically, care must be taken not to continue it so long that the setting of the concrete is disturbed.

Fine concrete or cement mortar may be sprayed on to the surface to be covered by means of a *cement gun* operated by compressed air (see p. 400). This method is particularly effective for 'plastering' with cement mortar, or in the construction of walls about 2 ins. thick on a basis of expanded metal or wire netting.

As the right placing of concrete is of great importance, it may be desirable to consult one or more textbooks on the subject.

Volume of Concrete.

The volume of a mass of concrete is much less than that of the separate ingredients, owing to the voids or interstices between the particles of coarse aggregate being occupied, in the concrete, by the sand and cement. Roughly,

Mixture.	Volume of coarse aggregate.	Volume of concrete.
1 : 2 : 4	1 cu. yd.	1·07 cu. yd.
1 : 2½ : 5	1 cu. yd.	1·02 cu. yd.
1 : 2 : 8	1 cu. yd.	1 cu. yd.

1 cu. ft. of loose Portland cement will make about :—

4 cu. ft. of 1 : 2 : 4 concrete.	6 cu. ft. of 1 : 3 : 6 concrete.
5 cu. ft. of 1 : 2½ : 5 „	7½ cu. ft. of 1 : 4 : 8 „

For the quantities of materials required for concrete floors, see pp. 393, 394.

Weight of Concrete.

The weight of 1 cu. ft. of concrete varies with the proportion and nature of the aggregate used.

The average weight of 1 : 2 : 4 concrete, using sand as fine aggregate and one of the following coarse aggregates, is: coke breeze, 100 lbs. per cu. ft.; clinker, 110 lbs. per cu. ft.; sandstone, 120 lbs. per cu. ft.; bricks, 125 lbs. per cu. ft.; limestone, 135 lbs. per cu. ft.; shingle, 145 lbs. per cu. ft.; granite, 145–150 lbs. per cu. ft.

Strength of Concrete.

A large excess of water and too little water are both adverse to the production of strong concrete.

Concrete containing too much cement may be weaker than that containing less cement.

Badly mixed concrete is weak in some parts and strong in others.

The addition of 10 per cent. calcium chloride to the mixing water increases the strength of mass concrete, but cannot be used for reinforced concrete as it corrodes the reinforcement.

The compressive strength of most concretes, as commercially made, can be increased 25 to 100 per cent. or more by employing rigid inspection which will ensure proper methods of fabrication of the materials.

According to H. C. Johnson :—

For equal working consistency and equal cement, gravel concrete is as strong as stone concrete.

Gravel passing same screens as stone always has less voids than the stone.

Fine sand concrete has smaller weight per cubic foot than coarse sand concrete.

Fine sand plus large aggregate (without cement) gives *smaller* volume than coarse. Fine sand plus large aggregate (with cement) gives *larger* volume than coarse.

Fine sand concrete is easier worked than coarse sand concrete for equal amounts of sand.

The finer the aggregate the more deleterious material and air it carries with it into the concrete.

The finer the sand the less should be used.

30–40 per cent. higher strengths are obtained with 3·16 in. cubes than with 6 in. cubes.

Small cubes are more uncertain and inconsistent in the strength values than larger cubes.

The requirements of the London County Council and the Specification drawn up by a Joint Committee of the Royal Institute of British Architects, District Surveyors' Association, Institute of Builders, Institute of Municipal and County Engineers, War Office, Admiralty, London County Council, and the Concerte Institute, call for a crushing strength of 1,800 lbs. per sq. in. at 28 days and 2,400 lbs. per sq. in. at 90 days, for a 1 : 2 : 4 mixture.

The figures 1,400 at 28 days and 2,000 at 90 days more nearly represent the results obtained under ordinary working conditions, with an aggregate like Thames ballast.

The strength of concrete continues to increase long after it has been made, and is by no means at its maximum after 90 days.

Weather conditions have a marked effect on concrete work. Heat hastens the hardening process; cold delays it. The effect of cold becomes noticeable when temperatures fall below 50° F., and becomes more marked with lower temperatures. As a rule, concrete does not show any serious effects from having once been frozen if, after it thaws out, it is not again frozen until early hardening is complete. It is better, however, to protect the concrete from freezing for from forty-eight hours to four or five days, depending upon the degree of the cold, rather than to expose it to the possibility of freezing. Warmth and moisture are necessary to the proper hardening of concrete.

It is especially important to keep concrete thoroughly saturated with water for at least a week, as if it is allowed to dry too soon, it never develops its full strength.

Effect of Sea-water on Concrete.

The effect of sea-water on concrete depends on the permeability of the latter, dense, waterproof concrete being largely resistant to sea-water, whilst porous concrete corrodes readily. For exposure to sea-water, the concrete should contain a considerable proportion of trass, or equivalent, a suitable mixture consisting of 1 measure of trass, 1 of Portland cement, and 2½ to 3 measures of aggregate. The aggregate should consist of coarse and moderately fine particles, in such proportions as to produce a concrete of maximum impermeability.

Condensation on Concrete.

Concrete is subject to condensation when the air is wet or humid, and a non-porous concrete is subject to more condensation than a porous concrete. A weak concrete of broken brick aggregate will have proportionately the same porosity as the porous brick itself.

Interior plastering will prevent condensation on any sort of concrete. A good method is to cover the interior of the concrete walls with ordinary plasterer's lime and sand mortar (about 3 of sand to 1 of lime), lightly keyed in the usual manner to receive the final setting coat. This coat must be left until strong pressure from the thumb makes no impression. It may be necessary to leave it for several days, according to the weather. The finishing coat of lime, putty, sand and plaster of Paris may then be applied with safety. Immediately before this latter coat sets, it should be finished with a soft hair brush, which produces a granular surface, a further method of absorbing moisture.

The best and most easily obtainable finishing coat is the following:

Three parts of lime putty or chalk lime; 6 parts of washed sand; 1 part of plaster of Paris. It gives a good finish, sets well, and works quickly.

Instead of making dense concrete for walls, it is much cheaper and more hygienic to use a very porous concrete, and to render it with a cement waterproofed exterior coating, for the fiercest driving rain cannot penetrate a $\frac{3}{4}$-in. pudlced cement rendering. Porous concrete, like all porous materials, has also the quality of retaining the heat engendered in the room, thus giving a warmer dwelling. Therefore porous concrete has the dual advantage of assisting the absorption of condensation and of conserving heat. (*J. H. Kerner-Greenwood.*)

Preventing Scaling and Cracking of Concrete.

The best method of preventing *scaling* is to keep the concrete thoroughly wet for a week or more after it has been placed, the surface being protected with wet cloths, sawdust, or other porous material.

Cracking may be prevented in the same manner, except in those cases where insufficient allowance has been made for stresses due to load or to expansion.

To Stop Leakage through Concrete.

Leakage or seepage through concrete is best stopped by cleaning the surface thoroughly, making good any cracks or fissures, and then covering the surface with a waterproof cement mortar. (See *To Waterproof Concrete*, below.)

The application of several coats of a solution of zinc sulphate, or of water-glass (silicate of soda), is cheaper, but seldom so effective.

Rust Prevention in Reinforced Concrete.

Various methods have been proposed for preventing the reinforcement from rusting. Under ordinary circumstances, no special precautions are necessary, and if the corrosion is due to electric currents no application of chemicals can be satisfactory.

The use of galvanised reinforcement has been stated to prevent rusting, and also to secure greater adhesion between the metal and the concrete.

Treatment of Dusty Concrete Floors.

Various hardening solutions are sold for preventing concrete floors from being dusty, and to give a better wearing surface. The composition of most of these solutions is a trade secret

Two excellent hardening solutions are the following:—

Mix 1 part silicate of soda to 4 or 5 parts water. Brush or sprinkle the floor well with this solution, and allow to dry. Then, after 4 hours and within 24 hours, wash clean with clean water. Repeat the treatment three times.

(2) The following solution has been recommended by *Concrete*:—

To 10 gallons of cold water add 1 fluid ounce of sulphuric acid. Heat the liquid to boiling point and stir in 25 lbs. of sulphate of alumina. Let the solution cool and strain. Sweep and thoroughly wash the concrete surface. After drying, lay on the hardener in four applications of varying strength, ranging from 30 per cent. solution and 70 per cent. water, up to 100 per cent. solution. The above quantity suffices for the complete treatment of an area of from 50 square yards to 100 square yards, depending upon the porosity of the surface treated.

To Waterproof Concrete.

Concrete may be made waterproof by taking care to use such proportions of the various ingredients as will produce a dense and impermeable material.

As this is not always practicable, it is often preferable to add a waterproofing agent prior to mixing the various ingredients. The chief of these additions are:

(1) *Oil* or a solution of paraffin wax in benzoline or other cheap volatile solvent.

(2) *Insoluble soap* made by impregnating the concrete with a solution of alum, and afterwards with a solution of soap. Suitable proportions are:—

One part of cement, 2 parts of sand, ¾ lb. of dry powdered alum to each cubic foot of sand. These are mixed and dried, and to them is added water in which has been dissolved ¾ lb. soap to each gallon. This, it is said, is nearly as strong as ordinary cement, and is quite impervious to water, and does not effloresce. For a wash, a mixture of 1 lb. of lye and 2 lbs. of alum in 2 gallons of water is often used.

(3) *Water-glass* (silicate of soda) applied in the form of a wash or spray, several applications being necessary at suitable intervals.

(4) *Secret mixtures* sold under various trade names, such as Prufitol, Bareau, Prufit, Pudlo, etc.

Building Products Ltd. (51 Columbia House, 44/46 King's Road, Chelsea, S.W. 3) supply a preparation called PRUFITOL for applying by brush or spraying machine to porous brick, stone, cement, or stucco work, which will keep out driving rains.

The integral system of incorporating a waterproofing agent with the cement and aggregate may be performed by mixing BAREAU cement waterproofing powder with the dry cement, or PRUFIT cement waterproofing paste with the gauging water.

These specialities are supplied by *Building Products Ltd.* (51 Columbia House, 44/46 King's Road, Chelsea, S.W. 3), who specialise in structural waterproofing problems and provide specifications for particular work.

'CEMENT GUN' MACHINE FOR APPLICATION OF HYDRATED MATERIALS.

(Supplied by Fleming & Co., 31 Robertson Street, Glasgow.)

In this machine, sand and cement, previously mixed dry, are placed in a hopper, from which the mixture is automatically fed through an air-locking device and hose to a nozzle, where water is automatically added, and by the aid of compressed air the 'Gunite' (as the mixture is called) is sprayed in a perfectly hydrated state on the surface to be coated.

The propelment of the material by the pneumatic pressure against the surface to be covered, ensures a very dense, hard, and durable mortar. It also means the elimination of heavy and expensive forms, for the material builds up against the backing to a considerable thickness without losing its high quality.

Tests showed that the modulus of elasticity of 'Gunite' was at the end of ninety days, on one part cement to three parts sand mixture, 4,705,000; on one part cement to two-and-a-half parts sand mixture, 4,760,000.

On prisms made of mixtures consisting of one part cement and three parts sand, at the end of ninety days an average ultimate compressive strength of 4,000 lbs. per sq. in. was obtained; on prisms consisting of mixtures containing one part cement to two-and-a-half sand, 4,600 lbs. per sq. in.

It was found that the adhesion between new and old surfaces was absolutely permanent.

'Gunite' has a very high resistance to salt water action.

CONCRETE BLOCKS, TILES, AND OTHER ARTICLES.

In addition to masses of concrete moulded *in situ*, large quantities of blocks, tiles, garden vases, fencing posts, troughs, and other articles made of concrete or of cement-sand mortar (p. 391) are in regular use, and afford clear proof of the manifold uses of this material.*

For *concrete floors*, see p. 750.

ASBESTOS BUILDING SHEETS.

The use of sheets composed of Portland cement, asbestos, and a neutral filler, has greatly increased during recent years. These sheets require costly plant for their production, so that it is usually necessary to buy them ready-made. They are usually sold under various trade names.

Plain sheets are used for walls and roofs; corrugated sheets are largely used in place of those made of corrugated iron. Small sheets are used instead of roofing tiles (see p. 335).

* For further details see *Concrete and Constructional Engineering*, *Everyday Uses of Portland Cement*, and various textbooks on concrete.

Ægis' Asbestos-Cement Building Sheets.

8′ × 4′ or 4′ × 4′

These sheets (*Turner Brothers Asbestos Co., Ltd., Rochdale* are readily worked and quickly fixed with ordinary carpenters' tools.

Ceilings.—For ceilings, sheets $\frac{5}{16}$ in. or $\frac{3}{16}$ in. thick are most suitable, and are nailed to ceiling joists with 1¼-in. galvanised or copper nails at not less than ½ in. from edge of sheets, and about 6-in. centres, care being taken that edges butt closely and nail heads are flush.

In forming ceilings, 4-ft. by 4-ft. sheets are recommended. These are quickly and easily handled by the erectors, and the ceilings may be subdivided into panels, the joints being covered with a moulded wood or fillet strip, the result giving a highly decorative effect.

Partitions.—These may be formed with sheets $\frac{5}{16}$ in. to ½ in. thick, nailed as before described to timber studding, spaced at 1 ft. 4 ins. or 2 ft. centres. Between the standards, dwangs or struts should be placed to support the ends of the sheets. The joints may be filled before painting, and the whole surface rubbed down in the usual way, or as an alternative covered with moulded wood or fillet strips.

For 'Fibrent' Asbestos Cement Building Sheets, see p. 336.

Bell's Hurcan Building Slabs.

'Hurcan' slabs (*Bell's United Asbestos Co., Ltd.*) are composed of cement concrete of the highest quality faced with asbestos cement. The slab is so well finished that for interior work no plastering is required, and owing to the asbestos facing, decoration can be applied directly after priming, either distemper, paint, or wallpaper.

The exterior effect of the slabs is that of ashlar stonework.

The slabs are 3 ins. thick (2 ins. in the frog). The standard sizes are 9 ins. up to 24 ins. long (increasing by 3 ins. units) by 12 ins. deep.

Special blocks are made for the external corners of the building, and end-faced slabs for reveals of windows and doors. Partition slabs are faced on both sides and 3 ins. thick.

The weight of the material is approximately 26 to 30 lbs. per square foot, or about 9 yds. super (single thickness) per ton.

The cost is slightly less than that of bricks, and considerable economy is effected in labour, mortar, and entire elimination of plastering.

For information on Bell's *Poilite* sheets, see p. 335.

CEMENTS.

Cements are materials used for uniting other materials or articles so that they adhere permanently. There are many kinds of cements, but the more important ones may be grouped as follows:—

(1) *Mastic cements*, in which the chief ingredient is red lead with a gum or boiled oil, and sand or other inert material.

(2) *Fish-glue cements*, or liquid glues, made by treating fish bones with acetic acid. *Seccotine* is of this character.

(3) *Casein cements.*

(4) *Bituminous cements*, in which the chief ingredient is tar, pitch, or bitumen (see *Plastic cements*.

(5) *Water-glass cements*, which consist chiefly of an inert material mixed with water-glass (syrupy silicate of soda) (see Section XXXIX).

(6) *Calcareous silicate cements*, such as hydraulic lime, Roman cement and the various natural cements, and Portland cement. *Hydraulic limes* are described on p. 392. *Roman cement* is a brown, quick-setting cement, made by calcining and grinding the septaria or calcareous clay-stones found in London clay. It is one of the natural cements.

Natural cements (so-called) are made by heating natural mixtures of clay and limestone to redness, so as to effect a combination between the lime and clay similar to that in Portland cement. Such natural cements are comparable to a mixture of Portland cement with either an excess of lime or clay, as the case may be. Their composition is irregular and uncertain, so that they are inferior to Portland cement for all work of importance. They can be greatly improved by adjusting their composition by the addition of limestone or clay, as may be required, and heating until the mixture is clinkered. Such adjustment greatly increases the cost of production, but produces a Portland cement. *Portland cement* is described on pp. 402-406.

(7) *Gypsum cements*, such as plaster of Paris, Keene's cement, Parian cement (see *Plasters*,' p. 406).

(8) *Oxychloride cements*, of which the best known is Sorel cement, composed of dense magnesia and syrupy magnesia chloride (see Section XXXIX).

(9) *Refractory cements*, which are specially resistant to heat, and are therefore used in the construction and repair of furnaces, etc. (see pp. 429, 431, and Section XXXIX).

(9) *Miscellaneous cements* are described in Section XXXIX.

Portland Cement.

(Partly contributed by William Alden Brown, F.G.S., A.M.I.Mech.E., Assoc.A.M.Soc.C.E., Author of 'The Portland Cement Industry.')

Portland cement is usually made from a mixture of chalk, or limestone, and clay ground together in a wet state to an extreme degree of fineness, and subsequently dried, calcined and ground to the fineness of flour. Pats or briquettes made from it should, when broken, exhibit a bluish grey colour in the fracture. A buff or 'foxy' colour on the surface may be indicative of insufficient calcination or too low a proportion of lime in the composition of the cement; but too much importance must not be attached to colour alone, as a brown stain may be caused by the use of alkaline water for gauging or immersing the briquettes. The best brands of English Portland cement are now ground to such a fineness that the old-fashioned plan of shooting the cement into shallow bins or on a dry floor and turning it over at frequent intervals is not only unnecessary, but, when a cement is already sound and fit for use (as shown by such tests as the boiling or Le Chatelier), is positively detrimental. The addition of a very small percentage of gypsum to the cement during the grinding process for the purpose of retarding the setting time was formerly prohibited by many of the leading British engineers, but is now sanctioned. Gypsum increases the strength at three and seven days.

Portland cement may be obtained quick or slow setting. If there are no special reasons which make quick setting desirable, it is advisable to employ a cement which requires at least two hours to pass from the pasty state into the hard, solid one, as quick-setting cements require exceptional care and skill in gauging: otherwise they * begin to set and to spoil before they have been placed in their proper position in the structure.

Hydration has the same effect, and is not open to the objections that have been raised by some engineers to the use of gypsum. Cement must not be judged solely by tensile tests at the customary seven days, because the rapidity with which its strength develops depends largely on the percentage of lime in its composition and partly upon the presence or absence of gypsum. A cement containing a high percentage of lime (63 or 64 per cent.) develops its maximum strength rapidly, whilst one containing a lower percentage (60 to 62 per cent.) develops it more gradually. The former proportions are generally favoured by Continental makers, but British engineers have for the most part prohibited a larger proportion of lime than 62 per cent.

Temperature has a very great effect upon the setting time of cement. A sample tested in a temperature of 61° Fahr. and gauged with water at the same temperature took six hours to set hard. The same sample gauged in a temperature of 90° Fahr. and gauged with water of equal temperature set hard in one hour fifty minutes. This is a point which is often lost sight of.

Testing Portland Cement.

The tests usually applied relate to its

Chemical composition.
Specific gravity.
Fineness.
Tensile strength. (Neat cement.)
Tensile strength. (Cement and sand.)
Time of setting.
Soundness.

Chemical Composition.—This test is for the detection of adulterants, or to determine whether certain constituents are present in amounts exceeding that believed to be safe.

Specific Gravity.—This test is designed to detect under-burning and adulteration, and should only be used in connection with the chemical analysis; low specific gravity is often caused by 'ageing' of the cement, so that to reject a cement because of a low specific gravity may be to reject it because it has been well seasoned.

Fineness.—The fineness of the cement is a measure of its cementing value, and a fine cement will be much stronger when mixed into a mortar, or it can be mixed with a larger proportion of sand than a coarse one, and yet attain the same strength.

Tensile Strength (Neat Cement).—The test is to obtain a measure of the cohesive strengths of the particles of cement lying in the least section of the adjacent particles.

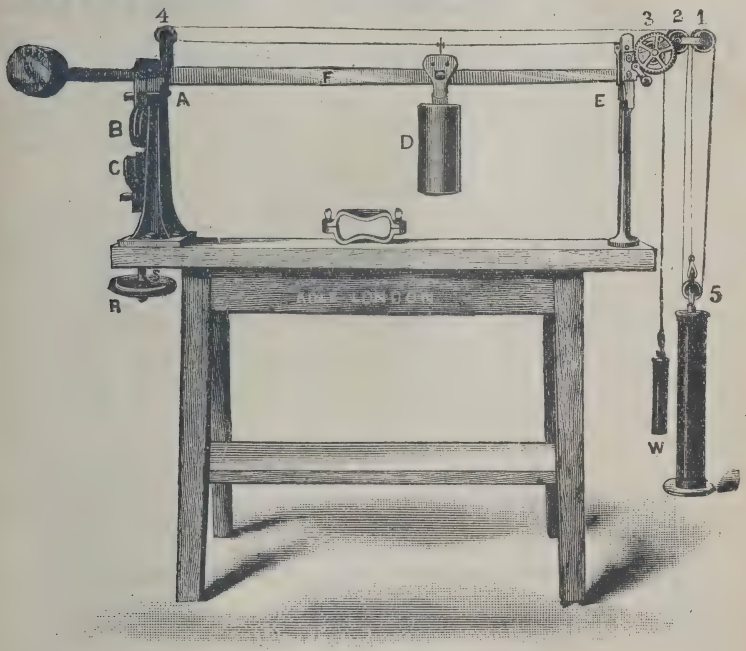
A neat briquette rupture is practically a plane section.

---

* The composition of Portland cements is highly complex. Some further indications of it are given in 'Cement, Concrete, and Bricks,' by A. B. Searle (Constable & Co., Ltd., London).

ADIE'S
Cement Testing Machines.

Used by
The Admiralty, War Office, Home, Indian, Colonial, and Foreign Governments, County and other Councils, Cement Manufacturers, Contractors, &c., &c.



MOULDS, SIEVES, &c.,

Made according to the British Standard Specification for Portland Cement issued by the British Engineering Standards Association.

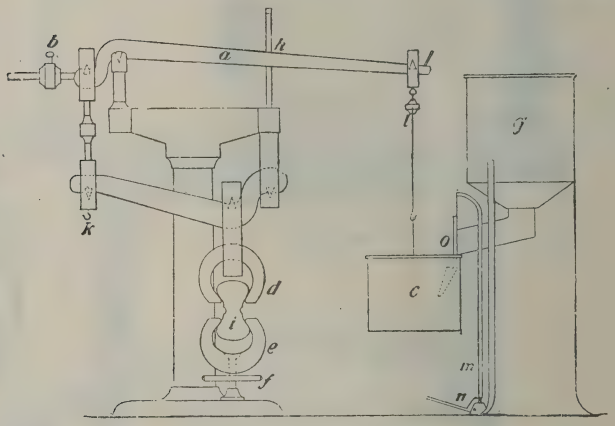
PATRICK ADIE

(Formerly BROADWAY WORKS),

45 HORSEFERRY ROAD, WESTMINSTER, S.W.1.

F 402.

DR. MICHAELIS'S
Compound Lever
(Shot) Machine
FOR TESTING CEMENT.



Clips of above machine made to British Standard Specification.

For particulars of this and other Cement Testing Machines, and every Appliance used in the Testing of Cement, apply:

PATRICK ADIE

(Formerly BROADWAY WORKS),

45 HORSEFERRY ROAD, WESTMINSTER, S.W.1.

F. 403

Tensile Strength (Cement and Sand).—The test is to obtain a measure of the cohesive strength of the particles of the cement to the sand grains, and by shearing of the cement between overlapping grains of the aggregate.

A cement and sand briquette rupture is an irregular surface due to the projection of the sand particles, so that the actual area over which the rupture takes place is much in excess of the cross section.

Time of Setting.—The test is usually made to determine the fitness of the cement for a given piece of work.

Soundness.—The object of this test is to develop these qualities which tend to destroy the strength and durability of a cement, and is therefore the most important quality, for although a sample may pass all tests satisfactorily, if it fail in the soundness test it is worthless as a material for construction.

Failure is revealed by cracking, checking, swelling, or disintegration, or all of these phenomena.

A cement which remains perfectly sound is said to have a constant volume.

When gauging briquettes for testing purposes care should be taken to weigh out the proportions of cement and water accurately. The metric system is the most convenient for this. For the usual briquette of one inch breaking section 200 grammes of cement is a suitable quantity. The percentage of water materially affects the results obtained, higher results at the shorter dates accompanying lower proportions of water. About 18 to 20 per cent. of water (i.e. 36 to 40 cubic centimetres of water to 200 grammes of cement) is the usual practice, but a skilful gauger will often use even less than this and get proportionately higher results. Indeed, the skill of the gauger is unfortunately a most important factor, and no mechanical means have yet been successfully devised to eliminate this.

Cement Testing Machines.

Tension tests of cement briquettes are generally made on special testing machines of various types, single and compound levers being used. The application of the load at a steady and definite rate is in some cases accomplished by running water or fine shot through a controllable opening into a vessel hanging from the end of the lever; in other cases a travelling poise is caused to move along a graduated lever at a steady speed.

A single-lever testing machine made by Mr. Adie, with a regulated travelling poise D, is shown in fig. 697. The briquette is placed in the clips B, C, and the hand-wheel R serves to tighten the screw attached to the lower clip C, so as to raise the lever F into a position of balance between the stops on the standard E. The poise D may be moved along the lever F, by means of the handle at the end of the beam. For loading at a uniform rate the traverse of the poise is accomplished by the pull of a suspended weight W, regulated by a dashpot cylinder below the pulley 5; the rate of traverse is regulated by adjusting a cock in the piston of the dashpot.

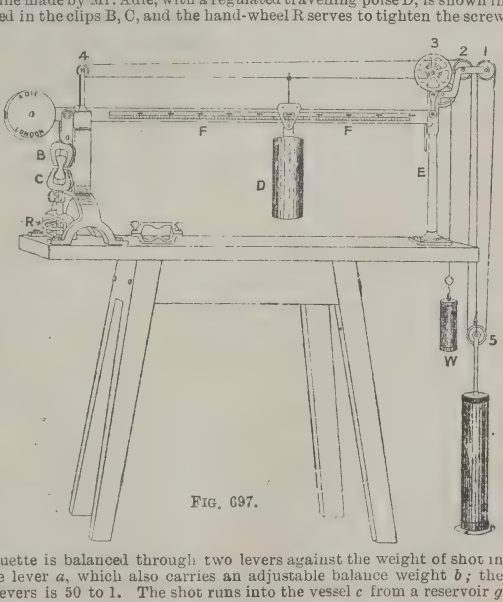


Fig. 697.

Fig. 698 shows the form of another of Mr. Adie's cement-testing machines, designed by Dr. Michaelis. This machine, which is of the compound-lever type and is loaded by shot, may be taken as typical of German practice. The briquette *i* is held between clips *d* and *e*, the lower one of which is attached to a straining screw turned by the hand-wheel *f*. The pull on the briquette is balanced through two levers against the weight of shot in the vessel *c* at the end of the lever *a*, which also carries an adjustable balance weight *b*; the combined leverage of the two levers is 50 to 1. The shot runs into the vessel *c* from a reservoir *g*

through a channel, which is regulated at *o* for any desired rate of loading by a lever *n*. The breaking of the briquette and consequent fall of the lever automatically shuts off the supply of shot, and 50 times the weight of shot in *c* gives the breaking load, this quantity being recorded by a spring balance at *l*.

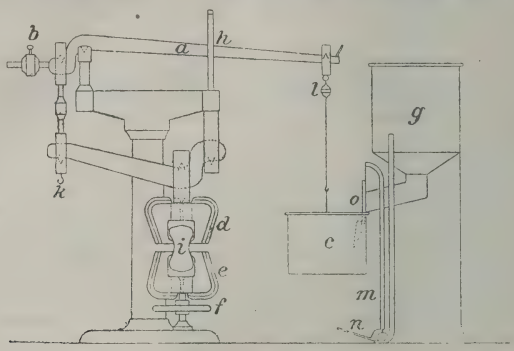


FIG. 698.

BRITISH STANDARD SPECIFICATION FOR PORTLAND CEMENT.*

(No. 12—1920.) (*Abstract.*)

1. The cement shall be manufactured by intimately mixing together calcareous and argillaceous materials, burning them at a clinkering temperature and grinding the resulting clinker, so as to produce a cement capable of complying with the specification.

No addition of any material shall be made after burning other than calcium sulphate, or water, or both, and then only if desired by the vendor and not prohibited in writing by the purchaser.

7. The sample or samples shall be tested for :—(*a*) fineness; (*b*) chemical composition; (*c*) tensile strength (neat cement); (*d*) tensile strength (cement and sand); (*e*) setting time; (*f*) soundness; and before any sample is submitted to tests (*c*), (*d*), and (*f*), it shall be spread out for a depth of 3 ins. for 24 hours in a temperature of from 58 to 64 degrees Fahrenheit.

8. The cement shall comply with the following conditions of fineness—100 grammes (or say 4 ozs.) of cement shall be continuously sifted for a period of 15 minutes on each of the undermentioned sieves and in the order of succession given below, with the following results :—

(1) The residue on a sieve 180 × 180 = 32,400 meshes per sq. in., shall not exceed 14 per cent.

(2) The residue on a sieve 76 × 76 = 5,776 meshes per sq. in., shall not exceed 1 per cent.

The sieves shall be prepared from wire-cloth, and the diameter of the wire for the 32,400 mesh shall be ·0018 in., and for the 5,776 mesh, ·0044 in. The wire-cloth shall be woven (not twilled), the cloth being carefully mounted on the frames without distortion.

9. The cement shall comply with the following conditions as to its chemical composition. The proportion of lime, after deduction of the proportion necessary to combine with the sulphuric anhydride present, to silica and alumina, when calculated (in chemical equivalents) by the formula $\frac{CaO}{SiO_2 + Al_2O_3}$, shall be not greater than 2·85 nor less than 2·0. The percentage of insoluble residue shall not exceed 1·5 per cent.; that of magnesia shall not exceed 3 per cent.; and the total sulphur content calculated as sulphuric anhydride (SO_3) shall not exceed 2·75 per cent. The total loss on ignition shall not exceed 3 per cent.

10. The breaking strength of neat cement shall be ascertained from briquettes of the specified shape. The briquettes shall be prepared in the following manner :—

The cement shall be mixed with such a proportion of water that the mixture shall be plastic when filled into the moulds used for forming the briquettes. The cement, gauged as stated shall be filled into moulds of the form required to produce briquettes of the specified shape each mould resting upon a non-porous plate. In filling the moulds the operator's hands and the

* By permission of the British Engineering Standards Association.

blade of the ordinary gauging trowel shall alone be used. The trowel shall weigh about 7½ ozs. No ramming or hammering in any form will be permitted, nor shall any other instrument or apparatus other than the trowel before described be employed for this operation. The moulds after being filled may be shaken to the extent necessary for expelling the air. Clean appliances shall be used for gauging, and the temperature of the water, and that of the test room at the time the above operations are being performed, shall be from 58 to 64 degrees Fahrenheit. The briquettes shall be kept in a damp atmosphere for 24 hours after gauging, when they shall be removed from the moulds and immediately submerged in clean fresh water and left there until taken out for breaking. The water in which they are submerged shall be renewed every seven days and shall be maintained at a temperature of between 58 and 64 degrees Fahrenheit. After they have been so taken out and until they are broken the briquettes shall not be allowed to become dry.

The briquettes shall be tested for breaking strength at 7 and 28 days respectively after gauging, six briquettes for each period. The breaking strength shall be the average tensile breaking strength of the six briquettes for each period. The briquettes to be tested shall be held in strong metal jaws of the specified shape, and the load shall be steadily and uniformly applied, starting from zero, and increased at the rate of 100 lbs. per sq. in. of section in 12 seconds.

The breaking strength of the briquettes at 7 days after gauging shall be not less than 450 lbs. per sq. in. of section.

The breaking strength of the briquettes at 28 days after gauging shall show an increase on the breaking strength at 7 days, and shall be not less than the number of lbs. per sq. in. of section arrived at from the following formula :—

$$\text{Breaking strength at 7 days} + \frac{40{,}000 \text{ lbs.}}{\text{Breaking strength at 7 days.}}.$$

11. The breaking strength of cement and sand shall be ascertained from briquettes of the specified shape. The briquettes shall be prepared in the following manner :—

A mixture of cement and sand in the proportion of one part by weight of cement to three parts by weight of the standard sand hereafter specified, shall be gauged with sufficient water to wet the whole mass throughout without any excess of water being present. The mixture thus gauged shall be evenly distributed in moulds of the form required to produce briquettes of the specified shape, each mould resting upon a non-porous plate. After filling a mould a small heap of the mixture shall be placed upon that in the mould and patted down with a standard spatula until the mixture is level with the top of the mould. This last operation shall be repeated a second time and the mixture patted down until water appears on the surface ; the flat only of the standard spatula is to be used and no other instrument or apparatus is to be employed for this operation. The mould after being filled may be shaken to the extent necessary for expelling the air. No ramming or hammering in any form will be permitted during the preparation of the briquettes, which shall then be finished off in the moulds by smoothing the surface with the blade of a trowel. Clean appliances shall be employed for gauging, and the temperature of the water and that of the test room at the time the above operations are performed shall be from 58 to 64 degrees Fahrenheit. The briquettes shall be kept in a damp atmosphere for 24 hours after gauging, when they shall be removed from the moulds and immediately submerged in clean fresh water, and left there until taken out for breaking. The water in which they are submerged shall be renewed every seven days, and maintained at a temperature of between 58 and 64 degrees Fahrenheit. After they have been so taken out and until they are broken the briquettes shall not be allowed to become dry.

The briquettes shall be tested for breaking strength at 7 and 28 days respectively after gauging, six briquettes for each period. The breaking strength shall be the average tensile breaking strength of the six briquettes for each period. The briquettes to be tested shall be held in strong metal jaws of the specified shape, and the load steadily and uniformly applied, starting from zero, and increased at the rate of 100 lbs. per sq. in. of section in 12 seconds.

The breaking strength of the briquettes at 7 days after gauging shall be not less than 200 lbs. per sq. in. of section.

The breaking strength of the briquettes at 28 days after gauging shall show an increase on the breaking strength at 7 days and shall be not less than the number of lbs. per sq. in. of section arrived at from the following formula :—

$$\text{Breaking strength at 7 days} + \frac{10{,}000 \text{ lbs.}}{\text{Breaking strength at 7 days.}}.$$

The standard sand shall be obtained from Leighton Buzzard, be thoroughly washed and dried and shall pass through a sieve of 20 × 20 meshes per sq. in., and be retained on a sieve of 30 × 30 meshes per sq. in. The sieves shall be prepared from wire-cloth, the wires being ·0164 in. and ·0108 in. in diameter respectively. The wire-cloth shall be woven (not twilled), the cloth being carefully mounted on the frames without distortion.

12. Unless a specially quick setting cement is specified or required, it shall have an initial setting time of not less than 20 minutes and a final setting time of not more than 10 hours.

If a specially quick setting cement is specified or required, it shall have an initial setting time of not less than 2 minutes, and a final setting time of not more than 30 minutes.

The initial and final setting times of cement gauged as above shall be determined by means of the Vicat needle apparatus, in the manner specified.

13. The cement shall be tested for soundness by the Le Chatelier method, in the manner specified.

PLASTERS.

Plasters are pasty materials applied to walls, ceilings, etc., to give a hard, smooth finish. They resemble lime mortars in many respects, but serve a different purpose. Common plaster is made of lime and sand, with or without ¼ lb. of hair to each 1 cu. ft. of plaster. It is made harder and has smoother finish if 20 per cent. of plaster of Paris is added.

For *floors*, a hard-burned plaster of Paris is used, or a mixture of ordinary plaster with a slight excess of lime is laid, and then treated with zinc sulphate (white), iron sulphate (red), boiled oil (mahogany), or copal varnish.

Stucco for external use consists of 1 part of hydraulic lime to 3 parts of sand, but for more durable work a cement mortar (p. 391) is often used.

Rough cast is sometimes made of the same materials as stucco, or of cement mortar (p. 391).

Plaster of Paris is made by calcining gypsum and grinding the product. The resulting powder, when mixed with water, forms a smooth paste which rapidly sets to a white, solid mass.

Keene's, Martin's, and Parian cements are hard-setting forms of plaster of Paris. Keene's cement is made by soaking calcined gypsum in a solution of alum or borax and cream of tartar. For Martin's cement, a solution of potassium carbonate is used, and Parian cement is an intimate mixture of gypsum and borax which has been calcined and then ground to powder.

Artificial Stone.*

ARTIFICIAL BUILDING STONE, No. 1.—Mix 100 parts of hydraulic lime which has fallen to a powder with water to form a paste. To this add 250 parts of gravel and 50 of coal ashes or lixiviated wood ashes. The mass is then thoroughly mixed, and a sufficient quantity of water added to make the volume of the mass equal to 500 parts. It is then poured into moulds made of pine-boards, where it is allowed to remain until set.

No. 2.—125 parts of hydraulic lime which has fallen to a powder are mixed with a sufficient quantity of water to form a paste. To this are added 250 parts of ground oyster shells and 150 parts of ground peat ashes, and a sufficient quantity of water to make the bulk of the mass equal to 500 parts. It is then poured into moulds as in No. 1, and dried.

ARTIFICIAL STONE FROM QUARTZ SAND AND PLUMBIC OXIDE.—Ground quartz sand is mixed with 2 to 10 per cent. of finely-ground plumbic oxide. The harder the stones are to be, the more plumbic oxide must be used. The mixture is moistened with water-glass, again thoroughly mixed, and then pressed firmly into moulds. The resulting stone is dried and then burned.

VICTORIA STONE.—The refuse of granite quarries is broken up into pieces of suitable size, and 4 parts of the fragments thus obtained are mixed with 1 part of Portland cement, and sufficient water added to bring the whole to the consistency of dough. The mass is run into moulds, in which it is allowed to remain for several days, or until it has set solid. The blocks are then immersed in a solution of silicate of soda.

RANSOME'S ARTIFICIAL STONE.—Clean and dry sand and other suitable siliceous and earthy ingredients are thoroughly incorporated in a mixing mill with silicate of soda. The resulting pasty mass is then pressed into moulds of any required pattern or size, and when set sufficiently immersed in a solution of chloride of calcium. In the case of large pieces the saturation with chloride of calcium is facilitated by the use of an air-pump. The resulting reaction is the formation, by double decomposition of the ingredients, of an insoluble calcium silicate out of sodium chloride. The first-named forms a solid and indurate binding material for the stone, and the sodium chloride is removed by a subsequent thorough washing with water. This last operation is important, since, if the sodium chloride is not completely removed from the stone, it will make its appearance subsequently in the form of a white efflorescence on the surface.

TO IMITATE VARIEGATED MARBLE.—Mix hydraulic lime and ground marble and incorporate with the mixture a solution of alum and suitable colouring substances. Differently-coloured masses are then mixed together and cut into slabs.

ARTIFICIAL MARBLE.—The following mixtures have been recommended for making artificial marble. Grind and thoroughly mix comminuted stone, 280 parts; limestone or chalk, 140 parts; burned calamine, 5 parts; calcined felspar, 3 parts; fluorspar, 2 parts; calcium phosphate, 2 parts; water-glass, 40 parts.

On the addition of the water-glass the ingredients are quickly mixed, and thereupon pressed into moulds. The finished pieces are dried at a temperature gradually rising to 125° F.

* The manufacture of artificial stones, *lime-sand* bricks and blocks, is dealt with at length in 'Bricks and Artificial Stones of Non-Plastic Materials,' by A.B. Searle (J. & A. Churchill, London).

Asphalt Flooring.

8 lbs. of asphalt composition (1 ton asphalt, 20 lbs. mineral tar) will cover 1 superficial foot ½ in. thick. For goods warehouses thickness should be 1 in. For damp-course wall, ¾ in.

To Remedy Dampness in Walls.

1. If house shows damp on all sides just where walls rise from ground, cut out a course of bricks foot by foot, insert an asphalt damp-course, and re-brick up.

2. If wall becomes saturated by a stopped-up drain-pipe, remove plastering and re-point wall outside after wall has become dry. If it is inconvenient to renew plaster, the latter (although wet) may be varnished over with a solution of shellac in naphtha (4 ozs. shellac, 1 quart naphtha; this almost immediately hardens, and paper may be pasted over it.

3. A good coating of hot coal-tar laid on the exterior of a brick wall will prevent the entrance of damp, but should only be applied where it cannot be seen.

4. Another plan for walls above-ground is to mix 1 part of Portland cement with 2 parts of fine sand, and add water enough to bring the ingredients to the consistency of thick cream. Cover the brickwork with two coats of the mixture, and when it is quite dry finish with a coat of paint.

5. Re-plaster the inside of the wall with sand and cement impregnated with one of the secret waterproofing agents such as ' Bareau ' (see p. 400).

SECTION VIII

PART III

LATHING—PLASTERING—SLATING—GLAZING—PAINTING —PAPER-HANGING—PLUMBING—MOULDINGS.

Lathing and Plastering.

PLASTERING.

Coarse stuff is mortar composed of 1 part lime (carefully-slaked fat or pure lime is generally used) and 1 or 2 of sharp fresh-water sand, with 1 lb. hair to 3 cubic ft. of mortar.

Fine stuff is made of pure lime slaked with a little water, after which water is added to bring it to the consistency of cream; it is then left to settle, the superfluous water poured off, and the water evaporated until it is of proper thickness. In ceilings a small portion of white hair is mixed with it.

Bricklayers' and plasterers' putty is fine stuff brought to the proper consistency.

Gauged stuff is $\frac{3}{4}$ fine stuff mixed with $\frac{1}{4}$ plaster of Paris.

Common stucco is 1 lime to 3 or four clean-washed sand.

Bastard stucco is $\frac{2}{3}$ fine stuff and $\frac{1}{3}$ clean sand, with a little hair.

LATHING

is the first operation for ceilings and partitions; $\frac{3}{8}$-inch intervals are left between the laths, to key the plaster. Stronger for ceilings than for partitions.

One bundle of laths contains (nominally) 500 feet. Single fir laths are about $\frac{3}{16}$ in. thick; lath-and-a-half laths are full $\frac{1}{4}$ in. thick; double laths are about $\frac{3}{8}$ thick. They are about $1\frac{1}{2}$ in. broad. 1 bundle of 3-foot laths and 670 nails, or 1 bundle of 4-foot laths and 625 nails, will cover about 5 superficial yards.

Lath-and-Plaster, or *One-Coat Work*.—A coat of coarse stuff, $\frac{1}{4}$ inch to $\frac{3}{8}$ inch thick, laid on the laths and smoothed off with the trowel.

Lath, Plaster, and Set, or *Two-coat Work*.—The first, or 'pricking-up' coat of coarse stuff is scored with a birch broom or undercut with a lath, and a thin finishing coat of fine stuff or gauged stuff added.

Lath, Plaster, Float, and Set, or *Three-coat Work*.—When the pricking-up coat is dry, the surface is scored, and divided into 8-foot squares by *screeds* of coarse stuff, 8 inches wide, carefully levelled. These are then filled in with coarse stuff, floated carefully level. The finishing coat is then put on as before.

Lath Nails are either wrought, cut, or cast; the latter, being cheapest, are generally used. 1 inch, $\frac{7}{8}$ inch, or $\frac{3}{4}$ inch long, according as double, one-and-a-half, or single laths are used. $\frac{5}{8}$-inch cut nails run about 380 to the pound.

Materials.	1 in. Thick.	$\frac{3}{4}$ in. Thick.	$\frac{1}{2}$ in. Thick.
1 bushel of cement, or 1·28 cubic feet, will cover	$1\frac{1}{7}$ sq. yds.	$1\frac{1}{2}$ sq. yds.	$2\frac{1}{4}$ sq. yds.
1 cement and 1 sand "	$2\frac{1}{4}$ "	3 "	$4\frac{1}{2}$ "
1 cement and 2 sand "	$3\frac{1}{3}$ "	$4\frac{1}{2}$ "	$6\frac{3}{4}$ "

1 cubic yard of lime, 2 yards of sand, and 3 bushels of hair will cover 75 yards superficial, render and set, on brick, or 70 yards on lath.

Slating.

The following terms are used as in slaters' work:—

Head: the upper or edge top of slate *Back*: the upper or exposed surface of slate when laid. *Red*: the lower or under surface of slate. *Tail*: the lower or bottom edge of slate. *Margin*: the part of each course of slates exposed to view (*a–b*, fig. 699). *Gauge*: the distance battens are apart from centre to centre; required to determine the position of battens to receive the nails by which

the slates are secured. *Bond.*—When a joint of two adjacent slates is immediately in the centre of the slate, the tail end of which rests upon them, the slates are said to bond. *Lap*: the distance the tail of one slate overlaps the head of second course below, when slates are nailed near the centre, or the distance the tail of slate overlaps the nail-hole of second course below when slates are nailed near the head. The lap, in practice, ranges from 2½ inches to 4 inches, and averages as 3 inches. *Holeing*: the piercing of slates to receive nails. *Sorting.*—When roof is to be covered by slates of different lengths, they are regulated to proper dimensions, so that the largest slates may be nailed near the eaves, and the smallest at the ridge. *Eaves*: the lower part of slating hanging over a wall.

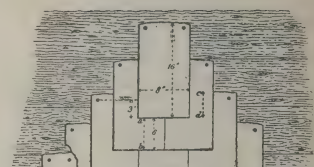


FIG. 699.

SIZES OF SLATES.

The sizes of slates in common use are as follows:—'Duchess' slates, 24 inches by 12 inches, for moderate flat roofs of ¼ pitch; 'Countess' slates, 20 inches by 10 inches, for roofs of ¼ pitch; and 'Ladies,' 16 inches by 8 inches, for roofs of ¼ pitch, the rule being, the steeper the pitch, the smaller the slate, and the more exposed the building, the greater the pitch of the roof.

Slates are laid on *boards* (fig. 699) or *battens* (fig. 700), the latter being the cheapest. Boards, ⅜ inch thick for Countess slates, and rafters not more than 18 inches in the clear, 1 inch or thicker, otherwise. Battens, 2 inches by ⅜ inch for Countess, with rafters 12 inches interval: 3 inches by 1 inch for Duchess. Slates are often *holed* 1 inch or 1½ inch from the head, as in fig. 699, but are better centre-holed, i.e. just clear of head of slate below, as in fig. 700.

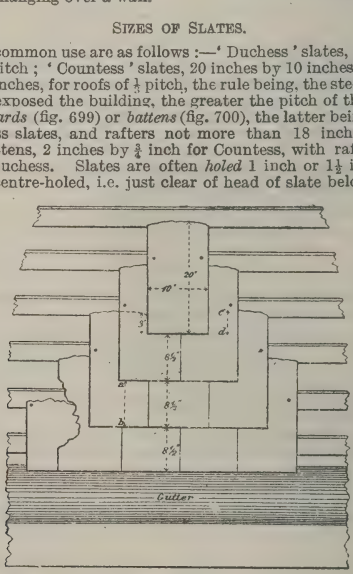


FIG. 700.

If a *good slate* is stood half its depth in water for several hours the moisture should not rise to the top.

SLATING NAILS.

Composition nails are recommended for all good work; they are stiffer than copper or zinc, present a brassy appearance, and are cheaper than copper nails. If iron nails are used, they should be galvanised, or boiled in linseed oil. Two to each slate, 1⅝ inch long for small slates, 1½ inch long for Countess, and 1¾ for Duchess slates.

Zinc and Copper Clips.—When a slate gets broken that is nailed to boarding and has to be repaired, narrow clips, about ½ inch wide, are pushed between the slates to catch the head of slate below. The new slate is then inserted, and the end of clip turned as a hook over the tail of the slate. When slates are nailed to battens, and the interior is accessible, they may be repaired by means of a piece of copper wire which is pointed at one end and driven into the batten or boarding at the head of under slate, passed between the side-joints of slates immediately above it, and lapped over the tail of the next slate but one above it. A man under the battens will secure a piece of copper wire to the battens, and then push the wire between the slates for the man above to clip over the tail of the new slate.

SIZE AND WEIGHT OF SLATES.

A thousand slates means 1,200. A square is 100 super feet.

Name.	Size.	Gauge for 3-in. Lap Nailed in Centre.	No. of Squares covered by 1,000 of 1,200.	Weight per 1,000 of 1,200.	Weight* per Square.	No. to Cover One Square.	Nails required per Square.	
							Iron.	Copper.
	Ins.	Ins.		Cwts.	Cwts.		No.	Lbs.
Smalls	12×8	4½	2·8	17½	6¼	430	860	5
Doubles	13× 6	5	2·5	18	6	480	960	6
Ladies	14×12	5½	5	31	6½	240	480	3½
„	16× 8	6½	4·5	25	5·5	300	600	3¾
Viscountesses	18×10	7½	6	36	6	200	400	2¾
Countesses	20×10	8½	7	40	5·7	171	342	4
Marchionesses	22×12	9½	9·4	55	6	130	260	3¼
Duchesses	24×12	10½	10	63	6	125	250	3
Imperials	33×24	13½	25	..	..	48	96	3
Rags	36×24	16½	30	..	..	40	80	3½
Queens	36×24	16¼	30	..	..	40	80	2

* The weights are for first quality Penrhyn or Bangor: second quality weigh about one-third more. As the sizes of slates of the same name sometimes differ slightly, the size required should be given as well as the name, when of importance. This Table allows about $\frac{1}{10}$th for waste.

'ÆGIS' ASBESTOS-CEMENT ROOFING SLATES.

These slates (*Turner Brothers Asbestos Co. Ltd., Rochdale*) are made in 'Honeycomb' and 'Diamond' patterns, figs. 700A and 700B. In these figs. E and UE indicate the eaves and under-eaves portions respectively.

The slates can readily be cut to fit hips, valleys, verges, round chimneys, and roof lights.

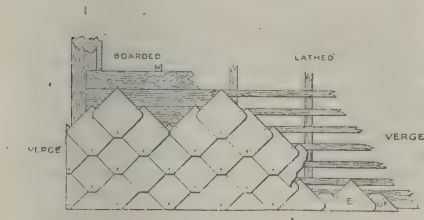


FIG. 700A.

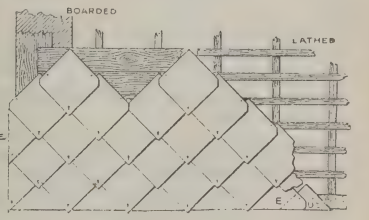


FIG. 700B.

Both the 'Honeycomb' and the 'Diamond' pattern slates are made to the sizes 11¾ ins. by 11¾ ins., 15¾ ins. by 15¾ ins., and may be cut and holed for laying with a 2¾ ins. or 3¼ ins. lap. The lap to be given is determined by the pitch of roof, position of building, and the prevailing climatic conditions.

For 'Fibrent' Asbestos Cement Slates see pp. 335, 336.

UNDERLINING.

Felt laid upon boarding under slates effectually keeps out the wet, and is a non-conductor of heat and sound; it should be battened over to preserve it.

Willesden Paper (*The Willesden Paper & Canvas Works, Ltd.*) is an excellent material for underlining. It is a good non-conductor, does not perish when shut up beneath slates or tiles, is waterproof, and will not allow rain or snow to penetrate, has no smell, even under the greatest heat, and lies very close on the roof.

Tiling.

For *plain tiles*, if each tile shows on the face 4 inches, 600 will be required to a square, *i.e.* 10 feet each way, or 100 square feet. In flat roofing, 210 tiles will be required for a square. 1 square weighs about 15 cwt. 100 plain tile laths 5 feet long = 1 bundle.

For *pantiles*, 180 to a 10-inch gauge, 164 to an 11-inch gauge, and 150 to a 12-inch gauge. The lap of the tile over the one below it will be just the difference between its length and the length of the gauge. 1 square weighs about 8 cwt. 12 pantile laths 10 feet long = 1 bundle. Fir tiling laths are 1½ inch by 1 inch; and oak tiling laths, 1¼ inch by ½ in. 1 square of tiling requires 1 bundle of laths, 150 nails, 1 peck of tile-pins, and 3 hods of mortar.

See also pages 335 and 424.

Glass and Glazing.

Sheet glass is that which is in ordinary use for windows, &c., and the usual glazing qualities are known as *best*, *seconds*, and *thirds*; a commoner quality, known as *fourths* or *coarse*, is also made, but is not much used.

The weights per foot super. are 15 oz., 21 oz., 26 oz., 36 oz., and 42 oz., the latter being nearly ¼ in. thick. As a rule, every $\frac{1}{16}$ in. may be taken as 13 oz. to the foot super.

In addition to the usual glazing qualities there are two others, called *picture qualities*, *A* and *B*, made in the 15 oz. and 21 oz., and one other, *C*, in the 26 oz. and 32 oz. thicknesses.

Sheet glass is sold by the foot super. of the required quality and weight, in *crates* of stock sizes for cutting up, or *squares* cut to order.

The ordinary stock sheets do not exceed in area 22 ft. super., in length 85 in., or in breadth 49 in., nor are they less than 11 ft. in area, 45 in. in length, or 34 in. in breadth.

The largest sizes that can be made in the various substances of sheet glass are as follows, *but the extreme limits of length and width cannot be combined in the same sheet* :—

	Extreme length.	Extreme width.	Extreme area.
15 oz.	60 in.	40 in.	15 ft.
21 „	90 „	50 „	26 „
26 „	90 „	50 „	25 „
32 „	85 „	48 „	21 „
36 „	70 „	44 „	17 „
42 „	70 „	44 „	15 „

The extreme area, taken in connection with the extreme length or width required in any particular case, will indicate approximately the corresponding limit of width or length.

Sheet glass obscured or frosted so as to appear like ground glass is made from any description of the third quality glass.

Sheet glass can be polished on face, bent to any required curve, or ground on the edges, as may be required.

Fluted sheet is glass rolled to form flutes or corrugations on both sides; which, while it secures privacy without obstructing the light, makes it much stronger than ordinary ground or obscured glass. It is made from 15 oz. to 32 oz. in weight, and in squares 60 in. in length and 38 in. in breadth. It can also be obscured if required.

White dappled is sheet glass about 21 oz. to the foot, the surfaces being mottled or undulatory, as its name implies. *White muffled* sheet is somewhat similar.

Patent plate is merely a superior kind of sheet glass, and is now not much used. It can be distinguished from British polished plate, by a more wavy appearance of the surface, as well as by the air bubbles, which are *oval* in patent plate and *circular* in British plate. It is made in four thicknesses—viz. $\frac{1}{10}$, $\frac{1}{12}$, $\frac{1}{16}$, $\frac{1}{20}$, and $\frac{1}{8}$ in.—and three qualities—bests, seconds, thirds—in each. $\frac{1}{10}$ in. and $\frac{1}{12}$ in. are generally used for picture purposes, and $\frac{1}{20}$ in. and $\frac{1}{8}$ in. for coach plates. It can be supplied *smoothed* or *finely ground*, in sheets 50 in. in length or 36 in. in width.

Polished or *British polished plate* is the best article made, and is kept in stock sheets up to 100 ft. super., or 160 in. long or 104 in. wide, but can be made in larger sheets if specially ordered. The usual thickness is ¼ in., but it can be obtained ⅛ in. thick, varying by $\frac{1}{16}$ in. up to 1 in. in thickness. It is manufactured in three qualities, known as *ordinary* and *best glazing*, for windows, etc., and *silvering quality*, for mirrors, etc. It can be bent to any desired curve, and the edges can be ground or polished. If scratched the surface can be repolished or resilvered at any glass works.

Rough cast plate is the cheapest quality of plate glass, and is made in plates even exceeding 100 ft. super., but the stock sizes run up to about 60 ft. superficial. Its thickness ranges from ⅛ in. to 1 in. It can be bent to any curve, or ground on one or both sides if required. From its

B. T. BATSFORD LTD.

SCIENTIFIC & TECHNICAL PUBLISHERS & BOOKSELLERS

94 HIGH HOLBORN · LONDON

SIDE by side with Messrs. Batsford's important Publication Department is an extensive Retail Department, where not only their own but all other **standard publications for Engineers, Surveyors, and Architects,** are exhibited and sold; in fact, at no other establishment can be found so large and representative a collection of New and Second-hand Books relating to APPLIED SCIENCE, ENGINEERING, ARCHITECTURE, BUILDING CONSTRUCTION, SANITATION, SURVEYING, &c.

Special attention is given to all inquiries. Selections of books will be sent ON APPROVAL to regular customers, resident in the United Kingdom, if desired.

CLASSIFIED CATALOGUE FORWARDED POST FREE ON APPLICATION

B. T. BATSFORD LTD.

The Library of Arts and Sciences,

94 HIGH HOLBORN
LONDON, W.C. 1

TELEPHONE NO. 7693 CENTRAL

PAINTS

For preserving IRON, STEEL and WOOD WORK, and for the finishing of all High-class Machinery.

PAINTS

Made to suit the requirements of ALL BUYERS.

Aquatinto Distemper

For Workshops, Factory Walls, and all Domestic Decorations.

For Samples and Full Particulars please apply:

PEGG & ELLAM JONES, Ld.,

Paint, Colour, Varnish, and Enamel Works,

DERBY, England.

London Office: 96 Newgate Street, E.C. I.

Telegrams: PEGG, DERBY.
A.B.C. Code, 5th Edition, used.

Telephone: 158 DERBY

F. 413

strength it is very useful for risers to steps, glazing pavement lights, and similar rough work where light has to be transmitted.

Plain and *fluted rolled rough plate* is principally used for railway roofs, factories, workshops, etc., and other purposes where the object is to intercept the vision but not the light. The *plain* is rolled with fine lines on the surface; the *fluted* is either of the small pattern, with about 11 flutes to the inch, or the large pattern, with about 4 flutes to the inch. It is made from $\frac{1}{8}$ in. to $\frac{3}{8}$ in. thick, in stock sizes not exceeding 25 ft. super., or 130 in. in length, or 46 in. in breadth. It can be bent to curves, or obscured on the rough side.

Diamond and *quarry rolled rough plate* is principally used for churches, chapels, schools, lecture halls, etc. The diamond rough plate has a bright and brilliant appearance. The pattern is of a lozenge shape, and in relief upon the body of the glass. The quarry rolled is in imitation of, and is used as a substitute for, leaded quarries, and is made in either *large* or *small* patterns. It is made from $\frac{1}{8}$ in. to $\frac{1}{4}$ in. thick, in sheets from 20 in. to 34 in. wide and up to 100 in. long.

Chequered rolled plate is similar to *diamond*, but the pattern is square. It is principally used for screens, door panels, etc.

Rolled plate corrugated one side is about $\frac{1}{4}$ in. thick, and is made in sheets up to about 110 in. long and about 36 in. wide. It is used for glazing in any position where extra light is required and opaqueness a necessity, and is suitable, when silvered, for reflectors.

Figured rolled glass is made in a variety of patterns known by distinctive names, such as 'Muranese,' 'shell,' 'Arabesque,' etc., and is made either white or in various tints.

Patent wire rolled glass consists of a sheet of glass, about $\frac{1}{4}$ in. thick, having wire netting embedded in its centre. It is extremely useful for many purposes.

Rolled cathedral glass weighs about 21 oz. to 26 oz. to the foot super., but can be made thicker if required. It is made either in white, pot metal colours, or cathedral tints. This last term is applied to light tints of no positive colours, which are suitable for glazing the windows of churches throughout.

Coloured and *stained glass* is made from 15 oz. to 32 oz. in weight, and in sheets not above 48 in. long or 34 in. wide, in a variety of colours, which are known as *flashed*, in which the body is of ordinary sheet glass thinly covered on one surface only with coloured glass, or *pot metals* in which the glass is coloured throughout. This glass can also be *sanded* or *obscured*.

CONSTANTS OF LABOUR FOR GLAZIER.

	Hours of a glazier.
Crown glass stopped in new sashes . . . . . per ft. super.	·20
" " old sashes . . . . . "	·60
Sheet glass stopped in large squares in new sashes . . . "	·15
" " " old sashes . . . "	·40
Hacking out glass, including painting putty . . . . "	·30
Cleaning windows, both sides . . . . . "	·04

(*J. T. Rea.*)

PUTTY, PAINT, AND SOLDER.

The glazier's, like the painter's, putty is merely composed of whiting and linseed oil well beaten up.

In order to prevent the constant expansion and contraction of large panes of glass, especially in tap-lights, from loosening of the putty, tallow may be mixed with the latter, forming what is called *thermoplastic putty*, which, by retaining its pliability, gives and takes with the glass.

The priming and paint used by the glazier are the same as used by the painter.

The solder used for lead glazing is the plumber's *fine solder*, or 1 lead to 1 tin.

Painting.

All surfaces to be painted should be smooth, clean, and well dusted. The first operation in painting resinous woods, such as fir, is *killing the knots*, or treating them so as to prevent the resin or turpentine from exuding and ruining the paint. This may be done by painting the knots over with hot lime, and, when dry, ironing them with a hot iron, and then painting them smooth: or leaving the lime on for about 24 hours, scraping it off, and then painting with red and white lead and linseed oil, and, when dry, pumice-stoning the knots smooth. But these processes take time, to obviate which a liquid called *patent knotting*, chiefly shellac and naphtha, is much used. It forms a skin over the knots, and by drying in about 5 minutes allows of the painting going on at once. *Red-lead knotting*—made by grinding red lead in water mixed with strong glue size, and used warm—is, however, considered preferable to patent knotting, and dries in about 10 minutes.

The first coat of paint is called the *priming coat*. This in ordinary lead painting is composed of red lead, or red and a little white lead, mixed with raw linseed oil, a little litharge, and burnt copperas ground very fine in turpentine as a drier, the object being to fill the pores of the wood with oil before applying the colouring coats, which would otherwise be sucked up and wasted by the wood.

After the priming comes the stopping, or filling up all nail-holes, etc., with putty, which if applied before the priming, would become loose from the wood drawing the oil out of the putty, and allowing it to shrink.

After all defects have been made good, and the work has been rubbed smooth, the colouring coats are applied, the second coat, or first after priming, being diluted with about one-third turps, the third coat having the oil and turps in equal proportions, and the fourth coat one-third oil to two-thirds turps. If not to be painted white, the second coat should approximate to the required colour.

When, as in drawing-room work, it is desirable to avoid the glossy surface of oil paint, a fifth coat, for which all turps and no oil is used, is added, and is called a *flatting* coat, and should be laid on before the last coat has become hard. It will not admit of washing, as oil paint will, and therefore is not suitable for outdoor work.

Varnish adds greatly to both the appearance and durability of paint. A priming coat followed by a dark coat, such as a chocolate or purple-brown, and finished off with a coat of common varnish, is cheaper than, and as durable as, 4 coats of colour; it looks better, is more rapidly executed, and stands washing well. A single coat of gum-lac or good resin, dissolved in linseed oil to about the consistency of cream, and coloured as may be required, also forms a good and durable covering.

Walls may also be coloured and varnished thus: First, apply at boiling heat 2 coats of whiting mixed with strong glue size, then fill up defects with mastic in water, rule smooth with pumice stone, and cover with 2 coats of coloured varnish, the first coat mixed with one-fourth of the required colour, and the last coat with only half as much colour. The colour should be ground very fine, and the varnish should be white spirit varnish.

Plaster, being very absorbent, is often primed with glue size and then covered with 4 coats of colour (if the ordinary lead paints are used), and a flatting coat can be added if desired; but the best plan is to apply a priming coat of boiled oil quite warm, and when dry and hard add a thin coat of weak size tinged with red lead, in order to stop all absorption and give the work a uniform appearance, and finish off with 2 coats of oil paint, and a flatting coat if required; or 2 coats of coloured varnish can be applied as described above.

In painting on plaster, in order to guard against damp injuring the paint, it is safer to distemper the walls for the first two years, and then wash it off and paint, taking care that the walls are perfectly dry. If the distemper is not greasy or dirty, it is better to merely brush it well down with a dry brush, and paint over it without any washing.

With the ordinary paints, new wood or ironwork requires 4 coats, including the priming coat, but exclusive of any flatting coat, and old paint should have 2 coats for inside and 3 for outside work.

Painting Fresh Cemented Surfaces.

The McNicholl process seems to be the best treatment yet devised for coating a fresh cemented surface to enable it to be painted. It consists of zinc sulphate, 5 lbs. to the gallon of soft water. The zinc sulphate forms a chemical compound that prevents the alkali from attacking the paint coating, afterwards applied. This process is also good for interior walls, over Keene's or Portland cement. When it is dry apply a coat of either pure raw linseed oil or an oil paint, thinned out with benzene. (*Contract Record.*)

Value of Paints.

Details.	White lead.	Zinc white.	Red lead.	Red oxide.
Covering capacity in sq. yds. per cwt	806	1.411	594	1,083
Price per cwt. in shillings	32	36	32	28
Cost, in shillings, per 100 sq. ft.	·44	·28	·60	·28
Times painted in 20 years	5	5	3	7
Cost, in shillings, per 100 sq. ft. for 20 years	2·20	1·40	1·80	1·96
Relative economic value on 20 years' basis, the highest value being represented by 100	64	100	77	71

(*Cruickshank Smith.*)

Valuing and Estimating Painters' Work.

The rule in measuring painters' work is to take wherever the brush goes, by the *yard superficial* in the case of large surfaces, such as walls, doors, etc.; by the *foot run* in the case of narrow surfaces *cut-in* on both edges, as in skirtings, where the paint has to be run to a line both at top and bottom, to avoid painting the floor or wall; and by the *number* in the case of separate pieces, such as chimneypieces, newels, balusters, brackets, gratings, etc. In iron railings and other open work each side is measured by the yard superficial, as if it were a plain surface, and if ornamental each side is doubled, or a fair extra allowance made according to the nature of the work.

The outsides of ordinary-size frames, being *cut* to the wall, the insides, as well as when there are no linings, as in stores, riding-schools, etc., are taken by the number. In cases of sash-frames with mullions or transoms each division is taken as one side of a frame.

It's Ready to use!



Guaranteed Pure

MINERVA PAINT

(RED LABEL)

6 WHITES, PINK PRIMING & 120 SHADES

Sold in 1 *Gall.*, ½ *Gall.*, *Quart and Pint Cans*
Also in 5 *Gall. Drums and* 40 *Gall. Barrels*

For Paint work of any kind it pays to use or specify 'MINERVA.' It is beautifully ground, finely mixed, and covers a larger area with a better finish than any other paint of equal weight, whether hand or machine made.

(BLUE LABEL)

THREE KINDS ONLY: (1) UNDERCOATING (2) FLAT WHITE FINISHING for inside use only (3) GLOSS FINISHING for inside or outside use. Made of a natural pigment suspended in a special medium, this paint flows out very smooth, spreads just nicely under the brush and finishes beautifully

For Color Chart and full particulars please apply to Sole Manufacturers,

PINCHIN, JOHNSON & Co., Ltd

(Associated with WILKINSON, HEYWOOD & CLARK, LTD.),
Varnish, Color, Paint, and Enamel Manufacturers,
General Buildings, Aldwych, London, W.C. 2

Also please see pages 415 964 965, 1966, 1967, 2353, 2354, for particulars of other Special Paints

DEYDOL
DISTEMPER
WHITE AND 60 COLORS.

For Workshop or Factory Walls and Domestic Decoration, there are many advantages in 'DEYDOL.'

SANITARY
Health of Workers

The DEYDOL wall surface is in the highest degree SANITARY—on this head alone it has secured the certificate of the Institute of Hygiene—the first distemper to do so.

* * * *

WASHABLE
Constant Cleanliness

DEYDOL'D Walls are WASHABLE. A light sponge down with clean water instantly removes dirt marks, soilings, etc.

* * * *

DURABLE
Less frequent Renewals

Next to Oil Paint, DEYDOL is the most durable wall covering in existence—a point of particular interest in commercial usage.

* * * *

Shade Book and Detailed Information can be obtained post free from the Sole Manufacturers:

PINCHIN, JOHNSON & Co., Ltd.

(Associated with WILKINSON, HEYWOOD & CLARK, LTD.),
Varnish, Color, Paint, and Enamel Manufacturers,
General Buildings, Aldwych, London, W.C. 2

Also please see pages 415 964, 965, 1966, 1967, 2353, 2354 for particulars of other Special Paints.

The sashes themselves are paid for by the *dozen squares*, the price being for one side only, the number being doubled if painted at the same cost on both sides.

Letters and figures are paid for by the *inch in height* as plain or ornamental.

Common colours include *lampblack*, *red* and *white lead*, *Venetian red*, *ambers*, and all other *common ochres*, such as *greys*, *buffs*, *stones*, *etc.* *Superior* or *ornamental colours* include *bright yellows*, *warm tints*, *blues*, *mineral greens*, *etc.* Some colours, such as *verditer*, *pea-greens*, *rich reds*, *pinks*, and *bright blues*, are charged at a higher rate still, as *delicate tints*.

The following are the yards super which a fixed amount of material will cover in each coat :—

First coat, or priming	10 lbs. white lead 1 oz. red lead	2 ozs. litharge* 4 pints linseed oil	63 superficial yards.
Second coat	10 lbs. white lead 2 ozs. litharge	2½ pints linseed oil* 1½ pint spirits of turpentine	100 superficial yards.
Third and fourth coats	10 lbs. white lead 2 ozs. litharge*	2 pints linseed oil 2 pints spirits of turpentine	113 superficial yards.

For outside work, when exposed to the sun, more turps should be used to prevent the paint from blistering, and only *boiled* linseed oil should be used. For inside work, raw linseed oil may be used, but the less oil the less gloss. For the flatting coat, the colour being ground in oil, only turps is added.

For coloured paints the last two coats have the colour added to the composition in the proportion of 1 to 2 lbs. for every 10 yards of surface to be painted; and the quantity of white lead is reduced in proportion.

One pint of varnish will cover about 16 yards : 1 coat.

See also WORKSHOP RECIPES.

SPRAY PAINTING.

Tests carried out on paint-spraying machines have shown that spraying requires approximately 10 per cent. more paint than brushing when the surface being treated is an iron roof, while brushing requires approximately 200 per cent. more labour than spraying. On exterior brick walls, spraying requires 7 per cent. more paint than brushing, while brushing requires 109 per cent. more labour than spraying. On interior ceilings and walls of plaster, spraying requires 40 per cent. more paint than brushing, but gives a better hiding in one coat. On similar work, brushing requires 160 per cent. more labour than spraying, and gives a poorer hiding in one coat. Although it has not been possible as yet to arrive at a definite conclusion confirming the relative durability of spraying as compared with hand-painting, it is claimed that the investigations so far made tend to support the belief that the spraying work will last longer.

Distemper.

DEYDOL DISTEMPER.

Deydol Distemper (*Pinchin, Johnson & Co. Ltd.*) is a sanitary wall covering which is washable, weather-proof, and fire-resisting. It is in the form of paste which is thinned with clean cold water or DEYDOL PETRIFYING LIQUID, to the consistency of thick cream, and then applied with a distemper brush. Deydol gives a soft, velvety, and even flat finish, and is prepared in a number of colour tones. The surface may be stippled to enhance the finish, which is washable when thoroughly set. The distemper may be used for outdoor as well as indoor work, and may be applied over brick, stucco, cement, stone, plaster, wood, iron, or other usual building material, provided a little pale boiled linseed oil is added to the paste before thinning as above.

One and a half pints of liquid to 14 lbs. of paste is the average proportion, and this will make sufficient distemper to cover about 600 squre feet of normal surface, one coat.

Where the plaster or cement has a tendency to sweat it causes the colour to run this can be prevented by a coat or two of 'Deydolene,' which is a special material for usage as a first coat in above or other abnormal conditions. It insulates lime action, stops suction, sweating, patches, spots, sheariness, discoloration, and other troubles that originate in certain surfaces. Moreover, it holds up the full beauty of the succeeding Deydol Finish, and is a most effective damp resister. Where necessary, Deydol Distemper can be varnished over as an additional protection for surfaces that are subject to heavy wear and continual brushing against. GRIPON SUPERVAR is particularly suitable over Deydol.

Whitewash

is used for common walls or ceilings where for sanitary reasons a frequent application is necessary.

It will not stand rain, and adheres badly to very smooth or porous surfaces. It is cheap, and when used for sanitary reasons should be made of hot lime and applied at once.

Whitewash is improved by adding 1 lb. of tallow (free from salt) to every bushel of lime.

SIZE.

Size should be made from the best glue. The glue is prepared by boiling the skin and horny parts of animals. To make size, glue is placed in a pot and covered with water. When melted it is thinned by the addition of more water. One pound of glue makes one gallon of size. Size is used with colouring matters to make them adhere to surfaces.

* Or ½ oz. of burnt white vitriol and 1½ oz. of litharge.

WHITING.

Whiting is made by washing pure white chalk in a wash mill with water to a creamy consistency. The cream flows to settling tanks or backs. When settled, the spuernatant clear water is run off, and the upper sediment is scooped out by long-handled scoops and laid in shovelfuls on a floor of chalk blocks. The chalk absorbs the moisture, and the partly dry slabs (or balls, when so-called hand-made ball is made) are piled on open wooden racks above the chalk floor until air dried. Bulk whiting is dried on fire-heated floors of iron plate. The lower sediment in the backs is returned to the wash mills for cement making or is sold as whiting sand.

Whiting is mixed with water and size for whiting ceilings. It will not stand weather, nor unlike lime whitewash, has it any purifying effects.

CONSTANTS OF LABOUR FOR PAINTING WORK.

		Hours.	
Knotting	per yard super.	·05	painter.
Stopping	,,	·05	,,
First or priming coat on wood	,,	·16	,,
Second and following coats, each	,,	·14	,,
First coat on iron	,,	·25	,,
Second and following coats, each	,,	·22	,,
Add if painting done from a ladder	,,	·10	,,
Iron bars, fillets, etc., one coat	,,	·06	,,
Sash squares, each side, first coat	per dozen	·50	,,
,, ,, ,, second coat	,,	·40	,,
Tarring, first coat on wood	per yard super.	·25	labourer.
,, second and following coats	,,	·20	,,
,, first coat on iron	,,	·28	,,
,, second ,,	,,	·21	,,

(*J. T. Rea.*)

Paperhanging.

APPROXIMATE NUMBER OF PIECES OF ENGLISH WALL-PAPER REQUIRED FOR ANY ROOM.

(Allowance to be made for doors and windows.)

Measurement in Feet Round the Walls.	Height of Room, in Feet, from Skirting to Cornice.									
	6	7	8	9	10	11	12	13	14	15
	Number of Pieces Required.									
32	4	4	5	5	6	6	7	7	8	8
36	4	5	5	6	6	7	7	8	9	9
40	4	5	6	6	7	8	8	9	9	10
44	5	5	6	7	8	8	9	10	10	11
48	5	6	7	7	8	9	10	10	11	12
52	6	6	7	8	9	10	10	11	12	13
56	6	7	8	8	9	10	11	12	13	14
60	6	7	8	9	10	11	12	13	14	15
64	7	8	9	10	11	12	13	14	15	16
68	7	8	9	10	11	12	13	15	16	17
72	7	9	10	11	12	13	14	15	17	18
76	8	9	10	11	13	14	15	16	17	19
80	8	9	11	11	13	15	16	17	18	20
84	9	10	11	12	14	15	17	18	19	21
88	9	10	12	12	14	16	17	19	20	22
92	9	11	12	13	15	17	18	19	21	22
96	10	11	13	13	16	17	19	20	22	23
100	10	12	13	15	16	18	20	21	24	24

Paper for wall decoration is sold by the *piece*. A piece of English paper is supposed to be 12 yds. long and 20 ins. wide when hung; therefore each yard run will contain 5 ft. super, and each piece 60 ft. super; consequently the feet super of surface to be papered divided by 60 will give the number of pieces of paper required, any odd number of yards being taken as a piece. With common patterns 1 piece in 10 should be added to make up for waste in cutting and fitting the patterns in, whilst in large patterns 1 in 7 would not be too much. In all cases a liberal allowance should be made, as it is useful for repairs, the same pattern not being always procurable when required.

A gallon of paste will hang 5 pieces of English paper, a quart of flour being required for each gallon of paste; sometimes a little alum is used to increase its strength, but makes it harder

and prevents it spreading so well. One gallon of boiling water to 2 lbs. of flour and 1 oz. of alum is a common proportion in making paste. The thinner the paste can be made, the better; and it should be well strained before using.

Before papering, the walls should be stopped, pumiced, and sized.

In paperhanging, the trimmed edges of the paper should face the light, to prevent any shadow marking the joints, and should be truly plumb; the pattern should accurately join.

In all cases of re-papering walls, the old paper should be stripped off and the walls scraped, washed, and stopped, previous to hanging the new paper. Papering-over old paper must never be allowed; many rooms which smell close and unhealthy owe it all to several thicknesses of old paper and paste decomposing on the walls. Disease and death have been clearly traced home to the omitting to strip off the old paper before re-papering.

Flock papers when old, instead of being stripped off, can be painted; they will absorb three or four coats of paint; but it produces a very good effect, from the embossed pattern standing out on the surface.

Mouldings.

Nos. 1 to 32, fig. 700C, show various forms of mouldings. The following are those in most general use:

Nos. 2, 17, 26.—For inner face of window-frames, and the outer and inner faces of door-frames.

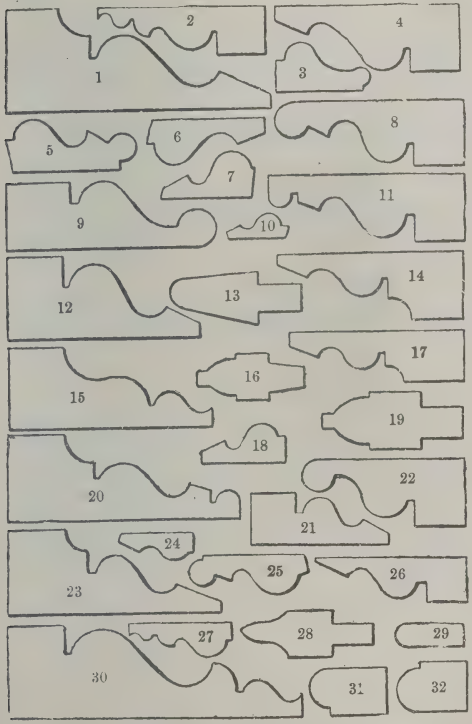


FIG. 700C. Mouldings.




FIG. 701. Moulding.




FIG. 702.—Bolection Moulding

Nos. 18 and 24.—For edging the framing of panels of doors formed of styles and rails.

Nos. 13, 16 19, 28.—Rebated mouldings for the reception of glass; may be used as sash-bars or for the bars of window-frames.

Nos. 31 and 32.—Beadings for capping matchboarding carried part way up a wall from the flooring.

No. 29.—Beading or slip for placing on either side of a window-frame, to confine the sashes in their proper place.

If the moulding does not project beyond the face, C, C, of the frame, A, as in fig 701, it is simply described as a *moulding*.

If the moulding, fig. 702, projects beyond the face of the frame, A, making a narrow projecting framing, E, between the frame of the door and the curved part of the moulding, it is described as a *bolection* moulding.

Plumbing.

Lead.

For roofs, flats, gutters, bottoms of cisterns, and sinks, use 7 lbs. per foot super.

For hips, ridges, small gutters, valleys, and sides of valleys, use 6 lbs. per foot super.

For flashings use 5 lbs. per foot super.

For soil-pipes use 8 lbs. per foot super.

Gutters should have a fall of at least 1 in. in 10 ft., better 1½ in. Flashings should have 3-in. laps, ridge and hip joints 4-in. laps, valley and roof joints 5-in. laps.

Lead in gutters should turn up under slates, etc., from 7 ins. to 9 ins. according to pitch of roofs, and against walls from 5 ins. to 8 ins., and be covered with a flashing, or 'apron,' the upper edge of which is let into a mortar-joint a little above the gutter lead, the lower edge overlapping the latter at least 3 ins.

No sheet of lead should be laid in a greater length than 10 ft. or 12 ft. without a drip or vertical overlap at least 2 ins. deep, to allow of expansion. Soldering should be avoided, if possible.

Zinc.

The gauges of zinc recommended for roofing purposes are Nos. 13, 14, 15, and 16, the weights per sq. ft. of each gauge being respectively 16 ozs. 15 drs., 18 ozs. 12 drs., 21 ozs. 12 drs., and 24 ozs. 12 drs. The sheets usually measure 8 ft. × 3 ft.

Rain-water Pipes.

These are made of cast iron, generally in 6-ft. lengths. The round pipes vary in diameter from 1½ in. to 8 ins. The square pipes are made from 2½ ins. × 2 ins., up to 6 ins. × 6 ins. The 3-in. round pipe is a size largely used.

Corrosion of Zinc and Lead Water Pipes.

Zinc water pipes in contact with mortar containing gypsum become in a relatively short time corroded and eaten through in places. Where the surface is wetted and quickly dried, a protective coating of oxide is formed; but where the contact with running rainwater is prolonged, as in the case of roofing plates and gutters, the possibilities of energetic action must be reckoned with. The most active agent of destruction is sulphate of lime. Zinc is energetically attacked by mortar containing gypsum sand, but only feebly by mortar containing limestone sand alone, or with an addition of gypsum. Lead, on the other hand, is energetically attacked by limestone alone and with an addition of gypsum, but only feebly by gypsum sand mortar. Both metals are strongly attacked by pure cement, but the destructive action is lessened in progressive measure by the addition of sand. Hence zinc should be put in contact only with limestone (carbonate) mortar, and lead only with gypsum (sulphate).

SECTION IX

CLAYS AND ALLIED PRODUCTS USED BY ENGINEERS. CLAYS AND EARTHS—PUDDLE- BRICKS—TILES—BLOCKS —TERRA-COTTA STONEWARE—SANITARY WARE AND DRAIN PIPES — ELECTRICAL WARE — REFRACTORY MATERIALS, INCLUDING FIREBRICKS—FURNACE LININGS — RETORTS — CRUCIBLES — HEAT-INSULATING MATERIALS.

Contributed by Alfred B. Searle
(Consulting Advisor on Clay Products).

SECTION IX

CLAYS AND ALLIED PRODUCTS USED BY ENGINEERS: CLAYS AND EARTHS—PUDDLE—BRICKS—TILES—BLOCKS—TERRA-COTTA STONEWARE—SANITARY WARE AND DRAIN PIPES—ELECTRICAL WARE—REFRACTORY MATERIALS, INCLUDING FIREBRICKS—FURNACE LININGS—RETORTS—CRUCIBLES—HEAT-INSULATING MATERIALS.

(Contributed by Alfred B. Searle,
Consulting Advisor on Clay Products.)

CLAYS AND EARTHS.

For engineering purposes, clays and earths may be regarded as (1) substances which must be excavated and transported from their present situation; (2) the raw materials from which earthwork, puddle, etc., are made; and (3) the raw materials used in the production of bricks, drain pipes and many other articles employed by engineers. The term 'clay' in the broadest possible sense is applied to a material which is tenacious and plastic when wet. Such clays may contain only a small proportion of true clay, together with a large proportion of inert material such as sand. For many engineering purposes a perfectly pure clay would be useless, as it might be of so fine a texture and so highly plastic that it would shrink excessively on drying, and it would be extremely difficult to make into bricks or other desired articles. When made, these articles would be deficient in certain important properties, such as resistance to crushing, impermeability to water, etc.

The term 'earth' is usually applied to a friable material partaking of the general properties of soil, though not necessarily of any agricultural value. It usually consists chiefly of inert material, the particles of which are united by a very variable proportion of clay, humus, or other adhesive. Hence the 'earths' are often regarded as 'clays' of low plasticity, but both these terms are used very loosely by many engineers and no really satisfactory definition of them has yet been formulated.

In selecting a 'clay' or 'earth' for any given purpose, the engineer must, therefore, decide what properties are essential to his requirements and must endeavour to find a natural material possessing these properties, or to prepare a mixture of two or more materials which suit his purpose.

The chemical and physical properties of 'clays' depend chiefly on the composition and plasticity of the material, it being obvious that a 'clay' containing 50 per cent. of quartz-grains must behave very differently from one which consists wholly of 'true clay.' The *plasticity* of clays varies with the nature of the clay and the amount of water present. Dry clays are friable and devoid of plasticity; on mixing clay with an equal weight of water a liquid slurry or slip is formed which is not really plastic, but becomes so when a suitable proportion of the water has been removed by evaporation or otherwise. No generally accepted explanation of the cause of plasticity has been published; this property may be due to the presence of colloidal particles which may be derived from the clay itself or from impurities which have become associated with it. The purest clays—e.g. 'china clay'—are very feebly plastic; the highly plastic ball clays which are supposed to have been derived from them are rich in carbonaceous matter, to which their plasticity is sometimes attributed. The clays commonly used for bricks, pipes, terra-cotta, etc., are never pure; they are naturally-occurring complex mixtures possessing the requisite properties to make them useful for specific purposes.

It is a great mistake to suppose that any plastic 'clay' can be made into bricks, or that any 'system' of manufacture is equally suitable for all 'clays.' On the contrary, the manufacture

of clay products is in reality so complex (notwithstanding its apparent simplicity) and the ordinary manufacturer depends on the simultaneous occurrence of so many fortuitous circumstances that it is not surprising that many firms fail to manufacture clay goods of uniform quality.

PUDDLE.

Puddle is a highly plastic paste made by mixing 'clay' with about one-fifth of its weight of water, the precise amount depending on the plasticity and dryness of the 'clay.' A perfectly pure 'clay' does not usually produce good puddle, as it is either deficient in plasticity (like china clay) or it shrinks excessively. The former defect can only be remedied by the use of a more highly plastic material; excessive shrinkage may be prevented by mixing a suitable proportion of sand with the clay. For the best results, a piece of puddle when dried should not shrink more than $1\frac{1}{2}$ in. per linear foot; on the other hand, it should not shrink less than $\frac{3}{4}$ in. per linear foot or it will probably not be sufficiently impermeable to water.

The materials used must be carefully selected and thoroughly well mixed; some contractors are very careless in this respect and will use anything which has been passed through a pug-mill. The correct consistency for good puddle is that at which that paste can be squeezed easily in the hand without any appreciable quantity adhering to the latter when the pressure is released. Puddle made of the consistency of porridge is much too soft for best work, though it is better than an over-dry or badly mixed stiff paste.

Where possible, the materials used for making puddle should, before being mixed with water, be passed between a pair of rollers placed not more than $\frac{1}{8}$ in. apart, so as to crush any stones or coarse gravel present. It is also desirable that all roots and large stones should be picked out before sending the 'clay' to the mixer.

BRICKS.

Many kinds of bricks are in use. The most important are: *Common Bricks*, used for ordinary building purposes; *Facing Bricks*, used for external work where appearance is important; *Paviours*, used for yards, footpaths and other locations where a hard-wearing and impervious brick is required (for *Road Bricks* see page 732); *Blue Bricks*, which are similar in many respects to 'pavviours' and are employed where exceptional strength and impermeability are important; *Stock Bricks*, which are practically the same as 'common bricks,' but have usually been burned in a clamp instead of in a kiln; they have proved exceptionally resistant to the climatic conditions of London, but are seldom, if ever, used in other large industrial centres (in some localities the term 'stock bricks' relates to 'facing bricks').

Bricks are also known according to the manner of their production. Thus, *Malms* contain a large proportion of chalk, either naturally or artificially mixed with the clay; *Wire-cut Bricks* are made by cutting up a column of clay issuing from a machine, by means of wires; *Pressed Bricks* have been made in presses; *Semi-plastic* or *Stiff Plastic Bricks* have been made from a paste which is stiffer and less plastic than that used for hand-moulded or wire-cut bricks; *Semi-dry Bricks* are made by compressing the powdered clay in powerful presses instead of first converting it into a paste.* *Place Bricks*, *Grizzles*, and *Chuffs* are inferior bricks which are soft through insufficient burning; *Crozzles* are excessively hard, misshapen bricks which have been partially melted and overheated. *Rubbers* and *Cutters* are soft, sandy bricks.

Glazed Bricks are used where a smooth and impervious surface is required (see 'Glazed Tiles.').

Sand-lime Bricks † are made of sand mixed with about 6 per cent. of lime and matured in an atmosphere of steam under pressure. They have never become very popular, chiefly on account of the abundance of clay bricks and stone, but in localities where sand is plentiful and clay scarce they appear to be an excellent substitute for clay bricks.

Several attempts have been made by various Government officials to extend the use of sand-lime bricks, but such efforts have proved abortive, as such bricks are much more difficult to make at a profit, and there is a larger proportion of unsaleable waste than with clay bricks. Some of the statements respecting the speed of production and cost for manufacture of sand-lime bricks, published in certain Government publications, are by no means correct if applied to average conditions.

Cement-concrete Bricks.†—These bricks have attracted attention, but are not so suitable as larger blocks of concrete for general purposes, as the cost of production is relatively high. Such bricks are made in precisely the same manner as concrete blocks—i.e. from a mixture of Portland cement with six times its volume of one of the following aggregates:—sand, destructor, furnace-, or boiler-clinker, ashes, quarry waste, and broken bricks or stone. The use of these bricks appears to be limited in practice to districts where clay bricks cannot be obtained at a reasonable price, and even then concrete blocks or mass concrete would be much cheaper, as the manufacture of such bricks is not nearly so simple as a description of the process may imply

* For further details respecting the manufacture of bricks see 'Modern Brickmaking' by A. B. Searle (Scott, Greenwood & Son, London).

† See 'Bricks and Artificial Stones of Non-Plastic Materials' by A. B. Searle (J. & A. Churchill, London).

Engineering Bricks is the term usually applied to bricks of an exceptionally dense and vitreous character, of which the best known are the *Staffordshire* blue bricks. These owe their unusual strength and impermeability to the fact that they have been burned under such conditions that the particles composing them are united very firmly by means of a film of clinker surrounding each. For purposes where a somewhat weaker brick has ample strength, well-made *pressed* or *stiff plastic* bricks are usually satisfactory and much less costly, but they are more porous and therefore less suitable for supporting heavy masses of material on a boggy or damp subsoil. Bricks for *boilers* should be accurate in size and shape so as to enable the thinnest possible joints to be used. In order to prevent undue leakage they should be glazed or painted with tar or other impervious material. For boiler *blocks* see Section XXIX, Part II.

For *fireboxes, furnaces*, etc., firebricks and blocks are employed.

Colliery Bricks are usually of very poor quality, due to their being made from unsuitable material, or from good clay which has been spoiled by mixing it with rubbish.

There is serious need for great improvements in the manufacture of bricks in many collieries, and those firms who have called in a competent and independent advisor have found that it has paid them well to follow his advice. The services of unemployed foremen, machinery manufacturers, and kiln builders, in this connection, are seldom satisfactory, as their recommendations are unduly biassed.

Crushing Strength of Bricks.

Opinions differ greatly as to the respective values of different kinds of bricks, and as the crushing strength of bricks taken from the same works at different times varies 25 per cent. and even more, it is clear that no comparison of crushing strength tests can be of much value in deciding between various kinds of bricks. The chief use of the tests is in fixing a minimum crushing strength which shall ensure the safety of the structure, but as the strength of even the commonest bricks is much greater than that of average brickwork (the mortar being usually weak), it is difficult to stipulate any satisfactory minimum strength for bricks.

The following figures are the averages of a large number of bricks, but it must be clearly understood that bricks from any given works may be either much stronger or much weaker than the ones mentioned.

Description.	Crushing Commences.	Ultimate Crushing.
	Tons per square foot.	Tons per square foot.
Common stocks	40–60	80–120
London best stocks	80–140	100–180
Gault white, wire-cut	40–120	135–200
Aylesford, red pressed	70	140
Manchester, common red	75	120
,, wire-cut	85	260
Accrington, plastic	115	250
Leicester, wire-cut	115–250	230–340
Rugby, common red	160	190
Fletton	125–200	170–250
Notts.	60–300	120–400
Ruabon.	360	—
Terra-cotta blocks	—	100–260
Glazed bricks	70–165	165–175
Stourbridge firebricks	90–160	110–210
Sand-lime Bricks	150–200	180–230

The crushing strength of brickwork is shown on pp. 253, 384.

Sizes of Bricks.

In many countries there is no official standard; the following are average sizes:—

Standard Sizes of Bricks in different Countries.*

Country.	Length, inches.	Breadth, inches.	Thickness, inches.
Great Britain	9	$4\frac{1}{8}$	$2\frac{5}{8}$ †
Germany	10	$4\frac{1}{2}$	$2\frac{3}{8}$
Austria	$11\frac{5}{8}$	$5\frac{5}{8}$	$2\frac{3}{8}$
France	$8\frac{3}{4}$	$4\frac{3}{4}$	$2\frac{3}{4}$
Italy	9	$5\frac{1}{2}$	$2\frac{3}{4}$
Holland and Belgium	$9\frac{3}{8}$	$4\frac{3}{4}$	$2\frac{1}{4}$
Switzerland	10	$4\frac{1}{4}$	$2\frac{1}{4}$
Russia (varies greatly).	$11\frac{1}{2}$	$5\frac{1}{2}$	$2\frac{1}{2}$
United States	8	4	$2\frac{1}{4}$

* See also p. 374. † In Scotland, $2\frac{11}{16}$ in. or 3 in.

Specification for Bricks.

The sizes of bricks vary in different parts of Great Britain, but there are many advantages in adopting the Specification of the Royal Institute of British Architects as follows:—

The Royal Institute of British Architects' standard size lies between—length, 8¾ ins. and 9 ins.; breadth, $4\frac{5}{16}$ ins. and 4⅝ ins.; thickness, 2⅝ ins. and $2\frac{13}{16}$ ins.

The method of measuring the bricks as set out in the standard specification is as follows:—

(1) The length of the brick should be double the width plus the thickness of one vertical joint.

(2) Brickwork should measure four courses of bricks and four joints to a foot.

Joints should be ¼ in. thick, and an extra $\frac{1}{16}$th, making $\frac{5}{16}$th, for the bed joints to cover irregularities in the bricks. This gives a standard length of 9¼ ins. centre to centre of joints.

The bricks, laid dry, to be measured in the following manner:—

A. Eight stretchers laid square end and splay end in contact in a straight line, to measure 72 ins.

B. Eight headers laid side to side, frog upwards, in a straight line, to measure 35 ins.

C. Eight bricks, the first brick frog downwards and then alternately frog to frog and back to back, to measure 21½ ins.

A margin of 1 in. less will be allowed as to A and ½ in. less as to B and C.

Tests of Bricks.

All dry bricks should *ring clearly* when two, held in the hands, are struck sharply together. If a dull sound is emitted the bricks are either saturated with water or they have not been sufficiently well burned.

The *porosity* of bricks is usually tested by soaking them in water, wiping dry and noting the increase in weight. Whilst many good building bricks will absorb one-fifth of their weight of water, this is no criterion of the value from an engineering standpoint; on the contrary, engineers usually prefer bricks with low porosity on account of their greater strength.

Rattler Test.—In the United States, and to a much smaller extent in this country, engineering bricks are tested for toughness and resistance to abrasion by placing a weighed quantity of them in a cylinder with steel balls and rotating the cylinder a thousand times in about half-an-hour.* The contents of the cylinder are then removed, all pieces of brick larger than 1 in. diameter are picked out and reweighed. The loss in weight is regarded as a measure of the inferiority of the bricks. The rattler test is particularly applicable to bricks used for road making (Section XIV) and for lining furnaces.

Tiles.

Roofing Tiles are made of materials similar to those used for bricks, but of a somewhat finer texture. No official specifications have been published, but it is recognised that roofing tiles should be light, tough, and ring clearly when struck, be impervious to water in the sense that even under a continuous supply of water no dripping will occur from the underside of the tile when placed at the same angle as when in use on a roof. It is desirable that tiles should be moderately porous, so as to avoid undue condensation of their underfaces.

Glazed Tiles are used partly for decorative purposes, but chiefly for sanitary reasons. The glaze should be sufficiently hard to resist all reasonable abrasion and it should not craze (forming hair-like cracks) after prolonged use. For chemical laboratories and other special purposes a felspathic glaze burned at about 1300° C. must be used in order that it may be sufficiently resistant to corrosive fluids, etc. (see 'Stoneware,' *infra*).

Paving Tiles, like paviour bricks, should be very hard and resistant to abrasion. To prevent animals slipping on them, the surface may be channelled with small grooves forming a diamond pattern.

Paving tiles are usually made of the same material and in the same manner as paving or engineering bricks.

Blocks and Terra-Cotta.

The chief requirements of *blocks* made of clay and allied materials are accuracy in shape and size, and ample strength to carry the superimposed loads. For external work, appearance is also important.

Terra-cotta is largely used in conjunction with structural steel work, the latter taking the bulk of the stresses and the terra-cotta forming a sort of filler and cover of great resistance to climatic conditions and of pleasing appearance. There is no necessity to impose any conditions as to its strength, as in a properly designed structure it would not be exposed to any severe stresses.

* The weight of the balls, the number of revolutions, and the size of the rejected pieces, differ with various engineers.

Blocks for boilers are made of special shapes. They must be sufficiently heat-resisting not to be affected by the conditions to which they are subject when in use. They must be very accurate in shape and size or there will be a serious leakage into the side flues. (Section XXIX, Part II.)

HOLLOW BLOCKS.

For many years in France and in some of the Colonies, but only recently in this country, the advantages which hollow blocks possess over building bricks have been realised. Such blocks are only one-third of the weight of the same number of bricks; they can be laid about four times as rapidly, and they are of ample strength for all purposes for which ordinary bricks are used. In addition, they automatically form a cavity wall, with all its advantages of warmth

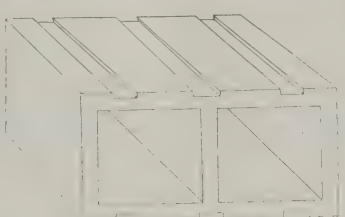


FIG. 1.

and soundproofness. Their great strength is really due to the fact that the bricks in a solid mass of brickwork have about ten times the crushing strength of the brickwork as a whole. Consequently a large proportion of the solid interior is quite useless and only adds to the cost of material, carriage, and labour; these costs are saved when hollow blocks are used.

Hollow building blocks are made in various shapes and sizes, according to the purposes for which they are to be used, and numerous patents have been granted in connection with them.

The *clays* used for making hollow blocks are the same as those employed in the manufacture of terra-cotta and roofing tiles. Such clays must vitrify sufficiently to form a strong, weather-resisting mass when fired. They must retain their shape perfectly at any temperature to which they may be exposed in the kiln, and whenever possible they should have a pleasing colour so as to avoid the necessity of 'rough casting.' Suitable clays and shales are found in various parts of the country, particularly in the Midlands. The lower grades of fireclays found in the various coalfields are also suitable, provided their buff colour is not regarded as objectionable.

The *process* of manufacture consists in preparing a clay paste of suitable consistency and extruding it through a die or mouthpiece, the interior of which is fitted with a number of cores, fig. 1, corresponding to the hollow portions of the blocks. The extruded column of clay is then cut by wires into suitable lengths, and the resulting blocks are dried and burned like bricks or architectural terra-cotta.

No standard specifications for hollow blocks have as yet been issued, but it is obvious that if the crushing strength of such blocks when they are laid in the same position as that in which they will be used, is greater than the normal strength of brickwork, such blocks will have ample strength. In most cases the blocks themselves have more than twice the strength of normal brickwork.

STONEWARE, SANITARY WARE, AND DRAIN PIPES.

Stoneware, as used by engineers, is chiefly employed in chemical works in the construction of appliances for dealing with corrosive fluids both at low and high temperatures.

The conditions under which it is used are exceptionally severe and yet are so varied that no widely acceptable specifications have been found possible. For chemical and industrial purposes, stoneware should consist of an impervious body of great crushing strength and with a minimum sensitiveness to sudden changes in temperature. The ideal is closely approached by the porcelain crucibles used in chemical laboratories, but this is too costly and too fragile for most commercial purposes and various coarser substitutes are therefore employed. To a very large extent the manufacturers of stoneware appliances may be relied upon to supply a satisfactory product if they are fully informed as to the conditions to which it will be subjected. Where troubles arise, they are often due to an engineer requiring a piece of stoneware of a design or shape which is incompatible with the nature of the material used.

Sanitary Ware is not subjected to the same conditions as stoneware, and may therefore consist of a porous body covered with a hard felspatic glaze, though an impervious body is

preferable where expense is no object. It is highly important that the glaze should be of a suitable character, earthenware and lead glazes seldom being sufficiently durable. In designing sanitary ware it is desirable to work in close co-operation with the manufacturer, as in this way much delay in production and a considerable saving in cost may be effected, and the ware is likely to be more satisfactory. As far as possible, joints and sharp arrises or corners should be avoided.

Drain Pipes are frequently made of a porous body which is covered with a salt-glaze, but for the best work a vitreous or impervious body should be used. If the glaze is defective or damaged an impervious body will maintain the efficiency of the pipes, but a porous body may permit seepage of a disagreeable or even harmful character.

For 'The British Standard Specification for Salt-Glazed Pipes' see page 1246.

ELECTRICAL WARE.

Electrical Ware is chiefly used in the form of conduits, insulators, and fittings. The conduits are usually made of coarse stoneware and are similar in many respects to salt-glazed drain pipes (*supra*).

Other electrical ware is made of fine stoneware or porcelain. Insulators must have a fine and uniform texture and their fractured surface should be free from holes and fissures; they must be able to resist the passage of electric currents of the desired voltage without appreciable leakage, and should be tested at a considerably higher voltage to ensure this.

REFRACTORY MATERIALS. *

The term '*Refractory*' is applied to various heat-resisting materials, such as firebricks, crucibles, and furnace linings. There is no official definition of this term, but it is becoming increasingly customary to regard 1580° C. (2876° F.) as a minimum temperature, materials which suffer deformation when heated rather slowly to this temperature being excluded from what are generally regarded as refractory materials.

As the rate of heating has an important influence on the temperature at which deformation occurs, it is necessary, for comparative purposes, to specify the conditions of heating.

MELTING POINTS OF REFRACTORY MATERIALS.

	°C.		°C.
Alumina (pure)	2010†	Ganister	1700 to 1800
Bauxite	1820†	Kaolin	1835 to 1740†
Bauxite brick	1565 to 1785†	Magnesia brick	2165
Bauxite clay	1795†	Silica—Pure	1750†
Chromite	2180†	Pure	1830
Chromite brick	2050†	Pure with 14·5 per cent. alumina	1690
Fireclay brick—Highest grade	1843	Pure with 63·0 per cent. alumina	1890
General grade	1680 (average)	Brick	1700 to 1750
General grade (average of 41 samples)†	1649		

The term 'melting point' is misleading when applied to refractory materials, as these are seldom, if ever, melted, and the term is generally used to indicate the temperature at which a small pyramid or 'cone' of the material bends over until its apex is on a level with its base, or, alternatively, at which the angular edges of the pyramid begin to lose their angularity.

FIREBRICKS.*

Fireclay bricks are made of clays derived chiefly from the coal measures. These clays are crushed to powder mixed with water and made into bricks either by hand-moulding or machines of the stiff-plastic or semi-dry type; the bricks are then dried and are afterwards burned in kilns. The temperature attained in burning should be at least as high as that to which the bricks will be subjected when in use, as otherwise shrinkage and other defects may occur. It is seldom that bricks burned at such high temperatures are obtained unless they are definitely specified; and for some purposes, such as lining steel-melting furnaces, users must be content with bricks fired at a lower temperature than that at which they will be employed. The highest temperature ordinarily attained in burning firebricks is about 1350° C.

Firebricks are also made of silica (in which case they are known as *Ganister* or *Silica Bricks*), alumina (*Bauxite* or *Semi-bauxite Bricks*), magnesia (*Magnesia* or *Magnesite Bricks*), chrome iron ore (*Chromite Bricks*), and graphite (*Carbon Bricks*).

---

* See also 'Refractory Materials,' by A. B. Searle (Griffin & Co., London).

† Kanolt. The temperatures are those at which the materials were first seen to flow easily.

Firebricks made of clay or silica are acid in character and are readily attacked by the limestone used as a flux in steel furnaces. *Basic Bricks* are made of magnesia, whilst *Neutral Bricks* are made of bauxite, chromite or carbon: the two latter are chiefly used as an intermediate course between acid and basic bricks in furnace linings.

Ordinary fireclays contain 58 to 75 per cent. of silica, 25 to 36 per cent. of alumina, and ½ to 2 per cent. of iron oxide. Good silica bricks contain upwards of 95 per cent. of silica, little or no alumina, and under 2 per cent. of lime. Ganister bricks contain about 90 per cent. of silica, 5 per cent. of alumina and less than 2 per cent. of iron oxide. Magnesia bricks consist almost wholly of magnesia, unless about 5 per cent. of clay or iron oxide has been used to bind the particles together.

Fireclays as used on Gasworks.

Refractory materials as employed on gasworks are in general classified in accordance with the percentage of silica which they contain. There are three distinct varieties of clay, known respectively as:

(*a*) Aluminous clays;
(*b*) Siliceous clays;
(*c*) Silica clays.

The so-called aluminous clays are those belonging to the Stourbridge varieties, which contain on an average about 65 per cent. of silica. Siliceous clays are intermediate in composition, and include those types which contain from 80 to 92 per cent. of silica, such as the well-known Ewell variety. Silica clays are those which contain above 92 per cent. of silica, such as the Dinas and Black Ganister varieties. The composition of typical fireclays is shown in the following analyses:

	Per cent.
Stourbridge Clay—	
Silica	64·62
Alumina	21·65
Ferric oxide	1·48
Lime	1·88
Magnesia	0·62
Moisture	9·62
Ewell Clay—	
Silica	87·57
Alumina	3·60
Ferric oxide	4·80
Lime	0·74
Magnesia	0·41
Potash	0·69
Soda	0·10
Water of combination	2·09
Dinas Clay—	
Silica	97·60
Alumina	0·50
Ferric oxide	1·50
Lime	0·20
Potash	0·09
Soda	0·03
Black Ganister—	
Silica	98·5
Alumina	0·3
Ferric oxide	1·3
Lime	0·2
Potash	traces
Soda	traces

The impurities in fireclays, i.e. those constituents other than the silica and alumina, have a most harmful effect on the refractoriness of the material owing to their low fusing point. These constituents should, if possible, never be allowed to exceed more than 4 to 5 per cent. Much must, of course, depend upon the type of clay, and it is possible to point to certain substances containing so much as 4 per cent. of iron alone, and yet they are highly refractory. Green clay when fired is subject to considerable shrinkage, and it is for this reason that chamotte, or 'grog,' is added in varying proportions before the article is placed in the kiln. This 'grog' is usually prepared from a clay which originated in the same seam as the clay with which it is mixed. It should be prepared specially for the purpose, and should not consist of the crushings from defective and broken articles which have passed through the kiln. The quantity of 'grog' added varies, of course, with the material required and the kind of clay made use of. For firebricks and smaller articles it is usually added in a proportion of 15 to 20 per cent. For larger articles, such as retorts, the amount is increased to 30 to 40 per cent. (*Alwyne Meade.*)

The deformation or softening points of firebricks vary considerably. The following are fairly typical :—

Fireclay bricks, 1610–1770°C. ; Silica bricks, 1670–1790°C. ; Magnesia bricks, 1730–2000°C.

Specification for Fireclay Bricks.

The following paragraphs contain the salient features of the Specifications for Firebricks issued by the Institution of Gas Engineers (1911, revised 1912).

(1) *Refractoriness.*—Two grades of material are covered by the specification :—

(*i*) The material which shows no sign of fusion when heated to a temperature of not less than Seger Cone 30 (about 1670°C.).

(*ii*) Material which shows no sign of fusion when heated to a temperature of not less than Seger Cone 26 (about 1580°C.).

(2) *Surfaces and Texture.*—The material shall be evenly burnt throughout and the texture regular, containing no holes or flaws. All surfaces shall be reasonably true and free from flaws or winding.

(3) *Contraction or Expansion.*—A test piece, when heated to a temperature of Seger Cone 14 for two hours, shall not show more than the following linear contraction or expansion :—

No. 1 grade, 1 per cent. ; No. 2 grade, 1·25 per cent.

After the test temperature has been reached, the furnace shall be maintained constant at that temperature throughout the testing period.

The test piece shall be 4½ inches long and 4½ inches wide, the ends being ground flat, and the contraction being measured by means of vernier calipers reading to 0·1 mm., a suitable mark being made on the test piece, so that the calipers may be placed in the same position before and after firing.

(4) *Variations from Specified Measurements.*—In the case of ordinary bricks, 9 inches by 4½ inches by 3 inches or 2½ inches thick, there shall not be more than ± 1½ per cent. variation in length, nor more than ± 2½ per cent. variation in width or thickness, and in all cases the bricks shall work out their own bond, with not more than ⅛ inch allowance for joint. In the case of special bricks, blocks or tiles, there shall not be more than ± 2 per cent. variation from any of the specified dimensions.

(5) *Crushing Strength.*—The material shall be capable of withstanding a crushing strain of not less than 1,800 lbs. per square inch when applied to whole bricks placed with their long side vertical between the jaws of the machine, giving a vertical thrust.

Specification for Silica Bricks.

(Institution of Gas Engineers, 1912.)

The material covered by this specification is divided into two classes :—

(*i*) That containing 92 per cent. and upwards of silica, and hereinafter called 'silica' material.

(*ii*) That containing from 80 to 92 per cent. of silica, and hereinafter called 'siliceous.'

(1) *Refractoriness.*—Test pieces of the material shall show no sign of fusion when heated to the following temperatures :—

'Silica' material not less than Seger Cone 32 (about 1710°C.).

'Siliceous' material not less than Seger Cone 29 (about 1650°C.)

The test shall be carried out in an oxidising atmosphere, the temperature of the furnace being increased at the rate of about 50°C. per five minutes.

(2) *Surface and Texture.*—The material should be evenly burned throughout, and the texture regular, with no holes or flaws. All surfaces shall be reasonably true and free from flaws or winding.

(3) *Contraction and Expansion.*—A test piece, when heated in a gas muffle or electric furnace to a temperature of Seger Cone 14 for two hours, shall not show on cooling more than 0·75 per cent. linear contraction or expansion. The test piece shall be at least 4½ inches long by 4½ inches wide, the ends being ground flat, and the contraction or expansion measured by means of vernier calipers reading to 0·1 mm., a suitable mark being made on the test piece, so that the calipers may be placed in the same position before and after firing. The test samples shall not be taken out of the middle of a brick or tile, but shall be representative of the whole.

(4) *Variations from Measurements.*—In the case of ordinary bricks, 9 inches by 4½ inches by 3 inches or 2½ inches thick, there shall not be more than ± 1½ per cent. variation in length, nor more than ± 2½ per cent. variation in width or thickness ; and in all cases the bricks shall work out their own bond. Special bricks, blocks, or tiles shall not have more than ± 2 per cent. variation from any of the specified dimensions.

Specifications for Refractory Mortar or Cement

(Institution of Gas Engineers, 1911; revised 1912.)

Cementing clay or fireclay mortar shall be machine-ground, and, at the discretion of the manufacturer, may contain a suitable percentage of fine grog; but in all cases the cement-clay shall be quite suitable for the purpose of binding together the bricks, blocks or tiles for which it is supplied, and shall be capable of withstanding the same test for refractoriness.

This specification applies equally to cement or mortar used for bricks made of either fireclay or silica.

BRICKS OR BLOCKS FOR FURNACE LININGS.

The bricks or blocks used for lining furnaces should be selected according to the conditions to which they will be subjected. It is almost impossible to obtain a material which is wholly efficient in every respect, and some compromise is essential. Thus, great resistance to abrasion can only be obtained by increasing the amount of vitreous material and thereby lowering the refractoriness of the bricks. Answers to the following questions will usually provide most of the information required :—

(*a*) What is the highest temperature to which the brick will be exposed (excessive or only moderate), and will it be constant or fluctuating? (*b*) Will the material come into contact with any flame, and will the latter be of an 'oxidising' or 'reducing' character? (*c*) Is mechanical strength required? (*d*) Is heat to be conducted or retained? (*e*) Is the brick expected to withstand sudden and repeated changes in temperature? (*f*) Will the brick come into contact with fluid slags or glass, or with flue-dust, cement or other fluxes? (*g*) Must the brick resist blows, shocks and other unavoidable strains? (*h*) What is the nature of the fuel used and is it fed by hand or mechanically? (*i*) Is the electrical conductivity important?

To meet (*a*), refractoriness is of much importance, but, in most cases, other factors deserve even greater attention. For (*b*) and (*c*) the texture of the surface of the brick must be right or the brick will not be durable, no matter how great its refractoriness. If mechanical strength is needed, the brick cannot be as refractory as otherwise, for great strength is dependent on the presence of a large amount of bond, which is necessarily less refractory than the particles to be bound together. For (*d*), it will be found that the conduction of heat depends chiefly on the density of the material If made of clay or silica and on its chemical composition if made of graphite, plumbago or other carbonaceous material. Graphite, fused alumina and zirconia are good heat conductors, whilst clay, silica and magnesia are good heat retainers. For (*e*) a lean, coarse and porous material should be used whilst for (*f*) a fat, close material is required, i.e. exactly opposite to that for (*e*), and for (*g*) a hard-burned material which has not been heated more than once is preferable; broken bricks and other refractory articles should not be used as grog in this case, and the mass should not be either too lean or too fine-grained.

Consideration of the above points will show that there is some difficulty in deciding upon the correct description of the material for use in the ordinary type of industrial furnace. Where bricks of high refractoriness are required to withstand the temperature employed, heat must be retained and radiation reduced to a minimum, though most of these requirements are satisfied by using an open-grained, porous material. Still greater difficulty arises in dealing with furnaces in which fluxes are brought into contact with the firebricks, and in these the material must be close-grained, even if this is accompanied by the loss of some heat resistance.

Where great resistance to fluxes (flue-dust, lime and other bases) is required, the refractoriness of the brick is of secondary importance to the closeness of texture. Under such conditions, a porous, highly refractory brick will be far less durable than a dense brick of much lower fusing point. The fluxes act less rapidly on a comparatively smooth, dense surface than on a more porous one, so that the 'life' of the former brick will be longer than the latter, notwithstanding the fact that its actual heat resistance may be lower. For this reason, many fireclays which are of No. 2 quality as regards heat resistance are preferable for use in some furnaces and for flue work generally.

In some heating appliances, the draught and the atmosphere to which the refractory material is exposed have a far greater influence on the durability of the latter than is generally supposed. Unless properly managed, such furnaces may cause firebricks to be destroyed in a few weeks, whereas under proper conditions of draught they would last almost as many years. This is a matter of which firebrick manufacturers have no special knowledge and most builders and users of furnaces are equally ignorant. It is, in fact, one which can only be properly investigated by a specialist in refractory materials.

RAMMED FURNACE LININGS.

Furnaces are sometimes lined with a stiff paste which is rammed into position. The composition of such rammed linings varies with the purpose for which the furnace is used; a well known material consists of ganister to which a little lime has been added and the mixture then made into a very stiff paste with water.

Various kinds of sand, with or without sufficient clay or other binding agent to make the mass adhesive, are largely used for lining and repairing furnaces. (See also 'Refractory Cements,' p. 431.)

GAS RETORTS.

The chief forms of gas retorts are briefly described in Section XXXIV. They are usually made of a mixture of fireclay and 'grog,' the latter consisting of fireclay which has previously been burned and reduced to a very coarse powder. The grog should not consist of particles of uniform size, but should be graded so as to produce a material capable of withstanding sudden changes in temperature. The proportions of grog and clay must be adapted to the nature of the clay and the size and shape of the retort. The retorts require to be dried very slowly and carefully, and to be burned at a sufficiently high temperature to prevent them shrinking unduly when in use.

The following paragraphs contain the salient features of the Specification for Gas Retorts issued by the Institution of Gas Engineers in 1911, revised 1912.

SPECIFICATION FOR GAS RETORTS.

(Institution of Gas Engineers, 1911; revised 1912.)

(1) *Constituents.*—The retorts or retort tiles shall be made of sufficiently seasoned raw clay and clean-burnt 'grog.' No 'grog' shall be used which will pass through a test sieve having 16 meshes to the linear inch.

Standard sieves* to be used.

(2) *Refractoriness.*—A piece of the material shall show no signs of fusion when heated to a temperature not less than Seger Cone 28 (about 1630°C.), the heat being increased at a rate of about 50°C. per five minutes in an oxidising atmosphere.

The material is to be chipped to the form and size of a Seger Cone, and tested against standard Seger Cones (small size).

(3) *Surfaces and Texture.*—All surfaces shall be reasonably true and free from flaws or winding, and after burning no 'washing' shall be done without the consent of the engineer (or purchaser). The texture throughout shall be even and regular, containing no holes or flaws, and the 'apparent porosity' shall not be less than 18 per cent. by volume.

(4) *Contraction.*—The material shall be evenly burnt throughout and contain no black core. A test piece, when heated to a temperature of Seger Cone 14 for two hours, shall not show, when cold, more than 1¼ per cent. contraction or expansion. The test piece shall be 4½ inches by 1½ inches, the ends being ground flat, and the contraction being measured by means of vernier calipers, reading to 0·1 mm., a suitable mark being made on the test piece, so that the calipers may be placed in the same position before and after firing.

Retorts made of *silica bricks and blocks* have, in recent years, achieved great success, as they transmit the heat better than fireclay. For these the Specification for Silica Bricks (p. 428) is suitable.

CRUCIBLES.

Crucibles are made of (*i*) fireclay to which a suitable proportion of sand has been added, (*ii*) graphite or plumbago with a sufficient amount of clay or other binder, and (*iii*) various other materials of a special character such as magnesia, zirconia, etc. Crucibles must be sufficiently refractory to withstand the heat to which they are subjected, and whilst at the highest temperature at which they are used they must be sufficiently strong to be lifted out of the furnace, with their contents. Equally important is the resistance offered to the action of their contents, and as no crucible is equally suitable for all purposes careful selection is necessary.

A common test for the ability of a crucible to withstand corrosion is to half fill it with copper and to add a little borax. As the copper melts, part of it will be oxidised, the borax will absorb the oxide and will rapidly corrode the crucible, unless the latter is of excellent quality.

Another useful test consists in melting red lead and copper oxide in the crucible to be tested. Most crucibles will be perforated by the fused mixture after a few minutes' heating, but a satisfactory crucible will stand prolonged heating.

Silica is more readily corroded than clay or grog, but graphite is not affected at all. Hence, for highly corrosive contents, grog or graphite crucibles and not siliceous ones should be used.

Resistance to sudden changes in temperature is an essential property of a good crucible. How necessary is this resistance may be realised from the fact that a crucible may be withdrawn from a furnace at 1800°C., with its contents of 80 lbs. of steel at 1500°C. The steel is at once poured out and replaced by air at a temperature of only 20°C. Yet, notwithstanding the severity of

* It is necessary to observe that in the standard 16-mesh sieve the wires and spaces are of equal diameter, so that such a sieve only allows pieces less than $\frac{1}{32}$ inch linear dimension to pass through it. Sieves with spaces and wires of any other dimensions will not give results in conformity with the specification.

such conditions, crucibles are regularly used for this purpose. On the other hand, many clay crucibles which have been used once and allowed to become cold cannot be used again, as they crack when reheated.

Further information will be found in ' Refractory Materials ' by A. B. Searle (Griffin & Co., London).

ABRASIVE WHEELS AND BLOCKS.

The vitrified bonds used in the manufacture of some abrasive wheels, blocks, etc., are largely composed of clay. For further details see Section XX, Part II, p. 1003–1019.

HEAT-INSULATING MATERIALS.

Materials used for retaining the heat inside pipes, cylinders, etc., are largely made of clay of allied materials, the most important ingredients being kieselguhr, magnesia, brick dust, felt, and various fibrous materials (see p. 1437).

CEMENTS.

Many cements are clay products of a more or less definite character. Thus, *Portland cement* is made by heating a carefully proportioned mixture of clay and limestone or chalk until they combine and the mass sinters. *Roman cement* and hydraulic lime are crude materials of the same character in which a natural material is used containing the clay and lime compounds in suitable proportions (see p. 395).

FIRE-RESISTING OR REFRACTORY CEMENTS.

These cements—usually sold under a fancy name are used for patching furnaces, and other appliances subjected to heat. The precise nature of most of these cements is regarded as a trade secret, but many of them are composed of fireclay, ground firebricks, and Portland cement or water-glass. These materials, when properly selected and mixed in the proper proportions, form a paste which adheres readily to cold brickwork, and when the latter is heated the nature of the cement is changed and a strong heat-resisting material is produced.

The commonest cements for use with various bricks consists of a slip made from the same material as that of the bricks. Thus, a mixture of fireclay and brick-dust (grog) is used with fireclay bricks, whilst a mixture of sand and sodium silicate is often used for bonding silica bricks.

Ground ganister or a mixture of silica rock and fireclay is largely used for lining furnaces (see foot of p. 429).

Special cements are used in certain cases ; fused alumina and carborundum cements are sometimes used in retorts and muffles, a small proportion of clay being used as a bonding agent. Powdered zirconia, ground so as to pass through a 200-mesh sieve, is very effective at exceptionally high temperatures, whilst other special mixtures may also be employed where a mixture of unusual composition is needed.

SECTION X

REINFORCED CONCRETE CONSTRUCTION

(Contributed by Alexander Drew, M.I.Mech.E., M.C.I.)

Telephone: VICTORIA 4428.
Telegrams:
'FRAMSTRUK,
PHONE, LONDON.'

FRAM (LONDON) LIMITED


Riverside Wharf & Stores:
EATON WHARF,
135 GROSVENOR ROAD,
LONDON,
S.W. 1.

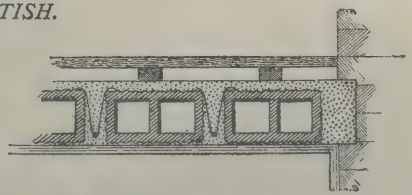
Engineer and Managing Director:
H. L. BARRACLOUGH.

REINFORCED CONCRETE & CONSTRUCTIONAL ENGINEERS,

Manufacturers of the 'Barraclough' Patent Reinforced Concrete Floors.

ENTIRELY BRITISH.





FRAM (LONDON) LIMITED,

EATON WHARF,

135 GROSVENOR ROAD, PIMLICO, LONDON, S.W. 1.

F. 435

SECTION X

REINFORCED CONCRETE CONSTRUCTION.

(Contributed by Alexander Drew, M.I.Mech.E., M.C.I.)

REPORT OF JOINT COMMITTEE OF ROYAL INSTITUTE OF BRITISH ARCHITECTS.*

(*Abstract.*)

Good workmanship and materials are essential in reinforced concrete.

It is essential that the workmen employed should be skilled in this class of construction.

Very careful superintendence is required during the execution of the work in regard to—

(*a*) The quality, testing, and mixing of the materials.

(*b*) The sizes and positions of the reinforcements.

(*c*) The construction and removal of centering.

(*d*) The laying of the material in place, and the thorough punning of the concrete to ensure solidity and freedom from voids.

If the metal skeleton is properly coated with cement, and the concrete is solid and free from voids, there is no reason to fear decay of the reinforcement in concrete of stone, gravel, cinder, coke-breeze, etc., made with clean, fresh water.

Fire Resistance.

Experiment and actual experience of fires show that concrete in which limestone is used for the aggregate is disintegrated, crumbles and loses coherence when subjected to very fierce fires, and that concretes of gravel or sandstones also suffer, but in a rather less degree. The metal reinforcement in such cases generally retains the mass in position, but the strength of the part is so much diminished that it must be renewed. Concrete in which coke-breeze, cinders, or slag forms the aggregate is only superficially injured, does not lose its strength, and in general may be repaired. Concrete of broken brick suffers more than cinder concrete and less than gravel or stone concrete.

Rigidly attached web members, loose stirrups, bent-up rods, or similar means of connecting the metal in the lower or tension sides of beams or floor slabs (which sides suffer most injury in case of fire) with the upper or compression sides of beams or slabs not usually injured are very desirable.

In all ordinary cases a cover of $\frac{1}{2}$ inch on slabs and 1 inch on beams is sufficient. It is undesirable to make the covering thicker. All angles should be rounded or splayed to prevent spalling off under heat.

More perfect protection to the structure is required under very high temperature, and in the most severe conditions it is desirable to cover the concrete structure with fire-resisting plastering which may be easily renewed. Columns may be covered with coke-breeze concrete, terra-cotta, or other fire-resisting facing.

Materials.

Cement.—Only Portland cement complying with the requirements of the specification adopted by the British Engineering Standards Committee should be employed; in general the slow-setting quality should be used.

Sand.—The sand should be composed of hard grains of various sizes up to particles which will pass a $\frac{1}{4}$-inch square mesh, but of which at least 75 per cent. should pass $\frac{1}{8}$-inch square mesh.

* By permission.

R.I.B.A. JOINT COMMITTEE'S REPORT—*continued.*

Fine sand alone is not so suitable, but the finer the sand the greater is the quantity of cement required for equal strength of mortar. It should be clean and free from ligneous, organic, or earthy matter.

Aggregate.—The aggregate, consisting of gravel, hard stone, or other suitable material,* should be clean and angular, varied in size as much as possible between the limits of size allowed for the work. In all cases material which passes a sieve of $\frac{1}{4}$-inch square mesh should be reckoned as sand. The maximum allowable size is usually $\frac{3}{4}$ inch. The maximum limit must always be such that the aggregate can pass between the reinforcing bars and between these and the centering. The sand should be separated from the gravel or broken stone by screening before the materials are measured.

Proportions of the Concrete.—For ordinary work a proportion of 1 part cement to 2 parts sand will be found to give a strong, practically watertight mortar, but where special watertightness or strength is required the proportion of cement must be increased.

The weight of a cubic foot of cement for the purpose of proportioning the amount of cement to be added may be taken at 90 lbs.

Metal.—The metal used should be steel having the following qualities :—

(*a*) An ultimate strength of not less than 60,000 lbs. per square inch.

(*b*) A yield point of not less than 32,000 lbs. per square inch.

(*c*) It must stand bending cold 180° to a diameter of the thickness of pieces tested without fracture on outside of bent portion.

(*d*) In the case of round bars the elongation should not be less than 22 per cent., measured on a gauge-length of eight diameters. In the case of bars over one inch in diameter the elongation may be measured on a gauge-length of four diameters, and should then be not less than 27 per cent.

For other sectional material the tensile and elongation tests should be those prescribed in the British Standard Specification for Structural Steel. If hard or special steel is used, it must be on the architect's or engineer's responsibility and to his specification.

Before use in the work the metal must be clean and free from scale or loose rust. It should not be oiled or painted.

Welding should in general be forbidden ; if it is found necessary, it should be at points where the metal is least stressed, and it should never be allowed without the special sanction of the architect or engineer responsible for the design.

The reinforcement ought to be placed and kept exactly in the positions marked on the drawings, and, apart from any consideration of fire resistance, ought not to be nearer the surface of the concrete at any point than 1 in. in beams and pillars, and $\frac{1}{2}$ in. in floor slabs or other thin structures.

Mixing.—When the materials are mixed by hand they are to be turned over and thoroughly mixed on a clean platform until the colour of the cement is uniformly distributed over the aggregate. Whenever practicable the concrete should be mixed by machinery.

Laying.—The thickness of loose concrete that is to be punned should not exceed 3 ins. before punning, especially in the vicinity of the reinforcing metal. Special care is to be taken to ensure perfect contact between the concrete and the reinforcement, and the punning is to be continued till the concrete is thoroughly consolidated. Each section of concreting should be as far as possible completed in one operation† ; when this is impracticable, and work has to be recommenced on a recently laid surface, it is necessary to wet the surface ; and where it has hardened it must be hacked off, swept clean, and covered with a layer of cement mortar $\frac{1}{2}$ in. thick, composed of equal parts of cement and sand. Work should not be carried on when the temperature is below 34° Fahr. The concrete when laid should be protected from the action of frost, and shielded against too rapid drying from exposure to the sun's rays or winds, and kept well wetted. All shaking and jarring must be avoided after setting has begun. The efficiency of the structure depends chiefly on the care with which the laying is done.

Centering or Casing.—The centering must be of such dimensions, and so constructed, as to remain rigid and unyielding during the laying and punning of the concrete. It must be so arranged as to permit of easing and removal without jarring the concrete. Provision should be made wherever practicable for splaying or rounding the angles of the concrete. Timber when used for centering may be advantageously limewashed before the concrete is deposited.

---

* Coke-breeze, pan-breeze or boiler-ashes ought not to be used for reinforced concrete. It is advisable not to use clinker or slag, unless the material is selected with great care.

† In particular the full thickness of floor slab should be laid in one operation.

R.I.B.A. JOINT COMMITTEE'S REPORT—*continued.*

Striking of Centres.—The casing for columns, for the sides of beams, and for the soffits of floor slabs not more than 4 ft. span must not be removed under eight days; soffits of beams and of floors of greater span should remain up for at least fourteen days, and for large span arches for at least twenty-eight days.

Testing.—In the case of concrete made in proportions of 1 cement, 2 sand, 4 hard stone, the strength should not be less than 1,800 lbs. per square inch in compression after 28 days.

Loading tests on the structure itself should not be made until at least two months have elapsed since the laying of the concrete. The test load should not exceed one and a half times the accidental load. Consideration must also be given to the action of the adjoining parts of the structure in cases of partial loading. In no case should any test load be allowed which would cause the stress in any part of the reinforcement to exceed two-thirds of that at which the steel reaches its elastic limit.

Methods of Calculation.

DATA.

Loads.—The weight of the concrete and steel structure may be taken at 150 lbs. per cubic foot.

In structures subjected to very varying loads and more or less vibration and shock, as, for instance, the floors of public halls, factories, or workshops, the allowance for shock may be taken equal to half the accidental load. In structures subjected to considerable vibration and shock, such as floors carrying machinery, the roofs of vaults under passage ways and courtyards, the allowance for shock may be taken equal to the accidental load.

In the case of columns or piers in buildings, which support three or more floors, the load at different levels may be estimated in this way:—For the part of the roof or top floor supported, the full accidental load assumed for the floor and roof is to be taken. For the next floor below the top floor 10 per cent. less than the accidental load assumed for that floor. For the next floor 20 per cent. less, and so on to the floor at which the reduction amounts to 50 per cent. of the assumed load on the floor. For all lower floors the accidental load on the columns may be taken at 50 per cent. of the loads assumed in calculating those floors.

In the case of many warehouses and buildings containing heavy machinery it is desirable not to make any reduction of the actual loads.

Stresses in Beams.

(*a*) The coefficient of elasticity in compression of stone or gravel concrete, not weaker than 1 : 2 : 4, is treated as constant and taken at one-fifteenth of the coefficient of elasticity of steel.

	Lbs. per Sq. In.
Coefficient for concrete = E_c =	2,000,000
,, steel = E_s =	30,000,000

$$\frac{E_s}{E_c} = 15.$$

It follows that at any given distance from the neutral axis, the stress per square inch on steel will be fifteen times as great as on concrete.

(*b*) The resistance of concrete to tension is neglected, and the steel reinforcement is assumed to carry all the tension.

(*c*) The stress on the steel reinforcement is taken as uniform on a cross-section, and that on the concrete as uniformly varying.

Working Stresses.

If the concrete is of such a quality that its crushing strength is 1,800 lbs. per square inch after twenty-eight days, and the steel has a tenacity of not less than 60,000 lbs. per square inch, the following stresses may be allowed:—

	Lbs. per Sq. In.
Concrete in compression in beams subjected to bending	600
Concrete in columns under simple compression	600
Concrete in shear in beams	60
Adhesion * of concrete to metal	100
Steel in tension	16,000
Steel in shear	12,000
Steel in compression	15 times the stress in the surrounding concrete

* It is desirable that the reinforcing rods should be so designed that the adhesion is sufficient to resist the shear between the metal and concrete. Precautions should in every case be taken by splitting or bending the rod ends, or otherwise to provide additional security against the sliding of the rods in the concrete.

R.I.B.A. JOINT COMMITTEE'S REPORT—*continued.*

When the proportions of the concrete differ from those stated above, the stress allowed in compression on the concrete may be taken at one-third the crushing stress of the cubes at twenty-eight days as determined above.

If stronger steel is used, the allowable tensile stress may be taken at one-half the stress at the yield point of the steel, but in no case should it exceed 20,000 lbs. per square inch.

Beams of Rectangular and T Section.

In the calculation of all beams the area upon which the ratio of tensile reinforcement is taken is considered as a rectangle of breadth equal to the greatest breadth of the beam and of depth equal to the greatest effective depth of the beam.

In designing beams where the rib is monolithic with a slab, the beam may be considered to be of T form. The slab must first be calculated and designed, having its own reinforcing bars transverse to the rib. The whole of the slab cannot in general be considered to form part of the upper flange of the T beams. The width b_1 of the upper flange may be assumed to be not greater than one-third the span of the beams, or more than three-fourths of the distance from centre to centre of the reinforcing ribs or more than fifteen times the thickness of slab. The width b_r of the rib should not be less than one-sixth of the width b_1 of the flange.

Shear Reinforcement.

It is always desirable to provide reinforcement to resist the shearing and diagonal tension stresses in reinforced concrete beams. The diagonal tension stresses depend on the vertical and horizontal shear and also on the longitudinal tension at the point considered. As the longitudinal tension in the concrete at any given point is very uncertain, the amount and direction of the diagonal tension cannot be exactly determined.

It is the general practice to determine the necessary reinforcement by taking the vertical and horizontal shearing only into consideration.

Experience shows that:

(*a*) In general, floor slabs require no special reinforcement against shearing and that the bending up of alternate bars near the end is sufficient.

(*b*) In beams, especially in T beams, shearing reinforcement should be provided at distances apart not exceeding the depth of the beam.

(*c*) It is desirable to bend up one or more of the bars of the tension reinforcement near the supports. When bent at an angle of about 45° the effect of this may be taken into account in the manner set out above; when bent at a small angle to the horizontal the effect is very indeterminate.

(*d*) As the resistance of the shear members to the pull depends on the adhesion, and the anchorage at the ends, it is desirable to use bars of small diameter, and to anchor the stirrups at both their ends. In all cases the stirrups must be taken well beyond the centre of compression.

Slabs Supported or Fixed on more than Two Sides.

It does not appear that there is either a satisfactory theory or trustworthy experiment from which the strength of rectangular slabs supported or fixed on all four edges can be determined.

Pillars and Pieces under Direct Thrust.

DEFINITIONS.

The length is to be measured between lateral supports (neglecting ordinary bracketing).

The effective diameter of a pillar means the least width and should be measured to the outside of the outermost vertical reinforcement.

The effective area of a pillar means the area contained by the outermost lateral reinforcement, and should be measured to the outside of the outermost vertical reinforcement.

Loading and Length of Pillars.

If the load is strictly axial the stress is uniform on all cross-sections.

Lateral bending of the pillar as a whole is not to be feared, provided—

(*a*) That the ratio of length to least outside diameter does not exceed 18.

(*b*) That the stress on the concrete does not exceed the permissible working stress for the given pillar.

(*c*) That the load be central.

(*d*) That the pillar be laterally supported at the top and base.

Construction.

Lateral reinforcement properly disposed raises the ultimate strength and increases the security against sudden failure, by preventing the lateral expansion of the concrete and the sudden disruption of the pillar.

R.I.B.A. JOINT COMMITTEE'S REPORT—*continued.*

Practical considerations lead to the addition of longitudinal bars, and the formation of an enveloping network of steel.

The total cross-sectional area of the vertical reinforcement should never be less than 0·8 per cent. of the area of the hooped core.

There should be at least six vertical bars when curvilinear laterals are used, and four for square pillars having rectilinear laterals.

In the case of rectangular pillars in which the ratio between the greater and the lesser width (measured to the outside of the vertical bars) exceeds one and a half, the cross-section of the pillars should be subdivided by cross ties; and the number of vertical bars should be such that the distance between the vertical bars along the longer side of the rectangle should not exceed the distance between the bars along the shorter side of the rectangle.

The most efficient disposition of the lateral reinforcement would appear to be in the form of a cylindrical helix, the pitch or distance between the coils being small enough to resist the lateral expansion of the concrete.

Jointed circular hoops as ordinarily made are apparently not quite so efficient.

Rectilinear ties are still less adapted to resist the lateral or radial expansion of a highly stressed core.

The volume of curvilinear laterals should never be less than 0·5 per cent. of the volume of hooped core.

The diameter of rectilinear laterals should not be less than $\frac{3}{16}$ inch.

Pillars Eccentrically Loaded.

If a pillar, initially straight, is loaded eccentrically, as when a beam rests on a bracket attached to the pillar, it may be regarded as fixed at the base and free at the loaded end.

It is desirable in pillars that there should be no tension, and generally when the vertical load is considerable there is none. Cases in which the eccentricity is so great that there is tension must be treated by the methods applicable to beams if it is made a condition that the steel carries all the tension.

Long Pillars Axially Loaded.

For columns more than 18 diameters in length there is risk of lateral buckling of the column as a whole. The strength of such pillars would be best calculated by the Gordon-Rankine formulæ.

LONDON COUNTY COUNCIL (GENERAL POWERS) ACT, 1909.

REINFORCED CONCRETE REGULATIONS—(MADE JULY 1915).*

The following brief summary is intended merely to indicate the scope, and give the principal approved data.

Nothing in these Regulations interferes with the application of the formulæ, etc., for the designing of reinforced concrete structures given in the following pages.

Part I. defines reinforced concrete and indicates the application of the same to buildings whose skeleton framework, together with any party walls, is capable of safely and independently sustaining the whole of the dead and superimposed loads.

Floors, main stairs, and landings must be of incombustible material; internal stairs and landings may be of fire-resisting materials; and roofs may be of wood framing, boards, and battens.

No part of the reinforcing metal is to be used for conducting electrical currents.

Notices to be served on, and plans and calculations to be provided to the District Surveyor are detailed.

---

* Where fuller information is desired, the complete Regulations should be referred to. A reprint of the Regulations, with useful notes, illustrations, and worked examples, has been published by B. T. Batsford, Ltd., 94 High Holborn, London (price 3*s.* net).

Part II.—Superimposed Loads.

On Floors: Equivalent dead loads.

For a floor intended to be used for the purpose of	Equiv. dead load in lbs. per sq. ft.	For a floor intended to be used for the purpose of	Equiv. dead load in lbs. per sq. ft.
Domestic buildings not hereinafter specified	70	Music halls	112
Other similar purposes		Public assembly	
Asylum wards		Public concert rooms	
Common lodging-house bedrooms		Public library reading rooms	
Hospital wards	84	Retail shops	
Hotel bedrooms		Theatres	
Workhouse wards		Workshops	
Other similar purposes		Other similar purposes	
Counting houses	100	Ball rooms	150
Offices		Drill rooms	
Other similar purposes		Other similar purposes	
Art galleries	112	Similar floors subject to vibration	
Chapels		Book stores at libraries	
Churches		Museums	
Classrooms in school buildings, not being dwelling houses so used		For every floor in a building of the warehouse class, except such floors as are intended to be used for any of the purposes aforesaid—not less than	224
Lecture rooms			
Meeting rooms			

On Stairs and Landings: Minimum to be equal to a distributed dead load of 120 lbs. per square foot, but each step must be capable of safely supporting a concentrated load of 300 lbs. at any point.

On **Roofs** of greater upward inclination than 20° with the horizontal, a superimposed load (including wind pressure and weight of ice) of ' 28 lbs. per square foot of sloping surface, normal to such sloping surface, on either side of such roof.' On all other roofs, ' 56 lbs. per square foot measured on a horizontal plane.'

On floors, stairs, landings, or roofs, other than those indicated, the actual superimposed load must be provided for, ' with an equivalent margin of safety.'

For **Rolling Loads** actuated by mechanical power, take an equivalent static load equal to 1½ times the actual rolling load and provide for the stresses due to every position of such load.

Partitions and other Structures on floors or roofs whose weight exceeds the superimposed load must be specially provided for.

For calculating the **Resistance Moment**, the angle of dispersion of a point load through hard filling and concrete may be taken at not more than 45° from the vertical.

For **Buildings of more than two storeys in height** the loads on foundations, pillars, and walls may be reduced, as in Steel Regulations (para. 19, page 382).

Wind Pressure to be equal to a static horizontal pressure of not less than 20 lbs. per square foot of the whole projected surface normal to the wind direction. On **panels of external walls** allow for not less than 30 lbs. per square foot ' assumed as acting uniformly over the area of one panel from either side.'

For **all structures or attachments to buildings** (including towers or other parts extending above the roof, etc.), allow for not less than 40 lbs. per square foot of whole projected surface normal to direction of every wind.

Weight of Reinforced Concrete to be taken at not less than 144 lbs. per cubic foot measured over finished surfaces.

The **span of a beam** shall not be greater than twenty times its effective depth, unless the maximum tensile or compression stresses are correspondingly reduced below the maximum stresses recognised in these regulations.

The **length of a Cantilever** shall not exceed five times its effective depth at the bearing.

Bending Moments.—For the purpose of calculation the effective span of a beam or slab shall be taken as the clear span plus the effective depth, or the span to centres of bearings whichever is the lesser.

The values for the **bending moments due to various loadings** may be obtained graphically by means of the diagrams on pp. 292, 293, except for type loading (h), where these

regulations call for equal maximum moments at centre and at ends (to obtain the former by diagram, make value of $A=\frac{1}{6}\ Wl$).]

For Continuous Beams or Slabs the maximum positive and negative bending moments in each span may be calculated for all necessary arrangements of loading to same and to adjoining spans. Or the approximate maximum bending moments may be taken as follows :— Near middle of end span, at support next to end support, and at other interior supports, $=\frac{1}{10}$ total load × effective span ; at middle of interior spans, $=\frac{1}{12}$ total load × effective span.

For Slabs reinforced with mesh reinforcement, or reinforced in two directions at right angles to each other, the bending moments in each direction may be obtained from the table on page 455 (Reinforced Concrete Construction Section), the accepted values being those marked 'Grasnof and Rankine.'

For all loadings other than those indicated, the actual bending moments shall be calculated 'so as to give an equivalent margin of safety.'

The permissible working stresses in concrete, except as further provided for in pillars, shall not exceed the following :—

Stresses in Concrete.	Proportion by Volume.											
	Cement.	Sand.	Coarse Material.	Cement.	Sand.	Coarse Material.	Cement.	Sand.	Coarse Material.	Cement.	Sand.	Coarse Material.
	1	2	4	1·2	2	4	1·5	2	4	2	2	4
	V=6			V=5			V=4			V=3		
	Lbs. per Sq. In.			Lbs. per Sq. In.			Lbs. per Sq. In.			Lbs. per Sq. In.		
Direct compressive stress.	600			650			700			750		
Extreme flexural compressive stress in beams .	600			650			700			750		
Shearing stress . . .	60			65			70			75		
Grip or adhesion between concrete and steel bars hooked at both ends .	100			100			100			100		
Grip or adhesion between concrete and steel bars otherwise effectively anchored at the ends .	60			60			60			60		
Tensile stress	Nil			Nil			Nil			Nil		

If V is less than 3 the stresses in the last column shall not be exceeded.

The permissible working stress in steel shall not exceed the following :—

Stress in mild steel complying with the British Standards Specification . . .	Pounds per square inch.
Compressive stress	m times the stress in the concrete immediately surrounding the steel.
Tensile stress	16,000.

Eccentric loading stresses must be provided for.

For Hooks or Anchors to ends of tensile and shear reinforcement, and for **Grip Lengths**, refer to Regulations.

The elastic modulus of steel in tension or compression shall be taken at 30,000,000 lbs. per square inch.

The modular ratio for steel and concrete shall be taken as follows :—

For beams . . . . . $mc=9{,}000$ or $m=\frac{9{,}000}{c}$

For pillars with the minimum of hooping or binding . $mc=9{,}000$ or $m=\frac{9{,}000}{c}$

For pillars with more than the minimum of hooping or binding . . . . . $mi = 9{,}000$ or $m = \frac{9{,}000}{i}$

Where c = permissible *compressive* working stress given in preceding table;
i = *increased* stress allowed in pillars with more than the minimum of hooping or binding (see PART IV.).

Part III

The term 'beam' shall include any beam, girder, lintel, bressummer, or cantilever, or any other similar member carrying transverse loads.

Longitudinal bars must be at least $\frac{1}{4}$ inch in diameter, **all other reinforcing bars** being not less than $\frac{1}{4}$ inch in diameter.

Distance apart of bars at least 1 inch horizontally and $\frac{1}{2}$ inch vertically, except at joints or crossings of bars.

Tensile reinforcement to be not more than 6 inches apart.

Compression reinforcement must not be stressed to more than m times the stress in the immediately surrounding concrete, and be anchored by bars extending through a depth at least equal to the resistance moment arm, and spaced not further apart than this resistance moment arm or than sixteen times the least diameter of the anchored bar.

Where all compression stress is taken by steel rods, these may be stressed to 16,000 lbs. per square inch, and be anchored laterally and vertically not further apart than 6 inches or than eight times the diameter of the anchored bars; the anchors to be passed round or hooked over both the compressive and the tensile reinforcement.

If **hooping** is adopted, the compression stress for $\frac{1}{4}$ span from each end may be taken as that for the core of a similarly hooped pillar; the concrete outside the hooping must not be taken into account.

Shear and Web Reinforcement.—Regulations are provided as to the value of concrete alone, and with the addition of rods; and as to spacing, and anchoring of shear rods to the main reinforcing bars, etc.

Splays at ends of beams intended to increase the resistance moment must not be calculated at a greater angle than 30° from the horizontal.

Brackets acting as cantilevers must be suitably reinforced.

Slabs.—The effective depth must not be less than 3 inches, and $\frac{1}{4}$ inch to be the least diameter or thickness of reinforcing bars. Any tension cross wires, in mesh or similar reinforcement, to be at least $\frac{1}{10}$ inch in diameter or thickness. Tension bars to be at least 1 inch apart, except at joints or crossings. Mesh reinforcement to be of such dimensions as to allow the concrete to freely pass through the same.

Tension bars or strands to be not further apart than 12 inches, or more than twice the effective depth. When reinforced in one direction only, distributing bars must be provided on top and at right angles to the main bars; these distributing bars to be not more than 18 inches apart, and have an aggregate cross-section of at least 0·08 per cent. of effective cross-section of the slab; or the diameter of each distributing bar must be at least $\frac{1}{15}$th of the effective depth of the slab, and spaced not more than four times the effective depth apart. Wiring or binding shall not be regarded as reinforcement.

Resistance Moments.—Tee beams.—The breadth of the flange shall not be more than $\frac{1}{4}$ of the effective span, or the distance between the centres of the ribs of the tee beams, or twelve times the thickness of the slab, whichever is the least.

Ell beams.—The breadth of flange shall not be more than four times the thickness of the slab, except where the moments due to the eccentricity of the compression are provided for, when six times the slab thickness is permitted.

The **breadth of the rib** of a tee or ell beam shall be not less than $\frac{1}{3}$ depth of rib below the slab.

Buckling in rectangular beams to be provided for when length exceeds twenty times the least width, or thirty times the least width over the outermost longitudinal reinforcement.

A beam supported at its end by a transverse beam must have special provision made as to connecting together, and resisting shear and torsion.

Notes must be added to drawings or diagrams of beams or pillars showing the loads which have been provided for.

Complete formulæ are given for rectangular and tee beams, but these are similar to the data given on pp. 451, 452, 453 (Reinforced Concrete Construction), to which reference may be made.

Part IV.

Pillars shall include piers, posts, columns, detached supports, or any other **vertical** compression member; struts any compression member at any angle.

In calculations for strength, the maximum ratio of length to gyration radius, or of length to effective diameter, shall be taken, the length being measured between the lateral supports irrespective of any splays other than allowed for beams, and the effective diameter to be that over the outermost vertical rods.

Vertical and lateral reinforcement must be provided to all pillars, four full length verticals for rectangular laterals (binding) not less than $\frac{3}{16}$ inch in diameter, and six verticals to curvilinear laterals not less than $\frac{1}{8}$ inch diameter.

Pitch of laterals (binding) shall not exceed $\frac{8}{10}$ effective diameter at any part in length, or sixteen times the diameter of the least vertical. For a length of one and a half times effective diameter at each end, laterals to be spaced not more than $\frac{3}{10}$ effective diameter. All laterals to be firmly secured at each end. The **volume of laterals** to be not less than 0·5 per cent. of the volume of the hooped core.

Verticals to be not less than $\frac{1}{2}$ inch or more than 2 inches in diameter, and have a minimum total cross-section of 1·0 per cent. of the volume of the hooped core. **Joints in verticals** to be made at or adjacent to points of lateral support, and lapped at least twenty-four times the diameter of the upper rod.

In **Rectangular Pillars,** where the ratio between the greater and the lesser diameter exceeds $1\frac{1}{2}$, the cross-section shall be subdivided by cross ties, and the distance apart of verticals in the longer side be not greater than that in the shorter side.

(*As the rules and tables given for calculating the strength of pillars are largely empirical, they are included here in full.*)

Notation for pillars, struts and other compression members.

113.—

A = effective *area* of the pillar, *i.e.* the *area* bounded by the lateral reinforcement (binding) measured to the inside of the hooping.

A_b = cross-sectional *area* of one bar of the *binding* or lateral reinforcement.

A_v = *area* of the *vertical* reinforcement.

c = permissible direct *compressive* stress.

d = effective *diameter*.

f = *form* factor, depending upon form or type of binding or laterals (para. 118).

g = *gyration* radius of the area $[A + (m-1)\ A_v]$ about an axis passing through the centroid of the area.

i = *increased* stress permissible in the core of a pillar suitably hooped.

l = actual *length* of the pillar.

m = *modular* ratio $= \frac{E_s}{E_c}$.

P = *permissible* load or *pressure* on pillars with both ends fixed and with a ratio of virtual length to gyration radius not exceeding 45 (para. 122).

p = *percentage* of volume of binding or lateral reinforcement with respect to the volume of hooped core in any given length of pillar $= 100\ V_v$.

p_b = *pitch* of the *binding* or lateral reinforcement.

s = *spacing* factor depending upon the spacing or pitch of the binding or laterals (para. 118).

V_v = *volume* ratio or *ratio* of the *volume* of binding or lateral reinforcement to the volume of the hooped core in any given length of pillar (paras. 116, 117).

v = *virtual* length of the pillar, strut or other compression member for different conditions of the ends (paras. 122, 124).

114.—A pillar, or other strut, shall be deemed to have fixed ends when the ends are sufficiently secured to other parts of the construction having such rigidity as will maintain the axis at the ends in its original position and direction under all loads less than the crippling load.

115.—In a pillar with fixed ends the stress in the concrete in the area bounded by the lateral reinforcement shall not exceed

c, in a pillar with the minimum of hooping or binding,

i, in a pillar with more than the minimum of hooping or binding, where

$$i = c\ [1 + f\ s\ V_v]$$

116.—The required ratio of the volume of binding or lateral reinforcement to the volume of the hooped core may be obtained from the equation—

$$V_v = \frac{i-c}{c\,f\,s}.$$

117.—The value of V_v actually provided, in either round or square pillars, may be ascertained by direct measurement or from the equation—

$$V_v = \frac{4\,A}{d\,p_b}.$$

118.—

Table showing the value of fs.

Form of Lateral Reinforcement or Binding.	Form Factor *f*.	Spacing of Laterals throughout the length of the Pillar (in terms of diam. of hooped core).	Spacing Factor *s*.	Value of *fs*.
Helical (curvilinear on plan)	1·0	0·2*d*. or less	32	32
Ditto ditto	1·0	0·3*d*.	24	24
Ditto ditto	1·0	0·4*d*.	16	16
Circular hoops	0·75	0·2*d*. or less	32	24
Ditto	0·75	0·3*d*.	24	18
Ditto	0·75	0·4*d*.	16	12
Rectilinear	0·5	0·2*d*. or less	32	16
Ditto	0·5	0·3*d*.	24	12
Ditto	0·5	0·4*d*.	16	8
Ditto	0·5	0·5*d*.	8	4
Ditto	0·5	0·6*d*.	0	0

119.—Notwithstanding any other provision in these regulations the increased stress in the concrete of pillars shall not exceed one-third of the ultimate compressive resistance at four months as given in subsequent table.

120.—The working stress in the vertical reinforcement shall not exceed m times the stress in the concrete.

121.—The permissible load or pressure on pillars with both ends fixed and with ratios not exceeding those in the first column of figures in table below shall be obtained from either of the equations—

For pillars with the minimum of hooping or binding

$$P = c\,[A + (m-1)\,A_v]$$

For pillars with more than the minimum of hooping or binding—

$$P = i\,[A + (m-1)\,A_v]$$

122.—For pillars the permissible load or pressure shall be obtained from the following table :

For the maximum ratio of *virtual* length to *gyration* radius	$\frac{v}{g}$ =	45	54	63	72	81	90
For the maximum ratio of *virtual* length to effective *diameter* for square pillars	$\frac{v}{d}$ =	15	18	21	24	27	30
For the maximum ratio of *virtual* length to effective *diameter* for round pillars	$\frac{v}{d}$ =	12	15	18	21	24	27
Permissible load		P	0·8 P	0·6 P	0·4 P	0·2 P	Nil

For other ratios higher than those in the first column of figures the stress shall be proportional to the above.

123.—Struts shall be subject to all the rules applying to pillars, and the combined stresses at any part shall not exceed the permissible stresses for pillars of like ratios.

124.—For the different conditions of the ends of pillars and other struts mentioned in the

following table, the permissible load shall be ascertained by using the corresponding value of the virtual length in such table in conjunction with paras. 121 and 122:

Condition of Axis at Ends.	Virtual Length, v.
Both ends fixed in position and direction	$v=l$
One end fixed in position and direction and One end fixed in position but not in direction	$v=1{\cdot}4l$
Both ends fixed in position but not in direction	$v=2l$
One end fixed in position and direction and One end not fixed in position and direction	$v=4l$

125.—In the case of arches or other similar constructions the combined stresses at any part shall not exceed the permissible stresses set out in Table of Working Stresses for Beams.

Part V.

External enclosure walls of reinforced concrete formed between reinforced concrete framework must be designed for any loads they may have to carry, but must not be less than 4 inches thick. Where they support vertical loads or resist lateral pressures they must be of the necessary thickness to keep the stresses within the prescribed limits. For enclosure walls of brickwork, stonework, or plain concrete, the topmost 20 feet of their height must be not less than 8½ inches thick, and 13 inches thick for all lower portions. If the walls are formed of hollow blocks, the following minimum dimensions are required. Aggregate thickness, including any cavity, 8½ inches; sides, 2 inches; ends and any interior partitions, 1 inch; clear unsupported span of any part of side, end, or interior partition, four times the least thickness of such part; and aggregate thickness of material, measured at right angles to face of wall, 6 inches.

Any less thickness of walls prescribed under the London Building Act, 1894, may be adopted; but any external wall or portion of same, not supported or secured by the reinforced concrete framework, must comply with the requirements of the above Act.

All walls and facing materials shall be incombustible, and securely connected to the reinforced concrete framework.

Each panel in any external wall must be designed to safely resist a horizontal pressure equal to a static pressure of at least 30 lbs. per square foot, assumed to act uniformly over the area of one panel from either side.

The aggregate area of openings in external walls shall not exceed in a wall of any storey above the ground storey two-thirds of the whole area of such wall, nor the aggregate width three-fourths of the whole length of such wall.

Party and division walls in reinforced concrete shall be not less than 8 inches thick, but party walls between a reinforced concrete building and a steel framed building, or a building constructed in accordance with rules of the London Building Act, 1894, shall in no part be less than 13 inches thick.

All brickwork, stonework, and plain concrete shall be executed in Portland cement mortar.

The pressure on any brickwork supporting reinforced concrete work shall not exceed the values given under Steel Regulations, page 384.

The height of such brickwork with proper lateral supports must not exceed twelve times its least thickness; if without proper lateral supports, six times its least thickness. This thickness must in no case be less than 13½ inches.

Part VI.

The pressure of foundations on the natural soil, or on plain concrete, shall not exceed the values given under Steel Regulations, page 383.

Part VII.

Protection (measured from outer surface of concrete to outer surface of reinforcement) shall not be less than the following values:—Beyond the anchored ends of hooked or upward bent bars, 2 inches, or twice the normal diameter of the bar; vertical bars in pillars, 1½ inches, or the diameter of the vertical bar; longitudinal bars in beams, 1 inch, or the diameter of the longitudinal bar; tensile, compressive, shear, or any other slab reinforcement, ½ inch, or the diameter of bar to be covered; and any reinforcement in any other member, 1 inch, or the diameter of the bar to be covered.

Part VIII.

Materials.—The **Cement** shall be Portland cement of slow setting quality and to British Standard Specification, and one cubic foot of same shall be assumed as weighing 90 lbs. The **Sand** shall be clean and gritty, of hard silicious grains, and free from clay, animal, vegetable, or bituminous matter. It must be capable of passing through a mesh $\frac{5}{16}$ inch square, measured in the clear, and must be separated from the coarse materials before measuring. The **coarse material** (which includes all the ingredients in the concrete except the sand, cement, and water) shall consist of clean Thames or pit ballast or gravel, hard stone, such as granite, basalt, trap rock, or other hard and equally suitable material, and free from clay or any animal, vegetable or bituminous matter. If necessary this material shall be thoroughly washed.

The following materials shall not be used with the sand or coarse material in the composition of concrete :

(*a*) Coal residues, including clinkers, cinders, ashes, coke breeze, pan breeze, slag, and other similar material.
(*b*) Blast furnace slag, copper slag, forge breeze, dross, and other similar material.
(*c*) Sulphates, including plaster of Paris, and other similar material.
(*d*) Limestones, magnesian limestones, marbles, and other calcium carbonates.

The coarse material must pass through a mesh $\frac{3}{4}$ inch square, measured in the clear, and be retained on a mesh $\frac{3}{16}$ inch square, measured in the clear ; it shall be varied as much as possible between these limits. If the material is of a porous nature, it must be thoroughly wetted before mixing with the other materials.

The **volume** of mortar shall be in excess of that required to fill the voids in the coarse material. The volume of sand shall not be more than twice the volume of cement, nor the coarse material twice that of the sand.

The **concrete** shall be composed of cement, sand and coarse material in one of the following or intermediate proportions, and the ultimate compressive resistance shall not be less than that specified for the proportion adopted :

Proportion by volume.			V	*Ultimate* compressive resistance in pounds per square inch.		Value of one-fourth of u_4
Cement.	Sand.	Coarse material.		1 month after mixing, $=u_1$	or, 4 months after mixing, $=u_4$	
1	2	4	6	1,600	2,400	600
1·2	2	4	5	1,800	2,600	650
1·5	2	4	4	2,000	2,800	700
2	2	4	3	2,200	3,000	750

Test cubes shall be not less than 4 inches each way in dimensions, or **test cylinders** not less than 6 inches each way ; the preparing, setting, maturing, and testing of such pieces should, as far as possible, conform to the actual conditions under which the work would be carried out.

All three materials shall be thoroughly mixed dry in batches, and again mixed after wetting. Salt water shall not be used for the concrete.

The concrete shall be placed in its final position before initial set has taken place. For beams, pillars and walls the thickness of the layers of loose concrete shall not exceed three inches before ramming.

As soon as possible after mixing, the concrete shall be properly rammed into the moulds, so as to secure a compact mass, without voids and of the greatest possible density for the proportions used.

All metal reinforcement shall be of steel to the British Standard Specification for structural steel for bridges and general building construction (see page 264).

All reinforcement metal shall be cleaned of all scale, dust and loose rust, immediately before depositing the concrete.

No welding shall be employed in any tensile reinforcement.

The builder or other person directing the work shall furnish the District Surveyor with reasonable proof as to the quality of materials to be used in such construction, and shall make any tests which shall be reasonably necessary.

If testing during the construction or within two months after the completion of the reinforced concrete construction is found necessary by reason of any sign of weakness or faulty work

A Book
of Interest to *you*

'EVERYDAY USES OF PORTLAND CEMENT'

(FOURTH EDITION)

A Practical Handbook on the many and varied uses of Portland Cement and Concrete

470 PAGES 400 ILLUSTRATIONS

NOW READY
at
7/6
NETT

Send your order now enclosing remittance to

The CEMENT MARKETING CO. LTD.

8 Lloyd's Avenue
London, E.C. 3.

Telephone:
Avenue 5690
—10 lines—

Telegrams:
PORTLAND, FEN,
——LONDON——

F. 446

Important New Work to be Published shortly.

PORTLAND CEMENT AND LIME PRODUCTION

Practical Treatise on the Building, Installation, and Working of Modern Cement and Lime Plants

BY

WILLIAM ALDEN BROWN,

A.M I. Mech. E., Assoc. A.M. Soc. C.E., F.G.S., CONSULTING ENGINEER,
Author of 'The Portland Cement Industry.'

FULLY ILLUSTRATED.

EXTRACTS FROM REVIEWS OF MR. BROWN'S PREVIOUS BOOK

('The Portland Cement Industry.')

'The whole subject has been fully dealt with, and it undoubtedly will rank one of the best if not the first work of reference, and certainly should have a prominent place on the bookshelf of those interested in whatever way in Portland Cement.'—*Stone Trades Journal.*

'The Trade will be under a debt of gratitude to the author for the care he has taken in compiling his facts.'—*Mining World.*

'Mr. William Alden Brown provides a valuable practical treatise on the building, equipping, and economical running of a Portland Cement Plant.'—*Glasgow Herald.*

'Every Architect should study this book.'—*Building News.*

'An up-to-date treatise on an important British industry. The book is well written.'—*The Scotsman.*

'The present manual is very concise and the information is well arranged.'—*The Times Engineering Supplement.*

'The author writes with an intimate and wide practical experience of Cement Manufacture.'—*Vulcan.*

'The book is eminently practical and deserves serious consideration.'—*Nature.*

'Mr. Brown is well qualified to deal with his subject.'—*Western Mail.*

'Such a book cannot fail to be helpful and serviceable in a high degree to the industry or those about to enter it.'—*Contract Journal.*

'An exceedingly practical treatise on making Portland Cement, by an author who has studied his subject.'—*Iron and Coal Trades Journal.*

'Mr. Brown writes with authority and skill.'—*Cardiff and South Wales Journal of Commerce.*

'In Mr. W. A. Brown's book will be found not only descriptions of the various Machinery required, in an up-to-date Cement Factory, but a detailed and careful analysis of the cost of manufacture.'—*The Architect and Contract Reporter.*

'Mr. Brown joins in the demand for renewed exertion, and finds his opportunity for urging greater enterprise and alertness by discussing the present position and prospects, of the Portland Cement Trade.'—*Engineering.*

'A practical Treatise such as this, dealing with the building, equipping, and economical working of manufacturing plant will be welcome.'—*Practical Engineer.*

'Mr. Brown has written with knowledge of his subject from the points of view of past and present.'—*The Illustrated Carpenter and Builder.*

'Mr. Brown's book can be read with profit by the buyer who desires to assure himself that he is getting the best article. We cordially recommend this work to municipal Engineers.'—*Surveyor.*

London: CROSBY LOCKWOOD & SON,
7 STATIONERS' HALL COURT, LUDGATE HILL, E.C. 4.

F. 447

appearing, the builder or other person directing the work shall make such tests, and, if these show faulty work, it shall be reconstructed and reinstated in accordance with these regulations.

The total deflection of beams or slabs freely supported and carrying the uniformly distributed working load shall not exceed 1/600th of the span, when the span is twenty times the effective depth, and shall be in proportion for other ratios of span to depth, and for other conditions of ends and stress and loading.

The superimposed test load shall be one and a half times the superimposed load.

Loading tests shall not be made earlier than 90 days after laying the concrete.

Part IX.

The formwork or centering shall be of such dimensions and so constructed as to remain rigid during the laying, ramming, and setting of the concrete.

The vertical strutting shall be maintained continuous through the lower storeys to the foundations or to other floors or beams which are sufficiently set to afford the required safe support, and all formwork or centering shall be removed without shock or vibration.

Before the formwork or centering under any beam or floor slab is removed, the pillars below such beam or floor slab shall be partially stripped to allow of complete examination on all sides.

Part X.

All reinforcement shall be placed and maintained in the position shown on the drawings, and the concreting in any member shall be carried out as continuously as possible.

Where work has to be recommenced on a surface which has hardened, such surface shall be well hacked, swept clean, thoroughly wetted, and covered with mortar composed of equal volumes of cement and sand.

Concrete laid during dry weather shall be protected against too rapid drying. During the first week of hardening it shall be kept damp by wet sacking or other methods, or by watering daily (Sundays and holidays included).

Concrete shall not be laid when the temperature is below 4° C. (39° F.), and shall be protected when necessary.

Concrete or mortar which has been frozen shall not be used.

The concrete or mortar in any member which has been exposed to frost during the first week of hardening shall be removed, or such members shall be tested as previously provided.

No cutting for piping or any other purpose shall be done which would reduce the strength of any part of the structure below the standard required by these regulations.

Blocks or strips of hard wood, coke breeze, or other equally fire-resisting material may be embedded in the concrete and used solely for fixing purposes, provided that they do not reduce the strength of any part of the structure below the standard required by these regulations, and the area of such blocks or strips at any given cross-section is not included in the calculated compression area of any beam, slab, pillar, or other constructional member.

Soft wood or other equally combustible material shall not be embedded in the concrete.

Wood or other combustible material may be placed on or over the surface of the concrete, provided that any voids or hollow spaces between the combustible and incombustible materials be filled up with incombustible materials.

SYSTEMS OF REINFORCED CONCRETE CONSTRUCTION.

Although there exists a considerable number of so-called independent systems of reinforced concrete construction, the principles underlying the same are in every way similar, and it is only in the manner in which these principles are carried out that any difference arises. The several systems can be readily divided into groups, and the following notes will be sufficient here to indicate wherein one differs from another :—

Systems which make use of Plain Steel Rod Reinforcing Bars.

In the Hennebique system, the main bars are set parallel to the lower or tension face of the beam, some being, where necessary, bent or cranked upwards towards the upper face (as where the beam is continuous over a support). In addition to these bars, flat stirrups are hooked at intervals over the lower bars, and carried upwards towards the upper part of the beam ; these bind the concrete and steels securely together, and assist largely in resisting the shearing stresses. For columns or piles, the rods are grouped symmetrically about the centre of the pile, and are tied together at intervals by means of straps or wire lacing.

The Coignet system is in many respects very similar to the Hennebique, except that generally a number of smaller rods are used, these being in turn bent upwards as they approach the ends of the beam. A continuous top bar is also provided, to which the bent-up members are securely tied or laced. Any additional stirrups or binding ties which are necessary are formed of small

section round bars, varying from $\frac{3}{16}$ in. to $\frac{1}{2}$ in. diameter; these are laced or tied between the lower or main tension bars and the upper bar.

In the Considère system, the portions of any structure under compression are provided with a close-set spiral of steel wire or small-section steel rod, which, by surrounding the concrete and preventing its displacement, enables the enclosed portion to resist safely very high compressive stresses.

A number of other systems in which plain bars are used have recently appeared, the difference between them being in the manner in which the several bars are connected together, and the method of providing for shearing stresses, and for connecting the shear bars to the main bars. Of these might be mentioned the types supplied by the British Reinforced Concrete Engineering Company, the Lewis Construction Company, etc.

Systems in which Bars of Special Sections are utilised.

The Trussed Concrete Steel Company own the 'Kahn' bar and the 'Rib' bar. The former consists of a square or other section bar provided with two projecting wings which can be sheared and bent up to form stirrups or shear members. As these members form part of the main bar there is no possibility of displacement or slipping occurring between the shear and the main bars. From this method of construction it will be obvious, however, that the length and spacing of these shear bars are limited, but in practice it is very seldom that this is in any way objectionable. The rib bar is of round section provided with four ribs or projections running the full length of the bar; cross ribs are set at frequent intervals between the longitudinal ribs, so as to form pockets or recesses into which the concrete can key.

The Indented Bar and Concrete Engineering Company, Ltd., possess a square and a round bar provided throughout their full length with a series of depressions and ridges all round; it is claimed that by arranging the depressions and ridges on opposite sides of the bar the full section of the bar is retained throughout its length. By this formation a mechanical bond or key with the concrete is provided which it is claimed greatly increases the key between the bar and the concrete.

In the Perfector System a round bar with a continuous rib or fin is used, this fin being provided with perforations through which the shear members, etc., are passed.

Other bars providing a mechanical bond are sometimes used, notably some American patents such as the 'Ransome,' which consists of a twisted square rod, etc.

Systems in which the Reinforcement consists of a Metallic Meshwork.

The Expanded Metal Company supply sheets formed from steel sheets of various thicknesses which, by special machinery, have been slit or slotted and expanded to form a metallic network. By embedding this network in the correct position in a concrete beam or floor slab, the necessary metal to resist the tension stresses is provided in a satisfactory and simple manner. For detailed information regarding this material and system, see p. 344.

The Lock Woven Mesh System consists of a mechanically woven fabric made of steel wires crossing at right angles and secured at the intersections.

Reinforced Concrete or Fire-Resisting Floors.

Numerous systems of these are on the market, but they can be grouped together into types, of which the following may be noted:—

(1) A series of hollow or solid blocks of fireclay, concrete, or other material are laid at short distances apart, and the space between same filled up with concrete or cement grouting, with steel rods embedded in same. In this way a series of reinforced concrete beams are formed surrounding the blocks. Where the area to be covered is approximately square, or the proportion of length to breadth does not much exceed 2 to 3, these reinforced concrete beams can be formed on all four sides of the blocks; but where hollow blocks are used, the open ends must be closed up, or provision made to prevent the concrete finding access into the hollows which are intended to lighten the weight of the floor. Of this type may be mentioned the 'Kleine,' the 'Fram,' Diespeker's 'Bigspan,' etc.

(2) Hollow blocks, usually of arched formation, and of a width or span of from 2 to 3 feet, or over, are laid between and supported by lines of rolled steel beams, or of reinforced concrete beams, these latter being made either at works, and delivered and erected complete, or formed *in situ* during the construction of the floor. A level floor surface is obtained by a light filling of breeze concrete over the blocks. Where steel beams or finished reinforced concrete beams are used, the floor can be erected without the use of centering. The dispensing with large masses of wet concrete minimises all trouble due to dripping from the new floor, and allows it to be used immediately after it has been erected. Floors of this nature are manufactured by Messrs. D. G. Somerville & Co., the Armoured Tubular Floor Company, etc.

K. HOLST & Co

Engineers & Contractors

Of **1 VICTORIA STREET, WESTMINSTER, S.W. 1**

Telephone: Victoria 4234. Telegrams: 'Ferrolst Vic, London.'

accept full responsibility for both the design and the construction of every ferro-concrete structure they erect.



Bridge for Hertfordshire County Council.

Enquiries are Invited for

BRIDGES
WAREHOUSES & FACTORY BUILDINGS
WATER TOWERS & RESERVOIRS
WHARVES & JETTIES
BUNKERS & SILOS
FOUNDATIONS

and all Types of Engineering Structures in

FERRO-CONCRETE

Designs and Estimates Free. Write for Brochure.

Ransome

ALL BRITISH

CONCRETE MIXERS

made by the largest manufacturers of Concrete Machinery in Europe (highest quality only) and preferred by those who 'KNOW' all over the world. Ransome Mixers are the most scientifically designed and the most substantially built. As a result Ransome Mixers turn out BETTER CONCRETE, in LESS TIME, at LESS OPERATING COST, and they LAST LONGEST. Models and sizes to meet all needs profitably.

RANSOME 'NEW-PRINCIPLE' AERO MIXER

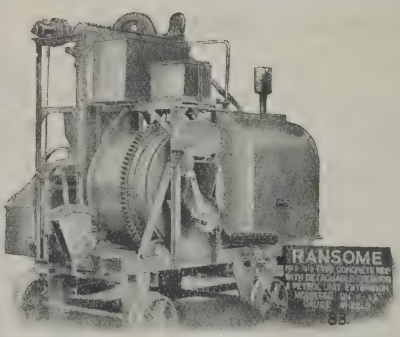
(for reinforced work) produces **MUCH STRONGER** Concrete than has ever been produced before, and at LESS COST, by proportioning and mixing the ingredients by a revolutionary new method that is **100%** efficient.

Write for Catalogues to Dept. Y,

RANSOME MACHINERY CO. (1920), LTD.

14-16 GROSVENOR GARDENS, LONDON, S.W.1.

Telephone: Victoria 8060.



ASK Dept. Y for these CATALOGUES:

Concrete Mixers.

Concrete Hoisting and Placing Equipment.

Concrete Tip-carts.

Wagon Loaders.

Steel Piling.

Piling Equipment.

Tar-Macadam and Asphalt Plant.

A modification of this floor consists in the use of half-arch shaped blocks, which are set into the webs of steel beams, and brought together at the centre where they are lightly grouted at their meeting edges. A levelling-up covering of breeze concrete completes the floor. This type is represented by the 'Fram' arched floor, the 'Carlisle' tubular arch floor, etc.

(3) Concrete tubes of various sections and of considerable lengths may be formed, and reinforced where necessary with steel rods or wire. By placing these close together, it is only necessary to grout in between the joints in the several tubes to complete the floor ready for any top finish: the advantage of a dry laid floor is thus secured. The 'Siegwart,' etc., provide this type of floor.

(4) Floors may be formed of solid concrete slabbing reinforced with plain or special section bars as required, and supported by rolled-steel beams or reinforced concrete beams. Such types are supplied by any reinforced concrete contractor.

(5) Floors provided with a continuous mesh reinforcement :—The floors provided by the Expanded Metal Company and by the Lock Woven Mesh Company may be taken as examples of this class.

Other types of floors are to be met with, each possessing some particular qualification or arrangement peculiar to itself.

DESIGNING REINFORCED CONCRETE STRUCTURES.

Concrete is very strong under compression, but weak under tension. Good average concrete will safely resist a compressive stress of from 600 to 700 lbs. per square inch of section; its tensile strength does not exceed about one-tenth of this value, and may altogether disappear through the formation of minute cracks.

Concrete and steel possess practically the same coefficient of expansion, and therefore expand and contract together under changes of temperature, without developing internal stresses.

Concrete adheres strongly to a clean surface of steel; the average safe adhesion can generally be taken as about 100 lbs. per super. inch. It is thus possible to form a practical and economical combination of concrete and steel, the former material being utilised to resist the compressive stresses, with the necessary steel bars embedded at the points where tensile stresses occur. In certain cases, where the concrete alone cannot provide all the necessary compressive resistance, steel rods are added to assist the concrete; but from an economical point of view this should be avoided whenever possible, for the following reason :—

Steel possesses, on an average, about fifteen times the elasticity of concrete: where steel bars are embedded in concrete to assist in resisting compression, it follows that when the concrete around the bars has been stressed up to its limit, the steel has been compressed to fifteen times that of the concrete only, and is still far from its limit. Notwithstanding this want of economy, it is frequently necessary to utilise steel in this way, as, for instance, in the case of columns, arches, etc., and in beams when sufficient depth, or area of concrete in the compression flange, cannot be obtained.

Steel is very perfectly protected from deterioration by a covering of concrete, and many instances could be quoted to show that a covering of less than 1 inch of good concrete is sufficient to preserve steel almost indefinitely.

In many cases reinforced concrete forms an almost ideal method of construction, particularly where great strength and durability are essential. The strength of the concrete increases with age, and there is no cost of upkeep, as in the case of steelwork, which requires regular inspection, painting, etc.

All structures can have their several members resolved into three types or into combinations of these three types—namely, beams or girders, struts or stanchions, and ties. Beams or girders support loads which act at right angles to their length, and tend to cause bending or deflection of the member. In struts or stanchions the loads act in the direction of the length, and tend to compress the members; in long and slim compression members, however, stresses similar to those in beams may also arise, through bending or side-yielding when the load exceeds a particular value. In ties the load acts in the direction of their length, as in struts, but here the tendency is to produce tension or stretching in the member.

Composite members may be represented by struts or ties which are not placed vertically, and consequently tend to bend by their own weight, and to this latter extent act as beams. Arches also are generally subjected to bending stresses in addition to that of compression.

Beams or Girders.

The bending moment and shearing force values are calculated exactly as in the case of ordinary beams, and reference may be made to pages 292 and 293 for information on this point. Owing to the composite nature of a reinforced concrete beam, however, the determination of the

internal stresses, or of the scantlings of any beam necessary to limit the tension and compression stresses to some specific maximum, are distinctly more complex than in the case of beams formed of a homogeneous material.

The following assumptions, which are practically correct within the usual limits of safe stress and ordinary conditions, are generally admitted, and form the basis on which the formulæ are built up :—

(*a*) The coefficient of elasticity in compression of good concrete is constant throughout the working limit of stress, and for an average 1 : 2 : 4 mixture may be taken as $\frac{1}{15}$ that of the steel reinforcement. For any distance from the neutral axis, therefore, the stress per square inch on the steel is fifteen times that on the concrete.

(*b*) The tensional resistance of concrete is ignored.

(*c*) The stress on the concrete varies uniformly from zero at the neutral axis to a maximum at outer edge ; the stress on the area of the steel is constant.

(*d*) The bond, or adhesion, between the concrete and the steel is sufficient to transmit any stress arising between these two materials.

Considering, in the first instance, a beam formed of some homogeneous material, supported at each end, and loaded so that it tends to deflect, the compressive stress at the upper edge of the beam will be exactly equal to the tensile stress at the lower edge, and these values will gradually diminish towards the centre of the depth, where they will altogether disappear ; this plane of no stress is called the neutral axis.

Assuming that the stresses vary uniformly, fig. 1 may be taken to represent the stresses in any section of the beam, the horizontal distance between the vertical line and the inclined line at any point above the neutral axis will be proportionate to the compressive stresses at the given point ; similarly, the horizontal lengths below the neutral axis will be proportionate to the tensile stress.

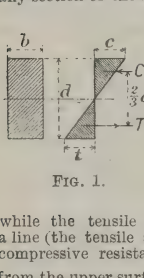


FIG. 1.

The total resistance to compression or extension would be represented by the area of either triangle. The resultant of either of these stresses would act through the centre of gravity of these triangles, or at a distance equal to $\frac{1}{3}$ the perpendicular depth from the base, giving the distance between the two resultants, or the lever arm of the resistance couples, as equal to $\frac{2}{3}d$.

The corresponding diagram for a simple reinforced concrete beam would be that of fig. 2. Here the compressive resistance, which occurs above the neutral axis, is represented, as before, by a triangle ; while the tensile resistance, being that of the steel reinforcement only, is represented by a line (the tensile strength of the concrete is ignored). The position of the resultant of the compressive resistance would pass through the centre of gravity of the triangle, or at $\frac{1}{3}n$ from the upper surface ; the lever arm in this case would equal $d - \frac{n}{3}$.

Where double reinforcement is adopted—that is to say, where a certain amount of steel is introduced into the upper or compression area of the beam to assist the concrete (fig. 3)—the total compressive resistance would, in addition to that of the concrete, include the compressive resistance of the steel ; the combined resultant of these two resistances would equal the sum of the two, and would act at some point between the two independent resistances, the exact position depending on the relative values of these two resistances.

In the case of T beams, or those in which the upper or compression flange is formed in part of the flooring slabs with which the beam proper is combined, two cases arise : the one in which the distance from the neutral axis to top of beam (n) is *not greater* than the thickness of the floor slab (d_s), and the other in which this value (n) is *greater* than the thickness of the slab (d_s). Since the compressive stress is assumed as being resisted by the concrete alone, the first case naturally falls under the same condition as that of a simple beam (fig. 2), except that the breadth of the beam must now be taken, not as the breadth of the reinforced beam only (b_r), but must include a certain portion of the slab at each side of the main beam, or b_s.

The difference between the first and second cases referred to will be obvious by a comparison between figs. 4 and 5. In the former the compression resistance is represented by a triangle, with a resultant acting $\frac{1}{3}n$ from the upper surface ; while in the latter case the compressive resistance is represented by the area of a trapezoid, the point of action being through the centre of gravity of this figure. It should be noted that in this latter case the compressive value of the concrete in the main beam between the bottom of slab and the neutral axis is ignored, as its value is very slight, and the formulæ are much simplified by doing this.

Two extensions of the above two cases are shown in figs. 6 and 7, where double reinforcement is adopted ; the treatment in these two cases is modified generally, as previously noted when referring to figs. 2 and 3 for rectangular beams.

The following series of formulæ for the several types of single and double reinforced beams just referred to will enable the scantlings for any such members to be readily calculated or the designs for these checked with the minimum of trouble.

Rectangular Beams with Single Reinforcement.

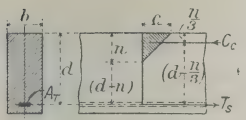


FIG. 2.

$$n=\frac{1}{1+\frac{t}{cm}} \quad . \quad . \quad . \quad . \quad . \quad (1)$$

$$r=\frac{1}{\frac{2t}{c}\left(1+\frac{t}{cm}\right)} \quad . \quad . \quad . \quad . \quad (2)$$

$$t=c\frac{(1-n)m}{n} \quad . \quad . \quad . \quad . \quad (3)$$

$$c=t\frac{n}{(1-n)m} \quad . \quad . \quad . \quad (4)$$

$$A_T=\frac{B}{td\left(1-\frac{n}{3}\right)} \quad . \quad . \quad . \quad (5)$$

$$n=\sqrt{(mr)^2+2mr}-mr \quad . \quad (6)$$

$$R=bd^2\left[tr\left(1-\frac{n}{3}\right)\right] \quad . \quad . \quad (7)$$

$$R=bd^2\left[\tfrac{1}{2}cn\left(1-\frac{n}{3}\right)\right] \quad . \quad . \quad (8)$$

SYMBOLS.

n = Ratio of distance of neutral axis from compression edge of beam to effective depth.
r = Ratio of area of steel to area of concrete = A_T/bd.
t = Tensile stress intensity on steel.
c = Compressive stress intensity on concrete.
m = Modulus ratio = E_s/E_c.
A_T = Area of tensile reinforcement.
B = Bending moment of external forces.
R = Resistance moment of internal stresses.
b = Breadth of beam.
d = Effective depth of beam.

DESIGNING.—Decide values for m, t, c, and trial dimensions for b and d. Calculate n by (1) and r by (2); then value of A_T by (5). R is got from (7) or (8). If any other value of r is used than is given by (2), calculate n by (6) and R by (7) and (8), the lesser of these two values being adopted.

CHECKING A DESIGN.—Calculate r ($=A_T/bd$), and with this determine n from (6); test t and c by (3) and (4). If t exceeds the safe stress, get R from (7); if c exceeds the safe stress, get R from (8), in each case using the maximum safe stress for t or c.

Note.—Where more than one bar is used to form the reinforcement, measure d to the centre of gravity of the group.

Usual Dimensions.—d = one-twelfth to one-sixteenth of span; b = one-half to two-thirds d.

Rectangular Beams with Double Reinforcement.

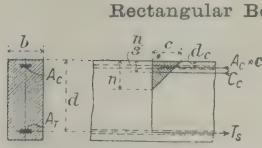


FIG. 3.

$$c_s=\frac{(n-d_c)m\times c}{n} \quad . \quad . \quad . \quad (9)$$

$$c_s=\frac{(n-d_c)_t}{(1-n)} \quad . \quad . \quad . \quad (10)$$

$$A_c=\frac{B-\left[\frac{1}{2}cnbd^2\left(1-\frac{n}{3}\right)\right]}{c_sd(1-d_c)} \quad . \quad . \quad (11)$$

$$A_T=\frac{B-\left[A_cc_sd\left(\frac{n}{3}-d_c\right)\right]}{dt\left(1-\frac{n}{3}\right)} \quad . \quad . \quad (12)$$

$$n=\sqrt{m^2(r_t+r_c)^2+2m(r_t+r_cd_c)}-m(r_t+r_c) \quad (13)$$

$$R=bd^2\left[tr_t\left(1-\frac{n}{3}\right)+c_sr_c\left(\frac{n}{3}-d_c\right)\right] \quad (14)$$

$$R=bd^2\left[\tfrac{1}{2}cn\left(1-\frac{n}{3}\right)+c_sr_c(1-d_c)\right] \quad (15)$$

ADDITIONAL SYMBOLS.

c_s = Compressive stress intensity on steel.
d_c = Ratio of depth to centre of compression reinforcement to effective depth.
A_c = Area of compression reinforcement.
r_t = Ratio of area of steel in tension to area bd.
r_c = Ratio of area of steel in compression to area bd.

DESIGNING.—Calculate n by (1), then c_s by (9) or (10); the area of Compression Steel is got from (11), and the area of Tension Steel from (12). The Resistance Moment is got from (14) or (15).

CHECKING A DESIGN.—Calculate r_t and r_c from scantlings given, and n from (13). c_s is got from (9) and (10), the smaller value being adopted. R is obtained from (14) and (15), the former assuming the concrete, and the latter the steel as stressed to their respective safe limits; the least value of R from (14) and (15) must consequently be taken as the maximum safe R.

See Diagrams on pages 456-457

T Beams with Single Reinforcement.

Class I.—n not greater than d_s




FIG. 4.

$$n=\frac{1}{1+\frac{t}{cm}} \quad . \quad . \quad . \quad . \quad . \quad (16)$$

$$r=\frac{2t}{c}\left(1+\frac{t}{cm}\right)\frac{b_s}{b_r} \quad . \quad . \quad . \quad . \quad (17)$$

$$t=c\frac{(1-n)m}{n} \quad . \quad . \quad . \quad . \quad (18)$$

$$c=t\frac{n}{(1-n)m} \quad . \quad . \quad . \quad . \quad (19)$$

$$A_T=\frac{B}{td\left(1-\frac{n}{3}\right)} \quad . \quad . \quad . \quad . \quad (20)$$

$$n=\sqrt{\left(mr\frac{b_r}{b_s}\right)^2+2mr\frac{b_r}{b_s}}-mr\frac{b_r}{b_s} \quad . \quad (21)$$

$$R=b_rd^2\left[tr\left(1-\frac{n}{3}\right)\right] \quad . \quad . \quad . \quad (22)$$

$$R=b_sd^2\left[\tfrac{1}{2}cn\left(1-\frac{n}{3}\right)\right] \quad . \quad . \quad . \quad (23)$$

SYMBOLS.

n = Ratio of distance of neutral axis from compression edge of beam to effective depth.
r = Ratio of area of steel to area (b_rd).
t = Tensile stress intensity on steel.
c = Compressive stress intensity on concrete.
m = Modulus ratio = E_s/E_c.
A_T = Area of tensile reinforcement.
R = Bending moment of external forces.
R = Resistance moment of internal stresses.
b_s = Breadth of T slab.
b_r = Breadth of rib.
d = Effective depth of beam.

DESIGNING.—Decide values for m, t, c, and trial dimensions for b_r, b_s, and d. Calculate n by (16) and r by (17), then value of A_T by (20). R is got from (22) or (23). If any other value of r is used than is given by (17), calculate n by (21) and R by (22) and (23), the lesser of these two values being adopted.

CHECKING A DESIGN.—Calculate r ($=A_T/b_rd$), and with this determine n from (21). Test t and c by (18) and (19). If t exceeds the safe stress, get R from (22), if c exceeds the safe stress get R from (23), in each case using the maximum safe stress for c or t.

T Beams with Single Reinforcement..

Class II.—n greater than d_s.




FIG. 5.

$$r=\frac{nd_s\left(1-\frac{d_s}{2n}\right)b_s}{(1-n)mb_r} \quad . \quad . \quad . \quad . \quad (24)$$

$$A_T=\frac{B}{td\left(1-\frac{3nd_s-2d_s^2}{6n-3d_s}\right)} \quad . \quad . \quad . \quad (25)$$

$$n=\frac{d_s^2\frac{b_s}{b_r}+2mr}{2d_s\frac{b_s}{b_r}+2mr} \quad . \quad . \quad . \quad . \quad (26)$$

$$R=b_rd^2\left[\left(1-\frac{d_s}{2n}\right)cd_s\left(1-\frac{3nd_s-2d_s^2}{6n-3d_s}\right)\right] \quad (27)$$

$$R=b_rd^2\left[tr\left(1-\frac{3nd_s-2d_s^2}{6n-3d_s}\right)\right] \quad . \quad . \quad (28)$$

ADDITIONAL SYMBOL.

d_s = Ratio of depth or thickness of slab to effective depth of beam.

DESIGNING.—Decide values for m, t, c, and trial dimensions for b_r, b_s, and d. Calculate n by (16) and r by (24), then value of A_T by (25). R is got from (27) or (28). If any other value of r is used than is given by (24), calculate n by (26), and R by (27) and (28), the lesser of these two values being adopted.

CHECKING A DESIGN.—Calculate r ($=A_T/b_rd$), and with this determine n from (26). Test t and c by (18) and (19). If t exceeds the safe stress get R from (28), if c exceeds the safe stress get R from (27), in each case using the maximum safe stress for c or t.

T Beams with Double Reinforcement.

Class I.—n not greater than d_s.

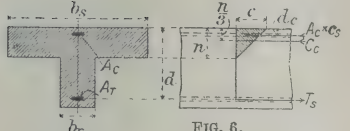


FIG. 6.

$$n=\frac{1}{1+\frac{t}{cm}} \quad . \quad . \quad . \quad . \quad . \quad (29)$$

$$t=c\frac{(1-n)m}{n} \quad . \quad . \quad . \quad . \quad . \quad (30)$$

$$c=t\frac{n}{(1-n)m} \quad . \quad . \quad . \quad . \quad . \quad (31)$$

$$c_s=\frac{(n-d_c)}{n}m\times c \quad . \quad . \quad . \quad . \quad (32)$$

$$c_s=\frac{(n-d_c)}{(1-n)}t \quad . \quad . \quad . \quad . \quad (33)$$

$$A_c=\frac{B-\left[\frac{1}{2}cnb_sd^2\left(1-\frac{n}{3}\right)\right]}{c_sd(1-d_c)} \quad . \quad . \quad (34)$$

$$A_T=\frac{B-\left[A_cc_sd\left(\frac{n}{3}-d_c\right)\right]}{td\left(1-\frac{n}{3}\right)} \quad . \quad . \quad (35)$$

$$n=\sqrt{\left[\frac{m(r_t+r_c)b_r}{b_s}\right]^2+\left[\frac{2m(r_t+r_cd_c)b_r}{b_s}\right]}-\left[\frac{m(r_t+r_c)b_r}{b_s}\right] \quad (36)$$

$$R=b_rd^2\left[tr_t\left(1-\frac{n}{3}\right)+c_sr_c\left(\frac{n}{3}-d_c\right)\right] \quad . \quad (37)$$

$$R=d^2\left[\frac{1}{2}cnb_s\left(1-\frac{n}{3}\right)+c_sr_cb_r(1-d_c)\right] \quad (38)$$

SYMBOLS.

n = Ratio of distance of neutral axis from compression edge of beam to effective depth.
t = Tensile stress intensity on steel.
c = Compressive stress intensity on concrete.
c_s = Compressive stress intensity on steel.
m = Modulus ratio = E_s/E_c.
A_T = Area of tensile reinforcement.
A_c = Area of compression reinforcement.
b_s = Breadth of T slab.
b_r = Breadth of rib.
d = Effective depth of beam.
d_c = Ratio of depth to centre of compression reinforcement to effective depth of beam.
r_t = Ratio of area of steel in tension to area b_rd.
r_c = Ratio of area of steel in compression to area b_rd.
B = Bending moment of external forces.
R = Resistance moment of internal stresses.

DESIGNING.—Calculate n by (29), then c_s by (32) or (33), the area of Compression Steel is got from (34), and the area of Tension Steel from (35). The Resistance Moment is got from (37) or (38).

CHECKING A DESIGN.—Calculate r_t and r_c from scantlings given, and n from (36). c_s is got from (32) and (33), the smaller value being adopted. R is obtained from (37) and (38), the former assuming the Steel and the latter the Concrete as stressed to their respective safe limits. The least value of R from (37) and (38) must consequently be taken as the maximum safe R.

T Beams with Double Reinforcement.

Class II.—n greater than d_s.

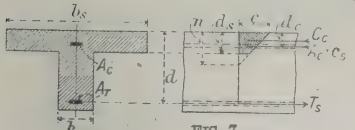


FIG. 7.

$$A_c=\frac{B-\left[\left(\frac{d_s}{2n}\right)cd_sb_sd^2\left(1-\frac{3nd_s-2d_s^2}{6n-3d_s}\right)\right]}{c_sd(1-d_c)} \quad (39)$$

$$A=\frac{B-\left[A_cc_sd\left(\frac{3nd_s-2d_s^2}{6n-3d_s}-d_c\right)\right]}{td\left(1-\frac{3nd_s-2d_s^2}{6n-3d_s}\right)} \quad . \quad (40)$$

$$n=\frac{d_s^2b_s+2m(r_t+r_cd_c)b_r}{2d_sb_s+2m(r_t+r_c)b} \quad . \quad (41)$$

$$R=d^2\left[\left(1-\frac{d_s}{2n}\right)cd_sb_s\left(1-\frac{3nd_s-2d_s^2}{6n-3d_s}\right)+c_sr_c(1-d_c)b\right] \quad . \quad (42)$$

$$R=b_rd^2\left[tr_t\left(1-\frac{3nd_s-2d_s^2}{6n-3d_s}\right)+c_sr_c\left(\frac{3nd_s-2d_s^2}{6n-3d_s}-d_c\right)\right] \quad (43)$$

ADDITIONAL SYMBOL.

d_s = Ratio of depth or thickness of slab to effective depth of beam.

DESIGNING.—Calculate n from (29), then c_s by (32) or (33), the area of Compression Steel is got from (39) and the area of Tension Steel from (40). The Resistance Moment is got from (42) or (43).

CHECKING A DESIGN.—Calculate r_t and r_c from scantlings given, and n from (41), c_s is got from (32) and (33), the smaller value being adopted. R is obtained from (42) and (43), the former assuming the Concrete and the latter the Steel as stressed to their respective safe limits. The least value of R from (42) and (43) must consequently be taken as the maximum safe R.

Note.—In many cases of double reinforcement the compression reinforcement can be placed at the centre of gravity of the compression area; the formula for R could then be somewhat simplified.

Shearing Stresses and Diagonal Tension in Beams.

These stresses and the methods of resisting them require careful consideration in all cases. At any point in a beam, the horizontal and vertical shearing stresses are of equal value, and these stresses may be looked upon as the connecting link between successive increments of tension in the reinforcement and corresponding increment of compression in the concrete ; also, in the case of double reinforcement, in connecting up the increments of tension and compression in the two forms of reinforcement. The tendency of the longitudinal shearing stress is to destroy the adhesion between the concrete and steel, and it is necessary to calculate this value to ensure that no slipping or failure takes place from this cause.

If S represents the total vertical shear, which is equal to the rate of change of the bending moment from point to point along the beam ; s_b the shearing stress between concrete and steel ; O the periphery of reinforcement, whether one bar or a number of bars ; the shearing stress round the bars per unit surface of reinforcement is approximately equal to :—

$$s_b = \frac{S}{O \times 0{\cdot}86d} \quad . \quad . \quad . \quad . \quad . \quad . \quad (51),$$

and this same stress per unit length may be written—

$$s_b\, O = \frac{S}{0{\cdot}86d} \quad . \quad . \quad . \quad . \quad . \quad . \quad (52).$$

The fraction $0{\cdot}86d$ in the above equations represents the approximate average length of the lever arm, or distance between the centre of tension in the steel and the centre of compression in the concrete ; and these equations may therefore be used to give practical values for rectangular or T beams, either with single or double reinforcement.

If s represents the unit horizontal shearing stress in the concrete, the shearing stress per unit length on any width b of a beam is as follows :—

$$s \times b = \frac{S}{0{\cdot}86d} \quad . \quad . \quad . \quad . \quad . \quad . \quad (53).$$

This last formula not only gives the value of the horizontal shearing stress, but also that of the vertical shearing stress at the same point, since both these stresses are always of equal value.

Failure by *diagonal tension* is the cause of numerous mishaps, which are frequently attributed to shear. The maximum diagonal tension in a reinforced concrete beam is largely governed by the amount of the horizontal tension in the concrete as well as that of the shearing stress at the same point. From practical experiments and data it would appear that, with average concrete, beams with no web reinforcement are liable to fail by diagonal shear when the vertical shearing stress intensity, at point of failure, averages about 120 lbs. per square inch. Accepting a factor of safety of 4, the shearing stress intensity given by formula (53) should not exceed 30 lbs. per square inch. With the same factor of safety, the shearing stress calculated by this formula in beams with web reinforcement may be taken at 120 lbs. per square inch.

Web Reinforcement.

This generally consists either of vertical or diagonal stirrups, alone or in conjunction with inclined bars, these latter generally consisting of a portion of the main reinforcing bars bent upwards as required.

The sectional area of steel to withstand the total shearing force at any vertical section, when the shear bar is inclined at an angle ϕ with the horizontal, should be as follows :—

$$\text{Sectional area required} = \frac{S}{t \times \sin\phi} \quad . \quad . \quad . \quad . \quad (54),$$

t being the tensile strength per square inch of the steel.

The resistance to shear and to diagonal tension in a T beam is practically similar to that for rectangular beams, if the breadth in the former be taken as the breadth of the rib (b_r), this value being compared with the breadth (b) of the rectangular beam.

The breadth of rib in T beams (b_r) will usually be found sufficient to resist any horizontal shear when of a size to give sufficient practical space for embedding the steel reinforcing bars, but to allow for any excessive shear, and for diagonal tension, it is well to keep this breadth of ample size.

Inverted Beams.

Where a beam is continuous over one or more intermediate supports, or where a single span beam is securely fixed or built in at its ends, the effect on the continuous beam over the supports or at the ends of the single span beam is to produce reverse bending, and consequently an inversion of the stresses ; the upper portion now being in tension, while the lower portion is in compression. To meet this change in stress, it is usual to bend up a number of the lower reinforcing bars as they approach the ends, and for partial fixing this may be sufficient, but it will generally be found that additional reverse stress bars (sometimes called 'continuity bars') must be added to provide the full area of reinforcement necessary at the upper portion of the beam.

In the case of inverted T beams, it will usually be found that the neutral axis falls outside the slab, and it may therefore be calculated as for an ordinary rectangular beam, of a breadth (b) equal to the breadth of rib (b_r).

Floor Slabs.

By imagining any slab to be broken up into a series of parallel strips, each say 12 ins. wide, it is only necessary to treat each strip as an independent beam, and determine the thickness and the amount of reinforcement according to the particular conditions of loading, etc. The amount of reinforcement thus found will give that required per 12 ins. of width, and may be arranged in the form of a series of small rods set at the required spacing to give this calculated area.

When slabs are reinforced in one direction only, it is generally assumed that the two beams upon which the ends of the reinforcing bars rest will carry the complete load, but should the slab be of approximately square shape, and the reinforcement arranged in two directions, all four beams upon which the slab rests are assumed as taking a share of the total load. In the case of a square slab supported on all four sides, it will be sufficiently accurate to calculate the total load as distributed equally over all four girders. If the slab is of rectangular form, the short or end girders may be calculated as each supporting a triangular area formed by the beam and by lines drawn at 45° from its corners; the long or side girders each supporting one-half the remainder of the slab. This will be obvious from an examination of figs. 8 and 9, where an indication is given of the manner in which two plain concrete slabs failed when tested to destruction.



FIG. 8.

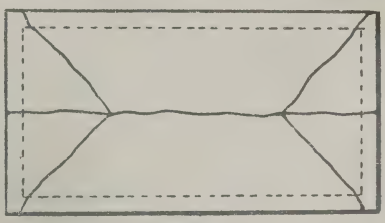


FIG. 9

There is no satisfactory theory as to the stresses in slabs supported on all sides, nor does there seem to be any single generally accepted rule for determining these stresses. The table below gives a series of multipliers for adjusting the bending moment stresses for a slab as calculated in the direction of its length and its breadth; these multipliers are based respectively on the theory developed by Professors Grashof and Rankine, and on the instructions issued by the French Government to the Ingénieurs des Ponts et Chaussées. A comparison of the two series will show a marked divergence of opinion. It is recommended that for ordinary requirements the first rule be adopted, but where the work is carried out under very careful supervision, and first-class material and workmanship are ensured, the second rule may be applied.

Rectangular Slabs supported on four sides.

Value of $\frac{L}{B}$	Grashof and Rankine. $s=\frac{L^4}{L^4+B^4}$	Grashof and Rankine. $l=\frac{B^4}{L^4+B^4}$	French Government. $s=\frac{1}{1+2\frac{B^4}{L^4}}$	French Government. $l=\frac{1}{1+2\frac{L^4}{B^4}}$
1-1	·500	·500	·333	·333
1-1·1	·594	·406	·423	·254
1-1·2	·675	·325	·509	·194
1-1·3	·741	·259	·588	·149
1-1·4	·793	·206	·658	·115
1-1·5	·835	·165	·717	·090
1-1·6	·868	·132	·766	·071
1-1·7	·893	·107	·807	·056
1-1·8	·913	·087	·840	·045
1-1·9	·929	·071	·867	·037
1-2·0	·941	·059	·889	·030

A glance at this table will show that when the proportion of length to breadth approaches that of 1 to 2, the effect of the end supporting becomes negligible, and beyond this limit slabs should


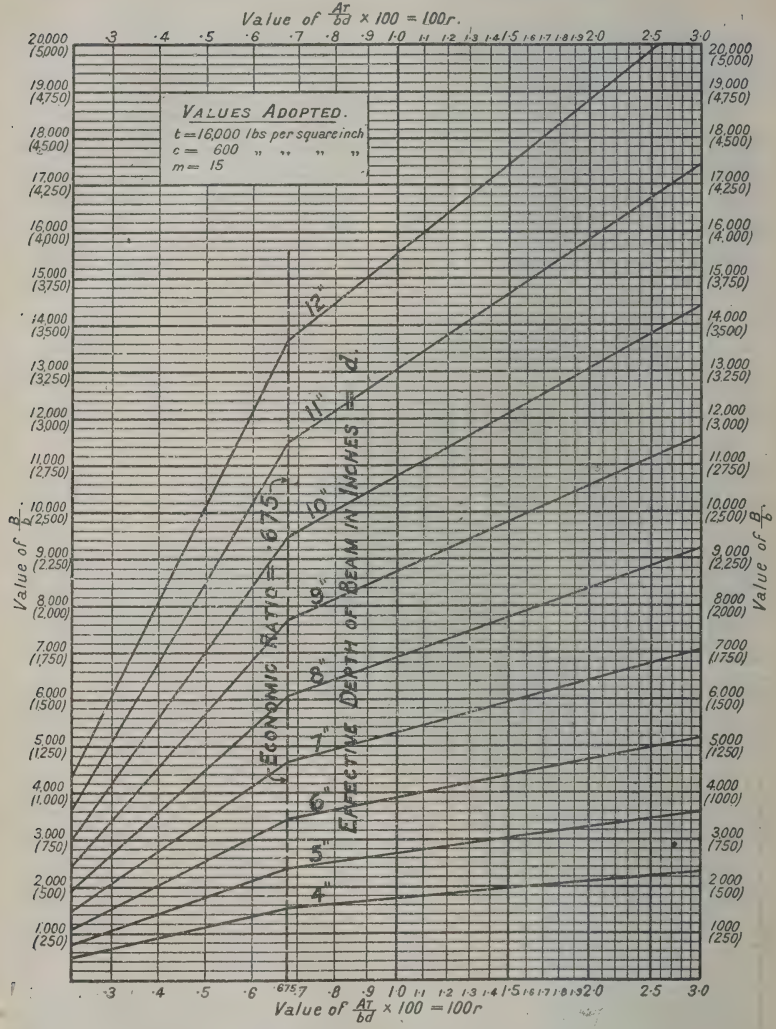



DIAGRAM OF $\frac{B}{b}$ VALUES FOR VARIOUS RATIOS OF REINFORCEMENT.

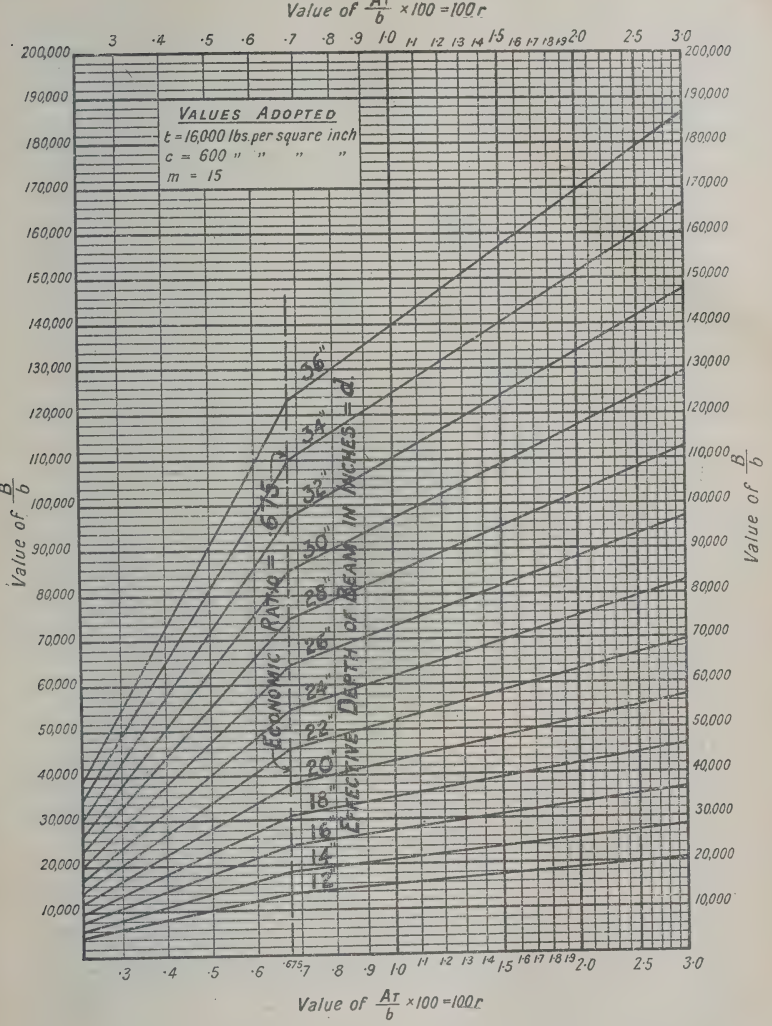Figures in brackets give $\frac{B}{b}$ Values for Beams of one-half the above depths.)



RECTANGULAR BEAMS— SINGLE REINFORCED.

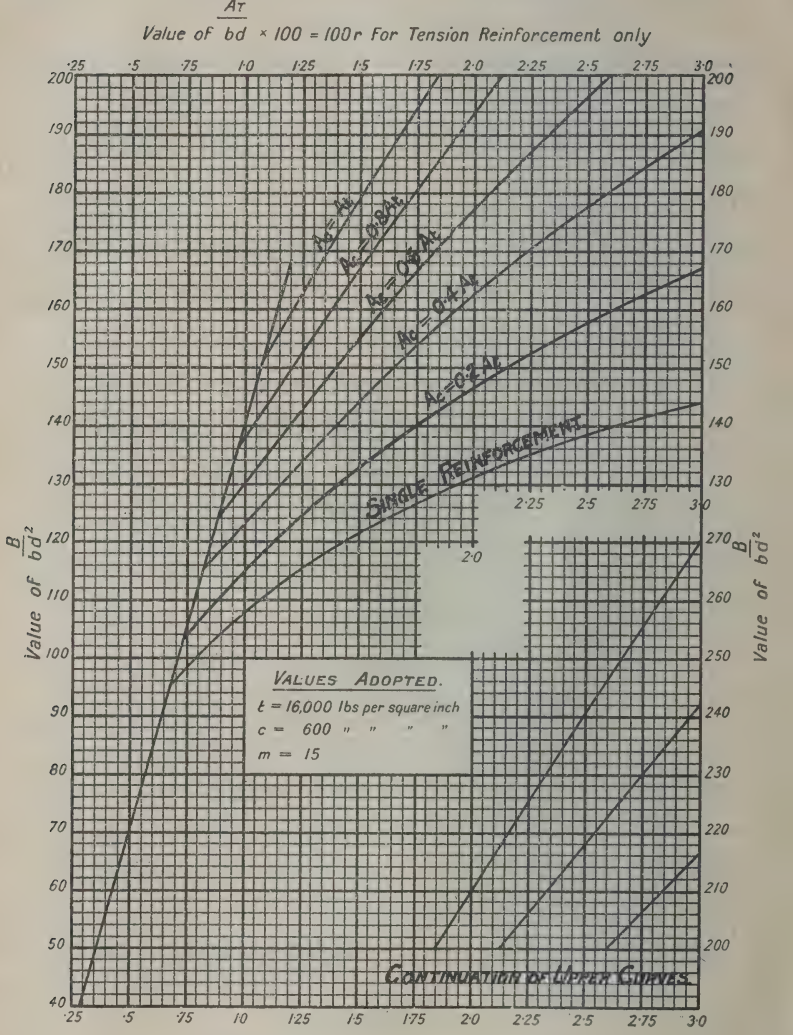DIAGRAM OF $\frac{B}{b}$ VALUES FOR VARIOUS RATIOS OF REINFORCEMENT.



RECTANGULAR BEAMS — SINGLE & DOUBLE REINFORCED.

DIAGRAM OF $\frac{B}{bd^2}$ VALUES FOR VARIOUS RATIOS OF TENSION AND COMPRESSION REINFORCEMENT.

be single reinforced, and treated as if supported on two sides only. The use of the foregoing table is as follows :—

In any floor slab of length L and breadth B, calculate the bending moment first for a beam of span B under the total load from the slab, and as supported or fixed at the sides only. Multiply the bending moment thus found by the multiplier s in the table corresponding to the value L/B to determine the actual bending moment on the long axis of the slab. By a similar operation, with a span L, and the use of the multiplier l, determine the actual bending moment on the short axis. By means of the formulæ already given for rectangular beams, the necessary thickness and amount of reinforcement can be determined, and it remains only to distribute this total area of reinforcement in the form of small bars arranged at the necessary spacing throughout the full length and breadth of the slab.

Deflection of Reinforced Concrete Beams.

An ingenious method of calculating the approximate deflection of a reinforced concrete beam or slab was suggested by Mr. Eli White in the 'Engineering Record' for November 9, 1907. The following explanations are based on this method :—

The deflection of a reinforced concrete beam being proportionate to the elongation of the steel tensile reinforcement, this deflection will be similar in amount, for similar tensile stress intensities, to that of a symmetrical beam, whose flanges are each of an area equal to the tensile reinforcement in the reinforced concrete beam, and are placed at a distance apart equal to twice that of

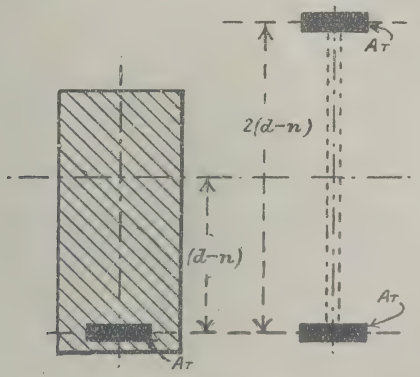


FIG. 10.

the distance between the tensile steel and the neutral axis in the reinforced concrete beam. Fig. 10 indicates to the left a sketch section of a reinforced concrete beam, with tensile reinforcement equal to A_T, and the sketch to the right indicates the section of an imaginary symmetrical steel beam, whose two flanges are each equal in area to A_T and are placed at $2(d-n)$ apart. If t=tensile stress intensity on steel, the

$$\text{Resistance Moment of this symmetrical beam} = 2(d-n) \times A_T \times t. \quad . \quad (55).$$

When any beam is carrying a load, it is obvious that the resistance moment must be equal to the bending moment of the external force acting on the beam.

For this symmetrical beam, the

$$\text{Approximate Moment of Inertia value} = 2A_T \times (d-n)^2 \quad . \quad . \quad . \quad . \quad (56),$$

and taking E at 30,000,000 lbs., the deflection formulæ given in the tables on pages 292 and 293 can be applied to calculate the approximate deflection in any single or double reinforced concrete beam, the correct value for $(d-n)$ being used in the above formulæ.

It should be noted that in the above formulæ the tensile resistance of the concrete has been entirely neglected, and that the formulæ for deflection on pages 292 and 293 are those for beams of uniform section (reinforced concrete beams only more or less approach this condition) ; for these reasons the calculated deflection will generally be distinctly higher than the actual values, which may at times be found as much as 10 to 15 per cent. less than given by these calculations.

The tables on pages 292 and 293 may prove of service in determining *graphically* the bending moment and shearing stress values for various types of loading ; and since these diagrams show clearly the *change of values* they can frequently be used in arranging the main reinforcement and the points where these bars may be bent up to resist shear ; independent shear members can also be set out by the same means.

COLUMNS, PILES, AND WALLS.

SYMBOLS USED IN THE FOLLOWING FORMULÆ.

A = Sectional Area of Concrete in Column.
A_E = Equivalent Area of Concrete to that of Concrete and Steel Longitudinals.
A_L = Sectional Area of Steel Longitudinal Reinforcement.
A_H = „ „ „ Hooping.
W = Safe Load on Short Column.
W_I = „ „ Long „
C_u = Ultimate Compressive Stress on Concrete at 90 days.
c = Safe Stress per square inch on Concrete.
p = Percentage of Longitudinals to Concrete = $A_L \div A$.
l = Length of Column in inches.
I_c = Moment of Inertia of Concrete about Neutral Axis of Column.
I_L = „ „ of Longitudinals „ „ „
G_E = Radius of Gyration of A_E.
b = Smaller Side of Rectangle, or Side of Square.
b_y = Larger „ „
d = Diameter of Round Column, or of Round Rods.
y = Distance of Longitudinal from Neutral Axis, in inches.
x = „ Eccentric Load from Centre of Column.
r_h = Ratio of Volume of Hooping to Volume of Concrete.

Short Columns Reinforced with Longitudinal Bars and Cross Ties.

Load Applied at Centre.—

In ordinary cases, the Longitudinal Reinforcement takes the form of round or square steel rods of comparatively small area placed symmetrically about the cross-section of the column; these Longitudinals are held or tied securely together by Horizontal Bindings, which should not be set further apart than twenty to twenty-four times the least diameter of the Longitudinals. This spacing of Bindings should, as a rule, be reduced towards the end of the columns, where in the majority of cases failure first occurs.

When the length does not exceed about 18 times the least diameter or width, and the Maximum Stress per sq. in. on the concrete is limited to 600 lbs., the column may be expected to yield by crushing. Since the Modulus of Elasticity of the Steel Longitudinals is assumed as 15 times that of the concrete, the Maximum Stress on the steel will be 15 times that of the concrete only; 1 sq. in. of steel is, therefore, equal to 15 sq. ins. of concrete. It is sometimes convenient to consider a reinforced column as consisting of concrete only; in which case the sectional area of the concrete would be increased by 14 times the sectional area of the steel reinforcement to give this equivalent area. This may be written :—

$$A_E = A + 14A_L \quad . \quad . \quad . \quad . \quad . \quad (57)$$

Thus, the Safe Load for a short column would be as follows :—


$$W = c\,(A + 14A_L) \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (58)$$

It is sometimes convenient to consider the area of the steel longitudinals as a certain percentage of the total area of the concrete, and when this is done, we have the following equation :—

$$\text{Safe Compressive Stress per square inch} = c\,(1 + 14p) \quad . \quad . \quad (59)$$

The following table gives the Safe Stress Values for varying percentages of Steel, and may be used directly when designing Short Columns :—

Percentage of Reinforcement.	Safe Stress, when $c = 600$.	Percentage of Reinforcement.	Safe Stress, when $c = 600$.
½	642 lbs. per sq. in.	4	936 lbs. per sq. in.
¾	663 „ „	5	1,020 „ „
1	684 „ „	6	1,104 „ „
1½	726 „ „	7	1,188 „ „
2	768 „ „	8	1,272 „ „
2½	801 „ „	9	1,356 „ „
3	852 „ „	10	1,440 „ „

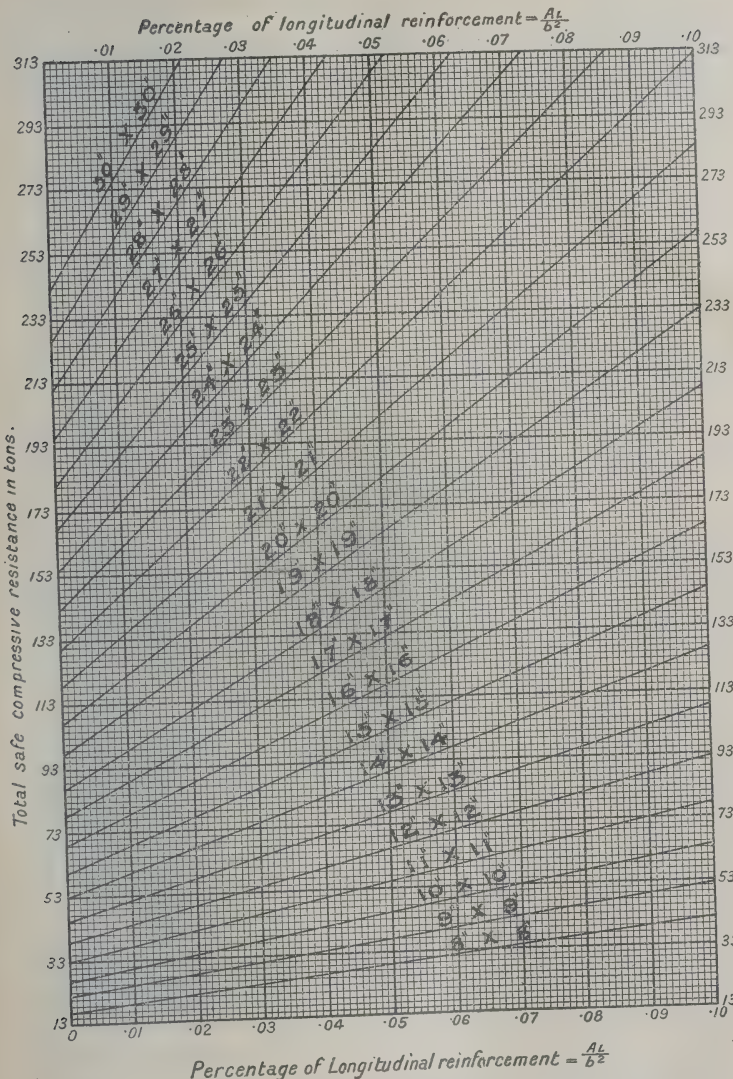

TOTAL SAFE LOADS FOR SQUARE COLUMNS, WITH LONGITUDINAL REINFORCEMENT ONLY

High Columns Reinforced with Longitudinal Bars and Cross Ties.

Load applied at Centre.

When the length exceeds about 18 times the least diameter or width there is a risk of Deflection or Lateral Buckling of the column as a whole. It is necessary, therefore, to take into account this tendency, and what is known as Rankine's formula may be used for this purpose. Here the strength calculated as for a short column is reduced in proportion to the ratio of length of the column to its least Radius of Gyration. The formulæ for three forms of end fixings are as under :—

Fixed Ends . . . . . $W_1 = \dfrac{W}{1 + \dfrac{l^2}{34000\,(G_E{}^2)}}$ . . . . (60)

One End fixed, the other free $W_1 = \dfrac{W}{1 + \dfrac{l^2}{25500\,(G_E{}^2)}}$ . . . . (61)

Free Ends . . . . . $W_1 = \dfrac{W}{1 + \dfrac{l^2}{17000\,(G_E{}^2)}}$ . . . . 62)

Where $G_E{}^2 = \dfrac{I_c + 14\,I_L}{A_E}$ . . . . . (63)

The values for I_c may be taken as follows :—

Any Rectangular Section (b = small side) . . . . = $\cdot0833b^3b_y$. (64)

„ Hexagonal Section (b_x = rad. of circumscribed circle) = $\cdot5413b_x{}^4$. (65)

„ Octagonal Section („ „ „) = $\cdot6381b_x{}^4$. (66)

„ Circular Section (d = diameter) . . . . = $\cdot0491d^4$. (67)

If all Longitudinals are of small size and the same section,

$$I_L = \frac{A_L\,\Sigma y^2}{\text{Number of Longitudinals}} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (68)$$

Piles, Walls, etc.

In the case of Piles, the formula given for short columns may be utilised, but it would be well to reduce the Maximum Compressive Stress to 400 lbs. per sq. in., or under, and to close up the spacing of the Cross Ties, particularly towards the ends, owing to the heavy stress which arises during driving. For unsupported lengths of Piles, where they exceed in length 18 times their diameter, the formula for High Columns would be adopted.

In the case of walls, these may be assumed as broken up into a series of independent columns set close together, and their strength calculated as for short or long columns, the particular formula depending on the relation between height and the thickness of wall.

Columns with Eccentric Loads.

When a load is applied at a distance 'x' from the centre of a column, the stress produced may be considered as that due to two independent actions : *first*, a load equal to the Total Eccentric Load applied at the centre of the column, and giving rise to a Uniformly Distributed Compressive Stress, and *second*, a Couple, with a Moment equal to the Eccentric Load × x. This gives rise to a bending tendency, the effect of which may be calculated by considering the column as a Double Reinforced Beam, acted on by a Bending Moment equal in value to this couple. The Maximum Compressive Stress per sq. in. got by this calculation must be added to the Uniform Compressive Stress first got, to arrive at the Maximum Compressive Stress on column at edge nearest the load. At edge furthest from the load the Stress will equal the difference between the Tensile Stress per sq. in. got when calculating as for a beam, and the Uniform Compressive Stress. When the Eccentricity is considerable, the compression at furthest edge may be changed into tension. To resist any such tension, the Steel Longitudinals at that side should alone be calculated on.

Columns with Longitudinal Bars and Steel Hooping.

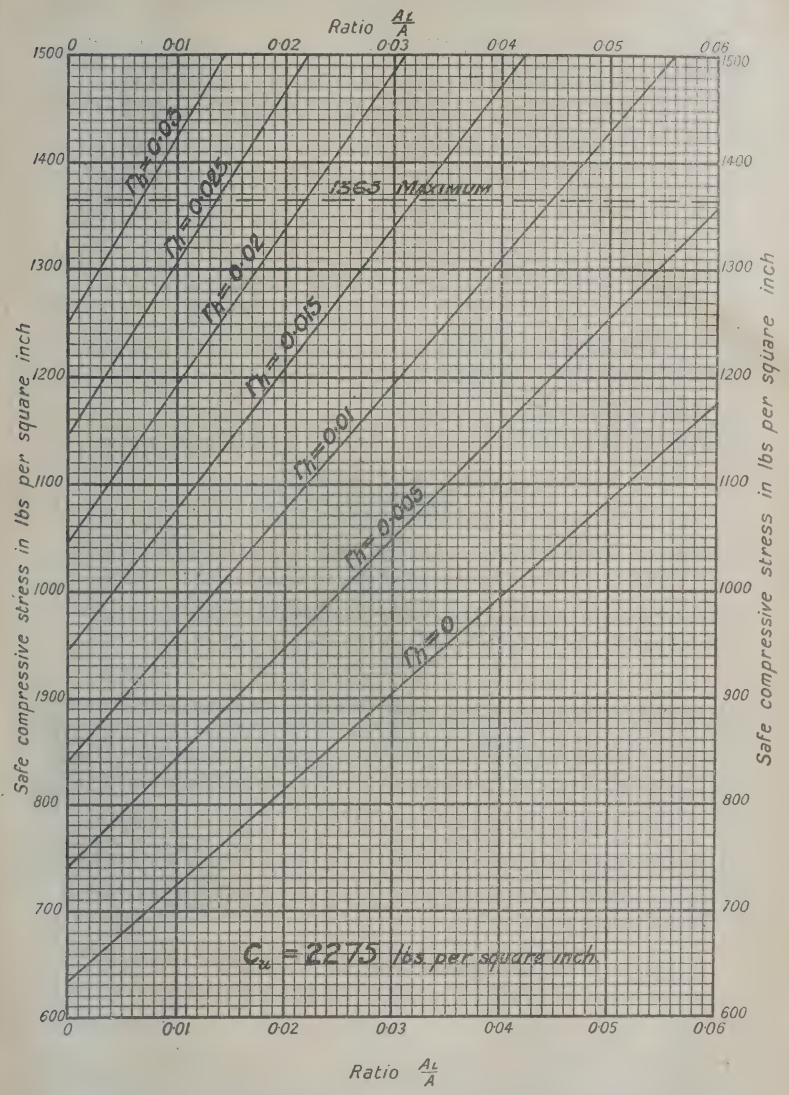
This type of column was carefully investigated by M. Considère, who showed that by confining the Concrete within a close set Steel Hooping, so as to prevent it bulging, its resistance to Compression was very greatly increased. From experiments made, this Engineer recommended that the hooping should in all cases be circular, that the Longitudinal Rods should be not less than 6 in number, and that the total volume of the Longitudinals should not be less than $\frac{1}{250}$th of the volume of the Concrete. It will be noted that these proportions are given in volumes, not in areas, so as to take into account any necessary pitch of the spiral hooping.

The diameter of the column should be assumed as that within the spiral hooping, and, taking as a unit a length equal to the diameter, we have :—

Unit Volume of Concrete = $\cdot7854d^2$ . . . . . (69)

Unit Volume of Longitudinals = total area of Longitudinals × d . . . . . (70)

Unit Volume of Hooping = Sectional area of coil × $3{\cdot}14d \times \dfrac{d}{\text{pitch}}$. (71)



SAFE STRESS PER SQUARE INCH FOR CIRCULAR HOOPED COLUMNS.

The following is the formulæ adopted by the French Government Commission on Reinforced Concrete :—

Safe compressive resistance $= c(0{\cdot}7854d^2 + 14A_L)$ . . . . . (72)

For pitches of hooping between $\frac{1}{6}d$ and $\frac{1}{5}d$, $c = 0{\cdot}28\ C_u(1 + 32r_h)$. . . . (73)

The value of c should not exceed $0{\cdot}6\ C_u$.

The value of C_u for the usual 1 : 2 : 4 mixture of Concrete may be taken as 2,275 lbs. per sq. in.

The approximate diameters for the hooping may be taken as follows :—

For a pitch of $\frac{1}{5}d$ diameter $= {\cdot}030d$ . . . . . (74)

" " $\frac{1}{6}d$ " $= {\cdot}028d$ . . . . . (75)

" " $\frac{1}{7}d$ " $= {\cdot}026d$ . . . . . (76)

" " $\frac{1}{8}d$ " $= {\cdot}024d$ . . . . . (77)

PIPES, CIRCULAR RESERVOIRS OR BINS, etc.

Symbols used in the following Formulæ.

A_h = Sectional area of hoop reinforcement.
C = Direct compressive stress on the shell.
b_r = Breadth of ring under consideration, in inches.
d = Diameter of pipe or reservoir, in inches.
t = Tensile stress in lbs. on steel reinforcement.
p_1 = Pressure in lbs. per sq. in. on shell.
H_w = Head of water, in feet.

When under Internal Pressure.

(Concrete neglected.)

Consider any circumferential strip or ring, then :—

$$A_h = \frac{p_1 \times d \times b_r}{2t} \quad . \quad . \quad . \quad (78)$$

The total area thus found is divided up into any suitable number of hoops or rings.

Where water pressure has to be resisted :—

$$A_h = \frac{0{\cdot}216H_w \times d \times b_r}{t} \quad . \quad . \quad . \quad (79)$$

In addition to the hoop or spiral reinforcement determined above, longitudinal bars are necessary to strengthen the concrete shell between each hoop to resist the pressure they have to sustain ; the shell here acts as a fixed ended beam or slab of a span equal to the distance between the hoops, and the scantlings calculated by the formulæ previously given for such a type of beam.

Practical considerations generally decide the thickness of the concrete shell, which is usually $1\frac{1}{2}$ to 2 ins. thick for pipes up to 9 or 10 ins. diameter, and seldom exceeds 3 to $3\frac{1}{2}$ ins. even for large diameter pipes. In vertical reservoirs or bins the thickness towards the base must also be such as will safely carry the weight of the shell.

NOTE.—The required reinforcement for circular bins or silos may be determined by calculating 'p' from formulæ (82) or (83) on next page, for two levels say 12 ins. apart ; the difference of the two values thus got will give the pressure per lin. foot and per one foot in height between these levels. Dividing this value by 12×12 (144) will give the average pressure per sq. in., and formula (78) above will at once decide the necessary hoop reinforcement.

When under External Pressure.

(Concrete and hooping both effective.)

$$C = \frac{p_1 d}{2} \quad . \quad . \quad . \quad (80)$$

The safe stress which the shell will sustain depends on the proportion of the steel hooping, and is given in table at foot of page 460. A few trials with varying thicknesses and proportions of reinforcements may be required. The minimum practical thickness of shell is that necessary to give complete protection to the steel rods, and to permit of safe transport and handling.

Longitudinal reinforcement is provided under the same conditions as in the last case.

STORAGE BINS OR SILOS.

SYMBOLS USED IN THE FOLLOWING FORMULÆ.

h = Depth of bin in feet, or height of material above any point.
b = Breadth of rectangular bin, in feet.
l = Length of rectangular bin, in feet.
d = Diameter of circular bin, in feet.
p = Pressure against sides of bin in lbs. per lin. foot of horizontal perimeter.
w = Weight per cubic foot of material in bin.
μ = Coefficient of friction within the material stored.
μ_1 = Coefficient of friction between material and sides of bin.
(For values of the last three items, see table below.)

Bins can be conveniently divided into two classes, as follows :—

First.—Shallow Bins, where the plane of rupture (or the plane along which the material would tend to slide if the sides yielded) passes out through the material itself before it meets the opposite side of the bin, and

Second.—Deep Bins, where the plane of rupture meets the opposite side of the bin within the mass of the contained material.

The particular depth forming the dividing point between the above two classes is obtained by the following formula.

$$h = b \times \left[\mu + \sqrt{\mu \frac{1+\mu^2}{\mu+\mu_1}}\right] \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (81)$$

All depths less than the above value would indicate shallow bins, all greater depths would be classed as deep bins.

For square bins :—

$$\textit{First Class.}—p = \tfrac{1}{2} w h^2 \left[\frac{1}{\sqrt{\mu(\mu+\mu_1)} + \sqrt{1+\mu^2}}\right]^2 \quad . \quad . \quad . \quad . \quad . \quad (82)$$

$$\textit{Second Class.}—p = \tfrac{1}{2} w b^2 \left[\frac{\sqrt{\frac{2h}{b}(\mu+\mu_1) + (1-\mu\mu_1)} - \sqrt{1+\mu^2}}{\mu+\mu_1}\right]^2 \quad . \quad (83)$$

The total pressure on bottom of bin =

(Total weight of material) $-$ ($\mu_1 \times p \times$ perimeter of bin in feet) . . (84)

The maximum pressure on the bottom of a bin occurs when

$$h = \frac{b}{2}\left[\frac{1+\mu^2}{\mu+\mu_1}\left(\frac{4\mu_1}{3\mu_1-\mu}\right)^2 - \frac{1-\mu\mu_1}{\mu+\mu_1}\right] \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (85)$$

For Rectangular Bins the values given by formulæ (82) and (83) will be different for the sides and the ends, since in the latter case the value l would replace that of b.

For Circular Bins substitute d for b in formulæ (81), (83), and (85).

These formulæ are not applicable to the inclined sides of Hopper bins, nor to the conical or spherical bottoms of shallow bins.

Nature of Grain, etc.	Weight per Cubic Foot in Pounds.	Coefficients of Friction.	
		Grain on Grain.	Grain on Cement.
Wheat	53	0·466	0·444
Barley	43	0·509	0·452
Oats	32	0·532	0·466
Maize	48	0·521	0·423
Beans	50	0·613	0·442
Peas	54	0·477	0·296
Tares	53	0·554	0·394
Linseed	45	0·456	0·414
Cement	100	0·316	0·554
Sand	90	0·674	0·577
Bituminous Coal	50	0·700	0·700
Anthracite Coal (small)	52	0·510	0·510
Ashes	40	0·839	0·839
Coke	28	0·839	0·839

DOMES AND CONICAL COVERINGS.

The following graphic method of determining the stresses in domes is only correct for thin coverings of true spherical or conical section, and formed of a material of uniform weight per unit of surface, and capable of resisting both tension and compression. The majority of reinforced concrete domes approximate to these conditions.

For a detailed explanation of the following statements and formulæ, &c., a reference may be made to a Paper by Mr. W. Dunn, A.M.Inst.C.E., F.R.I.B.A., published in the 'Transactions of the Royal Institute of British Architects,' May 21, 1904.

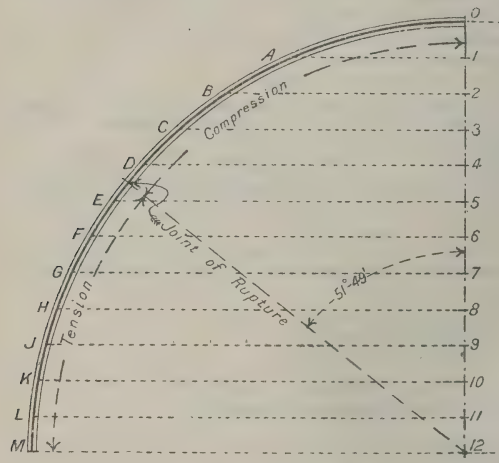


FIG. 11.

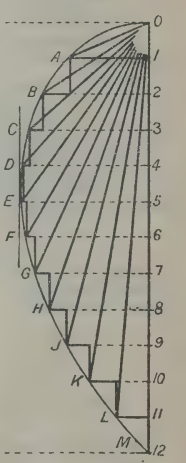


FIG. 12.

To construct figs. 11 and 12. Divide centre line of dome (fig. 11) into any convenient number of parts, and draw the horizontal lines to shell, as 1A, 2B, &c. Draw load line 0–12 (fig. 12) and from O draw radial lines parallel to tangents on the curve at points A, B, &c., till they meet the corresponding horizontal lines; from these meeting points verticals are drawn to the adjacent horizontal lines to complete the zigzag line shown. If correctly set out, the outer meeting points will lie on a regular curve as shown.

Select a scale such that the length 0–12 corresponds with the total weight of the dome; then the several heights between any two horizontal lines can be scaled off direct to give the weight of the portion between these two lines. To same scale, the radial lengths from O (fig. 12) to any point A, B, C, &c., indicate the total pressure on any horizontal section; the horizontal lengths A1, B2, &c., to same scale, give the total horizontal, or radial thrust; the shorter full lines drawn from A, B, &c., give the variation in the radial thrust between the adjoining section lines.

To determine the hoop stress, or that acting at the vertical face of any section, the radial thrust must be divided by $6{\cdot}28 \left(= \frac{\text{Radius}}{\text{Circumference}}\right)$, or by choosing a scale such that the height $0\text{–}12 = \frac{1}{6{\cdot}28} \times$ total weight of dome, the horizontal lengths to this scale will give the radial thrust direct.

The pressure per lineal unit on any horizontal section is equal to the length of the radial line from O to the particular section measured by the modified scale just mentioned, divided by the radius length at this section.

The position of the joint of rupture is at an angle of about $51\frac{1}{2}°$ with the vertical, or where the tangent to the curve in fig. 12 is parallel to the loadline 0–12; this is also the point of no hoop stress.

The addition of a lantern, or other load, at apex of dome will raise the point O in load line, and also the joint of rupture; the formation of a central opening will depress the point O to level of edge of opening, and lower the joint of rupture.

This graphic method will similarly apply to conical coverings.

ARCHES.

The designing of concrete arched bridges as a rule should be undertaken only by experts, as the accurate determination of the stresses, and the economical arrangement of concrete and steel to resist those stresses, calls for a large amount of skill and experience. The following diagrams and brief explanations will serve to indicate the manner in which such arches can be designed, or the strength of existing arches calculated.

Arched bridges may be divided into three general types :—

1. That in which a continuous arch is provided, without joints or hinges, and connected rigidly to the abutments.

2. Where the arch is hinged or jointed at each abutment, but is continuous between these two points.

3. Where the arch is hinged or jointed not only at the abutments, but also at the centre.

The existence of a hinge or joint implies that any stress in the arch ring must pass through the centre of the joint, and it is necessary to keep this in view when drawing the equilibrium polygon, and to arrange that this polygon passes through the centre of all joints.

Fig. 13 indicates an arched bridge of the first type, viz., that in which no joints occur, and consequently the position of the stresses in the ring is not restricted, as it would be by the introduction of joints or hinges. The complete width of the bridge may be considered as divided up into a series of strips, each say 12 inches wide, and attention given to one strip only. In the event of any irregularity in the loading of one strip more than the other, as for instance the outer edge of the arch which carries the parapet wall, such a strip would be considered independently. The complete span would be divided into a number of sections as indicated by dotted lines, and the weight or load on each section carefully calculated ; these weights can be taken as acting each through the centre of gravity of the section.

Assuming in the first place that the total dead load is practically uniformly distributed over the length of the bridge, so that the weight or load at each section is equal, the shorter line of loads A, B, . . . K, to the right of the illustration can be set up, and a polar point, or pole, V, chosen. Since the load is uniformly distributed, the vertical reaction at each abutment will be equal to one half the total load, and as the closing line of the equilibrium polygon must be in the same line as that joining the two points in the abutments where it is desired that the resultant pressures should occur, and in this case these two points are on the same horizontal line, a horizontal line would be drawn from the centre of the line of loads and the point V chosen on this line, at such a distance from the load line as to limit the height or rise of the equilibrium polygon drawn on the arch ring, so that it may coincide, as nearly as possible, with the centre line of the arch. The approach of this polar point to the load line tends to raise the centre of the equilibrium polygon, while a movement in the opposite direction will depress the centre.

If the loading is not uniform, as for example where the live load covers half the length of the bridge, the load line would take the form somewhat as that indicated by the longer line A, B . . . K, and to determine in the first place the vertical reaction at each abutment, a focal point W is chosen at random, and an equilibrium polygon drawn, as shown below the arch ; the closing line of this latter, marked *a*, gives the direction in which a line must be drawn from the point W in the polar diagram, so that its intersection with the load line will divide this latter into two portions, the vertical height, A O, giving to scale the vertical reaction at the left abutment, or the A end of arch, while the lower length, O K, gives the corresponding value for the opposite abutment. Having found this point O, a horizontal line is drawn from O on which the new focal point X must lie, to ensure the starting and finishing point of polar diagram occurring at the required points on the abutments. The position of X must be chosen, by one or two trials if necessary, so that the equilibrium polygon line, as before, is as near as possible to the centre line of the arch ring.

If the ring is formed of stone or brick, and no tension can be resisted, it is essential that all equilibrium polygons, for any possible combination of loads, should lie within the middle third of the depth of the arch ring ; if a line of any of the polygons extends beyond this limit, tension stresses are likely to develop.

The length of the outer rays or lines on the polar diagram will give the values of the tota resultant pressures at each abutment, and assuming that the abutments are of sufficient strength and stability to give this required resistance, the values calculated for the stresses in the arch ring by this method are correct. Should, however, the abutments tend to yield, the amount of horizontal reaction is limited in value, and the distance of the point X from the load line must not indicate a horizontal stress greater than the abutments can offer ; the equilibrium polygon drawn under these conditions would in all probability pass above the centre of the arch ring, and thereby indicate that excessive bending stresses arise in the ring, tending to cause failure or collapse through the arch sinking downwards. If by any means the abutments are forced together, or if the ring of the arch tends to increase in length, as by a rise of temperature, the polar point would tend to move further from the load line, and the equilibrium polygon would tend to fall below the centre of the arch ring, indicating the tendency of the ring to be forced upwards, heavy stresses being again produced.

In the case of types Nos. 2 and 3 the positions of the centre of the hinges or joints limit the position at these points of the equilibrium polygon, and in fig. 14 a diagram is shown of a


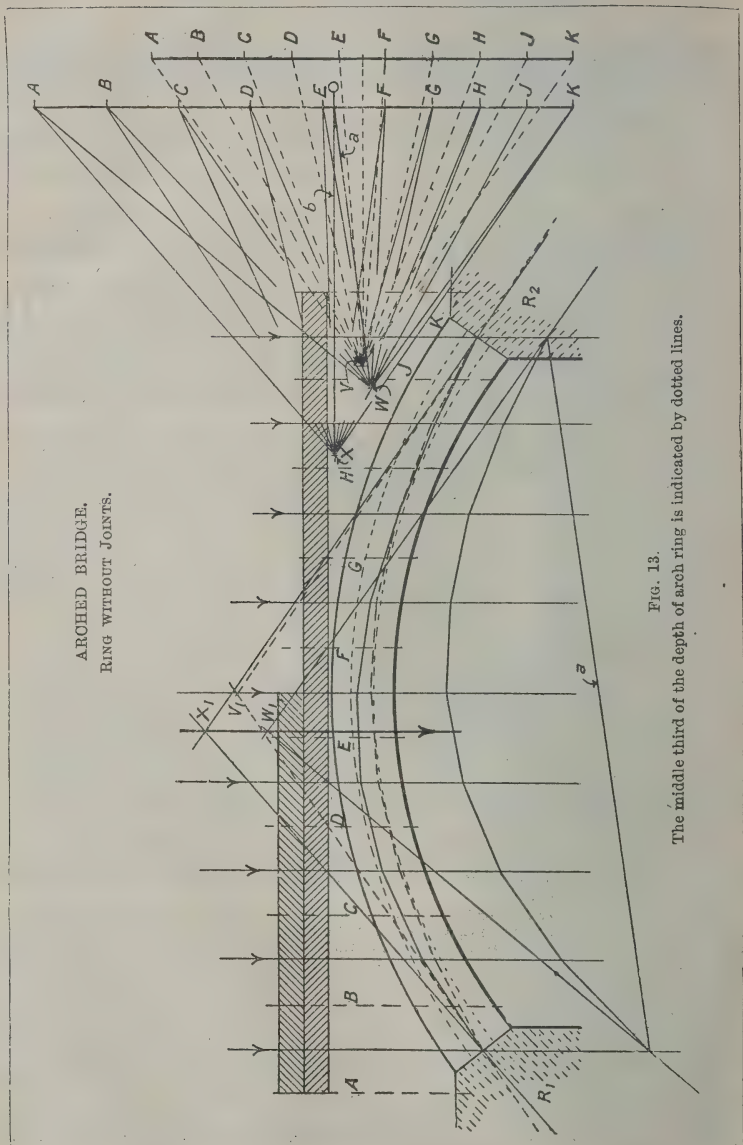


Fig. 13.

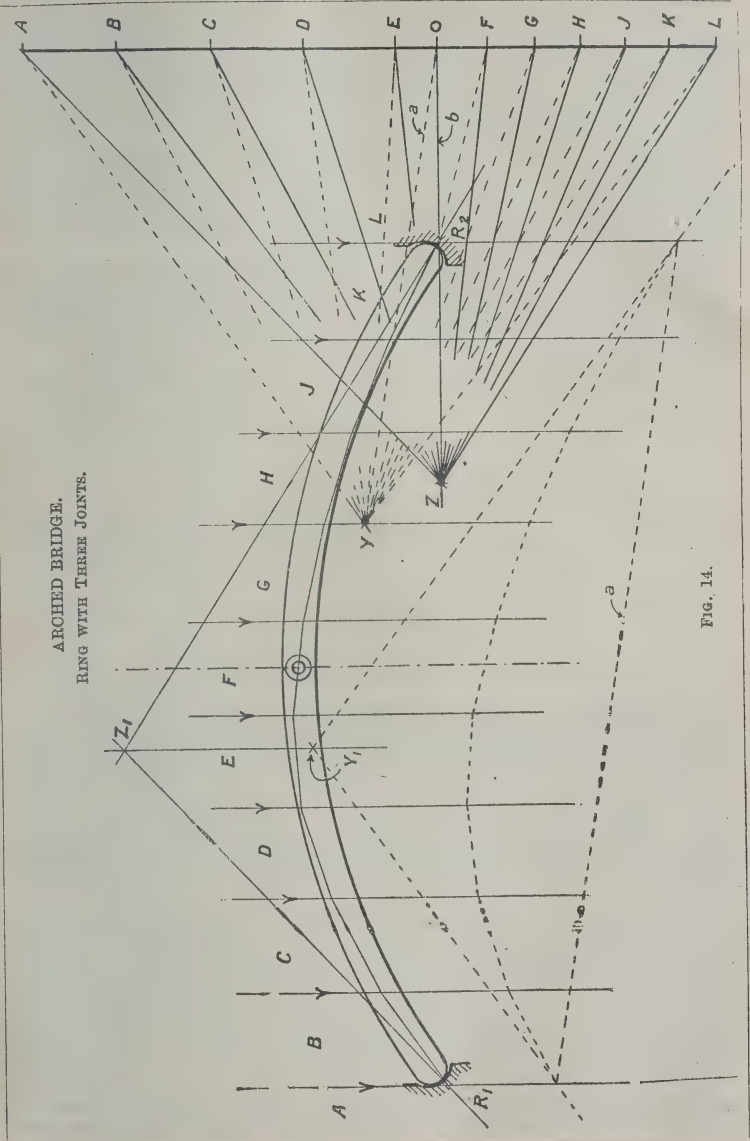The middle third of the depth of arch ring is indicated by dotted lines.



ARCHED BRIDGE.
RING WITH THREE JOINTS.

FIG. 14.

three-hinge arch sustaining an unequally distributed load. After drawing the load line A, B. . . . L, a polar point Y is chosen, and the equilibrium polygon, shown in dotted lines, is completed, the closing line *a* determining the point O in the line of loads which divides this line into two sections, giving the vertical loads on the two abutments. A line from this point O drawn parallel to a line joining the centres of the hinges at the abutments, will give the line *b*, and on this line a point Z is chosen, such that the equilibrium polygon shown in full lines on diagram will pass through the centre hinge. If this centre hinge does not exist, as in type No. 2, the same process would be gone through, but here the aim would be to keep the equilibrium line as near the centre of the depth of the arch ring as possible.

The value of hinges or joints in the arch ring is that definite points are determined at the abutments through which the total thrust must pass, as also does a hinge in the centre of the rib ; another marked advantage of a centre hinge is that a slight yielding of the abutment would imply only a drop in the centre of the ring, but would not induce the excessive bending stress such as would arise in the case of a ring without a centre hinge. Again, a slight lengthening in the arch due to a rise of temperature would not produce excessive stress, owing to the fact that the arch would be enabled to rise more or less freely in the centre.

In addition to drawing equilibrium polygons for the total dead load only, it is advisable in the majority of cases to draw similar polygons for live loads extending over say $\frac{1}{3}$, $\frac{1}{2}$, and $\frac{2}{3}$ of the complete span, and also for the live load confined to the centre of the bridge, and extending for one-fourth of the span on each side of the centre. No other arrangement of the live load is likely to give higher maximum stresses than got from these positions.

The next step necessary is to determine the actual stresses in the arch ring itself, and this may be done as follows :—

Figs. 15 and 16 indicate to a larger scale a portion of the arch shown in fig. 14 about

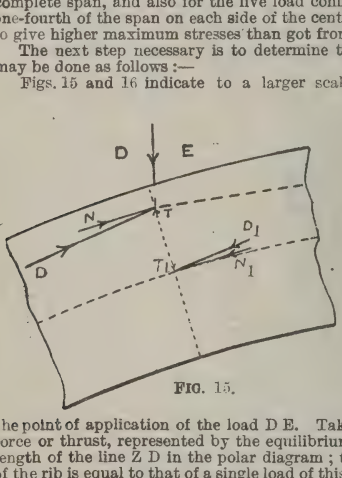


FIG. 15.

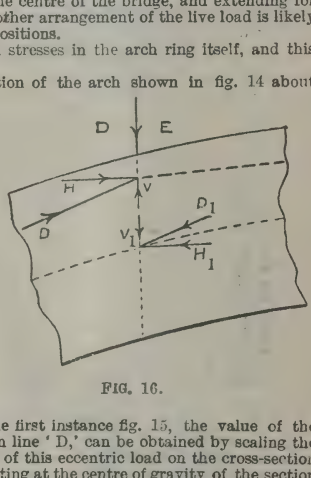


FIG. 16.

the point of application of the load D E. Taking in the first instance fig. 15, the value of the force or thrust, represented by the equilibrium polygon line ' D,' can be obtained by scaling the length of the line Z D in the polar diagram ; the effect of this eccentric load on the cross-section of the rib is equal to that of a single load of this value acting at the centre of gravity of the section (and producing a uniformly distributed compressive stress over the whole section), along with a couple value equal to the load or thrust, multiplied by its normal distance from the neutral axis of rib ; this couple produces a bending tendency, and gives rise to tensile stress at the distant edge and compressive stress at the near edge of the section. The combined result is an increase of compressive stress at the near edge, and a reduction at the far edge. As previously mentioned, should the force act without the middle third of the depth of the ring, the tensile stress due to the couple will be in excess of the uniformly distributed compressive stress, and tension at the distant edge will arise.

Considering the bending moment effect of the couple referred to above. D, D_1, fig. 15, indicate the two forces forming the couple ; these are of value equal to the thrust indicated by the equilibrium polygon, the one acting along the polygon line, and the other at the neutral axis of the arch ring. Each of these forces may be resolved into two forces without altering the effect on the rib ; thus D may be resolved into a force N acting normal to the radius line (shown by a dotted line), and a small force T acting in the direction of the radius line. Similarly D_1 can be resolved into two forces N_1 and T_1, and as T and T_1 are of equal value, but act in opposite directions, these will neutralise or balance one another, with the result that the two forces N, N_1, acting normal to the radius line, will produce the same effect as the two original forces D, D_1. It may be pointed out that the normal force N alone serves to produce direct stress in the arch rib, the smaller resolved force T producing shearing stress : this shearing stress, however, is always very small, and may frequently be neglected.

In calculating the bending moment by means of these resolved forces it is necessary to determine the value of N for each point under consideration ; these calculations, however, can be simplified by modifying this treatment, as indicated in fig. 16. Since the effect of the force D

is not altered by resolving it into any two forces, a vertical line may be chosen, and D resolved into force H acting horizontally, and V acting vertically ; D, would be similarly resolved into H_1 and V_1. A glance at the polar diagram will show that at any point in the equilibrium polygon the horizontal component of the thrust is constant, and can be determined by scaling the length Z O ; from this it will be evident that the values H, H, in fig. 16 will be constant for any section of the arch, and since V, V, neutralise one another, the constant forces H, H, remain. For any section of the ring, therefore, it is only necessary to carefully measure or calculate the vertical distance between polygon line and centre of gravity of the arch ring, and to multiply this by the constant horizontal thrust H, to determine the bending moment value at the point under consideration ; the addition of the uniformly distributed load value will give the complete stress throughout this section.

Thus, if the thrust H, fig. 16, is 40,000 lbs., the vertical distance between H and the neutral axis 8 ins., and the dimensions of the arch ring under consideration are 20 ins. deep × 12 ins. wide ; the uniformly distributed compressive stress throughout the section will be $\frac{40,000}{20 \times 12} = 167$ lbs. per sq. in. ; the B M $= 40,000 \times 8 = 320,000$ inch lbs., and the maximum compression and tension stresses at upper and lower edges of the section $= \frac{320,000 \times 10 \times 12}{12 \times 20^3} = 400$ lbs. This gives the total maximum compression at the upper edge $= 167 + 400 = 567$ lbs. per sq. in., and the total tension at lower edge $= 400 - 167 = 233$ lbs. per sq. in., necessitating the addition of steel reinforcement at the tension portion.

Temperature stresses due to variations in the temperature of the arch may be considerable, and should be carefully examined ; a rise of temperature (by causing expansion) tends to increase the compression stress, while a fall has the opposite effect. The result is very similar to that of increasing or reducing the horizontal thrust (or the distance Z O in the polar diagram) throughout the arch. Owing to the mass of the materials, and its non-conducting nature, the range of temperature in concrete arches will probably not exceed 15° to 20° Fahr. between summer and winter seasons.

Specification for Reinforced Concrete Work.

The following sketch specification may be of assistance. It can be modified to any required extent to meet special conditions.

(Date) ——————

Specification for Reinforced Concrete Work to be executed in erecting New Premises at ——————— for Messrs. ———————

Engineer.

Architect.

General Description and Conditions.—The Structure will be erected in strict accordance with the Engineer's Drawings Nos. ..... and ..... and to any further Detail Drawings to be afterwards provided.

The Structure will consist of (*give general description*). The Foundations shall be taken out to (*the clay, ballast?*). The Maximum Load at this point must not exceed ..... tons per square foot. The average depth of foundations may be assumed as ..... below datum level.

The whole of the work included in this Contract shall be constructed of the best materials and workmanship, and shall be carried out to the entire approval of the Consulting Engineer, and be completed to his satisfaction.

No variations or alterations from Specification or Drawings shall be permitted unless same are approved in writing by the Consulting Engineer.

Immediately on acceptance of his tender, the Contractor must provide a complete and detailed Bill of Quantities (priced in ink) for this work. Should any variations or alterations occur during the carrying out of the work, the variations shall be measured up and priced according to the Bill of Quantities, and any necessary additions or deductions thereafter made from the quoted lump sum price. Any materials or labour required during the progress of the work which are not indicated in the Bill of Quantities shall be paid for at Rates or Prices to be agreed with the Engineer.

The Contractor will be responsible for meeting all requirements of the London County Council, or other Local Authorities, with regard to the mode of construction or the carrying out of same, and shall at once notify the Consulting Engineer should such requirements necessitate any modification in his designs or details.

The Contractor will be held responsible for setting out the Works, and for amending any errors due to inaccuracy, or other cause, at his own cost.

The Contractor must provide for these Works all labour, tools, tackle, boards, horsing, centering, scaffolding, cartage, water, etc.

The Contractor must provide and maintain proper sheds, latrines, and other accommodation for the use of workmen, and proper sheds and shelters for the protection of materials.

The Contractor will be held responsible for all losses, accidents, and damages that may happen to the works, adjoining properties, or persons during the progress, and caused by the execution of the Works.

The Contractor will be bound to complete all the Works contained in this Specification, etc., within ..... months of the date of signing the Contract or obtaining possession of site, under the penalty of ..... per week or part of a week as liquidated and agreed damages, except the delay in the opinion of the Engineer arises from causes beyond the control of the Contractors, in which case the Engineer shall grant an extension of time in writing.

The Contractor must allow for making good at his own expense any defect or defects which may become noticeable in the Works during a period of twelve months after certified completion.

Samples.—Samples of all materials must be submitted to the Consulting Engineer, and approved by him in writing before same are used. All materials rejected must be removed immediately from the vicinity of the Works.

Cement.—The Cement used must be the best quality of British Portland Cement, of an approved make, and guaranteed to conform to the Specification of the British Standards Committee for slow-setting cement. Before being used all Cement must be tested, as required by the Engineer, at the Contractor's expense. The Cement should be delivered to the Site in sealed bags bearing the maker's name and the weight of the cement contained.

Cement shall be stored on the Site in such a manner as to permit of easy access for proper inspection and identification. The building used for same must be raised from the ground, and properly weatherproofed to protect the cement.

Sand.—The Sand used shall be clean, sharp, and coarse, composed of grains of various sizes up to particles which shall pass a ½-inch square mesh, but of which at least 75 per cent. shall pass a ⅛-inch square mesh. It shall be free from all ligneous, organic, or earthy matter.

Aggregate.—This must be composed of Thames ballast; screened, broken stone of a hard close-grained quality; or gravel, cleaned free from organic matter, and angular, varied in size as much as possible, and to pass through a ¾-inch ring, but not through a ¼-inch ring.

Proportions of Concrete.—(*Here specify the composition of concrete, which for usual requirements, may be 1 part cement, 2 sand, 4 aggregate. Foundations are frequently made of a weaker mixture, say* 1 : 3 : 6.) These proportions are approximately correct, but in all cases sufficient sand must be added to fill the interstices. The proportioning should be done in an approved manner, as by means of a bottomless box, to insure each of the materials being accurately measured.

Mixing of Concrete.—The concrete must be thoroughly well mixed in a suitable machine, sufficient clean water being added to convert the whole into a semi-liquid mass, which will quiver under the blows of the rammer. The water for each batch of concrete must be measured in a small tank, so as to insure the same amount being used each time. When consent is given to mix any of the concrete by hand, it shall be done as follows:—The necessary quantity of the three materials—coarse aggregate, sand, and cement—shall be measured separately, 5 per cent. more cement being added in addition to the above specified amount. The materials should first be thoroughly mixed dry, then the necessary amount of water added, and the mixing continued till the concrete shows a uniform colour. As far as possible, the mixture shall always be brought to the same degree of wetness. A competent foreman must be in constant attendance at the mixer, to give his approval of every batch which leaves the machine.

Allowable Working Stresses.—(*Here specify maximum stresses desired, or state requirements to be those embodied in Report of R.I.B.A. Joint Committee.*)

Steel Reinforcement.—All steel used should have a tensile strength of not less than 60,000 lbs. per square inch of section, and an elastic limit of not less than 50 per cent., nor more than 60 per cent. of the ultimate tensile strength, with an elongation of not less than 20 per cent. in a length of 8 ins. Any bar must stand bending cold round a bar of its own diameter, through an angle of 180°, and should close down upon itself without fracture on the outside of the bent portion. All welding will be prohibited, unless where absolutely necessary, and must be done only with the sanction of the Consulting Engineer.

All bars shall be free from scale, flaws, or other imperfections, and from oil, but a slight coating of rust is not objectionable. Wherever cinder concrete is used, the bars before being placed in position should receive a coating of neat cement grouting.

Any temporarily protruding bars which shall be exposed to the weather for any period must be protected from rusting by a thin coat of cement grout.

Centering.—All centering must be of dressed timber with close joints, and must be true to line, and sufficiently braced and strutted to be rigid and free from measurable deflection when carrying the dead load of the concrete which is to be placed upon it. A slight camber of ¼ in. per 10 ft. of span should be given to all beams, &c. It must also be without appreciable deflection when men are working upon it, and barrows, &c., are being wheeled over it. The joints must be tight, so as to prevent leakage of the liquid cement. The centering shall be arranged so that the sides of the columns can first be removed, then that at the side of beams, and below floor slabs, and finally that below the beams themselves. The time of removal of these several portions shall be arranged with the Consulting Engineer.

Placing of Reinforcement.—All bars must be accurately placed in the exact position shown on the detail drawings, and great care must be taken that they are not displaced during the process of packing the concrete around them. Where, for unavoidable reasons, it is necessary to stop the concreting work, care must be taken to place in position all the bars which will be embedded in the portion of the concrete work which is being executed.

Placing of Concrete.—Before any concrete is put in position a careful inspection of the centering must be made, to ascertain that no dirt, shavings, loose stones, etc., have been allowed to remain in or about the centering, and the woodwork should be well watered to avoid any danger of its sucking up too much moisture from the concrete.

All concrete shall be placed in its final position in the work as soon as possible after mixing. In no case must more than half-an-hour be allowed to elapse before this is done. The concrete must be placed gently into position, in layers not exceeding 6 inches thick, and must not be tipped or dropped from a height. It must then be thoroughly rammed into position, great care being taken to see that the steel reinforcement is thoroughly surrounded by the liquid cement, and that no voids or cavities are left. This can be insured only by repeated ramming with a suitable tool.

In hot weather the concrete shall be continually moistened for at least a week after placing in position.

In beams and slabs, if any difficulty is found in getting the concrete to pass through the bars which have been placed in position in the bottom of the timber centering, the concrete at the bottom of the beam should be made of finer and more liquid consistency than that used elsewhere, so that it may freely pass between the bars.

Cessation and Recommencement of Work.—Stoppage of work in laying concrete in slabs, beams, etc., will be allowed only at the centre of the span of the slab, or a beam, and the joint with the new concrete should be a vertical plane at right angles to the direction of the span of beam or slab. No joint must be made towards the ends of beams or slabs, or close to a concentrated load.

Wherever a stop has been made in concreting, before recommencing the work, the surface of the existing concrete must be carefully washed with a stiff brush to remove loose particles and dust, and a thick grout of neat cement must be poured over it before the concrete is rammed against it.

Frosty Weather.—No concreting work should be done when the temperature is near or below freezing point. If a frost comes on shortly after any concreting work has been completed, this should be very carefully covered over with sawdust, straw, or sacking, and the centering must be allowed to remain up for at least as long a time after the complete disappearance of the frost as it would have been left in position if no frost had occurred.

Finish.—All concrete roofs and gutters must be laid with the necessary fall, and finished for asphalte, all as may be directed.

All floors shall be finished. (*Here state whether cement, granolithic, preparation for wood blocking, or other covering is desired.*)

The top surface of all outside walls to be weathered.

Tests.—The Maker's Certificate must be provided, when required, with each lot of steel reinforcing bars supplied, but in addition to this the Consulting Engineer shall choose whatever test pieces he may desire from the material delivered, and shall have same tested by Messrs. Kirkaldy, or other firm, and should the result not comply with Specification the right is reserved to condemn all bars included in same consignment.

The cement shall be tested as required, and must comply with the Specification. Cubes of concrete from the material used shall be made as and when directed, and these shall be tested for crushing strength by Messrs. Kirkaldy, or other firm.

The Consulting Engineer shall select at least one bay in each floor, or the equivalent, and these bays shall be tested to $1\frac{1}{2}$ times the safe superimposed load, by means of bricks, cement bags, or in such other manner as the Engineer may decide. Should the deflection under this test exceed $\frac{1}{800}$th part of the span, or should the beam or floor slab fail to regain its normal position after the removal of the load, or show any indication whatever of weakness, the building shall be considered unsafe, and the contractor shall carry out at his own expense such additional work as the Engineer may consider necessary to make the building secure.

The cost of all such testing shall be borne by the Contractor.

Practical Notes.

Wood Strips.

Particularly long lengths of wood for nailing strips in concrete beams should be avoided; they have been known to absorb the moisture from the concrete, and cause serious cracks in the beams. Short plugs are the safest, and where a nailing strip must be used flush with beams, a moulded impress of the wood strip should be made and the strip then removed, and only fixed when the concrete beam is thoroughly dry, it being then secured by means of the plugs. (*Horobin.*)

Durability.

Reinforced concrete will last as long as plain concrete in any situation provided that certain special precautions are taken during its construction. The precautions to be taken are as follows: The materials (cement, sand, and stone) must be of good quality. They must be most carefully and thoroughly mixed and scientifically proportioned, so as to be practically water-proof and air-proof. The mixture must be fairly wet, and must be well punned into position so as to minimise voids. The aggregate should be as non-porous as possible, and any aggregate which

is known to have a chemical action on steel should be avoided. The aggregate should all pass through a $\frac{3}{4}$ in. mesh. The concrete covering should in no case be less than $\frac{1}{2}$ in., and it is suggested that if round or square bars be used the covering should not be less than the diameter of the bar. In structures exposed to the action of water or damp air the thickness of covering should be increased at least 50 per cent., or the size of the aggregate should be reduced so as to ensure a dense skin. In the case of structures exposed to very severe conditions the concrete might be covered with some impervious coating as an extra precaution. The reinforcement should be so arranged that there shall be sufficient space between one piece and its neighbour to allow the concrete to pass and to completely surround every part of the steel. All steel should be firmly supported during the ramming of the concrete, so as to avoid displacement. It should not be oiled or painted, and thick rust should be scraped and brushed off before placing. The scantling of the various members of the structure should be sufficient to prevent excessive deflection. If electric mains are laid down very great care must be taken that no current is allowed to pass through the reinforced concrete. Fresh water should be used in mixing, and aggregates charged with salt should be washed. These recommendations have regard only to the prevention of corrosion of steel and not to fire-resistance or any other property of reinforced concrete. (*Committee of the Concrete Institute.*)

Causes of Failures in Concrete Structures.

Owing to the failure of several reinforced concrete floors in the United States within ten or a dozen years of their construction, Prof. H. J. M. Creighton, of Swarthmore College, examined a large number of reinforced concrete structures in which cracks were developing, and found that in every case the cracks ran along the reinforcing rods, due to the deteriorating action of salt and brine on the concrete. Solutions of the chlorides reacted with the lime and the silicates in the concrete, and penetrating to the iron of the reinforcement converted it into oxide and hydrate, which occupy more space than the metal and force the concrete apart. It was therefore necessary to waterproof reinforced concrete structures which will be in contact with brine, to cease to use in the concrete beach gravel which has not been thoroughly washed with fresh water, and never to add salt to the concrete to prevent it freezing during building operations in cold weather.

Cracking.

According to a recent report, the cracking of reinforced concrete structures is markedly prevalent in the Philippine Islands. A study of this trouble has shown that not a single structure showing rusted steel has been free from salt, the percentage of which varies considerably. In view of this, engineers in the Philippines have been advised that not only is the use of salt water dangerous in concrete structures, but that beach sand and beach gravel should be employed only after having been thoroughly washed with fresh water. The foregoing, and many other similar pieces of evidence, indicate that salt and brine exert a deteriorating action on concrete.

Specification Notes.

Specifications governing concrete construction generally require that 1–2–4 concrete be used in the best class of reinforced concrete construction. In other reinforced concrete work, and in some mass concrete work, 1–3–5 concrete is specified, while in other mass work, such as dams, gravity retaining walls, etc., 1–3–6 concrete is generally required.

TABLE GIVING THE SECTIONAL AREAS OF **Round and Square Rods** AT VARIOUS DISTANCES APART, IN 12-INCH WIDTH OF SLAB.

Diameter in Ins.	Circumference in Ins.	Area in Sq. Ins.	Distance in Inches from Centre to Centre of **Round** Rods.										
			2½	3	4	5	6	7	8	9	10	11	12
¼	0·785	0·049	0·24	0·20	0·15	0·12	0·10	0·08	0·07	0·06	0·06	0·05	0·05
5/16	0·982	0·077	0·37	0·31	0·23	0·18	0·15	0·13	0·11	0·10	0·09	0·08	0·08
3/8	1·178	0·110	0·53	0·44	0·33	0·26	0·22	0·19	0·16	0·15	0·13	0·12	0·11
7/16	1·374	0·150	0·72	0·60	0·45	0·36	0·30	0·25	0·22	0·20	0·18	0·16	0·15
½	1·571	0·196	0·94	0·78	0·59	0·47	0·39	0·33	0·29	0·26	0·23	0·21	0·20
9/16	1·767	0·248	1·19	0·99	0·74	0·59	0·50	0·42	0·37	0·33	0·30	0·27	0·25
5/8	1·964	0·307	1·47	1·23	0·92	0·74	0·61	0·52	0·46	0·41	0·37	0·33	0·31
11/16	2·160	0·371	1·78	1·48	1·11	0·89	0·74	0·63	0·56	0·49	0·44	0·40	0·37
¾	2·356	0·442	2·12	1·77	1·32	1·06	0·88	0·75	0·66	0·59	0·53	0·48	0·44
13/16	2·552	0·518	2·49	2·07	1·55	1·24	1·04	0·88	0·78	0·69	0·62	0·56	0·52

TABLE GIVING THE SECTIONAL AREAS OF **Round and Square Rods** AT VARIOUS DISTANCES APART, IN 12-INCH WIDTH OF SLAB—*continued.*

Diameter in Ins.	Circumference in Ins.	Area in Sq. Ins.	Distance in Inches from Centre to Centre of **Round** Rods—*continued.*										
			2½	3	4	5	6	7	8	9	10	11	12
⅞	2·743	0·601	2·89	2·40	1·80	1·44	1·20	1·02	0·90	0·80	0·72	0·65	0·60
15/16	2·945	0·690	3·31	2·76	2·07	1·66	1·38	1·17	1·03	0·92	0·83	0·75	0·69
1	3·142	0·785	3·77	3·14	2·36	1·88	1·57	1·33	1·18	1·05	0·94	0·86	0·78
1 1/16	3·338	0·887	—	3·55	2·66	2·13	1·77	1·51	1·33	1·18	1·06	0·97	0·89
1⅛	3·534	0·994	—	3·98	2·97	2·39	1·99	1·69	1·49	1·32	1·19	1·08	0·99
1 3/16	3·731	1·107	—	—	3·32	2·66	2·21	1·88	1·66	1·48	1·33	1·21	1·11
1¼	3·927	1·227	—	—	3·68	2·94	2·45	2·09	1·84	1·64	1·47	1·34	1·23
1 5/16	4·123	1·353	—	—	—	3·25	2·71	2·30	2·03	1·80	1·62	1·47	1·35
1⅜	4·320	1·485	—	—	—	3·56	2·97	2·52	2·23	1·98	1·78	1·62	1·48
1 7/16	4·516	1·623	—	—	—	—	3·25	2·76	2·43	2·16	1·95	1·77	1·62
1½	4·712	1·767	—	—	—	—	3·53	3·00	2·65	2·36	2·12	1·93	1·77

Side in Ins.	Perimeter in Ins.	Area in Sq. Ins.	Distance in Inches from Centre to Centre of **Square** Rods.										
			2½	3	4	5	6	7	8	9	10	11	12
¼	1·00	0 063	0·30	0·25	0·19	0·15	0·13	0·11	0·09	0·08	0·07	0·07	0 06
5/16	1·25	0·098	0·47	0·39	0·29	0·23	0·20	0·17	0·15	0·13	0·12	0·11	0·10
⅜	1·50	0·141	0·68	0·56	0·42	0·34	0·28	0·24	0·21	0·19	0·17	0·15	0·14
7/16	1·75	0·192	0·92	0·77	0·58	0·46	0·38	0·33	0·29	0·26	0·23	0·21	0·19
½	2·00	0·250	1·20	1·00	0·75	0·60	0·50	0·43	0·37	0·33	0 30	0·27	0·25
9/16	2·25	0·317	1·52	1·27	0·95	0·76	0·63	0·54	0·47	0·42	0·38	0·34	0 32
5/8	2·50	0·392	1·88	1·57	1·77	0·94	0·78	0·67	0·59	0·52	0·47	0·43	0·39
11/16	2·75	0·474	2·27	1·90	1·42	1·14	0·95	0·81	0·71	0·63	0 57	0·52	0·47
¾	3·00	0·564	2·71	2·26	1·69	1·35	1·13	0·96	0·84	0·75	0·68	0·61	0·56
13/16	3·25	0·661	3·17	2·64	1·98	1·59	1·32	1·13	0·99	0·88	0·79	0·72	0·66
7/8	3·50	0·767	3·68	3·07	2·30	1·84	1·53	1·31	1·15	1·02	0·92	0·84	0·77
15/16	3·75	0·881	4·23	3·52	2·64	2·11	1·76	1·51	1·32	1·17	1·03	0·96	0·88
1	4·00	1·000	4·80	4·00	3·00	2·40	2·00	1·71	1·50	1·33	1·20	1·09	1·00
1 1/16	4·50	1·266	6·08	5·06	3·80	3·04	2·53	2·16	1·90	1·69	1·52	1·38	1·27
1¼	5·00	1·575	7·56	6·30	4·72	3·78	3·15	2·69	2·36	2·10	1·89	1·72	1·57
1 3/16	5·50	1·905	9·14	7·62	5·71	4·57	3·81	3·26	2·86	2·54	2·29	2·08	1·90
1½	6·00	2·253	10·81	9·01	6·76	5·41	4·51	3 85	3·38	3·00	2·70	2·45	2·25

REINFORCED CONCRETE FOR FACTORY WORK.

One of the objections to the employment of reinforced concrete for factory work has been the difficulty experienced in attaching shaft hangers, pipe lays, and other fixtures, because on the hardness of the material. *Building Products Ltd.* (51 Columbia House, 44/46 King's Road, Chelsea, S.W. 3) claim to have solved the problem by employing standard pressed steel fittings called RIGIFIX bolt-hanger sockets and slotted inserts. These are embedded in the beams and columns of the building during course of construction. The bolt-hanger sockets are placed at fixed points to receive a ⅜-in. or ½-in. bolt. The inserts are supplied in 12 in., 18 in., and 36 in. lengths, the runway being provided with a slot to receive a ¾-in. or ⅝-in. bolt, which can be moved to any point on the length. Many modern factories have adopted these fitments.

SECTION XI

EARTHWORK – EXCAVATION – FOUNDATIONS – PILING – SCAFFOLDING – STAGINGS – SHORING – DAMS – RETAINING WALLS – CHIMNEYS – STONE AND BRICK ARCHES – PIERS – BRIDGES

(With contributions by Reginald Ryves, A.M.Inst.C.E.)

SIDE GROOVE STEEL PILING ENGLISH ROLLED

ANNISON'S

PATENT

21·75 INCHES CENTRES.

Known the world over as the widest piling made, and consequently the cheapest to drive and withdraw. Strongest interlocking joints and general adaptability

HEAVY PILING - - - - 41¾ lbs. per square foot.
LIGHT PILING - - - - 25 lbs. per square foot.

We Supply Extractors for withdrawing Piles

THE SIDE GROOVE STEEL PILING SUPPLY Co. Ltd.

17 VICTORIA STREET, WESTMINSTER, S.W. 1.

'Phone: Vic. 1325. Telegrams: Sidropud, Vic., London.



As supplied to H.M. War Office.

'Phone: Minories 2455.
Telegrams:
Sopidric, Bilgate, London.

PILE DRIVING MACHINERY & EQUIPMENT

of the well-known 'Southgate' type, embodying all the latest improvements for driving either steel or heavy concrete piles. Specialists of long standing and experience.

THE SOUTHGATE PILE DRIVER CO.

Proprietors, THE SIDE GROOVE STEEL PILING SUPPLY Co. Ld.

Established 1884.

16 WATER LANE, GREAT TOWER ST., LONDON, E.C. 3.

SECTION XI

EARTHWORK — EXCAVATION — FOUNDATIONS — PILING — SCAFFOLDING — STAGINGS — SHORING — DAMS — RETAINING-WALLS — CHIMNEYS — STONE AND BRICK ARCHES—PIERS—BRIDGES.

EARTHWORK.

To determine the Volume of Earth in a Railway Cutting.

First Method.

Divide the length of the cutting into an *even* number of equal parts, and take the areas of the transverse sections at the points of division. Add together the areas of the extreme sections, twice the sum of the areas of all the intermediate sections of an *odd* order, and four times the sum of the areas of all the intermediate sections of an *even* order, and multiply by the distance between two consecutive sections; the product will be three times the volume.

Second Method.




FIG. 124.

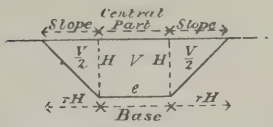


FIG. 125.

If, h = heights of section, in feet, at each end of a length, l, in feet (fig. 124).

rH = breadth of each slope at one end (fig. 125).

rh = breadth of each slope at other end.

(r = ratio of breadth of each slope to height = $\frac{\text{breadth}}{\text{height}}$).

e = base

$\frac{A}{2}$ = area of each slope at one end.

$\frac{a}{2}$ = area of each slope at other end.

V = cubic contents of both slopes = $\frac{1}{3}(A + \sqrt{A}a + a) \times l = \frac{1}{3}r(H^2 + Hh + h^2) \times l$.

V = cubic contents of centre = $\frac{1}{2}(H + h)e \times l$.

Q = cubic contents of length, l, in feet = V + V.

Third Method.

If the transverse section is on an incline, instead of horizontal, as in figs. 126 and 127, then, if A, A′, a, and a' are the respective areas of the ends of the slopes,

$$V = \tfrac{1}{6}(A + \sqrt{Aa} + a) \times l + \tfrac{1}{6}(A' + \sqrt{A'a'} + a') \times l. \qquad V = \tfrac{1}{2}(H + h)e \times l.$$

The longitudinal section of the line of railway, road, or canal, having been drawn, and the gradients laid off, the quantities of earthwork may be calculated as follows :—

If the ground is tolerably even, record the heights (or depths in cuttings) on the section at every 100 feet, or some other convenient distance. The sectional areas at each of these recorded heights (or depths) may then be calculated.

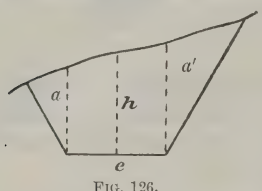


FIG. 126.

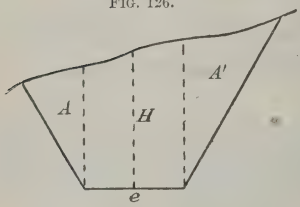


FIG. 127.

Let
A = area of section, s = s to 1 slope,
h = height or depth of section,
F = width at formation-level,

all expressed in feet ; then, if the slopes on both sides are the same, as is usually the case,

$$A = h(sh + F).$$

By this formula the areas of the first three sections of a series increasing in height regularly are calculated, and from them the remainder are at once written down by the method of second differences, as follows :

Assume heights to be 1, 2, 3, 4, 5 feet,

$$F = 10, \quad s = 2 \text{ to } 1.$$

Then

		Difference.	Second Difference.
A for 1 ft. =	12		
		16	
„ 2 „ =	28		4
		20	
„ 3 „ =	48		
		24	—
„ 4 „ =	72 ..		
		28	—
„ 5 „ =	100 ..		

and so on.

If the cross-slope of the ground is not much, and the areas of the sections do not differ very widely, the quantity of earthwork may be found by taking the mean of the two areas and multiplying by the distance between them, thus :

A′ = area of first section ; A″ = area of second section ; d = distance apart.

$$\text{Cubic contents} = d \frac{A' + A''}{2} \text{ feet.}$$

When the cross-slope is considerable, and the heights of the section differ widely, cross-sections must be taken at each place, and their areas calculated independently, and the cubic contents should then be calculated by the *First Method.*

Earthwork Tables.*

(H. R. Kempe.)

The tables on pages 482 to 487 are for the purpose of facilitating the calculation of the volumes of earthwork.

V = cubic contents, in *yards*, of both slopes.
V = cubic contents, in *yards*, of centre part.

V is calculated from the formula

$$V = \tfrac{1}{3}r(H^2 + Hh + h^2) \times l,$$

being = 1, l = 1 chain = 66 feet, and H and h being in *feet* ; so that

$$V = \tfrac{1}{3}(H^2 + Hh + h^2)\,66 \div 27 = \cdot 814815\,(H^2 + Hh + h^2) \text{ cubic yards.}$$

V is calculated from the formula

$$V = \tfrac{1}{2}(H + h)e \times l,$$

e being = 1 foot ; so that

$$V = \tfrac{1}{2}(H + h)\,66 \div 27 = 1 \cdot 22222\,(H + h) \text{ cubic yards.}$$

For any slope other than 1 to 1 the values of V in Table I. must be multiplied by r, that is by $\frac{\text{breadth of slope}}{\text{height of slope}}$. Table II. gives the values of V and V for slopes of 1 to 1½.

* Revised 1920.

EXAMPLE.—The length of a cutting is 3 chains, the width 10 feet, the $\frac{\text{breadth of slope}}{\text{height of slope}} = 2$ the height at one end 20 feet, and at the other end 15 feet; what is the cubic content of the cutting?

From table (page 483), V = 753·70, V = 42·78: then,

total cubic content = (753·70 × 2 + 42·78 × 10)3 = 5805·60 cubic yards.

Excavation.

A good excavator will dig and throw into a barrow in a day of 10 hours:

In common ground, from 8 to 10 cubic yards. In stiff clay or firm gravel, 6 cubic yards. In hard ground, where picking is required, from 3 to 5 cubic yards.

One excavator to 5 or 6 feet breadth of face of a cutting is as near as they should be.

A shoveller will throw each shovelful of earth from 6 to 10 feet horizontally, or from 4 to 5 feet vertically upwards.

PROPORTION OF EXCAVATORS, SHOVELLERS, AND WHEELERS (100 to 120 ft.).

Material.	Excavators.	Shovellers.	Wheelers.
Loose sand and vegetable moulds	0	1	1
Compact earth	½	1	1
Ordinary clay	½ to 1	1	1
Hard clay	1½ to 2	1	1

The rate at which a cutting may be expected to advance will be, for each line of wheelers or for each shoveller, in one rank:

20 cubic yards of loose sand or mould a day. 16 cubic yards of clay or compact earth a day.

EXCAVATOR MACHINES.

A modern excavator, equipped with 1½ cubic yard bucket, working in easily filled ground, can average about 600 cubic yards measured in the solid per ten-hour day when working under the most favourable conditions. In fairly stiff shale and clay 450 to 500 cubic yards. In strong ground with occasional beds of rock, 350 to 450 cubic yards. Nothing but experience will enable anyone to predict with confidence what the average daily output will be. Much larger outputs than 600 cubic yards can be obtained often for weeks together, but if at the end of the work the quantity of excavation paid for is divided by the number of shifts worked, there are not many cases where 600 cubic yards will be exceeded.

The excavating time and the estimated average daily output determine the number of machines required.

Buying second-hand excavators on large work is not advisable, unless they have done practically no work. When they are used there are always delays due to breakages, which do not occur with new machines. Steam excavators are subject to very severe shocks when at work, and unless they are in first-rate order a lot of time is lost in repairing, and worse, both foreman and driver lose interest.

It takes five men to clean up and get the machine ahead promptly; one man to look after the coal and water supply; two men putting in jumps to keep the empty waggon road close behind the machine, so that no time is lost between waggons; two horses and drivers; one or two waggon stoppers; three boys to fat waggons, turn points, and take trace chains from full to empty waggons; one foreman. Three men are required on the excavator itself—driver, fireman, and wheelsman.—(*The Engineer*, *June* 23, 1911.)

See also INDEX.

Shrinkage of Materials.


In estimating the relative amounts of excavation and embankment required, allowance must be made for difference in the spaces occupied by the material before excavation and after it is settled in embankment. The shrinkage of the different materials is about as follows:—

Gravel	8 per cent.
Gravel and sand	9 per cent.
Clay and clay earths	10 per cent.
Loam and light sandy earths	12 per cent.
Loose vegetable soil	15 per cent.
Puddled clay	25 per cent.

Rock, on the other hand, increases in volume by being broken up, and does not settle again into less than its original bulk. The increase may be taken at 50 per cent. Thus, an excavation of loam measuring 1,000 cubic yards will form only about 880 cubic yards of embankment, or an embankment of 1,000 cubic yards will require about 1,120 cubic yards measured in excavation to make it. A rock excavation measuring 1,000 cubic yards will make from 1,500 to 1,700 cubic yards of embankment, depending upon the size of the fragments.

TABLE I. FOR CALCULATING EARTHWORK.


Slopes 1 to 1. Base = 1 foot. l = 66 feet = 1 chain. H and h in feet. V and V in cubic yards.



H	h = 0		1		2		3		4		5		6		7		8		9	
	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V
1	·81	1·22	2·44	2·44																
2	3·26	2·44	5·70	3·67	9·78	4·89														
3	7·33	3·67	10·59	4·89	15·48	6·11	22·00	7·33												
4	13·04	4·89	17·11	6·11	22·81	7·33	30·15	8·56	39·11	9·78										
5	20·37	6·11	25·26	7·33	31·78	8·56	39·92	9·78	49·70	11·00	61·11	12·22								
6	29·33	7·33	35·04	8·56	42·37	9·78	51·33	11·00	61·92	12·22	74·15	13·44	88·00	14·67						
7	39·93	8·56	46·45	9·78	54·59	11·00	64·37	12·22	75·78	13·44	88·81	14·67	103·48	15·89	119·78	17·11				
8	52·15	9·78	59·48	11·00	68·44	12·22	79·04	13·44	91·26	14·67	105·11	15·89	120·59	17·11	137·70	18·33	156·44	19·56		
9	66·00	11·00	74·15	12·22	83·93	13·44	95·33	14·67	108·37	15·89	123·04	17·11	139·33	18·33	157·26	19·56	176·81	20·78	198·00	22·00
10	81·48	12·22	90·44	13·44	101·04	14·67	113·26	15·89	127·11	17·11	142·59	18·33	159·70	19·56	178·44	20·78	198·81	22·00	220·81	23·22
11	98·59	13·44	108·37	14·67	119·78	15·89	132·81	17·11	147·48	18·33	163·78	19·56	181·70	20·78	201·26	22·00	222·44	23·22	245·26	24·44
12	117·33	14·67	127·93	15·89	140·15	17·11	154·00	18·33	169·48	19·56	186·59	20·78	205·33	22·00	226·70	23·22	247·70	24·44	271·33	25·67
13	137·70	15·89	149·11	17·11	162·15	18·33	176·81	19·56	193·11	20·78	211·04	22·00	230·59	23·22	251·78	24·44	274·59	25·67	299·04	26·89
14	159·70	17·11	171·93	18·33	185·78	19·56	201·26	20·78	218·37	22·00	237·11	23·22	257·48	24·44	279·48	25·67	303·11	26·89	328·37	28·11	
15	183·33	18·33	196·37	19·56	211·04	20·78	227·33	22·00	245·26	23·22	264·81	24·44	286·00	25·67	308·81	26·89	333·26	28·11	359·33	29·33
16	208·59	19·56	222·44	20·78	237·93	22·00	255·04	23·22	273·78	24·44	294·15	25·67	316·15	26·89	339·78	28·11	365·03	29·33	391·92	30·56
17	235·48	20·78	250·15	22·00	266·44	23·22	284·37	24·44	303·92	25·67	325·11	26·89	347·92	28·11	372·37	29·33	398·44	30·56	426·15	31·78
18	264·00	22·00	279·48	23·22	296·59	24·44	315·33	25·67	335·70	26·89	357·70	28·11	381·33	29·33	406·59	30·56	433·48	31·78	462·00	33·00
19	294·15	23·22	310·45	24·44	328·37	25·67	347·92	26·89	369·11	28·11	391·92	29·33	416·37	30·56	442·44	31·78	470·15	33·00	499·48	34·22
20	325·93	24·44	343·04	25·67	361·78	26·89	382·15	28·11	404·15	29·33	427·78	30·56	453·04	31·78	479·92	33·00	508·44	34·22	538·59	35·44
21	359·33	25·67	377·26	26·89	396·81	28·11	418·00	29·33	440·81	30·56	465·26	31·78	491·33	33·00	519·04	34·22	548·37	35·44	579·33	36·67
22	394·37	26·89	415·11	28·11	433·48	29·33	455·48	30·56	479·11	31·78	504·37	33·00	531·26	34·22	559·78	35·44	589·92	36·67	621·70	37·89
23	431·04	28·11	450·59	29·33	471·78	30·56	494·59	31·78	519·04	33·00	545·11	34·22	572·81	35·44	602·15	36·67	633·11	37·89	665·70	39·11
24	469·33	29·33	489·70	30·56	511·70	31·78	535·33	33·00	560·59	34·22	587·48	35·44	616·00	36·67	646·15	37·89	677·92	39·11	711·33	40·33
25	509·26	30·56	530·45	31·78	553·26	33·00	577·70	34·22	603·78	35·44	631·48	36·67	660·81	37·89	691·78	39·11	724·37	40·33	758·59	41·56
26	550·81	31·78	572·81	33·00	596·44	34·22	621·70	35·44	648·59	36·67	677·11	37·89	707·26	39·11	739·04	40·33	772·44	41·56	807·48	42·78
27	594·00	33·00	616·81	34·22	641·26	35·44	667·33	36·67	695·04	37·89	724·37	39·11	755·33	40·33	787·92	41·56	822·15	42·78	858·00	44·00
28	638·81	34·22	662·45	35·44	687·70	36·67	714·59	37·89	743·11	39·11	773·26	40·33	805·04	41·56	838·44	42·78	873·48	44·00	910·15	45·22
29	685·26	35·44	709·70	36·67	735·78	37·89	763·48	39·11	792·81	40·33	823·78	41·56	856·37	42·78	890·59	44·00	926·44	45·22	963·92	46·44
30	733·33	36·67	758·59	37·89	785·48	39·11	814·00	40·33	844·15	41·56	875·92	42·78	909·33	44·00	944·37	45·22	981·04	46·44	1019·33	47·67
31	783·04	37·89	809·11	39·11	836·81	40·33	866·15	41·56	897·11	42·78	929·70	44·00	963·92	45·22	999·78	46·44	1037·26	47·67	1076·37	48·89
32	834·37	39·11	861·26	40·33	889·78	41·56	919·92	42·78	951·70	44·00	985·11	45·22	1020·15	46·44	1056·82	47·67	1095·11	48·89	1135·04	50·11
33	887·33	40·33	915·04	41·56	944·37	42·78	975·33	44·00	1007·92	45·22	1042·15	46·44	1078·00	47·67	1115·48	48·89	1154·59	50·11	1195·33	51·33
34	941·93	41·56	970·45	42·78	1000·59	44·00	1032·37	45·22	1065·78	46·44	1100·81	47·67	1137·48	48·89	1175·78	50·11	1215·70	51·33	1257·26	52·56
35	998·15	42·78	1027·48	44·00	1058·44	45·22	1091·04	46·44	1125·26	47·67	1161·11	48·89	1198·59	50·11	1237·70	51·33	1278·44	52·56	1320·81	53·78
36	1056·00	44·00	1086·15	45·22	1117·93	46·44	1151·33	47·67	1186·37	48·89	1223·04	50·11	1261·33	51·33	1301·26	52·56	1342·82	53·78	1386·00	55·00
37	1115·48	45·22	1146·45	46·44	1179·04	47·67	1213·26	48·89	1249·11	50·11	1286·59	51·33	1325·70	52·56	1366·44	53·78	1408·82	55·00	1452·81	56·22
38	1176·59	46·44	1208·37	47·67	1241·78	48·89	1276·81	50·11	1313·48	51·33	1357·78	52·56	1391·70	53·78	1438·26	55·00	1476·44	56·22	1521·26	57·44
39	1239·33	47·67	1271·93	48·89	1306·15	50·11	1342·00	51·33	1379·48	52·56	1418·59	53·78	1459·33	55·00	1501·70	56·22	1545·70	57·44	1591·33	58·67
40	1303·70	48·89	1337·11	50·11	1372·15	51·33	1408·81	52·56	1447·11	53·78	1487·04	55·00	1528·59	56·22	1571·78	57·44	1616·59	58·67	1663·03	59·89

TABLE I. FOR CALCULATING EARTHWORK—(*continued*).


Slopes 1 to 1. Base = 1 foot. l = 66 feet = 1 chain. H and h in feet. V and **V** in cubic yards.




H	h = 10		11		12		13		14		15		16		17		18		19	
	V	**V**	V	**V**	V	**V**	V	**V**	V	**V**	V	**V**	V	**V**	V	**V**	V	**V**	V	**V**
10	244·44	24·44																		
11	269·70	25·67	295·78	26·89																
12	296·59	26·89	323·48	28·11	352·00	29·33														
13	325·11	28·11	352·81	29·33	382·15	30·56	413·11	31·78												
14	355·26	29·33	383·78	30·56	413·92	31·78	445·70	33·00	479·11	34·22										
15	387·04	30·56	416·37	31·78	447·33	33·00	479·92	34·22	514·15	35·44	550·00	36·67								
16	420·44	31·78	450·59	33·00	482·37	34·22	515·78	35·44	550·82	36·67	587·48	37·89	625·78	39·11						
17	455·48	33·00	486·44	34·22	519·04	35·44	553·26	36·67	589·11	37·89	626·39	39·11	665·70	40·33	706·44	41·56				
18	492·15	34·22	523·92	35·44	557·33	36·67	592·37	37·89	629·04	39·11	667·33	40·33	707·26	41·56	748·81	42·78	792·00	44·00		
19	530·44	35·44	563·04	36·67	597·26	37·89	633·11	39·11	670·59	40·33	709·70	41·56	750·44	42·78	792·81	44·00	836·81	45·22	882·44	46·44
20	570·37	36·67	608·78	37·89	638·81	39·11	675·48	40·33	713·78	41·56	753·70	42·78	795·26	44·00	838·44	45·22	883·26	46·44	929·70	47·67
21	611·92	37·89	646·15	39·11	682·00	40·33	719·48	41·56	758·59	42·78	799·33	44·00	841·70	45·22	885·70	46·44	931·33	47·67	978·59	48·89
22	655·11	39·11	690·15	40·33	726·81	41·56	765·11	42·78	805·04	44·00	846·59	45·22	889·78	46·44	934·59	47·67	981·04	48·89	1029·11	50·11
23	699·92	40·33	735·78	41·56	773·26	42·78	812·37	44·00	853·11	45·22	895·48	46·44	939·48	47·67	985·11	48·89	1032·37	50·11	1081·26	51·33
24	746·37	41·56	783·04	42·78	821·33	44·00	861·26	45·22	902·81	46·44	946·00	47·67	990·81	48·89	1037·26	50·11	1085·33	51·33	1135·04	52·56
25	794·44	42·78	831·92	44·00	871·04	45·22	911·78	46·44	954·15	47·67	998·15	48·89	1043·78	50·11	1091·04	51·33	1139·92	52·56	1190·44	53·78
26	844·15	44·00	882·44	45·22	922·37	46·44	963·92	47·67	1007·11	48·89	1051·92	50·11	1098·37	51·33	1146·44	52·56	1196·15	53·78	1247·48	55·00
27	895·48	45·22	934·59	46·44	975·33	47·67	1017·70	48·89	1061·70	50·11	1107·33	51·33	1154·59	52·56	1203·48	53·78	1254·00	55·00	1306·15	56·22
28	948·44	46·44	988·37	47·67	1029·92	48·89	1073·11	50·11	1117·92	51·33	1164·37	52·56	1212·44	53·78	1262·15	55·00	1313·48	56·22	1366·44	57·44
29	1003·04	47·67	1043·78	48·89	1086·15	50·11	1130·15	51·33	1175·78	52·56	1223·04	53·78	1271·92	55·00	1322·44	56·22	1374·59	57·44	1428·37	58·67
30	1059·26	48·89	1100·82	50·11	1144·00	51·33	1188·82	52·56	1235·26	53·78	1283·33	55·00	1333·04	56·22	1384·37	57·44	1437·33	58·67	1491·92	59·89
31	1117·11	50·11	1159·48	51·33	1203·48	52·56	1249·11	53·78	1296·37	55·00	1345·26	56·22	1395·78	57·44	1447·92	58·67	1501·70	59·89	1557·11	61·11
32	1176·59	51·33	1219·78	52·56	1264·59	53·78	1311·04	55·00	1359·11	56·22	1408·82	57·44	1460·15	58·67	1513·11	59·89	1567·70	61·11	1623·92	62·33
33	1237·70	52·56	1281·70	53·78	1327·33	55·00	1374·59	56·22	1423·48	57·44	1474·00	58·67	1526·15	59·89	1579·92	61·11	1635·33	62·33	1692·37	63·56
34	1300·44	53·78	1345·26	55·00	1391·70	56·22	1439·78	57·44	1489·48	58·67	1540·82	59·89	1593·78	61·11	1648·37	62·33	1704·59	63·56	1762·44	64·78
35	1364·82	55·00	1410·44	56·22	1457·70	57·44	1506·59	58·67	1557·11	59·89	1609·26	61·11	1663·04	62·33	1718·44	63·56	1775·48	64·78	1834·15	66·00
36	1430·82	56·22	1477·26	57·44	1525·33	58·67	1575·04	59·89	1626·37	61·11	1679·33	62·33	1733·92	63·56	1790·15	64·78	1848·00	66·00	1907·48	67·22
37	1498·44	57·44	1545·70	58·67	1594·59	59·89	1645·11	61·11	1697·26	62·33	1751·04	63·56	1806·44	64·78	1863·48	66·00	1922·15	67·22	1982·44	68·44
38	1567·70	58·67	1615·78	59·89	1665·48	61·11	1716·82	62·33	1769 78	63·56	1824·37	64·78	1880·59	66·00	1938·44	67·22	1997·92	68·44	2059·04	69·67
39	1638·59	59·89	1687·48	61·11	1738·00	62·33	1790·15	63·56	1843·92	64·78	1899·33	66·00	1956·37	67·22	2015·04	68·44	2075·33	69·67	2137·26	70·89
40	1711·11	61·11	1760·82	62·33	1812·15	63·56	1865·11	64·78	1919·70	66·00	1975·92	67·22	2033·78	68·44	2093·26	69·67	2154·37	70·89	2217·11	72·11

TABLE I. FOR CALCULATING EARTHWORK—(*continued*).

Slopes 1 to 1. Base = 1 foot. l = 66 feet = 1 chain. H and h in feet. V and **V** in cubic yards.



H	h = 20		21		22		23		24		25		26		27		28		29	
	V	**V**	V	**V**	V	**V**	V	**V**	V	**V**	V	**V**	V	**V**	V	**V**	V	**V**	V	**V**
20	977·78	48·89																		
21	1027·48	50·11	1078·00	51·33																
22	1078·82	51·33	1130·15	52·56	1183·11	53·78														
23	1131·78	52·56	1183·92	53·78	1237·70	55·00	1293·11	56·22												
24	1186·37	53·78	1239·33	55·00	1293·92	56·22	1350·15	57·44	1408·00	58·67										
25	1242·59	55·00	1296·37	56·22	1351·78	57·44	1408·82	58·67	1467·48	59·89	1527·78	61·11								
26	1300·44	56·22	1355·04	57·44	1411·26	58·67	1469·11	59·89	1528·59	61·11	1589·70	62·33	1652·44	63·56						
27	1359·92	57·44	1415·33	58·67	1472·37	59·89	1531·04	61·11	1591·33	62·33	1653·26	63·56	1716·82	64·78	1782·00	66·00				
28	1421·04	58·67	1477·26	59·89	1535·11	61·11	1594·59	62·33	1655·70	63·56	1718·44	64·78	1782·82	66·00	1848·82	67·22	1916·44	68·44		
29	1483·78	59·89	1540·81	61·11	1599·48	62·33	1659·78	63·56	1721·70	64·78	1785·26	66·00	1850·44	67·22	1917·26	68·44	1985·70	69·67	2055·78	70·89
30	1548·15	61·11	1606·00	62·33	1665·48	63·56	1726·59	64·78	1789·33	66·00	1853·70	67·22	1919·70	68·44	1987·33	69·67	2056·59	70·89	2127·48	72·11
31	1614·15	62·33	1672·82	63·56	1733·11	64·78	1795·04	66·00	1858·59	67·22	1923·78	68·44	1990·59	69·67	2059·04	70·89	2129·11	72·11	2200·82	73·33
32	1681·78	63·56	1741·26	64·78	1802·37	66·00	1865·11	67·22	1929·48	68·44	1995·48	69·67	2063·11	70·89	2132·37	72·11	2203·26	73·33	2275·78	74·56
33	1751·04	64·78	1811·33	66·00	1873·26	67·22	1936·82	68·44	2002·00	69·67	2068·82	70·89	2137·26	72·11	2207·33	73·33	2279·04	74·56	2352·37	75·78
34	1821·92	66·00	1883·04	67·22	1945·78	68·44	2010·15	69·67	2076·15	70·89	2143·78	72·11	2213·04	73·33	2283·93	74·56	2356·44	75·78	2430·59	77·00
35	1894·44	67·22	1956·37	68·44	2019·92	69·67	2085·11	70·89	2151·93	72·11	2220·37	73·33	2290·44	74·56	2362·15	75·78	2435·48	77·00	2510·45	78·22
36	1968·59	68·44	2031·33	69·67	2095·70	70·89	2161·70	72·11	2229·33	73·33	2298·59	74·56	2369·48	75·78	2442·00	77·00	2516·15	78·22	2591·93	79·44
37	2044·37	69·67	2107·92	70·89	2173·11	72·11	2239·93	73·33	2308·37	74·56	2378·44	75·78	2450·15	77·00	2523·48	78·22	2598·45	79·44	2675·04	80·67
38	2121·78	70·89	2186·15	72·11	2252·15	73·33	2319·78	74·56	2389·04	75·78	2459·93	77·00	2532·45	78·22	2606·59	79·44	2682·37	80·67	2759·78	81·89
39	2200·82	72·11	2266·00	73·33	2332·82	74·56	2401·26	75·78	2471·33	77·00	2543·04	78·22	2616·37	79·44	2691·33	80·67	2767·93	81·89	2846·15	83·11
40	2281·48	73·33	2347·48	74·56	2415·11	75·78	2484·37	77·00	2555·26	78·22	2627·78	79·44	2701·93	80·67	2777·70	81·89	2855·11	83·11	2934·15	84·33



H	h = 30		31		32		33		34		35		36		37		38		39	
	V	**V**	V	**V**	V	**V**	V	**V**	V	**V**	V	**V**	V	**V**	V	**V**	V	**V**	V	**V**
30	2200·00	73·33																		
31	2274·15	74·56	2349·11	75·78																
32	2349·93	75·78	2425·70	77·00	2503·11	78·22														
33	2427·33	77·00	2503·93	78·22	2582·15	79·44	2662·00	80·67												
34	2506·37	78·22	2583·78	79·44	2662·82	80·67	2743·48	81·89	2825·78	83·11										
35	2587·04	79·44	2665·26	80·67	2745·11	81·89	2826·59	83·11	2909·70	84·33	2994·45	85·56								
36	2669·33	80·67	2748·37	81·89	2829·04	83·11	2911·33	84·33	2995·26	85·56	3080·82	86·78	3168·00	88·00						
37	2753·26	81·89	2833·11	83·11	2914·59	84·33	2997·70	85·56	3082·45	86·78	3168·82	88·00	3256·82	89·22	3346·45	90·44				
38	2838·81	83·11	2919·48	84·33	3001·78	85·56	3085·70	86·78	3171·26	88·00	3258·45	89·22	3347·26	90·44	3437·70	91·67	3529·78	92·89		
39	2926·00	84·33	3007·48	85·56	3090·59	86·78	3175·33	88·00	3261·70	89·22	3349·70	90·44	3439·33	91·67	3530·59	92·89	3623·48	94·11	3718·00	95·33
40	3014·81	85·56	3097·11	86·78	3181·04	88·00	3266·59	89·22	3353·78	90·44	3442·59	91·67	3533·04	92·89	3625·11	94·11	3718·81	95·33	3814·15	96·56

TABLE II. FOR CALCULATING EARTHWORK.

Slopes $1\frac{1}{2}$ to 1. Base = 1 foot. l = 66 feet = 1 chain. H and h in feet. V and V in cubic yards.

H	h = 0		1		2		3		4		5		6		7		8		9	
	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V
1	1·22	1·22	3·67	2·44																
2	4·89	2·44	8·56	3·67	14·67	4·89														
3	11·00	3·67	15·89	4·89	23·22	6·11	33·00	7·33												
4	19·56	4·89	25·67	6·11	34·22	7·33	45·22	8·56	58·67	9·78										
5	30·56	6·11	37·89	7·33	47·67	8·56	59·89	9·78	74·56	11·00	91·67	12·22								
6	44·00	7·33	52·56	8·56	63·56	9·78	77·00	11·00	92·89	12·22	111·22	13·44	132·00	14·67						
7	59·89	8·56	69·67	9·78	81·89	11·00	95·56	12·22	113·67	13·44	133·22	14·67	155·22	15·89	179·67	17·11				
8	78·22	9·78	89·22	11·00	102·67	12·22	118·56	13·44	136·89	14·67	157·67	15·89	180·89	17·11	206·56	18·33	234·67	19·56		
9	99·00	11·00	111·22	12·22	125·89	13·44	143·00	14·67	162·56	15·89	184·56	17·11	209·00	18·33	235·89	19·56	265·22	20·78	297·00	22·00
10	122·22	12·22	135·67	13·44	151·56	14·67	169·89	15·89	190·67	17·11	213·89	18·33	239·56	19·56	267·67	20·78	298·22	22·00	331·22	23·22
11	147·89	13·44	162·56	14·67	179·67	15·89	199·22	17·11	221·22	18·33	245·67	19·56	272·56	20·78	301·89	22·00	333·67	23·22	367·89	24·44
12	176·00	14·67	191·89	15·89	210·22	17·11	231·00	18·33	254·22	19·56	279·89	20·78	308·00	22·00	338·56	23·22	371·56	24·44	407·00	25·67
13	206·56	15·89	223·67	17·11	243·22	18·33	265·22	19·56	289·67	20·78	316·56	22·00	345·89	23·22	377·67	24·44	411·89	25·67	448·56	26·89
14	239·56	17·11	257·89	18·33	278·67	19·56	301·89	20·78	327·56	22·00	355·67	23·22	386·22	24·44	419·22	25·67	454·67	26·89	492·56	28·11
15	275·00	18·33	294·56	19·56	316·56	20·78	341·00	22·00	367·89	23·22	397·22	24·44	429·00	25·67	463·22	26·89	499·89	28·11	539·00	29·33
16	312·89	19·56	333·67	20·78	356·89	22·00	382·56	23·22	410·67	24·44	441·22	25·67	474·22	26·89	510·67	28·11	547·54	29·33	587·89	30·56
17	353·22	20·78	375·22	22·00	399·67	23·22	426·56	24·44	455·89	25·67	487·67	26·89	521·88	28·11	558·56	29·33	597·67	30·56	639·22	31·78
18	396·00	22·00	419·22	23·22	444·89	24·44	473·00	25·67	503·56	26·89	536·56	28·11	572·00	29·33	609·89	30·56	650·22	31·78	693·00	33·00
19	441·22	23·22	465·67	24·44	492·56	25·67	521·89	26·89	553·67	28·11	587·89	29·33	624·56	30·56	663·67	31·78	705·22	33·00	749·22	34·22
20	488·89	24·44	514·56	25·67	542·67	26·89	573·22	28·11	606·22	29·33	641·67	30·56	679·56	31·78	719·89	33·00	762·67	34·22	807·89	35·44
21	539·00	25·67	565·89	26·89	595·22	28·11	627·00	29·33	661·22	30·56	697·89	31·78	737·00	33·00	778·56	34·22	822·56	35·44	869·00	36·67
22	591·56	26·89	619·67	28·11	650·22	29·33	683·22	30·56	718·67	31·78	756·56	33·00	796·89	34·22	839·67	35·44	884·88	36·67	932·56	37·89
23	646·56	28·11	675·89	29·33	707·67	30·56	741·89	31·78	778·56	33·00	817·67	34·22	859·22	35·44	903·22	36·67	949·67	37·89	998·56	39·11
24	704·00	29·33	734·56	30·56	767·56	31·78	803·00	33·00	840·89	34·22	881·22	35·44	924·00	36·67	969·22	37·89	1016·88	39·11	1067·00	40·33
25	763·89	30·56	795·67	31·78	829·89	33·00	866·56	34·22	905·67	35·44	947·22	36·67	991·22	37·89	1037·67	39·11	1086·56	40·33	1137·89	41·56
26	826·22	31·78	859·22	33·00	894·67	34·22	932·56	35·44	972·89	36·67	1015·67	37·89	1060·89	39·11	1108·56	40·33	1158·67	41·56	1211·22	42·78
27	891·00	33·00	925·22	34·22	961·89	35·44	1001·00	36·67	1042·56	37·89	1086·56	39·11	1133·00	40·33	1181·88	41·56	1233·22	42·78	1287·00	44·00
28	958·22	34·22	998·67	35·44	1031·56	36·67	1071·89	37·89	1114·67	39·11	1159·89	40·33	1207·56	41·56	1257·67	42·78	1310·22	44·00	1365·22	45·22
29	1027·89	35·44	1064·56	36·67	1103·67	37·89	1145·22	39·11	1189·22	40·33	1235·67	41·56	1284·56	42·78	1335·89	44·00	1389·67	45·22	1445·89	46·44
30	1100·00	36·67	1137·89	37·89	1178·22	39·11	1221·00	40·33	1266·22	41·56	1313·89	42·78	1364·00	44·00	1416·56	45·22	1471·56	46·44	1529·00	47·67
31	1174·56	37·89	1213·67	39·11	1255·22	40·33	1299·22	41·56	1345·67	42·78	1394·56	44·00	1445·89	45·22	1499·67	46·44	1555·89	47·67	1614·56	48·89
32	1251·56	39·11	1291·89	40·33	1334·67	41·56	1379·89	42·78	1427·56	44·00	1477·67	45·22	1530·22	46·44	1585·22	47·67	1642·67	48·89	1697·56	50·11
33	1331·00	40·33	1372·56	41·56	1416·56	42·78	1463·00	44·00	1511·89	45·22	1563·22	46·44	1617·00	47·67	1673·22	48·89	1731·89	50·11	1793·00	51·33
34	1412·89	41·56	1455·67	42·78	1500·89	44·00	1548·56	45·22	1598·67	46·44	1651·22	47·67	1701·22	48·89	1763·67	50·11	1823·56	51·33	1885·89	52·56
35	1497·22	42·78	1541·22	44·00	1587·67	45·22	1636·56	46·44	1687·89	47·67	1741·67	48·89	1797·89	50·11	1856·58	51·33	1917·67	52·56	1981·22	53·78
36	1584·00	44·00	1629·22	45·22	1676·89	46·44	1727·00	47·67	1779·56	48·89	1834·56	50·11	1892·00	51·33	1951·89	52·56	2014·22	53·78	2079·00	55·00
37	1672·22	45·22	1719·67	46·44	1768·56	47·67	1819·89	48·89	1873·67	50·11	1929·89	51·33	1988·56	52·56	2049·67	53·78	2113·22	55·00	2179·22	56·22
38	1764·89	46·44	1812·56	47·67	1862·67	48·89	1915·22	50·11	1970·22	51·33	2027·66	52·56	2087·56	53·78	2149·89	55·00	2214·67	56·22	2281·89	57·44
39	1859·00	47·67	1907·89	48·89	1959·22	50·11	2013·00	51·33	2069·22	52·56	2127·89	53·78	2189·00	55·00	2252·56	56·22	2318·56	57·44	2387·00	58·67
40	1955·55	48·89	2005·67	50·11	2058·22	51·33	2113·22	52·56	2170·67	53·78	2230·56	55·00	2292·89	56·22	2357·67	57·44	2424·89	58·67	2494·56	59·89

TABLE II. FOR CALCULATING EARTHWORK—(*continued*).

Slopes 1½ to 1. Base = 1 foot. l = 66 feet = 1 chain. H and h in feet. V and V in cubic yards.

H	h = 10		11		12		13		14		15		16		17		18		19	
	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V
10	366·67	24·44																		
11	404·56	25·67	443·67	26·89																
12	444·89	26·89	485·22	28·11	528·00	29·33														
13	487·67	28·11	529·22	29·33	574·22	30·56	619·67	31·78												
14	532·89	29·33	575·67	30·56	620·89	31·78	668·56	33·00	718·67	34·22										
15	580·56	30·56	624·56	31·78	671·00	33·00	719·89	34·22	771·22	35·44	825·00	36·67								
16	630·67	31·78	675·89	33·00	723·56	34·22	773·67	35·44	826·22	36·67	881·22	37·89	938·67	39·11						
17	683·22	33·00	729·67	34·22	778·56	35·44	829·89	36·67	883·67	37·89	939·88	39·11	998·56	40·33	1059·67	41·56				
18	738·22	34·22	785·89	35·44	838·00	36·67	888·56	37·89	943·56	39·11	1001·00	40·33	1060·89	41·56	1123·22	42·78	1188·00	44·00		
19	795·67	35·44	844·56	36·67	895·89	37·89	948·67	39·11	1005·89	40·33	1064·56	41·56	1125·67	42·78	1189·22	44·00	1255·22	45·22	1328·67	46·44
20	855·56	36·67	905·67	37·89	958·22	39·11	1013·22	40·33	1070·67	41·56	1130·56	42·78	1192·89	44·00	1257·67	45·22	1324·89	46·44	1494·56	47·67
21	917·89	37·89	969·22	39·11	1023·00	40·33	1079·22	41·56	1137·89	42·78	1199·00	44·00	1262·56	45·22	1328·56	46·44	1397·00	47·67	1567·89	48·89
22	982·67	39·11	1035·22	40·33	1090·22	41·56	1147·67	42·78	1207·56	44·00	1269·89	45·22	1334·67	46·44	1401·89	47·67	1471·56	48·89	1643·67	50·11
23	1049·89	40·33	1103·67	41·56	1159·89	42·78	1218·56	44·00	1279·67	45·22	1343·22	46·44	1409·22	47·67	1477·67	48·89	1548·56	50·11	1721·89	51·33
24	1119·56	41·56	1174·56	42·78	1232·00	44·00	1291·89	45·22	1354·22	46·44	1419·00	47·67	1486·22	48·89	1555·89	50·11	1628·00	51·33	1802·56	52·56
25	1191·67	42·78	1247·89	44·00	1306·56	45·22	1367·67	46·44	1431·22	47·67	1497·22	48·89	1565·67	50·11	1636·56	51·33	1708·89	52·56	1885·67	53·78
26	1266·22	44·00	1323·67	45·22	1383·56	46·44	1445·89	47·67	1510·67	48·89	1577·89	50·11	1647·56	51·33	1719·67	52·56	1794·22	53·78	1971·22	55·00
27	1343·22	45·22	1401·89	46·44	1463·00	47·67	1525·56	48·89	1592·56	50·11	1661·00	51·33	1731·89	52·56	1805·22	53·78	1881·00	55·00	2059·22	56·22
28	1422·67	46·44	1482·56	47·67	1544·89	48·89	1609·67	50·11	1676·89	51·33	1746·56	52·56	1818·67	53·78	1893·22	55·00	1970·22	56·22	2149·67	57·44
29	1504·56	47·67	1565·67	48·89	1629·22	50·11	1695·22	51·33	1763·67	52·56	1834·56	53·78	1907·89	55·00	1983·67	56·22	2061·89	57·44	2242·56	58·67
30	1588·89	48·89	1651·22	50·11	1716·00	51·33	1783·22	52·56	1852·89	53·78	1925·00	55·00	1999·56	56·22	2076·56	57·44	2156·00	58·67	2337·89	59·89
31	1675·67	50·11	1739·22	51·33	1805·22	52·56	1873·67	53·78	1944·56	55·00	2017·89	56·22	2093·67	57·44	2171·89	58·61	2252·56	59·89	2435·67	61·11
32	1764·89	51·33	1829·67	52·56	1896·89	53·78	1966·56	55·00	2038·67	56·22	2113·22	57·44	2190·22	58·67	2269·67	59·89	2351·56	61·11	2535·89	62·33
33	1856·56	52·56	1922·56	53·78	1991·00	55·00	2061·89	56·22	2135·22	57·44	2211·00	58·67	2289·22	59·89	2369·89	61·11	2453·00	62·33	2638·56	63·56
34	1950·67	53·78	2017·89	55·00	2087·56	56·22	2159·67	57·44	2234·22	58·67	2311·22	59·89	2390·67	61·11	2472·56	62·33	2556·89	63·56	2743·67	64·79
35	2047·22	55·00	2115·67	56·22	2186·56	57·44	2259·89	58·67	2335·67	59·89	2413·89	61·11	2494·56	62·33	2577·67	63·56	2663·22	64·78	2851·22	66·00
36	2146·22	56·22	2215·89	57·44	2288·00	58·67	2362·56	59·89	2442·00	61·11	2519·00	62·33	2600·98	63·56	2685·22	64·78	2772·00	66·00	2961·22	67·22
37	2247·67	57·44	2318·56	58·67	2391·89	59·89	2467·67	61·11	2545·89	62·33	2626·56	63·56	2709·67	64·78	2795·22	66·00	2883·22	67·22	3073·67	68·44
38	2351·56	58·67	2423·67	59·89	2498·22	61·11	2575·22	62·33	2654·66	63·56	2736·56	64·78	2820·89	66·00	2907·67	67·22	2996·89	68·44	3189·56	69·67
39	2457·89	59·89	2531·22	61·11	2607·00	62·33	2685·22	63·56	2765·89	64·78	2849·00	66·00	2934·56	67·22	3022·56	68·44	3113·00	69·67	3305·89	70·89
40	2566·67	61·11	2641·22	62·33	2718·22	63·56	2797·67	64·78	2879·56	66·00	2963·89	67·22	3050·67	68·44	3139·89	69·67	3231·56	70·89	3425·67	72·11




TABLE II. FOR CALCULATING EARTHWORK—(*continued*).

Slopes $1\frac{1}{2}$ to 1. Base = 1 foot. l = 66 feet = 1 chain. H and h in feet. V and **V** in cubic yards.

H	h = 20		21		22		23		24		25		26		27		28		29	
	V	**V**	V	**V**	V	**V**	V	**V**	V	**V**	V	**V**	V	**V**	V	**V**	V	**V**	V	**V**
20	1466·67	48·89																		
21	1541·22	50·11	1617·00	51·33																
22	1618·22	51·33	1695·22	52·56	1774·67	53·78														
23	1697·67	52·56	1775·89	53·78	1856·56	55·00	1939·67	56·22												
24	1779·56	53·78	1859·00	55·00	1940·89	56·22	2025·22	57·44	2112·00	58·67										
25	1863·89	55·00	1944·56	56·22	2027·67	57·44	2113·22	58·67	2201·22	59·89	2291·67	61·11								
26	1950·67	56·22	2032·56	57·44	2116·89	58·67	2203·67	59·89	2292·89	61·11	2384·56	62·33	2478·67	63·56						
27	2039·89	57·44	2123·00	58·67	2208·56	59·89	2296·56	61·11	2387·00	62·33	2479·89	63·56	2575·22	64·78	2673·00	66·00				
28	2131·56	58·67	2215·89	59·89	2302·67	61·11	2391·89	62·33	2483·56	63·56	2577·67	64·78	2674·22	66·00	2773·22	67·22	2874·66	68·44		
29	2225·67	59·89	2311·22	61·11	2399·22	62·33	2489·67	63·56	2582·56	64·78	2677·89	66·00	2775·67	67·22	2875·88	68·44	2978·55	69·67	3083·66	70·89
30	2322·22	61·11	2409·00	62·33	2498·22	63·56	2589·89	64·78	2684·00	66·00	2780·56	67·22	2879·56	68·44	2980·99	69·67	3084·88	70·89	3191·22	72·11
31	2421·22	62·33	2509·22	63·56	2599·67	64·78	2692·56	66·00	2787·89	67·22	2885·67	68·44	2985·89	69·67	3088·55	70·89	3193·66	72·11	3301·22	73·33
32	2522·67	63·56	2611·89	64·78	2703·56	66·00	2797·67	67·22	2894·22	68·44	2993·22	69·67	3094·67	70·89	3198·55	72·11	3304·88	73·33	3413·66	74·56
33	2626·56	64·78	2717·00	66·00	2809·89	67·22	2905·22	68·44	3003·00	69·67	3103·22	70·89	3205·89	72·11	3310·99	73·33	3418·55	74·56	3528·55	75·78
34	2732·89	66·00	2824·56	67·22	2918·67	68·44	3015·22	69·67	3114·22	70·89	3215·67	72·11	3319·55	73·33	3425·88	74·56	3534·66	75·78	3645·88	77·00
35	2841·67	67·22	2934·56	68·44	3029·89	69·67	3127·67	70·89	3227·89	72·11	3330·55	73·33	3435·67	74·56	3543·22	75·78	3653·22	77·00	3765·66	78·22
36	2952·89	68·44	3047·00	69·67	3143·56	70·89	3242·55	72·11	3344·00	73·33	3447·89	74·56	3554·22	75·78	3662·99	77·00	3774·22	78·22	3887·88	79·44
37	3066·56	69·67	3161·89	70·89	3259·67	72·11	3359·89	73·33	3462·56	74·56	3567·66	75·78	3675·22	77·00	3785·22	78·22	3897·66	79·44	4012·55	80·67
38	3182·67	70·89	3269·22	72·11	3378·22	73·33	3479·67	74·56	3583·56	75·78	3689·88	77·00	3798·67	78·22	3909·88	79·44	4023·55	80·67	4139·66	81·89
39	3301·22	72·11	3399·00	73·33	3499·22	74·56	3600·89	75·78	3707·00	77·00	3814·55	78·22	3924·55	79·44	4036·99	80·67	4151·88	81·89	4269·21	83·11
40	3422·22	73·33	3521·22	74·56	3622·67	75·78	3725·55	77·00	3832·89	78·22	3941·66	79·44	4052·89	80·67	4166·55	81·89	4282·66	83·11	4401·21	84·33

H	h = 30		31		32		33		34		35		36		37		38		39	
	V	**V**	V	**V**	V	**V**	V	**V**	V	**V**	V	**V**	V	**V**	V	**V**	V	**V**	V	**V**
30	3300·00	73·33																		
31	3411·22	74·56	3523·67	75·78																
32	3524·89	75·78	3638·55	77·00	3754·67	78·22														
33	3640·39	77·00	3755·89	78·22	3873·22	79·44	3993·00	80·67												
34	3759·55	78·22	3875·67	79·44	3994·22	80·67	4115·22	81·89	4238·67	83·11										
35	3880·55	79·44	3997·89	80·67	4117·67	81·89	4239·89	83·11	4364·55	84·33	4491·67	85·56								
36	4003·99	80·67	4122·55	81·89	4243·55	83·11	4367·00	84·33	4492·89	85·56	4621·22	86·78	4752·00	88·00						
37	4129·89	81·89	4249·67	83·11	4371·89	84·33	4495·55	85·56	4628·67	86·78	4758·22	88·00	4885·22	89·22	5019·67	90·44				
38	4258·22	83·11	4379·22	84·33	4502·67	85·56	4628·55	86·78	4756·89	88·00	4887·67	89·22	5020·89	90·44	5156·55	91·67	5294·67	92·89		
39	4388·99	84·33	4511·22	85·56	4635·89	86·78	4763·00	88·00	4892·55	89·22	5024·55	90·44	5159·00	91·67	5296·89	92·89	5435·22	94·11	5577·00	95·33
40	4522·22	85·56	4645·67	86·78	4771·55	88·00	4899·89	89·22	5030·67	90·44	5163·89	91·67	5299·55	92·89	5437·67	94·11	5578·22	95·33	5721·22	96·56

Methods of getting Earth.

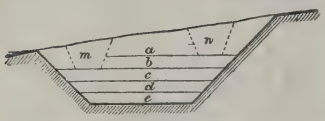


FIG. 128.

1. *Ordinary Method* (fig. 128).—Excavations carried out in layers, *a*, *b*, *c*, &c., each layer being opened out by cuts, as *m* and *n*, into which temporary ways or dobbin carts are brought. Suitable for easily-won earth and long cuttings, allowing the employment of many workmen, carts, and waggons at the same time.

2. *Method of Terracing.*—Figs. 129 and 130 show, in longitudinal section, the terraces, each of which has a transport-way, on a bench, on one or both sides of cutting, which is only removed on the completion of its terrace. Very great advantage, especially on sidelong ground, is often got by placing the temporary way alongside the cutting.

FIG. 129.

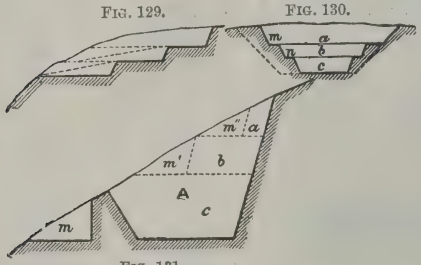


FIG. 131.

FIG. 130.

3. *Sidelong System.*—For cuttings on sidelong ground the principal temporary way runs parallel to the centre line, but at the side of cutting, which can be attacked at numerous points, and eventually along its whole length. In fig. 131, *m* represents the position of temporary way, and A the cutting. Different stages, *a*, *b*, *c*, with separate temporary ways, *m''*, *m'*, *m*, may often be advantageously employed, in which case it approximates to terracing. Steep sidelong cuttings chiefly occur in rock, where this system gives great advantages.

4. *Long-face System.*—A deep, narrow cutting, *g*, *z*, *n*, *m*, taken down to formation-level, if possible, is formed for the principal transport-way and drainage. This system is advantageous in rock strata sloping across the line, in which case the cutting will be on one side, as *m*, *n*, *p*, *o*, in fig. 132. In cases where a central cutting can be made the faces can be attacked on both sides, at different points, along the whole length, drainage and blasting being easily performed.

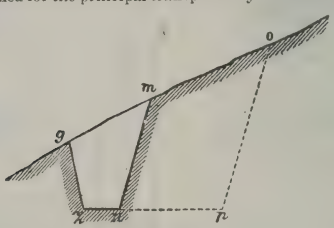


FIG. 132.

Central Lift, or English System.—A drift, *a*, *a* (figs. 133 and 134), is driven at formation-level about centre line of cutting, and a temporary way laid down in it; at the same time one or more shafts, *m*, *n*, *o*, *p*, are sunk down to it from above, and cut away in a funnel-shape, through which the stuff is shot direct into waggons standing below in the drift. This method is now widely used, with best results, both as regards time and cost. A deep cutting in lava, 500′ long × 60′ deep, containing over 124,000 cubic yards, with three shafts, was run to bank, 700′ distant, within six months, *i.e.*, at about 800 cubic yards a day. Compared with other methods it is quicker; the formation-level is at once defined; the temporary ways are shorter, and require less shifting; it is cheaper in loading waggons into which stuff falls; there is no up-throwing; and the drainage is readily done, and with the least disturbance of the work. The drift and shafts are the only source of expense, but their cost can be closely estimated.




FIG. 133.

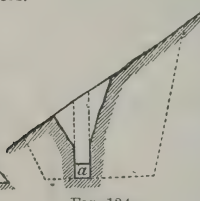


FIG. 134.

Transporting Earth.

The systems adopted comprise *barrow runs*, *horse and cart*, and *rail transport*; the latter include *hand trollies*, *horse waggons*, and *trucks drawn by locomotives or by ropes worked by stationary engines*.

Gradients in transport ways increase cost. The practical limits are: for barrows, 1 in 30; for horse and cart, 1 in 40; for temporary ways, 1 in 100.

Leading Material.

A higher up-throw, an unfavourable lifting, a repeated throwing or unnecessary moving of earth, add to cost. Good tools, well-formed barrows, carts, tip waggons, good temporary ways of rails, or planks for barrow runs, are essential. A barrow carrying 2 cubic feet without a plank run will carry 3 cubic feet with one. A tip cart carrying 8 to 10 cubic feet without, will carry 15 to 18 cubic feet with, a good temporary way.

Slopes of Excavations and Embankments.

Heights at which different soils will retain a vertical face in excavations for a short time without falling in :

	ft. ft.		ft. ft.
Clean dry sand and gravel from .	. 0 to 1	Loamy soil, well drained . .	. 5 to 10
Moist sand and ordinary surface mould	1 „ 3	Ordinary clay	. 9 „ 12

Slopes of railway cuttings are often—

In gravel, 1 to 1 when not more than 20′ deep	In clay, 2 to 1 when well drained
„ 1½ „ 1 when of greater depth	„ 3 or 4 to 1 when wet

Slopes of railway embankments are often—

In gravel, 1½ to 1 when not more than 30′ high	In clay, 2 to 1 when not more than 40′ high
„ 2 „ 1 when of greater height	„ 2½ „ 1 when of greater height

Chalk and rock will stand perpendicular, or with a slope of about ¼ base to 1 height.

In roads it is often better to make the sides of cuttings, especially on the south side, with greater slope than that they will stand at, to admit sun.

Earth in embankments should be laid in regular horizontal courses not more than 4′ thick. In high embankments they should be rather concave, to avoid slipping.

Form of Side Slopes.

The natural, strongest, and ultimate form of earth slopes is a concave curve, in which the flattest portion is at the bottom. This form is very rarely given to the slopes in constructing them ; in fact, the reverse is often the case, the slopes being made convex, thus saving excavation for the contractor, and inviting slips.

In cuttings exceeding 10 feet in depth the formation of concave slopes will materially aid in preventing slips, and in any case it will reduce the amount of material which will eventually have to be removed when cleaning up. Straight or convex slopes will continue to slip until the natural form is attained.

Table of Angles and Lengths of Slopes.


(I.)

Base of Slope is given in terms of the Height ; Length of Slope, in terms of the Base.

Angle.	Base of Slope (Height = 1).	Length of Slope (Base = 1).	Angle.	Base of Slope (Height = 1).	Length of Slope (Base = 1).	Angle.	Base of Slope (Height = 1).	Length of Slope (Base = 1).	Angle.	Base of Slope (Height = 1).	Length of Slope (Base = 1).
° ′			° ′			° ′			° ′		
45 0	1	1·414	8 0	7·1	1·009	2 52	20	1·0012	0 43	80	1·0000
40 0	1·2	1·305	7 7	8	1·007	2 18	25	1·0008	0 40	86	„
38 40	1¼	1·280	7 0	8·1	1·007	2 12	26	1·0007	0 38	90	„
35 0	1·4	1·220	6 20	9	1·006	2 7	27	1·0007	0 36	95	„
33 41	1½	1·201	6 0	9·5	1·005	2 3	28	1·0006	0 34	101	„
30 0	1·7	1·154	5 42	10	1·005	2 0	28·6	1·0006	0 23	150	„
29 44	1¾	1·151	5 11	11	1·0041	1 59	29	1·0006	0 17	202	„
26 34	2	1·118	5 0	11·4	1·0038	1 54	30	1·0005	0 14	245	„
25 0	2·1	1·103	4 46	12	1·0034	1 38	35	1·0004	0 12	286	„
20 0	2·7	1·064	4 23	13	1·0029	1 26	40	1·0003	0 10	343	„
18 26	3	1·054	4 5	14	1·0025	1 16	45	1·0002	0 9	381	„
15 0	3·7	1·035	4 0	14·3	1·0024	1 9	50	1·0002	0 8	429	„
14 2	4	1·030	3 49	15	1·0022	1 2	55	1·0001	0 7	491	„
11 18	5	1·019	3 34	16	1·0019	1 0	57·3	1·0001	0 6	572	„
10 0	5·7	1·015	3 22	17	1·0017	0 57	60	1·0001	0 4	859	„
9 27	6	1·013	3 11	18	1·0015	0 53	65	1·0001	0 2	1718	„
9 0	6·3	1·012	3 1	19	1·0013	0 49	70	1·0001	0 1	3437	„
8 8	7	1·010	3 0	19	1·0013	0 46	75	1·0000	—	—	„

Table of Angles and Lengths of Slopes.

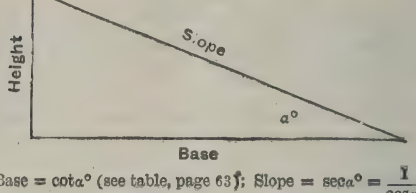(2.)



If Height = 1, then

Base = $\cot\alpha°$ (see table, page 63); Slope = $\sec\alpha° = \frac{1}{\cos\alpha°}$.

Base and Slope in Terms of Angle.						Angle in Terms of Base and Slope.					
Angle.	Base of Slope (Height = 1).	Length of Slope (Base = 1).	Angle.	Base of Slope (Height = 1).	Length of Slope (Base = 1).	Angle.	Base of Slope (Height = 1).	Length of Slope (Base = 1).	Angle.	Base of Slope (Height = 1).	Length of Slope (Base = 1).
°			°			° ′			° ′		
90	·000	∞	45	1·000	1·414	89 25	·01	98·223	17 21	3·2	1·048
89	·017	57·299	44	1·036	1·390	88 17	·03	33·381	16 52	3·3	1·045
88	·035	28·654	43	1·072	1·367	87 8	·05	19·995	16 23	3·4	1·042
87	·052	19·107	42	1·111	1·346	86	·07	14·336	15 57	3·5	1·040
86	·070	14·336	41	1·150	1·325	84 51	·09	11·140	15 31	3·6	1·038
85	·087	11·474	40	1·192	1·305	84 17	·1	10·039	15 8	3·7	1·036
84	·105	9·567	39	1·235	1·287	81 28	·15	6·739	14 45	3·8	1·034
83	·123	8·206	38	1·280	1·269	78 41	·2	5·096	14 23	3·9	1·032
82	·141	7·185	37	1·327	1·252	75 58	·25	4·124	14 2	4·0	1·031
81	·158	6·392	36	1·376	1·236	73 18	·3	3·480	13 42	4·1	1·030
80	·176	5·759	35	1·428	1·221	70 43	·35	3·028	13 24	4·2	1·028
79	·194	5·241	34	1·483	1·206	68 12	·4	2·693	13 6	4·3	1 027
78	·213	4·810	33	1·540	1·192	65 47	·45	2·438	12 49	4·4	1·026
77	·231	4·445	32	1·600	1·179	63 26	·5	2·236	12 32	4·5	1·024
76	·249	4·134	31	1·664	1·167	61 11	·55	2·075	12 16	4·6	1·023
75	·268	3·864	30	1·732	1·155	59 2	·6	1·943	12 1	4·7	1·022
74	·287	3·628	29	1·804	1·143	56 59	·65	1·835	11 46	4·8	1·021
73	·306	3·420	28	1·881	1·133	55 1	·7	1·744	11 32	4·9	1·021
72	·325	3·236	27	1·963	1·122	53 8	·75	1·667	11 19	5	1·020
71	·344	3·072	26	2·050	1·113	51 20	·8	1·601	10 19	5·5	1·016
70	·364	2·924	25	2·145	1·103	49 38	·85	1·544	9 28	6	1·014
69	·384	2·790	24	2·246	1·095	48 1	·9	1·495	8 45	6·5	1·012
68	·404	2·669	23	2·356	1·086	46 28	·95	1·452	8 8	7	1·010
67	·424	2·559	22	2·475	1·079	45 0	1	1·414	7 8	8	1·008
66	·445	2·459	21	2·605	1·071	42 16	1·1	1·351	6 20	9	1·006
65	·466	2·366	20	2·747	1·064	39 48	1·2	1·302	5 43	10	1·005
64	·488	2·281	19	2·904	1·058	37 34	1·3	1·262	5 12	11	1·004
63	·510	2·203	18	3·078	1·051	35 32	1·4	1·229	4 46	12	1·003
62	·532	2·130	17	3·271	1·046	33 41	1·5	1·202	4 24	13	1·003
61	·554	2·063	16	3·487	1·040	32	1·6	1·179	4 5	14	1·003
60	·577	2·000	15	3·732	1·036	30 28	1·7	1·160	3 49	15	1·002
59	·601	1·942	14	4·011	1·031	29 3	1·8	1·144	3 35	16	1·002
58	·625	1·887	13	4·331	1·026	27 46	1·9	1·130	3 22	17	1·002
57	·649	1·836	12	4·705	1·022	26 33	2	1·118	3 11	18	1·002
56	·675	1·788	11	5·145	1·019	25 28	2·1	1·108	3 1	19	1·001
55	·700	1·743	10	5·671	1·015	24 27	2·2	1·099	2 52	20	1·001
54	·727	1·701	9	6·314	1·012	23 30	2·3	1·090	2 18	25	1·001
53	·754	1·662	8	7·115	1·010	22 37	2·4	1·083	1 55	30	1·001
52	·781	1·624	7	8·144	1·008	21 48	2·5	1·077	1 38	35	1·000
51	·810	1·589	6	9·514	1·006	21 2	2·6	1·071	1 26	40	1·000
50	·839	1·556	5	11·430	1·004	20 19	2·7	1·066	1 9	50	1·000
49	·869	1·524	4	14·301	1·002	19 39	2·8	1·062	58	60	1·000
48	·900	1·494	3	19·081	1·001	19 2	2·9	1·058	49	70	1·000
47	·933	1·466	2	28·636	1·001	18 26	3	1·054	43	80	1·000
46	·966	1·440	1	57·290	1·000	17 53	3·1	1·051	38	90	1·000

(H. R. Kempe).

Angles of Repose of Soils.

Material.	Angle.	Ratio of Base of Slope to Height.
	°	
Clay, dry	29	1·8 to 1
„ damp, well drained	45	1 to 1
„ wet	16	3·5 to 1
Earth, dry	29	1·8 to 1
„ moist	45 to 49	1 to 1 to ·87 to 1
„ very wet	17	3·27 to 1
„ punned	66 to 74	·45 to 1 to ·28 to 1
Gravel, clean	48	·9 to 1
„ with sand	26	2 to 1
Sand, fine dry	37 to 31	1·3 to 1 to 1·6 to 1
„ wet	26	2 to 1
„ very wet	32	1·6 to 1
Shingle, loose	39	1·2 to 1
Peat	14 to 45	4 to 1 to 1 to 1

Weight of a Cubic Yard of different Soils.

	cwts.		cwts.		cwts.		cwts.
Dry peat	7½	Common earth	24	Common gravel	27	Grey chalk	36
Wet peat	15	Sandy loam	24	Wet sand	28	Sandstone	37
Top soil	20	Marl	26	Gravelly clay	30	Shale	39
Dry sand	22	Clay	27	Rough water gravel	34	Limestone	48

Loads of Carts and Waggons.

An ordinary cart, 6′ × 3¼′ × 2½′ deep, holds 1⅝ cubic yards, equal 2½ tons of earth.

A dobbin cart	„	¾	„	„	1 „
An earth waggon	„	2	„	„	3½ „
„ „ large	„	3	„	„	4½ „
A wheelbarrow, navvy	„	$\frac{1}{10}$	„	„	$\frac{3}{20}$ „
„ ordinary	„	$\frac{1}{20}$	„	„	$\frac{3}{40}$ „

Carting is estimated at so much per cubic yard, by the run of 1 furlong (220 yards).

Equivalents of a Load of Different Materials.

A single load of	sand, earth, rubbish	= 1 cub. yd.
„ „	lime (a measure or hundred)	= 1 cub. yd. = 21 striked bushels.
„ „	„ „ „	= 22 bushels.
„ „	squared or hewn timber, deals, &c.	= 50 cub. ft.
„ „	unhewn timber	= 40 „
„ „	bricks	= 500 bricks.
„ „	tiles	= 1,000 tiles.
„ „	water	= 1 butt of 108 gallons.
„ „	light, bulky materials	= 80 cub. ft.

Barrow and Cart Runs.

The barrows used usually hold about one-tenth cubic yard, and are mostly run on planks, which should not be narrower than 11″, and 3″ thick, nor, as a rule, have a greater inclination than 1 in 12, unless aided by ropes or winding machinery. Box-horses (fig. 135) are the best supports on an incline, either singly or resting one on another; they are mostly from 1½′ to 3′ square, made out of 11″ × 3″ planks. If a considerable height is required, trestles (fig. 136) are used, but boxhorses are stronger, and less likely to get out of repair.

A barrow run is 20 or 25 yards. Each foot of rise is considered equal to 6′ to 9′ additional run.

Wheeling is more economical than carting for distances under 100 yards.

An earth waggon holds as much as 20 or 30 wheelbarrows, and goes one-fifth faster—equal, therefore, to 24 or 36 barrows.

If loaded waggons have to be drawn up an ascent, and the temporary rails are in moderately good order, each foot of ascent may be considered equivalent to about 150 feet of additional horizontal distance.

BOXHORSE.

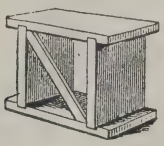


FIG. 135.

TRESTLE.

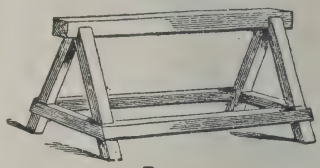


FIG. 136.

When the height exceeds 12 feet, a horse lift is better than wheeling.

For railway embankments and cuttings, locomotives are better than carting for distances over $1\frac{1}{2}$ miles.

Tip Waggons.

End Tip Waggons (figs. 137 and 138) will hold 2 yds. filled up to top of sides, as with gravel, $2\frac{1}{2}$ yds. when heaped up with clay, &c., the most economical size. The lowness of sides is of great advantage in filling.

The sides, one end, and bottom of body are of elm $1\frac{1}{2}''$ thick (the earth being confined at other end by movable tailboard), bound together with iron straps at angles, and with upright

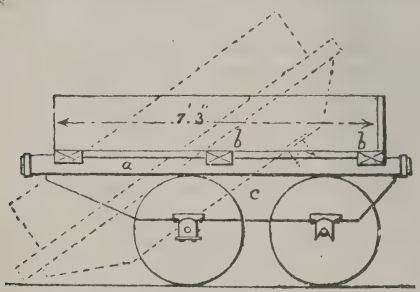


FIG. 137. Side Elevation.

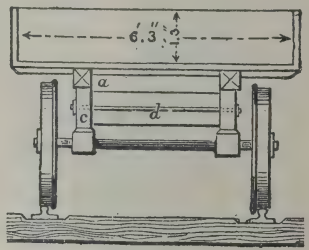


FIG. 138. Cross Section.

straps at sides and one end, all bolted through. The sole is the longitudinal piece, *a*, at each side, of elm, $5'' \times 5''$, upon which the bottom boards rest. At each end, and in middle of body, is a cross-piece of elm, *b*, $6'' \times 3''$, bolted down to the soles. The under soles, *c*, are of Memel, $12'' \times 3''$, between which from side to side are two distance-pieces, *d*, each $9'' \times 3''$, and alongside of each is a $\frac{3}{4}''$ bolt. The wheels are of cast iron, 2′ 6″ diam., with wrought-iron axles.

Weight of body of waggon, $\frac{3}{4}$ ton, of load, $3\frac{1}{4}$ tons; total load on axles, 4 tons. With well-greased axles, resistance will be about 10 lbs. per ton, but may be as high as 20. Resistance, 80 lbs. per waggon. A horse can draw 150 lbs. $2\frac{1}{2}$ miles an hour for eight hours; a horse can therefore draw two waggons.

Temporary contractor's rails weigh from 25 lbs. to 30 lbs. per yard.

It is generally better to throw earth away than to lead it three miles.

FOUNDATIONS.

In cases where there is any doubt as to the ground being of too soft a nature to bear the weight of the proposed structure, a trial pit should be sunk, or borings made with boring-rods; samples of the underlying strata may thus be brought up and examined.

Where a soft stratum overlies firm ground, the foundation should, if possible, be carried down to the firm ground; if this is not possible, piles may be driven to the solid ground and the building supported on them, or a number of piers of brickwork, masonry, or iron cylinders sunk.

Where ground is soft to a great depth, a wide trench filled with concrete may distribute the weight over a sufficiently large area to support it, or the trench may be filled with carefully rammed sand, prevented, by sheet piling or some other means, from escaping laterally. Another method is to drive a number of piles, which, by the friction of their sides, would bear the weight of the building.

Foundations on different Soils.

In any structure begun at different levels larger blocks should be used for the deeper parts, if the material admits of it, so as to reduce the number of mortar joints and the risks of unequal settlement.

With Sand or Gravel Foundation overlying Clay on a Slope, intercept water by drain on upper side of building.

Least Depth to escape Effects of Heat and Frost, from 3′ to 6′, according to climate. Not less than 3′ in England for ordinary soils, and 4′ for clay.

Rock.—Good foundation, but must be level; should be levelled, if necessary, in steps. The uneven parts should be filled up with large stones, firmly built with strong cement, or with concrete.

Gravel.—The best foundation.

Sand.—Good foundation, if dry and not liable to be washed away, but this easily occurs; drains with leaky joints may cause a subsidence, or any disturbance of the water-level in the stratum, whether by natural or artificial means, such as pumping operations connected with deep foundations, even at a great distance.

Clay.—Generally very treacherous and damp; the foundation must be deep.

Hard overlying Soft Ground.—If care is taken that the pressure per unit of area is not greater than the firm layer will bear, it may be wiser to build on it, sinking into it as little as possible.

Soft Ground overlying Hard Ground.—If the stratum of soft ground does not exceed 15′ to 20′ it will generally be cheaper to sink down to the firm ground; if not more than about 30′, drive piles or sink wells of masonry. If of indefinite depth, the platform must be supported by friction against the sides, and be therefore of considerable thickness.

Made Ground should never be trusted for the support of much weight, even though it may have lain undisturbed for years.

Load which Foundations will Bear.

Safe Load on Ordinary Foundations.

	Tons per sq. ft.		Tons per sq. ft.
1. Rock, moderately hard, strong as the strongest red brick	9·0	7. Loose beds with piling	1·82
2. Rock of the strength of good concrete	3·0	8. „ „ „ concrete	2·75
3. Rock very soft	1·8	9. Brick, stock, mortar	2·5
4. Moist clay and sand	1·36	10. „ „ Portland cement, 1 to 1	8·0
5. Coarse sand and dry clay	2·25	11. Concrete, Portland cement, 1 to 6	1·5
6. Firm stone on dry clay	3·18	12. Rubble on lias	4

Intensity of pressure on a rock foundation should at no point exceed one-eighth pressure which would crush the rock.

Buildings seldom press with a weight of more than 1 ton per square foot on foundations.

Safe Load on Materials.

	Cwts. per sq. in.	Tons per sq. ft.		Cwts. per sq. in.	Tons per sq. ft.
Portland cement, concrete, 5 to 1	2·0	15	Brick in cement	·8	5·75
Portland cement, concrete, 10 to 1	1·0	7·5	Granite	10·0	72
Mortar, ordinary	·5	3·5	Limestone	9·0	65
Brick in mortar	·5	3·5	Sandstone	5·0	38
			Rubble	·5	3·5

Safe Load on Bearing Surface for end of Girders.

	Tons per sq. ft.		Tons per sq. ft.		Tons per sq. ft.
Granite	15	Brick, blue, in cement	9	Brick, stock, in lime	4
Portland stone	12	Brick, stock, in cement	6	Earth, compact	2
Limestone	9	Brick, stock, in lias	5	„ made	1

Safe Load on Chimney Foundations.

	Tons per sq. ft.		Tons per sq. ft.
Granite	45	Concrete, 6 to 1	10
Brick, blue Staff., in cement	20	Clay	4

Safe Load on Stone Walls and Columns.

	Ashlar Walls, single bedstones. Columns, diameter = ⅛ height. Lbs. per sq. in.	Block in course. Columns, diameter = ⅒ height. Lbs. per sq. in.
Granite	712	570
Hard stone	356	280
Medium	214	142

Safe Load on Brick Walls and Columns.

	Walls not less than 18 ins. Columns, diameter < ⅛ height. Lbs. per sq. in.	Walls under 18 ins. Columns, diameter < ⅛ height. Lbs. per sq. in.	Columns, diameter = ⅛ to ⅒ height. Lbs. per sq. in.
Brick in mortar	72	36	—
„ „ cement	108	72	—
„ „ Portland cement	142	108	44
Rubble, mortar	58	—	—
„ cement	72	—	—
Pressed bricks in mortar	128	114	108
„ „ „ cement	172	142	114
„ „ „ Portland cement	100	—	—

Safe Loads on Floors.

	Lbs. per sq. ft.		Lbs. per sq. ft.
Attics	31	Stairs	82
Dwelling-rooms	51	Workrooms	82
Library	72	Hay lofts	102
Dancing	72	Warehouses	112

Piled Foundations.

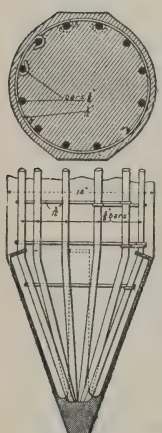


FIG. 139.

There are two kinds of piled foundations.

1. *When the soil is soft to a great depth,* area should be enclosed with sheet piling before main piles are driven, to consolidate the ground better. When the tops of the piles are connected by timber, cross-pieces (12″ × 9″ for 12″ piles) running across breadth of foundation are first notched on to heads of piles, and longitudinals, or *string pieces*, 12″ × 9″, running parallel to length of foundation, over them. On these latter, 3″ or 4″ planking (better diagonal) is laid to carry masonry. When upper stratum of ground is very soft, upper part of ground should be taken off, and filled in with stones or concrete or regular masonry. When of concrete, it should be 3′ thick for large buildings not excessively heavy.

2. *When there is hard ground below.*—In this case, as each pile resists partly by resistance to buckling as a column, the cross section should be greater in proportion to the depth. Maximum depth may be put at 30 feet. The number of piles must be proportional to weight carried.

Piles

Timber piles may be made of oak, elm, beech, larch, pine, or teak. Timber in sea-water is rapidly attacked by the wood borers *Teredo navalis* and *Limnoria terebrans*; creosoting will prevent their attack for a considerable time; it has also been suggested to cover piles with sheet copper or flat-headed copper nails. The head of the pile may be protected by a wrought-iron hoop, about 3″ × 1″, to prevent splitting when being driven. The lower end should be pointed, the length of the point being from 1½ to twice the diameter, and where the ground is hard, protected with an iron shoe. Piles protected by shoes should have a blunt end 4 to 6 inches in diameter. The shoes should have a solid point; the base being properly fitted to the blunt end of the pile prevents splitting by bolts which secure the shoes.

Concrete Piles.

Fig. 139 shows a 'Coignet' reinforced concrete pile. The reinforcement consists of longitudinal bars encircled by rings of round steel, with overlapping joints, spaced about 4 ins. apart.

For modern requirements concrete piles having a section less than 14 ins. square or equivalent area should never be used if over 30 ft. long; 12-in. square piles in many cases are quite large enough, but when it comes to actual practice it will be found that the extra cost of 14-in. piles is more than compensated for by the extra convenience of handling. The pile shoe should be of uniform taper, the faces being at an angle of about 16° to the centre-line of the pile, with nose slightly blunted. The length of the cast-iron portion to be about half the total length of the taper, the area at the top of the cast-iron point being about 40 per cent. of the sectional area of the pile in the case of the 14-in. square piles. The vertical rods to rest on the cast-iron point and to be kept in place by the recess. The straight portions of the wrought-iron arms to always be embedded in the concrete of the pile and not kept flush or project from the body.

(*W. Cleaver, paper read before Concrete Institute.*)

Piles made with a steel pipe driven to refusal and lined with concrete can develop not only the very considerable strength of the steel shell alone as an independent column, but the strength of the concrete core is materially increased by the shell acting as a continuous hooping, beside which there is an almost unlimited additional strength that can be obtained by the addition of vertical reinforcement bars. Such piles, says *Contract Record*, can endure very hard driving, can be thoroughly inspected inside, can have satisfactory bearing assured at the bottom, and can be reinforced to a high degree of strength comparable with massive structural steel columns. This reduces the number of piles and the cost of driving, and gives freedom from all uncertainty or possible deterioration from subterranean obstructions. The large factor of safety in the shell permits the safe application of working loads before the concrete filling is hard, which is often an important advantage.

Loads Carried by Piles.

A timber or steel pile is usually of the same section throughout its length, and it is then only necessary to calculate the load borne by the greatest unbraced length of the pile, regarded as a strut or column. The part below ground may be regarded as held firmly or as quite free, according to the nature of the strata. Piles are often driven so closely together, or have to be of such strength for driving purposes, that they are more than strong enough for their loads. This also applies to piles which support their loads by skin friction only and are of ample section, or numerous, in order that the area subjected to skin friction may be great enough to support the loads. But it is often necessary for the sake of economy, especially when the piles are very long, to load them up to the safe limit.

The calculations of strength may then be made as follows:

(1) If the pile is unbraced above the ground, the length measured from a few feet below the surface of the ground to the head of the pile is treated as a long column, and the section at the mid-point must be sufficient (see Column formulæ and 'Reinforced Concrete').

(2) If it is braced, the length taken is, in the case of a uniform pile, the longest unbraced length; that is, from a few feet below the ground to the point of bracing, or from the point of bracing to the head of the pile.

(3) If the pile is not uniform, the strength of the section at the mid-point of each of these lengths may have to be calculated separately, each length being treated as a long column.

(4) Bracing must not be considered effective unless it is effective in both directions, except in the following case.

(5) When the dimension of the pile is greater at right angles to the bracing than it is in the direction of the bracing, the two part lengths must be calculated as struts liable to cripple in the direction of the smaller diameter, and the whole length as a strut liable to cripple only in the direction of the larger diameter. If the formula for a square section of a reinforced concrete pile be used, the permissible load, expressed as a proportion of the short column load, may be thus modified. In each case modify the factor with l^2 in it, by multiplying by $\frac{r^2}{r_1^2}$ for the smaller dimension, and by $\frac{r^2}{r_2^2}$ for the larger dimension; where r = radius of gyration of a square section of the same area, r_1 = the smaller actual radius of gyration, and r_2 the larger actual radius of gyration. In the case of reinforced concrete piles, use the sums of the squares of the radii of gyration of the concrete and of the steel as in the formula (see 'Reinforced Concrete'). In this case the outside dimension might be the same, but the reinforcement stronger in one direction than in the other.

(6) For the portion of the pile below the ground:—

If the pile is in firm ground, or passes through a sufficient number of firm layers so that it is effectively steadied, any section of the pile should have sufficient strength, calculated as a short column; that is, it should take a load equal to the safe stress multiplied by the area. The load will be the whole load *less* an amount equal to the area of the pile above the section in question

multiplied by the coefficient of friction. This will usually range from about 1 to 4 cwts. per square foot (see ' Foundations ' under ' Bridges ').

If the ground into which the pile is driven is soft and yielding, and is not regarded as effectively steadying the pile, the strengths at mid-points of each length $l_1, l_2 \ldots$ must be calculated as those of the mid-section of a long strut or column of that length. These lengths are measured from the head of the pile, or from the point of effective bracing, to successive points in the length of the pile, the last being measured to the tip. The load in each case is the whole load less the load carried by friction on the length of pile above the point in question. Unless the tip of the pile rests on a hard stratum, or is driven some way into a very firm stratum, the load vanishes before the point is reached, and very few calculations will actually be required.

(7) If the pile so rests upon a firm stratum that a large part of the load is carried from the lower end, the same procedure may be adopted, but the loads will, of course, be greater.

If the length of the pile below ground is small, and it is driven into or rests on a hard stratum, the whole length may have to be calculated as a strut carrying the whole load. Such length as is actually in firm ground should, however, be subtracted from the length for calculation.

In some cases the support given by the ground may not be regarded as equivalent to effective bracing, but may be considerable. The strength of any section may then be calculated in the first place as though the soil were quite firm and hard, giving a load W_1, and next as though the soil, though exerting the effect of skin friction, had no bracing effect, giving a load W_2. The actual load will be something between W_1 and W_2, depending upon the estimated value of the soil as a steadier of the pile. Even soft silt must be regarded as exerting a considerable steadying effect; but if there be progressive movement of silt, sand, or peaty ground, no steadying effect can be counted upon. Considerable movement, of course, demands the provision of special bracing, or, with short piles driven into a firm stratum, the calculation of a cantilever effect based upon the observed pressure as recorded by a torsion pressure meter or otherwise estimated.

Generally: to find the necessary strength at any section S, measure the distance upwards to the head or bracing, at A, and an equal distance downwards to a point B. Calculate the load P carried by skin friction above B, and (W—P) is the load carried by A B as a strut. The strength at S will be calculated as that of a short strut if most of the length B S be effectively steadied by the ground; if there be no such steadying the calculation will be that for a strut of length A B (but in no case any greater length). If the lower half of S B is in firm ground, or all of it in weak ground, the section may be calculated for a stress somewhere between that allowable as a short strut and that allowable on the length A B as a free strut.

The strength of the cross-sections of a pile does not change suddenly, and very few calculations need be made in actual practice; but any of the above may be necessary in a particular case.

The two most probable errors are, first, to calculate as free struts lengths which are really steadied by the ground, and secondly, to neglect making for each section the reduction of load (regarding the section as the mid-point of a strut) due to skin friction from the surface of the ground to a point which is as far below the section as the bracing or head of the pile is above it. The load which the length in question itself carries by skin friction is imposed, upwards, upon some other mid-section nearer the head of the pile.

Loads on Reinforced Concrete Piles.

A well-designed reinforced concrete pile, 14 ins. by 14 ins. in section, will carry a load up to 100 tons (calculated). In actual practice such piles are carrying loads of 60 to 70 tons (at Bristol up to 65 tons; in the Thames, 15-in. × 15-in. piles, 70 tons).

The 'Simplex' System of Piling.

A cast-iron point is first driven to the required depth by means of a 16-inch steel pipe, ⅜ inch or ½ inch in thickness, stiffened with a collar at the top. The pipe is then filled with concrete and afterwards withdrawn slowly, the concrete filling adapting itself to irregularities in the ground. When more than one length of pipe is needed, welded joints may be preferred to riveted joints with cover plates. Instead of the permanent point or shoe an ' alligator ' pile point may be used, consisting of a sleeve of annealed cast steel, about 17 ins. in diameter, and a pair of toothed jaws hinged to the sleeve in such a manner that when closed they form a flat cutting edge which penetrates the ground. When the pipe is drawn up a foot or more the jaws open, allowing the concrete to pass through to the bottom of the hole.

Pile-sinking with the Water Jet.

In sinking piles the work may sometimes be much facilitated by the use of a water jet. In the case of hollow piles, the usual shoe may be replaced by a funnel-shaped end-piece, and the water pumped through the pile. In sinking cast-iron piles for bridge piers in New South Wales (*E. M. de Burgh*) it was found that a central nozzle with an aperture of 2 ins., and four holes of ½ diameter in the conical portion, gave good results in sand and soft clay, the piles being sunk through 14 ft. of sand in an average time of 6 minutes, and the actual rate of movement was about 8 ft. a minute. For sinking in sand not under water it was found expedient to flood the surface round the pile. For clay, the pile was loaded with ten tons, and after 5 or 10 minutes

pumping the pile would sink 6 to 9 ins. At a depth of 11 ft. in the clay, progress was very slow, and practically ceased at 13 ft., with the 10-ton load. These piles had flanged joints.

Timber piles can be similarly sunk, the pipe being taken down the side of the pile. On the work referred to above, timber piles, 14 ins. in diameter at one end and 9 ins. at the other, were sunk 16 ft. on an average; the average time taken being 4 minutes, and the water pressure 5 to 7 lbs. per sq. in. in sand and 30 to 40 lbs. per sq. in. in clay. The pipe (2-in.) was taken to a $1\frac{3}{4}$-in. augur hole in the point of the pile.

In driving steel sheet piling at Hodbarrow (*H. S. Bidwell*) a water jet was used in hard ground. Double ram pumps $5\frac{1}{2}$ ins. and 6 ins. in diameter were used, with 10 to 14 h.p. boiler capacity, the water being delivered by a 5-in. pipe, diminishing to 3-in. and to $1\frac{1}{2}$-in. From this a $1\frac{1}{4}$-in. vertical pipe led to two $\frac{3}{4}$-in. jets. The jet pipes were kept working up and down, with a block and tackle, about level with or slightly below the point of the pile. After three or four tides, the ground had recovered its normal consistency.

Piling Hammers.

Single Semi-Automatic Direct-Acting Steam Piling-Hammers.

(*The British Steel Piling Co.*)

This type of hammer, which is suitable for every description of pile driving, consists of a cylinder of cast iron raised by steam pressure and allowed to fall through gravity on the pile. The steam is admitted to the cylinder through a hollow piston rod by means of a piston valve, worked by a lever, at the upper end of this rod; steam being led to the valve by a flexible tube. The lower end of the piston rod, which is solid, passes through the bottom end of the cylinder, whilst the piston is between, the whole being made of one steel forging drawn down from an ingot and bored from the solid. The piston is fitted with rings, whilst the ports are placed on the upper face of same and lead into the hollow piston rod. When the lever is pulled down, it allows the steam to pass down this hollow rod through the ports into the cylinder, when the cylinder immediately rises, the pressure being between the piston and the cover. As soon as the cylinder is raised to the required height, the lever is released and the piston in the valve forced back to the exhaust position, thus cutting off the incoming steam and allowing the steam in the cylinder to escape to the atmosphere. When the operation is repeated the pistons in the valve, having differential areas, the tendency is always to keep the valve at the exhaust position. The piston valve is of very heavy pattern and made of gun-metal throughout, and fitted with phosphor-bronze piston rings. These hammers are so simple in their construction, and so strongly built, that spare parts are rarely required. They do not wet the top of the pile and cannot overrun their stroke owing to a safety hole, placed in the lower end of the cylinder; whilst the whole weight of the hammer is always on the pile. The exhaust is particularly free, so that there is practically no cushioning in the cylinder and consequent loss of blow. One man can easily operate the hammer and maintain a speed of 50 to 60 blows per minute continuously. These hammers are made in sizes from 10 cwts. to 5 tons.

The McKiernan-Terry Patent Double-Acting Automatic Pile-Hammers.

With these hammers 90 lbs. pressure gives a striking blow of 7,800 ft.-lbs. per min., at 140 strokes per min. A 40 h.p. boiler is required. The net weight of the hammer is 6,800 lbs., and the cylinder stroke 16 ins.

Safe Load on Piles.

Rankine gives safe load on piles as follows:—
For piles driven till they reach firm ground, 1,000 lbs. per square inch of area of head.
For piles standing in soft ground, by friction, 200 lbs. per square inch of area of head.

Formulæ for Safe Load on Piles.

(1.)

If P = safe-load on a pile; h = height of fall in feet;
w = weight of ram; s = penetration per blow in inches;
(P and w must be in the same units—i.e. both in lbs. or both in tons, for example),

$$P = \frac{2wh}{s+1}$$

(2.)

If P = safe load on pile; a = sectional area of pile;
w = weight of ram; E = modulus of elasticity;
h = height of fall; x = weight of pile;
s = depth driven by last blow; l = length of pile.

Rankine's formula,

$$P = \sqrt{\left(\frac{4Eawh}{l^2} + \frac{4E^2a^2s^2}{l}\right)} - \frac{2Eas}{l}.$$

Sanders' formula,

$$P = \frac{wh}{8s}.$$

Weisbach's formula, $$P = \frac{w^2 h}{s(w + x)}.$$

In Rankine's formula the safe load is taken to be about $\frac{1}{3}$ of the greatest load; if there is a great vibration, the factor of safety should be increased to 8 or 9; where there is no vibration, a factor of safety of 3 or even less may be adopted.

'Engineering News' (U.S.A.) formula, $$P = \frac{fwh}{p + 1}.$$

Where p is the average penetration in the last six blows; f a factor ranging from 1 to 12, and recommended to be taken as 2.

Screw Piles.

Screw Piles, figs. 140 and 141, are either of wood or of cast or wrought iron; they are seldom less than 6, or more than 18 inches, in diameter. They should be cylindrical in section to enable them to be more readily turned. They are fitted with a screw disc at the foot of the pile, similar to an auger, which usually does not make more than one and a half turns. This disc is of cast-iron, which is made up to 6 feet in diameter. The piles are usually sunk by manual power acting on long levers fixed to a capstan head on the piles, so as to screw them down to a firm stratum. When screw piles have to be sunk through hard ground, a water jet may be used to facilitate sinking.

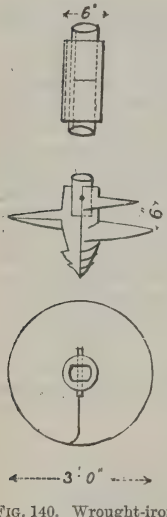


FIG. 140. Wrought-iron pile with cast-iron disc.

Cylinders.

Cylinders of cast-iron are sunk to a firm foundation by excavating inside and letting them sink by their own weight, or if that is not sufficient, adding additional weight. As the cylinder sinks, lengths are bolted on by means of flanges which are on the inside. When it is desirable to make the joints water-tight, a cloth strip saturated with thick paint is laid between the flanges.

Small cylinders from 4 to 10 feet in diameter are usually cast in lengths of from 5 to 10 feet, without any vertical joint, and from 1 to $1\frac{1}{2}$ inches in thickness with $1\frac{3}{4}$ or 2 inch internal flanges. The thickness in inches necessary to withstand the pressure of the water of small thin cylinders may be approximately found from the formula—

$$t = \cdot 001\, rh\ ;$$

where r is the radius of cylinder, and h depth of water, both in feet, and assuming that the metal will stand with safety a compression of 5,000 lbs. per square inch. In no case should the thickness t be less than $\frac{1}{4}$ inch. The inside of the cylinder is excavated by hand, or if the water cannot be kept out, by means of a grab, and is afterwards filled up with concrete or masonry.

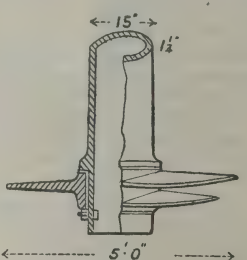


FIG. 141.—Cast-iron pile and disc.

At the St. Louis Bridge, U.S.A., the cylinders were 4, 6, and 8 feet, in diameter, cast in 10-feet lengths, the metal being $1\frac{1}{4}$ inch thick with $2\frac{3}{4}$-inch flanges.

The bottom cylinder of the Albert Bridge over the Thames was 21 feet in diameter and 4 feet 6 inches high, cast in one piece; on this was a reducing ring tapering to 15 feet in diameter; all the other rings were 15 feet in diameter and 6 feet high, also cast in one piece.

Brick or masonry cylinders built on an iron or wooden curb are frequently used instead of iron cylinders.

Pneumatic Process of Sinking Cylinders.

Cylinders and large caissons are often sunk by the pneumatic process. The cylinder is made as nearly as possible air-tight, and an air-lock or chamber, with two doors, one opening from the outer air and the other into the cylinder, is bolted on to it; both of these doors open downwards into the cylinder or against the pressure of the air. Air is pumped into the cylinder so as to drive the water out. The workmen then enter the air lock, the door communicating with the outer air is closed, and the compressed air allowed to enter from the cylinder; when the pressure has become equal the door into the cylinder is opened and the workmen descend. The excavated material is carried up through the air lock, or blown up through a tube by air pressure. The cylinder is buoyed up by the pressure of the air inside it, and when this is released it tends to sink. It has generally been considered that men cannot work in safety under a greater depth of

water than 100 ft.; in the St. Louis Bridge 108 ft. was reached, and 147 ft. under mean low water is said to have been attained in the East River Gas Company's tunnel at New York.

Steel Sheet Piling.

BRITISH PRACTICE.

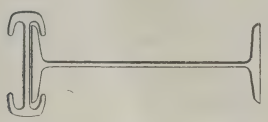


FIG. 141A.—Universal Joist Section.

British standard joists are employed, having flanges 5 ins. wide and used in conjunction with a standard clutch or locking bar. The ranges of joists are 15 ins. by 5 ins., 12 ins. by 5 ins., 10 ins. by 5 ins., 8 ins. by 5 ins. and 6 ins. by 5 ins. The clutch is put on the flange of joist at works and the two driven as one. The section has great strength, and is very easily straightened for re-use and possesses high salvage value, as the joists can be used for constructional purposes. Supplied up to 65 ft. lengths.



Simplex Section, 12 ft.; 26·5 lbs. per sup. ft. Simplex Section, 8 ft.; 22 lbs. per sup. ft.

FIG. 141B.

These sections consist of one member only and are used for lighter forms of construction. They can be obtained in lengths up to 40 ft.

With double-acting hammers, the cost of driving steel sheet piling, as against timber, is usually about one-fourth, and frequently as low as one-twentieth. In a recent example, a No. 6 double-acting hammer (McKiernan-Terry), at Larne, drove 845 12-in. 'Simplex' piles, in lengths varying from 33 ft. to 15 ft., in seventeen working days.

RANSOME INTERLOCKING TYPE 'D' STEEL SHEET PILING.

(*Ransome Machinery Co.* (1920) *Ltd., London.*)

Section.	Weight per ft. run.	Moment of Inertia.	Section Modulus.	Radius of Gyration.	Weight per sq. ft. interlocked.
D	33 lbs.	10·595 ins.⁴	7·0633 ins.³	1·058 ins.	28 lbs.

This section is made in single lengths up to 60 ft., and can be used for irregular areas.
Covering capacity, 80 sq. ft. per ton.

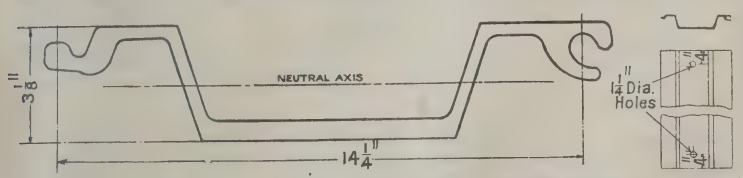


FIG. 141C.—Ransome Interlocking Type 'D' Steel Sheet Piling.

T

This section (fig. 141C) is claimed to be the strongest British piling in proportion to its weight per sq. ft., the strength being due to the trough-shape, with a neutral axis running through the centre of the pile, as shown in the figure.

The interlock is water-tight, without clay puddling, and it is sufficiently flexible to enable circular cofferdams to be built as small as 5 ft. 3 ins. in diameter, without using special piles. The safe working stress is 16,000 lbs. per sq. in.

The advantage claimed for this piling is that, in view of its large covering capaci y in proportion to its weight, one-third less tons of the piling are required to cover a given area, so that about one-third less has, consequently, to be paid for freightage.

The piling is made of special toughened steel that penetrates the hardest ground without damage to the piling. It is specially easy to drive and extract with Ransome plant, and can be used repeatedly.

Some of the classes of work for which Ransome type 'D' Piling is used are cofferdams, caissons, dams, retaining walls, lock, dock, harbour, breakwater, canal and reservoir work, bridge and other foundations, shaft-sinking, etc.

'SIDE-GROOVE' STEEL PILING.

(Side-Groove Steel Piling Supply Co., Ltd., London.)

These sections (figs. 141D and 141E), known as 'Side-Groove' Steel Piling (Annison's Patents), have an independent locking bar of heavy design and consequent great tensional strength in the joints of the assembled piles. The bars are slid on to the sheet members at the mills before dispatch, so that one bar and sheet are driven together as one pile. Thus assembled they form the widest steel piling manufactured: time and cost in driving them is therefore comparatively low. These sections are very adaptable, and special piles, such as corner pieces, etc., can be readily manufactured for any class of work. The heavier types can be rolled in lengths up to 61 ft., and the lighter type up to 40 ft.

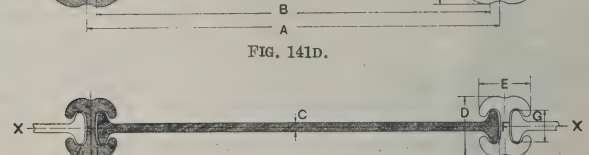


FIG. 141D.

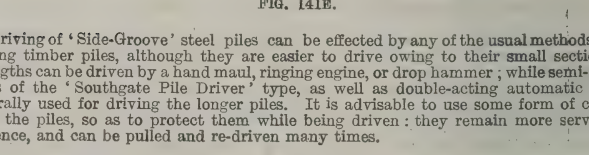


FIG. 141E.

The driving of 'Side-Groove' steel piles can be effected by any of the usual methods practised for driving timber piles, although they are easier to drive owing to their small sectional area. Short lengths can be driven by a hand maul, ringing engine, or drop hammer; while semi-automatic hammers of the 'Southgate Pile Driver' type, as well as double-acting automatic hammers, are generally used for driving the longer piles. It is advisable to use some form of cap on the heads of the piles, so as to protect them while being driven: they remain more serviceable in consequence, and can be pulled and re-driven many times.

DIMENSIONS AND WEIGHTS OF 'SIDE-GROOVE' STEEL PILING.

'Side-Groove' Steel Piling.	Dimensions.							Weight per Super. Foot Assembled.
	A	B	C	D	E	F	G	
	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Lbs.
Heavy section	$21\frac{3}{4}$	$20\frac{5}{8}$	$\frac{13}{16}$	$4\frac{5}{8}$	$4\frac{1}{8}$	$\frac{3}{4}$	$2\frac{3}{8}$	41·65
" "	$21\frac{3}{4}$	$20\frac{5}{8}$	$\frac{1}{2}$	$4\frac{5}{8}$	$4\frac{1}{2}$	$\frac{3}{4}$	$2\frac{15}{16}$	45·28
Light section	$21\frac{3}{4}$	21	$\frac{15}{32}$	$2\frac{7}{8}$	$2\frac{15}{32}$	$\frac{13}{32}$	$1\frac{1}{4}$	25 approx.

AMERICAN PRACTICE.

The following are three principal varieties. In the first form, (*a*), (*b*), and (*c*), fig. 141F, the section is symmetrical with respect to a longitudinal axis, but unsymmetrical with respect to a transverse axis. In the second form, (*a*) and (*b*), fig. 141G, the reverse is the case. In the third

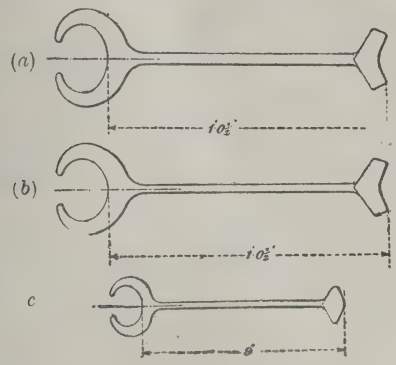


FIG. 141F.

form, either of the two pieces together form a unit symmetrical to both axes. All the forms may be used over and over again as steel sheet piles.

Sheet piles of the rolled forms may be secured from the mills in lengths up to 45 ft. for one or two light sections and up to 70 ft., or perhaps more, for other weights.

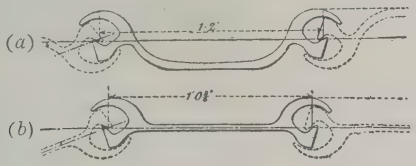


FIG. 141G.

In fig. 141H is shown a simple steel plate bent round a vertical axle of curvature and given suitable interlocking hooks at the sides. The curvature adds to the rigidity. This piling is assembled with concavities and convexities alternating.

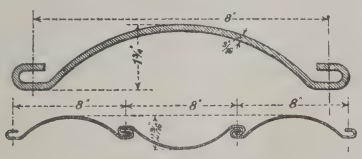


FIG 141H.

Another type of steel-plate sheet piling has vertica corrugations, such as shown in fig. 141 I. These corrugations are made on radii of curvature of but an inch or so. The interlock is made by overlapping edges and securing one or both by vertical straps riveted on to the piling. Sometimes the straps are not continuous, but are broken up into short and separated lengths. In driving piling of these classes it is usual to hammer shut the interlock opening on the

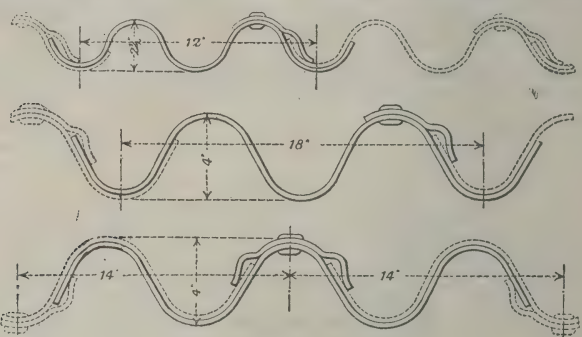


FIG. 141 I.

forward side at the bottom of the pile about to be driven. This tends to prevent rupture or distortion and to keep the interlock clear. When the next pile goes down it opens out the inter-locking space. The first two rolled forms are obtainable with $\frac{1}{4}$-in. webs. The second form is now obtainable with a web thickness of $\frac{7}{32}$ in. Plate steel sheet piling is obtainable in still thinner metal.

Driving.

The driving of the steel sheeting is generally effected by means of double-acting pile hammers, the McKiernan-Terry being a usual type. The blows are given in rapid succession.

Light-weight sheeting, and also heavy piling, may at times be very advantageously driven with a water jet. Such material as mud, soft clay, and clear sand will ordinarily respond to the jet. If, however, the material is hard clay or a sand containing a heavy percentage of gravel, the water jet is an inadvisable adjunct. A supply pipe of 1 in. diameter and a $\frac{3}{4}$-in. nozzle will be suitable for moderate weights of piling having a width of, say, 13 ins. or less.

Pulling.

It is quite customary to pull piles that have been used in temporary service. The cost of pulling is considerable. While, in general, it is not as great as the cost of driving, still it is to be rated as equal to a large percentage of the expense of driving the very same piles which it is proposed to pull out again. This percentage may rise as high as 75, or even higher. Where the piling has been driven with a wooden maul, or could have been so driven, a simple lever may suffice. This lever may have attached to it metal straps or other devices to facilitate connecting the pile head with the lever. Simple perforations in the top of the pile serve for the introduction of bolts or pins. Ordinary hoisting arrangements may suffice for these piles and for still heavier sheeting. Hydraulic jacks have been used for rather difficult pulling. The jacks may be used mainly for starting the units. By setting up jacks on the heads of the adjacent piles they may be brought to bear beneath a head block provided with a slot through which the intermediate pile may pass on its way up. Another method that has been used simply sets up a framework provided with a strong cross-piece, to which blocks and tackle may be rigged. The line may be operated by hand or by power, as circumstances may require. For pulling piles which had been put down to a considerable depth, a percussion-piston pile-driving hammer was hung upside down from a derrick boom and used thus to pull the piles. In pulling, the inverted hammer takes hold of the pile by means of the shackle, and steady tension is then exerted on the pile line, which pulls the shackle strap down upon the anvil block, and the hammer is placed in operation. Piles of 26 ft. penetration in clay, sand, and gravel were withdrawn in from 2 minutes to 10 minutes each, without distortion. The McKiernan-Terry pile hammers can also be used for pulling purposes.

Cost Data.

The following are the cost data relating to the driving of 19,654 lineal feet of 12-in. rolled piling of the first type.

The piling weighed 40 lbs. per lineal foot. The material penetrated was sand and clay, and the piles varied in length from 40 ft. to 60 ft. Twenty-one working days of 10 hours each were

consumed on the work. Maintenance and operation are put at $7 per day. Nine men, including a foreman, an engineer, and a fireman, constituted the crew. Their combined daily wage amounted to $28·50. The expense for 21 days, including a $60 item for handling and incidentals, totalled $805·50. The total cost per foot of penetration is given as $0·041. Estimated on the basis of the weight driven, the cost was $2·05 per ton of 2,000 lbs.

Caissons.

Very deep and large piers and abutments of bridges have recently been constructed with steel caissons braced internally so as to prevent them collapsing while sinking. These caissons are excavated and filled with concrete or masonry.

The foundations of the Hawksbury Bridge in Australia were sunk to a depth of 162 feet below high-water level by dredging.

Frictional Resistance of Pneumatic Foundations (Schmott).

Tables of Coefficients of Friction.		Dry Material.		Wet Material.	
Material.	Soil.	First Movement.	During Motion.	First Movement.	During Motion.
Sheet-iron, without rivets	Gravel and sand	·4015	·4583	·3348	·4409
Sheet-iron, with rivets	,, ,,	·3965	·4911	·4677	·5481
Cast-iron, unplaned	,, ,,	·3677	·4668	·3646	·4963
Granite, roughly worked	,, ,,	·4266	·5368	·4104	·4800
Pine, sawn	,, ,,	·4088	·5109	·4106	·4985
Sheet-iron, without rivets	Sand	·5361	·6313	·3655	·3247
Sheet-iron, with rivets	,,	·7269	·8391	·5156	·4977
Cast-iron, unplaned	,,	·5636	·6063	·4744	·3796
Granite, roughly worked	,,	·6473	·7000	·4728	·5291
Pine, sawn	,,	·6633	·7340	·5787	·4793

The foundation must be vertical, being kept in equilibrium by the friction of its surface.

According to Mr. F. W. Sweeney in the *Journal of the Western Society of Engineers*, experience in sinking concrete caissons for bridge foundations has shown that building the walls with a batter is not only of no particular advantage in reducing the sinking friction, but it is positively detrimental to the proper guiding of the caisson. It is considered the best practice to have a perfectly plumb wall. When the depth of water will permit, it is generally cheaper to build up a river caisson on shore in the form of a wooden shell, launch it, tow it into position between guide piles and sink it by filling with concrete.

Freezing Process of Sinking Foundations.

The Freezing Process has been used to sink large foundations in treacherous material, especially quicksand. Pipes 10-inch in diameter, open at the bottom, are sunk vertically about 3 feet apart round the ground to be excavated; inside of these 8-inch pipes, closed at the bottom, are lowered, and again within the latter small pipes. The freezing material is pumped into the smaller pipes, and returns to the cooling tank through the large ones. A solid cylinder of frozen ground is gradually formed round the pipes; these frozen cylinders unite, forming a solid ring round the place to be excavated. The material to be removed will, of course, be frozen solid, and therefore much more difficult to excavate.

Dams.

If the depth of the water does not exceed 4 feet, the bottom moderately firm, and there is no current, a dam of clay puddle about 3 feet wide on top may be formed round the space to be enclosed: before the dam is commenced care should be taken to remove all loose porous material and roots from the site, and, if possible, excavate a trench for its foundation. Long lengths of waterproof canvas, sewn together and weighted with a chain stitched to the ends so as to keep it in place, have also been used. The canvas should be supported by a framework of timber (see fig. 142). These frameworks are spaced about 8 feet apart and sheeted with boarding between. The ground should be dredged level to receive them.

Puddle Dams.

Coffer dams of puddle usually consist of two parallel rows of sheet piling, the intervening space between them being filled in with puddle; sometimes three or even four rows, with a puddle wall between each, have been adopted in order to give greater stability and make the dam more watertight.

It is always desirable to make the puddle wall as thin as possible; it is seldom more than

4½ or 5 feet in thickness. Bolts through coffer dams should be avoided as far as possible, as the puddle in settling leaves vacant spaces along them, causing leaks; to remedy this, iron discs through which they pass have been used; these discs are embedded midway in the puddle wall.

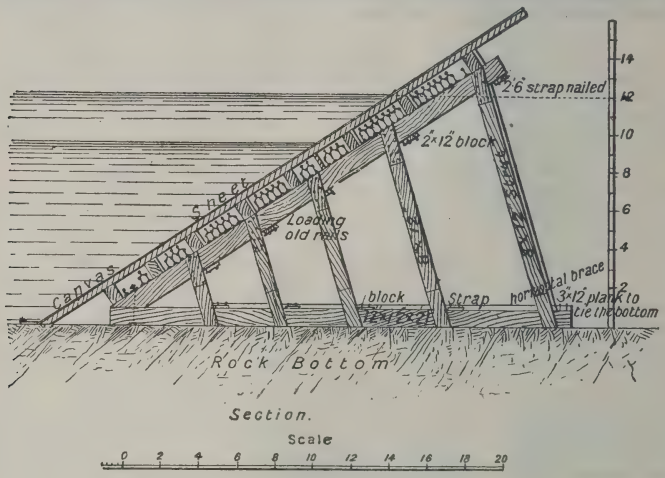


FIG. 142.

In coffer dams made for the construction of the East London Railway through the docks, through bolts were entirely dispensed with, their place being taken by buttress piles driven at intervals on the outside which withstood the pressure of the puddle.

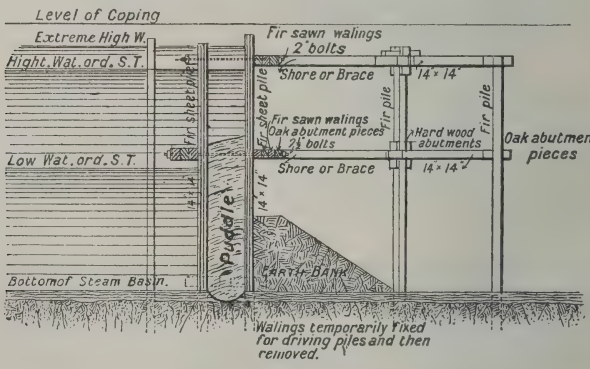


FIG. 143.

Fig. 143 shows a coffer dam used at Portsmouth Dockyard extension. The shoring piles were driven 9 feet centre to centre, and 12-inch by 12-inch struts, one horizontal and one inclined were fixed to each.

Puddle should be free from large stones, roots and vegetable matter liable to decay. Some engineers consider a certain amount of sand or gravel renders it less liable to crack.

Single Balk Dams.

Dams have also been most successfully constructed of single rows of sheet piling grooved and driven between waling pieces. Fig. 143A is the more usual arrangement; the piles are from 9 to 12 inches in thickness; a groove about 2 inches wide and 2 inches deep is cut out of each

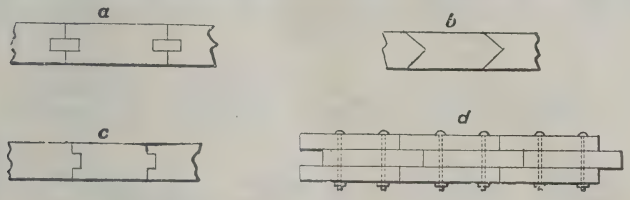


Fig. 143A.

pile; into this is fitted a tongue, which is cut to the exact size to fit it. Sheet piles should be sawn die-square with the grooves perfectly straight and true. They should be of sufficient thickness to withstand the water pressure without bulging between the waling pieces. Small leaks at the joints may be stopped by caulking with oakum.

Cribs.

Timber cribs or boxes, which are usually made watertight and floated into position and then sunk, have been largely used in America for foundations of bridges on rock, or in places where there is no fear of undermining by the currents. They are filled with concrete.

Scaffolding.

Standards are upright poles, generally of spruce, 20′ to 50′ long, 5″ to 8″ diam. at butt; those under 2½″ at tips are termed *rickers*, and run about 22′ long. They are firmly fixed in the ground (or in tubs filled with earth, if excavation is inconvenient), 4′ 6″ from wall, 10′ to 12′ apart. When greater lengths are required, two are lashed together, tip to butt, and tightened with wedges. To these, on the side next the wall, are lashed horizontal *ledgers*, or *runners*, parallel to the wall at vertical intervals of 3′ 6″ to 5′. They support the *putlogs*, of squared timber (usually birch), 4″ × 3″, 6′ long, one end of which rests on the ledgers, the other in a hole in the wall left by omitting a brick header; they are about 3½′ or 4′ apart, and support the *scaffold boards*, usually 9″ × 1½″, sometimes 3″. Poles called 'braces,' lashed diagonally across every three or four standards, stiffen the scaffold. Masons often use a second row of standards and runners, close to the wall, to prevent the masonry being disfigured by putlog holes.

Fig. 144 (from Spon's 'Dict. of Eng.') shows the arrangement of a bricklayer's scaffold. When the scaffold has to be carried to a considerable height, other poles are lashed to the standards with ropes tightened by wedges. Poles are also lashed diagonally across every three or four standards in the shape of a St. Andrew's cross; these are called braces, and they serve to stiffen or brace the scaffold longitudinally.

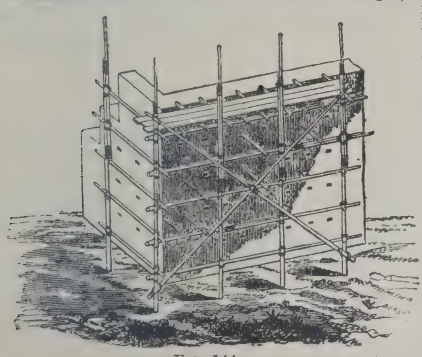


Fig. 144.

In buildings which do not admit of putlog holes in the walls, as where rubble stone or ashlar facing is used, and which do not require heavy machinery for hoisting, or strong timbers in the scaffold, two rows of standards with ledgers are used, one row being close to the wall, and the other at the usual distance, so that both ends of the putlogs may rest on the ledgers. Scaffolds such as we have just described are sometimes used for heights of 90′ or 100′ from the ground, as in building church steeples and similar work. In the erection of houses it is usual to construct a staging about 10′ square on the outside of the scaffolding, for the purpose of hoisting materials, and from which they are distributed for use.

This staging is usually formed with standards and ledgers in the same manner as the scaffold to which it is connected.

Scaffolding Knots.

The principles of a good knot are its facility in tying, its freedom from slipping, and its being easily untied. All knots will jam more or less when subject to a strain. The knots in fig. 144A are shown open before being drawn taut, in order to show the position of the parts. The names usually given, and their uses, are as follows :—

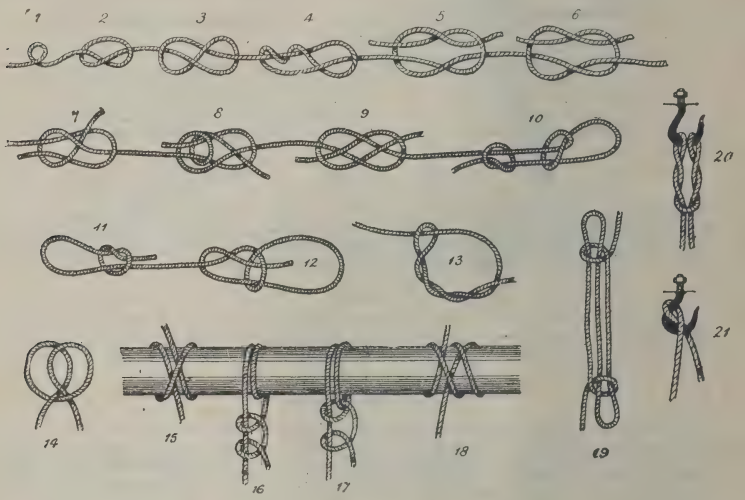


FIG. 144A.

1. Bight of a rope.
2. Overhand, or thumb, knot, to prevent a rope running through the sheave of a block.
3. Figure of eight knot, used as No. 2.
4. Stevedore knot : is useful when the rope passes through an eye. It is easily untied after being strained.
5. Square, or reef, knot. This is a most useful knot for joining two ropes of same size. However tight it jams, it is easily 'upset' and undone.
6. Granny, or thief, knot. This should not be used, as it will jam tight but not slip (as erroneously supposed), will not 'upset,' and consequently is difficult to undo.
7. Single sheet bend, or weavers' knot, used principally for joining two ropes of unequal sizes more securely than a reef knot.
8. Double sheet bend, more secure than No. 7.
9. Carrick bend, for fastening the four guys to a derrick.
10. Flemish loop.
11. Slip knot.
12. Bowline, for making a loop that will not slip. After being strained, this knot is easily untied. Commence by making a bight in the rope, then put the end through the bight and under the standing part, pass the end again through the bight, and pull taut. This knot should be tied with facility by everyone who handles ropes.
13. Timber hitch ; the greater the strain the tighter it will hold.
14. Clove hitch, consisting of two half-hitches ; used chiefly to tie ledgers to standards. This is the most useful of all the knots used in scaffolding, on account of its simplicity and security.
15. Clove hitch, as No. 14, showing its application around a pole.
16. Round turn and two half-hitches, for securing a rope to a ledger or for fastening the guys of derricks, shear legs, &c.
17. Fisherman's bend, used when a thick rope, such as a fall, is made fast to a ring.
18. Rolling hitch, used in a variety of ways, chiefly in making fast one rope to another that is held taut.
19. Sheepshank, for shortening a rope when the ends are inaccessible.
20. Catspaw. An endless loop, and used where great power is required.
21. Blackwaller. Easily applied, but requires watching ; has a tendency to slip.

Shoring Buildings.

A plank (fig. 151), C, 9 ins. wide, 3 ins. thick, the length varying with height of building, is placed against upper part of wall to be supported. In this rectangular holes are cut to admit of timber 'needles,' D, from 4 ins. × 6 ins. × 6 ins., and about 12 ins. long. These are let into


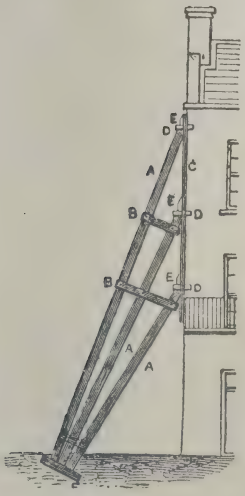


FIG. 151.

FIG. 152.

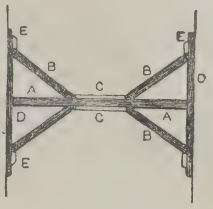

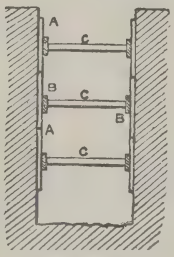


FIG. 153.

the wall about 4½ ins., and project beyond the plank about 4½ ins. to receive the ends of the 'shores,' A.

A cleat, E, is usually nailed to the plank on the upper side of each needle.

The struts, A, are from 6 ins. × 4 ins. in very small buildings to 12 ins. × 9 ins. or 12 ins. in very large; usually half timbers 12 ins. × 6 ins. They are fixed to a footing block, F.

The outer strut is called a 'top raker,' the inner the 'bottom shore,' the centre the 'middle raker.'

Short pieces, B, about 1 in. thick and from 6 ins. to 9 ins. wide are nailed on each side of the shores.

Struts between Houses.

A (fig. 152), horizontal strut, 6 ins. × 4 ins. to 9 ins. × 4 ins.
B, raking strut, 6 ins. × 4 ins.
C, straining-piece, 6 ins. × 3 ins.
D, plank, 9 ins. × 3 ins.
E, cleats.

The horizontal strut, A, is at height above ground equal to about two-thirds height from ground to eaves.

Timbering Trenches.

A (fig. 153), poling boards, about 3 ft. long, 1 in. to 1½ in. thick, 7 ins. to 9 ins. wide, placed against the side as each successive depth of 3 ft. is excavated.

B, waling planks, 9 ins. × 3 ins., placed longitudinally against the centre of each row of poling boards.

C, struts from 4 ins. square to 6 ins. or 8 ins. square, according to their length and the pressure. Raking pieces are added in bad ground.

RETAINING-WALLS

Pressure of Earth.

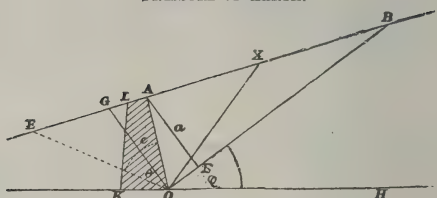


Fig. 153A.

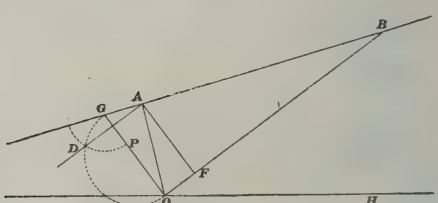


Fig. 153B.

Let AB, fig. 153A, be the surface of the ground, and OB the natural slope at an angle ϕ.

Draw OE, making an angle θ, this angle being equal to ϕ plus the angle of friction of earth against the back, AO, of the wall AOKL.

Take X so that EA × EB = (EX)².

Then AOX is the triangle of maximum pressure against the wall.

Draw AF (a) and GO (c) perpendicular to OB, then,

$$\text{Maximum thrust} = \tfrac{1}{2}w\,(c - \sqrt{c(c-a)})^2,$$

where w = weight of a cubic foot of earth.

Describe a semicircle on GO (figs. 153A and 153B). Draw AD parallel to OB, cutting the semicircle at D. With G as centre and OD as radius describe a circle cutting GO at P, and join DP, then,

$$\text{Maximum thrust} = \frac{w}{2}\,(\text{OP})^2, \text{ acting at } \tfrac{1}{3}\text{ AO, and making an angle } \theta \text{ with the normal to AO.}$$

Walls for Railway Cuttings.

For walls over 18 ft. in height—

Thickness at bottom = $\frac{2}{3}$ height − 3 ft.

For walls less than 18 ft. high—

Thickness at bottom = $\frac{1}{3}$ height + 3 ft.

The two equations give the same result for a height of 18 ft. No allowance is necessary for a surcharge of less than 6 ft. (*Pennsylvania Railroad Co.*)

Pressure of Water.

The moment of pressure of water on a retaining wall per each foot of length of wall is $d^3 \times 10{\cdot}4$, where d is the depth of water in feet. This is the moment at 1 foot. The total pressure is $31{\cdot}2\,d^2$, assumed to be concentrated at one-third the depth from the bottom of the water. Hence the moment $10{\cdot}4\,d^3$. The weight of the wall may be assumed concentrated at its centre of gravity, and the effect of the pressure of the water is to turn the wall upon the point O (fig. 153C). Calling H the height of the wall in feet, and t its thickness in inches, and assuming one cubic foot to weigh 120 pounds, the moment of stability is $\frac{\text{H}\,t^2}{2{\cdot}4}$ for rectangular walls, per foot of length; or $d^3 \times 10{\cdot}4$ must not exceed $\frac{\text{H}\,t^2}{2{\cdot}4}$; or $t^2 = \frac{25\,d^3}{\text{H}}$. This enables the thickness of a wall to be determined, that will exactly balance the pressure. Safety would be just secured by adding 50 per cent. to the thickness at the base, and subtracting the same amount from the top thickness, thus

giving the wall a sloping back as per dotted line, increasing the acting leverage of the C.G. (centre of gravity) of the section, so that the resultant pressure will now fall within the middle third of the wall thickness. This method is approximate and useful for small construction. Large masonry dams require more special consideration, and may be designed by calculations at each few feet of depth, designing the wall in a series of steps and drawing a final shape to enclose the whole in one harmonious section, which must also fulfil the conditions of strength proper to the material and crushing stress. Special care is necessary that water does not get in between bed joints, as it would greatly assist to turn a wall over.

It is usually considered desirable that the resultant of pressure on a wall should fall within the middle third of its thickness. Thus in fig. 153D, if $a\,b$ to any scale represents the total pressure $31{\cdot}2\,d^2$ concentrated at the centre of pressure upon the face of a wall, and $b\,c$ to the same scale is the weight of the wall, the line $b\,c$ being drawn through the C.G. of the cross section, then if the diagonal of the rectangle $a\,b\,c\,d$ cuts the base of the wall within its middle third of thickness, the wall may be assumed fully safe. If the diagonal fall outside the middle third, the thickness of the wall must be increased. It may be made safe by building the wall higher, and thus loading it; but the danger of this method is that a greater area is exposed to wind pressure, and if margins of safety are narrow the addition may be worse than useless in small work. Where a tank wall forms a continuation of an earth retaining wall, for example, special care is necessary.

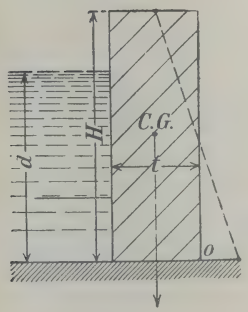


FIG. 153C.

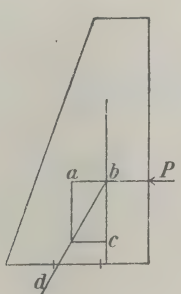


FIG. 153D.

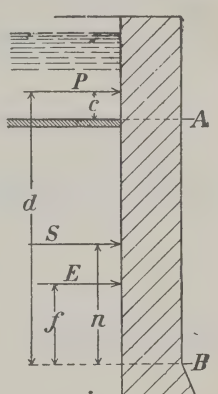


FIG. 153E.

The upper part of the wall must be safe at the bed joint level with the bottom of the tank and the wall, taken as a vertical cantilever subject to a lateral thrust at a distance two-thirds of the water depth from the water surface; it must be safe against overturning at any joint lower down. It must also be safe against the added thrust of the earth behind the lower portion plus the further pressure due to the tank full of water above, which must be treated as per the rule of page 510, fig. 155. Thus in fig. 153E the wall must be safe on the line A against the moment of the water pressure P c. It must be safe at the line B against the moment (P $\times$ d) + the moment (E $\times$ f) + the moment (S $\times$ n). Here E is the horizontal component of the earth pressure, and f is one-third A B; S is the horizontal component of the surcharged load, and n is one-half of A B. The safety must be proved at sufficient other depths between B and A and below B. Economy is promoted by sloping the wall against the earth between the points A and B. The wall in the figure is palpably erroneous, being far too thin for its height; it might be made safe by a sufficiency of cross-ties buried in the concrete bottom of the tank, in which case the wall from A to B must be made safe by treating it as a beam exposed to a virtual load at S and E.

Equilibrium of Retaining-Walls.

By Rankine's theory the pressure of earth on a vertical plane, AB (fig. 154), may be considered as acting at a point, P, one-third AB from base A, and in a direction parallel to the surface. Let w = weight of earth in pounds per cubic ft., ϕ = angle of repose of earth, P = total pressure, h = height of wall in feet.

For a bank with horizontal top.

$$P = \frac{wh^2}{2} \cdot \frac{1 - \sin\phi}{1 + \sin\phi}.$$

For bank with any surface slope, θ, of indefinite length

$$P = \frac{wh^2}{2} \cos\theta \frac{\cos\theta - \sqrt{\cos^2\theta - \cos^2\phi}}{\cos\theta + \sqrt{\cos^2\theta - \cos^2\phi}}.$$

For bank with maximum surface slope, ϕ, of indefinite length

$$P = \frac{wh^2}{2} \cos\phi.$$

For bank with surface slope of definite length an intermediate value is taken.

To resist the pressure there is weight of wall and of earth, ABD, resting on its back, which call W; this acts vertically from centre of gravity, G. The revetment may fail by overturning round f, by crushing at f, by sliding on Af.

Overturning round f.—On any scale make $oa = W$, $ob = P$; then oc is resultant (R), acting in direction oe at e. If e falls within base, the revetment will not overturn without crushing the toe at f; but e should fall within the centre third of Af.

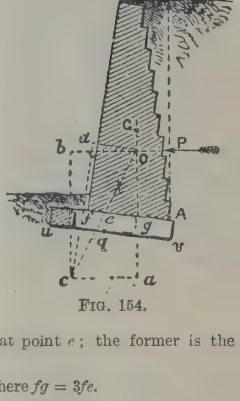


FIG. 154.

Crushing at f.—The resultant, R, must be resolved into two forces, cd (N), perpendicular to, and do parallel to, Af, acting at point e; the former is the crushing force.

Pressure per square inch at f on 1′ length of wall $= \frac{2N}{fg \times 12''}$, where $fg = 3fe$.

The pressure at f should not exceed power of material to resist crushing, divided by factor of safety, 4 to 8 (in practice seldom as high as 8).

Sliding on Af.—Force tending to produce sliding is od; force tending to resist it is N × co-efficient of friction at the joint Af. od should not exceed N × $\frac{4}{5}$ coefficient of friction.

Surcharged Wall.

If n = height of wall in feet, c = height of surcharge in feet, t = mean thickness of wall, in feet, to sustain horizontal bank; t' = mean thickness of wall, in feet, to sustain bank with indefinitely long natural slope, the factor of safety being about the same as for t; t'' = mean thickness in feet of surcharged wall; then

$$t'' = \frac{nt + 2ct'}{n + 2c}.$$

Effect of Weight of Buildings on Retaining-Walls.

Let w_1 = weight of building per unit of surface; the rest of the notation as at commencement. The total horizontal pressure, P, on revetment, due to the weight of building

$$= w_1 (h - x) \frac{1 - \sin\phi}{1 + \sin\phi},$$

acting at $\frac{1}{2}$OB from O; and the total horizontal pressure, P_1, on revetment, caused by the earth

$$= \frac{w (h - x)^2}{2} \cdot \frac{1 - \sin\phi}{1 + \sin\phi},$$

acting at $\frac{1}{3}$OB from O.

If the front of the building were farther back from AO the effect would be less, but cannot be determined.

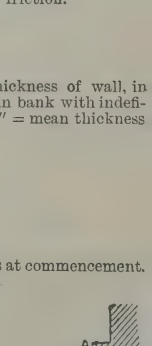



FIG. 155.

Foundations of Retaining-Walls.

Find the pressure perpendicular to uv (fig. 155), the weights and pressures being taken from point v instead of from A. If q is centre of pressure, qu should nearly equal qv, in order that the pressure may be uniformly distributed (this is unnecessary if the pressure at u is within what the earth can bear without yielding), and greatest pressure at u should not be greater than earth will bear, usually 1 to 1½ ton, or say 2,500 to 3,500 lbs. per square foot. Foundations to be carried deep enough to avoid effects of heat and frost.


Prof. Rankine advises that the distance, fe, of centre of pressure from outside edge in buttresses, chimneys, walls, &c., should be as follows :—In a

Rectangle (solid).



$fe = \text{or} > \frac{1}{3} fA.$

Square (solid).



$fe = \text{or} > \frac{1}{3} fA.$

Ellipse (solid).




$fe = \text{or} > \frac{3}{8} fA.$

Circle (solid).




$fe = \text{or} > \frac{3}{8} fA.$

Hollow square (factory chimneys).



$fe = \text{or} > \frac{1}{6} fA.$

Circular ring (factory chimney).



$fe = \text{or} > \frac{1}{4} fA.$

Example of Brick Retaining-Wall.

Brickwork in mortar 100 lbs. per cubic ft., with a resistance to crushing of 500 lbs. per sq. in. and factor of safety of 8. Coefficient of friction for damp mortar, ·7. Weight of earth (w), 110 lbs. per cubic ft. ; angle of repose (ϕ), 37°. Pressure on foundation of sandy gravel not to exceed $1\frac{1}{2}$ ton per sq. ft. Height of wall (h) above footings, 18 ft. Wall sustains horizontal bank level with top. Top of wall two bricks thick, to allow of solid coping. Batter, $\frac{1}{12}$.

Assume for trial fA (fig. 154) = $\frac{1}{3}h$ = 6 ft. The back of wall being built with offsets of $4\frac{1}{2}$' at every 18" in height, DB will = 3'. Foundations to be 3 ft. below ground.

Weight of wall above bed joint, fA = 6,750 lbs. per foot run of wall.
„ earth in front of AB = 3,025 „ „ „
Total weight on fA = 9,775 lbs. = W „ „

The wall is more likely to overturn at f than at any other point ; it will be sufficient, therefore, to inquire into the stability of that joint.

$$P = \frac{wh^2}{2} \frac{1 - \sin\phi}{1 + \sin\phi} = 4{,}594 \text{ lbs.,}$$ which acts at P ; AP being one-third AB.

Drawing the parallelogram of forces, oc cuts Af at e, making $fe = 9\frac{1}{2}$".

Resolving oc perpendicular and parallel to Af gives cd = 10,100 lbs.

Pressure per sq. in. at $f = \frac{2 \times 10100}{3 \times 9\frac{1}{2}'' \times 12''} = 59$ lbs.

This gives a factor of safety of 10, which is more than sufficient.

Angle ocd will be found to be 20°, tan 20° = ·36, which gives a factor of safety of 2, the coefficient of friction being ·7. The wall is therefore stable.

The pressure on foundations perpendicular to uv will be found to be 14,000 lbs., or $6\frac{1}{4}$ tons, acting at q. To equalise the pressure on the earth, let $qu = qv$, which will make $uv = 12\frac{1}{2}$ ft., giving a pressure of about $\frac{1}{2}$ ton per sq. foot ; but as the earth will bear $1\frac{1}{4}$ ton without yielding, a much less width will suffice.

Practical Rules for Retaining-Walls.

A mean thickness of one-fourth height with counterslope of one-fifth, built in steps, will not be far wrong for light soils. This gives a bottom thickness of about one-third height, a centre thickness of one-fourth height, and a top thickness of one-seventh height. A mean thickness one-third height will generally do for stiff clay.

The following rule has been extensively used for brick retaining-walls :—

Top thickness, 1 ft. $10\frac{1}{2}$ in. ; face batter of 1 in 6, and after every five courses from top increase thickness by half a brick ; front batter should not be more than one-sixth, or it will let in moisture

and encourage vegetable growth in the joints. Long walls should have counterforts at back. Walls retaining soils through which water freely passes, such as clean gravel and sand, should have a French drain of loosely packed rubble, &c., running along the back footings, from which good-sized weepholes, from 6 to 10 ft. apart, should lead through the base. With more retentive soils a French drain at least 9 or 12 inches wide should run nearly the whole way up the back of the wall. In some cases extra weepholes at higher levels may be advisable. The mouths of the weepholes should always be carefully protected by loose packing.

Trautwine's Rule for Retaining-Walls.

The horizontal thickness (*ab*, fig. 156) at the base of a vertical or nearly vertical retaining-wall, *cdba*, which sustains a backing of either sand, gravel, or earth, level with its top, *cd*, as in the figure should not be less than the following in railroad practice, when the foundations are not more than about 3 feet deep.

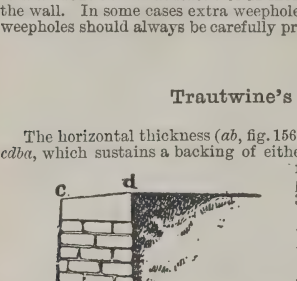


FIG. 156.

When the backing is deposited loosely, as usual, as when dumped from carts, cars, &c.—

Wall of cut stone or of first-class large-ranged rubble in mortar, *ab*. . . . ·35 of its entire vertical height, *db*.

Wall of good common scabbled mortar-rubble or brick . . . . . ·4 of its entire vertical height, *db*.

Wall of well-scabbled dry rubble . . . ·5 of its entire vertical height, *db*.

With good masonry, however, we may take the height *ds* instead of *db*, and then the above proportions of *ds* will give a sufficient thickness at the ground-line, *os*.

When the backing is somewhat consolidated in horizontal layers, each of these thicknesses may be reduced, but no rule can be given for this.

The offset, *oe*, in front of the wall is not included in these thicknesses.

When, however, the backing is a pure clean sand or gravel, we should use only the full dimensions, inasmuch as the tremor caused by passing trains would neutralise any supposed advantage from ramming materials so devoid of cohesion. Such sand may be rammed with much advantage for the purpose of compacting it in foundations; but a different principle is involved in that case. When it is done, even with cohesive earths, with a view of saving masonry in retaining-walls, it is probable that the expense will generally be found quite equal to that of the masonry saved.

The base, *ab*, in fig. 156, is four-tenths of the height, *bd*. In the foregoing thicknesses at base, the back, *db*, of the wall is supposed to be vertical; and the face, *ca*, either vertical or battered (sloped or inclined backward) to an extent not exceeding about 1½ inch to a foot; which limit it is rarely advisable to exceed in practice, owing to the bad effect of rain, &c., upon the mortar when the batter is great. The base of a vertical wall need not, in fact, be as thick as one with a battered face; but when the batter does not exceed 1·5 inch to a foot the difference is very small.

A mixture of sand or earth with a large proportion of round boulders, paving pebbles, &c., will weigh considerably more than the materials ordinarily used for backing, and will exert a greater pressure against the wall, the thickness of which should be increased, say, about one-eighth to one-sixth part, when such backing has to be used.

The wall will be stronger if all the courses of masonry be laid with an inclination inwards, as at *oeb*; especially if of dry masonry, or if time cannot be allowed (as it always should be when practicable) for the mortar to set properly before the backing is deposited behind it. In retaining-walls, as in the abutments of important arches, the engineer should place as little dependence as possible upon mortar, but should rely more upon the position of the joints for stability.

An objection to inclining the joints in dry (without mortar) walls is that rain-water, falling on the battered face is thereby carried inward to the earth backing, which thus becomes soft, and settles. This may be in a great measure obviated by laying the outer or face courses horizontal; or by using mortar for a depth of only about a foot from the face. The top of the wall should be protected by a coping, *cd*, which had better project a few inches in front. After the masonry has been built up to the surface of the ground, the foundation pit should be filled up; and it is well to consolidate the filling by ramming, especially in front of the wall.

The back, *db*, of the wall should be left rough. In brickwork it would be well to let every third or fourth course project an inch or two. This increases the friction of the earth against the back, and thus causes the resultant of the forces acting behind the wall to become more nearly vertical, and to fall farther within the base, giving increased stability. It also conduces to strength not to make each course of uniform height throughout the thickness of the wall, but to have some of the stones (especially near the back) sufficiently high to reach up through two or three courses. By this means the whole masonry becomes more effectually interlocked or bonded together as one mass, and therefore less liable to bulge. Very thick walls may consist of a facing of masonry and a backing of concrete.

Where deep freezing occurs the back of the wall should be sloped forwards for 3 or 4 feet below its top, as at *co*, fig. 157, which should be quite smooth, so as to lessen the hold of the frost and prevent displacement.



FIG. 157.

A slight bulging in a new wall does not necessarily prove it to be actually unsafe. It is generally due to the newness of the mortar and to the greater pressure exerted by the fresh backing, and will often cease to increase after a few months. It need not excite apprehension if it does not exceed ¼ inch for each foot in thickness at *a*.

After a wall, *abco*, fig. 158, with a vertical back has been proportioned by Trautwine's rule, it may be converted into one with an offsetted back, as *aino*. This will present greater resistance to overturning, and yet contain no more material. Thus, through the centre, *t*, of the back, draw any line, *in*; from *n* draw *ns* vertical; divide *is* into any even number of equal parts (in the figure

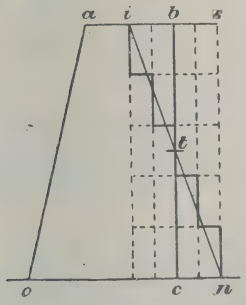


FIG. 158.

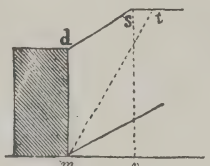


FIG. 159.

there are 4), and divide *sn* into one more equal part (in the figure there are 5). From the points of division draw horizontal and vertical lines for forming the offsets, as in the figure.

When, as in fig. 159, the backing is higher than the wall, and slopes away from its inner edge, *d*, at the natural slope, *ds*, of 1½ to 1, the following thicknesses at base will at least be found sufficient for vertical walls with sand. They are deduced from experiments.

In Table I., the first column contains the vertical height, *sv*, of the earth, as compared with the vertical height of the wall, which latter is assumed to be 1; so that the table begins with backing of the same height as the wall, as in fig. 156. Without increasing the base these vertical walls may be changed to others with battered faces to any extent not exceeding 1½ inch to a foot, or 1 in 8, without sensibly affecting their stability.

TABLE I.

Total Height of the Earth, compared with the Height of the Wall above Ground.	Wall of Cut Stone in Mortar.	Good Mortar Rubble or Brick.	Wall of Good Dry Rubble.	Total Height of the Earth, compared with the Height of the Wall above Ground.	Wall of Cut Stone in Mortar.	Good Mortar Rubble or Brick.	Wall of Good Dry Rubble.
	Thickness at Base, in Parts of the Height.				Thickness of Base, in Parts of the Height.		
1	·35	·40	·50	2	·58	·63	·73
1·1	·42	·47	·57	2·5	·60	·65	·75
1·2	·46	·51	·61	3	·62	·67	·77
1·3	·49	·54	·64	4	·63	·68	·78
1·4	·51	·56	·66	6	·64	·69	·79
1·5	·52	·57	·67	9	·65	·70	·80
1·6	·54	·59	·69	14	·66	·71	·81
1·7	·55	·60	·70	25			
1·8	·56	·61	·71	or more	·68	·73	·83

When the slope *nr*, fig. 160, of 1½ to 1 starts from the outer edge, *n*, of the wall, greater thickness is required. Poncelet gives the following for this case, for dry sand (Table II.).

TABLE II.

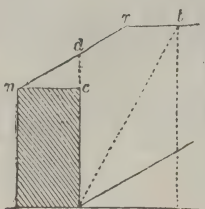


FIG. 160.

Total Depth of Earth, compared with Height of Wall.	Wall of Cut Stone in Mortar.	Wall of Brick-work.	Total Depth of Earth, compared with Height of Wall.	Wall of Cut Stone in Mortar.	Wall of Brick-work.
1	·35	·452	2·4	·762	1·02
1·1	·393	·498	3	·811	1·11
1·2	·439	·548	4	·852	1·18
1·3	·485	·604	6	·883	1·25
1·4	·532	·665	11	·909	1·28
1·5	·579	·726	21	·922	1·31
1·6	·617	·778	31	·926	1·32
1·7	·645	·824	Infinite	·934	1·34
1·8	·668	·847			
1·9	·690	·903			
2	·707	·930			

When the earth reaches above the top of the wall, as in figs. 159 and 160, the wall is surcharged, and the earth that is above the top is called the surcharge. When the surcharge is carefully deposited above the wall, so as to slope back at a steeper angle than 1½ to 1, as, say, at 1 to 1, theory does not require the wall to be as thick.

WHARF WALLS

are an instance where the thickness should be increased, notwithstanding that the pressure of the water in front helps to sustain them. The earth behind such walls is not only liable to be very heavily loaded when vessels are discharging, but is apt to become saturated with water, especially below low-water level, and thus to exert a very great pressure against the walls. Moreover, the water gets under the wall, and by its upward pressure virtually reduces its weight, and consequently its stability. The same cause, of course, diminishes the friction of the wall upon its base. Such walls are, therefore, very liable to slide if the foundation is smooth and horizontal, and have done so even when the foundation had a considerable inclination backward.

TABLE III.

CONTENTS IN CUBIC YARDS FOR EACH FOOT IN LENGTH OF RETAINING-WALLS WITH A THICKNESS AT BASE EQUAL TO ·4 OF THE VERTICAL HEIGHT, IF THE BACK IS VERTICAL.

Ht. Ft.	Cub. Yds.	Ht. Ft.	Cub. Yds.	Ht. Ft.	Cub. Yds.	Ht. Ft.	Cub. Yds.	Ht. Ft.	Cub. Yds.	Ht. Ft.	Cub. Yds.
1	·013	10½	1·38	20	5·00	29½	10·9	48	28·8	74	68·5
1½	·028	11	1·51	20½	5·25	30	11·3	49	30·0	76	72·2
2	·050	11½	1·65	21	5·51	31	12·0	50	31·3	78	76·1
2½	·078	12	1·80	21½	5·78	32	12·8	51	32·5	80	80·0
3	·113	12½	1·95	22	6·05	33	13·6	52	33·8	82	84·1
3½	·153	13	2·11	22½	6·33	34	14·5	53	35·1	84	88·4
4	·200	13½	2·28	23	6·61	35	15·3	54	36·5	86	92·5
4½	·253	14	2·45	23½	6·90	36	16·2	55	37·8	88	96·8
5	·313	14½	2·63	24	7·20	37	17·1	56	39·2	90	101·3
5½	·378	15	2·81	24½	7·50	38	18·1	57	40·6	92	105·8
6	·450	15½	3·00	25	7·81	39	19·0	58	42·1	94	110·5
6½	·528	16	3·20	25½	8·13	40	20·0	59	43·5	96	115·2
7	·613	16½	3·40	26	8·45	41	21·0	60	45·0	98	120·1
7½	·703	17	3·61	26½	8·78	42	22·1	62	48·1	100	125·0
8	·800	17½	3·83	27	9·12	43	23·1	64	51·2	102	130·1
8½	·903	18	4·05	27½	9·45	44	24·2	66	54·5	104	135·2
9	1·01	18½	4·28	28	9·80	45	25·3	68	57·8	106	140·5
9½	1·13	19	4·51	28½	10·2	46	26·5	70	61·3		
10	1·25	19½	4·75	29	10·5	47	27·6	72	64·8		

If the back is stepped according to the rule on p. 513, the proportionate thickness at base will, of course, be increased. Face batter, 1½ inches to a foot, or one-eighth of the height. Back either vertical, or stepped according to Fig. 158. The strength is very nearly equal to that of a vertical wall with a base of ·4 its height. Experience has proved that such walls, when com-

posed of well-scabbled mortar rubble, are safe under all ordinary circumstances for earth level with the top.

A retaining-wall is usually in greater danger for a few months after its completion than after time has been allowed for the mortar to harden perfectly and for the backing to settle. When there are suspicions of the safety of a new wall, it would be well to place strong temporary shores against it, at about one-third to one-half of its height above ground. In some cases permanent buttresses of masonry may be built for the purpose. They should be well bonded into the wall.

The pressure of the earth backing will be much reduced if the first few feet of its height be made up in thin horizontal layers, to be consolidated by being used by the masons instead of scaffolding, as shown at *h*, Fig. 156. Frequently this can be done without inconvenience, and at very trifling cost.

CHIMNEYS.

Stability of Chimney Shafts.

The limit of stability to be observed for chimneys is that the wind must never bring tension on any joint. Where this limit is reached, the weight of the shaft on that joint will vary from *nil* at the windward edge to a maximum at the leeward edge, and the maximum intensity of pressure will = mean pressure × 2, the minimum distance of the centre of pressure from the leeward edge being as given with reference to retaining-walls.

To calculate the Stability of Shaft at any Joint.

w = weight of material, in pounds per cub. ft.—say, 100 lbs. for brickwork.
W = total weight of shaft, in pounds, above given joint.
p = wind-pressure, in pounds per sq. ft., generally taken at 50 to 55 lbs. against side of *square* shaft, and at 25 to 28 lbs. on sectional area through axis of *round* shaft, owing to its reduced action on a cylindrical surface.
h = height of shaft, in ft., above given joint.
h_1 = height in ft. of centre of area supposed to be acted on by the wind, above given joint.
d = outer side of square, or diameter of round shaft, in ft., above given joint.
A = area of masonry, in ft., at a given joint.
m = leverage of W, in ft., = $\frac{1}{2}d$ — minimum distance of centre of pressure from leeward edge = $\frac{1}{2}d$ for *round* and $\frac{1}{3}d$ for *square* shafts.

Then, at the limit of stability laid down, ph_1, hh_1, or moment of wind-pressure at given joint = Wm, or moment of stability.

And $\frac{2W}{A}$, or maximum intensity of pressure at leeward edge, must = or < safe intensity of resistance of material to crushing. Before failure by sliding could occur in any chimney it would be blown over.

If
d = average breadth of shaft, h = height, b = breadth of base (all in ft.), W = weight of chimney, in pounds, c = co-efficient of wind-pressure per sq. ft. (this co-efficient varies with the cross-section of the chimney, and for square chimney = 56, for octagon chimney = 35, for round chimney = 28), then $c\frac{dh^2}{b}$ = W.

Thus, a square chimney of average breadth of 8 ft., 10 ft. wide at base, and 100 ft. high, would require to weigh 56 × 8 × 100 × 10 = 448,000 lbs. to withstand any gale likely to be experienced. Brickwork weighs from 100 to 130 lbs. per cub. ft., hence such a chimney must average 13 inches thick to be safe. A round stack would weigh half as much, or have less base.

Dimensions of Chimneys, General Rules, and Formulæ.

Outside diameter at ground should not be less than $\frac{1}{10}$th the height, unless it is supported by some other structure.

Batter varies from 1 in 60 to 1 in 10; 1 in 24 is very common. Or the batter should be from $\frac{1}{16}$th to $\frac{1}{4}$ inch to foot on each side.

Thickness of brickwork: One brick (8 or 9 in.) for 25 ft. from the top, increasing $\frac{1}{2}$ brick (4 to 4½ in.) for each 25 ft. from the top downwards. If the inside diameter exceeds 5 ft., the top length should be 1½ brick, and if under 3 ft. it may be ½ brick for 10 ft.

Generally a much less height than 100 ft. cannot be recommended for boiler chimneys, as the lower grades of fuel cannot be burned, as they should be with a shorter chimney.

Tall Chimneys should always stand alone; if connected with the rest of the buildings, the increased settlement due to their weight on so small a foundation area causes rupture in the masonry. The distance from furnace to shaft should not exceed ⅔ height of shaft. They should be built and allowed to settle before the connecting flue is made.

Circular form is best; with the same quantity of material it covers a great area, is therefore more stable, and the effect of wind upon it is much less.

In any case the flue should be circular; it can hardly be too large, as it can always be reduced by dampers. It should be lined with a detached skin of firebrick for a certain distance up, increasing in proportion to the heat of the vapours carried off, and separated from the main shaft by an air-space.

Chimneys to receive Vapours of a very high temperature are built altogether of fire-bricks.

Caps tie head of chimney together, but projecting caps catch the wind, and cause oscillation. A dangerous chimney has been saved by removing the cap.

The *Scaffolding* used for building a chimney should be so arranged that it does not prevent the chimney from settling.

The *Intensity of Draught* required varies with the kind and condition of the fuel and the thickness of the fires. Wood requires the least, and fine coal or slack the most. To burn anthracite slack to advantage a draught of $1\frac{1}{2}$ inch of water is necessary, which can be obtained by a well-proportioned chimney 175 feet high.

Design of Tall Chimneys.

45 feet is an ordinary height to serve two steam boilers, but in some towns, as Manchester and Leeds, 90 ft. is the minimum allowed. They are sometimes proportioned for height according to the coal burnt per week of 56 hours, thus :—

4	tons	per week =	75 ft. high.	50	tons	per week =	150 ft. high.
13	,,	,, =	100 ,,	100	,,	,, =	180 ,,
26	,,	=	120 ,,	150	,,	,, =	200 ,,

Another rule is to make the height of the chimney three times length of boiler plus twice distance of furthest boiler to chimney; this allows 1 ft. of height for every foot the gases travel round the boiler, and 2 ft. of height for every foot of external flue.

A round chimney should not exceed twenty-five times its internal diameter in height.

Prussian Government Rules.—In April 1902 the Prussian Government issued regulations for the construction of chimney-stacks. Square stacks to be designed for a wind pressure of $25\frac{1}{2}$ lbs. per sq. ft., with the centre of pressure at the centre of gravity of diametral vertical plane. Octagonal stacks, 71 per cent. of the above pressure, and circular stacks, 67 per cent. (*Engineering Record.*)

Thickness of Brickwork.—Up to 150 ft. high or 5 ft. inside diameter the top length is generally one brick (9 ins.) thick; above that height or diameter the top length should be one brick and a half thick, and the thickness should be increased by a $4\frac{1}{2}$-in. set-off at every 20 ft. below the top. The outlet at top and the throat or internal diameter at each set-off should be of the calculated size to give the necessary area plus allowance for friction.

Batter.—If the diameter of the throat is kept uniform and a $4\frac{1}{2}$-in. set-off occurs at every 20 ft., the intermediate portions being of uniform thickness, a batter of 1 in 53·33 will be given, but the London County Council require a minimum batter of 1 in 48 = $2\frac{1}{2}$ ins. in 10 ft., and besides that it will be requisite in most cases to provide a firebrick lining for at least the bottom 15 ft. or 20 ft., having a thickness of $4\frac{1}{2}$ ins. and a clear space from the outer brickwork of $1\frac{1}{2}$ in. to 2 ins., necessitating a still greater batter.

Chimney-Cap.—The chimney-cap or cornice, by the London County Council rules, must not project more than the thickness of the brickwork upon which it rests. It may be of cast-iron casings bolted together and filled with brickwork; or of granite or other good weathering stone the separate blocks being cramped together with galvanised-iron cramps, or with an iron hoop sunk into the top and protected with cement; or of brickwork in cement.

Diameter at Base.—The London County Council require that the width of a shaft at the base if square on plan must be at least one-tenth, and if circular on plan, at least one-twelfth of the total height.

Firebrick Lining.—The firebrick lining must be entirely self-supporting and have a clear space behind, to allow for expansion and contraction independently of the main structure. It is therefore necessary to cover the top of the space by an over-sailing course of bricks built out from the inside of the main shaft, protecting the space, but allowing a clearance above the lining of $\frac{1}{8}$ in. for every 5 ft. of its height, to permit of its expansion when heated. The average height of this lining is one-fifth height of shaft + 10 ft. A common height is 20 ft. and thickness $4\frac{1}{2}$ ins.; when of greater height it is necessary to make the lower part 9 ins. thick. No air bricks should be inserted in the outer wall, as is sometimes done with the idea of cooling the air space, any such

openings being very detrimental to the draught. The only possible inlet for air to the chimney shaft should be through the fire-bars or over the surface of the incandescent fuel.

The smoke inspectors of the London County Council have lately recommended openings into the chimney-shafts near the bottom to reduce the smoke nuisance. The real effect is to dilute the smoke with air before it reaches the chimney-top so that it is not so black when expelled, but it does not reduce the actual amount of carbon emitted except so far as it tends to spoil the draught and so to reduce the fuel consumption and boiler efficiency.

Foundation.—It is important to note that a tall chimney should stand on an independent foundation in order that the settlement, or compression of the soil, may be uniform. When a chimney is built close alongside a boiler-house, or within the four walls of a warehouse, it is sometimes placed on an extension of the other foundations and bonded in with other work, but this invariably leads to unequal settlement and subsequent cracks in the brickwork.

(*Professor Henry Adams, M.Inst.C.E.*)

Effective Area of Chimney.

(1)

The effective area of a chimney for a given power varies inversely as the square root of the height. The actual area in practice should be greater, because of retardation of velocity due to friction against the walls. On the basis that this is equal to a layer of air 2 inches thick over the whole interior surface, and that a commercial horse-power requires the consumption on an average of 5 lbs. of coal per hour, we have the following formulæ:

$$E = \frac{0{\cdot}3\ HP}{\sqrt{h}} = A - 0{\cdot}6\sqrt{A} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad 1$$

$$HP = 3{\cdot}33E\sqrt{h} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad 2$$

$$S = 12\sqrt{E} + 4 \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad 3$$

$$D = 13{\cdot}54\sqrt{E} + 4 \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad 4$$

$$h = \left(\frac{0{\cdot}3\ HP}{E}\right)^2 \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad 5$$

In which HP = horse-power; h = height of chimney, in feet; E = effective area, and A = actual area in square feet; S = side of square chimney, and D = diameter of round chimney, in inches.

(2)

If

A = least internal area of flue, in inches.
a = area of grate, in feet,
HP = horse-power of boiler.
h = height, in feet, of chimney from fire-grate.
P = pounds of coal consumed per hour.

$$A = \frac{112\ HP}{\sqrt{h}} = \frac{12F}{\sqrt{h}}$$ (*Tredgold.*)

F being in this case = 9·33 HP, or 9·33 lbs. per H.P. hour.

(3)

If

W = coal burnt in lbs. per hour; A = area in square feet at top; h = height in feet; C = cubic feet water evaporated per hour.

$$A = \frac{W}{14\sqrt{h}}, \text{ or } \frac{1{\cdot}5\ C.}{\sqrt{h}}. \quad W = 14A\sqrt{h}. \quad h = \left(\frac{W}{14A}\right)^2.$$

Area for single boiler = $\frac{1}{8}$ grate area.
Chimney under 150 ft., more than one boiler = $\frac{1}{10}$ " "
" over 150 ft. = $\frac{1}{12}$ " "

$$\text{Area in sq. ins.} = \frac{\text{lbs. coal per hour} \times 12}{\sqrt{\text{Height in feet}}} \qquad \textit{(Bourne.)}$$

$$\text{,, ,, ,,} = 1\tfrac{1}{2} \text{ sq. ins. per lb. coal per hour.} \qquad \textit{(Murray.)}$$

$$\text{,, ,, ,,} = \frac{\text{Area of fire grate}}{\sqrt{\text{Height} \times 1{\cdot}58}}. \qquad \textit{(Elswick.)}$$

The force of draught in chimney is the deficiency in weight of the column of rarefied air in the chimney compared with a similar column of the external air.

Ordinary velocity of chimney gases $= 2{\cdot}4\ \sqrt{H}$. *(Adams.)*

A common rule is to make the flue and area of the chimney top equal to from $\frac{1}{8}$ to $\frac{1}{10}$ the area of fire-grate, without taking into account the height of the chimney.

To find the draught of a given chimney in inches of water: *Divide 7·6 by the absolute temperature of the external air* ($\tau_a = t + 460$); *divide 7·9 by the absolute temperature of the gases in the chimney* ($\tau_c = t' + 460$); *subtract the latter from the former, and multiply the remainder by the height of the chimney in feet.* This rule, expressed in a formula, would be:

$$d = h\left(\frac{7{\cdot}6}{\tau_a} - \frac{7{\cdot}9}{\tau_c}\right).$$

***To find** the height of a chimney* to give a specific draught power, expressed in inches of water: *Proceed as above through the first two steps, then divide the given draught power by the remainder*; the result is the height in feet. Or, by formula:

$$h = \frac{d}{\left(\frac{7{\cdot}6}{\tau_a} - \frac{7{\cdot}9}{\tau_c}\right)}.$$

To find the maximum efficient draught for any given chimney, the heated column being 600° F. and the external air 62°: *Multiply the height above grate in feet by ·007, and the product is the draught power in inches of water.*

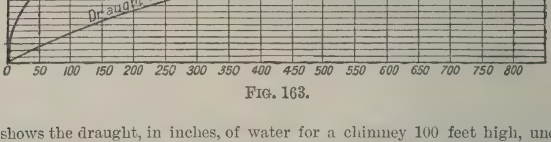


FIG. 163.

Fig. 163 shows the draught, in inches, of water for a chimney 100 feet high, under different temperatures from 50° to 800° above external atmosphere, which is assumed at 60°. The vertical scale is full size, and each division is one-twentieth of an inch. It also shows the relative quantity, in pounds of air, which would be delivered, in the same time, by a chimney under the same differences of temperature. It will be seen that practically nothing can be gained by carrying the temperature of the chimney more than 350° above the external air at 60°.

To determine the quantity of air, in pounds, a given chimney will deliver per hour, multiply the distance in inches, at given temperature, on the diagram, by 1,000 times the effective area in square feet, and by the square root of the height in feet. This gives a maximum. Friction in flues and furnace may reduce it greatly.

TEMPERATURE OF FLUES.

To find temperatures of flues, hang strips of metal foil on an iron wire across flues.

	F.°
Copper fuses at	2160
Aluminium fuses at	1800
Zinc fuses at	740
Lead fuses at	600
Tin fuses at	420

KENT'S TABLE OF SIZE OF CHIMNEYS FOR STEAM BOILERS.

Formula = HP = 3·33 $(A - 0{\cdot}6\sqrt{A})\sqrt{h}$. (Assuming 1 H.P. = 5 lbs. of coal burned per hour.)

Diameter. Inches.	Area A in. sq. feet.	Effective area $E = A - 0{\cdot}6\sqrt{A}$ sq. feet.	Height of Chimney in Feet.														Equivalent square chimney. Side of square $\sqrt{E+4}$ in.
			50	60	70	80	90	100	110	125	150	175	200	225	250	300	
			Commercial Horse-Power of Boiler.														
18	1·77	·97	23	25	27	29											16
21	2·41	1·47	35	38	41	44											19
24	3·14	2·08	49	54	58	62	66										22
27	3·98	2·78	65	72	78	83	88										24
30	4·91	3·58	84	92	100	107	113	119									27
33	5·94	4·48		115	125	133	141	149	156								30
36	7·07	5·47		141	152	163	173	182	191	204							32
39	8·30	6·57			183	196	208	219	229	245							35
42	9·62	7·76			216	231	245	258	271	289	316						38
48	12·57	10·44				311	330	348	365	389	426						43
54	15·90	13·51					427	449	472	503	551	595					48
60	19·64	16·98					536	565	593	632	692	748					54
66	23·76	20·83						694	728	776	849	918	981				59
72	28·27	25·08						835	876	934	1,023	1,105	1,181	1,253			64
78	33·18	29·78							1,038	1,107	1,212	1,310	1,400	1,485	1,565		70
84	33·48	34·76							1,214	1,294	1,418	1,531	1,637	1,736	1,830	2,005	75
90	44·18	40·19								1,496	1,639	1,770	1,893	2,008	2,116	2,318	80
96	50·27	49·01								1,712	1,876	2,027	2,167	2,298	2,423	2,654	86
102	56·75	52·23								1,944	2,130	2,300	2,459	2,609	2,750	3,012	91
108	63·62	58·83								2,090	2,399	2,592	2,771	2,939	3,098	3,393	96
114	70·88	65·83									2,685	2,900	3,100	3,288	3,466	3,797	101
120	78·54	73·22									2,986	3,226	3,448	3,657	3,855	4,223	107
132	95·03	89·18									3,637	3,929	4,200	4,455	4,696	5,144	117
144	113·10	109·72									4,352	4,701	5,026	5,331	5,618	6,155	128

For pounds of coal burned per hour for any given size of chimney multiply the figures in the above table by 5. This is on the high side. If 1 lb. coal evaporates 8 lbs. water, then 5 × 8 = 40 lbs. of water evaporated per h.p., whereas in up-to-date condensing plants 20 and 15 lbs. water evaporated per h.p. may be taken as a good average. (*Horobin.*)

RATE OF COMBUSTION FOR DIFFERENT DRAUGHT PRESSURES.

Height of Chimney above Grate, in Feet.	Total Draught Pressure, in Inches of Water.	Rate of Combustion, in Pounds per Square Foot of Grate per Hour.	Height of Chimney above Grate, in Feet.	Total Draught Pressure, in Inches of Water.	Rate of Combustion, in Pounds per Square Foot of Grate per Hour.
25	·182	10	130	·948	30
50	·364	16	140	1·029	34
60	·437	17	150	1·095	40
70	·512	18	180	1·313	50
80	·583	19	200	1·459	60
90	·657	20	225	1·641	70
100	·729	22	250	1·825	80
110	·802	24	300	2·189	90
120	·875	27	400	2·553	112

(*W. S. Hutton.*)

Although the exact conditions are not specified for which the above table is calculated, the figures are approximately correct for stationary boilers burning medium sized anthracite coal. (*Horobin.*)

TOTAL DRAUGHT REQUIRED FOR EFFICIENT COMBUSTION OF DIFFERENT KINDS OF FUEL.

Fuel.	Total Draught, in Inches of Water.	Fuel.	Total Draught, in Inches of Water.
Straw	0·20	Slack, very small	0·7 to 1·1
Wood	0·30	Coal-dust	0·8 to 1·1
Sawdust	0·35	Semi-anthracite coal	0·9 to 1·2
Peat, light	0·40	Mixture of breeze and slack	1·0 to 1·3
Peat, heavy	0·50	Anthracite, round	1·2 to 1·4
Sawdust, mixed with small coal	0·60	Mixture of breeze and coal-dust	1·2 to 1·5
Steam coal, round	0·4 to 0·7	Anthracite slack	1·3 to 1·8
Slack, ordinary	0·6 to 0·9		

(*W. S. Hutton.*)

The above must be considered as applying only under ordinary conditions, and is only approximate. (*Horobin.*)

ARCHES.

Setting-out Arches.

Semi-elliptical Arch (fig. 164).—To set out a *semi-elliptical arch*, draw a line, AB, equal to the span or transverse axis of the ellipse. At the centre of AB draw the semi-conjugate, CD, at right angles, equal to the rise. Then, from the vertex, C, with radius AD or DB equal to half the span, describe an arc intersecting AB in E and F.

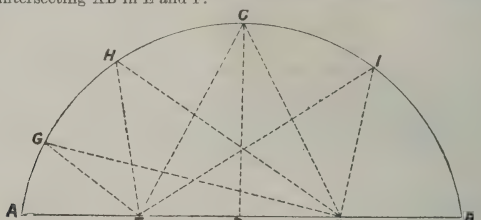


FIG. 164.

The points E, F, will be the foci of the ellipse. If two nails or pegs be fixed in the foci, and a line attached to them equal in length to AB, then the curve traced by a nail, keeping this line stretched, will be the ellipse required; the lines EGF, EHF, ECF, EIF, &c., being all equal to span AB, and to each other.

Many-centred Circular Arch.—Curves formed of arcs of circles of unequal radii, and similar in appearance to the ellipse, are sometimes adopted for the arches of bridges; with the same rise and span, they may be constructed to give a greater waterway, and in stone bridges they have been preferred by practical stonecutters, but in brick bridges they have no advantage in simplicity over elliptical arches. They may be described with three or a greater odd number of centres. The number of centres will depend on the relation between the span and rise; when the latter is one-third, or a greater fractional part of the former, three centres may be used, but if the rise is less than one-third of the span, then five, or a greater odd number, must be taken. In practice it will be found troublesome to describe arcs from a large number of centres, nor, indeed, will occasion be found for using curves of this description. The following is a method of describing a curve composed of three arcs each of 60°.

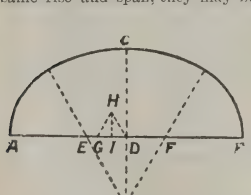


FIG. 165.

Let AB (fig. 165) represent the span, and CD the rise. Take DG = AD − DC, and on it describe an equilateral triangle, DGH; let fall the perpendicular HI, and take

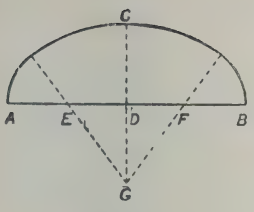


FIG. 166.

IE = HI. Lay off DF = DE. On EF describe the equilateral triangle EFK; then E, F, and K will be the centres required.

For an oval arch, rise one-third, bisect the half-spans AD and DB (fig. 166) in the points E and F, and produce versed sine CD to G, making DG = DC: then E, F, and G will be the three centres with which the curve may be described. In setting out arches, the practical difficulty arises from the elasticity of string. Instead of a string, soft wire about a tenth of an inch in diameter should be used. When the radius does not exceed 12 or 15 feet, a slip of wood may be used, with a nail at each end.

To find the Depth of Keystone for first-class Cut-stone Arches, whether Circular or Elliptic.

$$\text{Depth of key in feet} = \frac{\sqrt{\text{Rad.} + \text{half span}}}{4} + \cdot 2 \text{ foot.}$$

For second-class work this depth may be increased about one-eighth part; or for brick or fair rubble, about one-third.

TABLE.

Depths of Keystones for Arches

Of first-class cut stone. For second-class add about one-eighth part. For brick or fair rubble add about one-third part.

Span.	Rise, in Parts of the Span.						
	½	⅓	¼	⅛	⅛	⅛	1/10
Feet.	Key. Feet.	Key. Feet.	Key. Feet.	Key. Feet.	Key. Feet.	Key. Feet.	Key. Feet.
2	·55	·56	·58	·60	·61	·64	·68
4	·70	·72	·74	·76	·79	·83	·88
6	·81	·83	·86	·89	·92	·97	1·03
8	·91	·93	·96	1·00	1·03	1·09	1·16
10	·99	1·01	1·04	1·07	1·11	1·18	1·26
15	1·17	1·19	1·22	1·26	1·30	1·40	1·50
20	1·32	1·35	1·38	1·43	1·48	1·59	1·70
25	1·45	1·48	1·53	1·58	1·64	1·76	1·88
30	1·57	1·60	1·65	1·71	1·78	1·91	2·04
35	1·68	1·70	1·76	1·83	1·90	2·04	2·19
40	1·78	1·81	1·88	1·95	2·03	2·18	2·33
50	1·97	2·00	2·08	2·16	2·25	2·41	2·58
60	2·14	2·18	2·26	2·35	2·44	2·62	2·80
80	2·44	2·49	2·58	2·68	2·78	2·98	3·18
100	2·70	2·75	2·86	2·97	3·09	3·32	3·55
120	2·94	2·99	3·10	3·22	3·35	3·61	3·88
140	3·16	3·21	3·33	3·46	3·60	3·87	4·15
160	3·36	3·44	3·58	3·72	3·87	4·17	
180	3·56	3·63	3·75	3·90	4·06	4·38	
200	3·74	3·81	3·95	4·12	4·29		
220	3·91	4·00	4·13	4·30	4·48		
240	4·07	4·15	4·30	4·48			
260	4·23	4·31	4·47	4·66			
280	4·38	4·46	4·63				
300	4·53	4·62	4·80				

In large arches it is advisable to increase the depth of the archstones toward the springs; but when the span is as small as about 60 to 80 or 100 feet, this is not at all necessary if the stone is good, although the arch will be stronger if it is done. In practice this increase, even in the largest spans, does not exceed from ¼ to ½ the depth of the key, although theory would require much more in arches of great rise.

Amount of Pressure sustained by Archstones.

In bridges of the same width of roadway, if all the other parts bore to each other the same proportion as the spans, the total pressure would increase as the squares of the spans, while the pressure per square foot would increase as the spans. But in practice the depth of the archstones increases much less rapidly than the span; while the thickness of the roadway material, and the extraneous load per square foot, remain the same for all spans. Hence the total pressures, at key and at spring, increase less rapidly than the squares of the spans, but more rapidly than the simple spans; as do also the pressures per square foot. Thus, in two bridges of the same width, but with spans of 100 and 200 feet, with depths of archstones taken from the table on page 521, and uniform from key to spring, supposed to be filled up solid with masonry of 160 lbs. per cubic foot to a level of about 15 inches above the crown (including the stone paving of the roadway), with an extraneous load of 100 lbs. per square foot, the pressures will be approximately as follows:

Rise.	Span 100 Feet.				Span 200 Feet.			
	At Key.		At Spring.		At Key.		At Spring.	
	For 1 foot in width of its entire depth.	Per square foot.	For 1 foot in width of its entire depth.	Per square foot.	For 1 foot in width of its entire depth.	Per square foot.	For 1 foot in width of its entire depth.	Per square foot.
	Tons.	Tons.	Tons.	Tons.	Tons.	Tons.	Tons.	Tons.
$\frac{1}{6}$	42¼	13¾	58	18¾	126	29¼	179	42
$\frac{1}{5}$	36¾	12¼	57	19	112	27¼	181	44
$\frac{1}{4}$	31½	11	57½	20	97	24½	188	47½
$\frac{1}{3}$	25	9	61½	22½	80¼	21	207	54½
$\frac{1}{2}$	18	6¾	67½	25	57½	15½	230	61½

It will be seen that with the same span the pressure at the key becomes less, while that at the spring becomes greater, as the rise increases. Also, that when the archstones are of uniform depth, the pressure at either spring of a semicircular arch is about 4 times as great as at the key; whereas when the rise is but one-sixth of the span the pressure at spring averages but about one-third greater than at the key. These proportions vary somewhat in different spans.

The greater pressure per square foot at the springs may be reduced by increasing the depth of the archstones towards the springs. This, however, is not necessary in moderate spans, inasmuch as good stone will be safe even under this greater pressure.

Thickness of Arches.

Centre of pressure at every joint of arch and abutment should fall within centre third.

Thickness of arch at crown $= \sqrt{r \times B}$, where r is the longest radius of curvature at intrados; B, as deduced from practice, is as follows:—

	Feet.
Arch above ground standing solitary between abutments . . .	B = 0·12
Arch forming one of series of arches with piers between . . .	= 0·17
Underground archway in hard materials, such as rock or conglomerate	= 0·12
Underground archway in gravel or firm earth	= 0·27
Underground archway in wet clay or quicksand	= 0·48

Centering for Arches.

Centering is made of such stuff as is available. Fig. 170 shows what would be suitable for a 20 ft. arch of brick 2 ft. 3 ins. thick. The king post and struts might be of 2-in. stuff. The lagging is of 1½-in. plank, with centres 3 ft. apart; if 4 ft. to 5 ft. apart it should be of 2-in. plank. The struts are often placed at right angles to the arch, as shown in dotted lines.

In centering for *concrete arches* the lagging should be of narrow battens. 3 ins. to 4½ ins., laid close, the joints being run in with whiting and plaster of Paris. The following dimensions have been followed:—25 ft. 6 ins. span; centres were 2 ft. apart, of 9-in. × 1½-in. stuff; lagging

4½ ins. × 1½ in., a 9-in. × 3-in. plank cutting into four for lagging, into two for ribs. There were two lines of intermediate supports. For flat or prismoidal roof of concrete 2-in. or 3-in. sheeting was used, on centres of 3-in. stuff, 4 ft. to 6 ft. apart.

The centres rest by the ends of their chords upon wooden *striking* or *lowering wedges*, for striking or lowering the centre after the completion of the arch. These consist of pairs of wedge-shaped blocks, as W, W, fig. 171, of hard wood from 1 ft. to 2 ft. long, about half as wide, and a quarter or more as thick (sufficient to lower the centre from, say, 2 ins. to 6 ins. or more, according to span and other circumstances).

It is of the utmost importance, especially in large arches, that the *centres should be lowered very slowly*, otherwise the momentum acquired by so heavy a body as an arch descending suddenly, even but 2 ins. or 3 ins., might possibly affect its shape, or even its safety. For this reason the wedges should not have a taper steeper than about 1 in 6 or 8 for arches of less than about 50 ft. span, or than 1 in 8 or 10 for larger spans. Vertical lines at equal distances apart should be drawn on the long sides of the wedges, as a guide for lowering them all to the same extent at a time; and this should not exceed in all about half an inch a day in intervals of about an eighth of an inch for 50 ft. spans, or about ·1 to ·25 of an inch per day in all for spans over 100 ft. Slowness is especially to be recommended in *brick arches*, not only because their greater number of

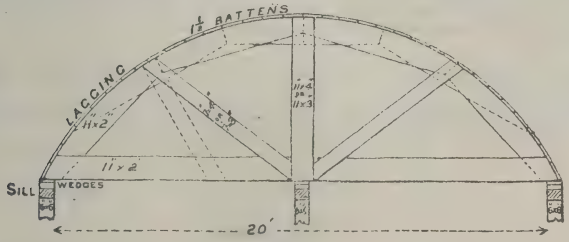


FIG. 170.

joints exposes them to greater derangement of shape, but because even good brick has much less than the average crushing-strength of good granite, limestone, or sandstone, and therefore is far more liable than they to crack, or even to crush, when the strains are thrown almost entirely upon their edges.

Easing and Striking Centres.—Much depends on temperature, mass of masonry or brickwork, composition of mortar, etc. With ordinary lime, centres should be eased while mortar is quite green, as soon as the arch is loaded to stability, and struck on an average after five to eight days. With small arches, one or two and a half bricks thick, 6 ft. to 8 ft. span, built in dry weather, the centres may be struck in three or four days. With slow-setting cement, if the arch be small and

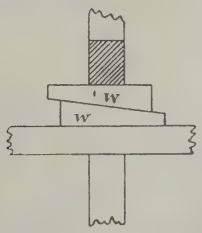


FIG. 171.

slight, so that it can be loaded to stability before the mortar of portion first commenced has set the centres may be eased, as with lime, but they may be struck sooner, and the limit may be taken as the time at which the joints would become too hard set to admit of being raked out for pointing without seriously injuring the brickwork. If, in consequence of the cement being strong and

quick-setting, or of the span or thickness of the arch being considerable, the arch cannot be completed before the portion first commenced has set, it is doubtful whether the centering should be eased at all, for fear of disturbing the setting of the cement. Centering for concrete should not be disturbed for at least fourteen days from the time of laying the concrete.

The main points to attend to are—to complete the arch to stability rapidly, and to prevent disturbance of the work while setting by traffic over it, or vibrations from adjoining work, otherwise the setting power, of cement specially, is destroyed.

PIERS.

Each should be calculated to resist the thrust when one of the arches it supports is covered with a travelling load, the other unloaded.

In a vertically-loaded arch ring, the thrust at the crown, and therefore the horizontal component of the thrust throughout the arch and against the piers, approximately = the total load per foot run × the radius of curvature of the centre line of the arch ring at the crown. The direction and amount of the resultant thrust against the piers are given by the load diagram corresponding to the line of resistance of minimum horizontal thrust, within the centre third of the arch ring.

Thickness of piers, generally from $\frac{1}{6}$ to $\frac{1}{8}$ span. Short piers have vertical sides; high piers may have side batter of $\frac{1}{12}$.

In viaducts and long bridges, 1 pier in every 5 or 6 may be thickened as an abutment pier, so that an accident to a part may not cause the destruction of the whole.

BRIDGES.

(Contributed by Reginald Ryves, M.Cons.E., Assoc.M.Inst.C.E.)

Superstructures.

The information given in the following tables respecting the strengths of various rolled sections is, as regards the larger scantlings, more particularly applicable to those cases in which simplicity in design is to be aimed at, in order, for instance, that erection and riveting-up may be easy, and the surfaces of the bridge parts convenient of access for painting. The tables give a sufficient number of values for the purposes of preliminary calculations of dead load, comparisons of the costs of girders or spans of different forms, and generally for approximate estimates. Since the lightest strut or joist is by no means always the most economical in the long run, the values for equal-sided angles as struts and for unequal-sided angles as beams, are given for considerable lengths. As regards struts the figures for light loadings on long diagonals are useful in calculating the strength of a tension member under the compression stress which might occur in the case of very unequal loading of the span, or during erection. In some cases, the two sets of values for channels as struts will show whether bracing is necessary.

An allowance for corrosion will, in some cases, be considered to be included in the factor of safety, but in the case of a bridge subjected to the effects of a corrosive atmosphere and those the painting of which is likely to be badly done, a definite allowance is sometimes made, and the thickness found necessary by calculation is increased in the actual design, the next thicker scantling being employed. For the calculation of tension in members, the cross-sectional area can quickly be found by dividing the weight per foot run of the scantling by the weight of a foot of 1-in. by 1-in. bar of the same material, for steel approximately 3·4 lbs. For tension members, a working stress of $7\frac{1}{2}$ tons per sq. in. is much used, somewhat higher values being sometimes employed in the case of very large spans. For some kinds of highway bridge girders a lower value is sometimes used, especially when there is no separate allowance for impact. For strut calculations the factor of safety is usually that involved in taking the actual load as a definite proportion of the crippling load. In this case the ultimate crushing strength of the material is a factor. Sometimes, however, the working load is calculated directly, and then some proportion of the ultimate strength of the material is employed. For some sections, especially for angles and tees, the formulæ in which the radius of gyration is used are more convenient than those in which the least dimension, or the overall dimension at right angles to a particular axis, is employed. (See formula for struts, p. 299.)

Strengths of Different Sections as Beams and as Struts.

Calculated by Fidler's formula for struts with fixed ends, assuming an ultimate strength of 60,000 lbs. per sq. in. and allowing a factor of safety of 5.

(Extracted from the Tables in Messrs. R. A. Skelton & Co.'s ' Structural Steel ' Handbook.)

British Standard Equal-Sided Angles.

Safe Loads as Struts; Fixed Ends.

Size in Inches.	Thickness in Inches.	Weight per Foot in Pounds.	Area of Cross-Section. Sq. Ins.	Safe Loads in Tons (struts) for least axis of Gyration. Length. 4 ft.	6 ft.	8 ft.	10 ft.	12 ft.	14 ft.
2 ×2	·300	3·77	1·11	3·0	1·6	—	—	—	—
2¼×2¼	·300	4·28	1·26	3·9	2·2	1·5	—	—	—
2½×2½	⅜	5·89	1·73	6·0	3·5	2·3	1·6	—	—
2½×2½	½	7·65	2·25	7·7	4·6	3·0	2·1	1·4	—
2¾×2¾	⅜	6·53	1·92	7·3	4·6	3·0	2·1	1·5	—
2¾×2¾	½	8·50	2·50	9·5	6·0	3·9	2·8	2·0	1·4
3 ×3	⅜	7·18	2·11	8·5	5·7	3·8	2·7	2·0	1·4
3 ×3	½	9·36	2·75	11·1	7·5	4·9	3·6	2·6	1·9
3½×3½	·425	9·50	2·80	12	9·0	6·4	4·6	3·5	2·7
3½×3½	½	11·1	3·25	15	11	8·0	5·7	4·4	3·4
4 ×4	·425	10·9	3·22	15	12	8·6	6·3	4·7	3·8
4 ×4	½	12·8	3·75	17	14	10	7·3	5·5	4·5
4½×4½	½	14·5	4·25	20	17	13	10	7·7	6·2
5 ×5	½	16·2	4·75	23	20	16	13	9·6	7·7
6 ×6	½	24·2	7·11	36	32	28	23	19	15

British Standard Channels as Struts.

Size in Inches. Width. Depth.	Weight per Foot run. Lbs.	Area of Cross Section. Sq. Ins.	Safe Loads in Tons (Struts). If liable to failure in either direction. Lengths. 6 ft.	8 ft.	10 ft.	12 ft.	If braced against failure in weaker direction. Lengths. 6 ft.	8 ft.	10 ft.	12 ft.	14 ft.	16 ft.
3 ×1½	5·27	1·55	—	-	—	—	7·02	6·14	5·01	4·08	—	—
3½×2	6·75	1·99	5·55	—	—	—	9·43	8·62	7·66	6·43	—	—
4 ×2	7·96	2·34	6·53	4·33	—	—	11·4	10·7	9·69	8·73	7·35	—
5 ×2½	11·0	3·23	11·3	8·14	—	—	16·4	15·6	14·7	13·6	12·5	—
6 ×2½	12·0	3·54	12·1	8·74	6·23	—	18·2	17·7	16·9	16·0	15·0	—
6 ×3	14·0	4·26	17·5	13·6	10·5	—	22·0	21·4	20·4	19·6	18·3	—
6 ×3	16·3	4·79	19·4	15·0	11·5	8·77	24·7	24·1	22·8	21·8	20·5	19·3
6 ×3½	17·9	5·27	23·1	19·8	15·7	12·4	27·3	26·5	25·2	24·2	22·7	21·3
7 ×3½	20·2	5·95	25·9	22·4	17·5	13·9	31·0	30·4	29·4	28·2	27·3	25·8
8 ×3½	22·7	6·68	28·9	24·7	19·1	15·2	35·0	34·4	33·8	32·5	31·5	30·5
8 ×4	25·7	7·59	34·7	30·7	25·4	21·0	39·7	39·0	38·5	37·0	35·5	34·7
9 ×4	28·6	8·40	38·6	34·0	27·9	23·0	44·2	43·6	43·0	42·2	40·7	39·5
10 ×4	30·2	8·87	—	35·4	28·9	23·8	46·7	46·3	45·7	45·1	43·8	42·6
11 ×4	33·2	9·77	—	39·0	31·9	25·9	51·5	51·2	50·6	50·0	49·3	47·8
12 ×4	36·5	10·7	—	42·1	34·2	27·6	56·4	56·3	55·6	55·0	54·5	53·2

British Standard Tees.

Safe Loads as Struts; fixed ends.

Size in Ins. Breadth. Height.	Thickness in Ins.	Weight per Ft. run.	Area of Cross Section.	Safe Loads in Tons (Struts). Lengths.					
		Lbs.	Sq. Ins.	4 ft.	6 ft.	8 ft.	10 ft.	12 ft.	14 ft.
2½ × 2½	5/16	5·00	1·47	5·2	3·2	2·1	1·5	—	—
2½ × 2½	3/8	5·92	1·74	6·2	3·8	2·5	1·7	—	—
3 × 2	3/8	5·93	1·74	7·5	5·5	3·8	2·8	2·1	—
3 × 2½	3/8	6·56	1·93	8·1	5·7	3·9	2·8	2·1	—
3 × 3	3/8	7·21	2·12	8·7	6·0	4·1	2·9	2·2	—
3 × 3	7/16	8·30	2·44	10	6·9	4·7	3·4	2·5	—
3½ × 3½	3/8	8·49	2·50	11	8·5	6·0	4·3	3·3	—
3½ × 3½	7/16	9·78	2 88	13	9·8	6·9	5·0	3·8	3·0
3½ × 3½	½	11·1	3·26	14	11	7·9	5·6	4·3	3·4
4 × 3	½	11·1	3·26	15	13	10	7·6	5·7	4·6
4 × 4	½	12·8	3·76	17	14	11	7·9	6·0	4·9
5 × 3	½	12·8	3·76	19	17	15	12	9·8	7·8
5 × 3½	½	13·7	4·02	20	18	16	13	10	8·2
5 × 4	½	14·5	4·27	21	19	16	13	10	8·3

British Standard Joists as Struts.

Size in Inches.	Weight per Foot run.	Area of Cross Section.	Safe Load in Tons. Length.			
	Lbs.	Sq. Ins.	6 ft.	8 ft.	10 ft.	12 ft.
3 × 3	8½	2·50	8·4	6·0	4·3	—
4 × 3	9½	2·80	9·0	6·2	4·8	—
5 × 3	11	3·24	10·0	7·1	5·1	—
7 × 4	16	4·7	18	14	11	8·1
9 × 4	21	6·18	24	18	13	10
6 × 5	25	7·35	33	29	23	19
10 × 5	30	8·82	39	33	26	21
12 × 5	32	9·41	40	34	27	21
15 × 5	42	12·4	52	42	34	26
12 × 6	44	12·9	61	55	48	40
15·6	59	17·3	81	73	63	52

British Standard Unequal Angles as Beams.

Safe Distributed Loads: Long Side Vertical.

Maximum working stress 7½ tons per square inch.

Size in Ins.	Thickness. Ins.	Weight per Ft. run. Lbs.	Distributed Load in Tons. Maximum Stress 7½ tons per square inch. 4 ft.	5 ft.	6 ft.	7 ft.	8 ft.	ft.
2 × 1½	·300	3·27	·34	·27	·22	—	—	—
2½ × 2	·300	4·28	·54	·44	·36	—	—	—
3 × 2	¼	4·04	·65	·52	·44	—	—	—
3 × 2	⅜	5·89	·95	·76	·63	·54	—	—
3½ × 2½	⅜	7·18	1·4	1·1	·91	·78	·68	—
3½ × 2½	½	9·36	1·8	1·4	1·2	1·0	·89	·79
4 × 2½	⅜	7·81	1·7	1·4	1·1	·99	·86	·77
4 × 2½	½	10·2	2·2	1·8	1·5	1·3	1·1	1·0
4 × 3	½	11·1	2·3	1·9	1·6	1·3	1·2	1·0
4½ × 3	½	11·9	2·9	2·3	1·9	1·7	1·5	1·3

Note on the Foregoing Tables.

The assumed ultimate strength of 60,000 lbs. per sq. in. is approximately 26·8 tons per sq. in. For an assumed ultimate strength of 70,000 lbs. per sq. in., or nearly 31·2 tons per sq. in., the values in the tables multiplied by $\frac{7}{6}$ would be approximately correct. Similarly, for a factor of safety of 4, multiply the values by $\frac{5}{4}$.

Waterway of Bridges.

The simplest cases of waterway calculation are those in which the conditions are such that the amount of heading up is not restricted. In these cases the limiting velocities which may be allowed decide the area of waterway which is necessary. Above the bridge the mean velocity of the stream will be reduced by the heading up.

It may be assumed that the water surface will fall to the original water level before it passes the piers, unless the channel of the river below the bridge has been altered. Taking the water level as the same, the new depth will be the same as the original depth, *plus* any lowering of the bed of the stream at the bridge site. The new width may be taken as the length of waterway. These two dimensions give the new area from which the new velocity can be calculated directly from the discharge or by

$$V_2 = V_1 \times \frac{d_1 l_1}{d_2 l_2}.$$

d_1 = original depth, d_2 = new depth.
l_1 = mean width of stream cross-section.
l_2 = length of waterway.

The new mean velocity is that to which the piers of the bridge are subjected, as well as the bed of the stream for a short distance below the bridge. This distance depends on the velocity and depth of the current. The limiting velocities can best be decided by a study of records of the behaviour of local strata and local masonry under similar conditions. The following figures provide a rough guide to the velocities usually allowed.

Limiting Velocities in Feet per Second.

On clay, 0·70 to 1·0; on sand which must not be disturbed (shallow foundations) 1·2 to 1·5; on firm, pebbly beds, 3·0 to 3·5; on stony or shingly beds, 4·0; on stratified rock, 6·0; on hard rock, 10·0.

For inferior brickwork, with better masonry in the cutwaters, and on the floor of the waterway at the feet of the cutwaters, about 5·0; better masonry, up to about 8 ft. per second. For ordinary pitching (floor) about 5·0. For very well-shaped bridge openings with thick piers allowing of easy curves, higher values may be allowed, and very high values may be permitted when the masonry is exceptionally strong, such as ashlar of hard stone with fine joints.

Waterway Calculations.

In selecting the formulæ given below, considerable use has been made of Col. H. D. Love's Manual on 'Hydraulics'; but the responsibility for the application of each formula and for the coefficients suggested rests with the author of the present article.

In the case of a bridge or culvert intended for the passage of flood waters which pool up on the upstream side, the discharge may usually be calculated without velocity of approach, especially when the water level on the downstream side is not much lower. This is an ordinary case where a railway embankment crosses land liable to flooding. The head is the difference between the water level below the opening and that above it, when the latter has reached its maximum. This may be a natural maximum, or one fixed by the discharge capacities of the bridges and culverts through the embankment. The amount of headway above this level, under the bridge floor, will depend upon what flotsam is carried by the water in floods.

The formula for discharge is:—

$$D = c\,A\,\sqrt{2gh}.$$

D = discharge in cubic feet per second (cusecs); A = area of opening in square feet up to the lower water level; h = head, or difference of water levels; g = 32·2 approx.; c is a coefficient depending partly upon the size of the opening, and partly upon its form, especially the curves of the cutwaters and wing walls. Ordinary values are in many cases 0·90; for large and well-designed openings, 0·92 to 0·95; for smaller openings, 0·85 to 0·90.

In the case of culverts through an embankment, or for bridges, for the maximum discharge before the embankment is overtopped, it may be necessary to know the discharge when the opening is drowned. If it is drowned on both sides the discharge is:—

$$D = c\,A\,\sqrt{2gh},$$

where h is the difference of water levels and c about 0·75 to 0·85, according to the form and size of the opening. Where the floor of the bridge presents a sharp edge a fairly low value should be taken and a fairly high value for well-shaped culverts.

When the upstream end is drowned and the downstream end is not drowned, the discharge is found by :—

$$D = c\,l\,\sqrt{2g}\left[\frac{2}{3}\left(h^{\frac{3}{2}} - h_2^{\frac{3}{2}}\right) + \left(h_1 - h\right)^{\frac{1}{2}}\right].$$

Where l = the width of the opening ; h = the difference in water levels ; h_1 = the head above the bottom of the opening ; h_2 = the head above the top of the opening ; c may be taken as 0·75 to 0·85. When the span is a long one and the waterway deep, a fairly high value may be given, but for a culvert the value may be taken as lower than that for the same culvert when wholly drowned.

In a considerable number of cases the waterway of the bridge is nearly as great as that of the stream, or quite as great when a single span clears the flood channel. Even with a considerable number of spans the bridge may obstruct the waterway very little if the piers are thin and are provided with good cutwaters and joinwaters. The velocity of approach may then be taken as v, the mean velocity of the stream, and the following relation will serve for preliminary calculations :

$$D = c\,A\,\sqrt{2g\,(h + h_a)}.$$

$h_a = \frac{v^2}{2g}$. $A = dl$ where l is the waterway of the bridge, and d the depth to the floor under the bridge. For sluggish streams h may be neglected, and for a stream with a sharp fall it may be taken as the fall in a length measured about $\frac{2}{3}$ that of the piers. This equation, so used, may be useful in preliminary calculations ; where, for instance, the mean velocity of the stream is measured, but not its cross-sectional area, or where the discharge has been separately found. In the case of a sluggish stream it may be possible to fix the value of d, approximately.

Calculations involving Afflux.

Where the actual fall is small, as in most large rivers, and where the bridge considerably impedes the river, the total head driving the water through the opening is usually calculated as : $(x + h_a)$, where x = the afflux and h_a = head equivalent to the velocity of approach. The discharge is then :

$$D = c\,A\,\sqrt{2g\,(x + h_a)}.$$

A = the smallest cross-sectional area of the waterway under the bridge, usually taken as that given by a water surface at the original water level :

$$x = \frac{v^2}{2g}\left(\frac{l^2}{c^2 {l_1}^2} - \frac{d^2}{(d + x)^2}\right).$$

l = the mean width of the stream ; d = mean depth of the stream below the bridge ; l_1 = the total width of waterway in the bridge openings ; c = coefficient of contraction, say 0·9 to 0·95 for large bridge openings and about 0·85 for small openings with only moderately good cutwaters and wing walls.

First insert the following provisional value of x in the right-hand side of the above equation.

$$x\ (\text{provisional}) = \frac{v^2}{2g}\left(\frac{1{\cdot}1\,l^2}{{l_1}^2} - 1\right).$$

This gives a new value of x.

Repeat the solution of the longer equation with the new value of x on the right-hand side.

Next, to find h_a.

The head is calculated as that at one place, due to afflux and velocity of approach, and the velocity of approach is, therefore, the new reduced velocity of the deepened stream above the bridges, thus :

$$v_a = \frac{d}{d + x}\,v, \text{ and } h_a = \frac{{v_a}^2}{2g}.$$

We can then use the equation :

$$D = c\,A\,\sqrt{2\,g\,(x + h_a)}.$$

If the length of the waterway is only estimated at first, within limits, take a probable value and having found x, find l_1 by the equation :

$$l_1 = \frac{vl\,(d + x)}{c\,\sqrt{[2gx\,(d + x)^2 + v^2 d^2]}}.$$

In some cases x will be decided by the maximum water level which may be allowed, and the value so found will be used in the equations.

Discharge through Long Culverts.

The foregoing formulæ for discharge are suitable for short culverts, and for fairly long culverts when the velocities are low. For long culverts and for high velocities the head necessary to carry the water through the barrel regarded as a pipe must be added. The heads may be found by a pipe discharge formula, or, for small diameter culverts, may be taken from the tables (see

'Waterworks'). As it is often very economical to pass water through culverts at fairly high velocities, the point is of some importance.

Loads on Bridge Foundations.

CYLINDER BRIDGE PIERS. APPROXIMATE SAFE LOADS PER SQUARE FOOT (*J. Newman*).

	Tons per Sq. Ft.
Firm sand in estuaries and bays	5·0 to 5·6
Considered safe on firm sand (in Holland)	6·0
Very firm, compact sand, foundations at depths not less than 20 ft.	6·7 to 7·8
Firm shale and clean gravel	6·7 to 8·9
Compact gravel	7·8 to 10·0

Calculated loadings (neglecting friction), tons per square foot: Benares bridge, 11·19; Jubilee bridge, 9; Gorai bridge, 8·5 (all deep foundations); Blackfriars bridge, 4·75; Rupnarayan bridge, 6·7 (or, assuming skin friction as 5 cwts. per square foot, the loading on the base of the pier is about 4·5 tons per square foot).

CLYDE BRIDGE, CALEDONIAN RAILWAY.

Caissons 48 to 89 ft. long and 20 to 23 ft. wide:

Land Piers.—Distances from river-bed about 50 and 60 ft.; depths below level of river-bed about 20 and 30 ft. Depths below quay level and loadings, 50 ft., 4·12 tons per sq. ft.; 61 ft., 4·73 tons; 57 ft., 4·75 tons.

River Piers.—Depths below river bed and loadings: 44 ft., 5·66 tons per sq. ft.; 44 ft., 5·96 tons; 48 ft., 6·04 tons; 44 ft., 6·12 tons.

SKIN FRICTION ON BRIDGE FOUNDATIONS.
(Caissons and 'Wells' or 'Cylinders.')
Foundations of the Empress Bridge over the Sutlej.

Brick Cylinders, 19 Ft. in diameter, sunk on an average 110 Ft.	Skin Friction. Cwts. per Sq. Ft.		
	Mean.	Max.	Min.
Average of 36 cylinders sunk to depths varying from 10 to 27 ft., average 19 ft., under their own weight only, 25½ to 33 tons, average 31 tons.	0·85	1·33	0·63
Average of 100 observations in sinking 36 cylinders, at depths from 17 to 64 ft., loads 31 to 249 tons, average 132 tons besides the weight of the cylinders.	2·13	4·08	1·29
Average of 9 observations in sinking 3 cylinders by pneumatic process at depths varying from 44 ft. to 63 ft.	2·71	3·52	2·32

Papaghni Bridge.—Cast-iron cylinders 12 ft. in diameter and brick cylinders of the same diameter. The following frictional resistances were noted when sinking the piers; cwts. per sq. ft. In the upper sand 2·08 to 2·20; in black clay, 3·50 to 5·60; in silt below the clay, 2·72 to 4·28; in the lower sand, 2·58 to 3·16.

Chittravati Bridge.—Friction through 33 ft. of sand, 10 ft. of clay, and 7 ft. of clay, sand, and boulders—2·32 to 3·77 cwts. per sq. ft. Friction through 33 ft. of sand, 10 ft. of clay, and 3 ft. of sand and clay—2·93 to 3·62 cwts. per sq. ft.

Tavy and Laira Bridges, Devonshire.—2·0 to 2·8 cwts. in mud.

Concrete Cylinders at Haulbowline Dockyard (H. E. Oakley).—Twenty-three cylinders, 8 ft. in diameter, were sunk through silt. The average skin friction for a cylinder varied from 4·2 to 8·6, the mean being 5·9. In only three cases was the average for a cylinder less than 5·2 cwt. per sq. ft. In seven cases the maximum resistance recorded exceeded 9 cwts. per sq. ft.

Caissons of Barnes Railway Bridge.—The caissons are 28 ft. by 18 ft. The skin friction in London clay was 2·03 cwts. for one, and 2·95 cwts. for the other, per sq. ft.

A Shaft sunk at Oxford Circus, London.—Skin friction only 1·0 cwt. per sq. ft. The low value being attributed to (1) the cylinder keeping its shape very well; (2) being kept very upright; and (3) a pocket being formed below the cutting edge and pugged clay inserted.

A Shaft sunk at Greenwich.—In sand and ballast, skin friction 4 to 4½ cwts.; in shelly clay, 6 cwts. per sq. ft.

UNIT LOADS ON BRIDGE MATERIALS.

Clyde Bridge, Caledonian Railway (D. A. Matheson).—Loads adopted as standards, tons per sq. ft.: concrete in foundations, 7; concrete in walls, 8; red brickwork in cement, 10; blue brickwork in cement, 15; freestone square rubble masonry in cement, 8; freestone ashlar masonry in cement, 15; granite ashlar masonry in cement, 25; freestone ashlar bearing blocks, 12; granolithic bearing blocks, 12; granite ashlar bearing blocks, 20.

Impact.

There is no general agreement among engineers as regards allowances for impact. Such allowances depend upon the span in relation to the size of the loads producing the effects considered under the head of impact; for instance, the length of the span in relation to a train or to a tramcar. They also depend upon the proportion of live load (impact load) to dead load. Another factor is speed. A traction engine may not demand so great an allowance as a motor van. No attempt will be made here to give general rules, but the following formula indicates one method :—

$$I = c\left(\frac{l}{l+d}\right) \quad \text{(Schaub)}$$

Where l=live load ; d=dead load ; c=a coefficient : about 0·75 for train loads, 0·30 for a rolling load of 20 tons on a highway bridge, 0·15 for a crowd load of 100 lbs. per sq. ft. ; I=impact allowance expressed as a proportion of the live load—to be added.

(See also under ' Railways,' page 550.)

Some of the formulæ used may be applied separately to the cross girders and decking.

For highway bridges, allowances such as 20 per cent. to 40 per cent. of the load causing impact effects are sometimes allowed to meet modern traffic conditions; some allowance should be made in the case of a girder span, and small allowances for other spans when the dead load is not very great compared with the live load.

Life of Timber Bridges.

Life of neglected Timber Bridges in New South Wales : Renewed between 1896 and 1902 (*H. H. Dare*).

Truss Bridges.—Life not exceeding 20 years, 7 (19 per cent.) ; 20 to 25 years, 13 (36 per cent.) ; 25 to 30 years, 6 (17 per cent.) ; exceeding 30 years, 10 (28 per cent.).

Beam Bridges.—Life not exceeding 20 years, 24 (25 per cent.) ; 20 to 25 years, 31 (33 per cent.) ; 25 to 30 years, 11 (12 per cent.) ; exceeding 30 years, 28 (30 per cent.).

Life of Timber Bridges, United States.—' All over the eastern part of the U.S.A. there are to be found timber truss bridges of the Burr & Howe types, which are even now safely carrying traffic after 50, 60 and even 100 years of constant use.' (Editorial in *Engineering News.*)

SECTION XII

RAILWAYS

(With contributions by the Engineers and Carriage Superintendents of the principal British Railway Companies)

PART I

PERMANENT WAY

RAILS — BOLTS AND SPIKES — CHAIRS — SLEEPERS — ARRANGEMENT OF PERMANENT WAY — GAUGES — BRIDGES — NARROW-GAUGE RAILWAYS — TUNNELS — RESISTANCES—CROSSINGS—CURVES . . . (pp. 533-566)

PART II

LOCOMOTIVES AND ROLLING STOCK

(Revised by H. Holcroft, M.I.Loco.E.)

LOCOMOTIVES—STEAM MOTOR CARS—CARRIAGES AND WAGGONS—LIGHTING AND HEATING RAILWAY CARRIAGES—BRAKES . . . . . (pp. 567-636)

PART III

SIGNALS

PNEUMATIC SIGNALS—ELECTRIC SIGNALS . (pp. 637-652)


(Revised by H. Raynar Wilson)

PART IV

COST OF RAILWAYS—BOARD OF TRADE REGULATIONS—RAILWAY BILLS . . . . . (pp. 653-664)


'Flexible Metallic Tubing'

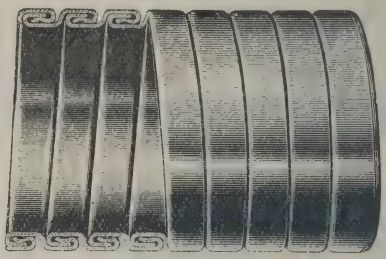FOR HIGHEST STEAM PRESSURE.



FOR GAS, OILS, PETROLEUM, VACUUM CLEANING, etc.

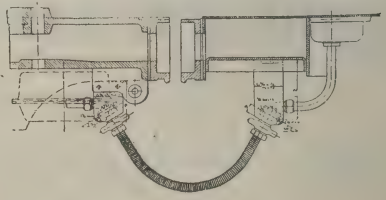'ENTIRELY METAL.' The only Flexible Hose which resists the Heat of High Pressure Steam and the action of Oil.



Specialité, Flexible Metallic Loco Feed Water Pipes being entirely metallic, are most economical for this purpose.

THE UNITED FLEXIBLE METALLIC TUBING CO. Ltd.,

112 QUEEN VICTORIA ST., LONDON, E.C. 4.

Works: PONDERS END, MIDDLESEX.

SECTION XII

PART I

PERMANENT WAY.

RAILS — BOLTS AND SPIKES — CHAIRS — SLEEPERS — ARRANGEMENT OF PERMANENT WAY — GAUGES — BRIDGES — NARROW-GAUGE RAILWAYS — TUNNELS — RESISTANCES—CROSSINGS—CURVES.

RAILWAYS.

RAILS.

There are two descriptions of rails in general use—viz. the ' Bull-headed Rail,' and the ' Flat Bottomed ' or ' Flanged Rail.'

Steel rails have superseded those of iron.

Dimensions of Rails Used on British Railways.

The standard rails of leading English railways are as follows: (1) Midland Railway, 100 lbs. per yard, 45 ft. long; (2) Great Western Railway, 97½ lbs., 30 ft.; (3) Great Northern Railway, 96 lbs.; (4) Great Central Railway, 96 lbs., 36 ft., and 86 lbs., 30 ft. long; (5) London and North Western Railway, 95 lbs., 60 ft.; (6) North Eastern Railway, 90 lbs., 30 ft.; (7) London and South Western Railway, 90 lbs.; (8) Lancashire and Yorkshire Railway, 86 lbs.; (9) Great Eastern Railway, 85 lbs. All of these are of the bull-head section, supported in heavy cast-iron chairs, to which they are secured by wooden wedges (or sometimes wedges of coiled steel). The chairs are fastened to the ties by round spikes and wooden spikes or trenails, through bolts being occasionally used.

BRITISH STANDARD SPECIFICATION AND SECTIONS OF BULL-HEAD RAILWAY RAILS.*

(No. 9—1909.) (*Abstract.*)

1. The steel for the rails shall be of the best quality made by the Bessemer, Siemens-Martin, or other process, to be approved by the engineer (or by the purchaser).

The rails shall show on analysis that in chemical composition they conform to the following limits:—

Carbon . from . .	0·35 to 0·5 per cent.	Phosphorus not to exceed .	0·075 per cent.
Manganese „ . .	0·7 to 1·0 „	Sulphur „ „ .	0·08 „
Silicon . not to exceed	0·1 „		

3. Each rail shall be made from an ingot not less than 12 ins. square at the smaller and 14 ins square at the larger end, and must be cogged down into blooms, and sufficient crop then sheared from each end to ensure soundness.

4. A rolling margin of ½ per cent. under to ½ per cent. above the calculated weight will be permitted, but the calculated weight only will be paid for.

* By permission of the British Engineering Standards Association

5. Table of General Dimensions of 'B.S.' Bull-Head Rails.

No of 'B.S.' Section.	Height of Rail.	Width of Head.	Calculated Weight of Rail.	No. of 'B.S.' Section.	Height of Rail.	Width of Head.	Calculated Weight of Rail.
Lbs. per yd. (nominal).	Ins.	Ins.	Lbs. per yd.	Lbs. per yd. (nominal).	Ins.	Ins.	Lbs. per yd.
60	$4\frac{3}{4}$	$2\frac{5}{16}$	59·79	85	$5\frac{1}{16}$	$2\frac{1}{16}$	84·88
65	$4\frac{7}{8}$	$2\frac{3}{8}$	64·58	90	$5\frac{3}{16}$	$2\frac{1}{8}$	89·77
70	5	$2\frac{7}{16}$	70·13	95	$5\frac{5}{16}$	$2\frac{1}{8}$	94·59
75	$5\frac{1}{8}$	$2\frac{1}{2}$	74·36	100	$5\frac{7}{16}$	$2\frac{1}{4}$	99·84
80	$5\frac{3}{8}$	$2\frac{9}{16}$	79·49				

8. The whole of the rails shall be of uniform section throughout, true to templates, perfectly sound and straight, and free from splits, cracks, burrs, and defects of every kind.

9. A quantity of short lengths will be taken in such lengths and quantities as may be ordered by the engineer (or by the purchaser), provided that these short lengths are cut down from longer lengths found to be defective at the ends only, and that the total quantity taken does not exceed $7\frac{1}{2}$ per cent. of the contract.

N.B.—The Committee recommend the adoption of the following as the normal lengths of rails, viz. 30 ft., 36 ft., 45 ft., or 60 ft.

10. The rails shall be the specified length at a temperature of 60°F. No rail will be accepted which is more than three-sixteenths of an inch above or below the length specified, whether for straight or curved line.

13. The brand shall be rolled on the web of the rail to show that the rail is of British Standard Section and made under the conditions of this specification.

14. From each cast one rail shall be selected by the representative of the engineer (or of the purchaser). From this a piece 5 ft. long shall be cut which shall be placed in a horizontal position with the bull head uppermost upon two iron or steel supports resting on a solid foundation, and placed so that their centres are 3 ft. 6 ins. apart, the upper surfaces of the supports being curved to a radius of 3 ins. The test shall comprise two blows delivered midway between the bearings from a falling iron weight of 2,240 lbs., the striking face of which shall be rounded to a radius of not more than 5 ins. The height of drop for the various sections of rails shall be as tabulated below. The blows must be sustained without fracture and the rail must show a deflection between the limits given below.

Tests of British Standard Bull-Head Rails.

No. of 'B.S.' Section and Nominal Weight of Rails per Yard.	Falling Weight Test.					
	1st Blow.			2nd Blow.		
	Drop	Deflection.		Drop	Deflection.	
		From	To		From	To
Lbs.	Ft.	In.	Ins.	Ft.	Ins.	Ins.
60	5	1	$1\frac{5}{16}$	10	3	$3\frac{3}{4}$
65	5	1	$1\frac{1}{2}$	12	3	$3\frac{3}{4}$
70	6	1	$1\frac{5}{16}$	12	3	$3\frac{3}{4}$
75	6	1	$1\frac{5}{16}$	12	3	$3\frac{3}{4}$
80	6	$\frac{7}{8}$	$1\frac{3}{16}$	15	3	4
85	6	$\frac{7}{8}$	$1\frac{3}{16}$	15	3	4
90	7	$\frac{7}{8}$	$1\frac{1}{4}$	20	3	$4\frac{1}{4}$
95	7	$\frac{7}{8}$	$1\frac{3}{16}$	20	3	$4\frac{1}{4}$
100	7	$\frac{7}{8}$	$1\frac{3}{16}$	20	3	$4\frac{1}{4}$

Should the length cut from the selected rail fail to comply with the test specified for its weight, two other rails from the same cast will be selected and similar lengths cut and tested, and the acceptance or rejection of the cast will be decided by the result of the three tests, so that if two of the rails selected fail to comply with the test the entire cast will be rejected.

15. From each 100 tons of rails the manufacturer shall (if required by the representative of the engineer or of the purchaser) cut a test piece from any rail selected as a sample rail; such test piece to be stamped to correspond with the sample rail. It shall then be placed in a testing machine of approved pattern, and shall show an ultimate tensile strength equivalent to not less than 40 tons per square inch, nor more than 48 tons per square inch, with an elongation of not less than 15 per cent. upon the Standard Test Pieces.

Telegrams:
'SUMMERSON,
DARLINGTON.'

Telephone Nos.:
2660
2669

THOMAS SUMMERSON & SONS LTD.

ENGINEERS AND
IRON AND STEEL FOUNDERS

DARLINGTON

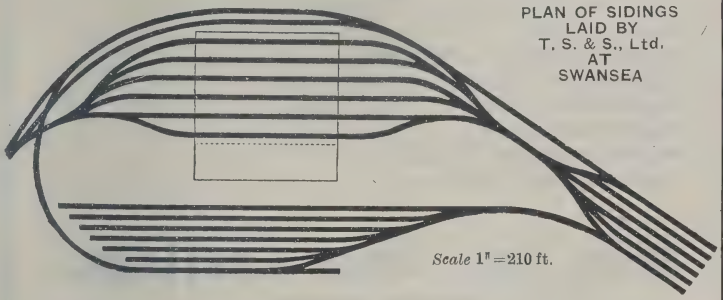
LONDON OFFICE

32 VICTORIA STREET,
S.W. 1

RAILWAY SIDINGS

SUPPLIED COMPLETE, INCLUDING PLATELAYING

Viewing of Sites, Preparation of Plans and Estimates of Cost



This Company has a unique practical experience in railroad work and was founded by the late Thomas Summerson, Esq., who, when engaged in operations connected with the original Stockton and Darlington Railway designed and worked out the satisfactory application of the first set of switches and crossings made from rails. Upwards of eighty years of practical experience in all parts of the world has vested the technical staff of the company with an intimate progressive knowledge of most suitable railroad practice, and this accumulated information is placed unreservedly at the service of all interested.

SEE NEXT PAGE

Telegrams:
'SUMMERSON,
DARLINGTON.'

Telephone Nos:
2660
2669.

THOMAS SUMMERSON & SONS LTD.

ENGINEERS AND
IRON AND STEEL FOUNDERS

DARLINGTON

LONDON OFFICE — 32 VICTORIA STREET, S.W. 1.

RAIL-ROAD ACCESSORIES

SWITCHES AND CROSSINGS in all sections of rails, to all specifications.
LIGHT TRACK, Colliery and bar turns.
SWITCH LEVERS of all kinds. Rods, Cranks, Gauge Ties, etc.
FISH PLATES, plain and junction.
FISH BOLTS.
CHAIRS AND FASTENINGS of all kinds.
SLEEPERS, wood and steel.
BUFFER STOPS and wheel stops.
TURNTABLES.
PLATELAYERS' TOOLS.
RE-RAILING RAMPS.

Iron and Steel Castings.

This Company has a unique practical experience in railroad work and was founded by the late Thomas Summerson, Esq., who, when engaged in operations connected with the original Stockton and Darlington Railway designed and worked out the satisfactory application of the first set of switches and crossings made from rails.

Upwards of eighty years of practical experience in all parts of the world has vested the technical staff of the Company with an intimate progressive knowledge of most suitable railroad practice, and this accumulated information is placed unreservedly at the service of all interested.

SEE PREVIOUS PAGE

British Standard Sections, Bull-Head Rails.

100-lb. Rail.

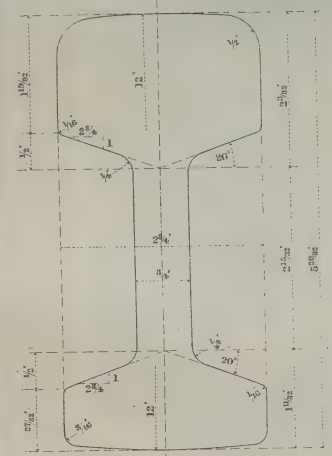


Fig. 560.

80-lb. Rail.

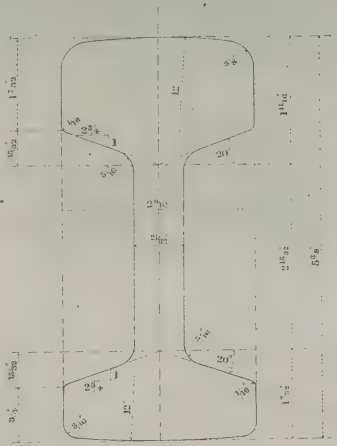


Fig. 561.
$\frac{7}{16}$ths Scale.

60-lb. Rail.

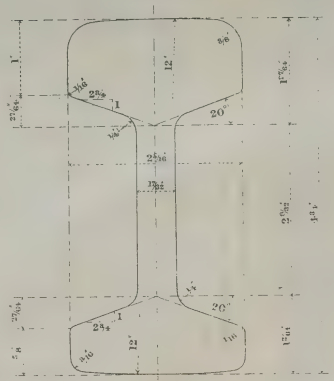


Fig. 562.

16. The holes for fishbolts must be drilled through the web from the solid at each end of the rails, of the sizes and in the position shown on the drawing attached to the specification or to a drawing to be supplied by the engineer (or the purchaser). These holes must be clean and square with the web, without burrs on either side, and will be checked with the gauges to be furnished to the manufacturer by the engineer (or by the purchaser). Should any of the holes vary from the correct size or position more than one-thirty second of an inch the rails in question will be liable to rejection.

TABLE OF DIMENSIONS OF BRITISH STANDARD BULL-HEAD RAILS. SHOWING AREAS OF HEAD, WEB AND FLANGE.

'B.S.' No. and Nominal Weight per yard.	Head.		Web.		Flange.		Whole Rail.			'B.S.' No. and Nominal Weight per yard.
	Actual Area.	Per cent.	Actual Area.	Per cent.	Actual Area.	Per cent.	Actual Area.	Theoretical Area.	Calculated Weight per yard.	
Lbs.	Sq. Ins.		Sq. Ins.		Sq. Ins.		Sq. Ins.	Sq. Ins.	Lbs.	Lbs.
60	2·7102	46·4	1·2860	21·8	1·8728	31·8	5·8690	5·8810	59·79	60
65	2·9549	46·6	1·3635	21·5	2·0200	31·9	6·3384	6·3711	64·58	65
70	3·2060	46·7	1·4540	20·7	2·2235	32·6	6·8835	6·8611	70·13	70
75	3·4281	46·8	1·5322	20·8	2·3581	32·4	7·3184	7·3512	74·56	75
80	3·6170	46·4	1·7338	22·1	2·4517	31·5	7·8025	7·8413	79·49	80
85	3·8970	46·78	1·8054	21·67	2·6287	31·55	8·3311	8·3314	84·88	85
90	4·0521	45·99	1·9651	22·30	2·7942	31·71	8·8113	8·8215	89·77	90
95	4·3958	47·35	1·9651	21·17	2·9231	31·48	9·2840	9·3115	94·59	95
100	4·9114	50·12	1·9651	20·05	2·9231	29·83	9·7996	9·8016	99·84	100

Figs. 560, 561, and 562 show the dimensions of 100-lb., 80-lb. and 60-lb. bull-head rails, respectively.

FLAT-BOTTOMED OR FLANGED RAILS.

This form of rail is largely used in India, in the Colonies, and in America.

BRITISH STANDARD SPECIFICATION AND SECTIONS OF FLAT-BOTTOM RAILWAY RAILS.*

(No. 11—1909.) (*Abstract.*)

The general tests are the same as those for bull-head rails.

TABLE OF GENERAL DIMENSIONS OF 'B. S.' FLAT-BOTTOM RAILS.


No. of 'B.S.' Section.	Height of Rail.	Width of Head.	Nominal Weight of Rail.
	Ins.	Ins.	Lbs. per Yard.
20	$2\frac{1}{2}$	$1\frac{3}{8}$	20
25	$2\frac{3}{4}$	$1\frac{1}{2}$	25
30	3	$1\frac{5}{8}$	30
35	$3\frac{1}{4}$	$1\frac{3}{4}$	35
40	$3\frac{1}{2}$	$1\frac{7}{8}$	40
45	$3\frac{3}{4}$	$1\frac{21}{32}$	45
50	$3\frac{15}{16}$	$2\frac{1}{16}$	50
55	$4\frac{1}{8}$	$2\frac{13}{32}$	55
60	$4\frac{5}{16}$	$2\frac{1}{4}$	60
65	$4\frac{7}{16}$	$3\frac{5}{16}$	65
70	$4\frac{5}{8}$	$2\frac{3}{8}$	70
75	$4\frac{13}{16}$	$2\frac{7}{16}$	75
80	5	$2\frac{1}{2}$	80
85	$5\frac{3}{16}$	$2\frac{9}{16}$	85
90	$5\frac{3}{8}$	$2\frac{5}{8}$	90
95	$5\frac{5}{16}$	$2\frac{11}{16}$	95
100	$5\frac{3}{4}$	$2\frac{3}{4}$	100

* By permission of the British Engineering Standards Association.

THE RAILWAY & GENERAL ENGINEERING CO. LTD., NOTTINGHAM.

ON ADMIRALTY AND WAR OFFICE LISTS

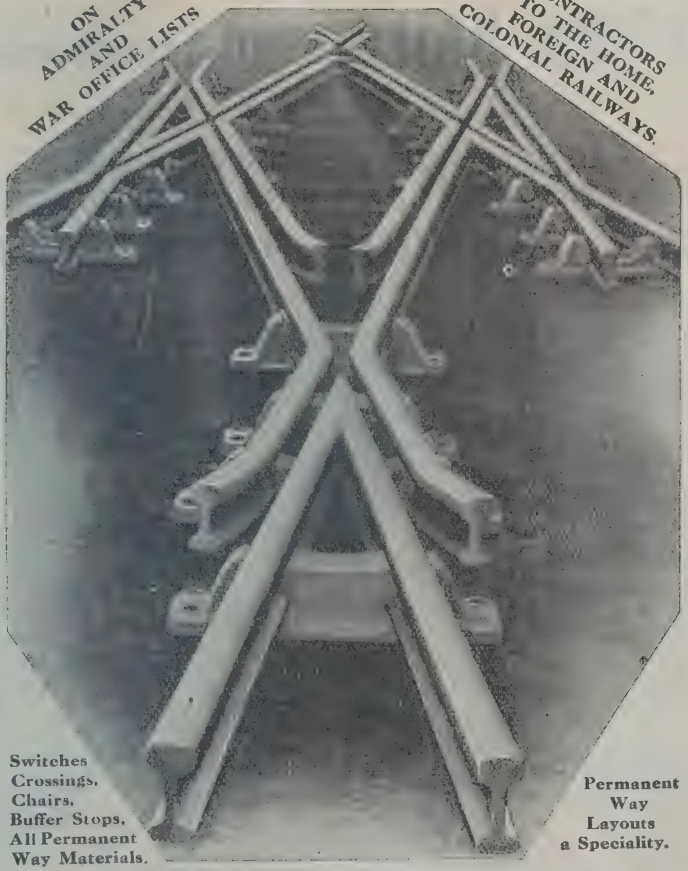CONTRACTORS TO THE HOME, FOREIGN AND COLONIAL RAILWAYS.



Switches
Crossings.
Chairs.
Buffer Stops.
All Permanent Way Materials.

Permanent Way Layouts a Speciality.

STRUCTURAL IRON AND STEEL WORK,
COLLIERY PLANT, BRASS AND IRON FOUNDERS,
IRON CASTINGS UP TO 20 TONS.

R. WHITE & SONS

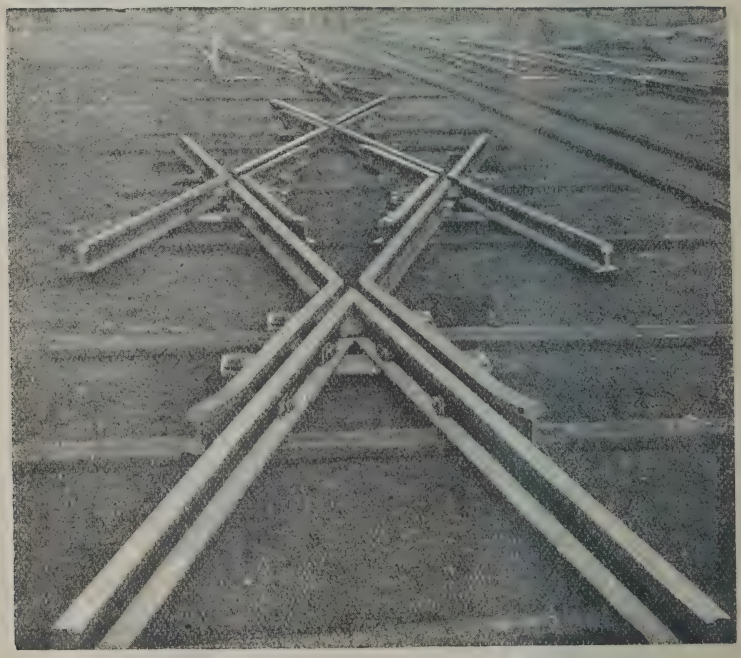
WIDNES, England.

STEEL RAILS & all Accessories

Makers of

RAILWAY POINTS AND CROSSINGS, TURNTABLES, TIPWAGONS, STOP-BLOCKS,

AERIAL WIRE ROPEWAYS



DIAMOND CROSSOVER, laid out in our Yard for Inspection.

F. 537

British Standard Sections, Flat-Bottom Rails.

100-lb. Rail.

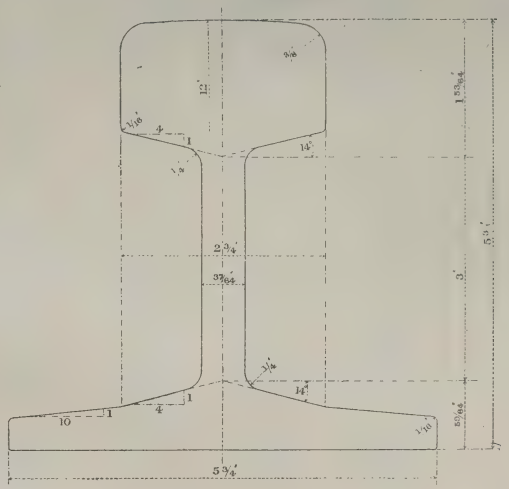


Fig. 563.

20-lb. Rail.

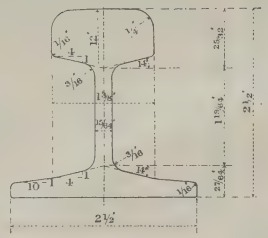


Fig. 564.

$\frac{7}{16}$ths Scale.

TESTS OF BRITISH STANDARD FLAT-BOTTOM RAILS.

Weight of Rails per yard.	Falling Weight Test.		
	Weight of Tup.	Centres of Bearings.	Drop.
Lbs.	Cwts.	Ft.	Ft.
20	5	3	8
25	5	3	9
30	10	3	10
35	10	3	12½
40	10	3	15
45	15	3	15
50	15	3	15
55	15	3	17½
60	20	3	20
65	20	3	20
70	20	3½	20
75	20	3½	20
80	20	3½	22
85	20	3½	24
90	20	3½	26
95	20	3½	28
100	20	3½	30

Figs. 563 and 564 show the dimensions of 100-lb. and 20-lb. flat-bottom rails respectively.

A Standard Specification for Light Flat-Bottom Railway Rails (10 to 20 lbs. per yard) and Fish Plates, is given in Report No. 104—1919.

Specification for Bolts, Nuts, Screws, and Spikes.

(LONDON AND NORTH WESTERN RAILWAY.)

Specification for Steel Bolts and Nuts.

The steel from which the bolts and nuts are made is to have a tensile strength of not less than 36 tons per square inch, with an ultimate extension of not less than 20 per cent. upon 10-inch lengths. The heads are to be worked out of the solid, and not welded on, and are to be stamped with the letter 'S,' as approved by the engineer. The heads and nuts are to be at right angles with the centre line of the bolts, and central with the shank, which must be perfectly straight. They must be screwed to Whitworth's standard, and the threads must be clean and smooth.

Specification for Galvanised Steel Screws for Rail Chairs.

The steel from which the screws are made is to have a tensile strength of not less than 36 tons per square inch, with an ultimate extension of not less than 20 per cent. upon 10-inch lengths. The heads are to be worked out of the solid, and not welded on, and are to be at right angles with the centre line of the screws, and central with the shank, which must be perfectly straight. Each screw is to have a deposit of zinc of not less than 180 grs. smoothly and uniformly distributed all over.

Specification for Steel Spikes.

The steel from which the spikes are made is to have a tensile strength of not less than 36 tons per square inch, with an ultimate extension of not less than 20 per cent. upon 10-inch lengths. The heads are to be worked out of the solid, and not welded on, and are to be at right angles with the centre line of the spikes and central with the shank, which must be perfectly straight. The heads are to be stamped with the letter 'S,' as approved by the engineer.

Sleepers.

These are usually made of Baltic red timber, and measure 9 ft. long, 10 ins. wide, and 5 ins. deep; at the joints the width is 12 ins. Each load of 50 cubic feet should be impregnated with from 40 to 50 gallons of creosote, equal to from 2½ to 3 gallons per sleeper.

Plugged sleepers have been used with marked success in large numbers by Chief Engineer Fredericia, of the Danish State Railway. A plain 1½-in. cylindrical creosoted plug of beech or birch is driven tight in a 1½-in. hole bored in the sleeper, and the spike is driven in a hole bored in this plug. Worn-out sleepers plugged in this way have been found to give good service, as the rail seems to be held down with exceptional firmness and deterioration due to the pounding of loose rails is prevented.

LONDON AND NORTH WESTERN RAILWAY
DETAILS OF PERMANENT WAY.
General Arrangement.


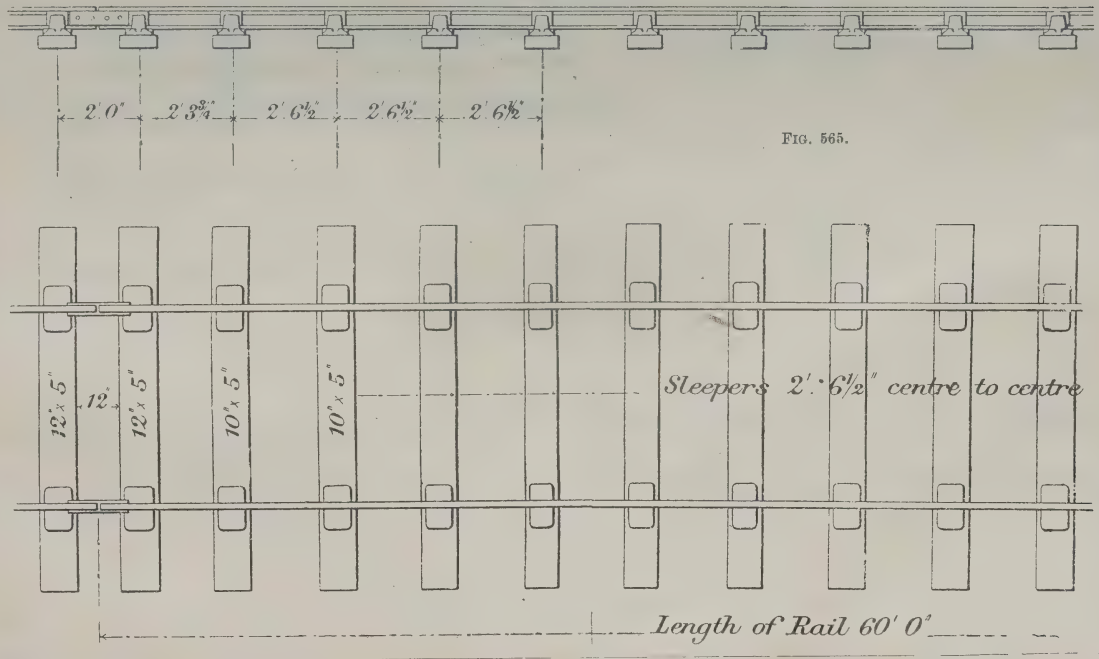


FIG. 565.

LONDON AND NORTH WESTERN RAILWAY.


DETAILS OF PERMANENT WAY.

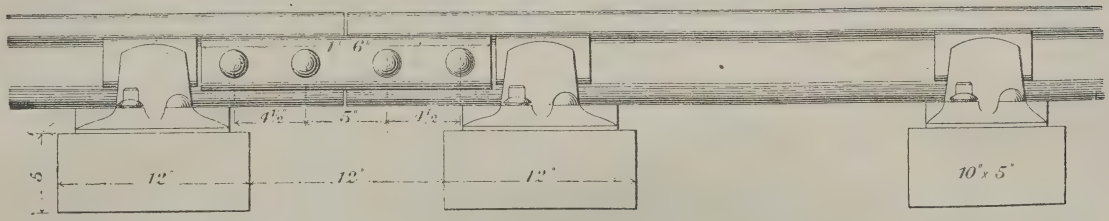Rail Joints.



GENERAL ELEVATION OF JOINT


FIG. 566.



ELEVATION SHOWING HOLES IN RAIL

ELEVATION SHOWING HOLES IN FISHPLATE

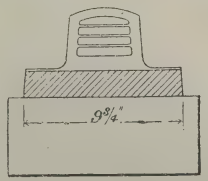FIG. 567.



SECTION OF JOINT CHAIR

WEIGHT 54 LBS.

FIG. 568.

LONDON AND NORTH WESTERN RAILWAY.

DETAILS OF PERMANENT WAY

Rail Setting.


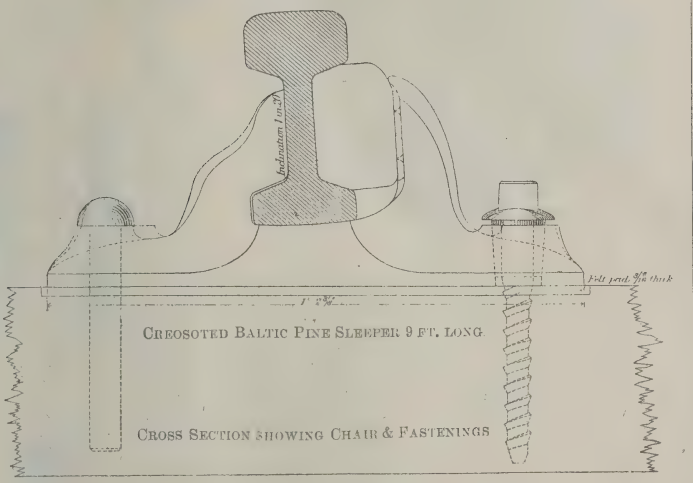


FIG. 569.

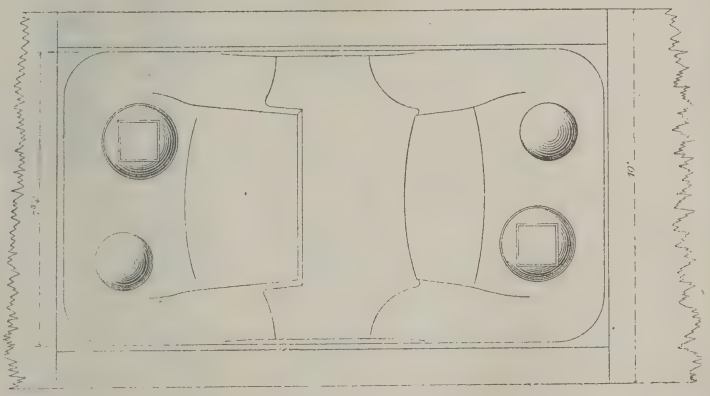


PLAN OF INTERMEDIATE CHAIR

(Rail and Key removed)


Weight 45 lbs.

FIG. 570.

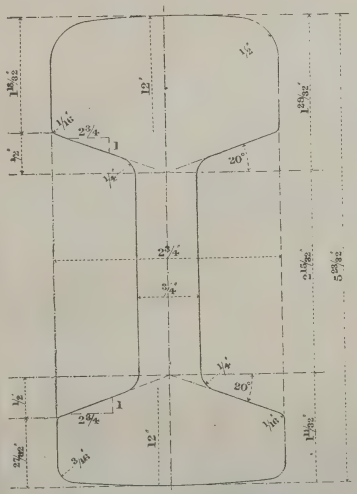
B.S. Rail Sections.



95 lbs. per yard. For Main Lines.

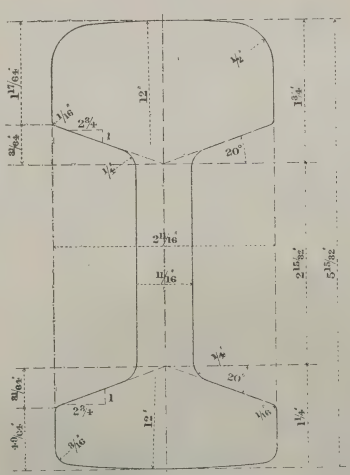

85 lbs. per yard. For Branch Lines.

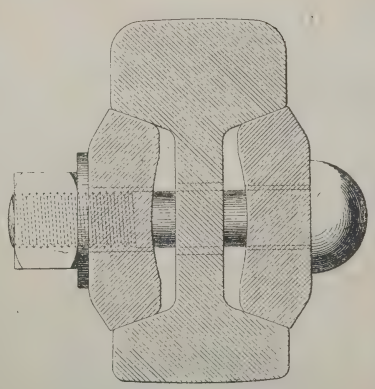


Section of Rail and Fish Plates.



Ferrule.


Bolts, Spikes, and Keys.



Bolt. Weight, 1 lb. 12 ozs.



FIG. 572.



Galvanised Screw. Weight, 1 lb. 4 ozs.



Spike. Weight, 1 lb. 2½ ozs.



Oak Key.
6 ins. long.



Midland Railway.
Details of permanent way.
General Arrangement.
Ballast 18'0" long 600 lbs. per yard.

Fig. 574.

MIDLAND RAILWAY.

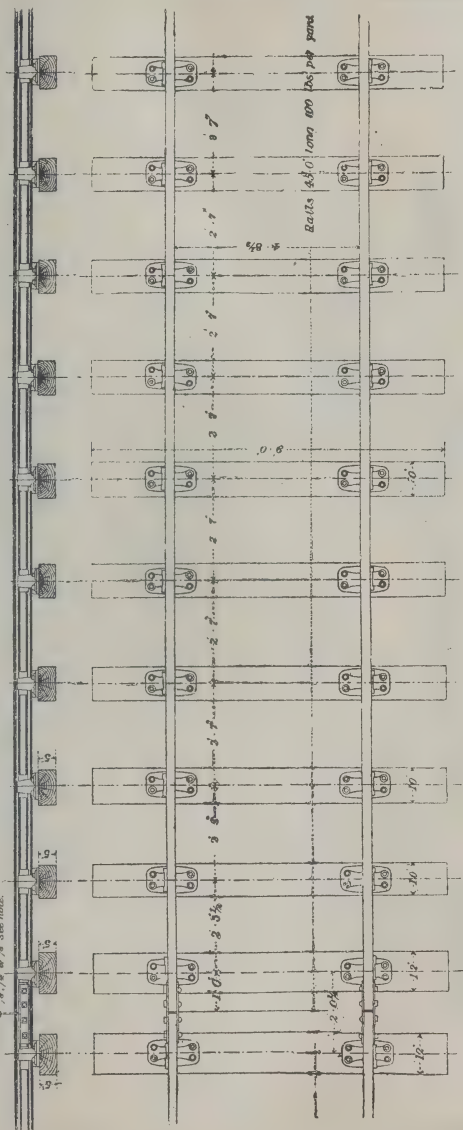DETAILS OF PERMANENT WAY.

Rail Joints.


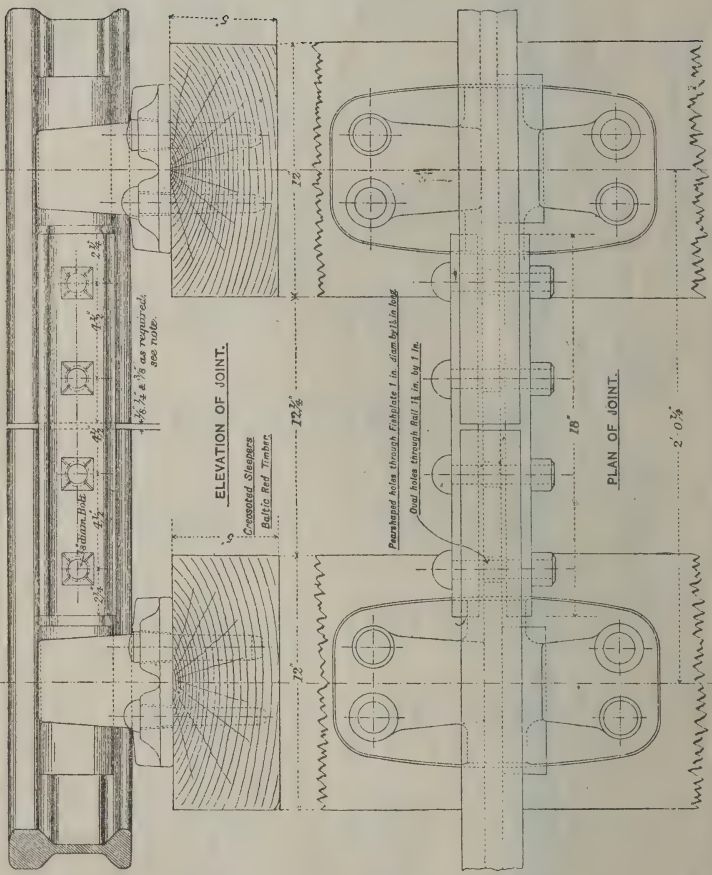


FIG. 575.


MIDLAND RAILWAY.

DETAILS OF PERMANENT WAY.

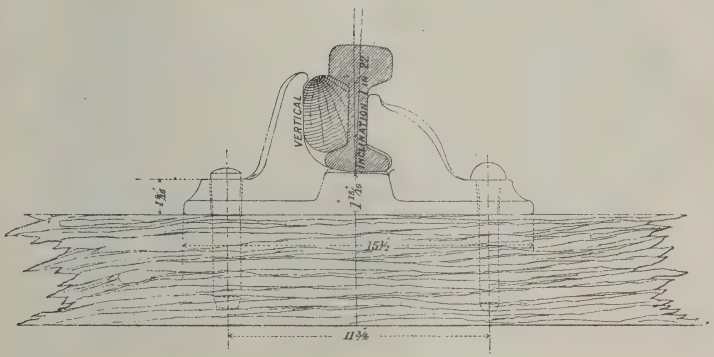Rail Setting.



ELEVATION OF CHAIR.

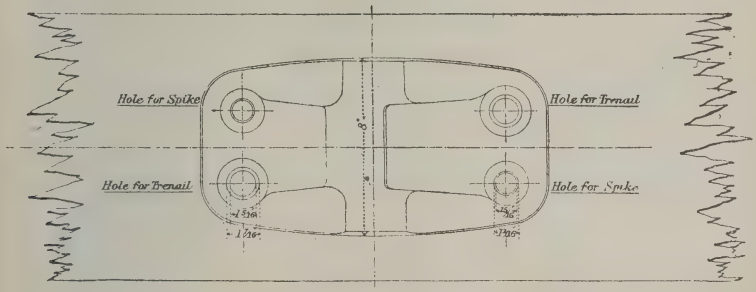

PLAN OF CHAIR.

FIG. 576.

MIDLAND RAILWAY.

DETAILS OF PERMANENT WAY.



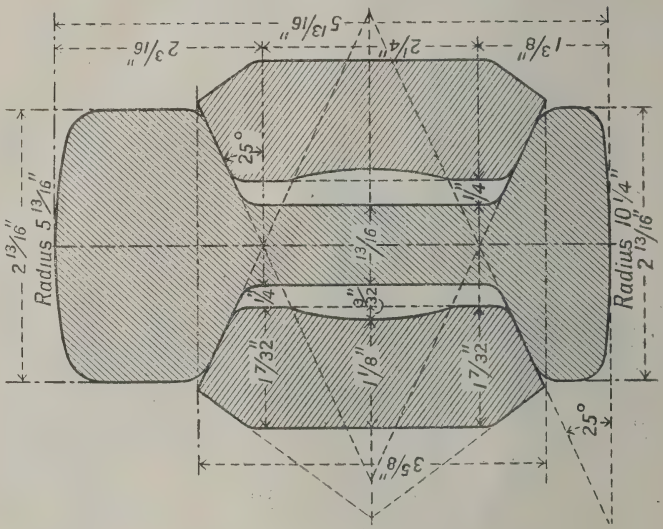


FIG. 577.

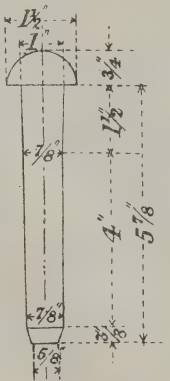
Spikes, Trenails, and Keys.



Wrought Iron Spike.

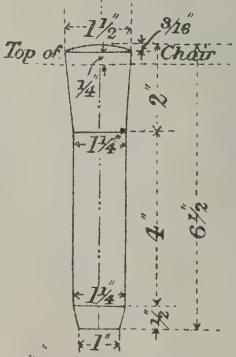

Solid Oak Trenail
(Before Driving).

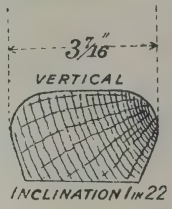

Oak Key
7 ins. long.

FIG. 578.

WEIGHT OF RAILS PER MILE.

Area.	Weight per Yard.	Weight per Mile.	Area.	Weight per Yard.	Weight per Mile.
Sq. Ins.	Lbs.	Tons. Cwts. Lbs.	Sq. Ins.	Lbs.	Tons. Cwts. Lbs.
5	50	78 11 48	7	70	110 0 0
5¼	52	81 14 32	7½	75	117 17 16
5½	55	86 8 64	8	80	125 14 32
5¾	56	88 0 0	9	90	141 8 64
6	60	94 5 80	10	100	157 3 84
6½	64	100 11 48			
No. of 15-ft. rails per mile . . . 704			No. of 18-ft. rails per mile . . . 587		
„ 16-ft. „ „ . . . 660			„ 20-ft. „ „ . . . 528		

Weight of rail per yard in lbs. multiplied by 1/9 equals tons per mile of single track.
Approximately, the weight of a rail in kilograms per metre × 2 = weight in lbs. per yard.

Loss of Strength in Steel Rails through Use on Railways.

(*Abstract from Board of Trade Report* 1900.)

The Report of the Board of Trade Committee appointed to inquire into the loss of strength in steel rails through use on railways, states that :

(*a*) The preponderance of fractures near the ends of rails seems to show that the greater straining action due to discontinuity at the joint is a contributing cause of fracture, and this can be remedied by adopting rails of sufficient strength with webs of ample thickness and secure types of fastening, and by care that no looseness arises in service.

(*b*) The fact that worn rails are improved in strength and ductility by annealing proves that part of the deterioration of rails in service is of the nature of what is sometimes termed 'fatigue.'

(*c*) It appears certain that in some cases fractures of rails have been due to fissures formed during service. How far the minute transverse fissures, very often noticed in the running surface of old rails, give rise to these larger induced flaws requires further investigation. It is not likely that they usually spread into the substance of the rail, because they are common in old rails, and fractures would be more frequent than they are if that were the case. Also, the evidence as to the existence of visible flaws or defects in the fractured surface of rails is very conflicting. In some cases, undoubtedly, the combined effects of the weakening of a rail by wear and corrosion, possibly also increased straining action from defective packing of sleepers, and the presence of a flaw or fissure of not inconsiderable size have led to fracture of the rail. That such defects appear most commonly in the head of the rail is evidence to a certain extent that they are induced by the hammer hardening of the top surface.

(*d*) It is very desirable that the mechanical tests to which rails are subjected should be as far as possible standardised in connection with (1) the weight ; (2) the section ; and (3) the chemical composition of the rail.

As regards chemical composition the Committee does not think it desirable to insist upon too high a proportion of carbon, manganese, or silicon in the steel, having regard to the ordinary contingencies of manufacture, and the greater susceptibility of high carbon steel to thermal influences.

Mr. E. Windsor Richards (in conjunction with Mr. E. P. Martin, of Dowlais) considers, after careful consideration from the points of view of a manufacturer and user, that, exclusive of the iron, a steel rail should have the following range of composition :

	Minimum.		Maximum.
Carbon	·35	to	·5
Silicon	·05	„	·1
Sulphur	·04		·08
Phosphorus	—		·08
Manganese	·75	„	1·00

The falling weight tests showed conclusively that double-headed rails worn in service on one head and afterwards turned down to rest on the chair so as to bring the unworn head into use, are dangerously brittle, owing to the worn head having developed numerous incipient small cracks, which really form 'nicks;' and such practice of using rails is recommended to be immediately discontinued.

THERMAL INFLUENCES.

Seasons at which Fractures most frequently occur.—Mr. Footner has given the following data from twelve years' experience on the London and North Western Railway : Fractures in spring, 29 per cent. ; in summer, 16 per cent. ; in autumn, 22 per cent. ; in winter, 33 per cent. There is other evidence as to the frequency of fractures in winter, and no doubt when the permanent way is hardened by frost the effect of concussions on the rails is much more serious. There is no satisfactory evidence that the steel itself is sensibly weakened by any ordinary cold temperature.

According to all statistics more than 50 per cent. of fractures occur before the rails have had a service of fifteen years.

Mr. Footner states that of fractured rails

3 per cent. broke after ½ to 5 million tons. | 45 per cent. broke after 50 to 100 million tons.
35 „ carrying 5 to 50 tons. | 17 „ carrying 100 to 200 tons.

So that 38 per cent. of the broken rails had carried less than 50 million tons.

According to Dormus, if f = breaking stress of rail steel in tons per square inch; l = gauge length in inches; Δ = ultimate elongation of length l in inches; then $100f^2\Delta \div l$ should not be less than 22,000; only the worst qualities give a lower value than 16,120.

Sir I. Lowthian Bell does not think that the Committee (as the result of the investigation) should recommend any change in the mode of management of the permanent way of the railways of the United Kingdom.

Breaking Load of Steel Rails.

At five feet bearings the breaking load of steel rails in pounds may be taken at 1,000 × weight of rail per yard in pounds.

Chemical analyses of average Bessemer rail steel, as made at present for heavy rails, run about as follows:—

	Per cent.		Per cent.		Per cent.
Carbon	·50	Sulphur	·08	Manganese	1·00
Phosphorus	·10	Silicon	·12	Iron	98·20

(*F. E. Abbott.*)

Cross-Overs.

Shortly after the Central London Railway was opened practically all the cross-overs on it were changed to manganese steel. They have been in use for over ten years, and there has been no necessity for renewing them. With ordinary steel the life, with the traffic which the Central London carries, would be only from three to six months. Taking the relative prices of ordinary steel and manganese steel cross-overs, the life of the latter in order to produce the same economy would require to be from three to four years. It is thus seen that manganese steel, which has already had a life of ten years, is by far the cheapest in the end, and obviates the trouble of continual renewal work.

Ballast.

Cubic Yards per Mile of Ballast.

Depth of Ballast in Inches.	Side Slope of Ballast, 1 to 1. Width in Feet.					
	Single Track.			Double Track.		
	10	11	12	21	22	23
12	2,151	2,347	2,543	3,303	4,499	4,694
18	3,373	3.667	3,961	6,601	6,895	7,188
24	4,700	5 085	5,477	8,997	9,389	9,780
30	6,111	6,601	7,090	11,491	11,980	12,469

The depth of the ballast should be 2 feet below the top of the rails—that is, 1 foot 7 inches in thickness above the formation level. The ballast is usually laid in a double thickness, the upper layer consisting of stones not exceeding 3 cubic inches in bulk, and averaging about 2 cubic inches. The lower layer may be of stones varying in size from 3 to 30 cubic inches in bulk.

The width of the top ballast beyond the cross-sleepers should be about 18 inches, the total width in the case of a single line of rails being 12 feet; in the case of a double line, 23 feet; in the case of a triple line, 34 feet; and for a quadruple line 45 feet. Slope of ballast at sides, 1 to 1.

Cost of Railway Construction.

In England, taking a fairly representative section of one of the main lines, outside the Metropolis, and constructed in recent years, as an example, the percentages of the cost of about 40,000*l.* per mile, work out somewhat as follows:—

	Per Cent.		Per Cent.
Land and compensation	10	Sidings	3
Fencing	1½	Junctions and signals	1
Earthworks	24	Stations, including buildings (roadside only)	6½
Tunnels	12	Contingencies, including parliamentary, administration, legal and engineering expenses	6
Viaducts	8	Maintenance	½
Bridges for roads	9		100
Accommodation works	2		
Culverts and drainage	5		
Permanent way, ballast, including main line	11½		

From this it will be seen that, for country lines, the value of land does not form so important a factor in the total cost as is generally understood. The necessity for very easy gradients, and flat curves, in order to admit of high speeds, involves heavy earthworks, viaducts and tunnels, and expensive, well-ballasted permanent way, whilst stations and sidings have to be extensive to accommodate the traffic.

Experience has shown how to adapt the design of railways to their special surroundings. Their cost has varied from about 630,000*l.* per mile in London, and from an average of 52,378*l.* per mile in the United Kingdom, and of 8,127*l.* per mile in India, to a cost, in some parts of South Africa and South America, of 3,200*l.* to 3,500*l.* per mile, or, with equipment, of 4,000*l.* per mile—a rate at which, in new countries and under fairly normal conditions, railways can be provided, suitable for a speed of 30 miles per hour, and for heavy trains. (*Sir Douglas Fox.*)

Table showing Gauges of Various Railways.

England, Scotland, and Wales	4 ft. 8½ ins. (1·435 metres)
Ireland	5 ft. 3 ins.
Canada	4 ft. 8½ ins. & 5 ft. 6 ins.
Nova Scotia	4 ft. 8½ ins. & 5 ft. 6 ins.
New South Wales	4 ft. 8½ ins.
South Australia	5 ft. 3 ins.
Queensland	3 ft. 6 ins.
Victoria	5 ft. 3 ins.
Cape Colonies	3 ft. 6 ins.
New Zealand	3 ft. 6 ins.
British India	5 ft. 6 ins. & 1 metre
Ceylon	5 ft. 6 ins.
Egypt	4 ft. 8½ ins. & 3 ft. 6 ins.
France	4 ft. 9 ins. (1·45 metres) & 3 ft. 3⅜ ins. (1 metre)
Belgium	4 ft. 9 ins. (1·45 metres)
Holland	4 ft. 9 ins. (1·45 metres)
Germany	4 ft. 9 ins. (1·45 metres)
Austria	4 ft. 9 ins. (1·45 metres)
Switzerland	4 ft. 9 ins. (1·45 metres)
Italy	4 ft. 9 ins. (1·45 metres)
Hungary	4 ft. 9 ins. (1·45 metres)
Spain	5 ft. 5½ ins. (1·67 metres)
Portugal	5 ft. 5½ ins. (1·67 metres)
Norway	4 ft. 8½ ins. & 3 ft. 6 ins.
Sweden	4 ft. 8½ ins.
Denmark	4 ft. 8½ ins.
Russia	5 ft.
Turkey	4 ft. 8½ ins.
Sardinia	4 ft. 9 ins. (1·45 metres) & 3 ft. 1½ in. (·95 metre)
United States	4 ft. 8½ ins. & 4 ft. 9 ins.
Mexico	4 ft. 8½ ins. & 3 ft.
Peru	4 ft. 8½ ins.
Brazil	3 ft. 3⅜ ins. (1 metre), 4 ft. 8½ ins., 5 ft. 3 ins. & 5 ft. 6 ins.
Chili	5 ft. 6 ins.
Argentine Republic	5 ft. 6 ins.
Uruguay Republic	4 ft. 8½ ins.
Japan	3 ft. 6 ins.
China	4 ft. 8½ ins.

Details of Permanent Way.

Clear space outside rail, 4 ft. Middle space between two sets of rails, 6 ft. Clear space outside rail, 4 ft. Least head for the top of ballast, and least width for archways and tunnels, 13 ft. 1½ in. for single lines ; 24 ft. 3 ins. for double lines. Spaces required for slopes of ballast and benches beyond them on top of embankments, from 3 ft. 10½ ins. to 8 ft. 10½ ins. for single lines ; and from 3 ft. 9 ins. to 8 ft. 9 ins. for double lines. Total breadth on top of embankments, from 17 ft. to 22 ft. for single lines ; and from 28 ft. to 33 ft. for double lines.

Bridges.

Over-Bridges carrying roads over the railway are usually of the following spans : Over single line, 16 ft. to 18 ft. ; over double line, 28 ft. to 30 ft.

Widths of over-bridges, between inside of parapets, are regulated by Act of Parliament as

follows, the roads being of the widths given for 50 yards each way: Turnpike roads, 35 ft.; other public carriage roads, 25 ft.; turnpike roads, 30 ft.; other public carriage roads, 20 ft.; private roads, 12 ft.

Under-Bridges, carrying roads under railway. Span and head-room fixed by Act of Parliament: Turnpike road, clear head-room, 12 ft. at springing, 16 ft. for centre 12 ft. of arch; other public carriage road, clear head-room, 12 ft. at springing, 15 ft. for centre 13 ft. of arch; private road, clear head-room, 14 ft. for centre breadth of 9 ft. of arch.

Allowance for Impact in Bridges.

S = span in ft.; V = velocity in ft. per sec.; T = time in secs. required by a train travelling at velocity V to travel from the point where a given member commences to receive the stress, to the point where the stress is a maximum (i.e. in a plain girder, T is the time taken to pass half the span); D = maximum allowable deflection; t = time taken for a free falling body to fall through a height $D \therefore t^2 = \frac{D}{16}$, or $t = \frac{1}{4}\sqrt{D}$; P = percentage allowance for impact, then $P = \frac{50V\sqrt{D}}{S}$. As formula is correct for a single concentrated load only, it gives excessive allowances for long spans, and P may be reduced $\frac{1}{30}$th of its found value for each 25 ft. span in spans of over 25 ft. In all cases where V is such that the load traverses the half span in less time than t, the percentage for impact must be 100, the maximum V being fixed at 100 ft. per sec. For a deflection of $\frac{1}{2500}$ of the span, $P = \frac{V}{\sqrt{S}}$ less the allowance for spans above 25 ft.

These formulæ are based on the idea that impact must vary with the time of application of the load. On a long bridge even a high speed train only reaches its position of maximum bending moment after several seconds, so that the bridge deflects slowly to its maximum deflection and goes very little beyond what the train at rest would produce. This applies to main members. Floor beams and their attachment, however, receive maximum stress very rapidly, for the train advances to full effect in the brief space of one panel length. On floor stringer end-connections the first end is loaded absolutely instantaneously; the stringer itself takes its maximum load in about half a panel length, and so on: each member is to be allowed for impact according to the time required from its first feeling the load to the time of maximum moment. No simple load can produce an impactive stress more than double its static stress, but a swaying locomotive may have more than half its load on the wheels of one side, so that a wheel which may cause a maximum load on, say, the first end of a floor stringer, may happen to be loaded at the moment perhaps 30 per cent. more than its half share of the load on its axle, and at the same time it may happen that the balance weight is just delivering its downward hammer blow. Thus care is needed to give ample strength to details even of larger bridges, but the main members of a large bridge are but little affected by the trivial details of locomotive swaying, hammer blow, &c.

(*W. H. Booth.*)

Formula for the most suitable Span and Number of Piers for Iron Railway Bridges.

The object of the empirical formula is to determine for a bridge of given length, the number of spans required to make the cost of the work a minimum.

Let H = the total height of each pier measured from bottom of foundation; L = total length of bridge; $r = \frac{\text{price of cubic yard of masonry}}{\text{price per ton of iron}}$; n = number of piers.

For a double line: $n = 0{\cdot}063\ L\sqrt{\frac{L - 10\ r\ H}{r\ H\ L}} - 1$. For a single line: $n = 0{\cdot}04\sqrt{\frac{L - 10\ r\ H}{r\ H\ L}} - 1$.

These formulæ do not apply where H exceeds 98 feet.

Bridge-Expansion End Rollers.

Pressure per lineal inch of roller must not exceed 300 times the diameter of the roller in inches. (*Cooper.*)

The American Bridge Company's Specifications require rollers to be at least 4 ins. in diameter, and to have a maximum load per lineal inch of $1{,}200 \times \sqrt{\text{diameter}}$. By this rule the load per inch of diameter per lineal inch would be 600 lbs. for a 4-inch roller, and 400 lbs. for a 9-inch roller.

Swing Bridges.

P = 0·015, for rim-bearing; $P = 0{\cdot}15\ W\frac{r}{R}$, for centre-bearing;

$H.P = \frac{P\ v}{550}$; $v = \frac{R\ \pi}{2\ t}$;

P = Force required to turn the bridge, acting in centre line of track; W = total moving weight, in pounds; H.P = horse-power; r = radius of pivot; R = radius of centre line of track;

v = maximum linear velocity in centre line of track in feet per second ; t = time, in seconds, in which maximum velocity must be obtained, or one-half the number of seconds required to open the bridge.

The foregoing formulæ for frictional resistance generally give results in excess of the power actually needed under ordinary conditions, and practically cover all contingencies.

If the bridge has to be operated by hand-power, the gearing has to be arranged either for the number of men available or for the time required to turn and operate the bridge. In calculating the strength of the gearing, etc., the power of one man should be taken at 125 lbs., as this is about the force a strong man, with a foothold, can exert for a short time.

PERMISSIBLE UNIT STRESSES, IN POUNDS PER SQUARE INCH.

Kind of Strain, and Loading.		Structural Steel.	Axle Steel.	Steel Castings.	Cast Iron.	Rolled Copper.	Brass.
Tension	(*A*)	16,000	18,000	12,000	3,000	6,000	3,000
	(*B*)	10,600	12,000	8,000	2,000	4,000	2,000
	(*C*)	5,300	6,000	4,000	1,000	2,000	1,000
Compression	(*A*)	16,000	18,000	16,000	12,000	6,000	3,000
	(*B*)	10,000	12,000	10,000	8,000	4,000	2,000
Bending	(*A*)	16,000	18,000	15,000	6,000	—	—
	(*B*)	10,600	12,000	10,000	4,000	—	—
	(*C*)	5,300	6,000	5,000	3,000	—	—
Shear	(*A*)	12,000	14,000	9,000	3,000	3,600	—
	(*B*)	8,000	9,600	6,000	2,000	2,400	—
	(*C*)	4,000	4,800	3,000	1,000	1,200	—
Torsion	(*A*)	10,000	12,000	7,500	3,000	—	—
	(*B*)	6,600	8,000	5,000	2,000	—	—
	(*C*)	3,300	4,000	2,500	1,000	—	—

A. For a static load.

B. For a varying load producing stresses of tension or compression only.

C. For a varying load producing equal maximum strains in opposite directions, accompanied by shocks and vibrations.

The permissible unit stresses for bending (given opposite *B*)—10,000 for cast steel and 4,000 for cast iron—should be used for determining the strength of toothed gearing. The teeth in cut gearing should conform to the following proportions :—

P = pressure on tooth in pounds ; s = permissible unit stress ; p = pitch, in inches ; f = face of tooth, in inches ; y = a factor.

$$P = s\,p\,f\,y.$$

For wheels moving at slow speed (up to about 100 ft. per minute), where strength only is to be considered, $y = 0{\cdot}05$.

The strength of uncut teeth should be computed for a face of one and one-half times the pitch, or

$$P = \frac{3\,s\,p^2\,y}{2};$$

which conforms approximately with the assumption that the pressure is carried on one corner of the tooth.

For higher velocities, which tend to increase the shock and wear, this value should not exceed :—

$$y = 0{\cdot}05\ \frac{10}{\sqrt{v}} = \frac{0{\cdot}5}{\sqrt{v}}$$

where v = velocity in pitch circle, in feet per minute.

For bronze wheels, the same values should be used as for cast iron.

Fixed Bearings.

For the permissible unit pressures for fixed bearings of different metals, those in the table for compression, should be used.

Pressure, in Pounds per Linear Inch, on Rollers at Rest.

Cast iron, $400d$; Rolled and cast steel, $800d$; Where d = diameter of roller, in inches.

Moving Bearings.

PERMISSIBLE UNIT PRESSURES FOR BEARING ON ROTATING AND SLIDING SURFACES.

Maximum bearing values for rotating and sliding surfaces in pounds per square inch.

Bearings on which the Speed is slow and Intermittent.	
Pivots for swing bridges, hardened tool steel on special phosphor-bronze	3,500
Trunnion bearings for bascule bridges, axle steel on phosphor-bronze	2,000
Wedges, cast-iron on bronze	600
Wedges, cast-iron on cast-iron or structural steel	500
Screws which transmit motion on projected area of thread	200
Ordinary Cases, Parts moving at Moderate Speeds.	
Hardened steel on hardened steel	2,000
Hardened steel on bronze	1,500
Tool steel (not hardened) on bronze	900
Structural steel on bronze	600
Cast-iron on structural steel	400
Cast-iron on cast-iron	400
On crosshead slides, speed not exceeding 600 ft. per minute	50

In order to prevent heating and seizing at higher speeds, the pressure on pivots or foot-step bearings for vertical shafts and journals should not exceed :—

$$\text{On pivots, } p = \frac{160000}{n\,d}\text{ ; on journals, } p = \frac{300000}{n\,d}$$

where n = number of revolutions per minute ; d = diameter of journal or pivot, in inches.

For crank pins and similar joints with alternating motion, the limit bearing values given in the above formula may be doubled.

Roller and Ball Bearings.

(See Section XIX, page 899.)

Quantity of Land required for a Line of Railway.

This depends upon the width as determined by the depth of cuttings and height of embankments. Assuming average depth and height of 3 feet, and slopes of 1½ to 1, 5 to 6 acres will be required per mile of single line (4 ft. 8½ ins. gauge), made as in England, exclusive of sidings or stations. For each foot added to or deducted from the average of 3 feet given above (same slopes), 1 yard in width, or ⅛ acre per mile, must be added or deducted.

Light or Narrow-Gauge Railways.

Narrow-gauge railways will be found very suitable in districts where a standard-gauge line could not be made to pay, on account of the greater cost of construction and working of the latter. Narrow-gauge railways occupy less land, and the earthworks are of a less expensive kind than for standard-gauge lines, as heavy embankments and cuttings can be avoided by adopting sharper curves than are admissible with the standard gauge.

For the permanent way light material can be used, the rolling stock can be constructed to give a more favourable proportion between the dead and the paying loads than is possible on

standard-gauge lines, particularly if the traffic is made up of a great number of small consignments. On narrow-gauge lines the average proportion of dead load to paying load may be taken at about 1 to 2·33.

Whether steel or wood sleepers should be used is principally a question of cost, but it should be borne in mind that steel sleepers have a much greater life than wood sleepers.

The gauge and weight of rail should be determined in every case after a careful inquiry into the earning powers of the line. For the rails a weight of 25 lbs. per yard would be about the minimum. The 2-ft. gauge has the great advantage that it can be worked best in combination with portable railways which are joined on to branches of permanent line and continued to the farmyards, fields, or factories. The 2-ft. gauge is especially suitable for private lines and for lines of public utility with limited goods and little passenger traffic. It can be worked at a speed of fifteen miles per hour with curves 100 to 150 feet radius and gradients 1 in 80, for public lines; while on private lines, curves down to 60 feet radius and gradients up to 1 in 25 are admissible, according to the speed required and the amount of traffic. For lines with extensive goods traffic or principally for passenger traffic, 2 ft. 6 in. or 3 ft. gauge would be preferable.

The cost of transhipping goods from main line into narrow-gauge waggons and *vice versa* amounts on the Festiniog line to :—

Minerals	$\frac{3}{4}d.$ per ton
General Goods	$1\frac{1}{2}d.$ „
Slates which have to be transferred by manual labour	$6d.$ „

These figures also agree approximately with the Continental experience on this point.

If the goods are of a nature that they will not stand handling, the narrow-gauge waggon bodies could be made of such dimensions that three or four would fit into one main-line truck. A very simple device is also in practical use, of putting the main-line trucks on specially constructed bogies, and thus transporting them over the narrow-gauge railway.

(*A. Koppel.*)

The use of locomotives is not profitable on gauges of less than 18 inches.

The speed on narrow gauges may be as follows :—

2 ft. 0 in. gauge, 15 miles per hour.	3 ft. 0 in. gauge, 25 miles per hour.
2 ft. 6 in. gauge, 20 miles per hour.	3 ft. 6 in. gauge, 30 miles per hour.

Formulæ for Calculating the Power of Electric Locomotives for Light Railways.

W = weight of locomotive in tons loaded for service ; g = percentage grade (rise per 100) ; L = weight of load in tons.

$$W = \frac{12+g}{120-g} \times L.$$

T = tractive force in lbs.

$$T = 2{\cdot}24\,(g+12)\,(W+L).$$

H = effective horsepower at driving wheels ; S = speed in miles per hour.

$$H = \frac{T \times S}{375}.$$

C = current in ampères ; E = electromotive force in volts at the motor terminals ; m = mechanical efficiency of motor at 80 per cent. of H, allowing 20 per cent. for friction and electrical leakage.

$$C = \frac{H \times 746}{E \times m}.$$

For example : If

$g = 18$ (*i.e.* 18 ft. per 100 ft.) ; L = 15 tons ; S = 10 miles per hour ; E = 500 volts

then

$$W = \frac{12+18}{120-18} \times 15 = \frac{30}{102} \times 15 = 4{\cdot}4 \text{ tons.} \quad T = 2{\cdot}24 \times 30 \times 19{\cdot}4 = 1{,}304 \text{ lbs.}$$

$$H = \frac{1304 \times 10}{375} = 35 \text{ H.P.} \quad C = \frac{35 \times 746}{500 \times 0{\cdot}8} = \text{about 66 ampères.}$$

Hence the dynamo required would be of $66 \times 550^{*} = 36{,}000$ volt-ampères = 36 kilowatts.

Per kilowatt in the dynamo, there would be required, $1\frac{3}{4}$ H.P. in the steam engine,

or for 36 kilowatts, $36 \times 1\frac{3}{4} = 60$ H.P.

The strength of the dynamo must be calculated for the strongest current required.

For an installation intended to supply electricity both for lighting and power, a dynamo of 110 or 220 volts is the most suitable ; if, however, the lamps are in circuit, a dynamo of 500 volts

* This is the electromotive force at the dynamo terminals. Generators for tractive work are usually constructed for 550 volts, and allow of a loss of 50 volts between the dynamo and the motor terminals.

may be used. The advantage of the higher voltage is that the conductors may be made of a smaller section, while the loss of electromotive force remains the same.

The maximum loss of electromotive force can be taken at 20 to 25 per cent. of the voltage at the dynamo terminals.

By Ohm's Law,

$$E_1 = C \times R ,$$

where E_1 = loss of electromotive force along conductor in volts; C = current in amperes; R = resistance of conductors in ohms.

If

d = diameter of copper wire in inches; W = weight of rails in lbs. per yard; l = length of track in yards,

Then

$$R = l\left(\frac{1}{30000\,d^2} + \frac{1}{1100\,W}\right), \text{ and, } E_1 = C \times l\left(\frac{1}{30000\,d^2} + \frac{1}{1100\,W}\right).$$

(*A. Koppel.*)

Tunnels.

When deeply buried, a tunnel in soft earth is properly formed when its section is an ellipse whose major and minor axes have the ratio $c = \frac{\text{horizontal axis}}{\text{vertical axis}} = \sqrt{\frac{1 - \sin\phi}{1 + \sin\phi}}$, where ϕ is the angle of repose of the material. The horizontal axis must never be less than this ratio, but may be greater and will be still safe in firm earth. The whole ellipse is used in drains, but in tunnels the lower fourth or third is omitted, and a flat invert is put in.

Where tunnels are not deeply buried below the surface, the form of section is the 'Geostatic' arch, derived by transformation from the 'Hydrostatic' arch. To design a geostatic arch, given the depth of the crown below the surface $= x_o$, first design a hydrostatic arch and contract its horizontal ordinates in the ratio $c : 1$. This will give the figure required. As the greatest horizontal width will be a fixed quantity, the problem resolves itself into finding the depth below surface of the greatest hydrostatic breadth.

If x_o = depth of crown below surface; s = half span of geostatic arch; ϕ = angle of repose of earth; w = weight of a cubic foot of earth in lbs.; $c = \sqrt{\left(\frac{1 - \sin\phi}{1 + \sin\phi}\right)}$ = ratio of horizontal ordinates of two arches; y = half span of hydrostatic arch $= s \times \frac{1}{c}$; $s = cy$; $c = \frac{s}{y}$; x_1 = depth of greatest horizontal diameter $= x_o + a$; a = rise of arch above greatest diameter; b = a function depending on the relations of x_o, a, and x, then

$$b = a\sqrt[2]{\frac{x_o + a}{x_o}}\ (1);\quad y = b - \frac{b^2}{30a}\ (2);\quad b = y + \frac{y^2}{30a}\ (3);\quad x_o = a\frac{a^2}{b^2 - a^2}\ (4).$$

By assuming a value for a in (1) the value of b may be found and placed in (2); if a does not agree with its value assumed, further trials can be made until a sufficiently approximate result is obtained.

If r_o = radius of hydrostatic arch at crown; r_1 = radius of hydrostatic arch at greatest horizontal diameter or depth, x_1; k_o = geostatic crown radius $= r_o c^2$; k_1 = geostatic radius at depth $x_1 = \frac{r^1}{c}$; then

$$r_o = a + \frac{a^2}{2x_o};\quad r_1 = a - \frac{a^2}{2(x_o + a)};\quad r_o = \frac{a^2}{1}\left(1 + \frac{b^2}{a^2}\right);\quad r_1 = \frac{a}{2}\left(1 + \frac{a^2}{b^2}\right).$$

Thickness of Walls $= \sqrt{\cdot 12R}$ up to $\sqrt{\cdot 48R}$, where R = greatest radius $= \frac{a^2}{s}$.

Pressure on Brickwork $= \frac{w[x_1(s + t) - 0{\cdot}8\ a.s]}{t}$ lbs. per square foot, where w = weight per cubic foot of earth.

Breadth of Footings.—If t_1 = breadth of footings, then t_1 must not be less than

$$\frac{W}{2}\left\{\frac{(1 - \sin\phi)}{(1 + \sin\phi)}\right\}^2, \text{ where W = half width of bricked tunnel.}$$

To Draw the Hydrostatic Arch (figs. 579, 580).—Make $ab = r_o$ and $cd = r_1$; from d strike an arc with radius $de = fb - cd$; from a with radius af draw arc cutting this at e. Then d, e, and a are centres to strike half arch.

The radius of the hydrostatic arch at any point is inversely as its depth at that point below surface, hence $r_o x_o = r_1 x_1 = r_n x_n$. Through mud the section will be practically the hydrostatic

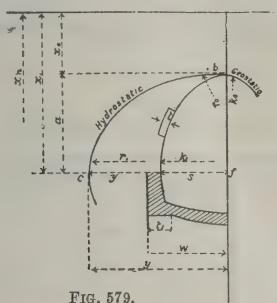


FIG. 579.

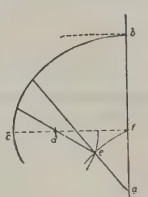


FIG. 580.

unless deeply buried, when the circular form would be correct; for in very soft material an invert resisting as an arch would be impracticable. An invert, however, could be used if strong enough to act as a beam against the upward pressure.

Superelevation of Outer Rail

When a vehicle runs round a curve it tends either to overturn or to run off the line.

The tendency to run off is counteracted by a high centre of gravity for the vehicle, because this throws a heavier pressure on the outer rail and keeps down the wheel flanges from mounting. Low centre of gravity produces detrusive effects upon the rail, and tends to force the flange over the rail. Every speed has its proper degree of superelevation which brings in gravity to balance centrifugal force. The superelevation necessary for sharp curves and high velocities would cause slow trains to run off the rail at the *inside* of the curve. In practice the maximum superelevation is limited to 7 or 8 ins., and the speed round the curve is regulated to fit that superelevation.

To determine the Superelevation of the Outer Rail of a Railway Curve.

Let v = speed of train in miles per hour; r = radius of curve in feet; G = gauge in feet.

$$\text{Superelevation in inches} = G \times \frac{v^2}{1{\cdot}25r} = \frac{v^2}{r} \times 3{\cdot}77 \text{ for 4 ft. } 8\tfrac{1}{2} \text{ ins. gauge.}$$

TABLE SHOWING SUPERELEVATION OF OUTER RAIL FOR A GAUGE OF 4 FT. 8½ INS.

Radius of Curve in Feet.	Velocity in Miles per Hour.				Radius of Curve in Feet.	Velocity in Miles per Hour.			
	10	20	30	40		10	20	30	40
	Superelevation of Outer Rail in Inches.					Superelevation of Outer Rail in Inches.			
500	·75	3·01	6·78	12·05	3,000	·13	·50	1·13	2·01
1,000	·38	1·51	3·39	6·03	4,000	·09	·38	·85	1·51
2,000	·19	·75	1·70	3·01	5,000	·07	·30	·68	1·21

PRACTICAL RULE FOR DETERMINING THE SUPERELEVATION OF THE OUTER RAIL OF ANY CURVE. (*Price.*)

Let v = speed of train in feet per second; c = length of chord, in feet, whose versed sine equals the superelevation required; G = gauge of railway in feet; then

$$c = \tfrac{1}{2} v \sqrt{G}.$$

For 5 ft. 3 in. or 4 ft. 8½ in. gauge, and a speed of 40 miles per hour, c is approximately equal to 66 feet, or a Gunter's chain.

Stretch a 66-foot tape as a chord on the rail of the curve the superelevation of which it is required to find. Measure the distance of the rail from it at its centre point. This distance will equal the superelevation.

RADII OF CURVATURE AND VERSED SINES FOR RAILS.

Radius of Curvature in Feet.	Versed Sines for Rails, the Length in Feet being				Radius of Curvature in Feet.	Versed Sines for Rails, the Length in Feet being			
	15	16	18	20		15	16	18	20
	In.	In.	In.	Ins.		In.	In.	In.	In.
286	$1\frac{3}{16}$	$1\frac{5}{16}$	$1\frac{11}{16}$	$2\frac{1}{16}$	573	$\frac{9}{16}$	$\frac{11}{16}$	$\frac{7}{8}$	$1\frac{1}{16}$
301	$1\frac{1}{8}$	$1\frac{1}{4}$	$1\frac{5}{8}$	2	636	$\frac{1}{2}$	$\frac{5}{8}$	$\frac{3}{4}$	$\frac{15}{16}$
318	$1\frac{1}{16}$	$1\frac{3}{16}$	$1\frac{1}{2}$	$1\frac{7}{8}$	716	$\frac{1}{2}$	$\frac{9}{16}$	$\frac{11}{16}$	$\frac{13}{16}$
337	1	$1\frac{1}{8}$	$1\frac{7}{16}$	$1\frac{3}{4}$	818	$\frac{7}{16}$	$\frac{1}{2}$	$\frac{9}{16}$	$\frac{3}{4}$
358	$\frac{15}{16}$	$1\frac{1}{16}$	$1\frac{3}{8}$	$1\frac{11}{16}$	955	$\frac{3}{8}$	$\frac{3}{8}$	$\frac{1}{2}$	$\frac{5}{8}$
382	$\frac{5}{8}$	1	$1\frac{1}{4}$	$1\frac{9}{16}$	1,146	$\frac{5}{16}$	$\frac{5}{16}$	$\frac{7}{16}$	$\frac{1}{2}$
409	$\frac{13}{16}$	$\frac{15}{16}$	$1\frac{3}{16}$	$1\frac{7}{16}$	1,432	$\frac{1}{4}$	$\frac{1}{4}$	$\frac{5}{16}$	$\frac{7}{16}$
441	$\frac{1}{2}$	$\frac{7}{8}$	1	$1\frac{1}{8}$	1,910	$\frac{3}{16}$	$\frac{3}{16}$	$\frac{1}{4}$	$\frac{5}{16}$
477	$\frac{13}{16}$	$\frac{13}{16}$	$\frac{15}{16}$	$1\frac{1}{4}$	2,865	$\frac{1}{8}$	$\frac{1}{8}$	$\frac{3}{16}$	$\frac{3}{16}$
521	$\frac{9}{16}$	$\frac{3}{4}$	$\frac{15}{16}$	$1\frac{1}{8}$	5,739	$\frac{1}{16}$	$\frac{1}{16}$	$\frac{1}{16}$	$\frac{1}{8}$

The above radii are those corresponding (commencing at the top) to angles of deflection from 20 to 1 deg.

Upon sharp curves it is customary to widen the gauge ½ in. for curves of a radius of 750 to 1,000 feet, ¾ in. for a radius of 500 feet, and 1 in. for curves of a less radius.

Angles and Leads of Crossings.

Let R and r = radii of curves in feet; G = gauge of railway in feet; L = lead of crossing in feet (*i.e.* the distance from the nose of the crossing to the nose of the switch); θ = angle of crossing.

Curve Curving off a Straight.

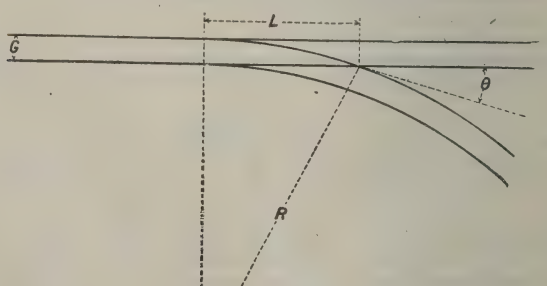


FIG. 581.

$$L = \sqrt{G(2R - G)} = \sqrt{2RG} \text{ (approximately)}; \qquad \sin\theta = \frac{L}{R}.$$

It is in some instances, where trains have to run fast over a crossing, thought necessary to adopt a curve with a larger radius than usual. In this case it may be considered advisable, in order to prevent an elbow occurring at the heel of the switch, to adopt a longer switch than usual. The length of the switch can be calculated from the following formula when the curve is off a straight.

$$\text{Length of switch} = \sqrt{2\mathrm{R}(c + t - e)},$$

where c = the clearance between the rails and the heel of the switch (in feet), this is usually about 2 inches; t = thickness of head of rail; e = the projection of the nose of the switch, if any.

Two Curves Curving in Opposite Directions.

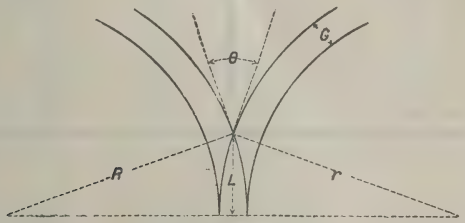


FIG. 582.

$$\mathrm{L} = \sqrt{\frac{2\mathrm{R}r\mathrm{G}}{\mathrm{R} + r}} \text{ (approximately)} \qquad \sin\theta = \frac{2\sqrt{2\mathrm{R}r(\mathrm{R} + r)\mathrm{G}}}{2\mathrm{R}r + (\mathrm{R} + r)\mathrm{G}}.$$

Two Curves Curving in the Same Direction.

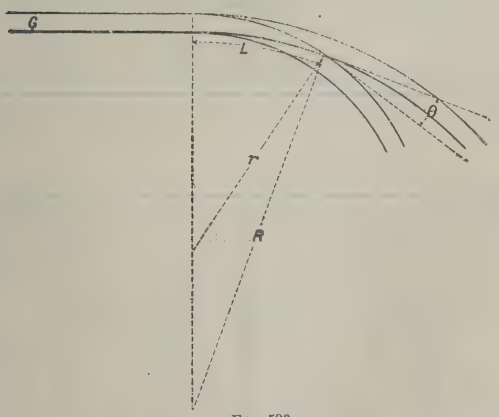


FIG. 583.

$$\mathrm{L} = \sqrt{\frac{2\mathrm{R}r\mathrm{G}}{\mathrm{R} - r}}; \qquad \sin\theta = \frac{2\sqrt{2\mathrm{R}r(\mathrm{R} - r)\mathrm{G}}}{2\mathrm{R}r + (\mathrm{R} - r)\mathrm{G}}.$$

Tables of Leads and Angles of Crossings Curving off a Straight Line.

I. Gauge, 5 Feet 6 Inches.

Radius of Curve (R) in Feet.	Lead (L) in Feet.	Inclination of Crossing, $\frac{1}{\theta}$.	Radius of Curve (R) in Feet.	Lead (L) in Feet.	Inclination of Crossing, $\frac{1}{\theta}$.
400	66	1 in 6·0	1000	105	1 in 9·5
450	70	„ 6·4	1050	107	„ 9·8
500	74	„ 6·7	1100	110	„ 10·0
550	78	„ 7·0	1150	112	„ 10·2
600	81	„ 7·4	1200	115	„ 10·4
650	84	„ 7·7	1250	117	„ 10·6
700	88	„ 7·9	1300	120	„ 10·8
750	91	„ 8·2	1350	122	„ 11·0
800	94	„ 8·5	1400	124	„ 11·2
850	97	„ 8·7	1450	126	„ 11·5
900	99	„ 9·0	1500	128	„ 11·7
950	102	„ 9·3	1550	131	„ 11·8

II. Gauge, 3 Feet.

Radius of Curve (R) in Feet.	Lead (L) in Feet.	Inclination of Crossing, $\frac{1}{\theta}$.	Radius of Curve (R) in Feet.	Lead (L) in Feet.	Inclination of Crossing, $\frac{1}{\theta}$.
400	49	1 in 8·1	1000	78	1 in 12·8
450	52	„ 8·6	1050	79	„ 13·2
500	55	„ 9·0	1100	81	„ 13·5
550	58	„ 9·4	1150	83	„ 13·8
600	60	„ 10·0	1200	85	„ 14·1
650	63	„ 10·3	1250	87	„ 14·3
700	65	„ 10·7	1300	88	„ 14·7
750	67	„ 11·1	1350	90	„ 15·0
800	69	„ 11·5	1400	92	„ 15·2
850	71	„ 11·9	1450	93	„ 15·5
900	74	„ 12·1	1500	95	„ 15·7
950	76	„ 12·5	1550	96	„ 16·1

III. Gauge, 3 Feet 3⅜ Inches (1 Metre).

Radius of Curve (R) in Feet.	Lead (L) in Feet.	Inclination of Crossing, $\frac{1}{\theta}$.	Radius of Curve (R) in Feet.	Lead (L) in Feet.	Inclination of Crossing, $\frac{1}{\theta}$.
400	51	1 in 7·8	1000	81	1 in 12·3
450	54	„ 8·3	1050	83	„ 12·6
500	57	„ 8·7	1100	85	„ 12·9
550	60	„ 9·1	1150	87	„ 13·2
600	63	„ 9·5	1200	89	„ 13·4
650	65	„ 10·0	1250	91	„ 13·7
700	68	„ 10·3	1300	92	„ 14·1
750	70	„ 10·7	1350	94	„ 14·2
800	73	„ 10·9	1400	96	„ 14·5
850	75	„ 11·3	1450	98	„ 14·8
900	77	„ 11·6	1500	99	„ 15·1
950	79	„ 12·0	1550	101	„ 15·3

IV. Gauge, 4 Feet 8½ Inches.

Radius of Curve (R) in Feet.	Lead (L) in Feet.	Inclination of Crossing, $\frac{1}{\theta}$.	Radius of Curve (R) in Feet.	Lead (L) in Feet.	Inclination of Crossing, $\frac{1}{\theta}$.
400	61	1 in 6·5	1000	97	1 in 10·3
450	65	„ 6·9	1050	99	„ 10·6
500	69	„ 7·2	1100	102	„ 10·7
550	72	„ 7·6	1150	104	„ 11·0
600	75	„ 8·0	1200	106	„ 11·3
650	78	„ 8·3	1250	108	„ 11·5
700	81	„ 8·6	1300	111	„ 11·7
750	84	„ 8·9	1350	113	„ 11·9
800	87	„ 9·1	1400	115	„ 12·1
850	89	„ 9·5	1450	117	„ 12·3
900	92	„ 9·7	1500	119	„ 12·6
950	95	„ 10·0	1550	121	„ 12·8

V. Gauge, 5 Feet 3 Inches.

Radius of Curve (R) in Feet.	Lead (L) in Feet.	Inclination of Crossing, $\frac{1}{\theta}$.	Radius of Curve (R) in Feet.	Lead (L) in Feet.	Inclination of Crossing, $\frac{1}{\theta}$.
400	65	1 in 6·1	1000	102	1 in 9·8
450	69	„ 6·5	1050	105	„ 10·0
500	72	„ 6·9	1100	107	„ 10·2
550	76	„ 7·2	1150	110	„ 10·4
600	79	„ 7·5	1200	112	„ 10·7
650	83	„ 7·8	1250	115	„ 10·8
700	86	„ 8·1	1300	117	„ 11·1
750	89	„ 8·4	1350	119	„ 11·3
800	92	„ 8·6	1400	121	„ 11·5
850	94	„ 9·0	1450	123	„ 11·7
900	97	„ 9·2	1500	125	„ 12·0
950	100	„ 9·5	1550	128	„ 12·1

Approximate Rule for Leads of Crossings.

The lead of any crossing is equal to twice the gauge multiplied by the angle of the crossing.

If curves are carefully plotted to an enlarged scale of, say, 10 or 20, or often even 33 feet to an inch, the leads and angles of the crossings can be scaled off with sufficient accuracy for all practical purposes.

The gauge should be generally about 1 inch tighter at the nose of the crossing and points than anywhere else on the lead, in order to prevent the wheels having any lateral play.

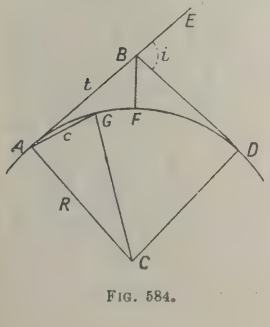


Fig. 584.

Ranging out Curves with a Theodolite.

R = radius of curve = AC. i = angle of inclination of intersection = EBD. t = tangent AB or BD = R tan $\frac{i}{2}$.

Length of curve = AFD = ·0002909Ri.

Tangential (or 'setting off') angle (angle between c and t) in minutes for any chord c

$$= 1718{\cdot}873\ \frac{c}{R}.$$

R and c being expressed in feet and i in minutes.

The angle ACG is called the 'deflection' angle, and is twice the tangential angle, *i.e.* the tangential angle is one-half the deflection angle.

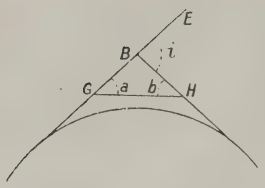


FIG. 585.

To find the Angle of Intersection and Point of Intersection where the latter is inaccessible.

If B is the inaccessible point, then—
Range the line GH.

$$i = a + b,$$

$$GB = \frac{GH \sin b}{\sin i}, \quad HB = \frac{GH \sin a}{\sin i}.$$

TABLE OF TANGENTIAL ANGLES FOR CHORDS OF 1 FOOT AND 100 FEET.

Radius of Curve.	Tangential Angle. Chord 1 ft.	Chord 100 ft.	Radius of Curve.	Tangential Angle. Chord 1 ft.	Chord 100 ft.	Radius of Curve.	Tangential Angle. Chord 1 ft.	Chord 100 ft.
Ft.	Min.	Deg. Min.	Ft.	Min.	Deg. Min.	Miles.	Min.	Deg. Min.
500	3·438	5 43·77	3,000	0·573	0 57·30	⅛	2·604	4 20·44
600	2·865	4 46·48	3,500	0·491	0 49·11	¼	1·302	2 10 22
700	2·456	4 5·55	4,000	0·430	0 42 97	⅓	0·651	1 5·11
800	2·149	3 34·86	4,500	0·381	0 38·20	¾	0·434	0 43·41
900	1·910	3 10·99	5,000	0·344	0 34·38	1	0·326	0 32 55
1,000	1·719	2 51·89	5,500	0·313	0 31·25	1¼	0 260	0 26 04
1,100	1·563	2 36·26	6,000	0·286	0 28·65	1½	0·217	0 21·70
1,200	1·432	2 23·24	7,000	0·246	0 24·56	1¾	0·187	0 18·70
1,500	1·146	1 54·59	8,000	0·215	0 21·49	2	0·163	0 16·28
2,000	0·859	1 25·94	9,000	0·191	0 19·10	2½	0·130	0 13·02
2,500	0·688	1 8·76	10,000	0·172	0 17·19	3	0·109	0 10·85

A curve in America is expressed as an $n°$ curve (deflection angle), and is one of such a radius that a chord of 100 ft. subtends an angle of $n°$ at the centre.

Setting out Curves by Offsets

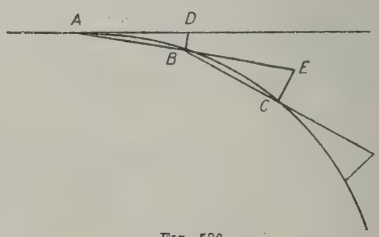


FIG. 586.

First offset BD from the tangent line.

$$DB = \frac{AD^2}{2 \text{ radius}}.$$

Offset from any chord AB produced

$$E = EC = \frac{AE \times EB}{2 \text{ radius}}.$$

Or where AB = BE, then

$$EC = \frac{AB^2}{\text{radius}}$$

TABLE OF RADII OF CURVES.

(Chords = 66 feet.)

V	R	V	R	V	R	V	R	V	R	V	R	V	R
0	Straight	1	99	2	49½ 49·500	3	33	4	24¾ 24·750	5	19⅘ 19·800	6	16½ 16·500
1/16	1,584 1584·01	1/16	93 3/17 93·176	1/16	48	1/16	32 1/49 32·326	1/16	24 24/65 24·369	1/16	19⅕ 19·5	1/16	16 33/97 16·330
1/8	792 792·005	1/8	88	1/8	46 1/17 46·588	1/8	31 17/25 31·680	1/8	24	1/8	19 13/41 19·317	1/8	16 5/49 16·163
3/16	528	3/16	83 7/19 83·368	3/16	45 9/35 45·257	3/16	31 1/17 31·059	3/16	23 43/97 23·641	3/16	19 7/83 19·084	3/16	16
¼	396	¼	79⅕ 79·200	¼	44	¼	30 6/13 30·461	¼	23 5/17 23·294	¼	18 6/7 18·857	¼	15 21/33 15·840
5/16	316⅘ 316·800	5/16	75 3/7 75·428	5/16	42 30/97 42·811	5/16	29 47/65 29·886	5/16	22 23/25 22·956	5/16	18 5/11 18·635	5/16	15 69/101 15·683
3/8	264	3/8	72	3/8	41 13/19 41·684	3/8	29⅓ 29·333	3/8	22 22/35 22·628	3/8	18 18/43 18·418	3/8	15 9/17 15·529
7/16	226 2/7 226·285	7/16	68 20/23 68·869	7/16	40 8/13 40·615	7/16	28⅘ 28·800	7/16	22 2/11 22·310	7/16	18 6/29 18·207	7/16	15 39/103 15·378
½	198	½	66	½	39⅗ 39·600	½	28 4/7 28·286	½	22	½	18	½	15 3/13 15·230
9/16	176	9/16	63 9/35 63·360	9/16	38 26/41 38·634	9/16	27 15/19 27·789	9/16	21 51/73 21·700	9/16	17 71/99 17·798	9/16	15 3/35 15·086
5/8	158⅖ 158·400	5/8	60 13/13 60·923	5/8	37 1/7 37·714	5/8	27 9/26 27·310	5/8	21 15/37 21·405	5/8	17⅗ 17·600	5/8	14 50/53 14·943
11/16	144	11/16	58 2/3 58·666	11/16	36 24/53 36·837	11/16	26 2/3 26·847	11/16	21 3/25 21·120	11/16	17 8/81 17·407	11/16	14 86/107 14·804
¾	132	¾	56 4/7 56·571	¾	36	¾	26 2/5 26·400	¾	20 16/19 20·842	¾	17 6/29 17·217	¾	14 2/3 14·666
13/16	121 11/13 121·846	13/16	54 18/29 54·621	13/16	35⅕ 35·200	13/16	25 50/61 25·967	13/16	20 1/7 20·571	13/16	17 1/31 17·032	13/16	14 58/109 14·532
⅞	113 1/7 113·143	⅞	52 4/5 52·800	⅞	34 1/23 34·434	⅞	25 17/31 25·548	⅞	20 4/13 20·307	⅞	17 4/47 17·851	⅞	14 2/5 14·400
15/16	105 3/5 105·600	15/16	51 3/31 51·097	15/16	33 33/47 33·702	15/16	25 1/7 25·143	15/16	20 4/79 20·051	15/16	16 84/85 16·674	15/16	14 19/47 14·270

V = versed sine in inches. R = radius of curve in chains.

NOTE.—If 33-foot chords are used for finding curves, the versed sine measured must be multiplied by 4 and then looked up in this table.

TABLE OF RADII OF CURVES (*continued*).

(Chords = 66 feet.)

V	R	V	R	V	R	V	R	V	R	V	R	V	R
7	14 1/7 14·143	8	12 3/8 12·375	9	11	10	9 9/10 9·900	11	9	12	8 1/4 8·250	13	7 8/13 7·615
1/16	14 2/113 14·017	1/16	12 1/2 2/3 12·280	1/16	10 1/4 2/4 6 10·924	1/16	9 1/3 5/1 6 3 9·838	1/16	8 5/8 6/9 8·949	1/16	8 4/0 1/9 8 8·207	1/16	7 1/1 1/9 7·579
1/8	13 1/7 1/9 13·894	1/8	12 1/2 0/5 12·184	1/8	10 2/3 3 10·850	1/8	9 7/9 9·7	1/8	8 8/9 0 8·899	1/8	8 1/6 7 8·165	1/8	7 1/9 5/8 7·543
3/16	13 8/9 1/1 5 6 13·774	3/16	12 1/2 3/1 8 1 12·091	3/16	10 3/8 5/4 9 10·775	3/16	9 1/1 5/1 6 3 9·718	3/16	8 1/5 3/1 7 9 8·849	3/16	8 5/6 5 8·123	3/16	7 1/0 7/2 1 1 7·507
1/4	13 1/2 9 13·655	1/4	12	1/4	10 2/5 7 10·702	1/4	9 2/7 1 9·658	1/4	8 4/5 8·800	1/4	8 4/4 9 8·081	1/4	7 2/5 5/3 7·471
5/16	13 7/1 3 13·538	5/16	11 1/2 1/1 3 3 11·910	5/16	10 2/4 1/4 9 10·630	5/16	9 3/5 9·600	5/16	8 1/3 8 6/1 8 1 8·751	5/16	8 1/8 9 7 8·041	5/16	7 3/1 7/1 7·436
3/8	13 2/5 5/9 13·423	3/8	11 5/5 5/6 7 11·820	3/8	10 1/2 4/2 5 10·560	3/8	9 1/4 5/8 3 9·542	3/8	8 0/9 1/9 1 8·703	3/8	8	3/8	7 1/4 3/1 0 7 7·402
7/16	13 3/7 1/9 13·311	7/16	11 1/1 1/1 5 11·73	7/16	10 1/7 4/1 5 1 10·490	7/16	9 1/5 1/1 4 7 9·485	7/16	8 1/0 6 1 8·655	7/16	7 1/0 0 1/1 9 0 7·960	7/16	7 1/7 9/2 1 5 7·367
1/2	13 1/5 13·200	1/2	11 1/1 7 11·647	1/2	10 4/9 5 10·421	1/2	9 3/7 9·428	1/2	8 1/1 4/2 6 8·608	1/2	7 2/3 2 6 7·920	1/2	7 1/3 7·333
9/16	13 1/1 1 13·09	9/16	11 7/7 1/4 7 11·562	9/16	10 1/0 7/1 7 10·353	9/16	9 8/8 3/1 2 9 9·372	9/16	8 1/0 4/1 8 7 8·562	9/16	7 5/9 6/7 7·880	9/16	7 8/3 7/2 1 7 7·300
5/8	12 8/8 1/3 1 12·983	5/8	11 1/1 2/2 3 11·478	5/8	10 2/7 10·285	5/8	9 2/7 8/5 9·317	5/8	8 1/6 3 1 8·516	5/8	7 8/5 1/6 1 7·841	5/8	7 2/9 1/0 9 7·266
11/16	12 3/4 1 1 12·878	11/16	11 5/5 3/5 9 11·395	11/16	10 3/4 1/8 5 10·219	11/16	9 5/1 6 9·263	11/16	8 1/1 7 8·470	11/16	7 1/6 3/2 0 3 7·803	11/16	7 1/7/3 7·233
3/4	12 2/3 1 12·774	3/4	11 1/1 3/5 11·314	3/4	10 2/1 3 10·153	3/4	9 1/4 3 9·209	3/4	8 2/0 4/7 8·425	3/4	7 1/1 3 1/7 7·764	3/4	7 1/5 7·200
13/16	12 1/1 3/5 5 12·672	13/16	11 1/1 4/7 11·234	13/16	10 1/1 4/1 5 7 10·089	13/16	9 2/7 1/7 8 9·156	13/16	8 1/2 1 8·381	13/16	7 1/4 2/3 0 5 7·727	13/16	7 3/7/2 2 1 7·167
7/8	12 1/7 12·571	7/8	11 1/1 1/1 5 11·155	7/8	10 2/9/6 10·025	7/8	9 3/2 9 9·103	7/8	8 3/2 9/5 8·337	7/8	7 1/1 3/1 0 3 7·689	7/8	7 5/8 7 7·135
15/16	12 6/0 1/2 1 12·472	15/16	11 1/1 3 11·077	15/16	9 5/1 3/8 9·962	15/16	9 1/9 5/6 9·051	15/16	8 5/6 1/9 1 8·293	15/16	7 1/5 3/3 7·652	15/16	7 3/8 2/1 3 7·103

V = versed sine in inches. R = radius of curve in chains.

NOTE.—If 33-foot chords are used for finding curves, the versed sine measured must be multiplied by 4 and then looked up in this table.

TABLE OF RADII OF CURVES (*continued*).

(Chords=66 feet.)

V	R	V	R	V	R	V	R	V	R	V	R	V	R
14	7 1/14 7·071	15	6 3/5 6·600	16	6 3/16 6·187	17	5 14/17 5·823	18	5 1/2 5·500	19	5 4/19 5·210	20	4 19/20 4·950
1/16	7 1/25 7·040	1/16	6 128/241 6·572	1/16	6 42/257 6·163	1/16	5 73/91 5·802	1/16	5 139/286 5·481	1/16	5 59/305 5·193		
1/8	7 1/113 7·008	1/8	6 6/11 6·54	1/8	6 6/43 6·140	1/8	5 107/137 5·781	1/8	5 67/145 5·462	1/8	5 8/17 5·176		
3/16	6 222/227 6·978	3/16	6 14/27 6·518	3/16	6 30/269 6·116	3/16	5 19/26 5·760	3/16	5 43/97 5·443	3/16	5 49/307 5·159		
1/4	6 18/19 6·947	1/4	6 30/61 6·491	1/4	6 6/65 6·092	1/4	5 17/23 5·739	1/4	5 31/73 5·425	1/4	5 1/7 5 143		
5/16	6 210/229 6·917	5/16	6 114/243 6·465	5/16	6 2/29 6·069	5/16	5 199/299 5·718	5/16	5 113/293 5·406	5/16	5 18/103 5·126		
3/8	6 102/115 6·887	3/8	6 18/41 6·439	3/8	6 6/131 6·045	3/8	5 97/136 5·697	3/8	5 19/49 5·387	3/8	5 17/155 5·109		
7/16	6 6/7 6·857	7/16	6 102/247 6·413	7/16	6 6/263 6·023	7/16	5 81/81 5·677	7/16	5 109/295 5·370	7/16	5 29/311 5·093		
1/2	6 24/29 6·827	1/2	6 18/41 6·387	1/2	6	1/2	5 38/67 5·657	1/2	5 13/37 5·351	1/2	5 1/13 5·077		
9/16	6 186/283 6·798	9/16	6 30/83 6·361	9/16	5 259/265 5·977	9/16	5 179/281 5·637	9/16	5 1/3 5·333	9/16	5 10/313 5 061		
5/8	6 10/13 6·769	5/8	6 42/125 6·336	5/8	5 127/183 5·955	5/8	5 29/47 5·617	5/8	5 47/149 5·315	5/8	5 7/157 5·044		
11/16	6 174/235 6·740	11/16	6 78/251 6·311	11/16	5 83/89 5·932	11/16	5 162/283 5·597	11/16	5 89/299 5·297	11/16	5 1/35 5·028		
3/4	6 42/59 6·711	3/4	6 3/7 6·285	3/4	5 81/87 5·910	3/4	5 4/7 5·577	3/4	5 7/25 5·280	3/4	5 1/9 5·012		
13/16	6 54/79 6·683	13/16	6 6/23 6·261	13/16	5 230/269 5·888	13/16	5 53/95 5·558	13/16	5 79/301 5·262	13/16	4 316/317 4·997		
7/8	6 78/119 6·655	7/8	6 30/127 6·236	7/8	5 13/15 5·86	7/8	5 7/13 5·538	7/8	5 37/151 5·245	7/8	4 42/53 4·981		
15/16	6 150/239 6·628	15/16	6 18/85 6·212	15/16	5 220/271 5·845	15/16	5 149/287 5·519	15/16	5 23/101 5·227	15/16	4 28/29 4·965		

(*C. E. Murray.*)

V=versed sine in inches. R=radius of curve in chains.

NOTE.—If 33-foot chords are used for finding curves, the versed sine measured must be multiplied by 4 and then looked up in this table.

Transition Curves.*

The superelevation of the outer rail on the curve which is needed at its full height for the whole length of the curve renders it necessary to begin canting the rails some distance back along the straight, called the 'run off,' in order that it may attain its full amount at the tangent point. To obviate the sudden centrifugal effect and also the difficulties due to the 'run off,' *transition curves*, or *spirals*, have been introduced. A true transition curve should determine, by slowly increasing its curvature, that the centrifugal force is applied gradually, and thus prevent any sudden oscillation, and also so that the full superelevation is gained gradually throughout its length.

The superelevation at any particular point in the transition curve should be the correct one for the curvature at that point, on the assumption that it has been designed to suit a certain maximum speed.

The formula $L = \sqrt{R}$, where L is the length and R the radius of the curve, gives very efficient transition curves for circular curves of less than 56·8 chains radius, which corresponds to about the maximum velocity used on any of our railways—84 miles per hour. But for curves of larger radius than 56·8 chains, the formula $L = 0{\cdot}00072428 \frac{V^3}{R}$ should be used, where V is the velocity in miles per hour, and L and R are in chains.

The formula $L = \sqrt{R}$ for determining the length of transition to be used has much to commend it, though it is used very little on British railways as yet, the custom at present being to take a length of 50, 60, or sometimes 66 ft. for every inch of superelevation on the circular curve. It might seem to a permanent-way engineer that the length provided by this formula for transitions to sharp curves was much too small, for instead of increasing in length as the curvature becomes sharper, it diminishes, consequently making the rate of gain of superelevation much quicker than 1 in. in 60 ft. But as the curves are sharper, the maximum speed permitted on them is also less, and thus in surmounting the superelevation at a lower velocity no uncomfortable motion is felt by passengers, as the discomfort of the motion varies as the cube of the velocity, a speed of 50 miles per hour causing nearly 5 times as much oscillation as that due to one of 30 miles per hour.

Again, for speeds of 70 and 80 miles per hour and a radius of between 40 and 60 chains, it may seem that the lengths of transitions are much too long, but here the excessive speeds demand a very gentle gradient on which to gain the full cant if the sensation of having the coach heaved up at one side is to be sufficiently gradual. Thus at speeds of 70 to 80 miles per hour the gain of superelevation should amount to 1 in. in 80 ft. or more if the best running is to be obtained. Therefore a general rule of, say, 1 in. in 60 ft. for the cant on all transition curves is unscientific and not productive of the best results. All the principal railways have now taken to the introduction of transition curves, where possible, at some parts of their systems.

The feeling that circular curves of large radius provide sufficiently good running to render them immune from the transition innovation is one which should be dissipated. As long as large easy curves are used for only *moderately high speeds* the need for a transition curve is not great. But the tendency on some of our principal railways to insert curves only of large radius and without transition curves on their main lines is a mistake, as the approach to any of these curves by trains at *high speed* is necessarily accompanied by irregularities of motion which would not occur had it been made on a transition curve.

Speaking broadly, it may be said that it is only on curves of large radius that there is any great need for a transition approach, as these curves are generally associated with high speeds, whereas the sharper curves are excluded from lines intended for fast traffic. Also, it must be remembered that on a high speed track an irregularity so slight as to escape the eye of the platelayer entirely may cause a very serious jar in the running at that point.

It is advisable that marks of a permanent nature be fixed along the 6-foot way, from which measurements may be taken to the curve in order to refix it in its true position and to the correct elevation during the operation of reballasting or other renewal work. The foreman platelayer should be provided with these and a plan giving the lengths of the offsets. A type of mark which has been adopted with some success is a centre peg made of a fish-plate set in a block of concrete, the fish-plate having a saw cut in it to indicate the centre line of the railway. It is not possible to fix these at the level of the rails, as their projection above the surface of the 6-foot way would be a danger to platelayers, also if a material train was unloaded at such a point a rail dropped on the marks would destroy their accuracy. However, if fixed well down in the pitching and formation so that the top surface of the plate is flush with the top surface of the sleeper or at a definite number of inches, say, 7 below the surface of the rail, they can be always used for re-establishing the rail in its correct position.

---

* Abstract from paper by Prof. S. W. Perrott, B.A., M.Inst.C.E., read before the Liverpool Engineering Society, March 7, 1917.

Another method, which has been used on the Great Southern and Western Railway in Ireland, is that of using short lengths of old flat-foot rails with the flange turned towards the line and placed so that the ordinary road gauge measured the distance from the outside of the running rail head to the flange of the rail used as a mark. These pegs were put in at intervals of 25 ft., either on the inside or outside of the curve (the line was single), as the ground was more suitable, and each was set so that its top was at the correct level of the corresponding rail at the point and the correct superelevation was marked on it with a punch.

The custom of making the length of the transition proportional to the number of inches of superelevation was adopted in America, probably for the purpose of obtaining easy hauling for freight trains travelling at a moderate speed. The Canadian Pacific Railway, as also some of the leading railways in this country, adopts 60 ft. for every inch of superelevation on the circular curve, but the former seldom uses more than 5 ins. of superelevation. Also, transition curves are only used for curves of superelevation of 3 ins. and upwards. The tendency in America is to keep down the superelevation as much as possible. This is for the benefit of freight trains, which are considered of primary importance but travel at lower speeds, as the higher superelevation means increased resistance to hauling, caused by the wheels binding against the lower rail. The American Railway Engineering Association has laid down the rule that, in all cases of 2 ins. of superelevation and upwards transition curves should be inserted.

The principal point of danger of a sharp curve is at its entry. If trains could be brought on to curves without any sudden irregularity of motion before settling down to the uniform motion on the curve, very much sharper curves could be adopted for high-speed trains than are used to-day. Indeed the results of experience and experiments seem to show that trains traverse curves of 5 chains radius at 35 miles per hour with perfect ease and without showing any tendency to leave the metals.

There is no hard and fast rule adopted in this country with regard to the number of points set out on the ground to fix each transition curve, the tendency being to fix 8 or even 10 points on a long transition curve and 6 on the shorter ones. A point at every half chain is generally sufficient, but some prefer to fix points about 1 chain apart at the tangent end and half that amount at the circular curve end. This gives good results, as the curvature is so much sharper at that end, and wants its position defining at nearer points.

On the Canadian Pacific Railway it is usual to set out the centre point and two-quarter points only in addition to the extremities, except in the case of very long transition curves. If these are set out by deflection angles from the beginning of the spiral they are in the ratio of 1 : 4 : 9 : 16 as they vary as the square of the length. Also if set out from the end of the spiral the ratio of the four angles is 11 : 20 : 27 : 32. So when any one of these angles is found (generally that to the end point) the others are easily calculated.

Setting out Spiral Points.

A convenient formula for setting out spiral points by deflection angles is the following :-

The deflection angle in minutes to any chord point is given by $\frac{N^2L}{10}$ where N is the number of chords between the point where the instrument is set and the required point, and L is the length of the chord in feet. This formula will not apply if the instrument is set up at the intermediate chord points.

The operation of calculating the deflection angle θ for any point in a transition curve can be easily and rapidly done in the field without the need of any offset tables, as $\theta_n = \frac{L}{6R}$, which can be determined immediately the length of the transition is decided upon. Consequently the operation of setting out the transition spiral by deflection angles from the spiral tangent point is as simple as setting out the ordinary circular curve by deflection angles.

Example of a Transition.

A transition spiral is required to connect a straight with a 25-chain curve.

Taking the length of the transition $= \sqrt{R}$, then L = 5 chains,

$$\therefore \theta n \text{ for the end of spiral} = \frac{L}{6R} = \frac{5}{150} = \frac{1}{30} \text{ radians},$$

$$\therefore \theta n = \frac{57^\circ 3}{30} = 1^\circ\ 54'\ 36''$$

If the points on the spiral are put in every half-chain, there will be ten deflection angles as follows :—

			°	′	″		°	′	″
θ_1	=	$(\frac{1}{10})^2$	(1	54	36)	=	—	1	8·76
θ_2	=	$(\frac{2}{10})^2$	(1	54	36)	=	—	4	35·00
θ_3	=	$(\frac{3}{10})^2$	(1	54	36)	=	—	10	18·84
θ_4	=	$(\frac{4}{10})^2$	(1	54	36)	=	—	18	20·16
θ_5	=	$(\frac{5}{10})^2$	(1	54	36)	=	—	28	39·00
θ_6	=	$(\frac{6}{10})^2$	(1	54	36)	=	—	41	15·36
θ_7	=	$(\frac{7}{10})^2$	(1	54	36)	=	—	56	9·24
θ_8	=	$(\frac{8}{10})^2$	(1	54	36)	=	1	13	20·64
θ_9	=	$(\frac{9}{10})^2$	(1	54	36)	=	1	32	49·56
θ_{10}	=	$(1)^2$	(1	54	36)	=	1	54	36·00

In setting out the same transition curve by deflection angles from its end, it is usual to calculate the deflection angles for the circular curve for the corresponding points, and deduct from each its deflection angle as given in the previous table.

The circular deflection angles are simply found as follows :—

$$\frac{1718'\cdot87}{R} = \frac{1718'\cdot87}{25} = 68'\cdot75,$$

which is the deflection angle in minutes for a whole chain ;

$\therefore$ 34′ 22″·5 is the angle for a half-chain.

The following table gives the deflection angles to be used with theodolite at point 10, in fixing points 9, 8, 7, etc.

(1) Deflection angle to point.	(2) Circular deflection angle.			(3) Corresponding values of θ_1, etc.			Difference between (2) and (3) giving deflection angles to spiral.		
	°	′	″	°	′	″	°	′	″
9	—	34	22·5	—	1	8·76	—	33	13·74
8	1	8	45	—	4	35·00	1	4	10·00
7	1	43	7·5	—	10	18·84	1	32	48·66
6	2	17	30	—	18	20·16	1	59	9·84
5	2	51	52·5	—	28	39·00	2	23	13·50
4	3	26	15	—	41	15·36	2	44	59·64
3	4	00	37·5	—	56	9·24	3	4	28·26
2	4	35	00	1	13	20·64	3	21	39·36
1	5	9	22·5	1	32	49·56	3	36	32·94
0	5	43	45	1	54	36·00	3	49	9·00

British Engineering Standards Association

LIST OF STANDARD SPECIFICATIONS AND REPORTS RELATING TO RAILWAYS.

Report No.

9—1909. **RAILWAY RAILS,** Specification and Sections of Bull Head.

11—1909. **RAILWAY RAILS,** Specification and Sections of Flat Bottom.

24—parts i-vi. **RAILWAY ROLLING STOCK,** Specifications for **Material** used in the Construction of

- 24 Part I.—1921. Locomotive, Carriage and Wagon Axles.
- 24 Part II.—1921. Locomotive, Carriage and Wagon Tyres.
- 24 Part III.—1921. Laminated, Volute and Helical Springs, and Steel for Laminated Springs.
- 24 Part IV.—1921. Steel Forgings, Blooms and Castings.
- 24 Part V.—1911. Copper Plates, Rods and Tubes, and Brass Tubes.
- 24 Part VI.—1921. Steel Plates, Angles, etc., and Rivets for Locomotives, Carriages and Wagons.

47—1919. **STEEL FISHPLATES,** for Bull Head and Flat Bottom Railway Rails, Specification and Sections of.

50—1910. **LOCOMOTIVES FOR INDIAN RAILWAYS,** Third Report on (Superseding Nos. 5 and 26). *Under Revision.*

51—1913. **WROUGHT IRON,** for use in Railway Rolling Stock ('Best-Yorkshire' and Grades A, B and C), Specification for.

53—1913. **BOILER TUBES** for Locomotive Boilers, Specification for Cold Drawn Weldless **Steel.**

64—1913. **FISHBOLTS AND NUTS FOR RAILWAY RAILS.**

103—1919. **FALLING WEIGHT TESTING MACHINES** for **Rails,** Specification for. *Gratis.*

104—1919. **LIGHT FLAT BOTTOM RAILWAY RAILS AND FISHPLATES,** Sections of.

105—1919. **LIGHT AND HEAVY BRIDGE TYPE RAILWAY RAILS,** Sections of.

A number of the Specifications and Reports of the Association are being issued in French, Italian, Portuguese, and Spanish. The English Editions and the Foreign Translations (which also include the English Text) are being published in octavo form at 1/- net per copy or its equivalent in foreign moneys. Postage : Inland 2d.; Abroad 4d.

Complete list will be sent on application to the Publishers to the Association :—

CROSBY LOCKWOOD & SON,

7 STATIONERS' HALL COURT, LONDON, E.C. 4.

ARMSTRONG-WHITWORTH

TRADE MARK

SHIPS
MARINE ENGINES
LOCOMOTIVES
MACHINE TOOLS
FORGINGS CASTINGS
DROP STAMPINGS
HIGH SPEED STEELS
SMALL TOOLS GAUGES
PNEUMATIC TOOLS
NON-FERROUS PRODUCTS
OIL & GAS ENGINES
HYDRAULIC MACHINERY
HYDRO-ELECTRIC PLANT
GENERAL ENGINEERING
CIVIL ENGINEERING

11.

MACHINE TOOLS

for every Turning, Boring, Milling, Punching, Shearing and Drilling operation in building

LOCOMOTIVES, TENDERS, TRUCKS AND CARRIAGES.

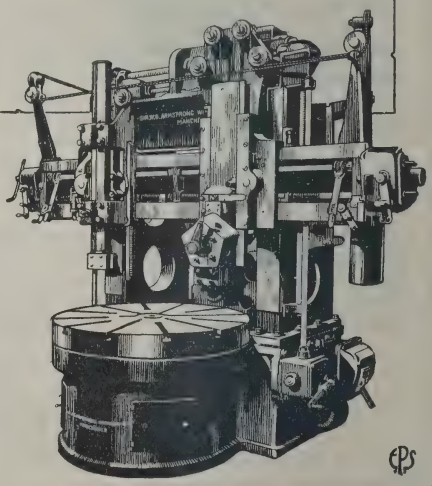
Specify the operation and the specification of the appropriate machine will be gladly forwarded. The illustration shows an A.W. 3'6" Turning and Boring Mill.

Sir W. G. ARMSTRONG - WHITWORTH AND Co. Ltd.

8, GT. GEORGE STREET, WESTMINSTER, S.W.1

Telephone: Victoria 4010 (6 lines).
Telegrams: 'Arwhitcoy, Parl, London'.

MACHINE TOOL WORKS: OPENSHAW, MANCHESTER.



F. 567

SECTION XII

PART II

LOCOMOTIVES AND ROLLING STOCK.

LOCOMOTIVES — STEAM MOTOR CARS — CARRIAGES AND WAGGONS — LIGHTING AND HEATING RAILWAY CARRIAGES—BRAKES.

(Revised by H. Holcroft, Member of Council, Institution of Locomotive Engineers.)

LOCOMOTIVES.*

SOME RECENT ADDITIONS TO BRITISH LOCOMOTIVES.

The L. & N.W.R. and G.W.R. continue to add to the number of four-cylinder engines of the 4–6–0 type. The G.C.R. is also building this type, the distinguishing feature being that all four cylinders are in line at the smoke-box. The inside pair drive the first coupled axle, and the outside pair, by means of extended piston rods, drive on the second axle. The piston valves of the outside cylinders have outside admission of steam, and the valves of the inside cylinders have inside admission. This enables the inside and outside valve on either side of the engine to be driven by separate arms on a common rocking shaft operated by Stephenson link motion inside the frames.

The 2–6–0 type mixed traffic engine, with wheels about 5 ft. 6 ins., is being built by the G.W.R., G.N.R., S.E. & C.R., and L.B. & S.C.R.

On the North-Eastern Railway three-cylinder engines of the 0–8–0 and 4–6–0 types have made their appearance, the former for mineral traffic, and the latter, with 5 ft. 8 ins. wheels, for mixed traffic. All three cylinders with their respective piston valves have the same inclination and are contained in one casting. A separate link motion is provided for each valve.

The G.N.R. is building three-cylinder engines of the 2–6–0 type, with 5 ft. 8 ins. wheels. The boiler barrel is 6 ft. in diameter, and made from a single plate $\frac{5}{8}$ in. thick by 11 ft. $5\frac{1}{2}$ ins. long. The firebox is 9 ft. long. The outside cylinders are inclined at an angle of 1 in 30, and the inside cylinder 1 in 8 : all three cylinders drive the same axle. Walschaert valve gear outside the frames is used for the piston valves of the outside cylinders. The piston valve of the inside cylinder is driven by a combination of rocking levers operated by the two outside valve gears.

The Caledonian Railway is building 3-cylinder engines of the 4–6–0 type, having a similar arrangement of valve gears.

On the L.B. & C. Railway several more large 4–6–4 type tank engines have been constructed.

For the purpose of assisting trains on the Lickey incline, Bromsgrove, the Midland Railway has introduced a 4-cylinder banking engine of the 0–10–0 type. The cylinders are inclined 1 in 7 and drive the third pair of wheels, the second axle being cranked to give clearance to the inside connecting rods. The cylinders are cast in pairs, and there is only one 10-in. piston valve to supply both cylinders on one side of the engine, the inside cylinder having crossed ports. Walschaert valve gear is used.

---

* See also 'Graphical Representation of Locomotive Performance,' *The Engineer*, April 26, May 2, 1918 (*H. Holcroft*); 'Three-Cylinder Locomotives,' *The Engineer*, May 16, 1919 (*H. Holcroft*); 'The Metamorphosis of the Locomotive,' *The Engineer*, July and August, 1919 (*H. Holcroft*); and the following books:—'Locomotive Engineering' (*Pettigrew*); 'Construction of the Modern Locomotive' (*Hughes*); 'Locomotive Operation' (*Henderson*); 'Modern Locomotive Practice' (*Wolff*); 'The Railway Locomotive' (*Vaughan-Pendred*).

BRITISH TENDER

Railway.	Type.	Class.	Service.	Cylinders.			Wheels.			Wheel Base.	
				No.	Position.	Size.	Bogie.	Coupled.	Trailing.	Coupled.	Total.
						″ ″	′ ″	′ ″	′ ″	′ ″	′ ″
G.W. .	4–6–2	GreatBear	Hvy. pass.	4	In. & Out.	15 ×26	3 2	6 8½	3 8	14 0	34 6
,, .	4–6–0	Star	,,	4	Do.	15 ×26	3 2	6 8½	—	14 9	27 3
,, .	4–6–0	Saint	,,	2	Out.	18½×30	3 2	6 8½	—	14 9	27 1
,, .	2–8–0	—	Hvy. goods	2	Out.	18 ×30	3 2	4 7½	—	16 10	25 7
,, .	2–8–0	4,700	Mxd. traf.	2	Out.	19 ×30	3 2	5 8	—	20 0	29 3
,, .	4–4–0	County	Pass.	2	Out.	18 ×30	3 2	6 8½	—	8 6	24 0
,, .	2–6–0	4,331	Mxd. traf.	2	Out.	18½×30	3 2	5 8	—	14 9	23 6
L. & S.W.	4–6–0	736	Hvy. pass.	2	Out.	22 ×28	3 7	6 7	—	14 6	27 6
,,	4–6–0	—	Mxd. traf.	2	Out.	21 ×28	3 7	5 7	—		
,,	4–6–0	330	Hvy. pass.	4	In. & out.	16 ×24	3 7	6 0	—	13 4	26 7
G.E. .	4–6–0	1,500	Hvy. pass.	2	In.	20 ×28	3 3	6 6	—	14 0	28 6
,, .	4–4–0	1,850	Pass.	2	In.	19 ×26	3 9	7 0	—	9 0	23 6
,, .	0–6–0	1,240	Goods	2	In.	20 ×28	—	4 11	—	17 8	17 8
Midland	4–4–0	—	Pass.	Compound 1	In. H.P.	19×26	3 6½	7 0	—		24 3
				2	Out. L.P.	21×26					
,,	4–4–0	—	,,	2	—	19 ×26	3 3½	6 6½	—		24 4½
,,	4–4–0	—	,,	2	—	20½×26		7 0½	—		22 8½
,,	0–6–0	—	Goods	2	In.	20 ×26	—	5 3	—	16 6	16 6
,,	0–10–0	—	Banking	4	In. & out.	16¾×28	—	4 7½	—	20 11	20 11
G.C. .	2–8–0	—	Mineral	2	Out.	21 ×26	3 6	4 8	—	17 1	25 5
,, .	4–6–0	—	Mxd. traf.	2	Out.	21 ×26	3 6	5 8	—	15 3	27 6
,, .	4–4–0	11 E	Pass.	2	In.	20 ×26	3 6	6 9	—	10 0	25 3
,, .	4–6–0	—	Hvy. pass.	4	In. & out.	16 ×26	3 6	6 9	—	15 6	28 10
,, .	4–6–0	—	Mxd. traf.	4	In. & out.	16 ×26	3 6	5 8	—		
L.& N.W.	4–6–0	—	Hvy. pass.	2	In.	19 ×26	3 9	6 3	—		
,,	4–6–0	Claughton	,,	4	In. & out.	16 ×26	3 3	6 9	—	15 3	29 0
,, .	4–4–0	—	Pass.	2	In.	20½×26	3 3	6 9	—	10 0	25 1½
,,	0–8–0	—	Mineral	2	In.	20½×24	—	4 5½	—	17 3	17 3
G.N. .	2–6–0	1,000	Mxd. traf.	3	In. & out.	18½×26	3 2	5 8	—	16 3	25 2
,, .	2–6–0	—	,,	2	Out.	20 ×26	3 8	5 8	—	16 3	25 2
,, .	2–8–0	477	Mineral	3	In. & out.	18½×26	3 2	4 8	—	18 6	27 2
,, .	2–8–0	—	,,	2	Out.	21 ×28	3 2	4 8	—	18 6	26 4

LOCOMOTIVES.

Working Pressure.	Grate Area.	Heating Surface.			Weight of Engine.		Tender.		Engine and Tender.		Tractive Force.	
		Tubes.	Fire-box.	Super-heater.	On Coupled Wheels.	Total.	Coal.	Water.	Total Weight.	Total Wheel Base.	Pull.	At Per-cent. of Pressure.
lbs.												
sq. in.	sq. ft.	sq. ft.	sq. ft.	sq. ft.	T. C	T. C.	Tons.	Galls.	T. C.	′ ″	lbs.	%
225	41·8	2,673	158	545	60 0	97 0	6	3,500	142 15	61 0½	29,430	90
225	27·0	1,686	155	286	55 8	75 12		3,500	115 12		29,430	90
225	27·0	1,686	155	286	54 16	72 0		3,500	112 0		25,830	90
225	27·0	1,686	155	286	61 18	68 6		3,500	108 6		35,465	90
225	30·3	2,062	169	323	73 8	82 0		3,500	122 0	56 9¾	30,460	90
200	20·5	1,350	129	216	37 12	58 16		3,500	98 16		21,734	90
200	20·5	1,350	129	216	52 12	62 0		3,500	102 0		27,180	90
180	30·0	1,252 + 464	162	308	55 19	77 17	7	5,000	134 18	58 0	24,700	80
180	30·0	1,252 + 464	162	308					135 1		26,500	80
175	31·5	1,252 + 464	168	308	52 16	73 18		4,000	118 15	53 2	25,000	80
180	26·5	1,123 + 366	143	286	43 8	62 19	4	3,700	102 4	48 3		
180	21·6	1,561	118	—	34 9	51 14						
160	21·6	874 + 283	118	226	47 7	47 7						
220	28·4	1,305	150	—	39 2	59 18	7	3,500	105 16			
200	28·4			—	38 10	58 5	7	3,500	104 3			
160	21·1			313	34 9	53 7	4	3,250	93 4	44 9½		
160	21·1	1,045	125	313	49 10	49 10	4	2,950	88 10	38 9½		
180	31·5	1,560	158	445	73 13	73 13	4	2,050	106 5	46 3¾	43,312	85
180	26·0	1,050 + 591	174	308	67 18	75 4	6	4,000	123 10	51 2½	30,813	85
180	26·0	1,050 + 591	174	308	53 18	72 18	6	4,000	121 4	50 8½	25,376	85
180	26·0	1,502	157		29 12	61 0		4,000	109 6	48 8½	19,385	85
180	26·0	1,881	163	343	57 3	77 18	7	4,000			25,140	85
	26·0	1,881	163	343			7	4,000			29,950	85
185	25·0	1,908	133	—	46 15	65 15	6	3,000	102 15			
175	30·5	1,161 + 486	171	413	59 0	77 15	7	3,000	117 0			
175	22·4	1,005 + 380	162	302	38 5	59 17	6	3,000	99 2	47 2¾		
175	23·6	1,161 + 465	147	378	60 5	60 5	6	3,000	99 10	41 1¼		
180	28·0	1,900	182	407	60 0	71 14	6½	3,500	114 16	48 0¼	30,000	85
170	24·0	1,523	144	403	53 8	63 14	6½	3,500	106 16		22,100	85
180	27·5	1,340 + 528	163	430	67 7	75 16	6½	3,500	118 18	52 2¼	36,468	85
170	27·5	1,927	163	430	67 8	76 4					31,862	85

BRITISH TENDER

Railway.	Type.	Class.	Service.	Cylinders.			Wheels.			Wheel Base.	
				No.	Position.	Size.	Bogie	Coupled.	Trailing.	Coupled.	Total.
						" "	' "	' "	' "	' "	' "
N.E. .	4–4–2		Hvy. pass.	3	In. & out.	15½×26	3 7¼	6 10	4 0	15 7	29 6
,, .	4–4–2		,,	3	In. & out.	16½×26	3 7¼	6 10	4 0	15 7	29 6
,, .	4–6–0	—	,,	2	Out.	20 ×26	3 7¼	6 1¼	—	14 0	26 0½
,, .	4–6–0	S3	Mxd. traf.	3	In. & out.	18½×26		5 8	—		
,, .	0–8–0	T3	Mineral	3	In. & out.	18½×26	—	4 7¼	—	18 6	18 6
N.B. .	4–4–2	—	Hvy. pass.	2	Out.	21 ×28	3 6	6 9	4 3	7 3	27 9½
,, .	0–6–0	—	Goods	2	In.	19½×26	—	5 0	—	16 11	16 11
,, .	4–4–0	—	Pass.	2	In.	20 ×26	3 6	6 6	—		
Caledonian	4–6–0	956	Hvy. pass.	3	In. & out.	18½×26	3 6	6 1	—	15 0	28 8
,,	4–6–0	903	,,	2	In.	21 ×26	3 6	6 6	—		
,,	4–4–0	139	Pass.	2	In.	20½×26	3 6	6 6	—		
,,	2–6–0	34	Goods	2	In.	19½×26	3 6	5 0	—		
S.E. & C.	2–6–0	N_1	Mxd. traf.	2	Out.	19 ×28	3 1	5 6	—	1 6	24 4
,,	4–4–0	E_1	Pass.	2	In.	19 ×26	3 6	6 6	—	9 6	23 6½
,,	4–4–0	L.	,,	2	In.	20½×26	3 7	6 8	—	10 0	24 3½
L.B. & S.C.	4–4–2	H_1	Pass.	2	Out.	18½×26	3 6	6 7½	3 6	6 10	26 4
,,	4–4–2	H_2	,,	2	Out.	21 ×26	3 6	6 7½	3 6	6 10	26 4
,,	2–6–0	K	Mxd. traf.	2	Out.	21 ×26	3 6	5 6	—	15 6	23 9
Highland	4–4–0	—	Pass.	2	Out.	20 ×26	3 3	6 3	—	8 9	22 11½
Lancs. & Yorks.	4–6–0	8	Hvy. pass.	4	In. & out.	16½×26	3 0⅝	6 3	—	13 7	25 7

BRITISH TANK

Railway.	Type.	Class.	Service.	Cylinders.			Wheels.			Wheel Base.	
				No.	Position.	Size.	Bogie.	Coupled.	Trailing.	Coupled.	Total.
						" "	' "	' "	' "	' "	' "
G.W.	2–8–0	—	Mineral	2	Out.	18½×30	3 2	4 7½	—		
,, .	2–6–2	—	Goods	2	Out.	18½×30	3 2	5 8	3 8	14 9	31 9
,, .	4–4–2	—	Pass.	2	Out.	18 ×30	3 2	6 8½	3 8	8 6	32 0
L. & S.W.	4–6–2	—	Goods	2	Out.	21 ×28	3 7	5 7	3 7	15 0	36 6
,,	4–8–0	—	Shunting	2	Out.	22 ×28	3 7	4 7½	—	18 0	32 0

LOCOMOTIVES—(*continued*).

Working Pressure.	Grate Area.	Heating Surface.			Weight of Engine.		Tender.		Engine and Tender.		Tractive Force.	
		Tubes.	Fire-box.	Super-heater.	On Coupled Wheels.	Total.	Coal.	Water.	Total Weight.	Total Wheel Base.	Pull.	At Per-cent. of Pressure.
lbs. sq. in.	sq. ft.	sq. ft.	sq. ft.		T. C.	T. C.	Tons.	Galls.	T. C.	′ ″	lbs.	%
180	27·0	2,160	180	—		76 14			122 0		17,740	
160	27·0	1,798	180		39 17	77 2			122 8		17,852	
160	23·0	1,173 / 504	144	545		68 17	5	3,940	109 19			
180	27·0		166			77 14			123 16		30,032	85
200	27·0				71 12	71 12	5½	4,125	115 14	44 3¾	41,070	85
180	28·5	1,136 / 483	185	385	40 0	76 14	7	4,240	122 2	53 2		
165	19·8	927 / 339	142	324	54 14	54 14	7	3,500	93 13			
165	21·3	871 / 295	140				7	4,235	103 6			
180	28·0	1,700 / 500	170	270	60 0	81 0	5½	4,500	129 0	54 0½	28,000	85
170	26·0	1,666	148	516		73 0	5	5,000	130 0			
170	21·0	1,220	145	330		59 0	5	4,600	115 0			
170	20·6	1,071	119	267		54 0	4½	3,000	92 0			
200	25·0	1,391	135	203	50 18	59 8	5	3,500	98 13		24,416	80
180	24·0	827 / 322	127	228	33 10	52 10	4½	3,450	91 10	45 2⅜	17,328	80
160	22·5	914 / 338	160	254	37 14	59 7	4	3,450	97 15	46 2¾	17,482	80
200	30·9	2,318	137	—				3,500		50 3		
170	30·9	1,348 / 547	136	460	37 10	68 10	4	3,500	107 10	50 3		
170	24·8	1,155	139	279	55 4	63 10			105 10			
160	22·5	703 / 313	124	180	34 5	54 19						
180	27·0	1511	175	552	59 6	79 1	5	2,480	111 7	48 3½	28,879	85

LOCOMOTIVES.

Working Pressure.	Grate Area.	Heating Surface.			Weight of Engine.		Tanks.		Tractive Force.	
		Tubes.	Fire-box.	Super-heater.	On Coupled Wheels.	Total.	Coal.	Water.	Pull.	At Per-cent. of Pressure.
lbs. sq. in.	sq. ft.	sq. ft.	sq. ft.	sq. ft.	T. C.	T. C.	Tons.	Galls.	lbs.	%
200	20·5	1,350	129	216	70 0	78 0		1,800	33,300	90
200	20·5	1,350	129	216	56 4	78 16		2,000	27,179	90
195	20·3	1,009	122		37 0	75 0		2,000	21,190	90
180	27·0	910 / 357	139	231			3½	2,000	28,200	85
180	27·0	910 / 357	139	231			3½	2,000	34,000	85

BRITISH TANK

Railway.	Type.	Class.	Service.	Cylinders.			Wheels.			Wheel Base.	
				No.	Position.	Size.	Bogie.	Coupled.	Trailing.	Coupled.	Total.
						″ ″	′ ″	′ ″	′ ″	′ ″	′ ″
G.E. .	2–4–2	61	Suburban	2	In.	17½×24	3 9	5 4	3 9		
L.&N.W.	4–6–2	—	Pass.	2	In.	20 ×26	3 3	5 8½	3 3	14 0	33 9
G.N. .	0–6–2	—	Suburban	2	In.	18 ×26	—	5 8	3 8	16 3	23 3
,,	0–6–2	N2	,,	2	In.	19 ×26	—	5 8	3 8	16 3	23 9
N.E. .	4–6–2	—	—	3	In. & out.	16½×26	3 1½	4 7½	3 9½	14 6	34 3
S.E. & C.	2–6–4	K	Pass.	2	Out.	19 ×28	3 1	6 0	3 1	15 0	34 4½
,,	0–4–4	H	Suburban	2	In.	18 ×26	—	5 6	3 7	7 6	21 10
,,	0–6–0	S	Shunting	2	In.	18½×26	—	5 2	—	16 6	16 6
,,	0–6–4	J	Suburban	2	In.	19½×26	—	5 6	3 7	16 6	27 9
L.B. & S.C.	4–6–2	J	Pass.	2	Out.	21 ×26	3 6	6 7½	4 0	14 6	35 3
,,	4–6–4	L	,,	2	Out.	22 ×28	3 6	6 9	3 6	14 9	40 10
N. Staff.	0–6–4	—	Pass.	2	In.	20 ×26	—	5 0	3 4	16 0	27 9
Metro-politan	4–4–4	—	Pass.	2	Out.	19 ×26	3 0	5 9	3 0	7 9	33 6
Furness	4–6–4	—	Pass.	2	In.	19½×26	3 2	5 8	3 2	13 3	40 9

AMERICAN TENDER

Railroad.	Type.	Class.	Service.	Cylinders.			Wheels.			Wheel Base.	
				No.	Position.	Size.	Bogie.	Coupled.	Trailing.	Coupled.	Total.
						″ ″	′ ″	′ ″	′ ″	′ ″	′ ″
Pennsyl-vania	2–10–0	—	Freight	2	Out.	30 ×32	2 9	5 2	—		
,,	2–8–2	—	,,	2	Out.	27 ×30	2 9	5 2	2 9		
,,	4–6–2	—	Pass.	2	Out.	27 ×28	3 0	6 8	3 0		
Canadn. Pacific	4–8–2	—	Pass.	2	Out.	23½×32		5 3			
Missouri Pacific	4–6–2	—	Pass.	2	Out.	26 ×26		6 3			
Southn. Pacific	4–6–2	—	Pass.	2	Out.	25 ×30	3 0	6 1½	4 3½	13 0	35 6
,,	2–10–2	—	Freight	2	Out.	29½×32	2 9	5 3½	4 3½	22 10	42 4
Virginia	2–10 / 10–1–	800	Freight	4	Out.	Comp'd. 30 ×32 / 48 ×32		4 8	—		
Westn. Maryl'd.	2–8–0	—	Freight	2	Out.	27 ×32	2 9	5 1	—	17 6	27 3

LOCOMOTIVES—(*continued*).


Working Pressure.	Grate Area.	Heating Surface.			Weight of Engine.		Tanks.		Tractive Force.	
		Tubes.	Fire-box.	Super-heater.	On Coupled Wheels.	Total.	Coal.	Water.	Pull.	At Per-cent. of pressure.
lbs. sq. in.	sq. ft.	sq. ft.	sq. ft.	sq. ft.	T. C.	T. C.	Tons.	Galls.	lbs.	%
180	15·2	1,018	97	—	30 3	56 8				
175	23·9	638 / 309	138	248	44 0	77 0	3	1,700		
175	20·8	1,130	120	—	51 17	65 17	4	1,600		
170	19·0	880	118	207	52 15	70 6	4	2,000		
180	23·0	1,508	140	—		87 8	5	2,300		
200	25·0	1,391	135	203	52 15	82 12	2½	2,000	22,440	80
160	16·6	1,002	102	—	33 12	54 8	2¾	1,200	16,337	80
160	16·6	1,089	110	—	53 10	53 10	2	1,200	18,371	80
160	17·6	593 / 294	112	234	51 18	70 14	3½	2,000	19,174	80
170	25·0	997 / 464	125	357	54 10	89 0	3	2,000		
170	26·6	1,535	152		56 10	98 5	3½	2,700	—	—
	21·0	887 / 258	129		52 0	72 0	3½	2,200		
160	21·4	765 / 281	132	268	39 0	77 0	4½	2,000	17,400	80
170	26·0	1,850	153	—	54 18	93 5	4	2,200	21,006	85

LOCOMOTIVES.

Working Pressure.	Grate Area.	Heating Surface.			Weight of Engine.		Tender.		Engine and Tender.		Tractive Force.	
		Tubes.	Fire-box.	Super-heater.	On Coupled Wheels.	Total.	Coal.	Water.	Total Weight.	Total Wheel Base.	Pull.	At Per-cent. of Pressure.
lbs. sq in.	sq. ft.	sq. ft.	sq. ft.	sq. ft.	T. C.	T. C.		U.S.A. Galls.	T. C.		lbs.	%
250	70·0					163 0			244 0		98,706	85
205	70·0				117 0	151 10					57,850	85
205	70·0				89 7	140 0					41,845	85
	60·0											
193					74 3	119 8					39,500	85
							Oil. Galls.					
200	70·4	3,069	282	836	80 8	133 0	4,000	12,000	230 6	75 9½	43,660	85
200	82·5	4,722	399	1208	132 14	172 6	4,000	12,000	271 8	82 7½	75,150	85
215					275 10	305 8			401 2	{	176,600 / 147,200	Simple / Com-pound
							Tons					
210	74·9	3,266	232	945	119 14	131 12	16	15,000	252 4	74 1¼	68,200	85

Locomotive Types.

The classification of locomotives is by wheel arrangement. Abbreviations are used, the Anglo-American system denoting in their order leading carrying wheels, coupled wheels, and trailing carrying wheels by number of wheels to each group. Where there are no carrying wheels at either end a cipher is added. The letter T denotes a tank engine. Articulated engines are denoted by the wheel arrangement of their separate parts. The Continental system merely states number of axles coupled and total axles of engine, and gives the proportion of adhesive weight without specifying the actual arrangement of wheels. In addition to identity by wheel grouping, the various types receive code names in America. Example:

Diagram.	Code Name.	Anglo-American Notation.	Continental Notation.
	Atlantic	4–4–2	2–5
	Mogul	2–6–0	3–4

In France it is usual to classify a locomotive by groups of axles in their order, instead of by wheels: thus a 4–4–2 engine is known there as type 2–2–1; and a 2–6–0 engine is expressed as type 1–3–0.

Another system, coming into use in Germany and Switzerland, is similar to the French, but groups of coupled axles are represented by letters—A for one driving axle, B for two, C for three, etc.: so that a 4–4–2 engine becomes type 2–B–1. A 2–6–0 engine is denoted by 1–C only, a cipher not being necessary to indicate absence of carrying wheels with this system.

Types of Locomotives most generally used on British Railways.

Tender Engines.


Type.	Principal Use.	Type.	Principal Use.
0–6–0	Ordinary goods traffic	0–4–2	Branch passenger traffic
0–8–0	Mineral traffic	4–4–0	Fast passenger trains
2–8–0	Heavy traffic	4–4–2	Main line express
2–6–0	Mixed traffic	4–6–0	Heavy express
2–4–0	Branch passenger traffic		

Tank Engines.

Type.	Principal Use.	Type.	Principal Use.
0–4–0	Private yard shunting	0–4–2	Light passenger trains
0–6–0	Ordinary shunting	2–4–0	
		4–4–0	
0–8–0	Heavy shunting, banking and mineral trains	0–4–4	Suburban passenger trains
0–8–2		0–6–4	
0–8–4		2–4–2	
2–8–4			
4–8–0			
2–8–0			
2–6–2	Main line goods trains	2–6–4	Main line passenger trains
4–6–0		4 4–2	
0–6–2		4–4–4	
		4–6–2	
		4–6–4	

The particular uses of the various types of tank engines are not so well defined as with tender engines. Several of the engines specified for goods traffic are often used on passenger trains,

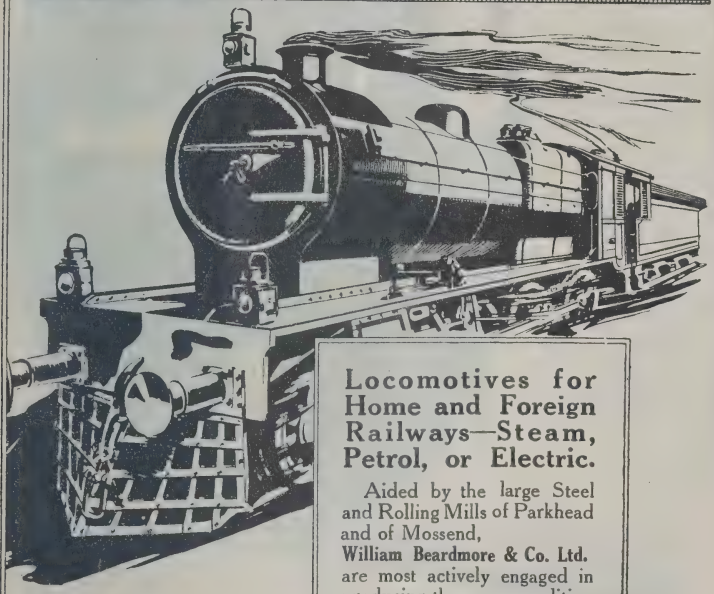BEARDMORE LOCOMOTIVES



Locomotives for Home and Foreign Railways—Steam, Petrol, or Electric.

Aided by the large Steel and Rolling Mills of Parkhead and of Mossend,
William Beardmore & Co. Ltd.
are most actively engaged in producing these commodities.

Address:
PARKHEAD, GLASGOW.
36 Victoria St., LONDON, S.W.1

WILLIAM
BEARDMORE
AND COMPANY LIMITED

BUILT-IN STRENGTH

Modern and massive equipment with an organisation which subjects details of material and manufacture to the closest scrutiny results in the uniform production of

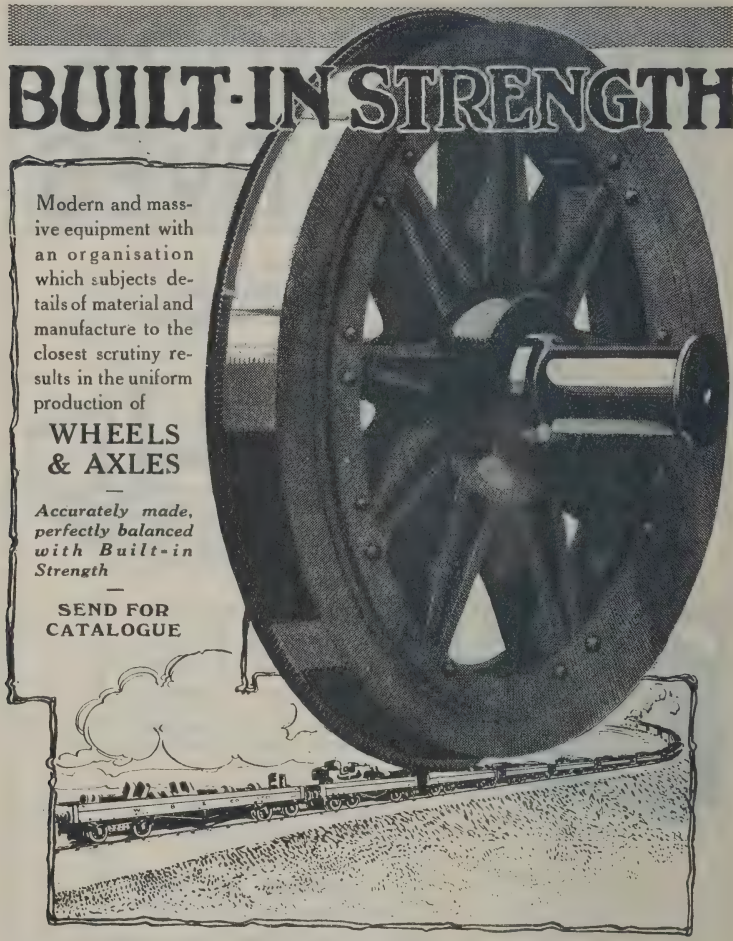
WHEELS & AXLES

—

Accurately made, perfectly balanced with Built-in Strength

—

SEND FOR CATALOGUE



WILLIAM

BEARDMORE

AND COMPANY LIMITED

PARKHEAD, GLASGOW.

and *vice-versa*. Generally speaking, the total adhesion type (i.e. engines without carrying wheels) are mostly used for shunting and local work. Carrying wheels are added as the water and coal capacity are enlarged to permit of greater radius of action. The tank engines with two or more pairs of carrying wheels are capable of travelling considerable distances without replenishing fuel and water.

General Design of Locomotives.

The principal limitations governing locomotive design are:—

(1) *Loading gauge*, giving extreme dimensions as to heights and widths.
(2) *Rail gauge*, affecting stability, etc.
(3) *The track*, which limits the maximum axle load.
(4) *Bridges*, the strength of which restricts the weight per ft. run over total wheel base.
(5) *Curves*, which limit the length of engine and determine rigid wheel base.

Other factors to be taken into consideration are:—

(1) *Loads*, as to weight and type of rolling stock.
(2) *Gradients*, both ruling and maximum.
(3) *Resistance of curves.*
(4) *Speed.*
(5) *Prevailing atmospheric conditions.*

These are inter-related, load becoming a maximum for both directions of travel when there are no gradients or curves and the speed is low. An increase in speed or the presence of gradients, curves, and side winds reduces loads.

Some further points to be looked into when designing new engines are:—

(1) *Length and strength of turn-tables* and clearances round them.
(2) *Engine sheds*, as to clearances, length of pits, etc.
(3) *Coal stages*, height of platform, method of coaling, etc.
(4) *Position of water columns* at stations and in yards in relation to signals and points.
(5) *Distance between available coal and water supplies.*
(6) *Capacity of workshops*, in regard to load on cranes, length of pits and traversers, necessity for special tools, etc.

The bulk of the work on British railways is done by tender engines of the 0–6–0 type for good and 4–4–0 type for passenger trains. Many of these engines are of fairly recent construction. Some of the older engines have been brought up to date by being rebuilt with larger boilers fitted with superheaters and with new cylinders provided with piston valves. The goods engines usually have cylinders 19 ins. × 26 ins. and wheels 5 ft. 0 ins. diameter; the passenger engines 20 ins. × 26 ins. cylinders and 6 ft. 6 ins. wheels. Boiler pressure is about 180 lbs. per sq. in., but with high degree of superheat it is usually some 10 lbs. less, while the diameter of cylinders is increased a little to compensate. The single-wheel engines once so numerous are now almost extinct on British railways, as are also compound engines, except on the Midland Railway.

For heavy passenger work the 4–4–2 and 4–6–0 types are resorted to. The former has no more adhesion than the 4–4–0 type, but increased boiler power permits heavy trains to be hauled

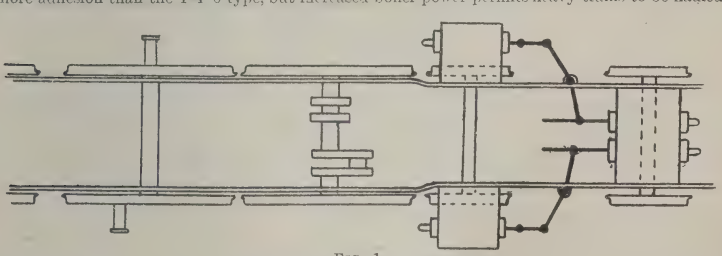


FIG. 1.

at high speeds. The 4–6–0 type can also take heavy trains at high speed or, alternatively, exceptionally heavy trains at moderate speed on account of its greater adhesive weight. For mineral traffic and long goods trains an eight-wheel coupled engine is used. The present tendency is to prefer the 2–8–0 to the 0–8–0 type, many of the latter having been converted to the former. The 2–6–0 type with wheels about 5 ft. 6 ins. is being used to an increased extent as a mixed traffic engine. It is especially suitable for fast goods, excursion trains, etc. In the large passenger and goods engines outside cylinders predominate. The advantages gained for the outside position are shorter wheel base, long connecting rods, no crank axle, direct drive through rods on all wheels horizontal cylinders. The distance between centres of cylinders is about 6 ft. 8 ins. and cannot

be reduced very appreciably on account of the necessity for finding sufficient bearing surface for coupling and connecting rods. Thus, the diameter of cylinders is limited by the remaining space within the load gauge, which varies on the different railways. Since the load gauge is at its narrowest near rail level, advantage can sometimes be gained by inclining outside cylinders so that they are brought up into a wider part of the gauge. The tendency to reduce wear and tear of boilers, by taking advantage of high superheat to economically lower steam pressure, results in

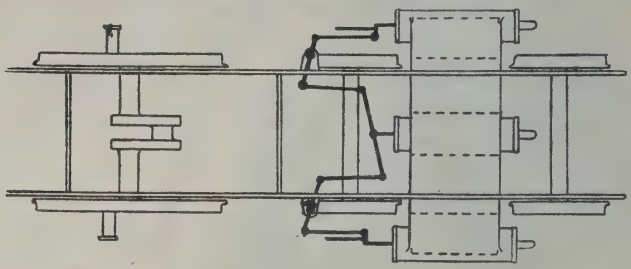


FIG. 2.

a demand for larger cylinder capacity. This can be met by increased diameter or stroke of cylinders, or both. Another way is to multiply the number of cylinders, hence three and four-cylinder high-pressure engines. Multi-cylinders are also being adopted for mechanical reasons, as they give better balancing and turning movement, less disturbance in running, subdivision of driving forces, increased bearing areas and other advantages. Multi-cylinder engines are necessarily more costly and complicated than two-cylinder. It is therefore desirable to reduce their working parts to a minimum. This can be done by providing two sets of valve gear only and operating the additional valve or valves through rocking levers attached to the valve gears. The arrangement adopted on the Great Western Railway four-cylinder engines is shown in fig. 1. Two sets of Walschaert gear drive the inside valves directly and the outside valves by means of rocking levers. The levers are not straight, the outer arms being set backwards, resulting in an

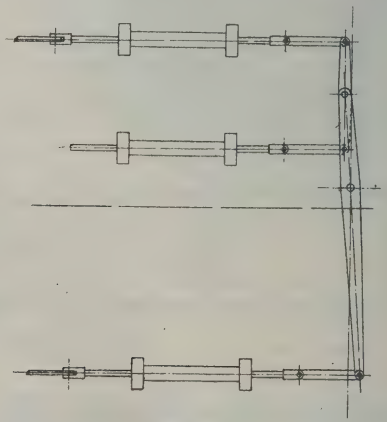


FIG. 3.

improvement of the valve events. The Lancashire and Yorkshire engines are similar to the above, but Joy's valve gear is used, and the rocking levers are straight with equal lengths of arms. The London and North Western engines have Walschaert valve gear outside the frames and work the inside valves through straight rocking levers. All cylinders drive on one axle.

Three-cylinder engines can be arranged in a similar manner, and the analogy is best shown by fig. 2, which illustrates Holcroft's three-cylinder system. The combined movement from two

outside valve gears is used for the additional valve, the shorter arms of rocking levers on either side of the engine being attached to each valve gear and the longer arms to a combination lever. The third valve is driven from the centre of this lever. When the cranks are at 120° to one another the arms of the rocking levers are in ratio 1 : 2. A modification of this design is in use on the Caledonian Railway, and some German engines are so fitted.

Fig. 3 shows Gresley's arrangement as used on the Great Northern Railway three-cylinder engines of the 2–6–0 and 2–8–0 types. A long lever at the front of the engine is pivoted to a cross stretcher on the frame, the ratio of the arms being as 2 : 1. The longer end is attached to the tail spindle of the right-hand valve. To the shorter end another lever with equal arms is pivoted at its centre. The outer end of this is attached to the spindle of the left-hand valve, and the inner end to the spindle of the inside valve, all valves being in line and set at the same inclination ; but in order that the crosshead may clear the leading coupled axle, the inside cylinder is inclined 1 in 8. The valves of the outside cylinders are, of course, directly operated by two sets of Walschaert valve gear. A variation of the same principle is in use in Germany, in which one rocking shaft having equal arms is mounted on the shorter arm of another rocking shaft having arms in ratio 2 : 1.

Four-cylinder high-pressure locomotives are in use on the Continent. In some of these there is a single piston valve for each pair of cylinders, one of which has crossed ports. In others a double-headed piston valve is used, as in the Dendy-Marshall system. British practice favours separate valves for each cylinder.

Four cylinders are more used in fast passenger engines. Since the forces and masses in each pair of motions are opposed, the balancing is good and the disturbances to smooth running reduced. The mechanical efficiency is high, but otherwise there is little advantage over two cylinders. Owing to the more regular turning moment, three cylinders are applied to engines in which the most is to be made of the available adhesion. The ' Atlantic ' type represents one instance and heavy shunting tanks another. In the latter instance there is the further advantage of six exhaust beats per revolution in place of four, with less disturbance to the fire when working slowly.

Tank engines are used for fast passenger trains on the Midland Railway (Tilbury section), Metropolitan Railway (Aylesbury extension), and to some extent on the London, Brighton and South Coast Railway.

Some recent American locomotives are of enormous size. For the heaviest freight traffic Mallet articulated compounds are in use on the Virginian R.R. weighing with tender nearly 400 tons, a pair of cylinders being added to the tender to make use of its adhesive weight, the total tractive effort being about 80 tons. On the Southern R.R. engines of the ' Mikado ' or 2–8–2 type are provided with steam tenders made from obsolete engines of the 2–8–0 type, in which the boiler is removed and a water tank substituted. For passenger traffic in mountain sections the Canadian Pacific Railway has engines of the 4–8–2 type with 5 ft. 3 in. wheels, cylinders 23½ ins. diameter by 32 ins. stroke, heating surface 5,123 sq. ft. and grate area 60 sq. ft. The axle loads on the Pennsylvania R.R. reach 30 tons. In order to reduce dynamic loading of wheels the reciprocating parts are of alloy steel. With small wheels the revolving masses must likewise be reduced, since it is not always possible to make the balance weights in the wheel large enough. Outside valve gears such as the Walschaert, Baker-Pilliod, or Southern are general, and piston valves are of large diameter with inside admission. The two-cylinder engine with superheater has superseded all compounds, except the Mallet type. Multi-cylinder engines are not favoured. Tank engines are uncommon, even switching engines having tenders.

TRAIN RESISTANCE.

Resistance of Air to Train.

(1) The area of resistance presented by the first carriage is its front superfices ; that of the following carriages, about 10 square feet, but depending upon the distance between them.

Q = resistance of air, in lbs. A = surface of resistance, in sq. ft. = about 70 ft. + $10(n-1)$ for railway waggons, where n = number of waggons in train. (54 ft. according to M. Vuillemin, &c., 50 ft. Unwin.) v = velocity, in feet per second. $e = 1{\cdot}43$ for a thin surface = $1{\cdot}17$ for a cube, = $1{\cdot}07$ for a train of 5 waggons, = $1{\cdot}04$ for a train of 25 waggons.

$$Q = {\cdot}0011896 e A v^2 \text{ (Pambour).}$$

(2) If P = pressure on the front ends in pounds per square foot ; V = velocity in miles per hour :—

$$P = {\cdot}00265\ V^2.$$

Assuming that the superficial area of the front end to be about 75 sq. ft., the following table shows the total pressure and the power required to overcome that pressure at various speeds :—

Speed in miles per hour.	Total pressure, lbs.	H.p.
20	79·5	4·24
40	318·0	33·92
60	715·5	115·28
80	1272·0	271·36
100	1987·5	530·0

It will be seen that at speeds below 40 miles an hour the effect of head end resistance is practically negligible; but at speeds of 60 miles an hour or more the power required to overcome head end resistance is by far the most important element in train resistance. As the number of cars in a train is increased, the relative effect of head end resistance is decreased.

An engineer of the firm which furnishes electric locomotives for the Simplon Tunnel says that at a speed of 50 miles an hour in the tunnel the air-resistance absorbs 400 horse-power, or 40 per cent. of the capacity of the locomotive, against 95 horse-power in the open air.

Resistance to Traction on a Level Railroad.

The most complete record of experiments on Train Resistance is probably that of Mr. J. A. F. Aspinall, given in a paper by him read before the Institution of Civil Engineers, November 26, 1901, and published in vol. 147, May 1902, of the Proceedings of the Institution. The conditions vary so much with the character of the train and other factors that no definite formulæ covering all cases and separating the various resistances making up the total can be given. The following are the principal formulæ given in the Proceedings referred to, abstracted from a list of 55, dating from that of Clark in 1855.

FORMULÆ FOR TRAIN RESISTANCE.

R = tractive resistance in lbs. per ton (2,240 lbs.).

V = velocity in miles per hour.

W = weight of engine and tender in tons (2,240 lbs.).

w = ,, carriages ,, ,,

A = area of front of train in square feet.

L = length of train in feet.

No.	Authority.	Value of R.	Conditions.	Reference.
1	Clark	$8+\frac{V^2}{171}$	Whole train	D. K. Clark, 'Railway Machinery,' 1855, p. 297.
2	,,	$6+\frac{V^2}{240}$	Carriages only	
3	,,	$12+\frac{V^2}{114}$	Whole train Narrow gauge	Z. Colburn, 'Locomotive Engineering,' 1871, p. 291.
4	,,	$\left\{6+\frac{V^2}{240}+\left\{\left(\frac{2+V^2}{600}\right)\times\left(\frac{W+w}{W}\right)\right\}\right\}$	Engine and train	
9	Wellington	$4{\cdot}48+\frac{V^2}{116}$	20 loaded box cars (Up to 30 miles per hour)	Trans. Am. Soc. C.E., vol. viii. p. 52.
10	,,	$6{\cdot}72+\frac{V^2}{94{\cdot}7}$	40 empty box cars (Up to 30 miles per hour)	
11	,,	$\frac{V^2}{100{\cdot}8}$	20 loaded flat cars (Up to 30 miles per hour)	
12	,,	$\frac{V^2}{72{\cdot}3}$	40 empty flat cars (Up to 30 miles per hour)	
13	,,	$4{\cdot}48+\frac{V^2}{162}$	Engine and train	A. M. Wellington, 'Economic Theory of the Location of Railways,' 1887, p. 497.
14	,,	$4{\cdot}48+0{\cdot}0056\,V^2+0{\cdot}46\frac{V^2}{w}$	Carriages only	*Street Railway Journal*, 1899, p. 144.
22	Baldwin Co.	$3{\cdot}36+\frac{0{\cdot}56\,V}{3}$	—	*Engineering*, vol. lxviii. p. 1850.
23	,,	$1{\cdot}68+0{\cdot}224V$	47 to 77 miles per hour	*Railway Gazette*, 1897, p. 198.

FORMULÆ FOR TRAIN RESISTANCE—*continued.*

No.	Authority.	Value of R.	Conditions.	Reference.
24	Blood	$4{\cdot}48+0{\cdot}168V+0{\cdot}336\frac{V^{1{\cdot}8}}{W+w}$	—	*Street Railway Journal*, 1899, p. 145.
32	Clayton	$6{\cdot}5+0{\cdot}16\,V$	Oil-lubrication	—
33	,,	$6{\cdot}5+0{\cdot}005V^2$	Grease-lubrication	—
35	Deeley	$3+\frac{V^2}{290}$	—	*The Engineer*, vol. lxxxv. p. 276.
36	Wolff	$3+\frac{V^2}{250}$	—	Students' Paper, Inst. C.E., 1898.
37	,,	$3\left(\frac{V+12}{V+3}\right)+\frac{V^2}{300}$	—	*Mechanical Engineer*, 1899, p. 256.
38	Eastern Railway of France	$0{\cdot}305V+5{\cdot}24-\frac{w}{89{\cdot}2}$	—	*Railway Engineer*, vol. ii. p. 344.
39	,,	$0{\cdot}305V+4{\cdot}1$	Train only $w=102{\cdot}6$ tons	
40	,,	$3{\cdot}96+0{\cdot}18V$	$w=185$ tons 7·5 to 20 miles per hour	*Street Railway Journal*, 1899, p. 143.
41	,,	$4{\cdot}032+0{\cdot}289V+0{\cdot}28\frac{V^2}{w}$	20 to 31 miles per hour	
42	,,	$4{\cdot}032+0{\cdot}289V+0{\cdot}194\frac{V^2}{w}$	31 to 40 miles per hour	
43	,,	$4{\cdot}032+0\,505V+0{\cdot}129\frac{V^2}{w}$	43 to 50 miles per hour	
48	Barbier	$3{\cdot}58+1{\cdot}658V\times\left(\frac{1{\cdot}609V+50}{1000}\right)$	Four-wheeled coaches	*Le Génie Civil*, April, 1898, and Bulletin of the International Railway Congress, vol. xii. p. 1275.
49	,,	$3{\cdot}58+1{\cdot}644V\times\left(\frac{1{\cdot}609V+10}{1000}\right)$	Bogie coaches	
50	,,	$8{\cdot}51+3{\cdot}24V\times\left(\frac{1{\cdot}609V+30}{1000}\right)$	Locomotive and tender	
51	Aspinall	$2{\cdot}5+\frac{V^{\frac{5}{3}}}{58{\cdot}7}$	5 bogie coaches and dynamometer-car	
52	,,	$2{\cdot}5+\frac{V^{\frac{5}{3}}}{65{\cdot}82}$	10 bogie-coaches and dynamometer-car	
53	,,	$2{\cdot}5+\frac{V^{\frac{5}{3}}}{73{\cdot}05}$	15 bogie-coaches and dynamometer-car	
54	,,	$2{\cdot}5+\frac{V^{\frac{5}{3}}}{80}$	20 bogie-coaches and dynamometer-car	
55	,,	$2{\cdot}5+\frac{V^{\frac{5}{3}}}{50{\cdot}8+0{\cdot}0278L}$	General formula, bogie-coaches, oil axleboxes	

Oil axleboxes

Resistance of Curves.

Resistance due to curvature of track varies inversely as the radius, and directly as the rail-gauge and length of rigid wheel base. It also depends to some extent on the state of the surfaces of wheels and rails. The practice of watering the rails or lubricating the flanges of the wheels lessens the resistance, whilst the occasional necessity of sanding the rails for the locomotive

greatly increases it. On main lines the curve resistance is usually very small, and no allowance is made for it. In special cases, where the curves are sharper, such as in sidings, station yards, or at junctions, it is sometimes necessary to form some estimate of the resistance. The American Master Mechanics' Association gives the resistance per ton (of 2,240 lbs.) as 0·77 lbs. for each degree of curvature of track in the case of cars (with bogies), and double this amount—1·54 lbs. —for locomotives.

In British practice, curvature is expressed by the radius in feet or chains. As 1° of curvature corresponds to a radius of 5,730 feet, the radius of any curve in degrees is given in feet by $\frac{5730}{x^\circ}$ or in chains by $\frac{87}{x^\circ}$.

$$\text{Resistance in lbs. per ton} = \frac{4412}{\text{radius in ft.}}; \text{ or } \frac{67}{\text{radius in chains}} \text{ for cars.}$$

$$\text{,, ,,} = \frac{8824}{\text{radius in ft.}}; \text{ or } \frac{134}{\text{radius in chains}} \text{ for locomotives.}$$

To find the equivalent up-gradient, 1 in n, that offers same resistance as curve :—

$$n = \text{radius in ft.} \times 0{\cdot}5.$$
$$= \text{radius in chains} \times 33.$$
$$= \frac{2871}{\text{curvature in degrees}}$$

Resistance due to Gradients on Railways.

The force, F, required to move 1 ton up a slope of 1 in n, neglecting friction and resistance of air $= \frac{1 \text{ ton}}{n} = \frac{2240 \text{ lbs.}}{n}$, or resistance in lbs. due to gravity on any incline $= \frac{2{,}240}{\text{rate of gradient}}$ per ton of train.

On a gradient of 1 in 300 the total resistance becomes about twice that on a level at a speed of 30 m.p.h., and therefore only half the utmost load can be carried, or the speed must be diminished. Gradients above 1 in 330 are considered first class ; 1 in 330 to 1 in 150, fair working gradients.

In American and Continental practice, gradient is given as rise per cent. or per thousand, so that grade of 1 in $n = \frac{100}{n}$ per cent., or $\frac{1000}{n}$ per thousand. Thus 1 in 300 = 0·33 per cent. or 3·3 per mille.

Rise in feet per mile $= \frac{5280}{n}$, or 17·6 ft. for 1 in 300.

Effect of Gradients on Speed of Passenger Trains.

The work done by the locomotive in a given time is proportional to total resistance × speed. For speeds over 25 m.p.h. on the level, the resistance of an average engine and train may be fairly represented in lbs. per ton by the simple formula $R = 5 + {\cdot}003v^2$. The work done on the level is therefore proportional to $v\,(5 + {\cdot}003v^2)$. On a gradient of 1 in n this becomes $v\left\{(5 + {\cdot}003\,v^2) + \frac{2240}{n}\right\}$. If the engine is capable of maintaining a speed of 60 m.p.h. on the level, and the horse-power output is constant, the effect of the gradients on the speed is as follows :—

Inclination	Level	1 in 2,500	1 in 1,000	1 in 750	1 in 500	1 in 250	1 in 150	1 in 120	1 in 100	1 in 90	1 in 80	1 in 70
Speed { Miles per hour	60	59	57	55	53	47	40	36	33	31	28	26

TABLE SHOWING THE SPEED OF AN ENGINE WHEN THE TIME OF PERFORMING A QUARTER, HALF, OR ONE MILE IS GIVEN.

Speed per Hour.	Time of Performing			Speed per Hour.	Time of Performing			Speed per Hour.	Time of Performing		
	¼ Mile.	½ Mile.	1 Mile.		¼ Mile.	½ Mile.	1 Mile.		¼ Mile.	½ Mile.	1 Mile.
Miles.	M. S	M. S.	M. S.	Miles.	M. S.	M. S.	M. S.	Miles.	M. S.	M. S.	M. S.
5	3 0	6 0	12 0	34	26	53	1 46	63	14	28	57
6	2 30	5 0	10 0	35	25	51	1 43	64	14	28	56
7	2 8	4 17	8 34	36	25	50	1 40	65	13	27	55
8	1 52	3 45	7 30	37	24	48	1 37	66	13	27	54
9	1 40	3 20	6 40	38	23	47	1 34	67	13	27	54
10	1 30	3 0	6 0	39	23	46	1 32	68	13	26	53
11	1 21	2 43	5 27	40	22	45	1 30	69	13	26	52
12	1 15	2 30	5 0	41	21	43	1 27	70	12	25	51
13	1 9	2 18	4 37	42	21	42	1 25	71	12	25	51
14	1 4	2 8	4 17	43	20	41	1 23	72	12	25	50
15	1 0	2 0	4 0	44	20	40	1 21	73	12	25	49
16	56	1 52	3 45	45	20	40	1 20	74	12	24	49
17	53	1 46	3 31	46	19	39	1 18	75	12	24	48
18	50	1 40	3 20	47	19	38	1 16	76	12	24	47
19	47	1 34	3 9	48	18	37	1 15	77	11	23	47
20	45	1 30	3 0	49	18	36	1 13	78	11	23	46
21	42	1 25	2 51	50	18	36	1 12	79	11	23	46
22	40	1 21	2 43	51	17	35	1 10	80	11	22	45
23	39	1 18	2 36	52	17	34	1 9	81	11	22	44
24	37	1 15	2 30	53	17	34	1 7	82	11	22	44
25	36	1 12	2 24	54	16	33	1 6	83	11	21	43
26	34	1 9	2 18	55	16	32	1 5	84	10	21	43
27	33	1 6	2 13	56	16	32	1 4	85	10	21	42
28	32	1 4	2 8	57	15	31	1 3	86	10	21	42
29	31	1 2	2 4	58	15	31	1 2	87	10	20	41
30	30	1 0	2 0	59	15	30	1 1	88	10	20	41
31	29	58	1 56	60	15	30	1 0	89	10	20	40
32	28	56	1 52	61	14	29	59	90	10	20	40
33	27	54	1 49	62	14	29	58				

Resistance of Locomotives

The resistance of a locomotive is a very uncertain quantity, and there is no formula which can take account of all the variables. There are, however, several formulæ which give results approximating to the average resistances in ordinary working.

The resistance may be divided into three components:—

(1) Internal resistance of engine machinery, including driving wheels.
(2) Resistance of locomotive as a vehicle, including head-on air resistance.
(3) Resistance of tender as a vehicle.

According to Prof. W. F. Goss, the internal resistance is fairly constant for any given cut-off for a wide range of speed, but that the later the cut-off, and consequently more even the turning moment, the less the friction.

As a vehicle the locomotive not only has the usual rolling resistance, journal friction, etc., but it has to encounter the atmospheric pressure on the surfaces perpendicular to the direction of travel, and it shelters to some extent the train behind.

The reaction of the steam pressure on the cylinder covers, applied alternatively to either side of the engine, causes it to move in a sinuous path and sets up further flange friction.

The tender has a resistance very similar to any other vehicle of the train, but it is modified a little by the movement of the engine to which it is closely coupled.

Prof. Goss gives as total resistance of engine and tender,

$$\mathrm{WR} = 3{\cdot}8\ \frac{d^2 l}{\mathrm{D}} - w(2 + \tfrac{1}{5}\mathrm{V}) - 0{\cdot}11\mathrm{V}^2,$$

where d = diameter of piston in inches, l = stroke in inches, D = diameter of drivers in inches V = speed in m.p.h., and w = total weight of engine and tender (W) less weight on drivers in tons (of 2,000 lbs.)

This formula does not take into account the increase in friction with the number of pairs of coupled wheels.

Mr. Lawford H. Fry gives separate formulæ for engines with 4, 6, and 8 coupled wheels, which in lbs. per ton (2,240 lbs.) of engine and tender can be expressed as :—

$$\begin{aligned} R &= 8{\cdot}5 + 0{\cdot}09V + 0{\cdot}004V^2 \text{ for 4 wheels coupled.} \\ &= 10{\cdot}0 + 0{\cdot}12V + 0{\cdot}004V^2 \text{ for 6 wheels coupled.} \\ &= 13{\cdot}4 + 0{\cdot}48V + 0{\cdot}004V^2 \text{ for 8 wheels coupled.} \end{aligned}$$

The equations are derived from the mean of the results obtained by numerous European experimenters. (*The Engineer.*)

About 22 lbs. per ton at 50 m.p.h. is the usual resistance of a British 4-4-0 type engine ; and at 60 m.p.h. some 4 h.p. per ton is expended in moving the engine and tender.

In order to see how much power the locomotive absorbed as compared with the train, a certain number of experiments were tried on the Lancashire and Yorkshire Railway, and it was found that the ten-wheeled engine No. 1392 absorbed 34 per cent, of the total horse-power. Mr. W. M. Smith (the Institution of Mechanical Engineers) gave the result of his experiments as about 36 per cent. of the total horse-power. Probably 34 per cent. or 36 per cent. was about the right percentage, other figures being much too high ; but the actual figure depends on the load behind the engine.

Train Acceleration.

The resistances to be overcome in moving a train are frictional and gravitational. Any draw-bar pull in excess of them is available for accelerating the train ; or

$$F = T - W(R_1 + R_2 \pm R_3),$$

where F is accelerating force in lbs., T is tractive effort in lbs., W weight of train in tons, and R_1 R_2 and R_3 the opposition to traction in lbs. per ton due to train resistance, curves and gradients respectively. A negative result indicates retardation.

For the actual acceleration or retardation produced, allowing 10 per cent. for rotary acceleration of wheels and axles,

$$a = \frac{F \times 32}{1{\cdot}10W \times 2240} = \frac{F}{77W} \text{ ft./sec.}^2$$

In American practice about 5 per cent. is allowed for rotary acceleration, as the car wheels are smaller in diameter and also bear a lesser ratio to the weight of car.

To produce a speed of V miles per hour in distance S feet,

$$F = \frac{82V^2W}{S} \text{ lbs. ; or } F = \frac{82(V^2 - v^2)W}{S} \text{ lbs., } v \text{ being initial speed.}$$

To produce a speed of V miles per hour in t seconds,

$$F = \frac{112VW}{t} \text{ lbs. ; or } F = \frac{112(V - v)W}{t} \text{ lbs.}$$

Power, Tractive Force, and Adhesion of Locomotives.

The pressure exerted on the piston is to the force exerted in the traction of the train inversely as the velocities of the piston and train, i.e., as twice the stroke of the piston to the circumference of the wheel.

Piston Speed.—Ordinary piston speed is about 900 feet per minute.

d = diameter of piston, in inches. a = area of piston, in sq. inches. l = length of stroke, in inches. p = indicated pressure per square inch, in lbs. D = diameter of driving-wheel, in inches. V = velocity, in miles per hour. n = number of revolutions per minute = $336\frac{V}{D}$.

$$\text{Tractive force at rails} = \frac{d^2 lp}{D} \text{ lbs.}$$

$$\text{Indicated horse-power} = \frac{d^2plV}{375D} = \frac{4anpl}{33{,}000} \times \tfrac{1}{12}.$$

The calculated tractive (or starting) effort

$$T = \frac{cd^2Pl}{D} \text{ lbs.}$$

where P = boiler pressure and c is a coefficient varying from 0·8 to 0·9. The lower figure more nearly represents the net draw-bar pull and the higher figure the effort at rim of driving wheels. There is no general rule. The Great Western Railway takes 90 per cent. of boiler pressure, the Great Northern and Great Central 85 per cent., the London and South Western and the South Eastern and Chatham 80 per cent. In American practice 85 per cent is usual.

The above relates to the ordinary two-cylinder high-pressure engines. Multiply results by 1·5 for three-cylinder, and by 2 for four-cylinder locomotives. (For compound locomotives see p. 589).

The horse-power given out at the draw-bar is less than the indicated horse-power by the amount expended in moving the engine and tender. This is approximately 400 h.p. in modern

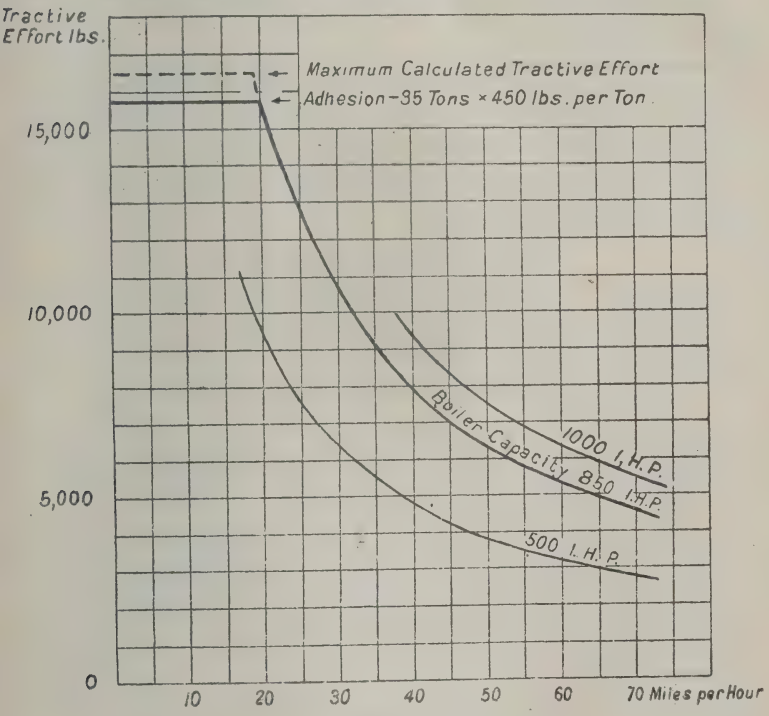


FIG. 4.

locomotives running at 60 m.p.h., representing about 35 per cent. of the maximum indicated horse-power. (See Resistance of Locomotives.)

Draw-bar horse-power = 5·97 × pull (in tons) × speed (m.p.h.)
or 0·0267 × pull (in lbs.) × speed (m.p.h.).

Ordinary locomotives are capable of developing from 9 to 12 horse-power for each ton of their weight (inclusive of tender).

T = tractive force at drivers ; t = draw-bar pull ; H = square feet of heating surface ; V = speed in m.p.h. ; d = diameter of piston in inches ; L = stroke in inches ; D = diameter of drivers in inches ; W = weight of engine and tender, less weight on drivers (in tons of 2,000 lbs.).

$$T = 161\frac{H}{V}. \quad ; \quad t = 161\frac{H}{V} - 3{\cdot}8\frac{d^2 L}{D} - W(2 + \tfrac{1}{6}V) - 0{\cdot}11\,V^2.$$

Professor Goss (*'Railroad Gazette,' Jan.* 17, 1902).

In the English climate it is not safe to count upon more than 450 lbs. of adhesion per ton of load on the coupled axles. (*E. A. Johnston*, 1913.)

The proportion of the weight on the driving wheels giving *adhesion* and available as tractive force varies considerably, from about 200 lbs. per ton in frosty and greasy weather to 600 lbs. in dry weather. It must, of course, exceed the tractive power, and is generally taken at about 350 lbs. per ton, this being quite feasible, as all locomotives are fitted with a sanding arrangement.

In average British practice, the factor of adhesion, that is, the ratio between adhesive weight and calculated tractive effort, is between 4 and 5 for four and eight-wheel coupled engines, and between 5 and 6 for six wheels coupled. In tank engines the factor varies with the amount of water and coal present.

The relation between horse-power, tractive effort, and adhesion, is shown by the characteristic curve of a locomotive in fig. 4, where tractive effort is plotted against speed. Horse-power appears on the diagram as a hyperbolic curve, since for any given horse-power pull × speed = a constant. In the example given the maximum calculated tractive effort is 16,500 lbs. The actual pull is limited by adhesion to 15,750 lbs., adhesive weight being 35 tons and the adhesion 450 lbs. per ton. The boiler capacity is taken as 850 i.h.p. and is plotted as a hyperbolic curve. The intersection of the curve with the maximum available tractive effort gives the lowest speed at which the boiler is fully used. Until this point is reached horse-power is limited by cylinder capacity or adhesion, as the case may be. Beyond it, the horse-power is approximately constant and the pull falls off as the speed rises. A deduction must be made for engine and tender resistance to obtain actual draw-bar pull.

Weight Restriction in Locomotives.

On English railways the heaviest load is 20 tons, but there are practically no lines in this country on which the permissible axle load exceeds 20 tons.

The axle loads carried with the goods engines are about 15 tons in Germany and Italy, 17 tons in England, Belgium, and France, and 23 to 27 tons in the United States.

The following is a formula given by F. J. E. Spring for locomotive driving-wheels :—

Safe load = 200 × diameter of wheel in inches × width of rail head on which wheel bears in inches.

In addition to restriction of individual loads on wheels, the total weight of a locomotive is limited by the strength of permanent-way structures. In designing a new locomotive, or rebuilding an existing one, it is essential to study the resulting bending moment imposed on bridges. This varies with the total length of engine, wheel base and spacing of wheels, and the weights on individual pairs of wheels. A short engine with the wheels close together may stress a bridge more than a heavier engine in which the weight is spaced over a longer base. The locomotive engineer, however, is not concerned in the actual stresses produced, but his problem is to keep within the boundaries of a limiting bending moment curve. The permanent way engineer sets out the strength of the weakest bridges of various spans, and from them deduces a curve showing the maximum equivalent uniformly distributed load that the different spans can sustain. The curve is either set out giving the total load on the spans, or the tons per foot run of span. In fig. 5 the upper curve shows a limit determined by the permanent-way engineer in lbs. per ft. run. No locomotive may run that sets up on any bridge a greater bending moment than this. If the excess is small, a slight modification of the wheel spacing or distribution of loads may rectify matters. As the locomotive constitutes a rolling load, any direct calculation is very tedious. The loads must be advanced across the span a foot or so at a time, and the bending moment ascertained for each step. It is obvious that maximum bending will occur under one of the loads, but it is not always certain which load it is. The maximum also changes from under one wheel to another at a certain point. The most satisfactory way is to first of all solve the problem graphically : if care is taken the results are very reliable. Once a solution is obtained the bending moment can be exactly calculated, and this acts as a check on the drawing and reading of scales. For the loading of the span it is assumed that there are several locomotives of the type under consideration, coupled together. As an example of the method, a 4–4–0 type engine is taken, the loads and spacing of wheels being shown on the line diagram at the foot of fig. 5. The first step is to set up a vertical line and mark it off to a convenient scale, say 1 in. = 10 ft., to represent the wheel loads to scale. Thus, *c*–*d* is the weight on the leading bogie wheels, *d*–*e* on the next pair, *e*–*f* that on the first pair of coupled wheels, and *f*–*g* for the trailing wheels. The loads on tender wheels are represented by *g*–*h*, *h*–*j*,

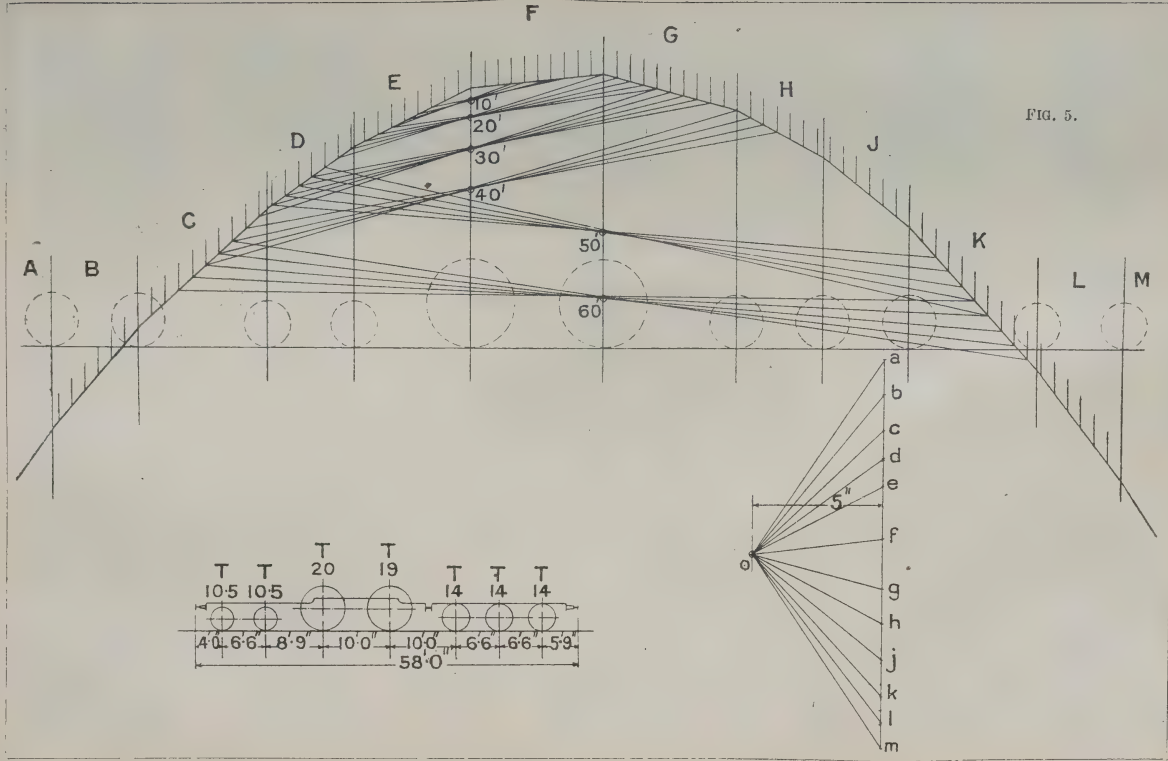

F
G
E
H
D
J
C
K
A
B
L
M
10'
20'
30'
40'
50
60
a
b
c
d
e
5"
f
o
g
h
j
k
l
m
T
T
T
T
T
T
T
T
10·5
10·5
20
19
14
14
14
4'0"
6'6"
8'9"
10'0"
10'0"
6'6"
6'6"
5'9"
58'0"

FIG. 5.

j–k. The length *a–b*, *b–c*, are tender wheels of the preceding engine; while *k–l*, *l–m*, are for bogie wheels of the following engine. If the span is a long one more loads must be added in their proper order. Having done this a pole O is taken, approximately in line with the centre of gravity of the loads, and at a distance of, say, 5 ins. from the vertical line. The various points on the line are then joined to the pole. The next step is to draw a horizontal base line and mark on it the wheel base of the engine to a scale of, say, $\frac{1}{2}$ in. = 1 ft. Verticals are projected through the points, and the spaces are lettered A, B, C, etc., to correspond with the letters *a*, *b*, *c*, etc., on the vertical load line.

Commencing at any convenient place, a line is drawn through space A parallel to the polar line *o–a*. This is followed by line through space B parallel to *o–b*, and so on until complete. For convenience a number of vertical lines are spaced at intervals representing each foot of the span. In order to ascertain the bending moment for a 10-ft. span, the intersection of a vertical with the curve is joined to another ten spaces away and scaling 10 ft. when measured horizontally. The next and succeeding points are treated in the same way, and it will soon be evident where the greatest bending moment is enclosed. This is equivalent to moving the bridge span along under the engine. Having ascertained the greatest bending for a 10-ft. span, that for a 20-ft.

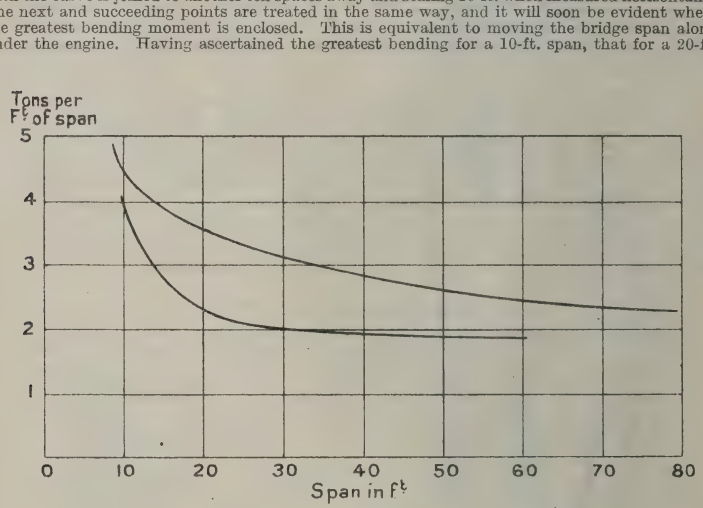


FIG. 6.

is obtained in the same way by joining verticals 20 ft. apart. The 30, 40, 50 ft., etc., spans are treated in like manner. It will be observed that the maximum B.M. moves from under the driving to the trailing wheels between 40- and 50-ft. spans. The maximum B.M. can be scaled by measuring vertically, and the results tabulated. If 1 in. = 10 tons of weight, and 1 in. = 2 ft. of span, and the polar distance is 5 ins., the scale of bending will be 1 in. = $10 \times 2 \times 5 = 100$ ton-ft. The final step is to obtain the equivalent uniformly distributed load by equating each result to it—i.e., B.M. $= \frac{WL}{8}$, so that $W = \frac{8 \times \text{B.M.}}{L}$, where W = total distributed load on span. For load per ft. run of span, B.M. $= \frac{w l^2}{8}$, and $w = \frac{8 \times \text{B.M.}}{l^2}$.

The results obtained can be plotted on the bridge curve supplied by the permanent-way engineer (as the lower curve in fig. 6), and unless all the plotted points fall below the upper curve, the design of the engine will have to be modified in some way, either by reduction of weight, or possibly by an alteration to the wheel base, or the addition of another pair of wheels.

When the position of maximum bending and the loads producing it are known, calculation is a simple matter, and it acts as a check on the graphical working. The position of load system giving maximum bending is such that the centre of span bisects the distance between point of maximum bending and centre of gravity of loads on span.

Detailed Weights of Parts of a Locomotive.

LIST OF THE ACTUAL WEIGHTS OF THE VARIOUS PARTS OF A GREAT EASTERN RAILWAY GOODS ENGINE AND TENDER, V 14 CLASS.

ENGINE.

Boiler.

	t.	c.	q.	lbs.
Boiler shell, dome, and dome cover (steel)	3	11	2	14
Tube plate (steel)	0	4	3	6
Boiler mountings	0	7	1	0
Foundation ring (wrought iron)	0	3	2	11
Fire-hole ring (wrought iron)	0	1	1	9
11 longitudinal stays (wrought iron)	0	7	0	19
Support for longitudinal stays	0	0	2	13½
Regulator rod (wrought iron)	0	1	0	0
Internal steam pipes (copper)	0	1	1	20
4 angle irons for roof bar slings (steel)	0	1	1	8
2 angle irons for expansion brackets	0	0	3	16
Angle iron for regulator	0	0	0	2½
2 hand rails	0	0	1	15
	5	1	1	22

Fire-box.

Copper fire-box	1	5	2	5
8 roof bars (cast steel)	0	13	0	10
Roof bar bolts (wrought iron)	0	1	0	9
8 roof bar slings	0	0	1	24
16 roof bar sling pins	0	0	1	16
633 copper stays, 1 in. diameter	0	6	0	7
	2	6	2	15

Tubes.

250 tubes, 1⅝ in. outside diameter (steel)	1	14	0	4
	1	14	0	4

Smoke-box.

Smoke-box door (wrought iron)	0	4	0	11
„ front (steel)	0	2	0	10
„ side plates (wrought iron)	0	3	0	27
Smoke-box door lugs and pin	0	0	0	10
Hand rail complete	0	0	0	23½
Dart	0	0	0	19
Cross bar and pins for dart (wrought iron)	0	0	2	17½
2 castings for cross bar	0	0	0	20½
Blower	0	0	0	10
„ pipes (external)	0	0	0	11
„ rod	0	0	0	24½
Chimney (barrel wrought iron, base steel)	0	1	1	19
Blast pipe and cap (cast iron)	0	1	2	9
„ gear	0	0	0	18
„ rod	0	0	0	27½
Elbow for steam pipe (cast iron)	0	0	2	2½
Steam pipe complete (copper with brass flanges)	0	0	3	0
Protection plate for tube plate (cast iron)	0	0	2	21
	0	16	2	1

Ash-pan.

	t.	c.	q.	lbs.
Ash-pan (wrought iron)	0	5	2	15
Supports for fire-bars (wrought iron)	0	1	0	21
Fire-bars (cast iron)	0	10	1	20
Damper gear complete	0	0	1	1
Set of ash-pan studs	0	0	0	9½
	0	17	2	10½

Lagging.

Wood lagging complete	0	4	3	25
Steel lagging and bands complete	0	7	1	10
Smoke-box brass ring	0	0	0	18
Fire-box coping ring	0	0	0	26
Dome casing	0	0	2	2
Safety valve casing (bottom steel, top cast iron)	0	1	0	7
	0	14	1	4

Cab.

Cab, sides, weather-board, and roof (sides and weather-board wrought iron, roof wood)	0	12	2	8
Pressure gauge	0	0	0	6
„ „ pipe	0	0	0	0½
Whistle rod and guide	0	0	0	7
Staff holder	0	0	0	5
2 hand rails complete	0	0	0	23
2 number plates (brass)	0	0	1	14
Sight-feed lubricator (Stone's)	0	0	0	26
„ „ pipes (copper)	0	0	1	6
2 windows (brass frames)	0	0	1	4
2 hand rail sockets	0	0	0	4
	0	14	0	19½

Frames, Frame Stays, &c.

2 inside frames (steel)	2	3	0	22
Angle iron on inside frames (wrought iron)	0	1	1	6½
2 outside frames (wrought iron)	0	6	3	0
Buffer beam (steel)	0	4	0	20
Trailing buffer plates (wrought iron)	0	1	3	16
Stays between inside frames (steel)	0	3	3	21½
Stays between inside frames (steel) and outside frames (wrought iron)	0	2	2	6
2 gussets at leading end (steel)	0	1	1	0
2 expansion brackets (wrought iron)	0	0	1	11
Foot-plate casting (cast iron)	1	6	0	19
	4	11	2	10

Cylinders (cast in one piece).

Cylinders with covers complete (cast iron)	1	9	1	13
5 cylinder cocks	0	0	0	15
Cylinder cock gear	0	0	2	24
2 lubricators	0	0	0	13
	1	10	1	9

Motion.	t.	c.	q.	lbs.
2 pistons (head cast iron, rod steel)	0	4	0	22
Piston glands and neck rings (gun-metal)	0	0	1	9
2 slide bars (wrought iron)	0	3	3	20½
Slide bar bolts and nuts (back end)	0	0	0	13
Slide bar bolts and nuts (front end)	0	0	0	5½
2 crossheads and gudgeon pins crosshead cast steel, gudgeon pin wrought iron)	0	3	1	24
2 connecting-rods complete (wrought iron, gun-metal bearings)	0	6	1	20
2 valves (phosphor bronze)	0	0	3	16
2 valve buckles (wrought iron)	0	0	3	7½
2 intermediate valve spindles (wrought iron)	0	1	1	5
2 valve buckle glands	0	0	0	13
Intermediate valve spindle guide (cast iron)	0	1	0	5
Motion plate (cast steel)	0	4	3	15
2 expansion links (wrought iron)	0	1	0	17
2 lifting links (wrought iron)	0	0	1	21
Reversing shaft (wrought iron)	0	1	2	1
„ „ brackets (cast iron)	0	0	2	24½
Reversing shaft spring and bracket	0	0	0	16
Reversing rod (wrought iron)	0	0	3	23
„ screw and bracket complete (screw wrought iron, bracket cast iron)	0	1	3	18
2 excentrics, double (cast iron)	0	2	3	2
4 excentric straps (cast iron)	0	3	3	18
4 „ rods (wrought iron)	0	1	2	10
	2	2	2	18

Axle-box Guides.				
6 axle-box guides and wedges (guides cast steel, wedges cast iron)	0	11	2	20
6 axle-box guide stays (wrought iron)	0	2	1	21
6 sets of bolts and nuts	0	0	3	12
	0	14	3	25

Springs.				
6 springs, 13 plates 5 in. by ½ in., 3 ft. centres (steel)	0	14	1	12
12 spring hangers, side (wrought iron)	0	0	3	15
6 spring hangers, centre (wrought iron)	0	0	3	3
12 spring hanger brackets, (wrought iron)	0	1	2	6
	0	17	2	8

Injectors.				
2 injectors (gun metal)	0	1	0	14
2 injector feed pipes (brass)	0	0	1	19
3 „ rods	0	0	1	8
2 „ feed pipe stays	0	0	1	16½
2 „ „ „ connections	0	0	1	8
2 „ delivery pipes (copper)	0	1	1	3½
2 „ overflow pipes (copper)	0	0	0	7
2 „ steam pipes (copper)	0	0	2	23½
	0	4	2	15½

Brake.	t.	c.	q.	lbs.
Steam brake cylinder (cast iron)	0	2	3	0
„ „ „ lever and pins	0	0	2	13½
6 brake hanger brackets and pins (wrought iron)	0	1	1	20½
6 brake hangers (wrought iron)	0	3	0	6
6 brake blocks and pins (blocks cast iron)	0	3	0	18
3 brake hanger cross stays (wrought iron)	0	3	1	26
brake rods and adjusting nut complete	0	2	1	16
Steam brake pipes	0	0	0	14
	0	17	0	2

Draw Hook, Draw Bar, Buffers, &c.				
Draw hook, coupling links and nut (wrought iron)	0	0	2	23
Draw hook, rubbers and plates	0	0	1	10
Trailing draw bar (wrought iron)	0	0	3	21
„ „ „ pin (wrought iron)	0	0	0	20
2 side links (wrought iron)	0	0	3	11
2 side link pins (wrought iron)	0	0	0	20
2 buffers (steel)	0	3	1	8
Buffer packing	0	0	0	12½
Bolts and nuts	0	0	0	18
2 life guards (wrought iron)	0	0	3	5
	0	7	2	8½

Wheels.				
Leading wheels (wheels cast iron, tires and axle steel)	2	12	1	0
Driving wheels (wheels cast iron, tires and axle steel)	3	9	2	0
Trailing wheels (wheels cast iron, tires and axle steel)	2	12	1	0
	8	14	0	0

Axle-boxes and Side Rods.				
6 axle-boxes complete (gun-metal)	0	11	0	10
2 side rods complete (wrought iron, gun-metal bushes)	0	9	1	16
	1	0	1	26

Sand-boxes and Splashers.				
2 leading sand-boxes and splashers (cast iron)	0	6	3	14
2 driving splashers (cast iron)	0	2	3	14
2 trailing sand-boxes (cast iron)	0	6	2	6
Leading sand-box gear	0	0	2	15
„ sand pipes	0	0	0	19
Trailing „ „	0	0	0	20
	0	17	1	4

Foot-plates &c.				
Front footplate (wrought iron)	0	1	0	2
Side footplates (wrought iron)	0	6	1	20
Trailing flap plate complete (wrought iron)	0	1	0	4
Footboard complete (wood)	0	1	3	11
Trailing foot-steps and plates (wrought iron)	0	2	0	16
	0	12	1	25
Total weight of engine empty	34	15	1	3

TENDER.

Tank.	t.	c.	q.	lbs.
Tank (wrought iron)	4	17	1	0
Holding-down bolts	0	0	0	20
2 hand rails and brackets	0	0	1	12
2 angle irons (wrought iron)	0	1	1	0
	4	19	0	4

Footplates and Foot-steps.				
Leading footplate (wrought iron)	0	2	0	14
Trailing " "	0	1	3	6
4 leading foot-steps (steel)	0	1	1	13
4 trailing " "	0	1	0	22
	0	6	1	27

Frames, Frame Stays, &c.				
Outside frames (steel)	0	19	3	0
Angle iron on outside frames (wrought iron)	0	3	2	5
Inside frames (steel)	0	7	2	18
Angle iron on inside frames (wrought iron)	0	2	2	26
8 gussets between inside and outside frames (steel)	0	2	1	4
2 stays between inside and outside frames (steel)	0	0	3	10
3 stays between inside frames (steel)	0	3	3	5
2 stays between inside frames (front and back)	0	1	1	10
3 stays between outside frames (steel)	0	2	2	8
Leading buffer beam (steel)	0	2	2	7
Trailing " " "	0	3	2	14
	2	10	2	23

Brake.				
Brake column (cast iron)	0	0	3	9
" screw and nut complete (wrought iron)	0	0	2	10
Brake shaft (wrought iron)	0	2	2	19
" rods and adjusting nut complete (wrought iron)	0	2	3	14
6 brake hangers (wrought iron)	0	2	0	16
6 " hanger brackets (wrought iron)	0	0	2	7
6 brake hanger pins (wrought iron)	0	0	1	14
6 brake blocks (cast iron)	0	3	1	14
6 " block pins (wrought iron)	0	0	0	15
2 " shaft brackets (wrought iron)	0	2	0	15
3 brake hanger cross stays (wrought iron)	0	2	0	7
	0	17	3	0

Springs.	t.	c.	q	lbs.
6 springs, 12 plates, 4 in. by ½ in., 4 ft. centres (steel)	0	11	3	10
12 spring hangers complete (wrought iron)	0	2	1	24
12 spring hanger brackets (steel)	0	2	1	6
Rubbers and plates	0	0	2	19
	0	17	1	3

Axle-boxes.				
6 axle-boxes complete (cast iron, gun-metal bearings)	0	10	1	10
6 axle-box covers (cast iron)	0	2	0	13
	0	12	1	23

Axle-box Guides.				
6 axle-box guides (cast iron)	0	6	2	13
6 " guide stays (cast iron)	0	0	1	14
6 stay bolts and nuts	0	0	1	23
Axle-box guide bolts and nuts	0	0	2	22
	0	8	0	16

Wheels.				
3 pairs of wheels complete, 4 ft. 1 in. dia. (wheels, axles, and tires, steel)	5	6	2	21
	5	6	2	21

Draw Hook, Draw Bar, Buffers, &c.				
Draw hook, coupling links, and nuts (wrought iron)	0	0	3	8
Draw hook, rubbers and plates	0	0	1	13
" guide (cast iron)	0	0	3	17
2 side chains (wrought iron)	0	0	1	24
2 life guards (wrought iron)	0	1	1	8
2 trailing buffers (steel)	0	3	1	2
Trailing buffer packing	0	0	0	26
2 intermediate buffers (wrought iron)	0	0	3	6
2 intermediate buffer guides	0	0	1	18
Rubbers and plates	0	1	1	8
Draw bar plates	0	0	3	18
" pin	0	0	0	20
Side link plates	0	0	2	8
" pins	0	0	0	20
	0	11	3	0

Feed Cocks.				
2 feed cocks and pipes	0	0	2	4
	0	0	2	4

Total weight of engine empty	34	15	1	3
Total weight of tender empty	16	10	3	9
TOTAL WEIGHT OF ENGINE AND TENDER EMPTY	51	6	0	12

(*The Engineer*, October 10, 1900.)

Compounding Locomotives.

Design of Compound Locomotives.—Considerations regarding the design of compounds are :—Cylinder proportions ; ratio of the area of the high to the low pressure, the latter being generally regarded as at least twice that of the former ; intercepting or starting valves ; steam port area of the low-pressure cylinder ; receiver capacity ; and absence of restricted passages, obstruction and abrupt turns between the high and low-pressure cylinders.

The general claim by most authorities is a saving of about 20 per cent. in steam. Expansive working, and consequently exhausting at a low temperature, is the main object ; but, providing the difficulties of compression are overcome, it has a formidable competitor in the simple locomotive.* Cylinders have been employed larger in proportion to the boiler for expansive working in simple engines, but failed from evident reasons known to locomotive experts.

* *The Engineer*, December 21, 1917.

Ratios of the Areas of the High-pressure Cylinders to the Low-pressure.—Worsdell, Von Borries, and others, 1 to 2–2½; Webb, 1 to 2·3; Vauclain and America, 1 to 3. In modern compounds ratio is 1 to 2·4 on Midland Railway, 1 to 2·5 Mallet compounds in U.S.A., and about 1 to 2·2 on Continent.

Tractive Force of Compound Locomotives.—Von Borries, who recommends a ratio of 1 : 2·2 or 2·3, gives tractive power of two-cylinder compounds as,

$$\text{T. F.} = \frac{psd^2}{4\,\text{D}},$$

where p = boiler pressure, s = stroke in inches, D = diameter of wheel in inches, and d = diameter of low-pressure piston.

For four-cylinder compounds, Baldwin gives

$$\text{T.F.} = \frac{2\,psc^2}{3\text{D}} + \frac{psd^2}{4\text{D}}.$$

c being diameter of high-pressure piston.

Another formula is given as

$$\text{T.F.} = \frac{0{\cdot}8\,psd^2}{(r+1)\text{D}} \text{ for two-cylinder compounds,}$$

and

$$\text{T.F.} = \frac{1{\cdot}6\,psd^2}{(r+1)\text{D}} \text{ for four-cylinder compounds,}$$

r being ratio of low to high-pressure piston area.

Modern High-power Locomotive Economy in France.*

The results of recent locomotive operation on the Paris, Lyons and Mediterranean Railway (M. Maréchal, Chief Mechanical Engineer) are claimed to show a very great progress over the most economical results hitherto obtained from what were considered to be the best modern high-power superheated steam locomotives; these results exceed some of the highest obtained from modern Corliss-geared superheated steam compound stationary engines, and are quite equal to several recent test results with the largest turbine central station electrical sets in the world. These new P.L.M. locomotives develop over 2,500 horse-power at the quite moderate speed of 43 miles per hour, and almost maintain that power at the highest speeds, as, for example, 2,427 horse-power at 75 miles per hour. They haul trains of 645 tons net, or of 800 tons gross, up a continuous incline rising 1,060 ft. in 82½ miles, at an average rate of 52 miles per hour, equivalent to a train load of 1,000 tons hauled at 50 miles per hour on straight and level line.

The feed water consumption averages, on the distance of 100 miles between Paris and Dijon, 13¼ lbs. per indicated horse-power with a train of 646 coach tons, and the same also for a light load of only 383 coach tons. The steam consumption per indicated horse-power of these P.L.M. engines is 6·13 kilos, as compared with 4·55 kilos for the 20,000-kilowatt turbo-alternators (electric power condensing engines) at Chicago. The following is a summary of results:—

Per Horse-power per Hour at the Draw-bar.	Tons.
Coal economy per 1,000 tons of coal by compounding	= 351
Compound coal consumption, as against 1,000 tons in single expansion	= 649

Coal Consumption per 35,000 *Horse-power Hours at the Draw-bar.*	Tons.
Simple expansion	98·8
Compound	58·9
Coal saving in each 90 tons coal	= 31·9

	Simple.	Compound.
Number of engines in service to which these results refer	91	44
	Tons.	Tons.
Weights of 'Pacific' engines in average working trim	92·8	91·2

Mean Horse-powers Indicated with Fourteen Trains from Laroche to Blaisy-Bas (82·5 *miles*).

Simple.		Compound.	
Minimum.	Maximum.	Minimum.	Maximum.
1,734	1,896	2,025	2,182

It will be seen that, for every 35,000 horse-power hours as registered at the draw-bar, the compound engines consume 58·9 tons of coal, as compared with 90·8 tons of coal by the modern superheated steam single-expansion engines of the same 'Pacific' type. The coal saving is therefore 31·9 tons in every 90·8 tons consumed by the simple engines. With a coal consumption of 298 tons, the simple engines hauled 76 trains of the average weight of 383 tons, while the compounds hauled 100 trains of the average weight of 558 tons, and also in the same total time per train.

As the result of twelve tests of each system, made with equal train loads, the simple system

* *The Engineer*, June 8, 1917.

aggregated 412,390,000 kilogram-metres at the draw-bar in an average time per train of 81 min. 40 sec., while the compound system aggregated 446,460,000 kilogram-metres at the draw-bar in an average time per train of 78 min. 54 sec., and in simultaneously saving 6 tons of coal, or average of 1 ton of coal in each 82·5 miles run with the regulators open.

As the result of fourteen tests, inclusive of two tests of heavy trains of about 645 coach tons, the average load hauled by the compounds amounted to 558 coach tons, and their average train time was practically the same as that averaged by the simple expansion system in hauling an average load of only 383 coach tons.

The general average coal saving per draw-bar horse-power per hour by compounding was 35 per cent.: 30 per cent. the coal saved per indicated horse-power, 33 per cent. the saving of water per draw-bar horse-power, and 31 per cent. the saving of water per indicated horse-power.

The indicator diagrams showed that, per unit of steam pressure and per cubic foot of steam admitted to the cylinders, at any given speed, the average compound piston pressure was between 35 and 40 per cent. greater than that which was indicated in single-stage working; while in consequence and for any given boiler pressure the trains behind the compounds ran proportionately faster unless their loads were made suitably heavier. In general service the train load was greater, per official ratings, by 10 per cent., with higher speed and less coal.

In one of the sets of tests the two-stage principle resulted in a coal saving of 43 per cent. The water saving per indicated horse-power hour was only $9{\cdot}36 - 6{\cdot}48 \div 9{\cdot}36 = 30$ per cent., while on the effective horse-power hour at the draw-bar the water saving was only $14{\cdot}77 - 9{\cdot}29 \div 14{\cdot}77 = 37$ per cent., which differences between the steam and the water economies during the same trip incidentally prove that compound expansion certainly does not owe its economy to avoided condensations—as is almost universally claimed—since the water saving is very much less than the steam saving, while the coal saving—43 per cent.—corresponds more nearly to the steam saving than to the water saving—37 per cent.—when all the three economies are based on the horse-power hours at the draw-bar.

The P.L.M. indicator cards showed that the steam saving by compound expansion is quite as great at 75 miles per hour as it is at 25 miles per hour, and that the old disrepute of the compound, that it was uneconomical at high speeds, has been overcome.

Cylinders of Simple and Compound Locomotives of Equivalent Power.

The following table has been compiled and put into practice for proportioning the diameters of the cylinders of 2-cylinder and 4-cylinder compound locomotives when designing them to generate a power equivalent to that of a given size of simple cylinder and of the same piston stroke. Hitherto the average ratio of area of the simple cylinders and the high-pressure cylinders of compound locomotives was 1 to 1·17 and 1·026 for 2-cylinder and 4-cylinder engines respectively. This has been found to be too low in practice, with the result that new ratios of 1·25 for the 2-cylinder and 1·10 for the 4-cylinder have been proposed and are in use. The table gives the area of the simple cylinders from 12 ins. to 22 ins. diam., with the corresponding diameters and areas of the high-pressure cylinders of the compound locomotives. In the case of the 4-cylinder engines the area given is that of the sum of the two high-pressure cylinders.

TABLE SHOWING ACTUAL AND RELATIVE AREAS OF SIMPLE AND OF 2-CYLINDER AND 4-CYLINDER COMPOUND LOCOMOTIVES.

Simple.			2-cylinder Compound Ratio, 1·25.		4-Cylinder Compound Ratio, 1·10.	
Diam.	Area.	Ratio.	Nearest Diam.	Area.	Nearest Diam.	Area.
Ins.			Ins.		Ins.	
12	113,098	1·00	13⅜	140,501	8⅞	123,725
13	132,733	1·00	14½	165,130	9⅝	145,510
14	153,938	1·00	15⅝	191,748	10⅜	169,082
15	176,715	1·00	16¾	220,354	11⅛	194,411
16	201,062	1·00	17⅞	250,948	11⅞	221,507
17	226,981	1·00	19	283,529	12⅝	250,370
18	254,470	1·00	20⅛	318,099	13⅜	281,002
19	283,529	1·00	21¼	354,657	14⅛	313,400
20	314,160	1·00	22⅜	393,203	14⅞	347,564
21	346,361	1·00	23½	433,737	15⅝	383,496
22	380,134	1·00	24⅝	476,259	16⅜	421,196

(Railroad Gazette.)

THE NORTH EASTERN RAILWAY'S STUMPF LOCOMOTIVE. SUPERHEATED.

The fundamental feature of the Stumpf engine is the extraction of the energy from the steam without causing the steam to return on its path. The flow is constantly in one direction from the hot inlet ports to the relatively cold outlet ports. In the ordinary steam engine the flow it reversed at the end of each expansion stroke and each exhaust stroke. During the exhaust stroke of such engines the clearance space surfaces are cooled down by the cold wet steam, and as a result the next incoming volume of hot live steam suffers considerable initial condensation. In the Stumpf engine this cooling of the clearance surfaces is avoided, with the result that initial condensation is almost entirely absent. The Stumpf cylinder is double-acting, with an inlet port at each end and a common exhaust port at the centre. The exhaust port is constituted by a series of holes drilled round the walls and leading into an exhaust belt formed integrally with the cylinder casting. The piston employed is of exceptional length and fills approximately half of the cylinder volume. In fact, at the end of each stroke one or other of its edges is just clearing the ring of holes and allowing exhaust to take place. Thus each half of the cylinder volume has to deal with the steam from only one inlet port. As the total area of the exhaust port is large the period of exhaust extends from a short time before the end of the stroke is reached until a short time after. The bulk of the one stroke is thus occupied with the admission and expansion, and the bulk of the other with the compression of the steam. In general, the period of exhaust covers one-tenth of the stroke each way, so that admission and expansion occupy nine-tenths of the stroke in one direction and compression nine-tenths of the stroke in the other.

The cylinders are 20 ins. diameter and 26 ins. stroke, and are about twice as long as cylinders of the same stroke, but of the ordinary pattern. The pistons are hollow castings with spring rings at each end. The admission of steam to the cylinders is controlled by piston valves placed on top and actuated by Walschaert's valve gear. The valves have inside admission, their maximum travel being $6\frac{1}{2}$ ins. and their exhaust lap $1\frac{3}{4}$ ins. When the engine is running in full gear the valve ports provide an auxiliary exhaust, but when the engine is notched up this auxiliary exhaust is closed and all the steam escapes by way of the central ring of ports. The engine is fitted with a superheater capable of maintaining a steam temperature of 600° to 640° F. (*Sir Vincent L. Raven.*)

Parts of Locomotives.

CYLINDERS.

Diameter of cylinder in inches = $\cdot 75\ \sqrt{\text{I.H.P.}}$, where I.H.P. = maximum H.P. that engine will be required to develop continuously for any length of time. Stroke and diameter of driving wheels should be so proportioned that the piston speed is about 900 ft. per minute, as this is found to be the most economical speed. Thickness of barrel in inches = $\cdot 02\ d + \cdot 75$, where d = diameter in inches. Thickness of metal of steam passages may be $\cdot 7\ t$ and of the flanges $1 \cdot 25\ t$, where t = thickness of barrel in inches. The studs for the cylinder cover should be calculated for a stress of 4,000 lbs. per square inch, to allow a large margin of safety in case of priming.

Area of steam port $d^2 \div 15$ in the best modern practice. Length of ports should not be less than $\cdot 85\ d$. Area of exhaust port should be two and a half times that of the steam port.

Clearance between cylinder covers and piston is usually made from $\frac{1}{4}$ in. to $\frac{3}{8}$ in. The *clearance volume*, including the passages, varies from 6 to 8 per cent. of the cylinder volume. If the clearance is too small the compression line at high speeds rises above the steam chest pressure, and the engine does not run well.

Cylinders for Highly-superheated Steam.—Owing to the very high temperatures, it is necessary that the steam chest walls should be separate from the walls of the cylinders. There is a very great variation in the temperatures of superheated steam, on the one side, and of the exhaust steam on the other. If a common wall is used between the two the result is that the cylinders are liable to fracture. (*H. N. Gresley*, '*Proceedings, Inst. Loco. Engineers.*')

VALVES.

For Flat Slide Valves.—Outside lap usually = $0 \cdot 8a$, where a is the width of the steam port As a rule there is no inside lap, but in some cases a small inside clearance not exceeding $\frac{1}{16}$ in. is allowed. The *lead* is about $\frac{1}{8}$ in., and the *maximum travel* is about $2 \cdot 7a$. Valves of tank engines and others that make frequent stops should be of soft grey cast iron. For long-run engines, 5 parts copper, 1 part tin. (*Wolff.*)

VALVE OPENING.

Taking the mean effective area of opening in square inches per 500 sq. ft. of heating surface based on existing average practice of twelve railroads, the following empirical formula has been developed :

$$A = \frac{0 \cdot 10266 \times HS}{P}.$$

Where A equals the effective area of opening of the valve in square inches, H S equals the heating surface of boiler in square feet, and P equals the absolute pressure, equals gauge pressure plus 15 lbs. The formula is based on an evaporation of 5·28 lbs. of water per square foot of heating surface per hour. (*American Railway Master Mechanics' Association.*)

Cylindrical Valves.

Cylindrical or piston valves are extensively used in connection with superheated steam. A large proportion have internal admission of steam. Various packings are in use; some consist of segmental collapsible rings pressed against the liners by steam pressure; others have spring rings, of which there are several kinds. The advantages over flat slide valves are reduced friction, larger port opening, and wear is confined to the easily renewable packing rings.

The diameter of piston valves is about half that of the cylinders.

Piston valves are of two kinds, inside admission and outside admission. In the former steam is admitted between the heads, and exhaust takes place on the outside. The advantages are reduced area for radiation of heat and packing of spindle is only subjected to exhaust steam pressure. Outside admission valves are arranged like flat slide valves, with admission of steam on outside and exhaust inside.

VALVE GEAR.

With inside cylinders Stephenson valve gear (see Section XXIX, Part VI) is general. In special cases, where eccentrics must be dispensed with, Joy's valve gear is used. Outside cylinder engines, with the valves inside the frames, also have the Stephenson gear; but when the valves are outside the Walschaert valve gear is now preferred.

The outside cylinder engines on the Great Western Railway have 10-in. piston valves placed above the cylinders worked by Stephenson gear from the inside of the frames. The maximum valve travel is 6¼ ins., the lap being 1⅝ ins., and the port opening 1½ ins., although the steam ports are 1⅞ ins. wide. The eccentrics are set to give ¼ in. lead at 25 per cent. cut off, resulting in the valves being about ⅛ in. blind in full gear. This arrangement gives a sharp cut off, prolonged expansion and a free exhaust, resulting in large mean effective pressure at high speeds.

Walschaert Valve Gear.

The Walschaert valve gear, figs. 7 and 8, is mainly used on outside cylinder engines. The travel of the valve is derived from two movements, the crosshead of the engine and a return

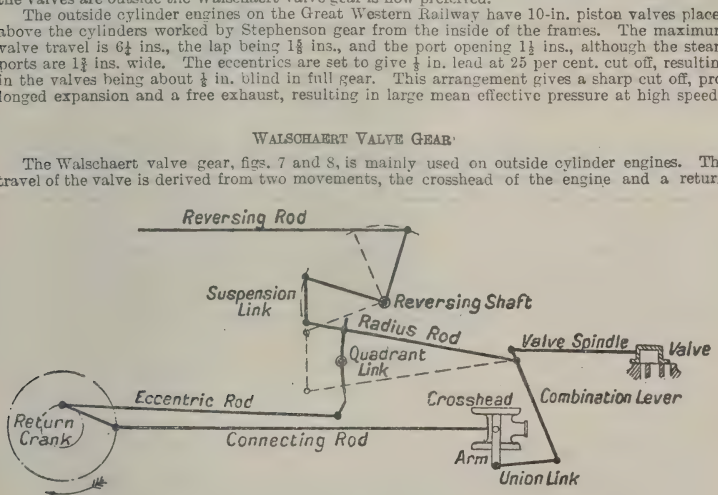


Fig. 7.

crank attached to the main crank pin, or, in the case of inside cylinder engines, from an eccentric on the crank shaft. The first movement is a reproduction of the travel of the crosshead to a reduced scale, the reduction being effected by a combination lever connected at its lower end to the crosshead through a link. In order that the angular movement of the lever shall not be too great by any restriction of length an arm is rigidly attached to the crosshead so that the lever may be suitably lengthened. The combination lever is also attached to the valve spindle and to the radius rod which forms its fulcrum. With an outside admission valve the valve spindle is attached above the radius rod and with inside admission of steam the positions are reversed (see figs. 7 and 8). The function of the combination lever is to give the mid-gear travel, equal to twice 'lap + lead,' and the lever is so proportioned that the stroke is reduced to this amount. The lead is constant for any length of travel.

The second movement, derived from the return crank, is transmitted to a quadrant link rocking on fixed bearings. The maximum angle through which this link swings should be kept within 45°. The radius rod is attached to the link through a die block and communicates its motion to the valve by way of the combination lever. This second movement is at a phase of 90° with the first, and its magnitude can be varied and its direction reversed by altering the position of the radius rod on the quadrant link. In mid-gear the second movement is nil, only the first

movement being communicated to the valve. The position of the radius rod in the link is regulated by the reversing shaft, the attachment being either a vibrating suspension link (see fig. 7) or a slider consisting of a die block working in a long slot, as in fig. 8. In the latter case it is more convenient to use the bottom of the link for fore-gear running, while in the former either top or bottom can be used, since it is only necessary to alter the position of the return crank, which is nominally 90° ahead or behind the main crank. For convenience of design the quadrant

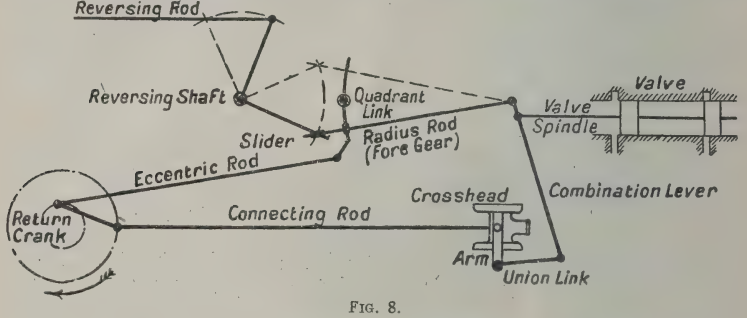


FIG. 8.

link is usually raised so that the eccentric rod is inclined, and this angle of inclination should be taken into account when setting the return crank, being added to or subtracted from the main angle of 90°. The setting of the return crank is as follows :—

Valve.	Fore Gear.	Return Crank.
Outside admission	At top of link	90° behind main crank
" "	At bottom of link	90° in advance of main crank
Inside "	At top "	90° in advance of "
" "	At bottom "	90° behind "

CRANK AXLES.

If W = weight of engine in tons, when in working order ; D = diameter of driving wheels in inches ; then

$$d = K\sqrt[3]{WD}.$$

For the best modern practice, K = ·522. (*Wolff.*)

Dimensions taken from the crank axles of a number of modern British locomotives, with cylinders ranging from 17 to 21 ins. diameter, give the following rule :—

$$d = 0{\cdot}375C + 1$$

d being the diameter of main bearings and C the diameter of cylinders.

The crank-pin journals are usually the same diameter as the main bearings, the barrel or centre portion about ¼ in. less and the wheel seat 1 in. more. Thickness of webs varies from 4 to 4½ ins.

Built-up crank axles are common. The advantages over a forged axle are cheapness, more effective bearing surfaces due to absence of radii, fractured parts may be replaced without scrapping the whole axle. By extending the webs a balanced axle is obtained. Special steels may be used.

BEARING SURFACES.

Inside main bearings should be so proportioned that the pressure per square inch of diametral area does not exceed about 250 to 260 lbs. (*Wolff.*)

For crank-pin journals and coupling-rod pins, the pressure may be as much as 1,500 lbs. per sq. in., the load on connecting rod being taken as full boiler pressure on piston area.

For crosshead pins 4,000 lbs. per sq. in. is allowable on account of the small angular movement. Crosshead slippers should be about 60 lbs. per sq. in., a low pressure being advisable on account of the exposure of slide bars to sand and grit.

WHEELS AND TYRES.

Cast-steel wheels are general. The method of securing tyres by means of set screws through the rim of wheel is the most common. The alternative is to depend on the shrinkage of the tyre to grip the wheel, a retaining ring being inserted to lock the tyre in place laterally. This is a cheap and satisfactory fastening, but there is a tendency for tyres to become loose as they wear thin.

The shrinkage allowance for tyres is usually between 1/750th and 1/1000th of the diameter of wheel centre.

Driving wheels have tyres with flanges about $\frac{3}{16}$ in. thinner than the other wheels. This eases the engine on curves and protects the crank axle to some extent. Blind or flangeless tyres are uncommon in England, although often resorted to in America.

Of modern types the 4–4–0 engine is the most economical in tyre wear. The flanges of the leading bogie wheels which guide the engine wear much faster than the second pair. Bogie wheels wear less than radial truck wheels, as a bogie sets itself tangentially to any curve. In engines of the 0–6–0 and 0–8–0 types mileage is determined by the flange wear of the leading coupled wheels.

Tyres with treads worn hollow are detrimental to points and crossings. A flange worn sharp is liable to cause derailment. Tyres are turned down to 1$\frac{5}{8}$ ins. on tread and allowed to wear to 1$\frac{1}{2}$ ins. before they are scrapped.

Wheels are forced on axles by hydraulic pressure. A minimum of 10 tons per inch diameter of wheel seat should be allowed when rape oil is used as a lubricant, 100 tons being a usual amount for large axles; or, if D is the diameter of wheel seat in inches, the load = 10D tons.

The wheel is bored slightly less in diameter than the axle, the difference expressed as a fraction of an inch being from $\frac{2D + 3{\cdot}5}{1{,}000}$ to $\frac{4D + 2}{1{,}000}$, depending on rigidity of the boss, quality of steel, etc.

Crank pins should be forced in with a minimum pressure of 13 tons for each inch of diameter, and the ends of the pins riveted over inside the wheels.

FLEXIBLE WHEEL BASE.

Main-line engines should be capable of traversing a curve of 5 chains rad us, and sufficient side-play is given to bogies and radial wheels for this. The theoretical amount required is not attained in practice, as engine frames and track spring a little on sharp curves.

There is a small amount of side-play allowed between flanges of wheel and rail. With new tyres on new rails, this is about $\frac{3}{16}$ in. each side, or a total of $\frac{3}{8}$ in. The flanges of driving wheels are thinned down to give double this amount, about $\frac{3}{4}$ in. total. Additional side-play is sometimes given by allowing a little clearance between axle-boxes and guides. It is very exceptional to give any side-play between journal and bearings.

Baldry's rule for the radius of pony trucks is

$$R = \tfrac{1}{2}\left(B - \frac{A^2}{B}\right),$$

where B is horizontal distance from truck wheels to centre of rigid wheel base and A is half rigid wheel base.

Bogies, in addition to turning on the pin, are allowed a certain amount of transverse movement. This is controlled by springs, suspension links, or inclined slides. Bogies on the L. & N.W.R. and N.E.R. have curved slides giving radial instead of transverse movement. Fixed centre bogies are now but little used.

Counterbalancing Locomotive Driving Wheels.

The revolving and about 60 per cent. (this figure varies considerably) of the reciprocating parts should be counterbalanced. The revolving parts develop centrifugal force, the horizontal component of which disturbs the engine longitudinally, to which must be added that due to the momentum of the reciprocating parts: also, these two forces produce a sinuous motion by acting first upon one side of the engine and then on the other. The vertical component of the centrifugal force generates a rolling motion by acting alternately upon each side of the engine. A peculiar effect is also produced by the obliquity of the connecting-rod to the slide bars, a turning upon a horizontal axis, together with an up-and-down movement at the crank axle. The horizontal forces are the most injurious, although some American engineers consider the vertical to be so; but English practice is to take a medium course between excessive horizontal and vertical disturbing influences. It has been clearly demonstrated that high centres of gravity are advantageous.

When of outside type, balance the balance weight by means of the moving parts on one side and a small weight, at the same angle from the balance weight, in the far wheel.

For inside cylinder engines place a balance weight in each wheel inversely proportional to the distance from the cylinder and diametrically opposite the crank. Thus there are two counterweights in each wheel, but these are combined to form a single balance weight, usually of crescent shape.

American practice is to allow 1/400th part of the engine weight to remain unbalanced in the reciprocating parts on each side. The remainder is then divided amongst the coupled wheels; or

$$r = \frac{R - \frac{W}{400}}{N},$$

where r = reciprocating weight in each wheel at crank pin radius R = total weight of reciprocating parts, W = weight of engine in working order, and N the number of coupled axles.

Cast steel wheels have the balance weights cast solid with them; occasionally the weights have pockets cored out for the reception of lead. Another practice is to cast the wheels without weights and to rivet steel plates to the spokes. Molten lead is then run into the pockets formed between the spokes.

In order to obtain uniformity of results, some railways make use of a wheel-balancing machine. The pair of wheels to be tested is mounted on bearings supported by springs set radially round them. Weights are attached to the crank pins to represent the revolving and a proportion of the reciprocating parts. The wheels are then spun round at high speed and the counterbalance adjusted until steady running is obtained.

BOILERS.

Grate Area and Heating Surface.

Grate area in square feet $= \frac{\text{average I.H.P.}}{30}$. Total heating surface should be not less than 60 × grate area, and at least 10 per cent. of this should be in fire-box.

The ratios giving the best results are as follows:—Grate to total heating surface, 1 : 55 to 65; grate to fire-box heating surface, 1 : 5 to 5·5; and fire-box heating surface to total heating surface, 1 : 11 to 12. In some comparative trials made between British and American locomotives, the extra length of the American grates was considered a disadvantage; 8 ft. is the greatest length of grate that can be efficiently fired by hand. (*G. E. Jones.*)

Approximately, 1 h.p. can be obtained from each 2½ square feet of heating surface. (*Lawford H. Fry.*)

Bituminous coals require space in the fire-box for the proper combustion of their gases before entering tubes. The fire-box volume should be 6 or 7 cubic feet for every square foot of grate. Under these conditions 15 lbs. of air are needed for each pound of coal burnt. The air spaces through fire-bars should not be less than 35 per cent. of grate area, and the damper opening not less than 15 per cent. Air spaces of 50 per cent. and damper opening 20 per cent. are not too large. In coupled engines, where an axle comes close under the grate the slope of pan over it should be not less than 45°; and the restricted space for air between pan and fire-bars must have an area of at least 15 per cent. of the part of the grate which it supplies.

Boiler Tubes.

Ratio of diameter of tubes to length.—Continental Compound, 60; American Express, 70; English Express, 75; six-wheeled coupled Continental Express, 80.

Thickness of locomotive boiler tubes (Caledonian Railway), 5-in. tubes, No. 8 W.G.; 1¾-in. tubes, No. 11 W.G.

Water space between tubes should not be less than ⅝ in.

Life of Boiler Tubes.

The life of copper and steel tubes in locomotive boilers, taken over a period of eight years is as follows:—

	Miles.
Copper 1st period (new)	110,000
„ 2nd period (drawn)	80,000
„ 3rd period (pieced)	50,000
Total	240,000

Subsequently 30 to 40 per cent. of those pieced are treated so again.

	Miles.
Steel 1st period (new)	70,000 to 80,000
„ 2nd period (pieced)	30,000 to 40,000

(*G. Hughes.*)

Calculation of the Heating Surface of Boilers for Locomotives.

The Associa ion of Railway Locomotive Engineers' method of calculating the heating surfaces of locomotives is as follows :—

Fire-box.—The outside (wetted surface) of inner fire-box plates to be taken to top of foundation ring. Areas of tube-holes and sectional area to wetted side of fire-hole ring, or flanged plate, as the case may be, to be deducted ; section of fire-hole being taken close up to the inner fire-box plate.

No deductions to be made for copper stays or roof stays. If the boiler has fire-box water tubes the surface to be taken on the inside (wet side) of tube.

Tubes.—The outside surface of tubes (wet side) to be taken, calculated on uniform diameters for both ordinary and superheater tubes ; the length of tube being taken between tube-plates.

Elements.—The inside surface (steam side) of elements to be taken, the effective length of tube being from and to smoke-box end of large flue tube.

Smoke-box tube-plate.—No allowance to be made.

Fire-Boxes.

Many attempts have been made to substitute steel for copper plates in fire-boxes of British locomotives, but the results have not been very successful. Steel fire-boxes are universal in America, where conditions favour their adoption. Greater success had attended the introduction of steel side stays for copper fire-boxes. Owing to the higher tensile strength the diameter over threads is about $\frac{5}{8}$ in. for a pitch of $3\frac{1}{2}$ ins. The stay projects through the fire-box casing plate about $\frac{1}{4}$ in., but the projection through the copper plate is furnished with a hexagon nut of reduced thickness. This forms a renewable head for the stay and protects it from injury by the fire.

In locomotive practice a pitch of about 4 ins. is almost invariably adopted for the screwed stud stays in the fire-box. Theoretically this is much closer than is necessary, but the practice is good, as it provides a substantial margin of wear in the copper plates.

Life of Fire-Boxes.

The life of fire-boxes depends more upon the tons hauled than the actual miles run. Copper fire-boxes on the Lancashire and Yorkshire Railway have a life of from 10 to $16\frac{1}{2}$ years. The older engines with 140 lbs. pressure are found to run their fire-boxes up to as much as 500,000 miles : an average figure for 70 engines being 310,000 before replacement by new ones. In standard engines, such as the radial tank and 6-wheeled coupled goods classes, working at 160 lbs. pressure, the average life of a copper fire-box is eleven years, with average mileages of 272,000 and 235,000 respectively. These figures are based upon records of 120 locomotives. Individual copper tube-plates in the fire-boxes above named require renewing during the life of the box. In the radial tank class, records of 53 tube-plates show an average life of seven and three-quarter years with 205,000 miles before renewing, whilst the 6-wheeled goods average 135,000 miles for 144 tube-plates. The remaining plates, viz., door and wrapper plates, practically do not require replacing during the life of the fire-box, but certain repairs and patches are fitted if necessary.

Superheaters.

Steam superheating in the case of locomotive engines may be described as ' two-stage steam generation.' The volumetric increase obtained by superheating enables larger cylinders to be used, or steam pressures to be reduced. The management of a superheater locomotive is usually a little different from that of a saturated steam engine, owing to the fact that each driver has given work to do, and he controls his engine with that end in view having regard to the design and equipment under his charge.

Fire-tube Superheaters are principally employed. Several rows of large fire tubes are fitted in the boiler, and into these superheating tubes extend from a header or headers in the smoke-box towards the fire-box and back again. The construction of the header varies, as well as the arrangement of tubes, but the object in all designs is to direct steam through small tubes exposed to hot gases direct from the furnace and supplying an extended steam path, so that while travelling at a high velocity a considerable degree of heat is taken up by the steam.

The Swindon (used mainly on the Great Western Railway) and Vaughan-Horsey (employed principally in Canada) designs are of this class, with their own constructional features, and both are designed for a moderate degree of superheat. The Schmidt design aims at a high superheat—from 200°–300° F. It is used with a four-fold arrangement, as shown in fig. 9 (page 598). This provides a long steam path, so that, notwithstanding the high velocity of the steam, it is able to take up the required heat. A special feature of the Schmidt apparatus is the simple flange device by which the elements are connected to the header. This arrangement enables a damaged element to be easily replaced or a blank flange fitted for the time being.

In conjunction with some fire-tube superheaters a damper mechanism operated by an automatic steam cylinder is fitted so that the passage of furnace gases through the apparatus may be prevented when steam is not being used. In some cases this is hand operated, and on the Midland Railway Sir Henry Fowler has fitted to goods engines a device whereby the dampers can, if desired, be kept open so that during shunting, and like operations, superheat can be maintained.

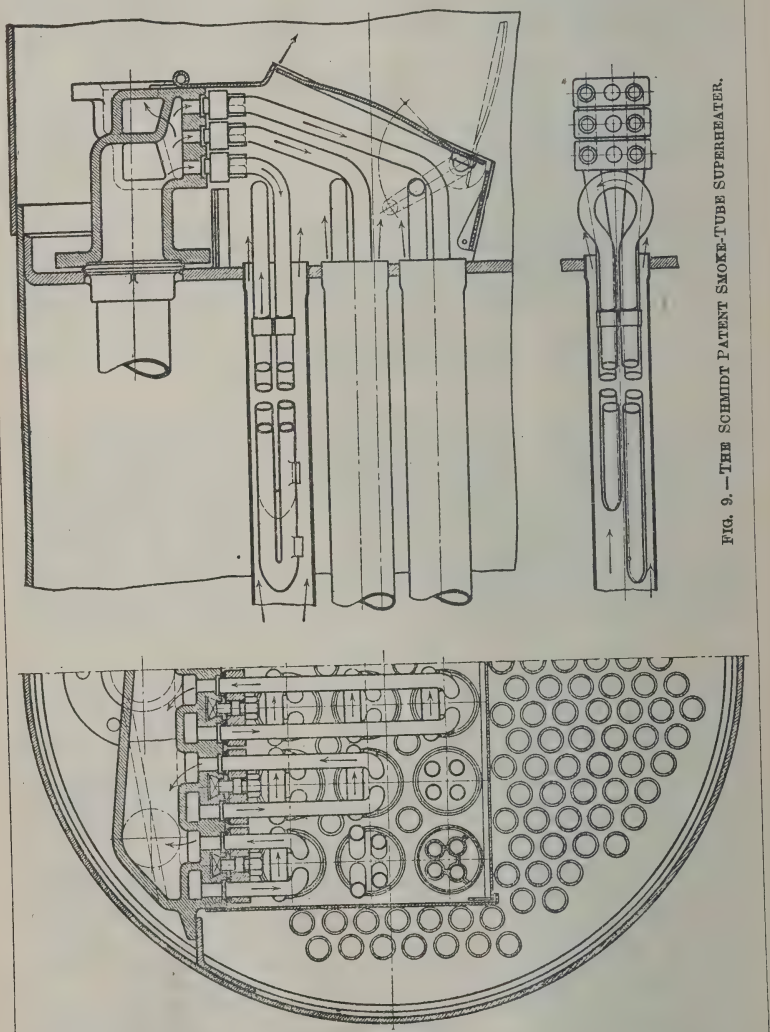


FIG. 9.—THE SCHMIDT PATENT SMOKE-TUBE SUPERHEATER.

Instead of a damper or draught retarder, some railways, such as the G.N.R., G.E.R., and S.E. & C.R., fit snifting or anti-vacuum valves on the top of the smoke-box. When an engine is drifting with steam shut off air is drawn from the valves through the superheater elements and prevents overheating. At the same time the air is heated before coming into contact with the valves and thus reduces the risk of the valve liners becoming loose by contraction from sudden cooling.

The Robinson Superheater.

Two types of superheaters have been designed, type 'A' having a header or steam collector with transverse compartments and a removable front cover plate, and type 'B' having a header or steam collector with two longitudinal compartments and removable top covers.

Type 'A.'

The transverse compartment superheater with removable front cover, fig. 10 (page 600), is composed of a number of cold drawn mild steel pipes (A) manufactured from best Swedish steel billets, and a header or steam collector (B) into the bottom of which the ends of the superheating pipes are expanded at (b). In applying this superheater to a locomotive type boiler the header or steam collector (B) is connected by a flange (C) to the main saturated steam pipe (D), leading from the dome, immediately above and perfectly clear of the smoke or flue tubes in the smoke-box tube plate (E). The header is divided into a number of separate transverse compartments, several of which (F) receive and distribute the saturated steam from the main saturated steam pipe to the superheating pipes, and the remainder of these compartments (G) receive the superheated steam from the superheating pipes and distribute the same to the steam pipes (H) leading to the steam chests of the engine cylinders.

The superheated and saturated steam compartments (GF) are open at the front of the header to permit of the header being examined internally and for the introduction of the tube expanders into the ends of the superheating pipes (A) for expanding the same into holes in the bottom of the header. The superheating pipes are also readily disconnected from the header by means of suitable tools which are inserted through the front of the header.

The front of the header is made steam tight by means of a cover plate (I) secured with a number of studs and nuts. The bottom of the header or collector (B), which forms the tube plate into which the ends of the superheating pipes are expanded, lies parallel to and above the top row of smoke or flue tubes. A number of the smoke or flue tubes (J) are of large diameter to receive the superheating pipes (A); these pipes leave the header (B) vertically until they come opposite the large flue tubes (J), when they are bent at right angles and extended into the smoke or flue tubes (J). Each superheating pipe or element (A) consists of four lengths of pipe extending nearly the whole length of the large smoke or flue tubes (J), the ends of each length of pipe being suitably connected at (K).

Type 'B.'

In this type (fig. 11, page 600) the header or steam collector is divided into two longitudinal compartments A and B, the former receiving the saturated steam from the boiler and distributing the same to the superheating pipes, and the latter receiving the superheated steam from the superheating pipes and distributing the same to the steam pipes leading to the steam chests. The saturated and superheated steam compartments A and B are open at the top of the header to permit of the header being examined internally and for the expanding of the superheating pipes into position. The superheating pipes can be readily disconnected from the header, should this be necessary.

The top of the header is made steam tight by means of cover plates C secured by studs and nuts. Each superheating pipe or element consists, as usual, of four lengths of pipe extending nearly the whole length of each large smoke or flue tube, the ends of each length of pipe being suitably connected.

With this design of superheater the superheating pipes are so arranged that any particular element can be withdrawn and replaced without disturbing any other element.

With the type 'B' header, insufficient headroom in the smoke-box will in many cases necessitate the provision of removable covers in the smoke-box shell, immediately above the header, to admit of accessibility to the superheating pipes. These covers however would be comparatively small. As the superheating pipes are expanded directly into the header, no attention to joints is necessary, and it would only be in the event of the renewal of an element or of a large flue tube that it would be necessary to remove the cover.

Statistics in regard to the Robinson superheater are said to show an average saving in coal and water consumption, and in boiler repairs, of 25, 30, and 25 per cent., respectively.

The Robinson Draught Retarder.

The draught retarder (for the prevention of overheating of the elements when the steam is shut off at the regulator) consists of a number of small steam nozzles disposed in the smoke-box, one nozzle extending a short distance into the smoke box end of each large superheater smoke tube. The nozzles are connected to the pipe which supplies steam to the blower so that when the latter is turned on, the jet of steam delivered from each nozzle is just sufficient to neutralise the forward draught induced by the blower. This draught retarder obviates the necessity for fitting any form of mechanical damper inside the smoke-box.

THE ROBINSON SUPERHEATER.

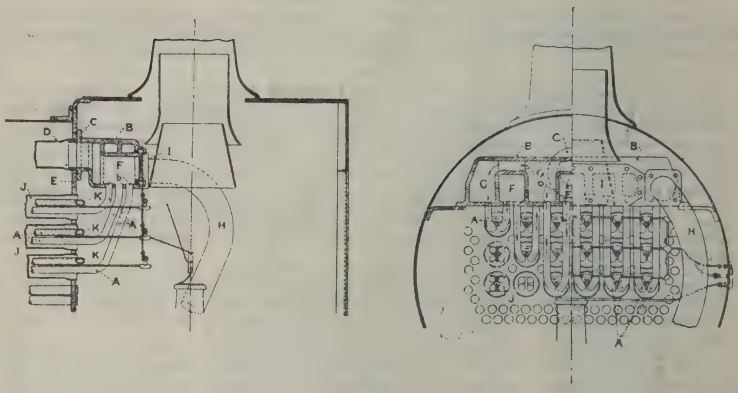


FIG. 10.

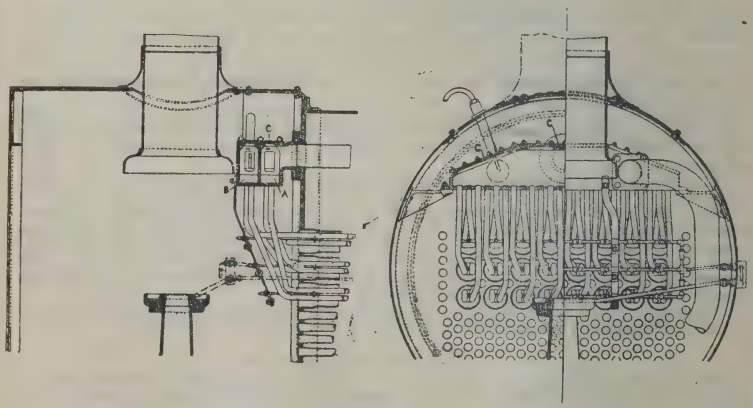


FIG. 11.

Fuel Economy

Hundreds of Locomotives on the principal lines are running on less fuel and with greater efficiency because they are fitted with

The

"Robinson"

Superheater

It has also been adopted by the principal Steamship Companies. More than 250,000 S.H.P. installed and on order.

Write for descriptive booklet.

THE SUPERHEATER CORPORATION Ltd.

14 NEW BURLINGTON STREET, LONDON, W.1.

Telephone: Gerrard 3822. Telegrams: 'Locosuper, Phone, London.'

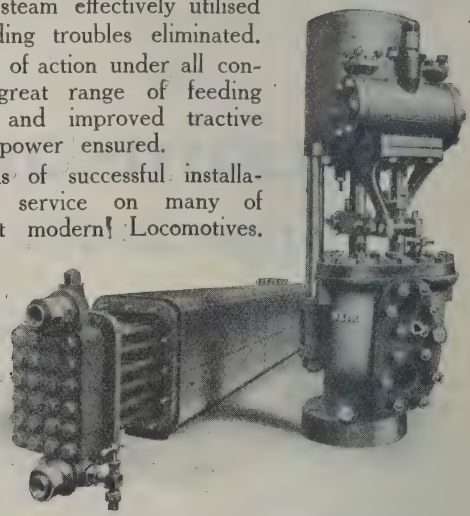
F. 600

The WEIR FEED HEATER & FEED PUMP for LOCOMOTIVES

The simplest, most efficient and reliable system yet introduced

Waste steam effectively utilised and feeding troubles eliminated. Certainty of action under all conditions, great range of feeding capacity and improved tractive power ensured.

Hundreds of successful installations in service on many of the most modern Locomotives.



Detailed Particulars on Application.

G. & J. WEIR Ltd. CATHCART GLASGOW

F. 601

The Sugden Superheater.

(*T. Sugden, Ltd.*, 180 *Fleet Street, London, E.C.* 4.)

These superheaters are of the smoke-tube type, and are made in two principal designs.

In design 'A' the superheaters are constructed of mild steel throughout, and consist of two separate headers fixed near the top of the smoke-box, and connected directly to tube elements which pass forward into the smoke-tubes of the boiler.

One header is connected to the saturated steam supply, and the second header receives the steam after it has passed through the superheater elements.

The elements are of the usual spear-head type, and are formed from solid drawn mild steel tube, and are connected to the headers by flanged joints of special construction with through bolts passing from the top to the bottom of the header.

In the 'B' type superheater the main header is of cast steel and divided into two compartments, one compartment supplying the saturated steam and the other being used for receiving the superheated steam from the tube elements.

A number of sectional headers are connected to the main header, and pass down in front of the tube plate between the smoke-tubes; one-half of the sectional headers supplies saturated steam to the tubular elements, and other sectional headers receive the superheated steam.

The tubular elements are again of spear-head type, and are connected to the sectional headers by expanded joints, and can be re-expanded or stopped by plugs through access covers which are provided in front of the sectional headers.

The Weir System of Boiler Feeding and Feedwater Heating.

In this system, fig. 12 (page 602), the boiler feeding is carried out by means of a direct-acting steam pump, B. The discharge side of the pump is connected through J to a surface heater, A, of special design. The heater is arranged in any convenient position on the locomotive, and uses part of the exhaust steam from the blast pipe, this steam passing to A through a pipe, D, which is teed off from the blast pipe. The heating steam impinges on the outside of the heater tubes. The orifice of the blast pipe is not altered in fitting the heater connection, so that the effective exhaust area is substantially increased with consequent reduction in back pressure on the engine.

The pump, B, has double acting steam and water cylinders. The suction and delivery valves for both ends of the water cylinder are arranged within the casing in front of the pump. Steam to the cylinder passes through H, and is controlled by a Weir piston valve chest. No drain valves are provided on the steam cylinder, as the pump will start from cold, even with the cylinder full of water of condensation. Plugs are fitted, however, on the steam cylinder, the steam valve chest, the water valve chest, and the pump cylinder, and may be utilised when it is considered necessary to empty the system.

While the vertical type of pump is usually adopted special circumstances may arise in which the use of a horizontal type is more convenient; and to meet these cases the larger sizes of pumps are designed on the horizontal pattern.

In the design of the heater, strength and simplicity with ready facilities for inspection are special features. A cylindrical shell of cast iron forms the steam space, with branches for the admission of the exhaust steam, and a connection for draining the condensed water. The tube plates are fixed to the ends of the shell by collar bolts, which also carry the end covers. The latter are provided with ribs which divert the feed water through the various passes of the heater. The tubes are of heavy solid drawn copper, and are so expanded into the tube plates that they form strong and reliable joints under all conditions.

The feed water, after traversing the heater tubes, passes through G directly into the steam space, through a special spraying valve, C, situated on the top of the boiler. By this means the feed water reaches the water surface in the boiler at practically the steam temperature, and secures increased efficiency and decreased upkeep of the boiler, due to the uniformity of temperature maintained. Where chalky waters are in use, the heating of the feed water to the steam temperature has also a pronounced effect on the character of the deposit; this takes the form of a fine sludge, which may be readily washed out. Both pump and heater are of neat and compact design, the installation occupies very little space and is in no way obtrusive on the locomotive. The fitting of the gear is, moreover, simple, as it involves no serious alterations in design or structure.

It is claimed that by the system, with feed water temperatures below 60° F. in the tender, and with any type of locomotive, saturated or superheated, a definite fuel economy of not less than 10 per cent. for the same locomotive duty is obtained, or for the same fuel consumption an increase of 10 per cent. in the evaporative power of the boiler; the feed pump gives a degree of feed flexibility and reliability which is not obtainable with injector feeding.

Hulburd's Seamless Soft Copper Jointings.

These patent jointings are absolutely seamless, being cut from the solid plate and machined all over. They are produced by a special process which provides the greatest strength combined with softness of which copper is capable. They are made in a variety of sections to meet different requirements, and of any size and shape. The special advantages they offer are that hand-scraping of joint faces is rendered unnecessary, no red or white lead fillings are required, the joint being absolutely metal to metal; joints made with them may be broken as often as desired

THE WEIR SYSTEM OF BOILER FEEDING AND FEEDWATER HEATING.

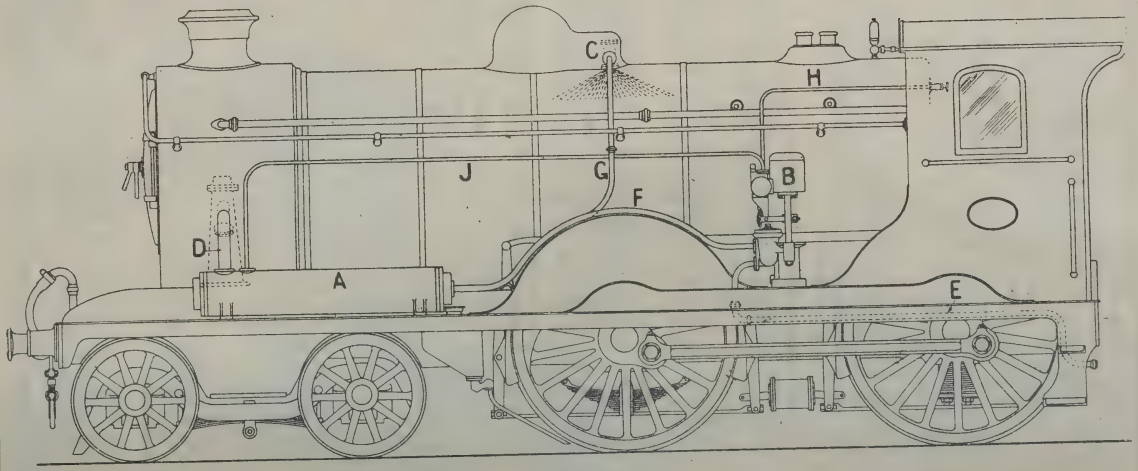


FIG. 12.

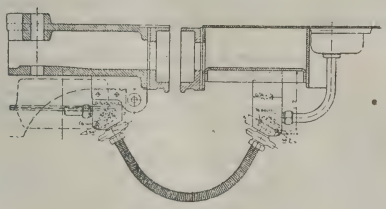


FIG. 13.—Feed Water Connection.

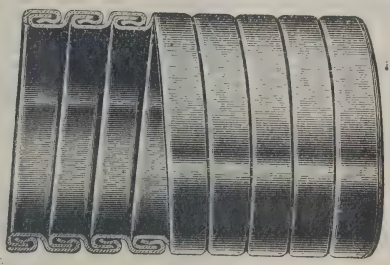


FIG. 14.—Section of Flexible Metallic Tubing.
(*United Flexible Metallic Tubing Co. Ltd.*)

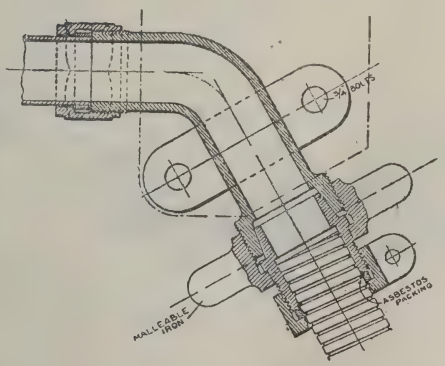


FIG. 15.—'Ball and Socket' Joint.

without the use of tools, and they may be used over and over again. Cases are known in which the same jointing has been used as many as eighteen times. The strength of the jointings is such that they may be used for pressures up to 2,000 lbs. per square inch. They are largely employed for locomotives—especially for domes, cylinder covers, and steam chests—by most of the leading railways and are supplied to nearly all the ships of the Navy. No single case of failure has ever been reported.

Flexible Metallic Tubing.

On the locomotive, an essential fitting is the feed-water connection between the engine and the tender, fig. 13 (page 603), this connection allowing any surplus steam from the boiler to be used to heat the feed water in the tender. Fig. 14 shows Flexible Metallic Tubing (*The United Flexible Metallic Tubing Co.*) which is specially suitable for the purpose, as rubber connections will not withstand the heat.

Flexible Metallic Tubing is also used for carriage heating, and being much stronger and lighter than rubber hose it will stand the full boiler pressure if the reducing valve fails, the pressure at the carriages being only about 40 lbs., whereas the boiler pressure is probably 200 lbs. The tubing when exposed to cold is in no way affected, even should any accumulation of water in the pipes be frozen solid.

With this Flexible Metallic Tubing there is no possibility of the drain valves of the couplings being stopped up by anything wearing or blowing off the interior of the tubes.

The 'Ball and Socket' joint, fig. 15 (designed by the locomotive engineer of the Lancashire and Yorkshire Railway), when fitted to the tubing, gives great flexibility. The asbestos ring, upon which the 'ball' rests in a measure, allows the ball joint to be flexible when under steam pressure.

The tubing is manufactured in various lengths, and in sizes from ¼ in. to 12 ins. internal diameter, and to resist pressures from 20 lbs. to 4,000 lbs. per sq. in.; it has been largely used in the place of rubber hose on account of its great strength, flexibility at all temperatures, non-liability to the attacks of vermin or insects, and that it remains indestructible by great heat, oils, or grease.

Flexible Metallic Tubing is specially suitable for tropical climates, as the sun's rays have no effect upon it, whether 'in stock' or in use.

Injectors.

Metcalfe's Patent Exhaust Steam Injector.

The simplest method of using exhaust steam for feed water heating is by an exhaust steam injector. A saving of 10 to 15 per cent. of coal, and 12 to 15 per cent. of water, is claimed.

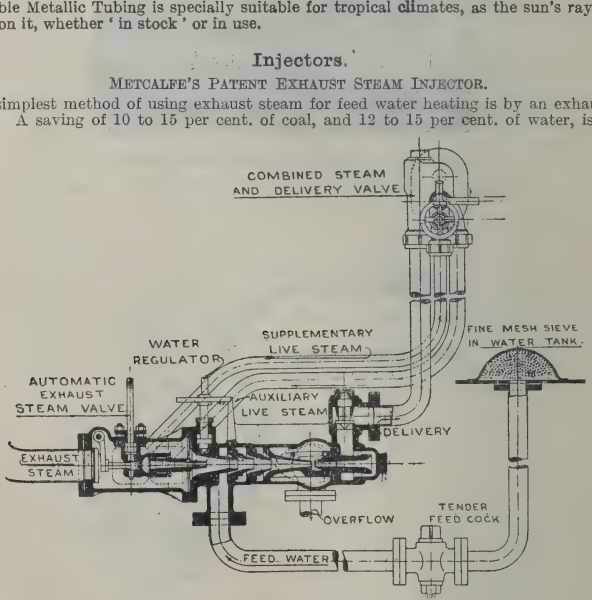


Fig. 16.—'Metcalfe' Patent Exhaust Injector (F. Type).

The latest type 'F' Metcalfe Patent Exhaust Injector is capable of working on exhaust steam alone against boiler pressures up to 150 lbs. per sq. in., and with the aid of a small jet of supplementary live steam it can feed against 300 lbs. pressure. The temperature of feed water delivered

to boiler varies from 200° to 220° F., depending on exhaust steam pressure. The amount of supplementary live steam is very small and does not exceed 2½ per cent. of evaporation of boiler. The water regulator, which slides the cone, can be adjusted so that the injector is kept continuously at work throughout the run, and will maintain a constant water level and steam pressure. By the introduction of very hot feed water the steaming power of the boiler is extended and the stresses in the plates, due to unequal contraction, are reduced. When the engine regulator is shut and the flow of exhaust steam ceases, the injector can be kept at work by the admission of a small quantity of live steam to take its place : this is termed auxiliary steam. The exhaust steam is conveyed from the cylinders to the injector by means of a large pipe. After leaving the cylinders the steam passes through a simple form of grease separator, consisting of a sleeve covered with Turkish towelling. Greasy water is discharged through an automatic drip valve.

A size 10 injector will deliver a maximum of 2,300 gallons of water per hour, and this can be reduced by the water regulator to a minimum of 1,380 gallons per hour (working continuously).

Gresham's Patent Hot Water Combination Injector.

These injectors, Fig. 17, work with either hot or cold water in the usual way, *i.e.* by opening the steam valve and water cock, and then regulating the water cock if necessary.

An internal steam pipe from the dome of the locomotive conveys steam to the injector steam valve A, which, being opened, admits steam to the steam nozzle 1 by the passage B. The steam

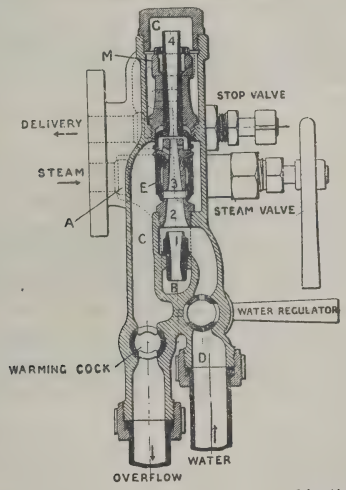


Fig. 17.—'Gresham' Patent Hot Water Combination Injector.

issuing from the steam nozzle opens the two side flaps E ; it also lifts the sliding delivery cone 4 making an aperture at M and passes out freely down the overflow pipe. In doing so it creates a partial vacuum in the water pipe D, and the water rises to the injector. The water then coming in contact with the steam travels with it through the lifting cone 2, and, in condensing, it creates a vacuum which closes the two side flaps E, thus preventing any air entering the cones. The velocity of the steam being now largely transferred to the water, the latter passes from the lifting cone 2 through the combining cone 3. After passing through this combining cone, the jet flows out of the aperture M and down the overflow pipe C until such time as it attains sufficient velocity to carry itself past this space and enter the delivery cone 4. When it reaches this point the jet is at its maximum velocity, and is so great that it is sufficiently powerful to lift the back pressure valve (not shown) and so enter the boiler. At the same time the pressure thus created in the chamber G forces the sliding delivery cone down on to its seat and closes the aperture M, shutting in the water which otherwise would be boiled off when the injector is working with water at 130° F. When the water is below 100° F. the injector will work dry with the aperture M open, like an ordinary injector.

In order to heat the feed water, exhaust steam is conducted from the cylinders to the tender by a large pipe. This connects to a multi-tubular heater through which the feed water flows. The condensation of the steam gives up heat which is absorbed by the feed water, thereby raising its temperature.

BRITISH STANDARD SPECIFICATIONS FOR MATERIAL USED IN THE CONSTRUCTION OF RAILWAY ROLLING STOCK.*

(Report No. 24—1921.) (*Abstract.*)

Locomotive Crank Axles—B.S.S. 1.

The crank axles shall be manufactured from the highest quality of steel made from the best selected material by the acid open-hearth process. On analysis, the steel must not show more than ·04 per cent. of sulphur or of phosphorus.

The metal must show a tensile breaking strength of not less than 32 tons per square inch, with an elongation of not less than 22 per cent. on Standard Test Piece C or D. The yield point in either case must be not less than 50 per cent. of the ultimate tensile strength.

A test piece 9 ins. long and 1¼ in. square, with $\frac{1}{10}$ in. radius at the edges, machined from each crank axle, must withstand being bent cold by direct pressure from a tool 2 ins. wide, the end having a radius of 1 in., until the sides of the test piece are parallel. The ends of the test-piece are then to be brought together without fracture, by direct pressure.

As an alternative to the cold bend test, the test piece may be placed upon bearings having a clear span of 6 ins., resting on a solid foundation, and must withstand, without fracture, 20 blows from a weight of 1,120 lbs., having a rounded end of 1¼ in. radius, falling 6 ins. The test piece shall be reversed after the first and every alternate blow. The fall shall then be increased to 12 ins., and the test continued until fracture occurs. Crank axles having flat or oval webs, test pieces to be taken from between webs. Crank axles having round webs, test pieces to be taken from end of axle.

All crank axles shall be either normalised or oil-treated.

Locomotive Straight Axles—B.S.S. 2.

Quality of material same as for locomotive crank axles, except that steel must not show more than ·05 per cent. of sulphur or phorphorus.

The axle shall be placed upon bearings resting on a block of metal of not less than 5 tons weight supported on a rigid concrete or other solid foundation, and must withstand, without fracture, 5 blows from a weight of 2,240 lbs., falling 16 to 35 feet, according as the diameter is under 4 or over 6 ins., the distance apart of the bearings being from 3 ft. to 5 ft.

The axle shall be turned after the first and third blow, and shall be broken after testing, both in the centre and at the journals.

The metal must show a tensile breaking strength of 35 to 40 tons per square inch, with an elongation on Standard Test Piece C or D of not less than 25 per cent. with 35 tons, and 20 per cent. with 40 tons; the sums of the intermediate tensile breaking strengths and corresponding elongations being not less than 60. The yield point must be not less than 50 per cent. of the ultimate tensile strength.

A test-piece 9 ins. long and 1¼ in, square, with $\frac{1}{16}$ in. radius at the corners, must withstand being bent cold by direct pressure from a tool 2 ins. wide, the end having a radius of 1 in., until the sides of the test piece are parallel. The ends of the test-piece are then to be brought together without fracture, by direct pressure.

N.B.—This test taken only when less number than 15 axles are ordered and falling weight test has not been carried out.

All axles shall be either normalised or oil-treated.

Locomotive Straight Axles—B.S.S. 2A.

The axles shall be manufactured from the highest quality of steel made from the best selected material by the acid or basic open-hearth or acid Bessemer process. In the event of the basic hearth process being employed, the maximum percentage of sulphur and phosphorus must not exceed ·05 per cent. The tests are the same as previous specification.

Carriage and Waggon Axles—B.S.S. 3, B.S.S. 3A.

Same as for locomotive straight axles (B.S.S. 2 and B.S.S. 2A), except that range of falling weight test is from 15 to 30 ft. for axles under 3¾ ins. to over 6 ins.

---

* By permission of the British Engineering Standards Association.

Locomotive Tyres—B.S.S. 4.

Quality of material same as for locomotive straight axles—B.S.S. 2.

The tyre shall be placed in a running position with the tread resting on a block of metal of not less than 5 tons weight supported on a rigid concrete or other solid foundation, and must withstand, without fracture, blows from a falling weight of 2,240 lbs. The weight shall be allowed to fall freely on to the tread from heights of 10 ft., 15 ft., 20 ft., and upwards, until the deflection of the tyre corresponds to that given in the following formula, in which d is the internal diameter of the tyre as rolled, in inches, and t is the thickness of the centre of the tread, as rolled, in inches. For tyres having an inside snip exceeding $1\frac{1}{4}$ ins. in depth, the calculated deflection shall be reduced by 5 per cent., and for tyres having an inside snip exceeding $1\frac{1}{2}$ ins. in depth, by 10 per cent.

Class C.—Tensile Breaking Strength 50 to 55 tons per square inch, and minimum elongation 13 to 11 per cent. (Standard Test Piece C).	Class D.—Tensile Breaking Strength 56 to 62 tons per square inch, and minimum elongation 10 to 8 per cent. (Standard Test Piece C).	Class E.—Tensile Breaking Strength 63 to 69 tons per square inch, and minimum elongation 10 to 8 per cent. (Standard Test Piece C).
$\frac{d^2}{50\,t^2}$	$\frac{d^2}{55\,t^2}$	$\frac{d^2}{60\,t^2}$

When so specified in the inquiry each tyre shall be allowed to drop freely in a running position, from the height specified below, upon a rail fastened to an iron block of not less than 2 tons in weight. Each tyre shall then be turned round through an angle of 90 degrees, and dropped a second time.

Internal diameter of tyre.	Up to $3\frac{1}{2}$ ft.	Over $3\frac{1}{2}$ ft. and up to $4\frac{1}{2}$ ft.	Over $4\frac{1}{2}$ ft. and up to $5\frac{1}{2}$ ft.	Over $5\frac{1}{2}$ ft. and up to $6\frac{1}{2}$ ft.	Over $6\frac{1}{2}$ ft.
Height of fall	5 ft.	4 ft.	3 ft. 6 ins.	3 ft.	2 ft. 6 ins.

Carriage and Waggon Tyres—B.S.S. 5.

The specification is the same as for locomotive tyres, with the addition of Class B tyres, tensile breaking strength 42 to 48 tons per sq. in. and minimum elongation 18 to 15 per cent.

Formula for deflection $\frac{d^2}{45\,t^2}$.

Carriage and Waggon Tyres—B.S.S. 5A.

Material same as locomotive straight axles—B.S.S. 2A. Otherwise same as carriage and waggon tyres—B.S.S. 5—except that Class E is omitted.

Laminated Springs—B.S.S. 6.

The spring plates shall be manufactured from the highest quality of steel made from the best selected material by the acid open-hearth process. The steel must not show more than ·8 per cent. nor less than ·5 per cent. of carbon, nor more than ·05 per cent. of sulphur or of phosphorus. The steel for the top plates, which have to be welded at the eye, must not contain more than ·7 per cent. nor less than ·45 per cent. of carbon.

All finished springs shall be tested by being deflected by a quick-acting scrag before the buckle is put on, to an amount equal to $\frac{L^2}{900t}$, where L is the length of the top plate in inches measured along the arc as shown in fig. 18, and is the thickness of the thickest plate in inches They must then stand being deflected again three times in quick succession without showing any permanent set. The required deflections are shown in the table and must not be exceeded at any time during manufacture by more than 15 per cent.




Fig. 18.

All plates shall be carefully hardened and tempered.

The buckles shall be made of good fibrous iron having a tensile breaking strength of from 20 to 24 tons per square inch, or of suitable steel having a tensile breaking strength of not more than 24 to 30 tons per square inch. The elongation in each case shall be not less than 20 per

L	Required Deflection under Scrag, in Inches.				
Ins.	$\frac{3}{8}$ in. plate.	$\frac{7}{16}$ in. plate	$\frac{1}{2}$ in. plate.	$\frac{9}{16}$ in. plate.	$\frac{5}{8}$ in. plate.
90	24	$20\frac{5}{8}$	18	16	$14\frac{3}{8}$
84	$20\frac{7}{8}$	$17\frac{7}{8}$	$15\frac{5}{8}$	14	$12\frac{1}{2}$
78	18	$15\frac{1}{2}$	$13\frac{1}{2}$	12	$10\frac{7}{8}$
72	$15\frac{3}{8}$	$13\frac{1}{4}$	$11\frac{1}{2}$	$10\frac{1}{4}$	$9\frac{1}{4}$
66	$12\frac{7}{8}$	11	$9\frac{5}{8}$	$8\frac{5}{8}$	$7\frac{3}{4}$
60	$10\frac{5}{8}$	$9\frac{1}{8}$	8	$7\frac{1}{8}$	$6\frac{3}{8}$
54	$8\frac{3}{8}$	$7\frac{3}{8}$	$6\frac{1}{4}$	$5\frac{3}{4}$	$5\frac{1}{8}$
48	$6\frac{3}{4}$	$5\frac{5}{8}$	$5\frac{1}{8}$	$4\frac{1}{2}$	$4\frac{1}{8}$
42	$5\frac{1}{4}$	$4\frac{1}{2}$	$3\frac{7}{8}$	$3\frac{1}{2}$	$3\frac{1}{8}$
36	$3\frac{7}{8}$	$3\frac{1}{4}$	$2\frac{7}{8}$	$2\frac{1}{2}$	$2\frac{1}{4}$
30	$2\frac{3}{8}$	$2\frac{1}{4}$	2	$1\frac{3}{4}$	$1\frac{5}{8}$

cent. (Standard Test Piece A), and the material must admit of bending, when cold, without showing crack or flaw, as follows:—

For iron, $\frac{3}{4}$-inch thick through an angle of 120 degrees.
„ $\frac{5}{8}$-inch „ „ 130 „
„ $\frac{1}{2}$-inch „ „ 140 „
For steel, all thicknesses, through an angle of 180 degrees.

In all cases the inside radius of the bend shall be not greater than $1\frac{1}{2}$ times the thickness of the test piece.

Laminated Springs—B.S.S. 6A.

Same as specification B.S.S. 6, except that spring plates shall be manufactured from steel made from selected material by the acid or basic open-hearth or the acid Bessemer process. In the event of the basic open-hearth process being employed, the maximum percentage of sulphur and phosphorus must not exceed ·05 per cent.

Laminated Springs—B.S.S. 6B.

The spring plates and bars shall be manufactured from the highest quality of steel made from the best selected material by the acid open-hearth process, and must not show on analysis more than ·8 per cent. nor less than ·5 per cent of carbon, nor more than ·05 per cent. of sulphur or of phosphorus. The steel plates or bars to be used for top plates, which have to be welded at the eye, must not contain more than ·7 per cent. nor less than ·45 per cent. of carbon.

As a test-pieces of steel 30 ins. long shall be cambered to a radius of eighty times their thickness, as shown below, hardened and tempered, and after being pressed straight once, and the camber carefully noted, must stand being pressed straight again six times in quick succession without any permanent set.

	Ins.	Ins.	Ins.	Ins.	Ins.
Thickness of plate . . .	$\frac{3}{4}$	$\frac{7}{16}$	$\frac{1}{2}$	$\frac{9}{16}$	$\frac{5}{8}$
Required camber . . .	$3\frac{3}{4}$	$3\frac{1}{8}$	$2\frac{3}{4}$	$2\frac{1}{2}$	$2\frac{1}{4}$
Minimum camber after first blow and the next six consecutive blows	$3\frac{3}{8}$	$2\frac{7}{8}$	$2\frac{1}{2}$	$2\frac{1}{4}$	2

Laminated Springs—B.S.S. 6C.

Material for spring plates and bars same as B.S.S. 6A. Tests same as B.S.S. 6B.

Volute and Helical Springs—B.S.S. 7.

The springs shall be manufactured from the highest quality of steel made from the best selected material by the acid open-hearth process. The steel must not show more than 1·3 per cent. nor less than ·8 per cent. of carbon, and not more than ·05 per cent. of sulphur or of phosphorus.

Each spring shall be tested by being driven home once by a quick-acting scrag, the height being carefully noted after release. The spring must then stand being driven home again five times in quick succession without showing any permanent set. Up to 5 per cent. of the springs shall also be tested under varying loads to determine the range and deflection per ton.

All springs shall be hardened in oil and tempered in a bath of molten lead.

Volute and Helical Springs—B.S.S. 7a.

The springs shall be manufactured from the highest quality of steel made from the best selected material by the acid open-hearth or the acid Bessemer process, and must not contain more than 1·3 per cent. nor less than ·8 per cent. of carbon.

Test same as B.S.S. 7.

Steel Forgings for Locomotives—B.S.S. 8.

The forgings shall be manufactured from steel made by the acid or basic open-hearth process.

The tensile breaking strength and minimum elongation on Standard Test Piece C or D to be as follows :—

Class.	Description of Forging.	Process of Manufacture.	Percentage of Sulphur or of Phosphorus.	Tensile Breaking Strength in tons per square inch.	Minimum Elongation per cent.
A	Special forgings which will be case-hardened	Acid or basic open-hearth	·05	Up to 27 tons	25
B	Ordinary forgings	Do.	·06	25 to 32 with	27
C	Special forgings without wearing surfaces	Acid open-hearth	·05	32 to 38 with	20 25
D	Special forgings with wearing surfaces	Do.	·05	40 to 45 with	20 20
E	Boiler forgings	Do.	·05	26 to 32 with	15 28 to 22

The sums of the tensile breaking strengths and corresponding elongations must be not less than 52 for Classes A and B, 57 for Class C, 60 for Class D, and not less than 54 for Class E. In the case of Classes C and D the yield point must be not less than 50 per cent. of the ultimate tensile strength.

A test piece, 9 inches long and 1¼ inch square, or as near this size as the forging or forgings selected will permit, with $\frac{1}{16}$ inch radius at the edges, machined cold, must, without any reheating, withstand being bent cold by direct pressure from a tool 1½ ins. wide in the case of Classes A, B, and E, 1¾ ins. wide in the case of Class C, and 2½ ins. wide in the case of Class D, the ends having a radius respectively of ¾ in., $\frac{7}{8}$ in., and 1¼ ins., until the sides of the test pieces are parallel. The ends of the test pieces of all classes of forgings, except Class D, shall then be brought together without fracture by direct pressure.

All forgings in Classes C and D shall be either normalised or oil-treated.

Steel Blooms for Locomotive Forgings—B.S.S. 9.

Specification and tests for Classes A, B, C, D, and E same as for B.S.S. 8.

Test pieces cut from blooms may be normalised or oil-treated.

Steel Castings—B.S.S. 10.

The castings shall be manufactured from steel produced by an approved process, and must not show on analysis more than ·07 per cent. of sulphur or of phosphorus.

All castings shall be thoroughly annealed by heating to a temperature not less than the normalising temperature and allowing to cool slowly from the maximum temperature in a practically uniform manner.

The minimum tensile breaking strength and elongation on Standard Test Piece C or D to be as follows :—

Description of Casting.	Minimum Tensile Breaking Strength per square inch.	Minimum Elongation per cent.
Castings with wearing surfaces	35 tons	10
Other General Castings and Wheel Centres	26 tons	15

In the case of castings other than those with wearing surfaces, a test piece 9 ins. long, turned to 1 in. diameter, must withstand being bent cold through an angle of 90 degrees round a bar 2½ ins. diameter without fracture.

When wheel centres are tested to destruction, the test shall be made by dropping the wheel centre on to a block of metal of not less than 5 tons weight, supported upon a rigid concrete or other solid foundation. The wheel centre shall be raised and allowed to fall freely in a running position through distances of 5 ft. and 10 ft. on the end of a spoke (where such exists), and then

turned through 90 degrees and again raised and allowed to fall freely in a running position through distances of 5 ft. and 10 ft. on the end of a spoke (where such exists). Any sign of failure under this test will render the wheel centres liable to rejection. The test shall then be continued, the fall being increased 5 ft. each time until fracture results or the wheel centre is doubled up.

Copper Plates for Locomotive Fire-boxes—B.S.S. 11.

(Report No. 24—1911.)

The plates shall be of one of two classes, to meet the largely varying chemical constituents of coal, and differing conditions of use, and must comply with the requirements specified below :—

Class A.—The plates must contain not less than 99 per cent. of copper, and ·35 per cent. to ·55 per cent. must consist of arsenic.

Class B.—The plates must contain not less than 99·25 per cent. of copper, and ·25 per cent. to ·45 per cent. must consist of arsenic.

Tensile breaking strength to be not less than 14 tons per square inch, with an elongation of not less than 35 per cent. on Standard Test Piece A.

Pieces of the plate shall be tested both cold and at a red heat by being doubled over on themselves—that is, bent through an angle of 180 degrees, without showing either crack or flaw on the outside of the bend.

Copper Rods for Locomotive Stay Bolts, Rivets, etc.—B.S.S. 12.

The rods must contain not less than 99·25 per cent. of copper, and ·15 per cent. to ·35 per cent. must consist of arsenic.

The tensile strength must be not less than 14 tons per square inch, with an elongation of not less than 40 per cent. on the standard test-piece having a gauge length of not less than eight times the diameter. When a very small test-piece is required, the standard test-piece having a gauge length of 3 ins., the elongation must be not less than 45 per cent.

A piece of rod 1 in. long shall be placed on end and hammered or crushed down to a thickness of $\frac{3}{8}$ in., without showing either crack or flaw on the circumference of the resulting disc.

Copper Tubes for Locomotive Boilers.—B.S.S. 13.

The tubes must contain not less than 99 per cent. of copper, and ·35 per cent. to ·55 per cent. must consist of arsenic.

The tubes must stand bulging, without showing either crack or flaw, until the diameter of the bulged end measures not less than 25 per cent. greater than the original diameter of the tube.

The tubes must stand flanging, without showing either crack or flaw, until the diameter of the flange measures not less than 40 per cent. greater than the original diameter of the tube.

The tubes must be capable of standing the following flattening and doubling over test, both cold and at a red heat, without showing either crack or flaw. A piece of the tube shall be flattened down until the interior surfaces of the tube meet, and then be doubled over on itself, that is, bent through an angle of 180 degrees, the bend being at right angles to the direction of the length of the tube.

All copper boiler tubes shall be tested by an internal hydraulic pressure of at least 750 lbs. per square inch.

Brass Tubes for Locomotive Boilers—B.S.S. 14.

Brass for locomotive boiler tubes may be of either 70/30 alloy or 2/1 alloy.

The tubes must consist of an alloy of copper and zinc, and must contain :—

70/30 Alloy.—Not less than 70 per cent. of metallic copper and not more than a total of ·75 per cent. of materials other than copper and zinc.

2/1 Alloy.—Not less than 66·7 per cent. of metallic copper and not more than a total of ·75 per cent. of materials other than copper and zinc.

The tubes shall be carefully annealed at both ends.

The tubes must stand bulging, without showing either crack or flaw, until the diameter of the bulged end measures not less than 25 per cent. greater than the original diameter of the tube.

The tubes must stand flanging, without showing either crack or flaw, until the diameter of the flange measures not less than 25 per cent. greater than the original diameter of the tube.

Flattening and doubling-over test the same as for copper boiler tubes.

Tubes to be tested by an internal hydraulic pressure of at least 750 lbs. per square inch.

Weldless Steel Tubes for Locomotive Boilers.

(Report No. 53—1913.)

1. The tubes shall be cold-drawn and weldless and shall be manufactured from steel of the best quality by the open-hearth process. They must not show, on analysis, more than 0·03 per cent. of sulphur or of phosphorus.

2. The tubes must be perfectly sound, well finished, clean, and free from surface defects and rust, and the ends must be faced clean and square. They must be of the dimensions specified, of uniform thickness, and, unless otherwise specified, of uniform diameter throughout.

3. The tubes shall be carefully annealed throughout their length after the operation of drawing.

6. The tubes or strips cut from the tubes shall, without further annealing, show a tensile strength of not more than 24 tons per sq. in., with an elongation of not less than 28 per cent. in 8 ins.

7. The tubes must, when cold, stand bulging without showing either crack or flaw until the diameter of the bulged end measures not less than 15 per cent. for tubes under 11 s.w.g. in thickness, and not less than 12½ per cent. for tubes 11 s.w.g. to 8 s.w.g. in thickness, greater than the original diameter of the tube (fig. 19).

8. A piece of tube, 2 ins. long, shall be placed on end and must, when cold, stand hammering down, until it is reduced to 1½ in. high, without showing either crack or flaw.




Fig. 19.




Fig. 20.

9. The tubes must, when cold, stand flattening without showing crack or flaw until the interior surfaces of the tubes meet, or, when the tubes are over 11 s.w.g. in thickness, until the interior surfaces are brought to a distance apart equal to the thickness of the wall of the tube (fig. 20).

10. Every tube shall be tested by an internal hydraulic pressure of at least 1,000 lbs. per sq. in.

Seamless Copper Tubes for Locomotive Feed Pipes, etc.—B.S.S. 15.

(Report No. 24—1911.)

The tubes must contain not less than 99·25 per cent. of copper, and ·25 per cent. to ·45 per cent. must consist of arsenic.

The tubes must stand drifting, without showing either crack or flaw, until the diameter of the drifted end measures at least 25 per cent. greater than the original diameter of the tube.

Flattening and doubling-over test the same as for copper boiler tubes.

Hydraulic pressure test to be according to requirements.

Steel Plates, Angles, etc., and Rivets for Locomotive Boilers—B.S.S. 16.

(Report No. 24—1921.)

The plates, sections and bars shall be manufactured from steel made from selected material by the acid or basic open-hearth processes, as may be specified. The steel must not show on analysis more than ·05 per cent. of sulphur or of phosphorus.

When plates are required for flanging purposes it shall be so stated at the time of inquiry.

Test pieces to be cut crosswise from rolled material in case of plates, and lengthwise in case of sectional material. When material is annealed or otherwise treated before dispatch, the test pieces shall be similarly and simultaneously treated with the material before testing. Any straightening of test pieces shall be done cold.

For plates, angles, etc., a Standard Test Piece A, and for round bars (other than rivet bars a Standard Test Piece B, must show a tensile breaking strength of 26 to 30 tons per sq. in., with an elongation of not less than 22 per cent. When bars are above 1 in. in diameter and are tested full size as rolled, or have been turned down and the resulting test piece is above 1 in. in diameter, Standard Test Piece F may be used, in which case the elongation shall be not less than 27 per cent.

For rivet bars Standard Test Piece B must show a tensile breaking strength of 24 to 28 tons per sq. in., with an elongation of not less than 27 per cent. If tested on Standard Test Piece F the elongation shall be not less than 32 per cent. The bars may be tested the full size as rolled.

For both cold and temper bends the test piece must withstand, without fracture, being doubled over until the internal radius is not greater than the thickness of the test piece, and the sides are parallel.

Bend tests may be made either by pressure or by blows. For rivet bars temper bend tests only are required.

In all cold or temper bend tests the sheared edges may be removed by milling, planing, grinding, or other method. The cold bend test pieces shall not be annealed, unless the material from which they are cut is similarly annealed, in which case the test pieces shall be similarly and simultaneously treated with the material before testing.

For temper tests the test pieces shall be heated to blood red and quenched in water at a temperature not exceeding 80 deg. Fahr.

Tests for Manufactured Rivets.—The rivet shanks shall be bent cold, and hammered until the two parts of the shank touch, without fracture, on the outside of the bend. The rivet heads shall be flattened without cracking at the edges until the diameter of the head is 2½ times the diameter of the shank.

Steel Plates, Angles, etc., and Rivets for Locomotive Frames—B.S.S. 17.

(Report No. 24—1911.)

The plates, sections and bars shall be manufactured from steel made from selected material by the acid or basic open-hearth process. If the specification is *with analysis*, the steel must not show more than ·06 per cent. of sulphur or of phosphorus.

Plates must show a tensile breaking strength of 28 to 32 tons per square inch, with an elongation on Standard Test Piece A of not less than 20 per cent. for plates of ·375 in. in thickness and upwards, and 16 per cent. for plates below ·375 in. in thickness.

Sectional material must show a tensile breaking strength of 28 to 32 tons per square inch, with an elongation of not less than 20 per cent. on Standard Test Piece A or B, or 24 per cent. with Standard Test Piece F. For material under ·312 in. thick bend tests only are required.

Rivet bars must show a tensile breaking strength of 24 to 28 tons per square inch, with an elongation of not less than 27 per cent. on Standard Test Piece B, or 32 per cent. with Standard Test Piece F. Bars may be tested full size as rolled.

Cold and temper bend tests and tests for manufactured rivets same as B.S.S. 16.

Steel Plates, Angles, etc., and Rivets for Locomotive Frames—B.S.S. 17a

Same as B.S.S. 17, but without analysis.

Steel Plates, Angles, etc., and Rivets for Carriage and Waggon Underframes—B.S.S. 18, B.S.S. 18a.

Specifications same as for locomotive frames, B.S.S. 17, B.S.S. 17a.

Wrought Iron.

(Report No. 51, 1913.)

Specifications are given for wrought iron, best Yorkshire and Grades A, B, and C. The tensile tests, etc., vary with the sizes of the different sections rolled.

Other Materials used in Locomotive Construction.

Iron Castings.—The tensile test is the most trustworthy; 7 tons per sq. in. is the usual specification; 8 and 9 tons may be demanded in reason and expected. General foundry iron up to 11½ and 12½ tons per sq. in. and cylinder iron up to 13½ and 14 tons per sq. in. are not unknown, each having good fractures, and being good workable foundry metal. The usual commercial test is generally made transversely upon bars 3 ft. long, 2 ins. deep, and 1 in. thick, without being machined, 25 to 32 cwts. being the specified central breaking load. The test bars should be cast by means of an attachment to the casting, and the specified ultimate loads should not vary more than 1 per cent.

Bronze, Brass, White Metals, and other Alloys.—These compositions can be produced in almost infinite variety. Generally they should be homogeneous, that is, liquation must be prevented as well as oxidation. Examples of the composition per cent. are given in the following table :—

TABLE SHOWING COMPOSITION OF ALLOYS FOR PARTS OF LOCOMOTIVE ENGINES.

Description.	Copper. Cu.	Tin. Sn.	Zinc. Z.	Lead. Pb.	Phosphorus. P.	Iron. Fe.	Silicon. Si.
Bronze, old copper tin alloy	87·5	12·5	..	..	..	..	..
„ a standard American bearing	80·0	10·0	..	9·5	0·5	..	..
„ English, generally	80·0	18·0	2	0·5	..	..	..
	88·0	10·0	2	0·5	..	..	..
„ „ slide valves	82·5	14·5	..	..	0·36	2·0	0·04
„ „ „ „	85·0	11·6	3·9	..	0·16	..	..
„ „ „ „	83·5	6·0	..	10	1·5 to 0·5	..	..
Brass, English, generally	70·0	..	30·0	0·5	..	..	..

For white or antifriction metals lead now forms the base (originally tin), with a varying quantity of antimony as a hardener. Ferro, silicon, manganese, and aluminium bronzes are produced to meet specific requirements.

See also Section XXXVII (Metallurgy).

Contract Specification.

The *Contract Specification* should also provide for delivery and payment after running a guaranteed mileage (about 3,000 to 5,000). That all parts shall be constructed exactly to the drawings supplied, and no deviation made whatever without consulting those responsible for letting the contract, and that lack of information shall be no excuse for discrepancies in material or construction. The price quoted must be inclusive, and no responsibility shall devolve upon the purchaser for royalties and patent rights. The quotation should also include drawings (2 complete sets), photographs (12), lists of details, weights, etc., to be furnished with the (3rd of 5th) engine.

It should also stipulate that the workmanship should be accurate and well finished.

Use of Materials made to British Standard Specifications.

(Report No. 24—1911 & 1921.)

No. 1.—Crank axles.

Nos. 2 *and* 2A.—Straight axles, locomotive and tender.

Nos. 3 *and* 3A.—Carriage and waggon axles.

No. 4.—Tyres for locomotive and tender. Class C is the most commonly specified.

Nos. 5 *and* 5A.—Carriage and waggon tyres. Class C for carriages and Class B for waggons are the most commonly specified.

Nos. 6 *and* 6A.—Laminated springs, purchased complete.

Nos. 6B *and* 6C.—Plates and bars for manufacturing laminated springs, spring wearing plates, flat springs.

Nos. 7 *and* 7A.—Manufactured volute and helical springs.

No. 8.—Steel forgings of Classes A to E (as below).

No. 9.—Steel blooms for making forgings. *Class A* is used for motion work and pins and other parts requiring to be case-hardened ; spring hangers and links, brake work, draw bar, and safety links and pins, coupling screw and shackle, regulator rod, fire hole ring, foundation ring, and other parts requiring a weld. *Class B* for ordinary forgings, valve spindles, motion work not requiring case-hardening, reversing shaft and rod, reversing screw, buffer heads, regulator handle, roof slings, safety valve, and other seatings, wash-out doors and bridges, etc. *Class C*., connecting and coupling rods, crossheads, keys and cotters. *Class D*, piston rods, slide bar, crosshead cotter. *Class E*, boiler forgings.

No. 10.—Steel castings. Wheel centres form one class ; castings with wearing surfaces another, and this includes axle boxes and guides, bogie centres, bogie slide, brake shaft brackets, spring brackets, buffer plungers and guides. General castings without wearing surfaces include motion plate or slide bar brackets, smoke-box saddle, etc.

No. 11.—Copper fire-box plates.

No. 12.—Copper stays and studs.

No. 13.—Copper boiler tubes.

No. 14.—Brass boiler tubes.

No. 15.—Copper pipes for feed water and steam.

No. 16.—Boiler barrel and fire-box shell plates, front tube plate, rivets, stays, nuts, angles rods, etc., for boiler work. Expansion brackets, roof stays, palm stays.

Nos. 17 *and* 17A.—Locomotive and tender frame plates and cross stays, angles, bolts, rivets, plating, ash pan and doors, fire door, smoke-box and door, cab, tender tank plates, etc.

Nos. 18 *and* 18A.—Steel plates, angles, and other sectional material for carriage and waggon underframes.

Report No. 53 (1913).—Weldless steel tubes for boilers.

Liquid Fuel.

On the Great Eastern Railway, express engines can be fired with coal only on a consumption of about 50 lbs. per mile, or with coal and liquid fuel combined, on a consumption of 10 lbs. of coal and 30 lbs. oil fuel, including lighting up in each case.

The suitable oil fuels consist of petroleum residue, or Astatki, having a specific gravity of ·905, flash point 214° F.; distillates from coal gas tar with a specific gravity of 1·11, flash point 196° F.; coal gas tar with a specific gravity of 1·23, flash point 200° F.; or oil gas tar (refined) with a specific gravity of 1·05, flash point ·30° F.

The theoretical efficiency of oil fuel can be more nearly approached in practical working than that of coal, and with petroleum residue (the best oil fuel), 66·6 per cent. of its heat can be transferred into steam, whereas with steam coal 55·5 per cent. is about the average.

Engine No. 1862, a four-coupled bogie express, with a train weighing about 250 tons, exclusive of engine, ran from Liverpool Street to Cambridge on an expenditure of 120 gallons of oil fuel

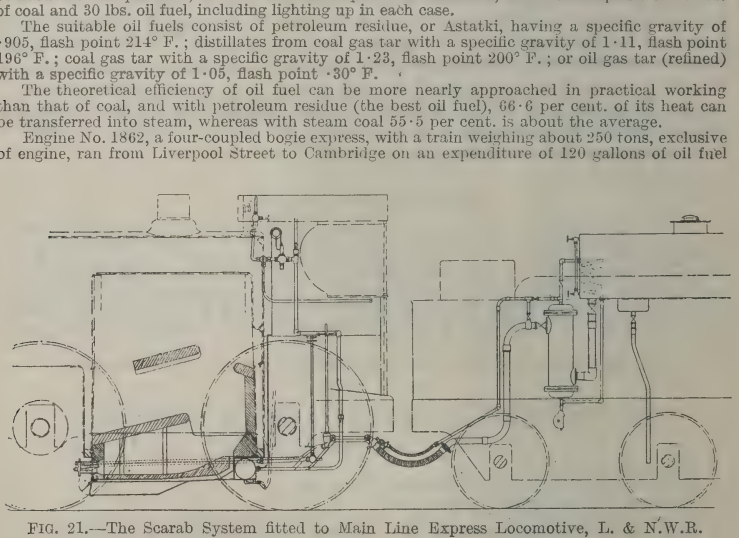


FIG. 21.—The Scarab System fitted to Main Line Express Locomotive, L. & N.W.R.

—oil gas tar—and a layer of coal and broken firebrick on the firebars. Steam was easily kept up during the trip, and no smoke was emitted from the chimney, thus showing that complete combustion of the fuel was effected (Holden's system).

On the L. & N.W.R. an engine of the 'Precursor' 4–4–0 class (non-superheater) has recently been fitted for burning oil (fig. 21), of which 1,000 gals. is carried in a special tank mounted on the tender and filled by means of a semi-rotary hand-pump fixed at the rear end of the tank. The burners are made by the Scarab Oil Burning Co., and are of the gravity-feed type, the atomising agent being steam, which is supplied at a pressure of from 10 to 15 lbs. per sq. in. through a reducing valve. A receiver is interposed between reducing valve and burners to steady the supply. The burners are below the front of the firebox and supported by a casing which also supports the fire-brick floor of the firebox. Air-ducts are arranged underneath the floor so that the air supply is preheated. Three arches are provided, one immediately above the burners springing from near the foundation ring, another arranged as in a coal-burning engine but stopping off about 16 ins. from the tube plate, and a third under the firehole door. Brickwork is carried up from the floor as far as the baffle arch. This construction, by lowering the floor, increases the capacity of the box, which makes for improved combustion. The flooring just in front of the burners is perforated, allowing of a supply of air from the duct to be delivered under the point where the oil breaks into flame. Three burners, one centre and two side, are

fitted, but it is found that the best results are obtained from the centre burner alone, and it is capable of generating enough steam to take trains up to the rated capacity of the locomotive. The raising of steam is accomplished by coupling up to another engine by means of a flexible pipe. In this way steam is obtained for atomising the oil, and for the blower, which is kept in action while steam is raised. A Royle heater is fitted for heating the oil supply in cold weather, so that it flows readily. Arrangement is also made for blowing out the oil supply pipes with steam in order to keep them clean. On one trip the oil consumption recorded was 32 lbs. per

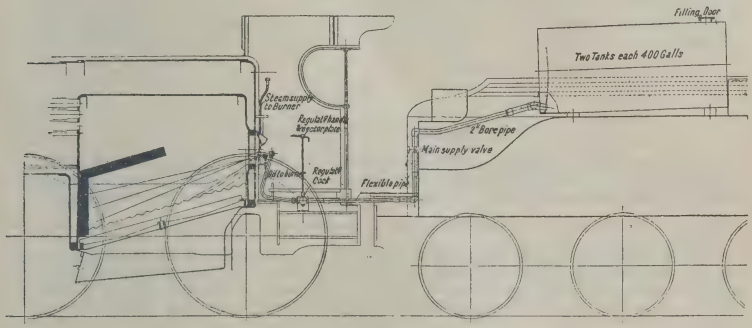


FIG. 22.—Midland Railway Oil-firing Arrangement.

mile, or 10·88 lbs. per 100 ton-miles with a train of 294 tons; and 24⅛ lbs. per mile, or 9·25 lbs. per 100 ton-miles with a train of 264 tons. The average consumption of coal by the same engine is about 70 lbs. per mile.

The Midland Railway burns oil in conjunction with a certain amount of coal; the burner is inserted through the fire-hole door, no alteration being made to the fire-box except by bricking up the portion of the tube plate under the brick arch (fig. 22). The oil issues from the top

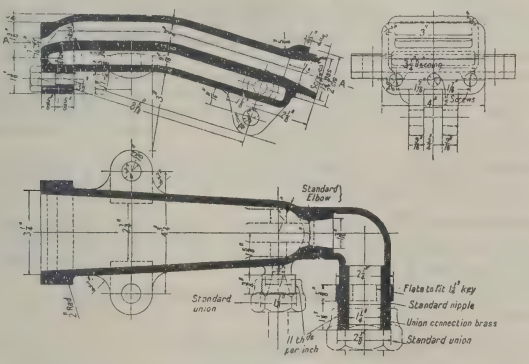


FIG. 23.—Oil Fuel Burner, Midland Railway.

portion of the burner in a thin stream or ribbon, and is atomised by coming in contact with a flat jet of steam which issues immediately under it from an orifice somewhat wider than that through which the oil flows. The details of the burner are shown in fig. 23.

The burner is inserted in the fire-hole, and is fed from two tanks placed on the tender, each of which holds from 400 to 500 gals. of oil. The flame is directed under the brick arch; the top portion of the fire-hole is closed by a special door which can be opened if it is necessary to use coal.

The fire-bars are covered with a layer of broken fire-brick, and if it is at any time necessary to use a little coal, it is put at the back of the fire-box. The fire can be started with wood, and as soon as the steam pressure reaches about 40 lbs. the burner can be used. In many cases no coal whatever is burnt for long periods, the engine steaming freely and the fire requiring very little attention. The best steaming results are, of course, obtained when there is a slight amount of smoke given off at the chimney. The locomotives fitted with this arrangement are able to deal easily with their accustomed loads. The advantage of the system is the ease with which it can be fitted up, and the simplicity in handling.

The company has one engine in which a similar burner is fitted in front of the ashpan, the fire-box being suitably bricked in on the sides and ends. (*The Engineer.*)

See also Section XXXI, FUELS, page 1767.

Lubricating Oil Consumption.

The oil consumption of different railways varies considerably, but under favourable conditions 1 lb. of cylinder oil and 4 lbs. of engine oil are required per 100 miles. Superheater engines use rather more cylinder oil than non-superheater, and the quality of the oil is more expensive.

The oil consumption of the 4-6-0 Great Western Engines averages 5 lbs. per 100 miles.

Sight feed lubricators on the hydrostatic principle, delivering oil to the steam pipes, are used on both superheater and non-superheater engines. It is more usual on superheater engines to employ a mechanical force feed lubricator driven by an attachment to some part of the engine motion. In this case oil is delivered direct to the piston valve heads, and the middle of each cylinder bore.

The practice of feeding oil to the crowns of axle boxes by mechanical lubricators is also extending, more particularly in the case of heavy eight wheels coupled mineral engines.

FOR LUBRICATION AND LUBRICATORS, see page 909.

Fuel Consumption.

The consumption of fuel varies to a considerable extent, but may be taken for English express engines from about 30 to 40 lbs. per train mile. Hard firing is not economical; the carbonic oxide escapes unburnt. Approximate perfection is approached when about 50 or 60 lbs. of fuel is consumed per hour per sq. ft. of grate area.

The average coal consumption of the non-superheated 'Precursor' type locomotives engaged in working the principal express passenger services of the London and North Western Railway is 56 lbs. per mile. The superheater locomotives of the same general pattern consume only about 38 lbs. per mile, while for the run between London and Holyhead their consumption has been as low as 34½ lbs. per mile as a monthly average.

E. A. Johnston states that the average rate of combustion in British express engines on heavy service is about 100 lbs. per sq. ft. of grate area per hour, and about 50 lbs. of coal per mile; the maximum rate may reach 160 lbs. per sq. ft. of grate area per hour.

The evaporative power of locomotive boilers amounts to from 7 to 10 lbs. of water per pound of coal consumed. Longridge states that no rule can be fixed as to the best relative proportions of heating surface between grate area, fire-box, and tubes. It is an axiom that the capacity of a locomotive depends entirely upon its fire-box.

The consumption of fuel in a locomotive engine at rest is about one-fifth of that consumed when the engine is in motion.

American locomotives running at 43 miles per hour, and drawing a total of 250 tons, burn 50 lbs. of coal per mile. Their weight averages 100,000 lbs.

Water Consumption.

With a piston speed of 900 ft. per minute and a boiler pressure of 175 lbs. per sq. in., locomotives using saturated steam require about 24 lbs. per i.h.p. hour. The evaporation is approximately 8 lbs. of water per pound of coal, or 9½ lbs. from and at 212°F. The coal consumption is therefore 3 lbs. per i.h.p. hour. Locomotives using superheated steam require 25 per cent. less, or about 18 lbs. of steam per i.h.p. hour. The coal per i.h.p. is 12½ per cent. less, or roughly 2¼ lbs. per i.h.p. hour, the evaporation being 7 lbs. of water per pound of coal.

Examination of Locomotives at Running Sheds.

A failure on the road is a serious matter, and the best way of reducing breakdowns to a minimum is by periodical examinations. The following is a list of the usual examinations of the G.N.Rly.:—

Slide valves:—	
Piston valves	2 months
Richardson's	2 ,,
'D' valves, $\frac{7}{8}$ in. thickness	4 ,,
'D' ,, $\frac{3}{4}$ and $\frac{11}{16}$ in. ,,	3 ,,
'D' ,, $\frac{5}{8}$ and $\frac{9}{16}$ ins. ,,	2 ,,
'D' ,, $\frac{1}{2}$	1 month
Pistons	3 months
Tender tanks	1 month
Drip valves	1 ,,
Safety valves	6 weeks
Ball valves in water gauge frames (dependent upon quality of water in district.)	2 months
Lead plugs	1 month
Large ends	3 months
Small ends	6 months
Vacuum regulating valves	1 ,,
Water scoops	1 ,,
Fire-boxes	1 week
Axle-box pads	3 months
Injectors	1 month
Main steam pipes on superheated engines	1 ,,
Tender wheels gauged	1 ,,
Leading wheels of 2–4–0 type gauged	1 ,,
Engine and tender tyres gauged	1 ,,
Mechanical lubricators to slide valves and pistons	2 ,,
Mechanical lubricators to axle-boxes	1 ,,

Cracked frames, flaws in connecting and coupling rods, or any part of motion, loose tyres, etc., should also be watched for. (*G. A. Musgrave, 'Proceedings, Inst. Loco. Engrs.'*)

Engine and Tender Tools and Equipment.

Carried in Tool Boxes.

Flat chisel
Pin punches (large and small).
Chipping hammer.
Wrench for Union nuts.
Complete set of spanners
Adjustable wrench.
Tommy bar.
Large can for engine oil (6 to 8 quarts).
Large can for cylinder oil (6 to 8 quarts).
Small can for paraffin (about 1 quart).
Spring valve oil feeder, long spout.
Spring valve oil feeder, short spout.
Flare lamp.
Case of fog signals.
Red flag.
Hand sweeping brush.
Packing drawer, Tallow pot. } (if required).
Spare glasses for water gauge.
Spare glasses for sight feed lubricator (if fitted).
Spare packing rings for glasses.
Copper wire for trimmings.
Worsted for trimmings.
Spare cotter pins.
Spare nuts.

Carried on Tender.

Fire rake, Pricker, Dart, Tube scraper, Clinker shovel. } (length to suit firebox).
Slice (to suit depth of firebox at back).
Coal hammer.
Coal pick.
Pinch bar.
Bucket.
Fireman's shovel.
Screw-lifting and traversing jack (if specified).

Other Equipment.

Full set of head and tail lamps.
Full set of head boards or discs (when used).
Water gauge lamp.
Sight feed lubricator lamp (if required).

Special Equipment at Shed for Class of Engine.

Spanner for brake screw adjusting nuts.
Box spanner for fusible plugs.
Ashpan rake.

Tenders.

The water capacity of tenders on British railways varies considerably. On the London and North Western Railway many tenders are under 3,000 galls. and the Great Western Railway uses 3,500 galls. for the largest engines, but these railways possess numerous water troughs, so that light six-wheeled tenders suffice. The London and South Western and the Caledonian Railways have large bogie tenders of some 5,000 galls. capacity.

The coal capacity does not vary so much, and lies between five and seven tons, depending on the size of the engine.

The connection between engine and tender consists of a simple eye-ended bar with one or both holes elongated to allow for the buffing which is taken up at the centre on a massive helical spring through which the bar passes. Safety links or loops are provided on either side but only come into operation in the event of the bar breaking.

Several railways prefer side buffers as they help to damp out oscillations of the engine by the friction of the rubbing surfaces. The central arrangement is better for sharp curves.

Water Troughs.

Effective length s from 440 to 560 yards. Theoretically a quantity of about 1,000 gallons can be picked up, the mouth of the scoop being at rail level and 1½ ins. below water level. In practice considerably more is obtained owing to the heaping up of the water in front of scoop, the maximum being obtained at 45 miles per hour with some 1,700 galls. At higher speeds there is a considerable loss by spray. The lowest speed at which water can be picked up is 15 miles per hour.

When running at 60 miles an hour over a water trough ¼ mile long, a locomotive tender will pick up about 1,000 gallons or 10,000 lbs. of water.

Brakes.

In addition to hand brakes the majority of engines and tenders are fitted with power brakes usually the standard Westinghouse or Automatic Vacuum apparatus (page 631). The larger railways manufacture their own vacuum brake fittings. Goods engines not fitted with a continuous brake have a simple steam brake. Many engines are fitted with a steam brake working automatically with the vacuum by means of a valve of simple construction which can either be controlled by the vacuum in the train pipe or by hand. This is found to be a convenience, and the brake cylinders being of small diameter occupy but little space under the engine. The arrangement is extensively used on the Midland and other railways and gives very satisfactory results.

Instead of a small ejector for maintaining the vacuum in the train pipe, several railways employ a vacuum pump about 5 ins. bore directly driven from one of the crossheads of the engine. As the pump is capable of creating a high vacuum a relief valve is provided to limit the vacuity. On the Great Western Railway this is set for 25 ins., resulting in a running vacuum of 26 ins. of mercury. The London and North Western and one or two other railways set the valve for the standard 20-inch vacuum, which results in 22 inches being maintained when running. Less trouble from pumps running hot is experienced with the higher vacuum, and the size of brake cylinders or leverage is reduced a little on account of the greater available atmospheric pressure, but no practical difficulties arise in the interchange of rolling stock with other railways.

The percentage of brake power, that is pressure on brake blocks in relation to load on wheels, should not exceed 75 per cent. for coupled wheels and 100 per cent. of weight when empty for tenders. If bogie wheels of engine are braked the percentage should not exceed 50 in order to minimise any chance of skidding.

To avoid frequent taking up of blocks brake leverage should not be too great. With steam and air brakes leverage is about 7 to 1; vacuum brakes are sometimes as much as 14 to 1 on account of difficulty of finding room for large cylinders. With this ratio a 7-inch piston travel allows ¼ inch clearance for blocks and ¼ inch wear.

Steam Rail Motor Cars.

A large number of rail motor cars were built between the years 1904 and 1909. There are two principal types, one having a steam bogie at one end on which a vertical boiler is mounted. The Great Western Railway have approximately 100 of these cars, half of which are 70 feet long

over headstocks, the rest being nearly all 59 ft. 6 ins. in length. The cylinders are 12 ins. by 16 ins., the wheels 4 ft. diameter, water capacity of tanks 450 galls. The boiler is vertical, 4 ft. 6 ins. diameter with cone top, and has 458 tubes 1⅛ in. diameter, total heating surface 659 sq. ft. and grate area 11½ sq. ft. The pressure is 160 lbs. per sq. in. and the tractive effort 6,912 lbs. The 70 ft. cars seat 61 passengers and the weight on motor bogie is 26·9 tons, and on the trailing bogie 16·25 tons. Walschaert valve gear is fitted. The other type of rail motor car consists of a miniature tank locomotive on which one end of the car body rests, the trailing end being carried as usual on a standard carriage bogie. The dimensions and weights are very much the same as for the first type.

Very few cars have been built during the last ten years. The tendency is to use up obsolete locomotives and carriages by suitably converting them for motor services. A small tank engine is attached to one or more trailer cars to form a unit which can be driven from either end. When pushing the car, the locomotive is controlled by the driver from the opposite end of the train by means of levers and rods with universal joints connected to the regulator. A brake valve and whistle cord are provided and an electric bell signal enables the driver to communicate with the fireman on the footplate.

ROLLING STOCK.

(Revised by H. Holcroft, M.I.Loco.E.)

GREAT WESTERN RAILWAY.

Corridor Bogie Carriages.

Length.	Type of Vehicle.	Weight.	Length.	Type of Vehicle.	Weight.
Ft.		Tons Cwt.	Ft.		Tons Cwt.
70	Brake third	32 3	70	Slip composite	32 15
70	Third	33 11	57	Slip composite	28 5
70	First & third composite	34 4	70	Sleeping car	41 16
70	Dining car	38 18	70	Brake van	32 5
70	Dining car	37 5	70	Parcels van	28 0
70	Brake composite	32 15			

LONDON AND SOUTH WESTERN RAILWAY.

Carriages.

Principal express trains are formed of corridor stock consisting of the following vehicles :—

	Length.	Seats. 1st.	3rd.
Dining-car (with kitchen)	56 feet	11	17
Bi-composites	54 ,,	12	24
	54 ,,	16	18
Bi-composite (with guard's brake)	56 ,,	8	28
Thirds	56 ,,		64
Third brakes	56 ,,		32

The principal main line trains are formed of sets of lavatory coaches, each coach 56 ft. long, and each set of 4 coaches having 26 first and 160 third-class seats.

The principal suburban services are worked by sets of 8 coaches, divisible in the centre; 4 coaches only being used during that part of the day when the traffic is light. Each set of 4 coaches has 2 third brakes, 51 ft. long, 1 composite 51 ft. long, and 1 composite 49 ft. long, the total seating accommodation being 42 first and 218 third-class.

The branch line services are performed by two coach bogie sets, accommodating 10 first and 84 third-class passengers.

Trains for Bournemouth Service.—The coaches are of the corridor type. Each train has seating accommodation for 42 first and 154 third-class passengers, and consists of five coaches, as follows :—

Brake third . . 4 compartments, one lavatory and one baggage compartment.

Third	8	compartments, two lavatories.
Pantry third	7	,, one lavatory, one pantry.
First	7	,, two lavatories.
Brake third	4	,, one lavatory, one baggage compartment.

PRINCIPAL DIMENSIONS.

	Ft.	Ins.		Ft.	Ins.
Length over buffers	60	7	Wheel base of bogie	9	0
,, bodies	57	0	Width outside waist	9	0
,, headstocks	56	11	Width at cant rail (outs.)	8	9
Centre of bogies	41	0	Height, rail to outside roof	12	5

WAGGONS.

Fifty different types of goods waggons are in use, varying in length from 18 to 50 ft. and in carrying capacity from 8 to 40 tons.

LONDON AND NORTH WESTERN RAILWAY.

WEST COAST JOINT STOCK CORRIDOR CARRIAGES.

Length.		Type of Vehicle.	Weight.		Length.		Type of Vehicle.	Weight.	
Ft.	Ins.		Tons	Cwt.	Ft.	Ins.		Tons	Cwt.
50	0	Brake van	22	13	50	0	Brake third	25	11
50	0	First	25	18	50	0	Composite	27	4
65	6	Dining car composite	41	18	65	6	Brake third	39	10
50	0	Third	26	0	65	6	Composite	42	0
50	0	Brake composite	27	0	65	6	Brake composite	41	4
50	0	Brake first	25	8	57	0	Brake composite	31	13

Maximum dimensions of West Coast Joint Stock corridor carriages :—

	Ft.	Ins.		Ft.	Ins.
Length over vestibules	65	6	Bogie wheels diameter (new)	3	7½
Length over headstocks	65	6	Between centres of bogies	43	0
Maximum width of carriage	9	0	From rail level to top of roof	12	5½
Bogie wheel-base	12	6			

GREAT NORTHERN RAILWAY.

CARRIAGES.

Vehicle.	Length over Body.		Width over Body.		Weight.			Compartments.		Accommodation.	
	Ft.	Ins.	Ft.	Ins.	Tns.	Cwt.	Qr.	1st	3rd	1st	3rd
First Dining Car and Kitchen	65	6	9	0	40	0	0	2	0	20	0
Composite Dining Car and Kitchen	65	6	9	0	41	8	2	1	1	8	18
Sleeping Car	58	6	9	0	35	0	1	11	0	11	0
Sleeping Composite	58	6	9	0	30	8	2	4	1	16	6
Composite	58	6	8	6	29	8	2	3	4½	12	27
Third	58	6	8	6	29	7	3	0	8	0	48
First	58	6	8	6	29	12	0	7	0	28	0
Composite Brake	58	6	8	6	29	19	0	3	3	12	18

WAGGONS.

19 ft. long : 8 ft. wide ; 10 ft. wheel base ; 10 tons carrying capacity.

GREAT CENTRAL RAILWAY.

Carriages.

Class.	Length of Body.	Length over Buffers.	Weight.	Seating Capacity.
First	50 ft.	53 ft. 1½ ins.	28 tons 8 cwts.	42
Third	50 „	53 „ 1½ „	27 „ 14 „	80
Third Brake.	50 „	53 „ 1½ „	27 „ 0 „	50
Trains usually consist of 2 Firsts, 2 Thirds, and 2 Carriage Brakes. The Corridor Trains are also 6 vehicles, thus :—				
Third Brake.	45 ft. 0 ins.	48 ft.	29 tons 0 cwt.	24 Thirds
Third Class.	50 „ 0 „	53 „	30 „ 0 „	42 „
Third Diner.	60 „ 0 „	63 „	38 „ 0 „	48 „
Kitchen Car.	47 „ 6 „	50 „	38 „ 7 „	8 Firsts
First Diner	60 „ 0 „	63 „	37 „ 10 „	20 „
Third Brake	45 „ 0 „	48 „	29 „ 0 „	24 Thirds

For theatrical traffic, scenery trucks 45 feet long are provided.

In addition to the foregoing and following types, a quantity of non-vestibuled non-lavatoried carriages have been built; the full third class type carrying as many as 120 passengers, the first class ditto 64 passengers, and the composites 32 first and 60 third class passengers.

Description.	Length of Body.	Width of Body.	Weight.	Compartments. 1st.	3rd.	Kitchen.	Lavatory.	Luggage.	Brake.	Passengers. 1st.	3rd.	Total.	Brake.	Remarks.
	Ft.	Ft. Ins.	Tns Cwt.											
Composite Brake	56	8 6	34 6	2	3	—	1	—	1	12	24	36	Dual	Types of vehicles put into service during 1911 :—
Composite	56	8 6	34 11	2	4	—	1	1	—	12	32	44	Dual	
Composite Luncheon	56	8 6	38 9	2	2	1	2	—	—	12	16	28	Dual	They are mounted on duplex bolster, four-wheeled bogies; they are all electrically lighted, fitted with atmospheric pressure steam heating, and the lavatory tanks are fitted with water heating apparatus. The hand brakes have protecting 'tell tales.'
Dining Car	56	8 6	34 4	—	2	—	2	*	—	—	48	48	Dual	
Third & Brake	60	8 10½	34 0	—	6	—	1	—	1	—	48	48	Vacuum	
Composite	60	8 10½	35 14	4	3	—	2	*	—	20	24	44	Vacuum	
Third & Brake	60	8 10½	33 19	—	5	—	1	—	1	—	40	40	Vacuum	
Dining Car	60	8 10½	34 18	—	2	—	2	*	—	—	48	48	Dual	
Composite and Kitchen	60	8 10½	38 17	2	2	1	2	*	—	12	16	28	Vacuum	
First	60	8 10½	36 16	7	—	—	2	—	—	38	—	38	Dual	
Third	60	8 10½	36 3	—	8	—	2	*	—	—	64	64	Dual	
Composite and Brake	60	8 10½	34 18	2	4	—	1	—	1	12	32	44	Vacuum	

* Shelves.

Waggons.

The coal trains convey 41 to 60 loaded waggons, according to the gradient of the road, the carrying capacity of each being 10 tons; other coal waggons have a carrying capacity of 20, 30 and 40 tons. Tare of waggons, 300 tons. The empty trains comprise up to 90 waggons. Covered fish trucks are 45 feet long. For carrying special articles, such as armour plates and guns, waggons are made to carry castings up to 80 tons, and guns up to 100 tons and over, on the cantilever system.

NORTH EASTERN RAILWAY.

Carriages.

Standard Passenger Coaches—52 ft. long over headstocks, by 8 ft. 6 ins. wide over waist moulding, 9 ft. wide over all projections; they contain 8 compartments of third class, each seating 10 passengers; tare weight 24 tons including Westinghouse brake and steam heating.

Ordinary Standard Passenger Train—5 vehicles (average) 52 ft. long, comprising one of third class as above, one semi-corridor lavatory composite with access to lavatory from two first and two third class compartments, 29 seats for first class and 24 for third, one luggage composite with three first and four third class compartments, seating 24 first and 40 third class passengers, and luggage locker 4 ft. 6 ins. wide, also two brake thirds. Total seating capacity, 53 first and 204 third; weight of train, 120 tons.

Corridor Vestibuled Dining Train—6 vehicles 52 ft. long by 9 ft. wide over waist moulding, and one dining car with kitchen 65 ft. 6 ins. long by 9 ft. wide, British Standard vestibule connection between coaches, entrance and exit by doorways in the end vestibules only. Weight, including Westinghouse and vacuum brakes, steam heating and electric lighting, 210 tons; 60 first and 184 third.

Waggons.

Standard Open Goods Waggons—17 ft. long over headstocks, 8 ft. 6 ins. over all, body 3 ft. 1½ in. deep; load, 12 tons; tare, 6½ tons.

Standard Covered Goods Waggons—17 ft. long over headstocks, by 8 ft. 6 ins. wide over all, body 7 ft. 10 ins. high inside; load, 12 tons; tare, 7 tons.

Bogie Covered Goods Waggon fitted with continuous Brakes—37 ft. long over headstocks, 8 ft. 6 ins. wide over all, 7 ft. 10 ins. high inside; load, 25 tons; tare, 15 tons.

Standard Hopper Coal Waggon—20 ft. long over headstocks by 8 ft. wide over all, body 6 ft. deep; load, 23 tons; tare, 9 tons.

Bogie Hopper Coal Waggon—36 ft. long over headstocks by 8 ft. wide over all, body 6 ft. deep; load, 40 tons; tare, 16½ tons.

Bogie Waggon with 5 Bolsters—46 ft. long over headstocks.

34 ft. Bogie C/S—7 ft. 11 ins. width over bolsters, 7 ft. 3 ins. between removable stanchions; load, 40 tons; tare, 18 tons 9 cwts.

Maximum weight of Goods and Mineral Train.—This varies according to the gradient on each section of the road, and according to the class of engine employed to work the traffic. On level sections the maximum load is about 1,100 tons, or about 650 tons net.

CALEDONIAN RAILWAY.

Carriages.

The coaching stock of this Company consists of carriages with 68 ft., 65 ft., and 57 ft. bodies, which are 9 ft. wide The 68 ft. length is only used for the third class ordinary compartment carriages, being seated for six-a-side, which with eleven compartments gives a total seating accommodation for 132 passengers. The 65 ft. length is used for first class ordinary, third class corridor, brake third and brake composite ordinary, and corridor, and composite ordinary and corridor. The ordinary first class has nine compartments for four-a-side, seating seventy-two passengers in all. The third class corridor has nine compartments seated for four-a-side, seventy-two passengers in all. Brake third ordinary and corridor vary from five to eight compartments and are seated for six-a-side ordinary and four-a-side corridor. Composites and brake composites vary a great deal in the arrangement of the compartments, the ordinary composites having ten and the corridor composites eight compartments. The firsts are all seated four-a-side ordinary and three-a-side corridor. The weights of these carriages vary from 37 to 38¼ tons, and they are each carried on two six-wheeled bogies.

The 57 ft. carriages have eight compartments in the thirds, and six in the brake thirds. Composites vary according to the requirements. The seating accommodation is four-a-side third corridor and six-a-side ordinary, with three-a-side first corridor and four-a-side ordinary. The weights of these carriages vary from 30 to 33⅓ tons.

All the trains are electric lighted and steam heated, and corridor trains have lavatory accommodation.

Waggons.

The stock for goods and mineral trains consists of 16-ton mineral waggons, 16-ton pig-iron waggons, 10-ton covered goods vans fitted with dual brake, 12-ton combination brake and goods vans, 10-ton meat vans, 35-ton bogie rail waggons, and 20-ton goods brake vans.

Average trains are about 500 tons gross, although trains of sixty waggons of about 900 tons gross are taken by the heaviest mineral engines.

LANCASHIRE AND YORKSHIRE RAILWAY.

Carriages.

Vehicle and Class.	Length over Buffers.	Width over Cornice.	Weight Unloaded.	Seating accommodation.
	Ft. Ins.	Ft. In.	T. C. Q.	
1st class bogie centre corridor vestibule carriage	59 7	9 0	26 0 0	40
3rd class ditto	59 7	9 0	25 19 2	66
3rd class bogie side corridor vestibule carriage	59 7	9 0	26 3 0	64
3rd class bogie carriage	57 7	9 0	25 2 3	108
1st class electric trailer car	65 3	10 0	24 18 0	76
3rd class electric trailer car	65 3	10 0	24 11 1	103
Complete trains (exclusive of engine) :—				
Manchester to Blackpool, 6 corridor carriages, including tea car	352 3	—	154 6 0	88 1st 194 3rd Total 282
Manchester to Southport, centre corridor (7 carriages)	409 7	—	179 10 1	138 1st 194 3rd Total 332
Manchester to Oldham train (4 carriages)	229 7	—	95 9 0	32 1st 300 3rd Total 332

Waggons.

Description.	Length over Body.	Width over Body.	Tare of Waggon.
	Ft. Ins.	Ft. Ins.	T. C. Q.
10 tons fruit waggon	21 6	8 0	7 0 0
12 tons fruit waggon	20 0	8 0	6 9 0
10 tons covered goods waggon	21 6	8 0	7 10 1
12 tons covered goods waggon (fitted with vacuum brake)	20 0	8 0	7 16 0
20 tons coal waggon	21 6	8 0	9 9 0
30 tons bogie covered goods waggon	35 0	8 0	14 17 1

GREAT EASTERN RAILWAY

CARRIAGES

Vehicle and Class.	Length over Body.	Width over Body.	Weight.	Compartments. 1st.	2nd.	3rd.	Lavatory.	Kitchen.	Luggage.	Passengers. 1st.	2nd.	3rd.	Remarks.
	Ft. Ins.	Ft. Ins.	Tons Cwt. Qr.										
Restaurant Car	55 0	8 6	33 11 0	—	—	2	—	1	—	—	—	26	6-wheeled bogies
" "	50 0	8 9	29 19 2	—	—	2	—	1	—	—	—	24	4 " "
" "	50 0	8 9	29 12 0	1	—	—	1	1	—	15	—	—	4 " "
" "	50 0	9 0	26 14 1	2	—	—	2	—	—	36	—	—	4 " "
" "	50 0	8 9	27 12 3	2	—	—	2	—	—	36	—	—	4 " "
" "	48 3	8 6	24 8 0	2	—	—	2	—	—	26	—	—	4 " "
" "	55 0	8 6	28 13 0	—	—	2	2	—	—	—	—	42	4 " "
" "	50 0	8 9	27 4 0	—	—	2	2	—	—	—	—	48	4 " "
" "	48 3	8 9	26 11 3	—	—	2	2	—	—	—	—	48	4 " "
" "	50 0	8 9	27 4 3	—	—	5	1	—	—	—	—	47	4 " "
First Class .	54 0	9 0	29 4 0	8	—	—	—	—	—	80	—	—	6 " "†
" " .	54 0	8 10	27 10 1	8	—	—	—	—	—	80	—	—	4 " "†
" " .	50 0	8 9	27 6 1	6	—	—	1	—	—	36	—	—	4 " "
" " .	48 3	9 0	26 19 1	6	—	—	2	—	—	36	—	—	4 " "
Composite .	54 0	9 0	28 11 3	2	7	—	—	—	—	20	84	—	6 " "†
" .	54 0	8 10	27 7 2	4	5	—	—	—	—	40	60	—	4 " "†
" .	54 0	8 10	26 13 3	4	—	5	—	—	—	40	—	60	4 " "†
" .	50 0	8 9	26 7 3	2	—	4	1	—	1	12	—	32	4 " "
" .	50 0	8 9	27 3 3	3	—	2	2	—	1	18	—	16	4 " "
" .	48 3	8 6	25 8 3	2	—	4	2	—	1	9	—	33	4 " "
Second Class .	54 0	9 0	28 15 1	—	10	—	—	—	—	—	120	—	6 " "†
" " .	54 0	8 10	27 2 1	—	10	—	—	—	—	—	120	—	4 " "†
Third Class .	54 0	9 0	27 9 3	—	—	10	—	—	—	—	—	120	6 " "†
" " .	50 0	9 0	26 10 3	—	—	7	2	—	—	—	—	58	4 " "
" " .	50 0	8 9	26 10 1	—	—	7	1	—	—	—	—	56	4 " "
" " .	48 3	8 9	26 0 2	—	—	6	2	—	—	—	—	48	4 " "
Brake Composite . . .	50 0	8 9	26 10 2	2	—	3	2	—	1	12	—	24	4 " "
Brake Third .	54 0	8 10	26 5 0	—	—	7	—	—	1	—	—	84	4 " "†
" " .	50 0	8 9	25 10 1	—	—	3	1	—	1	—	—	24	4 " "
" " .	48 3	8 9	25 1 1	—	—	3	—	—	1	—	—	24	4 " "
" " .	46 0	9 0	22 2 1	—	—	6	—	—	1	—	—	72	4 " "†
Brake Van .	50 0	8 9	23 4 0	—	—	—	—	—	2	—	—	—	4 " "
" " .	50 0	8 9	22 8 2	—	—	—	—	—	3	—	—	—	4 " "

The weights given are exclusive of passengers and luggage. † Suburban.

WAGGONS.

Vehicle.	Length	Width	Tare	Carrying Capacity	Remark .
	Ft. Ins.	Ft. Ins.	Tons Cwts. Qrs.	Tons.	
Goods Brake . .	17 6	7 9½	20 0 0	—	—
" " .	16 0	7 9	17 0 0	—	—
" " .	16 0	7 9	10 0 0	—	—

GREAT EASTERN RAILWAY.

Waggons (*continued*).

Vehicle.	Length.	Width.	Tare.	Carrying Capacity.	Remarks.
	Ft. Ins.	Ft. Ins.	Tons Cwts. Qrs.	Tons.	
Cattle Waggon .	19 3	7 11½	7 6 2	10	—
Covered Goods .	19 3	7 9	6 10 0	10	—
Open Goods . .	17 0	7 7	5 19 1	10	—
Machine Waggon .	47 3	7 3	35 15 2	40	4-wheeled bogies
„ „ .	25 6	8 8	8 1 0	14	—
„ „ .	25 6	8 8	10 19 2	25	—
Bolster Waggon .	22 9	7 7	5 15 0	10	For carriage of timber
„ „ .	12 0	7 7	4 17 0	10	„ „ „
Fish Waggon . .	15 0	7 7	5 17 2	10	—
Continental Goods	22 10	8 4¾	6 8 3	10	—
Coal Waggon . .	21 6	8 2	8 7 1	20	—
„ „ . .	15 0	7 7	5 14 3	10	—

NORTH BRITISH RAILWAY.

Carriages.

Vehicle and Class.	Length over Buffers.	Width at Waist Rail.	Weight Unloaded.	Seating Accommodation.
	Ft. Ins.	Ft. Ins.	Tons Cwts. Qrs.	
1st class bogie (8 compartments) .	61 2⅞	8 6	31 1 0	
Bogie composite corridor . .	61 2⅞	8 6	31 0 0	20 1st, 12 3rd
3rd class bogie (9 compartments) .	61 2⅞	8 6	29 3 0	90
3rd class bogie brake non-corridor .	61 2⅞	8 6	28 13 2	50

Waggons.

Description.	Length over Body.	Width over Body.	Tare of Waggon.
	Ft. Ins.	Ft. Ins.	Tons Cwts. Qrs.
8 tons covered goods	15 0	7 7	5 5 2
10 tons goods	17 0	7 9½	7 2 0
12 tons mineral	15 8½	7 6	6 12 2

LONDON, BRIGHTON AND SOUTH COAST RAILWAY.

Carriages.

Vehicle and Class.	Length.	Width.	Weight.	Compartments.				Passengers.		Remarks.
				1	3	L.	B	1	3	
	Ft.	Ft. In.	T. C. Q.							
Bogie Lav. 1st	57	9 0	28 10 0	6	—	6	—	42	—	New stock
" " "	54	9 0	27 0 0	6	—	4	—	44	—	" "
" 1st Brake	54	8 6	23 0 0	4	—	—	1	36	—	" "
" 1st	48	8 0	19 0 0	6	—	—	—	24	—	Old "
" Lav. 3rd	54	8 6	24 0 0	—	8	2	—	—	78	New stock
" " 3rd Brk.	54	8 6	23 10 0	—	6	1	1	—	57	" "
" 3rd	54	8 6	24 0 0	—	9	—	—	—	90	" "
" Lav. 3rd	54	8 6	24 10 0	—	8	2	—	—	70	" "
" " 3rd Brk.	54	8 6	23 10 0	—	4	1	1	—	37	" "
" 3rd Brake	54	8 0	23 15 0	—	5	—	1	—	50	Converted from 6 wheel
" Compo. Lav. Brake	56	8 0	26 10 0	2	4	2	1	10	34	Through coach
" Lav. 1 & 3 Comp.	56	8 6	26 15 0	3	4	4	—	16	38	New stock
" 1st and 3rd	56	8 6	26 10 0	4	4	—	—	24	40	" "
" 1st and 3rd	48	8 0	19 5 0	3	—	—	—	18	40	Old "
" 3rd Trailer Car	54	8 10	23 10 0	—	2	—	1	—	60	New stock
" 3rd Motor Brk.	60	9 0	53 0 0	—	8	—	1	—	66	Electric
" Lav. Compo.	54	8 0	24 16 0	5	2	3	—	28	18	New stock
" 3rd Trailers	54	8 0	25 15 0	—	7	—	1	—	54	" Corridor
" Compo. "	54	8 0	26 5 0	3	6	—	—	19	46	" stock
" 3rd "	54	8 0	22 10 0	—	9	—	—	—	90	" "
" 3rd Motor Brk.	54	8 0	51 6 0	—	7	—	1*	—	70	Electric
" Compo. Trailer	54	8 0	26 3 3	3	5	—	1*	24	50	" "
" " "	48	8 0	21 6 0	2	6	—	1*	16	60	" " (Conversion)

* Drivers' Compt.

Waggons.

Description.	Carrying Capacity.	Length.	Breadth.	Tare.	Remarks.
	Tons.	Ft. Ins.	Ft. Ins.	T. C. Q.	
'A' Class Waggon	8 or 10	15 5	7 9	5 10 0	
Ballast "	15	20 0	8 0	7 0 0	
Cattle "	6	18 4	8 0	6 9 0	
Covered	8	18 4	8 0	6 3 0	
Machinery "	10	16 6	8 2	5 2 0	
Timber "	6	12 0	7 2½	4 10 0	
" "	10	23 0	7 3¼	6 5 0	
Bogie "	25	48 0	8 0	13 16 2	
" "	30	48 0	8 0	10 9 0	
Goods Brake "	—	16 0	7 9	10 0 0*	
" " "	—	16 0	7 9	20 0 0	

* Twelve made 12 tons.

Recent Developments in Carriage and Waggon Stock.

No very radical departures have been made in carriage and waggon stock on British railways, but in the United States steel is being used to some extent for passenger and freight car bodies. On British railways some trials are being made with galvanised steel plates of about $\frac{1}{10}$ in. for panels of carriages, but anything approaching an all-steel construction for bodies is very much heavier than with wood. On account of the doors with the compartment system, it is not possible to make use of the side of the body as a girder, as in the open American cars with end doors.

Several railways—the G.N.R., G.C.R., S.E. & C.R.—use the American type of automatic coupling and vestibule for some of their main-line trains. In order that these vehicles can be attached to ordinary stock, the coupler is hinged and can be dropped down, exposing a hook for screw coupling. Side buffers are provided, and these have a loose sleeve which can be removed to allow the buffers to be pushed back when the automatic coupling and vestibule with central buffer are in use.

Pullman cars of the American type are extensively used on the S.E. & C.R. and L.B. & S.C.R., and to a lesser extent on the G.E.R., Caledonian, and Metropolitan Railways. Mr. Gresley's twin coaches, as used on the G.N.R., consist of a pair of bodies hinged together. The outer ends rest on bogies in the usual way, but there is only one bogie for the inner ends, the bogie pin being at the hinge between the coaches. A flexible gangway connects the two bodies. This system has been extended to complete trains, so that a set train of five coaches has only six bogies.

The high-capacity bogie waggon makes but slow progress on British railways, owing to the lack of terminal facilities. The tendency is to build 4-wheel waggons of 12, 15, or 20 tons capacity. The fitting of a continuous brake to goods trains is limited to special trains for perishables, ballast, etc. Its more general application is retarded by the presence of a large number of private owners' waggons, the uncertainty caused by the existence of two brake systems, and the high capital costs involved.

A very simple form of self-contained buffer is now used by several railways. It consists of a hollow cast-steel casing and plunger containing a helical spring; this butts directly against the headstock, and initial compression in the spring is obtained in bolting down the casing to headstock.

See also 'All-metal Cars for British Railways,' Vol. CCVIII. (April 1921), *Proceedings Inst. C.E.*

Axle Boxes.

These are usually of cast iron: for carriages oil boxes are universal, and a large number of new waggons are now being fitted with them instead of grease boxes. An oil reservoir in the bottom of the box conveys oil by capillary attraction, either by cotton-waste packing or by means of a worsted pad with tail trimmings supported on springs. The bearing or 'brass' is of gun-metal, or gun-metal lined with white metal. A leather-faced dust shield prevents dirt or water creeping in at the back of the box.

Wheels.

For carriages the wheel with wooden centre, once universal, has now been superseded to a large extent by a steel disc centre of slightly dished form, on which is shrunk a steel tyre having a lip on outside, and secured by retaining ring inside. Tyres are 5 ins. wide and are coned 1 in 20. In order to ensure smooth running, all carriage wheels are carefully balanced. Each pair of wheels is placed on a machine, the journals resting in bearings mounted on springs. When the wheels are revolved at high speed any irregularity in the running can be detected, and a correction made by fastening small plates to the inside of the wheel, near circumference, so that smooth running results.

Wood centres must be bonded by a copper strip between tyre and hub, so as to conduct electric current from rail to rail for operating signalling appliances. Tyre shrinkages are $\frac{3}{16}$ in. for wood centres, and about $\frac{3}{64}$ in. for steel centres.

Waggon wheels are made in a variety of ways. The bossed spoke wheel consists of spokes made from flat bar bent into triangular shape. These are placed together in a mould and a cast-iron boss is cast round them. The outer ends are then welded together to form a solid rim. Instead of casting a boss, it may be forged by placing two discs brought to welding heat on either side of the spokes, and forcing them together in a powerful press. Spoked wheels have also been made by forging spoke bars and building up a wheel. But this has been largely superseded by a cast-steel spoke wheel. A few wheels are being made with steel disc centres, and there are some solid cast-iron wheels with chilled treads now running on British railways. These are on waggons originally built for war service in France.

Journals of axles are sometimes case-hardened, but very good results can be obtained by the simple process of burnishing in the lathe. After the journal is machined, a tool having a small roller at the end is fixed in the slide rest and the journal is rolled all over with considerable pressure; this closes all the pores and leaves a hard, bright surface.

Springs.

Bearing springs are usually 3½ ins. wide for carriages, and 4 ins. for waggons, with plates ⅜ to ½ in. thick, approximately.

If S = span in inches ; b = breadth of plates in inches ; t = thickness of plates in sixteenths of an inch ; n = number of plates ; L = safe load in tons ; D = deflection in sixteenths of an inch per ton of load,

$$n = \frac{17SL}{bt^2}; \quad L = \frac{bt^2n}{17S}; \quad D = \frac{2S^3}{t^3bn}.$$

Buffer springs are largely made of rubber, and are formed of rubber discs 2½ to 3 ins. thick, placed between 6 or 8 metal discs.

For 'Helical Springs' see p. 608.

Couplings.

Draw bars should be 1¾ ins. diameter ; they should be made from the same quality of iron as the hooks, giving 23 per cent. elongation in 4 ins. and 23 tons per sq. in. ultimate stress. Area of end of eye = area of two sides × 1·2.

Couplings should be made of high-class chain-iron (giving about 35 per cent. elongation in 4 ins., and 45 per cent. reduction in area, with a tensile strength of 22 to 23 tons per sq. in.) ; when side-welded they should stand 35 to 40 tons total stress, equal to 11·7 to 13·4 tons per sq. in. Standard diameter = 1⅝ in.

Screw couplings are of wrought iron, or sometimes of steel (B.S.S. 9B).

Draw hooks should be of best selected wrought-iron scrap, giving about 23 per cent. elongation in 4 ins., and 23 tons per sq. in. ultimate stress. If stamped out, the grain of the iron should be kept running with the hook, an important point sometimes overlooked in second-rate work.

LIGHTING AND HEATING RAILWAY CARRIAGES.

Stone's System of Electric Lighting for Railway Carriages.

In this system, fig. 24, the dynamo for producing the electric current is suspended from the under-frame of the carriage so that its pulley is at approximately the same level as the pulley on the axle, from which it is driven direct by means of a belt.

Speed of Pulley on Axle of Motor (representing Axle of Railway Carriage).	Equivalent Speed of Trainin Miles per Hour (approximate).	Speed of Dynamo, Revolutions per Minute.	Equivalent Speed of Dynamo if no Slip were to take place.	Output of Dynamo. Amperes.
100 Revs. per Minute	*12*	500	*500*	0
150	*18*	750	*750*	6
175	*21*	870	*875*	16
195	*23*	900	*975*	18½
225	*27*	915	*1,125*	20
275	*33*	915	*1,375*	20
325	*39*	915	*1,625*	20
375	*45*	915	*1,875*	20
450	*54*	915	*2,250*	20
600	*72*	915	*3,000*	20

However the speed of the train may vary, after a certain predetermined limit has been reached, *the dynamo always runs at a uniform speed and consequently always produces practically the same amount of electricity.* This result is obtained by suspending the dynamo by one corner of its frame by means of an adjustable link, so that the driving belt draws the dynamo out of the diagonal position in which it would naturally hang, thus putting a definite tension on the belt just sufficient to absorb power equivalent to the amount of electricity required When the pull on the belt (owing to increase in speed of the train) exceeds the weight on the belt, due to the one-sided suspension of the dynamo, the latter is automatically drawn towards the driving pulley on the axle, thus allowing the belt to slip while the armature continues to revolve at its normal speed. That the arrangement is an effectual one is shown by the above table.

The latest developments in the system includes the introduction of the firm's 'Liliput' dynamo compactly built on modern lines and provided with ball bearings throughout, a special feature being that all the parts are very easily accessible for inspection or removal. The armature is of the drum wound type with former wound coils, the machine itself being shunt wound.

The centrifugally operated switchgear embodied in the older dynamos is omitted from the 'Liliput' machine, the switching being now effected by a separate automatic cut-in and cut-out switch operating on voltage ; and in the case of a double battery system, a 'Pegoud' battery

STONE'S SYSTEM OF ELECTRIC LIGHTING FOR RAILWAY CARRIAGES.

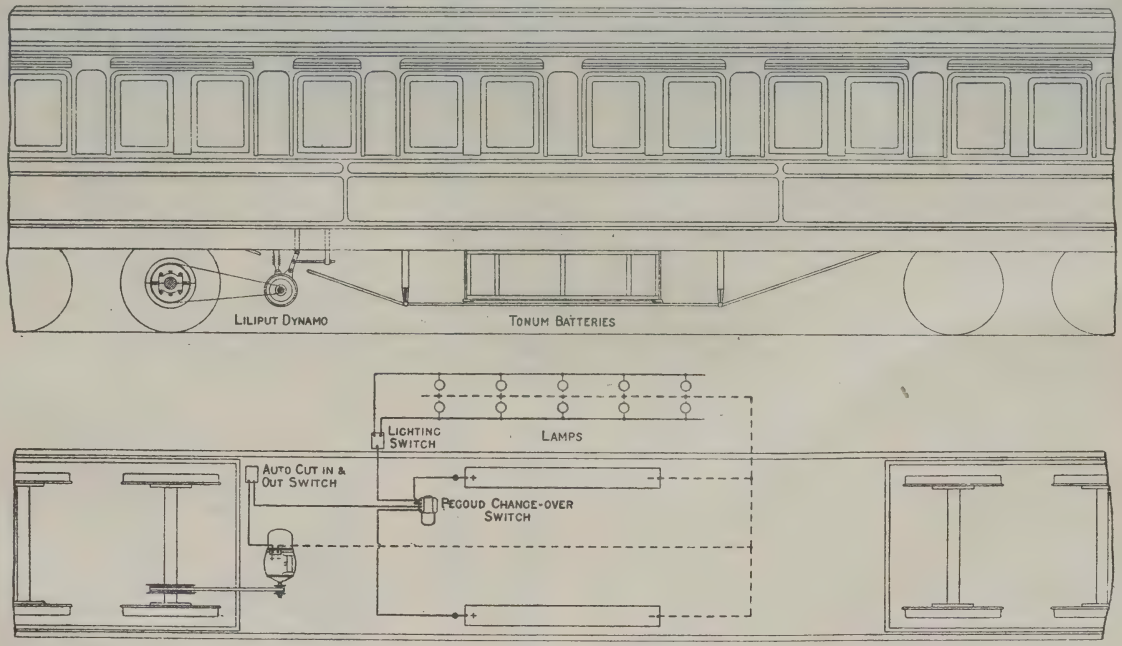


FIG. 24.

change-over switch is included, so as to change over the position of the charging and regulating batteries every time the dynamo switches into circuit.

The ' Lilliput " dynamo (in which is embodied the pole-charging device) is made in two forms, either to run at a constant speed, as described above—the output being controlled by means of a slipping belt—or at a variable speed, that is, the speed of the dynamo following the speed of the train, the output remaining constant at all speeds, and as the lamps are switched ' on ' or ' off ' so the dynamo output increases or decreases according to the demand.

' Tonum ' batteries are used, with either Plante or pasted positive plates. When a single battery is installed, the battery has twice as many positive plates as is the case when a double battery system is installed, and as the latter, i.e., a double battery system, gives the best regulation and is more reliable in working, it is always recommended.

The accumulator being always in connection with the lamps causes the light to be absolutely steady, acting as a regulator to absorb any excess of current generated by the dynamo.

The working parts of the dynamo are enclosed in a movable, but duct-proof casing.

A switch is provided to each carriage so that the lights can be either fully on or entirely off, or where there are tunnels, and the light is required in the daytime, half the lights may be used. When the lamps are not alight, the current is being stored in the accumulator.

The whole of the apparatus is of British manufacture and made in London, the system being largely adopted by the leading railway companies throughout the world.

An essential factor in the success of a train-lighting system is a reliable secondary battery which will in addition to meeting the variable demands for energy, be able to withstand the vibration and shock to which cells carried on a coach are necessarily subjected. Very successful results have been achieved by the use of the *Fuller Block Accumulator*, in which the usual plate form of electrode is departed from, a grid block of triangular form being employed instead. The blocks are grouped together to form a cylinder, positive and negative sections being insulated from each other by special separators and the whole bound tightly together. Recent tests show that this type of cell, amongst other purposes is peculiarly suitable for train lighting. The cells will stand short circuiting without damage, will withstand rough usage, and have the property of retaining their charge for long periods without appreciable fall in voltage. They are also singularly free from sulphating, and in general, from all other defects to which plate cells are liable. These cells are suitable for use with any of the train-lighting systems in use to-day, and it is claimed that their use will materially reduce the working costs in connection with the lighting systems of the railways where they are installed.

Heating Railway Carriages by Steam.

With coal of such a quality that it produces 7½ times its own weight of steam in the locomotive boiler, the average consumption of coal for the three coldest months should not exceed about 6½ lbs. per axle per hour.

Westinghouse System.

In the Westinghouse system of heating, steam at atmospheric pressure is used in the only heaters, and the temperature of the heaters is thus maintained equal throughout the train.

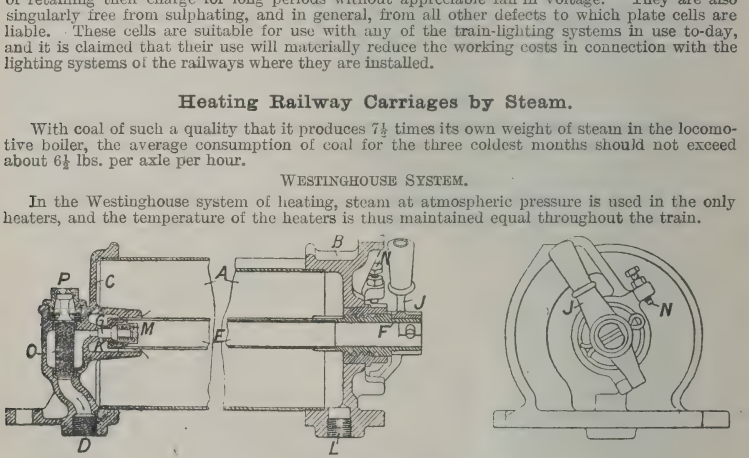


Fig. 25.—Westinghouse Patent Heater.

Fig. 25 shows a Westinghouse patent heater. It consists of a tube A, with caps B and C. Steam from the main pipe enters at C. E is a tube of an alloy having a high ratio of expansion. At one end is attached the screwed socket F, which can be turned through 90° by the handle J. At the other end is the valve G. With the handle at ' on ' position, and the heater cold, valve G stands away from the seat K. Steam enters and fills the heater, while the water of condensation escapes to the atmosphere at L. As tube E becomes hot, it expands more than tube A, and valve G therefore approaches the seat K, and when it reaches a predetermined temperature the valve G closes the steam inlet. The heater then cools slightly, tube E contracts, and allows a further quantity of steam to enter the heater. The temperature of the heater is thus maintained constant.

If it is desired to lower the temperature of the heater, handle J is moved towards the ' off ' position, thus bringing valve G nearer seat K. The tube E then does not require to expand so

much to close the steam inlet, and steam is cut off when the heater reaches a lower temperature than before. The temperature of the heater can therefore be regulated to a nicety by means of the handle J. If the handle is moved right over to the 'OFF' position the valve G is brought on to the seat K, thus completely shutting off the steam.

It will therefore be seen that a variation of pressure in the main pipe does not affect the temperature of the heater, which is determined by the position of the handle J and automatically maintained constant. As the temperature in the heater cannot exceed 212° the steam is never at more than atmospheric pressure.

This system is now in use in many countries in various parts of the world, and has maintained a comfortable temperature in carriages exposed to an outside temperature of 36° F. below zero.

BRAKES.

Action of Brakes.

f = proportion which resistance produced by brakes bears to weight of train.
v = speed in feet per second.
V = speed in miles per hour.

Distance in feet in which the train is stopped on level $= \frac{v^2}{64{\cdot}4f} = \frac{V^2}{30f}$.

Brakes self-acting on all the wheels, $f = {\cdot}14$.
Ordinary brakes worked by hand in brake-vans, $f = {\cdot}031$ to ${\cdot}023$.

On gradient *ascending* 1 in n, resistance $= f + \frac{1}{n}$.

On gradient *descending* 1 in n, resistance $= f - \frac{1}{n}$.

Distance in feet for stopping $= \frac{f \times \text{distance on level}}{f \pm \frac{1}{n}}$.

Power required by Brakes.

The following results have been obtained as regards consumption of energy with different kinds of air brakes:—1. On city lines, the consumption of energy for excentric compressors was 41·5 watt-hours per car kilom. (66·4 watt-hours per car mile); with geared compressors, 31·2 watt-hours per car kilom. (49·9 watt-hours per car mile); and with motor compressors, 16·16 watt-hours per car kilom. (25·86 watt-hours per car mile). 2. On suburban lines, the consumption for excentric compressors was 22·8 watt-hours per car kilom. (36·5 watt-hours per car mile); with geared compressors, 14·6 watt-hours per car kilom. (23·4 watt-hours per car mile); and with motor compressors, 6·32 watt-hours per car kilom. (10·11 watt-hours per car mile).

The Westinghouse Automatic Brake.

The Westinghouse automatic brake is continuous throughout the train and is operated by compressed air furnished by the pump and stored in the main reservoir on the engine. This compressed air is fed by the driver's brake valve into the train pipe and, past the triple valves, into the auxiliary reservoir on each vehicle.

The brake is applied by reducing the pressure in the train pipe, which causes the pistons of the triple valve to move and permit some of the compressed air stored in the auxiliary reservoirs to pass to the brake cylinders, the pistons of which are forced outwards, applying the brake blocks to the wheels.

The brake is released by restoring the air pressure in the train pipe, which causes the triple valves to close the communication between auxiliary reservoirs and brake cylinders and open a port from the brake cylinder to the atmosphere, through which the compressed air escapes from the cylinder. The spring in the cylinder can then push back the piston and withdraw the blocks from the wheels.

The brakes are usually applied by the driver, or in cases of emergency by the guard, but a break-away, or rupture of a hose coupling, or other accident causing an escape of air from the train pipe, also immediately applies the brakes.

It is recommended that a pressure of 90 lbs. per sq. in. be maintained in the main reservoir, and 70 lbs. per sq. in. in the train pipe.

Improved Triple Valve.

This valve has been designed to give a closer approach to simultaneous action of all the triple valves in a train than heretofore. As shown in fig. 26 the valve is in the release position

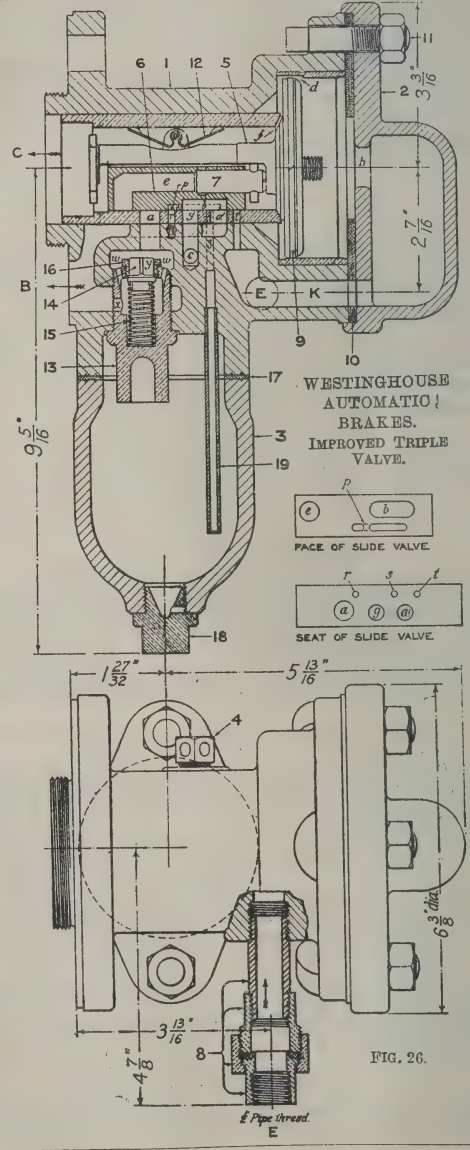

WESTINGHOUSE AUTOMATIC BRAKES.
IMPROVED TRIPLE VALVE.
FACE OF SLIDE VALVE.
SEAT OF SLIDE VALVE.
E Pipe thread.

FIG. 26.

WESTINGHOUSE AUTOMATIC BRAKE.
DRIVER'S EQUALISING BRAKE VALVE.

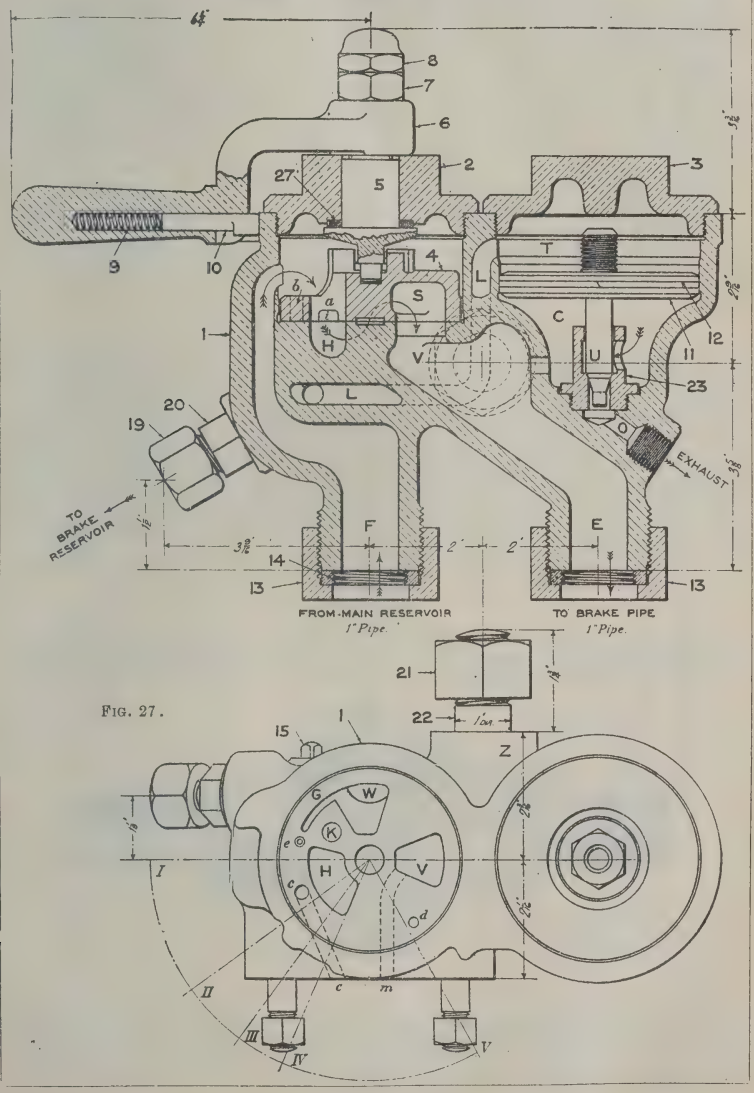


FIG. 27.

and the bulb is open to the atmosphere. When the slide valve 6 is moved in applying the brakes, the bulb 3 is closed to the atmosphere and opened to the train pipe by the cavity *p* and port *s* shown in dotted lines. The local reductions of train pipe pressure thereby produced by the forward triples in a train cause an earlier action of the rearward triple valves, which results in a more nearly simultaneous braking effect being produced throughout the train in every case of first setting the brakes than heretofore, with a smoother and more efficient brake service generally.

A further improvement, also tending to smooth and even action of all the brakes, is shown in the passage leading from port *a* in the seat of the slide valve 6 to the brake cylinder at B. It consists of a removable plug 13, perforated with holes *w* and *x*, which are always open, and an additional hole *y* carrying an automatic check valve 14, supported by a spring 15. It is so arranged that, when the brakes are first set, the automatic valve is opened against the spring resistance by the excess of air pressure above it, so that the hole *x* controls the rate of flow of air to the brake cylinder: as the air pressure on the under side of the valve increases, the spring closes the valve, when the smaller holes *w* control the rate of flow to the brake cylinder. The diameters of the regulating holes *w* and *x* are made proportional to the diameter of the brake cylinder with which the triple valve is to be used. By changing these perforating plugs, the same pattern of valve is thereby suited to cylinders of various sizes.

The bulb at the bottom of the triple valve is made in different sizes, proportioned in content to the volume of the train pipe of the vehicle on which the valve is to be used.

A separate passage a^1 is provided in the triple valve body from brake cylinder to slide valve 6, for the air to escape from the brake cylinder on releasing the brakes. The rate of release is controlled, as heretofore, by a nipple screwed into the outlet hole *c* in the triple valve body.

Driver's Equalising Brake Valve.

The principle of this brake valve, fig. 27, is, not to allow the driver in ordinary applications of the brakes to discharge air directly from the main pipe, but from a small reservoir connected with chamber T of the valve. The reduction of air pressure, thus effected in the reservoir, is then at once automatically and properly repeated in the main pipe by means of a small equalising piston, 11, placed between the air in the chamber T, and that in the main pipe E. The piston moves in accordance with the variations in pressure above and below it, and governs an exhaust valve U in such a manner that the air pressure in the main pipe must always equalise with that in the small reservoir connected with the valve chamber T. Even if the exhaust of air from the brake valve reservoir is abruptly stopped by the driver, the discharge valve U is always gradually closed by the piston, when equilibrium of pressure is established throughout the train. The equalising device, therefore, will under all circumstances provide for a uniform reduction of the pressure in the main brake pipe, thus insuring a uniform application of the brakes to all the vehicles in the train.

The compression of air is effected by a pump (Westinghouse), a description of which is given in Section XXII.

Pipe Couplings.

In the connecting-pipe *coupling*, which is shown by fig. 28, the two halves of couplings, 1, 1, are exactly alike, and an air-tight joint is formed by means of the rubber packing-ring, 3, in each, which rings face each other when the couplings are united. The air-pressure in the

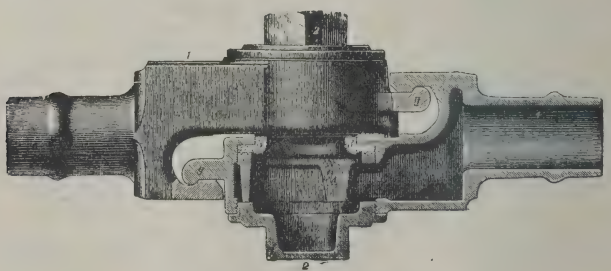


FIG. 28.

couplings tends to force these rings towards one another, so that the joint becomes tighter with increase of pressure. The tendency of the air-pressure in the couplings is also to force them apart in a direction at a right angle to the line of the india-rubber hose-pipes, and, consequently the greater the pressure, the more firmly are the couplings held together by the projecting piece, *g*,

of each coupling, which fits in a corresponding groove of the other coupling. No damage is done if the couplings be drawn apart forcibly by the separation of the train, as the rubber rings, 3, 3, are forced into their respective couplings far enough to permit the projections to disengage from their grooves. These couplings are united by simply placing them face to face at right angles, the stop-pins being on the under side, and then turning the projection of the one into the groove of the other.

The Vacuum Automatic Brake.

In this brake an ejector placed upon the engine exhausts the air (to a vacuum of 20 to 24 inches) out of the continuous pipe and the cylinders. The brake is applied by the admission of air into the train pipe, and released by the withdrawal of the same through the ejector. The brake is self-acting in the case of an accidental parting of the train.

The brake-cylinder (figs. 29 and 30) is self-contained in the vacuum-chamber as applied to carriages, and is the only fitting required. The piston fits freely in the cylinder, and is packed by a rolling rubber ring, which, when the piston moves, rolls between it and the cylinder, making a perfect packing without friction. The piston-rod is coated with brass, and works through a brass bush, and a packing rubber prevents air passing the rod. At the bottom of the cylinder is attached the ball-valve, the branch of which is connected by a small hose-pipe to the train pipe. This valve is of the most simple construction, as there is only one moving piece, and that being a small brass ball, having a rolling action in a horizontal position, has consequently no friction. A spindle with release lever (not shown in the figures) is added for the purpose of withdrawing the ball from its seat when it is required to release the brake by hand. This spindle is made air-tight by a small diaphragm, the pressure on which when a vacuum is created pulls in the spindle and allows the ball to go freely to its seat.

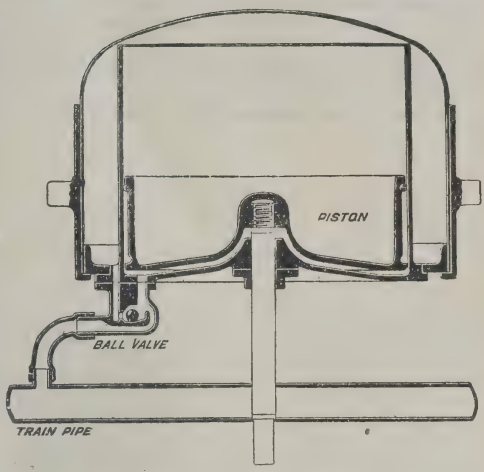


FIG. 29. Vacuum Automatic Brake. Brake off. Representing position of piston and valve when a vacuum is created and the brake is off.

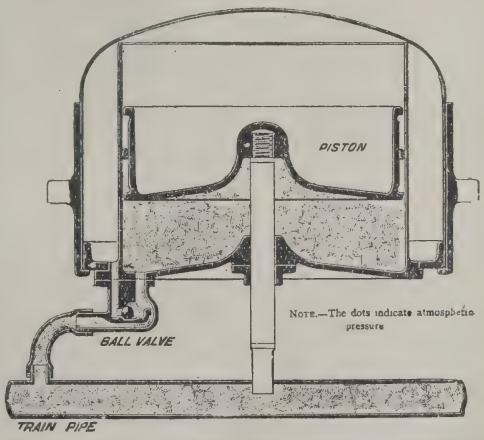


FIG. 30. Vacuum Automatic Brake. Brake on. Representing position of piston and valve when the brake is applied by the admission of air to the train pipe. The ball is held tightly to its seating, and preserves the vacuum on the top side of the piston, which is raised by the atmospheric pressure below it.

The action of the cylinder is as follows: The air is drawn out through the train pipe from the bottom of the piston direct, and from the top by passing the ball, which it forces up the

incline of the spindle; when all the air is withdrawn the ball rolls down the incline and on to its seating. To apply the brake, the air is let into the train pipe, and it then passes to the under side of the piston, and, being prevented from entering to the top by the ball, lifts the piston, and so applies the brakes with any amount of force according to the quantity of air let in.

The couplings are extremely simple; each consists of a pair of castings exactly alike, with horns top and bottom. It is impossible to couple them wrongly. To couple they are lifted up sufficiently high to enable the bottom horns to be placed together, and then lowered, the top lug of one being placed in the slot of the other. To uncouple it is simply necessary to raise the couplings, when they will separate.

For Board of Trade Regulations with reference to brakes, see Part IV., page 661.

SECTION XII

PART III

RAILWAY SIGNALS.

(Revised and amplified by H. Raynar Wilson.)

Pneumatic Railway Signals.

In this system of Railway Signals (the British Pneumatic Railway Signal Company), every movement is accomplished by air pressure (normally 15 lbs. per square inch); nothing depends upon gravity or springs, or on withdrawal or reduction of pressure; except when a switch or a signal is being moved, or an indication is being given, all operating and indicating pipes are subject to atmospheric pressure and no more; the final portion of the stroke of the 'lever' is automatic, requiring no effort or care on the part of the operator.

The pressure used to move switches and signals is 15 lbs. per square inch, that for conveying indications only 7 lbs. A switch 500 feet from the signal cabin is moved, and the return indication received back in the cabin within a few seconds from the movement of the switch.

A signal is held in the 'all clear' position by continued pressure of air in the pipe leading from the cabin to the signal; absence or failure of power will always leave the signal in the 'stop' or 'danger' position.

The Diaphragm Valve.

This valve performs a function analogous to that of the electro-magnetic relay in electrical apparatus. It is actuated by a comparatively weak force (air at 7 lbs. pressure per square inch), but by its action opens a valve which liberates air at 15 lbs. per square inch to perform any desired work. The work to be done is to lift the stem of the vertically placed cylindrical valve in the upper part of the case; and this is accomplished by introducing pneumatic pressure on the under side of the horizontal rubber diaphragm in the lower part. This diaphragm is circular, 8 inches in diameter, and is quickly responsive to low pressure. The pistons and openings are so proportioned that a movement of the diaphragm of only one-quarter of an inch is found sufficient for all purposes. Two diaphragm valves at the switch control the switch cylinder, the piston of which moves the switch. Two similar valves at the foot of the semaphore signal post control the signal arm in like manner.

The Control Lever.

This lever, L, fig. 1, has two slots, Z and Q, of the shape shown. Below each lever are two cylinders, I I'. The rods of the pistons sliding in these cylinders carry rollers which are guided in the slot Q. The locking bar H also carries a roller at its upper extremity, guided in the slot Z. If the handle h (corresponding to a lever in the ordinary mechanical locking-frame) be pulled, it will move until the roller on the piston rod of I' abuts against the shoulder T of the slot, thus limiting the outward movement. By this operation a slide valve V has been moved. The slide valve is so constructed that in two of its positions a port in the valve opens communication between the supply pipe of the apparatus and one or other of the two pipes O and P, but in all other positions of the valve these two pipes are connected to the atmosphere through the exhaust ports of the valve. In the position of the handle where the roller of piston rod I' has, as explained, come against T, the valve V has opened a passage between pipe C (the supply pipe) and pipe P; at the same time, owing to the shape of the slot Z, the locking bar, H, has completed half only of its vertical movement; this half movement has, however, interlocked levers which were free in the original position of the handle h, but those levers which correspond to the extreme movement of h are still held locked; the mechanical arrangement of the interlocking bars possesses no special feature.

General Action.

The opening of a passage between C and P (on the movement of V) allows the compressed air from the supply pipe to pass through pipe P to diaphragm valve R', and to actuate the latter; this allows air from the supply pipe connected to R' to enter the right-hand side of cylinder

C and to move the piston of C; the rod of this piston, being attached directly to the slotted plate M, moves the latter to the left. This plate M has in it two slots, N and N′, and two projections, S, S′; these projections lock the switch in its two extreme positions by means of a lock bar Y, fixed to the switch, and having notches to receive the projections.

The switch bar W carries at its extremity a roller guided in the slot N; this slot has two parts parallel to the axis of the cylinder, united by a diagonal part. Another slot N′ in the motion plate is similar in general form to N; this slot is for the purpose of moving an indication bar connected to a valve D: in the position shown in the figure, this valve is so set that its port

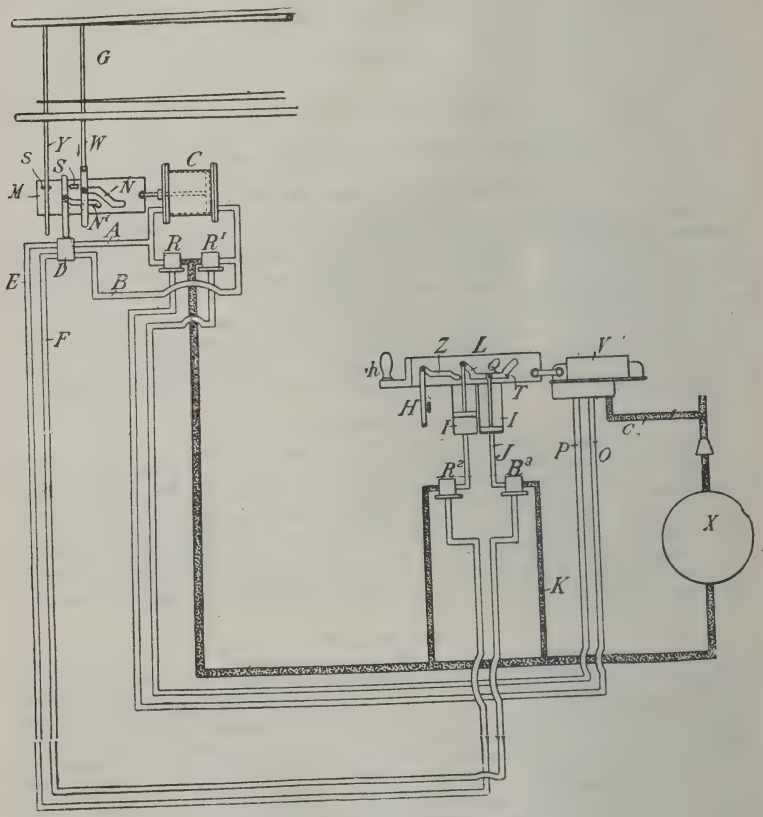


FIG. 1.—The Control Lever for Points.

forms a communication between pipe A and pipe E; in the other extreme position of the valve (i.e., when it is moved by plate M being pushed over to the extreme left) communication is established between pipe B and pipe F.

As soon as the piston in cylinder C begins to move to the left the indication valve will be moved to its middle position by the incline of the slot N′, so that all communication between pipes A, E, B, and F is shut off; at the same time the switch G will be unlocked, as the projection S′ will move out of the notch in the lock bar Y. This first part of the piston movement will have no effect upon the switch, as the roller on the switch bar will be simply guided in the parallel

WESTINGHOUSE

RAILWAY SIGNALLING
AND
SAFETY APPLIANCES
TO MEET ALL CONDITIONS.

Power Operated Signalling Systems
ELECTRIC OR ELECTRO-PNEUMATIC
POINTS AND SIGNALS
WITH D.C. OR A.C. TRACK CIRCUIT CONTROL.

POWER INTERLOCKINGS & AUTOMATIC SIGNALLING.

Daylight Colour-Light Signals.

ELECTRO-PNEUMATIC CONTROL and
SAFETY APPLIANCES for COLLIERIES
which embody many of the features employed in automatic power signalling, and increase output and maintain safety in handling decking plant, etc.

Manufactured by **THE WESTINGHOUSE BRAKE AND SAXBY SIGNAL CO. LTD.**

82 York Road, King's Cross, London, N. 1.

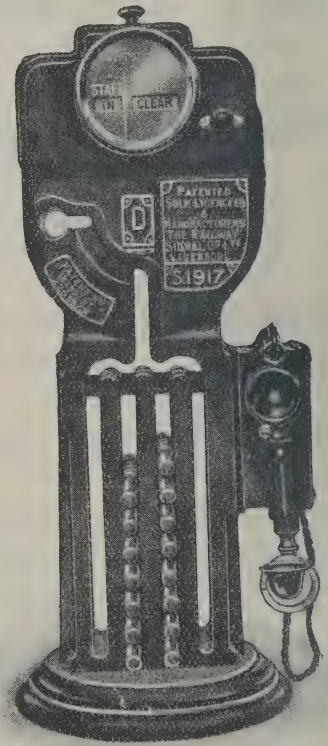
(See pages 640-643.)

THE
RAILWAY SIGNAL COMPANY Ltd.

40 Broadway, Westminster, S.W. 1.

Telephone No.: VICTORIA 6453. Telegrams: 'SNALIG, VIC, LONDON.'

Manufacturers of Railway Signalling Appliances
ELECTRICAL & MECHANICAL.



S Type Miniature Staff Instrument fitted with the two position Indicator and Telephone.
For Single Line Railways and Tramways.

F. 639

part of slot N; this part of the movement is also utilised to start the 'detector bar,' which is connected to the motion plate by rods and a lever. As soon as the switch has been unlocked, the continued movement of the piston will move the switch over by means of the diagonal part of the slot N and the switch bar. During this time the indication valve will remain stationary. After the switch has been entirely reversed, the projection S' will enter another notch in locking bar Y, and the moving and locking of the switch will have been accomplished. The last part of the stroke of the piston will now move the indication valve D to its extreme position, so that a communication will be established between pipes B and F; as the diaphragm valve R' remains open, air will enter pipe F from pipe B through the indication valve. This pipe F, as above stated, returns to the signal box apparatus, and ends under the diaphragm of another relay valve R², precisely similar in construction to the one already described. The air pressure through F will open this valve and establish communication between a branch K of the main supply and a pipe J which leads into the cylinder I'. It will be remembered that all these movements have taken place because of the pulling out of the lever *h* to the extent limited by the roller on the piston of the cylinder I'. When air now enters under this piston, the roller will be lifted clear of the shoulder T, will enter the diagonal portion of the slot in the lever, and, by the continued action of the upward pressure, will push this lever out still farther until its stroke is completed and the roller abuts against the end of the slot. This complementary part of the stroke of the lever is accomplished automatically, that is to say, the operator is not obliged to wait for the indication to return to the machine before he grasps the following lever, but he can immediately place his hand on this lever, which will be freed as soon as the indication will have completed the stroke of the first one. It will be seen that the movement of the interlocking bar H is completed by the indication stroke through the inclined part of the slot Z. When *h* has completed its outward movement, then valve V will be in its extreme position in which its exhaust port will connect the pipe P with the atmosphere. The air under pressure which filled this pipe, and held the relay valve R' open, will therefore exhaust, and the spring of the relay valve will close the latter, shutting off the main supply and opening an exhaust passage through which the air in the cylinder C can escape. All parts will again be in a normal position of rest, in which all the pipes, except the main supply and the supply to the signal box apparatus, are open to the atmosphere and are subjected to no pressure.

In order to move the switch back to its original position, the operation is precisely the same, only the other cylinder I and the other relays R and R² will be in action as well as the corresponding set of operating pipes.

It will be seen that the indication—that is to say, the return of air to the machine in order to complete the stroke of the lever and of the interlocking bar—is imperative as well as automatic. If from any cause whatever the switch has not moved over completely, or has not been locked in position, the indication valve will not establish the communication above described, no indication will be received in the cabin, and the levers interlocked with this switch lever cannot be pulled, so that no signal can be lowered and no conflicting switch moved.

In order to operate the semaphore signals, the arrangement is similar to that of the switch points, except that the indication, which, in the points, must be given for both positions, is only given for the normal or danger position of the signals. In resetting the signal to danger, it is necessary to have an indication in order to be assured of the fact that the signal has again reached its horizontal position. Instead of having an indication slide valve as in the switch movement, the indication arrangement in this case is a valve constructed precisely like the relay valves, actuated, however, by a lever (whose extremity abuts against the valve stem) instead of by a diaphragm. When the signal is in its normal or danger position this indication valve is open, thus establishing communication between the supply pipes.

As in the switch movement, if the signal does not go back to danger from any cause whatever, no indication will be given, and the interlocking on the machine will prevent conflicting lever movements.

The whole arrangement is such that it is impossible to move a switch or a signal if any of the other parts corresponding to it are not in the correct position. Any derangement of the switches or signals which would prevent regular operation is immediately indicated in the cabin by the fact that the lever does not complete its stroke.

The diameter of the switch cylinder is 10 ins.; that of the signal cylinder 5 ins. The main supply pipe consists of 2-in. pipe at its origin, and the diameter of the pipe diminishes towards the end of the yard. The operating and indicating pipes are all ½ in. The branches from the main supply to the relays are ¾-in. pipes. The distance between the levers centre to centre of handles is 3 ins.

For a cabin of 100 levers, under average conditions, the compressor should have a capacity of 100 feet of free air per minute. This capacity is governed, not by the number of levers in the cabin, but by the maximum number of train movements occurring in a given time.

Connected with three (Basingstoke-Woking, Clapham Junction, Guide Bridge) installations of low-pressure pneumatic signalling there are stretches of main line controlled by automatic signals, the operation of which is the same as in the power plants except that the signals are controlled by track-circuits instead of by the movements of a signalman.

The British Pneumatic Railway Signal Company has also an all-electric system for operating points and signals which is installed in six signal-boxes in a large shunting yard (Immingham); passenger trains do not, however, run regularly over the lines so controlled.

WESTINGHOUSE ELECTRO-PNEUMATIC RAILWAY SIGNALLING SYSTEM.

This consists essentially of electrical circuits working in conjunction with a compressed air supply. The electrical system connects the signalman's levers at the cabin with the points and signals, whereby instantaneous response of the signals and points to the motions of the levers is secured, and also an instantaneous 'indication' of the movements of the points and signals is returned to the locking frame. The compressed air of about 60 lbs. per sq. in. pressure serves as the actual power moving the signals and points. The levers in the signal cabin are merely small electrical switches, and they involve no heavy labour on the part of the signalman for their operation. The locking frame, the levers of which are closer together and far less in number than those in the hand system, is provided with two kinds of interlocking — a mechanical system and an electrical system. The mechanical interlocking is practically identical with that used in hand-power signalling systems, excepting, of course, that the parts are very much lighter. The electrical locking consists of a series of electro-magnets in the indication circuits from the signals and points; the armatures of these magnets engage with projecting lugs or sectors fitted to the shafts of the levers. By means of this combination of electrical and mechanical locking, the many complicated problems of special locking required by modern methods of signalling are easily and successfully solved. The electrical contacts of the lever shafts, by which the circuits between the battery and the electro-magnetic valves of the point and signal motors are made or broken, consist simply of phosphor-bronze strips, working over contact pieces mounted on an ebonite bushing surrounding the lever shaft. The electric current is usually drawn from a small battery of storage cells, the pressure being about 14 volts. Primary cells are often used, the current required being only about 0·05 ampere per signal or point motor. Small wires made up into cables connect the locking frames with the various point and signal motors.

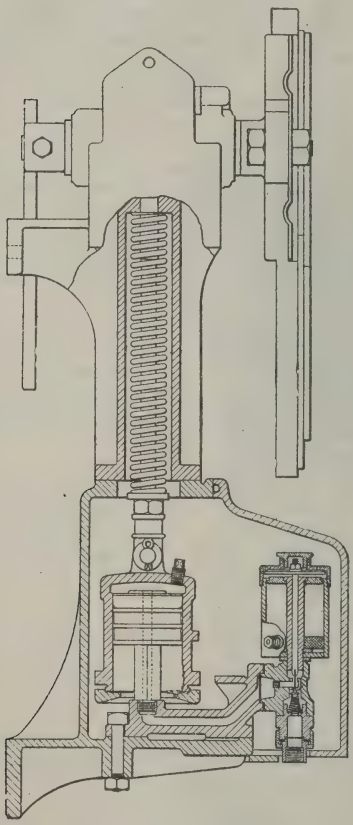


Fig. 2.

The actual work of pulling off a signal or throwing over a set of points is done by a small compressed air-motor fixed close by the signal or point to be operated. The definite, straight line motion of such motors is particularly suitable for the movement of signals and points. The valves controlling the air supply to these motors are opened by small electro-magnets. With this system selection of signals becomes simple, since it is easy to arrange the electrical contacts in such a way that the path of the electric current is made through the signal only which appertains to a route which is set by the movement of certain point levers, and when the signal lever is pulled over that signal only is operated by the electric current: whereas, if other point levers are operated or another

WESTINGHOUSE ELECTRO-PNEUMATIC RAILWAY SIGNALLING SYSTEM.

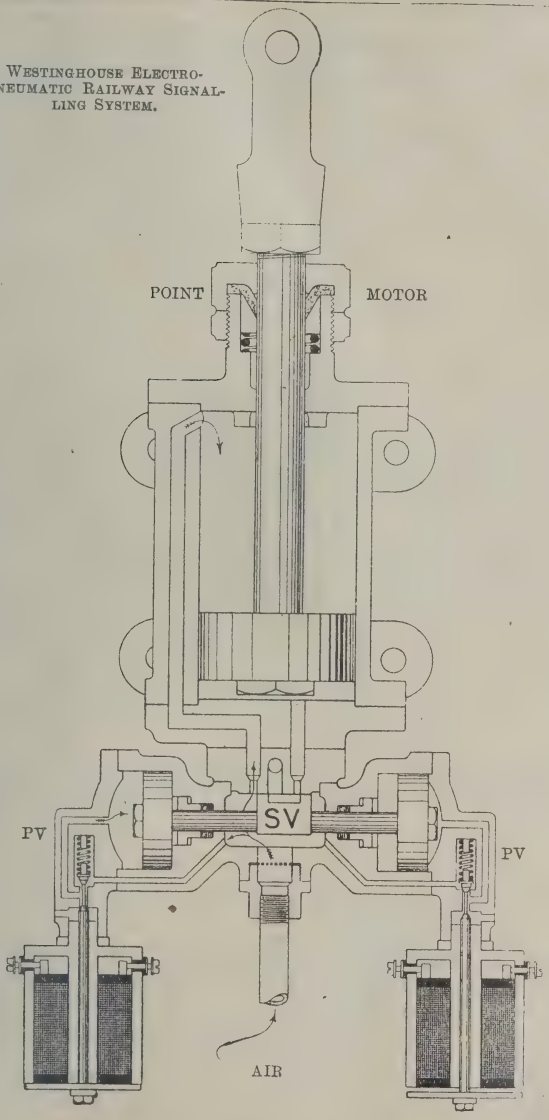


FIG. 3.

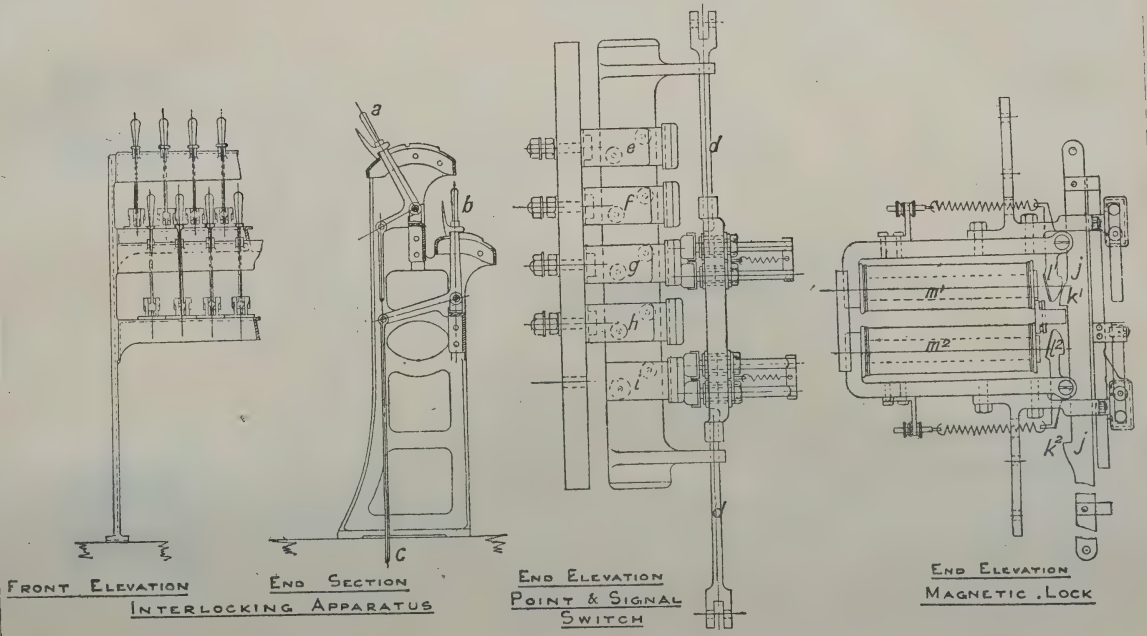

a
b
c
d
e
f
g
h
i
j
k¹
k²
l¹
l²
m¹
m²
FRONT ELEVATION
INTERLOCKING APPARATUS
END SECTION
END ELEVATION
POINT & SIGNAL
SWITCH
END ELEVATION
MAGNETIC LOCK

FIG. 4.

route set, the path of the current being changed, another signal is operated when the same signal lever is pulled over.

The pressure of the compressed air used is, as before stated, about 60 lbs. per sq. in. Experience has proved this pressure to be the most suitable for the purpose, having regard to the size of the motors, and the general convenience of installing, operating, and maintaining the system. The quantity of air used does not amount, even at the busiest centres, to more than half a cubic foot of free air per minute per lever.

Signal motors (fig. 2) are fitted on the posts. They are single-acting, the function of the motor being to force the signal arm down to the 'line clear,' or 'off' position. The force of gravity returns the arm to the position of 'danger' when the pneumatic pressure behind the piston of the motor is released. In thus trusting to gravity to replace the signal arm to 'danger' all chances of the arm being held 'off,' owing to the failure of power supply, are eliminated. The upper end of the signal motor cylinder carries the electro-magnet by which the valves controlling the admission and exhaustion of the compressed air are controlled. The signal motor has a cylinder 3 ins. in diameter, and a stroke of 4 ins. The electrical indication circuit breaker of the signal is operated by a lever direct from the signal arm.

The point motor (fig. 3) consists of a double-acting cylinder working horizontally, and is usually installed outside the track, alongside the points. The valve, by which compressed air may be admitted either to one side of the piston or the other, is operated by compressed air behind two small pistons, controlled by electro-magnetic valves similar to those of signal motors. The diameter of the point-motor cylinders varies from 4 to 6 ins., and the piston stroke from $4\frac{1}{2}$ to 8 ins., according to requirements. In the case of a trailing point, the electrical indication circuit breaker is operated by the switch rail opposite to that to which the motor is coupled. In the case of facing points, the circuit-breaker is operated only after the locking-bar and lock are home, thus ensuring the correct position and locking of the points before an indication to that effect can possibly be received at the cabin.

Westinghouse electro-pneumatic signals are also largely used in connection with automatic signalling, both on steam and electric traction roads. For this purpose the running rails are divided into suitable sections or blocks which are electrically insulated from one another: the presence of a train or any vehicle in a block keeping the signals controlling the entrance to that block at danger. The signals are not cleared to admit a second train until the first train has cleared the block by a certain distance, depending upon the braking distance required by a train.

Such installations are largely used in America, there being nearly 10,000 signals of this type in operation. In Great Britain complete installations have been working for several years on the Metropolitan Railway, the Metropolitan District Railway, the London Electric Railways (consisting of the Baker Street and Waterloo; Great Northern, Piccadilly and Brompton; and Charing Cross, Euston and Hampstead Railways), the Central London and the East London Railways. These installations deal with a service of forty trains per hour, and have the additional protection of a train stop at every signal location which automatically applies the brakes on a train should it overrun a signal at danger.

The electro-pneumatic signalling apparatus, both for power-operation of points and signals and for automatic signalling, is manufactured and supplied by the McKenzie, Holland and Westinghouse Power Signal Co. Ltd., of Westminster.

McKENZIE, HOLLAND AND WESTINGHOUSE ALL-ELECTRIC SYSTEM.

For those railway companies which prefer the use of electricity throughout, the same firm has an all-electric system of operation of points and signals which is in successful use.

'CREWE' ALL-ELECTRIC SYSTEM.

The Railway Signal Company, Ltd., are the manufacturers of a system, of which there are several installations on the London and North Western Railway—hence its name—of operating points and signals by electricity.

Fig. 4 illustrates the locking frame, and it will be seen that the levers are in two tiers, those, *a*, in the upper tier taking odd numbers and, generally, working points, and those, *b*, in the lower the even numbers and, generally, working signals. To each lever is connected a down-rod *c* to which, immediately under the signal-box floor, are coupled cranks. These actuate the interlocking tappets in the usual interlocking boxes. At the lower end of the down-rod is connected the switch *d*, the carbon contacts of which join, when the lever is moved, switches *e f* and *g h*, and so cause power to be sent to the points or signal as the case may be.

As in other power-signalling systems, the full stroke of a point lever from normal to reverse and from reverse to normal, and the complete stroke of a signal lever from the 'off' to the 'on' position, cannot be made until an indication is received that the operation set up by the initial movement of the lever has been completed. This, in the 'Crewe' system, is achieved by the check lock *j* attached below the switch. On the check lock *j* are two lugs k^1 k^2 which engage pawls l^1 l^2, the armatures of which can be attracted by the magnets m^1 m^2. When a point lever

is moved, say, from normal to reverse, the down rod is raised and the lug k^2 on the check lock f will then abut against and be stopped by the pawl l^2, but as soon as the current set up by the switches above has done its work, the return indication current energises the magnet m^2, so that the pawl p^2 is attracted and frees lug k^2, consequently the lever can then be pulled the remainder of the stroke. When the points are being restored to normal the down-rod descends and lug k^1 is then stopped by pawl p^1 until magnet m^1 is energised. When the points are reversed the switch d has its contacts on switches e and g, and when normal on switches g and i.

Fig. 5 is a plan and elevation of the lay-out of a pair of facing points. The motor (see also fig. 6), which requires current of 20 amperes and 100 volts, is fixed in a cast-iron box below rail level. The motor a (fig. 6), by means of a worm, drives the worm wheel b, fixed loose on the same shaft as the cam wheel c. Movement is transmitted to the cross shaft by means

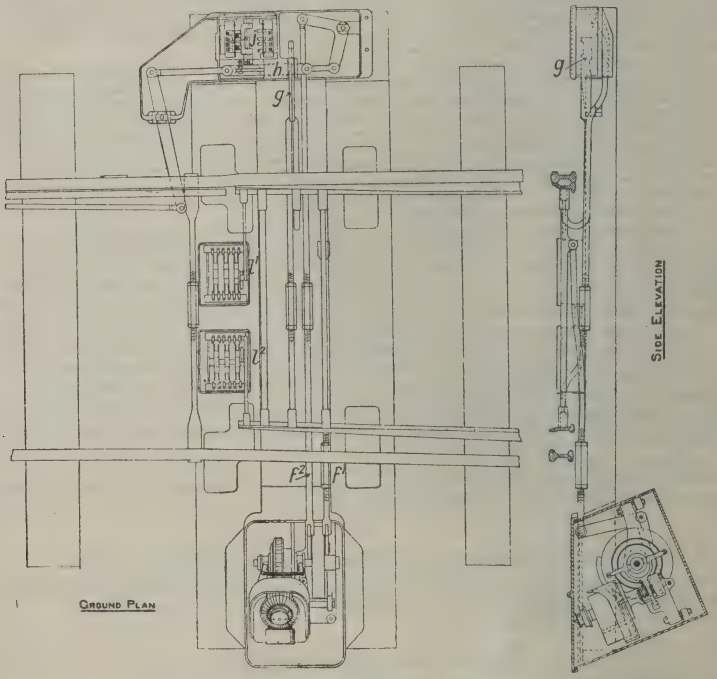


FIG. 5.

of one or other of the clutches d^1 d^2, which are right- and left-handed, so that if the worm wheel turns in one direction the right-handed clutch is engaged, and if in the other direction the left-handed clutch. On either face of the cam wheel c is a cam-shaped slot of irregular contour in which works a roller attached to a crank e. The crank on one side works the points by means of the rod f^1, and the other crank actuates the plunger and locking-bar by means of rod f^2. Each point has an extension g, suitably slotted on the upper side for one position of the points and on the lower side for the other position of the points. Both extensions and, therefore, both switches of the points must be accurate in their position or the plunger h will not pass through them. To the end of the plunger is connected a rod leading to the locking bar. On the upper side of the plunger are guides that move over a short lever and place the contact maker j in or out of contact with the springs k^1 k^2. The latter are connected to the magnets m^1 m^2 of the return indication in fig. 4 and cause pawls l^1 l^2 to be attracted and allow for the down rod c to complete its upward or downward movement and for the switch d to make contact with eg—if an upward movement—or

CREWE ALL-ELECTRIC SYSTEM.

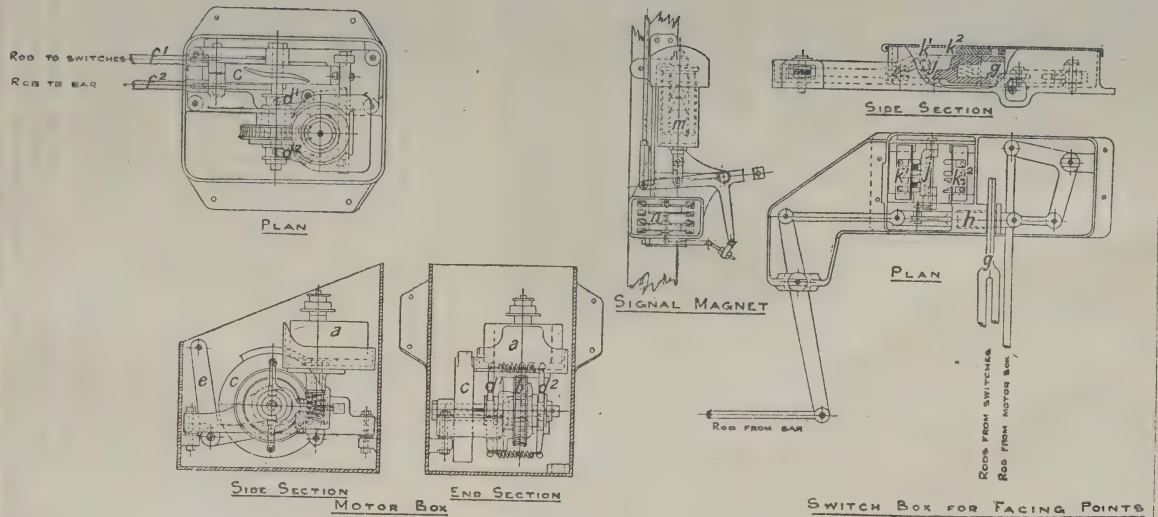


FIG. 6.

with $g\ i$ if a downward movement. This cuts off the current from the motor. But as will now be readily understood, this cannot occur until the plunger is shot and the switches held, nor can the plunger be shot unless and until the switches are in their correct position. Further detection is given by means of the contacts $l^1\ l^2$, which are in the circuits to the signals concerned. The switches for these contacts are rotated by means of short rods connected as near as practicable to the 'nose' of both point switches.

Signals in the 'Crewe' system, whether semaphore signals or the dwarf signals used in shunting operations, are changed from the 'danger' to the 'clear' position by means of a long-pull magnet m, fig. 6. A current of about 15 amperes and 100 volts is required for a fraction of a second to clear a signal, which current is then passed, by means of the switch n, through a resistance, and about 2 amperes is enough to hold the signal at 'clear.' When the lever in the signal-box is replaced partly to normal the current supply to the signal is completely cut off and the arm goes to danger by its own gravity. When the signal is fully 'on' the switch n sends the return indication and allows for the lever to complete its stroke. No return indication is necessary to show that a signal has gone from 'danger' to 'clear.' What is of importance is that it has gone from 'clear' to 'danger.'

SIEMENS SYSTEM OF ELECTRICAL SIGNALLING.

In this system any ordinary direct current supply of electrical energy having an E.M.F. of from 110 to 200 volts may be employed, the maximum current required at any one moment not usually exceeding 20 amperes per cabin worked by one man at the lower E.M.F. On alternating supplies, or where the voltage of supply is unsuitable, a small motor-generator is used; and if the supply is not always available, a battery of accumulators of about 65 cells of suitable capacity becomes necessary.

The current required for working an ordinary pair of points of the heaviest rail section (90 to 100 lbs. per yard), together with a facing point lock and bar, averages 4 amperes at 130 volts, and the time taken 2 to 3 seconds for the complete movement. The current for operating a main line signal of the heaviest type averages $1\frac{1}{2}$ ampere during the movement, lasting about $1\frac{1}{2}$ second. The motor is then automatically cut out, and the signal is held off by the coupling magnet with a current of $\frac{1}{4}$ ampere until the lever in the frame is replaced. The same holding-off current is required for the ground disc signals and route indicators, but the motors of the former take somewhat less current than those of semaphore signals. The return indication or check-lock magnets also operate with $\frac{1}{4}$ ampere.

The small amount of current required enables cables with conductors of extremely small size (No. 15 L.S.G.) to be used. The cables consist of 1, 3, 7 or more conductors insulated with impregnated paper, and lead-sheathed overall. The method of laying depends largely on local circumstances, but drawing into iron pipes or other suitable conduits, or laying in troughing (metallic or otherwise) is recommended. Drawing-in boxes are provided at suitable intervals, and in all cases near the points and signals. At these the paper cables are terminated in proper sealing boxes, and separate I.R. covered wires run through pipes to the motors, detectors, etc.

Locking Frame.

The locking frame is complete in itself, merely requiring to stand on an ordinary floor, through which only the small cables leading to the point and signal motors have to pass. The pitch of the levers is 2 ins., the height to top of same being 4 ft. from floor, whilst the width of the frame is only $12\frac{1}{2}$ ins. Its weight is only about 40 lbs. per lever. The frame can, therefore, be used in narrow cabins where space is restricted, nor does it obscure the view of the signalman when the cabin is situated above or close to the line. The frames can be built of any length without break, the standard pattern being made in panels, each having sixteen levers. The lever numbers, names and lead numbers are engraved on an inclined brass plate forming the top of the frame.

Referring to fig. 7, the source of energy is connected to the bus-bars in the locking frame marked + and −, and A is one of the fuses in each circuit, and B the reversing switch operated by the tappet C. The tappets are connected to the levers at their upper end, the mechanical locking being contained in the grooves in the boxes D, E, F, G and H, at the back of the frame.

The check-lock J also operates directly on the tappet, the object of which is to prevent the release of the interlocking between the levers concerned by delaying the completion of the stroke of the lever until such time as the return current from the apparatus worked is received in the corresponding check-lock magnet. When this has occurred, the lever is free to complete its movement. There is, therefore, no possible want of synchronism between the mechanical locking, switches, and outdoor gear.

The check-locks are operated by the check-lock magnets marked N and R for the 'Normal' and 'Reverse' positions of the lever respectively. The check-locks provided are of two types, one being with double action as used for points, in order to ensure that the points have responded to the lever in either of their positions, and the other type being of a single action for signals, as it is usual to ensure that the 'Danger' or 'Normal' position of the semaphore arm is in agreement with the lever.

When, say, a point lever is pulled, the check-lock is mechanically driven into the notch in the tappet and remains in this position until the magnet attracts its armature, and in so doing operates the check-lock so that it becomes free of the tappet and allows the full movement of

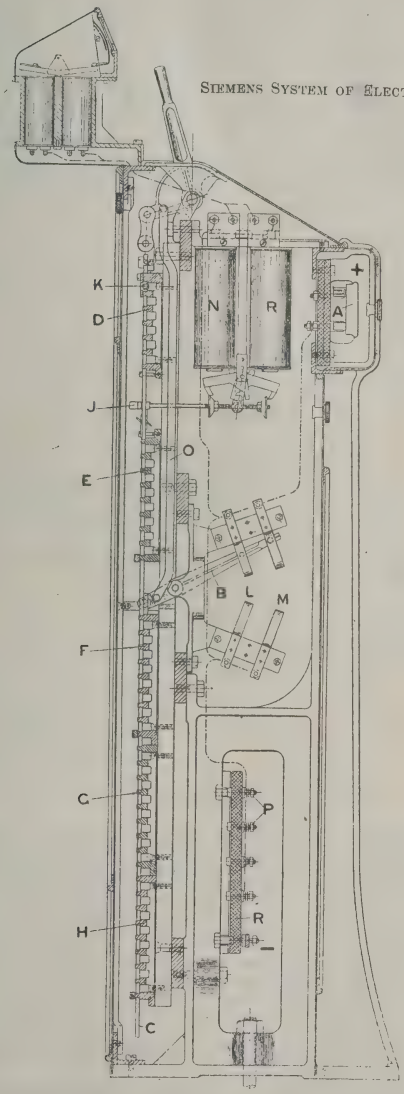

SIEMENS SYSTEM OF ELECTRIC SIGNALLING.
K
D
N
R
A
+
J
O
E
B
L
M
F
C
P
R
H
—
C

FIG. 7.

the lever to be completed. The armatures of both magnets are separate pieces and are so constructed that when the check-lock is forcibly brought into the middle or locking position by the movement of the tappet the check-lock becomes positively locked in that position and cannot be released by vibration or accidental mechanical movement. It is, therefore, impossible for the check-lock to be brought into the free position to allow of the completion of the movement of the lever except by current actually received from the points or signal.

Although the armatures of both magnets are separate pieces it is impossible, owing to their construction, for either to stick when the other is attracted.

Catch-handles are not provided on the levers, but spring bolts K working in the top-locking grooves engaging with and holding the tappets in each of their correct final positions, and also in the right positions for the check-locks to operate when the magnets receive the return current, are provided in their place.

The switches are designed to give a quick and long break, thereby avoiding sparking or tendency to arcing. They are of uniform pattern, the contact springs, L and M, only being varied,

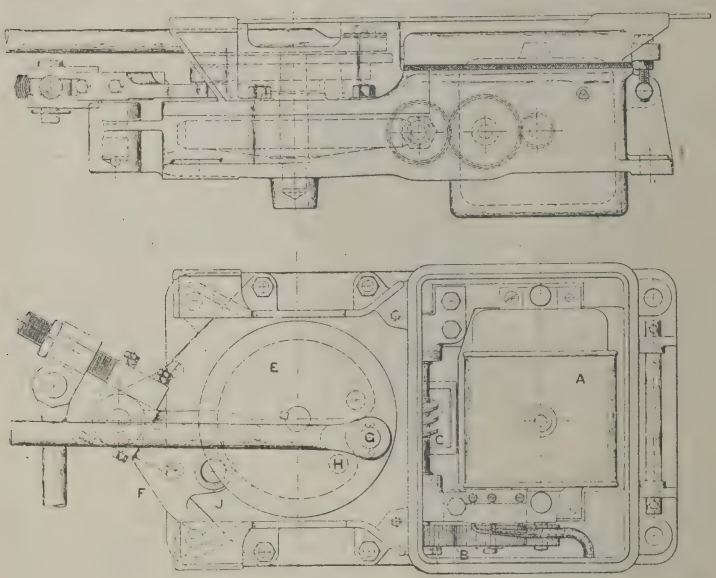


FIG. 8.

according to the work the lever performs—i.e. working a single pair of points with or without bolt or bar, two or more points, simple signal, or signal with route indicator, etc. The connecting rod O between the lever and the switch is merely an auxiliary connection, and only comes into use if the mechanical locking is disconnected for changes to be made due to alterations in the plan of the road.

In addition to the check-lock a constant indication by means of the indicator at the back of the lever is provided for points only. This intimates at all times to the signalman the state of the points, i.e. whether they are normal or reverse, or in an indefinite position. This control indicator is in series with a control magnet which operates a number of controlling contacts for the purpose of joining up or interrupting the signal circuits that require to pass through these contacts. This arrangement of detecting has the advantage that all the control contacts are brought together and can be collected and grouped for purposes of control at one common spot. It is immaterial whether these control magnets are in the cabin or not, they can be very conveniently arranged in cases under the cabin. Numbered terminals P are provided on a marble panel R to which the conductors in the cables leading to the points etc. are attached, which much simplifies the periodical testing of the latter.

The point machine, fig. 8, consists of a reversing motor A driving through toothed and worm gears B and C respectively, a friction clutch D, cam disc E, and escape crank F, coupled

by means of suitable rodding to the points. The first functions performed by the cam disc E when it begins to revolve is to unlock the points by withdrawing the plunger bolt operated by crank pin G. The escape crank F is then turned by the stud H on cam disc into a position in which the roller J on escape crank is compelled to enter into driving engagement with the cam disc, which thereupon completes the movement of the escape crank. The final movement of the cam disc holds the points in their proper position and re-locks them by re-inserting the bolt in the stretcher bar. The reverse operation occurs when the points are moved back into their original position.

The friction clutch is set to transmit power with a large margin for the heaviest points, but will slip should the points become jammed by stones etc. during movement, thus ensuring that the motor is not injured.

In order to safeguard the machine against a run through of the points in a trailing direction, the two bolts connecting the adjustable point connection to the body of the crank are so designed that they will transmit the heaviest legitimate load, but will shear under an excessive strain, such as an event mentioned above. Under such circumstances, however, the return indication current to withdraw the check-lock would not be transmitted to the cabin. Should, however,

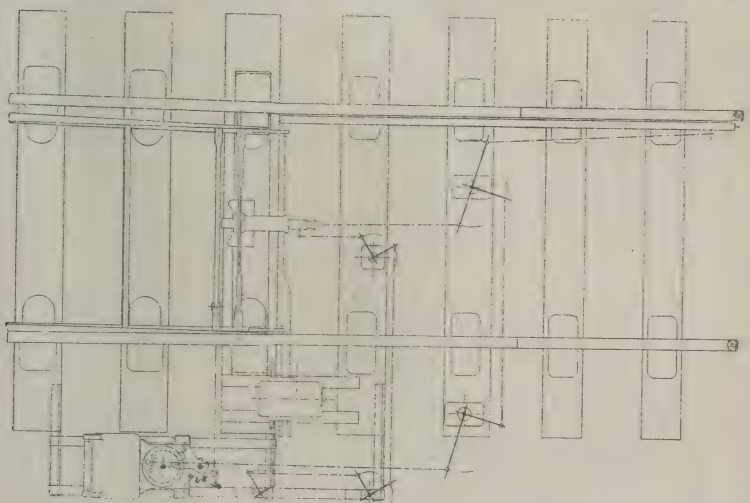


FIG. 9.

the run-through take place after the setting of the points, the return current would be broken down and an indication given in the control indicator and the signal circuit concerned would be opened.

The motors may be reversed at any part of their movement by moving the lever in the cabin to and fro between the check-lock positions.

The switching arrangements, which are carried out in the detector machine, are such that the current is not cut off from the motor until the movement of the points is completed, the momentum of the motor being then absorbed by the clutch. This slight movement of the latter at each operation ensures that the clutch is always in efficient working condition.

The worm-wheel shaft revolves on a ball-bearing at its lower end and this is kept well lubricated by the oil contained in the well of the case.

Fig. 9 shows a typical lay-out for facing point machines where the plunger bolt and locking-bar are operated from the cam shaft, which has a movement of 320°.

The detector is adapted to give a fine detection of each tongue of the points and the locking-bar. It also comprises a switch for the motor circuit in either of the complete final positions of the points and bar. The fineness of detection is secured without unduly limiting the rubbing surface.

SIGNAL OPERATING MECHANISM.

The method of operating semaphore signals is shown in fig. 10. The mechanism consists of a motor contained in a light cast-iron case attached to the back of the post. The motor revolves

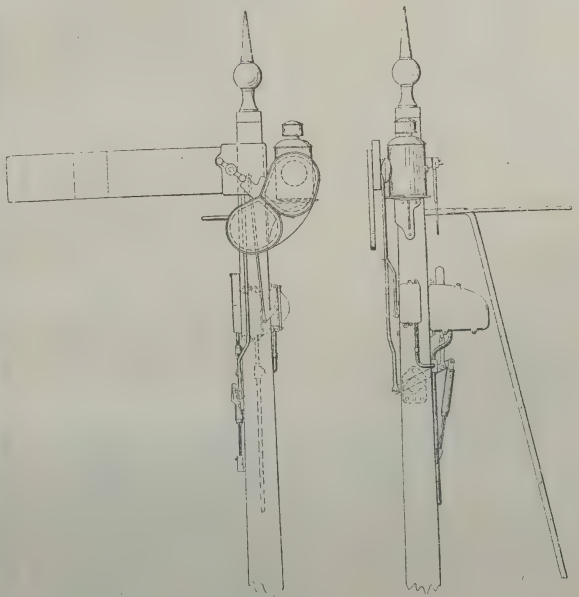


FIG. 10.—Arrangement of Mechanism for Semaphore Signal.


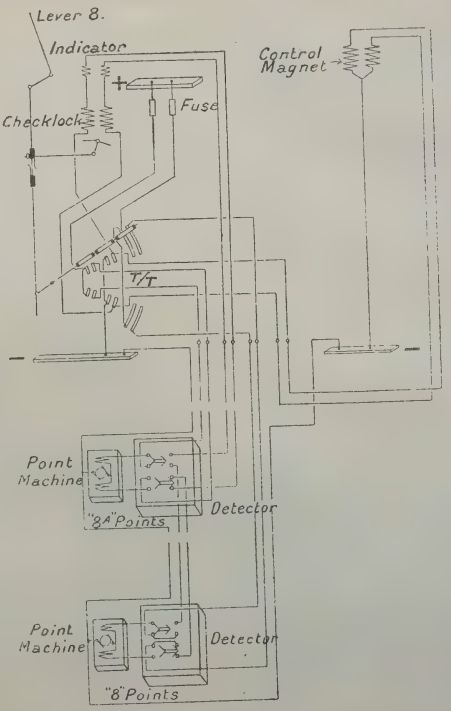


FIG. 11.—Connections for Double Points. Control System.

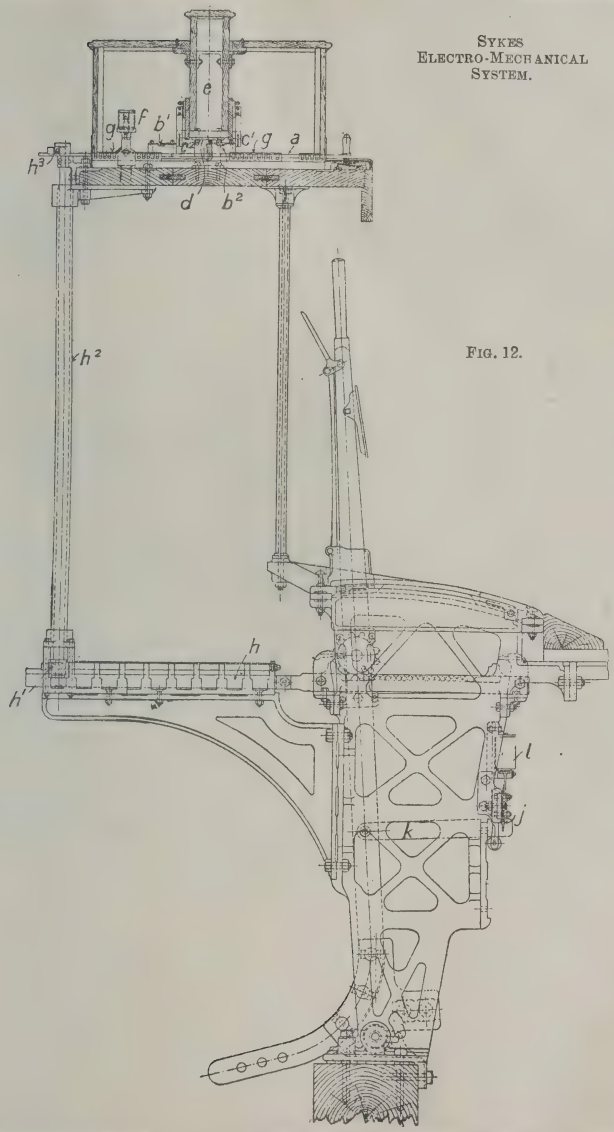

SYKES
ELECTRO-MECHANICAL
SYSTEM.

FIG. 12.

a coupling magnet through a worm which gears into teeth formed on the magnet casting. The armature is fixed on a shaft which has a pinion on its end and gearing with a straight rack connected to the semaphore arm. The motor revolving lowers the semaphore arm to a predetermined angle at which point its circuit is opened by a switch and the motion arrested, but the coupling magnet being still energised, the arm is held in the 'off' position until the main circuit is opened. The signal then returns to the 'danger' position by gravity, merely revolving the uncoupled shaft, all other parts remaining stationary. A safety device of simple construction, consisting of a pawl in a disc, is fitted to these machines, which effectually prevents the arm from being lowered from the 'danger' position by any other means than from the signal cabin.

A switch box attached to the signal contains a contact for giving the return indication of the signal having resumed its danger position. Contacts can also be made in the 'off' position for closing the circuit of other signals—such, for instance, as a 'distant' controlled by 'home' and 'starter.' The switch is operated by a separate light rod from the semaphore arm itself, which ensures correct indications notwithstanding any accidental disconnection of the rods between motor and arm. The switch levers making these contacts are individually adjustable, so that the semaphore arms may be lowered to any angle desired by the railway authorities and the return indication or repeater contact set to any degree of fineness.

Connections.

Fig. 11 shows the electrical connections for two points worked by one lever. Normal position. Motors working in parallel through separate fuses, check-lock, and control magnets in series through both detectors. The gear for moving signals and points has been so designed that the motors work the existing fittings, locking-bars, and plunger-bolts without any modification.

One-lever System of Railway Signalling.—Messrs. Siemens are now introducing a new system whereby each lever in the newly-designed locking frame becomes a 'Route Lever.' One lever therefore, sets up the route required irrespective of the number of points concerned, and when fully reversed lowers the signal over that route. The scheme shows a considerable saving in operative labour costs and of time in traffic movements.

SYKES ELECTRO-MECHANICAL SYSTEM.

About 2,000 levers have been installed in the electro-mechanical system of the W.R. Sykes Interlocking Signal Co., Ltd., wherein all signals are actuated by electricity, the circuits for which are completed by a small slide being drawn forward or pushed back, and all points are moved by the usual mechanical lever, elevations of which are given in fig. 12.

The slide *a* carries contact pieces b^1 b^2 which, when the slide is drawn out, put springs c^1 c^2 into contact with the plate *d*. This completes the circuit to the signal governed by the lever by means of wires passing through the box *e*. When it is necessary to control the movement of a slide, e.g., from another signal-box, or by a fouling bar or track-circuit, a pin rests normally in the slide which can only be lifted when the magnet *f* is energised. The slides are interlocked as in a mechanical frame, but on a miniature scale. The slide itself acts as its own tappet, and the locks are in the locking-boxes *g g*.

The tappet of the mechanical lever is *h*, and a stud h^1 turns the shaft h^2, and so, by a stud h^3, actuates a co-acting tappet in the electrical part. By this the mechanical levers and electrical slides are interlocked.

By an ingeniously arranged escapement wheel the movement of the mechanical tappet is only 2 ins., the same as the electrical slide. A lock *j* in the tappet *k* holds point levers when required until they are freed by the lock being lifted out of the tappet by the magnet *l* being energised.

SECTION XII

PART IV

COST OF RAILWAYS—BOARD OF TRADE REGULATIONS —RAILWAY BILLS.

COST OF RAILWAYS.

(Pre-war Prices)

General.

System of Execution involves: (1) Methods adopted for getting the stuff from cuttings and tunnels; (2) method of loading, transporting, and tipping the stuff.

Time Expended depends on the system of execution and the number of hands employed, making due allowance for bad weather and the nature of the getting and other work involved.

Cost of Permanent Way.—In a new country, where there are no strict Board of Trade Rules, few existing roads, bends, etc., to cross, and where vested interests do not prevent best route from being chosen, the cost may be taken as follows:—

A Single Line.—4 feet 8½ ins. gauge in flat country, cuttings and banks average 3 ft., rails 55 lbs., ballast 15 ins. deep (altogether of light construction), 4,500*l.* to 5,000*l.* per mile.

Heavy construction: 75-lb. rails and 24 ins. ballast, 5,800*l.* to 7,000*l.* per mile.

These prices include stations and permanent work, but not land and rolling stock.

In a hilly country the cost would, of course, be much greater.

Cost of Rolling Stock depends on kind of traffic; but 700*l.* to 1,000*l.* per mile has generally been found necessary on single lines in foreign countries.

Double Line.—The cost of making will be from 50 to 75 per cent. in excess of foregoing figures but the cost of rolling stock only from 10 to 30 per cent. more for the same traffic.

Cost in Different Countries.—In England, 40,000*l.* per mile; Scotland, 28,000*l.*; Ireland, 15,000*l.* Single-line railways in poor districts of Ireland and Scotland, 6,000*l.*; Europe, 12,000*l.* to 25,000*l.*; India, 12,000*l.* and upwards; Great Indian Peninsula, 22,000*l.*; Ceylon, 19,000*l.*; United States, 8,200*l.*; in Norway, light railways, 3 ft. 6 ins. gauge in a very difficult country, have been constructed at from 3,000*l.* to 6,000*l.*; Queensland, 6,000*l.* to 12,000*l.*

The working expenses average 40 per cent. of the gross receipts in Ireland, 45 per cent. in Scotland, and 50 per cent. in England.

In England 50 per cent. of capital (before opening) was expended in works of construction 20 in purchase of land, 10 in carrying stock, 20 in law expenses, discounts, etc.

INTERNATIONAL RAILWAY CONGRESS REPORT ON COST OF RAILWAYS.

Nature of Country.	Cost per Mile.		
	Standard Gauge.	Metric Gauge.	2 ft. 6 ins. Gauge.
	£ £	£ £	£ £
Level	2,392 to 3,987	1,595 to 2,551	1,260 to 2,057
Very undulating .	4,785 „ 7,179	3,652 „ 4,785	2,057 „ 3,190
„ hilly . . .	8,742 „ 11,163	4,785 „ 7,178	3,652 „ 5,582
„ mountainous .	11,963 „ 15,950	7,977 „ 11,164	5,183 „ 7,976

Cost of Light Railways.

Approximate Cost of Narrow-gauge Railways, including works and rolling stock, but not land :—

	Formation. Width.	Ballast. Wide.	Ballast. Thick.
For gauges up to 2 feet 6 inches	8 inches	4½ inches	6 to 7 inches
„ above „ „	10 „	6 „	9 „ 14 „

Cuttings and embankments taken at 2 feet deep.

Gauge.	Weight of Engines exclusive of Tender.		Weight per Yard of each Rail.	Cost per Mile.	Gauge.	Weight of Engines exclusive of Tender.		Weight per Yard of each Rail.	Cost per Mile.
Ft. In.	Tons.	Maximum Load per Wheel. Tons.	Lbs.	£ £	Ft. In.	Tons.	Maximum Load per Wheel. Tons.	Lbs.	£ £
2 0	6	1	20	1,500 to 2,000	3 0⅝	17	3	40	3,500 to 4,500
2 6	9	1½	25	2,500 „ 3,000	3 6	20	3½	50	4,000 „ 5,000
3 0	12	2	30	3,000 „ 3,500					

United Kingdom Railway Expenditure and Receipts.

(Board of Trade Report.)

The following is a comparison for 1912 and 1911 of the gross amounts of the expenses of the companies under the four principal heads, these heads being those covering more particularly the expenses connected with the actual working of the lines as well as being those chiefly influenced by variations in the charges for wages, fuel, and materials :—

Head.	1912.	1911.	Increase.
	Million £.	Million £.	Million £.
Maintenance of way, works, and stations	11·70	11·75	0·05*
Locomotive power	21·84	21·06	0·78
Repairing and renewing carriages and waggons	7·16	6·98	0·18
Traffic expenses	23·46	22·51	0·95

Gross receipts of the Companies in 1912 and 1911 from passenger and goods traffic :—

—	1912.	1911.	Increase.	
	Million £.	Million £.	Million £.	Per Cent.
Receipts from Passenger Traffic	54·26	53·9	0·31	0·6
„ Goods Traffic	64·05	63·3	0·76	1·2
Total	118·31	117·2	1·07	0·9

The above statement does not include receipts from miscellaneous sources, such as steamboats, canals, docks, rents, tolls, hotels, etc.

(*Continued on page* 656.)

* Decrease.

RAILWAY STATISTICS OF THE UNITED STATES AND TWENTY OTHER COUNTRIES OF THE WORLD.

Year.	Country.	Miles of Line.	Capital, or Cost of Construction.	Receipts from Passenger Traffic.	Receipts from Freight Traffic.	Receipts from other Sources.	Total Receipts.
			£	£	£	£	£
1906	United Kingdom	23,063	1,253,424,374	48,585,823	56,875,967	8,718,213	114,180,005
1904	Russia in Europe	30,800	580,820,600	11,431,042	47,810,400	5,872,699	65,114,141
1906	German Empire	34,563	722,698,741	34,033,000	79,516,147	12,846,450	126,395,598
1904	France	24,755	662,396,000	26,482,802	31,057,550	928,035	58,468,388
1905	Austria	12,976	282,098,809	7,248,518	20,935,807	1,088,474	29,272,799
1905	Hungary	11,259	143,746,328	3,494,840	9,232,920	501,520	13,228,080
1903	Italy	10,022	222,851,200	5,190,309	7,690,384	623,998	13,904,689
1902	Spain	8,559	113,243,200	—	—	—	11,321,380
1904	Sweden	7,708	48,987,234	1,923,162	3,662,011	112,072	5,697,245
1906	Norway	1,575	11,795,544	395,882	523,925	18,491	938,295
1906	Denmark (State only)	1,164	11,249,700	924,993	952,448	146,688	2,024,129
1905	Belgium	2,844	95,849,477	3,483,859	7,052,261	209,143	10,745,265
1905	Holland	2,100	34,769,800	2,025,760	1,956,400	221,920	4,212,880
1905	Switzerland	2,644	55,190,014	2,820,362	3,481,983	310,381	6,612,727
1905	Portugal	1,425	32,477,056	802,839	1,064,575	84,787	1,952,501
1904	Roumania	1,974	30,115,975	750,932	1,492,786	78,627	2,322,365
1907	Canada (companies)	20,660	234,387,561	9,146,130	19,147,653	1,053,869	29,347,652
	Canada (Government)	1,792	16,548,987	412,477	832,757	56,603	1,301,837
1904	Argentine	12,065	113,579,198	2,584,375	8,450,887	1,138,774	12,074,036
1906	Japan	4,783	41,155,903	3,413,162	2,869,950	620,203	6,903,313
1907	New South Wales	3,452	43,538,024	1,448,998	2,847,047	290,915	4,586,980
	Total	220,183	5,751,323,729	166,499,269	307,453,850	34,921,867	520,607,982
1906	United States	222,340	2,612,855,861	102,006,516	328,077,331	35,069,186	465,153,033

Year.	Country.	Total Expenses.	Ratio Receipts to Expenses.	Passengers Carried.	Mean Journey.	Tons of Freight Carried.	Mean Haul.
		£			Miles.		Miles.
1906	United Kingdom	70,889,525	62·09	1,240,347,000	7·95	488,790,683	24·86
1904	Russia in Europe	42,663,090	65·40	123,208,000	68·58	170,039,234	152·49
1906	German Empire	81,637,773	64·55	1,209,224,072	14·21	479,226,874	62·48
1904	France	30,377,544	51·90	433,912,983	19·59	130,143,810	78·86
1905	Austria	19,592,404	66·91	189,931,211	23	133,764,959	65
1905	Hungary	8,122,560	61·40	86,485,000	25	51,948,000	83
1903	Italy	10,058,508	72·30	68,031,232	27	23,688,410	66
1903	Spain	5,558,400	49·10	39,600,000	34	—	—
1904	Sweden	3,773,554	66·22	39,354,777	16·47	27,624,444	44·64
1906	Norway	691,525	73·71	10,074,372	15·37	4,273,189	34·10
1906	Denmark (State only)	1,572,676	77·70	19,467,616	21	4,530,833	53
1905	Belgium	6,717,124	62·13	163,422,017	14·03	65,515,247	—
1905	Holland	3,527,440	83·74	38,810,000	18 66	13,936,000	56·97
1905	Switzerland	4,294,574	64·95	82,424,588	12	13,971,540	44
1905	Portugal	885,247	45·34	13,446,043	20	3,775,559	89
1904	Roumania	1,327,509	57·10	5,234,683	42	4,731,195	89
1907	Canada (companies)	20,749,734	70·70	32,137,319	64	63,866,135	183
	Canada (Government)	1,265,779	97·23	2,277,218	54	2,673,217	234·60
1904	Argentine	6,408,815	53·05	23,312,987	24	20,123,575	104
1906	Japan	3,215,517	46·58	113,675,403	22	21,530,064	63
1907	New South Wales	2,434,746	53·08	41,413,084	9·96	8,793,832	66·66
	Total	325,764,047	62·60	3,975,789,605	15	1,732,946,800	65
1906	United States	307,489,740	66·08	797,946,116	31·54	1,631,374,219	132·33

(Sloson Thompson.)

EXPENDITURE AND RECEIPTS.

PER TRAIN MILE.

Division.	Year.	Expenditure.						Receipts.		
		Maintenance of Way.	Locomotive and Rolling Stock.	Traffic Expenses.	Rates and Taxes Government Duty.	Miscellaneous.	Total.	From Passenger Trains.	From Goods, &c., Trains.	From all Trains.
		d.	d.	d.	d.	d.	d.	d.	d.	d.
England and Wales	1871	5·82	10·77	10·55	2·08	1·59	30·81	57·05	72·64	64·93
	1882	6·06	11·25	10·39	2·53	2·61	32·84	52·42	73·48	62·48
	1911	6·55	16·01	13·10	3·24	3·75	42·65	48·43	98·94	66·65
	1912	6·79	17·20	14·23	3·37	4·24	45·83	50·97	103·49	7·04
Scotland	1871	5·85	9·28	8·23	1·48	1·39	26·22	44·36	59·43	52·58
	1882	5·77	10·69	8·83	1·85	2·78	29·92	48·95	67·65	59·24
	1911	6·00	14·23	10·45	1·89	3·45	36·02	44·42	86·18	61·60
	1912	6·27	15·54	11·17	2·08	3·95	39·01	46·26	88·72	64·02
Ireland	1871	8·87	11·22	9·30	1·47	1·81	32·66	48·78	93·86	61·73
	1882	8·54	10·59	8·37	1·66	2·74	31·90	46·29	83·36	57·72
	1911	8·72	13·44	8·66	1·75	3·76	36·33	44·84	89·44	56·79
	1912	8·60	14·20	9·01	1·80	3·70	37·31	46·21	91·28	58·35

PER MILE OF RAILWAY OPEN.

		£	£	£	£	£	£	£	£	£
England and Wales	1871	322	610	597	118	90	1,744	1,609	2,063	3,672
	1882	420	781	721	175	182	2,279	1,879	2,457	4,336
	1911	608	1,486	1,216	300	349	3,959	2,859	3,328	6,187
	1912	605	1,531	1,268	300	380	4,084	2,876	3,365	6,241
Scotland	1871	221	951	311	56	51	990	756	1,230	1,986
	1882	231	439	363	76	115	1,231	946	1,492	2,438
	1911	323	766	562	101	186	1,938	1,405	1,909	3,314
	1912	325	805	579	107	205	2,021	1,394	1,922	3,316
Ireland	1871	161	203	168	27	33	592	630	488	1,118
	1882	166	207	163	32	54	622	603	521	1,124
	1911	197	304	196	40	84	821	671	612	1,283
	1912	191	316	200	40	83	830	672	626	1,298

The average cost per train mile in 1912 of locomotive power was 12·71*d.*, and of rolling stock 4·17*d.* The maintenance of way cost 6·81*d.*, and traffic expenses 13·65*d.* per train mile.

The total length of the running track of the railways of the United Kingdom at the end of 1912 was 40,034 miles, and the total length of sidings 14,875 miles.

TABLE FOR THE RAILWAYS OF THE UNITED KINGDOM, SHOWING LENGTH OF LINES, CAPITAL, PASSENGERS CONVEYED, GROSS AND NET RECEIPTS, AND WORKING EXPENSES.

Year.	Total Mileage.	Total Paid-up Capital.	Number of Passengers Conveyed, Exclusive of Season-Ticket Holders.	Receipts from Passenger Traffic.	
				Totals.	Proportion to Total Receipts.
		£		£	Per cent.
1866	13,854	481,872,184	274,293,668	17,395,925	45·58
1876	16,872	658,214,776	534,494,069	26,163,551	42·05
1886	19,332	828,344,254	725,584,390	30,244,938	43·46
1911	23,417	1,324,018,361	1,326,316,990	53,955,007	42·42
1912	23,441	1,334,963,518	1,294,337,046	54,258,402	42·21

TABLE FOR RAILWAYS OF THE UNITED KINGDOM, SHOWING LENGTH OF LINES, ETC. (*cont.*)

Year.	Receipts from Goods Traffic.		Total Receipts from Traffic.		Working Expenditure.		Net Receipts.	
	Totals.	Proportion to Total Receipts.	Per Mile of Railway Open.	Per Train Mile.	Totals.	Proportion to Total Receipts.*	Totals.	Proportion to Total Paid-up Capital.
	£	Per cent.	£	*s. d.*	£	Per cent.	£	Per cent.
1866	20,768,429	54·42	2,755	5 4	18,811,673	49	19,352,681	4·02
1876	33,754,317	54·25	3,551	5 6¾	33,535,509	54	28,680,266	4·36
1886	36,370,439	52·26	3,446	4 10	36,518,247	52	33,073,706	3·99
1911	63,285,055	49·75	5,007	5 5¾	78,617,824	62	48,581,746	3·67
1912	34,048,814	49·82	5,047	5 8¾	81,224,343	83	47,329,074	3·55

* The Total Receipts include Rents, Tolls, Navigation, Steamboats, etc., which are not included in Traffic Receipts.

BOARD OF TRADE REGULATIONS WITH REFERENCE TO RAILWAYS.

Requirements of the Board of Trade in regard to the Opening of Railways.

(1911.)

TELEGRAPHS AND SIGNALS.

1. *Block Telegraph.*—The requisite apparatus for providing by means of the block telegraph system an adequate interval of space between following trains, and, in the case of junctions, between converging or crossing trains. In the case of single lines worked by one engine under steam (or two or more coupled together) carrying a staff, no such apparatus will be required.

2. *Signals.*—Home signals and distant-signals for each direction to be fixed at stations and junctions, with extra signals for such dock or bay lines as are used either for the arrival or for the departure of trains, and starting signals for each direction at all passenger stations which are also block posts. On passenger lines all cross-over roads and all connections for goods or minerals lines and sidings to be protected by home and distant-signals, and, as a rule, at all important running junctions a separate distant-signal to be provided in connection with each home signal. Signals may be dispensed with on single lines under the following conditions :—

(*a*) At all stations and siding connections upon a line worked by one engine only (or two engines coupled together), carrying a staff, and when all points are locked by such staff.

(*b*) At any intermediate siding connection upon a line worked under the train staff and ticket system, or under the electric staff or tablet system, where the points are locked by the staff or tablet.

(*c*) At intermediate stations, which are not staff or tablet stations, upon a line worked under the electric staff or tablet system ; sidings, if any, being locked as in (*b*).

3. The signals at junctions to be on separate posts, or on brackets ; and the signals at stations, when there is more than one arm on one side of a post, to be made to apply, the first or upper arm to the line on the left, the second arm to the line next in order from the left, and so on ; but in cases where the main or more important line is not the one on the left, separate signal posts to be provided, or the arms to be on brackets. Distant-signals to be distinguished by notches cut out of the ends of the arms, and to be controlled by home or starting signals for the same direction, when on the same post. A distant-signal arm must not be placed above a home or starting signal arm on the same post for trains going in the same direction.

In the case of sidings, a low short arm and a small signal light, distinguishable from the arms or lights for the passenger lines, may be employed, but in such cases disc signals are, as a rule, preferable.

Every signal arm to be so weighted as to fly to and remain at danger on the breaking at any point of the connection between the arm and the lever working it.

4. The signal lights to be green for all right, and red for danger ; the back lights (visible only when the signals are at danger) to be white.

POINTS AND JUNCTIONS.

5. *Points.*—Facing points to be placed as near as practicable to the levers by which they are worked or bolted. The limit of distance from levers working points to be 200 yards* in the case of facing points and 300 yards in the case of trailing points on the main line, or safety points of goods lines and sidings.

In order to ensure that the points are in their proper position before the signals are lowered, and to prevent the signalman from shifting them while a train is passing over them, all facing points must be fitted with facing point blocks and locking bars, and with means for detecting any failure in the connections between the signal box and points. The length of the locking bars to exceed the greatest wheel-base between any two pairs of wheels of the vehicles in use on the line, and the stock rails to be tied to gauge with iron or steel ties. All points, whether facing or trailing, to be worked or bolted by rods, and not by wires, and to be fitted with two connecting rods.

6. *Interlocking.*—The levers by which points and signals are worked to be interlocked and, as a rule, brought close together, into the position most convenient for the person working them, in a signal box, or on a properly constructed stage. The signal box to be commodious, and to be supplied with a clock and with a separate block instrument for signalling trains on each line of rails. The point levers and signal levers to be so placed in the box that the signalman when working them shall have the best possible view of the railway, and the box itself to be so situated as to enable the signalman to see the arms and the lights of the signals and the working of the points. The back lights of the signal lamps to be made as small as possible, having regard to efficiency, and when the front lights are visible to the signalman in his box no back lights to be provided. The fixed lights in the signal box to be screened off, so as not to be mistakable for the signals exhibited to control the running of trains. If, from any unavoidable cause, the arm and light of any signal cannot be seen by the signalman, they must, as a rule, be repeated in the box.

7. The interlocking to be so arranged that the signalman shall be unable to lower a signal for the approach of a train until after he has set the points in the proper position for it to pass; that it shall not be possible for him to exhibit at the same moment any two signals that can lead to a collision between two trains; and that after having lowered the signals to allow a train to pass he shall not be able to move any points connected with or leading to the line on which the train is moving. Points also, if possible, to be so interlocked as to avoid the risk of a collision. Home or starting signals next in advance of trailing points, when lowered, to lock such points in either position, unless such locking will unduly interfere with the traffic. A distant-signal must not be capable of being lowered unless the home and starting signals in advance of it have been lowered.

8. *Sidings.*—Sidings to be so arranged that shunting operations upon them shall cause the least possible obstruction to the passenger lines. Safety points to be provided upon goods and mineral lines and sidings, at their junctions with passenger lines, with the points closed against the passenger lines and interlocked with the signals.

9. *Junctions.*—Junctions, siding connections, and cross-over roads in a passenger station, to be so arranged as to prevent, as far as possible, any necessity for standing trains on them.

10. The junctions of single lines to be, as a rule, formed as double-line junctions.

STATIONS.

11. *Stations.*—The lines of railway leading to the passenger platforms to be arranged so that the engines shall always be in front of the passenger trains as they arrive at and depart from a station; and so that in the case of double lines, or of passing places on single lines, each line shall have its own platform. At terminal stations a double line of railway must not, as a rule, end as a single line.

12. Platforms to be continuous and of sufficient length to accommodate the longest trains using them; to be not less than 6 feet wide for stations of small traffic, nor less than 12 ft. wide for important stations; the descents at the ends of platforms to be by ramps, and not by steps. Pillars for the support of roofs and other fixed works not to be less than 6 ft. from the edges of the platforms. The height of the platforms above rail level to be 3 ft., save under exceptional circumstances, and in no case less than 2 ft. 6 ins. The edges of the platforms to overhang not less than 12 ins. As little space as possible to be left between the edges of the platforms and those of the footboards on the carriages. Shelters and conveniences to be provided on platforms where necessary. Names of stations to be shown on boards and on the platform lamps.

13. When stations are placed on or near a viaduct or bridge under the railway, a parapet or fence on each side to be provided of sufficient height to prevent passengers, who may by mistake leave the carriages when not at the platform, from falling from the viaduct or bridge in the dark.

---

* In cases where facing points are 'power worked' this distance has been provisionally extended to 300 yards. 250 yards now allowed on condition that in addition to the detection of switch blades the position of the bolt lock is also efficiently detected.

14. Foot-bridges or subways to be provided for passengers to cross the railway at all exchange and other important stations. Staircases or ramps leading to or from platforms to be at no point narrower than at the top, and the available width to be in no case contracted by any erection or fixed obstruction whatever below the top.

At all stations where crowding may be expected the staircases or ramps to be of ample width, and barriers for regulating the entrance of the crowd at the top to be erected. If in such cases there are gates at the bottom, a speaking-tube or other means of communication between the top and bottom to be provided; and in all cases gates at the bottom of a staircase or ramp to open outwards. For closing the openings at the top, sliding-bars or gates are considered best. The steps of staircases to be never less than 11 ins. in the tread, nor more than 7 ins. in the rise, and midway landings to be provided where the height exceeds 10 ft.

Efficient handrails to be provided on both staircases and ramps. Where ramps are used the inclination not to exceed 1 in 8.

15. A clock to be provided at every station, in some conspicuous position visible from the platform.

16. *Stations or sidings on gradients.*—No station to be constructed, and no siding to join a passenger line, on a steeper gradient than 1 in 260, except where it is unavoidable. When the line is double, and the gradient at a station or siding junction is necessarily steeper than 1 in 260, and when danger is to be apprehended from vehicles running back, a catch-siding with points weighted for the siding, or a throw-off switch, to be provided to intercept runaway vehicles, at a distance, outside the home signal for the ascending line, greater than the length of the longest train running upon the line.

Under similar circumstances, when the line is single, provision for averting danger from runaway vehicles to be made :—

1. At a station in one of the following manners :—

   a. A second line to be laid down, a second platform to be constructed, and a catch-siding or throw-off switch to be provided on the ascending line inside the loop points.

   b. A loop line to be constructed lower down the incline than the station platform with a similarly placed catch-siding or throw-off switch.

2. At a siding junction, in one of the following manners—except where it is possible to work the traffic with the engine at the lower end of a goods or mineral train, in which case an undertaking (see No. 34) to do so, given by the company, will be accepted as sufficient :—

   a. A similar loop to be constructed, as in the case of a station.

   b. Means to be provided for placing the whole train on sidings clear of the main line before any shunting operations are commenced.

Turntables.

17. *Turntables.*—Engine turntables of sufficient diameter to enable the longest engines and tenders in use on the line to be turned without being uncoupled to be erected at terminal stations, and at junctions and other places at which the engines require to be turned, except in cases of lines upon which the traffic is worked by tank engines fitted for running in both directions. All turntables to be kept at safe distances from the adjacent lines of rails.

Bridges and Viaducts.

18. *Bridges and Viaducts.*—Cast iron must not be used for railway under-bridges except in the form of arch-ribbed girders, where the material is in compression.

In a cast-iron arched bridge, or in the cast-iron girders of an over-bridge, the breaking weight of the girders not to be less than three times the permanent load due to the weight of the superstructure, added to six times the greatest moving load that can be brought upon it.

In a wrought-iron or steel bridge the greatest load which can be brought upon it, added to the weight of the superstructure, not to produce a greater strain per square inch on any part of the material than five tons where wrought iron is used, or six tons and a half where steel is used.

The engineer responsible for any steel structure to forward to the Board of Trade a statement of the tests to which the material has been subjected. (See Appendix I., page 662.)

19. In cases where bridges or viaducts are constructed wholly or partially of timber, a sufficient factor of safety to be provided for.

N.B.—The heaviest engines, boiler-trucks, or travelling-cranes in use on railways afford a measure of the greatest moving loads to which a bridge can be subjected. The above rules apply equally to the main and transverse girders and rail bearers.

20. It is desirable that viaducts should, as far as possible, be wholly constructed of brick or

stone, and in such cases they must have parapet walls on each side not under 4 ft. 6 ins. in height above the rail level and at least 18 ins. thick up to a height of 12 ins. above rail level.

Where it is not practicable to construct the viaducts of brick or stone, and iron or steel girders are made use of, it is considered best that in important viaducts the permanent way should be laid between the main girders. In all cases a substantial railing or parapet with a height of not less than 4 ft. 6 ins. above rail level must be provided by an addition to the girders, unless the girders themselves are sufficiently high, and in exposed places, where necessary, an efficient wind screen may be required. On important viaducts where the superstructure is of iron, steel, or timber, substantial outside wheel-guards to be fixed, above the level of and as close to the outer rails as possible, but not so as to be liable to be struck by any part of an engine or train running on the rails.

In the construction of the abutments or piers which support the girders of high bridges and viaducts cast-iron columns of small size must not be used. In all large structures a wind pressure of 56 lbs. per square foot to be assumed for the purpose of calculation, which will be based on the rules laid down in the report dated May 20, 1881, of the Committee appointed by the Board of Trade to consider the question of wind pressure on railway structures. (See Appendix II., p. 662.)

21. The upper surfaces of the wooden platforms of bridges and viaducts to be protected from fire.

PERMANENT WAY.

22. *Permanent way.*—The joints of rails to be secured by means of fishplates, or by some other equally secure fastening. On main lines and lines where heavy traffic may be worked at high speed the chairs not to weigh less than 45 lbs., but on branch lines or lines on which the traffic is light and the speed is low, chairs weighing not less than 30 lbs. may be used.

23. When chairs are used to support the rails they must be secured to the sleepers, at least partially, by iron spikes or bolts. With flat-bottomed rails, when there are no chairs, or with bridge rails, the fastenings at the joints, and at some intermediate places, to consist of fang or other through-bolts; and such rails, on curves with radii of 15 chains or less, to be tied to gauge by iron or steel ties at suitable intervals.

24. In any curve where the radius is 10 chains or less, a check rail to be provided.

25. Diamond crossings, as a rule, not to be flatter than 1 in 8.

26. *Width of line.*—No standing work (other than a passenger platform) to be nearer to the side of the widest carriage in use on the line than 2 ft. 4 ins., at any point between the level of 3 ft. above the rails and the level of the upper parts of the highest carriage doors. This applies to all arches, abutments, piers, supports, girders, tunnels, bridges, roofs, walls, posts, tanks, signals, fences, and other works, and to all projections at the side of a railway, constructed to any gauge.

27. *Intervals between lines.*—The intervals between adjacent lines of rails where there are two lines only not to be less than 6 ft. Where additional running lines of rails are alongside the main lines, an interval of not less than 10 ft. to be provided, if possible, between such additional lines and the main lines. The interval between running lines and sidings to be not less than 8 ft.

28. *Level crossings.*—At all level crossings of public roads the gates to be so constructed that they may be closed either across the railway or across the road at each side of the crossing, and a lodge, or in the case of a station a gate-keeper's box, to be provided, unless the gates are worked from a signal box. The gates must not be capable of being opened at the same time for the road and the railway, and must be so hung as not to admit of being opened outwards towards the road. Stops to be provided to keep the gates in position across the road or railway. Wooden gates are considered preferable to iron gates and single gates on each side to double gates. Red discs or targets must be fixed on the gates, with lamps for night use; or semaphore signals in one or both directions interlocked with the gates may be required. Fixed signals will be necessary with double gates. At all level crossings of public roads or footpaths a foot-bridge or a subway may be required.

At occupation and field crossings the gates must be hung so as to open outwards from the line.

29. Sidings connected with the main lines near a public road level crossing to be so placed that shunting may be carried on with as little interference as possible with the level crossing, and, as a rule, the points of the siding to be not less than 100 yards from the crossing.

30. At public road level crossings in or near populous places the lower portions of the gates to be either close barred or covered with wire netting.

31. *Mile posts, etc.*—Mile posts, half-mile and quarter-mile posts, and gradient-boards to be provided along the line.

32. *Platelayers' refuges, etc.*—Tunnels and long viaducts to be in all cases constructed with

refuges for the safety of platelayers. On under-bridges without parapets, handrails to be provided. Viaducts of steel, iron, or timber to be provided with manholes or other facilities for inspection.

BRAKES.

33. *Continuous brakes.*—Continuous brakes (in accordance with the Regulations of Railways Act of 1889) complying with the following requirements to be provided on all trains carrying passengers, viz. :—

(1) The brake must be instantaneous in action, and capable of being applied by the engine-driver and guards.

(2) The brake must be self-applying in the event of any failure in the continuity of its action ;

(3) The brake must be capable of being applied to every vehicle of the train, whether carrying passengers or not ;

(4) The brake must be in regular use in daily working ;

(5) The materials of the brake must be of a durable character, and easily maintained and kept in order.

UNDERTAKINGS.

34. Any undertaking furnished by a railway company to be under the seal and signed by the Chairman and Secretary of the Company.

MODES OF WORKING SINGLE LINES.

In the case of a line being single, an undertaking must be sent to the Board of Trade, through the Inspecting Officer, to the effect that one of the three following modes of working single lines will be adopted, namely :—

I. By train-staff and train tickets in the mode described in the following rules, combined with the absolute block-telegraph system :

Rules for working the single line between A, B, C, etc.

1. Either a train-staff or a train ticket is to be carried with each engine or train to and fro, and for this purpose (one, two, or more) train-staffs and sets of train-tickets will be employed, e.g. :—

Number of Staffs.	Colour of Staff and Ticket.	Form of Staff and Ticket.
One between A and B	Red	Square
One between B and C, etc. . . .	Blue, etc.	Round, etc.

2. No engine or train is to be permitted to leave or pass either of the staff stations, A, B, C, etc., unless the staff for the portion of the line over which it is to travel is then at the station ; and no engine-driver is on any account to leave or pass a staff-station without seeing such train-staff.

3. If no second engine or train is intended to follow, the staff is to be given to the engine-driver.

4. If other engines or trains are intended to follow before the staff can be returned, a train-ticket, stating 'staff following,' is to be given to the engine-driver of the first engine, and so on with any other except the last, the staff itself being sent with the last. After the staff has been sent away, no other engine or train is to leave the staff-station under any circumstances whatever until the return of the staff.

5. The train-tickets are to be kept in a box fastened by an inside spring, and the key to open the box must be the train-staff, so that a ticket cannot be obtained without the train-staff. The removal of the train-staff must lock the box.

6. The train-staffs, the train-tickets, and the ticket-boxes are to be painted or printed in different colours, e.g., red for the line between A and B, blue for that between B and C, etc. ; the inside springs and the keys on the staffs being so arranged that the red staff cannot open the blue box, or the blue staff the red box, and so forth.

7. The ticket-boxes are to be kept in the signal boxes or in the booking-offices at the staff-stations.

8. The sole person authorised to receive, exhibit, or deliver the staff or ticket is either the station-master, the inspector, the signalman, or the person in charge for the time at a staff-station.

9. The usual special train tail-signal, 'engine or train following,' must be used by every engine or train carrying a ticket, for the information of the platelayers, gatekeepers, and others.

10. When a ballast train has to do work on the line, the staff only and no tickets to be used by such train. This will close the line whilst the ballast train is at work. The ballast train must proceed to one of the two staff-stations in order to open the line before the ordinary traffic can be resumed.

11. In the event of an engine or train breaking down between two staff-stations, the fireman or guard is to take the train-staff, if with the train, to the staff-station in the direction whence assistance may be expected, so that the staff may be at that station on the arrival of an engine. Should the engine or train that fails be in possession of a train-ticket instead of the staff, assistance can only come from the station at which the train-staff has been left. The fireman will accompany any assisting engine to the place where the engine or train broke down.

II. With only one engine in steam, or two or more engines coupled together, upon the single line or any section thereof at one and the same time.

Such engine or engines to carry the staff belonging to the line or section on which the train is travelling.

(N.B.—No tickets to be allowed under this mode of working.)

III. By the electric tablet or electric staff system, under which only one of the tablets (or staffs) applying to any section can be in use at the same time.

(N.B.—The approval of the Board of Trade to be obtained for the apparatus proposed to be used, and for the rules of working, which should be of a somewhat similar character to those detailed under mode of working No. 1.)

Board of Trade (Railway Department).

HERBERT JEKYLL.

Appendix I.

Use of Steel in Railway Structures.

Extract from the Report of the Committee appointed by the Board of Trade to consider the Practicability of assigning a safe Coefficient for the use of Steel in Railway Structures.

'We recommend that the employment of steel in engineering structures should be authorised by the Board of Trade under the following conditions, namely :—

'1st. That the steel employed should be cast steel or steel made by some process of fusion, subsequently rolled or hammered, and that it should be of a quality possessing considerable toughness and ductility, and that a certificate to the effect that the steel is of this description and quality should be forwarded to the Board of Trade by the engineer responsible for the structure.

'2nd. That the greatest load which can be brought upon the bridge or structure, added to the weight of the superstructure, should not produce a greater strain in any part than 6½ tons per square inch.'

Appendix II.

Wind Pressure on Railway Structures.

Extract from the Report of the Committee appointed by the Board of Trade to consider the Question of Wind Pressure on Railway Structures.

'We are of opinion that the following rules will sufficiently meet the cases referred to :—

'(1) That for railway bridges and viaducts a maximum wind pressure of 56 lbs. per square foot should be assumed for the purpose of calculation.

'(2) That where the bridge or viaduct is formed of close girders, and the tops of such girders are as high or higher than the top of a train passing over the bridge, the total wind pressure upon such bridge or viaduct should be ascertained by applying the full pressure of 56 lbs. per square foot to the entire vertical surface of one main girder only. But if the top of a train passing over the bridge is higher than the tops of the main girders, the total wind pressure upon such bridge or viaduct should be ascertained by applying the full pressure of 56 lbs. per square foot to the entire vertical surface from the bottom of the main girders to the top of the train passing over the bridge.

'(3) That where the bridge or viaduct is of the lattice form or of open construction, the wind pressure upon the outer or windward girder should be ascertained by applying the full pressure of 56 lbs. per square foot, as if the girder were a close girder, from the level of the rails to the top of a train passing over such bridge or viaduct, and by applying in addition the full pressure of 56 lbs. per square foot to the ascertained vertical area of surface of the ironwork of the same girder situated below the level of the rails or above the top of a train passing over such bridge or viaduct. The wind pressure upon the inner or leeward girder or girders should be

ascertained by applying a pressure per square foot to the ascertained vertical area of surface of the ironwork of one girder only situated below the level of the rails or above the top of a train passing over the said bridge or viaduct, according to the following scale, viz. :—

'(*a*) If the surface area of the open spaces does not exceed two-thirds of the whole area included within the outline of the girder, the pressure should be taken at 28 lbs. per square foot.

(*b*) If the surface area of the open spaces lies between two-thirds and three-fourths of the whole area included within the outline of the girder, the pressure should be taken at 42 lbs. per square foot.

'(*c*) If the surface area of the open spaces be greater than three-fourths of the whole area included within the outline of the girder, the pressure should be taken at the full pressure of 56 lbs. per square foot.

'(4) That the pressure upon arches and the piers of bridges and viaducts should be ascertained as nearly as possible in conformity with the rules above stated.

'(5) That in order to ensure a proper margin of safety for bridges and viaducts in respect of the strains caused by wind pressure, they should be made of sufficient strength to withstand a strain of four times the amount due to the pressure calculated by the foregoing rules. And that, for cases where the tendency of the wind to overturn structures is counteracted by gravity alone, a factor of safety of 2 will be sufficient.'

STANDING ORDERS OF THE HOUSE OF COMMONS WITH REFERENCE TO RAILWAY BILLS.

The following are the principal Orders relating directly to railways.

Estimate.

37. The estimate for any works proposed to be authorised by any railway, tramway, tramroad, subway, canal, dock, or harbour Bill shall be in the following form, or as near thereto as circumstances may permit :—

ESTIMATE of the proposed (Railway).

Line, No. .									Whether Single or Double.	
Length of line				*Miles.*	*Fgs.*	*Chs.*				
Earthworks :		*Cubic Yds.*		*Price per Yd.*			£	*s.*	*d.*	£ *s.* *d.*
Cuttings—Rock										
Soft Soil . . .										
Roads . . .										
Total . . .										
Embankments, including roads . . .				*Cubic yds.*						
Bridges—Public roads				*Number*						
Accommodation bridges and works										
Viaducts										
Culverts and drains										
Metallings of roads and level crossings										
Gatekeepers' houses at level crossings										
Permanent way, including fencing :										
	Miles.	*Fgs.*	*Chs.*	at	*Cost per Mile.* £	*s.*	*d.*			
Permanent way for sidings, and cost of junctions										
Stations										
Contingencies									per cent.	
Land and buildings :										
	A.	R.	P.							
							TOTAL		£	

The same details for each branch, and general summary of total cost.

Plans.

42. In all cases where it is proposed to make, vary, extend, or enlarge any railway, the plan shall exhibit thereon the distances in miles and furlongs from one of the termini; and a memorandum of the radius of every curve not exceeding one mile in length shall be noted on the plan in furlongs and chains; and where tunnelling as a substitute for open cutting is intended, the same shall be marked by a dotted line on the plan, and no work shall be shown as tunnelling in the making of which it will be necessary to cut through or remove the surface soil.

43. If it be intended to divert, widen, or narrow any public carriage-road, navigable river, canal, or railway, the course of such diversion and the extent of such widening or narrowing shall be marked upon the plan; and if it be intended to divert any public foot-path, the course of such diversion shall be marked upon the plan.

44. When a railway is intended to form a junction with an existing or authorised line of railway, the course of such existing or authorised line of railway shall be shown on the deposited plan for a distance of 800 yards on either side of the proposed junction, on the same scale as the scale of the general plan.

Sections.

47. The section shall be drawn to the same horizontal scale as the plan, and to a vertical scale of not less than one inch to every one hundred feet, and shall show the surface of the ground marked on the plan, the intended level of the proposed work, the height of every embankment and the depth of every cutting, and a datum horizontal line, which shall be the same throughout the whole length of the work, or any branch thereof respectively, and shall be referred to some fixed point (stated in writing on the section), near some portion of such work, and in the case of a canal, cut, navigation, public carriage-road or railway, near either of the termini, the distance of such fixed point above or below an ordnance bench mark in the locality of the proposed works, and near one of the termini, and the height of such bench mark above ordnance datum shall also be stated.

48. In cases of Bills for improving the navigation of any river, there shall be a section which shall specify the levels of both banks of such river; and where any alteration is intended to be made therein, it shall describe the same by feet and inches, or decimal parts of a foot.

49. In every section of a railway the line of the railway marked thereon shall correspond with the upper surface of the rails.

50. Distances on the datum line shall be marked in miles and furlongs, to correspond with those on the plan; a vertical measure from the datum line to the line of the railway shall be marked in feet and inches, or decimal parts of a foot, at the commencement and termination of the railway, and at each change of the gradient or inclination thereof; and the proportion or rate of inclination between every two consecutive vertical measures shall also be marked.

51. Wherever the line of the railway is intended to cross any public carriage-road, navigable river, canal, or railway, the height of the railway over or depth under the surface thereof and the height and span of every arch of all bridges and viaducts by which the railway will be carried over the same, shall be marked in figures at every crossing thereof; and where the railway will be carried across any such public carriage-road or railway, on the level thereof, such crossing shall be so described on the section; and it shall also be stated if such level will be unaltered.

52. If any alteration be intended in the water level of any canal, or in the level or rate of inclination of any public carriage-road or railway which will be crossed by the line of railway, then the same shall be stated on the section, and each alteration shall be numbered; and cross-sections, in reference to the numbers, on a horizontal scale of not less than one inch to every three hundred and thirty feet, and on a vertical scale of not less than one inch to every forty feet, shall be added, which shall show the present surface of such road, canal, or railway, and the intended surface thereof when altered; and the greatest of the present and intended rates of inclination of the portion of such road or railway intended to be altered shall also be marked in figures thereon; and where any public carriage-road is crossed on the level a cross-section of such road shall also be added, and all such cross-sections shall extend for two hundred yards on each side of the centre line of the railway.

53. Wherever the extreme height of any embankment, or the extreme depth of any cutting, shall exceed five feet, the extreme height over or depth under the surface of the ground shall be marked in figures upon the section; and if any bridge or viaduct of more than three arches shall intervene in any embankment, or if any tunnel shall intervene in any cutting, the extreme height or depth shall be marked in figures on each of the parts into which such embankment or cutting shall be divided by such bridge, viaduct, or tunnel.

54. Where tunnelling as a substitute for open cutting, or a viaduct as a substitute for solid embankment, is intended, the same shall be marked on the section, and no work shall be shown as tunnelling in the making of which it will be necessary to cut through or remove the surface soil.


55. When a railway is intended to form a junction with an existing or authorised line of railway, the gradient of such existing or authorised line of railway shall be shown on the deposited section, and in connection therewith, and on the same scale as the general section, for a distance of 800 yards, on each side of the point of junction.

SECTION XIII


ELECTRIC TRACTION—RAILWAYS—RAILS—RAIL JOINTS — FOUNDATIONS — POINTS AND CROSSINGS — COST OF CONSTRUCTION — TRACTIVE RESISTANCE — CROSSOVERS AND TURNOUTS—TRAMWAY MOTOR CONTROL—ELECTRIC EQUIPMENT OF TRAMWAYS — TROLLEYS — OVERHEAD CONSTRUCTION—POLES—CURVES—TROLLEY WIRE—RAIL BONDING—CABLES—MINISTRY OF TRANSPORT REGULATIONS—SPECIFICATIONS—BRAKES RAILLESS ELECTRIC TRACTION—BATTERY VEHICLES—STANDING ORDERS

(Revised by Arthur H. Allen, M.I.E.E.)

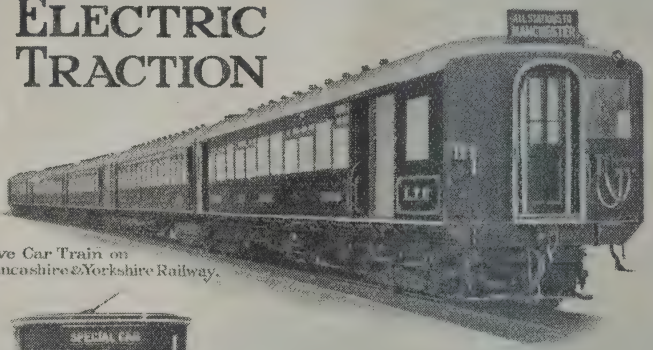ELECTRIC TRACTION



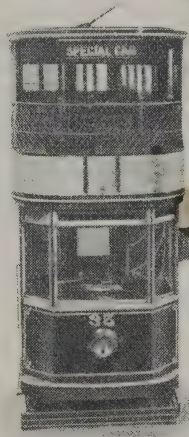
Five Car Train on Lancashire & Yorkshire Railway.



One of 10 Electric Tramcars supplied to Rochdale Corporation.



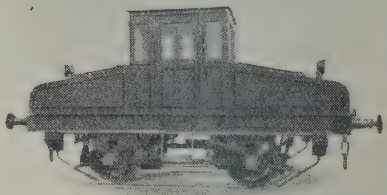350 H.P. Ventilated Railway Motor.



Industrial Electric Locomotive.

The
ENGLISH ELECTRIC
Company Limited.

WORKS:
BRADFORD, COVENTRY, PRESTON, RUGBY AND STAFFORD.

Queen's House, Kingsway, London, W.C. 2.

SEE ALSO OUR ADVERTISEMENTS ON GRAY PAGE XIX AND FACING PAGES 1177, 1558, 1673 AND 1908.

SECTION XIII

ELECTRIC TRACTION—RAILWAYS—RAILS—RAIL JOINTS—FOUNDATIONS—POINTS AND CROSSINGS—COST OF CONSTRUCTION—TRACTIVE RESISTANCE—CROSSOVERS AND TURNOUTS — TRAMWAY MOTOR CONTROL — ELECTRIC EQUIPMENT OF TRAMWAYS — TROLLEYS — OVERHEAD CONSTRUCTION — POLES—CURVES — TROLLEY WIRE—RAIL BONDING—CABLES — MINISTRY OF TRANSPORT REGULATIONS—SPECIFICATIONS — BRAKES — RAILLESS ELECTRIC TRACTION—BATTERY VEHICLES—STANDING ORDERS.

(Revised by Arthur H. Allen, M.I.E.E.)

ELECTRIC TRACTION.

The technical arrangements in electric tramways are practically standardised all over the world. Two four-pole totally enclosed series motors are used either with or without interpoles. The nominal rating of each motor is 30 to 40 h.p. with double-deck cars. The transmission of current is done by means of an overhead trolley wire and return through the rails, the current supplied to the car by means of a wheel trolley or bow collector. The voltage is 500 to 600; a few American interurban tramways have, however, adopted a pressure of 1,200 volts. A drum controller is used, which allows of series-parallel control. Braking is done either by means of an air brake or an electric brake, the motor acting as a generator and sending current into a magnetic rail brake, hand brakes serving as a spare. Only for short railways has it been possible to generate all the current as 600 volts direct current in the power station. For longer lines, it is standard practice to generate in the power station high tension three-phase current, and to convert it in sub-stations into direct current. The motor generator used before for this purpose has been replaced in most cases by the rotary converter, which has higher efficiency and overload capacity, or by the motor-converter. The mercury-vapour rectifier is also coming into use (see Section XXXII., Electrical Engineering).

Direct current of 600 volts has been used also for heavy traction. It is then usual to replace the hand controller by the multiple unit control, which consists of small master controllers and a number of switches similar to circuit breakers, which are connected to the motors and tappings of the resistance grids. The overhead trolley wire is often replaced, for heavy traction, by a third rail. In England, where the Board of Trade regulations require a very small voltage drop in the earth return, it has in some cases been necessary to add an insulated fourth rail in order to obviate the drop in the rails, which elsewhere serve as return circuit. With this system, problems of the heaviest traction have been satisfactorily solved. For instance, the locomotive of the Pennsylvania Railway has two multipolar motors of 1,000 h.p. each fixed inside the cab to haul very heavy trains. The maximum output of this locomotive is nearly 4,000 h.p. Some well-known examples of the 600-volt D.C. system in England are the Liverpool Overhead Railway, L. & Y. Railway, London Underground, and the North Eastern Railway (Tyneside lines).

For main lines with infrequent train service, the efficiency of the sub-stations is comparatively low, and the running costs are very high, because the sub-stations have to deal with the very heavy peak and have a poor load factor. Also the number of sub-stations must be great, and the transmission losses in the third rail are heavy.

The most popular motor for A.C. traction is the single-phase series motor, which has similar characteristics to the series D.C. motor, i.e., a torque increasing with reduced speed. It has a compensating winding in order to counteract the armature reaction. In these motors it is not possible to use on the commutator such high voltage as in direct-current motors with satisfactory commutation, and they work, as a rule, with a voltage of 200 to 300, and have, therefore, more brushes and a bigger commutator than a D.C. motor of the same output. On the trolley line, however, a much higher voltage, for instance 11,000 volts, can be used, which is stepped down by means of a stationary transformer inside the locomotive to the lower voltage required. In starting, the A.C. system has an advantage in that no resistances are required, and the speed of the motor can be regulated by switching it on to different tappings on the transformer. The control arrangements with master controller and switches are similar to those described with heavy D.C. traction, with the exception that here no resistance grids are required. The periodicity used for single-phase traction is, as a rule, 15 or 25, motors of the same output being lighter for the lower frequency. Other types of motors used for A.C. railways are the plain repulsion motor (the regulation being effected by means of brush shifting), and the repulsion series motor.

Three-phase traction has been used to a large extent in Italy and Switzerland, and, in the beginning of the century, on the experimental Berlin-Zossen line, where speeds of 130 miles per hour were obtained. The main disadvantage of the three-phase system is the necessity of at least two overhead wires. The three-phase induction motors used have a considerably lower weight, and at full speed a better efficiency than single-phase commutator motors. The absence of a commutator is also a great advantage. On the other hand, there is only one, or if the cascade system is used, only two economical speeds. The starting and speed reduction must be obtained by means of resistances (liquid controllers) in the rotor circuit. Speeding up above the normal speed can only be obtained to a certain extent on a slope, by running downhill with the motor power shut off. Running downhill with the motor connected to the line keeps the speed very near to synchronous speed, and allows of recuperating the energy previously expended in climbing uphill by sending power back into the line, a feature which is not possible either with the D.C. or single-phase system as usually applied.

Recently high-tension direct current has been used for electric traction. In America the voltage is doubled by using two rotary converters in series in the sub-stations, with two motors in series on the car, thus keeping the standard apparatus with the exception of the better insulation required. The multiple unit control is used. In order to keep the advantages of the series parallel control, it is necessary to use on a car two groups of two motors, *i.e.* four motors. On the Continent several small 1,000-volt lines have been built, with motors wound for the full voltage. For high voltage D.C. railways as a rule an overhead trolley wire with catenary suspension is used. (*Rosenberg.*)

ELECTRIC RAILWAYS.

The most extensive electrification of a steam railway in the world is that of the Chicago, Milwaukee and St. Paul Railway, U.S.A. Trains of 3,000 tons have been hauled on this railway by electric locomotives, and the regenerative system of control is employed with success. Power is transmitted at 100,000 volts, three-phase, converted to direct current at 3,000 volts, and distributed by a catenary overhead construction. The system has been in operation for six years, and has proved completely successful. Gearless locomotives are used with 12 driving and 2 guiding axles, the motor armatures being mounted direct on the axles. The continuous tractive effort is 42,300 lbs. The motors are connected three in series at full speed. This is the first application of gearless locomotives on mountain service with gradients up to 2 per cent. The geared locomotives have 6 twin motors, giving a continuous capacity of 3,200 h.p. and a tractive effort of 49,000 lbs. at 24·5 miles per hour, the maximum starting effort being 110,000 lbs. The electrically operated portion of the railway is 440 miles long, with heavy gradients, including one of 2 per cent. for 21 miles, over which trains of 3,000 tons have been hauled.

The gearless locomotives for passenger service weigh 521,200 lbs., the load on each driving axle being 38,140 lbs. The maximum power at one-hour rating is 3,480 h.p., and the total tractive effort is 46,000 lbs. at 27·5 m.p.h.

Control is effected on the series-parallel system, the combinations ranging from twelve motors in series to three in series and four sets in parallel. Regeneration is effected by using some of the motors for exciting the fields of the others, the latter acting as generators and returning energy to the line. A new section 217 miles long has been electrified. An important engineering commission advising the French Government on the electrification of 7,800 kilometres of railway in France, after visiting the United States, reported that the energy consumption on this line was 27 watt-hours per ton-kilometre, and recommended the D.C. system at 3,000 volts as 'the only system suitable for the electrification of heavy traction lines.'

The Manchester-Bury section of the L. & Y. Railway, comprising 22 miles of single track, is operated by direct current at 1,200 volts, with a third rail, and the Shildon-Newport branch of the North-Eastern Railway, 19 miles long, dealing with heavy mineral traffic, is operated at 1,500 volts with overhead contact wires. The N.E. Railway Company is contemplating the adoption of a large scheme of main-line electrification.

On the Butte, Anaconda and Pacific Railway, operated with direct current at 2,400 volts, the average train-load going west is 4,456 tons, on an average gradient of 0·3 per cent. (maximum 0·6). The speed of the loaded trains is up to 15 miles per hour for freight, and 55 miles per hour for passenger traffic. Three electricians maintain 28 locomotives and three tractor trucks, the car heating, and the power, heating and lighting services of the workshops, and the mechanical staff is less than half as large as with steam operation. Tyres last 45,000 miles ; motor brushes 18,000 miles ; contact tubes 50,000 miles. Maintenance costs are 19*d.* per locomotive mile.

On the Lake Erie and Northern Railway a steel-reinforced aluminium bearer cable is employed, consisting of seven strands of steel wire and 54 of aluminium, all 0·1118 in. in diameter. The contact wire consists of a No. 0000 galvanised steel wire, having a conductivity 14 per cent. of that of copper. The bearer cable has a sag of 2 ft. at 60° F. The line is operated at 1,500 volts, and regenerative control is used from 26 to 7 miles per hour, a range covering 93 per cent. of the kinetic energy.

Fig. 1, page 670, shows the type of construction of the permanent way and conductor rails used on most of the London Tube Railways. There are two conductor rails, the outer being the positive, and the inner the negative, rail. The insulators are of brown stoneware.

Conductor Rail Leakage.

Tests on the down road of the Baker Street and Waterloo Railway gave the following results :—

Length of track tested, miles	3·47
Volts between positive and negative	575
Volts between outer rail and earth	520
Volts between centre rail and earth	55
Leakage, positive to negative, amperes	0·68
Leakage per mile of single track	0·196
Leakage, outer rail earthed, amperes	6·75
Leakage, centre rail earthed, amperes	0·74

(*Fortenbaugh, Proc. Am. Inst. E.E.*)

Experiments made by the U.S. Bureau of Standards show that tramway tracks laid on concrete have a low resistance to earth—from 0·2 to 0·5 ohm per 1,000 feet of single track. With crushed stone ballast under a concrete roadbed the resistance is about three times as great, and on crushed stone ballast with 'Tarvia' finish the resistance is 2 to 3 ohms. Track laid on wooden sleepers embedded in earth has a resistance of 1 to 1·5 ohms. Open track on sleepers laid on good stone ballast has a resistance of 10 to 15 ohms or more in dry weather, 3 to 5 in wet weather, per 1,000 ft. of single track. Chemical salts used to preserve the sleepers greatly reduce the resistance.

Main Line Electric Traction.

The electrification of main lines of railway has become a subject of immediate interest. The greatest progress in this direction has taken place in the United States, where 675 electric locomotives are running on 4,875 miles of route, while the total in all other countries amounts to 450 locomotives on 1,000 miles of route. Operating results show a saving of 70 per cent. of the coal required for steam haulage. United States practice favours the use of motors geared to the axles, or gearless motors mounted directly on the axles ; European practice tends towards the use of side rods driven from the motors by cranks. The usual method of collecting the current is by means of pantographs carrying sliders which rub the under side of the overhead conductor ; currents up to 3,000 amperes can thus be collected at 30 miles per hour, and 2,000 amperes at 60 miles per hour, and the wear on the conductor is trifling. [British practice, on service of much lighter character, has generally followed the third-rail system, with various types of collecting shoes, the side and under-running types being favoured for recent work.] Where long grades are met with, regeneration affords a valuable economy ; it has been shown that on a gradient of 2 per cent. as much as 42 per cent. of the power required to haul a train up the gradient can be recovered on the descent.

LONDON TUBE RAILWAYS SYSTEM.

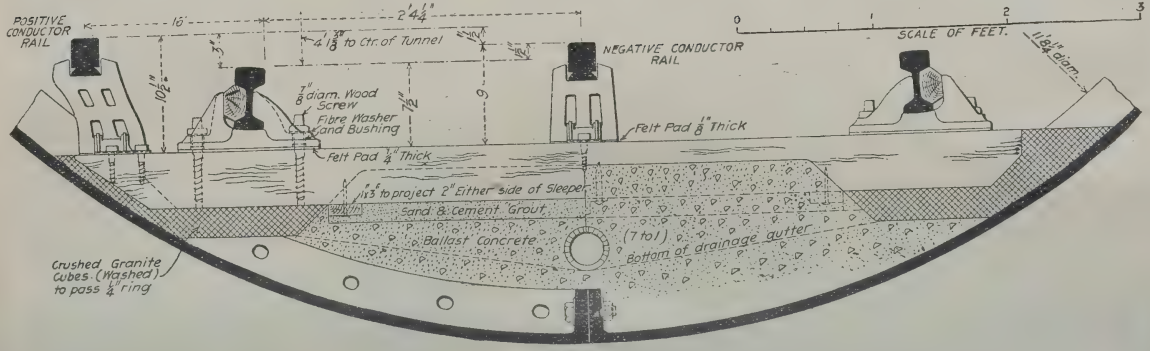


FIG. 1.—Type of Construction of Permanent Way and Conductor Rails.

The length of electrically equipped British railways at the end of 1918 was 351 miles (mainly suburban), and the consumption of electricity for traction in 1918 was about 400 million kw.-hrs., at an annual one-hour load factor of 37 per cent. The total consumption of electricity by fourteen railways for traction, light, and power was 517 million kw.-hrs., at a load factor of 34 per cent.; but for the war this figure would have been raised to 875 million kw.-hrs. It has been estimated that to electrify all the railways in Great Britain would cost 300,000,000*l.*, and that an annual saving of 7,000,000 tons of coal would be effected thereby.

(*Roger T. Smith.*)

It is estimated, on the basis of the results of five years' working of the Chicago, Milwaukee and St. Paul Railway, that if the whole of the United States railways were electrically operated, 122,500,000 tons of coal (two-thirds of the coal now used for railway traction) would be saved, without allowing for the further saving due to the use of water-power. The power-station capacity required would be 10 million kilowatts (about half the capacity of the existing power stations in the United States).

At a paper read before the Institution of Locomotive Engineers, it was stated that taking 2 lbs. of coal in power station to produce 1 kw.-hr.; efficiency of transmission of power to drawbar 62 per cent.; this gives 3·2 lbs. of coal per kw.-hr., or 2·4 lbs. per h.p.-hr., at drawbar of electric locomotive. For the ordinary steam locomotives the figure varies from 4 lbs. to 8 lbs. per h.p.-hr. at drawbar.

The tendency in recent years has been towards the adoption of high-pressure direct current for main-line traction in the United States and France. On the other hand, single-phase alternating current is preferred in Germany, Sweden (which has 400 miles S.P., and only 20 miles D.C.), and other continental countries. Italy, however, has 390 km. of three-phase line, and is using that system for most new construction.

In the United Kingdom the choice of system for future construction has been settled by the report abridged below.

Standards for Railway Electrification

The Electrification of Railways Advisory Committee, appointed by the Minister of Transport in March 1920, issued its final report in September 1921, recommending that all new electrification should be on the direct-current system, and that the standard pressure should be 1,500 volts, except in the case of railways already operating at 600 or 1,200 volts D.C., or with alternating current. The adoption of 750 or 3,000 volts should be permitted where approved by the Minister. Both overhead and rail conductor collection were recommended, provided that the form and design of the conductors and structures were in accordance with specified regulations. Current should be generated on the three-phase system, at the frequency in general use in the district concerned; 50 cycles could be used satisfactorily. Suggested regulations were given, with drawings, for the standardisation of contact rails, the centres of which were to be 16 in. from the gauge line of nearest track rail, and for top-contact 3 ins., for under-contact 1½ ins., above the plane of the top table of the track rails. The clearance of the contact shoe in the free position over the track rails was not to be less than 1½ ins. For overhead collection, the clearance between the overhead conductor and the maximum load gauge was to be 3 ft. in the open and 10 ins. in tunnels and under bridges; between the conductor and any part of the structures, 6 ins.; between the conductor and the rail level 18 ft. at crossings, 20 ft. where men might have to stand on the roofs of vehicles; and between any part of the collector gear and any structure, 3 ins. Exceptions were made in the case of the equipment of existing lines.

The contact wire was to be not more than 15 ins. from the vertical plane through the centre line of track at 18 ft. above rail level, and provision should be made for an upward pressure of 25 to 40 lbs. The contact surfaces of collectors were to be not less than 4 ft. wide, and the extreme width of collectors not more than 7 ft. 6 ins. The Committee considered it undesirable to set limits to the drop of pressure in uninsulated return conductors.

Tramway Tyres and Axles.

The British Engineering Standards Association has issued standard specifications Nos. 101—1921 for tramway tyres and 102—1921 for axles. The former includes particulars of the tests to be applied, and a drawing showing the shape and dimensions of the tyre of standard section. The latter specifies that the steel shall not contain more than 0·05 per cent. of sulphur or phosphorus, and defines the tests to which the axle shall be subjected.

New tyres should be turned to the same angle of inclination as the worn head of the tramway rails has assumed, and care should be taken to ensure that the tyres fixed on the same axle should be of equal hardness, in order to ensure the maintenance of equal diameters in service.

TRAMWAY RAILS.

In Great Britain the grooved girder rail is practically the only type employed for tramways constructed in public roadways.

At Hull the rail used has a double tread with central groove. This form involves the use of more current in propelling cars.

On some inter-urban tramways, with tracks laid on private lands, ' tee ' section rails have been used, loose guard-pieces being bolted on at curves ; on single lines, having passing places with automatically worked points, ' tee ' rails present practical difficulties, and the later tendency is to use a special type of the ordinary grooved girder rail for such lines.

Twenty to thirty per cent. more power is required to run cars on a grooved rail than on a ' tee ' rail, due to side friction, dirt in grooves, &c.

When gauge is 4 ft. or less, in order to allow room for removing motors, special rails, without overhang, should be fixed at car pits.

Weight of straight-track rails used in this country varies from 65 lbs. per yard, as at Coventry and Norwich, to 108½ lbs. per yard, as at Sheffield, Leeds, Wigan, &c. Rails of from 90 to 105 lbs. per yard are now generally adopted, with depth from 6 ins. to 7 ins., and width of base 6½ ins. to 7½ ins. In America, rails weighing as much as 137 lbs. per yard are now being used.

The Board of Trade has made a pronouncement against the employment of rails less than 90 lbs. per yard.

For a wheel flange ⅞ in. thick, groove width should be 1½ in. on straight, and 1¼ in. on curves less than 75 ft. radius.

It is of importance that the profile of wheel tread and flange should accord to the shape of rail table and groove.

On curves of less radius than 50 ft. there is much grinding of wheel flange against both sides of groove which quickly widens under such wear ; to allow for this the guard or lip on curve rails should be made thicker and higher and rails should be preferably of manganese steel.

Curves less than 100 ft. radius should be of spiralised or other easement form.

The top of guard or lip for straight-track rails is usually made slightly lower than the table, to allow for greater wear on latter, but the effect of this is very objectionable to vehicular traffic where the rail table is not sloped or coned.

The rail web should be as nearly as practicable under the centre of rail table, so that the resultant of forces, due to rolling load of car and lateral pressure of wheel flange, shall fall well within the rail base, otherwise there is a tendency for the rail to tilt sideways.

The base should be sufficiently wide to spread the superincumbent weight on to the underbed, and to resist the side-tilting motion.

The British Engineering Standards Association has issued a series (No. 2—1903) of fully-dimensioned drawings for ' British Standard ' (to be known as ' B.S.') tramway-rail and fishplate sections, and also for corresponding standard tyre profiles for tramcar wheels. A Report (No. 79—1919) has been issued by the Association on British standard special trackwork for tramways.

Fig. 2, page 673, shows a section of a 105 lb. (No. 4) rail.

Expert opinion, and the actual practice of some authorities, now favours the use of a deeper groove, viz. 1½ ins., than is shown in fig. 2.

There are five sections of rails for straight tracks, with corresponding sections for curved tracks. The fishplate sections are similar for both sets of rails. Their general particulars are as shown by the table below.

The affix C to the ' B.S.' number denotes that the rail is for use on curves, the difference between the straight-track and curve rails being that the groove is ¼ in. wider and the guard or lip thicker and higher in the latter. All the sections have heads of identical profile as regards the groove and the angle of the rail-table. This profile gives a groove 1⅛ in. wide by 1¼ in. deep, measured from the highest point of the table, which has a slope of 1 in 21. The guard or lip is ⅛ in. below the highest point of the table. In the curve rails the groove is 1½ in. wide, and the lip is brought up level with the table. The only difference in the profile of tyres for running on the various sections, is in the width of the tread to suit the varying widths of rail-table—i.e. from 1⅞ in. in Nos. 1 and 1C. to 2¼ ins. in Nos. 5 and 5C.

TABLE OF TRAMWAY RAILS.

'B.S.' Section.	Rails.			Fishplates.	
	Height.	Width of Base.	Normal Weight per Lineal Yd.	Weight of Inner.	Weight of Outer.
Number	Ins.	Ins.	Lbs.	Lbs.	Lbs.
1 } 1c }	6½	6½	{ 90 } { 96 }	22½	27½
2 } 2c }	6½	7	{ 95 } { 101 }	22½	27
3 } 3c }	6½	7	{ 100 } { 106 }	22½	26⅓
4 } 4c }	7	7	{ 105 } { 111 }	26	30½
5 } 5c }	7	7	{ 110 } { 116 }	26	30½

BRITISH STANDARD SECTION TRAMWAY RAIL.

'B.S.' Section No. 4.—105 lbs. per yd.

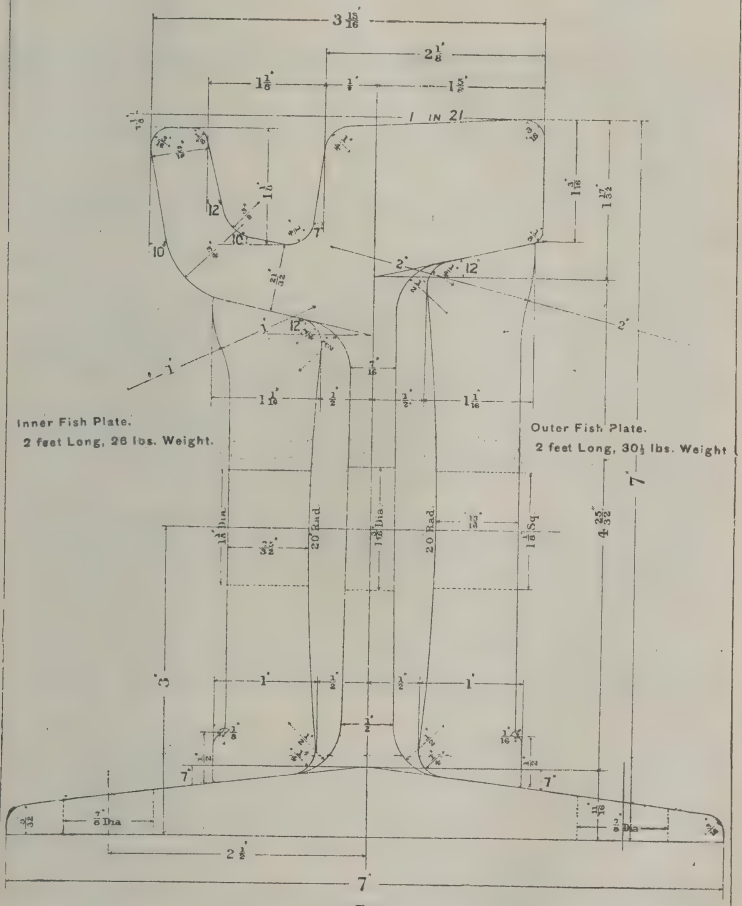


FIG. 2.

Electrical resistance per yard of rail (single) = ·0000276 ohm = ·0486 ohm per mile,
= 11·8 times resistance of a copper conductor of same section.

The Association has likewise drawn up a Standard Specification for manufacture of tramway rails, prescribing the chemical constituents, physical tests, etc. The principal provisions are briefly as follows :—

Chemical composition.—Steel to conform to following limits :

Carbon	from 0·40 to 0·55 per cent.
Manganese	„ 0·70 „ 1·00 „
Silicon	maximum 0·10 „
Phosphorus	„ 0·08 „
Sulphur	„ 0·08 „

Manufacturer to furnish carbon determinations of each cast, and a complete chemical analysis for each rolling, or, if a rolling exceeds 100 tons, for each 100 tons or part thereof. Engineer may make independent analyses ; in case of difference, samples may be analysed by an independent metallurgist, to be mutually agreed upon.

Templates.—Two complete sets of templates are to be furnished, properly engraved with names of purchaser and manufacturer, 'B.S.' number of section, weight of rail, and date of contract.

Limits of variation.—Permissible variations are $\frac{1}{32}$ in. under or over total height, but $\frac{1}{64}$ in. only between fishing-angles.

Lengths.—Normal for straight track to be either 35 ft., 45 ft., or 60 ft., maximum proportion of short lengths being 7½ per cent. for the 35-ft., 10 per cent. for the 45-ft., and 15 per cent. for the 60-ft. lengths. For curved tracks the normal length to be 35 ft., with 10 per cent. of short lengths.

A variation of ¼ in. either way is permitted in the lengths. All short lengths to be painted white at each end, and have their lengths painted on.

Straightness and squareness.—All rails to be made properly straight and true in all directions. When cold, to be sawn or planed true and square, and burrs removed before leaving the works.

Branding.—A special brand is to be rolled on the web of every rail, to indicate that the rail is of 'British Standard' section and made under the conditions of the Standard Specification ; also the number of section, weight, manufacturer's name or mark, and year of manufacture. The number of cast or blow is also to be stamped on the end of each rail.

Impact test.—A 5-ft. test-piece, head uppermost, is to be supported horizontally on solid iron bearings 3 ft. 6 in. apart in the clear, and a tup or ball, having 9 ins. radius face and weighing not less than 1 ton, dropped on to it, midway between the bearings, from a height of 15 ft. for rails under 100 lbs. per yard, and of 18 ft. for rails of 100 lbs. and over per yard. If the rail fractures, all from that cast may be rejected, unless it is shown by a similar test on two further pieces that the first was not fairly representative of the quality of the steel. One rail in eighty may be selected for this test.

Tensile test.—From each 100 tons of rails a rail may be selected and a test-piece cut therefrom. This piece is to be machined to a sectional area of half a square inch and a length of 2 inches between test-gauge points. It is to show an ultimate tensile strength equal to not less than 40 tons per square inch, with an elongation of not less than 12 per cent. on a length of 2 inches. In case of failure another rail from the same cast may be tested, and if that also fails the whole of the rails from the cast may be rejected.

Bending.—From each 100 tons of rails a selected rail is to be tested by bending sideways to a curve of 30 ft. radius, and shall not show signs of cracking ; if it does, two more rails are to be bent, and if they fail the whole rolled from that cast may be rejected.

Acceptance.—On the rejection of any cast, the acceptance of the rails from the other casts forming the lot of 100 tons from which the sample was selected will depend upon the passing of similar tests of a rail from each cast.

Holes in rails.—If required, each rail is to have holes made in it, without extra charge, for fish-bolts, electric bonds, tie-bars, joint-plates, and intermediate holding-down plates. Those for the tie-bars may be punched, but all others must be drilled. The size, number, and position of these holes are specified, and the limits of permissible error in position and diameter set out.

Notice and facilities for inspection.—Seven clear days' notice of the rolling of the first lot and three days for subsequent rollings is to be given ; the inspector is to have access at all working hours to those parts of the mill where work under his inspection is being performed. The manufacturer is to provide all necessary apparatus in complete working order, and to provide all labour and reasonable assistance for making the specified tests. All rails accepted are to be stamped by or in the presence of the inspector.

Payment by weight.—Rails are to be paid for according to actual weights before drilling or punching, weights to be ascertained by weighing sample rails not less than 30 ft. long.

Fish-plates.—The chemical composition of the steel, tensile tests, and general conditions as to manufacture of rails, also apply to fish-plates. Accuracy of fit between rails and fish-plates is regarded as of special importance, and sample joints are to be made whenever the engineer or inspector desires to test this.

Bending.—When cold and before being punched, the fish-plates shall be capable of being bent to a right angle round a bar 4 ins. in diameter without showing fracture.

Size.—Length, 24 ins., ends sawn square.

Holes are to correspond with those in the rails. In the outer plates the holes to be 1¼ in. square and in the inner 1⅛ in. dia. All burrs are to be removed, and if fish-plates have been punched cold they are to be afterwards annealed. If necessary, after punching they are to be straightened between dies, and any bulge completely removed. They are to be dipped into hot boiled linseed oil or other approved liquid, and if required wired up in bundles. Rejected fish-plates are to be destroyed, and payment is to be according to actual weights.

(Copies of the complete specification and drawings can be obtained from the offices of the British Engineering Standards Association, 28 Victoria Street, S.W. 1.)

Notes on Chemical Constituents and Physical Tests of Tram-Rails.

Generally speaking, there are very wide variations in the specified stipulations as to the chemical constituents of steel for tramway rails, particularly with regard to the proportion of *carbon*, which may be regarded as the main hardening constituent, some engineers specifying this to be as low as from ·28 to ·40 per cent., while the highest extreme is from ·55 to ·65 per cent. It is questionable whether the latter stipulation always meets with full compliance.

Where British ores are employed, there are limitations in practicability of manufacture of very high carbon tramway rails.

If carbon is over ·55, and especially if combined with high silicon, a somewhat brittle rail is likely to result.

Practical experiments under everyday conditions have shown that high carbon tram-rails have not given as good wear as those with moderate carbon.

Rails vary in hardness among themselves even when manufactured to the same specification and subjected to the same tests, and they show corresponding irregularities in their wear, which also varies greatly according to the situation in which rails are placed.

High carbon rails are specially liable to injury by injudicious thermal treatment in rolling.

Carbon and *Manganese*, particularly the latter, notably affect the electrical conductivity of steel, which in tramway rails usually varies from one-twelfth to one-fourteenth that of copper.

High manganese tends to coarse crystallisation, with resulting abrasion and flow of metal, or 'rolling out,' under heavy car traffic. This is often the cause of much trouble from hog-backing, &c.

Sulphur, when in moderate excess, is not particularly harmful, as hitherto generally supposed, but an excess of *Phosphorus* tends to brittleness.

A high percentage of sulphur mainly affects the rail-maker, causing red shortness and seamy metal with attendant difficulties in rolling.

In American standard specifications no limit of sulphur is specified.

Copper.—No limit necessary. It has been conclusively proved that it exercises no deleterious influence even when present in greater proportions than usually found in tram-rail steel.

Arsenic and Nickel.—Limiting proportions are occasionally specified, but for present processes of manufacture it is superfluous to mention these elements. There are propositions, however, to employ nickel to a greater extent in rail-steel making.

The processes usually employed in analysing the chemical constituents of steel are not so exact as for the physical tests. There is also considerable liability to personal error. The effects of segregation of the constituents often have an important bearing in the consideration of this question. Carbon is sometimes judged by the colour test, but more exactly by the combustion test.

Physical Tests.—The impact, or drop, test when conducted by a thoroughly competent inspector is perhaps the most valuable of all tests for ascertaining the general quality and characteristics of the steel in tramway rails.

As deflection is in the nature of a measure of ductility of a rail, and as tramway rails are composed of chemical constituents with a view to securing extreme hardness in the steel—which is not compatible with great ductility—it is not usually considered desirable to exact a deflection test.

Steels of similar chemical constituents, but manufactured by different processes, will give somewhat different results in the physical tests. A high elastic limit is one of the most important properties of tram-rail steel, and can be obtained, combined with toughness, by suitable heat treatment.

The physical tests stipulated by specifications are often incompatible with the required chemical constituents of the steel and the processes to be employed in its manufacture.

The results of the chemical analyses and physical tests should be considered in conjunction.

Inspection.—It is of very great importance that there should always be careful inspection and testing of tramway rails, conducted by a thoroughly competent and reliable inspector, at the rolling-mills, before acceptance of deliveries.

Sandberg Rails.

The use of Sandberg silicon steel (silicon 0·3, carbon 0·5, manganese 1·1 per cent.) increases the life of rails by at least 25 per cent. If steel of the same composition is treated by a special process (Sandberg air-cooled steel), the life is said to be increased by 100 to 200 per cent., so far as experience has been obtained (*R. B. Holt*). The surface of rails can be hardened *in situ* by a patented process which has been adopted on several British tramways; this process diminishes the tendency to corrugation.

Rolling-Mill Memoranda.

The Bessemer basic process of steel-making is now generally employed for the manufacture of tramway rails at English and Continental rolling-mills.

Rails are cut, while hot, by circular saw, to specified lengths, with a certain margin for shrinkage in cooling. They should be cut off quite square at the ends; the practice of undercutting below the head should not be permitted.

Very exact or dead lengths require to be planed in an ending or milling machine, and are usually subject to a slight extra charge.

Rails are straightened, while in a cold state, in a press.

45 ft. or 60 ft. are the most usual lengths. With the latter there are fewer joints, and they are generally preferred.

Density of Steel for Girder Tram-rails.

As a result of very careful and complete experiments and tests, undertaken at the instance of the Engineering Standards Association at the National Physical Laboratory, it was found that the average density of the steel in a large number of specimens of English-made tram-rails was 0·283 lb. per cubic inch.

Sectional area of rail in square inches=approximately one-tenth the weight of rail in lbs. per yard.

Rail Joints.

This detail is of the first importance, as the rail joints are the weakest part of the track and determine its life, being also the main factor in the cost of maintenance of the permanent way, and largely affecting the cost of upkeep of the rolling-stock and equipment.

A thoroughly strong and permanently rigid joint will maintain a smooth and quiet running surface, and will greatly lengthen the life of the rails, while assisting the electrical conductivity.

Fishplates alone, even when of the heaviest type, have proved inadequate to withstand the stress from the great vibration and pounding effect experienced from the running of heavy electrical cars, and the addition of flat plates under the rail-base has proved of no permanent advantage.

The very best type of joint should be employed, such as an efficient form of bridge joint. A type frequently adopted is the Cooper patent 'Anchor' joint, which is in the form of an inverted rail or joist riveted to the under side of the rail-base, thereby having the effect of doubling the depth of the rail about its weakest part. This device, in addition to providing an efficient connection between the rail-ends, also securely holds the rails down to the concrete foundation, thus keeping them rigidly in position and preventing springing, creep, etc. It is also of considerable value in providing a path for the electric return current.

Allied to the question of rail-joints is that of fixing down or anchoring the rails to the concrete under-bed, not only at the rail-ends, but at intervals intermediately. When rails are welded together, anchorage at close intervals is certainly a necessary accompaniment. At Leeds, with the 'thermit' process, the rails are anchored at 8-ft. intervals.

Taking into consideration the increased length of rails, the close-butting of ends, and other circumstances, this course is undoubtedly essential to provide against the effects from expansion and contraction, hog-backing, creep, springing, undulation, vibration, water-pumping, cold-rolling, spreading of gauge, and other causes tending to create movement in the rails.

The distance apart for intermediate anchors or holding-down devices varies from 3 ft. 6 ins., as at Hull, to 30 ft. There should be at least one intermediate with 45-ft. rails, and two with 60-ft. rails.

Rails should not be rigidly connected to each other across the track—as, for instance, by steel cross sleepers fixed under rail-base from rail to rail—as this is liable to cause waviness in the rail-table, due to unequal flexure in the rails.

Worn rails can be ground to shape *in situ* by a travelling apparatus, thus prolonging their life by several years. Worn joints can be built up to level by adding metal with the metallic arc.

Foundation.

In the most approved British methods of electric-tramway construction, the base of the rails is bedded on a foundation of concrete, composed of 6 parts of stone and sand to 1 part of Portland cement, laid about 20 ins. wider than the gauge of the track, and 6 ins. in depth, a short length of some 3 ft. under the rail-joints being usually made from 3 ins. to 6 ins. deeper and of better quality concrete. The latter should be of clean aggregate mixed with good quality cement having somewhat quick-setting properties.

Sometimes the concrete is first laid, the rails being afterwards set, and packed to the required level with small crushed stone and cement, mixed dry. A more approved method is first to set the rails on blocks to the proper alignment and level, and to fit all the fastenings, afterwards placing the concrete in position under and around the rail-base, care being taken that there shall always be a sufficient 'head' on the upper surface of concrete above the rail-base.

At Hull, a longitudinal timber, 4 ins. thick and the width of rail-base, is interposed between the rails and the concrete. At Aberdeen, on part of the track, cross-sleepers are used.

The hollow on each side of the rail-web should be filled with a 'parging,' or rendering composed of 1 of cement to 4 of sand, laid to a vertical surface to pave against.

Rails should be laid so as to butt quite close at ends.

Points and Crossings.

Points and crossings should be of manganese steel throughout, or, if of the best crucible cast steel, then with specially hardened tongues. Renewable parts are of questionable value. Points should be about 12 ft. in length, having one road curved. The tongues should be at least 6 ins. longer than maximum wheel-base length of cars. Movable points should always be drained. Crossings should be of the 'leg' type, and from 7 ft. to 8 ft. long, according to angle number.

Drain-rails should never be used, but slots 9 ins. long cut in rail-groove at every low point, and trapped drain-boxes fixed and connected to sewer.

Cost of Construction.

Where the overhead running or trolley principle was adopted, the pre-war cost of construction of the permanent way varied approximately between 4,500*l.* and 6,500*l.* per mile of single track, this variation being mainly due to the different classes of paving used. Present prices are about 250 per cent. higher.

A fair general average of proportionate costs over a system may be taken as follows :—Rails and fastenings, including points, crossings and special work, 30 per cent.; paving (sett or wood) including concrete underbed, 45 (to 50) per cent.; labour, including cartage, 20 per cent.; bonding, 2 per cent.; watching and sundries, 3 per cent.

Tractive Resistance on Tramways.

The average pull required per ton of load to keep a car moving is 30 lbs. With exceptionally clean rails, as during a heavy rainfall, and with the rail grooves void of dirt, the pull may be as low as 20 lbs. per ton, or below this figure, approximating to the 10 or 12 lbs. of railway work. Again, a very dirty, clogged rail may demand more than the 30 lbs. Multiplying the pull by the speed in feet per minute gives the power in foot-pounds per minute, so that the horse-power is $\text{H.P.} = \frac{T \times W \times S}{33{,}000}$, where T is the pull per ton necessary, W is the load in tons, and S the speed in feet per minute. This rule gives the horse-power on the level. To find the power on a grade, the vertical rise of the car is found by dividing the speed of the car in feet per minute by the length of road in which there is a rise of 1 foot. The number of feet of vertical lift multiplied by the total weight in pounds gives the work done per minute against gravity, or $\frac{S \times W}{F}$, where W is the load, S is the speed, and F is the distance in which the road rises 1 foot. Thus on a 1 in 30 grade, F = 30. The addition of the two results gives the total horse-power.

HADFIELDS' CROSSOVERS AND TURNOUTS.

STANDARD LATERAL TURNOUTS (Gauge 4′ 8½″).


Radius of Switches.	Angle of Crossing.	Lead of Crossing in Feet.	Radius of Plain End.	Distance between Centres of Tracks.	Lead of Plain End.	Total Length over Special Work.	Variation in Inches of l_2 and l_3 for each Inch in Width D.	Length of Straight Through Crossing.	Variation in Inches of L for each Inch in Width D.
R	$\theta°$	l_1	r	D	l_2	l_3		L	
100′ 0″	1 in 5	33·7047	100′ 0″	8 0	26·2581	59·9628	4·9225	19·6013	5·0230
				8 6	33·7468	67·4515		17·0854	
	11° 29′		150′ 0″	9 0	36·2080	69·9127		19·5969	
				9 6	38·6693	72·3740		22·1084	
				10 0	41·1305	74·8352		24·6199	
100′ 0″	1 in 5½	35·1296	150′ 0″	8 0	31·5715	66·7011	5·4308	20·9217	5·5221
				8 6	34·2869	69·4165		23·6828	
	10° 26′			9 0	37·0023	72·1319		26·4438	
				9 6	39·7177	74·8473		29·2049	
				10 0	42·4331	77·5627		31·9659	
100′ 0″	1 in 6	36·6979	150′ 0″	8 0	32·0827	68·7806	5·9333	26·8224	6·0170
				8 6	35·0494	71·7473		29·8309	
	9° 34′			9 0	38·0160	74·7139		32·8394	
				9 6	40·9827	77·6806		35·8479	
				10 0	43·9493	80·6472		38·8564	

STANDARD LATERAL TURNOUTS (Gauge 4′ 8½″)—*continued.*

Radius of Switches.	Angle of Crossing.	Lead of Crossing in Feet.	Radius of Plain End.	Distance between Centres of Tracks.	Lead of Plain End.	Total Length over Special Work.	Variation in Inches of l_2 and l_3 for each Inch in Width D.	Length of Straight Through Crossing.	Variation in Inches of L for each Inch in Width D.
R	$\theta°$	l_1	r	D	l_2	l_3		L	
100′ 0″	1 in 6½ 8° 49′	38·4276	150′ 0″	8 0	32·7860	71·2136	6·4472	32·5583	6·5243
				8 6	36·0096	74·4372		35·8204	
				9 0	39·2332	77·6608		39·0826	
				9 6	42·4568	80·8844		42·3447	
				10 0	45·6804	84·1080		45·6069	
100′ 0″	1 in 7 8° 12′	40·1789	150′ 0″	8 0	33·5949	73·7738	6·9395	37·8319	7·0112
				8 6	37·0646	77·2435		41·3375	
				9 0	40·5344	80·7133		44·8431	
				9 6	44·0041	84·1830		48·3487	
				10 0	47·4739	87·6528		51·8543	
100′ 0″	1 in 7½ 7° 39′	42·0543	150′ 0″	8 0	34·5357	76·5900	7·4451	43·0662	7·5119
				8 6	38·2582	80·3125		46·8221	
				9 0	41·9808	84·0351		50·5781	
				9 6	45·7033	87·7576		54·3340	
				10 0	49·4259	91·4802		58·0900	
100′ 0″	1 in 8 7° 10′	44·0023	150′ 0″	8 0	35·5723	79·5746	7·9530	48·1747	8·0156
				8 6	39·5488	83·5511		52·1825	
				9 0	43·5253	87·5276		56·1903	
				9 6	47·5018	91·5041		60·1981	
				10 0	51·4783	95·4806		64·2059	
150′ 0″	1 in 5 11° 29′	38·7321	150′ 0″	8 6	33·7468	71·4789	4·9225	12·0581	5·0230
				9 0	36·2080	73·9401		14·5696	
				9 6	38·6693	76·4014		17·0811	
				10 0	41·1305	78·8626		19·5926	
150′ 0″	1 in 5½ 10° 26′	39·6946	150′ 0″	8 0	31·5715	70·2661	5·4308	16·3566	5·5221
				8 6	34·2869	72·9815		19·1177	
			200′ 0″	9 0	41·5673	80·2619		17·3137	
				9 6	44·2827	82·9773		20·0747	
				10 0	46·9981	85·6927		22·8358	
150′ 0″	1 in 6 9° 34′	40·8819	200′ 0″	8 6	39·2333	79·1152	5·9333	21·4629	6·0170
				9 0	42·2000	82·0819		24·4714	
				9 6	45·1666	85·0485		27·4799	
				10 0	48·1333	88·0152		30·4884	
150′ 0″	1 in 6½ 8° 49′	42·2822	200′ 0″	8 0	36·6405	77·9227	6·4472	24·8491	6·5243
				8 6	39·8641	81·1463		28·1112	
				9 0	43·0877	84·3699		31·3734	
				9 6	46·3113	87·5935		34·6355	
				10 0	49·5349	90·8171		37·8977	
150′ 0″	1 in 7 8° 12′	43·7629	200′ 0″	8 0	37·1790	79·9419	6·9395	30·6638	7·0112
				8 6	40·6488	83·4117		34·1694	
				9 0	44·1185	86·8814		37·6750	
				9 6	47·5883	90·3512		41·1806	
				10 0	51·0580	93·8209		44·6862	
150′ 0″	1 in 7½ 7° 39′	45·3972	200′ 0″	8 0	37·8785	82·2757	7·4451	36·3804	7·5119
				8 6	41·6010	85·9982		40·1363	
				9 0	45·3236	89·7208		43·8923	
				9 6	49·0461	93·4433		47·6482	
				10 0	52·7687	97·1659		51·4042	
150′ 0″	1 in 8 7° 10′	47·1334	200′ 0″	8 0	38·7035	84·8369	7·9530	41·9125	8·0156
				8 6	42·6800	88·8134		45·9203	
				9 0	46·6565	92·7899		49·9281	
				9 6	50·6330	96·7664		53·9359	
				10 0	54·6095	100·7429		57·9437	


HADFIELDS' CROSSOVERS AND TURNOUTS.

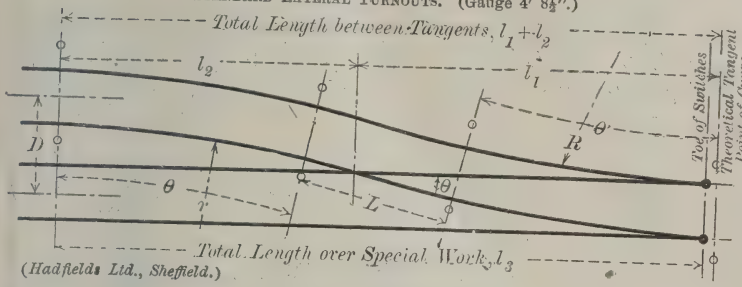STANDARD LATERAL TURNOUTS. (Gauge 4′ 8½″.)




(*Hadfields Ltd., Sheffield.*)

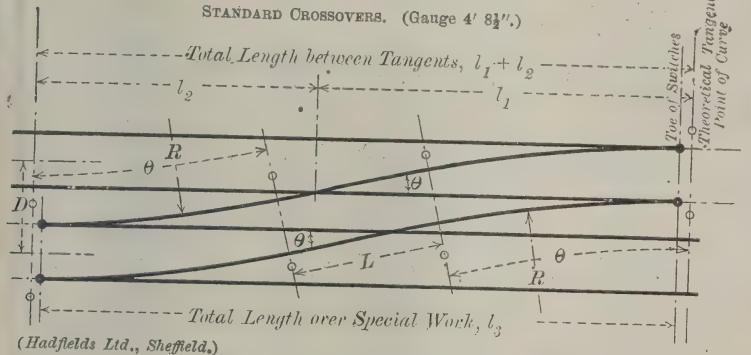STANDARD CROSSOVERS. (Gauge 4′ 8½″.)



(*Hadfields Ltd., Sheffield.*)

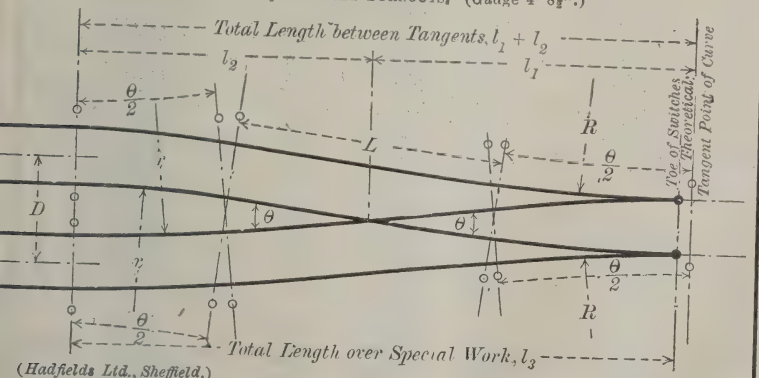STANDARD EQUILATERAL TURNOUTS. (Gauge 4′ 8½″.)



(*Hadfields Ltd., Sheffield.*)

STANDARD CROSSOVERS. (Gauge 4′ 8½″.)

Radius of Switches.	Angle of Crossing.	Lead of Crossing in Feet.	Distance between Centres of Tracks.	Lead of Plain End.	Total Length over Special Work.	Variation in Inches of l_2 and l_3 for each Inch in Width D.	Length of Straight through Crossing.	Variation in Inches of L for each Inch in Width D.
R	$6°$	l_1	D	l_2	l_3		L	
ft. ins.			ft. ins.					
	1 in 4		9 0	29·3589	60·9377		10·4716	
100 0		31·5788	9 6	31·3110	62·8898	3·9042	12·4867	4·0302
	14° 22′		10 0	33·2631	64·8419		14·5018	
			8 0	25·7149	58·2086		13·3008	
	1 in 4½		8 6	27·9216	60·4153		15·5634	
100 0		32·4937	9 0	30·1283	62·6220	4·4134	17·8261	4·5253
	12° 46′		9 6	32·3350	64·8287		20·0887	
			10 0	34·5417	67·0354		22·3514	
			8 0	26·2581	59·9628		19·6013	
	1 in 5		8 6	28·7194	62·4241		22·1128	
100 0		33·7047	9 0	31·1806	64·8853	4·9225	24·6243	5·0230
	11° 29′		9 6	33·6419	67·3466		27·1358	
			10 0	36·1031	69·8078		29·6473	
			8 0	27·0066	62·1362		25·4866	
	1 in 5½		8 6	29·7220	64·8516		28·2477	
100 0		35·1296	9 0	32·4374	67·5670	5·4308	31·0087	5·5221
	10° 26′		9 6	35·1528	70·2824		33·7698	
			10 0	37·8682	72·9978		36·5308	
			8 0	27·8988	64·5967		31·0063	
	1 in 6		8 6	30·8655	67·5634		34·0148	
100 0		36·6979	9 0	33·8321	70·5300	5·9333	37·0233	6·0170
	9° 34′		9 6	36·7988	73·4967		40·0318	
			10 0	39·7654	76·4633		43·0403	
	1 in 4½		9 3	36·8255	72·9128		7·7700	
150 0		38·0873	9 6	37·9289	74·0162	4·4134	8·9013	4·5253
	12° 46′		10 0	40·1356	76·2229		11·1639	
			8 6	33·7468	70·4789		12·0581	
	1 in 5		9 0	36·2080	72·9401		14·5696	
150 0		38·7321	9 6	38·6693	75·4014	4·9225	17·0811	5·0230
	11° 29′		10 0	41·1305	77·8626		19·5926	
			8 0	31·5715	69·2661		16·3566	
	1 in 5½		8 6	34·2869	71·9815		19·1177	
150 0		39·6946	9 0	37·0023	74·6969	5·4308	21·8787	5·5221
	10° 26′		9 6	39·7177	77·4123		24·6398	
			10 0	42·4331	80·1277		27·4008	
			8 0	32·0827	70·9646		22·6384	
	1 in 6		8 6	35·0494	73·9313		25·6469	
150 0		40·8819	9 0	38·0160	76·8979	5·9333	28·6554	6·0170
	9° 34′		9 6	40·9827	79·8646		31·6639	
			10 0	43·9493	82·8312		34·6724	
			8 0	32·7860	73·0682		28·7037	
	1 in 6½		8 6	36·0096	76·2918		31·9659	
150 0		42·2822	9 0	39·2332	79·5154	6·4472	35·2280	6·5243
	8° 49′		9 6	42·4568	82·7390		38·4902	
			10 0	45·6804	85·9626		41·7523	

STANDARD EQUILATERAL TURNOUTS. (Gauge 4′ 8½″.)

Radius of Switches.	Angle of Crossing	Lead of Crossing in ft.	Radius of Plain End.	Distance between Centres of Tracks.	Lead of Plain End.	Total Length over Special Work.	Variation in Inches of l_2 and l_3 for each Inch in Width D.	Length of Straight through Crossing.	Variation in Inches of L for each Inch in Width D.
R	$\theta°$	l_1	r	D	l_2	l_3		L	
200′ 0″	1 in 5 11° 29′	33·6794	200′ 0″	8′ 0″ 8′ 6″ 9′ 0″ 9′ 6″ 10′ 0″	26·3977 28·8841 31·3705 33·8569 36·3433	60·0771 62·5635 65·0499 67·5363 70·0227	4·9728	19·6877 22·1866 24·6855 27·1844 29·6833	4·9978
200′ 0″	1 in 5½ 10° 26′	35·1107	200′ 0″	8′ 0″ 8′ 6″ 9′ 0″ 9′ 6″ 10′ 0″	27·1373 29·8755 32·6137 35·3519 38·0901	62·2480 64·9862 67·7244 70·4626 73·2008	5·4764	25·5570 28·3066 31·0562 33·8058 36·5554	5·4992
200′ 0″	1 in 6 9° 34′	36·6835	200′ 0″	8′ 0″ 8′ 6″ 9′ 0″ 9′ 6″ 10′ 0″	28·0212 31·0088 33·9964 36·9840 39·9716	64·7047 67·6923 70·6799 73·6675 76·6551	5·9752	31·0653 34·0634 37·0614 40·0595 43·0575	5·9961
200′ 0″	1 in 6½ 8° 49′	38·4165	200′ 0″	8′ 0″ 8′ 6″ 9′ 0″ 9′ 6″ 10′ 0″	29·0462 32·2891 35·5320 38·7749 42·0178	67·4627 70·7056 73·9485 77·1914 80·4343	6·4858	36·4634 39·7159 42·9684 46·2209 49·4734	6·5050
200′ 0″	1 in 7 8° 12′	40·1702	200′ 0″	8′ 0″ 8′ 6″ 9′ 0″ 9′ 6″ 10′ 0″	30·1190 33·6067 37·0944 40·5821 44·0698	70·2892 73·7769 77·2646 80·7523 84·2400	6·9754	41·4598 44·9564 48·4530 51·9496 55·4462	6·9932
200′ 0″	1 in 7½ 7° 39′	42·0474	200′ 0″	8′ 0″ 8′ 6″ 9′ 0″ 9′ 6″ 10′ 0″	31·2946 35·0339 38·7732 42·5125 46·2518	73·3420 77·0813 80·8206 84·5599 88·2992	7·4786	46·4481 50·1957 53·9433 57·6909 61·4385	7·4952
200′ 0″	1 in 8 7° 10′	43·9968	200′ 0″	8′ 0″ 8′ 6″ 9′ 0″ 9′ 6″ 10′ 0″	32·5373 36·5295 40·5217 44·5139 48·5061	76·5341 80·5263 84·5185 88·5107 92·5029	7·9844	51·3404 55·3404 59·3404 63·3404 67·3404	8·0000
300′ 0″	1 in 6 9° 34′	40·8602	300′ 0″	8′ 0″ 8′ 6″ 9′ 0″ 9′ 6″ 10′ 0″	32·1978 35·1854 38·1730 41·1606 44·1482	72·0580 75·0456 78·0332 81·0208 84·0084	5·9752	22·7120 25·7101 28·7081 31·7062 34·7042	5·9961
300′ 0″	1 in 6½ 8° 49′	42·2654	300′ 0″	8′ 0″ 8′ 6″ 9′ 0″ 9′ 6″ 10′ 0″	32·8951 36·1380 39·3809 42·6238 45·8667	74·1605 77·4034 80·6463 83·8892 87·1321	6·4858	28·7656 32·0181 35·2706 38·5231 41·7756	6·5050
300′ 0″	1 in 7 8° 12′	43·7497	300′ 0″	8′ 0″ 8′ 6″ 9′ 0″ 9′ 6″ 10′ 0″	33·6985 37·1862 40·6739 44·1616 47·6493	76·4482 79·9359 83·4236 86·9113 90·3990	6·9754	34·3008 37·7974 41·2940 44·7906 48·2872	6·9932
300′ 0″	1 in 7½ 7° 39′	45·3866	300′ 0″	8′ 0″ 8′ 6″ 9′ 0″ 9′ 6″ 10′ 0″	34·6338 38·3731 42·1124 45·8517 49·5910	79·0204 82·7597 86·4990 90·2383 93·9776	7·4786	39·7698 43·5174 47·2650 51·0126 54·7602	7·4952
300′ 0″	1 in 8 7° 10′	47·1248	300′ 0″	8′ 0″ 8′ 6″ 9′ 0″ 9′ 6″ 10′ 0″	35·6653 39·6575 43·6497 47·6419 51·6341	81·7901 85·7823 89·7745 93·7667 97·7589	7·9844	45·0843 49·0843 53·0843 57·0843 61·0843	8·0000

Tramway Motor Control.

CONNECTIONS OF MOTORS IN SERIES-PARALLEL, WITH CUT-OUT OF RESISTANCES, ON BRITISH WESTINGHOUSE CO.'S 'T' TYPE TRAMWAY CONTROLLER.

The method now universally used for controlling the motors on an electric tram-car is that known as the series-parallel system. With this system the two motors are first thrown on to the line in series with one another and with a resistance. This resistance is gradually cut out by the operation of the controller until the two motors are left in series without any resistance in the circuit. The motors are then thrown in parallel with a resistance in the circuit, and when this resistance is finally cut out the motors are in full parallel.

Fig. 3 shows the various combinations as the handle of the controller is moved over.

First Point.—Current passes from the trolley through six sections of resistance, through Armature No. 1, and Field No. 1, thence through Armature No. 2, and Field No. 2 to ground.

Second Point.—Two sections of resistance are cut out.

Third Point.—Two more sections of resistance are cut out.

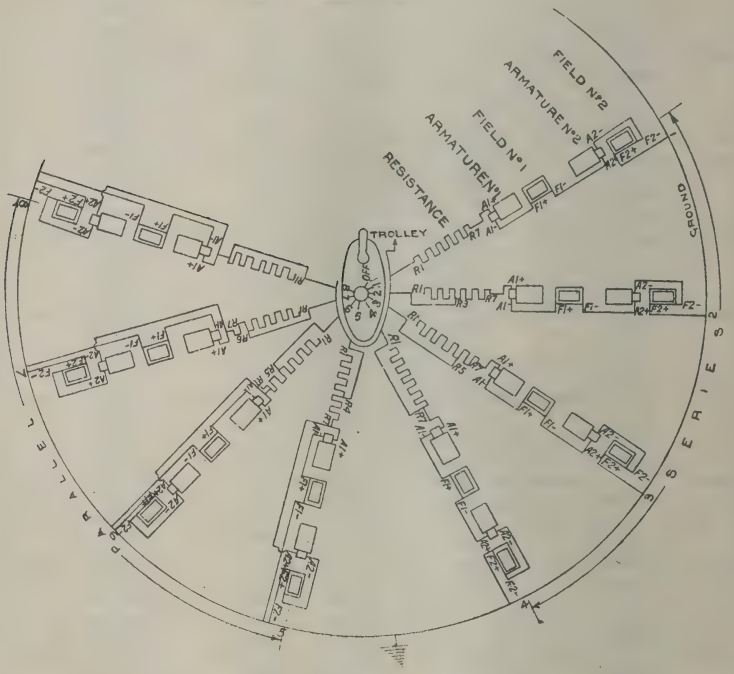


FIG. 3.

Fourth Point.—Two more sections of resistance cut out. The motors are now in full series on the line with no resistance in circuit.

Fifth Point.—Current passes from the line through three sections of resistance and thence to ground through the two motors in parallel. The armature and field of each motor remain of course permanently in series with one another on all combinations of the controller.

Sixth Point.—One of the sections of resistance is cut out.

Seventh Point.—Another of the sections of resistance is cut out.

Eighth Point.—The remaining section of resistance is cut out, leaving the two motors in full parallel on the line with no resistance in circuit.

ELECTRIC EQUIPMENT OF TRAMWAYS.

Sectioning.

Trolley lines must be divided up into sections not exceeding half a mile in length by means of section insulators. The usual method of feeding the separate sections is to bring the supply cables to a small switch-board fixed in a cast-iron box near the poles carrying the section insulators. The supply cable is connected through a switch to a bus bar from which the four leads to the trolley lines are taken. Another method of feeding is to have a small section pillar in the middle of each section, into which the feeder is brought, and thence to feeder cars on the trolley wire. On the poles carrying the section insulators small iron boxes are fixed, carrying two single-pole switches connected to the section insulators. These switches are normally in the off position, so that in the event of a breakdown in the trolley line it is only necessary to go to one box in the centre of the section instead of two half a mile apart. In the event of failure on a cable, the section switches can be closed and the line run on the trolley wire alone.

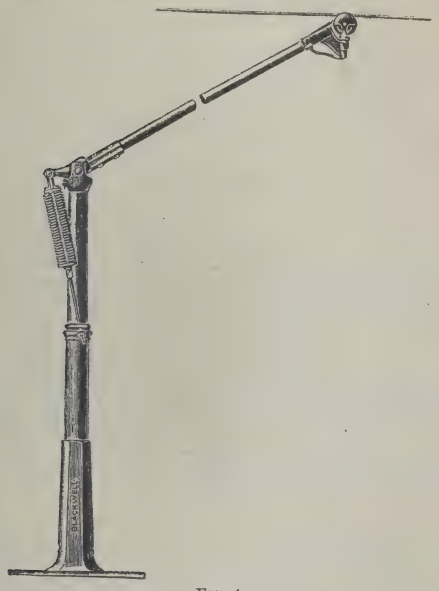


FIG. 4.

All large and complicated junctions are generally isolated by means of section insulators on each line, placed as near the junction as possible, the junction being fed separately. This enables such a section to be isolated by the pulling out of one switch, and repairs can be made quickly and without shutting down the service.

Section boxes should be placed as close as possible to the poles up which the side-feed cables are carried. The simplest method of carrying the side-feeds from the box to the pole consists of a short piece of pipe passing from the section-box to the inside of the pole and held by lock-nuts to the section box. This method enables the cables to be easily withdrawn without disturbing the pavement, and also gets over the danger of the cables lying in water at the foot of the pole, as is frequently the case where they are carried underground.

The side-feed cables generally consist of rubber-insulated flexible-stranded cables, 2,500 megohm grade, and are protected by means of wooden brushes where they enter and leave the poles. The four cables should be tightly taped along their whole length to the span or bracket arm which carries them with 'P. & B.' tape or other weatherproof material. This gives them a neat appearance, and greatly increases the life of the cables. Paper-lead cables should on no account be used for side-feeds, as the lead frequently causes trouble. In some towns bare wires

are used instead of rubber-covered cables, but the arrangement has an untidy appearance and possesses no advantages.

The system most in use at the present is known as the single-trolley system, the current being collected from the overhead wires and returned through the rails. In some few cases, where the earth-return current is likely to affect delicate scientific instruments, two overhead wires are carried over each track, one being the feeder and the other the return. This system, however, involves complications at junctions owing to the necessity of extra insulation between the feed and return wires, and the large number of wires required.

Trolleys.

Fig. 4 shows a Blackwell trolley with outside springs. This is the most simple form of trolley, as all springs are easily examined and adjusted. The cable is carried down the inside of the trolley arm to the bottom of the standard. The connection to the car leads is made by means

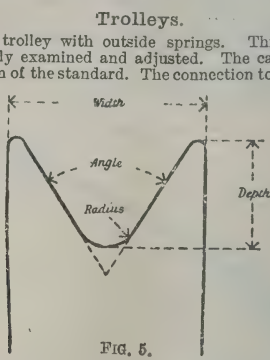


FIG. 5.

of revolving rings or fixed-ring collector and a revolving brush, which allows the arm to make a complete revolution. In the Blackwell trolley with inside springs the springs are entirely enclosed, and are easily adjusted by means of one tension rod. This type has the advantage of taking up less room than the outside spring type.

THE TROLLEY WHEEL.

Trolley wheels should be of a good quality metal, but not too hard, as a worn wheel can be more easily replaced than a worn wire. Some trolley lines have been ruined by the manager, or other person responsible for the trolleys, endeavouring to get a high mileage out of the wheels.

The trolley wheel is usually about 4 ins. over all in diameter, of gun-metal or other copper alloy, and is fitted with a bush filled with some graphitic compound. The following are the dimensions recommended by the British Engineering Standards Association (No. 23—1905) as the section of the standard trolley wheel grooves (fig. 5): Width in inches $= 1\frac{1}{8}$; depth in inches $= \frac{3}{4}$; radius in inches $= \frac{7}{32}$; angle in degrees $= 65°$.

Overhead Construction.

The types generally in use are span, single-side bracket, double-side bracket, and centre pole. The span system is the best from the line point of view, as it allows the greatest flexibility, and also allows the wire to be placed centrally over each track, thus ensuring an even wear on the wire and a smaller tension on the trolleys. It has, however, the disadvantage of requiring standards




FIG. 6.

on both sides of the streets; and in many cases this is impossible owing to telegraph lines or other causes. Double bracket arms are used in some cases where the lines are laid close to the kerb on both sides and where span wires across the street would be of excessive length.

The single-side bracket is the form of construction most generally in use where economy is of importance and in cases where there are difficulties in obtaining room for structures on both sides of streets. Side brackets up to 22 ft. long have been used in some instances, but such long arms should only be used in very exceptional cases. The Board of Trade Memorandum (see page 689) limits the length of the arms to 16 ft. maximum. Where bracket arms are used, the trolley wire should be suspended by means of flexible suspensions, as in fig. 6. These

consist of a short length of stranded-steel wire strained between two suitable malleable cast-iron or wrought-iron brackets bolted to the bracket arm. This length of wire should not be strained too tight, as it then becomes a practically rigid suspension; neither should it be left sufficiently slack for there to be any danger of the line being lifted by a trolley so that the insulator casting comes in contact with the bracket, and so cuts out the second insulation.

Trolley Wire Fittings.

The standard practice is to use double insulation in all cases on trolley lines, the usual method being an insulated bolt fitted into the hangers, the second insulator being either a Globe Insulator or Brooklyn Strain at each end of the spans. All spans should be fitted either with one or two Brooklyn Strains in order to provide adjustment of the span wires. In some instances porcelain or earthenware spool insulators are used instead of Globe Strains; but as the saving in cost is very slight and there is a greater risk of breakage, it is not regarded as good practice. The most usual types of insulators are the straight line hanger and the double and the single pull-off for use on curves. The metal portion of the insulators is either of malleable cast iron or gunmetal, the latter being more expensive in first cost but cheaper to maintain, as it does not require painting. In the Blackwell type of section insulator it is unnecessary to anchor the trolley wire over the top of the insulator.

The usual method of attaching the trolley wires to the suspension insulator is by sweating them into gunmetal ears. Where sweating is adopted the ears should be accurately milled out to take the wire, and the lips of the ears which clip round the wire should be carefully hammered over before soldering, and the ears dressed off to a feather edge after soldering, great care being taken not to notch the wire where it leaves the ear. In all cases it is absolutely essential that the wire should be held in a strong soldering clamp during the whole process of soldering until the ear is cooled. Unfortunately this practice is insisted on only in cases where the work is carried out by experienced contractors; and in many cases where corporations do their own work the sweating clamp is considered unnecessary, with the result that breakages of the wire at ears frequently occur. The sweating of the ears naturally causes the wire to be annealed, and this also is a cause of breakages.

The most satisfactory arrangement is to have the ears carefully hammered along the wire and the ends dressed off and left unsoldered. For some reason, however, this method is seldom specified, though not infrequently it is adopted in actual construction. In many cases mechanical bars are used. These are made in two halves, bolted together, and grip the trolley wire by means of a V-shaped groove drawn in the wire slightly above the centre line. This method facilitates erection, avoids softening the wire by sweating, and gives a straighter path to the trolley at the ears. It has, however, the disadvantage that the wire has to be annealed in order that the groove may be drawn into it, and the breaking strain of a grooved wire is less than that of a circular wire; there is also a tendency for the groove to turn over between the points of support, causing the wheel to run badly and frequently to leave the wire on curves. Guards should be fixed at all frogs and on both sides of all crossings to prevent the trolleys jamming in the angles, as, in addition to their being a great safeguard, they help to preserve the wire, as the wear is taken up by the mechanical ears which support the roller bars, and these are easily renewable.

Poles.

Poles are usually 31 ft. long, and are planted 6 ft. in the ground, sufficient rake being allowed in erection so that the pole stands nearly vertical with a slight backward rake when the span and trolley wires are on. The amount of rake for a 36-ft. road in good ground should be about 6 ins., but the actual rake required varies with every class of ground, and can only be successfully estimated by experienced men. The holes should have a sufficient diameter to allow of six inches of concrete round the pole in good ground; this must be increased in bad ground or at places where additional loads are imposed due to bridles, extra long spans, etc. The poles should be planted on circular discs of concrete, or on flagstones or cast-iron plates dropped into the holes to prevent the poles cutting into the ground during erection. The holes should be filled in with 6 to 1 concrete, well rammed. In order to prevent corrosion, all poles should be coated inside and for a distance of 8 ft. from butt outside with hot tar or Angus Smith composition.

In the specification for tramway poles, page 691, the light pole is suitable either for short side brackets or centre pole work, the medium pole for long brackets or span construction, and the heavy pole for anchors and pull-off poles. Three-section poles are generally used, as they are cheaper and more reliable than taper poles. Owing to the irregularity of the taper, the fitting of brackets, pole straps, etc., is extremely difficult with taper poles, and their appearance when erected hardly differs from the three-section pole.

Trolley Wire.

Trolley wire is usually 0 (·324 in.), 00 (·348 in.), or 000 (·372 in.) S.W.G., of hard drawn copper; conductivity should be 98 per cent. of pure copper; it should bear an elongation of 1½ per cent. in 10 inches, a breaking strain of 25 tons per square inch, and 20 twists in a length of 12 inches. The lowest point of the wire should not be less than 17 feet from the road surface.

The Engineering Standards Association recommends that the tensile breaking strength should be not less than 24 tons per square inch, up to No. 00 S.W.G., and not less than 22 tons above that gauge.

If L = distance in feet from pole to pole; l = actual length in feet of one span of trolley wire; d = dip in feet; T = tension in lbs. in trolley wire at point of support; w = weight in lbs. per foot of wire; then

$$d = \frac{L^2 w}{8T}; \quad T = \frac{L^2 w}{8d}; \quad l = L + \frac{8d^2}{3L}; \quad d = \sqrt{\frac{3Ll - 3L^2}{8}}.$$

If ϵ = expansion coefficient per F° = ·00001; c° = change of temperature; then $l \pm c^\circ \epsilon$ gives the new length on change of temperature = c°, from which the new dip d may then be calculated, or the tension T for any dip. In these formulæ the effect of wind pressure is neglected.

Span Wire.

The steel wire rope to form spans for carrying trolley wire is usually formed of a galvanised strand of 7 No. 12 S.W.G. or 7 No. 15's. The 7/12 is usually specified to bear a breaking strain of about 4,600 to 5,000 lbs. When the 7/15 wire is used it is of much harder material, and weighs 225 lbs. per 1,000 yards. The only objection to the small wire of high tenacity is the difficulty of forming the eyes over the thimbles and nozzling the ends.

Guard Wire.

Guard wire when single is No. 8 S.W.G. steel, and weighs 215 lbs. per 1,000 yards, but it is often of stranded steel. Guard wire brackets in their plainest form are T's of ¾ in. iron pipe clipped on bracket arms. In span systems guard wire is carried by special guard wire spans.

Strength and Conductivity of Wires.

Material.	Conductivity.	Breaking strain, Lbs. per Sq. In.
Commercial copper	98–99	33,000
Hard drawn „	96–97	60,000–65,000
(1) Silicon bronze	97	63,200
(2) „ „	80	76,000
(3) „ „	45	110,000
Phosphor „	26	101.000
Annealed iron	14	55,000
High carbon steel	10–12	120,000–130,000

Rail Bonding.

Except in those comparatively rare cases where a double trolley wire is employed, the rails are made use of as return conductor, and means have to be taken to connect adjacent rails so as to provide an unbroken electrical conductor. To effect this object the rails are bonded with copper, various types of bonds being employed.

The 'Chicago' Bond.

Fig. 9 shows the general design of this bond, which consists of a copper rod having tubular or thimble-shaped terminals bent at right angles to the rod, the whole being composed of one solid piece of copper. The terminals are inserted into holes in the web of the rail, and the slit in the end of the terminal is spread or clinched over on the rail with a hammer and punch. A drift

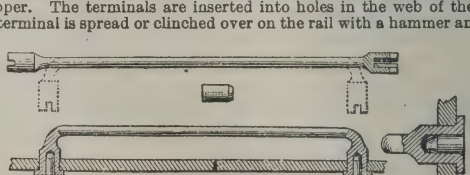


FIG. 9.—Chicago Bond.

pin, larger in diameter than the opening in the terminal by about one-sixteenth of an inch, is then driven in. This permanently expands the terminal and wedges it into contact with the surface of the hole in the web of the rail. The usual length of bond is 30 ins. The depth of the hole in the terminal in all sizes of bond is 1 inch. The size of conductor used depends upon the weight of rail and the current to be carried.

TABLE SHOWING STANDARD DIMENSIONS OF CHICAGO RAIL BONDS.

Size of Wire, B. & S. Gauge.	Diameter of Hole in Rail into which Terminal of Bond fits.	Diameter of Hole in Terminal.	Sectional Area of Rail Bond.	Diameter of Pin.
	Ins.	Ins.	Sq. Ins.	Ins.
0000	$\frac{7}{8}$	$\frac{7}{16}$	·166	$\frac{1}{2}$
000	$\frac{3}{4}$	$\frac{3}{8}$	·132	$\frac{7}{16}$
00	$\frac{5}{8}$	$\frac{5}{16}$	·104	$\frac{3}{8}$
0	$\frac{1}{2}$	$\frac{1}{4}$	·083	$\frac{5}{16}$

The 'Crown' Bond.



FIG. 10.

This is a development of the 'Chicago' bond, the conductors being stranded to afford the flexibility necessary for expansion in a conductor of considerable cross-section dimensions. Fig. 10 shows two of the many different designs in which this bond is made. The terminals have the same dimensions as those in the corresponding 'Chicago' bond.

The 'Neptune' Rail Bond.

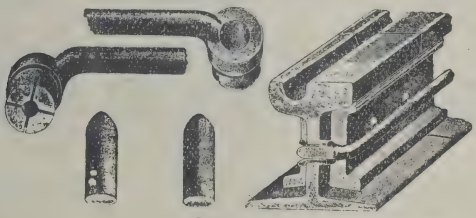


FIG. 11.

Another form of bond, the 'Neptune,' fig. 11, is similar to the 'Chicago,' but the drift pin is driven in the same direction as the bond is inserted, thus safeguarding the bond against being driven out.

The 'Columbia' Rail Bond.




FIG. 12.

A feature in this bond (fig. 12) is the few parts of which it consists. When installed, owing to the pressure exerted between the head and the thimble, and also the fact that they are of the same kind of metal, the two become one, both electrically and mechanically. It therefore has all the advantages which may be claimed for a one-piece bond, and at the same time can be satisfactorily installed, as no riveted bond can be. The contact of the rail and bond is made by a wedge expanding the thimble against the hole in the rail. By using a press, exactly the right pressure is exerted. One blow of a hammer too many or too few frequently spoils contact. As the bond is wedged both ways it cannot get loose, as, owing to the fact of its being pressed in, it is sure to make a perfect contact, and cannot be so over-stretched by hammering as to be ready to fall out at the end of a few weeks. It is essential that the hole in the rail should be clean, and the copper bright also. Bonds ought to be inserted at once after the rails are drilled, no time being allowed for rusting to commence.

Welded Bonds.

The best of all methods of attaching bonds to rails is by electric welding. On this system short bonds can be used, welded into the head or base of the rails outside the fish-plates, or to the webs inside them; the cost of the bond and its attachment is small, and the high conductance of the joint is permanently ensured.

Rail Welding.

Tramway rails are united into continuous lengths by welding. There are two systems in common use for welding rails—the Falk cast weld and the Thermit system. The first consists in casting round the cleaned ends of the two rails a mass of cast iron from a portable cupola. Being buried up to their top table, welded rails are held against contraction from cold, and the full stress does not come upon the weld. Expansion in hot seasons is impossible, and the rails are held against lateral buckling by the support of the paving.

Acetylene Welding.

Acetylene welding by the D.A. system (*The Dissolved Acetylene Co., Ltd.*, now trading as *Allen-Liversidge Ltd.*) has been made considerable use of. The method consists essentially in reinforcing the joints by means of a pressed steel shoe placed on the flange of the rails at the joint and welded to the same so as to constitute a hollow beam which increases the moment of inertia about the joint, and correspondingly diminishes the bending caused by the passage of rolling stock. Many joints of this type have been fitted in France and Algiers and in South America. Experiments in England have been made by various authorities and are now undergoing practical tests.

Thermit Welding.

In Thermit welding a mould is fitted round the rails at the joint, and into it is tapped molten metal from a conical crucible, which is first filled with a mixture of powdered aluminium and iron oxide. The two are intimately mixed, and heated at a point by a special ignition powder. At the temperature produced by igniting this powder, the aluminium reacts very energetically with the oxygen in the iron oxide. The reaction spreads rapidly throughout the mass in the crucible, and produces a quantity of pure superheated liquid metal, covered with a slag of alumina. The temperature set up by the reaction has been ascertained to be about 5,400° Fahr. The crucible is a lined sheet-iron cone. It is suspended over the joint to be welded, and when the reaction is complete it is tapped, the metal running into the mould, followed by the superheated liquid slag, which covers the head of the rail, and raises it to a welding temperature. The rails are then drawn together by suitable clamps, with the result that the base and web of the rails are welded by fusion with the liquid Thermit metal, and the head is butt-welded.

For extra high-carbon rails, the difficulty of butt-welding has been overcome by the use of a special shim, which is inserted between the rail-ends, and ensures a perfect butt-weld at the head.

Electric Welding.

Electric welding has been very widely used, especially in the United States. Two methods have been developed—spot-welding and arc-welding. In the former, bars are placed on both sides of the rails at the joint, and are welded to the webs of the rails by heating them with a very strong current at low pressure, obtained from a transformer, after which the parts are tightly pressed together. These welds are made at several points along the bars. In the latter process, steel plates are welded to the head and foot of the rails with the electric arc, taking the place of fish-plates. In both cases additional bonds are unnecessary, but one is often provided.

(See also 'Welding,' Section XXXVII.)

Cable System.

In English tramway work the cables must be buried. There are four systems in use for buried cables. First, the system of drawing into buried cast-iron pipes. In this system spigot and socket pipes are employed, usually 2 ins. and 2½ ins. inside diameter. A 2-inch pipe 6 ft. long will weigh 48 lbs., a 2½-inch pipe 9 ft. long will weigh 81 lbs. About 2 to 2½ lbs. of lead are required to pour each joint. The pipes terminate in buried brick chambers, in which they are finished with trumpet-shaped ends to facilitate drawing in. On curves the pipes may be slightly curved with advantage, but it is usual to lay the pipes round the curve in an equiangled polygon and to use manhole boxes at such intervals that no length of pipe has a versed sine above 12 ins. Soapstone powder is used as a lubricant. The brick chambers should be built on a good concrete bed with a cement collar joint, and they may advantageously be tarred over outside to render them waterproof. The pipes are bonded across the boxes with a stout iron wire to render them electrically continuous; the boxes have a cast-iron top frame with luted cover. These boxes must be placed at such distances apart that excessive stress is not brought upon the cables when hauling them in. The cables should be gripped by their cores. In place of pipes earthenware conduits are often employed of rectangular or hexagonal shape, in short lengths and cemented at the joints, also terminated in brick chambers. In the solid system the cables are laid in troughs of wood or sheet steel, and melted bitumen is poured over them so as to completely enclose them in a casing of bitumen. Cables are sometimes simply buried in the earth. The best cables are insulated with paper and sheathed in lead about $\frac{1}{16}$ in. to $\frac{1}{8}$ in. thick, squirted on under pressure. In whatever way laid the cables are brought up in their

respective casings through the base of the section box, in which they are connected to the bus bars by switches, so that the cables may be switched out of the circuit in lengths of about half a mile. In the section box are placed the switch terminals of the trolley feeders, which can also be cut out of circuit in half-mile lengths. The trolley feeder cables are carried up inside the next pole, and in the Booth-Dickinson system, brought through the top finial, then down the pole and along the span wire or bracket arm to the trolley wire terminals on the section insulator. Test and telephone wires are usually laid up in one cable and similarly laid in pipes, etc. Sometimes a telephone wire is carried overhead on insulators fixed to the poles. In laying cables and making joints the utmost care is necessary not to expose cable ends to the atmosphere excessively. Tents must be used in wet weather, but it is better to do the work in dry seasons. Cable ends must be well stoppered. It is preferable to have the cable ways under footpaths. The topmost pipe must not be nearer the surface than 18 ins. when laid in the road. Cast-iron pipes or sheet steel conduit must be dipped in Angus Smith compound of a non-brittle variety when cold, and cast-iron pipes should be dipped until they themselves are as hot as the boiling compound. The lead sheathing of cables must be electrically bonded past the manhole boxes and connected to the rails at the nearest point to the power station.

ABSTRACT OF BOARD OF TRADE MEMORANDUM, REGARDING DETAILS OF CONSTRUCTION AND EQUIPMENT FOR TRAMWAYS AND LIGHT RAILWAYS LAID ON PUBLIC ROADS.*

Clearance.

There should be at least 15 ins. between the sides of passing cars and also a similar space between the side of a car and any standing work, such as lamp, telegraph and trolley wire posts in a street.

There should be at least 15 ins. between the side of a car and the kerb, whether on straight or curved roads.

The clearance between the top deck of cars and the underside of bridges should not, if possible, be less than 6 ft. 6 ins. Where this clearance cannot be obtained special precautions in working will be required, but in no case will less than 6 ft. be accepted with uncovered cars.

Posts and Brackets.

Where bracket arms 16 ft. in length will not suffice, it is desirable that span wire construction should be used.

The overhead conductors used in connection with the working of the tramways should be securely attached to supports, the intervals between which should not, except with the approval of the Board of Trade, exceed 120 ft., and the overhead conductors should be in no part at a less height from the surface of the street than 20 ft., except where they pass under bridges.

The overhead conductors should be divided up into sections not exceeding (except with the special approval of the Board of Trade) one-half of a mile in length, between every two of which should be inserted an emergency switch so enclosed as to be inaccessible to pedestrians.

Poles supporting gas lamp brackets should be efficiently bonded to the rails.

Permanent Way.

The weight of rails should not be less than 90 lbs. per yard, 100 lbs. being preferred.

The groove of the rail should not exceed 1⅛ in. in width, but a groove not exceeding 1¼ in. will be accepted on curves of less than 150 ft. radius.

Cars.

Of existing types of lifeguard, the 'trigger' is the pattern which is preferred. The hanging gate should be as close to the ground as possible, and there should be at least 3 ft. between it and the front of the guard. Both the guard and the gate should be at least as wide as the outside of the frame of the truck. The tray of the guard should be provided with a spring so as to hold the front edge down to the surface of the roadway when the tray is dropped.

All railings should be connected with earth.

All electrical conductors fixed upon the cars in connection with the trolley wheel should be formed of flexible cables protected by indiarubber insulation of the highest quality and additionally protected wherever they are adjacent to any metal so as to avoid risk of the metal becoming charged.

The trolley standard of every double-deck car should be electrically connected to the wheels of the car in such manner as either to prevent the possibility of the standard becoming electrically charged from any defect in the conductors contained within it or in the event of the standard becoming electrically charged to give a distinctive and continuous warning signal to the driver or conductor. The signal may be a red lamp bridged with a suitable fuse or (preferably) an audible signal. The signal device should be tested at least once a week.

In the Board of Trade Memorandum dealing with guard wires on electric tramways the following regulations are laid down :—

Each guard wire must be well earthed at one point at least, and at intervals of not more than five spans. The resistance to earth must be such that a short circuit between a guard wire and a trolley wire will open the circuit breaker.

The earth connection should be made by connecting the support to the rails by means of a copper bond. When first erected, the resistance to earth of the guard wires should be tested, and periodical tests should be made to prove that the earth connection is efficient.

* The functions of the Board of Trade are now exercised by the Ministry of Transport.

Guard wires should be, in general, of galvanised steel, but in manufacturing districts in which such wires are liable to corrosion bronze or hard drawn copper wires should be used.

The gauge of the guard wire must be such that it will carry, without fusing, a current 50 per cent. greater than that required to open the circuit breaker, and the guard wire must be maintained in such a manner that it will at all times meet these requirements.

The supports for the guard wires should be rigid and of sufficient strength for their purpose, and at each support each guard wire must be securely bound in or terminated.

The rise of the trolley boom should be so limited that if the trolley leaves the wire it will not foul the guard wires.

A Summary of the Board of Trade Regulations for Electric Tramways.

The following is a brief summary of the principal regulations affecting electric traction :—

When any rails on which cars run, or any conductors laid between or within 3 feet of such rails, form any part of a return, such part may be uninsulated. All other returns, or part of a return, shall be insulated, unless of such sectional area as will reduce the difference of potential between the ends of the uninsulated portion of the return below 7 volts.

Where any uninsulated conductor laid between or within 3 feet of the rails forms any part of a return, it shall be electrically connected to the rails, at distances apart not exceeding 100 feet, by means of copper strips having a sectional area of at least $\frac{1}{10}$ of a square inch, or by other means of equal conductivity.

All uninsulated returns shall be connected to the negative pole of the generator; the negative terminal of the generator shall be also connected through a current-indicator, mentioned below, to two separate earth connections, which shall be placed not less than 20 yards apart. This clause enacts that the two earth connections may be replaced by making one connection to a water-pipe of not less than 3 inches internal diameter, provided that permission be obtained from the owner of the water-pipe and the person supplying the water.

The earth connections referred to in this regulation shall be constructed, laid, and maintained so as to secure electrical contact with the general mass of earth, and so that an electro-motive force not exceeding 4 volts shall suffice to produce a current of at least 2 amperes from one earth connection to the other through the earth, and a test shall be made at least once in every month to ascertain whether this requirement is complied with.

When the return is partly or entirely uninsulated the company shall, in the construction and maintenance of the tramway, (*a*) so separate the uninsulated return from the general mass of earth and from any pipe in the vicinity, (*b*) so connect together the several lengths of the rails, (*c*) adopt such means for reducing the difference produced by the current between the potential of the uninsulated return at any one point and the potential of the uninsulated return at any other point, and (*d*) so maintain the efficiency of the earth connections specified in the preceding regulations as to fulfil the following conditions, viz. :—

(i.) That the current passing from the earth connections through the indicator to the generator shall not at any time exceed either 2 *amperes per mile of single tramway line or 5 per cent. of the total current output of the station.*

(ii.) That if at any time and at any place a test be made by connecting a galvanometer or other current indicator to the uninsulated return and to any pipe in the vicinity, it shall always be possible to reverse the direction of any current indicated by interposing a battery of three Leclanché cells, connected in series, if the direction of the current is from the return to the pipe, or by interposing one Leclanché cell if the direction of the current is from the pipe to the return.

In order to provide a continuous indication that the condition (i.) is complied with, the company shall place in a conspicuous position a suitable, properly connected, and correctly marked current indicator, and shall keep it connected during the whole time that the line is charged.

The owner of any such pipe may require the company to permit him at reasonable times and intervals to ascertain by test that the conditions specified (ii.) are complied with as regards his pipe.

When the return is partly or entirely uninsulated, *a continuous record shall be kept by the company of the difference of potential during the working of the tramway between the points of the uninsulated return furthest from and nearest to the generating station. If at any time such difference of potential exceeds the limit of 7 volts, the company shall take immediate steps to reduce it below that limit.*

The current density in the rails shall not exceed 9 amperes per square inch of the cross sectional area.

The insulation of the line and of the return when insulated, and of all feeders and other conductors, shall be so maintained that the leakage current shall not exceed one-hundredth of an ampere per mile of tramway. The leakage current shall be ascertained daily before or after the hours of running when the line is fully charged. If at any time it should be found that the leakage current exceeds *one-half* of an ampere per mile of tramway, the leak shall be localised and removed as soon as practicable, and the running of the cars shall be stopped unless the leak is *localized and removed within 24 hours.*

The insulation resistance of all continuously insulated cables used for lines, for insulated

returns, for feeders, or for other purposes, and laid below the surface of the ground, shall not be permitted to fall below the equivalent of 10 megohms for a length of one mile.

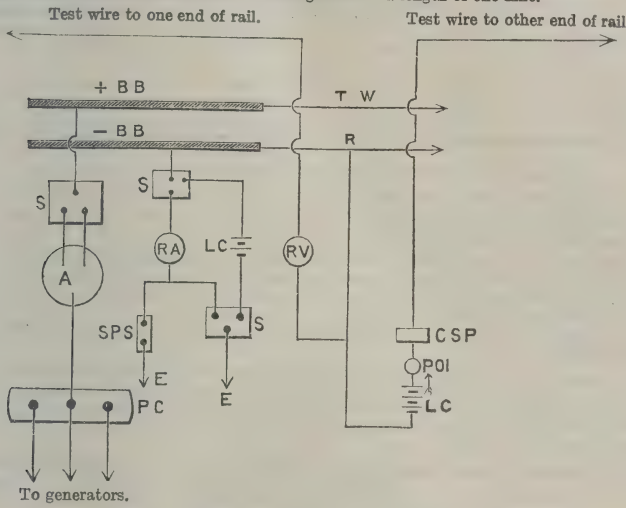


FIG. 13.—Diagram of Board of Trade Switchboard.

A, Ammeter reading $\frac{1}{10}$ – 3 and $\frac{1}{2}$ – 10 as.; B B, Bus bars; R, Return; T W, Trolley wire; S, Two-way switches; R A, Recording Ammeter 2 to 25 as.; R V, Recording voltmeter 2 to 10 v.; L C, Leclanché cells; S P S, S.P. switch; E, Earth; P C, Three-way plug connections; P O I, P.O. indicator; C S P, Contact of sensitised paper.

Specification for Poles.

BRITISH STANDARD SPECIFICATION FOR TUBULAR TRAMWAY POLES.*
(No. 8—1904.) *(Abstract.)*

1. The poles shall be of mild steel free of all defects, and shall be of three classes—light pole, medium pole, and heavy pole.

2. The sectional poles shall be either solid-drawn or lap-welded wrought steel, free of all defects, made up in three sections, swaged together when hot so as to make a perfect joint. The lap-welded seams in the sections shall be set at an angle of 120° to each other. The taper poles shall be of wrought steel, free of all defects, rolled in one length and butt-welded the entire length. The butt-welding shall be carried out at an even temperature without overheating, and no pole shall show any signs of burning at the weld.

3. The overall length of poles of all classes shall be 31 ft.

4. The length of the telescope joint in the sectional poles shall be 18 ins.

5. The length of the sections shall be :—

Top section	8 ft. 6 ins.
Middle section	8 ft. 6 ins.
Bottom section	17 ft.

6. The outside diameters, in inches, of the three classes of both sectional and taper poles shall be :—

SECTIONAL POLES.

Class.	Top.	Middle.	Bottom.
Light	5¼ ins.	6½ ins.	7¼ ins.
Medium	6½ ins.	7½ ins.	8½ ins.
Heavy	7½ ins.	8½ ins.	9½ ins.

* By permission of the British Engineering Standards Association.

TAPER POLES.

Class.	Top.	Outside diameter 9 ft. 6 in. from base.
Light	4⅜ ins.	7½ ins.
Medium	5⅜ ins.	8½ ins.
Heavy	6⅜ ins.	9½ ins.

7. The thickness of metal in any pole shall not be less than ¼ in.

8. The completed poles shall be straight and true over their entire length to within ¼ in.

9. The section of any pole shall be as nearly circular as possible, not varying in diameter more than $\frac{1}{16}$ in. from the adopted standard.

10. Five per cent. of each class of sectional pole shall be subjected to the following drop test :—

The pole shall be dropped vertically, butt downwards, three times in succession, from a height of 6 ft., on to a hard wood block 6 ins. thick laid on a concrete foundation, without showing any signs of telescoping or loosening of joints.

11. Five per cent. of each class of both sectional and taper pole shall be subjected to the following bending tests :—

The pole shall, in each case, be rigidly supported for 6 ft. from the butt, and loaded, as a cantilever, 18 ins. from the top, the load being applied at right angles to the axis of the pole, which shall be fixed horizontally. Upon the application of the following loads in lbs., the temporary deflection and permanent set, measured at the point of application of the load, shall not exceed the figures stated in the tables.

Class of Pole.	Load in Lbs. for Temporary Deflection not exceeding 6 ins.	Load in Lbs. for Permanent Set not exceeding ½ in.
Light	750 lbs.	1,000 lbs.
Medium	1,250 lbs.	1,750 lbs.
Heavy	2,000 lbs.	2,500 lbs.

12. In the event of any pole of the above-mentioned 5 per cent. not fulfilling the test requirements, a further 5 per cent. shall be subjected to the tests enumerated above. Should any further failure occur, the whole parcel from which the poles have been selected shall be liable to rejection

13. The maker, at his own expense, and to the satisfaction of the engineer, shall provide all the necessary testing apparatus at his own works for carrying out the above-mentioned tests.

TABLE OF STANDARD TUBULAR POLES.

Total Length of Pole.	Length and Outside Diameter of three component Pipes.			Total Weight.	Free from Permanent Set at
Feet.	Feet. Inches.	Feet. Inches.	Feet. Inches.	Lbs.	Lbs.
29	16½ × 10	8 × 8	7½ × 7	1,503	4,500
30	17 × 10	8½ × 8	7½ × 7	1,552	4,400
31	17 × 10	9½ × 8	7½ × 7	1,593	4,200
28½	16 × 8	8 × 7	7¼ × 6	1,193	3,400
29½	16 × 8	9 × 7	7¼ × 6	1,224	3,200
30	17 × 8	8½ × 7	7¼ × 6	1,259	3,150
28½	16 × 7	8 × 6	7½ × 5	769	2,000
29½	16 × 7	9 × 6	7¼ × 5	991	2,000
30	17 × 7	8½ × 6	7 × 5	998	1,800
28½	16 × 6	8 × 5	7½ × 4	689	1,200
29½	16 × 6	9 × 5	7½ × 4	613	1,000

Working Results.

WORKING RESULTS OF SIXTY-FOUR TRAMWAYS UNDERTAKINGS IN THE U.K. (*Pre-war*).

Particulars.	Lowest.	Highest.	Average.
Capital expenses per mile single track (trolley)	£5,800	£23,900	£11,000 to £14,000
Total revenue per car mile	6·06*d.*	13·23*d.*	9*d.* to 11*d.*
Total working expenses per car mile	4·76*d.*	8·65*d.*	6*d.* to 7*d.*
Total working expenses exclusive of power	3·28*d.*	6·10*d.*	4*d.* to 5*d.*
Total working expenses per passenger	0·49*d.*	1·19*d.*	0·6*d.* to 0·8*d.*
Total working expenses in percentage of total revenue	48	94	60 to 70
Net revenue in percentage of capital expenditure	0·8	15·4	4 to 8
Revenue per car per annum	£855	£2,319	£1,200 to £1,700
Revenue per mile of single track	£778	£9,179	£1,500 to £3,000
Average fare per passenger	0·69*d.*	1·47*d.*	1·00*d.* to 1·25*d.*
Average fare per mile ride	0·35*d.*	1·07*d.*	0·7*d.* to 0·9*d.*
Passengers per car mile	5·4	13·4	7 to 12
Passengers per car per annum in thousands	194	451	250 to 350
Journeys per head of population	30	211	100 to 150
Miles per day per car	62	130	80 to 110
Units per car mile, four-wheel cars	0·98	2·09	1·0 to 1·8
Units per car mile, all bogie cars	1·60	2·10	—
Units per car mile, roughly one-half four-wheel and one-half bogie	1·43	2·24	1·5 to 1·9
Cost of energy per unit	0·38*d.*	2·13*d.*	1·2*d.* to 1·6*d.*
Average speed miles per hour	6·0	8·7	7 to 8

Electric Brakes.

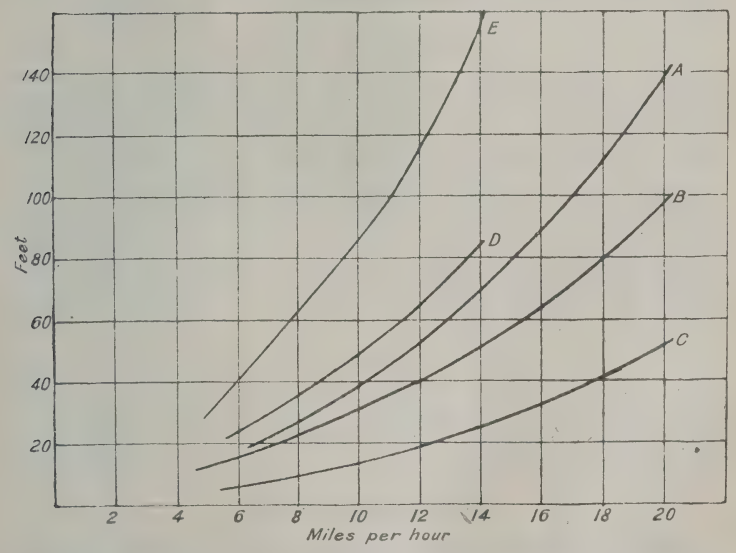


FIG. 14.

Fig. 14 shows the results obtained with tests on tramway cars fitted with various types

of electric brakes. Tests A, B, and C were made under the supervision of the Special Committee on Brakes of the Tramways and Light Railways Association, tests D and E were made by Mr. A. L. C. Fell. Tests A, B and C were made on a four-wheel car weighing 11 tons 9 cwt. loaded. Tests D and E were made on a bogie car weighing 13 tons with 6 persons. In every case the tests were made on a practically level track; in tests A, B, C, and D the rails were dry, in test E the rails were greasy. Tests A and E were made with a rheostatic brake, in tests B, C, and D the brake used was the Westinghouse electro-magnetic track brake, the track shoes being coupled to and acting with the ordinary brake shoes on the wheels. The results of each test are shown by a curve giving the speed in miles per hour at which the brakes were applied and the subsequent travel of the car in feet.

A comparison of curves D and B gives the relative effect of electro-magnetic track brakes acting under practically similar conditions on a bogie car and a four-wheel car. A comparison of curves A and B shows the behaviour of a four-wheel car under the action of a rheostatic brake and of a track brake in the case of ordinary service stops while curve C shows the effect of a track brake on a four-wheel car in an emergency stop. In all these cases the rails were perfectly clean and dry. Curve E shows what may take place with a heavy car on a flat but greasy rail when controlled only by a rheostatic brake.

Conduit Systems.

In the Conduit system the conductors conveying current to the cars are placed below the surface of the road in a specially constructed conduit. The car carries a plough which passes through a slot in the road and makes connection with the conductors beneath. In some cases, as in London, Washington, Paris and Bordeaux, the slot is placed midway between the two track rails, while in others, as in Berlin and Brussels, the slot is placed at the side and takes the place of the groove in the ordinary grooved tram rail. Some authorities object to the centre-slot on account of the amount of metal exposed in the street, and the consequent increased maintenance of the paving. Others object to the side-slot on account of difficulties connected with the switches, and of the fact that the wheel flanges tend to throw mud and water into the conduits.

Particulars of conduit tramways were given in previous editions of the YEAR-BOOK. Although retained in operation where it has been laid down, and extended when necessary, the conduit system is practically obsolete, and is too costly for adoption under modern conditions.

Railless Electric Traction.

Where the traffic conditions do not justify the construction of an electric tramway, but where electric power is available, railless traction provides an alternative to the motor omnibus. Two overhead conductors are provided, as lead and return, and the vehicles carry trolley poles with under-running trolleys collecting the current from the conductors. These trolleys permit the vehicle to deviate at least 15 ft. from the centre-line on either side, so that they can pass other vehicles; on meeting a similar vehicle moving in the opposite direction the trolleys of one must be removed from the conductors whilst the other passes. Railless tramcars compared with motor omnibuses have higher acceleration, lower working costs, longer life, and greater elasticity as regards the number of passengers carried, while they give a more reliable service and a greater annual mileage, and can climb hills with greater ease. The cost of maintenance is about 1*d.* per car mile (exclusive of tyre renewals, which amount to about 1*d.* also), and the consumption of energy is about 1 k.w.-hr. per car mile. The life of a trolley omnibus is ten to fifteen years, i.e., about double that of a motor omnibus. The vehicle costs about 2,000*l.*, and the overhead construction about 2,700*l.* a mile. The seating capacity of a single-deck car is 28, and the speed 16 miles per hour. Many installations of this class are at work in this country and abroad.

Industrial Electric Trucks.

For moving material about railway stations, factory premises, etc., electric battery trucks have been widely adopted, capable of carrying up to 5,000 lbs. and running at speeds up to 8 miles per hour; the net weight of the trucks is 1,600 to 2,500 lbs., and the mileage per charge 15 to 25 miles. In a railway warehouse 11 tractors and 600 trailers handled 130,000 tons per annum at an average cost of 15·1*d.* per ton. *(R. J. Mitchell.)*

Electric Battery Vehicles.

Electric battery vehicles are displacing horsed vehicles for the collection of refuse in cities, having proved much more economical. At Croydon the cost per ton with electric wagons was 9*s.* 4*d.*, and with horse-drawn wagons 11*s.* 10*d.*, and one of the former collected three times as much daily as one of the latter. The cost has been estimated as follows:—Cost of three 2-ton

electric vehicles, 4,000*l.*; cost of charging plant, 150*l.* The running expenses per annum, for a daily run of 25 miles, would be: Wages of nine men, 1,170*l.*; repairs and maintenance of chassis at 0·5*d.* per mile, 44*l.*; ditto of battery at 0·4*d.* per mile, 35*l.*; energy, 225 units per week at 1½*d.*, 61*l.*; tyres, at 1*d.* per mile per vehicle, 87*l.*; rent of garage, insurance, shoots, etc., 245*l.*; interest and sinking fund at 15 per cent., 622*l.*—total, 2,264*l.* per annum.

A railway company using several different types of electric parcel van finds that the total cost per mile is 4·3*d.*, on a basis of 10,000 miles per annum, with energy at 1*d.* per unit, tyres lasting 18,000 miles, and standing charges reckoned on a life of ten years for Edison batteries and two and a quarter years for lead batteries.

At Glasgow motor traction cost 4*s.* 6½*d.* per ton, horse traction 4*s.* 1½*d.* per ton, and electric traction 3*s.* 5½*d.* per ton.

Suitable speeds for commercial vehicles are as follows:—To carry 1,000 lbs., 12 to 13 miles per hour; 2,000 lbs., 10 to 11; 2 tons, 8 to 9; 4 to 6 tons, 6 to 7 miles per hour. The standard motors are wound for 80 volts for use with the lead battery, and for 60 volts for use with the alkaline battery. A 3-ton lorry will cover from 35 to 40 miles on one charge, and light passenger vehicles 70 or 80 miles. Comparative tests with horsed and petrol vehicles on parcel delivery rounds show that the electric vehicle effects a considerable saving in time, as well as in cost of energy for propulsion.

American experience shows that, during the first ten years of the life of an electric vehicle, it can be kept in service 280 days out of a possible 300 per year, and, if painting or disablement by serious accident is eliminated, 295 days out of 300. Over 70,000 electric vehicles are in use in the United States.

The "Orwell" Electric Battery Vehicles.

The main advantages of the electric propulsion of the 'Orwell' electric vehicles and the 'Orwell' electric industrial platform trucks are: simplicity of manipulation, efficiency of transmission of power to the wheels, silence, cleanliness, and low running costs. These vehicles are made by *Ransomes, Sims & Jefferies, Ltd.*, Ipswich, and are well suited for suburban and town work, where frequent stops are involved and busy thoroughfares have to be negotiated.

In the vehicles the type of transmission employed is, a drive from the rear wheels by motors bolted to each of the front swivel axles and driving the wheels by helical gears on the armature shafts which mesh with internal helical spur-rings on the wheel hubs, or a drive from the rear wheels by motors bolted to each side of the chassis frame amidships, and driving, through enclosed helical gears, independent countershafts that in turn transmit the power to the rear road wheels by roller chains. In this type of drive the transmission is very simple, owing to the fact that use is made of the electric differential action between the two motors, so that mechanical differential gear can be omitted. Furthermore, cardan and universal joints are dispensed with, and, lastly, a change-speed gear box is not required, the speed being controlled by the use of various electrical connections of the motor armatures and fields. Four speeds in the forward direction and one in the reverse direction are obtained by series-parallel connections of the armatures and by the use of series and shunt windings in various combinations.

The fact that the motors are provided with shunt windings renders it possible to make use of the regenerative action of the shunt type of motor, so that on hills the motors may be run as generators, thus acting as an effective brake to the vehicle, and at the same time recharging the batteries.

The controller effecting the necessary changes in connections of the motors is situated under the driver's seat. It consists of two interlocked drums carrying segments, upon which rest the contact-making fingers. The main drum is operated by a hand lever which can be put into any of the running positions, and the rheostatic drum is operated by a foot pedal and inserts resistance steps, and finally interrupts the current, as the pedal is depressed, the breaking of the current without arcing being achieved by the action of a magnetic blow-out. The interlocking of the drums is such that the hand lever can only be moved from one position to another when the foot pedal is depressed and the current is interrupted, and by this means it is impossible for sparking to occur on the main drum.

The foot pedal is used just as a clutch on a petrol vehicle, and by depressing and releasing it as obstacles present themselves or are removed from the road, the vehicle may be driven for long stretches without the necessity arising for using the change-speed hand lever.

The 'Orwell' vehicles are fitted with powerful hand and foot brakes, and these, together with the electric braking above referred to, provide a braking power sufficient for any emergency.

The range of action of the vehicles depends on the size of battery used and the nature of the roads to be traversed; on an average 25 to 45 miles may be run on one charge of the battery.

The number of units required to charge the battery is 30 to 35 units, so that at a cost of 1½*d.* a unit the battery may be completely charged for about 4*s.*, giving a cost of energy of about 1*d.* a mile.

The supply of current from the battery may be used to run auxiliary motors for tipping

the bodies or for actuating pumps, cranes or any auxiliary apparatus that may be required to add to the general utility of the vehicle.

The 'Orwell' electric industrial platform trucks are manufactured in many types in order to meet the great variety of services to which they can be put. They are intended to replace all types of hand trucks and wheel-barrows, and they have a large field of application in factories, on railway stations, and in all cases in which goods and materials have to be shifted for comparatively short distances in small bulk.

Two main types of 'Orwell' platform trucks are being manufactured, the type B truck with three wheels and the type C truck with four wheels. In the type B truck the battery is suspended on springs amidships and the single motor, fixed by a double-acting spring suspension to the underframe, drives the front wheel through a set of bevel gears working on to a layshaft fitted with a helical pinion engaging with an internal helical spur-ring attached to the wheel.

In the type C truck two of the wheels are used for driving, in a manner similar to that adopted in the front-wheel-driven electric vehicle described above, and the other pair of wheels are small rollers that enable the loading platform to be supported only 11 ins. from the ground, so as to facilitate the loading of heavy materials.

This 'C' type truck can be supplied with large trailing wheels, thereby giving a platform height intermediate between those of the two standard types, and an elevating platform can also be fitted if desired.

In both types two independent brakes are provided. The control is effected by a hand switch giving the direction of motion, and a foot pedal varying the amount of resistance in series with the motors, and thus adjusting the speed. The same pedal, when completely released, cuts off the current from the motors and at the same time applies the brakes.

The range of action is about 15 miles per charge with 3,000-lb. load, and the trucks are capable of ascending gradients of one in seven with this load. The trucks may also be used to drag loaded trailers. The small turning radius of 8 ft. for the type B truck, and 10 ft. for the type C truck, renders their use possible in congested workshops and tortuous passages.

The 'C' type truck can be supplied with four-wheel steering in lieu of two-wheel steering, in which case the turning radius is reduced from 10 ft. to 7 ft. 6 ins.

The cost of running an electric platform truck, including driver's wages, interest and depreciation, and current for charging, is about 200*l.* per annum, and as it is capable of displacing on an average about five workmen with hand barrows, it will be seen that the truck offers considerable economy.

The latest type of 'Orwell' electric production is the Ransomes' Electric Runabout Crane Mossay-Ransome' system, which has been developed to fill the need for an expeditious, efficient, and mobile appliance to load, unload, and move about merchandise in docks, railway clearing-houses, warehouses, works and yards, and to supplement the working of the now familiar 'Orwell' Electric Platform Trucks.

It consists of a crane jib provided with lifting and luffing mechanism mounted on a turntable provided with steering and power road wheels, capable of imparting at will to the whole appliance forward, reverse, and rotary movements.

The 'Orwell' electric vehicles and platform trucks are driven by the 'Exide-Ironclad' type of lead battery, which type has gained a high reputation in U.S.A., as well as in this country. The standard number of cells in each battery is forty. The capacities usually are as follows:—For 20–30 cwt., 40–50 cwt. and 3½-ton vehicles, 193, 226 and 258 ampere-hours respectively, and for industrial platform trucks 129 ampere-hours, at the five-hour rate of discharge.

The positive plates used in the 'Exide-Ironclad' battery are radically different from the flat plates usually employed. Each consists of a number of vertical pencils joined at the top and bottom to horizontal bars. Each pencil contains a core of antimonial lead, which is surrounded by the active material, peroxide of lead, which, in turn, is enclosed by an ebonite tube having a large number of horizontal slits. These slits allow the electrolyte (dilute sulphuric acid) access to the active material.

Each ebonite tube is provided with two vertical ribs projecting on opposite sides at right angles to the face of the plate, which serve not only to stiffen the tubes, but also act as insulating spacers, taking the place of the ribs on the wood separators used in the 'Exide' batteries, and allowing the use of a plain wood diaphragm. The ebonite tubes have a certain amount of elasticity, allowing them to compensate for changes in volume of the active material, due to expansion and contraction during charge and discharge. The cylindrical form of tube is peculiarly well adapted to perform its function, since no amount of expansion or contraction will tend to alter its shape and the internal strains are thus kept uniform. Another advantage is that most of the necessary electrolyte is carried within the confines of the plate itself. The negative plate used with the 'Exide-Ironclad' positive is of standard 'Exide' flat type, but is thicker than is usually employed.

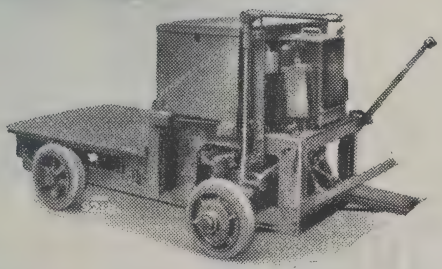
The positive and negative plates are separated from one another by means of veneers of wood. The containers are of ebonite, and the cells being completely sealed in, there is little danger of leakage of the electrolyte. As the containers are not of metal, it is unnecessary to keep them apart or to place any special insulating material between them. The cells are usually made up in lots of twenty, these being fitted in an iron-bound wood tray. The tray is fitted with

RANSOMES, SIMS & JEFFERIES, LTD.

Manufacturers of

'Orwell' Electric Vehicles and Platform Trucks





ORWELL WORKS, IPSWICH,

and at

46 QUEEN VICTORIA ST., LONDON, E.C. 4.

Telegraphic Addresses: 'RANSOMES, IPSWICH'; 'ANGLIA, LONDON.'

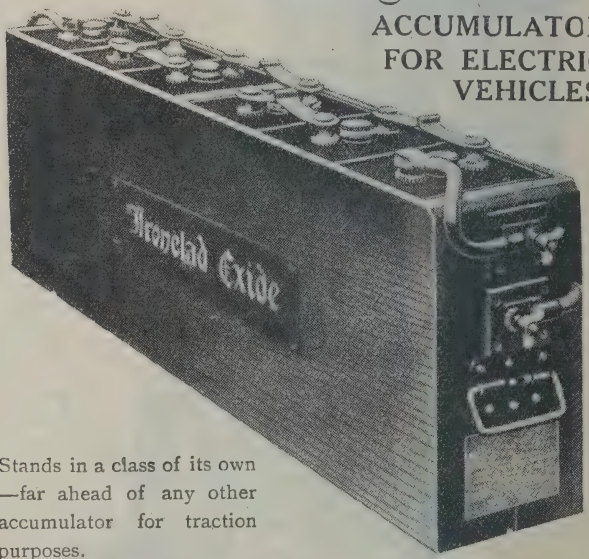
Telephones—IPSWICH : **896**; LONDON: **10817** CENTRAL.

ACCUMULATORS

of every type, for every purpose, for Central Power Stations, Large Works, Private House Lighting, Train Lighting, Motor-Car Starting, Lighting and Ignition.

Over thirty years' experience of Manufacturing Accumulators and Accumulators only, lies at the back of all our productions.

THE "Exide-Ironclad" ACCUMULATOR FOR ELECTRIC VEHICLES.



Stands in a class of its own —far ahead of any other accumulator for traction purposes.

THE Chloride ELECTRICAL STORAGE COMPANY LIMITED.

CLIFTON JUNCTION, MANCHESTER

London Office: 57 VICTORIA STREET, S.W.1.

AGENTS THE WORLD OVER

rollers so that one man can easily withdraw it for the purpose of inspecting and topping-up the cells.

The battery can be charged quickly and at any current rate that is obtainable, provided that the voltage per cell does not exceed 2·3, and the temperature is kept below 110° F. Its watt-hour and ampere-hour efficiencies are high. The internal resistance being very low, heavy currents, such as are called for when the vehicles are negotiating steep gradients, do not cause the voltage to fall very much, and so a good speed is maintained. The cost of charging the battery is low, as the efficiency is high. The capacity of the battery is not appreciably affected by the lowest temperatures experienced in this country. The manufacturers of the battery, the *Chloride Electrical Storage Co. Ltd.*, Clifton Junction, nr. Manchester, give a two-year guarantee with each battery, provided it is operated in accordance with their printed instructions, and subject to certain records being sent to them regularly. Two years must not, however, be taken as the maximum life of the battery; many that have been heavily worked have been in commission over three years and are still giving useful service.

Petrol-Electric Lorries.

In the petrol-electric vehicle the motive power is provided by a petrol engine, but the mechanical gear and clutch are replaced by a very flexible electric transmission. In a recent type of Stevens petrol-electric lorry of 3 tons capacity, the generator driven by the engine gives from 300 amperes at 80 volts to 230 amperes at 110 volts, and in addition to driving the vehicle it can be used to supply power for charging a battery or electric lighting, welding, etc. The electric motor is supplied through a special controller which gives forward and reverse connections with a wide range of speed variation, and when put in the neutral position enables the generator to supply electricity for external use. In the last case the generator can be given any desired characteristic—under, level, or over-compounded. A 3-ton wagon can supply three arc-welding equipments at 60 volts.

STANDING ORDERS OF THE HOUSE OF COMMONS WITH REFERENCE TO TRAMWAY BILLS.

The following are the principal Orders relating directly to tramroads and tramways.

Estimate.

This is the same as in the case of Railways (see page 663).

Plans.

In cases of Bills for laying down a tramway, the plans shall indicate whether it is proposed to lay such tramway along the centre of any street, and if not along the centre, then on which side of, and at what distance from, an imaginary line drawn along the centre of such street; and whether or not, and if so, at what point or points it is proposed to lay such tramway, so that for a distance of 30 feet or upwards a less space than 9 feet 6 inches, or if it is intended to run thereon carriages or trucks adapted for use upon railways a less space than 10 feet 6 inches, shall intervene between the outside of the footpath on each side of the road and the nearest rail of the tramway.

All lengths shall be stated on the plan and section in miles, furlongs, chains, and decimals of a chain. The distances in miles and furlongs from one of the termini of each tramway shall be marked on the plan and section. Each double portion of tramway, whether a passing-place or otherwise, shall be indicated by a double line. The total length of the road upon which each tramway is to be laid shall be stated (*i.e.* the length of route of each tramway).

The length of each double and single portion of such tramway and the total length of such double and single portions respectively shall also be stated.

In the case of double lines (including passing-places), the distance between the centre lines of each line of tramway shall be marked on the plans. This distance must in all cases be sufficient to leave at least 15 inches between the sides of the widest carriages and engines to be used on the tramways when passing one another. The gradients of the road on which each tramway is to be laid shall be marked on the section. Every crossing of a railway, tramway, river, or canal shall be shown, specifying in the case of railways and tramways whether they are crossed over, under, or on the level.

All tidal waters shall be coloured blue.

All places where for a distance of 30 feet and upwards there will be a less space than 9 feet 6 inches between the outside of the footpath on each side of the road and the nearest rail of the tramway shall be indicated by a thick dotted line on the plans on the side or sides of the line of tramway where such narrow places occur, as well as noted on the plans, and the width of the road at those places should also be marked on the plans.

SECTION XIV

ROADS AND STREETS—ADMINISTRATION—MINISTRY OF TRANSPORT—LEGAL POINTS—HIGHWAY STATISTICS—COSTS OF MAINTENANCE—REGULATIONS FOR WHEELS AND LOADS—RATING OF MOTOR-CARS—RESISTANCE TO TRACTION—COUNTRY ROADS—ROAD CRUSTS AND WEARING LAYERS—STREET PAVINGS—SCAVENGING AND WATERING—NAMES OF ROCKS USED FOR ROAD METAL—ROAD BOARD LABORATORY—COSTS DATA

Contributed and revised by Reginald Ryves, Assoc.M.Inst.C.E., M.Cons.E., M.C.I.

Author of '*The King's Highway*; *or the Nature, Purpose, and Development of Roads and Road Systems*'; '*Preliminary Studies in Bridge Design.*')

ROAD-MAKING APPLIANCES.

TAR-MACADAM MIXERS
TAR BOILERS AND SPRAYERS,
TRACTORS & TRAILERS,
TIPPING-WAGONS,
ROAD ROLLERS,

STONE-BREAKERS,
GRANULATORS,
B.R.C. ROAD FABRIC
ALUMINIUM MOTOR SIGNS,
DANGER LAMPS, AND BRUSHES.

'BI-TARCO' FOR GROUTING, AND IMPROVED TAR-MACADAM. GOLD MEDAL 'TARCO' FOR SURFACE SPRAYING.

Ingersoll Rand Air Compressors

QUARRY AND MINE DRILLING,
JACKHAMER BUTTERFLY ROCK DRILLS,
COAL-CUTTERS, DRILL SHARPENERS,
CONTRACTORS PORTABLE ROCK-DRILLING PLANT, DRILL STEELS, CAMERON PUMPS.

The CEMENT GUN, a Universal Mine Tool, makes Mines fireproof and prevents roof falls by shooting on a thin coating of GUNITE.

BLASTING EXPLOSIVES

GELIGNITE, GELATINE DYNAMITE AND BLASTING GELATINE.
COMPRESSED AND BLASTING GUNPOWDER,
ELECTRIC SHOT-FIRING APPLIANCES,
EXPLODERS, FUSES, CABLES, REELS, ETC.
Magazines in all Districts.

FLEMING & COMPANY

31 Robertson Street,

On Admiralty and War Office Lists. **GLASGOW.** Telegrams: 'DYNAMITE.'

Also 167 Strand, London and 6 Fleet Street, Dublin.

SECTION XIV

ROADS AND STREETS—ADMINISTRATION—MINISTRY OF TRANSPORT—LEGAL POINTS—HIGHWAY STATISTICS—COSTS OF MAINTENANCE—REGULATIONS FOR WHEELS AND LOADS—RATING OF MOTOR-CARS—RESISTANCE TO TRACTION—COUNTRY ROADS—ROAD CRUSTS AND WEARING LAYERS—STREET PAVINGS—SCAVENGING AND WATERING—NAMES OF ROCKS USED FOR ROAD METAL—ROAD BOARD LABORATORY—COSTS DATA.

(Contributed and revised by Reginald Ryves, Assoc.M.Inst.C.E., M.Cons.E., M.C.I.)

ROADS AND STREETS.

ADMINISTRATION.

Road administration in the United Kingdom is carried out by individual local authorities, each of which appoints its own road surveyor. The financial arrangements are, however, such as to lead to relations between the council of a county and those of districts in the same administrative county, as regards some proportion of the roads, the extent to which this has occurred depending partly upon the circumstances of the area and partly upon the policy of the councils concerned.

The Road Board.

(Now absorbed in the Roads Department of the Ministry of Transport.)

The chairman of the Road Board is also the director, or chief executive officer of the Board. The secretary and the chief and assistant engineers are permanent officers, and the services of a consulting engineer are retained. The Board is assisted by an Engineering Advisory Committee, in which several county surveyors are included. Ample powers to acquire land for the making of new roads and for road improvements have been conferred upon the Board, by the Development and Road Improvement Funds Act of 1909, under which it was constituted. The work of the Road Board consists primarily in the allotting of grants to local authorities for the purpose of road improvement. In addition, the Board issues circulars and specifications indicating the policy and methods which should be followed in making such improvements, and has begun the work of compiling statistics and conducting experimental research.

The income of the Road Development Fund in the year 1911–1912 was a little over a million sterling, nearly 592,000*l.* of the total being derived from motor spirit duties and about 403,000*l.* from carriage license duties. The grants actually made amounted to nearly 410,000*l.*, and the loans to about 25,000*l.* Further large grants were 'indicated.' Up to March 31, 1912, about four-fifths of the total of the sums allotted was for the improvement of road crusts. In making grants towards the cost of an improvement the Board usually makes it a condition that the local authority shall pay a part, sometimes the larger part, of the cost; but each case is considered on its merits and the Board sometimes pays a large proportion of the total cost of the improvement. The Board is therefore able to exert a considerable influence in highway matters, though it has no administrative control of the councils or their surveyors. The income of the Board in 1912–1913 was nearly 1,253,000*l.*, of which about 702,000*l.* was from motor spirit duties, and 494,000*l.* from carriage license duties. The total of grants and loans made up to June 30, 1913, was nearly 1,475,000*l.*

Highway Authorities.

In all three Kingdoms the county councils are concerned with the maintenance of roads, but the arrangements differ, since there are no district councils in Scotland, while the relations between the county councils and the district councils are not the same in Ireland as they are in England and Wales.

England and Wales.—With some exceptions, applying to only a small mileage, the roads are maintained by the various authorities as follows. In cities and county boroughs all the public roads are maintained by the corporation or the borough council. In non-county boroughs and urban districts the urban council usually maintains all the roads, but the county council pays a considerable part of the cost of maintenance of such 'main' roads as pass through the area in question; and sometimes they are directly maintained by the county. With respect to rural roads it may be regarded as the normal arrangement for the more important roads, having been declared to be 'main' roads, to be maintained directly by the county council, and to be in charge of the county surveyor, while the other roads are maintained by the district councils, each council having its own surveyor. In effect there are wide differences, for the proportion of county roads to the whole may be very small or very large, the average being about 20 per cent.,

In other cases the 'main' roads are maintained by the district councils under a contract with the county council; or the most important of the district roads are the subject of grants made by the county council. Since the roads directly maintained by the county must be technically 'main' roads, it follows that in counties having a large proportion of the total mileage under county management many technically 'main' roads are roads which are in fact 'secondary' in character or even less important; and conversely, there are many counties in which the main roads in fact are classed as 'assisted roads,' or are, some of them, district roads maintained at the cost of the local ratepayers.

Ireland.—The roads in Ireland are divided into 'main roads' and 'district roads.' The latter are maintained by, and at the cost of the urban and rural districts in which they are situated, while the cost of main roads is equally divided between the district and the county. The sums for the maintenance of both classes of roads have first to be voted by the district councils, the power of the county council being almost entirely one of veto.

In 1911, about eighteen out of the thirty-three counties had no main roads, and the other fifteen had some a very large and others a very small mileage of main roads. Most Irish roads are maintained by contract, the contractors being usually small farmers, and the number of separate contracts very large, but the system is being replaced by the 'direct labour' system. Out of thirty-eight counties, 'ridings,' and county boroughs, this system was fully in operation in five, partly in fourteen (sixty-four out of ninety-seven rural districts), and not at all in nineteen, in the year 1911.

Scotland.—In Scotland there are no rural district councils. The urban roads within the burghs are maintained by the burgh councils and the rest of the roads by the county councils. Small counties, such as Elgin, Clackmannan, and Kinross, are each in charge of one surveyor, and Sutherland, where many of the roads are maintained by contract, has one surveyor. The larger counties are divided into districts, each in charge of a surveyor working under the district committee of the county council. Most of the counties are divided into two or three districts, but some large counties, such as Ayr, Perthshire, and Lanarkshire, into five. The mileage in a district ranges from about 120 miles in populous districts to some 500 or 600 miles in sparsely peopled districts. Each district committee of a county is composed of the county councillors representing that district. With their own officials they do all the county work for the district, and report their proceedings once a year to the county council, of which they are the component parts. In road matters the district councillors also report to the county road board which is composed of members from each of the districts. It is recognised that the roads are better managed by persons intimately acquainted with the needs and resources of the relatively small area, and it is held that it is better to secure the services of qualified and experienced men for the direct management of the roads in each district than to employ less efficient local surveyors under a county surveyor. One of the most telling criticisms of the English system is that district councils cannot pay adequate salaries to their road surveyors. Midlothian is an exception to the rule in Scotland, the system of management resembling that of an English county in which a large proportion of the roads are directly maintained by the county. There are four districts, each in charge of a district surveyor, the whole being controlled by a county surveyor, through whom the reports from each district are made to the county road board. The traffic in this area is considerable and of a severe character.

Recent Developments.

The most important of recent developments is the creation of the Ministry of Transport. In taking this step the Government officially recognises 'interests concerned.' This is a very important matter, because, up till now, the control of roads has been entirely in the hands of local authorities, and, to a small extent, of the Road Board.

Heavy motor passenger vehicles.—Some general provision by which heavy passenger vehicles such as the char-a-bancs which are domiciled in seaside resorts, and town omnibuses running out on to country roads, may be made to contribute directly to the cost of road maintenance will probably be made in the near future.

Closing certain roads to certain classes of vehicles.—It may also be expected that steps will be taken in the near future to schedule selected roads of a light class, such roads being available for certain types of heavy vehicles only when the vehicle is actually proceeding to a place which cannot be reached from other roads. This is quite a practical proposal, as what is desired is, not to harry the driver who chances to use such roads, but rather to be able to prevent regular services of heavy vehicles, pleasure or industrial, from being run on roads which are quite unsuited to, and are not necessary for, such traffic. See note after Table X, page 716.

Direct taxation.—There is a strong feeling in favour of the direct taxation of all who use the roads for profit, and all who wear the roads in the course of pleasure journeys, leaving all roads, as heretofore, free to the humblest users, and relieving the local ratepayer of a part of his burden. The principle of spreading the cost is already recognised in Road Board contributions for 'improvements.'

The Ministry of Transport.

The Ways and Communications Bill of 1919 became the Ministry of Transport Act, a change of title not without significance. Highways policy and administration are included in the jurisdiction of the new Ministry. On dates to be fixed by Orders in Council (these notes being written in November 1919) there are to be transferred to the Ministry all powers and duties of any Government Department in relation to : (*a*) Railways ; (*b*) Light Railways ; (*c*) Tramways ; (*d*) Canals, Waterways, and Inland Navigations ; (*e*) Roads, Bridges, Ferries, and vehicles and traffic thereon ; (*f*) Harbours, Docks, and Piers.

There is provision for the temporary transfer of 'undertakings' to the Minister for a period of two years ; any rates, fares, tolls, etc., fixed by him during that period to be in force for eighteen months after the expiry of the two years.

Tramways and Light Railways.—It is provided that if any tramway, or light railway used as a tramway by a local authority, of which the Minister takes possession, is liable, under any Act of Parliament or order to be purchased by a local authority, the Minister shall, when such purchase is complete, cease possession thereof. The Minister has the power to require through running and to settle the terms of such through running.

Roads Committee.—The constitution of a Statutory Committee for Roads, to some extent, meets the views of those who think that the administration of highways and the development of roads and road traffic should not be entangled with nor unduly influenced by other transport matters. It is doubtless important that all transport matters should be considered in their relations to one another, but it is also of the greatest importance to recognise the fact that the highway system of the country is complete in itself, unlike some other 'communications.'

The members of the Roads Committee will be appointed only after consultation with the Authorities and interests concerned. The scope of the Committee's operations is not limited to matters referred to them by the Minister ; they may regulate their own procedure and meet as often as they please. It may probably be assumed that the Statutory Committee will include among its members persons representing (1) the local authorities, (2) associations of users of motor vehicles, (3) farming interests, and (4) independent technical judgment.

The Road Department.—The Act also provides that the Ministry shall establish a separate Road Department 'charged with dealing in the ordinary course of departmental business with road construction, improvement, maintenance, and development.'

Revenue.—It is understood that the proceeds of motor taxation, the original tax or its equivalent, will be applied to their original purpose, in the financial year 1920–1921. In the 1919–1920 estimate ten millions was allotted for road purposes out of the general revenue. By July 1919, grants up to nearly eight millions had been arranged for 54 English and Welsh counties, 57 county boroughs, 27 Metropolitan boroughs, and 25 Scottish counties. In accordance with previous procedure highway authorities submit a statement showing that they are arranging (i) to execute out of their own resources at least as large a programme of road work as they carried out in the year ended March 1914, or, in special cases, the average of the three years ended March 1914 ; having regard to the increase in the cost of road work, and (ii) are also making the maximum practicable provision for dealing with works of deferred maintenance. Most authorities are proposing to add from one-third to one-half, and in some cases considerably more, to their highway expenditure of 1913–1914.

LEGAL POINTS FOR ROAD ENGINEERS.

The same principles of law govern all highways, whether carriage roads, bridle paths, or footpaths. The widths of some roads have been fixed by legal enactments; in England, for instance, by awards under Inclosure Acts, and in Scotland a minimum width, with powers to take a further width, was prescribed by the Roads and Bridges Act of 1878. The width of a highway may be greater than that set out in an award, but *prima facie* it is not. The width has often been determined by dedication, and in some cases the dedication was recent and the intended width may be clearly inferred; but in many cases the act of dedication is presumed, or the road is a legacy from ancient times. In such cases the usual presumptions are that the abutting owner of the soil is the owner of the soil to the middle line of the road, and that the right of public passage extends from fence to fence. Road engineers should note, however—when roads require widening—that there may have been recent encroachment and that a strip beyond the fence may be really a part of the highway. There have been many such encroachments. The principle 'once a highway always a highway' should not be lost sight of. The actual width of the highway and the nature and extent of the facility to which the public has a right may depend upon the manner in which and the extent to which the public has used the road and its margins as well as upon the extent to which and the manner in which the owner of the soil or his tenant has exercised rights of ownership, or has done things which tend to show that the dedication of the road is subject to reservations. It is important to note that a wayside ditch, though usually a part of the highway, may be outside the highway, and, especially when a road has been set out under an award, it should not be too readily concluded that a ditch lying beyond the width of the strip awarded is a part of the highway. The highway usually extends to a depth such as may be necessary for the proper maintenance of the road and to a height required for the passage of laden vehicles. The obstructions permitted on a highway are those which are authorised by Acts of Parliament, such as telegraph posts placed by the Postmaster General, and pipes laid by water and gas companies in defined areas. No individual or society has the right to place any post or other obstruction on the highway, except the owner of the soil where he can clearly establish a claim to such a right. Failing this, the presumption is that he cannot place on the highway anything which amounts to an obstruction of public passage in its widest interpretation. The highway authority may erect direction posts, and presumably, posts for cognate purposes, but it seems that such an authority may not erect lamp-posts unless they have powers as a lighting authority, even if the lamps are intended to facilitate the use of the road by the public. The highway authority has no powers enabling it to place posts or other obstructions upon the highway in the interests of certain classes of users of the road. The tendency is, however, for local authorities to go beyond their powers, and road surveyors will probably be required to carry out many works near the border line of those powers. Generally, as regards the placing of pipes, conduits, or wires along or across the highway, the persons doing so without statutory authority are likely to come into conflict with the public, or the owner of the soil, or both.

Width of Carriage-way.—There is usually a presumption that the highway is dedicated in part as a carriage-way, in part as footways, and grass margins which are regarded as occasional footways and rides, and in part as ditches, banks, and other enduring features necessary to the maintenance of the highway as established by use. It may, therefore, be desirable in some cases to obtain the formal consent of the owner of the soil to any radical alterations, such as the filling in of ditches. As regards trees and hedges it is important to distinguish between the powers of the highway authority as regards actual obstruction, and their further powers relating to the lopping of trees and cutting of hedges which injuriously affect the road.

Use and Abuse of the Highway.—In essence, the public right over the highway is one of passage along it only, and, although this principle is largely stretched by custom it is not broken, and those who stretch it unduly may be caught on the rebound, whether their acts result in injury or annoyance to the owner of the soil or his tenant, or, on the other hand, result in obstruction of or injury to the highway. Horses must be trained and exercised and motor vehicles tested for practical use upon the roads: but not to an extent or in a manner which amounts to obstruction or results in damage to the road. In this connection it may be noted that injuries to the road not coming under the head 'extraordinary traffic' may sometimes be dealt with as 'wilful damage.'

The relations of the three parties concerned may be briefly indicated as follows:—

The Highway Authority.—Must maintain the road in a condition fit for the passage of the public; may enforce the lopping of trees and cutting of hedges in the manner already indicated; may recover damages for substantial injuries caused by 'extraordinary traffic'; may enforce the removal of obstructions from the highway; may enforce by-laws such as those regulating the locking of wheels and the use of skidpans, and the widths of tyres in proportion to the loads carried.

The Public.—The public rights affecting the maintenance of roads include: the recovery of damages caused by 'misfeasance' on the part of the local authority, such as the placing of heaps of stone within the limits of the highway or the fixing of manholes, in such a manner as to cause accidents.

Any member of the public who finds on a highway an object which is in fact an obstruction or a nuisance may take proceedings against the person responsible for its presence, unless it is placed there under statutory authority.

Ownership.—In certain cases the highway authority becomes owner of the soil to a greater or less extent. In boroughs and urban districts, streets taken over by the local authority are vested in that authority. In rural districts 'a main road and the materials thereof and all drains belonging thereto' vest in the county council, but this does not constitute the council owners of the soil or give them powers over roadside wastes beyond those proper to their duties as the guardians of the public right of passage. As regards new roads made by the Road Board, the Board has the same powers and duties as those of a county council (except that of levying rates); and it is clear that if the road is on land which the Board has bought outright, with powers 'to sell, lease and manage' it, the Board becomes owner of the soil; and the Development Act does not seem to contemplate the acquisition by the Board of limited rights. In rural districts, highways other than main roads are vested in the owners of the soil.

Extraordinary Traffic.—The circumstances under which damages may be recovered for 'extraordinary traffic' cannot be shortly summarised, but the traffic may be extraordinary in amount, in character, or by reason of the manner in which it is conducted. Lord Justice Bowen has said 'extraordinary traffic is really a carriage of articles over the road at either one or more times which is so exceptional in the quality or quantity of articles carried or in the mode or time of user of the road as substantially to alter and increase the burden imposed by ordinary traffic on the road, and to cause damage and expense thereby beyond what is common.'

Heavy Vehicles on Bridges.—The owner of a bridge may prohibit the crossing of the bridge by a vehicle weighing more than 3 tons, but subject to confirmation, or an increase in the limit by an umpire or arbitrator.

HIGHWAY STATISTICS.

Road Mileage in Relation to Population and Area.

Road Mileage, per square mile.—Norway, 0·161; Spain, 0·174; Sweden, 0·205; New South Wales, 0·223; Hungary, 0·253; Switzerland, 0·465; Austria, 0·641; United States, 0·739; Scotland, 0·745; Italy, 0·834; Denmark, 1·724; Japan, 1·743; France, 1·750; Ireland, 1·755; England and Wales, 2·571.

Population per mile of road.—New South Wales, 24·6; United States, 41·8; Denmark, 75·5; Ireland, 77·13; France, 108·0; Norway, 115·4; Sweden, 154·4; Japan, 210; Scotland, 210; England and Wales, 239; Italy, 371; Austria, 385; Switzerland, 504; Spain, 575·8; Hungary, 655.

Approximate Mileages (1909).—The British Isles, 231,330: England and Wales, 151,000; Scotland, 24,800; Ireland, 55,560; England and Wales (1920), 152,000 miles.

Mileages in England and Wales (1909).—Rural, 118,642; urban, 32,000; urban roads outside London, 29,837; roads maintained by rural district councils, 95,077; rural roads maintained by or at the cost of county councils, 23,565; county borough roads, 9,366; roads in urban districts and non-county boroughs, 20,471; roads classed as 'main' roads, 27,754.

Mileages in Scotland (1909).—County councils (rural roads), 22,663; burgh councils, 2,108.

Costs per Mile of Road Maintenance.

England and Wales.

Annual Expenditures per Mile, all charges.—In 1906: The British Isles, 80*l.*; England and Wales, 88*l.*; Scotland, 51*l.*; Ireland, 22*l.*; Irish rural roads, 14*l.* In 1909: England and Wales, 89*l.*; Scotland, 48*l.*; Ireland, 19*l.* 10*s.*; Scottish counties, 31*l.*

Annual Costs of Maintenance only, per Mile (1909).—Main roads, urban, 206*l.*; county borough roads, 136*l.*; all roads in urban districts and non-county boroughs, 112*l.*; London, 335*l.*; rural roads maintained by or at the cost of county councils, 75*l.*; rural district roads, 23*l.*; urban roads generally, 134*l.*; rural roads generally, 33*l.*; 'main roads' 95*l.*; all English roads and streets, 54*l.* For 1910:—Main roads, urban, 210*l.*; county borough roads, 136*l.*; London, 333*l.*; rural roads maintained by or at the cost of county councils, 79*l.* Rural district roads, 23*l.* Total rural, 34*l.* All English roads and streets, 54*l.*

(1910-1911.)

Main roads, urban, 220*l.*; county borough roads, 137*l.*; London, 336*l.*; rural roads maintained by or at the cost of county councils, 86*l.*; rural district roads, 24*l.* Total rural, 37*l.* All roads and streets, 58*l.*

(1912-1913.)

County Main Roads.—Northamptonshire, 319 miles, 80*l.*, maintenance only; Cumberland, 460 miles, 66*l.*; Essex, rural roads, 619½ miles, 168*l.*, including minor improvements; Essex, urban roads maintained directly by the county, 61½ miles, 410*l.*

Other roads.—Essex, main roads maintained by urban authorities at cost of county, 119½ miles, 424*l.*, excluding improvements. Cumberland, main roads maintained by urban authorities at cost of county, 73 miles, 95*l.* Isle of Wight, main roads, 232 miles, 63*l.*; and district roads, 86 miles, 10*l.* 9*s.* 8*d.*, ordinary maintenance.

Mileages in 1913–1914.—England and Wales: Metropolitan Boroughs, 2,168; County Boroughs, 10,304; Non-county Boroughs, main roads, 1,264; other roads, 4,867; Urban District Councils, main roads, 2,358, other roads, 11,871; Counties, main roads, 19,588 (English Counties, 16,831; Welsh Counties, 2,757); Rural Districts, main roads, 4,989; other roads, 94,628. The figures for 1919–1920 are substantially the same, but the local costs of maintenance have been so much and so differently affected by the war, that the 1913–1914 figures have been used for the tables given in succeeding pages, as forming the best basis for comparison with future returns.

Costs of Maintenance and Other Expenditure.

Comparative Tables.

(Compiled from the 'Local Taxation Returns, 1913–1914.)

In the following tables the populations and assessable values of the different areas are given in those cases in which they have an important bearing on the costs of maintenance. Since, in any county, the roads classed as main roads are usually the more important, and those classed as district roads the less important, it follows that the cost of maintenance per mile of main roads is to some extent inversely proportional to the mileage of main roads as against the total road mileage in the county. The work of collecting traffic statistics was interrupted by the war, but will be taken into consideration in future tables.

Table I.—Roads and Streets: Metropolitan Boroughs, 1913–1914.

Maintenance and Repair, and Scavenging.

Name of Borough.	Mileage of Roads and Streets Maintained.	Cost per mile: Maintenance and Repair.	Cost per mile Cleansing and Watering.	Name of Borough.	Mileage of Roads and Streets Maintained.	Cost per mile: Maintenance and Repair.	Cost per mile Cleansing and Watering.
(1)	(2)	(3)	(4)	(1)	(2)	(3)	(4)
		£	£			£	£
Battersea	74	379	286	Kensington	92	449	281
Bermondsey	69	206	268	Lambeth	154	352	261
Bethnal Green	40	435	230	Lewisham	128	178	165
Camberwell	121	256	205	Paddington	60	561	360
Chelsea	35	618	323	Poplar	63	244	321
Deptford	51	214	195	Marylebone	57	855	482
Finsbury	38	396	269	St. Pancras	90	482	400
Fulham	62	300	190	Shoreditch	43	340	466
Greenwich	66	185	147	Southwark	65	688	409
Hackney	109	369	128	Stepney	91	446	471
Hammersmith	53	227	238	Stoke Newington	26	280	150
Hampstead	63	412	280	Wandsworth	192	355	154
Holborn	26	854	635	Westminster	99	792	671
Islington	124	222	228	Woolwich	81	286	194

Total mileage, 2,168. Average cost per mile, maintenance and repairs, 384*l.*; ditto, including improvements, 433*l.*; ditto, including improvements defrayed out of loans, 563*l.* Average cost per mile, cleansing and watering, 283*l.*

TABLE II.—COUNTY BOROUGHS: PUBLIC ROADS AND STREETS, 1913–1914.

	County Borough.	Population Census 1911.	Assessment Value: Borough Rates.	Mileage.	Expenditure per mile, £.		
					Out of Revenue.	Out of Loans.	Total.
	(1)	(2)	(3)	(4)	(5)	(6)	(7)
A 1	Liverpool	753,000	4,865,000	529	199	148	347
2	Bristol	357,000	1,849,000	356	320	51	371
3	Kingston-on-Hull	278,000	1,304,000	130	453	151	604
4	Cardiff	182,000	1,154,000	139	261	45	306
5	Plymouth	112,000	612,000	92	251	nil	251
B 6	Birmingham	840,000	4,438,000	594	247	49	296
7	Leeds	452,000	2,201,000	476	212	157	369
8	Bradford	288,000	1,607,000	241	368	790	1,158
9	Stoke-on-Trent	234,000	874,000	173	237	53	290
10	Bolton	181,000	839,000	344	92	33	125
11	Preston	117,000	474,000	91	204	78	282
C12	Bournemouth	79,000	747,000	101	314	58	372
13	Bath	69,000	412,000	81	288	21	309
14	Eastbourne	62,000	447,000	51	308	nil	308
D15	Leicester	227,000	1,070,000	185	206	63	269
16	Derby	123,000	560,000	95	242	125	367
17	Norwich	121,000	473,000	136	262	8	270
18	York	82,000	417,000	76	290	15	305
19	Exeter	59,000	285,000	53	306	306	612
20	Lincoln	57,000	251,000	48	388	23	411
21	Gloucester	50,000	235,000	45	193	38	231
22	Burton-on-Trent	48,000	297,000	44	244	91	335
23	Chester	39,000	221,000	29	314	nil	314
24	Canterbury	25,000	131,000	35	199	33	232

Corresponding totals, all 78 county boroughs, (4) 10,304, (5) 247, (6) 92, (7) 339; ditto, maintenance and repair, (4) 10,304, (5) 150; ditto, corrected (4) 10,304, (5) 144.

NOTES ON TABLE II.

The average cost per mile for maintenance and repair is taken from the analysis of the total expenditure, thus: maintenance and repair, 150·2*l.*, improvements, 11·3*l.*, other items 85·5*l.*; total, 247*l.* per mile. The corrected figure of 144*l.* is obtained by taking certain financial adjustments into consideration, and the figure of 150*l.* per mile is probably more accurate for purposes of comparison. Expenditure out of loans was not applied to ordinary maintenance and repair.

Grouping of Boroughs.—Nos. 1 to 5 are seaport towns; 6 to 11, towns in large industrial areas; 12 to 14, health resorts; and 15 to 24, other county boroughs in different parts of England. In using the table, the analysis of the total expenditure from revenue may be taken as a rough guide to the probable apportionment in individual cases, and for this purpose sufficiently accurate proportions of the figures in column 5 are, maintenance and repair, $\frac{26}{43}$; improvements, $\frac{2}{43}$; other items, $\frac{15}{43}$.

TABLE III.—NON-COUNTY BOROUGHS: PUBLIC ROADS AND STREETS, 1913–1914.

Non-County Borough.	County in which Situated.	Population 1911 Census.	Assessable Value 1913, Borough Rates.	Mileage of Roads and Streets.			Expenditure per mile, £.		
				Main Roads.	Other Roads and Streets.	Total.	Out of Revenue.	Out of Loans.	Total.
(1)	(2)	(3)	(4)	(5)	(6)	(7)	(8)	(9)	(10)
				m. f.	m. f.	m. f.			
Carlisle	Cumberland	52,225	263,300	4 4	54 0	58 4	103	37	140
Bedford	Bedford	39,200	215,700	9 6	31 4	41 2	62	49	111
Harrogate	Yorks	33,700	268,500	8 2	56 7	65 1	255	nil	255
Rochester	Kent	31,400	141,400	6 2	26 4	32 6	240	nil	240
Heywood	Lancaster	26,700	120,900	5 4	21 0	26 4	234	49	283
Hereford	Hereford	22,600	129,800	16 0	34 0	50 0	199	2	201
King's Lynn	Norfolk	20,000	84,600	9 5	11 0	20 5	201	54	255
Chelmsford	Essex	18,000	101,300	7 5	13 0	20 5	287	437	724
Boston	Lincoln	16,700	59,300	4 5	19 0	23 5	125	nil	125
Pontefract	Yorks	15 900	65,300	5 2	25 0	30 2	164	27	191
Wenlock	Salop	15,200	53,300	26 4	78 6	105 2	34	nil	34
Falmouth	Cornwall	13,100	50,800	2 2	14 0	16 2	172	56	228
Clitheroe	Lancaster	12,500	48,900	2 2	15 5	17 7	278	—	278
Warwick	Warwick	11,900	65,100	9 2	10 4	19 6	197	nil	197
Lewes	Sussex	11,000	63,700	3 5	11 7	15 4	227	nil	227
Hertford	Hertford	10,400	55,800	2 6	12 4	15 2	130	nil	130
Carnarvon	Carnarvon	9,120	32,100	7 0	9 0	16 0	98	10	108
Bideford	Devon	9,080	32,800	11 5	9 2	20 7	122	nil	122
Lichfield	Stafford	8,620	44,900	8 0	20 0	28 0	108	nil	108
Morpeth	Northumberland	7,430	27,500	2 0	6 0	8 0	218	nil	218
Sudbury	Suffolk	7,140	21,600	4 6	7 2	12 0	160	nil	160
Chippenham	Wilts	5,330	23,100	1 6	3 7	5 5	316	nil	316
Wells	Somerset	4,650	26,600	3 3	6 1	9 4	148	nil	148
Totnes	Devon	4,130	19,500	5 6	6 0	11 6	107	nil	107
Aberystwith	Cardigan	3,580	12,000	2 2	6 4	8 6	305*	nil	305
Blandford	Dorset	3,480	14,700	1 6	1 5	3 3	225	nil	225
Buckingham	Bucks	3,280	14,870	11 0	7 0	18 0	77	nil	77
Woodstock	Oxford	1,590	4,400	1 4	1 0	2 4	29	nil	29
New Romney	Kent	1,330	6,390	4 0	6 0	10 0	35	nil	35
Cowbridge	Glamorgan	1,170	4,000	—	1 1	1 1	236	nil	236
All non-county Boroughs, 248	—	4,462,000	22,252,000	mls. 1,264	mls. 4,867	mls. 6,131	(av.) 195	(av.) 45	(av.) 239
29 Welsh Boroughs (included above)	—	212,000	855,000	82	399	481	—	—	—

NOTES ON TABLE III.

The total expenditure, out of revenue and out of loans, amounts to 239*l.* per mile, to the nearest £.

* *Aberystwith.*—The high figure, 305*l.* per mile, includes the cost of house scavenging, which is not separately reported by this borough.

Analysis.—The total expenditure of 239*l.* per mile is made up as follows: maintenance and repair, 146*l.*; improvements, 57*l.*; other payments, 36*l.*, bridges about 3*s.* per mile.

The item, 'other payments,' is not apportioned between main roads and other roads, but the remaining expenditure is as follows:—

Main roads.—Maintenance and repair, 261*l.*; improvements, 77*l.*; total, 338*l.* per mile.

Other roads.—Maintenance and repair, 116*l.*; improvements, 52*l.*; total 168*l.* per mile.

Wales.—The Welsh boroughs are included in the above totals. The separate figures for Wales are, for maintenance and repair, main roads, 133*l.*; other roads, 53*l.* per mile.

Road Board Grants amounted to 3,204*l.*

Receipts from County Councils amounted to about 28*6l.* per mile in respect of maintenance, repair and improvement of main roads, and a sum of nearly 31,000*l.* in respect of other highways and footpaths.

Bridges and ferries.—The boroughs expended about 36,000*l.* on bridges and ferries, in addition to the small sum included in road expenditure.

Cost per head.—The total expenditure on roads works out to about 6*s.* 7*d.* per head of the population.

TABLE IV.—URBAN DISTRICT COUNCILS: PUBLIC ROADS AND STREETS, 1913–1914.

Ref. No.	Urban District Council.	Situated in the County of	Population, 1911 Census.	Assessable value: General District Rate.	Mileage. Main Roads.	Mileage. Other Roads.	Mileage. Total.	Expenditure per mile. Out of Rev.	Expenditure per mile. % of Col. 9.	Expenditure per mile. Improvements out loans.
(1)	(2)	(3)	(4)	(5)	(6)	(7)	(8)	(9)	(10)	(11)
			£	£	m. f.	m. f.	m. f.	£	£	£
A 1	Festiniog	Merioneth	9,674	45,200	32 0	9 5	41 5	55	44	12
A 2	Brynmawr	Brecon	7,582	18,300	—	5 0	5 0	254	204	nil
A 3	Alnwick	Northumberland	7,041	29,800	6 1	12 1	18 2	94	75	nil
A 4	Matlock	Derby	6,745	53,300	3 1	26 0	29 1	130	104	nil
B 5	Whitby	York, N.R.	11,130	48,800	5 4	14 5	20 1	132	106	nil
B 6	Bognor	Sussex	8,142	58,200	—	12 2	12 2	285	228	24
B 7	Brixham	Devon	7,954	23,100	6 2	17 3	23 5	60	48	2
B 8	Milford Haven	Pembroke	6,399	14,000	—	13 0	13 0	89	71	nil
B 9	Cromer	Norfolk	4,073	35,700	4 4	4 5	9 1	140	112	nil
B 10	Penmaenmawr	Carnarvon	4,042	20,600	4 0	10 3	14 3	85	68	nil
B 11	Wyvenhoe	Essex	2,375	6,630	—	5 2	5 2	17	13	nil
B 12	Wadebridge	Cornwall	2,339	7,740	2 3	5 3	7 6	110	88	42
C 13	Bedwellty	Monmouth	22,500	91,900	—	44 1	44 1	179	143	nil
C 14	Atherton	Lancaster	19,000	82,700	3 0	11 6	14 6	187	150	3
C 15	Willenhall	Stafford	18,800	50,300	3 1	14 0	17 1	174	139	nil
C 16	Mirfield	York, W.R.	11,700	44,600	4 6	15 5	20 3	274	219	15
C 17	Willington	Durham	8,730	27,900	3 2	7 4	10 6	101	81	nil
C 18	Methley	York, W.R.	4,330	24,700	3 0	8 5	11 5	104	83	nil
D 19	Tonbridge	Kent	14,800	80,400	4 6	10 0	14 6	297	238	nil
D 20	Horsham	Sussex	11,310	55,900	0 5	13 3	14 0	285	228	101
D 21	Bp. Stortford	Hertford	8,720	45,300	7 2	11 7	19 1	171	137	nil
D 22	Cirencester	Gloucester	7,630	33,700	7 2	9 4	16 6	279	223	75
D 23	Sleaford	Lincoln	6,430	29,700	7 5	8 3	16 0	96	77	nil
D 24	Sherborne	Dorset	5,950	27,900	4 7	4 4	9 3	174	139	nil
D 25	Uttoxeter	Stafford	5,720	20,300	—	4 5	4 5	174	139	nil
D 26	Woodbridge	Suffolk	4,620	18,700	—	10 4	10 4	101	81	nil
D 27	Oakham	Rutland	3,667	16,400	3 4	6 1	9 5	152	121	36
T 1	All U.D.Cs. (91)	Lancaster	931,200	4,045,000	235	1,001	1,236	162	129	52
T 2	,, ,, (115)	West Riding	779,900	2,953,000	380	1,411	1,791	135	108	18
T 3	,, ,, (16)	Glamorgan	507,800	2,117,000	11	622	633	163	130	18
T 4	,, ,, (10)	Norfolk	35,900	157,200	64	97	161	87	70	nil
T 5	,, ,, (22)	Kent	193,400	1,037,000	59	366	425	182	146	25
T 6	,, ,, (9)	Buckingham	56,300	280,500	21	59	79	201	161	7
T 7	,, ,, (18)	Hertford	155,600	816,500	33	216	249	181	145	25
T 8	,, ,, (24)	Devon	135,100	600,500	141	494	635	63	50	6
F 1	,, ,, (729)	England	6,992,300	31,949,000	2,211	10,304	12,515	144	116	21·3
F 2	,, ,, (83)	Wales	970,700	3,875,000	147	1,567	1,714	114	91	11·9
F 3	,, ,, (812)	England & Wales	7,963,000	35,824,000	2,358	11,871	14,229	141	113	20·2

NOTES ON TABLE IV.

For the sake of comparison the twenty-seven urban districts are in four groups. The 'A' group are districts situated in mountain or moorland areas; those of the 'B' group are coast or estuary towns; those of the 'C' group are in large industrial areas; and those of the 'D' group are selected from areas which differ much in character but are all farming areas, and these districts are not situated near large industrial areas. There are, in every group, enough districts of about the same population to provide comparisons between groups, and the range of populations in every group allows of another comparison.

Analysis.—The analysis shows that for the whole country (England and Wales) the expenditure on maintenance and repair on all roads is almost exactly four-fifths of the total expenditure out of revenue, the figures to the nearest £ being 141*l.* and 113*l.* per mile. This analysis is not made for individual urban districts (in the Local Taxation Returns) so that column 10 does not necessarily show the expenditure on maintenance and repair, but is given for the sake of comparison with the figure for the whole country.

Maintenance and repair.—The 2,358 miles of *main roads* cost about 233·6*l.* per mile; and the 11,871 miles of *other roads*, about 88·6*l.* per mile; *all roads*, average, 113*l.* per mile, Wales included.

Wales alone, main roads, 94·3*l.*; *other roads*, 88·4*l.* per mile.

Improvements.—Out of revenue, the expenditure on the improvement of *main roads* was 30·9*l.*, and *other roads*, 8·7*l.* per mile; average on all roads, 12·4*l.* per mile. Adding the last figure to the expenditure on 'street improvements,' 20·2*l.*, we get a total expenditure on improvements of nearly 32·6*l.* per mile.

Bridges.—Out of revenue, about 2·4*l.* per mile of main roads was spent on county bridges. The whole expenditure on all bridges was about 1·5*l.* per mile of all roads.

Payments by county councils in respect of main roads and bridges (maintenance, repair, and improvement) amounted to nearly 273*l.* per mile of main roads, and receipts from the Road Board to nearly 5·8*l.* per mile of all roads. Cost per head about 5*s.* 9*d.*

TABLE V.—MAIN ROADS: ENGLISH AND WELSH COUNTIES, 1913–1914.

County.	Acres to nearest thousand.	Population Census of 1911 to nearest thousand.	Mileage Repaired by County Council, to nearest mile.	Direct Expenditure: Cost per mile of col. 4. £	Payments to District Councils as, roughly, in proportion to Direct Expenditure
(1)	(2)	(3)	(4)	(5)	(6)
Bedford	303,000	145,000	735	81	1 : 4
Berks	464,000	281,000	353	191	1 : 7
Bucks	479,000	222,000	467	141	1 : 7
Cambs	315,000	128,000	247	157	1 : 6
Cheshire	611,000	955,000	510	172	4 : 9
Cornwall	868,000	328,000	183	210	4 : 5
Cumberland	973,000	266,000	463	93	1 : 5
Derby	645,000	560,000	513	171	2 : 11
Devon	1,659,000	700,000	nil	—	—
Dorset	626,000	223,000	458	118	1 : 3
Durham	649,000	1,370,000	62	380	2 : 1
Essex	987,000	1,352,000	681	229	1 : 3
Gloucester	786,000	736,000	1,035	93	1 : 10
Hants	1,049,000	951,000	542	144	9 : 2
Hereford	539,000	114,000	nil	—	—
Hertford	405,000	311,000	1,212	97	1 : 9
Hunts	224,000	56,000	527	62	1 : 20
Kent	972,000	1,046,000	600	260	1 : 3
Lancs	1,195,000	4,768,000	313	398	1 : 1
Leicester	524,000	477,000	313	123	1 : 8
Lincoln:					
Parts of Holland	1,705,000	564,000	151	107	3 : 10
Parts of Kesteven			53	165	5 : 2
Parts of Lindsey			—	—	—
Middlesex	149,000	1,126,000	41	870	2 : 1
Norfolk	1,304,000	499,000	1,414	66	1 : 7
Northants	582,000	219,000	282	104	1 : 4
Northumberland	1,292,000	697,000	570	100	1 : 4
Notts	616,000	604,000	327	171	1 : 6
Oxford	491,000	189,000	450	95	1 : 8
Rutland	97,000	20,000	12	98	4 : 1
Salop	862,000	246,000	699	83	1 : 7
Peterboro', Soke of	53,000	45,000	33	119	14 : 13
Somerset	1,032,000	458,000	120	686	8 : 1
Stafford	745,000	1,280,000	605	105	4 : 11
Suffolk, E.	931,000	394,000	312	162	*
Suffolk, W.			211	154	1 : 5
Surrey	464,000	846,000	26	718	5 : 1
Sussex, E.	939,000	663,000	373	243	1 : 10
Sussex, W.			178	254	1 : 30
Warwick	558,000	1,247,000	457	140	1 : 6

* Less than 1,000*l.*

TABLE V.—MAIN ROADS—*continued.*

County.	Acres to nearest thousand.	Population Census of 1911 to nearest thousand.	Mileage Repaired by County Council, to nearest mile.	Direct Expenditure: Cost per mile of col. 4. £	Payments to District Councils as, roughly, in proportion to Direct Expenditure.
(1)	(2)	(3)	(4)	(5)	(6)
Westmorland	305,000	64,000	251	56	1 : 4
Wilts	864,000	287,000	347	135	1 : 1
Worcester	451,000	287,000	441	180	1 : 8
York, E. Riding	741,000	433,000	74	122	1 : 7
York, N. Riding	1,358,000	420,000	95	253	11 : 6
York, W. Riding	1,774,000	3,045,000	—	—	—
All English counties less Monmouth	—	—	16,831	(Average) 140	(Average) 3 : 5
Anglesey	120,000	51,000	63	61	*
Brecon	469,000	59,000	175	93	*
Cardigan	443,000	60,000	240	42	*
Carmarthen	588,000	160,000	309	106	*
Carnarvon	323,000	125,000	220	79	1 : 4
Denbigh	426,000	145,000	258	96	1 : 5
Flint	160,000	93,000	163	107	3 : 10
Glamorgan	487,000	1,121,000	195	283	*
Merioneth	524,000	46,000	223	43	3 : 10
Monmouth	345,000	396,000	268	219	1 : 36
Montgomery	510,000	53,000	378	52	*
Pembroke	393,000	90,000	136	64	3 : 7
Radnor	239,000	23,000	131	35	*
All Welsh counties and Monmouth	—	—	2,757	(Average) 101	(Average) 1 : 10
English and Welsh Counties	—	—	19,588	(Average) 135	(Average) 5 : 9

* Less than 1,000*l.*

NOTES ON TABLE V.—OTHER TOTALS.

The mileages of roads in Tables III, IV and VI, do not always agree exactly with totals in Table V, a distinction being made in some cases between the mileage repairable and the mileage actually maintained. The method of accounting for some minor items is, moreover, not always the same. The following figures are, however, in substantial agreement with figures calculated from other returns.

Main Roads, English and Welsh Counties.—Expenditure out of loans, 15*l.*; total expenditure, 150*l.* per mile. England alone, total expenditure, 155*l.* per mile.

County Council Roads, directly maintained.—Urban, 744 miles, 280*l.* per mile; rural, 18,844 miles, 129*l.* per mile.

Main Roads maintained or County Councils.—Urban, 3,529 miles, 271*l.* per mile; rural, 4,947 miles, 106*l.* per mile.

All main roads, England and Wales, 28,064 miles, 147*l.* per mile; Wales (and Monmouth) 2,995 miles, 102*l.* per mile.

Bridges.—County expenditure on county bridges, per mile of county main roads, 12*l.*

Road Board Grants to counties, expressed as an average per mile of directly maintained roads, 25*l.*

Recent Costs per mile.—Expenditure during the war was affected by so many factors that comparisons are of little value. In most cases there are heavy arrears to be made up.

The following may be noted as examples: 1918–1919, Northamptonshire, 100*l.*; Essex, 183*l.*; estimate for 1919–1920, Gloucestershire, 82*l.* 1913–1914, Northamptonshire, 104*l.*; Essex, 229*l.*; Gloucestershire, 93*l.*, per mile.

TABLE VI.—RURAL DISTRICTS OF 15 COUNTIES: MAIN AND OTHER ROADS, 1913–1914.

Rural Districts in the County of	Population of the Rural Districts, 1911.	Assessable Value for General Expenses.	Number of Rural Districts.	Mileage and Costs per Mile.			
				Main Roads.		Other Roads.	
(1)	(2)	(3)	(4)	(5)	(6)	(7)	(8)
				mls.	£	mls.	£
Buckingham	139,600	885,600	11	nil	—	1,177	38
Cornwall	179,300	805,200	14	316	66	3,281	19
Cumberland	95,100	665,600	9	nil	—	1,867	16
Devon	227,300	1,328,000	18	1,141	83	5,669	17
Dorset	104,800	557,300	12	nil	—	1,679	17
Essex	258,700	1,353,000	17	nil	—	2,415	36
Gloucester	230,500	1,117,000	21	nil	—	2,259	23
Norfolk	260,800	1,209,000	20	nil	—	3,733	15
Stafford	203,900	1,212,000	17	nil	—	2,170	25
Suffolk (W.)	73,100	280,200	8	nil	—	993	24
Sussex (W.)	92,700	550,700	8	nil	—	1,080	44
Wiltshire	161,300	837,000	18	375	59	2,204	22
Cardigan	43,600	149,600	7	nil	—	1,093	8
Carnarvon	66,700	249,400	6	nil	—	842	12
Glamorgan	205,900	1,047,000	8	1¼	65	1,026	70
All Counties, England and Wales	7,733,000	45,805,000	661	4,989	98	94,628	28

NOTES ON TABLE VI.

In a few only of the fifteen counties in the table did the district councils spend any appreciable amount out of loans, the average for all rural districts in England and Wales being only about 2 per cent. of the expenditure out of revenue. The last entry, all counties, shows total expenditures on main and other roads on the same basis as the expenditures as stated for individual counties. The average extent to which these must be diminished in order to get figures for maintenance and repair only is shown by the totals as follows: *main roads*, entry for all counties, 98*l.*, or, more nearly, 98 4*l.*; expenditure for *maintenance* only, 95*l.* per mile. *Other roads*, entry for all counties, 28*l.*, or more nearly 27·6*l.*; expenditure for maintenance and repair only, 26·3*l.*

Improvements.—Expenditure on the improvement of *main roads* out of revenue was about 4*l.* per mile, and on other roads, out of revenue and loans, about 1·3*l.* per mile.

Other expenditure on roads, not included in table, nor in the above calculations: *salaries* of highway officers, less than 1*l.* per mile; *bridges*, less than four shillings per mile of roads (total mileage).

Unmetalled roads.—In the total of 94,628 miles of 'other' roads, there is included 2,813 miles of roads not paved nor metalled, or just over 3 per cent.

County Councils refunded about 103*l.* per mile in respect of main road maintenance and repair and about 3*l.* per mile in respect of main road improvement.

Wales and Monmouth.—The maintenance and repair of 31 miles of main roads in Welsh rural districts cost 76·9*l.* per mile, and of 13,058 miles of other roads, 14·2*l.* per mile.

The population of the 661 rural districts of England and Wales is about 7,733,000, and of the 78 rural districts in Wales and Monmouth about 808,000.

Indian Roads.—Since the expenditure upon the construction of Indian roads has in many cases been ample, usually adequate, and seldom recklessly parsimonious, and since, further, the work has been done by or under some control from the Royal Engineers or the Public Works Department, we cannot strictly compare the cost of their maintenance with maintenance costs of English roads, some of which have been made a little at a time and others developed from rough tracks, the average first costs being very low. An Indian province which presents a considerable variety of favourable and unfavourable conditions, the Madras Presidency, has, outside municipal areas, some 25,700 miles of roads, about 4,000 miles being unmetalled. The Public Works Department maintains some 700 miles, including important ghât roads, but including also about 400 miles of unmetalled roads, for the most part partially bridged and drained. The remaining 25,000 miles are maintained by the local boards. The Public Works Department metalled roads are very well maintained at a cost of about 20*l.* per mile, and the unmetalled roads at about 9*l.* per mile per annum. The local board roads cost about 10*l.* per mile.

Near Peshawar, unmetalled trans-frontier cart roads cost from 6*l.* 10*s.* to 12*l.* 10*s.* per mile. These are pre-war figures and may probably be doubled to represent present costs.

REGULATIONS FOR WHEELS AND LOADS.

Traction Engines.

A traction engine must have driving wheels with tyres not less than 2 ins. in width (each wheel) for every ton of its weight. Above 14 ins. the width may be reduced in proportion as the diameter of the wheels exceeds 5 ft. The maximum weight is 14 tons (or 16 tons fully equipped), for which 18-in. driving wheels are required with wheels 7 ft. 9 ins. diameter. Three trailers may be used, besides the water-cart. Trailers having cylindrical wheels, with springs, and with 9-in. tyres, may carry 9 tons 6 cwt. each. Borough and county councils may permit heavier loads than the above (locally), and single articles imposing greater weights may be carried, at the carrier's risk as regards recovery of damages caused by 'excessive weight.' Traction engine driving wheels must be 'cylindrical and smooth-soled, or shod with diagonal cross-bars of not less than three inches in width, nor more than three-quarters of an inch in thickness, extending the full breadth of the tyre, and the space intervening between each such cross-bar shall not exceed three inches.' This arrangement provides for almost the maximum amount of deadly effect upon the road with the minimum of advantage to the owner of the traction engine. Pending the repeal of this provision every effort should be made to induce owners of traction engines to provide their wheels with wooden strips, let in between, and flush with the diagonal cross-bars. On the average, such wheels would probably bite better than those with diagonal cross-bars only, and would tend to lessen the wear and tear of the engine itself, as well as to reduce the loss due to successful claims for damage done to roads by 'extraordinary traffic.' New engines should be provided with wheels having diagonal bars much closer together, an arrangement which does not seem to restrict the use of traction engines for road work—as distinct from field work—when such engines are registered as 'heavy motor cars.'

Heavy Motor Cars.

This term applies to motor vehicles weighing more than two tons unladen, and refers to three distinct classes: (1) Motor wagons or lorries; (2) traction engines not exceeding 5 tons in weight and in other respects fulfilling the requirements; and (3) delivery vans and omnibuses, provided with rubber tyres and allowed to travel at 12 miles an hour.

Maximum Weight, Heavy Motor Cars.—The vehicle unladen, 5 tons; vehicle and trailer, unladen, 6½ tons; 'axle-weight' (any pair of wheels with their full load), 8 tons; axle-weight of trailer, 4 tons.

Tyre Widths.—These are: minimum for the vehicle itself, 5 ins.; minimum for the trailer, 3 ins. All wheels: ½ in. for each 'unit of axle-weight,' which is, 7½ cwt. for a 3-ft. diameter wheel, 1 cwt. more for every 12 ins. more, and 1 cwt. less for every 6 ins. less diameter. These rules do not apply to wheels with rubber tyres.

The following table gives for each of the wheel diameters in the first column: the unit axle-weight proper to that diameter, the heaviest load, in each case, permitted on the minimum width of tyre, and the width of tyre required for the maximum axle-weight of 8 tons for the vehicle and 4 tons for the trailer. Intermediate values can easily be found.

TABLE VII.—GREATEST AND LEAST WEIGHTS AND TYRE WIDTHS UNDER THE HEAVY MOTOR-CAR ORDER, 1904.

Diameter of Wheels.	Unit of Axle Weight.	Axle Weights.		Width of Tyres.	
		Heavy Motor Car.	Trailer.	Heavy Motor Car.	Trailer.
Ft. Ins.	Cwts.	Tons. Cwts.	Tons. Cwts.	Ins.	Ins.
2 0	5½	2 15 8 0	1 13 4 0	5 15	3 7½
2 3	6	3 0 8 0	1 16 4 0	5 13½	3 7
2 6	6½	3 5 8 0	1 19 4 0	5 12½	3 6½
2 9	7	3 10 8 0	2 2 4 0	5 11½	3 6
3 0	7½	3 15 8 0	2 5 4 0	5 11	3 5½
3 3	7¾	3 17½ 8 0	2 6½ 4 0	5 10½	3 5½
3 6	8	4 0 8 0	2 8 4 0	5 10	3 5
3 9	8¼	4 2½ 8 0	2 9½ 4 0	5 10	3 5
4 0	8½	4 5 8 0	2 11 4 0	5 9½	3 5
4 3	8¾	4 7½ 8 0	2 12½ 4 0	5 9½	3 5
4 6	9	4 10 8 0	2 14 4 0	5 9	3 4½
4 9	9¼	4 12½ 8 0	2 15½ 4 0	5 9	3 4½
5 0	9½	4 15 8 0	2 17 4 0	5 8½	3 4½
5 3	9¾	4 17½ 8 0	2 18½ 4 0	5 8½	3 4½
5 6	10	5 0 8 0	3 0 4 0	5 8	3 4

Tyre Width, Camber, and Pressures.—The value of width of tyre in reducing the pressure of the wheel upon the road crust is not fully operative even on flat roads, since the wider the tyre the more frequent are the occasions on which it fails to bear for its full width on the slightly uneven surface of the road. The effect of width in reducing pressure has a more definite limit on hard roads with a sharp camber, unless the road is wide, with sloped and not barrelled camber, and the vehicle travels wholly to one side of the middle line. On a barrelled camber, the vehicle does not rest upon the full width of its tyres even when keeping to one side of the road. Traction-engines traversing narrow roads tend to wear them into a pair of parallel flat strips, with an exaggerated cambered part in the middle. Since the reduction of bearing width is a serious matter, and, apart from unusually troublesome vehicles and difficult roads, applies to many classes of vehicles on properly made roads, and even to tyres no wider than 3 ins. or 4 ins., it is necessary to take it into account in the development of vehicles and roads. In the first place it is desirable to find what is the average relation between diameter and tyre width as regards pressure, a relation which depends upon the modulus of elasticity of the crust and other factors. Since, however, wheels of large diameter punish the road less than wheels of small diameter, even when the actual pressures (load per sq. in. of surfaces in contact) are somewhat higher, the position generally may be no worse even if we fail for some time to establish the true relation and make the tyres of large diameter wheels somewhat too narrow. A general increase in the diameters of the wheels of many vehicles is, then, to be aimed at. The principle is recognised in the regulations for heavy motor cars. Next, as regards tyres which are necessarily very wide, attempts should be made to design the vehicles so that some duly constrained side play, angular or bodily, is permitted to the wheels. The side play which the wheelwright, with centuries of experience behind him, gives to cart and wagon wheels, greatly tends to economy in the wear and tear of the vehicles and the road, side play taking place to a large extent between the greased axle and the hubs of the wheels instead of occurring as a rubbing of the wheels on the road. The play is partly axial, but to a small extent angular, and allows of a slight adjustment to the cambered road. Thirdly, dead flats on roads (no gradient) should, as opportunity arises, be converted to gradients of 1 in 200, or steeper, and the camber reduced. On steeper gradients, and with some

road crusts and subsoils, a nearly flat camber is suitable, and in other cases a slight tilt to one side only may be given to the whole crust.

Tyre Widths for Horse-drawn Vehicles.—Under the Highways and Locomotives Amendment Act, 1878, a county authority may make regulations for tyre widths of vehicles drawn by animal power, in proportion to the loads carried. The following examples of such regulations are taken from 'The Surveyor and Municipal and County Engineer,' April 21, 1911.

TABLE VIII.—TYRE WIDTHS FOR CERTAIN LOADS—*Four-Wheeled Vehicles.*

Counties.	Gross Load.		Width of Tyre.	Counties.	Gross Load.		Width of Tyre.
	Tons.	Cwts.	Ins.		Tons.	Cwts.	Ins.
Northumberland, Cardigan (winter)	2	11	3	Kesteven	3	19	3
Cardigan (winter), Northumberland	2	19	3	Derby and Somerset	4	1	6
Salop, Lancs, and Kesteven	2	19	2½	Westmoreland, Cardigan, and Montgomery (winter)	4	1	6
Devon, Somerset, Westmoreland, Montgomery, and Cardigan (summer)	2	19	—	Westmoreland, Cardigan, and Montgomery (summer)	4	1	4½
Devon, Somerset and Derby	3	1	4	Gloucester	4	1	4
Lancashire	3	1	3½	Northumberland	4	1	3½
Notts and Northumberland	3	1	3	Salop and Kesteven	4	1	3
Salop	3	1	2½	Somerset, Montgomery, Cardigan and Westmoreland	5	1	9
Kesteven	3	1	2	Derby, Notts and Lancs	5	1	6
Notts	3	11	4½	Northumberland	5	1	5
Derby	3	11	4	Kesteven	5	1	4½
Lancs and Northumberland	3	11	3½	Gloucester, Devon, and Salop	5	1	4
Salop	3	11	3	Lancs	6	1	9
Kesteven	3	11	2½	Derby	6	1	7
Notts	3	19	4½	Salop and Notts	6	1	6
Somerset, Derby and Lancs	3	19	4	Northumberland	6	1	5
Lancs and Northumberland	3	19	3½	Kesteven	6	1	4½

TABLE IX.—TYRE WIDTHS FOR CERTAIN LOADS—*Two-Wheeled Vehicles.*

Counties.	Gross Load.		Width of Tyre.	Counties.	Gross Load.		Width of Tyre.
	Tons.	Cwts.	Ins.		Tons.	Cwts.	Ins.
Notts	1	1	3	Notts and Derby	2	11	6
Salop	1	1	2½	Montgomery, Westmoreland and Cardigan (summer)	2	11	4½
Westmoreland (winter)	1	11	4½	Gloucester	2	11	4
Notts, Devon and Somerset	1	11	4	Montgomery, Westmoreland and Cardigan (winter)	2	17	9
Cardigan (winter) and Northumberland	1	11	3	Montgomery, Westmoreland and Cardigan (summer)	2	17	6
Montgomery and Westmoreland (summer)	1	17	4½	Kesteven	2	17	4
Lancs	1	17	3½	Montgomery, Westmoreland and Cardigan	3	1	9
Cardigan	1	17	3	Derby	3	1	8
Kesteven	1	17	2	Salop and Lancs	3	1	6
Derby	2	1	4½	Kesteven	3	1	4
Northumberland and Somerset	2	1	4				
Salop	2	1	3½				
Somerset	2	11	9				

TABLE X.—LEGAL SPEED LIMITS OF MOTOR VEHICLES.

Class of Vehicle.	Miles per Hour.
Single vehicles under 2 tons weight	20
Single vehicles with rubber tyres, exceeding 2 tons :—	
With axle weights up to 6 tons	12
" " " 8 tons	8
Single vehicles with hard tyres :—	
2 to 3 tons, unladen	8
Over 3 tons, unladen	5
With axle weights 6 to 8 tons	5
Any vehicle drawing a trailer	5

Passenger vehicles are not allowed to draw trailers.

PROPOSED RESTRICTIONS.

In 1915 a Departmental Committee of the Local Government Board considered the subject of the weight, construction and speed of 'heavy motor cars' and 'road locomotives,' and the restriction of heavy traffic on unsuitable roads, and this is a matter which will doubtless be dealt with in the near future.

TABLE XI.—STEAM ROLLERS

(Ordinary Loads and Dimensions in Working Order.)

Description of Roller.	Driving Wheels.				Front Rollers (as a whole).				Wheel Base.		Width Rolled.	
	Diam. in Ft.	Tread of each, Ins.	Load on both, Tons.	Load per In., Cwts.	Diam.	Tread in Ins.	Load in Tons.	Load per In., Cwts.				
					Ft. In.				Ft. In.		Ft. In.	
'Ten-ton'	5½	16	7·25	4·5	4 0	49	3·75	1·6	11 2		6 4	
'Twelve-ton'	5¼	16	7·9	4·9	3 10	49	4·3	1·7	11 3		6 4	
'Fifteen-ton' or 'Sixteen-ton'	6	20 / 18	9·75	4·9 / 5·5	4 6	54	6·5	2·4	12 8		7 4	

The Rating of Motor Cars for Taxation.

AMENDED REGULATIONS (1913).

1. For the purposes of these regulations the horse-power of any motor car deriving its motive power wholly from an internal combustion engine worked by a cylinder or cylinders shall be taken to be :—

(*a*) In the case of a single-cylinder engine the horse-power attributable to the cylinder of the engine.

(*b*) In the case of an engine having two or more cylinders the sum of the horse-powers attributable to the separate cylinders.

2. The horse-power attributable to any cylinder of an internal combustion engine shall be deemed to be equal to the square of the internal diameter of such cylinder measured in inches divided by a numeral.

(*a*) In the case of a cylinder having a single piston, the numeral used as divisor shall be 2·5.

(*b*) In the case of a cylinder having two pistons, the numeral used as divisor shall be 1·6.

3. The horse-power of any motor car deriving its power wholly from a steam engine shall be taken to be proportional to the effective heating surface of the boiler supplying steam to such engine, at the rate of 1 h.-p. for every 3 sq. ft. in such effective heating surface, and the effective heating surface shall be taken to be :—

(*a*) In the case of a boiler having horizontal or approximately horizontal tubes, the whole of that surface of the tubes which is exposed to the flame or hot gases.

(*b*) In the case of a boiler having vertical or approximately vertical tubes, half of that surface of the tubes which is exposed to the flame or hot gases.

4. Any motor car deriving its motive power from an electric motor or motors shall be deemed to be of a horse-power exceeding 6½ but not exceeding 12.

5. In measuring cylinders and boilers, and in calculating horse-power, fractions of inches and feet and fractions of a unit of horse-power are to be taken into account.

6. Where it appears that in consequence of the exceptional design or construction of the engine of any motor car the horse-power as calculated under the preceding rules is substantially less than the average power which the engine would develop in continuous use on the road if there were no restrictions on speed other than those imposed by the car itself, then such average power shall be taken as the power of the car.

The Committee also suggest that motor cycles be taxed according to horse-power, and that the horse-power be determined as in the case of motor cars, a new class comprising cars of less than 5 h.-p. being added to the Schedule of Rates of Taxation in the Finance Act, 1900–10.

RESISTANCE TO TRACTION.

The results of traction experiments made by accepted authorities are collected and discussed in an appendix to the second edition of 'Road Making and Maintenance' (*Aitken*). Generally, the resistance to traction is much less with wheels of large diameter than with wheels of small diameter, and usually, taking good and bad roads and all kinds of weather, the tractive effort with wide tyres is considerably less than that with narrow tyres. With respect to the vehicles of many countries, and of some English counties, the word 'normal' might be substituted for 'narrow' in the above lines.

TABLE XII.—INFLUENCE OF DIAMETER OF WHEELS.

The following figures are taken from the results of experiments by General Morin:—

Pull in lbs. per 2,000 lbs., at 3 miles an Hour.

Nature of Road.	Cart without Springs. 4½-inch Tyres. Diameter of Wheels in Inches.		Wagon without Springs. 4½-inch Tyres. Diameters of Wheels in Inches.	
	64	80	36 and 60	44 and 78.
	Lbs.	Lbs.	Lbs.	Lbs.
Earth road, very good, nearly dry	55	44	74	63
Gravel road, loose gravel on firm earth	143	114	190	163
	168	134	225	192
	180	144	241	206
Broken stone road :—				
In good condition, dry	30	24	40	34
Firm, little soft mud	55	44	74	63
Portion worn out, thick mud	80	64	107	92
Stone block pavement, fair condition, dry	25	20	34	29
Thick oak bridge floor	35	28	47	40

Influence of Width of Tyres.

Under some circumstances narrow tyres offer less resistance to traction than wide tyres; but these circumstances are unusual, or in themselves undesirable, or do not hold in all kinds of weather. For instance, narrow tyres will cut through stiff mud on a hard bottom better than tyres which, though wider, are not wide enough to ride over the mud by pressing it in a rut of moderate depth. Wheels will run along ruts made by wheels with wider tyres but not in ruts made by narrower wheels. Narrow tyres will run through a layer of loose stones on a hard road better than wide tyres and they allow of the vehicle being pulled out of a slough which would hold down wider felloes. Generally, however, tyres classed as wide offer less resistance than tyres classed as narrow, and the more so when their cumulative effects on soft roads are considered, as well as the comparison of the moment. It is important to note that a vehicle which, on soft roads, can be pulled more easily than a similar vehicle with narrower tyres, will still show some advantage on a hard and firm road, or will not be at a disadvantage; and it must not be overlooked that in hot weather the tractive effort with narrow tyres is very high on asphalt pavements and even considerably increased on tarred roads.

The following are extracted from a table in which 1½-in. tyres and 6-in. tyres are compared the figures given being 'resistance to traction in lbs. per ton' (*Ira O. Baker*).

TABLE XIII.—INFLUENCE OF WIDTH OF TYRES.

Description of Road.	Width of Tyres. 1½-inch.	6-inch.
	Lbs.	Lbs.
Broken stone road, hard, smooth, no dust, no loose stones, nearly level	121	98
Gravel road, hard and smooth, few loose stones, size of black walnuts	182	134
Gravel road, new gravel, not compact, dry	330	260
Gravel road, wet, loose sand, 1 in. to 2½ ins. deep	246	254
Earth road, loam, dry, hard, no dust, no ruts, nearly level	149	109
Earth road, loam, stiff mud drying on top, spongy below	497	307
Earth road, clay, dry on top, but spongy below	618	464
Earth road, clay, stiff, deep mud	825	551
Earth road, loam, mud, 2½ ins. deep, very sticky, firm below	251	325
Earth road, clay, sloppy mud, 3 to 4 ins. deep, hard below	286	406
Earth road, loam, dry, loose dust, 2 ins. to 3 ins. deep	90	106

Tractive Effort on Different Pavements.

These experiments (*Ira O. Baker*) provide important comparisons between pavements differing only in condition as well as between pavements of different kinds. For instance, the pulls in lbs. per 2,000 lbs. were: on considerably worn wood blocks, 36; on asphalt at 42°F., 34; on oak plank, nearly new, 32; and on smoothly-dressed granite blocks, 30; but the 32 for oak plank rose to 38 when it had been worn down ¼ in. in many places; and the 34 for asphalt rose by 3 lbs. with a rise of 10° in temperature, and was 70 lbs. when the temperature was 84°F. On cedar blocks, a pull of 50 lbs. when they were covered with ¼ in. of crushed gravel, rose to 90 lbs. with a ½ in. covering of silica pea gravel. On a brick pavement, ½ in. of dust raised the pull from 17 lbs. to 31 lbs. On a steel plateway a pull of 19 lbs. was raised to 28 lbs. by ⅛ in. of fine dust, and to 40 lbs. by ⅛ in. of powdered stone. Out of a number of brick pavements the best required a pull of 17 lbs. per 2,000 lbs., and a granite macadam crust only 18 lbs.

Rubber and Iron Tyres.

Experiments made in 1895 showed that the tractive effort is less with pneumatic tyres than with solid rubber or iron, and that the advantage increases with increase of speed. Iron tyres were better than solid rubber on good or ordinary pavements, but required a somewhat greater pull on bad, irregular pavements.

Effect of Speed.—Experiments by Morin showed an increase of tractive effort with increase of speed. The differences between the pulls required at a walk and those at a fast trot were considerable, as were those between the pulls at a 'trot' and 'a fast trot.' Other experiments showed a very small increase with pneumatic tyres and much greater increases with solid rubber and with iron tyres. Since springs are generally used for the speedier and lighter vehicles comparisons between vehicles with springs and those without springs but of a similar character are not often made. It is difficult to say at what speed the provision of springs becomes an advantage as regards wear of the road, and this depends partly upon the diameter of the wheels and the width of tyres per unit load. Badly fixed springs may have a bad effect upon a road.

COUNTRY ROADS.

Widths of Roads.—The total width given to a new road should include provision for: (1) the carriage-way; (2) the supports for the edges of the crust, such as rough stone or gravel shoulders or 'water tables'; (3) such further strips of grass or other margin as may be necessary to hold drifted snow, to provide for the admission of air currents, or to keep sub-soil water at a suitable distance from the crust; (4) footways; (5) side ditches where necessary; (6) catch-water drains where necessary; (7) fences, and, where other parts of the width are not available, places for planting shade and shelter trees. The need for each of these or its relative importance depends upon climatic conditions, soil, the cost of land, and other circumstances. Some authorities give 30 ft. as the minimum width between fences and, generally, an ample width is desirable for economy of maintenance and efficiency.

Width of Carriageway.

Width of Carriageway.—This may be decided by the width needed for safe passing of vehicles, or that which with the materials available is the most economical. The latter may be a matter of maintenance only, or it may depend also upon the cost of construction or reconstruction. Maintenance is usually, or should be, the dominating factor. Under the item 'carriageway' in the provision for total width allowance may be made for probable future widening, having regard to the relative economy of widening alternative routes or making new roads. Such a provision for future widening should always be fully considered in laying out a new road in a flat or gently rolling country. In hilly country, and especially on sidelong slopes, it is usually better to allow no such provision between fences, since the future can best be cared for by acquiring land only, the cost of obtaining a given width of flat strip by two earthworks being usually very much less than that of obtaining the same width by one earthwork. For the one wide strip the quantity of earthwork is much greater and the rate for cutting may be higher, while the retaining wall will cost much more than the two smaller ones. With flat earth slopes the total width required may be as great or greater.

Width in Relation to Maintenance.

Width in Relation to Maintenance.—The best width, having regard to the nature and amount of the traffic, will depend upon the materials available and their cost. One width will give a minimum maintenance cost with a hard and costly stone, a greater width may be the most economical for a softer stone. First decide the economical width for each material, and then compare costs. When the traffic is moderate the 'weathering' factor may be important and on little-used roads it may predominate. Usually the economic width for sandstone and flint crusts is greater than that for limestone crusts, partly because the more porous crusts made with sandstone and flint may have flatter cambers, tending to a good distribution of the traffic, and partly because the quartzy materials wear into large grains which are only removed by the heavier rains, while limestone crusts wear into fine stuff which is readily removed. The exposure of a wide surface is, therefore, usually undesirable with limestone crusts. Similar comparisons are furnished by harder stones, such as quartzites, compared with granites which contain much felspar. The nature of the subsoil affects the width, especially if the cost of construction or reconstruction has to be considered, because with soft subsoils, not tolerant of high pressures under heavy wheel roads, it may be better to reduce the pressure by making a deep crust than to reduce rutting of surface wear by making a wide crust. In choosing a material for a given width, imposed by circumstances, the same considerations apply, looked at the other way about.

Width and Traffic.

Width and Traffic.—The width may be decided, partly or wholly, from the traffic point of view. In making a mountain road, or widening a narrow lane, the ruling width may be that necessary for the passage of two loaded vehicles, and, as a matter of safety, a road with walls may be made somewhat wider than a similar road with hedges. In such cases it is important that the edges of the crust should not be steeply cambered or weak, since such conditions reduce the effective passing clearance. On roads of this kind the carriageway is that imposed by the total width, but it is often good economy to carry the actual crust right across, with such change in the nature of the materials near the edges as may be suggested by the relative importance of the margin as a support to the crust or as a surface drain. Apart from such cases, and taking that of the normal carriageway on a road with suitable margins, the widths suitable are, for a very large mileage of country roads generally, either that required for one vehicle at a time, but sufficient for the cautious passing of two vehicles, or that required for the frequent and convenient passing of two vehicles. In both cases, it is desirable to give ample support to the edges, either by under-trenching, with a filling of large-gauge stone, or by continuing the crust under the turf beyond the incidence of wheel loads. Using the word as applying to the measurement from surface margin to surface margin, the following widths are regarded as suitable. For single-line traffic, 12 ft. is a width largely adopted in many countries. Ten feet or even 8 ft. may be sufficient for roads with very little traffic if the soil is suitable and the margins readily accessible. A gravel soil, especially if these strips be sifted a little when the road is made, offers this advantage, as does, under some conditions, a sandy soil. On clay soils, the width of the crust itself should be such as to admit of the passing of vehicles, or the edges of the crust may be broken down by rutting of the clay just beyond. Clay is not easily brought back to its proper level. On account of its hardness in dry weather, however, it makes good margins for narrow 'fair weather' roads, which may be made with a very narrow metalled or gravelled width. For roads on which the passing of two vehicles must be readily accomplished, a width of 16 ft. is very usual, and 15 ft. is enough in countries in which the ordinary vehicles are narrow. In France a considerable mileage of important roads has a carriageway of about 16½ ft., but this may, in some cases, be the economical maintenance width. The usual width of the carriageways of the French Routes Nationales is from 5 to 7 metres, or say, 15½ to 23 ft. An important system of English county roads has an average width of 17½ ft. On very steep gradients it is often desirable to have very wide carriageways.

Camber.

Camber.—The amount of camber may be stated as the total rise in the width of carriageway or as the average slope of the sides. A rise of one-fiftieth is often recommended, or slopes of 1 in 25. Slopes of 1 in 32 have been recommended as an average. Actually, the amount of camber depends upon the nature of the crust, the gradient, the nature of the traffic, the widths and the climate, and no general rules can be laid down. It may be noted, however, that a rise of more than 1 in 50 should not be given without careful consideration to roads with much motor traffic, while there are some roads, especially those with quartzy crusts on steepish gradients, which require hardly any camber. The barrelled camber has the advantage that the suppore which the earth margins give to the edge of the crust is less nearly horizontal than in the cast of a sloped camber (two slopes joined by a small arc in the middle of the road), and the barrel form resists somewhat better a tendency to the formation of ruts on each side of the middle line. The former advantage disappears, however, if the edges of the road crust are suitably designed, and the barrelled camber has the serious disadvantage that the slope becomes steeper near the edges where cyclists ride when they are being passed by motor cars. On roads with much motor traffic the mud is soon shifted to near the edges, this part being often somewhat slippery. An elliptic camber has sometimes the disadvantage that it is too flat in the middle, especially on roads with much motor traffic and of such width that a strip of about 5 ft. width in the middle gets the main part of the wear of the off-side wheels of cars going both ways. The camber with two slopes seems suitable for a greater range of roads than the barrelled form, and the advantage of a tilt to one side only must not be overlooked in the special cases to which such a device applies.

Drainage.

Specific works may come under one or more of the four heads: (1) interception of surface waters which would flow across the road, or along it, or would flood it; (2) interception of seepage water; (3) surface drainage of rain-water from the road and its margins: (4) under drainage of the road bed and crust. In a soil neither very stiff nor very porous, a side ditch may perform all four duties. When on the uphill side of a road it acts as a catch-water drain. It also acts as a channel to carry to suitable outlets the rain-water gathered by the road. It may also intercept seepage water from the hillside or the land above a sunken road; and, if near enough to the edges of the crust, and deep enough, it provides for the establishment of an hydraulic gradient from the crust and the road bed to the ditch bottom or water-level. On a stiff soil it does not perform this function, except to a very limited extent and when deep and close to the crust. In a stiff soil, therefore, a deep ditch is not needed for this purpose, the water being dealt with by surface flow, aided by the filling of all hollows, and by evaporation. A deep ditch may, however, play the part of an interceptor of seepage water, forced through a fairly stiff soil from wet places on the hillside above. Apart from such a purpose a ditch on a stiff soil may be shallow if the necessary capacity can be given by the width available. The stiffer the soil the deeper the drain, up to a point at which it will no longer drain the road bed and may be quite shallow. It is then very important to fill hollows on all parts of the roadside which are above the level of the underside of the crust.

Catchwater Drains.—It is often desirable to have a catchwater drain clear of the uphill fence so that the bank may not be torn by water running down it. The outlets may be clear of the road, or lead to the larger cross culverts. Such a drain and, when necessary, side chains, may be provided with 'drops' or falls of hard materials, to reduce velocity and scour. Catchwater drains are much needed on many English roads.

Side Drains.—For a given soil there is a slope at which water hardly moves through it. To provide for flow, a slightly *steeper* slope, carried from the bottom of the side ditch or shoulder drain, should reach the edge of a waterproof crust, or the middle of a porous crust. This determines the depth of the ditch, or the depth at which the pipe drain in the shoulder trench lies; or it decides which of them will be the cheaper to make and maintain. On porous soils the natural slope of the land may provide drainage; but even then care must be taken that when the road runs directly down the slope there is some easier way for the water to flow than down the road bed and out through the crust; and sudden changes in the soil must be noted and provided for. On a long slope of this kind, on a porous soil, some diversion of subsoil water by trenches filled with clay may be useful, where the water can be turned to a depression in the ground outside the road. Pipe cross drains may be used for the same purpose and if backed by clay on the downhill side will be very effective.

Another function of the side ditch is to prevent seepage water from entering the road bed from surrounding land: and such a ditch may be necessary in addition to a surface catchwater drain on the hillside above it. On a hillside road the drainage from the road bed may be amply provided for on the downhill side, and the side ditch on the uphill side may then be puddled on both sides and bottom, or only on the side towards the road, according as it does or does not deal with seepage water in addition to surface water. As a seepage water interceptor a pipe drain covered in may be quite effective; but in filling in the trench, if the soil is used, any muddy stuff should be put on the side towards the road, and the raw earth on the uphill side

Drainage of the Crust.—This comes under one or two of the main divisions of drainage; surface drainage being the more important on stiff soils, and under-drainage on porous soils, while it may be necessary to make the most of both on soils such as those marls and silts which are at once receptive and retentive of water. If the crust is more porous than the road bed and subsoil it will probably be desirable to provide a drainage course, or bottoming, such as a telford pavement. If the soil is more pervious than the crust such a provision is not likely to be necessary for drainage. When the crust or its bottom course allows of drainage to the sides, but not very rapid drainage, this may be aided by giving a camber to the road bed, which may also be desirable so as to provide sufficient thickness of crust where it is most wanted, towards the edges. Cross-drains are seldom economical. If they are farther apart than the width of the road they are less effective than shoulder drains: if they are nearer together than the width of the road, they cost more than one shoulder drain, or, as they have to be placed deeper, as much as both shoulder drains. Cross drains require many more outlets than shoulder drains. Camber is given to a road so that water may drain from the surface of the crust. Too steep a camber may defeat its object by driving traffic to the middle, so that ruts are formed. When a road is puddled by much traffic in drizzly weather, camber is ineffective as the little ridges of mud hold up the water. On a slope of 1 in 24 a $\frac{1}{2}$-in. ridge of mud holds up a foot-wide puddle; on places worn flat very much wider puddles. Under such conditions the best drain, on an impervious road, is a broom. When the crust is porous and self-draining a very small camber is sufficient, but the outlets to the side ditches must be sufficiently numerous and effective, or the road will be flooded during rain. On a road with no gradient it may be necessary to have flush edges, that is, no raised water-tables; but with a very small gradient this is unnecessary as the water will flow to the outlets. To prevent scour and the cutting back of their beds till the crust and road bed are attacked, the outlets through turf margins must not carry the water with too high a velocity. The formation of a delta with the road washings may be allowed, the stuff being cleared away when the level of the delta becomes too high and the outlet is ineffective. Generally, a porous road crust need not have a steep camber if any of the following conditions are fulfilled: (1) good drainage of the crust, with shoulder drains if necessary; (2) a porous subsoil with a low, normal subsoil water level; (3) a porous subsoil on an embankment, or drained by effective side ditches. An *impervious* crust need not have a steep camber—(1) on gradients, especially if fairly steep; (2) if kept clean; (3) in dry and in showery climates or where the rains are usually heavy, as opposed to damp and drizzly climates.

Drought.

Owing to the presence of clayey matter as a constituent of many important road stones the weakness of road crusts when too wet has received more attention than their weakness when too dry. Sandy materials, on the other hand, resist wheel loads and disturbance generally better when damp than when dry. Drought, therefore, injures such roads, including crusts made with quartzite, sandstones, and flints (apart from dust as a nuisance). Other roads may be seriously affected by droughts which cause a crumbling of the margins, or the gaping of a clay soil, the effects being observed when heavy rains occur. Drought may be combated by shade, either of trees or hedges, and by care in carrying out drainage so that the soil is not made too dry. Dead leaves are beneficial on sandstone and flint roads, and various materials, more or less imitative of the gummy decay of the leaf, have been used to lay dust, or to bind road crusts of a sandy character.

Road Crusts and Wearing Layers.

By Francis Wood, M.Inst.C.E., F.G.S., author of 'Modern Road Construction.')

The macadam roadway is the prevailing structure throughout this and other countries; it is a cheap and easily attainable form of construction, but whenever it has been subjected to heavy traffic it has failed and has had to be substituted by asphalt, wood, or sett paving.

A wood paved road under a certain amount of heavy traffic will wear probably $\frac{1}{4}$ in. per annum, whereas a macadam road would wear in the same period under the same traffic about 2 ins.; a granite sett pavement would wear to a lesser degree than the wood pavement.

The wear of a macadam roadway is due 10 per cent. to the traffic, 5 per cent. to the weather, and 85 per cent. to internal attrition. The stones in a macadam road are not bound together, they are merely consolidated, and the material which fills the interstices only aids in retaining the stones in their positions, but these become so loose that the traffic coming upon them causes them to grind on each other, so that they diminish in size until the structure largely becomes small material, the weather conditions then developing this fine material into a slimy mud.

The wear due to tractional resistance is extremely small, the wear to internal attrition extremely large, the presence of moisture aiding the latter process. This being the case, if the stones can be bound together by a good binding agent, so that this movement and grinding action is prevented, this form of wear will disappear and the cost of maintenance will materially decrease.

Tar spraying has in some slight degree assisted in this object, but 'tar macadam' is much more satisfactory.

Bituminous compounds of bitumen, sand, cement, etc., are still more effective, and the asphalt macadam which has been laid in Fulham and other places has had success up to a limit.

Investigation has demonstrated that large stones should not be included in the surface of a structure which is to be submitted to heavy traffic and which includes bitumen as a binding agent. The material is not at fault, but the large size of the stones causes the failure.

No constituent particle should be of greater size than ¼ in. diameter in the wearing surface, which in the ordinary road need not be more than 1 in. thick. But such a wearing surface has no inherent stability and would not have a satisfactory result unless provided with a substantial base. This can be provided by a bituminous concrete, which may be formed of the usual macadam sized stones and such fine material as would be found in the macadam portion of the structure of a road; this may be mixed with a pitch softened by tar oils to a state that is flexible when cold, or a composition of pitch, bitumen, etc., may be used. This base need be only 2½ ins. to 3 ins. thick, and if it is placed on a substructure which is reasonably solid in all conditions of the weather and free from moisture, such a road will successfully withstand traffic of a heavy character for very many years and at a low cost of maintenance.

Roads on these lines have been built in Fulham and in the country (Surrey, etc.,) at a cost of between 4*s.* 6*d.* and 5*s.* per sup. yard (pre-war prices).

APPROXIMATE GRADING ANALYSIS.

Base.		Wearing Surface.	
45 per cent.,	1½ in. stone	200 mesh,	18 per cent.
25 ,,	½ in. chippings	100 ,,	17 ,,
25 ,,	sand	80 ,,	17 ,,
5 ,,	200 mesh	50 ,,	35 ,,
		30 ,,	6 ,,
		20 ,,	4 ,,
		10 ,,	3 ,,
100 ,,			100 ,,

By weight the amount of bitumen would be 9 per cent. and 14 per cent. respectively.

The cost of wood paving in Fulham may be gathered from the fact that the Council allotted 10 years ago the sum of 4,000*l.* per annum to maintain 160,000 sq. yards; this has now been increased to 202,268 sq. yards without increase in allotted sum. Any surplus not spent is placed to a reserve; this reserve at the end of 1916 was 12,000*l.*, sufficient to repave one-seventh of the whole area. The average cost is therefore 5*d.* per sup. yard per annum; the cost of the heaviest trafficked road does not exceed 9*d.* per sup. yard, even allowing for the concrete foundation. It has been stated in the Committee Rooms of the Houses of Parliament that local authorities have roads which cost over 2*s.* and which are of macadam.

The motor bus damages the road to no greater extent than the steam lorry, if as much, as many of these have steel tyres.

(*Francis Wood.*)

The Strength Crust and the Wearing Layer.

The word 'foundation' is often misapplied. It should properly be used for the special bottoming that is necessary on soft soils, and sometimes on clayey soils, in order that a distinction may be made between such preparatory work and the construction of the actual 'crust,' which plays the principal part, or is the sole agent, in distributing the load. The essential nature of the crust is the same, whether it distributes the wheel loads upon the natural soil or upon a bottoming of hard material, and whether it receives the wheel loads in their full intensity or partly distributed by a carpet of considerable strength and thickness. Thus, the so-called 'concrete foundation' of a wood-paved road is really the strength crust, and the wood-paving is the carpet or wearing layer, and on a bad natural soil the concrete crust will need something in the nature of a foundation proper.

These considerations are of special importance at the present time, because recent developments point to the value of an ordinary waterbound broken stone crust, as what is called 'a foundation' for a carpet of bituminous materials, or stone setts, wood blocks, or bricks; and it must be remembered that the extent to which the loads are spread by any of these carpeting materials is so small that the old crust should be brought up to its full strength, as a strength crust sufficient for the traffic. Further, in using materials with bituminous binders, it is possible to effect so good a bond with water-bound materials in the lower course that the whole thickness acts as one crust, the square of the depth of this crust being the measure of its beam or slab strength as well as of its effect in spreading the load as a cone. It is, therefore, very necessary that such a condition should not be confused with the condition when the wearing layer of relatively costly materials is quite thin, only thick enough to serve as a wearing carpet. There is a strong tendency towards the adoption of this plan, because the cost of making one set of materials quite effective in wear-resistance and another set effective in strength and resiliency tends to be less than that of using materials which have both qualities.

Comparisons of Pavings and Carpets.

When, therefore, we weigh the evidence in favour of stone setts, wood blocks, bricks, bituminous carpets and so forth, it must be remembered that these materials form the wearing layers and, in some cases, shock-absorbing layers, and that the value and economy of each class of paving or carpet depends largely upon the nature and cost of the strength crusts on which it can successfully be laid.

The Waterproof Carpet.

In view of the importance of possible developments in the practice of laying wearing carpets on water-bound, broken-stone road crusts, it is necessary to consider whether such a crust continues to maintain its strength when it is no longer water-bound. If a road-bed is so situated that no water will reach it from beyond the edges of the crust, and if a layer is spread over it, effective in preventing the access of water to it but not preventing the gradual escape of all moisture, the crust will become dry and be no longer water-bound. Tarred roads which are thus rendered very dry sometimes compare unfavourably as regards corrugations with other roads which have been less effectively waterproofed, or which are kept moist by the creep of water in the road bed. In places where this too dry condition of a water-bound crust is a serious matter, a slightly porous brick, or a paving with slightly porous joints, is worth consideration, or the replacement of the whole crust with bituminous-bound materials.

Water-bound Broken-stone Crusts.

In the ordinary water-bound, broken-stone road crust the wearing layer is simply the top part of the strength crust. Usually, the stone in this top portion is harder or tougher than that in the rest of the crust and differently graded, and it is therefore necessary to take care that the change in materials as the crust is built up from the first course of stone is not accompanied, at any stage, by the formation of a plane of division. There must be no hard surface and no parting layer within the crust when it is finished.

Binding Material.

One of the most frequent causes of the too rapid wear of both new crusts and repairs, especially repairs, is lack of sufficient binder. The use of too much earthy binder instead of a gritty binder, such as stone dust, is also a cause of too rapid wear. The former weakness, lack of binder, is, however, a much more serious and widespread weakness than is usually supposed, especially on secondary roads in some areas and by-roads and lanes in other areas. If no suitable binder is available when holes are filled with loose stones, it is better to use mud than to use nothing at all, and mud is better than dry earth, because the water comes to the top.

Segregation.

It is very necessary to avoid segregation. A mixture of stone and binder, supplied in the proper proportions, is ineffective, and fails to form a tough and durable crust if there are patches in which one size or another is in excess of its proper proportion. This applies also to the finishing of a road surface by filling considerable hollows with chips before the final rolling. The crust when finished should be practically mass concrete with its own true surface. The final touches should be of the nature of grouting, not rendering.

The Telford Road Crust.

In the case of a crust of the telford type, in which large stones are placed with their lengths transversely to the road, the spaces packed with chips or gravel, and a layer of broken stone and binder formed over this, it is necessary either to treat the lower course as a foundation and to make the upper course adequate as the strength crust, or, which is usually better, so to form the upper course that its stones penetrate the gravel or chips of the lower course, and the whole thickness forms one strength crust. On very bad, wet ground the former plan is the better, that is, to treat the lower course as a foundation only, and make it not too compact for effective drainage.

Single Crust Roads.

In addition to the preceding notes, it may be pointed out that if the single crust is to have a fair chance of success, the road bed should be very carefully prepared. It should be brought to the correct shape, usually cambered, and it should be made of the same degree of hardness throughout, by ramming, and adding earth and ramming again, and, where necessary, by loosening before ramming. When a bottoming of gravel, or large stones, or a mixture of both, is used there should still be some preparation of the natural soil if it is of varying degrees of density; and it should always be brought to about the right camber. Otherwise, material is wasted, and the degree of resistance in the foundation varies, tending to the development of humps and hollows in the crust. Hollows in the road-bed should not be filled with the foundation material, but with material as similar as possible to that in the road-bed itself. Road crusts should *not* be thinner near the edges than they are in the middle part.

TAR-MACADAM.

There are in ordinary use two ways of forming a bituminous-bound road crust. If the stone is coated beforehand with the tar, and allowed to stand until the coating is tacky, the crust can be 'consolidated' with a moderate amount of rolling. The extent of consolidation will partly depend upon the extent to which the stone is graded. As a rule, very little grading is regarded as necessary, the surface being closed by rolling in ¾-in. to ½-in. material. The other kind of crust, formed by 'pitch grouting,' usually consists of stone graded through a wider range, the smallest material being sand, added with the pitch, which is poured in hot. The surface is closed with small material. For tar macadam the 'general directions' issued by the Road Board recommend at least 60 per cent. of 2½-in. stone and not more than 30 per cent. of 2½ to 1¼ in., the remaining 10 per cent. not being in the body of the crust but being used for closing (¼ to ½-in. stuff). For pitch-grouting, the sizes are: 60 per cent. of 2½ ins. and 35 per cent. of sizes *graded* from 2½ ins. to 1¼ in. In addition 5 per cent. of chips are to be used for closing after the pitch has been grouted in. The body of the crust will, however, contain a proportion of sand, equal, by measure, to that of the pitch. The quantity of pitch varies according to circumstances, but ordinary quantities, noted in the 'general directions,' are 1¼ gall. per sq. yd. for a 2-in. layer, 1⅛ gall. for a 2½-in. layer, and 2 galls. for a 3-in. layer.

The pitch used (Road Board specification) is to be thinned with tar oil in the proportion of 10 to 12 per cent. (of the whole). The pitch itself should not have more than 22 per cent. and must not have more than 24 per cent. of free carbon. The tar oil must have a specific gravity between 1·065 and 1·075 at 20° C. and must be commercially free from light oils and water.

Tar-macadam road crusts have been successfully made with stone of considerably smaller average sizes than the above.

Cost of Plant.—Very simple apparatus is used in many cases for drying the stone before tarring it, and for coating it with the tar. In other cases, specially devised plant is used. A plant at Stourbridge, including a 2-ft. revolving cylinder, 10 ft. long, inside a 3-ft. shell, and driven by a 5½ h.p. gas-engine, cost 350*l.*, and with it some 40 to 50 tons can be heated and mixed by three men in one day. The proportions of cost shown by a recently erected plant at Belfast are: broken stone and screenings, 60·67 per cent.; tar, etc., 11·49 per cent.; wages and cartage, 21·25 per cent.; tools, oil, etc., 1·94 per cent.; repairs and fittings, 4·65 per cent.

Limiting Gradient.—The limiting gradient for tar-macadam depends a good deal upon the materials employed, and upon the special means taken to provide good foothold. For ordinary tar-macadam about 1 in 25 is regarded as the limiting gradient, but 1 in 30 or even 1 in 35 is sometimes preferred. In considering the possible use of tar-macadam in country districts where it is unknown, regard must be had, as in the case of any hard paving, to the nature of the road surfaces to which the horses of the district are accustomed. London horses, for instance, have learned to skate, and to walk on the tips of their toes.

Material.—There is no doubt that, on the whole, materials which are slightly porous and have roughish surfaces give better results than denser and smoother materials. It is impossible to say to what extent this is due to porosity, or how much of the effect is due to roughness. Certain limestones and tough slags of the right quality have given good results for many years. The results of recent work with Kentish ragstone and other siliceous stones should be watched.

SURFACE TARRING.

Surface tarring has been found to be the best means hitherto tried of abating the dust nuisance, and it considerably reduces the noise of traffic. To get the best results tarred roads should be swept, and the dust removed, at intervals of a few days in dry, calm weather. The dust from tarred roads is, in several respects, worse than ordinary dust.

General Policy.—At the present time the best results seem to follow the practice of tarring once only, except where the tarred surface is completely worn off before the autumn, and allowing the tar and some of the stony material of the crust to wear down by the winter. This prevents the road from becoming jolty and provides good foot and wheel-hold for the winter. Tar which remains below the surface is not harmful, but excess of tar, producing a greasy emulsion on a hard road, or thick, greasy mud in damp places, is to be avoided.

Conditions affecting Results.—Wind and free play for local air currents are needed to keep tarred roads cool. Roads exposed to wind and air currents will suffer little from sunshine; roads in airless places suffer much from sunshine. Roads in cuttings, and those flanked by walls and close palings, and especially if they run across the direction of prevailing winds, suffer from high temperatures in summer and from greasiness due to damp conditions in winter. Shade in itself is beneficial, both as regards the effects of sunshine and with respect to the frequency of frosts. Porous road crusts absorb more of the tar than impervious crusts, which reduces difficulties arising from high temperature or from greasy conditions. A dry and showery climate is much more favourable than a damp and drizzly climate, as regards both the work of tarring and the results obtained. Tarring is more useful in parts of England where it is difficult to make drought-resisting roads than in those parts where such roads are made with success.

Cost of Tarring.—An ordinary cost is 1*d.* to 1½*d.* a square yard, a good deal of work being done at about the lower figure or a little over. In the year 1910–1911 the Buckinghamshire roads, 117 miles, cost ¾*d.* per square yard. Main roads often cost about 50*l.* a mile per annum for tarring alone. No substantial saving in total expenses has yet been shown to follow the practice of surface tarring, except as regards town scavenging (see 'Town Paving'). One gallon of tar is usually sufficient for spraying 5½ square yards of road surface, and a gang of six men with a 320-gallon boiler will tar-paint 5,000 square yards in an ordinary day's work. For recent figures see 'Costs data' at the end of this section.

Nature of the Tar.—Tar of the right consistency can be got by adding pitch to crude tar. It is better, however, to get the proper consistency by heating the tar until the lighter constituents are driven off, since their presence is in itself a source of trouble. The Road Board specifications describe two tars, No. 1 and No. 2, the latter, which is the denser, for use only on warm, dry roads, and suitable for painting worn places. Tar No. 1 has a specific gravity of 1·16 to 1·22 at 15° C. (1·19 recommended). It must have not more than 1 per cent. of water and ammoniacal liquor. The free carbon should not exceed 16 per cent. by weight. Tar No. 2 has a specific gravity of 1·18 to 1·24 at 15° C. (1·21 recommended), and must be free from water. The free carbon should not exceed 18 per cent. by weight.

Method of Application.—The road should be dry and warm. The surface should be brushed hard to remove all dust and loose particles, the second brushing being in some cases done with soft brooms. The tar in the boiler should be at about boiling point, say 220° to 240° C. Its temperature when delivered on to the road will depend on the mode of application. Various machines are employed, with the object of getting good penetration, delivering hot tar under pressure; but the amount of penetration depends much more upon the nature and condition of the crust. Machines resembling water-carts do best on smooth roads which are true to shape. The spray, a fine rose at the end of a flexible tube, is used by hand, with the advantage that the quantity of tar applied to different parts may be varied if necessary. The spray is very effective in coating the stones with a clinging film, after which the required thickness can be sprayed on as desired. It works well on uneven roads. Tar can be successfully applied by hand, poured on and brushed in. The Road Board recommends three-gallon cans with spouts not less than 1½-in. diameter.

Blinding the Surface.—When the freshly tarred surface can be left for some hours undisturbed, this is usually done. On porous roads, or where the quantity used is small, it may be sufficient to blind this somewhat hardened surface with dust only: clean dust from the preparatory sweeping or destructor dust. In other cases, varying quantities of sand are added, or stone chips, the quantities and method of application depending upon the extent to which these materials are intended to form a mat with the tar, or to act as a temporary protection. Chips may crush to a kind of filling coat, or they may be used so as to form a definite mat. Sand may be added so as to form a mat, or may be strewn a little at a time so as to avoid the forming of a too sandy and brittle mat, but at the same time to act as a parting layer between the tar film and the wheels of vehicles. Some of the sand, if not removed by rain, may be swept off when the tar has hardened and the road is becoming dusty.

Recent Practice : Crusts and Carpets.

The following descriptions of recent practice relate in some cases to the whole road covering and in other cases to carpeting only. In some cases only a few details are given, or references to places and dates. In other cases the methods are described at some length, or are abbreviated from descriptions by the engineers responsible for the work. The views taken of the merits of particular materials or methods are not necessarily shared by the Editor, nor by the writer of the section.

At the present time neither plain nor reinforced concrete is in use in the British Isles, except in a few places, the total mileage being quite small and almost or entirely in towns. The value of plain concrete for streets with only a small traffic has been proved by experience in several places, and attention is properly being directed to the advantages of reinforced concrete as a strength crust, which is a matter quite independent of its efficiency in providing also the wearing surface. It may be remarked that, with reference to the use of concrete roads in the United States, Professor Blanchard and the members of the Highways Construction Board, New York, are to a large extent opposed to the construction of concrete roads. The case for reinforced concrete roads is forcibly put by Mr. J. F. Butler (p. 731).

A material which is almost unknown as a paving for roads or streets in this country is brick It has its advocates, however, and therefore finds a place in the following pages, the nature of the brick to be used and the method of laying the pavement being fully described by Mr. Alfred B. Searle (p. 732). Brick roads have been used in the United States for many years, and the trend of opinion in that country during the next year or two will probably have considerable weight with British road makers.

Bituminous Macadam Roads.

(Abbreviated from a description by A. W. Dean, Chief Engineer, Massachusetts Highway Commission.)

A gravel, or suitable sand, foundation may not be needed. If a stone foundation is made on a clay subsoil, the interstices should be filled with gravel to prevent the clay working up.

First course.—The thickness of the first course, of broken stone, depends on local conditions. For instance, if a 10-in. foundation is necessary, the first course of the crust need only be about 2 ins. thick. If no foundation is necessary, the first course of the crust should be not less than 4 ins. after rolling, or 6 ins. for heavy loads. The stones of this course may vary from $\frac{1}{2}$ in. to 3 ins. in longest dimensions, but the percentage of the small size should be very small. For a course of 4 ins. or less a good size is $1\frac{1}{2}$ ins. to $2\frac{1}{2}$ ins. In a 6-in. course the maximum size may be 3 ins.

The voids must be well filled with fine material to prevent loss of bitumen from the upper course. The surface must be even. All surplus dust and fine material must be swept off, leaving the upper stones bare to receive the second, or bituminous, course.

Bituminous course.—The second, or bituminous, course to be 2 ins. thick, or 3 ins. for heavy vehicles in large volume. The stone must be of good quality and uniform in character, and the sizes not segregated. The best results are obtained with stone from $\frac{3}{4}$ in. to $2\frac{1}{2}$ ins., the larger sizes predominating, although the course be only 2 ins. thick. The rolling should be thorough.

Application of bituminous material.—This is applied at a temperature of 250° to 300° F., with a mechanical distributor, with a force equivalent to that obtained under a pressure of 30 lbs. per square inch, or more. The amount per square yard is from $1\frac{1}{2}$ gallons on a 2-in. course to about 2 gallons on a $2\frac{1}{2}$-in. course. It should be very evenly spread.

Surfacing.—The surface should be lightly but completely covered with pea stone ($\frac{1}{2}$-in. stone) and thoroughly rolled with a 15-ton roller, if available, and if the stone is of hard quality, and a lighter roller for a poor quality stone.

Seal coat.—A seal coat of the same quality of bitumen is applied, half a gallon per square yard, covered with pea stone, and finished off with a heavy roller. When the bitumen is applied the stone must not be wet but may be moist. It must be clean and free from dust.

Bituminous Carpetting.

(Abbreviated from a description of work carried out in Kent. County Surveyor of Kent, H. T. Chapman, M.Inst.C.E.)

The work is done in two operations. The base coat of local stone, flint, scarified material, or clinker, mixed with bituminous material, is laid hot to form a nearly voidless concrete, not less than 3 ins. thick. For the carpet, sand, grit, or selected crushed clinker is graded between a 200 and a $\frac{1}{4}$-in. mesh and mixed with from 13 to 15 per cent. of bituminous material, and laid at a temperature of 300° to 350° F.

In a specific case, 1914, the base coat was 3 to 4 ins. thick, of crushed shingle and flint, $1\frac{1}{2}$-in. to $\frac{1}{2}$-in. gauge, coated with a pitch and tar mixture, 8 parts soft pitch to 3 parts tar. The carpet was $1\frac{1}{2}$ ins. thick, of grit 31 per cent., sand 56 per cent., and bitumen 13 per cent. All these ingredients were heated to 350° F. and mixed. The carpet was first cross-rolled and then consolidated with a 10-ton roller.

Costs.—Costs were, base coat, 2*s.* 6*d.*, carpet, 2*s.* 7*d.* total, 5*s.* 1*d.* per square yard, the prices of the materials being at practically pre-war rates.

The results have been very satisfactory.

According to the remarks of several speakers at a meeting of the Institution of Municipal and County Engineers, asphalt macadam, as a wearing surface for roads, should be laid in one coat. It can apparently be laid in one thickness of $3\frac{1}{2}$ ins. quite satisfactorily, whereas if put down in two layers the upper part creeps or peels off under traffic.

Slipperiness.

Slipperiness, especially in the autumn, is one of the defects of several types of surface-tarred and bituminous-bound roads. There is, as yet, very little agreement amongst road surveyors as to the best preventives. The thorough rolling in of stone chips when the road is tarred may be recommended, and crushed flint has been successfully used. Such measures may be taken in warm weather towards the end of summer. To a certain extent the possibilities of incorporating stony material in a tar film are limited by the necessity for the maintenance of that film, as such; but this does not apply to bituminous-bound roads.

Tarco.

'Bi-Tarco' and 'Tarco B' are specially prepared compounds (supplied by *Fleming & Co. Glasgow*), the former for grouting and the latter for road painting, for which it is exceptionally well suited. The compounds are noticeable for wearing qualities and for cheapness and safety

SPECIFICATION OF WORKS TO BE DONE AND MATERIALS EMPLOYED IN CONSTRUCTING A WOOD-PAVED ROADWAY.*

Sand.

1. The sand is to be pit or Thames sand of the best quality, clean and sharp, and free from loam or clay.

Thames ballast.

2. The Thames ballast is to be clean, the stones are to be regular in size, and the proportion of sand to stones is to be to the satisfaction of the surveyor.

Cement.

3. The cement is to be best Portland cement, complying with the British Standard Specification, of a pale grey colour, specific gravity of not less than 3·15, or 3·10 one month after grinding, and capable of sustaining an average tensile stress of not less than 400 lbs. per sq. in. of sectional breaking area seven days after gauging and immersion in water twenty-four hours after gauging, and 500 lbs. per sq. in. of section twenty-eight days after gauging, and is to be delivered into the works in sacks, weighing 200 lbs. net, marked with the manufacturer's name. It is to be ground so that, when sifted in a sieve of 5,776 meshes to the sq. in., there shall not be a residue of more than 3 per cent. Sufficient cement is to be stored in or near the works for a fortnight's use fourteen days before the commencement of the work, and an equal quantity is to remain stored during the progress of the work until only sufficient work remains to be completed to use up the cement stored during the work. The cement will in all cases be tested by the surveyor with Adie's Testing Machine, and the average taken of at least six tests, and any rejected by him is to be at once removed from the work without any question being raised.

Concrete.

4. The concrete is to consist of one part of Portland cement and six parts of clean Thames ballast (large stone to be in no greater proportion than 60 per cent.), the parts being ascertained by measurement of their volume in proper measures, thoroughly mixed together in a dry state on a timber stage not less than 10 ft. by 10 ft. for half a cube yard of concrete ; water is then to be added from water-can through a rose, and the whole again thoroughly mixed until a proper consistency is obtained. If the concrete has commenced to set before being used, it is not thereafter to be used except as ballast.

Cement grout.

5. The cement grout is to be made of one part of Portland cement, as described, and three parts of clean sand (the parts being ascertained by measurement of their volume in proper measures), thoroughly mixed together in a dry state on a proper banker, and made as previously described for concrete.

Cement mortar.

6. The cement mortar is to be composed of one part of Portland cement, as before described, and three parts of clean, sharp sand mixed on a proper banker, as previously described for the concrete, and used while fresh.

Thames ballast for top dressing.

7. The Thames ballast for top dressing is to be crushed and then screened through a ¾-in. mesh sieve.

Excavation.

8. Excavate the whole of the carriageways as directed, including cressings, channellings, etc., wherever necessary, to the proper depths and levels as required, carefully separate the macadam, set aside for re-use, fill into contractor's carts, and deposit where directed within a radius of one mile from the job.

Strip roads.

9. Carefully strip roads of all old wood blocks and cart away to wharf, depot, or where directed.

Existing channel.

10. The existing granite kerb, or sett channels, paved areas, binding courses, crossings, and concrete under, where described or necessary, is to be taken up and carted at the contractor's expense to the wharf, depot, or as directed. So much of the existing kerb as approved by the surveyor is to be set aside, rejointed, and relaid on Portland cement concrete 8 ins. thick, making out with new 12-in. by 8-in. kerb to be obtained from the Borough Council.

* Extracted, by permission, from 'Modern Road Construction,' by Francis Wood, M.Inst.C.E., F.G.S., Borough Surveyor of Fulham.

Floating.

11. The surface of all existing floating is to be picked perfectly free from all pitch, asphalt, old floating, soft concrete, etc., in such a manner that the new floating will not alter the existing contour or increase the height of existing foundations unless otherwise directed; the same is then to be brushed clean and free from dust, well drenched, and finished with a floated surface, $\frac{3}{4}$ in. in thickness, composed of one part Portland cement to three parts sand, as described for cement grout. The surface of new concrete to be finished in a similar manner with proper and approved contours and with satisfactory falls to gullies. The finished level of this surface to be exactly 5 ins. below and parallel to the intended surface of the wood pavement. All floating after completion to be left exposed for seven days or longer, as considered necessary by the surveyor.

Laying of wood blocks.

12. After the rendering specified above has been laid sufficiently long to become thoroughly hard and set, it is to be brushed clean, the block to be dipped in a hot mixture of pitch and creosote, or anthracene oil, and then to be quickly laid in position, butt-jointed, and in parallel courses across the road.

Wood blocks.

13. The timber from which the blocks are to be cut shall be carefully selected fourth Swedish close-grained, yellow deals, bearing the shipper's mark, and which must be described in the current *Timber Trades Journal List*. The blocks shall be of uniform size and weight and uniformly cut. The timber shall, before being cut, be submitted to the surveyor or his representative, and no blocks shall be sawn from timber of which the surveyor or his representative has not signified his preliminary approval. Four samples sealed and marked with the contractor's name and shipper's marks shall be left at the surveyor's office for his examination with the tender, and any blocks which may be brought on to the works and which may be inferior to these samples may be rejected by him. The surveyor or his representative shall have full power to reject any blocks, either at the cutting yard or at the creosoting works, and he shall also have power to reject any blocks after delivery on to the site of the proposed works, or at all or either of these places, whether creosoted or not, or which are not creosoted in a satisfactory manner, or to the extent of 10 lbs. of creosote to the cubic foot of timber, or with a satisfactory quality of creosote. The blocks when cut shall be truly square and shall measure 9 ins. by 5 ins. by 3 ins. off the saw. The annular rings shall not be less than 10 to the inch, not more than 2 ins. of sapwood shall appear in any block, and the percentage of such in bulk shall not exceed 15. They shall also be free from large, loose or dead knots, shakes or other defects, and shall not contain more than 5 per cent. of waney edges. Timber that has not been properly stored and become dry will not be accepted. Care must be taken to prevent the blocks from becoming wet, as any in such a condition either from rain, bilge water or other causes, must not be creosoted.

Creosoting and creosote.

14. The Council shall appoint a representative to examine the blocks, who shall have power to cause the blocks to be spread on the ground before being creosoted, and to cut or mark as arranged by the surveyor any block he may reject. The blocks after being approved may then be creosoted, a sample lot with each charge being weighed both before and after the process. The creosote to be forced under pressure into them until they have absorbed an amount of 10 lbs. to each cubic foot, and in such a manner that any block split open will show the creosote to have penetrated right through.

15. The creosote is to be a liquid heavy oil of tar, commonly called creosote, and is to contain not less than 8 per cent. of tar acid. It will be subjected to analysis, and the contractor is only to use such as may be approved by the analyst.

Expansion joint.

16. The contractor shall provide wooden battens $1\frac{1}{2}$ in. wide by the depths of the blocks, which shall be used in the channel against the kerb, and the blocks shall be paved up to it. After the paving has been grouted in, these battens shall be withdrawn and the space left shall be filled in with clay and gravel as directed.

Examination of blocks.

17. After the wood blocks are in position they will be examined by the surveyor, and no portion of the paving is to be grouted in with either the asphalt or cement until this examination has been made and sanction given for the grouting to commence.

Composition between joints.

18. Approved pitch or bitumen is to be heated and run between the blocks to a depth of 3 ins. as directed.

Cement grouting.

19. The blocks are then to be grouted with cement grout until the joints are thoroughly filled

Protect for forty-eight hours.

20. After the completion of the grouting the work is to be protected for at least forty-eight hours before the road is thrown open for traffic.

Crossings.

21. At the intersection of other streets the crowns of the adjoining streets are to be adjusted to run into the crown of the roadway that is being paved for that purpose, and whenever it may be necessary, the existing roadways or part or the whole of the crossings to the adjoining streets are to be taken up and relaid with similar materials or with new blocks as directed, making good with new where necessary in the opinion of the surveyor without any extra charge over the amount of the contract. At such intersections the wood blocks are to be laid diagonally as may be directed by the surveyor.

Binding courses.

22. Two courses of 7 ins. by 5 ins. by 3 ins. granite setts laid on 6 ins. concrete are to be laid as a binding course wherever the wood pavement would otherwise abut against a macadam road. The contractor may retain, re-dress, and re-use sufficient of the old setts on the works for this purpose as approved by the surveyor.

Two coatings of siftings.

23. After the road has been inspected a coating of $\frac{3}{8}$-in. crushed ballast for top dressing as specified is to be spread over the wood pavement, and the pavement is to remain fenced in as described, before the road is thrown open to the traffic. An additional coating is afterwards to be spread over when directed.

Facilities to be afforded for traffic and passengers.

24. The work shall be done at such times and in such portions as the surveyor shall direct, and the workmen shall at all times afford such facilities for local traffic or the convenience of shopkeepers as may be directed by the surveyor.

Wood to be laid to proper falls.

25. The contractor must lay the blocks to such levels as are sufficient to satisfactorily convey away all water that may collect on the surface and in the channels at any time, and the work will not be taken over by the Council until this is done to the surveyor's satisfaction.

Contingencies.

26. Provide the sum of £ for contingencies. This sum to be deducted in whole or part from the contract as may be directed. The contractor must fill in the annexed schedule so far as the items refer to any portion of this contract.

Incidental works.

27. The contractor's price per superficial yard for supplying and laying wood blocks 9 ins. by 5ins. by 3 ins. off the saw is to include for all necessary cuttings, raising manhole tops, ventilators or other covers, stop-cock boxes, gully tops, making good to existing wood paving, relay crossings, binding courses, and all works incidental thereto and necessary in order to leave a perfect and satisfactory job.

CONCRETE ROADS, INCLUDING WEARING SURFACE.

Leith.—Burgh Surveyor, J. R. Findlay.

Concrete roads have been used in Leith for more than thirty years, for side roads with little traffic. Concrete has not been found satisfactory under heavy traffic and has had to be replaced by other materials. The concrete crusts are 6 ins. thick, without reinforcement, the finish being 2 ins. of granite and cement, 2 to 1.

Some Examples.—The following examples of the use of concrete are from an article by R. L. Bendall, *The Surveyor*, August 29, 1919 :—

Inverness.—Approach road to goods station, laid in 1865.

Edinburgh.—Gillespie Crescent, laid thirty-four years ago, 10 ins. thick, mass concrete.

Exeter.—Gandy Street, a narrow street, concrete, with stone channels, thirty years old, in good condition.

Dundee.—Streets near the cattle market, thirty years old. Traffic not heavy; condition good to-day.

Melbourne.—Reinforced concrete laid about 1914. Cost of maintenance, ½*d.* per square yard per annum. Carries ordinary town traffic, including motor omnibuses.

Long Island, New York, 1917.—Reinforced concrete road 5 ins. to 7 ins. thick across boggy ground.

Dunfermline.—Reinforced concrete road on clay foundation. One-third of a mile long The only expense in maintenance is tar-spraying. Carries ordinary town traffic, motor omnibuses, and naval base traffic.

Chester.—Many successful concrete roads. The City Council has decided to spend 30,000*l.* on reinforced concrete roads.

Costs.—Costs in 1919 were from 10*s.* to 16*s.* per square yard.

Further Examples and Data.

Dundee.—A piece of road 142 ft. in length has been constructed of unsurfaced reinforced concrete, 27 ft. wide. The crust is 6 ins. thick, the concrete being 1 to 4½; the aggregate of equal portions of 1½-in. and ¾-in. whinstone. The expansion joints are made of sheet steel and two ½-in. layers of bitumen. There is ⅛ in. of bitumen at each kerb. Various kinds of reinforcement were used, ½-in. rods being found preferable to mesh reinforcement.

Canada.—Toronto-Hamilton road. This stretch of road is 35½ miles long. It was opened in 1917. It is of one-course concrete; 1 : 1½ : 3. The thickness is 8½ ins. in the centre to 6 ins. at the edges.

Michigan (Wayne).—Two-course concrete roads were made, the bottom course 4 ins. thick, in 1 : 2 : 5 (limestone), the upper course 2½ ins. thick, in 1 : 2 : 3 'cobblestone.' This method has been *superseded* by a one-course crust, 6½ to 8 ins. thick, of 1 : 2½ : 3 concrete (granite and pebbles). The expansion joints are made with two soft steel plates, 3 ins. by ½ in., and two thicknesses of 3-ply asphaltic felt, ½-in. thick, the full depth of the concrete.

Tilbury.—Dock Road. An experimental section of reinforced concrete road was opened in Dock Road, Tilbury, at the end of 1917. This piece of road is 130 ft. long by 27 ft. wide and the crust of reinforced concrete is 7 ins. thick, the reinforcement, in the form of 'fabric,' being 1½ ins. from the surface. The cost was just under 10*s.* 3*d.* per square yard. It is reported that after more than a year's service this road has proved very satisfactory, free from mud or dust, and costing nothing for repair or maintenance.

London-Dover Road.—Experimental stretches on the London-Dover main road were reported as not proving very successful, partly owing to the concentration of traffic on one-half width after twenty-eight days for setting. It was found that results were improved when a 6 to 1 mixture for the whole thickness was modified to a 6 to 1 mixture for the lower 4½ ins. and a 3 to 1 mixture for the top 1½ ins.

Some Difficulties.

As regards country roads of ordinary width serious difficulties in the use of a concrete crust which is also the wearing layer, are: the necessity for allowing time to set; the practical difficulty in keeping one-half of the road closed for a month or more; and the resulting joint of hard to fresh concrete.

Alternatively, there is the difficulty, both in law and fact, of completely closing a road in long stretches for a period of a month *plus* the time it takes to get through with the concreting of the stretch of road in question. There is also the question whether concrete is suitable for the surface of a road to carry the mixed traffic of to-day, including fast-travelling heavy lorries.

Generally.—The weakness of joints, as regards strength and wear, is one of the chief difficulties in the adoption of the concrete wearing crust. It has been found that joints become 'frayed,' and open up. As in the case of strength crusts of concrete under paving or carpeting, the whole crust of concrete suffers from the effects of street openings and local repairs, but in a greater degree. These difficulties are not insuperable, but they are serious, especially as regards country roads.

The use of reinforced concrete instead of plain concrete as the strength crust for city streets, with asphalt or wood-paving, is a matter quite apart from its use as the strength *and wearing* crust, and it is probable that a considerable amount of such work will be carried out. Where frequent openings of the road are inevitable, however, it seems to present the difficulty that although, with suitable tools, it is easier to cut through 6 ins. of reinforced concrete than 10 ins. of plain concrete, the problem of making good the opening is more troublesome.

Recent Costs.—Concrete roads have been made at the following costs: Southwark, 12*s.* 6*d.* per square yard; Chester, 10*s.* 6*d.*; Dunfermline, 10*s.* 6*d.*; Tilbury, 10*s.* 3*d.*; Dundee, 8*s.* 10*d.* per square yard.

REINFORCED CONCRETE IN ROAD CONSTRUCTION.

(J. F. Butler, A.C.G.I., A.M.I.C.E., M.C.I.)

Reinforced Concrete Foundations for Surfaced Roads.

A reinforced concrete foundation was laid to a road in Manchester in February 1913. Since that time this form of construction has been tested in a number of other towns, and is gradually coming into general use.

The advantages are that great strength is obtained with a small thickness of concrete and that the construction is resilient.

Concrete 6 ins. thick has generally been used with a light wire fabric reinforcement. The reinforcement gives tensile strength to the concrete, and thus provides the resilience, while increasing the strength.

The reinforcing fabric has main wires 3 ins. apart and cross wires 12 ins. apart, and is in rolls 7 ft. wide. It is generally laid with the main wires parallel to the length of the road. It has also been laid with the main wires at right angles to the length of the road, but the other direction seems to be theoretically more correct.

A reinforced concrete foundation is sufficiently strong to spread the heaviest wheel load over so large an area that the pressure on the ground beneath is a very small amount, and not sufficient to cause subsidence even in very bad ground. This method of construction appears to be the most satisfactory and the most economical way of dealing with heavy traffic, and is now extensively used.

Reinforced Concrete Roads.

Complete concrete roads are now very largely used in the United States. The area constructed during 1909 was less than 400,000 sq. yds., and the area constructed during 1914 was about 19,000,000 sq. yds. The annual area from 1914 to 1918, in spite of the reduction of work owing to war conditions, has been rather more than 20,000,000 sq. yds., and figures from 1919 onwards are considerably greater.

The construction has been in most cases adopted after careful investigation as to the success of the existing roads.

In some cases plain concrete is used, in other cases it is reinforced. The latter construction is now more general as it allows the joints to be placed farther apart, in addition to increasing the strength of the road.

In the unreinforced roads, transverse joints are placed about 30 ft. apart to allow for expansion and contraction. They are an absolute necessity, but unfortunately are a source of weakness in that they provide the starting-point for fracture of the surface.

In the reinforced roads expansion joints are placed a greater distance apart, and in many cases they have been omitted altogether with entirely successful results. It appears that they are not necessary if reinforcement is used, and particularly if the surface is coated with tar spray and granite chips.

The subsoil is well drenched before laying the concrete, and on clay ground 2 ins. or 3 ins. of ashes are rolled in to provide a certain amount of drainage.

Usually the concrete is 6 ins. thick and the reinforcement is wire fabric or steel mesh.

The concrete is mixed in the proportion of 3 parts broken stone, $1\frac{3}{4}$ parts sand, and 1 part Portland cement. The broken stone is graded to pass a $1\frac{1}{2}$ in. ring, and the sand is graded from $\frac{1}{4}$ in. down to dust.

The surface is finished by use of a wooden float. It is the latest practice to squeeze the excess water out of the concrete by rolling it with a light roller in the direction at right angles to the length of the road. The roller is made from sheet iron about 6 ft. long and 8 ins. diameter, and weighs rather more than $\frac{1}{2}$ cwt. After the excess water has been squeezed out in this way the surface is further finished off by pulling a belt across it, the belt being worked by a man at each side of the road and being moved with a combined transverse and forward movement. The belt is an ordinary canvas or rubber belt about 8 ins. wide. The concrete is protected from too rapid drying by use of tarpaulin or other covers for 24 hours, and then 'cured' for 10 to 14 days by regular watering, a 2 in. layer of sand or similar material being laid on top to hold the water.

Drainage of town roads is provided in the usual way and country roads are drained by means of effective side ditches.

The length of time for keeping the road closed to traffic depends on weather conditions. The minimum is 14 days in warm weather, but may be much longer if hardening conditions are unfavourable.

The average maintenance cost of concrete roads in the United States is $\frac{1}{2}d.$ per sq. yd. per annum. It is probably better to tar-spray the roads once a year at a cost of about $1\frac{1}{2}d.$ per sq. yd. per annum (pre-war figure).

Concrete road surfaces are ideal for suburban side streets and for secondary country roads. They are also proving suitable for heavy motor-lorry traffic on shod wheels, and they are undoubtedly successful for any kind of traffic on rubber tyres.

The advantages of concrete roads are economy in first cost, economy of maintenance, freedom from dust in summer and from mud in winter, absence of side slip, and the provision of an agreeable running surface.

BRICK ROADS.

(By Alfred B. Searle, Author of 'Clays and Clay Products,' etc.)

Bricks used for roads should be so hard and tough that they will resist the crushing, vibration and abrading actions of the traffic. They must be made of suitable materials, such as marls and shales, which yield a dense, heavy and impervious product when burned. The clays used for common building bricks are quite unsuitable, being too readily disintegrated. Bricks for roads should consist of a tough skeleton, the interstices of which are filled with a tough slag-like mass of great viscosity when molten. When broken, such bricks show a dull, glassy structure, not readily affected by vigorous blows from a hammer. The modulus of rupture R should be at least 1,500 lbs. per sq. in. It is determined by supporting a brick on two knife edges 1 in. apart, and applying a pressure or load of W lbs. by means of a central knife edge. If the brick is b in. wide and d in. deep,

$$R = \frac{3Wl}{2bd^2}.$$

As bricks vary considerably, the test should be made on at least six bricks. When ten bricks are placed in a rattler with 10 cub. in. balls each weighing $7\frac{1}{2}$ lbs. and 245–260 smaller balls of 1 lb. each (making a total of 300 lbs. of balls) and the rattler is rotated 1,800 times at 30 revs. per min., the pieces of brick more than 2 ins. diameter should not weigh less than 75 per cent. of the original weight of the bricks.

The size of bricks used for roads is of minor importance, provided that all the bricks used on a job are sufficiently uniform, i.e., with a variation of not more than $\frac{1}{2}$ in. in length and $\frac{1}{4}$ in. in depth and width. The size usually preferred is 9 ins. by $4\frac{1}{2}$ ins. by 3 ins.

The best results are obtained by using bricks with lugs (A, A, figs. 1 and 2) and a double bevel or bulge of $\frac{3}{32}$ in. at each end to ensure a joint at least $\frac{3}{16}$ in. wide at the top and the bottom

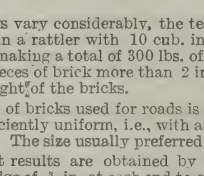


FIG. 1.

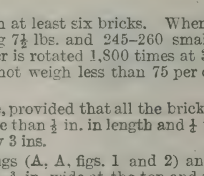


FIG. 2.

of the brick. These are no more expensive to make and they 'key' better than plain bricks. *Pressed* bricks should not, as a rule, be used for roads, as they are less durable than those made by the wire-cut process. Bricks should be laid with the rough, wire-cut sides vertical and in contact with the filler so as to ensure the latter being retained properly. This is almost impossible with the smoother surface possessed by pressed bricks.

CONSTRUCTION OF THE BRICK ROAD.

The *bricks* must be specially made for the purpose, and should possess the characteristics mentioned above. They should be gauged to ensure uniformity in size and their appearance should indicate that they have been uniformly burned.

The *foundation* of the brick road must be good and well drained. A 1:3:6 concrete foundation 6 in. thick is best, but an old macadam road, if well graded and rolled, is satisfactory.

The *cushion* or *bedding course* may be of (i) sand, (ii) sand and dry Portland cement, or (iii) mortar. A *sand bed* should not be more than $2\frac{1}{2}$ ins. thick and consist of uniform grains, and the sand used must be quite dry. It may be consolidated by rolling under a pressure of 15 lbs. per sq. in. A *cement-sand bed* should consist of 1 part of dry Portland cement to 3 parts of sand, well mixed in a dry state and spread on the foundation to a thickness of $\frac{1}{2}$ in., any surplus material being removed with a straight-edge. This bed must not be rolled. The bricks are laid dry on this cushion and are then saturated with water so as to cause the cement beneath to set. This kind

of cushion is better than a plain sand bed, as sand tends to leak away, but it is inferior to a good mortar cushion. A *mortar bedding course* is the best, but cannot easily be used on very steep inclines. The mortar should consist of a 1:4 cement-sand mixture made into a soft paste with water, which is laid on the foundation and well tamped with a tempering strike to consolidate it and give it the required camber. The bricks are laid on this cushion before it has had time to set and are then rolled. By this means the mortar is forced up between the bricks to a height of about $\frac{1}{4}$ in.

If the work is done expeditiously, the surface of the road will be much smoother than when either a sand or dry cement and sand cushion is employed; it will retain its surface indefinitely. The road will emit less noise when traffic passes over it, as the cement-mortar will not shrink materially nor form hollow portions which act as sound-reflectors. A road with a cement mortar cushion is practically monolithic, as the bedding course is really the top of the concrete foundations, and this is united firmly to the bricks above it, forming a 'beam' of much greater strength than when a sand cushion is used. Consequently, a much thinner foundation or sub-grade may be used and the cost of the road is correspondingly reduced, the actual saving being about 4*d*. per sq. yd.

Moreover, a considerable amount of time is saved in constructing the road, as there is no waiting for concrete foundations to set, as is the case when a sand or other dry cushion is used. Hence the cement-mortar or fine concrete bedding course is by far the most satisfactory.

The *bricks* should be laid with their lengths across the road, except at the intersection of two roads where this arrangement may be replaced by a diagonal one, the rectangular area common to both roads being divided into four equal rectangles and the bricks in these laid parallel to the diagonal of each rectangle.

Where one road meets another forming a T, the bricks in the upper part of the road common to both horizontal and vertical portions of the T should be laid as though the road were straight, whilst those in the lower portion of the common part of the road should be laid in a double diagonal.

The bond of the bricks should be made with half bricks; smaller closers should, whenever possible, be avoided.

When laying the bricks, they should be brought smartly against each other so as to effect a good fit with a thin joint. A skilled road layer will not need to use a mallet to drive home the bricks, but less competent men may require to do so occasionally. The courses may be straightened, when necessary, by placing a piece of timber in front of the bricks and striking it with a sledge-hammer until the bricks are driven into position. This treatment is not desirable, except as a means of reducing the bad effect of poor workmanship.

After a sufficient portion of the road has been laid, it should be watered with a hose and the damaged portions and soft bricks (the latter being easily recognised by their dryer appearance) marked for removal. After the bricks have been replaced, the road is rolled across and along in both directions so as to bed the bricks properly. Portions which cannot be effectively rolled should be tamped with an iron-shod rammer. The rolled portion of the road should be tested to ensure the surface being uniform, and any depression exceeding $\frac{1}{4}$ in. should be relaid. The spaces between the bricks should be examined, and if the cushion material has been forced up more than $\frac{1}{2}$ in. between the bricks that portion of the road should be relaid.

The bricks should next be wetted thoroughly, care being taken not to allow much water to pass between them.

The *joints* should be filled with a 3:4 mixture of Portland cement and sand, the latter passing completely through a No. 20 sieve, but being wholly retained on a No. 100 sieve. The cement and sand should be mixed in the dry state, the mixture delivered to the road and mixed with water in a concrete mixer as required. The resultant slurry should be received in spouted cans and poured from these in a thin stream between the joints of the bricks, the fluid being well brushed into the joints. Two or even three applications of slurry may be needed, and are better than filling the joints at once. The second and subsequent quantities of slurry should be more viscous than the first one, and between each application any surplus slurry should be pushed (not drawn) into the joints with a rubber squeezer. The men should not walk or stand on the finished roadway when at work.

Maturing is effected by covering the road with sand which is kept well wetted for several days, so as to allow the cement to set properly. If this precaution is not taken the cement will be weak through a deficiency of water. The sand then may be allowed to dry, after which it can be used on another section of the road.

The road should not be used until three weeks after filling, as if the grouting is disturbed before it has hardened sufficiently the joints will be weak and the road will not be durable. If a road must be open for traffic in a much shorter time, a cement filling is little or no better than plain sand which is merely brushed into the joints, a small surplus being left on the surface of the road to be worked into the joints by the traffic; or a hot mixture of tar and sand may be poured into the joints. If time is less important, the cement-filled joints are far the best.

The *cost* of making brick roads depends largely on local conditions, and the present abnormal cost of labour makes close estimating impossible. Assuming bricks are sold at 5*l*. per thousand

delivered to a station a mile from the proposed roadway, and that the cost of cartage from the station to the site is 6*s.* per thousand, the costs of constructing the road will be approximately :—

Sub-Foundation.	Pence per sq. yd.	Concrete Foundation and Cushion, 7 ins. thick.	Pence per sq. yd.	Bricks.	Pence per sq. yd.
Rough filling at 1*s.* 3*d.* per cub. yd.	6	Labour at 1*s.* 3*d.* per hr.	4	Cost of bricks on site	43
Surfacing and rolling	4	Cement at 6*s.* per barrel of 376 lbs.	14	Laying (piecework)	3
		Gravel at 6*s.* per cub. yd.	8	Rolling bricks	¼
		Sand at 6*s.* per cub. yd.	7	Relaying	¼
		Coal and water	1	Filler for Joints.	
				Cement at 6*s.* per cub. yd.	3
				Administration and Miscellaneous Expenses.	3
Total per sq. yd.					8*s.* 1*d.*

If a sand cushion is used instead of a cement-sand mortar one, the cost will be increased by about 2½*d.* per sq. yd.

If an old macadam road (after grading and rolling) is used as the foundation, the cost of the brick road would be reduced by about 1*s.* 1*d.* per sq. yd.

These figures are purposely liberal and can probably be considerably reduced in the near future.

Nature of Pavings used in London.

(Based on the Metropolitan Paving Committee's Thirteenth Annual Report for 1915 and previous experience.)

The London area offers a favourable field in the study of street pavements. The climate does not approximate to any of the extremes of the British Isles, the gradients are variable, but seldom very steep, and the market for materials is a good one. The traffic conditions which have to be faced include heavy dock traffic, very busy city traffic, that of residential roads, motor omnibus routes, and the great main roads leading to the country. Lastly, the reports of the Metropolitan Paving Committee provide the materials from which deductions can be made as to the value and importance of different pavements, and including comparisons as to wearing qualities and costs.

Creosoted Softwood.—Creosoted softwood, chiefly deal and fir, is largely employed, especially for main thoroughfares, and continues to prove satisfactory. In the earlier work a 6-in. 'foundation' of Portland cement concrete was usually provided, but this thickness is not now found sufficient for heavy traffic. Concrete 8 ins. thick is sometimes put down, but for heavy traffic it is usually from 9 to 12 ins. The thickness of the wood-paving is usually 5 ins., but often 4 ins. The blocks are often grouted with pitch, or dipped in a mixture of tar and pitch when they are being laid, but the most usual recent practice is to run the joints with a mixture of hot pitch and creosote oil. The following sizes of blocks are used : length, width, depth ; 9 × 3 × 5, 9 × 3 × 4, 8 × 3 × 5, 8 × 3 × 4.

Hardwood.—Hardwood pavings have proved very lasting, but are being superseded by softwood or other pavings. *Jarrah* has lasted ten years in the Euston Road, very heavy traffic ; 19 years in the Streatham High Road ; 10 to 14 years in heavy traffic thoroughfares in Hampstead ; and in other streets 13 to 17 years, and 19 years. *Karri* has lasted up to 21 years. These woods are inferior to softwoods as regards even wearing, and do not so readily take up the armouring of grit which so greatly aids in preventing slipperiness of softwood pavings. In 1915, *sectional Jarrah* blocks, which seem to be better than ordinary blocks of hardwood, were laid in pitch, on a 9-in. concrete 'foundation,' and in some cases re-cut. Jarrah blocks were re-laid.

Wood-paving is now often laid on a thin layer of asphaltic or bituminous material, between the wood blocks and the concrete.

Asphalt.—Compressed asphalt on a concrete strength crust or 'foundation' is one of the most important heavy traffic pavings in London. The thickness of concrete required varies as in the case of wood-paving, and is practically the same for similar traffic. The thickness of the asphalt carpet is usually 2 ins.

Bituminous layers.—Bituminous materials have been employed, in some cases, as carpeting layers only, but in other cases in crusts of sufficient thickness to take a share in distributing the loads. In 1915, only materials of this kind were used for street surface renewals in *Fulham*, usually 2½ to 3½ ins. of 'bituminous macadam' on a 12-in. foundation of hardcore, the surface

TABLE XIV.—COSTS OF PAVING.

(Pre-war.)

(1)

(Summarised from the Metropolitan Paving Committee's Ninth Report, and retained pending reliable post-war data.)

Material.	Situation.	Depth in Ins.		Cost per Sq. Yard.		Remarks.
		Paving or Carpet.	Foundation.	Without Foundation.	With Foundation.	
Creosoted deal	Shaftesbury Avenue	5	9	—	—	Fifteen years' contract. 1*s.* 7*d.* per square yd. per annum.
Creosoted deal	Hampstead	4	6	5*s.* 9*d.*	7*s.* 6*d.*	—
Creosoted deal and larch	Fulham	5	—	7*s.* 9*d.* to 8*s.* 11*d.*	—	Including making good the present foundation.
Creosoted deal	City of London	5	8	7*s.* 8*d.* to 11*s.*	11*s.* 4*d.* to 13*s.*	—
Creosoted deal	Kensington	5 or 4½	6	7*s.* to 7*s.* 9*d.*	12*s.* 5*d.*	—
Creosoted deal	Lea Bridge Road	5	9	10*s.* 3*d.*	16*s.*	Heavy dock traffic.
Creosoted deal	Lambeth	5	9	8*s.* 3*d.*	12*s.*	—
Creosoted deal	Marylebone	5	9	—	15*s.* 2*d.*	—
		5	6	—	9*s.* 1*d.*	—
Creosoted deal	Harrow Road	5	6	8*s.* 6*d.*	12*s.* 5*d.*	—
Creosoted deal	Wandsworth, Woolwich, and Westminster	5	6	7*s.* 9*d.* to 8*s.* 7*d.*	11*s.* 2*d.* to 12*s.*	—
Compressed rock asphalt	City of London	2½	9	9*s.*	15*s.*	Cost of maintenance 9*d.* per square yd. per annum
Compressed rock asphalt	Holborn	2	9	—	12*s.* 6*d.* to 13*s.* 9*d.*	—
	Marylebone	2	6	—	12*s.* 6*d.*	—
Asphalt	Westminster	2	—	8*s.* 2*d.*	13*s.* 6*d.* to 13*s.* 9*d.*	—
Tar-slag macadam	Holborn	4½	—	3*s.* 5*d.*	5*s.* to 6*s.* 11*d.*	Hardcore foundation.
		3½	—	2*s.* 8*d.*	7*s.* 1*d.*	
Tar-macadam	Marylebone	4½	—	—	3*s.* 5*d.* to 4*s.* 1*d.*	'On an old foundation.'
Sectional Jarrah blocks	Stoke Newington	3	—	—	16*s.*	—

being treated with liquid bitumen and granite chips or with a 1-in. carpet of asphalt. This construction is very interesting, as it embodies (*a*) a wearing crust which partially distributes the load; (*b*) a foundation which is also a strength crust; (*c*) a wide spread on the road bed and low stresses in this crust, these results being obtained by the use of a considerable depth of relatively cheap material; and (*d*) the initial spread of the load by the wearing crust. In *Hampstead*, 'asphaltic macadam' 1½ ins. and 2 ins. thick was laid, and in *St. Marylebone*, 'bituminous pavements' 1½ ins. to 3½ ins., some of these on old macadam crusts. 'Asphaltic graded granite' 3 ins. thick was put down in *St. Pancras*, and 'asphalt macadam,' 4 ins. deep in two layers on existing macadam, in *Woolwich*.

Tar macadam.—The following were laid in 1915. Tar macadam (granite) 3 ins. thick on old macadam; tar macadam 4½ ins. thick; tarred slag macadam, 4 ins. thick on a foundation of hardcore, and 4½ ins. thick on 'an old foundation.' Tar macadam is chiefly used, in London, for light traffic streets.

Stone paving.—Considerable areas were paved, in 1915, with small granite setts, the usual depth being 4 ins.; also Aberdeen granite setts, 4 × 6 ins. on a 12-in. crust of cement and clinker concrete. Re-dressed Aberdeen granite setts 3 ins. by 6 ins. were laid on 6 ins. of concrete; fine dressed 'Norwegian' granite setts were laid in cement and sand grout on 12 ins. of concrete; and setts, 4-in. cubes, laid in 1 in. of ashes and grouted with pitch grout, on a macadam crust.

TABLE XV.—COSTS OF PAVING.

(*Pre-war.*)

(2.)

(*Summarised from the Metropolitan Paving Committee's Tenth Annual Report.*)

Material.	Situation.	Depth in Inches.		Cost per Sq. Yard.		Remarks.
		Paving or Carpet.	Foundation.	Without Foundation.	With Foundation.	
				s. d.	*s. d.*	
Jarrah blocks	Greenwich	5	9	12 9	15 6	Heavy traffic blocks laid in pitch.
Camphor wood blocks	Kensington	4	—	11 3	—	—
Sectional Jarrah blocks	Hampstead	3¼	—	13 6	—	Bitumen joints. Cost includes re-making of foundations.
Compressed rock asphalt	The City	2¼	9	10 0 to 10 9	13 6 to 15 6	—
Asphalt macadam	Holborn	3	—	4 9	—	Trinidad lake asphalt
Tar macadam	Hammersmith	3	—	3 9	—	Sealed with bitumen. 'On an old foundation.'
Tar-slag macadam	Hammersmith	3	—	2 9	—	'On an old foundation.'

SCAVENGING AND WATERING.

Important developments are taking place in the matter of house and street scavenging and street watering. Very considerable savings are effected by the use of motor vehicles instead of horses. For instance, in one Metropolitan borough, a saving of 2,000*l.* is reported as the result of fifteen months' working with motor vehicles. In other cases a single motor vehicle is found to replace as many as six horses, in the case, for instance, of a 3½-ton electric watering vehicle, with a capacity of 750 galls. Petrol motors seem specially suitable for sweeping machines, and there is a healthy rivalry between steam, electric, and petrol vehicles in the field of refuse collection. For the types of vehicles recently purchased, and prices, see 'Costs Data,' at the end of this section. For the latest pre-war costs of cleansing and watering see Table I, p. 706.

The following table of costs is derived from the Metropolitan Paving Committee's fuller tables. The reason for taking the earlier period as well as the year under review is that the effect of surface tarring may be seen. The figures given for surface tarring are not the costs of tarring per mile of tarred road, but are got by dividing the cost of tarring by the whole road mileage in the borough. Even if we include the cost of tarring, the cost of scavenging and watering in Wandsworth and Fulham was considerably reduced, and, taking everything into account, the same tendency may, perhaps, be seen in the cases of Hammersmith and Greenwich. For a full analysis it would be necessary to consider the weather of each year, and the value of the tarring *per se* as well as its effects on the costs of maintenance. (See *The Surveyor*, March 22, 1912.)

APPROXIMATE ANNUAL COSTS PER MILE (WHOLE MILEAGE).

Details.	Hammersmith.	Wandsworth.	Fulham.	Greenwich.
Before tarring was begun	1909–1910	1906–1907	1907–1908	1906–1907
	£	£	£	£
Scavenging	232·5	199	} 209 {	111
Watering	8·3	56		38
Total	240·8	255	209	149
In 1910–1911.				
After tarring was begun .	1st year	4th year	3rd year	4th year
	£	£	£	£
Scavenging	226	145	} 179 {	122
Watering	8	23		28
Tarring	10·8	17	11·4	13·6
Total	244·8	185	190·4	163·6

The effects of motor-omnibus traffic and other heavy traffic.—Some years before the war, reports of the Paving Committee showed that heavy motor traffic had increased the cost of maintenance of macadam roads generally. As regards paved streets and roads, the cost of maintenance had increased in those areas in which the stage of strengthening and improvement had been reached, but had increased only slightly or not at all where this stage had been passed. When the cost of reconstruction had been taken into account on the one hand, and actual increases in the passenger-mileage and ton-mileage on the other, it seemed that the economics of road maintenance in London had not been changed for the worse, though the cost of cutting through the greater thicknesses of concrete provided a new argument in favour of the scheme for providing subways for the various conduits under the main streets.

The present day.—Monetary comparisons being for a time almost useless, except where founded on detailed data, we must consider that the position indicated in the foregoing paragraph arises in a fresh form, owing to the increase in motor-lorry traffic, and, probably, an increase in motor-omnibus traffic. The Committee's reports of the next few years will show whether the situation remains as described, and calls only for the extension of measures already taken in some areas or whether further measures will be necessary.

NAMES OF ROCKS USED FOR ROAD METAL.

When a single word is employed as the name of a rock used for road metal or for paving setts the word may be definite in itself, denoting a rock of a particular composition which does not, as a rule, vary much from the average. In other cases, the general word, or word denoting the normal material, is compounded with another word, usually the name of a mineral which is present in an unusually large proportion, or which is an unusual constituent or one of several any of which may be present. Thus, a diabase is usually composed chiefly of labradorite and augite, and sometimes olivine; and dolerite, though different in texture, is similar in composition. An olivine dolerite is a dolerite in which olivine is present in a considerable proportion, and a quartz-enstatite diabase is a diabase in which both quartz and enstatite (minerals, not rock names) are present in noteworthy proportions. The name of a mineral may sometimes be used as the name of a rock in the composition of which it predominates; but usually there is a clear distinction between the names of minerals and those of rocks, which are formed of several minerals. Even when a rock consists almost entirely of one mineral it may have a name which discloses its character. Quartz is the predominating mineral in sandstone and in quartzite.

The mineralogist is sufficiently equipped with his precise nomenclature, which, in some cases, enables him to convey useful information by giving alternative compound names to the same stone. The highway engineer, on the other hand, requires group names as well as particular

names. The following classification was suggested some years ago (*vide* 'The King's Highway' as a tentative grouping. It is here slightly altered.

Granites: True granites, horneblende granites (micro-granites).

Felstones: (*a*) Basaltic felstones:—Basalts, diabases, dolerites.

(*b*) Hornblendic felstones:—syenite, diorite, quartz-syenite, quartz-diorite.

Traps: (*a*) Whinstones—basic traps.

(*b*) Elvans—acid traps, quartz-felsites, quartz-porphyries (micro-granites).

Quartzites: both metamorphic and sedimentary.

Limestones: compact limestones, crystalline limestones.

Rags: calcareous sandstones, siliceous limestones.

Sandstones: true sandstones, grits.

Flints: flints, chert.

Pebbles: large broken pebbles to be named according to their class, small pebbles classed as gravels.

Some Important Words in their Narrower Application.

The following are definitions of certain important rocks:—

Granite.—A coarsely grained, wholly crystalline rock, mainly composed of alkali felspar, quartz, and a ferro-magnesian mineral.

Gneiss.—A metamorphic (altered) rock, usually resembling granite, but showing a foliated or banded structure.

Syenite.—A wholly crystalline rock, composed of orthoclase felspar, a ferro-magnesian mineral (usually augite or horneblende) and a small proportion of quartz.

Diabase.—A compact, dark rock, mainly composed of labradorite, augite, and sometimes olivine; is thoroughly crystalline and often ophitic (ophitic: a structure in which the crystals of one mineral inter-penetrate or are moulded upon those of another).

Dolerite.—Often classed as basalt, or as diabase. (The terms 'diabase' and 'dolerite' are often used synonymously.) Is more crystalline than basalt.

Diorite.—Consists essentially of oligoclase, andesine or labradorite felspar, and horneblende, augite, or biotite.

Basalt.—A black compact lava, basic (alkaline) in character. Consists essentially of plagioclase, augite, and olivine, is sometimes porphyrictic, and often contains uncrystallised glass substance in the ground mass.

Porphyry.—Contains large crystals, usually of potash-soda felspar, in a ground mass of felspar, quartz, and other minerals.

Andesite.—A lava, intermediate between acid and basic, consisting principally of plagioclase, felspar, and ferro-magnesian minerals, usually without olivine.

Quartzite.—Composed almost entirely of close-fitting quartz grains, the cementing material being itself quartzose, distinguishing it from sandstones.

Whinstones.—In its narrower and more correct use the term is applied to dyke or trap rocks. A typical whinstone may be classed as an andesitic dolerite, containing augite, or as a quartz diabase.

THE ROAD BOARD LABORATORY.

(*See Report to the Third International Road Congress, T. E. Stanton and R. G. Batson.*)

The equipment of the Road Board Laboratory (at the National Physical Laboratory, Teddington) enables the following set of tests of road stones to be made.

(1) A dry attrition test (resistance to wear); (2) a wet attrition test; (3) an abrasion test (for hardness); (4) a repeated impact test (toughness); (5) a test of the cementation value; (6) an absorption test.

Attrition test.—The machine is of the 4-cylinder Deval type, as used in France and in the United States. The cylinders are $7\frac{1}{2}$ ins. in diameter and 14 ins. long, set at 30° to the axis of rotation. About fifty pieces of the rock, weighing eleven pounds, are placed in one of the cylinders, and the machine revolved 10,000 times at about 30 revolutions per minute. Only the material which will pass a sieve of $\frac{1}{10}$ mesh is counted in measuring the amount of wear, which is recorded both as a percentage and by the French coefficient $\frac{40}{\text{percentage of wear}}$.

In the wet test 1·1 gallon of water is used with 11 lbs. of stone. The wear is usually greater in the wet than it is in the dry test; but not always.

Repeated impact test.—This test is made with the Page impact machine, which has a hammer weighing 4·4 lbs., delivering the blows through a plunger, the surface of which, in contact with the specimen, is spherical to a radius of 0·4 inch. The test piece is a cylinder, 1 in. by 1 in., ground to the true diameter, and cut to length by a diamond saw. The test consists of a series of blows, beginning with a fall of 0·4 inch, which is increased by 0·4 inch with every successive blow until the test piece is broken. The toughness is measured by the number of blows. Tests can also be made with a constant height of fall.

Abrasion test.—The test piece is prepared in the same way as for the impact test and is of the same size. The machine is of the Dorry type, and consists of a cast steel disc revolving in a horizontal plane. The test piece is held, with its axis vertical and with a load equal to 3·5 lbs. per square inch, against the surface of the disc 26 cms. from the centre. Standard sand of 30 to 40 mesh is fed continuously through funnels at a definite rate, the same in each case. After about 1,000 revolutions of the disc, at the rate of 28 per minute, the test piece is weighed and the loss of weight noted. The test is repeated on the other end of the test piece, and the average loss of weight by the two runs is recorded. The hardness is measured by $(20 - \frac{1}{3}W)$ where W is the loss of weight in grammes per 1,000 revolutions.

Cementation test.—Coarsely crushed rock, weighing 1·1 lb., is ground in a ball mill with 0·02 gallon of water, the balls being steel shots (two) 5·1 ins. in diameter. The material is ground for two and a half hours at the rate of about 2,000 revolutions per hour. The resulting paste is moulded into briquettes, 1 in. diameter and 1 in. long, the maximum pressure being 1,880 lbs. per square inch. After twenty-four hours, the briquette is dried for twenty hours in the air, and for four hours in a hot air bath at 200°F., cooled for twenty minutes in a desiccator, and then tested. It is placed on the anvil of the machine, with its axis vertical, and struck through a plunger by a small hammer with an effective drop of 0·4 in., the rebound being measured by the movement of a lever attached to the hammer, and holding a pencil against a paper-covered revolving drum. This records the number of blows required to destroy the resiliency of the test piece, after which there is no rebound. The mean of six tests is taken as giving the cementing value of the material.

Specific gravity.—Three samples are taken from each batch of stones, and the average specific gravity recorded as that of the batch.

Absorption of water.—A stone of about 13 lbs. is weighed in air and then in water. It is kept in water for three days and is then weighed in air. If A=weight in air, B=weight in water immediately after immersion, and C=weight in water after immersion for three days, the number of pounds of water absorbed per cubic foot of rock is nearly

$$\frac{C - B}{A - B} \times 62{\cdot}5.$$

Petrological analysis.—The classification of the rock, in the terms of geological nomenclature, and as regards its constituents, is made for the Road Board at the Geological Museum (Director, J. Allen Howe).

Road Board Laboratory Report, 1914–1915

During 1914–1915 the Road Board Laboratory was occupied with mechanical tests on stone for road construction, and with tests made by the special testing machine on roads formed with different varieties of asphalt carpets laid on a concrete foundation.

Micro-sections of the roads tested were made at various stages, and one road in particular furnished results showing the utility of the microscope in the study of road construction problems. Three different sections of the road were examined—(1) a portion as laid down, before the test was started; (2) a portion after the completion of the test, taken from a place where the road was still in good condition; and (3) a portion where, after the test, the road was in bad condition. From each specimen a small piece was cut at right angles to the surface of the track and carefully polished; this permitted a study of the structure both close to the surface and in the interior. The road in question contained 55 per cent. of $\frac{3}{8}$ in. granite, the rest of the mineral matter being of smaller grading. On the surface there was a carpet composed of bituminous and fine mineral matter, approximately $\frac{3}{8}$ in. thick, all the large granite lying below this carpet, which appeared to take the whole work of the road; if it was penetrated or removed the road began to disintegrate rapidly. In the section which was in good condition at the end of the test, the structure was found to be identical with that of the road as first laid down; but in the portion that was in bad condition the $\frac{3}{8}$ in. granite chips were visible in the surface.

A section of another road that broke up a few hours after the beginning of the wet test, in which the whole surface was covered with water, showed on analysis a very low percentage of bitumen; when a similar road was laid down with a much higher percentage of bitumen, it stood the water test for 14 days. This appears to show that with a certain grading there is a limiting percentage of bitumen which will make the road resistant to water action, though a much lower percentage of bitumen will enable it to resist the same traffic in a dry state.

COSTS DATA.

Cost Calculations: Creosoted Deal.

From a report by Mr. H. T. Wakelam, M.Inst.C.E., county engineer for Middlesex, who relaid several lengths of creosoted deal paving which had been down for fourteen years to eighteen years in Middlesex. Mr. Wakelam takes as a basis on comparison an annual cost of 1*s.* 4¾*d.* per sq. yd. for a fifteen years' life of a bituminous road, finding the cost of creosoted deal to be 1*s.* 1¾*d.* per annum for a fourteen years' life, as follows :—

COST OF CREOSOTED DEAL PAVING.
(Pre-war.)

(*H. T. Wakelam.*)

	£ *s.* *d.*	£ *s.* *d.*
Area (say), 5.000 sq. yds.		
Cost, 11*s.* 9*d.* per sq. yd.—		
Wood, at 7*s.* 6*d.*	1,875 0 0	
Concrete, at 4*s.* 3*d.*	1,062 10 0	
		2,937 10 0
Half-yearly instalments on loan :—		
Wood, 10 years at 3¾ per cent. per annum	113 5 9	
Concrete, 20 years at 3¾ per cent. per annum	37 7 0	
		150 12 9
Annual repayment for wood (10 years)		226 11 6
Annual repayment for concrete (20 years)		74 14 0
Total repayment for wood	2,265 15 0	
Total repayment for concrete	1,494 0 0	
Total repayments for wood and concrete		3,759 15 0

	s. *d.*	*s.* *d.*
Cost per super. yd. for wood (including interest) for period of loan (10 years)	9 0·756	
Cost per super. yd. for concrete (including interest) for period of loan (20 years)	5 11·712	
Total cost of wood and concrete (including interest)		15 0·468

	d.	*s.* *d.*
Cost per super. yd. per annum for wood for period of loan	10·875	
Cost per super. yd. per annum for concrete for period of loan	3·585	
Total cost of wood and concrete per sq. yd. per annum for 10 years		1 2·460

	d.
Cost per super. yd. per annum for wood for 14 years	7·768
Add concrete	3·585
Add maintenance	2·500
Total cost per yard per annum for 14 years (including repayments of principal and interest)	13·853

	s. *d.*
Cost of relay of wood (including interest) for second period of 14 years	9 0·756
Balance of cost of concrete, 6 years at 3·585*d.* per yard per annum	1 9·510
Total cost of relay (including interest)	10 10·266

	d.
Cost per super. yd. per annum for wood for 14 years	7·768
Add concrete	1·536
Add maintenance	2·500
Total cost per yard per annum for second period of 14 years (including repayments of principal and interest)	11·804

Road Crust Work.

Labour.—Northamptonshire, about twice pre-war rates. Consolidation of road metal, 1*s.* 3½*d.* per ton. Dorset, labourers 1*s.* 1*d.* per hour. Labour generally about twice pre-war rates. Blyth, 9*s.* 8*d.* per man-day.

Road metal.—Staffordshire, 1918–1919. Road metal at roadside, 15*s.* to 20*s.* per ton; road metal supplied, usually, 14*s.* per ton. A coating 3 ins. thick with bituminous grouting, 2*s.* 8*d.* to 3*s.* 3*d.* per square yard.

Bituminous clinker.—Single coat, 6*s.* per sq. yd.; two coats, 8*s.* 7*d.* per sq. yd., 1918.

Steam rolling.—Kent, steam roller, 38*s.* per working day, 15*s.* per standing day. Blyth, 2·29*d.* per sq. yd.

Reconstruction.—County of Nottingham, main road reconstruction, 1918–1919, including a central portion made up with 'Tarmac,' and sides strengthened with slag and granite, 114 miles, of which 24 miles were urban. Cost, 1,563*l.* per mile.

Analysis of cost of 'Tarmac' (Blyth, 1919).—Labour, 3·57*d.*; rolling, 2·27*d.*; cartage, 4·49*d.*; stone, 23·47*d.* Total, 33·82*d.*, or nearly 2*s.* 10*d.* per square yard. The 'duty' was 8½ sq. yds. per ton of material. Labour cost 9*s.* 8*d.* per man-day; cartage, 17*s.* per cart-day; 'Tarmac,' 18*s.* 7*d.* per ton.

Surface Tarring.

Costs per square yard, 1918–1919.—Northamptonshire, 1·97*d.*; East Suffolk, 2·1*d.*; Nottinghamshire, 2·26*d.*; Essex, 2·5*d.*; Blyth (Northumberland), 2·5*d.*, with tar at 18*s.* 4*d.* per barrel. Usually about 2·5*d.* per sq. yd., including spreading with chips.

Costs per mile.—City of Lincoln, including sanding, 131*l.* per mile; tar used, 2,950 galls. per mile. Norfolk county main roads, 92*l.* per mile.

Horse Haulage.

Staffordshire, 1918–1919.—Cartage of road metal, usually 3*s.* per ton to the roadside.

Northamptonshire. 1918–1919.—Haulage, 150 to 200 per cent. over pre-war rates. Horse and cart, 20*s.* a day.

Kent.—Horse and cart, 15*s.* to 18*s.* a day.

Midland Railway.—Cost of upkeep of a horse, 1917, 27*s.* a week; 1918, 34*s.* a week.

Nottinghamshire, 1919.—2*s.* per ton mile.

Blyth.—17*s.* per cart-day.

Public Service Vehicles Prices, 1919.

Steam Wagons.—Cardigan County Council, 1,295*l.*; Foden wagon, 1,260*l.*; Clayton wagon, 1,260*l.*; side-tipping wagon, 5-ton, rubber wheels, 8 miles an hour, Clayton and Shuttleworth, 1,290*l.*; end-tipping wagon, 5-ton, Robey, 1,080*l.*

Petrol Vehicles.—Motor-lorry, 1,000*l.*; motor-wagon, 1,000*l.*; motor-lorry, Leyland, 1,080*l.* (Many motor-lorries have been bought second-hand from the War Department, so there have not been many purchases of new vehicles by local authorities.) Motor fire-engine, 1,445*l.*

Electric vehicles, house refuse collection.—2½ ton, Garrett & Co., for Harwich Town Council, 1,175*l*; type unspecified, 25 vehicles at 1,280*l.* each; British Edison, 1,307*l.*

Electric scavenging vehicles.—Type unspecified 1,284*l.*; 'dust cart,' 1,667*l.*

Working Costs, Motor Omnibuses.

Sheffield.—The omnibuses run on a number of routes within the City of Sheffield, 15 miles, and as extensions of tramway routes outside the city, 22 miles, on County Council roads. There are about 40 omnibuses, of which 26 are Daimlers and 12 A.E.C. About 30 are double-deck and 10 single-deck. The maximum seating capacity is 37. The minimum weight of a suitable omnibus has been found to be 4½ tons.

Average expenses per bus-mile, 17·9*d.* Service of debt (capital), 0·9*d.* nearly. Total, 18·8*d.* nearly. Working expenses per passenger, 2·25*d.* nearly; per seat-mile, 0·56*d.* Average fare per mile, 1·5*d.*

Working Costs, Steam Wagons.

Nottingham County Council.—Three steam wagons, one Burrell, one Clayton No. 1, one Clayton No. 2, each with two trailers, bought 1915, 1916 and 1918. Cost, 2,576*l.* 10*s.* Working expenses, 1918–1919, nearly 1,145*l.*; depreciation, 12½ per cent., 244*l.* 17*s.* Cost per day, 2*l.* 9*s.* 8½*d.*; per mile, 4*s.* 9*d.*; per ton mile, 7·4*d.*

Herefordshire.—Cost of working, 404*l.* per annum; chief items, wages of driver and steersman, 181*l.*; depreciation, 103*l.*

Working Costs, Electric Vehicles.

Kettering Urban District Council (W. A. Walker, A.M.I.E.E., Electrical Engineer).—3½-ton, G. V. Electric vehicle; iron-clad exide battery; annual cost of working, including capital charges and depreciation, 785*l.*; chief items, wages, driver and mate, 410*l.*; battery upkeep, 100*l.*; repairs, oil, etc., 97*l.*; current at 2*d.* per unit, 50*l.*; mileage, 4,392; cost per ton hauled, 1*s.* 11*d.* Two years' working, very satisfactory.

Hampstead.—3½-ton Orwell electric tipping vehicle; iron-clad exide battery; estimated annual cost of working, including capital charges and depreciation, 502*l.* Chief items, wages, driver, 200*l.*; depreciation, 82*l.*; battery upkeep, 70*l.*; current at 2*d.* a unit, 52*l.*

SECTION XV

ARRANGEMENT AND CONSTRUCTION OF ENGINEERING WORKSHOPS — WORKSHOP PRACTICE — DEPRECIATION OF PLANT AND MACHINERY

(With Contribution by H. N. Allott, M.Inst.C.E.)

SECTION XV

ARRANGEMENT AND CONSTRUCTION OF ENGINEERING WORKSHOPS — WORKSHOP PRACTICE — DEPRECIATION OF PLANT AND MACHINERY

ENGINEERING WORKSHOPS.

(Contributed by H. N. Allott, M.Inst.C.E.)

For ordinary engineering purposes the arrangement of shops on one level is most convenient, as this allows of better supervision, better access between the various shops, and better light than is possible where the works are arranged in buildings of more than one storey. Multiple storey buildings are generally only used in cases where the work and the machinery are of a light description and where the cost of land outweighs the increased cost of buildings and the advantages of the single-storey shop.

It is advisable to arrange the position of the office buildings so that the entrance or exit to offices and works, both for persons and goods, may be controlled from one time and enquiry office. For small work where heavy cranes are not required, and where the type of machinery employed is small, the saw-tooth type of roof will be found most convenient; whilst for shops where the machines and the work are of a heavier description, and the spans consequently greater, a ridge roof is the best arrangement.

Figs. 1 and 2 show typical buildings comprising heavy machine and erecting shops, together with light machine and fitting shops.

The heights shown in the buildings are 30 feet for the erecting and heavy machine shops and 15 feet for the light machine and fitting shops. It will be noted that the roofs of all the bays are of the ridge type. The smaller bays of roofing are also of this description, since saw-tooth roofing should not generally speaking be of a greater span than 25 feet.

The widths of the bays depend on the machines employed and the character of the work to be carried out, and where these matters can be arranged to suit a bay of not more than 25 feet in width a roof of the saw-tooth type is undoubtedly the best. If the bays are of a greater width than 25 feet, the increased length of the glazing bars necessitates the use of a centre purlin and also increased strength in the rafter back.

The arrangement shown in figs. 1 and 2 is laid down on the supposition that the flow of work in the small machine bays will be parallel to the line of the larger bays, the machines and cranes where required being arranged in lines in this direction.

The roof principals are arranged at right angles to the length of the shop, so that the shafting, heating, and lighting pipes may be conveniently carried from them, and the span of the roof is accordingly 30 feet. Should, however, the character of the work to be carried out make it convenient to arrange the machines and cranes in the smaller bays at right angles to the length of the shop, the roof principals for the smaller bays will run in the contrary direction, and the span would be reduced to 25 feet, when a saw-tooth roof may be used with advantage. In tropical countries the use of saw-tooth roofing is almost compulsory as the rays of the sun are almost vertical.

Saw-tooth roofing where possible is usually arranged with the glazing facing north so as to prevent the direct glare of the sun through the glass. The principal advantage of the saw-tooth roof is that by its use a more evenly lighted and cooler shop is obtained.

The amount of glazing to be allowed for in a roof of the ridge type should be not less than about 50 per cent. of the area of covering, and in town districts with a smoky atmosphere this may be increased with advantage to 60 per cent. or 70 per cent.

The glass should be equally distributed on both sides of the roof, as by that means a more even illumination is obtained than when all the glass is placed on one side of the roof.

Another advantage of distributing the glazing is that the direct glare of the sun and consequent heating of the shops in summer is minimised.

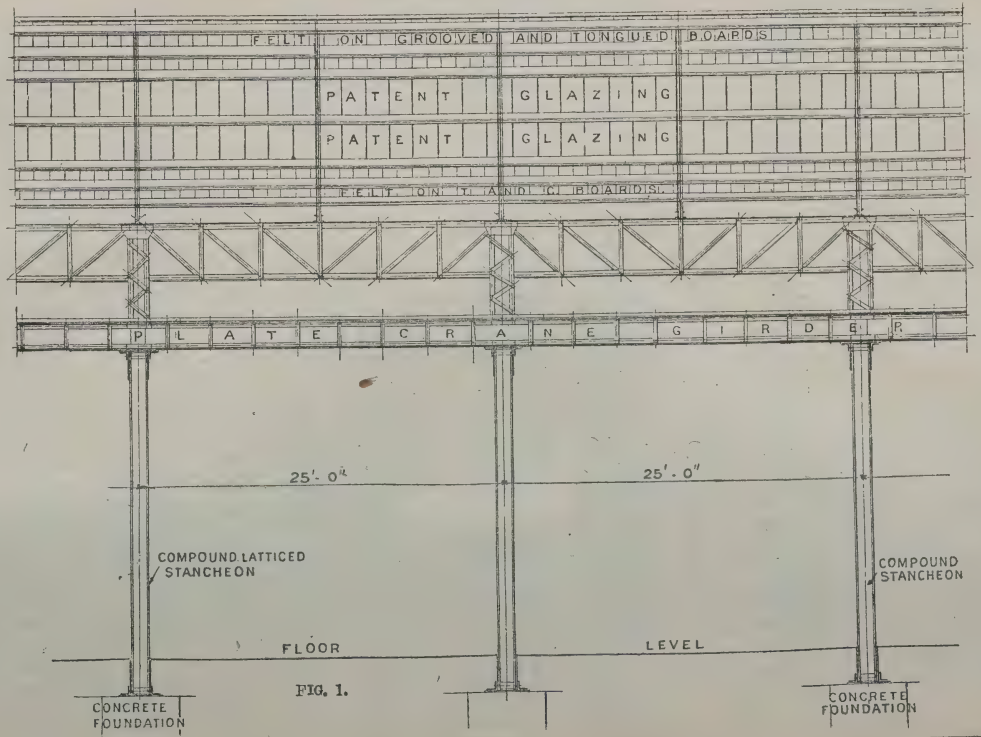

FELT ON GROOVED AND TONGUED BOARDS
PATENT GLAZING
PATENT GLAZING
FELT ON T AND G BOARDS
PLATE CRANE GIRDER
25'-0"
25'-0"
COMPOUND LATTICED STANCHEON
COMPOUND STANCHEON
FLOOR LEVEL
CONCRETE FOUNDATION
CONCRETE FOUNDATION

FIG. 1.

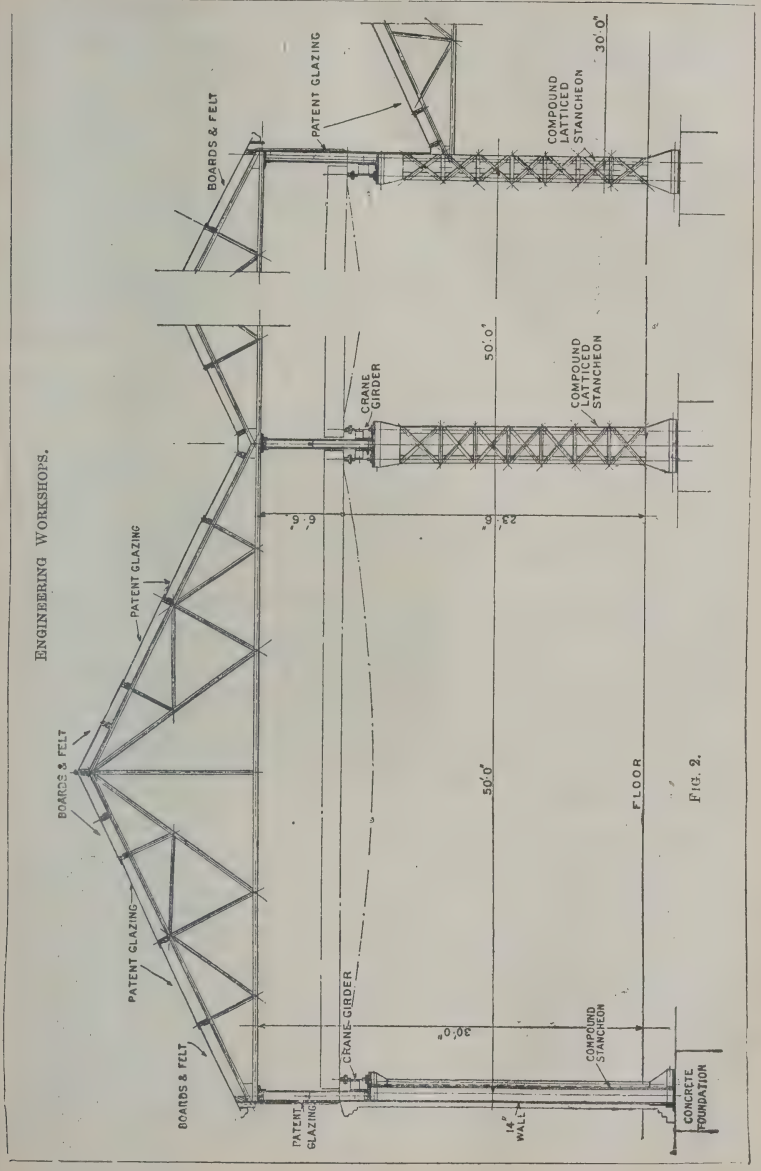

ENGINEERING WORKSHOPS.
BOARDS & FELT
PATENT GLAZING
BOARDS & FELT
PATENT GLAZING
BOARDS & FELT
PATENT GLAZING
CRANE GIRDER
COMPOUND LATTICED STANCHEON
30'0"
50'0"
CRANE GIRDER
COMPOUND LATTICED STANCHEON
6'6"
23'0"
50'0"
FLOOR
30'0"
CRANE GIRDER
COMPOUND STANCHEON
PATENT GLAZING
14" WALL
CONCRETE FOUNDATION

FIG. 2.

The roof covering in this country usually consists either of slates, asphalt felt, or corrugated iron.

For slates or corrugated iron the roof generally is given a rise of not less than quarter of the span, for if made of a flatter slope rain and snow are liable to blow in at the joints.

For felted roofs the roof may be practically flat if the joints are properly made with mastic and it is only necessary to give a fall of one or two inches to the foot to allow for drainage.

Galvanised corrugated iron is usually only used in this country for buildings required for temporary purposes, and when used should be carefully painted before and after fixing, and afterwards properly maintained, as otherwise its life is only short.

Slating, when used, may be laid on battens nailed to spars, or to boarding nailed to the purlins. When laid on spars the slates should be pointed on the underside with hair mortar. When laid on boarding the boarding should be covered underneath the slates with sarking felt.

An alternative to natural slates is the use of asbestos slates. These are best laid either with the diagonal parallel to the slope of the roof, or in what is termed 'honeycomb' fashion. The point of the slate should be cut off, as it is otherwise liable to be broken by any one walking on the roof. It is necessary in all cases to see that proper lap is given to the slates, and this is especially the case where asbestos slating is used, as owing to its smooth surface the roof is more liable to leakage, where proper attention is not given to this.

An alternative to galvanised corrugated iron sheeting is the use of corrugated sheets of asbestos composition, which can be obtained up to 10 ft. in length and 27½ ins. in width.

Asphalt felt laid on thicknessed, grooved, and tongued boarding is cheaper than slating and is not damaged like slating by men walking on the roof.

The use of felt of good quality is permitted by the building departments of most local authorities, although one or two treat it as not being sufficiently incombustible.

The felt is laid in mastic and nailed to the boarding, the joints being lapped about 4 ins. One thickness of stout felt will make a satisfactory job, if properly laid and if proper attention is given to maintenance, though the roof is generally covered with an extra thickness of a thinner quality of felt where a thoroughly good job is required. One advantage of the use of felt is that a considerable saving can be effected by forming the gutters in felt, instead of using cast iron gutters; this is especially the case in roofs where large valley gutters are required. A considerable amount of lead required for flashing at various parts of the roof can also be saved.

The only attention required to be given to felted roofs is a coat of varnish at intervals of about five years.

The roof glazing is best carried out with patent glazing, the alternatives to patent glazing being wood or tee steel glazing bars, the glass being puttied in.

The patent glazing is preferable, as with puttied bars the putty becomes defective and the glazing leaky, unless systematic attention and painting is given.

The best systems of patent glazing consist of a steel bar, to which is fixed a lead flashing, which is worked down on to the glass to form a weather-tight joint.

In most cases the glazing bar is sheathed all over in a lead casing, the ends of which are soldered up, thus obviating the necessity of painting. The bars should be galvanised before the sheathing is put on. Except in the case of vertical or steep-pitched glazing, as in the case of a saw-tooth roof, it is not advisable to joggle the glazing bar to form a lap in the glass. If this is done on a flat-pitched roof leakage is liable to occur, owing to capillary attraction between the two panes of glass. Where it is necessary to form a joint in the glazing on a roof of ordinary pitch, it is better to step the glazing bars.

The roof glazing is best carried out with wire wove glass, which holds together and does not drop if a pane is broken.

In a machine shop the number of cubic feet of air space is generally sufficiently large, in comparison with the number of men employed, to render extensive roof ventilation unnecessary, and sufficient ventilation may be provided by opening sashes in the glazing to a saw-tooth roof, or by ventilators at intervals along the ridge in the case of a roof of the ridge type.

The ventilators for a ridge roof to a machine shop are best provided with opening shutters so that the ventilation may be stopped in the winter or in driving rain or snow if required, or if preferred, exhaust ventilators can be used.

In the case of a foundry it is usual to provide ventilators with continuous louvres for the whole length of the shop. These are best made of wood with a rebated fillet screwed on the back to stop rain or snow from driving in as far as possible.

The roof principals are best formed in steel of angles, tees, and other rolled sections. A steel principal offers less obstruction to the light and harbours less dust than a timber principal, and can generally be designed at very little greater cost, if any.

For roofs of moderate span up to, say 50 feet, economical spacing may be taken as from 10 feet to 12 feet, which allows purlins of angle section to be employed. For roofs of larger spans it is frequently more economical to space the roof principals farther apart, and to use purlins of channel, zed, or rolled joist sections.

It is usual to arrange the roof so that the purlins are carried at the panel points of the truss, i.e., at the intersection points of the rafter with the other members. If this is not done the strength of the rafter back must be increased to provide for the bending moment due to the load coming on to it from the purlin, in addition to the compression due to the internal stresses in the framing of the roof principal itself.

A factor of safety of 4, which is equivalent to a tensile stress of about 7 tons per square inch, is commonly used for buildings of a permanent description. In the case of buildings where a long life is not required this figure may be increased to 9 tons per square inch.

The stanchions and girders carrying the roof and gantries are now commonly made of steel of various sections in place of cast iron as in the older shops. A steel stanchion can usually be designed more economically than one of cast iron, is not so liable to damage from blows, and attachments can more easily be arranged for girders to carry shafting, jib cranes, etc.

Round cast-iron columns are sometimes used to carry the roofing of small spans for light machine shops, and light foundries where cranes are not required.

In cases where the crane loads and lengths of the stanchions permit, cheap and convenient forms are provided by the use of rolled steel joists of suitable section, with flat bars or steel channels riveted on to give additional flange area (figs. 3, 4, and 5). The section formed of a rolled steel joist and two channels is a very convenient one, and allows of the easy attachment of brackets, etc., in both directions.



FIG. 3.



FIG. 4.



FIG. 5.

Types of Compound Stanchions to carry Light Cranes or for Multiple Storey Buildings.

Where the shafting is carried from the crane girders, as is sometimes the case, the deflection and stiffness of the girders under load must be inquired into to ensure that the proper running of the shafting is not interfered with.

The economical spacing of the stanchions is determined by the total cost of the stanchions and foundations and the girders carried by them, but this must also in many cases be affected by the spacing of the machinery. In the small machine bays the tools will usually be arranged in long rows parallel to the lines of stanchions and the width of the bay will be a sum of the machine widths and alley ways. The spacing of the stanchions longitudinally will, however, not be affected by the machines, as these will usually be clear of the line of stanchions. For light work, bays arranged with the stanchions placed in squares of 20 feet will usually be suitable and economical in structural cost.

In the case of the large machine bays, the details of the machines will affect the centres of the stanchions longitudinally, as it will be frequently necessary to arrange for these to be placed partly between the stanchions. The width of the bay will be determined by the depth taken by the machines and the space required for assembling work and storing material. The spans and widths of bays shown will be generally convenient for a shop doing ordinary engineering work, but each case requires consideration and should be decided on its merits.

Provision must be made to carry the shafting on the stanchions for the larger bays, where the machines are not independently driven by motors. This is most conveniently arranged for by fixing four longitudinal channels braced together or two rolled steel joists at a convenient height.

The stanchions should be stayed transversely by knee bracing, or by lateral bracing, along the plane of the bottom member of the roof principals. In the case of very high buildings it may be necessary to use both methods.

The roof should also be braced diagonally along the planes of the rafters at the ends of the building, and in the case of very long buildings at intervals in addition.

The foundations for the stanchions and walls are best constructed of cement concrete, mixed six to one. No bedstones are necessary for the stanchions, which can be wedged up to the required level, and grouted with cement and sand in equal proportions. It is advisable to have one or two holes drilled in the stanchion base to vent same, and so allow of the escape of air when grouting. The walls are best constructed of brickwork, in hydraulic lime mortar, or may be framed and constructed of reinforced concrete, about 3 ins. to 4 ins. in thickness.

By the use of special metal lathings, which can be plastered on both sides with cement mortar, it is possible to obtain a weatherproof material with a thickness of 2 ins. If this material is used, a waterproofing medium should be added, in mixing, to the mortar for the outer covering.

This latter method of construction is specially applicable to the filling in to the sides of the main bay, above the roof of the small machine shop, and to the ends of ventilators. It may be also used for a roof covering, where it is necessary that no inflammable material should be used.

Where it is desirable to erect a building with more than one floor, or where galleries are required in a machine shop, these are best constructed with a main framework of steel. The stanchions should be composed of rolled steel joists, or of compound sections, as shown in figs. 9 and

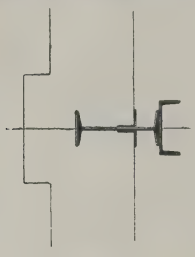


FIG. 6.



FIG. 7.

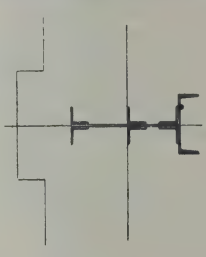


FIG. 8.

Types of Wall Stanchions to carry Cranes.

10, the main floor girders being rolled steel joists or plate girders, as required by the loads coming upon the floor. The depths of the main joists and girders should not be less, if possible, than $\frac{1}{12}$ of the span.

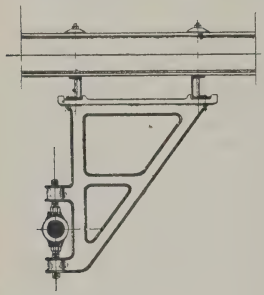


FIG. 9.

Detail Connections for carrying Shafting.

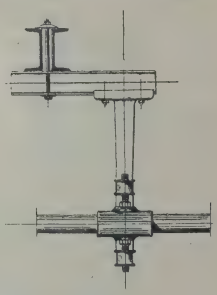


FIG. 10.

The use of a steel frame construction is especially desirable in a building of more than one storey, as the lower floors are dependent for light on the windows, which are placed in the side walls. If steel framing is used, the covering material of brickwork or concrete can be reduced to a minimum, and the window area is correspondingly large.

Floors.

Floors are now generally made of concrete, either with or without a covering of timber.

When the wearing surface is of concrete it should be finished with granite sand and cement, in equal proportions for the thickness of one inch. Concrete is not so suitable as wood for the wearing surface of a floor. It is always impossible to ensure freedom from cracks in concrete over large areas, it is tiring to walk on, is dusty, and liable to damage tools and fragile articles dropped upon it.

If a wood floor is used it is usually laid on a foundation of cement concrete, usually from 4 ins. to 6 ins. in thickness, this being a variable dimension depending on the loads to be put upon the floor, and on the nature of the subsoil.

For floors where the work is of a heavy description the best surface is one of wood blocks 4 ins. deep, which may be formed by sawing off 3-inch deals to lengths. To prevent damp from rising through the concrete the upper surface of the foundation should receive a coat of coal tar pitch about $\frac{1}{4}$ inch thick applied hot, and the blocks should be dipped in the hot coal tar and bedded whilst the pitch is hot, any open joints being afterwards run in with pitch. Where the work is of a lighter character, the most satisfactory wearing surface is grooved and tongued maple planking, nailed either to 4-inch by 3-inch battens laid in the concrete or to planks laid transversely.

The battens should be creosoted, or dipped in 'Jodelite' or 'Sideroleum,' or some similar wood preservative, and the planking laid in hot tar. It is very important that the whole surface of the floor should be thoroughly tarred before the wood blocks or planking are laid, and that any wood blocks or pegs used for levelling purposes should be removed. Where the loads are very light and the foundation good, tar concrete may be substituted for the cement concrete, the upper surface being tarred as before.

The supported floors of a multi-storey building, or of galleries, are usually constructed of concrete where a fire-resisting floor is required, or of timber in other cases. Where a concrete floor is used it may be constructed of reinforced concrete, or preferably of rolled steel joists and concrete, as the more or less concentrated loads from machines and materials coming on the floor can be more easily arranged for.

In this case the floor can be constructed of small steel joists from 4 ins. to 7 ins. deep, according to the span and load, spaced about 2 feet apart, and finished with a flat ceiling. If the concrete is arched or recessed between the joists, hangers can be easily attached by hook bolts to carry countershafting. Another method where the loads are considerable is to use joists of heavier section, and to form an arched floor of concrete between these.

The upper surface of the floor can be finished with wood planking, as previously described. If the floor is constructed of timber, wood joists bedded on the steel main girders can be used, with wood planking laid on top. It is well, if this form of floor is used, to finish the floor with boards from 1 in. to 1¼ in. in thickness, nailed transversely to the planking. Both the planking and the boarding should be thicknessed and laid with grooved and tongued joints.

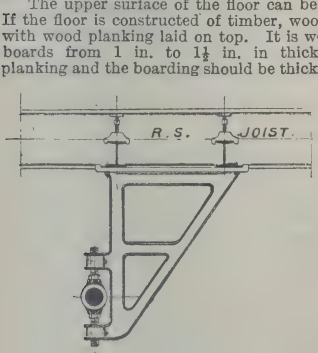


FIG. 11. Detail Connections for carrying Shafting.

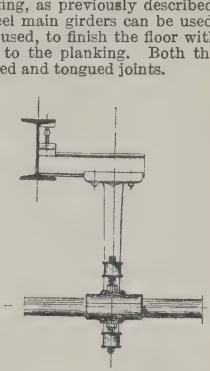


FIG. 12.

Window sashes are best formed of steel, which if properly painted at intervals is as durable as wood, offers less obstruction to the light, especially in windows of large size, and can be obtained at the same or less cost. The heads to windows may be brick arches, but are preferably formed of concrete, reinforced with small rolled joists or tees.

The position of the sanitary conveniences should be arranged so that undue time is not wasted by a long journey from the shop and back. The minimum accommodation is fixed by the Factory Acts, and the Bye-laws of the local authorities. A regulation of the Factory Acts which is strictly enforced by most local authorities, requires the conveniences to be cut off from the main building by a free air space, and this is undoubtedly desirable from a sanitary point of view.

The foreman of a shop should have a desk and office in that shop. The position should be arranged so as to give him a convenient oversight over the whole of the men employed.

The office may consist of a portion of the shop railed off or of a small wood building glazed all round and raised above the general floor level so as to overlook the shop.

Dry grinding machinery is always to be exhausted by a fan.

Smith work is best done in a separate building. Light smiths' fires are supplied with exhausting fans to clear the smoke.

Wood-working shops may be fitted with exhausters to remove all waste, which is best delivered to the boiler house and destroyed.

As no work can be done cheaply without thorough gauging arrangements, the modern method is to use the limit gauge system, for which purpose every works must have a full set of accurate high-class gauges to be used with special care in testing the working gauges, which may be made of cheaper material, and rejected as wear places them out of the limit of accuracy required.

Finished parts should be inspected as made, and finished machines when ready for shipment.

The tool room is an essential department in a modern workshop. In it are kept all tools and gauges required, and every tool given out for use should have a check in its place in the tool room. Fixtures, belts, and other requisites for different tools should have a place on a shop stand, which may be simply a shelf or two of plate iron, supported by pipe framing. No accumulations must ever be allowed on the floors and in corners. Conical pointed buckets provided for dirty waste cannot be left standing about, but must always be in place in their ring stands.

Provision must be made for the prompt removal of all chips, especially if greasy. Where automatic machinery is employed, oil is pumped over the work by a pump in the machine itself. In some shops oil is supplied in pipes, and returns to the pumps through pipes by way of filters. Machines very freely supplied with oil for the tools should be stood on lead-protected floors to prevent oil soakage. Greasy chips can be purified of oil in a centrifugal machine.

In a large works a tool room in each room or on each floor may be required; but no more than actually needful should be provided. Preferably rooms should be as large and as few as possible. The tool room fully carried out includes much more than mere storing and providing tools; its duty is to lay out systems of doing work, and to collaborate with the drawing office in regard to materials and stores. It is in a sense not merely a part of the works: it is also a part of the managerial department.

The drawing office also should be more than a mere room for drawing. It is, or should be, the very centre of management, for from it should emanate design, orders for materials, and the intellectual work of the whole establishment, so that design may be kept in touch with materials, market prices, etc.

Where tools are belt driven, it is usual to employ a countershaft between line shaft and tool, but if the line shaft runs at 250 r.p.m., as a modern shaft may well do, the countershaft may be omitted; there would then be a fast-and-loose pulley on the machines themselves, and no cone pulleys, their place being taken by the all-gear headstock in the lathe.

Heavy lathes may be driven from built-in motors set across the bed, and driving through chains a worm shaft with a right and left worm driving worm wheels on each side of the face plate wheel, and pinions in the worm shafts driving this wheel.

The introduction of high-speed steel, with its great capacity for removal of metal and its large absorption of power, has completely changed conditions. In the lathe the tendency is to abandon the stepped belt cone and employ a single belt pulley, only driven, it may be, directly off the line shaft, speed variations being obtained by gearing. Motors are still frequently belted to a machine, but the tendency is towards making the motor an integral part of the machine it drives. Small tools are more economically group driven from a shaft and a single motor. Whether tools shall be driven in groups or by a single motor to each tool can only definitely be decided by the actual conditions of the case. Where every machine has its own motor the aggregate power of all the motors will be two or three times that of the current generating dynamo.

The application of electrical methods has tended to advance gas and compressed air and mechanical hammers to displace steam hammers; but for larger work the steam hammer is still imperative, being superior to any other hammer. But for the very largest work of forging, the hydraulic press now does the best work, and steam hammers are not made equal to dealing with the largest work now undertaken.

In place of hooks for lifting, shop cranes are sometimes fitted with electro-magnets for lifting plates or such articles as can be thus easily held. By this means time is economised, for there is no use for slings, and the load can be put down by the lift man without help from labourers to detach, simply by the turn of a switch.

For much work that is too heavy for easy movement, the machine tools are carried to the work. In this system the floor is of heavy cast-iron girder plates grooved like the platen of a planing machine. Work is laid upon this floor, and machine tools are bolted to the floor, and operate on the work. This is rendered possible by a system of electric driving, the motors being part of the machine. Machine tools may be attached to the work, and the designer should take this into consideration in his design, since by slight modifications the work may be made so as to facilitate such fixing of the tools.

FLOOR SPACE FOR MACHINE TOOLS.

Size.	Machine.	Greatest No. of Machines per 1,000 sq. ft.
12 ins. to 20 ins.	engine lathes, faced same way	20
12 ins. to 20 ins.	engine lathes, back to back	24
22 ins. to 24 ins.	planers, heads and tails	10
22 ins. to 24 ins.	planers, faced same way	9
28 ins. to 30 ins.	planers, faced same way	5
14 ins.	multi-spindle drills	40
16 ins. to 20 ins.	upright drills	36
26 ins. to 30 ins.	upright drills	12
	Small milling machines	36
	Ordinary milling machines and automatic screw machines	20
	Hand screw machines and plain and universal grinders	15
	Polishing machines	24

The above areas are exclusive of main passage-ways, and if it is decided to run a 6 ft., 8 ft., or 10 ft. passage the entire length of building this area must be added.

Every tool in a workshop should be drawn in outline as regards its leading dimensions, and the drawing pasted on a suitable board together with the overall dimensions of the work it will take, the speeds, feeds, and other information for the drawing office.

The drawing office should be the repository of all information as to stock material; it should really include the stores and purchase department, and work in progress in the shop, and during erection should be visited by the draughtsmen chiefly concerned, so that needless costs and charges in manufacture and erection may be avoided.

Concrete Floors.

To deaden the noise from trucks rumbling over a concrete floor, use a heavy tar paper pasted to the floor by paint. The floor to be protected is first given one coating of grey cement paint. On the following day, when the paint is thoroughly dry, a second coat is applied. At the same time one side of a five-ply tar paper is painted; and when both paper and floor are still wet the paper is carefully laid, wet side down, on the floor and rolled with either a roller or wide-tired truck until all signs of air-pockets beneath the paper disappear. The surface improves with age, and very effectively reduces noise at a low cost.—*Contract Record.*

Oil stains on concrete floors may be removed by using a mixture of 1 lb. of oxalic acid in 3 gallons of water, with enough wheat flour added to make a paste that can be applied with a brush. Allow the application to remain for two days, and then remove it with clean water and a scrubbing brush. A second application may be necessary in stubborn cases.—*Building News.*

To remedy dusty concrete floors, a surface treatment of some kind should be applied to remove the surface skin which does not exceed $\frac{1}{32}$ in., or properly to treat it. One way is to grind the surface by hand or power as a terrazzo floor is polished. Other methods are to apply liquid coatings of various kinds. One of the most satisfactory treatments is with boiled linseed oil thinned with petrol to such a consistency that it will penetrate the pores of the surface. If one coat does not cure the trouble generally two will. A second method is to clean the surface thoroughly and then apply a coat of silicate of soda or water glass, 40 deg. Baumé, diluted one part to six of water, to seal the surface. Then wash off the excess which opens out the pores again and apply a second coat.

See also p. 399.

For making slippery iron floor plates reasonably safe under ordinary shop conditions, mix a small quantity of powdered sal ammoniac thoroughly with a large quantity of fine sand. Sprinkle the mixture over the floor so that all parts are covered, and damp the surface with a watering can and let it lie over a week-end, or even overnight, then sweep the sand up. The rust coating formed by the treatment will be found to last for several weeks, after which the process must be repeated.—*Ironmonger.*

Electric Power Driving.

Where many small machines are placed near together and driven more or less intermittently, one small line shaft and one motor will drive all the little machines, and the motor will be of far less cost and power than the aggregate of motors if applied one to each machine. But for large machines, single motors to each machine are a decided economy.—*C. H. Benjamin.*

The Use of High-Pressure Gas in Works.

A satisfactory arrangement is to have a shop supplied with gas at 200 ins. pressure, to be reduced at the various furnaces, etc., by means of governors or valves, to the predetermined pressure corresponding with the temperature it is desired to maintain in each furnace. Pressures suitable for typical work are as follows:—For melting tin or solder a pressure of 65 ins.; for small furnaces for hardening, etc., the same pressure may be used; for blueing steel, from 65 ins. to 80 ins., the flames playing horizontally under the lime-tray set in a brick frame; for the lead-pot for tempering steel the pressure should be 150 ins.; while for melting metals at from 2000° to 2600°F. it should be 200 ins. Soldering-irons may be heated with gas at 65 ins.; two burners, consuming 6 ft. of gas per hour, and playing direct on to the irons, being sufficient to keep a workman going without delays. For lighting, gas at 65 ins. may be used.

With gas at 2*s.* per 1,000 and coal at 20*s.* per ton there is little to choose between gas and coal firing as regards cost. As regards cleanliness, uniformity, etc., the advantages are, however, in favour of gas, and in many cases with properly-designed furnaces it is greatly superior to coal, not only from the point of view of cost, but from convenience and ease of manipulation. A properly-designed gas-furnace will enable the time of preparation from the cold to be greatly shortened.—*A. W. Onslow.*

WORKSHOP PRACTICE.

Limits and Limit Gauges.

Probably two main reasons have delayed the general use of limit gauges among machinists for some years after they were generally recognised as necessary. First, the cost of making them of the usual solid type was so great that they were practically luxuries, except for repetition work—for that they were absolutely essential. Secondly, inasmuch as there was no recognised standard of limits, it was 'easier' to leave the 'fit' to the judgment of the individual workman.

There are four usual 'fits' in practical mechanics, namely—

The *force* fit, which requires a screw, a hydraulic press, or the use of heat on one piece to get the fits together. The *drive* fit, which can be done by a hammer. The *push* fit, which can be pushed together by hand, and may even be revolved slowly, but would heat and seize if run for any time; and the *running* fit, which will run indefinitely if lubricated, and varies with the class of work. Running fits may be divided into several classes, and are classed in three divisions by the Newall Engineering Co.

The provision of a separate external limit gauge for each and every diameter used—and for each variation in the quality of fit required on such diameter—would entail in most cases an expenditure so heavy as to practically prohibit the installation of a full equipment: yet in modern commercial production efficient means of gauging work are imperative, and, to overcome the necessity for the multiplicity of external limit gauges required, an adjustable type was specially designed and introduced by the Newall Engineering Co. These being adjustable, they are not affected by wear as are all solid gauges.

The gauge has two fixed anvils on one jaw and two movable anvils (adjusting screws) on the other jaw, forming two pairs of measuring faces, the front pair being the 'go' and the back pair the 'not go' points; the adjusting screws are securely locked in position by means of cotters and nuts of special design. Each gauge, by the length of travel of its adjusting screws, covers a range of sizes, and can be easily and quickly set up to such diameter and limits within its range as may be wanted.

There are two methods of setting up or adjusting the measuring points. The first is by means of limit reference bars ground to the 'high' and 'low' limits for the different allowances prescribed in standard tables. The other method is with standard reference bars and 'setting dials'; the adjusting screws of the external limit gauges have taper holes in their inner ends, and the dials are provided with taper shanks which fit into these holes. The 'go' and 'not go' points of the gauge are set to a standard reference bar (or other reliable standard) of the nominal size required: the adjusting screws are then locked and the dial and index inserted at zero. The screw carrying the dial is released and can be adjusted to the desired allowance, either above or below 'standard,' by rotating the screw in the plus or minus direction, as shown by the arrows on the index. This screw is then locked, the dial and index transposed, and the process repeated with the other screw. For English sizes the dials are divided to read by ·00025 in., and for metric sizes by ·01 mm. One pair will serve for all gauges up to 6 ins., or 150 mm.; gauges over these sizes require a larger pair.

Much good work is done by means of standard gauges, and thin paper for giving differences. Such a system cannot be recommended, for it is costly to carry out—costly, that is, in labour. It is a system more suited to the mechanician's laboratory than to the workshop, and though perhaps justifiable in face of the heavy cost of a full set of limit gauges, is not worthy of adoption where adjustable limit gauges can be procured.

Definitions as given by the British Engineering Standards Association:—*Tolerance*—a difference in dimensions prescribed in order to tolerate unavoidable imperfections of workmanship. *Allowance*—a difference in dimensions prescribed in order to allow of various qualities of fit.

BRITISH STANDARD TOLERANCES AND ALLOWANCES FOR RUNNING FITS.*
(No 27—1906.) (*Abstract.*)

Extra Fine Quality Work.							
Nominal Diameter.	Shaft.			Allowance (Minimum Difference between Shaft and Hole.	Hole.		
	Minimum Diameter.	Tolerance (Difference.)	Maximum Diameter.		Minimum Diameter.	Tolerance (Difference.)	Maximum Diameter.
Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.
¼	·2498	·0002	·25	·0002	·2502	·0003	·2505
½	·4997	·0003	·50	·0003	·5003	·0004	·5007
¾	·7496	·0004	·75	·0004	·7504	·0004	·7508
1	·9995	·0005	1·00	·0005	1·0005	·0005	1·0010
1½	1·4994	·0006	1·50	·0006	1·5006	·0006	1·5012
2	1·9993	·0007	2·00	·0008	2·0008	·0007	2·0015
3	2·9993	·0007	3·00	·0008	3·0008	·0007	3·0015

* By permission of the British Engineering Standards Association.

BRITISH STANDARD TOLERANCES AND ALLOWANCES FOR RUNNING FITS—*continued.*

Nominal Diameter.	Shaft.			Allowance (Minimum Difference between Shaft and Hole.)	Hole.		
	Minimum Diameter.	Tolerance (Difference.)	Maximum Diameter.		Minimum Diameter.	Tolerance (Difference.)	Maximum Diameter.
	1st Quality Work.						
Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.
¼	·2495	·0005	·25	·0005	·2505	·0003	·2508
½	·4993	·0007	·50	·0007	·5007	·0007	·5014
¾	·7491	·0009	·75	·0008	·7508	·0009	·7517
1	·9990	·0010	1·00	·0010	1·0010	·0010	1·0020
1½	1·4988	·0012	1·50	·0012	1·5012	·0013	1·5025
2	1·9985	·0015	2·00	·0015	2·0015	·0015	2·0030
3	2·9982	·0018	3·00	·0018	3·0018	·0017	3·0035
4	3·9980	·0020	4·00	·0020	4·0020	·0020	4·0040
5	4·9980	·0020	5·00	·0020	5·0020	·0020	5·0040
6	5·9975	·0025	6·00	·0025	6·0025	·0025	6·0050
7	6·9975	·0025	7·00	·0025	7·0025	·0025	7·0050
8	7·9975	·0025	8·00	·0025	8·0025	·0025	8·0050
9	8·9970	·0030	9·00	·0030	9·0030	·0030	9·0060
10	9·9970	·0030	10·00	·0030	10·0030	·0030	10·0060
11	10·9970	·0030	11·00	·0030	11·0030	·0030	11·0060
12	11·9970	·0030	12·00	·0030	12·0030	·0030	12·0060
	2nd Quality Work.						
¼	·2492	·0008	·25	·0008	·2508	·0008	·2516
½	·4985	·0015	·50	·0014	·5014	·0014	·5028
¾	·7482	·0018	·75	·0017	·7517	·0018	·7535
1	·9980	·0020	1·00	·0020	1·0020	·0020	1·0040
1½	1·4975	·0025	1·50	·0025	1·5025	·0025	1·5050
2	1·9970	·0030	2·00	·0030	2·0030	·0030	2·0060
3	2·9965	·0035	3·00	·0035	3·0035	·0035	3·0070
4	3·9960	·0040	4·00	·0040	4·0040	·0040	4·0080
5	4·9960	·0040	5·00	·0040	5·0040	·0040	5·0080
6	5·9950	·0050	6·00	·0050	6·0050	·0050	6·0100
7	6·9950	·0050	7·00	·0050	7·0050	·0050	7·0100
8	7·9950	·0050	8·00	·0050	8·0050	·0050	8·0100
9	8·9940	·0060	9·00	·0060	9·0060	·0060	9·0120
10	9·9940	·0060	10·00	·0060	10·0060	·0060	10·0120
11	10·9940	·0060	11·00	·0060	11·0060	·0060	11·0120
12	11·9940	·0060	12·00	·0060	12·0060	·0060	12·0120
	3rd Quality Work.						
¼	·2484	·0016	·25	·0016	·2516	·0016	·2532
½	·4979	·0021	·50	·0028	·5028	·0028	·5056
¾	·7474	·0026	·75	·0035	·7535	·0035	·7570
1	·9970	·0030	1·00	·0040	1·0040	·0040	1·0080
1½	1·4962	·0038	1·50	·0050	1·5050	·0050	1·5100
2	1·9956	·0044	2·00	·0060	2·0060	·0060	2·0120
3	2·9947	·0053	3·00	·0070	3·0070	·0070	3·0140
4	3·9940	·0060	4·00	·0080	4·0080	·0080	4·0160
5	4·9940	·0060	5·00	·0080	5·0080	·0080	5·0160
6	5·9925	·0075	6·00	·0100	6·0100	·0100	6·0200
7	6·9925	·0075	7·00	·0100	7·0100	·0100	7·0200
8	7·9925	·0075	8·00	·0100	8·0100	·0100	8·0200
9	8·9910	·0090	9·00	·0120	9·0120	·0120	9·0240
10	9·9910	·0090	10·00	·0120	10·0120	·0120	10·0240
11	10·9910	·0090	11·00	·0120	11·0120	·0120	11·0240
12	11·9910	·0090	12·00	·0120	12·0120	·0120	12·0240

NEWALL STANDARDS (FOR SIZES UP TO 6 INCHES).

TOLERANCES IN STANDARD HOLES (2 GRADES).

Nominal Diameters in inches		Up to ½	⅝–1	1 1/16–2	2 1/16–3	3 1/16–4	4 1/16–5	5 1/16–6
Class A	High limit	+·00025	+·00050	+·00075	+·00100	+·00100	+·00100	+·00150
	Low „	−·00025	−·00025	−·00025	−·00050	−·00050	−·00050	−·00050
	Tolerance	·00050	·00075	·00100	·00150	·00150	·00150	·00200
Class B	High limit	+·00050	+·00075	+·00100	+·00125	+·00150	+·00175	+·00200
	Low „	−·00050	−·00050	−·00050	−·00075	−·00075	−·00075	−·00100
	Tolerance	·00100	·00125	·00150	·00200	·00225	·00250	·00300

ALLOWANCES FOR FORCE FIT

Nominal Diameters in inches		Up to ½	⅝–1	1 1/16–2	2 1/16–3	3 1/16–4	4 1/16–5	5 1/16–6
Class F	High limit	+·00100	+·00200	+·00400	+·00600	+·00800	+·01000	+·01200
	Low „	+·00050	+·00150	+·00300	+·00450	+·00600	+·00800	+·01000
	Tolerance	·00050	·00050	·00100	·00150	·00200	·00200	·00200

ALLOWANCES FOR DRIVING FITS.

Nominal Diameters in inches		Up to ½	⅝–1	1 1/16–2	2 1/16–3	3 1/16–4	4 1/16–5	5 1/16–6
Class D	High limit	+·00050	+·00100	+·00150	+·00250	+·00300	+·00350	+·00400
	Low „	+·00025	+·00075	+·00100	+·00150	+·00200	+·00250	+·00300
	Tolerance	·00025	·00025	·00050	·00100	·00100	·00100	·00100

ALLOWANCES FOR PUSH FITS.

Nominal Diameters in inches		Up to ½	⅝–1	1 1/16–2	2 1/16–3	3 1/16–4	4 1/16–5	5 1/16–6
Class P	High limit	−·00025	−·00025	−·00025	−·0005	−·0005	−·0005	−·0005
	Low „	−·00075	−·00075	−·00075	−·0010	−·0010	−·0010	−·0010
	Tolerance	·0005	·0005	·0005	·0005	·0005	·0005	·0005

ALLOWANCES FOR RUNNING FITS (3 GRADES).

Nominal Diameters in inches		Up to ½	⅝–1	1 1/16–2	2 1/16–3	3 1/16–4	4 1/16–5	5 1/16–6
Class X	High limit	−·00100	−·00125	−·00175	−·00200	−·00250	−·00300	−·00350
	Low „	−·00200	−·00275	−·00350	−·00425	−·00500	−·00575	−·00650
	Tolerance	·00100	·00150	·00175	·00225	·00250	·00275	·00300
Class Y	High limit	−·00075	−·00100	−·00125	−·00150	−·00200	−·00225	−·00250
	Low „	−·00125	−·00200	−·00250	−·00300	−·00350	−·00400	−·00450
	Tolerance	·00050	·00100	·00125	·00150	·00150	·00175	·00200
Class Z	High limit	−·00050	−·00075	−·00075	−·00100	−·00100	−·00125	−·00125
	Low „	−·00075	−·00125	−·00150	−·00200	−·00225	−·00250	−·00275
	Tolerance	·00025	·00050	·00075	·00100	·00125	·00125	·00150

(*The Newall Engineering Co., London.*)

Newall Standards.

Class X is suitable for engine and other work where easy fits are wanted.

Class Y is suitable for high speeds and good average machine work.

Class Z is suitable for fine tool work.

Although in the above tables five places of decimals are used, the dimensions actually run in thousandths of an inch and half- and quarter-thousandths.

Limit Arms for Micrometers.

A ready means of converting an ordinary micrometer to a limit gauge having a tolerance of from 0·0001 to 0·022 in. with variations of 0·0001 in. is provided by a pair of arms (fig. 13) manufactured by Messrs. Accles & Pollock, Oldbury, Birmingham. The micrometer having first been set to the low limit required, the pair of arms are cramped compass-friction-tight

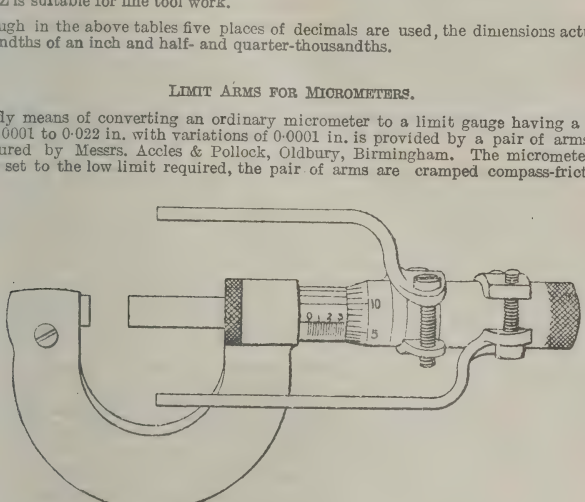


Fig. 13.

on to the micrometer barrel, the short arm just clearing the figures at the bevelled end. The short arm is now adjusted from its cramp end, so that it strikes the back of the frame at the low limit. The screws are then tightened. The long arm is similarly adjusted so that it strikes the front of the frame at the high limit. When the change to new limits is greater than one revolution of the thimble, the screws are slackened, and both arms brought to the top; the procedure is then as before. The ordinary use of the micrometer is not interfered with.

(*Machinery.*)

DEPRECIATION OF PLANT AND MACHINERY.

Depreciation may be divided into, roughly, two classes—(1) deterioration, (2) obsolescence. An annual charge must, therefore, be provided for—(1) deterioration, (2) renewals, (3) obsolescence. Depreciation will be dealt with under these heads, as affecting (1) cost of production, (2) income-tax, (3) fire insurance.

Residual Value.—In dealing with the estimated life of plant or machinery, the residual value of such plant or machinery when its period of usefulness has expired must be taken into account, and with plant of special nature, it may generally be assumed that in proportion to its special character its residual value will be low. Plant of general character, engines, boilers, shaftings, pulleys, etc., carries a high residual value in the event of displacement.

Method.—There are two extreme methods of valuation. (1) To assume an average percentage rate covering the whole plant of, say, 5 to 7½ per cent. on the book value. (2) The individual valuation of each machine, and the writing off of the detailed differences. Both these methods are faulty; in the first the result is hazardous, as the percentage may be assumed on a proportion of general and special plant, which may vary considerably afterwards. In the second place the detail is considerable; it has to be done at a time of pressure, and if left to other hands than those of a principal, the results are generally too favourable. In arriving at a basis, therefore, for the settlement of a depreciation charge, it will be found generally desirable to classify the plant, and by taking the plant and machinery in each department, and abstracting the items of each

under five or six classes, we shall get, in the first place, a departmental separation, and, secondly, a classification under each department of, say—

Motive Power.—Boilers, engines, etc.

Power Transmitters.—Shafting, pulleys, etc.

Process Plant.—Fixed, wearable, loose.

Accessory.—Railway trucks, weighing machines, cranes, travellers, and the like.

By leaving space in each department inventory, we can provide for additions, and by having loose sheets with columns for abstracting, we can economise in rewriting. From these totals a special rate in respect of deterioration, obsolescence, and renewals, based on personal experience, can be applied to each department and subdivision. These particulars will afford a basis for charges in the cost sheets, thus obtaining a departmental depreciation charge. A fixed rate can then be adopted.

Diminishing Value.—Before establishing a percentage rate on these classes of plant, a basis must be settled on which the rates are calculated. For some years the basis of the diminished value obtained by the writing off of the annual depreciation charge has been generally adopted, but latterly there has been a tendency to revert to the basis of original cost. For instance, a rate of 10 per cent. on the original cost will exhaust the value in ten annual instalments; but a rate of about 16½ per cent. would be required to exhaust the value in the ten years if calculated on the diminishing value remaining after the deduction of depreciation in each year.

The argument in favour of basing the calculation on the diminishing value is that the sums written off in the earlier years were greater when the repairs were small, and this tended to equalise matters. Too often, however, the two factors of rate and basis have not been settled together, and consequently the basis of diminishing value has had the effect of leaving a considerable value in the books when the plant has disappeared.

For instance, a 5 per cent. rate generally carries the impression of a twenty years' life, yet taking 100*l.* as the cost, and writing off on the diminishing value, the balance left at the end of the twentieth year is 37*l.* 14*s.* After twenty years' service the residual value of the plant would be, roughly, one-third of the first cost, a figure far too high, and it may be seen that there is room here for considerable improvement. Besides this, adopting the basis of original cost, the position is much clearer for any revision of the rate at any subsequent period.

Depreciation Rates.—Dealing with these subdivisions of the plant in order, we have :—

Motive Power, Boilers, Engines, etc.—Some authorities place the depreciation on engines as high as 12½ per cent., and boilers at 10 to 15 per cent. Much depends on stress of working and the water. Mathieson places the life of a boiler at fifteen years, with renewal of the furnace at the end of ten years, and recommends a rate of 7½ per cent. per annum on the diminishing value on this class, no provision being made for obsolescence. This is, however, an extreme view.

Power Transmitters.—Shafting, pulleys, and plant under this head have, as a rule, a high residual value, even if displaced, and probably a rate of 5 per cent. will be found sufficient provision. Belting should be classified as loose tools. In this class a rate of 5 per cent. would be recommended, divided into 3 per cent. for deterioration and a renewal rate of 2 per cent. No provision is made for obsolescence.

Process Plant, Fixed.—Under this head would be placed all heavy process plant, the renewal portions of which are classified under their separate heading. The deterioration would then be met by a rate of 2½ per cent., the renewal rate at 2½ per cent. An obsolescence rate depended on the nature of the processes.

Process Plant (Wearable).—The exteriors of this plant under our classification have already been dealt with, and it is necessary therefore to provide a heavy renewal rate. By the dissection of this plant under the shop totals the separation of the different process plants has been secured, and it is easy to apply to each shop total a distinctive rate for renewals applicable to its character and requirements. This will be readily based on experience.

Process Plant (Loose).—In the case of loose tools, the yearly valuation gives the most reliable results. In some cases there is an annual increase in this class, but this should verify itself. It is to be remembered that at a going-concern valuation this cannot, in the nature of the plant, work out at more than half the original cost value.

Accessory Plant.—In this case there is a high residual value due to general utility, and consequently a rate for deterioration of 2½ per cent. and a renewal rate of 2½ per cent. should suffice.

Horses, Carts, Harness, etc.—The risks and depreciation on this class are too great to include in any average rate. The treatment accorded to loose tools of a revaluation annually gives probably the best results.

Depreciation and Income-Tax.—The problems of income-tax and fire insurance are mainly connected with the rate of depreciation. The rate of depreciation allowed under the Income-tax Acts differs considerably in different localities. For instance, the rate of depreciation allowed to engineers in Leicester is 7½ per cent. on the full value, while in Cardiff the rate is only 5 per

cent. on the diminished value. Hosiery machinery in Leicester obtains 7½ per cent. as against 5 per cent. on lace machinery in Nottingham. Dyers' machinery in Leicester can get 10½ per cent., if justified on enquiry. Generally speaking, a distinction is made between motive power and process plant, and the general practice assumes 5 per cent. on motive power and 7½ per cent. to 10 per cent. on process plant; these allowances are in respect to the two headings of deterioration and renewals. There appears to be no annual allowance for obsolescence at present, but where claims are made an allowance is made from the assessment for plant which is scrapped to the full amount at which the same stood in the books at the previous stock-taking. With regard to horses, no allowance is made, but the full costs of replacement are to be charged as they occur.

Fixtures.—On these no allowance for depreciation is made, unless they are included under the head of plant. Any replacements are allowed in full against the year's working.

The Inland Revenue authorities have now reverted in a number of cases to the basis of original cost, and where, say, 5 per cent. is allowed on original cost, there is an alternative rate of 7½ per cent. allowed on diminishing value.

Renewals.—The practice adopted by the income-tax authorities provides for the charging up of renewals to capital account where depreciation is allowed, and they usually decline to allow both renewals and depreciation as a charge against the year's profits. The result is to treat renewals as capital expenditure, which in turn are subject to depreciation at the rate agreed on. Taking Mathieson's example of the life of a boiler at fifteen years, at the end of ten years, when furnaces have to be renewed, it will be seen that by charging renewals to capital only 25 per cent. of the cost of the renewal before the expiration of the life period can be provided. Therefore, to charge renewals to capital, there must be included in the calculation of the rate of depreciation the provision for renewals along with deterioration. The modern tendency is to separate renewals from depreciation and to provide a fixed sum annually against renewals and repairs, charging the yearly outlay under both these heads against the sum thus accumulated, and leaving depreciation to include deterioration and obsolescence only.

Fire Insurance and Depreciation.—The writing down of machinery and plant by an increased rate of depreciation, the value in the case of a fire would be affected in the claim for replacement. It is usual in some offices to append a declaration on the face of the policy that the depreciation written off in the books shall not be taken for the purpose of assessing a fire loss. Usually the assured is covered for the value of the plant at the time of the fire, and that the original cost of the plant, less depreciation, is not necessarily the basis of the claim. There appears to be no scale of depreciation in force for different kinds of plant recognised by the insurance companies, but these losses are generally settled as between the assessors and surveyors acting for both parties, or, failing their agreement, by arbitration: no special rates are applicable, but each case is settled on its merits. The principal factor appears to be the possession of definite and specific information on the value and cost of the plant, and the rate of depreciation does not in any way govern the claim in case of fire.

It is a general provision in fire insurances and policies that the company may elect to replace the plant; instances of this have rarely occurred, if ever, and probably it was never intended as other than a protection to the company.

There exists a considerable controversy as to the proper authority to fix the rate of depreciation, but it is now generally accepted that for depreciation the engineer, and for financial consideration the auditors, take first place.—*Herbert T. Howell.*

The following rates of depreciation have been recently authorised by the Government of Australia in connection with the Federal income-tax on industrial establishments:—Boilers, 5 per cent.; boring machinery, 10 per cent.; cables, aerial, 7·5 per cent.; cables, underground, 2·5 per cent.; condensers, 5 per cent.; cranes, 5 per cent.; elevators, electric, 7·5 per cent.; elevators, hydraulic, 10 per cent.; engines, steam, 5 per cent.; foundry cupolas, 15 per cent.; furniture, 5 per cent.; generators, 5 per cent.; machine tools, 5 per cent.; machinery used in ordinary manufacturing, 5 per cent.; meters, switchboard, 7·5 per cent.; motor trucks, 10 per cent.; patterns, 15 per cent.; pumps, 5 per cent.; galvanised iron tanks for rain water, 5 per cent.; galvanised iron tanks for other water, 10 per cent. The figures are based on the diminishing value of the assets and not on their original cost.

Memorandum by the Board of Inland Revenue on the subject of Income Tax Allowances for Depreciation and Obsolescence of Plant and Machinery, etc.

Replacement of Obsolete Machinery or Plant.

In addition to the allowance for wear and tear of plant and machinery there has been in operation since 1897 an allowance for obsolescence, and this allowance has been made statutory by Section 24 of the Finance Act, 1918.

The necessity for this allowance arises from the fact that machinery has frequently to be replaced before it is worn out, owing to its having become obsolete and incapable of competing with more up-to-date machinery. Accordingly, where new machinery is introduced in place of machinery not wholly worn out, an allowance is made, as a deduction from the profits of the year,

of so much of the cost of replacement as is equivalent to the written down value of the machinery replaced less any sum realised by the sale of it, the balance of the cost of the new machinery being an addition to the capital of the business.

For example, from the value of a machine which originally cost 1,000*l.*, wear and tear allowances have been made year by year until they have aggregated 600*l.*, so that the written down value of the machine stands at 400*l.* The trader now considers that the machine is obsolete, scraps it and replaces it by an up-to-date machine which costs 1,400*l.* He sells the old one for 50*l.* He is entitled to charge as a trade expense incurred in the year in which the replacement is made the sum of 350*l.*, that is—

	£	£
Original cost of the machine replaced		1,000
Less (*a*) aggregate amount of wear and tear allowances already made in respect of the machine	600	
(*b*) sum realised by its sale	50	
		650
Amount treated as trade expense in year of replacement		350

Assuming the total written down value of the trader's plant and machinery before the sale of the obsolete machine to be 10,000*l.*, future wear and tear allowances will be made upon a value of 11,000*l.*, thus :—

	£
Written down value of total plant, etc.	10,000
Deduct written down value of the obsolete machine	400
	9,600
Add cost of new machine	1,400
	11,000

The obsolescence allowance is not made in quite the same way as the wear and tear allowance, for the latter is by Statute an allowance from the assessment *after* the three years' average is struck. Thus the wear and tear allowance applicable to the year 1918–19 would be given as a deduction from the gross assessment for 1918–19 as follows :—

	£
Trading profits (beofre allowing wear and tear)—	
1915—Loss	5,000
1916—Profit	10,000
1917—Profit	13,000
	3)18,000
Gross assessment 1918–19	6,000
(If the total wear and tear allowance due for the year 1918–19 were 6,500*l.* a sum of 6,000*l.* would be allowed against the 1918–19 assessment, and the balance of 500*l.* carried forward for deduction in future years.)	
Wear and tear allowance	6,000
Net amount on which tax is payable for 1918–19	nil

An allowance for obsolescence in 1918 of say 10,000*l.* would, however, be a deduction from the commercial profits of 1918, turning them from a profit of say 9,800*l.* to a loss of 200*l.* The first assessment to be affected would be that of 1919–20, as follows :—

	£
Profits 1916	10,000
1917	13,000
1918—Loss	200
	3)22,800
Gross assessment 1919–20	7,600
Less—	
Allowance for wear and tear, say, 6,800*l.*, for 1919–20, plus the unexhausted balance carried forward from 1918–19, 500*l.* =	7,300
Net amount on which tax is payable for 1919–20	£300

The business year 1918 would also come into the average for the tax years 1920–21 and 1921–22, by which time the allowance would have had its full effect.

Cost of Renewals as an Alternative Method.

As an alternative to the allowance for wear and tear and obsolescence of plant and machinery the cost of renewing plant and machinery may be claimed as a deduction in the computation of Income Tax liability under Schedule D. When this course is preferred by the taxpayer the amount to be allowed is the actual cost of the new plant and machinery (excluding any part of such cost which is attributable to additions or improvements, i.e. to an increase in capital) after deducting the scrap value or realised price of the plant and machinery replaced.

Example (a).—A machine which originally cost 1,000*l.* is worn out and replaced by a machine of similar power or size or capacity which now costs 1,500*l.* The whole of this expense of 1,500*l.* is allowable from the profits of the year in which it is incurred.

Example (b).—A machine which originally cost 1,000*l.* is worn out and replaced by one of greater power or size or capacity costing 2,500*l.* The amount to be allowed as an expense is in this case not the full 2,500*l.*, but only the cost of replacing the old machine by one of similar power or capacity, say 1,500*l.*

Although this method of allowance is alternative to the wear and tear allowance for the same class of plant, the two principles may run concurrently for different classes of assets in the same business. For example, the wear and tear allowance may apply to fixed machinery, while the renewal method is used for loose plant.

Estimating Cost of Steel Bars.

Locate on axis OA (fig. 14) the position which represents the price in shillings per cwt. at which the particular steel can be bought. From that point travel to the right, horizontally, until the diagonal which represents the diameter of bar required is reached. From that point pass vertically down to axis OB and read off the price per foot for bar of that diameter in the material required.

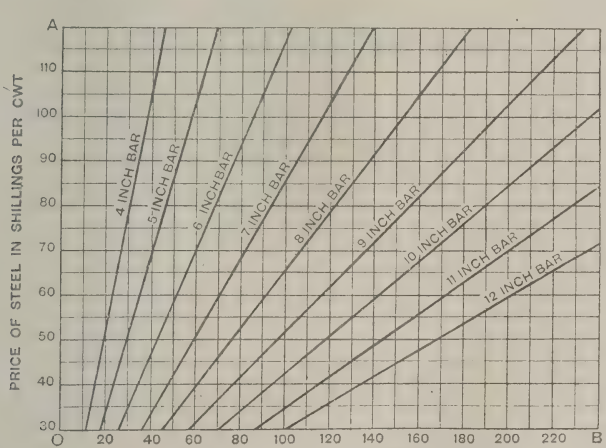


Fig. 14.

The chart covers steels from common mild steel to high grade nickel-chrome steels, and it can be used for determining the value of forgings if the price of plain forgings per cwt. is known.

(*Howard Ensaw, 'Machinery.'*)

SECTION XVI

FLOUR MILLING—COTTON MILLS—OIL MILLS—CANE SUGAR MILLS AND MACHINERY

SECTION XVI

FLOUR MILLING — COTTON MILLS — OIL MILLS — CANE-SUGAR MILLS AND MACHINERY.

FLOUR MILLING.

(Contributed by E. R. & F. Turner, Ltd., Engineers, Ipswich.)

Fifty years ago the reducing of wheat to flour was done almost entirely by means of stones; now it is done by chilled iron rolls, except in a few countries where stones are still retained.

Stones are still used in England and elsewhere for making 'stone' flour, whole meal, farmers' grist, etc. They are usually from 36 to 48 ins. in diameter, top stone the runner, driven by gearing from a horizontal layshaft; speed about 150 revs. per minute; horse-power required from 8 to 12 b.h.p., but largely dependent on the condition of the grain and the sharpness of the dress in the stones.

ROLLER SYSTEM.

The very white, high-class flour of the present day is obtained by means of a very elaborate system. Every mill of any size is fitted with:—

1. Intake plant. 2. Wheat-cleaning plant. 3. Milling plant.

The intake plant for getting the wheat from trucks or barges into the mill may be either pneumatic (suction) or elevator, and is arranged so that the wheat may be deposited into any one of the storage bins or silos provided for the purpose.

The cleaning plant consists of scourers, aspirators, brush machines, etc., and also includes a plant for washing and drying such wheats as require this treatment.

The milling plant consists of roller mills, purifiers, and dressing machines connected by spouts, elevators, and conveyors. The actual roll contact surface is usually about 100 ins. per sack of 280 lbs. of flour per hour, which is divided up into approximately 40 ins. on the break rolls and 60 on the reductions. The break rolls are fluted from about 12 to 26 per inch, for opening the wheat berry, releasing the kernel and cleaning the bran, which is separated by means of sieves; the reduction rolls are smooth or very finely fluted or scratched, and reduce the kernel into fine flour, which passes into sifting machines and is dressed through fine silk. Sifting machines may be either of the reel type with internal beaters, commonly called 'centrifugals,' or the flat sieve, called 'plansifters,' both types being covered with silk containing from 100 to 150 threads per lineal inch for dressing out the finest flours, or coarser if required.

The semolina and middlings released by the break rolls are passed through purifiers in which strong currents of air pass through them, eliminating fine branny particles and other impurities before they are passed on to the reduction rolls.

Exhaust fans are connected to all machines for drawing away the hot air which is generated by the rolls and other frictional surfaces.

One sack of flour (280 lbs.) is made from 400 lbs. of wheat.

Angles of spouts for wheat should be not less than 25 degrees, and for flour and bran not less than 55 degrees.

Speed of elevators for wheat 300 to 350 feet per minute.
" " flour 180 feet per minute.
" " other mill stock 220 feet per minute.
Speed of spiral conveyors 150 feet per minute.
" band conveyors for wheat 9 feet per second.
" " " light stock 3 feet per second.
" break rolls 900 feet per minute.
" reduction rolls 630 feet per minute.

Power required about 10 to 12 b.h.p. per sack of flour per hour.

COTTON MILLS.

(BLACKBURN DISTRICT. YATES & THOM, ENGINEERS.)

For 90,000 mule spindles and preparation.
Main building, 281 feet by 130 feet; 4 floors; 3 spinning rooms; 1 card room.
74 self-acting mules. Indicated horse power, 1,380. Boiler-pressure, 160 lbs.
Engines.—Triple-expansion double-tandem condensing; one high-pressure cylinder, one intermediate cylinder, two low-pressure cylinders :—

Diameter of high-pressure cylinder, 21 inches; ratio, 1·0; stroke, 5 feet 6 inches.
Diameter of intermediate-pressure cylinder, 34½ inches; ratio, 2·7; speed, 60 per minute.
Diameter of each low-pressure cylinder, 39 inches; ratio, 6·9; piston speed, 660 feet per minute.

Rope pulley 30 feet diameter, grooved for 32 ropes 1⅝ inch diameter.
Velocity of ropes, 5,654 feet per minute.
Boilers.—Steel. 4 Lancashire type (one being spare); length, 30 feet; diameter, 8 feet. Furnaces, diameter 40 inches; working pressure, 160 lbs.
Economiser.—Green's type, from 278 to 384 pipes.
Mill Shafting.—Card shaft, 185 revolutions; 3⅜ inches to 2½ inches diameter.
9 drawing frames, 9 slubbing frames, 16 intermediate frames, and 44 roving frames of 176 spindles.
Roving shaft, 270 revolutions, 3½ inches to 2½ inches diameter.
Drawing, intermediate, and slubbing shaft, 225 revolutions, 3⅜ inches to 2½ inches diameter; drives also 27 cards.
Spinning-room shafts, 4¼ inches to 2¾ inches diameter.

For 71,000 ring spindles and preparation.
Boilers.—Four Lancashire, 30 feet by 8 feet, 160 lbs. per square inch, with Green's economiser of 384 pipes.
Engine.—Horizontal cross compound, 1,700 i.h.p. at 66 r.p.m.
Cylinders, 30 inches and 60 inches diameter by 5 feet stroke.
Jet condenser 50 cubic feet capacity. Two air pumps, each 31 inches diameter by 17-inch stroke at 66 r.p.m.
Flywheel, 24 feet diameter, 57 tons. 43 ropes 1⅜ inch diameter.
Rope-speed, 4,970 feet per minute; i.h.p. per rope, 39·5.
Piston speed, 660 feet per minute; air-pump speed, 187 feet per minute.
Cylinder ratio, nominal 4 to 1; mean p, 30 lbs. per square inch.
Machinery.—Includes 15 opening and scutching machines, 132 cards, 18 drawing frames, 11 slubbing frames, 16 winding frames, 22 intermediate frames, 48 roving frames, 164 ring frames of 432 spindles each, 22 beaming machines, 6 warping mills, 100 reels, and 4 bundling presses.

The following are plants completed at Royton, Rochdale, Leigh, and Atherton, by Messrs. Yates & Thom, just before the war :—

ROYTON.

For 117,584 mule spindles, 10's to 24's counts.
Horizontal cross compound engine cylinders, 28 inches and 58 inches diameter, 5 feet stroke, 1,600 i.h.p; 65 revolutions per minute.
Four boilers, 30 feet long, 8 feet 6 inches diameter, 180 lbs. pressure.
Economiser, with 480 pipes.
Fly rope pulley, 24 feet diameter; 40 1⅝-inch ropes.

For 132,000 mule spindles, 10's to 42's counts.
Horizontal cross compound engine cylinders, 28 inches and 58 inches diameter, 5 feet stroke, 1,600 i.h.p. ; 65 revolutions per minute.
Four boilers, 30 feet long, 8 feet 6 inches diameter, 180 lbs. pressure.
Superheaters.
Fly rope pulley, 24 feet diameter ; 40 1⅝-inch ropes.

ROCHDALE.

For 41,000 mule and ring spindles, 3's to 12's counts.
Horizontal cross compound engine cylinders, 19 inches and 40 inches diameter, 4 feet stroke, 600 i.h.p. ; 70 revolutions per minute.
Two boilers, 32 feet long, 8 feet 6 inches diameter, 180 lbs. pressure.
Economiser, with 192 pipes.
Fly rope pulley, 22 feet diameter ; 21 1⅝-inch ropes.

LEIGH.

For 94,560 mule spindles, 40's to 80's counts.
Horizontal cross compound engine cylinders, 23 inches and 50 inches diameter, 5 feet stroke, 1,200 i.h.p. ; 65 revolutions per minute.
Three boilers, 30 feet long, 8 feet 6 inches diameter, 180 lbs. pressure.
Economiser, with 288 pipes.
Fly rope pulley, 24 feet diameter ; 33 1⅝-inch ropes.

For 85,000 mule spindles, 40's to 90's counts.
Horizontal cross compound engine cylinders, 23 inches to 50 inches diameter, 5 feet stroke, 1,200 i.h.p. ; 65 revolutions per minute.
Three boilers, 30 feet long, 9 feet diameter, 180 lbs. pressure.
Economiser, with 288 pipes.
Superheaters.
Fly rope pulley, 24 feet diameter ; 33 1⅝-inch ropes.

ATHERTON.

For 100,000 mule spindles, 60's to 90's counts.
Horizontal cross compound engine cylinders, 28 inches and 56 inches diameter, 5 feet stroke, 1,500 i.h.p. ; 66 revolutions per minute.
Four boilers, 30 feet long, 8 feet diameter ; 165 lbs. pressure
Economiser, 384 pipes.
Fly rope pulley, 24 feet diameter ; 37 1¾-inch ropes.

(*STOCKPORT DISTRICT. J. & E. WOOD, ENGINEERS, BOLTON.*)

For 53,000 ring spindles and preparation.
Main building, 249 feet by 95 feet ; 5 floors and basement.
140 ring spinning frames of 376 to 396 spindles each, spinning 16's to 40's yarn.
Indicated horse-power, 1,500. Boiler-pressure, 165 lbs.
Engines.—Triple-expansion condensing double-tandem type : 1 high-pressure cylinder, 1 intermediate-pressure cylinder, 2 low-pressure cylinders :—

Diameter of high-pressure cylinder, 23 inches ; ratio, 1·00 ; stroke, 5 feet.
Diameter of intermediate-pressure cylinder, 37 inches ; ratio, 2·60 ; speed, 60 revolutions.
Diameter of low-pressure cylinder, 42 inches ; ratio, 6·66 ; piston speed, 600 feet.

Rope pulley 30 feet diameter, grooved for 52 ropes 1⅜ inch diameter.
Rope velocity, 5,655 feet per minute.
Boilers.—Steel. 4 Lancashire type, 30 feet by 8 feet (one being spare). Pressure, 165 lbs. Furnaces, 39 inches diameter.
Economiser.—Green's type, 448 pipes in 7 groups of 64 pipes each. Feed temperature, 75° F. Delivery to boilers, 320° F.
Chimney.—210 feet high, 8 feet diameter inside at top.
Machinery.—96 cards (flat revolving type), 50-inch cylinder by 45 inches wide ; 4 drawing frames, each 3 heads, 4 deliveries ; 12 drawing frames, each 2 heads, 8 deliveries ; 12 slubbing frames, 104 spindles each ; 20 intermediate frames, 140 spindles each ; 52 roving frames, 180 spindles each ; 140 spinning frames, 376 to 396 spindles each.

(HEYWOOD DISTRICT.)

Engines.—The triple expansion condensing engines of the Mutual Spinning Company of Heywood were tested by Mr. J. F. L. Crosland with the following results :—

High-pressure cylinder, 21 inches diameter ; ratio, 1·00 ; stroke, 6 feet.

Intermediate-pressure cylinder, 33 inches diameter ; ratio, 2·50 ; speed, 53 revolutions.

Low-pressure cylinders, 35 inches diameter ; ratio, 5·61 ; piston speed, 636 feet per minute.

Total indicated horse-power, 1,090. Boiler-pressure, 156 lbs.

Cylinder vacuum, 11·2 lbs. ; condenser vacuum, 12·2 lbs. ; injection, 101° ; hot-well, 133° ; steam (2·5 per cent. wet) per horse-power hour, 12·51 lbs. ; dry, 12·2 lbs.

Dry coal per I.H.P. hour, 1·37 lb.

Economiser.—288 pipes ; mechanical stokers.

Boilers.—Two Lancashire boilers, 30 feet by 8 feet ; 66·5 square feet grate surface. Feed to economiser, 130° ; to boilers, 304°. Heating surface : boilers, 2,016 feet ; economiser, 2,880 feet.

Coal : Bituminous slack, 5·6 per cent. ash ; evaporating from and at 212°, 10·36 lbs., of which 16½ per cent. due to feed-heater. Coal per square foot of grate, 24·16 lbs. I.H.P. of engines, shafting and belts on loose pulleys, 242.

Egyptian Yarn (Fine).

For spinning fine yarns an indicated horse-power of 1,900 is found to drive 132,000 mule spindles and other preparation machinery at the Irwell Bank Mill, near Bolton.

Weaving Shed.

(BLACKBURN DISTRICT. YATES & THOM, ENGINEERS.)

172 feet 6 inches by 136 feet, to contain 512 looms.

Boiler.—One, 30 feet by 8 feet, 100 lbs. steam pressure.

Economiser.—96 pipes.

Engines.—Compound side-by-side type.
High-pressure cylinder, 16 inches diameter
Low " " 28 " " } Stroke, 4 feet ; revolutions, 55.
Fly rope pulley, 20 feet diameter ; 7 grooves for 1⅝ rope.

The following are plants completed at Great Harwood and Leigh, by Messrs. Yates & Thom, just before the war.

Great Harwood.

Three weaving sheds, each containing between 800 and 1,000 looms, 36 inches to 58 inches wide.

Horizontal cross compound engine cylinders, 17 inches and 34 inches diameter ; 3 feet 6 inches stroke, 450 i.h.p. ; 75 revolutions per minute.

Economiser, 128 pipes.

One boiler, 32 feet long ; 8 feet 6 inches diameter ; 160 lbs. pressure.

Fly rope pulley, 14 feet diameter, for 14 1¼-inch ropes.

Leigh.

Two weaving sheds, each containing 900 looms, 32 inches to 57 inches wide.

Horizontal cross compound engine cylinders, 16 inches and 32 inches diameter ; 3 feet 6 inches stroke ; 400 i.h.p. ; 80 revolutions per minute.

Boiler, 30 feet long ; 8 feet 6 inches diameter ; 180 lbs. pressure.

Economiser, 96 pipes.

Fly rope pulley 15 feet ; 11 1¼-inch ropes.

Spinning and Weaving Mill.

Bury.

26,000 mule spindles, 32,000 ring spindles, 10's to 44's counts.
750 looms.
Horizontal cross compound engine cylinders, 33 inches and 66 inches diameter ; 5 feet stroke; 2,000 i.h.p. ; 65 revolutions per minute.
Five boilers, 30 feet long ; 8 feet diameter ; 175 lbs. pressure.
Economiser, 480 pipes.
Fly rope pulley, 24 feet diameter for 46 $1\frac{3}{4}$-inch ropes.
Superheaters.

Mule Spinning Mill.

(OLDHAM DISTRICT. POLLIT & WIGZELL, ENGINEERS, SOWERBY BRIDGE.)

Mill 5 floors and cellar, 355 feet long, 129 feet wide inside; 107,000 spindles, counts 8's to 40's one-third weft, two-thirds twist ; 1,650 indicated horse-power.

Engines.—Cross compound horizontal :—
High-pressure cylinder, 26 inches diameter
Low " " 52 " " } each 5 feet stroke, 75 revolutions per minute.
Flywheel 22 feet diameter, turned for 36 ropes $1\frac{5}{8}$ diameter. Weight of wheel-rim 36 tons.
Coal used for all purposes, 70 tons in summer, 84 tons in winter, per week.

Boilers.—6 Lancashire, 5 working, 1 cleaning ; 30 feet long, 8 feet diameter ; working pressure, 160 lbs. superheated.

Economiser.—Green's, 480 pipes.

Chimney.—7 feet diameter, 180 feet high ; main flue 8 feet high, 4 feet wide.

Mill Shafting.—Card-room shafts, 220 revolutions with 18-inch pulleys for drawing, roving, and intermediate frames ; 170 revolutions for cards with 16-inch pulleys. Mule-room shafts, 300 revolutions with 30-inch pulleys.

In the Yorkshire district it is not unusual to carry on cotton spinning in a shed of one floor as in India.

Ring Spinning Mill.

(POLLIT & WIGZELL, ENGINEERS, SOWERBY BRIDGE.)

One-floor shed, 203 feet wide, 346 feet 6 inches long ; in bays, lengthway, 10 feet 6 inches pitch ; 36,000 spindles, counts 0's to 32's ; average indicated horse-power 995.

Engine.—Tandem horizontal compound :—
High-pressure cylinder, 21 inches diameter
Low " " 42 " " } each 5 feet stroke, 75 revolutions per minute.
Flywheel 20 feet diameter, grooved for 26 ropes $1\frac{5}{8}$ diameter. Weight of rim, 30 tons.
Coal used for all purposes, 40 tons in summer, 58 tons in winter, per week.

Boilers.—3 Lancashire, 30 feet long, 8 feet diameter ; working pressure, 160 lbs., superheated.

Economiser.—Green's, 272 pipes.

Chimney.—5 feet 6 inches diameter, 150 feet high ; main flue, 7 feet 6 inches high, 3 feet 3 inches wide.

Mill Shafting.—Card shaft, 175 revolutions with 17-inch pulleys ; drawing, roving, and intermediate frame shafts, 254 revs. with 27-inch pulleys ; spinning shaft, 254 revs. with 42-inch pulleys. The last seven bays of the shed are utilised for winding, reeling, and warping.

Boilers.

A Lancashire boiler to work at 160 lbs. pressure for a modern cotton-mill will usually be 30 feet long, 8 feet 6 ins. diameter, shell and end plates of $\frac{13}{16}$-inch steel with double butt strips, which in good work may be of equal breadth and treble riveted ; or the outer strap may be narrower than the inner strap and having only the double riveting. Furnaces and flues $\frac{9}{16}$ inch plate. The whole of the steel to be of 26 to 30 tons tensile strength, and to elongate not less than 20 per cent. in a length of 10 inches. For furnaces, steel with a tensile strength up to 32 tons is sometimes allowed.

Economisers.

THE 'GREEN' ECONOMISER.

(See page 1525.)

Main Driving Ropes.

The main driving of cotton-mills is usually by cotton ropes of $1\frac{3}{8}$ inch to $1\frac{5}{8}$ inch diameter, the present tendency being towards the smaller diameter. The following tables are deduced from the weights of pure cotton ropes made by a Lancashire firm :—

Diameter of Rope in inches	$\frac{3}{4}$	$\frac{7}{8}$	1	$1\frac{1}{8}$	$1\frac{1}{4}$	$1\frac{3}{8}$	$1\frac{1}{2}$	$1\frac{5}{8}$	$1\frac{3}{4}$	$1\frac{7}{8}$	2
Weight per foot in pounds	·18	·25	·33	·40	·50	·60	·72	·84	·98	1·125	1·3
Diameter of smallest Pulley advisable	22″	25″	30″	34″	37″	42″	45″	48′	52″	57″	66″
Total stress in Rope in pounds	110	150	195	246	300	360	430	500	600	675	780
I.H.P. at 5,000 feet velocity	9	12	16	20	25	30	36	42	49	56	64

There is no practical difference in the power of ropes between 3,600 feet and 5,600 feet velocity. In Yorkshire, leather ropes $1\frac{1}{2}$ inch square are used, and will drive 80 i.h.p. per rope.

Cotton Yarn Measurement.

Cotton yarn is measured by the hank of 840 yards of single thread, and is said to be of 40's or 60's counts, when 40 hanks or 60 hanks weigh 1 lb. A lea is one-seventh of a hank or 120 yards. A wrap reel is 54 ins. circumference, so that 80 revolutions wind one lea and the skein thus wound is what is tested for strength. The softness of yarn varies with the number of turns per inch put into it. For equal quality in different counts the turns must vary as the square root of the counts. Thus turns per inch $= c\sqrt{\text{counts}}$.

For Indian and American cotton, $c = 3{\cdot}75$ for mule twist ; $3{\cdot}25$ for mule weft ; $4{\cdot}00$ for ring twist.

For Egyptian cotton the above values of c become $3{\cdot}606$, $3{\cdot}183$, and $3{\cdot}606$ respectively. Thus 50's American ring twist requires full 28 twists per inch.

List of Machinery in a Lancashire Mill, showing Average 30's Twist on Mules or Ring-frames, with approximate production at each process, speeds, etc.

77,000 Mule spindles for 28's to 32's (average 30's) twist spun counts at 31 hanks per spindle calculated to produce 79,566 lbs. of yarn per week of $55\frac{1}{2}$ hours from American cotton, $4\frac{1}{2}$ hanks single roving, or,

52,800 Ring spindles for 28's to 32's (average 30's) twist spun counts, at 45 hanks per spindle, calculated to produce 79,200 lbs. yarn per week of $55\frac{1}{2}$ hours from American cotton, $4\frac{1}{2}$ hanks single roving.

3 Hopper bale breakers, 36 ins. wide.

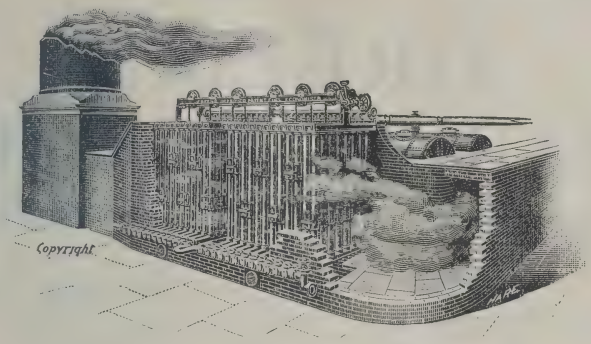
3 Automatic hopper feeders, 36 ins. wide, with filling apparatus.

3 Single Crighton cylinder parts, with valves and pipes to the exhaust opener, and lap machine.

3 Exhaust openers and lap machine, 48 ins. wide, for 46-in. laps, with lattice feeder, 4 ft. centres, and dust trunks.

7 Single-finisher scutchers and lap machines, 46 ins. wide, for 45-in. laps, feeder for 4 laps Lap 14 ozs. per yard.

1 Roving waste-opener and feeding-machine.



GREEN'S ECONOMISER

Saves 15-20% of Coal

Ensures a ready supply of Feed Water at from 225°-300° F.

Reduces expansion and contraction strains on boilers, and increases the steaming capacity.

Repays its initial cost in a little over a year.

Is applicable to every type of Steam Boiler.

Write for illustrat descriptive booklet 'AC.'

E. GREEN & SON, LTD.

WAKEFIELD.

GREEN'S ECONOMISER

in conjunction with Steam Boilers

Utilises High Temperature Gases, and saves 15-20 % of the coal usually consumed.

Ensures a large reserve of water at a high temperature to meet sudden demands.

Increases the steaming capacity of boilers.

Reduces expansion and contraction strains.

Is used at Electric Light and Power Stations all over the world.

Increases profits by decreasing the coal account.

Repays initial cost in a little over a year.

Write for fully illustrated and descriptive Catalogue 'AC.'

E. GREEN & SON, LTD.

WAKEFIELD.

Details.	Hanks Roving.	Speed.	Prod. Lbs.	Hanks per Week.
			Each.	
108 Single cards, 45″ on wire, 50″ cyl., 106 s.s. flats, $1\frac{3}{8}$″ wide	0·15	Cyl. 170 r.p.m.	774	116
27 Drawing-frames, 2 heads of 4 deliveries = 27 finishing deliveries	0·13	350 r.p.m. of $1\frac{1}{2}$″ front roller	1150	149
9 Slubbing-frames, 96 spindles each 10″ × $5\frac{1}{2}$″ bobbins × 19″ staff	0·675	600 r.p.m. of spindle	94·8	59·2
17 Intermediate-frames, 140 spindles each 10″ × $4\frac{3}{4}$″ bobbins × $26\frac{3}{8}$″ staff	1·60	750 r.p.m. of spindle	34·1	54·5
42 Roving-frames, 180 spindles each 8″ × $3\frac{5}{8}$″ bobbins × $20\frac{1}{2}$″ staff	4·25	1,100 r.p.m. of spindle	10·6	45·1
74 S.A. mules, 1,100 spindles each 54″ stretch	30's, etc.	10,000 r.p.m.	1·03	31
120 Ring-frames, 440 spindles each $2\frac{1}{2}$″ distance, $1\frac{5}{8}$″ rings, $6\frac{1}{2}$″ lift	30's	9,000 r.p.m of spindle	1.5	45

The above includes for a loss of 1 per cent. at each process, from the card-sliver to the spindle point.

In a modern mill the handling of cotton is reduced to a minimum. The bales of raw cotton are opened and slabs of the fibre flung into the bale-breaker, which delivers either to a mixing-bin or direct to a hopper-feeder, wherein the fibre is automatically regulated to weigh a given weight per yard. Thence it passes forward and is made into laps or rolls. These are removed by hand to the finisher scutcher whence the laps are run by a vertical tramway to the carding engines by hand. The cans of sliver made by the cards, and by the drawing frames and the bobbins, filled at all subsequent operations, must be moved and removed by hand.

The most modern mills are arranged, where possible, with all the card-room or preparation machinery on one floor. It is very usual to extend the ground floor by means of a shed extension along one side of the mill to enable this to be done. Usually the carding-engines are placed under this extension.

For fine counts, 120's to 140's, such as are now much spun in Oldham from Egyptian cotton, the card sliver is combed before being drawn, and the modern tendency is to use combs for even coarser yarns. Generally, owing to Indian competition, the tendency in Lancashire is all in the direction of finer counts.

Horse-Power to Drive Cotton Machinery, with Speeds for Pulley.

(Bolton figures.)

	I.H.P.	R.P.M.
Hopper bale breaker	2 to $2\frac{1}{2}$	450 to 500
Porcupine opener	2 to $2\frac{1}{2}$	800
Hopper feeder	$1\frac{1}{2}$	225
Vertical opener, single	4	1,000
„ „ double	8	1,000
Exhaust opener	2	900
Opener with hop machine	12	1,200
Single scutcher	4	1,000 to 1,200
Double „	8	1,000 to 1,200
Carding engine	$\frac{3}{4}$	160 to 180
Sliver-lap machine	$\frac{1}{2}$	200 or 500
Ribbon „	1	262
Single-nip comb	$\frac{5}{8}$	305
Double-nip „	$\frac{3}{4}$	229
12-delivery drawing frame	1	150 to 300
Slubbing frame 90 spindles	2	200 to 300
Intermediate „ 120 „	2	300 to 385
Roving frame 150 „	2	310 to 455
Jack „ 200 „		
Self-acting mules	1 h.p. per 120 to 140 spindles	
Cop winding	1 h.p. „ 300 „	120
Ring frame	1 h.p. „ 90 to 100 „	
„ doubler	1 h.p. „ 55 to 65 „	
Drum winder	1 h.p. „ 100 drums	400 to 600
80-hank reel	$\frac{1}{8}$	250

The power required tends to be more or less according to the speeds of spindles, beaters, etc. For finer counts spindles run at higher speeds, but machinery generally is lighter.

Electrical Driving of Cotton Mills.

The load factor of a cotton mill is probably 90 to 95 per cent. This renders electrical driving of doubtful economy. It cannot be economically done from an outside power station, for this would be doing well if it had a 40 per cent. load factor. A cotton mill with its own generating plant can work more cheaply than by purchased current at a price that would pay an outside power station to charge. Then the transmission line is costly.

A group of mills within a small radius such as may be found in places might perhaps be economically driven from one central power house close to all the mills. But in electrical driving the generator is more costly than the rope rim, and the motors, if on line shafts, are more costly than the driven rope pulleys. The transmission losses and the generator and motor losses appear to be greater than the loss by rope driving, and where each machine has its own motor this and the transmission system seem to cost much more than shafting and pulleys. Where the motor stands on the floor at the end of a spinning or speed frame it compels the cutting out of several spindles, reducing the output capacity several per cent., or by fully as much as it is claimed each spindle will give an increased output as compared with an ordinary mill. But so far this increased output has been only demonstrated as between modern high-speed engines with electrical driving and old slow-speed engines in some out-of-date rope-driven mill. No comparisons are put forward with modern rope-driven mills with modern high-speed engines.

There are two systems of electric driving : (*a*) with the usual line shafts, each shaft with an electric motor taking the place of the usual rope pulley; (*b*) with motors to each machine. And there may be (*c*) a mixed system on which there are line shafts for certain classes of work and separate motors for other machines. Rapid acceleration is claimed as an advantage of electrical driving. This, of course, demands motors much larger and more powerful than are merely necessary to drive the frame at its normal speed. The same acceleration may be secured with belt driving if the belts are made sufficiently larger than they need to be for the constant normal speed. Shafting does not require very much power to drive it, and where machine such as ring frames are closely spaced under a shaft, as are ring frames, it is difficult to see much benefit from electric driving of these machines, which do not stop until the bobbins are full. But with speed frames which must stop for every broken sliver it may be convenient that each machine should have its own motor. Mules which have an enormous and rapid variation of driving torque are badly suited for separate motors, and appear better driven from a line shaft. Given sufficient belt power any machine can be accelerated as rapidly as desired, and no single machine will be felt by the main engine any more than if accelerated electrically.

The abolition of belts is an advantage of some value in the separate motor system, but so far the experience of electrical driving has not been such as to warrant other than the most careful consideration of each case on its merits, and by an engineer who is a textile man first and an electrical engineer second. The following are estimates of cost of rope and electrical driving which may help the consideration of any particular case. The estimates are based on the driving of a 110,000 spindle mill (Bolton-fine-Counts) : (*Elec. Review.*)

(Pre-war Prices.)

(*a*) *Rope Driving.*

Capital outlay—	£	*s.*	*d.*
Engine 1,500 i.h.p. and piping in engine-house	4,765	0	0
4 30′ × 8′ × 160 lb. boilers and superheaters	2,400	0	0
All piping in boiler-house (steel and cast iron)	600	0	0
Chimney and boiler seatings	1,000	0	0
Reservoir	1,500	0	0
Engine-house	600	0	0
„ bed	500	0	0
Rope race	500	0	0
Boiler-house	400	0	0
Economiser, dampers, engine, etc.	700	0	0
Lighting generator, 75 k.w., pilot-engine, and generator Switchboard and wiring, etc., 1,200 lights Foundations, etc.	1,450	0	0
Mill gearing, including dynamo driving	2,970	0	0
Cotton driving ropes	450	0	0
15-ton hand-power engine-house crane	300	0	0
Staging and stairs in rope race	300	0	0
	£18,435	0	0

(*a*) *Running Costs.*

	£	*s.*	*d.*
Coal, 3,850 tons per annum at 12*s.* 6*d.*	2,406	0	0
Wages: engineer, 55*s.*; oiler and greaser, 25*s.*; two stokers, 25*s.*	325	0	0
Oil, waste, stores, etc.	100	0	0
Insurance: engine, £80; boilers and pipes, £33; mill gearing, £60; buildings, £20	193	0	0
Rates, 7*s.* on 5 per cent. of £18,435	323	0	0
Interest and depreciation at 12 per cent. on £18,435	2,212	0	0
	£5,559	0	0

Equal to 0·477 pence per k.w. hour.

(*b*) *Full Electrical Installation at Mill.*

Capital outlay—	£	*s.*	*d.*
1,000 k.w. Turbo-generator, condensing plant, and piping	6,600	0	0
4 30′ × 8′ × 160 lb. boilers and superheaters	2,600	0	0
Boiler-house piping (steel and cast iron)	600	0	0
Chimney and boiler seatings	1,000	0	0
Reservoir	1,500	0	0
Generator house	400	0	0
,, bed	300	0	0
Motor tower and carrying for motors	250	0	0
Motors, cables, and switchboard	4,000	0	0
Boiler-house	400	0	0
Economiser, dampers, engine, &c.	700	0	0
Pilot engine and generator switchboard, &c.	1,150	0	0
Wiring for 1,200 lights, foundations, &c.			
Mill gearing	1,830	0	0
	£21,330	0	0

(*b*) *Running Costs.*

	£	*s.*	*d.*
Coal, 4,300 tons per annum at 12*s.* 6*d.*	2,690	0	0
Wages: engineer, 55*s.*; assistant, 25*s.*; 2 stokers, 25*s.*	325	0	0
Oil, waste, and general stores	75	0	0
Insurance: generator set, £110; boilers and pipes, £33; mill gearing, £40; buildings, £15; motors, £60	258	0	0
Rates, 7*s.* on 5 per cent. of £21,330	373	0	0
Interest and depreciation on £21,330 at 12 per cent.	2,560	0	0
	£6,281	0	0

Equal to 0·534 pence per k.w. hour.

To this ought to be added a 75 k.w. combined set for lighting, as it is hardly satisfactory to run lights and power off the same 3-phase generator. The cost would be £560.

(*c*) *Electric Driving, but with Current from a Public Supply Station delivering at* 10,000 *Volts.*

Capital outlay—	£	*s.*	*d.*
Boiler and piping, pump, &c., for heating	600	0	0
Chimney and boiler seatings	250	0	0
Transformer house	300	0	0
Motor tower and carrying for motors	250	0	0
Motors, cables, and switchboard	4,000	0	0
Transformers (spare set included)	1,000	0	0
Boiler-house	150	0	0
Mill gearing	1,830	0	0
Switchboard and wiring 1,200 lights	900	0	0
	£9,280	0	0

(*c*) *Running Costs.*

	£	*s.*	*d.*
Coal for heating, 300 tons at 12*s.* 6*d.*	188	0	0
Wages: Engineer, 55*s.*	137	10	0
Oil, waste, general stores	50	0	0
Insurance: motors, £60; transformers £15; gearing, £40; buildings, £10	125	0	0
Interest and depreciation on £9,280 at 12 per cent.	1,112	0	0

(*c*) *Running Costs*—continued.

Current: average load 900 k.w., including lighting, based on uniform charge of 0·5625*d.* per hour	5,906 0 0
	£7,680 10 0

Equal to 0·657 pence per k.w. hour.

From the foregoing it would appear that if current can be bought for about 0·4*d.* per unit the driving by a public supply would cost the same as by ropes.

In the foregoing estimates of running costs, the boiler cleaning charges are omitted, the extra cost of this for (*a*) and (*b*) being about balanced by the omission of the wages of the stoker of the heating boiler in case (*c*). It is at present doubtful if current can be sold at a profit for 0·4*d.* per unit by any power station. The situation is made worse by the necessity for a heating boiler and chimney, &c., for case (*c*).

On the other hand driving electrically disperses with the rope race which divides a mill halfway across into two sections, and it sets free the area of the race for machinery and increases the production within a given total area. But the real success of the system would come where a group of mills could be driven from a joint-power plant in the middle of the group, especially if the warming could be done from the same boilers. There is very little in the claim for steadier driving, this being merely a question of flywheel energy and cyclical regularity equally obtainable with ropes as electrically. No weight must be given to comparisons with old mills driven by old slow engines. Engineers should study the Brown Boveri ring frame, for which electricity does what is otherwise impracticable. In this machine the spindle speed is varied by moving the brushes of the motor so that the tension on the yarn is kept uniform at all stages of the bobbin. This cannot be done except by electrical means.

Machine Sizes in Plan—Pulley Size and Speed.

	Ft. Ins.	Ft. Ins.	Inches.			
Opener . .	11 0	× 6 6	12 × 5	pulley	1,200 revolutions;	shaft, 400 revolutions
Double Scutcher	18 8	× 6 6	9 × 4	„	1,500 „	„ „ „
Double Card .	15 0	× 6 6	15 × 3	„	150 „	„ 150 „
Single Card .	10 0	× 6 6				
Drawing Frame	27 0	× 5 0	14 × 3	„	250 „	„ 120 „
Slubbing Frame	27 4½	× 4 0	12 × 3	„	410 „	„ „ „
Intermediate .	35 6	× 3 0	11 × 3	„	460 „	„ „ „
Roving . .	35 6	× 3 0	10 × 3	„	480 „	„ „ „
Grinder . .	6 0	× 2 10				

OIL MILLS.

The Manufacture of Vegetable Oils.

In the 'Anglo-American' system, the rolls are constructed 4 or 5 in height, allowing the seed to pass between each, thus getting 3 or 4 different crushings, each exceeding the previous one in weight.

The presses have plates with open sides, holding 12 to 18 cakes, this large number being made possible by the use of a cake-forming machine, which compresses the meal into a firm cake, capable of being passed between the press plates, though the latter are only about 3 ins. apart; the horsehair wrappers are also dispensed with.

A small self-contained mill of the foregoing type has a capacity of 50 tons of seed per week of 132 working hours, and consists of the following machines and parts:—1 set of seed crushing rolls with four chilled cast iron rolls, each 12 ins. diameter by 15 ins. long; 1 meal heating kettle, 42 ins. diameter by 20 ins. deep, constructed of mild steel, steam jacketed on sides and bottom and provided with an improved moistening apparatus and automatic outlet; 1 cake-forming machine with a steam compresser; 2 hydraulic cake presses, with rams 12 ins. diameter, working pressure 2 tons per square inch, with steel cylinder and steel press plates, each press to make 16 cakes per pressing; 1 belt-driven cake-paring machine to trim off the oily edges from the cakes and chop them up into small pieces; one reducing mill to grind up the edges cut off by the paring machine so that they can be passed back to the kettle and re-pressed; 1 set of hydraulic press pumps, with the necessary valves, pressure gauges and pipes.

The mill may preferably be fitted with elevators to raise the seed to the crushing rolls, and the ground meal to the kettle: also an oil catching and settling tank, a rotary oil pump to take the oil to the store tank, and all that is necessary to put the mill into complete working order.

For mills of larger capacities the machines are generally built separately, and the gearing carried from the walls of the building, columns, and floors. The mills are then fitted up in sets and double sets, with a capacity of 100 or 200 tons of seed per week of 132 hours. One set consists

of:—1 set of seed rolls, 5 ft. high, 16 ins. diameter by 48 ins. long; 1 heating kettle and cake-forming machine; 4 hydraulic presses, with rams 16 ins. diameter, working pressure 2 tons per square inch, each making 16 cakes per pressing; 1 cake-paring machine; 1 set of edge stones to grind up the parings, diameter of runners 4 feet; 1 hydraulic press pump.

These large plants are generally fitted with 2 hydraulic accumulators, working at 500 lbs. or 600 lbs. per square inch, and at 2 tons per square inch. The ballast of sand, scrap iron, etc., is held in a wrought-iron case, and is guided between wrought-iron guides. The sizes generally adopted are 9 ins. and 3 ins. by 8 ft. stroke for the small plants, and 14 ins. and 4 ins. by 10 ft. stroke for the large plants.

For seeds, etc., which contain a large percentage of oil, such as copra, palm kernels, arachides, castor, etc., 'Stake' presses have been introduced. The pressing cage is constructed of narrow steel bars bound together by weldless steel hoops, spaces being left between each bar to allow a free escape of the oil, but retaining the meal. This gives a much larger drainage area than can be obtained by perforations, and is not open to the same objections, viz. that the perforations wear larger and cannot be altered, so that the meal begins to escape in large quantities with the oil.

A filter press is used to remove the floating particles of solid matter. This is composed of a number of plates with grooves on their faces. Between each plate are placed two filter-cloths fixed of the plate in such a manner that the oil must pass through the cloth and flow down the grooves to the outlet provided. The oil is pumped through the press by means of a pump fixed to the machine, or by a separate pump which can be made to feed several. Another form of filter is made by fixing a large number of bags to openings in a shallow trough or tank; these bags are about 4 ins. diameter, 3 ft. to 5 ft. long, and are made of canvas; the oil filters through the material, leaving the impurities in the bag. A second trough is placed under these openings to catch the oil as it runs out.

CANE-SUGAR MACHINERY.

For large sugar works, the canes are brought from the field to the factory by rail in trucks which are weighed and unloaded mechanically on to a carrier which continuously conveys them to the

Crushing Mills.

These usually comprise a pair of cast steel preparing rollers followed by several sets of cast iron three-roller crushing mills in tandem, and steam driven through heavy spur gearing.

The cane in transit through these successive mills is macerated with hot water, enabling ordinarily a juice extraction of 80 per cent. on the weight of the cane to be obtained. This crushed cane (technically termed megass or begasse), leaving the final mill with 45 to 50 per cent. of contained moisture, is continuously fed into special boiler furnaces and utilised for steam generation, supplying frequently the entire factory requirements.

MULTIPLE CRUSHING MILLS.

(*The Mirrlees Watson Co. Ltd., Glasgow.*)



11-roller Cane Mill
FIG 1.

Mill Rollers. Dia. and Length.	Tons of Cane crushed Hourly.		Engine. Dia. and Stroke.	
	11-roller Mills.	14-roller Mills.	11-roller.	(2Engs.) 14-roller.
Ins. Ins.			Ins. Ins.	Ins. Ins.
24×48	13	—	20×42	—
26×54	17	—	22×48	—
28×60	22	—	26×48	—
30×60	25½	32	30×60	26×48
32×72	34½	43½	32×60	28×48
34×78	42½	53½	34×60	30×60
36×84	51½	64	38×72	34×60


The mill capacity varies according to the class of cane crushed.

Vacuum Evaporators.

The cane juice expressed by the mills is clarified (by liming, heating, subsiding, and filtering) and then concentrated, in vacuo, to about one-fourth its original volume. The apparatus commonly used is a triple or quadruple effect, in which exhaust steam is used as the heating agent for the juice in the first vessel, whose vapour, under a reduced temperature, boils the partly concentrated in the second vessel, which again liberates vapour for boiling the still denser juice, under a still lower temperature in the succeeding vessel, which, in the case of a triple apparatus, is under a high vacuum and consequently low temperature. In a quadruple effect the principle is similar.

ECONOMY OF MULTIPLE-EFFECT EVAPORATION.

1 lb. of steam used	single	effect evaporates	$\frac{7}{8}$	lbs. water.
,, ,,	double	,, ,,	$1\frac{3}{4}$	,,
,, ,,	triple	,, ,,	$2\frac{5}{8}$	,,
,, ,,	quadruple	,, ,,	$3\frac{1}{2}$	,,

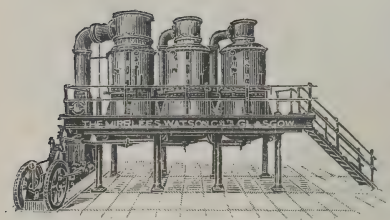

Triple-Effect Evaporator.


FIG. 2

QUADRUPLE-EFFECT EVAPORATORS.

(*The Mirrlees Watson Co. Ltd.*)

Diam. of Vessels.	Heating Surface.	Galls. treated per Hour from 9° to 30° Bme.
Ft. In.	Sq. Ft.	
6 0	4,440	3,550
7 0	6,247	5,000
8 0	8,165	6,530
9 0	10,500	8,400
10 0	13,550	10,840
11 0	15,700	12,560
12 0	18,400	14,720
13 0	25,500	20,400
14 0	28,060	22,450
15 0	33,140	26,510

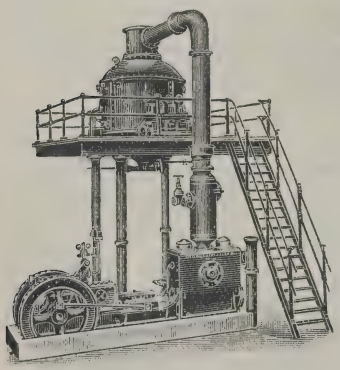The concentrated syrup is then granulated in vacuum pans.



Vacuum Pan and Air Pump.

FIG. 3

VACUUM PAN DETAILS.

(*The Mirrlees Watson Co. Ltd.*)

Diam. of Pan.	Heating Surface.		Strike Capacity Gallons Massecuite.
	Coil Type.	Cal. Type.	
Ft. In.	Sq. Ft.	Sq. Ft.	
8 0	435	580	1,600
9 0	650	860	2,400
10 0	850	1,130	3,150
11 0	1,080	1,440	4,000
12 0	1,300	1,730	4,820
13 0	1,530	2,045	6,000
14 0	1,740	2,320	7,000
15 0	1,970	2,620	8,000

The resulting massecuite is discharged into crystallisers, thence to centrifugal sugar-curing machines, in which the molasses is separated from the crystals, which are thereupon dried and bagged for transport.

MIRRLEES

SUGAR MACHINERY

Complete Sugar Factories
Existing Plant Modernised

EVAPORATORS

FOR ALL PURPOSES

DISTILLING PLANT

For the economical production
of fresh water from the
sea or other impure source

STEAM CONDENSING PLANT

FOR ALL SERVICES
Surface or Jet Types

SEND FOR ILLUSTRATED CATALOGUE

THE MIRRLEES WATSON COMPANY LTD.

CODES:
Western Union (Universal and 5-Letter Eds.), Lieber's, Engineering, ABC (4th and 5th Eds.), A1 and Bentley.

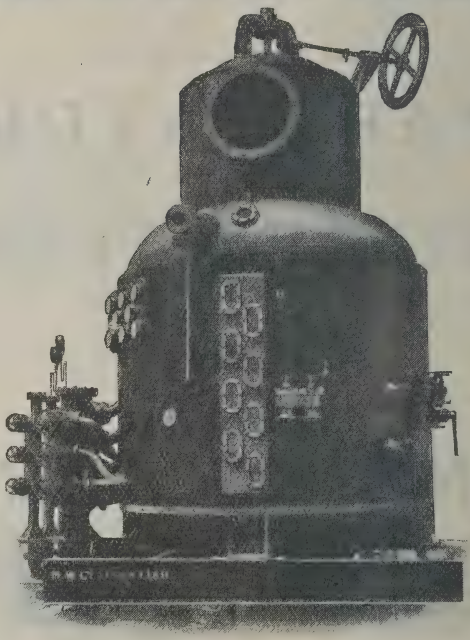
ENGINEERS,
SCOTLAND ST.
GLASGOW.

TELEGRAMS:
'Mirrlees, Glasgow.'
TELEPHONES:
1780 South.
1781 South.
1782 South.

LONDON OFFICE: 7 GROSVENOR GARDENS, S.W. 1

MIRRLEES

VACUUM PANS



A MIRRLEES 15ft. Coil VACUUM PAN.

Send your enquiries to :—

THE MIRRLEES WATSON COMPANY LTD.

Head Office and Works : SCOTLAND STREET, GLASGOW.

London Office : 7 Grosvenor Gardens, S.W. 1.

F. 777

Vacuum Evaporators for Trade Liquids.

In the concentration of trade liquors by evaporation, it is generally important that this should be not only economically but also rapidly effected under low temperature, as many liquids exposed to heat deteriorate. Hence the extended adoption of multiple-effect evaporators on the horizontal tube type of the Mirrlees Watson Co. Ltd., which, having a rapid flow of liquid through their evaporating tubes, meet these requirements with the minimum of deposition on the heating surfaces.

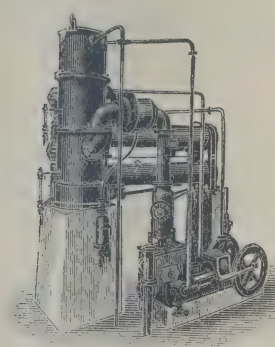


FIG. 4.—Double Effect.

For bark and wood extracts, gelatine, glue, glucose, glycerine, and similar liquids of a viscid nature, a wide temperature difference between the vessels is desirable, hence the use of a double effect arrangement (fig. 4); their sizes range from 50 to 1,000 gallons hourly.

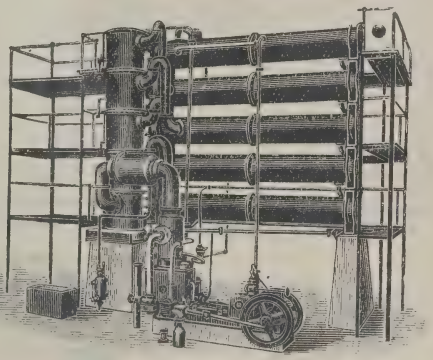


FIG. 5.—Quintuple Effect.

For soda ash recovery in paper mills, caustic soda, caustic potash, meat extract, distillery refuse, and other liquids readily amenable to concentration, triple, quadruple, quintuple (fig. 5), and sextuple (fig. 6) installations are in use; their sizes range from 100 to 3,000 gallons hourly.

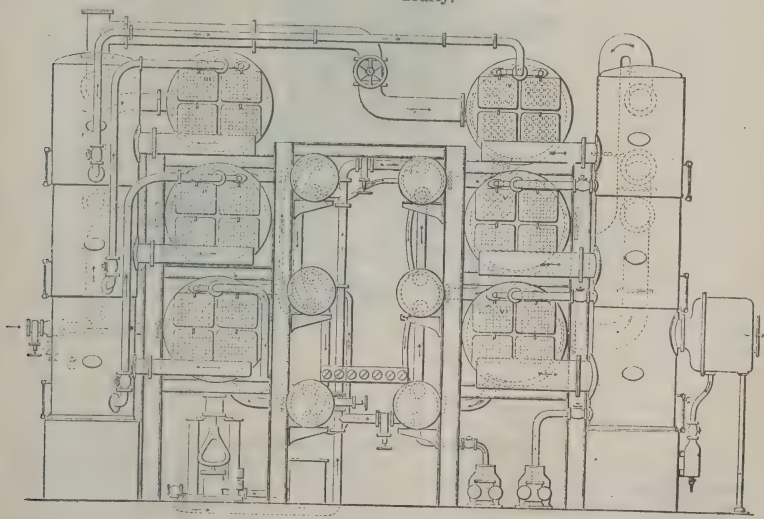


FIG. 6.—Patent Sextuple-Effect Evaporator.

Fig. 6 shows sextuple-effect apparatus as used for all glutinous solutions, such as gelatine, glue, etc. : they are mostly of the undermentioned capacities :—

STANDARD VACUUM EVAPORATORS FOR GLUTINOUS SOLUTIONS.

No.	Galls. Treated per Hour.	Galls. Evaporated per Hour.
1	100	80
2	120	96
3	140	112
4	160	128
5	180	144
6	200	160
7	230	184
8	260	208
9	290	232
10	320	256

Varying number of effects are used for different liquors, to meet requirements.

Water Distillers.

To meet the demand for large quantities of distilled water at the lowest cost, the Multiple-Effect system of evaporation, extensively used in sugar manufacture, has also been applied largely, by the Mirrlees Watson Co. Ltd., to fresh-water distillers.

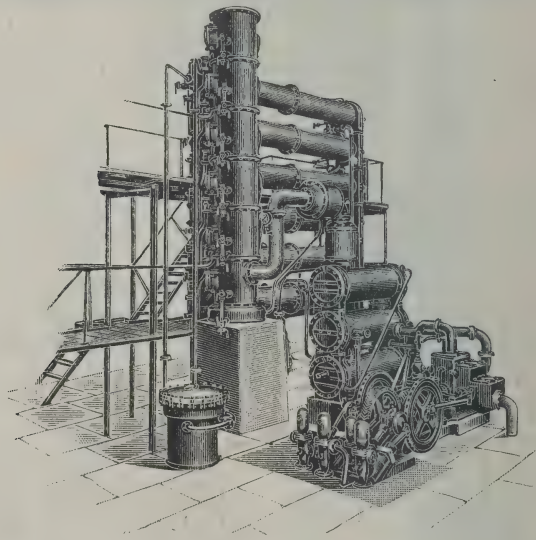


FIG. 7.—Fresh-Water Distiller.

THE MULTIPLE-EFFECT EVAPORATOR.

This consists of two or more vessels arranged in such a manner that the vapour arising from the evaporation in the first vessel effects the evaporation in the second, that from the second, evaporation in the third, and so on.

The principle on which the multiple-effect evaporation is based is that the boiling point, and consequently the vapour temperature of liquids, varies with the surrounding pressure; the lower the pressure, the lower the boiling temperature; this principle is applied by working with diminishing pressures in the successive vessels of the multiple-effect evaporator.

Evaporators on the above principle are extensively used, but considerable experience is required so to proportion the various evaporating and condensing surfaces to secure the highest economy.

Fig. 7 shows a sextuple-effect fresh-water distilling plant, which has been brought to a high state of efficiency, producing 44 lbs. of gained water (not including the drip from first vessel, which goes back direct to the boiler) per lb. of coal consumed.

Plants of this design are made to produce from 25 to 350 tons of distilled water per twenty-four hours. This type of distilling plant has been adopted by the British and other Governments.

(*Mirrlees Watson Co. Ltd.*)

Note on Condensers.

Great caution should be exercised in guaranteeing the efficiency of condensers which are used for other purposes than the condensation of exhaust steam from steam engines, as for example the exhausting of vacuum pans for sugar manufacture. In such cases it often happens that far more air is present than is the case with ordinary exhaust steam, and consequently the condenser may prove unequal to the task for which it was guaranteed. Those who quote prices or guarantee a particular efficiency in the case of a condenser should make it plain that the 'steam' to be condensed must only contain a certain (specific) quantity of air.


SECTION XVII

CRANES AND CRANE APPLIANCES — ELECTRIC LIFTS — ELECTRIC WINDING ENGINES — AERIAL ROPEWAYS — CONVEYORS

(With Contributions by John H. Huntley, M.I.E.S., and Professor John Goodman, M.Inst.C.E.)

TAYLOR & HUBBARD,

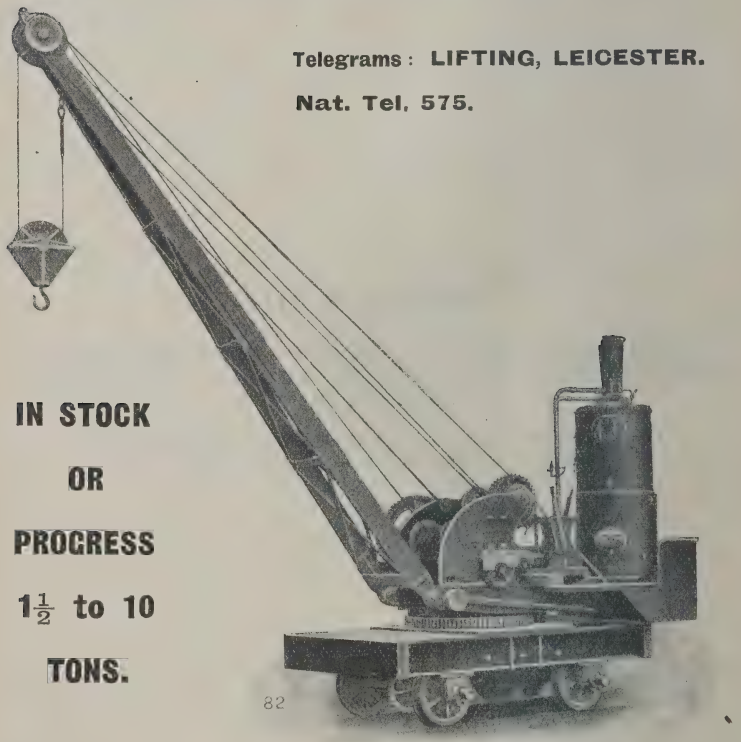LEICESTER—3.



Telegrams: LIFTING, LEICESTER.

Nat. Tel. 575.

IN STOCK

OR

PROGRESS

1½ to 10

TONS.

82

STEAM & ELECTRIC

JIB CRANES.

STEAM NAVVIES &

EXCAVATING MACHINERY.

F.783

SECTION XVII

CRANES AND CRANE APPLIANCES — ELECTRIC LIFTS — ELECTRIC WINDING ENGINES — AERIAL ROPEWAYS — CONVEYORS

CRANES.

Contributed by John H. Huntley, M.I.E.S.

General Notes on Cranes.

The selection of a crane for any particular service is governed by several factors, such as load, space available, power at disposal of user, frequency and speed of operation, height of lift, duration of service and cost.

Cranes can be operated by manual, steam, hydraulic, pneumatic, or electric power, or by a combination of these powers.

In power stations, stores, and places where an occasional lift is all that is required, a hand crane is quite suitable, even for loads up to 20 or 30 tons, but for frequent operation, or where the load has to be moved a considerable distance, it is advisable to instal a power-driven crane, even for a load of a few hundredweights, as the saving in time and labour soon pays for the difference in initial cost.

The electric crane has the following points in its favour :—

1. Simplicity of operation.
2. No power consumed whilst crane is standing.
3. Power used varies in proportion to load.
4. Always ready for starting up.

The steam crane has the advantage that it can be used wherever a supply of fuel and water is available, but time is lost in raising steam, and fuel is consumed in keeping up steam between the lifts.

Hydraulic cranes are only economical in operation when constantly working under full load, as the water consumption is the same for light or heavy loads, although by means of double-power rams attempts have been made to overcome this defect. Trouble is caused by frost in exposed situations. Hydraulic cranes are still largely used in shipyards and boiler shops, for handling plates, portable riveters, etc., where a small lift at slow speed is required. The working hydraulic pressure is usually 1,500 lbs. per sq. in., but may be as high as 2 tons per sq. in.

Pneumatic power is applied only to small hoists and pulley blocks, the air pressure being usually about 100 lbs. per sq. in.

Hand Cranes.

The ordinary height of handle above ground should be 3 ft.; radius of circle described by handle, not more than 18 ins.; 16 ins. is a usual length. Angle of jib, 45°.

Each man working at the handle of a crane will exert a force of 15 to 20 lbs., exclusive of friction.

If W = weight to be lifted by crane in lbs., P = force applied to handle in lbs., D = diameter described by handle in inches, n = number of revolutions of handle to one of barrel, B = diameter of barrel in inches, then

$$B = \frac{D \times P \times n}{W}. \qquad D = \frac{W \times B}{P \times n}. \qquad n = \frac{W \times B}{D \times P}. \qquad P = \frac{W \times B}{n \times D}. \qquad W = \frac{P \times D \times n}{B}.$$

OVERHEAD TRAVELLING CRANES.

For service inside buildings or where the site conditions permit of the construction of a gantry the overhead travelling crane has proved to be the most efficient appliance. For outside work a Goliath crane is often equally serviceable, and has the advantage of a lower first cost than an overhead crane with gantry.

For hand cranes up to 40 ft. span and loads up to 5 tons, a single girder crane can be adopted, but for longer spans or heavier loads it is advisable to use the double girder type to obtain lateral stiffness.

Light cranes are usually operated from the floor level by hanging chains, but for cranes above 10 tons it is advisable to work them from the crane platform. The pull on a hand chain should not exceed 40 lbs. per man, and for crank handles not more than 25 to 30 lbs. per man. The handles should have a radius of 16 ins. to 18 ins. and the centre be at a level of from 2 ft. 6 ins. to 3 ft. above platform level.

Travelling wheels for both crab and crane are usually of cast iron, and should be fitted with ball or roller bearings.

The hoisting gear should be efficient, preferably with machine-cut teeth, pinions of mild steel, wheels of cast iron, and should be fitted with a self-sustaining brake which requires to be released by the operator before the load can be lowered, but which is inoperative in the hoisting direction. This condition can be obtained by an internal ratchet or a screw disc brake.

Worm gear should have a coarse pitch and the sustaining power of the crane should not be dependent upon the inefficiency of the gear.

OVERHEAD ELECTRIC CRANES.

For engineering shops, foundries, steelworks, etc., the overhead electric travelling crane is unequalled for general service.

The motions of hoisting, traversing and travelling are generally arranged, and a separate motor should be fitted for each motion. An auxiliary hoist having a lifting capacity of about one quarter the main hoist is desirable on cranes above 40 tons capacity, and should be operated by an independent motor.

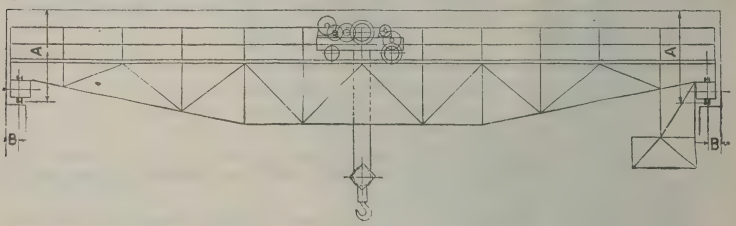


FIG. 1.

The following are particulars of standard 3-motor overhead travelling cranes (fig. 1), 30 ft. lift :—


TABLE OF STANDARD 3-MOTOR OVERHEAD ELECTRIC TRAVELLING CRANES.

Size.	Span.	Head-room. A.	End Space. B.	Wheel Base.	Max. Press. per wheel.	Wt. of Crane.	Speeds in feet per minute.			Falls of Rope.
							Hoist.	Traverse	Travel.	
Tons.	Ft.	Ft. Ins.	Ins.	Ft. Ins.	Tons.	Tons.				
2	30	5 0	7	6 0	2·7	5·8	20	100	300	2
2	40	5 6	7	8 6	3·0	7·3	20	100	300	2
2	50	5 6	7	8 6	3·3	8·5	20	100	300	2
5	40	6 0	8	8 6	5·3	9·8	20	90	300	4
5	50	6 0	8	8 6	5·8	11·5	20	90	300	4
5	60	6 0	8	9 6	6·1	13·0	20	90	300	4
10	40	6 6	8½	10 0	8·4	12·0	15	80	300	4
10	50	6 9	8½	10 0	9·1	14·5	15	80	300	4
10	60	6 9	8½	10 0	9·7	16·5	15	80	300	4


TRADE MARK

A P S

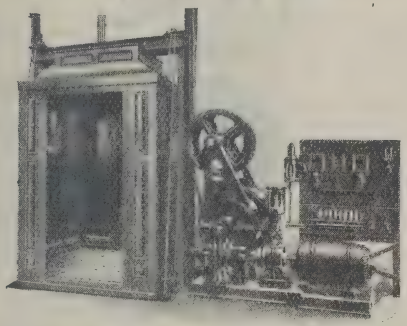LIFTS



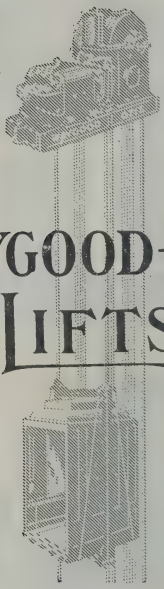A. & P. STEVEN.
181 St. JAMES' ROAD.
GLASGOW.



WAYGOOD-OTIS LIFTS

Electric, Hydraulic and Hand Power.

. . Prompt Deliveries Given. . .

54-55 FETTER LANE, LONDON, E.C. 4.

62-63 LIONEL STREET, - - BIRMINGHAM

And all Principal Cities.

F. 785

TABLE OF STANDARD 3-MOTOR OVERHEAD ELECTRIC TRAVELLING CRANES—*contd.*

Size.	Span.	Headroom. A.	End Space. B.	Wheel Base.	Max. Press. per wheel.	Wt. of Crane.	Speeds in feet per minute.			Falls of Rope.
Tons.	Ft.	Ft. Ins.	Ins.	Ft. Ins.	Tons.	Tons.	Hoist.	Traverse.	Travel.	
15	40	7 0	9	10 0	11·3	13·8	13	80	275	6
15	50	7 0	9	10 0	12·0	16·2	13	80	275	6
15	60	7 0	9	10 0	12·5	18·0	13	80	275	6
20	40	7 3	9½	10 6	14·5	16·5	10	80	275	8
20	50	7 3	9½	10 6	15·2	19·0	10	80	275	8
20	60	7 3	9½	10 6	15·8	21·0	10	80	275	8
25	40	7 6	10	11 6	17·5	19·0	10	80	250	8
25	50	7 6	10	11 6	18·5	22·0	10	80	250	8
25	60	7 9	10	11 6	19·2	24·2	10	80	250	8
30	40	8 0	10½	12 0	20·3	22·0	10	75	250	8
30	50	8 0	10½	12 0	21·5	25·0	10	75	250	8
30	60	8 3	10½	12 0	22·5	28·0	10	75	250	8
40	40	9 0	11	13 0	26·5	26·0	10	70	250	8
40	50	9 0	11	13 0	27·8	30·0	10	70	250	8
40	60	9 3	11	13 0	29·5	34·5	10	70	250	8
50	40	10 0	11	13 0	32·0	31·0	10	70	230	8
50	50	10 0	11	13 0	34·0	35·0	10	70	230	8
50	60	10 3	11	13 0	35·5	39·5	10	70	230	8
60	40	10 3	12	13 6	38·5	35·0	8	70	230	10
60	50	10 3	12	13 6	40·5	40·0	8	70	230	10
60	60	10 6	12	13 6	42·5	45·0	8	70	230	10

NOTE.—The headroom figures allow for about 3 ins. clearance and the end space for about 1½ in. clearance.

For short-span cranes of small size, a pair of 'H' beams make an economical set of girders, but the span should not exceed sixty times the width of the flange of one girder. For cranes up to 60 ft. span the most economical construction is the trapezoidal single web girder, with lattice auxiliary connected to the main girder by horizontal and diagonal bracing. This makes a very stiff construction, is easy to manufacture, and all surfaces are accessible for painting. The platform and travelling gear can be well supported by bearers between the main and auxiliary girders. For long spans and for outside service it is desirable to make the girders of the lattice type to reduce weight and wind surface. The depth of the girder is usually made one-twelfth the span. The maximum bending moment due to the crab, assuming each wheel equally loaded, is given by the formula :—

$$\frac{W}{2S}\left(S-\frac{B}{2}\right)^2 \text{ ft. tons,}$$

where,

W = load per wheel in tons ; S = span in feet : B = wheel base of crab in feet.

To this must be added the bending moment due to the deadweight of the girder and travelling gear. The modulus of the girder section should be such as to give a stress of between 5 and 6 tons per sq. in. The stresses in lattice girders are best determined by graphic methods.

The end carriages can be constructed of channels, and built up of plates and angles, when larger sections are required. They should be connected to the girders by large gusset plates, and fitted bolts to prevent cross winding. The wheel base should preferably be one-fifth to one-sixth of the span.

Rail wheels should be of cast steel, or of cast iron centres with steel tyres shrunk on. The width of the rolling surface of the rail is an important point, and for heavy loads a rounded surface should be avoided. The safe load on a wheel may be arrived at by the following empirical ormula :—

For cast steel wheels, safe load in pounds = $800 \times W \times D$,
,, steel tyred ,, ,, ,, ,, = $1{,}200 \times W \times D$,

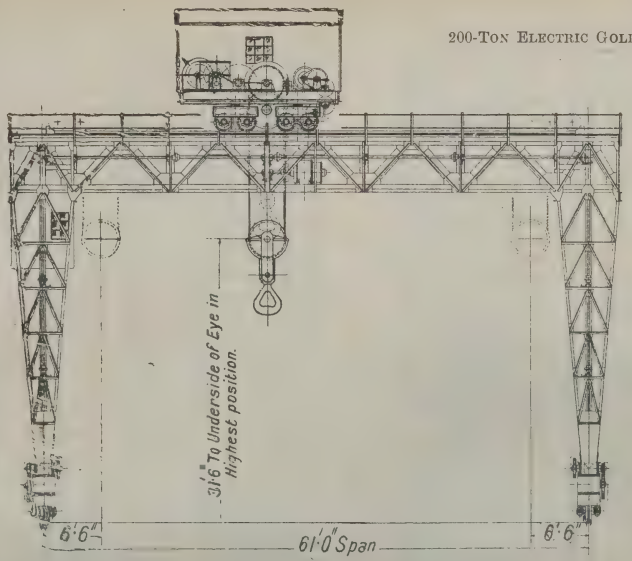
where,

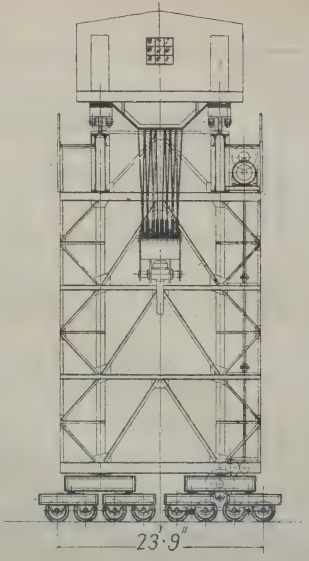
W = width of rail face in inches ; D = dia. of wheel in inches.

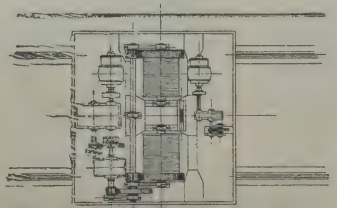
Rails for heavy cranes are now rolled with a working face of 6 ins. and weight of 265 lbs. per yard.

Cranes of 75 tons capacity and upwards are usually mounted on eight wheels, four in each end carriage. The wheels are carried in pairs by equalising beams pivoted to the end carriage so as to distribute the load equally to each wheel of the pair.

200-Ton Electric Goliath Crane.







Speeds and Motors.

Hoisting	200	tons at	3	ft. per min.
„	75	„	8	„ „
Traverse	200	„	30	„ „
Travel	200	„	50	„

Motor 65 B.H.P.
Change gear.
Motor 25 B.H.P.
„ 65 B.H.P.

Fig. 2.

CRANES

ALL TYPES

Electric : : Overheads
Steam : : Locomotive
Level Luffing



ALEX. CHAPLIN
& COMPANY, Ltd.

Crane Specialists
GLASGOW.

Telegrams & Cables: 'Chaplin, Glasgow.'

F. 786

ALEX. CHAPLIN & Co. Ltd. GLASGOW.



5-TON 2-MOTOR ELECTRIC GRABBING CRANE

F. 787

To calculate the power required to travel a crane, a tractive force of from 60 to 70 lbs. per ton is usually taken, and for outside service the effect of wind pressure must be considered.

To prevent cross winding the cross shaft should be stiff enough to avoid undue torsional deflection when the driving wheels are unequally loaded due to the crab being at one end of the span. A foot brake should be fitted to the cross shaft on cage control cranes and a solenoid brake fitted to the motor shaft on all cranes working in the open.

The crab frame should be built up of steel sections well stiffened to form a rigid support for the motors and gearing. The traversing wheels should be of cast steel or have steel tyres, the latter only being necessary on crabs of the largest size.

It is unnecessary to fit a brake to the traversing motion unless the speed exceeds 100 ft. per minute, when a solenoid brake can be fitted.

The load is preferably lifted on wire ropes winding on to a cast iron drum rotated by gearing, the number of falls of rope depending upon the load. For cranes up to 3 tons capacity, the load may be lifted on two falls winding one fall on to the barrel. Where four or more falls of rope are used, two falls should wind on to the barrel, which should have right and left-hand spiral grooves and thus keep the load central between the girders.

The efficiency of the gearing varies from about 75 per cent. on small cranes to 65 per cent. on large cranes. A convenient rule to determine the horse-power of the motor is

$$\text{H.P.} = \frac{\text{foot-tons per minute.}}{10}$$

The speeds of working given in the foregoing table are suitable for general engineering shop work, but for steelworks very much higher speeds are used, and as continuous night and day service is the general practice in these works the design of the crane should be specially considered and made very robust.

All cranes are preferably fitted with two brakes, one of which should be an automatic solenoid brake; the type of the other brake will depend entirely on the service for which the crane is used.

Fig. 3 shows a small crab made by Messrs. Babcock & Wilcox. The framework consists of mild steel plates or channels connected by stretchers which support the motors and the return sheaves of the hoisting ropes. The hoisting motor (8) is fitted with an extension shaft (9) on which is fixed the automatic magnetic brake (10). Two blocks press against the face of the brake pulley by means of a counterweight (50), when the crane is standing. When current is switched on, the weight is lifted by the action of the solenoid, and is automatically reapplied when current is cut off. There is also a mechanical brake (12), operated from the cage by a foo pedal attached to a lever. This lever is connected to the flexible wire (15) stretching from end to end of the cross-girders and passing over two fixed pulleys (16) and under a movable pulley (17) coupled to a counterweight (20) which serves to keep the brake strap clear of the brake-wheel. By operating the pedal the brake strap can be tightened round the brake-wheel.

The hoisting motor extension shaft (9) carries two sliding pinions, one for slow and heavy hoists (21), and the other for quick and light hoists (22), and these may be put into gear by means of a lever operated by hand from the driver's cage when the crab is opposite to it. These pinions gear with spur wheels (23) and (24) on the first motion shaft which carries the mechanical brake (12). At the farther end of this shaft, a pinion gears into the spur wheel (27) on the second motion shaft. On this latter shaft, another pinion gears with the main spur wheel (30) which is bolted to the hoisting barrel (31). The two ends of the hoisting rope are secured to the ends of this barrel, which is grooved right and left-handed, so that the rope on each side is wound uniformly towards the centre and a truly vertical movement given to the lifting hook. An overwinding gear is fitted consisting of a screw spindle and travelling nut which, when the hoisting hook has reached its highest position, strikes a lever connected to an emergency cut-out in series with the hoisting controller and motor. This action opens the switch, cuts the current off the motor and applies the magnetic brake, thus stopping any further winding. With D.C. motors the hoisting controller is fitted with rheostatic brake steps to control the load when lowering. With A.C. motors hand gear is used to release the magnetic brake mechanically. This gear consists of a lever attached to a flexible wire (61), stretching from one end to the other of the cross-girder, passing over two fixed pulleys (62) and under a movable pulley (63), fitted with the counterweight (50). By operating the lever, the movable pulley and weight may be raised, thereby freeing the brake to any desired extent.

On the spindle of the traversing motor (40) a pinion is fitted which gears with a spur wheel keyed on to the first motion traversing shaft (43). By means of another pinion and spur wheel this shaft is connected to the driving axle (46) to which are keyed two of the wheels (47) on which the crab runs. The remaining two wheels (48) are keyed to the trailing axle (49) which runs freely in its bearings.

For handling hot ingots in rolling mills, special cranes with semi-automatic tongs are used and have been made to fulfil such varied functions as stripping the ingot from the mould charging and withdrawing the ingot from the soaking pit, and lifting and replacing the soaking pit cover.


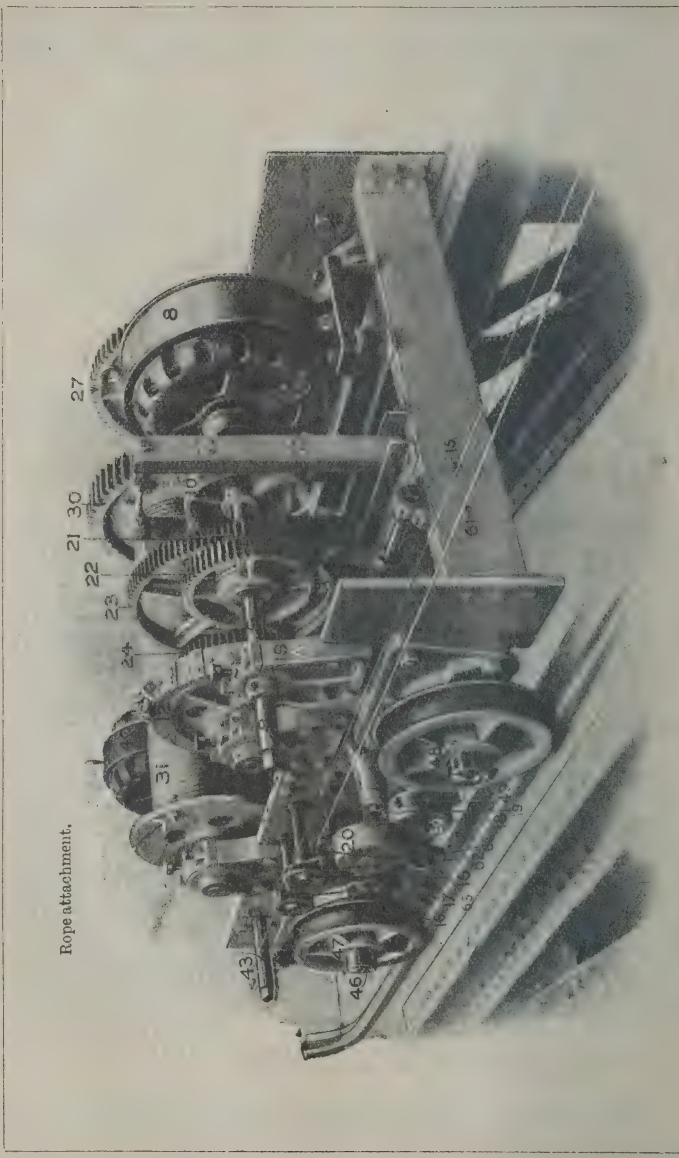


FIG. 3.—View of left-hand side of Babcock & Wilcox Crab, from hoisting motor end.

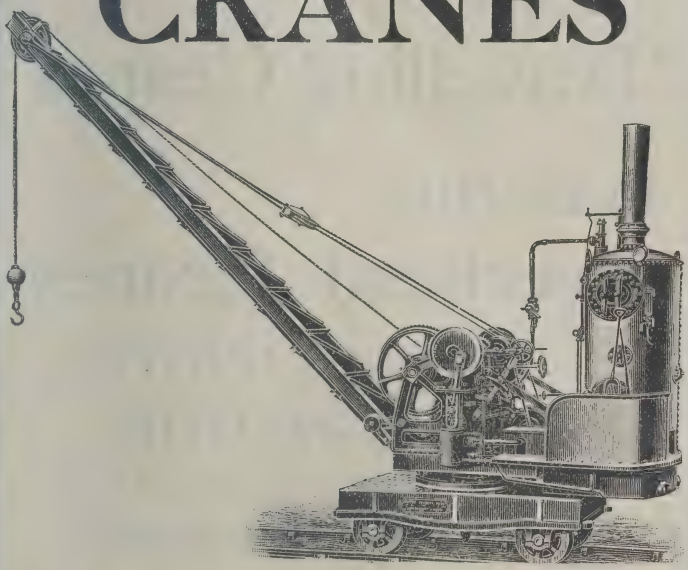CRANES



SAMUEL BUTLER
AND CO. LTD.

Grangefield Works,

Stanningley, near Leeds

Makers of all kinds and types of
LIFTING MACHINERY

Bridges, Roofwork and General Structural Steelwork

STEAM
Travelling Cranes
AND . . . . .
ELECTRIC
Overhead Cranes
UP TO ANY CAPACITY
ARE OUR SPECIALITY

Bridges — Roofwork
Structural Steelwork

SAMUEL BUTLER
——————AND CO. LTD.
Grangefield Works,
Stanningley, nr. Leeds

For handling molten metal, special cranes known as 'ladle cranes' have been designed, and are made up to 150 tons capacity, but cranes of 80 to 100 tons are more generally used. These cranes are fitted with two crabs, the main crab running on top of the girders and the auxiliary crab between the girders and on the lower flanges. The main crab has two barrels arranged so that the hoisting ropes pass outside the girders to sheaves attached to a lifting beam from which the ladle is suspended. The auxiliary crab has usually a lifting capacity of about 20 per cent. of the main crab and serves for general lifts and for tipping the ladle if required.

For handling forgings under hydraulic presses, special cranes have been developed with relieving gear to prevent overloads due to the action of the press in pulling down a forging which is suspended not quite level with the anvil. These cranes are made up to 200 tons capacity, and can be fitted with detachable gear for rotating the forgings.

For stores, warehouses, and machine shops an overhead travelling crane with underhung jib has many advantages owing to the increased area covered by the jib.

For outside service the Goliath crane fulfils the same function as an overhead traveller, and eliminates the gantry. Fig. 2 (p. 786) shows a crane of this type designed for lifting loads up to 200 tons.

The speeds of working and sizes of motors are:—

Hoisting, slow gear	200 tons,	3 ft. per min.	Motor 65 h.p.
,, fast ,,	75 ,,	8 ft. ,,	
Traversing	200 ,,	30 ft. ,,	,, 25 ,,
Travelling	200 ,,	50 ft. ,,	,, 65 ,,

The load is lifted on sixteen parts wire rope, winding one part on to each of two barrels rotated by the 65 h.p. motor through four reductions of gearing. Change-speed gear is provided for handling loads up to 75 tons at a quicker speed. An automatic solenoid and automatic mechanical brake are fitted, the latter working entirely enclosed in an oil box. The crab is mounted on four two-wheeled bogies and traversed by the 25 h.p. motor driving four rail wheels through four reductions of gearing. The crane travels on a twin rail track, there being eight centre-flanged steel-tyred wheels under each leg. Four wheels on each side of the crane are driven. The girders are of the lattice type with auxiliary girders and bracing to give lateral stiffness. All motions are operated from an enclosed cabin situated in an elevated position; the hoisting and travelling controllers are of the contactor type and the traversing of the drum type.

Overhead Runways.

Overhead runway systems, consisting of a track formed from a single rolled-steel joist which may be curved to suit local conditions, and have switches or turntables, are frequently installed in warehouses, steelworks, gas works, and other situations where an overhead crane is unsuitable or too expensive. Hand-pulley blocks and trolleys are used on the runways for occasional service and light loads, but for speed and loads up to five tons an electric trolley hoist should be installed. These may be either floor or cage controlled, and have usually separate motors for hoisting and travelling. The lifting speed may be as much as 100 ft. per minute, and the travelling speed from 200 to 800 ft. per minute, according to the duty required.

Grabs can be fitted to lift coal, ore, or similar material.

Derrick Cranes.

The Scotch derrick crane, largely used by contractors, has many advantages on account of its portability, simplicity of erection and long outreach. As commercially manufactured in stock patterns, these cranes have not usually a very large factor of safety, and if the full load is to be constantly handled it is advisable to specify a crane for about 25 per cent. greater load. Cranes of this type are specially made in large sizes for dock-side service in fitting out vessels under construction, but are giving way in favour of the more efficient cantilever crane.

Locomotive Cranes.

For general service on railway sidings around works and shipyards the locomotive steam crane is unequalled. These cranes are made in standard sizes up to 10 tons capacity and lift the load free on track with the jib in any position.

The following table gives particulars of standard steam cranes manufactured by Messrs. Samuel Butler & Co., Ltd., of Stanningley:—

Standard Locomotive Steam Cranes, 4 ft. 8½ in. Gauge.

Size.	Radius.	Size of Engines. (Cylinders.)	Size of Boiler.	Steam Press.	Speeds.			Weight.
					Hoist, f.p.m.	Slew, r.p.m.	Travel, f.p.m.	
Tons.	Ft	Ins. Ins.	Ft. Ins. Ft. Ins.	Lbs.				Tons.
3	16	7 by 10	7 9 by 3 6	100	80	2½	350	14½
5	16	8 by 10	8 3 by 4 0	100	80	2½	350	22½
7	16	8 by 12	8 3 by 4 0	100	50	2	300	32½
10	16	9 by 12	9 0 by 4 0	100	40	2	250	45
15	16	9 by 12	9 0 by 4 0	100	40	1½	200	54

For cranes of longer radius or greater lifting capacity than the above, blocking girders and rail clips are fitted to give the necessary stability, or the cranes may be made heavier.

Cranes that are to travel round sharp curves should have sliding axle gears or differential gears and the conditions pointed out to the crane makers at the time of ordering.

The travelling gear should be of steel, also the slewing ring and pinion.

The slewing spur-ring forms the roller path and should rest on a machined seating on the truck, the pressure of the slewing rollers being sufficient to hold it in position for normal working, but in the event of sudden loads it will slide sufficiently to absorb the shock and prevent damage to the gearing.

The engines are usually of the double cylinder non-condensing type, cranks at right angles and cut off at about three-quarter stroke. The boiler is of the vertical cross-tube type for a working pressure of 80 to 100 lbs. per sq. in. and should be lagged. Two means of feed should be fitted and the incoming water should enter above the firebox, and not impinge directly on the heated plates.

The mountings should preferably be flanged, and secured by studs to pads riveted to the shell of the boiler, rather than screwed directly to the shell. The safety valve should be separate and not a combined mounting with the stop valve.

A list of standard boiler mountings would consist of :

1 steam-pressure gauge with syphon ;
1 water gauge with plate glass protection ;
1 spring loaded safety valve ;
1 steam stop valve ;
1 injector with steam cock and feed check valve ;
2 test cocks ;
1 steam jet cock and pipe to funnel ;
1 blow-off cock.

The feed pump may be either a steam donkey pump or be driven direct from the engine crosshead.

Steam Breakdown Cranes

for use on the permanent way, have been made up to 100 tons lifting capacity, but in Great Britain the usual size is from 10 to 35 tons. The truck of these cranes is provided with the usual permanent-way fittings and the axles are spring borne. The maximum load per axle with the crane in running order should not exceed 18 tons. When the crane is ' in train ' the travelling gear should be disconnected and the superstructure locked to prevent it turning. Owing to the limited space due to the crane having to clear the loading gauge, a comparatively small size boiler must be fitted, and this should be of the multitubular type as the ordinary cross-tube boiler would not generate enough steam.

Wharf Cranes.

For dock-side service in loading and unloading ships, the high gantry type of jib crane is principally used. The usual sizes are from 1½ tons to 5 tons and the radius from 40 to 60 ft. The gantry is made wide and high enough to admit of the passage of rolling stock underneath and to keep the jib clear of the sides of large vessels. A separate motor should be fitted for each motion.

Typical speeds of working, in feet per minute, are as follows :—

Description.	Size.		
	1½ tons.	3 tons.	5 tons.
Hoisting	200	150	120
Slewing	500	400	300
Travelling	100	100	80
Derricking	150	120	100

For high derricking speeds some form of compensating gear is essential to reduce the power consumption due to raising the load and jib each time the radius is reduced. With the ideal compensating gear the path of the load is kept horizontal as the jib is raised or lowered, and with the jib balanced the power required is only that necessary to overcome friction.

For handling coal, ore, and similar materials, much time and labour is saved by using grabs. These may be on the single or double-chain principle.

The single-chain grab may be fitted to any crane lifting on a single fall of rope, but grabs of the double-chain type require an extra drum to coil up the opening or closing rope. This should preferably be driven through a friction drive, although for short lifts a spring drum is quite suitable. Grabbing work is very severe on cranes and the nominal size of the crane should be 50 per cent. in excess of the combined weight of grab and contents. The empty grab may be balanced by sliding counter weights to reduce the power consumption.

Double rope grabs have a tendency to spin and twist the ropes round each other. This may be overcome by fitting two sheaves at the grab head, and leading the opening and closing rope back to the jib head or winch, the grab being thus suspended on three ropes spread apart by the sheaves, which keeps it perfectly steady. On heavy grabs two hoisting ropes are used either on the single or double chain principle.

BUTTERS BROS. & CO.



ENGINEERS & CRANE MAKERS, **GLASGOW**

F. 790

BUTTERS BROS.
AND CO.
Engineers & Crane Makers,
GLASGOW.

Makers of all kinds of Cranes, including—

CANTILEVER CRANES
GANTRY CRANES
LOCOMOTIVE CRANES
WHARF CRANES
GOLIATH CRANES
DERRICK CRANES
WINCHES—STEAM
:: AND ELECTRIC ::

Specifications and Drawings sent with all Estimates.

Cable and Telegraphic Address - - - 'Butters, Glasgow.'

F. 791

CAPACITY AND WEIGHTS OF GRABS.

For Coal.			For Iron Ore.		
Capacity.	Weight of Grab.	Approx. Weight of Coal.	Capacity.	Weight of Grab.	Approx. Weight of Ore.
Cub. ft.	Cwts.	Cwts.	Cub. ft.	Cwts.	Cwts.
45	30	15	21	38	20
56	36	20	31	49	30
63	42	25	42	60	40
82	48	30	65	90	60
112	68	40	150	220	200
180	112	70	—	—	—

SHIPBUILDING CRANES.

For service over shipbuilding berths, high gantries with overhead travellers and mono-rail cranes, gantries with cantilever cranes, steel derricks and tower cranes, are used, and experience favours the latter type.

Tower cranes may be either of the fixed or travelling type, practice in Great Britain being inclined to the fixed type, as they require less clearance between the berths, and use is made of valuable space which would otherwise have to be kept clear for the track of a travelling crane.

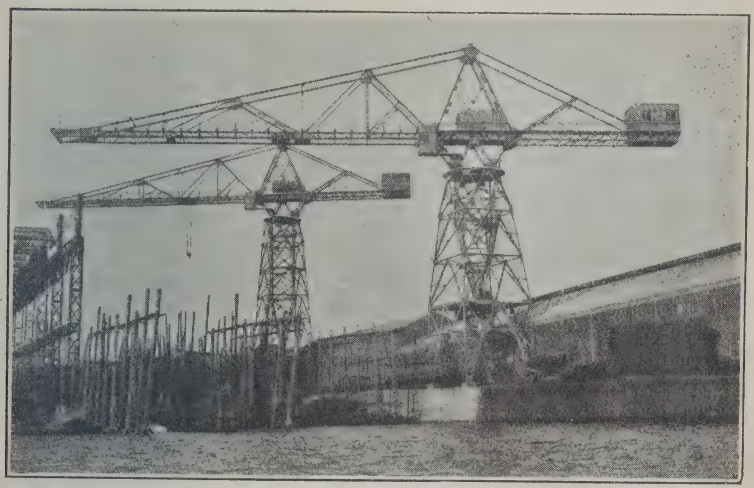


FIG. 4.—Tower Cranes.

Fig. 4 shows cranes of this type designed by Sir Wm. Arrol & Co., Ltd., Glasgow. The horizontal cantilever is designed as a track for a travelling trolley which carries the load hook. The motions of hoisting, slewing, racking, and travelling are fitted, operated by independent motors. The cranes are made with a lifting height up to 120 ft., and a radius up to 140 ft. The usual capacity is 5 tons at 100 ft. radius and 10 tons at 50 ft. Travelling cranes of this type have been made to lift 30 tons at 100 ft. radius, 15 tons at 140 ft. radius, and with a height of lift of 120 ft., but these are exceptional sizes.

For fitting out, cranes of the wharf type with derricking jibs are used, and range in size from 10 to 40 tons, with radii up to 80 ft., according to requirements. Two speeds of hoisting are

generally arranged, so that light loads may be lifted at a speed of 50 to 80 ft. per minute. A typical crane of this type lifts 30 tons at 55 ft., 20 tons at 72 ft., 10 tons at 80 ft. radius, and is mounted on a gantry to clear rolling stock, the centres of the gantry track being 22 ft.

For the same purpose floating cranes are occasionally used, and have the advantage of being transferable from dock to dock, but with them it is not easy to deposit a heavy load with precision, as the crane follows the movement of the water and its equilibrium is disturbed with every fluctuation of loading. These cranes are usually steam operated, but in recent years several large cranes have been electrically driven. This appears an unnecessary and expensive refinement, offering little advantage to compare with the additional cost of installing generators unless other use can be made of the power.

The pontoons are usually rectangular, flat-bottomed vessels, but if self-propelled it is advisable to give them a ship shape. The angle of heel under full load conditions and a 5 lb. wind should be not more than 5°. Travelling ballast is sometimes fitted to limit the heel under various loading conditions. Fig. 5 (p. 793) shows a 30-ton crane of this type constructed by Sir Wm. Arrol & Co. Ltd., Glasgow, for the Brazilian Government. It is designed to lift 30 tons at 10 metres outreach from the side of the vessel and is steam operated, the motions of hoisting, derricking, and slewing being fitted. The pontoon, built by Messrs. Ritchie, Graham & Milne, of Glasgow, is of the self-propelled type, 150 ft. long by 50 ft. beam by 8 ft. deep, and is fitted with two sets of compound surface condensing engines having cylinders 13 ins. and 26 ins. by 18 ins. stroke, to give a speed of seven knots.

The boilers are of the water-tube type and supply steam to the crane engines, auxiliary machinery and electric light set.

The Giant cantilever crane is adapted for loads from 75 to 250 tons and enables large portions of machinery, gun turrets, etc., to be lifted on board as a complete unit. A typical crane of this type, manufactured by Sir Wm. Arrol & Co. Ltd., Glasgow, is shown in fig. 6 (p. 793). The leading dimensions are :—

Max. radius for 250 tons	105 ft.
,, ,, ,, 120 ,,	130 ft.
,, ,, ,, 80 ,,	160 ft.
Height to top of tower	140 ft.
Base of tower	50 ft. square.

The main hoisting machinery consists of independent hoists each of 125 tons capacity, which can be worked together when required. The auxiliary hoist is of 40 tons capacity and the jigger hoist of 10 tons, this latter having a separate track and trolley on the underside of one of the cantilever girders. The crane was satisfactorily tested with a load of 360 tons.

General Data.

Structures.

Crane structures should be made of open-hearth mild steel, 28 to 32 tons tensile strength, extension not less than 20 per cent. in eight inches. In determining the section of members, allowance should be made for the vibration due to the movement of the load and machinery, for the movement of the structure in the case of a travelling crane, and deflection should be considered where bearings for shafts are carried on structural members. The stresses should be such as to give a factor of 5 to 6 on the ultimate strength of the material. The ratio of length to radius of gyration should carefully be considered in struts, and charts plotted from Claxton Fidler's or Tetmeyer's formula form a reliable basis on which to determine the stresses. For wind bracings the factor of safety need not be more than three, as this is an exceptional loading infrequently applied.

Wind pressure on cranes in exposed positions in Great Britain may be taken as a maximum of 40 lbs. per sq. ft. It is inadvisable to work a crane in a wind pressure above 5 lbs. per sq. ft., and when designing the structure it is therefore unnecessary to allow for a higher pressure under full load conditions. The maximum wind pressure must of course be considered separately.

The revolving superstructure of jib or cantilever cranes may be carried on a ring of live rollers, or on a set of four or eight large diameter rollers designed as travelling wheels, but with conical treads and unflanged. The live rollers may be of either forged or cast steel and should run between two steel guard rings connected to the centre pin casting by radial rods. A gunmetal washer should be fitted between each roller and the outer guard ring, to take the outward thrust of the rollers. For unhardened rollers the pressure in lbs. should not exceed 400 by length in inches by diameter in inches. The roller-paths should be of steel, machined conical on the face to form a full bearing for the rollers.

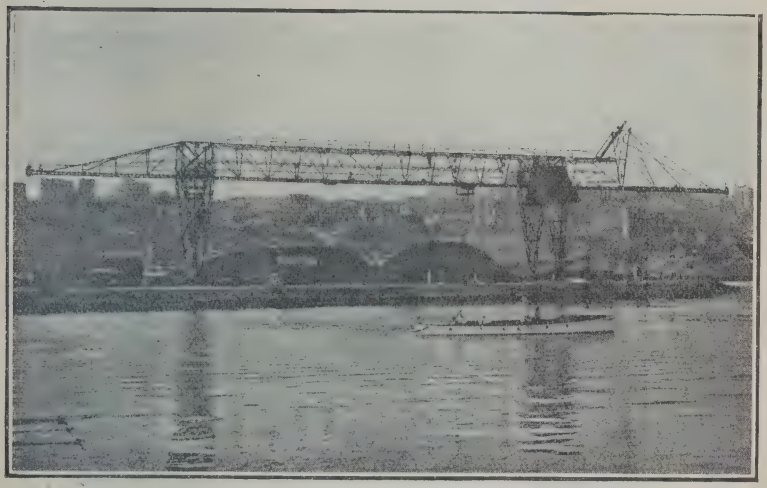
On jib cranes up to about 5 tons capacity the rollerpath frequently consists of a flat-bottom rail bent to a circle, and the superstructure is then mounted on four rollers 15 ins. to 18 ins. diameter. This is a cheap and serviceable construction.

A friction clutch should be incorporated in the slewing gear adjusted to slip and prevent damage in the event of excessive shock due to too sudden application of the brake or the fouling of jib with some stationary object.

SIR WILLIAM ARROL & CO. LTD.

DALMARNOCK IRONWORKS,
GLASGOW.

ENGINEERS, DESIGNERS AND CONTRACTORS FOR
BRIDGES, STRUCTURAL STEELWORK,
EXCAVATORS, CRANES AND TRANSPORTERS
OF ALL TYPES.



Bridge Transporter over Coal Storage Ground.

COAL HANDLING MACHINERY for loading, unloading and distributing coal, as supplied to the leading ports of the world.

STEAM AND ELECTRIC EXCAVATORS.

SPECIALISTS IN REINFORCED CONCRETE.

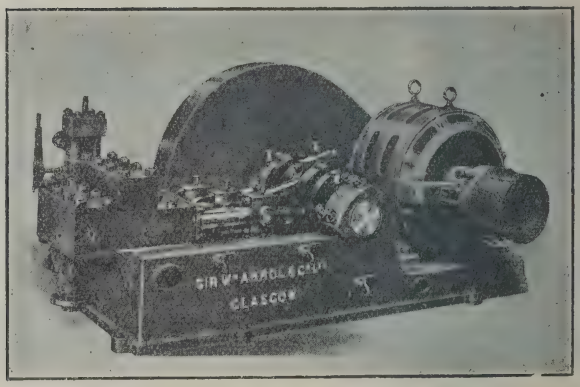
FF F 792

SIR WILLIAM ARROL & CO. LTD.

DALMARNOCK IRONWORKS

GLASGOW.

Hydraulic Cranes,
Hydraulic Pumps,
Hydraulic Riveters,
Hydraulic Presses,
&c., &c.



Hydraulic Electric Pump.

Specialists in Electric Derricks, Tower Cranes and all kinds of Lifting Gear for Shipyards.

Coal Handling Machinery.

F. 793

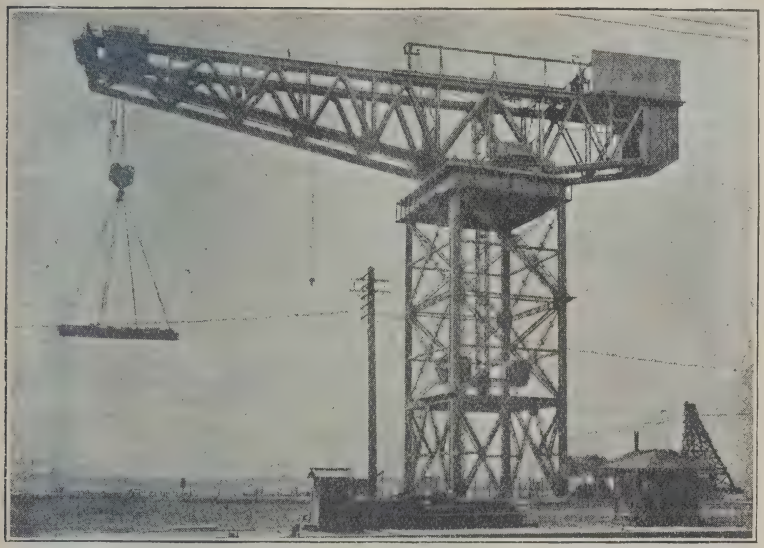


FIG. 5.—30-Ton Steam Floating Crane.

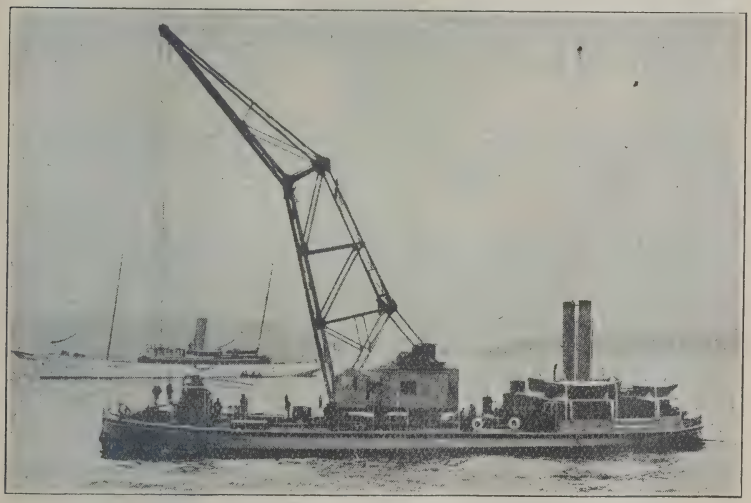


FIG. 6.—250-Ton Giant Crane.

Gearing.

On all high-class crane work the gearing should be machine cut. For hand and low-power cranes cast-iron wheels and steel pinions are satisfactory, but for all high-speed cranes the gearing should be of steel, with the possible exception of motor pinions, which, to ensure silent running, may be of rawhide, fabroil, or phosphor bronze.

For heavy loads and high speeds, machine-cut double helical gearing is very satisfactory, efficient, and silent.

The strength of spur gearing can be determined by the Lewis formula (page 877).

Worm wheels should consist of a phosphor bronze rim fixed on a cast-iron or steel centre, and have machine-cut teeth. The worm should be of high tensile forged steel and need not be hardened unless facilities exist for grinding the threads. In determining the size of worm gearing the heating effect must be considered as well as the strength.

Shafts.

In designing shafts the resultant loads should be determined and the effect of combined bending and twisting moments considered. The equivalent twisting moment due to combined bending and twisting is equal to

$$BM + \sqrt{(BM)^2 + (TM)^2},$$

where

BM = bending moment; TM = twisting moment.

Stresses should be low on account of the frequent reversal and impulsive loads common with crane work. Where keys are fitted, the shafts should be increased in diameter.

Bearings.

For cheap hand cranes the bearings are usually of cast-iron and not bushed. All power-driven cranes should have gunmetal bushed bearings. The bearing brackets should be fitted with caps, and the bushes be in halves. Studs for securing the caps are not desirable. Tee-headed bolts should be used, and these should fit in a slot accessible from the outside of the pedestal so that the bolts can be withdrawn after the cap is removed and without disturbing the steps. The pressure per sq. in. for shafts running at medium speeds should not exceed 600 lbs. For slow-moving pulleys and axles the pressure may be as high as 1,000 lbs. per sq. in. Fast-running shafts, such as motor spindles, should have ring lubrication. Axles are frequently fitted with float lubrication, which consists of a cylinder of wood floating in an oilwell formed in the inverted cap of the bearing and by contact with the axle supplying the necessary lubricant. Screw-down and spring-feed lubricators with grease are very satisfactory.

To reduce frictional losses, ball or roller bearings are sometimes fitted, and the makers should be consulted regarding the size of these. Ball bearings are very serviceable for worm thrust bearings, footstep bearings, and for under the hook.

Ropes.

Ropes for crane work should be of extra special flexible quality, 6/37 stranding if above 1¾ in. circumference, below this size 6/24 or 6/19 stranding. For ordinary work a hemp core is suitable, but where exposed to heat a soft iron core is desirable. The diameter of the barrel and pulleys round which the rope passes should be between six to seven times the circumference of the rope. For high speeds it is advisable to use even larger pulleys than given by this rule. Sharp and reverse bends should be avoided, although with single ropes which may twist in winding the effect of a reverse bend is problematical. When lifting on a single fall, a so-called 'non-twisting' rope should be used. Ropes made from very high tensile steel wire are stiff and tend to 'bird-cage' or open out. The rope, particulars of which are given on page 805, is recommended for cranes. Ropes should be lubricated and examined in service for broken wires and corrosion. The barrels and pulleys should be machine-grooved to form a smooth and even surface for the rope to bed on. Hoisting ropes should have a factor of safety of at least seven, and even higher with small size ropes.

(See also page 283.)

Chains.

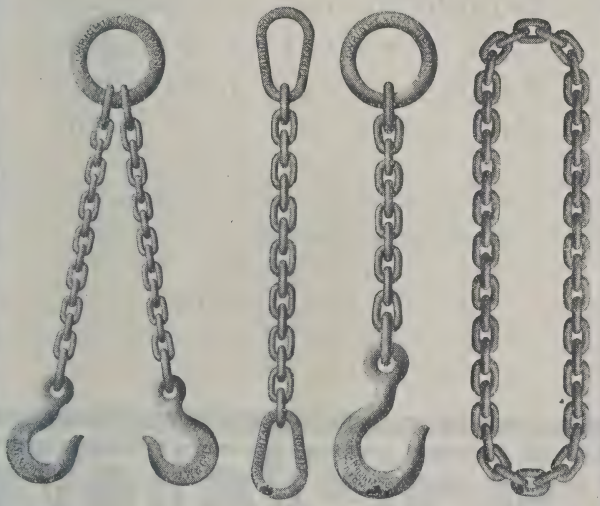
Chains should only be used for grabs or situations where the fine strands of a rope would be damaged by abrasion. The working load for a welded iron chain is given by the rule

$$W = \frac{(\text{dia. of iron in } \tfrac{1}{4} \text{ in.})^2}{9}.$$

Weldless steel chains are about 33 per cent. stronger, and make good slings on account of their lower weight. Steel plate driving chains are sometimes used for drives instead of gearing, and give good results if properly designed. The burden chain for large ingot rotating gears is best constructed of one inner and two outer links connected by steel studs.

(See also page 278.)

WRIGHT'S SLINGS
FOR RISKY LIFTS.
"TERRIER" BRAND.





JOSEPH WRIGHT & Co Ld.
TIPTON.

TELEPHONE 111 TIPTON. TELEGRAMS "WRIGHT" TIPTON.

BRAKES

If you are tired of makeshift linings and the constant trouble and cost of renewals —fit FERODO Friction Linings and get three times the wear of cast iron.

FERODO LININGS effectually supplant such makeshift materials as wood, rope, leather and metal as friction surfaces — giving more efficient service and longer wear.

FERODO

FRICTION LININGS

REGD.

FERODO Ltd. - Chapel-en-le-Frith

Depots at London, Birmingham, Bristol, Leeds, Belfast, Swansea, Cardiff, Coventry, Edinburgh, Glasgow, Liverpool, Manchester and Newcastle.

F. 795

HOOKS.

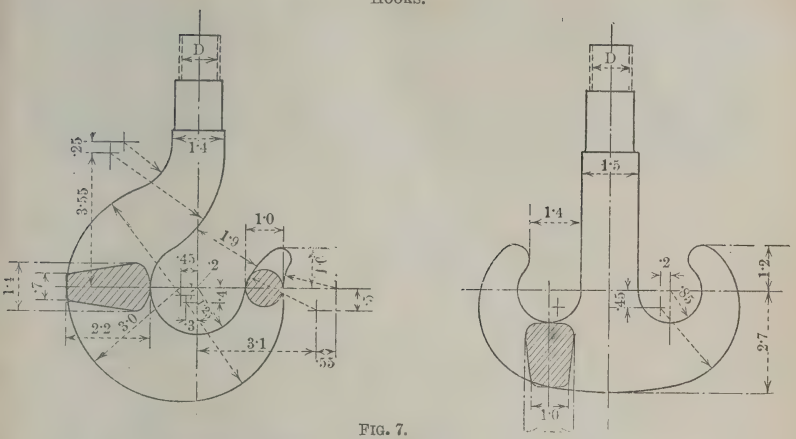


FIG. 7.

Fig. 7 gives proportions of hooks in terms of the diameter at the bottom of the thread. The size for any load can be arrived at by fixing the size of the shank to carry the load in tension. The area at the bottom of the thread must be taken. Hooks should be forged from mild steel.

Crane hooks depending from large travelling cranes in machine shops ought to be painted white, so as to be easily seen. With this improvement in visibility workmen will be less likely to run against a hook or to be struck by one which is moving.

THE DESIGN OF LIFTING TACKLE.

Fig. 8 shows a faulty design of eye-bolt, likely to break without warning; and fig. 9 one which would stand rough usage, permit a pull at bad angles, give way, and give notice before it broke, and at the same time possesses a useful strength (over 200 per cent.) beyond that of fig. 8.

These eye-bolts—hand-forged, of both types—have been tested to complete destruction at

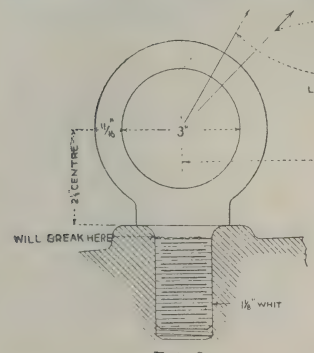


FIG. 8.

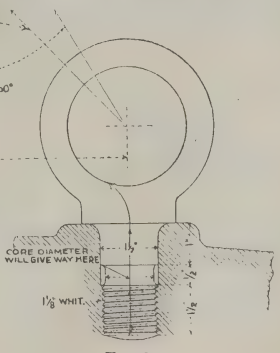


FIG. 9.

various 'punishing' angles, by Messrs. Kircaldy, and the verdict has been from 50 per cent. to 250 per cent. in favour of the fig. 9 pattern.

The arrows depict the form and direction of the strains, and such were precisely followed in the tests by Messrs. Kircaldy.

The increased strength as a result of decreased material, refers to the reduced part A, for this reduction is an effective factor which contributes to the need that the strain of the load should be distributed over as large a volume of the composition of the bolt as is possible.

(*J. W. Towlson, 'The Electrical Review.'*)

BRAKES.

One of the most important features on a crane is the brake, and this should have a large factor of safety. The brakes in common use are electric, automatic solenoid, centrifugal, automatic mechanical, and manual brakes. Hydraulic and pneumatic brakes are used for heavy loads, or where extremely fine control is desired.

A typical arrangement of a solenoid brake is shown in fig. 10. The brake is applied by

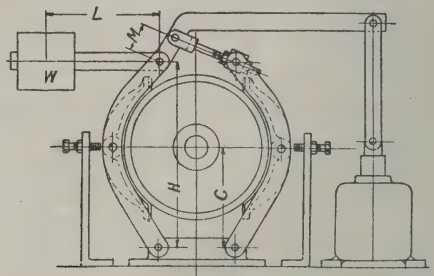


FIG. 10.

the weight and released by a solenoid magnet connected in the motor circuit so that it is excited immediately current is switched on to the motor.

If F is the turning force on the rim and μ the coefficient of friction between the brake shoe sand sheave, then the weight required to apply the brake equals

$$\frac{C \times M \times F}{H \times L \times 2\mu}$$

where C, M, H, and L refer to the dimensions shown in fig. 10.

The weight of the solenoid plunger and levers must be taken into account, and about 10 per cent. is usually added for friction in joints.

The centrifugal brake is designed to control speed, and does not serve to sustain the load at rest. In one form it consists of a series of weighted slippers which are pressed by centrifugal action on the inner rim of a fixed annulus, and thus have a retarding effect. The brake shoes should be slightly lubricated and ample radiating surface allowed to dissipate the heat generated

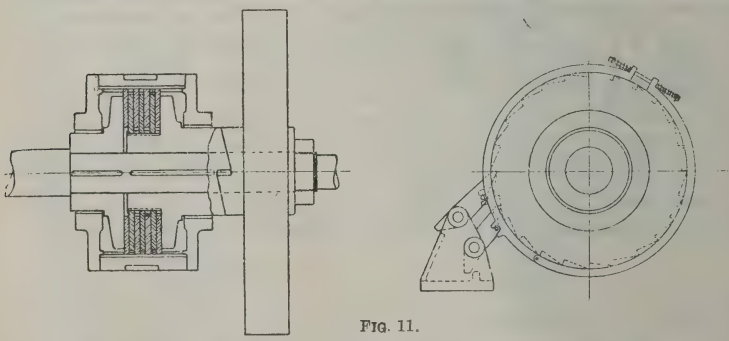


FIG. 11.

The automatic mechanical brake, known also as the 'Weston washer brake,' depends for its action upon the friction between a set of fixed and rotating discs. The pressure on the discs is obtained by a screw and nut, or two helical surfaces which set up an axial thrust along the brake shaft. Fig. 11 shows one type of this brake in which the friction discs, alternately of bronze and

steel, are enclosed in a cast-iron box, with ratchet teeth on the outside. One set of discs is connected by feathers to the box, and the other set to the thrust plate. The driving wheel has a helical face formed on the boss which engages with a corresponding face on the thrust plate. When hoisting, the discs are pressed up tight and the whole brake revolves, but when lowering, the pawls engage with the ratchet box, and hold it stationary. The pressure on the discs is relieved by the reversal of the motor, and the load is free to descend. As it tends to accelerate and gain on the motor, the discs are pressed together again and the friction between the surfaces of the fixed and revolving discs forms the braking effect. Ample lubrication and radiating surface are essential for the successful operation of this brake.

The pitch of the helical faces is determined by the following formula :—

$$T = \frac{PL}{R \times \mu \times N}, \quad \text{and} \quad \frac{PL}{Tr} = f = \tan A ;$$

therefore,

$$\text{lead of helix} = \tan A \times 2\pi r ;$$

where,

R = average radius of disc ;
PL = torque on driving wheel ;
A = angle of helix ;
N = number of rubbing surfaces ;
μ = coefficient of friction = ·07 ;
r = mean radius of helical faces ;
T = thrust or pressure on discs ;
f = coefficient of friction of helical faces.

The brake should be proportioned so that an angle of helix of about 10° will give the requisite pressure. The brake should run at a speed not exceeding 150 revs. per minute, and the pressure on the discs should not be more than 200 lbs. per sq. in. and on the helical faces 500 lbs. per sq. in.

Manual brakes are usually of the band or post type. Band brakes should have a bar fitted round the outside of the strap with adjusting screws to ensure that when the brake is released the strap will come away evenly from the sheave.

Band brakes are generally only suitable for a torque in one direction, i.e. away from the fixed end of the strap.

To find the pull to be applied to the loose end of the strap, the following formula may be used :—

$$P = \frac{F}{e^{\mu\theta} - 1},$$

where,

P = pull ;
F = turning force on rim of brake sheave ;
e = base of Napierian logs. ;
μ = coefficient of friction ;
θ = angle of sheave embraced by strap in radians.

Brake sheaves are usually made of cast iron, but steel may be used for severe duty. The brake shoes or strap may be lined with wood, leather, or one of the asbestos fabrics such as Ferodo ; wood and leather are inclined to char and glaze and the coefficient of friction is reduced. Ferodo bonded asbestos (page 825) is not subject to these objections and maintains a constant coefficient of friction, which in practice may be taken as ·3.

Electric cranes may be controlled by dynamic or rheostatic braking if direct current is used. Dynamic braking with potentiometer control is to be preferred to plain rheostatic braking, as practically automatic speed control is obtained in the lowering direction irrespective of the weight of the load. Heavy rushes of current and mechanical shock can be produced on the motor by either systems of electric braking, and some form of current limit control should be provided.

To control the lowering of heavy loads at slow speeds, some form of hydraulic brake is the most efficient. In principle this consists of either a reciprocating or rotary pump with closed circuit and throttle valve.

The pump is in the train of gearing between the motor and the rope drum, and by means of a free wheel drive is inoperative in the hoisting direction. On lowering, the solenoid or other brake is released, and the descending load drives the gearing and pump. The speed is controlled by the throttle valve, and very fine regulation at constant speed can be obtained. Ths system is especially suitable for placing guns, turbines, and engines on board ship.

For gun tempering, armour treatment, and processes where immersion in a cooling bath is necessary, it is essential that the load should be rapidly lowered at speeds varying from 60 ft. to 150 ft. per min.

The lifting speed is about one-tenth of these speeds, and the usual practice is to disconnect the rope drum from the gearing and motor when lowering.

A coil clutch is used for the purpose, and a powerful brake must be fitted to control the lowering speed and sustain the load. Manual brakes have proved satisfactory for this purpose, particularly in conjunction with a centrifugal brake for speed control. On cranes of over 100 tons capacity elaborate electro-hydraulic systems have been used with great success, but they are very costly.

Electrical Equipment.

Cranes may be worked by either direct or alternating current, but the former is to be preferred for the following reasons :—

1. Series wound motors may be used with high starting torque and speed variation in proportion to load.
2. Very fine control can be obtained and dynamic braking used.
3. Lower first cost and less wiring.

Alternating current motors usually require less attention than direct current motors, but the starting torque is limited and the running speed is practically the same under light and full load conditions. The starting torque for alternating current motors should be not less than two-and-a-half times the full load torque, and in fixing the horse-power it is advisable to make it about 10 per cent. higher than for direct current motors for the same duty.

Squirrel cage motors are not suitable for crane work.

All motors should preferably be of the totally enclosed type. For ordinary engineering shop service crane motors rated to develop their full power for a period of half-an-hour with a temperature rise of 90° F. are quite suitable. For steel works and other situations where the duty is severe, the rating should be for one hour. It is desirable to have the yoke and bearings made in halves so that easy access may be had to the interior of the motor.

Controllers.

For ordinary crane service and motors up to about 60 h.p. the drum controller gives very good service. There should be ample room inside the controller for connections, all parts accessible, finger tips and drum contacts easily renewable, insulation of mica or micanite, and a definite step should be felt as the barrel is moved round to each contact. Magnetic blow-out should be fitted on direct current controllers.

For frequent operation and large currents a solenoid operated or contactor controller should be fitted. The contactor switches handle the main current to the motor and are controlled by a small drum, or master controller, which deals only with the shunt current required to excite the contactor coils. A development of this system is the Holme Portable Remote Control in which the master controller can be carried about by the operator and connection is made to the contactor panel by a multicore flexible cable.

Creeping control for foundry or riveting work is obtained by inserting resistance in parallel with the motor armature circuit, thus magnifying the strength of the field and enabling full load torque to be obtained at a very slow speed.

On alternating current circuits speed regulation is obtained by resistance in the rotor circuit, but the same range of speeds cannot be obtained as with direct current, particularly on light loads.

When creeping speeds are required the most practical method is to load up the motor with a manual brake, and then use the controller and resistance to adjust the speed.

Resistances.

Resistances are preferably of cast alloy or stamped steel grids assembled to prevent vibration and shorts due to distortion through heating. They may be rated to be in circuit for two or five minutes out of every fifteen minutes with a temperature rise not exceeding 350° to 400° F. For creeping control continuously rated resistances are desirable.

Switchboards.

Many cranes are fitted with a main switch and fuses for the protection of each motor circuit, but it is desirable that these should be replaced by a main automatic circuit breaker and relay switches for each branch circuit. The relay switches do away entirely with fuses and obviate the loss of valuable time at critical moments due to replacing them. Each switchboard should have a pilot lamp and socket for portable lamp connection. It is advisable, although not essential, to fit an ammeter and voltmeter.

Limit Switches.

Limit switches to prevent overwinding or overtravelling should be of the shunt type, and connected in the no-volt coil circuit of the main breaker on the switch-board, so that in the event of the switch coming into operation the main circuit is opened at the breaker.

Special contacts can be fitted on the controller to short circuit the limit switch on bringing the controller on to the first notch in the reverse direction. The breaker can then be reset and the motor reversed. The limit switch should be of the totally enclosed self-resetting type.

Solenoids.

Solenoids for brake operation are preferably of the series type on direct current circuits, but where rheostatic braking is used they must be of the shunt type, in which case a discharge resistance should be fitted to take up the induced current on breaking circuit. For alternating circuits solenoids are preferably connected in all phases. The rating of a solenoid should be the same as the motor with which it is in circuit. The coils should be enclosed as a protection against damage, dirt, and damp.

Wiring.

For crane work the current density may be in excess of ordinary practice for shop motors owing to the intermittent service, and the I.E.E. have drawn up a set of rules for this duty.

Cables, unless lead covered and armoured, should be enclosed in metal conduit. Current is supplied to travelling cranes from bare conductors stretched along the track by means of slipper or trolley collectors. The bare conductors may be of copper wire, or, as is now common practice in steel works, steel tee or angle bars ground on the sliding face.

For jib cranes the conductors may be carried overhead or in a conduit. An alternative system is to run the cables in a closed conduit with junction boxes at intervals from which connection can be made by plug and flexible cable. A drum should be fitted on the crane to coil up the slack cable.

Electro-Lifting Magnets.

Electro-lifting magnets are largely used in connection with cranes for handling all classes of iron and steel materials, and their application shows a considerable saving in time and cost compared with manual labour or even ordinary crane service with slings.

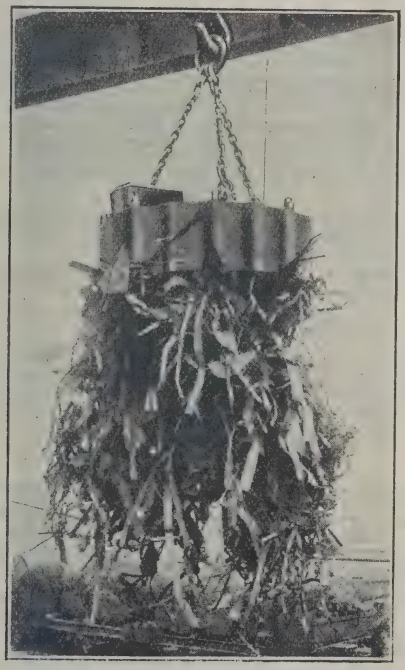


Fig. 12.

For lifting pig iron, small and heavy scrap, and large solid masses, a single circular magnet (fig. 12) is adopted, and for lifting long and wide plates two or more of these magnets are used spaced along a beam which can be slung from the crane hook.

For rails and long bars or tubes a series of two or three rectangular or oval magnets on a beam are better, as greater lifting capacity is obtained with less dead weight.

The circular type of magnet consists of an outer casing or yoke of high permeability steel with a central boss which forms the inner pole of the magnet, the walls of the casing forming the outer pole. The annular space between the poles serves to contain a coil of high conductivity

insulated copper wire or strip, secured in place and protected by a non-magnetic manganese steel bumping plate, the latter being held in position by the inner and outer pole shoes which are bolted to the casing and form the contact face of the magnet. In the 'Phœnix' magnet there are two annular recesses each with a coil; this construction increases the area of the central pole and adds to the lifting power of the magnet.

The outer casing is provided with lugs for attaching the sling chains, and a terminal box is fitted for making connection between the magnet coil and the supply cable.

The insulation of the coil is a most important detail, and it is usual to dry this in place in a vacuum and then impregnate under pressure with a special insulating compound which sets solid and renders the coil impervious to atmospheric conditions and to water.

The magnets are energised by the medium of a drum controller which switches on the current through a series resistance and has also a discharge resistance to take up the back E.M.F. when switching off.

To ensure immediate release of materials which might cling to the magnet face by residual magnetism, a reverse step for demagnetising is provided on the controller.

Messrs. Steel, Peach & Tozer have developed a special safety device to hold the load in the event of the main current supply failing. This device consists of one set of accumulators connected up to two automatic switches carried on the top of the magnet frame in such a manner that should anything go wrong with the main current the accumulators are instantly and automatically connected across the magnet winding, providing a current sufficiently strong to enable the magnet to retain its hold on the already magnetised load. There is a special switch which enables the crane driver to put the accumulators on charge each time the magnet makes a lift, and to disconnect the same when it is necessary for the magnet to release its hold. It is impossible for the accumulators to come into operation across the magnet so long as there is the main current on the magnet feeding wires, and the magnet can only be made to loose the load at the will of the crane driver.

Magnets may be used on steam cranes by installing a steam-driven generator to supply current, and this should preferably consist of a turbine set which occupies little floor space and can be fitted to almost any existing crane.

Magnets are only suitable for use with direct current; so that, where alternating current is the main supply, it is necessary to have a motor generator to convert to direct current.

It is desirable not to use a higher voltage than 220, although the 'Phœnix' magnets are now successfully installed on a 500-volt circuit.

Current is conveyed to the magnets by means of a twin flexible cable which has to be coiled up or paid out to correspond with the lifting or lowering of the crane hook. This is accomplished by means of a drum carried on the crane and either geared to the main winding drum or actuated by means of an internal torsion spring. Slip rings and brushes are provided on the drum to pass current from the fixed to the revolving parts.

TABLE OF PARTICULARS OF 'PHŒNIX' CIRCULAR MAGNETS.

Diameter of magnet	24 ins.	30 ins.	38 ins.	44 ins.	48 ins.	52 ins.	62 ins.
Approx. weight of magnet in cwts.	5	8	15	20	26	50	65
Current consumption in kilowatts	1·1	1·8	3·4	4·6	4·6	8	12·6
Solid steel ingots or heavy armour plate lifted . . tons	5	10	13	18	20	26	40
Steel plates and tin-plate bars lifted . . . .cwts.	15–30	15–38	18–45	20–50	20–55	30–50	35–60
Shafting, bars, billets and rails lifted . . . .cwts.	50–100	60–140	80–140	100–180	100–200	100–300	200–400
Pig iron lifted . . . .cwts.	—	6–8	7–15	9–18	11–20	15–30	18–35
Scrap iron (broken castings), heavy steel scrap lifted .cwts.	—	10–20	20–40	20–70	30–100	30–140	30–200
Scrap sheet iron, stampings, bolts, filings, heavy turnings, etc., lifted . . .cwts.	—	5–10	8–12	8–15	10–17	10–25	15–30

An important advantage with the use of magnets is the amount of floor space saved, as the height of stacking is only limited by the height of lift of the crane, and when handling billets and blooms these can be stacked close together as no space is required for the use of dogs or slings.

The following typical cases are given to show the advantages accruing from the use of magnets:—

1. 62-in. diameter circular Phœnix magnet, fitted on a 12-ton electric overhead crane, commanding a scrap storage ground. Weight of magnet about 65 cwts. Current consumption about 50 amperes at 220 volts.

2. A truck load of steel turnings unloaded in seven minutes, work which formerly took four men five hours.

3. Four large furnace boxes, each measuring 6 ft. by 2 ft. 7 ins. by 1 ft. 6 ins. deep, placed side by side on a rail lorry, filled in four lifts averaging 17½ cwts: each.

4. Four furnace boxes of the same size filled with 2½ tons of tube scrap in three lifts.

5. 52-in. diameter circular Phœnix magnet, handling steel turnings from stock heaps into railway trucks. Approximate weight of magnet 50 cwts. Approximate current consumption 40 amperes at 220 volts. The magnet made twelve lifts in seven minutes and handled in this time 95½ cwts.—an average of, say, 8 cwts. per lift. Steel turnings are difficult to handle, particularly if rusted together or with long turnings interlaced.

A 52-in. Phœnix magnet has also unloaded from trucks 600 tons of pig iron in 8¾ hours with the crane driver solely controlling the operations, no other labour being employed.

6. A pair of oval-shaped Phœnix magnets for handling combs of pigs. Without the magnets the time occupied to lift a bed of 22 combs was four hours; with one set of magnets the work is done in sixteen minutes.

With the magnets in use, only two or three ground men are employed, whereas hitherto 30 or 40 were required.

Steel may be handled by magnets up to a temperature of about 700° C.

Fig. 12 shows a 52-in. diameter steel magnet handling scrap.

Mobile Finger Magnet.

For lifting rails and bars of similar section, Messrs. Allen West & Co., Ltd., have developed a rectangular magnet (fig. 13) along the face of which are four rows of short steel pieces free


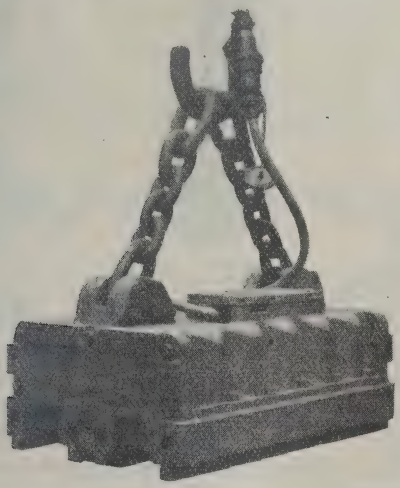


Fig. 13.


to move and adjust themselves to the contour of the bar to be lifted. Owing to these steel pieces forming a better path for the magnetic lines of force, the lifting capacity of the magnet is increased when dealing with irregular sections.

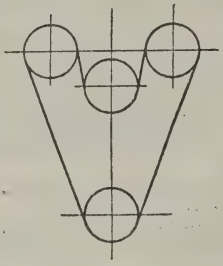VARIOUS ARRANGEMENTS IN LIFTING APPLIANCES.






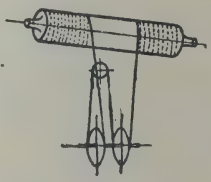
1.—One Bend.



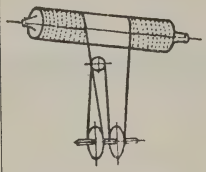
2.—Three Bends.



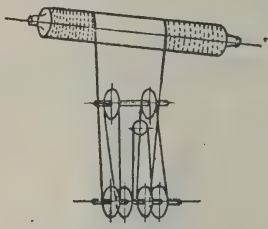
3.—Three Bends,
One Reverse.



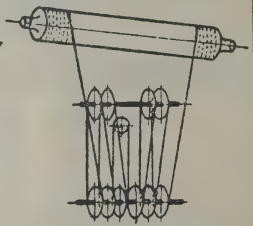
4.—Seven Bends.



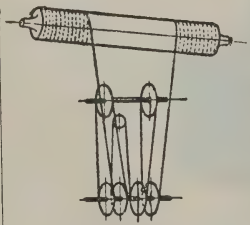
5.—Eleven Bends.



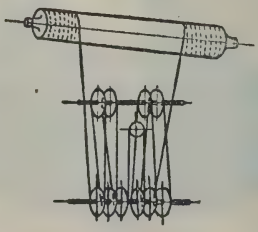6.—Seven Bends,
One Reverse.



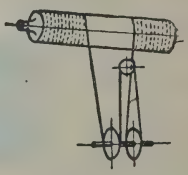7.—Eleven Bends,
One Reverse.



8.—Three Bends,
Large Bottom Pulleys.

BRUNTONS WIRE ROPES

FOR

ENGINEERING
AGRICULTURE
SHIPPING, MINING,
AERIAL RAILWAYS

▪ AIRCRAFT ▪
WIRES & FITTINGS

AUTOMATIC AND REPETITION WORK
PINION WIRE TURBINE BLADING
SPECIAL STEEL SECTIONS



BRIGHT DRAWN BARS

COLD ROLLED STEEL STRIP

Telegrams:
"WIREMILL MUSSELBURGH"

London Office:
33-34 CRAVEN HOUSE
KINGSWAY, W.C.2

MUSSELBURGH, SCOTLAND

F. 802

The WHITECROSS CO. Ltd.

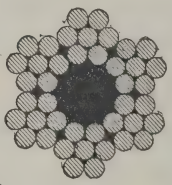
Telegrams: 'Whitecross, Warrington'

WARRINGTON, ENGLAND
Established 1864

Telephone: 9, 10, 11, 12, Warrington


HIGH CARBON WIRE RODS PATENT & PLOUGH WIRES

'WHITECROSS' HAULING ROPES



Special Patent Wires for Aeroplane Stays, Tie Rods, Springs, etc.

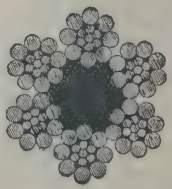'WHITECROSS' WINDING ROPES



TRADE WHITECROSS MARK

'WHITECROSS' PATENT & PLOUGH

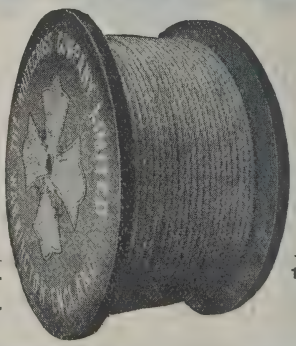
STEEL WIRE ROPES

For Mining, Collieries

Tramways
Aerial Ropeways
Cranes, Lifts

Logging Ropes

Galvanised Hawsers
Ships' Rigging



Contractors to
The Admiralty
War Office
India Office
Post Office
Crown Agents
Trinity House
and Dominion and Foreign Governments

London Office - - -
Telegrams: 'Abercrombie, Fen, London.'

110 FENCHURCH ST., E.C.3
Telephone: No. 657 Avenue.

Durability of Wire Ropes.

The two most important conditions appertaining to the manufacture and use of steel wire ropes that affect their durability are:

(a) Quality of material and size of wire.

(b) Diameter of pulleys and arrangement of ropes.

(a) Wire used for lifting ropes is of steel whose ultimate tensile strength varies from 80 to 130 tons per square inch. Ropes of material having a higher tensile strength are of smaller diameter for a given load and factor of safety, but since they are stiffer, larger drums are necessary to obtain the same durability.

The stress in a wire due to bending round a pulley is proportional to:

$$\frac{\text{(Modulus of elasticity)} \times \text{(Diameter of wire)}}{\text{(Diameter of pulley)}}$$

hence large wires are more quickly fatigued than small ones. On the other hand, small wires are more quickly worn through.

For a given ratio of pulley to rope diameter, given rope diameter and load, the life of the rope, if limited by abrasion and not by fatigue, increases as the square of the diameter of the wires of which it is made.

(b) For a given diameter of rope (d), diameter of wire (a) and load (P), the life of the rope depends on the square of the ratio of pulley to rope diameter (m) for large values of the latter.

The above statements have also been deduced from theoretical considerations by Prof. J. T. Nicolson, D.Sc., and may be represented by the formula given by him.

$$\text{Life of rope} = C\frac{m\,(m+1)\,d^2a^2}{P}$$

where the symbols m, d and a have the meanings given above, and C is a constant.

The practice of passing wire ropes on a crab as shown by fig. 14, entailing successively a 90° bend, a 180° reverse bend, and a 90° bend, is a bad one and deteriorates the strand wires:

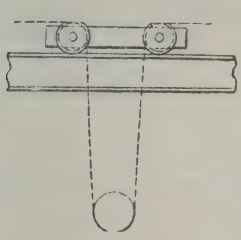


Fig. 14.

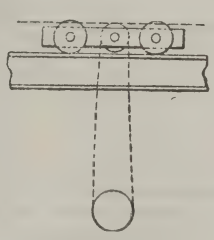


Fig. 15.

a better method is shown by fig. 15, the rope being taken over one upper pulley, down to the block, and up over the second pulley, the bend being always in the same direction, the reverse bend being thus abolished; this arrangement will increase the life of a rope as much as 50 per cent.

The effect of different arrangements of pulleys is shown by Nos. 1 to 7, page 802, and the accompanying tables, case No. 1 being taken as the standard.

COMPARISON OF ANTICIPATED LENGTH OF LIFE OF ROPES ARRANGED AS SHOWN IN NOS. 1 TO 7, PAGE 802.

No.	Number of Bends.	Relative Life of Rope.
1	1	300
2	3	100
3	3*	75
4	7	43
5	11	27
6	7*	37½
7	11*	25

REQUIRED INCREASE IN DIAMETERS OF ROPE DRUMS (MEASURED IN TERMS OF CIRCUMFERENCE OF ROPE) TO GIVE EQUAL DURABILITY.

No.	Increase of Diameter called for by No. 2.
3	1 circumference of rope
4	2½ circumferences of rope
5	4 ,, ,,
6	3 ,, ,,
7	4 ,, ,,

RATIO OF DIAMETER OF PULLEYS AND DRUMS TO CIRCUMFERENCE OF ROPE TO GIVE EQUAL DURABILITY.

No.	Ratio of Pulley and Drum Diameter to Rope Circumference.
1	4 to 1
2	7 to 1 (standard)
3	8 to 1
4	9·5 to 1
5	11 to 1
6	10 to 1
7	11 to 1

RELATIVE ROPE CIRCUMFERENCE ALLOWING FOR SMALLER ROPES DUE TO INCREASED NUMBER OF FALLS.

No.	Number of Falls.	Relative Rope Circumference.
1	2	140
2	4	100 (standard)
3	4	100
4	8	70
5	12	57
6	8	70
7	12	57

† Points to remember in connection with wire ropes :

1. In general, use the lowest grade of steel.
2. In general, use the middle flexibility.
3. Use Lang's lay, if possible.
4. Ratio of pulley to rope diameter should not be less than 26 ; 30 is better.
5. If possible, employ a ratio of pulley to rope diameter of 40, and then keep to the lowest instead of the middle flexibility.
6. In the case of peculiar double turns, use pulleys as large as possible.
7. Avoid unnecessary reverse bends.
8. Keep the ropes well oiled.

* Including one reverse bend which is twice as effective in wearing out the rope.
† Mr. George Hughes, M.I.Mech.E., in Proc. Inst. Mech. Engrs. 1912.

Extra Special Flexible Steel Wire Crane Ropes.

(Manufactured by Thomas & William Smith, Ltd., Newcastle-on-Tyne)

TABLE OF SIX-STRANDED ROPES (37 WIRES PER STRAND).

Circumference.		Diameter.		Approx. Weight per Fathom. Lbs.	Best Patent 80/90 Tons per square inch. Breaking Stress.		Special Improved Patent 90/100 Tons per square inch. Breaking Stress.		Best Plough 100/110 Tons per square inch. Breaking Stress.		Special Improved Plough 110/120 Tons per square inch. Breaking Stress.		Extra Special Improved Plough 120 Tons per square inch. Breaking Stress.	
Ins.	Mm.	Ins.	Mm.		Aggregate Tons.	Actual Tons.	Aggregate Tons.	Actual Tons.	Aggregate Tons.	Actual Tons.	Aggregate Tons.	Actual Tons.	Aggregate Tons.	Actual Tons.
1	25	$\frac{5}{16}$	8	1·08	3·1	2·6	3·5	2·9	3·9	3·2	4·3	3·5	4·4	3·6
1⅛	29	$\frac{2}{8}$	9	1·26	4·2	3·4	4·6	3·8	5·1	4·2	5·6	4·6	5·9	4·9
1¼	32		10	1·50	4·7	3·9	5·2	4·3	5·8	4·8	6·4	5·3	6·5	5·4
1⅜	35	$\frac{7}{16}$	11	1·80	5·7	4·7	6·4	5·3	7·1	5·8	7·8	6·4	8·1	6·7
1½	38		12	2·16	7·0	5·8	7·8	6·4	8·6	7·1	9·4	7·7	9·8	8·1
1⅝	41	$\frac{1}{2}$	13	2·58	8·3	6·8	9·3	7·7	10·2	8·4	11·2	9·2	11·7	9·6
1¾	44	$\frac{9}{16}$	14	3·00	9·7	8·0	10·9	9·0	12·0	9·9	13·2	10·9	13·7	11·3
2	51	$\frac{5}{8}$	16	3·96	13·0	10·7	14·5	11·9	16·0	13·2	17·5	14·4	18·3	15·1
2⅛	54	$\frac{11}{16}$	17	4·44	14·7	12·1	16·5	13·6	18·2	15·0	20·0	16·5	20·8	17·1
2¼	57		18	5·04	16·7	13·8	18·6	15·3	20·6	17·0	22·5	18·6	23·5	19·4
2⅜	60	$\frac{3}{4}$	19	5·52	17·6	14·5	19·7	16·2	21·8	18·0	23·9	19·7	24·9	20·5
2½	63	$\frac{13}{16}$	20	6·12	19·7	16·2	22·0	18·1	24·4	20·1	26·7	22·0	27·8	22·9
2¾	70	$\frac{7}{8}$	22	7·38	24·2	19·9	27·1	22·3	29·9	24·7	32·8	27·0	34·2	28·2
3	76	$\frac{15}{16}$	24	8·70	29·2	24·1	32·6	26·9	36·1	29·8	39·5	32·6	41·2	34·0
3⅛	79	1	25	9·54	31·8	26·2	35·6	29·4	39·3	32·4	43·1	35·5	44·9	37·0
3¼	83		26	10·32	33·2	27·4	37·1	30·6	41·0	33·8	44·9	37·0	46·9	38·7
3⅜	86	$1\frac{1}{16}$	27	11·10	36·0	29·7	40·3	33·2	44·5	36·7	48·8	40·2	50·9	42·0
3½	89	$1\frac{1}{8}$	28	11·88	39·0	32·2	43·6	36·0	48·1	39·7	52·7	43·5	55·0	45·4
3¾	95		30	13·80	45·2	37·3	50·5	41·7	55·8	46·0	61·2	50·5	63·8	52·6
3¾	98	$1\frac{1}{4}$	31	14·52	48·5	40·0	54·2	44·7	59·9	49·4	65·6	54·1	68·5	56·5
4	102		32	15·78	51·9	42·8	58·0	47·8	64·1	52·9	70·2	57·9	73·3	60·5
4¼	108		34	17·70	59·0	48·7	66·0	54·4	72·9	60·1	79·9	65·9	83·4	68·8
4⅜	111	$1\frac{3}{8}$	35	18·66	60·9	50·2	68·1	56·2	75·2	62·0	82·4	68·0	86·0	70·9
4½	114		36	19·98	64·7	53·4	72·3	59·6	79·9	65·9	87·6	72·3	91·4	75·4
4⅝	121	$1\frac{1}{2}$	38	22·14	72·7	60·0	81·2	67·0	89·8	74·1	98·3	81·1	102·6	84·6
5	127		40	24·54	81·1	66·9	90·6	74·7	100·2	82·6	109·7	90·5	114·5	94·4
5⅛	130	$1\frac{5}{8}$	41	26·04	85·5	70·5	95·5	78·8	105·6	87·1	115·7	95·4	120·7	99·6
5¼	133		42	27·18	90·0	74·2	100·6	83·0	111·1	91·6	121·7	100·4	127·0	104·8
5½	140	$1\frac{3}{4}$	44	29·58	96·9	79·9	108·3	89·3	119·8	98·8	131·2	108·2	136·9	112·9
5¾	146		46	32·28	106·6	87·9	119·2	98·3	131·7	108·6	144·3	119·0	150·5	124·2
6	152	$1\frac{7}{8}$	48	35·40	116·8	96·3	130·5	107·6	144·3	119·0	158·0	130·3	164·9	136·0
6¼	159	2	50	37·92	124·7	102·9	139·4	115·0	154·0	127·0	168·7	139·2	176·0	145·2
6½	165		52	40·92	135·7	111·9	151·6	125·1	167·6	138·3	183·5	151·4	191·5	158·0

The makers also supply ropes in the construction of six strands each containing 61 wires per strand, from 2½ ins. circumference and upwards; also ropes of six strands each containing 91 wires per strand, from 3 ins. and upwards. The breaking stresses for both these constructions are somewhat lower than those given in the above table for six strands each containing 37 wires per strand. Ropes of other constructions, and *of any size*, are also made for crane work by Messrs. T. & W. Smith, who will furnish full particulars on application.

ELECTRIC LIFTS.

Typical Specification for Electric Lift.

The following are the main particulars of the lift :—

Extreme travel . . 38 ft. 9 ins. Speed . . . . 120 ft. per min.
Maximum load to be carried 10 cwt. Inside dimensions of cage 3 ft. 6 ins. × 3 ft. × 7 ft. high.

Position for Motor, etc.—The motor, etc., to be placed in the basement in the position shown in the plan.

If fixed overhead, the driving sheave or drum should be designed, if possible, to span correctly from the centre of cage to centre of weight, so as to save the use of diverting sheaves.

The overhead sheaves are to be supported on suitable rolled steel joists, to be supplied and put in position by the contractor.

Cage.—The cage walls are to be made of well-seasoned pine, with a substantial iron or steel framework, and adjustable guides at the top and bottom to work on the runners. No seat will be required. A Bostwick or other approved sliding gate to be provided at the cage entrance.

The construction of the cage may be either (*a*) framed with grooved and tongued panels, the woodwork forming the panels being put in diagonally, and the whole bolted to the iron framework of the cage ; or (*b*) of grooved and tongued planks on the flat bolted to the iron framework of the cage with an additional strengthening iron ; or (*c*) of an approved type. If method (*a*) is adopted, the framing must not be of less than 1½ in. stuff, and the panels not less than ¾ in. ; if (*b*) the planks must be uniformly 1 in. thick. The floor of the cage must be of maple, 2 ins. thick. All the above dimensions are finished sizes.

An opening to be provided in the top to allow for the lighting of the cage by daylight. This opening is to be covered over and under with iron wire trellis of 1 in. mesh, of not less than No. 13 S.W.G. The wirework to be galvanised after it is made up.

The interior of the cage, with the exception of the floor, to be varnished with three coats of good oak varnish.

The cage to be fitted with an electric light fitting of the bulkhead or other approved type, with genuine enamel reflector. A bayonet collar lamp-holder, lamp, cut-out and tumbler switch for this fitting, and a length of flexible cable for making connection to a ceiling rose fixed about half-way down the lift-well, to be provided and fixed by the contractor.

Electric Bell.—Suitable bell pushes are to be provided and fixed on each landing, and connected to an electric bell, to be provided and fixed in and about midway up the lift-well, and to an indicator for each floor, to be provided and fixed in the lift cage. A battery for working the bell is to be provided.

The whole of the bell work, including the necessary wiring, is to be done in the most approved manner.

Gates for Cage and Openings in Lift Well.—Collapsible gates, with spring-catch lock of the Bostwick, B. and S., or other approved pattern, are to be provided and fixed to the lift-well openings on each floor, to the lift cage and motor enclosure. Six gates in all will be required. The locks and gates (except in the case where push buttons are required to be fitted) to be so constructed that they cannot be opened except by use of the authorised key.

The gates, which are to be carefully finished black, are required to open the width of the cag opening, and to reach to the top of the cage opening.

Lift-Well Enclosure and Wirework Guards.—A wirework guard is to be fixed to the gate uprights, and continued round the lift-well above and below the hand-rail from the basement to the second floor at a height of 7 ft. from the stair treads. Suitable supports for the attachment of the wire guard are to be provided, and care is to be taken to prevent the guard or its supports from interfering with the free use of the stairs hand-rail. The guard is to be over and under iron trellis of 1 in. mesh, not less than No. 13 S.W.G., and is to be finished black, and stiffened where necessary by angle iron or tubing.

A wirework screen with suitable channel iron supporting frame, at least 7 ft. high, with Bostwick gate, to be provided in the basement for the protection of the motor and gear.

*Carrying Capacity and Speed.**—The cage to carry a maximum load of 10 cwt., and to travel at a speed of 120 ft. per minute when fully loaded. The maximum variation of speed ascending or descending at any other load must not exceed 10 per cent.

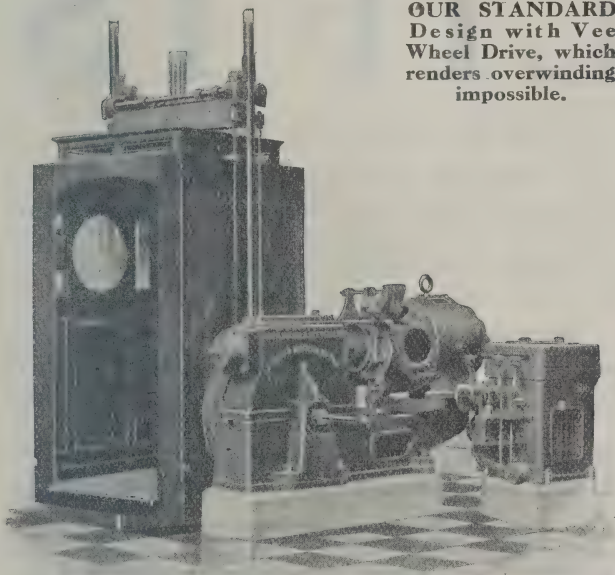
---

* In the case of passenger lift with car switch operation, the speed is now from 200 to 300 feet per minute.

ELECTRIC LIFTS

FOR ALL PURPOSES.

Embracing all essential Factors for
RELIABILITY, SIMPLICITY AND ECONOMY.
BRITISH MANUFACTURE THROUGHOUT.



OUR STANDARD Design with Vee Wheel Drive, which renders overwinding impossible.

Combination for Passenger Lift with Electric Control from Cage.

SMITH, MAJOR & STEVENS, Ltd.

Late A. Smith & Stevens,

LONDON AND NORTHAMPTON.

Agents in all parts of the World.

AUTOMATIC ELECTRIC AND ALL TYPES OF LIFTS

INSTALLATIONS:

Houses of Parliament, London.
Lord Commissioners of the Admiralty for Super-Dreadnoughts, 174 Lifts.
Cunard Steamship Co., SS. 'Aquitania.'
Law Courts, Capetown.
Messrs. Selfridge & Co. Ltd., London.
Commonwealth Bank of Australia, Sydney, N.S.W.
Port of London Authority, New Offices, London.
Royal Exchange, Manchester.
The Royal Mail Steam Packet Co., Buenos Aires.
Union Cold Storage Co., Liverpool, 28 Lifts.

SMITH, MAJOR & STEVENS, LTD.

Late A. Smith & Stevens,

LONDON AND NORTHAMPTON.

Head Office and Works: ABBEY WORKS, NORTHAMPTON.

LONDON:—
17 BOLAN ST., BATTERSEA BRIDGE ROAD, S.W. 11.

'Phone: 810 and 811 Northampton. Telegrams: Gudelyft, Northampton.

Cage Guides.—The guides are to be of round turned steel, or machined steel tees, without backings in either case. They must be sufficiently strong and securely attached to the sides of the lift-well to withstand any stress to which they may be subjected, due to the action of the cage safety gear.

Motor.—The motor is to be either of the iron-clad or of the protected type, with commutator and brushes enclosed. It is to be wound for 200 volts continuous current, and its speed is not to exceed 850 revolutions per minute. It is to run absolutely sparkless and silent under all conditions of load.

The rating of the motor will be based on a six hours' intermittent test, half an hour run under maximum lift duty, followed by half-hour's rest, with an overload capacity of 50 per cent. for short periods, without the temperature rising more than 70° above surrounding atmosphere. The motor will be coupled direct, by means of coupling to the worm shaft of the gearing. The journals of the motor will revolve in phosphor bronze bushes, with specially constructed lubricating rings, and oil chambers of ample capacity.

Gearing.—The power will be transmitted from electric motor to the winding sheave by means of a specially constructed worm and worm wheel gear. The worm wheel will have an ample bearing surface and be either of hard cast iron with teeth cut from the solid, or with a cast-iron centre and rim and with teeth of phosphor bronze. The worm will be of good quality mild steel bar or forging, with the thread cut from the solid to suit the wheel. The whole gear will be enclosed in a cast-iron case, and be partly submerged in oil, so as to ensure an ample supply of lubrication and to exclude dirt. The thrust of the worm shaft will be taken by a special thrust bearing of approved design and arranged for easy access for adjustment or repair. The shaft of the worm wheel will carry a specially constructed cast-iron V-grooved wheel, turned and grooved to receive the wire ropes and with suitable bearing for outer end of shaft. The motor will be fixed on a cast-iron bed plate, which carries the worm gearing, for rigidity. The efficiency must be such that the gearing is self-sustaining when at rest.

Brake.—The brake will act upon the motor shaft, and will be of the electro-mechanical type, and will always be in action excepting when the motor is revolving, and will be so arranged as to arrest the motion of the machine in the event of interruption of the electric circuit from any cause.

Method of Control and Switch Gear.—The lift is to be controlled from the cage by means of a hand-switch capable of starting, stopping, or reversing the motor. The cage switch is to be self-restoring to the 'off' position when released. The switch-gear is to be so arranged that the lift cage starts smoothly and independently of the rate at which the hand-switch is operated. It must also be impossible to stop the cage with a sudden jerk by means of the controlling switch.

There must be no undue sparking at the contacts of either the cage-switch or switch gear' and they must be generally so designed that they can be left for long periods without attention. All switches and connections are to be designed to carry without appreciable heating, and all resistances without excessive heating, double the maximum current which will at any time under working conditions pass through them. All wearing parts to be easily and cheaply renewable.

The working of the lift (subject to the conditions of the power supply) is not to cause any appreciable fluctuations to the voltage of the lighting circuit, the starting current required for the motor being put on gradually by steps (not including the step from zero) not exceeding 10 amperes, and not at any time exceeding 1½ times the rated full load current of the motor.

Main Switch.—A main double-pole switch to be provided and fixed at the point where the cables conveying the current for working the lift enter the motor enclosure at the basement level.

Leads.—The current to be conveyed to the motor enclosure by suitable vulcanised india-rubber covered cables terminated at the main switch before described. All connections required from this switch are to be provided and fixed by the contractor. The cable used for connections is to comply with the specification for vulcanised india-rubber covered electric light cable, and may be of the 'medium insulation' quality but with braided mechanical protection. All wires and cables supplied and fixed by the contractor are to be heavily braided and protected by being enclosed in W.I. barrel. The W.I. barrel to be efficiently connected to 'earth.'

Sizes of Conductors.—The conducting leads provided by the contractor are to be in accordance with the Institution of Electrical Engineers' Table, taking the full working load as the basis. Terminals, switches, connections, etc., whether of copper or other metal, are to be of such sectional area that their conductivity shall not be less than that of copper based on a maximum current density of 500 amperes per square inch.

Insulation.—All electrical parts must be well and satisfactorily insulated, and the actual insulation of the finished installation measured from the terminals of the main switch must not be less than one megohm, either between the positive and negative terminals with either pole of the motor disconnected or between both terminals and earth with all intermediate switches closed.

Safety Devices.—The most improved system of safety devices is required. A full description of all safety devices to be employed is to accompany tender. They must include the following :—(*a*) The locking of the cage on the guides or guide backings if one or more of the suspending ropes break or slacken ; (*b*) automatic stopping of the motor when the cage is brought to rest from any cause, unless the V wheel drive is used ; (*c*) automatic stopping of the cage before it reaches the top or bottom of the lift well.

Painting.—The whole of the materials fixed and supplied by the contractor, with the exception of the electric light and bell fittings, cables and resistances, bright metal work, folding gates, and the inside of the cage, which is to be varnished, is to be painted with three coats of oil paint, the finishing coat to be of a colour to be selected. The wood work, including all portions of the cage which are not visible, is to be knotted and primed before being painted.

Lubrication and Contact Cleaning.—The whole of the plant is required to work automatically and to require no attention beyond occasional lubrication, and occasional cleaning of the contacts.

Factor of Safety.—The factor of safety for the suspending ropes is to be not less than ten, and for all other parts a factor of safety of at least five is to be provided.

Precautions against Fire.—The contractor is required to make such arrangements as will prevent an outbreak of fire should the armature or any other part of the apparatus fuse or become excessively hot.

Quality of Material.—The material and workmanship to be of the best possible description throughout.

Tests.—Immediately the lift has been erected, the contractor will be required to make the following tests to the satisfaction of the inspecting officer :—

1. The cage to be loaded until the weight on the ropes is twice the combined weight of the cage and specified maximum load. The gear and suspending ropes must bear this weight for 30 minutes without showing any sign of weakness, temporary set, or permanent elongation of the rope strands.

2. Tests to determine if the specified speed is complied with.

3. Tests to determine if the various safety devices comply with the conditions of the contract.

These are to include : (*a*) Starting the cage up and down and letting it run to the end of its journey without attention ; (*b*) slackening one or more as required of the suspending ropes.

4. Tests to determine the suitability of the switching gear.

The contractor is required to provide a man to start the lift and to attend to it for one week from the time when it is accepted as running satisfactorily.

Leading makers such as Messrs. *Smith, Major & Stevens, Ltd.*, and Messrs. *Waygood-Otis, Ltd.*, use the following speeds on their lift motors, for continuous current :—

Up to 3 h.p. . . .	1,000 revs.	Up to 7½–10 h.p. . .	650–750 revs.
„ 5 „ . . .	930 „	„ 15 „ . . .	500–700 „

For single phase, 50 periods, 6 pole machines usually.

For 2 and 3 phase, 50 periods, 6 pole up to 10 h.p., and 8 pole above.

ELECTRIC WINDING.

The Ward Leonard System.

This system (fig. 16) is based on the fact that the speed of a separately excited D.C. motor is directly proportional to the voltage applied to the armature. If, therefore, the D.C. motor, 1, is used to drive the drum D, it can be made to run at any desired speed and in either direction of rotation, by varying the voltage and direction of the current impressed on the armature. This D.C. power is obtained from a separate generator, 2, known as the variable voltage generator, and driven at constant speed by a motor, 3, connected to the supply mains. The variable voltage generator and its driving motor are coupled together and mounted on a common bedplate, which also carries, on the same shaft as the other two machines, a small D.C. generator. This generator supplies the excitation current to the variable voltage generator and the winding motor, the triple combination being known as the converter set.

A regulator, 5, is used to vary the field of the V.V. generator and, consequently, its voltage between 0 and a ± maximum, and in this way the speed of the winding motor to which this voltage is applied can also be varied between zero and ± maximum.

The principal feature of the control is that the speed and direction of rotation of the winding motor are determined solely by the regulator or, in other words, by the position of the driver's control lever. For all practical purposes this holds true whatever the load in the cage may be, and whether the load is being raised or lowered. When in a running position—by moving the control lever towards the 'off' position—a strong electrical braking effect is obtained, as the motor then acts as a generator and returns energy through the converter set to the line. The same electrical braking effect can be obtained when lowering loads, and the low speeds required for inspection tests can be readily obtained by a slight movement of the lever from the 'off' position.

It should be noted that the controller only deals with the field of the V.V. generator (about 2 to 3 per cent. of the output), consequently, it is very small as compared with an A.C. controller, and can be readily operated even on the largest winders without the use of auxiliary gear.

As any given position of the control lever corresponds to one speed only, and one direction of rotation, it is possible to provide simple safety appliances of absolute reliability.

In Fig. 16 is shown diagrammatically the Siemens system for the automatic control of the acceleration and retardation.

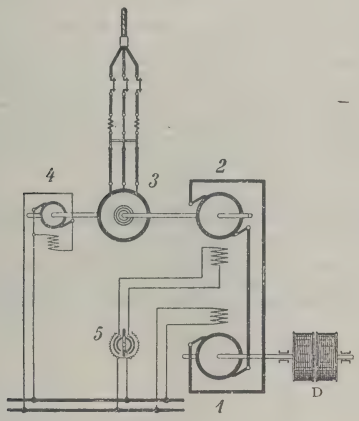


FIG. 16.

1. Operating Lever. 2. Controller. 3. Control Cam. 4. Depth Indicator.

The spindle of the depth indicator drives two cam wheels, one for each cage, through gearing proportioned so that the wheels make nearly one complete revolution. Each wheel has two cams, one for acceleration and one for deceleration. When starting, the control lever can only be moved from its mid position at a rate determined by the shape of the cams, which shape is designed to give the predetermined rate of acceleration. This rate cannot be exceeded. When retardation should begin, if the driver has not already started to bring back his lever, the deceleration cam gradually forces the lever back to the 'off' position. Acceleration, retardation, and speed of wind are thus within the driver's control, provided he does not attempt to exceed the limits for which the cams are designed.

In the event of an overspeed, electric braking automatically takes place. The winding motor will act as a generator and supply power to the V.V. generator, which will then act as a motor driving the set above synchronous speed, causing the induction motor to act as an asynchronous generator and pay back power to the line. Should the speed of the set exceed a predetermined maximum, a centrifugal switch driven from the shaft of the set will open the circuit of the brake magnet and apply the emergency brake.

AERIAL ROPEWAYS.

Aerial Ropeways may be divided into two fundamental types:—The SINGLE ROPE or MONOCABLE, and the DOUBLE ROPE or BI-CABLE. In the first, a single endless rope is used both to support and move the loads. In the second, there are one or more supporting ropes and an endless hauling rope. Adopted to these types are the 'Fixed or Non-detachable Clip System,' on the Single Rope Type, and the 'Jig-back' or 'To-and-fro System,' which is applicable to either type.

There is considerable divergence of opinion upon the merits and demerits of the two systems, which is due largely to the fact that a number of plants have been installed without giving due consideration to which type is most applicable to the nature of ground to be traversed, and the duty to be performed.

THE SINGLE ROPE OR MONOCABLE SYSTEM.

Ropes.

By experience, it has been found the most suitable form of rope on an average length line is a 6·7 Lang's lay, with a specially hard hemp core. On short lines when the rope is subject to a great number of bends per hour around the terminal sheaves, compound lays are sometimes used. Wire cored ropes are also occasionally employed, owing to the fact that they tend to stretch less than those with hemp cores, but they have been found by experience not to have such a long life.

On a well-constructed line, depreciation on rope is covered by ·125 pence to ·3 pence per ton mile carried, on the basis of a line not less than 1,000 yards long, and a capacity of over 25 tons per hour; as the length and capacity increases, the depreciation per ton mile carried decreases. The fact that on a single rope system the entire length of the rope is constantly passing under observation at the terminals renders it very safe against failure, and it can be worked until a comparatively low factor of safety is reached. The diameter and breaking strain of ropes can be obtained from the formula given on page 804, under 'Diameter of Hauling Ropes.' No rule can be given, however, for finding initial tension, as this is dependent upon driving power required and spans to be negotiated, etc., apart from capacity of line and so forth.

Loads.

When possible, individual loads should be kept to about 1 per cent. of the hourly capacity of a line, for the purpose of distributing the weight on spans. Heavy individual loads tend to increase prime costs.

Carriers and Clips.

Among the best known are Roe's Patent Toggle and Saddle Clips.

The former, fig. 17, is capable of sustaining a load at an angle of over 45°, and in theory is the most efficient of all clips actuated by the load, as the whole of the tare weight also is used

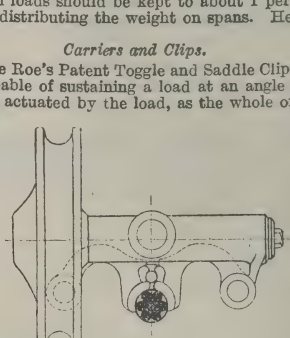


FIG. 17.

for gripping. In practice, however, the saddle clip, fig. 18, is found preferable and is usually adopted. The gripping in this type is performed by two cast chilled saddles, the sides of which are inclined, one side having a feather projection which engages into the lay of the rope, this projection being so formed that it disengages itself without damaging the strands when the carrier enters a station. The ruling grade on which this type of clip can be safely worked is 1 in 2¼. The tare weight of clip, carrier, and bucket is usually about one-third of the net load.

Fig. 19 shows the 'Roe Balance Beam.' The arrangement is used for distributing the pressure equally on a series of sheaves; these are arranged in groups of 2, 4, and 8. The introduction of a number of balanced sheaves in series greatly facilitates the working of long spans, and reduces wear and tear of rope where heavy pressure on any trestle has to be sustained.

A fair speed for the rope is 400 ft. per minute, though under certain conditions it can be run up to 550 ft. per minute, when no automatic return or dumping is required. The factor that rules the speed is the velocity at which the loads can be brought up to for engaging

with the rope, bearing in mind that the load and rope velocity should synchronise at the point of attachment.

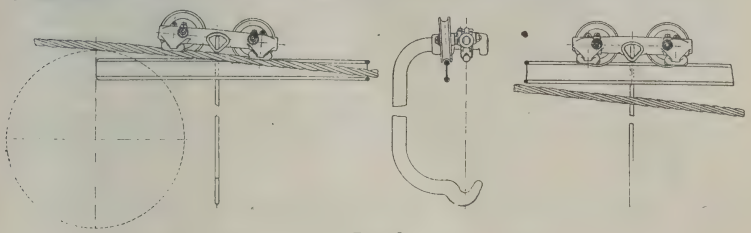


FIG 18.

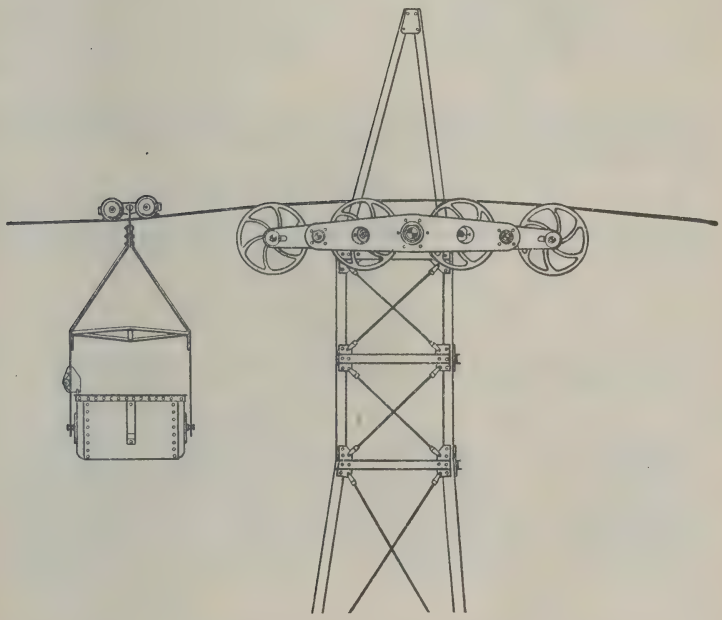


FIG. 19.

Power.

Any available power can be used as long as it is steady. Trouble, however, may be caused by using intermittent power, as this gives rise to oscillation of the rope in long spans. On automatic lines, the surplus power is preferably absorbed by means of a fan or turbine. When possible, the power should be placed at the upper end of a line, and the tension at the lower terminal. In long lines that have to be sectionalised, the driving or brake station, as the case may be, is sometimes placed between two sections, and the tension arrangements at the ends.

Tension.

To insure a constant and even tension, it is essential that the counterweights should be always free and floating, and owing to the amount of stretch in hemp cored ropes, taking-up gear must also be allowed for. Fig. 20 shows an arrangement which combines a multiplying and taking-up device. The two sheaves at A are attached to the tension trolley, the winch and differential drum being mounted on an independent frame placed over the tension

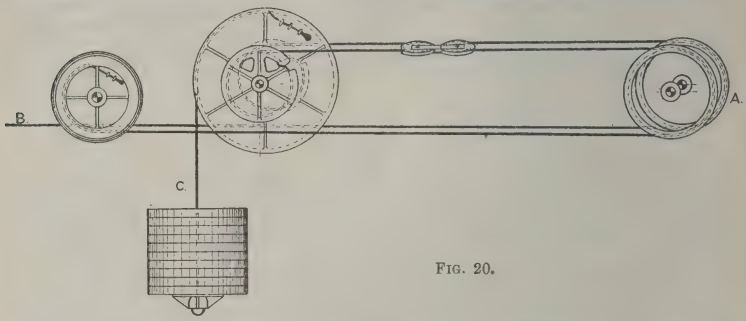


FIG. 20.

pit: one end of the rope B is anchored, the other being made fast to the tension winch drum. By this arrangement the resultant pull at A is four times the dead weight applied at C, and the weights can always be kept in suspension without the necessity of a deep pit, by taking in the slack with the winch.

Spans.

The distance between standards is dependent on the configuration of the ground, but over undulating country the average distance is approximately 330 ft. for lines of up to an hourly capacity of 60 tons. On a ropeway over the Andes, having a total length of 46 miles, several spans are being worked of 2,800 ft., though the longest recorded span on the single rope system is 3,600 ft.

BI-CABLE SYSTEM.*

Carrying Ropes.

Carrying ropes may be divided into two main classes, 'spiral,' fig. 21, and 'locked coil,' fig. 22. The main advantage of the spiral type is its cheapness, and in lines transporting a small tonnage

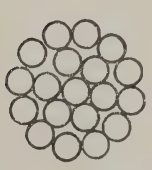


FIG. 21.

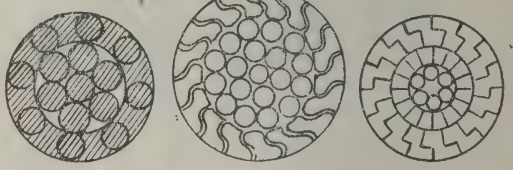


FIG. 22.

per hour it will generally answer its purpose. Ropes of this type should consist of 19 wires in ropes up to 1 in. diameter and of 37 wires in ropes up to 1½ in. diameter. With this latter the individual wires have a diameter of about ·205 in., which is about the limit to ensure perfect homogeneity of the material. Above 1½ in. diameter, locked coil ropes should invariably be used.

Locked coil ropes, fig. 22, are of two types, the special locked, *a*, and the full locked, *b* and *c*. The former consists of a spiral core surrounded by a layer of round wires kept apart by wires

* Abstract, by permission, from 'The Engineer,' July 23 1915.

drawn to a special section. This rope is sold at a medium price between plain spiral rope and full locked coil. The surface of the special locked rope is not perfectly smooth, small interstices occurring between the wires. The full locked coil, on the other hand, presents a perfectly cylindrical surface to the passage of the cars. The second type of full locked construction—shown at *c*—is particularly useful for very heavy carriers, as, owing to the rope having an inner layer of tapered section wires, the crushing and distorting effect of the load when passing over the saddles on which the rope is supported is minimised. In addition to the great advantage of offering a smooth surface to the wheels of the cars (with the result that the wires may be of a lower breaking stress than with spiral ropes), the locked coil ropes possess the great advantage that, should by any chance one of the individual wires break, it is held in place by the neighbouring wires, and does not spring from the texture of the rope, as is the case with the spiral construction. This springing of the wires is often the cause of accidents, as the cars run against the outstanding wire, and are thrown off the line.

Fixture of Ropes.

The ropes are anchored at one end of their length, and some form of tensioning device applied at the other end. This generally takes the form of a hanging weight, which may generally be from one-quarter to one-fifth of the total breaking strength of the rope. A factor of safety of 4·5 is a good medium. It has been proved that for spiral ropes a breaking stress of 95 tons per square inch, and for the locked coil ropes 65 tons per square inch, give the best results. When calculating the tension weight required, the fact must be taken into account, that should the weight be situated on a lower level than the anchorage, the weight of the rope itself acts as a tensioning factor.

For fixing the ends of the rope a satisfactory arrangement is to employ the ring wedge coupling. In this anchorage—shown in section in fig. 23—the single wires are kept apart by small nail-like

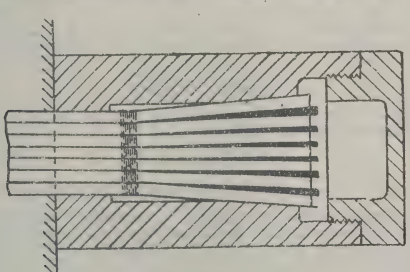


FIG. 23.

wedges, and the layers by means of ring wedges made in halves. These wedges are driven in and then a cap is screwed home, firmly locking them in place and entirely preventing any chance of the wires pulling out.

The same form of coupling, only made tapered at both ends, fig. 24, may be used for joining the various lengths of rope along the line.



FIG. 24

The distance apart of the tensioning weights varies according to the carrying capacity of the line, weight of carriers, number of long spans occurring, etc. A good rule is not to exceed a length of 1½ mile between anchorage and tensioning device, although on level lines, with a small capacity, distances up to 2 miles may be taken.

Another method of tensioning is by means of buffer springs at either end of the rope, but this system is only applicable to short lines with light loads.

Diameter of Carrying Ropes.

It has been proved by experience that most trouble is caused by breaking due to bending near the saddles, and for this reason in order to obtain the diameter of the carrying rope

required, many firms employ formulæ based on stresses due to bending. A formula often used is :—

$$\text{Weight per metre of ropes} = \frac{0{\cdot}85}{100}\left\{(\text{weight of carrier}) + \Big((\text{distance between carriers in metres}) \times (\text{weight of traction rope per metre}).\Big)\right\}$$

This is for spiral construction ropes. With locked coil ropes the factor 0·85 becomes 1·05. This works well for small lines up to about 50 tons capacity hourly. For each additional 5 tons, 0·05 should be added to the factor 0·85. The following table shows the various diameters of a special locked rope for various loads and traction ropes :—

(Two-Wheeled Carriages.)

Dia. of Hauling Rope.	Weight of Loads in Cwts.									
	3	4	5	6	8	10	16	20	24	28
In.	In.	In.	In.	In.	In.	In.	In.	In.	In.	Ins.
$\frac{1}{2}$	$\frac{13}{16}$	$\frac{7}{8}$	$\frac{15}{16}$	1	$1\frac{1}{8}$	$1\frac{3}{16}$	—	—	—	—
$\frac{9}{16}$	$\frac{13}{16}$	$\frac{15}{16}$	$\frac{15}{16}$	$1\frac{1}{16}$	$1\frac{1}{8}$	$1\frac{1}{4}$	—	—	—	—
$\frac{5}{8}$	$\frac{7}{8}$	$\frac{15}{16}$	1	$1\frac{1}{16}$	$1\frac{3}{16}$	$1\frac{1}{4}$	$1\frac{1}{2}$	—	—	—
$\frac{11}{16}$	$\frac{15}{16}$	$\frac{15}{16}$	$1\frac{1}{16}$	$1\frac{1}{16}$	$1\frac{3}{16}$	$1\frac{1}{4}$	$1\frac{5}{8}$	—	—	—
$\frac{3}{4}$	$\frac{15}{16}$	$1\frac{1}{16}$	$1\frac{1}{16}$	$1\frac{1}{8}$	$1\frac{1}{4}$	$1\frac{5}{16}$	$1\frac{9}{16}$	$1\frac{11}{16}$	$1\frac{13}{16}$	—
$\frac{13}{16}$	—	$1\frac{1}{16}$	$1\frac{1}{8}$	$1\frac{1}{8}$	$1\frac{1}{4}$	$1\frac{3}{8}$	$1\frac{9}{16}$	$1\frac{3}{4}$	$1\frac{7}{8}$	2
$\frac{7}{8}$	—	—	$1\frac{3}{16}$	$1\frac{3}{16}$	$1\frac{5}{16}$	$1\frac{3}{8}$	$1\frac{5}{8}$	$1\frac{3}{4}$	$1\frac{7}{8}$	2

Design of Ropeway.

To lay out the profile for a ropeway, when the line is laid out on paper, the curve of the rope may be obtained and set out from the formula—

$$\text{Dip} = L^2\ W/8\ T,$$

where,

$$L = \text{span};\ W = \text{weight per unit length};\ 8 = \text{constant};\ T = \text{tension},$$

and then the supporting trestles placed accordingly. It sometimes happens, however, in practice that when the rope is fully tensioned it 'floats' or rises up from the supporting tower, owing perhaps to a minute error in the drawn profile. To avoid this, some Continental makers employ a so-called factor of safety for the dip—that is, the denominator 8T is multiplied by a constant —the formula giving, as a result, a dip smaller than the actual. It will be obvious that if the curve with the dip so obtained is set out and the trestles drawn up to it, they will be slightly higher than need actually be the case, thus avoiding any possibility of 'floating' when the line is erected. This factor of safety may be 1·5 for spiral ropes and 1·1 for locked coil ropes.

There has been of late years an increasing tendency to employ saddles (upon which the rope is supported at the trestles) which are pivoted at the centre, and can consequently adapt themselves to the varying gradients of the rope, and there is little doubt that this type when properly designed, and well greased to allow of play in the rope, gives full satisfaction. In designing the shoes a good medium value for the pressure of the rope is 250 lbs. pressure per square inch of projected area of the rope. This is for locked coil ropes; for spiral ropes a little less should be taken.

It sometimes happens that at a trestle, on either side of which are long free spans, there is a heavy downward reaction of the hauling rope, which, when the carrier passes over the saddle, produces a heavier pressure on the rope than that for which it was calculated. In this case the rope is protected by means of a steel plate cap over which the carrier runs, thereby removing the pressure from the rope. There is a difference of opinion as to when these caps should be employed, but it may safely be said that their use is to be recommended where the hauling rope reaction exceeds 450 lbs.

Hauling Ropes.

The *traction* or *hauling rope*, by means of which the carriers are propelled, is invariably a stranded rope with a hemp core, the flexibility depending on the size of the individual wires in the strands and the breaking stress of the material. This rope is endless and in constant motion. In the general case it passes round a driving sheave at one end of the line and round a surging or tension sheave at the other end. In some cases this plan may be varied, as, for instance, when the carriers are required to pass automatically round a large sheave at one end station. In this case no manual attention is required at this station and the driving and tensioning sheaves are combined in the station at the opposite end of the line. Whenever possible

the driving should take place at the upper and the tensioning at the lower end of the line. In this way the accumulative tension in the rope due to its own weight is utilised as a tensioning agent, whereas, were the tensioning to take place at the upper end, an additional amount of weight would be required to counterbalance the weight of the rope. The amount of the tensioning weight should be such as to give sufficient grip round the driving sheave to ensure perfect driving when the full load is on the line.

Diameter of Hauling Ropes.

The diameter of the hauling rope depends upon the highest tension occurring in it

$$\text{Tension of rope in lbs.} = \left\{\text{Initial tension} + \left(\frac{W}{S} \times H\right) + (w \times H)\right\} + \left\{(W \times \mu_1 \times N) + (L \times \mu_2 \times w) + (R \times 2)\right\},$$

where,

W=weight of full carrier; S=spacing of carriers in feet; H=difference in level between stations in feet; w=weight per foot of traction rope; μ_1=coefficient of friction of cars; μ_2=coefficient of friction of traction rope; L=length of line in feet; N=number of carriers on one side of line; R=number of supporting rollers on one side of line.

This tension if multiplied by the factor of safety—6 to 8—and divided by the breaking stress, gives the area of the rope necessary. This is for the general case with the drive at the upper terminal and the loads ascending. When the loads are descending, the plus sign in the centre of the formula becomes minus. To obtain the tension when the ropeway is just put into work the second half of the formula should be doubled.

The usual breaking stresses of traction ropes are from 80 to 115 tons per square inch. The surge of the hauling rope tension sheave depends upon the distance apart of the carriers, whether long spans occur in the line, etc. As an average, 6 ft. play may be allowed for to commence with, and then an additional 12 ft. for each mile of length. In some cases in long lines it is necessary to split up the line into sections to avoid excessive tensions occurring.

Driving Power.

$$\text{Power in ft. lbs.} = \left\{\left(W_1 \times W_2 \times \mu_1 \times \frac{N}{2} \times V\right) + (w \times 2L \times \mu_2 \times V) + (2R \times V) + (F)\right\} + \text{or} - \text{theoretical power},$$

where

W_1=weight of full carrier; W_2=weight of empty carrier; μ_1=coefficient of friction for cars; N=total number of cars on line; V=velocity in feet per minute of cars; w=weight per foot of traction rope; L=length of line in feet; μ_2=coefficient of friction for traction rope; R=number of supporting pulleys; F=power required for station friction.

The first four factors give the power necessary to overcome friction, and the theoretical power required or developed depends upon whether the loads are ascending or descending. The factor for station friction varies greatly for different lines, and is solely a matter of experience, although 0·02 of the total weight of the moving parts in the stations multiplied by the speed may be taken as a good mean.

Carriers.

There are two kinds of carriers in general use, those employing screw grips and those with lever grips. These may again be divided into sections, the overtype and the undertype grips. In the former, the hauling rope is attached to the carrier or running head at a point above, and in the latter at a point below the carrying rope.

The main advantage of the overtype grip is that the length of the stations is shorter than with the undertype grip, as the hauling rope may be led in and out of the jaws without interfering with the shunt rails. In the case of lever grips the overtype is generally the cheaper, and on lines containing no steep gradients can often be employed with advantage. Further, it may be more easily adapted for taking curves in both directions than the undertype. The overtype grip has, however, several great disadvantages. Chief amongst these is the fact that when ascending steep gradients the traction rope reaction falls outside the wheel base, tending to tip the whole running head, a tendency which may not be counterbalanced by the weight of the carrier, with the consequence that the whole apparatus leaves the line. Again, owing to the fact that the centre line of the hauling rope must fall outside the centre line of the carrying rope to avoid any entangling, there is a decided tendency for the carrier to tip sideways as soon as a heavy hauling rope reaction occurs, a tendency which is very detrimental to the perfect working of the line when it is required to discharge the contents of the carrier automatically whilst the carriage is on the open track. These defects may be remedied by having the hauling rope directly below the carrying rope, i.e., using an undertype grip. Practically the only defect

of this type is that the stations are generally longer than with the overtype grip, thus involving extra structural work. Even this may be overcome by employing an undertype grip in which the jaws open downwards instead of upwards, as is usual.

The speed at which the carriers should be run depends upon whether it is necessary for them to be hauled automatically round curve or return sheaves by the traction rope. The following figures represent good practice :—

Straight lines	400–450 ft. p.m.
Curves up to about 45° change of direction	Undertype up to 400 ft. p.m. Overtype „ 300 ft. p.m.
With automatic haul-round—	
Sheave, 20 ft. dia.	Undertype, 350 ft. p.m. Overtype, 300 ft. p.m.
Sheave, 16 ft. dia.	Undertype, 300 ft. p.m. Overtype, 250 ft. p.m.
Sheave, 12 ft. dia	Undertype, 200 ft. p.m. Overtype, 150 ft. p.m.

The running wheels should be of high quality cast steel, the diameter depending on the load and type of rope, larger diameter wheels being employed with spiral ropes than with locked coil. The runner pins should be self-oiling. The following table gives some diameters of wheels for varying loads, carriers with two wheels being employed :—

Weight of load and carrier, cwts.	Diameter of wheel, ins.
14	8
30	10
40	12

Screw Grips.

There are two distinct main classes of screw grip, in the first of which the grip is operated by a lever and strikers in the stations. In the second the grip is operated by the weight of the carrier and load. The best example of the former is shown in fig. 25. There are two jaws—(*a*) the movable and (*b*) the fixed. The movable jaw is actuated by a shaft carrying two screws, one a rapid thread and the other a fine thread. This shaft is turned by the lever C. The action of the grip is as follows :—On the lever C being turned over, the rapid thread operates and the movable jaw quickly approaches the fixed jaw until the rope is just gripped. The fine thread now comes into action and applies the necessary force to grip the rope firmly. To unlock the

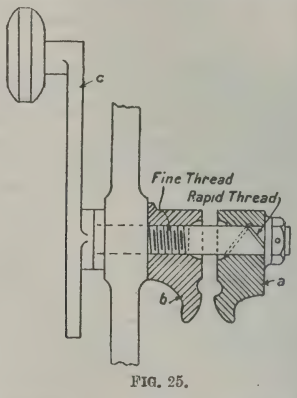


FIG. 25.

grip the reverse action takes place. The lever C is actuated at the stations by strikers constructed of angle irons.

In the other form of screw grip, in which the pressure is obtained from the weight of the carrier and load, the action is the same, the necessary turning moment being applied to the screw by hanging the carrier at the end of the lever arm. The grip is opened to allow of the rope entering or leaving, by means of rails, generally formed of angle irons, which depress small pulleys fixed at the end of the lever arm opposite to that on which the carrier is hung, thus raising the latter and thereby opening the jaws. It has been found in practice that the position of this lever arm should not be less than 35° to 40° to the vertical, to allow of easy depression of the rollers.

Lever Grips.

One of the best known Continental types is that shown in fig. 26. In this grip the pressure is applied by the weight of the carrier and load acting through a simple system of levers to give a multiplied pressure on the jaws. The grip is released by lifting the load, which is accomplished by means of small rollers running on to rails in the stations. Another type of grip—the

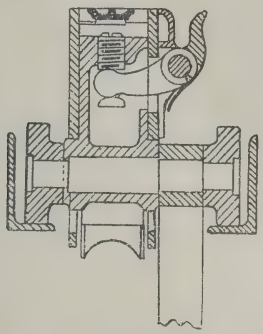


FIG. 26.

inclined plane type—is illustrated in fig. 27. The carrier and load are attached to a hanger having at its upper end a curved slot. This slot engages with a circular pin attached to the movable jaw. The downward pull of the hanger draws in this pin and with it the movable jaw, thus closing it upon the rope. When the pin is in the upper part of the slot the grip is absolutely locked, as no amount of upward pull of the rope can force the jaws apart. The grip is released

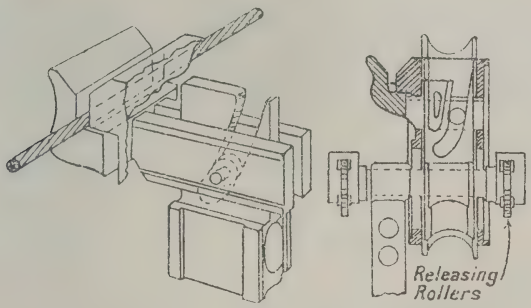


FIG. 27.

in the stations in the same manner as the type shown in fig. 26. In practice this form of grip has been found extremely simple and efficient.

In the matter of taking curves automatically in both directions, the advantage lies with the lever type of grip. In cost the latter generally has a great advantage. A ropeway, with lever grips, carrying two-ton loads on an incline of 86 per cent., is being used for carrying timber in South-West Africa.

*Costs.**

The following tables of prime and working costs for ropeways represent the standard amounts for plants possessing no peculiar complications.

* The figures given are those current some time prior to the war.

Prime Cost of Plant with Structures in Steel

Capacity in Tons per Hour.	Length of Line in Miles.			
	½	1	2	5
	£	£	£	£
5	1,900	2,000	3,300	6,900
10	2,100	2,300	3,650	7,400
20	2,350	2,600	3,900	8,000
40	2,500	2,870	5,000	10,500
60	2,850	3,200	5,700	11,900
80	3,100	3,500	6,300	13,100

The above prices are reckoned on the basis of employing spiral construction ropes up to 20 tons capacity and locked coil ropes for 40 to 80 tons capacity, and represent the total cost of the plant erected. For lengths above 5 miles a proportional cost may be taken.

Working Costs per Day.

Length in Miles.	Capacity per Day in Tons.					
	50	100	200	400	800	1,000
	s. d.	s. d.	s. d.	s. d.	s. d.	s. d.
½	17 6	21 0	25 0	32 0	42 4	48 0
1	19 5	24 0	28 10	37 7	52 0	58 5
2	26 6	31 6	36 4	49 7	68 10	76 10
5	45 7	51 0	61 0	83 3	126 0	156 10

The above costs are inclusive of depreciation, but exclusive of the cost of driving, this being so different in each case, depending on difference of height between stations, etc., that it is impossible to standardise, and it must therefore be reckoned as an extra to the above for each separate plant.

Fixed Clip Single Rope System.

This type of ropeway is only applicable for light capacities, and is used largely on plantations and for the transport of valuable ores, where comparatively small quantities are handled.

The carrier head, fig. 28, is permanently attached to the rope by means of a spring steel strap, and is designed in such a way that it can pass freely over trestle sheaves, under depression wheels and round the terminals, without being detached from the rope. As both rope and carriers are in constant motion, loading has to be done by hand, or by means of a travelling hopper, which is usually hung from overhead rails at the terminal. The terminals are extremely simple and

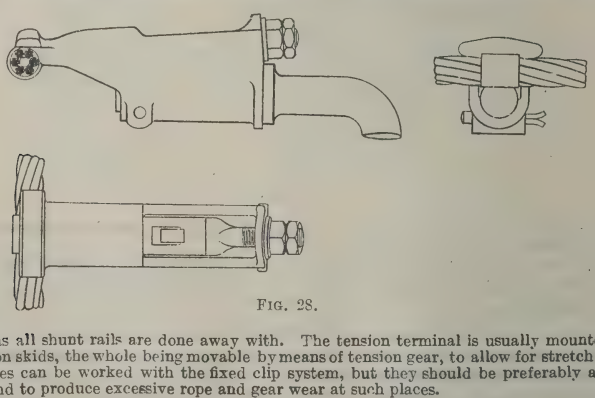


Fig. 28.

compact, as all shunt rails are done away with. The tension terminal is usually mounted on a trolley or on skids, the whole being movable by means of tension gear, to allow for stretch of rope, etc. Angles can be worked with the fixed clip system, but they should be preferably avoided, as they tend to produce excessive rope and gear wear at such places.

This type of line is run at a slow speed, namely, about 200 ft. per minute, and the only

advantages it can claim are its simplicity, adaptability to steep grades, and its low prime cost when light capacities and moderate lengths have to be dealt with.

Jig-Back or To-and-Fro.

This type of ropeway is useful for short distances, and is operated with a pair of carriers that travel in reverse directions and are loaded or brought to rest alternatively at the opposite stations, but which do not pass round the terminals: it is, therefore, intermittent in its action, and the direction of travel is reversed after each journey. Where loads are to be carried which are heavy individually in relation to the capacity, and where the distance is short, the 'To-and-Fro System' is particularly applicable. A high carrier and rope velocity may be adopted during the run, especially where a clear span occurs between terminals, and where there are no intermediate trestles. These installations may be on the 'Monocable' or 'Bi-cable' principle, and in either case the moving rope is clamped to the carriers, and is not usually disconnected from them at the terminals.

It should be mentioned that, up to the present, the 'To-and-Fro' ropeway is the only system that is used for regular passenger traffic, as the carriers lend themselves to the adoption of a safety grip used in conjunction with an auxiliary standing rope, but with such appliances these installations are very costly and present mechanical difficulties on lines of any length.

The following table, giving a rough idea of the capabilities of the various systems mentioned, shows the maximum lengths, capacities, and loads carried on various lines at present working or in course of construction:—

System.	Present Maximum Lengths.	Present Maximum Hourly Capacity.	Present Maximum Individual Load.
	Yards.	Tons.	Tons.
Monocable .	80,196	200	$1\frac{1}{2}$
Bi-cable .	38,800	250	2
Fixed Clip .	2,330	8	4 cwts.
To-and-Fro .	1,850	Passengers' weight unknown.	17 tons.

CONVEYORS.

(Contributed by Professor John Goodman, M.Inst.C.E.)

Belt Conveyors.

The horse-power required to drive belt conveyors varies so much with the design and spacing of the idlers, and the local conditions, that no accurate rules applicable to all cases can be given.

The following formula may be found useful for the average case:—

W = total weight of material delivered per minute; W_1 = total weight of belt; S = speed of belt in feet per minute; H.P. = horse-power: W_2 = maximum weight of material on belt at any one time; H = total height to which material is elevated by conveyor.

$$\text{H.P.} = \frac{(0{\cdot}15\ W_1 + 0{\cdot}07\ W_2)\ S + H\ W}{33000}.$$

An allowance of from 4 per cent. to 6 per cent. should be made for each tripper, and all other unusual elements taken into consideration. (*E. J. Haddick.*)

A belt 30 ins. wide, made up of eight plies of cotton duck faced and fitted with rubber, is known to have elevated 2,000,000 tons of coal at a South African Colony, while working at a speed of 460 ft. per min. The best performance was 3,000 tons in ten hours; no guide rollers were used.

The life of a 48-in. belt should be not less than 1,000,000 tons of coal carried. The ultimate tensile strength of a 6-ply belt, 24 ins. wide, will be about 25 tons; such a belt would work well on a conveyor when stressed to 2 tons by the tension load and drive. A rubber and fabric belt 30 ins. wide by 2,000 ft. in length, working on a conveyor nearly 1,000 ft. long, at a speed of 350 ft. per min., and loading coal at the rate of 200 tons per hour, will stand a drive of 60 h.p. when using tandem pulleys, without unduly stressing the belt. A belt 60 ins. wide, capable of carrying 3,000 tons of iron ore per hour, is quite a practical proposition.

The quality of rubber used on the working face of a belt should be capable of stretching three times its length, 3 to 5 ins., before breaking, and the belt will give the best results if in a flexible condition with the rubber rendered not too hard by over-vulcanisation. The adhesion

of the rubber face to the canvas should require a force of not less than 20 lbs. applied for one minute to separate 1 sq. in. The 'frictioning' between the layers of canvas should require a force of not less than 16 lbs. for the same purpose. The best speed for belt conveyors is from 300 ft. per min. for smaller sizes, up to 500 ft. for the larger. The speed should not be less than 300 ft., because the trajectory of the load, after leaving the belt at lesser speeds, falls too rapidly towards the vertical to ensure the whole of the stream being discharged clear of the head pulley. On the other hand, with speeds exceeding 500 ft. per min., it is difficult to deliver the load to the belt without serious abrasion.

The angle of an inclined belt should flatten gradually into the horizontal from 5 to 15 ft. (according to width) before reaching the feed from the hopper.

All inclined conveyors should be driven through worm-gearing to overcome any tendency of the belt to run back when stopped in an overloaded condition.

(*H. J. Smith*, '*The Mechanical Loading of Ships*,' *The Inst. Mech. Eng.*, *No.* 1, 1921.)

Notes on Belt Conveyors.

For conveying materials continuously over long distances in a horizontal or inclined direction band conveyors are usually employed.

Single conveyors are made up to 48 ins. in width and over 1,000 ft. in length. They can be employed for handling almost any class of material excepting those which are hot or sticky.

Solid woven cotton belts are lowest in first cost, but they are not suitable for continuous or heavy duties, because sharp substances soon cut the fabric, and, moreover, they are not waterproof and are very sensitive to climatic changes, which cause them to stretch and contract abnormally.

Belts treated with bituminous solutions are partially waterproof and resist wear much better but have the disadvantage of becoming hard, and, moreover, they will not accommodate themselves to the troughing idlers.

Balata belts, when manufactured with the true vegetable gum, are satisfactory for work in the open, as they resist damp better than any other type. The best quality belts are durable, and easily conform to the troughing idlers.

Vulcanised rubber belts of best quality, although high in first cost, are the best and ultimately the cheapest for conveying hard, heavy, or sharp materials. The cotton duck, which forms the basis, provides great tensile strength, whilst the rubber cover is the best-known material for resisting wear and abrasion. The cover on the carrying side should be at least $\frac{1}{16}$ in. thick.

Steel belts of Swedish manufacture can be obtained from 8 ins. to 16 ins. wide, and from 0·03 in. to 0·04 in. thickness. They are satisfactory for carrying wood blocks or briquettes, but are not recommended for coal, ores, or grain.

Woven wire belts of various types are used for special purposes, as for colliery picking belts, where it is desired to extract dust during conveyance.

The following table, taken from the *Engineering Magazine*, March 1909, shows the comparative values of different belts and materials to resist abrasion. Sample strips were submitted to equal sand-blast, and the volume of material worn away was measured.

Rubber belt	1·0	Woven cotton belt (high grade)	6·5
Rolled steel bar	1·5	Stitched duck (,, ,,)	8·0
Cast iron	3·5	Woven cotton belt (low grade)	9·0 to 15·0
Balata belt	5·0		

The life which may be expected from a best quality rubber belt when handling coal is given by the following expression:

$$N = 3W_b^2L$$

where,
N = the number of tons which a rubber belt may be expected to convey before it is worn out.
L = length of conveyor centres in feet.
W_b = width of belt in inches.

When estimating the life of belts made of other materials, the result obtained by the above expression must be divided by the corresponding figure in the table.

Belt Joints.—For short conveyors, endless belts may be used, but owing to difficulty of fixing they are not recommended for long conveyors. The best fastener for heavy duty is made of thin steel plates in the form of a hinge, with pins of hard copper, and used in combination with leather safes for the ends of the belt. The fasteners are secured by copper rivets.

For short and medium conveyors a satisfactory joint can be made with '**Alligator**' fasteners.

Intermediate Idlers usually consist of C.I. pulleys, 5 ins. or 6 ins. diameter, mounted on hollow shafts fixed in C.I. brackets and provided with grease lubricators.

Table I. gives the thickness of belt and pitch of idlers recommended.

TABLE I.

Width of Band.	Effective Cross-section of Material carried in Sq. Ft.		Largest Pieces Belt will carry.	Ply.	Pitch of Idlers.	
Inches.	Flat.	Troughed.	Inches.		Ft. Ins.	Ft. Ins.
12	0·04	0·09	$2\frac{1}{2}$ cubes	3 to 4	5 6 to	6 0
16	0·07	0·15	$3\frac{1}{2}$,,	4 ,, 5	5 0 ,,	6 0
18	0·09	0·19	4 ,,	4 ,, 5	4 6 ,,	5 6
20	0·12	0·22	5 ,,	4 ,, 6	4 6 ,,	5 6
24	0·16	0·34	$6\frac{3}{4}$,,	5 ,, 7	4 6 ,,	5 6
30	0·27	0·55	10 ,,	6 ,, 8	4 0 ,,	5 0

Terminal drums should have a crowned face 3 ins. wider than the belt, and the diameter should be not less than 5 times the number of plies in the belt.

The driven terminal should be mounted on a carriage controlled by weights to automatically take up any belt stretch.

The usual speeds of conveyors when handling coal, ore, broken stone, etc., are from 250 to 350 ft. per minute.

Belts are usually carried on troughing idlers for the above-mentioned materials.

Speed for handling grain, 400 ft. to 600 ft. per minute. Grain containing chaff should run at the lower speed.

Grain bands usually run on flat idlers.

The capacity in cubic feet per minute may be taken from Table I. by multiplying the effective cross-section of material carried by the speed of the belt in feet per minute.

The pitch of the idlers for the return belt should be from 9 ft. to 12 ft., according to the weight of the belt.

The power required depends on workmanship, diameter of idlers, and other factors.

If fully loaded and the conditions are good, the following expression gives the horse-power required for band conveyors:

$$\text{H.P.} = \frac{(0{\cdot}15\text{B} + 0{\cdot}07\text{M})\text{S} + \text{HW}}{33{,}000};$$

where,

B = weight of belt in pounds; M = weight of material on belt at any time in pounds; S = speed in feet per minute; H = height elevated in feet; W = weight of material delivered per minute in pounds.

DRAG BAR OR SCRAPER CONVEYORS.

These take the form of a wide chain travelling in a fixed trough, the material being dragged along by the chain bars. Considerable horse-power is required to drive this type, on account of the

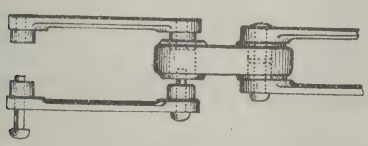


FIG. 29.

friction of the material and chain in the trough. Even with this fault the type is largely used where simplicity and few working parts are of premier importance. Examples are the 'Blackett' Conveyor, used at the coal face in collieries. The 'Bennis' Conveyor, much used in boiler stoking plants, and the 'Jenkins' 'DB' Patent Conveyor, which is principally used in gasworks for conveying hot or cold coke. It is also used for handling ashes, gravel, etc.

The conditions met with in handling coke are probably more severe than with any other material. First, because the coke reaches the trough at a temperature up to 1,700° F.;

and, secondly, the coke is of a hard cutting nature, and contains a quantity of fine particles which work into the joints. Lubricants cannot be used, and finally the conveyor is in use night and day all the year round. Yet these chains frequently have a life of from three to four years, and convey up to 130,000 tons of material.

The 'DB' Conveyor consists of a special double chain connected together with cross-bars integral with special links at intervals of 2 ft. 1½ ins., and in widths from 12 ins. to 36 ins. or more. The detail of the chain is shown in fig. 29, and as used with a trough for hot coke, fig. 30.

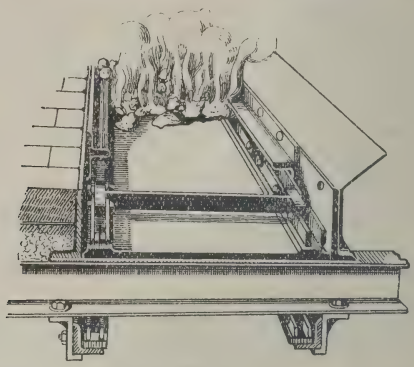


FIG. 30.

It will be noticed that special short links are used alternately with long narrow links. Only the short links bear on the trough. The usual speed of such a conveyor is from 40 to 50 ft. per minute.

A trough 2 ft. 6 ins. wide, 7 ins. deep, will convey 20 tons of coke per hour and consume about 1 h.p. per 33 ft. of horizontal length.

The conveyor will work satisfactorily on inclines up to 33°, and with special cross-bars up to 37°.

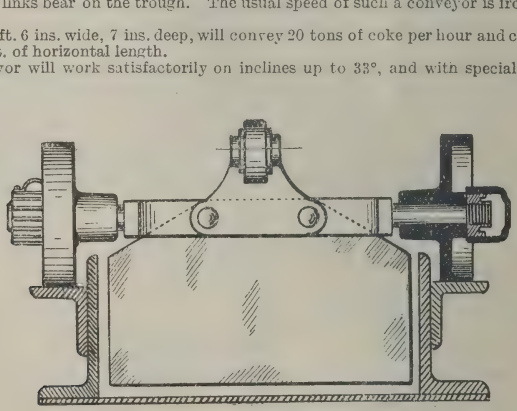


FIG. 31.

The longest single conveyor installed is 350 ft. long, on the horizontal, with the addition of 60 ft. inclined at 30°.

The power required to drive this conveyor fully loaded is 14 b.h.p.

Scraper Conveyors are mostly used for handling coal when it is desired to discharge at short intervals and when dealing with quantities of from 20 to 40 tons per hour up to a maximum length of about 200 ft. For lengths beyond this it is better to use a Pushplate Conveyor, on account of the power required to drive being so much less.

The longest 'DB' Scraper Conveyor installed is 231 ft. long, dealing with 40 tons per hour, and requires 16 h.p. when fully loaded.

Pushplate Conveyors.

These are in general use for conveying and delivering coal into storage hoppers. Conveyors of this type are superior to any other when it is desired to deliver coal at many intermediate points. For this purpose, outlets, with slide doors, are arranged in the trough where desired. Generally the chain is provided with special attachment links at intervals, which carry M.S. plates and axles fitted with C.I. rollers, and grease lubricators. The plates are kept clear of the trough so as to avoid any noise when working.

The usual speed is 100 to 120 ft. per minute, and as there is only the sliding friction between the coal and the trough the power taken is not excessive.

A typical Pushplate Conveyor is shown in section by fig. 31. For dealing with 25 tons of coal per hour the trough would be 15 ins. wide and 6 ins. deep. A single chain would be fitted with pushplates 17 ins. apart. The rollers would be grease lubricated, 6 ins. diameter and 4 ft. 3 ins. apart. A conveyor of this type, 250 ft. long, running at 120 ft. per minute, requires 5 b.h.p. to run empty, and 7 b.h.p. to run fully loaded.

Table II.—Pushplate Conveyor for Coal.

Size and Capacity in Tons per Hour.			
Width of Trough.	Pitch of Pushplates.	Depth of Trough.	Tons of Coal per Hour.
Inches.	Feet.	Inches.	
12	1·5	6	20
15	1·5	6	28
18	1·5	6	35
24	1·5	6	45

The following gives the horse-power of scraper and pushplate conveyors.

$$\text{H.P.} = \frac{KS(M + G)}{33{,}000},$$

where,
K = constant, say 0·37 for scraper and 0·13 for pushplate conveyor with rollers; S = speed in feet per minute; M = weight of material on conveyor at any one time in pounds; G = weight of moving parts of chain in pounds.

The friction of the driving gear must be added to the above.

Gravity Bucket Conveyors.

This type of conveyor is unique in the sense that one unit can transport vertically, horizontally, and at any intermediate angle, and for this reason they are much used in power-stations for elevating and storing coal in overhead bunkers.

The principle employed is a series of buckets mounted on steel spindles, which are connected to two endless chains at regular intervals, the ends of the spindles are provided with C.I. grease lubricated rollers for the purpose of travelling on horizontal rails or between inclined guides.

The buckets are suspended above their centre of gravity in such a manner that they always remain in an upright position until they are tilted by cams or levers provided for the purpose.

The corner guides for changing the direction of the chain should preferably consist of two sprocket wheels large enough in diameter to allow the buckets to swing clear of the shaft; one wheel should be keyed in place, and the other allowed to turn freely on the shaft between collars, so as to rectify any trouble that may arise should one chain stretch more than the other.

As the buckets are mounted on the chains with a space of an inch or more between, it is necessary to provide a special 'feeding device' for filling the buckets. Several types are in use, but probably the most popular is in the form of a drum having a circumference equal to at least five pitches of buckets. Outlets are arranged corresponding with the pitch, with blank plate between.

The drum is rotated by direct gear with the chain, and the material is fed through the centre. The blank plates prevent the material spilling between the buckets.

It is sometimes necessary to feed buckets at several points; in this case the filler is provided with travelling wheels to run on separate rails, and is rotated by a large sprocket wheel which engages with one of the bucket chains.

TABLE III.—SIZE AND CAPACITY OF G.B. BUCKET CONVEYORS FOR COAL.

Tons per Hour.	Pitch of Buckets.	Buckets.			Speed.
		Length.	Width.	Depth.	
	Inches.	Inches.	Inches.	Inches.	
30	21	22	16	9	45 ft. per minute
40	27	24	16	10	,, ,,
50	27	24	20	11	,, ,,
60	27	24	22	11	,, ,,
100	27	26	30	12	,, ,,

The following gives the horse-power required for gravity bucket conveyors:

$$\text{H.P.} = \frac{CH}{884} + \frac{S(W_m + W_c)}{180}$$

where,

C = capacity in tons per hour; H = height to be lifted in feet; S = speed in feet per minute; W_m = total weight of moving parts of conveyor in tons; W_c = total weight of coal in conveyor in tons.

Add for friction of gearing and motive power. (*John Goodman.*)

See also *Proceedings of the Inst. Mech. Engrs.*, No. 2, 1921.

PNEUMATIC COAL CONVEYING PLANT.

(King's Patents.)

A system of conveying coal on the pneumatic principle, which possesses a number of advantages over the ordinary systems of coal conveying by means of bucket elevators, grabs, etc., has recently been adopted with success. In this system the coal is handled on the suction principle, a vacuum being created by means of a reciprocating vacuum pump, which produces a vacuum in the whole of the pipe line, and draws the coal from the barge or other receptacle into a 'discharger' fixed over the bunker or coal store. This discharger is arranged with a special rotary valve at the bottom which permits the coal to be discharged whilst maintaining the vacuum in the system.


Fig. 32 shows a plant of this description which has been in operation for some time. The coal is brought alongside the power house in the barge 'A' and is elevated into an overhead bunker marked 'B.' The electrically-driven vacuum pump is marked 'C,' whilst 'D' is the 'discharger.' The first length of the coal suction pipe 'E' is flexible and fitted with a nozzle which can be moved about the barge to pick up the coal as required. The pipe between the discharger and vacuum pump marked 'F' is the vacuum pipe, and this pipe is provided with a dust collector 'G' which prevents any dust passing to the vacuum pump.

The vertical lift in the installation in question is 85 ft., whilst the vacuum required in the system from dry coal is from 6 ins. to 7 ins.


Since the apparatus as described was originally installed, an extension has been made to enable the coal to be sucked from carts on the land side of the power plant, whilst a further addition has been made for handling the ashes and flue dust.

The plant has a capacity of twenty tons per hour and the amount of power required when handling dry coal is from 30 to 35 b.h.p. It is advisable, however, to have an ample margin on the power, as more power is required when the coal is wet.

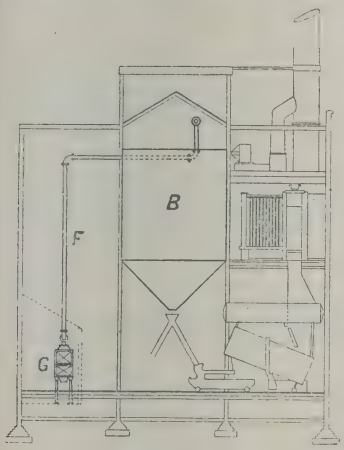
The pneumatic conveying plants are made in three capacities—namely, ten, twenty, and fifty tons per hour—and the plant is being handled by Messrs. Ashwell & Nesbit, Ltd., of London and Leicester, etc., in conjunction with Messrs. King & Co. Ltd., of Nailsworth, Glos.



Elevation YY.

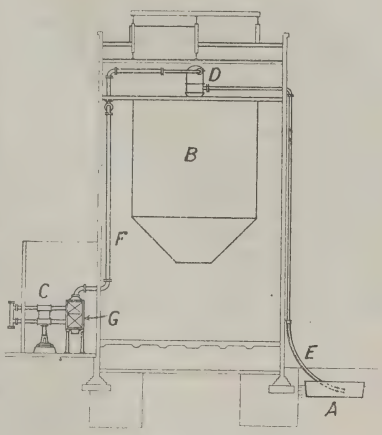

Elevation XX.

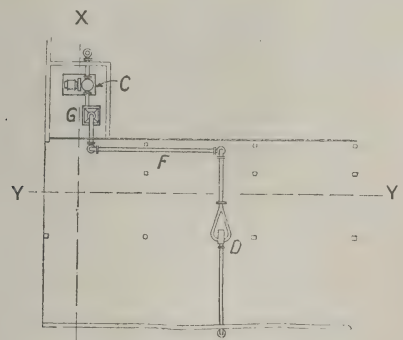

Plan.

FIG. 32.

Brake Linings.

FERODO APPLIED TO BRAKES.

Present-day high speeds and heavy loads require powerful and reliable brakes, these being especially necessary for modern lifting machinery. The friction coefficients of wood, leather, and metal (the materials generally used) are comparatively low, the values usually falling with heat and general working conditions; with the Ferodo lining on brakes (block, band, or disc type) the coefficient of friction increases as the temperature increases, the action is smooth

reliable and powerful, and reduces the wear and tear on the drums and gears. Ferodo fabric is readily fixed to a steel band, metal, or wood blocks. It is manufactured by *Ferodo, Ltd.*, Chapel-en-le-Frith.

For description of, and tests with, this material, see page 861.

Notes on Fabric Lining

A most important point to observe in regard to the use of fabric linings is that the blocks to be lined are first worn down so that they will make a true arc of contact, also that the fabric lining after being fitted is clear of the brake path at every point of its surface when not in action. In band-type brakes the same observations are essential, and an arrangement should be fitted whereby the top half of the band is kept well clear of the brake path by suitably arranged and powerful springs when idle.

Brake paths which are out of truth or have undue lateral play should be corrected, and the paths should be as smooth as possible. Given these conditions, experience proves that fabric linings are cheaper in the end as regards mere cost than materials which may cost little in themselves and are only costly in labour and renewal. In addition to the saving effected, there is improved efficiency, greater power, much sweeter action when engaging and disengaging, and greater durability.

In all brake paths the abutting edges should be tapered back a good 2 ins. to eliminate all possibility of any edge rising above the circumference of the path.

The manufacturers generally send out carefully printed instructions regarding fixing and applying, also as regards the correct material to use, and a little care and thought are all that are required to eliminate the possibility of failure.

SECTION XVIII

POWER TRANSMISSION

(Revised and amplified by Dempster Smith, M.Sc., M.I.Mech.E.)

PART I


BELTING—ROPE DRIVING—CLUTCHES (pp. 829-861)

PART II

CHAIN GEARING (pp. 863-870)

PART III

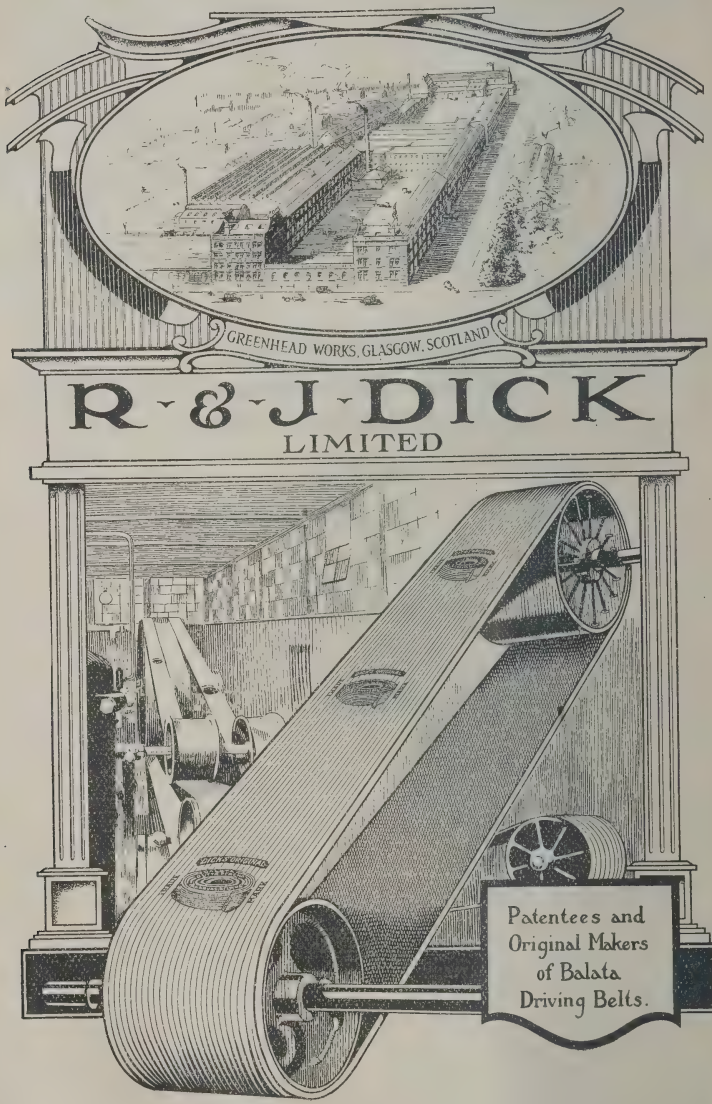TOOTH GEARING (pp. 871-894)


GREENHEAD WORKS, GLASGOW, SCOTLAND
R & J DICK
LIMITED
Patentees and
Original Makers
of Balata
Driving Belts.

SECTION XVIII

(Revised and amplified by Dempster Smith, M.Sc., M.I.Mech.E.)

PART I

BELTING—ROPE DRIVING—CLUTCHES.

BELTING.

Power Transmitted by Belting.

(*Richardson.*)

The following formula gives the power transmitted by any belt :—

$$H = \frac{(T - t)v}{33{,}000}.$$

Where

H = actual horse-power transmitted ; T = tension in lbs. on the pulling side of the belt ; t = tension in lbs. on the slack side of the belt ; v = speed of belt in feet per minute.

When a belt is doing its full work, T will be the greatest safe working tension that the belt will stand ; this is about 90 lbs. per inch of width for singles (more accurately 60 lbs. to 120 lbs., according to the thickness of the leather), and about 150 lbs. for doubles (135 lbs. for light and 160 lbs. for heavy doubles). In order that the belt shall do as much as possible, t must bear such a ratio to T that the belt just does not slip over the pulleys. In practice t varies from $\frac{1}{3}$ to $\frac{2}{3}$ of T, depending on the character of the surfaces of the belt and pulley, and on the fraction of the circumference of the pulley embraced by the belt ; $\frac{1}{2}$ of T will be a safe average value for t. Hence T − t will be on the average 45 lbs. for singles and 75 lbs. for doubles for every inch of width

Hence the following rule for finding the power that any given belt should transmit :—

Multiply the width of the belt in inches by 45 if single, by 75 if double ; multiply this again by the speed in feet per minute, and divide by 33,000 ; the quotient will be the number of actual horse-power the belt will transmit.

EXAMPLE 1.—Required the horse-power which a 5-in. single belt, running at 1,000 feet per minute, will transmit.

$$\frac{5 \times 45 \times 1{,}000}{33{,}000} = 7 \text{ horse-power (nearly).}$$

EXAMPLE 2.—What power can be transmitted by a 12-in. double, running at 1,500 feet per minute ?

$$\frac{12 \times 75 \times 1{,}500}{33{,}000} = 41 \text{ horse-power (nearly)}$$

EXAMPLE 3.—An example of the reverse kind: What width must a belt be to transmit 20 horse-power, the belt running at a speed of 2,500 feet per minute?

$$\frac{20 \times 33{,}000}{2{,}500 \times 45} = 6 \text{ ins. nearly, if single.} \qquad \frac{20 \times 33{,}000}{2{,}500 \times 75} = 3\tfrac{1}{2} \text{ ins., about, of double.}$$

The values given in the table are more accurately calculated, and hence do not exactly agree with the above examples.

The size of the pulleys or the number of square inches of contact between belt and pulleys has no effect on the power transmitted; that is to say, the same belt will have just as much grip, other things being equal, on 1-foot pulleys as on 4-foot pulleys. The fraction of the circumference of the pulley embraced by the belt, however, has an important effect on the friction between the two; that is to say, if the belt is in contact with the pulley for more than half the circumference of the latter it will get a better grip, and will therefore transmit more power than if in contact for less than half the circumference; hence the desirability, where possible, of making the pulling half of the belt the lower one, so that the slack upper side may sag down and lap further round the pulley.

The following table gives the number of horse-power which belts of various sizes should transmit. Allowance has been made for the loss of power at high speeds, due to the centrifugal force of the belt. This loss is negligible at low speeds, but increases with the velocity, amounting to about 10 per cent. at a speed of 3,000 feet per minute, and about 30 per cent. at 5,000 feet per minute; no advantage is gained by running a belt faster than 4,000 or 5,000 feet per minute.

Under very good conditions of working, belting will transmit up to 1¼ times the amounts given in the following table without being overstrained.

TABLE SHOWING HORSE-POWER TRANSMITTED BY LEATHER BELTS UNDER AVERAGE WORKING CONDITIONS.

Speed of Belt. Ft. per Min.	Width of 'Single Thickness' Belts (ins.).									
	1	2	3	4	5	6	7	8	9	10
500	0·67	1·4	2·2	3	3·7	4·5	5·2	5·9	6·7	7·4
600	0·81	1·7	2·6	3·6	4·5	5·4	6·3	7·2	8·1	9
700	0·93	2	3	4·1	5·2	6·2	7·3	8·3	9·2	10·4
800	1·1	2·2	3·5	4·7	5·9	7·1	8·3	9·4	11·6	11·8
900	1·2	2·5	3·9	5·4	6·7	8	9·4	10·7	12	13·4
1,000	1·3	2·8	4·3	5·8	7·3	8·8	10·2	11·7	13·1	14·6
1,500	2·0	4·1	6·3	9·5	10·8	13	15	17·3	19·4	21·6
2,000	2·6	5·5	6·7	11·4	14·3	17·1	20	22·8	25·7	28·6
2,500	3·2	6·8	10·4	14·2	17·7	21·2	25	28·4	32	35·4
3,000	3·8	8	12·3	16·8	21	25	29·5	33·5	38	42
3,500	4·3	9·2	14	19·2	24	29	34	38·5	43	48
4,000	4·8	10·4	16	21·8	27·2	32·5	38	43·5	49	54·2
4,500	5·4	11·4	17·5	24	30	36	42	48	54	60
5,000	6·0	12·5	19·3	26·5	33	40	46	53	60	66

Light 'double thickness' belts will transmit 30 per cent. more power than that given in the above table.

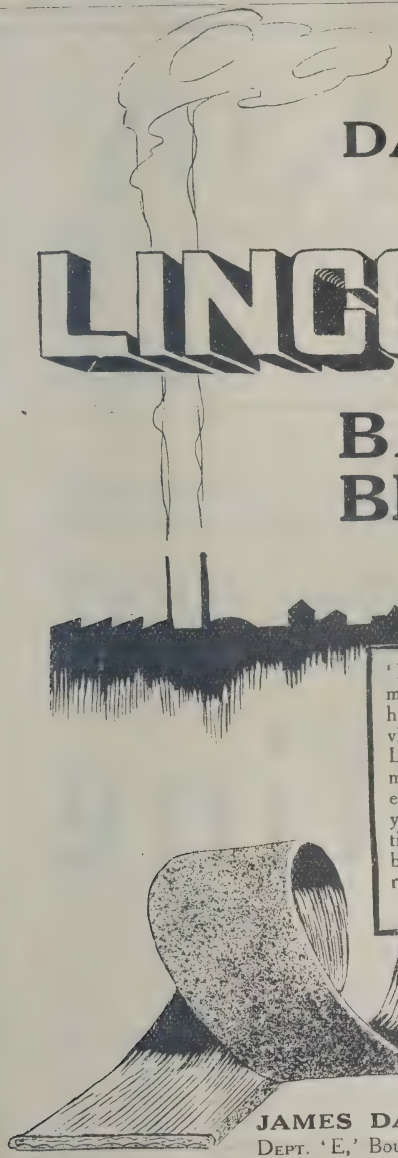
For ordinary 'double thickness' belts the values given in the table may be increased 50 per cent., whilst for extra heavy 'double thickness' belts the values given in the table may be increased 70 per cent.

For intermediate speeds, and widths of belt, the h.p. transmitted is proportional to the speed or width of belt.

DAWSON'S

LINCONA

BALATA BELTING



'LINCONA' Balata Belting is manufactured throughout from highest grade materials and provides at a **cost less** than that of Leather Belting a power transmitter of great strength and unique efficiency. A trial will convince you that 'Lincona' can save many times its cost in a very short time by the reliability of the service rendered and freedom from expensive Belt stoppages.

SOLE MAKERS:

JAMES DAWSON & SON, LTD.,
DEPT. 'E,' BOULTHAM WORKS - - LINCOLN.

F. 830

GANDY

The Oldest



The Cheapest

The BEST

Belting

— THE —

GANDY BELT MANUFACTURING Co. Ltd.

SEACOMBE, CHESHIRE, ENGLAND

Dick's Original Balata Belting.

Table showing the horse-power which each inch of width of Dick belting, from 3-ply to 10-ply, will transmit at the speeds given.

Speed of Belt per minute.	3 Ply.	4 Ply.	5 Ply.	6 Ply.	7 Ply.	8 Ply.	9 Ply.	10 Ply.
Ft.	h.p.	h.p.	h.p.	h.p.	h.p.	h.p.	h.p.	h.p.
500	0·60	0·90	1·21	1·51	1·81	2·12	2·42	2·71
750	0·90	1·36	1·81	2·27	2·72	3·18	3·63	4·08
1,000	1·21	1·81	2·42	3·03	3·63	4·24	4·84	5·44
1,250	1·51	2·27	3·03	3·79	4·55	5·30	6·06	6·82
1,500	1·81	2·72	3·63	4·55	5·45	6·36	7·27	8·17
1,750	2·12	3·18	4·24	5·30	6·36	7·42	8·48	9·54
2,000	2·42	3·63	4·85	6·06	7·27	8·48	9·70	10·90
2,250	2·72	4·09	5·45	6·82	8·18	9·54	10·90	12·27
2,500	3·03	4·54	6·06	7·58	9·10	10·60	12·12	13·64
2,750	3·33	4·99	6·66	8·34	10·00	11·66	13·32	14·99
3,000	3·63	5·44	7·26	9·10	10·90	12·72	14·52	16·34
3,250	3·93	5·90	7·87	9·85	11·81	13·78	15·74	17·71
3,500	4·24	6·36	8·48	10·60	12·72	14·84	17·96	19·08
3,750	4·54	6·81	9·09	11·36	13·63	15·90	18·18	20·44
4,000	4·84	7·27	9·70	12·12	14·54	16·96	19·40	21·81
4,250	5·15	7·72	10·30	12·88	15·45	18·02	20·60	23·17
4,500	5·45	8·18	10·90	13·64	16·36	19·08	21·80	24·54
4,750	5·75	8·63	11·51	14·40	17·28	20·14	23·02	25·91
5,000	6·06	9·08	12·12	15·16	18·20	21·20	24·24	27·28

N.B.—These calculations, which are based on the most conservative lines, are given for ordinary loads over pulleys of proper diameters; anything abnormal in a drive should be taken into account in specifying the belt required.

The following table is the 'Dick Equivalent' of the best quality of leather belt :—

Dick belt 3-ply equals 14 ozs. single leather.
" 4 " " 18 ozs. "
" 5 " " 26–28 ozs. double leather (up to 12 ins. wide).
" 6 " " 30–32 ozs. double leather (over 12 ins. wide).

(*R. & J. Dick, Ltd.*)

American Practice.

According to the following table (*American*) the horse-power transmitted increases with the speed up to 5,000 feet per minute.

Horse-Power Transmitted by Double Leather Belts.

Speed in Feet Per Minute.	Width of Belt in Inches.										
	4	6	8	10	12	14	16	18	20	22	24
	h.p.	h.p.	h.p.	h.p.	h.p.	h.p.	h.p.	h.p.	h.p.	h.p.	h.p.
400	2¾	4¼	5¾	7¼	8½	10	11½	14	14½	16	17½
600	4¼	6½	8¾	11	13	15	17½	19½	22	24	26
800	5½	8½	11½	14½	17½	20½	23	26	29	32	34½
1,000	7½	11	14½	18½	21½	25½	29	32½	36	40	41½
1,200	8½	13	17½	22	26	30½	34½	39	44	48	52½
1,500	10¾	16½	21¾	27½	32½	38	43½	49	54½	60	65½
1,800	13	19½	26	32¾	39	45½	52	59	65½	72	78½
2,000	14½	21¾	29	36¼	43½	50½	58	65½	72½	80	87
2,400	17½	26	34¾	44	52½	60½	69½	78½	88	96	105
2,800	20½	30½	40½	51	61	71	81	91½	102	112	122
3,000	21½	32½	43½	54½	65½	76	87½	98	108	120	131
3,500	25½	38	50¾	63½	76	89	101	114	127	140	153
4,000	29	43½	58½	72¾	87	101	116	131	145	160	174
4,500	32½	49	65	82	98	114	131	147	163	180	196
5,000	36½	54½	72¾	91	109	127	147	163	182	200	218

German Practice.

In Germany it is usual to allow a higher effective tension per inch of belt width with increase in the diameter of pulley and speed. The table given below is compiled by Herr C. Otto Gehrckens and represents his practice for the past few years :—

Safe Effective Tension per Inch of Width (*Gehrckens*).

Diam. of Pulley.	Velocity Feet per Min.											
	600		1,000		2,000		3,000		4,000		5,000	
Ft. Ins.	A.	B.	A.	B.	A.	B.	A.	B.	A.	B.	A.	B.
0 4	11	—	13·5	—	16·5	—	16·5	—	19·0	—	19·0	—
0 8	16·5	—	22	—	27·5	—	30·0	—	33	—	36·0	—
1 8	27·5	44	38·5	49·5	44	55	49·5	60·5	55	66	60·5	71·5
3 3	33	55	46·5	66	55	77	60·5	88	66	93·5	71·5	99
6 6	38·5	66	55	82·5	66	110	71·5	121	77	132	82·5	137·5

A. Single thickness belts. B. Double thickness belts.

Reddaway Belting.

Table showing Horse-power Transmitted by the 'Camel Hair' Belting.
(By permission of the Sole Manufacturers, *F. Reddaway & Co. Ltd., Manchester.*)

Vel. of Belt. Ft. per Min.	Width of Belt in Inches.												
	1	2	3	4	5	6	7	8	9	10	12	14	16
500	1·0	2·0	3·1	4·2	5·3	6·2	7·3	8·2	9·3	10·3	12·5	14·5	16·5
600	1·2	2·5	3·7	5·0	6·2	7·4	8·7	9·9	11·3	12·4	14·9	17·4	19·7
700	1·4	2·9	4·3	5·8	7·2	8·7	10·3	11·6	13·1	14·5	17·4	20·3	23·2
800	1·6	3·3	4·9	6·6	8·2	9·9	11·5	13·2	14·8	16·5	19·8	23·1	26·4
900	1·8	3·7	5·6	7·4	9·3	11·1	13·0	14·8	16·7	18·6	22·3	26·0	29·7
1,000	2·0	4·1	6·2	8·3	10·6	12·4	14·5	16·5	18·6	20·7	25·0	29·0	33·0
1,100	2·3	4·6	6·8	9·1	11·4	13·7	16·0	18·2	20·5	22·8	27·4	32·0	36·5
1,200	2·5	5·0	7·4	9·9	12·4	14·9	17·4	19·8	22·4	24·8	29·8	34·7	39·7
1,300	2·7	5·4	8·1	10·7	13·4	16·1	18·8	21·5	24·2	26·9	32·3	37·7	43·1
1,400	2·9	5·8	8·7	11·6	14·5	17·4	20·3	23·2	26·1	29·0	34·8	40·7	46·4
1,500	3·1	6·2	9·3	12·4	15·5	18·7	21·7	24·8	28·0	31·1	37·3	43·5	50·0
1,600	3·3	6·6	9·9	13·2	16·5	19·8	23·2	26·5	29·8	33·1	39·8	46·4	53·0
1,700	3·5	7·0	10·5	14·1	17·6	21·1	24·6	28·1	31·7	35·2	42·3	49·3	56·3
1,800	3·7	7·4	11·2	14·9	18·7	22·4	26·1	29·8	33·6	37·3	44·7	52·2	59·7
1,900	3·9	7·9	11·8	15·7	19·7	23·6	27·6	31·5	35·5	39·4	47·3	55·2	63·0
2,000	4·1	8·3	12·4	16·5	20·7	25·0	29·0	33·1	37·3	41·4	49·6	58·0	66·2
2,100	4·3	8·7	13·0	17·4	21·7	26·1	30·5	34·8	39·2	43·5	52·2	60·8	69·6
2,200	4·5	9·2	13·6	18·2	22·8	27·4	32·0	36·4	41·0	45·6	54·8	64·0	73·0
2,300	4·7	9·6	14·2	19·0	23·8	28·6	33·3	38·1	42·9	47·6	57·2	66·7	76·2
2,400	5·0	10·0	14·8	19·8	24·8	29·8	34·8	39·6	44·8	49·7	59·6	69·4	79·4
2,500	5·2	10·4	15·5	20·6	25·8	31·0	36·1	41·3	46·5	51·7	62·0	72·4	82·7
2,600	5·4	10·8	16·2	21·4	26·8	32·2	37·6	43·0	48·4	53·8	64·6	75·4	86·2
2,700	5·6	11·2	16·8	22·4	28·0	33·5	39·1	44·7	50·2	55·9	67·0	78·2	89·5
2,800	5·8	11·6	17·4	23·2	29·0	34·8	40·6	46·4	52·2	58·0	69·6	81·4	92·8
2,900	6·0	12·0	18·0	24·0	30·0	36·0	42·0	48·0	54·0	60·0	72·0	84·0	96·0
3,000	6·2	12·4	18·6	24·8	31·0	37·4	43·4	49·6	56·0	62·1	74·6	87·0	100·0

F. REDDAWAY & CO., LTD.

SOLE MAKERS OF

'CAMEL HAIR' BELTING

(REGISTERED TRADE MARK).

UPWARDS OF 100,000,000 FEET HAVE BEEN SUPPLIED
TO USERS IN ALL PARTS OF THE WORLD.







REGISTERED TRADE MARKS.

ALSO OF

'CAMELATA' BELTING

Specially constructed for Engineering and Machine Shop drives.
Unaffected by Heat, Cold, Steam or Water.

PRINTING BLANKETS, PAPER MAKERS' FELTS

Mechanical Rubber Goods

OF ALL CLASSES, including

BELTING

Hose	**Mats**
Sheet	**Packing**
Valves	**Buffers**

RUBBER COVERED ROLLERS.

Mills and Head Offices: **PENDLETON, MANCHESTER.**

LONDON: 50 & 51 Lime Street, E.C. 3; and Branches.

F. REDDAWAY & CO., LTD.

SOLE MAKERS OF

'HERCULES' BRAND

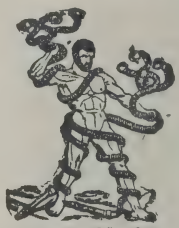
(REGISTERED TRADE NAME).

'SPHINCTER-GRIP'

Armoured Hose

to withstand pressures up to 10 tons per sq. inch.

FOR HYDRAULIC & ROCK DRILL PURPOSES.



Trade Mark.

FOR PNEUMATIC & SUCTION PURPOSES.

MAKERS OF

WOVEN CANVAS HOSE.
RUBBER LINED CANVAS HOSE.
HYDRAULIC HOSE, &c.

Speciality :

'CAMEL' FIRE HOSE

(Regd.)

Bursting Pressure 2½in. diameter, 650 lbs. per sq. inch.

Mills & Head Offices: PENDLETON, MANCHESTER.

LONDON: 50 & 51 Lime Street, E.C. 3.

Reddaway Belting.

Table showing Horse-power Transmitted by the 'Camel Hair' Belting (*continued*).

(By permission of the Sole Manufacturers, *F. Reddaway & Co. Ltd., Manchester.*)

Vel. of Belt. Ft. per Min.	Width of Belt in Inches.												
	1	2	3	4	5	6	7	8	9	10	12	14	16
3,100	6·4	12·8	19·3	25·7	32·1	38·5	45·0	51·3	57·8	64·2	77·0	90·0	102·0
3,200	6·6	13·2	19·8	26·4	33·0	39·6	46·4	53·0	59·6	66·2	79·6	92·8	106·0
3,300	6·8	13·6	20·5	27·3	34·1	41·0	47·8	54·7	61·5	68·3	82·0	95·6	109·0
3,400	7·0	14·0	21·0	28·2	35·2	42·2	49·2	56·2	63·4	70·4	84·6	98·6	112·0
3,500	7·2	14·4	21·7	29·0	36·2	43·5	50·8	58·0	65·2	72·5	87·0	101·0	116·0
3,600	7·4	14·8	22·4	29·8	37·4	44·8	52·2	59·6	67·2	74·5	89·4	104·0	120·0
3,700	7·7	15·3	23·0	30·6	38·3	46·0	53·6	61·2	69·0	76·6	92·0	107·0	123·0
3,800	7·9	15·8	23·6	31·4	39·4	47·2	55·2	63·0	71·0	78·7	94·6	110·0	126·0
3,900	8·1	16·1	24·2	32·2	40·3	48·3	56·4	64·5	72·5	80·7	96·8	113·0	129·0
4,000	8·3	16·6	24·8	33·0	42·0	50·0	58·0	66·2	74·6	82·9	99·2	116·0	132·0
4,100	8·5	17·0	25·5	34·0	42·5	51·0	59·5	68·0	76·5	85·0	102·0	119·0	136·0
4,200	8·7	17·4	26·1	34·8	43·5	52·2	61·0	69·5	78·2	87·0	104·0	122·0	139·0
4,300	8·9	17·8	26·7	35·6	44·5	53·4	62·3	71·2	80·0	89·0	107·0	125·0	142·0
4,400	9·1	18·4	27·2	36·4	45·6	54·8	64·0	72·8	82·0	91·0	109·0	128·0	146·0
4,500	9·3	18·6	28·0	37·3	46·6	56·0	65·2	74·5	84·0	93·2	112·0	130·0	150·0

Note.—This table may be thoroughly relied upon for all ordinary conditions of working. The results of tests made by Chas. Hopkinson, M.Inst.C.E., M.Inst.M.E., B.Sc., show that the 'Camel' Brand belt working under favourable conditions will safely transmit double the horse-power given in the above table.

Turner Brothers' Hair Beltings.

'Tower' Hair Belting (*Turner Brothers Asbestos Co. Ltd., Rochdale*) is a standard quality made from the finest yarns; 'Gripwell' Hair Belting is a cheaper, but reliable grade. 'Perfex' Hair Belting is a type with a hardened cotton edge, and has been specially designed for driving cotton-spinning machinery, such as mule down drives, top straps, and ring spinning frames, or heavy forkwork generally.

Cross Section of Belts.

The following table shows what area of cross section of leather belt is needed to give various horse-powers, with various arcs of contact on cast-iron pulleys, at a belt speed of 3,000 feet per minute, the fastenings being single leather lacings. From it, having decided on the thickness, the width may be determined, or *vice versa*, by simple division:

Arc Contact.	Horse-powers.									
	5	10	15	20	25	30	35	40	45	50
Deg.	Sq. in.	Sq. in.	Sq. in.	Sq. in.	Sq. in.	Sq. in.	Sq. in.	Sq. in.	Sq. in.	Sq. in.
30	0·90	1·79	2·68	3·58	4·48	5·37	6·27	7·16	8·06	8·95
45	0·63	1·26	1·88	2·51	3·14	3·77	4·40	5·02	5·65	6·28
60	0 49	0·99	1·48	1·98	2·97	2·96	3·46	3·95	4·45	4·94
75	0·41	0·83	1·24	1·64	2·07	2·49	2·90	3·28	3·73	4·14
90	0·36	0·73	1·09	1·45	1·82	2·17	2·55	2·91	3·26	3·64
105	0·33	0·65	0·98	1·31	1·63	1·96	2·29	2·61	2·94	3·27
120	0·30	0·60	0·90	1·20	1·50	1·80	2·10	2·40	2·70	2·99
135	0·28	0·56	0·83	1·11	1·39	1·67	1·94	2·22	2·50	2·78
150	0·26	0·52	0·78	1·04	1·30	1·56	1·82	2·09	2·35	2·61
165	0·25	0·50	0·75	0·99	1·44	1·49	1·74	1·99	2·24	2·49
180	0·24	0·47	0·71	0·95	1·20	1·42	1·62	1·90	2·13	2·37
195	0·23	0·46	0·68	0·91	1·14	1·37	1·60	1·83	2·05	2·28
210	0·22	0·44	0·66	0·88	1·10	1·32	1·54	1·76	1·98	2·20
240	0·21	0 42	0·62	0·84	1·05	1·25	1·46	1·68	1·87	2·09
270	0·20	0·40	0·60	0·80	0·99	1·20	1·49	1·60	1·80	1·99
300	0·19	0·39	0·58	0·77	0·97	1·16	1·35	1·54	1·74	1·93

Belt Tension.

To find out whether the force carried by a belt is more than should be properly put upon it, or upon its fastening, we must know how much the arc of contact is, and what the tension on both the tight and the slack folds. The greatest tension upon it is that in the tight fold or side; and this is equal to that on the slack side plus the pull which the belt gives to the pulley or which the pulley gives to it. The greater the arc of contact, the greater the ratio between the tight and the slack side, and the less the tension will be upon the belt and its fastening to transmit a given power at a steady speed. Thus, if we have a pull of 10,000 lbs. necessary to carry a certain horse-power, when the arc of contact of the belt on the pulley is 90°, that means that the ratio between the tension on the tight side and that on the slack side is 1·874; in other words, for every pound upon the slack side there will be 1·874 lbs. on the tight side; and if the difference between the tensions on the slack and the tight sides be 1,000 lbs., it will be necessary to have 1,000 ÷ 0·874 = 1,144 lbs. tension on the slack fold, and 2,144 on the tight one. (These figures apply to leather belts in good condition upon cast-iron pulleys, also in good condition.) The following table shows the ratio between the tension and transmitted pull for various arcs of contact from 30° to 300°:—

TABLE OF GREATEST TENSION ON BELTS.

Degrees of Arc . .	30	45	60	75	90	105	120	135
Ratio between tension and transmitted pull .	5·29	3·71	2·92	2·45	2·14	1·93	1·77	1·64
Degrees of Arc . .	**150**	**165**	**180**	**195**	**210**	**240**	**270**	**300**
Ratio between tension and transmitted pull .	1·54	1·47	1·40	1·35	1·30	1·23	1·18	1·14

EXAMPLE.—If it takes a pull of 300 lbs. to carry a given horse-power when the arc of contact is 195°, then the tension upon the tight side will be 1·35 × 300 lbs., or 405 lbs. Expressing results in horse-power instead of pounds pull, suppose that it is necessary to carry 175 horse-power with a belt running 2,000 feet per minute, and having 210° arc of contact; then the pull on the pulley will be 33,000 × 175 ÷ 2,000 = 2,887 lbs.; and the greatest tension upon the belt will be 2,887 × 1·3 = 3,753 lbs.

For double leather main belts, H.P. = $\frac{80 \text{ W V}}{33{,}000}$ where W = breadth in inches, V = velocity in feet per minute.

General Rules for Belts.

(1.)

A good all-round rule, and one easily remembered for belt calculations, is that 1 ft. per minute of belt speed per inch of width of belt is safely equal to the transmission of 1 watt of electrical energy. If we therefore multiply the belt speed is feet per minute by the width in inches, the result will be the total energy in watts; and if we divide the result by 1,000, the energy is obtained in kilo-watts, which energy the band may be relied upon to transmit without any undue tension being brought upon any part of the belt or excessive friction in any part of the machinery. These data, however, only apply to single leather belting or to woven belting of a similar thickness. If a light double band be employed, then 25 per cent. more energy may be calculated upon; or for heavy double leather belting as much as 60 per cent. more may be added. The great advantage for this method of calculation is that it fixes a constant for working tensions, so that the working tension becomes directly proportional to the width in inches, this constant being 44·24 lbs. pull per inch width of belt. If we wish, therefore, to know the difference in pounds pull on the tight and on the slack side of any belt, all that is necessary is to divide the total output of the machine in watts by the velocity of the belt in feet per minute, and multiply the result by 44·24, and the product will be the extra pull in pounds on the tight over the slack side. (*R. Berry.*)

(2.)

One horse-power will be transmitted by a single thickness belt 1 inch wide running at the rate of 1,000 feet per minute.

A belt $\frac{1}{10}$ths of a square inch section will transmit 1 horse-power at the foregoing rate.

Tension on belt by either of these rules will be 33 lbs. per inch of width and 165 lbs. per square inch of section.

With belts in good working order the frictional hold on the pulleys is about 58 per cent. of the pressure of the belt on the surface of the pulley as a maximum, and about 42 per cent. under ordinary atmospheric conditions.

It is safe to reckon that a double belt will do half as much work again as a single one.

Belting made of Helvetia leather is much stronger and will bear a heavier load than that made from ordinary tanned leather.

COLE'S BALATA BELTING

FOR ALL CLASSES OF

DRIVING & CONVEYORS.





BALATA & TEXTILE

Belting Manufacturers,

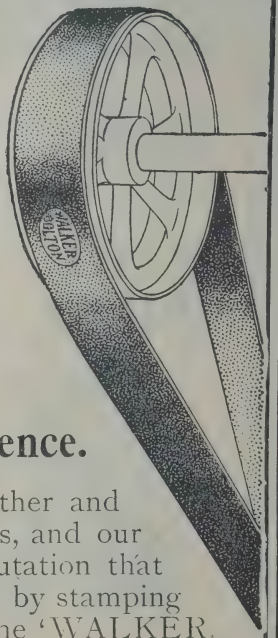
HENRY A. COLE & Co. Ltd.

"A" DEPT.,

CORONET WORKS,

LIVERPOOL, ENGLAND.





A Century's Experience.

We have been tanning leather and making Belting for 100 years, and our products have gained a reputation that we value. We safeguard it by stamping all our Belting with the name 'WALKER. BOLTON.'

Let this name be your guarantee also, and you will be assured of a Belt that will transmit maximum power with long life and freedom from breakdowns.

Write for copy of 'The Belting Book,' which gives full particulars of our various brands of Belting; sent post free on request.

WM. WALKER & SONS LTD.

BOLTON. ENGLAND.

℗ H.16

A double belt is more serviceable upon pulleys of large than upon those of small diameter, and should not be used upon pulleys whose diameters are less than about 3 times the width of the belt, unless the belt width exceeds about 4 ins.

Rubber belts will transmit from 25 to 40 per cent. more power per given arc of contact than leather belts. They should not be used in situations where they will be subject to a temperature of over about 90° F.

The average weight of a good four-ply rubber belt 7 ins. wide is 16 ozs. per linear foot. The best rubber belting is made with 32 ozs. duck, and then weighs 20 ozs. per linear foot.

It is a common error among mechanics and owners of factories to make the face of their pulleys narrow, in order to economise on the first cost of belting; but this false economy seldom decreases the cost of the machinery, and only saves a trifle in the first cost of belting. The small amount saved is soon lost by the stopping of machinery caused by the slipping of belts, strain on the shafting, increased friction (requiring additional driving power), and rapid destruction of the belts themselves. Were pulleys made of a proper size and width and face, and belts of proper width run with the *grain* side of leather to the pulley, a considerable saving of coal might be effected annually, and an immense amount of trouble avoided.

Leather belts with grain side to pulley can drive 34 per cent. more than flesh side.

(3.)

To find the diameter of driving pulley.—Multiply the diameter of the driven by the number of revolutions it should make, and divide the product by the number of revolutions of the driver.

To find the diameter of driven.—Multiply the diameter of the driver by its number of revolutions, and divide the product by the number of revolutions of the driven.

To find the number of revolutions of the driven.—Multiply the diameter of the driver by its number of revolutions, and divide by the diameter of the driven.

To find the horse-power of a pulley.—Multiply the circumference of the pulley (feet) by the revolutions per minute, and the product thus obtained by the width of the belt, and divide the result by 600. The quotient will be the horse-power.

Length of Belts.

(1.)

(Not crossed.)

RULE.—Add the diameter of the two pulleys together, divide the result by 2, and multiply the quotient by $3\frac{1}{4}$; then add this product to twice the distance between the centres of the shafts; the result is approximately the length required.

(Crossed.)

RULE.—Mark off by lines the pulleys, set at their proper distance apart (either full size or to scale), and measure the length of the side of the belt, supposing the belt to envelop one-half the circumference only of each pulley, and add to this one-half the circumference of each pulley. If there is a great difference between the relative diameters of the pulleys, and the distance apart of the shafts is unusually small, the length of the straight sides of the belt should be measured, and the arcs of contact around the pulleys stepped around by compasses, the set of the latter being not more than about one-tenth the circumference of the pulley.

In the case of both running horizontally, the upper half of the belt should be the driving side.

(2.)

(Auguste Esnouf, A.C.G.I.)

Let X = distance between centres of pulleys; D and d = respective diameters * of pulleys; C and c = respective circumferences; P = a parameter equal to D − d for open, and to D + d for crossed belts, exclusive of lap for jointing; L = length of belt. Then

$$L = \tfrac{1}{2}(C + c) + 4X - \sqrt{4X^2 - P^2},$$

with an approximation such that the relative error is less than 1 in 1,000 for values of the ratio $\frac{X}{P}$ greater than or equal to 1·5; the relative error is about $\frac{1}{2}$ per cent. when $\frac{X}{P} = 1$.

For exact results, $L = \frac{1}{2}(C + c) + KX$, for both open and crossed belts; and $L = mX$ for crossed belts, where K and m are coefficients, tabulated herewith for the various values of the ratio $\frac{X}{P}$.

* Strictly speaking, D and d should be the theoretical diameters—that is to say, actual diameters plus thickness of belt.

$\frac{X}{P}$	K.	m.	$\frac{X}{P}$	K.	m.	$\frac{X}{P}$	K.	m.	$\frac{X}{P}$	K.	m.
0·700	2·537	4·781	0·81	2·394	4·333	1·02	2·246	3·786	1·7	2·082	3·006
0·705	2·528	4·756	0·82	2·384	4·299	1·03	2·241	3·766	1·8	2·078	2·951
0·710	2·520	4·732	0·83	2·374	4·266	1·04	2·237	3·747	1·9	2·070	2·897
0·715	2·512	4·709	0·84	2·365	4·235	1·05	2·232	3·728	2·0	2·063	2·848
0·720	2·505	4·687	0 85	2·357	4·205	1·06	2·228	3·710	2·2	2·051	2·765
0·725	2·498	4·665	0·86	2·349	4·175	1·07	2·224	3·692	2·4	2·043	2·697
0·730	2·491	4·643	0·87	2·341	4·146	1·08	2·219	3·674	2·6	2·037	2·641
0·735	2·484	4·621	0·88	2·333	4·118	1·09	2·215	3·656	2·8	2·032	2·593
0·740	2·477	4·600	0·89	2·325	4·090	1·10	2·211	3·639	3·0	2·028	2·552
0·745	2·470	4·578	0·90	2·318	4·063	1·12	2·203	3·605	3·5	2·021	2·470
0·750	2·463	4·557	0·91	2·311	4·037	1·14	2·196	3·574	4·0	2·016	2·408
0·755	2·457	4·537	0·92	2·304	4·011	1·16	2·189	3·543	4·5	2·012	2·361
0·760	2·451	4·518	0·93	2·297	3·986	1·18	2·182	3·513	5·0	2·010	2·324
0·765	2·445	4·498	0·94	2·290	3·961	1·20	2·176	3·485	5·5	2·008	2·293
0·770	2·439	4·479	0·95	2·284	3·937	1·25	2·162	3·419	6·0	2·007	2·269
0·775	2·433	4·460	0·96	2·278	3·914	1·30	2·150	3·358	6·5	2·006	2·248
0·780	2·427	4·441	0·97	2·272	3·891	1·35	2·138	3·302	7·0	2·005	2·229
0·785	2·421	4·422	0·98	2·266	3·869	1·40	2·128	3·250	8·0	2·004	2·200
0·790	2·416	4·404	0·99	2·261	3·848	1·45	2·119	3·202	9·0	2·003	2·178
0·795	2·410	4·386	1·00	2·256	3·827	1·50	2·112	3·159	10·0	2·002	2·159
0·800	2·405	4·368	1·01	2·251	3·806	1·60	2·099	3·081	—	—	—

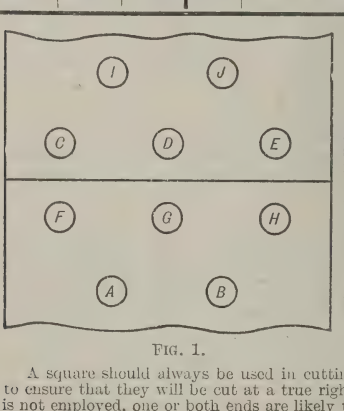


FIG. 1.

Jointing Belts.

LACED BUTT JOINT.

For belts about 3 ins. wide and over, the holes C, D, E, and F, G, H, should be about 1 in. apart and $\frac{3}{8}$ in. from the line of joint; A, B, and I, J should be about $\frac{1}{2}$ in. behind C, D, E, and F, G, H, respectively.

The sizes of the holes should be as follows:

Width of belt up to 4 ins. Size of punched hole, $\frac{1}{4}$ in.
" " from 4 to 8 ins. " " $\frac{5}{16}$ in.
" " " 8 ins. upwards " " $\frac{3}{8}$ in.

WIDTH OF LACES.

Width of belt 24 ins. and over. Width of lace, $\frac{1}{2}$ in.
" " 6 to 24 ins. " " $\frac{3}{8}$ in.
" " 2 to 4 ins. " " $\frac{5}{16}$ in.
" " 2 ins. and less " " $\frac{1}{4}$ in.

A square should always be used in cutting the ends of a belt preparatory to joining them, to ensure that they will be cut at a true right angle to the centre line of the belt. If a square is not employed, one or both ends are likely to be cut uneven or irregular, and these conditions cause the belt to slip from side to side of the pulley and impose irregular strains on the belt fibres, which no belt can endure indefinitely. Belts of widths up to about 18 ins. can be cut sufficiently true by holding one leg of the square against one side of the belt, having the other leg project across the belt, and then cutting along the edge of the latter with a sharp knife held perpendicular to the belt. The knife blade should be made wet occasionally to make it cut easily.

The ends of wide belts are difficult to cut square on account of slight variations in their widths and because the sides may not be exactly parallel; satisfactory results may be assured by the following method: At any point on the belt near where it is to be cut, measure across and find the centre, then at a point 2 or 3 ft. back from these dimensions, locate the centre again, and between these two points draw a clean sharp line. Next, by holding one leg of a square against the centre line just made, trim off one-half of the end of the belt by cutting along the other leg. By laying the square on the other side of the centre line, the other half of the belt can be cut. The square should be held firmly in position while cutting the belt, and if two small nails are driven in the belt on the centre line, they will help to keep the square from slipping.

JOINING THIN BELTS.

Place two ends of belt together, with edges fair one with the other, and make with an awl a row of holes, at *a*, through both ends. Then take about half a yard of strong twine, and

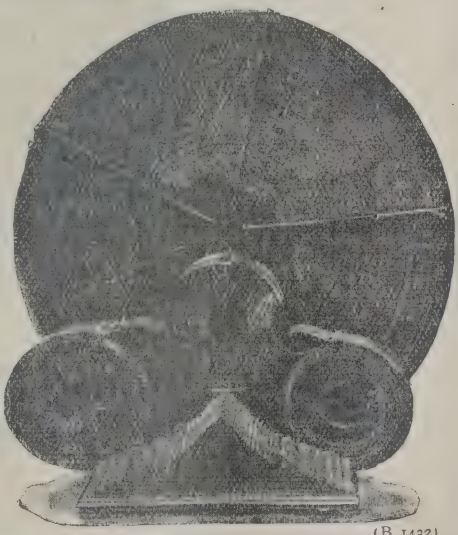
NORTH BRITISH
RUBBER BELTING

is used in all parts of the world both for driving and conveyor purposes.

It was first introduced sixty years ago and has a world-wide reputation for high quality and long wearing properties.

Rubber Belts are superior to leather and resist damp and warm atmospheres better than any other kind.

'NORTH BRITISH' Rubber Belting means stronger running, increased power and less wear and tear on the machinery, and longer life.



Write for Lists and interesting Booklet giving much valuable information to Belt users.

THE
North British Rubber Co. Ltd.
Castle Mills,
EDINBURGH.

(B 1432)

NORTH BRITISH

Rubber Goods

of every description for mechanical engineering, scientific and other purposes, are pre-eminent in the opinion of discriminating users in all parts of the world and are made in the largest rubber factory in the British Empire. The wide range of rubber and vulcanite articles include :

Rubber Hose

Delivery, Air, Drill, Suction, Gas, Steam, etc.

Valves

Gaskets, Washers, Gauge Glass Rings, etc.

Vulcanite

Rod and Sheet, High Resistance Vulcanite for Wireless, Telephone Fittings, etc.

Rubber Belting

Transmission and Conveyor.

Rubber Boots and Shoes

North British 'Clincher' Tyres

Pneumatic and Band Tyres for Cycles, Cars, and Heavy Motor Vehicles.

'Paraflor' Rubber Carpeting.

Catalogues free on request.

THE NORTH BRITISH RUBBER Co Ltd
CASTLE MILLS EDINBURGH

London Warehouse and Export Depot :
204 Tottenham Court Road, London, W. 1.

Warehouses in all large Cities at Home and Abroad.

draw half the length through the first hole; then pass each end of the twine through the second hole, one to the right and the other to the left, and draw both tight at the same time,




FIG. 2.

and so on until the last hole is reached, when one end only of the twine is passed through. The two ends of the twine are then knotted together, and the excess cut off.

LAP JOINTS.




FIG. 3.

Cut down overlap to a plain bevel, cement surfaces together, and insert small taper wooden pegs, such as are used for boot and shoe manufacture. This is the strongest form of joint that can be made.

LENGTH OF LAP.

Width of single belt, in inches .	1 to 4½	5	6 to 8	9	10 to 14	15 to 24
Length of lap, in inches . . .	4½	5	6	6½	7	8

All double belts should have a 6-inch lap at least.

CEMENT FOR BELT JOINTS.

Equal parts of good glue and American isinglass; place the material in a glue pot and add sufficient water to cover the whole. Let the mixture soak ten hours, then bring the whole to a boiling heat, and add pure tannin until the whole appears like the white of an egg. Apply warm. Buff the grain of the leather where it is to be cemented, keep the joint surfaces pressed firmly together, let the joint dry for a few hours, and the belt will be ready for use.

(*Railway and Locomotive Engineer.*)

Belt Dressings.

A preparation (*Sterns, Ltd.*) made in brick form is sold under the name of 'Balagrip' for Balata belts, and 'Sternol' bricks for leather belts. It prevents slipping, and enables belts to be run slack, thus increasing their driving power and lengthening their life. It is packed in cases containing ten bricks of 2 lbs. each; sample orders for a single case on approval are supplied.

'Gripwell' Belting Syrup (*Turner Brothers Asbestos Co. Ltd., Rochdale*) is particularly suited for fast and loose drives or shock drives, to prevent slip; the dressing is applied hot, so as to penetrate the belt freely.

Oiling and Greasing Leather Belts.

When the belt is pliable, and only dry and husky, apply blood-warm tallow, and dry in by heat of fire or sun. The addition of resin to the tallow for belts used in wet places is advantageous. Belts which have become hard and dry should have an application of neatsfoot or cod-liver oil mixed with a *small* quantity of resin.

Suggestions to Belt Users.

In order to obtain a given amount of power, it is better to use a narrow belt running at a high speed than a wide belt running at a low speed.

If possible, use a belt speed of about 3,000 feet per minute for smaller powers, and about 4,000 feet per minute for high powers. Thrashing machine belts run at about 2,200 feet per minute, and this is the usual speed for agricultural machines.

Use a pulley that is wide enough so that a small amount of irregularity in the belt does not make it run off. Allow at least ½ in. on machine pulleys and 1 in. or more on countershaft and lineshaft pulleys. Use crowned pulleys wherever possible.

If possible, use a horizontal belt with large centre distances and with the pulling side at the bottom. In a horizontal drive, the slack side of the belt at the top of the drive increases the belt contact.

When using a vertical belt, do not have more centre distance than is absolutely necessary, because the weight of the belt reduces the efficiency of the drive.

Avoid crossed belts on short centre distances. Avoid the crossing of wide belts. If it is necessary to cross belts, see to it that the rubbing of the belt surfaces does not have a tendency to open up the laps.

Keep belts flexible and as clean as possible. Do not use belt dressing containing mineral oils or resins.

Hints on Belt Driving.*

(John Tullis & Son, Ltd., St. Ann' Works, Glasgow.)

Pulleys having a high convexity prevent the belt from grasping its work. One-sixteenth of an inch is sufficient convexity for pulleys 6 ins. wide and under ; $\frac{3}{32}$ of an inch is enough for pulleys over 12 ins. wide.

By compounding two single or double belts the gain in horse-power is close on 100 per cent.

By compounding three single or double belts the gain in horse-power will be close on 200 per. cent.

Double belts should never be run on pulleys of small diameter. Compound single belts give much better results as regards power, longer life, and less cost.

Compound belts save the cost of wide pulleys as well as the room of wide pulley space.

Every inch in width of good double leather belting, travelling at 500 ft. per minute, while working on pulleys 24 ins. diameter, will transmit one horse-power, provided the arc of contact is 180 degrees.

Every inch in width of good single leather belting, travelling at 800 ft. per minute, while working on pulleys 24 ins. diameter, will transmit one horse-power, provided the arc of contact is 180 degrees.

A comfortable working strain for a single belt is about 50 lbs. for every inch of breadth, and for a double belt 80 lbs.

A belt running with the soft flesh side next the pulley will wear longest, because it is working according to the natural growth of the hide.

When driving on pulleys of 4 ins. diameter and under, the belt ought to be barely $\frac{1}{4}$ in. thick. On pulleys 4$\frac{1}{2}$ ins. to 8 ins. diameter the belt should be about $\frac{5}{16}$ in. thick. On pulleys 8$\frac{1}{2}$ ins. to 12 ins. diameter the belt should be about $\frac{3}{8}$ in. thick. On pulleys 12$\frac{1}{2}$ ins. to 18 ins. diameter the belt ought to be barely $\frac{1}{2}$ in. thick. On any diameter above 18 ins. heavy leather can be used with profit.

If the slack side of a main driving belt runs in wave form it is certain that the engine is getting more steam on one side of the piston than on the other. This unsteadiness is transmitted to all the working belts in the factory.

A badly balanced pulley, running at a high speed, will impart an unsteady motion to the belt running on it. The machine so driven makes bad work.

When a belt gets saturated with waste oil, an application of ground chalk will soon absorb the oil and make the belt workable.

Where possible, all belts should be run with the driving or tight side under the pulleys. The sag of the upper or slack side helps the belt to hug the pulley to the extent of 20 per cent. gain in driving power, as compared with a belt running with the tight side uppermost.

Belts running over pulleys of small diameter at high speeds ought to be as thin and as wide as possible. Orange-tan leather of uniform thickness answers remarkably well.

HIGH-SPEED BELTS.—A belt made from selected orange-tan leather, not too thick, softened, and made flexible, is the toughest and best leather belt for this class of drive. This belt will transmit great power when running at a belt speed of six to nine thousand feet per minute. The pulleys used for such drives must be strong and equally balanced, carefully turned to template, having a convexity no higher than one-sixteenth of an inch. Such pulleys must be hung perfectly true to each other upon the driving and driven shafts.

Thin belts, as wide as possible, give by far the best results working vertically. A thick vertical belt will not hug the pulleys.

In the use of vertical pulleys and guide pulleys, these pulleys ought to be twice the width of the belt, having no flange.

For machinery requiring the continuous shifting of the belt, single orange-tan leather is too thin, but double is highly recommended.

Leather link belting cut from the butt and made concave to suit the convexity of the pulleys will transmit from 25 to 30 per cent. more power than a flat belt.

Orange-tan leather rope, 1 in. square, running at 1,000 ft. per minute, on pulleys not less than 4 ft. in diameter, will transmit 10 horse-power.

In lacing hair belts the laces should run in parallel lines, each row laced separately, and no stitches placed across between the rows.

A circular saw belt ought not to be narrower than one-fourth of the diameter of the saw. The spindle pulley should be as great in diameter as the width of the belt.


The following show tensile breaking stresses of leather belting :—

British Oak-tanned . . .	4500–5000 lbs. per sq in.
British Orange-tanned . . .	6000–6500 " "

Belt Pulleys.

These should be at least an inch wider than the belt, and the rim should be convex to keep the belt in the centre ; about $\frac{1}{16}$ in. to $\frac{3}{32}$ in. of convexity is usually allowed in pulleys up to 12 ins. wide and over. The ratio of the diameters of two pulleys which work together should not

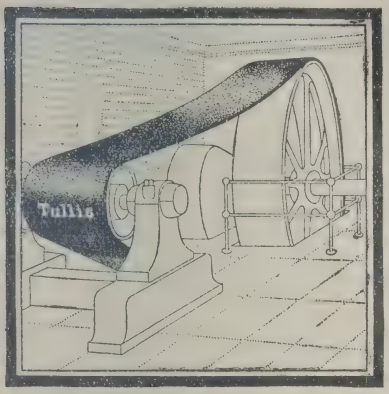* Abstract from 'Guide to Belt Driving.'



'Tullis' gives you service.

You can Depend on the Quality

Under the most severe conditions of service.

Our whole aim is to sell you not *more* Leather Belting but—the *right* Belting for your particular requirements.

Our reputation for Leather Belting of surpassing excellence is world-wide and unique.

To maintain that reputation unimpaired is our constant aim.

Tullis 'Columbia' for Main or Heavy Driving.
Tullis 'Orange Tan' for Electrical or Fast Running.

Write us your requirements.

JOHN TULLIS & SON, LTD.

BELTING SPECIALISTS,

St. Ann's Works, GLASGOW.

Telephone :
Bridgeton 1205, 6, 7, 8 (Private Branch Exchange).
Telegrams : 'TULLIS, GLASGOW.'

Established 1834.

JOHN TULLIS & SON, LTD.,

Belting Specialists,

St. Ann's Works, GLASGOW.

Telephones... ... ... Bridgeton 1205-6-7-8.
Private Branch Exchange.
Telegrams ... ... 'Tullis, Glasgow.'

WE are sole manufacturers of the following well-known brands, which are each suitable for their specific purpose :—

'COLUMBIA' Leather Belting. Special MULE Belting.
'ORANGE TAN' „ „ HAIR BELTING.
'OAK TAN' „ „ CHONATA BALATA do.
and
MECHANICAL LEATHERS OF ALL KINDS.

Information as to the most suitable belt for any particular drive and fully illustrated catalogue can be obtained from any of the undernoted addresses :—

	Telephones :	*Telegrams :*
LONDON—5 Lloyd's Avenue, E.C.	Avenue 1481	Mekaniska, Fen. London.
MANCHESTER—9 Blackfriars Road	Central 2007	Tullis, Manchester.
BIRMINGHAM—17 Cannon Street	Central 987	Tullis, Birmingham.
LEEDS—10 Aire Street	Central 26095	Tullis, Leeds.
NOTTINGHAM—105 Sherwood Street	Nottingham 1858	Olive, Nottingham.
BRISTOL—39 Broad Street.	Bristol 5435	Tullis, Bristol.
BELFAST—38a Queen Street	Central 4292	Tullibody, Belfast.
DUBLIN—6 Westland Row	Dublin 975	Tullis, Dublin.
JOHANNESBURG—16-18 Central House	J'burg 5903	Chonata, Johannesburg.

exceed 6 to 1. The distance apart should, if possible, be such that the arc of contact on the smaller pulley is not less than 165°. If the arc of contact is less the width of the belt should be increased (see page 833). The diameter of pulleys is seldom less than 50 times the thickness of the belt in the case of ordinary belts, or 30 times the thickness of link belts; that is, if any reasonable amount of power is being transmitted.

The slip in the case of a wood pulley with a single-ply oak-tanned leather belt is less than with one of cast-iron, if the belt tension is low.

Belt Driving with Quarter or Right Angle Twist.

Fig. 4 shows the arrangement of pulleys for this purpose. In this case the centre of the bottom pulley should be in a dead line with the left-hand circumference of the top pulley, and the left-hand circumference of the bottom pulley should be in a dead line with the centre of the top. This is the correct position, but in actual practice the position of both pulleys has to be sometimes slightly altered to suit the running of the belt; this is a very simple matter, as it only means moving the pulley along the shaft one way or the other until it is seen that the belt

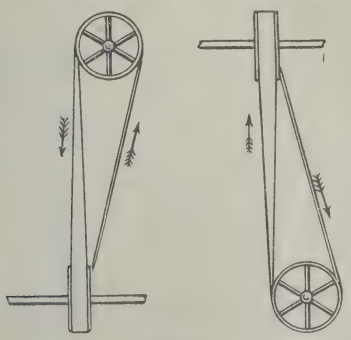


FIG. 4.

is in contact with the face of the pulley. No 'guide' pulleys are necessary. The pulleys should preferably be slightly crowned, i.e. a little larger in diameter at the middle than at the edges.

Link belts are not generally used for this kind of drive, but flat belts made with a special curve to suit the drive in question; the curve of the belt varies according to the diameter of the pulleys, one to each other, and also to the length of centres.

PUTTING ON HEAVY BELTS.

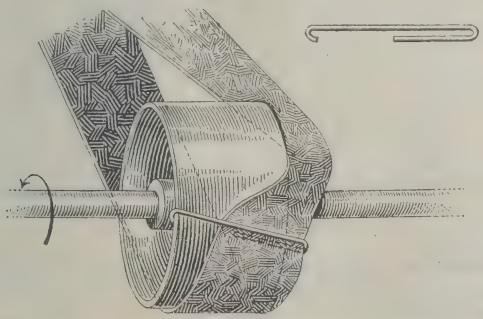


FIG. 5.

Fig. 5 shows a simple device for putting on heavy belts when it is necessary to shut down in order to do so, and where a rope is usually employed for the purpose.

Take a piece of $\frac{1}{4}$- or $\frac{5}{16}$-in. round iron and bend it, as shown in the small sketch. Hook the H H

short end over the edge of the rim of the pulley and the long end under the belt as indicated. Start the engine slowly, and when the belt is on it is not necessary to stop, because the short end of the hook will straighten out and disengage itself. It is a good plan to use a rod of as light weight as will answer the purpose, since it will straighten out and free itself with less stress on the belt; the iron hook then falls to the floor. (*Power.*)

Link or Chain Belts.

HORSE-POWER TRANSMITTED BY LINK OR CHAIN BELTS PER INCH OF WIDTH.

Velocity of Belt in Feet per Minute.	Ins. ⅜	Ins. ½	Ins. ⅝	Ins. ¾	Ins. ⅞	Ins. 1
100	0·13	0·15	0·17	0·20	0·24	0·27
200	0·25	0·29	0·35	0·40	0·47	0·55
300	0·38	0·44	0·52	0·60	0·71	0·82
400	0·51	0·58	0·69	0·80	0·95	1·09
500	0·64	0·73	0·86	1·00	1·18	1·36
600	0·76	0·87	1·04	1·20	1·42	1·64
700	0·89	1·02	1·21	1·40	1·65	1·91
800	0·92	1·16	1·38	1·60	1·89	2·18
900	1·05	1·31	1·55	1·80	2·13	2·45
1,000	1·27	1·45	1·73	2·00	2·36	2·73
1,100	1·40	1·60	1·90	2·20	2·60	3·00
1,200	1·53	1·75	2·07	2·40	2·84	3·27
1,300	1·65	1·89	2·25	2·60	3·07	3·55
1,400	1·78	2·04	2·42	2·80	3·31	3·82
1,500	1·91	2·18	2·59	3·00	3·55	4·09
1,600	2·04	2·33	2·76	3·20	3·78	4·36
1,700	2·16	2·47	2·94	3·40	4·02	4·64
1,800	2·29	2·62	3·11	3·60	4·25	4·91
1,900	2·42	2·76	3·28	3·80	4·49	5·18
2,000	2·55	2·91	3·45	4·00	4·73	5·45
2,100	2·67	3·05	3·63	4·20	4·96	5·73
2,200	2·80	3·20	3·80	4·40	5·20	6·00
2,300	2·93	3·35	3·97	4·60	5·44	6·27
2,400	3·05	3·49	4·15	4·80	5·67	6·55
2,500	3·18	3·64	4·32	5·00	5·91	5·82
2,600	3·24	3·78	4·49	5·20	6·15	7·09
2,700	3·28	3·85	4·66	5·40	6·38	7·36
2,800	3·31	3·86	4·73	5·60	6·62	7·64
2,900	3·32	3·87	4·78	5·80	6·85	7·91
3,000	3·31	3·86	4·75	5·97	7·09	8·18
3,100	3·30	3·85	4·73	5·96	7·33	8·45
3,200	3·28	3·82	4·71	5·94	7·37	8·73
3,300	3·24	3·77	4·70	5·92	7·35	8·88
3,400	3·19	3·71	4·64	5·87	7·32	8·86
3,500	3·13	3·61	4·50	5 78	7·26	8·80
3,600	3·05	3·50	4·37	5·87	7·16	8·73
3,700	2·96	3·39	4·26	5·55	7·01	8·58
3,800	2·84	3·28	4·15	5·41	6·87	8·41
3,900	2·72	3·13	4·02	5·20	6·70	8·27
4,000	2·58	2·95	3 84	5·01	6·48	8·04
4,200	2·27	2·55	3·37	4·52	5·98	7·51
4,500	1·64	1·77	2·45	3·68	5·05	6·55
5,000	0·42	0·15	0·61	1·55	2·78	4·32

(*A. G. Brown.*)

Coefficients of Friction.

Dry new leather	·155 (average)
Old greased belts on well-polished pulleys	·200 to ·220
" " on pulleys not well polished	·300 to ·330
Moist new leather	·120
Ropes, cords, twine, and sewing thread	·070 to ·075

BALATA BELTING.

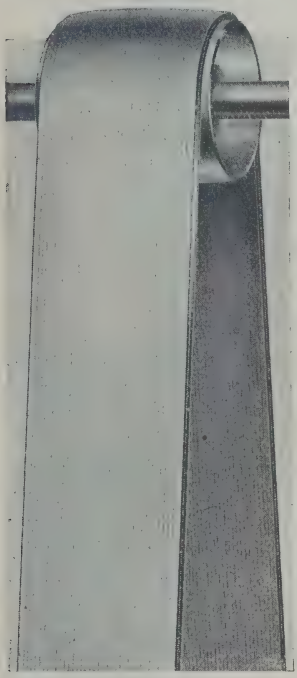
'Veelos' Balata Belting (*Turner Brothers Asbestos Co. Ltd., Rochdale*) is a type suitable for the heaviest driving, conveying, and elevating of all descriptions; it is unaffected by atmospheric conditions, and does not contract on the pulleys when at rest.

HENDRY

FROM A SINGLE STRAND

BELTING

PATENTED ALL OVER THE WORLD.



Efficiency in Power Transmission
a Vital Factor
in National Reconstruction.

Before the War the merits of the HENDRY BELT were recognised by foremost users at home and abroad, including the British Admiralty, War Office, India Office, Ordnance Works, Shipyards, Electric Power Plants, Mining Companies, Engineers, and scores of others. . . .

During the War the HENDRY BELT was the transmitter of power to tens of thousands of Light and Heavy Lathes and Machine Tools, Planing Machines, etc., etc. . . . . .

Millions of the Allies' steel messages of "Friendship" to the Bosche Lines owed their spinning flight to HENDRY BELTS in Shell and Gun Factory. . . Whilst our dauntless Bird-men winged their way by wondrous Engines shaped in tools of precision driven by Hendry. . . . . .

With Peace Driving Efficiency becomes a matter of urgent National moment, its Study, the patriotic and practical duty of every power user. . . A knowledge of the HENDRY BELT, its unique patented construction and remarkable efficiency is therefore an essential to the heads of all progressive plants. . . . . .

P.T.O.

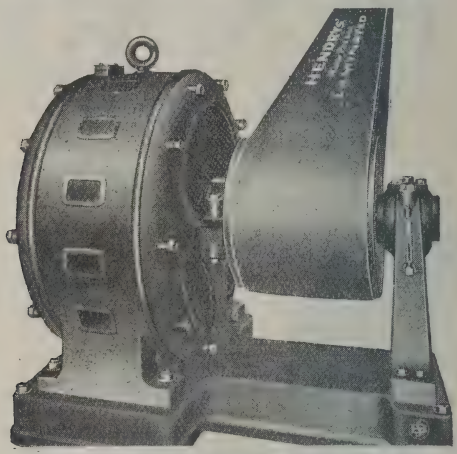
The Book of the
HENDRY BELT
"A practical book for practical men."
sent post free on request.

Copyright

JAMES HENDRY Ltd., 252 Main Street, Bridgeton, GLASGOW

HH 2 F. 840

The Hendry Patent Construction,—the Secret of Hendry Efficiency



HENDRY

FROM A SINGLE STRAND

BELTING

One of the leading Electrical Engineers of the day describes the HENDRY Patent Laminated Leather BELTING as forming a true Endless Belt, which is adaptable to universal service. . . . . .

The Hendry ENDLESS SPLICE forms a joint identical in Texture, Thickness, Flexibility and Driving Grip with the belt itself. . . . A HENDRY BELT runs without jar, vibration, or slip under the heaviest load and at the highest speed. . . . . The new Patent Hendry Belt effects a marked saving in the consumption of Electrical Power per H.P. transmitted. . .

THE HENDRY SIMPLE HORSE POWER DATA

As every Drive is in a measure a law unto itself, it is difficult to furnish a detailed table of Horse Powers which is universally applicable. The following simple data will, however, enable the working out of any particular condition, and will ensure satisfactory driving with a fairly average life to the belt. . . . . The calculations are based on the transmission of 1 H.P. per lin. of width at the various speeds for each number of thickness of belt, working over pulleys 18in. diameter.


With Driving Side on BOTTOM:

No. 1.	**size,**	**velocity**	**700**	**F.P.M.**	**No. 3.**	**size,**	**velocity**	**500**	**F.P.M.**
No. 2.	**„**	**„**	**575**	**F.P.M.**	**No. 4.**	**„**	**„**	**450**	**F.P.M**

Pulleys under 18in. *in dia. deduct* 4½% *for each inch under.*

With Driving Side on TOP deduct 20%

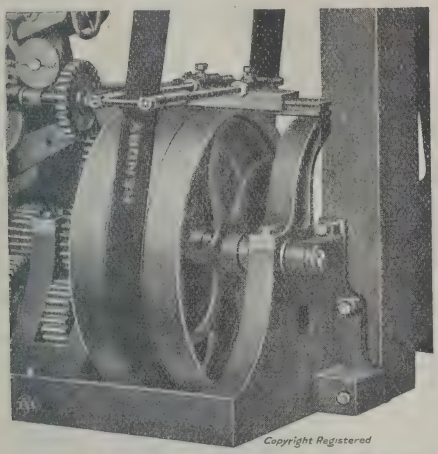HENDRY,—The Leather Belt with Least permanent Stretch



Copyright Registered

HENDRY

FROM A SINGLE STRAND

BELTING

For Planing Machine, Lathe and all Heavy Machine Tool Driving the HENDRY new patent Flexible construction gives a peculiar Elasticity and Spring not found in any other Belting, which acts as a cushion against heavy and irregular stresses, and reduces stretching and wear to a minimum. . . . . The largest concerns at home and abroad have conclusively proved that HENDRY belting permits of higher speeds, heavier cuts, steadier running and an all round increase of output. . .

STANDARD SIZES OF HENDRY BELTING.

The Hendry Belt is made to meet every requirement, in Seven standard Weights from ¼in. to 1in. thick and from 1in. wide to 48in. and upwards. . . Whatever your Driving Problems, Hendrys' expert advice and assistance is freely at your service. . . Write for the Book of the Hendry Belt, post free.

Sole Manufacturers and Patentees—

Telegrams: "Laminated, Glasgow." Code A.B.C., 5th Edition.

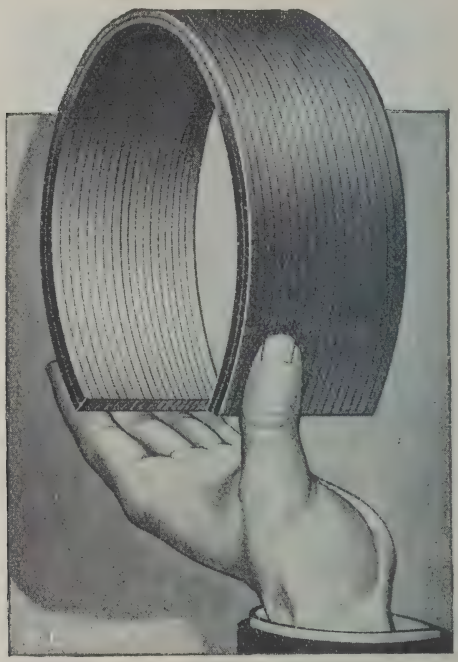
JAMES HENDRY Ltd.

252, Main Street, Bridgeton, GLASGOW

and London. Manchester, Birmingham, Johannesburg

Telephone: 1747 Bridge (3 lines).

The Hendry new Patent Flexible Construction,—a notable Advance



FLEXIBILITY (*Drawn from Life*)
ILLUSTRATING HENDRY NO. 5 ($\frac{3}{4}$ in.) BELT.

The HENDRY BELT is protected by recent Patents throughout the world. . . . . .

The latest HENDRY patented improvements effect such an extraordinary increase in the Flexibility, Driving Grip and Life of the HENDRY Laminated Belting as to enable us to guarantee efficient Driving over Pulleys. *One-Half* to *Two-Thirds* smaller than is practical with any other type of flat belting.

The new Patent Flexible construction is now adopted for all sizes of HENDRY Belting.

All rights reserved

JAMES HENDRY Ltd., 252 Main Street, Bridgeton, GLASGOW

F. 841

Solid Woven 'Gripoly' Belting.

The edges of this belting (fig. 6) are composed of indestructible strands, twisted and interwoven with the solid body of the belt; this prevents all fraying, so that the belt runs under the same conditions as solid leather. The 'gripping' power is very marked, and, being quite water-

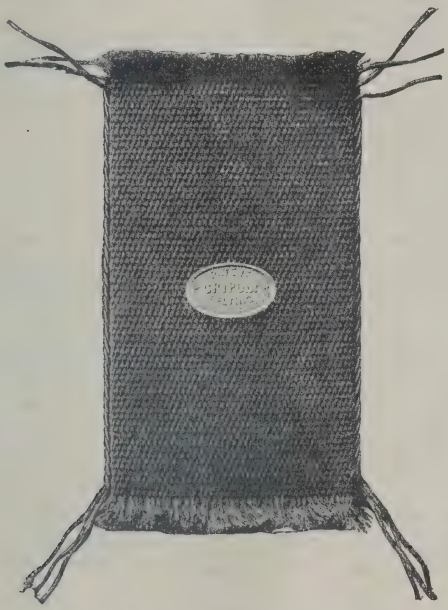


Fig. 6.

proof, the material is not in any way affected by temperature, nor by acids, steam or dust. It is claimed to be practically stretchless. The belting can be jointed like any other belt, and is quite straight running.

Steel Belting.

Steel belts have been recently introduced for the purpose of transmitting power, and are in somewhat extensive use on the Continent. These belts are from $\frac{2}{10}$ to $\frac{5}{10}$ mm. thick, and from 22 mm. to 200 mm. wide, as required. The steel for such belts is of a very high temper and is manufactured specially for this purpose. The difficulty of jointing the belt is one of the great objections. At present the joint is generally made by the makers, and is usually effected by soldering the ends to a keep plate on both sides of the band, and made doubly secure by screws. The length of the belt is obtained by stretching a special tape to a predetermined tension across the pulley, and both ends of the tape are cut at the overlap.

These steel bands run quite well on the bare pulley, but there is a tendency to polish the same and it is therefore desirable to cover the pulley with a very thin cork covering, which is glued on to canvas which in turn is cemented to the pulley. With this arrangement there appears to be little or no slip whatever. This is proved in practice by the fact that the cork covering does not wear away.

With such a belt, 32 mm. thick by 0·3 mm. thick, and cork-faced pulley, Prof. Kammerer, of the Charlottenburg University, transmitted 26·3 h.p. at a speed of 15·7 metres per second. Both pulleys were 1,250 mm. diameter, and the slip was equal to 0·91 per cent.

ROPE DRIVING.

For main driving, the ropes used are now almost exclusively made from cotton. For small drives, such as are used in cotton mules, ring frames, cream separators, etc., cotton ropes are used to the exclusion of all others.

The advantages which a cotton rope has over those of Manilla hemp are:

Greater Flexibility.—They can thus be used over smaller pulleys, or when run over large pulleys suffer less wear.

Superior Resilience.—They absorb shocks without detriment, and have thus less tendency to slip in the grooves.

Greater Driving Power for the same diameter of rope.

Low Rate of Stretch.—The interior fibres do not destroy one another when bending over pulleys under strain.

The rope adapts itself to the groove and does not wear this out of shape. The one advantage Manilla rope possesses is the comparatively low first cost. This, however, is more than compensated for by the longer life, greater duty, and freedom from annoying delays which is given by the cotton rope.

The pulleys are usually of cast iron with their rims grooved; the grooves are generally made to an angle of 40 or 45 degrees for ropes about 1 inch diameter, and 30 degrees for ropes below 1 inch diameter; for thin bands running over very small pulleys more acute angles are usually adopted.

The width of pulley face, in inches, may be found approximately by multiplying the number of grooves by the pitch in inches, plus from 1 to 2 inches for thickness of outer flanges of outside grooves.

For a large mill engine as many as 80 ropes on the one fly-wheel are used, but 30 to 40 is a more common number

The following details are of fly-wheels recently constructed and erected, and may be said to represent the latest practice.

TABLE OF MODERN FLY WHEELS.

Diameter of Fly Wheel.	Ropes.		No. of sets of Arms.	No. of Segments
	No.	Diameter.		
15 ft.	15	1¾ in.	1	In halves
16 ft.	12	1¾ in.	1	6
18 ft.	22	2 ins.	1	8
18 ft.	32	1½ in.	1	8
22 ft.	25	1¾ in.	1	8
24 ft.	44	1½ in.	2	16
27 ft.	38	1¾ in.	2	20
27 ft.	66	1⅝ in.	2	20
32 ft.	32	1¾ in.	2	24

Hints for Planning out a Rope Drive.

It is often stated that 'the diameter of the pulleys should not be less than 30 times the rope diameter.' This is quite an empirical rule which has persisted since the early days of rope driving and which, with the moderate speeds and conditions prevailing up to a few years ago, served its purpose very well. The result of recent research, necessitated by the higher speeds and more difficult conditions of modern days, has shown that this rule is capable of very great modification, since the minimum advisable pulley diameter has been shown not to be a simple function of the rope diameter, but depends upon the following:

Rope speed; total tension on rope; actual diameter of rope.

The following table, extracted from a curve recently published by Messrs. Wm. Kenyon & Sons, Ltd., gives the result of their research on this subject.

TABLE OF ROPE SPEEDS.

(Wm. Kenyon & Sons, Ltd., Dunkinfield, Manchester.)

Speeds.	Minimum advisable Pulley Diameters in Inches.										
	¾ In.	⅞ In.	1 In.	1⅛ In.	1¼ In.	1⅜ In.	1½ In.	1⅝ In.	1¾ In.	1⅞ In.	2 Ins.
	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.
1,000 . .	10	12½	15	18½	20	24	28	31	35	40	45
1,500 . .	11½	14	16½	20	22	26	29	33	38	42	47
2,000 . .	12½	15	18	21½	24	28	31	35½	41	44½	50
2,500 . .	13½	16½	19½	23	26	30	34	38½	44	48	53½
3,000 . .	15	18	21	25	28½	32½	37	41½	47	51½	57
3,500 . .	16½	19½	23	27	31	35	40	44	50	55	61
4,000 . .	18½	21	25	29	33½	38	43	47½	53½	59	65
4,500 . .	—	23	27	31	36	41	45½	51	57	63	69
5,000 . .	—	25	29	33½	38½	44	49½	54½	60½	67	74
5,500 . .	—	27½	31	35½	41	47	52	58	65	71½	79
6,000 . .	—	30	33	38	44	50	55½	62½	69½	76	84
6,500 . .	—	—	35	40½	47	54	59	67	74	82	90
7,000 . .	—	—	37	43	50	58	63	71½	79	88	96

The importance of large pulley diameter cannot be over-emphasised. The above table gives minimum pulley diameters for various sizes of rope at different speeds which are required to ensure a reasonable rope life with normal duty, but still larger pulleys mean a longer rope life, or, if required, higher duty.

Very short centre drives are not generally to be recommended, but if necessary there is no reason why they should not be perfectly satisfactory, provided precautions are taken in the design.

In the case of a drive where the pulleys are of unequal diameter, the portion of the pulley embraced by the ropes decreases with the distance between centres. This must be allowed for by increasing the number of ropes until the contact surface between the ropes and the smallest pulleys equals the usual standards. In other words, allow for the decreased arc of contact by increasing the number of contacts.

In all very short centre drives it is extremely unlikely that the ropes will ever have enough slack to allow of tightening by resplicing, though there might be enough slack to allow the ropes to slip. An allowance of 10 per cent. on the number of ropes decreases the load on each rope sufficiently to ensure that the above contingency will not arise.

Many short centre rope drives have been installed to replace gears, belts, etc., when the load is very erratic, and have proved to be the most economical method of transmitting power under these conditions.

Examples of this are :

(1) Rolling-mill gear-driven replaced by ropes, pulleys 4 ft. 3 ins. diameter, centres 6 ft., leaving rim clearance of 1 ft. 9 ins.
(2) 360 h.p. transmitted through pulleys with rims 8 ins. apart.

Long centres with ropes are, however, very much a matter of pulley diameters and direction of rotation, particularly on horizontal drives. When the lower side is the driving side, the centre distance is limited by the pulley diameters. The ultimate sag on the slack side seldom exceeds 7½ per cent., and 10 per cent. is ample for estimating the depth of a race or for clearing obstructions. Thus, presuming the use of pulleys each 10 ft. diameter, the centres may be extended to 100 ft. apart before the slack and tight sides touch each other, i.e. with the slack side uppermost. See fig. 7.

Reversing the direction of rotation, as per dotted lines on fig. 8, obviously permits of longer centres, reaching in several instances from 150 to 200 ft.

It is possible to extend centres to even greater distances than the above by the use of jockey pulleys, etc. ; but, generally speaking, it is far more economical to split the drive into two or more.

The following construction gives, closely enough for all practical purposes, the sag curve either above or below the pulleys :

With ' B ' as centre, fig. 7, p. 841, strike an arc with AD as radius ; with ' A ' as centre, strike an arc with BC as radius ; then the intersection is centre ' E ' for slack above.

With ' B ' as centre, strike an arc with BC as radius, with ' A ' as centre, strike an arc with AD as radius ; then the intersection is centre ' F ' for slack below.

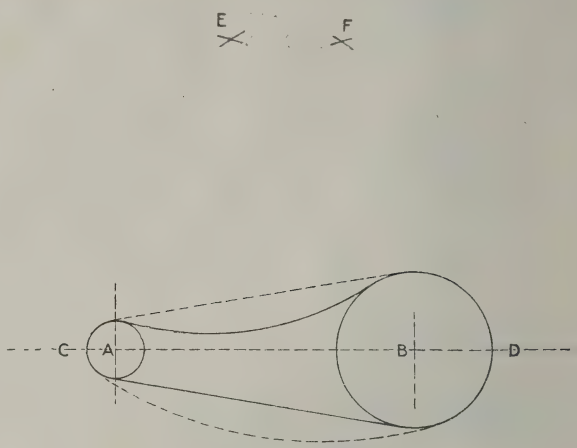


FIG. 7.—Sag of Rope.

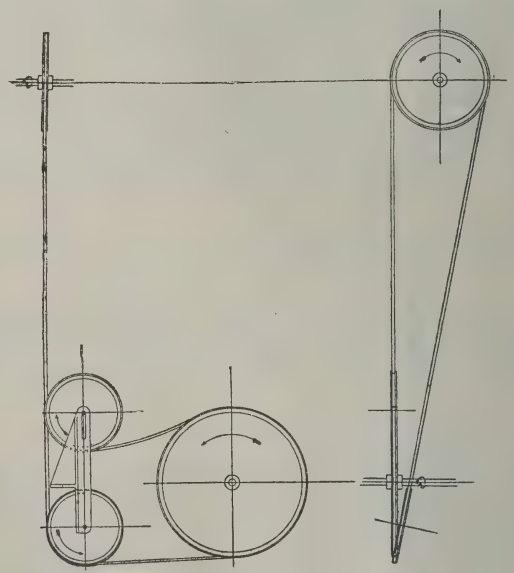


FIG. 8.

ROPE GUARD.

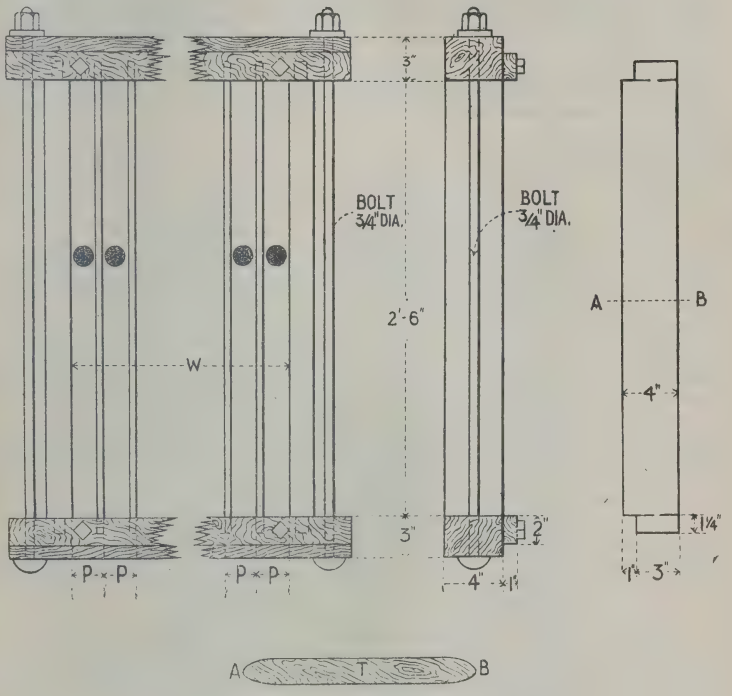


FIG. 9.

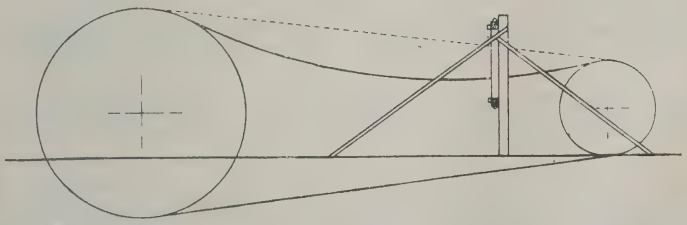


FIG. 10.

Drives with Irregular Impulses or Loads.

When either the load or impulse is irregular, there are two main effects which must be provided against. The first is, if the ropes are fully loaded, or nearly so, for the general conditions of the drive, the irregular load or impulse has the effect of causing the ropes to slip, although under a load equal to the average load, the drives might run perfectly well. In driving from single cylinder gas-engines (old type) as much as 50 per cent. extra ropes were sometimes found necessary. For a modern gas-engine 10 per cent. extra ropes are advisable.

The second is, that with either irregular impulses or loads, the ropes have a tendency to lash about, which, if not controlled, tends to excessive wear. The best thing to do is to regulate by flywheel effect and thus get rid of this action altogether. This, however, is not always possible. In that case the provision of a rope guard is advisable.

A design of the rope guard which has been used with great success is shown in fig. 9, p. 845, and the method of installation in fig. 10, p. 845.

To construct this, first determine the pitch, P, of the pulley grooves; let D = rope diameter; then thickness of blade $= P - \left(D + \frac{D}{8}\right)$.

The blades should be made of a good hard wood of even grain, without knots, with rounded edges, as shown on enlarged section. The ends are shaped to fit slots in cross-bars of frame, where they are held in place by stretchers secured with coach-screws, thus facilitating replacement in case of breakage.

The method of applying this rope guard depends upon the relative positions of the two pulleys and direction of rotation. In oblique driving it is often attached to the roof or sides of a building, stayed by iron rods and tilted to meet the driving angle. These thin wooden blades are quite sufficient to stop the largest ropes from lashing; the action of lashing being accumulative, the blades steady each small impulse as it arises.

For drives at right angles, whether for one or more ropes, the most satisfactory arrangement is shown in fig. 8, p. 844. The tight side of the rope is deflected by a guide pulley fixed at a suitable angle, while the slack side is directed by a pulley having its horizontal axis in line with the driven pulley. This arrangement is also suitable for shafts on the same plane.

Long keyways are advantageous in fixing up angular drives, as they enable the pulley to be moved to the most desirable position in the circumstances.

As the guide pulleys are not required to transmit power the grooves in the same, while being of the same pitch as those of the driver or driven pulleys, should be smooth and well rounded out, as shown in fig. 9 (p. 845).

Crossed Rope Drives.

When power is transmitted by crossed ropes, between shafts rotating in opposite directions, there is unavoidable friction and wear at the point of crossing. These defects may be considerably reduced by arranging the tight side in each pair to run together in the centre and the slack side on the outside of these. If more than two ropes are employed, then sufficient empty groove spaces should be allowed between each pair so that they may pass without touching. Thus a pair of ropes would occupy two out of a set of three grooves the empty groove in the centre providing the clearance at the crossing.

The life on a good rope on a well-designed drive may be said to average ten years many cotton ropes are, however, running that have been working nearly three times this period.

Grooves.

When exact templates of existing grooves are required, the quickest and surest way is to take a plaster cast, the grooves having been previously well greased.

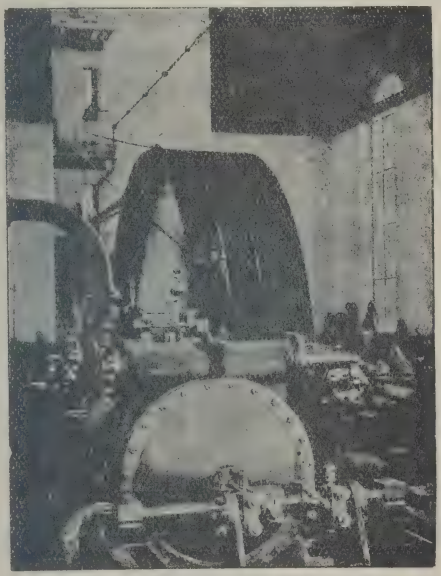
Flanged Grooves,

as shown by fig. 15 (p. 850), are very commonly used and are supposed to give direction to the ropes. Many engineers, however, prefer the flangeless groove as shown by fig. 12 (p. 847), and a groove angle of 40° instead of 45°. It is claimed that the more acute angle can transmit more power, and that it reduces the tendency of the rope to rotate, which action considerably reduces the life of the ropes.

Power Transmission by 'P.I.' Ropes

CONSULT OUR TECHNICAL DEPARTMENT

Complete Transmissions Designed, Supplied, and Erected.



Fixing Rope on to Flywheel

Write for our Booklet on 'The Transmission of Power by Ropes.'

WM. KENYON & SONS, LTD.

Dukinfield - - Manchester

Works:
DUKINFIELD, PRESTON, HYDE, OLDHAM, PENDLETON, ARMENTIERES & ROUBAIX.

London Office:
95-97 FINSBURY PAVEMENT, E.C.
Agents:
BOMBAY, JOHANNESBURG, SYDNEY, ETC.

The LAMBETH COTTON DRIVING ROPE

LESS STRETCH THAN ANY OTHER MAKE OF ROPE.

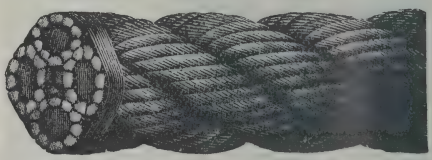
GREATER DRIVING FORCE THAN ANY OTHER MAKE OF ROPE.

Equally suitable for driving from Steam Plants, or in connection with Electrical Installations.

LARGE STOCKS OF ALL SIZES ALWAYS ON HAND.

SPLICERS AND ROPES SENT ANYWHERE AT A MOMENT'S NOTICE.

FOUR STRAND



OR THREE STRAND.

MORE PLIABLE THAN ANY OTHER MAKE OF ROPE.

LOWER RUNNING COST THAN ANY OTHER MAKE OF ROPE.

ENGINEERS ARE INVITED TO WRITE "LITERATURE DEPT." FOR 84-PAGE BOOK ON ROPE DRIVING.

MADE BY

THOMAS HART,

LIMITED.

BLACKBURN :: ENGLAND.

ESTABLISHED 1789.

Also maker of Hart's Anti-fraying Composition for Driving Ropes.

Telegraphic Address: 'HART, BLACKBURN.' (A B C, Western Union & Bentley's Codes).

Telephone: No. 5010 BLACKBURN.

Setting out a 40° groove.—A circle representing the required rope diameter is drawn, through which the vertical and horizontal centre lines are projected. The chord of the arc A B (see fig. 12) then becomes the standard of further measurements, decides the centre for the rounded base, and when doubled gives the point of intersection of the two sides. Continuing the sides above the horizontal line through the centre of the rope until they intersect, the horizontal line

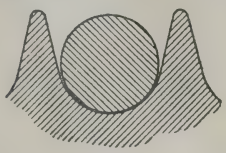


FIG. 11.—Form of groove for rope guide pulley.

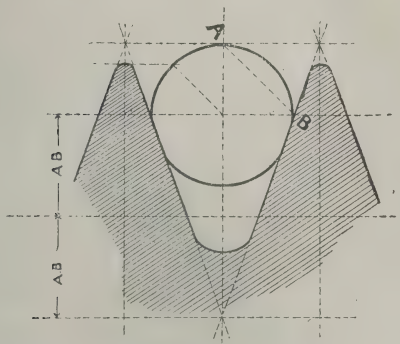


FIG. 12.—Flangeless groove with sides at 40°.

drawn tangential to the rope circumference at the point A gives the pitch. To obtain the top of the pulley, draw a line through the centre of the rope and parallel to the chord A B, and where this line intersects the rope circumference, draw a horizontal line to intersect the pitch line.

SIZES OF ROPES

The table of 'Minimum Advisable Pulley Diameters,' p. 843, gives useful information as to the most suitable size of rope for different sizes of pulleys, and it is intended to be used in conjunction with the 'Table of Powers for Cotton Ropes,' p. 849.

Power transmitted by Ropes.

Formerly, it was assumed that the h.p. which could be transmitted by the rope was dependent upon the total tension and on that alone, presuming that the pulley diameters were normal. This is shown graphically by fig. 13, where the straight diagonal line represents the power transmitted when centrifugal force is neglected, and the curve represents the h.p. when centrifugal force is taken into account and the total tension on the rope remains a constant.

This diagram has been constructed from the following data:

D = diameter of rope in inches; S = speed of rope in feet per second; T = total tension in lbs.; E = effective tension in lbs.; W = weight of one foot of rope in lbs. (The weight per foot is taken as ·27 D^2 lbs.); assume T to be 160 D^2. In order to obtain the effective tension (E) the loss due to centrifugal tension has to be deducted from the total stress.

$$\text{Centrifugal tension normal to a diameter in lbs.} = \frac{S^2 \times W}{32}.$$

The horse-power can now be calculated from the formula

$$\text{H.P.} = \frac{S \times E}{550}.$$

It can be seen from the diagram (fig. 13) that if the stress in the rope be increased, the maximum h.p. transmitted will be increased, and the speed at which this maximum h.p. occurs will be greater than 4,800 ft. per min. The effect of increasing the stress is to raise the curve of actual h.p. transmitted and cause the crown of the curve to be moved to the right of that shown in fig. 13.

It has been found in practice that a 1¼ in. diameter rope will transmit 72 h.p. at 7,200 f.p.m. without slip or excessive wear. This totally disagrees with the above conclusions which would give the power transmittible at certainly not more than 30 h.p.

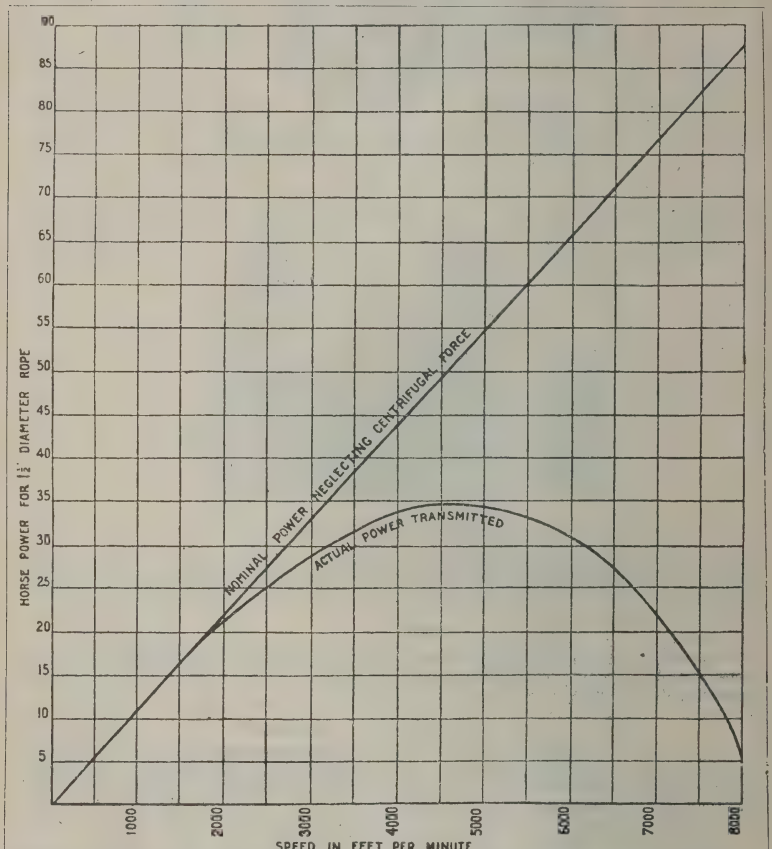


FIG. 13.—**Diagram showing the effect of Centrifugal Force at different speeds of rope.** For an available tension (T) in lbs. of 160 D^2 the best rope speed is shown to be about 4,800 feet per minute.

The explanation is, that wear—not total tension—is the limiting factor in any rope drive, provided there is sufficient arc of contact to prevent slip.

Wear is caused almost entirely by bending under strain, and varies with the total strain on the rope and the amount of bend. Thus, if the total strain is increased, then the amount of bend must be decreased—i.e. the pulley diameter increased.

It thus follows that all the conditions of each drive must be taken into consideration before stating what h.p. it will transmit with an average rope life.

TABLE OF POWERS FOR COTTON ROPES.

(*Messrs. Wm. Kenyon & Sons, Ltd., Dukinfield, Manchester.*)

Velocity in Ft. Per Min.	A ¾″ B 1′ 10½″ C 1′ 2″	⅞″ 2′ 3″ 1′ 4″	1″ 2′ 6″ 1′ 8″	1⅛″ 2′ 10″ 2′ 1″	1¼″ 3′ 2″ 2′ 7″	1⅜″ 3′ 5″ 3′ 2″	1½″ 3′ 9″	1⅝″ 4′ 1″	1¾″ 4′ 5″	1⅞″ 4′ 9″	2″ 5′ 0″
2,000	3·6	5·0	6·5	8·2	10·1	12·2	14·9	17·2	20	22·9	26·1
2,200	3·9	5·5	7·1	9·0	11·1	13·4	16·3	18·9	22	25·3	28·7
2,400	4·3	6·0	7·8	9·9	12·1	14·7	17·8	20·7	24	27·6	31·3
2,600	4·6	6·5	8·4	10·7	13·1	15·9	19·2	22·4	26	29·9	33·9
2,800	5·0	7·0	9·1	11·5	14·1	17·1	20·8	24·1	28	32·2	36·5
3,000	5·4	7·5	9·7	12·3	15·1	18·3	22·3	25·8	30	34·5	39·1
3,200	5·7	8·0	10·4	13·2	16·2	19·6	23·8	27·6	32	36·8	41·8
3,400	6·1	8·5	11·0	14·0	17·2	20·8	25·3	29·3	34	39·1	44·4
3,600	6·4	9·0	11·7	14·8	18·2	22·0	26·7	31·0	36	41·4	47·0
3,800	6·8	9·5	12·3	15·6	19·2	23·2	28·2	32·7	38	43·7	49·6
4,000	7·2	10·0	13·0	16·4	20·2	24·5	29·7	34·5	40	46·0	52·2
4,200	7·5	10·5	13·6	17·3	21·2	25·7	31·2	36·2	42	48·3	54·8
4,400	7·9	11·0	14·3	18·1	22·2	26·9	32·7	37·9	44	50·6	57·4
4,600	8·2	11·5	14·9	18·9	23·2	28·1	34·2	39·6	46	52·9	60·0
4,800	8·6	12·0	15·6	19·8	24·2	29·4	35·7	41·4	48	55·2	62·7
5,000	9·0	12·5	16·2	20·6	25·3	30·6	37·1	43·1	50	57·5	65·3
5,200	9·3	13·0	16·9	21·4	26·3	31·8	38·6	44·8	52	59·8	67·9
5,400	9·7	13·5	17·5	22·2	27·3	33·0	40·1	46·5	54	62·1	70·5
5,600	10·0	14·0	18·2	23·1	28·3	34·3	41·6	48·3	56	64·4	73·1
5,800	10·4	14·5	18·8	23·9	29·3	35·5	43·1	50·0	58	66·7	75·7
6,000	10·8	15·0	19·5	24·7	30·3	36·7	44·6	51·7	60	69·0	78·3
6,200	11·1	15·5	20·1	25·5	31·3	37·9	46·1	53·4	62	71·3	80·9
6,400	11·5	16·0	20·8	26·4	32·4	39·2	47·6	55·2	64	73·6	83·6
6,600	11·8	16·5	21·4	27·2	33·4	40·4	49·0	56·9	66	75·9	86·2
6,800	12·2	17·0	22·1	28·0	34·4	41·6	50·5	58·5	68	78·2	88·8
7,000	12·6	17·5	22·7	28·8	35·4	42·8	52·0	60·3	70	80·5	91·4

A = Diameter of ropes.
B = Diameter of pulleys at 30 times the rope diameter.
C = Allowable reduction for small ropes.

Any increase in relative size of pulleys adds to the life of the ropes, particularly at velocities over 5,000 ft. per minute. Pulleys vary from 37 to 48 diameters at the high speeds mentioned.

(*E. Kenyon.*)

TABLE OF DRIVING-ROPE SIZES.

Diam. of Rope.	Diam. of Rope.	Circum. of Rope.	Circum. of Rope.	Weight per Yard.	Weight per Metre.
Ins.	m/m	Ins.	m/m	Lbs. Ozs.	Grammes.
¾	19	2·35	60	0 9	280
⅞	22	2·75	69	0 11½	360
1	25	3·14	78½	0 15	460
1⅛	28½	3·53	89½	1 3½	605
1¼	32½	3·92	102	1 7½	730
1⅜	35	4·31	110	1 12	870
1½	37½	4·71	118	2 2	1,050
1⅝	40	5·10	125	2 7	1,210
1¾	44	5·50	138	2 12	1,360
1⅞	47	5·89	147	3 2	1,550
2	50	6·28	157	3 8	1,730

Efficiency of Rope Driving.

The conclusions deduced from a recent series of tests on the efficiency of rope driving are as follows:—The efficiency in rope driving is considerably greater at the lower speeds than at the higher ones, the dropping off being especially noticeable above 4,500 ft. per minute of rope speed.*

Flanged grooves (which are very commonly used) have not the same liability for the ropes to mount as the flangeless grooves have. The groove angle is usually 45°, but some engineers prefer the flangeless groove with an angle of 40°, claiming that the more acute angle can transmit more power.

The method of setting out Hart's improved rope groove is shown by figs. 14 and 15. One great advantage of this groove is that it is made so deep as to prevent the rope ever reaching the bottom, a very important point.

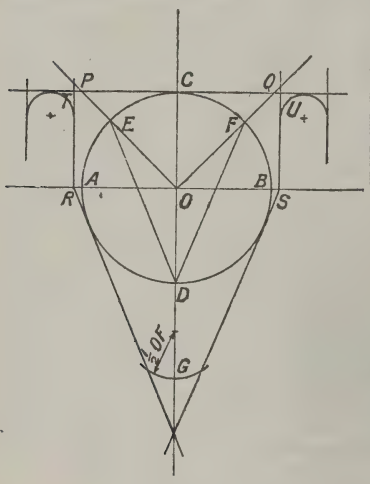


FIG. 14.

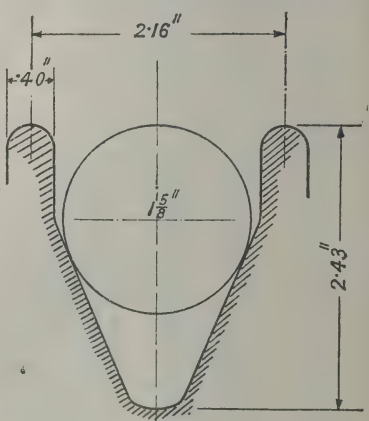


FIG. 15.

Section of Groove for Cotton Driving Ropes. (*Hart.*)

Table of Measurements in Inches.

Diameter of Rope	½	⅝	¾	⅞	1	1¼	1½	1⅝	1¾	1⅞	2	2¼	2½
Pitch of Grooves .	·69	·84	1·02	1·18	1·35	1·51	1·675	1·82	2	2·16	2·35	2·51	2·72
Depth of Groove .	·75	·93	1·125	1·31	1·5	1·68	1.875	2·06	2·25	2·43	2·625	2·81	3
Thickness of Mid-feather . .	·125	·156	·187	·21	·25	·281	·31	·343	·375	·40	·43	·46	·5

Construction for a 45° Rope Groove.

With centre O and radius OA, draw a circle equal in diameter to the rope required.
Draw horizontal and vertical diameters AOB and COD.
With A, B, and C as centres, and radius OA, draw arcs to intersect at P and Q.
Join P and Q to centre O, cutting circle at E and F.
Join DE and DF, and parallel to these two lines draw tangents to the circle cutting AB, produced at R and S.
Through R and S draw RT and SU parallel to COD, cutting PCQ, produced in T and U.
Make DG = DO and draw arc through G with radius = ½ OA.
Thickness of mid-feathers = ½ OA.
Round off all corners of the groove TRGSU.

* 'Times' Engineering Supplement, August 27, 1913; or 'Mechanical World,' August 29, 1913—'Efficiency of Rope Driving as a means of Power Transmission,' by Mr. E. H. Ahara.

The following *Hints to users of ropes* are taken from Mr. Thomas Hart's book on 'Rope Driving':—

Take care that ropes do not get wet; water does them much harm.

Take care that ropes do not rub on anything in their flight, either when running at full speed or when starting and stopping the engine.

Take care that ropes do not slip; if they slip they are probably overloaded, or are too small for the grooves.

All ropes should be lubricated with a good anti-fraying and lubricating composition. Black-lead mixtures should not be used.

Instructions for Splicing Lambeth Cotton Driving Ropes (Four Strand).

(*Thomas Hart, Ltd., Blackburn.*)

Storing, Stretching, etc.

If it is necessary to store the ropes before fixing, they should be kept in a dry room, not on an earthen floor. When ready for fixing uncoil the ropes left-handed—the opposite to the way the hands of a clock move. Then stretch out with a pair of hand blocks, but do not allow the rope to revolve during this operation, or the 'turn' or 'twist' will be taken out of it. Everything depends upon the strength of shafting, etc., as to how tight the rope should be stretched, but under ordinary circumstances it is usual to have about four men pulling on a pair of hand blocks. Pass a string around the drive to get the exact running length of rope, and by tying two bands around the rope, mark off the exact running length whilst it is on the stretch, allowing ten feet (five feet each end) for the splice. For ropes 2 ins. diameter allow 12 feet for splice.

Splicing.

Unlay the five feet each end that has been allowed for splice, that is, as far back as the bands which mark the running length of rope; it is advisable to tie a string around the end of each of the loose strands to prevent the twist from coming out. The strands are now interlaced together, one from the right-hand side being next to one from the left-hand side, and so on, as shown in fig. 16. These strands should be pulled tight so that the bands butt together, and

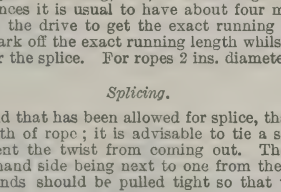


FIG. 16.

the loose strands on one side tied temporarily around the rope to keep the two ends of the rope in the position they now are.

Cut one of the bands, say the one on the right, and unlay strand No. 1A, at the same time laying in its place its fellow strand No. 1 from the opposite side of the rope. Do this for about four feet, and tie the two strands temporarily until all are ready for tucking in. The next strand to this, as will be seen in fig. 16, is numbered 2, but do not touch this now; take the next strand but one, numbered 3A, and unlay it, laying in its place strand No. 3, but only for about 1 ft. 6 ins.; tie these temporarily. It is very important in splicing four-strand ropes that two strands next to each other should not be laid up in the same direction.

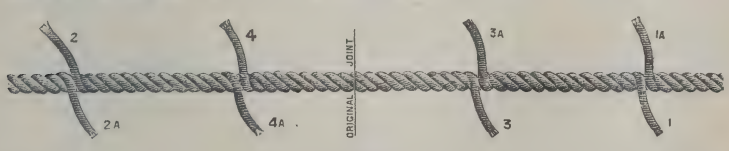


FIG. 17.

Next cut the other band, and proceed in the same manner with strands No. 2 and No. 4, but of course in the opposite direction. Care should be taken to keep the 'turn' or 'twist' in the strands, and they should be laid well and evenly down in their places. The splice should now be as fig. 17.

Begin now at joint No. 1 and 1A; untie the temporary fastening and shorten the strands to equal lengths of about 1 ft. 6 ins. An examination of the strands will show that the outside layer is composed of ten threads; for reference we will call these the friction bands; the internal portion of the strand we will call the tension strand. Take No. 1A and remove from it the ten friction bands and divide them into two lots of five, but do not cut them off. Now take strand No. 1 and unlay it two turns or laps, and whilst it is there remove from it the ten friction bands, divide them into two lots of five, but do not cut off. Now lay in again the tension strand only of No. 1 turn, and reduce it by leaving out about one-quarter, lay up the remaining three-quarters one turn, thus bringing it up to tension strand of No. 1A; tie the two with an overhand knot. At this knot the rope should be about its original diameter, and the joint should appear as shown in fig. 18.

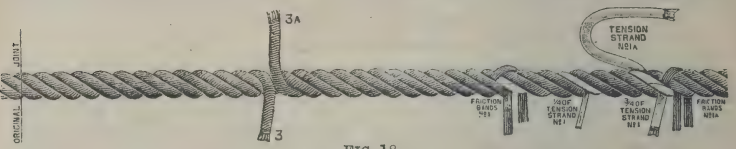


FIG. 18.

Take tension strand 1A and with the splicing pin work it under and over tension strand No. 1, as shown at fig. 19, passing it under and over spirally about five times; it will then have reached friction bands No. 1.



FIG. 19.

Now reduce it by cutting out a portion, and pass the remainder between the two lots of five friction bands, and lock by passing once or twice through the centre of the rope. This is clearly shown at fig. 20. Five friction bands are also locked through the rope as shown. This complete, turn to three-quarters of tension strand No. 1; this is locked exactly as tension strand No. 1A,



FIG. 20.

five of the friction bands are also locked as previously shown, and the splice should now be as fig. 20.

All loose ends are cut off and this portion is complete. Treat the two other joints in the same way and the splice is complete.

How to put a Rope on the Pulleys.

Put the rope on the small pulley, and as far around the large pulley as it will go; lash it there, but have the lashing so that the rope has freedom to slip through it. Then bar pulley slowly round by hand, or barring engine if there is one, and the rope will fall into its place. The groove of the small pulley and the face of the large pulley where the rope will touch in barring on should be well greased with tallow to prevent wedging. A piece of canvas may also be put on the rim of the large pulley to prevent it cutting the rope. (*Thomas Hart, Ltd.*)

GEORGE CRADOCK & CO.,

LIMITED.

STEEL WORKS, ROLLING MILLS, WIRE DRAWING MILLS, &

WIRE ROPE WORKS,

WAKEFIELD,

* **ENGLAND.** *

REGISTERED



TRADE MARK

Cable Address - - 'CRADOCK, WAKEFIELD.

Telephone - - - - No. 466 WAKEFIELD.

Codes { A.B.C. (4th and 5th Eds.), A.1., Engineering Telegraph (2nd Ed.), Western Union, Broomhalls, Marconi International, Bentley's Complete Phrase, Western Union (5 letter Ed.), and Private Code.

REGISTERED



TRADE MARK

LONDON OFFICE: 7 EAST INDIA AVENUE, E.C. 3.

HOME BRANCHES: SHEFFIELD, BIRMINGHAM, MANCHESTER, CARDIFF, NEWCASTLE-ON-TYNE AND GLASGOW.

STOCKS OF ROPES AVAILABLE OVERSEAS TO MEET EMERGENCIES AT

GEORGE CRADOCK & CO. (India) LTD. - - - CALCUTTA
GEORGE CRADOCK & CO. (Australasia) LTD. - SYDNEY, N.S.W
GEORGE CRADOCK & CO. (South Africa) LTD. - JOHANNESBURG.
GEORGE CRADOCK & CO. (British Columbia) LTD. VANCOUVER, B.C.

CONTRACTORS TO { H.M. ADMIRALTY, WAR OFFICE, INDIA OFFICE, AND CROWN AGENTS FOR THE COLONIES.

HIGH-CLASS SPECIALLY FLEXIBLE NON-ROTATING AND OTHER

WIRE ROPES

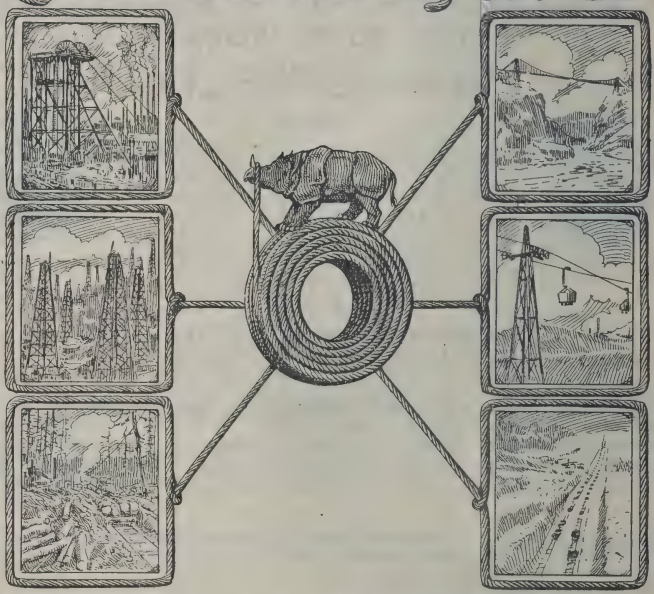
'LOCKED COIL' 'LANG'S LAY'

'SILVERLOCK' 'NUFLEX'

and other famous ropes. All British made throughout from the highest class base of English Haematite and Swedish Charcoal Pig-Iron.

See next page, also announcements facing pages 2192 and 2193.

CRADOCK'S WIRE ROPES



GEORGE CRADOCK & CO.,

LIMITED,

WAKEFIELD, ENGLAND.

WINDING, SINKING, HAULAGE & BALANCE ROPES.

For Collieries and general Mining use.

Suitable Ropes for :—SUSPENSION BRIDGES, CABLEWAYS AND AERIAL ROPEWAYS, BALANCE AND POWER INCLINES, TRANSMISSION OF POWER, RAILWAYS, BRICKWORKS, TIMBER HAULAGE, AGRICULTURE (Ploughing), OIL WELLS, ELEVATORS, CRANES, HOISTS, LIFTS, GALVANISED HAWSERS FOR SHIPPING, Etc.

See previous page, also announcements facing pages 2192 and 2193.

Haulage Wire Ropes, Useful Sizes (Lang Lay).

Approximate Diameter.	Circumference of Rope.	Number of Strands.	Number of Wires in Strands.	Number of Wires in Core	Gauge of Wires.	Lay of Strands.	Lay of Rope.
Ins.	Ins.				In.	Ins.	Ins.
$\frac{5}{8}$	2	6	6	1	·072	$2\frac{1}{4}$	6
1	3	6	6	1	·105	3	$7\frac{1}{2}$
$1\frac{1}{4}$	4	6	8	7	·116	$3\frac{3}{4}$	9
2	6·2	6	10	7	·146	$4\frac{3}{4}$	13

In the 'Lang' Lay all the wires forming the strands, and the strands comprising the rope, are laid in the same direction. These ropes have been used for from 3 to 6 years hauling some 3,500,000 tons of coal, at speeds varying from 5 to 15 miles per hour, over distances up to 220,000 miles.

Blackett's Wire-Rope Socket.

Fig. 21 represents a section of Blackett's wire-rope socket. The cap or socket, A, made of iron or steel, and fitted with a lining, B, of some soft metal, is placed round the rope-end, C, which is brought into proper position, and then forcibly driven outwards against the lining, B, within the socket, the wire ends being held asunder by a tapered plug, D, made of soft metal similar to the




Fig. 21.

lining, B. A bolt, E, which serves to carry the load, or another socket, passes through a double eye. This arrangement forms a strong and compact job, and the process of socketing can be easily and rapidly performed.

Attaching ropes to joints or sockets by means of pins or rivets driven through the former is a detrimental, if not a dangerous, procedure.

Sizes of Pulleys and Drums.

The sizes of pulleys and drums should preferably be about ten times the circumference of the ropes to be used on the same, or, say, 1 foot in the diameter of the former for each pound of rope per fathom—e.g. a drum $3\frac{1}{2}$ feet in diameter for a rope weighing $3\frac{1}{2}$ lbs. per fathom.

Table showing H.P. required for Main and Tail Haulage at 10 Miles per Hour.

Actual Incline in Inches per Yd.	Virtual Incline in Inches per Yd.	Load in Tons.										
		5	7·5	10	15	20	25	30	35	40	45	50
—2	0	0	0	0	0	0	0	0	0	0	0	0
—1	1	8·3	12·5	16·6	25	33·2	41·4	50	58	66·4	76	80·8
0	2	16·7	25	33·3	50	66·6	83	100	116	133	150	166
1	3	25	37·7	50	75	100	125	150	175	200	225	250
2	4	33·4	50	67·5	100	134	167	200	233	270	300	334
3	5	41·5	62	83·5	125	167	208	250	290	334	375	416
4	6	50	75	100	150	200	250	300	350	400	450	500
5	7	58·3	87	117	175	234	294	350	408	468	525	588
6	8	66·3	100	133	200	267	333	400	465	532	600	666
7	9	75	112	150	225	300	375	450	520	600	675	750
8	10	83·5	124	166	250	333	420	500	580	664	750	830
9	11	91	137	183	275	366	459	550	640	732	825	918
10	12	99	150	200	300	400	500	600	696	800	900	1000
11	13	108	162	217	325	433	542	650	755	868	975	1080
12	14	116	174	233	350	466	584	700	815	932	1050	1168

TABLE SHOWING H.P. REQUIRED FOR ENDLESS ROPE HAULAGE ON ROAD 1,000 YARDS LONG

Actual Incline in Inches per Yd.	Virtual Incline in Inches per Yd.	Output in Lbs. per Minute.																
		200	300	400	500	600	700	800	900	1000	1250	1500	1750	2000	2250	2500	2750	3000
	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
—1	1	·5	·75	1	1·2	1·5	1·7	2	2·3	2·5	3·1	3·7	4·4	5	5·6	6·2	6·9	7·5
0	2	1	1·5	2	2·5	3	3·5	4	4·6	5	6·3	7·6	8·9	10	11·4	12·7	14	15
1	3	1·5	2·3	3	3·8	4·6	5·3	6	6·8	7·6	9·5	11·4	13·3	15·2	17	19	21	23
2	4	2	3	4	5	6	7	8	9	10	12·6	15	17·6	20	23	26	28	30
3	5	2·5	3·8	5	6·3	7·6	8·9	10	11·4	12·7	15·8	19	22·3	25·4	28	32	35	38
4	6	3	4·5	6	7·6	9	10·6	12	13·7	15·2	19	22·8	26·6	30·4	34	38	42	45
5	7	3·5	5·3	7	8·8	10·5	12·4	14	16	17·7	22	26·5	31	35	40	44	49	52
6	8	4	6	8	10	12	14·2	16	18·2	20·4	25·3	30·4	35	41	45	51	55	60
7	9	4·5	6·8	9	11·4	13·7	16	18	20·5	22·8	28·5	34	40	45	51	57	63	68
8	10	5	7·6	10	12·6	15·2	17·7	20	22·5	25·3	31·7	38	44	51	57	63	69	76
9	11	5·5	8·3	11	14	16·7	19·5	22	25	27·8	34·7	41·7	49	55	62	69	76	83
10	12	6	9	12	15·2	18·2	21·3	24	27·3	30	38	45	53	61	68	76	83	90
11	13	6·5	9·8	13	16·4	19·8	23	26	29·6	33	41	49	57	66	74	82	90	98
12	14	7	10·6	14	17·7	21·3	24·8	28	31·8	35·4	44	53	62	71	80	88	97	106

(*Ernest Scott and Mountain.*)

LUBRICATION OF WIRE ROPE.

A very important detail in the lubrication of wire ropes is the application of the lubricant. On inclined and horizontal ropes, where operating speeds permit, operators very often pour the lubricant on the rope, the excess being caught in a pail, which serves the double purpose of container and overflow vessel. It has been found excellent practice to paint the lubricant on with a brush, catching the surplus, as before, in a pail. Good results have been obtained by providing each rope with a trough through which the rope is compelled to pass by making it run under a wheel mounted on the trough. Engineers report good service obtained by pouring the dressing on the winding drums. Others report that they have obtained best results by providing each rope with a split box of some 25 lb. capacity, into which compounds can be poured while hot, and through which the rope passes in operation. (*Lubrication.*)

CLUTCHES.

Friction Clutches.

Fig. 22 is one of the simplest forms of friction clutch. Part A clutches with part B (which is keyed to the shaft) by advancing the latter so that the conical surfaces are pressed together; these surfaces are sometimes covered with leather or fibre in order to increase the frictional resistance. When the members are mounted on separate shafts, it is generally advisable to mount

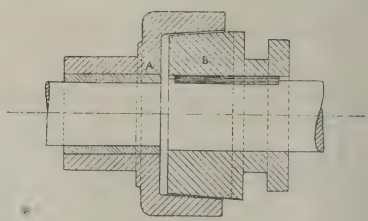


FIG. 22.

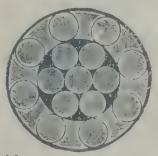
the sliding member on the driven shafts so that it may be at rest when not engaged. Where oil is likely to lodge between the two parts, small escape holes should be drilled parallel to the shaft axis through one of the members. These holes also allow of the escape of any air which may be trapped between the faces.

Wrights' Steel Wire Ropes

THE ROPE MAKERS

For Mining, Engineering and Marine Purposes.

LOCKED COIL CONSTRUCTIONS for Winding, Sinking, Pit Guides and Rubber Ropes, Aerial Ropeways, Suspension Bridges.




No. 64 Locked Coil Guide Rope.



No 63 Locked Coil Winding Rope.



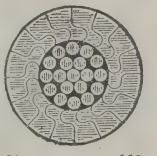No. 66 Locked Coil Aerial Rope.




No. 110 Locked Coil Aerial Rope.

FLATTENED STRAND AND OTHER SPECIAL CONSTRUCTIONS for Haulage, Winding, Balance Ropes, Power Transmission, Oil Boring, Logging, Salvage Work, Slings, Hawsers, Cargo Falls, Trawl Warps, etc.


SPECIAL NON-ROTATING FLATTENED STRAND ROPES for Giant Cranes in Ordnance Works and Shipyards—Launching Checks of Highest Tensile Stress.



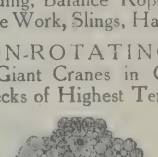
No. 48 Flattened Strand Haulage Rope.



No. 49 Flattened Strand Winding Rope.

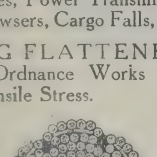

No. 75 Sinking Rope (Non-Rotating).

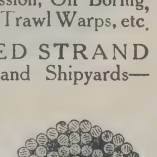

No. 108 Flattened Strand (Non-Rotating).

JOHN & EDWIN WRIGHT, Ltd.,

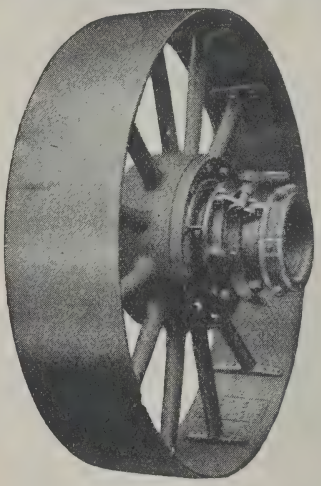
Universe Wire Rope Works, BIRMINGHAM, England.
London Office: Salisbury House, London Wall, E.C. 2.

See Articles on Flattened Strand Ropes and on Locked Coil Ropes, pages 2193–2195.

THE

BRITISH HELE-SHAW PATENT CLUTCH CO., Ltd.,

SUTHERS STREET, OLDHAM.



PULLEY TYPE

Accurately Balanced.

Gradual Engagement.

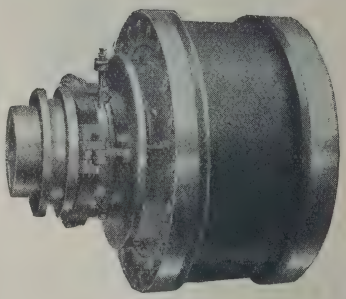
Absolute Grip.

As used in every class of Engineering.

Electric Transmissions.

Gas Engines.

Mining, Conveying, etc.



STANDARD COUPLING

From 1 to 1500 H.P. at 100 revs. per min.

Catalogue & prices upon application.

F 855

The Weston Friction Coupling.

This device is probably more frequently used as a brake than as a clutch, but is equally suitable for both purposes. In the design shown in fig. 23, the muff A is keyed to the shaft S, but can be moved along the same by means of a fork which fits into the groove at the right-hand end. This muff A is provided with several feathers F around its inside surface (or the inside surface

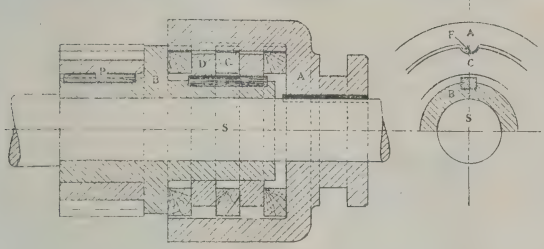


Fig. 23.

may be hexagonal), and into these are fitted the annular discs C. These discs are sometimes made of hard wood, but may be of iron. The member B, riding freely upon the shaft S, has a pinion P (or pulley) keyed to the outer end, and the metal rings D keyed to the sleeve. The rings D are free to move longitudinally along the sleeve, and are clear of the feathers F. Similarly the discs C are clear of the key in the sleeve B. On pressing A forward the axial force P is exerted on each of the rubbing faces and the frictional or turning effort increases with the number of rings.

The principle of the Benn and Hele-Shaw clutches is identical with the above.

The Hele-Shaw Clutch.

In this form of clutch, fig. 24 (for motor cars), all the plates have driving notches either on their outer or inner circumference. The outer plates, which are made of high-grade phosphor bronze, are driven by the engines, and the inner plates of mild steel drive the clutchshaft and so transmit the power to the gear-box. The clutch case, marked A, is bolted to the flywheel and so revolves with the engine. Around the inner side of this case there are teeth or feathers which engage with the notches in the outer (phosphor bronze) plates, so that these outer plates always revolve with the engine. Supported by a ball bearing on the end of the crankshaft is a steel core shown at B, which is connected with the clutch shaft C. This core, like the case, has driving teeth, but on the outer side, and these engage with the inner (steel) plates. There is a sleeve D sliding on the shaft and ending in a disc E, which presses the inner and outer plates together. This presser, as it is called, is normally kept tight against the plates by the pressure of the main clutch spring F, the other end of which is held by the spring adjusting cap G, screwed into the boss on the end of the case. In this way it is arranged that no thrust is exerted on the engine or the gear-box while the clutch is engaged. The spring adjuster is locked in position by the peg spring H, which can be raised out of engagement while the spring pressure is altered by screwing up the adjuster.

While the full spring pressure is keeping the outer and inner plates pressed together, the power of the engine will be transmitted to the gear-shaft.

To disengage the clutch the presser is moved back by means of the actuator K, to take the pressure off the plates. This actuator has two pins engaging with the pedal levers below the foot pedal; the motion is transmitted to the presser through the ball-bearing and the lock nut M. This latter is prevented from slacking back by a simple locking device.

When the pressure has been taken off the plates, these might tend to stick together on account of the oil. To prevent this, the outer plates are fitted with small flat springs which are in compression when the clutch is engaged. When the presser slides back, the small springs throw the outer plates apart and make the clutch quite free. Occasional breakages of these springs having occurred after prolonged use, a new type of laminated spring, which is quicker in action and as durable as the plates themselves, is now being fitted.

In plate clutches of every form there is inevitably a slight drag, caused by the skin friction of the film of oil between the plates, which tends to keep the clutch shaft revolving when the clutch is out of gear. To mesh first speed or reverse, it is necessary that this shaft should be stopped; accordingly the actuator terminates in a cone which presses up against a corresponding coned part P revolving with the shaft. This constitutes a powerful clutch brake and frees even the largest size of clutch without difficulty. The coned brake piece is made adjustable to allow for wear of the plates.

When the clutch is let in slowly the slight friction caused by the oil between the plates tends to slowly start the car moving, and this starting effort increases till the whole of the spring pressure comes upon the plates. The oil is then forced out from between the surfaces and the plates come into close contact, forming a solid pack and transmitting the full power of the engine.

In practice it is found that the V-grooved twin plates are approximately three times as powerful as the same number of flat plates under the same pressure, and hence for the same work require but one-third of the spring pressure, or pedal pressure, to declutch. The plates being well separated right up to the point of work, and then only touching at the side of the V-grooves, free circulation of oil and extremely rapid dissipation of heat are ensured, so that the plates never burn the oil and may be engaged indefinitely without causing undue heat, whilst their working condition


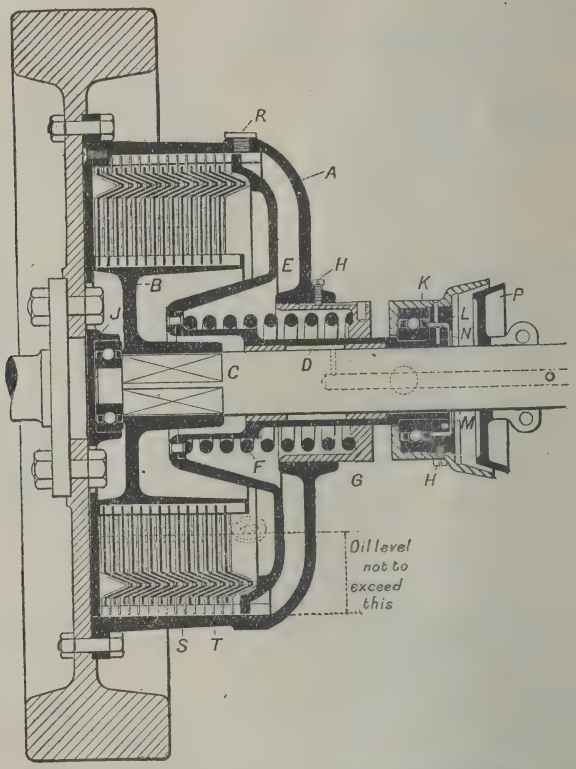


FIG. 24.—Sectional Elevation of the 'Hele-Shaw' Clutch bolted in position on Flywheel.

A, outer dust-proof case which forms oil bath; B, steel core; C, clutch shaft; D, actuating sleeve; E, presser; F, central control spring; G, adjusting nut; H, locking screws; J, retaining plate; K, actuator; L, external check nut; M, internal check nut; N, locking device; P, clutch brake; R, oil plugs; S, driven steel disc; T, driving bronze disc.

always remains constant. Further, in industrial work the clutch is capable of long-period slipping as part of its regular work. The V-groove in the twin plates adds so greatly to their transverse strength that buckling and distortion are impossible. Even under the most unfavourable working conditions, such as when through accidental loss of oil extreme heat is set up, the V-grooved plates still retain their shape.

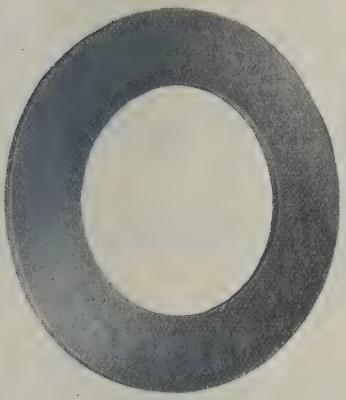The clutches are also made of a light type in which the outer case and liner with its teeth, also the presser, actuator, and other parts, are made by a patented process from pressed steel in place of being cast as in the standard patterns.



Rolling Mill
to
Motor Scooter

1. A Friction Clutch to transmit 300 H.P. for a Rolling Mill.

2. A Multi-Disc Clutch to transmit 1 H.P. for a Motor Scooter.

These are two of enquiries showing how widely diverse may be the application of Ferodo Friction Linings for the transmission of power.

Engineers will be interested in particulars of No. 1 The clutch was of the peripheral internal expanding type to transmit 300 H.P. at 8 r.p.m.—the torque being nearly 200,000 foot pounds, necessitating a pressure of 90 lbs. per square inch. Total pressure 80 TONS. We were able successfully to apply our Ferodo Linings for the very heavy duty required.

FERODO
FRICTION LININGS
REG

FOR HEAVY OR LIGHT DUTY

FERODO LTD., Chapel-en-le-Frith

Depots at London, Birmingham, Bristol, Leeds, Belfast, Swansea, Cardiff Coventry, Edinburgh, Glasgow, Liverpool, Manchester and Newcastle.

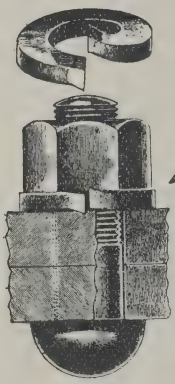
F. 856

'KOLOK'
Positive Lock Washer

PROVIDES FOR

VIBRATION AND EXPANSION.

□ □ □



USED EXTENSIVELY

IN THE WORKSHOP ::

ON LAND :: :: :: ::

UNDER THE GROUND

IN THE AIR :: :: ::

ON THE SEA :: :: ::

UNDER THE SEA :: :

The loss of one nut may cost you hundreds of pounds and many valuable lives.

Avoid Accidents by using the 'KOLOK' POSITIVE LOCK WASHER.

Made and Sold in 12 months, 153,000,000

POSITIVE LOCK WASHER CO.,

20/24 JAMES WATT STREET, GLASGOW.

F. 857

The Benn Friction Clutch.

In this clutch (Type H), fig. 25, the friction plates move axially, practically bear against the entire faces of the drum, and are continuous. As a result of this construction the

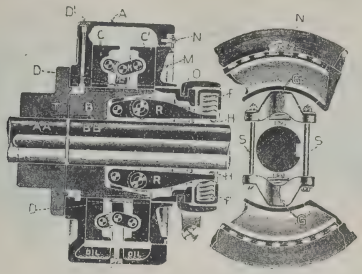


Fig. 25.

diameter, for a given power, is relatively small. As the movements of the plates are axial and not radial, they are unaffected by centrifugal force and the drum being relieved from bursting strains the clutch is suitable for high speeds. The lever stops H, as they approach, show at a glance the amount of wear and compensation, for this can be made by screwing in the plate M one or two notches. By screwing out the ring M and slacking back two set screws, the interior parts can be withdrawn without disturbing the shafts or parts keyed thereto.

The construction and action of the clutch is as follows :—

The boss T of drum A is keyed to the shaft AA, and the driving boss B to the shaft BB. On the driving boss B, the friction plates CC' are free to slide on feathers DD. These plates CC are connected by toggles KK, which, in turn, are connected by radial links LL to the levers RR. The ends of these levers RR carry compression springs FF, having their outer ends seated in the yokes GG. These yokes are connected to each other by the bolts SS, thus forming an equalising member, which absolutely *ensures uniform pressure* between all friction surfaces throughout the clutch. The cover M, forming one end of the drum, is accurately adjustable, and is notched to receive the lock plate N. The lever stops HH are to enable the position of the toggles KK to be ascertained from outside the drum.

The fig. shows the condition of the clutch when engaged, i.e., the plates bearing against M and A, the muff O in its inmost position, springs F in compression, the toggles KK in their most advantageous position (nearly straight), and the clutch locked by the radial link L being beyond the centre. On withdrawing the muff O the link L is pulled towards the right, the toggles KK are drawn towards the centre, and the plates C withdrawn from the drum faces.

The Johnson Friction Clutch.

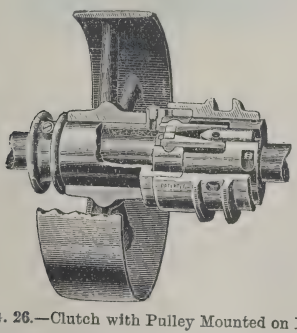


Fig. 26.—Clutch with Pulley Mounted on Hub.

This clutch, figs. 26, 27, consists of a body fastened to the shaft and carrying a split ring into which are inserted a pair of levers. A curved shaped wedge, which is made part of a sliding sleeve, forces the levers apart, expands the ring, bringing its outer surface into frictional contact

the driving plate lugs, whilst the other is free to be operated. A sliding member (*d*) is mounted on the shaft beyond the drum, its function being to pull the free end of the coil through a steel lever (*e*), which is pivoted on an extension of the driving place (*c*), and engages the free end of the coil.

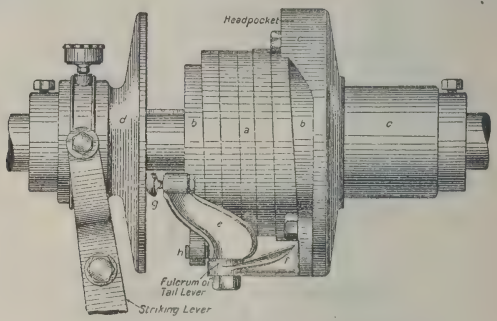


FIG. 30.

In engaging the clutch, the plate (*d*) is moved towards the drum, thereby tilting the lever (*e*) and tightening the free end of the coil, which is contracted and gradually tightens on to the drum (*b*), causing the different members of the clutch to be locked together. The action is similar to that of a man tightening the free end of a rope on a revolving capstan.

The clutch, made by the Coil Clutch Co. Ltd., Johnstone, is simple in construction and compact, and is used in colliery haulage gear, heavy cranes, and rolling mills.

Magnetic Clutches.

These consist of two members—the field or driving member, which carries the magnetising winding, and the armature, or driven member. In the design, by the Igranic Electric Co., shown in fig. 31, these members are carried on the face of annular spring steel plates attached to the

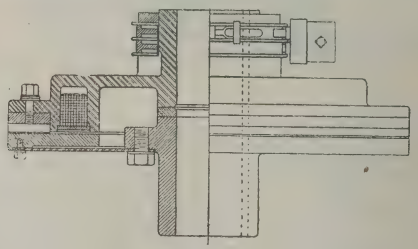


FIG. 31.

driving and driven hubs. Normally the members are held apart, but when the current is supplied to the windings of the field member they are magnetically drawn together, the flexibility of the spring steel plates allowing the necessary movement. The power is then transmitted entirely by the friction. The engaging surface, fitted externally to the poles of the field member, is composed of woven asbestos and brass wire, and stands proud of the pole faces so as to prevent these coming into contact with the armature. This type of clutch can pick up the load gradually, and can be controlled from remote positions.

In selecting a clutch, attention must be given to the starting torque required in overcoming the inertia of the part, means of stopping quickly in case of accident, and the effect of centrifugal forces on engaging parts in retarding their release or in throwing the members out of action.

Friction Surfaces.

In friction clutches the mating surfaces are sometimes of special materials in order to increase the grip. These materials are usually secured to the body of the clutch by pins, and trouble occasionally arises through the pins shearing. Preferably the fabric should be secured to the body with brass bolts. For low speeds and light pressures wooden surfaces are very suitable, but under opposite conditions the wood becomes charred. When the mating surfaces are of steel one of these should be casehardened. Steel should not be used with cast iron unless the latter has been chilled. In general close grained cast iron on cast iron gives the best results. A soft material should not be used with a metal which tends to crumble, as hard particles of the latter get imbedded in the former, and severe scoring results.

(*Dempster Smith.*)

Ferodo Friction Linings.

Description.

Ferodo Friction Linings (*Ferodo Ltd.*) are fabrics of distinct forms, i.e. fibre cotton base, and bonded asbestos, the object and use of each being to provide a surface which in rubbing contact with metal gives a high coefficient of friction which rises with the temperature and is not physically affected by the presence of oil or water—in fact, a damp or greasy surface improves the durability of Ferodo friction linings, but decreases their frictional value in proportion to the quantity and nature of the lubricant present.

Tests.

Tests on Ferodo fibre prove the average coefficient of friction to be 0·5; the maximum obtained being 0·7—the temperature limit for the fabric being about 400° F.; the material has great mechanical strength and wearing qualities.

Tests on Ferodo bonded asbestos prove the average coefficient of friction to be 0·3 and that the efficiency of the fabric is maintained at any temperature up to 500° F. (260° C.).

Clutches.

Ferodo fabric forms a clutch lining which does not *seize* and which allows a gentle engagement even when the surfaces are greasy or wet. In the case of a cone clutch lined with Ferodo fabric, included angles of 24° to 34° are recommended, owing to the high coefficient of friction.

For flat-plate clutches, Ferodo friction linings are made up in the form of circular discs, made either jointless or with a butt joint stitched with fine soft metal wire.

SECTION XVIII

PART II

CHAIN GEARING.

(Association of British Driving Chain Manufacturers.)

The adaptability and high efficiency of chain gearing for the transmission of power is now extensively recognised. Although the advantages of chain driving are not yet fully appreciated, the attention of power users and engineers when considering methods of transmission should be directed towards embodying chain drives of suitable type.

Although belts, ropes, and the several forms of toothed wheel gearing will always have their place, chain drives can in many cases be employed with greater advantage. Chain gearing ensures a positive transmission, at the same time affording a beneficial measure of elasticity. The efficiency of a well-designed chain drive is very high, the loss of power in many cases not exceeding 2 per cent. throughout the useful life of the chain and wheels. Thus, chain gearing has a higher maintained efficiency than any other form of transmission.

The initial tension required with a belt is unnecessary with a chain, and the bearing friction due to it is therefore eliminated.

Chain drives can be used under very varying conditions in respect of:—(*a*) Speed ratios, which can be readily modified; (*b*) centres of shafts. Chain gearing can be used at centres which are too long for spur gears and too short for belts or ropes; (*c*) nature of the load; (*d*) temperature; (*e*) humidity; (*f*) power to be transmitted.

TYPES OF CHAINS.

The two general types of power transmission chains are shown by figs. 1 and 2. Speaking generally the Inverted Tooth type is used for high-speed drives, and the Bush Roller type for medium and low speeds.

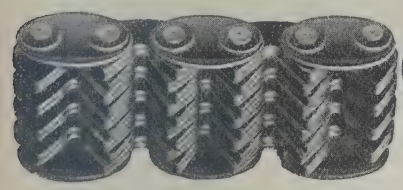


FIG. 1.—Inverted Tooth Type.
(Known as Silent or Noiseless.)

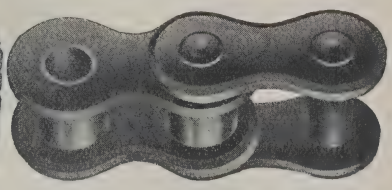


FIG. 2.—Roller Type.

DESIRABLE CONDITIONS FOR APPLICATION OF CHAIN GEARING.

The following statement, prepared by the Association of British Driving Chain Manufacturers, shows the approximate limits that usually obtain in the economical application of chain gearing. Where circumstances do not permit its application within these limits, the chain manufacturer should be consulted.

GEAR RATIO (maximum): Roller Type, 7 : 1; Inverted Tooth Type, 6 : 1.

Chain Speed.

Normal maximum, assuming the number of teeth is 19 for roller type and 21 for inverted tooth type :—

Pitch.	Roller type feet per min.	Inverted tooth type feet per min.
Up to ½ in. pitch	1,000	1,500
⅝ in. and ¾ in. „	900	1,400
1 in. and 1¼ in. „	800	1,350
1½ in. and 1¾ in. „	700	1,300
2 in. and 2½ in. „	600	1,250
3 in. „	500	1,200

Number of Teeth in Wheels.

Minimum	Roller type	17	Inverted tooth type	19
Maximum	„	120	„ „ „	120 *

In cases where the chain speed is substantially less than that shown above, for any given pitch, the number of teeth in the pinion may be reduced.

Centre Distance between Shafts.

The maximum centre distance between chain wheels is governed by so many considerations, such as inclination, nature of load, size of wheel, etc., that it is difficult to lay down any general rule. The following limiting values for ordinary conditions and steady loads are therefore liable to considerable variation in individual circumstances.

(*a*) *Desirable Maximum Centre Distance.*

(Expressed in Pitches of Chain.)

Pitch of Chain.	Type of Chain.	
	Roller.	Inverted Tooth.
⅜ in. to ¾ in.	100	70
1 in. to 1¾ in.	85	60
2 ins. upwards	70	50

With inclined drives with the wheel higher than the pinion, and with an inclination up to 60°, the horizontal component of the actual centre distance should not exceed the foregoing values.

In the case of vertical drives, and those with an inclination approaching the vertical, the chain manufacturers should be consulted.

(*b*) *Desirable Minimum.*—The centre distance should be such that the arc of contact between the chain and any wheel is not less than 120°, and with at least 7 teeth in engagement.

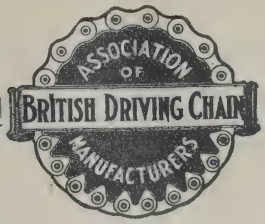
(*c*) *Adjustment.*—It is advisable to provide suitable means for the adjustment of the centre distance, and the normal minimum amount of this adjustment should be 1½ times the pitch of the chain.

In some cases adjustment can only be obtained by the use of a jockey wheel, which must engage with the slack side of the chain and have machine-cut teeth.

(*d*) *Chain Length.*—It is desirable that the number of pitches in the chain should not be a multiple of the number of the teeth in either the pinion or the wheel.

---

* This applies only to inverted tooth chains with a profile based on a 60° link face angle.



CHAIN GEARING

NO other form of power transmission maintains such a high standard of efficiency as Chain Gearing. Whilst positive in its action, chain gearing affords a beneficial measure of elasticity, and is operative without the initial tension that is required for belts, thereby reducing bearing friction to a minimum.

The adaptability, durability, reasonable initial cost, and maintained efficiency makes chain gearing the ideal transmission for power users.

Enquiries for Chains, Wheels and Cutters, should be submitted to the individual members of the Association. (See Overleaf.)

ASSOCIATION OF
BRITISH DRIVING CHAIN
MANUFACTURERS,
Bassishaw House, Basinghall Street, London, E.C. 2.

F. 864

ASSOCIATION OF BRITISH DRIVING CHAIN MANUFACTURERS

CHAIN GEARING

THE MOST EFFICIENT means of transmitting the maximum amount of power under almost any conditions and at a minimum maintenance expense

Members of A.B.D.C.M.	Sections
BRAMPTON BROS. LTD., Birmingham 'THE COVENTRY' CHAIN Co. Ltd., Coventry HANS RENOLD, Ltd. ..... Manchester	Cycle and Motor Cycle Heavy Roller and Inverted Tooth
ALFRED APPLEBY CHAIN Co. Ltd., Birmingham PERRY & Co. Ltd. ..... Birmingham	Cycle and Motor Cycle

ASSOCIATION OF
BRITISH DRIVING CHAIN
MANUFACTURERS.
Bassishaw House, Basinghall Street, London, E.C. 2.

Disposition of Drives and Direction of Rotation.

Drives may be arranged to run horizontally, inclined, or vertical.

In the case of an inclined drive with the pinion on top, the maximum angle of inclination should approximate 45° from the horizontal.

In cases where the inclination of the drive exceeds 45°, the large wheel should preferably be on top.

In the case of vertical drives adjustment must be provided and carefully attended to.

The direction of rotation should be such that the tight or driving side of the chain is on top.

Clearance.

(In Inches.)

The minimum radius of clearance for that portion of the chain which is in contact with the wheels should be

$$\frac{\text{Pitch diameter} + 3\ (\text{pitch})}{2}.$$

The clearance for sag should be greatest at a point somewhere midway along the free portions of the chain, and this clearance should be allowed for both above and below each free portion of chain.

The minimum amount of clearance is

$$\frac{\text{Centre distance between wheels (in inches)}}{12} + \tfrac{1}{4}\text{ in.}$$

The total amount of side clearance for any chain drive may be found by the following formula:

$$\frac{\text{Centres of wheels (in inches)}}{30} + \frac{1}{2 \times \text{width of chain (in inches)}}.$$

This total amount of clearance should in general be equally divided on either side of the chain.

Lubrication.

Lubrication of the working joints is essential for chain gearing.

The most efficient form of lubrication is to enclose the drive in a case and pump a constant stream of oil on to the inside faces of the chain from a filter sump. An alternative arrangement is to run the chain through oil. Where the pinion is below, and is too small to allow the chain to run through oil, an oil thrower disc of a larger diameter than the pinion may be utilised.

For speeds up to 1,000 feet per minute a drip-feed lubricator may be used, fixed so that the oil drips regularly on to the inner face of the chain. A light or medium machine oil should be used, and one drip pipe provided for every 3 in. of chain width. A splash guard or case may be necessary for this method of lubrication.

For slow-running chains up to 500 feet per minute satisfactory lubrication can be obtained by removing the chain periodically, and, after thoroughly cleansing with paraffin, immersing it in a bath of warm mineral oil or grease for such a time as to allow the lubricant to penetrate to the rivets.

Chain gearing should not be unduly exposed to damp or dirt.

Sternol Chain Grease.

(*Sterns, Ltd.*).

This is a new grease recently put on the market to suit marine chain drives. It is claimed to be greatly superior to greases manufactured on a graphite basis.

Erection.

Chain wheels must be rigidly mounted on shafts which are parallel and truly horizontal, and the teeth of the wheels must be in correct alignment.

Where possible, wheels should be placed close to bearings, and must run true on their shafts.

Care should be taken that the chain connection is properly secured.

Before starting up the drive the chain should be adjusted to the correct tension and lubricated.

Maintenance.

Periodic examination is advisable to ascertain:

(*a*) If correct alignment of the wheels has been maintained; (*b*) if undue wear is taking place; (*c*) if adjustment of chain tension is needed; (*d*) if the chain requires cleaning; (*e*) if lubrication is being effectively carried out.

Improved service usually results when chains are removed from time to time for cleaning. They should be washed with paraffin and, after draining, thoroughly lubricated before being again used.

When fitting new chains, always ascertain that undue wear has not taken place on the teeth of the wheels.

The Association Standards for Roller Type Chains.

The Association has effected the standardisation of roller chains and wheel-tooth widths as used for power transmission generally. The Association Standards are as follows :—

Roller Type up to ¾ in. pitch.

Association Chain No.		Pitch.	Max. Roller Dia.	Min. Width between Plates.		Min. Depth of Shroud below Roller Seating.	Max. Tooth Width.	
Narrow.	Wide.			Narrow	Wide.		Narrow.	Wide.
		In.	In.	In.	In.	In.	In.	In.
3 N	3 W	⅜	0·250	0·155	0·230	0·070	0·145	0·220
Cycle Sizes.		½	0·305	0·130	0·192	0·050	0·120	0·182
4 N	4 W	½	0·335	0·205	0·305	0·094	0·195	0·295
5 N	5 W	⅝	0·400	0·255	0·380	0·117	0·245	0·370
6 N	6 W	¾	0·475	0·310	0·460	0·140	0·295	0·445

Roller Type 1 in. Pitch and Upwards.

Association Chain No.		Pitch.	Maximum Roller Diam.	Minimum Width between Plates.		Minimum Depth of Shroud below Roller Seating.	Maximum Tooth Width.	
Narrow.	Wide.			Narrow.	Wide.		Narrow.	Wide.
		In.	In.	In.	In.	In.	In.	In.
8 N	8 W	1	0·625	0·410	0·625	0·19	0·390	0·600
10 N	10 W	1¼	0·780	0·510	0·780	0·23	0·490	0·750
12 N	12 W	1½	0·940	0·615	0·940	0·28	0·585	0·900
14 N	14 W	1¾	1·100	0·715	1·100	0·33	0·685	1·050
16 N	16 W	2	1·250	0·820	1·250	0·375	0·780	1·200
20 N	20 W	2½	1·550	—	1·560	0·47	—	1·500
24 N	24 W	3	1·900	—	1·875	0·56	—	1·800

Cutter Forms for Roller Type Chains.

For the convenience of chain users and to ensure complete interchangeability, the Association has standardised tooth forms which, while not being identical with any of the existing forms,

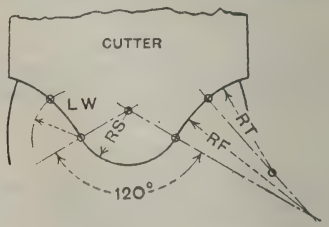


Fig. 3.

incorporates the essential features of each. The general construction is shown in fig. 3. It consists of a *roller seating*, *working faces*, and *topping curves*, all of which are arcs of circles.

The angle of 120° subtending the roller seating has its origin at the centre of the diameter of the roller seating. The working faces are comparatively flat curves tangential to the roller seating, and the topping curves are tangential to the working faces and of such a radius as to give a suitable height of tooth. The dimensions of tooth forms for the Association Standard Chains are given in the following table:


Roller Diameter.	Cutter No.	No. of Teeth to Cut.	Length of Working Face. L.W.	Radius of Roller Seating. R.S.	Radius of Working Face. R.F.	Radius at Top of Tooth. R.T.
Ins.			In.	In.	Ins.	Ins.
0·250	1	9–12	—	0·126	0·45	0·45
	2	13–19	0·12	0·126	1·125	0·18
	3	20 and over	0·154 min.	0·126	3·825 min.	0·052 max.
0·305	1	9–12	—	0·154	0·6	0·6
	2	13–19	0·16	0·154	1·5	0·24
	3	20 and over	0·205 min.	0·154	5·1 min.	0·07 max.
0·335	1	9–12	—	0·169	0·6	0·6
	2	13–19	0·16	0·169	1·5	0·24
	3	20 and over	0·205 min.	0·169	5·1 min.	0·07 max.
0·400	1	9–12	—	0·202	0·75	0·75
	2	13–19	0·20	0·202	1·875	0·3
	3	20 and over	0·256 min.	0·202	6·375 min.	0·087 max.
0·475	1	9–12	—	0·240	0·9	0·9
	2	13–19	0·24	0·240	2·25	0·36
	3	20 and over	0·307 min.	0·240	7·65 min.	0·105 max.
0·625	1	9–12	—	0·316	1·2	1·2
	2	13–19	0·32	0·316	3·0	0·48
	3	20 and over	0·41 min.	0·316	10·2 min.	0·14 max.
0·780	1	9–12	—	0·394	1·5	1·5
	2	13–19	0·40	0·394	3·75	0·6
	3	20 and over	0·512 min.	0·394	12·75 min.	0·175 max.
0·940	1	9–12	—	0·475	1·8	1·8
	2	13–19	0·48	0·475	4·5	0·72
	3	20 and over	0·615 min.	0·475	15·3 min.	0·21 max.
1·1	1	9–12	—	0·556	2·1	2·1
	2	13–19	0·56	0·556	5·25	0·84
	3	20 and over	0·717 min.	0·556	17·85 min.	0·245 max.
1·25	1	9–12	—	0·631	2·4	2·4
	2	13–19	0·64	0·631	6·0	0·96
	3	20 and over	0·82 min.	0·631	20·4 min.	0·28 max.
1·55	1	9–12	—	0·783	3·0	3·0
	2	13–19	0·80	0·783	7·5	1·2
	3	20 and over	1·025 min.	0·783	25·5 min.	0·35 max.
1·9	1	9–12	—	0·960	3·6	3·6
	2	13–19	0·96	0·960	9·0	1·44
	3	20 and over	1·23 min.	0·960	30·6 min.	0·42 max.

WHEELS.

It is of the utmost importance that chain wheels should have their teeth accurately machined with cutters of correct form. Pinions should preferably have an odd number of teeth to equalise wear on the chain.

(*a*) *Section Profile of Teeth for Roller Chains.*—Chain wheel blanks should be machined as indicated in fig. 4.

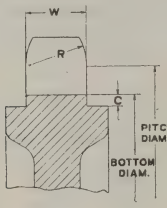ASSOCIATION TOOTH PROFILE
FOR STANDARD ROLLER CHAINS



W = Width between inside plates minus 0·02 pitch.

R = Roller diameter.

$C = \frac{3 \times \text{pitch}}{16}$

Bottom diam. = Pitch diam. minus max. roller diam.

FIG. 4.

(*b*) *Pitch Diameters.*—The following table gives correct pitch diameters for all types of chain having a pitch of 1 in. The pitch diameters for wheels to suit other pitches of chain are directly proportional to the pitch of the chain.

No. of Teeth.	Pitch Diam.	No. of Teeth.	Pitch Diam.	No. of Teeth.	Pitch Diam.	No. of Teeth.	Pitch Diam.	No. of Teeth.	Pitch Diam.	No. of Teeth.	Pitch Diam.
9	2·924	24	7·661	39	12·428	55	17·517	71	22·607	86	27·381
10	3·236	25	7·979	40	12·746	56	17·835	72	22·926	87	27·699
11	3·549	26	8·296	41	13·063	57	18·153	73	23·244	88	28·017
12	3·864	27	8·614	42	13·381	58	18·471	74	23·562	89	28·335
13	4·179	28	8·931	43	13·700	59	18·789	75	23·880	90	28·654
14	4·494	29	9·249	44	14·018	60	19·107	76	24·198	91	28·972
15	4·810	30	9·567	45	14·336	61	19·425	77	24·517	92	29·290
16	5·126	31	9·885	46	14·654	62	19·744	78	24·835	93	29·608
17	5·442	32	10·202	47	14·972	63	20·062	79	25·153	94	29·927
18	5·759	33	10·520	48	15·290	64	20·380	80	25·471	95	30·245
19	6·076	34	10·838	49	15·608	65	20·698	81	25·790	96	30·563
20	6·392	35	11·156	50	15·926	66	21·016	82	26·108	97	30·881
21	6·710	36	11·474	51	16·244	67	21·335	83	26·426	98	31·200
22	7·027	37	11·792	52	16·562	68	21·653	84	26·744	99	31·518
23	7·344	38	12·110	53	16·880	69	21·971	85	27·063	100	31·836
				54	17·198	70	22·289				

(*c*) *Limits of Accuracy for Cutting.*—The tolerance for the bottom diameter of the tooth gaps may be 0·1 per cent. of the number of inches of the pitch diameter, but in any case, shall be within the following limits:

Minimum tolerance, 0·005 in.; maximum tolerance, 0·020 in.

The foregoing only deals with normal practice and relatively steady loads. Chain gearing is being used satisfactorily under conditions outside those here defined. Inquiries relative to special drives, impulsive loads, or any abnormal conditions, should be referred to the chain manufacturers.

THE WESTINGHOUSE MORSE ROCKER-JOINT CHAIN.

(*The Westinghouse Morse Chain Co. Ltd.*)

These chains, fig 5, form an important departure in silent chain driving Until their introduction the principal objection to chains was found in the rapid wear and consequent stretch. This is necessarily present with all chains having round joint-pins, friction due to sliding surfaces being unavoidable. A very ingenious feature is the joint, which consists of two pieces, fig. 7,

i.e. the rocker and seatpin, the former being provided with a knife edge which rocks on the face of the latter when the joint passes on or off the wheel. The bearing surface extends throughout the width of the chain. The pins for all practical purposes are an integral part of the link, fig. 6,

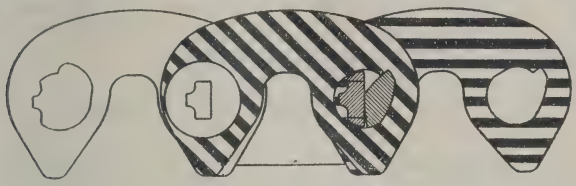


FIG. 5.

hence the only motion which takes place at the joint is a rocking movement. This ensures absence of sliding friction, which means the reduction of wear at the joint to the minimum, with consequent maximum life and efficiency. The shape of the tooth permits silent running, even under high speed.

Another important departure in the Westinghouse Morse chain drive is that represented by the No. 25 reinforced type chain—shown in fig. 8. In this construction the outer links are all knit together by short rivets and spacing pieces, adding very considerably to the material strength of the chain; also distributing the load more equally, and enabling the chain to run at higher speeds than has hitherto been possible.

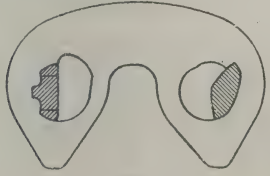


FIG. 6.

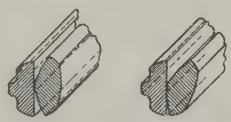


FIG. 7.

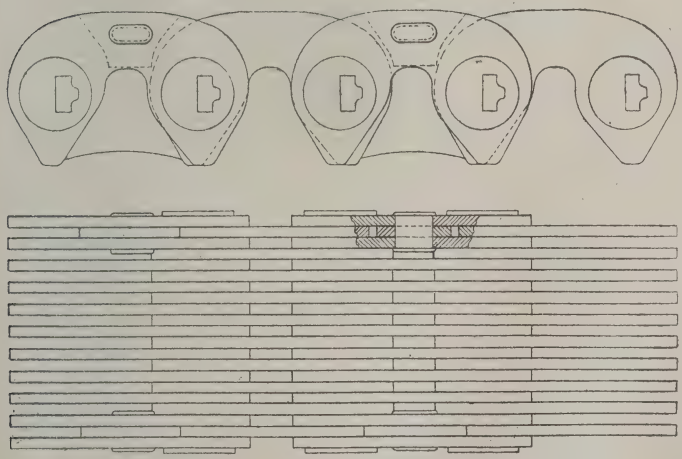


FIG. 8.

The greatest ratio of gearing under favourable conditions with the Westinghouse chains is 10 : 1. The following table gives the various pitches manufactured and the maximum permissible R.P.M. (revolutions per minute) for each:

Max. R.P.M.	2,000	1,600	1,400	1,100	1,000	800	700	600	400	250
Pitch in ins.	½	⅝	¾	·9	1	1·2	1·25	1·5	2	3

The chain width depends on the speed, determined as follows :—

$$\text{Speed} = \frac{N \times P \times \text{R.P.M.}}{12} = \text{F.P.M.} \qquad \text{Load} = \frac{\text{H.P.} \times 33{,}000}{\text{F.P.M.}} = \text{total load on chain in lbs.}$$

where

H.P. = Maximum horse-power ; P. = Circular pitch in inches ;
N = No. of teeth ; F.P.M. = Feet per minute.

This total load divided by the load per inch width advised gives the width of the chain.

Average permissible loads per inch in width for general machine-shop drives are as follows :—

Lbs. per inch wide	65	80	95	120	135	160	190	220	350	600
Pitch in ins.	½	⅝	¾	·9	1	1·2	1·25	1·5	2	3

Good chain speeds for average machine-shop drives are from 1,200 to 1,500 ft. per min.

As no friction due to sliding surfaces takes place, however, Westinghouse chains can be run at speeds which would, owing to centrifugal force, throw off all lubricant, and drives of this make are now transmitting light loads satisfactorily at 3,000 ft. per min. chain speed.

In view of its special joint construction, the Westinghouse Morse rocker-joint chain is claimed to surpass all others in point of size and strength, and the fact of being able to manufacture so large a size of silent chain as the 3-in. pitch in widths up to 24 ins. has resulted in such chain drives being applied for transmissions up to even 5,000 h.p. in a single drive.

The Westinghouse Morse chains are made in nineteen different types and pitches by the Westinghouse Morse Chain Co. Ltd., The Chaineries, Letchworth, Herts, and single drives can be furnished for transmitting from ¼ h.p. up to 1,000 h.p.

SECTION XVIII

PART III

TOOTH GEARING.

The word 'diameter,' when applied to gears, is always understood to mean the pitch diameter.

Diametral pitch of the gear is the number of teeth to each inch of its pitch diameter.

If a gear has 40 teeth and the pitch diameter is 4 ins., there are ten teeth to each inch of the pitch diameter, and the diametral pitch is 10, or in other words, the gear is 10 diametral pitch.

Circular pitch is the distance from the centre of one tooth to the centre of the next tooth, measured along the pitch circle.

If the distance from the centre of one tooth to the centre of next tooth, measured along the pitch circle, is $\frac{1}{2}$ in., the gear is $\frac{1}{2}$ in. circular pitch.

The diametral pitch given, to obtain the circular pitch divide 3·1416 by the diametral pitch.

If the diametral pitch is 4, divide 3·1416 by 4, and the quotient, ·7854 in., is the circular pitch.

The circular pitch given, to obtain the diametral pitch divide 3·1416 by the circular pitch.

If the circular pitch is 2 ins., divide 3·1416 by 2, and the quotient, 1·5708, is the diametral pitch.

The number of teeth and the diametral pitch given, to obtain the pitch diameter divide the number of teeth by the diametral pitch.

If the number of teeth is 40, and the diametral pitch 4, divide 40 by 4, and the quotient, 10, is the pitch diameter.

The number of teeth and the diametral pitch given, to obtain the whole diameter or size of blank of gear, add 2 to the number of teeth and divide by the diametral pitch.

If the number of teeth is 40, and the diametral pitch is 4, add 2 to the 40, making 42, and divide by 4 ; the quotient, $10\frac{1}{2}$, is the whole (or outside) diameter of the gear or blank.

The number of teeth and the diameter of the blank given, to obtain the diametral pitch add 2 to the number of teeth and divide by the diameter of the blank.

If the number of teeth is 40 the diameter of the blank is $10\frac{1}{2}$ ins., add 2 to the number of teeth, making 42, and divide by $10\frac{1}{2}$; the quotient, 4, is the diametral pitch.

The pitch diameter and the diametral pitch given, to obtain the number of teeth multiply the pitch diameter by the diametral pitch.

If the diameter of the pitch circle is 10 ins., and the diametral pitch is 4, multiply 10 by 4 and the product, 40, will be the number of teeth in the gear.

The whole diameter of the blank and the diametral pitch given, to obtain the number of teeth of the gear multiply the diameter by the diametral pitch and subtract 2.

If the whole diameter is $10\frac{1}{2}$ and the diametral pitch is 4, multiply $10\frac{1}{2}$ by 4, and the product, 42 less 2, or 40, is the number of teeth.

The thickness of a tooth at the pitch line is found by dividing the circular pitch by 2, or divide 1·57 by the diametral pitch.

If the circular pitch is 1·047 inch, or the diametral pitch is 3, divide 1·047 by 2, or 1·57 by 3, and the quotient, ·523 inch, is the thickness of tooth.

The whole depth of a tooth is found by dividing 2·157 by the diametral pitch.

If the diametral pitch of a gear is 6, the whole depth is 2·157 divided by 6, equals ·3595.

The whole depth of a tooth is about $\frac{11}{10}$, or exactly ·6866 of the circular pitch.

If the circular pitch is 2, the whole depth of tooth is about $1\frac{1}{10}$ of 2 ins., or $1\frac{3}{8}$ in. nearly.

The distance between the centres of two gears is found by adding the number of teeth together, and dividing half the sum by the diametral pitch.

If two gears have 50 and 30 teeth respectively, and are 5 pitch, add 50 and 30, making 80, divide by 2, and then divide the quotient, 40, by the diametral pitch, 5, and the result, 8 ins., is the centre distance. (*Brown and Sharpe.*)

The foregoing definition of the *diametral pitch*, which may also be expressed as the number of teeth in the wheel divided by the pitch circle diameter, is very commonly used. Others again understand the diametral pitch to be the reciprocal of the above, viz. pitch circle diameter divided by the number of teeth, and this definition appears to be the most logical one. Where the latter definition is used, the quantity, 'number of teeth divided by the diameter,' is known as the 'pitch number,' and is written, '4's pitch,' or '5's pitch,' as the case may be.

On the continent of Europe the 'Module' is commonly adopted. All dimensions are in millimetres, and the module is the addendum or the pitch diameter in millimetres divided by the

number of teeth in the wheel. The pitch diameter is the module multiplied by the number of teeth in the wheel.

Pitch Line or Circle.—The circle upon which the pitch is measured, and the circumference by which the diameter, or the velocity of the wheel, is measured.

Chordal Pitch.—A straight line drawn from the centres of two contiguous teeth upon the pitch line.

Line of Centres.—The line between the centres of two wheels.

Radius of a wheel.—The semi-diameter running to the periphery of a tooth.

Pitch Radius.—The semi-diameter running to the pitch line.

Length of a Tooth.—The distance from its base to its extremity.

Depth of a Tooth.—The distance from face to face, measured at the pitch line.

Breadth of a Tooth.—The distance between the sides.

A Trundle, Lantern, or Wallover—that is, a pinion constructed of round bars or solid cylinders set in two discs—can be operated uniformly by a wheel with any number of teeth, but must have at least 8 staves.

The number of teeth in each pinion should preferably be to the number of teeth in its wheel as 1 : 3·59, and the ratio should never exceed 1 : 6.

When a *Pinion is driven by a wheel*, the number of teeth in the pinion should not be less than 8.

When a *Wheel is driven by a pinion*, the number of teeth in the pinion should not be less than 10.

The *Number of Teeth* in a cast wheel, particularly in mill gearing, should always be prime to the number of the pinion ; that is, the number of teeth in the wheel should not be divisible by the number of teeth in the pinion without a remainder. This is in order to prevent the same teeth coming together so often as to cause an irregular wear on the same. An odd tooth introduced into a wheel is termed a *hunting tooth* or *cog*.

To compute the Pitch of a Wheel.

RULE.—Divide circumference at the pitch line by the number of teeth.

EXAMPLE.—A wheel 40 ins. in diameter requires 75 teeth ; what is its pitch ?

$$\frac{3{\cdot}1416 \times 40}{75} = 1{\cdot}6755 \text{ ins.}$$

To compute the Chordal Pitch.

RULE.—Divide 180° by the number of teeth, ascertain the sine of the quotient, and multiply it by the diameter of the wheel.

EXAMPLE.—The number of teeth is 75, and the diameter 40 ins. ; what is the chordal pitch ?

$$\frac{180}{75} = 2° \; 24' \text{ and sine of } 2° \; 24' = {\cdot}04188, \text{ which} \times 40 = 1{\cdot}6752 \text{ in.}$$

To compute the Diameter of a Wheel.

RULE.—Multiply the number of teeth by the pitch, and divide the product by 3·1416.

EXAMPLE.—The number of teeth in a wheel is 75, and the pitch 1·675 inches ; what is the diameter of the wheel ?

$$\frac{75 \times 1{\cdot}675}{3{\cdot}1416} = 40 \text{ inches.}$$

To compute the Number of Teeth in a Wheel.

RULE.—Divide the circumference by the pitch.

To compute the Diameter when the True Pitch is given.

RULE.—Multiply the number of teeth in the wheel by the true pitch, and again by ·3184.

EXAMPLE.—Taking the elements of the last example,

$$75 \times 1{\cdot}675 \times {\cdot}3184 = 40 \text{ inches.}$$

To compute the Number of Teeth in a Pinion or Follower to have a given Velocity.

RULE.—Multiply the velocity of the driver by its number of teeth, and divide the product by the velocity of the follower.

EXAMPLE 1.- The velocity of a driver is 16 revolutions, the number of its teeth, 54, and the velocity of the pinion, 48 ; what is the number of its teeth ?

$$\frac{16 \times 54}{48} = 18 \text{ teeth.}$$

EXAMPLE 2.—A wheel having 75 teeth is making 16 revolutions per minute; what is the number of teeth required in the pinion to make 24 revolutions in the same time?

$$\frac{16 \times 75}{24} = 50 \text{ teeth.}$$

To compute the Proportional Radius of a Wheel or Pinion.

RULE.—Multiply the length of the line of centres by the number of teeth in the wheel for the wheel, and in the pinion for the pinion, and divide by the number of teeth in both the wheel and pinion.

To compute the Diameter of a Pinion when the Diameter of the Wheel and Number of Teeth in the Wheel and Pinion are given.

RULE.—Multiply the diameter of the wheel by the number of teeth in the pinion, and divide the product by the number of teeth in the wheel.

EXAMPLE.—The diameter of a wheel is 25 inches, the number of its teeth 210, and the number of teeth in the pinion 30; what is the diameter of the pinion?

$$\frac{25 \times 30}{210} = 3{\cdot}57 \text{ inches.}$$

To compute the Number of Teeth required in a Train of Wheels to produce a given Velocity.

RULE.—Multiply the number of teeth in the driver by its number of revolutions, and divide the product by the number of revolutions of each pinion, for each driver and pinion.

EXAMPLE.—If a driver in a train of 3 wheels has 90 teeth, and makes 2 revolutions, and the velocities required are 2, 10, and 18, what are the number of teeth in each of the other two?

$$10 : 90 :: 2 : 18 = \text{teeth in 2nd wheel.}$$
$$18 : 90 :: 2 : 10 = \text{teeth in 3rd wheel.}$$

To compute the Circumference of a Wheel.

RULE.—Multiply the number of teeth by their pitch.

To compute the Revolutions of a Wheel or Pinion.

RULE.—Multiply the diameter or circumference of the wheel, or the number of its teeth, as the case may be, by the number of its revolutions, and divide the product by the diameter or circumference of the wheel, or number of teeth in the pinion.

EXAMPLE.—A pinion 10 inches in diameter is driven by a wheel, 2 feet (24 inches) in diameter, making 46 revolutions per minute; what is the number of revolutions of the pinion?

$$\frac{24 \times 46}{10} = 110{\cdot}4 \text{ revolutions.}$$

To compute the Velocity of a Pinion.

RULE.—Divide the diameter, circumference, or number of teeth in the driver, as the case may be, by the diameter, &c., of the pinion.

When there are a Series or Train of Wheels and Pinions.

RULE.—Divide the continued product of the diameter, circumference, or number of teeth in the wheels, by the continued product of the diameter, &c., of the pinions.

EXAMPLE 1.—If a wheel of 32 teeth drive a pinion of 10, upon the axis of which there is one of 30 teeth driving a pinion of 8, what are the revolutions of the last?

$$\frac{32}{10} \times \frac{30}{8} = \frac{960}{80} = 12 \text{ revolutions.}$$

EXAMPLE 2.—The diameters of a train of wheels are 6, 9, 9, 10, and 12 inches; of the pinions, 6, 6, 6, 6, and 6 inches; and the number of revolutions of the driving-shaft or prime mover is 10; what are the revolutions of the last pinion?

$$\frac{6 \times 9 \times 9 \times 10 \times 12 \times 10}{6 \times 6 \times 6 \times 6 \times 6} = \frac{583200}{7776} = 75 \text{ revolutions.}$$

To compute the Proportion that the Velocities of the Wheels in a Train should bear to one another.

RULE.—Subtract the less velocity from the greater, and divide the remainder by one less than the number of wheels in the train; the quotient is the number, arising in arithmetical progression from the less to the greater velocity.

EXAMPLE.—What should be the velocities of 3 wheels to produce 18 revolutions, the driver making 3 ?

$$18 - 3 = \frac{15}{2} = 7{\cdot}5 = \text{number to be added to the velocity of the driver}$$

$$= 7{\cdot}5 + 3 = 10{\cdot}5, \text{ and } 10{\cdot}5 + 7{\cdot}5 = 18 \text{ revolutions.}$$

Hence 3, 10·5, and 18 are the velocities of the three wheels.

To compute the Diameter of a Wheel for a given Pitch and Number of Teeth.

RULE.—Multiply the diameter, in the following table (page 875), for the number of teeth by the pitch, and the product will give the diameter at the pitch circle.

EXAMPLE.—What is the diameter of a wheel to contain 48 teeth of 2·5 inches pitch ?

$$15{\cdot}29 \times 2{\cdot}5 = 38{\cdot}225 \text{ inches.}$$

To compute the Pitch of a Wheel for a given Diameter and Number of Teeth.

RULE.—Divide the diameter of the wheel by the diameter in the table (page 875) for the number of teeth, and the quotient will give the pitch.

EXAMPLE.—What is the pitch of a wheel when the diameter of it is 50·94 inches, and the number of its teeth 80 ?

$$\frac{50{\cdot}94}{25{\cdot}47} = 2 \text{ inches.}$$

To compute the Number of Teeth of a Wheel for a given Diameter and Pitch.

RULE.—Divide the diameter by the pitch, and opposite to the quotient in the table (page 875) is given the number of teeth.

FORMULÆ FOR DETERMINING THE DIMENSIONS OF GEARS BY THE METRIC PITCH.

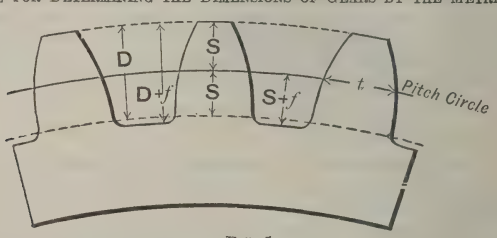


FIG. 1.

M = module; D′ = pitch diameter of gear; D = whole diameter of gear; N = number of teeth in gear; D″ = working depth of teeth; t = thickness of teeth on pitch line; f = amount added to depth for clearance.

Then

$$M = \frac{D'}{N} \text{ or } \frac{D}{N+2}. \qquad D' = N\,M. \qquad D = (N+2)\,M.$$

$$N = \frac{D'}{M} \text{ or } \frac{D}{M} - 2. \qquad D'' = 2\,M. \qquad t = M\,1{\cdot}5708. \qquad f = \frac{M\,1{\cdot}5708}{10}.$$

The module is equal to the part marked 'S' in fig. 1, measured in mm. and parts of mm.

RELATION BETWEEN MODULE AND DIAMETRAL PITCH.

Module.	Diametral Pitch.	Module.	Diametral Pitch.	Module.	Diametral Pitch.	Module.	Diametral Pitch.
0·5	50·800	2·5	10·160	6	4·233	14	1·814
0·75	33·867	3	8·466	7	3·628	15	1·693
1	25·400	3·5	7·257	8	3·175	16	1·587
1·25	20·320	4	6·350	9	2·822	17	1·494
1·5	16·933	4·5	5·644	10	2·540	18	1·411
1·75	14·514	5	5·080	11	2·309	19	1·336
2	12·700	5·5	4·618	12	2·117	20	1·270
2·25	11·288			13	1·954		

Pitch of Wheels.

A TABLE TO COMPUTE THE DIAMETER OF A WHEEL FOR A GIVEN PITCH, OR THE PITCH FOR A GIVEN DIAMETER.

From 8 to 192 teeth.

No. of Teeth.	Diameter.	No. of Teeth.	Diameter.	No. of Teeth.	Diameter.	No. of Teeth.	Diameter.	No. of Teeth.	Diameter.
	Ins.		Ins.		Ins.		Ins.		Ins.
8	2·61	45	14·33	82	26·11	119	37·88	156	49·66
9	2·93	46	14·65	83	26·43	120	38·2	157	49·98
10	3·24	47	14·97	84	26·74	121	38·52	158	50·3
11	3·55	48	15·29	85	27·06	122	38·84	159	50·61
12	3·86	49	15·61	86	27·38	123	39·16	160	50·93
13	4·18	50	15·93	87	27·7	124	39·47	161	51·25
14	4·49	51	16·24	88	28·02	125	39·79	162	51·57
15	4·81	52	16·56	89	28·33	126	40·11	163	51·89
16	5·12	53	16·88	90	28·65	127	40·43	164	52·21
17	5·44	54	17·2	91	28·97	128	40·75	165	52·52
18	5·76	55	17·52	92	29·29	129	41·07	166	52·84
19	6·07	56	17·8	93	29·61	130	41·38	167	53·16
20	6·39	57	18·15	94	29·93	131	41·7	168	53·48
21	6·71	58	18·47	95	30·24	132	42·02	169	53·8
22	7·03	59	18·79	96	30·56	133	42·34	170	54·12
23	7·34	60	19·11	97	30·88	134	42·66	171	54·43
24	7·66	61	19·42	98	31·2	135	42·98	172	54·75
25	7·98	62	19·74	99	31·52	136	43·29	173	55·07
26	8·3	63	20·06	100	31·84	137	43·61	174	55·39
27	8·61	64	20·38	101	32·15	138	43·93	175	55·71
28	8·93	65	20·7	102	32·47	139	44·25	176	56·02
29	9·25	66	21·02	103	32·79	140	44·57	177	56·34
30	9·57	67	21·33	104	33·11	141	44·88	178	56·66
31	9·88	68	21·65	105	33·43	142	45·2	179	56·98
32	10·2	69	21·97	106	33·74	143	45·52	180	57·23
33	10·52	70	22·29	107	34·06	144	45·84	181	57·62
34	10·84	71	22·61	108	34·38	145	46·16	182	57·93
35	11·16	72	22·92	109	34·7	146	46·48	183	58·25
36	11·47	73	23·24	110	35·02	147	46·79	184	58·57
37	11·79	74	23·56	111	35·34	148	47·11	185	58·89
38	12·11	75	23·88	112	35·65	149	47·43	186	59·21
39	12·43	76	24·2	113	35·97	150	47·75	187	59·53
40	12·74	77	24·52	114	36·29	151	48·07	188	59·84
41	13·06	78	24·83	115	36·61	152	48·39	189	60·16
42	13·38	79	25·15	116	36·93	153	48·7	190	60·48
43	13·7	80	25·47	117	37·25	154	49·02	191	60·81
44	14·02	81	25·79	118	37·56	155	49·34	192	61·13

NOTE.—The pitch in this Table is the chordal pitch (p. 872).

CONSTRUCTION OF TEETH OF WHEELS.

P = pitch—the distances between the centres of two teeth in the pitch circle.

Wheel.

D = diameter. C = circumference. M = number of teeth. N = number of revolutions.

Pinion.

d = diameter. c = circumference. m = number of teeth. n = number of revolutions.

EXAMPLE (fig. 2).—Draw the radius, Rr, and pitch circle, PP. Through r draw the line oo' at an angle of 75° to the radius Rr.

Half the angle between two teeth in the

$$\text{wheel, } v = \frac{180}{M} \quad . \quad . \quad . \quad 1.$$

$$\text{pinion, } V = \frac{180}{m} \quad . \quad . \quad . \quad 2.$$

Diameter of the

$$\text{wheel, } D = \frac{d \sin V}{\sin v} \quad . \quad . \quad 3.$$

$$\text{pinion, } d = \frac{D \sin v}{\sin V} \quad . \quad 4.$$

$$D : d = \sin V : \sin v.$$

Pitch (chord) of teeth in the pitch circle

$$\text{wheel, } P = D \sin v \quad . \quad 5.$$

$$\text{pinion, } P = d \sin V \quad . \quad 6.$$

Number of teeth about

$$\text{wheel, } M = \frac{3{\cdot}14D}{P} \quad . \quad 8.$$

$$\text{pinion, } m = \frac{dM}{D} \quad . \quad . \quad 9.$$

Approximate pitch in the wheel, $P = 0{\cdot}028D$ 7.

Depth of tooth, $a = 0{\cdot}46P$* . . . . . 10.

Bottom clearance, $b = 0{\cdot}4P$ . . . . . 11.

Length to pitch line, $c = 0{\cdot}3P$ . . . . . 12.

Distance ro, $d = \frac{P(m+6)}{2(m-11)}$ . . . . . 13.

Distance ro', $e = 0{\cdot}11P\sqrt[3]{m}$ . . . . . 14.

Teeth of very much less length are now used. A length of only half the pitch is ample, the liability to break being greatly reduced.

Mr. M. Longridge considers it sufficient if one pair of teeth engage just before the previous pair go out of contact.

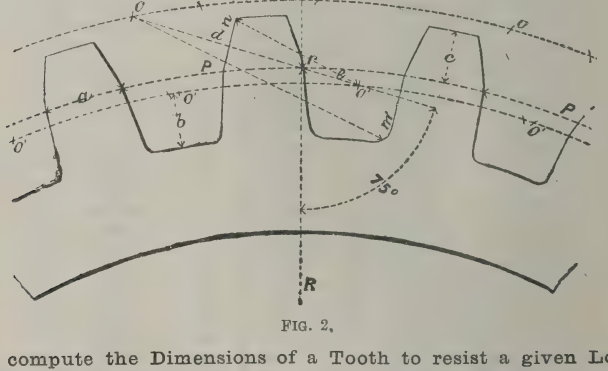


FIG. 2.

To compute the Dimensions of a Tooth to resist a given Load.

RULE.—Multiply extreme load, S, in lbs., at pitch line of wheel, by length, l, of tooth in decimals of a foot; divide product by coefficient, κ, of material of teeth, and quotient will give product of breadth, f, and square of depth, a; f and a both being in inches.

Or,

$$\frac{Sl}{\kappa} = fa^2;$$

from which

$$f = \frac{Sl}{\kappa} \div a^2, \qquad a = \sqrt{\frac{Sl}{\kappa} \div f}, \qquad l = fa^2 \times \frac{\kappa}{S}.$$

The value of κ for cast iron used for this purpose may be taken at 60, and for hardwood at 80.

EXAMPLE.—The load, S, at the pitch line of a cast-iron wheel is 4,886 lbs.; what should be the breadth, f, of the teeth, the length being 2 inches, and the pitch, P, 3 inches?

$l = 2 \div 12 = {\cdot}167$ feet. $\qquad a = {\cdot}46 \times 3 = 1{\cdot}38$ inches.

---

* If a wheel of more than 80 teeth is to gear a pinion of less than 20 teeth, and the wheel and pinion are of the same kind of materials, take the thickness of the tooth in the

$$\text{wheel, } a = P\left(0{\cdot}42 + \frac{m}{700}\right) \quad . \quad . \quad 15.$$

$$\text{pinion, } a = 0{\cdot}5P\left(1 - \frac{m}{350}\right) \quad . \quad 16.$$

A rack is to be considered as a wheel of 200 teeth.

Therefore

$$f = \frac{4886 \times \cdot 167}{60} \div (1 \cdot 38)^2 = 7 \cdot 16 \text{ inches.}$$

A tooth running at a low velocity may be materially reduced in its dimensions compared with one running at a high velocity and with like stress.

Experience has proved that a cast-iron tooth with a pitch of 3 inches and a breadth of 7·5 inches will transmit, at a velocity of 6·66 feet per second, 60 horse-power.

To compute the Depth of a Cast-iron Tooth.

1. *When the load is given.*

RULE.—Extract the square root of the load and multiply it by ·02.

EXAMPLE.—The load to be borne by a tooth is 4,886 lbs.; what should be its depth?

$$\sqrt{4886} \times \cdot 02 = 1 \cdot 4 \text{ inches.}$$

2. *When the Horse-power is given.*

RULE.—Extract the square root of the quotient of the horse-power divided by the velocity in feet per second, and multiply it by ·466.

EXAMPLE.—The horse-power to be transmitted by a tooth is 60, and the velocity of it at its pitch line is 6·66 feet per second; what should be the depth of the tooth?

$$\sqrt{\frac{60}{6 \cdot 66}} \times \cdot 466 = 1 \cdot 398 \text{ inches.}$$

To compute the Horse-power Transmitted by a Wheel.

RULE.—Multiply the pressure at the pitch line by its velocity in feet per minute, and divide the product by 33,000.

EXAMPLE.—What is the horse-power transmitted by a wheel of the dimensions and velocity given in the preceding examples?

$$\frac{4886 \times 6 \cdot 66 \times 60'}{33000} = 59 \cdot 16.$$

For the working load on machine-cut spur wheels Mr. W. Lewis gives the following law:—

$$S = y p b f,$$

where S is the total load in lbs., p the pitch in inches, f the permissible load, and y a factor which varies with the shape of the tooth.

The values of f and y are given in the tables below:—

LEWIS'S VALUES OF f.

Speed in Feet per Minute.	100 or less.	200	300	600	900	1,200	1,800	2,400
Cast iron . .	8,000	6,000	4,800	4,000	3,000	2,400	2,000	1,700
Steel . . .	20,000	15,000	12,000	10,000	7,500	6,000	5,000	4,300

LEWIS'S VALUES OF y.

Number of Teeth.	Involute (20 deg. obliquity).	Involute (15 deg. obliquity) and Cycloidal.	Radial Flanks.	Number of Teeth.	Involute (20 deg. obliquity).	Involute (15 deg. obliquity) and Cycloidal.	Radial Flanks.
12	0·078	0·067	0·052	27	0·111	0·100	0·064
13	0·083	0·070	0·053	30	0·114	0·102	0·065
14	0·088	0·072	0·054	34	0·118	0·104	0·066
15	0·092	0·075	0·055	38	0·122	0·107	0·067
16	0·094	0·077	0·056	43	0·126	0·110	0·068
17	0·096	0·080	0·057	50	0·130	0·112	0·069
18	0·098	0·083	0·058	60	0·134	0·114	0·070
19	0·100	0·087	0·059	75	0·138	0·116	0·071
20	0·102	0·090	0·060	100	0·142	0·118	0·072
21	0·104	0·092	0·061	150	0·146	0·120	0·073
23	0·106	0·094	0·062	300	0·150	0·122	0·074
25	0·108	0·097	0·063	Rack	0·154	0·124	0·075

A series of experiments recently made by Prof. G. H. Marx at the Stanford University, Cal., with ten diametral pitch cast-iron 14½ deg. involute gears, shows that the pitch of the gears given by Lewis's formula is somewhat on the heavy side. The Lewis expression is based upon the theory of flexure under the assumption that the entire load is borne by a single tooth, the point of application of the load being the extreme end of the tooth and the direction of the acting force being normal to the tooth profile at that point. The effects of the compressive and shear components are ignored.

Rupture is assumed to take place on a plane section, the position of which is determined by inscribing a parabola of uniform strength with the vertex lying at the intersection of the centre line of the tooth and line of action of the force. The dangerous section is the plane section containing the points of tangency of the parabola with the tooth outline. These assumptions and change in stress with change in speed are too severe for accurate machine-cut gears.

In view of the fact, however, that gears, although originally accurately cut and mounted, when run under severe conditions wear away from their true form and tend to take the load on one pair of teeth, it would be unwise to discard the values given by Lewis until some data, more complete than that presented by Prof. Marx, are available. It is known that small test specimens sustain higher stresses than large pieces, and for this reason the values obtained for ten diametral pitch gears may be misleading when applied to larger pitches.

Mill Gearing.

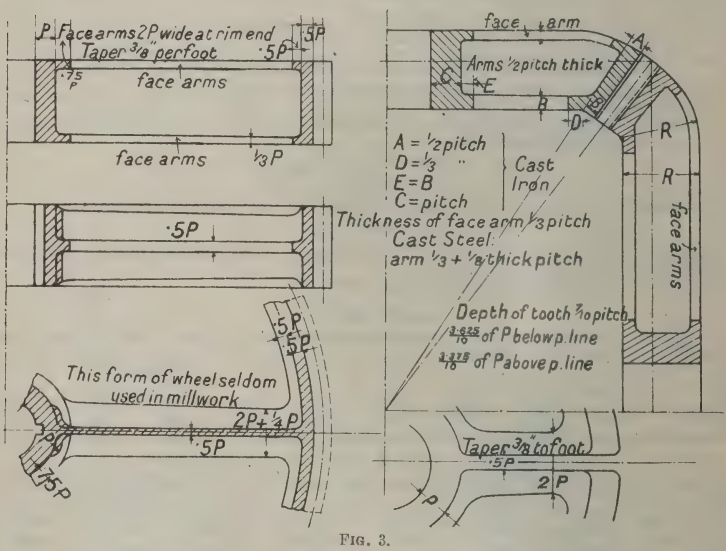


FIG. 3.

Fig. 3 shows the proportions of tooth, arm, faces, bosses, etc., commonly used in mill gearing.

(*J. Nuttall.*)

To Design Wheel Teeth.

EPICYCLOIDAL TEETH.

The correct curves of wheel teeth on the epicycloidal principle are drawn by rolling curves. The same rolling circle is needed for both points and flanks of every wheel in a set. Let A, fig. 4, represent the pitch circle of a wheel, and B the rolling circle. A notch is cut in the edge of B, and a steel point placed firmly in a small clamp, fig. 5, so that its point is on the circle. If this circle be now pressed against A and steadily revolved it will describe a curve on a piece of finely sandpapered tin plate, *t*, laid beneath, as shown at *c*. This is the curve of the tooth point.

Similarly if D, fig. 6, is the template of the inside of the pitch circle of the wheel, the same process will give the curve *e* for the flanks of the teeth. It is considered best practice to make two wheels to suit each other rather than a set; when this is done the points of wheel teeth and the

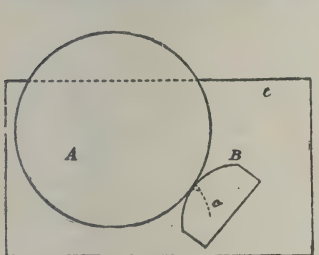


FIG. 4.



FIG. 5.

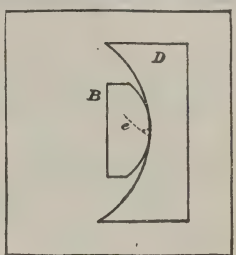


FIG. 6.

flanks of the pinion are described with one rolling curve whose diameter is the radius of the pinion, while the points of the pinion teeth and the flanks of the wheel teeth are described with a rolling circle whose diameter is the radius of the wheel.

CYCLOIDAL TEETH.

In this class of gear the mating parts of a pair of wheels are convex and concave, and a comparatively large surface is in contact with a resulting small amount of wear. As the teeth profiles are developed by two circles which roll inside and outside the pitch circle, and the path of contact is made up of two curves which change their direction at the pitch point, i.e., the point of intersection of a line drawn through the wheel centres and the pitch circles, it is essential for quiet running and no back lash that the shaft centres are exactly correct. Should the centres be initially incorrect or become so due to wear at the bearing or journal, all rolling motion is lost and excessive noise and wear will result. Cycloidal gears are very difficult to accurately generate in the machine, and in the case of a set of wheels from 12 teeth to rack, with profiles generated by rolling circles greater in diameter than half the diameter of the smallest pinion, the flanks are under-cut and cannot be hobbed or cut with a rotary cutter. A rolling circle $\frac{3}{8}$ in. diameter is the smallest pinion in the set that has been generally preferred.

By making the diameter of the rolling circle equal to the radius of the smallest pinion the teeth have radial flanks and are thinner at the root than at the pitch line, but when the rolling circle is less than the radius of the smallest pinion the teeth are thicker at the root than at the pitch line and such teeth can be cut with a rotary cutter. As the diameter of the rolling circle decreases the angle of obliquity of action or angle of pressure increases. Cycloids are difficult to draw correctly, and the true curves are usually approximated by circular arcs by the pattern-maker when striking out the pattern, thus introducing a possible error. Whilst this class of gear has good wearing qualities, high speeds have made its defects, which are scarcely noticeable at low speeds, very pronounced, and has been largely displaced by involute gearing.

INVOLUTE TEETH.

Involute teeth have the advantage of being a continuous curve from root to point, and all involute teeth of the same pitch will correctly gear together.

Let AB and CD, fig. 7, be the pitch circles of any two wheels, and EF their line of centres. Through the intersection of the pitch circles and EF draw MN, making an angle with EF of about 75°. In the figure it is drawn at 60° for plainness. Circles *nn* and *ss* are drawn touching MN. These two circles are the base circles from which the teeth curves are described. The method is then the same as with the epicycloidal tooth, but the rolling circle is simply a straight edge, as shown at K, fig. 8.

The path of contact in involute teeth gears is a straight line, tangential to the base circle, and permits of the teeth meshing correctly together when the shaft centres are slightly inexact. Should the wheel centres be slightly in excess of their correct dimension the angle of the path of contact is increased, but it still cuts the pitch lines at the pitch point; the same tooth profiles are obtained, and the disadvantages are a slightly increased back lash and pressure on the journals. The mating parts are both convex, the surface in contact is small, and the wear large in comparison with cycloidal gears. An angle of obliquity of action, equal to $14\frac{1}{2}°$, has hitherto been in general use, but the tendency to-day is to use a 20° to $22\frac{1}{2}°$ obliquity and a smaller tooth addendum. With the $14\frac{1}{2}°$ pressure angle and height of tooth above the pitch line of 0·318 pitch there is excessive relative sliding at the points of the teeth, thereby causing extensive local wear, and with a 12-tooth pinion engaging with a straight toothed rack, having an included angle of 29°

between the working faces, there is severe interference between the flanks of the pinion teeth and the points of the rack teeth, which, if cut away, reduces the path of contact to less than a pitch length. To avoid such, the shape of both mating teeth have to be modified if the angle and minimum number of teeth (12) are adhered to. Up to the present the practice has been to

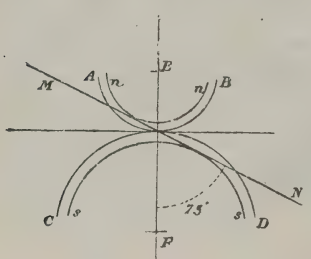


FIG. 7.



FIG. 8.

modify the shape of the tooth by making the flanks of the pinion teeth radial and rounding off the faces of the rack teeth. The introduction of this uncertain quantity has led many practitioners to adopt the 20° or 22½° angle of obliquity where the true form can be obtained without interference at the working surfaces.

With an angle of obliquity of 20° to 22½° the pressure at the bearings is increased 5 to 6 per cent. With a pinion of 28 teeth and angle of pressure of 14½° interference is avoided, as is also the case with a 20-tooth pinion having pressure angle of 20°. Interference may be avoided in a 12-tooth pinion by decreasing the addendum to $\frac{1}{8}$ module when the angle of obliquity is 20° or $\frac{7}{8}$ module when the angle of obliquity is 22½°. In both cases a minimum arc of contact equal to $1\frac{1}{8}$ pitch can be obtained. Such teeth are termed 'stub' teeth, and in comparison with the standard tooth are thicker at the roots and therefore stronger. Further, by removing the points of the teeth where the sliding action is greatest, a better rolling action results, and the efficiency of the gear is increased.

SPUR GEARING.

It has been observed by Mr. S. H. Rowley that defects are at times noticed in cut gears, generally manifested in noisy running. If the noise be what is termed a revolution noise, it is generally due to a thick tooth or teeth, caused by inaccurate spacing. Some wheels will be found to run quietly in one direction and noisily in the opposite. Investigation will show that the teeth have not been cut radially. Both these defects are due to careless work from the ordinary type of gear cutters using disc cutters, and are the outcome of inaccurate setting. If neither of these faults can be found, then look to the form of tooth, and it can be stated almost with certainty that it is a hobbed gear, and the hob used is of faulty shape.

These are all faults apart from erecting, as it is well known that gears running out of alignment, and also at too close centres, will produce a noise, besides numerous other causes which might be enumerated.

Speaking in broad terms of teeth in general, for strength, a flank as broad as possible is desirable; for efficiency, a short line of action; and for quietness and smoothness of running, a longer one.

For accurately checking a tooth, more especially of a pinion, it is necessary when setting the tooth micrometer to make an allowance on account of the chordal arc differing from the tangent, thus altering the width; also the location of the pitch line on the sides of the teeth falling below the position in the middle of the tooth calls for a correction in the addendum.

For spur gearing running at high speeds, say of over 1,200 ft. per min. on the pitch line (general engineering work and not motor gears is here referred to), the following practices are adopted to eliminate noise. Employ fine pitches with wide faces, in preference to coarse pitches and narrow faces. Practice has altered very considerably in this direction in recent years. The teeth, instead of being cut parallel to the face, are sometimes cut on an angle, or more strictly spiral, the wheel being of one hand and the pinion of the opposite. The objection is the side thrust which is set up. To overcome this, a double helical is often used, which is a costly form of gearing, and when made solid often unsatisfactory. Experiences with different angles for the single helical go to show that with a gear of normal face an angle of about 15° gives good results—silent running combined with only slight end thrust. If it be possible to increase the face, the angle may be reduced. Phosphor bronze and steel have proved more

silent than both wheels of the same metal. Fibre wheels have also been used with good results, and when flanged with metal plates for quite considerable powers; their life is not, however, a very long one. If the load be a heavy one, the most general practice is to use a raw-hide pinion. If this be properly made and treated, it will often outlast a cast-iron wheel, and is as durable and strong as, if not stronger than, cast iron to resist shocks.

Mr. Daniel Adamson * states that in 1899 he adopted for the teeth of spur wheels on cranes an addendum of 0·25 pitch with a dedendum of 0·32 and angle of obliquity of 14½°. These proportions do not, however, prevent 'interference' if a straight-sided rack tooth is used, as is desirable for reason of accurate reproduction. To avoid this objection the angle of obliquity must be increased to 22½° if a 12-tooth pinion is to be the least of the series; but if 14 teeth can be adopted, then 20° is sufficient.

In addition to facilitating accurate construction, by permitting generation, these modifications have a further advantage in giving a stronger form of tooth, thus allowing a finer pitch to be used for given diameters of wheel and pinion. Reducing the pitch in this manner increases the number of teeth in contact, improves the durability, and reduces the noise. The rate of wear is also reduced when more teeth are in gear simultaneously, because the contact between the teeth takes place nearer the pitch line, where there is less relative sliding, and for the same reason the loss of power by friction between the teeth is reduced.

The theoretical number of teeth (stub) in contact depending upon the number of teeth in the wheel and pinion are given in the table below.

DURATION OF CONTACT.

For Involute Teeth 20° Obliquity. Addendum, one-quarter of Circular Pitch.

No. of Teeth.	12	15	20	30	36	45	60	75	100	150
12	1·17	1·19	1·21	1·25	1·26	1·28	1·29	1·30	1·32	1·33
15	1·19	1·21	1·24	1·27	1·29	1·30	1·32	1·33	1·34	1·35
20	1·21	1·24	1·27	1·30	1·32	1·33	1·35	1·36	1·37	1·38
30	1·25	1·27	1·30	1·33	1·35	1·36	1·38	1·39	1·40	1·41
36	1·26	1·29	1·32	1·35	1·37	1·38	1·40	1·41	1·42	1·43
45	1·28	1·30	1·33	1·36	1·38	1·40	1·41	1·42	1·43	1·44
60	1·29	1·32	1·35	1·38	1·40	1·41	1·43	1·44	1·45	1·46
75	1·30	1·33	1·36	1·39	1·41	1·42	1·44	1·45	1·46	1·47
100	1·32	1·34	1·37	1·40	1·42	1·43	1·45	1·46	1·47	1·48
150	1·33	1·35	1·38	1·41	1·43	1·44	1·46	1·47	1·48	1·49

The factors to be considered when estimating suitable proportions to resist wear are:

P = load to be transmitted at the pitch-line; N = number of revolutions per min.; e = estimated number of teeth in contact; b = breadth of the teeth.

The average of 50 examples by Mr. R. Livingstone, of raw-hide pinions 'in service and giving satisfaction' gives $\frac{PN}{b} = 112{,}000$, and $\frac{P}{b} = 115$ lbs. per inch of face. Lasche gives three examples of Delta-metal pinions working satisfactorily with steel wheels on crane motors in which the average for $\frac{PN}{eb} = 100{,}000$. For steel pinions gearing with steel wheels in intermittent crane work, Mr. Adamson has found that a maximum of 130,000 for $\frac{PN}{eb}$ and 53,300 for raw-hide pinions under similar conditions, works quite satisfactorily.

With regard to speed, Mr. W. H. Thornberry gives 1,800 ft. per min. as the greatest at which ordinary cast iron wheels may be safely run, and 3,000 ft. per min. for machine-cut wheels. The same authority quotes examples up to 4,000 and 5,000 ft. per min., but recommends caution

* See Proc. Inst. of Mech. Engrs., 1916.

before adopting such speeds. A pair of mortise teeth bevel wheels at Niagara transmits 1,100 h.p. at 3,930 ft. per min. These have 43 and 33 teeth, $5\frac{1}{2}$ pitch and 20 ins. face. After $6\frac{1}{2}$ years these wheels were running satisfactorily, except that the wooden teeth only lasted 6 to 8 weeks. At the same place a pair of cast steel bevel wheels transmitted 1,300 h.p. at 3,900 ft. per min. The teeth were 20 ins. wide, 5 ins. pitch, and whilst satisfactory as far as abrasion is concerned they occasionally gave trouble by breaking out.

Christie states that a pair of spur wheels transmitted 3,300 h.p. at 2,500 ft. per min., and the load on the teeth was nearly 2,100 lbs. per in. of face. The pinion was made of fluid pressed steel containing 0·86 per cent. C, 0·51 per cent. Mn, 0·27 per cent. Si. The wheel was an annealed steel casting containing 0·47 per cent. C, and 0·66 per cent. Mn.

The pinion should always be of harder material than the wheel, in order to equalise the wear. Mild steel gearing up to, say, 0·3 per cent. carbon gives trouble by abrasion, and also by change of form due to the percussive action experienced under heavy loads. High carbon steel, say 0·6 per cent. carbon or above, or nickel steel, should be used, and preferably the latter, as it meets all requirements without a complicated heat treatment.

In gearing, large revolving masses—as, for example, armatures of motors—should be separated from adjoining masses such as large gear wheels of the second motion, by some elastic medium such as a length of shafting or a flexible coupling (Section XXI). This is intended to allow for slight variations in the angular velocity, due to unavoidable errors in cutting the teeth, to take place without giving rise to destructive loads between the teeth. The stresses due to inaccuracies in the spacing of the teeth may exceed the working stress. With an error of only 0·2 per cent. in the pitch the excess load due to acceleration and retardation may amount to as much as 28 times the load transmitted. Such loads increase as the square of the mean pitch-line velocity and as the mass of the wheel considered.

MAAG GEARING.

(*Sulzer Bros.*, 31 *Bedford Square, London, W.C.* 1.)

Maag gearing introduces certain novel features both in the production of gears and the shape of tooth, which are claimed to overcome the defects inherent in the ordinary standard form of gearing.

The method of cutting Maag gears is on the generating principle, producing theoretically correct involute tooth profiles *free from any standardisation.*

The arrangement is not confined to a special pressure angle, nor to any standard proportions of tooth, there is, therefore, a free choice in the pitch allowed; it is immaterial whether the pitch be 3 diametral, 3·23 diametral, 12·57 mm., or $1\frac{13}{16}$ in., etc.

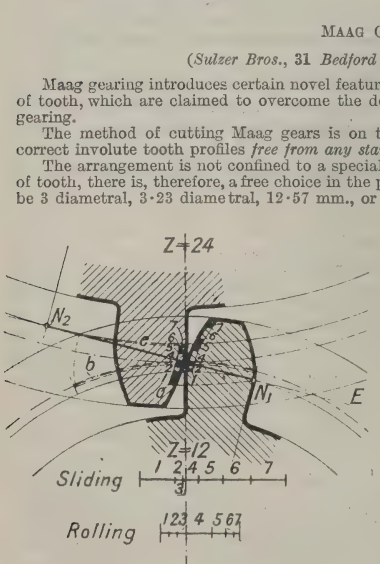


FIG. 9.

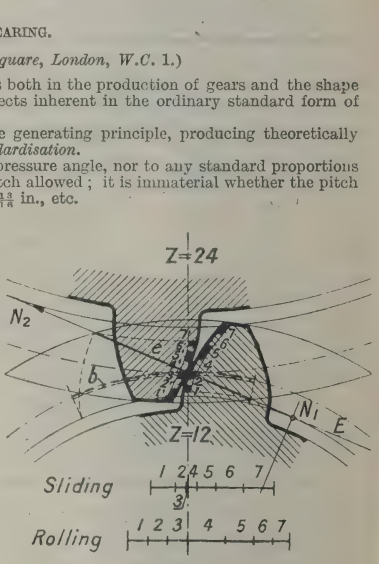


FIG. 10.

Any pitch whatever can be cut, using the same standard tool. This tool is in the form of a straight-sided rack-cutter, which generates involutes on a well-known principle for the production of this type of tooth. In addition to the special form of tooth, which is designed to give the best theoretical shape for each individual set of gears, the Maag gears are noticeable for the fact that the tooth surfaces are case-hardened and ground with mathematical precision on the generating principle; this is accomplished by means of simple saucer-shaped grinding wheels, in which the projection of the edge of the wheel forms the plane of an imaginary straight-sided rack. Two such wheels set at the correct angle thus form the sides of the rack, and involutes

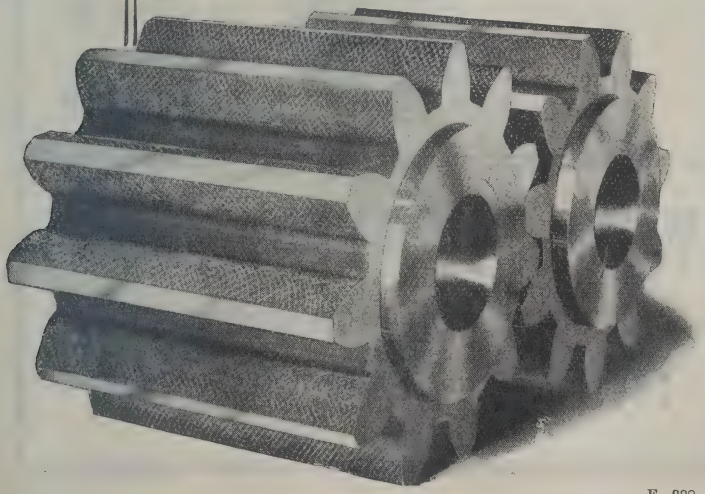
Precision !

THE MAAG SYSTEM of Gear Cutting and Grinding enables you to produce the best theoretical form of tooth, ensuring maximum rolling and minimum sliding contact without the use of special tools or cutters.

Absolute Accuracy
Noiseless Running
Minimum Wear

SULZER BROS.

31 BEDFORD SQUARE, LONDON, W.C. 1.



F. 882

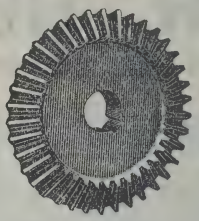
GEARS

WE CAN FURNISH

Large and Small Bevels
Spurs and Internals

WITH PERFECT TEETH OF ANY PITCH

SPIRALS CORRECTLY CUT



GEARS AND GEAR CUTTING OF EVERY DESCRIPTION

W. W. BUCKLEY & SONS

CHRIST CHURCH SQUARE

HULME, MANCHESTER

are generated by grinding in the same manner as in the gear-cutting machine. As the edge of these saucer-shaped discs must always lie in a true plane, it is obvious that the surfaces generated must be perfect involutes, and the wear of the grinding discs only affects the thickness of the individual tooth ; this is, however, compensated for by an automatic device which automatically keeps the planes of the grinding wheels in their exact position.

In the Maag system, the shape of the tooth and the accuracy with which it is formed enable, it is claimed, much higher loads and much higher speeds to be obtained than with any other form of gearing. Thus, for example, there are applications of Maag gearing which operate at peripheral speeds of 10,000 ft. per min. and even up to 15,000 ft. per min., while the load per inch width of tooth can be taken as at least double that possible with the double helical form of gearing. An important example is in the new Swiss locomotives of 2,500 B.H.P., where the Maag gearing has replaced the ordinary double helical type.

Fig. 9 represents two teeth of a standard drive 12/24 as made by the common series-cutter method and is in frequent use in machine tools, cranes, etc. Fig. 10 shows teeth of the same drive made by the Maag method.

The most conspicuous difference is in the roots of the teeth. The teeth of both drives are thickest near the base circles, but while these circles are located in Fig. 9 very near the pitch circles and therefore far away from the root-circles, they appear in Fig. 10 shifted much farther towards the root-circles. It is easily seen, then, that the radial extensions of the profile in Fig. 9, due to their length, converge greatly towards the root-circles, weakening the teeth, especially the one of the 12-tooth pinion. This is not noticeable in Fig. 10, the radial profile extensions being short.

Since with the use of series-cutters all teeth are equally thick at the pitch line, that is, equal to half the pitch, the teeth must be weaker at the root the smaller the number of teeth in the gear. Fig. 10 shows that this is not the case with Maag gears ; for by proper distribution of addendum and dedendum, as well as thickness at the pitch lines, a nearly equal thickness of tooth at the root in both wheels is secured.

Taking the thickness of tooth of the 12-tooth pinion as equal to 1, this thickness for the same pitch in the Maag gear is 1·31, which means that the tooth could be loaded $1{\cdot}32^2 = 1{\cdot}7$ times as heavily, or for the same load a pitch 1·31 times smaller, or a tooth number 1·31 times larger could be used ; in other words, in place of a drive 12/24 made by the series-cutter method a Maag drive 16/32 could be built into the same centre distance, and this fact, even if it were alone, would greatly improve the conditions of mesh and wear.

Heat-Treated Gears.

The conditions under which gear wheels are employed can generally be considered as coming under two heads : (1) For the purpose of transmitting power under approximately constant conditions of load and speed ; and (2) under conditions which subject the wheels to shock or reversal of stress.

In the first case, resistance to wear is the chief consideration, and for this purpose case-hardened gears are eminently suited, but under the second condition oil-hardened gears of special steel are usually necessary. Cast-steel gears are frequently used where resistance to wear is the principal consideration and where the number of gears required are few. Should the gears be small these are usually cast from a pattern, but if large they are frequently machine-moulded, and in both cases sufficient is left on the teeth to ensure their cleaning up in machining. Where a large number of gears are required, it has become the practice to obtain these from mild steel stampings, the teeth being roughly formed in the process and subsequently by the cutter in the machine. Such gears are extensively used in their soft state, but where the conditions of wear are somewhat severe, these are usually case-hardened. Where the speeds are high and conditions very severe, such teeth are liable to chip, and an alloy steel of nickel or nickel chrome is substituted. The alloys commonly used are nickel (3 to 5 per cent.), and nickel chrome (carbon ·15, chrome ·5 to 1·5, nickel 1·5 to 5). Chrome vanadium compositions are also being used for case-hardening gears. These gears should be carburised at a temperature of 880° C. and allowed to cool in the box, afterwards they should be reheated to about 820° C. and quenched in water. This procedure gives a tougher core than is obtained when the steel is quenched direct from the carburising temperature. It may be necessary to protect some parts against carburising. For this purpose a shield of copper, copper-plating, or asbestos pad secured with the fireclay, are frequently employed.

Oil-Toughened Gears.

In this case the straight nickels and nickel chrome steels are most extensively used. With such gears it is advisable to anneal these after rough machining in order to break down crystallisation set up during forging. The annealing temperature for these steels should be about 800° C., and the quenching temperature about 820° C. For moderate service conditions nickel chrome steel which has been cooled off in an air blast has been found to give excellent results.

Heat-Treatment for Gears.

In order to treat chrome-nickel steel gears of 8 diametral pitch so that they will have a soft core suitable to withstand shock, first heat the gears in carburising pots to 1,600° F., for seven hours. Then remove the pots from the furnace and allow the box and work to cool over

night. The next morning empty the pots and reheat the gears to 1,400° F. Then take out and quench in oil. This is known as the refining heat. Reheat the gears to 1,450° F., and quench in water, and the gears will be found to be properly hardened. Several gears should be treated in this way, and the teeth should be broken from one in order to ascertain the depth of case on the teeth, which should be $\frac{1}{32}$ in. (*'Machinery.'*)

Non-Resonant Gears.

Raw-Hide Pinions.

When a raw-hide pinion is adopted, the minimum number of teeth should be, if possible, twenty, and in no case should less than fifteen be used. Practice varies as to the shrouding, some users preferring gun-metal with the teeth cut through, and others steel plates solid. To ensure the metal wheel coming in contact with the hide only, the pinion faces should be made slightly wider than the wheel. It is advisable to have the faces at least three times the pitch.

Lubrication.

It is common knowledge that no grease nor oil should be allowed near a raw-hide gear, yet there is no rule more frequently disregarded than this, the result being speedy destruction of the pinion. If the hide, when in use, should become unduly dry, a sparing coat of raw linseed oil will tend to preserve it.

Ordinary hydrocarbon oil is most destructive to raw-hide pinions. One of the best compounds for the purpose is given in *Marine Engineering of Canada*, as follows:—Plumbago, 15 per cent.; rosin oil, 55 per cent.; rosin, 30 per cent.

Cloth and paper pinions can be lubricated, without injury, with ordinary oil.

Resilient Steel Gears
(Seymour's Patent).

(Thomas Summerson & Sons, Ltd., Darlington.)

These gears are designed and constructed specially for drives where the strength and durability of steel gears is necessary, but where the noise accruing from their use would not be permissible.

The portion of the gear-wheel from which the teeth are formed is made up of steel laminæ, having an ultimate tensile stress of 45 tons, the boss and shroud plates being constructed of cast or forged steel.

The resilience of the working surfaces of the teeth afforded by this method of construction is sufficient to render the running of the gears as noiseless (even when the same are considerably overloaded) as gears constructed of raw hide, paper, and woven fabrics.

On account of the superior strength and durability of steel over the other substances named, the resilient steel gears transmit many times the load for any given size of tooth, and their life is longer proportionally.


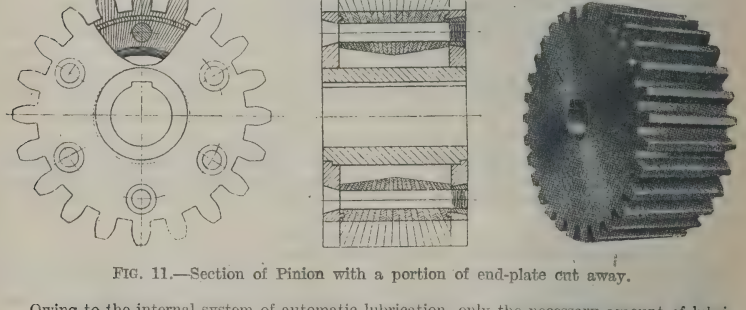


FIG. 11.—Section of Pinion with a portion of end-plate cut away.

Owing to the internal system of automatic lubrication, only the necessary amount of lubricant is supplied to the surfaces of the teeth, thus preventing waste and effecting a saving of $3\frac{1}{2}$ to 4 per cent. of the power transmitted.

Important improvements in the construction of these gears have been made, notably the connecting together of the lateral extremities of the laminæ by welding, thus the laminæ are firmly secured together independently of the support supplied by the shroud plates and bolts.

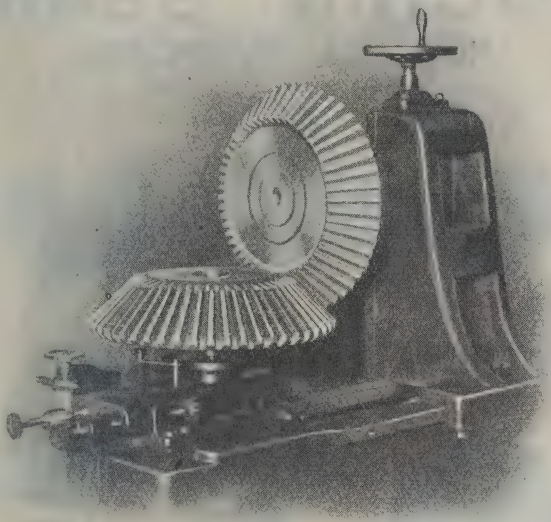These gears have been successfully applied to almost every class of drive, including mine



Rawhide Pinion and Cast Iron Mitre Wheel on Test.

Our work is up to a standard, not down to a price.

SPUR, BEVEL, HELICAL, & WORM Gearing

'Durangus' and 'New Process' Rawhide Pinions

Complete Reduction Sets supplied.

George Angus & Co. Ltd.

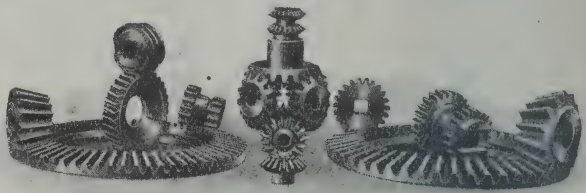
Power Transmission Engineers,

Angus Gear Works, St. Anthony's,

NEWCASTLE-UPON-TYNE.


'POCHIN' GEARS

FOR ALL PURPOSES



ARE

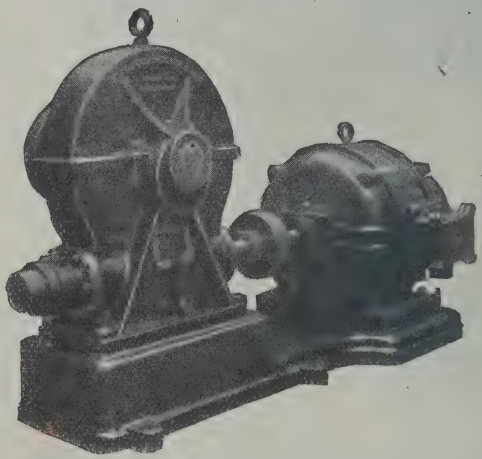ACCURATE and EFFICIENT.



SPURS,
SILENT PINIONS,
EVELS,
SPIRALS,
SPROCKETS,
INTERNALS,
RACKS,
ENCLOSED REDUCTION GEARS,
&c.

Customers' Blanks Cut to 8′ dia.

E. ARNOLD POCHIN & BRO.,

THE GEARWORKS, TRAFFORD PARK,
MANCHESTER.

and quarry machinery and haulage, electric motor drives, pumps, air compressors, machine tools, cranes, etc. etc.

Resilient steel gears are being constructed for transmitting ever increasing horse-power, some under construction now have been designed to transmit upwards of 750 h.p. at 1,800 ft. per minute.

Fig. 11 shows laminæ and shroud plates held together with bolts.

The cavity between the boss and the laminæ is the receptacle for the lubricant; centrifugal force propels the lubricant radially outwards between the laminæ, thus efficiently lubricating the entire working surface of the teeth.

The power transmitted by such gears can be calculated from the following formula :—

$$F = \frac{HP \times 1000}{K \times N \times R'}$$

where

F = Face of pinion in inches; N = No. of teeth; K = Factor for each pitch (see table); R = Revolutions of pinion per minute; HP = Horse-power to be transmitted.

Circular Pitch	$\frac{1}{2}''$	$\frac{5}{8}''$	$\frac{3}{4}''$	$\frac{7}{8}''$	1″	$1\frac{1}{4}''$	$1\frac{1}{2}''$	$1\frac{3}{4}''$	2″	$2\frac{1}{4}''$	$2\frac{1}{2}''$	3″
Factor K	·225	·35	·505	·689	·9	1·41	2·03	2·75	3·6	4·55	5·63	8·1
Diametral Pitch	6	5	4	$3\frac{1}{2}$	3	$2\frac{1}{2}$	$2\frac{1}{4}$	2	$1\frac{3}{4}$	$1\frac{1}{2}$	$1\frac{1}{4}$	1
Factor K	·246	·355	·555	·723	·975	1·41	1·74	2·22	2·92	3·93	5·67	8·9

Helical Teeth-Gearing.

This form of gearing has been somewhat extensively adopted, especially in cotton-spinning machines. It consists, when the direction of the motion is simply to be changed to an angle of 90°, in forming the teeth upon the periphery of the pair at an angle of 45° to the respective axes of the wheels, as in figs. 12 and 13. It will then be perceived that if the sloped teeth be presented to each other in such a way as to have exactly the same horizontal angle, the wheels will gear together, and motion being communicated to one axis, the same will be transmitted to the

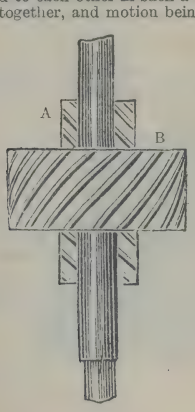


FIG. 12.

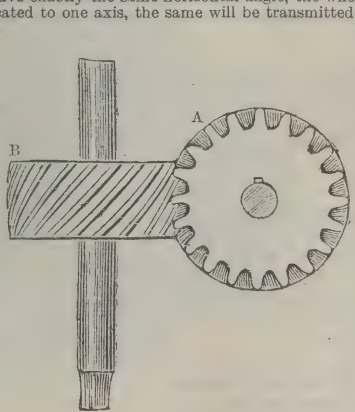


FIG. 13.

other at a right angle to it, as in a common bevel pair. Thus, if the wheel A upon a horizontal shaft has the teeth formed upon its circumference at an angle of 45° to the plane of its axis, it can gear with a similar wheel, B, upon a vertical axis. Let it be upon the driving-shaft, and the motion will be changed in direction, as if A and B were a pair of bevel wheels of the ordinary kind, and, as with bevels generally, the direction of motion will be changed through an equal angle to the sum of the angles which the teeth of the wheels of the pair form with their respective axes. The objection in respect of lateral or end pressure may, in the case of a vertical shaft, be partly got over by sloping the teeth so that the tendency is to lift the shaft, and not force it down into the stop bearing; this would act to keep the wheels in close contact, by reason of the weight of

the vertical shaft, and at the same time reduce the friction between the end of that shaft and its stop bearing. This renders this form of gearing preferable to skew bevels when employed upon vertical shafts.

The gears shown by figs. 12 and 13 may be turned up in the lathe, because the teeth are simply portions of spirals wound about the circumference of the wheel. For a pair of wheels of equal diameter a cylindrical piece equal in length to the required breadth of the two wheels is turned up in the lathe, and the teeth may be cut in the same manner as cutting a thread in the lathe; that is to say, by traversing the tool the requisite distance per lathe revolution. In pitches above about ¼ inch it will be necessary to shape one side of the tooth at a time, on account of the breadth of the cutting edges. After the spiral (for the teeth are really spirals) is finished, the piece may be cut in two in the lathe, and each half will form a wheel.

Double Helical Teeth-Gearing.

When correctly designed and accurately cut, double helical gearing possesses advantages both in principle and utility which cannot be obtained from any other type of gearing. The advantages are as follows :—

1. Continuity of engagement, which reduces vibration and enables a greater load to be transmitted.

2. Pinions with a small number of teeth can be used, and in this way high ratios can be obtained without using a wheel of abnormal diameter.

3. A higher efficiency than in the case of straight-toothed gearing is obtained. This is due to the different action of the teeth during engagement. In straight cut gears the line of contact lies parallel to the axis of rotation, and consequently the phases of engagement are constantly changing, and the action is uneven. With double helical gearing the line of contact is a curve extending diagonally across the tooth, and all phases of engagement occur simultaneously.

4. Silent running at high speeds is obtained, owing to the gradual engagement and absence of vibration. There is no necessity for using soft pinion materials, such as raw hide or fibre.

It is generally found that a forged steel pinion gearing with a cast-iron wheel gives the best results, if the horse-power is not too high. In certain cases, where high horse-powers or sudden overloads are to be transmitted, pinions made from high carbon or nickel steel, gearing with cast steel wheels should be used.

Spiral Angle of Teeth.

The angle now generally adopted for continnous cut helical gears is 45° when cut by means of end milling process, and 30° when cut on the Sykes' Patent shaping process, which gives a continuous tooth with sharp apex. Staggered helical gears are usually 23°.

The minimum width of face is respectively four and six times the pitch.

Strength of Double Helical Gearing.

The following particulars and formulæ (*The Power Plant Co. Ltd.*) are applicable to double helical gears with staggered or continuous teeth cut by a generating process using hobs, or the Sykes' shaping system, with a spiral angle of 30° or 23° and face width of 6 times the pitch, for ratios up to six to one, afterwards increasing with ratio.

Let p = pitch in inches ; P = tooth pressure in lbs. at pitch line ; W = width of face in inches ; V = pitch line velocity in feet per min. ; r = ratio of reduction ; K = permissible stress (taken from curve, fig. 14) :

$$P = \frac{\text{B.H.P.} \times 33000}{V} = \frac{p.W.K.}{2}$$

For ratios up to 6 to 1, $$p = \sqrt{\frac{P}{3 \times K}}$$

For ratios between 6 and 10 to 1, $W = rp$, $$p = \sqrt{\frac{2{\cdot}5\ P}{rk}}$$

For ratios above 10 to 1 special treatment is advisable, and no fixed rules can be laid down; each drive should be considered with regard to the general conditions.

Proportions of Teeth.

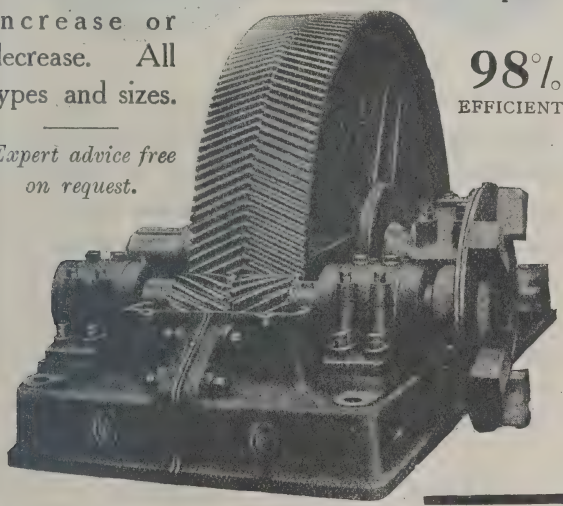
Thickness of tooth $= \frac{P}{2}$; Addendum $= \frac{{\cdot}89 \times P}{\pi}$; Dedendum $= \frac{1{\cdot}05 \times P}{\pi}$

Double Helical Gears

OUR DOUBLE HELICAL GEARS are cut from Solid Blanks on accurate Gear Generating Machines. Tooth Engagement is smooth and certain and side-play is obviated. We make Gears for single reduction to ratios as high as 20 : 1. The ideal transmission for speed increase or decrease. All types and sizes.

Expert advice free on request.

98% EFFICIENT.



Send for our Booklet on Mechanical Power Transmission.

The POWER-PLANT-CO., LTD.


WEST DRAYTON, MIDDLESEX, Eng.

KK2

F. 886

Flexible Couplings

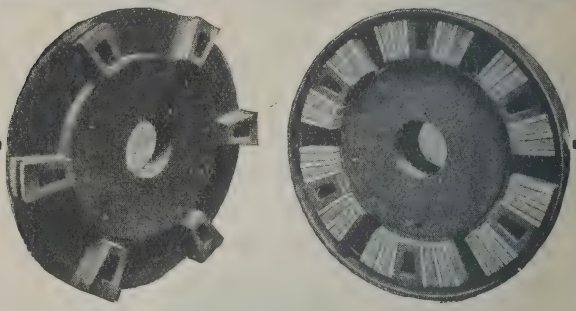INSULATING REVERSIBLE



OUR FLEXIBLE COUPLINGS afford many advantages over the rigid type. There is no harsh jerk at starting, but an easy uptake, which means long life to the whole plant. Vibration and shocks are absorbed —uneven wear on separate shaft bearings is neutralized. Loss of alignment through settling is obviated. No projecting parts —no risk of breakdown. In all sizes for all classes of work.

LARGE STOCKS CARRIED.

Expert advice gladly given. *List No. 2 free.*

The POWER-PLANT-CO., LTD.

WEST DRAYTON, MIDDLESEX, Eng.

In the case of helical gears with continuous teeth, the formulæ vary according to the kind of machinery for which the gears are intended, and they are very numerous.

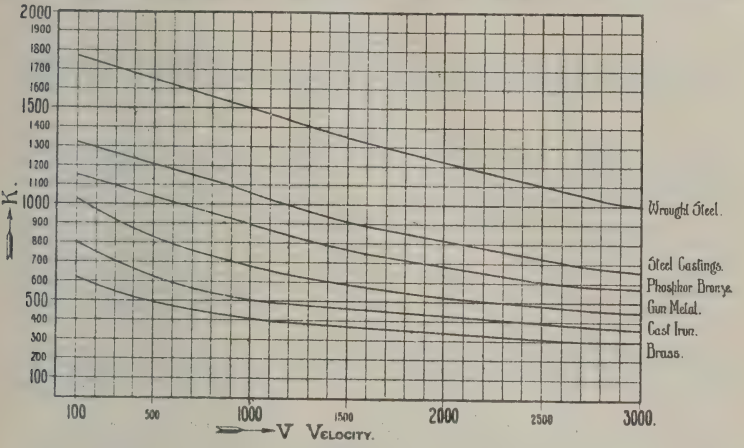


Fig. 14.

Bevel Wheel Teeth.

A and B, fig. 15, are a pair of bevel wheels revolving on shafts OD and OE. Join OC through the pitch contact of the wheels, and join DE at right angles to OC, and cutting the axes of

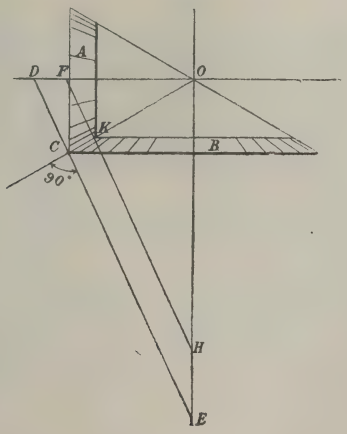


Fig. 15.

revolution at D and E. Then CD and CE will be the virtual or instantaneous radii of the wheels A and B, and these radii are those of two spur wheels which will gear similarly to the wheels

A and B, and must be used as the base lines or radii on which the teeth of the bevel wheels A and B must be designed. Similarly, KF and KH are the radii for designing the inner ends of the teeth. The finished tooth lies evenly between the two end shapes thus found.

Gees Teeth.

Gees teeth are suited to run in one direction only. Their working faces are of any ordinary form, and their idle faces are described with very small rolling circles. This gives a very sloping back to the teeth. They are very strong and run quietly.

Turbine Gears.

This name has come into use for gears running at very high pitch line velocities (3,000 to 12,000 ft. per min.), and applied either to reduce speed of steam turbine to that of mill shaft, standard speed electric generator, propelier, etc., or to increase speed from high speed internal combustion engines, electric motors, etc., to that of rotary pumps, blowers, and compressors.

For such purposes helical gears are almost universally used, as they possess among other advantages an efficiency of 98 per cent. To obtain smooth running the utmost accuracy in the cutting of the teeth is requisite. The teeth may be cut with an end miller, planed or shaped, and hob milled. The two latter processes have the advantage that the teeth are automatically generated from a straight-sided cutter. A creeping motion is provided in some of the most recent designs of gear hobbing machines, so that any inaccuracy in the master worm wheel is distributed in spirals on the gear wheel, instead of being parallel to the axis.

Helical gears for geared turbines are invariably made with involute teeth, and the angle of obliquity of the tooth adopted is usually $14\frac{1}{2}°$. The bottom of the tooth must be well rounded and have no sharp corners. The angle of the tooth relative to the axis now commonly used is about 30°.

The Power Plant Co Ltd. of West Drayton use for the pinions, alloyed steels (nickel or chrome nickel steel) and for the wheels above velocities of 4,000 ft. per min., forged steel rims.

The calculation must start from the requisite pinion diameter to transmit a given load without exceeding the very narrow limits within which bending and twisting are allowed.

With gears where the pinion active face exceeds three times the pitch diameter, three bearings are invariably required for the pinion, to resist bending. The slightest inaccuracies in pitching and setting of the wheels, and comparatively small bending and twisting strains are liable to affect turbine gears very adversely, but these effects can be counteracted by special designs such as the wheels with the pressure compensating device as manufactured by the above company.

Pitch.

Fine pitches give silent running at high speeds, and a normal pitch, that is, the pitch measured at right angles to the teeth, of 0·583 in. (or $\frac{7}{12}$ in.) has been largely used in this country. For small pinions, or where extreme silence is of importance, 0·4 in. in pitch has been used.

The number of teeth should not be less than 19, with normal addendum and dedendum.

An ample supply of oil is imperative, not only to lubricate the teeth, but also to carry off the heat generated. For this purpose it is usual to have $\frac{1}{4}$ in. to $\frac{3}{16}$ in. nozzles of about 5 ins. pitch squirting oil under a pressure of 10 to 20 lbs. per square inch on to the line of contact between the gear wheels. The quantity of oil is about 1 gallon per minute per 100 to 150 h.p. transmitted. The case must be well drained, otherwise if the wheel dips into the oil at the bottom much heat will be generated by the churning of the oil.

The power transmitted by a pinion depends upon the allowable tooth speed, load per inch run, and the distortion due to the deflection and twist of the pinion, which must be so small that the distribution of the load on the teeth is uniform. Tooth speed up to 120 ft. per second is common.

The load on the teeth is generally reckoned in pounds per inch run, and is of course the same whether per axial inch or per inch of tooth along the helix. It is determined by the safe bending stress, pressure at point of contact, and by the danger of the oil film failing. The bending stresses are usually low and ignored. For similar crushing stress on the material of the tool, the load (p) per inch run in pounds $= ad$; where d is the pitch diameter of the pinion in inches and a is a constant. The stress on the oil film will obey some such law as $p = bd^n$. Mr. H. M. Martin (see *Engineering*, August 11, 1916) gives $n = \frac{1}{2}$. The conditions mean that up to a certain diameter $p = ad$, and that above it $p = bd^{\frac{1}{2}}$.

Messrs. Parsons take $a = 80$ and $b = 175$, but values of $b = 250$ have been used.

The distortion of the pinion is made up of two items—the twist due to the torque transmitted and the bending due to the load on the teeth. The load on the tooth is assumed to be uniform, and the effective diameter of the pinion is the pitch diameter.

FIG. 16.

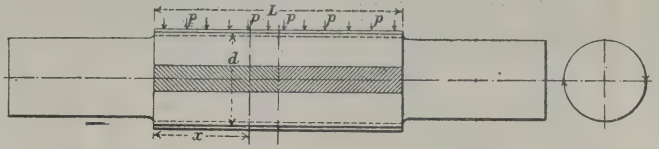


FIG. 17.

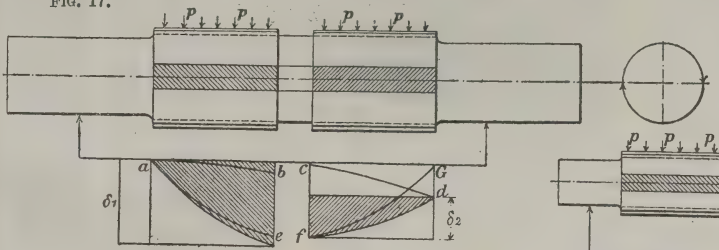


FIG. 18.





FIG. 20.

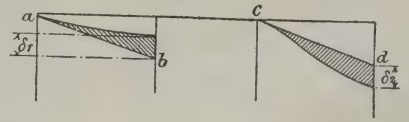

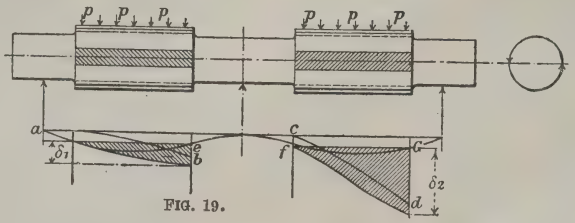


FIG. 19.

At any point x in fig. 16, the torque T is:

$$\frac{pxd}{2} = \frac{2fI}{d} = \frac{\pi f d^3}{16}$$

where f is the shear stress at the circumference of the pinion, and I is the polar moment of inertia or $\frac{\pi d^4}{32}$. Hence it follows that $f = \frac{8px}{\pi d^2}$. If N is the modulus of rigidity, which for steel is 12,000,000 lbs. per square inch:

$$\frac{dy}{dx} = \frac{f}{N} = \frac{8px}{\pi N d^2}$$

$$y = \frac{4p}{\pi N} \frac{x^2}{d}$$

which is a parabola. The twist in the first half of the pinion is:

$$y_1 = \frac{p}{\pi N} \frac{l^2}{d}$$

and in the second half:

$$y_2 = \frac{3p}{\pi N} \frac{l^2}{d}$$

There are two cases to consider: the case where there is no centre bearing and the pinion is supported from the ends, as in fig. 17, and the case where there is a centre bearing, as in fig. 19.

The deflection of the pinion can be calculated in the usual way, and is shown by the curves *ae* and *fg*. To this must be added the twist, as shown by the curves *ab* and *cd*. Adding these together, the total distortion is shown by the shaded area, the maximum distortions in each half of the pinion being δ_1 and δ_2. The gap shown in the middle of the pinion is to enable the hob to clear the teeth in each half.

If, in the case of a pinion with a centre bearing, the pinion took up the position *abcd* shown in fig. 20, the effect of the distortion of the pinion is reduced.

In the case of a pinion without a centre bearing, the effect is only small, as shown in fig. 18.

In the case of a pinion without a centre bearing the bending is the chief consideration, whereas in the case of a pinion with a centre bearing the twist is the chief thing.

The allowable distortion should not exceed $\frac{1}{1000}$ in.

(*Prof. Gerald Stoney, F.R.S., D.Sc.*, '*Trans. Manchester Assoc. of Engineers*, 1919.')

A load of 300 lbs. per inch of tooth (measured axially) is a good average figure. Usually the pinion is made of nickel steel or chrome steel. The torsional stress in high-speed shafts varies from 1,500 to 2,500 lbs., and in the low-speed shafts from 3,000 to 3,500 lbs.

Pitches as high as 0·9 in. have been used for high-speed pinions, and 2 ins. for second reduction pinions.

Single reduction gears having a velocity ratio of 28 to 1 have been used, but this value is extreme.

Worm Gearing.

To be correct, a worm gear should have the cross-section of the wheel hollowed on the teeth to the radius of the worm. The correct form of tooth is peculiar and difficult to understand and make, but it can be accurately formed by a simple device. Let *abc*, fig. 20A, p 891, represent the pitch line of a wheel and *b* the form of a tooth suitable to drive a rack.

A circle *de* is fitted with a thin steel tooth of this shape, and this circle is revolved with a wax worm W at the correct speed at which the worm and wheel will turn. The tooth *b* will cut a thread on the worm of the correct shape at all points, from end to end of the worm. If now this worm be cast and fluted to form a cutter it will serve to cut a worm wheel, or it may be used to mould a worm wheel in wax by the process of revolution.

For good working, worms should be short, and worm wheels of large diameter, and the worm should run in an oil bath. The best materials to work together are phosphor bronze and steel, the latter being the worm.

In the figure, if OK be the radial line of any tooth, the shape of the worm tooth at an angular distance ϕ from the line of centres is such as would properly belong to a wheel whose centre of revolution was at K, and whose radius was the distance from K to the pitch circle of the wheel. K is, in fact, the instantaneous axis of the wheel which would act as a spur wheel with the worm wheel tooth *b*. Thus each part of the worm has virtually its representative instantaneous axis.

Run in an oil bath, the wheel will drive the worm if the angle be chosen fairly large. The Wilkinson tramway locomotive was an example of a worm-geared engine, in which the worm was

driven by the wheel when steam was shut off the engine. The fly of a musical box is also an example of a worm driven by a wheel. In practice worms need not be hollow-faced but simply made straight, so that the longitudinal section of a worm is a straight rack, and with involute teeth the teeth are straight sided, not curved.

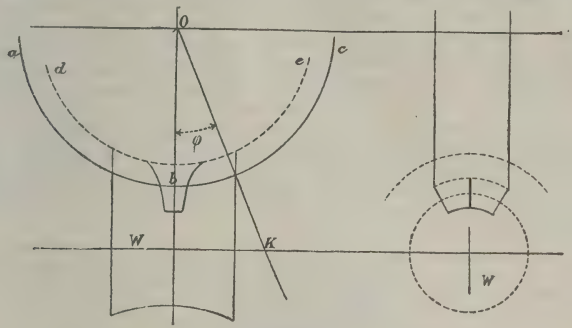


FIG. 20A.

To work at best efficiency, the angle of thread of a worm should be 45°, and it is not desirable, so far as efficiency is concerned, to employ a less angle than 30°.

High Efficiency Worm Gearing.*

Hitherto worm gears have been generally used for transmitting motion from one member to another, and usually consisted of a large wheel with a low lead angle meshing with the wheel. This resulted in low efficiencies. Of late years, however, there has been a tendency to employ machine-cut worm gearing with high lead angles, resulting in a corresponding high efficiency.

In the following observations the Globoidal type is not considered.

Pitch.—The distance from one tooth to the next, measured along the pitch line, is called 'the pitch,' and when measured along a line parallel to the axis of the worm is called the 'linear pitch.' The normal pitch is that measured normal to the thread, whilst the circular pitch is measured circularly at right angles to the axis. The circular pitch of the wheel is equal to the linear pitch of the corresponding worm.

Lead.—The distance travelled, parallel to the axis, by a thread when making one revolution round a worm is termed 'the lead,' and is equal to the number of threads multiplied by the pitch. As the thread or helix travels round and along the worm it makes an angle with the axis, or to a line parallel to it. This angle is called the 'spiral angle,' and its complement the 'lead angle.' The lead bears quite important relation to the efficiency and durability of worm gears. The maximum efficiency of a worm gear may be expressed by the equation :—

$$\eta = \frac{\tan\theta}{\tan(\theta+\mu)}; \text{ the reversed } \eta = \frac{\tan(\theta-\mu)}{\tan\theta};$$

where θ is the lead angle, and μ is the angle of coefficient of friction.

These two equations show that the maximum efficiency is obtained when the lead angle approximates 43°—40′, and that an efficiency of 50 per cent. is obtained when the worm angle is equal to the friction angle, at which point the gear is irreversible. In order to obtain a high angle, it is necessary to keep the diameter of the worm as small as possible. This also has the effect of reducing the rubbing velocity.

Influence of Speed on Pressure.—It has been stated that the permissible pressure multiplied by the velocity is practically constant. This is not so. Within the usual limits the law appears to be that the permissible pressure varies almost inversely as the cube root of the velocity. Various materials are suitable for different pressures; for light loads, at low speeds, the combination may be a cast-iron wheel and mild steel worm; for heavier loads, a cast-iron wheel and a hardened steel worm; for heavy loads, a phosphor bronze wheel and a hardened and ground worm. On the involute system engagement corresponds to a rack and spur, the revolving

* Paper read by Francis J. Bostock before the Manchester Association of Engineers.

worm causing the imaginary rack to travel along and so rotate the wheel. Therefore one has a worm whose linear or axial section corresponds to a rack, that is, each side of the worm tooth will, on the central section, be a straight line at a predetermined pressure angle. Worm gear, unless correctly designed, does not transmit a uniform velocity from one member to another. A close approximation is obtained with gears of comparatively fine pitch, and in those of a high lead angle any error is sometimes concealed by the adjacent thread being in action in such a manner that by sustaining an extra proportion of the load distribution the variable velocity period is tided over. Even the inertia of the parts may prevent a change in the velocity of the engaging pair, but this is detrimental to the gears. To consider a worm gear as a kind of a development from the screw is fundamentally wrong. The pitch surfaces of the worm gear are cylinders lying at right angles to each other, hence they only touch at one point, whereas in a screw and nut the pitch surfaces coincide. Expressed in simple language, one can say that, consistent with the transmission of uniform velocity, the normal to the surfaces from the point of contact must always cut the central plane which contains the axis of the wheel, at a point on the straight line lying on the wheel pitch cylinder, and consequently tangential to the pitch cylinder of the worm. Thus, for every point of intersection between a worm thread and the zone of contact, there is a definite relation between its angular and longitudinal positions. If contact takes place at any other point than this intersection, it does so to the detriment of the transmission of uniform velocity.

Thermal Considerations.—All frictional losses produce heat, and if the amount of heat generated be greater than the amount radiated, dissipated, or conducted away, the temperature of the gear unit will rise. When it rises above a certain point (about 250° F.), the oil film breaks down and lubricating value ceases, but they are usually run at a nice warm temperature (150° F. to 175° F.).

Thus one requires to know, in addition to the foregoing, the load factor or the proportional time the gears will run on various loads, and the thermal capacity of the case or how many B.Th.U.'s it can dissipate at various temperatures. By this data one can predetermine the temperature rise of the gear unit at the end of any period of running under a certain load factor.

Worm Milling.—Worms are usually supplied solid with their shafts and a bearing on each side of the thread. In order to guarantee concentricity and uniformity of size, a practice is made of grinding of worms on their outside diameters of the thread and journal before the cutting operation. For machining such worms special machines have been devised, and in these the worm is generally caused to travel spirally in front of the cutter, thus milling a thread space for each longitudinal travel of the table. The cutter spindle is carried in a swivelling head which enables it to be set at any angle to suit the spiral of the worm to be cut.

Cutter Form Generation.—The rotary cutter at first sight appears to be quite a straightforward matter, with its contour made to correspond with the space of the worm thread. Such, however, is far from being the case, as its actual contour is quite different from the thread space which it cuts in the worm blank, as will be seen from fig. 21 This apparent paradox

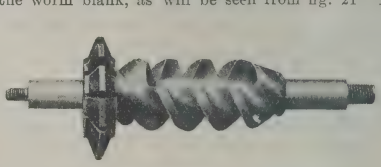


FIG. 21.—Worm and its Cutter.

is caused by the interference of the cutter with the side of the worm thread, and it will be understood when it is remembered that the worm thread is an endless spiral. As a rotary cutter must be circular in shape, and as a circle and spiral cannot coincide, it is obvious that the contour of the circular cutter cannot coincide with the thread space of the spiral worm. The base of the worm thread system is a straight line. In the system of cutter generation a straight edge tool is set to an angle corresponding to the pressure angle of the worm to be cut, and is then made to traverse in a spiral path corresponding exactly with the spiral of the worm. Thus a generating tool is mounted in a worm milling machine in the same position and manner as the worm which is to be cut, its straight edge accurately representing one side of the worm thread. When it has generated one side of a white metal blank it is indexed to the other side, thus forming the contour of the required cutter.

Hobs—Manufacture and Sharpening.—The teeth of worm wheels are of such construction that they do not lend themselves to operations of planing, shaping or milling like other forms of gearing; they can only be produced by a process of generation by means of a cutting tool called a 'hob.' Whilst it is true that the spiral angle pitch, the number of threads, and pitch diameter in the hob must correspond with that of the worm, yet both the outside and

bottom diameters of the hob are made larger in order to provide requisite clearance in the roots of the teeth. The hob throughout is gashed along its length normal to the spiral angle for the purpose of providing a cutting face, whilst the teeth are relieved in order to provide a cutting clearance. As the shape and contour of the wheel teeth are entirely dependent upon the design and accuracy of the hob, it is necessary that this tool should receive the most careful supervision in all stages of its manufacture and subsequent regrinding. Hobs are generally made with their cutting faces radial; it is therefore essential that they should be sharpened radially, or an alteration in shape will result. The same, of course, applies to ordinary rotary cutters. It will be appreciated that as a hob is sharpened its diameter is reduced, but with a reamer hob the reduction in diameter is only a few thousandths of an inch in the whole length of the teeth, thus uniformity of shape is retained.

Worm Wheel Generating.—Generally the worm wheels are rough turned on automatics and turret machines, and pass from thence to the worm wheel section for rough cutting of the teeth, after which they are finished, turned, and finally the teeth undergo a reamering or finishing operation. In no small measure is the interchangeability and high efficiency of the wheels due to this reamering operation.

The generating of the teeth of the worm wheel is carried out in a machine as illustrated in fig. 22, the blank being mounted upon a revolving table, which is positively driven at a

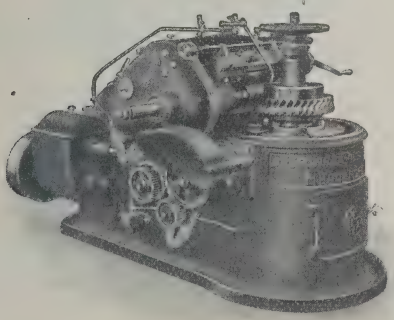


Fig. 22.—Worm Wheel Generator (*D. Brown & Sons (Huddersfield) Ltd.*).

predetermined speed, according to the ratio of the gears being cut, whilst the hob is caused to travel longitudinally across the face of the wheel. Owing to the spiral of the hob it is necessary to compensate for its longitudinal travel by means of a differential, whilst the rate of travel or feed can be varied at the will of the operator.

A special feature of the mounting of the worm wheel on the table is made. A hardened and ground micrometer adapter carries the arbor, which supports various other adapters to suit the locating register of the worm wheel blanks, the micrometer being adjusted until the specified distance from the locating face of the blank to the axis of the hob is obtained.

To facilitate setting up, and to test the true running of the registers and worm wheel blank the drive to the table is arranged so that it can be disconnected in order that the operator may be able to revolve the table by hand and so, by means of a clock indicator, test the accuracy of the mounting.

The head which slides horizontally along the bed towards the worm wheel contains the whole of the mechanism for driving the hob and traversing the hob slide. The latter is mounted on the head at an angle normal to the direction of the stress, so as to present the maximum bearing area to the very best advantage.

The main drive is taken from a single pulley fitted with an internal friction clutch in conjunction with a four-speed gear box. The drive is then transmitted in one case directly to the index change wheels for driving the table, and in the other to the worm wheel mounted on the hob spindle.

It should be mentioned that the dividing wheel is of greater diameter than the largest blank which the machine will cut, and a neat design is effected by allowing the cuttings to fall through the arms of the table into the bed of the machine, from whence the cutting lubricant is drained.

Worm and Wheel Inspection.

For testing the accuracy of the pressure angle a knife edge protractor is placed along the side of the thread and the angle read to plus or minus a few minutes. This is carried out in a worm gear testing machine, illustrated in fig. 23, which has been designed to enable the various testing operations to be performed on both worms and wheels. These can be tested separately as individual pieces, or in combination when mounted together at the specified centre distance. The bed consists of two slides at right angles, one carrying a pair of adjustable centres and the various testing appliances, whilst the other slide carries an adjustable arbor adapter, which is controlled by a micrometer screw, enabling it to be set at any required

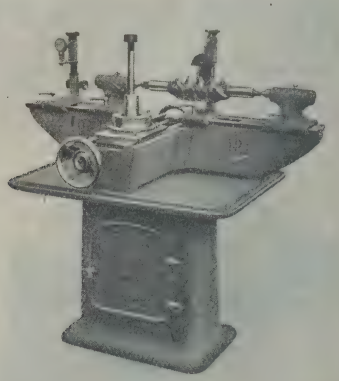


FIG. 23.—Testing Worm for Accuracy of Pressure Angle.

distance from the other slide, so giving correct centres for the worm and wheel under test. This machine is most conveniently operated, as it can be worked from either side, thus allowing the operator to be in the most advantageous position to carry out all the necessary tests. Other instruments are used on it for testing concentricity and lead.

The process of case-hardening worms is exactly the same as for other work, but although every precaution be taken some little distortion is bound to occur. They therefore require straightening so that their pitch diameter runs true; for this purpose a clock indicator on a testing machine is used in conjunction with the straightening press, and by means of a ball placed in the space this operation can be accurately and quickly performed.

Interchangeability of the worm wheel is ensured by the use of a double ball micrometer which measures the comparative pitch diameters.

The final inspection is made on a testing machine, where the gears undergo a more rigorous test. The wheels are tested for concentricity of cutting and the distance from the centre of the worm axis to the locating face, after which they are tested together to verify the centre distance.

Worm Gear Application.—Worm reducing gear units are with great advantage coupled direct to electric motors, enabling reductions in speed from 4 : 1 to 100 : 1 in a silent and efficient manner, and when both of them are mounted on the common baseplate they represent a simple, sound and economical proposition.

On account of their ability to withstand considerable overload for short periods they lend themselves admirably for intermittent work, because for the work they are called upon to do they can be made relatively small; therefore they are of great use in crane work and for starting purposes of electric motors, steam, gas and oil engines.

SECTION XIX

PART I

BEARING PRESSURES—HEATING OF BEARINGS—BALL AND ROLLER BEARINGS (pp. 897-907)

(Revised by Dempster Smith, M.Sc., M.I.Mech.E., with contribution on 'Ball and Roller Bearings' by Prof. John Goodman, M.I.C.E., M.I.Mech.E.)

PART II

LUBRICATION AND LUBRICATORS (pp. 909-917)

(Revised by Prof. John Goodman, M.I.C.E.)

PART III

SHAFTING AND SHAFTS—FLEXIBLE COUPLINGS (pp. 919-929)

PART IV

SPRINGS (pp. 931-936)

It is Significant—

that when an engineering product is designed with a view to supreme efficiency in its own particular class, you will find that

SKF

BALL BEARINGS

have been specified

SPECIFY SKF BALL AND ROLLER BEARINGS AND ENSURE SATISFACTORY SERVICE

WRITE FOR CATALOGUES AND BOOKLETS.

The Skefko Ball Bearing Co. Ltd.

LUTON——————BEDS.

Branches:

London, Birmingham, Manchester, Leeds, Leicester, Sheffield, Bristol Glasgow, Newcastle-on-Tyne.



SECTION XIX

PART I

BEARING PRESSURES—HEATING OF BEARINGS—BALL AND ROLLER BEARINGS

(Revised by Dempster Smith, M.Sc., M.I.Mech.E.)

BEARING PRESSURES.*

Pressures on Bearings.

The following table shows the wide variation of pressure in bearings :—

	Lbs. per Sq. In.
Light and fast-running cotton spindle	2 to 5
Light shafting	80 to 100
Heavy shafting	300 to 600
Marine engine crank pins	600 to 900
Crosshead pins (horizontal engines)	1,200 to 1,300
Crank pins ,, ,,	800 to 950
Crank shaft (steam load) ,, ,,	100 to 150
,, ,, (combined load) ,, ,,	150 to 200
Second motion bearings ,, ,,	100 to 200
Crosshead slides ,, ,,	40 to 50
Intermediate piston rod slides ,, ,,	20 to 40
Main bearings (vertical high-speed engines)	200 to 300
Crank pins ,, ,,	400 to 550
Crosshead pins ,, ,,	1,000 to 1,200
Crosshead slippers ,, ,,	40 to 50
Eccentric straps ,, ,,	60 to 70
Crosshead pins (locomotive)	1,400 to 1,800
Crank pins (,,)	1,000 to 1,500
Axle bearings (loco. engine and tender)	200 to 250
Railway carriage bearings	300 to 350
Babbitt metal on cast-iron slide	200 to 250

MAXIMUM SAFE PRESSURES ON BEARINGS.

Nature of Bearing.	Safe Load. Lbs. per Sq. In.
Ordinary bearings for shafting :—	
Wrought-iron on cast-iron	250
Wrought-iron on gunmetal	300
Mild steel on cast-iron	300
Mild steel on gunmetal	370
Mild steel on white metal	500
Cast-steel on gunmetal	600
Flywheel shaft	250

At unit pressures of 250 lbs. per sq. in. for cast-iron bearings, and 145 lbs. for bronze bearings, there is difficulty in keeping the boxes from seizing the shaft.

* For Bearing Metals, see METALLURGY, Section XXXVII.

Professor W. C. Unwin carried out a series of experiments with Delta White Antifriction Metal, of which particulars are given. These tests show that this metal heats but little, even with high-bearing pressures :—

Mean Revolutions of Shaft per Minute	Mean Pressure per Square Inch of Journal Surface in lbs.	Mean Temperature in Deg. Fahr.	Mean Moment of Friction in lbs.-in.	Net Pressure on One Step in lbs.	Friction on One Step at Journal Surface in lbs.	Co-efficient of Friction
123	128·35	62·65	9·25	477·5	6·17	0·01292
	256·70	64·00	16·26	955	10·84	0·01135
	385·05	65·75	24·23	1432·5	16·15	0·01128
	513·40	67·70	40·87	1910	27·25	0·01428
315	128·35	73·80	12·00	477·5	8·00	0·01675
	256·70	76·20	17·25	955	11·50	0·01204
	385·05	80·05	26·00	1432·5	17·33	0·01210
	513·40	86·40	44·63	1910	29·75	0·01558

COEFFICIENTS OF FRICTION AND SAFE MAXIMUM PRESSURES FOR VARIOUS LUBRICANTS.

Lubricant.	Coefficient of Friction.	Max. Safe Pressure in Lbs. per sq. in. on Nominal Area.
Olive oil	·00172	520
Lard oil	·00172	570
Sperm oil	·00208	570
Mineral oil	·00176	625
Mineral grease	·00233	625

Heating of Bearings.

SIGNALS FOR INDICATING HEATING OF BEARINGS.

The double iodide of silver and mercury, $AgIHgI_2$, is a pale lemon-yellow powder at ordinary temperatures, and changes to a vivid carmine colour at about 90° to 100° C., the change in both directions being fairly sharp. The copper mercuric iodide, $Cu_2I_2 2HgI_2$, is a vivid scarlet-vermilion at ordinary temperatures, and at 60° to 70° C. it changes to a chocolate-brown. Both these compounds are adapted for use under suitable conditions, but a mixture of the two, consisting of 85 per cent. of the copper salt and 15 per cent. of the silver salt, is more sensitive and gives a greater colour range from vermilion to almost black, the transition being exceedingly sharp.

The compounds may be prepared in a variety of ways. A simple method of preparing the copper salt is by well triturating in a mortar 380 grms. of cuprous iodide with 910 grms. of mercuric iodide, sufficient water being added to form a paste. When thoroughly mixed, the mass is dried in the water-oven, and the dried mass ground to an impalpable powder. Another method is to dissolve the mercuric iodide in excess of potassium-iodide solution, and precipitate the double salt by the addition of copper-sulphate solution. The silver salt can be prepared in a similar manner by double precipitation. Whichever method is adopted the product should be well washed to eliminate soluble impurities, as these appear to retard the colour-change, as well as to affect its character.

To apply the mixture, convert it into a varnish paint or enamel, by incorporating the powder with a colourless varnish medium that will stand moderately high temperatures without softening. A good white-shellac spirit-varnish, such as is used on electrical machinery, has been found suitable for most occasions, but for high temperatures a medium such as is employed in the high-temperature aluminium paints used for steampipes, and which will resist temperatures up to 200° C., is preferable. About 100 grms. of compound to 70 c.c. of medium will be found a mixture of suitable consistence.

A convenient method of applying this heat-detector is first to paint a white circle or ring on the bearing or other place which it is desired to keep under observation, using a zinc-white paint. This white circle is applied to the journal or housing of the bearing, and the detector-paint is applied as a vivid red bull's-eye in the middle of this, thus forming a striking object which is visible from considerable distances. It must be applied to the block of metal as near as possible to the point at which the heat is likely to be generated. It is sometimes desirable to apply the paint to the shaft itself, just where the latter extends beyond the bearing-metal. A convenient method is to apply a broad band of white paint with a narrower band of the red detector paint in the middle. This red band in the middle of the white one is easily seen as the shaft rotates. In any case, after the paint is dry it should be protected with a coat of colourless oil-proof varnish, so that the surface may be occasionally wiped free from dust and dirt. The visibility of the paint against its white background is high, the bright scarlet colour being visible from long distances without effort, and the change at 60° to 70° C. to black is easily observed. It is generally easy to arrange matters so that the detector is placed in a position where it is visible almost without conscious effort; and experience has proved that a workman is easily trained to cast his eye occasionally on the detector, while he could not be depended upon to climb to the spot and feel the bearing on the remote chance of finding it heating. When the paint changes colour there is something wrong with the bearing, but generally speaking it will be found that the matter is taken in time, and that no damage is done, the bearing simply requiring cleaning and adjustment without serious stoppage and expense. *(H. T. Pinnock, 'Journal of the Chemical Society.')*

BALL AND ROLLER BEARINGS.

(Contributed by Professor John Goodman, M.Inst.C.E., M.I.Mech.E.)

Ball Bearings.

In the earliest cylindrical or radial bearings the balls bore on four points as shown at A, fig. 1,* and corresponding thrust bearings were made, as shown at F. It is impossible, under such conditions, to secure a pure rolling motion for the balls, so that grinding inevitably takes place. The modification shown at G was then tried, but only with partial success. Three-point bearings, such as those shown at B, C and H, and also many others, were tried, but in every instance the balls grated and developed deep scratches after running for a short time; they were then

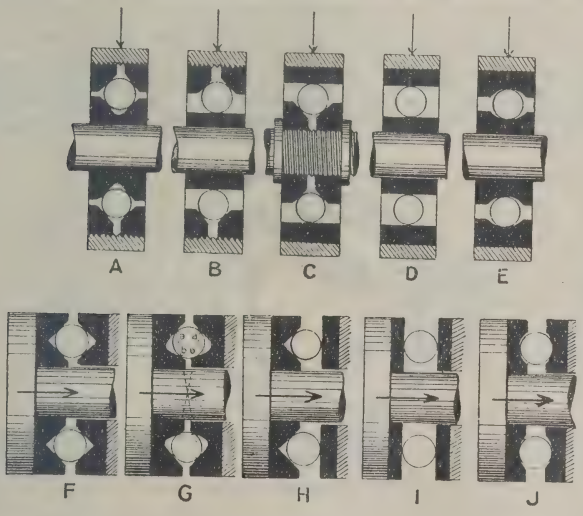


FIG. 1.

* Figs. 1, 6, and 8 are reproduced from Professor Goodman's 'Mechanics applied to Engineering,' by the permission of the publishers, Messrs. Longmans, Green & Co.

abandoned for two-point bearings (the outcome of experiments by the writer), shown in D and I. The friction was found to be less, the bearing was cheaper to make, the balls had a true rolling motion, and, consequently, showed no signs of scratching, grinding, or wear; the bearings ran smoothly, and were in every respect a success. In general, a cage was used for keeping the

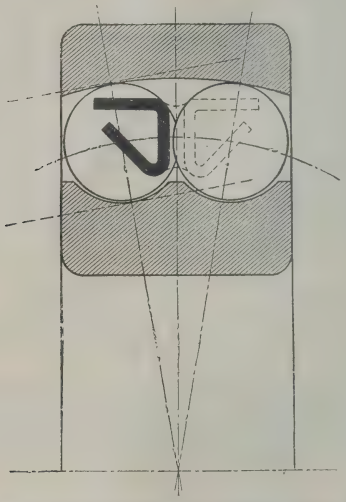


FIG. 2.—Diagram showing Construction of 'Skefko' Radial Ball Bearing.

balls in their relative positions, but in some instances it was found that it might be dispensed with. Other experimenters, notably Professor Stribeck, of Berlin, modified the two-point bearing by providing grooved ball races, as shown in E and J. Balls running in such races will support considerably greater loads than when running on plain surfaces which, of course, is a great advantage. The load that may be placed on a bearing of given dimensions, other

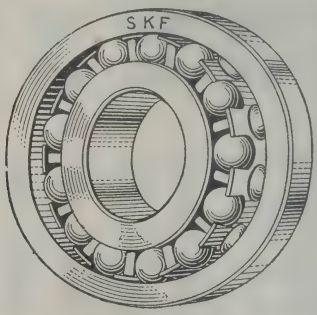


FIG. 3.—Radial Bearing.

things being equal, depends on the number of balls interposed between the races. In the bearing D there is no difficulty in inserting the full number of balls, but in the bearing E not much more than one-half the full number of balls can be inserted unless a transverse groove is cut in the side of each race through which the balls may be sprung or some other device

adopted. The difficulty of inserting the balls is overcome in a most ingenious manner in the 'Skefko' bearing, by making the inner surface of the outer ball race a portion of a sphere the centre of which coincides with the centre of the shaft. By tilting the cage and inner race two full rows of balls can be inserted. See figs. 2 and 3.

The quality of the steel for the balls and races must be of the best, and the amount of carbon should approach the saturation point, viz. 0·89 per cent. Some makers of repute prefer chrome steel. The hardening and tempering must be done with the greatest possible care.

The amount a ball yields when compressed is very small, hence it is of the highest importance

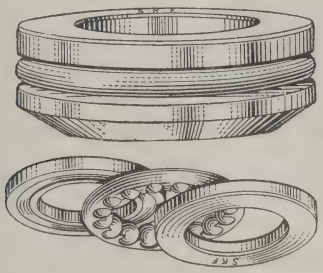


FIG. 4.—Single-thrust Bearing.

that the balls should be as nearly spherical as possible, and that all the balls in a given bearing should be of exactly the same size; also that the races be ground and polished to a high degree of accuracy. A defect of $\frac{1}{10000}$ inch is fatal to smoothness of running and to the life of a bearing. All makers of repute will now supply balls guaranteed to be correct to within $\frac{1}{100000}$ inch.

A ball bearing must be truly mounted on its shaft in such a manner that it will not shift and yet it must not be so tight as to unduly expand the inner race. The outer race must be a good sliding fit with a small amount of end play in its housing. The most perfect ball bearing may easily be ruined by unskilful mounting; indeed, it is practically certain that nearly all

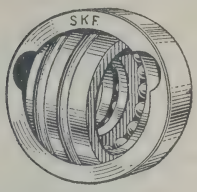


FIG. 5.—Self-contained Double-thrust Bearing.

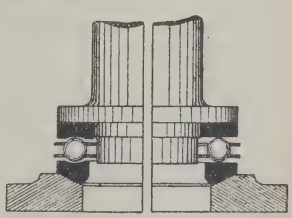


FIG. 6.

failures of ball bearings can be traced to this cause. Users who are not in the habit of working to $\frac{1}{10000}$ inch will do well to send their housings and shafts to the makers in order to have the ball bearings accurately fitted. Owing to the spherical seat in the 'Skefko' bearing, the shaft may be allowed to run considerably out of truth without seriously affecting the smoothness of running of the bearing.

It is of the highest importance that ball bearings should be kept free from dust and grit.

In the case of thrust bearings, the stationary ring should always be made with a spherical seat to allow the bearing to align itself in the event of the centre line of the shaft getting shifted relatively to the housing. See figs. 4, 5, 6.

Permissible Loads on Bearings.

The safe working load for a given bearing is much greater when the bearing is running at a low than at a high speed. The ruling factor as regards the working load for a ball bearing is the speed of rotation of the balls themselves; thus in the case of two shafts, A and B, each fitted with thrust bearings having the same number and diameter of balls, and both running at the same number of revolutions per minute, if the diameter of the ball path in A were greater than in B, the safe working load would be greater for shaft B than for A.

Let P = The maximum permissible working load in pounds.
d = The diameter of the ball in inches.
D = The diameter of the ball path in inches.
n = The number of revolutions per minute of the shaft.
k = A constant depending upon the form of bearing.
c = A constant.
m = The number of balls in the bearing.
x = A coefficient depending upon the revolutions per minute of the shaft.

Stribeck's formula for radial ball bearings is :—

$$P = 12{\cdot}8\ x\ m\ d^2$$

where x has the following values :—

n 0	10	150	300	500	1,000	1,200
x 48·4	36·3	29·04	24·2	20·9	15·62	14·96
n 1,500	2,000	2,500	3,000	4,000	5,000	10,000
x 13·64	12·1	10·56	9·68	8·58	7·7	5·06

Goodman's formula for ball bearings is :—

$$P = \frac{k\ m\ d^3}{nD + cd}$$

where k and c have the following values :—

Type of Bearing.		k	c
Radial.	Flat (i.e. not grooved) races	1,000,000	2,000
	Hollow races of ordinary quality	2,000,000	2,000
	Hollow races of best quality	2,500,000	2,000
Thrust.	Flat (i.e. not grooved) races	500,000	200
	Hollow races of ordinary quality	1,000,000	200
	Hollow races of best quality	1,250,000	200

A comparison of the results obtained by the two formulæ is shown in fig. 7.

In the 'Skefko' bearing the races must be regarded as flat, but since there are at least twice as many balls in this type of bearing as in other bearings of the same external dimensions, the theoretical load carrying capacity is the same. It is claimed that this bearing will work satisfactorily with a small amount of lateral thrust.

Design of Ball Bearings for Big Loads.

When a ball bearing is required for a load larger than that given in makers' catalogues, a special bearing can be designed and made to suit the conditions, but any departure from the makers' standard sizes is a costly proceeding. It is always less expensive, and generally much more satisfactory, to use multiple ring bearings consisting of two or more standard commercial

bearings suitably mounted. The difficulty when using multiple ring bearings is to ensure that the load shall be evenly distributed over all the rings. Goodman overcomes this difficulty by

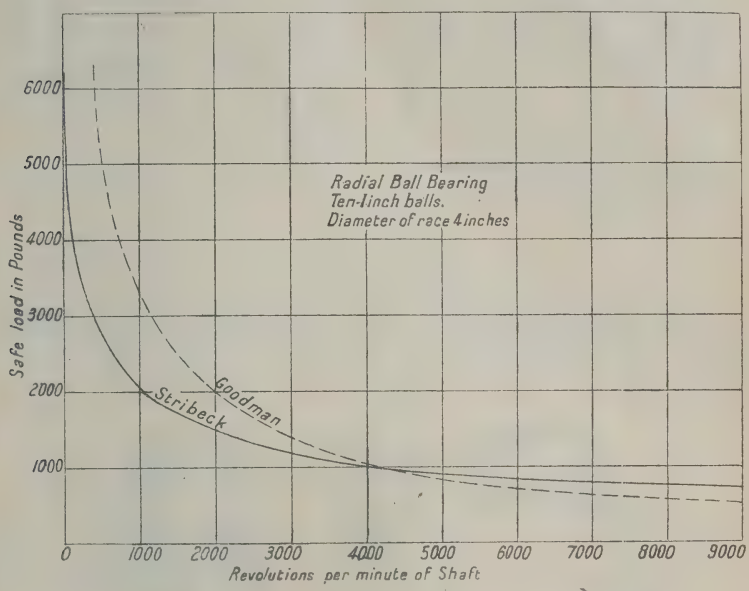


FIG. 7.

backing them with linoleum as shown in figs. 8 and 9.* The housing must also be spherically mounted in order to allow it to adjust itself to any want of alignment.

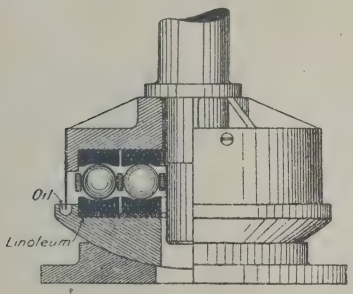


FIG. 8.

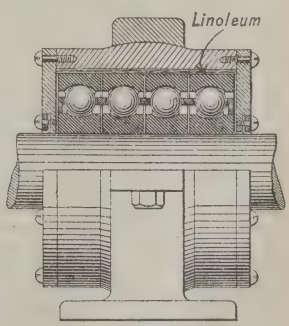


FIG. 9.

* Figs. 9 and 10 are reproduced from the Author's paper on 'Roller and Ball Bearings.' Proceedings of the Institution of Civil Engineers, by the permission of the Council.

Advantages and Disadvantages of Ball Bearings.

Advantages.

The friction is usually less than one-tenth of that encountered in ordinary bearings as commonly lubricated.

The friction at starting is no greater than when running.

The friction does not increase with the speed.

They require an extremely small amount of oil, the cost of which is negligible.

They occupy much less lateral space on the shaft than an ordinary bearing.

If the bearing is properly treated the wear is extremely small.

Disadvantages.

The first cost is usually greater than that of an ordinary bearing, but this is not invariably the case.

If overloaded, or if lubricated with unsuitable oil the balls pit and peel, and then they make a great deal of noise, especially at high speeds.

They require extreme care in fitting on to the shaft and in the housing.

Roller Bearings.

A great many attempts have been made at producing a satisfactory roller bearing for big loads, but with the exception of one or two well-known types of roller bearings they have only met with indifferent success, mainly owing to the fact that the rollers tend to creep endwise along the shaft, and thereby produce 'end thrust' on the cage and casing. The cause of the trouble is perfectly well known; it has been successfully overcome by several makers, although exceedingly difficult to remedy. In the early days of roller bearings it was believed that the

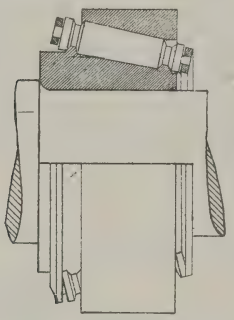


Fig. 10.

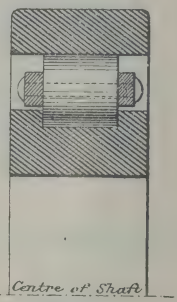


Fig. 11.

trouble arose largely from imperfect workmanship, and very costly experimental bearings made of excellent materials, and with a marvellous degree of accuracy, were tried with variable success. The Hyatt bearing, in which the solid rollers are replaced by helical springs arranged alternately with right- and left-handed helices, has been designed to meet this difficulty, whilst the Empire Co. has also introduced improvements which are claimed to overcome the trouble. A high duty type of bearing has recently been introduced in which the roller and races are hardened and accurately ground.

Other makes which claim to run satisfactorily under high loads per square inch bearing surface are those in which short rollers are used, the rollers and races being made of the best quality of glass hardened tool steel, finished and ground to as high a degree of accuracy as a high-grade ball bearing. The rollers in such bearings are always kept in their correct position by means of a suitable cage. A bearing of this type—the Timken, fig. 10—is largely used for motor-car work; owing to the rollers being tapered, wear can be taken up if necessary. Another highly finished roller bearing of this type—the Hoffmann—is shown in fig. 11, the end thrust is very small, the friction is no higher than in the best ball bearings, the load-carrying capacity is greater than that of a ball bearing of the same general dimensions, and the wear is practically nil, even when the bearings are allowed to run for years under considerable overloads.

Even the most perfect roller bearings will fail if they are not carefully mounted and kept free from grit.

Lubrication of Ball and Roller Bearings.

All well designed ball and roller bearings will run for long periods, and quite satisfactorily, without any lubricant if they can be kept perfectly free from dust, grit, and moisture; but since such conditions can rarely, if ever, be fulfilled in practice, some lubricant must be used, which should be most carefully selected. An unsuitable lubricant may ruin a bearing in a few weeks. Lard oil of the best quality gives good results, but some prefer a semi-fluid lubricant, such as Duckham's or Nicol's grease. The amount used is exceedingly small as compared with an ordinary bearing, hence it is the height of folly to run the risk of ruining a bearing by using a cheap, but unsuitable lubricant.

Sternol Ball-bearing Grease.

(Sterns Ltd.)

This is guaranteed by its makers to be an absolutely pure neutral grease, specially manufactured for use in ball bearings. It is certified by the Sheffield Testing Station, and recommended by leading ball bearing manufacturers.

Thrust Bearings.

A considerable number of thrust bearings have been recently made which have a mechanical efficiency quite as high as a modern journal bearing, combined with the same high load-carrying capacity. At the rubbing speeds usually obtained in bearings the coefficient of friction for smooth dry surfaces ranges from 0·06 for some anti-friction metals, and steel to about 0·15 for cast-iron and steel, but when the surfaces are properly lubricated the coefficient may fall to 0·0012 or less. This figure is commonly obtained in the better class of journal bearings. An equally low frictional loss may be secured in thrust bearings. Fig. 12 shows a pivot thrust

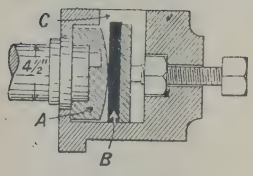


Fig. 12.

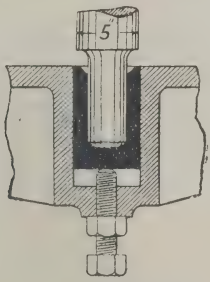


Fig. 13.

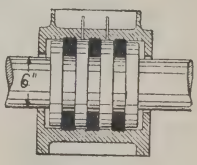


Fig. 14.

bearing as sometimes used in the worm shaft of a brick-making machine. The end of the shaft is fitted with a steel shoe A which is thrust against the gun-metal plate B. The box C is filled with grease. The pressure when the plate B is new is very high, and when worn hollow is about 1,200 lbs. per sq. in. The high pressure squeezes the grease out. A bearing of this type is very inefficient.

Fig. 13 shows an ordinary footstep bearing as used in some water turbines. The load is usually about 1,000 lbs. per sq. in., under which pressure efficient lubrication is impracticable, with the result that there is metal-to-metal contact, a high coefficient of friction, wear is rapid and ample adjustment must be provided.

Fig. 14 shows a section of an ordinary collar thrust bearing. Owing to the large radius of friction, the coefficient of friction must be kept low if this type of bearing is to be reasonably efficient. This is accomplished by increasing the number of collars on the shaft so that the area is increased, and the pressure thereby reduced to 50 or 60 lbs. per sq. in. At such a pressure the oil can find its way between the collar faces, and the coefficient of friction under such circumstances is about 0·03. According to Mr. Beauchamp Tower, a pressure of 75 lbs. per sq. in. is the maximum that can be safely carried under such conditions.

The following comparison shows the inefficiency of the pivot and collar thrust bearing, as compared with a perfectly lubricated journal:—

Type.	Lbs. per Sq. In.	Average Friction Coefficient.	Condition of Surface.
Pivot thrust . .	1,000 to 1,200	0·10	Dry.
Collar thrust . .	50 to 60	0·03	Greasy.
Journal bearing . .	500 to 600	0·0025	Perfect lubrication.

Mr. Tower found that for journal bearing with oil-bath lubrication a load of 600 lbs. per sq. in. could be carried with safety, but when the oil was supplied from the top by a hole drilled through the brass, and an oil groove cut along the under surface, heating resulted with a load of 100 lbs. A film of lubricant between the surfaces is the object to be aimed at. A thrust bearing made with one plane surface subdivided into radially arranged segmental blocks each pivoted in the

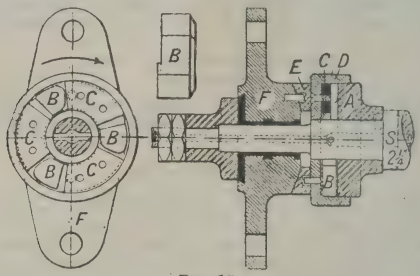


FIG. 15.

vicinity of the resultant pressure and free to move through a slight angle from the plane of rotation, will approach the efficiency of a perfectly lubricated journal when plenty of oil is provided.

The permissible pressure on these bearings is proportional to the speed and viscosity of the lubricant. If a bearing can carry 50 lbs. per sq. in. at a speed of 1 foot per second with an oil of 0·5 viscosity, it will carry 500 lbs. with an oil of 5·0 viscosity at the same speed, or at a speed of 10 feet per second with the same oil. These bearings are employed in high-speed turbines with oil lubrication, and for slow speeds in grinding machinery with grease lubrication.

A steam turbine thrust bearing of this type, made by Belliss & Morcom, of Birmingham, to the design of Mr. H. T. Newbigin, is shown in fig. 15.

A is the collar on the shaft, B are the segmental rubbing blocks, the backs of which are cut away as shown to allow of their tipping through the necessary angle to the plane of rotation

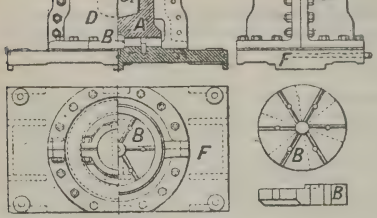


FIG. 16.

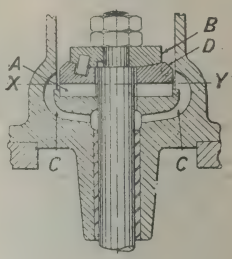


FIG. 17.

C are spacing blocks between which the loose rubbing blocks are fitted. The casing D holds the spacing and rubbing blocks together. Automatic adjustment is provided by the concaved face of the washer E, and convex face of the cross-piece F, which is bolted to the turbine frame. The oil is supplied through the hole in the centre of the shaft S. The bearing was tested under a load of 1,500 lbs. or 500 lbs. per sq. in. at a speed of 1,750 r.p.m., under which it ran continuously at a temperature of 126° F. The oil used had a viscosity of 4·6, and with a thinner oil would probably have run at a lower temperature.

A low-speed bearing of the Mitchell type (see Index), designed by Mr. Newbigin for the large pan grinding mills of T. C. Fawcet, Ltd., of Leeds, is shown in fig. 16. There is no spherical adjustment, but the shaft is a loose fit in the shoe-piece A, which is turned by a driver G attached

to the shaft; there are no spacing blocks. As in fig. 15, B are the segmental blocks, D the casing, and F the cross-piece. This bearing is designed for a load of 13 tons, or 350 lbs. per sq. in. of bearing surface, and a speed of 24 r.p.m. It required about $1\frac{1}{2}$ oz. of thick grease per day.

Fig. 17 shows a further development of the Michell invention, and is lubricated with water only. The speed is about 2,800 r.p.m., and the load 150 lbs. The rubbing surfaces consist of three small blocks marked A, cut away at the back to allow them to tilt and draw in the lubricant, and each pivoted behind its centre in the direction of rotation. Automatic adjustment is provided for by the spherical seat, and water circulation through the ports C. The blocks A automatically tilt relatively to D, and thereby maintain hydraulic pressure between the surfaces and prevent metallic contact. (*H. T. Newbigin, Inst. of Civil Engineers.*)

According to Reuleaux the maximum pressures (lbs. per sq. in.) for pivot bearings are :—

Wrought iron on lignum vitæ, $p = 1{,}400$ lbs.; wrought iron on gunmetal, $p = 700$ lbs. cast iron on gunmetal, $p = 470$ lbs.

Compared with practice these pressures are suitable for speeds below 10 ft. per minute. For a speed of 20 feet take $\frac{1}{4}$, 50 feet take $\frac{1}{8}$, and 100 feet take $\frac{1}{5}$ the maximum values given.

SECTION XIX

PART II

LUBRICATION AND LUBRICATORS

(Revised by Prof. John Goodman, M.I.C.E., M.I.Mech.E.)

LUBRICATION

Steam Cylinders.

The use of fatty matter, however desirable it may be from the frictional point of view, is controlled by consideration of the destination of the steam after it leaves the cylinder. If the spent steam exhausts into the atmosphere, or if it is condensed by a spray injection and subsequently run into a pond or lodge into which the oil, carried over with the steam, may separate from the water by floating on the surface, it is permissible to use compound oils. But if the condenser is of the surface tubular type, in which the steam is condensed and, without the addition of fresh water, is returned to the boiler with any oil which it carries with it, fatty oils must be avoided, and care ought to be taken in the selection of the hydrocarbon oils to be used.

Gas and Oil Engine Cylinders.

While in the case of some steam-engine cylinders fatty oils are dangerous and ought to be avoided, their use in the cylinders of internal combustion engines is almost as important for successful working as it is objectionable in steam cylinders. This difference in steam-engines is due to the destructive effect of steam with the elements of water and high temperature upon fats, while in the internal combustion engine these conditions, and the free oxygen required for the formation of acids, are absent, and fatty oils, either pure or blended with hydrocarbons, are found to give the best results in respect to efficiency and to prevent the formation of gummy deposits in cylinders and valves.

Crank Chambers.

In engines of the Willans type, in which lubrication is effected by a bath of water with a thin layer of oil on the top, it is generally safer to use a pure hydrocarbon of good body, preferably of the charcoal refined class, which represents the highest lubricative efficiency obtainable in mineral oil. It is important that the oil selected, especially if it is to be used in conjunction with hard water, should be free from tendency to emulsify, as, should this occur in the crank case, lubrication will be much impaired.

For engines lubricated by force, as in the Belliss and some others, an oil of moderate body is required, as, assuming that the bearings are in good condition, the pressure of the pump ought to provide a continual film of oil on each journal. It is also important that this oil should separate freely from water, as the formation of an emulsified magma would interfere with the circulation of the oil.

Crankshaft Bearings.

It is impossible to lay down definite rules in regard to the oil to be used on these bearings which vary greatly in size, in speed, and in the method of applying the oil. Speaking generally, for large engines, lubricated by syphons or by pipes, a pure fatty oil, or an oil of good body containing an important percentage of fatty oil, ought to be used. It is important to note, in comparing a fatty oil with a mineral oil, that their respective efficiency cannot be determined by body or viscosity alone, as, on account of some hidden virtue in fatty oils, it will be found that a fatty oil of moderate body will reduce friction to a greater extent and will last longer than a mineral oil of much superior body, showing that body by itself is not the final criterion.

Ring Lubrication

introduces another condition apart from the direct question of the immediate efficiency of the oil. In ordinary lubrication the oil is slowly fed to the bearing at a rate calculated to make good the loss by waste or use. The oil, therefore, practically serves only once, but in the case of ring lubrication the oil may remain in use for months with only occasional slight additions to replace waste; but during all the time that the oil is in use it is being taken up by the rings and spread over the journal and bearing in a thin film continually exposed to the action of the atmosphere. Under these conditions an animal or vegetable oil would, by the absorption of oxygen from the atmosphere, be slowly thickened and become gummy and unsuitable. Therefore, in this case, it is advisable to forgo the advantages offered by fatty oils and to select a pure hydrocarbon oil of suitable body and high boiling point which will not too readily lose bulk by evaporation or be chemically affected by the action of the atmosphere.

Note on Ring Lubrication.

Sluggish action of the oil-rings of motors in a large New Jersey factory, leading to improper lubrication of the bearings, was cured by bevelling the sides of the rings. On testing the motors it was noticed that the rings would creep along at a very slow speed, two or three revolutions a minute on a machine of several horse-power, instead of the regular speed of about thirty to fifty revolutions. It was finally discovered that under certain conditions a ring would start with the machine and perhaps come up to normal speed, but would soon work itself towards one side of the slot and slow down, hugging closer and closer until there was only a very thin film of oil between the ring and the flat part of the journal.

Three rings were removed and their sides were slightly bevelled, when the trouble entirely disappeared. (*P. G. Bernholz, 'Electrical World.'*)

Turbines.

The only parts calling for lubrication in turbines are the glands and the external bearings. In the larger sizes both the glands and the bearings are provided with jackets through which water may be circulated, when this is necessary, to keep the bearings cool. In the earlier types of turbines, the glands were packed in the ordinary manner and called for the use of oil of a cylinder character to reduce friction. In modern practice the glands do not call for lubrication, as they are fitted with special metallic ring packing which does not make metallic contact with the shaft. A little water is injected and serves to condense any escaping steam at the high pressure end and the admission of air at the low pressure, or vacuum, end and also in a measure acts as a lubricant. The lubrication of turbine bearings is usually effected by the circulation of oil by a pump which forces the oil from a tank in the base of the engine through a system of pipes to the bearings, from which it returns by other pipes to the tank through which cold water circulates in pipes to reduce the temperature of the oil.

The conditions calling for consideration in the lubrication of turbines seem to be the abnormally high temperature of the bearings, due to the transmission of heat by the shaft from the turbine, the probability that, despite most careful precautions, water may find its way into the oil, and the fact that the oil may remain in use for many months without change and with comparatively little addition of fresh oil. These conditions call for oil of considerable body, which should not be liable to emulsify in contact with water, and which should not be injuriously affected by long use and contact with air. (See also page 1570.)

Dynamos,

which are generally provided with ring bearings, should be dealt with on the lines indicated in 'Ring Lubrication.'

Air Compressor Lubrication.

See page 1083.

COOLS HEATED BEARINGS



COOLORICID COOLS HEATED BEARINGS IN THE MODERN & EFFICIENT WAY

A single application of Cooloricid and the bearings instantly become cool. No need to risk seizure or fraction by running on. No need to stand your machinery idle, paying high wages and getting nothing in return. Just one application of Cooloricid—that's all.

STERNOL

Packed in 56 and 112 lb. drums. Price 2/6 per lb. Delivered Carriage Paid—United Kingdom. Package Free.

STERNS LIMITED

127 Royal London House, Finsbury Square, E.C. 2.

FOR DRILLING, CUTTING, BORING AND TURNING.



SUPER-SCREWOL

SUPER-SCREWOL is too good to remain unknown or untried by you. For drilling, cutting, boring and turning it has no equal. It does not clog or separate. It preserves the life of the tool, increases output, and is antiseptic to government standard.

On receipt of a request on your note heading, we will forward, carriage paid, a barrel of Super-Screwol. You will be at liberty to test it completely. Should you then decide not to use the remainder, you can send it back at OUR cost, and we will charge nothing at all for the quantity used.

STERNS LIMITED

127 Royal London House, Finsbury Square, E.C. 2.

Shafting.

requires oil of moderate body, which may be either a compound oil, if the best results are required, or a pure mineral oil if the strain on the bearings is not too great and the system of lubrication ensures a constant and regular supply of oil.

Abrasive Wheels.

See page 1006.

Automatic Tools.

The high speeds adopted in tools of the turret lathe type, and the great pressure and high temperature developed at the cutting point in large automatic lathes, call for oils of superior quality to save the edge of the tool and the surface of the metal on which it operates; but although the old-fashioned soap-suds are unsuitable, from their rusting action on the tools and on the metal of the job, it has been found that, in many cases, satisfactory results are, and may be, obtained by the use of a soluble oil, or soluble paste dissolved in water, which keeps the cutters cool and in good condition, and does not rust the job.

See also page 993

Drills.

See pages 957, 994.

Graphite Lubrication.

Graphite, plumbago, and blacklead are mineralogically similar, but whereas blacklead often consists of a large proportion of clay and very little pure blacklead, on the other hand graphite (especially those grades prepared for very special lubricative purposes) may consist of as much as, and even more than, 99 per cent. of pure graphitic carbon.

The selection and preparation of graphite for lubrication requires the observance of two principal considerations, viz., the structure of the graphite itself and the character and amount of other matter incorporated with it. For instance, a flake graphite, comprising 95 per cent. of pure graphitic carbon having the necessary unctuousness, but mixed with 5 per cent. of hard siliceous rock or quartz, would not be satisfactory for any form of lubrication. Unfortunately, many purchases of such deleterious admixtures are made because the price is lower than, for example, a flake graphite, consisting also of 95 per cent. unctuous graphite with 5 per cent. smooth foliated micaceous matter. The latter, for many purposes, is every bit as good as a 99·8 per cent. or 99·9 per cent. pure flake graphite, and is comparatively much cheaper than grades of such high purity, but its cash value is many times that of the one containing rock or quartz (though the difference in actual cost between the 'quartz' grade and the 'soft mica' grade may only be a few pence per lb.). The damage which such an abrasive mixture will undoubtedly do to any kind of machinery is serious. Engineers should therefore exercise very particular supervision over these purchases.

As already stated the important points are :—

(1) The structure of the graphite, and (2) the character and amount of the impurities in it.

Flake graphite is necessarily the best for lubrication, when consideration is given to the manner in which its lubricative duties are performed. It is required to associate itself and become attached to, and form part of, one or both of the rubbing surfaces, and impart an even and smooth finish to these surfaces, by filling up any tiny depressions. The way confetti clings to the floor is a good illustration in this connection of the advantage of a flat or flake structure.

In the well-known 'Foliac' brand of flake graphite (of *Graphite Products, Ltd.*), the flake structure is combined with foliations which act similarly to a pack of cards under pressure, by slithering apart and presenting a much larger smooth and slippery surface. This foliated or laminated structure is a distinct feature of these products, and it is claimed that a much lower coefficient of friction is obtained with them than with, e.g., the amorphous varieties of graphite or plumbago, whether carried to the surface in colloidal form or not. In connection with colloidal or deflocculated graphites it must be remembered that acidity, alkalinity, or other disturbing cause is necessary in order that the colloid may flocculate into particles large enough to attach themselves to bearing surfaces.

Recent investigations have shown that representative samples of 'Foliac' flake graphites gave the following results :—

Foliac No. 1,	assayed,	92·00	per cent. carbon.
Foliac No. 2,	,,	95·50	,, ,,
Foliac No. B1371,	,,	96·13	,, ,,
Foliac No. 100,	,,	99·85	,, ,,
Foliac No. 101,	,,	99·75	,, ,,

Because graphite has a higher specific gravity than oils (about 2·2 to say ·9 or so for oil) it is impossible to permanently suspend it in ordinary lubricating oils, at any rate without special

and complicated treatment; therefore, in order to convey flake lubricating graphites to bearing surfaces with certainty and regularity, suitable greases with the graphite in intimate admixture are best. Many instances are recorded where suitable flake graphite greases have outlasted other kinds (without flake graphite) five or six times and with less friction.

The Use of Graphite.

The right kind should be selected for a specific purpose. As examples, the large flake is best suited to large areas of surface, whether bearings, cylinders or valve faces; and the small flake is best for smaller areas of surface. At the same time, for intricate, fine or fast moving motions, it is well to select a specially prepared fine flake graphite for these purposes.

All surfaces in frictional contact should be well rubbed with the selected flake graphite for any particular class of machinery, before assembly. This rubbing is best done by dipping a clean oily pad in the graphite, and rubbing it well into the surfaces. The smoothness and consequent reduction of friction is most noticeable, and it is a very long time before this 'graphite skin' or polish is lost.

The removal of the flake graphite after this rubbing in can only be done by filing or grinding—in other words, to remove it, the surface of the metal itself has to be removed.

For regular use after assembly of parts, as already stated, one of the flake graphite greases is best, but occasional doses of flake graphite can be fed with the ordinary lubricating oil with most satisfactory results. It will be obvious that the large flake graphite mixed with a thin spindle oil will settle much faster than a very fine flake graphite in a bodied engine or heavy machine oil.

Too much should never be used, especially when mixed with oils—from 2 per cent. to 5 per cent., according to the service required, is usually ample. With greases, the proportion may be larger.

Graphite, particularly the flake variety (if free from abrasive matter), is an exceedingly useful and beneficial product—but it should not be used to excess, as too much is likely to give trouble.

Feeding Graphite.

In the first place, when erecting or repairing engines, or whenever the cylinders and valves are opened, the working surfaces should be freely covered with a thick mixture of graphite and cylinder oil. Flake graphite cannot satisfactorily be fed through the usual sight-feed displacement lubricators for the reason that its high specific gravity causes it to settle in the oil and to clog up the connecting pipe. A reasonable doubt might be entertained as to whether graphite can readily become attached to the frictional surface if it is so fine that it passes through the pores of filter paper, as is claimed by some, which would indicate that the particles of graphite are surrounded by an unbreakable oil film. But if these particles could become attached to the frictional surface, efficient but not lasting aid to lubrication would certainly result. Experience seems to show that there is a limit to a desirable subdivision of graphite, and if this is so the settling of graphite in cylinder lubricators must be overcome by mechanical means, since even the smallest particles of graphite which can be seen will settle in oil. There are, however, cylinder lubricators on the market for feeding graphite, the best-known of which relies on continuous stirring to secure suspension of the graphite, even in the delivery pipe, by means of a spiral wire which is constantly turning.

Graphite as a Lubricant for Cylinders.

As a cylinder lubricant, flake graphite has come to be widely used, as it is quite unaffected, either chemically or physically, by any temperature encountered in a cylinder, and retains its high lubricating value even when at a red heat.

Wells and Scott-Taggart, in their book 'Cylinder Oil and Cylinder Lubrication,' write concerning the oil polish as follows: 'In order to satisfy themselves as to the working of an oil, most engineers open the cylinders at intervals and note the condition of the surfaces. Satisfaction is generally felt if they find the inside of the cylinder polished like silver, or if it has a bright, smooth surface, "like a mirror," as some express it. Now, this is not by any means the condition the cylinder ought to be in, if it is lubricated with oil alone. Suppose an engineer found, on opening the cylinders of his engine, that bright streaks existed, he would conclude at once that the bright spots were the result of friction . . Strange to say, if he found the whole surface of his cylinder polished, he would not think it was friction. A well-lubricated cylinder ought to present a rather dark-looking surface, smooth, but with no signs of bright polish, even if coated with oil. The slightest rubbing with a polishing rag would produce a bright surface on such a cylinder, thereby proving that the lack of a polish is due to the absence of friction.'

In addition to the 'oil polish' referred to above, there is the smoothing and polishing effect produced in ammonia cylinders of refrigerating machinery, the 'water polish' frequently observed in marine engines and in pump cylinders, and the 'graphite polish.' This last is different

from the others, which are really friction polishes, obtained by rubbing off the roughnesses of the grain of the metal. Graphite polishes by filling in the grain of the metal, just as wood filler and varnish polish a surface of wood, and cannot therefore be construed as an evidence of friction.

The question of the best manner of separating graphite from exhaust steam is frequently raised by those not familiar with its use. In answer it may be said that any separator, grease extractor, or settling tank that will remove even a fair percentage of cylinder oil will remove all the graphite that goes out with the exhaust. Graphite passing into a separator is apt to adhere to the baffle plates, and it is good practice to remove and clean them from time to time.

Where measures are not taken to separate or otherwise eliminate such graphite as may leave the cylinder with the exhaust steam, certain small amounts may pass into the boiler with the feed water. Graphite in a boiler is an advantage rather than a detriment. If the feed water contains scale-forming salts, the graphite will combine with the scale to make it softer and more easily crumbled. The heat transfer will not be affected, for graphite is a very good conductor of heat. (See also Foliac Boiler Graphite, page 1441.)

Graphite as a Lubricant for Gas Engines.

An authority on gas-engine cylinder lubrication has stated that the perfect lubricant for this work should either be consumed entirely or else not at all. Flake graphite meets this last requirement fully, since the intense heat encountered in a gas-engine cylinder has no effect whatever on graphite. There are many ways of feeding graphite for gas-engine cylinders, as there are many types of gas engines, but space does not admit of a full description of the different methods. Inhalation of dry graphite from a closed container or cup attached to the inlet pipe into the gas and air mixing chamber has been successful, the pulsations due to alternate compression and reduction of pressure allowing a little graphite to feed through the hole (say $\frac{3}{32}$ in. diameter) in the bottom of the container.

Difficulty has sometimes been encountered with graphite by its short-circuiting sparking points in jump-spark ignition. This usually means that too much graphite has been used, and reducing the quantity removes the trouble.

'Sternoline' Bricks for Lubrication of Bearings.

(*Sterns Ltd.*)

These bricks are of solid oil, and form a high class lubricant for open and tunnel bearings. They are free from acid, impurities or dirt, are non-corrosive, and are not affected by tropical or arctic climes. They do not deteriorate by being stocked 10–15 years.

Lubrication Troubles from Uncleansed Castings.

When a new engine or turbine is first set to work, there is certain to be trouble with bearings in perhaps a majority of cases. This is because so many constructors neglect the proper cleansing of castings. Castings are never properly cleaned of sand even externally by the still common methods of steel brushing and coke rubbing, and in steam ports and passages it is hopeless to expect cleanliness from such antiquated methods. 'Sandblasting' with chilled-steel pellets will clean a casting externally, but cannot be relied on for the internal cleansing of ports or oil receptacles. Thus it is that lubrication troubles are so usual when starting up new sets. Some engineers strongly favour the pickling of castings as the most effective way of removing sand. The castings are first roughly cleaned and fettled, and then hosed with weak hydrochloric acid. Where sand is present this spreads the acid by capillary action, and the result of a few hours of acid action is to remove all sand and leave the iron surfaces clean and free also from the hard siliceous scale which is so destructive of turning tools and other tools, especially millers, and is also most injurious to lathe-bed surfaces and other working surfaces of all machine tools. When the acid treatment has done its work, the castings are washed by warm water, and this may be dosed with soda to neutralise any unspent acid.

Note on Lubrication.

Special attention should be given to all internal parts such as box beds, which act as oil receptacles, as well as to steam and exhaust passages. The oil of any circulating system becomes dirty with use. Dirt comes over from the boilers with the steam and finds its way into turbine bearings in spite of all the constructive care to guard against this. The atmospheric dust gets in somewhere, and there may be leakage at oil coolers. There is also the microscopic metallic waste from bearings. All these sources of dirt are quite enough to call for filtration, apart from the gross carelessness which is shown by the presence of foundry sand. Oil may sometimes be at fault if it has been chosen wrongly, but more usually sand, which ought never to have found itself so far from the foundry, is to blame. Organic oils deteriorate with age owing to their property of absorbing oxygen; this causes them to become gummy or resinous, and thus to lose their lubricating quality. Mineral oils, which are not, chemically speaking, oils, do not absorb oxygen, and are free from this deterioration.

TABLE SHOWING THE PHYSICAL AND FRICTIONAL PROPERTIES OF VARIOUS STANDARD OILS COMMONLY USED FOR LUBRICATION.

(*T. J. Pullin and J. Veitch Wilson.*)

Lubricant.	Description.	Specific Grav. at 60° Fah.	Flash Point Fah.	Average Viscosity at				Normal Working.		Viscosity at Working Temp.
				60° F.	70° F.	120° F.	212° F.	Drag.	Temp. Fah.	
		1.	2.	3.	4.	5.	6.	7.	8.	9.
Water (distilled)	—	1,000	—	21	21	20½	boils	—	—	—
Sperm (refined) .	Southern . .	881	482	51	44½	30	24	18	189	25
„ „ .	Arctic . . .	878	490	52	45	31	24½	18·5	194	25
Olive . .	Gallipoli . .	916	457	97	79	38	262	26·5	202	26½
„ . . .	Smyrna . .	917	418	107	84	39	26	25	198	25½
„ . . .	Saffi . . .	915	430	89½	72	37	25½	26	202	26
Neatsfoot . .	British . .	916	458	108	83	40	26	27	208	26½
Lard Oil . .	Prime American	916	525	100	80	39	26	27·5	210	26½
Tallow Oil . .	British . .	914	456	109	87	40	26	27	204	26½
Refined Rape Oil	'Special' . .	916	535	116	93½	43	27	32	214	27
„ „ .	German . . .	914	498	114	88½	42	27	32	213	27
„ „ .	English . .	918	506	100	82	40	27	28	207	27
Castor Oil . .	French First .	964	526	—	974	143	33	41	232	31½
Tallow (solid) .	British . .	—	502	solid	solid	43	27	—	—	—

NOTE.—The viscosities given in this table were determined by Coleman's Viscosimeter.

SIMPLE TESTS FOR LUBRICATING OIL.

Colour.—A good oil, before use, will appear of a pale yellow colour, and will not separate into layers of different shades, or deposit sediment after being allowed to stand for a few days. It will not rust or corrode in any way any pieces of ordinary polished tool steel suspended in it.

Emulsion.—When mixed with warm water and shaken in a bottle the oil will soon separate entirely from the water and show no soapy emulsion. The test does not apply to marine engine oil nor to black cylinder stock oils which are blended, for obvious reasons, to produce this very emulsion.

Acidity.—Tests with blue litmus paper will show whether any acid is present. The presence of acid is detrimental to machinery of every kind.

Wax Content.—At ordinary temperatures it is a difficult matter to decide whether wax, either in the form of solid paraffin or some other substance, is or is not present. The readiest test is to cool the oil with ice, when the wax will have a tendency to separate out, and so cause the oil to appear cloudy.

All good oils will prove good lubricants if any objectionable content is removed by filtering. Filtered oil is as good as any other oil; and if one oil is found to be a better lubricant than another it will generally be found that the results have depended entirely on local conditions. In more than one instance a warship has managed to get ordinary fuel oil mixed with ordinary machine oil, and has gone on using it as a lubricant for every purpose, and with satisfactory results.

Filtration of Oil.

When oil is properly filtered is can be used indefinitely without losing any of its lubricating qualities.

Recovery of Lubricating Oil.*

Settlement and Filtration Method.

Fig. 1 shows a waste oil filter made by Messrs. A. C. Wells & Co.; these filters consist of three compartments, any of which can be readily removed from the other to facilitate cleaning.

The top chamber receives the dirty oil, which after admission is allowed to settle for about a day, the time varying with the degree of foulness attained by the oil. The top chamber is provided with a floating syphon which when set in operation delivers the settled oil drop by drop into the second compartment, whence it passes by gravity through a special filter pad into the lowest compartment. The descending oil is collected off the underside of the filter pad in the second stage and led into a tube which terminates in a further filter pad. This cleans the oil by upward filtration, the recovered oil falling into the bottom of the third, or lowest, compartment, whence it is drawn off for re-use as required. The whole process of settlement and filtration requires about three days to complete, but by heating the oil with steam coils or electric heaters the capacity of the filter can be practically doubled.

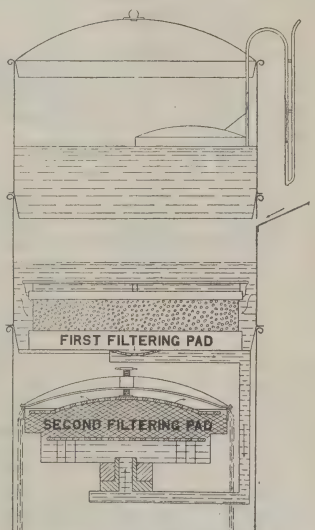


FIG. 1.

Boiling Water Method.

Compound oils can be cleaned by passing them over boiling water.

One of the most satisfactory examples of this system is that installed at the Generating Station of the Chelsea Electricity Supply Company. The waste oil from the engines, excluding that drained from the compressors, is collected into a common tank, whence it is pumped into a larger tank placed at a height of about 8 ft. above floor level. A pipe from this elevated tank is led to a cylindrical open top tank of about 50 gallons capacity which stands on the floor beneath. This latter tank (fig. 2, p. 916) is the one used for the boiling treatment, and is filled with water to a height of 12 ins. or thereabouts. The water is raised to boiling-point by means of a steam coil immersed therein. The dirty oil is then slowly fed into the tank by gravity and the flow is regulated by a valve, so that the mixture of oil and water is maintained at a temperature which causes a yellow froth to appear on the surface. When about 30 gallons of dirty oil have been so introduced the supply is shut off and also the steam heater. Settling then takes place and is allowed to continue for some hours, the treated oil being drawn off through cocks at different levels and put into a filter, leaving a deposit of carbon particles on the top of the water. The filter to which the oil is transferred is divided into an upper and a lower compartment, the treated oil when cooled being drawn off by a floating suction pipe and passed into the lower compartment. This arrangement ensures that oil from the upper surface only of the cooled oil shall be passed into the lower compartment, from whence it is drawn off for re-use. No filtering medium is used, the carbon, etc., which has escaped removal in the boiling tank settling out in the first compartment of the filter.

* Abstract of paper by Alfred J. Wilson, A.M.I.Mech.E., A.M.I.Pet.Tech., read before the Diesel Engine Users Association, 21st Oct., 1920.

Other methods are those in which :—

(1) The oil is allowed to settle either with or without warming. Objections to this method are the length of time and the large number of settling tanks required.
(2) The oil is warmed and then cleaned by chemical means.
(3) The oil is passed through a centrifugal cleaner.

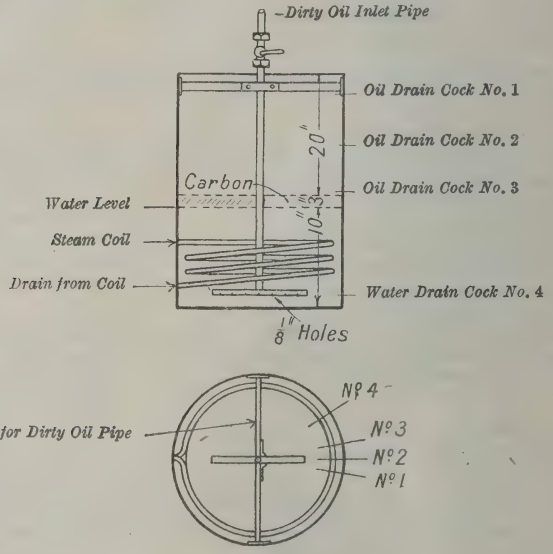


FIG. 2.

LUBRICATORS.

THE V.S.M. AUTOMATIC FORCED LUBRICATION SYSTEM.

In the V.S.M. System of Lubrication (*Messrs. Vickers, Ltd.*) the oil is forced in between the shaft and its bearings at the point of maximum pressure. This is done by means of a pump, which is only about $\frac{3}{8}$-in. diameter, with a stroke of about $\frac{3}{16}$ of an inch. Preferably one such pump is provided for each bearing. The pump works in a closed circuit of oil, and the same oil is used over and over again. *Whenever the pressure per square inch between the shaft and its bearing increases, due to the weight of the shaft or to external stresses, the pump automatically raises the pressure of oil to meet and overcome this resistance, and forces it through to form a positive and unfailing film between the two surfaces exposed to maximum pressure.*

Fig. 3 shows the forced lubrication system applied to a 2½-in. swivel bearing. The pump is surrounded by a reservoir of oil, which has the effect of flooding the inlet openings in the pump body. In this way a suction valve is dispensed with, and the pump plunger is, in effect, its own valve.

The action of the pump is as follows : When the plunger rises to the top of its stroke the inlet openings in the pump body are fully exposed, and oil from the reservoir flows in through these openings, filling the available space in the pump chamber. In making the return stroke the pump plunger gradually passes the inlet openings and finally cuts off the connection between the pump chamber and the external reservoir. The remainder of the downward stroke forces the oil imprisoned in the pump chamber past the non-return delivery valve into the delivery channel, and thence into the bearing on the surface exposed to maximum pressure. This action is repeated with every revolution of the shaft, and in large slow-running shafts the eccentric can be replaced by a cam giving two or more pump strokes per revolution as required.

Each stroke of the pump delivers a definite volume of oil to the bearing, and at the same time displaces an equal volume from the bearing. The displaced oil falls into the chambers provided at each end of the bearing, and flows back, by simple gravity only, into the reservoir surrounding the pump.

In cases where the V.S.M. System of Lubrication has to be applied to bearings and structures already in existence, and where it is impossible to incorporate the V.S.M. apparatus in the design and structure of each bearing, a multiple pump arrangement is adopted consisting of a number of units up to twelve in number. The principle of the arrangement is exactly the same as that shown in fig. 3. To ensure that each bearing gets its proper supply of oil, a separate pump is provided for it, with delivery pipe.

The multiple pump can be driven by a belt or chain, or it can be coupled up to another shaft. The eccentrics operate the pumps exactly as described. The oil flows by gravity from the reservoir past the stop valve through channels to the regulating valves. The oil drops by gravity into the suction side of the pump, and is then forced past the delivery valve on the way to the bearing to be lubricated. Glass tubes are provided for convenience to exclude dust and yet at the same time to enable one to watch the amount of oil passing to each bearing.

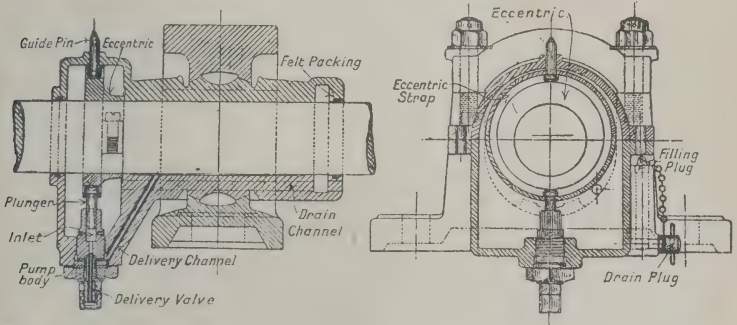


FIG. 3.

In the application of the V.S.M. system to an axle-box for railway rolling-stock the eccentric pump and accessories are substantially the same as those used for ordinary fixed bearings. With fixed bearings, however, the pressure on the bearing itself is usually on the under side, but in railway axle-bearings the pressure is on the top side, and in addition the bearing on the under side is entirely cut away. In consequence it is necessary to provide a short pipe, preferably of copper, to convey the oil from the pressure side of the pump to the top of the bearing at the point of maximum pressure. This arrangement permits the oil pump to be fixed at or near the bottom of the oil reservoir, ensuring an ample supply on the inlet side of the pump. The copper pipe leading from the pressure side of the pump to the top of the bearing is made long with bends, so that any relative movement between the top bearing and the pump may take place in the bends without stressing the unions at both ends of the pipe. Preferably the pump itself is designed as a separate piece from the axle-box for the purpose of manufacture, inspection, and more convenient application to the axle-box.

With a railway axle-bearing having an oil reservoir the great difficulty is to prevent the surplus oil escaping along the axle through the inner end of the axle-box, and so rapidly emptying the reservoir. Another difficulty is to prevent the dust entering through the same space and acting as an abrasive on the axle and its bearings, and causing the rapid wear of both. To overcome these difficulties a special ring has been provided to act as a dust excluder and oil retainer.

SECTION XIX

PART III

SHAFTING AND SHAFTS.

Horse-power of Shafting.

WROUGHT-IRON SHAFTING.

$$\text{Diameter of a wrought-iron shaft, in inches, at bearings} = 5\sqrt[3]{\frac{\text{Horse-power}}{\text{Number of revolutions per minute}}}$$

The following Tables are calculated from the foregoing formula:

TABLE I.—10 to 80 Revolutions per Minute.

Horse-power.	Diameters in Inches of Wrought-iron Shafts. Number of Revolutions per Minute of Wrought-iron Shafts.												
	10	15	20	25	30	35	40	45	50	55	60	70	80
	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.
1	2·32	2·07	1·84	1·71	1·61	1·53	1·46	1·41	1·36	1·31	1·28	1·22	1·16
2	2·92	2·55	2·32	2·16	2·03	1·92	1·84	1·72	1·71	1·66	1·61	1·53	1·46
3	3·40	2·72	2·66	2·47	2·33	2·21	2·11	2·03	1·91	1·90	1·71	1·75	1·67
4	3·68	3·22	2·92	2·72	2·55	2·43	2·32	2·23	2·16	2·09	1·80	1·93	1·84
5	3·97	3·48	3·15	2·92	2·75	2·61	2·50	2·41	2·33	2·25	1·88	2·08	1·99
6	4·22	3·68	3·35	3·11	2·92	2·78	2·66	2·56	2·47	2·39	2·06	2·21	2·11
7	4·44	3·88	3·52	3·27	3·06	2·92	2·80	2·69	2·60	2·52	2·12	2·33	2·22
8	4·64	4·05	3·69	3·42	3·22	3·06	2·92	2·82	2·72	2·63	2·27	2·43	2·33
9	4·82	4·22	3·83	3·56	3·35	3·18	3·04	2·93	2·82	2·74	2·40	2·52	2·42
10	5·00	4·36	3·98	3·69	3·47	3·29	3·15	3·03	2·92	2·83	2·75	2·61	2·50
12	5·34	4·64	4·22	3·92	3·68	3·50	3·35	3·22	3·11	3·01	2·92	2·78	2·61
15	5·72	5·00	4·54	4·22	3·97	3·76	3·60	3·47	3·35	3·24	3·15	3·00	2·86
20	6·30	5·50	5·00	4·64	4·37	4·14	3·97	3·82	3·96	3·57	3·47	3·29	3·15
25	6·79	5·93	5·39	5·00	4·71	4·46	4·28	4·11	3·97	3·84	3·74	3·55	3·40
30	7·21	6·30	5·72	5·32	5·00	4·74	4·54	4·37	4·22	4·08	3·97	3·77	3·61
35	7·59	6·63	6·03	5·60	5·26	5·00	4·78	4·60	4·44	4·30	4·18	3·97	3·80
40	7·94	6·93	6·30	5·85	5·50	5·22	5·00	4·81	4·65	4·50	4·37	4·15	3·98
45	8·25	7·20	6·55	6·09	5·73	5·43	5·20	5·00	4·83	4·67	4·54	4·31	4·13
50	8·55	7·47	6·79	6·30	5·93	5·62	5·38	5·18	5·00	4·84	4·71	4·47	4·28
60	9·08	7·93	7·21	6·70	6·30	5·98	5·72	5·50	5·32	5·15	5·08	4·75	4·55
70	9·57	8·36	7·59	7·05	6·64	6·30	6·03	5·80	5·60	5·42	5·27	5·00	4·79
80	10·0	8·75	7·94	7·37	6·94	6·58	6·30	6·07	5·85	5·67	5·51	5·23	5·00
90	10·4	9·11	8·25	7·67	7·22	6·84	6·55	6·30	6·10	5·90	5·73	5·44	5·20
100	10·8	9·41	8·55	7·94	7·47	7·09	6·78	6·53	6·31	6·10	5·93	5·63	5·39
120	11·4	10·0	9·09	8·44	7·95	7·53	7·21	6·94	6·70	6·49	6·31	6·00	5·73
140	12·0	10·5	9·57	8·89	8·37	7·93	7·59	7·31	7·06	6·83	6·64	6·30	6·03
160	12·6	11·0	10·0	9·29	8·74	8·29	7·94	7·64	7·38	7·14	6·94	6·59	6·31
180	13·1	11·4	10·4	9·67	9·09	8·62	8·26	7·95	7·67	7·42	7·21	6·85	6·55
200	13·6	11·9	10·8	10·0	9·42	8·94	8·55	8·23	7·94	7·69	7·48	7·10	6·79
250	14·6	12·8	11·6	10·8	10·1	9·63	9·22	8·87	8·56	8·29	8·06	7·65	7·32
300	15·5	13·6	12·3	11·5	10·8	10·2	9·80	9·43	9·10	8·80	8·57	8·12	7·77
350	16·3	14·3	13·0	12·0	11·3	10·8	10·3	9·92	9·58	9·27	9·00	8·55	8·18
400	17·1	15·0	13·6	12·6	11·9	11·2	10·8	10·4	10·0	9·69	9·42	8·94	8·55
450	17·8	15·5	14·1	13·1	12·3	11·7	11·2	10·8	10·4	10·1	9·80	9·30	8·89
500	18·4	16·1	14·6	13·6	12·8	12·1	11·6	11·2	10·8	10·4	10·1	9·64	9·21
550	19·0	16·6	15·1	14·0	13·2	12·5	12·0	11·5	11·1	10·8	10·5	10·0	9·50
600	19·6	17·1	15·5	14·4	13·5	12·9	12·3	11·9	11·5	11·1	10·8	10·2	9·79
700	20·7	18·0	16·4	15·2	14·3	13·6	13·0	12·5	12·1	11·7	11·4	10·8	10·3
800	21·5	18·9	17·1	15·9	15·0	14·2	13·6	13·1	12·6	12·2	11·9	11·9	10·8
1000	23·3	20·4	18·5	17·1	16·1	15·3	14·6	14·1	13·6	13·2	12·8	12·2	11·6

TABLE II.—100 to 1,000 Revolutions per Minute.

Horse-power.	Diameters in Inches of Wrought-iron Shafts. Number of Revolutions per Minute of Wrought-iron Shafts. 100	125	150	175	200	250	300	350	400	500	600	800	1000
	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.
1	1·08	1·00	0·94	0·90	0·85	0·80	0·75	0·71	0·68	0·63	0·59	0·54	0·5
2	1·35	1·26	1·19	1·13	1·08	1·00	0·94	0·90	0·86	0·80	0·75	0·68	0·63
3	1·55	1·44	1·36	1·29	1·24	1·15	1·08	1·03	0·98	0·91	0·86	0·78	0·72
4	1·71	1·59	1·50	1·42	1·36	1·26	1·19	1·13	1·08	1·00	0·94	0·86	0·80
5	1·84	1·71	1·61	1·53	1·46	1·36	1·28	1·22	1·16	1·08	1·02	0·92	0·86
6	1·96	1·82	1·71	1·62	1·56	1·44	1·36	1·29	1·24	1·15	1·08	0·98	0·91
7	2·06	1·92	1·80	1·71	1·64	1·52	1·43	1·36	1·30	1·21	1·14	1·03	0·96
8	2·15	2·00	1·88	1·79	1·71	1·59	1·49	1·42	1·36	1·26	1·19	1·08	1·00
9	2·24	2·08	1·96	1·86	1·78	1·65	1·55	1·48	1·41	1·31	1·24	1·12	1·04
10	2·22	2·16	2·03	1·93	1·85	1·71	1·61	1·53	1·47	1·36	1·28	1·16	1·08
12	2·47	2·29	2·15	2·05	1·96	1·82	1·71	1·63	1·56	1·44	1·36	1·24	1·15
15	2·66	2·47	2·32	2·20	2·11	1·96	1·85	1·75	1·67	1·55	1·46	1·33	1·24
20	2·92	2·71	2·56	2·43	2·33	2·15	2·03	1·93	1·84	1·71	1·61	1·46	1·36
25	3·15	2·92	2·75	2·61	2·55	2·33	2·19	2·06	1·98	1·84	1·74	1·57	1·46
30	3·34	3·11	2·92	2·78	2·66	2·47	2·33	2·21	2·11	1·96	1·84	1·68	1·55
35	3·52	3·27	3·08	2·93	2·80	2·60	2·44	2·33	2·12	2·06	1·94	1·76	1·64
40	3·68	3·42	3·22	3·06	2·92	2·71	2·56	2·43	2·33	2·15	2·03	1·85	1·71
45	3·83	3·56	3·34	3·18	3·04	2·82	2·66	2·53	2·42	2·24	2·11	1·92	1·78
50	3·97	3·69	3·47	3·29	3·15	2·92	2·75	2·62	2·50	2·33	2·19	1·99	1·84
60	4·21	3·91	3·68	3·50	3·35	3·11	2·93	2·78	2·66	2·47	2·33	2·11	1·96
70	4·44	4·12	3·88	3·69	3·53	3·27	3·06	2·93	2·80	2·60	2·44	2·22	2·06
80	4·64	4·31	4·05	3·86	3·63	3·42	3·22	3·06	2·93	2·71	2·55	2·33	2·15
90	4·82	4·48	4·22	4·01	3·83	3·56	3·35	3·18	3·04	2·82	2·61	2·42	2·24
100	5·00	4·64	4·37	4·15	3·97	3·68	3·47	3·29	3·15	2·92	2·75	2·50	2·31
120	5·31	4·94	4·64	4·41	4·22	3·92	3·68	3·50	3·35	3·11	2·92	2·66	2·46
140	5·59	5·20	4·89	4·64	4·44	4·12	3·88	3·68	3·52	3·27	3·08	2·80	2·59
160	5·85	5·43	5·10	4·85	4·64	4·31	4·05	3·85	3·68	3·42	3·22	2·92	2·71
180	6·08	5·65	5·31	5·05	4·83	4·48	4·22	4·01	3·83	3·56	3·35	3·04	2·82
200	6·30	5·85	5·50	5·23	5·00	4·64	4·37	4·15	3·97	3·68	3·47	3·15	2·92
250	6·78	6·30	5·93	5·51	5·39	5·00	4·70	4·47	4·27	3·97	3·73	3·39	3·15
300	7·21	6·69	6·30	6·00	5·73	5·31	5·00	4·75	4·54	4·11	3·97	3·61	3·35
350	7·59	7·05	6·63	6·30	6·03	5·59	5·41	5·00	4·78	4·44	4·28	3·80	3·52
400	7·94	7·37	6·93	6·59	6·30	5·85	5·50	5·23	5·00	4·64	4·37	3·92	3·68
450	8·26	7·66	7·21	6·85	6·55	6·08	5·72	5·44	5·20	4·83	4·54	4·13	3·88
500	8·55	7·94	7·46	7·10	6·79	6·30	5·93	5·63	5·39	5·00	4·71	4·27	3·97
550	8·82	8·19	7·71	7·32	7·01	6·50	6·12	5·81	5·56	5·16	4·86	4·41	4·10
600	9·08	8·43	7·92	7·54	7·21	6·69	6·30	6·00	5·72	5·32	5·00	4·54	4·22
700	9·56	8·88	8·35	7·94	7·59	7·05	6·63	6·30	6·03	5·59	5·26	4·78	4·44
800	10·0	9·28	8·74	8·30	7·94	7·37	6·93	6·59	6·30	5·85	5·50	5·00	4·64
1000	10·8	10·0	9·41	8·94	8·55	7·94	7·47	7·09	6·79	6·30	5·93	5·39	5·00

(1) For light shafts which carry, say, only pulleys, horse-power = $0{\cdot}013 \times D^3 \times N$.
(2) For shafts carrying gears, horse-power = $0{\cdot}01 \times D^3 \times N$.
(3) For shafts which are heavy, such as main line shafting, horse-power = $0{\cdot}008 \times D^3 \times N$, where, D = Diameter of shaft in ins. N = Number of revolutions per minute.

These formulæ have been figured from an allowable torsional strength of, for (1) 4,170 lbs.; for (2) 3,200 lbs.; for (3) 2,570 lbs.; they can be relied upon as being fairly accurate.

(*W. E. Holloway.*)

Hollow shafts resist torsion better than solid ones of the same area of metal. Calling the outer and inner diameters in inches D and d, then

$$\text{Breaking torsional force, in lbs.} = \frac{(D^4 - d^4) \times \text{Constant}}{\text{Leverage in feet} \times D}.$$

The faster a shaft revolves under the same horse-power, the less is the torsional strain upon it.

Distance between Supports in Ordinary Shafts.

d = diameter of shaft, in inches; l = distance between supports, in feet.

$l = \sqrt[3]{d^2}$, where no power is taken off between the supports.

Kirkstall Forge Ltd.

PATENT COMPRESSED SHAFTING

POLISHED BRIGHT. PERFECT JOB.

GUARANTEED TO $\frac{1}{1000}$ PART OF AN INCH IF REQUIRED.

REGISTERED 

BRAND.

WRITE FOR LIST 36.

KIRKSTALL FORGE LTD NEAR LEEDS.

Kirkstall Forge Ltd., near Leeds.

"KIRKSTALL"

FREECUTTING STEEL

BRIGHT or BLUE

RAPID MACHINING
COMBINED WITH
DUCTILITY.

For
SCREWING,
BOLTS,
STUDS,
NUTS,
&c.

Sizes same as for Bright Compressed Shafting.

In Rounds, Hex., Squares and Flats.

Send for Catalogue.

On the Admiralty and War Office Lists.

F. 921

POWER THAT 'STEEL' SHAFTING WILL TRANSMIT AT VARIOUS SPEEDS.

Revolutions per Minute.	Diameter in Inches.									
	1½	1⅝	2	2¼	2½	2⅝	3	3½	4	4½
	Horse-power Transmitted.									
50	3·3	5·3	8·0	10·9	15·6	20·8	27	43	64	91
60	4·0	6·4	9·6	13·1	18·8	25·0	32	51	77	109
70	4·7	7·5	11·2	15·2	21·9	29·1	38	60	89	128
80	5·4	8·5	12·8	17·4	25·0	33·3	43	69	102	146
90	6·0	9·6	14·4	19·6	28·1	37·4	49	77	115	164
100	6·7	10·7	16·0	21·8	31·2	41·6	54	86	128	182
110	7·4	11·8	17·6	23·9	34·4	45·8	59	94	141	200
120	8·1	12·9	19·2	26·1	37·5	49·9	65	103	154	219
130	8·7	13·9	20·8	28·3	40·6	54·1	70	111	166	237
140	9·4	15·0	22·4	30·5	43·8	58·2	76	120	179	255
150	10·1	16·1	24·0	32·6	46·9	62·4	81	129	192	273
160	10·8	17·1	25·6	34·8	50·0	66·5	86	137	205	292
170	11·5	18·2	27·2	37·0	53·1	70·7	92	146	218	310
180	12·2	19·3	28·8	39·2	56·3	74·9	97	154	230	328
190	12·8	20·4	30·4	41·3	59·4	79·0	103	163	243	346
200	13·5	21·4	32·0	43·5	62·5	83·2	108	172	256	365
225	15·2	24·1	36·0	49·0	70·3	93·6	122	193	288	410
250	16·9	26·8	40·0	54·4	78·1	104·0	135	214	320	456
275	18·6	29·5	44·0	59·8	85·9	114·4	149	236	352	501
300	20·3	32·2	48·0	65·3	93·7	124·8	162	257	384	547
325	21·9	34·8	52·0	70·7	101·6	135·2	176	279	416	592
350	23·6	37·5	56·0	76·2	109·4	145·6	189	300	448	638
375	25·3	40·2	60·0	81·6	117·2	156·0	203	322	480	683
400	27·0	42·9	64·0	87·0	125·0	166·4	216	343	512	729
425	28·7	45·6	68·0	92·5	132·8	176·8	230	364	544	775
450	30·4	48·2	72·0	97·9	140·6	187·2	243	386	576	820
475	32·1	50·9	76·0	103·4	148·4	197·6	257	407	603	866
500	33·7	53·6	80·0	108·8	156·2	208·0	270	429	640	911

Revolutions per Minute.	Diameter in Inches.								
	5	5½	6	6½	7	7½	8	9	10
	Horse-power Transmitted.								
50	125	166	216	275	343	422	512	729	1,000
60	150	200	259	330	412	506	614	875	1,200
70	175	233	302	385	480	591	717	1,021	1,400
80	200	266	346	439	549	675	819	1,166	1,600
90	225	299	389	494	617	759	922	1,312	1,800
100	250	333	432	549	686	844	1,024	1,458	2,000
110	275	366	475	604	755	928	1,126	1,604	2,200
120	300	399	518	659	823	1,012	1,229	1,750	2,400
130	325	433	562	714	892	1,097	1,331	1,895	2,600
140	350	466	605	769	960	1,181	1,434	2,041	2,800
150	375	499	648	824	1,029	1,265	1,536	2,187	3,000
160	400	532	691	879	1,097	1,350	1,638	2,333	3,200
170	425	566	734	934	1,166	1,434	1,741	2,479	3,400
180	450	599	778	989	1,235	1,519	1,843	2,624	3,600
190	475	632	821	1,044	1,303	1,603	1,945	2,770	3,800
200	500	665	864	1,099	1,372	1,687	2,048	2,916	4,000
225	563	749	972	1,236	1,543	1,898	2,304	3,280	4,500
250	625	832	1,080	1,373	1,715	2,109	2,560	3,645	5,000
275	688	915	1,188	1,510	1,886	2,320	2,816	4,009	5,500
300	750	998	1,296	1,648	2,058	2,531	3,072	4,374	6,000
325	813	1,081	1,404	1,785	2,229	2,742	3,328	4,739	6,500
350	875	1,165	1,512	1,922	2,401	2,953	3,584	5,103	7,000
375	938	1,248	1,620	2,060	2,572	3,164	3,840	5,468	7,500
400	1,000	1,331	1,728	2,197	2,741	3,374	4,096	5,832	8,000
425	1,063	1,414	1,836	2,334	2,915	3,585	4,352	6,197	8,500
450	1,125	1,497	1,944	2,472	3,087	3,796	4,608	6,562	9,000
475	1,188	1,580	2,052	2,609	3,258	4,007	4,864	6,926	9,500
500	1,250	1,664	2,160	2,746	3,430	4,218	5,120	7,290	10,000

FRANCIS'S TABLE, WHERE POWER IS TAKEN OFF BETWEEN SUPPORTS.

Diameter of Shaft, in Inches.	Distance between Bearings, in Feet.	
	Wrought-iron Shafts.	Steel Shafts.
2	15·46	15·89
3	17·70	18·19
4	19·48	20·02
5	20·99	21·57
6	22·30	22·92
7	23·48	24·13
8	24·55	25·23
9	25·53	26·24

Where power is taken off by rigger between supports, each case should be separately considered; 7 to 12 feet is usual.

Speed of Shafting.

Shafting for metal-cutting machines . . . 200 revolutions per minute.
" for wood-working . . . . . 250 " "
" for cotton and woollen mills . . . 300 " "

Hollow shafting has been run at 600 revolutions per minute.

DIAMETER OF AXLE, SHAFT, AND CRANK-PIN.

Diameter of Axle.

d = diameter in inches, in the bearing; and the length of the bearing, $1{\cdot}5d$.
W = weight in pounds, acting in the bearing.

Waterwheels.	*Common Machinery in good order.*
$d = \frac{\sqrt{W}}{18}$, for cast iron.	$d = \frac{\sqrt{W}}{24}$, for cast iron.
$d = \frac{\sqrt{W}}{21}$, for wrought iron.	$d = \frac{\sqrt{W}}{28}$, for wrought iron.
$d = \frac{\sqrt{W}}{26}$, for steel.	$d = \frac{\sqrt{W}}{34}$, for steel.

EXAMPLE.—A waterwheel weighs 58,680 lbs., and is supported in two bearings. Required the diameter of the wheel axles. The weight acting in each bearing will be $\frac{58680}{2} = 29{,}340$ lbs., and diameter $d = \frac{\sqrt{29340}}{21} = 8{\cdot}15$ inches of wrought iron.

Diameter of Shaft.

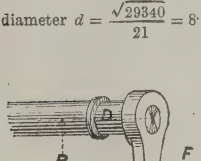


FIG. 1.

D = diameter of shaft, in inches. R = Radius of crank, in feet.
F = force from the steam piston, in pounds.

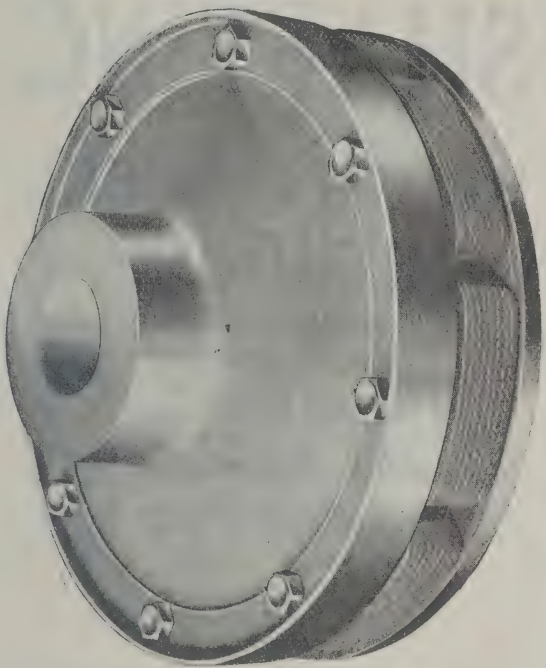
$$D = \sqrt[3]{\frac{FR}{80}}, \qquad F = \frac{D^3 \times 80}{R}, \qquad \text{for wrought iron.}$$

$$D = \sqrt[3]{\frac{FR}{120}}, \qquad F = \frac{D^3 \times 120}{R}, \qquad \text{for steel.}$$

EXAMPLE.—The force on the piston in a steam-engine is F=45,600 lbs., applied direct on a crank of R = 3 feet radius. Required the diameter of the shaft, the latter being of wrought iron.

$$\text{Diameter of shaft } D = \sqrt[3]{\frac{45600 \times 3}{80}} = 11{\cdot}96 \text{ inches.}$$

FLEXIBLE SHAFT COUPLINGS



ELECTRO-METALS Z.V. FLEXIBLE COUPLIN

Our Couplings take up eccentricity in shafting; are resilient, well-balanced, and specially . . . designed for heavy service. . . .

FULL PARTICULARS FROM

ELECTRO-METALS LTD.

56 KINGSWAY, LONDON, W.C.2

SHAFTING

AND

BRIGHT STEEL ROUNDS

Turned from 1in. to 4½in.
Drawn from $\frac{3}{16}$in. to $\frac{7}{8}$in.

for Bar Machines and Automatics

GOVAN SHAFTING AND ENGINEERING CO.

LIMITED,

GLASGOW.

'Phone:
GOVAN 653—654.

Telegrams:
'PEDESTAL, GLASGOW.'

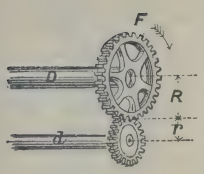


FIG. 2.

$$D = \sqrt[3]{\frac{H}{n} \times 125}, \quad \text{for wrought iron.}$$

$$D = \sqrt[3]{\frac{H}{n} \times 83{\cdot}3}, \quad \text{for steel.}$$

H = the horse-power transmitted. n = the number of revolutions per minute.

$$D : d :: \sqrt[3]{R} : \sqrt[3]{r}, \quad \text{or,} \quad d = D\sqrt[3]{\frac{r}{R}}.$$

EXAMPLE.—A cog-wheel of R = 6·5 feet radius is to gear with a pinion of r = 1·25 feet radius, and to transmit an effect of 231 horses (H) with 42 revolutions per minute (n). Required the diameter of the wheel and pinion shafts. The force F is acting uniformly at the periphery.

$$\text{Diameter of wheel-shaft } D = \sqrt[3]{\frac{231}{42} \times 125} = 8{\cdot}8 \text{ inches.}$$

$$\text{Diameter of pinion-shaft } d = 8{\cdot}8\sqrt[3]{\frac{1{\cdot}25}{6{\cdot}5}} = 5{\cdot}1 \text{ inches.}$$

Diameter of Crank-pin.

$$d = \sqrt{\frac{F}{1200}}, \quad \text{for wrought iron.} \qquad d = \sqrt{\frac{F}{1570}}, \quad \text{for steel.}$$

$$\text{Length of pin} = \frac{3d}{2}.$$

EXAMPLE.—The pressure on pin = 27,000 lbs. Required the diameter and length of pin of wrought iron.

$$d = \sqrt{\frac{27000}{1200}} = 4\tfrac{3}{4} \text{ inches.}$$

$$\text{Length of pin} = 4\tfrac{3}{4} \times \tfrac{3}{2} = 7 \text{ inches.}$$

Board of Trade Rules for the Dimensions of Steamship Shafts.

Main, tunnel, propeller and paddle-shafts should not be less in diameter than that found by the following formulæ. It will be found that first-class makers generally put in larger shafts than those obtained by the formulæ.*

For compound condensing engines with two or more cylinders, when the cranks are not overhung:

$$S = \sqrt[3]{\frac{C \times P \times D^2}{f\left(2 + \frac{D^2}{d^2}\right)}}. \qquad P = \frac{f \times S^3}{C \times D^2\left(2 + \frac{D^2}{d^2}\right)}.$$

Where

S = diameter of shaft, in inches.

d^2 = square of diameter of high-pressure cylinder in inches, or sum of squares of diameters when there are two or more high-pressure cylinders.

D^2 = square of diameter of low-pressure cylinder in inches, or sum of squares of diameters when there are two or more low-pressure cylinders.

P = *absolute* pressure in pounds per square inch; that is, boiler pressure plus 15 lbs.

C = length of crank, in inches. f = constant from following table.

NOTE.—Intermediate-pressure cylinders do not appear in the formulæ.

For ordinary condensing engines with one, two, or more cylinders, when the cranks are not overhung:

$$S = \sqrt[3]{\frac{C \times P \times D^2}{3 \times f}}. \qquad P = \frac{3 \times f \times S^3}{C \times D^2}.$$

Where

S = diameter of shaft, in inches.

D^2 = square of diameter of cylinder in inches, or sum of squares of diameters when there are two or more cylinders.

P = *absolute* pressure in pounds per square inch; that is, boiler pressure plus 15 lbs.

C = length of crank, in inches. f = constant from following table:

* When shafts are proposed to be fitted whose diameters are less than 6 inches, the case should be submitted for consideration.

For two Cranks. Angle between Cranks.	For Crank and Thrust Shafts.	For Tunnel Shafts.	For Propeller Shafts.
°	*f*	*f*	*f*
90	For paddle	1,047	1,221	890
100	engines of	966	1,128	821
110	the direct-	904	1,055	768
120	acting type,	855	997	727
130	multiply con-	817	953	694
140	stant in this	788	919	670
150	column suitable	766	894	651
160	for angle of	751	877	638
170	cranks by 1·4.	743	867	631
180		740	864	629
For three Cranks 120°		1,110	1,295	943

When there is only one crank the constants applicable are those in the table opposite 180°.

Lloyd's Rules for the Dimensions of Steamship Shafts.

The diameters of intermediate shafts are to be not less than those given by the following formula:

$$d = (\kappa_1 A + \kappa_2 B + \kappa_3 C + \kappa_4 D + \kappa_5 S)\sqrt[3]{P},$$

in which

d = diameter of shaft, in inches. P = boiler pressure above atmosphere, in lbs. per square inch. S = stroke of piston, in inches. A = diameter of high-pressure cylinder, in inches. B = diameter of first intermediate cylinder, in inches. C = diameter of second intermediate cylinder, in inches. D = diameter of low-pressure cylinder, in inches. $\kappa_1, \kappa_2, \kappa_3, \kappa_4, \kappa_5$ = coefficients according to the following Table:

Description.	κ_1	κ_2	κ_3	κ_4	κ_5
Compound engines with two cranks at right angles . .	·04	0	0	·006	·02
Triple-expansion engines with three cranks at equal angles .	·038	·009	0	·002	·0165
Quadruple-expansion engines with two cranks at right angles	·034	·011	·004	·0014	·016
Quadruple-expansion engines with three cranks . . .	·028	·014	·006	·0017	·015
Quadruple-expansion engines with four cranks . . .	·033	·01	·004	·0013	·0155

The diameter of crank shaft, and of thrust shaft under the collars, to be at least $\frac{2}{10}$ths of that of the intermediate shaft. The diameter of thrust shaft may be tapered off at each end to the same size as that of the intermediate shaft.

For direct coupled and for geared steam turbine engines the diameter of the intermediate shaft in inches $= \sqrt[3]{\frac{70 \times \text{SHP}}{\text{R}}}$, where SHP is the shaft horse power at full power; R is the number of revolutions per minute of the shaft, at full power. The diameter of the thrust shaft under the collars to be at least $\frac{2}{10}$ths of that of the intermediate shaft.

The diameter of the screw shaft to be equal to the diameter of intermediate shaft (found as above) multiplied by $\left(\cdot 63 + \frac{\cdot 03\,\Delta}{d}\right)$, but in no case to be less than $1{\cdot}07d$; where Δ = diameter of propeller, d = diameter of intermediate shaft, both in inches.

This size of screw shaft is intended to apply to shafts fitted with continuous liners the whole length of the stern tube. If no liners are used, or if two separate liners are used, the diameter of the shaft should be $\frac{2}{10}$ths that given above.

The diameter of screw shaft is to be tapered off at the forward end to the size of the crank shaft.

NOTE.—The rules are intended to apply to two-cylinder compound engines, in which the ratio of areas of low and high pressure cylinders does not exceed 4·5 to 1; to triple-expansion engines, in which it does not exceed 9 to 1; to quadruple-expansion engines, in which it does not exceed 12 to 1; and in all cases, as regards the stroke, in which the length of stroke is not less than one-half the diameter or greater than the diameter of the low-pressure cylinder.

Bureau Véritas Rules for the Dimensions of Steamship Shafts.

IRON CRANK SHAFTS FOR SCREW STEAMERS.

When the crank of a screw-engine is not overhung :—
For non-compound condensing engines :

$$d = \sqrt[3]{\frac{nPLD^2}{C}} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (A)$$

For double, triple, and quadruple expansion engines :

$$d = \sqrt[3]{\frac{PL(n_1D_1^2 + 0{\cdot}1nD^2)}{C}} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (B)$$

For shafts having a single overhung crank the form under the radical sign is to be multiplied by $s + \sqrt{s^2 + 1}$.

For two-cylinder single-crank tandem engines the formula will be :—

$$d = \sqrt[3]{\frac{PL(D_1^2 + 0{\cdot}1D^2)(s + \sqrt{s^2 + 1})}{C}} \quad . \quad . \quad . \quad . \quad . \quad . \quad (C)$$

In these formulæ :
d = diameter of the after-shaft bearing, in inches. n_1 = number of high-pressure cylinders. D_1 = diameter of each high-pressure cylinder, in inches. If there are several high-pressure cylinders, the diameters of which are not the same, $n_1D_1^2$ represents the sum of the squares of their respective diameters. n = number of low-pressure cylinders. D = diameter of each low-pressure cylinder, in inches. If there are several low-pressure cylinders, the diameters of which are not the same, nD^2 represents the sum of the squares of their respective diameters.

NOTE.—For triple or quadruple expansion engines no account is taken of the intermediate cylinders.

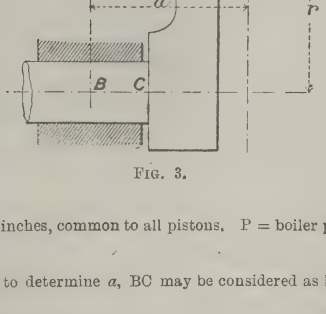


FIG. 3.

L = length of stroke, in inches, common to all pistons. P = boiler pressure above atmosphere, in pounds per square inch.

$s = \frac{a}{r}$ (fig. 3). In order to determine a, BC may be considered as being equal to one-quarter of the length of the bearing.

C = a constant, the values of which are given in the table, p. 926, for certain cases.

If diameter of shaft is above 15 ins. it should be increased by an amount to be determined by the Administration ; for built-up shafts this latter increase will not be required.

For hollow shafts the diameter must be increased by

1	per cent. if the diameter of the hole is 0·4 of the outside diameter.					
2	,,	,,	,,	0·5	,,	,,
5	,,	,,	,,	0·6	,,	,,
10	,,	,,	,,	0·7	,,	,,

If the hole is under 0·4 of the outside diameter, no increase will be required.

VALUES OF C IN FORMULÆ (A), (B), AND (C).

Cranks. No.	Cranks. Angle.	Number of Cylinders.	n_1		Constant. C	Formula.	Remarks.
				Non-Compound Engines.			
2	90° 100° 120° 140° 160°–180°	2		2	4800 4370 3790 3450 3360	A	
				Double Expansion Engines.			
2	90° 100° 120° 140° 160°–180°	2	1	1	3400 3090 2680 2440 2380	B	Intermediate receiver.
3	120°	1 H.P. 2 L.P.	1	2 sum of L.P^2.	3600	B	
				Double Expansion Tandem Engines.			
1		1 H.P. 1 L.P.	1	1	2100	B	When the crank is not overhung. For a max. cut-off 0·80 of stroke. For later cut off the constant to be increased.
1		1 H.P. 1 L.P.	1	1	3200	C	When the crank is overhung
2	90° 100° 120° 140° 160°–180°	2 H.P. 2 L.P.	2	2	3500 3180 2760 2520 2450	B	
3	120°	3 H.P. 3 L.P.	3	3	3800	B	
				Triple Expansion Engines.			
2	90°	1 H.P. 1 I.P. 1 L.P.	1	1	3000	B	Two of the cylinders placed tandem-wise.
2	90°	2 H.P. 1 I.P. 1 L.P.	1	1	3300	B	Two tandem, thus : $\frac{\text{H.P.}}{\text{I.P.}} \times \frac{\text{H.P.}}{\text{L.P.}}$
3	120°	1 H.P. 1 I.P. 1 L.P.	1	1	3900	B	
				Triple or Quadruple Expansion Engines.			
4	90°	1 H.P. 1 I.P. 2 L.P.	1	2 sum of L.P^2.	4000	B	
		or 1 H.P. 1 ^{1}I.P. 1 ^{2}I.P. 1 L.P.	1	1			
4	Angles arranged to reduce the maximum torsional moment.	do.	1	1 or sum of L.P^2.	not to exceed 4100		For other cases not included in this table, the constant to be fixed by the Administration.

PROPELLER, TUNNEL, AND THRUST SHAFTS.

Diameter of propeller shaft is to be found from the formula

$$\delta = d + \left(1{\cdot}7\frac{D}{d} - 15\right)\frac{d}{100},$$

where,
δ = diameter of propeller shaft; D = diameter of propeller; d = diameter of crank shaft calculated from one of formulæ (A), (B), or (C), all in inches.

It is recommended to fit the propeller shaft in such a way that it cannot move endways if for some reason or other it has been uncoupled from the rest of the shafting. Liners fitted on propeller shafts to be tapered off at ends.

For tunnel shafts a reduction of 6 per cent. on the diameter of the crank shaft will be allowed.

The diameter of thrust shaft at the bottom of the collars, both between and immediately beyond these latter, to be equal to that of the crank shaft, and tapered off at each end to the smaller diameter of the body of the shaft. The thrust of the screw propeller must be taken up by an efficient thrust block, so as to prevent any fore-and-aft strain on the crank shaft.

SHAFTS FOR PADDLE-ENGINES.

In side-wheel steamers having double, triple, or quadruple expansion engines, with an intermediate shaft, each end of which carries an overhung crank-pin, fitting loosely into an eye of

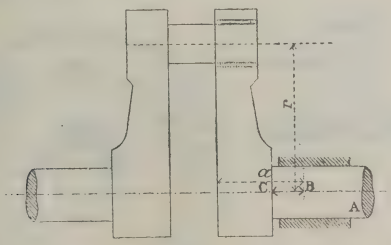


FIG. 4.

the paddle shaft crank, the bearing of the latter (see A of fig. 4) must have its diameter calculated from the formula:

$$d = \sqrt[3]{\frac{PL(n_1D_1^2 + 0{\cdot}1nD^2)\,(s + \sqrt{s^2+1})}{C}},$$

where the letters have the same meaning as before, except that a, for determining $s = \frac{a}{r}$, is to be measured as shown in the annexed figure, B C being equal to one-quarter of the length of the bearing.

For two-cylinder compound receiver engines with two cranks at 90°,
C = 7,100 for coasting vessels, = 5,700 for sea-going vessels.

For triple-expansion engines with three cylinders and three cranks at 120°,
C = 8,150 for coasting vessels, = 6,540 for sea-going vessels.

STEAM TURBINE SHAFTING.

Diameter of tunnel shafts to be determined by the formula

$$d = \sqrt[3]{\frac{61 \times HP}{R}}$$

where,
d = diameter of shafting in inches; HP = power transmitted by the shafting; R = number of revolutions per minute.

Rotor shaft to have a diameter at least 5 per cent. greater than that of tunnel shaft. Diameter of propeller shaft to be determined by the formula

$$d_1 = d + \frac{D}{160}$$

where,
d_1 = diameter of propeller shaft in inches; D = diameter of propeller in inches; d = diameter of tunnel shafting in inches.

Flexible Couplings.

Flexible couplings are now being used in all cases where it is not possible to ensure shafting being exactly in line.

Experiments over a large number of factories and works have shown that the power absorbed by shafting forms quite a large percentage of that generated. This loss is chiefly due to malalignment, and can be saved by introducing suitable flexible couplings; the same remark also applies in the case of two machines whose shafts are coupled together, and apart, of course, from the actual loss of power sustained, trouble and expense is entailed due to the unnecessary stresses in shafting and bearings.

The 'Z.V.' flexible shaft coupling (manufactured by *Messrs. Electro-Metals, Ltd.*, 56 *Kingsway, London*) is designed generally to absorb shocks and stresses, and for taking up malalignment and wear in bearings; it is in extensive use on many classes of drive.

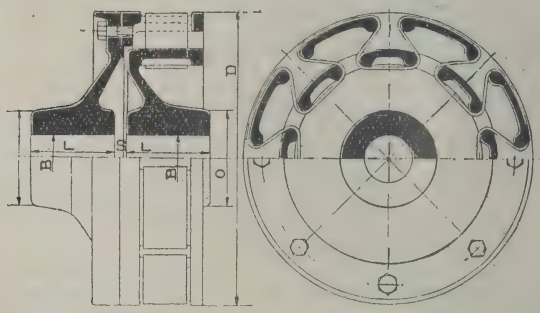


FIG. 5.

The coupling, fig. 5, consists of four parts:

(*a*) The outer disc, which has a suitable boss to take the shaft of the driving member.

(*b*) The belt ring, which is secured to the outer disc.

(*c*) The inner half, which has a suitable boss for taking the shaft of the driven member.

(*d*) A special cotton belt, which passes alternately around the lugs on the inner half and on the belt ring, securing together the two halves of the coupling.

It should be noted that the outer disc can be taken apart without removing the belt. A special advantage of the arrangement is that one shaft is electrically insulated from the other. The coupling, however, is not suitable for reversing drives.

Among the many applications of this coupling may be mentioned the following:

For generators driven by steam, gas, oil, and petrol engines, or motors; for motor-driven centrifugal fans; for direct connected motor-driven shafting in textile and other mills; for motor-driven rolling mills; for direct connection between motors and machine tools, and for connecting one length of shafting with another.

The special grade of belt employed permits of this coupling being used in tropical countries.

TABLE OF PARTICULARS OF ELECTRO-METALS Z.V. FLEXIBLE SHAFT COUPLINGS.

Outside Dia.	Capacity B.H.P. R.P.M.	Max. Safe Speed in R.P.M.	Bore Diameter.		Boss Diameter.		Boss Length.	Clearance.	Overall Length.
			Max.	Min.	Max.	in.			
D.			B.	B.	O.	O.	I.	S.	
Inches.			Inches.	Inches.	Inches.	Inches.	nches.	Inches.	Inches.
8	0·01	1700	2	1	3½	3	2	¾	4¾
10	0·02	1350	2¼	1⅛	4	3	2½	¾	5¾
11¾	0·03	1160	2½	1¼	4⅛	3½	3	¾	6¾
13¾	0·05	1000	2¾	1⅜	5¼	4	3½	¾	7¾
15¾	0·075	870	3	1½	5½	4¾	4	¾	8¾
17¾	0·10	770	3¼	1⅝	6	5	4½	¾	9¾
19¾	0·15	700	3½	2	6½	5½	5	¾	10¾
21¾	0·27	630	4¼	2⅛	7¾	6	5½	¾	11¾
23½	0·46	580	4¾	2¾	9	7¼	6	1½	13½
25½	0·60	540	5	3	9	7⅛	6½	1¼	14¼
27½	0·75	500	5¼	3¼	9½	8	7	1¼	15¼
31½	1·12	435	6	3¾	10	8½	8¼	1½	17½
35	1·60	390	6¾	4½	11	9½	9½	1½	20½
39	2·13	350	7½	5¼	12	10	10¾	1½	23
43	2·70	320	8	5½	14	11	11¼	1½	24
47	3·80	290	8¼	6	14½	12	12	1½	25½
55	5·25	250	9½	7	17½	16½	13	2	28
63	8·0	220	10¾	8	21½	19	14	2	30
71	10·0	190	12	9	23	20½	15	2	32

SECTION XIX

PART IV

SPRINGS.

HELICAL.

If r = mean radius of spring, in inches, measured from axis to centre of wire; d = diameter, in inches, of wire, if *round* in section; h and b = depth and breadth respectively, in inches, of wire, if *rectangular*; b = breadth and depth, if *square*; n = number of coils of which spring consists; c = coefficient or modulus of transverse elasticity of wire, in lbs. per square inch; W = any load, in lbs., not exceeding the greatest safe load; Δ = corresponding extension or compression, in inches; W_s = greatest safe *steady* load, in lbs.; Δ_s = greatest safe corresponding extension or compression, in inches; f = greatest safe shearing stress per square inch, in lbs.; then

$$\Delta = \frac{Wnr^3}{cd^4}64, \qquad \text{or,} \quad W = \frac{\Delta cd^4}{64nr^3}, \quad \text{for } \textit{round} \text{ wire;}$$

$$\Delta = \frac{Wnr^3}{c\frac{b^3h^3}{b^2+h^2}}6\pi, \qquad \text{or,} \quad W = \frac{\Delta c\frac{b^3h^3}{b^2+h^2}}{6\pi nr^3} \quad \text{for } \textit{rectangular} \text{ wire}$$

$$\Delta = \frac{Wnr^3}{cb^4}12\pi, \qquad \text{or,} \quad W = \frac{\Delta cb^4}{12\pi nr^3}, \quad \text{for } \textit{square} \text{ wire;}$$

$$\Delta_s = \frac{fnr^2}{cd}4\pi, \qquad \text{and,} \quad W_s = \frac{fd^3\pi}{r\,16}, \quad \text{for } \textit{round} \text{ wire}$$

$$\Delta_s = \frac{fnr^2}{c\frac{b\sqrt{b^2+d^2}}{b}}\left(\frac{\pi}{2}\right)^3\frac{3}{\sqrt{2}}, \quad \text{and,} \quad W_s = \frac{f\sqrt{b^2+h^2}}{r}\left(\frac{\pi}{4}\right)^2\frac{1}{\sqrt{2}}, \quad \text{for } \textit{rectangular} \text{ wire.}$$

$$\Delta_s = \frac{fnr^2}{cb}\left(\frac{\pi}{2}\right)^2 3, \qquad \text{and,} \quad W_s = \frac{fb^3}{r}\left(\frac{\pi}{4}\right)^2\frac{1}{2}, \quad \text{for } \textit{square} \text{ wire.}$$

$$\text{Greatest safe sudden load} = \frac{W_s}{2}; \qquad \text{Resilience} = \frac{W_s\Delta_s}{2}$$

$\frac{1}{64} = \cdot0156$; $6\pi = 18\cdot85$; $\frac{1}{6\pi} = \cdot0531$; $12\pi = 37\cdot70$; $\frac{1}{12\pi} = \cdot0265$; $4\pi = 12\cdot57$;

$\frac{\pi}{16} = \cdot196$; $\left(\frac{\pi}{2}\right)^3\frac{3}{\sqrt{2}} = 8\cdot22$; $\left(\frac{\pi}{4}\right)^2\frac{1}{\sqrt{2}} = \cdot436$; $\left(\frac{\pi}{2}\right)^3 3 = 11\cdot63$; $\left(\frac{\pi}{4}\right)^2\frac{1}{2} = \cdot308$.

The value of c for steel in lbs. per square inch may be taken as 16,000,000. The greatest safe value (f) which is certain not to impair the elasticity of the spring by frequent repetition may be taken at 50,000.

From the formula $W_s = \frac{\cdot196fd^3}{r}$, if $f = 50{,}000$, we get,

$$d = \sqrt[3]{\frac{W_s r}{\cdot196f}} = \sqrt[3]{\frac{W_s 2r}{\cdot392f}} = \sqrt[3]{\frac{W_s 2r}{19{,}600}}; \quad \text{Board of Trade rule } d = \sqrt[3]{\frac{W\,2r}{8{,}000}}$$

A spring with its mean diameter small as compared with the size of the bar will allow a higher stress with less set than one of larger mean diameter; size of bar being the same, a spring of small diameter may safely stand higher stress than one of large diameter; springs of too small diameter compared with size of bar are so injured in coiling as to weaken the steel; the ratio of mean diameter of spring to diameter of bar should never be less than 3. For a good grade of steel the following values have been found safe:

Ratio of Mean Diameter to Diameter of Bar.	Safe Torsional Stress.	
3 .	112,000	Bars less than $\frac{3}{4}$ in. in diameter.
8 .	85,000	
3 .	110,000	Bars $\frac{7}{16}$ in. to $\frac{3}{4}$ in. in diameter.
8 .	80,000	

Ratio of Mean Diameter to Diameter of Bar.	Safe Torsional Stress.	
3 .	105,000	Bars $\frac{13}{16}$ in. to $1\frac{1}{4}$ in. in diameter.
8 .	75,000	

For extension springs the value of stress is only two-thirds these values.

(C. H. Benjamin and R. A. French.)

Steel Helical Springs—Round Wire.

(Contributed by R. A. Sturgeon, A.M.Inst.C.E.)

Table of Safe Loads and Scales.

The stresses from which the safe loads are calculated are given for each size of wire. The scale—i.e. the ratio of load to deflection produced—is based on a single coil spring. By dividing the figure given in the table by the number of coils in the spring, the load required to extend or compress the spring 1 in. is obtained. The value of G is assumed to be 12,000,000 lbs. per sq. in.

Mean Diam. of Coil. Ins.	Safe Load. Lbs.	Scale. Lbs. per In.
16 Gauge—0·064 in. (=$\frac{1}{16}$ in.+) diam. Safe Stress—70,000 lbs. per sq. in.		
$\frac{3}{8}$	19·2	477
$\frac{7}{16}$	16·5	301
$\frac{1}{2}$	14·4	201
$\frac{9}{16}$	12·8	141
$\frac{5}{8}$	11·5	103
$\frac{3}{4}$	9·6	59·6
$\frac{7}{8}$	8·2	37·6
1	7·2	25·2
$1\frac{1}{8}$	6·4	17·7
$1\frac{1}{4}$	5·8	12·9
$1\frac{3}{8}$	5·2	9·7
$1\frac{1}{2}$	4·8	7·5
$1\frac{3}{4}$	4·1	4·7
2	3·6	3·1
15 Gauge—0·072 in. (=$\frac{5}{64}$ in.−) diam. Safe Stress—70,000 lbs. per sq. in.		
$\frac{3}{8}$	27·4	764
$\frac{7}{16}$	23·5	481
$\frac{1}{2}$	20·5	322
$\frac{9}{16}$	18·2	226
$\frac{5}{8}$	16·4	165
$\frac{3}{4}$	13·7	95·6
$\frac{7}{8}$	11·7	60·1
1	10·3	40·3
$1\frac{1}{8}$	9·1	28·3
$1\frac{1}{4}$	8·2	20·6
$1\frac{3}{8}$	7·5	15·5
$1\frac{1}{2}$	6·8	11·9
$1\frac{3}{4}$	5·9	7·5
2	5·1	5·0
14 Gauge—0·08 in. (=$\frac{5}{64}$ in.+) diam. Safe Stress—70,000 lbs. per sq. in.		
$\frac{3}{8}$	37·5	1,165
$\frac{7}{16}$	32·2	734
$\frac{1}{2}$	28·2	491
$\frac{9}{16}$	25·0	345
$\frac{5}{8}$	22·5	252
$\frac{3}{4}$	18·8	146
$\frac{7}{8}$	16·1	91·7
1	14·1	61·4
$1\frac{1}{8}$	12·5	43·1
$1\frac{1}{4}$	11·2	31·5
$1\frac{3}{8}$	10·2	23·6
$1\frac{1}{2}$	9·4	18·2
$1\frac{3}{4}$	8·0	11·5
2	7·0	7·7
$2\frac{1}{4}$	6·2	5·4
$2\frac{1}{2}$	5·6	3·9
13 Gauge—0·092 in. (=$\frac{3}{32}$ in.) diam. Safe Stress—70,000 lbs. per sq. in.		
$\frac{3}{8}$	57	2,038
$\frac{7}{16}$	49·0	1,283
$\frac{1}{2}$	42·8	860
$\frac{9}{16}$	38·1	603
$\frac{5}{8}$	34·3	440
$\frac{3}{4}$	28·5	255
$\frac{7}{8}$	24·5	160
1	21·4	107
$1\frac{1}{8}$	19·0	75·5
$1\frac{1}{4}$	17·1	55·0
$1\frac{3}{8}$	15·6	41·3
$1\frac{1}{2}$	14·3	31·8
$1\frac{3}{4}$	12·2	20·1
2	10·7	13·4
$2\frac{1}{4}$	9·5	9·4
$2\frac{1}{2}$	8·6	6·9
12 Gauge—0·104 in. (=$\frac{7}{64}$ in.−) diam. Safe Stress—70,000 lbs. per sq. in.		
$\frac{3}{8}$	82	3,327
$\frac{7}{16}$	71	2,096
$\frac{1}{2}$	62	1,404
$\frac{9}{16}$	55	986
$\frac{5}{8}$	49·5	719
$\frac{3}{4}$	41·2	416
$\frac{7}{8}$	35·3	262
1	30·9	175
$1\frac{1}{8}$	27·5	123
$1\frac{1}{4}$	24·7	89·8
$1\frac{3}{8}$	22·5	67·5
$1\frac{1}{2}$	20·6	52·0
$1\frac{3}{4}$	17·7	32·7
2	15·5	21·9
$2\frac{1}{4}$	13·7	15·4
$2\frac{1}{2}$	12·4	11·2
11 Gauge—0·116 in. (=$\frac{7}{64}$ in.+) diam. Safe Stress—70,000 lbs. per sq. in.		
$\frac{1}{2}$	86	2,173
$\frac{9}{16}$	76	1,526
$\frac{5}{8}$	69	1,113
$\frac{3}{4}$	57	644
$\frac{7}{8}$	49·1	405
1	42·9	272
$1\frac{1}{8}$	38·2	191
$1\frac{1}{4}$	34·3	139
$1\frac{3}{8}$	31·2	104
$1\frac{1}{2}$	28·6	80·5
$1\frac{3}{4}$	24·5	50·7
2	21·5	33·9
$2\frac{1}{4}$	19·1	23·8
$2\frac{1}{2}$	17·2	17·4
3	14·3	10·1
10 Gauge—0·128 in. (=$\frac{1}{8}$ in.) diam. Safe Stress—70,000 lbs. per sq. in.		
$\frac{1}{2}$	115	3,221
$\frac{9}{16}$	102	2,262
$\frac{5}{8}$	92	1,649
$\frac{3}{4}$	77	954
$\frac{7}{8}$	66	601
1	58	403
$1\frac{1}{8}$	51	283
$1\frac{1}{4}$	46·1	206
$1\frac{3}{8}$	41·9	155
$1\frac{1}{2}$	38·4	119
$1\frac{3}{4}$	32·9	75·1
2	28·8	50·3
$2\frac{1}{4}$	25·6	35·3
$2\frac{1}{2}$	23·1	25·8
3	19·1	14·9
9 Gauge—0·144 in. (=$\frac{9}{64}$ in.+) diam. Safe Stress—70,000 lbs. per sq. in.		
$\frac{1}{2}$	164	5,160
$\frac{9}{16}$	146	3,623
$\frac{5}{8}$	131	2,642
$\frac{3}{4}$	109	1,529
$\frac{7}{8}$	94	963
1	82	645
$1\frac{1}{8}$	73	453
$1\frac{1}{4}$	66	330
$1\frac{3}{8}$	60	248
$1\frac{1}{2}$	55	191
$1\frac{3}{4}$	47·0	120
2	41·0	80·6
$2\frac{1}{4}$	36·5	56·6
$2\frac{1}{2}$	32·8	41·3
3	27·3	23·9

STEEL HELICAL SPRINGS—ROUND WIRE—*continued.*

Mean Diam. of Coil. Ins.	Safe Load. Lbs.	Scale. Lbs. per In.
8 Gauge—0·16 in. (=$\frac{1}{3\frac{1}{2}}$ in.+) diam. Safe Stress—70,000 lbs. per sq. in.		
$\frac{1}{2}$	225	7,863
$\frac{9}{16}$	200	5,521
$\frac{5}{8}$	180	4,027
$\frac{3}{4}$	150	2,330
$\frac{7}{8}$	129	1,467
1	113	983
$1\frac{1}{16}$	100	690
$1\frac{1}{8}$	90	503
$1\frac{3}{16}$	82	378
$1\frac{1}{4}$	75	291
$1\frac{3}{8}$	64	183
2	56	123
$2\frac{1}{4}$	50	86·2
$2\frac{1}{2}$	45	62·9
3	37·5	36·4
4 Gauge—0·232 in. (=$\frac{1}{4\frac{1}{4}}$ in.) diam. Safe Stress—70,000 lbs. per sq. in.		
$\frac{5}{8}$	549	17,801
$\frac{3}{4}$	458	10,302
$\frac{7}{8}$	392	6,487
1	343	4,345
$1\frac{1}{16}$	305	3,052
$1\frac{1}{8}$	275	2,225
$1\frac{1}{16}$	250	1,675
$1\frac{1}{2}$	229	1,287
$1\frac{3}{4}$	196	813
2	172	543
$2\frac{1}{4}$	152	381
$2\frac{1}{2}$	137	278
3	114	161
$3\frac{1}{2}$	98	101
0 Gauge—0·324 in. (=$\frac{2\frac{1}{2}}{8}$ in.—) diam. Safe Stress—64,100 lbs. per sq. in.		
1	860	16,530
$1\frac{1}{16}$	765	11,610
$1\frac{1}{8}$	688	8,463
$1\frac{3}{16}$	626	6,359
$1\frac{1}{4}$	574	4,898
$1\frac{3}{4}$	492	3,084
2	430	2,063
$2\frac{1}{4}$	382	1,451
$2\frac{1}{2}$	344	1,058
3	287	612
$3\frac{1}{2}$	246	386
4	215	258
$4\frac{1}{2}$	191	181
5	172	132
$5\frac{1}{2}$	156	99

Mean Diam. of Coil. Ins.	Safe Load. Lbs.	Scale. Lbs. per In.
7 Gauge—0·176 in. (=$\frac{1}{5\frac{1}{4}}$ in.+) diam. Safe Stress—70,000 lbs. per sq. in.		
$\frac{5}{8}$	240	5,896
$\frac{3}{4}$	200	3,412
$\frac{7}{8}$	171	2,148
1	150	1,439
$1\frac{1}{8}$	133	1,011
$1\frac{1}{4}$	120	737
$1\frac{3}{8}$	109	554
$1\frac{1}{2}$	100	426
$1\frac{3}{4}$	86	268
2	75	180
$2\frac{1}{4}$	66	126
$2\frac{1}{2}$	60	92·1
3	50	53·3
$3\frac{1}{2}$	42·8	33·6
4	37·5	22·5
3 Gauge—0·252 in. (=$\frac{1}{4}$ in.) diam. Safe Stress—70,000 lbs. per sq. in.		
$\frac{3}{4}$	587	14,341
$\frac{7}{8}$	503	9,030
1	440	6,049
$1\frac{1}{8}$	391	4,249
$1\frac{1}{4}$	352	3,097
$1\frac{3}{8}$	320	2,327
$1\frac{1}{2}$	293	1,792
$1\frac{3}{4}$	251	1,129
2	220	756
$2\frac{1}{4}$	195	531
$2\frac{1}{2}$	176	387
3	147	224
$3\frac{1}{2}$	126	141
4	110	94·5
00 Gauge—0·348 in. (=$\frac{1}{2\frac{1}{8}}$ in.+) diam. Safe Stress—62,200 lbs. per sq. in.		
1	1,033	22,000
$1\frac{1}{8}$	918	15,451
$1\frac{1}{4}$	826	11,264
$1\frac{3}{8}$	751	8,462
$1\frac{1}{2}$	688	6,518
$1\frac{3}{4}$	590	4,105
2	516	2,750
$2\frac{1}{4}$	459	1,931
$2\frac{1}{2}$	413	1,408
3	344	815
$3\frac{1}{2}$	295	513
4	258	344
$4\frac{1}{2}$	229	241
5	206	176
$5\frac{1}{2}$	188	132

Mean Diam. of Coil. Ins.	Safe Load. Lbs.	Scale. Lbs. per In.
6 Gauge—0·192 in. (=$\frac{3}{1\frac{1}{6}}$ in.+) diam. Safe Stress—70,000 lbs. per sq. in.		
$\frac{5}{8}$	311	8,351
$\frac{3}{4}$	259	4,333
$\frac{7}{8}$	222	3,043
1	195	2,038
$1\frac{1}{8}$	173	1,432
$1\frac{1}{4}$	156	1,044
$1\frac{3}{8}$	142	784
$1\frac{1}{2}$	130	604
$1\frac{3}{4}$	111	380
2	97	255
$2\frac{1}{4}$	86	179
$2\frac{1}{2}$	78	130
3	65	75·5
$3\frac{1}{2}$	56	47·5
4	48·6	31·8
$\frac{7}{8}$	746	20,636
1	639	12,993
$1\frac{1}{8}$	559	8,704
$1\frac{1}{4}$	497	6,113
$1\frac{3}{8}$	447	4,457
$1\frac{1}{2}$	407	3,343
$1\frac{3}{4}$	373	2,579
2	319	1,624
$2\frac{1}{4}$	279	1,088
$2\frac{1}{2}$	248	764
3	223	557
$3\frac{1}{2}$	186	322
4	160	203
$4\frac{1}{2}$	140	136
000 Gauge—0·372 in. (=$\frac{3}{8}$ in.) diam. Safe Stress—60,000 lbs. per sq. in.		
1	1,215	28,725
$1\frac{1}{8}$	1,080	20,175
$1\frac{1}{4}$	972	14,721
$1\frac{3}{8}$	883	11,050
$1\frac{1}{2}$	810	8,511
$1\frac{3}{4}$	694	5,360
2	607	3,591
$2\frac{1}{4}$	540	2,522
$2\frac{1}{2}$	486	1,839
3	405	1,064
$3\frac{1}{2}$	347	670
4	304	449
$4\frac{1}{2}$	270	315
5	243	230
$5\frac{1}{2}$	221	173

Mean Diam. of Coil. Ins.	Safe Load. Lbs.	Scale. Lbs. per In.
5 Gauge—0·212 in. ($\frac{7}{3\frac{1}{3}}$ in.+) diam. Safe Stress—70,000 lbs. per sq. in.		
$\frac{5}{8}$	419	12,413
$\frac{3}{4}$	349	7,183
$\frac{7}{8}$	300	4,523
1	262	3,030
$1\frac{1}{16}$	233	2,128
$1\frac{1}{8}$	210	1,551
$1\frac{3}{16}$	191	1,165
$1\frac{1}{4}$	175	898
$1\frac{3}{8}$	150	565
2	131	379
$2\frac{1}{4}$	116	266
$2\frac{1}{2}$	105	194
3	87	112
$3\frac{1}{2}$	75	70·7
4	65	47·3
1 Gauge—0·3 in. (=$\frac{1}{3\frac{1}{3}}$ in.+) diam. Safe Stress—66,000 lbs. per sq. in.		
$\frac{7}{8}$	799	18,137
1	699	12,150
$1\frac{1}{8}$	622	8,534
$1\frac{1}{4}$	559	6,221
$1\frac{3}{8}$	509	4,674
$1\frac{1}{2}$	466	3,600
$1\frac{3}{4}$	400	2,267
2	349	1,519
$2\frac{1}{4}$	310	1,067
$2\frac{1}{2}$	279	778
3	233	450
$3\frac{1}{2}$	200	283
4	175	190
$4\frac{1}{2}$	155	133
0000 Gauge—0·4 in. (=$\frac{1}{2\frac{1}{2}}$ in.—) diam. Safe Stress—58,000 lbs. per sq. in.		
$1\frac{1}{8}$	1,297	26,970
$1\frac{1}{4}$	1,167	19,661
$1\frac{3}{8}$	1,061	14,772
$1\frac{1}{2}$	973	11,378
$1\frac{3}{4}$	834	7,165
2	730	4,800
$2\frac{1}{4}$	648	3,371
$2\frac{1}{2}$	584	2,458
3	486	1,422
$3\frac{1}{2}$	417	896
4	365	600
$4\frac{1}{2}$	324	421
5	292	307
$5\frac{1}{2}$	265	231
6	243	178

STEEL HELICAL SPRINGS—ROUND WIRE—*continued.*

Mean Diam. of Coil. Ins.	Safe Load. Lbs.	Scale. Lbs. per In.	Mean Diam. of Coil. Ins.	Safe Load. Lbs.	Scale. Lbs. per In.	Mean Diam. of Coil. Ins.	Safe Load. Lbs.	Scale. Lbs. per In.
00000 Gauge—0·432 in. (=$\frac{7}{16}$ in.—) diam. Safe Stress—55,400 lbs. per sq. in.			000000 Gauge—0·464 in. (=$\frac{15}{32}$ in.—) diam. Safe Stress—53,700 lbs. per sq. in.			0000000 Gauge—0·5 in. (=$\frac{1}{2}$ in.) diam. Safe Stress—50,000 lbs. per sq. in.		
$1\frac{1}{8}$	1,559	36,692	$1\frac{1}{4}$	1,686	35,599	$1\frac{1}{8}$	1,782	36,063
$1\frac{1}{4}$	1,403	26,749	$1\frac{3}{8}$	1,533	26,746	$1\frac{1}{4}$	1,634	27,784
$1\frac{3}{8}$	1,275	20,096	$1\frac{1}{2}$	1,405	20,601	$1\frac{3}{4}$	1,400	17,493
$1\frac{1}{2}$	1,169	15,479	$1\frac{3}{4}$	1,204	12,973	2	1,225	11,719
$1\frac{3}{4}$	1,002	9,748	2	1,054	8,691	$2\frac{1}{4}$	1,089	8,230
2	877	6,530	$2\frac{1}{4}$	937	6,104	$2\frac{1}{2}$	980	6,000
$2\frac{1}{4}$	779	4,586	$2\frac{1}{2}$	843	4,450	3	817	3,472
$2\frac{1}{2}$	701	3,344	3	703	2,575	$3\frac{1}{2}$	700	2,187
3	584	1,935	$3\frac{1}{2}$	602	1,622	4	612	1,465
$3\frac{1}{2}$	501	1,218	4	527	1,086	$4\frac{1}{2}$	545	1,029
4	438	816	$4\frac{1}{2}$	468	763	5	490	750
$4\frac{1}{2}$	390	573	5	422	556	$5\frac{1}{2}$	445	564
5	351	418	$5\frac{1}{2}$	383	418	6	408	434
$5\frac{1}{2}$	319	314	6	351	322	7	350	273
6	290	242	7	301	203	8	306	183
			8	263	136	9	272	129

Multiplying Constants.

1. For compression springs with little variation of load multiply *Safe Loads* by 1·25.

2. For Springs, especially tension springs subjected to considerable variation of load suddenly applied, multiply *Safe Loads* by 0·67.

3. For Square Wire Springs where the Side equals the diameter given in the table—multiply

Safe Load by 1·5
Scale by 1·06

4. For Brass Wire Springs (round) multiply the Scale by 0·42. (Only for *Hard* Brass.)

Note.—In getting out Compression Springs allow for the fact that one coil at each end is idle. These two coils do not affect the Scale, but do affect the closed length.

PHOSPHOR-BRONZE SPRINGS.

The formulæ adapted for phosphor-bronze wire such as is manufactured by the Phosphor-Bronze Smelting Company, of Philadelphia, are as follows :—

$$W=\frac{7{,}000\ d^3}{D-d};\quad F=\frac{8\ P\ (D-d^2)}{6{,}200{,}000\ d^4}$$

When W = P, then

$$F=\frac{7\ (D-d)^2}{775\ d}$$

W = carrying capacity, in lbs. ; d = diameter of wire, in ins. ; D = outside diameter of coil in ins. ; F = deflection in one coil, in ins. ; P = load, in lbs.

These formulæ for springs of all diameters, ranging from d = No. 10 B. & S. gauge to $d=\frac{5}{8}$ in., are accurate within 10 per cent. They apply equally well to tension springs wound closely without initial tension.

(*H. R. Gilson.*)

Clock Type.

(1)

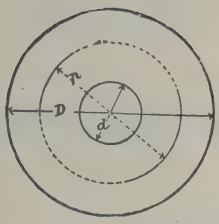


Fig. 1.

Let
d = diameter of inmost coil = spindle + t; D = diameter of outer coil = barrel − t; b = breadth of spring steel; t = thickness of spring steel; L = total length; I = moment of inertia of section; n = number of coils when unwound; n' = number of coils when wound; s = turns from unstrained state; E = coefficient of elasticity; a = total angle of wind; p = diameter of inner coil unwound, or of outer coil wound; M = moment of spring in inch pounds.

For D = 3d the following obtains :—

$tn = \cdot1273\,D$; $\quad d = 0{\cdot}33\,D$;

$t = \dfrac{\cdot0787\,D}{n'-n}$; $\quad n = \dfrac{\cdot1273\,D}{t}$; $\quad n' = \dfrac{\cdot206\,D}{t}$;

$I = \dfrac{bt^3}{12}$; $\quad L = \dfrac{\cdot3491\,D^2}{t}$; $\quad$ or $\quad L = n \times 2{\cdot}7416\,D$; $\quad a = 2\pi s$;

$M = \dfrac{Ebt^3a}{12L}$; $\quad D = \sqrt{\dfrac{\cdot000859\ M\ (n'-n)^4}{b\,s}}$; $\quad p = \sqrt{\frac{1}{2}(D^2+d^2)}$.

d = usually $30t$. For any spiral, $L = \frac{N}{2}(C+C)$, C and C being the circumferences of extreme coils. Maximum practicable, $D = 160t$.

(2)

If l = length of spring; b = breadth of spring; t = thickness of spring: each in inches. E = Young's modulus of elasticity in lbs. per sq. in.; F = safe tensile strength of material in lbs. per sq. in.; N = number of turns spring is capable of taking. R = radius of box containing spring; r = radius of arbor: each in inches. T = maximum torque of spring.

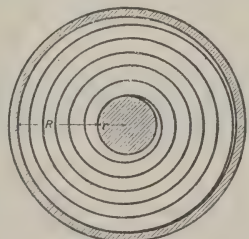


Fig. 2.

$$t = \frac{F}{E} \cdot \frac{(R+r)(R+3r)}{R-r}; \quad b = \frac{6E^2}{F^3} \cdot \frac{T(R-r)^2}{(R+r)^2(R+3r)^2};$$

$$l = \frac{\pi E}{4F} \cdot \frac{(R-r)^2}{R+r}; \quad N = \frac{E}{4F} \cdot \frac{(R-r)^2}{(R+r)^2(R+3r)}.$$

For steel, E = 32,000.000; F = 224,000;
Therefore

$$t = \cdot007\,\frac{(R+r)(R+3r)}{R-r}, \quad b = \cdot547\,\frac{T(R-r)^2}{(R+r)^2(R+3r)^2};$$

$$= 112{\cdot}2\,\frac{(R-r)^2}{R+r}. \quad N = 35{\cdot}7\,\frac{(R-r)^2}{(R+r)^2(R+3r)}.$$

(*J. St. Vincent Pletts: The Engineer, July* 18, 1913.)

Heat Treatment of Springs.

Experiments made by the Automatic and Electric Furnaces, Limited, show that springs heated to 800 degrees and afterwards tempered to 350 degrees give the best results. Overheating is shown to be detrimental; springs which are heated to 900 degrees and quenched, then reheated to 800 degrees and tempered at 350 degrees, show that the bad effects of overheating are not neutralised by reheating to 800 degrees and requenching. These effects can be neutralised by

thoroughly annealing after the first overheating and then by reheating to the correct temperature and quenching.

A spring that has not been overheated, and that has been correctly tempered, can be loaded up to within 5 per cent. of its breaking point without showing any set after the first loading.

Handy Kink for Making Spiral Springs.

Take a piece of fibre about 2 by 6 ins. and bore four or five holes in one end, ranging in size from $\frac{1}{4}$ to $\frac{3}{4}$ in., as in fig. 3. Near the large holes bore several small ones, say $\frac{1}{16}$ in. in diameter. By using nails or pieces of small rod, any size spring can be made, according to the size of the holes.

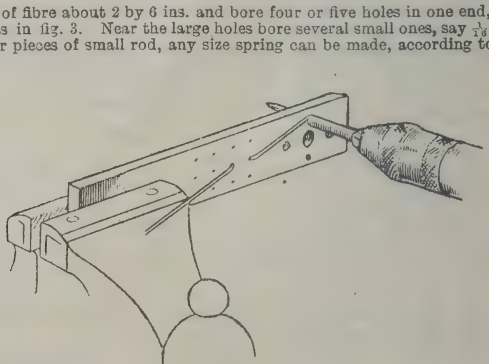


Fig. 3.

Put the block in a vice and thread the spring wire through the holes to give it tension. Take a nail the size of the spring you want to make, cut the head off, and put it into the hole where it fits best. Wrap a few turns of the wire around the nail, and grip the wire and nail in an ordinary brace, as in the figure. Then simply wind the wire around the nail until the desired length of spring is obtained. (*J. W. Fager*, '*Power*.')

Winding a Compression Spring.

Small music wire compression springs can be easily made by the following method. Having selected a mandrel A, fig. 4, the exact diameter of the interior of the desired spring, and wire B, obtain a piece of hard wood C and bore a hole in it in which the mandrel will fit, as shown in the illustration. Within $\frac{1}{32}$ inch from this hole bore another hole, the size of the wire to be used for the spring. Place the mandrel in the chuck of the lathe, slip the piece of wood over the mandrel, and insert the wire in the smaller hole, pushing it through until its end catches in the jaws of the chuck. Now press the piece of wood against the jaws of the chuck and commence winding the spring, first by pulling on the lathe belt, and then by throwing on the power when the coiling operation is well started. During the winding operation, the piece of wood should be pressed firmly against the coils so that the spring will have the appearance of being close wound. When the completed spring is removed from the mandrel, it will elongate or expand, thus forming a compression spring that is the size of the mandrel on which it is wound.

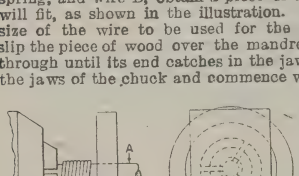


Fig. 4.

If, instead of leading the wire through a small hole as described, a notch is cut in the hole which fits over the mandrel, and the wire fed through this, the inside diameter of the spring will be smaller than the outside diameter of the mandrel. To make the spring a loose fit on the mandrel, the wire should be led through a small hole located at a greater distance from the large hole. If the spring is straightened out by pulling it off from the mandrel, the wire will be badly kinked, but if re-wound by the method described, a good spring will be produced. To remove the strains in the wire spring that result from the winding operation, it should be heated carefully, if made from steel, until it is a uniform blue colour. If the spring is made of phosphor-bronze or brass wire, it should be covered with tallow or beeswax and heated until it smokes. This will remove the strains, so that it will maintain its form. (*J. H. B.*, '*Machinery*.')

SECTION XX

Contributed and revised by Dempster Smith, M.Sc., M.I.Mech.E.)

PART I

MACHINE TOOLS—BROACHING—DRILLING—MAGNETIC CHUCKS—POWER REQUIRED BY MACHINE TOOLS—TOOL STEEL—TOOLS—HARDNESS OF MATERIALS (pp. 939-1002)

PART II

GRINDING, ABRASIVES, AND POLISHING APPLIANCES
(pp. 1003-1019)

(Revised and amplified by Alfred B. Searle)

PART III

STEAM AND POWER HAMMERS (pp. 1021-1028)

SECTION XX

PART I

MACHINE TOOLS — BROACHING — DRILLING — MAGNETIC CHUCKS—POWER REQUIRED BY MACHINE TOOLS—TOOL STEEL—TOOLS—HARDNESS OF MATERIALS

(Revised and amplified by Dempster Smith, M.Sc., M.I.Mech.E.)

METAL CUTTING MACHINES.

LATHES.

With a cutting angle of 80° for cast iron (tool angle 75°) and of 70° for soft steel (the best cutting angles in practice), the horse-power needed at the point of the tool is about 2 h.p. per pound of chips per minute. To this must, of course, be added the power needed to drive the tool light, which, in the case of light cuts, is a large proportion of the whole, and is the main reason why a heavy cut and a slow speed are more economical of power than a light cut at a higher one. Where the chips come off in the same shape and fashion, and the tools are equally sharp, the net horse-power expended in the actual cutting operation is practically the same per pound of metal removed whether a light or a heavy cut is taken. The power to be provided will, of course, depend upon the heaviest cut which the tool is to take. This will generally be heavier in a turret lathe than in a common lathe operating on work of the same diameter.

For the common lathe the heaviest cut is $\frac{1}{40}$th of the height of the centres in depth, and the traverse is $\frac{1}{100}$th of the same height. The area cut is then $\frac{h^2}{6,400}$, where h is the height of the centres. The speed of cutting may be in feet per minute,

$$\text{For soft steel, } v = \frac{10}{\sqrt{a}}. \qquad \text{For cast iron, } v = \frac{3{\cdot}5}{\sqrt[3]{a}}.$$

where v is the cutting speed in feet per minute, and a is the area of cut in square inches.

Keener tools should be used on a material like copper than on steel, and keener on steel than on cast-iron.

In regard to the proper proportioning of the step-pulley and change-gears, the highest speed should be that enabling the tool to give its maximum possible output on the smallest diameter which it is profitable to turn in the lathe, and this may be a diameter of one-eighth the height of centres. The lowest speed should be such that the maximum output is also attained on the maximum diameter which can be swung on the lathe. The geometric ratio between successive speeds should be 1·08 in the case of a 6-inch lathe and 1·24 in the case of a 72-inch lathe. That is to say, if R be the maximum of revolutions per minute provided for and r the smallest, then, in the case of a 6-inch lathe, $R = r\,(1{\cdot}08)^n$, where $n + 1$ is the total number of speed changes.

The highest and lowest Spindle Speeds and their ratio.—These data are fundamental to the design of the fast headstock, and the following figures, rationally deduced, have been confirmed by practice :—

Height of centres . .		6 ins.		12 ins.		18 ins.		36 ins.		60 ins.		
Spindle speeds for carbon steel lathes	Greatest .	300	50	150	50	102	60	50	100	30	180	Ratio
	Least .	6		3		1·7		0·5		0·16		
Spindle speeds for high-heat steel lathes	Greatest .	600	10	300	30	200	50	100	100	60	120	Ratio
	Least .	60		10		4		1		0·5		

The Belt drive.—To enable them to transmit the great powers now required much higher belt speeds have become necessary. Speeds through the air of 2,000 ft. or 3,000 ft. per min. are now used, and unduly wide belts avoided. The efficiency of the belt drive is also improved by using large pulleys running at moderate speeds, rather than small pulleys running at very high rates of revolution.

A simple rational formula for the power required for actual cutting when operating with ordinary high-speed steel on mild steel is :—

$$\text{Cutting HP} = \frac{\text{Force} \times \text{speed of cutting}}{33{,}000}.$$

The force for mild steel is 90 tons per square inch and the standard cutting speed is $\frac{10}{\sqrt{a}}$ where a is the area of cut (cut × traverse) in square inches.

$$\text{Thus C.HP} = \frac{2240 \times 90 \times a}{33{,}000} \times \frac{10}{\sqrt{a}} = 60\sqrt{a}.$$

For standard lathes the test cut in terms of the height of centres is

$$\frac{h}{40}, \text{ and the traverse is } \frac{h}{160}, \text{ or } a = \frac{h^2}{6{,}400}.$$

$$\text{Then C.HP} = 60\sqrt{a} = 60\sqrt{\frac{h^2}{6{,}400}} = 0{\cdot}75\,h.$$

Adding 10 per cent. say for friction in the journals, gears, etc., then gross HP = 0·83 h.

(Nicolson & Smith.)

PLANING MACHINES.

VICKERS' PATENT AUTOMATIC REVERSING DRIVE.

In this system, fig. 1, as applied to a planer, the motor itself reverses and is directly geared to the driving screw or rack-wheel of the machine. There are no driving pulleys to reverse, and the inertia of the driving system is much reduced, permitting quick reversal without the excessive waste of energy shown by a power diagram of the usual type of belt machines. There are no belts to wear. The cost of belts averages 30*l.* to 40*l.* per annum on belt-driven planers of large size. The speed of cutting can be instantly varied between the limits of the slowest cut and of the quick return. Thus, in a planer having slowest cutting speed 15 ft. per min., and (constant) quick return 60 ft. per min., the cut can be varied from 15 ft. to 60 ft. per min. by small intervals, and without altering the quick return speed, by simply turning the handle of the speed controlling switch to the proper position. The speed of the return stroke can be varied in a similar manner. The cutting speed can be instantly suited to the material from the hardest steel to softest steel and wrought iron, thus increasing the general output of the machine. The tool will plane accurately up to a line.

The following is a list of speeds of cutting and return stroke in use with planers which have been converted to this system of drive :—

Size of Planer.	Cutting Speeds.	Return Speeds.	No. of Tools.	Horse-power of Motor.
Feet.	Ft. per Min.	Ft. per Min.		
3 × 3 × 20	30/120	120/30	3	10
4 × 4 × 12	30/120	120/30	3 or 4	15
5 × 5 × 12	30/120	120/30	4	20
6 × 6 × 14	25/100	100/25	4	25
7 × 7 × 18	25/100	100/25	4	30
8 × 8 × 16	20/80	80/20	4	40
9 × 9 × 20	15/60	60/15	4	45
10 × 10 × 20	15/60	60/15	4	45
*12 × 12 × 24	10/40	40/10	Up to 8	50

* Armour-plate planing machines.

VICKERS' PATENT AUTOMATIC REVERSING DRIVE.

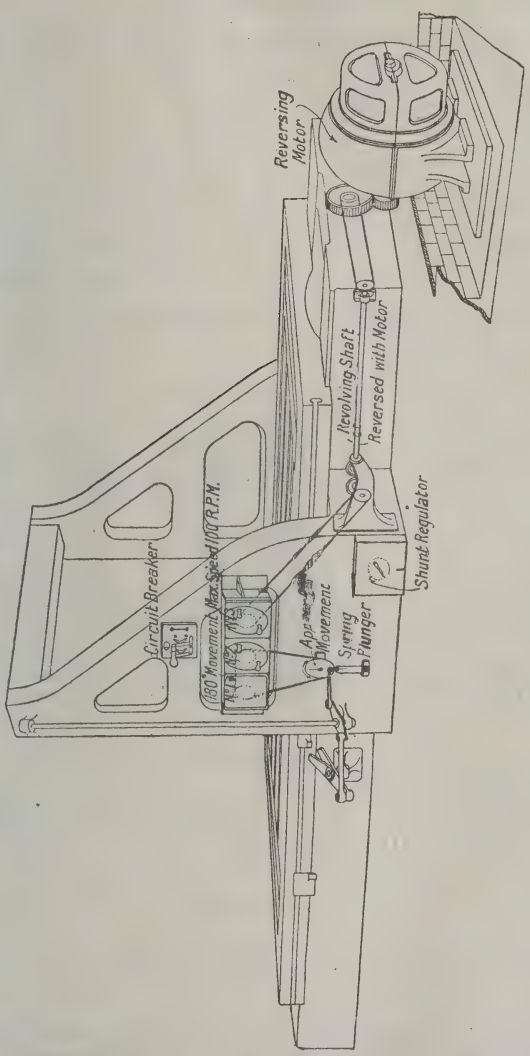


FIG. 1.

Planing Machine Tests.

Material.	Cutting Speed. Feet per Minute.	Depth of Cut.	Feed.	Authority.
		In.	In.	
Steel slabs	25	$\frac{1}{2}$	$\frac{1}{8}$	Armstrong-Whitworth, using A.W. Steel.
Steel horn blocks	35	$\frac{1}{2}$	$\frac{1}{8}$	Armstrong-Whitworth, using A.W. Steel.
Hard cast iron	40	$\frac{1}{4}$	$\frac{1}{8}$	Richard Hornsby & Sons, Ltd.
Cast iron	36	$1\frac{1}{2}$	$\frac{1}{7}$	Armstrong-Whitworth.
Cast iron	55	$\frac{1}{2}$	$\frac{3}{16}$	Armstrong-Whitworth.

Planing Speeds and Feeds.

Material.	Cutting Speed. Ft. per Min.	Feed Ins. per Stroke.	Depth of Cut. Ins.
Roughing Cuts.			
Cast iron	37–48	$\frac{3}{16}$	$\frac{7}{16}$
Cast steel	28–48	$\frac{5}{32}$	$\frac{1}{4}$
Machine steel	28–48	$\frac{5}{32}$	$\frac{1}{4}$
NOTE.—Leave $\frac{1}{32}$ in. of metal for removal by subsequent cuts. When so set, the tools tend to dig in and actually leave about 0·026 in. of surplus stock.			
Straightening Cuts.			
Cast iron	45	$\frac{3}{16}$ to $\frac{1}{4}$	0·018
Cast steel	45	$\frac{1}{8}$	0·018 to 0·021
Machine steel	45	$\frac{1}{8}$	0·018 to 0·021
Finishing Cuts.			
Cast iron	28–35	$\frac{1}{4}$ to $1\frac{1}{2}$	0·003 and 0·001
Cast steel	45	$\frac{1}{32}$	0·004
Machine steel	45	$\frac{1}{32}$	0·004
NOTE.—For cast iron, it is good practice to divide the work up into two operations, taking off 0·003 in. with the first cut and 0·001 in. with the second cut. This prevents a tendency for the tool to dig in at the high spots.			

SPEED TABLE FOR PLANING MACHINES.

(Bateman's Machine Tool Co. Ltd.)

Size of Planer.	Length of Stroke taken.	Time of 10 Cycles.	No. of Feet in 10 Cycles.	Average Speed.	Maximum Speeds. Ft. per min.	
	Ft. Ins.	Min. Secs.		Ft. per Min.	Cut.	Re-turn.
24 ins. by 24 ins. by 6 ft.	6 3½	1 8	126	111	80	225
30 ins. by 30 ins. by 8 ft.	8 0	4 20	160	37	22	218
(With three-speed gear-box)	8 0	2 21	160	68	45	218
	8 0	1 41	160	96	65	218
36 ins. by 36 ins. by 12 ft.	12 0	6 0	240	40	20	175
(With three-speed gear-box)	12 0	3 34	240	67	40	175
	12 0	2 46	240	87	62	175
36 ins. by 36 ins. by 20 ft.	20 3	10 12	405	40	24	163
(With three-speed gear-box)	20 3	6 14	405	65	42	163
	20 3	4 46	405	85	61	163
42 ins. by 42 ins. by 20 ft.	22 6	6 39	450	68	45	145
42 ins. by 42 ins. by 14 ft.	14 0	3 56	280	71	50	155
42 ins. by 42 ins. by 12 ft.	11 0	2 36	220	84	58	175
48 ins. by 48 ins. by 8 ft.	8 0	2 4	160	77	52	160
60 ins. by 60 ins. by 12 ft.	12 0	6 0	240	40	25	150
(With three-speed gear-box)	12 0	3 50	240	62½	42	150
	12 0	2 50	240	85	60	150
72 ins. by 72 ins. by 16 ft.	16 0	7 40	320	41	25	110
(With three-speed gear-box)	16 0	5 40	320	56	39	110
	16 0	4 50	320	66	50	110

For taking the roughing and straightening cuts, it is usually found that high-speed steel is the most satisfactory material, owing to its greater productive capacity ; but where considerable accuracy and perfection of finish is required in performing the final planing operations, far more satisfactory results will usually be obtained by making the cutting tools of carbon steel, because this material can be ground to a keener edge, and experience has shown that the tools retain this edge longer and are thus able to produce a smoother and more accurate finish on the work.

MILLING MACHINES.*

One of the chief points is to make the cutters of such shape that all the fitting surfaces and cutting edges can be easily and accurately ground. In fig. 2 an ordinary grooving cutter is shown so designed. It will be noticed that the hole is chambered out so that the cutter fits the spindle at the two narrow surfaces, A and A′, only. These surfaces can be more easily ground to standard size than could a bearing the full width of the cutter. After the hole has been accurately finished it is an easy matter to mount the cutter on a mandrel and grind the surfaces BB and B′B′, and also the cutting edges, CC, C′C′, and DD all at the same setting, as indicated in fig. 2. Nothing now remains to be done but to back off the teeth in the way indicated in figs. 3 and 4. Such a cutter, when mounted on a true spindle, provided with a solid collar, against which the cutter is held, is self-setting and accurate.

In determining the correct angle for the face of the teeth, the diameter and shape of the cutter should be taken into account. For small-sized cutters it will, in order to obtain a strong shape, generally be found best to make the faces truly radial, as shown in figs. 2, 3, and 4. This also is more convenient when the cutter is to have teeth both on the sides and periphery. Cutters with the teeth so formed have worked upon both wrought and cast iron perfectly well, and at the same time they are not so liable to seize hold and bite into the work as cutters which have the faces of their teeth undercut. The pitch of the teeth is, again, partly determined by the diameter and class of cutter. In those cutters which are cut at the sides, the pitch at the circumference has often to be made wider than is advisable, in order to give clearance room for the emery wheel

* Abstract of a paper read before the Manchester Association of Engineers.

when grinding the converging side teeth (see fig. 4). A pitch of from $\frac{5}{16}$ inch to $\frac{3}{8}$ inch will usually be found to give good results. In all except very narrow cutters it is advisable to cut the teeth on the periphery spirally. This ensures a smoother action of the machine and produces better work. In deciding whether to make the cutters right- or left-hand spirals, attention should be paid to the direction in which they are to revolve. For example, in a vertical machine whose spindle revolves to the right hand, as in an ordinary drilling machine, the cutters should be cut

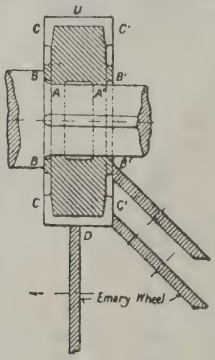


FIG. 2.

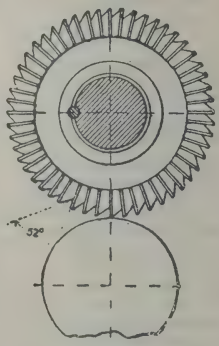


FIG. 3.

with a left-hand spiral. This has the effect of forcing the work down on to the table and the spindle up against its end bearings, as the cutter and the work act as a screw and a nut. In cutters of small size high-class tool steel is most suitable, although great care is required in heating it gradually and evenly. The bottom of the spaces between the teeth should be slightly rounded, and the keyways made semicircular, in order to avoid starting-places for fracture.

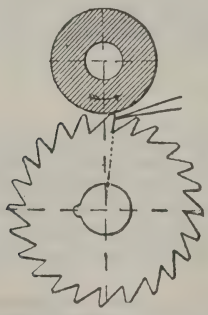


FIG. 4.

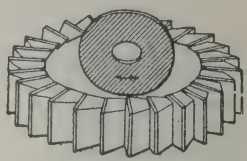


FIG. 5.

For cutters of larger sizes and strong sections Howell's case-hardening steel may be used with great advantage.

Too great stress cannot be laid upon the necessity of keeping milling cutters sharp, and both machines and cutters in such a condition that the cutters shall run true. In grinding milling cutters it is essential that the spindle and emery wheel of the grinding machine should run true and be accurately balanced, as, owing to the high speeds at which they are run, it is clear that any inaccuracy in these respects is highly detrimental. In order to prevent the emery wheel from

glazing, it is necessary to keep it perfectly free from oil or perspiration, and care should be taken not unduly to force the emery wheel against the work, as excessive pressure rapidly generates heat, which not only softens and glazes the emery wheel, but also draws the temper of the thin edges of the cutter, often without showing any discoloration on the edge just ground. For general cutter grinding the emery wheels should be fairly coarse and free-cutting, otherwise they are apt to soften the cutter, which may be known by a fine blue burr, to be seen on the faces of the teeth, the metal along this line being softened. For ordinary-sized cutters an emery wheel 2½ inches in diameter by $\frac{5}{16}$ inch or ¼ inch wide will be found most suitable, the speed of which may vary from 3,000 to 4,500 revolutions per minute, but either too fast or too slow a speed will cause the wheel to burn and soften the cutter. The finishing cut should be very small in amount, especially in cutters of large diameter, otherwise the wear in the diameter of the emery wheel will materially affect the height of the cutter teeth, those last ground being the highest.

For general work, in which ordinary cylindrical cutters can be used, cutters of small or medium size, say up to 3½ inches in diameter, will be found to possess important advantages.

The plain cylindrical cutter is the cheapest and most effective wherever it can be used.

Speed of Milling Cutters.

Table I. shows examples taken from everyday practice, working on wrought-iron forgings.

TABLE I.

Diameter of Cutter.	Depth of Cut.	Width of Cut.	Revolutions of Cutter per Minute.	Cutting Speed in Feet per Minute.	Feed in Inches per Minute.
Inches.	Inch.	Inches.			
2	¼	¾	150	78	2½
3½	¼	3½	70	64	2
7½	¼	5	35	68	1½

The following particulars of milling work which is being done at the North London Railway shops have been furnished by Mr. J. C. Park, the locomotive superintendent.

TABLE II.

CUTTERS 3 INCHES IN DIAMETER.

Speed and Feed.	Brass.	Wrought Iron.	Tool Steel.	Cast Iron.	Mild Steel.
Speed of cutters in feet per minute	112	60	33	18	33 to 60
Feed in inches per minute	1 in. and upwards	¾ in. to 1 in.	½ inch	½ in. to ⅝ in.	¾ in. to 1 in.

TABLE III.

Class of Work.	Diameter of Cutter.	Depth of Cut.	Width of Cut.	Revolutions per Minute.	Cutting Speed in Feet per Minute.	Feed in Inches per Minute.
	Inches.	Inches.	Inches.			
Mild steel coupling rods, roughing cut	..	½	5	..	50	¾
Finishing cut	..	$\frac{1}{32}$	5	..	60	1
Steel rails	7	1	2	15	32	⅛
Wrought-iron spring buckles	12	1⅛	2	15	47	⅛
Cast-steel horn-blocks	6	¼	2⅝	14	22	¼
Wrought-iron nuts (with two side cutters)	6	$\frac{1}{16}$ to ⅛	..	30	47	½
Brass flanges	3	..	..	80	62	1⅝
Soft brass window frames	1½	⅛	..	90	35	2½
Cast-iron steam-chest covers	3	..	..	25	20	½

Tables IV., V., and VI., furnished by Mr. A. G. Brown, of Messrs. John Musgrave & Sons, Bolton, are the results of an extended experience in milling.

TABLE IV.

AVERAGE SPEED AND FEEDS OF CYLINDRICAL MILLING CUTTERS FOR MACHINE STEEL.

Diameter of Mill in Inches.	Depth of Cut in Fractions of an Inch.	Cut $\frac{1}{4}$ Inch Wide.		Cut $\frac{1}{2}$ Inch Wide.		Cut 1 Inch Wide.		Cut 2 Inches Wide.		Cut 4 Inches Wide.	
		Revolutions per Minute.	Revolutions per Inch of Feed.	Revolutions per Minute.	Revolutions per Inch of Feed.	Revolutions per Minute.	Revolutions per Inch of Feed.	Revolutions per Minute.	Revolutions per Inch of Feed.	Revolutions per Minute.	Revolutions per Inch of Feed.
	Full diameter	360	110	330	150						
$\frac{1}{2}$	$\frac{1}{8}$	400	110	365	110	335	110				
	$\frac{1}{16}$	440	110	400	110	365	110				
	Finishing	480	85	440	85	400	85				
	Full diameter	240	100	220	120						
$\frac{3}{4}$	$\frac{1}{8}$	280	100	255	100	230	100				
	$\frac{1}{16}$	300	100	275	100	250	100				
	Finishing	320	75	290	75	265	75				
	Full diameter	180	90	165	100						
1	$\frac{1}{8}$	200	90	185	90	170	90	150	90		
	$\frac{1}{16}$	220	90	200	90	185	90	165	90		
	Finishing	240	68	220	68	200	68	180	68		
	Full diameter	144	80	130	90	120	90				
$1\frac{1}{4}$	$\frac{3}{16}$	160	80	150	80	130	80	120	86		
	$\frac{1}{16}$	175	80	160	80	145	80	132	80		
	Finishing	190	60	175	60	160	60	145	60		
	Full diameter	120	70	112	80	100	80	92	80		
$1\frac{1}{2}$	$\frac{1}{4}$	130	70	120	70	108	70	96	70		
	$\frac{1}{8}$	140	70	130	70	116	70	106	70		
	Finishing	160	53	150	53	130	53	120	53		
	$\frac{1}{2}$	95	60	88	60	80	60	72	60	58	60
2	$\frac{1}{4}$	100	60	92	60	84	60	75	60	60	60
	$\frac{1}{8}$	105	60	96	60	87	60	80	60	64	60
	Finishing	120	45	108	45	100	45	90	45	72	45
	$\frac{1}{2}$	75	50	70	50	64	50	58	50	47	50
$2\frac{1}{2}$	$\frac{1}{4}$	80	50	74	50	68	50	60	50	49	50
	$\frac{1}{8}$	85	50	77	50	71	50	64	50	51	50
	Finishing	95	37	88	37	80	37	72	37	58	37
	$\frac{1}{2}$	65	40	60	40	54	40	48	40	38	40
3	$\frac{1}{4}$	68	40	63	40	57	40	51	40	41	40
	$\frac{1}{8}$	72	40	66	40	60	40	54	40	43	40
	Finishing	80	30	74	30	67	30	60	30	48	30
	$\frac{1}{2}$	48	35	44	35	40	35	36	35	29	35
4	$\frac{1}{4}$	50	35	47	35	43	35	38	35	30	35
	$\frac{1}{8}$	53	35	49	35	47	35	40	35	32	35
	Finishing	60	26	55	26	50	26	45	26	36	26
	$\frac{1}{2}$	38	30	35	30	32	30	29	30	23	30
5	$\frac{1}{4}$	41	30	37	30	34	30	30	30	24	30
	$\frac{1}{8}$	43	30	39	30	36	30	32	30	26	30
	Finishing	48	23	44	23	40	23	36	23	29	23
	$\frac{1}{2}$	32	25	30	25	26	25	24	25	19	25
6	$\frac{1}{4}$	34	25	31	25	28	25	26	25	21	25
	$\frac{1}{8}$	36	25	33	25	30	25	27	25	22	25
	Finishing	40	19	37	19	33	19	30	19	24	19
	$\frac{1}{2}$	28	22	25	22	23	22	21	22	17	22
7	$\frac{1}{4}$	30	22	27	22	25	22	22	22	18	22
	$\frac{1}{8}$	31	22	28	22	26	22	23	22	19	22
	Finishing	34	17	31	17	29	17	26	17	21	17
	$\frac{1}{2}$	24	20	22	20	20	20	18	20	14	20
8	$\frac{1}{4}$	26	20	23	20	22	20	19	20	15	20
	$\frac{1}{8}$	27	20	25	20	23	20	20	20	16	20
	Finishing	30	15	27	15	25	15	22	15	18	15

TABLE V.

AVERAGE SPEEDS AND FEEDS FOR CYLINDRICAL MILLING CUTTERS FOR CAST IRON.

Diameter of Mill in Inches.	Depth of Cut in Fractions of an Inch.	Cut $\frac{1}{4}$ Inch Wide.		Cut $\frac{1}{2}$ Inch Wide.		Cut 1 Inch Wide.		Cut 2 Inches Wide.		Cut 4 Inches Wide.	
		Revolutions per Minute.	Revolutions per Inch of Feed.	Revolutions per Minute.	Revolutions per Inch of Feed.	Revolutions per Minute.	Revolutions per Inch of Feed.	Revolutions per Minute.	Revolutions per Inch of Feed.	Revolutions per Minute.	Revolutions per Inch of Feed.
	Full diameter	450	110	410	110	375	110				
$\frac{1}{2}$	$\frac{1}{8}$	500	110	455	110	415	110	375	110		
	$\frac{1}{16}$	550	110	500	110	455	110	410	110		
	Finishing	600	85	550	85	500	85	450	85		
	Full diameter	300	100	275	100	250	100				
$\frac{3}{4}$	$\frac{1}{8}$	350	100	320	100	290	100	265	100		
	$\frac{1}{16}$	375	100	340	100	310	100	280	100		
	Finishing	400	75	365	75	330	75	300	75		
	Full diameter	225	90	205	90	190	90	170	90		
1	$\frac{1}{8}$	250	90	330	90	210	90	190	90		
	$\frac{1}{16}$	275	90	250	90	230	90	205	90		
	Finishing	300	68	275	68	250	68	225	68		
	Full diameter	180	80	165	80	150	80	135	80		
$1\frac{1}{4}$	$\frac{3}{16}$	200	80	185	80	165	70	150	70		
	$\frac{1}{16}$	220	80	200	80	180	70	165	70		
	Finishing	240	60	220	60	200	60	180	60		
	Full diameter	150	70	140	67	125	67	115	67		
$1\frac{1}{2}$	$\frac{1}{4}$	160	70	150	67	135	50	120	50		
	$\frac{1}{8}$	175	70	160	67	145	50	133	50		
	Finishing	200	53	185	50	165	40	150	40		
	$\frac{1}{2}$	120	60	110	45	100	40	90	40	72	40
2	$\frac{1}{4}$	125	60	115	45	105	40	94	40	75	40
	$\frac{1}{8}$	130	60	120	45	108	40	100	40	80	40
	Finishing	150	45	135	34	125	30	112	30	90	30
	$\frac{1}{2}$	95	50	88	36	80	32	72	32	58	32
$2\frac{1}{2}$	$\frac{1}{4}$	100	50	92	36	84	32	75	32	61	32
	$\frac{1}{8}$	105	50	96	36	88	32	80	32	64	32
	Finishing	120	37	110	27	100	24	90	24	72	24
	$\frac{1}{2}$	80	40	74	30	67	26	60	26	48	26
3	$\frac{1}{4}$	85	40	78	30	71	26	64	26	51	26
	$\frac{1}{8}$	90	40	82	30	75	26	67	26	54	26
	Finishing	100	30	92	22	83	20	75	20	60	20
	$\frac{1}{2}$	60	35	55	22	50	19	45	19	36	19
4	$\frac{1}{4}$	63	35	58	22	53	19	47	19	38	19
	$\frac{1}{8}$	66	35	61	22	55	19	50	19	40	19
	Finishing	75	26	69	17	62	15	56	15	45	15
	$\frac{1}{2}$	48	30	44	17	40	16	36	16	29	16
5	$\frac{1}{4}$	51	30	47	17	43	16	38	16	30	16
	$\frac{1}{8}$	54	30	49	17	45	16	40	16	32	16
	Finishing	60	23	55	13	50	12	45	12	36	12
	$\frac{1}{2}$	40	25	37	14	33	13	30	13	24	13
6	$\frac{1}{4}$	43	25	39	14	35	13	32	13	26	13
	$\frac{1}{8}$	45	25	41	14	37	13	34	13	27	13
	Finishing	50	19	46	11	41	10	37	10	30	10
	$\frac{1}{2}$	35	22	31	12	29	11	26	11	21	11
7	$\frac{1}{4}$	37	22	33	12	31	11	28	11	22	11
	$\frac{1}{8}$	39	22	35	12	33	11	29	11	23	11
	Finishing	43	17	39	9	36	8	32	8	26	8
	$\frac{1}{2}$	30	20	27	10	25	9	22	9	18	9
8	$\frac{1}{4}$	32	20	29	10	27	9	24	9	19	9
	$\frac{1}{8}$	34	20	31	10	28	9	26	9	20	9
	Finishing	38	15	34	7	31	6	28	6	22	6

TABLE VI.

AVERAGE SPEEDS AND FEEDS OF FACE MILLING CUTTERS.

Depth of Mill in Ins.	Depth of Cut in Fractions of an Inch.	Cast Iron.		Machine Steel.		Cast Steel.	
		Revolutions per Minute.	Revolutions per Inch of Feed.	Revolutions per Minute.	Revolutions per Inch of Feed.	Revolutions per Minute.	Revolutions per Inch of Feed.
4	Scale	36	16	29	32	24	32
	$\frac{1}{16}$	40	12	32	24	27	24
	Finishing	45	8	36	12	30	12
5	Scale	29	13	23	26	19	26
	$\frac{1}{16}$	32	10	26	20	21	20
	Finishing	36	7	29	10	24	10
6	Scale	24	11	19	22	16	22
	$\frac{1}{16}$	27	8	21	16	18	16
	Finishing	30	6	24	8	20	8
7	Scale	21	9	17	18	14	18
	$\frac{1}{16}$	23	7	19	14	15	14
	Finishing	26	5	21	7	17	7
8	Scale	18	8	14	16	12	16
	$\frac{1}{16}$	20	6	16	12	13	12
	Finishing	22	4	18	6	15	6
10	Scale	14	7	11	14	9	14
	$\frac{1}{16}$	16	5	12	10	10	10
	Finishing	18	3	14	5	12	5
12	Scale	12	6	9	12	8	12
	$\frac{1}{16}$	13	4	10	8	9	8
	Finishing	15	$2\frac{1}{2}$	12	4	10	4
16	Scale	9	5	7	10	6	10
	$\frac{1}{16}$	10	3	8	6	7	6
	Finishing	11	2	9	3	8	3
20	Scale	7	4	5	8	5	8
	$\frac{1}{16}$	8	$2\frac{1}{2}$	6	5	5	5
	Finishing	9	$1\frac{1}{2}$	7	$2\frac{1}{2}$	6	$2\frac{1}{2}$
24	Scale	6	3	4	6	4	6
	$\frac{1}{16}$	7	2	5	4	4	4
	Finishing	8	$1\frac{1}{2}$	6	2	5	2

Generally speaking, the speed of milling cutters of 6 inches diameter and upwards, provided there is no great depth of material to be cut away, may be as follows :—

Material.	Speed in Feet per Minute.	Depth of Cut in Inches.
Steel	36	$\frac{1}{2}$
Iron	48	1
Cast iron	60	$1\frac{2}{3}$
Brass	120	$2\frac{2}{3}$

CUTTER DIMENSIONS.

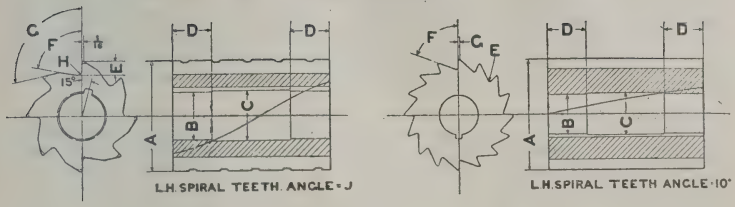


FIG. 6.

Coarse Pitch.
Dimensions in Inches.

Diam. of Cutter. A	B	C	D	E	F	G	H	J	Key-way.	No. of Teeth.
$2\frac{1}{2}$	1	$1\frac{1}{16}$	$1\frac{1}{2}$	$\frac{3}{8}$	80°	103°	$\frac{1}{8}$R	$26\frac{1}{2}$°	$\frac{5}{32}\times\frac{3}{32}$	8
3	$1\frac{1}{2}$	$1\frac{5}{16}$	$1\frac{1}{2}$	$\frac{3}{8}$	80°	103°	$\frac{1}{8}$R	$26\frac{1}{2}$°	$\frac{5}{16}\times\frac{1}{8}$	8
$3\frac{1}{2}$	$1\frac{1}{2}$	$1\frac{9}{16}$	$1\frac{1}{2}$	$\frac{7}{16}$	80°	103°	$\frac{1}{8}$R	26°	$\frac{1}{4}\times\frac{5}{32}$	8
4	$1\frac{3}{4}$	$1\frac{13}{16}$	$1\frac{1}{4}$	$\frac{7}{16}$	71°	94°	$\frac{3}{16}$R	$25\frac{1}{2}$°	$\frac{1}{4}\times\frac{5}{32}$	10
$4\frac{1}{2}$	2	$2\frac{1}{16}$	$1\frac{1}{4}$	$\frac{1}{2}$	71°	94°	$\frac{3}{16}$R	$26\frac{1}{4}$°	$\frac{5}{16}\times\frac{3}{16}$	10

Fine Pitch.
Dimensions in Inches.

Diam. of Cutter. A	B	C	D	E	F	G	Key-way.	No. of Teeth.
$2\frac{1}{2}$	1	$1\frac{1}{16}$	$1\frac{1}{2}$	$\frac{3}{64}$R	70°	$\frac{3}{64}$	$\frac{5}{32}\times\frac{3}{32}$	14
3	$1\frac{1}{2}$	$1\frac{5}{16}$	$1\frac{1}{2}$	$\frac{3}{64}$R	70°	$\frac{3}{64}$	$\frac{5}{16}\times\frac{1}{8}$	14
$3\frac{1}{2}$	$1\frac{1}{2}$	$1\frac{5}{16}$	$1\frac{1}{2}$	$\frac{3}{64}$R	70°	$\frac{3}{64}$	$\frac{3}{16}\times\frac{1}{8}$	16
4	$1\frac{1}{2}$	$1\frac{9}{16}$	$1\frac{1}{2}$	$\frac{1}{16}$R	65°	$\frac{1}{16}$	$\frac{1}{4}\times\frac{5}{32}$	18
$4\frac{1}{2}$	$1\frac{1}{2}$	$1\frac{9}{16}$	$1\frac{1}{2}$	$\frac{1}{16}$R	65°	$\frac{1}{16}$	$\frac{1}{4}\times\frac{5}{32}$	20

The above table gives particulars of a range of cutters suitable for heavy roughing work, and also corresponding fine pitch cutters used for light milling.

(*P. V. Vernon (Alfred Herbert & Co.),*
(*Paper read before the Manchester Association of Engineers*, 1912.)

BROACHING.

Recently the finishing of holes, oil gutters, keyways, etc., by broaching has received considerable attention. Any class of material appears to lend itself to this process provided the broach is of suitable design. Broaches under $1\frac{1}{2}$ ins. diameter are frequently made of high-speed steel containing from 14 per cent. to 18 per cent. tungsten. Such steel, however, is hard throughout and likely to fail under shock. For this reason, some firms make their broaches entirely of vanadium steel, which contains neither tungsten nor chromium. This steel is hardened at 750° C. and quenched in oil and tempered at 420° C. For general work a mild steel containing about 0·15 per cent. carbon, carburised at 900° C., reheated to 800° C. and dipped in water has given very satisfactory results. The reheating before quenching gives a tough core. For broaching hard

steel, a mild steel containing from 2 per cent. to 3 per cent. nickel and about 0·14 per cent. carbon, carefully case-hardened, reheated to 770° C. and quenched in whale oil, has proved suitable. In making a broach, choose a bar with at least $\frac{1}{4}$ in. excess in diameter of the finished broach, so as to avoid small surface cracks and skin stresses. Broaches above 2 ins. diameter are frequently built up, in which case the teeth are formed on hardened steel rings, and these are securely mounted on a mild steel core. The teeth of the broach should be periodically examined when in use. Should any of these be chipped or dulled, these must have the cutting edge restored. Should a tooth break it must be ground down and the cut distributed amongst the next four teeth or so.

In the case of white metal an accurate hole and fair finish may be obtained with a broach having fine pitched teeth (say, from $\frac{3}{8}$ in. to 1 in. in broaches from $1\frac{1}{2}$ ins. to 6 ins. diameter), and each cutting tooth increasing by 0·0005 in. The cutting teeth are preceded by a plain part (to act as a pilot) about 2 in. long and 0·002 in. below the diameter of the first cutting tooth and diameter of the hole. From 6 to 12 teeth at the end of the broach are parallel and about 0·002 in. larger than the finished hole, to allow for creep. This dimension will vary with the springiness of the member. The teeth should have a parallel land of 0·02 in. and a top-take of about 10°.

Design of Broach.

The broach may be secured to the cross-head of the machine by means of a screw or a flat key, or a buttress-thread and pad, a plain cylindrical stem with cotter. An example of the latter is shown in fig. 7. This method is extensively used, on account of the ease with which the pin can be withdrawn and the security it affords, in that the pin is sheared before any damage is done to the broach or machine.

All broaches should be provided with a pilot. The pilot is made a sliding fit in the hole or slot, and leads the cutting edges centrally to their work. It is a very important factor, as it not only helps to produce accurate work, but prevents damage to the broach. In the case of very long broaches, pilots or steadies are provided at intervals along the broach itself, as shown at A, fig. 9. It is advisable that the broach should have four or five teeth at the end for sizing only. These may be of a smaller pitch than the normal, as the cut removed per tooth is exceedingly fine. C, Fig. 9, shows a square broach with progressive increasing cut per tooth which in this design is permissible.

Pitch of Teeth.

The pitch of the teeth is regulated by the number of teeth engaged, the cut taken per tooth, the material operated upon, and the material of which the broach is made. It is clear that the cutting force should not exceed the tensile strength of the broach or strength of the teeth. In the case of broaching, a circular, square or hexagonal hole in mild steel, it is usual to allow of three teeth being in action, each tooth taking $\frac{3}{1000}$ in. cut, that is, 9 teeth thousandths. This is suitable, say, for a broach 1 in. dia., but for a broach $\frac{1}{2}$ in. dia. only 5 teeth thousandths should be allowed, whilst for a 2 in. broach 18 teeth thousandths can be allowed, and a proportionately larger amount as the diameter of the broach increases. With softer material more teeth can, of course, be engaged. It is desirable that the teeth should have a top rake of about 10°, a land of about $\frac{1}{32}$ in., and a side clearance of about 3°, as shown in fig. 8. Proportions of teeth in common use are shown at D, fig. 9.

It is difficult to obtain uniformity of cutting per tooth on the first trial, and the broach may be pulled through a sample piece, the amount removed per tooth being noted, and the teeth honed down where necessary. On rectangular and circular work the teeth are sometimes spiral as shown at B in fig. 9. This design has the advantage of giving a side rake to the cutting edges, and it is claimed that it tends to neutralise any lateral thrust. Occasionally the teeth are staggered, and where the material to be cut is very hard the teeth may be fluted or nicked. An example of the latter is shown in fig. 8, where the alternate teeth are arranged to remove the corner and body of the groove. This arrangement breaks up the chip and materially reduces the stress on the broach.

In fig. 7 is shown the design of a broach adopted for cutting single keyway in a member, and the pilot which is fitted to the machine to guide the broach. Where more than one key is required, arrangements are made to turn the member round, but the spacing obtained under such conditions is rarely accurate, and a better method is to provide for a double spline broach as shown in fig. 8. It is always desirable, where there is more than one gutter, to have a broach with the necessary number of splines.

Speed of Cutting.

The speed of cutting varies with the material operated upon, and for soft brass may be as high as 20 ft. per minute, and for medium hard steel about 5 ft. per minute. The cutting speed is relatively of little importance, and it is generally advisable to adopt about half the above speeds.

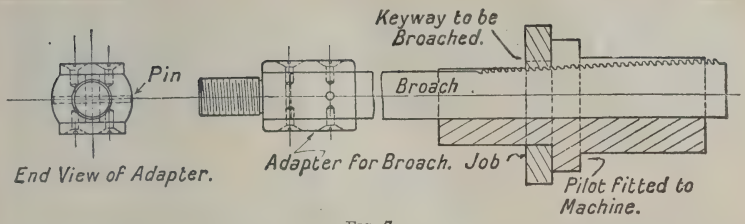


FIG. 7.

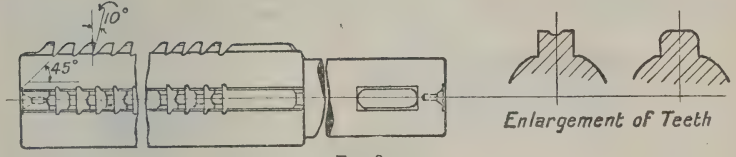


FIG. 8.

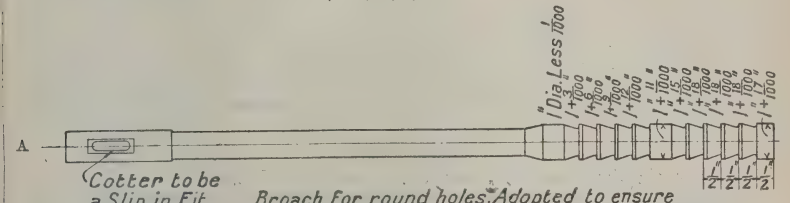


FIG. 9.—Types of Broaches.

Lubrication.

When a highly-polished finish is required on ductile materials it is desirable to use a cutting compound, and on such materials one pint of oil mixed with 4 ozs. of flowers of sulphur has given good results. The J. N. Lapointe Co. recommend the following mixture when broaching mild steel :—

Mineral lard oil, 3 gallons ; water, 50 gallons ; and soda ash, 2½ lbs. The whole of the lard oil and soda ash should be mixed with 10 gallons of water and the remaining proportion of water added before putting into use.

For heavy duty use castor oil.

DRILLS AND DRILLING.

Cutting Edges of Drills.

The cutting edges of drills are formed by grinding the end facets at an angle as shown by A, C, B, fig. 10, and this angle varies from 5° for drilling hard metal, such as steel, to 20° for

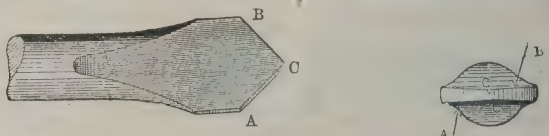


Fig. 10.

soft metal, such as brass or copper. The angle of one cutting edge to the other varies from 45° for steel to about 35° or 40° for soft metals.

Drills for work of ordinary hardness are tempered to an orange purple ; but if the metal to be cut is very hard a straw colour is preferable, or the drill may be left as hard as it leaves the water ; that is to say, hardened, but not tempered. In these cases great care must be exercised and the speed of the drill reduced.

Twist Drills.

A twist drill possesses three cutting edges, A, B, and C, as shown in fig. 11.

The point A, being the least effective, since it cannot be made anything like as keen as the other two, B and C, is a hindrance to clean and rapid cutting and is one of the most important factors to be considered when arriving at the amount of feed progression per inch of travel.

In order to obtain the greatest possible duty from a twist drill, it is imperative that it should be

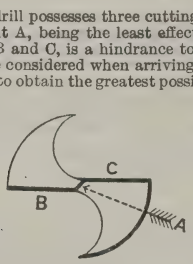


Fig. 11.

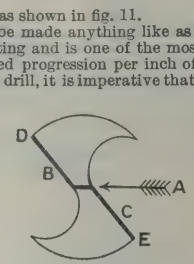


Fig. 12.

ground perfectly true, so that the point of the drill shall be central and in line with the axis on which it revolves. The cutting edges must be of equal length and at the same angle to the axis of the drill. If the point of the drill is not central to the axis, the two cutting edges are not at the same angle, the result being that all the duty falls on one cutting edge, and the hole made will still be larger in diameter than the drill, there being a tendency for the cutting edge B to push, or crowd, the drill over to the opposite side of the hole.

From the foregoing it will be obvious that the more correctly a drill is ground, the longer it will last without re-grinding : the greater its amount of feed may be to take an equal depth of cut, and the nearer the diameter of the hole bored will be to that of the drill.

Another important point when the maximum duty is expected from a twist drill is the relationship between the speed and feed, which varies more or less with different materials and with different grades of hardness of like materials.

When a drill has been in operation for a short time it should be withdrawn from the machine and examined as to its cutting edges, fig. 12. Should the cutting edges B C show more wear towards their extreme diameters D E, this would show the speed is too great as compared with the feed.

The grooves of a twist drill make either a constant angle with the axis or an angle that increases gradually from point to shank. The latter form is supposed to facilitate the escape of the cuttings, though opinions differ, but it has the serious effect of rendering the cutting angle more obtuse as the drill becomes ground back. When the angle is constant it ranges from 24° to 32° with the axis, measured at the periphery, 26° being an average. In the increase-twist drills it ranges roughly between 30° and 25°, the angle lessening by that amount from point to shank. The thickness of the web is increased from point to shank to enable it to resist torsional stresses. The diminished area for the escape of chips consequent on this thickening is counteracted by increasing the twist.

'Firth's Speedicut' High-speed Twist Drills.

The chart (fig. 13) indicates speeds and feeds suitable for drilling mild steel; for cast iron use the same feed per minute but decrease the speed 20 per cent. Both speeds and feeds may be modified to suit variation of material.

The feeds and speeds given on the chart are approximate, and represent ordinary working speeds for average depths of holes.

The chart shows that a 1-in. drill should run under the following conditions.

Mild Steel.	*Cast Iron.*
Speed, 280 revs. per min.	Speed, 224 revs. per min.
Feed, 4¼ ins. per min.	Feed, 4⅛ ins. per min.
Feed per rev., ·0175.	Feed per rev., ·022.

If the material is thin, as in the case of boiler plate, both feed and speed can be increased. If the material is hard, decrease both the feed and speed. Always run with lubricant if possible except in the case of cast iron. If no lubricant is used, decrease both feed and speed about 25 per cent. When possible, always keep the feed per rev. the same as given on the chart for the

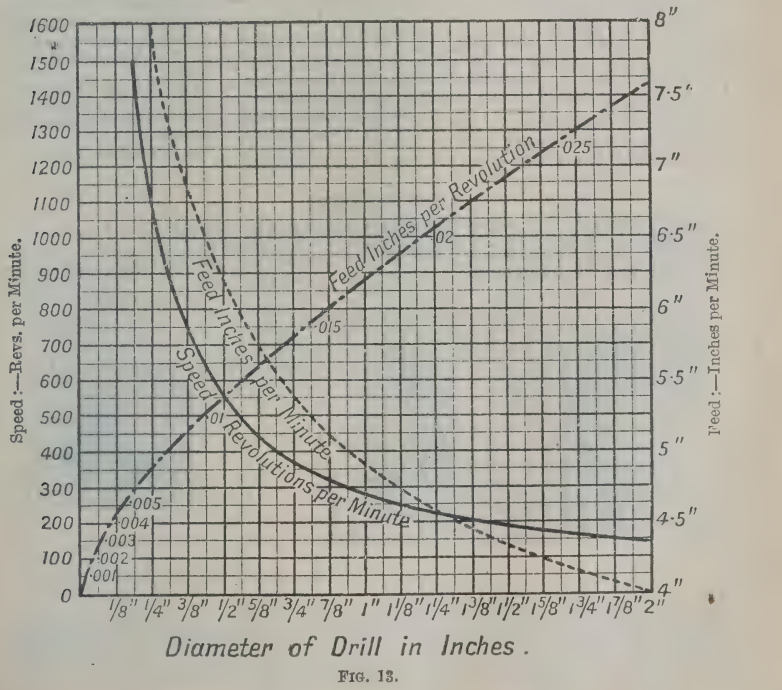


Fig. 13.

two different classes of material, i.e. steel and cast iron. Never decrease the feed below a minimum of, say, 3 ins. per min. for a 1-in. drill, the others in like proportion.

(*Thos. Firth & Sons, Ltd., Sheffield.*)

SPEEDS FOR ORDINARY CARBON STEEL DRILLS.

Diameter of Drill in Inches.	Revolutions per Minute.			Diameter of Drill in Inches.	Revolutions per Minute.		
	Soft Steel and Wrought Iron.	Cast Iron.	Brass.		Soft Steel and Wrought Iron.	Cast Iron.	Brass.
$\frac{1}{8}$	768	610	1,536	1	96	76	192
$\frac{5}{16}$	512	405	1,024	$1\frac{1}{8}$	85	66	170
$\frac{1}{4}$	384	304	768	$1\frac{1}{4}$	77	61	154
$\frac{5}{16}$	307	243	614	$1\frac{3}{8}$	70	55	140
$\frac{3}{8}$	256	203	512	$1\frac{1}{2}$	64	50	128
$\frac{7}{16}$	219	174	438	$1\frac{5}{8}$	59	47	118
$\frac{1}{2}$	192	152	384	$1\frac{3}{4}$	55	43	110
$\frac{9}{16}$	170	135	340	$1\frac{7}{8}$	51	41	100
$\frac{5}{8}$	154	122	308	2	48	38	96
$\frac{11}{16}$	139	111	278	$2\frac{1}{4}$	42	34	84
$\frac{3}{4}$	128	102	256	$2\frac{1}{2}$	38	30	76
$\frac{13}{16}$	118	93	236	$2\frac{3}{4}$	35	27	70
$\frac{7}{8}$	109	87	218	3	31	25	62
$\frac{15}{16}$	102	81	204				

Feed revolutions for the above speeds, on wrought iron and steel: up to and including $\frac{1}{4}$ in. diameter, $\frac{1}{1\frac{1}{0}}$ in.; from $\frac{1}{4}$ in. up to $\frac{7}{16}$ in. inclusive, $\frac{1}{1\frac{1}{0}}$ in.; from $\frac{7}{16}$ in. up to $\frac{5}{8}$ in. inclusive, $\frac{1}{1\frac{1}{0}}$ in.; from $\frac{5}{8}$ in. up to 1 in. inclusive, $\frac{1}{8\frac{1}{0}}$ in.; from 1 in. up to $1\frac{1}{2}$ in. inclusive, $\frac{1}{8\frac{1}{0}}$ in.; from $1\frac{1}{2}$ in. upwards, $\frac{1}{7\frac{1}{0}}$ in. For cast iron these feeds may be increased 20 per cent.

For small holes in brass the feed should be from 0·0015 in. to 0·003 in. per revolution; $\frac{1}{8}$ in. to $\frac{1}{4}$ in. diameter, 0·003 in. to 0·006 in. per revolution; $\frac{1}{4}$ in. to $\frac{1}{2}$ in. diameter and upwards 0·006 in. to 0·020 in. per revolution. When drilling mild steel the feed should be approximately one-third the above, and harder metals slower in proportion.

Should the drill be running too fast the outer edge of the lip becomes quickly dulled; should the central stem become dull, or the lips chip, the feed is too great.

GRINDING DRILLS.

When grinding the drill points, the following rules should be observed:—

I. Both cutting lips, fig. 14, should be inclined at the same angle with the axis of the drill, and must be of equal length. The point angle of 59° has been universally adopted as best suited for average conditions.

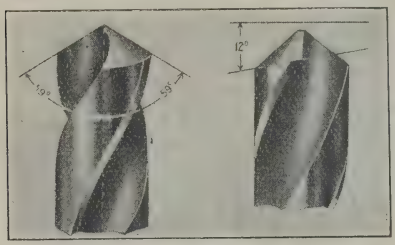


FIG. 14. FIG. 15.

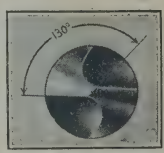


FIG. 16.

II. The drill point must have the proper clearance or contour of surface back of the cutting edges, and this clearance must be identical on both sides. Approximately a 12° clearance angle, fig. 15, combined with the centre angle of 130°, which will give a constantly increasing clearance toward the centre, fig. 16, has proved best for average conditions.

Some of the undesirable conditions resulting from drill points improperly ground are as follows:—

(1) If both lips are not ground at the same angle with the axis, fig. 17, one lip will fail to counteract the tendency of the other to spring away from the cut; consequently, one lip will do more work than the other, which will result in its becoming dull more rapidly than if both lips were cutting equally, and it will be subjected to an abnormal torsional strain.

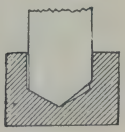


FIG. 17.

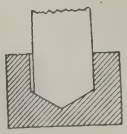


FIG. 18.

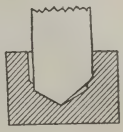


FIG. 19.

(2) When the cutting lips of a drill have the same point angle but are of different lengths, fig. 18, the point of the drill will be off centre, or eccentric. As a result, the hole will be oversize to an extent equal to double the amount of this eccentricity.

(3) If the drill point is ground both with lips at different angles and of different lengths, fig. 19, there will be a combination of the undesirable results described in the two preceding paragraphs.

4. Fig. 20 shows a side and end view of a drill with the proper angle of point (59°) and the proper angle of clearance at the periphery (12°), but with insufficient clearance at the point or centre.

5. Fig 21 shows a drill with insufficient clearance both at the periphery and at the centre. The line ABC is at an angle of 12°, but there is no clearance immediately back of the cutting edges (BC), and the excess of clearance at the heel (AB) is of no benefit.

6. Fig. 22 shows what is liable to happen to a drill ground with insufficient clearance, or as described in paragraphs Nos. 1 to 5, especially if an attempt is made to obtain maximum production.

(7) Fig. 23 shows a drill with a clearance angle of about 12°, but it does not have the proper contour back of the cutting edges. This manner of grinding leaves the cutting edges thin and weak, causing them to crumble away under heavy feeds.

FIG. 21. FIG. 22. FIG. 23.

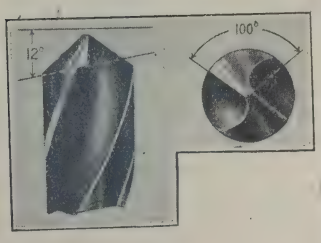


FIG. 20.

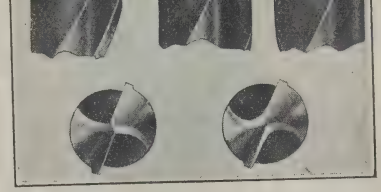


FIG. 24. FIG. 25.

Most twist drills are made with a gradual increase in the thickness of the web or centre of the drill toward the shank. As the drill becomes shorter and the web thicker, greater force is required to drive it. To overcome this, it is good practice to thin the web by grinding away the excess thickness, reducing it to its original dimensions. This grinding must not extend too far up the flute of the drill, and care must be exercised that the cutting lips are not injured

and the same amount is ground out of each groove. Fig. 24 shows a drill with the web properly thinned. In fig. 25 the grinding is excessive, leaving the web entirely too thin and liable to crumble. When this happens a split drill is practically inevitable.

Paragraphs 1 to 5 and the preceding paragraph show the cause of drills splitting up the centre, and no manufacturer should be called upon to replace a split drill unless a flaw is evident in the steel.

Twist drills are made with a slight taper from point to shank, so that the largest diameter is always across the corners of the cutting lips. This prevents the drills from binding in the work when they are sharp. If the outer corners are allowed to become badly worn, the drills will bind and cannot perform satisfactorily. Whenever the outer corners of the cutting lips show wear, the drills should be reground and every particle of worn surface removed, or the drill will continue to bind and very quickly be damaged beyond repair.

In grinding high-speed drills care should be taken not to overheat them, and when heated they should never be plunged into cold water. Doing so is likely to cause small surface cracks, which reduce the efficiency of the drill and may result in serious damage to it. Forcing the grinding on a wet grinder may also bring about the same condition.

It is hardly possible to do grinding as accurately by hand as by using a good twist-drill grinding machine.

Broken or damaged tangs of drills are generally the result of an imperfect fit of the drill shank in its socket, which may be caused by a worn-out socket, dirt or chips accumulating in the socket, or bruises on the shank of the drill.

In any case, the driving power of the taper is reduced or destroyed, resulting in an abnormal strain being put upon the tang.

A drill of either carbon or high-speed steel that can be filed is not necessarily too soft for service; in fact, if drills were tempered so that a good file would make no impression, they would be entirely too hard for general use. If there is any doubt regarding the temper, try the drills in actual service.

Assuming the drill is properly ground, when the corners of the cutting lips wear away rapidly, it is an indication that the speed is too great. If the cutting edges roughen or break out in minute particles it indicates that the feed is too great.

It is seldom that very small drills can be run at more than a fraction of the speed necessary to obtain the best results, and excessive breakage is inevitable. They should be run true and the cutting edges kept sharp; a fine-grade emery stone is best suited for this latter purpose.

(*Iron Age*).

MORSE TAPER MEASURES FOR TWIST DRILLS,

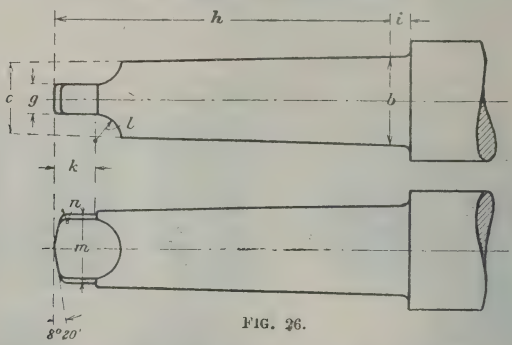


FIG. 26.

Morse Taper No.	b		c		g		h		i		k	l	m	n	Taper.	
	mm.	in.	mm.	in.	mm.	in.	mm.	in.	mm.	in.	mm	mm.	mm.	mm.	per 100 mm.	in 12-In.
1	12,05	·475	9,03	·356	5,1	13/64	60,5	2 3/8	5	3/16	8	5	8,4	1,3	5	·600
2	17,75	·700	14,09	·556	6,3	1/4	73	2 7/8	5	3/16	9,5	6,5	13,4	1,6	5,017	·602
3	23,8	·938	19,26	·759	7,9	5/16	90,5	3 9/16	5	3/16	11	7	18,5	2	5,017	·602
4	31,25	1·231	25,31	·997	11,9	15/64	114,5	4 1/2	6,5	1/4	13	8	24,5	2,5	5,191	·623
5	44,4	1·748	36,74	1·446	15,9	5/8	146	5 3/4	6,5	1/4	16	9,5	35,7	3	5,25	·630
6	63,35	2·494	52,76	2·077	19	3/4	203	8	8	5/16	22	12,5	50,8	3,8	5,216	·626

The 'HUDSON'

Patent Combined Feed Water Heater and Oil Separator

Turns Exhaust Steam into Money

Air Heating Plants

The most Modern and Improved Design of

COOLING TOWERS

ENCLOSED CHIMNEY OR OPEN TYPE.

For description see page 1527.

THE HUDSON ECONOMISER CO.

GLOUCESTER HOUSE, 110 BISHOPSGATE, LONDON, E.C.2.

Telegrams: 'Clyburn, Phone, London.'

Telephone: London Wall 308 and 309.

Works: LUTON, BEDS.

HAND and POWER PUNCHING and SHEARING Machines

For Cutting Plates, Bars and Sections, Notching & Mitreing

'Fortuna' HACKSAW Machines

SUPER-HIGH-SPEED TWIST DRILLS

Containing 18% Tungsten

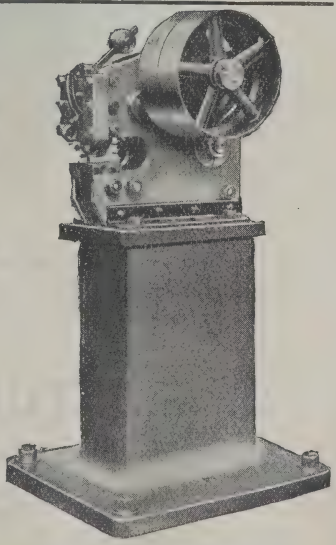
C. A. HUNTON & SONS,

Show Rooms:

71 Southwark St., London, S.E.1


Cables: 'CLYBURN, LONDON.'

Telephone: HOP 4770 & 4771.



Small Power Punching Machine.

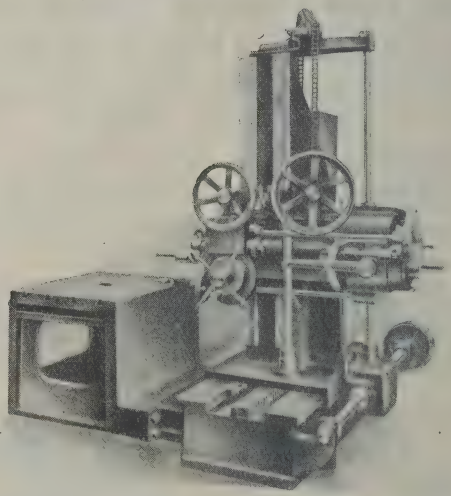Horizontal Drilling & Tapping Machine.



A Light Machine well adapted for general Engineering purposes. Spindle $2\frac{1}{4}$" diameter, traverses 4ft. × 4ft. Complete with Box Table in front as shown, and with a Revolving Table on top where desired.

Speciality:
Horizontal Drilling, Boring and Milling Machines from $2\frac{1}{4}$ in. to 4 in. dia. Spindles.

D. & J. TULLIS, Ltd.,

Machine Tool Makers,

CLYDEBANK.

F. 957

Notes on Drilling.

The power for a given diameter of drill and feed is proportional to the cutting speed.

The horse-power is proportional to the torque, and for a given drill and speed does not increase as fast as the feed.

Since the torque is practically proportional to the diameter of the drill squared, the horse-power, for a given feed and cutting speed, is directly proportional to the diameter of the drill.

The horse-power per cubic inch of metal removed is inversely proportional to the feed and independent of the drill and cutting speed.

The work required to drill a given hole, when one drill is used, is greater than that required to drill the same hole in two operations with drills of different diameters. The greater the difference in the drill diameters, the greater the saving in work; speed and feed remaining the same throughout. This is due to the fact that the mean cutting angle of the single drill is greater than the average angle in use for the two drills and that the stress is proportional to the angle.

With twist drills of the usual proportions, the cutting angle is not sufficiently keen to drag the drill into the work when enlarging a hole in cast iron or steel.

The horse-power when operating on soft cast iron or medium steel varies as $t^{0\cdot7}$ (t = feed per rev.) for a given drill and speed.

The horse-power for a given feed and speed does not increase as fast as the diameter but varies as $d^{1\cdot8}$.

The torque and horse-power when drilling medium steel is about 2·1 times that required to drill soft cast iron with the same drill speed and feed.

The end thrust when operating on cast iron or steel does not increase in proportion to the feed for a given diameter of drill or in proportion to the diameter for a given feed.

While the chisel point scarcely affects the torque it is accountable for about 20 per cent. of the end thrust.

Lubricated trials on steel when compared with the dry tests show a diminution in the torque and horse-power, varying from 28 per cent. with the $\frac{1}{100}$ feed to 8 per cent. with the $\frac{1}{8}$ feed. This may be due to the lubricant washing away the small metal chips which tend to jam between the walls of the hole and the drill, and to the preserved cutting edge. The diminished frictional resistance of the shaving across the lip together with above reduces the end thrust by about 25 per cent. for all feeds.

As the result of a series of experiments on twist drills, recently undertaken at the engineering experiment station of the Illinois University, the following lubricants are recommended:—For tool steel—lard oil, machine oil, turpentine, soda-water, kerosene; for soft steel—lard oil, machine oil, soda-water; for cast iron—dry or compressed air; for brass—dry or paraffin oil; for aluminium—kerosene, soda-water, and aqualine and soda-water.

The drill most commonly adopted in practice has an included angle, at the point, of 120 degrees. If this angle is increased the torque diminishes but the end thrust increases, while if this angle is decreased the reverse is the result. So far as economy in power is concerned the torque is the factor to consider, as the feeding horse-power is only about 1 per cent. of the whole in small drills and very much less for the larger sizes. From this point of view the drill with the larger point angle is to be preferred. The accompanying increased end thrust, however, strains the machine parts in proportion. When the point of the drill breaks through the metal at the bottom of the hole, a considerable portion of the end load is removed. The strain due to that load is released, thereby causing the drill to advance more than its rated feed and possibly break the drill. The drill with the greater included angle will be most likely to give trouble in this direction, both on account of the increased strain and torque and conversely.

By decreasing the spiral of the drill a keener cutting angle with a decreased end thrust and torque can be obtained without altering the point angle above the accepted standard, 120 degrees. This, however, would in turn affect the durability of the drill.

With a small included point angle there is little metal to support the cutting edge at the chisel point, and trouble due to blunting of this part is to be expected.

The endurance of a drill may be increased by from 300 per cent. to 1,000 per cent. by rounding the sharp corners at the periphery.

In estimating the time required to drill a hole of given depth, the length of the drill point must be taken into account. The length of the point for different included point angles is:

$$90^\circ = 0\cdot5d; \quad 120^\circ = 0\cdot29d; \quad 150^\circ = 0\cdot134d.$$

(*See also* '*Smith & Poliakoff: Proc. Inst. of Mech. Engrs.* 1909.')

True drilling is usually dependent upon good centering, and it may be advisable to draw attention to the well-known but often ignored rule, namely, that the centering tool must have a lesser cutting angle than the drill point, otherwise the drill will strike on the point, wobble, start out of centre, and sometimes break.




FIG. 27.

Good centering. Bad centering.

Fig. 27 shows good centering at *A* and bad at *B*. As a general rule the centering drill should have an included angle of 100 degrees against the standard angle for the drill point of 119 degrees.

(*Machinery.*)

SMALL DRILL PROTECTOR.

The function of this protector (*Messrs. Brown Brothers, Ltd., Great Eastern Street, E.C.* 2) is to stiffen the shank of the drill, leaving exposed a length of the drill sufficient only for the depth

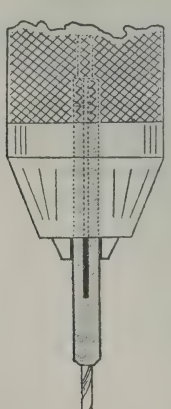


FIG. 28.

of the hole to be drilled. The protector, fig. 28, consists of a length of hard brass, drilled from one end to the other, and with about three-quarters of its length slotted on one side, the internal diameter being equal to the diameter of the drill to which it is to be applied. To use the protector, the drill is inserted therein with the cutting point projecting from the chamfered end, the exposed length being equal to the required depth of the hole to be drilled. The split end of the protector is inserted into the drill chuck so that it is secured for about half an inch of its length, the chuck then being tightened up in the usual manner. If it is required to drill a hole of greater depth than

usual all that is necessary is to release the chuck and slide the protector farther up the drill for the extra length required and then tighten up the chuck again.

The protectors are supplied suitable for short or long length drills in sizes varying from $\frac{1}{32}$ up to $\frac{1}{2}$ in., from 20 to 66 wire gauge sizes and from 1 to 2 mm.

DRILLING MACHINES.

Patent Ball-Bearing Drilling Machine.

In these machines (fig. 29) a high efficiency results from the fact that all running bearings (including the spindle bearings) are annular ball bearings, which never require adjustment. The fact that the spindles themselves have no sleeve or rubbing bearing whatever enables even the

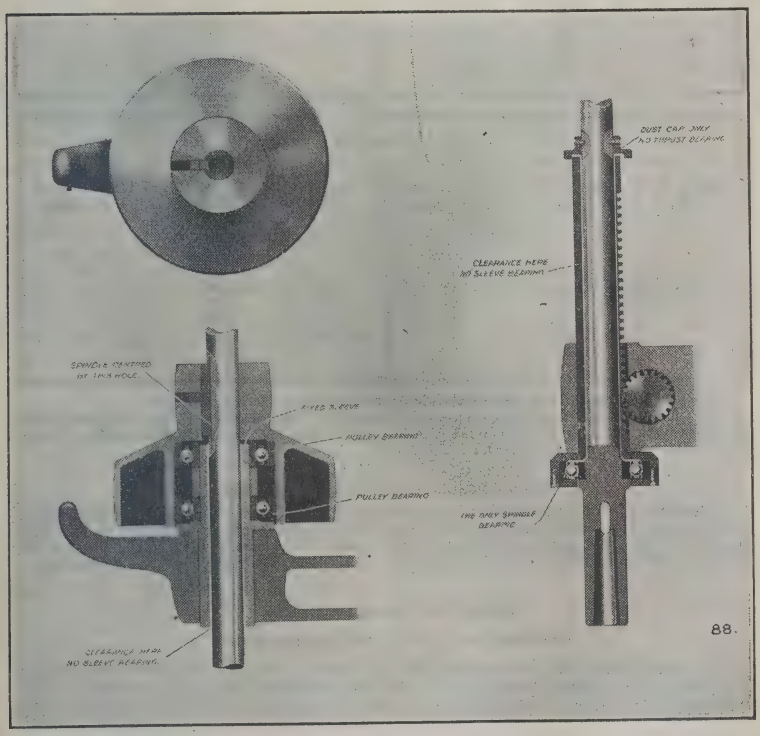


FIG. 29.

smallest sizes of high-speed drills to be run at their proper speeds. At the same time the saving in friction all over the machine permits the feed to be quicker, and enables larger holes to be drilled than has been hitherto possible with ordinary sensitive machines.

The adoption of annular ball bearings enables the latter to be put together in dust-proof housings with a supply of grease which lasts indefinitely. Oiling is neither necessary nor desirable.

As the bearings are interchangeable they can be renewed without trouble; in practice, however, it is a most rare event for a bearing to require renewal.

About four to eight times as many holes per hour can be drilled as on an ordinary sensitive machine. The following particulars show results, using high-speed twist drills:

CAST IRON.

Diam. of Drill.	Speed of Drill.	Time to Drill 1 in. deep.	Diam. of Drill.	Speed of Drill.	Time to Drill 1 in. deep.
		Seconds.			Seconds
¼	2,050	1½	⅝	600	2½
5/16	1,370	1½	11/16	600	2½
⅜	900	2	¾	600	3
7/16	900	2	13/16	600	3
½	900	2	⅞	600	4
9/16	600	2½			

MILD STEEL.

Diam. of Drill.	Speed of Drill.	Time to Drill 1 in. deep.	Diam. of Drill.	Speed of Drill.	Time to Drill 1 in. deep.
		Seconds.			Seconds.
¼	2,050	2⅜	⅝	900	5½
5/16	2,050	2⅔	11/16	900	5½
⅜	900	3⅔	¾	900	6
7/16	900	3⅜	13/16	900	7
½	900	4	⅞	900	7½
9/16	900	5			

The mild steel used in the above tests was 26 tons per sq. in. tensile strength.

The machines are made with one, two, three, and four spindles. The multiple-spindle machines have the spindles considerably farther apart than is usual on small machines, so as to give ample room for operating them.

THRUST BEARINGS OF DRILLING MACHINES.

Vulcanised fibre is being applied to the thrust bearings of light, sensitive drilling machines. Ball bearings cause considerable trouble if one of the balls fractures or chips, and it has been found that a fibre disc answers the purpose admirably. The permeability of the fibre to oil renders it self-lubricating, and its life under these conditions is remarkable. (*Machinery.*)

Portable Electric Drills.

THE WESTOOL MARK 1, 1920 PATTERN DRILL.

This modern heavy duty side spindle drill, figs. 30 and 31 (*The Westminster Tool and Electric Co., Westool Works, Putney, London, S.W.*15), has been designed so as to have a minimum length combined with great mechanical strength, and maximum length of feed. The oval shape of the body renders it specially suitable for corner drilling, and the gear case, top bonnet, and drill body being made from special alloy steel, fitted with ball bearings throughout, enables it to withstand the hard usage and continuous heavy work met with in shipyards, boiler works, railway shops and general engineering works.

All electrical conditions have been carefully considered—the armature and commutator being ventilated by a shrouded fan fitted to the lower end of the windings which produces a strong draught not only round the windings but through the ventilating holes provided in the core stampings.

The reversible switch is of exceptionally strong design with double pole quick make and break action complying with the Home Office requirements.

The gears are so arranged that by changing the two pinions, without alteration of wheel centre,

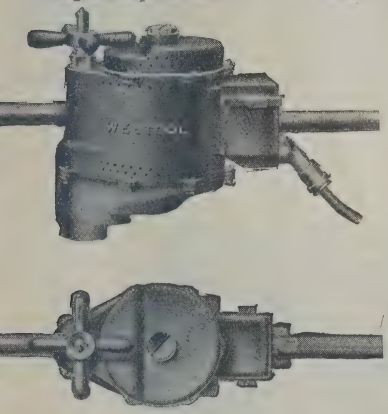


FIG. 30.

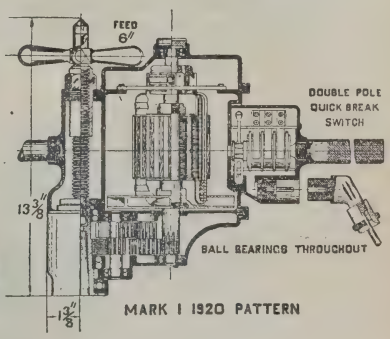


FIG. 31.

two-speed ratios can be obtained—one the standard for ordinary drilling and reamering work and the other giving a slower speed with the full power for tube expanding or tapping.

'WESTOOL' ELECTRIC PORTABLE DRILLS.

Size number	1	2	3
Morse taper	No. 1	No. 2	No. 3
Range of drill bits	$\frac{1}{8}$ in.—$\frac{9}{16}$ in.	$\frac{10}{32}$ in.—$\frac{29}{32}$ in.	$\frac{15}{16}$ in.—$1\frac{1}{4}$ in.
Drilling capacity in mild steel	$\frac{9}{16}$ in.	$\frac{7}{8}$ in.	$1\frac{1}{4}$ in.
Reaming or tapping capacity in mild steel	$\frac{3}{4}$ in.	$\frac{15}{16}$ in. locomotive work	$1\frac{1}{4}$ in. marine boiler work
Tube expanding capacity	Copper tubes	$3\frac{1}{2}$ in. locomotive boiler tubes	4 in. marine boiler tubes
Standard drilling speed, r.p.m.	330	245	160
Minimum overall length of drill	11 in.	12 in.	$13\frac{3}{4}$ in.
Length of feed	5 in.	$5\frac{1}{2}$ in.	6 in.
Distance from drill centre to side of case	$1\frac{9}{32}$ in.	$1\frac{5}{16}$ in.	$1\frac{5}{8}$ in.
Approximate weight, lbs.	24	34	58

These tools have been designed to give high drilling speeds when working in modern high speed steels, and have consequently great power for their size. They will drill holes $1\frac{5}{8}$ in. deep in mild steel in one minute at their rated diameter holes. The tools can be used for reaming, tapping, and tube expanding. In the last process the strain on the tool is very considerable but it is successfully met.

THE VAN DORN DRILL.

These tools, fig. 32, are made by the Van Dorn & Dutton Co., Cleveland, Ohio. They are designed so as to be easy to handle, and are light and compact. The machines designed to take drills up to $\frac{5}{8}$-in. diameter may be operated by either direct or alternating current. Another

advantage of the design lies in the fact that the drill spindle is offset, so that holes may be drilled close to a flange or similar projection.

The Gear Case is a light aluminium casting reinforced with ribs to resist distortion. This case is not only an efficient housing for the gears, but forms a grease chamber from which the gears and main spindle bearing receive ample lubrication. Each end of armature shaft runs in a ball journal bearing fitted in a steel housing, and the thrust is also taken on a ball thrust washer. The gear spindles run in high-grade phosphor bearings.

The Gears, accurately generated, are made of special heat-treated steel, hardened and ground.

The Motor is series wound. The adoption of this type of winding renders the speed automatic,

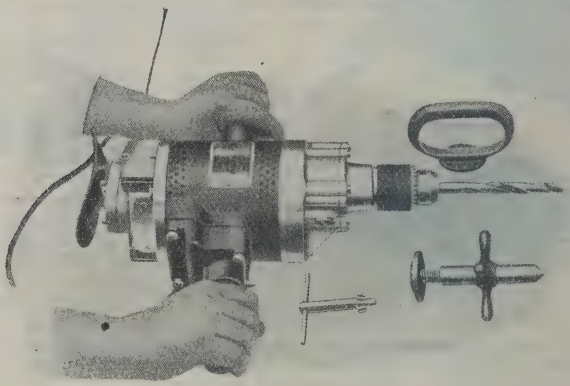


FIG. 32.

the pressure used to force the drill into the work governing the speed of the drill. The armature and field coils are form wound and thoroughly insulated.

The Armature is of the slotted drum type built up of soft steel laminations, these being made from special steel adapted to the purpose and uniformly insulated. On the DC.2 and larger machines the armature is built on a hollow shaft to preserve lightness.

Ventilation.—One of the distinctive features of the Van Dorn drills is the system adopted for thoroughly cooling the motor. It consists of a large aluminium fan of special design, screwed on the armature shaft. It is so constructed and placed in such a position as to draw out the hot air at one end of the machine, to be replaced by cool from the other. A constant draught is therefore maintained, ensuring a low temperature.

The Switch is of the quick-break type with a capacity of 5 per cent. above the duty required. By the use of release attachments the switch has the same rapidity in breaking as in the making contact. The larger sizes are provided with a quick-acting self-releasing attachment.

A Safety Fuse, consisting of a small piece of fuse wire held by screwed terminals, is fitted to machines up to and including $\frac{1}{2}$-in. capacity, and may be quickly replaced if necessary; this prevents the possibility of damage to the machine from overloading or from a short circuit which is generally caused by the operator omitting to clean the commutator.

MINIMUM DRILLING PERFORMANCE OF UNIVERSAL PORTABLE ELECTRIC DRILLS.

Carbon-steel drills in 0·20 per cent. to 0·30 per cent. carbon steel.

Capacity of Tool and Size Drill. In.	Speed.	Rate of Feed. In. per Min.	H.P. at 1 H.P. per Cub. In. Metal Removed per Min.*
$\frac{1}{4}$	800	$1\frac{1}{2}$	0·08
$\frac{5}{16}$	650	$1\frac{1}{8}$	0·10
$\frac{3}{8}$	525	$1\frac{1}{4}$	0·13
$\frac{1}{2}$	375	1	0·19
$\frac{3}{4}$	300	$\frac{1}{4}$	0·23

* Extensive tests have shown this to be a reliable basis for determining power requirements.

Drilling Appliances.

The 'Selson' Gravity Drilling Machine Vice.

In this arrangement, fig. 33, the jaws are opened by sliding them up the angle guides, the maximum opening of the upper jaws being 8 ins., the lower 2½ ins. When the work is set, gravity, supplemented by the pressure of the drill, forces the jaws downwards in the guides, ensuring an absolutely firm hold of the work and making the vice practically an automatic tool.

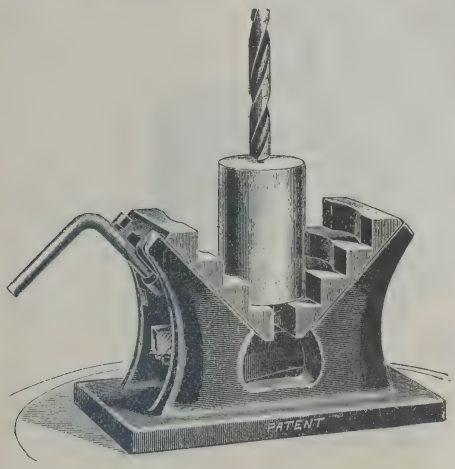


Fig. 33

A slight turn of the handle prevents the work from becoming slack when the pressure on the drill is decreased at the bottom of the hole.

The vice can be used loose on the machine table, except in extreme cases. Slots are, however, provided for bolting it down.

It will securely hold all round work from ¼ in. to 8 ins. diameter. Work is ensured against turning even with slight pressure on the drill. Special shapes are held as firmly as regular ones.

There are but five main parts in the vice, which adds to its simplicity.

Size of base, 12 ins. × 6½ ins. Approximate weight, 45 lbs.

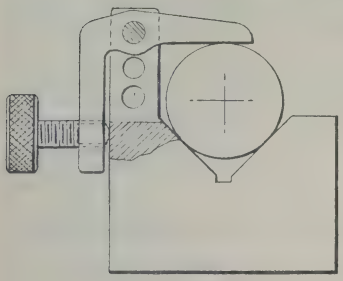


Fig. 34.

V-Block with Adjustable Clamp.

A compact method of fitting a clamp to grip work in a V-block for marking or for drilling purposes, is to make the block with uprights composed of two plates attached to the ends of the block (fig. 34). Three pin-holes are drilled through the uprights, into which an ordinary headed pin is slid to sustain the cranked clamp seen. This is tightened down upon the work by setting up the screw.

(*'Machinery.'*)

The 'Brooke' Quick-Change Universal Drill Jig.

This arrangement (fig. 35) is for the purpose of drilling pin holes in bolts, studs, pins, etc., for split pins, etc. It consists of a baseplate, on which are mounted two pillars carrying, at the top, a steel cross beam, which serves as a clamp for holding the work and also as a guide to the drill by means of suitable bushes. The jig can either be used on a table with a plain surface or bolted down, as required. For plain service tables, a locating pin is supplied to fit the baseplate and hole in the centre of drilling machine table, keeping the guide bush in the cross beam always in line with the drill spindle.

The work is held in a V-block, provided with a groove on each side, fitting the square portions

of the pillars, which thus act as guides, enabling the block to be rapidly adjusted to the required position indicated by pointer and rule, and afterwards locked in place by a small lever instead of the hexagon nut shown in the fig. This block admits bolts from 1½ in. to ¾ in. diameter,

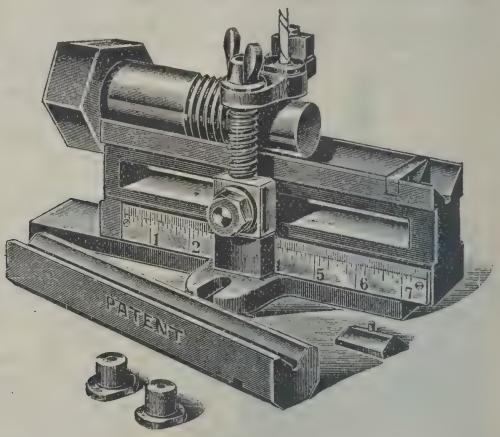


FIG. 35.

and for smaller work an additional V-block is supplied, which fits into the larger one, and can be used for objects down to ¼ in. diameter. For studs and other parallel work, steps are provided on the right of both V-blocks, against which the end of the stud rests.

SCREWING MACHINES.

Figs. 36 and 37 show single- and double-spindle high-speed screwing machines, constructed by Charles Winn & Co., Birmingham. The machines are made in several sizes and are specially designed to give rapid production on repetition work, and are therefore important tools in shops, manufacturing bolts, etc., in large quantities.

The die heads (Winn's Patent) are entirely self-operating, enabling the operator to give his whole attention to the handling of the work; they open automatically when the required length is screwed, and close again ready for the next piece on the return of the saddle—thus in the case of the double-spindle machine, the time taken to screw one bolt is utilised by the operator to feed the other head, so that screwing and feeding go on simultaneously.

The dies, each comprising a set of four chasers, are set for the various sizes of screwings by adjusting the cam ring to markings on the outside of the die head, and as this adjustment is entirely independent of the automatic opening and closing of the dies, any size screwing can be exactly repeated any number of times.

The die spindles are hollow and run in long-capped bearings, which are provided with adjustable thrust collars to take up play endways. The gears are machine cut from the solid blanks, and are protected by a strong cast-iron guard.

The vices are fitted with duplex grips which hold the work truly in line without depending on support from the dies, while, as the jaws come close up to the head, the shortest work can be screwed.

A rotary-geared pump, fitted at the back of the machine, supplies the dies with a continuous stream of lubricant, the swarf and oil being collected in a large tray fitted with a reservoir and strainer.

Fig. 38 shows a larger machine of similar type. It will screw tubes up to 4½-in. outside diameter, and bolts up to 3-in. Whitworth at one cut, and is designed to meet the requirements of dock and shipbuilding yards or general shops in which the work is of a varied nature. The die head is shown fitted with Winn's patent automatic gear, but it is frequently supplied fitted with instantaneous hand-lever releasing motion—the type depending on the character of work to be screwed.

The machine is strongly proportioned, to give rigidity under heavy cutting stresses, while all bearing surfaces are large and are provided with means of adjustment for wear. The drive is by



MINERVA

Bright-Part Coating and Rust Preventive

For coating machinery bright parts to prevent rust during transit and erection.

This article is intended for brushing on the bright parts of machinery, prior to leaving the foundry or finishing shop, to prevent rusting during railing, shipment, storing and erection. It dries almost immediately with a firm, elastic, damp resisting surface that will stand temperatures met with during shipment and will not come off through ordinary handling.

To remove, simply wipe off with a cloth damped in Paraffin, Benzine, Turpentine or Petrol.

Samples supplied gratis and post free upon application to

PINCHIN, JOHNSON & Co., Ltd.

(Associated with WILKINSON, HEYWOOD & CLARK, LTD.,
Varnish, Color, Paint, and Enamel Manufacturers,
General Buildings, Aldwych, London, W.C. 2

Also please see pages 414, 415, 965, 1966, 1967, 2353, and 2354 for particulars of other Special Paints.



FINISH BETTER AT LESS COST
BY USING

MINERVA

Machinery Finishes

High-grade and durable finishes do not necessarily mean more expense, as machine-makers will discover by giving their consideration to these materials. THE MINERVA FINISHES embrace ONE, TWO, and THREE coat work *and all the results give lasting satisfaction.*
(For further information see page 2354.)

2 & 3 Coat Work a Speciality

MINERVA IRONFILLER 'INDURINE'
MINERVA INTERMEDIATE COAT
MINERVA FINISHING COAT

4 SHADES, IN FLAT, SEMI-GLOSS AND FULL GLOSS

Full particulars from

PINCHIN, JOHNSON & Co., Ltd.

(Associated with WILKINSON, HEYWOOD & CLARK, LTD.),
Varnish, Color, Paint, and Enamel Manufacturers,
General Buildings, Aldwych, London, W.C. 2

Also please see pages 414, 415, 964, 1966, 1967, 2353, and 2354 for particulars of other Special Paints.

CHARLES WINN & CO.'S SCREWING MACHINES.

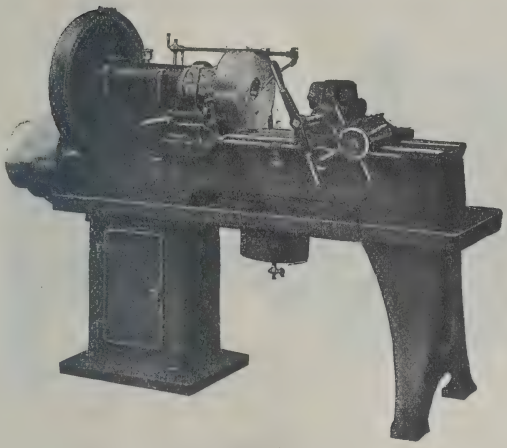


FIG. 36.

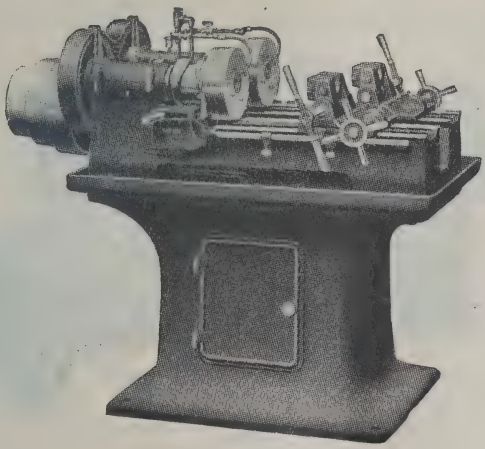


FIG. 37.

CHARLES WINN & CO.'S SCREWING MACHINES.

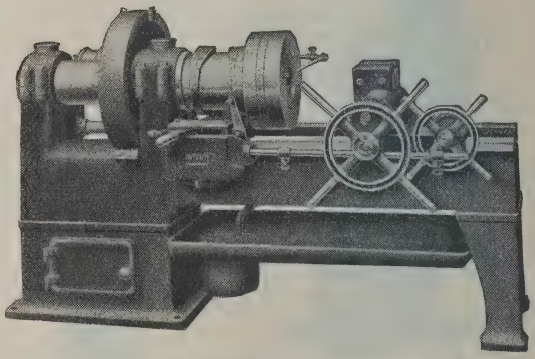


FIG. 38.

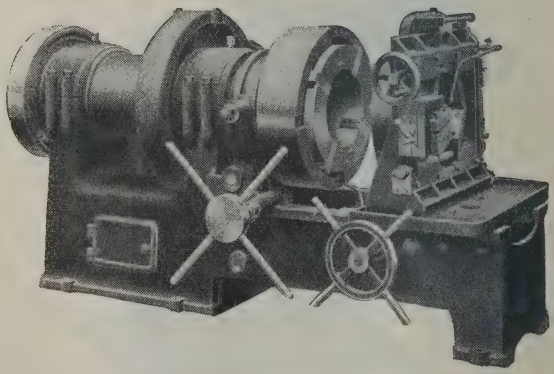


FIG. 39.

a large four-speed cone pulley at the rear through a double train of machine-cut spur gears which are completely protected by a cast-iron guard. The die spindle is hollow right through, and is fitted with adjustable locking rings to take up endway play.

The vice is of massive construction. The jaws, which slide upon square gibs having steel adjustment strips, are fitted with duplex grips which give a wide bearing on the work, holding the same truly in line, without depending on support from the dies; moreover, bends and irregular pieces requiring a narrow grip are provided for by merely slipping out the back pair of grips. In machines of this size, gearing is introduced between the handwheel and vice screw to give increased gripping power. Lubricant is forced upon the dies by a rotary-geared pump, a large tray with reservoir and strainer being fitted underneath the machine to collect the oil and swarf.

Fig. 39 shows a type of machine specially designed for tube works use. It is made in eight sizes, ranging from machines taking from 1-in. tube as a maximum to very heavy machines capable of dealing with tubes up to 13 ins. diameter. The illustration is of the largest size of machine. It possesses several features which make it far more rapid in operation than the machines in general use. As will be seen by reference to the illustration, the work in this case is revolved, the dies being mounted upon the saddle.

The tube is gripped or released while the machine is in motion by a quick-grip chuck (Winn's patent), which operates by the large capstan handwheel in front of the machine. An important feature of this chuck is that it can be very quickly set to take the various size tubes, the jaws being simultaneously adjusted to a larger or smaller size, by setting the cam ring to markings on the outside of the chuck.

The die head is of the adjustable type, fitted with a positive opening and closing action operated by an improved geared segment lever.

With this device the leverage is considerably increased, enabling the die head to be opened and closed with ease; and moreover, in closing, the head automatically locks itself to the same size each time. This feature is a great improvement upon the method of setting the cam to a mark and locking with a nut, which is not only very slow but depends upon the skill of the operator to set the dies to the same size each time.

A pair of self-centring Vee steadies with hardened steel faces are situated at the back of the die head, for the purpose of steadying the tube whilst being cut off.

In the smaller size machines a combined cutting-off and nipple-making slide is carried behind the steadies, but in machines dealing with tubes larger than 6 ins. diameter a plain cut-off rest is substituted for the nipple-making slide.

Provision is made for the easy escape of chips from the working parts of the machine, and a copious supply of lubricant is delivered to the dies and cutting-off tools by a geared rotary pump.

Lubrication.

'SUPER-SCREWOL.'

This is a soluble oil (*Sterns, Ltd.*), specially treated to render it antiseptic so as to conform to the requirements of Government inspectors. It is suitable for screw cutting, drilling, turning and boring, for turret and other lathes, hydraulic machinery, etc. It does not rust, clog or separate. It has no smell, scum, or evaporation, and is free from spirit or ammonia.

MAGNETIC CHUCKS.

The Magnetic Chuck is now largely used for holding machine parts of iron and steel for grinding, turning, and planing operations. Many pieces, such as milling cutters, thin saws, air-compressor valve discs, chain links, etc., can be more effectively held by this method than by any other. Not only is there a great saving in the time ordinarily required for setting up, but the likelihood of distorting the job due to unequal straining of the holding down bolts is eliminated.

It must be understood that the holding power of a magnetic chuck depends as much on the shape and section of the piece to be held as on the magnetic chuck itself. If the piece is small in section the hold will be very light, no matter what the section or intensity of the chuck magnets may be. The hold is entirely dependent upon the number of magnetic lines that can be passed through the section of the piece, and not on the total magnetism that the chuck can produce. Some makers claim a holding power of 100 lbs. per sq. in., this having been attained on a perfectly surfaced cube of Swedish iron applied between the chuck poles. This affords no useful measure of the holding value of a magnetic chuck, as theoretically a small magnet either of steel, wrought iron or even cast iron, if perfect at the joints, would give (on such a cube)

100 lbs. per in. On the other hand, if two such cubes were placed together the pull would not be proportionately increased, as the magnet being small the section of the first cube would absorb all the magnetism it could supply. Thus a chuck, say 30 ins. by 8 ins., which would pull 100 lbs. on any sq. in. of its surface could not, under any circumstances, pull 30 ins. by 8 ins. by 100 lbs., or nearly 11 tons, on its entire surface. The pitch of the poles should be arranged to suit the class of work to be held; if the pieces are of heavy section, the magnet must be of heavy section to get the best results.

Fine Grinding.—For fine grinding it is well to reduce the magnetic pull of a chuck face, either by inserting resistances in the coil circuit, or by the interposition of non-magnetic material



FIG. 40.

between the work and the chuck face. The lighter the pull the more accurate the resultant work. Specially constructed chucks of a very light but even pull are necessary for thin saws, light piston rings, etc. Grinding with water, soda and other liquids makes it absolutely essential that the magnetic chucking apparatus must be impervious to water. In the Humphreys chucks



FIG. 41.



FIG. 42.



FIG. 43.



FIG. 44.



FIG. 45.

one of the leading features is the insulating method employed. The wire itself, before winding, is insulated with a special liquid having very high insulating properties and capable of withstanding weak acids, alkalies, saline solutions, or alcohol. After winding and coating with a special fabric for mechanical protection, the coils are heated to 200°F., and placed in a heated

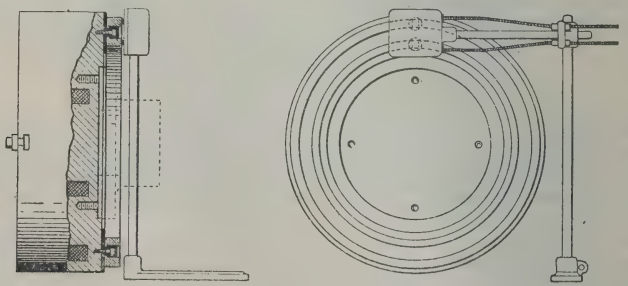


FIG. 46.

tank from which all air and moisture is then extracted. After being subjected to this high vacuum for some time, the tank, without breaking the seal, is filled with a liquid asphaltum compound at high pressure, rendering the coils absolutely proof against moisture, etc. The coils

are then placed in position over the cores of the magnets, and the whole chuck body filled and made solid with the asphaltum compound.

Fig. 40 shows the face of a Humphreys (Pat.) circular chuck suitable for piston rings, saws, milling cutters, and general work. These chucks are constructed in sizes ranging from 6½ ins. diameter to 72 ins. diameter. Other designs of chuck faces for special work are shown in figs. 41, 42, 43, 44 and 45; the finer pole designs being used for very small pieces, and the simpler 8-pole design for larger section pieces.

The method of current supply is shown in fig. 46; this is used for dry grinding only. The chuck is fitted to a lathe or grinding machine spindle exactly as an ordinary mechanical chuck.

The brass slip-ring running with the chuck itself collects the current from a contact box, which is held by a tubular support from the lathe or machine bed. The contact box contains a pair of carbon brushes actuated by springs; these brushes are totally enclosed. The method is simple and effective, especially in cases where the chuck is only used occasionally and the apparatus has to be removed and set up each time. Fig. 47 shows an arrangement adopted by the above makers for both horizontal and vertical machine spindles. A hollow spindle machine

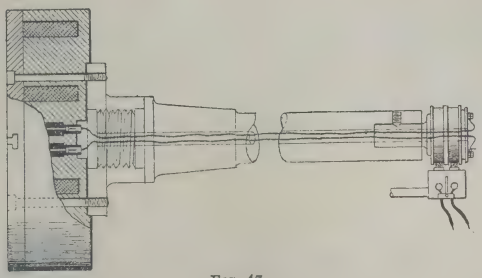


FIG. 47.

is necessary in this case, and the advantage is that all water suds or soda mixture is kept entirely away from the running contacts. The current is carried from the contact rings through the spindle, and is conveyed to the chuck windings by means of a pair of plugs fitting directly into the back of the chuck.

Magnetic chucks are not adaptable to alternating current, and must be used on the voltage for which they are designed. If a higher voltage be applied there is a likelihood of burning out the coils, and with a lower voltage the full power of the chuck is not developed. Fig. 48 shows

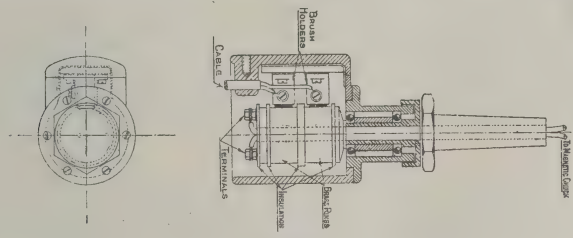


FIG. 48.

the contact arrangement when used with a vertical spindle; it is totally enclosed, the shank is tapered and fitted with a nut to facilitate removal. An oil throw or guard is provided to keep off the bearing oil.

Flat Chucks.—In fig. 49 is shown the details of the 'Humphreys' standard flat chucks, suitable for grinding, planing, and milling machines. These are constructed in sizes up to 72 ins.

by 10 ins. : they are fitted complete with a rise and fall parallel strip and an adjustable end-stop. Movable fingers or clamps may be set to support work set on edge ; these fingers are secured by set screws in a T-slotted bar, which may be fixed conveniently at any height. The end-stop is necessary to take the thrust of a milling or planing cut ; in most grinding operations it is not necessary to use it.

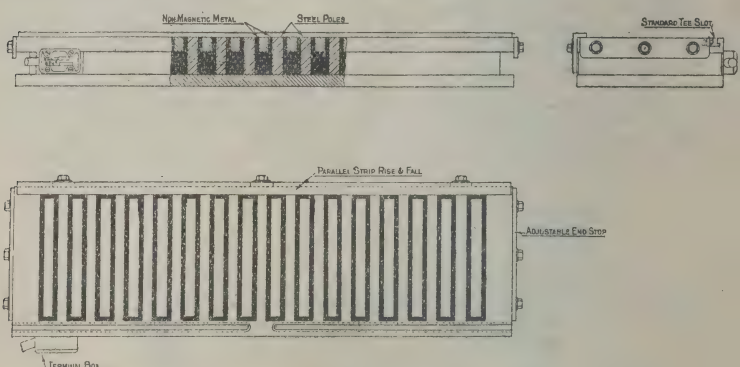


FIG. 49.

Fig. 50 shows a variation of this form of chuck for machining taper pieces. This chuck is carried on a sub-base hinged at one end, and has a fine knurled screw adjustment at the other. The index graduation is in inches per foot. When the setting is at zero the chuck can be used for ordinary flat work.

Switches.—One of the most important pieces of apparatus in connection with the magnetic chucks are the switches used for operating. When the current from a magnetic chuck is cut off,

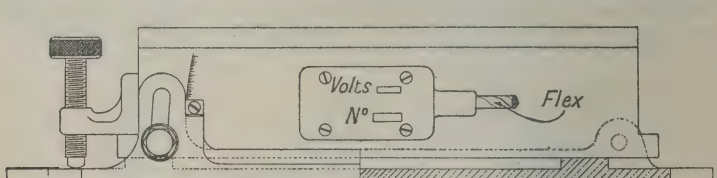


FIG. 50.

a back current is induced in the chuck coils. This induced current is of a very high voltage, and if the switch gear is not perfectly designed to deal with it, the insulation of the chuck, however well designed and carried out, will inevitably break down. The switch must be double-pole, that is, it must operate on both the positive and negative supply wires at the same time, also it must be capable of admitting current to the chuck in either direction, and in order to deal with the induced back current when switching the chuck off, it must be provided with a non-inductive resistance which must automatically be put in circuit with the chuck prior to breaking the circuit. Fig. 51 shows the 'Humphreys' No. 7 Demagnetising Switch. To operate it the switch handle must be moved past the 'Off' position and held momentarily on the 'Reverse,' going back quickly to the 'Off' position ; this is for the purpose of demagnetising the chuck sufficiently to allow of the work to be easily removed. The view on the left of the figure shows

the arrangement of contacts. For very large chucks a special oil-break switch is furnished; the method of operation is similar to that of the No. 7 switch, but the contacts are immersed in oil and the non-inductive resistances are carried in a separate iron case forming the base of the switch.


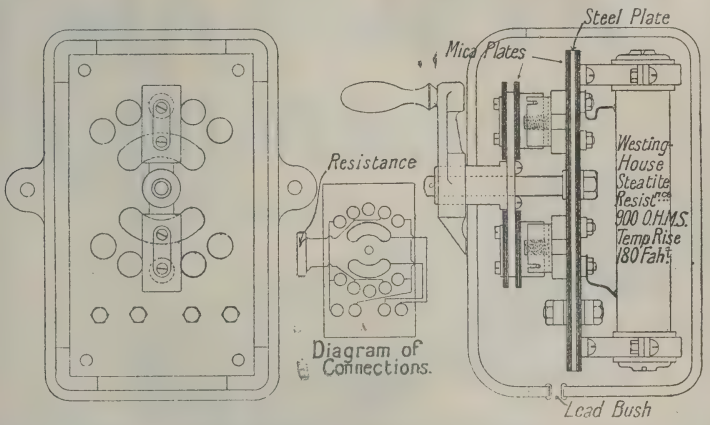


FIG. 51.—No. 7 Demagnetising Switch, Slow Break, Capacity 2 Amps.

The sectional view on the right-hand side of the figure shows the non-inductive resistance. The main plate is mica insulated; in several sizes of switches this main plate consists of a slab of slate.

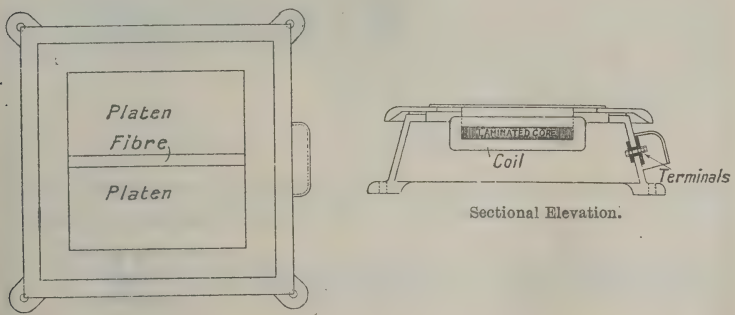The arrangement of the connections, etc., is shown in the central view of fig. 51.



Plan.

Sectional Elevation.

FIG. 52.

Demagnetisers.—Consequent on the use of magnetic chucks is the permanent magnetic condition imparted to the finished work, which with milling cutters and similar articles would prove a decided objection. A magnetised milling cutter would collect to itself the cuttings as produced, and though this might not impair its efficiency as a cutter, it would be a source of annoyance to the operator. Fig. 52 shows a sectional elevation and plan of a demagnetiser by

J. H. Humphreys & Sons. There are two working platens, and all that is necessary is to pass the work over these platens, when it will be instantly demagnetised. As shown in the section drawing, immediately under the working platens is a powerful laminated magnet, which takes from the transformer a low period, low voltage, alternating current. The transformer carries

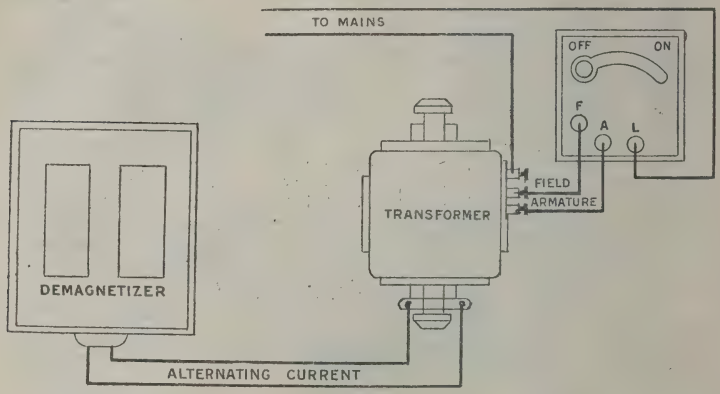


FIG. 53.

a double winding, one connected to a pair of slip-rings at one end of the shaft, the other being an ordinary motor winding which is connected to the mains through a starting rheostat exactly as an ordinary electric motor. This arrangement is very convenient, no fixing is required, and the demagnetiser can be placed in any position independent of the transformer.

The whole apparatus, fig. 53, includes demagnetiser, rotary transformer, and starting rheostat.

Electro-Lifting Magnets.

An electro-magnet attachment to overhead yard cranes facilitates the picking up of scrap and pig iron and is also useful for charging boxes with these in steel works. The attachment when provided with a skull cracker is used for breaking up scrap and pig. The ease with which the cracker can be picked up and dropped without the help of other labour than the crane man himself, also the speed of hoisting and freedom from accidents are factors which have contributed to the development of this gear.

A 5-ton crane to lift at 20 feet per minute takes about a 10 h.p. motor.


(See also page 799.)

POWER REQUIRED FOR MACHINE TOOLS.

LATHES.

Standard Lathes suitable for use with High Speed Steel.				Surfacing and Boring Lathes (High Speed).			
Height of Centres.	H.P. required.	Height of Centres.	H.P. required.	Diam. of Faceplate.	H.P.	Diam. of Faceplate.	H.P.
Ins.		Ins.		Ft.		Ft.	
6	5	24	25	2	7	5	20
9	7½	30	30	2½	9	6	25
12	11	36	35	3	12	7	30
15	14	48	45	3½	15	8	30
18	18	60	50	4	17½	10	35
21	22						

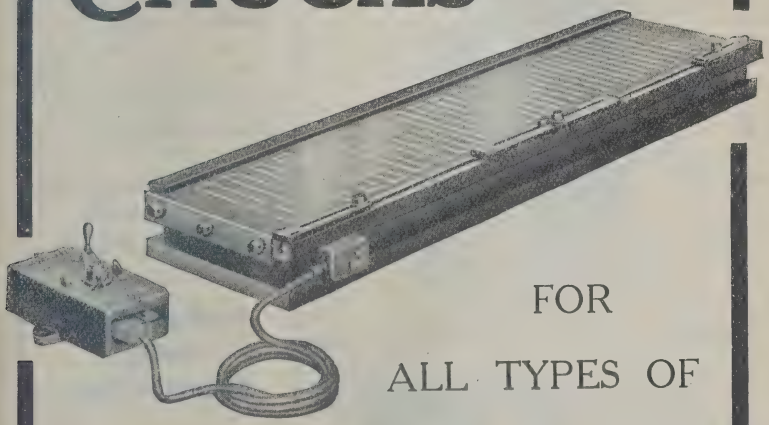MAGNETIC CHUCKS



FOR

ALL TYPES OF

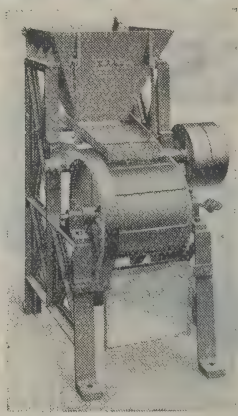
GRINDING Machines

J. H. HUMPHREYS & SONS


TELEPHONE : 1651.
TELEGRAMS : 'HUMPHREYS.'

OLDHAM.

RAPID (PATENT)
ELECTRO-MAGNETIC SEPARATORS.



Standard Type

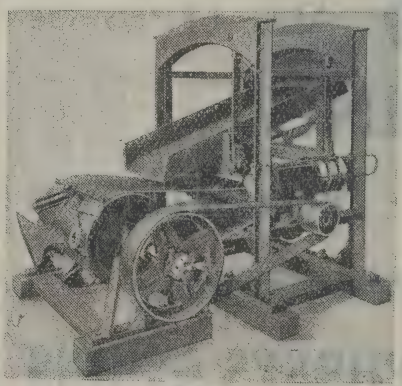

Type D.

For removal of Iron from Brass and other Metal Turnings **without waste.**

For recovery of Iron from Moulders' Sand, Furnace Slag, etc.

For extraction of Iron from all kinds of Material and Liquids.

Separators for feebly magnetic Ores.

Electro-Magnetic Chucks for Grinding Purposes.

CONTRACTORS TO THE WAR OFFICE.

Teleg.: 'Borings, B'ham.'
'Phone: Midland 837.
Codes: Liebers & A B C.

THE RAPID MAGNETTING MACHINE CO. LTD.,
46 Lombard St., BIRMINGHAM.

LATHES.

Wheel Lathes for Locomotive Wheels (High Speed).

Diam. of Faceplate.	H.P. required for Two Tools.	Diam. of Faceplate	H.P. required for Two Tools.
Ft. Ins.		Ft. Ins.	
3 0	10	5 0	18
3 6	12	6 0	21
4 0	14	7 0	23
4 6	16	8 0	25

The largest diameter swung may be taken as 4 ins. above the faceplate diameter. For lathes fitted with duplex rests and 4 tools in operation, increase the power given above by 50 per cent., while with 6 tools in operation double the power given is required.

Tyre Boring Lathes suitable for use with High Speed Steel.

Diam. of Faceplate.	H.P.	Diam. of Faceplate.	H.P.
Ft. Ins.		Ft. Ins.	
3 6	20	6 0	35
4 0	25	7 0	35
5 0	30		

Axle Lathes (High Speed).

Height of Centres.	H.P.	Height of Centres.	H.P.
Ins.		Ins.	
$8\frac{1}{2}$	15	12	25
10	20	15	30

The machine is provided with a compound rest on each side of the central driving head.

DRILLING AND BORING, SCREWING AND TAPPING MACHINES.

Drilling and Boring Machines.

Class of Machine.	Diam. of Spindle.	H.P. required.
	Ins.	
Sensitive	$\frac{11}{16}$	1
,,	$\frac{13}{16}$	$1\frac{1}{2}$
,,	1	2
Vertical	$1\frac{1}{2}$	3
,,	2	4
Vertical and Radial	$2\frac{1}{4}$	5
Radial and Horizontal	$2\frac{3}{4}$	6
,, ,, ,,	3	8
,, ,, ,,	$3\frac{1}{2}$	9
,, ,, ,,	$3\frac{3}{4}$	10

Bolt Screwing and Nut Tapping Machines.

Size of Machine.	H.P. required.
Ins.	
$\frac{1}{2}$ to $1\frac{1}{2}$	$1\frac{1}{2}$
$\frac{1}{2}$ to 2	$2\frac{1}{2}$
$\frac{1}{2}$ to 3	4

Double-headed Machine to Tap and Screw from

Ins.	
$\frac{1}{4}$ to 2	5

SHAPING AND SLOTTING MACHINES, BORING MILLS.

Shaping Machines.

Stroke.	H.P. required per head.
Ins.	
6	1
8	$1\frac{1}{2}$
10	$2\frac{1}{2}$
12	$3\frac{1}{2}$
15	5
18	$7\frac{1}{2}$
24	9
30	10

Slotting Machines.

Stroke.	H.P. required.
Ins.	
6	$1\frac{1}{2}$
8	$3\frac{1}{2}$
10	5
12	$7\frac{1}{2}$
15	9
18	$10\frac{1}{2}$
24	15

Locomotive Frame Plate Slotting Machine 10 H.P. per head.

Boring Mills.

Swing.	H.P. required. (Two Tools)
Ft. Ins.	
3 6	10
4 0	12
4 6	15
5 0	18
6 0	21
7 0	25
10 0	30

Planing Machines.

Planing Machines (High Speed).

Size in Ft. and Ins. Width × Height.	H.P. required.	
Ft. Ins. × Ft. Ins.		
1 9 × 1 9	2½	Two tool boxes on cross-slide.
2 0 × 2 0	3½	
2 6 × 2 6	6	
3 0 × 3 0	8	
3 6 × 3 6	10	
4 0 × 4 0	15	Two tool boxes on cross-slide and one on the front upright.
5 0 × 5 0	20	
6 0 × 6 0	25	
7 0 × 7 0	30	

Vertical and Horizontal Planing Machines (High Speed).

Size in Ft. Vertically × Horizontally.	H.P. required.
7 × 9	18
9 × 12	24
12 × 15	28
15 × 20	32
18 × 25	35

Plain Cylindrical Grinding Machines.

Maximum Swing.	H.P. required.
Ins.	
7½	2
10½	3
12½	4
Universal Machines.	
10	3
12	4
20	5½

Milling Machines (Horizontal).

Size of Machine. Greatest Distance from Centre of Spindle to Table.	H.P. required.
Ins.	
12	2½
16	3
18	5
21	7½
24	10

Punching Machines.

Dia. of Hole.	Plate Thickness.	H.P. required.
Ins.	Ins.	
¾	⅜	1
1	⅝	2½
1⅜	1	5
1½	1½	7½
1¾	1⅜	10

Punching, Shearing, and Cropping Machines.

Hole Punched. Diameter.	Hole Punched. Plate Thickness.	Flat Bar Sheared at one Stroke.	Diameter Cropped.	H.P. required.
Ins.	Ins.	Ins. Ins.	Ins.	Ins.
1	⅝	3¼ × ¾	1½	6
1 3/16	1 3/16	4 × 1	1¾	8
5/16	⅜	4⅜ × 1	2⅜	10
1⅜	1	4½ × 1⅛	2½	12
1½	1¼	5⅜ × 1¼	3	16

The above is suitable for 20 strokes per minute.

Bolt and Nut Machines.

(Cutting Speeds.)

Diam. of Bolt in Ins.	Revs. of Dies for Machine Shops.	Revs. of Dies for Bolt Factories.	Diam. of Bolt in Ins.	Revs. of Dies for Machine Shops.	Revs. of Dies for Bolt Factories.	Diam. of Bolt in Ins.	Revs. of Dies for Machine Shops.	Revs. of Dies for Bolt Factories.	Diam. of Bolt in Ins.	Revs. of Dies for Machine Shops.	Revs. of Dies for Bolt Factories.
⅛	450	600	⅞	55	85	1⅝	33	48	2⅜	21	32
¼	230	300	1	45	75	1⅞	30	45	2½	20	30
⅜	150	200	1⅛	42	65	1⅞	28	40	2⅝	18	25
½	100	150	1¼	40	60	2	25	38	2¾	15	20
⅝	75	125	1⅜	38	55	2⅛	23	36	2⅞	12	18
¾	65	100	1½	35	50	2¼	22	34	3	10	15

Milling Speeds and Feeds.

With regard to milling speeds and feeds, the amount of reliable experimental data available is very meagre and the machinist must for the present content himself with compiling data for himself. The subject is very complicated, and he will require to make the fullest possible observations at least at the commencement. For this purpose, he will note the following : dia. and width of cutter, revs. per min., depth and width of cut, feed in inches per min., number of teeth in the cutter, type of cutter, feed per tooth, material and nature of the work. To measure the capacity of the machine by the feed per tooth alone may give misleading results.

Tests made on a No. 22 'Single Pulley' Horizontal Milling Machine made by Messrs. Alfred Herbert Ltd., Coventry.*

$4\frac{1}{2}$-in. High-speed Cutter, 10 Teeth, 2-in. Hole.
Block (Cast Iron and Mild Steel) 8 ins. wide at 60 turns = 70 ft. per minute.
(Power required to run motor and machine light ·7 net H.P. has been deducted from the recorded H.P.s to give the figures in the table.)

Depth of Cut.	Feed Measured	Net H.P.	(Cast Iron) Metal Removed.		Feed Measured	Net H.P.	(Mild Steel) Metal Removed.	
			Cubic Ins. per Min.	Cubic Ins. per H.P. Min.			Cubic Ins. per Min.	Cubic Ins. per H.P. Min.
Ins.	Ins.		Ins.	Ins.	Ins.		Ins.	Ins.
·24	$17\frac{5}{8}$	20·3	33·80	1·66	$11\frac{3}{8}$	30·8	21·84	·71
·25	$17\frac{1}{2}$	23·0	35·00	1·52	$10\frac{5}{8}$	29·6	21·75	·73
·26	$17\frac{3}{8}$	26·1	36·15	1·38	$11\frac{1}{8}$	39·8	23·14	·58
·28	$17\frac{3}{16}$	34·6	38·52	1·11	$9\frac{1}{8}$	28·6	20·44	·71
·30	$13\frac{1}{2}$	23·7	33·30	1·40	$9\frac{3}{8}$	29·6	21·67	·73
·32	$13\frac{1}{4}$	29·6	33·92	1·15	$8\frac{7}{8}$	30·8	22·72	·74
·34	$11\frac{5}{8}$	24·9	31·55	1·27	$8\frac{15}{16}$	42·1	24·31	·58
·36	$11\frac{1}{2}$	27·3	33·12	1·21	$7\frac{5}{16}$	30·8	21·06	·68
·375	$13\frac{1}{4}$	22·8	40·50	1·77	$7\frac{1}{8}$	28·6	21·37	·74
·40	$11\frac{3}{8}$	27·3	35·84	1·32	$6\frac{1}{16}$	27·3	19·40	·71
·42	$11\frac{1}{8}$	26·1	38·22	1·46	6	29·6	20·16	·68
·44	$9\frac{1}{2}$	23·7	32·12	1·35	5	24·9	17·60	·71
·46	$9\frac{1}{16}$	24·9	33·34	1·32	5	27·3	18·40	·67
·48	$9\frac{3}{16}$	27·3	35·33	1·29	$4\frac{15}{16}$	28·6	18·96	·66
·50	$9\frac{1}{4}$	30·8	37·00	1·20	$4\frac{15}{16}$	30·1	19·75	·66
·55	$7\frac{1}{2}$	28·6	33·00	1·15	$4\frac{7}{8}$	30·8	21·45	·69
·60	$6\frac{3}{8}$	23·7	29·76	1·25	$4\frac{13}{16}$	37·1	23·10	·62
·625	$9\frac{3}{16}$	24·9	45·93	1·84	$3\frac{15}{16}$	29·0	19·68	·68
·70	$7\frac{7}{16}$	35·1	41·60	1·19	$3\frac{15}{16}$	30·8	22·05	·71
·75	$6\frac{5}{16}$	28·6	38·80	1·35	$3\frac{1}{4}$	28·6	19·50	·68
·80	$6\frac{1}{16}$	29·6	38·79	1·31	$3\frac{1}{4}$	32·0	20·80	·65
·85	$4\frac{5}{8}$	27·3	33·15	1·21	$2\frac{5}{8}$	26·1	17·85	·68
·90	$4\frac{15}{16}$	29·6	35·54	1·20	$2\frac{9}{16}$	30·8	18·45	·60
·95	$4\frac{3}{4}$	35·1	36·10	1·03	$2\frac{1}{8}$	24·9	16·15	·65
1	4	27·3	32·00	1·17	$2\frac{1}{2}$	29·6	17·00	·57
1·05	$3\frac{7}{8}$	37·1	32·54	·86	$2\frac{1}{16}$	24·9	17·32	·69
1·1	$3\frac{5}{16}$	28·6	29·04	1·02	$2\frac{1}{16}$	28·6	18·15	·64

(*P. V. Vernon, before the Man. Assoc. of Engrs.* 1912.)

Examples of Cold Sawing. A.W. High Speed Steel.

Inserted-Tooth Saw.	Material.	Cutting Speed.	Time to Cut Through.
Diam. in Ins.		Ft. per Min.	Mins.
36	Steel (joist, 20 ins. deep by $7\frac{1}{4}$ ins. wide ; $\frac{3}{4}$ in. web.)	122	17
36	Steel (rail, 100 lbs. per yard)	90	2
36	Forged steel (bar 3 ins. diam.)	90	$2\frac{1}{2}$
36	Forged steel (bar 10 ins. diam.)	90	11
36	Forged steel (bar $7\frac{1}{2}$ ins. by 9 ins.)	84	9

P. V. Vernon (Alfred Herbert & Co.) before the Manchester Assoc. of Engrs. 1912.

Metal Hand Sawing.

Experiments undertaken in France to determine the best method of sawing metal by hand indicate that it takes less time to saw off a rectangular bar of steel when the saw is moved parallel to the shorter side of the rectangle than when it moves parallel to the longer side. It was also found that the shorter the stroke of the saw, the quicker would the bar be sawed off. In sawing off a rail by a nack saw, it required nearly three times as long when the stroke was 4 ins. in length, as compared with when it was somewhat less than ½ in. in length. The work performed per minute decreases regularly for each ½-in. increase in the length of the stroke. It is also stated that by holding down the end of the saw farthest away from the workman—not by hand but by a weight—the time required for sawing through a bar is shortened, a thinner blade can be used, and a better surface on the ends of the sawed-off bar is obtained.

Miscellaneous.

	H.P.
Double punch, running light	2·0
Punching both ends 1 in. hole, ⅞ in. plate, 28 punches per minute at each end	5·0
Punch and shear, running light	2·0
Punching hole as above, and shearing ⅞ in. plate, 5½ in. cut, 28 strokes per minute	6·5
Large plate-bending rolls, running light	5·5
Rolling plate $\frac{3}{10}$ in. thick, 4 ft. 4 ins. wide, and 16 ft. 6 ins. long, endways on (4 ft. 4 ins.)	6·9
Sideways on (16 ft. 6 ins.)	12·2
Plate 1½ in. by 4 ft. 8½ ins. by 21 ft. long, sideways on	19·3
Same rolls lifting and lowering top roll: Lifting	8·5
Lowering	7·0
Forcing ½ in. plate down	10·0
Forge fan, for 24 fires	10·5
Angle squeezer, running light	0·8
Squeezing	2·5
Riveting machine, running light	1·6
Riveting	3·0
Plate planing machine, running light	1
Reversing light	2
Cutting	5
Stern frame, boring, cutting	1·75
Angle-cutting machine, running light	1·6
Cutting angle 6 ins. by 3½ ins. by ½ in.	3·5
Winch, lifting 28 cwt. single purchase, 50 ft. per minute	6·5
Ending machine, running light	1·9
Cutting girder 18 ins. by 7 ins.	4 to 4·8
Cold saw, running light 24 in. saw	2·0
Cutting 4 in. by 4 in. angle	4 to 4·5
Air compressor, 10 ins. by 14 ins. cylinder, 50 lbs. pressure	15 to 23·5
Hydraulic pumps, three pumps, 3¾ ins. diameter; 4¾ ins. stroke, 60 strokes per minute; pressure, 870 lbs.	38·0
Electric winch, running light	1·2
Lifting 24 cwt. 16 ft. per minute	5·6

Wood-working Machinery.

The following list, which gives the various sizes of motors it is advisable to put down for the machines mentioned, allows for the motors being capable of giving 25 per cent. overload for not less than 1½ hour, without any undue heating, and it is always advisable to leave this amount of margin to meet extra heavy cuts, which a machine has to cope with fairly often in this class of work. The figures given in the list are based upon the average work found in the particular shops where the machines are generally used, and in cases where extra heavy duty is required regularly an increase in the size of motor will be necessary. The type of motor chosen has a certain influence upon the amount of marginal power, and this point requires careful attention.

Machine type and size.	Power of motor required for average work. H.P.	Motor belted to the machine or counter, or direct coupled.	Remarks.
24 in. and 30 in. Horiz. Log Frame Saw, 1 blade in use	10	Belted to machine	—
36 in. „ „	12	„ „	This machine takes between 10 and 11 h.p. to start

Machine type and size.	Power of motor required for average work. H.P.	Motor belted to the machine or counter, or direct coupled.	Remarks.
42 in. Horiz. Log Frame Saw, 1 blade in use	15	Belted to machine	—
48 in. ,, ,,	18 to 20	,, ,,	—
24 in. Circular Saw Bench (hand feed)	10	,, ,,	—
30 in. Circular Saw Bench (hand feed)	12	,, ,,	—
36 in. Circular Saw Bench (hand feed)	15	,, ,,	—
42 in. Circular Saw Bench (hand feed)	20	,, ,,	—
24 in. Band Saw (hand feed)	1½	Belted or direct coupled	—
30 in. Band Saw (hand feed)	2	,, ,,	—
36 in. Band Saw (hand feed)	3	,, ,,	—
42 in. Band Saw (hand feed)	5	,, ,,	These machines are used on heavier work than the 30 in. and 36 in. sizes
48 in. Band Saw (hand feed)	6 to 7	,, ,,	
36 in. Band Saw (power feed)	8 to 9	,, ,,	—
42 in. Band Saw (power feed)	11 to 12	,, ,,	—
48 in. Band Saw (power feed)	14 to 16	,, ,,	This machine is used on heavier work than the 36 in. and 42 in. sizes
16 in. Double Dimension Saw (hand feed)	5	Belted to machine	—
18 in. diam. Cross-cut Machine (hand feed)	3	,, ,,	—
24 in. diam. Cross-cut Machine (hand feed)	5	,, ,,	—
30 in. diam. Cross-cut Machine (hand feed)	7	,, ,,	—
7 in. by 3 in. Four-Cutter Planer (power feed)	10 to 12	Belted to counter or direct coupled to counter	—
16 in. Plain Surfacing Machine (hand feed)	3	Belted to machine	—
20 in. Plain Surfacing Machine (hand feed)	4	,, ,,	—
24 in. Plain Surfacing Machine (hand feed)	5	,, ,,	Machines above 20 ins. wide do not often plane the full width
Vertical Spindle Molder (light) 2½ ins. deep	2	Belted to counter or direct coupled to counter	—
Vertical Spindle Molder (heavy) 4 ins. deep	3 to 4	,, ,,	—
Vertical Double Spindle Molder (heavy) 4 ins. deep	6 to 7½	,, ,,	—
Vertical Double Spindle Molder (heacy) 6 ins. deep	10	,, ,,	—
Medium type Tenoner (1 scribing spindle)	5	,, ,,	—
20 in. Combined Surfacing and Thicknessing Machine	8	for ordinary seasoned timber	Surfacing is hand feed, Thicknessing is power feed
24 in. Combined Surfacing and Thicknessing Machine	10	,, ,,	

When motors are direct coupled it is advisable to use a flexible coupling in order to avoid shock on the motor due to fluctuating loads.

The foregoing powers assume that the cutters or saws are running at about standard speeds, and are in good working condition; also it is assumed that the rate of feeding is about the standard, and not speeded up above the makers' speeds. It is, of course, understood that any machine, particularly saw benches, can be fed until they take an abnormal amount of power, but the intelligent workman can so humour the feed without losing time that he gets almost the maximum amount of cutting done with the minimum amount of power expended.

The power absorbed per sq. ft. surface sawn per minute varies very much in some instances and it is impossible to get anything like an accurate figure, as there are so many variable factors; thus, the amount of power absorbed by the saw increases or decreases according to the amount of set given to the teeth, and the set requires to be varied considerably according to the class of timber to be sawn: even in the same class of timber the grain in one part of the cut might be such that it closes in on the saw more than in another part of the cut.

The speed of the cutting edge and the angle, in knife tools, and the shape of saw tooth, speed, angle, and thickness of saw, in saws, has a great influence on the amount of power a machine will absorb when doing certain classes of work.

The following list gives the various speeds, etc., of certain machines, the information being the latest practice.

Circular Saws for ripping, soft wood	9,600 to 11,000 ft. per min. (peripheral)	
" " hard "	9,600 to 11,000 "	"
" " ordinary cross-cutting, soft	10,000 "	"
" " " " hard	8,000 to 10,000 "	"
" " (Hollow ground)	10,000 to 11,000 "	"
Ordinary plain Band Saws, soft wood	4,300 to 5,000 "	"
" " hard wood	4,300 to 5,000 "	"
Deal cutting Band Saws, hard or soft	6,500 to 7,000 "	Specially designed
Log Band Saws	6,500 to 8,000 "	machines

Reciprocating Mortising Machines:

Mortising up to	1/8 in. wide,	4½ ins. stroke	(not graduated), crankshaft speed	400 r.p.m.
" "	1 "	" "	"	350 "
" "	1¼ "	6 "	(graduated) "	270 "
" "	2½ "	6½ "	" "	255 "
" "	3 "	7 "	(not graduated) "	160 "

Vertical Deal Frames (Single):

To take timber 12 ins. by 6 ins.	Continuous Feed "	300 "
" " 18 ins. by 6 ins.	" "	250 "
" " 28 ins. by 5 ins.	" "	200 "

Vertical Deal Frames (Double):

To take timber 20 ins. by 6 ins.	" "	225 "
" " 24 ins. by 6 ins.	" "	200 "

Horizontal Saw Frame (Single blade):

To take timber 24 ins. square	2 ft. 6 ins.	stroke	(balanced) "	320 "
" " 30 "	"	"	" "	300 "
" " 36 "	"	"	" "	280 "
" " 42 "	"	"	" "	260 "
" " 48 "	"	"	" "	230 "

Double Equilibrium Deal Sawing Frames (balance swing frames):

To cut 2 deals up to 14 inches × 5 inches, 350 revs. per min. (of crankshaft).
" " 18 " × 6 " 300 " " "
" " 24 " × 7 " 250 " " "

Bandsaws, blades running on wheels up to 3 feet diameter:

For sawing very hard ivory, etc., traverse of saw blade per minute, 750 feet.
" iron " " " " " 250 "

Vertical Spindle Moulding Machines:

Single Spindle (light type)	5,000 to 6,000 revs. per minute.
Double " (")	5,000 to 6,000 " "
Single " (medium type)	4,000 to 4,500 " "
Double " (")	4,000 to 4,500 " "
" " (heavy type)	3,500 to 4,000 " "

High speed Four Cutter Moulders:

Bottom spindle	4,000 revs. per minute, 6 ins. dia. cutting circle app.
(2) Side spindles	4,000 " " 6 " " "
Top spindle	5,000 " " 6 " " "

The above represents the average machine up to 12 ins. by 4 ins., and give approximate peripheral cutting speeds of :—bottom spindle, 6,300 ft. per min.; side spindle, 6,300 ft. per min.; top spindle, 7,800 ft. per min.

The extra speed given to top cutter spindle is because this cutter spindle has the heaviest work to do, having to reduce the timber to an even thickness and a given size.

Surface planing machines . . .	5,000 to 5,500 ft. per. min. of cutting circle.
Surfacing and thicknessing machines (combined)	5,000 to 5,500 „ „ „

The above instances are for average cases, and may be accepted as good standard practice at the present time.

Tenoning Machine (light)	4,500 to 5,500 ft. per min. of cutting circle.
„ „ (heavy)	3,500 to 4,500 „ „ „ „
Fret Saws	1,200 revs. per min. 1¼ in. stroke.
Carving Machines (light) . .	8,000 revs. per min. of spindle.
Single Spindle Dovetailing Machines	5,000 to 6,000 revs. per min. of spindle.

Boring Augers (ordinary):

Up to 1 in. diam., 1,800 to 2,000 r.p.m. Up to 2 ins. diam., 1,000 r.p.m. Up to 3 ins. diam., 750 r.p.m.

Emery Wheels, for saw-sharpening, etc., 4,500 to 6,000 feet periphery velocity.

Hack-Saws.

Insufficient attention is given to the lubrication of hack-saws while cutting. It is as necessary to apply ample lubricant to hack-saws as to any other cutting tool, and many power hack-saw blades merely rub their way through stock because the first few strokes have destroyed the hardness of the teeth, owing to the temperature attained in the absence of lubricant.

Hand hack-saw blades generally suffer the same careless treatment accorded to files. The proper use of these hand tools is not impressed upon the semi-skilled labour of to-day, and the hack-saw bills of many firms could be reduced considerably if more attention were given to this matter.

Power Losses in the Machine Shop.

Engine friction, 10 per cent.; line shafting, 15 per cent.; belts and pulleys, 15 per cent.; empty machines, 15 per cent.; cutting metal, 45 per cent.; total, 100 per cent.

Even this efficiency is probably only realised when everything is working at full capacity. Of all metals cut in the machine shop, cast-iron is said to absorb least power per unit of weight removed, while the harder steels require the maximum. Thus, to remove 1 lb. of cast-iron per hour requires the continuous expenditure of from 0·15 to 0·30 h.p., or, say, an average of $\frac{1}{10}$ h.p., where steel calls for $\frac{1}{3\cdot5}$ h.p. An average lathe will cut 10 to 20 lbs. of cast-iron per hour and absorb ¼ to ½ h.p. in useful work, and similarly steel will be removed at a rate of 5 to 10 lbs. and demand ½ to ⅔ h.p. Much also depends on the condition of the machine itself, which may increase its demand for power from 0·36 to 2·3 h.p. very quickly, simply from a dry main spindle. A lathe run without cut may absorb 0·04 to 0·16 h.p., and this will amount up to 0·3 or 0·4 simply by tightening the work in the centres. A large 84-inch wheel lathe has been found to absorb 1·75 h.p., and when cutting, 5·8 h.p. on heavy work.

Planers use ·035 h.p. per pound of cast-iron removed per hour, and 0·065 h.p. per pound of steel, and it may remove 20 lbs. of soft steel or 30 lbs. of cast-iron per hour. Ordinarily, however, the machine would not consume 1 to 1·3 h.p., as these figures would indicate, but only about ½ h.p. Adding for the machine will probably show an average power of 1·0 h.p. in ordinary work.

Felt Wipers on Slides.

To prevent grit working under the slides of machine tools owing to rounded corners, felt wipers may be fitted as shown in fig. 54. The felt is held in place by 1-in. angle iron secured to

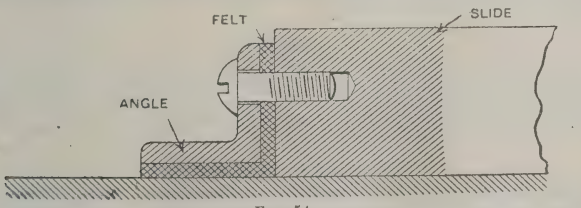


Fig. 54.

the slide by button-head screws. In practice the felt retains the oil and helps to keep the slide lubricated. (*Machinery.*)

TOOL STEEL AND TOOLS.*

Treatment of Carbon and High-Speed Steel Tools.

CARBON STEEL.

The term carbon steel has been generally applied to 'straight carbon' and 'carbon-alloy' steel. The former is obtained directly from blister steel, which is melted in crucibles, poured into a cast-iron mould and cooled. Subsequently the ingots are retreated, hammered and rolled to the desired shape and size. The carbon-alloy is obtained by adding small quantities of tungsten, chromium, silicon, etc. The latter steel has distinct advantages over the former in that it is easier to forge, is less liable to failure in hardening, and has a greater cutting capacity. The chemical composition of a representative tool of the latter class is given below.

Chemical Composition of Ordinary Carbon Tool Steel.

Carbon, 1·1 per cent.; manganese, 0·35 per cent.; silicon, 0·17 per cent.; phosphorus, 0·018 per cent.; sulphur, 0·015 per cent. The sulphur and phosphorus are undesirable quantities, the former producing brittleness when hot or 'hot shortness,' and the latter 'cold shortness.' The silicon and manganese facilitate melting and forging, and improve the quality of the finished steel. The hardness of the steel chiefly depends upon the carbon contained in it. The various tools contain different percentages of carbon to suit the work they have to do. Thus, tools subject to sharp blows should contain a low percentage of carbon, and keen-edged tools a high percentage. The carbon contents for different classes of tools are as follows:—

Tools such as snaps, hammers, drifts, stamping dies, contain about 0·65 per cent. carbon. Smiths' tools, hot and cold sets, swages, punches, shearing blades, cold chisels, miners' drills, minting dies, contain about 0·7 to 0·8 per cent. carbon.

Large milling and other circular cutters, very heavy lathe tools, drills, taps, screwing dies, reamers, contain about 1 per cent. carbon, whilst the smaller and lighter varieties of cutters, turning and similar tools, drills, and reamers, contain from 1·1 per cent. to 1·3 per cent. carbon.

HARDENING.

Hardening is effected by heating the tool to a colour between a dull and cherry-red; that is, between a temperature of 1,365° F. (740° C.) and 1,400° F. (760° C.), and immediately quenching it in water, or in a suitable bath so that the temperature is at least lowered to 390° F. (200° C.), but preferably to a normal temperature of about 60° F. Some tools, depending on their composition, will harden a few degrees below 1,365° F. and some require a slightly higher temperature. The upper limit must not be exceeded, otherwise the steel becomes coarse and weak, but providing the temperature is kept within the range the steel is apparently uninjured. The lower hardening temperature, or what is called the 'critical point,' must be reached, otherwise the steel after quenching will be too soft for cutting metal.

TEMPERING.

This is done by heating to a temperature between 390° F. (200° C.) and 600° F. (315° C.) and cooling slowly. The higher the tool is heated within this range the softer it becomes. It is of the utmost importance that the tool should be uniformly heated, and quenched, otherwise some parts will be harder than others and internal stresses set up which will produce warping and cracking. To minimise any irregularity in heating formed cutters, modern practice is to heat these in a bath of molten metallic salts which is maintained at a constant temperature by gas or oil jets.

ANNEALING.

Irregular annealing is responsible for much warping and cracking, and it is advisable that formed cutters should be carefully annealed before forging, and even again before being hardened, so as to remove any initial strains and strains produced in machining. These precautions as to annealing should be observed with all classes of steels.

SELF-HARDENING OR MUSHET STEEL.

This class contains on the average about 5·5 per cent. tungsten, 2 per cent. carbon, 1·5 per cent. manganese, 1 per cent. silicon, and 0·4 per cent. chromium. As in the case of high-speed steels the proportions of the various elements have a most pronounced effect on the quality.

---

* See also METALLURGY, Section XXXVII.

FIRTH'S

CRUCIBLE CAST TOOL STEELS

are made in three qualities, and in a range of tempers to cover all purposes for which Carbon Tool Steels are required.

Use of only the best raw materials, and scrupulous care in every stage of manufacture, result in an absolutely reliable and uniform final product.

FIRTH'S

EXTRA CAST STEEL
BEST CAST STEEL
CAST STEEL

can be had in all ordinary sizes

FROM STOCK

THOS. FIRTH & SONS LTD.
SHEFFIELD

FIRTH'S

'SPEEDICUT'

HIGH SPEED

TWIST DRILLS

SPEED UP PRODUCTION

Their toughness and hardness enable them to stand abuse and resist wear.

They are made of the famous 'Speedicut' High Speed Steel, which gives higher speeds and greater feeds.

Stringent inspection tests ensure individual perfection.

They are the product of experience extending over three generations.

LARGE STOCKS ARE CARRIED FOR IMMEDIATE DELIVERY.

THOS. FIRTH & SONS LTD.
SHEFFIELD

The self-hardening property of this steel principally depends upon a high percentage of manganese or chromium in combination with tungsten or molybdenum. Such steel is hardened by heating it to a bright red colour (about 1,500°F.) and allowing it to cool. If heated much above this temperature it will crumble in forging, and its cutting capacity is permanently impaired. When cold it is very hard, and retains its cutting edge much better than carbon steel tools.

High-Speed Steels.

High-speed steels are also self-hardening, but are usually forced in cooling by an air blast or by quenching in oil or other medium. The elements of this steel are very similar to some of the older types of self-hardening steels, but they contain much more tungsten and chromium and about one-third the quantity of carbon. Several old self-hardening steels had all the desirable elements and proportions of a high-speed steel, and it was due to the supposed 'overheating' of such steel that its latent cutting capacity was revealed, and not to any new properties or proportions.

Broadly speaking, there are two classes of this steel, viz., *ordinary* and *new* high-speed steel and for these Mr. F. W. Taylor gives the following chemical composition :—

Chemical Composition of Ordinary and New High-Speed Steels.

Class of Steel.	Tungsten. Per cent.	Chromium. Per cent.	Carbon. Per cent.	Manganese. Per cent.	Vanadium. Per cent.	Silicon. Per cent.
Ordinary .	8·0	3·8	1·85	0·30	—	0·15
New or modern	18·91	5·47	0·67	1·1	0·29	0·043

The carbon contents in the ordinary high-speed steel is high, and the principal difference between the ordinary and new high-speed steels is that the latter contains a quantity of vanadium. The addition of vanadium raised the 'critical point' and enables the tool to withstand a higher temperature due to an increased speed of cutting. Tools of this steel are harder and retain their cutting edges longer than ordinary high-speed steel tools. They are therefore particularly suitable for cutting very hard metals, such as railway and car tyres, which have become very hard with usage, manganese steel castings, chilled rolls, etc. A tool containing 0·25 per cent. of vanadium lasted twice the time of a similar tool containing no vanadium, whilst Mr. J. M. Gledhill points out that by substituting 2 per cent. vanadium for chromium in a steel, good results were obtained when tried on medium steel, but were no better than the steel containing the much cheaper element chromium.

A steel may therefore be made of the best quality of material, but unless the elements are properly proportioned and care and skill be exercised during melting to ensure a proper mixing and avoid 'dryness' (a brittleness produced by retaining the steel in its melted state for an undue length of time), it may fall short of a first-class steel. As the percentage of the vital elements decrease, the difficulties in successful melting and mixing increase, and the most satisfactory steel to suit the various conditions prevailing in practice can only be obtained by prolonged experimenting.

To Identify High-Speed Steel Scrap.

The spark from high-speed steel ground on an emery wheel is a dark-red spark that is inclined to scatter, while the spark from ordinary carbon steel is much whiter and is not inclined to scatter. The sparks from high-speed steel are about the same colour as from cast iron, but are much finer.

Annealing.

This process is best accomplished by placing the tools in a sealed oven, furnace, or muffle where they are uniformly heated by radiation. By excluding the air, and preventing the flame impinging on the steel, scaling is avoided and the fine cutting edges preserved. The furnace should be heated in such a manner that in about two hours' time it attains a temperature of 1,544°F. (840°C.), or very slightly higher, and should be steadily maintained at this temperature for about two hours. The heat is then cut off and both furnace and tools are allowed to cool slowly.

To release the furnace during the cooling process some smiths bury the articles in lime, powdered charcoal, soot, or coarse sawdust of some particularly hard wood. The bed in the latter case should be about 24 inches deep and contained in a box having an airtight lid. The articles when dropped on the top of the sawdust and covered with the lid work their way slowly down.

Should such a furnace not be available the tools may be placed in an iron pot or pipe and packed tight with steel cuttings or lime. The pot is then sealed with fireclay and raised to the above temperature at which it is retained for about eight hours before it is placed in charcoal ashes to cool. Good results are obtained from this process, but it is exceedingly slow, and it is doubtful if any advantage is obtained by prolonging the treatment after the annealing temperature has been attained throughout.

Forging.

If a piece has to be cut from the cold bar, this should be done before nicking the bar all round, otherwise small cracks are likely to be started. Preferably the bar should be cut through at a forging heat. In forging, heat the tool slowly and uniformly (without the blast) to a dull red, then raise quickly to a bright red or yellow heat (1,800° to 1,900° F.), when it can be easily and rapidly manipulated. To prevent cracks, hammering should cease as soon as the heat has fallen to a medium red (about 1,400° F.). The steel may be rapidly reheated from this temperature for subsequent forging without any ill-effects. On account of ease and economy in forging, together with general utility and efficiency in cutting, a roughing tool is recommended. This form of tool can be quickly forged by first cutting the required length from the bar and afterwards forming the front, side and top angles by simply jumping the nose. This shape gives the minimum of waste material.

Hardening.

A temperature of 2,000° F., which is ruinous to other steels, gives this steel the property of resisting abrasion at a higher temperature. It is therefore capable of retaining its cutting edge at the high temperatures accompanying high speeds of cutting. This quality, which has been termed 'red hardness,' is not possessed by other steels. In hardening high-speed steel it is slowly pre-heated (in order to obtain a uniform heat throughout) to a medium red (about 1,550° F.), then quickly raised to the following temperatures :—Ordinary high-speed and molybdenum steel from 2,000° F. to 2,200° F. (yellow or lemon heat), vanadium steel from 2,200° F. to 2,350° F. The lower figure is recommended for oil hardening and the higher for air hardening. When the heating is done in the smith's fire, obtain a good, deep bed of small coke or soft coal and preheat the tool by laying it in the fuel at some distance from the hottest part till the fire is thoroughly blown up. To ensure uniformity the tool during both stages of heating should be frequently turned round. Some smiths prefer to obtain final heat by placing the tool within a piece of scrap piping which is maintained at the required temperature by the surrounding fuel on the hearth. Except for the simplest form of tools such as those of the lathe type, the smith's hearth is unsuitable. Formed tools such as milling cutters, hobs, reamers, etc., are best heated in gas, oil or coke-fired muffle furnaces. Modern furnaces for this work usually have two chambers, i.e., an upper in which the cutter is pre-heated, and a lower chamber in which the cutter is raised to the final temperature. Another method of raising the cutter to its final heat is to immerse it in a mixture of molten metallic salts (barium chloride, etc.). The bath is heated and maintained at any desired temperature by passing an electric current through it. As the heat generated varies as the current passes through the circuit the arrangement is ideal for obtaining uniform conditions. The first cost, however, is large, and attempts have been made to obtain similar results from gas-heated salts in graphite crucibles. Trouble arises in the latter device through oxidisation : particles of iron oxide floating on the surface are inclined to adhere to the tool and produce soft spots.

Many have an idea that it is impossible to injure high-speed steel by overheating. This is certainly not the case. If an ordinary high-speed steel tool be heated to 2,400° F. and cooled in an air blast, its fracture will show a very coarse grain.

Once the final temperature has been attained the tool should be immediately withdrawn, as prolonging the treatment, even without raising the temperature, injures the steel and reduces its cutting capacity.

'Pack' Hardening.

It requires a man with considerable experience to harden successfully large high-speed steel milling cutters or hobs, and also a first-class furnace designed for this purpose. The disaster attending repeated attempts to do this has caused some hardeners to resort to 'pack hardening' and possibly the desire to get away from scaling effects has also had something to do with this innovation. In this process about a 1-in. layer of charcoal (¼-in. lumps) is made in the bottom of a cast steel box. Over the charcoal is placed a perforated plate which supports the cutters, but there is no charcoal against the cutters, etc. When several cutters are packed in the box these are separated by asbestos. When charged a lid is placed on the top of the box and sealed with clay. The box is then placed in a suitable furnace and the temperature raised to 1,250° C., and held at that for an hour or two, depending on the time required to thoroughly heat the contents. The cutters are cooled in hot oil or metallic salts in the usual way.

The object of the charcoal is to consume the free oxygen in the box before the steel gets sufficiently hot to scale. Scale is oxide of iron, and will not form if there is no free oxygen, so that however hot the steel may get, it cannot scale.

Tools or cutters which have to be rehardened after having been in use should be annealed prior to this operation, and thereby relieve the internal strains.

Before attempting to harden steel, it is advisable to remove by grinding or machining the black scale (oxide of iron) on the bar or forging, as immediately adjoining it is a thin film of decarburised material, which cannot be altogether avoided in the manufacture, and which will not be hardened.

Quenching.

Uniform cooling is just as essential to the successful treatment of steel as uniform heating, providing this is done it does not matter whether the medium is an air blast, oil, or water. To quench high-speed steel in water, however, is liable to produce cracks, and this is particularly the case in formed cutters where it is impossible to obtain uniform cooling by such a rapid process. Tools of the lathe type are usually cooled in a strong air blast, whereas formed cutters are generally quenched in a bath of salts about 500° F. or in rape or whale oil at a temperature of 250° F. and afterwards cooled in cold oil. The oil cooling gives a clean smooth surface to the cutter.

Quenching Medium.

After heating, it is usual to quench this steel in water, brine, oil, metallic salts, molten lead, etc., depending on the size of the tool or purpose for which it is intended. The function of the medium is to abstract rapidly the heat from the steel, as it passes through the critical range, and nothing more than this. Water therefore, on account of its mobility, makes an excellent cooling medium. The colder the water, and the more rapidly it is circulated, the greater the hardness will be. Cold water which has not had the chill taken off is very liable to produce cracks, whilst with boiling water it is impossible to harden at all. In the latter case a jacket of steam forms between the tool and the water, and cooling is retarded. It follows, therefore, that different degrees of hardness can be obtained by having the water at different temperatures. To raise the boiling-point, salt (as much as the water will carry) is frequently added, and for general purposes such a mixture at 40° C. (104° F.) is quite good. Keep the liquid clean and free from grease or oil. A great deal of nonsense has been spoken and written on the relative merits of quenching mediums, and to Mr. S. N. Brayshaw, M.I.Mech.E., especial credit is due for exploding many of the fantastical theories on this subject. According to Mr. Brayshaw, the ability of a liquid to bring a body immersed in it to its own temperature depends upon the following properties: (1) Specific Gravity, (2) Specific Heat, (3) Boiling-point, (4) Thermal Conductivity and (5) Fluidity.

Specific Gravity.—The specific gravity determines the weight of liquid in contact with the tool being quenched.

Specific Heat.—The heat required to raise the temperature by a given amount, of a pound of different liquids varies enormously. If a red-hot tool weighing 1 lb. be immersed in a gallon of water weighing 10 lbs., the water quenches the tool, and its own temperature is raised about 12° C. in so doing, but if immersed in 10 lbs. of mercury, which has a very low specific heat, the temperature of the mercury rushes up more than 200° C.

Boiling-point.—When a tool is quenched in water or oil, a jacket of steam or vapour may be instantly formed, and this retards the cooling very greatly. Liquids, like solids, vary in their ability to conduct heat, but a deficiency in this respect may be compensated for by motion in the liquid.

Fluidity.—The ability of a liquid to circulate freely is one of the most important factors as regards quenching. The agitation may be caused by moving the tools about rapidly in the liquid, or by directing jets upon them.

Water.—The fact that its thermal conductivity is very low is counterbalanced by its fluidity. The higher the temperature of the quenching water, the more nearly does its effect approach that of oil, and if boiling water is used it will be even more gentle in its action than oil.

The Boiling-point of Water in relation to its Quenching Capacity.

If ordinary tool steel could be very rapidly quenched by any means to a temperature of 100° C. it would harden perfectly; but water at 100° C. (that is, boiling water) is incapable of quenching steel rapidly, and the nearer the boiling-point is approached, the worse it becomes for quenching purposes. When a red-hot tool is immersed in water, steam is generated around the tool, keeping the water away from it and interfering with the quenching. If the water is boiling, the tool is completely jacketed.

The Effect of Stirring during Quenching.—The tools cool much more quickly if they are stirred, or, what amounts to the same thing, if the water is projected in a stream upon the tools.

The Addition of Acid or Salt to the Quenching Bath.—The addition of sulphuric acid increases the conductivity of the water, but the gain from this cause is small in comparison with rapid circulation of water.

It is sometimes stated that sulphuric acid is added to prevent hardening cracks, but this is inconsistent with the other idea that it is used to obtain a greater degree of hardness. If the liability to crack is reduced, it is because the acid has made the quenching bath more gentle in its action, and thereby reduced the hardness.

Seasoned Water for Quenching.

Water ordinarily contains air dissolved in it, and this air is expelled when heat is applied. For this reason water which has recently been boiled and allowed to cool again, may be expected to quench the steel with greater rapidity and uniformity.

Quenching in Oil.—It is necessary in some cases to quench in oil, although it should be avoided wherever possible. Oil to one specification is not always the same, and even if it were, considerable changes are brought about with use, and its quenching power soon becomes different to that of new oil.

Quenching in Fusible Salts.—The ideal quenching liquid would be one which, at a temperature of say 100° C., had sufficient quenching power to cool steel so rapidly that it would harden thoroughly.

Experiments have been made by Mr. Brayshaw with chlorides, fluorides, carbonates, and other compounds, in order to find a 'melt' for quenching.

Such a 'melt' or mixture of salts differs from that used in the salt bath as ordinarily understood, in the fact that the salt bath commonly consists of a mixture of chlorides which are liquid at a red heat, and in which tools are immersed in order that they may be raised to the temperature necessary for hardening. The 'melt' now under consideration is primarily not for heating, but for cooling the tools, although it may be remarked incidentally that such a 'melt' may usefully be applied for the tempering of tools after they have been hardened.

The endeavour was to find a mixture, free from water, which would be liquid at a temperature as low as possible, have a high specific heat, and should be obtainable at reasonable prices.

A mixture known as 'Quenchite' resulted. It is liquid at 135° C. (275° F.), and at this temperature it is almost as fluid as water. It quenches steel very rapidly, has a very high boiling-point, and consequently the liquid is in direct contact with the steel almost from the moment of immersion.

The temperature of 135° C. is, however, so high that 'Quenchite' is only suitable for hardening small or thin articles. Small cutters and long reamers or taps can be quenched in it to give a glasshard surface, and with practically no warping or change of shape, but it is not sufficiently severe in its action to give the necessary hardness to a sufficient depth in the case of large tools in which there is a considerable body of steel behind the cutting edge.

Manner of Quenching.—In order to secure uniform cooling and absence of warping, all sorts of dodges are resorted to by hardeners. In the case of small articles, these are dipped bodily into the medium, so that the whole is cooled at the same instant.

Twist drills, taps, reamers, etc., are dipped vertically, and to move these sideways in the bath would distort them. To avoid this, the medium is stirred with a stick so as to give it a rotary motion, and the drill or tap is dipped in the centre of the swirling liquid, and moved vertically upwards and downwards. Blades for lawn mowers, shear blades, and similar things should be gripped in the centre with the tongs, dipped edgewise in the liquid, and moved edgewise through it, or the liquid itself may be agitated. Sometimes the blade is held between two pieces of iron slightly larger than the blade, and the whole dipped together. A hammer face, if dipped in the liquid, would cool at the edges before it did at the centre, and for this reason a sprayer or jet of water directed on the centre of the face is preferred.

Tempering.

May be accomplished by placing the cutter in a gas stove and raising the temperature to about 500° F., when the gas is shut off and the whole allowed to cool slowly.

Some prefer to first reduce the temperature of formed cutters to about 800° F. in the air blast, then to plunge the same in tallow at 200° F., when the temperature is again raised to about 500° F. and the whole allowed to cool.

Grinding.

The tool should be ground by *hand* pressure on a *wet* sandstone wheel. If it is necessary to use the emery wheel, the tool should be roughly ground to shape after forging, and finished on the wet sandstone after hardening.

Hardening High-Speed Steel Tools *

(1.)

The heat treatment usually prescribed for hardening high-speed steel tools consists in heating the nose of the tool slowly and uniformly to a red heat, then rapidly to a white or welding heat, at which the steel commences to fuse and blister, and then cooling either rapidly or slowly in air or quenching in oil.

The Department of Scientific and Industrial Research desires to direct the attention of users of high-speed steel tools to the fact that uniform and improved results may be obtained by carrying out the hardening process in two stages in accordance with the instructions given

* Communicated by the Department of Scientific and Industrial Research to the *Ministry of Munitions Journal*, and reproduced by permission of the Editor of that Journal.

below. This treatment is the outcome of the researches of F. W. Taylor in America, and of Carpenter, Edwards, Dempster Smith, and others, in this country. It may be stated that the adoption of this process for the hardening of special tools required for a most important purpose in connection with the war has yielded consistently uniform results, which are immensely better than the best results previously attained. The procedure given below is that adopted by Mr. Dempster Smith in the researches on tool steel carried out in the Manchester School of Technology for the Manchester Association of Engineers, with the aid of a grant from the Research Department.

First or High Heat Treatment.—Thoroughly preheat the tool to about 800° C. (1,472° F.), and transfer immediately to a high temperature furnace at a temperature of not less than 1,350° C. (2,462° F.) for ordinary high-speed tools, and about 1,320° C. (2,408° F.) for super high-speed steel. Retain it in the furnace until the surface of the tool nose is covered with small blisters slightly larger in size than a pin's head, in the case of ordinary high-speed steel, or until the entire surface of the nose is in a state of incipient fusion, or in the case of super high-speed steel presents a greasy appearance. The steel in the first case will have attained a temperature of about 1,320° C. (2,408° F.), and in the second a temperature of 1,290° C. (2,354° F.). Remove the tool and cool in an air blast of large volume.

Second or Low Heat Treatment.—Reheat the tool hardened as above to 570° C. (1,058° F.), for half an hour for tools with sections of half an inch square, or longer in the case of larger sections, and cool in an air blast or in still air. If carefully handled a higher temperature of about 610° C. (1,130° F.) may be adopted if the treatment is limited to ten minutes for tools of the smaller section, and slightly lower for those of larger section. All temperatures for the first and second heat treatment should be measured by means of a pyrometer, and care should be taken to ensure that the portion of the tool under treatment is uniformly heated throughout to the required temperature.

(2.)

The prevailing method of heating tools in ordinary gas furnaces, even when the utmost care is exercised, does not yield uniform results as regards cutting efficiency. The following procedure will be found to yield uniform results :—

First or High Heating.—The preliminary heating to about 800° C. (1,472° F.) may be carried out in a gas-fired muffle or semi-muffle. Care should be taken at this stage to ensure that the whole of the nose of the tool or the part to be heated subsequently to a high temperature is brought uniformly to the required temperature. The high heating to 1,350° C. (2,462° F.) should be carried out in a gas-fired furnace with a reducing flame so disposed that the heating of the tool is effected more by radiation from the heated surfaces of the furnace than by contact with the gases. It is important that the tool shall not be brought directly in contact with the burning gases. Detailed drawings of a furnace to fulfil the above conditions will be furnished on application to the Department.

Second or Low Heating.—This may be carried out at 570° C. (1,058° F.) in a gas-fired muffle or in a lead bath.

Tool Steels.

The treatment given above may be applied to steels containing tungsten, chromium, or vanadium, and generally to ordinary brands of high-speed tool steel. It may be found that certain special steels require a modification of the above treatment, particularly of the temperature required for the second heating; in such cases users are advised to refer to the makers of the steel, or, if possible, to investigate the matter for themselves.

Results.

When the heat treatment described above is carefully carried out, it will be found that the cutting efficiency of the tools is high and is maintained throughout the entire length of the nose, and that no further heat treatment is necessary after grinding (see page 984). The second heat treatment toughens the steel, and its advantage is very pronounced when working tools at high speeds.

Furnace.

A type of gas muffle recommended is illustrated on page 987, fig. 55.

Oil Fuel Heating Systems.

(Abstract of paper read before the Royal Society of Arts by Mr. A. F. Baillie.

Billet-heating furnaces using the air-jet system, with air and oil preheated by the exhaust gases showed a consumption of 9 lbs. of oil per 100 lbs. of metal heated for drop stamping. In

heating furnaces for nut-making, the consumption was found to be about 4 lbs. of oil per 100 lbs. of metal heated, and for bolt-making about 4½ lbs. A test on a bolt-making furnace 9 ins. by 12 ins. by 20 ins. resulted in 400 to 500 gross of bolts of from ⅜ in. to 1 in. per week on a consumption of 300 gallons of oil. Rivet-heating tests show for some furnaces on this work a consumption of 10·3 lbs. of oil per 100 lbs. of metal heated. For pot furnace work a tilting crucible furnace takes about 10 lbs. of oil per 100 lbs. of gunmetal melted, an open-hearth furnace about 11·8 lbs., and a lift-out furnace about 12·5 lbs. of oil. Stock converter furnaces for melting cast iron and steel-making take about 15 lbs. of oil per 100 lbs. of metal for melting only, but the total, including lighting and heating up, runs to about 40 lbs. In glass works the tank type of furnace takes about 37 lbs. per 100 lbs. of finished glass. An Italian plant of open-hearth Siemens basic furnaces of 55 tons capacity, with an output of 150 tons of steel per 24 hours per furnace, the oil consumption ranges from 16·5 tons to 18·75 tons, or from 11 lbs. to 12·5 lbs. per 100 lbs. metal. The air pressure for atomisation was 4 kilos. per sq centimetre.

The Burdon Oil-Gas System.

In this system the oil fuel, first very finely atomised and intimately mixed with a large volume of air at *low pressure*, is converted into gas in a small retort, and from the retort the gas is delivered into the furnace (through pipes of varying diameters), where, by the regulation of the air supply, any desired flame can be obtained. The intimate mixture of gas and air produces very high heating results, the full calorific value of the fuel being obtained.

The temperature is regulated by adjusting the valves which control the oil and air supplies.

By proper regulation of the air the fuel burns with a non-luminous Bunsen flame, and complete combustion with entire absence of smoke is easily secured.

The air and fuel can be supplied in any proportion desired, so that the flame in the furnace may be either reducing, oxidising, or neutral as desired.

A furnace 10 feet by 6 feet can be brought from cold to approximately 3,000° F. in less than three hours.

The Burdon system can be used for billet heating, slab and bloom heating, chain making, all kinds of welding and forging, case-hardening, tube heating, rivet and bolt making and heating, tin smelting, tool heating, horseshoe making, etc., also for steam raising, superheating, glass melting, metal melting, assaying, insulator making, etc.

Later developments effected in this system enable any quality of liquid fuel, either heavy crude fuel oil, or such as a mixture of 50 per cent. pitch and 50 per cent. of a tar-oil, or, alternatively, any of the lighter fuel oils, such as creosote and gas oils, etc., to be used with results giving high heating efficiency and economy in oil fuel.

The furnaces, which are made in various sizes, from small portable rivet heaters up to large forging types, consist of a combined generator and heating chamber. The oil is contained in the tank, from which it flows, without pressure, to the atomiser and the hot carburettor, where it is vaporised and intimately mixed with the air supply, forming a combustible gas, which passes to the actual heating chamber. The waste gases from this chamber pass through flues to the upper chamber to maintain a sufficient heat in the carburettor, to gasify the oil fuel.

Among the advantages claimed for this system are:

Cleanliness of installation and economy of space.

The producers can be applied to existing furnaces with a minimum of alteration or reconstruction.

Remarkably small fuel consumption, and no coal or coke trimming, stoking, or removal of clinker or ashes.

The cost and time of working is less than for coal or coal gas-fired furnaces.

Compressed Gas System.

There is an optimum pressure for the various applications of gas, and in order to meet this the gas can first be compressed to (say) 280 inches head of water (about 10 lbs. per sq. inch) which can be controlled at the various furnaces, etc., to the pressure required at each place. Pressures for typical work are as follows:—For melting tin or solder 65 inches; small hardening furnaces 65 inches; for blueing steel 65 to 80 inches; for the steel tempering lead pot 150 inches; while for melting metals at 2,000° F. to 2,600° F. 200 inches should be used.

Soldering irons can be heated at 65 inches pressure, which pressure is also convenient for the lighting.

With gas at 2*s*. per 1,000 and coal at 20*s*. per ton, there is little to choose between gas and coal firing as regards fuel costs. As regards cleanliness, uniformity, wear and tear of pots, and accuracy of control, the advantages are however in favour of gas, and in many cases with properly

GAS MUFFLE FURNACE FOR HEATING HIGH-SPEED TOOLS.

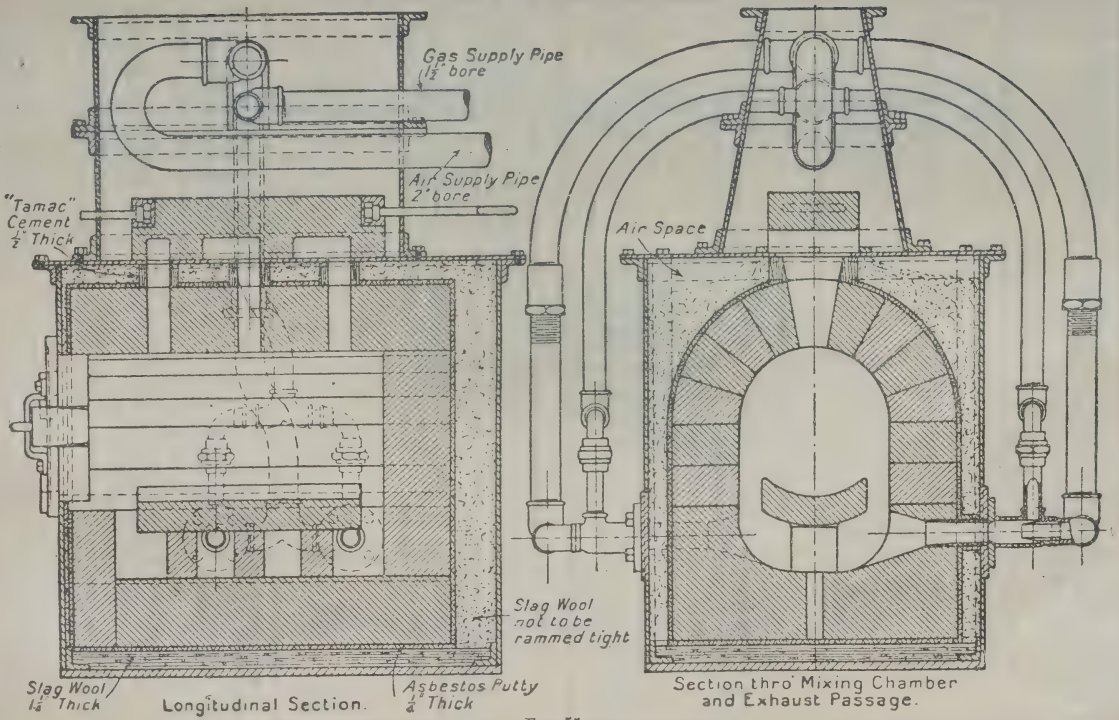


FIG. 55.

designed furnaces it is greatly superior to coal, not only from the point of view of cost, but from convenience, reliability, and ease of manipulation. There is also a large saving of time taken and space occupied by a gas furnace as compared with a coal furnace of similar power, factors of great importance when increased output is called for.

Low-pressure gas with air blast is largely adopted.

TABLE OF COMPRESSOR DATA.

Capacity of Compressor. Cub. ft.	H.P. required.	Floor Space. Ins.
100	·12	18 by 7½
200	·25	22 „ 9
500	·5	23 „ 12
1,000	1·0	27 „ 17
2,000	1·5	32 „ 19
4,000	2·5	40 „ 23
10,000	3·5	48 „ 29

Colours of Tempered Steel.

The *tempering* in this case relates to lowering the degree of hardness obtained by plunging the steel when heated to a cherry red (1,650° F., 899° C.) in cold water :—

Colour.	F.°	C.°	Colour.	F.°	C.°
Very pale yellow	430	221·1	Dark purple	550	287·8
Straw yellow	460	237·8	Clear blue	570	298·9
Brown yellow	500	260·0	Pale blue	610	321·1
Bright purple	530	276·7	Blue tinged with green	630	332·2

Composition of Quenching Baths for Tempering Cutting Tools.

Fused nitrates of potassium and of sodium are too high in temperature for certain cutting tools, as they do not permit of cooling below 328° F. (220° C.). Mixtures of nitrate of potassium and of nitrate of sodium can, however, be employed, and a series of mixtures, fusing at different temperatures, be obtained.

Temperature.		Nitrate of Potassium.	Nitrate of Sodium.	Temperatures.		Nitrate of Potassium.	Nitrate of Sodium.
F.°	C.°			F.°	C.°		
536	280	0 parts	100 parts	279	137	55 parts	45 parts
446	230	20 „	80 „	293	145	60 „	40 „
342	172	40 „	60 „	437	225	80 „	20 „
293	145	50 „	50 „	635	335	100 „	0 „

Higher temperatures than 752° F. (400° C.) cannot be obtained with these mixtures. In steels where without extreme hardness absolute absence of brittleness is necessary, 932° F. (500° C.) to 1,112° F. (600° C.) are temperatures more suitable. The following bath gives, on fusion, a temperature of 932° F. (500° C.) :—

Sodium chloride, 1 part; potassium chloride, 1 part; fused calcium chloride, 2 parts; hydrated barium chloride, 1 part; hydrate strontium chloride, 3 parts.

For a bath fusing at 1,292° F. (700° C.) the following mixture may be used :—

Hydrated boric acid crystals, 1 part; silver sand, 1½ part; anhydrous potassium carbonate, 1 part; anhydrous sodium carbonate, 1 part.

When prolonged treatment is required, a little cyanide or charcoal may be added to prevent superficial decarburisation; but, in view of the strongly cementating action of cyanide, this salt must be used with caution.

QUENCHING LIQUIDS.

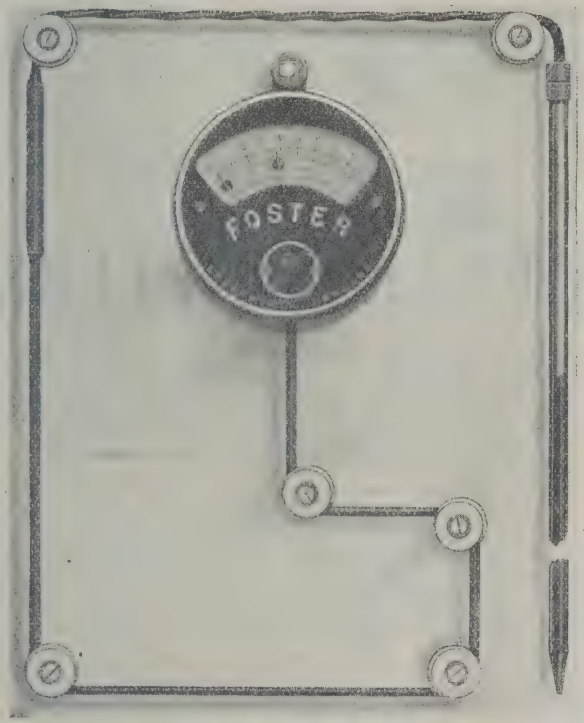
When hot steel is continually dumped into a tank of oil, the lighter and volatile oils are evaporated and finally only the heavier oils will be left. When the oil becomes thick, it will not take the heat away from the steel rapidly; consequently, the steel will be soft and will not

PYROMETERS

FOR ALL BRANCHES OF ENGINEERING

Indicating, Recording, Portable or Fixed, Radiation, Thermo-electric or Resistance Types.

Also other Scientific Apparatus for Engineers.



FOSTER INSTRUMENT CO.

(*CHARLES EDWIN FOSTER, Sole Proprietor, British*)

LETCHWORTH, HERTS, ENGLAND.

Telegrams : 'FOSTER INSTRUMENTS, LETCHWORTH.' Telephone : LETCHWORTH 26.

NOTHING IN TIPPED TOOLS EXCEPT THE J.B.R.

Specially designed Super High Speed Steel—Substantial article—Can take any cutting job in its stride.

THEY ARE

RECORD MAKING
RECORD SAVING

METAL SHIFTERS

'J.B.R.' Tips stop on and do their job. Ordinary tipped tools cannot be guaranteed in this respect and a 'J.B.R.' outlives such by 3 to 6 times.

'J.B.R.' TOOLS have a substantial piece of High Speed Steel, the best Sheffield skill can make, scientifically welded on to a toughened '5 Carbon Steel Shank. An obvious saving. Four to five months' life per Tool. Dead hard all through. No forging. Ready for use. Why buy H.S.S. to make Tools when you can now buy the Tools? Delivery from stock.

Send for Lists and get the combined skill of the oldest Steel and Tool Specialists.

'J.B.R.' TOOL CO. LTD.

Chell Street, Longsight, MANCHESTER

how the maximum physical properties. To obtain good results, the quenching liquid should be of a constant specific gravity and maintained at a temperature of 70° to 90°, but the exact temperature at which the bath is maintained does not matter so much if it is always the same. To ensure the best results, the bath should always be maintained at a certain specific gravity and at some certain temperature. (*'Machinery,' New York.*)

Grinding.

1. The tool should be forged roughly to shape and ground to the requisite contour by means of a composition wheel (preferably dry) without any lubricant being applied. The heating of the tool during grinding at this stage is not of any importance.

2. After shaping, the tool should be subjected to the two heat treatments indicated (page 984).

3. It is advisable to finish-grind with a copious stream of water playing on the nose of the tool. If reasonable care to avoid heating be exercised, the tool may be ground on a composition wheel running in water.

In hardening and tempering a chisel, the best way, says the *English Mechanic*, is to heat it to a very dull red for a good inch up from the edge, holding the tongs in the left hand, and in the right a rub stone, a piece of broken grindstone or emery wheel, or, failing these, a piece of emery cloth wrapped round a small file. Dip the chisel for about half-an-inch until it just turns black, then withdraw it from the water and let it rest against the side of the pail, so as to steady it; rub it sharply with the stone, so as to brighten it, and watch the colour as it runs down from the part which is still hot, and when the edge is of a deep plum colour, verging on blue, dip it right out.

Shape of Tool for Roughing Purposes.

The durability or length of time a tool will continue to cut under constant conditions as to feed, speed, etc., increases with the nose radius (fig. 56). The tendency to chatter, however, limits

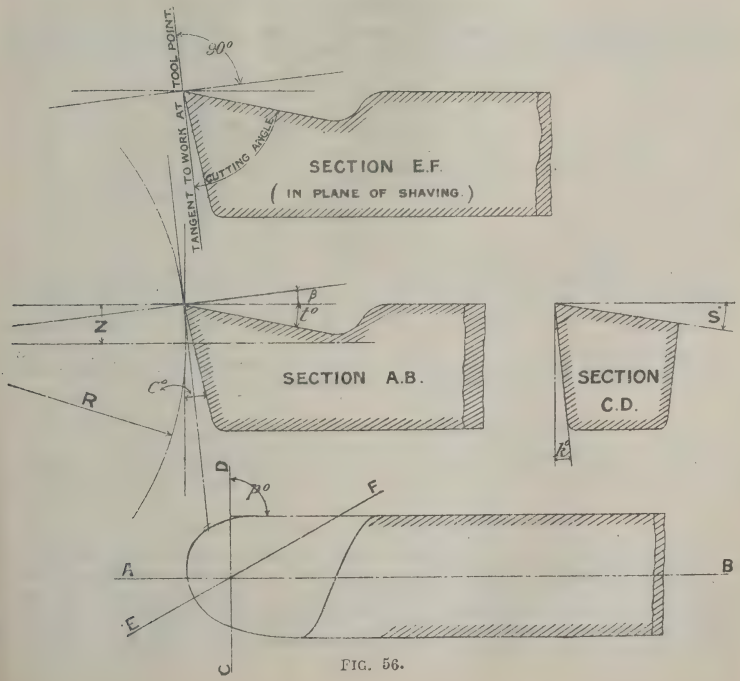


FIG. 56.

the extent to which the nose radius may be increased, and a round-nosed tool having a radius of $\frac{1}{8}$ in. to $\frac{1}{4}$ in. has been found to give the most satisfactory results for the general run of work. With work of a springy character a smaller nose radius may be required. The durability is also affected by the cutting angle, i.e., the angle between the cutting face of the tool and the tangent to the work or 90° minus the top rake angle. The cutting angle is increased when the tool edge stands above the centre of the work, by an amount equal to the angle contained between the cutting edge of the tool and the axis of the bar.

The cutting angles which give the greatest durability to tools for roughing purposes are as follows:

Material.	Cutting Angle.	Material.	Cutting Angle.
Soft steel	65°	Soft cast iron	70°
Medium steel	70°	Medium cast iron	75°
Hard steel	80°	Hard Cast Iron	85°
Nickel steel	80°	Brass	85°
Manganese steel	85°	Hard gunmetal	85°

The above angles are measured in a plane at 45° to the length of the tool which is approximately the plane of the shaving. The side and front clearance angles for tools with cutting edges on the line of centres need not exceed 6°. The shape of the tool recommended is shown below.

Front top rake ($t°$); height above centre (Z); front top rake (reduced to centre) ($\beta + t°$); side top rake (S°); front clearance ($C°$); radius of work (R); angle (β); front clearance reduced to centre) ($C°-\beta$); side clearance ($k°$).

Steel Tool Shanks.

By the ordinary method of welding, or securing by other means, high-speed steel tips to ordinary steel tool shanks, the shank is weakened considerably at the point where the high-

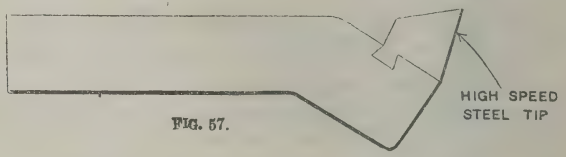


FIG. 57.

speed tip is applied, owing to the shank being cut away to accommodate the steel tip. In the J.B.R. system (the *J.B.R. Tool Co., Ltd., Longsight, Manchester*), fig 57, the shank retains its original strength, the steel tip being held in a dovetail slot and brazed in position by a method which renders the two materials, when heat-treated, absolutely homogeneous at the joint.

The tools, which are stocked in a range of thirty-nine different shapes, each shape being manufactured in four sizes and two heights, are being largely used.

Sharpening-angles of Wood Machine Cutters.

Adzing soft wood across the grain, 30°; planing machines, ordinary soft wood, 30°; gouging and ploughing machines, 30° to 35°; hard-wood tool-cutters, 35° to 40°.

Cutting Speeds for Carbon Steel Lathe Tools.

The following table gives the appropriate cutting speeds for different depths of cuts and traverses when roughing out with carbon steel tools of the lathe type, having a nose radius $\frac{1}{8}$ in., on various metals. When finishing soft, medium, and hard steel the cutting speeds which may be used are 20 ft., 15·5 ft., and 11 ft. per minute, whilst for finishing soft, medium, and hard cast iron the cutting speeds are 24 ft., 19 ft., and 14 ft. per minute in the order given. When finishing brass and copper, speeds of 80 ft. and 150 ft. per minute respectively should be adopted. The finishing cut should not exceed $\frac{1}{32}$ in. in any case. (*Dempster Smith.*)

TABLE OF CUTTING SPEEDS IN FEET PER MINUTE FOR CARBON STEEL LATHE TOOLS.

Cut.	Transverse.	Soft Steel.	Med. Steel.	Hard Steel.	Soft C. I.	Med. C. I.	Hard C. I.	Med. gunmetal	Soft Brass.
1/64	1/64	40·0	32·0	24·0	32·0	27·0	20·0	50·0	100·0
1/32	"	38·0	31·4	22·5	30·5	25·0	18·0	46·0	90·0
1/16	"	36·0	30·0	21·0	28·3	22·6	17·0	40·3	79·2
3/32	"	34·0	28·5	20·0	25·6	20·4	15·3	35·2	71·5
1/8	"	33·0	27·0	19·0	23·8	19·0	14·3	32·0	66·6
5/32	"	32·0	26·0	18·6	22·5	18·0	13·5	29·7	63·0
3/16	"	31·5	24·5	17·5	21·5	17·2	12·9	28·0	60·2
7/32	"	30·0	23·2	16·6	20·7	16·5	12·4	26·6	57·9
1/4	"	28·6	22·2	15·9	20·0	16·0	12·0	25·4	56·0
1/64	1/32	36·0	31·4	22·5	30·5	25·0	18·0	46·0	90·0
1/32	"	34·0	30·0	21·0	28·2	22·6	17·0	40·3	79·2
1/16	"	32·0	27·0	19·0	23·8	19·0	14·3	32·0	66·6
3/32	"	30·0	24·5	17·5	21·5	17·2	12·9	28·0	60·2
1/8	"	28·6	22·2	15·9	20·0	16·0	12·0	25·4	56·0
5/32	"	26·5	20·6	14·7	18·9	15·1	11·3	23·6	52·9
3/16	"	25·0	19·4	13·9	18·1	14·5	10·8	22·2	50·6
7/32	"	23·7	18·4	13·2	17·4	13·9	10·4	21·1	48·7
1/4	"	22·7	17·6	12·6	16·8	13·4	10·1	20·2	47·0
1/32	1/16	32·0	26·0	19·0	23·8	19·0	14·3	32·0	66·6
1/16	"	28·6	22·2	15·9	20·0	16·0	12·0	25·4	56·0
3/32	"	25·0	19·4	13·9	18·1	14·5	10·8	22·2	50·6
1/8	"	22·7	17·6	12·6	16·8	13·4	10·1	20·2	47·0
5/32	"	21·1	16·4	11·7	15·9	12·7	9·5	18·7	44·5
3/16	"	19·8	15·4	11·0	15·2	12·2	9·1	17·6	42·6
7/32	"	18·8	14·6	10·5	14·6	11·7	8·8	16·7	40·9
1/4	"	18·0	14·0	10·0	14·1	11·3	8·5	16·0	39·5
1/32	3/32	30·0	24·0	17·5	21·5	17·2	12·9	28·0	60·2
1/16	"	25·0	19·4	13·9	18·1	14·5	10·8	22·2	50·6
3/32	"	21·8	17·0	12·1	16·3	13·1	9·8	19·4	45·7
1/8	"	19·8	15·4	11·0	15·2	12·2	9·1	17·6	42·6
5/32	"	18·4	14·3	10·2	14·4	11·5	8·6	16·4	40·2
3/16	"	17·3	13·5	9·6	13·7	11·0	8·2	15·4	38·4
7/32	"	16·4	12·8	9·1	13·2	10·6	7·9	14·6	37·0
1/4	"	15·7	12·2	8·7	12·8	10·2	7·7	14·0	35·8
1/16	1/8	22·7	17·6	12·6	16·8	13·4	10·1		
3/32	"	19·8	15·4	11·0	15·2	12·2	9·1		
1/8	"	18·0	14·0	10·0	14·1	11·3	8·5		
5/32	"	16·7	13·0	9·3	13·4	10·7	8·0		
3/16	"	15·7	12·2	8·7	12·8	10·2	7·7		
1/4	"	14·3	11·1	7·9	11·9	9·5	7·1		
3/8	"	12·5	9·7	6·9	10·8	8·6	6·5		
1/2	"	11·3	8·8	6·3	10·0	8·0	6·0		
1/8	1/4	14·3	11·1	7·9	11·9	9·5	7·1		
1/16	"	12·5	9·7	6·9	10·8	8·6	6·5		
1/4	"	11·3	8·8	6·3	10·0	8·0	6·0		
5/16	"	10·5	8·2	5·8	9·5	7·6	5·7		
3/8	"	9·9	7·7	5·5	9·0	7·2	5·4		
1/2	"	9·0	7·0	5·0	8·4	6·7	5·0		
5/8	"	8·4	6·5	4·6	8·0	6·4	4·8		
3/4	"	7·9	6·1	4·4	7·6	6·1	4·6		

For ordinary Mushet steel the above speeds may be increased from 33 per cent. in the case of the lighter cuts to 50 per cent. for the heavy cuts.

The following table gives the revolutions per minute for different cutting speeds and diameters of work or cutters:—

RELATION BETWEEN REVOLUTIONS, CUTTING SPEEDS AND DIAMETERS OF WORK.

Cutting Speed in Ft. per Min.	Diameter of Work or Cutter, in Inches.																	
	½	⅝	¾	⅞	⅞	⅞	1	1⅛	1¼	1½	1¾	2	2½	3	3½	4	5	6
10	152	102	76	61	51	44	38	34	30	25	22	19	15	13	11	10	8	6·3
15	229	153	115	92	76	65	57	51	46	38	33	29	23	19	16	14	12	10
20	305	204	153	122	102	87	76	68	61	51	44	38	31	25	22	19	15	13
25	382	255	191	153	127	109	95	85	76	64	55	48	38	32	27	24	19	16
30	458	306	230	184	153	131	114	102	92	76	65	57	46	38	33	29	23	19
35	535	357	268	214	178	153	133	119	107	89	76	67	53	45	38	33	27	22
40	611	407	306	245	204	175	153	136	122	102	87	76	61	51	44	38	31	25
45	686	458	344	275	229	197	172	153	138	115	98	86	69	57	49	43	34	29
50	764	509	382	306	255	218	191	170	153	128	109	95	76	64	55	48	38	32
60	917	611	459	367	305	262	229	204	183	153	131	115	92	76	66	57	46	38
70	—	713	535	428	356	306	267	238	214	178	153	134	107	89	76	67	54	45
80	—	815	611	489	407	349	306	272	244	204	175	153	122	102	87	76	61	51
90	—	917	688	550	458	393	344	305	275	229	196	172	138	115	98	86	69	57
100	—	—	764	611	509	437	382	339	305	255	218	191	153	128	109	96	76	64
110	—	—	841	672	560	480	420	373	336	280	240	210	168	140	120	105	84	70
120	—	—	917	734	611	524	458	407	367	306	262	229	183	153	131	115	92	76
130	—	—	994	795	662	568	497	441	397	331	284	248	199	166	142	124	99	83
140	—	—	—	856	713	611	535	476	428	356	306	268	214	178	153	134	107	89
150	—	—	—	917	764	655	573	509	458	382	327	287	229	191	164	143	115	95

Cutting Speed in Ft. per Min.	Diameter of Work or Cutter, in Inches.																	
	7	8	9	10	12	16	20	24	30	36	42	48	60	72	84	96	108	120
10	5·4	5	4	3·8	3·2	2·4	2	1·6	1·3	1	·9	·8	·6	·5	·5	·4	·4	·3
15	8	7	6	5·7	4·8	4	3	2	1·9	1·6	1·4	1·2	1	·8	·7	·6	·5	·5
20	11	10	8	7·7	6	5	4	3	2·5	2·1	1·8	1·6	1·3	1·1	·9	·8	·7	·6
25	14	12	11	10	8	6	5	4	3·2	2·6	2·3	2	1·6	1·3	1·1	1	·9	·8
30	16	14	13	11	10	7	6	5	3·8	3·2	2·7	2·4	1·9	1·6	1·4	1·2	1	1
35	19	17	15	13	11	8	7	6	4·5	3·7	3·2	2·8	2·2	1·9	1·6	1·4	1·2	1·1
40	22	19	17	15	13	10	8	6·3	5·1	4·2	3·6	3·2	**2·6**	**2·1**	1·8	1·6	1·4	1·3
45	25	21	19	17	14	11	9	7	5·7	4·8	4·1	3·6	2·9	2·3	2	1·8	1·6	1·4
50	27	24	21	19	16	12	10	8	6·5	5·2	4·6	4	3·2	2·6	2·3	2	1·8	1·6
60	33	29	25	23	19	14	11	10	8	6·4	5	4·8	3·8	3·2	2·7	2·4	2·1	1·9
70	38	33	30	27	22	17	13	11	9	7·4	6	5·6	4·5	3·7	3·2	2·8	2·5	2·2
80	44	38	34	31	25	19	15	13	10	8·5	7	6	5·1	4·3	3·7	3	2·8	2·6
90	49	43	38	34	28	21	17	14	11	9·6	8	7	5·8	4·8	4·1	3·6	3·2	2·9
100	55	48	42	38	32	24	19	16	13	10	9	8	6·4	5·3	4·6	4	3·6	3·2
110	60	53	47	42	35	26	21	18	14	12	10	9	7	5·8	5	4·4	3·9	3·5
120	65	57	51	46	38	29	23	19	15	13	11	10	7·7	6·4	5·5	4·8	4·2	3·9
130	71	62	55	50	41	31	25	21	17	14	12	10·4	8	6·8	5·9	5	4·6	4·2
140	76	67	59	53	45	33	27	22	18	15	13	11	9	7·4	6·3	5·6	5	4·5
150	82	72	64	57	48	36	29	24	19	16	14	12	10	7·9	6·9	6	5·3	4·8

CUTTING WITH ORDINARY AND HIGH-SPEED STEEL.

Steel.

Trials showed that 20 ft. per minute with a cut of $\frac{1}{16}$ in. by $\frac{1}{16}$ in. is the superior limit of speed for ordinary water-hardened steel operating upon Whitworth fluid-compressed soft steel;

whilst an ordinary Mushet tool can run at over 30 ft. per minute, with a $\frac{3}{16}$ in. by $\frac{1}{16}$ in. cut upon the same material.

Cast Iron.

The trials on *medium cast iron* showed that 25 ft. per minute is too high a speed with $\frac{3}{16}$ in. by $\frac{3}{16}$ in. cuts; 17 ft. is too high with $\frac{3}{16}$ by $\frac{1}{16}$ in. cuts; and 15 ft. is too high with $\frac{3}{16}$ in. by $\frac{1}{8}$ in. cuts for ordinary water-hardened tool steels. An ordinary Mushet ran for over 20 minutes at 23·6 ft. per minute on a $\frac{1}{16}$ in. by $\frac{1}{16}$ in. cut; whilst it failed at 19 ft. per minute on a $\frac{5}{16}$ in. by $\frac{1}{16}$ in. cut, and at 15 ft. per minute on a $\frac{5}{16}$ in. by $\frac{1}{4}$ in. cut on this material.

In the case of *soft cast iron*, 22 ft. per minute was too high a speed for water-hardened steel taking a $\frac{5}{16}$ in. cut by $\frac{1}{8}$ in. traverse; whilst an ordinary Mushet lasted over half an hour at 31·6 ft. per minute with the same cut upon the same material.

Heavy cuts are much more economical in power, for the waste work is a much larger proportion of the whole work required at light cuts than at heavy cuts. It is probably this fact which has given rise to the commonly accepted opinion that the cutting stress increases with the speed (as instanced by the objections of workmen to increase cutting speeds on account of the anticipated springing of the work), contrary to the results of these trials, which rather show the reverse to be the case. In soft steel, for example, the average horse-power required for actual cutting at $\frac{1}{4}$ in. by $\frac{1}{16}$ in. was 3, while at $\frac{3}{8}$ in. by $\frac{1}{8}$ in. it was 15. The friction horse-power of lathe and counter-shaft was about $2\frac{1}{2}$ h.p. The weight removed was about 105 lbs. and 445 lbs. per hour at the light and heavy cuts respectively, so that the weight removed per gross h.p. hour was 19·1 lbs. for the light and 25·3 lbs. for the heavy cut. Neglecting frictional loss, these figures would have been 35 and 29 respectively.

In the case of cast iron, the gain in power at the heavier cuts is still more conspicuous. Here the effective h.p. was 1·7 and 5·5 at the $\frac{1}{4}$ by $\frac{1}{16}$ and $\frac{3}{8}$ by $\frac{1}{8}$ cuts respectively, the waste h.p. being about 2. The weights removed were 42 lbs. and 198 lbs. per hour, and the weights per h.p. hour were therefore: 11·35 lbs. at the light cut, and 26·5 lbs. at the heavy cut.

These results show that more material can be removed in a given time with a heavy cut at its proper speed than with a light cut at the highest speed which the new steels can take, and that this can be done at a smaller expenditure of gross power per ton of shavings removed.

VARIATION OF CUTTING FORCE WITH AREA OF CUT, AND OF CUTTING STRESS OBTAINED IN THE ABOVE TRIALS.

For steel the cutting force is simply proportional to the area of cut, and this force has the following approximate values in tons per sq. in.:—

For soft steel (fluid compressed)	. 115	For soft cast iron	51
„ medium steel „ „	. 108	„ medium iron	84
„ hard steel „ „	. 150	„ hard iron . . .	82

Fine traverses take more power than coarse ones.

Cutting stress does not vary much with speed, but tends to diminish.

Special high-speed tool steels will cut twice as fast as ordinary Mushet steel, and more than four times as fast as ordinary water-hardened steel.

(*Proc. Manchester Assoc. of Engrs.* 1903.)

Cutting Lubricants.

The mineral oils best suited for use as cutting lubricants, either alone or mixed with animal or vegetable oil, are preferably of pale colour and low viscosity, ranging from 100 to 200 seconds Redwood at 100 deg. F., those of lower viscosity being used for high-speed conditions and those of higher viscosity for slow speeds. Tinged lard oil, containing as much as 10 or 15 per cent. of free fatty acid, is the animal oil most frequently used, either alone or in admixture; prime lard oil, which is almost free from acid, is more expensive, but is less inclined to gum under severe conditions of heavy cut and high speed. Wherever possible a mixture of lard oil and low cold test mineral oil is to be preferred on account of greater fluidity in the cold. Cottonseed oil oxidises more readily than rape oil, and should not be used for cutting lubricants that are to be employed in a circulation system.

Good cutting oils used straight will not cause rusting, but those containing fixed (animal or vegetable) oils, such as lard oil with a large percentage of free fatty acid, will give rise to verdigris on brass. Vegetable oils such as rape, with a small percentage of free acid, do not produce verdigris unless they are rancid. Cutting emulsions made up from cutting compounds or soluble oils and water cause rusting if they are used too weak or if they contain acid. Water containing sodium chloride is most destructive to emulsions and must not be used, nor must hard water on account of the precipitate caused by the calcium and magnesium salts in it. Emulsions of oil and water are not stable in the presence of even minute quantities of acid; to a limited extent they can be reformed by neutralising the acid with ammonia, but excess of alkali may facilitate corrosion.

Factors in Selection.

Low speeds and shallow cuts require little cooling and lubrication. Low speeds and heavy cuts demand a lubricant of great oiliness, particularly if the material is tough. High speeds and shallow cuts demand a cutting medium with great cooling properties; hence emulsions are favoured and should be used if the speeds are particularly high. Turpentine substitute is a satisfactory lubricant for aluminium, but being inflammable must be used with care. A mixture of paraffin oil and lard or other cutting oil for high speed work on aluminium is also dangerous and has led to several fires. Cutting emulsions which possess the necessary cooling properties, and are not inflammable, are to be preferred. High speeds and heavy cuts demand a cutting lubricant with great cooling and lubricating properties; hence heavily compounded cutting lubricants of low viscosity must be used. For tough material and heavy cuts an emulsion containing 15 to 20 per cent. of a vegetable oil has been reported to be satisfactory.

Cutting emulsions are nearly always used for brittle material, and frequently for tough material if the speeds are high and the cuts light; when the material is tough and the cut heavy it is necessary to employ cutting lubricants used straight and containing 10 to 50 per cent. of animal or vegetable oils, or consisting entirely of such oils. Emulsions, in some cases, have been found to form a deposit on the working parts of automatic screw-cutting machines; this may be avoided by using straight oils, but emulsions should be adopted wherever possible in view of the present scarcity of oil. The amount of soluble oil or soluble compound used in preparing the cutting emulsion varies from 2½ to 20 per cent.; the richer mixtures are used for severe conditions, and the weaker for light duty or for materials like brass and aluminium, where there is no danger of rusting.

The cutting lubricant may be applied by hand by a drop-feed system, or by some system employing gravity or pumping. In large machine shops the cutting oil is sometimes circulated in pipes throughout the works, returning through other pipes to a central tank; group systems with central tanks are excellent where one mixture is used for all the machines on the circuit. The return pipes should be large and arranged for easy access for cleaning; isolating valves should be employed to sectionalise the system when large; efficient strainers should be fitted on all return pipes and pump sections, and should be cleaned daily. Tanks, as a rule, should be cleaned out every four weeks, and return pipes every four months. Any scum formed should be skimmed off the tanks daily. It must be remembered that the oil or emulsion, in any system in which it is circulated over and over again, is exposed to the admixture of dust and dirt from the machine shop and to the oxidising influence of air. The suction of any pumps that are employed should always be covered to prevent air from being drawn in, since aeration of the oil or emulsion has a strong oxidising effect upon it.

In machining aluminium (drilling, planing, etc.), use a lubricant of lard oil, kerosene, or a mixture of kerosene and gasolene or lard oil, for free cutting and a good finish.

Effects on Health.

Workers should be instructed not to wipe their hands on rags before washing and to avoid washing their hands in the cutting compounds. Ether soap, which dissolves oil, has been found useful in preventing inflammation of the hair follicles, and dusting the arms with a powder containing equal parts of starch and zinc oxide before starting work prevents the action of the oil on the skin.

Workers whose hands have become the seat of septic infection should not be allowed to work on machines, as they are liable to infect the oil with germs and so infect others. As a general rule frequent washing with soap and hot water is sufficient to bring about rapid cure of folliculitis produced by plugging of the glands. Subsequently the skin may be dusted with zinc oxide and starch powder, and where this has been insufficient a mild antiseptic applied on lint has relieved the irritation and given good results. Septic infection of the skin due to cuts should be treated on general principles with suitable antiseptic dressings.

(*Bulletin No.* 2, *the Department of Scientific and Industrial Research.*)

PORTABLE PNEUMATIC TOOLS.

The Boyer Long-Stroke Hammer.

This (fig. 58, p. 995) is one of the best and most generally used of all pneumatic riveting hammers at the present time. It has one distributing valve, which is placed at the rear end of the cylinder. The air-ports in the valve and cylinder of this hammer are so designed that the full air pressure is available to drive the piston forward on its working stroke, but the ports in valve and cylinder provided for effecting the return or idle stroke of the piston are of small area, so that the pressure used for this work is considerably reduced by wire-drawing, and the piston is returned practically without shock to the operator. The vibration of these hammers is thus reduced to a minimum.

For holding up against the riveting hammer, any of the present hand methods may be employed, and quite good work can be done either with the old-fashioned mawl, or a plain dolly bar consisting of a piece of wrought iron weighing about 28 lbs. Where a suitable backing can be

THE BOYER LONG-STROKE RIVETING HAMMER.
(*The Consolidated Pneumatic Tool Co. Ltd.*)
FIG. 58.

THE NEW GIANT DRILL.
(*The Consolidated Pneumatic Tool Co. Ltd.*)
FIG. 59.

found for it, the pneumatic piston holder-on is most useful, and for boiler work and in certain classes of heavy shipyard riveting the hammer type of holder-on is frequently used. This gives a series of blows on the head of the rivet whilst it is being formed.

Pneumatic riveting hammers are now recognised as thoroughly practical and efficient tools for dealing with any class of work which was formerly done by hand, and rivets from ¼ in. up to 1½ in. diameter can be closed by suitable tools. It takes from 7 to 10 seconds to close a ¾ in. snap-headed rivet.

The air consumption of these tools is generally 25 cubic feet of free air per minute, and the pressure may be from 80 to 100 lbs. per square inch, the latter figure being necessary for the heaviest class of riveting, and particularly for steam- or water-tight work.

Caulking Hammers.

The chipping or caulking hammer has now taken its place as an indispensable every-day tool, without which present rates of output could not be maintained. The average chipping hammer will remove mild steel at the rate of 3½ to 4 oz. per minute, and the air consumption is from 17 to 20 cubic feet of free air per minute: pressure from 80 to 100 lbs. per square inch.

Drills.

A pneumatic drill of average size can be relied upon to drill in mild steel plate 1 in. diameter holes at the rate of 1 in. to 1½ in. deep per minute, and larger and smaller holes in proportion, the air consumption varying from 30 cubic feet in the average drills to 50–60 in the larger tools. Usual air pressure 80 lbs. per square inch. Reamering and tapping are also among the varied uses to which these tools can profitably be put. Pneumatic drills are now available in a large range of sizes, from a tool weighing 8 lbs. for drilling $\frac{3}{16}$ in. holes up to a weight of 85 lbs. and a capacity for 3 in. drilling and tapping. (See fig. 59, page 995.)

Pneumatic Tools for Salvage Work.

The chipping hammer and drill mentioned above can be fitted for use under water, for ship repairs, dock construction, and other similar work, and are already very largely used in this connection.

Air Mains and Receivers.

Air Mains for the distribution of compressed air are generally made of wrought-iron piping of steam quality, and should be so arranged that the rate of flow will not very much exceed 50 feet per second. At intervals along this main, or wherever tools are likely to be employed, a tee piece should be inserted which will take a connection for the flexible rubber hose which joins up to the tools. An important point to take care of is the provision of adequate means for draining any moisture from the air receiver or the pipe lines themselves, and it is advisable to arrange for the discharge of the compressor to deliver the air at the top of the receiver, and to connect the air main lower down. This assists in depositing any moisture which may be in the air as delivered from the compressor.

Air Receivers should be fitted with a manhole, in order that their interior condition may be examined from time to time, as it is possible for corrosion to take place, or on the other hand, if the lubrication of the compressor is not carefully attended to, a large deposit of oil will be formed, which may result in an explosive mixture being present in the receiver.

Tubing and Tube Couplings.

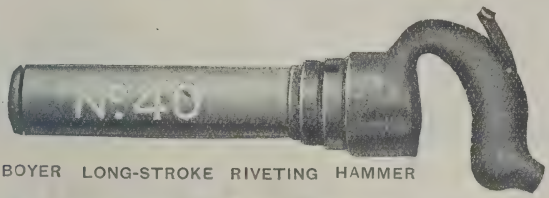
Flexible Metallic Tubing (*The United Flexible Metallic Tubing Co. Ltd.*, 112 *Queen Victoria Street, London*) is being largely used for pneumatic tools. As the tubing withstands crushing and cannot kink, it is well adapted for conveying compressed air to pneumatic drillers and other machines.

Belliss & Morcom Pneumatic Hose Coupling.

This coupling (fig. 60) which is simple in construction and convenient in use, does not rely on springs to maintain its lock, being immediately sealed by the internal pressure, and cannot unlock of its own accord in or out of use. It is claimed to be absolutely air-tight; easily and quickly disconnected; practically unbreakable, being made from steel bar; dust-proof, and being gun-blacked, will not easily rust. Having no external projections, it can be easily drawn through close quarters or past work lying about the shop.

BOYER

PORTABLE PNEUMATIC HAMMERS FOR RIVETING, CHIPPING, CAULKING, &c



BOYER LONG-STROKE RIVETING HAMMER

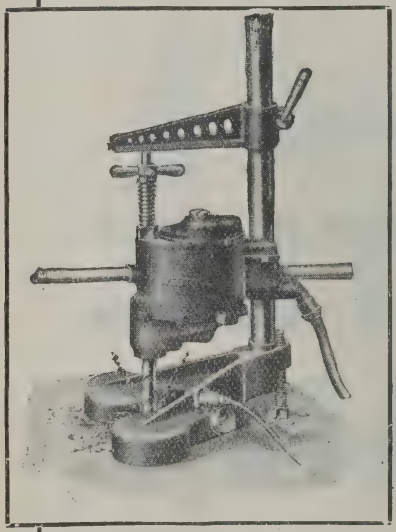
LITTLE GIANT

PORTABLE PNEUMATIC AND ELECTRIC DRILLS AND GRINDERS.
USED THROUGHOUT THE WORLD.

Write for Pneumatic and Electric Tool Catalogues.

THE CONSOLIDATED PNEUMATIC TOOL CO. LTD.,
EGYPTIAN HOUSE, 170 PICCADILLY, LONDON, W.1.
Tel. Address: 'Caulking, Piccy, London.' Tel. No. 9215 Gerrard (4 lines).
Works: FRASERBURGH, SCOTLAND.
— BRANCHES EVERYWHERE. —
AIR COMPRESSORS—ROCK DRILLS—OIL ENGINES.

THE WESTOOL IS THE BEST TOOL



WESTOOL DRILL WITH MAGNETIC DRILL STAND.

FOR ELECTRIC

Drilling
Reaming
Tapping
Tube-Expanding

SHORTEST LENGTH—LONGEST FEED—GREATEST POWER—of any similar size drill.

Further particulars on pages 960, 961.

Write for Prices to :—

The WESTMINSTER TOOL & ELECTRIC Co.

WESTOOL WORKS, PUTNEY, LONDON, S.W. 15.

Telephone: Putney 1179. Telegrams: 'Westolelco, Put, London.'

Glasgow Office - - 72 Waterloo Street.

Telephone: Central 1841. Telegrams: 'Westolelco, Glasgow.'

F. 997

The rubber jointing being held securely in place, cannot blow out, but can be easily removed by hand for replacement when required.

It is screwed on the shank and tapered to facilitate fitting on the hose. The ends of each hose pipe can be locked together, thus giving a neat appearance when coiled up. Additional hose for extensions can be connected up instantly. The coupling is supplied in the following sizes:—½ in. gas for chipping hammers, drills, riddles, etc.; ¾ in. gas for riveting hammers, etc.; 2 in. gas for coal-cutting tools and pressure mains.

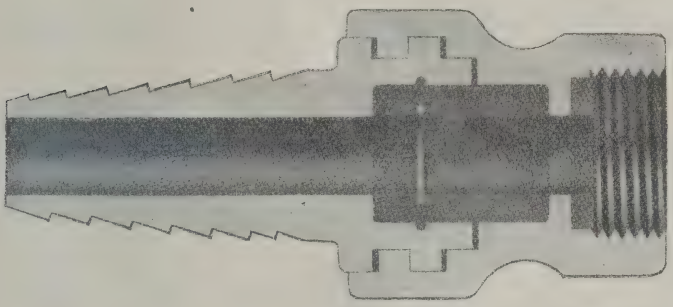


FIG. 60.

CARE OF PNEUMATIC TOOLS.

Unless pneumatic tools are kept clean, well lubricated, and limited to the uses for which they are intended, they will not give the service for which they are designed. Wherever possible, the air supply should be drawn from some point outside the building where the air is most apt to be clean, cool and dry. In any event, a strainer should be placed over the exposed end of the inlet pipe. Such a strainer can be easily made by covering the opening with wire netting over which one or two layers of muslin have been placed. A strainer should also be placed in the pipe lines leading directly to the pneumatic tools, and a strainer inserted between the pneumatic hammers and the hose nipple.

Lubrication.—Valves and pistons for both hammers and drills require a light machine oil, and as the compressed air which comes in direct contact with these parts has a tendency to drive the lubricant out through the exhaust, it is advisable to oil such parts freely and often, about once every hour while the tool is in constant use. Such portions of the tools as the gear and crank cases to which the compressed air does not have direct access are best lubricated with grease. This grease may be forced into the crank cases through the dead air handle by means of a squirt gun or syringe. A filling every 10 hours while the drills are in constant use gives the best results. It is a good plan to immerse pneumatic hammers in a bath of benzene or kerosene over-night and then blow them out under pressure the following morning, after which they should be thoroughly lubricated with a light machine oil.

Pneumatic Riveting.

According to information received from one of the leading East Coast shipyards, the best day's work on a shell with pneumatic riveting is 700 rivets of ⅞ of an inch diameter, and for hand work, under the same conditions, 430. An average day's work, however, is considerably less than this, and may be taken as being 510 rivets with pneumatic rivets, against 264 with a hand squad, the figures being taken for work on all parts of one ship. According to the *Board of Trade Journal* the following may be taken as indicating the difference in the day's work of a hand and pneumatic riveting squad:—On the shell, with ⅞ in. rivets, hand-riveting, 260 to 360 rivets; with pneumatic riveting, 500 to 550; on the deck, with ⅝ in. rivets, hand-riveting 450, pneumatic 700; on deck with ¾ in. and ⅞ in. rivets, hand-riveting 350, pneumatic 550. Again, the pneumatic tool requires fewer men to work it. A hand-riveting squad consists of three men and one or two boys. From two of these squads three pneumatic riveting squads can be formed, effecting a saving of 50 per cent. in labour alone. A third advantage of the pneumatic tool is that it gives both the other great advantages with less exertion and consequently less fatigue on the part of the men. (*Machinery.*)

Files.

DESCRIPTION.

Single-cut.		*Double-cut.*		*Rasp.*	
Rough	Second-cut	Coarse	Smooth	Coarse	Second-cut
Coarse	Smooth	Bastard	Dead-smooth	Bastard	Smooth
Bastard		Second-cut			

The terms 'rough,' 'coarse,' 'bastard,' 'second-cut,' 'smooth,' and 'dead-smooth,' have reference only to the coarseness of the teeth, while the terms 'single-cut,' 'double-cut,' and 'rasp' have special reference to the character of the teeth.

RE-SHARPENING FILES.

The sand-blast process consists of injecting fine sand against the backs of the teeth by means of a steam jet, and is applicable to all files, from the rasp to the finest Groubet files. The action of the sand is to cut away the backs of the file teeth, thus forming a straight level on the teeth back, and giving a new cutting edge, and the process occupies from 3 to 5 minutes.

Another method is first to carefully cleanse the files with hot water and soda; they are then brought into connection with the positive pole of a battery, in a bath composed of 40 parts sulphuric acid and 1,000 parts water. The negative (zinc) pole of the battery is connected to a copper spiral surrounding the files but not touching them. This arrangement is the result of practical experience. When the files have been in the bath for 10 minutes they are taken out, washed, and dried, when the whole of the hollows will be found to have been attacked in a sensible manner; but should the effect not be sufficient, the files are replaced in the bath for the same period as before. Sometimes two operations are necessary, but seldom more. The files thus treated are to all appearance like new ones, and are good for 60 hours' work.

Tube Cutters.

WINN'S STRAIGHT-CUT ROLLER TUBE CUTTER.

The particular feature in this cutter, fig. 61 (*Charles Winn & Co., Birmingham*), consists in widely separated duplex rollers, arranged in a block on the spindle end, making it practically impossible

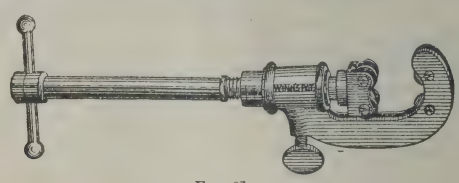


FIG. 61.

to set the tube cutter on the tube operated upon in any other way than absolutely at a right angle with it. All who have had occasion to cut a tube will realise the important gain this means, because no time is lost in cutting screw tracks on the tube, and there is no consequent breakage of cutters. The rollers save all friction on the tube, and two cutters are provided in the hook so that tubes can be cut off with great ease and speed. There is a further saving of time by the use of this tool, in the quick adjustment for different sizes ($\frac{1}{4}$ in. to $1\frac{1}{2}$ in. for one tool). The hook is of best malleable iron, and all other parts are of steel—the screw works in a long steel nut, and the rollers are hardened to prevent wear.

Cold Chisels.

A large number of the chisels now in use are not forged, shaped, and hardened in the best way to give long life and adequate service. Considering the making of a chisel from $\frac{3}{4}$ in. octagon tool steel, the following method has been found to give good results:—

Forging.—Cut off a length of steel, depending on the length of chisel desired, and heat up the end for 2 ins. to a bright cherry-red. Trim off two opposite sides so as to form a blunt-nosed

tool and eliminate the danger of lapping when drawing out. The horn of the anvil should be used in drawing out, inasmuch as this will have the least possible tendency to widen the piece, and therefore the minimum amount of 'edging-in' or hammering on the edge will be necessary. A chisel should not be hammered on the edge, because the grain of the steel will thereby be distorted or 'crumpled up,' and this always has a tendency to weaken any metal. If in the final forging operation the chisel gets a little too wide, it can be trimmed off on the emery-wheel during the grinding operation.

Draw the chisel out so that it will be about $\frac{1}{8}$ in. thick at the end and about $\frac{3}{8}$ in. thick and $1\frac{1}{4}$ in. back from the end. The forging should be finished with light blows until the steel has almost lost colour, but it absolutely must not be struck after the colour has disappeared. It is good practice to reheat the steel to a dull red without using any blast, and give it a second hammering with light blows until the colour has again almost disappeared.

The four important things to remember in forging a chisel are, therefore: Draw out at a



FIG. 62.



FIG. 63.



FIG. 64.

good cherry-red heat; finish with light blows at a dull-red heat; do not hammer after the colour has disappeared; hammer as little as possible on the edge, and then only when the steel is fairly hot.

Grinding.—Grind the chisel before it is hardened, as it can be ground faster in this way without the danger of drawing the temper. The shape of the edge of the chisel is very important, although this fact is often overlooked. Fig. 62 shows a chisel ground with a concave edge. If this is driven down on to a flat surface, it is obvious that a great strain will be put on the corners, and they are almost sure to break off. Fig. 63 shows a chisel ground with a perfectly flat edge. If this chisel is driven down on to a flat surface and held perfectly straight the cutting strain will be distributed evenly over the entire edge, and the chisel will be satisfactory. It must be remembered, however, that it is almost impossible to hold a chisel absolutely straight, and, therefore, either one corner or the other will be severely stressed by the chisel being tilted over. Fig. 64 shows a chisel ground with a slightly convex edge, which is by far the best for ordinary work. The corners of a chisel are always the danger point, and with the convex edge these corners are protected even when the chisel is tilted over considerably to one side or the other.

Hardening and Tempering.—After the chisel has been ground to the desired shape, heat it to a dull cherry-red colour for about $2\frac{1}{2}$ ins. from the end, and quench it vertically in cold water to a depth of $1\frac{1}{2}$ ins., moving it up and down until no red colour is left in any part of the steel. The part which has been drawn out should now be polished with emery cloth and the temper drawn to a dark purple or a blue by holding the chisel over the fire or in a furnace. Always draw a chisel a little more in winter than in summer. It has been recommended to harden the chisel back much farther than usual, because a chisel so made can be ground a great many times without redressing. (*Joseph T. Ryerson and Son, Chicago.*)

To Reduce the Internal Diameter of a Steel Bush.

A bush was required to be a force fit on a 6-in. shaft; and should have been bored 5·999 ins. ± 0·002 in., but was bored 0·015 too large.

The bush was heated to just a red, about 2 ins. up, at one end, and just 1 in. of the 2 ins. dipped in cold water. It was next heated another inch or two up, keeping the first cooled inch as cool as possible, and then dipped a further inch into water. This was continued inch by inch, each cooled inch apparently pulling in the inch in the length adjacent to it until the whole of the bush (or sleeve) was pulled in quite twenty thousandths, and required to be skimmed out 0·005 in. to force it on to its shaft. (*J. T. T.*, '*Machinery.*')

Gripping Pieces of Uneven Width in the Machine Vice.

If two or more pieces have to be held in the machine vice for drilling or other operation, and their widths differ slightly, a strip of lead, *s*, placed as shown in fig. 65 will compensate for the

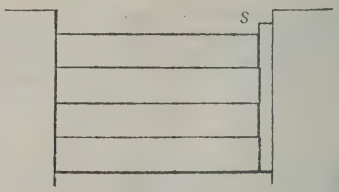


Fig. 65.

irregularity and afford a secure grip. Or a piece of belting, cloth, canvas, wire meshing, etc., will serve the purpose.

Hardness of Materials.

Different Methods of Determining Hardness.

The test to which a material is generally subjected in order to obtain a measure of its hardness may be of two classes, viz. :—

(1) The resistance offered by the material under investigation, (2) the resistance offered by the material to abrasion or cutting.

Of these, the first finds most extensive favour in practice, and the indenting medium may be a chisel, cone, or sphere. Repeated use on hard materials is inclined to blunt the chisel edge or point of the cone, and the sphere is the agent commonly adopted.

In 1900 Brinell introduced a method of ascertaining the hardness of a material by indenting it with a hardened steel sphere subjected to a predetermined load. The ratio of the load on the sphere to the area of indentation produced gives the hardness figure. The ball commonly used is 10 mm. diameter. The load for the softer materials is usually 500 kilograms, and that for the harder metals 3,000 kilograms.

The load should be applied for at least 30 seconds in order to secure equilibrium between it and the resistance of the material. The diameter of indentation is observed by means of a special microscope fitted with a scale, and from this the depth of indentation can be calculated, since :—

$$\triangle = \tfrac{1}{2}\left(D - \sqrt{D^2 - d^2}\right),$$

where $\triangle$ is the depth of indentation,
d „ diameter „
D „ „ of the sphere.

The hardness figure or number N for a load P is given by the expression :—

$$N = \frac{P}{\frac{\pi}{2} D \left(D - \sqrt{D^2 - d^2}\right)} = \frac{P}{\pi D \triangle}.$$

The hardness number is therefore inversely proportional to the diameter of ball and depth of indentation, and for a ball of constant diameter is directly proportional to the load. The hardness numbers for diameters of impressions made by a ball 10 mm. diameter under a load of 3,000 kilograms are given in the table, page 1002.

The depth of indentation may be obtained directly by means of a micrometer microscope by observing the difference between the readings of the datum line on the piston when the parts

are brought together and after the load has been applied and removed. This procedure precludes the possibility of including the compression of the piston, sphere, and other parts of the machine beyond the datum line.

As it is difficult to bring the parts together without indenting the specimen to some extent, a small initial load may be applied. Observations of the datum line are then made when the initial load is applied, and also after the full load has been applied, and when the load has been brought back again to its initial value.

By measuring the actual depth of penetration, the error due to the elastic deformation of the sphere (which is included when the diameter is observed) is avoided. This elastic deformation is relatively greatest when the load, and consequently the indentation, is least. As the indentation increases so does the lateral component of the resisting force, and this tends to keep the sphere to its true form.

In testing some cast irons the metal flows from beneath the ball and causes a ridge to be formed which stands proud of the original surface, whilst with bronze and, some of the copper alloys the metal is drawn in. In the case of the former the diameter observed is greater than the true value corresponding to the depth of indentation, whilst in the latter case the diameter is less than its true value.

The Shore Scleroscope.

This instrument consists of a small hammer, weighing about $\frac{1}{2}$ of an ounce and fitted with a diamond which is somewhat spherical in shape at the striking end. The hammer is suspended on a stirrup piece fitted to a head on a vertical stand, and upon which is also mounted a glass tube about 10 inches long and a graduated scale subdivided into 140 parts. The hammer is released and raised by a pneumatic device and moves within the tube. As the end of the glass tube is made to rest upon the material under investigation, the hammer always falls through a definite height and the measure of hardness is obtained by observing its rebound on the scale. The hammer on striking makes a permanent impression in the material, but as this is very small and irregular in outline it is impossible to measure the depth or diameter with any approach to accuracy.

The hammer is liable to become blunt with use, and a block of hardened steel, having a 100 hardness, is furnished for calibrating purposes.

Abrasion Test.

An early conception was to scratch a smooth surface of the material under investigation with a sharp point of a mineral, a number of minerals being selected to constitute a scale of hardness. In their order of hardness these were :—(1) talc, (2) gypsum, (3) calcite, (4) fluor, (5) apatite, (6) felspar, (7) quartz, (8) topaz, (9) sapphire, (10) diamond. The method is only suitable for materials which differ widely in hardness.

To obtain a measure of hardness of materials which differed but slightly, Professor Turner developed the *Sclerometer*. This instrument consists of a diamond carried at one end of a balance lever in a horizontal plane and which rested upon a knife edge fitted into a vertical pillar. The pillar was free to turn by hand, so that the diamond was made to travel across the smooth face of the metal being investigated. The end of the lever carrying the diamond was loaded and the weight in grams necessary to produce a scratch of standard depth gave a measure of the hardness.

With apparatus similar to the above some have taken the width of the scratch produced by a diamond under a constant load as the measure of hardness. As the scratch is very minute it has to be measured by means of a microscope and the surface must be smooth and polished, in order to give a sharp definition. The test is therefore more adaptable to the laboratory than to the workshop.

Drilling Test.

This test can be made with an ordinary sensitive drilling machine having a vertically free spindle. A constant load is applied to the spindle, so that the drill is made to penetrate the material under observation. The revolutions made in drilling a hole of predetermined depth gives a measure of the hardness or tenacity.

With the object of observing the variation in the hardness as the drill proceeds, the machine is fitted with a drum which rotates with the descent of the spindle. A screw, attached to the drum support, carries a nut in which is fixed a pencil. The screw is driven from the spindle, and as the nut cannot rotate the pencil moves in the plane parallel to the drum axis. The combined motion caused a diagonal line to be traced on a piece of paper around the drum, the height and horizontal length of the line being proportional to the depth drilled and revolutions respectively. The slope of the line varies with the hardness, and a soft or hard patch in the material under test is shown on the graph by the line becoming steeper or flatter in the order mentioned at that part. The drill is periodically tested for sharpness on a piece of material of standard hardness. (*Dempster Smith.*)

BRINELL HARDNESS NUMBERS (for load 3,000 K.G.).

DIAMETER OF BALL = 10 mm.

Diam. of Impression.	Hardness Number.	Diam. of Impression.	Hardness Number.	Diam. of Impression.	Hardness Number.	Diam. of Impression.	Hardness Number.
mm.		mm.		mm.		mm.	
2·0	946	3·25	351	4·5	179	5·75	105
2·05	898	3·3	340	4·55	174	5·8	103
2·1	857	3·35	332	4·6	170	5·85	101
2·15	817	3·4	321	4·65	166	5·9	99
2·2	782	3·45	311	4·7	163	5·95	97
2·25	744	3·5	302	4·75	159	6·0	95
2·3	713	3·55	293	4·8	156	6·05	94
2·35	683	3·6	286	4·85	153	6·1	92
2·4	652	3·65	277	4·9	149	6·15	90
2·45	627	3·7	269	4·95	146	6·2	89
2·5	600	3·75	262	5·0	143	6·25	87
2·55	578	3·8	255	5·05	140	6·3	86
2·6	555	3·85	248	5·1	137	6·35	84
2·65	532	3·9	241	5·15	134	6·4	82
2·7	512	3·95	235	5·2	131	6·45	81
2·75	495	4·0	228	5·25	128	6·5	80
2·8	477	4·05	223	5·3	126	6·55	79
2·85	460	4·1	217	5·35	124	6·6	77
2·9	444	4·15	212	5·4	121	6·65	76
2·95	430	4·2	207	5·45	118	6·7	74
3·0	418	4·25	202	5·5	116	6·75	73
3·05	402	4·3	196	5·55	114	6·8	71·5
3·1	387	4·35	192	5·6	112	6·85	70
3·15	375	4·4	187	5·65	109	6·9	69
3·2	364	4·45	183	5·7	107	6·95	68

For other test loads the hardness numbers are proportional to those in the table.

SECTION XX

PART II

GRINDING, ABRASIVES, AND POLISHING APPLIANCES.

ABRASIVE MATERIALS — NATURAL GRINDSTONES — ABRASIVE WHEELS AND BLOCKS — LUBRICATION — DRY VERSUS WET GRINDING — SELECTION OF WHEELS — SPEEDS OF WHEELS — MOUNTING ABRASIVE WHEELS — GRINDING MACHINES — WHEEL GUARDS — GRINDING PROCEDURE — CYLINDRICAL GRINDING — EXTERNAL GRINDING — CENTRELESS GRINDING — INTERNAL GRINDING — SURFACE GRINDING — GRINDING ALLOWANCES — POLISHING — SAND BLASTING.

Revised and amplified by Alfred B. Searle
(Consulting Advisor on Abrasive Materials.)

GRINDING, ABRASIVES, AND POLISHING APPLIANCES.

The appliances used for grinding and polishing may be divided into two chief groups :—

(*a*) The *abrasive materials*, which may be in the form of powders, liquids, wheels, blocks cups, etc.

(*b*) The *machines* used in the application of such materials, and commonly known as 'Grinding and Polishing Machines.'

Abrasive Materials.

The chief *natural* abrasive and polishing materials are sandstone, sand, emery, corundum, diamond dust, pumice, rotten stone, tripoli powder, rouge, lime, whiting, and chalk. The chief *artificial* abrasives are : (i) carbon silicide, which is known by various trade names, such as carborundum ; and (ii) fused or crystalline alumina or artificial corundum, which is also known under a variety of trade names.

These materials are ground and then sifted so as to ensure the particles being of sizes suitable to the particular purpose for which they are to be used ; this being a matter of great importance.

These abrasive materials may be used in the form of powders, or suspended in water, oil, or other convenient liquids (as liquid polishes), or they may be made into grindstones, wheels, blocks, etc.

Natural Grindstones.

Natural grindstones are made by cutting blocks of suitable stone to the desired size and shape. The stones used for this purpose are shown by the following table :—

FOR GRINDING MACHINISTS' TOOLS.

Name of Stone.	Kind of Grit.	Texture of Stone.	Colour of Stone.
Nova Scotia	All kinds, from finest to coarsest	All kinds, from hardest to softest	Blue, or yellowish-grey
Bay Chaleur (New Brunswick)	Medium to finest	Soft and sharp	Uniformly light blue
Liverpool or Meling	Medium to fine	Soft, with sharp grit	Reddish

For Wood-working Tools.

Name of Stone.	Kind of Grit.	Texture of Stone.	Colour of Stone.
Wickerolz	Medium to fine	Very soft	Greyish-yellow
Liverpool or Meling	Medium to fine	Soft, with sharp grit	Reddish
Bay Chaleur (New Brunswick)	Medium to finest	Soft and sharp	Uniformly light blue
Huron, Michigan	Fine	Soft and sharp	Uniformly light blue

For Grinding Broad Surfaces, as Saws or Iron Plates.

Name of Stone.	Kind of Grit.	Texture of Stone.	Colour of Stone.
Newcastle	Coarse to medium	Hard	Yellow
Independence	Coarse	Hard to medium	Greyish white
Massillon	Coarse	Hard to medium	Yellowish white

Maximum Speed of Natural Grindstones.

Except under expert advice, grindstones should not be run at a higher peripheral speed than 3,400 ft. per min. This corresponds to the following speeds of rotation:—

Diameter of Stone.	Revolutions per Minute.	Diameter of Stone.	Revolutions per Minute.	Diameter of Stone.	Revolutions per Minute.
Ft. Ins.		Ft. Ins.		Ft. Ins.	
8 0	135	6 0	180	4 0	270
7 6	144	5 6	196	3 6	308
7 0	154	5 0	216	3 0	360
6 6	166	4 6	240		

Abrasive Wheels and Blocks.

Grindstones which are made from abrasive powders are commonly known as 'Abrasive Wheels,' and as these were first made of emery, such wheels are still sometimes termed 'Emery Wheels,' even when made of other materials!

The manufacture of vitrified abrasive wheels and 'artificial' grinding wheels is really a branch of the clayworking industry, as the particles of abrasive material are held together by clay or by a mixture of materials in which clay is an important ingredient, the wheels being moulded from a plastic state and afterwards burned in kilns at a temperature of about 1,400° C. The details of the manufacture of these wheels are kept secret. In other abrasive wheels, the binding materials are shellac, rubber or silicate of soda.

Abrasive wheels, blocks, etc., are classified according to the nature of the abrasive (corundum, carborundum, emery, etc.), the size of the abrasive particles and the hardness or tenacity of the bond.

Whatever the nature of the work may be, if it has hitherto been done by means of files, much greater economy, speed, and quality can be obtained by using such wheels in their place, especially when the wheels are used on the varied machines to which they are applied. The great profit to be derived from the general introduction of abrasive wheels is due to saving in wages, files, increased output, and improved work.

It should no longer be assumed that a grinding wheel cannot remove metal and shape work as quickly as a steel tool, but the latter should be used when it can do the work more cheaply, and the grinding wheel when it excels. Poor wheels, or good wheels wrongly used, will still remove metal slowly, but a modern grinding wheel used in a modern machine is a milling cutter just as truly as if made of steel, and is to be regarded as a cutter with millions of teeth, which, while they may not cut so deeply, can cut more rapidly—as, for example, at speeds of 6,000 or more surface feet per minute. Cams and crankshafts can be produced more cheaply by grinding than by turning. With automatic grinders it is possible to turn out work even more rapidly. Where 300 pieces per day were ground by piecework, 2,300 are now produced. As the knowledge of grinding becomes more common, and the opposition on the part of workmen to increased production is overcome, the field for grinding will be still more extended.

(*C. H. Norton before Amer. Soc. of Mech. Engrs.*)

The *grade* of a wheel is represented by a letter, being the hardest and the softest. The term 'grade' is confined to the relative hardness of the wheel or block as a whole, and does not refer to the hardness of the abrasive particles. This distinction is important, because the cutting or abrasive power depends quite as much on the bonding material as on the abrasive particles.

No wholly satisfactory method of grading abrasive wheels, etc., has yet been devised, various mechanical devices of testing having proved unsatisfactory. The method adopted by manufacturers consists in gouging the wheel with a tool resembling a screw-driver, the 'feel' indicating the grade with fair accuracy to an experienced tester. It is, however, almost impossible to compare accurately the grades of abrasive wheels made with different bonds, as they do not work equally satisfactorily with any material.

The term '*grit*' is used to indicate the sizes of the abrasive particles present, and it is usually expressed by figures indicating the number of meshes per linear inch in a sieve through which the abrasive particles will pass completely. Thus, in a 60-grit wheel or block the abrasive particles will pass completely through a sieve having 60 holes per linear inch. It should be observed that the grit only indicates the largest particles, and has no reference to their average diameter nor to the proportion of much smaller particles present. It is understood, however, that there is only a small proportion of particles sufficiently fine to pass through a sieve which is represented by the next grit figure.

GRIT SIZES OF GRINDING WHEELS.

Class of Work.	Emery.	Alundum.	Corundum.	Carborundum.
Glass and marble polishing	150	200	240	—
Fine hardened steel work	40–80	46–100	50–120	60–150
Sharpening milling cutters	40–50	46–50	46–60	50–80
General machine shop use	20–24	20–30	20–36	24–40
Brass castings	16–20	20–30	24–36	30–40
Agricultural implements	14–20	16–24	16–30	16–36
Rough castings	10–16	12–16	12–20	14–36
Marble	—	—	—	2–4

(*Engineering News.*)

WHEELS FOR DIFFERENT MATERIALS AND OPERATIONS.

Material.	Operation.	Classification.
	External Work.	
Soft Steel	General	24 Comb. L.M. Alundum
,,	Fine finish	60 L. ,,
Hard Steel	General	60 J.K. ,,
,,	Fine finish	80 K. ,,
Cast Iron	General	24 K. Crystolon
,,	Chilled Rolls (Roughing)	36 K. ,,
,,	,, (Finishing)	60 J. ,,
	Internal Work.	
Soft Steel	—	46 K. Alundum
Hard Steel	—	60 J.K. ,,
,, Fine finish	Fine finish	80 K. ,,
Cast Iron	—	36 J. Crystolon
,,	—	38–46 J. Alundum

(*W. D. Adamson.*)

Material.	Wheel Maker.	Bond.	Classification.
Copper (Roughing)	Norton Co.	Elastic	36–50 Crystolon
,, (Finishing)	,,	Vitrified	80 L ,,
Aluminium	,,	Elastic	24–46 Soft to Med. Crystolon
,,	Vitrified Wheel Co..	Elastic	24–46 Medium Carbolon

The *suitability* of an abrasive wheel or block for any given purpose depends on the grade or hardness of the wheel as a whole, on the grit or size of the abrasive particles, and on the *bond* which unites them together.

For grinding steels and the harder materials, i.e. materials with a high tensile strength, wheels or blocks composed of an aluminous abrasive (corundum emery) are preferable. For cast iron, chilled iron, brass, soft bronzes, aluminium, copper, granite, marble, leather, wood, and other materials of lower tensile strength, wheels or blocks composed of a carbide abrasive (carborundum, cristolon, etc.) should be used. The binding agent which unites the particles of abrasive also determines the suitability of the wheel or block for any given purpose. Thus—

(i.) Rubber-bonded abrasives are very tough and resistant, and so are specially suitable where a bond of exceptional strength is required in conjunction with a thin wheel or ring, as in the case with various cutting operations, such as slotting iron plates, sawing stone, cutting glass and saw teeth, or sharpening milling cutters of awkward shape, as well as for cutting metals, grinding chilled iron rolls, and for other work where a fine finish is required. Shellac-bonded wheels are too soft for this purpose. They are also used where it is necessary that the shape of the abrasive article should be retained as long as possible. This is particularly the case with the thin cutting discs used by watchmakers, dentists, etc.

(ii.) Shellac-bonded wheels are used for cutter and reamer grinding, pointing drills, sharpening knives, saws, and other edge tools, and for similar purposes as rubber-bonded wheels, but as they are more elastic they can be used to give a finer finish. They will not stand high temperatures, but can be used for wet or dry grinding. They are less porous and less free cutting than wheels with a vitrified bond. They are singularly free from 'glazing,' as the baked shellac has lost the stickiness characteristic of the natural material.

(iii.) Silicate wheels are very close in texture, and as they cut freely they are very useful for grinding tools and cutlery.

(iv.) Abrasive articles made with a vitrified bond are characterised by a high porosity, a great resistance to heat and acids, and great freedom in cutting. They may be used for almost any purpose if care is taken to select them of suitable grit and grade, though when very thin cutting wheels are required it is often preferable to use a shellac—or rubber-bond may be preferable. If too much bond is present the abrasive articles tend to 'glaze' badly, owing to the bond not falling away with sufficient rapidity from the cutting points. With too little bond, on the contrary, the articles will be weak and, in the case of wheels, cylinders, or rotating rings, they may be dangerous on account of their liability to break when in use.

Lubrication.

The rate, effect, and efficiency of the grinding are also affected by the water or other lubricant applied to the wheel when in use. The function of the water is to carry away the heat resulting from the friction between the abrasive and the article being ground, and to wash away any loose particles dislodged by the grinding.

The water supply for all external grinding operations should be ample in volume without force. Using, say, a 14-in. diameter wheel, not less than 5 gallons and up to 10 gallons per minute should be used; on larger wheels 20 to 50 gallons per minute.

For many purposes, solutions of soap or emulsions of oil and water are preferable to plain water. A solution of carbonate of soda containing 2 oz. per gallon has the advantage of not producing rust, especially if $\frac{1}{4}$ or $\frac{1}{2}$ pint of lard oil is mixed with it.

In grinding aluminium it is advisable to use a lubricant of lard, oil, kerosene, or a mixture of kerosene and gasolene or lard, or oil and gasolene.

Dry *versus* Wet Grinding.

In certain circumstances water may—or must—be dispensed with. Whenever it is necessary to see the edge of the wheel distinctly, to be sure of reaching some particular spot, water cannot be used, as it obstructs the view. Work revolving in the chuck or on the faceplate is also generally ground dry, as water is awkward to deal with on ordinary machines under such conditions. Cutters are also usually ground dry, although special care has to be taken to prevent 'drawing the temper' of the cutting edges. The amount to be removed is, in most cases, small, so that the sacrifice of time is balanced by the greater convenience of dry grinding.

More material can be ground away by dry internal grinding than by wet, and it is fairly common practice to run water on the work externally to dissipate as much heat as possible whilst grinding dry internally. On such classes of work as aeroplane cylinder grinding, or ring gauges where a high degree of accuracy and finish is essential, water must be used, but it should be in such volume as to prevent as far as possible the chips being carried round to the wheel and interfering with the cut.

In *wet grinding*, care should be taken that the water supply is steady and adequate, and particular attention must be paid to this in the case of tool grinders, where it is of the utmost importance that the tool should be effectively covered with water, to obviate any loss of temper in the steel during the process of grinding. Some grinding machines provide for this; e.g. in one such patent machine the water is forced by a centrifugal pump through a series of small holes in the tool rest itself, in such a manner as to completely envelop the tool being ground. A noticeable feature of this grinder is that there is total absence of splashing.

In the

Selection of an Abrasive Wheel

the most important points to be kept in mind are *suitability for the particular class of work*, and *safety from accident*.

It is obvious to everyone that a wheel specially manufactured for fettling iron castings is not the one to be used for needle pointing, but few people, except those connected with the trade, have any conception of the number of kinds or classes into which such wheels have been divided and subdivided, each main group (designated by symbols, B, S, SS, G, R, M, etc.) being varied in hundreds of ways to suit the work.

The general practice is to state the purpose for which the wheels are required and leave the selection to the judgment of the makers; it is to their interest to give satisfaction. The other particulars to be given when ordering are—quantity required, diameter, thickness, and size of centre hole.

Grindstones are softer when wet than dry, and should not be left partly immersed in water or they will wear unevenly. Stones made with sorel cement as a bond should not be used for wet grinding as the cement is disintegrated by water.

Speed of Wheels.

This varies somewhat according to the make, and the purpose for which they are used.

The peripheral speed of a grinding wheel—which is a function of its diameter and the number of revolutions per minute which the wheel makes—has a marked effect on the apparent hardness of the wheel. Hence, the hardness or grade of an abrasive wheel or cylinder appears to vary with the speed at which it rotates. Thus, by running a soft wheel above its normal speed it appears to become harder, and by reducing the speed of a hard wheel it appears to become softer. Hence, by varying the speed within reasonable limits a wheel which is normally too soft or too hard may be used satisfactorily.

As a wheel wears, its peripheral speed is reduced and the wheel appears to soften, but by increasing the number of revolutions per minute so that the original peripheral speed is obtained the wheel appears to regain its former hardness. Many workers suppose that the faster the work revolves the greater will be the output, and so they use very hard wheels which require maximum driving power and cause a maximum wear of the machine. Yet, in most cases, they produce work of inferior quality which requires a longer time and greater effort to produce than if softer wheels and slower work speeds were used.

The following speeds are typical, but should be modified to suit particular cases:—

Application.	*Peripheral Speed in Feet per Min.*
Cylindrical grinding	5,500 to 6,500
Snagging and general off-hand grinding on bench and floor stands	5,000 ,, 6,000
Surface grinding	4,000 ,, 5,000
Knife grinding	2,000 ,, 3,000
Hemming cylinders	2,100 ,, 2,400
Tool grinding	3,000 ,, 4,000 *
Vertical surface grinding machines	4,000 ,, 4,500
Elastic and rubber cut-off wheels	9,000 ,, 12,000
Polishing wheels	about 7,000

For speeds higher than the above, slightly softer grades should be used to off-set the harder cutting action; for lower speeds slightly harder grades than would be ordinarily supplied should be used.

For polishing purposes a much lower speed is desirable; thus, the cloth wheels known as 'mops' or 'dollys' used for buffing metals usually run 20 ft. per second.

It is impossible to state exactly the speed at which any article or part to be ground should rotate. It is largely a matter of experiment, as the speed should be suited to the abrasive and to the nature of the material to be ground. With Norton cylindrical grinders a peripheral work-speed of 60 to 80 ft. per minute is often used for roughing, and 30 to 40 ft. per minute for finishing. It is customary to rough-grind at a higher surface speed of work than on finish-grinding.

In grinding cylinders the speed at which the article to be ground rotates is of great importance, as by running the grinding wheels at a constant speed and varying the speed of rotation of the article to be ground it is easy to secure uniform results from wheels having a variation in speed of 2,000 ft. per minute, and a variation from true grade within practical wheel-making limits. Thus, by varying the speed of the article to be ground, the necessity for variable revolutions for the wheel, or close limits of speed and grade for the wheel, are made unnecessary, and variable speed for the work accomplishes all that variable wheel spindles can accomplish, and much more, in a more simple way, at less expense.

* Some large users of grinding wheels regard as maximum peripheral speeds for machinist's tools 800–1,000 ft. per min., and for carpenter's tools 550–600 ft. per min.

Mounting Abrasive Wheels.

If there is a large area of contact the method of mounting and safeguarding abrasive wheels and the condition of the grinding machine are of great importance. A grinding wheel should be fixed carefully and securely between recessed steel or iron plates or washers about half the diameter of the wheel, with a sheet of thin rubber insertion, or one or two thicknesses of brown paper, on each side between the wheel and the washer-plates (fig. 1).

The wheel should not project more than 2 ins. beyond the flanges. Both flanges should be

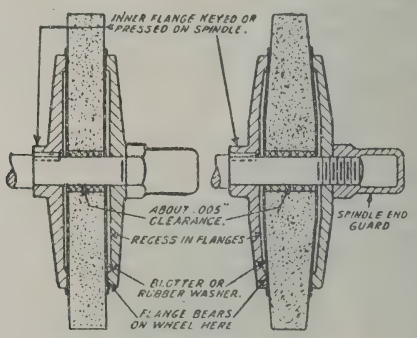


FIG. 1.

of equal diameter, to avoid cross-straining of the wheel. The inner flange should be keyed to the shaft and abutting against a shoulder on the same. Various firms have special mountings which have proved satisfactory.

The grinding wheel should never be mounted without washers. The hole in it should be slightly larger than the diameter of the spindle, as the wheel must not be driven tight on to the spindle. Care should be taken in screwing up very thin wheels that too much force is not applied. No wheel of more than 12 ins. diameter should be put on a spindle 1 in. thick, and other sizes in proportion.

Before using, the wheels should be trued up on their own spindles with a truing tool, and they should also be turned up when they get out of truth through wear. Grinding wheels, should revolve towards the rests, and the rests should be moved close to the wheels so as to prevent work being jammed between the rest and the wheel. The rest must never be moved while the wheel is in motion.

GRINDING MACHINES.

It is imperative that grinding machines be specially designed for the purpose intended, made of the best quality and workmanship, and that great care be taken in securing a suitable foundation as free from jar and shake as possible. The stands or bodies of the machines ought to be of a sufficient strength and massiveness to correspond with the size of wheel used. The same remark applies to the spindle, which must run in long and accurately bored bearings.

If the spindle is loose and cannot be put in good condition, a harder grade of wheel must be used than would ordinarily be recommended, so as to overcome the tendency to pound the wheel face to pieces. Light, flimsy machines, and those improperly secured to the foundation, also require harder grades than would ordinarily be used. Machines are frequently placed in the middle of a wooden floor which vibrates badly, and in this case harder wheels must be used than for a machine on a firm, solid foundation. A machine which is too light or imperfectly made is always a nuisance and is liable to prove very expensive. It is only too easy for good work to be spoiled by such machines, and they add unnecessarily to the cost of grinding, because they cannot be driven at the most appropriate speed for the work and because of various 'dodges' which must be used to obtain satisfactory results.

Rotary abrasive appliances may be mounted in a fixed frame—in which case the article to be ground, cut, or polished is moved gradually forward—or the work may be fixed and the abrasive mounted on a moving frame, so that it travels both forward and from side to side. There is an increasing feeling that this principle is wrong even in light machines; it is impracticable in heavy ones, where a wheel-head may weigh between 1 and 2 tons. When a heavy wheel is grinding to within $\frac{1}{1000}$th part of an inch, revolving at a speed of 6,000 ft. per minute at the

surface, and operating across a cutting face from 2 ins. to 4 ins. wide, it is clearly not a good mechanical proceeding to traverse such a mass under such conditions. The present practice, therefore, is to put plenty of mass into the wheel-head, and to support it rigidly directly from the floor. Then the only movement which it receives is that of feeding inwards to the work. Incidentally, also, the necessary travel of the table requires a long table, which, again, avoids excessive wear. A slow table or traverse speed should be used when taking heavy cuts, but for finishing a high traverse speed is preferable.

The belt-drives from cumbrous overhead shafts have disappeared from all except the smaller and medium-sized machines, as electric drives have largely displaced this clumsy method and permit overhead-travelling cranes, or overhead tracks, to have free range. The large cylindrical grinding machines of to-day, therefore, have no belt-drive from above. A motor is installed somewhere alongside the bed, and the grinding wheel is belt-driven from that; the work speeds and the wheel-feeds are changed through gears enclosed in boxes protected from grit. The convenience of this arrangement, which is only rendered possible by the electric drive, is inducing manufacturers to adopt similar arrangements for the smaller machines.

In the best machines no mild steel and cast iron is used for shafts and gears. High carbon or alloy steels alone are used for these. Nickel, nickel-chrome, or chrome-vanadium steels ensure strength and durability, without which the small shafts and gears of fine pitches would soon show serious wear. Friction is reduced by the universal fitting of ball-bearings for taking circular and end thrust. Lubrication is provided in various ways, ring-oiling to the main bearings, forced water-supply to the work and the wheel, and a large supply-tank or tanks with a circulating pump. New forms of steadies have been evolved, and more are used, besides which steadies for some duties are specially designed. The necessity for supporting work almost continuously receives more recognition than it formerly did, and the work is better supported on the bottom and in opposition to the wheel.

As good grinding machines are costly, concessions to the requirements of the smaller firms, in the form of various attachments, are inevitable, but the tendency is towards using plain grinding machines, each limited to one set of functions, every detail being considered and worked out for that duty alone.

Van Dorn Tool Post Grinder.

This machine, fig. 2 (made by the Van Dorn & Dutton Co., Cleveland, Ohio), is furnished with an internal attachment as shown. It may be used for internal and external grinding on the lathe, tool grinding on the milling machine, and surface grinding on the shaper or planer. The spindle makes 4,500 revolutions per minute, and the weight of the machine is about 24 lbs. These machines are extremely useful on a wide variety of work in all engineering shops.

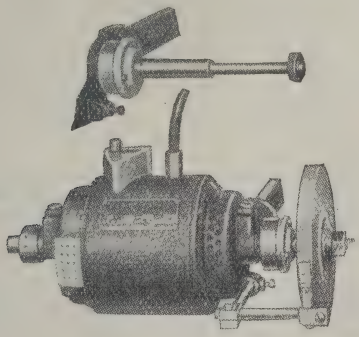


Fig. 2.

All parts of these machines are made accurately to gauge, ensuring perfect interchangeability. All adjustments may be easily made without removing any part of the machine. The taper bearing at the wheel end ensures the correct bearing adjustment being maintained. The bearing for taking the end thrust may be adjusted to exceptionally fine limits. The bearings are bronze and the lubricating system is very efficient. The motor is air cooled. The armature is form wound, a commutator of special design giving great rigidity and perfect insulation. The windings are insulated by a special process. The brushes are easily accessible. Adjustable rear handles are on hand types.

Bearings.—The design of the bearings is a special feature of Van Dorn grinders. The bearing for the wheel end is so constructed that adjustment for compressing the bearing can be effected in addition to expanding; thus a perfect running fit can be obtained, whilst efficient locking arrangements ensure that the adjustment cannot be disturbed.

Longitudinal adjustment is accomplished by means of a double thrust bearing provided with a dial cap. By depressing a locking pin the dial may be moved in either direction, enabling the adjustment to be made to within very fine limits.

Wheel Guards.

To meet the requirements of factory inspectors, a number of emery wheel guards, good, bad, and indifferent, have been introduced by manufacturers. The two features to be looked for in an appliance of this kind are:

(1) That it is of ample strength, and (2) that it can be readily adjusted to follow the wear of the wheel.

It is essential that the guard should be kept close to the periphery of the wheel in order to limit the flight of any portion which may break away.

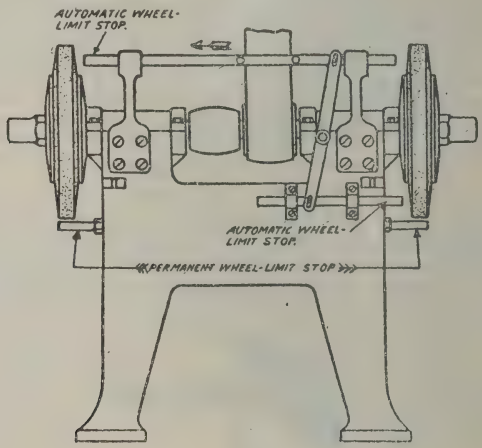


FIG. 3.

Machines fitted with two or more speeds should be provided with safety devices to prevent the maximum speed of the wheel being exceeded. In fig. 3 is shown a two-speed machine fitted with stops to limit the diameter and to prevent the belt being shifted to the high-speed pulley when the wheel exceeds a predetermined diameter.

The Safety of an Emery Wheel.

For safety, a protection hood made of rolled steel is preferred. The hood should cover as much of the wheel as possible and also the spindle end. The hood should be constructed to act as a dust hood which when connected with an exhaust system will eliminate the injurious effects of wheel dust. The wheel should be kept true and the work rest close to it.

Face or Cup Wheels ought to be protected by being well and properly secured inside a Safety Adjustable Chuck, designed to allow only a small portion of the wheel to project whilst at work, and constructed so as to secure and support the wheel as close to the grinding face as possible.

The modern grinding machine is practically a finishing machine in which the work produced needs no further correction. The sliding surfaces of the machine must be perfectly true planes, and there must be rigidity, particularly in the grinding-wheel head. It must be heavy enough to carry the largest and broadest wheels with which the machine may be possibly fitted, and also to overcome any possible want of balance in the wheel itself. The spindle and its bearings should be of ample proportions. The machine should be easily operated and controlled in its movements, so that a maximum amount of work can be obtained from it.

Grinding Procedure.*

Cylindrical Grinding—External.

The best average *surface speed* of modern grinding wheels, as made to-day from artificial abrasives, is about 6,000 ft. per minute for external cylindrical grinding, and the useful speed range is from 6,500 to 5,500 ft. per minute; below this speed excessive wheel wear is liable and very probable, and grinding machines should be arranged so that the effective life of the wheel falls within this range. It is of the utmost importance that the speed of the wheel be maintained during the cutting operation, no matter what the speed may be, and the drive should be sufficiently powerful to prevent slowing down during momentary heavy cutting. Not only is the wheel wasted by being allowed to slow down, but the wheel face is destroyed and more frequent truing up is necessary. It is more economical, from the point of view of wheel wear to metal removed, to keep the speed up so that softer and freer cutting wheels can be used, the speed enabling them to stand up to heavy cutting without undue wear, and, further, such wheels have very little tendency to glazing.

The *grade* of the wheel is determined by the material to be ground and the rigidity or otherwise of the work, and whether it is of large or small diameter. No definite rule can be laid down for the adoption of any particular grade, but it is unusual in general machine work to require more than two wheels to a machine, one to grind all classes of steel work and the other to deal with all cast metals. Closer grading can be done where the work is all of one class, as for instance, a machine may be employed wholly on cast-iron pistons, crankshafts, or piston-rods, etc., in which cases particular grades of wheels can be employed.

The *diameter* of the wheels should be as large as possible.

The direct result of using large diameter wheels is economy of operation, the cost of wheel per cubic inch of material removed being less than in the case of the smaller wheel.

The *wheel width* has a direct result on the output, providing it is made use of, and to utilise a wide wheel to its full extent the table-travel must correspond.




FIG. 4.—A = traverse per rev. of work = $\frac{3}{4}$ width of wheel. Maximum wear of wheel tends to concentrate on shaded portion.




FIG. 5.—A = traverse per rev. of work = $\frac{1}{3}$ width of wheel. Maximum wear of wheel tends to concentrate on shaded portions.

Table Travel.—If the traverse of the work per revolution is less than half the width of the wheel, then the cutting face of the latter will gradually wear convex, but if the traverse per revolution of the work is over half the width of the wheel, then the wheel will preserve a flat face. (See figs. 4 and 5.)

The ideal traverse per revolution of the work is about two-thirds the width of the wheel, but it should not, except for finishing, be less than half the width.

The table should travel as rapidly as can be used. (See 'Cross-feed,' page 1012.)

The main factor governing production on external cylindrical grinding machines is the combination of wide wheels with fast table speeds, as, other things being equal, the machine which possesses these advantages is the most efficient tool.

The *work speed* has only an indirect effect on the output. With a good wheel it makes little difference to the finish obtained whether the work surface speed be, say, 30 or 60 ft. per minute, except that, if the lower speed is persisted in, it limits the table travel, and so in turn limits the output. For external cylindrical grinding the practice is to work on an average surface speed of 60 ft. per minute as a basis. Low work speed is directly conducive to distortion and inaccuracy. The heat created by the cutting action of the wheel must be dissipated or distributed as quickly as possible, and can only be done by a higher work speed and table travel aided by an ample flow of water.

Vibrations in the work itself and disintegration of the grinding wheel are more liable to occur in large diameter and heavy work than in small work. It is much easier to control vibration in small diameter work, and it would be almost impossible to rotate it at such a high speed as to disintegrate the surface of the wheel, but the tendency would be to cause unnecessary wheel wear, and if the table speed was such that the traverse was less than half the width of the wheel the latter would wear more at the corners than in the centre.

Vibrations on heavy work are much more difficult to control, and much depends on the

* Abstract of Paper read by H. H. Asbridge before the Manchester Association of Engineers.

machine and method of supporting the work. No definite rule can be laid down, as so much depends on circumstances. For instance, it would be both permissible and advisable to run an 8-in. tube at a higher surface speed than an 8-in. solid shaft, the limiting factor in the tube being a surface speed such as would cause disintegration of the wheel face, there being no heavy body of metal to set up vibration, whereas in the shaft the limiting factor would be a surface speed sufficient to set up an oscillatory motion difficult to control, and which would prevent the shaft from being ground to a perfect cylinder. This same defect could also be obtained by using a too slow surface speed, due to insufficient dissipation of the heat created by the grinding wheel. Between these two extremes there is a wide margin of surface speed at which grinding can be successfully carried on.

A good rule is to get a wheel suitably graded for the work, and when once a suitable grade is found it should be recorded, as wheels such as are made from artificial abrasives can be duplicated within very fine limits.

The *cross feed* to the grinding wheel should operate at each reversal of the table, that is, at the end of each stroke; this is necessary to distribute the work over the whole width of the grinding wheel. Production is not governed so much by the amount of cross feed as by other conditions. There should be as much cross feed as the work, the machine, or the grinding wheel will stand; this will be from ·0005 in. to ·0015 in. on the work diameter at each reversal of table. Under these conditions, a machine with a fast table travel will give maximum output with a comparatively light cross feed, as compared with a machine having only a slow table speed, and will have the advantage also of not stressing the work to the same extent. The wheel will remove more material for a given wheel wear, and the machine will be more economical in power.

Over-run of work should be avoided (see p. 1014).

The *time required* in external grinding cannot be calculated with any approach to accuracy on the usual basis of cutting speed and feed, etc.

The finish grinding of a shaft of a given diameter and length is not a constant operation with an abrupt termination, as in other methods of machining, but is an operation starting at zero, rising quickly to the point at which possibly the maximum cutting capacity of the wheel is demanded, and then falling gradually to zero or finished size, and the finer the limit fixed for the finished diameter, the more gradual will be the closing stages of the operation. Grinding times must, therefore, so far as the wheel is concerned, be based on a mean of its cutting capacity, much lower than its maximum.

The formula, as deduced from the above method, is as follows and is published for the first time:—

Diameter of work in inches × length in feet × constant = grinding time in minutes for the removal of $\frac{1}{32}$ in. in diameter and finishing to commercial limit.

TABLE OF CONSTANTS.

Diameter of Work.	Size of Wheel.	Constant.
4-in. shaft and upwards.	26 ins. by 3 ins.	1·3
3-in. ,,	,,	1·4
2-in. ,,	,,	1·8
1½-in. ,,	,,	2·2
1-in. ,,	,,	3
3-in. shaft and upwards.	14 ins. by 2 ins.	2·2
2-in. ,,	,,	3
1½-in. ,,	,,	3·7
1-in. ,,	,,	5
3-in. shaft and upwards.	12 ins. by 1 in.	3
2-in. ,,	,,	3·8
1½-in. ,,	,,	4·5
1-in. ,,	,,	6·3

For the removal of $\frac{1}{64}$ in. in diameter allow $\frac{2}{3}$ of time obtained. For work below 1 in. diameter the grinding time tends to increase, depending entirely on rigidity of support afforded to same. Extra time should be allowed to special limits, such as may be required for drive fits, etc., or for special finished surfaces, such as are necessary for spindles, gauges, etc.

CENTRELESS GRINDING.*

The objections to the use of centres to support the work during grinding, and the difficulty of accurately grinding gudgeon pins, crank pins, and other relatively long pieces of small diameter,

* Particulars supplied by S. W. Dowding & Co., 66 Victoria Street, S.W. 1.

can be avoided, and any irregularity caused by warpage in hardening removed by supporting the work in a suitable guide block. Two patterns (fig. 6) of guide blocks are used—one for rough grinding, and the other for finishing—the difference being in the relative positions of the three guide blades.

For rough grinding the near blade is adjusted so that the work projects beyond the lower front blade C, slightly more than the thickness of the material to be removed, whilst the upper blade, A, is given a clearance of 0·005–0·020 ins. In finishing, the upper and lower blades are more nearly vertical. The work is finished after it has been passed several times through the block.

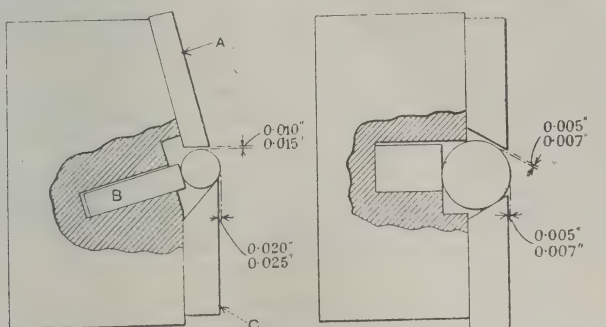


FIG. 6.

The face of the grinding wheel is conical, and is dressed to an included angle of 4–6 degrees, so that it has the effect of an increased surface speed as the work passes across the wheel face and compels the work to rotate slowly.

Lubrication and cooling of the work are essential.

The grinding is effected more rapidly than when centres are used.

INTERNAL GRINDING.

The idea that internal grinding cannot be satisfactorily accomplished at spindle speeds less than 30,000 to 50,000 r.p.m. is erroneous. Provided that there is rigidity in the spindle employed, the grinding-wheel diameter has little effect on production. The effective speed range of a good grinding wheel is very much greater than in any other form of grinding, and ranges from 1,000 to 4,000 ft. per minute, and much of the most successful grinding is done at the surface speed of from 1,500 to 2,500 ft., but a very rigid spindle is necessary.

There are two types of internal spindles, the ' tube ' type having a bearing immediately behind the wheel (this type is not to be recommended for holes, say, less than 6 ins. in length, as holes of this length, and longer, are generally insufficiently large in bore to admit of a substantial spindle), and the ' adaptor ' type. The construction of the latter type is such that the spindle bearings never enter the hole being ground, the wheel being carried on an adaptor fitted into the main spindle and held by a draw bolt, or, if the work to be ground is of limited range, the adaptor portion is formed integral with the main spindle. For general commercial work the loose adaptor is preferable, as long or short, heavy or light adaptors can be used suitable for the particular work in hand. The fact that the main spindle in this instance never enters the hole permits of it being made of liberal dimensions. The Churchill Machine Tool Co. fix the higher limit of such spindles at 1,500 r.p.m., and so long as the rigidity is there behind the adaptor no higher speed is necessary for holes from ½ in. upwards.

The *wheel width* has a direct result on the output.

Given a spindle with the necessary rigidity, the use of wide wheels and a high table speed are the governing factors in obtaining maximum production. The standard practice of the above firm is to use all wheels from ½ in. to 3 ins. diameter ¾ in. wide, above 3 ins. diameter 1 in. wide. Such wheels are of no advantage unless combined with high traverse speeds, in order to utilise as much of the wheel width as possible, and also to dissipate the heat generated evenly.

Table-traverse speeds up to 9 ft. and 10 ft. per min. are commonly applied to internal grinding machines.

The *work speed* in internal grinding can be varied considerably above or below the speed which has been previously determined to be the best for the particular work in hand. Such variation would have very little effect on production, but might affect the finish obtained. In standard practice a work surface speed of from 100 to 120 ft. per minute is used as a basis or starting-point, and varied according to circumstances.

The *cross-feed* requires special care in internal grinding.

Whatever type of internal grinding spindle is used (where the work to be ground is carried on a rotating spindle) there is bound to be overhang from its supporting bracket, with more or less unavoidable spring, and whilst the slide carrying the spindle can be set to a predetermined position with great accuracy, it does not follow that the hole being ground will have reached the desired size, owing to the spring in the spindle. This fact makes the use of automatic cross-feed almost impossible of accomplishment if the amount of the feed has to equal the amount of cut which the wheel will take at each traverse of the table. Hand-operated cross-feed fitted with an adjustment dead stop is therefore to be preferred.

In another type of internal grinding, the work is stationary and the grinding wheel has imparted to it a planetary motion whilst rotating at a high speed on its own axis, the planetary spindle being eccentrically adjustable whilst grinding is proceeding. This type of machine has been employed for grinding motor-car cylinders when cast *en bloc*, and the possibilities of this type of machine for finishing holes are great.

Over-run of work should be avoided; that is, the wheel should never be allowed to leave the work, the traverse being only just sufficient to allow of not more than one-third of the width of the wheel projecting beyond the end of the work. If the wheel is allowed to run off, the result in external grinding will be to have the face of the wheel sheared away by the sharp ends of the work; and in internal grinding the hole will be bell-mouthed.

SURFACE GRINDING.

There are two methods of surface grinding—one using the periphery of the grinding wheel, and the other the edge of the wheel. The wheel in the latter case is of cup form and carried on either a vertical or horizontal spindle, the more widely used being the vertical spindle type. The two methods are further subdivided according to the manner in which the work is moved, machines being made with the work carried on a reciprocating table, or on a circular revolving table, briefly classified as follows:—

1. Horizontal spindle surface grinding machine, where the work is reciprocated under the grinding wheel.

2. Horizontal spindle ring and surface grinding machine. In this machine the work is carried on a circular revolving table, generally made in the form of a magnetic chuck, and rotated under the grinding wheel.

3. Vertical spindle ring and surface grinding machine, where the grinding wheel is of cup form, carried on a vertical spindle, and the work is carried on a circular rotating table, generally in the form of a magnetic chuck and rotated under the wheel.

4. Vertical spindle surface grinding machine, where the wheel is of cup form carried on a vertical spindle, and the work is carried on a table reciprocating under the wheel.

The first and fourth types are the most commonly used, and intended for the grinding of flat surfaces of all kinds and in all materials.

The second and third types are widely used for grinding the sides of disc work, such as circular knives and saws, piston rings, disc valves, etc., using the rotary table. The second type of machine with the horizontal spindle leaves the work with a concentric finish, whereas the third type of machine with the cup wheel leaves the work with a radial finish, and which in some classes of work is objectionable, particularly, for instance, in piston rings, where the concentric finish is preferred. So far as production is concerned the vertical spindle ring and surface grinding machine will give a greater output than the horizontal spindle ring and surface grinding machine. Both machines can be arranged to grind flat, concave, or convex surfaces.

The most largely used machine for regular commercial purposes is the machine with the vertical spindle, owing to its greater productive capacity.

The best *wheel speed* for all-round surface grinding is about 4,000 ft. per minute, with very little margin of speed—that is, if a wheel is working successfully at 4,000 ft. per minute, it cannot be varied up or down from this speed without affecting production, consequently the vertical spindle machine with the cup wheel has a great advantage in this respect, due, of course, to the wheel retaining its diameter as it wears.

The grade of the wheel for surface grinding demands far closer attention than in any other type of grinding. The only remedy for a wheel that is too hard or too soft is to change it for a wheel of the correct grade.

A high *table speed* is the main factor governing output, using suitable grinding wheels, but the machine which will so work that the temperature is even throughout the whole ground surface will produce the most accurate results.

The vertical surface grinding machine with the cup wheel, which covers the full width of work at each stroke of the table, has a distinct advantage over the horizontal spindle machine using the periphery of the wheel, and which would have to be traversed transversely in order to cover a work surface wider than the width of wheel.

Quite apart, however, from the question of heat distribution, the vertical spindle machine has the greater productive capacity, and for grinding wide surfaces or groups of small articles this type of machine has the advantage of the horizontal spindle machine. The vertical surface grinding machine is now being adopted in all classes of engineering works, and wherever flat surfaces have to be produced, such as in machine-tool work, there is no method that can be compared with it for cheapness of production.

A machine of this type added to the equipment of any works, and used for the production of flat surfaces, has, more than any other type of grinding machine, a beneficial effect throughout the works, and in this respect raises automatically the standard of work produced. In this way, given an accurate machine, it is so very easy to true up straight edges and similar tools and keep them all in a constant high state of perfection; and by having a machine of this type always in readiness to produce flat surfaces the result is that more accurate work is automatically produced throughout the works.

The *time required* for grinding a given surface can be ascertained with fair accuracy once a basis is found, based on area ground and amount of metal removed. Under normal working conditions, a grinding wheel has a certain capacity for the removal of metal, based on its cutting area or its diameter and width.

Examples of Grinding.

The following examples will serve to show what may be expected from wheels which are suited to the conditions and work in hand :—

A batch of 72 soft steel spindles of diameters ranging from 1½ inch down to $\frac{9}{16}$ inch by 8 inches long, and having from ·010 to ·015 inch left for grinding, were finished in an average time of 4½ minutes each. The wheel was Norton 'Alundum' 60.M, running at a speed of 6,500 ft. per minute, and it lost ·0005 inch diameter for every six spindles ground. The work speed was 30 ft. for $\frac{9}{16}$ diameter, and 60 ft. for 1½ inch diameter, and the grinding limit was ·00025 inch.

Cast-iron spindle tubes 2½ inches diameter by 12 inches long took an average time of 10 minutes each to finish. The grinding limit was ·00025 inch, and the amount removed ·010 to ·015 inch. The wheel was Norton 'Alundum' 46.H, running at 5,500 ft. per minute, and it lost ·001 inch in diameter on every tube. The speed of the work was 30 ft. per minute.

These examples are given as indicating an amount of reduction in wheel size which should not be exceeded under ordinary conditions. (*Churchill Machine Tool Co. Ltd.*)

Grinding Allowances.

(For Norton and Heald Grinding Machines.)

Frequent inquiries as to the amount of stock which should be left on turned and bored work to be ultimately finished to size by grinding had led to the answer that this depends on several factors which must be ascertained before a correct allowance can be determined. The object aimed at should be to so proportion the work between the lathe and the grinding machine that the total time taken by both in producing the desired degree of finish and accuracy is reduced to the minimum.

In a desire to turn out a 'good job' the turner sometimes overlooks the fact that a smooth piece of work having only a small allowance may take as long to finish in the grinding machine as a rough-turned job on which more metal is left.

The chart, fig. 7, shows the grinding allowances which are recommended for turned or bored work up to 12 ins. diameter. Although the amounts specified may, to some, appear excessive, they may be allowed with confidence in establishments possessing a grinding department run according to modern ideas of efficiency and lathes sufficiently powerful to take the coarse feeds recommended.

Curves A and A¹ show maximum and minimum amounts to be left on the diameter of rough turned work over 12 diameters long.

Curves B and B¹ show maximum and minimum amounts to be left on the diameter of rough turned work under 12 diameters long.

Curves C and C¹ show maximum and minimum amounts to be left on diameter of smooth turned and bar-lathe work over 12 diameters long.

Curves D and D¹ show maximum and minimum amounts to be left on diameters of smooth turned and bar-lathe work under 12 diameters long.

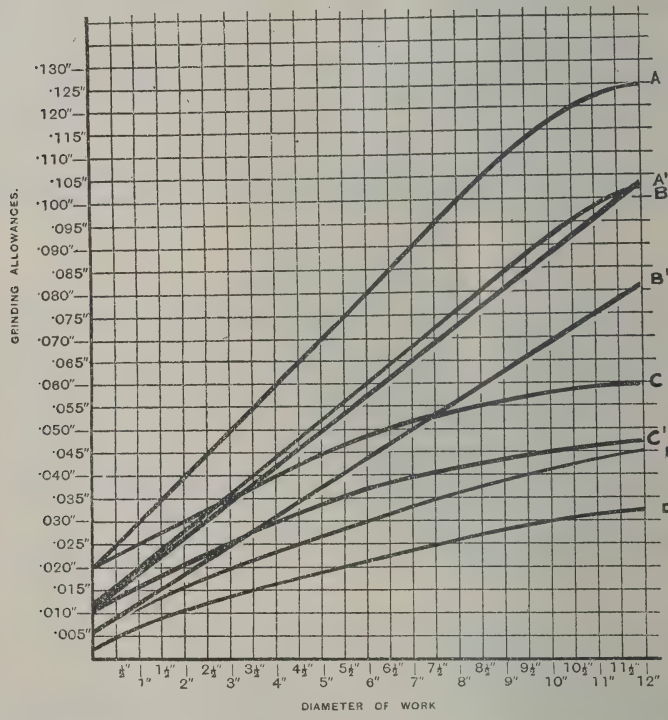


FIG. 7.—Grinding Allowances for Norton Cylindrical Grinding Machines.

NOTE.—By 'rough turned,' is meant work having coarse traverse marks, the measurements being taken on the top of the ridges. The following are the finest feeds which should be employed :—

For work up to 2 ins. diameter	30 per inch.
For work from 2 ins. to 4 ins. diameter	20 ,,
For work from 4 ins. to 8 ins. diameter	16 ,,
For work from 8 ins. to 12 ins. diameter	8 ,,

Case-hardened work is an exception, because the finish must be fairly smooth to allow regular penetration of the casing compound. Use curves C and C¹ for all such work.

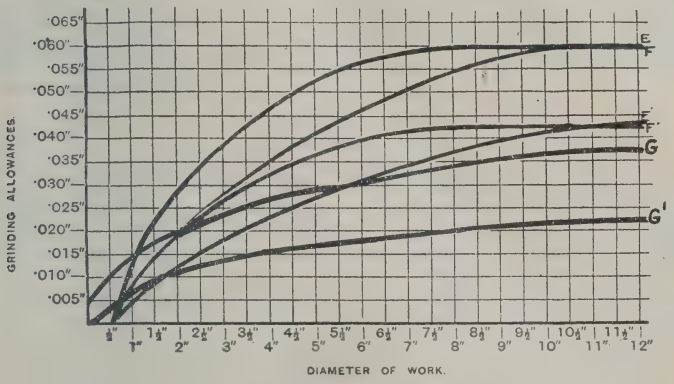


FIG. 8.—Grinding Allowances for Heald Internal Grinding Machines.

Curves E and E′ (fig. 8) show maximum and minimum amounts to be left in the bore of mild steel work that is to be case-hardened before grinding.

Curves F and F¹ show maximum and minimum amounts to be left in the bore of carbon or high-speed steel work that is to be hardened before grinding.

Curves G and G¹ show maximum and minimum amounts to be left in the bore of soft work, whether steel, cast iron, or brass.

NOTES.

The following explanatory notes will serve to show the theory followed out, and will assist in determining allowances for the exceptional jobs which will occasionally present themselves :—

Taking first *external work*, as being the more common, it will be noted that a larger allowance is made on articles which exceed twelve diameters length than in the case of shorter jobs. This is to save lathe work.

A job over twelve diameters long will spring considerably under a good cut, and there is a possibility of bends making their appearance. The largest possible allowance is therefore made on this work, so that the turner need not waste the time which would be taken in producing articles more nearly parallel and straight.

Then, again, a distinction is made between rough-turned work and that which is produced by a fine feed or made on turret lathes with a box tool.

For all work turned between centres, with the exception of that which is to be carbonised for case-hardening, the use of a coarse traverse is advocated, the finest feed per inch that should be used for various diameters being specified on the chart. Work which is to be carbonised must be turned with a fairly smooth finish, so as to allow regular penetration of the casing compound ; therefore the allowance specified for smooth work over twelve diameters long should be used for case-hardened work whatever its length. If such work is hollow it may distort after quenching, therefore great care must be exercised in hardening, as the allowance above specified cannot be exceeded or the hard skin would be entirely removed in grinding to size.

The allowance for carbon and high-speed steel work which is hardened will be the same as that provided for soft work, as any distortion which occurs must be corrected in the straightening press before grinding.

Internal work, which is dealt with by the lower portion of the chart, is divided into three classes as follows :—

1. Mild steel case-hardened.
2. Carbon or high-speed steel hardened.
3. Soft work, whether steel, cast iron, or bronze.

Hardened and case-hardened work in which the hole is less than half an inch in diameter should, as shown in the chart, be bored or reamed to standard size, as there will be a sufficient

shrinking when the quenching takes place to provide a grinding allowance. It will be noted that the amount allowed in case-hardened work increases very rapidly up to 6 ins. diameter; this is to allow for distortion in hardening. Above this size the increase is slow, and care should be taken to avoid excessive distortion, as no larger allowance can be made, otherwise the hard skin would be removed by the grinding operation. In determining the allowance for soft work it should be remembered that the class of finish given to the hole will decide whether the high or low limit should be worked to. Thus, in holes which are rough drilled or bored, the allowance should approach the maximum, whilst in reamed holes the minimum allowance should be left.

(*Alfred Herbert Ltd., Coventry.*)

Polishing.

For grinding and polishing *marble*, *stones*, and *glass*, crushed steel has proved very satisfactory, on account of its hardness, sharpness, and toughness. It is, however, but little used in this country, sand, carbide, or aluminous abrasives being generally employed. For cutting stone, marble, and glass, a metal wheel with loose sand and water is largely employed, but grinding wheels of carbide and aluminous abrasives of medium grade and 36–50 grit are being increasingly employed. For producing a rough surface on glass, sand is largely used in what is known as the sand-blast process.

For *smoothing wood* and similar materials, garnet-emery and sand, mounted on paper or cloth, are largely employed, garnet being especially suitable for hard woods. For finishing wooden handles, sand mounted in endless belts is largely used.

In the leather industries, and especially in the manufacture of boots and shoes, corundum and carborundum cloths are largely used for heel scouring and breasting and for buffing.

For work in which an *exceptionally hard abrasive* is required, including the truing of abrasive wheels, diamond bort or carbonado are employed.

For polishing steel articles, blocks of carbide or aluminous abrasive or cloth or paper covered with emery or corundum is largely employed.

For polishing other metals, glass, etc., loose powders are employed. Such powders may be used in the dry or wet state, and may be rubbed on to the material to be polished, or they may be applied by means of a wheel (or 'dolly') composed of discs of cloth.

For polishing brass and other softer metals, very fine silica, quartz flour, emery carbide or aluminous abrasives, crocus, rouge, or whiting are employed. For silver and gold well-slaked lime is largely used. The polishing powder is sometimes treated with rouge to disguise its nature and to give white metals a slightly ruddy tint, which improves their appearance.

In the so-called liquid polishes, a little oxalic acid or other chemical detergent is sometimes added to the abrasive powder, or to the liquid in which the latter is suspended.

Sand Blasting.

The air pressures used for different materials are, approximately, as follows:—Steel castings or forgings, 80 to 100 lbs.; malleable iron, 70 to 85 lbs.; cast iron, 60 to 70 lbs.; and brass and aluminium, 35 to 50 lbs.

For some classes of work a small nozzle opening, that is, a fine strong jet, may be desirable; for other work a broader stream, covering a larger surface but working at a lower pressure may be best. Table I. gives the relation between air flow in cubic feet of free air per minute at varying pressures, and the horse-power required to produce them by single-stage compression, for nozzles ranging in diameter from $\frac{1}{8}$ to $\frac{3}{8}$ in. inclusive.

Typical cylinder dimensions, together with the displacement and the horse-power required to develop various amounts of air pressure, are given in Table II.

In cases where there is moisture in the air, it is well to make provision for the elimination of the moisture by installing a moisture separator or a suitable heater.

Sand is the most commonly used abrasive on account of its relatively low price. Ordinary sand is inferior to sea sand and silica sand, as the two latter possess greater hardness and are therefore more lasting. Abrasives such as steel grit and shot are used to a certain extent, and the use of these more expensive abrasives is warranted under certain conditions. For classes of work such as electro-plating or galvanising, the metallic dust adhering to the work would make its use prohibitive, because it prevents perfect galvanising, although no difficulty is experienced in this respect with sand.

There is no one abrasive that is best adapted to all classes of work. A selection must be made with due regard to reclaiming means, to greatest economy in operation and to maximum production. By making tests with various materials, and keeping accurate records of quality of work, output, life of the abrasive, and so on, the one best suited for the individual application is readily determined. Such tests have shown metal abrasives to have about sixty times the

life of sand. This apparently large percentage may, however, be offset to a great extent by losses of abrasive in operation or in handling. In good steel foundry practice these losses may be kept as low as 10 per cent., while the average loss due to disintegration, for different grades of sand, amounts to about 20 per cent. per month. The reduction in cleaning time resulting from using metal abrasives instead of sand varies, of course, but a gain of about 15 to 20 per cent. in time appears to be in line with actual practical experience. Metal abrasives do not require large sand-storage bins and have the added advantage of producing less dust, thereby improving the general working conditions.

TABLE I.—FLOW OF FREE AIR FOR DIFFERENT SIZES OF NOZZLES.

Diameter of Nozzle. Ins.	Pressure (cub. ft. per min.) and Corresponding Horse-power Required. 20 lbs.	H.P.	30 lbs.	H.P.	40 lbs.	H.P.	50 lbs.	H.P.
$\frac{1}{8}$	7·70	0·63	10·00	1·03	12·30	1·50	14·50	1·99
$\frac{3}{16}$	17·10	1·40	22·50	2·32	27·50	3·26	32·80	4·49
$\frac{1}{4}$	30·80	2·53	40·00	4·12	49·10	5·99	58·20	7·97
$\frac{5}{16}$	48·17	3·95	62·89	6·48	76·60	9·36	90·70	12·43
$\frac{3}{8}$	69·00	5·66	90·00	9·27	110·00	13·42	130·00	17·81

Diameter of Nozzle. Ins.	60 lbs.	H.P.	70 lbs.	HP.	80 lbs.	H.P.	100 lbs.	H.P.
$\frac{1}{8}$	16·80	2·57	19·00	3·19	21·20	3·86	25·73	5·33
$\frac{3}{16}$	37·50	5·74	43·00	7·22	47·50	8·65	57·88	11·98
$\frac{1}{4}$	67·00	10·25	76·00	12·77	85·00	15·47	103·00	21·32
$\frac{5}{16}$	105·00	16·07	119·00	20·00	133·00	24·10	161·00	33·82
$\frac{3}{8}$	151·00	23·10	171·00	28·73	191·00	34·76	232·00	47·90

TABLE II.—CYLINDER DISPLACEMENTS AND HORSE-POWER REQUIREMENTS OF AIR COMPRESSORS.

Cylinder. Diam. Ins.	Stroke. Ins.	Revs. per min.	Piston Displacement. Cub. ft. per min.	Horse-power Requirements. Pressure (cub. ft. per min). 50	60	70	80	90	100
6	6	300	57	7	7·5	8·5	9·0	9·5	10
8	8	260	118	14	15·5	16·8	18·0	19·0	20
10	10	235	210	24	27·0	29·0	31·0	33·0	35
12	12	220	340	45	50·0	54·0	58·0	62·0	65

All abrasives should be screened each time before using, to remove particles large enough to clog the nozzle, and also to eliminate fine particles which only produce dust and have no abrasive quality, but which consume some of the pressure. Screen separators, frequently operated by compressed air, may be used for this purpose. (*Abstract, C.M.S.*, '*Machinery*,' *Jan.* 13, 1921.)

SECTION XX

PART III

STEAM-HAMMERS.

(Messrs. B. & S. Massey, Ltd., Openshaw.)

Three standard types of steam-hammer are made by B. & S. Massey, Ltd.—the 'Overhanging Form with Slides' the 'Arch Form with Slides,' and the 'Rigby type without Slides.' All these hammers can be made suitable for driving by compressed air instead of steam.

Overhanging Form with Slides.

These hammers (fig. 1) are usually preferred for general smith-work. The anvils are accessible to the workman from three sides, and the tups are supported and accurately guided by the slides, making it possible to do accurate stamping in dies.

Each hammer has two separate standards, with a space between them, through which long bars can be passed. All the hammers are double-acting and are fitted with equilibrium working valves.

Up to and including the 12-cwt. size, the hammers are fitted with a combined self-acting and handworked valve gear; the 15 cwt. and larger sizes are ordinarily fitted with Massey's Patent Handworked Expansion Valve Gear, but a combined self-acting and handworked gear can be fitted if desired

The pistons, which are forged solid with the piston-rods, are fitted with steel piston-rings. The palletts are made of tough steel with planed and hardened faces.

The anvil blocks are about 8 times the weight of the falling mass, and in the 12 cwt. and smaller sizes they are turned to fit the bored baseplates; this greatly increases the efficiency of the hammers when it is desired to use them for stamping in dies.



Fig. 1

DIMENSIONS, WEIGHTS, AND MEMORANDA OF OVERHANGING FORM OF STEAM-HAMMERS WITH SLIDES.

Standard sizes	½ cwt.	1 cwt.	1½ cwt.		3 cwt.
Intermediate size				2 cwt.	
Diameter of cylinder	4½″	5½″	6″	6″	7½″
Longest stroke	11″	12″	13″	13″	17″
Clear space between slides	7″	7⅜″	6¼″	6¼″	8¼″
Overhang to pallett centres	7⅜″	9″	10″	10″	11″
Total height from floor	5′ 5″	5′ 8″	6′ 9″	6′ 10″	8′ 1″
Steam and exhaust pipes	1″ & 1¼″	1″ & 1¼″	1¼″ & 1½″	1½″ & 1½″	1⅜″ & 1½″
Approximate weight	1 ton	1½ tons	2 tons	2½ tons	3 tons
Without anvil block	¾ ton	⅞ ton	1½ tons	1½ tons	1⅞ tons
Without anvil block and baseplate					1½ tons
*Diameter of bar worked efficiently	1½″	2″	2½″	3″	4″
†Approximate steam consumption (lbs. per hour)—					
(*a*) On hard blows	115 lbs.	215 lbs.	315 lbs.	410 lbs.	555 lbs.
(*b*) Average on mixed blows	19 lbs.	35 lbs.	50 lbs.	64 lbs.	86 lbs.

Standard sizes	4 cwt.	5 cwt.		7 cwt.	
Intermediate sizes			6 cwt.		8 cwt.
Diameter of cylinder	8″	9″	9″	10″	10″
Longest stroke	19″	21″	21″	24″	24″
Clear space between slides	10¾″	10¾″	10¾″	11¾″	11¾″
Overhang to pallett centres	11″	13″	13″	14″	14″
Total height from floor	8′ 9″	9′ 0″	9′ 0″	9′ 7″	9′ 7″
Steam and exhaust pipes	1⅝″ & 2¼″	2″ & 2½″	2″ & 2½″	2½″ & 3	2½″ & 3″
Approximate weight	3½ tons	5 tons	5½ tons	6½ tons	7 tons
Without anvil block	2¼ tons	3 tons	3 tons	3⅝ tons	3¾ tons
Without anvil block and baseplate	1½ tons	2½ tons	2½ tons	2¾ tons	2¾ tons
*Diameter of bar worked efficiently	4¾″	6″	6¼″	7″	7¼″
†Approximate steam consumption (lbs. per hour)—					
(*a*) On hard blows	680 lbs.	800 lbs.	925 lbs.	1050 lbs.	1150 lbs.
(*b*) Average on mixed blows	105 l bs.	123 lbs.	140 lbs.	158 lbs.	173 lbs

Standard sizes	10 cwt.		15 cwt.	20 cwt.	25 cwt.
Intermediate size		12 cwt.			
Diameter of cylinder	12″	12″	13⅜″	14½″	15⅜″
Longest stroke	27″	27″	30″	33″	36″
Clear space between slides	12⅜″	12⅝″	14½″	14½″	17″
Overhang to pallett centres	15″	15″	18″	18″	18″
Total height from floor	10′ 7″	10′ 7″	12′ 0″	12′ 8″	13′ 6″
Steam and exhaust pipes	3″ & 3½″	3″ & 3½″	3″ & 4″	3½″ & 4½″	4″ & 5″
Approximate weight	9 tons	9½ tons	14¾ tons	18½ tons	22 tons
Without anvil block	5½ tons	5 tons	8¾ tons	10½ tons	12½ tons
Without anvil block and baseplate	4 tons	3¾ tons	5¼ tons	7½ tons	8¾ tons
*Diameter of bar worked efficiently	8″	8¼″	9″	—	—
†Approximate steam consumption (lbs. per hour)—					
(*a*) On hard blows	1390 lbs.	1560 lbs.	1850 lbs.	2340 lbs.	2780 lbs.
(*b*) Average on mixed blows	203 lbs.	230 lbs.	270 lbs.	330 lbs.	385 lbs.

* All these figures are necessarily rough approximations.

They are meant to apply to average engineers' smithwork, and are for efficient results on this class of work, with a steam pressure of about 60 lbs. per sq. in.

Even for this they may, at a pinch, be exceeded 10 per cent.

There are many classes of work which require much larger hammers, and some classes which require smaller hammers than those indicated, owing chiefly to the varying amount which has to be done at a heat.

† Steam Consumption.

A steam pressure of about 60 lbs. per sq. in. is assumed.

During ordinary forging there are many blows of less than full force and there are also necessary pauses (holding up) for adjusting work or tools during a heat.

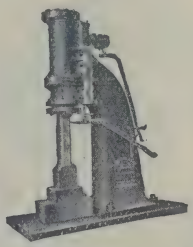
While line (*a*) above gives the consumption on continuous hard blows only, line (*b*) gives the consumption as ordinarily reduced by these circumstances. Further, under average smithy conditions, a hammer may be assumed to be actually in motion about 15 minutes in every hour, and the figures given above (in line 6) are based on this assumption.

The 'RIGBY'S PATENT' Hammers


both for Steam and Compressed Air, still maintain their High Reputation for Productive Efficiency, in spite of various attempts at imitation.

ASK ANY PIECE-WORK SMITH WHO HAS HAD THE GOOD FORTUNE TO WORK UNDER ONE.


We have equipped many of the largest Railway Workshops and Shipbuilding Yards both at Home and Abroad, with our well-known Hammers, and our many conversions from steam to air, are giving great satisfaction.



For Steam or Air.

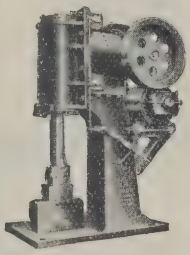

Electric Drive.

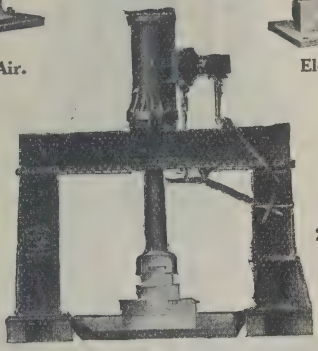

Girder Hammer.

In sizes from 2 tons upwards.

IMPORTANT—We are the Patentees and Sole Makers of the '*RIGBY'S PATENT*' Hammer, and all Hammers manufactured by us bear our Trade Mark '*RIGBY'S PATENT*' cast on the columns.

R. G. ROSS & SON, LIMITED

(LATE GLEN & ROSS),

GREENHEAD, GLASGOW.

POWER HAMMERS,

BELT OR MOTOR DRIVEN,

FOR

FORGING, PLANISHING, RIVETTING, SHOVEL PLATING, FORK DRAWING, EDGE TOOL WORK,

ETC., ETC.

WRITE FOR LISTS.

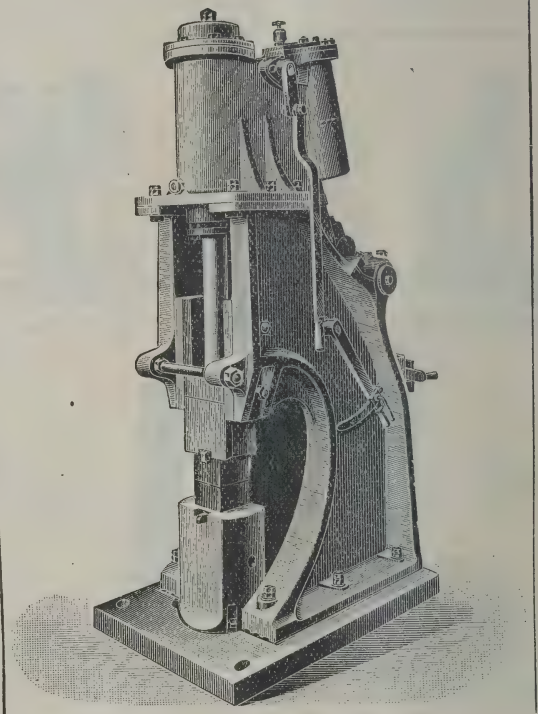


ILLUSTRATION OF 5 CWT. SIZE 20" STROKE.

W. & J. PLAYER,

SMITHFIELD WORKS, SHERLOCK ST.,

Telegrams, 'METHOD.' **BIRMINGHAM.**

F. 1023

Where the hammers are fitted with Massey's Patent Handworked Expansion Valve Gear, these figures can be reduced by 20 to 25 per cent.

In cases in which one boiler is put down solely to drive one hammer, the capacity of such boiler should be fixed according to line (*a*), page 1022, because otherwise the pressure would fall too low during a normal run of hard blows.

Arch Form with Slides (Fig. 2).

These hammers, fig. 2, are made in sizes ranging from 3 cwt. to 19 tons and over, and the design provides a maximum of strength and rigidity. The 15 cwt. and larger sizes are fitted with Massey's Patent Handworked Expansion Valve Gear.

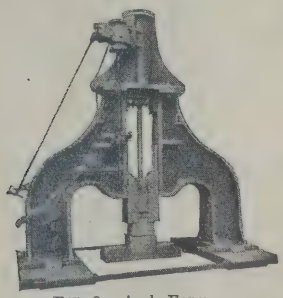


Fig. 2.—Arch Form.

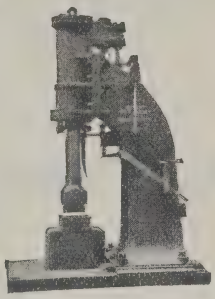


Fig. 3.—Rigby Type.

Rigby Type without Slides (Fig. 3).

These hammers, fig. 3, which are made in sizes from 3 cwt. to 3 tons, are particularly suitable where forgings of large size and awkward shape have to be dealt with. The strokes are longer and the cylinders larger in diameter than in the other forms described. All sizes are fitted with Massey's Patent Handworked Expansion Valve Gear.

Energy and Velocity of Blow.

If a = area of piston, in square inches; p = average pressure of steam on piston during downward stroke, in pounds per square inch; S = stroke of piston, in feet; W = falling weight in pounds; E = energy of blow after full stroke and before striking, in foot-pounds, friction being neglected.

$$E = (ap + W)S.$$

P = total pressure on piston = pa; F = total force causing downward acceleration = P + W = pa + W; g = acceleration due to gravity = 32·2; V = velocity after full stroke and before striking, in feet per second, friction again being neglected.

$$V^2 = \frac{2FgS}{W}.$$

No commercial use is made of these calculations, either for the naming of sizes of hammers or for any other purpose.

The question is sometimes asked: *What weight of blow does the hammer strike?*

The force of a blow cannot be stated in terms of weight at all, because the pressure of a weight is continuous, whereas the force of a blow is expended in a moment. It has, however, been ascertained, by careful experiments, that the maximum blow of a 5-cwt. double-acting steam-hammer, with moderate steam pressure, produces a crushing effect upon a piece of hot iron as great as that produced by a load of about 30 tons, and a ½-cwt. double-acting steam-hammer a crushing effect equal to that produced by a load of about 2½ tons.

Naming Sizes of Steam-hammers.

In naming the sizes of steam-hammers no account is taken of the pressure of steam upon the piston. Thus, a 5-cwt. hammer is one in which the falling mass weighs at least 5 cwt., but of course the force of the blow is greatly increased by the pressure of steam above the piston accelerating the fall.

Foundations.

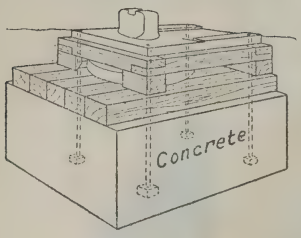


FIG. 4.—Typical Foundation for Steam-Hammers of the Overhanging Form.

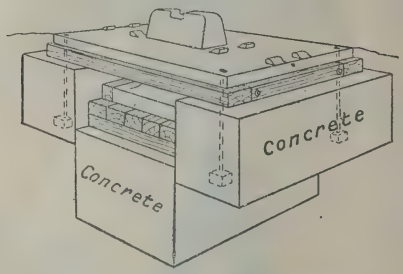


FIG. 5.—Typical Foundation for Steam-Hammers of the Arch Form.
(*B. & S. Massey, Ltd.*)

PNEUMATIC POWER HAMMERS.

THE MASSEY IMPROVED PNEUMATIC POWER HAMMER.

These hammers (fig. 6) are arranged for belt or for direct electric drive. They are similar to steam-hammers in many respects, and are about equal to them in working capacity, assuming the steam-hammers to be working under ordinary conditions of pressure, etc.

It is very important to note that the size name of each hammer indicates the true weight of its falling parts.

The anvil block is set diagonally, to enable long bars to be worked in either direction.

The essential parts of the hammer are two cylinders connected by air passages which are governed by a valve under the control of the operator.

When the bypass A (fig. 7) is closed, the reciprocating movement of the pump piston is transmitted to the hammer by the air, which is forced alternately to the top and bottom sides of the hammer piston, through passages B and C.

If A be opened, the air flows backwards and forwards through the bypass, and the hammer remains at rest.

To hold the hammer up at the top of its stroke the valve is turned so that two one-way valves are brought into play, and the air is forced into and retained in the lower part of the hammer cylinder.

In another position of the valve, the above action is reversed, with the result that a partial vacuum is formed below the hammer piston and the hammer is therefore held firmly down on the anvil.


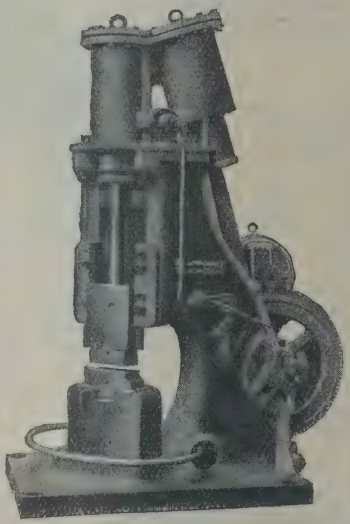


FIG. 6.

THE MASSEY IMPROVED PNEUMATIC HAMMER.

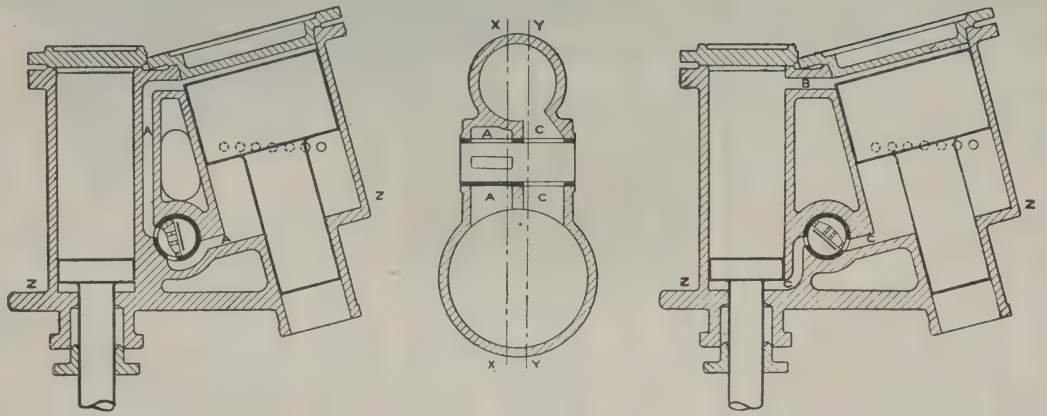Method of Working.



Section through XX. Section through ZZ. Section through YY.

FIG. 7.

DIMENSIONS, WEIGHTS, AND MEMORANDA OF PNEUMATIC POWER-HAMMERS.

Standard sizes	½ cwt.	1 cwt.	2 cwt.	3 cwt.	5 cwt.	7 cwt.	10 cwt.	15 cwt.	20 cwt
Longest stroke (inches)	11	12	14	17	21	24	27	30	33
Driving pulley diam. and width of belt (inches)	21×2½	24×3	30×3	30×4	36×5	42×8	48×10	(2) 57×7	30×9
Revolutions per min.	280	250	200	160	140	120	110	100	85
Diameter of bar worked efficiently (inches)	1½	2	3	4	6	7	8	9	10
Maximum power (full blow) B.H.P.	4	6	9	14	20	24	30	40	50
Mean consumption in B.T.U. (kwt. hours). approximate	·7	1	1·5	2	3	3·5	4	6	7
Size of motor (continuous rating)	3	4	6	10	14	18	23	30	35
Approximate weight of hammer (tons)	1½	1¾	2¾	4	6¼	8	12	17½	22¾
Ditto, without anvil block (tons)	—	—	2	2¾	4¼	5¼	8¼	11½	15

(*B. & S. Massey, Ltd.*)

PLAYER'S PNEUMATIC POWER HAMMERS.

(*Messrs. W. & J. Player.*)

These hammers, for forging, swaging, riveting, and planishing, are made in various patterns.

General Forging Hammers

Are on the double cylinder principle, in which one cylinder is used as a pump to actuate the piston in the other or hammer cylinder. The design of the hammer is similar in the hammer part to that of a steam hammer, with heavy base plate through which a separate anvil comes, which is kept from turning by keys, but is free to give vertically to the shock of the blows, without transmitting the shock to the baseplate or hammer.

The frames are of heavy design, in cast iron, with separate adjustable V slides for the tup to run in.

There is ample space between the tools and the frames, the latter being open so that long bars can be put through if necessary. The piston, rod, and tup are of mild steel forgings, following steam hammer practice. The cylinders and valve chamber are cast in one piece, and the valve is a cylindrical one. The design of the valve control is such that the hammer will strike heavy or light blows, stop up or stop down at will, whilst the power used is proportionate to the force of the blows.

The hammers can be driven either by belt, or by direct electric motor drive through gearing, and are made with striking masses of 1, 2, 3, 5, 7, and 10 cwt.; they are claimed to be equal in effective working to similar sizes of steam hammers under ordinary steam pressure, but to be much more economical in working.

Forging Hammers,

For drawing down, swaging, edge tool making, etc. For work requiring a rapid short stroke, a range of hammers is made with an air-cylinder control, by which all shock of the blow is taken from the working parts, and the force of the blows controlled from zero to the heaviest possible, whilst the hammer is working.

The base plate, anvil, and bottom part of the frames are of the usual steam hammer type, but the top of the frames carries a crank shaft which operates an air cylinder running in slides on the frames.

In the cylinder is the piston and rod, the latter carrying the tup. The piston is driven by the air cushions above and below it, which act as springs, and enable the piston to take a much longer stroke than the cylinder does. A valve gear on the cylinder regulates the amount of air above and below the piston, and, by varying this, enables the force of the blow to be perfectly regulated.

This type of hammer is made in 40 lbs., ¾, 1½, 3, 5, and 7 cwt. sizes, and is largely used for shovel and hoe plating, being made with arch frames for these purposes. They are also employed for edge tool forging, ship slip drawing, tube tagging and tapering, swaging, etc.

Riveting Hammers.

Small hammers of this description are constructed to deal with rivets ⅛ in. and under, and other sizes for rivets up to 2 ins. diameter, in the cold state.

The arrangement is that of a cushion air-cylinder hammer of similar type to that used for edge tool forging, but the riveting tool is made to revolve, and is so shaped as to operate on only a small portion of the head of the rivet at each blow, the rotation of the tool gradually

working it all round the rivet head to finish it. Snap head, cup head, or flat head riveting can be done according to the shape of tool used, and as the air-cushion control takes the blow off completely when required, it is not necessary to stop the hammer when putting the work in and out. The hammers are successfully working on chain work, cycle pedals, wrought-iron pulleys, agricultural machinery, wheels, and parts, etc.

Planishing Hammers.

For sheet metal work in which a quick running sharp blow is required, a special type of power hammer is made, in which the head is actuated by a rocking lever, this in turn being reciprocated by a crank pin. The head consists of a cylinder bored out of a solid forged steel block which works in adjustable slides on the frame of the hammer. The cylinder has two slots in its sides, and a phosphor bronze piston the length of the slots fits in the cylinder, so that an air cushion is formed top and bottom as soon as the ends of the piston pass the ends of the slot. The piston is driven by a rocking shaft by means of a pin passing through the slots, the end of the rocking shaft being forked to carry the pin. The piston, as it moves, causes the head to take its stroke by means of the air cushion inside it, and these air cushions prevent any shock of the blow being communicated to the rocking shaft or any other working part. The rocking shaft works on a fulcrum which can be moved nearer to or further away from the head, so that the stroke can be regulated for either heavy or light blows. The fulcrum works in a slot of such an inclination that the blow, whether long or short, comes to the same place at its lowest point.

A special feature in the design is that the down-stroke of the head takes place in less than half the revolution of the crank pin, so that a very sharp blow is struck.

This type of hammer is largely in use for coppersmith's work, being made in sizes to work copper from $\frac{1}{16}$ in. to 1 in. in thickness; the frames are in suitable designs for fixing to the floor, wall, or overhead beams. Suitable anvils for cylinder, bowl, and curved work are also made.

Special designs are constructed for dealing with the special curves, etc., for motor car panel work in steel, aluminium, etc., and large sizes for heavy sheet steel work, for ventilator cowls, and similar work.

Compressed Air Hammers.

In order to produce an air-driven hammer of the greatest possible efficiency attention must be given to the following points:—

The reduction of clearance losses;

The reduction of back pressure losses;

The expansive use of the air;

The prevention of afterflow into the cylinder after the blow has been struck.

The choice of a suitable pressure.

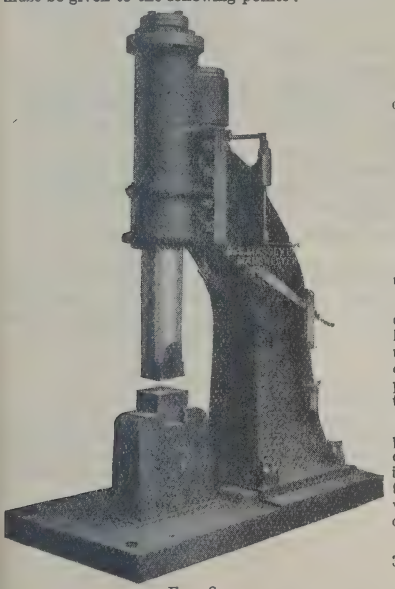


FIG. 8.

THE MASSEY PATENT COMPRESSED AIR HAMMER.

(Fig. 8.)

Method of Working.

The underside of the piston is always acted upon by the pressure of air from the supply.

A port connects the upper portion of the cylinder with a point about half-way down its length. When, therefore, the piston is at the upper half of its stroke there is a free passage of air from the supply to the upper side of the piston through this port, and the hammer is thrown down.

On passing the lower end of the port the piston cuts off the supply, and the remainder of the stroke is done expansively. The cycle is completed by exhausting the expanded air to atmosphere by a movement of the valve, when the hammer will rise under the influence of the constant pressure below the piston.

These hammers are made in sizes from 3 cwt. to 30 cwt.—weight of falling parts.

The hammers are designed for a pressure of 50 to 60 lbs. per sq. in., and though they may be modified to suit higher pressures these are not recommended for economical working.

(*B. & S. Massey, Ltd., Openshaw.*)

DROP STAMPS.

The Massey Friction Drop Stamp.

The practice of Stamping, in Dies, parts which have to be made in large numbers, such as motor-car parts, railway wagon parts, etc., etc., has become very general, and the tool usually adopted for this purpose in this country is the 'drop stamp.' Latterly, the friction lifted type of drop stamp (fig. 9) has tended to supersede the steam lifted type, on account of the improved control, the greater efficiency, and the smaller cost of up-keep.

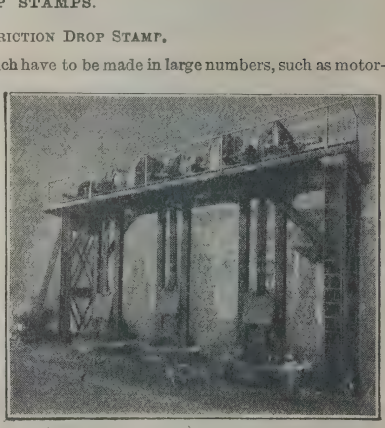


Fig. 9.—Battery of 30-15-20 cwt. Friction Drop Stamps.

General Construction.

The usual plan is to have two, three, or four drop stamps of different falling weights arranged in a battery. The lifting mechanism in this case is mounted on girder work supported on stanchions, while the falling weight or tup is guided by vertical rolled steel guides resting in recesses in the anvil block, and supported at their upper ends by the girder work in such a way as not to transmit shock to the lifting mechanism.

Details of Friction Lifters.

The lifters themselves resemble a band brake in construction. A steel brake band lined with suitable material, and connected with the lifting arm, is made to grip a constantly revolving drum by means of a lever actuated by hand through a pulling cord, and the tup is thereby raised. As soon as the tension on the cord is released, a spring disengages the band, and the tup falls under the influence of gravity.

A special arrangement is adopted by means of which the grip of the friction band is automatically reduced as the tup rises, thereby making it necessary to maintain a constant pull on the cord in order to prolong the rise of the tup; when, moreover, the cord is held stationary, the tup remains suspended at the point to which it may have been raised, and as stated above, the tup falls when the tension on the cord is released.

It will therefore be seen that a very intimate relation exists between the movements of the tup and those of the pulling cord.

The movement of the hand is only a short one, and the pull required is very slight, but every movement of the hand is reproduced on a larger scale by the tup. Those who are familiar with the old-fashioned kick stamps in which a heavy pull was required the whole length of the stroke, and which sometimes required two or three men to act as pullers, appreciate very highly the action of friction stamps in which a control as excellent as in the kick stamp is secured with so little labour on the part of the operator.

Method of Driving.

The friction lifters are generally mounted on shafts driven by spur gearing from a quick-running back shaft. A flywheel which also serves as a driving pulley is mounted on one end of the back shaft and supplies the reserve of power needed at the moment of picking up the tup.

The drive is usually taken direct from an electric motor placed either on one of the stanchions or in the larger sizes on the floor, or in some other convenient position.


SECTION XXI

SCREW THREADS AND SCREWS — BOLTS AND NUTS — LOCK NUTS—SPANNERS—PIPE FLANGES—KEYS—SCREW TAPS—COUPLINGS—PULLEY ARMS AND BOSSES

(Revised and amplified by Dempster Smith, M.Sc., M.I.Mech.E.)

BARWELLS, Limited

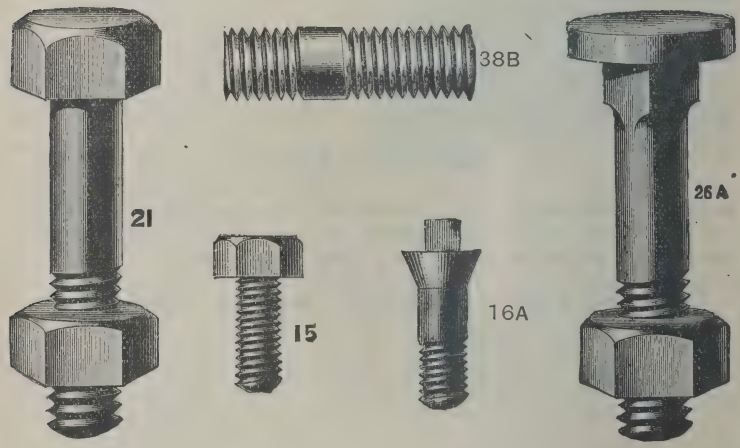Bolts, Nuts, Screws, Rivets, etc., in Iron, Steel, Copper, Naval Brass, Yellow Metal, etc.



Also Copper, Tin and General Metal Merchants.

Makers of Ingot Brass and Gun Metal.

BARWELLS, Limited,

Hockley Nut, Bolt and Rivet Works,

Brookfields Road, Birmingham.

Telegraphic Address : 'METALS, BIRMINGHAM.' Telephone No. : CENTRAL 2145 (3 lines).

(33579)
F. 1031

SECTION XXI

SCREW THREADS AND SCREWS—BOLTS AND NUTS—LOCK NUTS—SPANNERS—PIPE FLANGES—KEYS—SCREW TAPS—COUPLINGS—PULLEY ARMS AND BOSSES.

(Revised and amplified by Dempster Smith, M.Sc., M.I.Mech.E.)

SCREW THREADS AND SCREWS.

Forms of Screw Threads.

Figs. 1, 2, 3, and 4 show four usual forms of thread, each of 1 inch pitch.

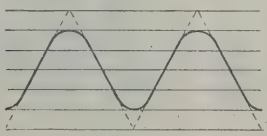


FIG. 1. Whitworth Thread-form.

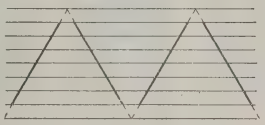


FIG. 2. American Thread-form.

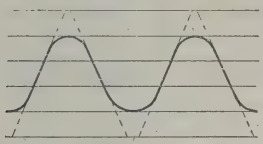


FIG. 3. Swiss Thread-form.

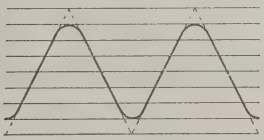


FIG. 4. Steinlen Thread-form.

In the *Whitworth* or *English Standard* thread (fig. 1) the angle made by the two sides of the thread is 55° for all sizes of thread. One-sixth of the depth of the triangle is rounded off the top and bottom, so that the angle of 55° gives for the actual depth rather more than three-fifths and less than two-thirds of the pitch.

In the *American* (*Sellers'*) thread (fig. 2) the angle made by the two sides of the triangle is 60°, and one-eighth of the depth is cut off the top and bottom of the triangle, leaving a flat one-eighth of the pitch in width.

In the *Swiss* or *Thury* thread (fig. 3) the angle made by the two sides of the thread is 47½°, and one-fifth of the depth is rounded off the top and bottom of the triangle.

For screw-plate Swiss threads the depth of the thread is three-fifths the length of the pitch.

The top of the ridge is formed by a circular arc (*a*), the radius of which equals one-sixth of the pitch. The space between two consecutive ridges is formed at the side next the core by a circular arc (*b*), the radius of which equals one-fifth of the pitch.

The Swiss thread for screws made in the lathe is the *Steinlen* thread (fig. 4). The angle made by the two sides of the thread is 58° 8′, and the radius of the connecting arcs is ·1011 of the pitch. The generating figure is an isosceles triangle, of which the base and the height are equal to the pitch. One-eighth of the depth is rounded off the top and bottom of the triangle.

The *British Association* thread is similar to that of Thury, except that the top and bottom of the threads are both rounded to the same radius, namely, two-elevenths of the pitch.

Screw Threads.

Whitworth's Standard Threads.

Dimensions in Inches.				Threads per Inch.	Pitch in Millimètres.	Dimensions in Inches.				Threads per Inch.	Pitch in Millimètres.
Outside Diameter.	Diameter at Bottom of Thread.	Size for Tapping.	Pitch.			Outside Diameter.	Diameter at Bottom of Thread.	Size for Tapping.	Pitch.		
1/32	·0293	—	·0066	150	·169	2 3/32	2·054	2 1/16	·25	4	6·35
3/116	·0413	3/64	·0166	60	·4233	2 1/8	2·18	2 3/16	·25	4	6·35
3/64	·0671	5/64	·0208	48	·529	2 5/32	2·304	2 1/16	·25	4	6·35
1/8	·093	3/32	·025	40	·635	2 1/4	2·384	2 11/32	·2857	3 1/2	7·257
5/32	·112	1/8	·0312	32	·793	2 5/8	2·509	2 13/64	·2857	3 1/2	7·257
3/16	·134	9/64	·0416	24	1·06	3	2·634	2 15/64	·2857	3 1/2	7·257
7/32	·165	11/64	·0416	24	1·06	3 1/8	2·759	2 49/64	·2857	3 1/2	7·257
1/4	·186	5/32	·05	20	1·27	3 1/4	2·856	2 57/64	·3077	3 1/4	7·815
5/16	·241	1/4	·0555	18	1·41	3 3/8	2·98	2 61/64	·3077	3 1/4	7·815
3/8	·295	19/64	·0625	16	1·587	3 1/2	3·105	3 1/8	·3077	3 1/4	7·815
7/16	·346	23/64	·0714	14	1·814	3 5/8	3·23	3 15/64	·3077	3 1/4	7·815
1/2	·393	13/32	·0833	12	2·116	3 3/4	3·32	3 21/64	·3333	3	8·466
9/16	·455	15/32	·0833	12	2·116	3 7/8	3·448	3 29/64	·3333	3	8·466
5/8	·508	29/64	·0909	11	2·39	4	3·573	3 33/64	·3333	3	8·466
11/16	·571	33/64	·0909	11	2·39	4 1/8	3·698	3 37/64	·3333	3	8·466
3/4	·622	5/8	·1	10	2·54	4 1/4	3·804	3 11/32	·3478	2 7/8	8·834
13/16	·684	11/16	·1	10	2·54	4 3/8	3·93	3 15/32	·3478	2 7/8	8·834
7/8	·732	47/64	·111	9	2·822	4 1/2	4·054	4 1/16	·3478	2 7/8	8·834
15/16	·795	51/64	·111	9	2·822	4 5/8	4·18	4 3/16	·3478	2 7/8	8·834
1	·840	27/32	·125	8	3·175	4 3/4	4·284	4 19/64	·3636	2 3/4	9·236
1 1/16	·942	61/64	·1428	7	3·628	4 7/8	4·409	4 23/64	·3636	2 3/4	9·236
1 1/8	1·067	1 1/16	·1428	7	3·628	5	4·534	4 7/16	·3636	2 3/4	9·236
1 3/16	1·161	1 11/64	·1666	6	4·233	5 1/8	4·66	4 43/64	·3636	2 3/4	9·236
1 1/4	1·286	1 19/64	·1666	6	4·233	5 1/4	4·762	4 47/64	·3809	2 5/8	9·676
1 5/16	1·368	1 3/8	·2	5	5·08	5 3/8	4·887	4 51/64	·3809	2 5/8	9·676
1 3/8	1·494	1 7/16	·2	5	5·08	5 1/2	5·012	5 1/64	·3809	2 5/8	9·676
1 7/8	1·59	1 19/32	·2222	4 1/2	5·644	5 5/8	5·137	5 5/64	·3809	2 5/8	9·676
2	1·715	1 23/32	·2222	4 1/2	5·644	5 3/4	5·24	5 1/4	·4	2 1/2	10·16
2 1/8	1·84	1 27/32	·2222	4 1/2	5·644	5 7/8	5·362	5 3/8	·4	2 1/2	10·16
2 1/4	1·93	1 15/16	·25	4	6·35	6	5·487	5 1/2	·4	2 1/2	10·16

British Standard Whitworth Screw Threads.*

(C.L. (M.) 7270–1919.) (*Abstract.*)

1	2	3	4	5	6	7	8	9	10	11
Nominal Dia. of Screw.	No. of Threads per in.	Pitch.	Depth of Thread.	Full Diameter.		Effective Diameter.		Core Diameter.		Cross Sectional Area at Bottom of Thread of Bolt.
				Bolt.	Nut.	Bolt.	Nut.	Bolt.	Nut.	
In.		In.	In.	In.	In.	In.	In.	In.	In.	Sq. In.
1/4	20	·05000	·03200	·2500	·2520	·2180	·2200	·1860	·1880	·0272
5/16	18	·05556	·03555	·3125	·3145	·2769	·2789	·2414	·2434	·0458
3/8	16	·06250	·04000	·3750	·3770	·3350	·3370	·2950	·2970	·0683
7/16	14	·07143	·04575	·4375	·4395	·3918	·3938	·3460	·3480	·0940
1/2	12	·08333	·05335	·5000	·5020	·4466	·4486	·3933	·3953	·1215
9/16	12	·08333	·05335	·5625	·5645	·5091	·5111	·4558	·4578	·1632
5/8	11	·09091	·05820	·6250	·6270	·5668	·5688	·5086	·5106	·2032
3/4	10	·10000	·06405	·7500	·7520	·6860	·6880	·6219	·6239	·3038
7/8	9	·11111	·07115	·8750	·8770	·8039	·8059	·7327	·7347	·4216
1	8	·12500	·08005	1·0000	1·0020	·9200	·9220	·8399	·8419	·5540
1 1/8	7	·14286	·09150	1·1250	1·1270	1·0335	1·0355	·9420	·9440	·6969
1 1/4	7	·14286	·09150	1·2500	1·2520	1·1585	1·1605	1·0670	1·0690	·8942
1 1/2	6	·16667	·10670	1·5000	1·5020	1·3932	·3953	1·2866	1·2886	1·3001

* By permission of the British Engineering Standards Association.

FOR

TURNED WORK

AND

MACHINE

SCREWS

Of every known variety, shape, and size. In any Metal. For any purpose. Send your Inquiries. - - Quotation per return. - -

The AUTOMATIC STANDARD SCREW CO., LTD.

HALIFAX, Eng.

Telephone:—No. 992. Tel. Add.:—'STANDARD.'

Codes:—Marconi International and Bentley's.

(SEE OVERLEAF)

We specialise in the . .

Production of High-class

TURNED WORK

of all descriptions in any metal.

MACHINE SCREWS

of every known variety. Interchangeable threads.

(Whitworth and any special thread matched to customers' patterns.)

TERMINALS SCREWS and PARTS

for Electric Lighting work and kindred trades.

BOLTS, NUTS and WASHERS

(Bright or Brass).

The Automatic Standard Screw Co., Ltd.

CHARLES STREET, HALIFAX.

Telegraphic Address: 'STANDARD.' *Telephone No. 992.*

Codes:—Marconi International and Bentley's.

(SEE OVERLEAF)

BRITISH STANDARD WHITWORTH SCREW THREADS—*continued*.

1	2	3	4	5	6	7	8	9	10	11
Nominal Dia. of Screw.	No. of Threads per in.	Pitch.	Depth of Thread.	Full Diameter.		Effective Diameter.		Core Diameter.		Cross Sectional Area at Bottom of Thread of Bolt.
				Bolt.	Nut.	Bolt.	Nut.	Bolt.	Nut.	
In.		In.	In.	In.	In.	In.	In.	In.	In.	Sq. In.
1¾	5	·20000	·12805	1·7500	1·7520	1·6219	1·6239	1·4939	1·4959	1·7528
2	4·5	·22222	·14230	2·0000	2·0020	1·8577	1·8597	1·7154	1·7174	2·3111
2¼	4	·25000	·16010	2·2500	2·2520	2·0899	2·0919	1·9298	1·9318	2·9249
2½	4	·25000	·16010	2·5000	2·5020	2·3399	2·3419	2·1798	2·1818	3·7318
2¾	3·5	·28571	·18295	2·2750	2·2770	2·5670	2·5690	2·3841	2·3861	4·4641
3	3·5	·28571	·18295	3·0000	3·0020	2·8170	2·8190	2·6341	2·6361	5·4496
3¼	3·25	·30769	·19700	3·2500	3·2520	3·0530	3·0550	2·8560	2·8580	6·4063
3½	3·25	·30769	·19700	3·5000	3·5020	3·3030	3·3050	3·1060	3·1080	7·5769
3¾	3	·33333	·21345	3·7500	3·7520	3·5366	3·5386	3·3231	3·3251	8·6732
4	3	·33333	·21345	4·0000	4·0020	3·7866	3·7886	3·5731	3·5751	10·0272
4½	2·875	·34783	·22270	4·5000	4·5020	4·2773	4·2793	4·0546	4·0566	12·9118
5	2·75	·36364	·23285	5·0000	5·0020	4·7672	4·7692	4·5343	4·5363	16·1477
5½	2·625	·38095	·24395	5·5000	5·5020	5·2561	5·2581	5·0121	5·0141	19·7301
6	2·5	·40000	·25615	6·0000	6·0020	5·7439	5·7459	5·4877	5·4897	23·6521

BRITISH STANDARD FINE (B.S.F.) SCREW THREADS AND THEIR TOLERANCES.*

(No. 84—1918.) (*Abstract.*)

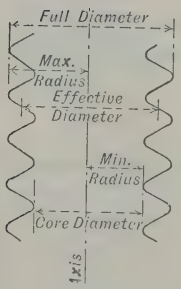


FIG. 5.

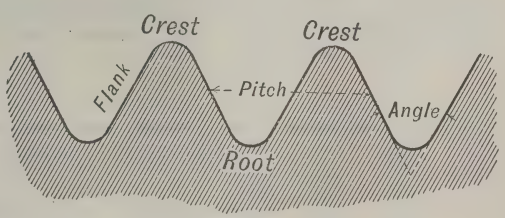


FIG. 6.

Effective Diameter of a Screw.—The effective diameter of a perfect screw having a single thread is the length of a line drawn through the axis and at right angles to it, measured between the points where the line cuts the flanks of the thread (fig. 5).

Core Diameter.—The core diameter is twice the minimum radius of a screw, measured at right angles to the axis (fig. 5).

NOTE.—From fig. 5 it will be seen that the 'core diameter' of the male thread is measured between the roots of the thread; it should be borne in mind, however, that the 'core diameter' of the female thread, being approximately the same dimension, is measured between the crests of the thread.

* By permission of the British Engineering Standards Association.

Full Diameter.—The full diameter is twice the maximum radius of a screw, measured at right angles to the axis (fig. 5).

Crest.—The crest is the prominent part of the thread, whether of the male screw or of the female screw (fig. 6).

Root.—The root is the bottom of the groove of the thread, whether of the male screw or of the female screw (fig. 6).

Flank of Thread.—The flank of the thread is the straight part of the thread which connects the crests and roots (fig. 6).

Angle of Thread.—The angle of the thread is the angle between the slopes, measured in the axial plane (fig. 6).

Pitch.—The pitch is the distance in inches or millimetres measured along a line parallel to the axis of the screw between the point where it cuts any thread of the screw and the point at which it next meets the corresponding part of the same thread (fig. 6). *The reciprocal of the pitch* measures the number of turns per inch or millimetre, as the case may be.

Recommendations.

Form of Thread.

1. The Association recommend that the Whitworth form of thread, as defined in clause 2, be adopted on all screws of $\frac{1}{8}$in. diameter and above, having British Standard Fine Pitches.

Definition of Whitworth Form of Thread.

2. The following defines the Whitworth thread :—

The *Whitworth Form of Thread* is one in which the angle between the flanks, measured in the axial plane, is 55° ; one-sixth of the sharp triangle is truncated at top and bottom, the threads being rounded equally at crests and roots to a radius which is therefore 0·137329 times the pitch ; the depth of the thread is 0·640327 times the pitch.

Tolerances.

—	Full Diameter.	Effective Diameter.	Core Diameter.
Bolt	$3\times\cdot01\sqrt{p}$	$2\times\cdot01\sqrt{p}$	$4\times\cdot01\sqrt{p}$
Nut	$4\times\cdot01\sqrt{p}$	$2\times\cdot01\sqrt{p}$	$3\times\cdot01\sqrt{p}$

The corresponding tolerances on grade and play are :—

$$\text{Grade}=4\times\cdot01\sqrt{p}\ ;\quad \text{Play}=2\times\cdot01\sqrt{p}.$$

In addition, a uniform allowance of 2 thousandths of an inch has been made throughout between the maximum bolt and the minimum nut.

For much work the above tolerances are too large. A second series of tables have therefore been formed by halving the tolerances everywhere. The Association recommend that threads made in accordance with these dimensions be known as ' British Standard Fine Threads (Close Fits).'

The basis of calculation of these tolerances is given below.

—	Full Diameter.	Effective Diameter.	Core Diameter.
Bolt	$1{\cdot}5\times{\cdot}01\sqrt{p}$	$\cdot01\sqrt{p}$	$2\times{\cdot}01\sqrt{p}$
Nut	$2\times{\cdot}01\sqrt{p}$	$\cdot01\sqrt{p}$	$1{\cdot}5\times{\cdot}01\sqrt{p}$

The corresponding tolerances and allowance are :—

Grade tolerance $= 2\times{\cdot}01\sqrt{p}$; play tolerance $=\cdot01\sqrt{p}$; allowance $= 0{\cdot}002$ in.

The pitches given in the following table are based on the following formulæ :—

For sizes up to and including screw threads of 1 inch diameter, $P=\frac{\sqrt[3]{d^2}}{10}$.

For sizes above 1 inch diameter, up to and including screw threads of 6 ins. diameter, $P=\frac{\sqrt[3]{d^5}}{10}$

$$\text{Pitch} = \frac{1}{\text{No. of threads per inch}}\text{; depth of thread} = 0{\cdot}640327 \times \text{pitch;}$$

Rounding at crest and root $= 0{\cdot}137329 \times$ pitch.

THEORETICAL DIMENSIONS OF BRITISH STANDARD FINE SCREW THREADS.

1	2	3	4	5	6	7	8	9	10	11	12
Nominal Diameter of Screw.	No. of Threads per inch.	Pitch.	Depth of Thread.	Full Diameter.		Effective Diameter.		Core Diameter.		Cross Sectional Area at Bottom of Thread of Bolt.	Nominal Diameter of Screw.
				Bolt.	Nut.	Bolt.	Nut.	Bolt.	Nut.		
in.		in.	in.	in.	in.	in.	in.	in.	in.	sq. in.	in
$\frac{7}{32}$	28	·03571	·02285	·2188	·2208	·1960	·1980	·1731	·1751	·0235	$\frac{7}{32}$
	26	·03846	·02465	·2500	·2520	·2254	·2274	·2007	·2027	·0316	
$\frac{1}{4}$											$\frac{1}{4}$
	26	·03846	·02465	·2813	·2833	·2566	·2586	·2320	·2340	·0423	
$\frac{9}{32}$											$\frac{9}{32}$
	22	·04545	·02910	·3125	·3145	·2834	·2854	·2543	·2563	·0508	
$\frac{5}{16}$											$\frac{5}{16}$
	20	·05000	·03200	·3750	·3770	·3430	·3450	·3110	·3130	·0760	
$\frac{3}{8}$											$\frac{3}{8}$
	18	·05556	·03555	·4375	·4395	·4019	·4039	·3664	·3684	·1054	
$\frac{7}{16}$											$\frac{7}{16}$
	16	·06250	·04000	·5000	·5020	·4600	·4620	·4200	·4220	·1385	
$\frac{1}{2}$											$\frac{1}{2}$
	16	·06250	·04000	·5625	·5645	·5225	·5245	·4825	·4845	·1828	
$\frac{9}{16}$											$\frac{9}{16}$
	14	·07143	·04575	·6250	·6270	5793	·5813	·5335	·5355	·2235	
$\frac{5}{8}$											$\frac{5}{8}$
	14	·07143	·04575	·6875	·6895	·6418	·6438	·5960	·5980	·2790	
$\frac{11}{16}$											$\frac{11}{16}$
	12	·08333	·05335	·7500	·7520	·6966	·6986	·6433	·6453	·3250	
$\frac{3}{4}$											$\frac{3}{4}$
	12	·08333	·05335	·8125	·8145	·7591	·7611	·7058	·7078	·3913	
$\frac{13}{16}$											$\frac{13}{16}$
	11	·09091	·05820	·8750	·8770	·8168	·8188	·7586	·7606	·4520	
$\frac{7}{8}$											$\frac{7}{8}$
1	10	·10000	·06405	1·0000	1·0020	·9360	·9380	·8719	·8739	·5971	1
$1\frac{1}{8}$	9	·11111	·07115	1·1250	1·1270	1·0539	1·0559	·9827	·9847	·7585	$1\frac{1}{8}$
$1\frac{1}{4}$	9	·11111	·07115	1·2500	1·2520	1·1789	1·1809	1·1077	1·1097	·9637	$1\frac{1}{4}$
$1\frac{3}{8}$	8	·12500	·08005	1·3750	1·3770	1·2950	1·2970	1·2149	1·2169	1·1592	$1\frac{3}{8}$
$1\frac{1}{2}$	8	·12500	·08005	1·5000	1·5020	1·4200	1·4220	1·3399	1·3419	1·4100	$1\frac{1}{2}$
$1\frac{5}{8}$	8	·12500	·08005	1·6250	1·6270	1·5450	1·5470	1·4649	1·4669	1·6854	$1\frac{5}{8}$
$1\frac{3}{4}$	7	·14286	·09150	1·7500	1·7520	1·6585	1·6605	1·5670	1·5690	1·9285	$1\frac{3}{4}$
2	7	·14286	·09150	2·0000	2·0020	1·9085	1·9105	1·8170	1·8190	2·5930	2
$2\frac{1}{4}$	6	·16667	·10670	2·2500	2·2520	2·1433	2·1453	2·0366	2·0386	3·2577	$2\frac{1}{4}$
$2\frac{1}{2}$	6	·16667	·10670	2·5000	2·5020	2·3933	2·3953	2·2866	2·2886	4·1065	$2\frac{1}{2}$
$2\frac{3}{4}$	6	·16667	·10670	2·7500	2·7520	2·6433	2·6453	2·5366	2·5386	5·0535	$2\frac{3}{4}$
3	5	·20000	·12805	3·0000	3·0020	2·8719	2·8739	2·7439	2·7459	5·9133	3

British Association Screw Threads.

No.	Approximate Dimensions in Decimals of an Inch.		Threads per Inch.	Exact Dimensions in Millimetres.		No.	Approximate Dimensions in Decimals of an Inch.		Threads per Inch.	Exact Dimensions in Millimetres.	
	Diam.	Pitch.		Diam.	Pitch.		Diam.	Pitch.		Diam.	Pitch.
25	·010	·0028	353	0·25	0·072	12	·051	·0110	90·7	1·3	0·28
24	·011	·0031	317	0·29	0·080	11	·059	·0122	81·9	1·5	0·31
23	·013	·0035	285	0·33	0·089	10	·067	·0138	72·6	1·7	0·35
22	·015	·0039	259	0·37	0·098	9	·075	·0154	65·1	1·9	0·39
21	·017	·0043	231	0·42	0·11	8	·087	·0169	59·1	2·2	0·43
20	·019	·0047	212	0·48	0·12	7	·098	·0189	52·9	2·5	0·48
19	·021	·0055	181	0·54	0·14	6	·110	·0209	47·9	2·8	0·53
18	·024	·0059	169	0·62	0·15	5	·126	·0232	43·0	3·2	0·59
17	·028	·0067	149	0·70	0·17	4	·142	·0260	38·5	3·6	0·66
16	·031	·0075	134	0·79	0·19	3	·161	·0287	34·8	4·1	0·73
15	·035	·0083	121	0·90	0·21	2	·185	·0319	31·4	4·7	0·81
14	·039	·0091	110	1·0	0·23	1	·209	·0354	28·2	5·3	0·90
13	·047	·0098	101	1·2	0·25	0	·236	·0394	25·4	6·0	1·00

Whitworth's Standard Screws for Watch and Instrument Makers.

No. denoting Thousandths of an Inch in Diameter.	Threads per Inch.	No. denoting Thousandths of an Inch in Diameter.	Threads per Inch.	No. denoting Thousandths of an Inch in Diameter.	Threads per Inch.	No. denoting Thousandths of an Inch in Diameter.	Threads per Inch.
10	400	18 & 19	250	34	150	65	80
11	400	20	210	36	150	70	80
12	350	22	210	38	120	75	80
13	350	24	210	40	120	80	60
14	300	26	180	45	120	85	60
15	300	28	180	50	100	90	60
16	300	30	180	55	100	95	50
17	250	32	150	60	100	100	50

Swiss Screw Threads. (*Thury.*)

No.	Exact Dimensions in Millimetres.		Ratio of Successive Diameters	Approx. Diam. in Decimals of an Inch.	Threads per Inch.	No	Exact Dimensions in Millimetres.		Ratio of Successive Diameters	Approx. Diam. in Decimals of an Inch.	Threads per Inch.
	Pitch.	External Diameter.					Pitch.	External Diameter.			
25	0·0718	0·254	0·879	0·0100	353·70	2	0·810	4·66	0·881	0·1835	31·35
24	0·0798	0·289	0·881	0·0114	318·30	1	0·900	5·29	0·882	0·2083	28·22
23	0·0886	0·328	0·882	0·0129	286·65	0	1	6	0·881	0·2362	25·40
22	0·0985	0·372	0·872	0·0146	255·32	— 1	1·11	6·81	0·881	0·2681	22·85
21	0·109	0·426	0·889	0·0168	233·02	— 2	1·23	7·73	0·881	0·3043	20·65
20	0·122	0·479	0·882	0·0189	208·19	— 3	1·37	8·77	0·881	0·3453	18·54
19	0·135	0·543	0·882	0·0214	188·40	— 4	1·52	9·95	0·880	0·3917	16·73
18	0·150	0·616	0·881	0·0243	169·33	— 5	1·69	11·3	0·883	0·4449	15·02
17	0·167	0·699	0·880	0·0275	152·32	— 6	1·88	12·8	0·883	0·5039	13·48
16	0·185	0·794	0·881	0·0313	137·29	— 7	2·09	14·5	0·879	0·5709	12·15
15	0·206	0·901	0·883	0·0355	123·30	— 8	2·32	16·5	0·882	0·6496	10·94
14	0·229	1·02	0·879	0·0402	110·91	— 9	2·58	18·7	0·882	0·7362	9·84
13	0·254	1·16	0·879	0·0457	100·00	—10	2·87	21·2	0·880	0·8346	8·85
12	0·282	1·32	0·886	0·0520	90·07	—11	3·19	24·1	0·880	0·9488	7·97
11	0·314	1·49	0·909	0·0587	80·89	—12	3·54	27·4	0·884	1·0787	7·17
10	0·349	1·64	0·854	0·0646	72·77	—13	3·93	31·0	0·881	1·2048	6·46
9	0·387	1·92	0·881	0·0756	65·63	—14	4·37	35·2	0·880	1·3858	5·81
8	0·430	2·18	0·879	0·0858	59·06	—15	4·86	40·0	0·881	1·5748	5·22
7	0·478	2·48	0·883	0·0976	53·13	—16	5·40	45·4	0·882	1·7874	4·84
6	0·531	2·81	0·881	0·1106	47·80	—17	6·00	51·5	0·882	2·0276	4·23
5	0·590	3·19	0·881	0·1256	43·05	—18	6·66	58·4	0·881	2·2992	3·82
4	0·656	3·62	0·881	0·1425	38·71	—19	7·40	66·3	0·882	2·6103	3·43
3	0·729	4·11	0·882	0·1618	34·84	—20	8·23	75·2		2·9607	3·08

British Association Screw Threads.

These screw threads (p. 1036) have been standardised by the British Engineering Standards Association, and the latest dimensions are given in Report C.L. (M.) 7271—1919.

FRENCH STANDARD THREADS.

Diam. in Millimètres.	Pitch in Millimètres.			Diam. in Millimètres.	Pitch in Millimètres.		
	Cail or Railway.	Ducommun.	Armengaud's.		Cail or Railway.	Ducommun.	Armengaud's.
3	—	·5	—	25	3	3	3
4	—	·75	—	28	3	3	—
5	1	·75	1·4	30	3	3·5	3·4
6	1	1	—	32	3	3·5	—
7	1·25	1·2	—	35	3·5	4	3·8
7·5	—	—	1·6	38	3·5	4	—
8	1·25	1·25	—	40	4	4	4·2
9	1·5	1·5	—	42	4	4·5	—
10	1·5	1·5	1·8	45	4	4·5	4·6
12	1·5	1·75	—	47	4·5	5	—
12·5	—	—	2	50	4·5	5	5
14	2	—	—	55	—	5	5·4
15	2	2	2·2	60	—	6	5·8
17·5	—	—	2·4	65	—	6	6·2
18	2	2·5	—	70	—	7	6·6
20	2	2·5	2·6	75	—	7	7
22·5	—	—	2·8	80	—	7	7·4
23	2·5	3	—				

AMERICAN STANDARD THREADS.

(*Sellers'.*)

Dimensions in Inches.					Threads per Inch.	Pitch in Millimètres.	Dimensions in Inches.					Threads per Inch.	Pitch in Millimètres.
Outside Diameter.	Diameter at Bottom of Thread.	Size for Tapping.	Pitch.	Width of Flat.			Outside Diameter.	Diameter at Bottom of Thread.	Size for Tapping.	Pitch.	Width of Flat.		
$\frac{1}{4}$	·185	$\frac{3}{16}$	·05	·0062	20	1·27	2	1·711	$1\frac{23}{32}$	·2222	·0277	$4\frac{1}{2}$	5·644
$\frac{5}{16}$	·24	$\frac{1}{4}$	·0555	·0069	18	1·41	$2\frac{1}{4}$	1·961	$1\frac{31}{32}$	·2222	·0277	$4\frac{1}{2}$	5·644
$\frac{3}{8}$	·294	$\frac{19}{64}$	·0625	·0078	16	1·587	$2\frac{1}{2}$	2·175	$2\frac{3}{16}$	·25	·0313	4	6·35
$\frac{7}{16}$	·345	$\frac{23}{64}$	·0714	·0089	14	1·814	$2\frac{3}{4}$	2·425	$2\frac{7}{16}$	·25	·0313	4	6·35
$\frac{1}{2}$	·4	$\frac{13}{32}$	·0769	·0096	13	1·95	3	2·628	$2\frac{11}{16}$	·2857	·0357	$3\frac{1}{2}$	7·257
$\frac{9}{16}$	·454	$\frac{15}{32}$	·0833	·0104	12	2·116	$3\frac{1}{4}$	2·878	$2\frac{15}{16}$	·2857	·0357	$3\frac{1}{2}$	7·257
$\frac{5}{8}$	·506	$\frac{33}{64}$	·0909	·0114	11	2·39	$3\frac{1}{2}$	3·1	$3\frac{7}{64}$	·3077	·0384	$3\frac{1}{4}$	7·815
$\frac{11}{16}$	·62	$\frac{17}{32}$	·1	·0125	10	2·54	$3\frac{3}{4}$	3·317	$3\frac{21}{64}$	·3333	·0416	3	8·466
$\frac{3}{4}$	·731	$\frac{47}{64}$	·1111	·0139	9	2·822	4	3·567	$3\frac{37}{64}$	·3333	·0416	3	8·466
1	·837	$\frac{27}{32}$	·125	·0156	8	3·175	$4\frac{1}{4}$	3·798	$3\frac{13}{16}$	·3478	·0434	$2\frac{7}{8}$	8·834
$1\frac{1}{8}$	·939	$\frac{61}{64}$	·1428	·0178	7	3·628	$4\frac{1}{2}$	4·027	$4\frac{1}{32}$	·3636	·0454	$2\frac{3}{4}$	9·236
$1\frac{1}{4}$	1·064	$1\frac{5}{64}$	·1428	·0178	7	3·628	$4\frac{3}{4}$	4·255	$4\frac{17}{64}$	·3809	·0478	$2\frac{5}{8}$	9·676
$1\frac{3}{8}$	1·158	$1\frac{11}{64}$	·1666	·0208	6	4·233	5	4·48	$4\frac{31}{64}$	·4	·05	$2\frac{1}{2}$	10·16
$1\frac{1}{2}$	1·283	$1\frac{13}{64}$	·1666	·0208	6	4·233	$5\frac{1}{4}$	4·73	$4\frac{47}{64}$	·4	·05	$2\frac{1}{2}$	10·16
$1\frac{5}{8}$	1·389	$1\frac{25}{64}$	·1818	·0227	$5\frac{1}{2}$	4·62	$5\frac{1}{2}$	4·953	$4\frac{1}{64}$	·421	·0526	$2\frac{3}{8}$	10·68
$1\frac{3}{4}$	1·49	$1\frac{1}{2}$	·2	·025	5	5·08	$5\frac{3}{4}$	5·203	$5\frac{13}{64}$	·421	·0526	$2\frac{3}{8}$	10·68
$1\frac{7}{8}$	1·615	$1\frac{29}{64}$	·2	·025	5	5·08	6	5·423	$5\frac{7}{16}$	·444	·0555	$2\frac{1}{4}$	11·29

Comparison of U.S. Standard and Whitworth Screw Threads.

The difference in form that exists between the Whitworth and the U.S. standard screw thread is shown in fig. 7. The comparison is based upon a screw with 1 thread per inch. Clearances and interferences for the two forms of threads having any other pitch may therefore be obtained by dividing the respective values given in the diagram by the number of threads per inch under consideration.

In order to fit a U.S. standard screw into a Whitworth tapped hole or nut, round the outside corners of the screw and change the outline of the thread below the pitch line by slightly filing the flanks. These changes are indicated in the figure by the sectional areas. If it is desired to fit a Whitworth screw into a U.S. standard tapped hole or nut, drill out the hole or nut, using a drill which is larger than the tap drill required for an equal size U.S. standard tap, as shown by

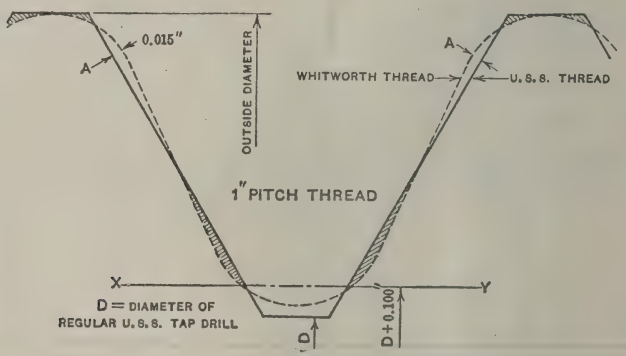


FIG. 7.

the line XY in the diagram. For 1 thread per inch, this increase in diameter of the tap drill will be 0·100 inch, and for other numbers of threads the amount of increase will be found by dividing 0·100 inch by the number of threads per inch. Thus, for 10 threads per inch, 0·100 ÷ 10 = 0·010 inch. The flanks of the Whitworth thread above the pitch line are then filed slightly as indicated at A in the illustration.

The methods mentioned are recommended only for fastening screws and ordinary threaded parts, and should not be employed where accurate threads are required.

(*G. R. R. in* '*Machinery.*')

International System of Metrical Screw Threads.

(*Système International.*)

Dia. of Bolt in mm.	Pitch in mm.	Dia. of Bolt in mm.	Pitch in mm.	Dia. of Bolt in mm.	Pitch in mm.	Dia. of Bolt in mm.	Pitch in mm.	Dia. of Bolt in mm.	Pitch in mm.
3	0·55	8	1·25	18	2·5	36	4	60	5·5
3·5	0·55	9	1·25	20	2·5	39	4	64	6
4	0·7	10	1·5	22	2·5	42	4·5	68	6
4·5	0·7	11	1·5	24	3	45	4·5	72	6·5
5	0·85	12	1·75	27	3	48	5	76	6·5
6	1	14	2	30	3·5	52	5	80	7
7	1	16	2	33	3·5	56	5·5		

Fig. 8 shows the shape and proportions of the threads of the International System of metrical screw threads, also the maximum and minimum deviations allowed from the normal.

INTERNATIONAL SYSTEM OF METRICAL SCREW THREADS.

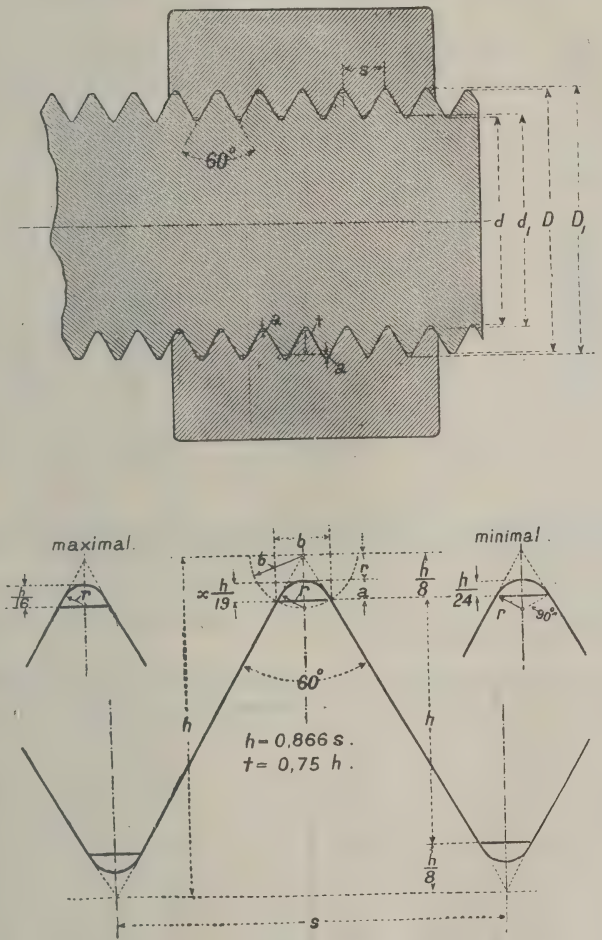


FIG. 8.

Wood Screws.

(Sometimes termed 'Screw Nails.')

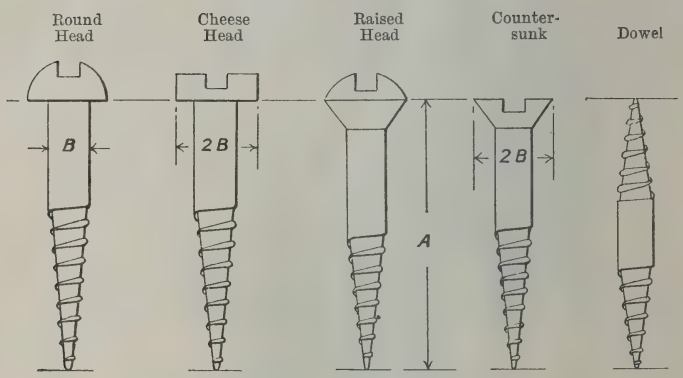


FIG. 9.

Wood screws are measured, as regards length (A), from the point to the portion normally flush with the surface of the material into which they are driven. Dowel screws are measured from point to point.

The number (size or thickness) (B) refers to the diameter of the shank or neck, and for screws of Nettlefold's manufacture is as follows :—

Number.	Diameter.	Number.	Diameter.	Number.	Diameter.	Number.	Diameter.
	In.		In.		In.		In.
1	·066	9	·178	17	·290	25	·402
2	·080	10	·192	18	·304	26	·416
3	·094	11	·206	19	·318	27	·430
4	·108	12	·220	20	·332	28	·444
5	·122	13	·234	21	·346	29	·458
6	·136	14	·248	22	·360	30	·472
7	·150	15	·262	23	·374	31	·486
8	·164	16	·276	24	·388	32	·500

Formula for ascertaining diameter of screw :—

$$(\cdot 014 \times \text{No.}) + \cdot 052 \text{ in.} = \text{diameter.}$$

Example :—$(\cdot 014 \times 16) + \cdot 052$ in. $= \cdot 224 + \cdot 052 = \cdot 276$ diameter of No. 16.

The diameter of the head may be taken as twice the thickness of the neck.

Numerous lengths are obtainable in each size from ¼ in. in the smaller sizes to 9 ins. in No. 32.

Larger sizes are made to order but not gauged, and most sizes are obtainable in iron or brass.


(*H. A. Miles.*)

TABLE OF WOOD SCREWS.

Number.	Clear Drill.	Diameter.	Diameter of Head.	Number.	Clear Drill.	Diameter.	Diameter of Head.
00	56	·046″	·120″	7	25	·149″	·300″
0	53	·059″	·140″	8	20	·161″	·330″
1	49	·073″	·160″	9	16	·171″	·365″
2	44	·086″	·175″	10	12	·189″	·390″
3	40	·098″	·200″	11	7	·201″	·420″
4	35	·110″	·225″	12	3	·213″	·450″
5	30	·128″	·250″	13	1	·228″	·475″
6	28	·140″	·275″	14	¼″	·250″	·500″

(*H. T. R. Grantham.*)

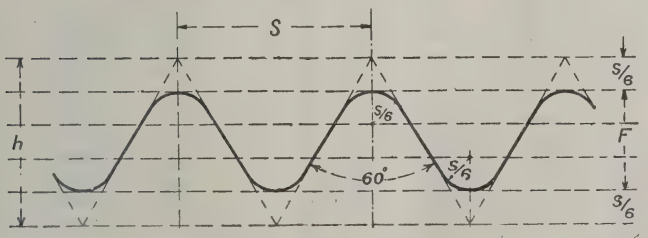CYCLE ENGINEERS' INSTITUTE STANDARD THREADS.



$h = 0{\cdot}866$ S. F $= 0{\cdot}5327$ S.

FIG. 10.

The dimensions given below are for right-hand threads except those marked** which are for left-hand threads only and that marked* (i.e. $\frac{9}{16}$ in.) is for right or left hand threads.

Diameter in Inches. Decimals and Fractions.	No. of Threads per In.	Diameter in Inches. Decimals and Fractions.	No. of Threads per In.	Diameter in Inches. Decimals and Fractions.	No. of Threads per In.
·056 —	62	·154 —	40	·375 $\frac{3}{8}$	26
·064 —	62	·175 —	32	*·5625 $\frac{9}{16}$	20
·072 —	62	·1875 $\frac{3}{16}$	32	1·000 1	26
·080 —	62	·250 $\frac{1}{4}$	26	**1·290 —	24
·092 —	56	·266 —	26	1·370 —	24
·104 —	44	·281 —	26	**1·4375 $1\frac{7}{16}$	24
·125 $\frac{1}{8}$	40	·3125 $\frac{5}{16}$	26	1·5000 $1\frac{1}{2}$	24

Screw Heads.

BRITISH STANDARD HEADS FOR SMALL SCREWS.*

(No. 57–1920.) (*Abstract.*)

For all classes of head the diameter to be 1·75 times the full diameter of the thread.

The width of saw-cuts to be according to the formula,

$$S = \cdot 2\ D + \cdot 1m$$

where S = width of saw-cut, and D = full diameter of the thread in millimetres.

The standard depth of saw-cut to equal one-half the total depth of the head in all cases, such depth being measured at the centre of the head.

Pipe Threads.

WHITWORTH'S STANDARD THREADS FOR GAS AND WATER PIPES.

Dimensions in Inches.			Number of Threads per Inch.	Dimensions in Inches.			Number of Threads per Inch.
Internal Diameter of Pipe.	External Diameter of Pipe.	Diameter at Bottom of Thread.		Internal Diameter of Pipe.	External Diameter of Pipe.	Diameter at Bottom of Thread.	
$\frac{1}{8}$	·382	·336	28	$1\frac{7}{8}$	2·245	2·128	11
$\frac{1}{4}$	·518	·451	19	2	2·347	2·23	11
$\frac{3}{8}$	·656	·589	19	$2\frac{1}{8}$	2·467	2·351	11
$\frac{1}{2}$	·826	·734	14	$2\frac{1}{4}$	2·587	2·47	11
$\frac{5}{8}$	·902	·811	14	$2\frac{3}{8}$	2·794	2·678	11
$\frac{3}{4}$	1·04	·949	14	$2\frac{1}{2}$	3	2·882	11
$\frac{7}{8}$	1·189	1·097	14	$2\frac{5}{8}$	3·124	3·009	11
1	1·309	1·192	11	$2\frac{3}{4}$	3·247	3·13	11
$1\frac{1}{8}$	1·492	1·375	11	$2\frac{7}{8}$	3·367	3·251	11
$1\frac{1}{4}$	1·65	1·533	11	3	3·485	3·368	11
$1\frac{3}{8}$	1·745	1·628	11	$3\frac{1}{8}$	3·698	3·581	11
$1\frac{1}{2}$	1·882	1·765	11	$3\frac{1}{4}$	3·912	3·795	11
$1\frac{5}{8}$	2·022	1·965	11	$3\frac{3}{4}$	4·125	4·008	11
$1\frac{3}{4}$	2·16	2·042	11	4	4·340	4·223	11

* By permission of the British Engineering Standards Association.

BRITISH STANDARD PIPE THREADS.*
(No. 21—1909.) (*Abstract.*)

1	2	3	4	5	6	7	8	9	10	11
Nominal Bore of Tube.	Approximate Outside Diameter of Black Tube.	Gauge Diameter.	Depth of Thread.	Core Diameter, Measured at same Distance from End of Pipe as the Gauge Diameter.	Number of Threads per Inch.	Length of Thread.		Distance of Gauge Diameter from Pipe-end. (Class I. Taper Screw.)		
						L on Pipe-end. Min.	In Coupler. Min.	Standard.	Max.	Min.
Ins.	Ins.	Ins.	In.	Ins.		Ins.	Ins.	Ins.	Ins.	Ins.
$\frac{1}{8}$	$\frac{13}{32}$	·383	·0230	·337	28	$\frac{3}{8}$	$\frac{3}{4}$	$\frac{5}{32}$ (·1563)	·18	·13
$\frac{1}{4}$	$\frac{1}{2}$	·518	·0335	·451	19	$\frac{7}{16}$	$\frac{7}{8}$	$\frac{3}{16}$ (·1875)	·22	·16
$\frac{3}{8}$	$\frac{41}{64}$	·656	·0335	·589	19	$\frac{1}{2}$	1	$\frac{1}{4}$ (·2500)	·29	·21
$\frac{1}{2}$	$\frac{23}{32}$	·825	.0455	·734	14	$\frac{5}{8}$	$1\frac{1}{4}$	$\frac{1}{4}$ (·2500)	29	·21
$\frac{5}{8}$	$\frac{13}{16}$	·902	·0455	·811	14	$\frac{5}{8}$	$1\frac{1}{4}$	$\frac{1}{4}$ (·2500)	·29	·21
$\frac{3}{4}$	$1\frac{1}{16}$	1·041	·0455	·950	14	$\frac{3}{4}$	$1\frac{1}{2}$	$\frac{3}{8}$ (·3750)	·44	·31
$\frac{7}{8}$	$1\frac{5}{32}$	1·189	·0455	1·098	14	$\frac{3}{4}$	$1\frac{1}{2}$	$\frac{3}{8}$ (·3750)	·44	·31
1	$1\frac{5}{16}$	1·309	·0580	1·193	11	$\frac{7}{8}$	$1\frac{3}{4}$	$\frac{3}{8}$ (·3750)	·44	·31
$1\frac{1}{4}$	$1\frac{11}{16}$	1·650	·0580	1·534	11	1	2	$\frac{1}{2}$ (·5000)	·58	·42
$1\frac{1}{2}$	$1\frac{29}{32}$	1·882	·0580	1·766	11	1	2	$\frac{1}{2}$ (·5000)	·58	·42
$1\frac{3}{4}$	$2\frac{3}{32}$	2·116	·0580	2·000	11	$1\frac{1}{8}$	$2\frac{1}{4}$	$\frac{5}{8}$ (·6250)	·73	·52
2	$2\frac{3}{8}$	2·347	·0580	2·231	11	$1\frac{1}{8}$	$2\frac{1}{4}$	$\frac{5}{8}$ (·6250)	·73	·52
$2\frac{1}{4}$	$2\frac{5}{8}$	2·587	·0580	2·471	11	$1\frac{1}{4}$	$2\frac{1}{2}$	$\frac{11}{16}$ (·6875)	·80	·57
$2\frac{1}{2}$	3	2·960	·0580	2·844	11	$1\frac{1}{4}$	$2\frac{1}{2}$	$\frac{11}{16}$ (·6875)	·80	·57
$2\frac{3}{4}$	$3\frac{1}{4}$	3·210	·0580	3·094	11	$1\frac{3}{8}$	$2\frac{3}{4}$	$\frac{13}{16}$ (·8125)	·95	·68
3	$3\frac{1}{2}$	3·460	·0580	3·344	11	$1\frac{3}{8}$	$2\frac{3}{4}$	$\frac{13}{16}$ (·8125)	·95	·68
$3\frac{1}{2}$	$3\frac{3}{4}$	3·700	·0580	3·584	11	$1\frac{1}{2}$	3	$\frac{7}{8}$ (·8750)	1·02	·73
$3\frac{1}{2}$	4	3·950	·0580	3·834	11	$1\frac{1}{2}$	3	$\frac{7}{8}$ (·8750)	1·02	·73
$3\frac{3}{4}$	$4\frac{1}{4}$	4·200	·0580	4·084	11	$1\frac{1}{2}$	3	$\frac{7}{8}$ (·8750)	1·02	·73
4	$4\frac{1}{2}$	4·450	·0580	4·334	11	$1\frac{5}{8}$	$3\frac{1}{4}$	1 (1·0000)	1·17	·83
$4\frac{1}{2}$	5	4·950	·0580	4·834	11	$1\frac{5}{8}$	$3\frac{1}{4}$	1 (1·0000)	1·17	·83
5	$5\frac{1}{2}$	5·450	·0580	5·334	11	$1\frac{7}{8}$	$3\frac{1}{2}$	$1\frac{1}{8}$ (1·1250)	1·31	·94
$5\frac{1}{2}$	6	5·950	·0580	5·834	11	$1\frac{7}{8}$	$3\frac{1}{2}$	$1\frac{1}{4}$ (1·2500)	1·46	1·04
6	$6\frac{1}{2}$	6·450	·0580	6·334	11	2	4	$1\frac{1}{8}$ (1·3750)	1·60	1·15
7	$7\frac{1}{2}$	7·450	·0640	7·322	10	$2\frac{1}{8}$	$4\frac{1}{2}$	$1\frac{1}{8}$ (1·3750)	1·60	1·15
8	$8\frac{1}{2}$	8·450	·0640	8·322	10	$2\frac{1}{4}$	$4\frac{1}{2}$	$1\frac{1}{2}$ (1·5000)	1·75	1·25
9	$9\frac{1}{2}$	9·450	·0640	9·322	10	$2\frac{1}{4}$	$4\frac{1}{2}$	$1\frac{1}{2}$ (1·5000)	1·75	1·25
10	$10\frac{1}{2}$	10·450	·0640	10·322	10	$2\frac{3}{8}$	$4\frac{1}{2}$	$1\frac{5}{8}$ (1·6250)	1·90	1·35
11	$11\frac{1}{2}$	11·450	·0800	11·290	8	$2\frac{3}{8}$	5	$1\frac{5}{8}$ (1·6250)	1·90	1·35
12	$12\frac{1}{2}$	12·450	·0800	12·290	8	$2\frac{3}{8}$	5	$1\frac{5}{8}$ (1·6250)	1·90	1·35
13	$13\frac{1}{2}$	13·680	·0800	13·520	8	$2\frac{5}{8}$	$5\frac{1}{2}$	$1\frac{5}{8}$ (1·6250)	1·90	1·35
14	$14\frac{1}{2}$	14·680	·0800	14·520	8	$2\frac{3}{4}$	$5\frac{1}{2}$	$1\frac{3}{4}$ (1·7500)	2·04	1·46
15	$15\frac{1}{2}$	15·680	·0800	15·520	8	$2\frac{3}{4}$	$5\frac{1}{2}$	$1\frac{3}{4}$ (1·7500)	2·04	1·46
16	$16\frac{1}{2}$	16·680	·0800	16·520	8	$2\frac{7}{8}$	$5\frac{1}{2}$	$1\frac{7}{8}$ (1·8750)	2·19	1·56
17	$17\frac{1}{2}$	17·680	·0800	17·520	8	3	6	2 (2·0000)	2·33	1·67
18	$18\frac{1}{2}$	18·680	·0800	18·520	8	3	6	2 (2·0000)	2·33	1·67

NOTES ON TABLE.

Columns 1 and 2 of the table give the nominal bore of the tube and the full diameter of the screw in the coupler for use with that tube. The diameter of this screw has been chosen, in all cases, so that the coupler can be screwed by hand on to the tube, leaving from four to eight threads exposed.

The Association have preserved the Old Whitworth Standards as far as possible in the simplified dimensions for screwing sizes on tubes up to $2\frac{1}{4}$ ins. nominal bore. The Association have been guided in fixing the gauge diameters of the larger screwing sizes by the advantages of making the outside diameters of the tubes even quarters of inches.

* By permission of the British Engineering Standards Association.

AMERICAN GAS PIPE THREADS.

Nominal Diameter in Inches.	Outside Diameter in Inches.	No. of Threads per Inch.	Nominal Diameter in Inches.	Outside Diameter in Inches.	No. of Threads per Inch.
$\frac{1}{8}$	0·405	28	$2\frac{1}{2}$	2·875	8
$\frac{1}{4}$	0·54	18	$2\frac{3}{4}$	—	—
$\frac{3}{8}$	0·675	18	3	3·5	8
$\frac{1}{2}$	0·84	14	$3\frac{1}{2}$	4·0	8
$\frac{5}{8}$	—	—	4	4·5	8
$\frac{3}{4}$	1·05	14	$4\frac{1}{2}$	5·0	8
$\frac{7}{8}$	—	-	5	5·563	8
1	1·315	$11\frac{1}{2}$	6	6·625	8
$1\frac{1}{4}$	1·66	$11\frac{1}{2}$	7	7·625	8
$1\frac{1}{2}$	1·9	$11\frac{1}{2}$	8	8·625	8
$1\frac{3}{4}$	—	—	9	9·688	8
2	2·375	$11\frac{1}{2}$	10	10·75	8
$2\frac{1}{4}$	—	—			

Bolts and Nuts.

According to the Whitworth system of standard sizes of bolts and nuts, the thickness of the bolt-head is seven-eighths of the diameter, and the nut is equal to the diameter.

In the Sellers' (American) system the heads and nuts are hexagonal, the thickness of the heads and of the nuts being equal to 1 diameter minus one-sixteenth inch. The breadth across the flats is equal to $1\frac{1}{2}$ diameters plus one-sixteenth inch.

WHITWORTH STANDARD HEXAGON BOLTS AND NUTS.

Dimensions in Inches.								
Size of Bolt and Thickness of Nut.	Nut across Flats.	Nut across Corners.	Tapping Hole.	Thickness of Bolt-head.	Size of Bolt and Thickness of Nut.	Nut across Flats.	Nut across Corners.	Tapping Hole.	Thickness of Bolt-head.
$\frac{1}{8}$	·338	·390	·093	·1093	$2\frac{3}{4}$	4·18	4·82	2·39	2·4062
$\frac{3}{16}$	·448	·517	·134	·164	$2\frac{7}{8}$	4·34	5·02	2·5	2·5156
$\frac{1}{4}$	·525	·606	·186	·2187	3	4·53	5·23	2·63	2·625
$\frac{5}{16}$	·601	·694	·241	·2734	$3\frac{1}{8}$	4·69	5·41	2·75	2·7343
$\frac{3}{8}$	·709	·819	·295	·3281	$3\frac{1}{4}$	4·85	5·60	2·85	2·8256
$\frac{7}{16}$	·820	·947	·346	·3828	$3\frac{3}{8}$	5·01	5·78	2·98	2·9531
$\frac{1}{2}$	·920	1·06	·393	·4375	$3\frac{1}{2}$	5·17	5·98	3·1	3·0624
$\frac{9}{16}$	1·01	1·16	·455	·4921	$3\frac{5}{8}$	5·36	6·19	3·23	3·1718
$\frac{5}{8}$	1·1	1·27	·508	·5468	$3\frac{3}{4}$	5·55	6·41	3·32	3·2812
$\frac{11}{16}$	1·2	1·38	·571	·6016	$3\frac{7}{8}$	5·75	6·64	3·45	3·3906
$\frac{3}{4}$	1·3	1·5	·622	·6562	4	5·95	6·87	3·57	3·5
$\frac{13}{16}$	1·39	1·6	·684	·7064	$4\frac{1}{8}$	6·16	7·11	3·69	3·6094
$\frac{7}{8}$	1·48	1·7	·732	·7656	$4\frac{1}{4}$	6·37	7·36	3·8	3·7046
$\frac{15}{16}$	1·57	1·82	·795	·8203	$4\frac{3}{8}$	6·60	7 62	3·93	3·8271
1	1·67	1·95	·84	·875	$4\frac{1}{2}$	6·82	7·88	4·05	3·9374
$1\frac{1}{8}$	1·86	2·15	·942	·9843	$4\frac{5}{8}$	7·06	8·15	4·18	4·0469
$1\frac{1}{4}$	2·05	2·36	1·06	1·0937	$4\frac{3}{4}$	7·3	8·43	4·28	4·1562
$1\frac{3}{8}$	2·21	2·55	1·16	1·2031	$4\frac{7}{8}$	7·55	8·72	4·4	4·2656
$1\frac{1}{2}$	2·41	2·78	1·28	1·3125	5	7·8	9·01	4·53	4·375
$1\frac{5}{8}$	2·57	2·97	1·37	1·4128	$5\frac{1}{8}$	8·06	9·31	4·66	4·4844
$1\frac{3}{4}$	2·75	3·18	1·49	1·5312	$5\frac{1}{4}$	8·35	9·64	4·76	4·5936
$1\frac{7}{8}$	3·02	3·48	1·59	1·6406	$5\frac{3}{8}$	8·6	9·93	4·88	4·7031
2	3·15	3·63	1·71	1·75	$5\frac{1}{2}$	8·85	10·22	5·01	4·8124
$2\frac{1}{8}$	3·34	3·85	1·84	1·8523	$5\frac{5}{8}$	9·15	10·57	5·13	4·9218
$2\frac{1}{4}$	3·54	4·09	1·93	1·9687	$5\frac{3}{4}$	9·45	10·91	5·24	5·0312
$2\frac{3}{8}$	3·75	4·33	2·05	2·0781	$5\frac{7}{8}$	9·75	11·26	5·36	5·1406
$2\frac{1}{2}$	3·89	4·49	2·18	2·1875	6	10	11·55	5·48	5·25
$2\frac{5}{8}$	4·05	4·67	2·30	2·2968					

AMERICAN STANDARD HEXAGON NUTS AND BOLTS (*Sellers'*).

Dimensions in Inches.									
Size of Bolt and Thickness of Nut.	Nut across Flats.	Nut across Corners.	Tapping Hole.	Thickness of Bolt-head.	Size of Bolt and Thickness of Nut.	Nut across Flats.	Nut across Corners.	Tapping Hole.	Thickness of Bolt-head.
$\frac{1}{4}$	·5	·577	·185	·197	2	3·125	3·609	1·711	1·576
$\frac{5}{16}$	·597	·685	·240	·2472	$2\frac{1}{4}$	3·5	4·042	1·961	1·7628
$\frac{3}{8}$	·687	·794	·294	·2954	$2\frac{1}{2}$	3·875	4·475	2·175	1·97
$\frac{7}{16}$	·781	·902	·345	·3447	$2\frac{3}{4}$	4·25	4·908	2·425	2·1528
$\frac{1}{2}$	·875	1·0106	·4	·394	3	4·625	5·341	2·628	2·364
$\frac{9}{16}$	·968	1·1187	·454	·4432	$3\frac{1}{4}$	5	5·775	2·878	2·561
$\frac{5}{8}$	1·062	1·227	·506	·4925	$3\frac{1}{2}$	5·375	6·208	3·1	2·758
$\frac{3}{4}$	1·25	1·443	·62	·591	$3\frac{3}{4}$	5·75	6·641	3·317	2·954
$\frac{7}{8}$	1·437	1·66	·731	·6895	4	6·125	7·074	3·567	3·152
1	1·625	1·876	·837	·788	$4\frac{1}{4}$	6·5	7·507	3·798	3·349
$1\frac{1}{8}$	1·812	2·093	·939	·8864	$4\frac{1}{2}$	6·875	7·94	4·027	3·5256
$1\frac{1}{4}$	2	2·31	1·064	·985	$4\frac{3}{4}$	7·25	8·373	4·255	3·743
$1\frac{3}{8}$	2·187	2·526	1·158	1·0764	5	7·625	8·806	4·48	3·94
$1\frac{1}{2}$	2·375	2·743	1·283	1·182	$5\frac{1}{4}$	8	9·24	4·73	4·137
$1\frac{5}{8}$	2·562	2·959	1·389	1·2805	$5\frac{1}{2}$	8·375	9·67	4·953	4·334
$1\frac{3}{4}$	2·75	3·176	1·49	1·379	$5\frac{3}{4}$	8·75	10·106	5·203	4·531
$1\frac{7}{8}$	2·937	3·393	1·615	1·477	6	9·125	10·539	5·423	4·728

WHITWORTH STANDARD BOLTS AND NUTS. SAFE LOAD IN LBS.

Diam. of Bolt.	Diam. at Bottom of Thread.	Area at Bottom of Thread.	Approximate Safe Load in Lbs.					
			At 4,000 lbs. per Sq. In.	At 5,000 lbs. per Sq. In.	At 6,000 lbs. per Sq. In.	At 7,000 lbs. per Sq. In.	At 8,000 lbs. per Sq. In.	At 9,000 lbs. per Sq. In.
Ins.	Ins.	Sq. Ins.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.
$\frac{3}{16}$	0·134	0·014	56	70	84	98	112	126
$\frac{1}{4}$	0·186	0·027	108	135	162	189	216	243
$\frac{5}{16}$	0·241	0·046	184	230	276	322	378	414
$\frac{3}{8}$	0·295	0·068	272	340	408	478	546	614
$\frac{7}{16}$	0·346	0·094	376	470	504	628	752	846
$\frac{1}{2}$	0·393	0·121	484	605	726	850	970	1,090
$\frac{9}{16}$	0·455	0·155	620	775	930	1,085	1,240	1,395
$\frac{5}{8}$	0·508	0·204	816	1,020	1,224	1,418	1,620	1,824
$\frac{11}{16}$	0·571	0·256	1,024	1,280	1,536	1,792	2,048	2,304
$\frac{3}{4}$	0·622	0·304	1,216	1,520	1,824	2,126	2,430	2,734
$\frac{13}{16}$	0·684	0·367	1,468	1,835	2,202	2,569	2,936	3,303
$\frac{7}{8}$	0·733	0·422	1,688	2,110	2,532	2,954	3,376	3,800
$\frac{15}{16}$	0·795	0·496	1,984	2,480	2,976	3,472	3,968	4,464
1	0·840	0·554	2,216	2,770	3,324	3,880	4,430	4,990
$1\frac{1}{8}$	0·942	0·697	2,788	3,485	4,182	4,880	5,575	6,270
$1\frac{1}{4}$	1·067	0·894	3,576	4,470	5,364	6,250	7,145	8,035
$1\frac{3}{8}$	1·162	1·058	4,232	5,290	6,348	7,400	8,455	9,510
$1\frac{1}{2}$	1·287	1·299	5,196	6,495	7,794	9,030	10,320	11,610
$1\frac{5}{8}$	1·369	1·472	5,888	7,360	8,832	10,290	11,760	13,230
$1\frac{3}{4}$	1·494	1·753	7,012	8,765	10,518	12,210	13,950	15,700
$1\frac{7}{8}$	1·590	1·986	7,944	9,930	11,916	13,900	15,890	17,875
2	1·720	2·311	9,244	11,555	13,866	16,170	18,480	20,790
$2\frac{1}{4}$	1·930	2·926	11,704	14,630	17,556	20,475	23,400	26,325
$2\frac{1}{2}$	2·180	3·733	14,932	18,665	22,398	26,125	29,855	33,590

WHITWORTH STANDARD BOLTS AND NUTS. SAFE LOAD IN LBS.—*cont.*

Diam. of Bolt.	Diam. at Bottom of Thread.	Area at Bottom of Thread.	APPROXIMATE SAFE LOAD IN LBS.					
			At 4,000 lbs. per Sq. In.	At 5,000 lbs. per Sq. in.	At 6,000 lbs. per Sq. In.	At 7,000 lbs. per Sq. In.	At 8,000 lbs. per Sq. In.	At 9,000 lbs. per Sq. In.
Ins.	Ins.	Sq. Ins.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.
2⅝	2·384	4·464	17,856	22,320	26,784	31,220	35,680	40,140
3	2·634	5·450	21,800	27,250	32,700	38,080	43,520	48,960
3¼	2·856	6·402	25,608	32,010	38,412	44,814	51,216	57,618
3½	3·105	7·563	30,252	37,815	45,378	57,940	60,504	68,065
3¾	3·320	8·673	34,692	43,365	52,038	60,710	69,384	78,057
4	3·573	10·027	40,108	50,135	60,162	70,190	80,216	90,240
4¼	3·804	11·365	45,480	56,825	68,190	79,575	90,960	102,305
4½	4·054	12·908	51,632	64,540	77,448	90,356	103,264	116,172
4¾	4·284	14·404	57,616	72,020	86,424	100,830	115,232	129,636
5	4·534	16·146	64,584	80,730	96,876	113,020	129,168	145,314
5½	5·012	19·720	78,880	98,600	118,320	138,040	157,760	177,480
6	5·487	23·640	94,560	118,200	141,840	165,200	189,120	212,760

BRITISH STANDARD HEXAGONAL BRIGHT AND BLACK NUTS AND BOLT-HEADS.*
(No. 28—1908.) (*Abstract.*)

Diameter of Bolt.	Nuts.					Lock Nuts.		Bolt-Heads.	
	Width across Flats.		Width across Corners.	Thickness.		Thickness.		Thickness.	
	Max.	Min.	Approximate Max. †	Max.	Min.	Max.	Min.	Max.	Min.
Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.
¼ (·25)	·525	·520	·61	·26 *·27*	·25	·18 *·19*	·17	·23 *·24*	·22
⅜ (·375)	·710	·705	·82	·39 *·40*	·38	·26 *·27*	·25	·34 *·35*	·33
½ (·5)	·920	·915	1·06	·51 *·52*	·50	·34 *·35*	·33	·45 *·46*	·44
⅝ (·625)	1·100	1·092	1·27	·64 *·65*	·63	·43 *·44*	·42	·56 *·57*	·55
¾ (·75)	1·300	1·292	1·50	·76 *·77*	·75	·51 *·52*	·50	·67 *·68*	·66
⅞ (·875)	1·480	1·472	1·71	·89 *·90*	·88	·59 *·60*	·58	·78 *·79*	·77
1	1·670	1·662	1·93	1·01 *1·02*	1·00	·68 *·69*	·67	·89 *·90*	·88
1⅛ (1·25)	2·050	2·040	2·37	1·27 *1·28*	1·25	·85 *·86*	·83	1·11 *1·12*	1·09
1¼ (1·5)	2·410	2·400	2·78	1·52 *1·53*	1·50	1·02 *1·03*	1·00	1·33 *1·34*	1·31
1⅜ (1·75)	2·760	2·750	3·19	1·77 *1·78*	1·75	1·19 *1·20*	1·17	1·55 *1·56*	1·53
2	3·150	3·140	3·64	2·02 *2·03*	2·00	1·35 *1·36*	1·33	1·77 *1·78*	1·75
2¼ (2·25)	3·550	3·535	4·10	2·27 *2·28*	2·25	1·52 *1·53*	1·50	1·99 *2·00*	1·97
2½ (2·5)	3·890	3·875	4·49	2·52 *2·53*	2·50	1·69 *1·70*	1·67	2·21 *2·22*	2·19
2¾ (2·75)	4·180	4·165	4·83	2·77 *2·78*	2·75	1·85 *1·86*	1·83	2·43 *2·44*	2·41
3	4·530	4·515	5·23	3·02 *3·03*	3·00	2·02 *2·03*	2·00	2·65 *2·66*	2·63
3¼ (3·25)	4·850	4·830	5·60	3·27 *3·28*	3·25	2·19 *2·20*	2·17	2·86 *2·86*	2·84
3½ (3·5)	5·180	5·160	5·98	3·52 *3·53*	3·50	2·35 *2·36*	2·33	3·08 *3·09*	3·06
3¾ (3·75)	5·550	5·530	6·41	3·77 *3·78*	3·75	2·52 *2·53*	2·50	3·30 *3·31*	3·28
4	5·950	5·930	6·87	4·02 *4·03*	4·00	2·69 *2·70*	2·67	3·52 *3·53*	3·50
4½ (4·5)	6·820	6·795	7·88	4·53 *4·54*	4·50	3·03 *3·03*	3·00	3·97 *3·98*	3·94
5	7·800	7·775	9·01	5·03 *5·04*	5·00	3·36 *3·37*	3·33	4·41 *4·42*	4·38
5½ (5·5)	8·850	8·820	10·22	5·53 *5·54*	5·50	3·70 *3·71*	3·67	4·84 *4·84*	4·81
6	10·000	9·970	11·55	6·03 *6·04*	6·00	4·03 *4·04*	4·00	5·28 *5·29*	5·25

* By permission of the British Engineering Standards Association.

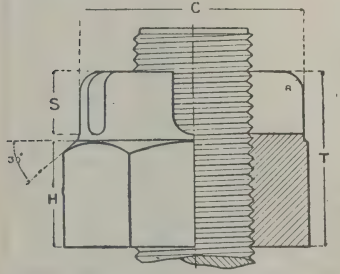
† The figures in this column represent the maximum width across the corners correct to two decimal places. The figures in italics are those for *black* nuts.

A chamfer of 30° from the face should be adopted on all bright nuts and bolt-heads. The interior diameter of the chamfer circle should not be appreciably less than the width across the flats.

In the common locking arrangement, in which a thick and thin nut are employed, the thin nut should have a thickness approximately equal to two-thirds that of the standard nut.


British Standard Castle Nuts.

Castle nuts should be provided with pin slots as shown in figs. 11, 12.



OUTSIDE ELEVATION. SECTIONAL ELEVATION a, b.

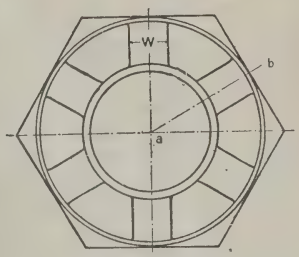FIG. 11.



PLAN.

FIG. 12.

T = 1·25D; H = ·75D; S = ·4375D; C = width across flats − $\frac{1}{16}$ in.; where D = full diameter of thread on bolt.

British Standard Whitworth Screw Threads. Tolerances for Bolts.*

(C.I. (M.) 7270—1919.) (*Abstract.*)

1	2	3	6	7	8	9	10	11	12	13	14
Nominal Dia. of Screw.	No. of Threads per inch.	Pitch.	Full Diameter.			Effective Diameter.			Core Diameter.		
			Max.	Tol.	Min.	Max.	Tol.	Min.	Max.	Tol.	Min.
Ins.		In.	In.	In.	In.	In.	In.	In.	In.	In.	In.
$\frac{1}{4}$	20	·05000	2500	·0067	·2433	·2180	·0045	·2135	·1860	·0090	·1770
$\frac{5}{16}$	16	·06250	·3750	·0075	·3675	·3350	·0050	·3300	·2950	·0100	·2850
$\frac{3}{8}$	12	·08333	·5000	·0087	·4913	·4466	·0058	·4408	·3933	·0115	·3818
$\frac{7}{16}$	11	·09091	·6250	·0090	·6160	·5668	·0060	·5608	·5086	·0121	·4965
$\frac{1}{2}$	10	·10000	·7500	·0095	·7405	·6860	·0063	·6797	·6219	·0126	·6093
$\frac{5}{8}$	9	·11111	·8750	·0100	·8650	·8039	·0067	·7972	·7327	·0133	·7194
1	8	·12500	1·0000	·0106	·9894	·9200	·0071	·9129	·8399	·0141	·8258
$1\frac{1}{2}$	6	·16667	1·5000	·0122	1·4878	1·3933	·0082	1·3851	1·2866	·0163	1·2703
2	4·5	·22222	2·0000	·0141	1·9859	1·8577	·0094	1·8483	1·7154	·0189	1·6965
$2\frac{1}{2}$	4	·25000	2·5000	·0150	2·4850	2·3399	·0100	2·3299	2·1798	·0200	2·1598
3	3·5	·28571	3·0000	·0160	2·9840	2·8170	·0107	2·8063	2·6341	·0214	2·6127
$3\frac{1}{2}$	3·25	·30769	3·5000	·0166	3·4834	3·3030	·0111	3·2919	3·1060	·0222	3·0838
4	3	·33333	4·0000	·0173	3·9827	3·7866	·0115	3·7751	3·5731	·0231	3·5500
$4\frac{1}{2}$	2·875	·34783	4·5000	·0177	4·4823	4·2773	·0118	4·2655	4·0546	·0236	4·0310
5	2·75	·36364	5·0000	·0181	4·9819	4·7672	·0121	4·7551	4·5343	·0241	4·5102
6	2·5	·40000	6·0000	·0190	5·9810	5·7439	·0126	5·7312	5·4877	·0253	5·4624

* By permission of the British Engineering Standards Association.

BRITISH STANDARD WHITWORTH SCREW THREADS. TOLERANCES FOR NUTS.

1	2	3	6	7	8	9	10	11	12	13	14
Nominal Dia. of Screw.	No. of Threads per inch.	Pitch.	Full Diameter.			Effective Diameter.			Core Diameter.		
			Min.	Tol.	Max.	Min.	Tol.	Max.	Min.	Tol.	Max.
in.		in.	in.	in.	in.	in.	in.	in.	in.	in.	in.
¼	20	·05000	·2520	·0090	·2610	·2200	·0045	·2245	·1880	·0067	·1947
5/16	16	·06250	·3770	·0100	·3870	·3370	·0050	·3420	·2970	·0075	·3045
⅜	12	·08333	·5020	·0115	·5135	·4486	·0058	·4544	·3953	·0087	·4040
7/16	11	·09091	·6270	·0121	·6391	·5688	·0060	·5748	·5106	·0090	·5196
½	10	·10000	·7520	·0126	·7646	·6880	·0063	·6943	·6239	·0095	·6334
9/16	9	·11111	·8770	·0135	·8903	·8059	·0067	·8126	·7347	·0100	·7447
1	8	·12500	1·0020	·0141	1·0161	·9220	·0071	·9291	·8419	·0106	·8525
1½	6	·16667	1·5020	·0163	1·5183	1·3953	·0082	1·4035	1·2886	·0122	1·3008
2	4·5	·22222	2·0020	·0189	2·0209	1·8597	·0094	1·8691	1·7174	·0141	1·7315
2½	4	·25000	2·5020	·0200	2·5220	2·3419	·0100	2·3519	2·1818	·0150	2·1968
3	3·5	·28571	3·0020	·0214	3·0234	2·8190	·0107	2·8297	2·6361	·0160	2·6521
3½	3·25	·30769	3·5020	·0222	3·5242	3·3050	·0111	3·3161	3·1080	·0166	3·1246
4	3	·33333	4·0020	·0231	4·0251	3·7886	·0115	3·8001	3·5751	·0173	3·5924
4½	2·875	·34785	4·5020	·0236	4·5256	4·2793	·0118	4·2911	4·0566	·0177	4·0743
5	2·75	·36364	5·0020	·0241	5·0261	4·7692	·0121	4·7813	4·5363	·0181	4·5544
6	2·5	·40000	6·0020	·0253	6·0273	5·7459	·0126	5·7585	5·4897	·0190	5·5087

BRITISH STANDARD FINE SCREW THREADS. TOLERANCES FOR BOLTS.*

(No. 84—1918.) (*Abstract.*)


1	2	3	6	7	8	9	10	11	12	13	14
Nominal Dia. of Screw.	No. of Threads per inch.	Pitch.	Full Diameter.			Effective Diameter.			Core Diameter.		
			Max.	Tol.	Min.	Max.	Tol.	Min.	Max.	Tol.	Min.
in.		in.	in.	in.	in.	in.	in.	in.	in.	in.	in.
¼	26	·03846	·2500	·0059	·2441	·2254	·0039	·2215	·2007	·0078	·1929
5/16	20	·05000	·3750	·0067	·3683	·3430	·0045	·3385	·3110	·0090	·3020
⅜	16	·06250	·5000	·0075	·4925	·4600	·0050	·4550	·4200	·0100	·4100
7/16	14	·07143	·6250	·0080	·6170	·5793	·0053	·5740	·5335	·0107	·5228
½	12	·08333	·7500	·0087	·7413	·6966	·0058	·6908	·6433	·0115	·6318
9/16	11	·09091	·8750	·0090	·8660	·8168	·0060	·8108	·7586	·0121	·7465
1	10	·10000	1·0000	·0095	·9905	·9360	·0063	·9297	·8719	·0126	·8593
1⅛	9	·11111	1·1250	·0100	1·1150	1·0539	·0067	1·0472	·9827	·0133	·9694
1¼	9	·11111	1·2500	·0100	1·2400	1·1789	·0067	1·1722	1·1077	·0133	1·0944
1⅜	8	·12500	1·3750	·0106	1·3644	1·2950	·0071	1·2879	1·2149	·0141	1·2008
1½	8	·12500	1·5000	·0106	1·4894	1·4200	·0071	1·4129	1·3399	·0141	1·3258
1⅝	8	·12500	1·6250	·0106	1·6144	1·5450	·0071	1·5379	1·4649	·0141	1·4508
1¾	7	·14286	1·7500	·0113	1·7387	1·6585	·0076	1·6509	1·5670	·0151	1·5519
2	7	·14286	2·0000	·0113	1·9887	1·9085	·0076	1·9009	1·8170	·0151	1·8019
2¼	6	·16667	2·2500	·0122	2·2378	2·1433	·0082	2·1351	2·0366	·0163	2·0203
2½	6	·16667	2·5000	·0122	2·4878	2·3933	·0082	2·3851	2·2866	·0163	2·2703
2¾	6	·16667	2·7500	·0122	2·7378	2·6433	·0082	2·6351	2·5366	·0163	2·5203
3	5	·20000	3·0000	·0134	2·9866	2·8719	·0089	2·8630	2·7439	·0179	2·7260

* By permission of the British Engineering Standards Association.

BRITISH STANDARD FINE SCREW THREADS. TOLERANCES FOR NUTS.

1	2	3	6	7	8	9	10	11	12	13	14
Nominal Dia. of Screw.	No. of Threads per inch.	Pitch.	Full Diameter.			Effective Diameter.			Core Diameter.		
			Min.	Tol.	Max.	Min.	Tol.	Max.	Min.	Tol.	Max.
in.		in.	in.	in.	in.	in.	in.	in.	in.	in.	in.
1/4	26	·03846	·2520	·0078	·2598	·2274	·0039	·2313	·2027	·0059	·2086
5/16	20	·05000	·3770	·0090	·3860	·3450	·0045	·3495	·3130	·0067	·3197
3/8	16	·06250	·5020	·0100	·5120	·4620	·0053	·4670	·4220	·0075	·4295
7/16	14	·07143	·6270	·0107	·6377	·5813	·0053	·5866	·5355	·0080	·5435
1/2	12	·08333	·7520	·0115	·7635	·6986	·0058	·7044	·6453	·0087	·6540
9/16	11	·09091	·8770	·0121	·8891	·8188	·0060	·8248	·7606	·0090	·7696
1	10	·10000	1·0020	·0126	1·0146	·9380	·0063	·9443	·8739	·0095	·8834
1 1/8	9	·11111	1·1270	·0133	1·1403	1·0559	·0067	1·0626	·9847	·0100	·9947
1 1/4	9	·11111	1·2520	·0133	1·2653	1·1809	·0067	1·1876	1·1097	·0100	1·1197
1 3/8	8	·12500	1·3770	·0141	1·3911	1·2970	·0071	1·3041	1·2169	·0106	1·2275
1 1/2	8	·12500	1·5020	·0141	1·5161	1·4220	·0071	1·4291	1·3419	·0106	1·3525
1 5/8	8	·12500	1·6270	·0141	1·6411	1·5470	·C07	1 5541	1·4669	·0106	1·4775
1 3/4	7	·14286	1·7520	·0151	1·7671	1·6605	·0076	1·6681	1·5690	·0113	1·5803
2	7	·14286	2·0020	·0151	2·0171	1·9105	·0076	1 9181	1·8190	·0113	1·8303
2 1/4	6	·16667	2·2520	·0163	2·2683	2·1453	·0082	2·1535	2·0386	·0122	2·0508
2 1/2	6	·16667	2·5020	·0163	2·5183	2·3953	·0082	2·4035	2·2886	·0122	2·3008
2 3/4	6	·16667	2·7520	·0163	2·7683	2·6453	·0082	2·6535	2·5386	·0122	2·5508
3	5	·20000	3·0020	·0179	3·0199	3 8739	·0089	2·8828	2·7459	·0134	2·7593

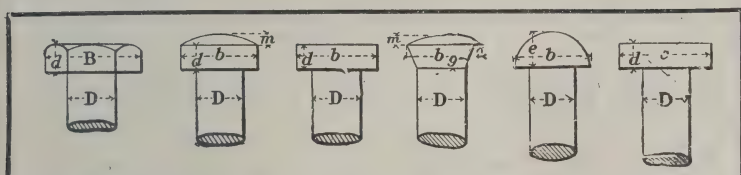FRENCH BOLTS. (SIZES GENERALLY USED.)



Diameter of Bolt. D	Pitch of Thread.	Diameter of Hexagon Heads. B	Diameter of Heads for Iron. b	Side of Square for Wood. c	Height of Spherical Heads. e	Height of Counter Sink. g	Height of Cylindrical and Square Threads. d	Height of Rise. m
mm.	mm.	mm.	mm.	mm.	mm.	mm.	mm.	mm.
8	1 1/4	16	14	18	6	4	5	1
9	1 1/4	18	15	20	9	5	6	1
10	1 1/2	20	16	24	10	5	6	1
12	1 1/2	24	20	28	12	6	7	1
14	2	28	22	32	13	7	8	1
15	2	30	24	35	14	7	9	2
16	2	32	26	36	15	8	10	2
18	2	36	28	42	16	9	11	2
20	2 1/2	40	32	46	18	10	12	2

FRENCH BOLTS—*continued*.

Diameter of Bolt. *D*	Pitch of Thread.	Diameter of Hexagon Heads. *B*	Diameter of Heads for Iron. *b*	Side of Square for Wood. *c*	Height of Spherical Heads. *e*	Height of Counter Sink. *g*	Height of Cylindrical and Square Threads. *d*	Height of Rise. *m*
mm.	mm.	mm.	mm.	mm.	mm.	mm.	mm.	mm.
22	2½	44	36	54	20	11	14	3
25	3	50	40	58	22	12	15	3
28	3	56	44	65	24	14	17	4
30	3	60	48	70	26	15	18	4
32	3½	64	52	74	28	16	19	4
35	4	70	56	80	31	17	21	5
38	4	76	60	86	32	19	23	5
40	4½	80	64	92	36	20	24	5

The actual depth of the thread is generally equal to ·75 of the pitch.

FRENCH NUTS, WASHERS, AND BOLT-PINS. (SIZES GENERALLY USED.)



Nuts.				Washers.				Bolt-pins.	
Diameter of Bolt. *D*	Height of Nut. *n*	Diameter of Circumscribing Circle. *P*	Extra Stout. *o*	Diameter of Hole. *r*	Outside Diameter for Iron. *s*	Outside Diameter for Wood. *t*	Thickness. *u*	Length. *y*	Diameter. *x*
mm.	mm.	mm.	mm.	mm.	mm.	mm.	mm.	mm.	mm.
8	8	16	11	8½	19	22	2	16	2
9	9	18	12	9½	21	24	2	18	2
10	10	20	14	10½	25	28	3	20	3
12	12	24	16	12½	29	33	3	24	3
14	14	28	18	14½	34	38	3	28	3
15	15	30	20	15½	37	41	4	30	4
16	16	32	21	16½	40	45	4	32	4
18	18	36	24	18½	45	50	5	36	5
20	20	40	27	20½	50	55	5	40	5
22	22	44	29	22½	55	61	6	44	6
25	25	50	33	23½	62	68	6	50	6
28	28	56	37	29	69	75	7	56	7
30	30	60	40	31	74	80	7	60	7
32	32	64	42	33	78	85	7	64	8
35	35	70	46	36	86	94	8	70	9
38	38	76	50	39	92	100	8	76	10
40	40	80	53	41	96	104	8	80	10

French Standard Bolts and Nuts.

Diameter of Screw.		Diameter of Bottom of Thread.		Pitch of Thread.	Number of Threads per Inch.	Width across Flats.		Width across Corners.		Thickness of Head.	
Millimètres.	Inches.	Millimètres.	Inches.	Millimètres.		Millimètres.	Inches.	Millimètres.	Inches.	Millimètres	Inches.
5	·196	3·30	·13	1·4	18·14	13·97	·55	16·0	63	5	·196
7·5	·295	5·58	·22	1·6	15·87	17·27	·68	19·81	·78	7	·275
10	·393	7·87	·31	1·8	14·11	22·35	·88	25·90	1·02	9	·355
12·5	·492	9·90	·39	2	12·70	26·42	1·04	30·48	1·20	11	·433
15	·589	12·19	·48	2·2	11·55	30·48	1·20	35·05	1·38	13	·51
17·5	·688	14·73	·58	2·4	10·58	34·54	1·36	39·87	1·57	15	·59
20	·787	16·76	·66	2·6	9·77	38·60	1·52	44·45	1·75	17	·67
22·5	·885	19·20	·76	2·8	9·07	42·67	1·68	49·27	1·94	19	·75
25	·984	21·34	·84	3	8·46	46·74	1·84	53·84	2·12	21	·83
30	1·178	25·90	1·02	3·4	7·47	54·86	2·16	63·50	2·50	24	·94
35	1·376	30·48	1·20	3·8	6·68	62·99	2·48	72·64	2·86	27	1·06
40	1·574	35·56	1·40	4·2	6·05	71·12	2·80	82·04	3·23	31	1·22
45	1·770	39·62	1·56	4·6	5·52	79·25	3·12	91·44	3·60	35	1·38
50	1·968	44·19	1·74	5	5·08	87·37	3·44	100·80	3·97	38	1·50
55	2·162	48·76	1·92	5·4	4·70	95·50	3·76	110·2	4·34	41	1·65
60	2·356	52·83	2·08	5·8	4·38	103·63	4·08	119·8	4·72	44	1·73
65	2·554	57·42	2·26	6·2	4·09	111·76	4·40	129·0	5·08	48	1·89
70	2·752	61·97	2·44	6·6	3·85	118·88	4·72	138·4	5·45	52	2·05
75	2·950	66·04	2·60	7·0	3·63	128 02	5·04	147·8	5·82	56	2·20
80	3·149	70·61	2·78	7·4	3·43	136·14	5·36	157·5	6·20	60	2·36

Bolt Heads.

Round Bolt Heads.









Fig. 13.

Proportions of Round-Headed Bolts.

A	$\frac{1}{4}$	$\frac{3}{8}$	$\frac{1}{2}$	$\frac{5}{8}$	$\frac{3}{4}$	$\frac{7}{8}$	1	$1\frac{1}{8}$	$1\frac{1}{4}$	$1\frac{3}{8}$	$1\frac{1}{2}$	$1\frac{5}{8}$	$1\frac{3}{4}$
B	$\frac{3}{8}$	$\frac{9}{16}$	$\frac{3}{4}$	1	$1\frac{1}{8}$	$1\frac{1}{4}$	$1\frac{3}{8}$	$1\frac{9}{16}$	$1\frac{3}{4}$	$1\frac{7}{8}$	$2\frac{1}{16}$	$2\frac{1}{4}$	$2\frac{3}{8}$
C	$\frac{3}{16}$	$\frac{5}{16}$	$\frac{3}{8}$	$\frac{1}{2}$	$\frac{9}{16}$	$\frac{11}{16}$	$\frac{3}{4}$	$\frac{7}{8}$	$\frac{15}{16}$	$1\frac{1}{16}$	$1\frac{1}{8}$	$1\frac{1}{4}$	$1\frac{5}{16}$

List of Split Pins and Bolt-end Lengths.

Diameter of Bolt or Pin.	Diameter of Split Pin.	Length of Split Pin through Shank.	Length of Split Pin through Nut.	Length over Grip for Drilled Bolt.	Length over Grip for Undrilled Bolt.
					
Ins.	Ins.	Ins.	Ins.	Ins.	Ins.
$\frac{3}{8}$	$\frac{5}{32}$	1	$1\frac{1}{4}$	$\frac{5}{8}$	$\frac{1}{2}$
$\frac{1}{2}$	$\frac{3}{8}$	$1\frac{1}{4}$	$1\frac{1}{2}$	$\frac{7}{8}$	$\frac{5}{8}$
$\frac{5}{8}$	$\frac{5}{16}$	$1\frac{1}{2}$	2	$1\frac{1}{16}$	$\frac{7}{8}$
$\frac{3}{4}$	$\frac{3}{16}$	$1\frac{3}{4}$	$2\frac{1}{4}$	$1\frac{3}{16}$	$\frac{7}{8}$
$\frac{7}{8}$	$\frac{1}{2}$	2	$2\frac{1}{2}$	$1\frac{5}{8}$	1
1	$\frac{1}{2}$	$2\frac{1}{4}$	$2\frac{3}{4}$	$1\frac{7}{8}$	$1\frac{1}{4}$
$1\frac{1}{8}$	$\frac{1}{2}$	$2\frac{1}{2}$	3	$1\frac{7}{8}$	$1\frac{1}{4}$
$1\frac{1}{4}$	$\frac{1}{2}$	$2\frac{3}{4}$	$3\frac{1}{4}$	$1\frac{7}{8}$	$1\frac{1}{4}$
$1\frac{3}{8}$	$\frac{1}{2}$	3	4	$2\frac{1}{4}$	$1\frac{1}{4}$
$1\frac{1}{2}$	$\frac{5}{8}$	$3\frac{1}{4}$	$4\frac{1}{4}$	$2\frac{1}{4}$	$1\frac{1}{4}$
$1\frac{5}{8}$	$\frac{5}{8}$	$3\frac{1}{2}$	$4\frac{1}{2}$	$2\frac{1}{4}$	$1\frac{1}{4}$
$1\frac{3}{4}$	$\frac{5}{8}$	$3\frac{3}{4}$	$4\frac{3}{4}$	$2\frac{1}{4}$	$1\frac{1}{4}$
$1\frac{7}{8}$	$\frac{5}{8}$	$3\frac{3}{4}$	$4\frac{3}{4}$	$2\frac{1}{4}$	2
2	$\frac{5}{8}$	$3\frac{3}{4}$	$4\frac{3}{4}$	$2\frac{1}{4}$	$2\frac{1}{4}$

Note.—Length of a split pin is always measured overall.

('*Machinery*').

Nuts

Capped Nuts.

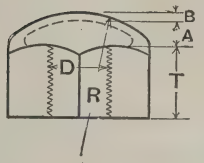


Fig. 14.

D = dia. of bolt ; $R = D$; $T = D$; $A = \frac{D}{2}$; $B = \frac{1}{8}$ in.

Lock Nuts for Feeding Screws of Machine Tools.

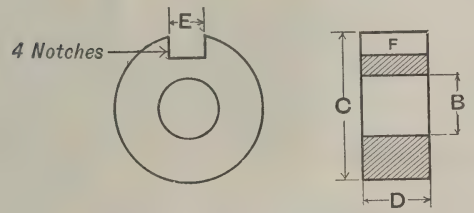


Fig. 15.

Dimensions in Inches.					Number of Threads per Inch.	Dimensions in Inches.					Number of Threads per Inch.
B.	C.	D.	E.	F.		B.	C.	D.	E.	F.	
$\frac{1}{2}$	1	$\frac{1}{4}$	$\frac{3}{16}$	$\frac{3}{32}$	14	$1\frac{5}{8}$	$2\frac{7}{8}$	$1\frac{13}{16}$	$\frac{3}{8}$	$\frac{3}{16}$	11
$\frac{5}{8}$	$1\frac{1}{4}$	$\frac{5}{16}$	,,	,,	14	$1\frac{3}{4}$	$3\frac{1}{16}$	$1\frac{15}{16}$	,,	,,	11
$\frac{3}{4}$	$1\frac{1}{2}$	$\frac{3}{8}$	,,	$\frac{1}{8}$	14	$1\frac{7}{8}$	$3\frac{1}{2}$	$1\frac{15}{16}$	,,	,,	11
$\frac{7}{8}$	$1\frac{5}{8}$	$\frac{7}{16}$	$\frac{1}{4}$	,,	11	2	$3\frac{1}{2}$	1	,,	,,	11
1	$1\frac{3}{4}$	$\frac{1}{2}$	,,	,,	11	$2\frac{1}{4}$	4	1	$\frac{7}{16}$	$\frac{7}{32}$	8
$1\frac{1}{8}$	2	$\frac{9}{16}$	$\frac{5}{16}$	$\frac{5}{32}$	11	$2\frac{1}{2}$	$4\frac{3}{8}$	$1\frac{1}{8}$	,,	,,	8
$1\frac{1}{4}$	$2\frac{1}{4}$	$\frac{5}{8}$	,,	,,	11	$2\frac{3}{4}$	$4\frac{1}{2}$	$1\frac{1}{4}$	$\frac{1}{2}$	$\frac{1}{4}$	8
$1\frac{3}{8}$	$2\frac{3}{8}$	$\frac{11}{16}$	,,	$\frac{3}{16}$	11	3	$5\frac{1}{4}$	$1\frac{3}{8}$	,,	,,	8
$1\frac{1}{2}$	$2\frac{5}{8}$	$\frac{3}{4}$	,,	,,	11						

A pair of these nuts is used for locking purposes.

See also p. 1047.

Handles

Proportions of Cock Handles.

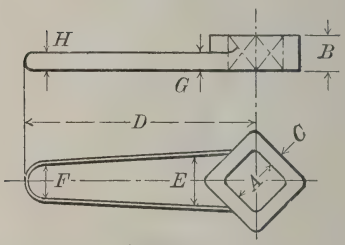


Fig. 16.

A.	B.	C.	D.	E.	F.	G.	H.
½	½	9/16	5	5/8	½	¼	5/16
5/8	5/8	5/16	6	3/4	5/8	¼	3/16
3/4	3/4	9/16	7	7/8	3/4	¼	9/16
7/8	7/8	¼	8	1	7/8	5/16	¼
1	1	¼	9	1⅛	1	5/16	¼
1⅛	1⅛	¼	10	1¼	1	5/16	¼
1¼	1¼	5/16	11	1⅜	1¼	⅜	5/16
1⅜	1⅜	5/16	12	1½	1¼	⅜	5/16
1½	1½	⅜	13	1⅝	1⅜	7/16	⅜
1⅝	1½	⅜	13	1¾	1⅜	7/16	⅜
1 11/16	1½	7/16	13	1¾	1⅜	7/16	⅜
1¾	1½	7/16	13½	1⅞	1⅜	½	7/16
1 13/16	1½	7/16	13½	2	1⅜	½	7/16

(*'Machinery,' June* 3, 1921.)

Proportions of Machine Handles.

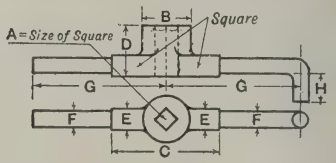


Fig. 17.

Size of Square	A	B	C	D	E	F	G	H
½	9/16	1	2	1½	9/16	½	3	2½
5/8	11/16	1½	2⅜	2	11/16	5/8	4	2½
¾	13/16	1⅝	3	2¼	13/16	¾	5	3
⅞	15/16	1¾	3½	2¾	15/16	⅞	6	3½
1	1 1/16	1⅞	4	3	1	1	7½	4
1⅛	1 3/16	2¼	4½	3½	1	1	8¼	4
1¼	1 5/16	2⅜	4¾	3¾	1¼	1	9	4

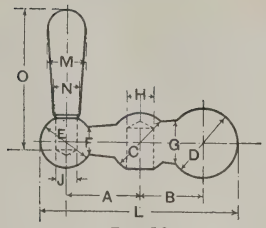


FIG. 18.

A	B	C	D	E	F	G	H	J	L	M	N	O
1½	1¼	1	1½	⅞	½	⅝	⅞	⅝	3 13/16	⅝	⅜	2½
2¼	2	1⅛	1 3/16	1	9/16	11/16	½	5/16	5 7/16	⅝	13/32	3
3	2¾	1¼	1⅜	1⅛	⅝	¾	9/16	⅜	7 1/16	⅞	7/16	3½
3¾	3½	1⅜	1⅝	1¼	11/16	13/16	⅝	⅜	9 11/16	1 1/16	15/32	4
4½	4½	1½	1¾	1⅜	¾	⅞	11/16	7/16	10 5/16	1	17/32	4½

PROPORTIONS OF MACHINE HAND WHEELS.

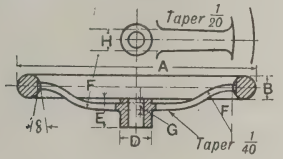


FIG. 19.

A	B	C	D	E	F	G	H
4	⅜	3/64	½	½	1 1/16	⅛	⅜
5	7/16	1/16	1 1/16	11/16	⅛	3/32	7/16
6	½	5/64	⅝	¾	1 1/16	9/64	½
7	⅝	3/32	1″	1″	1¼	7/32	⅝
8	¾	7/64	1¼	1¼	1 7/16	¼	¾
9	13/16	⅛	1¼	1¼	1 11/16	9/32	13/16
10	15/16	9/64	1 9/16	1 9/16	2 1/16	11/32	15/16
12	1	5/32	1 11/16	1 11/16	2¼	⅜	1

Spanners.

BRITISH STANDARD SPANNERS.*

(No. 28—1908.) (*Abstract.*)

The angle between the head and the shank of spanners should be 15°, 30°, or 45°.

* By permission of the British Engineering Standards Association.

DIMENSIONS OF SPANNERS

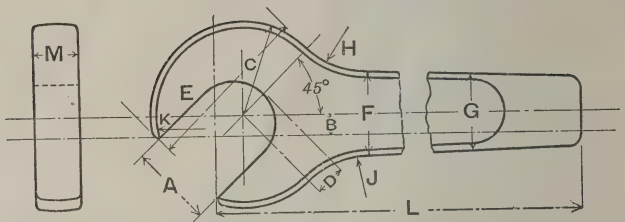


FIG. 20.

Dimensions in Inches.

Size of Nut.	A.	B.	C.	D.	E.	F.	G.	H.	J.	K.	L.	M.
$\frac{1}{4}$	$\frac{17}{32}$	$\frac{1}{8}$	$\frac{9}{16}$	$\frac{3}{16}$	$1\frac{1}{16}$	$\frac{1}{2}$	$\frac{7}{16}$	$1\frac{1}{8}$	$\frac{9}{16}$	$\frac{3}{16}$	4	$\frac{1}{4}$
$\frac{5}{16}$	$\frac{19}{32}$	$\frac{5}{32}$	$\frac{11}{16}$	$\frac{7}{32}$	$1\frac{1}{4}$	$\frac{9}{16}$	$\frac{1}{2}$	$1\frac{3}{8}$	$\frac{11}{16}$	$\frac{1}{4}$	5	$\frac{9}{32}$
$\frac{3}{8}$	$\frac{23}{32}$	$\frac{3}{16}$	$\frac{13}{16}$	$\frac{1}{4}$	$1\frac{1}{2}$	$\frac{11}{16}$	$\frac{9}{16}$	$1\frac{5}{8}$	$\frac{13}{16}$	$\frac{5}{16}$	6	$\frac{5}{16}$
$\frac{7}{16}$												
$\frac{1}{2}$	$\frac{59}{64}$	$\frac{1}{4}$	1	$\frac{5}{16}$	$1\frac{3}{4}$	$\frac{7}{8}$	$\frac{5}{8}$	2	1	$\frac{3}{8}$	8	$\frac{3}{8}$
$\frac{5}{8}$	$1\frac{9}{64}$	$\frac{5}{16}$	$1\frac{3}{16}$	$\frac{3}{8}$	$2\frac{1}{8}$	$1\frac{1}{8}$	$\frac{7}{8}$	$2\frac{3}{8}$	$1\frac{3}{16}$	$\frac{7}{16}$	10	$\frac{7}{16}$
$\frac{3}{4}$	$1\frac{25}{64}$	$\frac{3}{8}$	$1\frac{7}{16}$	$\frac{7}{16}$	$2\frac{9}{16}$	$1\frac{3}{8}$	1	$2\frac{7}{8}$	$1\frac{7}{16}$	$\frac{1}{2}$	12	$\frac{1}{2}$
$\frac{7}{8}$	$1\frac{21}{64}$	$\frac{7}{16}$	$1\frac{11}{16}$	$\frac{1}{2}$	3	$1\frac{5}{8}$	$1\frac{1}{8}$	$3\frac{3}{8}$	$1\frac{11}{16}$	$\frac{5}{8}$	14	$\frac{9}{16}$
1	$1\frac{43}{64}$	$\frac{1}{2}$	$1\frac{7}{8}$	$\frac{9}{16}$	$3\frac{3}{8}$	$1\frac{7}{8}$	$1\frac{1}{4}$	$3\frac{13}{16}$	$1\frac{7}{8}$	$\frac{3}{4}$	16	$\frac{5}{8}$
$1\frac{1}{8}$	$1\frac{7}{8}$	$\frac{9}{16}$	$2\frac{3}{32}$	$\frac{5}{8}$	$3\frac{3}{4}$	$1\frac{7}{8}$	$1\frac{3}{8}$	$4\frac{7}{16}$	$2\frac{3}{32}$	$\frac{13}{16}$	$17\frac{1}{2}$	$\frac{5}{8}$
$1\frac{1}{4}$	$2\frac{3}{16}$	$\frac{5}{8}$	$2\frac{1}{4}$	$\frac{11}{16}$	4	2	$1\frac{3}{8}$	$4\frac{1}{2}$	$2\frac{1}{4}$	$\frac{7}{8}$	18	$\frac{11}{16}$
$1\frac{3}{8}$	$2\frac{7}{32}$	$\frac{11}{16}$	$2\frac{7}{16}$	$\frac{3}{4}$	$4\frac{3}{8}$	$2\frac{1}{8}$	$1\frac{1}{4}$ diam.	$4\frac{7}{8}$	$2\frac{7}{16}$	$\frac{15}{16}$	20	$\frac{3}{4}$
$1\frac{1}{2}$	$2\frac{13}{32}$	$\frac{3}{4}$	$2\frac{5}{8}$		$4\frac{5}{8}$	$2\frac{1}{4}$	,,	$5\frac{1}{4}$	$2\frac{5}{8}$	1	21	$\frac{13}{16}$
$1\frac{5}{8}$	$2\frac{27}{64}$	$\frac{13}{16}$	$2\frac{7}{8}$	$\frac{13}{16}$	$5\frac{1}{8}$	$2\frac{3}{8}$	,,	$5\frac{3}{4}$	$2\frac{7}{8}$	$1\frac{1}{16}$	22	$\frac{7}{8}$
$1\frac{3}{4}$	—	$\frac{7}{8}$	$3\frac{1}{16}$	$\frac{7}{8}$	$5\frac{1}{2}$	$2\frac{5}{8}$	$1\frac{3}{8}$ diam.	$6\frac{1}{8}$	$3\frac{1}{16}$	$1\frac{1}{4}$	24	$\frac{7}{8}$
$1\frac{7}{8}$	—	$1\frac{5}{16}$	$3\frac{1}{2}$	$1\frac{5}{16}$	$5\frac{7}{8}$	$2\frac{7}{8}$	,,	$6\frac{1}{2}$	$3\frac{1}{4}$	$1\frac{5}{16}$	26	1
2	—	1	$3\frac{1}{2}$	1	$6\frac{1}{4}$	3	,,	7	$3\frac{1}{2}$	$1\frac{3}{8}$	28	1

BOX SPANNERS OR KEYS.

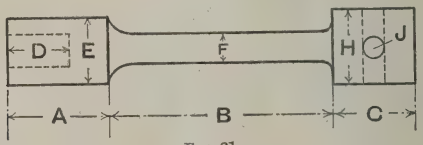


FIG. 21.

Dimensions in Inches.

Nut.	A.	B.	C.	D.	E.	F.	H.	J.
$\frac{5}{8}$	$1\frac{1}{4}$	$3\frac{1}{4}$	1	$\frac{7}{8}$	$1\frac{5}{8}$	$\frac{3}{4}$	$1\frac{1}{8}$	$\frac{7}{16}$
$\frac{3}{4}$	$1\frac{3}{8}$	$3\frac{1}{2}$	$1\frac{1}{2}$	1	$1\frac{7}{8}$	$\frac{7}{8}$	$1\frac{1}{4}$	$\frac{9}{16}$
$\frac{7}{8}$	$1\frac{3}{4}$	4	$1\frac{3}{4}$	$1\frac{1}{4}$	$2\frac{1}{4}$	1	$1\frac{3}{8}$	$\frac{11}{16}$
1	2	$4\frac{1}{2}$	2	$1\frac{1}{2}$	$2\frac{1}{2}$	$1\frac{1}{4}$	2	$\frac{13}{16}$
$1\frac{1}{8}$	$2\frac{3}{8}$	5	$2\frac{1}{4}$	$1\frac{5}{8}$	$2\frac{3}{4}$	$1\frac{3}{8}$	$2\frac{1}{4}$	$\frac{15}{16}$
$1\frac{1}{4}$	$2\frac{3}{8}$	$5\frac{1}{2}$	$2\frac{1}{2}$	$1\frac{3}{4}$	3	$1\frac{1}{2}$	$2\frac{1}{2}$	$1\frac{1}{16}$
$1\frac{1}{2}$	3	$5\frac{1}{2}$	3	2	$3\frac{1}{4}$	$1\frac{3}{4}$	$2\frac{3}{4}$	$1\frac{1}{16}$

Pipe Flanges.

Flanges and Bolts of Cast-iron Pipes.

Diameter of Pipe.	Diameter of Flange.	Flange Thickness.	Size of Bolts.	Number of Bolts.	Bolt Circle.	Weight per Foot.
Ins.	Ins.	Ins.	Ins.		Ins.	Lbs.
1½	6	⅜	½	3	4½	—
2	6½	⅜	½	4	4	8·74
2½	7½	1	⅝	4	5½	10·58
3	8	1	⅝	4	6¼	14·8
3½	8½	1	¾	4	6½	22·1
4	9¼	1 1/16	¾	6	7½	30·8
4½	10	1 1/16	¾	6	7¾	36·3
5	11	1⅛	¾	6	8¼	52
6	12½	1⅛	¾	6	—	58·7
7	14	1 3/16	¾	8	11½	71·8
8	15	1 3/16	¾	8	12½	79·1
9	16½	1¼	¾	8	14	—
10	17½	1¼	¾	10	14¾	—
11	19	1 5/16	¾	10	16	—
12	20	1 5/16	¾	10	17	—

For steam pipes allow 2½ inches per 100 feet for expansion.

British Standard Pipe Flanges.*

(No. 10—1904.) (*Abstract.*)

For Steam Pressures up to 125 lbs., 225 lbs., and 325 lbs., per Sq. In.

Internal Diam. of Pipe.	Diam. of Flange.	Diam. of Bolt Circle.	Number of Bolts.	Diameter of Bolts.		Thickness of Flanges.					
						Cast Iron, and Steel or Iron Welded-on.			Steel (Cast or Riveted-on) and Bronze.		
	125 lbs. 225 lbs. 325 lbs.	125 lbs. 225 lbs. 325 lbs.	125 lbs. 225 lbs. 325 lbs.	125 lbs. 225 lbs.	325 lbs.	125 lbs.	225 lbs.	325 lbs.	125 lbs.	225 lbs.	325 lbs.
Ins.	Ins.	Ins.		Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.
½	3 3/8	2 5/8	4	½	½	½	½	5/8	5/8	7/16	5/8
¾	4	2 7/8	4	½	½	½	½	5/8	5/8	7/16	5/8
1	4 3/8	3 7/16	4	⅝	⅝	½	5/8	¾	½	½	11/16
1¼	5¼	3 5/8	4	⅝	⅝	½	5/8	¾	½	½	11/16
1½	5½	4⅛	4	⅝	⅝	½	¾	⅞	½	9/16	¾
2	6½	5	4	⅝	¾	¾	¾	1	⅝	11/16	⅞
2½	7¼	5 3/4	8	⅝	¾	¾	⅞	1	⅝	11/16	⅞
3	8	6½	8	¾	¾	¾	1	1⅛	⅝	¾	1
3½	8½	7	8	¾	¾	⅞	1	1¼	¾	¾	1
4	9	7½	8	¾	¾	⅞	1⅛	1⅜	¾	⅞	1⅛
5	11	9¼	8	⅞	⅞	1	1⅛	1⅜	⅞	1	1⅛
6	12	10¼	12	¾	⅞	1	1¼	1½	⅞	1	1¼
7	13½	11½	12	¾	⅞	1	1⅜	1⅝	⅞	1⅛	1⅜
8	14½	12¾	12	¾	⅞	1⅛	1⅜	1⅝	1	1⅛	1⅜
9	16	14	12	⅞	1	1⅛	1½	1¾	1	1¼	1½
10	17	15	12	⅞	1	1¼	1½	1⅞	1	1¼	1⅝
12	19½	17¼	16	⅞	1	1¼	1⅝	2	1⅛	1⅜	1¾
14	21½	19¼	16	1	1⅛	1⅜	1¾	2⅛	1¼	1½	1⅞
15	22¾	20⅜	16	1	1⅛	1⅜	1⅞	2⅛	1¼	1⅝	1⅞
16	24	21¾	20	1	1⅛	1⅜	1⅝	2⅛	1¼	1⅝	2
18	26½	24	20	1⅛	1¼	1½	2	2⅜	1⅜	1¾	2⅛
20	29	26½	24	1⅛	1¼	1⅝	2⅛	2⅜	1½	1⅞	2¼
21	30	27⅝	24	1⅛	1¼	1⅝	2¼	2⅝	1½	2	2⅜
24	33½	30¾	24	1¼	1⅜	1¾	2⅜	2¾	1⅝	2⅛	2½

Bolt holes.—For ½-in. and ⅝-in. bolts the diameters of the holes to be 1/16-in. larger than the diameters of the bolts, and for larger sizes of bolts ⅛-in. Bolt holes to be drilled off centre lines.

* By permission of the British Engineering Standards Association.

BRITISH STANDARD PIPE FLANGES—*continued.*

For Steam Pressures up to 55 lbs. and for Water Pressures up to 200 lbs. per Sq. In.

Internal Diameter of Pipe.	Diameter of Flange.	Diameter of Bolt Circle.	Number of Bolts.	Diameter of Bolts.	Thickness of Flanges.		
					Cast Iron and Steel or Iron Welded-on.	Cast Steel and Bronze.	Stamped or Forged Wrought Iron or Steel.
Ins.	Ins.	Ins.		Ins.	Ins.	Ins.	Ins.
$\frac{1}{2}$	$3\frac{3}{4}$	$2\frac{5}{8}$	4	$\frac{1}{2}$	$\frac{1}{2}$	$\frac{3}{8}$	$\frac{3}{16}$
$\frac{3}{4}$	4	$2\frac{7}{8}$	4	$\frac{1}{2}$	$\frac{1}{2}$	$\frac{3}{8}$	$\frac{3}{16}$
1	$4\frac{1}{2}$	$3\frac{1}{4}$	4	$\frac{1}{2}$	$\frac{1}{2}$	$\frac{3}{8}$	$\frac{3}{16}$
$1\frac{1}{4}$	$4\frac{5}{8}$	$3\frac{7}{16}$	4	$\frac{1}{2}$	$\frac{5}{8}$	$\frac{1}{2}$	$\frac{1}{4}$
$1\frac{1}{2}$	$5\frac{1}{4}$	$3\frac{7}{8}$	4	$\frac{1}{2}$	$\frac{5}{8}$	$\frac{1}{2}$	$\frac{1}{4}$
2	6	$4\frac{1}{2}$	4	$\frac{5}{8}$	$\frac{3}{4}$	$\frac{9}{16}$	$\frac{5}{16}$
$2\frac{1}{2}$	$6\frac{1}{4}$	5	4	$\frac{5}{8}$	$\frac{3}{4}$	$\frac{9}{16}$	$\frac{5}{16}$
3	$7\frac{1}{4}$	$5\frac{3}{4}$	4	$\frac{5}{8}$	$\frac{3}{4}$	$\frac{9}{16}$	$\frac{3}{8}$
$3\frac{1}{2}$	8	$6\frac{1}{2}$	4	$\frac{5}{8}$	$\frac{3}{4}$	$\frac{9}{16}$	$\frac{3}{8}$
4	$8\frac{1}{2}$	7	4	$\frac{5}{8}$	$\frac{7}{8}$	$\frac{11}{16}$	$\frac{3}{8}$
5	10	$8\frac{1}{2}$	8	$\frac{5}{8}$	$\frac{7}{8}$	$\frac{11}{16}$	$\frac{1}{2}$
6	11	$9\frac{1}{4}$	8	$\frac{5}{8}$	$\frac{7}{8}$	$\frac{11}{16}$	$\frac{1}{2}$
7	12	$10\frac{1}{4}$	8	$\frac{5}{8}$	1	$\frac{3}{4}$	$\frac{1}{2}$
8	$13\frac{1}{4}$	$11\frac{1}{4}$	8	$\frac{5}{8}$	1	$\frac{3}{4}$	$\frac{1}{2}$
9	$14\frac{1}{2}$	$12\frac{3}{4}$	8	$\frac{5}{8}$	1	$\frac{3}{4}$	$\frac{5}{8}$
10	16	14	8	$\frac{3}{4}$	1	$\frac{3}{4}$	$\frac{5}{8}$
12	18	16	12	$\frac{3}{4}$	$1\frac{1}{8}$	$\frac{7}{8}$	$\frac{5}{8}$
14	$20\frac{3}{4}$	$18\frac{1}{2}$	12	$\frac{7}{8}$	$1\frac{1}{8}$	1	$\frac{3}{4}$
15	$21\frac{3}{4}$	$19\frac{1}{2}$	12	$\frac{7}{8}$	$1\frac{1}{4}$	1	$\frac{3}{4}$
16	$22\frac{3}{4}$	$20\frac{1}{2}$	12	$\frac{7}{8}$	$1\frac{1}{4}$	1	$\frac{3}{4}$
18	$25\frac{1}{4}$	23	12	$\frac{7}{8}$	$1\frac{3}{8}$	$1\frac{1}{8}$	$\frac{7}{8}$
20	$27\frac{3}{4}$	$25\frac{1}{4}$	16	$\frac{7}{8}$	$1\frac{3}{8}$	$1\frac{1}{4}$	1
21	29	$26\frac{1}{2}$	16	$\frac{7}{8}$	$1\frac{1}{2}$	$1\frac{1}{4}$	1
24	$32\frac{1}{2}$	$29\frac{3}{4}$	16	1	$1\frac{5}{8}$	$1\frac{3}{8}$	$1\frac{1}{8}$

Bolt holes.—For $\frac{1}{2}$-in. and $\frac{5}{8}$-in. bolts the diameters of the holes to be $\frac{1}{16}$-in. larger than the diameter of the bolts, and for larger sizes of bolts $\frac{1}{8}$-in. Bolt holes to be drilled off centre lines.

(The above table does not apply to boiler feed pipes, or to other water pipes subject to exceptional shocks.)

Keys.

This form of Key when driven in or on.




FIG. 22.

This form of Key when Key slides whilst doing work.




FIG. 23.

Shaft.	Dimensions in Inches.				Shaft.				
	Fig. 22.		Fig. 23.			Fig. 22.		Fig. 23.	
	Width.	Depth.	Width.	Depth.		Width.	Depth.	Width.	Depth.
$\frac{3}{4}$–1	$\frac{1}{4}$	$\frac{1}{4}$	$\frac{1}{4}$	$\frac{1}{4}$	3–$3\frac{3}{4}$	$\frac{3}{8}$	$\frac{3}{8}$	$\frac{3}{8}$	$\frac{3}{8}$
$1\frac{1}{2}$–$1\frac{3}{16}$	$\frac{5}{16}$	$\frac{1}{4}$	$\frac{5}{16}$	$\frac{5}{16}$	$3\frac{1}{2}$–$3\frac{7}{8}$	$\frac{7}{8}$	$\frac{5}{8}$	$\frac{7}{8}$	$\frac{7}{8}$
$1\frac{1}{4}$–$1\frac{3}{8}$	$\frac{3}{8}$	$\frac{1}{4}$	$\frac{3}{8}$	$\frac{3}{8}$	4–$4\frac{1}{2}$	1	$\frac{3}{4}$	1	1
$1\frac{1}{2}$–$1\frac{3}{4}$	$\frac{7}{16}$	$\frac{3}{8}$	$\frac{7}{16}$	$\frac{7}{16}$	$4\frac{5}{8}$–$5\frac{1}{8}$	$1\frac{1}{8}$	$\frac{3}{4}$	$1\frac{1}{8}$	$1\frac{1}{8}$
$1\frac{7}{8}$–$2\frac{1}{8}$	$\frac{1}{2}$	$\frac{3}{8}$	$\frac{1}{2}$	$\frac{1}{2}$	$5\frac{1}{4}$–$5\frac{5}{8}$	$1\frac{1}{4}$	$\frac{7}{8}$	$1\frac{1}{4}$	$1\frac{1}{4}$
$2\frac{1}{4}$–$2\frac{1}{2}$	$\frac{5}{16}$	$\frac{7}{16}$	$\frac{9}{16}$	$\frac{9}{16}$	$5\frac{3}{4}$–$6\frac{1}{4}$	$1\frac{3}{8}$	1	$1\frac{3}{8}$	$1\frac{3}{8}$
$2\frac{5}{8}$–$2\frac{7}{8}$	$\frac{5}{8}$	$\frac{1}{2}$	$\frac{5}{8}$	$\frac{5}{8}$					

Pipe Size. Inches.	Pipe Thickness, Inches.	Thickness nearest Fraction, Inches.	Stress on Pipe per Square Inch at 200 lbs.	Radius of Fillet, Inches.	Flange Diameter, Inches.	Flange Thickness at Hub for Iron Pipe, Inches.	Flange Thickness at Edge, Inches.	Width Flange Face, Inches.	Bolt Circle Diameter, Inches.	Number of Bolts.	Bolt Size Diameters, Inches.	Bolt Length, Inches.	Stress on each Bolt per Square Inch at Bottom of Thread at 200 lbs.
2	·409	7/16	460	1/8	6	1	5/8	2	4 3/4	4	1/2	2	825
2 1/2	·429	7/16	550	1/8	7	1 1/16	11/16	2 1/4	5 1/2	4	1/2	2 1/4	1,050
3	·448	7/16	690	1/8	7 1/2	1 1/16	11/16	2 1/4	6	4	1/2	2 1/2	1,330
3 1/2	·466	1/2	700	1/8	8 1/2	1 1/16	11/16	2 1/2	7	4	1/2	2 3/4	2,530
4	·486	1/2	800	1/8	9	1 1/16	11/16	2 1/2	7 1/2	4	1/2	2 3/4	2,100
4 1/2	·498	1/2	900	1/8	9 1/4	1 1/16	11/16	2 3/4	7 3/4	8	1/2	3	1,430
5	·525	1/2	1,000	1/8	10	1 1/16	11/16	2 3/4	8 1/2	8	1/2	3	1,630
6	·563	9/16	1,060	1/8	11	1 1/16	11/16	2 3/4	9 1/2	8	1/2	3	2,360
7	·60	5/8	1,120	1/8	12 1/2	1 1/16	1 1/16	2 3/4	10 3/4	8	5/8	3 1/4	3,200
8	·639	5/8	1,280	1/8	13 1/2	1 1/16	1 1/16	2 3/4	11 3/4	8	5/8	3 1/2	4,190
9	·678	11/16	1,310	3/16	15	1 1/4	1 1/8	3	13 1/4	12	5/8	3 1/2	3,610
10	·713	3/4	1,330	3/16	16	2	1 3/16	3	14 1/4	12	3/4	3 3/4	2,970
12	·79	13/16	1,470	3/16	19	2	1 1/4	3 1/2	17	12	3/4	4 1/4	4,280
14	·864	7/8	1,600	3/16	21	2	1 3/8	3 1/2	18 3/4	12	7/8	4 1/4	4,280
15	·904	15/16	1,600	3/16	22 1/4	2	1 3/8	3 3/4	20	16	7/8	4 1/4	3,660
16	·946	1	1,600	3/16	23 1/2	2 1/4	1 7/16	3 3/4	21 1/4	16	1	4 1/4	4,210
18	1·02	1 1/16	1,690	3/16	25	...	1 9/16	3 1/2	22 3/4	16	1 1/8	4 3/4	4,540
20	1·09	1 1/8	1,780	3/16	27 1/2	...	1 11/16	3 3/4	25	20	1	5	4,490
22	1·18	1 3/16	1,850	1/4	29 1/2	...	1 13/16	3 3/4	27 1/4	20	1	5 1/2	4,320
24	1·25	1 1/4	1,920	1/4	32	...	1 1/8	4	29 1/2	20	1	5 1/2	5,130
26	1·30	1 5/16	1,980	1/4	34 1/2	...	2	4 1/8	31 1/4	24	1	5 3/4	5,030
28	1·38	1 3/8	2,040	1/4	36	...	2 1/16	4 1/4	33 1/2	28	1	6	5,000
30	1·48	1 1/2	2,000	1/4	38	...	2 1/8	4 3/8	34	28	1 1/8	6 1/4	4,590
36	1·71	1 3/4	1,920	1/4	44 1/2	...	2 3/8	4 7/8	36	32	1 1/8	6 1/2	5,790
42	1·87	2	2,100	1/4	51	...	2 5/8	5 3/8	42	36	1 1/4	7 1/4	5,700
48	2·17	2 1/4	2,130	1/4	57 1/2	...	2 7/8	5 3/4	48 1/2	44	1 3/8	7 3/4	6,090
									49 1/2		1 1/2		
									54 1/4				
									56				

The double sets of figures for flanges of pipe sizes above 24 in. are intended one for pressures of 200 lbs. and the other for less; this also applies to the two sizes of bolts.

Screw Taps and Tapping.

WHITWORTH'S STANDARD TAPS.

Dimensions in Inches.						Threads per Inch.
Outside Diameter.	Full Length.	Length of Screw Part.	Length of Square.	Size of Square.	Diameter at Bottom of Thread.	
1/16	1 1/2	5/8	3/16	—	·0413	60
3/32	1 5/8	3/4	3/16	—	·0671	48
1/8	1 3/4	7/8	1/4	—	·093	40
5/32	1 7/8	7/8	1/4	—	·112	32
3/16	2	1	5/16	—	·134	24
7/32	2 1/8	1 1/16	5/16	—	·165	24
1/4	2 1/4	1 1/8	3/8	—	·186	20
5/16	2 1/4	1 1/8	7/16	5/32	·241	18
3/8	2 1/2	1 1/4	1/2	7/32	·295	16
7/16	3 1/4	1 3/4	1/2	9/32	·346	14
1/2	3 1/2	2	7/16	5/16	·393	12
9/16	3 3/4	2	9/16	5/16	·455	12
5/8	4	2 1/2	5/8	3/8	·508	11
11/16	4 1/4	2 3/4	11/16	3/8	·571	11
3/4	4 1/2	2 1/2	3/4	7/16	·622	10
13/16	4 1/2	2 5/8	3/4	7/16	·684	10
7/8	5	2 1/2	13/16	1/2	·732	9
15/16	5 1/2	3	13/16	1/2	·795	9
1	5 1/2	3 1/2	7/8	5/8	·84	8
1 1/8	6	3 1/2	1	11/16	·942	7
1 1/4	6 1/2	3 3/4	1 1/8	13/16	1·067	7
1 3/8	7 1/2	4 1/4	1 1/8	13/16	1·161	6
1 1/2	8	4 3/4	1 1/4	1	1·286	6
1 5/8	8 1/2	5 1/4	1 1/4	1	1·368	5
1 3/4	9	5 1/4	1 3/8	1 1/8	1·494	5
1 7/8	9 1/2	5 3/4	1 3/8	1 1/8	1·59	4 1/2
2	10	6	1 1/2	1 3/16	1·715	4 1/2
2 1/8	10 1/2	6 1/4	1 1/2	1 3/8	1·84	4 1/2
2 1/4	11	6 3/4	1 5/8	1 1/2	1·93	4
2 3/8	11 1/2	7 1/4	1 5/8	1 5/8	2·054	4
2 1/2	12	7 1/4	1 3/4	1 5/8	2·18	4
2 5/8	12 1/2	8 1/2	1 3/4	1 3/4	2·304	4

TABLE OF B.A. DRILL SIZES FOR TAPPING.

Number.	Standard.		Working.			Number.	Standard.		Working.		
	Clear.	Tap.	Clear.	Hard Brass Tapping.	Soft Iron Tapping.		Clear.	Tap.	Clear.	Hard Brass Tapping.	Soft Iron Tapping.
0	15/64	12	15/64	10	9	8	44	51	43	49	48
1	4	19	3	15	15	9	48	53	48	52	51
2	13	26	12	24	23	10	51	55	50	54	53
3	20	30	19	29	28	11	53	57	53	55	55
4	28	34	27	32	31	12	55	62	55	57	57
5	30	40	30	37	36	13	56	65			
6	35	44	34	43	42	14	61	70			
7	40	48	39	46	45						

(*H. T. R. Grantham.*)

TABLE OF DRILL AND TAPPING SIZES.

Whitworth.		Metric.		Gas.		British Association.				
Size.	Drill.	Size.	Drill.	Size.	Drill.	Size.	Drill.	Clearance.	Diam. of Head.	
$\frac{1}{8}$	No. 38			$\frac{1}{8}$	$\frac{11}{32}$	0	9–11	$\frac{15}{64}$	$\frac{27}{64}$	Drill Gauge.
$\frac{3}{16}$	,, 25			$\frac{1}{4}$	$\frac{29}{64}$	1	15–17	$\frac{3}{64}$	$\frac{23}{64}$	
$\frac{1}{4}$	,, 9			$\frac{3}{8}$	$\frac{19}{32}$	2	24–25	12–13	$\frac{21}{64}$	
$\frac{5}{16}$	$\frac{1}{4}$			$\frac{1}{2}$	$\frac{27}{32}$	3	28–29	19–20	$\frac{9}{32}$	
$\frac{3}{8}$	$\frac{19}{64}$			$\frac{3}{4}$	$\frac{61}{64}$	4	31–33	27–28	$\frac{7}{64}$	
$\frac{7}{16}$	$\frac{11}{32}$	5	3·9 or 24	1	$1\frac{3}{16}$	5	36–39	30	$\frac{15}{64}$	
$\frac{1}{2}$	$\frac{27}{64}$	$5\frac{1}{2}$	4·2 – 19	$1\frac{1}{4}$	$1\frac{1}{2}$	6	42–43	34–35	$\frac{3}{16}$ Full	9
$\frac{9}{16}$	$\frac{29}{64}$	6	4·5 – 16	$1\frac{1}{2}$	$1\frac{25}{32}$	7	45–48	39–40	$\frac{11}{64}$	16
$\frac{5}{8}$	$\frac{33}{64}$	7	5·4 – 3	2	$2\frac{3}{16}$	8	48–51	43–44	$\frac{5}{32}$	24
$\frac{11}{16}$	$\frac{37}{64}$	8	6·25 – D	$2\frac{1}{2}$	$2\frac{25}{32}$	9	51–53	48	$\frac{9}{64}$	30
$\frac{3}{4}$	$\frac{41}{64}$	9	7 – J	3	$3\frac{9}{32}$	10	53–55	50–51	$\frac{1}{8}$	32
$\frac{13}{16}$	$\frac{11}{16}$	10	8 – $\frac{5}{16}$	$3\frac{1}{2}$	$3\frac{25}{32}$	11	55–56	53		
$\frac{7}{8}$	$\frac{47}{64}$	12	9·5 – V	4	$4\frac{1}{4}$	12	57–61	55		
$\frac{15}{16}$	$\frac{51}{64}$	14	11·5 – $\frac{29}{64}$			13	63	58		
1	$\frac{55}{64}$	16	13·0 – $\frac{33}{64}$			14	69	61		
$1\frac{1}{8}$	$1\frac{1}{16}$	18	14·5 – $\frac{37}{64}$			15	71	·035 or 65		
$1\frac{1}{4}$	$1\frac{1}{8}$	20	16·5 – $\frac{41}{64}$			16	74	·031 – 68		
$1\frac{3}{8}$	$1\frac{5}{32}$	22	18 – $\frac{45}{64}$			17	76	·027 – 70		
$1\frac{1}{2}$	$1\frac{9}{32}$	24	20 – $\frac{49}{64}$			18	78	·024 – 72		
$1\frac{5}{8}$	$1\frac{13}{32}$	26	21 – $\frac{53}{64}$			19	79	·021 – 74		
$1\frac{3}{4}$	$1\frac{17}{32}$	28	23 – $\frac{57}{64}$			20		·019 – 75		
$1\frac{7}{8}$	$1\frac{21}{32}$	30	24·5 – $\frac{31}{32}$			21		·017 – 77		
2	$1\frac{25}{32}$	32	$1\frac{5}{64}$			22		·015 – 78		
$2\frac{1}{4}$	$1\frac{33}{32}$	36	30			23		·013 – 80		
$2\frac{1}{2}$	$2\frac{7}{32}$	40	$1\frac{5}{16}$			24		·011		
						25		·010		

(*H. T. R. Grantham.*)

TAPPING.

It is a common occurrence for a tap to break when tapping hard metal. If the tap is ground away on the point, so that the first five or six threads are gradually bevelled, the risk of breakage may be largely avoided. The effect of grinding the end of the tap is to break up the chips into smaller pieces, and thus prevent clogging the threads of the tap. This will be found to be especially advantageous in tapping very hard rolled steel. (*Mechanical World.*)

An easy rule for approximating tap-drill sizes is to deduct $1\frac{1}{2}$ times the pitch from the outside diameter of the tap. In the case of a $\frac{3}{8}$-in. tap, 16-pitch thread, for instance, $1\frac{1}{2}$ times $\frac{1}{16}=\frac{3}{32}$, and $\frac{3}{8}-\frac{3}{32}=\frac{9}{32}$ = the diameter of the drill required for a $\frac{3}{8}$-in. tap. (*Machinery.*)

CORRECT TAP GRINDING.

Grinding a tap consists usually of grinding the taper at the end of the tap, and the clearance back of the cutting edge thus formed. This taper may be long, as in nut taps; short, as in plug taps; or almost none, as in bottoming taps. The principle remains the same in each case. What is required is that each flute shall have exactly the same taper, just enough clearance so that it will cut freely, and not enough to needlessly weaken the cutting edge.

Prior to the advent of tap-grinding machinery nearly all taps were ground by hand, with a resultant lack of uniformity in taper and clearance. Fig. 24 shows a section of a four-flute tap with each flute ground differently in the matter of clearance or backing off. The flute A, at the left, is ground with a straight-line clearance just sufficient to have the heel of the flute actually clear and not drag. This calls for an angle of 15°, as indicated, and results in a weak cutting edge, but the strongest possible with a straight-line clearance at the heel.

The flute B, at the top, shows a 15° convex clearance. A glance shows this to be excessive. Flute C, at the right, shows a straight-line clearance of 5°, and nearly half of the flute at the back is not cleared at all, leaving the tap to ride on that portion and keep the front of the flute from cutting. Flute D, at the bottom, shows a perfect grind for ordinary work. It is a 5° convex clearance, and shows that with this small but sufficient clearance angle at the cutting edge, the back is perfectly cleared.

In addition to the correct clearance of taps, a uniform angle of taper for all flutes is necessary. The results of different tapers obtained by hand-grinding are indicated in fig. 24. Even a slight variation from the uniform taper angle means power wasted and taps broken. As the blunt

angle flute strikes the side of a drilled hole, it throws the cutting end of the tap off centre and imparts to it a wabbling motion. This means a tapped hole that is oversized, allowing the screw to fit loosely. Tap A is correctly ground and will tap a hole true to size, properly located and

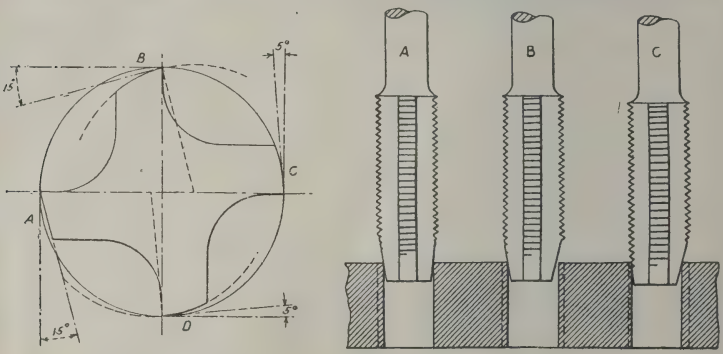


FIG. 24.

with smooth, accurately shaped threads. Tap B is ground with one flute at a more blunt angle than the other. This blunt flute is shown just as it strikes the drilled hole. Tap C shows a similar tap after it has been crowded over. The condition developed is readily seen.

(*'Railway Mechanical Engineer.'*)

PIPE THREAD TAP HEADS.

The Sheffield Small Tool Manufacturers have adopted the following list of sizes for the squares of pipe thread taps :—

No. of □.	Size of □. Inches.		Whitworth Thread Taps. Inches.	International Thread Taps. Millimetres.	Gas Tap. Inches.
	Fraction.	Decimal.			
0	$\frac{7}{64}$	·109	$\frac{1}{8}$	3 to $3\frac{1}{2}$	—
1	$\frac{9}{64}$	·140	$\frac{5}{32}$	4 to $4\frac{1}{2}$	—
2	$\frac{5}{32}$	·156	$\frac{5}{16}$	5	—
3	$\frac{13}{64}$	·203	$\frac{1}{4}$	6 to 7	—
4	$\frac{15}{64}$	·234	$\frac{5}{16}$ and $\frac{3}{8}$	8 to 10	$\frac{1}{8}$
5	$\frac{9}{32}$	·281	$\frac{7}{16}$	11 to 12	—
6	$\frac{5}{16}$	·312	$\frac{1}{2}$ and $\frac{9}{16}$	13 to 14	$\frac{1}{4}$
7	$\frac{25}{64}$	·390	$\frac{9}{16}$ and $\frac{11}{16}$	15 to 17	$\frac{3}{8}$
8	$\frac{29}{64}$	·453	$\frac{3}{4}$ and $\frac{13}{16}$	18 to 21	$\frac{1}{2}$
9	$\frac{35}{64}$	·546	$\frac{7}{8}$ and $\frac{15}{16}$	22 to 23	—
10	$\frac{41}{64}$	·640	1	24 to 26	$\frac{5}{8}$ and $\frac{3}{4}$
11	$\frac{23}{32}$	·718	$1\frac{1}{8}$	27 to 30	—
12	$\frac{13}{16}$	·812	$1\frac{1}{4}$	31 to 33	$\frac{7}{8}$ and 1
13	$\frac{27}{32}$	·843	$1\frac{3}{8}$	34 to 36	—
14	$\frac{29}{32}$	·906	$1\frac{1}{2}$	37 to 41	$1\frac{1}{4}$
15	$1\frac{5}{64}$	1·078	$1\frac{5}{8}$ and $1\frac{3}{4}$	42 to 46	$1\frac{1}{2}$ and $1\frac{3}{4}$
16	$1\frac{13}{64}$	1·203	$1\frac{7}{8}$ and 2	47 to 52	—
17	$1\frac{3}{8}$	1·375	$2\frac{1}{8}$ and $2\frac{1}{4}$	54 to 58	2 and $2\frac{1}{4}$
18	$1\frac{1}{2}$	1·500	$2\frac{3}{8}$ and $2\frac{1}{2}$	60 to 64	—
19	$1\frac{5}{8}$	1·625	$2\frac{5}{8}$ and $2\frac{3}{4}$	66 to 70	—
20	$1\frac{3}{4}$	1·750	$2\frac{7}{8}$ and 3	72 to 76	$2\frac{1}{2}$ to 3

Intermediate diameters have same squares as sizes below.

The heads of fluted hand reamers have same size squares as Whitworth taps and International thread taps respectively.

The sizes of squares are stated in fractions and in decimals of inches, to facilitate measurement with either the mechanics' rule or the micrometer calliper.

No. of □ may be quoted when ordering tap wrenches.

Cast-Iron Muff Couplings.

Dimensions in Inches.					No. of Bolts.
Dia. of Shaft.	A. Dia. of Muff.	B. Thickness of Lug.	Length of Coupling	D. Dia. of Bolt.	
1¼	3½	13/16	5¼	⅝	2
1½	4¼	13/16	6½	⅝	2
2	5½	15/16	8½	¾	2
2½	6½	15/16	9¾	¾	3
2¾	7¼	1	11½	¾	3
3	7¾	1	13	⅞	3
3½	8½	1 1/16	15	⅞	3
4	9½	1⅛	16½	1	3
4½	10½	1 3/16	18	1	3
5	11½	1¼	20	1	3

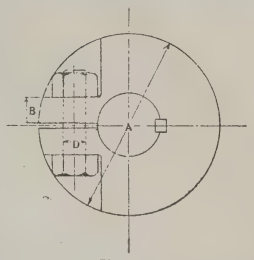


FIG. 25.

Pulley Arms and Bosses.

Diam. of Pulley, Ins.	Section of Arms.		Depth of Rib round the Boss. Ins.	Thickness of Metal round Shaft for Shaft Diameters in Ins.				
	at Boss. Ins.	at Rim. Ins.		1⅛ to 2.	2⅛ to 3.	3⅛ to 4.	4⅛ to 5.	5⅛ to 6.
12	1⅜ × ½	1⅜ × ½	¾	1	1⅛	1¼	1⅜	1½
15	1⅞ × ⅝	1⅜ × ⅝	⅞	1	1⅛	1¼	1⅜	1½
18	2 × ¾	1⅜ × ⅝	1	1	1⅛	1¼	1⅜	1½
21	2⅛ × ⅞	1⅜ × ¾	1⅛	1⅛	1¼	1⅜	1½	1⅝
24	2⅛ × 1 1/16	1⅜ × ¾	1⅛	1⅛	1¼	1⅜	1½	1⅝
27	2⅛ × 1	2 × ⅞	1⅛	1⅛	1¼	1⅜	1½	1⅝
30	2⅛ × 1	2⅛ × ⅞	1¼	1⅛	1¼	1⅜	1½	1¾
33	2⅞ × 1 1/16	2⅛ × ⅞	1⅜	1¼	1⅜	1½	1⅝	1¾
36	3 × 1 1/16	2⅜ × ⅞	1⅜	1¼	1⅜	1½	1⅝	1¾
39	3⅛ × 1⅛	2⅛ × 1	1⅛	1¼	1⅜	1½	1⅝	1⅞
42	3¼ × 1⅛	2⅛ × 1	1⅝	1⅜	1⅜	1½	1⅜	1⅞
45	3⅜ × 1⅛	2⅛ × 1	1⅝	1⅜	1½	1⅝	1⅜	2
48	3½ × 1⅛	2⅞ × 1 1/16	1⅛	1⅜	1½	1⅝	1⅞	2
54	3⅝ × 1⅛	3 × 1 1/16	1⅛	—	1⅝	1⅜	1⅞	2⅛
60	3⅞ × 1⅛	3⅛ × 1⅛	2	—	1⅝	1⅜	1⅞	2⅛
66	4 × 1⅛	3⅛ × 1⅛	2	—	1⅞	1⅞	2	2⅛
72	4⅛ × 1⅛	3⅛ × 1 3/16	2⅛	—	1⅞	2	2⅛	2⅜
84	4⅛ × 1⅛	3⅜ × 1¼	2¼	—	2	2⅛	2⅜	2½

Pulleys up to 17 ins. diam., 4 arms; from 18 ins. to 6 ft. diam., 6 arms; 6 ft. diam. upwards 8 arms.

Work-tables of Machine Tools.

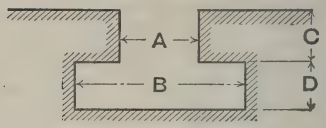


FIG. 26.

PROPORTION OF TEE SLOTS IN CAST-IRON TABLES.

Size of Bolt. Ins.	Inches. A.	B.	C.	D.	Size of Bolt. Ins.	Inches. A.	B.	C.	D.
$\frac{1}{2}$	$\frac{9}{16}$	1	$\frac{1}{2}$	$\frac{3}{8}$	$1\frac{1}{2}$	$1\frac{5}{8}$	$2\frac{5}{8}$	$1\frac{1}{2}$	$1\frac{1}{16}$
$\frac{5}{8}$	$\frac{11}{16}$	$1\frac{3}{16}$	$\frac{5}{8}$	$\frac{1}{2}$	$1\frac{3}{4}$	$1\frac{7}{8}$	3	$1\frac{3}{4}$	$1\frac{1}{8}$
$\frac{3}{4}$	$\frac{13}{16}$	$1\frac{5}{16}$	$\frac{3}{4}$	$\frac{5}{8}$	2	$2\frac{1}{8}$	$3\frac{1}{2}$	2	$1\frac{1}{4}$
$\frac{7}{8}$	$\frac{15}{16}$	$1\frac{7}{16}$	$\frac{7}{8}$	$\frac{11}{16}$	$2\frac{1}{4}$	$2\frac{3}{8}$	$3\frac{7}{8}$	$2\frac{1}{4}$	$1\frac{5}{16}$
1	1	$1\frac{9}{16}$	1	$\frac{3}{4}$	$2\frac{1}{2}$	$2\frac{5}{8}$	$4\frac{1}{2}$	$2\frac{1}{2}$	$1\frac{5}{8}$
$1\frac{1}{8}$	$1\frac{1}{16}$	$1\frac{13}{16}$	$1\frac{1}{8}$	$\frac{15}{16}$	$2\frac{3}{4}$	$2\frac{7}{8}$	$4\frac{1}{2}$	$2\frac{1}{4}$	$1\frac{3}{4}$
$1\frac{1}{4}$	$1\frac{3}{16}$	$2\frac{1}{16}$	$1\frac{1}{4}$	$\frac{7}{8}$	3	$3\frac{1}{8}$	5	3	$1\frac{7}{8}$

KEEPING BOLTS IN PLACE IN OPEN-SLOTTED TABLES.

When bolts have to be used for repeat work in drilling machine or other open-slot types of tables, the flopping about and dropping of these bolts becomes a time-wasting nuisance. Fig. 27 shows two methods of holding them firmly in position, so that work can be removed

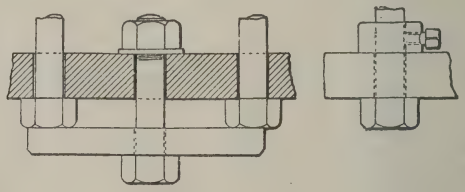


FIG. 27.

and a fresh piece substituted with the minimum of inconvenience. In the one case a clamp is suspended from a bolt and drawn up against the heads ; in the other a loose collar is slipped down the bolt and tightened with a set-screw, an easier way than troubling to thread the bolt right down and putting a nut on. (*'Machinery.'*)

Indicator for Wire Gauge.

A simply made indicator to enclose the notch of a wire gauge that is in use, and save time and trouble when making repeated gaugings, or searching amongst stock or scrap, can be made as

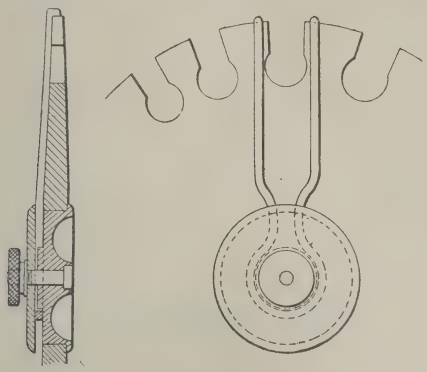


Fig. 28.

shown by fig. 28. The principle is to use springy wire, which may be altered to come just outside the edges of each opening. After holding it at this setting, clamping is done by tightening the knurled nut, which draws the large washer down on the wire and binds it. (*'Machinery.'*)

SECTION XXII

THE ATMOSPHERE – WIND – AIR RESISTANCE – WIND-MILLS–TRANSMISSION OF POWER BY COMPRESSED AIR–AIR COMPRESSORS–PNEUMATIC DESPATCH TUBES

(With Contributions by Edward Butler, M.I.Mech.E., R. A. Sturgeon, A.M.I.C.E., and R. Myles Hook.)

SECTION XXII

THE ATMOSPHERE—WIND—AIR-RESISTANCE—WINDMILLS—TRANSMISSION OF POWER BY COMPRESSED AIR—AIR COMPRESSORS—PNEUMATIC DESPATCH TUBES.

THE ATMOSPHERE.

Air consists, by volume, of oxygen 20·84 parts, of nitrogen 79·16 parts; and by weight, of oxygen 23·15 parts, and of nitrogen 76·85 parts. Also ·03 to ·04 per cent., by volume, of carbonic acid.*

One cubic foot of ordinary dry air at normal pressure, temp. 62°F., weighs 532·5 grains (saturated, 529 grains); or 1 lb. of air contains 13·146 cubic feet.

Dry air is 819 times lighter than water. Aqueous vapour, 1·4 per cent. by volume.

The mean weight of a column of air 1 inch square and 45 miles high is 15 lbs.

At 7 miles above the surface of the earth the air is 4 times lighter than at the earth's surface; at 14 miles, 16 times; at 21 miles, 64 times. Total weight of atmosphere, 5,300 billion tons.

According to a writer in *Nature*, the result of experiments made with forty balloons (sent up in Great Britain) has been that the isothermal layer was reached more than thirty times. Its average height was 35,000 ft. (10·7 kilomes.); it is rather higher with a high barometer. The mean temperature found was −53·6°F. (−77°C.), considerably higher than the Continental mean. The extremes observed in England were −22°F., near Ditcham Park, Hants, on July 24, and −78°F., near Oxford, on September 12, 1907. On the same day, November 11, 1907, the temperature was −42°F. at Ditcham at 36,000 ft. altitude, −58°F. in Oxfordshire at 38,500 ft., and −74°F. near Manchester at 37,000 ft. The existence of an isothermal layer in equilibrium in which the fall of temperature suddenly stops, and yet in which such great differences of temperature occur at spots not very far from one another, is difficult to understand, especially considering the low atmospheric pressure at these heights. (See also page 190.)

To consume 1 lb. of coal requires 11½ lbs., or 150 cubic feet, of air to combine with it.

It is practically impossible to construct an air-engine of any great power, as air, like all other gases, expands but one volume for each 493° of temperature through which it is raised; and, in order to double its volume, we must raise it 493° more, that is to 986°F., which is much too high for practical purposes. Even if air could be worked at this temperature, it would be necessary to have a feed-pump of nearly the capacity of the engine, and the engine itself would have to be more than twice the size of a steam-engine of the same power.

The expansion of air, like all other elastic fluids, is uniform at all temperatures.

If h = height of barometrical column of mercury; K = number of square inches in section of tube; 13,568 ozs., or 848 lbs. = weight of cubic foot of mercury at mean temperature; p = number of pounds pressure of air on square inch of surface; then

Pressure of atmosphere on K sq. ins. $= p \times K$. Weight of column of mercury $= \frac{K h}{1728} \times 848$.

But column of mercury balances the pressure of the atmosphere; therefore

$$p \times K = \frac{K h}{1728} \times 848, \quad \text{or,} \quad p = \frac{848}{1728} \times h = \frac{53h}{108} = \frac{h}{2} \text{ very nearly.}$$

Hence it appears that *the pressure of the atmosphere in pounds per square inch is very nearly equal to half the column of mercury in the barometer-tube in inches.*

* Air contains 15 parts of 'neon,' and 5 parts of 'helium,' in one million volumes (*Dewar*).

INCREASE OF BULK OF AIR BY INCREASE OF TEMPERATURE.

Fahr.	Bulk.	Fahr.	Bulk.	Fahr.	Bulk.	Fahr.	Bulk.	Fahr.	Bulk.
°		°		°		°		°	
32	1000	50	1043	68	1084	85	1121	120	1194
33	1002	51	1045	69	1087	86	1123	130	1215
34	1004	52	1047	70	1089	87	1125	140	1235
35	1007	53	1050	71	1091	88	1128	150	1255
36	1009	54	1052	72	1093	89	1130	160	1275
37	1012	55	1055	73	1095	90	1132	170	1295
38	1015	56	1057	74	1097	91	1134	180	1315
39	1018	57	1059	75	1099	92	1136	190	1344
40	1021	58	1062	76	1101	93	1138	200	1364
41	1023	59	1064	77	1104	94	1140	210	1372
42	1025	60	1066	78	1106	95	1142	212	1375
43	1027	61	1069	79	1108	96	1144	302	1558
44	1030	62	1071	80	1110	97	1146	392	1739
45	1032	63	1073	81	1112	98	1148	482	1919
46	1034	64	1075	82	1114	99	1150	572	2098
47	1036	65	1077	83	1116	100	1152	680	2312
48	1038	66	1080	84	1118	110	1173		
49	1040	67	1082						

The column of mercury in the barometer in this country varies from 28 to 31 ins.; therefore the mean column is 29·5 ins.; and by the foregoing result the mean pressure of the atmosphere will be about 14·7 lbs. per square inch. The altitude or head of the atmosphere at uniform density will be that of a column of water 33·95 ft. high divided by the specific gravity of air (·0012046), or 28,183 ft. The velocity due at the foot of this head will be: $V = 8·02\sqrt{28183} = 1346·4$ ft. per second, the velocity at which the air will pass into a vacuum. The motions and effects of gases by the force of gravity are precisely the same as those of liquids. Under like conditions a conduit will discharge 30·55 times more air than water.

Rankine assumes a standard English atmosphere to be 14·704 lbs. per square inch in the latitude of London, or equal to a mercury column 29·922 ins. high at 32° F., which = 30 ins. at 57·8° F.

The metrical atmosphere, 760 mm. (29·922 ins.), at 0° C. (32° F.) = 1·0333 kilograms per square cm., or 14·6967 lbs. per square inch, at Paris, = 14·686 lbs. at New York.

To find the barometric height, H, at any other latitude, l,

$$H = 760 \times \frac{(1 + ·00531 \sin^2 48° 50')}{(1 + ·00531 \sin^2 l)} \text{ mm.},$$

where 48° 50′ is the latitude of Paris.

LIQUID AIR.

Liquid air is made by successively compressing and cooling air in a triple effect series, or more the last effect being intensified by cooling the compressed air by the expansion of a portion that is allowed to escape.

The critical temperature of liquid air, above which it cannot be liquefied, is: —90° C. (170° C. absolute), and the corresponding critical pressure is about 40 atmospheres. Its temperature at atmospheric pressure is: —191·4° C. = —312·6° F., and its colour is a light blue. Its density at —191·4° C. is 0·933 (water being 1·000), and its specific heat is 0·50.

Left to stand, liquid air loses some of its nitrogen, which evaporates at a lower temperature than oxygen.

There is not much opening for liquid air as a motive power. One pound of it stores 139,100 foot-pounds of work; whereas a pound of paraffin oil contains over 15,000,000 foot-pounds, of which 10 to 30 per cent. can be converted to power. The uses of liquid air are special. It will purify chloroform, alcohol, and ether by the elimination of impurities in the process of crystallisation, and may be used to purify ether anæsthetics, and chemicals.

Liquid air from which part of the nitrogen has evaporated will render explosive cotton, felt, powdered charcoal, and similar combustibles, because of the great amount of available oxygen brought to bear on the combustion. Powdered charcoal made into paste with the partly evaporated air is used for blasting, being rapidly filled into the shot holes and detonated. If a shot should miss fire it becomes automatically safe by evaporation in half an hour.

Liquid air can be carried in double cased tin vessels lined between with hair felt to keep out the heat. It may have useful therapeutic effects.

As much power is needed to compress air, and liquefy it, as it can possibly give back when boiled off again by heat from the atmosphere or other source. Liquid air if partly rid of its surplus nitrogen would form a useful source of impure oxygen for intense combustion in the laboratory, or special work.

When liquid air is used as a motive power it cannot give more power than that represented in the reverse operation of compression, and can only give power by receiving heat from an external source to supply that latent heat which it lost when liquefied. Liquid air in fact behaves exactly as water behaves, only it can receive its latent heat several hundred degrees below the point at which water receives it.

AIR VELOCITY AND PRESSURE.

Velocity of Air.

When air passes into an air of less density, the velocity of its passage is measured by the difference of the densities of the two.

H and h = densities of the air in inches of mercury; t = temperature (F.°) at the time of passage; and V = velocity of air in feet per second.

$$V = 1347{\cdot}4 \sqrt{\frac{H - h}{h}\left(1 + 0{\cdot}002088t\right)}.$$

Pressure against a Plane Surface moved through the Air.

P = pressure against plane. a = area of plane, in square feet. v = velocity, in feet per second.
v_1 = velocity in miles per hour.

$$P = {\cdot}00142av^2 \text{ lbs.}^* \qquad P = {\cdot}0029av_1^2 \text{ lbs.}^*$$

$P = ({\cdot}003 + {\cdot}00004q)\, av_1^2$ lbs.,† where q = ratio of sides of rectangular plate.

The quantity ·003 decreases as v_1 increases, being ·0029 for 90 miles, and ·0032 for 0 to 25 miles.

Horse-power required to move a Plane Surface against the Air.

H.P. = horse-power. a = area of plane, in square feet. v = velocity, in feet per minute.

$$H.P. = {\cdot}000,000,000,010,6av^3.$$

TABLE SHOWING HORSE-POWER CONSUMED IN MOVING A PLANE SURFACE AGAINST THE AIR.

Speed in		H.P. per Sq.Ft. of Effective Surface.	Speed in		H.P. per Sq. Ft. of Effective Surface.
Miles per Hour.	Feet per Min.		Miles per Hour.	Feet per Min.	
10	880	0·00722	50	4,400	0·903
15	1,320	0·0244	75	6,600	3·05
20	1,760	0·0514	100	8,800	7·23
25	2,200	0·110	150	13,200	24·4
30	2,640	0·195	200	17,600	57·8

As a result of tests, M. Eiffel found that, for velocities of from 60 ft. to 130 ft. per second, the resistance offered by air to a moving surface is practically proportional to the square of the velocity, although the exponent increases slightly and gradually when velocities exceeding 100 ft. per second are employed. The resistance or pressure in pounds, P, is represented by the product KSV^2, where K is a constant depending on the size and shape of the surface tested; S is the area of the surface in square feet, and V is the velocity in miles per hour. At ordinary temperatures and a barometric pressure of 760 mm., M. Eiffel found that the value of the coefficient K ranged from 0·00286 to 0·00327, the latter value being apparently a maximum attained only with large surfaces. Thus, for a circular surface of 1 sq. ft., the value of K was 0·00286, for a square surface of the same area 0·00295, and for an area of 10 sq. ft. 0·00323. He also found that the resistance of an inclined surface is practically the same as that of a normal one, when the perpendicular to the surface makes an angle less than 30° with the direction of motion. For greater angles the resistance proportionately decreases (zero at 90°). On pressure boards ranging from 25 sq. ft. to 100 sq. ft. in area, which were mounted at the top of a 50 ft. tower, Dr. T. E. Stanton found, from a large number of experiments, that the mean value of this constant was 0·0032.

Dr. Hutton deduced that the resistance of air varied as the square of the velocity nearly, and to an inclined surface as the 1·84 power of the sine × cosine.

The figure of a plane makes no appreciable difference in the resistance, but the convex surface of a hemisphere, with a surface double the base, has only half the resistance.

At high velocities the resistance becomes nearly a constant quantity.

The resistance of the air to a train of cars in a dead calm was found to be $\frac{1}{350}$ of their weight.

The velocity of a train of cars which gave a resistance of $\frac{1}{256}$ of the load with a fair wind was 34½ miles per hour, and only 27½ with an adverse wind.

* T. E. Stanton, National Physical Laboratory. † Hagen.

Flow of Air.

Weight of Air Passing Through a Nozzle.

The weight of air at atmospheric pressure passing through a properly-designed nozzle into any vacuum of not less than 8 lbs. may be calculated as follows (Leblanc) :—

W = lb. weight per hour ; A = area of nozzle neck in square inches ; T = atmospheric temperature in deg. Cent.

$$W = \frac{20330A}{\sqrt{T+273}}.$$

Air Friction.

Recent experiments on the flow of air through smooth sheet steel ducts varying in size from 12 ins. to 48 ins. in diameter, at velocities ranging from 1,000 ft. to 2,400 ft. per min., appear to show that the average value of the coefficient of friction is 0·0035.

WIND.

Impulse of Wind.

V = velocity of wind. D = direct impulse in pounds on one square foot.

$D = V^2 \times \cdot00271$, where V is in miles per hour
$D = V^2 \times \cdot00312$, where V is in knots per hour } *

Velocity in Statute Miles per Hour.	Impulse in Pounds per Square Foot.	Velocity in Knots per Hour.	Impulse in Pounds per Square Foot.	Kind of Wind.	Velocity in Statute Miles per Hour.	Impulse in Pounds per Square Foot.	Velocity in Knots per Hour.	Impulse in Pounds per Square Foot.	Kind of Wind.
1	·00271	1	·00312		22	1·31	22	1·51	
2	·0108	2	·0125	Light air.	24	1·56	24	1·80	Moderate gale.
3	·0244	3	·0281		26	1·83	26	2·11	
4	·0434	4	·0499	Light wind.	28	2·12	28	2·45	Fresh gale.
5	·0678	5	·0780		30	2·44	30	2·81	
6	·0976	6	·112	Light breeze.	32	2·78	32	3·19	
7	·133	7	·153		34	3·13	34	3·61	Strong gale.
8	·173	8	·200	Moderate	36	3·51	36	4·04	
9	·220	9	·253	breeze.	38	3·99	38	4·51	Heavy gale.
10	·271	10	·312		40	4·34	40	4·99	
11	·328	11	·378		45	5·22	45	6·32	Storm.
12	·390	12	·449	Fresh breeze.	50	6·78	50	7·80	
13	·458	13	·527		60	9·76	60	11·2	
14	·531	14	612		70	13·3	70	15·3	
15	·610	15	·702		80	17·3	80	20·0	Hurricane.
16	·694	16	·799		90	22·0	90	25·3	
17	·783	17	·902	Strong breeze.	100	27·1	100	31·2	
18	·878	18	1·01						
19	·978	19	1·13						
20	1·08	20	1·25						

Wind Velocity by Robinson Anemometer.

If

v = velocity of anemometer cups in miles per hour ; V = velocity of wind in miles per hour ;

then, $V = 2v + 4$.

Instrument fails to record velocities below 4 miles per hour.

(*W. H. Dines*, 'Report of Astronomer Royal, 1921.')

* Recent researches have shown that the constants ·00271 and ·00312 are apparently too small by about 6 per cent.

WINDMILLS.

(Contributed by Edward Butler, M.I.Mech.E.)

The driving shaft of a windmill situated on level ground should, with a tower of moderate height, be tilted *upwards* at an angle of 6° to 8°. If on a low hill with the fall against the prevailing wind the shaft is better horizontal, but when situated on a steep hill the best result will be obtained by tilting the shaft *downwards* a few degrees.

The shaft should be mounted so that the driving-wheel faces the wind in either direction, and at a height ranging from 20-25 ft. on high ground, and 50-70 ft. on low ground, and so that it is clear of buildings or trees.

The tower should, in ordinary circumstances, be of sufficient strength to hold up against a 40-mile storm with a wind pressure of 8 lbs. per sq. ft. On exposed elevations subject to wind velocities exceeding this, a windmill unless specially constructed is not suitable.

WIND ACTION.

Velocity per hour in miles.	Pressure per sq. ft. in lbs.	Description of Wind.	Action on Windmill.
5	0·125	Faint breeze . .	Will not drive.
8	0·33	Breeze . . .	Will start against light load.
10	0·5	Fresh breeze . .	Will run slowly.
15	1·125	Good wind . .	Will run steadily.
20	2·	Strong wind . .	Gives best service.
25	3·125	Very strong wind .	Maximum useful effect.
30	4·5	Gale . . .	Should be partly furled or held out of the wind.
40	8·	Storm . . .	Must be totally put out of action.
60	18·	Violent storm .	Not safe.
80	30·	Hurricane . . .	„ „
100	50·	Tornado . . .	„ „

Power of Windwheels.

The total momentum of wind is,

$$\frac{0{\cdot}08}{32} \times \text{area} \times \text{velocity}^2 = 0{\cdot}0023\ AV^2 \text{ approximately}$$

The turning moment at starting, for each vane, equals

$$0{\cdot}002\ AV^2 \cos\theta r,$$

and when in motion is

$$0{\cdot}0015\ AV^2 \cos\theta r \text{ for moderate speed,}$$

the constant ·0015 decreasing to ·0012 with increase of speed;

where A = area of vane; V = velocity of wind; $\cos\theta$ = angle to the axis of rotation; r = mean radius; 0·08 is the mean weight of one cubic foot of air. Velocity in ft. per sec. is to miles per hour as 22 is to 15.

HORSE-POWER OF WINDWHEELS.

Shaft or b.h.p. of a 4-armed wheel with cloth sails

$$= \frac{v^2 r^2}{512477}\ (\textit{Rankine}), \quad \frac{4\ Av^2}{1145833}\ (\textit{Weisbach}).$$

The brake h.p. of a multi-vaned wheel

$$= \frac{0{\cdot}6 \times 0{\cdot}78\ (D^2 - d^2) \times V^2}{33000};$$

where A = area of one vane; D = total diameter of wheel; d = clearance diameter at centre; r = radius of sail tips; V = velocity in feet per second.

A windwheel (Dutch pattern) with four cloth sails, each 24 ft. in length and 6 ft. in breadth, will develop 4-5 b.h.p. in a 20-mile wind.

Windwheels with multiple vanes have a considerable advantage in starting with low velocity winds and in slow running.

The power of a windwheel is not so great as is popularly supposed. A 16 ft. wheel, for instance, with multiple cambered steel vanes, only develops about 1 b.h.p. in a 15-mile wind, and this is reduced to less than one-half in a 10-mile wind, although increased to nearly double in a 20-mile wind.

Constructional Remarks.

According to windmill practice (old type) the wheel may have 4, 5, or 6 cloth sails of rectangular form, the length being equal to five times the breadth; but the total surface should not exceed one-third of the whole surface described by the radial arms carrying the sails. The angles of the cross bars for supporting the sails, which commence at one-seventh from the wheel centre, are usually 24°, 21°, 18°, 9°, 3°, from the plane of motion.

While more power can be gained by increasing the sail surface to more than one-half the whee area, the difficulty is such with the old practice of using cloth sails that the sail area seldom exceeds one-third and is more often reduced to one-fourth.

The angles of the sails to the plane of motion, according to Smeaton, should be 20°, 19°, 18°, 16°, 12½°, 7°; and again, to Forrester, as 24°, 21°, 18°, 14°, 9°, 3°.

In multi-vane windwheels, the vanes—either oil-soaked wood slats, or cambered steel plates of light construction and galvanised—are carried by a series of 6-8 steel or wooden arms, fixed to a steel boss. The arms are braced to an extension of the wheel boss by tension rods. The vanes are fastened to two sets of cross-bars, connecting the arms together, in sections of 8 to 15, according to wheel diameter and angle to the plane of motion; this varies from 20° to 40°, but is generally 25° in flat or cambered vanes of uniform angle. The steeper the angle the narrower the vanes, to reduce whirl resistance. For direct connected pumps the angle is steeper than for geared down pumps. Steel vanes are cambered more for rigidity than for any increased driving efficiency. There is some advantage in forming the angle to suit the radius, but is not of such consequence as with wide cloth sails. What is of more importance is for the shaft to run in well lubricated roller bearings and for the turntable to move freely so that the wheel shall be held square to a light wind.

Power Control.

In windwheels with wide cloth sails, these are furled to suit either the load or the wind. In wheels with multiple vanes the usual practice is to fit a governor-vane on one side, at a right-angle to the wheel shaft, and for the tail-vane to be swivelled to the turntable, and to be held end-on either by a spring or a weight, or, better still, by a series of weights chained together. These weights should be proportioned for the governor-vane so as to pull the turntable, and the wheel with it, partly out of the wind as soon as the velocity increases 20-25 m.p.h., and to bring round the wheel edge-on to the wind in a storm.

Wind Pumps.

The popularity of wind-driven pumps is due to the introduction of the multiple-vaned wheel and to automatic governing, in combination with light easily-erected steel towers, the average power developed ranging from 1 to 6 shaft h.p., with a wind velocity of 15 m.p.h. (22 ft. per sec.), a 20-mile wind nearly doubling this power, and a 10-mile wind generating about half the power obtained by a 15-mile wind.

In ordinary practice the pumping capacity of a wind engine, as expressed in pounds of water raised per minute by pressure-head in feet, rarely exceeds from 25 to 35 per cent. of the wheel h.p., but is influenced by wheel diameter, the angle of the vanes, and the method of transmitting the power to the plunger.

In geared-down transmissions, the wheel-shaft pinion should be situated at the side of the pump wheel, and not above or below it. This disposition reduces friction and maintains correct alignment and mesh of the cogs.

Owing to the very inadequate fly-wheel effect of a windwheel, it works at considerable disadvantage in driving single-acting pumps direct, and only less so when geared down; double-acting, or better, 3-throw single-acting pumps, oppose a more equable torque, but are impracticable for small installations. For this reason a rack or mangle transmission is peculiarly applicable to a wind-driven pump, as shown in the higher duty and efficiency in the table below.

The location of a wind pump is generally influenced more by the available water supply than from any consideration of available wind-power, the tower usually being constructed high enough—50 to 70 ft.—to clear all obstacles around for a distance of 300 to 400 ft. Under normal conditions eight hours' pumping only can generally be relied upon as a daily average; so that to make an installation successful a storage-tank or reservoir should be provided, the minimum capacity of which may with advantage equal from four to seven days' pumping, although a larger reserve is often allowed for.

TABLE SHOWING THE WORKING OF SIX SELECTED WIND ENGINES DURING TRIALS OF 150 HOURS, BY THE ROYAL AGRICULTURAL SOCIETY.

Name of Engine.	Diam. of Wheel in Feet.	Total No. of Gallons Pumped.	Total Pressure Head in Feet.	Total Revolutions of Wheel.	Total No. of Double Strokes of Pump.	Transmission.	Ratio of Wheel to Pump.	Particulars of Pumps. Diam. in Ins.	Particulars of Pumps. Stroke in Ins.	Single or Double Acting.	Average Water H.P. per Minute.
Canadian-Imperial	16	79,000	200	308,000	42,000	rack gear	5	4	22	double	·53
Henry Sykes, Ltd.	16	49,000	200	210,000	210,000	direct crank	1	2·5	8	„	·33
J. W. Titt . .	16	46,000	200	285,000	285,000	„ „	1	3·25	6·12	„	·30
Thomas & Son .	16	41,000	200	307,000	122,000	geared „	2·5	4	8	single	·275
R. Warner & Co. .	16	40,000	200	330,000	160,000	„ „	2	3·5	5	double	·268
J. W. Titt . .	16	36,000	200	230,000	88,000	„ „	2·5	4·5	8	„	·242

TABLE SHOWING PERFORMANCES OF WIND-PUMPING ENGINES, SHOWING QUANTITY IN IMPERIAL GALLONS PUMPED AGAINST A TOTAL HEAD OF 200 FEET, AS REGISTERED BY METER, PER DAY OF 10 HOURS.

Average Wind Velocity in miles per hour for each day.	Results of Two Engines with 8 ft. diameter wheels.		Results of Six Engines with 12 ft. diameter wheels.		Results of Seven Engines with 16 ft. diameter wheels.		Results of Three Engines with 20 ft. diameter wheels.		Result of Engine with 30 ft. diameter wheel.	
	Highest.	Lowest.	Highest.	Lowest.	Highest.	Lowest.	Highest.	Lowest.	Highest.	Lowest.
5	—	—	650	320	1,200	350	—	—	940	—
8	—	—	1,500	900	3,000	600	1,600	800	4,000	—
10	—	—	2,000	950	4,000	1,600	3,500	1,200	7,000	—
12	—	—	2,400	1,000	4,200	2,000	4,100	3,800	8,000	—
15	400	—	4,000	1,250	5,600	3,750	6,000	4,000	13,000	—
18	700	—	3,500	1,700	5,200	4,500	—	—	19,000	—
20	900	700	4,200	1,400	6,930	4,200	—	—	21,000	—
22	800	—	4,500	1,500	7,600	3,300	—	—	23,000	—
24	—	—	4,950	1,600	10,400	3,600	—	—	24,000	—
	CORRECTED AVERAGE CAPACITY IN GALLONS PER HOUR RAISED 50 FEET.									
15	250		1,000		1,500		2,200		5,000	

AIR COMPRESSION.

If

p = actual pressure of air in a container;
P = gauge „ „ „
v = volume of air at pressure p;
p_1 = actual pressure of air when compressed;
P_1 = gauge „ „ „
v_1 = volume of air when compressed;

then,

$$\frac{p}{p_1} = \frac{P + 14{\cdot}7}{P_1 + 14{\cdot}7} = \frac{v_1}{v},$$

the compressed air being *at the same temperature* as the air before compression—that is to say, if the heat due to the compression is allowed to become dissipated.

If the air is compressed from atmospheric pressure (i.e. if gauge pressure P = 0), then

$$\frac{14{\cdot}7}{P_1 + 14{\cdot}7} = \frac{v_1}{v},$$

or,

$$P_1 = 14{\cdot}7\frac{v - v_1}{v_1}, \qquad \text{and} \qquad v_1 = v\frac{14{\cdot}7}{P_1 + 14{\cdot}7}.$$

Example 1.—What gauge pressure (P_1) would be required to reduce 5 cub. ft. (v) of air at atmospheric pressure down to 3 cub. ft. (v_1), at the same temperature?

$$P_1 = 14{\cdot}7\,\frac{5-3}{3} = 9{\cdot}80 \text{ lbs.}$$

Example 2.—What volume (v_1) will 1 cub. ft. of air occupy when compressed to 30 lbs. gauge pressure (P_1), at the same temperature?

$$v_1 = 1\,\frac{14{\cdot}7}{30 + 14{\cdot}7} = {\cdot}329 \text{ cub. ft.}$$

If the heat is not allowed to disappear when the air is compressed, then

$$\frac{14{\cdot}7}{P_1 + 14{\cdot}7} = \left(\frac{v_1}{v}\right)^{1{\cdot}408}$$

or,

$$P_1 = 14{\cdot}7\frac{v^{1{\cdot}408} - v_1^{1{\cdot}408}}{v_1^{1{\cdot}408}}, \qquad \text{and} \qquad v_1 = v\left(\frac{14{\cdot}7}{P_1 + 14{\cdot}7}\right)^{{\cdot}7102}$$

If $P_1 = 30$, as in the case of *Example* 2, then the value of v_1 instead of being ·329, will be

$$({\cdot}329)^{{\cdot}7102} = {\cdot}454 \text{ cub. ft.}$$

AIR COMPRESSORS.

Power required to Drive Air Compressors.

The power required to drive air compressors is based on adiabatic compression of the air during each stage. It is assumed that the mechanical efficiency is 60 per cent. at 5 pounds per square inch, increasing to 80 per cent. at 40 pounds per square inch and above. It is quite usual for the best makes to attain an efficiency exceeding 90 per cent., but for general purposes it is wiser to assume the lower figure. In the case of machines of small output and low pressure, the efficiency is frequently below 50 per cent. Hence, for compressors dealing with much less than 100 cubic feet per minute, it is advisable to allow a greater horse-power than would be obtained by working to the table.

In providing a driving unit for an air compressor, the type of machine should be considered before fixing the size of the driver. Thus, the turning effort required by a single-acting, single-cylinder air compressor may vary considerably above and below the mean, and allowance must be made for this, particularly in the case of direct-coupled drives.

Horse-Power to Compress Air.

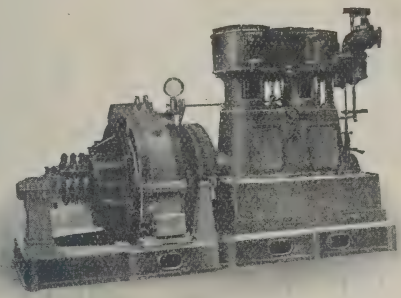
$$\left.\begin{array}{l}\text{Horse-power to compress}\\ \text{100 cu. ft. of free air per min.}\end{array}\right\} = 1{\cdot}88\ np\left\{\left(\frac{p_1}{p}\right)^{\frac{{\cdot}29}{n}} - 1\right\};$$

where,

p = initial pressure in lbs. per sq. in. (assumed at 14·7 lbs. per sq. in.);

p_1 = final pressure in lbs. per sq. in. = gauge pressure + 14·7;

n = number of stages of compression.




PETER BROTHERHOOD

LIMITED

ENGINEERS
PETERBOROUGH

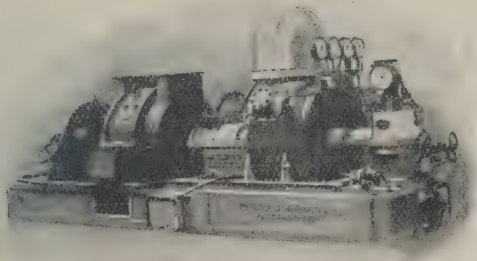Electric Generating Plant



(See also overleaf)

AIR AND GAS COMPRESSORS

(*See pages* 1077–1079)

Fans Pumps

Gas and Oil Engines

Steam Turbines

Steam Engines

Gauge Testers

(*See page* 1504)

Water Cooling Towers

Refrigerating Plant

(*See announcement facing pages* 1098, 1099)

Dynamometers

(*See page* 130)

PETER BROTHERHOOD LTD.

PETERBOROUGH

Branches—

Central House, Kingsway - - LONDON, W.C. 2

Mansfield Chambers, St. Ann's Square - MANCHESTER

Commercial Union Buildings, Pilgrim Street
NEWCASTLE-ON-TYNE

48 West Regent Street - - - - GLASGOW

The following table is derived from the foregoing formula (which assumes a mechanical efficiency of 80 per cent. for all pressures above 40 lbs. per sq. in.)

TABLE OF AIR COMPRESSION.

Single-Stage.		Two-Stage.		Three-Stage.	
Gauge Pressure in Lbs. per Sq. In.	Horse-Power to Compress 100 cu. ft. Free Air per Min.	Gauge Pressure in Lbs. per Sq. In.	Horse-Power to Compress 100 cu. ft. Free Air per Min.	Gauge Pressure in Lbs. per Sq. In.	Horse-Power to Compress 100 cu. ft. Free Air per Min.
5	3·25	60	14·7	100	18·27
10	5·6	65	15·36	105	18·77
15	7·1	70	16·0	110	19·2
20	8·3	75	16·6	115	19·6
25	9·8	80	17·15	120	19·94
30	11·2	85	17·7	130	20·6
35	12·0	90	18·2	140	21·24
40	12·81	95	18·7	150	21·86
45	13·85	100	19·2	160	22·46
50	14·84	105	19·65	170	23·04
55	15·78	110	20·15	180	23·58
60	16·67	115	20·6	190	24·1
65	17·5	120	21·0	200	24·6
70	18·3	130	21·75	250	26·75
75	19·07	140	22·5	300	28·65
80	19·82	150	23·2	350	30·25
85	20·55	160	23·9	400	31·65
90	21·25	170	24·5	450	32·9
95	21·85	180	25·1	500	34·1
100	22·50	190	25·7	600	36·1
105	23·15	200	26·3	700	37·8
110	23·75	250	28·8	800	39·4
115	24·35	300	30·9	900	40·8
120	24·9	350	32·8	1,000	42·2
		400	24·5	1,200	44·2
		450	36·0	1,400	46·0
		500	37·4	1,600	47·7
				1,800	49·2
				2,000	50·6

(R. A. Sturgeon.)

DESIGN OF AIR COMPRESSORS.

The best practice adopted in the design of air compressors is as follows:—The maximum terminal pressures are, for one stage, 80 lbs. to 100 lbs. per sq. in.; two stages, 600 lbs. per sq. in.; three stages, 1,500 lbs. per sq. in.; four stages, 2,500 lbs. to 3,000 lbs. per sq. in.; five stages, 4,500 lbs. per sq. in.; and above 4,500 lbs. per sq. in., six or seven stages to 6,000 lbs. per sq. in., which is about the highest pressure for which an air compressor has been constructed. In the case of very small machines these pressures, for a given number of stages, are often exceeded in order to reduce complication. For example, machines have been constructed and work quite satisfactorily when compressing to 2,500 lbs. per sq. in. in two stages. The temperatures attained, however, make it necessary to carry out the cylinder lubrication by soapy water.

(J. M. Ford, in a paper read before the Greenock Association of Shipbuilders and Engineers.)

BROTHERHOOD AIR COMPRESSORS FOR MODERATE PRESSURES.

(Peter Brotherhood, Ltd., Peterborough.)

These compressors are made in two general classes, the first being of the single-acting type with trunk pistons, employed where a small output and an inexpensive machine is required, and lubricated automatically. The second embodies a wide range of forced lubrication double-acting compressors, for one or two stages, and capacities up to 5,000 cub. ft. of free air per minute.

The valves (which are a source of trouble in air compressors) are of the Brotherhood Mesta type, fig. 1, which combines small lift and light weight with corresponding avoidance of hammering and wear of seats; they will operate at speed up to 700 revs. per minute without noise or wear, and reduce wire drawing to a minimum. They are fitted in both single and double-acting machines.

The general construction of the double-acting compressors is shown in fig. 2, which illustrates a two-stage steam-driven machine of 600 cub. ft. capacity. The design follows generally that of the Brotherhood high-speed engines, forced lubrication being supplied at high pressure to all bearing surfaces, by a valveless pump.

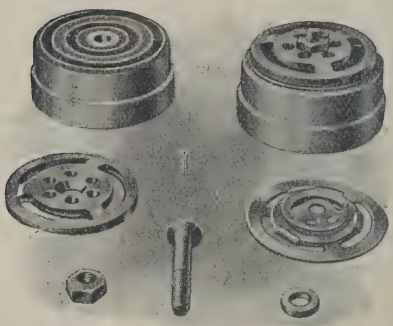


FIG. 1.

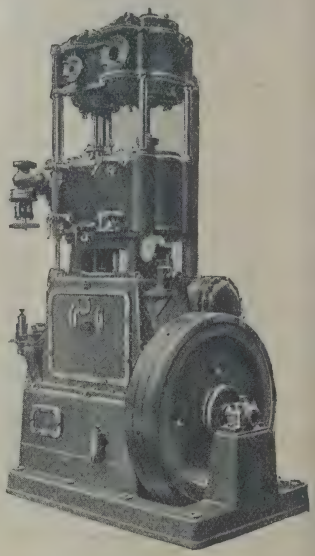


FIG. 2.

The governing combines control of the air intake and of steam admission, thereby regulating the output of the compressor exactly to requirements.

Intercooling in the two-stage types is effected by a straight tube intercooler, easily accessible for cleaning.

For belt or motor-driven compressors a constant speed form of governor is employed, allowing the machine to run without load when the pressure in the reservoir reaches its required point.

The double-acting compressors are of single and two-crank types: the former for motor or belt-driving, either simple or tandem compound, and for steam driving, either simple or annulus compound; in the latter, two-cylinder simple or compound is used for either steam, belt, or motor driving.

BROTHERHOOD HIGH-PRESSURE COMPRESSORS FOR AIR OR GAS.

(Peter Brotherhood, Ltd., Peterborough.)

Air and gas storage, liquifying, etc., demand pressures higher than are possible with compressors of ordinary design. Brotherhood high-pressure compressors are made for multi-stage working, and are designed to meet the widely-varying requirements met with in high-pressure work.

Two examples are illustrated. Fig. 3 shows a three-stage belt-driven oxygen compressor of a capacity of 3,500 cub. ft. per hour, and compressing to 250 atmospheres. The compressing cylinders and intercooling coils are carried in an open water tank, and all valves and plungers are removable without breaking pipe connections.

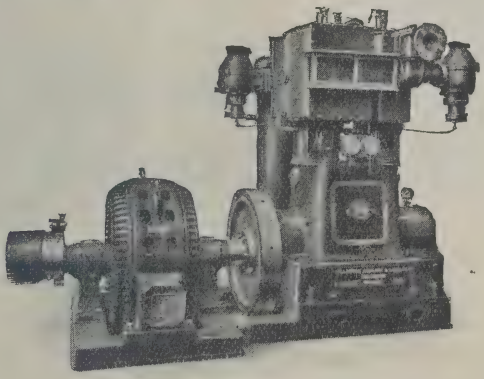
FULLERTON, HODGART & BARCLAY, LTD

PAISLEY

Codes:
A B C 5th Edit.
Engineering
Western Union
Marconi Inter.

Telephones:
2163-4 Paisley
(Private Branch Exchange)
Telegrams:
"Vulcan, Paisley"

AIR COMPRESSORS



Special Features:

High Efficiency; Economy in Maintenance and Running; Simplicity of Design; Accessibility of all Working Parts; Patent Automatic Plate Type Air Valve; Patent Unloading System; Smooth Running at High Revolutions. All sizes of Compressors from 50 to 10,000 cubic feet capacity.

FULL PARTICULARS ON APPLICATION

Estd. 1838.

F. 1078

FULLERTON, HODGART, & BARCLAY, LTD

PAISLEY

Codes:
A B C 5th Edit.
Engineering
Western Union
Marconi Inter.

Telephones:
2163-4 Paisley
(Private Branch Exchange)
Telegrams:
'Vulcan, Paisley'

Makers of

Hydraulic Pumps

COMPACT AND ACCESSIBLE

Patent Evaporators

Winding Engines

AND

Air Compressors

Reconstruction of Existing Plants

We also specialise in

Hydraulic Cargo Gear

AND

Hydraulic Steering Gear

Illustrated Lists on application

Estd. 1838

F. 1079

The cylinders and low-pressure plungers are made of bronze, and the high-pressure plunger of special rustless alloy which acquires a glass-like surface in working.

The packings are of segmental metallic type of special design, superseding the fibre and other soft packings which cause so much trouble by friction and wear.

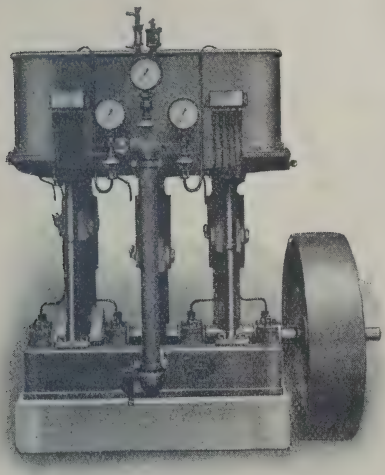


FIG. 3.

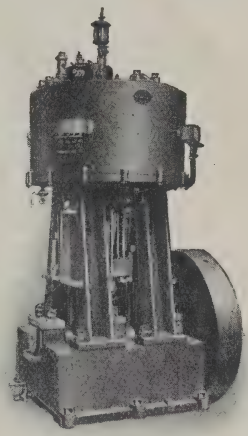


FIG. 4.

The internal lubrication of these high-pressure compressors can be widely varied to suit requirements of gases of various types ; water without other lubrication can be used where necessary.

Fig. 4 shows a compressor made for working to a pressure of 400 atmospheres, about 2½ tons per sq. in. Six stages of compression are employed, the barrels with the intercooling coils being in a closed tank, as shown. This is probably the highest pressure of air attained in a machine of considerable capacity and capable of running for extended periods.

THE 'FULLERTON' PATENT AIR COMPRESSOR.

(Fullerton, Hodgart & Barclay Ltd., Vulcan Works, Paisley.)

In this compressor the lower crank case, upper crank case, and crosshead guides and soleplate are all constructed from the point of view of rigidity.

The trunk guides being cast in one piece with the distance piece, and the top part of the latter forming the bottom cover for the cylinder, ensures the perfect alignment throughout the whole working parts. The distance piece is so arranged that the rod in contact with the crank chamber never comes into contact with the cylinder gland, therefore avoiding oil being carried into the cylinder from the piston rods. Large openings are provided to enable the packing glands and wyper glands to be easily accessible

A vertical tubular intercooler is fitted behind the air compressor. The tubes and baffle plates are so arranged that the most effective use of the cooling surface may be obtained. The tubes are arranged so that in the event of damage they can be removed in a minimum of time.

The air cylinders are constructed of a special mixture of hard close-grained cast iron, water jackets being embodied in the walls of the cylinder for the cooling water, which also passes through the end cover jackets.

WESTINGHOUSE THREE-STAGE AIR COMPRESSOR.

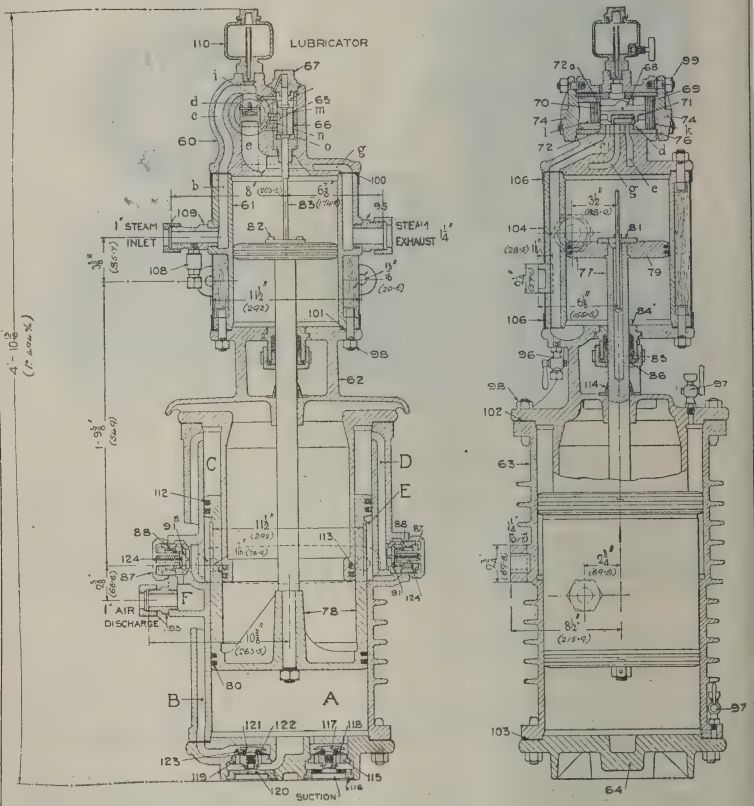


FIG. 5.

A special feature is the type of valve employed. These are of a patent strip plate type, and are rectangular in form. The plates are made of special tough steel having a very high elastic limit. The valve is such that for a given port area the absolute minimum weight of valve possible is obtained, there being no metal in the valve other than that required to cover the port. Each valve weighs only about 1 oz. Owing to its shape it is possible to obtain the maximum of port area in minimum space, which allows the valves being placed against the cylinder walls and so dispensing with large valve ports, thus giving an attendant gain in efficiency. The inlet valves are on the opposite side of the cylinder to the outlet valves, thus obviating the incoming air having to pass through the heated walls of the port before admission to the cylinder.

Owing to the arrangement of the valves on the cylinder walls, the valve chest covers giving access to the valves are of very small dimensions, so that they can be handled by one man. A valve can be inspected and replaced in half an hour.

Forced lubrication supplied by a valveless pump worked from the eccentric of the crankshaft is fitted for the lubrication of all the reciprocating parts, namely, main bearings, crank pins, crosshead pins, etc. The oil is collected in the bottom of the crank casing and taken through an oil strainer back into the oil pump and used over again. Very little lubricant is required on the air cylinders, and a drop sight feed lubricator is fitted on the H.P. and L.P. cylinders. This has been found by practice to be quite sufficient for the air cylinders.

Westinghouse Air Compressors.

The valve motion of the Westinghouse type of steam-driven air compressor is simple and compact, being entirely in the tophead, and all its parts are so arranged as to readily permit of examination or replacement. Should repairs to the valve mechanism be necessary, the tophead can be quickly removed and replaced by another, so that no unnecessary delay need occur through the pump being out of service, pending repair. The air valves are contained in separate cases, so placed that they can readily be taken out.

The pumps are arranged vertically, and consist of a steam cylinder connected by a centre-piece to an air cylinder, or air cylinders, for either simple, compound, or three-stage compression. The three-stage compressor (fig. 5, p. 1080) is so constructed that air for compression is inhaled only on the upstroke of the piston, whilst on the downward stroke air at atmospheric pressure is drawn into and circulates around the inner walls of the cylinder and piston, to be again expelled on the succeeding upstroke; thus a supply of cool air is drawn into the interior of the pump at every alternate stroke, and the pump is air-cooled internally as well as externally; the result being that air compressed up to 300 lbs. per square inch is delivered at a temperature not exceeding 266°F., rendering the employment of water-cooling jackets unnecessary with this type of compressor.

For service on electric railways, the Westinghouse Brake & Saxby Signal Co., Ltd., manufacture an air compressor driven direct by special slow-speed electric motor, and for industrial purposes a similar type of compressor for operation by either electricity or belt.

Belliss High-speed Forced-lubricated Compressor.

(Belliss & Morcom Ltd., Birmingham.)

This type of compressor, fig. 6, page 1082, embodies the best features of the Belliss engine, including the system of forced lubrication originated by the firm in 1890 (see Section XXIX, Part IV). The working parts are generally the same as those of the 'C' type engine, Section XXIX, Part IV. The air cylinders are water-jacketed and two-stage, as desirable for pressures in excess of 60 lbs. per sq. in., except in the case of quite small compressors.

The compressor shown is adapted for being directly connected to an electric motor or for rope or belt driving. When operated at constant speed the air supply is controlled by an automatic valve on the inlet as shown, the valve being of the equilibrium double-beat type and controlled by an air relay, so designed that on the air pressure exceeding the intended pressure by 3 to 5 per cent. the air supply is cut off entirely, the pistons running *in vacuo* until the demand again causes the pressure to fall. As the air supply is not throttled the system is a highly efficient one. Special tests have demonstrated that the power required to run the compressor light may be only 6 per cent. of the full power, and under 9 per cent. for the compressor and motor combined.

One of the chief points in the design of these compressors is the air valves. These are of the Rogler-Hoerbiger patent thin plate type (fig. 7, page 1082), devised as the result of experience gained

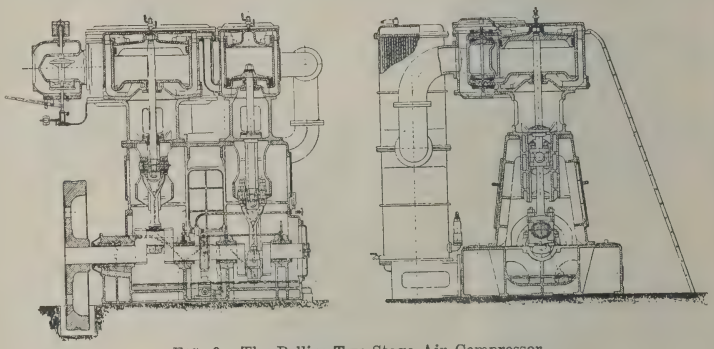


FIG. 6.—The Belliss Two-Stage Air Compressor.

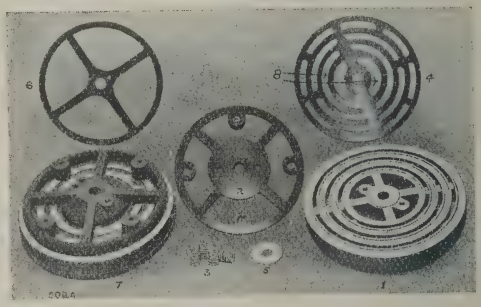


FIG. 7.—Details of Valve as used in Belliss Compressors.


ESTAB. 1852.

BELLISS & MORCOM L^TD

BIRMINGHAM.


For
Shipyards,
Collieries,
Mines,
Engineering Works, etc.

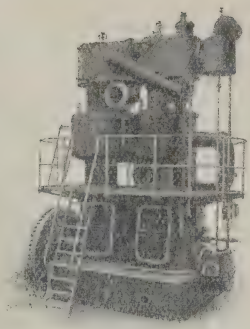Made in Standard Sizes
up to
12,000 cu. ft.



Steam-Driven Air Compressor.

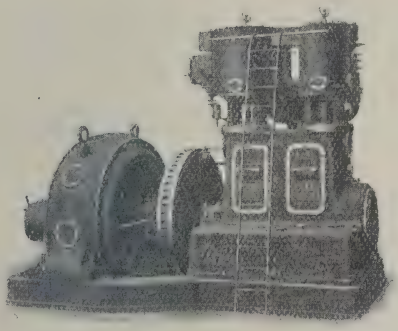AIR COMPRESSORS



Motor-Driven Air Compressor.

Steam-Driven
by
Engine or Turbine,
Motor-Driven,
or by
Rope or Belt.

MORE THAN 1,400 PLANTS SUPPLIED,
approximating 1,500,000 cu. ft.

CROSBY LOCKWOOD & SON'S PUBLICATIONS.

BOILERS, ECONOMISERS AND SUPERHEATERS : THEIR HEATING POWER AND EFFICIENCY. By ROBERT H. SMITH, Assoc.M.I.C.E., M.I.M.E., M.I.E.E., Em. Prof. of Engineering. 128 pages, with Illustrations. Demy 8vo, cloth. 9*s.* net.

MODERN STEAM BOILERS : THE LANCASHIRE BOILER. A Practical Manual for Owners and Users of Lancashire Boilers. By W. D. WANSBROUGH, Author of 'The A.B.C. of Differential Calculus,' 'The Portable Steam Engine.' 168 pp. with 117 Illustrations. Demy 8vo. 6*s.* net.

LIQUID FUELS FOR INTERNAL COMBUSTION ENGINES. A Manual for Engineers, Designers, Chemists, etc. By H. MOORE, M.Sc. Tech., F.C.S., etc. About 200 pp., with numerous Illustrations. Demy 8vo, cloth. 15*s.* net.

STEAM BOILER CONSTRUCTION. A Practical Handbook for Engineers, Boiler Makers, and Steam Users. By W. S. HUTTON. Fifth Edition. Revised and Enlarged. 680 pages, 500 Illustrations. Medium 8vo. 21*s.* net.

THE APPLICATION OF HIGHLY SUPERHEATED STEAM TO LOCOMOTIVES. Being a Reprint from a series of Articles appearing in *The Engineer*. By ROBERT GARBE, Privy Councillor, Prussian State Railways. Edited by LESLIE S. ROBERTSON, M.Inst.C.E., etc. Medium 8vo. 9*s.* net.

THE PRACTICAL ENGINEER'S HANDBOOK. A Treatise on Modern Engines and Boilers, Marine, Locomotive, and Stationary. By W. S. HUTTON, Seventh Edition. Revised and Enlarged. Medium 8vo. 560 pages, 420 Illustrations. 21*s.* net.

TABLES, MEMORANDA, AND CALCULATED RESULTS FOR MECHANICS, ENGINEERS, ARCHITECTS, BUILDERS, SURVEYORS, etc. Selected and arranged by FRANCIS SMITH. Seventh Edition, revised, including ELECTRICAL TABLES AND FORMULÆ. 280 pages, waistcoat-pocket size. *New edition in preparation.*

STEAM ENGINEERING IN THEORY AND PRACTICE. By GARDNER D. HISCOX, M.E. With Chapters on Electrical Engineering by NEWTON HARRISON, E.E. 450 pages, 400 Illustrations. Medium 8vo. 21*s.* net.

STEAM ENGINE INDICATORS AND VALVE GEARS. By L. V. LUDY, Professor of Steam and Gas Engineering, University of Wisconsin. 180 pp., 150 Illustrations. 6*s.* 6*d.* net.

MECHANICAL HANDLING AND STORING OF MATERIAL. A Treatise on the Handling and Storing of Material such as Coal, Ore, Timber, etc., by Automatic or Semi-Automatic Machinery, together with the Various Accessories used in the Manipulation of such Plant, and dealing fully with the Handling, Storing, and Warehousing of Grain and Coal. By G. F. ZIMMER, A.M.Inst. C.E. 750 pp., royal 8vo, cloth, with over 1,000 Illustrations (including Folding Plates) specially prepared for the Work. 50*s.* net.

LONDON: CROSBY LOCKWOOD & SON,
7 Stationers' Hall Court, E.C. 4.

during the construction of the Simplon Tunnel, and which have come to be recognised as one of the best types of valves for air compressors. The valves consist of light discs of tempered steel, perforated to give a multiple opening and falling on a cast-iron grid with suitable cushion and guard plates above. These valves are very reliable, noiseless in action, and a minimum amount of power is lost in operating them.

The Bellis compressors are also made with self-contained steam cylinders, controlled by the makers' patent relay type air governor, designed to vary the speed of the compressor in accordance with the demand for air, there being also a centrifugal governor directly connected to the crankshaft to prevent the speed under any conditions exceeding a predetermined maximum.

Air-Compressor Lubrication.

An oil suitable for air-compressors should always be highly filtered, because such oil will have a minimum tendency to form carbon deposits. Oil compounded with vegetable or animal oils are quite unsuitable for air cylinders.

Use only a straight-run, highly filtered, pure mineral oil of the lowest natural flash test consistent with the viscosity necessary to lubricate the cylinders and provide a proper piston seal.

The correct viscosities (worked out by the members of the Compressed Air Society, U.S.A., all of whom are builders of air-compressors) are given in the following tables, showing the proper specifications for both paraffin and asphaltic oils of various viscosities.

Physical Tests of Paraffin-base Oils.

	Minimum.	Average.	Maximum.
Gravity, Baumé	28–32 deg.	25–30 deg.	25–27 deg.
Flash point, open cup	375–400 deg. F.	400–425 deg. F.	425–500 deg. F.
Fire	425–450 deg. F.	450–475 deg. F.	475–575 deg. F.
Viscosity (Saybolt) at 100 deg. F.	120–180 sec.	230–315 sec.	up to 1,500 secs.
Colour	Yellowish	Reddish	Dark red to green
Congealing point (pour test)	20–25 deg. F.	30 deg. F.	35–45 deg. F.

Physical Tests of Asphaltic Base Oils.

	Minimum.	Average.	Maximum.
Gravity, Baumé	20–22 deg.	19·8–21 deg.	19·5–20·5 deg.
Flash point, open cup	305–325 deg. F.	315–335 deg. F.	330–375 deg. F.
Fire	360–380 deg. F.	370–400 deg. F.	385–400 deg. F.
Viscosity (Saybolt) at 100 deg. F.	175–225 sec.	275–325 sec.	475–750 sec.
Colour	Pale yellow	Pale yellow	Pale yellow
Congealing point (pour test)	0 deg. F.	0 deg. F.	0 deg. F.

(W. F. Osborne, 'Power.')

VACUUM PUMPS.

The Bailey Patent Slide Valve 'Dry' Vacuum Pump.

In the 'K' Vacuum Pump (*W. H. Bailey & Co. Ltd., Manchester*), the slide-valve is without a stuffing-box, and the spring delivery valve is not carried by the slide-valve but works vertically on a stationary seat, easily accessible even when the machine is running. By this arrangement the slide-valve does not run in the interior of the valve chest, but on the outside of it, and is consequently, easy to fit and adjust; it has no stuffing-box to its spindle.

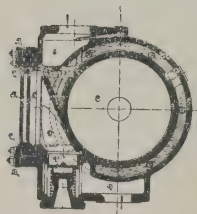


Fig. 8.

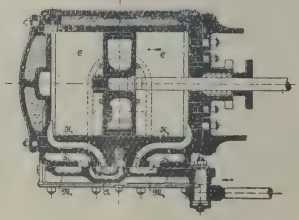


Fig. 9.

Fig. 8 shows a transverse section, and fig. 9 a longitudinal section of the standard air cylinder of the 'K' pump. The cylinder and back covers are water-jacketed, the front cover is cast in one with the cylinder and a joint between the cylinder and the frame is avoided. In the larger sizes the front cover is water-jacketed.

The action of the valve is as follows:—

The air or gases enter by the suction pipe S and pass to the spaces S1 and S2. In fig. 9 the piston is passing towards the left-hand side and draws air into the cylinder from S2 through the space M2 and the port K2. At the same time it discharges the air drawn in during the preceding stroke by K1, P, and D, the slide-valve being set in relation to the crank so that the spaces S1 or S2 and D are put into communication at the right moment with the corresponding ends of the cylinder. Besides the ports M1 and M2, through which the gases pass into the cylinder, and the port P1 through which they are discharged, the slide-valve has a compensating or equalising port A which communicates between the discharge side of the piston and the suction side, thus equalising the pressure. When the piston has reached the dead point this port opens, for an instant of time, the communication between the two sides of the piston, the cylinder being cut off from the inlet and outlet by the slide-valve. The tension or pressure in the clearance space is thus reduced almost to the suction tension or pressure, and the piston can now draw air in much sooner, the effective suction stroke or volumetric efficiency being thereby increased. In addition to the slide-valve there is a spring valve V. The slide-valve governs the beginning and the end of both suction and discharge strokes. The spring valve has no effect on the volumetric efficiency of the pump, as without it the same volume would be drawn in, but it is necessary in order to reduce the power required to drive to the lowest possible limit. The slide-valve opens the suction and discharge at the beginning of each stroke and closes at the dead point, so that the pump can be used for any degree of vacuum. The opening of the discharge port at a time when the air or gases are not yet compressed to atmospheric pressure would permit the air in the discharge pipe to flow back into the cylinder, causing back pressure and loss of power. The spring valve prevents this, as it separates the external air from the cylinder and prevents it from entering the cylinder when the slide-valve opens the discharge. When the air or gases in the cylinder are compressed to atmospheric pressure the spring valve opens automatically and the discharge commences. The influence of the spring valve therefore

All persons interested in

Engineering & Technical Literature

should consult

CROSBY LOCKWOOD & SON'S

CATALOGUE OF STANDARD BOOKS

which contains a large selection of the most recent works on

CIVIL ENGINEERING . . .
MECHANICAL ENGINEERING
ELECTRICAL ENGINEERING
MARINE ENGINEERING . .
MINING AND METALLURGY,

&c., &c.

---

7 Stationer's Hall Court, Ludgate Hill, London, E.C.4.

F. 1084

Lamson

Pneumatic Despatch Tubes

and

Mechanical Message Carriers

FOR transmission of Documents, Telegrams, Cash, small parts and lightweight matter.

Lamson Pneumatic Despatch Tubes are used extensively by the Admiralty and War Office. The Post Office are large users of the Automatic 'Pick-up' — another Lamson Carrier which collects and distributes correspondence, telegrams, &c., with almost human ingenuity

For over 30 years we have specialised solely in Apparatus for carrying and distributing money, papers and light matter, and solicit an opportunity of quoting for an efficient and economical Message Carrier System for Office, Factory or Warehouse.

GRAVITY & MECHANICAL CONVEYERS.

Lamson

PNEUMATIC TUBE COMPANY, Ltd.,
20 CHEAPSIDE, LONDON, E.C. 2.

PARIS, SYDNEY, MELBOURNE, BRISBANE, ADELAIDE, PERTH, WELLINGTON, JOHANNESBURG.

only affects the power for driving as previously stated; it works vertically, is always accessible even when the machine is running, and is noiseless.

The single type pumps will maintain a vacuum of over 29·8 ins. of mercury when exhausting from a closed vessel. When a higher vacuum is necessary, the Bailey Double Vacuum Pump is recommended. This pump will maintain a vacuum of over 29·95 ins. of mercury at normal temperature and with a barometric pressure of 30 ins.

These pumps are particularly suitable as air pumps for condensers for steam engines, central condensation plants, cooling towers, condensers for evaporating plants, vacuum drying plants, distillers, filtering plants, etc.

PNEUMATIC DESPATCH TUBES.

Tubes.

The tubes used in the Pneumatic Despatch Service (telegrams only) of the British Post Office are 3, 2¼ and 1½ inches in diameter, the 2¼-inch being the size in most general use. The tubes are manufactured in lengths of about 28 feet. The tubes are of lead, and are enclosed in cast-iron pipes for mechanical protection. Each length of lead pipe is laid in a wooden trough as soon as manufactured, so that it may be handled without fear of bending. A tightly fitting polished steel 'mandril,' 1 foot long, and of the exact gauge of the tube, attached to a strong chain, and lubricated with soft soap, is then drawn through the entire length of the tube. This operation insures the tube being smooth, cylindrical, and uniform throughout. The jointing of the lead tubes is effected as follows: Previous to the placing of the tubes in the trench, a strong chain is passed through it, and a polished steel mandril, 6 inches long and slightly less in diameter than the diameter of the tube, is heated and attached to the chain, and pushed half its length into the end of the tube already laid; the new length of tube is then forced over the projecting end of the mandril until the tube ends (which have been previously cut flat) butt perfectly together; a plumber's wipe joint is then made. By this means the tube is made perfectly air tight, and the mandril keeps the surface of the tube under the joint as smooth as at any other part of its length. After the joint has been completed, the mandril is drawn out by the chain attached to it, the next length is drawn on and the process repeated.

Carriers.

The carriers in which the messages are placed consist of a cylindrical tube of gutta-percha covered with felt: a 'skirt' projects beyond the open end of the carrier. The pressure behind causes the skirt to expand until it exactly fits the tube and thus prevents the air leaking past. The front of the carrier is provided with a buffer or piston, formed of several discs of felt, which exactly fits the tube. To prevent the messages getting out of the carrier, the end is closed by an elastic band, which can be stretched sufficiently to allow the messages to be put in.

The length, over all, of a carrier for a 2¼-inch tube is 6¾ inches; the inside measurements of the gutta-percha tube or message holder being—length 4⅞ inches, diameter 1¼ inches. The weight of such a carrier when empty is a little over 3 ounces.

The 3- and 2¼-inch carriers will, on the average, take 65 and 25 messages respectively.

The speed of the carrier may be roughly stated to range from 20 to 30 miles an hour for tubes not exceeding a mile in length.

Working Pressure and Vacuum.

The standard pressure is 10 lbs. per sq. in., and the standard vacuum 6½ lbs. per sq. in

For a given effective pressure, carriers travel most rapidly in pressure tubes when the air supply is *intermittent*, i.e. when the message tube is only connected with the compressed air mains during such times as carriers are actually traversing the tubes. The reason of this is, that the compressed air with which the portion of the tube in front of the carrier is full, and which has to be displaced by the advancing carrier, weighs more than the uncompressed air, and consequently requires a greater amount of power to move it. The difference in the two cases is, however, not great, but the higher the pressure the greater is the difference in speed due to this cause. With 6 lbs. pressure, the carrier takes only 3 per cent. longer time with continuous than with intermittent working, whilst with 14 lbs. pressure it takes nearly 6 per cent. longer time.

In the case of carriers propelled by the exhaustion of the air, if the exhaustion is not commenced until the carrier is inserted at the further end, then the carrier commences to move as soon as the exhaustion at that end reaches a few ounces only, and the full exhaustion effect is not felt until the carrier has been moving for some time. When, however, the exhaustion is continuous the carrier on its insertion practically starts off under the full pressure: hence its speed is greater than in the first case. The continuous system of vacuum working, where one tube

is used for the 'up' traffic (i.e. the traffic from the distant to the central or 'power' station) only, is easily effected, whether the traffic is heavy or light; but the intermittent system for the 'down,' or pressure working, which, as pointed out, gives the greatest speed, cannot always be followed out, as during the busy hours of the day the carriers have to be despatched in such quick succession that the current of air in the tube is practically continuous.

Power Required to Work Tubes.

The actual power required for working *continuously* the tubes at a pressure of 10 lbs. per square inch (the standard pressure) is, theoretically, 3·35 horse-power for a 2¼-inch tube 1 mile long; but in practice 50 per cent. requires to be added to allow for losses from various causes, i.e. the actual horse-power should be 5. With 10 lbs. pressure the time occupied in the transit of a carrier through a tube 1 mile long is 2½ minutes.

In order to neutralise the intermittent action of the pumps, and insure a uniform flow of air, reservoirs or 'containers' are provided. These are arranged to have sufficient capacity to give out a reserve supply when the load on the tubes becomes abnormal, as occasionally happens.

For a given transit time the actual horse-power required is much less in the case of vacuum than in the case of pressure working. Thus, for example, the transit time for 10 lbs. pressure is the same as for 6½ lbs. vacuum, but the horse-power required in the two cases would be as 1·83 to 1. Inasmuch, however, as the tubes cannot practically be worked only by vacuum, the calculations for transit time and horse-power must be based on pressure working. The actual power

Table I.—Volume of Tubes.

Length in Yards.	1½ inch.	2¼ inch.	3 inch.
	Volume in Cubic Feet.	Volume in Cubic Feet.	Volume in Cubic Feet.
200	7·380	16·570	29·455
250	9·225	20·710	36·820
300	11·070	24·850	44·185
350	12·915	28·990	51·540
400	14·760	33·130	58·900
450	16·605	37·275	66·265
500	18·450	41·420	73·630
600	22·140	49·700	88·355
700	25·830	57·995	103·100
800	29·520	66·270	117·800
900	33·210	74·550	132·550
1,000	36·900	82·830	147·300
1,250	46·125	103·550	184·100
1,500	55·350	124·250	220·900
1,750	64·570	145·000	257·750
2,000	73·800	165·700	294·600
2,250	83·020	186·400	331·400
2,500	92·250	207·100	368·200
2,750	101·500	227·800	405·000
3,050	110·700	248·500	441·850
3,250	119·950	269·250	478·700
3,500	129·150	289·900	515·400

TABLE II.—HORSE-POWER REQUIRED TO COMPRESS 1,000 CUBIC FEET OF FREE AIR PER MINUTE TO VARIOUS PRESSURES.

Lbs.	H.P.	Lbs.	H.P.	Lbs.	H.P.
0·25	1·09	5·25	25·45	10·25	53·41
0·50	2·20	5·50	26·77	10·50	54·89
0·75	3·33	5·75	28·10	10·75	56·37
1·00	4·47	6·00	29·44	11·00	57·85
1·25	5·61	6·25	30·79	11·25	59·35
1·50	6·77	6·50	32·15	11·50	60·85
1·75	7·94	6·75	33·52	11·75	62·35
2·00	9·13	7·00	34·88	12·00	63·87
2·25	10·32	7·25	36·27	12·25	65·38
2·50	11·53	7·50	37·65	12·50	66·91
2·75	12·74	7·75	39·05	12·75	68·43
3·00	13·97	8·00	40·48	13·00	69·97
3·25	15·20	8·25	41·86	13·25	71·52
3·50	16·45	8·50	43·28	13·50	73·06
3·75	17·70	8·75	44·71	13·75	74·62
4·00	18·97	9·00	46·14	14·00	76·18
4·25	20·25	9·25	47·58	14·25	77·74
4·50	21·54	9·50	49·03	14·50	79·32
4·75	22·83	9·75	50·48	14·75	80·89
5·00	24·14	10·00	51·94		

necessary must be largely governed by local conditions, and no definite rule can be laid down. The power required to work any tube or number of tubes is usually computed, however, on the estimated traffic in carriers per hour which each tube is required to carry. This figure multiplied into the volume of the tube (*vide* Table I.) and divided by 60 gives the volume of air swept out per minute (if there is a number of tubes the figures are of course aggregated), and this affords the capacity of the pump at the required pressure. From Table II. the horse-power for 1,000 cubic feet per minute at any particular pressure may be ascertained.

PUMPING MACHINERY.

The air compressors used for this system are driven by electric motors, oil, steam, or gas engines, and are provided according to the present standard practice with one or more cylinders arranged to draw from the vacuum container and compress the air thus drawn into the pressure container. Automatically controlled auxiliary valves are interposed in the inlet and delivery mains of the pump. They are controlled pneumatically by means of a by-pass connection with the pressure container in such manner that if (*a*) the pressure in the pressure container is low and the vacuum in the vacuum container high, so that the pump is deprived of air to compress, the auxiliary inlet valve on the vacuum main opens to atmosphere and admits free air for compression until the pressure in the pressure container is restored, when the valve shuts. On the other hand, (*b*) if the vacuum is low and the pressure is high, so that the pump would have to discharge against considerable back pressure the air it exhausts from the vacuum container, the auxiliary valve in the pressure main opens to atmosphere until the vacuum is restored. A non-return valve on the container side of each auxiliary valve prevents the loss of pressure or vacuum whilst either auxiliary is open to atmosphere. This system, besides economising in plant and space, absorbs and utilises certain losses which are inevitable with independent pumping for both services.

TRANSIT TIME.

Table III. enables the transit time for any diameter and length of tube at any pressure to be calculated, and from Table IV. can be ascertained the pressure required to drive a carrier

III.—Tables for calculating Time of Transit of a Carrier through a Tube.

Formula: $t = \cdot00872\sqrt{l^3} \times \frac{1}{\sqrt{P}} \times \frac{1}{\sqrt{d}} = A \times B \times C$ secs.

$A = \cdot00872\sqrt{l^3}$.

l	A	l	A	l	A	l	A	l	A
Yds.		Yds.		Yds.		Yds.		Yds.	
50	3·08	1,050	297	2,050	809	3,050	1,470	4,050	2,250
100	8·72	1,100	318	2,100	839	3,100	1,510	4,100	2,290
150	16·0	1,150	340	2,150	869	3,150	1,540	4,150	2,330
200	24·7	1,200	362	2,200	900	3,200	1,580	4,200	2,370
250	34·5	1,250	385	2,250	931	3,250	1,620	4,250	2,420
300	45·3	1,300	409	2,300	962	3,300	1,650	4,300	2,460
350	57·1	1,350	433	2,350	993	3,350	1,690	4,350	2,500
400	69·8	1,400	457	2,400	1,030	3,400	1,730	4,400	2,550
450	83·2	1,450	482	2,450	1,060	3,450	1,770	4,450	2,590
500	97·5	1,500	507	2,500	1,090	3,500	1,810	4,500	2,630
550	112	1,550	532	2,550	1,120	3,550	1,840	4,550	2,680
600	128	1,600	558	2,600	1,160	3,600	1,880	4,600	2,720
650	144	1,650	584	2,650	1,190	3,650	1,920	4,650	2,770
700	161	1,700	611	2,700	1,220	3,700	1,960	4,700	2,810
750	179	1,750	638	2,750	1,260	3,750	2,000	4,750	2,850
800	197	1,800	666	2,800	1,290	3,800	2,040	4,800	2,900
850	216	1,850	694	2,850	1,330	3,850	2,080	4,850	2,950
900	235	1,900	722	2,900	1,360	3,900	2,120	4,900	2,990
950	255	1,950	751	2,950	1,400	3,950	2,170	4,950	3,040
1,000	276	2,000	780	3,000	1,430	4,000	2,210	5,000	3,080

$B = \frac{1}{\sqrt{P}}$.

P	B	P	B	P	B	P	B	P	B
Lbs.		Lbs.		Lbs.		Lbs.		Lbs.	
·25	2·000	4·25	·485	8·25	·348	12·25	·286	16·25	·248
·50	1·410	4·50	·471	8·50	·343	12·50	·283	16·50	·246
·75	1·150	4·75	·459	8·75	·338	12·75	·280	16·75	·244
1·00	1·000	5·00	·447	9·00	·333	13·00	·277	17·00	·243
1·25	·894	5·25	·436	9·25	·329	13·25	·275	17·25	·241
1·50	·816	5·50	·426	9·50	·324	13·50	·272	17·50	·239
1·75	·756	5·75	·417	9·75	·320	13·75	·270	17·75	·237
2·00	·707	6·00	·408	10·00	·316	14·00	·267	18·00	·236
2·25	·667	6·25	·400	10·25	·312	14·25	·265	18·25	·234
2·50	·633	6·50	·392	10·50	·309	14·50	·263	18·50	·232
2·75	·603	6·75	·385	10·75	·305	14·75	·260	18·75	·231
3·00	·577	7·00	·378	11·00	·301	15·00	·258	19·00	·229
3·25	·555	7·25	·371	11·25	·298	15·25	·256	19·25	·228
3·50	·534	7·50	·365	11·50	·295	15·50	·254	19·50	·226
3·75	·517	7·75	·359	11·75	·292	15·75	·252	19·75	·225
4·00	·500	8·00	·354	12·00	·289	16·00	·250	20·00	·224

$C = \frac{1}{\sqrt{d}}$.

d	C	d	C	d	C	d	C	d	C
Ins.		Ins.		Ins.		Ins.		Ins.	
1·00	1·000	3·25	·555	5·50	·426	7·75	·359	10·00	·316
1·25	·894	3·50	·534	5·75	·417	8·00	·354	10·25	·312
1·50	·816	3·75	·517	6·00	·408	8·25	·348	10·50	·309
1·75	·756	4·00	·500	6·25	·400	8·50	·343	10·75	·305
2·00	·707	4·25	·485	6·50	·392	8·75	·338	11·00	·301
2·25	·667	4·50	·471	6·75	·385	9·00	·333	11·25	·298
2·50	·633	4·75	·459	7·00	·378	9·25	·329	11·50	·295
2·75	·603	5·00	·447	7·25	·371	9·50	·324	11·75	·292
3·00	·577	5·25	·436	7·50	·365	9·75	·320	12·00	·289

Example: Required, the transit time, t, of a carrier through a tube 4 ins. in diameter (C), 2,000 yds long (A), and worked at 7 lbs. pressure (B). $t = 780 \times \cdot378 \times \cdot500 = 147$ secs.

IV.—Tables for calculating Pressure required to drive a Carrier through a Tube in a Given Time.

Formula : $P = \cdot 00007604\, l^3 \times \frac{1}{t^2} \times \frac{1}{d} = A_1 \times B_1 \times C_1$.

$A_1 = \cdot 00007604\, l^3$.

l (Yds.)	A_1	l (Yds.)	A_1	l (Yds.)	A_1	l (Yds.)	A_1	l (Yds.)	A_1
50	9·51	1,050	88,000	2,050	655,000	3,050	2,160,000	4,050	5,050,000
100	76·0	1,100	101,000	2,100	704,000	3,100	2,270,000	4,100	5,240,000
150	257	1,150	116,000	2,150	756,000	3,150	2,380,000	4,150	5,430,000
200	608	1,200	131,000	2,200	810,000	3,200	2,490,000	4,200	5,630,000
250	1,190	1,250	149,000	2,250	866,000	3,250	2,610,000	4,250	5,840,000
300	2,050	1,300	167,000	2,300	925,000	3,300	2,730,000	4,300	6,050,000
350	3,260	1,350	187,000	2,350	987,000	3,350	2,860,000	4,350	6,260,000
400	4,870	1,400	209,000	2,400	1,050,000	3,400	2,990,000	4,400	6,480,000
450	6,930	1,450	232,000	2,450	1,120,000	3,450	3,120,000	4,450	6,700,000
500	9,500	1,500	257,000	2,500	1,190,000	3,500	3,260,000	4,500	6,930,000
550	12,700	1,550	283,000	2,550	1,260,000	3,550	3,400,000	4,550	7,240,000
600	16,400	1,600	312,000	2,600	1,340,000	3,600	3,550,000	4,600	7,400,000
650	20,900	1,650	342,000	2,650	1,420,000	3,650	3,700,000	4,650	7,650,000
700	26,100	1,700	374,000	2,700	1,500,000	3,700	3,850,000	4,700	7,890,000
750	32,100	1,750	408,000	2,750	1,580,000	3,750	4,010,000	4,750	8,150,000
800	38,900	1,800	443,000	2,800	1,670,000	3,800	4,170,000	4,800	8,410,000
850	46,700	1,850	482,000	2,850	1,760,000	3,850	4,340,000	4,850	8,670,000
900	55,400	1,900	522,000	2,900	1,850,000	3,900	4,510,000	4,900	8,950,000
950	65,200	1,950	564,000	2,950	1,950,000	3,950	4,690,000	4,950	9,220,000
1,000	76,000	2,000	608,000	3,000	2,050,000	4,000	4,870,000	5,000	9,510,000

$B_1 = \frac{1}{t^2}$.

t (Secs.)	B_1	t (Secs.)	B_1	t (Secs.)	B_1	t (Secs.)	B_1	t (Secs.)	B_1
5	·0400	105	·0000907	205	·0000238	305	·0000107	405	·00000610
10	·0100	110	·0000826	210	·0000227	310	·0000104	410	·00000595
15	·00444	115	·0000756	215	·0000216	315	·0000101	415	·00000581
20	·00250	120	·0000694	220	·0000207	320	·00000977	420	·00000567
25	·00160	125	·0000640	225	·0000198	325	·00000947	425	·00000554
30	·00111	130	·0000592	230	·0000189	330	·00000918	430	·00000541
35	·000816	135	·0000520	235	·0000181	335	·00000891	435	·00000529
40	·000625	140	·0000510	240	·0000174	340	·00000865	440	·00000517
45	·000494	145	·0000476	245	·0000167	345	·00000840	445	·00000505
50	·000400	150	·0000444	250	·0000160	350	·00000816	450	·00000494
55	·000331	155	·0000416	255	·0000154	355	·00000794	455	·00000483
60	·000278	160	·0000391	260	·0000148	360	·00000772	460	·00000473
65	·000237	165	·0000367	265	·0000142	365	·00000751	465	·00000463
70	·000204	170	·0000346	270	·0000137	370	·00000731	470	·00000453
75	·000178	175	·0000326	275	·0000132	375	·00000711	475	·00000443
80	·000156	180	·0000309	280	·0000128	380	·00000693	480	·00000434
85	·000138	185	·0000292	285	·0000123	385	·00000675	485	·00000425
90	·000123	190	·0000277	290	·0000119	390	·00000658	490	·00000417
95	·000111	195	·0000263	295	·0000115	395	·00000641	495	·00000408
100	·000100	200	·0000250	300	·0000111	400	·00000625	500	·00000400

$C_1 = \frac{1}{d}$.

d (Ins.)	C_1	d (Ins.)	C_1	d (Ins.)	C_1	d (Ins.)	C_1	d (Ins.)	C_1
1·00	1·000	3·25	·308	5·50	·182	7·75	·129	10·00	·100
1·25	·800	3·50	·286	5·75	·174	8·00	·125	10·25	·0976
1·50	·667	3·75	·267	6·00	·167	8·25	·121	10·50	·0952
1·75	·571	4·00	·250	6·25	·160	8·50	·118	10·75	·0930
2·00	·500	4·25	·235	6·50	·154	8·75	·114	11·00	·0909
2·25	·444	4·50	·222	6·75	·148	9·00	·111	11·25	·0889
2·50	·400	4·75	·211	7·00	·143	9·25	·108	11·50	·0870
2·75	·364	5·00	·200	7·25	·138	9·50	·105	11·75	·0851
3·00	·333	5·25	·190	7·50	·133	9·75	103	12·00	·0833

Example : Required, the pressure, P, to drive a carrier through a tube 5 ins. in diameter (C_1) and 2,000 yds. long (A_1) in 200 secs. (B_1). $P = 608{,}000 \times \cdot 0000250 \times \cdot 200 = 3$ lbs.

through any tube in any time. The chart, fig. 10, based on Table III., shows the Transit Time variation for different lengths of tubes of three sizes, $1\frac{1}{2}$ in., $2\frac{1}{4}$ ins., and 3 ins., each worked at 10 lbs. pressure.

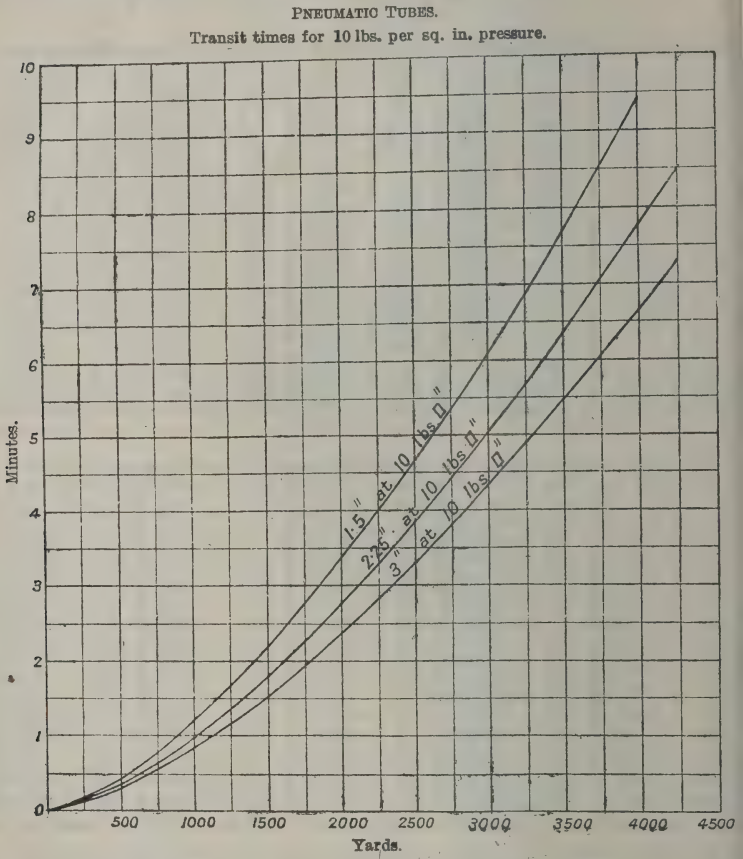


FIG. 10.

PNEUMATIC HOUSE TUBES.

These are, in the British Post Office Service, usually of brass or copper, and in some cases are operated on lines similar to the foregoing system, but considerable modifications have been introduced.

A very general system for warehouses is a circular one with loops into the various apartments which it is desired to connect.

The air is continually circulated by means of a blower of the Roots type which is joined to one end of the tube, whilst the other is open to atmosphere.

Carriers are despatched from a station by being inserted in the 'return' pipe of the loop and are received on the 'flow' pipe, suitable receiving apparatus being provided for the interception of a withdrawal of the carrier without interrupting the flow of air, which is made to travel through a by-pass.

Snifting Valves.

These valves open for the purpose of allowing the passage of air, but close if liquids attempt to pass; they are used in hydraulic systems, and also in motor-cars. In a simple form the arrangement is shown by fig. 11.

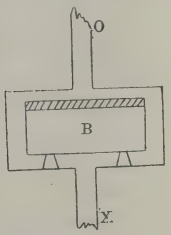


FIG. 11.

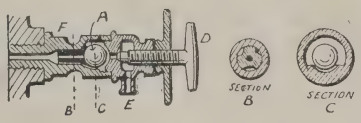


FIG. 12.

B is a light float with a leather washer at the top; O is an outlet pipe; X is the pressure system. Air is free to pass in and out, but if liquid is passing out, B is carried up and seals the outlet pipe.

In connection with air vessels for pumps, a snifting valve is utilised to recharge such with air; two cocks may be used, one at the top and one at the bottom of the vessel, so that water may be drawn off below and air re-admitted above. If it be desired to admit it automatically while at work, a 'snifting valve,' a separate air-pump, or an air-injector may be adopted. The valve, fig. 12, is placed between the suction and delivery valves, and consists of a gun-metal chamber, F, containing a ball, A, which rolls backward and forward on account of the pump stroke. When rolled leftward, air is drawn inward at E, while the escape of water on return stroke is prevented by a rightward roll, and the whole may be put out of action or adjusted by a screwed plug, D.

SECTION XXIII

REFRIGERATION—REFRIGERATING MACHINERY—ICE MAKING—COLD STORAGE

(Revised and amplified by Fred. Simpson, Assoc.M.Inst.C.E.)

SECTION XXIII

REFRIGERATION—REFRIGERATING MACHINERY—ICE MAKING—COLD STORAGE.

(Revised and amplified by Fred. Simpson, Assoc.M.Inst.C.E.)

REFRIGERATION.

The mechanical production of low temperatures for commercial use is mainly based on the employment of certain substances which, as liquids, have low temperature boiling points at moderate pressures, and whose vapours are capable of condensation at a higher temperature.

The selection of such a substance is dependent on the limits of volume, pressure and temperatures available, as well as on the general properties of the substance in regard to its action on the materials employed in the construction of the machinery, its inflammability and its poisonous properties; anhydrous ammonia, carbonic dioxide, sulphur dioxide, sulphuric ether, and many other substances are available, but ammonia and carbonic acid are most generally used. In selecting between these two the fact that the critical temperature of carbonic acid occurs at about 87°F. prohibits its economical use where the temperature of condensing water available is near to or above that temperature.

The general process of refrigeration consists in exposing the surface of the vessel (the 'refrigerator') containing the working substance, to the material to be refrigerated, and maintaining in that vessel a pressure corresponding to a boiling-point temperature of the working substance somewhat lower than the degree of cooling required. This pressure is maintained by means of a gas-pump, which draws away the vapour at the rate it is formed in the process of boiling, and compresses and transfers it to another vessel (the 'condenser') in which, by means of some available cooling agent, generally water circulated round the containing vessel, it is condensed to a liquid form at the higher pressure and corresponding temperature of liquefaction. The condensing water is supplied at a temperature somewhat lower than that of liquefaction, and from the condenser in this liquid form, it is supplied as required to the refrigerator. (Fig. 1, page 1097.)

A modification of the foregoing process occurs in the 'ammonia absorption' system, the gas-pump being replaced by a vessel in which the vapour formed in the refrigerator is absorbed by cooled water at the lower pressure, and the water, when saturated with the gas, is transferred by a pump to a boiler on the higher-pressure side of the system. In this boiler the aqueous solution is heated, the disengaged gas passing off to a condenser to be cooled and liquefied, the liquid ammonia then passing as required to the refrigerator. In the larger installations on this principle, the water in the boiler, as it is deprived of the gas, is cooled and run into the absorbing vessel to replace that pumped to the boiler, and, generally, an interchange of heat from the weak liquor passing from the boiler to the saturated solution after being pumped is arranged for, but in the smaller plants the boiler and absorber are alternately substituted for each other, the action of the machine being thus intermittent. (Fig. 2, page 1098.)

In the process of raising the pressure of the vapour from that of the refrigerator to that of the condenser, the power applied reappears in the form of heat stored in the gas, and if none of this heat is allowed to escape, the temperature of the gas will be raised considerably above that at which it condenses at the higher pressure; that is to say, it will be superheated.

In practice, a large amount of this superheat escapes by conduction through the compressor walls, and in the case of what is termed 'dry compression,' is taken up by a water-jacket round the compressor. In the case of 'wet compression' the vapour from the refrigerator is delivered to the compressor supersaturated to such an extent that the greater part of the superheat is taken up in vaporising this excess of liquid.

The injection of cooled oil into the compressor during compression of the gas has also been used, with the intention of taking up part of the superheat and at the same time reducing the cylinder clearances.

The thermal changes taking place are approximately as follows:—Starting with the liquid refrigerant. At condenser pressure and temperature, this is conveyed to the refrigerator through a valve capable of sensitive adjustment; on passing this valve and arriving at the pressure of the refrigerator, the liquid is immediately reduced in temperature by the evaporation of a portion of itself; the remaining liquid, passing through the coils and distributed over their large surface, is evaporated by the heat supplied by the material to be cooled, which is correspondingly reduced in temperature. Assuming T_2 to be the absolute temperature of the condenser (that is the temperature on the Fah. scale *plus* 461°), T_1 to be the absolute temperature of the refrigerator, c to be the mean specific heat of the liquid, h_1 the heat of vaporisation at the refrigerator pressure, in British

thermal units (B.Th.U.) per lb.; then assuming that the vapour from the refrigerator arrives at the compressor in a condition of saturation, the abstraction of heat from the material cooled, for each lb. of vapour, will be

$$h_1 - (T_2 - T_1)\, c.$$

Following the course of the resultant vapour, the work of compression to the condenser pressure will be (in heat units),

$$\left(\frac{T_2}{T_1} - 1\right) h_1,$$

and the whole heat,

$$\frac{T_2}{T_1}\, h_1.$$

The amount of heat, above the refrigerating temperature, after condensation and at condenser temperature, will be,

$$(T_2 - T_1)\, c\,;$$

so that the amount of heat to be taken out in cooling during compression, and afterwards by the condensing water, will be the difference between the total heat and that remaining in the condensed liquid, or,

$$\frac{T_2}{T_1}\, h_1 - (T_2 - T_1)\, c.$$

If by means of water-jackets, or other method of cooling, the gas is cooled as it is being compressed, so that it arrives at the condenser as a vapour at condenser temperature, the heat remaining to be taken out to reduce it to liquid form would be the heat of vaporisation at that pressure (say h_2); so that the superheat amounts to

$$\frac{T_2}{T_1}\, h_1 - (T_2 - T_1)\, c - h_2.$$

This represents the amount of heat that may be abstracted during compression by the water-jacket, or supplied by the evaporation, during the compression, of the liquid carried over from the refrigerator with the vapour in what is called 'wet compression.'

In this latter case the amount of liquid required per pound of vapour entering the compressor to ensure the cooling of the gas during compression in order to arrive at the condenser at condenser temperature, would be

$$\frac{T_2}{T_1} - \frac{(T_2 - T_1)\, c + h_2}{h_1},$$

The extra liquid so entrained in the circuit reduces the refrigeration efficiency per pound of liquid evaporated in the refrigerator by the amount

$$(T_2 - T_1)\, c \left[\frac{T_2}{T_1} - \frac{(T_2 - T_1)\, c + h_2}{h_1}\right],$$

as this extra amount of liquid has to be cooled from condenser to refrigerator temperature.

Hence, the net amount of refrigeration per pound of liquid vaporised in the refrigerator would be,

$$h_1 - (T_2 - T_1)\, c \left[\frac{T_2 + T_1}{T_1} - \frac{(T_2 - T_1)\ c + h_2}{h_1}\right],$$

All these thermal changes are obtained by the interchange of heat, with the exception of the heat added in compression which is supplied by the conversion of the energy applied into heat, the minimum amount of work required being per pound of vapour entering the compressor.

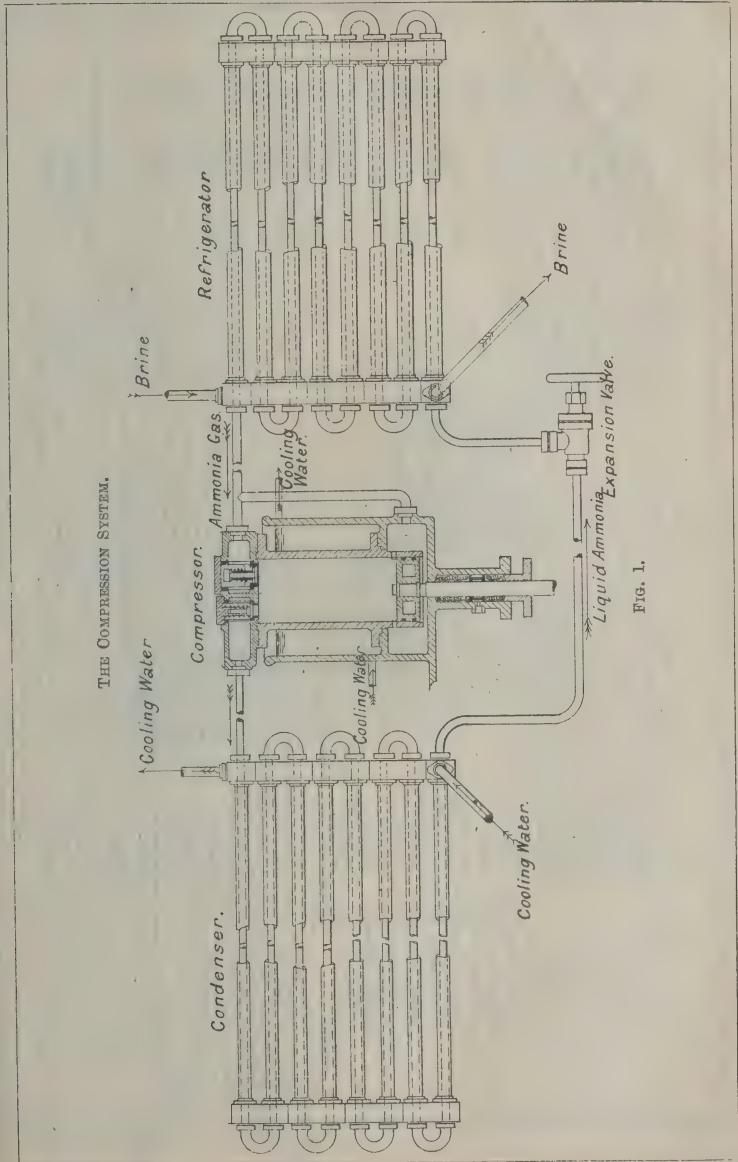
$$h_1\, \frac{T_2 - T_1}{T_1} \times 778 \text{ foot pounds.}$$

In this formula 778 is the work in foot pounds corresponding to one unit of heat.

In place of a mean specific heat of the liquid, tables generally give the total liquid heat above and below 32° F.; the term $(T_2 - T_1)\, c$ may then be replaced by the differences of liquid heats corresponding to the absolute temperatures T_2 and T_1 on the Fahrenheit scale.


The effect of employing the 'wet compression' method, using ammonia, within moderate limits of temperature (say between 5° and 77° F.) would, if carried out with care, cause very little diminution of efficiency, but in the case of carbonic acid, between the same limits, the loss would be considerable.

In the case of ammonia, the net refrigerative effect per pound evaporated in the refrigerator between the above limits, using external cooling to take up the superheat, would be $h_1 - (T_2 - T_1)c = 519$ B.Th.U. The net effect, using entrained liquid for the same purpose, would be 510 B.Th.U. In the case of carbonic acid between the same limits, the corresponding net effects per pound of liquid evaporated in the refrigerator, using external cooling, would be 70·5 B.T.U.; with 'wet compression,' 56·5 B.Th.U. If the higher limit of temperature approaches to that of the critical temperature, the loss would be much greater.



THE COMPRESSION SYSTEM.

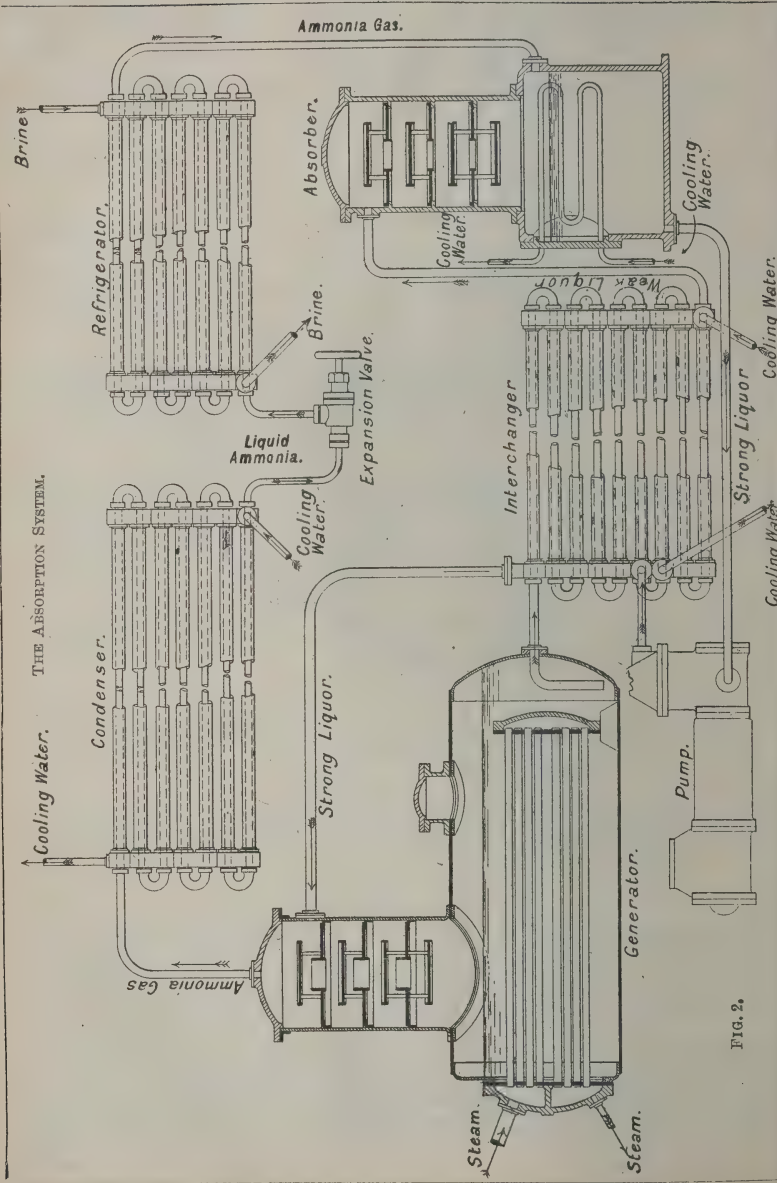FIG. 1.




THE ABSORPTION SYSTEM.

FIG. 2.

AMMONIA REFRIGERATING PLANT

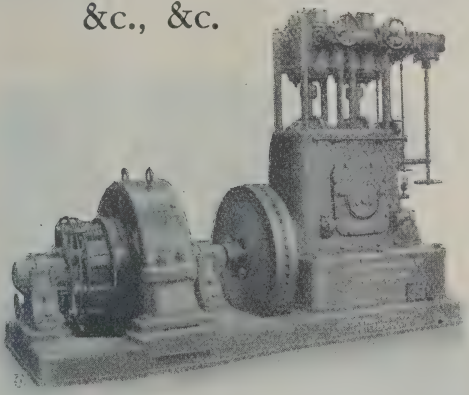Complete equipment for Ice Making, Provision Stores, Chemical Processes, &c., &c.



Capacity 110 Tons Refrigeration.

PETER BROTHERHOOD Ltd.

PETERBOROUGH

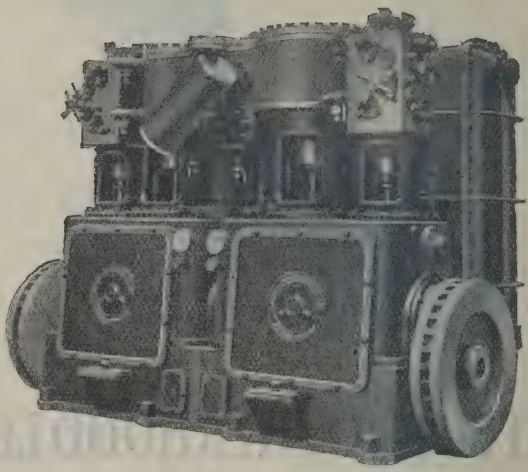
AND

Central House, Kingsway, LONDON, W.C. 2
Mansfield Chambers, St. Ann's Square, MANCHESTER
Commercial Union Buildings, Pilgrim Street, NEWCASTLE
48 West Regent Street, GLASGOW

F. 1098

CO_2 REFRIGERATING MACHINERY

For Ships' Cargo & Provision Stores
Steam or Electric Drive



PETER BROTHERHOOD
PETERBOROUGH LTD.

London Office:
Central House, Kingsway, W.C. 2.
Manchester Office:
Mansfield Chambers, St. Ann's Sq.
Newcastle Office:
Commercial Union Bdgs., 47 Pilgrim St.
Glasgow Office:
48 West Regent Street.

F. 1099

The Refrigerator.

The Refrigerator or Evaporator usually consists of a system of tubes containing the refrigerating medium, which, in the process of boiling, abstracts heat either directly from the material to be cooled, from air which is circulated mechanically, or by invection round the tubes and then around the material operated upon; or by circulating dense brine around the refrigerator tubes and so abstracting its heat, the brine being then circulated in piping in proximity to the material to be cooled.

Each of these heat transfers requires a temperature difference depending upon the extent of the surfaces through which the transfers take place. From 3 to 5 B.Th.U. between a circulating liquid and air, and 40 B.Th.U. between a refrigerating medium and slowly moving brine, per square foot of surface per hour for each 1° F. difference of temperature, may be allowed; this latter may be increased to 150 B.Th.U. if the velocity of the brine over the surface is about 300 ft. per minute.

A much greater efficiency may be obtained by using a system of concentric tubes, one of which holds the refrigerant and the other the liquid to be cooled, the latter being circulated at a high velocity.

The Compressor.

The Compressor consists of a cylinder with a well-fitting piston which alternately draws in the gas from the refrigerator, compresses and transfers it to the condenser. The entrance and exit of the vapour is controlled by guided valves which are held to their seats by springs, and are actuated by the difference of pressure. The suction valve opens towards the cylinder, and the delivery valve towards the delivery pipe. These valves are usually situated in the cylinder covers, and care is taken in the design to reduce as much as possible the clearance passages from the valves to the interior of the cylinder; they are so constructed as to avoid damage to the rest of the machine in case of breakage. The cylinder is preferably fitted with a removable liner.

The compressor may be single or double acting, in the former case the valves are in the cylinder end cover and the stuffing-box end is exposed only to suction pressure. In the case of the double-acting compressor, the stuffing-box end is subject to the higher delivery pressure, and in that case the stuffing-box is lengthened and a lantern gland is placed between the inner and the outer rings of packing; the leakage from the compressor into this gland space is carried by a small tube to the suction side of the system, so that the outer packing has only the suction pressure to contend with.

The cylinder capacity required depends upon the refrigerant used and upon the temperature limits. For working between ordinary limits, a capacity to deal with 4 cubic ft. of gas in the case of carbonic anhydride, 20 cubic ft. in the case of anhydrous ammonia, and 65 cubic ft. in that of sulphur dioxide, is usually allowed for each 1,000 B.Th.U. of refrigeration to be dealt with.

The Condenser.

The Condenser usually consists of a nest of tubes containing the vapour from the compressors and submerged in a tank of water which is being continually renewed. In another form the condensing water is allowed to trickle over the tubes in a thin film, the whole being exposed to a current of air.

A very effective and compact form of condenser consists of a system of two concentric tubes, the vapour from the compressor passing into the space between the two; the water runs through the inner tube in a contrary direction to that of the vapour and condensed liquid, so that the heated water leaves the condenser at a point where the hot gases from the compressor enter, the work of condensation being performed with a minimum expenditure of condensing water. Experiments with this class of condenser gave a transmission per square foot per hour for 1° F. temperature difference, of about 120 B.Th.U. with a water velocity of 150 ft. per minute through the tube, to 290 B.Th.U. with a water velocity of 400 ft. per minute.

THE COLD-AIR REFRIGERATING MACHINE.

The system generally employed with this class of machine is the compression of air in a double-acting compressor with gunmetal liner forming a water jacket to about 65 lbs. on the square inch (absolute). The air is then discharged into a cooler similar in construction to a steam surface condenser, through the inside of which the water is caused to circulate. To this water the heat of compression is transferred. The air, after leaving the cooler, passes on to an expansion cylinder, where it does useful work on a piston usually attached to a continuation of the steam piston-rod. Each end of this cylinder is fitted with distinct adjustable cut-off valves.

The air, after expansion, passes through insulated ducts to the storage chamber, where it absorbs heat from the chamber and contents. It is then drawn off by suction-ducts on the opposite side of the chamber and returns to the machine, where it is re-compressed, cooled and expanded, and delivered to the room in a continuous cycle.

The foregoing may be taken as a general description of all cold-air machines, the various makers differing only in matters of detail and construction of machine.

The advantages of cold-air machines are: first, that no chemicals of any description are required, consequently their employment is not attended by constant dangers from possible

explosions and fires, or loss of life through the accidental escape of deadly gases; very low temperatures can be rapidly attained by their use; their construction is comparatively simple, and their application is easy; the entire machine is situated externally to the chamber or store being refrigerated, and every part thereof is consequently accessible at all times.

NOTES ON AIR REFRIGERATING MACHINES.

Air machines will make 3 to 4 tons of ice per ton of coal.

Air machines require 30 to 40 lbs. of water per lb. of ice.

An air machine will absorb from 600 to 700 thermal units, passing through a range of 170° F., per lb. of coal consumed.

Air machines of power to cool 100,000 cubic ft. of air per hour through a range of 160° F. can be worked with a steam engine indicating 100 to 150 h.p., with a consumption of $\frac{1}{5}$ of a ton of coal per hour.

The machine room for an 'Arctic' air machine seldom occupies more than 5 per cent. of the space being cooled. A Cole's 'Arctic' air machine discharging 100,000 cubic ft. of air per hour occupies a space of 135 sq. ft. and 776 cubic ft.; a 7,000 cubic ft. machine occupies a space of 38 sq. ft. and 280 cubic ft.

According to Coleman, air machines of less capacity than 10,000 cubic ft. of air per hour require to work at an air-pressure of not less than 65 lbs. per sq. in. for a range of cooling for 150° F. Machines dealing with 50,000 cubic ft. per hour can work at 45 lbs. pressure.

According to Haslam, to reduce air to 60° F. below zero does not require the air-pressure to exceed 45 lbs.

The ratio of the compressor and expander capacities in a cold-air machine should preferably be as 1·6 to 1.

An air machine with two compressors 16 inches diameter and 16 inches stroke, each with an expansion cylinder 12 inches diameter and 16 inches stroke, the machine being actuated by four steam cylinders 10 inches diameter and 16 inches stroke, will cool a chamber of 18,000 cubic feet capacity.

According to Lightfoot, 25 h.p. will cool 15,000 cubic feet of air per hour.

20,000 cubic feet of saturated air at 90° F. contains 42 lbs. of water.
" " " " 60° " 17 " "

To cool 1,000 gallons of water 25° F. by an air machine takes 10 tons of coal per 24 hours, or 156 h.p.

The amount of cooling water required for air-compression machines will vary with the temperature of the water-supply, and may be found approximately from the following formula:—

$$G = \frac{H}{10\,(t_1 - t_2)}$$

where,

G = quantity of water required in gallons per minute,

H = quantity of heat to be withdrawn from the air,

t_1, t_2, being the respective inlet and outlet temperature of the condensing water.

TABLE I.—SHOWING RANGE OF TEMPERATURE THROUGH WHICH COMPRESSED AIR SHOULD BE REDUCED, WITH DEGREES OF EXPANSION, TERMINAL PRESSURE BEING NOT UNDER THAT OF ATMOSPHERE.

Degree of Expansion	16	8	7	4	3	2
When the compressed air is at 60° the range of cooling should be, in F.° .	355°	303°	271°	230°	188°	131°
When the compressed air is at 90° the range of cooling should be, in F.° .	375°	320°	287°	243°	199°	138°

TABLE II.—SHOWING POUNDS OF WATER IN 1,000 CUBIC FEET OF ATMOSPHERIC AIR WHEN SATURATED.

Temp. degs. F.	Lbs. of Water.	Temp. degs. F.	Lbs. of Water.	Temp. degs. F.	Lbs. of Water.	Temp. degs. F.	Lbs. of Water.
−5	·053	25	·221	55	·693	85	1·819
0	·069	30	·276	60	·821	90	2·113
5	·087	35	·338	65	·969	95	2·303
10	·111	40	·407	70	1·140	100	2·824
15	·127	45	·488	75	1.337	105	3·250
20	·176	50	·582	80	1·562	110	3·587

TABLE III.—SHOWING NUMBER OF B. TH. UNITS TO BE REMOVED TO COOL 3,500 CUB. FT. OF AIR SATURATED WITH 80 PER CENT. OF MOISTURE AT VARIOUS TEMPERATURES.

Temperature in deg. Fah. to which the Air is to be cooled=T_2.	Initial temperature of the Air, deg. Fah.=T_1.				
	86°	77°	68°	59°	50°
77	1,896	—	—	—	—
68	3,512	1,616	—	—	—
59	4,900	3,004	1,388	—	—
50	6,116	4,220	2,604	1,216	—
41	7,192	5,296	3,680	2,292	1,076

THE SULPHUROUS-ANHYDRIDE REFRIGERATING MACHINE.

The refrigerant of these machines is liquefied sulphur dioxide gas.

The gas has a specific heat of ·41 (water, 1).

It has a critical pressure of 79 atmospheres, and a critical temperature of 312° F.

The specific gravity of the gas is 2·211 (air, 1), and the specific gravity of the liquid at −4°F. is 1·49.

Machines using this agent are in a minority in this country, although used to some extent on the Continent.

They require a much greater compressor capacity than the ammonia machines—nearly three times as much—and give a low efficiency at low refrigerator temperatures.

Exceptional care has to be taken to maintain tight joints, as any leakage might produce sulphuric acid, which would become destructive to the metal of the plant.

THE CARBONIC-ACID REFRIGERATING MACHINE.

Of late years 'carbonic acid,' or 'carbonic anhydride' as it is technically known, has come very much to the front as a refrigerating agent. It has certain properties and advantages that are found suitable in some situations—mainly for marine work, in the transportation of perishable produce.

The fact that carbonic anhydride will not attack metals, and that it cannot be decomposed during compression, are the points mainly in its favour.

The gas is inodorous, and it is claimed that air containing 8 per cent. of carbonic anhydride gas can be inhaled without danger, but at higher percentages it will produce stupefaction and suffocation.

Carbonic anhydride has a specific gravity of 1·529 (air, 1), at the atmospheric pressure.

It boils at a temperature of −108° F. at atmospheric pressure.

It is liquid at 32° F. under a pressure of 36 atmospheres, and has a specific gravity of ·93 (water, 1).

The specific heat of carbonic anhydride gas at constant pressure equals ·2167 (air, ·2375).

The working pressure of carbonic-anhydride machine varies from 50 to 70 atmospheres.

Owing to the nature of the refrigerant, which evaporates under atmospheric pressure at 108° F. below zero, the diameters of all parts of the machine are very small, so that there is no difficulty in proportioning the machine to deal with its working pressure.

The efficiency of the machine is considerably lessened by the high specific heat of the liquid, and therefore decreases rapidly with a high condensing temperature.

Experiments carried out by Professor Linde some twenty years ago went to prove that these machines, when working with condensing water at 90° F., were less efficient by 50 per cent. than when the temperature of the condensing water was about 50° F.

One of the main advantages of this machine when using sea-water for condensing purposes is that the condenser coil may be made of copper, which ensures longer life, both internally and externally, as the carbonic anhydride has no chemical action on copper.

THE ANHYDROUS-AMMONIA REFRIGERATING MACHINE.

The refrigerant for these machines is liquid anhydrous ammonia.

The gas is colourless and irrespirable.

It burns with a yellowish flame if mixed with a large proportion of air.

It is exceedingly soluble in water; 1 part of water at 60° F. will absorb 800 parts of gas.

It has a very strong action on copper and its alloys.

It has a high latent heat of evaporation and a comparatively low vapour tension, admitting liquefaction at a comparatively low pressure and high temperature.

It is generally considered to be the most satisfactory and economical medium for refrigerating purposes, as evidenced by the great number of engineering firms engaged in the manufacture of ammonia machines over those using other refrigerants.

A packing for ammonia pumps, supplied by *Turner Brothers Asbestos Co. Ltd., Rochdale*, consists of yarn which is subjected to a process rendering the cotton fibres impervious to the action of the liquids. It has high-wearing qualities. A packing for ammonia pumps, in ring form, is built up from laminated layers of a specially treated fabric, and is very sensitive in its action on the rod. It fulfils the conditions of a high-class packing for the special purpose of ammonia pumps.

TABLE IV.—SHOWING PROPERTIES OF ANHYDROUS CARBONIC DIOXIDE (CO_2).

Temp. degs. F.	Absolute Pressure Atmosphere.	Latent Heat of Evaporation. B.Th.U. per lb.	Liquid Heat. B.Th.U. per lb.	Cubic ft. Vapour per lb.	Cubic ft. Liquid per lb.
−22	14·5	126·8	−24·8	·434	·0156
−13	17·0	123·2	−21·1	·368	·0157
− 4	19·7	119·1	−17·2	·313	·0161
5	22·8	115·3	−13·2	·268	·0164
14	26·2	110·6	− 9·0	·230	·0167
23	30·7	105·5	− 4·6	·196	·0172
32	34·3	99·8	0·0	·167	·0177
41	39·8	93·3	4·9	·143	·0181
50	44·2	85·9	10·3	·120	·0188
59	50·7	77·2	16·2	·101	·0198
68	56·3	66·5	23·1	·084	·0210
77	63·8	52·2	31·6	·067	·0230
86	70·7	27·0	45·4	·048	·0268
88·43	—	—	—	·03461	·03461

Reduced from tables in L. Marchis' 'Production et Utilisation du Froid' (1906).

TABLE IVA.—SHOWING PROPERTIES OF ANHYDROUS AMMONIA (NH_3).

Temperature. Degs. F.	Absolute Pressure. Lbs. per Sq. In.	Latent Heat of Evaporation. B.Th.U. per Lb.	Liquid Heat in B.Th.U. per Lb.	Cubic Ft. of Vapour per Lb.
−22	16·95	595·2	−45·92	16·03
−13	21·51	592·4	−38·65	12·85
− 4	27·03	589·0	−31·21	10·37
5	33·68	584·8	−23·63	8·43
14	41·57	580·0	−15·89	6·94
23	50·92	575·0	− 8·05	5·75
32	61·84	569·0	0·00	4·79
41	74·55	562·5	8·17	4·01
50	89·21	555·5	16·51	3·39
59	106·00	547·9	24·97	2·89
68	125·03	539·8	33·59	2·47
77	146·63	531·0	42·35	2·12
86	170·85	521·5	51·28	1·83
95	197·81	511·2	60·34	1·59
104	227·76	500·4	69·55	1·40

1 lb. liquid ammonia anhydride = ·0257 cubic ft.

The refrigeration is brought about by the evaporation of the liquid anhydrous ammonia, which takes place, generally, in coils of pipe, termed the refrigerator coils.

The ammonia vapour resulting from this evaporation, and which is at a pressure of from 10 lbs. to 30 lbs. per square inch above atmospheric pressure, is compressed mechanically up to a pressure of from 120 lbs. to 160 lbs. per square inch, depending upon the temperature of the condensing water used. Table V. gives the refrigerating effect of a cubic foot of ammonia gas at different condenser and back pressures.

During compression, heat is developed in proportion to the relative volume to which the gas has been reduced. This high-pressure gas is now discharged into the condenser—usually the double tube or the open-air evaporative type when used for land service—where the heat of compression is absorbed by the condensing water. When this stage in the cycle is reached, the gas assumes the liquid condition, and is then led by suitable pipes and connections to the expansion or refrigerator coils, where it re-evaporates on passing an expansion valve that separates the high-pressure liquid from the low-pressure gas, absorbing, from the coils and substances in proximity thereto, a quantity of heat proportionate to that which was previously given up by the high-pressure gas to the water of condensation.

Modifications of the foregoing, and other auxiliary processes, have been introduced by several makers of ammonia machines; but the general principles remain the same, the operations of the refrigerant forming a complete cycle.

In the working of a plant care should be taken that the liquid ammonia is kept at a temperature as low as, or lower, than the temperature of the condensing water, in its passage from the condenser to the expansion cock, as any heat taken up, tending to raise the temperature of the liquid, detracts from the efficiency, besides causing trouble through the generation of vapour and consequent tendency to block the system.

TABLE V.—SHOWING REFRIGERATING EFFECT OF 1 CUBIC FT. OF AMMONIA GAS AT DIFFERENT CONDENSER AND BACK PRESSURES IN B.TH.U.'S.

Temperature of Gas, in degrees Fah.	Corresponding Suction Pressure, in Lbs. per Sq. In.	Temperature of the Liquid in degrees Fah.								
		65°	70°	75°	80°	85°	90°	95°	100°	105°
		Corresponding Condenser Pressure in Lbs. per Sq. In.								
		103	115	127	139	153	168	184	200	218
−27°	1	27·30	27·01	26·73	26·44	26·16	25·87	25·59	25·30	25·02
−20°	4	33·74	33·40	33·04	32·70	32·34	31·99	31·64	31·30	30·94
−15°	6	36·36	36·48	36·10	35·72	35·34	34·96	34·58	34·20	33·82
−10°	9	42·28	41·84	41·41	40·97	40·54	40·10	39·67	39·23	38·80
−5°	13	48·31	47·81	47·32	46·82	46·33	45·83	45·34	44·84	44·35
0°	16	54·88	54·32	53·76	53·20	52·64	52·08	51·52	50·96	50·40
5°	20	61·50	60·87	60·25	59·62	59·00	58·37	57·75	57·12	56·50
10°	24	68·66	67·97	67·27	66·58	65·88	65·19	64·49	63·80	63·10
15°	28	75·88	75·12	74·35	73·59	72·82	72·06	71·29	70·53	69·76
20°	33	85·15	84·30	83·44	82·59	81·73	80·88	80·02	79·17	78·31
25°	39	95·50	94·54	93·59	92·63	91·68	90·72	89·97	88·81	87·86
30°	45	106·21	105·15	104·09	103·03	101·97	100·91	99·85	98·79	97·73
35°	51	115·69	114·54	123·39	112·24	111·09	109·94	108·79	107·64	106·49

To successfully operate a refrigerating plant the care of the various temperatures is of importance. Thermometer wells should be freely distributed at the various points, viz. :—

(1) In the ammonia suction immediately entering the compressor.
(2) In the ammonia discharge immediately leaving the compressor.
(3) In the ammonia discharge immediately entering the condenser.
(4) In the liquid discharge immediately leaving the condenser.
(5) In the liquid manifold immediately at the refrigerator.
(6) In the suction manifold immediately leaving the refrigerator.
(7) In the brine supply immediately entering the refrigerator.
(8) In the brine return immediately leaving the refrigerator.

TABLE VI.—GIVING NUMBER OF CUBIC FEET OF GAS THAT MUST BE PUMPED PER MINUTE AT DIFFERENT CONDENSER AND SUCTION PRESSURES TO PRODUCE 1 TON OF REFRIGERATION IN TWENTY-FOUR HOURS (284,000 B.TH.U.).

Temperature of Gas, in degrees Fah.	Corresponding Suction Pressure, in Lbs. per Sq. In	Temperature of the Gas in degrees Fah.								
		65°	70°	75°	80°	85°	90°	95°	100°	105°
		Corresponding Pressure in Lbs. per Sq. In.								
		103	115	127	139	153	168	184	200	218
−27°	1	7·22	7·3	7·37	7·46	7·54	7·62	7·70	7·79	7·88
−20°	4	5·84	5·9	5·96	6·03	6·09	6·16	6·23	6·30	6·43
−15°	6	5·35	5·4	5·46	5·52	5·58	5·64	5·70	5·77	5·83
−10°	9	4·66	4·73	4·76	4·81	4·86	4·91	4·97	5·05	5·08
−5°	13	4·09	4·12	4·17	4·21	4·25	4·30	4·35	4·40	4·44
0°	16	3·59	3·63	3·66	3·70	3·74	3·78	3·83	3·87	3·91
5°	20	3·20	3·24	3·27	3·30	3·34	3·38	3·41	3·45	3·49
10°	24	2·87	2·90	2·93	2·96	2·99	3·02	3·06	3·09	3·12
15°	28	2·59	2·61	2·65	2·68	2·71	2·73	2·76	2·80	2·82
20°	33	2·31	2·34	2·36	2·38	2·41	2·44	2·46	2·49	2·51
25°	39	2·06	2·08	2·10	2·12	2·15	2·17	2·20	2·22	2·24
30°	45	1·85	1·87	1·89	1·91	1·93	1·95	1·97	2·00	2·01
35°	51	1·70	1·72	1·74	1·76	1·77	1·79	1·81	1·83	1·85

Indicator Diagrams of Compressors.

Indicator diagrams may be utilised not only for estimating the work done in the compressors, but also for discovering defects or irregularities in the action of the compressors.

In order to understand the meaning of any irregularity in the diagram, assume first that no

mechanical defects are present, and that the pressure curve is only influenced by heat exchanges; then the line of pressures will be between the limits of the curve of pressures representing the compression of a perfect gas, without loss or gain from outside heat influences, and that of a vapour kept in a state of saturation by the abstraction of superheat as it is formed in the process of compression. To follow the first line, a perfect heat insulation would be required, and to follow the second the compressor walls must have a temperature lower than that of the gas at the various stages of compression, in order to take up the superheat; so that in the first stages of compression the temperature of the compressor must be that of the suction gas, a condition only to be obtained at the expense of the general efficiency of the system.

An approach to a practically perfect condition of working in a water-jacketed compressor would be represented by a curve following the adiabatic curve until the temperature of the gas reaches that of the cooling water in the jacket. The jacket then coming into action, the heat formed by the further compression is taken up by the cooling water, and the temperature of the gas kept down, so that the gas arrives at the condenser pressure at the temperature of the condenser and in a saturated condition. This presupposes a perfect conduction to the water jacket and that the action of the jacket is only effective in taking up heat; but as it would be equally effective in giving out heat, when the gas was at a lower temperature, there would be an initial heating of the gas to some extent.

The water jacket not being perfect in action we have in practice some intermediate effect which tends to raise the pressure line at the start of compression, and lower it towards the end, so that the volume at the termination lies between that corresponding to the adiabatic compression and that corresponding to the saturation curve. As the effect of superheating from the jacket has its greatest value during the filling of the compressor with the suction gas, its effect would be comparatively slight (during the period of compression) until the gas heated by compression arrived at the temperature of the jacket, when the heat transfer would be reversed, and a cooling of the gas effected up to the end of the stroke.

With the exception of a slight absorption of heat, which might tend to raise the pressure above the adiabatic curve at the start of the stroke, the diagram curve must occupy a position between the lines representing the adiabatic curve of pressures and the saturation curve, that is if the compressor is fed with saturated vapour or superheated gas and the mechanical adjustments are perfect.

To appreciate the action going on inside the compressor, these two curves, corresponding to the adiabatic compression and to the compression of a saturated vapour, should be drawn on the diagrams or on tracing paper and superposed.

To construct these curves, assume V_o = the volume of the compressor, and P_o = the suction pressure above vacuum. Then for any other volume, V_x, the corresponding pressure P_x would be $\frac{V_o^n}{V_x^n} P_o$. If V_o is taken as a unit volume, then $P_x = \frac{P}{V_x^n}$. The index n varies with each gas, and in the case of nearly perfect gases compressed or expanded adiabatically, it is the quotient found by dividing the number representing the specific heat of the gas at constant pressure by that of the specific heat at constant volume. But n in the case of *im*perfect gases may be approximated to empirically, thus $n = 1{\cdot}30$ in the case of ammonia anhydride compressed adiabatically, and $n = 1{\cdot}06$ for the same gas compressed and maintained in a just saturated condition during the process of compression.

In the formula given, if V_x is taken successively as $1, {\cdot}9, {\cdot}8, \ldots\ldots {\cdot}2, {\cdot}1$, a series of factors $\left(\frac{1}{V_x^n}\right)$ may be obtained, which multiplied into the value of P_o (the initial pressure) will give the pressure corresponding to the respective volumes.

Table No. VIA gives the value of these factors for $n = 1{\cdot}06$, $1{\cdot}10$, $1{\cdot}16$ and $1{\cdot}30$. The factors in the column under $n = 1{\cdot}06$ and $1{\cdot}30$, represent respectively the saturation and adiabatic curves for anhydrous ammonia; factors under $n = 1{\cdot}10$ represent the approximate curve which ought to be obtained with liquid ammonia injection, and factors under $n = 1{\cdot}16$ give approximately the curve claimed by the advocates of the 'wet' system of compression.

TABLE VIA.

Volumes	$n =$			
	1·06	1·10	1·16	1·30
1·0	1·00	1·00	1·00	1·00
·9	1·12	1·12	1·13	1·15
·8	1·26	1·28	1·30	1·34
·7	1·46	1·48	1·51	1·59
·6	1·72	1·75	1·81	1·94
·5	2·08	2·14	2·23	2·46
·4	2·64	2·74	2·89	3·29
·3	3·60	3·76	4·04	4·79
·2	5·51	5·76	6·47	8·10
·1	11·48	12·59	14·45	19·95

In practice the construction of these curves will be facilitated by the use of the slide-rule; if a strip of paper is marked with the values of the factors taken from the scale of the slide-rule and numbered 1·0, ·9, ·8, etc., then if 1·0 on the marked scale is placed to the number on the slide-rule corresponding to the initial (suction) pressure, the pressures corresponding to the other ordinates will be found on the slide-rule scale opposite to the respective number on the paper slip.

A line is drawn, on the indicator diagram, parallel to the atmospheric line and 14·7 lbs. on the scale of pressures, below it, representing the line of absolute zero pressure or vacuum; the diagram is divided into ten equal spaces by lines at right angles to the atmospheric line, the line through the toe of the diagram being numbered 1·0 and the others ·9, ·8, ·7, etc., successively; the calculated ordinates corresponding to the adiabatic and saturation curves are then plotted on the corresponding lines, from the vacuum line as a base, and the respective curves drawn through the points so determined.

Fig. 3 shows such a diagram with the adiabatic and saturation compression curves superposed; the suction pressure in this case being 30 lbs. (absolute) per square inch, and the condenser pressure 150 lbs. (absolute).

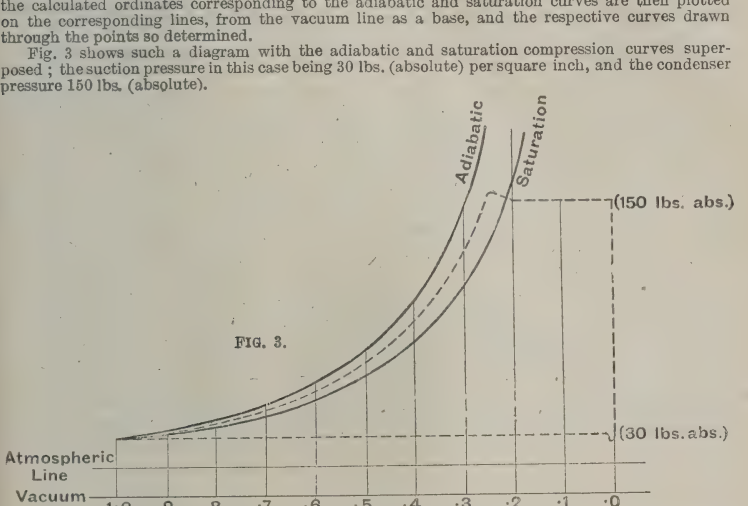


FIG. 3.

The actual indicator diagram will, in ordinary cases, lie within the area between the adiabatic and saturat on curves plotted on the diagram (fig. 3) by the above method.

In considering the influence of mechanical defects upon the shape of the diagram, only those affecting the volume and pressure would be noticeable. These may be due to leakages past suction and delivery valves, or past the piston, and from the effect of excessive clearances. Taking the effects of these in order, any leakage past the suction valve during compression would allow of an escape of gas into the suction pipe and so diminish the pressure in the compressor, which would be indicated by the compression curve tending to approach or pass under the saturation curve; any leakage in the delivery valve would tend to make the compression curve approach the adiabatic curve; and any leakage past the piston would cause the compression curve to approach or pass the saturation curve.

In the diagram of the suction stroke with perfect mechanical conditions, the pressure line ought to drop immediately to slightly under suction pressure, but with a small clearance the pressure will not be lowered sufficiently for the suction valve to open, until the gas in this clearance space has re-expanded. Any leak from the delivery pipe, or any deposit of liquid ammonia on the piston or cylinder ends, which may take place in 'wet' compression, may cause a delay in the lowering of the pressure to that of the suction.

Once the suction valve opens, allowing the passage of the suction gas to the compressor, the pressure line will not materially vary, and will continue as a line parallel to the vacuum line to the end of the suction stroke, the cylinder being then full of gas at practically suction pressure.

At the end of the compression curve a slight rise in the pressure above that of the condenser may be registered on the diagram, due to excessive strength of the springs on the delivery valves; a similar defect in the suction valves will be indicated by a depression of the suction line, showing a pressure below that of the refrigerator, at the opening of the suction valves.

Calcium Brine.

Calcium Chloride Brine of a density ranging from 1·18 to 1·25 is usually employed. In estimating the weight of calcium chloride required to produce brine of a given density regard must be

TABLE VII.—SHOWING PARTICULARS OF ICE-MAKING PLANT.

Tons Ice-making capacity.	No. of Tanks.	Size of Tanks.				No. of Coils.	Size of Pipe.	No. of Pipes high.	Length of Coils.	Total feet of Pipe in Tank.	Feet of Pipe per ton Ice-making capacity.	No. of Ice Moulds in Tank.	Size of Moulds.	Net weight of Ice from each Mould.	No. of Moulds per ton Ice-making capacity.	No. of Hours for freezing each Mould.	Remarks.
		Width of Tank.	Length of Tank.	Depth of Tank.	Thickness of Plate												
		Ft. Ins.	Ft. Ins.	Ins.	Ins.				Ft.	Ft.	Ft.		Ins.	Lbs.			
2	1	6 2	17 0	33	$\frac{3}{16}$	7	1	6	15	644	322	60	8×15×33	100	30	36	
3	1	9 0	17 0	33	$\frac{3}{16}$	10	1	6	15	900	300	90	8×15×33	100	30	36	
5	1	14 9	17 0	33	$\frac{3}{16}$	16	1	6	15	1,440	288	150	8×15×33	100	30	36	
10	1	19 0	29 0	33	$\frac{1}{4}$	25	1	8	17	3,400	340	192 24	11×22×33 11×11×33	200 100	20·4	48	
12·5	1	19 0	37 6	33	$\frac{1}{4}$	33	1	8	17	4,488	329	256 32	11×22×33 11×11×33	200 100	21·36	52·2	Special
15	1	19 0	43 0	33	$\frac{1}{4}$	37	1	8	17	5,032	335	288 36	11×22×33 11×11×33	200 100	20·4	48	
20	2	19 0	29 0	33	$\frac{1}{4}$	25	1	8	17	3,400	340	192 24	11×22×33 11×11×33	200 100	20·4	48	*
30	2	19 0	43 0	33	$\frac{1}{4}$	37	1	8	17	5,032	335	288 36	11×22×33 11×11×33	200 100	20·4	48	*
30	1	30 0	43 0	48	$\frac{1}{4}$	35	$1\frac{1}{4}$	8	28	7,840	261	480	11×22×45	300	16	57·6	
60	2	20 0	56 0	48	$\frac{1}{4}$	49	$1\frac{1}{4}$	10	18	8,820	294	432	11×22×45	300	14·4	51·8	
60	2	30 0	43 0	48	$\frac{1}{4}$	35	$1\frac{1}{4}$	8	28	7,840	261	480	11×22×45	300	16	57·6	*

* Twenty-ton tanks are duplicate of 10-ton tanks.
Thirty-ton " " 15-ton "
Sixty-ton " " 30-ton "

Dimensions of one tank only are given in each instance.
Average of 1-in. pipe per ton, 327 ft.
" $1\frac{1}{4}$-in. " " 272 ft.

had to the fact that the commercial calcium chloride contains a large amount of water of crystallisation. An approximate rule is to multiply the density by 20 and subtract 20·1, the remainder gives the number of pounds of commercial calcium chloride required for each gallon of brine of the required density; for example, take the required density at 1·20, then $1{\cdot}20\times20-20{\cdot}1=24-20{\cdot}1=3{\cdot}9$ lbs. per gallon of brine.

ICE MAKING.

One of the principal uses of mechanical refrigeration is in the manufacture of artificial ice, and the methods most generally used are the 'can,' 'cell,' and 'plate' systems. The foregoing are in order of cost of production and also in quality of ice made.

'Can' ice is produced simply by suspending a can of fresh water in brine at a temperature of from 10° to 15° F.

'Cell' ice is produced by circulating cold brine through the hollow walls of the cells, the cells being filled with fresh water.

'Plate' ice is produced by freezing from one side of a hollow plate only, cold brine or ammonia (or other refrigerant) being circulated through the hollow plate.

'Can' ice is the cheapest to produce and the poorest in quality. With brine at a temperature of 14° to 15° F., 11 ins. ice will take about 45 to 50 hours to freeze, and 10 ins. ice about 38 to 44 hours. The time to freeze different thicknesses of 'can' ice is approximately about equal to the square of the thickness divided by 2.

Table VII., p. 1106, compiled by Skinkle, gives particulars of some ice-making tanks, piping, moulds, etc., in actual operation.

One cubic foot of ice weighs 57½ lbs. at 32° F.

Ice expands 8½ per cent. by freezing.

One ton of refrigeration equals 318,080 B.Th.U.'s—that is, the amount of heat that would be necessary to convert a ton of ice at 32° F. into a ton of water at 32° F.

An average expenditure of from 50 kilowatt-hours to 60 kilowatt-hours is said to be required to produce one ton of ice by means of a motor-driven ammonia-compression system. The maximum demand of such an outfit reaches about 2·3 kilowatts per ton of ice-making capacity. Of this demand about 1·5 kilowatt per ton is due to the compressor itself, the remainder representing the work of the auxiliary apparatus. These figures represent the conclusions reached by a large central station company after a study of a number of ice-making plants where electrical energy is used in motor-driven compressors.

Water Coolers.

THE 'HEENAN' WATER COOLER.

The latest type of cooler recently introduced by Messrs. Heenan & Froude, Ltd., Worcester, claims a minimum consumption of water per brake horse-power-hour, and has the advantage of being compact and occupying comparatively small space. The apparatus is also self-contained. It is of the stationary type, and has no moving parts beyond the fan which circulates the air, and the pump which circulates the water.

The apparatus (as shown by fig. 4) consists of an outer casing, which is rectangular in shape, built up of mild steel plates. The base of this casing forms a tank into which the water drains after cooling, and previous to re-circulation.

The cooling effect is obtained by evenly distributing the heated water over a number of screens set up one above the other in the body of the cooler.

The water to be cooled, after passing through a strainer, enters at the top of the cooler and falls on to the screens through nozzles which feed perforated troughs. In its fall through the screens it meets a current of cold air which is forced upward through the casing by a centrifugal fan, the discharge from which is introduced to the underside of the lowest screen.

The screens are formed of phosphor-bronze metallic wool of standard size and thickness, held together between brass wire netting which is attached to galvanised angle-steel frames.

The cooling effect is positive and continuous, the cooling surface being always efficient, and the volume of air being a predetermined quantity which is not dependent on climatic conditions. By suitably proportioning the size of the machine for the duty which it has to undertake, water can be cooled down to a temperature closely approaching that of the prevailing wet bulb thermometer. Thus in hot weather—in temperate as well as in tropical climates—re-cooled water can be provided at a temperature considerably below the dry bulb temperature of the surrounding atmosphere. This feature renders the machine especially suitable for dealing with the circulating water of refrigerating plants, for which purpose large numbers of 'Heenan' coolers have been supplied. The practical value of the cooler is due not only to the saving in water but to the improved efficiency of the refrigerating plant, resulting in lower compression pressures and reduced power consumption.

'HEENAN' COOLER. TYPE 'V.'

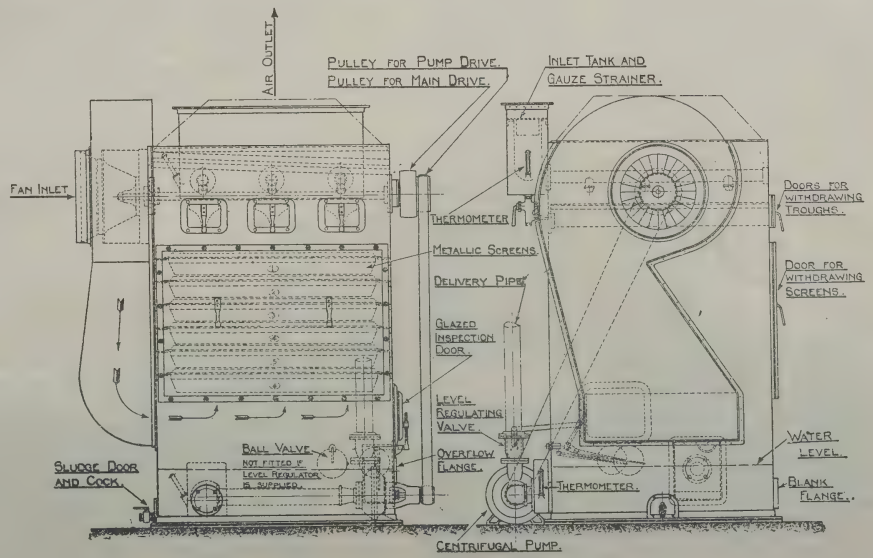


FIG. 4.

COLD STORAGE.

Temperatures below zero Fahrenheit are hardly of any utility in cold storage, although in some instances even lower temperatures are produced. A room piped about 4 cubic feet of space to 1 lineal foot 1-inch pipe direct ammonia expansion could be brought to 8° F. below zero. Theoretically a temperature of —28° F. can be produced with ammonia refrigeration at a back pressure equal to that of the atmosphere (and even lower at lower pressures), but practically it is not likely that temperatures lower than —20° F. can be obtained with ammonia, although it may be done by carbonic acid.

A small rotary fan, located in the engine room and connected with the storage rooms by galvanised iron pipes provided with gates or valves, is a very efficient device to remove foul air.

Allow 3,000 to 5,000 cubic feet space per ton of refrigeration in 24 hours in chilling rooms, and 5,000 to 8,000 cubic feet space per ton of refrigeration in 24 hours in storage rooms, according to insulation, size of rooms, and other conditions.

INSULATION.

In addition to the work of refrigeration proper a large proportion of additional work is required in taking up the leakage of heat through the walls of the refrigerating chambers, and it is necessary that these walls should be constructed with materials that will reduce this leakage to a minimum.

The materials most generally used for the purposes of insulation and which give satisfactory results are charcoal, mineral or slag wool, and cork—either granulated or compressed into blocks; these materials should be protected from moisture by a perfectly watertight and dampproof covering. Besides their non-conducting properties the materials used in insulation should possess no attraction for moisture, be uninflammable, no tendency to spontaneous combustion or smouldering, should be inodorous, possess high specific heat, and pack well in place with no tendency to settle.

The usual form of building consists of outside walls of brickwork, preferably waterproofed on the inner surface with a coating of pitch; on the inside, vertical battens are secured to the walls on which a double boarding ½ in. or 1 in. thick with a sheeting of one or two thicknesses of waterproof paper between; inside this sheeting studs are spaced at convenient intervals, having a depth of the proposed thickness of the (particular) insulating material; to the inner sides of these studs is secured a double boarding with waterproof paper between, the space between the double sheeting being well filled with the selected insulating material.

The floors, ceilings and partitions are similarly constructed, the insulating material being packed between the joists, double sheeting, between the boards of which waterproof paper is placed. The boards forming the floors are of increased thickness to correspond to the weights it has to carry.

Slag Wool Insulation.

Slag wool or silicate cotton is now being largely adopted in the place of charcoal and other materials, for the purpose of insulation, in floors, walls, and ceilings of cold storage chambers.

The application of slag wool varies with the different plans of construction and the exposure of the walls to be insulated, and in modern practice a thickness of 11 ins. in the floors and 9 ins. in the walls is frequently adopted, the fact being recognised that, although perhaps a lesser thickness would suffice, the extra first cost of the greater thickness is amply repaid by the resulting economy in working.

In a frame building where slag wool is the only protection, a minimum thickness of 11 ins. is recommended.

In all cases the insulating material should be kept dry by bituminous felt or waterproof paper applied on both sides of the material, preferably between double match-boarding, dryness being an essential point in non-conducting materials.

The slag wool should not be jammed into place to break the fibres, but should be packed lightly although compactly, care being taken to fill all the space completely.

In converting slag into slag wool, it has been found that the material increases in bulk twelve times, so that the resulting fibres encase eleven times their bulk of air. In other words, a given volume containing 100 per cent. of material before conversion into the wool contains afterwards but 8 per cent., the remaining 92 per cent. of the volume being air held in close confinement in the innumerable air cells.

The weight of slag wool of the best quality is about 10 lbs. per cubic foot, costing about 5*d.* per cubic foot.

Slag wool besides being one of the best non-conductors of heat has also the advantages of being absolutely fireproof, rot-proof, and vermin-proof.

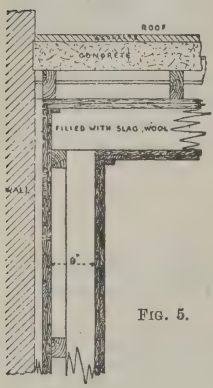


FIG. 5.

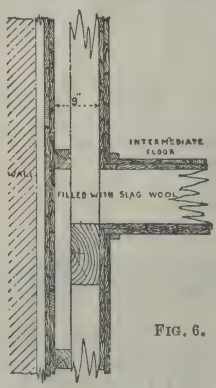


FIG. 6.

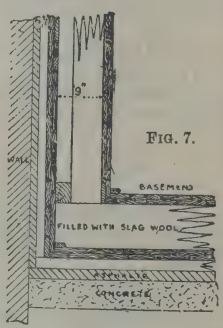


FIG. 7.

For large refrigerating stores for meat and other purposes the method adopted by Mr. Herbert Birkett, M.I.Mech.E., which is shown by figs. 5, 6, and 7, is one of the best that can be employed, waterproof insulating paper being placed between the matchboarding.

Paper Insulation.

A special description of paper known as 'Willesden' paper (*The Willesden Paper and Canvas Works, Ltd.*) has for many years been largely used in the insulation of cold storage chambers. The usual method of constructing these chambers is to erect vertical studding at certain distances apart, and to cover this on both sides with grooved and tongued matched boarding, then to cover that in its turn with the Willesden paper, and over the paper to again fix another surface of matched boarding. There is then left a space between the two erections of matched boarding and paper equal to the width of the studding used, and this space is filled with some insulating material, such as charcoal, slag wool or rice husks, etc., and the work is done. The main use of the paper is to exclude air, and the Willesden material is preferred because of its durability and strength, and because it is not affected by damp nor liable to harbour fungoid growth.

'Neponset,' 'Ko-sat,' and 'Coted' are special papers of the highest grade, which are impervious to air and moisture under the severest conditions, and are largely used for cold storage insulation. They are made in rolls 36 ins. wide containing 1,000 sq. ft.

Cork Insulation.

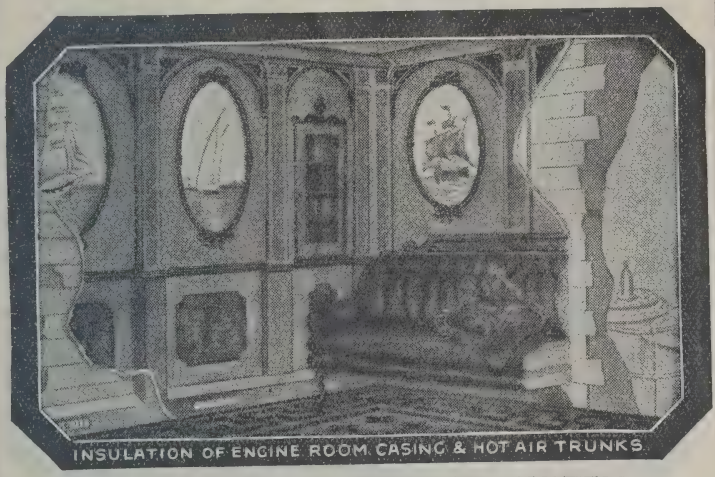
The application of compressed cork slabs for insulation purposes is becoming more general, both in the U.S. and in England. Being in the form of slabs which are manufactured in various shapes and dimensions, they are easily fitted to the walls of the chamber. By being built together in various layers, breaking joint and cemented with a waterproof cement, they form an impermeable insulating lining to the chamber.

The interior facing to the chamber is usually of a special cement, preferably without joint.

With this system of insulation (fig. 8) a less thickness is required as compared with the insulating materials of a loose granular nature, and it has the further advantage of giving an increased capacity to the chamber. *Messrs. Thomas Anderson Ltd., Liverpool*, have had considerable success in its application. The efficacy of their preparation is illustrated by a

PALLADEUM

JOINTLESS-FINISH INSULATION



INSULATION OF ENGINE ROOM CASING & HOT AIR TRUNKS.

IS THE ONLY PERFECT SYSTEM.

NO WOOD. NO IRON. NO FAULTS.
NO JOINTS. NO BOLTS. NO UPKEEP.

ECONOMICAL AND QUICKLY ERECTED.

Gives a marble-like finish to Boilers, Turbines, Bulkheads, Steampipes, Air-Trunks, etc., etc.

Has recently successfully withstood the supreme test of a THREE WEEKS' SUBMERSION without damage.

WHEN IT'S PUT IT STAYS PUT

Write for descriptive booklet to Dept. 'D'

THOMAS ANDERSON LTD.

54-62 DERBY ROAD, LIVERPOOL.

LONDON, BELFAST, GLASGOW, BARROW, SOUTHAMPTON, MANCHESTER.

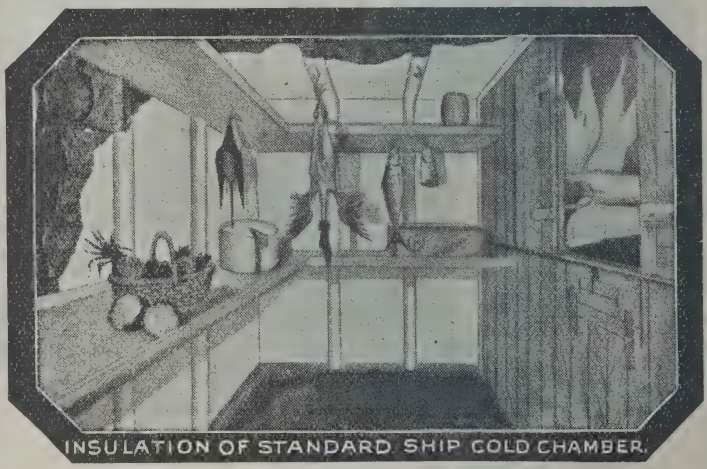
Wires: 'Centrifugal, Liverpool.' Phones: 1070 Bootle.

F. 1110

PALLADEUM

JOINTLESS-FINISH INSULATION

ADOPTED BY THE ADMIRALTY, THE WAR OFFICE, MINISTRY OF MUNITIONS, LLOYD'S AND THE LEADING SHIPBUILDERS.



INSULATION OF STANDARD SHIP COLD CHAMBER.

A WAR-TIME RECORD.

In addition to NAVAL WORK, Aerodromes, Munition Factories, Magazines, etc., PALLADEUM was fitted on

91 STANDARD SHIPS.

Estimating these at 5,000 tons each, this alone means

455,000 TONS OF SHIPPING,

CARRYING THE MOST MODERN METHOD OF PROTECTION.

COMMENT IS NEEDLESS.

Write for descriptive booklet to Dept. 'D'

THOMAS ANDERSON LTD.

54-62 DERBY ROAD, LIVERPOOL.

LONDON, BELFAST, GLASGOW, BARROW, SOUTHAMPTON, MANCHESTER.

Wires: 'Centrifugal, Liverpool.' Phones: 1070 Bootle.

F. 1111.

recent case in which the insulation of a steamship, which had been submerged for weeks, on being raised was found intact, not requiring renewal or repair.

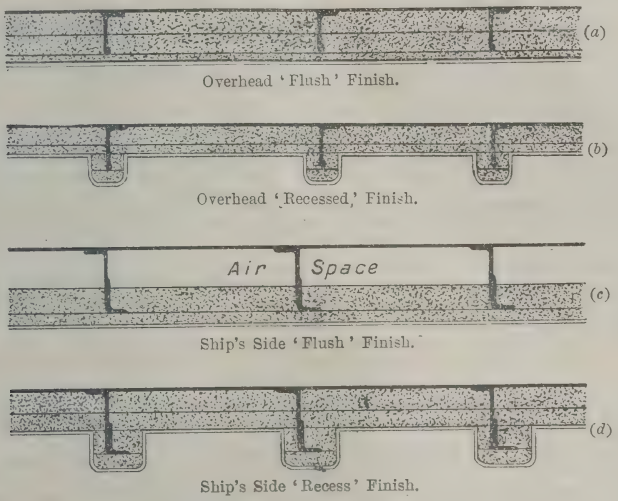


FIG. 8.—Palladeum Jointless Insulation on Cork Slabs.

Heat Transmission through Insulation.

In a building where the framework and supporting columns are of steel these should be insulated in such a manner as to prevent the conduction of heat from the outside to the interior of the building.

The outside heat is communicated to the outer surface by radiation from surrounding buildings, etc., and by contact with the air; the heat thus communicated to the surface is transmitted to the interior by conduction through the walls and insulating material; the rate will vary in proportion to the temperature difference between inside and out, also to the amount of surface exposed and to the conductivities of the materials employed.

Radiation per square foot 1° difference may be taken, assuming brick or plaster surfaces as 20 B.Th.U. per 24 hours. Loss by contact with air, per square foot 1° difference may be taken as 10 B.Th.U. per 24 hours. The combined effect of radiation and air contact, 30 B.Th.U. (reciprocal ·033). The following gives the conductivity of a few materials very generally used, per sq. foot 1 in. thick, for a temperature difference of 1°F. per 24 hours.

	B.Th.U.	(reciprocal)
Concrete	106	(·0094)
Brick	110	(·0091)
Timber from	23	(·043)
Timber to	18	(·056)
Charcoal	16	(·0625)
Charcoal (flaked)	15	(·067)
Silicate Cotton	14	(·071)
Cork	10	(·100)

To find the combined conductivity per 1° difference between the inner and outer temperatures per square foot of surface for 24 hours :—

Add the respective reciprocals of the conductivities multiplied by the thickness in inches of each of the component parts, together with the reciprocal of the effect of radiation and air contact

(·033) for each surface exposed to air and radiation; then the reciprocal of this sum will be the combined conductivity.

Taking as an example a building with 9-in. brick walls, two 1-in. boards, 9 ins. of charcoal and an inner lining of two 1-in. boards.

The combined conductivity would be

$$\frac{1}{\cdot033+(\cdot0091\times9)+(\cdot043\times2)+(\cdot0625\times9)+(\cdot043\times2)+\cdot033}=\frac{1}{\cdot8824}=1\cdot133\text{ B.Th.U.}$$

per 24 hours for each square foot of surface per degree difference of inner and outer temperatures. So that for a difference of 72° (say from 77° F. to 5° F.) the transmission of heat would be $72\times1\cdot133=81\cdot6$ B.Th.U. per square foot in 24 hours.

Multiplying this 81·6 successively by each factor of the numerator will give the respective drop in temperature in passing through each successive layer; so that $81\cdot6\times\cdot033=2\cdot7$ will be the drop in temperature of the surface of the brickwork, the surface temperature being $77-2\cdot7=74\cdot3°$; then passing through the brickwork the drop would be $\cdot0819\times81\cdot6-6\cdot6°$, so that the inner surface of the brickwork would be $74\cdot3-6\cdot6=67\cdot7°$, which would also be the temperature of the outer skin of the first boarding. Proceeding with each layer in the same manner we find 7·7° as the inside temperature of the insulation, that is, $\cdot033\times81\cdot6=2\cdot7°$ above the temperature of the air inside the chamber (5°), the temperature differences thus found between the inner and outer surfaces of each layer being those necessary in order to transmit 81·6 B.Th.U. through that layer in 24 hours.

The results thus obtained must be taken as representing the maximum of insulation. The actual results in practice will be modified by the care taken in construction, especially as to the keeping out of moisture and the selection and packing of the material. Dampness may more than double the conductivity of most of the porous materials.

Piping of Rooms.

For chilling rooms, 1 running foot of 2-inch pipe (or its equivalent) is allowed for 13 to 14 cubic feet of space in case of direct expansion, and for 7 to 8 cubic feet of space for brine circulation.

For storage rooms, 1 running foot of 2-inch pipe is allowed for 45 to 50 cubic feet in case of direct expansion, and for 15 to 18 cubic feet in case of brine circulation.

For freezing rooms, 1 running foot of 2-inch pipe is allowed for 6 to 10 cubic feet of space for direct expansion, and for 3 cubic feet of space in case of brine circulation.

Others proportion the piping by the number of animals slaughtered, allowing 13 ft. of 2-inch pipe per ox, and 6 ft. of 2-inch pipe per hog, in case of direct expansion in chilling-room. In case of brine circulation, 13 ft. of 1¼-inch pipe are allowed per hog, and 27 ft. of 1¼-inch pipe per ox. (*Siebel.*)

The moisture depositing pipes for a 20,000 cubic feet chamber occupy about 300 cubic feet, or 1½ per cent. to 2 per cent. of total space room.

About 600 square feet of pipe-surface in the case of chambers cooled by pipes will lower 20,000 cubic feet of air per hour 20° F.

SHIP REFRIGERATION.

The refinements exacted in the present-day carriage of chilled meat have led to a great improvement in the methods of control in the ship's chambers. One of the latest innovations has been the adoption of the closed system in which no open brine tanks are employed (fig. 9).

In this system the brine is pumped from the brine cooler, or evaporator, through a main to one or more distributing headers, provided with valves from which the brine leads are carried to the various sections of the chambers in the holds or 'tween decks. Corresponding collecting headers receive the return leads of the various sections; these collecting headers are in turn connected to a return brine main leading back to the evaporator.

In this system no open brine tanks are necessary and the aeration of the brine and the possibility of overflow or drawing-in of air are avoided.

In adopting this system it is necessary to employ some arrangement by which the rate of circulation is indicated; for this purpose Simpson's flowmeter, fig. 10, has been used with satisfactory results. This instrument consists of a pipe section which forms part of the circuit; this section contains a taper-shaped piece which causes a slight difference of pressure varying with the velocity of flow; this difference of pressure is measured by a very sensitive gauge which indicates the flow in gallons per hour or any other convenient unit. In order to avoid a multiplicity of gauges on a large system, the leads may be grouped into sections; the gauge pressure-tubes of the latter are connected to two headers, and provided with cocks so that any corresponding two pressure-tubes can be connected to the respective headers. These headers being connected to the gauge, the pipe sections have means for fine adjustment so that the gauges and pipe

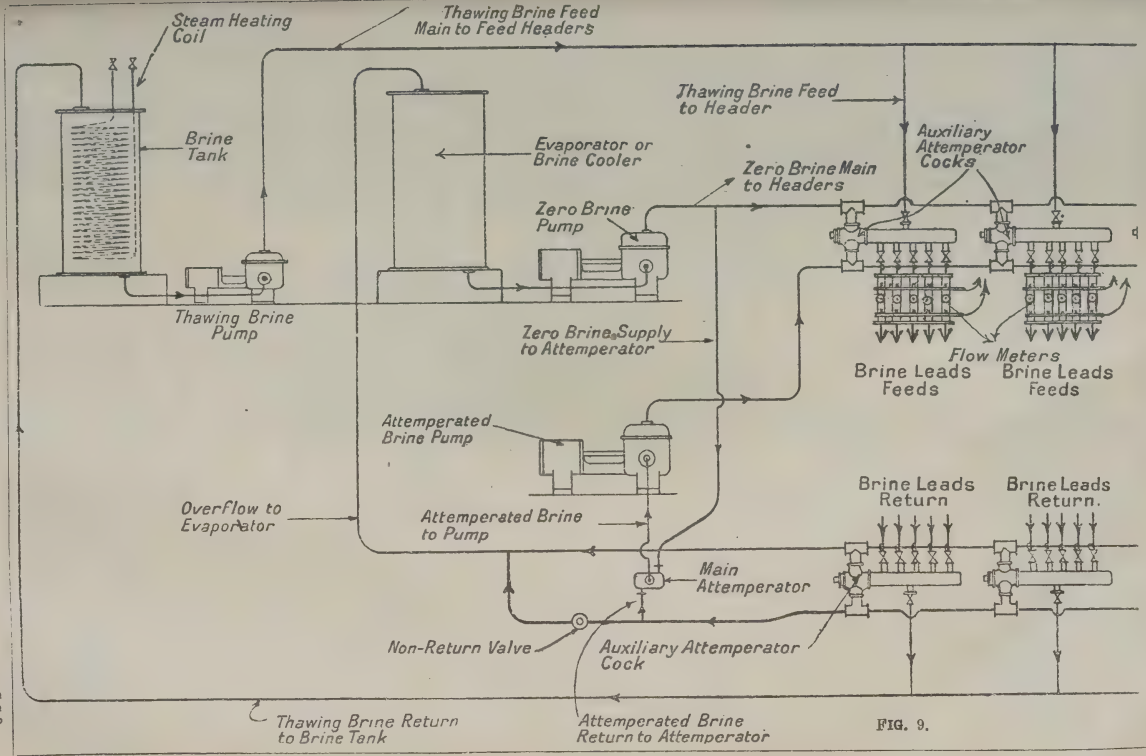

Steam Heating Coil
Thawing Brine Feed Main to Feed Headers
Thawing Brine Feed to Header
Auxiliary Attemperator Cocks
Brine Tank
Evaporator or Brine Cooler
Zero Brine Main to Headers
Zero Brine Pump
Thawing Brine Pump
Zero Brine Supply to Attemperator
Flow Meters
Brine Leads Feeds
Brine Leads Feeds
Attemperated Brine Pump
Brine Leads Return
Brine Leads Return.
Overflow to Evaporator
Attemperated Brine to Pump
Main Attemperator
Non-Return Valve
Auxiliary Attemperator Cock
Thawing Brine Return to Brine Tank
Attemperated Brine Return to Attemperator

FIG. 9.

sections are respectively interchangeable. A supplementary instrument is incorporated in each gauge for testing for leakage in the circuits.

In vessels engaged in the carriage of chilled beef and frozen meat it is necessary to adjust the temperature of the chambers apportioned to each class, both in respect to the leakage of heat from the atmosphere or sea as well as that from or to chambers adjoining which are being maintained at different temperatures. To effect this adjustment and in order to have a full flow of brine with a consequent small difference of temperature between ingoing and outcoming brine, which is necessary in the case of chilled meat, where the chamber temperatures must be kept within

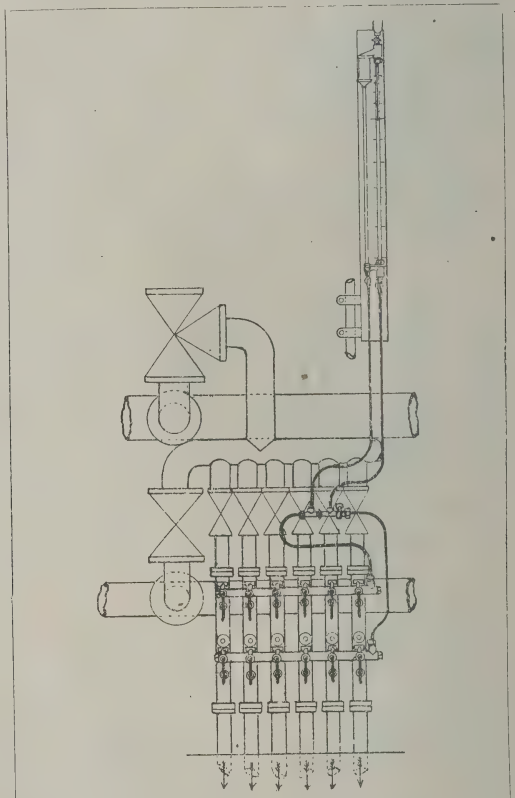


FIG. 10.—'Flowmeter' Arrangement.

narrow limits, it is convenient to have brine at two temperatures, one at the highest temperature required and cold brine as low as the coldest circulation required. These are mixed or attemperated to give any desired temperature brine between the above limits. In addition to this a thawing-off arrangement is adopted in which the brine can be heated by steam coils and circulated through any desired part of the system for the rapid thawing-off of the chambers when emptied.

The diagram fig. 10 represents such a perfected arrangement adopted by the Liverpool Refrigeration Co. Ltd. In this it will be seen that two independent pumps are provided and two systems of mains with cross-connection at each distributing header governed by an attemperating valve,

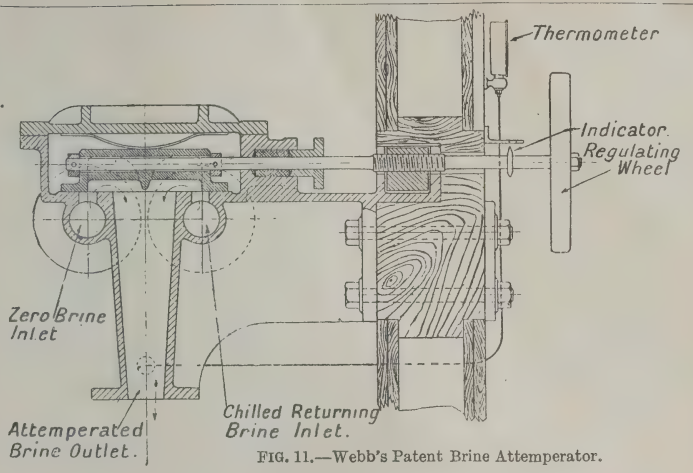


FIG. 11.—Webb's Patent Brine Attemperator.

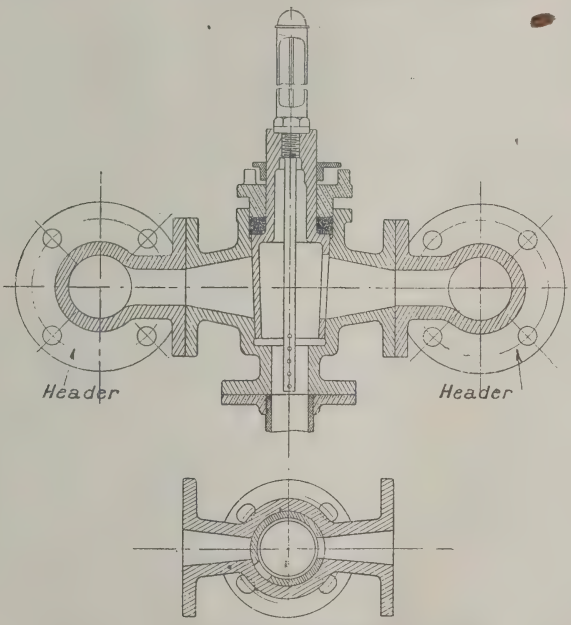


FIG. 12.—Webb's Patent Attemperator Cock (Section).

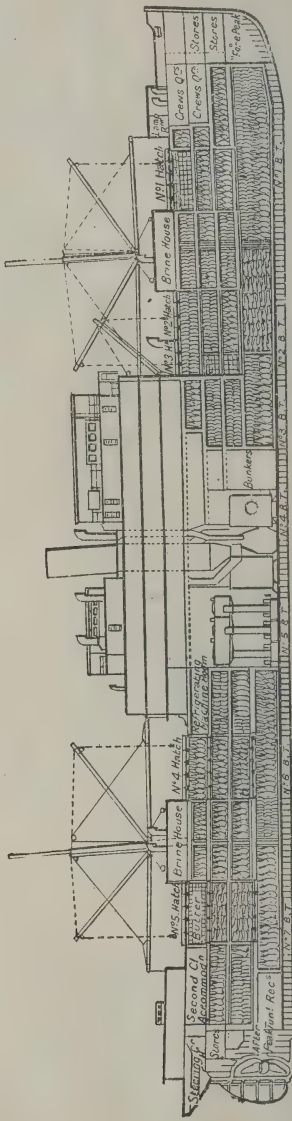


FIG. 13.—Longitudinal Section of a Modern Meat-carrying Steamer.

so that any desired proportion of cold and warm brine may be mixed to produce the desired temperature for circulation in the chambers. The return brine is collected and drawn on by the attemperated brine pump for recirculation, being mixed with cold brine at the main attemperation.

The cold brine returns are led directly to the evaporator as well as the overplus of the attemperated brine return.

Figs. 11 and 12 show the form of main attemperating valve and attemperating cock of the Liverpool Refrigeration Co., Ltd.; these as will be seen, adjust the proportion of chilled or cold brine in such a manner that the one supply is out off in proportion to the amount the other is opened up.

In the 'Octopus' Combined Feed and Return Brine Distributor and Collector (the invention of Mr. Taylor, of the Swift Beef Co.) three temperatures of brines are dealt with, giving a much larger range of control, brine being capable of distribution at a frozen, chilled, or warm temperature, or in any proportion of chilled and frozen mixed, or chilled and warm mixed, through one side of the cock and into a pipe leading from the bottom of the cock to any section or sections of brine piping; the returns from these sections being led into the bottom of the cock on the other side and, from there, diverted into the warm, chilled, or frozen returns or any combination of these in the same proportion respectively as they were delivered, so that by a single movement the distribution is proportioned and the returns are divided automatically.

The thawing-off system consists of a brine heater, an independent circulating pump, and independent mains which can be connected through cocks to each distributing and collecting header. When thawing-off, the cold and attemperated brines are both shut off from any headers corresponding to the chamber to be thawed off; the warm thawing-off brine can then be circulated in that section without interfering with the freezing or work in other chambers.

REFRIGERATING MACHINERY FOR SHIPS.

In large plants the machines should be either in duplicate or triplicate. In figs. 13 and 14 is illustrated a general arrangement of a refrigerating plant (designed by A. R. T. Woods, M.I.N.A.) dealing with 350,000 cubic feet of insulated space. The ammonia compressors and engines are triplex. The driving engine is triple expansion with three-throw crank and heavy fly-wheels, but each cylinder can be run as a high-pressure engine or the h.p and i.p. cylinders or the i.p. and l.p. cylinders can be run in combination as a compound engine. The compressors are driven off the steam cylinder tail rods, and any combination of the compressors can be worked by any of the above combinations of the steam cylinders.

The ammonia condensers are arranged in vertical sheets of piping, horizontal plates guiding the condensing water in such a manner that the cold water flows in the opposite sense to the condensing ammonia vapour: each sheet may be removed and replaced without interfering with any other sheet. The three evaporators are similar to and interchangeable with the condensers.

The brine pumps are grouped so as to be interchangeable and used in any combination either in chilling or cold brine services or on both. Another pump is provided for supplying make-up brine, for thawing off or for brine circulation in conjunction with the other pumps.

Insulation.

Over tank tops grounds 3 ins. by 3 ins. are laid athwart ships at about 18-in. centres apart, forming a three-inch air-space. These grounds support P. T. & G. boards, 1¼ in. thick laid fore and aft, and on which is placed a sheeting of tarred felt; over this a second layer of P. T. & G. boards ¾ in. thick is laid. Grounds 6 ins. by 3 ins. are then placed over the 3 ins. by 3 ins. grounds, the spaces, 6 ins. in height, between these grounds being filled with insulating material, preferably granulated cork; a decking of two layers of 1½ in. P. T. & G. boards, with tarred felt between, is laid over this.

On the ship's sides grounds are arranged, by two strips about 3 ins. by 2 ins. placed one on either side of frame and wedged in position, forming a 3-in. air-space. One-inch P. T. & G. boards are fitted, fore and aft, between the frames and nailed to the grounds; over this boarding two layers of heavy waterproof paper are tacked. Vertical grounds are then bolted to the inner sides of frames, and on to these grounds are nailed 1½-in. and ¾-in. P. T. & G. boards with two layers of heavy waterproof paper between. The space between the front and back boarding, 6 ins. to 8 ins., is filled in with insulating material, preferably granulated cork, silicate cotton, or charcoal.

In some cases the air space next to the skin of the vessel is omitted, the insulating material being filled in between the ship's plating and the inner wooden sheeting; generally a thickness of from 8½ ins. to 11 ins. of insulating material is provided for.

The insulation of the ceilings under decks is supported by grounds bolted to the beams, with a double boarding of 1 in. and ¾ in. P. T. & G. with two layers of heavy waterproof paper between. The space between the deck plating and this boarding, usually about 12 ins. under the shelter deck and 10 ins. under the lower decks, is well packed with insulating material, granulated cork, silicate cotton, or charcoal.

The bulkhead insulation follows the same form of construction generally with 8 ins. to 12 ins. of insulating material, not including the wooden sheeting. Insulated hatches are packed with

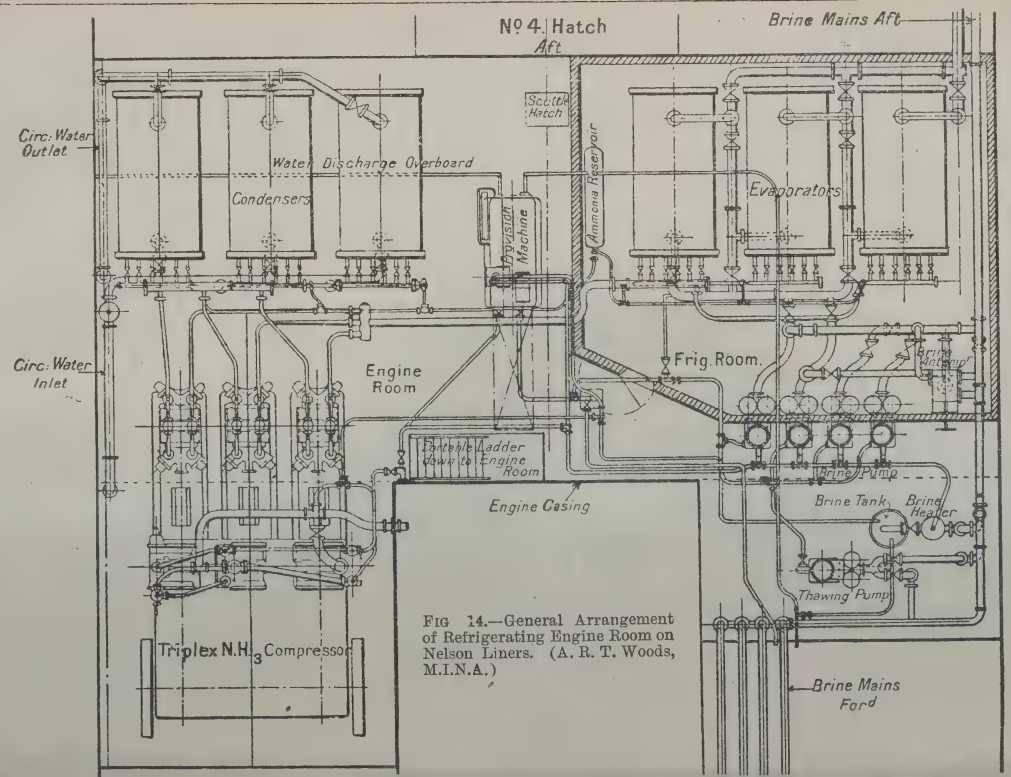


FIG 14.—General Arrangement of Refrigerating Engine Room on Nelson Liners. (A. R. T. Woods, M.I.N.A.)

cork or hair felt. The stanchions, pillars in holds, ventilating, sounding and thermometer pipes are insulated with 6 ins. of granulated cork covered with P. T. & G. boards. The beam brackets projecting inside the insulated space are covered with an inch thickness of hair felt in a casing of inch boards.

Arrangement and Temperatures of Chambers.

The *brine pipes* on ceiling, as well as the meat rails, are supported on channel bars suspended from the beams by bolt hangers. These brine pipes and rails are secured in position on the channel bars by clips, and insulated from the channel bars and clips with cork. The general allowance of brine piping is one square foot of surface of pipe to 8 cubic feet of chamber capacity.

The meat rails are placed about 12 ins. apart centres, and run fore and aft the entire length of the chamber.

The chambers over the decks are from 6 to 7 ft. in height, clear, between the floor and meat rail; each quarter of beef occupies approximately 10 cubic feet of space. The holds arranged for the carriage of chilled beef are generally from 13 to 15 ft. in height, the meat being hung in tiers of two or more quarters with long hooks or chains.

For the carriage of frozen meat where the carcases are stowed in tiers one over another, the holds ought not to exceed 20 ft. in height, in order to prevent the crushing of the lower tiers by the weight of those above. The lowest tier rests upon 3-in. by 3-in. battens placed athwart ship spaced about 12 ins. centres; battens about 2 ins. square are also placed vertically about every 12 ins. on the sides of the holds so that the cooled air may circulate between the insulation and the meat. The temperature of a chamber containing frozen meat should not be allowed to rise above 23°F. and is usually maintained at from 15° to 18°F.

Chilled meat chambers are kept at a temperature fixed generally between 28° and 30°F. The meat usually arrives on board with a temperature of 32° to 40°F., so that an amount of refrigeration has still to be done on the meat after stowage on board; this together with experience in connection with the quality of the meat, its treatment in the factory, and the estimated length of voyage are factors on which the choice of the temperature is based.

Butter is usually carried at 15° to 18°F. Fruit is carried at temperatures ranging from 33° to 50°. The temperature suitable between these limits and success in its conveyance is dependent upon the condition of the fruit when gathered, the care taken to avoid breaking or bruising the skin, the ripeness, the care bestowed upon the packing, wrapping and stowage on board, and also upon the estimated duration of voyage.

LLOYD'S RULES AND REGULATIONS RELATING TO REFRIGERATING MACHINERY AND APPLIANCES.

(*Abstract.*)

1. The insulation must be sound and in good order and of efficient construction. The details of construction showing the amount and nature of the insulating material employed in the various parts are to be reported to the Committee.

Bilge suction and sounding pipes and ballast tank air and sounding pipes, passing through insulated spaces, should be well insulated to prevent their being frozen up. No sluice valves, scuppers or drain pipes are to be fitted which will permit drainage from spaces outside of the insulated chambers into the bilges of the insulated holds.

It is recommended that the woodwork of the insulation over tunnel tops be fastened with screws to facilitate the examination of this part, and that extra strong battens of American elm be fitted upon it under the hatches. Insulated removable portions are to be arranged in the bulkhead insulation, where required, to give easy access to sluice valves and bilge suction roses. The bottoms, sides and coamings of all insulated hatches and limbers should be painted to prevent decay.

Thermometer tube flanges and covers should be arranged so that water does not run down and freeze in them when taking the temperature.

Cargo battens should be provided for the floor or deck and the sides of the chambers previous to loading the homeward cargo. Those for the sides of the chambers should be fastened, and should be at least 1½ in. in depth, and 2 ins. wide, one batten being placed over each frame or ground, the others being intermediately arranged. The battens for the floor and decks should be at least 2 ins. by 2 ins.

Where the brine system of refrigerating is employed, the brine circulating pipes and tanks should not be galvanised on the inside.

In cases where internally galvanised tanks and cooling pipes have been fitted, the brine cooling and return tanks, if closed, should be provided with two ventilating pipes communicating with the atmosphere. If the tanks are not closed, the cooling room should be efficiently ventilated.

2. The refrigerating machinery is to be of approved construction and of sufficient power to maintain the necessary low temperature in the cargo chambers in tropical climates when running 18 hours per day. For cargo capacities of above 70,000 cubic feet the machinery is to be either duplex or in duplicate.

LLOYD'S RULES, ETC., RELATING TO REFRIGERATING MACHINERY—*continued.*

3. A sufficient amount of spare gear is to be supplied and stowed where it is readily accessible.

No spare gear will, however, be required in cases where two complete sets of refrigerating machines are fitted, *each* being of sufficient power to maintain the necessary low temperature in the cargo chambers in tropical climates when running 18 hours per day, provided all the working parts of these machines are interchangeable.

When two similar machines are fitted, each connected to different cargo compartments, one set of spare gear suitable for either machiner will suffice.

WHERE ONE SINGLE DRY AIR MACHINE IS FITTED TO EACH COMPARTMENT, THE FOLLOWING WILL BE REQUIRED :—

1 crank shaft with eccentric sheaves, complete, or one half shaft if the halves are interchangeable.
1 piston rod and nuts for steam and air cylinders.
1 set of piston rod and connecting rod brasses.
1 piston, complete, for each steam and air cylinder.
1 cylinder cover for each pattern used in steam and air cylinders.
1 air pump bucket and rod.
1 circulating pump bucket and rod.
1 pair main bearing brasses, complete.
Main and cut-off valves for each steam cylinder.
Balance springs and rings for steam and air slide valves.
False valve face for each pattern fitted in steam cylinders, with screws.
1 eccentric rod for each pattern used.
1 eccentric strap for each pattern used.
1 slide valve spindle and nuts for steam and air cylinders, for each pattern used.
2 main bearing bolts.
1 set of connecting rod and piston rod bolts.
Full set of air valves and seats for air compressor.
1 set of inlet and outlet valves and 1 set valve faces (if fitted) for air expansion cylinder, with screws.
1 set of valves for air, circulating, and feed pumps.
1 set of escape valve springs.
50 suction springs.
50 delivery springs.
50 buffer springs.
6 tubes and 24 ferrules for condenser.
6 tubes for cooler.
6 tubes for air-drying chamber.
Assorted bolts, studs and nuts.
1 set of lead lined nuts for air expansion cylinder cover.
A quantity of packings and joint rings.

WHERE ONE DUPLEX OR TWO SINGLE DRY AIR MACHINES ARE FITTED TO EACH COMPARTMENT THE FOLLOWING WILL BE REQUIRED :—

1 crank shaft with eccentric sheaves complete, or one half shaft if the halves are interchangeable.
1 piston rod and nuts for steam and air cylinders.
1 set of connecting rod and crosshead brasses.
1 piston for h.p. steam cylinder.
1 piston, complete, for air compressor ; and 1 for air expansion cylinder.
1 set of piston springs for each steam cylinder.
1 cylinder cover for each pattern used in air compression and expansion cylinders.
1 air pump bucket and rod.
1 circulating pump bucket and rod.
Main and cut-off slide valves and spindles with nuts complete for h.p. steam cylinder.
Balance springs and rings for steam and air slide valves.
1 h.p. steam cylinder valve and valve face with screws.
1 eccentric sheave, strap, and rod for each pattern used.
1 slide valve spindle and nuts for steam and air cylinders for each pattern used.
2 main bearing bolts.
1 set of connecting rod and piston rod bolts.
Half set of air valves and seats for air compressor.
1 inlet and 1 outlet valve, and half set of valve faces (if fitted) for air expansion cylinder, with screws.
1 set of valves for air, circulating, and feed pumps.
1 set of escape valve springs.
20 suction springs.
40 delivery springs.

LLOYD'S RULES, ETC., RELATING TO REFRIGERATING MACHINERY—*continued.*

40 buffer springs.
6 tubes and 24 ferrules for condenser.
6 tubes for cooler and 6 for air drying chamber.
Assorted bolts, studs, and nuts.
½ set of lead-lined nuts for air expansion cylinder cover.
A quantity of packings and joint rings.

WHERE ONE SINGLE AMMONIA OR CARBONIC ANHYDRIDE COMPRESSION MACHINE IS FITTED :—

1 crank shaft with eccentric sheaves, complete, or one half shaft if the halves are interchangeable.
Piston and rods complete with nuts for each steam cylinder and gas compressor.
1 air pump bucket and rod.
1 circulating pump bucket and rod.
1 pair main bearing brasses, complete.
1 set of connecting rod and crosshead brasses.
Main and cut-off valves for steam cylinders.
1 valve spindle for each pattern used and nuts complete.
1 eccentric strap and rod for each pattern used.
1 brine pump complete.
1 cover for each pattern used.
2 main bearing bolts.
1 set of connecting rod and piston rod bolts.
1 set compressor suction and delivery valves with springs and boxes, complete.
1 set of valves for air, circulating, feed, and brine pumps.
Crank shaft for fan engine.
1 steam piston and rod, etc., for fan engine, complete.
1 pair of connecting rod brasses for fan engines, with bolts, etc., complete.
1 set of blocks for making all leather packings used.
6 tubes and 24 ferrules for condenser.
Lengths and bends of piping of each size used, together with flanges, couplings, and screwing apparatus for effecting repairs.
1 gas regulating valve.
1 distributing and 1 collecting piece with multiple branches for coils for each pattern used. If these pieces are made of forged steel, no spare pieces are required.
Sundry valves, cocks, flanges, and fittings.
Assorted bolts, studs, and nuts.
Quantity of leather packings and joint rings.

FOR AMMONIA AND CARBONIC ANHYDRIDE COMPRESSION MACHINES, THE FOLLOWING SPARE GEAR WILL BE REQUIRED, WHERE ONE DUPLEX OR TWO SINGLE MACHINES ARE FITTED TO EACH COMPARTMENT :—

1 crank shaft, or one half shaft if the halves are interchangeable.
1 steam piston rod and nut for each pattern used.
1 piston for h.p. steam cylinder, with springs, complete.
1 set of piston rings for each steam cylinder.
1 set of piston rings for each size of compressor.
1 compressor piston rod and nuts, complete, for each pattern used.
1 air pump bucket and rod.
1 circulating pump bucket and rod.
Main and cut-off slide valves for h.p. steam cylinder.
Main and cut-off valve spindles and nuts for h.p. steam cylinder.
1 eccentric sheave, strap, and rod, for each pattern used.
1 brine pump complete.
1 cover for each end of gas compressor, except where screwed plugs are used.
2 main bearing bolts.
½ set of connecting rod and piston rod bolts.
½ set compressor suction and 1 delivery valve with springs and box, complete.
1 set of valves for air, circulating, feed, and brine pumps.
1 steam piston and rod, etc., for fan engine, complete.
1 pair of connecting rod brasses for fan engines, with bolts, etc., complete.
1 set of blocks and leather for making all leather packings used.
6 tubes and 24 ferrules for condenser.
Lengths and bends of piping of each size used, together with flanges, couplings, and screwing apparatus for effecting repairs.
1 gas regulating valve.
1 distributing and 1 collecting piece with multiple branches for coils for each pattern used. If these pieces are made of forged steel, no spare pieces are required.

LLOYD'S RULES, ETC., RELATING TO REFRIGERATING MACHINERY—*continued.*

Sundry valves, cocks, flanges and fittings.
Assorted bolts, studs and nuts.
A quantity of joint rings.

In cases where an independent circulating water pump is used, and its work *cannot* be performed by the main or auxiliary engines, a duplicate pump complete should be fitted.

In cases where an independent circulating water pump is used, and its work *can* be performed by the main or auxiliary engines, a pump bucket and rod should be carried, and ½ set of valves for water end.

In cases where an independent surface condenser with air, circulating, and feed pump combined is fitted, and its work *cannot* be performed by the main engines :—

1 crank shaft with eccentric sheaves complete.
1 piston and rod complete for each pattern used.
1 eccentric strap and rod complete for each pattern used.
1 slide valve and spindle complete for each pattern used.
1 pump bucket and rod complete for each pattern used.
1 set of connecting rod and piston rod bolts and nuts.
1 set of valves for air, circulating and feed pumps.
6 condenser tubes and 12 ferrules.

In cases where an independent surface condenser with air, circulating, and feed pumps combined is fitted, and its work *can* be performed by the main engines :—

1 pump bucket and rod complete for each pattern used.
1 set of connecting rod and piston rod bolts and nuts.
½ set of valves for air, circulating, and feed pumps.
6 condenser tubes and 12 ferrules.

CONVERSION FACTORS.

Calories × 3·96 = B.Th.U.

Radiation—air contact transmission.

(Calories per sq. metre, per hour, 1° C. temp. diff.) × 4·91 = B.Th.U. per sq. ft., per 24 hours, 1° F. temp. diff.

(Calories per sq. metre, hour, 1° C. temp. diff.) × ·2044 = B.Th.U. per sq. ft., per hour, 1° F. temp. diff.

Conductivities.

(Calories per sq. metre, one metre thick, per hour, 1° C. temp. diff.) × 16 = B.Th.U. per sq. ft., one foot thick, per 24 hours, 1° F. temp. diff.

(Calories per sq. metre, one metre thick, per hour, 1° C. temp. diff.) × 192 = B.Th.U. per sq. ft. one inch thick, per 24 hours, 1° F. temp. diff.

Heat calories per kilogram × 1·8 = B.Th.U. per lb.
Atmospheres × 14·7 = lbs. per sq. inch.
Kilograms per sq. centimetre × 14·22 = lbs. per sq. inch.
Kilograms per sq. metre × ·2048 = lbs. per sq foot.
Cubic metres per kilogram × 16·06 = cubic feet per lb.

'Pulsometer' Refrigerating Plants.

The Pulsometer Engineering Co., Ltd., build apparatus for use with various refrigerants. They chiefly employ the anhydrous ammonia (NH_3) principle, as this medium renders the machine extremely easy to handle, and only requires a moderate working pressure; moreover, by the special construction of the fittings they use, which are made of forged steel cut from the solid, the loss of refrigerant is very small.

The Pulsometer Co. has also made a large number of machines on the CO_2 principle, for which system they are prepared to quote if an intending purchaser desires it.

SECTION XXIV

PART I

HYDRAULICS — GENERAL DATA OF WATER — WATER PRESSURE — HORSE POWER REQUIRED TO PUMP WATER — PRESSURE IN HYDRAULIC MAINS — DIMENSIONS AND STRENGTH OF HYDRAULIC PIPES AND CYLINDERS — PIPE UNIONS AND JOINTS (pp. 1125-1133.)

PART II

PUMPS — STEAM PUMPS — PUMP PACKING — CENTRIFUGAL PUMPS—INTERNAL COMBUSTION PUMPS—AIR LIFT PUMPS
(pp. 1135-1174.)

PART III

THE DEVELOPMENT OF WATER-POWER.

(Compiled by Arthur Surveyer, Mem. Canadian Soc. of Civil Engineers.)
(pp. 1175-1197)

PART IV


WATER PRESSURE ENGINES—PELTON WHEELS—TURBINES.
(pp. 1199-1236.)

PART V

HYDROSTATIC PRESS—HYDRAULIC RAM—HYDRAULIC LIFTS —HYDRAULIC BOLT FORCERS—HYDRAULIC RIVETERS.
(pp. 1237-1242.)

WATER POWER

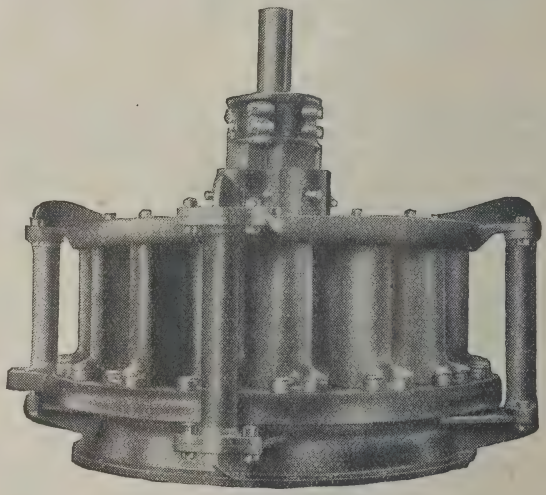TURBINES OF THE MOST MODERN DESIGN AND HIGHEST EFFICIENCY.



Type 1.—VERTICAL SHAFT TURBINE.

A turbine of this type recently gave under a Government Test the record efficiency of 92% at ¾ load. The guide vane operating gear is of special heavy construction suitable for working in connection with our Oil Pressure Governor. See description on pages 1222-1224.

HAY, MARYON & Co. LTD.

WATER POWER ENGINEERS AND CONTRACTORS

14 BRIDE LANE, LONDON, E.C.4.

Catalogue sent on application.

WORKS: Hay, Maryon Works (Stroud), Ltd., Stroud, Glos.

See also Advertisements facing pages 1198 and 1199.

SECTION XXIV

PART I

HYDRAULICS—GENERAL DATA OF WATER—WATER PRESSURE—HORSE POWER REQUIRED TO PUMP WATER—PRESSURE IN HYDRAULIC MAINS—DIMENSIONS AND STRENGTH OF HYDRAULIC PIPES AND CYLINDERS—PIPE UNIONS AND JOINTS.

General Data Regarding Water.

An imperial gallon of water at 62° F. weighs 10 lbs. avoirdupois. (See also page 208.)

Gallons multiplied by 277·420 = cubic inches. (*International Bureau of Standards, Paris.* 1921).

Gallons multiplied by ·16055 = cubic feet.

Cubic feet multiplied by 6·2288 = number of gallons.

Cubic inches multiplied by ·0036047 = number of gallons.

Cubic feet of water × 62·288 = number of lbs. weight.

Lbs. of water multiplied by ·016053 = cubic feet.

Gallons of water × ·004464 = number of tons.

Tons of water × 224 = gallons of water.

Cubic feet of water × ·027807 = number of tons.

Tons of water × 35·962 = cubic feet of water.

A pipe one yard long holds approximately (actually, 1·52 per cent. less) as many lbs. of water as the square of its diameter in inches; thus, a 6-inch pipe holds approximately 36 lbs. of water in each yard length.

Water-Pressure.

If

H = head of water in feet; P = lbs. pressure per square inch,

$$H = P \times 2{\cdot}311. \qquad P = H \times {\cdot}4326.$$

10 feet head of water gives a pressure of 4⅓ lbs. per square inch, approximately.

27·71 inches of water gives a pressure of 1 lb. per square inch.

TABLE SHOWING WATER PRESSURE CORRESPONDING TO VARIOUS FEET HEAD.

Feet Head.	Pressure in Lbs. per Square Inch.	Feet Head.	Pressure in Lbs. per Square Inch.	Feet Head.	Pressure in Lbs. per Square Inch.	Feet Head.	Pressure in Lbs. per Square Inch.	Feet Head.	Pressure in Lbs. per Square Inch.	Feet Head.	Pressure in Lbs. per Square Inch.
1	·43	21	9·08	41	17·8	61	26·4	81	35·0	110	47·6
2	·87	22	9·52	42	18·2	62	26·8	82	35·5	120	51·9
3	1·30	23	9·95	43	18·6	63	27·3	83	35·9	130	56·2
4	1·73	24	10·4	44	19·0	64	27·7	84	36·3	140	60·6
5	2·16	25	10·8	45	19·5	65	28·1	85	36·8	150	64·9
6	2·60	26	11·3	46	19·9	66	28·6	86	37·2	160	69·2
7	3·03	27	11·7	47	20·4	67	29·0	87	37·6	170	73·5
8	3·46	28	12·1	48	20·8	68	29·4	88	38·1	180	77·9
9	3·89	29	12·5	49	21·2	69	29·8	89	38·5	190	82·2
10	4·33	30	13·0	50	21·6	70	30·3	90	38·9	200	86·5
11	4·76	31	13·4	51	22·1	71	30·7	91	39·4	210	90·8
12	5·19	32	13·8	52	22·5	72	31·1	92	39·8	220	95·2
13	5·62	33	14·3	53	22·9	73	31·6	93	40·2	230	90·5
14	6·06	34	14·7 *	54	23·4	74	32·0	94	40·7	240	103·8
15	6·49	35	15·2	55	23·8	75	32·4	95	41·1	250	108·1
16	6·92	36	15·6	56	24·2	76	32·9	96	41·5	260	112·2
17	7·35	37	16·0	57	24·7	77	33·3	97	42·0	270	116·8
18	7·79	38	16·4	58	25·1	78	33·7	98	42·4	280	121·1
19	8·22	39	16·9	59	25·5	79	34·2	99	42·8	290	125·5
20	8·65	40	17·3	60	26·0	80	34·6	100	43·3	300	129·8

* Atmospheric pressure.

TABLE SHOWING THEORETICAL HORSE-POWER REQUIRED TO RAISE 1,000 GALLONS (160·6 cubic feet) OF WATER PER HOUR TO VARIOUS HEIGHTS.

Height in Feet.	Horse-power.	Height in Feet.	Horse-power.	Height in Feet.	Horse-power.	Height in Feet.	Horse-power.	Height in Feet.	Horse-power.	Height in Feet.	Horse-power.
1	·005	21	·106	41	·207	61	·308	81	·409	110	·556
2	·010	22	·111	42	·212	62	·313	82	·414	120	·606
3	·015	23	·116	43	·217	63	·318	83	·419	130	·657
4	·020	24	·121	44	·222	64	·323	84	·424	140	·707
5	·025	25	·126	45	·227	65	·328	85	·429	150	·758
6	·030	26	·131	46	·232	66	·333	86	·434	160	·808
7	·035	27	·136	47	·237	67	·338	87	·439	170	·859
8	·040	28	·141	48	·242	68	·343	88	·444	180	·910
9	·045	29	·146	49	·247	69	·348	89	·449	190	·960
10	·051	30	·152	50	·253	70	·354	90	·455	200	1·010
11	·056	31	·157	51	·258	71	·359	91	·460	210	1·061
12	·061	32	·162	52	·263	72	·364	92	·464	220	1·111
13	·066	33	·167	53	·268	73	·369	93	·470	230	1·162
14	·071	34	·172	54	·273	74	·374	94	·475	240	1·212
15	·076	35	·177	55	·278	75	·379	95	·480	250	1·263
16	·081	36	·182	56	·283	76	·384	96	·485	260	1·313
17	·086	37	·187	57	·288	77	·389	97	·490	270	1·364
18	·091	38	·192	58	·293	78	·394	98	·495	280	1·414
19	·096	49	·197	59	·298	79	·399	99	·500	290	1·465
20	·101	40	·202	60	·303	80	·404	100	·505	300	1·515

In practice about 33 per cent. more power than the theoretical may be required.

TABLE SHOWING HORSE-POWER REQUIRED TO PUMP WATER TO GIVEN VERTICAL HEIGHTS
(Calculated at 33 per cent. above theoretical value.)

Gallons per Hour	Height in Feet.											
	20	30	40	50	60	70	80	90	100	200	300	400
	Horse-power.											
300	·0403	·0605	·0806	·1008	·1209	·1411	·1612	·1814	·2015	·4031	·6046	·8062
350	·0470	·0705	·0941	·1176	·1411	·1646	·1881	·2116	·2351	·4703	·7054	·9405
400	·0537	·0806	·1075	·1344	·1612	·1831	·2150	·2418	·2687	·5374	·8062	1·075
450	·0605	·0907	·1209	·1512	·1814	·2116	·2418	·2721	·3023	·6046	·9069	1·209
500	·0672	·1008	·1344	·1680	·2015	·2351	·2687	·3023	·3359	·6718	1·008	1·344
550	·0739	·1108	·1478	·1847	·2217	·2586	·2956	·3325	·3695	·7390	1·108	1·478
600	·0806	·1209	·1612	·2150	·2418	·2822	·3225	·3628	·4031	·8062	1·209	1·612
650	·0873	·1310	·1747	·2183	·2620	3057	·3493	·3930	·4367	·8733	1·310	1·747
700	·0940	·1411	·1881	·2351	·2822	·3292	·3762	·4232	·4703	·9405	1·411	1·881
750	·1008	·1512	·2015	·2520	·3023	·3527	·4031	·4535	5039	1·008	1·512	2·015
800	·1075	·1612	·2150	·2687	·3225	·3762	·4300	·4837	·5374	1·075	1·612	2·150
850	·1142	·1713	·2284	·2855	·3426	·3997	·4568	·5139	·5710	1·142	1·713	2·284
900	·1209	·1814	·2418	·3023	·3628	·4232	·4837	·5442	·6046	1·209	1·814	2·418
950	·1276	·1915	·2503	·3191	·3829	·4467	·5106	·5744	·6382	1·276	1·915	2·503
1,000	·1344	·2015	·2687	·3359	·4031	·4703	·5374	·6046	·6718	1·344	2·015	2·687
2,000	·2687	·4031	·5374	·6718	·8062	·9405	1·075	1·209	1·344	2·687	4·031	5·374
3,000	·4031	·6046	·8062	1·008	1·209	1·411	1·612	1·814	2·015	4·031	6·046	8·062
4,000	·5374	·8062	1·075	1·344	1·612	1·881	2·150	2·418	2·687	5·374	8·062	10·75
5,000	·6718	1·008	1·344	1·680	2·015	2·351	2·687	3·023	3·360	6·718	10·08	13·44
6,000	·8062	1·209	1·612	2·015	2·418	2·822	3·225	3·628	4·031	8·062	12·09	16·12
7,000	·9405	1·411	1·881	2·351	2·822	3·292	3·762	4·232	4·703	9·405	14·11	18·81
8,000	1·075	1·612	2·150	2·687	3·225	3·762	4·300	4·837	5·374	10·75	16·12	21·50
9,000	1·209	1·814	2·418	3·023	3·628	4·232	4·837	5·442	6·046	12·09	18·14	24 18
10,000	1·344	2·015	2·687	3·359	4·031	4·703	5·374	6·046	6·718	13·44	20·15	26·87
20,000	2·687	4·031	5·374	6·718	8·062	9·405	10·75	12·05	13·44	26·87	40·31	53·74
30,000	4·031	6·046	8·062	10·08	12·09	14·11	16·12	18·14	20·15	40·31	60·46	80·62
40,000	5·374	7·062	10·75	13·44	14·12	18·81	21·50	24·18	26·87	53·74	70·62	107·5
50,000	6·718	10·08	13·44	16·80	20·15	23·51	26·87	30·23	33·59	67·18	100·8	134·4
60,000	8·062	12·09	16·12	20·15	24·18	28·22	32·25	36·28	40·31	80·62	120·9	161·2
70,000	9·405	14·11	18·81	23·5	28·22	32·92	37·62	42·32	47·03	94·05	141·1	188 1

(*H. R. Kempe.*)

Horse-power required to Pump Water.

1 H.P. indicated will raise about 3,000 gallons of water per hour 50 feet high.

To pump 1 gallon of water per minute against a pressure of p lbs. per square inch requires $p \times \cdot0007$ H.P.

Allowing 40 per cent. for friction, the following shows the H.P. required to pump 1 gallon of water per minute at various pressures :—

Pressure per square inch, in lbs.	500	700	1000	1200	1500	2000	2250	2500	5000
Horse-power	·49	·69	·98	1·18	1·47	1·96	2·21	2·45	4·90

The *cost of lifting* 1 ton 50 feet is, in the case of the London Hydraulic Power Company, sometimes as low as $\frac{1}{4}d$.

Speed of Water should not, as a rule, exceed 100 feet per minute with 700 lbs. pressure. In the mains of the London Hydraulic Power Company the delivery is 1,040 gallons per minute, at a velocity averaging 2·83 feet per second, or 170 feet per minute. The loss of head due to this velocity is 22·896 feet per 1,000 yards, by the formula :—

$$\frac{(\text{Gallons per minute})^2 \times \text{length of pipe in yards})}{(3 \times \text{diameter of pipe in inches})^5}$$

The most distant point of the main is 5,320 yards, or just over 3 miles, from the accumulators. In a circuit of 5 miles the normal difference of pressure, or loss of head, was 20 feet head.

Pressure in Hydraulic Mains.

The average working pressure is 700 lbs. per square inch with accumulators, but varies from 300 to 1,500 lbs. per square inch. The pressure in the mains of the London Hydraulic Power Company averages 700 lbs., the actual pressure at the accumulators being 750 lbs.

700 lbs. per square inch = 549·78 lbs. per circular inch, equivalent to a head of 1,618 feet.

EFFECTIVE PRESSURE WITH 700 LBS. AT ACCUMULATOR.

Ratio of multiplying power . .	2 to 1	4 to 1	6 to 1	8 to 1	10 to 1	12 to 1	14 to 1	16 to 1
Multiply by . .	·8	·76	·72	·67	·63	·59	·54	·5
Effective pressure in lbs.	560	532	504	469	441	413	378	350

Dimensions of Hydraulic Pipes and Cylinders.

TABLE OF THICKNESS OF HYDRAULIC PIPES.

Description.	Wrought Iron, to stand 4,000 Lbs. per Square Inch.										Cast Iron, to stand 700 Lbs. per Square Inch.					
Internal diameter, in inches .	$\frac{3}{8}$	$\frac{1}{2}$	$\frac{5}{8}$	$\frac{3}{4}$	$\frac{7}{8}$	1	$1\frac{1}{8}$	$1\frac{1}{4}$	$1\frac{3}{8}$	$1\frac{1}{2}$	$1\frac{5}{8}$	$1\frac{1}{2}$	$1\frac{3}{4}$	2	$2\frac{1}{4}$	$2\frac{1}{2}$	3	3
External diameter in inches .	$\frac{3}{4}$	1	$1\frac{1}{8}$	$1\frac{1}{4}$	$1\frac{3}{8}$	$1\frac{1}{2}$	$1\frac{5}{8}$	$1\frac{3}{4}$	$1\frac{7}{8}$	2	$2\frac{1}{8}$	$2\frac{3}{8}$	$2\frac{3}{4}$	$3\frac{1}{8}$	$3\frac{9}{16}$	$3\frac{15}{16}$	$4\frac{1}{4}$	$5\frac{1}{8}$
Number of threads per inch . .	14	14	14	11	11	11	11	11	11	11	11							

(1)

The external diameter, D, may be calculated from the formula :—

$$D = d\left(\frac{p}{f} + 1\right),$$

where,

d = diameter of bore of pipe, in inches ; p = pressure, in lbs., per square inch ; f = 4.000 for wrought iron, and 1,200 for cast iron.

(2)

$$T = \frac{(P + 100)\,D}{0{\cdot}4\,S} + 0{\cdot}333\left(1 - \frac{D}{100}\right),$$

where,

T = thickness of pipe in ins.; D = interior diameter of pipe in ins.; P = pressure of water in lbs. per sq. in.; S = ultimate tensile strength of cast-iron in lbs. per sq. in. (taken as 18,000 lbs.).

This formula gives the weight and thickness for good, tough, and elastic cast-iron pipes, covering the ordinary range of static pressures of public water supplies.

TABLE CALCULATED FROM FOREGOING FORMULA.

Head of water in ft.	115	150	200	250	300
Pressure in lbs.	50	65	87	109	130
Diameter in Ins.	Thickness in Ins.				
4	—	—	—	0·40	0·45
6	—	—	—	0·46	0·50
8	—	—	—	0·52	0·55
10	—	—	—	0·60	0·63
12	—	0·57	0·61	0·65	0·69
14	—	0·61	0·65	0·70	0·75
16	—	0·65	0·70	0·75	0·81
20	—	0·73	0·79	0·85	0·92
24	—	0·80	0·87	0·95	1·03
30	—	0·92	1·00	1·10	1·20
36	0·93	1·03	1·13	1·25	1·36
42	1·01	1·14	1·27	1·40	—
48	1·15	1·25	1·40	1·55	—
54	1·23	1·35	1·53	—	—
60	1·35	1·50	1·70	—	—

(*R. D. Wood & Co., America.*)

(3)

$$T = \frac{(P + L)\,R}{3{,}300} + 0{\cdot}25.$$

where

T = thickness of pipe in ins.; P = static pressure in lbs. per sq. in.; R = inside radius of pipe in ins.; L = pressure in lbs. allowed for water hammer; 0·25 = a constant allowance for inequality in manufacture, deterioration, and rough handling; 3,300 = one-fifth of the tensile strength of cast-iron, which is taken to be 16,500.

The values of L—the allowance for water hammer—for different sizes of pipe are as follows, the allowance decreasing as the diameter and thickness of pipe increase :—

Diameter of Pipe, Ins.	Value of 'L,' Lbs.	Corresponding Head, Ft.
3, 4, 6, 8, or 10	120	277
12 or 14	110	254
16 or 18	100	231
20	90	208
24	85	196
30	80	185
36	75	173
42, 48, 54 or 60	70	162

For a static pressure of 100 lbs. per sq. in. a 6 in. pipe need be only 0·10 in. thick. Such thin pipe, however, could not well be made or handled, and allowance must be made (as above) for shock due to water hammer, for roughness in handling, for inequality in manufacture, and for deterioration. (*D. Fitzgerald, America*).

Thickness of Hydraulic Cylinders.

If T = thickness of metal in inches, P = bursting pressure in lbs. per square inch, R = radius of cylinder in inches, and C = constant (16,000 for cast iron, 34,000 for brass, 50,000 for wrought iron, and 70,000 for steel),

$$T = \frac{PR}{C - P}.$$

If D = external diameter of cylinder in inches, and d = internal diameter in inches, P and C being as above, then

$$D = d\sqrt{\frac{C + P}{C - P}}.$$

Strength of Hydraulic Cylinders

If f = allowable stress in lbs. per sq. in. ; P = working pressure in lbs. per sq. in. ; d = inside diameter in ins. ; D = outside diameter in ins. ; then

$$D = d \times \text{anti-log}\left(\frac{P}{p} \cdot 4343\right). \qquad (Clark.)$$

EXAMPLE.—If P = 3,000 lbs. per sq. in. ; f = 8,000 lbs. per sq. in. ; d = 30 ins. ; then

$$\frac{P}{p} \cdot 4343 = \frac{3,000}{8,000} \cdot 4343 = \cdot 16280 ;$$

anti-log.* of $\cdot 16286 = 1 \cdot 455$ (page 85) ;

therefore $D = 30 \times 1 \cdot 455 = 43 \cdot 65$ ins.

Size of Hydraulic Mains.

The largest mains used for hydraulic purposes are 7½ inches in diameter. The working stress on the metal due to working pressure is 2,800 lbs. per square inch. The mains are usually tested to a water-pressure of 2,500 lbs. per square inch before laying, and to a pressure of 800 to 1,600 lbs. per square inch after laying.

Pipe Unions and Joints.

For wrought-iron pipes up to 2 inches in diameter, such as are used for the connecting-pipes to hydraulic machines, the unions are generally of brass, and of the form shown by fig. 1. For

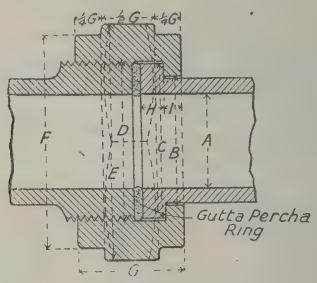


FIG. 1.

main cast-iron pipes the unions are made by means of elliptical flanges (fig. 1) formed on the ends of the pipes, the inner faces of the flanges being turned so that one pipe can enter a little distance into the other ; a recess is left between them, to receive a gutta-percha ring, whose outside diameter is about 4 times the inner.

---

* Number corresponding to logarithm.

DIMENSIONS OF PRESSURE UNIONS.

700 Lbs. per Square Inch.									1,500 Lbs. per Square Inch.								
Dimensions of Parts.									Dimensions of Parts.								
A	B	C	D	E	F	G	H	I	A	B	C	D	E	F	G	H	I
Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	In.	In.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	In.	In.
$\frac{1}{2}$	$\frac{7}{8}$	$1\frac{1}{8}$	$1\frac{5}{16}b$	$1\frac{43}{64}$	$1\frac{5}{8}$	1	$\frac{1}{4}$	$\frac{3}{16}$	$\frac{1}{2}$	$\frac{7}{8}$	$1\frac{1}{8}$	$1\frac{5}{16}b$	$1\frac{55}{64}$	$1\frac{3}{4}$	$1\frac{1}{8}$	$\frac{1}{4}$	$\frac{1}{4}$
$\frac{3}{4}$	$1\frac{1}{8}$	$1\frac{7}{16}$	$1\frac{5}{8}f$	$2\frac{3}{64}$	2	$1\frac{1}{4}$	$\frac{1}{4}$	$\frac{1}{4}$	$\frac{3}{4}$	$1\frac{1}{8}$	$1\frac{7}{16}$	$1\frac{5}{8}f$	$2\frac{7}{64}$	$2\frac{1}{2}$	$1\frac{1}{8}$	$\frac{1}{4}$	$\frac{1}{4}$
1	$1\frac{3}{8}$	$1\frac{11}{16}$	$1\frac{7}{8}f$	$2\frac{33}{64}$	$2\frac{5}{16}$	$1\frac{3}{8}$	$\frac{1}{4}$	$\frac{1}{4}$	1	$1\frac{3}{8}$	$1\frac{11}{16}$	$1\frac{7}{8}f$	$2\frac{37}{64}$	$2\frac{7}{16}$	$1\frac{3}{8}$	$\frac{5}{16}$	$\frac{5}{16}$
$1\frac{1}{4}$	$1\frac{1}{16}$	$1\frac{15}{16}$	$2\frac{1}{16}b$	$2\frac{3}{4}$	$2\frac{1}{2}$	$1\frac{1}{2}$	$\frac{1}{4}$	$\frac{1}{4}$	$1\frac{1}{4}$	$1\frac{11}{16}$	$1\frac{15}{16}$	$2\frac{1}{16}b$	$2\frac{1}{2}b$	$3\frac{1}{16}$	$2\frac{15}{16}$	$1\frac{1}{2}$	$\frac{5}{16}$
$1\frac{1}{2}$	$1\frac{5}{16}$	$2\frac{3}{16}$	$2\frac{5}{16}b$	$3\frac{1}{16}$	$2\frac{7}{8}$	$1\frac{5}{8}$	$\frac{5}{16}$	$\frac{5}{16}$	$1\frac{1}{2}$	$1\frac{15}{16}$	$2\frac{3}{16}$	$2\frac{5}{16}b$	$2\frac{3}{8}$	$3\frac{11}{32}$	$3\frac{1}{8}$	2	$\frac{3}{8}$
$1\frac{7}{8}$	$2\frac{3}{16}$	$2\frac{7}{16}$	$2\frac{9}{16}f$	$3\frac{11}{32}$	$3\frac{1}{8}$	2	$\frac{5}{16}$	$\frac{5}{16}$	$1\frac{7}{8}$	$2\frac{3}{16}$	$2\frac{7}{16}$	$2\frac{9}{16}f$	$3\frac{55}{64}$	$3\frac{3}{8}$	$2\frac{1}{4}$	$\frac{3}{8}$	$\frac{3}{8}$
2	$2\frac{7}{16}$	$2\frac{13}{16}$	$3f$	$3\frac{47}{64}$	$3\frac{3}{8}$	$2\frac{1}{4}$	$\frac{5}{16}$	$\frac{5}{16}$	2	$2\frac{7}{16}$	$2\frac{13}{16}$	$3f$	$4\frac{5}{64}$	$3\frac{7}{8}$	$2\frac{1}{2}$	$\frac{7}{16}$	$\frac{7}{16}$

b = bare. f = full

DIMENSIONS OF CAST-IRON PRESSURE FLANGES, 700 LBS.

Dimensions of Parts.								Dimensions of Parts.							
A	B	C	D	E	F	G	H	A	B	C	D	E	F	G	H
Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.
$2\frac{1}{2}$	$3\frac{5}{8}$	$5\frac{1}{2}$	$8\frac{1}{4}$	$4\frac{3}{4}$	$1\frac{5}{8}$	1	$\frac{7}{8}$	4	$5\frac{1}{4}$	$7\frac{7}{8}$	$10\frac{3}{4}$	7	$1\frac{3}{4}$	$1\frac{1}{4}$	$1\frac{1}{4}$
3	$4\frac{1}{2}$	$6\frac{1}{2}$	$9\frac{1}{2}$	$5\frac{3}{4}$	$1\frac{1}{2}$	$1\frac{1}{2}$	1	$4\frac{1}{2}$	$6\frac{3}{8}$	$8\frac{5}{8}$	12	$7\frac{5}{8}$	$1\frac{3}{8}$	$1\frac{1}{2}$	$1\frac{1}{4}$
$3\frac{1}{2}$	$5\frac{1}{8}$	$7\frac{1}{4}$	$10\frac{1}{2}$	$6\frac{3}{8}$	$1\frac{5}{8}$	$1\frac{1}{4}$	$1\frac{1}{8}$	5	7	$9\frac{1}{2}$	13	$8\frac{1}{4}$	2	$1\frac{3}{8}$	$1\frac{1}{4}$

Mains fitted with flanged joints of the description shown by fig. 2 can be made absolutely tight and free from leakage. The flanges are placed in a horizontal position in laying.

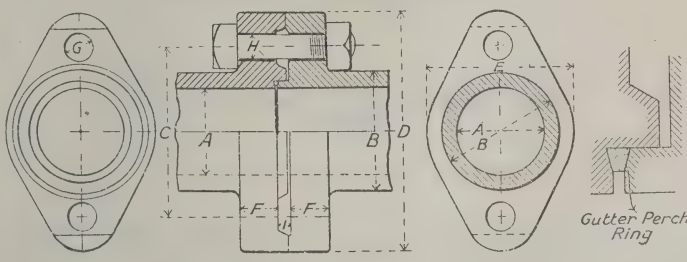


FIG. 2.

Mr. Ellington (engineer of the London Hydraulic Company) found that fractures in the pipes occurred by the breaking off of one of the bolt lugs. By placing the lugs a little farther back on the pipe the strength was found to be greater. It is probable that the slight flexibility of the pipe line which this kind of joint allows is an important element in its success.

On low-pressure hydraulic systems ordinary socket joints can be used.

In the *Philosophical Magazine* the Earl of Berkeley and Dr. Burton have described a simple form of joint packing, which is, they state, tight to start with and maintains this tightness up to the highest pressures they have employed, which have attained 1,500 atmospheres, or

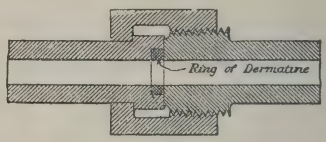


FIG. 3.

say, 10 tons per square inch. The pipe ends (fig. 3) are faced, and a recess is cut in one to take a ring of dermatine; this ring must be slightly thicker than the depth of the recess so that it is slightly compressed when the joint is tightened up. Either red or black dermatine may be used, but the red, being harder, is more easily machined. The joint is said to be equally good for water or oil, and is as suitable for a flanged joint as for a screwed coupling. It is also said to be as satisfactory with large pipes as with small.

THE VICTAULIC JOINT.

(*The Victory Pipe Joint Co., Ltd.*)

This joint (fig. 4) consists of a double 'U' washer or ring connected on the outside diameter by a bridge, but with 'inturned' lips—which exercise an initial grip on the pipe as it is placed in position. This feature of the joint renders it 'leakproof' against pressures, zero, and also under vacuum. The flexible leakproof ring, contained in a housing or shell, permits the provision of a small clearance between housing and pipe, so as to give slight angular flexibility,

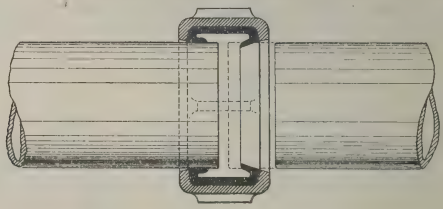


FIG. 4.—Victaulic Joint, 'A' Type.

hence subsidence or vibration has no effect on the leakproof qualities of the joint. The flexibility also allows for expansion: each individual length of pipe is free to expand separately. The arrangement of the joint affords a ready and quick means of 'breaking joint' for cleansing, the replacement of a section, the insertion of a junction piece. It is as easily dismantled as inserted, and occupies but little space. Two general types made are the 'Floating' A type (fig. 4), for pipe lines which are anchored, and the 'Location' B type, which positively prevents separation of the pipe, and does not interfere with its flexibility or expansion; it is used for high pressures and unanchored lines. The Victaulic leakproof ring is made of a material which is not affected by the liquids or gases passing through the pipes. For use on water-pipe systems the ring is made of the best rubber, which is very durable. For oil, benzine, and similar liquids, and also for chemicals, a special material, known as 'Victaulite,' is employed for the ring, which material is very durable, resists deterioration, and maintains an absolutely leakproof joint. A further development of the joint is its application to the stuffing-boxes of steam and water valves, the sealing effect being claimed to be far superior to that of the gland, and no adjustment is needed.

Cement Joints for Cast-Iron Water Mains.

(1.)

The pipe is placed and spaced in the usual manner. A thin backing of the best dry jute is used instead of oakum, as the jute is free from oil and grease, which should be avoided. Portland cement is placed dry on a piece of canvas (usually a cement sack ripped open) and moistened so that when thoroughly mixed by hand it will be of such a consistency that when gripped tight it will take the form of the hand and when dropped 12 ins. will crumble. The canvas containing the cement is placed under the bell, and the cement tamped into place by hand with a caulking iron until the bell is about half full. It is then caulked with heavy blows until the cement is thoroughly packed in the back of the socket. The process is continued until the bell is packed solid out to the face. A small bead of neat cement is then put on (this is essential), the caulking iron being used as a trowel, and, as soon as the initial set of the cement in the bead has taken place, the joint is covered with earth to protect it from the air and sun. In back-filling the excavated material is always settled with water, which helps to cure the exposed portion of the joint. The joint is allowed to stand forty-eight hours before the pressure is turned on and the main put into service. At Long Beach, California, there are now sixty miles of cast-iron water mains, ranging from 4 ins. to 24 ins. in diameter, laid with joints of this type. All these pipes are under pressures ranging from 40 lbs. to 80 lbs. per sq. in., and are giving satisfaction.

(*Clark H. Shaw, the American Society of Civil Engineers.*)

(2.)

A method of cement jointing cast-iron water pipes is described by Mr. G. W. Pracy in the *Journal of the American Waterworks Association*. The spigot end of the pipe projects into the bell just the same as for a lead joint, and two rings of jute or yarn are placed round the pipe and driven into the bell in the regular manner. The jute used must be free from oil or tar. Neat cement of standard Portland cement brand is used. The mix is very dry, the proportions being about 13 lbs. to 14 lbs. of cement to 1 lb. of water. The operator takes a handful of cement, and with an ordinary caulking iron forces the cement into the joint until full. He then takes a caulking hammer and caulks the joint until the cement is rammed in as hard as possible. The joint is then again filled and the operation repeated until the joint is completely filled with the rammed cement. At first a bead was put around outside the bell, but this was discontinued as being unnecessary. After the joint is finished it is covered with earth while the cement is hardening. In one case over a mile of piping jointed in this manner has been in use under 175 lbs. per square inch pressure for more than two years without requiring any repairs. It is claimed the method is cheaper than lead joints, and one indirect advantage is that the cement joint is an insulating joint, which tends to reduce damage from electrolytic action.

SECTION XXIV

PART II

PUMPS — STEAM PUMPS — PUMP PACKING — CENTRIFUGAL PUMPS—INTERNAL COMBUSTION PUMPS—AIR LIFT PUMPS.

PUMPS.

The surface of the water to be raised should not be more than 25 feet below the movable valve.

Especially for small pumps, the suction pipe of a pump should fall all the way from the pump to the supply well. Any upward bend in the suction pipe introduces an air trap and may seriously diminish the performance of the pump.

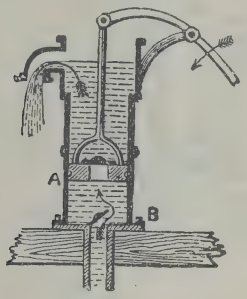


FIG. 1.




FIG. 2.



FIG. 3.

THE SUCTION PUMP.

This form of pump, which is shown by fig. 1, consists of a cylinder, called 'the barrel,' with valve, B, in which works a piston, A, called 'the box,' with valve in it, both valves opening upwards. The piston is attached to a rod and worked by a handle. When the handle is raised the piston is depressed: the valve A opens upwards, allowing the water or air below it to escape into upper part of cylinder. When the piston is raised the valve in it is closed, the water above is lifted up through the spout, the water from below lifts the valve at B, and rushes up to fill the vacuum caused by the raising of the piston.

If the valves are very dry a little oil should be poured on them. A little water poured on the piston before commencing to work it makes it air-tight.

LIFTING PUMP.

The suction pump is converted into a lifting pump by attaching a pipe in place of a spout at C (fig. 2), with a valve in it, opening upwards to prevent the return of the water. A stuffing-box is provided for the piston-rod to work in at E. Each time the piston, A, is raised the water above it is forced up the pipe, and, as the piston descends, the valve C prevents the return of the water from above. It is clear that the man who pumps must exert at each upward stroke of the piston as much strength as is necessary not only to raise a cylinder full from below, but also to lift the column of water in the pipe above.

The valve C is not necessary to the action of the pump, because, the barrel being full, the valve B retains all the water. It is used more as an additional check. The pump would also act if only valve C were in and B removed.

Single-acting Force Pump.

This form of pump, shown by fig. 3, is used to force up water to a height. The piston is made without a valve. The delivery pipe is at bottom of piston: it has a valve opening upwards at C to prevent the return of the water. When the piston is raised the valve B opens and the water rushes into the cylinder: when the piston descends valve B closes, valve C opens, and the water is forced up the pipe. In this pump the force is required for the down stroke. The top of the cylinder E need not be closed; a little water poured in above the piston makes it air-tight.

Plunger Pump.

Sometimes a solid plunger, A (fig. 4), is substituted for the piston, to avoid the expense of turning the cylinder true, and also because it resists better the wear from grease and dirt. At each stroke it raises a volume of water equal to that of the plunger.

Double-acting Force Pump.

This pump (fig. 5) sends up water both at the up and down stroke. At the up stroke the water above the piston is forced through the valve A, while that below enters the piston at the valve D; at the down stroke the water is forced through the valve C, whilst it enters above the piston at the valve B.

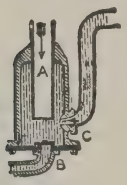


Fig. 4.

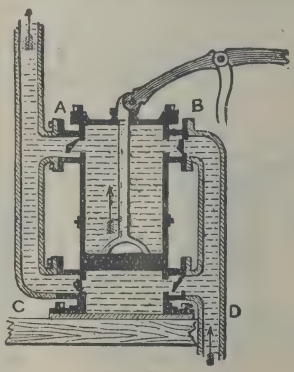


Fig. 5.

In all force pumps the packing of the piston or box is of great importance; it is commonly made of waste tow soaked in tallow and rammed tight; or for great pressures, cup leather packings are used.

Working Barrels, Buckets, and Valves.

These should be made of brass, gun-metal, or phosphor bronze, which metals, although costly in the first instance, will be found more durable, to require less repair, and to be more accurate in their operation than iron, being much less liable to injure the leather attached to the bucket and valve, the parts most frequently in want of repair.

An alloy which will withstand the action of water under pressure in a metal valve, and which is used by one of the largest firms in the country, consists of the following ingredients:—Copper, 10; tin, 1; zinc, $\frac{7}{8}$; lead, $\frac{1}{8}$.

The suction-pipe should be two-thirds the diameter of working barrel.

Pump Balancing.

To ensure equal work on the up and down strokes of a pump, it must be balanced. A complete balance provides for the whole weight of metal hung on the crank pin or beam, and one half the water work. The case of a bucket and plunger pump is perhaps the least simple, as in a bore-hole pump with a plunger at the surface delivering to a height above the surface.

Let A = area of bucket; a = area of plunger; W = weight of moving parts hung on crank pin and immersed in air; w = ditto immersed in water, e.g. the bucket and rods; H = height from water-level when pumping to plunger, in feet; h = height from plunger to point of delivery, in feet; B = balance weight to act at same lever arm as crank pin.

$$B = W + 0{\cdot}875\ w + 0{\cdot}216\ \{[A \times H] + [(A - a) \times h] - [a \times h]\}$$

The coefficient 0·216 represents one half the work, and the relation of pressure to head, or $0{\cdot}5 \times 0{\cdot}43$.

The correction for the different specific gravity of a gun-metal bucket may be neglected. Modern rods ultimately become as heavy as water, but at first have some negative weight. If a balance weight moves through a greater range than the cross-head, it must be correspondingly reduced.

Pumping from Wells.

For wells under 30 feet a 4-inch working barrel with a 9-inch or 10-inch stroke should be used. This size pump will throw 24 gallons per minute from a 20-feet well, and is as large as one man can conveniently work, and the best adapted for general use. For wells above 30 feet and under 70 feet a 3½-inch working barrel with a 9-inch or 10-inch stroke. For wells above 70 feet deep three 3-inch barrels, worked with a three-throw crank wheel and pinion in cast-iron case with fly-wheel, etc.

Artesian Well Pumps.

When the water level in a bore-hole is far below the surface, say 25 to 300 or 400 ft., it is necessary to place the pump barrel down the bore-hole, and it is usually desirable that it shall be lower than the rest level of the water, so as to be charged for starting work.

A bore-hole pump consists of a barrel of gun-metal with a bore at least 1 in. to 1¼ in. less than the diameter of the well lining tube. The barrel is screwed upon a rising main, which must be at least ⅛ in. to ¼ in. bigger than the barrel. The pump bucket and lower valve can thus be drawn up through the rising main for repair or inspection. A 4-in. pump will have a stroke of 1 to 3 ft. as desired, and a speed of 15 to 30 up strokes per minute. For durability it is desirable with very deep pumps to run at slow speeds. The pump rod terminates in a gun-metal rod or plunger, which passes through a stuffing box in the casting which forms the head of the pump. This head is flanged to the lining tube and screwed upon the rising main, and a branch is cast on one side for the water. If the lift above surface is considerable, it is possible partially or wholly to balance the lift of water to the surface by the use of a plunger, which may, if required, be as large in diameter as the bucket. However arranged, in order to equalise the work on the up and down strokes, it is proper to balance half the water lifting, and all the weight hung on the crank pin, so that the duty of the motive power may be evenly distributed in up and down strokes. Comparatively short pumps can be balanced by a weight in the main spur wheel on the crank shaft. When deeper, this is not sufficient, and a weighted lever may be linked to the crosshead pin and fitted with a balance weight on its outer or long end.

Some makers hang a heavy weight upon a pin in the face of the spur wheel, other makers attach wire ropes to the pump crosshead and pass them over a wheel and hang a weight, in guides, upon the ropes. Some engineers prefer to employ wooden pump rods, on account of their large displacement, so as to reduce the balance weights necessary.

A deep-well pump, unless small and slowly driven by a windmill, should be two to three diameters in length, of plain cylindrical form, with alternate grooves, with square-cut corners, and plain body. The grooves should be ½ in. × $\frac{1}{16}$ in. and the space between, $\frac{5}{16}$ in., the two extreme spaces about ⅝ in. to ⅞ in. No rings or packing leathers should be used.

The bucket valve may be mushroom, ball, or flat dermatine, the foot valve the same, in a taper casing, or foot piece which fits in the taper foot piece of the barrel. Under the bucket is a female screw which fits upon the thread projecting above the guard of the lower valve. When it is desired to remove the foot valve for inspection, it is lifted out by the bucket and pump rods, the bucket being lowered upon the valve and screwed to it; the valve then comes up with the bucket.

These pumps are usually driven from a second motion shaft by wheel and pinion, the second motion shaft carrying a fast and loose pulley driven by a belt from the engine or main shaft.

In country house work an oil-engine or an electric motor may be the driving agent, speed being reduced by more pairs of wheels or by larger driven wheels and pulleys. Or an electric motor may be worm-geared to the crank-shaft direct, in which case it is sometimes desirable to interpolate a friction clutch, so that the motor can be started off the load. Larger plants, such as the pumps for small town supplies, are perhaps best driven by gas-engines and suction gas plants.

Steel worms working in phosphor bronze wheels are said to give the best results. The wheel should be hollow faced so as partially to embrace the worm, and the angle of the teeth across the face of the wheel should be about 45°, so that the worm may require to be double or treble threaded to secure this. A thrust collar, or rather several collars, of propeller thrust type, are required on the worm shaft; but it is probably better to employ two worms, right and left, and two wheels connected to the same work, so that the thrusts balance, and no thrust block is required. The wheel should run in oil, which should be not too viscous. If a thrust block is employed, it should not be enclosed too narrowly, especially if near to the worm, as this has been found to prevent free access of oil.

When the water level in a bore-hole is not too deep below the surface, the air lift pump may be used with advantage, but it falls off in efficiency at great depths, and may often necessitate the boring of the well to depths very much greater than would be necessary merely to give the water yield. (*See also* Air Lift Pump, p. 1169.)

T T

Discharge from Reciprocating Pumps.

TABLE OF CONSTANTS WHICH, MULTIPLIED BY EFFECTIVE NUMBER OF STROKES PER MINUTE, GIVE THE DISCHARGE IN GALLONS PER HOUR.

Stroke of Pump, in Inches.	Diameter of Pump, in Inches.												
	2	2½	3	3½	4	4½	5	5½	6	7	8	9	10
1	0·6795	1·061	1·528										
1½	1·019	1·592	2·292	3·120									
2	1·359	2·123	3·057	4·160									
2½	1·698	2·654	3·821	5·200	6·795								
3	2·038	3·185	4·586	6·240	8·154	10·31							
3½	2·378	3·715	5·350	7·280	9·513	12·03	14·86	17·98					
4	2·718	4·247	6·115	8·320	10·87	13·74	16·98	20·54	24·45				
4½	3·057	4·777	6·879	9·360	12·23	15·45	19·11	23·16	27·50				
5	3·397	5·308	7·644	10·40	15·59	17·19	21·23	25·68	30·06	41·60			
5½	3·737	5·839	8·408	11·44	14·95	18·91	23·35	28·25	33·63	45·76			
6	4·077	6·370	9·173	12·48	16·31	20·63	25·48	30·81	36·68	49·92	65·20	82·52	
6½	4·416	6·901	9·937	13·52	17·67	22·35	27·60	33·39	39·73	54 08	70·63	89·40	
7	4·756	7·432	10·70	14·56	19·02	24·07	29·73	35·95	42·79	58·24	76·06	96·27	
7½	5·096	7·962	11·46	15·60	20·38	25·79	31·85	38·52	45·84	62·40	81·49	103·1	
8	5·436	8·494	12·23	16·64	21·74	27·50	33·97	41·09	48·91	66·56	86·93	110·0	135·8
8½	5·778	9·024	12·99	17·68	23·10	29·22	36·10	43·65	51·95	70·72	92·36	116·9	144·3
9	6·115	9·555	13·76	18·72	24·46	30·94	38·22	46·23	55·00	74·98	98·10	123·7	152·9
9½	6·455	10·08	14·52	19·76	25·82	32·66	40·34	48·79	58·50	79·04	103·5	130·6	161·3
10	6·795	10·61	15·28	20·80	27·18	34·38	42·47	51·35	61·12	83·20	108·7	137·5	169·8
10½	7·135	11·14	16·04	21·84	28·54	36·10	44·59	53·90	64·20	87·36	114·1	144·4	178·3
11	7·474	11·67	16·80	22·88	29·89	37·82	46·71	56·50	67·26	91·52	119·5	151·2	186·8
12	8·154	12·74	18·34	24·96	32·60	41·27	50·94	61·63	73·35	99·84	130·4	165·0	203·7
13	8·832	13·80	19·86	27·04	35·32	44·71	55·18	66·77	79·46	108·1	140·2	178·8	220·7
14	9·512	14·86	21·39	29·12	38·04	48·14	59·43	71·90	85·58	116·5	152·1	192·5	237 7
15	10·19	15·92	22·92	31·20	40·75	51·58	63·67	77·04	91·69	124·8	162·9	206·2	254·7
16	10·87	16·99	24·45	33·28	43·47	55·02	67·92	82·17	97·81	133·1	173·8	220·0	271·7
17	11·55	18·05	25·98	35·36	46·19	58·46	72·16	87·31	103·9	141·4	184·7	233·8	288·6
18	12·23	19·11	27·51	37·44	48·90	61·90	76·41	92·45	110·0	149·7	196·2	274·4	305·7

CAPACITY OF PUMP.

If d = diameter of barrel, in inches ; s = stroke, in inches ; n = number of acting strokes per minute ; g = gallons per hour ; then,

$$g = d^2 sn \div 6, \text{ approximately.}$$

Semi-Rotary Pumps.

THE WILLCOX SEMI-ROTARY WING PUMP.

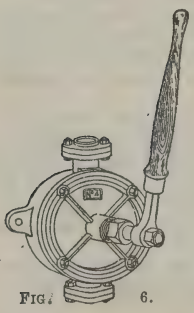


FIG. 6.

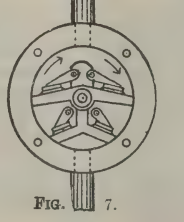


FIG. 7.

These pumps, figs. 6 and 7 (*W. H. Willcox & Co. Ltd.*), are made either double (as shown in the figs.) or quadruple acting. The working parts are of metal, and the wear and tear is reduced to a minimum ; they are claimed to be lighter and occupy less space than any other pumps of equal capacity, and are self-contained. Although fig. 6 shows a form for hand-working, these pumps are adapted for being fitted to any kind of motive power and can be employed for all general purposes.

UNITED BRASS FOUNDERS & ENGINEERS LIMITED.

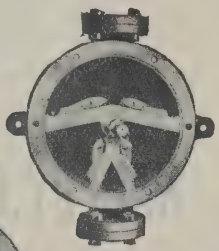
UBEL UBEL

UBEL Semi-Rotary DOUBLE & QUADRUPLE ACTING PUMPS.



Round Flanges, Horizontal Lugs, Double Handle.


Oval Flanges and Vertical Lugs.



Double-Acting. Section showing 'Wing' Valves.



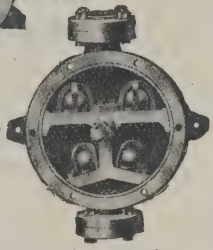Quadruple-Acting. Section showing 'Wing' Valves.



Double-Acting. Section showing 'Ball' Valves.

WRITE for CATALOGUE (SECTION 'P') Free on Application.

Codes:—A B C 5th Edition; Lieber

Telephone: 3134 Central (3 lines).

Telegrams: 'Stork,' Manchester.

United Brassfounders and Engineers Limited

FIVE WORKS — HEADQUARTERS 'EMPRESS' FOUNDRY — UBEL — 3000 WORKERS — CORNBROOK MANCHESTER ENGLAND

Depots also at London, Glasgow, Newcastle, Birmingham, Belfast, Cardiff, and all principal world centres.

Complete ENGINEERING EQUIPMENT OF INDUSTRIAL PLANTS in any part of the World.

Designed by Specialists and Installed under the Supervision of Experienced Engineers.

Designs and Complete Installations of

CHEMICAL PLANT

Heating and Drying Plants.

Special Continuous Distillation Plant for Tar and other Products.

Harley's Improved Patent Rapid Mixer
(the most efficient fluid mixer).

Mixing Machinery for any Compound
(Wet, Plastic or Dry).

HARLEY, CONYNGHAM & WATT Ltd.

ENGINEERS

581-582 Mansion House Chambers
20 Bucklersbury, LONDON, E.C. 4

Riveted & Welded Tanks, Pipes, Chimneys, &c., Structural Steel Work, Roofs, Girders, Bridges, Acetylene Welding Plants, Flares & Lamps,

CRANES, Elevating and Conveying Machinery,

Coal and Grain-Handling Plants,

Water-Power Plants.

Directors :
P. W. HARLEY, *M.I.Mech.E., M.I.Mar.E.*
E. K. CONYNGHAM, *A.M.Inst.C.E. (Ireland), A.M.I.Mech.E., M.I.Mar.E.*
G. P. WATT, *M.I.Mech.E.*
GEORGE PATON, *M.I.Mech.E., A.M.I.E.E., A.M.A.I.*

Telephone : *City 1739.*

Telegrams & Cables : *'Transumo, Cannon, London.'*

Codes : *A B C (5th Ed.) and Engineering.*

PARTICULARS OF WILLCOX SEMI-ROTARY PUMPS.

No. of Size.	Approximate Capacity per hour, and Price.						Size of Suction and Delivery Pipes (inside)
	Double Acting.			Quadruple Acting.			
	Galls.	Cast Iron.	Brass.	Galls.	Cast Iron.	Brass.	Ins.
0	270	£1 16 0	£2 10 0	360	£1 18 0	£2 12 0	½
1	420	2 0 0	2 16 0	480	2 4 0	3 0 0	¾
2	540	2 8 0	3 12 0	660	2 10 0	3 16 0	1
3	660	2 18 0	4 13 0	960	3 4 0	4 16 0	1½
4	900	3 12 0	5 11 0	1,260	3 18 0	6 0 0	1½
5	1,200	4 0 0	6 19 0	1,440	4 10 0	7 4 0	1½
6	1,500	4 16 0	8 7 0	1,740	5 10 0	8 16 0	1½
7	1,860	6 4 0	10 4 0	2,160	6 16 0	11 2 0	2
8	2,460	8 0 0	14 16 0	2,700	9 0 0	15 15 0	2
9	3,300	11 0 0	17 15 0	3,840	11 16 0	18 10 0	2½
10	3,720	15 4 0	24 1 0	4,980	15 16 0	25 0 0	3
11	4,320	18 2 0	29 12 0	6,000	19 0 0	31 10 0	3
12	—	—	—	8,280	38 0 0	69 5 0	4

The capacities in the foregoing table are based on 3 ft. suction, 3 ft. delivery, and on a full stroke; but the pumps will lift 25 ft. and force to a height of about 70 ft., according to size and speed.

'UBEL' SEMI-ROTARY WING PUMPS.

These pumps (*United Brassfounders and Engineers Ltd.*) have all parts made to standard limit gauges, ensuring absolute interchangeability. They are made either double or quadruple acting, the latter having a greatly increased capacity over the former. The capacities of the pumps given in the following table are theoretical, and based on a vertical suction of 3 ft. and a vertical delivery of 3 ft., with full stroke at the rate stated.

Double Acting.				Quadruple Acting.			
Size No.	Size of Suction and Delivery Pipes.	Approximate Capacity per min.	No. of Strokes per min.	Price Iron with Brass Parts.	Size No.	Size of Suction and Delivery Pipes.	Approximate Capacity per min.	No. of Strokes per min.	Price Iron with Brass Parts.
	ins.	gals.		shillings.		ins.	gals.		shillings
0	½	4½	104	18	0	½	6	104	19
1	¾	7	100	20	1	¾	8	100	22
2	1	9	88	24	2	1	11	88	26
3	1¼	11	82	29	3	1¼	16	82	32
4	1¼	15	80	36	4	1¼	21	80	39
5	1½	20	72	40	5	1½	24	72	45
6	1½	25	58	48	6	1½	29	58	55
7	2	31	56	58	7	2	36	56	65
8	2	41	52	75	8	2	45	52	85
9	2½	55	46	100	9	2½	64	46	112
10	3	62	40	135	10	3	83	40	150
11	3	72	40	165	11	3	100	40	185
					12	4	138	30	380

Sizes 0– 8 have vertical lugs.
" 9–11 have horizontal lugs.
" 0– 5 have oval flanges.
" 6–11 have round flanges.
" 9–11 are supplied with double handle.

Sizes 0– 7 have vertical lugs.
" 8–12 have horizontal lugs.
" 0– 5 have oval flanges.
" 6–12 have round flanges.
" 10–12 are supplied with double handle.

For sandy or muddy water, residuary liquors, liquid manure, tar, etc., double-acting pumps fitted with ball valves are recommended.

Quadruple-acting pumps should be used in preference to double-acting when a large delivery is required in a short time without the application of considerable power.

Quadruple pumps are not made with ball valves, and should therefore only be used for clear liquids.

Special accessories, such as 'air vessels,' 'gauze strainers,' etc., can be supplied with the pumps.

The 'Chain Helice' Pump.

This pump consists of an endless chain, with sections of double open-wound wire helix arranged at short intervals over its entire length (fig. 8). This chain passes over a driving pulley at the top, and at the lower end is weighted by a heavy flanged pulley which rests in the loop of the chain, keeping it taut. This pulley should be submerged to the extent of about 2 ft. if possible.

Experiments have shown that the best results with clear water have been obtained with the chain running at a speed of from 400 ft. to 700 ft. per minute, according to the size of the chain. The capacity of the pump is affected by the height, the viscosity of the liquid, etc. The chain dips into the fluid in the well or container, the spirals become charged, and the fluid is carried up until the chain reaches the upper pulley, where it is discharged by centrifugal

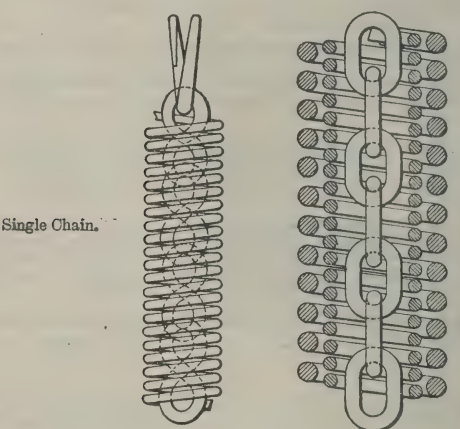


Fig. 8.

force into a receiver. In dealing with heavy liquids additional means are provided for removing the liquid from the outside of the chain, as centrifugal action alone is insufficient in this case. The losses on the upward path are mainly due to the slip of the fluid in relation to the chain. As, however, in falling, the fluid is constantly coming against the spirals of the chain, no great momentum is obtained, the mechanical efficiency of the device running out at about 50 per cent. It is calculated that between 70 and 80 per cent. of the water raised by the chain is delivered.

When in motion there is a tendency for the chain to wind, owing to the action of the spirals over the driving pulley. This is circumvented by introducing a swivel link in each chain, the standard chain length being 5 ft. Two sizes of chain are manufactured, viz. 31 mm. and 43 mm. With the latter size, which is a double spiral chain, and 3 ft. submersion and 30 ft. lift, a 1 h.p. engine driving a 'chaine helice' will deliver about 2,250 gallons per hour. With a 200-ft. lift a 5 h.p. plant will be required, and the delivery will be only slightly less, viz. 2,140 gallons per hour. With the single spiral, 31-mm. chain, the capacity ranges between 1,200 gallons and 1,150 gallons per hour, according to the lift, between 30 ft. and 200 ft., the horse-power needed ranging between 0·7 for the lower lift to 3·2 for the higher. Smaller pumps for hand operation deliver up to 150 gallons for 165-ft. lift.

The pump can be effectively used for clearing a well or trench if the bottom is sufficiently loose for the chain to score a groove in it without risk of the counterweight pulley becoming detached. A practical point in its application to deep well work is that all the work of installation is above ground, there being no fixtures down the well shaft, so that descent of the well is unnecessary. The installation of a unit is a matter of only one or two hours' work if a suit-

able platform at the well head is available. There are very few parts to get out of order, and the life of all parts is very good. The initial cost is about half that of other types of pumps. The upkeep is small, and the life a good deal longer than ordinary rotary or plunger pumps.

(*'The Engineer,'* April 27, 1920.)

STEAM PUMPS.

The Clarke, Chapman Direct-Acting Feed Pump.

(*Woodeson's Patent.*)

The single-cylinder direct-acting type of pump, on account of the small number of working parts and consequent small liability to break down, is very largely employed. Figs. 9 and 10 p. 1142, show Woodeson's 'Simple' Patent Direct-acting Pump (*Clarke, Chapman & Co. Ltd., Gateshead-on-Tyne*). This pump, which is extensively used, works with all steam pressures up to 400 lbs. per sq. in.

The steam chest is manufactured of the best hard close-grained cast-iron, of a suitable thickness to withstand any tendency to distort through the temperature of high-pressure steam.

The working parts of the steam chest consist of one auxiliary valve and one main valve, both of piston valve type.

The auxiliary valve is operated by the valve gear, actuated by the piston-rod crosshead. The main valve is partly moved mechanically and partly operated by steam, controlled by the auxiliary valve.

The action of the valves is as follows :—

When the main piston is nearing the end of its stroke, and the auxiliary valve commences to be moved by the valve gear, the first part of the movement closes the port through which the exhaust from one end of the main valve has been passing. The next part of the movement of the auxiliary valve opens steam to this end of the valve, and as the steam to the opposite end has not been closed, the main valve is in equilibrium. By the time that this takes place the auxiliary valve has moved so as to be in contact with the main valve, and further movement of the valve gear causes the auxiliary valve to move the main valve mechanically and so close the ports to the main cylinder. When these ports are nearly closed the auxiliary valve has closed the steam port at the end of the main valve, towards which the valves are moving, and opened an exhaust port, with the result that the main valve is moved by steam to the end of its travel and the steam cylinder ports are opened for the return stroke.

Should the main valve by any chance be delayed in being moved by steam, it would be worked mechanically during the clearance in the steam cylinder to a sufficient extent to open the steam port at the end of the cylinder towards which the piston was moving, and so forming a steam cushion to prevent the possibility of the piston striking the cover.

Advantages of the gear are :—

The main and auxiliary valves can all be mechanically actuated from the outside.

This is an advantage if the pump is standing for any length of time, as it keeps the faces from getting rusted up.

During the process of the mechanical movement, the piston to which this movement is imparted is in perfect equilibrium.

Entire absence of valve setting.

These pumps are also made on the Tandem Compound principle. Great economy has been obtained with the pumps, and they are specially applicable for electric power stations and other high-class installations where economy of steam is an important consideration.

Fig. 11, p. 1142, shows a pair of these pumps fitted with automatic controlling gear, as used for Main Independent Feed-Pumps for Marine Purposes ; with this automatic controlling gear there must be no dead points, and the pump must be able to start from any position, this being a special recommendation for a feed-pump for marine purposes, where, in order to derive all the benefits to be gained by using independent main feed-pumps, the speed of the feed-pumps must be automatically regulated according to the quantity of water to be dealt with, which varies with the speed of the main engines. The 'Woodeson' pump contains all the necessary features for this work.

No flat surfaces exist in any part of the water end exposed to pressure. Both suction and delivery valves are arranged in groups, and are easily accessible for overhauling. The plunger junks are of gunmetal, and are fitted with composition plunger rings, specially manufactured to deal with high pressure and high temperature.

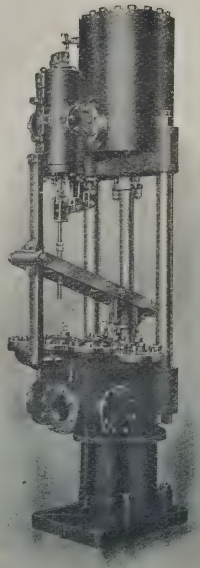


FIG. 9.

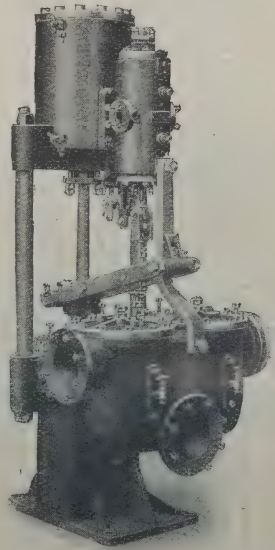


FIG. 10.

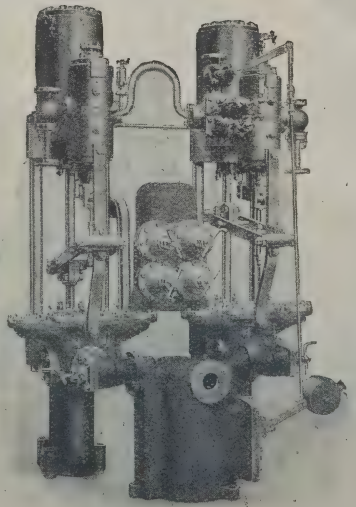


FIG. 11.

Test taken with Clarke, Chapman Simple Type of Slow Speed Feed-Pump (Woodeson's Patent) :—Diameter of steam cylinder, 10½ ins. ; Diameter of water cylinder, 8 ins.; Length of stroke, 18 ins. ; Water delivered per lb. of steam used, 81 lbs. ; Steam used per water h.p. hour, 59·5 lbs. ; Steam pressure per sq. in., 180 lbs. ; Pressure in discharge pipes per sq. in., 195 lbs. ; Efficiency of pump, 97 per cent.

Test taken with Clarke, Chapman Tandem Compound Type of Slow Speed Feed-Pump (Woodeson's Patent) :—Diameter of h.p. cylinder, 8¼ ins. ; Diameter of l.p. cylinder, 13 ins. ; Diameter of water cylinder, 8½ ins. ; Length of stroke, 18 ins. ; Water delivered per lb. of steam used, 110·5 lbs. ; Steam used per water h.p. per hour, 36·5 lbs. ; Steam pressure per sq. in., 195 lbs. ; Pressure per square in. in discharge pipes, 215 lbs. ; Efficiency of pump, 97 per cent.

The Caird & Rayner Single-Cylinder Direct-acting Boiler Feed and Service Pump.

The main and auxiliary slide valves of these pumps, figs. 12 and 13 (*Caird & Rayner*), are of the ordinary D type, and have flat wearing surfaces, and are therefore more easily understood and overhauled than those having circular slide valves, and are less liable to leakage. The pistons carrying the main slide valve are subject to end pressure only, so that there is no tendency to sticking, and the wear is practically nil. This obviates the necessity for re-boring worn parts of shuttle casing after working for a period, and the pump does not need to have an extra valve chest supplied as part of the spare gear. Should the water supply be suddenly stopped through any cause, the pump will not unduly race, nor will the piston strike the cylinder ends. The pump is silent in its working.

The main steam-valve admitting the steam to the cylinder ends is the ordinary D type, moving horizontally on a flat face. The auxiliary steam-valve which drives the main steam-valve is of the same type, and moves vertically also on a flat face. The main valve is separate from the small pistons which drive it, so that the pistons are subject to end pressure only, and the wear on them is practically nil. Any little wear on valve faces is taken up by the valves, and, being flat, all easily adjusted and refaced. The auxiliary valve face has ports which lead to the ends of the small cylinder carrying the pistons which drive the main valve. These ports are opened alternately to steam and exhaust, and throw the main valve from side to side. The auxiliary valve is actuated by a lever attached to a crosshead on the pump piston rod. The main steam ports are cast some distance from the cylinder ends, and a small steam port to the extreme end of the cylinder is provided, so that the speed of the pump is reduced when approaching the end of each stroke, thus enabling the pump valves to settle quietly in their seats, and also preventing shock in the feed-pipes. This arrangement of ports also prevents the piston striking the ends of the cylinder should the water supply to the pump for any reason fail, a feature which is of great importance. The pump will start from any point, and the stroke can be adjusted in running by means of the double nuts on the lower valve spindle. The pump valves are arranged in groups, and consist of a number of small valves working on a gunmetal seat. The valves are guided in an overhead frame and have no projections into the seatings, thus permitting a free flow of water and avoiding any side wear in the seatings. The water piston is fitted with ebonite rings, and will run for long periods without adjustment.

The materials of which the various parts are constructed are as follows :—Steam cylinder—close grained cast iron ; steam piston—cast iron or steel, with self-adjusting packing rings ; pump end—close grained cast iron, fitted with gunmetal liner in barrel, or all gunmetal, as required ; piston and pump rods—cold-rolled manganese bronze ; pump bucket—gunmetal, fitted with ebonite packing rings, or as may be desired ; valves and seats—group type of special manganese bronze, working on a gunmetal seat ; columns—mild steel, polished ; valve motion gear—rods and levers of wrought steel, turned bright ; crosshead—gunmetal.

The standard pumps are made suitable for 200 lbs. per square inch boiler pressure.

The Weir Direct-Acting Feed Pump.

The Weir Patent Direct-Acting Feed Pump (*G. & J. Weir, Ltd.*), shown in fig. 14, p. 1146 is the original of a type of pump which is being largely used. Introduced at first for marine boiler feeding, its adoption by the mercantile marine, the British Navy, and numerous foreign navies, caused it afterwards to be placed on the market in a form suitable for land installations, power plants, etc.

The valve gear is positive—i.e. the steam valve can never be in such a position that the pump will not start immediately when steam is turned on. The only possible way in which the main valve can rest is at full travel, either for an up or down stroke of the piston. The valve arrangement also ensures constant length of stroke and certainty of action.

THE CAIRD & RAYNER STEAM PUMP.

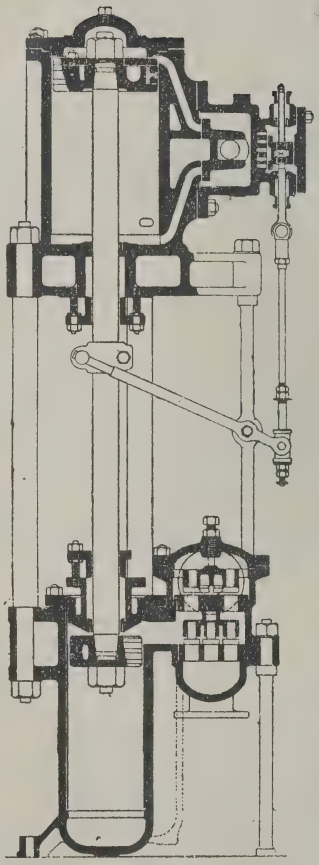


FIG. 12.


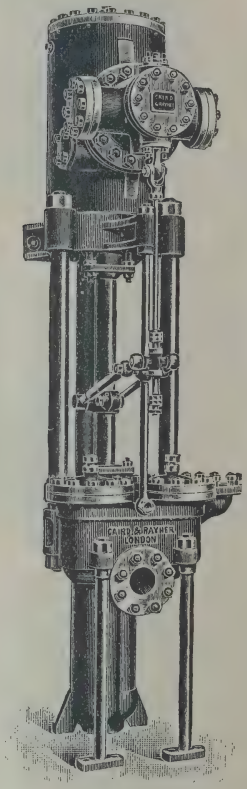


FIG. 13.

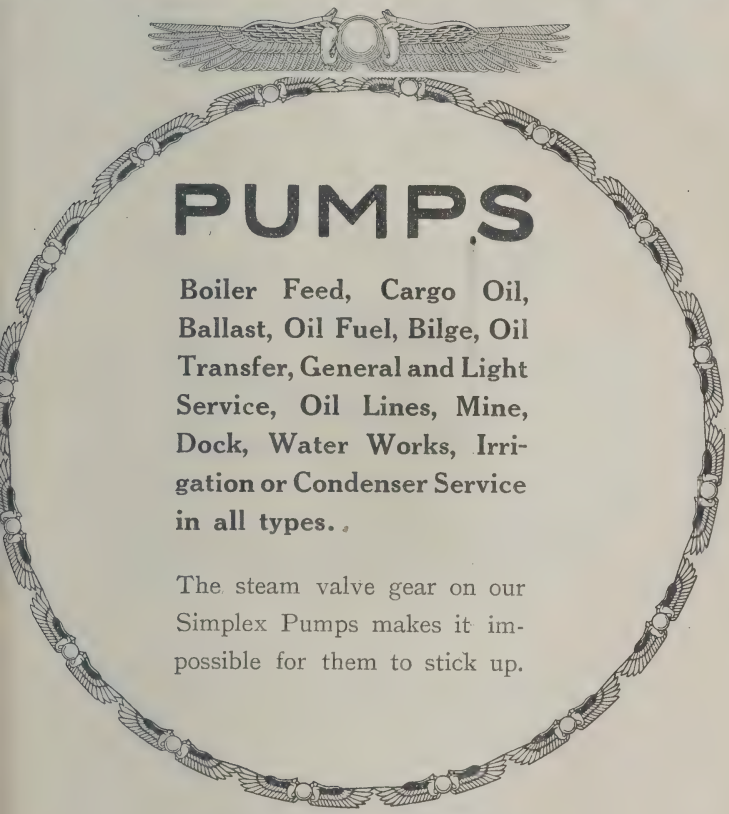WORTHINGTON



PUMPS

Boiler Feed, Cargo Oil, Ballast, Oil Fuel, Bilge, Oil Transfer, General and Light Service, Oil Lines, Mine, Dock, Water Works, Irrigation or Condenser Service in all types.

The steam valve gear on our Simplex Pumps makes it impossible for them to stick up.

Full information on any of the above pumps will be sent on request. *(See Overleaf.)*

WORTHINGTON-SIMPSON LTD.

Telephones Holborn 3048 3 Lines

Queen's House KINGSWAY LONDON-W.C.2 Works-Newark & London

Telegrams Pumping Westcent London

46.

Feed Water Heaters, Condensers, Compressors, Meters, Pumps, Oil & Gas Engines.

TT 4 F. 1144

WORTHINGTON



Special Purpose Pumps.

SHOULD the duty for which you require a pump appear to be a little off the beaten track, you can come to Worthington-Simpson's with confidence.

The wide variety of Worthington Pumps available makes it possible in most cases to select a standard pump for the work.

In any case, the valuable accumulated experience of our pump engineers is at your disposal for efficiently designing a new pump should the purpose necessitate it.

WORTHINGTON-SIMPSON LTD.

Telephones Holborn 3048 3 Lines

Queen's House KINGSWAY LONDON·W.C.2 Works-Newark & London

Telegrams Pumping Westcent London

Feed Water Heaters, Condensers, Compressors, Meters, Pumps, Oil & Gas Engines

F. 1145

The steam valve is practically a D slide-valve, with a small auxiliary valve working on the back, and hence has not the same liability to leak as a piston valve. These are the only two moving parts proper in the steam chest, so that there is little opportunity for wear, and no delicate adjustments to get out of order. The steam is used expansively, and the cut-off can be regulated from the outside while the pump is working.

The water valves are of the Weir group type, providing a large area with only a small lift, thus ensuring easy working and little wear and tear. The pumps are designed to work at a moderate speed and the piston is slowed down towards the end of the stroke enabling the valves to settle quietly in their seats. The working and maintenance of the pumps is therefore much more satisfactory than in pumps running at a high speed. In the matter of steam consumption, numerous tests and comparisons show that the Weir pump is highly economical; this is due to the fact that it has fewer ports and passages than a duplex pump, and the simple expansion arrangement enables it to be built so that the clearance is small.

The parts of each pump are of a standard size, made to gauge and interchangeable, and each complete pump is tested hydraulically and under steam before leaving the works.

Where it is desired to regulate the boiler feed automatically, a special design of float tank and regulating gear is furnished.

The Weir pumps are also supplied of the tandem compound and twin compound types.

Messrs. G. & J. Weir, Ltd., Cathcart, Glasgow, the makers, also list a line of these pumps for light service, tank duty, etc.

List of Parts.—(See fig. 14.)

1. Steam slide valve chest.
2. Double joint.
3. Front stay.
4. Bottom spindle.
5. Valve gear levers.
6. Front stay bush.
7. Ball crosshead.
8. Main crosshead.
9. Crosshead pin.
10. Piston rod.
11. Piston body.
12. Piston rings.
13. Cylinder cover.
14. Discharge valve seat.
15. Discharge valve seat ring.
16. Suction valve seat.
17. Suction valve guard.
18. Discharge valve guard.
19. Water valves.
20. Bucket.
21. Pump rod.
22. Pump cover.
23. Valve chest covers.
24. Steam stop valve.
25. Exhaust stop valve.
26. Auxiliary valve spindle.
27. Cylinder neck ring.
28. Cylinder gland.
29. Pump neck ring.
30. Pump gland.

STANDARD SIZES AND CAPACITIES OF WEIR FEED PUMPS.

Size.	Normal Duty.		Maximum Duty.	
	Gallons per Hour.	D.S. per Min.	Gallons per Hour.	D.S. per Min.
Pump. Cyl. Stroke. Ins. Ins. Ins.				
2½ × 3½ × 5	270	30	340	38
3 × 4½ × 6	410	26	535	34
4 × 6 × 7	660	20	810	25
4 × 6 × 12	960	17	1,205	21½
5 × 7 × 12	1,450	16	1,725	19
6 × 8½ × 13	2,000	14	2,350	16½
6 × 8½ × 18	2,700	13½	3,350	16½
7 × 9½ × 21	4,000	13	4,750	15
8 × 10½ × 22	5,500	12½	6,350	14½
9 × 12 × 24	7,200	12	8,100	13½
10 × 13½ × 24	9,000	12	10,000	13½

THE WEIR DIRECT-ACTING FEED PUMP.

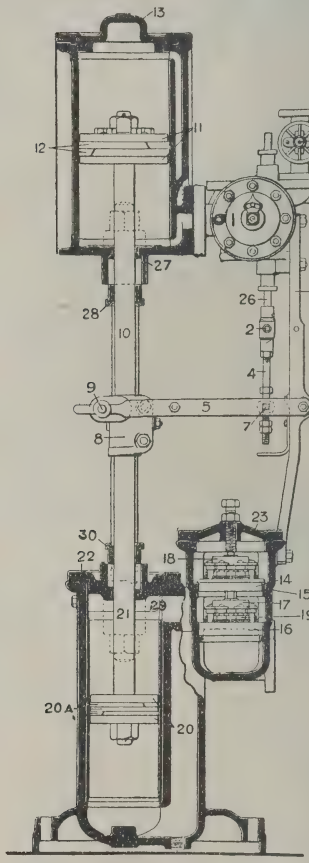


FIG. 14.

The WEIR DIRECT ACTING FEED PUMP

THE ENGINEER TRUSTS TO IT—
AND HE KNOWS—HE KNOWS.



Designed and built to withstand the exacting conditions encountered in BOILER FEEDING operation.

□

Embodies the specialised experience gained by 36 years of successful manufacture in high-grade AUXILIARY MACHINERY.

Particulars on request

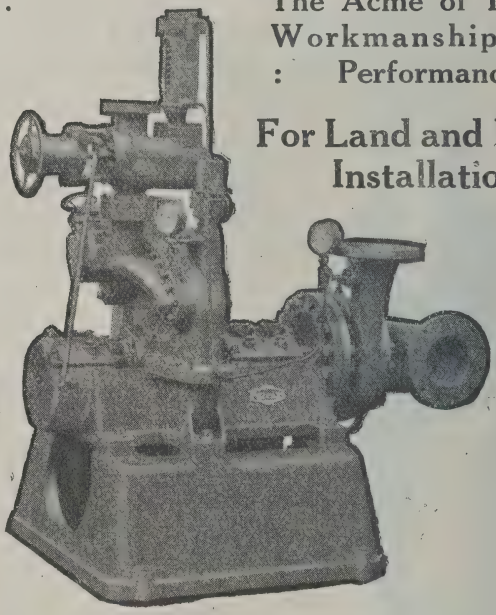
G. & J. WEIR Ltd. CATHCART, GLASGOW.

F. 1146

The WEIR
ROTO-FEED PUMP

The Acme of Design, Workmanship and Performance.

For Land and Marine Installations



This Pump delivers 50,000 gallons per hour against a pressure of 520 lbs.

Catalogue on Application.

G. & J. WEIR Ltd. CATHCART GLASGOW

F. 1147

The Warner Anthony Pump.

This pump, manufactured by *Robert Warner & Co.* (*Engineers*), *Ltd.*, 14/16 *Cockspur Street*, *London, S.W.*, is a distinct departure from the usual steam-operated gear fitted to most direct-acting steam pumps. The main difference lies in the fact that the whole of the working parts are self-contained and form a separate patented unit, which can be removed from, and replaced in, its valve chest by simply removing the steam chest cover, and without disturbing any adjustment. It is easily possible to shut down one of these pumps, take out the steam distribution unit, slip another unit in its place, and start up again, in five minutes. Pumps so fitted have run since the war under adverse conditions night and day for upwards of two years without a stop.

Fig. 15, p. 1148, represents a section through a steam cylinder and valve chest with the patented unit in its working position in the chest. The main cylinder has an ordinary three-ported valve face on which works an ordinary slide valve B. The unit proper which bridges over this slide valve, but which is quite separate from it, consists of a small cylinder provided with faces which contact with port faces on either side of the main port face of main cylinder. Inside the cylinder A is a piston C attached to a piston rod E which passes up through the unit cylinder cover and has on its outer or upper end a circular head F, which fits into a separately formed recess in a small cover G in the top of the valve chest, which recess is so arranged that whilst the head of the piston rod can be withdrawn horizontally, no vertical motion is possible.

It will thus be seen that the usual arrangement is reversed, in that the piston C is held in one fixed position, while the cylinder A is free to move on it.

Through the lower end of the valve chest works the valve rod H attached by lever gear to the main piston rod, a fulcrum being provided by a bracket bolted to a lug on the main cylinder casting. The rod H is, like the rod E, provided with an enlarged circular head J, which works inside the hooded recess K formed in the lower end of the unit cylinder A.

Supposing now that steam is admitted to the bottom side of the main piston, the top side being open to exhaust, the sequence of operations is then as follows:

The main piston travelling upwards pulls the rod H downwards; when the rod has travelled down a certain distance, the head J engages with the lower face of the recess K and thus pulls down the cylinder A, and with it the slide valve B. At the moment when the head J engages with the lower face of the recess K, two small ports, which are arranged one on either side of the slide valve B, but which are not shown in the figures, come into register with two other small ports in the cylinder A, also not shown. When the main piston has nearly completed its stroke, and when the lower main steam port has been closed by the valve B, the head J has pulled the cylinder A so far that the small port on one side has passed over the edge of the main port face, while at the same moment the small port in the other side is put into direct communication with the main exhaust port, the result being that live steam is admitted to the lower end of the unit cylinder A, shooting it over the remainder of its travel and carrying with it the slide valve B. This action opens the upper steam port MSP 1 of the main cylinder to the live steam in the valve chest, and puts the lower main port MSP to exhaust. The same sequence of operations is then repeated, the unit in this case being pushed up instead of being pulled down.

In the sectional view the main piston is shown on its downward travel. The valve rod H travelling upwards has just come into contact with the upper face of the recess K of the unit cylinder, and is about to carry it and the slide valve up with it, so shutting off the upper main steam port MSP 1, after which the unit will be shot over by steam pressure acting at the right moment on the upper side of the fixed piston, this shooting it over and reversing the main valve B.

This system is fitted by Messrs. Warner to pumps for all duties, and is supplied by them to the British and Allied Admiralties and the principal users of this type of machinery.

The Weir 'Roto-Feed' Pump.

This pump (*Messrs. G. & J. Weir, Ltd., Cathcart, Glasgow*), shown by fig. 16, p. 1149, consists of a single pressure, multivelocity stage, impulse steam turbine, working in conjunction with a single stage centrifugal pump of special design.

The turbine casing and bearings are divided horizontally, the lower portions being embodied in the general framework or base of the set. This framework is extended at one end to form a flange, to which the pump casing is rigidly secured. By this arrangement the impeller of the pump is carried on the overhanging end of the turbine shaft; absolute alignment and compactness are thereby secured and the necessity for a third bearing with its attendant complications is avoided.

THE 'WARNER ANTHONY' PUMP.



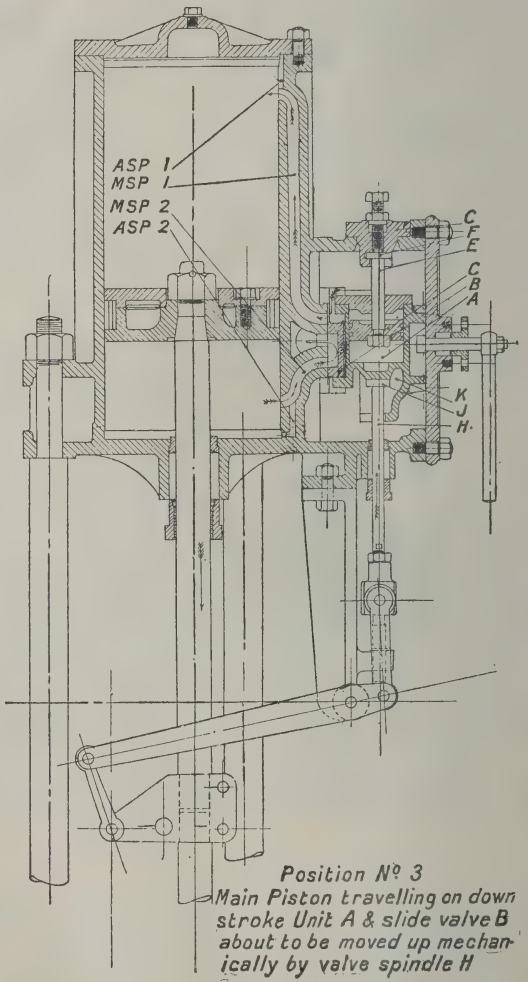


FIG. 15.

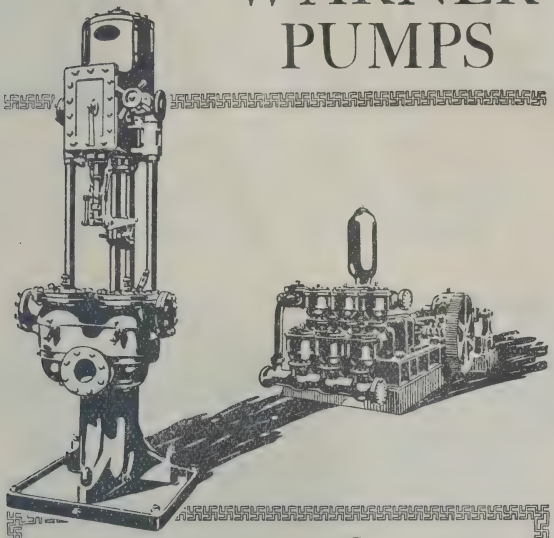WARNER PUMPS



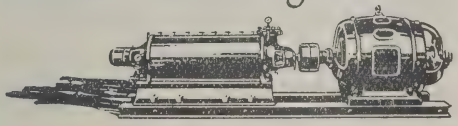Ram Pumps,
Centrifugal Pumps,
Boiler Feed Pumps &
Boiler Feed Regulators.



Robert Warner & Co. (Eng) Ltd
14-16 Cockspur St., London. S.W.1

See Pages 1147 and 1148. Full Particulars on Request.

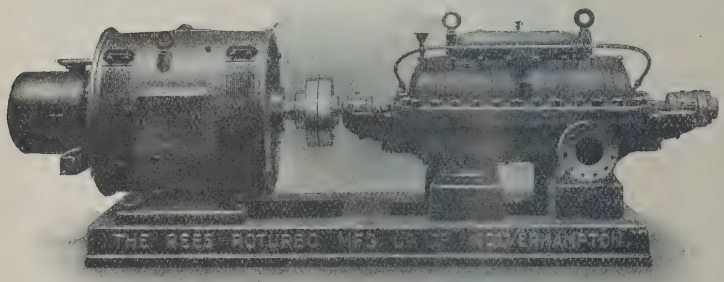
Rees RoTURBo

PATENT REVOLVING PRESSURE CHAMBER

TURBINE PUMPS

FOR ALL PURPOSES.

Highest Efficiency
Maximum Reliability



Rees RoTURBo Eight-stage TURBINE PUMP—Horizontally Split. Coupled to Electric Motor.

These Pumps can be completely dismantled without disturbing alignment or pipe work.

We also manufacture :—

Rotary Jet Condensers and Air Pumps.
Steam Turbines (up to 200 H.P.)
D.C. Dynamos and Motors.

Descriptive Pamphlet on application— Quote R191—X.

The Rees Roturbo Mfg. Co. Ltd.

Hydraulic, Electrical and General Engineers,

Head Office and Works : **WOLVERHAMPTON, England.**

LONDON OFFICE : Hastings House, Norfolk St., Strand, W.C.

By means of a suitable hydraulic governor, operating a balanced double beat throttle valve, the set is self-regulating for all ordinary changes in both water and steam conditions. When the latter are decidedly adverse, auxiliary nozzles may be brought into play by means of auxiliary valves in the nozzle box and the quantity of steam supplied to the turbine considerably augmented.

An emergency governor of the eccentrically-loaded ring type is provided, which, in the event of the speed of rotation exceeding a predetermined limit, actuates a trip gear which releases a spring and instantaneously closes the stop valve, and steam is completely shut off from the turbine. Thus there is no possibility of the speed of the set reaching unsafe limits in the event of an accidental failure of the supply; and as the discharge pressure depends upon the pump speed only, the set cannot be seriously overstrained by sudden obstruction or closing of the discharge.

The turbine glands are provided with carbon packing, the bearings are of the self-oiling ring type, and the pump impeller is hydraulically balanced.

The Weir Roto-Feed Pumps are of sound mechanical construction and all parts are readily accessible for examination and overhauling. They are entirely automatic in action and are noiseless and free from vibration.

The pumps are capable of discharging against the highest boiler pressures and are specially

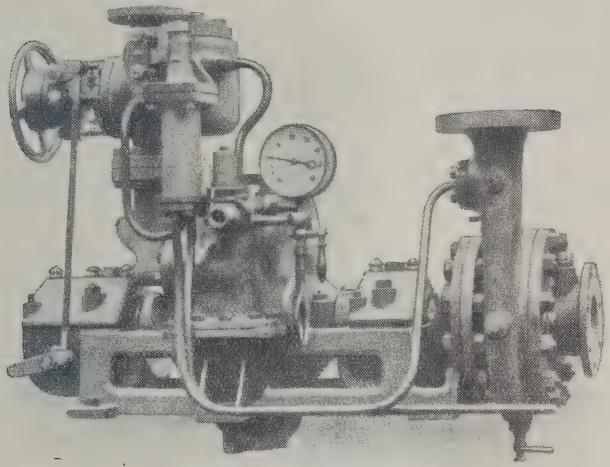


FIG. 16.—The Weir 'Roto-Feed' Pump.

suitable for large units. They can be used to work in conjunction with ordinary reciprocating pumps.

A special feature of the Weir Roto-Feed Pump is its economy in steam consumption. Further, as the exhaust steam contains no oily residue, it is available for heating the feed water by direct contact, thereby utilising all the heat in the steam. In this connection Messrs. Weir have introduced a nozzle heater which has been specially designed for working in conjunction with these pumps.

The Weir Roto-Feed Pump has been adopted by the British Admiralty and the leading Municipalities and Electric Power Corporations, including the Corporations of Cardiff, Glasgow, Greenock, Halifax, Norwich, Poplar, Salford, West Ham, Wolverhampton, Woolwich, the Clyde Valley Electric Power Co., and Treforest Electrical Consumers, Ltd.

Boiler Pressure Required for Pumping.

What boiler pressure would be required to operate a direct-acting steam pump having an 8-in. diameter steam cylinder and a 6-in. diameter water cylinder, for pumping water to a height of 100 ft. with the suction water supplied at a pressure of 10 lbs. per sq. in. ?

The mechanical efficiency of a pump of the stated size, when in good working order, would be about 65 per cent. The pressure pumped against would be $100 \times 0{\cdot}433 = 43{\cdot}3$ lbs. per sq. in. due to the head, plus the pressure required to overcome friction of the water in the discharge pipe, the latter depending on the rate of pumping, and the diameter length and fittings of the discharge pipe. Under ordinary conditions the loss of pressure from pipe friction would be no greater than 10 lbs. per sq. in., and if assumed to be equal to the suction pressure the net resistance to movement of the water piston would be $(6 \times 6 \times 0{\cdot}7854) \times 43{\cdot}3 = 1{,}224$ lbs. With 65 per cent. mechanical efficiency of the pump, the resistance to be overcome by the steam piston would be $1{,}224 \div 0{\cdot}65 = 1{,}883$ lbs., and for overcoming that resistance the effective pressure required to be exerted on a direct-acting 8-in. diameter steam piston would be $1{,}883 \div (8 \times 8 \times 0{\cdot}7854) = 37{\cdot}46$ lbs. per sq. in. The required boiler pressure will need to be equal to the effective pressure, plus the back pressure and the reduction of the boiler pressure by throttling in the steam pipe and steam passages of the pump. Allowing a back pressure of 4 lbs. and reduction by throttling of 10 lbs. per sq. in. would require a boiler pressure of $37{\cdot}46 + 4 + 10 = 51{\cdot}46$ or about 52 lbs. per sq. in. *(Power.)*

The Pulsometer Steam Pump.

In this pump (*The Pulsometer Engineering Co., Ltd.*), fig. 17, the neck J contains a gun-metal ball I, above which is a steam pipe K. EE are suction valves placed at the base of two chambers

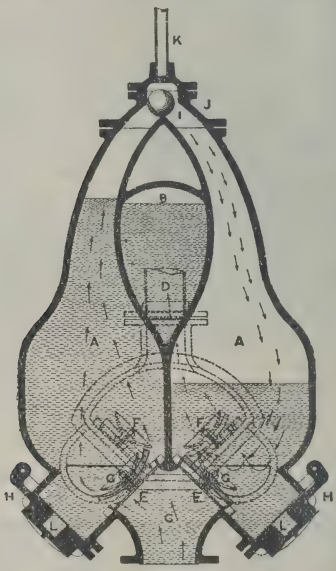


Fig. 17.—The Pulsometer Steam Pump.

AA, which communicate with a 'discharge box' and with an air vessel. Immediately above the suction valves the two chambers communicate with a 'discharge box' through two discharge

valves EE. The valves in the standard pattern of pump are of the grid type, consisting of a grid, rubber, and guard. In addition to the above valves there are three small gun-metal valves (not shown in the figure) for the admission of air, one of each being screwed into the upper part of the two water chambers and the air vessel.

Action.

Assuming one of the chambers to be open to steam and full of water, the steam entering by the steam pipe and past the ball passes into the chamber and presses upon the small surface of water exposed, and depresses it without agitation (and therefore with little condensation) and drives it (as seen in the figure) through the discharge valves into the rising main, D. The moment the water in the chamber falls to the level of the opening in the branch leading to the discharge box, the steam blows through with a certain amount of violence, and as it is brought into intimate contact with the water in the discharge box an instantaneous condensation takes place, and the vacuum thus formed in the emptied chamber immediately pulls the control ball over on to the corresponding seat and cuts off further admission of steam, allowing the vacuum to be completed. Water immediately enters through the suction pipe, and lifting the inlet valve rapidly fills the chamber again. A similar operation has been taking place in the fellow chamber, the period occupied by filling one chamber corresponding to that of emptying the other, and these operations continue alternately in the two chambers so long as the pump is supplied with steam and water. The function of the air valves is to introduce a small quantity of air at each stroke or 'pulsation' for the purpose of cushioning the ball when it changes its position, and for separating the steam from the water by a non-conducting film so as to prevent loss by condensation during the expulsive portion of the cycle.

The 'Pulsometer' Steam Pump will work just as well suspended from a chain or rope as when permanently fixed. Its very small size, in proportion to the quantity of water thrown, makes it available in a great many situations where no other pump can be applied, and another important feature is its ability to pump water heavily charged with mud and sand. For these reasons it is very largely used by contractors for pumping from excavations.

The 'Pulsometer' Steam Pump will, where the conditions remain constant work day and night without attendance—in fact, as long as steam and water are supplied to it.

WILLCOX-PENBERTHY CELLAR DRAINER.

This is a Water Pressure Ejector (*W. H. Willcox & Co. Ltd.*) of high capacity, for use in removing water from cellars, inspection pits, stokeholes, lift pits, or wherever it is desired to keep water or other liquids from rising above a certain level. It is automatically operated by a float-controlled, quick opening and closing valve. This valve is never partially opened; it cannot leak, and allows the ejector to give its greatest efficiency by working to full capacity. The float arm is slotted where it connects to the valve lever; this prevents the ejector from operating until the water has raised the float up to the highest point, and, as the water is ejected, the arm travels down the length of these slots before the weight of the float affects the valve.

To facilitate the installation of this drainer in small holes or sumps it is made as compact as possible. The float, instead of being round, is flat on the top; this gives it more buoyancy and occupies less space than would a round float of the same diameter. To further economise space the float is built around the suction pipe. This arrangement (patented) has the advantage of being rigid, and overcomes all the trouble of a loose float. The balance of the drainer is built directly above the float; this not only keeps the whole machine in as small a space as possible, but also keeps all working parts, with the exception of strainer and float, above the water, thus preventing corrosion or the exterior parts becoming clogged up by deposits of slime, dirt, or sediment. The interior parts are prevented from coming into contact with any foreign particles by a special strainer, which is so constructed that instead of the water being drawn directly upward, it is taken in at the sides, allowing all sediment to collect under the strainer without being disturbed by the force of the suction. A foot valve is provided inside the strainer, which closes the instant the drainer ceases operating, holding all water in the pipes, all primed for starting instantly at the next filling of the sump.

The following table shows the capacities at different pressures and elevations, dimensions, pipe sizes, weights, etc.:

Size No.	Working Head in Ft.	Actual Capacities in Gals. of Water per Hr. taken from Sump, and *not* Total Amount of Discharged Water. At 25 lbs. will Elevate	At 40 lbs. will Elevate	At 60 lbs. will Elevate	At 80 lbs. will Elevate	Pipe Sizes, in Ins. Supply.	Discharge and Suction.	Dimensions over all, in Ins. Height.	Diameter.	Weight, Boxed, in lbs.	Price.
1	3	230	400	530	650	$\frac{1}{2}$	1	$20\frac{3}{4}$	$9\frac{1}{2}$	18	Upon application to makers.
	6	200	350	480	580						
	9		285	420	490						
	12		200	360	420						
2	3	430	620	820	1,050	$\frac{3}{4}$	$1\frac{1}{4}$	$22\frac{1}{4}$	$11\frac{1}{2}$	22	
	6	320	480	700	840						
	9		400	600	780						
	12		260	480	620						
3	3	660	1,100	1,440	1,650	1	$1\frac{1}{2}$	$25\frac{3}{8}$	$15\frac{1}{8}$	37	
	6	520	860	1,230	1,440						
	9		720	1,050	1,320						
	12		470	840	1,040						
4	3	960	1,600	2,020	2,400	$1\frac{1}{4}$	2	$27\frac{1}{2}$	$18\frac{1}{2}$	51	
	6	760	1,240	1,880	1 980						
	9		1,040	1,600	1,800						
	12		670	1,280	1,440						

All sizes will also work with a head of 18 ft. and with 60 lbs. or 80 lbs. pressure.

Low-pressure patterns in Nos. 1 and 2 sizes for pressures 10 to 30 lbs., and elevations 4 to 10 ft.

Pump Valve Materials.

Dexine.

Dexine (*Dexine, Ltd.*) is a preparation of vulcanised indiarubber and other ingredients, manipulated by a special process; it is an exceedingly tough and frictionless material which has been proved to withstand the action of oils and chemicals. It is extensively used for valves, in the place of ordinary indiarubber, and can be obtained in any degree of hardness, suitable for straight or curved guards and pumps of all descriptions and of all dimensions.

Valves made of Dexine are claimed to retain all the resiliency and natural cohesion of pure Para rubber—which enters into its composition to a certain extent—and is, in addition, rendered immune from the detrimental influence of acids, oils, alkalies, or grease. The material can be moulded to any shape, and vulcanised to any degree of hardness or flexibility to suit any particular purpose.

Dexine is also used to form the 'bucket or cup leathers' of pumps, up to 20 ins. diameter. In round or square section, or in the form of U rings, the material makes an efficient packing for compressor rods, and, having a low coefficient of friction, the wear on the material is very slight.

Hydraulic Leathers.

Ram or 'U' Leathers.

A cupped leather packing (ram or 'U' leather) forms a self-tightening packing, and is very generally used, although if it is not properly made, and if the cup is not strengthened at the bend (where the greatest friction is), the leather soon wears out and fails.


Fig. **18** shows a ram leather in its position.

The water gets behind the leather and presses it tightly against the ram; the friction occurs mainly at part A, and increases as the pressure of water increases. There is not much friction at the portion between A and B, and the efficiency of the press is but little altered by making AB greater or less. It is, however, asserted by some that the distance AB is of importance, but this is on account of deterioration. The part AB is constantly in states of tension and compression, and if the leather is not good and well made it is liable to crack. A shallow leather is undoubtedly the best. It works just as well as a deep one, and in making the leather considerably less strain or pull is required to block or mould it than would be the case with a deep one.

"DEXINE."

ON ADMIRALTY & INDIA OFFICE LISTS

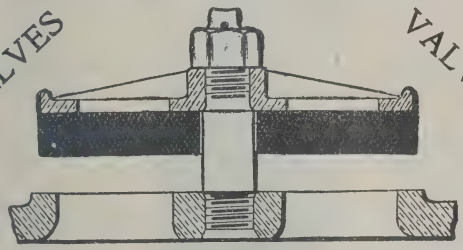VALVES for Straight or Curved Guards.



VALVES for Rough and Hard Wear.

FOR DIRECT LIFT, AIR, AND CIRCULATING PUMPS.
MADE IN ALL SHAPES AND FOR ALL TEMPERATURES.

'DEXINE' VALVES

For All Duties.



Withstand 300° Fahr.

For further information, write for **List C.**

DEXINE LTD.

STRATFORD, LONDON.

Telephone: No. 355 STRATFORD.

Telegrams: 'DEXINE, STRATFORD, LONDON.'

F. 1152

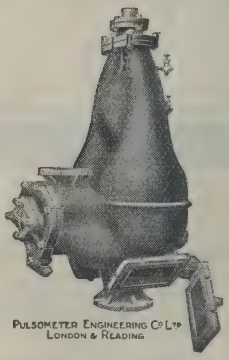
Trade The Pulsometer Mark

STEAM PUMP

Will work suspended on a chain.

No moving parts except simple valves.

Will pump almost anything.



No skilled attention required.

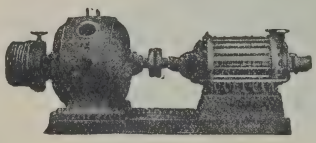
Needs no foundation.

No exhaust steam to heat up the shaft.


For LIFTS up to 150 ft.

(*See Editorial Notice, page* 1150.)

HIGH EFFICIENCY
CENTRIFUGAL & TURBINE PUMPS



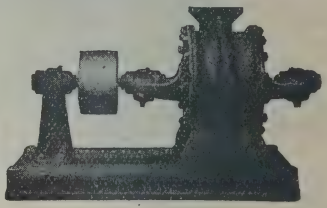TURBINE PUMPS.
For lifts up to 3,000 ft.



'C' TYPE.
For lifts up to 150 ft.

Write for List No. 888.

Pulsometer Engineering Co. Ltd.

11 Tothill Street,
LONDON, S.W.1

Nine Elms Iron Works,
READING

F. 1153

Leathers are very frequently made too deep, and this leads to their being more liable to crack and fail. Too much stress cannot be laid on the necessity for using leather packings of the best quality and make only. It is equally important to consider the question of tannage.

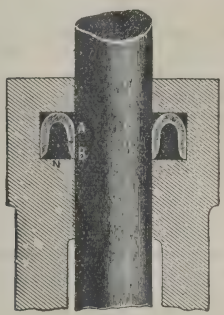


FIG. 18.

The value of a tannage depends upon its suitability and adaptability for different classes of work. Low pressure work, for example, requires a different tannage and fibre from high pressure, and medium pressure a tannage and fibre between the two.

NOTES ON HYDRAULIC LEATHERS.

Where dirty or gritty water has to be used the leathers wear away very rapidly. When the leathers are not kept constantly under pressure, if the pressure is taken off, the water gets between the leather and the ram, and as soon as the pressure comes on again, a little gritty or dirty water passes between the leather and the ram and causes the wear of the packing; it also scaives or flutes the ram. A remedy for this consists in putting a relief valve on the pipe that delivers the water to the accumulator from the pump, and in leaving the suction valve always open. The pressure in this way is always kept on the leather, preventing leakage, and at the same time saving considerable wear and tear of the packing.

Corrosion is one of the principal annoyances of hydraulic power, and bad water is responsible for fully 50 per cent. of wear and tear and repairs. Chalybeate water (that is, water containing iron) is about the worst.

For lubrication, Entwistle's patent lubricant, which contains a certain quantity of very finely-powdered metal, has given excellent results; the particles of metal, by the motion of the ram up and down, anneal themselves to any indentations, pores, or rough surfaces there may be on the ram or in the cylinder, and being of a soft or yielding nature (not gritty) distribute themselves over the rough surfaces.

It is important and essential that a leather should be well rubbed and worked with tallow before putting in. A good plan is to fill the inner space of the leather with neatsfoot oil or sperm about an hour before putting in. *Never use mineral oil for rams or cylinders*, it runs away quickly through being thin, and also renders the leathers rotten and pulpy.

Pump Packing.

A 'non-rot' self-lubricative packing (*Turner Brothers Asbestos Co. Ltd., Rochdale*) owes its properties to specially treated hemp yarn. A packing is also manufactured from a high quality flax cloth, in which is inserted anti-friction metal presenting a good surface to the rod; it is provided with a central core which gives a high degree of elasticity with a cushioning effect, bedding to the wearing surface of the rod. It is especially suitable for worn and scored rods. It is supplied in rings or in 12-ft. spiralled coils; sizes, $\frac{1}{4}$ in. and upwards.

LOSS OF POWER BY FRICTION.

The loss by friction in pumping into an accumulator packed with hemp has been found to range from 3 to 8 per cent. at 100 lbs. pressure; the difference of pressure during the rise and fall of the accumulator represents from 1 to 2 per cent. of the power. With leather packing the

friction varies with the diameter of the rams, or as to the square roots of the gross load. Neither the depth of the leather nor the length of the ram affects the total friction. Experiments give the following formula :—

$$F = \frac{P \times C}{D},$$

where F = total friction of leather packing, D = diameter of ram in inches, P = pressure per square inch, C = coefficient. C = ·0471 with new or badly lubricated leathers ; C = ·0314 with leathers in good condition and well lubricated.

The following table shows the frictional resistance in percentage of the total hydraulic pressure, for rams from 2 inches up to 20 inches in diameter :—

D ins.	F per cent.	D ins.	F per cent.	D ins.	F per cent.	D ins.	F per cent.
2	2·00	7	0·57	12	0·33	17	0·23
3	1·33	8	0·50	13	0·30	18	0·22
4	1·00	9	0·44	14	0·28	19	0·21
5	0·80	10	0·40	15	0·26	20	0·20
6	0·66	11	0·38	16	0·25		

$$F = \frac{0{\cdot}0416}{D} P \left\{0{\cdot}09347 - 0{\cdot}00000019291P\right\},$$

where F = friction in lbs., D = diameter of piston in feet, P = gross pressure in lbs. per square foot of piston area. (Correct up to about 1 ton per square inch.)

CENTRIFUGAL PUMPS.

V = velocity of the periphery of fan, in feet per second. H = height, in feet, to which water is to be raised. R = revolutions per minute of fan. D = diameter of fan, in inches. W = width of fan at the periphery, in inches. d = diameter of discharge-pipe, in inches. n = number of blades. t = thickness of blades. G = gallons per minute. E.H.P. = effective horse-power required.

$$V = 8{\cdot}8\sqrt{H}, \text{ for small fans, to } 10{\cdot}5\sqrt{H} \text{ for large fans.}$$

Another formula is—

$$V = 8{\cdot}8\sqrt{H} + K, \qquad \text{where } K = 5 \text{ to } 10.$$

The last formula gives good results, varying the coefficient K with the height of lift.

$$R = \frac{V \times 230}{D} = \frac{(8{\cdot}8\sqrt{H} + K) \times 230}{D}. \qquad D = \frac{(8{\cdot}8\sqrt{H} + K) \times 230}{R}.$$

$$D = 1{\cdot}5d \text{ to } 5d. \qquad d = \frac{\sqrt{G}}{4}. \qquad W = \frac{d^2}{4D - 1{\cdot}27nt}. \qquad \text{E.H.P.} = \frac{G \times 10 \times H \times \frac{5}{2}}{33000} = G \times H \times {\cdot}00076.$$

(The fraction $\frac{5}{2}$ represents 40 per cent. efficiency.)

EXAMPLE.—What size of pump is required to lift 4,000 gallons per minute to a height of 15 feet?

First find velocity, V, of periphery of fan. Taking 6 as a mean value for K, then $V = 8{\cdot}8\sqrt{15} + 6 = 34{\cdot}08 + 6 = 40{\cdot}08$ feet per second, or, say, 40 feet per second.

Diameter, d, of discharge-pipe at 4,000 gallons per minute, G, $= \frac{\sqrt{4000}}{4} = 16$ inches.

Taking $D = 3d$ as a mean value, then $D = 3 \times 16 = 48$ inches.

Number of revolutions per minute, R, $= \frac{40 \times 11000}{48 \times 48} = 191.$

Taking 6 blades (n), each having a thickness, t, of $\frac{1}{2}$ inch, then

$$\text{Width, W, of fan} = \frac{16 \times 16}{4 \times 48 - 1{\cdot}27 \times 6 \times \frac{1}{2}} = \frac{256}{192 - 3{\cdot}81} = 1{\cdot}36 \text{ inches.}$$

The greater the diameter of the fan, the less number of revolutions it requires to make.

The speed of the water through the pipes should not much exceed 8 feet per second. In many pumps the speed is greater (10 feet per second) ; but this is too high for good practice.

In all cases the efficiency of a pump will be increased by a tapering enlargement of the discharge pipe to as large a diameter as convenient. Such a taper pipe should be very slowly tapered, say about 1 in 8 times its initial diameter.

PROPORTIONS OF SINGLE-STAGE CENTRIFUGAL PUMPS.

Size of Pump and Diameter of Pipes.	Nominal Horse-power of Engine for each Foot of Vertical Height from Level of Water to Top of Delivery Bend.	Maximum Quantity raised per Minute.	Diameter and Width of Pulley.	Width and Kind of Leather Belt for Lifts up to 20 Feet.	Resistance of each Yard of Pipe for maximum quantity in Ins. of Lift.
Ins.		Gallons.	Inches.		
3	·045	150	8 × 4	2 inch single	3·0
4	·078	260	9 × 4	2 „ „	2·25
5	·121	400	9 × 5	2½ „ „	1·75
6	·175	580	10 × 6	3 „ „	1·5
7	·242	800	11 × 6	3½ „ „	1·26
8	·303	1,000	11 × 7½	4 „ „	1·1
10	·484	1,600	11 × 7	4 inch double	·9
12	·700	2,300	13 × 9½	5 „ „	·75
13	·818	2,700	14 × 10½	6 „ „	·7
16	1·242	4,100	21 × 10½	7 „ „	·58
18	1·606	5,300	24 × 10	9 „ „	·5
20	1·970	6,500	30 × 11	10 „ „	·45
24	2·848	9,400	36 × 15	14 „ „	·37

SPEED TABLE OF CENTRIFUGAL PUMPS.

Giving the Number of Revolutions per Minute (including an allowance for slip of the belt) which the Pumps should make for different Lifts.

Size of Pump in Inches.	Feet Lift.							Size of Pump in Inches.	Feet Lift.						
	3	6	9	12	15	20	25		3	6	9	12	15	20	25
3	463	563	638	709	774	872	960	12	296	353	404	448	487	549	604
4	460	560	634	704	768	864	951	13	276	330	377	418	456	512	563
5	422	505	578	642	700	788	867	16	222	267	304	338	369	414	454
6	388	466	532	592	644	726	798	18	196	236	269	299	325	366	402
7	360	432	493	548	596	672	738	20	178	212	243	270	294	330	363
8	359	432	492	547	596	670	737	24	147	176	201	234	243	273	301
10	359	431	491	546	595	669	736								

The best speed to drive centrifugal pumps is a much debated question. For mine use moderate speed is preferable wherever possible, as less trouble is then experienced with both pump and motor. In other cases the higher speed pumps give good service. For 75 or 100 h.p. and upward 900 r.p.m. is satisfactory; for 30 to 50 or 75 h.p. 1,200 r.p.m., and for smaller pumps 1,500 to 1,800 r.p.m. (*H. Axford in 'Coal Age.'*)

CLASSIFICATION OF CENTRIFUGAL PUMPS.

Generally speaking, centrifugal pumps may be classed in two groups, namely :—(*a*) Without guide wheels ; (*b*) with guide wheels.

(*a*) In pumps which are *not provided with guide wheels* (fig. **19**), the casing is constructed with a spiral-shaped channel with gradually widening sectional area, which acts as a diffuser. These pumps are usually termed low-lift and medium-lift centrifugal pumps, and have, as a rule, one—sometimes two—stages. The pressure they produce ranges up to about 300 ft. water column.

(*b*) For pressures above 300 ft., as required for hydraulic service, mine drainage, boiler feeding, waterworks, etc., three, four up to ten impellers are arranged in series and all built in the common casing (for extraordinarily high pressures two cases might be used).

With these high-lift pumps (fig. 20) the water passes through each impeller in turn, and is directed from one impeller to the next following and from the last into the delivery branch of the pump through specially designed *guide wheels*, converting into pressure, without shock, the bulk of the kinetic energy transmitted to the water by the impellers. Each stage of the pump contributes equally to the total pressure. The design of the diffuser guide wheels and the blades of the

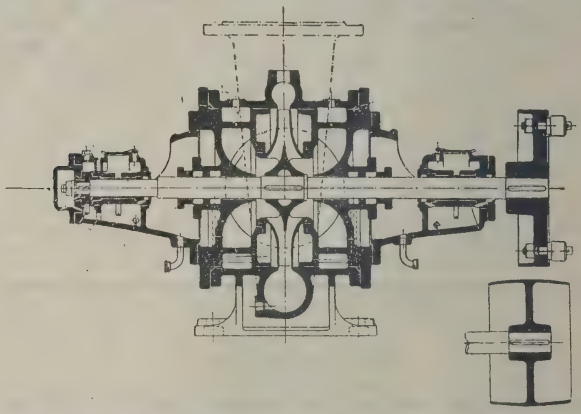


FIG. 19.—Section through Centrifugal Single-stage Pump (Low-lift or Medium).

impellers, i.e. the passages through which the water travels with a high velocity, is mainly responsible for the degree of efficiency attained by a centrifugal turbine pump. The steady flow of water through the pump, with as few changes in velocity as possible, avoiding shocks and eddies with inherent friction loss, is of the greatest importance. The clearance between the rotating and stationary parts in the pump must be so dimensioned that too much water cannot


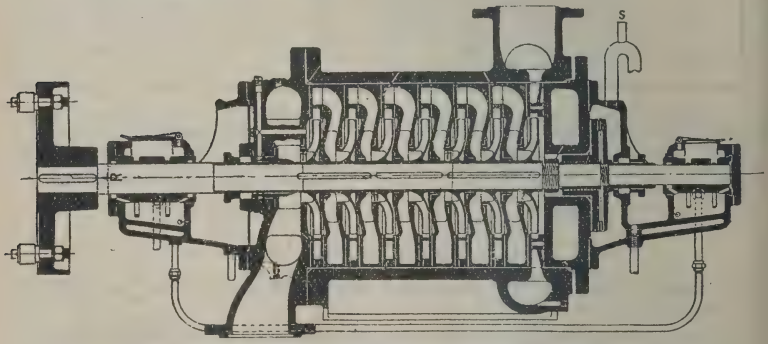


FIG. 20.—Section through Centrifugal High-lift Pump.

flow back from one stage to the preceding one. The balancing of the axial thrust produced in multi-stage pumps is also important.

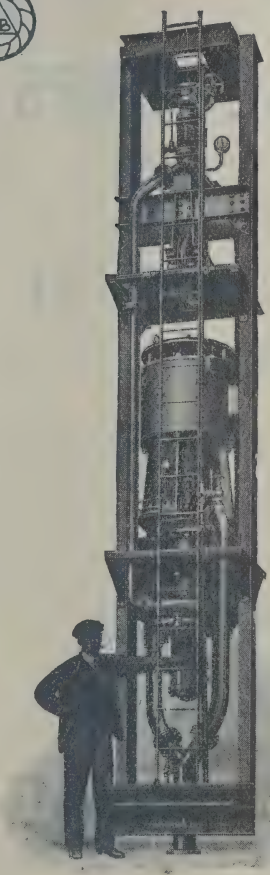There are practically no limits as regards the pressure heads that high-lift centrifugal pumps cannot overcome (some makers, for example, have supplied pumps delivering to 3,500 ft.), as long



Centrifugal Pumps

❖

Messrs. BOVING & Co. manufacture all types of centrifugal pumps and specialise on vertical sinking pumps, for mining and other purposes

BOVING & CO. Limited

Hydraulic Engineers,

Head Office : **56 Kingsway, London, W.C.2**

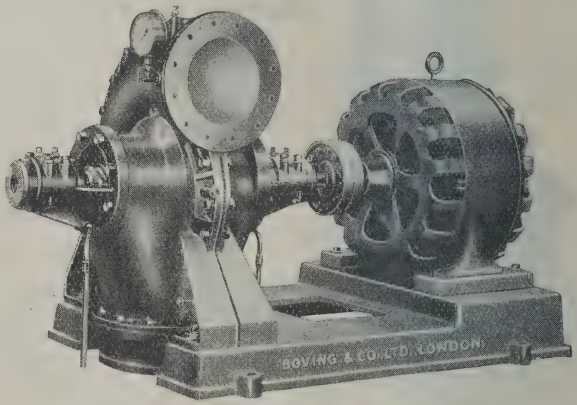
Works - - - STOKE-ON-TRENT

F.11156

CENTRIFUGAL PUMPS

FOR ALL PURPOSES

HIGH · MEDIUM —LOW— PRESSURES



BOVING & CO. Limited

Hydraulic Engineers,

Head Office : **56 Kingsway, London, W.C.2**

Works - - - STOKE-ON-TRENT

F. 1157

as the quantity to be delivered is not too small. The manometric suction head should, for hydraulic reasons, not exceed about 18 ft., as otherwise the efficiency may be reduced and wear in the first stage be caused. For hot liquids the suction water should flow from a higher position into the pump, this height being determined by the fact that no evaporation must take place in the suction pipe.

The characteristics of the centrifugal pump are in many respects different, even the reverse, to those of the piston pump. Thus a centrifugal pump can run with the delivery valve shut, producing no dangerous pressure. Generally speaking, at a constant speed with increase in quantity the pressure produced falls, or, in other words, a reduction in the pressure which the pump has to overcome will result in a greater quantity being delivered. Great care should, therefore, be taken in ascertaining, as accurately as possible, the head for which a pump is to be built, as otherwise the pump will possibly not come up to expectations as regards capacity; or if the head upon which the designer based his calculations is greater than the actual head against which the pump has to work, a larger quantity will be delivered by the pump and the load on the driving motor increased.

No bearings should be permitted inside the pump; they should be carried in brackets outside the casing. Stuffing-boxes should not be used as bearings.

Under specially favourable conditions a centrifugal pump made by a first-class firm should attain efficiencies up to 86 per cent.

Solid Matter Centrifugal Pumps.

See Vol. CCVIII. (Dec. 1920), 'Minutes of the Proceedings of the Institution of Civil Engineers,' pages 275–346, and *Engineering*, Jan. 20, 1922.

The impellers in these pumps have flexible blades.

Packing of Centrifugal Pumps.

About nine-tenths of the trouble with centrifugal pumps is due to improper packing. Square flax is generally used, and this soon wears hard, cuts the shaft, leaks badly, and has to be replaced frequently at considerable expense. Soft-flax packing soaked in oil and graphite gives better results, but it lasts only a short time. A 5 in. double-suction centrifugal pump direct-connected to a 15 horse-power motor running at 1,800 revolutions per minute, supplying a barometric condenser, experienced considerable trouble owing to the packing wearing out, the pump taking air, losing the water, and the vacuum; this pump being packed with rawhide packing, after two months' continuous running was found not to leak. The rawhide packing is very economical, as the old packing does not have to be pulled out, and a new ring can be put in on top of the old and kept in the box till it is completely worn out, also the shaft is kept in a good condition. (*Power.*)

Turbo-Pumps.

Victoria Turbo-Pumps.

(*Boving & Co. Ltd., London.*)

The 'Victoria' turbo-pump is a centrifugal pump designed for high and low pressure duty and suitable for dealing with any quantity of water from 60 gallons per minute upwards. There is no upper limit for the quantity dealt with. For instance, two 'Victoria' pumps have been supplied for the Newport Docks for dealing with as much as 100,000 gallons per minute each.

High-Pressure Victoria Turbo-Pumps.

Fig. 21 shows, in section, the arrangement of runners, guide wheels, casings, bearings, etc.

It may be seen from this figure that from entrance to discharge, the passage of the water through the pump is as direct and short as possible. The water flows from the inlet bend into the first impeller, from which it is discharged at its maximum velocity into the guide channels. These are shaped as diffusers, and thus transform the kinetic energy into potential energy (i.e. static pressure) with minimum loss due to friction and eddies. The water then passes round smooth curves into the amply dimensioned diaphragm chamber behind the guide wheel, through which it flows at a low velocity towards the centre to the next impeller, and so on.

An equal additional static pressure is generated by each stage, and the number of stages is therefore directly proportional to the total lift required.

The form of the vanes and channels of the rotating and guide wheels has been carefully designed, and is the result of long experience on test and in actual daily service.

The impellers and guide wheels are all made of special bronze.

For pumps dealing with acid water a special acid-resisting bronze is used.

The inner surfaces of the impeller and guide-wheel channels are carefully finished throughout either by machine or by hand, so that the water during its whole passage through the pump from the first impeller to the delivery casing never comes in contact with any rough surface. This is a most important point, as experience has proved that wheels treated thus have a much longer life when dealing with gritty or muddy water than those having unfinished channels. In addition it is clear that the consequent decrease in friction materially improves the efficiency.

THE HIGH-PRESSURE VICTORIA TURBO-PUMP.

(Boving & Co. Ltd.)

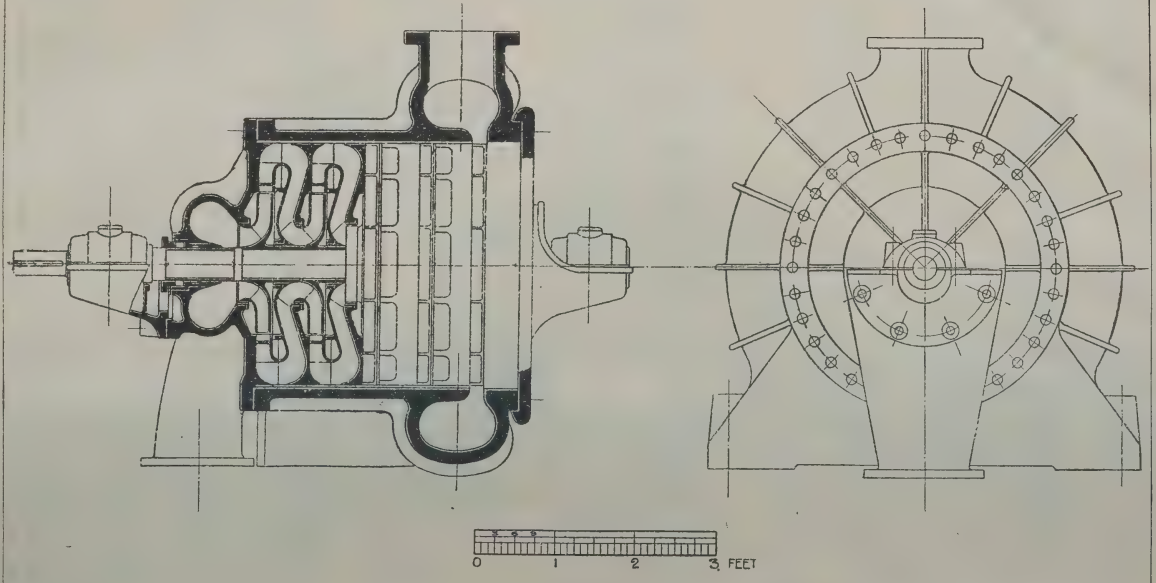


FIG. 21.

The shafts are made of high grade nickel steel to secure strength and rigidity, as well as to resist corrosion. Where the shafts pass through the stuffing boxes they are covered by renewable bronze bushes, and thus protected from wear due to the packing material.

The bearings are cast in one piece with the end covers, which fit cylindrically into the centre casing. It is therefore impossible for any part to get out of alignment if the pump is dismantled. The bearings are of the ring lubrication type, specially designed for high speed. They are separated by a gap of an inch or two from the packing, so that it is impossible for any grit, mud or water to enter. Bearings for sinking pumps have forced lubrication with oil under pressure.

The central casing is of cylindrical bore, and is in all cases lined with special bronze, so that no acid or gritty water comes into contact with the casing at any point. The guide wheels and diaphragms fit cylindrically into the casing. The dismantling and re-assembling of the sundry parts is therefore an extremely easy matter, as they only have to be pushed in one after the other from the open end. It is therefore impossible even for an unskilled erector to get the parts out of true alignment.

Another particular feature of the 'Victoria' pump is that *there is no pressure-stuffing box*, as only low pressure exists in the end chamber behind the last diaphragm. Where pressure-stuffing boxes are used, to avoid undue leakage they have to be screwed up very tight, and the pressure of the packing material on the shaft causes very considerable wear, and also loss of efficiency amounting to as much as 7 per cent.

In the suction end the stuffing box is water sealed, and as it has only to hold tight against $\frac{1}{10}$ of an atmosphere, there is no need to set the packing hard against the shaft.

There is no end-thrust bearing in the 'Victoria' pump as there is no end thrust. This is balanced with absolute accuracy by a special patented arrangement of extreme simplicity which cannot wear or get out of order, and which automatically adjusts itself for changes of head and output while the pump is running, and for any wear that may take place in the impellers.

The 'Victoria' pumps are generally supplied with horizontal shafts, but when required they may be arranged for vertical shafts as well. In this case also the automatic balancing device takes the weight of pump spindle, shaft, and motor armature, and thus provides against any end thrust. The bearings have forced lubrication.

These turbo-pumps are generally coupled directly to electro-motors, but they may also be driven by means of belts or gearing.

Two 'Victoria' pumps have been supplied which are working in a well 150 ft. below the surface, and are driven by vertical shafts of 150 ft. length by means of helical bevel gears from an ordinary line shaft. These pumps work sometimes submerged, sometimes above water level.

For running at other speeds the following rules apply :—

The capacity varies directly as the speed, the head varies directly as the square of the speed.

In the table, page 1160 for each size, two figures are given for the gallons per minute. These represent maximum and minimum figures, and any delivery between these two figures can be arranged for. The two figures for the horse-power correspond to those two deliveries. Also for each size and number of stages two figures are given for the head. Either figure can be arranged for without altering the delivery, by adopting either of two designs of impeller, but not intermediate figures in this case.

Gallons per minute are independent of the number of stages, while the head varies directly as the number of stages.

The speed should always be fixed as high as circumstances permit, as this gives both highest efficiency and lowest first cost.

As an example may be given a pump to deliver 480 gallons per min. against a head of 640 ft., to be coupled directly to an electric motor running at 1,450 revs. From the table this would be a pump with 6 stages and a delivery and suction branch of 150 mm. (6 ins.).

The b.h.p. required would be $480 \div 440 \times 122 = 133$ b.h.p.

In order to reach higher heads than those stated in the table, two pumps may be connected in series, thus dividing the total head into two ; it is desirable that the number coupled together should not exceed two.

Low-pressure Victoria Turbo-Pumps.

These pumps have a very high efficiency, and the design makes them immune to a high degree against the destructive action of grit or mud. Careful tests have proved that more than 80 per cent. efficiency can be obtained for large units, and even for so small a capacity as 2,000 gallons per minute an efficiency of 75 per cent. can safely be guaranteed.

The runners of these low-lift pumps are of the double-wheel type, the water entering these runners symmetrically on both sides, thus ensuring perfect balance from end thrust.

The delivery casing is formed as a spiral in exact accordance with a theoretically-determined curve, so that the water is conducted smoothly off the runner and the great velocity of the water at the outlet of the runner reduced to the velocity in the pipe-line.

The stuffing boxes are water sealed, a bronze lantern ring being inserted between the two packing rings of soft hemp soaked in hot tallow. This ring forms a chamber which is in com-

TABLE SHOWING PARTICULARS OF HIGH-PRESSURE VICTORIA TURBO-PUMPS AT 1,450 REVOLUTIONS PER MINUTE.

Suction Branch Diam.	Delivery Branch Diam.	Quantity. Gallons per Minute	Head and B.H.P.	Number of Stages.															
				2		3		4		5		6		7		8		9		10	
				a.	b.	a.	b.	a.	b.	a.	b.	a.	b.	a.	b.	a.	b.	a.	b.	a.	b.
mm.	mm.																				
90	75	121 to 154	Head ft. B.H.P. required	65·6 3·8 to 4·9		98 5·8 to 7·3		131 7·7 to 9·7		164 9·6 to 12·2		196·5 11·5 to 14·5		229 14 to 17		262 16 to 19·5		296 18 to 22		328 20 to 24·5	
100	100	154 to 195	Head ft. B.H.P. required	71 5 to 6·5	77·5 5·5 to 7·2	106·5 7·5 to 9·7	116 8·4 to 10·8	144 10 to 12·8	155 11 to 14·2	177 12·8 to 16·4	194 14 to 18	213 15·3 to 19·7	232 16·8 to 21·5	249 18 to 23·5	271 19·7 to 25·6	284 21 to 27	310 22·5 to 29	320 23·5 to 30	348 25·5 to 32·5	355 26 to 33	387 28·5 to 36
100	100	175 to 240	Head ft. B.H.P. required	88 7 to 9·5	93 7·5 to 10	132 10·6 to 14·4	140 11·4 to 15·4	176 14·3 to 19·4	186·5 15·1 to 20·5	220 17·8 to 24	233 18·8 to 25·5	264 21·2 to 28·5	280 22·5 to 31·5	308 25·5 to 34·5	326 27 to 37	352 29 to 39·5	373 31 to 42·5	396 32·5 to 45	420 34·5 to 47·5	440 36 to 49·5	466 38·5 to 53
125	100	265 to 330	Head ft. B.H.P. required	105 12·2 to 15·2	115 13·3 to 16·7	157 18·3 to 23	172·5 19·6 to 25	210 25·5 to 32	230 26·5 to 33·5	262 31·5 to 38·5	287 33·5 to 42	314 37 to 46·5	345 40 to 50·5	367 43·5 to 55	402 47 to 59	420 50 to 63	460 53 to 67				
125	100	308 to 375	Head ft. B.H P. required	151 20·5 to 25	164 22·5 to 27	227 30·5 to 37	246 33·5 to 40·5	302 41 to 49·5	328 44·5 to 54	378 51 to 62	410 56 to 67	454 61·5 to 74	491 67 to 81	530 72 to 87	574 78 to 94						
150	150	440 to 550	Head ft. B.H.P. required	200 38 to 48	213 41 to 51	300 57 to 71	320 61 to 77	400 76 to 96	426 81 to 102	500 95 to 119	533 102 to 128	600 114 to 143	640 122 to 153	700 134 to 168	745 143 to 179						
175	175	620 to 770	Head ft. B.H.P. required	246 65 to 81	262 70 to 88	369 97 to 121	394 105 to 132	492 130 to 162	525 141 to 176	614 162 to 202	656 175 to 219	737 195 to 243	788 211 to 264	860 227 to 283	920 245 to 306						
200	200	815 to 1055	Head ft. B.H.P. required	302 104 to 134	328 112 to 146	453 155 to 202	492 169 to 220	604 206 to 270	656 225 to 292	750 260 to 336	820 282 to 365	905 311 to 405	984 338 to 440	1058 362 to 470	1148 395 to 510						
225	225	1030 to 1190	Head ft. B.H.P. required	344 149 to 171	376 163 to 185	515 223 to 256	565 245 to 283	688 299 to 344	753 326 to 375	858 371 to 428	942 407 to 469	1030 450 to 517	1130 490 to 565								
250	250	1160 to 1320	Head ft. B.H.P. required	400 194 to 220	433 210 to 238	600 291 to 330	650 316 to 356	800 390 to 440	866 420 to 475	1000 486 to 550	1082 526 to 595	1200 585 to 661	1300 631 to 715								

munication with the outlet of the pump, thus sealing the gland towards the interior of the pump on one hand, and towards the atmosphere on the other hand.

The pump is fitted with ring lubricated bearings separated from the pump casing by an ample gap. Renewable bronze bushes are provided for making a tight joint between the runner and the casing.

The low-lift pumps also may be designed for horizontal or vertical shafts.

Sinking Pumps.

Considerable developments have taken place in recent years in the use of movable pumping units for sinking purposes, and the 'Victoria' pump has been successfully adapted for this purpose. A unit consisting of a vertical pump directly coupled to an electric motor is placed in one frame, the motor being well above the pump; the whole is slung into the pit which it is required to de-water. As the pumping progresses, the pump unit is lowered stage by stage and another length of delivery-pipe is inserted; in this way the water level can be followed.

A large contract for the supply of sinking pumps was awarded by the French Commission (appointed to deal with the reconstruction of the devastated regions in France) to Messrs. Boving & Co. Ltd. This contract included the supply of the necessary sinking pumps for de-watering the various coal mines which were completely flooded during the German invasion. In addition to several units which were rebuilt for dealing with this special work, twelve completely new vertical type motor-driven centrifugal sinking pumps have been supplied, and are now in commission, and at the end of the year 1921 the work of de-watering was proceeding most satisfactorily; it was expected that the complete area would be pumped out during the year 1922. Each of these pumps is run at a speed of 1,460 r.p.m. and is coupled to a vertical type driving motor by suitable flexible couplings, each complete set being mounted in a steel frame, complete with necessary platforms, piping, valves, etc., so that it can be lowered down the pit shaft as the level of the water is reduced. In order to deal with the increasing head of water as the sets are lowered down the pits to keep pace with the lowering of the water level, different sets of impellers are used, these being changed at various set stages, the volume of water dealt with decreasing, of course, as the head increases; the total range varying from a 7,750 gallons per minute, at from 0 ft. to 131 ft. total head, to 1,350 gallons per minute at 800 ft. head. It was estimated that when pumping operations in the flooded coal fields commenced, there were about 100,000,000 cubic metres of water to be raised.

Mather & Platt Centrifugal and Turbine Pumps.

These are of five main types:—

(1) 'Solovane' for low lifts up to 90 ft.
(2) 'Lonovane' for lifts up to 70 ft., and specially designed for Power Station work, condenser circulation.
(3) 'Medivane' without guide vanes, for heads up to 150 ft.
(4) 'Sintovane' Turbine Pump with guide vanes, for heads up to 300 ft.
(5) 'Plurovane' Turbine Pump with guide vanes, for heads up to 3,500 ft.

The 'Solovane' pump, fig. 22, p. 1162, has a single side suction impeller, hydraulically balanced, and delivers water into a carefully designed volute, the entrance to which is obtained by a single vane. It is an efficient yet cheap pump.

The 'Lonovane' pump, fig. 24, p. 1163, has a double suction impeller, and is therefore always in hydraulic balance. There are no guide vanes. The chief feature of this type of pump is its horizontally split casing, also split bearings with split bushes so arranged that the entire pump can be dismantled without disturbing the pipe connections or the motor or machines on either side of the pump, and by simply lifting off the top half of the casing and bearings; this pattern of pump, therefore, is noticeable in regard to accessibility, efficiency, and mechanical design.

The 'Medivane' pump has a double suction impeller, and is therefore always in hydraulic balance. There are no guide vanes, but a carefully designed spiral or volute leads the water to the discharge outlet with maximum conversion of velocity head into pressure head. Impellers of highest quality bronze, removable neck rings and renewable sleeves on shaft where it passes through the stuffing boxes. Bearings are external ring oil-lubricated split bearings and bushes. The general make is high-class, and its efficiency is high. Sizes 6 ins. and over are made with split casings as described for the 'Lonovane' pump.

The 'Sintovane' single-stage pump, fig. 23, p. 1162, is similar to the 'Medivane' in points of impeller and mechanical designs, but is fitted with guide vanes. These vanes are designed to receive the water at very high velocities, and to convert a maximum of this velocity head into pressure head.

The 'Plurovane' pumps, fig. 25, p. 1164, are made with single-entry impellers which discharge water into guide vanes whose function is not only to convert velocity head into pressure head, but also to guide the water into the eye of the next impeller, and so on. Each stage adds the head generated by its impeller to the head delivered to its suction: thus, if one stage generates 100 ft. head, two stages will generate 200 ft., three stages 300 ft., and so on. Each stage is self-contained, having its own body, impeller, and renewable rubbing parts, such as neck rings and bushes. Guide vane tips are also renewable. Impellers and guide vane tips are in special

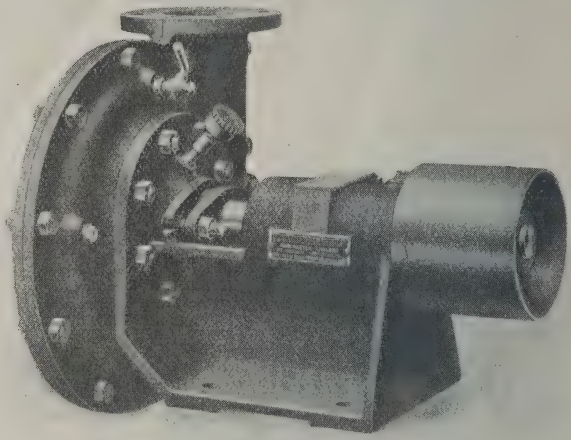


FIG. 22.—The 'Solovane' Pump.

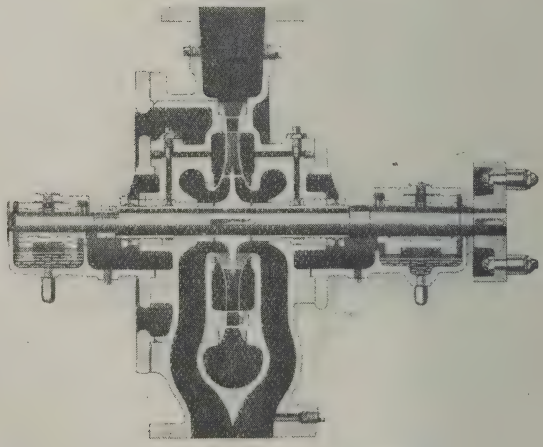


FIG. 23.—The 'Sintovane' Single-stage Pump.

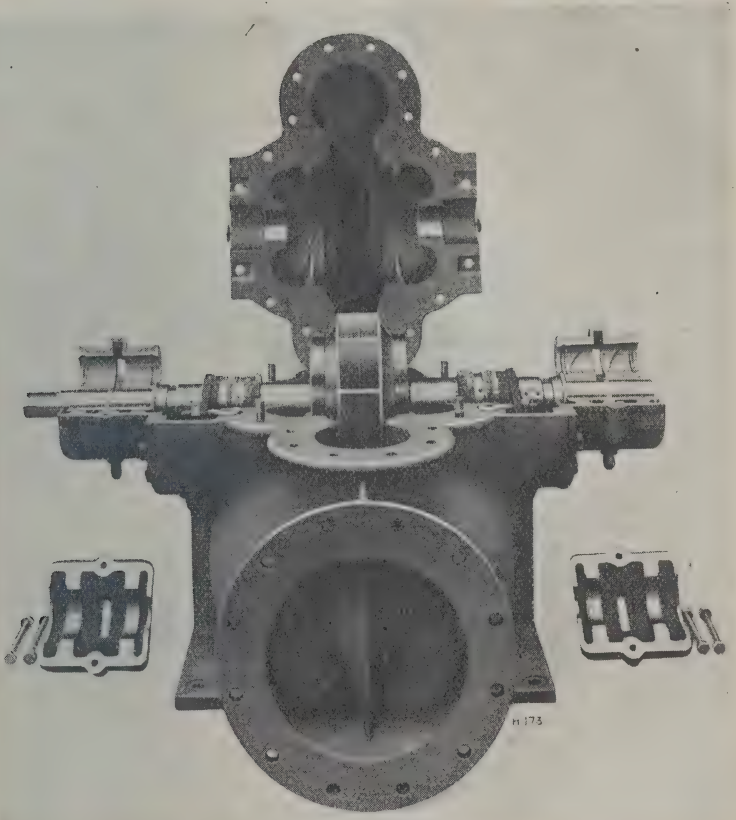


FIG. 24.—The 'Lonovane' Centrifugal Pump, showing Split Casing and Split Bearings.

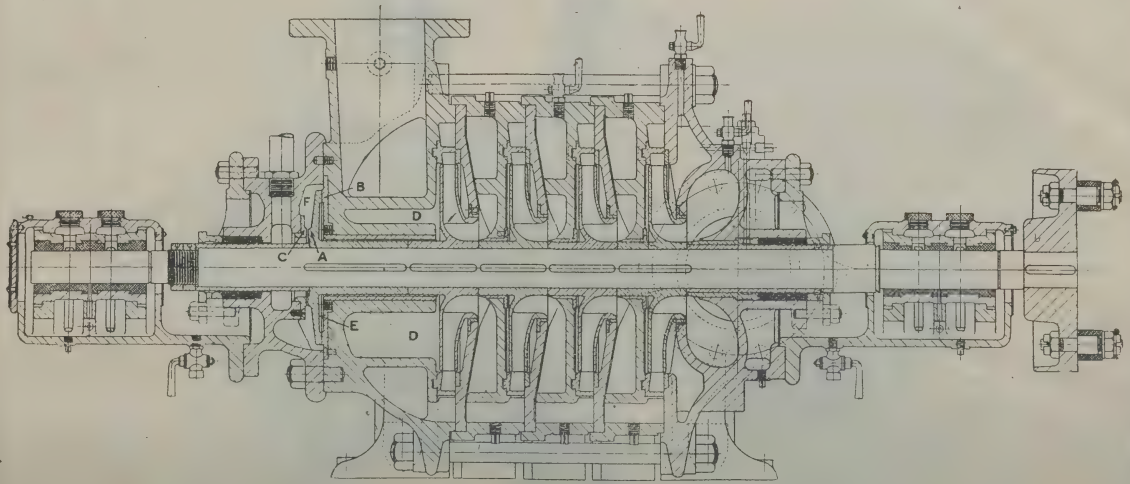


FIG. 25.—Typical Section through Standard 'Plurovane' High-Lift Turbine Pump.

A, Disc or Balance Valve.
B, Large Seating (renewable).
C, Small Seating (renewable).
D, High Pressure Chamber, i.e. pressure of last stage.
E, Intermediate Pressure Chamber.
F, Low or Suction Pressure Chamber.

zincless bronze which is acid-resisting. The sections are held between two end bodies, one of which forms the suction body and the other the discharge body. Bolts passing between suction and discharge bodies hold all the intermediate sections or stages in place. This construction is found by experience to be the most suitable, as the sections can never rust together, and can therefore always be easily dismantled for repairs. The chief feature to be noted in the design is the automatic hydraulic balancing device which does away entirely with thrust bearings and reduces wear to a minimum even on gritty waters. Even when wear takes place the cost of renewals is very slight and can be carried out by removing one small cover. These pumps are principally used for colliery drainage, and have been supplied for heads up to 3,500 ft., the largest pump built requiring about 2,000 h.-p. to drive it.

The turbine pump has been applied to nearly every condition where water, acids, pulp, and most other liquids require to be dealt with, and also for fire purposes.

THE 'PULSOMETER' HIGH-LIFT TURBINE PUMP.

In this pump, fig. 26, the unbalanced axial thrust is taken up inside the pump by a balancing disc fixed on and revolving with the spindle.

The periphery of the disc moves in close contact with a seat fixed to the delivery cover. The space enclosed by the disc and its seat is supplied with water under pressure from the last cell, and this water passes out between the periphery of the disc and the seat into the chamber in which the disc revolves, and then through a connecting pipe back into the suction pipe.

There are no collars on the spindle at the bearings, so that it is free to move axially when the pump is not working, but when working the balancing disc keeps it firmly in position. The system of balancing has the further great advantage that the stuffing box at the delivery end is exposed to suction pressure only, no matter what pressure the pump is working against.

The impellers are not balanced, and the unbalanced area of each impeller causes an axial thrust towards the suction cover.

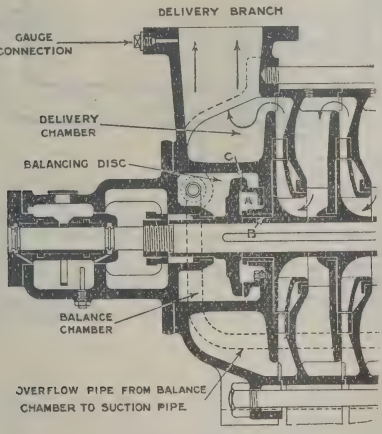


FIG. 26.

The chamber A is supplied with water under pressure from the last impeller, through the clearance B between the spindle and the central bush in the delivery cover.

The axial thrust towards the suction causes the clearance C between the balancing disc and its seat to close up, so that more water enters the chamber A than leaves it, and the pressure in this chamber therefore increases until the axial force on the balancing disc towards the delivery cover balances the axial thrust of the impellers towards the suction cover.

If the axial thrust from the impellers increases, the clearance C closes up, and the pressure in the chamber A increases until equilibrium is again restored.

If the axial thrust from the impellers decreases, the clearance C opens, and the pressure in the chamber A is reduced until equilibrium is again restored.

The balancing disc is made so large that there is no danger of its coming into contact with its seat under the most unfavourable conditions of pumping, such as when the pump is running at full speed with no head.

As there is no metallic contact there is no wear, except when gritty water is pumped, and when from this cause the wear has become excessive, the disc or its seat, or both, can be replaced in a very short time and at small cost, without dismantling the pump, it being only necessary to remove the bearing.

Internal Combustion Pumps.

The Humphrey Internal-Combustion Pump (Gas or Oil).

(William Beardmore & Co., Ltd., 36 Victoria Street, S.W. 1.)

(1)

Fig. 27 represents a diagrammatic view of the Humphrey pump in its simplest form. The arrangement consists of a bent pipe D terminating at one end in a delivery tank E T, and at the other end in a combustion chamber C, in which a charge of gas and air is exploded over the surface of the water. When this explosion takes place the pressure above the water surface sets in motion the whole column of water, the hot gases expanding above it. Once the column of water is set in motion its inertia carries it forward, so that the pressure of the gases in the combustion-chamber ultimately falls below that of the atmosphere,

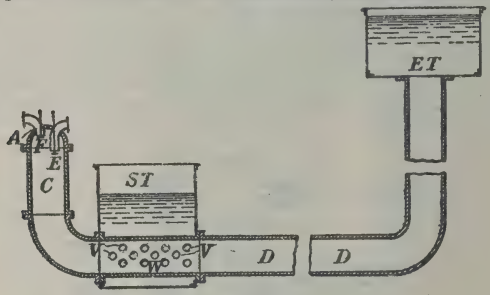


Fig. 27.

and as a result an exhaust valve E opens under its own weight. The forward motion of the water continuing, the level in C finally falls below that of the water in the supply-tank S T, and fresh water then enters through the valves V. Finally, the momentum being exhausted, the water begins to flow back along the play-pipe D, and rising in the chamber C, closes the valve E by impact, trapping above this level a cushion of the spent gases mixed with a large proportion of air which was drawn in through a scavenger-valve (not shown in the fig.) during the forward motion of the water. This cushion of air is compressed into the head of the chamber by the continued return of the water column, the latter being thus finally brought to rest, in which condition the pressure of the cushion is much above that due to the static head. As a


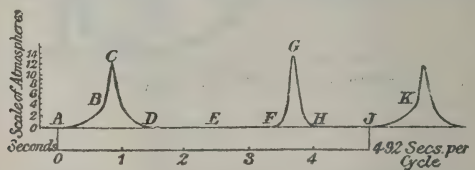


Fig. 28.

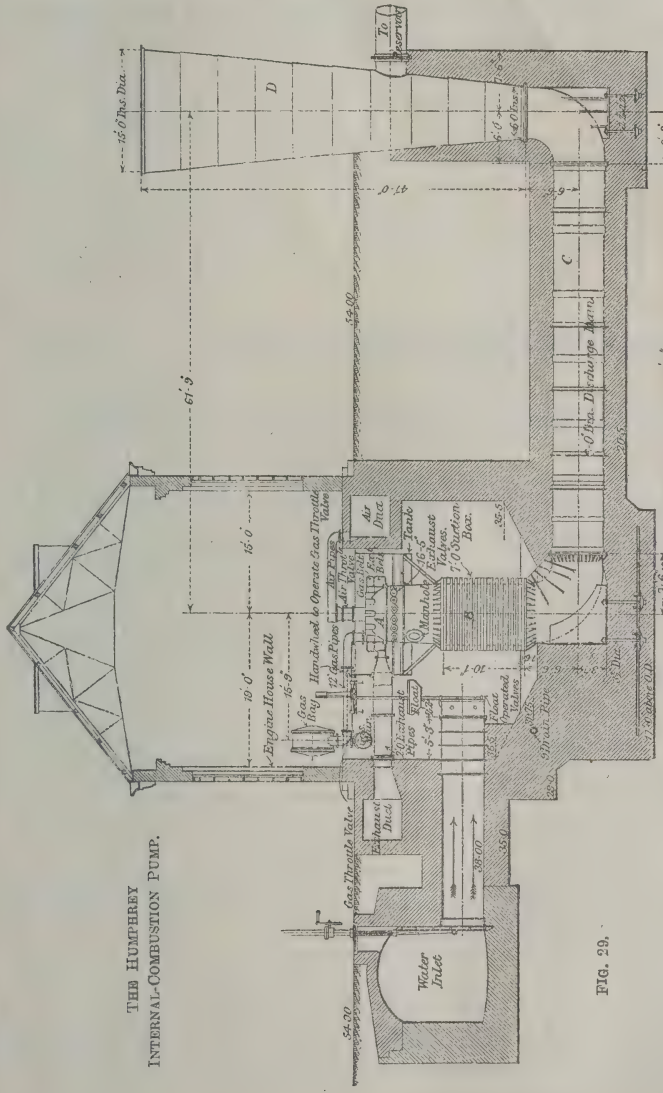consequence the water column begins a second forward oscillation, in the course of which the pressure in the cushion space falls again below that of the atmosphere. By means of interlocking gear the exhaust-valve E and the scavenger-valve are now prevented from opening, but the valve A being simultaneously unlocked, a charge of gas and air enters the chamber. When the forward momentum of the water-column is again exhausted, a return flow takes place, which compresses the new charge and fires it automatically at the proper time, thus starting a fresh cycle of operations.



THE HUMPHREY
INTERNAL-COMBUSTION PUMP.

FIG. 29.

By allowing the water column to swing freely in the manner described, there results a cycle with four strokes of unequal length, such as theory requires.

A comparison of the indicator diagrams, fig. 30 and fig. 31, shows at a glance the extra work obtained by the Humphrey pump cycle (fig. 30) compared with the usual Otto cycle (fig. 31).

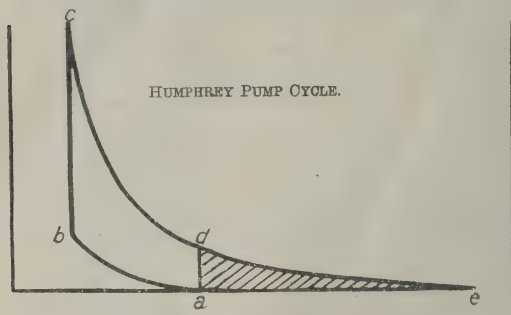


FIG. 30.

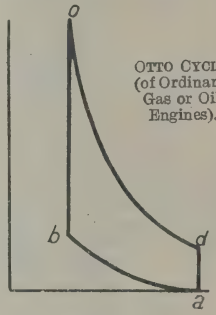


FIG. 31.

Work of Humphrey Pump Cycle . . . = area *abcdea* (Fig. 84).
Work of Otto Cycle (Ordinary Oil or Gas Engines) = „ *abcda* (Fig. 85).
Extra Work obtained by Humphrey Pump Cycle = „ *adea* (Fig. 84).

An indicator (driven by clock-work at a uniform rate), gives a diagram as shown by fig. 27, p. 1166. In this diagram, from A to B, the charge is compressed, being fired at B, which causes the pressure to rise to C; from C to D the gases expand, doing work. The exhaust-valve opens at D, and from D to E there is suction and from E to F slight pressure in the pump chamber. At F the exhaust-valve closes, and compression of the cushion takes place; it will be seen that the maximum pressure attained on this return stroke is in this case higher than the explosion pressure. From G to H the cushion expands, and at H the admission-valve opens, closing again at J on the return of the water-column, to compress the new charge, J being the point at which a fresh cycle of operations is started.

The general arrangement of one of the Humphrey pumps as installed at Chingford (Metropolitan Water Board) is shown by fig. 29, p. 1167). Each pump (which delivers 40,000,000 gals. per diem) has a pump cylinder 7 feet in diameter, and has a cast-steel head A, into which the explosion charge is compressed and fired, a water suction-valve box B, from which a play-pipe C leads to the base of a water tower D, built up of riveted plates. From this tower a 4-foot pipe leads over the top of the reservoir embankment, and discharges into the uppermost of a series of water cushions extending to the bottom of the reservoir. The supply of water is led along the back of the pump-house through a concrete conduit, and from the latter by a cast-iron pipe to the pump pit. The air-duct for the supply is arranged below the floor level on the right of the building, and the exhaust-duct by which the spent gases are passed into the atmosphere, on the left.

Owing to the gases being exhausted at atmospheric pressure, the pump works practically without noise.

The fuel consumption of the pumps (between 250 and 300 h.p. each) was shown by the official trials at Chingford to be 0·904 lb. of anthracite per actual pump-horse-power per hour.

The Humphrey pump is also built to work on a two-stroke cycle; one out-stroke, during which the water is drawn into the pump and delivered, and one in-stroke for compressing the fresh combustible charge. The expulsion of products and replacement by fresh mixture occurs during the period between expansion to atmospheric pressure on the out-stroke and the closing of the exhaust valves on the in-stroke.

The pressure-time diagram will then appear as fig. 28, p. 1166, but with the part from F to J omitted.

The Humphrey pump is particularly suitable for lifts up to 150 ft.

The water is not in the least contaminated by the products of combustion.

Another important application of the Humphrey pump principle, claimed by the makers to give still more economical results as compared with piston machines, is in the compression and exhaustion of air and other gases. Nearly isothermal compression can be obtained, and as there need be no water valves, the apparatus becomes even more simple than a pump.

Pumps, blowers, air compressors or exhausters can be made in very large sizes.

The following claims are made for the Humphrey pump:

1. Absolutely complete expansion of the burnt products, resulting in a great saving of fuel. See figs. 30 and 31, p. 1168.

2. A simple column of water does the same work as, and replaces, 'piston, connecting-rod, crank-shaft, bearings, flywheel, belt, pulleys, and centrifugal or other pump' in other systems, thus eliminating the wear and frictional losses of those parts.

3. The force of the explosion acts directly upon the liquid to be pumped without there being any intermediaries.

4. Practically no lubricating oil is required.

5. There can be no seizing of piston or bearings, and no cooling water is required.

6. The risk of serious breakdown is entirely eliminated.

7. The running and maintenance costs are much reduced.

The Humphrey pump works with large and powerful yet slow strokes, about 15 to 30 cycles per minute, as compared with 200 to 300 r.p.m. of other engines and pumps.

Scoop Wheels.

For raising large bodies of water through a small elevation the scoop wheel is very effective. At Amsterdam the canals are freshened by the drawing of water through them by 8 scoop wheels, discharging to the Zuyder Zee.

Their diameter is 8 m.; breadth, 3·25 m.; capacity, 300 m.^{3} each per minute; speed about 3 revolutions per minute. Floats inclined so that they enter water nearly horizontally, and leave nearly vertically. Height of lift, about 1·5 m.

The tendency to-day is to substitute the centrifugal pump for the scoop wheel even for small elevations.

Water Raising from Deep Wells by Compressed Air.

(1)

In this system, air under the necessary pressure, and of suitable volume, is admitted to the foot of a pipe immersed in the water to be lifted, as shown by fig. 32, p. 1170. By this means, alternate bands or plugs of air and water are formed in the water pipe or 'rising main,' and the air does not, as might perhaps have been anticipated, pass through the mass of water. The result of this is that the aggregate weight of the water in the rising main is insufficient to balance the column of water in the boring, and the pressure of the latter therefore produces an upward movement of the air and water column in the rising main. As the force lifting this column is the head of water at A, it follows that the height to which the water can be lifted depends upon the depth to which the pipe is immersed below the pumping level of the water in the boring: thus the higher the 'lift' required, the deeper must be the point at which the air is injected relatively to the normal water level therein, and consequently the height to which the water has to be raised determines the minimum depth to which the boring must be driven.

The following table shows the approximate horse-power required to compress 1 cubic foot of free air to different pressures per square inch:—

Locality.	Pressure in Pounds per Sq. Inch.	H.p. required to compress 1 Cub. Ft. of Air.	Locality.	Pressure in Pounds per Sq. Inch.	H.p. required to compress 1 Cub. Ft. of Air.
1. Solvay Works, Saaralben	176	0·434	5. Tunbridge Wells Waterworks	60	0·159
2. Brostowe Estate, near Friedheim	140	0·376	6. Sugar Factory, Glogan	45	0·145
3. Tunbridge Wells Waterworks	100	0·201	7. Yard Works, Zwickau	30	0·121
4. Ditto	80	0·189	8. Rossland Mines, B.C.	95	0·134

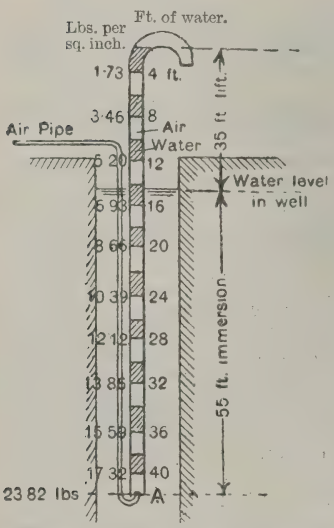
With regard to the quantity of air required to lift a given volume of water to any specified height, the following formula has been found to give correct results:—

x = cubic feet of free air per minute; A = gallons of water required per minute; B = 'lift of water in feet;

$$x = \frac{A \times B}{125}.$$


The velocity of the air should not exceed about 20 ft. per second.

In considering the design of the compressor, it is obviously important in the interests of economy to provide either 2-stage or 3-stage machines (with intercoolers) according to the amount of compression required; thus for pressures above 60 lbs. per square inch and up to 300 lbs. per square inch 2-stage machines are most suitable, and from this to 1,000 lbs. per square inch 3-stage machines are desirable. The cooling of the air is also of great importance in this respect, and care should be taken to start with an air supply at the lowest temperature obtainable.



Aggregate head of water in rising main, 40 ft. = 17·32 lbs. per square inch.
Aggregate head in well = 55 ft. = 23·82 lbs. per square inch.

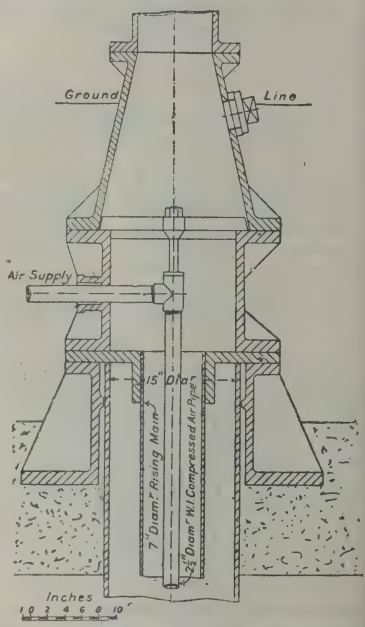FIG. 32.



Detail at top of Bore hole, showing Connection of Air Supply.

FIG. 33.

At Tunbridge Wells the compression is carried out in two stages, the first to a pressure of 25 lbs. per square inch, and the second, after intercooling, to the pressure required, which varies from 90 lbs. to 100 lbs. per square inch according to the depth of the water in the boring. The air is delivered into a large steel receiver situated in the engine-house, whence it is conveyed to the wells by means of a 4-inch cast-iron pipe. This main is formed of ordinary spigot and socket pipes with lead joints, which, however, shortly after starting the plant, showed signs of leakage adjacent to the receiver. This was traced to the expansion and contraction of the pipes due to the high temperature of the air, and was effectually prevented by fixing a cooler on the air pipe between the second stage compressor and the receiver.

There are two sets of engines and compressors, designed to deliver a sufficient volume of air to

lift the desired quantity of water, if need be, over a standpipe 20 ft. high above ground level The engines are compound, with cylinders 8 ins. and 12 ins. diameter respectively, the air-compressing cylinders being 10 ins. (first stage) and 6 ins. (second stage) diameter respectively. The stroke in each case is 14 ins. The air cylinders are water-jacketed at sides and covers. The clearance in the air cylinders does not exceed 1 per cent. of the capacity. The air is drawn from outside the building, and is carried in an earthenware pipe under the floor to the inlet valves, so that it enters the compressors at the lowest possible temperature.

An intercooler (between first and second stages of compressors), formed of a series of 'Row' tubes cooled by circulating water, is fixed outside the engine-house.

The boring is 350 ft. deep. The upper portion is lined with 15-inch steel tubes, and the lower portion (150 ft.) with steel perforated tubes, 13½ ins. diameter. The rest level of the water is about 96 ft. from the surface, and the pumping level, when drawing at the rate of 32,000 gallons per hour, is about 120 ft. from the surface, but on the cessation of pumping the water resumes its rest level very rapidly.

The water pipe or rising main is 7 ins. diameter, and is carried to within a few feet of the bottom of the boring. The air pipe was originally 1½ ins. diameter, but was subsequently increased to 2½ ins. diameter, an alteration which reduced the air pressure required from 105 lbs. to 91 lbs. per square inch, the latter figure corresponding very closely to the head of water above the bottom of the air-pipe, and thus proving the loss by friction to be reduced to a minimum.

In a trial run of 10½ hours made soon after the plant was installed, an average of 31,402 gallons per hour was raised from this boring under a head of 133 ft., whereas an ordinary single-acting pump, such as could be fixed in a boring of this small diameter, would no give more than about 18,300 gallons per hour.

The most favourable result was obtained when the proportion of immersion of air pipe to lift of water was 3 to 1 at the start and 2·2 to 1 at the finish, the volume of air used per volume of water lifted being in the proportion of 2·69 to 1. The efficiency in this case was 36·8 per cent., calculated on the water raised proportionate to the indicated horse-power developed in steam-cylinders, and 46 per cent. calculated from the indicated horse-power shown by air-cylinder diagrams. No record of fuel consumption was made. If the proportion of immersion to lift is reduced the efficiency falls.

From a trial made with a much less immersion of air pipe than in the foregoing, and when the proportion of air used to water lifted was more than double that in the former case, the cost of fuel worked out at 1·073*d.* per 1,000 gallons for a maximum lift of 125 ft. 9 ins., the price of coal being 25*s.* 5*d.* per ton. (*W. H. Maxwell.*)

(2)

In order to enable the well to work successfully and economically, the pipe should be properly proportioned. When the pipe is too large, the water is apt to blow out in a spray and with great force, which is obviously very wasteful both of air and water. When the pipe is too small, the air is apt to rise to the surface of the water in small bubbles, and without producing the desired results. When the air pipe is outside of the water pipe, the proper relation between the diameters of the air and water pipes is as 1½ to 4, which gives a ratio of actual cross-sectional area of 6·24. When the air pipe is situated inside the water pipe, the same ratio of actual cross-sectional areas should obtain, and in this case the diameter of the water pipe is

$$D = \sqrt{\frac{a \times 6{\cdot}24 + A}{{\cdot}7854}},$$

in which a and A represent the actual internal and external areas of the air pipe. The proper areas of the air and water pipes, together with the required depth of submersion and the introduction of the air into the water pipe at the proper point, are the principal factors which determine the success of the air lift.

The water pipe should be submerged to a depth of 18 ins. for each foot lift above the lowest water level in the well; in other words, the best results are obtained when submersion $r = 1{\cdot}5$ the lift, the latter being measured from the lowest, or the working water level, as it is called.

When the well is being worked, the water level falls below the level reached, before water is pumped out. To illustrate the foregoing rule, suppose we wish to elevate water 25 ft. above the surface of the ground, and that when drilling, the well water is obtained at a depth of 40 ft. below the surface. The lift is now 40 ft. + 25 ft. = 65 ft. Applying the foregoing rule for depth of submersion, we have 65 ft. × 1·5 ft. = 97·5 ft., or practically 100 ft., thus giving a total height of 165 ft. from the point where the air enters the water pipe to the point of discharge. After drilling to a depth of 165 ft. − 25 ft. = 140 ft., we are ready to find the working water level in the well. First put the water and air pipes into the well; then drop a float attached to a string into the well. Pass the string over a pulley, and attach a weight to the free end. The weight should be just heavy enough to take up the slack in the string, and at the same time allow the float to descend with the water level as the latter is lowered by pumping. The distance the weight rises will indicate the depth of the working level below the level first obtained in the well, and the latter level should be employed when making calculations involving lift and depth of submersion. A very simple as well as convenient arrangement for measuring the fall of the water level in the well can be made as follows: Take a pulley whose circumference is twelve times the circumference of the shaft upon which the pulley is mounted, then wind the float string around

the pulley, and fasten another string to the shaft, so that it will be wound on the shaft as the float string unwinds from the pulley. It will be seen that this arrangement reduces the travel of the string on the shaft to a convenient length, and one that can easily be measured. Suppose the water level in the well falls 10 ft. The corresponding additional depth of submersion will be 10 ft. × 1·5 ft. = 15 ft., and if the well is not deep enough it should be drilled to a sufficient depth to permit the increased depth of submersion to be obtained, and this is done in order to make the total depth of submersion equal to $1\frac{1}{2}$ times the lift, which proportion, as has been pointed out, is necessary for the best results. If it is not practicable to increase the depth of submersion after finding the working level, the height of the lift may be decreased a corresponding amount; otherwise the efficiency of the lift will be to some extent affected. If the well had been drilled deeper than necessary at the outstart, the increased depth of submersion could readily be obtained by simply lowering the pipes to the required depth. It will be seen that the lower water level in the well also determines the necessary change in the point at which the air should enter the water pipe. With a fall of 10 ft., when pumping, the air should enter the water pipe at from 38 ins. to 40 ins. from the lower end of the pipe; with a fall of 5 ft. the air should enter at from 24 ins. to 26 ins. from the lower end of the water pipe, and with a fall of from 1 ft. to 3 ft. it should enter at a point 18 ins. to 20 ins. from the lower end of the pipe. For other distances the same ratio may be used. A well put down to the depth previously determined and fitted with pipes of the sizes indicated by the rule, can be cemented over, and buildings erected over it, without fear of trouble, because the well will need no further attention, and all that is required is simply to supply it with air as long as the pipes last. A number of wells can, of course, be operated from the same compressor. The necessary machinery can be located in the engine-room, or in any convenient place, and the air pipes run to the different points of distribution.

It is estimated that 1 cub. ft. of air will raise 1 gallon of water, but in wells that are properly proportioned there will be a saving over the amount of from 40 to 47 per cent.: that is to say, the air used will be 60 per cent. of the above estimate as the maximum, and 52 per cent. as the minimum. To illustrate the application of the rule for volume of air required, if we wish to raise 100 gallons of water, we shall need 60 cub. ft. of air as the maximum, and 52 cub. ft. of air as the minimum, the required volume carrying from the maximum to the minimum according to the conditions in each individual case. The average air pressure is 60 lbs. per square inch. When starting to raise water, it requires a somewhat higher pressure, because there is a solid body of water from the surface in the well to the point at which the air enters the water pipe, and this column of water has to be moved by the first discharge of air. When the well has reached its normal working condition, the water pipe will contain a number of short columns of air and short columns of water. These short columns of air and water are discharged alternately, and in the pipe they form a continuous chain, the intermittent discharge continuing as long as the proper amount of air is supplied, and as long as there remains water to be pumped.

TABLE OF SUBMERGENCE AND EFFICIENCY.

Submergence per cent. of Length of Water-pipe.	Efficiency per cent.	Submergence per cent. of Length of Water-pipe.	Efficiency per cent.
60	50	33	25
50	40	30	22
40	30		

TABLE OF LIFT, SUBMERGENCE, AND AIR VOLUME.

Lift in Feet.	Volume of Air to 1 ft. of Water.	Submergence 60 per cent. total Water-pipe.	Submergence for special Lift.	Air-pressure Submergence 60 per cent.	Air Pressure for special Lift Submergence 60 per cent.	Cubic ft. free air per gallon per minute.	Horse-power per gallon per minute.
		Ft.	Ft.	Lbs.	Lbs.		
25	2	38	50	17	20	0·3	·0184
50	3	75	100	33	44	0·4	·0426
75	4·5	113	150	49	65	0·6	·0828
100	6	150	200	65	87	0·8	·1320
125	7·5	188	250	82	109	1·0	·1910
150	9	225	300	98	120	1·2	·2544
175	10·5	263	350	115	152	1·4	·3150
200	12	300	400	130	173	1·4	·3808

'Special submergence' (cols. 4 and 6) should be used where there is a long horizontal discharge or a great number of turns in the discharge-pipe.

TABLE OF CAPACITY AND PIPE SIZES.

Size of Well in Inches.	Water-pipe in Inches.	Air-pipe in Inches	Gallons of Water per Minute.
4	1½	¾	25
4½	2	1	50
5	2½	1	75
6	3	1¼	100
7	3½	1½	150
8	4	1½	200
9	5	2	300
10	6	2	450

(*G. C. H. Fredrich.*)

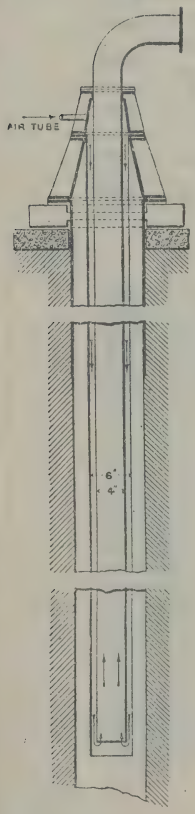


FIG. 34.

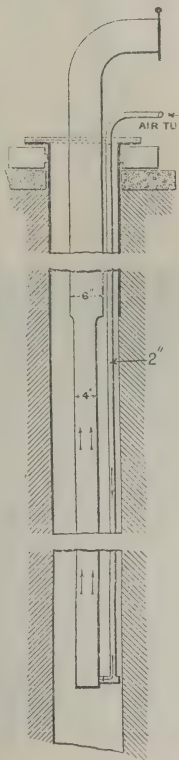


FIG. 35.

At the works of the United Alkali Company, Limited, at Preesall,* a well 450 ft. in depth and 12 ins. in diameter at the bottom is fitted, as shown in figs. 34, 35, with a lining tube going down to the rock-head, and an air tube 6 ins. in diameter, with a delivery tube 4 ins. in diameter inside it, the effective cross-sectional area of the air tube being thus the area of the annulus formed between it and the delivery tube. For working this well a small Ingersoll-Sergeant air compressor was (1906) used.

In another well the delivery and air pipes are arranged on a different plan. In this case the air pipe passes down the well outside the delivery pipe and is connected to it at the bottom, as shown in fig. 35; the air-compressing plant consists (1906) of an Ingersoll-Sergeant cross-compound air compressor, having both the air and the steam cylinders compounded. The speed is regulated by a governor in the usual manner, and also by the pressure of the air as it leaves the high-pressure air cylinder. The air cylinders are water-jacketed, and the air from the low-pressure air cylinder is delivered to an inter-cooler, from which it passes to the high-pressure air cylinder. The air suction valves are carried on the piston, the air passing into the piston through a hollow tail-rod working through a stuffing box and gland on the end of the cylinder, and the delivery valves are controlled by suitable spiral springs. The steam cylinders are 20 ins. and 32 ins. in diameter, and the air cylinders 28·25 ins. and 16·75 ins. in diameter, the stroke being 24 ins. The percentage of clearance in the air cylinders is very small. The air is compressed to 35 lbs. per sq. in. in the low-pressure cylinder, and in the high-pressure cylinder to a pressure ranging between 80 lbs. and

* Kelly ('Proceedings of the Institution of Civil Engineers,' vol. clxiii. May 1906).

120 lbs. per sq. in., according to the depth of submersion of the delivery pipes in the well or wells under operation.

Mr. Rix, in a paper read before the Technical Society of San Francisco, concludes that, with lifts not exceeding 20 ft., 1·5 cub. ft. of air will be required for each cub. ft. of water raised; for lifts of 20 ft. to 50 ft., 2 to 3 cub. ft.; and for lifts of 50 ft. to 100 ft., 3 to 4 cub. ft. will be required. He limits the velocity of the water entering the pipes to 4 to 8 ft. per second.

Air-lift pumping systems are not advisable where the submergence is below 35 per cent., and the best condition for this type of pump is from 45 per cent. to 60 per cent. submergence. By submergence is meant the ratio of the depth of the mixing chamber below the pumping water level to the total height pumped.

With air-lift pumps the hotter the liquid to be pumped the higher will be the efficiency of the pump. It has been shown by Prof. Randall that an efficiency of 100 per cent. is possible under certain conditions when pumping water at 200 deg. Fah.



Illustration shows interior of Water Power Station equipped by Boving & Co.

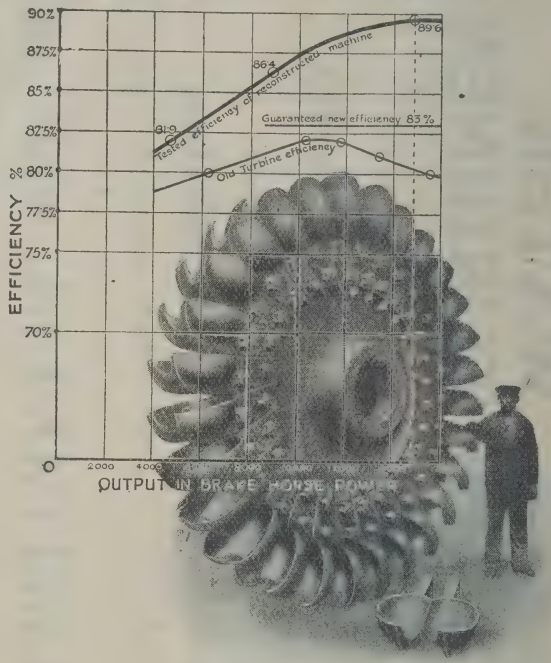
WATER TURBINES

Hydro-Electric Power Installations

BOVING and CO. Ltd., *Hydraulic Engineers*

Head Office: 56 KINGSWAY, LONDON, W.C. 2. Works: STOKE-ON-TRENT

WATER POWER



EFFICIENCY in Water Turbines is of even greater importance than in most machines, as water power is often very limited and must therefore be utilised to the fullest extent. Good design and workmanship are therefore prime essentials for this class of work and water power users are invited to study the remarkable result we obtained after re-designing and rebuilding five pairs of old type Pelton Wheels for Turbines, each developing 16,000 B.HP., with the remarkable result as shown.

BOVING & CO. Limited

Water Power Engineers,

Head Office: **56 Kingsway, London, W.C.2**

Works - - - STOKE-ON-TRENT

F.1175

SECTION XXIV

PART III

THE DEVELOPMENT OF WATER-POWER.

(Compiled by Arthur Surveyer, Mem. Canadian Soc. of Civil Engineers.)

WATER-POWER.

The theoretical power or effective energy of a fall of water, in ft.-lbs. per min., is equal to the weight in lbs. of the volume of water flowing per min. over the fall, multiplied by the vertical height of the fall in ft.

$$\text{H.P.} = \frac{Q \times h \times W}{550} = \frac{Q \times h \times 62{\cdot}5}{550} = \frac{Q \times h}{8{\cdot}8}.$$

where,

Q = discharge in cub. ft. per sec.; W = weight of 1 cub. ft. of water = 62·5 lbs.; h = net head or net fall of water in ft.; H.P. = horse-power (33,000 ft.-lbs. per min. or 550 ft.-lbs. per sec.)

For practical purposes, and in order to take into account the losses in the water-wheels, it is better to adopt the following formula, which is based on a water-wheel efficiency of 80 per cent.,

$$\text{Practical H.P.} = \frac{Q \times h}{11}.$$

An efficiency of 80 per cent. is now attained even in the medium-priced wheels, and 90 per cent. is frequently reached in the high-priced wheels. Assuming an efficiency of 88 per cent., then

$$\text{Practical H.P.} = \frac{Q \times h}{10}.$$

Tide-Power.

A horse-power for a day of ten hours would require something like 120 tons of water falling from a height of 100 ft., so that a 500 h.p. factory, say, would need 60,000 tons of water at a 100-foot head. On the basis of 36 cub. ft. of water to the ton, there would thus be over 2,000,000 cub. ft. of water, and this would make a fair-sized pond, say, about 1,000 ft. long, 200 ft. wide, and 10 ft. deep.

The possibilities of tidal power, if it can be developed commercially, are very great.

In Great Britain the highest tides are found in the estuary of the Severn, the mean range of the spring tides at Chepstow being 42 ft., and of the neap tides 21 ft. In France the maximum range occurs at St. Malo, where it amounts to 42·5 ft. at spring tides, and about 18 ft. at neap tides. The tidal range in the Dee is 26 ft. at springs, and 12 ft. at neaps, while the mean range of spring tides around the coast of Great Britain is 16·4 ft., and of neap tides 8·6 ft.

Assuming a mean tidal range of only 20 ft. at springs, and 10 ft. at neaps, and adopting the single-basin method of development with operation on both rising and falling tides, each square mile of basin area would be capable, without storage, of giving an average daily output of approximately 110,000 h.p.-hours. In such an estuary as the Severn, where an area of 20 square miles could readily be utilised with a spring tidal range of 42 ft., the average daily output, without storage, would be approximately 10,000,000 h.p.-hours.

Various storage systems have been suggested. Electrical accumulators must be ruled out, if only on account of the cost, and the same applies to all systems making use of compressed air. The only feasible system appears to consist of a storage reservoir above the level of the tidal basin.

At the present time it is difficult to obtain even a rough estimate of the total cost of such a scheme, owing to the uncertainty regarding many of the factors involved.

(*'Nature,'* June 3, 1920.)

TABLE SHOWING PRACTICAL HORSE-POWERS CORRESPONDING TO HEADS, IN FEET, AND CUBIC FEET USED PER MINUTE, OF WATER.

The practical horse-power is taken at 80 per cent. of the theoretical.

Heads, in Feet.	Cubic Feet used per Minute.	Horse-power.	Heads, in Feet.	Cubic Feet used per Minute.	Horse-power.	Heads, in Feet.	Cubic Feet used per Minute.	Horse-power.	Heads, in Feet.	Cubic Feet used per Minute.	Horse-power.
5	76	·57	14	127	2·7	28	180	7·6	42	220	14·0
6	83	·75	16	136	3·3	30	186	8·4	44	226	15·1
7	90	·95	18	144	3·9	32	192	9·3	46	231	16·1
8	96	1·2	20	152	4·6	34	198	10·2	48	236	17·1
9	101	1·4	22	160	5·3	36	204	11·1	50	241	18·2
10	107	1·6	24	167	6·1	38	210	12·1	55	252	21·0
12	118	2·1	26	173	6·8	40	215	13·0	60	264	24·0
5	152	1·15	14	255	5·4	28	360	15·3	42	441	28·0
6	167	1·5	16	272	6·6	30	373	16·9	44	452	30·1
7	180	1·9	18	289	7·9	32	385	18·7	46	462	32·2
8	192	2·3	20	304	9·2	34	397	20·4	48	472	34·3
9	204	2·8	22	320	10·7	36	409	22·3	50	482	36·5
10	215	3·3	24	334	12·1	38	420	24·2	55	505	42·0
12	236	4·3	26	347	13·7	40	431	26·1	60	528	47·9
5	228	1·7	14	383	8·1	28	541	22·9	42	662	42·1
6	251	2·3	16	409	9·9	30	560	25·4	44	678	45·2
7	270	2·9	18	434	11·8	32	578	28·0	46	693	48·3
8	288	3·5	20	457	13·8	34	596	30·7	48	707	51·4
9	307	4·2	22	480	16·0	36	614	33·5	50	721	54·8
10	323	4·9	24	501	18·2	38	630	36·2	55	758	63·1
12	354	6·4	26	521	20·5	40	646	39·1	60	792	72·0
5	342	2·6	14	574	12·2	28	812	34·4	42	993	63·1
6	376	3·4	16	614	14·9	30	840	38·1	44	1,017	67·7
7	405	4·3	18	651	17·7	32	867	42·0	46	1,040	72·4
8	432	5·2	20	686	20·8	34	894	46·0	48	1,061	77·1
9	461	6·3	22	720	24·0	36	921	50·2	50	1,081	81·8
10	484	7·3	24	751	27·3	38	945	54·4	55	1,136	94·6
12	531	9·6	26	782	30·8	40	969	58·7	60	1,188	107·9
5	418	3·2	14	701	14·9	28	992	42·0	42	1,213	77·1
6	459	4·2	16	750	18·2	30	1,026	46·6	44	1,243	82·8
7	495	5·2	18	795	21·7	32	1,059	51·3	46	1,271	88·5
8	528	6·4	20	838	25·4	34	1,092	56·2	48	1,297	94·2
9	563	7·7	22	880	29·3	36	1,125	61·3	50	1,325	100·3
10	591	8·9	24	918	33·3	38	1,155	66·4	55	1,388	115·5
12	649	11·8	26	955	37·6	40	1,184	71·7	60	1,452	132·0
5	609	4·6	14	1,022	21·6	28	1,442	61·1	42	1,766	112·2
6	668	6·1	16	1,090	26·4	30	1,493	67·8	44	1,808	120·4
7	721	7·6	18	1,156	31·5	32	1,542	74·7	46	1,849	128·7
8	771	9·3	20	1,219	36·9	34	1,589	81·8	48	1,889	137·2
9	818	11·2	22	1,278	42·6	36	1,636	89·1	50	1,929	146·0
10	862	13·0	24	1,335	48·5	38	1,680	96·6	55	2,022	168·3
12	944	17·1	26	1,390	54·7	40	1,724	104·3	60	2,142	194·5
5	799	6·1	14	1,340	28·4	28	1,893	80·2	42	2,317	147·3
6	876	8·0	16	1,431	34·6	30	1,959	88·9	44	2,373	158·0
7	956	10·1	18	1,517	41·3	32	2,023	97·9	46	2,427	169·0
8	1,011	12·3	20	1,600	48·4	34	2,085	107·3	48	2,479	180·1
9	1,074	14·7	22	1,678	55·9	36	2,147	117·0	50	2,532	191·6
10	1,130	17·1	24	1,752	63·6	38	2,205	126·8	55	2,652	220·7
12	1,239	22·5	26	1,824	71·8	40	2,252	136·3	60	2,772	251·7
5	1,027	7·8	14	1,723	36·5	28	2,434	103·1	42	2,979	189·3
6	1,127	10·2	16	1,840	44·6	30	2,519	114·3	44	3,051	203·2
7	1,226	13·0	18	1,951	53·1	32	2,610	126·4	46	3,120	217·2
8	1,299	15·7	20	2,057	62·3	34	2,681	137·9	48	3,186	231·4
9	1,381	18·9	22	2,158	71·8	36	2,761	150·4	50	3,253	246·2
10	1,453	22·0	24	2,253	81·8	38	2,835	163·0	55	3,410	283·8
12	1,593	28·9	26	2,345	92·3	40	2,908	176·0	60	3,564	323·6

JAMES GORDON & CO.

LTD.

Water Power Engineers

THE Empire contains an abundance of White Coal or Water Power waiting to be exploited.

We have over **20 years experience** in this class of work covering many **hundreds of installations** in all parts of the world under most varying conditions.

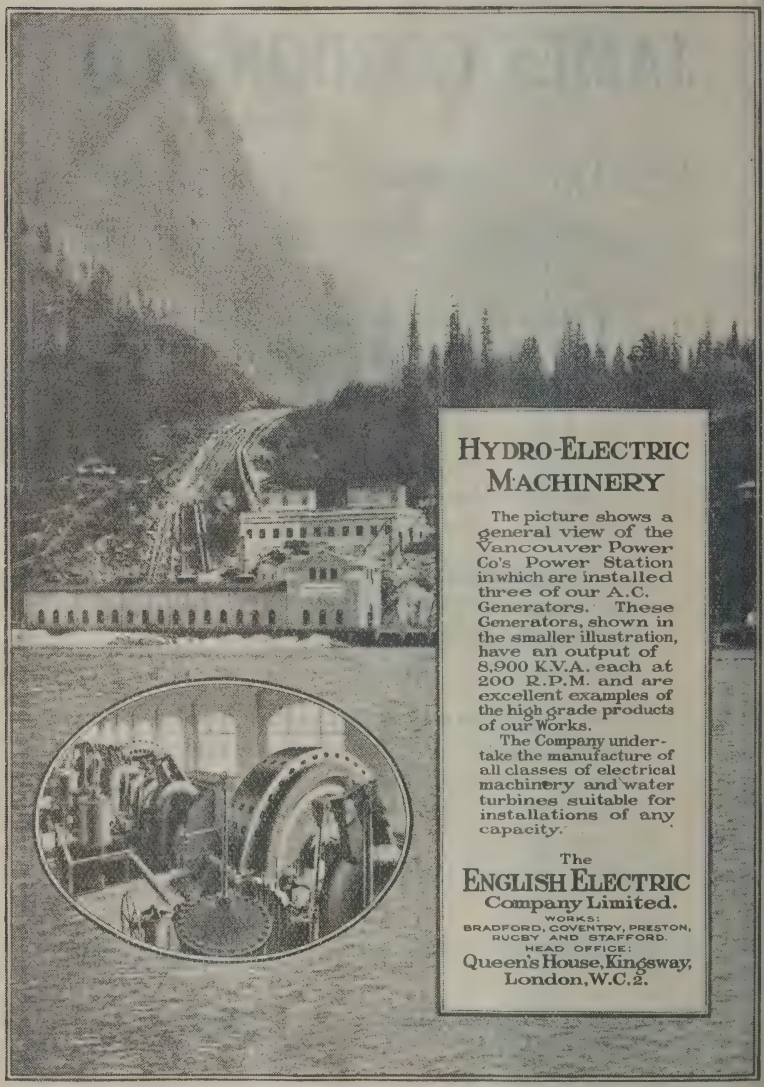
This **experience** is at the service of any individual or Corporation that wishes to develop available water supplies for power purposes.

Our **catalogue is a practical booklet** containing such useful information that will enable intending purchasers to form a close judgment of what type of Water Power Plant will be necessary and power available. It will be posted free of charge.

Windsor House, Kingsway, London, W.C.2

Telegrams - - - - - 'Gordolobo, Westcent, London.'

See also announcements facing pages 1204, 1205 and 1216.



HYDRO-ELECTRIC MACHINERY

The picture shows a general view of the Vancouver Power Co's Power Station in which are installed three of our A.C. Generators. These Generators, shown in the smaller illustration, have an output of 8,900 K.V.A. each at 200 R.P.M. and are excellent examples of the high grade products of our Works.

The Company undertake the manufacture of all classes of electrical machinery and water turbines suitable for installations of any capacity.

The
ENGLISH ELECTRIC
Company Limited.
WORKS:
BRADFORD, COVENTRY, PRESTON, RUGBY AND STAFFORD.
HEAD OFFICE:
Queen's House, Kingsway, London, W.C.2.

SEE ALSO OUR ADVERTISEMENTS ON GRAY PAGE XIX AND FACING PAGES 667, 1558, 1673 AND 1908.

TABLE SHOWING PRACTICAL HORSE-POWERS CORRESPONDING TO HEADS, IN FEET, AND CUBIC FEET USED PER MINUTE, OF WATER (*continued*).

Heads, in Feet.	Cubic Feet used per Minute.	Horse-power.	Heads, in Feet.	Cubic Feet used per Minute.	Horse-power.	Heads, in Feet.	Cubic Feet used per Minute.	Horse-power.	Heads, in Feet.	Cubic Feet used per Minute.	Horse-power.
5	1,232	9·3	14	2,067	43·8	28	2,921	123·8	42	3,575	227·2
6	1,352	12·3	16	2,208	53·5	30	3,023	137·2	44	3,661	243·8
7	1,471	15·6	18	2,341	63·8	32	3,132	151·7	46	3,745	260·7
8	1,560	18·9	20	2,469	74·7	34	3,220	165·7	48	3,823	277·7
9	1,657	22·6	22	2,590	86·2	36	3,313	180·5	50	3,905	295·5
10	1,743	26·4	24	2,703	98·2	38	3,402	195·7	55	4,092	340·6
12	1,912	34·7	26	2,815	110·8	40	3,490	211·2	60	4,277	383·8
3	1,389	6·3	10	2,536	38·4	24	3,928	142·7	38	4,944	284·3
4	1,603	9·7	12	2,776	50·4	26	4,089	160·9	40	5,071	307·0
5	1,793	13·6	14	3,000	63·6	28	4,233	179·3	42	5,193	330·0
6	1,963	17·8	16	3,208	77·7	30	4,392	199·4	44	5,316	354·0
7	2,122	22·5	18	3,403	92·7	32	4,536	219·7	46	5,424	377·6
8	2,268	27·5	20	3,588	108·6	34	4,677	240·6	48	5,353	403·3
9	2,408	32·9	22	3,760	125·2	36	4,816	262·4	50	5,665	428·7
3	1,699	7·8	10	3,103	47·0	24	4,806	174·5	38	6,048	347·9
4	1,962	11·9	12	3,398	61·7	26	5,011	197·2	40	6,206	375·6
5	2,192	16·6	14	3,679	77·9	28	5,192	220·0	42	6,357	404·0
6	2,405	21·8	16	3,924	95·0	30	5,364	243·5	44	6,509	433·4
7	2,596	27·5	18	4,161	113·4	32	5,551	268·8	46	6,657	463·5
8	2,776	33·6	20	4,388	132·8	34	5,713	294·0	48	6,801	494·0
9	2,945	40·2	22	4,601	153·2	36	5,887	320·7	50	6,942	525·3
3	2,895	13	9	5,010	68	20	7,475	226	32	9,450	458
4	3,340	20	10	5,285	80	22	7,825	261	34	9,745	501
5	3,735	28	12	5,785	105	24	8,185	297	36	10,025	545
6	4,090	37	14	6,250	132	26	8,520	335	38	10,300	593
7	4,420	47	16	6,685	162	28	8,840	375	40	10,565	640
8	4,725	57	18	7,099	193	30	9,150	415			

GENERAL FEATURES OF A WATER-POWER DEVELOPMENT.

Although the lay-out of hydraulic plants changes with every water-power site, there are certain features which are generally found in all developments, and which can be described as follows:

1. The dam, which impounds the water, regulates the level of the upper pool, and directs the water towards the water wheels.

2. The head gates, which control the supply of water, and by means of racks permit the removal from the water supply of injurious floating and suspended matter.

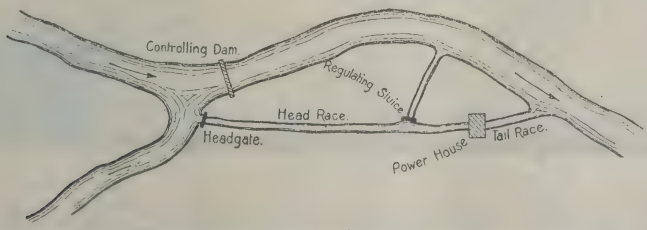


FIG. 1.—Typical General Arrangement of Hydraulic Development.

3. The head race, flume or penstock, which carries the water to the wheels.
4. The power house, which contains the hydraulic machinery.
5. The water wheels, which transform the hydraulic energy.

6. The draft tube, and the tail race, which discharge the water used in the power house into the river.

In some plants the power house forms a part of the dam, and the water is delivered to the wheels without passing through a canal or penstock and discharged back into the river directly through the draft tubes.

Fig. 1 shows a rather complicated lay-out, with a regulating canal for the head race. The regulation of the level of the upper pool is obtained either by a regulating weir, sluices in the dam, or a movable dam.

In approaching the study of any water-power site, the two first things to be determined are the head of water available at all times and the characteristic flow of the river. It is not economical to install machinery which can utilise only the minimum flow of the river, and it is considered good practice to build a plant capable of using the *characteristic flow* of the river, which can be defined as the available dependable flow during at least nine months of a low year.

The available head is determined by levelling and by the daily reading of gauges located in the upper and lower pools of the proposed development.

The *characteristic flow* is found by a series of discharge measurements combined with the daily reading of gauges extending over as long a period as economically possible.

Characteristics of the Flow of Rivers.

The discharge of rivers varies with the precipitation on their drainage basin, the evaporation, the volume of the run off, and the rapidity with which the underground as well as the surface waters reach the river.

The study of drainage basins includes the study of the discharge of streams, of the relations between the stream discharge and the water precipitation, on the drainage basin, on the flood discharges and the rains which cause them, etc.

Discharge of Rivers.

Given a river with an unchangeable bed, there is a fixed relation between the level of this river at a given point and its discharge at that point. Except in the cases of rivers carrying and depositing large quantities of gravel and sand, it is fair to assume that the bed does not change. The discharge curve of a river is obtained from actual measurements, plotted at a suitable scale on cross-section paper. The gauge heights are taken as ordinates and the discharge as abscissæ. The several points thus plotted are connected together by a curve so drawn that the algebraic sum of the squares of the errors is minimum. This curve is a parabola of the form $Q=a+bh+ch^2$. It is often found advisable to develop the discharge equation of a river, and in order to do so the parameters a, b, c can be calculated in each case, from actual measurements, by the method of the least squares.

Measurement of Quantity of Water Flowing in a Stream.

Weir Measurement.

(1)

Rectangular Notch Method.

For small streams a weir dam is used, as shown by fig. 2, consisting of a board long enough to reach across the stream with either end set in the bank. A notch is cut in the board, deep enough

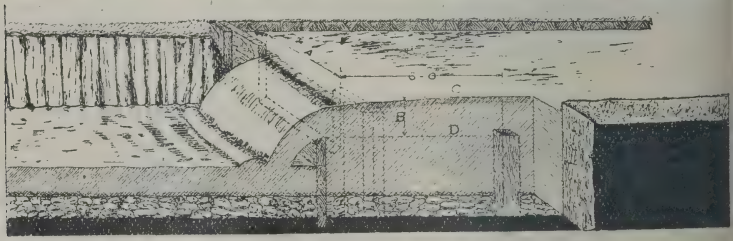


Fig. 2.

to pass all the water, and long enough to reach about two-thirds A, across the stream. The bottom and ends of the notch, D, in the board should be bevelled on the down stream side, leaving the upper edge sharp. The stake, E, should be driven in the bottom of the stream, several feet from the board, on a level with the edge of the notch D. When the water has reached its greatest depth, a measurement, B, can be made of the depth of water over the stake E. The dotted line C represents the top of the running water, and the distance between this line or level of water and the top of the stake gives the true depth or spill over the weir board.

The surface of water below the board should be at least 10 inches lower than the notch D. A part of the stream should be selected where the water can approach the notch quietly.

The weir described above is called a *contracted weir*; if the sides of the notch are continuous with the sides of the channel it is a *suppressed weir*, or a *weir without end contractions*.

According to the different cases we have the following formulæ giving the discharge in cub. ft. per sec.:

With end contractions and a velocity of approach,

$$Q = 5{\cdot}347\ CL\ \sqrt{(H+1{\cdot}4h)^3};$$

where water has no velocity of approach,

$$Q = 5{\cdot}347\ CL\ \sqrt{H^3}$$

without end contractions but with velocity of approach,

$$Q = 5{\cdot}347\ CL\ \sqrt{(H+4/3\ h)^3};$$

where water has no velocity of approach,

$$Q = 5{\cdot}347\ CL\ \sqrt{H^3};$$

in which

L = Length of weir in ft.;
H = Head in ft.;
V = Velocity of approach in ft. per sec.;
h = Head equivalent of velocity of approach = $0{\cdot}01555\ V^2$;
C = Coefficient of discharge;
Q = Discharge in cub. ft. per sec.

VALUES OF 'C.'

For Weirs with Contracted Ends. Length of Weir in ft.

Effective Head in ft.	·66	1	2	3	5	10	19
·10	·632	·639	·646	·652	·653	·655	·656
·15	·619	·625	·634	·638	·640	·641	·642
·20	·611	·618	·626	·630	·631	·633	·634
·25	·605	·612	·621	·624	·626	·628	·629
·30	·601	·608	·616	·619	·621	·624	·625
·40	·595	·601	·609	·613	·615	·618	·620
·50	·590	·596	·605	·608	·611	·615	·617
·60	·587	·593	·601	·605	·608	·613	·615
·70	—	·590	·598	·603	·606	·612	·614
·80	—	—	·595	·600	·604	·611	·613
·90	—	—	·592	·598	·603	·609	·612
1·00	—	—	·590	·595	·601	·608	·611
1·20	—	—	·585	·591	·597	·605	·610
1·40	—	—	·580	·587	·594	·602	·609
1·60	—	—	—	·582	·591	·600	·607

For Weirs without Contracted Ends. Length of Weir in ft.

Effective Head in ft.	19	10	7	5	4	3	2
·10	·657	·658	·658	·659	—	—	—
·15	·643	·644	·645	·645	·647	·649	·652
·20	·635	·637	·637	·638	·641	·642	·645
·25	·630	·632	·633	·634	·636	·638	·641
·30	·626	·628	·629	·631	·633	·636	·639
·40	·621	·623	·625	·628	·630	·633	·636
·50	·619	·621	·624	·627	·630	·633	·637
·60	·618	·620	·623	·627	·630	·634	·638
·70	·618	·620	·624	·628	·631	·635	·640
·80	·618	·621	·625	·629	·633	·637	·643
·90	·619	·622	·627	·631	·635	·639	·645
1·00	·619	·624	·628	·633	·637	·641	·648
1·20	·620	·626	·632	·636	·641	·646	—
1·40	·622	·629	·634	·640	·644	—	—
1·60	·623	·631	·637	·642	·647	—	—

TABLE SHOWING DISCHARGE PER INCH OF LENGTH OVER SHARP-CRESTED, VERTICAL, RECTANGULAR NOTCH WEIRS IN CUBIC FEET PER MINUTE PER INCH OF LENGTH.

Ins.	0	1/16	1/8	3/16	1/4	5/16	3/8	7/16	1/2	9/16	5/8	11/16	3/4	13/16	7/8	15/16	Ins.
		·006	·01	·03	·05	·07	·09	·11	·14	·17	·20	·23	·26	·30	·33	·36	
1	·40	·43	·47	·51	·55	·60	·65	·70	·74	·78	·83	·87	·93	·98	1·03	1·08	1
2	1·14	1·19	1·24	1·30	1·36	1·41	1·47	1·52	1·59	1·65	1·71	1·77	1·83	1·89	1·96	2·02	2
3	2·09	2·16	2·23	2·29	2·36	2·43	2·50	2·57	2·63	2·71	2·78	2·85	2·92	2·99	3·07	3·14	3
4	3·22	3·29	3·37	3·44	3·52	3·60	3·68	3·75	3·83	3·91	3·99	4·07	4·16	4·24	4·32	4·41	4
5	4·50	4·58	4·67	4·75	4·84	4·92	5·01	5·10	5·18	5·27	5·36	5·45	5·54	5·63	5·72	5·81	5
6	5·90	6·00	6·09	6·18	6·28	6·37	6·47	6·56	6·65	6·75	6·85	6·95	7·05	7·15	7·25	7·35	6
7	7·44	7·54	7·64	7·74	7·84	7·94	8·05	8·15	8·25	8·35	8·45	8·55	8·66	8·76	8·86	8·97	7
8	9·10	9·20	9·31	9·42	9·52	9·63	9·74	9·85	9·96	10·07	10·18	10·29	10·40	10·51	10·62	10·73	8
9	10·86	10·97	11·08	11·19	11·31	11·42	11·54	11·65	11·77	11·88	12·00	12·12	12·23	12·35	12·47	12·59	9
10	12·71	12·83	12·95	13·08	13·19	13·31	13·43	13·55	13·67	13·80	13·93	14·04	14·16	14·30	14·42	14·55	10
11	14·67	14·79	14·92	15·05	15·18	15·30	15·43	15·56	15·67	15·81	15·96	16·08	16·20	16·34	16·46	16·59	11
12	16·73	16·86	16·99	17·12	17·26	17·39	17·52	17·65	17·78	17·91	18·05	18·18	18·32	18·45	18·58	18·72	12
13	18·87	19·01	19·14	19·28	19·42	19·55	19·69	19·83	19·97	20·10	20·24	20·38	20·52	20·66	20·80	20·94	13
14	21·09	21·23	21·37	21·48	21·65	21·79	21·94	22·08	22·22	22·35	22·51	22·65	22·79	22·94	23·08	23·23	14
15	23·38	23·53	23·67	23·82	23·97	24·11	24·26	24·41	24·56	24·71	24·86	25·01	25·16	25·31	25·46	25·61	15
16	25·76	25·91	26·06	26·21	26·36	26·51	26·66	26·81	26·97	27·12	27·27	27·43	27·58	27·73	27·89	28·04	16
17	28·20	28·35	28·51	28·66	28·82	28·98	29·14	29·29	29·45	29·60	29·76	29·92	30·08	30·23	30·39	30·55	17
18	30·70	30·86	31·02	31·18	31·34	31·50	31·66	31·81	31·98	32·15	32·31	32·47	32·63	32·80	32·96	33·12	18
19	33·29	33·45	33·61	33·78	33·94	34·11	34·27	34·44	34·61	34·77	34·94	35·10	35·27	35·44	35·60	35·77	19
20	35·94	36·10	36·27	36·46	36·60	36·87	36·94	37·11	37·28	37·45	37·62	37·79	37·96	38·14	38·31	38·48	20
21	38·65	38·82	39·00	39·17	39·34	39·52	39·69	39·86	40·04	40·21	40·39	40·56	40·73	40·91	41·09	41·26	21
22	41·43	41·60	41·78	41·96	42·13	42·31	42·49	42·67	42·84	43·02	43·20	43·38	43·56	43·74	43·92	44·10	22
23	44·28	44·46	44·64	44·82	45·00	45·18	45·38	45·53	45·71	45·90	46·08	46·26	46·43	46·63	46·81	47·00	23
24	47·18	47·36	47·55	47·72	47·91	48·09	48·28	48·46	48 65	48·83	49·02	49·20	49·39	49·58	49·76	49·93	24

The readings obtained at the weir dam are used with the weir table, thus :—

The figures 1, 2, 3, etc., in the first vertical column of the weir table are the inches depth of water running over the notch of weir. The top horizontal line shows fractional parts of an inch ; the body of the table shows the cubic feet and the fractional parts of a cubic foot that will pass each minute, for each inch and fractional inch depth of water in notch. Each of these results is for one inch only of weir, as follows :—

EXAMPLE.—Suppose the notch in board is 20 inches wide and the water at the stake E 5½ inches deep. Take the column containing figure 5 and the one containing figure ½, and the square where they meet contains 5·18 cubic feet. This is the quantity of water passing for each inch in width ; but the weir is 20 inches wide, therefore this result, multiplied by 20, gives 103·6 cubic feet per minute. The same method applies to any depth from one to 25 inches, or any width.

The foregoing only applies in cases where the weir or notch is without end contractions, and discharging from still water.

(2)

'V'-Notch Method.

In this method a 'V'-shaped notch, fig. 3, is cut in the sill board, this notch being of sufficient size to allow the full volume of water to discharge through it. When the flow is steady, then

$$Q = \frac{4}{15}\, kwh\, \sqrt{2gh},\ \text{cubic feet } \textit{per second},$$

w, h, and g being in *feet*.

The value of k varies from ·59 to ·62, according to the angle α, being ·59 for a right angle (90°).

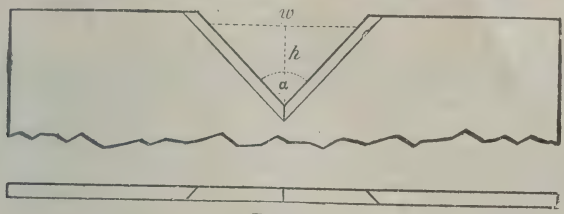


FIG. 3.

When α is a right angle, then $w = 2h$, and formula becomes

$$Q = \cdot 3h^2\sqrt{h},$$ cubic feet *per minute*,

h being in *inches*.

The advantage of the 'V'-notch method is that the ratio of the wetted perimeter of the notch to the area of outflow is the same for any value of h.

A series of 'V'-notches may be cut in the sill-board if the flow of water is great; these notches should be of equal size, and their apexes should be exactly in line, and this line should be exactly horizontal.

When a series of 'V' notches is used, there is a certain amount of mutual interference between the several jets, and in order to get complete immunity from this the notches should be seven times the head apart. If the notches are 3½ times the head apart, the error may be, but would not exceed, ·5 per cent. (*H. S. Rowell. Engineering, May* 2, 1913.)

WEIR TABLE FOR RIGHT-ANGLED 'V'-NOTCH (FROM ONE INCH TO THIRTY INCHES DEEP) GAUGING, GIVING DISCHARGE (Q) IN CUB. FT. PER MIN. FORMULA :—$Q = \cdot 3h^2\sqrt{h}$.

h ins.	0	1/16	1/8	3/16	1/4	5/16	3/8	7/16	1/2	9/16	5/8	11/16	3/4	13/16	7/8	15/16
1	·300	·339	·403	·461	·522	·591	·665	·742	·827	·916	1·01	1·11	1·22	1·33	1·44	1·57
2	1·70	1·83	1·97	2·12	2·28	2·42	2·61	2·78	2·96	3·15	3·35	3·55	3·76	3·98	4·21	4·44
3	4·68	4·92	5·18	5·44	5·71	5·99	6·28	6·57	6·88	7·19	7·51	7·83	8·17	8·51	8·87	9·23
4	9·60	9·98	10·4	10·8	11·2	11·6	12·0	12·4	12·9	13·3	13·8	14·3	14·8	15·2	15·7	16·3
5	16·8	17·3	17·8	18·4	18·9	19·5	20·1	20·7	21·3	21·9	22·5	23·1	23·8	24·4	25·1	25·8
6	26·5	27·2	27·9	28·6	29·3	30·0	30·8	31·5	32·3	33·1	33·9	34·7	35·5	36·3	37·2	38·0
7	38·9	39·8	40·7	41·6	42·5	43·4	44·3	45·3	46·2	47·2	48·2	49·2	50·2	51·2	52·2	53·3
8	54·3	55·4	56·5	57·5	58·7	59·8	60·9	62·0	63·2	64·4	65·6	66·8	68·0	69·2	70·4	71·6
9	72·9	74·2	75·5	76·8	78·1	79·4	80·7	82·1	83·5	84·8	86·2	87·6	89·0	90·5	91·9	93·4
0	94·9	96·4	97·9	99·4	101	102	104	106	107	109	110	112	114	115	117	119
1	120	122	124	126	127	129	131	133	135	136	138	140	142	144	146	148
2	150	152	154	156	158	160	162	164	166	168	170	172	174	176	178	181
3	183	185	187	189	192	194	196	199	201	203	206	208	210	213	215	218
4	220	222	225	227	230	233	235	238	240	243	245	248	251	253	256	259
5	261	264	267	270	273	275	278	281	284	287	290	292	295	297	301	304
6	307	310	313	316	319	323	326	329	332	335	338	341	344	348	351	354
7	358	361	364	368	371	374	377	381	384	388	391	395	398	402	405	409
8	413	416	420	423	427	431	434	438	442	446	449	451	457	461	464	468
9	472	476	480	484	488	492	496	500	504	508	512	516	520	524	528	533
0	537	541	545	550	554	558	563	566	571	575	580	584	589	593	598	602
1	606	611	615	620	625	629	634	638	643	648	653	657	662	667	671	676
2	681	686	691	696	701	706	711	716	721	725	731	736	741	746	751	756
3	761	766	772	777	782	787	793	798	803	809	814	819	825	830	836	841
4	847	852	858	863	869	875	880	886	891	897	903	908	914	920	926	932
5	938	944	950	955	961	967	973	979	985	991	997	1,000	1,010	1,016	1,020	1,028
6	1,030	1,040	1,047	1,050	1,060	1,065	1,070	1,080	1,085	1,090	1,100	1,104	1,110	1,120	1 124	1,130
7	1,136	1,140	1,150	1,156	1,160	1,170	1,176	1,180	1,190	1,196	1,200	1,210	1,220	1,224	1,230	1,240
8	1,240	1,250	1,260	1,266	1,270	1,280	1,287	1,290	1,300	1,310	1,315	1,320	1,330	1,340	1,344	1,350
9	1,360	1,366	1,370	1,380	1,390	1,395	1,400	1,410	1,420	1,426	1,430	1,440	1,450	1,456	1,460	1,470
0	1,480	1,485	1,490	1,500	1,510	1,520	1,530	1,533	1,540	1,550	1,560	1,565	1,570	1,580	1,590	1,600

Flow of Water over Sharp-edged Notches and Weirs.

(1) Flow over a triangular notch.

$$Q = 2{\cdot}48nH^{2{\cdot}47}.$$

Q = cub. ft. per sec.; n = tangent of half-included angle of notch; H = head in feet.

(2) Flow over any trapezoidal notch = flow over a rectangular weir of equal length with two end contractions, plus the flow through a triangular notch of corresponding angle.

(3) Flow over a rectangular weir with end contractions varies as—

$$Q = 3{\cdot}10\,L^{1{\cdot}02}\,H^{1{\cdot}47},$$

for all weirs up to at least 19 ft., and for head up to half length of weir, provided depth of post below sill of weir is not less than twice the head. L = length in feet.

General law for trapezoidal weirs:

$$Q = 3{\cdot}10\,L^{1{\cdot}02}\,H^{1{\cdot}47} + 2{\cdot}48nH^{2{\cdot}47}.$$

(*H. J. F. Gourley and B. Santo Crimp, Proceedings Inst.C.E.*, vol. cc. p. 388, Nov. 1915.)

Sluice Measurement.

(*Contributed by J. F. Maryon, M.I.Mech.E.*)

Raise the sluice gate, taking care that the level of the water above the sluice gate is constant, and take the three measurements shown, D being the height from the bottom of the sluice gate to the sill over which the water is flowing, W the width of the opening, and H the distance from

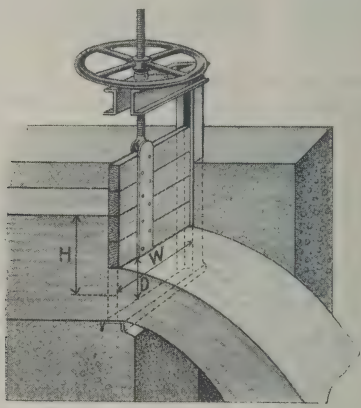


Fig. 4.

the surface of the water above the sluice gate, to a point half-way between the bottom of the sluice gate and the sill. Having obtained these figures in feet, the quantity of water passing in cubic feet per minute is as follows:—

$$Q = W \times D \times 8\sqrt{H} \times 42.$$

Measuring Open Streams.

(*Contributed by J. F. Maryon, M.I.Mech.E.*)

To measure the discharge of a stream it is necessary to obtain by soundings an accurate cross-section of the river at the point of observation. This section is subdivided into a certain number

of sections, A, B, C, D, E (fig. 5), and the mean velocity of flow accurately determined for each sub-section. We have then the relation $Q=A\bar{V}$; where Q=discharge in cub. ft. per sec., A=total area in sq. ins., and $\bar{V}$=mean velocity in ft. per sec., throughout the section.

$$Q=q_1+q_2+q_3+ \ldots . =A_1V_1+A_2V_2+A_3V_3+ \ldots$$

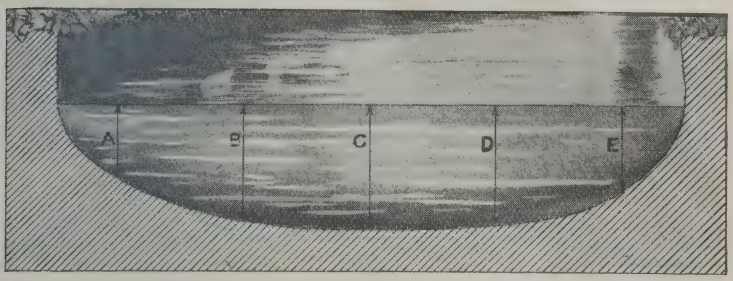


FIG. 5.

The mean velocity occurs at about 0·6 of the depth of a stream, but the mean between the velocities observed at 0·2 and at 0·8 of the depth will also give the mean velocity for the total depth.

MEASUREMENT WITH FLOATS.

In order to measure the velocity of the current in the different sections by means of floats it is necessary to lay out on the shore two parallel ranges perpendicular to the general direction of the current and distant from each other by 200 or 300 ft.

A series of floats are afterwards dropped at a certain distance above the upstream range and their course determined either by transits set up on the shore, or by sextants from a boat kept a few feet distant from each float during its downstream travel.

The passage of each float in line with the upstream and downstream range is recorded with a stopwatch and the mean velocity of the float throughout the distance calculated.

(a) Measurement with Rod Floats.

If a rod float is made to float vertically at a section of the stream so that its lower end is not more than a foot or so above the bed of the river at that point, such a float will be carried downstream by the current at a rate corresponding approximately to the mean velocity of the current at the point considered. It is not always practically possible to fulfil this condition, and even with a complete set of hollow galvanised iron rod floats, which can be sunk at will by loading them with shot, it is found necessary to correct the observed velocity and to reduce it to the mean velocity by using the following formula, due to Francis :

$$V_m = V_r\,(1-0{\cdot}116\,(\sqrt{d}-x)),$$

where V = mean velocity for the vertical section considered ;

V_r = observed velocity of the rod float ;

$d = \dfrac{\text{distance between bottom of rod and river bottom}}{\text{depth of river}}$;

x is a function of $\dfrac{l}{d}$, l being the length of the rod and d the depth of the water.

The following shows the values of x corresponding to various values of $\dfrac{l}{d}$:

$\frac{l}{d}$	0·9	0·8	0·7	0·6	0·5
x	0·10	0·05	0·00	−00·5	−0·10

When $\dfrac{l}{d}=0{\cdot}9$ or more, the formula is that given by Francis:

$$V_m = V_r\,(1-0{\cdot}116\,(\sqrt{D}-0{\cdot}1)).$$

(b) Measurement with Submerged Floats.

It is possible by means of a surface float connected by a string to a submerged float held at a depth equal to about 0·6 of the depth of the stream at that point, to obtain directly without correction the mean velocity in a section. The surface float is generally made very flat so as not to be affected by the wind, and the sub-surface float is generally composed of two pieces of galvanised plate placed cross-wise and terminated at their upper end by hollow tubes in order to give the submerged float the necessary buoyancy.

Measurement by Meters.

The current meters used to measure the velocity of water consist in a wheel of some form so constructed that it is made to revolve by the impact of flowing water, the number of revolutions of this wheel being either recorded, or indicated to the observer. The relation between the velocity of the moving water and the revolutions of the wheel is determined by rating each meter.

Meter Rating.

To rate a meter it is necessary to drive it through still water at a uniform velocity and over a given distance. The distance being known and the time taken to cover it as well as the number of revolutions being noted, it is possible to determine the velocity per second and the number of revolutions per second for this velocity. The experiment must be made at varying speed of translation, so that a complete rating curve can be obtained for each instrument. This curve in all meters is practically a straight line. Meters are not generally reliable for the measurement of velocities of less than 0·3 ft. per sec.

(See also Section XXVI., p. 1311.)

DAMS.

Dams are constructions placed across a stream to impound water, to raise the level of the water upstream, or to divert a part or the whole of the river flow towards the water wheels either by means of a head-race, flumes, or pipes under pressure. Dams can be built with earth, loose stones, timber, masonry, concrete, reinforced concrete, and even with steel. They are fixed or movable according to the needs.

Dams can be built with their crest above the level of the highest waters, and provided with sluiceways, or they can be designed with spillways allowing the water to flow over their crest.

Earth Dams.

Earth dams (fig. 6) can, on account of their large base, be built on less resisting foundations than those constructed of other materials, provided of course that the bed of the river is impermeable. The section of these dams varies according to local circumstances, and with the materials used. In general the upstream slope is either 3 to 1 or 2 to 1, and the downstream slope about 2 to 1. The centre part of earth dams is often constituted by a core of impermeable material, generally a mixture of sand and clay (two-thirds of sand and one-third of clay). Sometimes this core puddle is replaced by a concrete core wall driven into the bed of the river to an impermeable strata. In designing these concrete core walls, it is necessary to make them strong enough to resist the stresses induced by the settlement of the earth embankment.

Rock-Fill Dams.

Rock-fill dams (fig. 7) are also used on uncertain foundations, because the loose stones tumble into place when erosions take place. They are generally given a fair width at the top, with slopes varying between 1 in 1 and 2 in 1; they have the disadvantage of not being water-tight, although they can be made practically so by placing on the upstream slope an impermeable layer of sand and clay. It is not advisable to allow the water to discharge over these dams, and like the earth dams they must be provided with sluiceways and waste gates.

Timber Dams.

Timber dams (fig. 8) are either hollow or filled; the hollow dam consists of a wooden frame covered by an apron on the upstream and on the downstream side and held in place by the weight of water. The filled dams or crib dams consist of boxes made of large pieces of timber bolted together and filled with loose stones. These dams have generally a nearly vertical downstream face and an upstream face sloping 1 to 1 or 2 to 1; they are held in place partly by their own weight and partly by the weight of the water on top of them. They can be used either on solid foundations or on medium foundations: in the latter case, the upstream and downstream toes should be protected by loose stone, in order to prevent erosion.

Masonry and Concrete Dams.

These dams are used principally when the foundation is rock or hard pan, and are generally built with a practically vertical upstream face and a downstream slope of 1 to 1.

Masonry is used chiefly in the construction of storage dams provided with sluiceways, but concrete can be used either for storage dams or spillways.

Reinforced Concrete Dams.

The characteristics of these dams (fig. 9) are that they are formed by a series of vertical buttresses upon which is placed a reinforced concrete deck, the buttresses being also connected, underneath the deck, by reinforced concrete beams or slabs. These dams can be used either on a rock foundation or on uncertain ground; in the latter case they are generally built over a reinforced concrete mattress distributing the pressure over the foundation. Their upstream face is inclined at an angle of 45° and the buttresses are practically vertical on the downstream side. In the case of a spillway, the downstream side is formed in the same manner as the upstream side by a reinforced concrete apron of the shape required by the quantity of water which is expected to flow over the crest. These dams have the advantage of requiring much less material than the

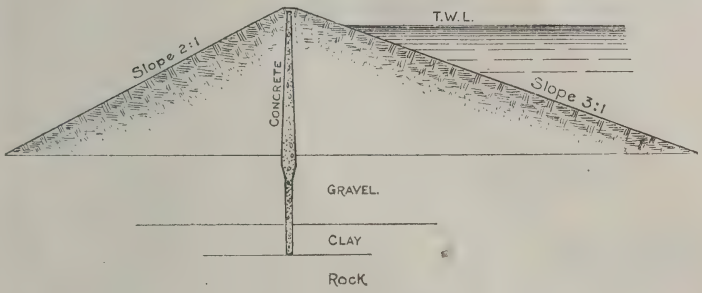


FIG. 6.—Earth Dam.

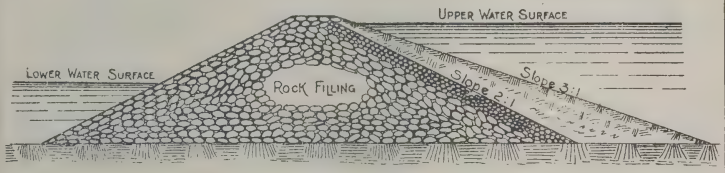


FIG. 7.—Rock-fill Dam.

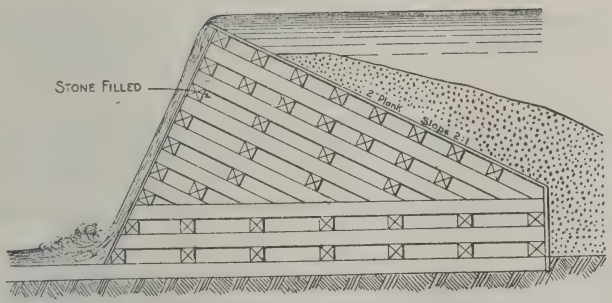


FIG. 8.—Timber Dam.

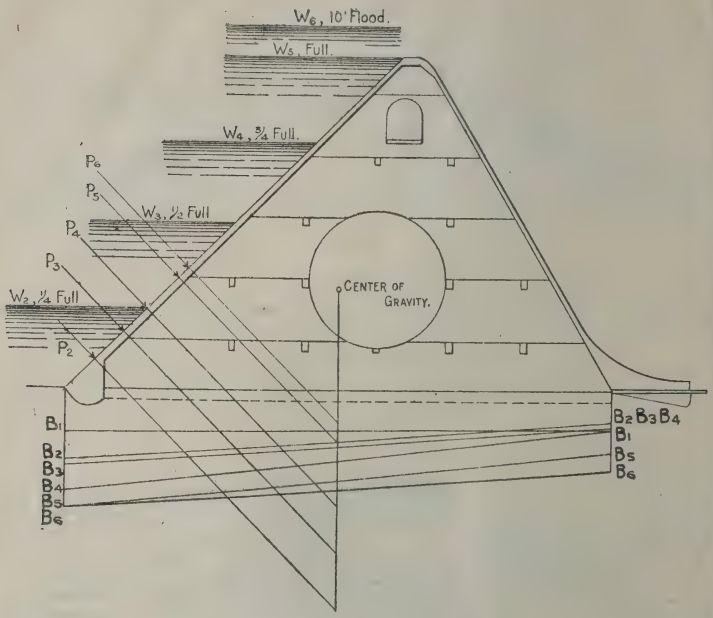


FIG. 9.—Reinforced Concrete Dam.

gravity dams, and are consequently used in places where transportation is difficult. Another advantage also is that their upstream face being inclined at 45° they resist better than the vertical face dams the ice pressures which, on account of their uncertainty, are always difficult to provide for.

Stability of Dams.

When dams are built on rock or solid foundations they can be built up from the bed of the river. If the bed is in hard pan the construction must be started below the bed of the river, and if the bed is composed of sand or gravel the dam generally rests on piles driven into the soil.

CONDITIONS OF STABILITY.

1. The weight of the dam must be sufficient to resist the water thrust tending to overturn it.
2. The dam must be so designed that there is no danger of its sliding upon its base.
3. The pressure on the downstream toe of the dam caused by the overturning moment must not exceed the resistance in compression of either the masonry or the foundations upon which it rests.
4. The resultant of all forces must be such that the upstream face of the dam is not in tension, but rather subject to a compressive stress.

Design of Dams.

Every design of dam must, of course, be tested for the foregoing different conditions, but the following rule will be found useful in arriving at a first tentative determination of the section.

Let h (fig. 10) be the greatest depth of water in the proposed reservoir at the dam. The width of the base B′C′ can be taken as equal to the height h or AB′, and the theoretical section of the dam would then be represented by the triangle B′AC′. In practice, however, it is necessary to give to the crest a certain thickness which can be taken as equal to one-tenth of the height. The portion AH above the highest water in the reservoir is generally made from 3 to 10 ft. When

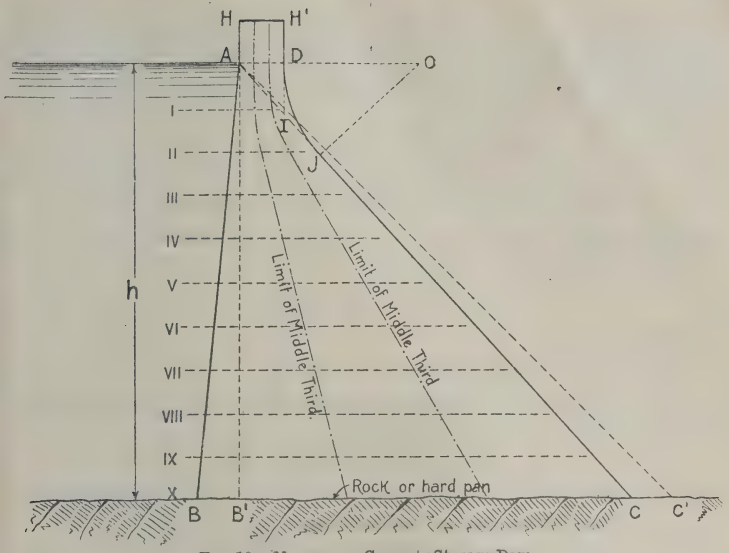


FIG. 10.—Masonry or Concrete Storage Dam.

the dam is very high it is difficult to build the upstream face vertical; it is preferable to give it a batter of 0·10 to 0·20. As it is not necessary to give to the base a greater width than the total height AB', the point C' is therefore brought back to C over a distance equal to BB'.

The downstream face is curved at the upper part into an arc tangent to the vertical H'I at D and to the inclined line AC at J. The section of the dam is therefore represented by the polygon BAHH'DJC.

DESIGN OF SPILLWAY DAMS.

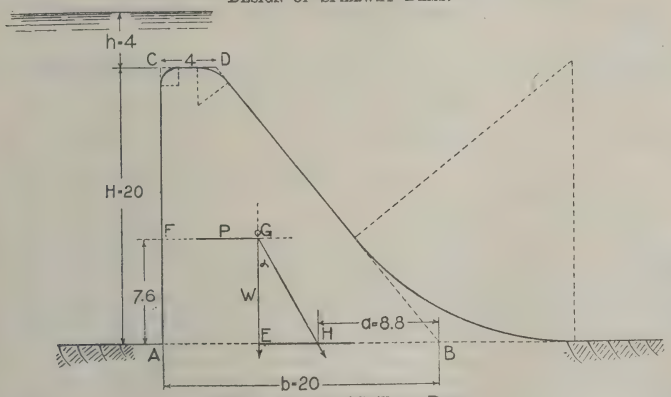


FIG. 11.—Design of Spillway Dam.

Spillway dams, or weir dams, are designed so as to allow the water to flow over their crest. The two first points to decide before beginning the design of such a dam are the elevation of the crest of the dam and the elevation of the highest possible flood.

Assuming that the elevation of the crest is 20 ft. above the bed of the river, and that the greatest flow of the river can be passed over the dam when the water level is 4 ft. above its crest, we can now proceed to design a plain concrete dam to meet these conditions, fulfilling at the same time the requirements as to stability enumerated above.

The width of the crest CD (fig. 11) can be taken as 0·2 of the height of the dam, and the width of the base b equal to the height H.

Referring to the fig. we have the following:

$$A = \text{area of section of dam} = \frac{4+20}{2} \times 20 = 240 \text{ sq. ft.};$$

w = weight of 1 cub. ft. of concrete = 130 lbs.;
W = weight of section of dam 1 ft. wide = $240 \times 130 = 31{,}200$ lbs.

This force W acts vertically through the centre of gravity of the section G, whose position is determined graphically.

The water pressure P tending to overturn the dam has for value

$$P = 62{\cdot}5 \times \frac{(H+h)^2 - h^2}{2} = 62{\cdot}5 \frac{H}{2}(H+2h),$$

and in the case in question,

$$P = 62{\cdot}5 \times \frac{20}{2}(20+2\times 4) = 17{,}500 \text{ lbs.}$$

This force P acts horizontally, and is applied at a height AF above the bed of the river given by the following formula:

$$AF = \frac{H}{3} \cdot \frac{H+3h}{H+2h} = \frac{20}{3} \times \frac{20+12}{20+8} = 7'{\cdot}6$$

Taking the moments about the downstream toe of the dam B we have the following results:

$$\text{Resisting moment} = W \times EB = 31{,}300 \times 13 = 405{,}600 \text{ ft. lbs.}$$

$$\text{Overturning moment} = P \times AF = 17{,}500 \times 7'{\cdot}6 = 133{,}000 \text{ ft. lbs.}$$

$$\text{Factor of safety} = \frac{\text{Resisting moment}}{\text{Overturning moment}} = \frac{405{,}600}{133{,}000} = 3{\cdot}05$$

A factor of safety of 3 is considered sufficient to fulfil the first condition of stability.

The second condition is that there should be no danger of the dam sliding upon its base; this condition is fulfilled if we have the following inequality:

$$\text{Weight of dam} \times \text{coefficient of friction} > \text{Total water pressure.}$$

The coefficient of friction of masonry on masonry, or masonry or concrete on rock, is 0·7, so that we have

$$31{,}200 \times 0{\cdot}7 > 17{,}500.$$

The resultant R of the forces P and W can be found graphically or algebraically by the following equation:

$$R = \sqrt{W^2+P^2} = \sqrt{31{,}200^2 + 17{,}500^2} = 35{,}770.$$

Its direction can be found by the equation

$$\tan \alpha^\circ = \frac{P}{W} = \frac{17{,}500}{31{,}200} = 0{\cdot}56;$$

and the point of application H found thus

$$EH = AF \tan \alpha^\circ = 0{\cdot}56 \times 7{\cdot}6 = 4{\cdot}26.$$

This point of application H must fall within the middle third of the base; this condition must be fulfilled whether the reservoir created by the dam is full or empty.

It is advisable to round up the dam at the upstream corner C to prevent chipping by logs or floating ice. It is also advisable to give to the downstream face a form resembling as much as possible the probable curve of the overfalling water. Corner D should therefore be rounded up, and a concave curve built at B, so as to carry the water x away horizontally and without impact. The foregoing method can, of course, be used also in the case of storage dams.

When the proposed dam is over 30 or 40 ft. it is better to subdivide it into a certain number of sections and to test each block separately according to the method described; the resultant in each case must fall within the limits of the middle third. In the example given it has been assumed that there was no upward water pressure at the base; when infiltration and under pressure must be provided for, this new force is subtracted from the weight and combined with it before calculating the resisting moment.

Head Gates.

Head gates (fig. 12) are placed at the entrance of the head race, in order to permit the emptying of the canal and pipes in case of repairs, and in order to be able to stop quickly the admission of water in case of accident to the canal, flumes, pipes, or water wheels.

The head gates are, of course, built differently, according to the size of the opening they have to close.

Head gates for a canal consist of wooden or steel gates moving between concrete, masonry, or crib piers. The weight of the heavy gates is generally partly balanced by a counter weight, and they are raised and lowered by electric or hydraulic motor. The smaller gates are moved by hand with the help of a mechanical hoist.

The piers must be designed to withstand a pressure equal to the total head of water multiplied

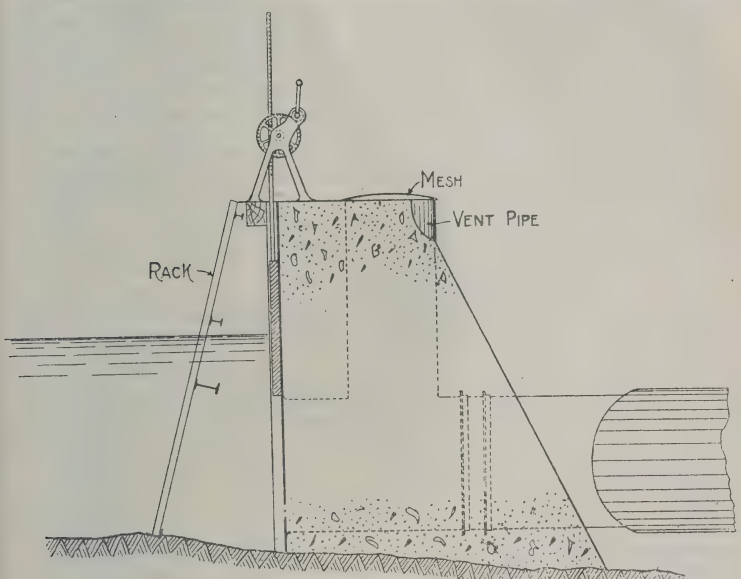


FIG. 12.—Head Gate and Rack.

by the distance between the centres of two adjoining openings. The factor of safety must be at least 3.

When pipes are used to carry the water to the turbines they are generally protected by a concrete head wall designed to resist the full hydrostatic pressure. The gates in this case are much smaller, and are operated by hand.

The force necessary to raise the gate can be calculated as follows:—The total weight of gate in water plus the total water pressure on the gate must be multiplied by a coefficient of friction which varies according to the materials used. To this weight should be added the weights represented by the mechanical losses in the transmission of power, and the grand total increased by about 13 per cent. in order to provide for the extra force necessary to start the gate.

Racks.

Racks are usually made of flat bars having sections from $\frac{5}{16}$ in. by 1 in., to $\frac{3}{8}$ in. by $3\frac{1}{2}$ ins., held together by bolts and separators. These racks may be either of large or small spacing, the former being those in which the bars are from $1\frac{1}{2}$ ins. to 4 ins. apart, and the latter where the bars are from $\frac{3}{8}$ in. to $1\frac{3}{4}$ ins. apart. The spacing is determined by the cross section of the openings of the distributor and runner buckets of the water wheels.

The racks are generally placed at an angle varying from 45° to 60° with the vertical; there should always be an operating platform at least 3 ft. wide, so placed that the attendants can work to best advantage either when cleaning or raising the racks.

The racks should be designed on the assumption that they act as a solid dam, and that all water behind may be drawn off. In such a case the racks and their supports would have to take care of the entire water pressure.

Design of Head Races.

The cross-section area of a head race should be such that the water will rise to about three-quarters to seven-eighths of the height.

Wooden flumes are ordinarily rectangular and designed to carry a depth of water equal to about half the width.

Canal sections are determined by the class of material forming the perimeter and the head which it is found economical to use. The efficiency of a cross-section of a canal is greater with the value of the wetted perimeter minimum, so that a semi-circular section is the most advantageous cross-section that can be used in a channel where resistance to flow is alone considered. When the canal is lined with masonry or concrete walls it is more advantageous to make the face nearly perpendicular, and to place the batter of the wall at the back. When the canal is cut in stone or shales which will not be eroded by the flow of the water, a slope of 90° to 40° may be used. In canals dug through earth the slopes may be from 1 in 1¼ to 1 in 1½. With artificial banks of earth and gravels the slope must frequently be made as low as 1 in 2.

According to Bazin, the relation between the bottom and the mean velocities in channels is the following

$$V_b = V - 10{\cdot}87\sqrt{rs},$$

where

V_b = bottom velocity in ft. per sec;
V = mean velocity in ft. per sec.;
r = hydraulic radius;
s = hydraulic gradient or slope of channel.

The following table, calculated from the foregoing formula, gives the safe bottom velocities for different materials.

TABLE OF SAFE BOTTOM VELOCITIES.

Material of Channel.	Safe Bottom Velocity (V_b) in Ft. per Sec.	Mean Velocity (V in Ft. per Sec.
Soft brown earth	0·249	0·328
Soft loam	0·499	0·656
Sand	1·000	1·312
Gravel	1·998	2·625
Pebbles	2·999	3·938
Broken stone, flint	4·003	5·570
Conglomerate, soft slate	4·988	6·564
Stratified rock	6·006	8·204
Hard rock	10·009	13·127

Flow of Water in Pipes, Flumes, and Channels.

The principal formula of flow in pipes, flumes and channels, is based on the formula for velocity of flow known as Chezy's formula, which is as follows:

$$V = C\sqrt{rs},$$

where

V = velocity in ft. per sec.;
C = a coefficient of discharge;
A = area of cross section considered, in sq. ft.;
p = wetted perimeter in ft.;

r = hydraulic radius = $\dfrac{\text{area of section}}{\text{wetted perimeter}} = \dfrac{A}{p}$;

s = hydraulic gradient or slope of channel = $\dfrac{\text{difference of level}}{\text{distance}} = \dfrac{h}{l}$

h = fall in ft. between points considered;
l = distance in ft. between points considered.

The formula for the flow is $Q = AC\sqrt{rs}$,
where

Q = discharge in cub. ft. per sec.

The value of the coefficient C can be determined either by Kutter's formula or Bazin's formula.

Kutter's formula is as follows :

$$C = \frac{41{\cdot}65 + \frac{0{\cdot}00281}{s} + \frac{1{\cdot}811}{n}}{1 + \left(41{\cdot}65 + \frac{0{\cdot}00281}{s}\right)\frac{n}{\sqrt{r}}},$$

where n = the coefficient of roughness.

Robt. E. Horton gives in 'Engineering News,' of February 24, 1916, the following category of coefficients of roughness for use in Kutter's formula :

TABLE OF 'n' FOR KUTTER'S FORMULA.

(*R. E. Horton.*)

Surface.	Perfect.	Good.	Fair.	Bad.
Uncoated cast iron pipe	0·012	0·013	0·014	0·015
Coated cast iron pipe	0·011	0·012*	0·013*	—
Commercial wrought iron pipe, black	0·012	0·013	0·014	0·015
Commercial wrought iron pipe, galvanised	0·013	0·014	0·015	0·017
Smooth brass and glass pipe	0·009	0·010	0·011	0·013
Smooth lockbar and welded 'OD' pipe	0·010	0·011*	0·013*	
Riveted and spiral steel pipe	0·013	0·015*	0·017*	—
Vitrified sewer pipe	0·010 0·011	0·013*	0·015	0·017
Glazed brickwork	0·011	0·012	0·013*	0·015
Brick in cement mortar; brick sewers	0·012	0·013	0·015*	0·017
Neat cement surfaces	0·010	0·011	0·012	0·013
Cement mortar surfaces	0·011	0·012	0·013*	0·015
Concrete pipe	0·012	0·013	0·015	0·016
Wood-stave pipe	0·010	0·011	0·012	0·013
Plank flumes :				
Planed	0·010	0·012	0·013	0·014
Unplaned	0·011	0·013	0·014	0·015
With battens	0·012	0·015	0·016	—
Concrete lined channels	0·012	0·014*	0·016*	0·018
Cement-rubble surface	0·017	0·020	0·025	0·030
Dry-rubble surface	0·025	0·030	0·033	0·035
Dressed-ashlar surface	0·013	0·014	0·015	0·017
Semi-circular metal flumes, smooth	0·011	0·012	0·013	0·015
Semi-circular metal flumes, corrugated	0·0225	0·025	0·0275	0·030
Canals and ditches :				
Earth, straight and uniform	0·017	0·020	0·0225*	0·025
Rock cuts, smooth and uniform	0·025	0·030	0·033*	0·035
Rock cuts, jagged and irregular	0·035	0·040	0·045	—
Winding sluggish canals	0·0225	0·025*	0·0275	0·030
Dredged earth channels	0·025	0·0275*	0·030	0·033
Canals with rough stony beds, weeds on earth banks	0·025	0·030	0·035*	0·040
Earth bottom, rubble sides	0·028	0·030*	0·033*	0·035
Natural stream channels :				
(1) Clean, straight bank, full stage, no rifts or deep pools	0·025	0·0275	0·030	0·033
(2) Same as (1), but some weeds and stones	0·030	0·033	0·035	0·040
(3) Winding, some pools and shoals, clean	0·035	0·040	0·045	0·050
(4) Same as (3), lower stages, more ineffective slope and sections	0·040	0·045	0·050	0·055
(5) Same as (3), some weeds and stones	0·033	0·035	0·040	0·045
(6) Same as (4), stony sections	0·045	0·050	0·055	0·060
(7) Sluggish river reaches, rather weedy or with very deep pools	0·050	0·060	0·070	0·080
(8) Very weedy reaches	0·075	0·100	0 125	0·150

* Values commonly used in designing.

Bazin's formula for the determination of C is as follows :

$$C = \frac{157{\cdot}6}{1 + \frac{y}{\sqrt{r}}},$$

where y = a coefficient of roughness, whose value Bazin gives as follows for different classes of channels.

Class I. $y = 0{\cdot}109$ for smoothed cement, or planed wood.
" II. $y = 0{\cdot}290$ for planks, bricks, and cut stone.
" III. $y = 0{\cdot}833$ for rubble masonry.
" IV. $y = 1{\cdot}54$ for earth channels of very regular surface or reveted with stone.
" V. $y = 2{\cdot}35$ for ordinary earth channels.
" VI. $y = 3{\cdot}17$ for exceptionally rough earth channels (bed covered with boulders) or weed-grown sides.

Design of Pipes.

Pressure in Pipes.

The interior pressure in a pipe due to the presence of water, and tending to burst this pipe, is larger transversely than longitudinally.

The pressure in pounds per sq. in. p, determined by a head of water H expressed in feet, is :

$$p = \text{pressure in lbs. per sq. in.} = \text{head in ft.} \times 0{\cdot}44,$$

and the diametral pressure P, tending to burst the pipe, is represented by the equation

$$P = p \times \frac{d}{2},$$

where d = the diameter of pipe in ins.

The longitudinal tension P in the pipe is equal to

$$P' = p \frac{d}{4}.$$

This explains why steel riveted pipes have generally a single row of rivets at the vertical joints and two rows of rivets along the horizontal joints.

Design of Steel Pipes.

The thickness of metal t (expressed in ins.) required to carry a certain pressure can be determined by the following formula :

$$t = \frac{(p + p')d}{2fe} + c,$$

where
t = thickness of steel shell in ins. ;
d = inside diameter of pipe in ins. ;
p = pressure of water in lbs. per sq. in. ;
p' = allowance for water hammer in lbs. per sq. in. ;
f = allowable tensile stress of steel in lbs. per sq. in. :
e = efficiency of riveted joint ;
c = thickness to be added to plate for corrosion.

The permissible unit tensile stress with ordinary open-hearth steel is assumed at 16,000 lbs. The efficiency of the joint may be taken at 55 per cent. for single riveted pipe, and at 70 per cent. for double riveted pipe. The thickness to be added to compensate for the weakening of the pipe due to corrosion is about $\frac{1}{16}$ in. In large pipes under small pressure, the thickness of metal computed with the above assumptions must still be increased to give the pipe the necessary stiffness.

Design of Reinforced Concrete Pipes.

Reinforced concrete pipes are designed under the assumption that the steel takes care of all longitudinal or transversal stresses in the pipe whilst the concrete acts as a waterproof shell. It is evident that, in this case, the steel can be reduced to the minimum thickness required.

The permissible stress per sq. in. of metal can also be taken at 16,000 lbs. per sq. in.

The area of the circles forming the transversal reinforcement can be determined as follows :

Let p = total internal pressure in lbs. per sq. in. ;
d = diameter of pipe in ins. ;
A_s = area of steel reinforcement per lineal foot, expressed in sq. ins. ;
f = permissible stress in steel in lbs. per sq. in. ;

then assuming that the concrete is to take no part of the tensile stresses, we have

$$A_s = \frac{p\,d \times 12}{2 \times f}.$$

The longitudinal reinforcement is taken with an area per lineal foot of circumference equal to half the area per lineal foot of pipe as determined above.

Spacing of Pipe Supports.

Steel and concrete pipes are not always built resting on the ground, and very often they have to be carried on concrete or masonry piers resting preferably on rock, or having a bearing surface in proportion to the load carried and to the resistance of the foundations.

The spacing of the piers is determined by considering the pipe as a circular beam resting freely on supports and carrying a uniformly distributed load consisting of the weight of the pipe plus the weight of the water. This load determines a longitudinal tension in the lower side of the pipe, and this stress added to the longitudinal tension of the pressure of water caused by the static head, plus the extra head due to water hammer, should not be allowed to exceed f, the safe tensile strength of the material.

The stress due to bending is

$$= f_b \frac{3}{2} \cdot \frac{WL^2}{S},$$

where

L = distance between supports in ft. ;
W = total load in lbs. per ft. of length ;
S = section modulus of the pipe.

The longitudinal fibre stress due to water pressure is

$$f_t = \frac{pd}{4t},$$

where

p = pressure in lbs. per sq. in. ;
d = nominal inside diameter of pipe in ins. ;
t = thickness of pipe in ins.

This formula applies to steel pipe, but can be utilised in the calculation of a reinforced concrete pipe, by reducing the total area of steel reinforcement per foot length to a continuous pipe of uniform thickness. This method, however, would not take into account the resistance in compression of the concrete on the upper side of the pipe.

Adding together the stress due to bending f_b and the stress due to water pressure f_t we have a total stress,

$$f = \frac{3}{2} \frac{WL^2}{S} + \frac{pd}{4t};$$

from this we can get the distance between the supports

$$L = \sqrt{\frac{2}{3} \frac{S}{W} \left(f - \frac{pd}{4t} \right)}.$$

The permissible value of f, in a steel riveted pipe, can be taken from 8,000 to 11,000 lbs. per sq. in. according to the efficiency of the joint ; in a reinforced concrete pipe 16,000 lbs. per sq. in. could safely be assumed.

Design of Wood Stave Pipes.

In Canada and in the United States extensive use is made of pipes composed of wooden staves held in place by steel wires wound continuously around the pipe, or by separate steel bands or rods connected by malleable iron shoes.

The steel is designed to take care of all the stresses and the wood forms only the shell. These pipes are very cheap, and have a greater carrying capacity than either steel or reinforced concrete pipes; they have been used for heads as high as 200 ft.

The following information has been compiled from the writings of Robert E. Horton and of Andrew Swickard.

The staves are made of California redwood, Douglas fir, and Canadian red pine. Practice varies somewhat as to the thickness of staves to be used under given pressure for a pipe of given diameter. The following considerations should govern the thickness of staves to be adopted in a given case.

1. The thicker the staves the greater stability of pipe against deformation by its own weight, and accordingly the staves must be thicker for large than for small diameter of pipes.

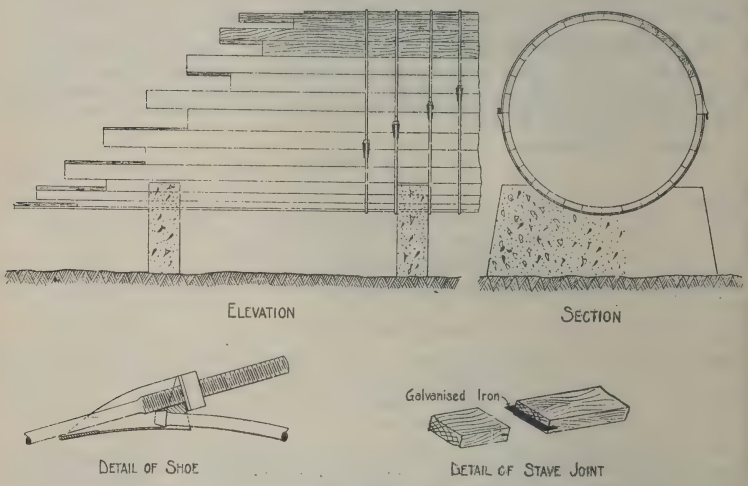


Fig. 13.—Details of Wood Stave Pipe.

2. The staves should be thick enough to prevent material loss by percolation, and accordingly should be thicker for heavy than for lighter pressures.

3. The staves should not be so thick as to prevent their being thoroughly saturated. This and considerations of economy require the use of as thin a stave as is compatible with the first two conditions named.

The following rule serves as a general guide for determining the approximate thickness of staves to be used in any case; the actual thickness of staves may be made equal to the nearest $\frac{1}{8}$ in. or $\frac{1}{4}$ in. greater thickness than shown by the rule:

$$t = 1 \text{ in.} + \frac{\text{Head in ft.} + \text{Diameter of pipe in ins.}}{100}$$

The minimum radius of bends which may be made with continuous pipe increases with the diameter of the pipe and with the thickness of the staves. An approximate rule is

$$\text{Minimum radius, in ft.} = 4 \text{ to } 5 \times (d+4t^2)$$

where,

d = inside diameter of pipe, in ins.;

t = thickness of staves, in ins.

Wood stave pipes should be supported through an arc extending about 55° each side of the vertical axis, in order to prevent deformation of the pipe by its weight and that of the water it contains.

Stave pipes (fig. 13) are generally carried on wooden or on concrete cradles, concrete being preferable for large pipes. Joseph P. Frizell says that wooden cradles are best made of 6 in. × 8 in. or 8 in. × 8 in. timbers, spiked or drift-bolted together, of a length somewhat greater than the diameter of the pipe, and at distance apart about equal to their length. Robert E. Horton is of the opinion that the spacing of the supports is about the same for wood stave and steel pipes.

The abutting end joints of the staves are connected together by iron plates inserted in a slot sawn in for that purpose. This iron tongue should be about $\frac{3}{16}$ in. wider than twice the depth of the slot and about $\frac{1}{8}$ in. longer than the slot, allowing a projection of $\frac{1}{16}$ in. into the adjoining staves.

Creosoted wood-stave pipes put in place twenty-eight years ago were said, at the recent convention of the American Wood Preservers' Association, to be still in perfect condition. The best method of treatment for the staves was described as being the empty-cell process with 50 lbs. initial air pressure, following the creosote pressure period with several minutes' reheating at about 25° F. in excess of any previous temperature, then a vacuum of not less than 20 ins. maintained for from 30 mins. to 1 hour. By this process a satisfactory creosote penetration is obtained, and the staves come out thoroughly clean, and so dry as scarcely to soil the hand.

Area of Bands and their Spacing.

The two principal considerations governing the size and spacing of bands are as follows:—

(1) The area of section of the band per ft. length of pipe must be such as to safely withstand the water pressure plus the stress in the band due to swelling of wood when saturated.

(2) The size and spacing of bands must be such as not to produce crushing of the wood.

Taking into account both the stress due to water pressure and that due to swelling of the staves, the following formula has been derived for determining the necessary area of cross-section of metal in the bands per in. length of pipe.

$$a = \frac{pd + 200t}{2f},$$

where,

a = required area of band section per in. length of pipe;

p = pressure in lbs. per sq. in.;

d = inside diameter of pipe in ins.;

t = thickness of stave in ins.;

f = permissible unit stress in lbs. per sq. in., taken generally as 16,000 lbs.

In order to avoid dangerous crushing of the wood, the bearing pressure between bands and staves should not exceed about 800 lbs. per sq. in. of contact between the band and stave. For round bands the width of contact between the band and stave should be about equal to the radius of the band.

From these data the following formula is obtained for determining the maximum permissible spacing S in ins. between bands of given size under a given pressure.

$$S = \frac{400 \times \text{diameter of round bands in ins.}}{\text{Pressure in lbs. per sq. in.}}.$$

Shoes or Band Couplings.

The band couplings should be made of malleable iron. The weight of these shoes will vary with the size of the band and the diameter of the pipe, but the following table gives average weights for various sizes of bands, which are accurate enough for estimating purposes:

Diameter of Band, ins.	$\frac{5}{16}$	$\frac{3}{8}$	$\frac{7}{16}$	$\frac{1}{2}$	$\frac{5}{8}$	$\frac{3}{4}$	$\frac{7}{8}$	1
Weight of Shoe, lbs.	0·35	0·40	0·65	1·00	1·75	2·75	4·00	6·00

Length of Bands.

Before the length of a band can be determined it is necessary to know how much lap-over of the rod there is in the shoe. This differs in shoes for different sizes of pipe, increasing with the increase in size of rod However, this quantity will average about as follows for various sizes of bands :

Diameter of Band, ins. . . .	$\frac{5}{16}$	$\frac{3}{8}$	$\frac{7}{16}$	$\frac{1}{2}$	$\frac{5}{8}$	$\frac{3}{4}$	$\frac{7}{8}$	1
Lap-over of Band in Shoe, ins. .	$\frac{1}{2}$	$\frac{5}{8}$	$\frac{3}{4}$	$\frac{7}{8}$	$1\frac{3}{16}$	$1\frac{1}{4}$	$1\frac{1}{3}$	$1\frac{3}{8}$

The end of the rods should be upset and threaded over a length of not less than $4\frac{1}{2}$ ins. for $\frac{3}{8}$ in., 5 ins. for $\frac{7}{16}$ in., and 6 ins. for other sizes. There are three types of head in use—button, square, and tee heads. The tee head has the advantage of keeping both ends of the rod closer to the staves, and shortens the space over which the rod is raised from the staves ; it also permits the use of a shorter shoe. The length of rods under the head should be such that, after the pipe is finally tightened, at least $1\frac{1}{2}$ ins. of thread will remain ahead of the nut. The length of the rod, excluding the head, is determined in the following manner, where the rod is in one part and 6 ins. of thread is being used :

$$\text{Total length} = (d+2t+r)\pi+k+4\tfrac{1}{2} \text{ ins.}$$

where,

d = nominal inside diameter of pipe in ins. ;
t = thickness of staves in ins. ;
r = diameter of rod in ins. ;
k = lap of rod in shoe in ins.

If the rod is in two parts, the following formula applies

$$\text{Total length} = (d+2t+r)\pi+2k+9 \text{ ins.}$$

From 68 tests on wood-stave pipe lines with diameters from 4 to 162 ins., and velocities ranging from 1 ft. to 8 ft. per sec., it was found that with diameters from 4 to 24 ins. the average value of n in Kutter's formula (p. 1191) was 0·0109 and with diameters from 31 to 162 ins., the average value of n was 0·0124.

(*Mallett ; Flow of Water in Pipes, Vol. CCVIII* (*April* 1921), *Proceedings Inst. C.E.*)

Discharge of Water through Orifices.

The theoretical velocity, v, with which water flows from an orifice in the side of a vessel at a depth h from surface is the same as that of a body falling freely by gravity from height, h, viz.




FIG. 14.




FIG. 15.


FIG. 16.

$v = \sqrt{2gh}$, but practically the converging currents produce a contraction of the jet, which assumes the form of the vena contracta, d, e, f, g, fig. 91.

h = height from surface of water to centre of orifice, in feet. v = velocity of issuing water


FIG. 17.


Fig. 18.

in feet per second. A = area of orifice, in feet. Q = cubic feet discharged per second. g = coefficient of terrestrial acceleration.

$$v = m\sqrt{2gh}. \qquad Q = mA\sqrt{2gh}. \qquad 2g = 64{\cdot}4 \qquad \sqrt{2}\,g = 8 \text{ practically.}$$

m.

·625. Where the orifice is a thin plate, bc (fig. 14), with thickness less than $\frac{1}{2}$ smallest dimension of orifice.

·97. Orifice shape of vena contracta, d, e, f, g (fig. 15) ; A is measured at f, g.

·82. Orifice with an adjutage (fig. 16) ; O = $2\frac{1}{2}$ to 3 times least dimension at A.

·95. Sides converging at angle of 13½° (fig. 17). m depends on diameter and angle of convergence.

1·46. Sides diverging at angle of 5° 6′ (fig. 18). O = 9 times least dimension at A, which is of form of vena contracta. (Seldom used.)

·548. Where 2 sluices in thin plates are so close as to interfere with each other; m being reduced from ·625.

·62. For sluices of moderate size in lock gates, etc.

·82. For narrow-bridge openings.

·92. For very large sluices and bridge openings.

To raise a River a certain Height by a Weir.

Q = discharge of river in cubic feet per second; h_1 = height by which river is to be raised in feet; h_2 = depth of top of weir below original surface of water necessary to raise surface by height h_1; h_a = head corresponding to velocity of approach; l = length of weir in feet; m = coefficient of contraction = ·628; $2g$ = 64·4.

$$h_2 = \frac{Q}{ml\sqrt{2g(h_1 + h_a)}} - \tfrac{2}{3}\frac{(h_1 + h_a)^{\frac{3}{2}} - h_a^{\frac{3}{2}}}{\sqrt{h_1 + h_a}}$$

If h_a is not taken into account, then

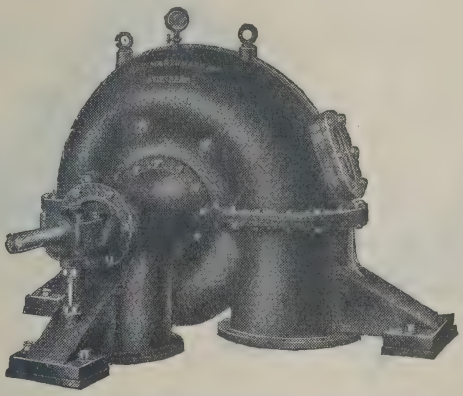
$$h_2 = \frac{Q}{ml\sqrt{2gh_1}} - \tfrac{2}{3}h_1.$$

WATER POWER

has greatly increased in value during recent years owing to high fuel costs. Only turbines of first-class design and efficiency should be used; others mean waste of power and money.

OUR EFFICIENCY GUARANTEES

are the highest obtainable and are all based on the results of actual tests.



Type II. Spiral Case Horizontal Shaft Turbine
Fall 75' 0". 360 B.H.P. 750 R.P.M.

WATER POWERS SURVEYED AND REPORTED ON.

HAY, MARYON & Co. LTD.

WATER POWER ENGINEERS AND CONTRACTORS

14 BRIDE LANE, LONDON, E.C.4.

Catalogue sent on application.

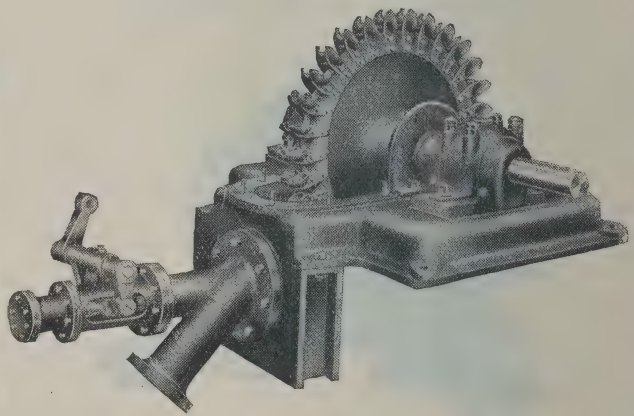
WORKS: Hay, Maryon Works (Stroud), Ltd., Stroud, Glos

See also Advertisements facing pages 1125, 1199 and Editorial pages 1222-1224

WATER POWER

COMPLETE INSTALLATIONS FOR ANY CONDITIONS OF FALL OR POWER.

PIPE LINES
TURBINES PELTON WHEELS
GOVERNORS.



Type 14.—PELTON WHEEL.

Single runner, single nozzle type with deflector and spear regulation for operation by oil pressure governor.

HAY, MARYON & Co. LTD.

WATER POWER ENGINEERS AND CONTRACTORS

14 BRIDE LANE, LONDON, E.C.4.

Telegrams: 'HAMABRILA, FLEET, LONDON.
Telephone: CENTRAL 1814.

Catalogue sent on application.

WORKS: Hay, Maryon Works (Stroud) Ltd., Stroud, Glos.

See also Advertisements facing pages 1125, 1198 and Editorial pages 1222-1224.

SECTION XXIV

PART IV

WATER PRESSURE ENGINES—PELTON WHEELS—TURBINES

Water-pressure Engines.

SINGLE-ACTING ENGINES

consist of single cylinder and piston. The water is admitted under the piston, raises it, is allowed to escape, and the piston falls by its own weight. Average velocity of piston should not exceed 140 feet per minute. Stroke should be as long as possible, generally from 6 to 10 feet.

Water-pressure engines are also made rotatory with single or double acting cylinders, and single and double acting rams are extensively used for working cranes, dock gates, etc., the stroke of the ram being multiplied by gearing or chain tackle. The pressure generally used is 700 lbs. per square inch.

POWER OF WATER-PRESSURE ENGINES.

$P = 62{\cdot}42Qh \times {\cdot}66$ to ${\cdot}8$ ft. lbs. per sec. H.P. $= Qh \times {\cdot}07491$ to ${\cdot}09080$,

where Q = cub. ft. of water per sec., h = height of fall, in ft.

Diameter of supply-pipe = diameter of cylinder × ·41 for single cylinder engines, = diameter of cylinder × ·68 for double cylinder engines.

EXAMPLE.—A single-acting pressure engine has a pressure cylinder 50 ins. in diameter, a head of water of 132 ft., a stroke of 10 ft., and is worked 4 to 7 strokes per min.

$$Q = \frac{25^2 \times 3{\cdot}14}{144} \times 10 \times \frac{4}{60} = 9{\cdot}1 \text{ cub. ft. per sec.}$$

H.P. = 9·1 × 127 × ·09080 = 105 horse-power, with 4 strokes per min., or 184 with 7 strokes. The actual work was about 168 horse-power.

PELTON WHEELS.

In this wheel, fig. 1, the water striking the buckets in the middle is deflected to both sides equally, and in such a way that the discharge from one bucket clears the one following. The construction of the buckets is shown in fig. 2. An improvement of the Pelton semi-cylindrical

bucket is the Doble bucket, fig. 3, each half of which is ellipsoidal in form, and has a part of the outer lip cut away, so as to avoid hitting the jet when moving under it.

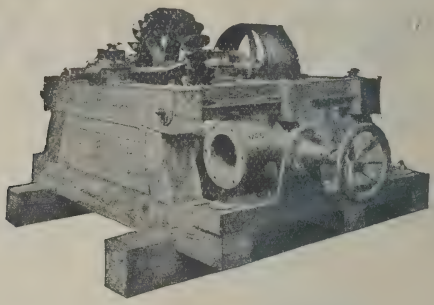


FIG. 1.

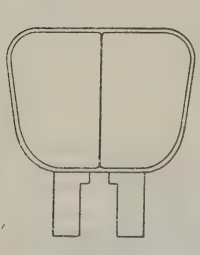


FIG. 2.—Pelton Bucket.

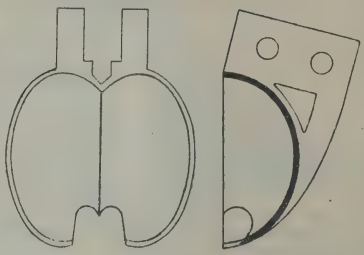


FIG. 3.—Doble Bucket.

PROPORTION OF PARTS OF PELTON WHEELS.

The area of the jet should not exceed 0·1 the projected area of the bucket, or the diameter of the jet should not exceed 0·3 the width of the bucket. The ratio of the wheel diameter to jet diameter should not be lower than 9, 12 being a common value, so that the diameter of the wheel in feet should about equal the diameter of the jet in inches.

The size of the jet depends on the amount of power desired, per unit, under the given head; the peripheral speed of the wheel varies between 0·43 and 0·47 of the theoretical jet velocity. Two and three jets are sometimes used upon one wheel but a single jet is preferable. Sometimes two wheels are used to drive a single generator mounted between them.

The efficiency of the Pelton wheel has been found to exceed 86 per cent. Since this wheel operates by utilising the kinetic energy of the water, it is best adapted to a small discharge under a high head: its range of usefulness varies from 50 foot heads to 3,000 and even 5,000 foot heads.

Pelton Wheel Regulators.

GENERAL.

The section of the nozzle is either square or circular, but more generally circular, with a needle, fig. 4, to secure a more uniform velocity in all parts of the jet; this needle can be moved back or forward by the governor, varying the area of the opening and regulating the amount of water discharged. For very high heads, where the interruption or partial suppression of flow by such an arrangement might involve danger to the pipe-line, deflecting nozzles of various kinds are

employed. The movement of a regulating nozzle of this description is accomplished with comparatively little expenditure of energy, and thus the control of Pelton wheels is simple, unless affected by irregularities. A deflecting nozzle, as used by Messrs. Theodor Bell & Co., is shown in fig. 5. This nozzle is rectangular in section, the upper side being formed by the piece E pivoted at A. This is moved by the governor attachment B, so as to increase or diminish the area of the nozzle at the mouth. A secondary nozzle D is closed by a cap C, which also rotates about the pivot A, and is moved through the same angle as E. As the two nozzles have the same width, a partial closure of the larger nozzle is compensated by an opening of the smaller, so

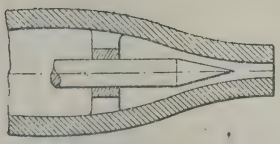


FIG. 4.

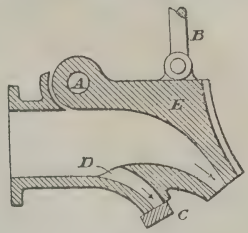


FIG. 5.

that the spouting area is always a constant, and the flow through the pipe is steady, while the wheel receives that fraction of it which is required to maintain the speed constant at all loads.

The foregoing device, however, is wasteful of water even with the best of attention. Since the water hammer caused in the pipe by a sudden opening of the nozzle is less dangerous than the hammer due to the sudden interruption of the flow, a device, fig. 6, has been perfected, consisting of an

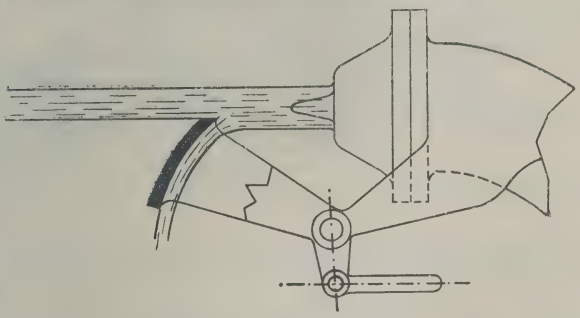


FIG. 6.—Needle Nozzle with Deflector.

automatic jet deflector and an ordinary nozzle needle, which causes the governor to act on the deflector only in case of closing, the needle being afterwards slowly closed by means of a dash-pot mechanism, whilst the deflector becomes tangential to the reduced jet. When the governor moves to increase the discharge of the nozzle, it controls simultaneously and rapidly the deflector and the needle.

COMBINED SPEAR AND DEFLECTOR REGULATOR CONTROLLED BY SHAFT GOVERNOR.

(Gilbert Gilkes & Co. Ltd., Sole Makers and Patentees.)

For high-falls (100 ft. and upwards), Pelton wheels or other impulse turbines may be controlled by an arrangement similar to that shown in fig. 7, as made by *Gilbert Gilkes & Co. Ltd.*, of Kendal.

The arrangement consists of a pendulum mounted upon the turbine shaft and coupled direct

'P' Type Pelton Wheels Capacity Table (*Abbreviated*).

Size.	Fall in Feet	40	50	60	70	90	110	130	150	170	200	230	275	350	425	475
	Fall in Metres	12·19	15·25	18·30	21·35	27·43	33·52	39·62	45·71	51·81	60·95	70·10	83·80	106·6	129·5	144·8
P. 6	Horse-power	0·09	0·13	0·17	0·22	0·33	0·44	0·56	0·70	0·85	1·08	1·34	1·75			
	Cub. ft. per min	1·83	2·05	2·24	2·42	2·75	3·04	3·30	3·54	3·77	4·10	4·40	4·80	—	—	—
	Litres per sec.	0·87	0·97	1·06	1·14	1·30	1·44	1·56	1·67	1·78	1·94	2·08	2·27			
	Revs. per min.	1100	1230	1350	1460	1650	1828	1988	2135	2270	2462	2640	2890			
P. 9	Horse-power	0·23	0·32	0·42	0·53	0·78	1·06	1·36	1·69	2·03	2·61	3·22	4·20	6·05		
	Cub. ft. per min.	4·30	4·80	5·20	5·60	6·40	7·10	7·70	8·30	8·80	9·60	10·3	11·2	12·7	—	—
	Litres per sec.	2·03	2·27	2·46	2·64	3·02	3·35	3·64	3·92	4·15	4·53	4·87	5·29	6·00		
	Revs. per min.	736	823	900	975	1105	1220	1327	1425	1520	1645	1765	1930	2180		
P. 12	Horse-power	0·42	0·59	0·78	0·98	1·43	1·94	2·52	3·10	3·73	4·78	5·88	7·70	11·0	14·7	17·5
	Cub. ft. per min.	7·60	8·50	9·30	10·1	11·4	12·6	13·7	14·8	15·7	17·1	18·3	20·0	22·6	24·9	26·3
	Litres per sec.	3·58	4·02	4·40	4·77	5·38	5·95	6·47	6·99	7·42	8·07	8·65	9·45	10·7	11·8	12·4
	Revs. per min.	553	617	677	731	828	915	1000	1070	1140	1235	1320	1450	1630	1800	1900
P. 18	Horse-power	1·02	1·42	1·86	2·35	3·43	4·63	5·96	7·40	8·90	11·4	14·0	18·3	26·3	35·2	41·6
	Cub. ft. per min.	17·3	19·3	21·1	22·8	25·9	28·6	31·1	33·4	35·5	38·6	41·4	45·2	51·0	56·2	59·4
	Litres per sec.	8·16	9·11	9·97	10·8	12·2	13·5	14·7	15·8	16·8	18·2	19·6	21·3	24·1	26·5	28·0
	Revs. per min.	368	411	450	487	552	610	664	713	760	824	882	965	1090	1200	1270
P. 24	Horse-power	1·82	2·53	3·33	4·20	6·12	8·27	10·6	13·2	15·9	20·3	25·0	32·7	47·0	62·7	74·2
	Cub. ft. per min.	30·8	34·4	37·7	40·7	46·2	51·1	55·5	59·6	63·5	68 8	73·8	80·7	91·0	100	106
	Litres per sec.	14·5	16·3	17·8	19·2	21·8	24·1	26·2	28·1	30·0	32·5	34·8	38·0	43·0	47·2	50·0
	Revs. per min.	276	309	339	366	415	458	498	535	570	618	662	725	817	900	950
P. 36	Horse-power	4·06	5·67	7·46	9·40	13·6	18·5	23·8	29·4	35·6	45·3	56·0	73·0	104	140	166
	Cub. ft. per min.	68·8	77·0	84·4	91·0	103	114	124	133	142	154	165	180	203	224	237
	Litres per sec.	32·5	36·4	39·9	43·0	48·6	53·8	58·5	62·8	67·1	72·7	78·0	85·0	96·0	106	112
	Revs. per min.	184	206	225	243	276	305	332	357	380	412	442	483	545	600	635
P. 42	Horse-power	5·55	7·70	10·1	12·8	18·7	25·3	32·6	40·0	48·6	62·0	76·5	100	143	192	227
	Cub. ft. per min.	94·0	105	115	124	141	156	170	182	194	210	226	246	278	307	324
	Litres per sec.	44·4	49·6	54·3	58·5	66·6	73·6	80·3	86·0	91·5	99·2	107	116	131	145	153
	Revs. per min.	158	176	193	208	236	262	284	305	325	352	378	413	466	514	543
P. 54	Horse-power	9·15	12·7	16·8	21·0	30·8	41·6	53·5	66·3	80·0	102	126	164	236	317	374
	Cub. ft. per min.	155	173	190	204	232	257	279	300	319	346	372	406	458	505	534
	Litres per sec.	73·2	81·7	89·6	96·3	110	122	132	142	151	163	176	192	216	238	252
	Revs. per min.	122	137	150	162	184	203	221	237	252	274	294	321	362	399	422
P. 72	Horse-power	16·3	22·8	30·0	37·8	55·1	74·5	95·8	118	143	183	226	294	423	566	670
	Cub. ft. per min.	277	310	340	367	416	460	500	536	571	620	665	726	820	903	955
	Litres per sec.	131	147	161	173	197	217	236	253	269	292	314	343	387	426	451
	Revs. per min.	92	103	112	121	138	152	165	178	189	205	220	241	272	300	317

P. 6, P. 9, P. 12, etc., represents approximately the diameter of the wheel in inches.
The power stated is the maximum. The wheels can be constructed to develop smaller powers, without impairing the efficiency.
The capacity stated is for a single jet. Double nozzle wheels will develop nearly double the power stated at the same speed.

(*Gilbert Gilkes & Co. Ltd.*)

to the deflector shaft, the design of the deflector being such as to impose the least resistance to the passage of the water through the jet.

Movement to the spear is given by a piston moving in a hydraulic cylinder fixed to the end of the branch pipe.

The position of the spear is dictated by a poppet valve controlled by levers and links connected to the deflector shaft, and so arranged that if the load be thrown off the deflector is brought instantaneously into the jet, the spear slowly following and the deflector finally taking up a position just clear of the jet. If the load is thrown on, the spear is drawn rapidly back.

When economy of water on reduced loads is immaterial, as in the case where the supply is from a stream without storage, the automatic spear-following combination is dispensed with a hand-regulated spear being substituted.

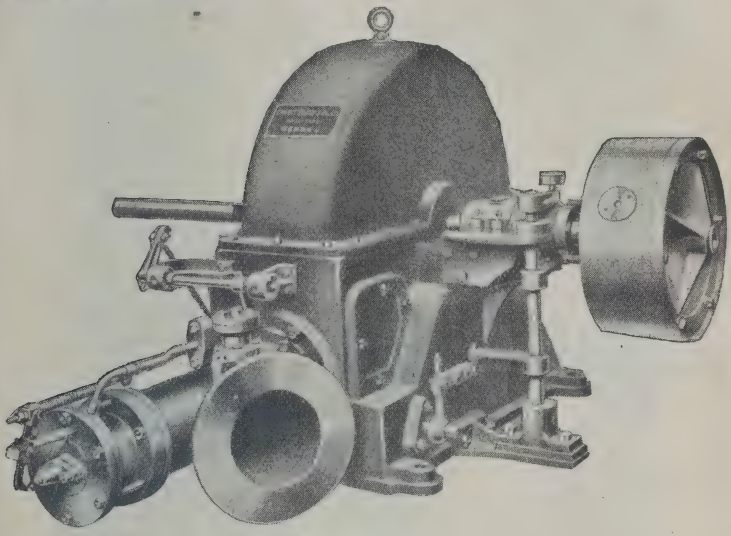


FIG. 7.

The pendulum being mounted directly on to the shaft ensures a perfectly steady drive, saves space, and is immune from all risks due to breaking of chains, belts, etc.

As the pendulum is connected directly to the deflector without the intermission of servo-motors, etc., extreme rapidity of action is obtained, the movements being instantaneous and dead time eliminated, the results showing a momentary variation of less than 1 per cent. with full load thrown off.

COMBINED SPEAR AND DEFLECTOR REGULATOR FOR PELTON WHEELS CONTROLLED BY OIL PRESSURE GOVERNOR.

(*Designed by Messrs. James Gordon & Co., Windsor House, Kingsway, London, W.C. 2.*)

The general arrangement and design of the nozzle is shown by fig. 8, p. 1204. It consists of the following principal parts :—

Pelton wheel nozzle A of the ordinary circular type fitted with an internal spear regulator, the shaft B of which carries a spear head at one end and an oil dashpot piston at its opposite end. The nozzle is also provided with a deflector plate D supported on a spindle, and bearings being carried on the lower part of the nozzle casting. The governor is connected direct to lever E, which is keyed on to shaft M, the deflector being operated positively from this shaft by means of a lever and connecting rod, as indicated in the figure. The shaft M also carries a double lever F, which is provided with a spindle and square steel block working inside the box G in the spear regulator shaft, lever F having sufficient travel in the box G, independent of any movement of the spear, to allow the deflector to be moved far enough into the jet by the governor to practically deflect all the water below the Pelton wheel buckets. The spear shaft is provided with a helical spring

H, which always has a tendency to close the nozzle, and this shaft is provided at its outer end with an oil dashpot C, the piston of which is provided with a flat valve J, allowing rapid movement of the spear shaft in the opening direction, when oil can freely pass from one side of the piston to the other through the holes under the valve plate. For any movement in the closing direction of the spear shaft the valve J is closed, and the oil must escape from one side of the cylinder to the other through the small adjustable valve K. Under normal working conditions the spear regulator would be opened a sufficient distance to pass the quantity of water required to maintain normal speed with the load carried by the wheel, and the deflector would be in such a position that its forward edge would be just clear of and above the jet of water. In this position the square block on lever F would be at the rear end of the box G, the oil pressure of the governor pressing against the spring H, preventing the spear regulator from moving forward. In the event of any load being taken off the plant, the governor would immediately move the deflector into the jet, and the spear rod B would be prevented from quick forward movement by the dashpot. Immediately this occurred the spear would slowly travel forward, its rate being adjusted by the valve K, and as the spear reduces the quantity of water discharged by the nozzle, the deflector would be gradually brought back by the governor. During this time the box G on the spear shaft and the square block carried by lever F would be moving in opposite directions, and the forward movement of the spear would stop when the box G engaged with

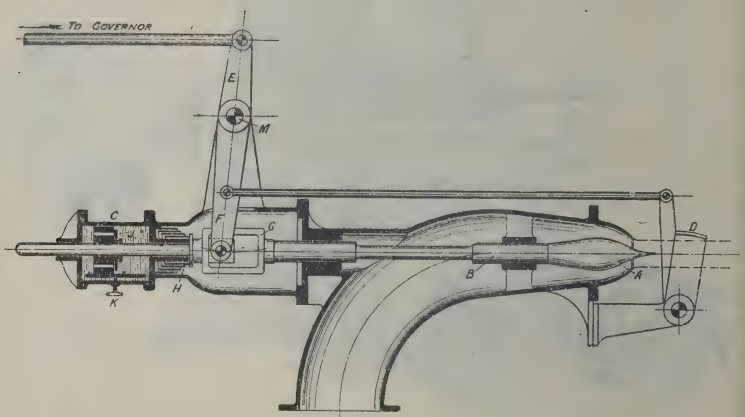


Fig. 8.

the square block on lever F. At this point the deflector would be quite clear of the jet, and the quantity of water discharged should then be exact for the new load conditions. In the event of any load being added to the plant, the governor would move the lever E in the opposite direction, taking the deflector away from the jet, and as the block on lever F would be in contact with the outer side of the box G the spear regulator would have a positive movement in the opening direction in proportion to the movement of the governor, movement in this direction of the spear being free.

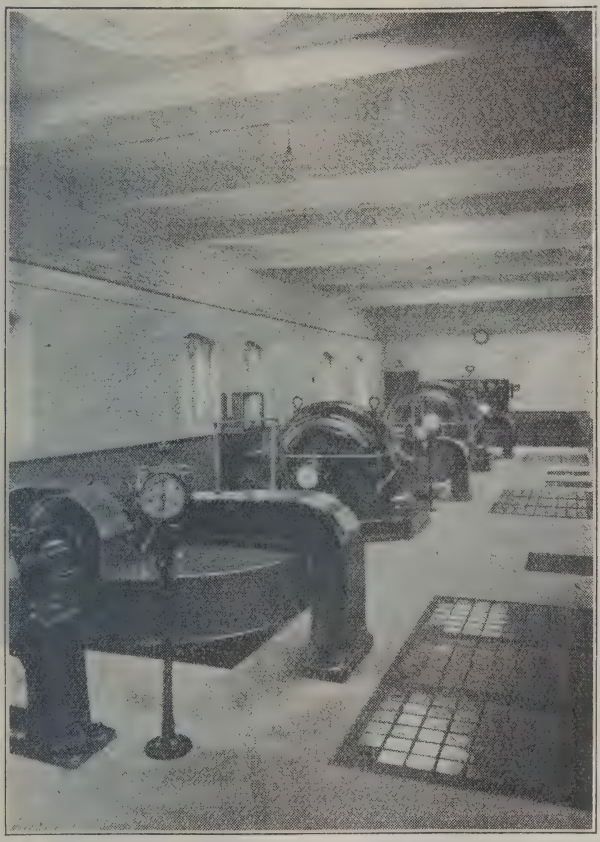
The nozzle can be regulated by hand either by means of the hand wheel on the governor, which would operate the deflector and spear in combination in the same manner as when operated by the governor itself, or the wheel can be regulated by hand by means of a hand wheel on the end of the spear shaft B.

This type of nozzle acts in the same manner as a combined relief valve and nozzle; rapid alteration of the velocity of the water in the supply pipe, and consequent 'water hammer' effects when the nozzles are closed, is impossible, as to meet any reduction in the load a proportionate amount of the water is deflected below the buckets, and the closing of the spear can be regulated to suit the hydraulic conditions of the pipe line in the same manner as the dashpot closing of an ordinary relief valve.

In the event of a breakdown of the governor oil pumps, or failure of oil pressure from any other cause, the governor would then be unable to hold the spear shaft back against the pressure of spring H, and the wheel would then be automatically and slowly shut down by the combined action of the spring and dashpot.

JAMES GORDON & Co. Ltd.

Water Power Engineers.



INTERIOR OF CHESTER HYDRO-ELECTRIC POWER HOUSE.

The largest LOW Fall Installation in Great Britain.

Windsor House, Kingsway, London, W.C.2.

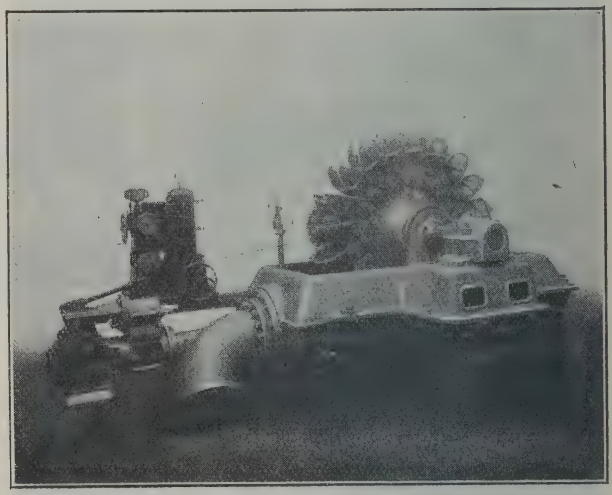
Telegrams - - - - - - 'Gordolobo, Westcent, London.'

See also announcements facing pages 1176, 1205 and 1216. F. 1204

JAMES GORDON & CO.

LTD.

Water Power Engineers



GORDON PELTON WHEEL FOR

The largest HIGH Fall Power
— Plant in Great Britain. —

WINDSOR HOUSE, KINGSWAY, LONDON,
W.C. 2.

Telegrams - - - - - - 'Gordolobo, Westcent, London.'

See also announcements facing pages 1176, 1204 and 1216.

THE 'SEEWER' PELTON WHEEL REGULATOR.

A new type of spear regulator for Pelton wheels has recently been introduced by M. Seewer, a Swiss engineer, and has been successfully tested at the Zurich Polytechnic.

The distinctive feature of the arrangement, fig. 9, consists in the use of a series of pivoted

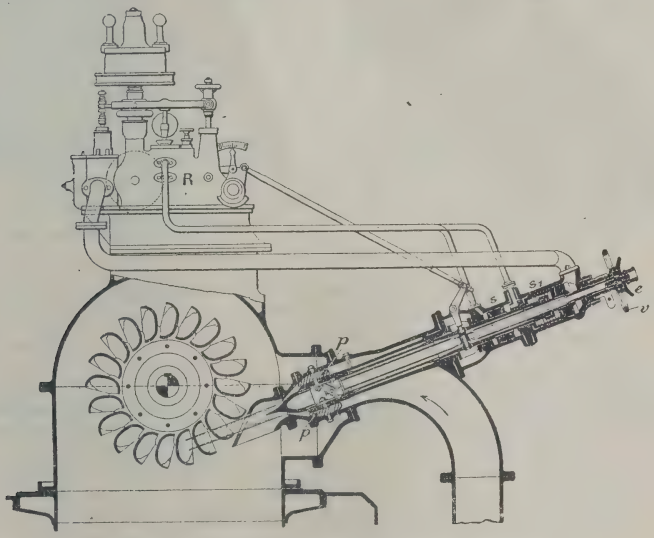


FIG. 9.—Longitudinal Section of 'Seewer' Regulator.

vanes P inside the nozzle, arranged round the central spear in the shape of a symmetrical star. By means of a simple mechanism the vanes are all equally inclined or kept parallel to the axis of the nozzle. In the latter position they produce no effect upon the issuing cylindrical water jet, fig. 10, which then exerts its maximum force upon the runner buckets. A small

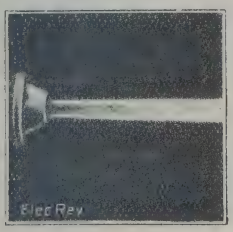


FIG. 10.—Normal Form of Jet.

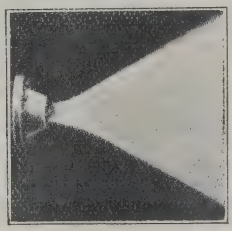


FIG. 11.—Jet formed when the Vanes are Inclined.

inclination, however, acts upon the jet in a remarkable manner, changing it, as shown in fig. 11, into a hollow cone, this effect being more and more accentuated as the inclination of the vanes

is increased. The deflector used is pierced to pass the cylindrical jet, but on the operation of the vanes it intercepts the coned jet, and in this way suppresses its action upon the wheel buckets.

As the vanes only effect the dispersal of the jet without reducing the rate of flow, their action does not give rise to any excess pressures or water hammer in the pipe line. Moreover, the reactions of the water on the front and back faces of the vanes being balanced, they can turn on their axes, and respond almost instantly to load fluctuations, whilst the power required to actuate them is reduced to a minimum. The maximum inclination of the vanes is 20 degrees. They are actuated by means of the servo-motor s, through the governor R, which also controls the movement of the spear through the second servo-motor s_1. Hand regulation can also be made, if desired, by engaging the hand-wheel v with the control spindle through the clutch e.

When sudden changes in the load occur the two servo-motors act together; the one controlling the vanes acts instantly, that of the spear completing its effect. With only small fluctuations in the load the spear servo-motor alone comes into play, and the vanes remain inoperative.

In the *Schweizer Bauzeitung* of May 31 and June 7, 1919, Prof. Prasil, of the Zurich Polytechnic, who supervised the tests, gives the results with a number of tables and diagrams, and reports in favour of this system as constituting a notable advance in the regulation of Pelton wheels. (*'Génie Civil.'*)

The English Electric Co. has acquired the patent rights of this governing system, for the whole world, and applications of the system have proved thoroughly satisfactory. (*The English Electric Co.*)

Notes on Regulators.

The best makes of hydraulic regulators for medium and high falls will govern within the following limits, the per cent. being that of the mean speed :—

For a sudden variation of load of 25 per cent.	4 per cent.
" " " 50 "	6 "
From no load to full load	10 "

The relative speed with which gates may be closed by hydraulic and mechanical regulators is greater for the hydraulic, the ratio being generally about 5 to 1 in favour of the hydraulic.

TURBINES.*

Classification of Turbines.

Action, Impulse, Tangential, or Pressureless Turbines.

In these turbines the passages are never completely filled with water and the flow of water is always under atmospheric pressure. During flow through the wheel the absolute velocity of the water is reduced as the water gives up its kinetic energy.

Reaction, or Pressure Turbines.

In these turbines the wheel passages are completely filled with water under a pressure which varies throughout the flow. During this flow through the runner, both the pressure and the absolute velocity of the water are reduced as the water gives up the energy to the wheel.

Direction of the Flow of Water.

In the radial outward flow, or centrifugal turbines (Founeyron type, fig. 12), the guide-vanes ring is contiguous to the runner, and the water passes through the runner whilst moving away from the axis of rotation but in the plane perpendicular to it.

In the parallel, or axial flow turbines (Jonval type, fig. 13), the guide-vanes ring is superposed to the runner, and the water passes through the runner buckets whilst moving along a circular cylindrical surface having for axis the shaft of the turbine.

In the radial inward flow, or centripetal turbines (Francis type, fig. 14), the guide-vanes ring is contiguous to the runner, and the water moves towards the axis of rotation in a plane perpendicular to it.

---

* The following books have been consulted and quoted: *Hydraulic Turbines*, by R. L. Daugherty; *Elements of Hydraulics*, by S. E. Slocum; *Water-Power Engineering*, by Daniel W. Mead; *Water-Power Plants and the Type Characteristic of Turbines*, by W. Baashuus; and *La technique de la houille blanche*, by Etienne Pacoret.

In the mixed (radial, inward, and axial) flow turbines (American type, fig. 15) the water enters the wheel radially, in the direction of the axis, and during its flow through the runner. buckets turns and discharges axially.

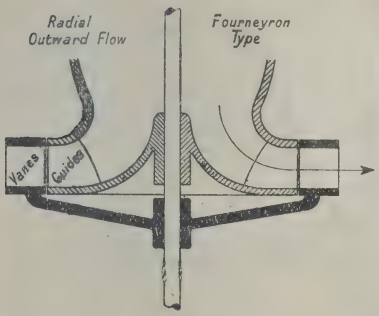


FIG. 12.

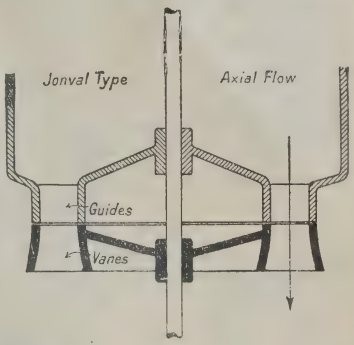


FIG. 13.

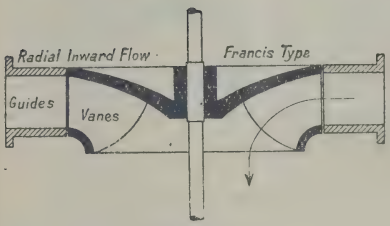


FIG. 1 .

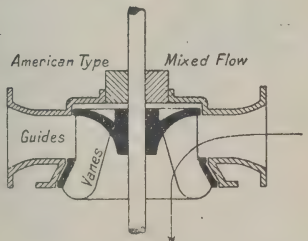


FIG. 15.

POSITION OF THE SHAFT.

Turbines have either (*a*) an horizontal shaft, or (*b*) a vertical shaft; the latter are further classified as right-hand or left-hand turbines according to the direction of their rotation. If in looking down upon the wheel from above the rotation appears clockwise it is called a right-hand turbine. The reverse of this is a left-hand turbine.

Turbine builders have now reduced their production to three types, viz. the tangential or Pelton wheel, the centripetal flow or Francis turbine, and the helico-centripetal or American turbine, each of which satisfies special conditions.

Types of Turbines.

THE FRANCIS TURBINE AND THE AMERICAN TURBINE.

These two types of reaction turbines have now superseded all the others, because they are cheaper to build, smaller, more easily regulated, and have a higher speed than the turbines of the Fourneyron or Jonval type.

The Francis turbine is a radial inward flow turbine of low or medium speed and is better suited for medium heads up to 500 feet. The American turbine, or mixed flow turbine, fig. 15, is a modification of the Francis turbine, resulting from a demand for higher speed and power under low heads. Higher speed is obtained by reducing the diameter of the runner, greater power by increasing the capacity of the runner, making the buckets deeper and reducing the number of vanes. Since this decreased the discharge area, the vanes were curved so as to discharge axially; combined together these alterations have produced the high-speed high-capacity mixed-flow runner of to-day.

The best peripheral wheel speed for a reaction turbine varies between 0·57 to 0·87 of the theoretical spouting velocity of the water under the head considered. The efficiency of the modern reaction turbines is high, ranging between 80 and 85 per cent. under average conditions, and going up to 90 and 92 per cent. under the most favourable conditions.

(1) Crown Plate.
(2) Curb Plate.
(3) Shifting Ring.
(4) Speed Gate.
(5) Gate Bushing.
(6) Fulcrum Bolt.
(7) Link.
(8) Link Bushing.
(9) Gate Pin.
(10) Shifting Ring Pin.
(11) Hub.
(12) Rim.
(13) Bucket Vane.
(14) Main Shaft Key.
(15) Keeper Ring.
(16) Lignum Vitæ Block.
(17) Block Holder.
(18) Adjusting Plate.
(19) Bearing Casing.
(20) Casing Head.
(21) Main Shaft.
(22) Regulating Shaft.
(23) Lever or Bell Crank.
(24) Bearing.
(25) Connecting Rod.
(26) Connecting Rod Pin.
(27) Cover Plate.
(28) Base Ring.

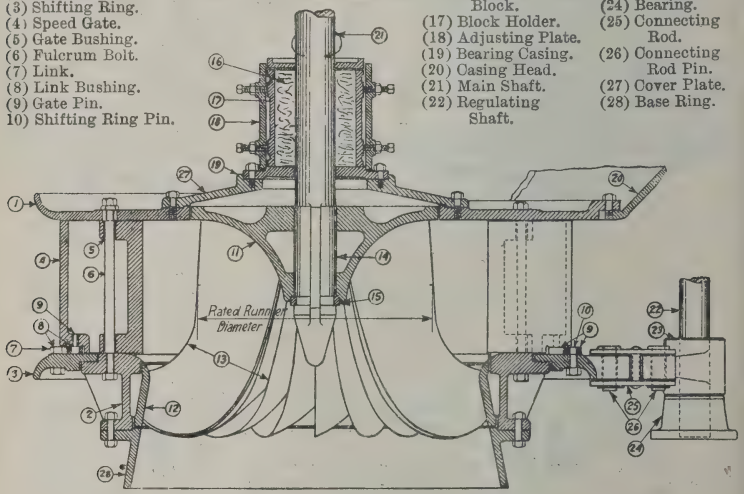


FIG. 16.—American Turbine Nomenclature.

CONTROL OF ADMISSION OF WATER INTO REACTION TURBINES.

There are three different systems of regulating the amount of water supplied to the turbine in case of a variation of the load; these are (1) the cylinder gate, (2) the register gate, (3) the wicket gate.

(1) The **Cylinder Gate**, fig. 17, as its name indicates, consists of a cylinder closely fitting the guides and moving in a direction parallel to the axis of the turbine, thus decreasing or increasing

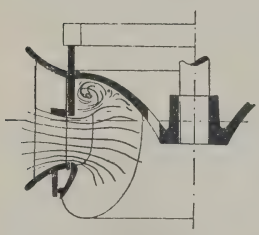


FIG. 17.—Cylinder Gate.



FIG. 18.—Register Gate.

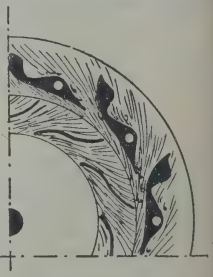


FIG. 19.—Wicket Gate.

the area left between the guide-vanes for the passage of the water. This type of gate is the simplest and cheapest but also the poorest, as the sudden contraction of the vein when passing

under the partially closed cylinder gate and the sudden expansion that must take place in the bucket produces eddying which results in decreased efficiency.

(2) In the **Register Gate**, fig. 18, the guide-vanes are made in two parts. The inner portion next to the runner is stationary, the outer portion is on a ring which may be rotated far enough to shut the water off entirely if necessary. While this is more efficient than the preceding type, there is still a certain amount of eddying when the register gate is partially closed, with a consequent decrease in part gate efficiency.

(3) The **Wicket Gate**, fig. 19, also called the pivoted guide-vane, consists of a connection rod from the governor operating a shifting ring, which, by means of links, causes the vanes to rotate about their pivots, thus altering the area of the passages through them. This system has the working parts outside the case, which is a great advantage; its maximum efficiency is obtained before the gates are opened to the greatest extent.

The Little Giant Double Turbine.

(*S. Howes Co., London.*)

The form of the wheel of this turbine is shown by fig. 20, and general views of vertical forms of complete turbines by figs. 21 and 22.

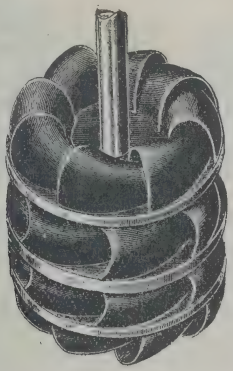


Fig. 20.—Side view of Little Giant Turbine Wheel, showing Form of Double Buckets.

The Little Giant is a double turbine having two tiers of buckets, or, strictly speaking, two turbines keyed to the same shaft, one above the other, and both running in the same case, the upper tier discharging at the top, and the lower one under the bottom of the case. The shaft is supported at the bottom end, and revolves upon an adjustable lignum-vitæ step in the bottom bridge-tree. The case is made of iron in the form of a scroll. This scroll, for larger sizes, is made of boiler-plate, which is planed parallel on the sides, and is held firmly between the cast-iron top and bottom plates by bolts. The case is supported by the bottom bridge-tree, which is bolted firmly to it. The bridge-tree is bolted firmly to the bottom of wheel-pit, upon which it rests. The gate box is made of cast iron and bolted to the case. The gate is also made of cast iron, and the surface of it, as also the ways or seat upon which it slides, are planed, thus forming a perfectly watertight joint. The pressure of water always holds the gate to its place, and the joint remains tight as the gate wears. The gates for the larger sizes of turbines, particularly if to be used under high heads, are mounted upon friction rollers.

The Division Plate.

Figs. 21 and 22 each show an iron plate passing horizontally through the turbine case, and dividing it into two compartments corresponding to the two tiers of buckets, one set being above this plate, discharging at the top of the case, the other below the plate, and discharging at the bottom; in fig. 21 the plate is shown as shut down, and in fig. 22 the plate is raised. Referring to fig. 22, the gate is shown raised clear up, or at 'full gate,'

admitting the water to both tiers of buckets with the full pressure due to the head, giving the full power of both parts, or of the whole turbine. If but one-half of the power of the turbine were required, the gate could be dropped or closed down to the division plate, thus shutting the water off from the upper tier, but maintaining the full pressure on the lower buckets, which would give one-half the full power with half the quantity of water, thus obtaining as high a percentage of power at half-gate as at full-gate, which could not be done if there was only one set of buckets. If no division plates were used, the full pressure of water due to the head would be on the turbine only when the gate was full open, but when used at half-gate the water, after passing through the gate-opening, would pass to both tiers of buckets but with less pressure; consequently the turbine would lose from 20 to 25 per cent. of the power in the water used.

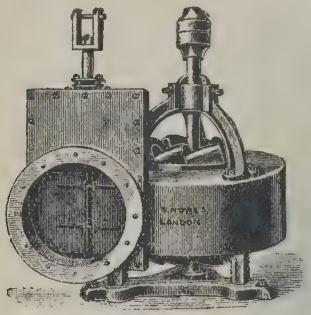


FIG. 21.—Vertical Little Giant Turbine, for joining to Iron Pipe.

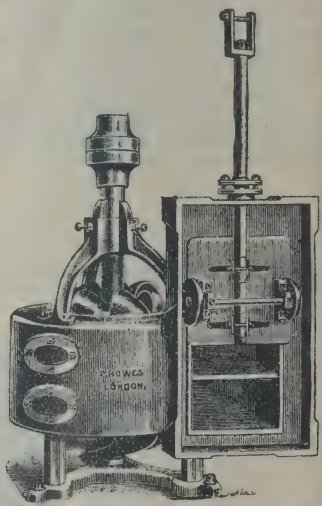


FIG. 22.—Vertical Little Giant Turbine, for joining to Wooden Pipe.

DIMENSIONS OF VERTICAL LITTLE GIANT DOUBLE TURBINES.

Diameter of Turbine.	Diameter of Turbine Shaft.	Distance from Centre of Shaft to Centre of Gate Shaft.	Distance from Floor of Turbine Pit to Centre of Coupling on Turbine Shaft.	Distance from Floor of Pit to top of Turbine Buckets.	Space the Turbine occupies in Turbine Pit.	Size of Gate Frame for Wooden Spout.	Inside Diameter of Round Flange Gate Box for Iron Pipe.	Net Weight of Turbine.
Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Lbs.
4	—	—	—	$8\frac{3}{4}$	—	—	—	—
6	$1\frac{7}{16}$	$7\frac{1}{2}$	$22\frac{1}{2}$	$12\frac{1}{4}$	$17\frac{1}{2} \times 17\frac{1}{2}$	$13\frac{1}{2} \times 9$	8	265
8	$1\frac{7}{8}$	$9\frac{3}{4}$	$26\frac{1}{2}$	15	$20 \times 18\frac{1}{2}$	$16\frac{1}{2} \times 10$	10	380
10	$1\frac{11}{16}$	$8\frac{7}{8}$	$29\frac{1}{4}$	$16\frac{3}{4}$	$22 \times 21\frac{1}{2}$	$17\frac{1}{4} \times 11\frac{1}{2}$	12	485
12	$1\frac{15}{16}$	$9\frac{3}{4}$	$33\frac{1}{2}$	$18\frac{3}{4}$	$25 \times 25\frac{1}{2}$	$20 \times 13\frac{1}{2}$	14	655
14	$2\frac{3}{16}$	$12\frac{1}{2}$	39	$22\frac{3}{4}$	$29 \times 28\frac{1}{2}$	$24\frac{1}{2} \times 15\frac{1}{2}$	18	760
16	$2\frac{7}{16}$	$13\frac{7}{8}$	$42\frac{1}{2}$	$25\frac{1}{2}$	$35 \times 33\frac{1}{2}$	$27 \times 16\frac{1}{2}$	20	1,140
18	$2\frac{15}{16}$	$15\frac{1}{2}$	$48\frac{1}{2}$	30	$42\frac{1}{2} \times 38$	32×20	22	1,820
18*	$2\frac{15}{16}$	$15\frac{1}{2}$	$48\frac{1}{2}$	30	$42\frac{1}{2} \times 38$	32×20	22	1,820
21	$3\frac{1}{8}$	18	$56\frac{1}{2}$	$32\frac{1}{2}$	$45 \times 42\frac{1}{2}$	$36\frac{1}{2} \times 22\frac{1}{2}$	24	2,190
21*	$3\frac{1}{8}$	18	$56\frac{1}{2}$	$32\frac{1}{2}$	$45 \times 42\frac{1}{2}$	$36\frac{1}{2} \times 22\frac{1}{2}$	24	2,190
24	$3\frac{7}{16}$	18	62	$37\frac{1}{2}$	$53\frac{1}{2} \times 46\frac{1}{2}$	$38\frac{1}{2} \times 26$	30	2,890
24*	$3\frac{7}{16}$	18	62	$37\frac{1}{2}$	$53\frac{1}{2} \times 46\frac{1}{2}$	$38\frac{1}{2} \times 26$	30	2,890
28	$3\frac{15}{16}$	$20\frac{5}{8}$	78	48	54×58	$52\frac{1}{2} \times 28$	32	4,600
33	$4\frac{15}{16}$	$22\frac{5}{8}$	84	54	$66\frac{1}{2} \times 61$	$55\frac{1}{2} \times 33\frac{1}{2}$	34	5,550
33*	$4\frac{15}{16}$	$22\frac{5}{8}$	84	54	$66\frac{1}{2} \times 61$	$55\frac{1}{2} \times 33\frac{1}{2}$	34	6,775
38	$5\frac{1}{2}$	25	100	$67\frac{1}{2}$	78×71	69×42	37	8,000
44	6	$32\frac{1}{2}$	112	75	93×78	76×66	60	14,600

* Deep bucket.

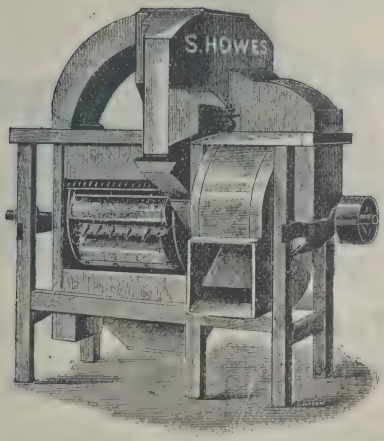
The S. HOWES Co.

(A. C. BARBEAU)

Oldest and Largest Manufacturers of

GRAIN AND SEED CLEANING MACHINERY.

COMPLETE PLANTS FOR FLOUR, MAIZE AND OAT MILLS.



'EUREKA' GRAIN CLEANER.

Catalogue free upon application.

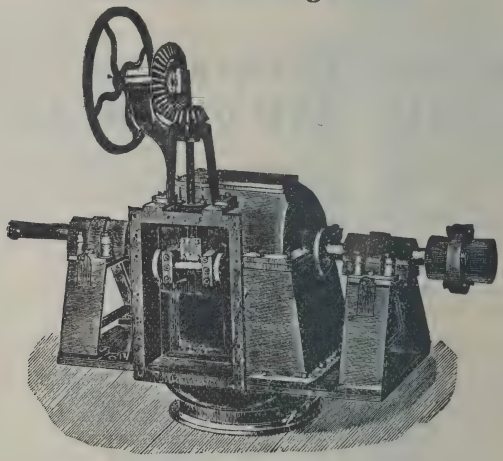
64 MARK LANE, LONDON, E.C. 3.

F. 1210

'LITTLE GIANT' TURBINES.

Water Motors and Pelton Wheels . .

Specially adapted for Estate Electric Lighting, Saw Mills and Mining Work.



'LITTLE GIANT' TURBINE.

HORIZONTAL TYPE.

Catalogue free upon application.

The S. HOWES Co.

(A. C. BARBEAU)

64 MARK LANE, LONDON, ENG.

F. 1211

Horizontal Little Giant Double Turbine

(S. Howes Co., London.)

There may be many situations where a turbine placed upon a horizontal shaft can be used to better advantage than one on a vertical shaft. By using a horizontal turbine and placing it

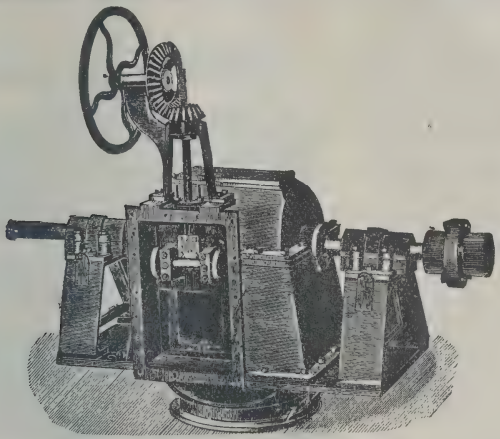


Fig. 23.—Horizontal Little Giant Turbine.

some distance above tail water, nearly the whole effect due to the head can be obtained with an air-tight discharge tube. This mode of setting a turbine (fig. 23) admits of placing a pulley directly on the turbine shaft, and belting to the line shaft.

Dimensions of Horizontal 'Little Giant' Double Turbines

Diameter of Turbine.	Diameter of Shaft.	Inside Diameter of Inlet Flange.	Outside Diameter of Inlet Flange.	Inside Diameter of Outlet Flange.	Outside Diameter of Outlet Flange.	Height to Centre of Shaft.	Length of Shaft (overall).	Height to top of Case.	Size of Bed Plate.
Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.
4	$1\frac{1}{16}$	8	$11\frac{1}{4}$	8	$11\frac{1}{2}$	$8\frac{1}{2}$	50	12	40×14
6	$1\frac{7}{16}$	$7\frac{7}{8}$	12	9	13	$10\frac{3}{4}$	$55\frac{1}{2}$	$15\frac{3}{4}$	$44\times15\frac{1}{2}$
8	$1\frac{15}{16}$	$9\frac{7}{8}$	14	14	18	13	65	$18\frac{1}{2}$	$50\times16\frac{1}{2}$
10	$1\frac{15}{16}$	$12\frac{1}{2}$	$16\frac{1}{2}$	18	23	16	70	23	$52\times22\frac{1}{2}$
12	$2\frac{3}{16}$	14	$18\frac{1}{2}$	22	26	19	75	28	$58\times27\frac{1}{2}$
14	$2\frac{7}{16}$	$17\frac{3}{4}$	$22\frac{1}{4}$	25	30	$21\frac{1}{2}$	90	$30\frac{1}{4}$	71×31
16	$2\frac{11}{16}$	20	$24\frac{1}{2}$	24×31	28×35	$22\frac{3}{4}$	94	31	$73\times33\frac{1}{2}$
18	$2\frac{15}{16}$	22	$27\frac{1}{4}$	28	33	$26\frac{1}{4}$	108	$36\frac{1}{2}$	$83\times37\frac{1}{2}$
21	$3\frac{7}{16}$	$23\frac{3}{4}$	29	26×34	31×39	30	114	$36\frac{3}{4}$	92×48
24	$3\frac{11}{16}$	$30\frac{1}{2}$	$35\frac{7}{8}$	30×38	35×43	$35\frac{5}{8}$	132	45	$110\times52\frac{1}{2}$
28	$4\frac{3}{16}$	$31\frac{7}{8}$	$36\frac{3}{4}$	34×44	40×50	$37\frac{3}{4}$	144	$56\frac{1}{2}$	118×57
33	$4\frac{15}{16}$	34	39	2×32	2×37	$43\frac{1}{2}$	149	69	121×62

Size of Pipe for 'Little Giant' Double Turbine.

Turbine		Pipe		Turbine		Pipe	
4 ins.	dia.	6 ins.	dia.	18 ins.	dia.	24 ins.	dia.
6 ins.	„	9 ins.	„	21 ins.	„	28 ins.	„
8 ins.	„	12 ins.	„	24 ins.	„	32 ins.	„
10 ins.	„	14 ins.	„	28 ins.	„	36 ins.	„
12 ins.	„	16 ins.	„	33 ins.	„	44 ins.	„
14 ins.	„	20 ins.	„	38 ins.	„	48 ins.	„
16 ins.	„	22 ins.	„	44 ins.	„	60 ins.	„

TURGO TURBINES.

The peripheral velocity of these turbines, figs. 24 and 25 (*Gilbert Gilkes & Co. Ltd.*), is about 77 per cent. of that due to the head of water, compared with 63 per cent. for the 'Lunedale' and 'Trent' types. The capacity, that is to say, the quantity of water used by the turbine in relation to its diameter, is very large.

On account of their high speed, the 'Turgo' turbines are specially useful, on low falls, for coupling direct to electric generators. The shaft may revolve with its axis either horizontal or vertical, and in either position one or more of the wheels may be keyed on the same shaft. If an odd number of wheels are used there is a certain amount of end-thrust on the shaft due to the inequality of pressure; this must be provided for by a thrust bearing, which may be of the plain collar type, ball-bearing type, or the oil-pressure forced lubrication type. When an even number of wheels are used, the shaft runs in longitudinal equilibrium, and no thrust bearing is necessary for the horizontal shaft type.

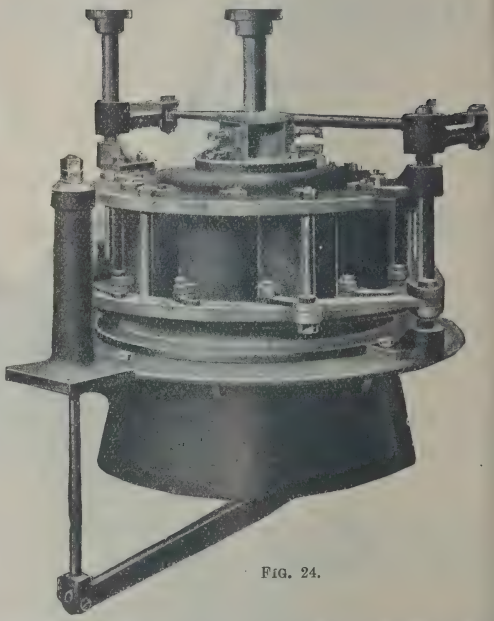


FIG. 24.

In the 'Turgo' turbine, regulation is effected by means of movable guides which are pivoted on steel pins. The recent method of adjusting these vanes does away with the radius rods which are used on many turbines of this type. The guide blades are coupled together by means



FIG. 25.

of connecting links, attached to lugs, so that all can be simultaneously opened or closed by automatic or other means, with the least possible wear.

The guides are so pivoted that they are as nearly as possible balanced in all positions. This fact is of great importance when it is required to control the turbine speed automatically by a governor. All the wearing parts of the guides themselves and their connecting links are bushed with bronze, and the pins are made of hard steel.

The wheel is made of steel buckets bent to mathematically accurate curves, and then cast into an iron boss and outer skirt. In some of the larger sizes the buckets themselves are also of cast iron. The stationary parts of the turbine consist of suction flume and guide-blade chamber, guides with the mechanism for operating them, and guide-blade cover.

The weight of the wheel is carried by a footstep bearing of lignum vitæ, which is fixed in the suction flume. An upright bearing of lignum vitæ cast on to the guide-blade cover serves to keep the shaft in position. No lubrication is needed with this type of bearing.

Medium Fall 'Turgo-Francis' Turbine.

(For Direct Coupling.)

(*Gilbert Gilkes & Co. Ltd.*)

Fig. 26 shows a turbine recently installed at San Juan Mines, in the Argentine. It is designed to develop 750 h.p. when using 7,270 cub. ft. of water per minute under a head of 70 ft. and running at 500 r.p.m.

Owing to the comparatively high speed in relation to the head, two runners are employed each with its own casing but discharging into a central suction flume common to the two

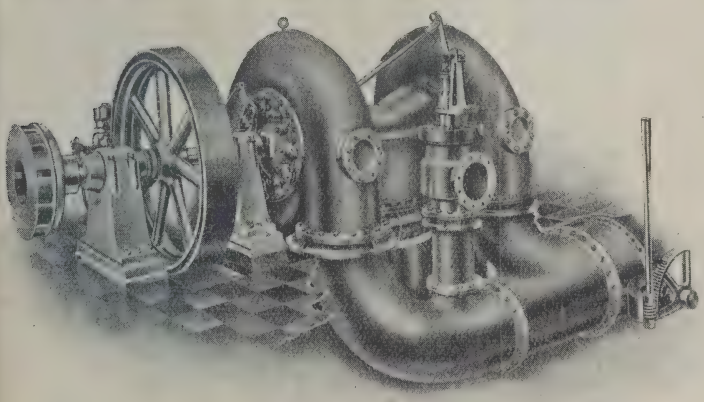


Fig. 26.

wheels, thus putting both wheels into balance and avoiding the necessity of thrust bearings. The casings are of the spiral form, which allows the kinetic energy of the water flowing through the pipes and casing to be utilised with a minimum of loss. The runners and guide blades are of the Francis type, the former being constructed with steel buckets cast into a c.i. boss and skirt.

The guide blades are of cast steel working in phosphor bronze bushes, and have a stem cast on which is accurately turned and carried through glands to the outside of the casing; on the end of each stem is keyed a c.i. lever, the lever being coupled together by means of bronze bushed links. Two of the stems are coupled by means of special levers to the governor. By this means all pins joints, etc., are placed outside the turbine, where they are not affected by the

TURGO TURBINES CAPACITY TABLE (*Abbreviated*).

Fall in Ft.	Fall in Metres.	Size in Ins. .	9	12	15	21	27	33	39	45	48	54
3	0·915	Horse-power	0·64	1·21	2·02	4·27	7·37	11·1	15·6	20·8	23·7	30
		Cub. ft. per min.	145	275	456	966	1,665	2,510	3,540	4,710	5,350	6,78
		Litres per sec.	68·4	130	215	455	785	1,183	1,670	2,222	2,523	3,20
		Revs. per min.	272	204	163	116	90	74	63	54	51	4
5	1·52	Horse-power	1·38	2·63	4·36	9·20	15·8	24·0	33·7	44·7	50·9	64
		Cub. ft. per min.	187	356	590	1,246	2,140	3,250	4,570	6,070	6,900	8,76
		Litres per sec.	88·2	168	278	587	1,010	1,535	2,160	2,865	3,258	4,14
		Revs. per min.	351	263	211	150	117	95	81	70	66	5
7	2·14	Horse-power	2·28	4·35	7·20	15·2	26·2	39·6	55·7	74·2	84·2	10
		Cub. ft. per min.	221	421	697	1,473	2,538	3,840	5,400	7,190	8,160	10,35
		Litres per sec.	104	199	329	695	1,195	1,813	2,550	3,390	3,850	4,88
		Revs. per min.	415	311	249	178	138	113	95	83	78	6
9	2·74	Horse-power	3·33	6·34	10·5	22·2	38·2	58·0	81·4	108	123	15
		Cub. ft. per min.	251	478	791	1,670	2,880	4,360	6,130	8,150	9,250	11,72
		Litres per sec.	118	226	374	788	1,360	2,058	2,896	3,845	4,360	5,53
		Revs. per min.	470	353	282	202	157	128	108	94	88	7
11	3·35	Horse-power	4·50	8·55	14·2	29·9	51·5	78·1	110	146	166	21
		Cub. ft. per min.	277	528	875	1,845	3,180	4,820	6,790	9,010	10,220	12,96
		Litres per sec.	131	249	413	870	1,500	2,275	3,200	4,250	4,820	6,11
		Revs. per min.	520	390	312	223	173	142	120	104	97	8
13	3·96	Horse-power	5·76	11·0	18·2	38·5	66·3	100	141	188	213	27
		Cub. ft. per min.	301	575	950	2,010	3,460	5,240	7,370	9,800	11,120	14,10
		Litres per sec.	142	270	448	948	1,630	2,470	3,475	4,620	5,250	6,65
		Revs. per min.	565	424	339	242	188	154	130	113	106	9
15	4·57	Horse-power	7·16	13·6	22·6	47·8	82·5	124	175	232	264	33
		Cub. ft. per min.	324	616	1,020	2,160	3,730	5,610	7,920	10,500	11,930	15,16
		Litres per sec.	153	291	482	1,018	1,760	2,645	3,735	4,960	5,640	7,15
		Revs. per min.	608	456	364	260	202	165	140	121	114	10
17	5·18	Horse-power	8·65	16·5	27·2	57·5	99·3	150	211	281	319	40
		Cub. ft. per min.	345	657	1,084	2,295	3,960	5,980	8,420	11,200	12,720	16,10
		Litres per sec.	163	310	512	1,080	1,870	2,815	3,975	5,285	6,000	7,60
		Revs. per min.	646	485	388	277	216	176	149	129	121	10
19	5·79	Horse-power	10·2	19·4	32·1	68·1	117	177	250	331	376	47
		Cub. ft. per min.	365	694	1,148	2,430	4,180	6,320	8,910	11,820	13,430	17,02
		Litres per sec.	172	328	541	1,145	1,970	2,980	4,210	5,580	6,340	8,04
		Revs. per min.	684	513	410	293	228	186	157	137	128	11
22	6·71	Horse-power	12·7	24·2	40·1	84·8	146	221	310	413	468	
		Cub. ft. per min.	392	747	1,236	2,610	4,500	6,810	9,560	12,740	14,480	—
		Litres per sec.	185	353	582	1,230	2,125	3,210	4,520	6,015	6,820	
		Revs. per min.	735	552	441	315	245	200	170	147	138	
26	7·93	Horse-power	16·3	31·1	51·5	109	188	284	399	532		
		Cub. ft. per min.	426	812	1,341	2,841	4,900	7,410	10,400	13,880		
		Litres per sec.	201	383	632	1,340	2,310	3,495	4,900	6,550	—	—
		Revs. per min.	800	600	480	343	267	218	184	160		
30	9·14	Horse-power	20·3	38·7	63·8	135	233	352	494			
		Cub ft. per min.	458	873	1,441	3,056	5,200	7,950	11,160			
		Litres per sec.	216	413	680	1,442	2,480	3,750	5,260	—	—	—
		Revs. per min.	859	645	516	368	286	234	198			
34	10·4	Horse-power	24·4	46·5	77·0	163	281	425				
		Cub. ft. per min.	487	928	1,535	3,250	5,600	8,470				
		Litres per sec.	230	438	723	1,535	2,645	3,995	—	—	—	—
		Revs. per min.	914	686	548	392	305	249				
40	12·2	Horse-power	31·2	59·5	98·2	208	358	540				
		Cub. ft. per min.	528	1,008	1,665	3,530	6,070	9,150				
		Litres per sec.	249	475	786	1,665	2,865	4,315	—	—	—	—
		Revs. per min.	991	745	595	425	331	270				
44	13·4	Horse-power	36·0	68·4	113	240	413					
		Cub. ft. per min.	554	1,055	1,748	3,700	6,360					
		Litres per sec.	261	498	824	1,745	3,000	—	—	—	—	—
		Revs. per min.	1,040	780	624	446	347					

As the Turgo Turbine gives its highest efficiency at $\frac{3}{4}$ to $\frac{7}{8}$ of full capacity, it is advisable to sele a turbine with at least 10 per cent. margin over the actual requirements.

(Gilbert Gilkes & Co. Ltd.)

action of the water and can easily be lubricated. Although this method of outside gate mechanism is rather more costly in the first place, its extra cost is soon compensated for by smoothness in running and absence of repairs. It has been known that pins acted upon by the water, assisted sometimes by electrolytic action, have required renewing after a few months' wear, entailing the shutting down of the plant for a considerable time to gain access to the inside of the turbine.

The speed of the set is controlled by a Gilkes oil pressure governor, assisted by a cast steel flywheel. In order to prevent shock on the pipe line due to the rapid shutting off of the water, an automatic by-pass valve is provided. The valve is connected direct to the governor and is so arranged that, directly any water is shut off the turbine, the valve lifts immediately, allowing an equal quantity of water to pass through the valve, but immediately the movement of the gate ceases the valve slowly closes without shock on the pipe line. By the arrangement, the valve anticipates any rise in pressure in the pipe line. The speed of closing is regulated by an oil cataract which can be regulated to close at any desired speed.

This type of turbine is commonly adopted for falls varying from 30 ft. to 300 ft. On the higher falls a single spiral is used, discharging its water either from one side of the wheel or from both sides.

The Banki Turbine.

(Boving & Co., Ltd., London.)

This new type of turbine, invented by M. Banki of Budapest University, is manufactured by *Messrs. Boving & Co.*, who hold the sole licence for the British Empire ; fig. 27 shows the general principle of its action.

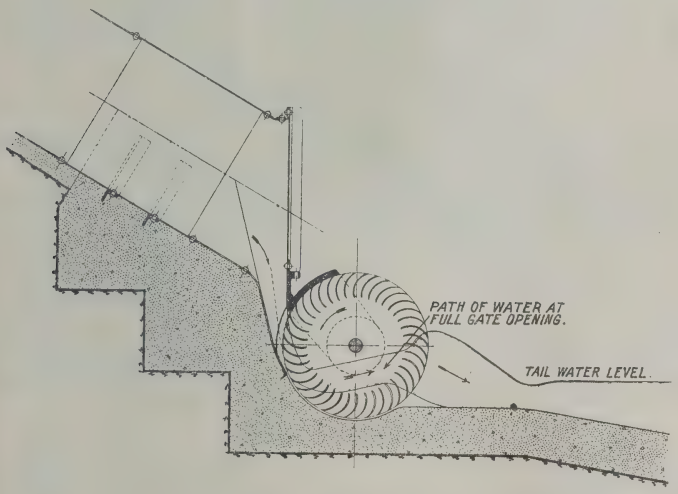


FIG. 27.—Diagrammatic Illustration of Banki Turbine.

The special feature of this turbine (which distinguishes it from ordinary waterwheels) is that the water passes through the blades, across the intervening space inside the wheel, and out through the blades on the opposite side. This enables the blades to be designed to the correct shape and with the correct angles, and accounts for the exceptionally high efficiencies obtained,

which are impossible with ordinary water wheels. As will be seen from fig. 27, the buckets, or vanes, are quite open at the back, are circular in section, and of the simplest possible form. Energy is thus transmitted to the wheel in the first and second pass of the water.

During this passage across the wheel, the water jet is turned through an angle of 154°, and leaves at a low velocity quite free of eddies. It is preferable, but not absolutely necessary, that the wheel is not 'drowned,' as if the tail race banks up to a higher level than the discharge point of the water, the efficiency of the machine is somewhat impaired.

This turbine, which is of the impulse type, differs from the Pelton wheel in that the water jet is rectangular in shape instead of round, and can be increased longitudinally to any desired amount, being limited only by the mechanical strength of the wheel, which for practical purposes occurs when the breadth of the wheel equals twice its diameter.

In the case of a simple impulse Pelton wheel, the wheel diameter must increase proportionally to the jet diameter, and the speed is correspondingly reduced. In the Banki turbine, on the other hand, with a rectangular jet, the wheel diameter and speed can remain the same, whilst the jet is increased longitudinally; it can easily be seen therefore, that with this type of turbine, an exceedingly compact and cheap machine can be produced for any given power, and its speed be higher than in the case of a Pelton wheel working under the same conditions.

Careful tests have proved that the Banki turbine has a very high efficiency, up to 90 per cent. having been obtained under favourable conditions; an efficiency of about 85 per cent., however, is obtained under normal conditions.

Another feature is that the efficiency does not fall appreciably at partial gate openings, and about 82 per cent. can be obtained at one-quarter gate opening; this turbine is therefore particularly adaptable where the quantity of water varies considerably, and a maximum output is required when the water volume is low.

Governing can be effected by means of a single balanced shutter.

The chief advantage claimed for this type of turbine are extremely low first cost, very high efficiency, which is maintained at all gate openings; low installation costs, as no building is required to house the machine; extreme simplicity, and no parts are subject to friction working under water.

Selection of a Turbine Runner.

There are a certain number of commercial constants which are of great help to the engineer who is not a turbine designer, when attempting to select the best type of turbine to adopt for a given development and a chosen capacity per electro-generating unit.

The **Specific Speed** (N_s) is a theoretical characteristic which gives the means of comparing the relation between the conditions of speed, head and power of a runner in one installation with the same conditions relative to a runner in a totally different installation. This comparison is made after the conditions governing the design of both runners have been reduced to a common base, viz. the specific speed.

The specific speed of a runner may be defined as the speed at which any runner will run when it is reduced to such a size that it will develop one horse-power when operating under a head of unity. The numerical value, expressed in the metric system, of the specific speed of any runner may be found by first calculating the speed and power output of the runner under consideration for one metre head, and then mathematically reducing the runner in size until it will deliver one horse-power. The speed of this reduced runner when operating at its point of maximum efficiency is its rated specific speed; this speed is generally expressed in the metric system in order to adhere to an international standard. The formula is

$$N_s = 4{\cdot}45 \text{ r.p.m.} \sqrt{\frac{\text{h.p.}}{h^{\frac{5}{4}}}},$$

in which the horse-power and head are expressed in the foot-pounds system, while N_s remains in the metric system. The equivalent given in the foot-pounds system is called the 'unit speed,' or 'type characteristics.'

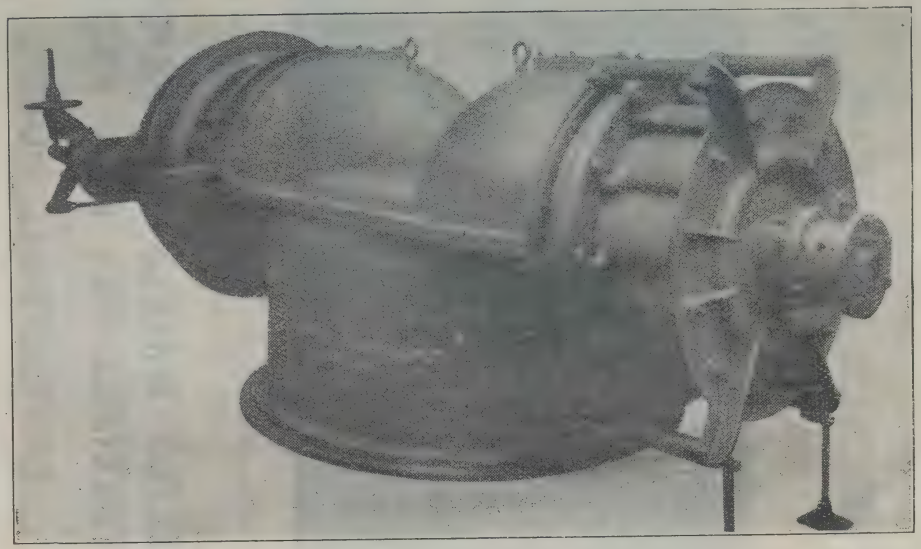
$$N_u = \text{r.p.m.} \sqrt{\frac{\text{h.p.}}{h^{\frac{5}{4}}}}$$

In figuring the specific speed of any reaction turbine having more than one runner, or any impulse wheel having more than one nozzle, the horse-power used in the formula, of course, is the power developed by one runner only, or one nozzle only.

For a given number of revolutions per minute (r.p.m.), and head (h), the h.p. output is

JAMES GORDON & Co. Ltd.

WINDSOR HOUSE, KINGSWAY,
LONDON, W.C. 2.




The above is an illustration of a GORDON DOUBLE RUNNER OPEN TYPE HIGH SPEED TURBINE.

See also announcements facing pages 1176, 1204 and 1205.

WATER POWER.

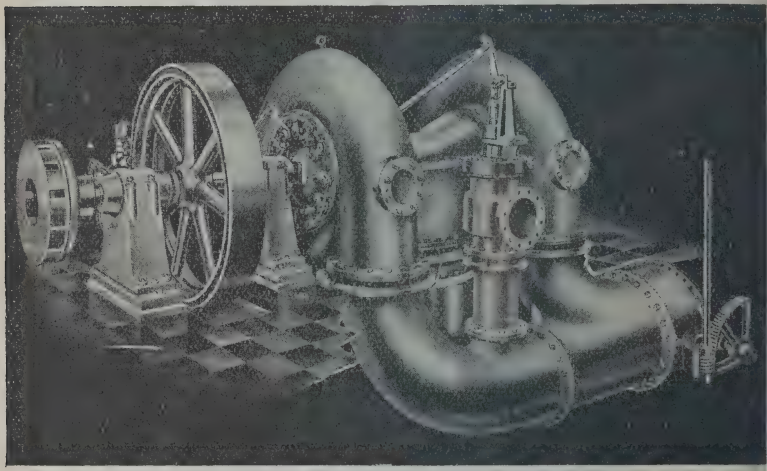TURBINES FOR LOW AND MEDIUM FALLS.



750 B.H.P. TWIN SPIRAL FRANCIS TURBINE SUPPLIED TO THE SAN JUAN MINES (ARGENTINE) LTD.

PELTON WHEELS AND IMPULSE TURBINES FOR HIGH FALLS.

CENTRIFUGAL PUMPS.

GILBERT GILKES & CO., Ltd.,
KENDAL, ENGLAND.

F. 1217

proportional to the square of the specific speed; also for a given head and h.p. the r.p.m. of a turbine is proportional to the specific speed.

In applying the formula for the specific speed to turbines already built it will be found that the data of an impulse wheel will give a low specific speed, between 5 and 25, while the data on the radial inward-flow turbine and on the radial inward axial flow turbine will give a high specific speed between 40 and 450. It will be noticed that there is a gap between the impulse wheel and the reaction turbine, as values of N_s between 25 and 40 do not exist with either type; but by using more than one nozzle on one impulse wheel it is possible to increase the value of N_s, so as to cover the entire field.

The formula for the specific speed contains only the two quantities, 'speed' and 'capacity for a certain head,' but as these quantities determine the areas and angles of the turbine, and thereby again the losses which take place during the passage of the water through the turbine, it will be understood that the specific speed is inherently related to the efficiency which can be expected from the turbine.

EFFICIENCY AT THREE-QUARTER POWER OF IMPULSE WHEELS.

Specific Speed.	Efficiency.
	Per cent.
5	80
9	79
13	78
18	77
22	76

EFFICIENCY OF RADIAL INWARD-FLOW TURBINES.


Type.	Specific Speed.	Maximum Efficiency.	Efficiency at half power.
		Per cent.	Per cent.
Low speed . .	40—100	82 at 0·75 power	76
Medium speed .	130—220	82 at 0·75 ,,	75
High speed . .	260—360	80 at 0·80 ,,	70
Very high speed . .	400—450	73 at 0·90 ,,	53

This table shows that the different types of radial inward turbines are of different qualities. The low-speed turbines are very favourable as to efficiency over a wide range of loads, but they are practically limited to high heads. Medium-speed turbines are also very favourable as to efficiency over a wide range of loads. High-speed turbines are favourable as to efficiency at about 0·8 load, but show a marked decrease at about half load. The extreme high-speed turbines may in some cases be tolerable as to efficiency at about 0·9 load, but at about half load the efficiency is below the limit of rational utilisation of the water. The use of such turbines is only justified for low heads, with a supply of water ample in all seasons, and where the head remains rather constant.

The curve (fig. 28), based on tests of higher grade turbines, shows that if one desires the best efficiency possible a specific speed should be chosen between 110 and 220.

The modern practice is towards the use of large units running at the highest speed compatible with the exigencies of economical and prudent operation, so that, although the choice of a turbine depends on the power and speed desired as well as on the head available, it would seem as if the head was in most cases the deciding factor. The following table, based on this assumption, gives the type of runner desirable in function of the head.

Heads from 500′ up.	Specific speed 5 to 25.	Type of Runner Impulse Wheel.
For heads up to 500′ . .	40 to 100	Low speed, reaction.
,, ,, ,, 300′ . .	100 to 150	
,, ,, ,, 150′ . .	130 to 180	Medium speed.
,, ,, ,, 60′ . .	175 to 250	
,, ,, ,, 30′ . .	260 to 360	High speed.
,, ,, ,, 15′ . .	400 to 450	Very high speed.

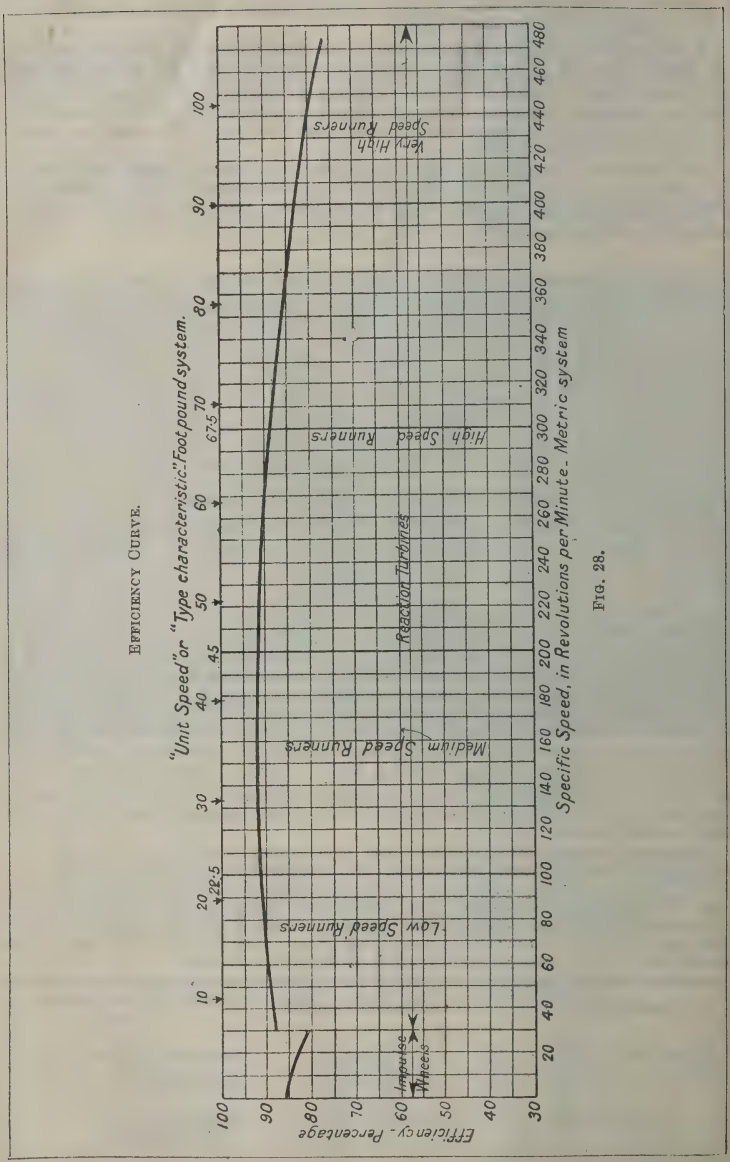

EFFICIENCY CURVE.

FIG. 28.

Relation between the Speed and the Discharge of a Turbine and the Head.

For maximum efficiency the peripheral speed (U_1) of any runner is a definite fraction of the spouting velocity under the given head,

$$U_1 = \phi \sqrt{2gh};$$

the best wheel speed is given by values ranging from

0·43 to 0·47 for impulse wheels,
and 0·53 to 0·57 for reaction turbines.

The discharge through a turbine is like the discharge through any orifice and varies as the square root of the head, and the coefficient of discharge has a definite value for the best value of ϕ; it follows that *the best speed and the discharge of a given turbine vary as the square root of the head* ($h^{\frac{1}{2}}$).

Relation between the Input and the Output of a Turbine and the Head.

The power available in each unit volume of water is proportional to the head, and since the quantity of water discharged varies as the square root of the head, then *the power input varies as the three-halves power of the head* ($h^{\frac{3}{2}}$).

The losses of head in any turbine vary as the squares of the various velocities concerned. Since these velocities vary as the square root of the head, their squares will vary as the first power of the head. The amount of water varies as the square root of the head, and since the power lost is the product of these two items, it follows that the *various hydraulic losses vary as the three-halves power of the head.* As the hydraulic losses vary in just the same proportion as the power input, *the hydraulic efficiency will be independent of the value of the head.*

The power output of a given turbine varies as the three-halves power of the head.

Relation between the Diameters of Stock Runners of the same Type.

When a certain type of runner has been perfected, a whole line of stock runners of that type may then be built with diameters ranging from 10 to 70 inches. All of these runners will be homologous in design, that is to say they will have the same specific speed and each runner will simply be an enlargement or reduction of another. Having the same characteristics, that is the same value of ϕ and c (coefficient of discharge), they will therefore follow certain laws of proportion, which can be summed up as follows for a series of runners of homologous design:

1. The best r.p.m. will be inversely proportional to the diameter.
2. The discharge of any turbine of the series will be proportional to the square of the diameter.
3. The power of any turbine of the series is proportional to the square of the diameter.

These relations are of practical value, because if the speed, discharge and power of any runner is known by accurate test, predictions may then be made regarding the performance of any other runner of the series.

Relation between the Diameter of a Runner and its Discharge.

Since the discharge of any runner is proportional to the square of its diameter and to the square root of the head, we may write

$$q = K_1 D^2 \sqrt{h} = \text{cub. ft. per sec.}$$

The value of K_1 depends upon the velocity of the water entering the runner and the area of the passages in the runner. The velocity depends upon the value of the coefficient of discharge c, which varies from 0·6 to 0·8, and the area depends upon the diameter, the height of the runner, the angle, and also the number of buckets and guides. To summarise, the values of K_1 vary

for the tangential water wheel, from 0·0002 to 0·0005;
for the reaction turbine, from 0·0014 to 0·0360.

Relation between the Diameter of a Runner and its Power.

Since the power of any runner is proportional to the square of the diameter and to the three halves of the head, we may write,

$$\text{h.p.} = K_2 D^2 h^{\frac{3}{2}}$$

for the tangential water wheel, $K_2 = 0{\cdot}000018$ to $0{\cdot}000045$;
for the reaction turbine, $K_2 = 0{\cdot}00012$ to $0{\cdot}0033$.

Determination of the Constants.

The constants given may be computed from theory, but for practical use they should be secured from test data. The engineer who has to select a type of turbine can determine these factors by taking the information given in the catalogues of the turbine manufacturers. The tables contained in these catalogues are supposed to be made from actual tests, and give the discharge, power, and speed of runners of various diameters under various heads. Of course, as each manufacturer usually makes several lines of runners, there will be as many distinct values of the constants as he makes types of runners.

The Draft Tube.

It is generally found advantageous to install the turbine at an elevation above the elevation of the water in the tail race, but in order to do this without any loss of head it is necessary to connect the turbine discharge with the tail race water by means of an air-tight steel or concrete tube whose efflux is below the water level. This tube was formerly known as the Jonval device, but now generally called a 'Draft Tube.'

In considering the effect of the draft tube it should be remembered that a given static head may exist either wholly in the form of pressure or pressure head, or wholly in the form of vacuum or suction or draft head, or part of the head may be in the form of pressure head and the remainder in the form of draft head.

Also, a given head may exist wholly in form of pressure or static head, or wholly in the form of velocity, or part of the head may be in form of pressure and the remainder in the form of velocity, and pressure can be converted into velocity or velocity into pressure.

The effect of a draft tube on a turbine is to remove a part of the back or counter pressure due to the pressure or weight of the atmosphere, by a hanging water-column creating a partial vacuum. This water column being held in equilibrium by the pressure of the atmosphere, its height or head cannot be greater than 34 feet.

The draft head is the vertical distance between the centre of the shaft and the tail water for horizontal wheels, and between an horizontal line passing through the centre of the runner buckets and the elevation of the tail water for vertical turbines.

It is never possible to realise an effective draft head of 34 feet, as it is necessary to subtract the various losses due to the friction of the water in the draft tube, to the change in the speed of the water between the turbine runner and the lower end of the draft tube, and to the momentum or velocity still contained in the water while leaving the draft tube.

The absolute velocity in feet per second with which the water issues from the runner buckets and enters into the draft tube, assuming its diameter to be that of the outside of the runner, should be from $\cdot 30\sqrt{2gh}$ to $\cdot 15\sqrt{2gh}$, and the velocity at the outlet of the draft tube may be $\cdot 1\sqrt{2gh}$, especially if the discharge is in the direction of the flow.

When no draft tube is used, the heads corresponding to the velocities of discharge from the turbine are completely lost, whilst with a properly designed draft tube it is possible to recover about 75 per cent. of the gain in head, due to the difference between the velocity head at the turbine and the velocity head at the outlet of the draft tube.

The following table gives the greatest draft-head permissible in practice, under average conditions, and for different diameters of draft tube.

Draft Head Permissible in Practice.

Diameter in feet.	Draft Head in feet.	Diameter in feet.	Draft Head in feet.
0·5	31·0	6	17·0
1·0	29·5	7	15·4
1·5	28·1	8	14·2
2·0	26·7	9	13·2
2·5	25·3	10	12·3
3·0	23·9	11	11·4
3·5	22·6	12	10·6
4·0	21·4	13	9·8
4·5	20·2	14	9·0
5·0	19·0		

The draft head given in this table is equal to the difference of elevation between the turbine and the tail water plus the velocity head corresponding to the speed with which the water leaves the draft tube.

The draft tube should be calculated to resist the atmospheric pressure, which tends to make it collapse.

REGULATION OF TURBINES.

In many hydraulic plants, and notably in the hydro-electric plants, it is necessary that the rotating speed of the turbines should be constant, regardless of the power developed. This can be done either by a hand or by an automatic regulation of the water openings, in proportion to the power utilised. The automatic regulation is adopted in preference to the hand regulation in all important plants.

The water wheel governors are controlled by a centrifugal ball mechanism just as in the case of the steam engines, with the difference that, as the force required to move the turbine gates is large, it cannot be supplied by the centrifugal ball governors, but must be borrowed either from the hydraulic motor itself or from an exterior source.

The gates are therefore moved by a 'relay,' which is a device for transmitting energy from a source of energy independent—as to quantity—of the centrifugal governor balls but controlled by them in its application. If the relay is of 'mechanical type' the power required to operate it and the gates is transmitted, when needed, from the wheel by means of shafts, gears, friction-clutches, belts and pulleys, or other mechanical devices. In mechanical governors the flyballs may actuate pawls, friction gears, or other mechanical devices which will bring the relay into action.

If the relay is of the hydraulic type, it usually consists o a piston connected by some mechanical device to the gate rigging and moved by means of the hydraulic pressure of water taken from the penstock, or other source, or by oil supplied under high pressure from a reservoir. The pressure of the oil in the reservoir is maintained by compressed air supplied by power taken from the wheel itself. The oil thus used in moving the piston is exhausted into a receiver, from which it is pumped back into the supply reservoir. The hydraulic relay is commonly controlled by the ball governor through the medium of a small valve, which by its motion either admits the actuating water (or oil) directly to the cylinder or to a secondary piston controlling a larger admission valve.

Electrical methods of actuating the relays controlled by means of governor balls have been used to some extent but are not nearly so common as mechanical or hydraulic devices.

The best makes of hydraulic governors for medium and high falls will regulate the speed within the following limits, the percentage of variation being that of the mean speed :—

	Speed Variation. Per Cent.
For sudden variation of load of 25 per cent.	4
" " " 50 per cent.	6
From no load to full load	10

Regulation due to Flywheel Effect.*

Flywheel effect is the capacity of a rotating mass to store or supply energy. This effect is expressed at 1 ft. radius and is equal to the moment of inertia of a mass, that is the weight by the square of the radius of gyration, or pounds feet squared. Modern alternating current generator rotors are built in the shape of a common flywheel and usually have sufficient flywheel effect to obtain satisfactory regulation. The flywheel effect of the rotating parts of a turbine varies with different types and usually is not considered, but it should be carefully considered for large low-head multiplex and large diameter impulse turbines. In smaller turbines it may be regarded simply as introducing a factor of safety.

The regulation due to any given flywheel effect can be computed by means of the formula,

$$d = \frac{800{,}000 \times \text{h.p.} \times T}{\text{r.p.m.} \times \text{r.p.m.} \times W r^2}$$

where,

d = percentage of variation in speed allowed ;
T = time of closure of governor in secs. ;
W = weight of rotating masses in lbs. ;
r = radius of gyration in ft. ;
W_r^2 = moment of inertia of the rotating masses in lbs. ft. squared.

* Adapted from *Speed Regulation of Hydro-electric Plants*, by Wm. F. Uhl.

Actually the relative change of speed (d) on account of the friction load of the turbine and generator is smaller than that given by the above formula. The effect of this friction load will vary according to the various types of turbines used, but the original formula may be modified safely as follows:—

$$d_1 = 0{\cdot}8d.$$

Another cause which should be taken into consideration, providing the turbine is properly designed so as to give its maximum efficiency at normal or synchronous speed, is that the efficiency is reduced with either increasing or decreasing speed, which has the tendency to reduce further the relative change of speed (d).

The amount reduced varies with the type of runner, being greatest for a high-speed, high-power runner, and least for a low-speed, low-power runner, since if correctly designed, and therefore following the laws of hydraulics, the change in efficiency will be greater for a high-speed than for a low-speed runner for the same per cent. of variation in speed. The formula modifying d_1 for this cause is as follows:—

$$d \text{ eff.} = \frac{d_1}{1+\frac{d_1}{\frac{n_2}{n_0}-1}}.$$

The value of $\frac{n_2}{n_0}$ varies with the specific speed, and we have

Specific speed	60	90	130	180	220 to 280	310 to 370	400 to 460
Value of $\frac{n_2}{n_0}$	1·8	1·7	1·6	1·5	1·4	1·3	1·2

For impulse turbines 1·8 can be used as the value of $\frac{n_2}{n_0}$. To find the speed variation for any other than a full load change, the following must be considered: If T is the regulating time for the total governor stroke or 100 per cent. load of the turbine, it would appear that for 50 per cent. load or stroke, the regulating time would be $\frac{T}{2}$, and for 25 per cent., $\frac{T}{4}$, etc.

The regulating time for the total governor stroke or the governor closing time should be adopted only after a thorough study. Sensitive governing means severe wear and tear on the gates as well as increased shocks in the penstocks, and should be avoided where possible. Many lighting plants are successfully operated where it requires 20 seconds to close the gates, and while 20 seconds may be extreme, a closing time of 5 seconds is quite satisfactory for all but the most important or special plants.

Turbine Governors.

(*Hay, Maryon & Co., Ltd.*, 14 *Bride Lane, London, E.C.* 4.)

The sole efficient survivor of all the various types of governors made in the past is practically represented now by the latest forms of oil-pressure types. Oil-pressure governors as now designed are capable of giving extremely close speed regulation, the degree of regulation obtainable depending in a large measure on the hydraulic conditions under which the plant has to operate, as, although governors can be constructed which will entirely close or open the turbine gates in even as short a time as 1 second, it has been found in practice that from 2 to 3 seconds is about the maximum rate of operation which can be adopted, and even this rate is often not possible on turbines supplied through long pipe lines, owing to the dangerous water-hammer effects which would be set up. In installations of this description, relief valves can be used and quick rate of action of the governor maintained, and, on high falls, Pelton wheels provided with combined spear and deflector regulation similar to that described on pp. 1203-4 can be successfully operated without any danger of water-hammer effects. In practically every case it is necessary that a certain amount of flywheel effect should be provided in the plant, to assist in speed regulation and to give up or absorb power as required during the time taken by the governor to operate. Owing to the quick rate of governor action generally adopted, it is of extreme importance that the turbine guide blades and operating gear should be of heavy and solid construction, as otherwise considerable lost motion and excessive wear will soon be set up in the gate operating gear when worked in connection with a quick-acting governor. The light construction of guide vanes and operating gear in turbines, generally known as the American type, is not suitable for obtaining efficient results and long life of working parts when used in connection with quick-acting governors.

One of the latest and most efficient forms of oil-pressure governors is shown by fig. 29, and the very highest possible degree of speed regulation can be obtained with governors of this type. The governor consists of a cast-iron box type bed, containing an oil reservoir and drum type oil-pump. On the right-hand end of the bed is mounted a cast-iron receiver which, under working conditions, is about three-quarter parts filled with oil and the remainder with compressed air under a pressure of from 150 to 200 lbs. per sq. in. Connected to the receiver is the main operating cylinder, the piston rod of which is connected to a lever on the main shaft,

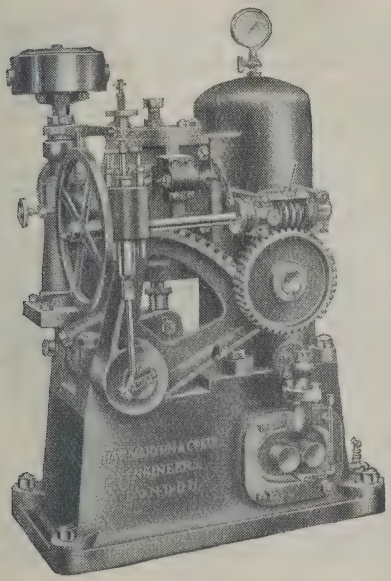


FIG. 29.

this shaft being connected at one end to the turbine gate operating gear, and has a movement of about 60° for the full range of gate movement. The shaft also carries on one end a spur quadrant connected to the hand operating gear, the design and arrangement of which is shown in the figure; this gearing can be connected or disconnected, as required, by the small lever shown over the worm. A connection is also provided on the worm shaft to a valve on the operating cylinder, which automatically relieves the pressure on the piston when the hand gear is connected. The governor head, which is mounted on pedestal on one end of the bedplate, is of the combined spring and deadweight type, supported in ball bearings and driven by means of totally enclosed bevel gears and a pulley on a horizontal spindle, by belt from the turbine shaft.

The operating gear for the governor consists of a floating lever, shown on the left-hand side of the figure, having at one end a pair of damping springs (not visible in the figure); this lever is connected first to the governor head, second to the distributing valve, and third to the compensating gear, which in turn is connected to the main shaft of the governor. The action of the governor when in operation, and assuming the speed of the turbine to have risen, is as follows:—

The governor head would rise, carrying with it the sleeve with the end of the floating lever together with the distributing valve, the compensating gear on the end of the rod acting as a fixed pivot. The rising of the distributing valve would admit oil under pressure to one end of

the cylinder, at the same time opening the other end of the cylinder to exhaust, the turbine gates would then commence to move in a closing direction, any movement of the turbine gates being transmitted back to the compensating gear, which would rise carrying with it the opposite end of the floating lever and replacing the distributing valve in its normal position. After the movement had taken place the dashpot on the compensating gear would gradually return its end of the floating lever to the normal position ; the time required for this can be adjusted to correspond with the return of the governor head to the position for normal speed, this arrangement giving a constant speed for the turbine at any stage of load between no load and full load.

An adjustment is provided on the compensating gear so that, if required, a fixed variation in steady speed between no load and full load can be obtained for automatically dividing the load between any two or more generators when operating in parallel.

The distributing valve of the governor is also capable of adjustment, so that the closing time can be varied from a maximum of about 2 seconds to any slower rate, to suit the hydraulic conditions under which the plant is operating.

Special attachments can be provided on the governor, first for automatically shutting down the turbine in the event of the driving belt to the governor head breaking or coming off, and, secondly, to prevent the governor opening the turbine gates beyond a predetermined limit. The latter arrangement is a great advantage in connection with turbine plants working in parallel with steam or other sources of power where the water supply is limited—as the governor can be set for a gate opening to suit the water supply available at the time, and with the turbine governor speed adjusted slightly ahead of the other prime mover, the governor will then keep the turbine gates open to the limit decided on, ensuring that full advantage is derived from the water available.

The governor described and illustrated is constructed in ten standard sizes, with capacities ranging from 360 ft.-lbs. to 36,000 ft.-lbs., the former being suitable for small turbine installations, and the latter for the largest size of turbines constructed.

The Gilkes Fluid Pressure Governor.

(Gilbert Gilkes & Co. Ltd.)

This oil pressure governor (fig. 30) is the type constructed by Messrs. Gilkes for use on small and medium-sized turbines, but it may be used for high and low fall turbines of the reaction type, or for Pelton wheels.

The base of the governor forms a reservoir, from which the oil is drawn and pumped up to the necessary pressure by means of a rotary pump ; the oil is then passed under pressure to the distributing valve and from there is directed to one or the other of the governor cylinders, as the speed conditions may dictate, thus giving motion to pistons fitting in the cylinders and in turn to the rocking shaft, from which motion is taken to actuate the turbine gate mechanism. The position of the regulating valve is dictated by a pendulum of the drum type driven by machine-cut gears, the power being taken both for the pendulum and the pump from the turbine shaft by a silent chain drive. In order to overcome over-riding and consequent hunting, the governor levers are mounted upon a floating fulcrum, taking its motion from the rocking shaft.

The arrangement of valves in this governor is such that when the speed is steady and the governor is not called upon to move the gates, the oil is automatically by-passed, thus very considerably reducing the power to drive the governor and prolonging its life. It also keeps the oil cooler, as the constant discharge against pressure through a relief valve would soon heat the oil.

A hand gear control is provided, consisting of a worm and wheel, as shown in the figure. The throwing into gear of the worm at the same time automatically puts the governor out of control. When desired to shut down suddenly this can be quickly done by means of the small hand wheel seen at the fulcrum end of the governor levers.

Speed Variation.—The permanent variation is usually 4 to 5 per cent., although it may be made higher or lower if desired. By means of an additional gear, the permanent speed may be kept the same at all loads. The momentary variation depends upon two factors : (1) the speed

at which the governor closes the gate, and (2) the inertia of the moving parts of the set. Although governors are designed to move the gate from open to shut in from two to three seconds, it is often impossible, for other reasons, to shut the water off so rapidly, and in such cases heavy

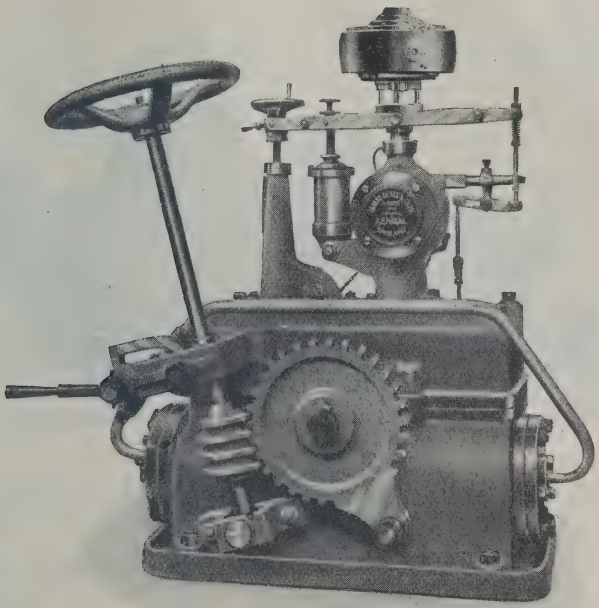


FIG. 30.

flywheels must be used. Under favourable conditions it is practicable to obtain with the full load thrown off a momentary increase of speed of 8 per cent., but it is more usual to specify that the speed variation should not exceed 15 per cent.

TURGO IMPULSE TURBINE WITH SHAFT GOVERNOR.

(Gilbert Gilkes & Co., Ltd., Sole Makers and Patentees.)

Fig. 31 is a general, and fig. 32 a diagrammatic, view of this arrangement, showing the movements of this regulator. In fig. 32 the pendulum is shown mounted on a separate shaft, but as seen in fig. 31 it is actually mounted on the turbine shaft, and is connected directly by means of levers to a shaft on which is mounted the deflector. As the speed rises or falls the deflector is forced into or out of the jet. The spear rod is hollow, and has a hole running through the full length of it, the hole at the cylinder end making a seating for poppet valve 16, so that when the valve is pressed against the hole communication through the rod is closed. Pressure water is brought through valve 32 to the back end of the cylinder. When valve 16 is pressed against the seating the pressure on both sides of the piston 14 is equal, and pressure on the spear-head

is constantly endeavouring to pull the spear into the nozzle. The deflector is connected by means of rods and levers to bell-crank lever 20, one end of which presses against the poppet valve 16. If the load be thrown off, the deflector is forced into the jet and the poppet valve pushed hard up against the spear rod. Pressure accumulates behind the piston, and the spear is slowly forced into the nozzle, reducing the area of jet. As the area of jet is reduced, the

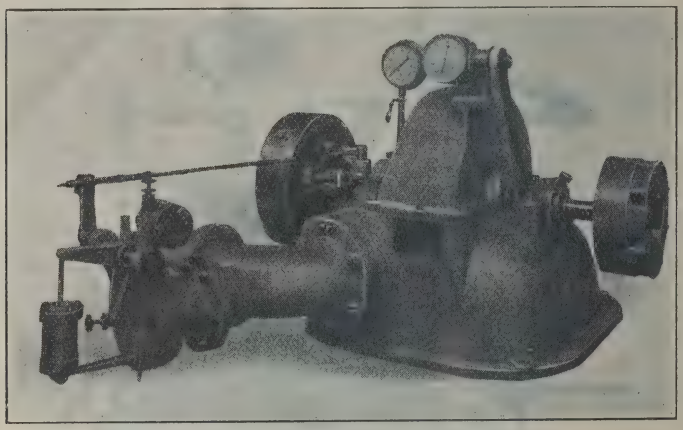


FIG. 31.

deflector is lifted out of the jet, until finally deflector and spear come to rest in a position where the deflector is just clearing the jet. If the load is thrown on, the deflector is raised, the bell-crank lever 20 is drawn away from the poppet valve, and the pressure in the cylinder forces

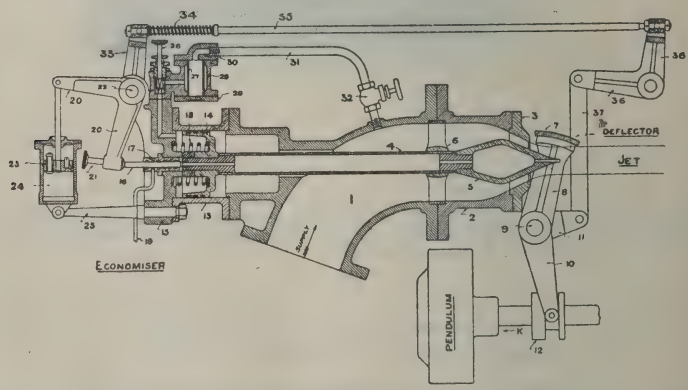


FIG. 32.

the valve outwards away from its seating. The pressure behind the cylinder is now relieved, and a superior pressure in front of the piston forces the spear back, thus forming a larger jet.

In order to prevent undue rise of pressure in the pipe line, the inward movement of the spear must be slow; but in order to prevent rise in speed, the cutting off of the jet must be extremely rapid; this is allowed for by the connection of rod 35 to lever 33 being through the spring 34; the rapid movement of the deflector compresses the spring 34, which keeps the poppet valve

ST. JÉRÔME HYDRO-ELECTRIC PLANT, NORTH RIVER, CANADA.

(Designed by Messrs. Surveyer & Frigon.)

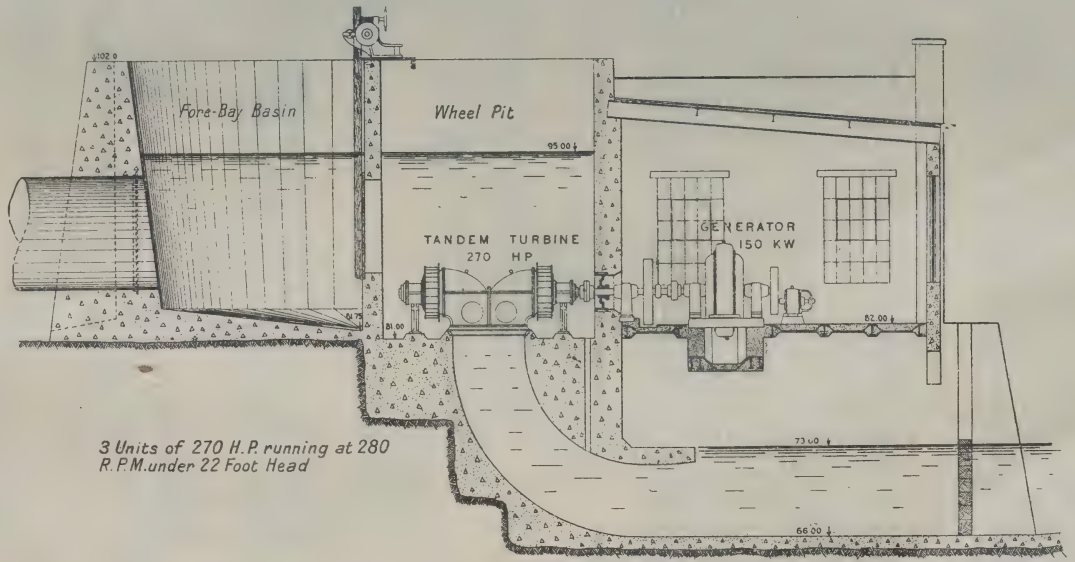


FIG. 33.—Three Units of 270 h.p. running at 280 r.p.m. under 22-foot head.

up against the end of the spear rod. Pressure accumulating behind the piston forces the piston, and with it the spear, inwards, the rate of closing being regulated by means of a by-pass valve in piston 23 moving in the oil dashpot 24. A non-return valve is arranged in 23, allowing the oil to pass rapidly from the upper to the lower side of the piston, and thus permitting lever 20, and with it the poppet valve, to be rapidly moved. The spear rod, following the movement of the poppet valve, is rapidly drawn back. A regulating valve, 26, is provided; but this is not intended to regulate the movement of the spear, but only to ensure that there is not more water passing into the cylinder than can be carried through the hole in the spear.

TYPICAL HYDRO-ELECTRIC PLANTS.

St. Jérôme Hydro-Electric Municipal Plant on the North River, Canada.

This plant (fig. 33) was constructed in 1913 by the town of St. Jérôme to supply electricity to its population of 3,500; it is built on the North River, which carries the waters from the Laurentian Mountains to the Ottawa River and thence to the St. Lawrence River.

The chief features of this plant are a concrete weir, a needle dam with three openings, and a reinforced concrete pipe 8½ ft. in diameter bringing down the water to a power house 1,000 ft. distant from the head gate. The power house consists of a semi-circular forebay of reinforced concrete communicating, by means of sluices, to the three turbine pits. These turbines are of the twin open flume type, designed to have each a maximum output of 270 h.p. at 277 r.p.m. and operating under 20-foot head. The setting of the wheels is horizontal, and they are provided each with a concrete draft tube discharging under the power house proper. The building contains the generators, which are directly connected to the turbines through a cast iron wall plate provided with a stuffing box. Two of the generating units are now installed, and their electrical equipment consists of two 150 kw., 3-phase, 60-cycle, 6,600-volt alternators. The exciters are two 10 kw. units, 120 volts, 1,150 r.p.m. belt connected to the end of the generator shaft. The power is transmitted at 6,600 volts over a transmission line 4 miles long, to a sub-station in St. Jérôme and distributed through the town on a 2,200-volt primary circuit and a 110-volt secondary circuit.

The Cedars Rapids Manufacturing and Power Co.'s Development on the St. Lawrence River, Canada.

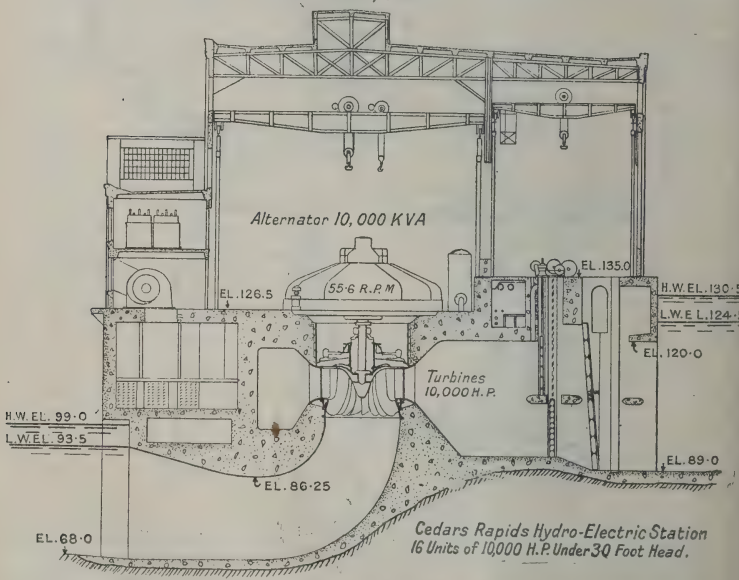


Fig. 34.—160,000 h.p. Plant on the St. Lawrence River (*Cedars Rapids Manufacturing and Power Co.*).

ARMSTRONG-WHITWORTH

SHIPS
MARINE ENGINES
LOCOMOTIVES
MACHINE TOOLS
FORGINGS CASTINGS
DROP STAMPINGS
HIGH SPEED STEELS
SMALL TOOLS GAUGES
PNEUMATIC TOOLS
NON-FERROUS PRODUCTS
OIL & GAS ENGINES
HYDRAULIC MACHINERY
HYDRO-ELECTRIC PLANT
GENERAL ENGINEERING
CIVIL ENGINEERING

WATER TURBINES
PIPE LINES
ELECTRICAL PLANT

HIGH TENSION—
LONG DISTANCE
TRANSMISSION LINES

COMPLETE
HYDRO-ELECTRIC
PLANTS
DESIGNED & BUILT

ELECTRO-CHEMICAL
AND
ELECTRO-METALLURGICAL
PROJECTS INVESTIGATED

SIR W.G. ARMSTRONG WHITWORTH & Co. LTD
Hydro-Electric Dept.
8, Gt George Street, LONDON, S.W.1.
Telephone. Victoria 4010
Telegrams. Zigzag. Parl. London.

13

F. 1228

WATER POWER

has greatly increased in value during recent years owing to high fuel costs. Only turbines of first-class design and efficiency should be used ; others mean ∴ waste of power and money. ∴

OUR EFFICIENCY GUARANTEES

are the highest obtainable and are all based on the results of actual tests.

WATER POWERS SURVEYED AND REPORTED ON.

HAY, MARYON & CO. LTD.

Water Power Engineers and Contractors,

14 BRIDE LANE, LONDON, E.C. 4.

Works: Hay, Maryon Works, (Stroud) Ltd, Stroud, Glos.

Catalogue sent on application.

See also Advertisements facing pages 1125, 1198 *and* 1199, *and Editorial pages* 1222–24.

The plant (fig. 34) of the Cedars Rapids Manufacturing and Power Co. is situated on the St. Lawrence River about 27 miles from the city of Montreal. The low water flow of the river at that point is about 170,000 cub. ft. per second, and the company has been authorised by the Government to utilise 56,000 cub. ft. per second.

The Cedars Rapids have a fall of 32 ft. in two miles, and the river is approximately 3,000 ft. wide at that point. The development consists of a head-race canal about two miles in length, formed by an outer embankment built up in the river, parallel to the flow, and an inner bank placed back from the original shore line. This head-race is from 700 to 1,200 ft. wide, and is dammed at the lower end by the power house substructure.

The present length of the power house is 667 ft., extending from the outer bank towards the shore and connected to the present shore line by a rock-filled crib dam. This crib is 48 ft. high, and so placed that the work of extending the power house for the remaining 513 ft. to the new shore line for the final development may be carried on without disturbing the crib. When the power house is ready for the final development the crib and fill may be removed by dredging.

The turbines for this development have the largest dimensions of any in the world to date (although not the highest capacity output). In the design are seen all the features of recent advances, such as (1) volute casing and draft tube moulded in the concrete substructure, (2) cast iron speed ring with the vanes serving as columns to support the concrete floor, generator and thrust-bearing loads from above, (3) lignum vitæ guide bearing, (4) Kingsbury thrust bearing located above the generator, and (5) pneumatic brakes acting on the generator rotor to bring the revolving parts quickly to a standstill.

The present construction provides for ten units of 10,000 h.p. each, but 160,000 h.p. will ultimately be developed.

Each generating unit consists of a vertical American turbine guaranteed to have a maximum efficiency of at least 87 per cent. when operating under an effective head of 30 ft. running at a speed of 55·6 and developing between 10,000 h.p., and the maximum figure corresponding to wide open gate, provided, however, that the maximum power does not exceed 10,800 h.p. by more than 5 per cent. To each of the main turbines is connected a 10,000 kv.-a. 3-phase 6,600-volt 60-cycle generator of revolving field type.

In the transformer house on shore are the high-tension switches and feeders between transformers and transmission lines. Provision has been made for four transformer banks, two to be of 24,000 kv.-a. capacity and made up of 8,000 kv.-a. single-phase 6,600/110,000-volt units; the other two banks will be of 15,000 kv.-a. capacity, each bank having three 5,000 kv.-a. single-phase 6,600/66,000-volt units. The 110,000-volt banks feed transmission lines running to Messina, N.Y., where 60,000 h.p. will be taken by the Aluminium Co. of America. The remainder of the power is transmitted at 66,000 to Montreal, from the 15,000 kv.-a. bank.

The Grand'Mère Municipal Hydro-Electric Plant on the Shawenegan River, Canada.

This plant (fig. 35) was built in 1913 by the town of Grand'Mère to supply electricity to its 5,000 inhabitants. It is located at eight miles from Grand'Mère, on the Shawenegan River.

The fall utilised is a hundred feet high, and the water is carried to the power house through a four-foot wood stave penstock, 1,100 ft. long.

The equipment consists of two 500 h.p. spiral casing water turbines, running at 600 r.p.m and each directly connected to an alternating current generator and a direct current exciter. The generators are of 300 kw. capacity, producing electricity at 60 cycles and 2,200 volts. The current is stepped up, by transformers in the power house, to 10,000 volts, transmitted to a substation in Grand'Mère and distributed through the town on 2,200 volts primary circuit and a 110-volt secondary. The power-house floor is situated very high above the low water elevation of the Shawenegan River on account of the extreme high water level, due to the backing up of the St. Maurice River in the spring.

Jordan River Development of the Vancouver Island Power Company, Ltd.

The Jordan River plant (fig. 36) of the Vancouver Island Power Company, Limited, is situated at the mouth of Jordan River, which flows into the Straits of San Juan de Fuca about 40 miles west of the City of Victoria, Vancouver Island, Canada.

This development is of particular interest on account of the high head utilised, the static head at the power house being 1,145 ft. The power house is situated on the beach near the mouth of the Jordan River, with the main floor 7 ft. 6 ins. above high tide level. Water is conveyed to the water wheels in the power house from a forebay reservoir through steel pipe lines 9,290 ft. long. The forebay, which is a small equalising reservoir formed by two earth fill dams, is about 1,152 ft. above sea level, giving a static head of 1,145 ft. at the nozzles in the power house.

The power house is composed of two buildings. The first one, completed in 1911, contains two generating units of 4,000 kw. Each of these units consists of a 4,000 kw., 2,200-volt,

MUNICIPAL HYDRO-ELECTRIC PLANT AT GRAND'MÈRE, SHAWENEGAN RIVER, CANADA.

(Designed by Messrs. Surveyer & Frigon.)

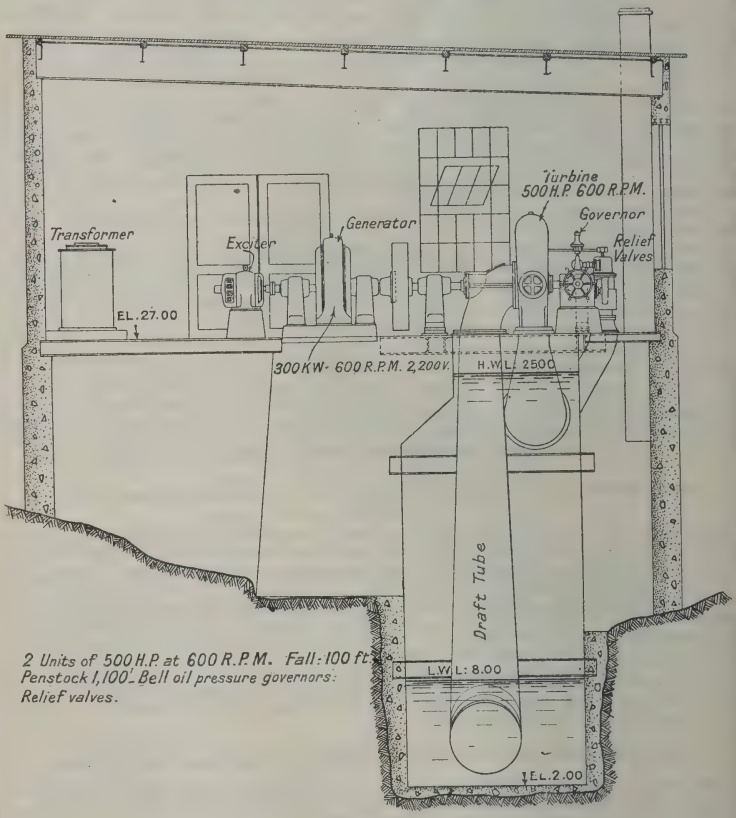


FIG. 35.

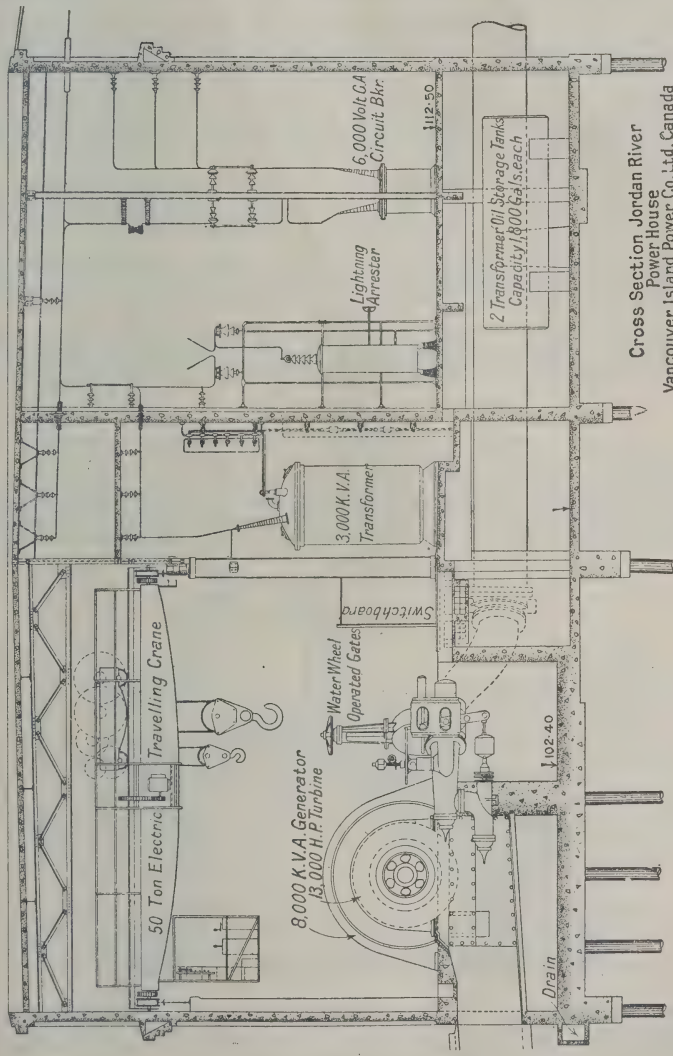

Cross Section Jordan River
Power House
Vancouver Island Power Co. Ltd. Canada
6,000 Volt O.A. Circuit Bkr.
112-50
2 Transformer Oil Storage Tanks Capacity 1,900 Gals. each
Lightning Arrester
3,000 K.V.A. Transformer
Switchboard
Water Wheel Operated Gates
50 Ton Electric Travelling Crane
8,000 K.V.A. Generator
13,000 H.P. Turbine
102-40
Drain

FIG. 36.

3-phase, 60-cycle Allis-Chalmers-Bullcok generator, driven at 400 r.p.m. by a single Doble tangential water wheel of 6,000 h.p. which is mounted on one end of the shaft and overhangs the bearing at the end of the unit.

Water is conveyed from the terminal end of the pressure pipe through a cast-steel flanged taper pipe, which is bolted to the flanged end of the pipe. This taper pipe decreases in diameter from 30 ins. to 24 ins. at the outlet end, where it is bolted to a hand-operated, 24-in., single disc, steel body, rising stem gate valve, which is provided with a by-pass. The steel nozzle casting is bolted to this valve. The jet of water is projected on to the wheel through a Doble needle regulating nozzle, and the governing is done by a type 'Q' Lombard governor, operating the needle gear by means of an oil pressure cylinder. Surges or rams in the pipe line, caused by the quick closing of the main nozzle, are prevented by the Doble relief nozzle. This nozzle is similar to the main nozzle, but is located below it, and the stream does not hit the buckets on the wheel but discharges freely down the tailrace.

The second power house was completed in 1914; it contains a third generating unit composed of an 8,000 kw., 2,200-volt, 60-cycle, 3-phase Canadian General Electric generator, driven at 400 r.p.m. by two Doble tangential water wheels, one mounted on each end of the shaft and overhanging the bearings. The water wheels are rated at 13,000 h.p.

A separate exciter unit is provided for each main generator unit. No. 1 and No. 2 exciters are 100 kw., 125-volt, direct current generators on the same shaft with a 100-h.p. water wheel and a 150-h.p., 2,200-volt induction motor. No. 3 exciter is a 200 kw. generator direct connected to a 200-h.p. water wheel and a 300-h.p., 2,200-volt induction motor.


The transformer equipment consists of two banks of 1,450 kw. transformers (with one spare) and one bank of 3,000 kw. transformers; all of the oil-insulated, water-cooled type. They step the voltage up from 2,200 to 60,000 volts, at which pressure the current is transmitted to Victoria. The transformers are set in compartments along the back wall of the generator room.

Sluice Gates, Strainer Racks, etc.

(*Contributed by Messrs. James Gordon & Co., Windsor House, Kingsway, London, W.C.* 2.)

The type of sluice-gate shown by fig. 37 is usually adopted for medium or large size head races, and is made with framing and gearing suitable for single gates up to 8 to 10 ft. wide, and for wider races, frames designed for two or more gates, according to the width of the water channel.

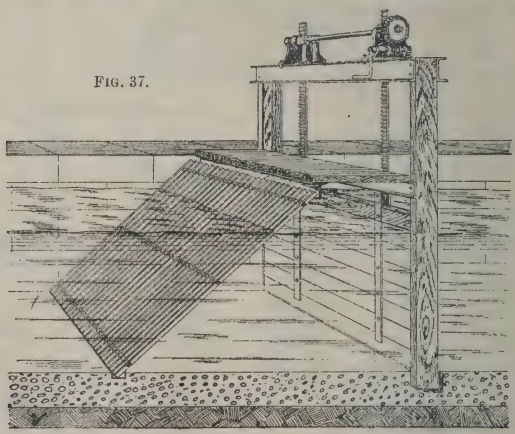FIG. 37.



The frames for these gates are constructed of rolled steel joists or channels, making a very simple, cheap, and extremely strong arrangement. For smaller channels the same design and arrangement can be adopted with somewhat lighter construction, or cast-iron frames fitted with cast-iron gates and suitable lifting screws or racks can be used. Strainer racks are usually constructed of flat wrought-iron bars threaded on to rods with pipe distance-pieces placed between each bar to insure proper spacing, the wider racks being made in small sections to facilitate handling.

The water channel between strainer-rack and turbine-pit should be completely covered in, in order to prevent any possibility of foreign matter getting into the channel on the turbine side of the strainer racks.

In streams which are liable to heavy floods, and contain at times a lot of drift wood and foreign matter, it is usually advisable to put down two strainer racks, the first one protecting the intake to the head race, and being made of heavy bars with wide spaces between so as to stop all the larger material, and a fine one to protect the turbines themselves at the lower end of the race close to turbine pits or pipe intakes.

In designing head and tail races for water-power installation, special attention should be paid to their cross-sectional area, which should be ample for the quantity of water to be carried, in order to guard against loss of head when the water is running at full velocity.

This is extremely important on plants for low falls, where only a few inches of head will make quite a considerable difference to the horse-power available.

The velocity in channels of this kind for low-fall turbine work should not exceed 2 ft. per second, and if possible should be even less than this.

For higher falls, where a slight amount of loss is not very material, velocities as high as 3 ft. or 4 ft. per second can be adopted, but care should then be taken that the banks of the channels are properly protected to prevent erosion.

NIAGARA FALLS INSTALLATION.

The cost of power supplied from the Niagara Falls is 3*l.* 6*s.* per horse-power per annum. The capital outlay on the plant was 45*l.* per horse-power.

Pipe Lines.

(Contributed by Messrs. James Gordon & Co., Windsor House, Kingsway, London, W.C. 2.)

The following table gives thicknesses for different sizes of pipes under varying pressures. The figures are based on a factor of safety of 5, which is a fair average limit to work to for all ordinary work, but in the lower end of high-pressure pipe lines the factor of safety may run up to 8, or even sometimes 9. The working pressures are given in pounds per sq. in., and are for double-riveted or welded steel pipes ; the strength of single-riveted pipes is about 30 per cent. less.


Dia. Pipes in Ins.	8	10	12	14	16	18	20	22	24	27	30	33	36	42	48
Thickness.															
$\frac{1}{8}$	240	192	160	137	120	107	96	87	80	71	64	58	53	46	40
$\frac{3}{16}$	360	288	240	206	180	160	144	131	120	106	96	87	80	68	60
$\frac{1}{4}$	480	384	320	274	240	213	192	174	160	142	128	116	106	91	80
$\frac{5}{16}$	600	480	400	343	300	267	240	218	200	177	160	145	133	114	100
$\frac{3}{8}$	720	576	480	412	360	320	288	262	240	213	192	174	160	137	120
$\frac{7}{16}$	840	672	560	480	420	373	336	305	280	248	224	203	186	160	140
$\frac{1}{2}$	960	768	640	549	480	427	384	349	320	283	256	232	213	182	160

In practically every case with modern hydraulic power plants, steel piping, either riveted or welded, is used. Fig. 38, page 1234, shows types of joints which can be adopted for this class of piping. The slip joint (*a*) is suitable for low head pressures and for pipes constructed of thin plates. The joint is made by one pipe being tapered slightly outwards and the other slightly inwards, the tapers being coated with paint, cement grout, or some similar composition, and driven into each other until they form a water-tight joint.

The socket and spigot joint (*b*) for lead and yarn packing is a very useful one for low or medium head pressures, as it has some amount of flexibility, and also allows under all ordinary conditions for any expansion or contraction in the pipes being taken up in the joints.

The collar joint (*c*) is another type of lead joint to which the same conditions practically apply.

For higher pressures ordinary forms of lead joints do not always prove satisfactory, owing to the danger of the jointing material being blown out by the pressure of the water. In these cases some form of flanged joint must be used, two of which are shown—one (*d*) with the flanges riveted on to the pipes, and the second (*e*) with the pipe ends turned up and fitted with loose flanges bolted together. The patent muff joint (*f*) is of a special type and allows for a large amount of expansion and contraction in the pipe line, and can be constructed to keep perfectly tight under the heaviest pressures which have to be dealt with.




(*a*) Tapered Slip Joint for low pressures.




(*b*) Socket and Spigot Joint, packed with lead and yarn.




(*c*) Loose Collar Joint, packed with lead and yarn.



(*d*) Flanged Joint for riveted pipes.



(*e*) Flanged Joints for welded pipes.



(*f*) Patent Muff Joint for high pressures.

FIG. 38.

Anchorage.—One of the most important points in the design of pipe lines is the provision for anchorage on the line itself, and especially at the foot of the line near to the power house, in order to prevent any possibility of pipe line movement being transmitted to the turbines or Pelton wheels. The pipes can be efficiently anchored in several ways, the more common forms of anchorages being to provide cast iron or steel thrust blocks, forming a foot or base on the pipe itself, which are firmly secured to heavy concrete or rock foundations; or special anchoring pipes can be provided with thrust flanges and solidly set into heavy blocks of masonry or concrete.

Expansion and *Contraction* of long lines of piping also require careful attention, and it is necessary in long straight runs of pipe to provide either a type of joint capable of taking up expansion and contraction, or to fit the pipe line with special expansion joints, which are usually constructed of cast iron or steel and of the sliding socket and spigot type.

Relief Valves.—Where the length of a pipe line is excessive in proportion to the head of water, and the plant has to deal with heavy and sudden load changes, it is necessary for the safety of the plant and pipe line to provide efficient relief valves to prevent serious water-hammer effects. These, however, should be of special design, as the ordinary forms of spring-loaded relief or safety valves are worse than useless under conditions of this kind, as if they are set to open with only a small rise in pressure the reaction of the discharging water will nearly always prevent them closing again, and if they are adjusted in the ordinary manner the pressure rises too high before they open, and the sudden closing of the valve by means of the heavy spring employed often causes worse water-hammer effects than there would be with no relief valve at all.

Relief valves for hydraulic power work should be so designed that they will open immediately with a very small rise in pressure, and in proportion to the pressure increase, the closing being effected by some form of oil cataract or dashpot which can be adjusted so that the time of closing will coincide with the time required for slowing up the moving column of water.

The best form of relief valve, however, is one which is directly connected to the gate or nozzle-operating mechanism of the power unit, and adjusted so that it will open in proportion to the decrease of gate or nozzle opening, and be closed again slowly by means of an oil dashpot or cataract. With a relief valve of this form the pressure rise is anticipated, and therefore very good results can be obtained. With a relief valve independent of the Pelton wheel or turbine rise in pressure must take place before it can come into operation.

Where Pelton wheels fitted with deflecting nozzles are used, no relief valve is generally necessary, as the quantity of water discharged remains the same for any load, or is slowly cut off by hand.

Water Hammer in Pipes.*

In 'The Design of Pipes' (p. 1192), it was pointed out that the penstocks had to be designed to resist the static head plus the head due to water hammer. The magnitude of this extra pressure depends, among other things, upon the length of the penstock and upon the rate of the change of the velocity of the water in the penstock. The rate of change of velocity depends upon the velocity of the wheel gates as they are moved by the governor to suit the variations in the load.

When the gates of a turbine close to suit a drop in the load, the force required to decrease the velocity of the water flowing in the penstock is evidenced by a rise in pressure in the wheel casing, expressed in feet of water by the following formula:

$$h = H \frac{2}{\frac{2 \times T}{T_2} - 1}$$

where

h = water hammer of water in ft.;
H = static head of water in ft.;
T = governor closing time;
$T_2 = \frac{L \times V}{g \times H}$ = penstock time;
L = length of penstock in ft.;
V = maximum velocity of water in ft. per sec.;
$g = 32{\cdot}2$.

Conversely, when the gates are opened to suit an increase in load, the force required to increase the velocity of the water is evidenced by a fall in the pressure in the wheel casing, expressed in feet of water by the following formula

$$h = H \frac{2}{\frac{2 \times -T}{T_2} - 1}$$

* Adapted from *Etude générale du coup de bélier dans une conduite de diamètre constant*, by Comte de Sparre.

These formulæ give the effect at the turbine, of a closure or opening of the gates, but it is often necessary in a long penstock, in order to economise material, to know at several points along the pipe the effect of the movement of the turbine gates. If we call x the distance from the turbine to the point considered, we find that the water hammer at that point is equal to the hammer at the turbine multiplied by $\frac{L-x}{L}$ and that it is therefore proportionate to the distance from the head gate to the point considered.

In practice it is well to so regulate the governor closing time as to keep the maximum water hammer at the turbine not above 25 per cent. of the static head of water.

SECTION XXIV

PART V

HYDROSTATIC PRESS—HYDRAULIC RAM—HYDRAULIC LIFTS—HYDRAULIC BOLT FORCERS—HYDRAULIC RIVETERS.

The Hydrostatic Press.

P = Power or pressure applied.
l = length of lever, in inches or feet.
A = Area of ram, in square inches.
W = the weight or resistance, in lbs.
l' = length of fulcrum, in inches or feet.
a = Area of piston, in square inches.

$$\frac{Pl A}{l' a} = W. \qquad \frac{W l' a}{Pl} = A. \qquad \frac{W l' a}{A l} = P. \qquad \frac{PA l}{W l'} = a.$$

To Compute the Thickness of the Metal to Resist a Given Pressure.

Rule.—Multiply the pressure per square inch in pounds by the diameter of the cylinder in inches, and divide the product by twice the estimated practical tensile resistance or *value* of the metal in pounds per square inch, and the quotient will give the thickness of the metal required.

Example.—The pressure required is 9,000 lbs. per square inch, and the diameter of the cylinder is 5·3 inches: what is the required thickness of the metal or cast iron?

$$\frac{9000 \times 5{\cdot}3}{6000 \times 2} = \frac{47700}{12000} = 3{\cdot}975 \text{ ins.}$$ The *value* of the metal is here taken at 6,000.

The Hydraulic Ram.

The water working the ram is supplied through the pipe S (fig. 1), and escapes through an opening at *o*, until it has gained a velocity sufficient to raise the valve or ball, B, which suddenly stops the current, and causes an excessive pressure in the ram, R, which opens the valve or ball, C; the water is forced into the vessel and air-chamber, A, and finally through the delivery-pipe, *d*, to its destination. When equilibrium of pressure is restored between S and R, the ball, B, falls, and the operation is repeated. The ram can make as many as 200 strokes per minute, depending upon its size.

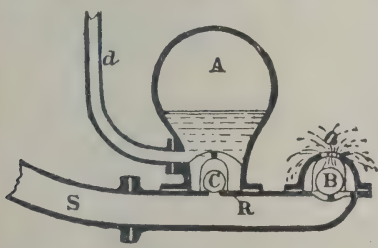


Fig. 1.

The length of the supply-pipe, S, should not be less than 5 times the height of the fall. But the pipe may be made 10 times, or more, the height of the fall.

In ordinary cases the hydraulic ram returns about 50 per cent. of the natural effect. That is, the quantity of water, q, multiplied by the height, h, of the delivery above the ram will be about 50 per cent. of the quantity of water, Q, working the ram, multiplied by the head of fall, H, in the same unit of time.

$$qh = 0{\cdot}5QF. \qquad q = \frac{0{\cdot}5QH}{h}. \qquad Q = \frac{2qh}{H}.$$

Q and q can be expressed in any unit of volume or weight. F and h can be expressed in any unit of length.

If

Q and q = cubic feet per minute,
F and h = fall and height in feet,
L = length in feet, and D = diameter in inches of the supply-pipe, S,
l = length, and d = diameter of the delivery-pipe, d,

$$D = \sqrt[5]{\frac{2Q^2(L + 5D)}{F}}, \qquad d = \sqrt[5]{\frac{4q^2(l + 5d)}{h}}.$$

TABLE OF RESULTS OF OPERATIONS OF HYDRAULIC RAMS.

Number of Strokes.	Height of Fall.	Height of Elevation.	Water Expended.	Water Raised.	Useful Effect.
Min.	Feet.	Feet.	Cubic Feet.	Cubic Feet.	
66	10·06	26·3	1·71	·543	·9
50	9·93	38·6	1·93	·421	·85
36	6·05	38·6	1·43	·169	·75
31	5·06	38·6	1·29	·113	·67
15	3·22	38·6	1·98	·058	·35
10	1·97	38·6	1·58	·014	·18
..	22·8	196·8	·38	·029	·67

NOTES ON HYDRAULIC RAMS.

Working Fall.—Any working fall, from, say 18 ins. up to 100 ft., will do to work a ram, but the more working fall obtained up to about one-third of the total height the water has to be raised above the ram, the less the ram will cost to raise a given quantity, and the less driving water will be required to lift that quantity.

In sluggish streams where it is inadmissible to put a dam in the stream it is sometimes necessary to carry the driving water several hundred yards down stream in earthenware pipes, running nearly level, before a few feet fall can be obtained: but where driving water is plentiful it is often less costly to be content with a small working fall and have a more powerful ram, than go to the expense of obtaining the greater fall for the sake of enabling a smaller ram to do the work required.

Height to Force.—The height to force must be estimated from the level of the ram or bottom of the working fall.

Rising Main Pipe.—Rams will force to a distance of several miles. In one case a ram is in use forcing to a distance of three miles and to an elevation of 340 ft., with a working fall of only 10 ft.

Driving Water.—The quantity of driving water required to work a ram depends upon the amount of working fall available, the height to raise the water, and the quantity of water it is desired to raise. Rams can be made to work under favourable conditions with less than one gallon of water per minute.

In giving the quantity of water available to work a ram, it is useless to say there is 'sufficient to fill a pipe of certain size,' unless the gradient of the pipe be given at the same time, in order that the velocity of the water in the pipe may be ascertained. Unless the water be practically unlimited for the purpose required, it is preferable to make a positive measurement of the water. A ready method of measuring the flow of very small streams is to dam up the stream with a little puddle, and insert a pipe in the dam to form a spout. Then let the water flow into a bucket for, say, exactly 15, 30, or 60 seconds, and carefully measure out the contents of the bucket in pints, when the total flow in gallons per minute or hour can be calculated. If the stream be too large to measure with one spout, two or more spouts can be inserted in the dam, and each of them measured separately. If the ram required be a large one, and the volume of driving water available be too great to measure in this way, it should be gauged by means of a weir board.

Hydraulic Lifts.

A speed of 200 to 400 feet per minute is usual.

For packing the ram, hat-shaped packing is preferable to the U-shaped, as it causes less friction and lasts longer. Leather packing is the best, but the most usual form is 'hydraulic' flax or hemp in stuffing boxes.

The cylinder of the lift should be absolutely plumb.

In well-constructed direct-action lifts the total friction should not be more than 5 per cent. In suspended lifts the friction varies from 15 to 20 per cent.

An air-vessel placed between the valve-box and ram cylinder will prevent any shock in the cage from the passing of the water when the valve is opened or closed, or when the water is turned into the waste-pipe.

The gear rod or rope for high-speed lifts should have a range of from 5 to 6 feet (from full pressure to full exhaust), so that the man working the lift may have proper control over it.

The cam motion opening the valve should open the latter very gradually.

The high pressure system of working hydraulic lifts is the most economical in every way, and it enables high working speed to be obtained.

Public supplies of high pressure hydraulic power are available in London, Liverpool, Hull, Manchester, Birmingham, and Glasgow.

Direct acting ram lifts are usually adopted in this country for moderate heights; the machine consists of a hydraulic cylinder having a flange cast on its upper end resting on the foundation at the top of the well bored to receive it, and a simple platform or cage moving between guides firmly screwed to the upper end of the ram working in the cylinder. The valve controlling the action of the lift is worked by a rope, or rod passing through the platform. Tappet gear automatically stops the lift at the top of its stroke, and permanent stops are also fitted to prevent overtravel. Alternative rams can be fitted to meet varying loads.

The suspended type of lift is less expensive than the direct-acting lift when the height of travel is considerable, or where there are difficulties in boring the well for the cylinder. A factor of safety of 10 to 15, to 1, on all ropes (collectively) is ample; very high factors mean, in most ordinary cases, that ropes become too large in diameter to ensure long life. The ram can be placed in the lift shaft or in the roof, or basement, either vertically, horizontally, or on an incline. Safety gear should be fitted to come into immediate action in case the ropes break. The valves are similar to those used for the direct-acting type.

The direct ram lift is becoming usual in America even in the highest buildings on account of its safety. The cylinder consists of a bored well lined with stout Artesian tubing, and failure can hardly occur, for the pipes fit closely in the bored rock. The outlet piece if well made and attached to the lining tube is not apt to fail. Balances are employed so that the long rams when out are under tension.

The guide-bars of lift should preferably be fixed to stone templates with bolts let in and secured by lead, and the bars fixed by nuts. This is preferable to wooden bricks, which are liable to shrink. The V guide-bar is the best form.

Electric push button control of lift and gates can be fitted to either type of lift.

Each elevator shaft of the 'Empire Building,' in New York, is walled up independently as high as the third floor, and is made a close fit for the car, the last 50 feet of the drop of each elevator thus forming an air-cushion. If the car fall, the air is confined in the bottom of the shaft, and, by its gradual escape, lets the elevator down easily without shock. It is stated that a car has been dropped from the twentieth floor of the building without breaking eggs placed in the car. The pressure of the air caused by a fall from the top floor, a height of 290 feet, is calculated to be about 3½ lbs. per sq. in. The estimated proportion between the depth of the air-cushion and the length of the drop is as 1 to 6. The only precaution necessary seems to be to make the doors of the lower-floor entrances air-tight.

In hydraulic lifts trouble sometimes arises owing to water leaking from the ram glands and falling on to the ropes. Where this possibility exists the ropes should be well protected with a coating of tallow and blacklead well mixed together, otherwise the water will find its way into the interior of the rope, and by rusting the wires rapidly weaken them. The danger in such cases lies in the fact that there is often no external evidence to show that the ropes are unsafe. In one instance the two supporting ropes of a lift broke without warning near to their anchorage to the cylinder, causing the lift car to fall the full height of the lift well, wrecking the lift and killing the attendant. On examination of the broken ropes it was found that the internal wires had been damaged by the water to such an extent that they were quite brittle and without strength, but no broken wires were noticeable before the accident at the point of failure. The best way to prevent such failures is to design the lift so that water cannot possibly fall on the ropes, or, if this be not feasible, to fit drip trays or other appliances to keep the water off the ropes if leakage should occur.

Danish Regulations concerning the Arrangement and Working of Lifts and Hoists driven by Machinery.

The lift cage must be closed in all round, except at the entrance, either with solid sides and roof or with trellis-work having openings not exceeding 1 in. It must be lit up inside, and must contain a notice of the number of passengers allowed. From any point in its travel there must be the means of signalling if in difficulty. Except where their adoption would be attended with serious inconvenience, entrance-doors must be fitted inside the cage itself; these must not open outwards, and must be kept locked while travelling. Where they are dispensed with, at every landing the lift well must be fenced to the full height on the entrance side, with no inward projection; and the clearance between the cage and the well must nowhere exceed 2 ins. In ram lifts the cage and ram must be securely joined together. A hanging cage must be suspended

by at least two ropes or chains, each of which must alone be strong enough to carry ten times the weight of the cage fully loaded. Each must also be connected with either a stopping apparatus or a brake, so arranged that the cage shall either be stopped in a fall of not more than 1 ft. or else shall be let down at a speed not exceeding 3 ft. a second. Lifts worked by a winding drum must be provided with a contrivance for preventing the rope from becoming slack in the event of the cage sticking in its descent, and at the same time for stopping the drum. Every counterbalance weight is likewise to be hung by at least two ropes or chains, each having ten times the strength necessary to carry the weight. The counterbalance weights must be securely guided, and the space in which they work must be securely fenced, so as to guard against all possible risk of accident.

See also ' Electric Lifts.'

Hydraulic Bolt Forcers.

Fig. 2 represents Young's Hollow-ram Portable Hydraulic Bolt Forcer, constructed principally for forcing in and out coupling bolts, though it is also suitable for forcing pins, etc., in and out of machines. The apparatus consists of a hollow steel sliding ram, the ends or tails of

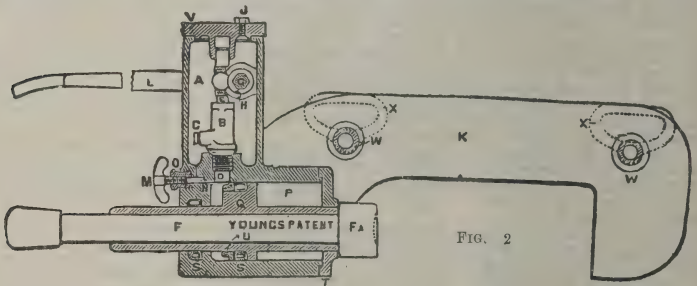


FIG. 2

A, cistern ; B, pump ; C, suction valve, spring, stopper, and gauze strainer ; D, delivery valve, spring, and stopper ; E, pump plunger ; F, steel drift ; F A, drift shoe ; G, pump shaft ; H, pump tumbler with set screw : J, air screw ; K, arms ; L, working pump lever ; M, stop and release valve ; N, stop and release seat ; O, stop and release valve gland ; P, cylinder ; Q, hollow ram ; SS, U leather for packing ; T, cylinder cover ; U, packing ring ; V, cistern lid ; W, distance pieces ; X, handles.

which project through the front and back respectively of the cylinder. Inserted in this hollow ram is a steel drift, which passes right through the centre of ram ; a head is forged on one end of the steel drift, and a shoe for the bolt is fitted on the other. The method of working is the same as in any ordinary hydraulic pump, viz. the fluid is forced by the pump from the reservoir into the cylinder, and the ram is gradually forced forward until it presses the shoe, on the end of the steel drift, against the bolt to be forced out. Should the bolt show no sign of moving out of coupling when the maximum hydraulic pressure has been obtained, a sharp blow is given with a hammer on the head of the drift, which transmits a shock or ' jar ' to the bolt and starts it from its position, and it can then be ejected, either by pumping the ram forward or knocking it out by hammering on the head of the steel drift ; this is a valuable feature, as the bolts are generally rusted in their seats, and a sharp blow is very efficacious in starting a bolt or pin under powerful and steady pressure.

This machine fitted with crosshead instead of arms as shown is largely used for forcing winch drums from their shafts.

DETAILS OF HYDRAULIC FORCERS.

Power . . . . . tons	20	20	30	40	50	75
Width of gap . . . . . inches	9	15	12	14	16	18
Run out . . . . . inches	3	3	4	5	5½	6½
Height . . . . . inches	15½	15½	16½	17	18	18½
Suitable for bolts approx. . inches diam.	2	2	2½	3	4	5
Approx. weight . . . . . cwts.	1¾	2	3	4	4½	6¼

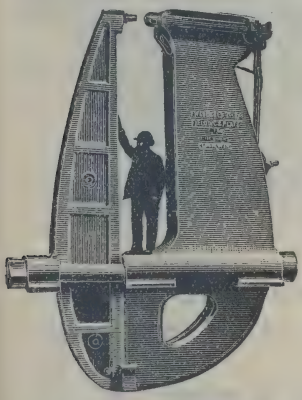
The body of the apparatus can be separated from the arms or claws by withdrawing two small sliding bolts, when the machine can then be carried in two separate pieces, the body placed first in position on the shaft, and the claws lifted up afterwards and fixed, without having to screw and unscrew any bolts. A gauge supplied with each machine indicates the pressure.

HYDRAULIC MACHINES.

TWEDDELL'S SYSTEM.

For Boiler Makers. Bridge Building and Girder Work of all kinds. Forging and Stamping. Special Improvements. . .

also **PNEUMATIC RIVETERS**



Wagon and Carriage Building. Wheel Making. Shipbuilding and Structural Work. Weldless Cold Drawn Tubes, also Hot Drawn Tubes. . .

FIELDING & PLATT, LTD.

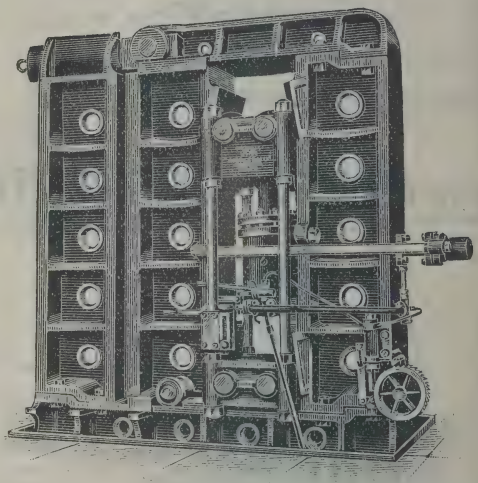
Engineers, GLOUCESTER.

Telegrams: ATLAS. GLOUCESTER. National Telephone 58

HYDRAULIC MACHINES.

TWEDDELL'S SYSTEM.

Riveters.
Flangers.
Flanging Presses.
Punching Machines.
Shearing Machines.
Bending Machines.
Garboard Benders.
Presses.
Forging Presses.
Pumps.
Accumulators.



BOILER-PLATE BENDER
For Plates up to 2½″ thick, cold.

FIELDING & PLATT, LTD.

Engineers, GLOUCESTER.

Telegrams: ATLAS, GLOUCESTER. National Telephone 58.

F. 1241

Hydraulic Riveters.

Fig. 3 represents the Tweddell hydraulic riveter (manufactured by Fielding & Platt, Ltd., Atlas Works, Gloucester), a tool which is very largely used for riveting purposes.

In this machine, by means of two rams, one inside the other, a pressure, in the first place, is brought to bear on the plates by means of an annular tool, A, encasing the moving capping die, B. When the plates are thus brought together, the capping tool heads the rivet; and after this

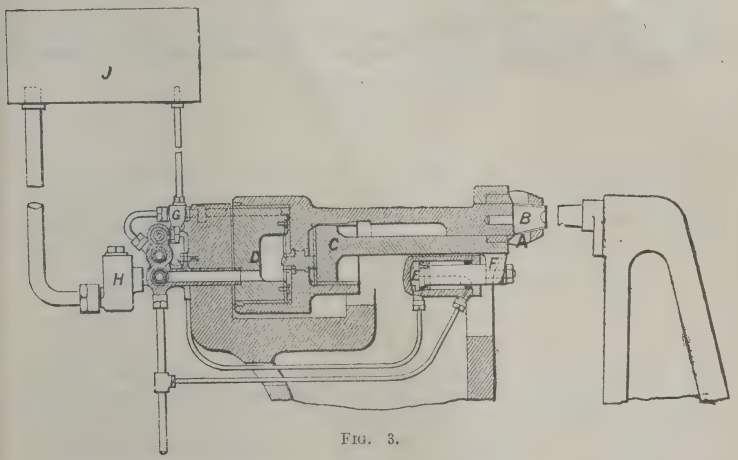


FIG. 3.

operation is performed, the combined power of both rams (C and D) is applied on the head of the rivet, and through the shoulders of same on to the plate surrounding it. The size of work is only limited by the power of the machine, but some very good work in cold riveting, up to 1 inch diameter, has been done by these machines. An advantage of the machine is that by

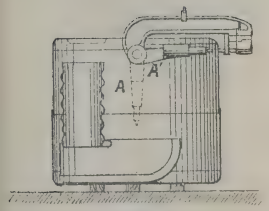


FIG. 4.

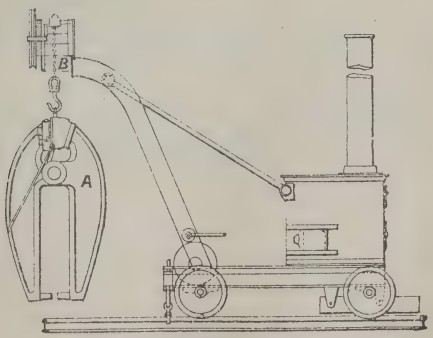


FIG. 5.

substituting a riveting die for the annular closing tool, A, a second and smaller power is available. This adds very much to the general use of the tool, for it is impossible to keep such a powerful machine in constant work. Excellent work had been done by this machine when using plain bolts—i.e., making both heads of the rivet in the act of closing it. This machine is capable of exerting three different powers, which is a great advantage. Although these machines are made

up to 200 tons power, very little more high-pressure water is required, owing to the use of the auxiliary piston, E, which draws forward by means of the lug, F, the two main rams, C and D, the space left behind being filled with low-pressure water through check-valves, G and H, from a tank, J.

In cases where boiler-ends are placed with their flanges inwards, the machine shown by Fig. 4 is used. In this machine there is a hinged arm, A, which is first of all lowered into the boiler and when restored to its proper position, A′, the riveting is proceeded with.

Fig. 5 shows a portable riveter, A, slung from a travelling crane. By means of the iron girder, B, this riveter is moved across the work to be riveted, whilst the crane with its rivet-heating oil or reverberatory furnace is traversed along. Riveters of this type were largely used in the construction of the Forth Bridge.

SECTION XXV

PART I

SANITARY ENGINEERING—SEWERS—SEWERAGE—FLUSHING AND VENTILATING SEWERS AND DRAINS—SEWAGE TREATMENT AND DISPOSAL — LOCAL GOVERNMENT BOARD'S REQUIREMENTS—HOUSE DRAINAGE (pp. 1245–1266

(Contributed by E. J. Silcock, M.Inst.C.E., F.G.S., F.S.I.)

PART II

IRRIGATION — AVAILABLE SUPPLY — EVAPORATION — ABSORPTION—EVAPORATION FROM SOILS—LOSSES FROM IRRIGATION CANALS—CAPACITIES OF CANALS—MEAN VELOCITIES—CRITICAL VELOCITY—DUTY OF WATER (pp. 1267–1278)

(Contributed by Reginald Ryves, Assoc.M.Inst.C.E., M.Cons.E.)

PART III

RAINFALL — WELLS — WATERWORKS — DAMS — FLOW OF WATER IN PIPES—WATER PIPES—WATER TANKS (pp. 1279–1308

(With Contributions by Reginald Ryves, Assoc.M.Inst.C.E., M.Cons.E., W. H. Booth, F.G.S., J. H. Horobin, R. Fairfax Middleton, Assoc.M.Inst.C.E., and H. F. Rutter, M.Inst.C.E.)

SECTION XXV

PART I

SEWERS — SEWERAGE — FLUSHING AND VENTILATING SEWERS AND DRAINS — SEWAGE TREATMENT AND DISPOSAL — LOCAL GOVERNMENT BOARD'S REQUIREMENTS — STANDARDS OF PURITY—HOUSE DRAINAGE

Contributed by E. J. Silcock, M.Inst.C.E., F.G.S, F.S.I.
(Joint author of Moore and Silcock's 'Practical Treatise on Sanitary Engineering.')

SEWERS.

Rate at which Rainfall Reaches a Sewer.

C = cubic feet per second per acre reaching sewer: c = average cubic feet of rainfall per second per acre during heaviest fall; S = average slope of ground in feet per 1,000 ft.; a = number of acres drained; K = ·75 for paved streets, ·625 for ordinary cases, ·31 for suburbs with gardens, lawns, and macadamised streets.

$$C = Kc\sqrt[4]{\frac{S}{a}} \qquad \textit{(Burkli-Zeigler.)}$$

(For other formulæ see 'Rainfall,' pp. 1281–2.)

Discharging Capacity of Sewers.

R = hydraulic mean depth in feet; S = sine of angle of inclination; v = velocity in feet per second.

$$v = 124\sqrt[3]{R^2}\sqrt{S} \qquad \textit{(Crimp and Bruges.)}$$

Discharge from the Submerged Orifice of a Culvert.

D = diameter of orifice in inches; L = length of out-fall culvert in feet; W = quantity discharged in cubic feet per minute; H = head in feet.

$$D = \cdot 531\sqrt[5]{\frac{LW^2}{H}} \qquad \textit{(Eytelwein.)}$$

CIRCULAR SEWERS.

x = area of sewer ÷ the wetted perimeter; f = inclination in feet per mile; v = velocity of flow, in feet per minute; a = area of flow, in square feet; V = volume of discharge, in cubic feet per minute.

$$v = 55\sqrt{x \times 2f} \qquad V = va.$$

American Rule.
(Large Sewers.)

The following formula is used by Mr. H. R. Asserson, chief engineer of the Sewer Department of Brooklyn, for proportioning the sizes of large sewers:—

$$D = \frac{3 \log. A + \log. N + 8}{10},$$

where D = diameter of sewer in inches; A = the area drained in acres; N = the distance in feet in which the sewer falls 1 ft.

(Small Sewers.)

For small sewers up to 18 ins. in diameter the formula is—

$$D = \frac{3 \log. A + \log. N + 6{\cdot}8}{10}$$

Salt-Glazed Ware Pipes

Salt-glazed ware pipes may be used up to 36 ins. diameter, but above 24 ins. they are difficult to manufacture of a cylindrical shape, and brickwork or concrete is usually adopted.

British Standard Salt-Glazed Ware Pipes.*

(No. 65—1914.) (*Abstract.*)

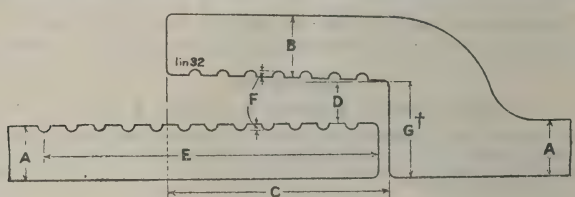
The specification divides pipes manufactured in accordance with the specification into two classes, viz. :—

British standard pipes. British standard tested pipes.

British standard pipes are pipes subject in every respect to the requirements of the specification, and a percentage are to be subjected to a hydraulic test.

British standard tested pipes are subject in every respect to the requirements of the specification, and every pipe has to withstand a hydraulic test.

The specification provides that the dimensions of pipes shall be not less than those set out in the following table, except as provided in the section dealing with permissible variation.



1	2	3	4	5	6	7
Int. Dia. of Pipe.	Minimum Mean Thickness of Barrel. A.	Minimum Mean Thickness of Socket. B.	Minimum Internal Depth of Socket. C.	Minimum Jointing Space. D.	Length of Grooving on Spigot. E=1½C.	Minimum Depth of Grooving. F.
Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	In.
3	7/16	7/16	2	5/16	3	1/16
4	1/2	1/2	2	3/8	3	1/16
5	9/16	9/16	2¼	7/16	3⅜	1/16
6	5/8	5/8	2¼	7/16	3⅜	1/16
7	11/16	11/16	2½	7/16	3¾	1/16
8	11/16	11/16	2½	1/2	3¾	1/16
9	3/4	3/4	2¼	1/2	3¾	1/16
10	13/16	13/16	2¾	5/8	4⅛	1/16
12	1	1	2¾	5/8	4⅛	1/16
13	1 1/16	1 1/16	3	5/8	4½	1/16
14	1 1/16	1 1/16	3	5/8	4½	1/16
15	1¼	1¼	3	5/8	4½	1/16
18	1½	1½	3	5/8	4½	1/16
21	1⅝	1⅝	3¼	¾	4⅞	1/16
24	1¾	1¾	3¼	¾	5¼	1/16
27	1⅞	1⅞	3¼	¾	5¼	1/16
30	2	2	3¼	¾	5¼	1/16
36	2½	2½	3¼	1	5¼	1/16

† Width of shoulder of socket, which must exceed the mean thickness of the barrel of the pipe by not less than the values for D given in column 5.

The sockets of pipes shall be conical, having a taper of one-sixteenth of an inch measured on the diameter per inch of length.

The length of the barrels of straight pipes shall be as follows :—

Up to and including 6 ins., 2 ft.

7 ins. to 10 ins. inclusive, 2 ft. and 2 ft. 6 ins.

12 ins. to 36 ins. inclusive, 2 ft., 2 ft. 6 ins., and 3 ft.

* By permission of the British Engineering Standards Association.

The interior of the sockets and exterior of the spigots shall have groove one-sixteenth inch deep for a length equalling one and a half times depth of socket.

The glazing shall be attained by the action of the fumes of volatilised common salt on the material of the pipes during the process of burning.

Subject to the mean thickness of the barrel and socket of a pipe being not less than that specified in columns 2 and 3 of the above table, a variation in the thickness of the barrel or socket may be allowed at any two points not exceeding the following :—

Diameter of Pipe.	Permissible Variation of Thickness.
Not exceeding 12 ins.	$\frac{1}{16}$ in.
13 ins. to 18 ins. inclusive	$\frac{3}{32}$ in.
28 ins. to 36 ins. inclusive	$\frac{1}{8}$ in.

The internal diameter of the barrel shall nowhere deviate from the standard diameter by more than the figure given in the following table :—

Standard Internal Diameter of Pipe.	Permissible Variation from Diameter.	Standard Internal Diameter of Pipe.	Permissible Variation from Diameter.
3 ins. and 4 ins.	$\frac{1}{8}$ in.	15 ins. and 18 ins.	$\frac{5}{16}$ in.
5 „ to 7 „	$\frac{3}{16}$ in.	21 „ and 24 „	$\frac{3}{8}$ in.
8 „ and 9 „	$\frac{1}{4}$ in.	27 „	$\frac{7}{16}$ in.
10 „ to 14 „	$\frac{5}{16}$ in.	30 „ and 36 ins.	1 in.

The permissible deviation of straightness of the barrels measured on the inside of the curve for all diameters of pipes shall be as follows :—


Length of Pipe.	Permissible Deviation from Straightness.
2 ft.	$\frac{3}{16}$ in.
2 ft. 6 ins.	$\frac{1}{4}$ in.
3 ft.	$\frac{5}{16}$ in.

The hydraulic test shall be an internal pressure of 20 lbs. per square inch without showing signs of injury or leakage.


The pipes shall also be tested for absorption by testing pieces of the body of the pipe taken at more than 6 ins. from the end of the pipe. The test pieces shall be of whole thickness of pipe, and shall have two glazed surfaces each of which shall be not less than 8 ins. super or more than 20 ins. super. The test pieces shall be thoroughly dried at a temperature of 150°C., and shall then be immersed in cold water which shall be raised to boiling point and there maintained for one hour. The percentage of increase of weight shall not exceed the following :—

Thickness of Pipe.	Percentage of Increase of Weight.
$\frac{3}{4}$ in. and under	5 per cent.
Over $\frac{3}{4}$ in. and up to 1 in.	6 „
Over 1 in. and up to $1\frac{1}{2}$ in.	8 „
Over $1\frac{1}{2}$ in.	10 „

British standard pipes shall be marked with indelible black with the following :—



British standard tested pipes shall be marked :—



Egg-shaped Sewers.

The general form of the section of this class of sewers is shown by fig. 1.

When full.	⅞ths full.	⅔rds full.	½ full.	⅓rd full.	¼ full.
Area of whole section . 1·1485 d^2	·8795 d^2	·7558 d^2	·5091 d^2	·2840 d^2	·1862 d^2
Perimeter of wetted surface } 3·9649 d	2·6455 d	2·39415 d	1·8915 d	1·3746 d	1·1055 d
Hydraulic radius . . ·2897 d	·3325 d	·3157 d	·269 d	·2066 d	·1685 d

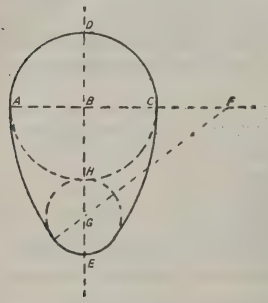


Fig. 1.

This form of sewer gives a fair hydraulic mean depth for flows varying greatly in volume. In a town sewered upon the combined system this is an advantage over the circular section, especially in the case of sewers laid in undeveloped areas where it is frequently necessary to make provision largely in excess of present requirements.

Diameter of Upper Circle = AC = d.
Conjugate Diameter = DE = $1\frac{1}{2}d$.
Radius of Invert = $\frac{1}{4}d$.
Radius of Side = FA = $1\frac{1}{2}d$.

Another advantage possessed by egg-shaped sewers is that for equal sectional areas this form is more easily entered by workmen than the circular section.

On the other hand, the egg-shaped section is not so strong to resist external pressure as the circular, and consequently if used in bad ground special precautions must be taken.

In ordinary practice, egg-shaped sewers are used for those sizes of culvert which fall between the largest circular stoneware-pipe sewers and the smallest size of circular brick culvert in which men can conveniently work.

These limits fix the maximum and minimum sizes of egg-shaped sewers at 3 ft. 6 ins. × 2 ft. 4 ins. and 2 ft. 3 ins. × 1 ft. 6 ins., respectively.

For ordinary depths the smaller sizes of egg-shaped sewers are constructed of one ring of brickwork half-a-brick thick; for the large sizes a second ring of brickwork may be introduced or, preferably, the sewer may be strengthened by placing concrete outside the brickwork.

The following table gives particulars of the ordinary sizes of egg-shaped sewers :—

Dimensions.	Sectional Area in Square Feet.		Wetted Perimeter. Lineal Feet.		Brickwork in superficial yards of half-brick thick per Lineal Yard of Culvert.	
	Total.	Up to ⅔rds of top circle.	When full.	When full to ⅔rds top circle.	One half-brick ring.	Two half-brick rings.
Ft. Ins. Ft. Ins.						
2 3 × 1 6	2·58	1·70	5·95	3·59	2·72	—
2 6 × 1 8	3·19	2·09	6·61	3·99	2·99	—
2 9 × 1 10	3·86	2·54	7·27	4·39	3·24	7·33
3 0 × 2 0	4·59	3·02	7·93	4·79	3·42	7·65
3 3 × 2 2	5·39	3·54	8·59	5·19	3·54	8·06
3 6 × 2 4	6·25	4·11	9·25	5·59	—	8·60

DISCHARGE OF WATER IN CUBIC FEET PER MINUTE, IN PIPES OR SEWERS, FOR ANY LENGTH AND HEAD, AND FOR DIAMETERS FROM 1 IN. TO 10 FT.

Diameter.	Tabular No.	Diameter.	Tabular No.	Diameter.	Tabular No.	Diameter.	Tabular No.
Ins.		Ft. Ins.		Ft. Ins.		Ft. Ins.	
1	4·71	1 1	2876·7	2 7	25270·	4 1	79380·
1¼	8·48	1 2	3463·3	2 8	27358·	4 2	83492·
1½	13·02	1 3	4115·9	2 9	29547·	4 3	87730·
1¾	19·15	1 4	4836·9	2 10	31834·	4 6	101207·
2	26·69	1 5	5628·5	2 11	34228·	4 9	115854·
2½	46·67	1 6	6493·1	3 0	36725·	5 0	131703·
3	73·5	1 7	7433·	3 1	32329·	5 3	148791·
3½	108·14	1 8	8449·	3 2	42040·	5 6	167139·
4	151·02	1 9	9544·	3 3	44863·	5 9	186786·
4½	194·84	1 10	10722·	3 4	47794·	6 0	207754·
5	263·87	1 11	11983·	3 5	50835·	6 6	253781·
6	416·54	2 0	13328·	3 6	53995·	7 0	305437·
7	612·32	2 1	14758·	3 7	57265·	7 6	362935·
8	854·99	2 2	16278·	3 8	60648·	8 0	426481·
9	1147·6	2 3	17889·	3 9	64156·	8 6	496275·
10	1493·5	2 4	19592·	3 10	67782·	9 0	572508·
11	1894·9	2 5	21390·	3 11	71526·	9 6	655369·
12	2356·	2 6	23282·	4 0	75392·	10 0	745038·

The last table is applicable to sewers and drains by taking the same proportion of the tabular numbers that the cross-section of the water in the sewer or drain bears to the area of the whole area of the sewer or drain.

The formula upon which the table is constructed is :—

$$Q = 2356 \frac{\sqrt{d^5}}{\sqrt{\frac{l}{h}}},$$

where,

Q = volume of discharge, in cubic feet per minute;
d = diameter of pipe in feet;
h = height of fall of the water in feet;
l = length of pipe in feet.

Application of the Table.

To compute the volume of fluid discharged, the length of the pipe or sewer, the height or fall, and the diameter being given.

Rule.—Divide the tabular number opposite the diameter of the pipe by the square root of the rate of inclination (length ÷ height); and the quotient will give the volume required.

Example.—A pipe has a diameter of 9 ins. and a length of 4,750 feet; what is its discharge under a head of 17·5 feet?

Tabular number for 9 ins = 1147·6, and

$$\sqrt{\frac{4750}{17{\cdot}5}} = \sqrt{271{\cdot}4} = 16{\cdot}47;$$

then

$$\text{Discharge} = \frac{1147{\cdot}6}{16{\cdot}47} = 69{\cdot}67 \text{ cubic ft. per minute.}$$

Sewerage Systems.

There are two principal systems of sewerage, known respectively as the 'combined' and the 'separate,' systems. In the former, one set of sewers is provided for the removal of both the sewage proper, and also the rainwater; in the separate system two sewers are provided in every street, one for sewage and the other for rainwater. Both systems have their advantages, but these are counterbalanced by certain disadvantages.

The combined system has the advantage of simplicity, but it involves large and deep sewers with small volumes of sewage flowing in them in dry weather, and where the sewage has to be pumped and purified this system produces a larger volume of sewage than the separate system.

On the other hand, a separate system of sewers becomes very complicated, especially in large towns, and there is great risk of sewage drains being connected to the surface water sewers. The latter discharge direct into the nearest river or stream, and can therefore be made of smaller size than in the combined sewerage system, which concentrates all liquid upon one point. The drainage of all streets and yards is taken direct into the surface-water sewers. As the first washings of these surfaces are very foul, there is danger of pollution of the streams into which the surface-water sewers discharge.

In most cases neither system is carried out in its entirety, but a combination is effected with a view to adopting the best points of both.

The quantity of sewage in a strictly separate system should, if the sewers were watertight, be measured by the water consumed, and it is usually taken at from 20 to 40 gallons per head of the population draining, and the rate of flow in the middle of the day is from one and a half times to twice the mean.

Where a partially-separate system is adopted, the back roofs and back yards of the houses are usually drained to the sewage sewers, and the impervious area per head of the population varies from 10 square yards to 20 square yards.

The rainfall on this area, at the rate of from $\frac{1}{4}$ in. to 1 in. per hour, depending upon the area of the district (being smaller for large areas than for small), must be added to the sewage, to find the discharging capacity of the sewers.

In a combined system of sewers the main factor is rainfall, and the rate of fall and proportion of impervious area and size of district must be taken into consideration in determining the dimensions of the sewers.

The proportion of rainfall flowing off an urban area probably never exceeds 75 per cent. of the gross fall, and usually 30 per cent. to 50 per cent. is sufficient to provide for in ordinary circumstances.

(For discharges of catchments, including sewreed areas, see 'Rainfall,' page 1279.)

As an example of practical working, the following table may be quoted, giving the basis on which sewers have for many years been designed in a North Country city with an average rainfall of 36 ins., and nearly all streets being covered with impervious paving:—

Drainage Area in Acres.	Inches of Rainfall per Hour.	Drainage Area in Acres.	Inches of Rainfall per Hour.	Drainage Area in Acres.	Inches of Rainfall per Hour.
20	1·00	75	0·47	350	0·35
23	0·95	100	0·45	375	0·34
26	0·90	125	0·44	400	0·33
29	0·85	150	0·43	425	0·32
32	0·80	175	0·42	450	0·31
35	0·75	200	0·41	475	0·30
38	0·70	225	0·40	500	0·29
41	0·65	250	0·39	525	0·28
44	0·60	275	0·38	550	0·27
47	0·55	300	0·37	575	0·26
50	0·50	325	0·36	600	0·25

Flushing Sewers and Drains.

All sewers and house drains should be laid at sufficiently good gradients to secure self-cleansing To prevent deposit, 4-inch diameter drains should have a fall of not less than 1 in 40, 6-inch drains 1 in 60, and 9-inch drains 1 in 100. Whenever these gradients cannot be obtained special facilities should be provided for flushing, and this operation should be regularly attended to once or twice per week.

The water supply to closets, slop-sinks, etc., should be obtained from cisterns specially provided for the purpose, and not direct from the water-main, nor yet from cisterns in which the water for other domestic uses, such as cooking and drinking, is stored.

The best material for the cisterns is galvanised wrought-iron of No. 14 s.w.g. thickness.

The following table gives the capacities of flushing chambers for drains:—

CAPACITY OF FLUSHING CHAMBER REQUIRED FOR PIPES OF DIFFERENT SIZES.

Size of Pipe. Diameter in Inches.	Gradient of Pipe.	Capacity of Chamber in Gallons.
4	1 in 40	30
	,, 50	40
6	,, 60	60
	,, 100	100
	,, 200	160
9	,, 100	200
	,, 150	250
	,, 200	300
	,, 300	400
12	,, 100	300
	,, 200	400
	,, 300	500
	,, 400	750
	,, 500	1,000
	,, 600	1,500

Sewers as distinguished from drains may be laid at flatter gradients than those quoted without special flushing arrangements, but this depends upon the quantity of sewage flowing down the pipe. A sewer flowing half full will maintain itself in good order at a much flatter gradient than one flowing quarter full. It is usually found that a velocity of 2 feet to 2½ feet per second will produce self-cleansing conditions.

In practical sewage works sewers with a small flow should have the following minimum gradients:—

8 ins. diam. 1 in 75. 12 ins. diam. 1 in 150. 18 ins. diam. 1 in 250.
9 ins. diam. 1 in 100. 15 ins. diam. 1 in 200.

Where, however, the sewers have a goodly flow of sewage the following gradients will be found to be self-cleansing:—

8 ins. diam. 1 in 175. 12 ins. diam. 1 in 400. 18 ins. diam. 1 in 800.
9 ins. diam. 1 in 250. 15 ins. diam. 1 in 600. 21 ins. diam. 1 in 1,000.

Ventilation of Sewers.

The object of the ventilation of sewers is to remove the foul emanations arising from the sewage and the fouled surfaces of the sewers above the actual liquid and to discharge them at points where they will easily become diluted with fresh air and not cause a nuisance.

Until comparatively recently it was thought that sewer air was harmful in itself and was likely, not only to impair the vitality of the subject, but also to be the direct cause of infectious disease.

Now, however, it is more generally conceded that sewer air is at least as free from bacteria as the air near the surface of a road, and that apart from any offensiveness to the sense of smell it is not dangerous to persons breathing it. The degree of offensiveness of sewer air depends more largely upon the condition of the sewer than upon the effectiveness of the ventilation.

Fresh sewage does not produce a bad smell, and modern sewers constructed with the best materials and gradients and regularly flushed do not give off foul emanations. On the other hand, sewers constructed of absorbent materials, laid to bad gradients, containing deposits of sewage solids, and in which flushing is absent or carried on at very long intervals, the sewer air becomes very foul and is liable to produce nuisance.

Formerly, the generally accepted theory was that 'sewer gas,' being lighter than air, would tend to rise up the gradient of the sewer and would be discharged at its summit.

This idea has now been demonstrated to be erroneous: there are many factors which affect the motion of air in sewers such as temperature, humidity, ebb and flow of sewage, the drag of the flowing sewage, the natural diffusion of gases, friction on the periphery of the sewer, and the action of the wind.

Of all these, by far the most important is the latter, and it dominates the other factors except on very calm days.

The system of ventilation of sewers introduced on the advice of the late Sir Robert Rawlinson many years ago, was to relieve the pressure of sewer air by means of gratings in manhole covers at ground level.

These open ventilators were fixed at intervals of about 100 yds., and if it was found that some of the ventilators were a nuisance, additional openings were to be made at shorter intervals.

It has been the almost universal experience in most towns that at certain times these surface grids caused nuisance by allowing the sewer air to escape and bad smells resulted.

A modification of the system has been effected by the introduction of tall shafts connected with the sewers alternating with openings at street level.

The tall shafts theoretically act as outlets and the openings at ground level as fresh-air inlets. It is found, however, in practice, that this order is under varying conditions reversed and it is never certain which will be the inlet and which the outlet.

The general practice now is to have all manhole covers sealed where they are situated in narrow streets near the doors and windows of houses or in other situations likely to cause nuisance, and to have vertical steel or iron columns 20 to 25 ft. in height and 6 ins. to 12 ins. diameter, fixed in the line of curb and connected to the manholes to act either as inlets or outlets: the tops of the columns are fitted with wire guards.

In some cases the shafts consist of iron socketed pipes fixed against a building and carried up above the eaves or roof ridges in such a way as to be clear of all windows, skylights, or chimneys.

In broad suburban roads or where the sewers cross agricultural land, the manhole covers are still left open for ventilation purposes.

Connecting the sewers to the flues of factory chimneys has been tried but the draught is confined to a very small area and is not nearly so effective as one would anticipate. Numerous proprietary systems of sewer ventilation by means of fans, special cowls, gas destructors, antiseptic sprays and deodorants have been put on the market from time to time, but these are generally successful only in very favourable circumstances and cannot be recommended for general use.

SEWAGE TREATMENT.

Quantity of Sewage to be dealt with.

The quantity of sewage per head of the population drained, and the effect of the admission of rainwater, have been dealt with in the preceding matter dealing with sewers.

It has now become fairly well established in practice that in towns where the sewers are upon the combined system, and where the sewage is purified, the works shall be capable of providing full treatment for a quantity equal to three times the mean dry weather flow, and that in addition to this there shall be means of partially treating a further quantity equal to three times the mean dry weather flow, any surplus beyond this to be discharged untreated into the streams.

In towns sewered on the separate system the full treatment can be restricted to a volume of twice the mean dry weather flow, and partial treatment must in that case be provided for four times the dry weather flow.

Apart from the fluctuations in volume due to the admission of storm water, the quantity varies from hour to hour during the day, and in different days of the week, owing to the greater or lesser discharge of liquid from the houses in the district.

The following diagram represents the rate at which sewage is received on an average day in dry weather at the Leeds Sewage Purification Works :—

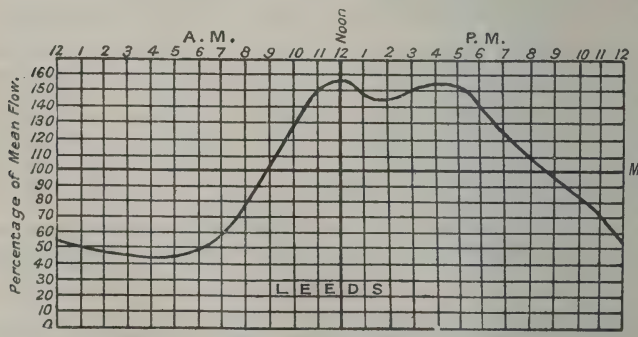


Fig. 2.

It will follow from what has been said that there are continual fluctuations in the volume of liquid to be dealt with at a sewage purification works, and such works must therefore be capable of adapting themselves to all the conditions under which they may be called upon to act.

General Outline of Treatment.

The object of all sewage purification processes is to convert the organic substances in the sewage into harmless inorganic matter. The organic matter may be in suspension or in solution, and it is not sufficient to eliminate the former, as was the case in some of the older processes, and leave the matters in solution, as these will subsequently putrefy and cause nuisance.

In average sewage of a domestic character—i.e. free from trade refuse—there are usually about 100 grains of solid matter per gallon, of which 40 grains are organic.

Grains per Gallon.	Organic.	Mineral.	Total.
Solid matter in suspension . . .	20	10	30
Solid matter in solution. . . .	20	50	70
Total	40	60	100

The solids in suspension can be reduced by subsidence, but the matter in solution must be oxidised, and this is effected by the action of bacteria.

In all cases the first step is to remove the largest and heaviest of the suspended matters, and this is done in detritus and screening tanks.

Such tanks should have a capacity of from 2 per cent. to 5 per cent. of the daily sewage flow and should contain iron gratings for the removal of floating matters, scum boards to arrest the scum; and they should be so designed as to reduce the velocity of flow of sewage sufficiently to allow the heaviest of the road grit, etc., to settle to the bottom of the tank.

The next step is usually to remove the lighter matters in suspension, and this is generally effected by providing tanks of suitable design: (*a*) to allow the particles to settle by gravity; (*b*) this process is sometimes expedited by the addition of chemicals known as precipitants; (*c*) for liquefaction of the solids in suspension by bacterial action and settlement combined, as in septic tanks; (*d*) assisting the action by presenting large surfaces to attract floating matter, as in the Travis tank or Dibdin slate filter.

Having freed the liquid as far as possible of the suspended solids with their organic contents, the effluent from the first part of the process must be subjected to a further treatment, which has for its object the oxidisation of the matters in solution and their conversion into harmless inorganic compounds which will not putrefy or take up oxygen from the stream into which it may be intended to discharge them.

This part of the process may be effected by application to land or to some form of bacterial filter; but if the latter it is usually necessary to have a further process for the removal of the solids in suspension which are evacuated by the filter. This can be effected either by land treatment, filtration, or settlement in tanks or lagoons.

The capacity of the tanks necessary for the removal of the suspended solids depends upon the strength of the sewage and a variety of circumstances.

If the tank can be used for quiescent settlement—i.e. filled with sewage, allowed to stand, and then emptied by decanting—a capacity of two hours to four hours' sewage flow will usually be sufficient provision. The usual method of using such tanks, however, is to use them continuously by drawing off over a long weir in a thin film at the same rate as the filling; in such a case the tanks should have from six to twelve hours' capacity.

If, however, the settlement be assisted by the addition of precipitants, and the tanks are used for continuous precipitation, their capacity may be reduced by one-half.

Septic tanks vary in capacity from fifteen hours to twenty-four hours' flow, and there is a tendency towards the smaller limit in present practice.

Precipitation by the use of chemicals has some effect upon the organic matter in solution as well as that in suspension, and by a sufficiently large expenditure it is possible to reduce the impurity in solution by as much as 50 per cent. The cost of doing this, however, would be prohibitive in actual practice. (See table, pages 1256 and 1257.)

The precipitants chiefly used are lime in a caustic state, 10 to 12 grains per gallon of sewage; lime and sulphate of iron or green copperas in the proportion of 6 grains to 3 grains of lime with 3 grains to 1 grain of copperas; lime and alumina in the proportion of 2 of the former to 1 of the latter, usually about 8 and 4 grains respectively; alumino-ferric, either with or without lime, proportion 10 to 7 grains lime and 5 to 3 grains alumino-ferric—if used without lime, up to 8½ grains per gallon.

Sludge.

The solid matters precipitated in the tanks produce what is known as sewage sludge, containing about 90 per cent. of water.

The final disposal of the sludge resulting from sewage purification has always been one of the chief difficulties of the problem of sewage treatment. The manurial value of the material is small, and it is a waste product of the process which must be got rid of as cheaply and as expeditiously as possible.

The methods of doing this may be briefly summarised as :—

1. Removal to sea.
2. Earth burial.
3. Cremation.
4. Drying in lagoons.
5. Drying in prepared beds.
6. Filter pressing.

The quantity of sludge per million gallons of sewage varies with the quality of the sewage, and the process adopted for the separation of the solid matter therein.

The method of estimating the quantity of sludge from a given process is as follows ;—

To the average number of grains per gallon of solids in suspension in the sewage add the grains of precipitant applied, and deduct from the total the grains of solids in suspension in the tank effluent ; this gives the grains of solid matter deposited from each gallon of sewage.

If
G = grains per gallon as above determined,
M = sewage per day in million gallons,
T = tons of wet sludge per day (90 per cent. water),
P = percentage of water in pressed cake,
C = tons of cake containing P per cent. water,

then $$T = \frac{100\,M \times G}{154}\ ;\ C = \frac{T}{100 - P}.$$

Pressed sludge cake containing 50 to 55 per cent. of water weighs about 14 cwts. per cubic yard.

Land Treatment.

The effluent from the various tank processes described may be suitably oxidised by application to land.

There are two distinct methods of using land. Where a suitable light friable soil can be obtained, filtration is the process adopted, the sewage passing downward through the soil to underdrains. If, on the other hand, the available land be all of a retentive character, which will not allow of the easy passage of water, the method adopted is to pass the tank effluent over the surface of the land by irrigation and to pick it up again in suitable catchwaters and reapply it to a fresh plot, and subsequently to a third or even a fourth plot before final discharge into the stream ; such land should not be underdrained, or only to a very slight extent.

The quantity of liquid which can be dealt with per acre of land will depend upon the character of the land, the strength of the sewage, and the degree of excellence of the preliminary treatment.

The following table gives a scale of quantities for various soils and average sewage, but great care must be exercised in applying the table :—

Soil.	Crude Sewage.		Settled Sewage.		Efficient Preliminary Treatment. Land Secondary.	
	Gallons.	Population.	Gallons.	Population.	Gallons.	Population.
Light sandy loam on gravel and sand	15,000	375	20,000	500	30,000	1,000
Sandy loam on gravel and sand	12,000	300	17,000	400	30,000	1,000
Peaty soil on gravel and sand	10,000	250	13,500	325	30,000	1,000
Sand and gravel	8,000	200	10,000	250	30,000	1,000
Gravelly loam on gravel and sand	6,000	150	8,000	200	20,000	666
Loam getting more clayey	4,500	125	6,000	150	15,000	500
Heavy loam on marl	3,000	75	5,000	130	12,000	400
Clay soil on clay	1,500	50	4,000	120	10,000	333
Stiff clay soil on dense clay	1,000	33	3,000	100	10,000	333

Artificial Bacterial Methods.

The alternative to land treatment for the final or oxidising process in sewage treatment is the use of bacteria beds. These are divided into two main classes :—

(*a*) Contact beds.
(*b*) Percolating or continuous filters.

Contact beds consist of tanks filled with material such as broken clinker, and used by filling them up with tank effluent until the filtering medium is just charged with liquid, allowing it to stand for a given period, draining off, and standing empty. The usual cycle of these operations is as follows :—

Filling	1 hour.
Standing	2 hours.
Draining	1 hour.
Aerating	4 hours.
	8 hours.

With this cycle three fillings per day are possible, and as the liquid capacity of a bed is 33 per cent. of its gross capacity, it follows that a bed is capable of treating each day a quantity of tank effluent equal to its gross capacity—i.e. when containing no filtering medium. The operations of filling and emptying may be done by hand valves or by automatic valves worked by floats. The depth of contact beds should not exceed 4 ft.

The second class of bacteria beds consists of masses of hard rough material, such as broken stone or slag of gauges varying from 3 ins. to ¼ in., over which the tank effluent is distributed in the form of spray and through which it percolates. The bed may or may not be enclosed by means of side walls, but it must have a good substantial floor, efficient means of drainage, and a proper system of distribution if good results are to be obtained. The depth of the beds varies from 4 ft. to 10 ft., depending upon the fall available and the size of the filtering medium.

The quantity of tank effluent which can be applied per square yard of surface of the bed depends upon the strength of the sewage and size of the material employed for filtering, and varies from 100 gallons per square yard per day to as much as 400 gallons, but this quantity cannot be maintained for long. A good average quantity is 150 gallons per square yard per day for a filter 6 ft. deep composed of materials averaging 2 ins. diameter ; this will allow the bed to take the hourly fluctuations in the rate of flow of sewage, and for short periods it will take storm-water up to three times the figure named.

The sprinkling process can be effected by a variety of arrangements, most of which have revolving arms operating in different ways, but there are also fixed jets and reciprocating travellers for rectangular beds.

The relative merits of contact beds and percolating beds are as follows :—

1. Where there is not much fall available, single contact beds can be constructed with about 3 ft. 6 ins. of fall ; double contact beds require 7 ft.

A continuous filter may be constructed with a fall of about 5 ft. 3 ins., but if a coarse filtering material is to be used this must be increased by 2 ft., or possibly more.

2. The tanks used for contact beds must be watertight, and therefore the facilities of the site for making watertight beds must be taken into consideration.

3. The weight of the material used in a continuous filter is greater than that of a contact bed, and therefore the stability of the ground must be taken into consideration.

4. Double contact beds must be provided if an equivalent degree of purification is required to that produced by a continuous filter.

5. Contact beds must be worked by automatic gear if three fillings per day are required, but may be operated by hand if two fillings are sufficient.

6. Generally speaking the gear for operating continuous filters is less liable to get out of order than that for contact beds.

7. Where the facilities for reducing suspended solids are limited, contact beds will sludge up and deteriorate much more quickly than continuous beds.

8. Percolating beds are more adaptable to fluctuating rates of flow than contact beds.

9. The first cost of percolating filters is less than that of contact beds for equal quantities of sewage.

10. Generally speaking, continuous filters give better results than contact beds.

SHOWING THE PERCENTAGE REDUCTION OF OXIDISABLE ORGANIC MATTER
(All quantities are stated

Liquid used for Experiment.	Percentage reduction of dissolved Oxidisable										
	1	2	3	4	5	6	7	8	9	10	11
Raw Sewage from	Lime in solution. 3·7	Lime in solution. 5·0	Lime in solution. 10·0	Lime in solution. 15·0	Lime as Milk . 15·0	Lime in solution. 3·7 Iron sulphate . 0·3	Lime in solution. 3·7 Iron sulphate . 1·0	Lime in solution. 3·7 Iron sulphate . 2·5	Lime in solution. 3·7 Iron sulphate . 5·0	Lime in solution. 5·0 Iron sulphate . 2·0	Lime in solution. 5·0 Iron sulphate . 4·0
Metropolitan system .	20	26	29	37	30	27	27	29	33	31	33
" "	6	10	28	64	12	10	10	18	32	27	34
" "	18	21	14	19	22	12	19	25	24	26	21
" "	26	26	26	37	10	24	25	38	33	30	31
" "	10	9	10	12	11	10	12	13	27	26	24
" "	23	29	29	34	27	23	27	35	37	33	33
" "	2	8	15	29	0	0	5	17	20	12	16
" "	12	25	30	33	25	16	22	24	32	26	30
" "	7	19	21	27	10	18	9	20	22	17	14
" "	5	12	13	18	4	5	3	11	16	13	15
" "	3	12	9	18	3	10	13	15	17	14	13
" "	15	16	19	48	44	11	15	17	20	17	21
" "	12	15	21	25	17	10	16	20	22	17	20
" "	9	15	19	23	19	11	17	20	21	18	18
" "	10	14	22	19	9	8	16	14	14	16	17
" "	12	12	17	24	12	7	12	12	22	19	19
" "	15	16	16	15	9	9	11	13	17	13	14
" "	8	8	20	35	8	11	8	14	17	14	20
" "	8	7	19	34	7	10	7	13	16	13	19
" "	3	4	4	4	9	4	4	4	8	7	6
" "	4	5	5	0	7	5	5	7	5	7	7
" "	12	20	26	28	16	15	22	23	24	23	22
" "	6	9	9	14	3	5	5	7	11	9	12
Average	11	15	19	25	13	11	13	18	21	18	19
Cost per annum for chemicals . .	£ 13,505	18,250	36,500	54,750	54,750	15,695	20,805	31,755	50,005	32,850	47,450
Other sources . .	..	52	..	..	..	..	..	..	..	58	61
" " . .	..	..	10	..	..	..	..	..	..	..	..

Lime taken as costing £1 per ton; Iron, £2 per ton; Alumina, £3 10s. per ton.

IN SOLUTION BY VARIOUS METHODS OF CHEMICAL PRECIPITATION.
in grains per gallon.)

Organic matter by treatment of liquid with

12	13	14	15	16	17	18	19	20	21	22	23	24	25	
Lime in solution . 5·0 Iron sulphate . 5·0	Lime in solution . 5·0 Iron sulphate . 8·0	Lime in solution . 5·0 Iron sulphate . 10·0	Lime in solution . 10·0 Iron sulphate . 10·0	Lime in solution . 5·0 Alumina sulph. . 5·0	Lime in solution . 5·0 Iron sulphate . 5·0 Animal charcoal . 5·0	Lime in solution . 5·0 Iron sulphate . 1·0 Alumina sulph. . 5·0	Lime in solution . 7·0 Iron sulphate . 1·5 Alumina sulph. . 5·0	Lime in solution . 10·0 Iron sulphate . 2·0 Alumina sulph. . 10·0	Lime in solution . 14·0 Iron sulphate . 3·0 Alumina sulph. . 10·0	Lime in solution . 15·0 Iron sulphate . 3·0 Alumina sulph. . 15·0	Lime . . . 28·0 Iron sulphate . 6·0 Alumina sulph. . 20·0	Lime . . . 56·0 Iron sulphate . 12·0 Alumina sulph. . 40·0	Lime . . . 700·0 Iron sulphate . 100·0 Alumina sulph. . 500·0	Average.
35	34	36	36	33	40	32	32	34	37	39	44	49	53	34
32	36	38	36	32	32	33	36	67	46	45	40	43	58	33
27	28	30	28	15	27	19	17	25	22	23	21	28	45	23
32	32	36	30	26	32	30	31	30	25	36	30	30	45	30
24	21	25	24	16	24	14	14	16	12	29	14	26	41	19
39	36	36	40	37	38	38	39	33	37	39	44	55	62	36
22	25	28	32	16	21	19	24	22	11	26	20	24	59	19
34	37	41	32	24	26	28	32	29	25	31	28	43	59	30
25	42	25	26	21	26	19	21	16	19	22	29	31	54	22
17	21	22	21	16	22	21	25	25	25	26	25	25	45	18
17	19	21	16	14	15	13	15	16	11	14	8	18	39	15
20	24	25	38	24	24	25	24	26	27	38	40	46	59	27
22	26	25	24	16	22	25	21	21	24	22	25	40	54	22
19	22	32	19	23	18	19	19	18	18	20	19	18	48	20
21	20	20	21	21	19	16	17	22	27	19	17	21	47	19
21	23	23	24	15	19	17	18	22	26	25	28	39	62	21
15	20	11	17	10	19	15	14	15	13	17	16	17	45	16
19	26	27	31	20	23	18	23	28	29	31	30	41	58	23
18	25	26	29	19	22	17	22	26	18	29	29	40	55	20
8	8	10	10	0	7	7	11	12	13	12	13	29	58	10
9	9	7	11	0	12	11	12	13	14	11	13	16	44	10
23	26	22	23	22	20	20	20	22	21	25	22	33	59	23
12	14	13	14	10	10	11	28	18	12	12	14	19	50	17
18	25	25	30	18	22	20	22	24	21	26	24	31	52	..
54,750	76,650	91,250	109,500	82,125	237,250	83,425	100,375	178,850	200,750	268,275	401,500	803,000	9,672,500	..
..	61	69	..	..	..	..	..	..	..	..	..	..	..	..
56	..	..	..	33	..	..	..	..	..	..	..	..	..	..

Volume of sewage taken at 156,800,000 gallons per day. (*W. J. Dibdin.*)

Local Government Board's Requirements.

The following are believed to be the requirements of the Local Government Board with regard to sewage purification plants :—

Quantity of Sewage.

Quantity of sewage per head is usually reckoned at the rate of 30 gallons per day for dry-weather flow, for domestic purposes. In some cases this figure is modified to 20 gallons. If there be trade refuse to be dealt with, this must be added.

The quantity of sewage and rainwater to be fully treated at the works is :—

(*a*) Where the sewers are on the combined system, three times the domestic average plus $1\frac{1}{10}$ trade refuse.

(*b*) Where the sewers are on the separate system, twice the domestic sewage plus $1\frac{1}{10}$ trade refuse.

The quantity of sewage and rainwater to be partially treated is :—

(*a*) Where the sewers are on the combined system, three times the domestic sewage plus $1\frac{1}{10}$ trade refuse.

(*b*) Where the sewers are on the separate system, four times the domestic sewage plus $1\frac{1}{10}$ trade refuse.

Any excess over these quantities may be discharged over the stormwater overflows.

The above degrees of dilution are to be calculated on the average rate of flow throughout the 24 hours. The effect of this is that during the daytime when the average rate of flow is exceeded, the degrees of dilution will be less than those stated above, and on the other hand during the night the degree of dilution will be largely exceeded.

Storm Overflows.

Storm overflows on sewers should as far as is reasonably practicable be avoided, but where they are necessary they should be placed in such positions and with the weirs so fixed that no nuisance is likely to result. In any district where there is an active river authority the Board will desire to be informed of the opinion of such authority in respect of any proposed overflows. In the absence of any special circumstances overflow weirs should be fixed so as not to come into operation until the flow exceeds six times that of the average dry-weather flow.

There should be no overflow for untreated sewage or stormwater at or near the disposal works.

Screens.

All liquid delivered at the disposal works should as a rule be passed through a screening chamber.

Storm-water Treatment.

A weir set at three times the dry-weather flow should be placed *below the screens*, and any volume passing over this weir should be dealt with in storm tanks. The tanks should be two or more in number and their total capacity should not be less than a quarter of the dry-weather flow. They should be so arranged that when they are full they will act as 'continuous flow' tanks, and that they can be readily emptied and kept empty when no liquid is passing into them.

The liquor from the tanks can be discharged without further treatment except in special cases, and the sludge should be dealt with by any of the usual methods which may be most suitable in the particular circumstances.

In cases where a sufficient area of suitable land is available for the purpose, detritus tanks followed by irrigation may be substituted for the storm tanks.

Sewage Treatment.

Detritus Tanks.—There should be two or more detritus tanks below the screening chamber. The capacity of each tank should be about $\frac{1}{10}$th of the dry-weather flow.

Septic Tanks.—Septic tanks should not be less than two in number, and their total capacity should be about equal to the dry-weather flow.

Chemical Preparation Tanks.—For *quiescent* treatment there should not be less than eight tanks, each of which should have a capacity equal to about two hours' dry-weather flow.

For *continuous flow* treatment there should not be less than two tanks, with a total capacity of at least eight hours' dry-weather flow, and in most cases a greater number of tanks will be desirable.

Settling Tanks.—For *quiescent* treatment—same as chemical precipitation tanks.

For *continuous flow* treatment there should not be less than two tanks with a total capacity of from ten to fifteen hours' dry-weather flow.

Filters.—In determining the sizes of percolating filters and contact beds, the Board have, in order to allow for the strength of the sewage to be treated, adopted the division into 'strong,' 'average' and 'weak' sewages recommended by the Royal Commission.

The strength of sewage should, when possible, be ascertained by analysing average samples of crude sewage taken in dry weather at frequent and regular intervals throughout seven days, and in proportion to the flow. Possibly, in the case of small works, the period for taking samples for analysis might be somewhat shorter, but the period should not be less than forty-eight hours, and Saturday and Sunday should be avoided. In every case, the daily rainfall during the period when the samples were being taken and during the preceding days should be ascertained.

The analysis should in all cases include the following items :—

In parts per 100,000 *by weight.*

(1) Ammoniacal nitrogen.
(2) Albuminoid nitrogen.
(3) Total nitrogen.
(4) Oxygen absorbed from strong permanganate in three minutes at 80 degrees Fahr.
(5) Oxygen absorbed from strong permanganate in four hours at 80 degrees Fahr.
(6) Suspended solids.
(7) Soluble solids.
(8) Chlorine.

It is also desirable that the amount of dissolved oxygen taken up during the oxidation of the ammoniacal and organic matter of the sewage should be given.

The results of analysis would of course require to be properly interpreted ; but as a rough guide it may be taken that from the figure for 'Oxygen absorbed from strong permanganate in four hours at 80 degrees Fahr.' the strength of the sewage may be very roughly classified as follows :—

'Strong' sewage	17 to 25 parts per 100,000
'Average' „	10 to 12 „ „
'Weak' „	7 to 8 „ „

In cases where the sewage cannot be analysed its strength should be estimated according to the water consumption, the flow per head, the kind of sewage system, whether water-closets are in general use, the volume and nature of trade waste, the amount of dilution by subsoil or surface water, etc.

Failing satisfactory evidence to the contrary it will be desirable to assume that the sewage is 'strong,' for the purpose of estimating the required capacity for the disposal works.

For the purpose of showing the *minimum* total cubic contents of filters required for treating three times the dry-weather flow in different cases, the tables A and B have been prepared on the data given in the Commission's Report.

The rates of filtration given by the Commission are rates which can generally be *doubled* in wet weather. Where it is proposed to deal with *three* times the dry-weather flow, the Commission say that it would generally only be necessary to provide 1½ times the capacity of filter required for the dry-weather flow. This basis has been adopted in arriving at the figure in the Tables A and B.

TABLE A.—CONSTANTS FOR CALCULATING THE MINIMUM CUBICAL CONTENTS OF PERCOLATING FILTERS.

Preliminary Treatment.	Strong Sewage.		Sewage of Average Strength.		Weak Sewage.	
	Coarse or Medium Material.	Fine Material.	Coarse or Medium Material.	Fine Material.	Coarse or Medium Material.	Fine Material.
Detritus tanks .	15	*	25	*	40	*
Septic tanks. . . .	45 †	*	70	*	100	100
Settlement tanks (continuous flow) . .	45 †	*	70	*	100	100
Settlement tanks (quiescent) + . . .	50 †	25	100	70	130	130
Precipitation tanks (continuous flow) . .	65	50	100	80	150	175
Precipitation tanks (quiescent). . . .	100	65	130	130	170	200

Notes as to Filtering Material.

(*a*) A filter may be regarded as *coarse* if the material will not pass through a 1-in. sieve; as *medium* if it will pass through a 1-in. but not through a ½-in. sieve; and as *fine* if it will pass through a ½-inch sieve.

(*b*) *Coarse* material will be desirable in all cases where the liquid to be treated contains much suspended matter.

(*c*) In the cases marked * the use of fine material would not be desirable unless the circumstances were exceptional.

† If *medium* sized material were used in these cases the figures should be reduced by about 10.

TABLE B.—CONSTANTS FOR CALCULATING THE MINIMUM CUBICAL CONTENTS OF CONTACT BEDS.

Preliminary treatment.	Strong Sewage.			Sewage of Average Strength.			Weak Sewage.		
	Single Contact.	Double Contact.	Triple Contact.	Single Contact.	Double Contact.	Triple Contact.	Single Contact.	Double Contact.	Triple Contact.
Detritus tanks	—	—	25 *	—	25	†	—	38	†
Septic tanks	—	—	33	—	38	†	75	66 ‡	†
Settlement tanks (continuous flow)	—	—	33	—	38	†	75 *	66 ‡	†
Settlement tanks (quiescent)	—	—	44	—	50	†	100	†	†
Precipitation tanks (continuous flow)	—	33	†	—	50	†	133 ‡	†	†
Precipitation tanks (quiescent)	—	43	†	—	66 *	†	133 ‡	†	†

Notes to Table B.

(*a*) The beds should not be less than 2 feet 6 inches nor more than 6 feet in depth.

(*b*) The different series of beds, in double and triple contacts, should have an equal cubic contents, failing any evidence to the contrary.

(*c*) Where a blank is left in the table the particular treatment indicated would only be desirable in exceptional circumstances, as the method would not generally be economical.

(*d*) In the cases marked thus †, the particular treatment indicated would only be necessary in exceptional circumstances (e.g. where an unusually good effluent is required).

(*e*) Where three times the d.w.f. has to be dealt with in wet weather, the individual beds, in the cases marked thus ‡, should be small (to facilitate rapid filling and emptying), or the total cubic contents of the filters should be increased.

(*f*) The average liquid capacity of a cubic yard of contact bed is about 50 gallons.

* There are no data in the Commission's Report with regard to these cases.

In order to ascertain the minimum total cubic contents of the filters required, divide the dry-weather flow by the *appropriate figure* (having regard to the strength of the sewage and the kind of treatment proposed), in the tables above, and the result will be the number of cubic yards which the filters should contain for treating up to three times dry-weather flow.

In cases where a sufficient area of suitable land is used for irrigating the filtrate it will probably suffice if the total cubic contents of the filters is half that provided for by the tables, but where the filter capacity is so reduced it may be necessary in wet weather to restrict the flow to the filters to about 1½ times the dry-weather flow and to pass the remainder of tank liquor direct to the land.

Effluent Tanks or Filters.—Where the effluent from filters is not irrigated on land, tanks (with a capacity equal to about two hours' dry-weather flow and with provision for removing the sludge), or shallow straining filters, will in most cases be necessary for the purpose of preventing the suspended matters in the filtrate from passing into the river.

When the sewage, after previous sedimentation, is applied to land filtration the quantity per acre of the most suitable land shall not exceed 15,000 gallons of dry-weather flow per acre per day or the sewage from 500 persons, and surplus land up to 25 per cent. is usually required to enable the land to be rested. This area will be increased, if the land be not of the first quality.

When the sewage, after previous sedimentation, is applied to land by broad irrigation, the quantity is not allowed to exceed 4,500 gallons of dry-weather flow per acre per day, or the dry,

Activated Sludge Ltd

Telegrams:
'ACSLUDGETI,
SOWEST, LONDON.'

Telephone No.
5945 VICTORIA.

Activated Sludge Process
for the Purification of Sewage and Trades Waste.

Protected at home and abroad by many Patents. Adopted by seven Government Departments and many Municipal Authorities.

WRITE FOR BOOKLET No. K.Y.B.1.

Address all enquiries to

ACTIVATED SLUDGE, LTD.

14 Howick Place, Victoria Street, Westminster, London, S.W. 1.

F. 1260

Introduced in 1914-15 to the Cities of Milwaukee, U.S.A., Worcester, Eng., &c.

The Activated Sludge Process —of— Sewage Treatment

is now being adopted in all parts of the world

Because :—

1. It is hygienic, aerobic throughout, without smell.
2. Tanks are self cleansing, surplus sludge ejected periodically.
3. Existing tanks may be converted for the treatment of sewage, thus saving heavy expenditure in the building of new tanks.
4. It dispenses with filters and secondary treatment.
5. It reduces area and dimensions of tanks required.
6. It involves practically no loss of fall and often saves pumping.
7. It converts the sludge into a valuable fertiliser.

Ask for Booklet No. K.Y.B. 1.

Address all enquiries to:—

ACTIVATED SLUDGE, LTD.

14 Howick Place, Victoria Street, Westminster, London, S.W. 1.

Telegrams: 'Acsludgeti, Sowest, London.' Telephone No. 5945 Victoria.

weather sewage from 150 persons. Surplus land must also be provided in such cases from 25 per cent. to 50 per cent. for resting purposes. Where the land is less suitable, the quantity per acre may be reduced to as little as 3,000 gallons per day.

When sewage is treated by precipitation or bacterial processes and the final purification is effected by land, the tank or filter effluent may be applied at the rate of 30,000 gallons per acre per day or the sewage from 1,000 persons as a maximum on the best land.

In all cases where land of sufficient area and of a not unsuitable character can be obtained at a reasonable cost the final purification must be by land.

Activated Sludge Process.

(*Communicated.*)

The latest development of the sewage problem is that known as the 'Activated Sludge Process,' by which purification is carried out by oxidation of the organic matter present in the sewage by means of air blown through the liquid in the presence of an accumulation of sludge.

Experiments carried out at Manchester during 1913–14 demonstrated that by continually blowing air through successive quantities of sewage, decanting the liquid, and retaining the sludge, the latter became charged with micro-organisms which had the property of increasing enormously the purification effected by the simple aeration of the sewage. The deposit obtained in this manner has now become known as 'Activated Sludge.'

The addition of activated sludge to sewage, when combined with further blowing of fine bubbles of air through the mixture in such a manner as to create and maintain a circulation of air, sludge and liquid, sufficient to prevent settlement of the sludge and keep the sludge and air bubbles equally diffused throughout the liquid, produces a very marked change in the composition of the sewage; first a clotting or clarifying action takes place, then a rapid carbon oxidation process and finally nitrification.

Upon standing, the sludge rapidly settles and separates from the liquid, which when drawn off is not liable to putrefaction and is practically free from bacteria, whilst the sludge is also rendered innocuous and is found to contain a large proportion of nitrogen in a very available form for fertilising purposes.

It will be seen from the following table, which gives the composition of the sludge, that it has a large nitrogen content, so that its value as a fertiliser is extremely high; it contains, in fact, three to four times as much nitrogen as the average septic tank sludge:—

Organic and volatile matter . . .	64·70–70·40 per cent.
Minerals	35·30–29·60 ,,
Nitrogen	3·75– 7·09 ,,
Phosphoric acid	2·10– 4·20 ,,

One of the main difficulties has been to secure a complete diffusion of the air through the body of the sewage. This has been successfully overcome by appliances supplied by *Activated Sludge Ltd.*, 14 Howick Place, Victoria Street, Westminster, S.W. 1.

A further difficulty until recently was in obtaining a satisfactory settlement with a continuous flow, but due to the researches of Mr. W. Clifford, A.M.I.C.E., of Wolverhampton, this problem has been solved by a form of tank inlet which destroys the energy of the inlet current and eddies.

The Activated Sludge Process has many advantages; the chief of these are as follows:—

(1) The purification is rapid and perfect, and the effluent fully oxidised.
(2) Putrefaction stops at once, and the system is free from smells and flies.
(3) The plant can be installed close to buildings, so that long outfall sewers are often unnecessary.
(4) An inoffensive sludge which is a valuable manure is obtained.
(5) Only a small area of land is required.
(6) There is practically no loss of head (4 ins. to 10 ins.), and the sludge is raised automatically.
(7) Trade wastes which are alkaline, or of constant but low acidity, give no difficulty.
(8) A very small staff is needed, but it requires at least one skilled attendant.
(9) Capital costs are low owing to the simplicity of the plant, the small tank area needed (less than for sedimentation or septic tanks), and the absence of filter beds. Further, by installing the plant near a town, there may be a saving in the cost of outfall sewers.
(10) Maintenance costs are low owing to the revenue which may be obtained by the sale of manure.

Taken all round, the cost of installing and maintaining a plant is generally about two-thirds of the cost of septic tanks and filter beds. It should be mentioned that existing tanks can usually be converted, and in many places this has been done quite successfully at small cost.

The plants work well either with a large or small population, and would appear to be well suited for military stations. There are no real disadvantages in the system except possibly the production of compressed air, which is so essential for the working. In many places, compressed air is required for raising the sewage by means of ejectors, and no further compressing plant is needed.

The amount of purification of the liquid sewage depends upon the period of aeration allowed, and hence it is capable of dealing with very foul sewage which would be difficult of treatment by other processes.

The entire patents for the process are held by Messrs. Activated Sludge, Ltd., of 14 Howick Place, Victoria Street, Westminster.

The plants which have now been installed upon this process number twenty-three, a list of which, showing population served and volume of sewage treated, is set out below.

No.	Place.	Galls. of Sewage per day.	Population served.
1	Baguley, Cheshire	20,000	300
2	Davyhulme 1st (Manchester)	60,000	—
3	Worcester	750,000	18,500
4	Stamford, Rutlandshire	100,000	5,000
5	Aintree, Lancashire	14,000	2,000
6	Blackpole, Worcestershire	30,000	3,000
7	Withington (Manchester)	375,000	8,770
8	St. Albans, Herts.	30,000	1,500
9	Tunstall, Staffs.	300,000	—
10	U.S.A. Red Cross, Hampshire	60,000	2,000
11	Moreton, Dorset	12,000	400
12	Davyhulme 2nd (Manchester)	1,000,000	16,700
13	Harpenden, Herts.	8,000	—
14	Birmingham	10,000	—
15	Jamshedpur, India	—	—
16	Holte, Denmark	110,000	5,000
17	Burmeister, Denmark	6,600	1,500
18	Sibpur, India	—	1,200
19	Kimberley, South Africa	—	1,000
20	Witney Blanket Co., Oxfordshire	2,000	70
21	London County Council, Kent (Crossness)	110,000	—
22	Sarisbury Court, Southampton	—	400
23	Bangalore, India	—	150

Standard of Purity for Sewage Effluents.

The Royal Commission on Sewage Disposal appointed in 1898 put forward the following provisional standard of purity for sewage effluents for the guidance of Local Authorities.

1. That it should not contain more than three parts per 100,000 of suspended matter; and
2. That after being filtered through filter paper it should not absorb more than
   (*a*) 0·5 part by weight per 100,000 of dissolved or atmospheric oxygen in 24 hours.
   (*b*) 1·0 „ „ „ „ „ 48 hours; or
   (*c*) 1·5 „ „ „ „ „ 5 days.

In 1913 the Royal Commission issued their 8th Report, in which they summarised their conclusions as follows:

(*a*) The law should be altered so that a person discharging sewage matter into a stream shall not be deemed to have committed an offence under the Rivers Pollution Prevention Act, 1876, if the sewage matter is discharged in a form which satisfies the requirements of the prescribed standard.

(*b*) The standard should be either the general standard or a special standard which will be higher or lower than the general standard as local circumstances require or permit.

(*c*) An effluent in order to comply with the general standard must not contain as discharged more than 3 parts per 100,000 of suspended matter, and with its suspended matters included must not take up at 65° F.' (18·3° C.) more than 2·0 parts per 100,000 of dissolved oxygen in five days. This general standard should be prescribed either by Statute or by Order of the Central Authority, and should be subject to modifications by that Authority after an interval of not less than ten years.

(*d*) In fixing any special standard the dilution afforded by the stream is the chief factor to be considered. If the dilution is very low it may be necessary for the Central Authority, either on their own initiative or on application by the Rivers Board, to prescribe a specially stringent standard, which should also remain in force for a period of not less than ten years.

(*e*) If the dilution is very great the standard may, with the approval of the Central Authority, be relaxed or suspended altogether. Our experience leads us to think that as a general rule, if the dilution, while not falling below 150 volumes, does not exceed 300, the dissolved oxygen absorption test may be omitted, and the standard for suspended solids fixed at 6 parts per 100,000. To comply with this test no treatment beyond chemical precipitation would ordinarily be needed. If the dilution while not falling below 300 volumes does not exceed 500 the standard for suspended solids may be further relaxed to 15 parts per 100,000. For this purpose tank treatment without chemicals would generally suffice if the tanks were properly worked and regularly cleansed

These relaxed standards should be subject to revision at periods to be fixed by the Central Authority, and the periods should be shorter than those prescribed for the general or for the more stringent standards.

(*f*) With a dilution of over 500 volumes all tests might be dispensed with, and crude sewage discharged, subject to such conditions as to the provision of screens or detritus tanks as might appear necessary to the Central Authority.

EDITORIAL NOTE.—The standards mentioned in (*e*) and (*f*) are not intended to apply to effluents discharged into streams which are used for drinking water or to streams the water of which, at the point of discharge of the sewage effluent, normally takes up more than 0·2 parts per 100,000 of dissolved oxygen in five days at 60° F. Up to the present time the proposals contained in the Report have not been embodied in any Act of Parliament, and have therefore no official authority, and must be treated as suggestions only.

HOUSE DRAINAGE.

House drains are usually made of salt glazed ware pipes varying from 3 ins. to 6 ins. diameter. Drains taking the discharge of water-closets should not be less than 4 ins. diameter.

Wherever possible all house drains should be laid outside the building; they should be laid as far as practicable in straight lines with easy bends, furnished with inspection chambers, and should be arranged so that they may be easily got at in case of necessity.

When it becomes imperative that drains should pass under the buildings, cast-iron pipes should be used and they should be laid in a straight line between two inspection chambers outside the building.

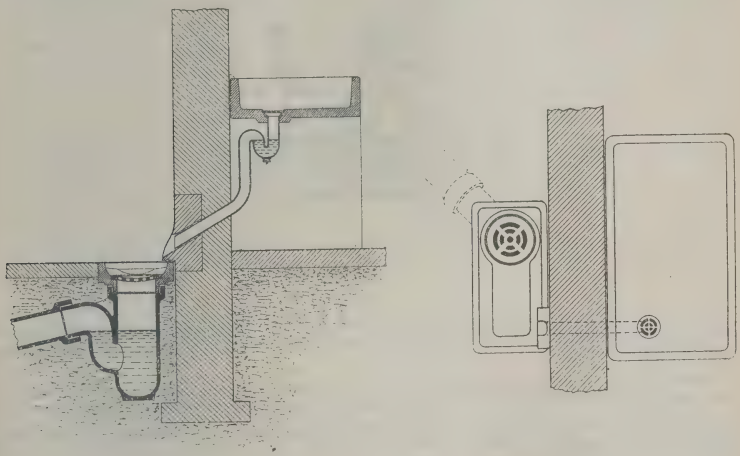


FIG. 3.—Section and Plan of Scullery Sink, with connection to Gully.

The size of drain-pipes should be sufficient to carry off sewage at the rate of forty gallons per head of the maximum population drained in six hours, and in addition rainfall at the rate of ½ in. per hour upon the area of roofs and paved yard surfaces draining to the sewers.

It was formerly considered essential that all private drains should be trapped from the sewer at a point as near as possible to the junction with the sewer and that an inspection chamber should be built at the trap and should be provided with a fresh-air inlet.

The Local Government Board appointed a Departmental Committee to advise upon the desirability of fixing these intercepting traps near the sewers. In 1912 the Committee made their report, and stated that the case for the necessity of the intercepting trap had broken down, and that it is not only unnecessary but in many cases is harmful. It is probable, therefore, that there will be an early modification of building regulations in most towns, deleting the byelaws requiring intercepting traps between sewer and drain.

The recommendation of the Committee must not be understood to imply the uselessness of traps other than the main intercepting trap : it is just as important as ever that all inlets to drains should be trapped between the drain and the house.

The general scheme of drain trapping should be based upon the following lines :—The main drain to each house or building should be carried from the sewer without a trap or air inlet to the furthest point where a branch connection is to be made, and there a ventilating shaft should be erected and carried up well above the eaves of the house and clear of all windows, dormers, skylights, and chimneys. The end of the pipe should be fitted with a wire guard ; most cowls are useless.

Branch drains for sink wastes, bath wastes, and rain-water pipes should terminate with trapped glazed stoneware gullies placed at ground-level and paved round with a containing curb of blue brick on edge on three sides and a short paved channel at least 18 ins. long on the other on to which the waste etc. pipes should discharge. Bath wastes etc. from upper floors should be made to discharge in the open air into the cistern heads of down-pipes which are themselves cut off from the gully as above described.

Branch drains for soil pipes should be untrapped at the foot of soil pipes and the latter should be carried up outside the external walls of the building in a straight line to above the eaves to form a ventilating column, the same precautions being adopted as in the case of the ventilation column for the end of the drain. Where there is only one soil-pipe connection it can often be arranged at the end of the main drain and so avoid the provision of more than one ventilation shaft.

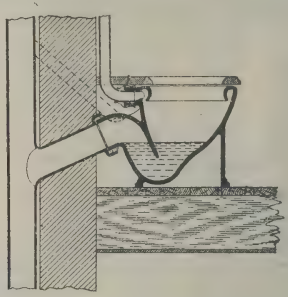


FIG. 4.—Section of Water-closet.

When it is found inevitable that soil-pipes should be fixed inside buildings they should be of drawn lead throughout their entire length and should be carried up through the roof to give thorough ventilation.

Sinks and water-closets should, whenever practicable, be placed against external walls so that they may discharge at once into a drain outside the main wall, as shown in figs. 3 and 4.

Water-closets are best placed where they can be thoroughly ventilated directly from the external air with windows extending to the ceilings, and they should be arranged to be entered from a well-ventilated ante-room or passage with doors to shut off communication with the other portions of the house.

LONDON COUNTY COUNCIL REGULATIONS FOR WATER-CLOSETS (*Abridged*).

Building (for closet) must have one external wall abutting on a space 100 ft. square super (or if in a basement approached directly from an opening at least 5 ft. wide and 40 ft. square super) and must not be directly approached from a room used for habitation, work, storage, or preparation for food. Walls abutting on such rooms must be of brick from floor to ceiling.

A window opening directly into the external air at least 2 ft. square, and in addition at least one ventilating air brick, air shaft, or other effectual means of ventilation must be provided.

Floor of closets approached from the external air to be of hard impervious material, having a fall to the door of half inch to the foot.

Door with proper fastening to be provided.

Cisterns giving an adequate and effectual flush must be fitted to all closets. Closet cisterns must be entirely separate from cisterns containing drinking water. A proper supply of water to the cistern must be supplied. No service pipe may be allowed to be connected in any way with any part of the closet apparatus except the cistern. Downpipe and union between closet and cistern must have internal diameter of not less than 1¼ in.

Closet Basin and Trap.—The basin must be of non-absorbent material of such shape that a sufficient quantity of water is held in such a manner that the soil falls direct into the water clear of the sides.

No container to be fitted under basin.

An efficient syphon trap must be fitted immediately behind or in connection with the basin. The trap must be constructed to always provide a sufficient water-seal between the basin and the drain. Traps must be ventilated where more than one closet is connected with the same soil pipe. Ventilating pipe must not be less than 2 ins. internally, and connect with the arm of soil pipe not less than 3 ins. nor more than 12 ins. from the highest part of the trap. Ventilation must be on the drain side of the water-seal, and the ventilation pipe must be carried either to the open air at a point as high as the top of the soil pipe or to the soil pipe above the highest closet.

No D trap or similar trap must be fitted.

Soil pipes must be outside buildings wherever practicable. Soil pipes inside buildings must be drawn head with wiped joints, or heavy cast iron with molten lead joints, properly caulked. Pipe to be continued without diminution and as straight as possible to a height to allow of safe outlet by open end for foul air. Height must be above highest part of roof of building, and where practicable 3 ft. above any window that lies within 20 ft. measured in a straight line from open end. Wire guard to be fitted to open end, the area of the opening in which must be equal to not less than size of pipe.

Soil pipe must not directly connect with waste of bath, rain-water pipe, or to a sink, and soil pipe must have no trap in it nor between it and the drain.

JOINTS.

Lead Pipe to Iron.—A brass thimble to be used—the lead wiped to open end and the other connected with the iron by a joint of molten lead, properly caulked.

Stoneware to Lead.—Brass socket or thimble wiped to lead and connected to stoneware with Portland cement.

Stoneware to Iron.—Stoneware to be inserted into socket in iron and connected with joint made with Portland cement.

DIMENSIONS AND WEIGHTS OF SOIL PIPES.

Internal diameter must not be less than 3½ inches.

Diameter.	Lead. Weight per 10 feet Length not less than	Iron. Weight per 6 feet Length not less than
3½ inches	65 lbs.	48 lbs.
4 „	74 „	54 „
5 „	92 „	69 „
6 „	110 „	84 „

Water-closet basins are all made with traps attached, and this is sufficient protection against sewer air coming into the house from the soil pipe. To ensure proper ventilation of the branch pipe from the w.c. trap to the soil pipe and to prevent unsealing by syphonic action where closets are placed over one another and are connected to the same soil pipe, a small auxiliary ventilation pipe should be connected near the trap and be carried upwards at an angle of about 45° into the soil pipe, as shown in fig. 4.

Water-closet basins should be so designed as to present as large a surface of water as possible into which the excreta may fall when the closet is in use; they should have flushing appliances which effectually wash the whole of the internal surface of the basin with the minimum of water,

and they should have all parts easily accessible for cleansing by hand. Closets with a syphonic action are most effectual and much to be preferred to any type of valve closets. The pedestal type of closet with lift-up lid so that it can be used as a urinal is the one most in favour.

Water-closets should be fitted with waste-preventing water-cisterns of not less than 2-gall. capacity and a 3-gall. cistern if allowed by the local waterworks regulations is preferable.

Flush pipes should be of lead or copper and should be 2 ins. diameter with a head of 6 ft. to give efficient flushing.

Urinals should not be provided at all inside private houses, and whenever they are fixed inside a building they should be made throughout of glazed stoneware with curved surfaces and as few joints as possible so as to avoid any angles in which the urine can lodge. They should be fitted with lead or copper sparge pipes capable of thoroughly washing all the surfaces liable to be soiled with urine.

Slate urinals may with advantage be painted with a mixture of common coal tar and naphtha; they should be thoroughly washed out at least once a day. Slate is not a material to be recommended for the construction of urinals; all stalls and basins should be of glazed stoneware.

The usual allowance of water for each stall in a public urinal is half a gallon per minute. The waste pipes for each stall should be 2 ins. in diameter.

White glazed bricks are preferable for facing the walls of public urinals; ordinary brick walls cemented over and painted are decidedly objectionable. The joints in the brickwork must not be thick under any circumstances, as they would present an absorbent surface.

Baths and housemaids' sinks should be of glazed porcelain fitted with trapped waste pipes which should be carried through the nearest external wall and be made to discharge in the open air over the cistern head of a downpipe: the top of the cistern head should be covered with a copper wire guard to keep out the birds, dead leaves, etc.

Kitchen and pantry sinks should be of glazed stoneware and should be fixed against an external wall, and their trapped lead waste-pipes should be carried through the wall and be made to discharge in the open air upon a paved channel leading to a trapped gully.

SECTION XXV

PART II

IRRIGATION — AVAILABLE SUPPLY — EVAPORATION — ABSORPTION—EVAPORATION FROM SOILS—LOSSES FROM IRRIGATION CANALS — MEAN VELOCITIES — CRITICAL VELOCITY—DUTY OF WATER.

Contributed by Reginald Ryves, Assoc.M.Inst.C.E., M.Cons.E.

(Author of 'A Note on Mass Dams and Dams of Arches,' etc.)

IRRIGATION.

Available Supply of Water.

Irrigation from Large Rivers.—The discharges of the river during the seasons when the water will be required are calculated from the observed depths over weirs, from differences of water level above and below bridge openings, and by the methods hereafter to be described under 'Capacities of Canals.' Whether these supplies will be fully available or not may depend upon the water levels which can be maintained above the weir, and upon what cultivable areas are commanded by the water at these levels. In this respect the scheme must be considered as a whole, and by making suitable regulations as to the crops which may be grown on certain areas and at certain seasons the availability of the supply may be increased.

Supplies from Defined Catchments.—In the case of a supply from a defined catchment the estimates of run-off may be made by the methods described under 'Rainfall,' the necessary deductions being made when the whole of the water stored cannot be directly utilised. Out of the whole recorded range of annual or seasonal rainfalls, and corresponding runs-off, one will be chosen as that suitable as a basis for the project, and the capacity of the reservoir designed accordingly. A table drawn up for catchment areas in Nagpur, Central Provinces, India (*Strange*), gives estimated yields for monsoon rainfalls ranging from 1 in. to 60 ins., and from this table the following examples are taken.

MONSOON RAINFALLS AND ESTIMATED RUNS-OFF FOR NAGPUR.

Monsoon Rainfall in Inches.		1	5	10	20	30	40	50	60
Runs off in millions of cubic feet per square mile	Good catchment	0·002	0·116	0·999	6·970	18·33	34·85	56·69	83·63
	Aver. catchment	0·001	0·087	0·749	5·227	13·75	26·13	42·51	62·73
	Bad catchment .	0·001	0·058	0·499	3·485	9·17	17·42	28·34	41·87

Evaporation from a Water Surface.

The actual rate of evaporation from the surface of a pool of water depends mainly on four factors: the temperature of the water itself; the velocity of the wind; the degree of humidity of the air; and the temperature of the air. As regards the first, this is more or less proportional to the air temperatures if we are measuring evaporation over considerable periods of time in different places. As regards the second, the velocity of the wind, this factor does not as a rule vary so much as others if we take a period such as a year; but it sometimes varies a great deal within areas of moderate extent, and it should be taken into consideration in making estimates of evaporation. The degree of humidity varies very greatly, not only in different countries or different districts, but also in proportion to the distance from the sea and, in some cases, with

elevation. There may be a marked decrease in the humidity of the air in a distance of a few miles from a long, straight coast line, the decrease being more gradual as we pass farther inland. There are also sharp differences between places just within and those just without the path of a monsoon current. The relation between water temperature and the rate of evaporation was studied at four stations in California (*Fortier*) with the following results, the evaporation being in sixty-fourths of an inch per day. The tanks used were of galvanised iron, 22 ins. in diameter and 28 ins. deep sunk in the ground.

Water Temperature and Evaporation.—53°F., 6; 62°F., 12; 73°F., 23; 80°F., 31; 88°F., 39.

The following were the results of experiments to test the rates of evaporation in air currents of different velocities, that in still air being taken as unity. (*Russell.*)

Wind Velocity and Evaporation.—Velocity 0, evaporation 1·00; velocity 5 miles an hour, evaporation 2·2; velocity 15, evaporation 4·9; velocity 20, evaporation 5·7; velocity 25, evaporation 6·1; velocity 30, evaporation 6·3. Observations taken at the Assuan reservoir show the relative importance of average month's temperatures and average month's wind velocities. The results do not, of course, aid in the establishment of a relation between actual wind velocities, actual temperatures, and rates of evaporation, but they are of practical use for purposes of comparison.

AVERAGE VELOCITIES OF WIND, AVERAGE TEMPERATURES, AND RATES OF EVAPORATION, ASSUAN, EGYPT. LATITUDE, 24°. YEAR 1912.

Month .	Jan.	Feb.	Mar.	Apr.	May	June	July	Aug.	Sept.	Oct.	Nov.	Dec.
Wind velocity, miles per hour .	3·6	4·2	6·6	5·3	4·2	3·0	3·3	3·5	1·2	1·7	3·4	3·7
Temperature °F. .	60·7°	66·7°	72·3°	80·7°	87·2°	91·4°	91·2°	92·1°	89·3°	83·3°	73·6°	62·2°
Evaporation, ins. per day	0·12	0·17	0·24	0·31	0·35	0·45	0·43	0·44	0·32	0·29	0·21	0·15

Humidity and Evaporation.

By taking a sufficient number of observations of rates of evaporation, it is possible to establish at the same time the relation between evaporation and air temperature and that between evaporation and humidity. Experiments of this kind with water at a constant temperature seem to be lacking, nor have observers, as a rule, noted the actual temperatures of the water. Results are, however, comparable in groups, such as those with small experimental tanks, and those with floating tanks in deep and shallow waters, respectively.

The following table gives the results of observations at Vehar reservoir, near Bombay, latitude 19° (*Conybeare*), and in Nagpur, 21° (*Binnie*). The values seem to be low, but this hardly affects their application in practice, as the engineer would draw the curves and fix his own zero line on the result of monthly or annual evaporations for the locality.

APPROXIMATE MONTHLY EVAPORATIONS IN FEET WITH GIVEN TEMPERATURES AND RELATIVE HUMIDITIES.

Percentage of Saturation.	Mean Temperatures, Fahr.						
	65°	70°	75°	80°	85°	90°	93°
88	0·14	0 17	0·19	0·21	0·24	0·27	0·30
85	0·19	0·22	0·22	0·23	0·27	0·30	0·33
80	0·22	0·27	0·29	0·30	0·32	0·36	0·38
75	0·24	0·29	0·33	0·35	0·37	0·40	0·42
70	0·26	0.30	0·34	0·35	0·38	0·42	0·44
65	0·28	0.31	0·34	0·36	0·40	0·44	0·46
60	0·30	0·35	0·38	0·40	0·42	0·47	0·49
55	0·32	0·37	0·42	0·46	0·50	0·52	0·54
50	0·35	0·40	0·45	0·50	0·55	0·60	0·62
45	0·45	0·50	0·57	0·67	0·71	0·75	0·78
40	0·61	0·66	0·70	0·72	0·77	0·82	0·84

The figures in the following table are taken from results of observations by the Egyptian Public Works Survey Department (*Cay*). It is clear that the rate of evaporation depends considerably upon the mean altitude of the sun, since, for air temperatures which are nearly the same, the rate of evaporation is affected by the latitude and the month. This is shown by the small tables, and the evaporation at latitude 24° in October with air temperature 83° and humidity 41 may be compared with that at latitude 27° in August, with nearly the same humidity.

OBSERVATIONS BY EGYPTIAN PUBLIC WORKS DEPARTMENT.

Locality	Abassia, Cairo. Lat., 30° 1′.					
Month	May.	June.	July.	Aug.	Sept.	Oct.
Mean temperature of month, Fahr.	75°	78°	81°	80°	77°	73°
Relative humidity	47	50	55	62	70	71
Evaporation, inches	·32	·25	·20	·22	·17	·18

Locality	Asyut. Lat., 27° 11′.					
Month	May.	June.	July.	Aug.	Sept.	Oct.
Mean temperature of month, Fahr.	81°	84°	—	85°	81°	76°
Relative humidity	26	26	—	40	46	56
Evaporation, inches	·55	·61	—	·51	·37	·27

Locality	Assuan. Lat., 24° 2′.					
Month	May.	June.	July.	Aug.	Sept.	Oct.
Mean temperature of month, Fahr.	90°	90°	90°	90°	89°	83°
Relative humidity	16	20	20	20	32	41
Evaporation, inches	·62	·60	·52	·52	·47	·35

Temperature 80°–81°F.				Temperature 89°–90°F.			
Humidity.	Evap.	Month.	Lat.	Humidity.	Evap.	Month.	Lat.
62	·22	Aug.	30°	32	·47	Sept.	24°
55	·20	July	30°	20	·60	June	24°
46	·37	Sept.	27°	20	·52	July & Aug.	24°
26	·55	May	27°	16	·62	May	24°

The effect of altitude upon evaporation was tested at four stations on the same mountain in California with the following results :—

Evaporation at Different Altitudes.—4,500 ft., 2·69 ins. ; 7,100 ft., 2·04 ins. ; 10,000 ft., 1·63 in. ; 12,000 ft., 1·61 in.

Annual Evaporation.

At stations selected as representing the chief irrigation districts of California the following were evaporations for a year (*Fortier*). At Berkeley, the cooler coast area with relatively high rainfall, 41 ins. ; at Chico, the bottom of the Sacramento Valley, 53 ins. ; at Pomona, representing Southern California, 66 ins. ; at Tulare, the San Joachin Valley, 68 ins. ; at Calexico, the Imperial Valley, 71 ins.

The evaporation at a number of representative stations is given in the following table, but the methods adopted in measuring evaporation varied considerably. At Croydon, the evaporation from a 5-in. vessel in air was more than 50 per cent. greater than that from the 12-in. vessel floating in water.

EVAPORATION AT REPRESENTATIVE STATIONS.

Locality.	Approximate Latitude.	Evaporation in Inches.	Remarks.
Whitehaven, England	54½°	29·91	Elevation 90 ft. near coast.
Bolton-le-Moors, England	53½°	25·65	Average of 10 years. Elevation 320 ft.
Croydon, England	51½°	19·95	13 years, max. 22·85, min. 15·01. A 12-in. vessel floating in a tank 4 ft. in diameter.
Kennich, Devonshire, England	50½°	20·88	Elevation 836 ft. Average of 4 years.
Dijon, France	47½°	26·11	Inland station.
Boston, U.S.A.	42½°	39·11	
Croton River, U.S.A.	41½°	24·15	
New York, U.S.A.	41°	39·21	
Tharsis Mines, Spain	37½°	60	Average of 7 years, max. nearly 65 ins.
Chicco, California	39½°	53	Galvanised iron tanks, 2 to 3 ft. in diameter, and 30 to 36 ins. deep; sunk in the earth.
Berkeley ,,	38°	41	
Tulare, ,,	36°	68	
Pomona, ,,	34°	66	
Calexico, ,,	—	71	
A station in California	—	30	Elevation 6,225 ft.
Perth, Western Australia	32°	65·8	
Rajputana, India	25° to 28°	73·8	General average.
The Rand, South Africa	26°	63	
Tulsi Lake, Bombay Presidency	19°	36·4	Floating boxes. Average of 8 years.
Red Hills, Madras, India	13°	66·9	Near the coast.

Seasonal and Monthly Losses by Evaporation.

It is often necessary to be able to estimate the losses by evaporation during particular seasons, and monthly rates of evaporation, or daily rates in individual months, are frequently recorded. For considerable areas in India the seasonal losses may roughly be reckoned as: In the cold weather 12 ins., in the hot weather 32 ins., during the monsoon 16 ins.; total, 60 ins.

In the following table, some of the rates of evaporation are comparable, but the table has been drawn up chiefly in order to show the relative rates of evaporation in different months at the same station.

MONTHLY EVAPORATIONS FROM WATER SURFACES. (Inches.)

Locality.	Approx. Lat.	Month.					
		Jan.	Feb.	Mar.	April.	May.	June.
Emdrup, Denmark (av. of 11 years)	56°	0·7	0·5	0·9	2·0	3·9	5·3
Bolton-le-Moors, England, 320 ft. (av. of 10 years)	53½°	0·64	0·95	1·59	2·59	4·38	3·84
Whitehaven, England, 90 ft.	54½°	0·95	1·01	1·77	2·71	4·11	4·25
Tulare, California	36°	1·5	2·7	3·3	3·8	7·2	10·5
Perth, Australia	32°	2·06 (July)	1·75 (Aug.)	3·20 (Sept.)	5·51 (Oct.)	7·69 (Nov.)	9·47 (Dec.)
Cairo, Egypt	30°	—	—	—	—	9·88	7·56
Assuan, Egypt	24°	—	—	—	—	19·16	17·96
Pashan, Poona, India	18°	5·27	3 92	5·27	8·10	11·78	*
Red Hills, Madras, India.	13°	4·37	4·93	6·57	7·51	8·67	8·16

* Monsoon month.

MONTHLY EVAPORATIONS FROM WATER SURFACES. (Inches.)—*Cont.*

Locality.	Approx. Lat.	Month.						Year.
		July.	Aug.	Sept.	Oct.	Nov.	Dec.	
Emdrup, Denmark (av. of 11 years) . . .	56°	5·2	4·4	2·6	1·3	0·7	0·5	27·9
Bolton-le-Moors, England, 320 ft. (av. of 10 years)	53½°	4·02	3·06	2·02	1·28	0·81	0·47	25·65
Whitehaven, England, 90 ft.	54½°	4·13	3·29	2·96	1·76	1·25	1·02	29·91
Tulare, California . .	36°	11·6	9·8	7·4	5·5	3·8	2·0	68·5
Perth, Australia . .	32°	10·22 (Jan.)	8·35 (Feb.)	8·26 (Mar.)	5·21 (April)	2·27 (May)	1·80 (June)	65·79
Cairo, Egypt . . .	30°	6·35	6·95	5·09	5·49	—	—	—
Assuan, Egypt . . .	24°	16·11	16·11	14·17	10·74	—	—	—
Pashan, Poona, India .	18°	Mon	soon m	onths.	7·75	5·7	4·34	—
Red Hills, Madras, India.	13°	5·91	3·92	4·38	4·80	3·29	4·01	66·88

Losses by Evaporation and Absorption taken together.

In a great many cases the available data of losses from reservoirs are those for evaporation and absorption, or percolation, taken together. The more nearly the engineer can estimate what proportion of the total loss is due to evaporation alone, the more easily will he be able to decide as to the necessity or expediency of taking measures to reduce percolation. Fairly high losses may be tolerated from reservoirs where a considerable proportion of the percolating water reaches wells from which it can be lifted and used; and this may in some cases be an advantage when the level of the water in the reservoir is very low, or, at least, a mitigation of the disadvantage. Actual losses by percolation can be estimated when the rate of evaporation is obviously very small. Conversely, the proportion lost by evaporation may be estimated when the losses by percolation are known to be small. The losses may be measured as depths on the maximum waterspread, or as actual depths on the mean of the waterspreads at the beginning and end of each short period of observation. Thus, there are often apparent discrepancies between really similar cases, especially when the reservoirs are very shallow in parts, and when, as often happens, the maximum rate of evaporation occurs when the tank is very low.

Losses by percolation are sometimes very large. The losses from four irrigation reservoirs in the United States were as follows, measured in acre-inches or acre-feet referred to the *maximum* waterspread in acres:—(1) one year, 50·4 ins., all attributed to evaporation; (2) maximum of 2 years, 53·8 ins.; (3) maximum of 4 years, 132 ins.; (4) maximum of 2 years, 17·3 ft., ⅞ of which was attributed to percolation.

At Red Hills tank, Madras, a total loss of about 7·5 ft. seems to have been indicated by one set of tests, and 8·39 by another series. An allowance of 9 ft. is now made, and is considered to be ample, a fairly liberal estimate being desirable as the water is used for the supply of the city. Tanks in Rajputana were found to lose 9·77 ft. per annum, of which 3·66 ft. was attributed to absorption.

The reservoirs of the Sheffield waterworks are estimated to have lost only about 15 to 15½ inches by evaporation and absorption, the loss at Rotherham in a neighbouring area being 22 ins.

The following were the results of observations at Red Hills Tank, Madras, the year being roughly divided into seasons which do not, however, begin and end at even approximately the same dates every year.

SEASONAL LOSSES (INCHES PER DAY) BY EVAPORATION AND ABSORPTION, RED HILLS TANK, MADRAS.

Humid Season under the modified influence of the South-West Monsoon.	North-East Monsoon and Cool Dry Season.	Hot Dry Season.
July 0·33	Nov. 0·27	Mar. 0·26
Aug. 0·32	Dec. 0·13	April 0·30
Sept. 0·38	Jan. 0·24	May 0·37
Oct. 0·27	Feb. 0·24	June 0·36
Average 0·33	Average 0·22	Average 0·31

EVAPORATION AND ABSORPTION (ALMOST ENTIRELY EVAPORATION) RECKONED ON THE TOP AREAS OF RESERVOIRS NEAR DHARWAR, BOMBAY PRESIDENCY (*Strange*).

Month.	Nov.	Dec.	Jan.	Feb.	Mar.	Apr.	May.	June.	July.	Aug.	Sept.	Oct.	Total.
Evaporation, ins. per day	0·16	0·16	0·16	0·33	0·67	0·67	0·51	0·31	0·16	0·16	0·16	0·17	3·65 ft.

Evaporation from the Soil.

A study of rates of evaporation from the soil is of practical importance as bearing upon estimates of the actual amounts of water required by crops under varying conditions, and the probable losses from the ground when the water is applied some time before cultivation. The importance of the subject is the greater in proportion to the extent to which the cultivation has the character of fruit growing or gardening, as distinct from the growth of large areas of grain crops. In orchards especially, it is possible so to apply the water that the loss by evaporation is considerably reduced. It is often an advantage to keep the water in distinct channels as long as possible.

CALIFORNIAN EXPERIMENTS ON EVAPORATION FROM THE SOIL.

Important series of tests have been carried out during recent years in California, and have been reported by Mr. S. Fortier, Chief of Irrigation Investigations, United States Department of Agriculture.

The experiments were carried out with tanks about 47 ins. deep and 23½ ins. diameter, sunk into the soil and filled nearly to the brim. These tanks were weighed in order to measure losses. The following tabular statement gives the results of experiments made in July and August on the evaporation from soils containing different proportions of water, measured as inches depth over the area of the surface. In the case of the initial free moisture this represented about 4½ to 6 per cent. The amounts of irrigation water added represented, respectively, very light, light, and ordinary irrigation.

WATER CONTENTS IN SOIL AND EVAPORATION (IN INCHES).

Initial moisture	2·8	2·7	2·7	4·1
Irrigation water	0	2·6	4·8	6·3
10 days' evaporation . . .	0·4	0·9	1·2	1·5

Evaporation from the soil may be much reduced by beating or crumbling the dry surface to a powder, by spreading a layer of finely divided soil over the surface, or by irrigating by means of furrows, afterwards spreading the dry soil from between the furrows by some means which will tend to crumble or powder it. In small-scale irrigation and where the cost of the water is high these considerations may be of importance. The following results were obtained in California with experimental tanks containing sandy loam, the evaporation from which when it was left uncovered after the water had been applied was compared with the evaporation after coverings of different depths of finely divided sandy loam had been added. The result of the experiment with the thinnest layer is, of course, the most important generally. During the fourteen days of the experiment the shade temperature of the air at noon was often more than 100°, while the soil temperature in the sun, at noon, varied from 120° to 140°. The figures were :—

Evaporation in hundredths of an inch per day : from uncovered soil, 72·5 ; from soil protected by a 4-inch layer, 20·6 ; 8-inch layer, 10·0 ; 10-inch layer, 2·0.

The following were the results of a twenty-one days' test.

SOIL EVAPORATION IN PERCENTAGE OF WATER APPLIED.

Days	2½	6½	10	14	17	21
Bare soil . . .	11	18	21	25	28	32
3-inch cover . .	2	5	7	9½	11½	14

A further series of experiments was carried out with tanks 47 inches deep and 23½ inches diameter.*

* See *Engineering News*, Sept. 5, 1912, but note that in figs. 2 and 3 the diagrams of evaporation in inches have been accidentally transposed.

In one set of tests the tanks were nearly filled with soil, leaving room for the covering of loose soil in each case, spread after the application of the water, while in another set of tests the tanks were nearly filled and the water applied at the bottoms of furrows of corresponding depths, the soil being afterwards spread. The following table gives the results of both experiments :

EVAPORATION AND SOIL COVERINGS.

Period after water was applied: days		7	14	21	28	21	28
		Evaporation in percentage of water applied.				Evaporation in inches.	
Surface irrigated and left		17·5	25	31·5 (29)		1·75	
Surfaces irrigated and covered with loose soil (inches)	3 ins.	4·8	9·5	13·7 (12·5)		0·75	
	6 ins.	1·5	3·2	6·0 (5·7)		0·34	
	9 ins.	1·5	1·3	4·1 (3·3)		0·22	
Surface irrigated and left		13·2	16·4	18·6	20·8		1·25
Water applied at the bottoms of furrows, depths in inches	3 ins.	9·2	12·0	14·9	16·5		0·99
	6 ins.	7·0	9·6	12·3	14·3		0·86
	9 ins.	6·1	7·5	9·9	12·0		0·72

In the column for the 21st day, the figures in brackets are calculated from the evaporation in inches, and possibly correspond to earlier readings. The other figures in the column are taken from the curve.

Relation between Evaporation from Soil and Evaporation from Water

The experiments, on the results of which the table below is based, showed what were the evaporations from soils containing different proportions of water, and from a water surface.

Percentage of Free Water.	Temperatures, Fahrenheit.				Weekly Evaporation in Inches.	
	Air in Shade.	Soil in Shade.	Soil in Sun.	Surface of Water.	Soil.	Water.
Saturated.	71°	76°	95°	77°	4·75	1·88
17·5%	76°	78°	106°	80°	1·33	1·94
11·9%	76°	78°	106°	80°	1·13	1·94
8·9%	76°	78°	108°	80°	0·88	1·94
4·8%	76°	78°	108°	80°	0·25	1·94

ANNUAL EVAPORATIONS IN INCHES DURING TWELVE YEARS, LEA BRIDGE, ENGLAND.

Water : max., 26·93 ; min., 17·33 ; mean, 22·2.
Soil : max., 25·14 ; min., 12·07 ; mean, 19·53.
Sand : max., 9·10 ; min., 1·42 ; mean, 4·65. (*Greaves.*)

Evaporation from Ice

At Boston waterworks, U.S.A., the evaporation from ice was about 0·06 inch per day, or 7 ins. for the cold season.

Water Losses from Irrigation Canals.

No general rules can be given for estimating the rate at which water is lost from irrigation canals. Some are practically watertight, and only lose water by evaporation, while others lose large proportions of their supply by leakage.

On the Ganges Canal, at one period the water sent down was accounted for as follows :—Irrigation, 56 per cent. ; loss in canal, 15 per cent. ; in distributaries, 7 per cent. ; in village water-courses, 22 per cent.

In the Punjab, a loss of 8 cusecs per million square feet of wetted surface has been allowed, and larger amounts in some cases. Certain canals with discharges from 400 to 450 cusecs were

found to lose about one cusec per mile. The Bari Doab Canal, when eighteen years old, lost about 12 to 14 per cent. of its discharge in a length of fifty miles.

Many canals lose a great deal of water for some time after their construction, and afterwards become reasonably watertight. The deposit of silt at a reasonable rate for some time after the canal is in service may be facilitated by suitable designing of the cross-sections and temporary adjustments of levels at the falls; but no general rules can be given as to this difficult problem.

When L is the loss from a canal, measured in the first mile, the loss up to a further distance of D miles is $L\,D^x$, where x varies from $\frac{5}{6}$ to $\frac{9}{9}$.

Capacities of Canals: Mean Velocity.

The discharge or capacity of a canal or river is the product of the cross-sectional area and the mean velocity. The mean velocity is usually found from Kütter's formula (see p. 1298), a coefficient of roughness, n, being chosen with regard to the nature of the soil and the probable behaviour of the canal with respect to silting and erosion. Since the formula takes account of the water slope or fall, and of the hydraulic mean radius,

$$\frac{\text{area}}{\text{wetted perimeter}}$$

every measurement or calculation of discharge by other means tends to fix the value of n for the particular conditions of the bed of the canal or stream. Small discharges may sometimes be measured directly in basins or symmetrical pools, and at notches or specially prepared weirs (pp. 1178–1181), but calculations for discharge over large weirs are themselves subject to disturbing factors and their value in the determination of n is limited.

For irrigation canals in favourable soils and working under favourable conditions the value $n = 0{\cdot}0225$ is considered suitable, and this value has been adopted in the design of very important works. For canals in less favourable conditions the value 0·025 is often adopted, and for canals distinctly below average conditions n may be taken as 0·0275. The value 0·030 may be applied to some rivers and to canals in 'defective condition,' whilst for channels which are much obstructed n may be taken as 0·035. The first two values above are those of most importance in irrigation engineering. For aqueducts of rubble masonry n may be taken about 0·017 to 0·020, and for ashlar and brickwork, 0·013.

Bazin's Formula.

Bazin's new formula is often used for channels, especially for those which, in irrigation systems, are relatively small. It is derived from the general formula

$$V = c\sqrt{RS},$$

by making

$$c = \frac{157{\cdot}6}{1 + \frac{m}{\sqrt{R}}},$$

where c is the coefficient, and V, R, and S have the values given on page 1298.

$m = 0{\cdot}109$ for smooth cemented surfaces.
$= 0{\cdot}29$ for ashlar and brickwork.
$= 0{\cdot}83$ for rubble masonry.
$= 1{\cdot}54$ for very smooth earthen channels, pitched, or partly pitched.
$= 2{\cdot}36$ for ordinary earthen channels.
$= 3{\cdot}17$ for canals encumbered with weeds or boulders.

Direct Measurement of Mean Velocities.

The Use of Floats.—Floats of various kinds have been employed for the measurement of the velocities of canals and rivers, being sent down the reach so as to maintain as far as possible their proper positions in the cross-sections, the average velocity being calculated from float speeds and depths in each strip of the reach. Double floats are often used, the lower and larger float which is a little heavier than water, being held at a determined depth below the surface by a smaller surface float to which it is attached by a cord. Thus the velocities at different depths and at different distances from the centre-line of the stream can be measured. The essential difficulty in using these floats is that if the lower float has a specific gravity considerably greater than that of the water the surface float must be relatively large, and affect the result appreciably, while if the specific gravity of the lower float be but little greater than that of the water it is liable to be lifted towards the surface by small upward currents.

For the lower floats both cylinders and spheres have been employed; for instance, cylinders 6 ins. in diameter and 12 ins. long, or 6 to 8 ins. in diameter and 9 to 12 ins. long; and spheres 2 ins. and 3 ins. in diameter.

Various forms of surface floats have been used, including very thin discs of considerable area, intended to slip easily along the surface without seriously affecting the speed of the lower float. This form seems to be suitable in calm weather, while a deeper float of smaller surface area may be preferable when there is a breeze. Calm days are best for float observations of any kind, but if a river or canal flows with or against prevailing winds of considerable velocity observations on calm days may be to a small extent misleading.

Rod Floats.—For canals, and for reaches of rivers in which the water varies but little in depth, a good form is the rod float, which may be a tube weighted at the bottom so as to float upright, or a wooden pole similarly weighted. In the Ganges canal experiments both one-inch poles and one-inch tubes were used, the latter proving to be the better. The rods should float with their bottom ends just clear of the bed of the canal.

Current Meters.—Current meters are often used for measuring the velocity of streams and canals, and must be preferred to floats when there is no reach of sufficient regularity and length for the successful use of the latter. With a current meter the velocity at a particular cross-section may be found, and the measurement of that cross-section will then suffice, instead of the number which the irregularity of a reach may render necessary. It is not always easy in practice to keep the current meter at the desired depth, but in some cases it is held there by a rod. In a sluggish stream, the meter may be towed behind a boat, the speed of which is measured. Current meters should be calibrated, and from time to time tested, by towing them at a measured speed in still water, or, failing that, up and down the same reach of the canal or river. The mechanism of the meter can be stopped and started by a brake, on the stop-watch principle, this brake being worked by a cord from the boat. But some meters are fitted with an electrical apparatus, the wires of which form part of the tow line, and record the revolutions visibly in the boat.

The Pitot Tube.—If a tube be partly immersed, vertically, in a current of water, the lower end being suitably bent and remaining open, the water in the tube rises above the surface of the flowing water. The Pitot tube, designed on this principle, gives approximately the relation, $V = \mu \sqrt{2gh}$, where V = the velocity of the current, and h is the height of the water in the tube above the surface of the stream. Instruments which have been employed have given the results $V = 1{\cdot}7 \sqrt{h}$. A much more elaborate instrument on the same principle (*Darcy*) has also been employed, and has given good results in small channels with fairly high velocities.

Perrodil's Hydrodynamometer.—This instrument is a device for measuring the velocity of a current, by the torsion which is produced in a wire by the pressure of the water against a disc mounted on an arm at right angles to the wire. The velocity is found by the equation $V = c \sqrt{a}$, where a is the angle of torsion, and c a coefficient found by experiment, or calculated from the coefficient of torsion of the material of the wire. The instrument is very sensitive and can be used for very slow currents.

Mean Velocity in a Vertical.—The mean velocity of the water in a given vertical in the cross-section of a stream is also the actual velocity at some proportion of the total depth in that vertical. What this proportion is will depend upon the nature of the stream, and will not be the same for all the verticals. For streams of considerable width and not very variable depth at the cross-section, measurements, by means of a current meter, of the velocities at the assumed depth of mean velocity may yield a fair approximation to the mean velocity of the stream, and a closer approximation may be obtained by making preliminary tests, with rod floats for instance, to determine the depth of mean velocity in the particular case. Values given usually lie between 0·60 and 0·75, or 0·60 and 0·70 of the depth.

Relation between Mean and Maximum Velocities.—For a rough estimation of the velocity of a stream the maximum surface velocity may be measured and the mean velocity deduced from it. If V be the maximum velocity, the mean velocity is KV, where K is a coefficient usually ranging from 0·60 to 0·80. In the following table values of K are given for earth channels and rubble masonry channels.

VALUES OF 'K' IN THE EQUATION 'V MEAN = KV MAXIMUM.'

Hydraulic mean depth (feet)	1	2	3	4	5	6	7	10	15	20
Rubble masonry channels	·77	·79	·80	·81	·81	·81	·81	·82	·82	·82
Earthen channels	·65	·71	·73	·75	·76	·77	·78	·78	·79	·80

CRITICAL VELOCITY.

The 'critical velocity' is that mean velocity at which, for a canal of given depth, the current will neither deposit much silt nor unduly erode its bed. A determination of the critical velocity, the theory of which was evolved by R. G. Kennedy (see Min. Proc. Civil Engineers, vol. cxix.), is of great importance in the design of irrigation canals. The removal of silt from the canals is costly, and the loss of valuable fertilising material is a serious matter to the cultivators. A large amount of silting of the canals and distributaries is often inevitable, but attempts are made to lessen it by designing the canals in accordance with the principle of critical velocity.

The equation for determining the critical velocity for a given depth of water in the canal is

$$V_o = cd_m.$$

The values of c and m vary somewhat according to the nature of the silt. For fine sand-silt brought down from the hills usual values are, $c = 0{\cdot}84$ and $m = 0{\cdot}64$. The following table gives the critical velocities calculated on this basis, for different depths, and the observed critical velocities on the Shwebo and Mandalay canals, Burma. With the latter velocities there was, on the whole, a slight tendency to scour.

CRITICAL VELOCITIES.

Depths in feet . . .	1	2	3	4	5	6	7	8	9	10	12	15	20
$V = 0{\cdot}84\ d^m$, suitable for the Punjab . . .	0·84	1·30	1·70	2·04	2·35	2·64	2·92	3·18	3·43	3·67	4·12	4·75	5·71
Observed in Shwebo and Mandalay Canals . .	—	—	1·72	1·98	2·24	2·48	2·75	—	3·09	—	—	—	—

A canal which would be non-silting on a slope of 1 in 7,600 if drawn from the Indus in Sind, would require to have a slope of 1 in 4,200 to be non-silting if carrying the silt usually found in the Punjab (*Buckley*).

If the theory of critical velocity be accepted as regards silting and erosion up to the old limits of velocity for different soils, but be rejected when those velocities are reached, the maximum depths allowed for large canals will be correspondingly restricted. If, for instance, a maximum velocity of 3·5 ft. per sec. be prescribed, the depth will be limited to about 9 ft. On the old theory, a higher velocity would cause scour, while on the theory of critical velocity, greater depths with a limit of 3 to 5 ft. per sec. would cause silting. There is, however, no sudden change in the physical conditions, and if the theory of critical velocity holds up to 9 ft. depth it doubtless holds for considerably greater depths; and it has been accepted in the design of very important irrigation systems.

VALUE OF c IN $V = c\sqrt{RS}$, $n = 0{\cdot}0250$.

(By Kütter's formula, page 1298.)

R in Feet.	S					
	1 in 1,000. 1 in 1,000.	0·5 in 1,000. 1 in 2,000.	0·3 in 1,000. 1 in 3,333.	0·15 in 1,000. 1 in 6,667.	0·10 in 1,000. 1 in 10,000.	0·05 in 1,000 1 in 20,000.
1·0	55·4	54·9	54·3	52·9	51·8	49·4
1·5	61·3	60·9	60·5	59·5	58·7	56·8
2·0	65·5	65·2	64·9	64·3	63·7	62·4
2·5	68·7	68·5	68·3	68·0	67·6	66·9
3·0	71·2	71·2	71·1	71·0	70·9	70·6
4·0	75·1	75·3	75·4	75·7	76·0	76·6
5·0	78·1	78·3	78·6	79·3	79·9	81·3
6·0	80·4	80·8	81·2	82·2	83·1	85·2
7·0	82·3	82·7	83·3	84·6	85·7	88·5
8·0	83·9	84·4	85·1	86·6	88·0	91·3
9·0	85·3	85·9	86·6	88·4	89·9	93·8
10·0	86·5	87·1	88·0	89·9	91·6	96·0
11·0	87·6	88·3	89·2	91·3	93·2	98·0
12·0	88·5	89·3	90·2	92·5	94·6	99·8

VALUES OF c IN $V = c\sqrt{RS}$. $n = 0{\cdot}0225$.

(By Kütter's formula.)

R in Feet.	S					
	1 in 1,000. 1 in 1,000.	0·5 in 1,000. 1 in 2,000.	0·3 in 1,000. 1 in 3,333.	0·15 in 1000. 1 in 6,667.	0·1 in 1,000. 1 in 10,000.	0·05 in 1,000. 1 in 20,000.
1·0	62·5	61·9	61·2	59·7	58·5	55·7
1·5	68·8	68·4	67·9	66·8	65·9	63·8
2·0	73·2	72·9	72·6	71·9	71·2	69·8
2·5	76·5	76·4	76·2	75·8	75·4	74·6
3·0	79·2	79·2	79·1	79·0	78·8	78·5
4·0	83·3	83·4	83·6	83·9	84·2	84·9
5·0	86·3	86·6	86·9	87·6	88·3	89·9
6·0	88·7	89·1	89·5	90·6	91·6	93·9
7·0	90·7	91·1	91·7	93·1	94·3	97·3
8·0	92·3	92·8	93·5	95·2	96·6	100·3
9·0	93·7	94·3	95·1	97·0	98·6	102·9
10·0	94·9	95·6	96·5	98·5	100·4	105·1
11·0	96·0	96·7	97·7	99·9	102·0	107·2
12·0	96·9	97·7	98·8	101·2	103·4	109·0

Duty of Irrigation Water.

The duty of irrigation water, or the area irrigated by a given rate of flow during the season, depends upon the nature of the crop, the initial proportion of moisture in the soil, the rate of evaporation, and the rainfall during the irrigation season. It may also depend upon custom and acquired rights and is often affected by the degree of care or of carelessness exercised by the cultivators. All figures relating to duty are, therefore, to be accepted with due reserve for purposes of estimates. The duty reckoned on the amount passing the headworks is, of course, less than that reckoned on amounts measured out to the cultivators, and the former figures will be affected by the length of the main canal and principal branches, and the rate of loss therefrom. The duty of irrigation water may be measured in cusecs continuously for the crop; in acre-ft.; or in acres per million cub. ft. stored.

On the Jamrao Canal system, India, the duty of one cusec per 50 acres has been allowed for during the inundation season, and 100 acres during the cool season. The duty has been as high as 83 acres in the inundation season, for 'dry crops' such as millet and cotton. In the Punjab, 100 acres has been allowed for in the rains, and 200 acres in the cool season.

The following duties, in acres per cusec, may be noted:—

Palked canal, Bengal Deccan, 63; Ekrak tank project, Bombay, 123. Pahakarpur canal, Bombay, 165; Kabul river canal, Bombay, 114; Lower Swat river canal, Bombay, 175; Letabo canal project, Transvaal, 145; Mool river, Transvaal, 145.

By amounts: in Kathiawar, jowari, a grain crop, requires 100,000 cub. ft. per acre, and in Jeypore State the same crop requires about 120,000 cub. ft., including losses and contingencies. In the Madras Presidency, where large areas are irrigated from numerous shallow reservoirs, the quantity, including all losses, which is stored per acre is, roughly, about 216,000 cubic ft., or nearly 5 ft. depth, for the 5 months' 'monsoon' rice crop, and 175,000 cubic ft., nearly 4 ft. depth, for a cool weather rice crop. In Central India, the storage is about 200,000 to 250,000 cubic ft. per acre. Wheat requires only about half as much water as rice.

DUTY OF IRRIGATION WATER: AVERAGES OR ESTIMATED AVERAGES: ACRES PER CUSEC.

Southern California, surface irrigation, 150 to 300; S. California, sub-irrigation, 300 to 500; Southern Arizona, 100 to 150; New Mexico, 60 to 80; Utah, 60 to 120; Colorado, 80 to 120; Northern Italy, 60 to 150; Madras Presidency, rice 66, 'dry crops' 132.

The average duty of five canal irrigation systems in the Bombay Deccan, from 1894–1895 to 1900–1901, excluding two famine years, was, successively:

For *Kharif*, 70, 52, 74, 111, and 138, with a mean of 89; and for *rabi*, 60, 68, 90, 75, 85, with a mean of 76.

Costs of Irrigation Projects.

The costs of irrigation projects in India do not admit of comparison unless the nature and purpose of the project in each case be described in considerable detail. Some projects are highly productive, others are protective, and many are of an intermediate character. The conditions are very different in the United States, and, on the assumption that the works have been carried out on the narrower economic basis, the following costs may be worth noting.

COSTS OF IRRIGATION PROJECTS OF THE UNITED STATES RECLAMATION SERVICE.

Area in Thousands of Acres	216	206	164	131	129	118	103	100	72	60
Cost of water rights in dollars per acre	30 to 36	22 to 30	45 to 50	55 to 66	45 to 55	22 to 30	52	30 to 35	30	45

COST OF IRRIGATION WITH PUMPED WATER, S. AFRICA.

On the total cost of 63 pumping projects, the cost per acre was 6*l.* 17*s.* Near the coast, the cost of putting two feet per acre on to the land may be taken as between 1*l.* and 2*l.* for a 50-ft. lift, and between 1*l.* 10*s.* and 2*l.* 10*s.* for a 150-ft. lift. Up country, the costs would be about 2*l.* 10*s.* and 3*l.* respectively. (*Legg.*)

Waste Weir Capacities.

For rates of rainfall and calculations for run-off, see 'Rainfall,' pp. 1280, 1281. For discharges of weirs, see pp. 1178–1181. The following formula is used in India for the discharges of the overflow weirs of storage tanks and reservoirs.

Discharge of clear overfall weirs:—

$$D = c\,b\,\sqrt{H^3}.$$

D = discharge in cusecs; b = width of the crest in feet; H = total height above the weir crest in feet, allowing for afflux; c is a coefficient usually about 3·333, or as low as 3·25.

In ordinary practice in the Bombay Presidency, India, it is usual to assume a general rainfall over the whole of a small catchment, and to calculate the run-off accordingly, thus :—

Catchment in Sq. Miles . . .	Up to 5.	5 to 10.	10 to 25.	25 to 75.	75 to 150.	Over 150.
Run-off in ins. of rain per hour .	2·00	1·50	1·25	1·00	0·75	0·50

In using this table special circumstances have to be considered; mountain catchments would be given larger runs-off, and for catchments wholly in the plains smaller runs-off would be assigned. (*Strange.*)

SECTION XXV

PART III

RAINFALL — WELLS — WATERWORKS — DAMS — FLOW OF WATER IN PIPES—WATER PIPES—WATER TANKS.

RAINFALL.

(Contributed by Reginald Ryves, A.M.Inst.C.E., M.Cons.E., F.R.Met.Soc.)

Rainfall in the British Isles.

For valuable data and studies relating to rainfall in the British Isles reference may be made to a paper on 'The Distribution of Mean and Extreme Annual Rainfall over the British Isles,' by H. R. Mill (Min. Proceedings Civil Engineers, vol. clv., 1903–1904); also to 'Variations in the English Climate during the Thirty Years 1881–1910,' by W. Marriott (Quarterly Journal R. Met. Soc. July 1911). The former paper is accompanied by useful maps of rainfall distribution, and the latter by diagrams showing deviations from the mean values, month by month, for temperature, rainfall, number of 'rain-days,' and atmospheric pressure. Temperature and the number of rain-days have a considerable bearing upon water-supply and sewerage schemes. Reference may also be made to a paper on 'The Abnormal Summer of 1911,' by C. Harding (Quart. Journal R. Met. Soc., January 1912).

The rainfall of each of the three divisions of the British Isles decreases from 100, 80, or 60 inches in the mountains and moorlands near the Western coasts to about 25 inches (over a few areas down to 20 inches) near the Eastern coasts of Scotland and England, and in the Midlands, and to about 35 inches on the East coast of Ireland. Over more than a third of England the rainfall ranges from 25 to 30 inches, and over a considerable total of smaller areas the fall is from 30 to 40 inches. There is a similar range, 30 to 40 inches, over about half Scotland, and a large area in the Western Highlands has a rainfall ranging from 60 to 100 inches. Over the Eastern half of Ireland the fall is from 35 to 40 inches, and over most of the Western half from 40 to 50 inches. For the period 1870–1899 the average annual falls were as follows: England, 31·62; Wales, 49·53; Scotland, 46·85; Ireland, 42·28; British Isles, 39·25. For the period 1881–1910 the average for England was 31·90.

Average, Maximum and Minimum Rainfalls.

It is generally agreed that a period of 30 to 35 years (*Binnie*) is long enough to establish for the average annual rainfall a value which will be nearly the true average, if such there be, and anyhow will be the mean of probabilities. For reasons, some of which are theoretical and others practical, many engineers prefer a period of 35 or 30 years to the longer periods for which records are in some cases available.

In the British Isles for the period 1870–1899 the rainfall of the 'wettest' year exceeded the average fall by 43 per cent., and that for the 'driest' year was 29 per cent. below the average (*Mill*). The following, expressed in percentages of the averages, are the figures for the different parts of the British Isles and for the whole area, taking in every case the wettest and driest years for the area referred to, period 1870–1899:—

England, 146 and 70; Wales, 147 and 75; Scotland, 147 and 72; Ireland, 133 and 69; British Isles, 143 and 70.

For the period 1881–1910 (*Marriott*) the percentage figures for England are 131 and 76·7. This period seems, however, to have been somewhat abnormal. The actual rainfalls compare thus:

England.	Maximum.	Average.	Minimum.
Period 1870–1899	46·98	31·62	22·83
Period 1881–1899	41·78	31·90	24·45

This suggests that although the 30 years' period may be satisfactory as regards the average annual rainfall it may not include a fall approximating to the maximum, nor one approximating to the minimum. Probability would, indeed, seem to be against such a result, but it is interesting to note the differences of nearly 5 inches and 1½ inch above.

At stations in the British Isles the following annual rainfalls in percentages of the average have been recorded : 58·8, 59·8, 61, 60·5, 63·6 and 64·5, showing defects from 35½ to 41 per cent. of the averages.

Sir Alexander Binnie considered the true mean rainfall to lie between the period of 33 and 35 years. From 14 stations scattered over the world he arrived at the following results :—

1. The percentage of years, in which the rainfall is above the mean rainfall, is 45·8.
2. The percentage of years, in which the rainfall is below the mean rainfall, is 54·2.
3. The average fall of wet years is 1·19 of the mean rainfall.
4. The average fall of dry years is 0·83 of the mean rainfall.
5. The average fall of the three consecutive dry years is 0·76 of the mean rainfall.
6. The maximum rainfall is 1·52 of the mean.
7. The minimum rainfall is 0·59 of the mean.
8. The proportional number of periods of three consecutive dry years in 100 years is 20·3.

Rainfall in Foreign Countries.

The following figures are maximum annual rainfalls (for whole countries) expressed as a percentage of the average annual fall in each case (*Binnie*) :

Norway, Denmark, Holland and Belgium, 148 per cent. ; France, 161 ; Italy, 159 ; Switzerland, 147 ; Germany, 139 ; Bavaria and Austria, 144 ; Russia, 166 ; India, 162 ; Australia, 156 ; North America and Canada, 141 ; typical observations for the world, 151.

The following are actual inches of annual rainfall, maximum, average and minimum, for a period of 24 years, in the Madras Presidency, 7 stations :—

70, 47, 31—78, 40, 17—48, 29, 9—60, 50, 17—43, 28, 17—165, 117, 87—182, 131, 95.

The probable figures for a given area, when they cannot be based on records fairly covering the area itself, may be estimated partly from station records and partly from averages for a larger area, the probable range of maximum and minimum values being studied from both points of view, and depending to a considerable extent upon the size of the area under consideration.

The Driest Group of Three Years Running.

Experience has shown that the most serious shortage in water-supplies usually occurs as the result of the defect of rainfall in the driest group of three years running, and this consideration is usually one of the factors in the design of water supplies and irrigation works. It must not be assumed, however, that there are no cases in which the worst single dry year is not the governing factor, and on the other hand, the worst period may in some countries be more than three years. The principle is, however, to be accepted in all cases, inasmuch as there is, for every place, some period which is that towards the end of which the effects of a drought will probably be most severely felt. The rainfall records will go far towards disclosing the critical period, but the nature of the soil, and the extent and nature of natural storage facilities, may also have to be taken into consideration.

The estimated average annual rainfall for the three years' period is sometimes put at 80 per cent. of the general average, though it is doubtful whether so high a percentage could be relied upon in any country. Sometimes it is put at 75 per cent. At Cape Town the average rainfall for the driest three years is 73 per cent. of the general average. In any case it must be remembered that the available run-off in the three years, as will be shown later, may be a much smaller percentage of the average available run-off. If, out of 50 inches of rain, 15 are lost by evaporation and absorption, we have 35 inches available. With a 40 inch, or 80 per cent. fall, we should have 25 inches available, or about 71 per cent., and the loss in the dry year might be greater than the average.

Run-off and Losses.

The available supply and the losses by evaporation and absorption are often expressed as percentages of the rainfall, but the amount of run-off or of loss bears no definite relation to the amount received by the catchment. The yield of a catchment area may better be reckoned as proportionate to the rainfall less some constant quantity which may be called the 'handicap' (*Lapworth*). This method is not, however, applicable to all cases, though in most cases it is suitable for the purposes of preliminary plans and may often give quite accurate results. The following are 'handicaps' for different areas (*Lapworth*) :

Average in Great Britain, 10 to 12 inches ; Thames Valley, 16 inches ; parts of Dartmoor, nearly 18 inches ; North-Eastern and Eastern parts of the United States, about 16 to 20 inches ; in California, 23 inches or more ; in India, up to 30 inches ; in South Africa, about 25 inches.

It is necessary to find the particular 'handicap' in every case, since its amount necessarily depends upon topographical and geological features, upon the area of the catchment and the manner in which the water is collected. Further, it must be noted that the method is by no means generally applicable, and notably fails when the effect of one year upon the next is strongly marked. In the Ajamenta Valley, Gold Coast Colony, the following, in inches, were year's falls and the corresponding yields (*Hunter*) :—

38·8, 1·800—59·9, 8·280—47·7, 2·540—42·4, 0·140—30·8, 0·560—29·6, 0·004—40·2, 0·006.

Again, if we take the figures for the Sweetwater catchment basin, California, we find that the following comparisons may be made (*Folwell*) :—

A year's rainfall of 21 inches yielded 12 per cent., but a fall of 23·4 inches yielded only 9 per cent., while another year's fall of over 23 inches yielded less than 0·4 per cent. A fall of 17·2 inches yielded 4 per cent., but falls of 18 to 19 inches yielded less than a quarter per cent. The average fall of nearly 21 inches yielded less than 6 per cent., but an actual year's fall of 20 inches yielded 8 per cent.

The yield from the Coolgardie catchment, in a period of six years (*Palmer*) ranged from 0·20 per cent. to 3·5 per cent., while the rainfall ranged only from 19 to 33¼ inches.

In a period of 10 years the worst discharge of the Guadalquiver (Spain) was 9 per cent. of the rainfall, and in the best year it was 50 per cent. In the Karroo, S. Africa, a yield of 2 or 3 per cent. would be expected from a year's fall of 8 to 10 inches, and from a fall of 20 inches the yield would be about 8 or 10 per cent. (*Legg*).

Generally, in dry countries with a small rainfall the ratio of evaporation to the rainfall, or to a part of the rainfall, increases rapidly with a decrease in the actual amount of the fall. Conversely, in wet countries with a fairly large proportion of rainy or cloudy days the effect of relatively dry conditions or of scanty rainfall is not felt to nearly the same extent. In some cases it is found that the rainfall to be considered is that of only a part of the year, and it is then necessary to study maximum and minimum rainfalls, and the worst three years, as applying only to this season. In Natal about $\frac{7}{12}$ of the rainfall occurs in the wet season, September to April. In Southern Rhodesia, about $\frac{11}{12}$ from November to March. In other cases, especially when the area does not feel the full effects of any of the seasonal rains, it is necessary to examine the rainfall records in detail for the worst three years, and to eliminate all falls of less than some predetermined amount (single falls or day's rain). Next, the yield from each of a series of falls should be estimated as, in each case, a proportion depending partly upon the amount of the fall and partly upon the interval which had elapsed since the previous fall. The maximum percentage yield will be assigned to continuous rain on soaked ground and soaked subsoil. In dry areas it may be necessary to adopt such a method of estimating the yield, when, owing to the nature and distribution of the rains, no general rule can be applied to the whole rainfall of the year, or to that of a season. For a rough estimate it may be sufficient to eliminate small or isolated falls and to calculate the yield of the remainder as a diminishing proportion of the remaining rainfall, less some constant. In some conditions the proportion need not be a diminishing one.

Absorption and Evaporation.

While it is possible, by the exercise of judgment, to form some idea as to the extent of losses by absorption for a particular area, it is clear that the large number of factors involved makes it impossible to lay down any general rules. Under some circumstances all the rain runs off, under other circumstances it is all absorbed, and there is every conceivable intermediate condition.

A few points are, however, worth noting. Clay soils, after the surface is wet, absorb water only very slowly. Some light soils are absorbent up to a given rate of absorption and rainfall in excess of that rate runs off. If the water absorbed by the soil percolates to places where it is available for use, the loss by evaporation from the soil will largely depend upon the average depth of the subsoil water. A dusty surface to a great extent prevents evaporation from the soil.

In practice, the loss from evaporation and percolation taken together is found by gaugings of the streams from the catchment, or, provisionally, is based upon data obtained from similar catchments, with such modifications as seem to be desirable owing to differences in the conditions. The estimate of the loss by evaporation and absorption, obtained from one set of data, should agree with the estimate of total yield based upon another set of data, or upon general considerations. References to evaporation from free water surfaces and from soils will be found under ' Irrigation,' pp. 1267, etc.

Dr. Walter Leather gives the following formula for estimating evaporation from water surfaces :—

$$E = 2{\cdot}0 (\log t - 1{\cdot}74) + 0{\cdot}33 (\log D - 1{\cdot}00) + 0{\cdot}36 (\log W - 0{\cdot}125).$$

where,

E = Evaporation in millimetres for 24 hours ; D = Dryness = 100 − (humidity at 8 A.M.) ; W = Mean wind velocity for the 24 hours in miles per hour ; t = Mean temperature in degrees F. for the 24 hours.

Rainfall : Quantities and Rates.

One inch of rain is equal to :—

2,323,200 cubic feet per square mile; 14,485,000 gallons per square mile;
3,630 cubic feet per acre; 22,633 gallons per acre.

One inch of rain per hour is at the rate of :—

645 cubic feet per second on a square mile, nearly 1 (1·01) cubic feet per second on an acre ;
241,419 gallons per minute on a square mile ;
377 gallons per minute on an acre.

I. Table showing Equivalent Rainfall in Cubic Feet per Minute.

Areas in Acres. (A_1)	Rainfall in Decimals of an Inch in 24 Hours. (r)								
	0·1	0·2	0·3	0·4	0·5	0·6	0·7	0·8	0·9
1	0·2521	0·5042	0·7562	1·1083	1·2604	1·5125	1·7646	2·0170	2·2687
2	0·5041	1·0084	1·5125	2·2166	2·5208	2·0250	3·5290	4·1340	4·5370
3	0·7563	1·5126	2·2687	3·3249	3·7812	4·5370	5·2930	6·0510	6·8060
4	1·0084	2·0168	3·0249	4·4332	5·0416	6·0500	7·0580	8·0680	9·0740
5	1·2605	2·5210	3·7812	5·5416	6·3020	7·5620	8·8230	10·0800	11·3430
6	1·5126	3·0252	4·5374	6·6499	7·5610	9·0750	10·5870	12·1000	13·7200
7	1·7646	3·5294	5·2937	7·7583	8·8820	10·5870	12·3500	14·1100	15·8600
8	2·0166	4·0336	6·0499	8·8666	10·0800	12·1000	14·1100	16·1300	18·1500
9	2·2687	4·5378	6·8061	9·9749	11·3400	13·6120	15·8800	18·1500	20·4200
10	2·5208	5·0416	7·5625	11·0833	12·6000	15·1250	17·6400	20·1700	22·6900

Cubic feet per minute $= A_1 r \times 2{\cdot}521$.

II. Table showing Equivalent Rainfall in Cubic Feet per Minute.

Area in Square Miles (A_2)	Rainfall in decimals of an inch in 24 hours. (r)								
	0·1	0·2	0·3	0·4	0·5	0·6	0·7	0·8	0·9
1	161·3	322·6	484·0	645·3	806·6	968·0	1129·3	1290·6	1452·0
2	322·6	645·3	968·0	1290·6	1613·3	1836·0	2258·6	2581·3	2904.0
3	484·0	968·0	1452·0	1936·0	2420·0	2904·0	3388·0	3872·0	4356·0
4	645·3	1290·6	1936·0	2581·3	3226·6	3872·0	4517·3	5162·6	5808·0
5	806·6	1613·3	2420·0	3226·6	4033·3	4840·0	5646·6	6453·3	7260·0
6	968·0	1935·9	2904·0	3872·0	4839·9	5808·0	6776·0	7743·9	8712·0
7	1129·3	2258·6	3388·0	4517·3	5646·6	6776·0	7905·3	9034·6	10164·0
8	1290·6	2581·3	3872·0	5162·6	6453·3	7744·0	9034·6	10325·3	11616·0
9	1452·0	2904·0	4356·0	5808·0	7260·0	8712·0	10164·0	11616·0	13068·0
10	1613·3	3226·6	4842·0	6453·3	8066·6	9680·0	11293·0	12906·0	14523·3

Cubic feet per minute $= A_2 r \times 1613{\cdot}7$.

Flood Discharges.

For every area, however small or however large, there is some period of time at the end of which the effect of continuous rain reaches the maximum. What this period is depends upon all the circumstances, the size of the area in question, the nature of the rainfall, the physical character of the catchment, and the nature of the vegetation or of artificial works all affect the result.

The maximum rate of rainfall for the period in question is therefore a leading factor in the calculation of the flood discharge of the area. For some small areas the maximum discharge may be that which occurs when natural storage on the catchment has reached the maximum, and the rate of run-off is then equal to the rate of rainfall, or to some proportion of it, allowing for underground escape of a part of the water. In most cases, however, the maximum capacity of the catchment for surface water is reached only for short periods after the heaviest rushes of rain, and the amount of such storage affecting the result is the average over a relatively long period, and cannot be estimated with any degree of accuracy. A period longer than the critical period will give a lower rate of discharge because the rate of rainfall will be less, and a period shorter than the critical period will give a discharge lower than the maximum because the water from the more distant parts of the catchment will not have time to reach the outlet. If we knew the rate of flow over the ground and along the watercourses we could find the time required for water to arrive at the outlet from the part of the area most distant in time, in many cases the farthest point in distance. But we seldom know these average speeds, except sometimes in the case of a sewerage system. It is usually necessary to have recourse to empirical formulæ, or formulæ partly empirical and partly rational, and the engineer has to exercise judgment in choosing one coefficient affecting the whole quantity or several coefficients affecting different factors. In some large river basins the effects of short storms over several tributary valleys may, by the simultaneous arrival of the resulting floods, yield a larger discharge than that due to the lower rate of rainfall for the critical period corresponding to the whole area. In such cases the purely empirical formula may be better than the rational formula, because the engineer makes a note of every real coefficient established by experience, and all these coefficients are strictly comparable.

Further, in the case of a steep, rocky valley, the river of which drains flat uplands, or glens under dense jungle, the heavier rainfall for the shorter 'period of total contribution, for the main valley may give a larger flood discharge than the smaller rainfall for the longer period of total contribution for the whole catchment. Even in normal river basins, areas projecting beyond the average distance of the watershed of the distant parts of the catchment may be eliminated, the loss in area being more than made up for by the gain in rate of rainfall for the reduced period of total contribution (*Ryves*).

The following formulæ are used in calculating flood discharges of rivers and, in some cases are also employed for quite small catchments.

Ryves' formula—

$$Q = CM^{\frac{2}{3}}.$$

Q = discharge in cu. ft. per sec.; M = area in square miles, C is a coefficient usually ranging from 450 to 1,000, according to the nature and situation of the catchment; rainfall data are also taken into consideration, by comparisons with established results.

This formula is largely used in Southern India.

Dickens' formula—

$$Q = 825\ M^{\frac{3}{4}}.$$

This is the form in which the equation is usually presented, but it is doubtless advisable to vary the coefficient as in the case of the Ryves' formula.

The Dickens' formula is probably more particularly suited to the conditions of Bengal and other parts of Northern India, but both formulæ may be usefully employed in other countries.

The formula $Q = CM^{\frac{3}{4}}$ has been found to apply, for *ordinary floods* in the New England and Appalachian catchments, with a coefficient C = 130 to 200; in Eastern Middle State river basins, with a coefficient from 60 to 100; and for Western tributaries of the Mississippi, with coefficients from 12 to 50 (*Fanning*).

Chamier's formula—

$$Q = 640 \times R \times C \times \frac{M}{\overline{M}}.$$

R = average rate of greatest rainfall in inches per hour for such duration as will allow of the flood-water flowing to the outlet from the farthest extremity of the catchment. C = coefficient of surface discharge, giving the proportion of rainfall that may be expected to flow off the surface, M = area of catchment in square miles.

This formula seems to have given good results, and by comparing the calculated discharges for many catchments with those actually observed it should be possible to arrive at some idea of the figures for the rates of flow, from watershed to outlet, upon which the period of total contribution depends and from which, therefore, the rate of rainfall is derived. Since this factor cannot, in comparison of results, be disentangled from the factor C, it will take longer to extend the use of the formula than it does in those cases in which the exercise of judgment and the results of practice focus on to a single coefficient.

In order that the length of the catchment might be taken into consideration the following formula was proposed:

Burge's formula—

$$Q = C \cdot \frac{M}{(L)^{\frac{1}{2}}}.$$

Where L is the length of the main river or stream in miles; C is usually taken as 1,300.

A modification of this formula has been proposed, as follows (*Jackson*).

$$Q = C \times \frac{B}{L} 100\ M^{\frac{3}{4}}$$

Where L is the extreme length and B the extreme breadth of the catchment area.

It may be suggested that when it is possible to make a fair estimate of the period of total contribution, and, therefore, of the maximum rate of rainfall, such an estimate should form the basis of the calculation for maximum flood discharge, and when no such estimate can be made an empirical formula with a single coefficient should be used.

Storm-water Discharge of Sewers.

The same principles that govern the discharges of large river basins hold in the case of the storm-water discharge of sewers, but it is usually much easier to estimate the average rate of flow from the most distant parts of the catchment (measured in time) and, therefore, to estimate the period of total contribution, the rainfall for which can be found from local records.

The following are formulæ employed:

Bürkli-Ziegler's formula—

$$Q = R \times C \times \sqrt[4]{\frac{S}{A}}.$$

Q = discharge in cubic feet per second per acre.
R = average rainfall in cubic feet per second per acre 'during heaviest rainfall.'
C = 0·75 for paved streets; 0·31 for rural districts; average 0·625.
A = area of district drained in acres.
S = general fall of area per thousand.

It is clear that R will depend upon the period of total contribution which will have to be found in each case in order that the formula may be applied. The factor C would, as regards unpaved areas at any rate, also depend upon the period of total contribution.

Kuichling's formula—

$$Q = A \times a \times t \times (b - c \times t).$$

A = area drained, in acres; a, b, c, empirical constants which vary for different localities; t = time required for the concentration of storm water at the outlet.

This formula seems needlessly complicated since, if t be known the rainfall can be found and a single modifying coefficient could be applied to it, as well as one to be applied to the quantity as a whole, if considered necessary.

Lloyd-Davis' formula—

$$Q = \left(60{\cdot}5 \times \frac{60}{Tc} \times R\right) \times Ap.$$

Q = cubic feet per minute; Tc = time of concentration in minutes (time of flow through the ongest sewers); R = rainfall in inches during Tc; Ap = percentage of impermeable area in acres.

In some respects this is a good formula, but the permeable area would also affect the total in most cases. It would seem better to treat permeable and impermeable areas separately, and add the resulting discharges together to get the total discharge, but it would be difficult to do this except where the period of total contribution was the same for both parts of the area.

Having found the period of total contribution, the maximum rate of rainfall for that period must be found from local rainfall records. Thus, a curve drawn for records of heavy falls for a district in Southern India gave the following results (*Ryves*):—

Heaviest fall in 30 mins., 2·0 ins.; in 60 mins., 3·0 ins.; in 85 mins., 3·8 ins.; in 104 mins, 4·2 ins.; in 134 mins., 4·8 ins.; in 150 mins., 4·9 ins. Such curves are not necessarily drawn for the heaviest 'spot' falls, which are usually due to cyclones traversing a very narrow path. The maximum spot rainfall may be much greater than the maximum for the storm-water area of a large town. Even when the maximum rainfall does affect the whole area it is not always worth while to design the works for this fall. For instance, in some places cyclones are rare, and the maximum falls may greatly exceed the largest intervening falls, for periods of many years, being perhaps 4 or 5 times greater. The same principle may hold with respect to large areas, and the cost of works to deal with another fall such as that which occurred in East Anglia in August 1912 or with floods such as those experienced in Paris in 1913, may be so great that it is better to risk the chance of a similar visitation.

Heavy Single Falls of Rain over Considerable Areas in the British Isles.

London, whole area, 2·5 ins. in 24 hours.
Lake District, 714 sq. miles, 5·63 ins.
Eastern Ireland, 1,160 sq. miles, 4·76 ins. } single fall in less than 3 days.

Aug. 1912.

East Anglia	18 sq. miles,	over 8 ins.	in about	24 hours		
"	" 238	" 7	"	" 24	"	
"	" 705	" 6	"	" 24	"	
"	" 1,039	" 5	"	" 24	"	
"	" 3,463	" 3	"	" 24	"	

Before 1912 the maximum fall for 24 hours recorded in Norfolk was 4·48 ins.

Heavy Station Rainfalls in the British Isles.

Inches in 24 hours: Seathwaite, 8·03 and 7·00; Ben Nevis, 7·74 and 7·29; Rosthwaite, 6·94; Angerton Hall, 6·70. For shorter periods:—

Banstead, 3·59 ins. in about 90 mins.; Wallington, 2·77 ins. in 65 mins., and 3·50 ins. in 60 mins.; Wimbledon, 1·58 in. in 80 mins.; Croydon, 1·85 in. in 2 hours 48 mins., and 0·8 in. in 15 mins.; Ponders End, 1·05 in. in 19 mins.; Birmingham, 1·04 in. in 27 mins.; Burnham, 1·73 in. in 40 mins.; a fall of 1·2 in. in 15 mins. seems to be the quarter-hour record for the British Isles.

Heavy Station Rainfalls, Canada and United States.

Toronto 0·5 in. in 10 minutes; and 0·6 in. in 15 mins.; New York, 1·2 in. in 10 mins.; Philadelphia, 1·6 in. in 20 mins.; Chicago, 0·97 in. in 7 mins.

Heavy Station Rainfalls in or near the Tropics.

Central America, 0·6 in. in 10 mins. ; 1·1 in. in 30 mins. ; 1·7 in. in 60 mins. Panama Isthmus, 6 ins. in 95 mins. ; 4·9 ins. in 60 mins. ; 5·86 ins. in 60 mins. Philippines, 27 ins. in 24 hours, also (1913) 48 ins. in 48 hours, and 24 ins. in 8 hours (same storm). Manila, 17 ins. in 15 hours. Near Johannesburg, 3·2 ins. in 15 mins. Near Durban, 15·6 ins. in 15 hours ; 17·6 ins. in 24 hours ; 6 ins. in 3 hours. Mauritius, 18 ins. in 24 hours, and the mean of 15 stations 9·86 ins. in 24 hours ; 99 ins. in 6 days ; 24 ins. in 24 hours. Ceylon, 21 ins. in 24 hours ; 8 ins. in 4 hours.

Heavy Station Rainfalls in India.

Madras, 4·95 ins. in 3 hours ; 2 ins. in 18 minutes ; 3 ins. in 60 minutes, 10, 11, 12, 13, 18, and 20 ins. in 24 hours. Madras Presidency (South Arcot), 7, 8, 9, and up to 11·3 ins. in 24 hours. Central Provinces (Talgaon), 7·75 ins. in 6 hours. West Coast, Bombay Presidency, 8 ins. in 2 hours. Bombay Town, 7 to 9 ins. in 24 hours. Sholapur, 10 ins. in 7 hours.

Forests and Rainfall.

In a considerable number of cases it has been shown that the removal of forests has been followed by a diminution in the rainfall, and in other cases the rainfall has increased with the extension and growth of the forests. The extent of the difference probably depends upon whether the coolness of the forest area just turns the scale in favour of rain at critical times, the resulting increased coolness and dampness causing further falls of rain ; or whether, on the other hand, the forests merely present the best conditions in areas where the conditions generally are favourable to steady rainfall at frequent intervals. A point which is often overlooked is the effect of trees in increasing the total precipitation considerably beyond that recorded by rain gauges. A large proportion of the rime which collects on the twigs of trees in frosts afterwards reaches the ground as water, and, in climates such as those of the British Isles, the total amount of water deposited on the twigs from fogs and drifting clouds is considerable, and most of it reaches the streams or underground storage, or at least replaces losses from subsequent rainfall.

Of more importance, however, to hydraulic engineers is the effect of woodlands in modifying the run-off. The rush of water from bare hillsides is exchanged for the slower delivery from the matted carpet of the woodland, losses by evaporation may be much diminished and the melting of snow usefully retarded. In catchments from which flood waters are largely lost, woodlands may increase the available run-off by extending the period of surface flow. The maximum floods of rivers are reduced, and the lowest summer flow increased. Woodlands are usually much more effective than minor vegetation, such as gorse and heather, in preventing the soil from being carried from the land into an open reservoir.

To protect a reservoir from silting, it may be unnecessary to plant large areas, the silt being arrested by suitable planting of narrow belts of woodland, or by the protection of natural growth, along the margins of the streams.

Some engineers consider that in the case of small reservoirs the shelter afforded by a belt of trees along the margins is of value in reducing the amount of scour of the banks caused by wave action. Afforestation over considerable areas in large river basins would, in many cases, reduce the amount of silting in navigable rivers and estuaries.

A matter which does not receive sufficient attention in connection with hydraulic engineering is the effect of judicious planting or woodland conservation over small areas. A narrow belt of woodland along the foot of a slope will arrest the soil brought down by rains from the hillside. The encouragement of dense vegetation along the bottom of a narrow valley or glen may check the rate of flood discharge to a useful extent. The planting of suitable trees along ridges, and for a little way down the slope facing the rain bearing and damp winds, will produce the maximum of certain desired effects, in proportion to the area occupied. Suitable tree and bush growths in swampy areas and around their margins will increase their effect in checking flood discharge, and may prevent these areas from contributing large quantities of silt to the streams during very heavy rains. Areas of soft, cultivable soil liable to denudation may similarly be protected. Generally, a country which is, in the ordinary English sense of the words, ' well-timbered ' is, from the point of view of the hydraulic engineer, a favourable country ; and in the development of new lands the future effects of a proposed agricultural policy should be considered from this point of view, and in consultation with hydraulic engineers.

Rain Gauges.

The smallest diameter for a serviceable rain gauge is 5 ins., and is the size generally used. Trials with gauges of various diameter ranging from 1 in. to 2 ft. have shown that if they are set perfectly level, and observed with great care, exactly the same rainfall has been registered by all of them.

The standard height above ground for rain gauges is 1 ft.

The higher a gauge is fixed above the ground the smaller is the quantity of rain caught

owing to the eddies carried by the wind about any prominent upstanding object. The curve diagram (fig. 1), given in Beardmore's Hydrology, gives the divisor to be used for increasing the

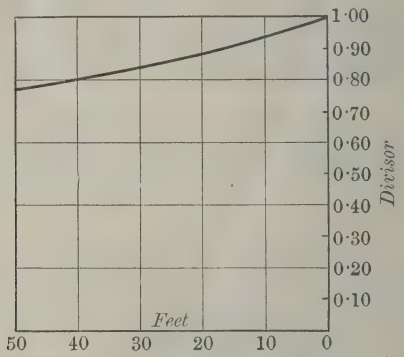


FIG. 1.

quantity of rain observed at any given height above ground level, so as to make the observation equal to that at ground level.

It is more important to have rain gauges placed at a uniform height above the ground than to have them of uniform diameter.

WELLS.

(Contributed by W. H. Booth, F.G.S., M.Am.Soc.C.E.)

The back of the steining should be puddled to a depth of 12 or 15 feet, so as to make the water pass through a considerable amount of soil before entering the well.

The ground around should be puddled, sloped away from the well, and paved, and the lining carried up about 2 feet above the ground level, to keep all dirty water out of the well. The mouth should be covered over, and the water drawn by a pump rather than a bucket.

Form of Wells.—Generally circular, but when there is no steining or a large water-yielding surface is required, as in headings driven from the shaft, a rectangular, elliptical, or other form may be used. Ordinary wells have a clear diameter of from 4 to 5 feet, but when very deep may require to be made large enough at the top to allow of reductions as the depth increases, still leaving room enough below for any pumping machinery.

Temperature in deep wells increases about 1° F. for every 55 feet in depth below 60 feet, at which depth it is pretty uniform at 50°.

Tubing for bore-holes is sometimes of cast iron, the lengths being held together by wrought-iron collars fitting over the ends and flush with the outside of the tubes.

The approximate average cost (pre-war prices) in England may be taken at 1*s.* 3*d.* per foot for the first 30 feet, 2*s.* 6*d.* per foot for the second 30 feet, and so on, advancing 1*s.* 3*d.* per foot for every additional 30 feet in depth. This does not include cost of tubing, conveyance of plant and tools, or working in rock of unusual hardness. (See also Artesian Wells, page 1288).

STEINING.

This is lining the well, chiefly to keep the sides from falling in. Where bricks are not available stone may be used, and even timber, but the latter soon decays. Iron cylinders are also employed.

Brick Steining.—The bricks should be hard, well burnt, and well shaped. Malm paviors are very good; if stocks are used, they should be very carefully picked. The bricks are either laid dry, called 'dry steining,' or in cement, or good hydraulic mortar, where strength is required or to keep out water.

In cement work cast-iron curbs are sometimes built in at suitable intervals, to facilitate the execution of the well, and also to strengthen the work.

In dry steining one or two courses set in cement are introduced for strength at intervals varying mostly from 5 to 12 feet.

The bricks are laid flat, breaking joint. The thickness of the steining varies with the depth and diameter of the well and the firmness of the ground; from 9 inches for diameters up to 9 feet, to 14 inches for diameters up to 14 feet, with an extra half-brick in very bad or loose soils. The best method of laying them is in half-brick rings, with headers at intervals, tying them together. Courses of headers are objectionable, unless the diameter of the well is large.

To exclude land or other springs not under very great pressure, concrete or clay puddle is introduced behind the steining; clay puddle is the more certain to be watertight. When the bricks are laid dry, the swelling of the earth behind will gradually fill up the spaces between them. It is very essential that the steining should be well backed up by working as close as possible to the sides of the excavation; and wherever, from any irregularity in the excavation, this is not convenient, the space should be well filled in either with puddle or brickwork; the latter is preferable, especially where a slip of earth has taken place, in which case the brickwork should be laid in cement. The principal object is to prevent the steining failing by being forced in at one part and out at the other by the pressure of the ground.

The ground round a well should be waterproofed for 30-feet radius of a circle about the well. This ensures that no water can even reach the back of the steining, which has not passed through a considerable bulk of earth.

Well-Sinking.

There are two methods of sinking and steining wells, the first adapted to dry or firm, and the second to wet or loose, ground.

First Method.—The excavation being sunk to a safe depth, a curb or ring of timber is placed at the bottom, formed in 2 or more thicknesses and lap-jointed to equalise its strength, cut circular on the inside but not on the out, of a breadth sufficient to receive the brick-lining of the well, and not less than 3 inches thick. On this, truly concentric with a central plumb-line, the brick lining is built up to the surface, the earth or a puddling of clay being punned in hard round the outside as the work rises. The excavation is now resumed in the centre, leaving enough earth undisturbed under the curb to support the work done. When a safe depth is again attained, the earth under the curb also is often removed in four equidistant places, the duty of support devolving temporarily on the intermediate portions left as piers; and from a broad central footing of timber 4 raking struts are set up and firmly fixed, to support the curb in the points from under which the earth was taken. This being done, the piers of earth are dug away, and the bottom is then, as before, made level around as a bed for a second curb; and thus the work proceeds in stages down to the required depth, the projecting angles of the curbs outside, by their penetrating the soil, contributing to the support of the brickwork in its progressive extension downwards. Sometimes the curbs, instead of being propped from below, are suspended by cross-timbers from the mouth of the well by iron rods.

Second or Older Method.—The surface of the ground having been levelled, or an excavation made to a safe depth, an iron curb with a sharp lower edge, or a wood curb shod with iron, with an outer diameter equal to that of the brickwork cylinder, is laid on the surface or in the excavation, and as the brick steining is built upon it, it sinks by its own gravity, the bricklayer continuing building up at the surface, while the digger inside descends, the soil being hoisted out as fast as excavated. When from the swelling of the ground the descending work becomes earth-bound, the process has to be recommenced at its base to a smaller diameter.

Iron Cylinders are sunk as just described for brick cylinders. They are mostly inserted in order to continue the well when the brick steining has been interfered with by running sands of the irruption of water. Until the water-yielding stratum has been passed through, the sinking of the cylinders is carried on with the assistance of the ordinary boring tools. The cylinders are generally of cast iron, made up of 5 or 6 feet lengths, bolted together by means of internal flanges, leaving the exterior surface perfectly smooth. The bottom length has, instead of a lower flange, a cutting edge to facilitate the descent. The joints are made watertight, either with gasket soaked in tallow or by being caulked with iron cement. Wrought-iron cylinders used for steining are jointed with angle and T iron by rivets countersunk on the outside, so as to leave a smooth surface. When the cylinders become earth-bound they are loaded, or else pressed down by jacks, or rammed down by wooden 'dollies.'

To increase the Yield from a Well already Executed.

1. The water-level in the well may be lowered by pumping, etc., by which the hydraulic depth for the inflow is increased.

2. The bore-hole may be deepened, thus probably leading to denser strata, through which there would be less percolation, and thus more yield to the well.

3. Headings may be driven laterally from the well; the best level for them is just above the lowest level to which the water is ordinarily pumped; in plan they should be straight lines through the well.

4. Dynamite or other explosive is lowered down to the bottom of the bore-hole, and then exploded by electricity.

THE NUMBER OF BRICKS AND QUANTITY OF BRICKWORK IN WELLS AND CYLINDRICAL SEWERS FOR EACH FOOT IN DEPTH OR LENGTH.

Diameter of Well, in Feet.	Half-Brick Thick.			One Brick Thick.		
	Number of Bricks.		Cubic Feet of Brickwork.	Number of Bricks.		Cubic Feet of Brickwork.
	Laid Dry.	Laid in Mortar.		Laid Dry.	Laid in Mortar.	
1·0	28	23	1·6198	70	58	4·1233
1·3	33	27	1·8145	80	66	4·7124
1·6	38	31	2·2089	90	74	5·3015
1·9	43	35	2·5035	102	82	5·8905
2·0	48	41	2·7979	112	92	6·4795
2·3	53	44	3·0926	122	100	7·0686
2·6	58	48	3·3870	132	108	7·6577
3·0	68	57	3·9760	154	126	8·8357
3·6	79	65	4·5651	174	142	10·0139
4·0	89	73	5·1541	194	159	11·1919
4·6	100	82	5·7432	214	176	12·3701
5·0	110	90	6·3322	234	192	13·5481
5·6	120	98	6·9213	254	209	14·7263
6·0	130	107	7·5103	276	226	15·9043
6·6	140	115	8·0994	296	242	17·0825
7·0	150	123	8·6884	316	260	18·2605
7·6	160	131	9·2775	336	276	19·4387
8·0	170	140	9·8665	358	292	20·6167
8·6	180	148	10·4556	378	308	21·7949
9·0	191	156	11·0446	398	326	22·9729
10·0	212	174	12·2227	438	360	25·3291

Quantity of Water in Wells.

To ascertain the quantity of water in a well, take half the circumference (in the clear) and multiply by half the diameter; multiply the result by the depth, which gives the cubic measures, then reckon 6 gallons and 1 pint to the foot cube.

Protective Distance from Drains.

A well should not be closer to a drain than 4 feet for every foot in depth; thus a 20-foot well should be at least 80 ft. from any possible source of corruption. Wells 100 ft. deep if with water-tight sides, may be relied upon as safe from leakage contamination, as this depth of soil is capable of removing a greater amount of organic matter that may exist in the water.

Prof. Frankland gives 200 yards from a cesspool, cemeteries, etc., as the nearest safe distance; in Italy, 100 yards; in France and Austria, 200 yards. But much will depend on the dip and nature of the strata.

Artesian Wells.

In the best modern practice, artesian wells are lined with stout steel-socketed wrought-iron or steel pipes, to a point at least lower than the lowest water level. In chalk bores the pipes are lightly driven at least 10 feet into the chalk—or further, if necessary—the projection of the sockets being very effectual in securing the shutting off of the upper, and perhaps undesirable, waters from the lower.

No pipe should be less than ¼ inch thick, from 3 to 6 inches diameter, up to ⅜ inch thick for pipes of 10 to 16 inches.

When the water level is considerably below surface, the yield of a well is measured by the capacity of the largest pump that can be put down the bore tube. Deep-bore pumps consist simply of a plain barrel hung in the water by a wrought-iron rising main pipe of slightly greater diameter. The bucket is hung by rods inside the rising main, and these project through a stuffing-box in an outlet casting on the top of the main, and are actuated by a crank or other means to give a stroke of 18 to 24 inches in ordinary cases. A plunger is added in the outlet casting for forcing to considerable heights above surface, and a balance lever should be connected to the cross-head by links.

The best water-bearing strata in England is the Lincolnshire (Oolitic) limestone, which contains many spouting copious wells; notably one at Sleaford, only 6 inches diameter, which overflows at 30,000 gallons per hour 3 feet above surface. The chalk is very free bearing in many parts, but capricious and occasionally nearly dry. The Keuper marl yields good brewing water at Newark, Burton, Leicester, etc., but not very copiously, and apt to be very small in amount and capricious in character. The Keuper sandstone is a free yielding stratum, and gives good soft water. The Permian sandstone is also a fair and at times a copious water-bearing rock, and so also is the magnesian limestone.

The Lower Greensand sometimes yields copiously, and, as a rule, the more copious the supply, the better the quality. It is at times ferruginous. The Lias clay is apt to produce saline water; so also is the London clay. The Upper Tertiary beds of the London basin below the London clay often yield fair but slightly alkaline supplies.

The carboniferous rocks vary greatly, and often give copious supplies, and but few rocks are quite dry. As a rule, the more copious yields are all within 200 feet of the surface. Deeper boxes yield less and less. Water has been obtained from the Lower Greensand in Windsor Forest at 1,243 feet below surface, the quantity being small, the quality good, and the water rising to about 230 feet above sea level, or overflowing the surface nearly 8 feet.

For borings in rock having a surface outcrop near the site of the boring, the water level will usually be little or nothing above the nearest watercourse crossing such outcrop, but where borings penetrate an impermeable surface, and reach a rock having a distant outcrop the water level will be determined by such outcrop, and, though lower than the receiving surface, will be higher than a distant draining point, if any.

It is by no means unusual for well borers to pass through water and declare it to be absent. They will also continue boring into strata that are hopeless as water-bearing strata under the impression that they have not yet passed through the upper stratum. Thus in places the Gault way rests upon the Kimmeridge clay, and it is difficult to distinguish one clay from the other. Well boring should only be carried out under educated inspection, and regular samples of everything passed through should be kept, and records of the water level every morning and of any change during the day. Small changes in the material and variations of the water level are often very instructive and significant to the hydrogeologist.

Wells in the lower chalk formation are frequently failures owing to failure of the workmen to recognise the evidences about them.

While there can be no good done by carrying wells to excessive depths, it is a common experience to find wells that have been sunk only to their high-water mark horizon, so that when the water level sinks the well is dry. This is a frequent occurrence in the lower chalk, in which there is a very wide difference between the highest and the lowest water levels. Wells sunk in high-water periods invariably run dry when the lower-water period approaches.

For the varying strata of the British Isles, and the usually small depths required, the ordinary system of boring with chisels and rods appears to be as cheap as any other. For depths beyond 500 feet the rope is often used. No one system can be adhered to, but rods, ropes, and the diamond must be employed, according to the requirements of each case.

More recent practice is to bore by means of the rotary chilled steel shot system. A plain thick steel pipe is notched at its lower end and rotated upon the rock to be pierced. A quantity of chilled steel shot is fed down the pipe. This gets under the lower end of the pipe by way of the notches, and, rolling on the rock under heavy pressure, comminutes by the intensity of the rolling crushing action. Water forced down removes the groundaway rock, and good cores are obtained. Several feet per day may be bored in hard limestone. The method involves no loss of costly diamonds.

To calculate the rate of flow of an artesian well, a simple plan is to lower a bottle of aniline fluid to a depth of, say, 500 feet, and then electrically explode a cap to burst the bottle. The time required for the fluid to appear at the surface gives an accurate gauge as to the velocity of flow. It is claimed that this method gives results as accurate as a weir. The diameter of the pipe being known, the rate of flow readily follows. (*W. H. Booth.*)

WATERWORKS.

(Revised by R. Fairfax Middleton, Assoc.M.Inst.C.E.)

MASONRY DAMS.

Rankine gives for low masonry walls to retain water that the thickness at the base should be about $\frac{6}{10}$ of the height either for rectangular walls or for those of trapezoidal form where the thickness at the top is $\frac{1}{3}$ that at the base.

Another rule for low dam walls is: Thickness at bottom 0·7 height; thickness at middle 0·5 height; thickness at top 0·3 height.

For high masonry dams Molesworth gives H = height of dam in ft.; x = any depth below

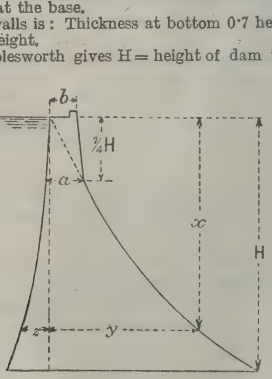


FIG. 1.

the water surface in ft.; y = offset from vertical line to outer face of dam at any depth x; z = ditto ditto to inner face; b = width of dam at top in ft.; a = width of dam at 1/4H from top in ft.; P = limit of pressure on masonry in tons per sq. ft.

$$b = 0{\cdot}4a; \quad y = \sqrt{\frac{{\cdot}05\,x^2}{\mathrm{P} + {\cdot}03\,x}}; \quad z = \left(\frac{{\cdot}09\,x}{\mathrm{P}}\right)^4;$$

y at any section must not be less than 0·6 x.

In modern practice a common typical section is triangular, the inner face being given a slight batter, and the back a batter which will generally approximate to 1 in 1½ but depends upon the weight of the masonry and the exact form of the wall.

The dam must be so proportioned that the resultant thrust acts within the middle third of the base, both with the reservoir full and empty; this provision should also apply to any horizontal section of the dam. The theoretical apex of the triangle must be high enough to allow, if necessary, for the water overtopping the wall, also for wave action.

EARTH DAMS.

The top width may be anything from 6 ft. to 20 ft., depending on the height of the dam and the freeboard.

The inner slope will generally be about 3 to 1 for gravel or other good material, but with clays it may not stand at this and must then be made flatter.

The outer slopes may be as steep as 2 to 1 depending on the angle at which the material will stand; the outer slope should be well drained. The inner slope must be protected from wave action; this is generally done by laying stone pitching or concrete slabs on the surface of the bank.

Water tightness is generally obtained by means of a core of puddled clay in the centre of the bank, the puddle being carried right down through the solid ground below the bank and well bonded into the impervious material on which the reservoir is built.

The puddle wall should generally be about 4 ft. thick at the top and both sides batter outwards about 1 in 40 to ground level, below which the thickness of the puddle should be quickly reduced to about 6 ft. and carried down at this as far as necessary. This applies to good puddle; the thickness must be increased if the puddle is of poor quality.

The puddle is sometimes replaced by a concrete wall; care must, however, be taken to avoid the possibility of unequal strains upon such a wall, as these might lead to cracking and possible failure.

CALLENDER'S SHEETING.

TRADE
'CALLENDRITE'
MARK

For the PERFECT WATERPROOFING of

RESERVOIRS, PONDS, CONDUITS, SWIMMING BATHS, TANKS, AQUEDUCTS, BRIDGES, EJECTOR CHAMBERS, ROOFS, BASEMENTS,
Etc., etc.

'CALLENDRITE' is the ORIGINAL PURE BITUMEN SHEETING invented by CALLENDER'S over 40 years ago, and is guaranteed to be manufactured from the finest Bitumen obtainable for the purpose, properly refined and tempered under **CALLENDER'S ORIGINAL PROCESS.**

BEWARE OF IMITATIONS.

EFFICIENCY WITH ECONOMY.

New Illustrated Catalogue No. XX sent free upon application to

GEORGE M. CALLENDER & CO. Ltd.

25 Victoria St., WESTMINSTER, S.W.

Telegrams:
'QUARRIABLE, VIC., LONDON.'

Telephone:
4642 VICTORIA.

F. 1290

WATERTIGHT RESERVOIRS

ENSURED BY THE USE OF

Callender's Sheeting

Trade ('CALLENDRITE') Mark.



Example of Reservoir Waterproofed with Callender's Sheeting.

George M. Callender & Co., Ltd.

25 Victoria St., Westminster, London.

Send for Illustrated Catalogue showing some of the Important Works carried out with 'CALLENDRITE' and the methods adopted.

F. 1291

Another method is to fill the trench in the solid ground with concrete and to build on this a wall of puddle. In this case the puddle must be well tongued into the concrete so as to ensure a watertight joint.

Lining Distribution or Service Reservoirs.

In small reservoirs watertightness may be obtained by covering the whole of the bottom and sides of the reservoir with a layer of puddle. The puddle in this case should be covered with concrete to protect it from damage. In reservoirs of any size, however, the cost of the method would be prohibitive.

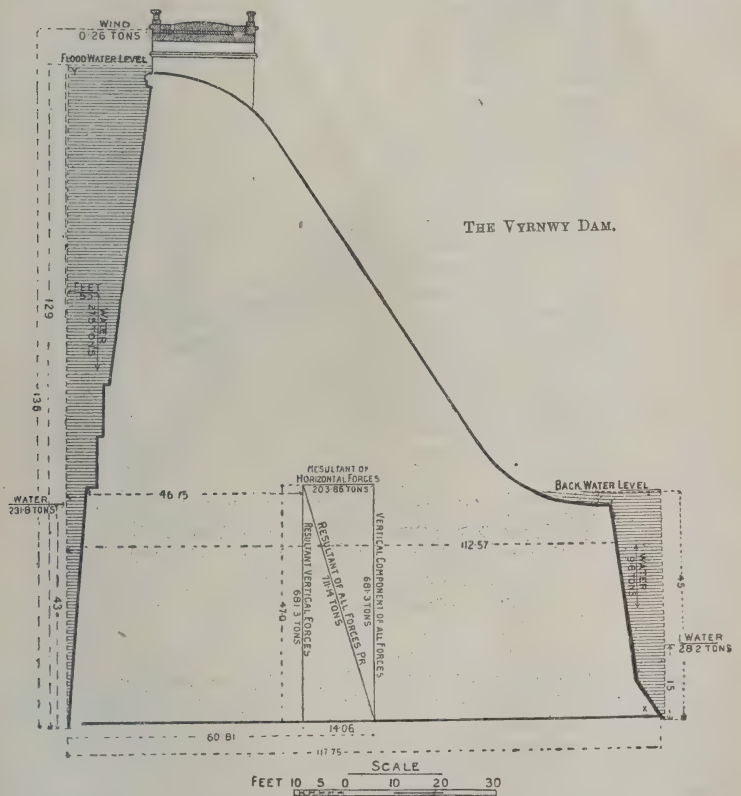


FIG. 2.—Cross-section of Vyrnwy Dam.

CALLENDRITE.

Callender's 'Callendrite' (*Geo. M. Callender & Co. Ltd.*, 25 *Victoria Street, Westminster, S.W.* 1) is the original bitumen damp course (for damp-proofing buildings) and sheeting, for effectively waterproofing old and new reservoirs, tanks, swimming baths, basements, flat roofs, etc., as invented by Callender's over forty years ago. It is used by the Admiralty, the War Office, the Office of Works, the London County Council, and other bodies.

The sheeting—for all engineering work—is made in standard rolls, 24 ft. long, 6 ft. wide.

Damp course in rolls 24 ft. long, to all the usual wall widths. When necessary, Callender's Patent Impervious Wall Ties and Patent Joining Irons should be employed. Price of Callendrite (including free delivery for fair order) averages 4*d.* per foot super for damp course and 6*d.* per foot super for sheeting. Inclusive price given, with guarantee of efficiency, for laying and fixing sheeting by Messrs. Callender's own workmen.

THE CROTON DAM.

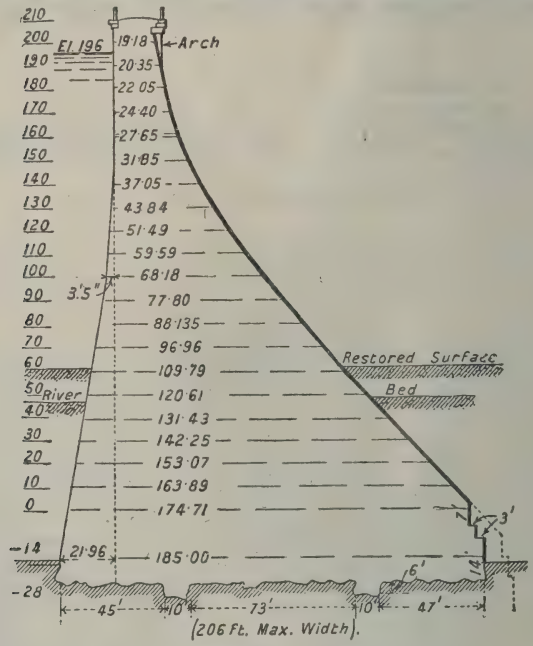


FIG. 3.—Cross-section of Croton Dam.

THE VYRNWY DAM.

The Vyrnwy Dam (fig. 2) is 1,350 feet long on the top, the plan being straight. The maximum height above the foundation is 136 feet. The profile adopted is designed to resist the water pressure and also to form a waste-weir; the front face of the wall is, therefore, made to conform to the curve described by water in overflowing, and to deflect it into the basin in front of the dam. The foundation is laid on a clay slate rock. The dam is built of 'Cyclopean rubble,' the stones varying in weight from 2 to 8 tons. For the lower part of the dam the stones are set in mortar composed of 2 parts washed sand, 1 part Portland cement; in the main portion of the work, instead of plain sand, a mixture of 1 part of the latter with 2 parts pulverised quarry rock was used for making the mortar, 2½ parts of the mixture being mixed with 1 part Portland cement. The area of the section, shown by fig. 2, is 8,972 square feet. With the reservoir full and the wind blowing with a force of 60 lbs. per square foot, the maximum stress on the masonry is 6·36 tons per square foot. Where the bed rock has the lowest elevation there are 26 drains in a length of 198 feet of the wall; these drains are 9 to 12 inches square, and lie on the rock near such places where leakage is apt to occur; they are 25 feet from the front face and 30 feet from the back face, and connect with a central tunnel 4 feet high by 2½ feet wide, which traverses the foundation longitudinally at an elevation of 46·3 feet above the base of the cross-section. By means of a cross-tunnel leading down-stream any water that may filter into the foundation above the elevation of the drains is discharged at the front face of the dam.

THE ASSUAN RESERVOIR.

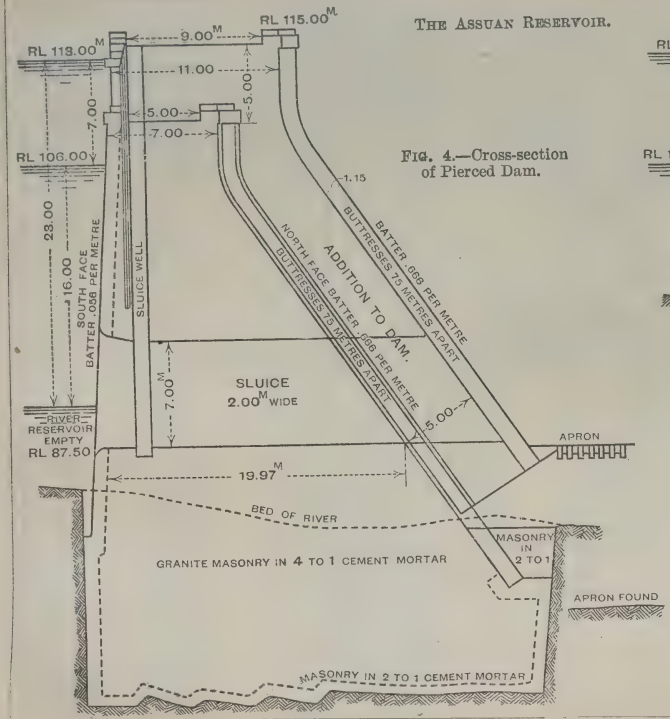


FIG. 4.—Cross-section of Pierced Dam.

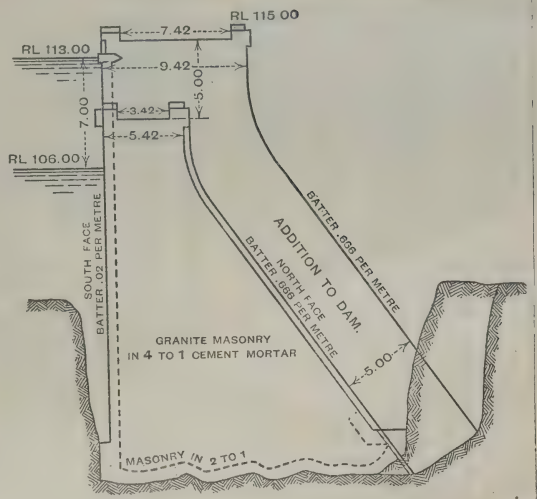


FIG. 5.—Cross-section of Solid Dam.

Mean High Flood Level at Aswan 92.80.
Mean Low Water Level.....85.10.

Contents of Reservoir-Original Dam 980,000,000M3
" " " Heightened Dam 2,300,000,000M3

The Assuan Dam.

The Assuan Dam (fig. 5, p. 1293) is a granite rubble masonry structure founded on a similar rock which is traversed by dykes of softer igneous material. It is situated at the head of the first cataract of the Nile.

As originally constructed it was just under two kilometres in length, the top level of the structure was RL. 110·00, the water being held up to a level of 106·00.

It is pierced for the greater part of its length by sluices which are closed by steel gates, most of them working on the Stoney principle. There are 180 sluices in all, of which 22 are at a level of 100·00 and 18 at 96·00; these sluices are 3½ metres high by 2 metres wide. Of the others, which are 7 metres high by 2 metres wide, 75 are at RL. 92·00 and 65 at RL. 87·50; 30 of the lowest sluices are lined with cast iron, the rest being smooth-faced granite ashlar.

The original dam was finished in the summer of 1902.

It was found that the rush of water through the sluices was such as to erode what had appeared to be solid rock, and it was therefore necessary to build masonry aprons along practically the whole length of the pierced dam.

Between 1907 and 1912 the dam was raised so as to impound water to a level of 113·00 metres, and it was at the same time thickened by a blanket wall five metres thick on the downstream side.

The original reservoir impounded 980,000,000 cubic metres of water, or 216,000,000,000 gallons.

The heightened reservoir contains 2,420,000,000 cubic metres, or 533,370,000,000 gallons.

The reservoir is used for irrigation purposes.

GENERAL ARRANGEMENT OF RESERVOIRS.

Overflow.

In reservoirs filled by gravity a waste weir must be provided to carry off flood water, and should be so designed that the maximum flood will not cause the water to rise more than 18 inches over the lip of the weir.

The waste weir channel should be built in solid ground: it is generally constructed in a flight

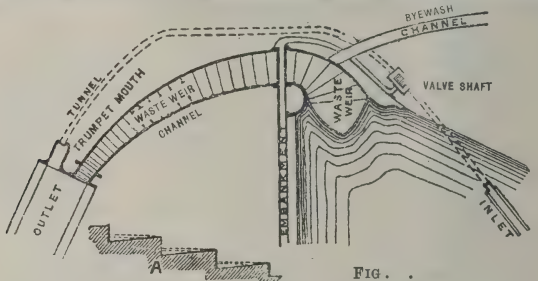


FIG. .

of steps, so as to check the velocity of descent; the risers vary from 1 ft., which is best, to about 5 ft., and the tread should, if possible, be at least double the riser. The best form is a series of weirs and pools, or tumbling bays, or flights of steps with long landings or pools at intervals, the drop into pool being as small as possible. The pools may be formed as shown at A (fig. 6): depth of pool = drop, length of pool = drop × 10.

Fig. 6 shows a tunnel round the flank, also the valve shaft, byewash, and other accessories.

The tunnel and byewash are used for passing storm waters during construction, the former being used afterwards for supply purposes and the latter for passing turbid water in times of storm.

Storage Reservoirs.

The capacity of storage reservoirs is arrived at from the formula

$$C = \frac{500}{\sqrt[3]{R}},$$

where,

C = number of days' storage, = R available rain in inches, as explained under heading 'Gathering Grounds.'

Messrs. W. J. E. Binnie and H. Lapworth have lately suggested the following formula for calculating storage:—

$$s = 15\frac{(n-d)^2}{r^{1\cdot85}},$$

where,

s = inches of storage required to supply (constantly from a stream) n inches per annum; d = the extreme minimum dry-weather flow reduced to inches per annum; r = mean run-off, also in inches per annum.

The storage required in gallons is equal to $s \times$ area of gathering-ground in acres $\times$ 22,610.

The formula is empirical, and was arrived at by a study of the data of seven areas of supply.

GATHERING GROUNDS.

In arriving at the water available from an area the average rainfall on the area must be found from rainfall records; ¼ of this is then generally taken as the average for the three driest consecutive years and then a deduction must be made for evaporation, generally 14 to 16 inches; the remainder, subject to special conditions, will be the available rain; ⅓ of this often has to be given in compensation.

The above applies to ordinary cases in the United Kingdom. For a study of run-off under various climatic conditions, see 'Rainfall' (p. 1279).

On the moorland gathering-grounds supplying Sheffield, rainfall averages 40 ins. a year, two-thirds of which is reckoned on as available; one-third goes as compensation to millowners, etc., and one-third to inhabitants. Every 1,000 acres is said to give an average of 1,250,000 gallons per diem. On the Leeds moorland gathering-grounds ½ cubic feet per second, or 134,600 gallons per diem per 1,000 acres, is the usual minimum dry-weather discharge; the formation is millstone grit, rainfall 26 ins. to 45 ins., of which 14 ins. is allowed for evaporation and 6 ins. as compensation to millowners.

FILTRATION.

(Contributed by H. F. Rutter, M.Inst.C.E.)

Filtration should be preceded by sedimentation. The researches of Dr. A. C. Houston prove that prolonged storage not merely reduces enormously the ordinary and harmless bacterial contents of river waters, but that such storage is a complete protection against danger from pathogenic microbes in the case of water initially infected with such germs.

The area of sand surface needed per million gallons per diem varies considerably, according to the character of the water and the fineness of the filtering medium. Yields of from one million to two million gallons per acre are common values. Modern filters have four feet of water over the sand, two feet nine inches of sand supported by eight inches of graduated shingle. Care should be taken that the uppermost layer of shingle should consist of stones less than half the size of a pea, so as to avoid the danger of the sand being drawn through the shingle. The means of collecting the water should cover the whole floor of the filter and should not consist of transverse pipes placed at intervals. A satisfactory and inexpensive method is to cover the floor with transverse rows of bricks laid dry end to end with a space of 4½ inches between each two rows. These are then completely covered with bricks laid dry at right angles to the rows. A series of 4½ in. by 3 in. channels are thus formed, which lead the filtrate to the central channel made below the floor.

A Deacon meter on the outlet pipe forms a useful means of checking and recording the rate of flow of the filter. Float gauges should be provided to show the relative levels of the water over the sand and in the outlet pipe. The difference between these levels indicates the head under which the filter is working. This head may vary from one inch when the filter is started slowly after cleaning, up to 2 or 3 feet.

Means should be provided for drawing the raw water from above the sand to waste, in case it be required to clean a filter immediately which has become clogged. A quarter to half an inch of sand with the matter arrested thereon is removed by flat shovels. This sand can be washed and spread again either at once, or after the depth of the sand has been reduced by five or six successive cleanings. The cleanings may be at intervals of from one week to four months, according to the character of the water, and the amount of algal growth in the water, which latter condition may materially affect the life of the filter. The removal and cleaning of the main body of the sand is needed at very rare intervals. Filters are in use yielding water of perfectly satisfactory bacteriological character in which the main body of sand has not been changed for forty years.

When a filter is to be cleaned the water should not be drawn down in the sand to a level more than 12 inches below the surface of the sand. This leaves the surface quite hard enough to support the weight of the cleaners, and prevents the sand becoming unduly compacted.

All sensible suspended matter is arrested on the surface of the sand of a filter, and the largest elimination of bacterial life takes place at or near the surface. The bacterial contents are, however, still further reduced progressively in the passage of the water through from five to ten inches of the depth of the sand.

THE 'TORRENT' FILTER.

(The Pulsometer Engineering Co., Ltd., Reading).

In this filter (fig. 7) the filtration is effected by passing the water through a certain thickness of suitable filtering medium, arrangements being made so that the entire filtering medium can be thoroughly cleaned.

The construction is very substantial, all parts are accessible, and the various valves for operating and cleaning the filter are brought together at one place for convenient handling. There are no mechanically moved parts either inside or outside the filter, so that there are no parts to wear or keep in adjustment.

The filter is made either cylindrical or square (the latter when it is necessary to economise space or when the filter has to be brought in parts into an existing building through ordinary doors). A strainer plate is fixed near the bottom of the filter casing, and this plate carries a

layer of filtering medium. The unfiltered water admitted to the upper part of the filter percolates through the filtering medium, where the matter in suspension is retained, and reaches the space below the strainer plate in a clear and bright condition. The bottom of the filter casing is connected to the filtered water main.

The cleaning of the filter is effected by means of air agitation and a reverse flow of filtered water. If there is sufficient pressure in the fitered water main, say equal to 10 to 15 ft. head, a reverse flow from the filtered water main can be used; but if there is not sufficient head in this main, or if the filtered water reservoir is below the level of the filter, it is necessary to employ a centrifugal pump to force the washing water through the filter.

The air agitation (by compressed air) is effected by means of a separate system of air nozzles in the strainer plate, through which the air is equally distributed over the whole area of the

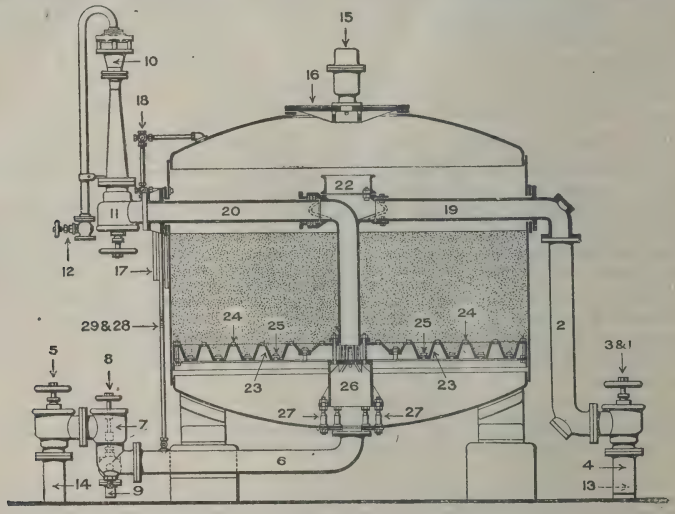


FIG. 7.

LIST OF COMPONENT PARTS.

1. Unfiltered water inlet valve.
2. Unfiltered water inlet wash-out bend.
3. Wash-out valve.
4. Wash-out pipe.
5. Filtered water outlet and wash water inlet valve.
6. Filtered water and wash water bend.
7. Patent wash water regulating valve.
8. Drain valve.
9. Drain pipe.
10. Air blower.
11. Blower valve.
12. Steam stop valve to air blower.
13. Unfiltered water pipe.
14. Filtered water pipe.
15. Automatic air escape valve.
16. Manhole cover.
17. Differential mercury gauge.
18. Water gauge glass.
19. Internal inlet and wash-out pipe.
20. Internal air pipe to strainer plate.
22. Internal wash-out and inlet bell mouth.
23. Strainer plate.
24. Air nozzles.
25. Strainers.
26. Stool for strainer plate.
27. Studs for strainer plate stool.
28. Pressure pipe from underside of filter medium.
29. Pressure pipe from above filter medium.

filter bed. The air nozzles being entirely separate from the strainers makes it possible to use the air simultaneously with the reverse flow of water during the process of cleaning, if found desirable. The air main is carried above the filter, so that there is no risk of its becoming waterlogged, which might cause obstruction to the passage of the air.

A steam blower may be used for supplying the compressed air, but if steam is not available, a small air compressor, with or without an air receiver, can be employed.

The air causes a violent ebullition in the filter and has the effect of raising the filtering

medium, so that the various particles are free to move, and in knocking against one another dislodge all the matter which adheres to their surfaces. Whilst the air agitation is going on an upward flow of water carries away, through the wash-out pipe, the impurities which have been dislodged by the action of the air.

The system of cleaning effects a considerable saving in the amount of wash-water used as compared with that necessary when water only, or water and mechanical agitators, are used.

The time taken to clean the filter may be from 10 to 20 mins.—depending on the nature of the water and the time the filter has been at work since the last cleaning.

A differential gauge is fitted to show the head lost in the filter. This gauge gives an indication of when the filter requires cleaning, because the difference in pressure between the top and bottom of the filter increases as the impurities accumulate on the filtering medium.

MAINTENANCE AND RENEWAL OF WATERWORKS.

In the Metropolitan area, 'pumping' constitutes, on an average, 43 per cent. of the entire maintenance expenditure. During the last thirty years 4,408,846*l.* has been expended out of revenue on pumping operations and on the maintenance and renewals of the pumping-engines and machinery, which during that period have supplied the Metropolis with 1,745,718 million gallons of water for all purposes; thus the cost of pumping alone has been, on the average, 2*l.* 10*s.* 7½*d.* per million gallons, or ·000606*d.* per gallon.

The cost of repairs and renewals of water-mains and pipes amounted to 2,964,127*l.*, or an average of 1*l.* 14*s.* per million gallons.

The average maintenance cost per mile of water-main or pipe-way (adopting the analogy of a railway as a means of conveyance) has been 24*l.* 5*s.* 5*d.*

The cost per million gallons for filtration is 0·37*l.* (*Price-Williams.*)

Standard of Purity of Water.

Total hardness in practice varies from 0 to 30 degrees; 5 degrees is generally considered best.

Water containing more than the following quantities of impurities should be looked upon with suspicion: Chlorine, 1 part per 100,000; Nitrites, 0·2 part per 100,000; Nitrates, 0·3 part per 100,000; Ammonia, 0·1 part per 100,000; Organic Carbon, 2 parts per 100,000; Organic Nitrogen, 3 parts per 100,000; Albumenoid Ammonia, 0·01 part per 100,000.

WATER TESTING.

Simple and ready tests for rough analysis.

For *Sewage.*—Four drops of a solution of potash (Condy's Fluid) to a small glass of water. The colour turns pale or yellow if decomposed organic matter is present.

Lead.—Six drops of sulphuric acid in small glass of water. White precipitate will be found if lead is present.

Zinc.—Six drops of ferro-cyanide of potassium to small glass of water. Green colour if zinc is present.

Copper.—Eight drops of ammonia in small glass of water. Water turns blue if copper is present.

CHEMICAL PURIFICATION OF WATER.

Water is sometimes purified by chemical means: there are several methods, of which the most important are (1) by the addition of chloride of lime and (2) by submitting the water to the action of ozone.

By these methods the impurities are not removed, but the water is sterilised and all the bacteria which it contains are destroyed.

Reservoirs in which vegetable growth or algæ has become profuse have been cured by dragging a bag of sulphate of copper behind a boat to and fro over the area of the reservoir. A very minute fraction of this poisonous salt will effectually destroy all growth, and it is said that the salt cannot be detected in the water after the process is complete. Apparently the organic matter has absorbed it; but as the salt is extremely poisonous great care must be taken that too much is not used.

Action on Lead.

Peaty water from moorlands has a solvent action on lead pipes, due to acidity. It varies, in terms of a sulphuric acid equivalent, from 1 to 44 parts in 100,000. Peaty grounds of small incline are particularly acid, and such water is dangerous on account of its action on lead pipes. According to Mr. Ackroyd the solvent action would not occur if the acidity did not exceed ·5.

Diameter of Pipes.

The diameters of pipes are usually calculated by either Eytelwein's Kütter's or formula.

Eytelwein's formula is

$$V = \sqrt{(11704\,RS) + ·01698} - ·1303$$

where,

V = velocity in feet per sec. ; R = Hydraulic mean radius in feet = Area ÷ wet perimeter = D ÷ 4 for circular section of pipe, where D = diameter of pipe in feet, S = sine of inclination = $h \div l$, where h = head in feet; l = length in feet.

An adaptation of this formula which gives good average results is

$$Q = 4{\cdot}7\ D^2\sqrt{\frac{Dh}{l}}$$

where,

Q = discharge in cub. ft. per min., and D is in inches.

This formula gives rather high results in the case of small pipes with flat gradients, and somewhat low results for large pipes with steep gradients.

Kütter's formula is

$$V = \left[41{\cdot}6 + \frac{1{\cdot}811}{n} + \frac{{\cdot}00281}{S}\right] \div \left[1 + \left(41{\cdot}6 + \frac{{\cdot}00281}{S}\right)\frac{n}{\sqrt{R}}\right]\sqrt{RS}.$$

where V, R, and S have the meanings stated above, and n is Kütter's coefficient for roughness, which varies from ·009 to ·017, ·013 being a value which is frequently taken.

Incrustation and Corrosion of Iron and Steel Pipes.

High-water velocity is favourable to corrosion and incrustation. Cast-iron being taken to rust at the rate of 100, wrought-iron may be taken as 129, and steel at 133. Some waters, as chalk-well waters, treated by Clark's process, will simply cause a clean layer of carbonate of lime inside a pipe. Upland waters, especially if containing peat acid, cause rust. Old red-sandstone water neither rusts nor causes deposit. Greensand water causes rust. Filtered water is better than unfiltered. Angus Smith composition (see Index) is not a permanent protector. Founders do not as a rule exercise proper care in dipping pipes; the pipes ought to be well brushed out, by passing through them a revolving steel brush *from both ends*, so as to get the brushing effect each way, and they should be then at once heated and dipped. Dipping should be vertical, and the pipes ought to again be brushed by the revolving steel brush when immersed in the dip, without which treatment perfect contact may be difficult to secure between the iron and the composition. It is undoubtedly at the pinholes, caused by minute air bubbles, that the first encroachments of corrosion are made upon the pipe

According to H. F. Rutter, pipes of cold-blast iron are far superior to those of hot-blast, as regards resistance to corrosion.

Tracing Leakages.

To identify and trace the source of underground water, such as leakages from canals, reservoirs, pipes, etc. :—

Fluorescin.—Mix fluorescin with the supposed source of the leakage. One grain is sufficient to colour 100 tons of water.

Indigo.—One grain of indigo dissolved in sulphuric acid will colour a ton of water.

The colouration is more easily detected by placing the water in a very long test-tube and looking through the latter endways.

Consumption of Water.

This varies very largely in different parts of the country : in Edinburgh as much as 40 gallons per head per day are consumed, and in Glasgow much more. Where trade requirements are small 25 gallons per head per day should, however, usually be sufficient for domestic consumption, garden, and street watering, and for flushing.

Hardness of Water.

Hardness is termed *Permanent* or *Temporary* according as the hardness is due to the bi-carbonate of lime and magnesia, which cease to be soluble at 212°, or to sulphate of lime, which remains in solution to much higher temperatures. There exist at the present date two methods of removing either or both of these forms of hardness, the first being by treatment with caustic lime and caustic soda, and the second by filtration over zeolites.

(1.)

Treatment by Caustic Lime or Caustic Soda.

Lime sulphate is dealt with by carbonate of soda, and is converted into the mono-carbonate of lime, while sulphate of soda remains in solution as a very soluble salt. Practically these two lime salts, or the magnesia, are the only salts calling for practical treatment. The following are the reactions which take place, from which it is obvious that where caustic soda can be procured cheaply it may be used where both impurities are present, and will perform a double duty and take the place of some or all of the caustic lime.

(*a*) A water containing only bi-carbonate of lime :

Bi-carbonate of Lime	+	Caustic Lime	=	Carbonate of Lime
$CaO+2(CO_2)$	+	CaO	=	$2(CaCO_3)$
$56+88$	+	56	=	$2(100)=200$ of deposit

(*b*) A water containing carbonate of magnesia :

$$MgO+2(CO_2) + CaO = (MgCO_3)+CaCO_3$$
$$40 + 88 + 56 = 84 + 100$$

(*c*) A water containing sulphate of lime :

Sulphate of Lime		Carbonate of Soda	
$CaSO_4$	+	Na_2CO_3	$=CaCO_3+Na_2SO_4$
136	+	106	$= 100 + 142$

or water (*a*) treated by caustic soda :

Bi-carbonate of Lime		Caustic Soda		Carbonate Lime		Soluble Carbonate Soda Water
$CaO+2(CO_2)$	+	$2(NaHO)$	=	$CaCO_3$	+	$Na_2CO_3+H_2O$
144	+	80	=	100	+	$106 + 18$

(*d*) A water with both salts in solution :

$$\left\{\begin{matrix}[CaO+2(CO_2)] \\ 144\end{matrix} + \begin{matrix}CaSO_4 \\ 136\end{matrix}\right\} + 2\left\{\begin{matrix}HNaO\end{matrix}\right\}$$
$$= \text{first reaction } [CaO+2(CO_2)]+CaO+[Na_2SO_4+H_2O]$$
$$= \text{second reaction } \begin{bmatrix}CaCO_3+CaCO_3 \\ \text{insoluble}\end{bmatrix}+\begin{bmatrix}Na_2SO_4+H_2O \\ \text{soluble}\end{bmatrix}$$

Both actions go on simultaneously.

When the bi-carbonate exists in greater proportion than 144 to 136 of the sulphate, the difference in excess must be dealt with by caustic lime as per (*a*). When the sulphate of lime is in excess beyond 136 to 144 of bi-carbonate, the excess is to be dealt with by carbonate of soda as in (*c*). There is no such salt as bi-carbonate of lime except in solution in water containing carbonic acid gas. It is taken as evidence of the existence of the bi-carbonate that the carbonic acid gas is found in the equivalent necessary proportion which would form a bi-carbonate

(2.)

REMOVAL OF PERMANENT OR TEMPORARY HARDNESS BY FILTRATION OVER ZEOLITES.

The exchange which takes place may be represented by the following formulæ which show the reaction, P representing the zeolite or 'Permutit.'

For the softening of temporary hardness :—

$$P - Na_2 + CaH_2(CO_3)_2 = P - Ca + 2NaHCO_3$$
$$P - Na_2 + MgH_2(CO_3)_2 = P - Mg + 2NaHCO_3$$

For the softening of permanent hardness :—

$$P - Na_2 + CaSO_4 = P - Ca + Na_2SO_4$$
$$P - Na_2 + MgSO_4 = P - Mg + Na_2SO_4$$

The reaction continues for so long as any of the base originally existing in the active Permutit remains, after which all action ceases, and the active base has to be restored to its original state by a treatment with a sodium salt.

Thus by a process of exchange to and fro, which is effected without any wastage in the zeolite itself, a softening action is secured, which is continuous and capable of thoroughly and completely removing all hardness in any water supply. The method of softening water by this treatment of filtering through zeolite affords the only means for complete elimination of both temporary and permanent hardness at one and the same time, a water of zero degrees of hardness resulting for so long as the designed capacity of the plant is not exceeded.

By adoption of zeolytic filtration, it has become possible to entirely remove from a water supply all traces of iron in the water, thereby eliminating to a great degree the high corrosive property possessed by certain supplies.

Softening Water.

Dr. Clark's process softens water rendered hard by calcium bi-carbonate. It consists in mixing with it about one-tenth (for spring water from chalk) of water saturated with lime in solution, the lime in which, combining with the free carbonic acid of the bi-carbonate, forms a solid precipitate of chalk. It will soften Thames and New River water down to $3\frac{1}{2}°$, or lower than if boiled for an hour : but it can rarely bring any water below $2\frac{1}{2}°$ of hardness, what is left being termed permanent hardness. Prolonged boiling will drive off the free carbonic acid from the bi-carbonate, precipitating the carbonate. According to Clark's scale, $\frac{1}{4}$ oz. of soap will remove $1°$ of hardness from 10 gallons of water.

TABLE SHOWING VELOCITY IN FEET PER SECOND, AND SUPPLY IN GALLONS PER MINUTE, FOR LONG PIPES FLOWING FULL.

(See note, page 1302.)

Diameter of Pipe in Inches.	Velocity in Feet per Second.	Supply in Gallons per Minute.	Velocity in Feet per Second.	Supply in Gallons per Minute.	Velocity in Feet per Second.	Supply in Gallons per Minute.	Velocity in Feet per Second.	Supply in Gallons per Minute.	Velocity in Feet per Second.	Supply in Gallons per Minute.	Diameter of Pipe in Inches.
	Head of Water divided by Length of Pipe.										
	$\frac{1}{1000}$		$\frac{2}{1000}$		$\frac{3}{1000}$		$\frac{4}{1000}$		$\frac{5}{1000}$		
⅜	·173	·05	·278	·08	·363	·10	·436	·13	·502	·14	⅜
½	·212	·11	·336	·17	·436	·22	·522	·27	·600	·31	½
¾	·278	·32	·436	·50	·562	·64	·670	·77	·770	·88	¾
1	·336	·69	·522	1·07	·670	1·37	·798	1·63	·911	1·86	1
1¼	·388	1·24	·600	1·91	·770	2·45	·911	2·90	1·04	3·31	1¼
1½	·436	2·00	·670	3·08	·856	3·93	1·02	4·67	1·16	5·44	1½
1¾	·481	3·00	·736	4·60	·938	5·86	1·11	6·94	1·27	7·91	1¾
2	·522	4·26	·798	6·51	1·02	8·29	1·20	9·81	1·37	11·17	2
2½	·600	7·64	·911	11·62	1·16	14·76	1·37	17·45	1·56	19·85	2½
3	·670	12·30	1·02	18·66	1·29	23·64	1·52	27·92	1·73	31·73	3
4	·798	26·03	1·20	39·23	1·52	49·63	1·79	58·53	2·04	66·46	4
5	·911	46·48	1·37	69·79	1·73	88·14	2·04	103·84	2·31	117·80	5
6	1·02	74·64	1·52	111·66	1·92	140·83	2·26	165·77	2·56	187·95	6
7	1·11	111·09	1·66	166·07	2·09	209·22	2·46	246·10	2·79	278·90	7
8	1·20	156·92	1·79	234·11	2·26	294·70	2·65	346·45	3·01	392·46	8
9	1·29	212·71	1·92	316·87	2·41	398·58	2·83	468·35	3·21	530·36	9
10	1·37	279·16	2·04	415·34	2·56	522·08	3·01	613·22	3·40	694·24	10
11	1·45	356·95	2·15	530·42	2·70	666·39	3·17	782·42	3·59	885·56	11
12	1·52	446·66	2·26	663·07	2·83	832·63	3·33	977·29	3·76	1105·8	12
15	1·73	793·27	2·56	1174·7	3·21	1473·2	3·76	1727·8	4·26	1956·7	15
18	1·92	1267·5	2·83	1873·4	3·55	2347·2	4·16	2751·4	4·71	3110·0	18
24	2·26	2652·2	3·33	3909·2	4·16	4891·4	4·88	5727·8	5·51	6470·3	24
30	2·56	4698·8	3·76	6911·3	4·71	8638·9	5·51	10109·7	6·22	11415·0	30
	Head of Water divided by Length of Pipe.										
	$\frac{6}{1000}$		$\frac{7}{1000}$		$\frac{8}{1000}$		$\frac{9}{1000}$		$\frac{1}{100}$		
⅜	·562	·16	·618	·18	·670	·19	·720	·21	·770	·22	⅜
½	·670	·34	·736	·38	·798	·41	·856	·44	·911	·46	½
¾	·856	·98	·938	1·08	1·02	1·17	1·09	1·24	1·16	1·33	¾
1	1·02	2·08	1·11	2·27	1·20	2·45	1·29	2·63	1·37	2·79	1
1¼	1·16	3·69	1·27	4·04	1·37	4·36	1·47	4·67	1·56	4·96	1¼
1½	1·29	5·91	1·41	6·46	1·52	6·98	1·63	7·47	1·73	7·93	1½
1¾	1·41	8·79	1·55	9·68	1·66	10·38	1·78	11·10	1·89	11·79	1¾
2	1·52	12·41	1·66	13·56	1·79	14·63	1·92	15·65	2·04	16·61	2
2½	1·73	22·04	1·82	23·30	2·04	25·96	2·18	27·75	2·31	29·45	2½
3	1·92	35·21	2·09	38·43	2·26	41·44	2·41	44·29	2·56	46·99	3
4	2·26	73·68	2·46	80·36	2·65	86·61	2·83	92·51	3·01	98·60	4
5	2·56	130·52	2·79	142·30	3·01	153·31	3·21	163·69	3·40	173·70	5
6	2·83	208·16	3·09	226·84	3·33	244·32	3·55	260·81	3·76	277·10	6
7	3·09	308·76	3·37	335·60	3·62	362·21	3·87	386·57	4·09	408·45	7
8	3·33	434·35	3·62	473·09	3·90	509·38	4·16	543·49	4·41	575·83	8
9	3·55	586·82	3·87	639·02	4·16	687·85	4·44	733·83	4·71	777·50	9
10	3·76	767·92	4·09	833·58	4·41	899·75	4·71	959·88	4·99	1016·9	10
11	3·97	979·39	4·32	1066·1	4·65	1147·2	4·96	1223·7	5·26	1298·4	11
12	4·16	1222·9	4·53	1331·3	4·88	1432·0	5·18	1522·7	5·51	1617·6	12
15	4·71	2159·7	5·12	2349·8	5·51	2527·4	5·87	2694·9	6·22	2853·8	15
18	5·18	3426·1	5·65	3737·0	6·08	4019·3	6·48	4284·7	6·86	4536·5	18
24	6·08	7145·4	6·61	7769·1	7·11	8351·6	7·58	8900·4	8·02	9421·1	24
30	6·86	12601·3	7·50	13772·4	8·02	14720·4	8·54	15684·5	9·04	16599·0	30

TABLE SHOWING VELOCITY IN FEET PER SECOND, AND SUPPLY IN GALLONS PER MINUTE, FOR LONG PIPES FLOWING FULL (*continued*).

Diameter of Pipe in Inches.	Velocity in Feet per Second.	Supply in Gallons per Minute.	Velocity in Feet per Second.	Supply in Gallons per Minute.	Velocity in Feet per Second.	Supply in Gallons per Minute.	Velocity in Feet per Second.	Supply in Gallons per Minute.	Velocity in Feet per Second.	Supply in Gallons per Minute.	Diameter of Pipe in Inches.
	Head of Water divided by Length of Pipe.										
	$\frac{3}{100}$		$\frac{3}{100}$		$\frac{4}{100}$		$\frac{5}{100}$		$\frac{6}{100}$		
½	1·16	·33	1·47	·42	1·73	·50	1·96	·56	2·18	·62	½
¾	1·37	·70	1·73	·88	2·04	1·04	2·31	1·18	2·56	1·31	¾
1	1·73	1·98	2·18	2·50	2·56	2·94	2·90	3·33	3·21	3·68	1
1¼	2·04	4·15	2·56	5·22	3·01	6·13	3·40	6·94	3·76	7·68	1¼
1½	2·31	7·36	2·90	9·24	3·40	10·85	3·85	12·27	4·26	13·59	1½
1¾	2·56	11·75	3·21	14·73	3·76	17·28	4·26	19·57	4·71	21·60	1¾
2	2·79	17·43	3·50	21·84	4·09	25·53	4·63	28·95	5·12	31·98	2
2½	3·01	24·53	3·76	30·72	4·41	35·99	4·99	40·67	5·51	44·93	2½
3	3·40	43·39	4·26	54·35	4·99	63·55	5·63	71·79	6·22	79·27	3
4	3·76	69·11	4·71	86·39	5·51	101·10	6·22	114·15	6·86	126·01	4
5	4·41	144·20	5·51	179·73	6·44	210·17	7·27	237·17	8·02	261·70	5
6	4·99	254·50	6·22	317·08	7·27	370·57	8·20	418·02	9·04	461·08	6
7	5·51	404·30	6·86	504·05	8·02	588·82	9·04	663·96	9·97	732·18	7
8	5·99	598·62	7·50	749·83	8·71	870·78	9·82	981·68	10·83	1082·4	8
9	6·44	840·68	8·02	1046·8	9·36	1222·0	10·55	1377·3	11·63	1518·3	9
10	6·86	1134·1	8·54	1411·6	9·97	1647·4	11·24	1856·4	12·38	2046·2	10
11	7·27	1482·3	9·04	1844·3	10·55	2152·0	11·89	2424·5	13·10	2665·9	11
12	7·65	1888·3	9·52	2348·8	11·10	2740·1	12·49	3082·9	13·78	3401·4	12
15	8·02	2355·3	9·97	2928·7	11·63	3416·1	13·10	3838·9	14·43	4239·6	15
18	9·04	4149·7	11·24	5157·0	13·10	5998·2	14·75	6769·5	16·25	7457·0	18
24	10·07	6653·4	12·38	8184·8	14·43	9539·1	16·25	10738·1	17·89	11826·3	24
30	11·63	13664·4	14·43	16958·3	16·81	19754·1	18·92	22228·8	20·83	24474·3	30
	13·10	23993·0	16·25	29828·1	18·92	34732·5	21·28	39073·2	23·43	43011·1	

	Head of Water divided by Length of Pipe.										
	$\frac{7}{100}$		$\frac{8}{100}$		$\frac{9}{100}$		$\frac{1}{10}$		$\frac{2}{10}$		
½	2·37	·68	2·56	·73	2·74	·79	2·90	·83	4·26	1·22	½
¾	2·79	1·42	3·01	1·53	3·21	1·64	3·40	1·36	4·99	2·54	¾
1	3·50	4·01	3·76	4·32	4·01	4·60	4·26	4·89	6 22	7·13	1
1¼	4·09	8·34	4·41	9·00	4·71	9·60	4·99	10·17	7·27	14·82	1¼
1½	4·63	14·77	4·99	15·89	5·32	16·94	5·63	17·95	8·20	26·13	1½
1¾	5·12	23·50	5·51	25 27	5·87	26·95	6·22	28·54	9·04	41·50	1¾
2	5·57	34·79	5·99	37·41	6·38	39·89	6·76	42·23	9·82	61·35	2
2½	5·99	48·87	6·44	52·54	6·86	56·01	7·27	59·29	10·55	86·08	2½
3	6·76	86·18	7·27	92·64	7·74	98·73	8·20	104·50	11·89	151·53	3
4	7·50	137·72	8·02	147·20	8·54	156·85	9·04	165·99	13·10	239·93	4
5	8·71	284·34	9·36	305·50	9·97	325·41	10·55	344·32	15·26	498·17	5
6	9·82	500·86	10·55	537·99	11·24	572·99	11·89	606·13	17·18	876·11	6
7	10·83	795·20	11·63	854·02	12·38	909·42	13·10	959·72	18·92	1389·3	7
8	11·76	1176·3	12·63	1262·1	13·44	1343·7	14·22	1421·2	20·52	2051·3	8
9	12·63	1648·4	13·56	1765·8	14·43	1884·3	15·26	1992·7	22·02	2874·7	9
10	13·44	2221·3	14·43	2384·8	15·36	2538·6	16·25	2684·5	23·43	3871·0	10
11	14·22	2900·4	15·26	3113·5	16·25	3314·2	17·18	3514·5	24·76	5051·3	11
12	14·96	3691·7	16·06	3962·7	17·09	4217·9	18·07	4459·7	26·04	6425·9	12
15	15·66	4601·1	16·81	4938·6	17·89	5256·2	18·92	5557·2	27·25	8004·7	15
18	17·63	8091·3	18·92	8683·1	20·13	9240·3	21·28	9768·3	30·63	14059·7	18
24	19·41	12830·1	20·83	13766·8	22·16	14648·5	23·42	15484·0	33·70	22273·1	24
30	22·59	26545·4	24·24	28477·6	25·79	30296·3	27·25	32018·8	39·17	46016·9	30
	25·41	46642·4	27·25	50029·4	28·99	53218·5	30·63	56238·9	44·0	80770·7	

TABLE SHOWING VELOCITY IN FEET PER SECOND, AND SUPPLY IN GALLONS PER MINUTE, FOR LONG PIPES FLOWING FULL (*continued*).

Diameter of Pipe in Inches.	Velocity in Feet per Second.	Supply in Gallons per Minute.	Velocity in Feet per Second.	Supply in Gallons per Minute.	Velocity in Feet per Second.	Supply in Gallons per Minute.	Velocity in Feet per Second.	Supply in Gallons per Minute.	Velocity in Feet per Second.	Supply in Gallons per Minute.	Diameter of Pipe in Inches.
	Head of Water divided by Length of Pipe.										
	$\frac{3}{10}$		$\frac{4}{10}$		$\frac{5}{10}$		$\frac{6}{10}$		$\frac{7}{10}$		
½	5·32	1·52	6·22	1·78	7·02	2·01	7·74	2·22	8·42	2·41	½
¾	6·22	3·17	7·27	3·71	8·20	4·18	9·04	4·61	9·82	5·01	¾
1	7·74	8·89	9·04	10·37	10·19	11·69	11·24	12·89	12·20	14·00	1
1¼	9·04	18·44	10·55	21·52	11·89	24·25	13·10	26·66	14·22	29·00	1¼
1½	10·19	32·48	11·89	37·88	13·39	42·67	14·75	47·01	16·01	51·02	1½
1¾	11·24	51·57	13·10	59·98	14·75	67·70	16·25	74·57	17·63	80·91	1¾
2	12·20	76·21	14·22	88·82	16·01	99·99	17·63	110·14	19·13	119·48	2
2½	13·10	106·64	15·26	124·54	17·18	140·18	18·92	154·37	20·52	167·45	2½
3	14·75	188·42	17·18	219·03	19·33	246·46	21·28	271·34	23·08	294·29	3
4	16·25	298·28	18·92	347·32	21·28	390·73	23·43	430·11	25·41	466·42	4
5	18·92	617·47	22·02	718·66	24·76	808·21	25·25	824·14	29·55	964·31	5
6	21·28	1085·4	24·76	1262·8	27·84	1419·8	30·63	1561·7	33·21	1692·6	6
7	23·43	1720·4	27·25	2001·2	30·63	2248·9	33·70	2474·8	36·53	2682·4	7
8	25·41	2539·4	29·55	2953·2	33·21	3319·2	36·53	3651·1	39·59	3957·0	8
9	27·25	3557·6	31·67	4134·9	35·60	4647·9	39·17	5113·0	42·44	5540·9	9
10	28·99	4789·7	33·70	5568·3	37·87	6256·8	41·65	6881·1	45·13	7456·4	10
11	30·63	6246·9	35·60	7262·3	40·01	8161·0	44·00	8974·3	47·67	9724·4	11
12	32·20	7947·9	37·41	9234·4	42·00	10365·4	46·24	11411·6	50·10	12364·4	12
15	33·70	9892·2	39·17	11504·2	44·00	12923·0	48·38	14209·8	52·40	15391·1	15
18	37·87	17380·0	44·00	20192·7	49·42	22679·2	54·33	24932·9	58·85	27009·8	18
24	41·65	27524·2	48·38	31972·0	54·33	35903·4	59·72	39465·9	64·52	42641·5	24
30	48·38	56839·1	56·18	66005·2	63·07	74102·4	69·32	81442·6	75·07	88204·4	30
	54·33	99731·6	63·07	115785·0	70·80	129971·0	77·80	142825·0	84·25	154688·	
	Head of Water divided by Length of Pipe.						Note.				
	$\frac{8}{10}$		$\frac{9}{10}$		$\frac{1}{1}$						
½	9·04	2·59	9·63	2·76	10·19	2·92					½
¾	10·55	5·38	11·24	5·73	11·89	6·06					¾
1	13·10	15·00	13·93	15·98	14·75	16·92					1
1¼	15·26	31·14	16·25	33·14	17·18	35·04					1¼
1½	17·18	54·76	18·28	58·28	19·33	61·61					1½
1¾	18·92	86·83	20·13	92·40	21·28	97·68					1¾
2	20·52	128·21	21·84	136·42	23·08	144·20					2
2½	22·02	179·67	23·43	191·16	24·76	202·05					2½
3	24·76	315·71	26·34	335·86	27·84	354·95					3
4	27·25	500·29	28·99	532·18	30·63	562·22					4
5	31·67	1033·7	33·70	1099·9	35·60	1162·0					5
6	35·60	1815·6	37·87	1931·1	40·01	2040·2					6
7	39·17	2876·1	41·65	3058·2	44·00	3230·8					7
8	42·44	4242·3	45·13	4510·7	47·67	4764·9					8
9	45·50	5910·0	48·38	6315·4	51·10	6671·1					9
10	48·38	7993·0	51·44	8499·2	54·33	8375·8					10
11	51·10	10423·5	54·33	11081·3	57·38	11704·2					11
12	53·70	13252·8	57·08	14088·5	60·29	14880·0					12
15	56·18	16501·3	59·72	17540·4	63·07	18525·6					15
18	63·07	28346·2	67·04	30767·7	70·80	32492·7					18
24	69·32	45811·5	73·67	48690·4	77·80	51416·9					24
30	80·44	94508·9	85·49	100438·1	90·26	106052·8					30
	90·26	165708·0	95·92	176090·0	101·26	185902·0					

The values in the foregoing table are calculated from the formula

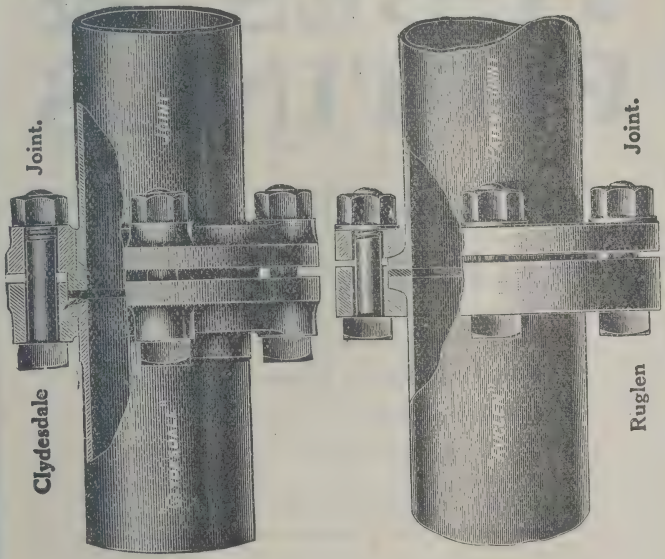
$$V = 140\sqrt{rs} - 11\sqrt[3]{rs};$$

where V = velocity in feet per second, r = *hydraulic mean depth* (= area of wet cross section divided by wet perimeter = for full pipes, ¼ diameter) in feet, s = sine of inclination, or total fall divided by total length.

For pipes of greater diameter than above divide the proposed diameter by 4, then twice the velocity opposite to the quotient in the table will be the velocity required, or the corresponding supply multiplied by 32 will be the approximate supply in gallons per minute.

Wrought Iron and Steel
TUBES

With EADIE'S Loose Flange Joints, as illustrated.



Specially adapted for use in Mines for the conveyance of High Pressure Steam, Water and Compressed Air.

THE SCOTTISH TUBE CO. Ltd.

Head Office—34 ROBERTSON ST., GLASGOW.

[P.T.O.

F. 1302

GAS, WATER AND STEAM
TUBES & FITTINGS

TUBULAR PIT PROPS.
BOILER TUBES.

Sole Licensees in Great Britain for the manufacture of 'Armco' Rust and Corrosion Resisting Iron Tubes

WRITE FOR DESCRIPTIVE PAMPHLET

THE
SCOTTISH TUBE CO. LTD.

Head Office: 34 Robertson St., GLASGOW.

London, Manchester, Leeds, Liverpool, Newcastle-on-Tyne, Cardiff, Sydney (N.S.W.), Wellington (N.Z.), Johannesburg, Cape Town and Durban (S.A.)

F. 1303

Table giving Head Necessary to Deliver a given Number of Gallons of Water per Minute through Various-sized Pipes.

Gallons per Minute.	Diameter of Pipes in Inches.																		
	1	2	3	4	5	6	7	8	9	10	12	14	15	16	18	20	22	24	30
	Factors.																		
15	1·02																		
20	1·64	·051																	
55		·392	·051																
80		·823	·108																
120			·243	·057															
180			·549	·131															
200				·160	·052														
300				·361	·118														
350					·161	·064													
500					·329	·132	·061												
700						·259	·120												
750						·297	·137	·0706											
900							·198	·101											
1,000							·244	·125	·069										
1,150								·180	·100										
1,300								·212	·117	·069									
1,600									·178	·105									
2,000										·164	·066								
2,200										·199	·080								
2,800											·129	·050							
3,000											·141	·0688	·0487						
3,500												·0954	·0677	·0495					
4,000												·122	·0867	·0627					
4,500													·1108	·0804	·0446				
5,000													·135	·0981	·0544				
5,300															0630				
6,500															·0927	·0546			
7,000															·107	·063	·040		
8,500																·094	·060	·0374	
10,000																	·081	·0516	
10,600																		·0550	·0194
12,000																		·0744	·0243
14,500																			·0356

To find required head multiply length of pipe in yards by factor in table for given pipe and quantity of water required; the result is the head in feet.

Example.—Head in feet required to pass 1,000 gallons of water per minute through 30 yards of pipe. In table under 8, and in line with 1,000, will be found ·125; then ·125 × 30 = 3·75, which is feet head required.

The figures in the table are true for plain, smooth, straight pipes. Additional head must be allowed if pipes are at all of a rough nature or broken in contour internally. For each right-angle bend having a radius of about twice the diameter of pipe, and passing the average quantities given in table, about 1½ ins. of additional head must be allowed. (*T. Box.*)

Velocity in Feet per Sec. = 8·025 $\sqrt{H}$ (8·025 = $\sqrt{2g}$)	Head in Feet (H)	Lbs. Press. per sq. in.	Diameter of Bore in Inches and Area of Bore in Feet.												
			½ in. ·00136	¾ ·00306	1 ·00545	1¼ ·0085	1½ ·01227	2 ·02182	2½ ·03408	3 ·04909	3½ ·0668	4 ·0872	5 ·1363	6 ·1963	7 ·2672	8 ·349
			THEORETICAL DISCHARGE (Area in feet × Velocity = Cubic feet per Sec. × 6·227													
8·025	1	·4335	·0681	·1529	·2719	·4247	·6131	1·090	1·703	2·453	3·388	4·357	6·811	9·809	13·35	17·44
11·35	2	·8670	·0963	·2162	·3851	·6007	·8669	1·542	2·408	3·469	4·721	6·163	9·632	13·87	18·88	24·67
13·90	3	1·300	·1180	·2648	·4717	·7356	1·062	1·888	2·950	4·248	5·782	7·537	11·80	16·99	23·13	30·22
16·05	4	1·734	·1362	·3058	·5438	·8494	1·226	2·180	3·405	4·906	6·675	8·714	13·62	19·62	26·70	34·89
17·95	5	2·170	·1523	·3419	·6090	·9498	1·371	2·438	3·808	5·485	7·464	9·744	15·23	21·94	29·86	39·01
19·66	6	2·601	·1668	·3745	·6671	1·040	1·502	2·670	4·171	6·008	8·176	10·67	16·68	24·03	32·71	42·73
21·23	7	3·034	·2802	·4046	·7205	1·124	1·622	2·884	4·506	6·490	8·832	11·53	18·02	25·95	35·33	46·16
22·70	8	3·468	·1926	·4324	·7703	1·201	1·733	3·084	4·817	6·938	9·442	12·33	19·27	27·75	37·77	49·34
24·08	9	3·901	·2043	·4587	·8157	1·274	1·839	3·270	5·107	7·359	10·01	13·07	20·43	29·43	40·06	52·33
25·38	10	4·335	·2154	·4835	·8612	1·343	1·939	3·447	5·385	7·759	10·55	13·78	21·54	31·02	42·22	55·17
26·62	11	4·768	·2258	·5080	·9030	1·411	2·035	3·619	5·651	8·134	11·09	14·48	22·58	32·57	44·32	57·90
27·80	12	5·200	·2359	·5297	·9434	1·471	2·124	3·775	5·900	8·498	11·56	15·10	23·59	33·98	46·25	60·48
28·93	13	5·635	·2458	·5523	·9819	1·534	2·213	3·935	6·148	8·845	12·06	15·74	24·58	35·41	48·19	62·96
30·03	14	6·069	·2548	·5723	1·017	1·591	2·294	4·077	6·366	9·171	12·49	16·32	25·48	36·70	49·93	65·24
31·08	15	6·502	·2638	·5923	1·055	1·645	2·375	4·219	6·580	9·484	12·93	16·88	26·38	37·93	51·68	67·55
32·10	16	6·936	·2724	·6116	1·088	1·699	2·452	4·360	6·810	9·812	13·35	17·43	27·24	39·24	53·41	69·78
33·09	17	7·369	·2804	·6306	1·122	1·752	2·528	4·491	7·014	10·12	13·78	17·96	28·08	40·45	55·01	71·87
34·05	18	7·813	·2884	·6488	1·153	1·803	2·600	4·622	7·209	10·40	14·16	18·49	28·89	41·56	56·60	73·96
34·98	19	8·236	·2969	·6670	1·186	1·853	2·673	4·796	7·412	10·68	14·56	19·01	29·69	42·77	58·21	76·04
35·89	20	8·670	·3046	·6838	1·218	1·900	2·742	4·876	7·616	10·97	14·93	19·49	30·46	43·87	59·72	78·02
36·75	21	9·102	·3115	·7008	1·246	1·947	2·808	4·992	7·787	11·24	15·30	19·98	31·20	44·95	61·14	79·88
37·64	22	9·537	·3189	·7176	1·276	1·993	2·875	5·112	7·982	11·50	15·66	20·45	31·94	46·01	62·61	81·79
38·53	23	9·970	·3264	·7344	1·306	2·040	2·942	5·232	8·169	11·77	16·03	20·93	32·69	47·09	63·86	83·71
39·31	24	10·40	·3336	·7490	1·334	2·080	3·008	5·340	8·343	12·02	16·35	21·35	33·37	48·06	65·41	85·46
40·13	25	10·84	·3405	·7645	1·360	2·124	3·065	5·451	8·512	12·26	16·69	21·79	34·06	49·05	66·76	87·22
43·95	30	13·01	·3732	·8384	1·491	2·329	3·359	5·978	9·337	13·44	18·30	23·89	37·32	53·76	73·15	95·57
46·76	34	14·74	·3964	·8919	1·586	2·478	3·574	6·355	9·911	14·30	19·47	25·42	39·71	57·19	77·83	101·7
47·48	35	15·17	·4026	·9058	1·610	2·516	3·629	6·453	10·06	14·52	19·77	25·81	40·32	58·08	79·03	103·2
50·76	40	17·34	·4307	·9671	1·722	2·686	3·878	6·895	10·77	15·52	21·11	27·56	43·07	62·04	84·45	110·3
53·83	45	19·51	·4556	1·025	1·822	2·847	4·107	7·303	11·40	16·43	22·38	29·21	45·63	65·73	89·80	116·9
56·75	50	21·68	·4828	1·086	1·931	3·018	4·353	7·739	12·09	17·42	23·71	30·96	48·35	69·65	94·79	123·9
59·52	55	23·84	·5046	1·135	2·018	3·153	4·548	8·088	12·64	18·20	24·78	32·35	50·53	72·79	99·06	129·4
62·16	60	26·01	·5276	1·184	2·110	3·290	4·750	8·443	13·16	19·01	25·86	33·75	52·76	75·87	103·4	135·1
67·14	70	30·35	·5692	1·281	2·277	3·557	5·131	9·123	14·25	20·53	27·96	36·83	57·00	82·11	111·8	146·0
71·78	80	34·68	·6090	1·367	2·436	3·799	5·484	9·751	15·23	21·94	29·86	38·98	60·92	87·74	119·4	156·0
76·13	90	39·02	·6461	1·451	2·584	4·029	5·817	10·34	16·16	23·28	31·66	41·34	64·61	93·06	126·7	165·5
80·25	100	43·35	·6810	1·529	2·719	4·247	6·131	10·90	17·03	24·53	33·38	43·57	68·11	98·09	133·5	174·4
113·5	200	86·70	·9632	2·162	3·852	6·007	8·671	15·42	24·08	34·69	47·21	61·63	96·32	138·7	188·8	246·7
139·0	300	130·1	1·180	2·648	4·717	7·357	10·620	18·88	29·50	42·49	57·82	75·47	118·0	169·9	231·3	302·2
160·5	400	173·4	1·362	3·058	5·438	8·494	12·260	21·80	34·05	49·06	66·76	87·14	136·2	196·2	267·0	348·9
179·5	500	216·8	1·523	3·419	6·090	9·498	13·710	24·38	38·08	54·85	74·64	97·44	152·3	219·4	298·6	390·1
196·6	600	260·1	1·668	3·745	6·671	10·40	15·020	26·70	41·71	60·08	81·76	106·7	166·8	240·3	327·1	427·3
212·3	700	303·5	2·802	4·046	7·205	11·24	16·220	28·84	45·06	64·90	88·32	115·3	180·2	259·5	353·3	461·6
227·0	800	346·8	1·926	4·324	7·703	12·01	17·340	30·84	48·17	69·38	94·42	123·3	192·7	277·5	377·7	493·4
240·8	900	390·2	2·043	4·587	8·157	12·74	18·390	32·70	51·07	73·59	100·1	130·7	204·3	294·3	400·6	523·3
258·8	1000	433·5	2·154	4·835	8·612	13·43	19·390	34·47	53·85	77·59	105·6	137·8	215·4	310·2	422·2	551·7

For intermediate heads, multiply $\sqrt{H}$ by gals. per sec. for 1 ft. head corresponding to pipe of 95 ft. Gals. per sec. = $\sqrt{95} \times 2{\cdot}453$ (gals. per sec. for 3 in. pipe

Diameter of Bore in Inches and Area of Bore in Feet.

9	10	11	12	13	14	15	16	18	20	22	24	30	36	42	48	Head in Feet (H).
·4418	·5454	·6599	·7854	·922	1·069	1 7	1·396	1·767	2·18	2·64	3·142	4·909	7·068	9·621	12·57	

IN GALLONS PER SECOND.
galls. in a cu. ft.) = Galls. per second as below.

22·08	27·25	32·98	39·25	46·07	53·42	61·3	69·8	88·3	109·0	131·9	157·0	245·3	353·2	480·8	627·9	1
31·22	38·54	46·64	55·51	65·16	75·55	86·7	98·7	124·9	154·2	186·6	222·0	346·9	499·5	679·9	888·1	2
38·24	47·21	57·12	67·98	79·80	92·52	106·2	120·8	153·0	188·8	228·5	271·9	424·9	611·8	832·7	1087·6	3
44·15	54·51	65·95	78·49	92·14	106·9	122·6	139·5	176·6	218·0	263·8	314·0	490·6	716·4	961·5	1255·8	4
49·37	60·95	73·74	87·76	103·0	119·5	137·1	156·0	197·5	243·8	295·0	351·1	548·5	789·8	1075·1	1404·2	5
54·08	66·76	80·77	96·14	113·9	131·9	150·2	170·9	216·3	267·0	323·2	384·5	600·8	865·2	1177·6	1538·1	6
58·41	72·11	87·25	103·8	121·9	141·3	162·2	184·6	238·7	288·5	349·0	415·4	649·0	934·5	1272·0	1661·4	7
62·44	77·09	93·27	111·11	130·3	151·1	173·3	197·3	249·8	308·4	373·1	444·0	693·8	999·0	1359·8	1776·1	8
66·28	81·76	98·92	117·7	138·2	160·3	183·9	209·3	264·9	327·0	395·8	470·9	735·9	1059·6	1442·3	1883·8	9
69·81	86·19	104·3	124·1	145·7	168·9	193·9	220·6	279·2	344·7	417·2	496·4	775·9	1116·9	1520·3	1986·0	10
73·37	90·47	109·6	130·3	153·1	177·4	203·6	231·7	293·2	361·9	438·0	521·2	814·4	1172·6	1596·3	2085·0	11
76·48	94·41	114·2	136·0	159·6	185·1	212·4	241·7	306·9	377·6	457·0	543·8	849·7	1223·5	1665·4	2175·2	12
79·78	62·27	119·1	141·7	166·4	192·9	221·3	252·0	318·8	393·5	476·2	566·8	885·5	1275·1	1735·7	2267·0	13
82·65	101·9	123·4	146·8	172·5	199·9	229·4	261·2	330·4	407 7	493·4	587·2	917·5	1321·1	1799·3	2349·4	14
85·51	105·5	127·7	151·9	178·4	206·9	237·5	270·2	342·0	422·1	511·0	607·9	950·0	1368·0	1862 1	2432·0	15
88·31	109·0	131·9	157·0	184·3	213·7	245·3	279·0	353·2	436·1	527·7	627·9	981·2	1412·8	1923·0	2511·7	16
91·16	112·4	136·0	161·8	190·1	220·3	252·8	287·6	364·0	449·1	543·5	647·0	1011·7	1456·4	1982·1	2589·1	17
93·70	115·6	139·9	166·4	195·6	226·6	260·1	295·9	374·5	462·2	559·3	665·8	1040·2	1497·6	2039·7	2663·3	18
96·36	118·8	143·8	171·1	201·0	232·9	267·3	304·2	385·0	475·2	575·5	684·5	1068·2	1539·9	2096·3	2737·6	19
98·74	121·9	147·5	175·5	206·1	238·9	274·2	312·0	394·9	487·6	590·0	702·1	1097·0	1579·6	2150·1	2808·3	20
101·2	124·8	151·1	179·8	211·2	244·7	280·9	319·6	404·5	499·2	604·1	719·2	1123·5	1617·7	2203·1	2876·8	21
103·7	127·8	154·7	184·1	216·2	250·5	287·5	327·2	414·1	511·2	618·7	736·3	1150·4	1656·5	2254·9	2914·8	22
106·1	131·0	158·4	188·2	221·3	256·4	294·3	334·9	423·8	523·2	633·2	753·6	1177·3	1695·3	2307·6	3014·0	23
108·2	133·5	161·6	192·3	227·7	263·7	300·4	341·8	482·6	534·1	646·3	769·1	1201·6	1730·3	2355·3	3076·2	24
110·4	136·3	169·9	196·2	230·4	267·1	306·6	348·8	441·5	545·1	659·6	784·9	1226·4	1766·0	2403·8	3140·0	25
121·1	149·3	180·1	215·0	252·6	292·7	336·0	382·5	483·9	597·3	723·3	860·3	1344·0	1935·5	2634·8	3441·0	30
128·8	158·9	192·4	228·8	268·8	311·4	357·4	406·9	514·8	635·5	769·6	915·3	1430·1	2059·2	2803·1	3660·8	34
130·8	161·3	195·4	232·4	272·9	316·2	363·0	413·2	522·7	645·3	781·4	929·4	1452·2	2090·9	2847·5	3717·2	35
139·6	172·4	208·6	248·2	291·4	337·8	387·8	441·2	558·4	689·3	834·4	992·7	1551·8	2233·8	3040·7	3971·4	40
148·1	182·9	221·1	263·0	308·9	357·9	410 8	467·7	591·6	730·3	884·4	1052·0	1643·0	2366·4	3221 4	4407·6	45
156·9	193·5	234·3	278·7	327·3	379·3	435·8	495·6	626·9	773·9	937·2	1114·7	1742·0	2507·7	3413·7	4458·2	50
164·0	202·6	244·9	291·2	342·1	396·4	454·9	517·9	655·2	808·8	979·4	1165·0	1820·0	2620·7	3567·5	4660·0	55
171·0	210·9	255·5	303·9	356·9	413·8	474·9	540·4	684·0	844·2	1021·9	1215·8	1901·1	2735·9	3724·1	4864·1	60
185·0	228·1	276·1	328·5	385·9	447·1	513·2	584·2	739·1	912·3	1104·8	1314·1	2053·0	2956·3	4024·3	5255·7	70
197·5	243·8	296·0	351·1	412·1	477·8	548·4	624·0	789·8	975·1	1180·0	1404·2	2194·0	3159·2	4300·3	5616·6	80
209·4	258·6	312·9	372·3	437·1	506·8	581·7	661·8	837·7	1033·9	1251·5	1489·0	2327·7	3350·7	4561·0	5957·1	90
220·8	272·5	329·8	392·5	460·7	534·2	613·1	697·6	883·0	1090·1	1319·2	1569·8	2452·9	3531·9	4807·6	6279·2	100
312·2	385·4	466·4	555·1	651·6	755·5	867·1	986·6	1248·8	1542·0	1865·7	2220·2	3469·0	4995·0	6799·2	8880·5	200
382·4	472·1	571·2	679·8	798·0	925·2	1062·0	1208·3	1529·4	1888·2	2085·0	2719·1	4248·6	6117·5	8327·2	10876·0	300
441·5	545·1	659·5	784·9	921·4	1068·4	1226·3	1395·2	1765·9	2180·3	2638·4	3139·6	4905·8	7063·7	9615·2	12558·0	400
493·7	609·5	737·4	877·6	1030 3	1194·5	1371·1	1559·9	1974·5	2437·8	2950·0	3510·5	5485·0	7898·0	10751·0	14042·0	500
540·8	667·6	807·7	961·4	1188·6	1818·5	1501·9	1708·8	2162·9	2670·4	3231·5	3845·4	6006·9	8651·5	11777·0	15381·0	600
584·1	721·1	872·5	1038·4	1219·0	1413·3	1622·2	1845·7	2336·2	2884·8	3490·4	4154·1	6490·0	9344·7	12720·0	16614·0	700
624·4	770·9	932·7	1111·1	1303·2	1510·9	1734·2	1973·1	2497·5	3084·0	3731·4	4440·4	6938·0	9990·0	13598·0	17761·0	800
662·3	817·6	989·2	1177·4	1382·2	1602·5	1839·4	2092·7	2648·9	3270·4	3957·6	4709·4	7358·7	10596·0	14423·0	18838·0	900
698·1	861·9	1042·9	1241·1	1457·0	1689·2	1938·0	2206·0	2792·2	3446·5	4171·8	4963·5	7758·9	111·9·0	15203·0	19857·0	1000

required diameter Example:—Required gals. per sec. passing through a 3-in. pipe, under head and 1 ft. head) = 9·746 × 2·453 = 23·906 gals. per sec. (*J. H. Horobin.*)

TABLE SHOWING GALLONS OF WATER PER MINUTE CORRESPONDING TO SPEED OF WATER THROUGH PIPES, IN FEET PER SECOND.

Diameter of Pipe.	Speed of Water through Pipes. Feet per Second.									
	1	5	6	7	8	9	10	11	12	13
Ins.	Gallons per Minute.									
1	2·04	10·2	12·2	14·2	16·3	18·3	20·4	22·4	24·4	26·5
2	8·16	40·8	48·9	57	65·2	73·4	81·6	89·7	97·8	106
3	18·19	94·9	109	127	153	163	181·9	200	218	236
4	32	162	195	227	260	293	324	357	390	421
5	50	250	300	350	400	450	500	550	600	650
6	73	365	440	514	558	661	735	808	882	955
7	100	500	600	700	800	900	1,000	1,100	1,200	1,300
8	130	650	780	910	1,040	1,170	1,300	1,430	1,560	1,690
9	165	825	970	1,155	1,320	1,485	1,650	1,815	1,980	2,145
10	204	1,020	1,224	1,428	1,632	1,836	2,040	2,244	2,448	2,652
12	294	1,472	1,736	2,030	2,325	2,620	2,945	3,210	3,515	3,800
14	400	2,000	2,400	2,800	3,200	3,600	4,000	4,400	4,800	5,200
15	461	2,305	2,766	3,227	3,688	4,149	4,610	5,051	5,532	5,993
16	520	2,600	3,120	3,640	4,160	4,680	5,200	5,720	6,240	6,760
18	662	3,313	3,975	4,638	5,300	5,963	6,626	7,288	7,950	8,613
20	820	4,100	4,920	5,740	6,560	7,380	8,200	9,020	9,840	10,660
22	990	4,950	5,940	6,930	7,920	8,910	9,900	10,890	11,780	11,270
24	1,175	5,875	7,020	8,242	9,420	10,957	11,775	12,952	14,130	15,307
27	1,491	7,455	8,946	10,437	11,928	13,419	14,910	16,401	17,882	19,373
30	1,837	9,187	11,025	12,862	14,700	16,538	18,375	20,212	22,050	23,887
33	2,227	11,137	13,365	15,592	17,820	20,047	22,275	24,502	26,730	28,957
36	2,625	13,125	15,750	18,375	21,000	23,625	26,250	28,875	31,500	34,125
39	3,110	15,550	18,660	21,770	24,880	27,990	31,110	34,210	37,320	40,430
42	3,600	18,000	21,600	25,200	28,800	32,400	36,000	39,600	42,200	46,800
45	4,125	20,625	24,750	28,875	33,000	37,125	41,250	45,375	49,400	53,625
48	4,720	23,600	28,320	33,040	37,760	42,480	47,200	51,920	56,640	61,360
51	5,308	26,540	31,848	37,156	42,464	47,772	53,080	58,388	63,696	69,904
54	5,490	29,700	35,640	41,580	47,520	53,460	59,100	65,340	71,280	77,220
60	7,365	36,825	44,190	51,555	58,920	66,295	73,650	81,015	88,380	95,745

(J. & H. Gwynne, Ltd.)

METROPOLITAN WATER BOARD STANDARD SOCKETS (Table, page 1307).

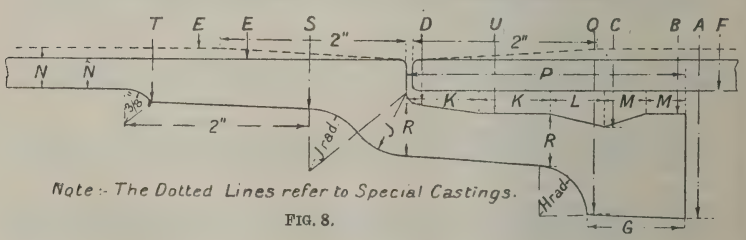


FIG. 8.

The joints of the above standard pipes are made by caulking a ring of lead wire ½ in. in diameter to the bottom of the socket, then running in molten lead for the remainder of the depth, and afterwards caulking or 'setting up.' Alternatively, lead wool may be caulked in for the whole depth.

STANDARD SOCKETS FOR STRAIGHT AND SPECIAL CAST IRON PIPES.

Size of Pipe.	A	B	C	D	E*	E†	F	G	H	J	K	L	M	N*	N†	P	Q	R	S	T	U	Length of Pipes over all.		Weight of Pipe and Socket.		Weight of Pipe and Socket, 3 ft. shorter in Length.		Lbs. weight of Lead in each Joint.
	(See page 1306 for reference.)																					Ft.	In.	Ft.	In.	Cwt. Qrs. Lbs.		Cwt. Qrs. Lbs.	
2	5⅜	3⅛	3 7/16	2⅞	2	2	2⅝	1 1/16	9/16	11/16	¾	⅝	7/16	5/16	5/16	3	5¼	9/16	3	2⅞	3	6	3	—	0 2 0		—	3
3	6⅜	4⅛	4 5/16	4	3	2⅝	3¾	1⅛	⅝	⅞	¾	⅝	7/16	⅜	½	3	6⅝	⅝	4⅛	4	4¼	9	3	—	1 0 14		—	4½
4	8⅛	5⅜	5 11/16	5⅛	4	3⅞	4⅞	1 3/16	11/16	13/16	¾	⅝	7/16	7/16	9/16	3	8	11/16	5¼	5⅛	5⅜	9	3	—	1 3 0		—	5½
5	9⅛	6⅜	6 11/16	6⅛	5	4⅞	5⅞	1 3/16	11/16	15/16	⅞	⅝	7/16	7/16	9/16	3	9	11/16	6¼	6⅛	6⅜	9	3	—	2 0 14		—	6½
6	10⅛	7½	7 13/16	7¼	6	5⅞	7	1¼	¾	⅞	⅞	⅝	7/16	½	⅝	3	10⅜	¾	7⅜	7¼	7½	9	3½	—	2 3 14		—	8
7	11⅛	8½	8 13/16	8¼	7	6⅞	8	1¼	¾	⅞	⅞	⅝	7/16	½	⅝	3¼	11⅜	¾	8⅜	8¼	8½	12	3¼	9 3½	4 1 7	3 1 7		9
8	12⅞	9⅝	9 15/16	9⅜	8	7⅞	9⅛	1 5/16	13/16	15/16	⅞	⅝	7/16	9/16	11/16	3¼	12⅞	13/16	9¼	9⅜	9⅝	12	3¼	9 3½	5 1 21	4 0 21		10
9	13⅞	10⅝	10 15/16	10⅜	9	8⅞	10⅛	1 5/16	13/16	1 1/16	⅞	⅝	7/16	9/16	11/16	3¼	13¾	13/16	10½	10⅜	10⅝	12	3¼	9 3½	6 0 7	4 2 21		11
10	15¼	11⅜	12 3/16	11¼	10	9⅞	11¼	1⅜	⅞	1	1	⅝	7/16	⅝	¾	3½	15⅛	⅞	11⅝	11½	11¾	12	3½	9 3½	7 2 0	5 3 0		14
12	17⅝	13⅞	14 3/16	13⅝	12	11⅞	13⅜	1 7/16	15/16	1 1/16	1	⅝	7/16	11/16	13/16	3½	17½	15/16	13⅜	13⅝	13⅞	12	3½	9 3½	9 3 7	7 2 0		17
14	20	16	16 5/16	15⅜	14	13⅞	15½	1½	1	1⅛	1	⅝	7/16	¾	⅞	3½	19⅞	1	15⅞	15⅜	16	12	3½	—	12 2 0		—	19½
15	21	17	17 5/16	16⅜	15	14⅞	16½	1½	1	1⅛	1	⅝	7/16	¾	⅞	3½	20⅞	1	16⅞	16¾	17	12	3½	—	13 1 7		—	20½
16	22½	18¼	18 9/16	18	16	15⅞	17⅝	1 9/16	1 1/16	1¼	1⅛	⅝	7/16	13/16	15/16	3¾	22⅜	1 1/16	18	17⅝	18¼	12	3¾	—	15 1 21		—	28
18	24⅛	20¼	20 9/16	20	18	17⅞	19⅝	1 9/16	1 1/16	1¼	1⅛	⅝	7/16	13/16	15/16	3¾	24⅜	1 1/16	20	19⅞	20¼	12	3¾	—	17 1 0		—	31
20	26⅞	22⅜	22 11/16	22⅛	20	19⅞	21⅝	1⅞	1⅛	1 5/16	1¼	⅝	7/16	⅞	1	3¾	26¾	1⅛	22⅛	22	22⅜	12	3¾	—	20 2 21		—	34
21	28⅛	23½	23 13/16	23¼	21	20⅞	22⅝	1 11/16	1 1/16	1⅜	1¼	⅝	7/16	15/16	1 1/16	4	28⅛	1 3/16	23¼	23⅛	23½	12	4	—	23 1 0		—	39
22	29¼	24½	24 13/16	24¼	22	21⅞	23⅞	1 11/16	1 1/16	1⅜	1¼	⅝	7/16	15/16	1 1/16	4	29½	1 3/16	24¼	24⅛	24½	12	4	—	24 1 7		—	40½
24	31⅝	26⅝	26 15/16	26⅜	24	23⅞	26	1¾	1⅛	1 7/16	1¼	⅝	7/16	1	1¼	4	31½	1¼	26⅜	26⅛	26⅝	12	4	—	28 1 7		—	44
30	38⅜	32⅞	33 3/16	32⅝	30	29⅞	32¼	1⅞	1⅜	1 9/16	1¼	⅝	7/16	1⅛	1¼	4	38¼	1⅜	32⅝	32½	32⅞	12	4	—	39 2 14		—	54½
33	41¾	36	36 5/16	35⅞	33	32⅞	35⅜	1 15/16	1 7/16	1⅝	1¼	⅝	7/16	1 3/16	1 5/16	4	41⅝	1 7/16	35⅞	35⅝	36	12	4	—	45 3 7		—	60
36	44⅞	39	39 5/16	38⅝	36	35⅞	38⅝	1 15/16	1 7/16	1⅝	1¼	⅝	7/16	1 3/16	1 5/16	4	44⅝	1 7/16	38⅝	38⅝	39	12	4	—	49 3 7		—	65
42	51⅛	45⅞	45 7/16	44⅞	42	41⅞	44½	2	1½	1 1/16	1¼	⅝	7/16	1¼	1⅜	4	51	1	44⅞	44¾	45⅛	12	4	—	61 0 21		—	75
48	57⅛	51⅛	51 7/16	50⅝	48	47⅞	50½	2	1½	1 11/16	1¼	⅝	7/16	1¼	1⅜	4	57	1½	50⅞	50¾	51⅛	12	4	—	69 2 7		—	85

* Straight Pipes. † Special Castings.

WEIGHTS OF LEAD PIPE REQUIRED BY WATER COMPANIES.

Company.	Weights, per Yard, of Lead Pipe.						Minimum Depth of Underground Pipes.	Weight, per Yard, of Warning Pipe.		
	⅜ In.	½ In.	⅝ In.	¾ In.	1 In.	1¼ In.		½ In.	¾ In.	1 In.
	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.		Lbs.	Lbs.	Lbs.
Metropolitan Water Board	5	6	7½	9	12	16	2 ft. 6 ins.	3	5	7
Colne Valley.	5	7	9	11	16	—	3 ft.	—	—	—
Croydon .	4	5	7	9	12	16	2 ft.	—	—	—
East Surrey .	5	6	8	10	14	—	—	—	—	—
„ when pressure exceeds 300 ft.	6	7	9	11	16	—	—	—	—	—
South Essex.	—	6	7½	9	12	16	1 ft. 6 ins.	—	—	—
Sutton . .	—	6	7½	9	12	16	2 ft. 6 ins.	3	5	7
West Surrey.	4	5½	—	9	14	20	3 ft.	—	—	—

Sizes of Lead Pipe are Internal. 1½ is the usual Minimum Size for Closet Pipe, and 9 lbs. per Yard Minimum Weight.

Comparative Value of Cast-Iron, Wrought-Iron, and Steel Drain Pipes.

Extra heavy cast-iron soil pipes in a number of buildings in nearly all cases had the cast-iron vents evenly pitted on the inside, but in the house drains and branch wastes the lead-caulked joints had opened up more or less. Black steel vents showed scaling to a considerable depth after only ten years' use. Galvanising was observed to be less of a protection against corrosion on steel pipes than on wrought-iron pipes. The galvanised coating does not adhere so firmly to the smooth surface of steel pipes as to the comparatively rougher surface of wrought-iron pipes. The galvanising on steel pipes showed signs of disappearing within ten to twenty years. The investigation furnished ample evidence in favour of genuine wrought-iron pipe as a far more durable material for house drainage purposes than steel pipe.

(*W. P. Gerhard, 'Proceedings' of the American Society of Mechanical Engineers.*)

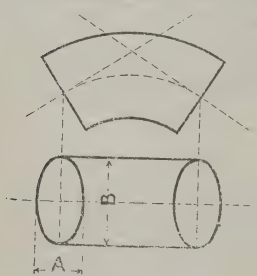


FIG. 9.

Unbalanced Pressures on Bends, etc.

Where any considerable pressure has to be sustained by pipes of large size the unbalanced pressures on bends, etc., must be resisted, horizontally by strutting or tying, vertically by strutting or anchoring. The unbalanced pressure on any bend may be found thus :—

Unbalanced pressure on back of bend = the sum of the areas of the ellipses shown in the elevation × the pressure per unit of area, or A × B × ·7854 × 2P = unbalanced pressure.

WATER TANKS.

Water tanks for house supplies should be covered from the light in order to prevent vegetable growth, but they should be ventilated. A good form of ventilator is an ordinary house sewer air inlet with the mica flaps removed. These should be placed, one or more, according to the size of the tank, at each end of the tank, standing a foot or two above the cover. At one end their openings, which are lateral, should face to, say, the south-west, and at the other end in the opposite direction, so as to set up a flow of air.

The cheapest tanks, to be durable, are excavated partly in the ground, the removed earth being banked against the walls built above ground and rammed at an inward slope so as to afford support against the water pressure. The walls may be of brick or of concrete, rendered internally in good cement mortar. The banks of spoil should be neatly trimmed and sodded or grass sown, and in this way a tank may be almost hidden. Where economy of material is an object, a tank is best circular, since the bank outside can be harder rammed without danger of turning the walls inwards.

These 'tanks' should not be confounded with 'cisterns.'


GUEST & CHRIMES, Ltd.
ROTHERHAM

(On Admiralty, War Office, and Crown Agents' Lists).

ORIGINAL MANUFACTURERS OF

Established 1840.

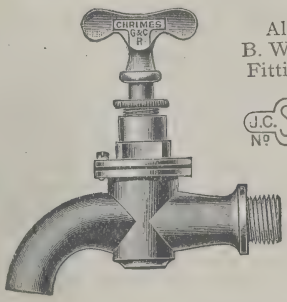CHRIMES' HIGH PRESSURE
LOOSE VALVE
SCREW-DOWN COCKS.




Also
B. W. A.
Fittings


J.C. S W.R. Nº 8

Telegrams: 'Guest, Rotherham.'
Telephone: 205 Rotherham.

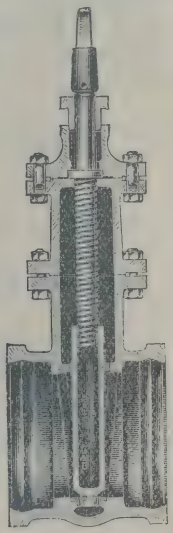GUEST & CHRIMES'
IMPROVED
SLUICE VALVES
For Water, Steam
Sewage, Gas & Oil.



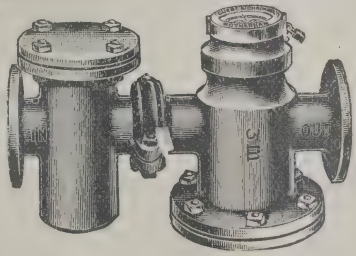GUEST & CHRIMES'
TURBINE WATER METERS.
⅜ in. to 18 in. sizes. 285,000 Supplied.



ALSO MANUFACTURERS OF
RESERVOIR VALVES and FITTINGS.
FIRE EXTINGUISHING APPARATUS.
GENERAL PLUMBERS' GOODS.
HIGH POWER INCANDESCENT LAMPS.
WET and DRY GAS METERS and GAS FITTINGS.

London Office: **4 and 5 Adam Street, Adelphi, W.C. 2.**
Telegrams: 'Birbinchri, Westrand, London.' *Telephone:* Gerrard 3636 & 1376.

F. 1308

BOOKS BY DR. BRYSSON CUNNINGHAM,

D.Sc., B.E., F.R.S. (EDIN.), M.INST.C.E.

THIRD EDITION, Revised and Enlarged. In large 8vo. Handsome Cloth, Gilt. Pp. i-xviii + 650. With 48 Folding Plates and 500 Illustrations in the Text. (*In the press. Price about 30s. net.*)

The Principles and Practice of
DOCK ENGINEERING.

GENERAL CONTENTS.—Historical and Discursive.—Dock Design.—Constructive Appliances.—Materials.—Dock and Quay Walls.—Entrance Passages and Locks.—Jetties, Wharfs and Piers.—Dock Gates and Caissons.—Transit Sheds and Warehouses.—Dock Bridges.—Graving and Repairing Docks.—Working Equipment of Docks.—Reinforced Concrete in Dock Work.—Appendices.—INDEX.

'We have never seen a more profusely illustrated treatise. It is a most important standard work, and should be in the hands of all dock and harbour engineers.'—*Steamship.*

'A very meritorious addition to our technical literature. . . . It would be difficult to find a more thorough treatise on the subject of Dock Engineering.'—*Engineering.*

Companion Volume to the above. Second Edition, thoroughly revised and greatly enlarged. In Large 8vo. Pp. i-xvi + 377. With 20 Plates, 24 Tables, and 280 Illustrations in the Text. 25*s.* net.

THE PRINCIPLES AND PRACTICE OF
HARBOUR ENGINEERING.

CONTENTS.—Introductory.—Harbour Design.—The Tides.—Surveying, Marine and Submarine.—Piling.—Stone, Natural and Artificial.—Breakwater Design.—Breakwater Construction.—Pierheads, Quays, and Landing Stages.—Entrance Channels.—Channel Demarcation.—INDEX.

'A truly monumental work. . . . We could wish for no more authoritative guide.' *Shipping World.*

'We know of no other treatise which deals with the principles of harbour work in a more succinct way and with such authority.'—*Practical Engineer.*

In Pocket Size. Leather. Pp. i-vii + 319. With 144 Illustrations, including 6 Folding Diagrams. 10*s.* 6*d.* net.

THE DOCK AND HARBOUR ENGINEER'S REFERENCE BOOK,

Being a Compilation of Notes on various Matters Connected with

MARITIME ENGINEERING and PORTS AND HARBOURS.

CONTENTS.—I. General Administrative, Nautical, and Physical Data.—II. Cost of Dock and Harbour Systems.—III. Harbour Construction.—IV. Dock Construction.—V. Quay and Dock Walls and Wharfs and their Equipment.—VI. Locks, Graving Docks, and Floating Docks and their Equipment.—VII. Dredging and Subaqueous Rock Removal.—VIII. Maritime Canals, Channel Rectification, Channel Demarcation, and Coast Defence.—INDEX

'A vast amount of valuable information . . with an excellent Index.'—*Liverpool Journal of Commerce.*

The only book of its kind . . . is of special interest and value. Excellent judgment has been shown by the author in selecting the data . . . not only a book of reference, but also a book of instruction.'—*International Marine Engineer.*

LONDON: CHARLES GRIFFIN & CO., LTD., EXETER STREET, STRAND.

F. 1309

SECTION XXVI

METERING OF WATER, AIR, GAS, AND STEAM

(Contributed by J. L. Hodgson, B.Sc., A.M.Inst.C.E.)

METERS

WATER

1. The 'Venturi' for Large Volumes.
2. The 'Uniform' Positive for Large Trade, General, Hydraulic and Boiler Feed Measurement.
3. The 'Standard' Mark III Positive for Domestic, Small Trade and fine flow purposes.
4. The 'Inferential' for Domestic Supplies where a good meter is desired and small capital cost is paramount.

V-Notch Discharge Recorders, Water Level Recorders, Waste Water Meters, Irrigation and other Hydraulic Measuring Apparatus.

STEAM

For Steady or Pulsating Flows, Pressure corrected where required.

To give registrations by either diagram, counter, or both forms in one instrument.

AIR For Trunk Mains for recording Compressor Output, etc.

Rate of Flow Meters for Pneumatic Hoists, Hammers, Rock Drills and other small Tools.

GAS For Station and District Supplies. Coke Oven and other Gases.

CATALOGUES ON APPLICATION.



"KENTOBIN, WESTCENT, LONDON"

GEORGE KENT LTD LONDON & LUTON

MUSEUM 4262 (5 LINES)



WRITE 199 HIGH HOLBORN, LONDON, W.C.1

WORKS - - - - - - - LUTON.

F. 1311

SECTION XXVI

METERING OF WATER, AIR, GAS, AND STEAM.

(Contributed and revised by J. L. Hodgson, B.Sc., A.M.Inst.C.E.)

The metering of fluids is undertaken to enable running costs to be apportioned, sales to be effected on an equitable basis, to control the mixing of reagents in various chemical processes, or to detect wasteful or inefficient use so that working costs may be reduced and unnecessary additions to plant obviated, etc.

Various efficient and accurate types of water and gas meters have been in use for many years; it is only recently, however, that accurate and reliable air and steam meters have been developed. The first large installation of air meters was made on the Rand in 1911, where now more than 300 million h.p. hours per annum are metered, at an ascertained annual aggregate money saving of 130,000*l.**

The following is a brief summary of the principal classes of fluid and gaseous meters, with notes as to their application, and the names of the leading makers :—

1. Meters Based on Volume or Weight Measurement.

(*a*) Tanks or weighing. [For liquids, condensed steam.]
(*b*) Receivers of known capacity discharging between known pressures and temperatures. [For air and gas.]
(*c*) Piston displacement meters. [For water (Messrs. George Kent, Ltd., Luton; Messrs. Beck & Co. Ltd., Southwark, London; Messrs. Frost, Manchester).]
(*d*) Water-sealed drum meters. [For gas (The Gas Meter Co., London).]
(*e*) Bellows meters. [For gas (The Gas Meter Co. Ltd.).]

2. Meters which Measure the Velocity at a Point or Points in the Cross Section of the Stream.

(*a*) Pitot tube meters. [For water, air and gas (Messrs. George Kent, Ltd.). For air and gas (The Rotary Meter Co. (1905), Ltd.) For steam (The General Electric Co. of Schenectady and the British Thomson Houston Co. of Rugby).]
(*b*) Professor Morris's hot wire velocity indicator. [For air and gas (The Cambridge & Paul Instrument Co. Ltd., Cambridge).]
(*c*) Impact meters. [For measuring air velocity in mine tunnels (Messrs. Davis).]
(*d*) Anemometer meters. [For water in open channels (Messrs. George Kent, Ltd.). For air in conduits and passages (Messrs. Davis).]
(*e*) Floats. [For measuring the velocity of water in open channels.]

3. Meters which Depend on the Drop of Pressure due to an Obstruction Placed in the Stream.

(*a*) Weirs. [For liquids in open channels (The Lea Recorder Co. Ltd., 28 Deansgate, Manchester, and Messrs. George Kent, Ltd.).]
(*b*) Venturi tubes. [For water, air, steam and gas (Messrs. George Kent, Ltd.).]
(*c*) Nozzles. [For gas (Messrs. George Kent, Ltd.). For steam (The General Electric Co. of Schenectady, and Messrs. George Kent, Ltd.).]
(*d*) Circular, cord, or tongue orifices. [For water, air, gas and steam (Messrs. George Kent, Ltd.).]
(*e*) Variable orifices. [For water, air, gas and steam (Messrs. George Kent, Ltd.).]

* See Hodgson, *Proc. Inst. C.E.*, Vol. CCIV, Part 2, and Mavor, *Trans. Inst. Mining Engineers*, Vol. L, Part 4.

ROTARY OR TURBINE METERS.

(*a*) Which measure the whole of the flow passing. [For water (Messrs. Guest & Chrimes Ltd., Rotherham; Messrs. Siemens Bros., Woolwich; Messrs. Hayward Tyler, Luton; Messrs. George Kent, Ltd.; the Self Engineering Co., London). For air and gas (The Rotary Meter Co. (1905) Ltd., Victoria Works, Whitefield, Manchester, and Messrs. George Kent, Ltd.)]

(*b*) Which are placed in a shunt circuit. [For water (Messrs. Siemens Bros.). For air and gas (Messrs. George Kent, Ltd.).]

5. METERS BASED ON THE MOVEMENT OF A SPRING OR WEIGHT CONTROLLED OBSTRUCTION PLACED IN THE PIPE LINE.

(*a*) In which a disc moves axially in a circular chamber with conical or perforated walls. [For water (The Palatine Engineering Co. Ltd., Bootle, Liverpool). For gas or air (The Rotary Meter Co. (1905) Ltd., Victoria Works, Whitefield, Manchester).]

(*b*) In which a shaped plug opens up an orifice. [For steam (The St. John Steam Meter Co., New York).]

(*c*) In which a weighted hinged gate is opened by the flow. [For water and air (Messrs. George Kent, Ltd.).]

6. METERS BASED ON THE DROP OF PRESSURE CAUSED BY FRICTIONAL LOSSES IN A LENGTH OF CHANNEL OR PIPE LINE.

[For measuring irrigation water (Messrs. George Kent, Ltd..])

7. METERS BASED ON THE INTRODUCTION OF A MEASURED AMOUNT OF (*a*) HEAT, OR (*b*) CHEMICAL REAGENT, AND THE CONSEQUENT RISE OF TEMPERATURE OF THE FLUID, OR DILUTION OF THE REAGENT AT SOME POINT FURTHER DOWNSTREAM.

(*a*) The Thomas meter. [For air and gas (Messrs. Humphreys & Glasgow, London).]

(*b*) [A method used for measuring the discharge of rivers and canals.]

8. METERS BASED ON INCREASE OF WEIGHT DUE TO CHEMICAL ABSORPTION.

Notes.

Meters of classes 1 (*c*), (*d*) and (*e*) can be made accurate to within plus or minus 1 per cent. from zero flow up to the maximum flow which they are designed to measure. The chief source of error of meters of class 1 (*d*) is variation in the water level, and in meters of classes 1 (*b*) and 1 (*e*) wear of the valves.

Meters of classes 2 (*a*), (*b*) and (*c*) are usually only accurate down to one-third or one-sixth of the maximum flow for which they are designed, as their indication depends upon the square of the velocity of the fluid. Few anemometers are accurate when working at less than one-tenth of their maximum rated capacity.

Meters of classes 3 (*a*), (*b*), (*c*) and (*d*) are usually accurate down to one-fifth or one-tenth of the maximum flow. If specially sensitive differential pressure-measuring devices are provided, such meters may be made accurate down to one-twentieth or one-thirtieth of the maximum flow. By using a variable orifice, the range over which accurate measurement is possible with any given indicator or recorder is greatly extended. These meters have the very real advantage of having in the pipe line no moving parts which can be deranged by dirt or erosion. The Venturi tube, with its smooth contours which eliminate eddying, is a valuable device when measuring dirty gas. Meters of this class show many ingenious arrangements for obtaining an accurate measurement of the differential pressure over a wide range and for compensating for variations in the specific gravities of the fluids or gases to be measured.

Meters of class 4 are not usually accurate in practice below one-tenth of the maximum flow, though many makers claim much higher ranges of accuracy. Endeavours have been made to increase the range of accurate measurement by opening up additional jets at low flows, or by introducing additional resistance at the high flows. While these devices frequently give excellent results under test conditions, they rapidly get out of adjustment under working conditions. Water meters of this class can often carry considerable overloads, thus greatly increasing the range over which accurate measurements may be obtained.

Meters of classes 5 (*a*), (*b*) and (*c*) are capable of high accuracy over a large range of flow when measuring clean fluids. They rapidly lose their accuracy, however, when measuring dirty fluids, owing to the small clearances becoming choked.

The accuracy of meters of class 6 is dependent upon an accurate knowledge of the area of the channel and its resistance coefficient. These are apt to change owing to silting up and the growth of weeds.

In the following pages the main features of some of the best known, or the most noteworthy, meters are described and illustrated.

Water Meters.

The Kent Mark III Positive Water Meter.

This meter is shown diagrammatically in fig. 1. Its sequence of operations is as follows:—

1. The piston A descends, and the disc P throws over the valve C.
2. The piston B descends, and the disc R throws over the valve D.
3. The piston A descends, and the disc Q throws over the valve C.
4. The piston B descends, and the disc S throws over the valve E; and so on.

Stops M limit the motion so that an exact quantity of water is measured off each stroke.

Projections K enter the outlet passage at the end of the stroke and prevent jar by slightly throttling the flow.

The cylinders are lined with brass, and the valves and valve faces are made of gun-metal. The valves are caused to oscillate slightly each time they are thrown over in order to keep the rubbing surfaces polished. For the same reason the pistons are caused to rotate a slight amount at each stroke.

The valves are held up against the port block by rollers L carried by springs which press inwards towards the valve faces.

The meter body is jointed along the line XY, which enables all parts to be readily accessible (actually the inlet and outlet flanges are at right angles to the positions shown in the diagram).

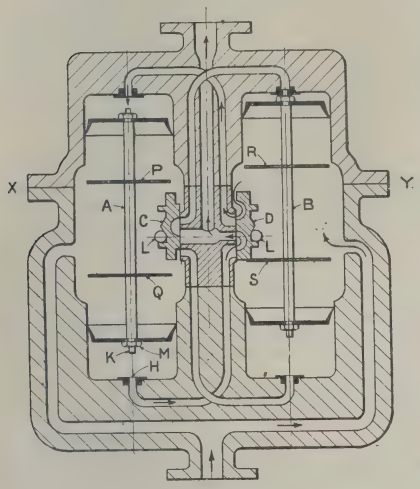


Fig. 1.

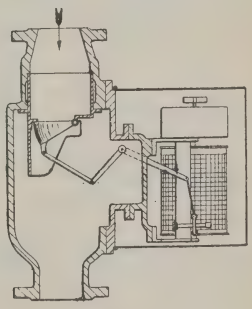


Fig. 2.

The Kent Waste Water Meter.

This meter (fig. 2) consists of a weighted gate pivoted on a horizontal axis and surrounded by a machined shield. The gate opens with increase in the flow, and takes up a definite position at each flow. Its motion is transmitted to the diagram through a stuffing box by means of link mechanism.

It is possible with this meter to measure with accuracy down to very small fractions of the full flow.

Owing to the absence of all sliding parts in this meter, the friction of the mechanism is extremely small.

The bulk of the meter, and the loss of pressure across it, are also reduced to a minimum by its arrangement, which allows of a direct flow between inlet and outlet.

The Beck 'Imperial' Water Meter.

In this meter (figs. 3 and 4) the rotation of the arm A attached to the spindle D, which drives the counter, causes the spherical valve cap V to rock on its seating S, thus opening the lower parts of each of the three cylinders C successively to the inlet and discharge sides of the meter.

The valve cap V is prevented from turning round on its own axis by the projections Q, which engage in recesses left in the valve seat S. The length of the stroke of the pistons is limited by the flange P on the valve cap V, which comes into rolling contact with a machined surface on the valve seat S.

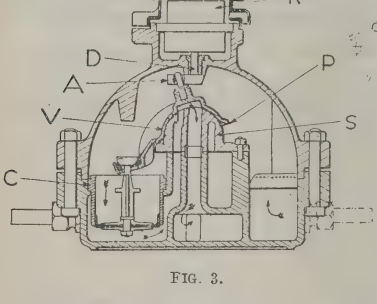


Fig. 3.

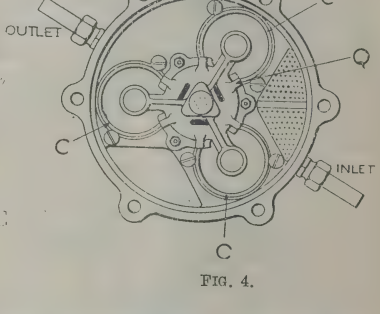


Fig. 4.

It will be seen that the valve cap V moves with a lens-grinding action. This ensures that it and the seating will remain polished and unscratched even when gritty water is being measured.

The valve cap and the pistons are made of hard gun-metal, the valve seat and bushes of vulcanite, and the cylinders of either vulcanite or gun-metal; vulcanite being used for water of exceptional hardness.

The Deacon Water Meter.

In the Deacon Water Meter (fig. 5) a weighted disc moves vertically in a conical shield. Its motion is transmitted to the diagram by means of thin wire passing through a gland. Guide plates are provided to steady the flow at the entrance to the conical shield.

The Kent Venturi Water Meter.

This meter (fig. 6) consists of (*a*) a Venturi tube VT through which the water passes; (*b*) a large mercury U-tube provided with floats FU and FT (which are displaced by the differential pressure which exists when water is passing between the upstream and throat pressure holes of the Venturi tube); and (*c*) diagram counter and recording mechanisms, which are actuated by the movements of the floats.

The motion of the floats is transmitted to the outside of the U-tube by means of gland spindles GU and GT, which actuate toothed wheels that engage with the racks RU and RT.

The law of flow through a Venturi tube is given by the equation :—

$$Q = \frac{\Omega\, a_1}{7{\cdot}88}\left[\frac{h\,W}{n^2-1}\right]^{1/2},$$

where Q = flow in lbs. per sec,; Ω = coefficient of discharge for the tube (usually about 0·99); a_1 = area of tube at upstream pressure holes in sq. ins.; na_1 = area of tube at throat pressure holes in sq. ins.; h = difference of pressure between upstream and throat pressure holes in ins. of water; W = weight in lbs. of 1 cub. ft. of the fluid passing.

The counter recording mechanism operates as follows :—A cylindrical cam LC, which has a slightly raised portion, is rotated once every ten minutes by clockwork. A pivoted arm A, which carries the roller L, which is kept in contact with the surface of the cam by a spring (not shown), is lowered by the rack to which it is attached when the flow increases. The greater the distance the arm is lowered, the larger is the fraction of each revolution of the cam during which the roller is on the unraised portion of the cam. By means of mechanism (not shown) it is arranged that a toothed wheel which drives the counter is put into gear with the clock train during the period that the roller L is on the unraised portion of the cam. The boundary line between the raised and the unraised portions of the cam is so shaped that when the pivoted arm A carrying the roller L moves down a distance H from its zero position an amount proportional to $\sqrt{H}$ is added on to the counter reading. In this way, with suitable gear wheels in the counter train, a counter record of the amount of fluid that has passed is obtained.

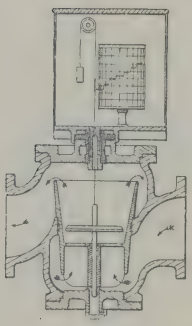


FIG. 5.

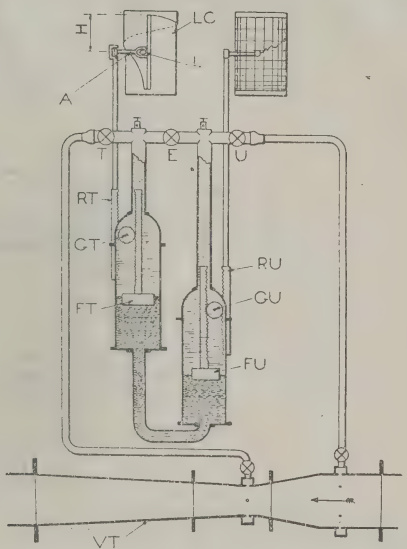


FIG. 6.

Valves U and T are provided so that the upstream and throat pressures may be shut off, and the meter checked by opening the equalising valve E.

Any air that accumulates in the pressure pipes may be blown off through the air vents provided.

To reduce the chance of air getting into the pressure pipes, these should be taken off horizontally, and not at the top, as shown for clearness in the diagram.

These meters will measure accurately down to one-fourteenth of the maximum flow (and special meters of this type down to one-thirtieth of the maximum flow).

The functions of the downstream cone of the Venturi tube is to recover the kinetic energy which exists at the throat, thus enabling the major portion of the pressure difference which has been created between the upstream and throat pressure holes to be recovered.

The friction loss due to the insertion of the water Venturi tube is about 2 lbs. per sq. in. at the maximum flow.

Venturi meters have been used to measure water in all sizes of pipes from about $\frac{1}{2}$ in. to 20 ft. in diameter. They provide the most convenient and accurate method known of measuring the flow of water in large mains. There is a minimum of obstruction to the flow, and there are no moving parts in contact with the flowing water.

Weir Recorders.

The Lea 'V' Notch Weir Recorder.

The discharge for a 90° V notch with sharp edges bevelled at 45° on the downstream side is given by the equation,

$$Q = 2{\cdot}48H^{2{\cdot}48}$$

where Q = discharge in cub. ft. per sec.; H = head, in ft. above the bottom of the notch.

In the Lea Recorder (fig. 7) the movement of the float F in the weir chamber which is proportional to H is transmitted to a cylindrical cam C. By means of this cam, a movement of the pen arm P which is proportional to Q is obtained.

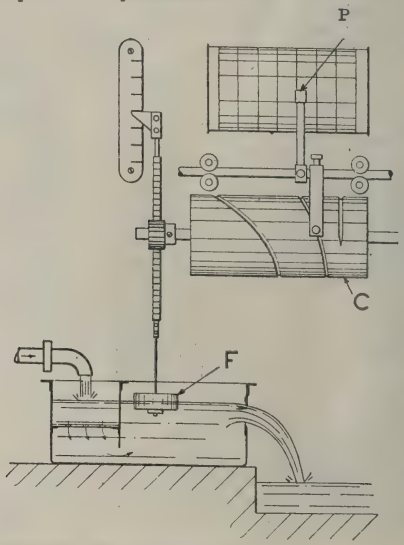


Fig. 7.

In the Kent Weir Recorder a flat cam is used, and the straight line movements are replaced by movements about fixed pivots.

In the Wright Weir Recorder the weir notch is made of such a shape that the motion of the float is proportional to the quantity passing. In this recorder there is, therefore, no cam between the float and the recorder pen. The approximate shape of the weir notch in shown in fig. 8.

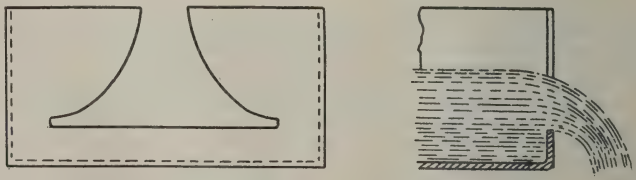


Fig. 8.

Gas Meters.

The 'Drum' Type Station Gas Meter.

In this meter (fig. 9) gas enters through the hollow axis in the four compartments of the drum in a pipe which is put just above the water level, and fills each compartment successively, and by its pressure causes the drum to revolve in the direction of the arrow and to register the volume passed on a set of dials.

Meters of this type are used to measure gas in mains of all sizes, from ¾ in. upwards.

Owing to their costliness, the larger meters of this description are now being superseded by new patterns of meter, such as the Thomas and the Kent-Hodgson Meters.

The main sources of error of this meter are deformation or corrosion of the drum, deposition of naphthalene in the drum, and variations in the water level. There are various ingenious devices for preventing the meters from being over-filled, and for maintaining the correct water level. If the meter is overloaded, the water level is depressed, and the meter reads slow.

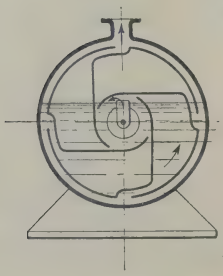


Fig. 9.

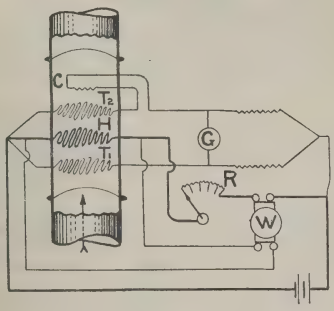


Fig. 10.

The Thomas Gas Meter.

In this meter (fig. 10) the gas is passed through a short length of pipe which contains two electrical resistance thermometers T_1 and T_2, which form part of a Wheatstone Bridge. An electrical heater H is placed between the two thermometers. Any increase in the flow of gas causes a lowering of the temperature of the downstream thermometer and a deflection of the needle of the galvanometer G. This is made automatically, by means of a suitable mechanism, to reduce the resistance in the heater circuit, so that the temperature of the gas is always raised the same amount (about 2° F.) by the heater.

The readings on a Wattmeter W, placed in the heater circuit, give the number of cubic feet of gas reduced to standard temperature and pressure.

The Kent-Hodgson Venturi Gas Meter.

In this meter (fig. 11) the 'Venturi Head' $(p_1 - p_2)$ is measured by means of the bell B and an amount proportional to $(p_1 - p_2)$ is added on to the counter reading by means of the cam, feeler, ratchet, and pawl device C.F.R. every time the cam G, which is driven by the wet gas meter W, makes one revolution.

The speed of rotation of this meter is determined by the amount of gas that escapes to atmosphere through a small orifice at O across which the pressure difference is maintained constant by means of the regulating valve R.V.

In this way the counter is made to register the volume of gas passing through the Venturi tube, irrespective of variations in the specific gravity of the gas; the registration of the meter being identical with that of the ordinary Drum type Station Gas Meter.

A diagram, D, is provided which shows the rate of flow of gas at any instant. The readings of this diagram are, however, not corrected for variations in the specific gravity of the gas.

If tar, naphthaline, or other depositable matter settles in the Venturi throat, the meter tends

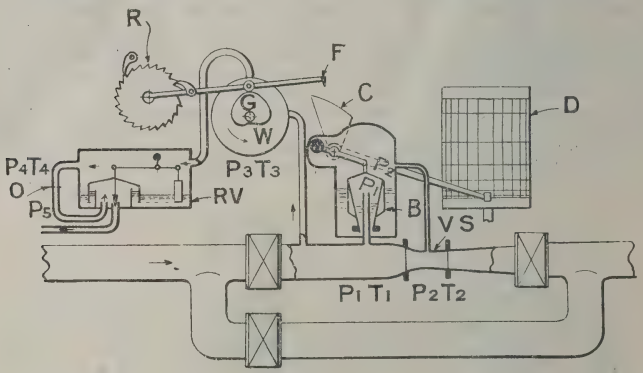


FIG. 11.

to read fast. It is found that when measuring coal gas, such deposits can be entirely prevented by keeping the walls of the throat at a few degrees higher temperature than that of the gas passing through.

The Venturi tube is installed on a bye-pass, and the throat section VS is made so that it can easily be swung out of the pipe line for inspection and cleaning.

The loss of pressure at the maximum flow due to the insertion of the gas Venturi tube is arranged not to exceed 1 in. of water gauge.

The range of accurate registration is down to one-tenth or one-fifteenth of the maximum flow.

If it is desired to reduce the meter readings to standard cubic feet of dry gas, corrections must be made for variations in the barometric pressure, atmospheric temperature, and the tension of aqueous vapour by means of tabular numbers, as is the case with the Drum type Station Meter.

The Venturi Gas Meter is also made in a cheaper form in which the integrating mechanism is driven by clockwork, and any variation in the specific gravity, temperature, and moisture content of the gas is corrected for by means of tabular numbers, *i.e.* the meter readings are multiplied by

$$\frac{(p_1 - p'_1)}{p_1} \sqrt{\frac{W_D}{W_S} \cdot \frac{p_1}{T_1} \cdot \frac{T_S}{P_S}},$$

where W_D = weight of a cub. ft. of dry gas at p_1 and T_1 ; W_S = weight of a cub. ft. of gas containing water vapour at p_1 and T_1 ; p'_1 = pressure of water vapour at temperature T_1, P_S and T_S the standard temperature and pressure.

See Hodgson, *Proc. Inst. C.E.*, vol cciv., p. 164–165.

THE THORP ROTARY GAS METERS.

In the Thorp Rotary Gas Meter (fig. 12), the counter C is actuated by an anemometer fan F, which rotates about a vertical axis.

The gas, after being carefully guided by a series of nozzles N into a vertical direction, impinges on the underside of the blades, thus helping to take the weight of the fan off the bottom pivot. The rate of revolution of the fan is proportional to the actual volume of gas passing,

except at low flows, when the friction of the mechanism is appreciable. At these flows a weighted valve V (which lifts at the higher flows) causes the whole of the gas to pass through a few jets J, and so to impinge on the fan at an increased velocity. In this way the friction of the mechanism is compensated for, and accurate readings obtained down to one-tenth of the maximum flow.

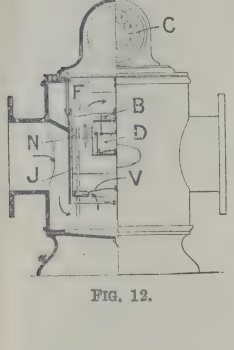


FIG. 12.

The dashpot D is provided to steady the motion of the weighted valve. A brake B is attached to this valve, which stops the fan immediately the flow is turned off, as the valve then falls.

This meter registers the actual volume of gas passed, and is subject to the same corrections for variations in the temperature, pressure, and moisture content of the gas as is the ordinary Drum type Station Meter, or the Kent-Hodgson Venturi Gas Meter.

Clogging of the nozzles through which the gas discharges on to the fan causes the meter to read fast. A special form of meter in which the nozzles can be cleaned from the outside, and in which any deposit thrown off from the fan does not accumulate round it, has been devised for measuring dirty gas.

HOT WIRE ANEMOMETER.

In this instrument a bare wire with a large temperature coefficient is heated electrically and exposed to the gas flow whose velocity it is required to measure. The velocity V of the gas can then be obtained from the relation

$$I^2 = A\theta + B\theta \left[V.W.K_p \right]^{\frac{1}{2}}$$

where θ = temperature elevation of the wire,
I = current in amps.,
V = velocity of the gas,
W = specific weight of the gas,
K_p = specific heat of the gas at standard pressure,
A & B = constants.

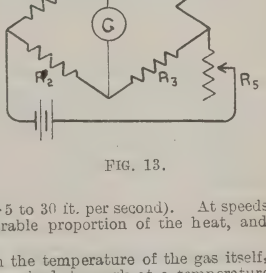


FIG. 13.

Referring to the diagram (fig. 13), R_1, R_2, and R_3 are resistances with no temperature coefficient, R_4 is the anemometer wire which is maintained at constant temperature when the gas velocity varies by adjusting the resistance R_5 so that the needle of the galvanometer G remains at zero. The current through R_4 is thus proportional to the reading of the high resistance voltmeter V.

The formula given above holds for ordinary gas speeds (9·5 to 30 ft. per second). At speeds below these, free convection currents carry away a considerable proportion of the heat, and the formula requires modification.

The accuracy of the instrument is affected by changes in the temperature of the gas itself, and for this reason it is desirable, when high accuracy is required, to work at a temperature elevation of about 1,000° C. In this case the anemometer wire should be of platinum. For ordinary work a temperature elevation of 200° C. or 300° C. is sufficient, and the anemometer wire may be made of electrolytic nickel.

It will be noticed that the velocity of the gas is approximately proportional to the fourth power of the current. This makes the accurate range of the instrument small, and it also makes it unsuitable for obtaining the mean velocity of fluctuating flows.

In Professor MacGregor Morris's Hot-Wire Anemometer, as made by The Cambridge & Paul Instrument Co., the four arms of the Wheatstone bridge are made of electrolytic nickel.

The wires which compose the two opposite arms of the bridge are shielded from the air current, and the two remaining wires are exposed to it. The instrument is thus automatically compensated for changes in the air temperature, so that it is not necessary for the temperature of the wires to be more than 100° F. above that of the air current to be measured. A constant potential difference is maintained across the bridge, and the air velocity is measured in terms of the out-of-balance current of the galvanometer.

The instrument is calibrated against known velocities in a wind tunnel.

Steam Meters.

The Kent-Hodgson Steam Flow Meter.

This meter (fig. 14) consists of an orifice O placed in the steam main, two cooling chambers CU and CD (whose function it is to condense any steam that passes into them and to serve as reservoirs of water), and pressure pipes PU and PD which transmit the difference of pressure between the upstream and downstream sides of the orifice, due to the steam flow, to the two sides of the differential pressure diaphragms D and to the inside of the pressure diaphragms P.

Any increase of the flow causes an increase of the difference of pressure between the upstream and downstream sides of the orifice, and consequently causes the diaphragms D to contract and the pointer B to move about its pivot C (the motion of the diaphragms D is transmitted to the outside of the diaphragm case through a stuffing box G); while any increase in the pressure of the steam causes the diaphragms P to expand and the arm H to descend.

Air vents V and an equalising valve E are fitted.

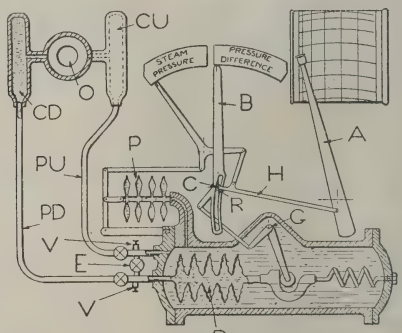


Fig. 14.

The product of the angular movement of the arm B (which is proportional to the differential pressure $(p_1 - p_2)$ and the travel of the roller R in its slot (which is proportional to the absolute pressure of the steam p_1) is transmitted to the pen arm A, which is thus given a motion proportional to $(p_1 - p_2)\, p_1$.

Since the rate of discharge of steam through an orifice is represented approximately by the equation,

$$Q = K \sqrt{(p_1 - p_2)p_1},$$

where p_1 = the absolute pressure of the steam on the upstream side of the orifice; p_2 = the absolute pressure of the steam on the downsteam side of the orifice; Q = lbs. of steam per hour; K is a constant depending upon the size and proportions of the orifice used—

the diagram can be divided to show the rate of steam flow at any instant, automatically corrected for variations in the pressure. (The corrections for variations in the superheat or wetness of the steam* are made by means of tabular numbers).

The meters can be arranged to record by counter also if desired.

With any given orifice plate the meter is accurate down to one-fifth of the maximum flow for which the plate is designed to deal. If it is desired to measure over a greater range of flow than this, a new orifice plate must be inserted. Each meter is designed to work in connection with any orifice plate. Each orifice plate is calibrated with actual fluid before leaving the works, and the accuracy obtained in practice with this meter is within plus or minus 1 per cent.

With slight modifications, the meters can be used for the measurement of compressed air.

---

* About 1 per cent. for every 2 lbs. change in the pressure, or 20° F. change in the superheat, or 2 per cent. change in the wetness.

SECTION XXVII

HARBOURS — TYPES OF BREAKWATERS AND THEIR RELATIVE ADVANTAGES—COST OF CONSTRUCTION AND MAINTENANCE—EXTENT AND DEGREE OF WAVE ACTION—METHODS OF BREAKWATER CONSTRUCTION — DOCKS — DESIGN AND CONSTRUCTION OF DOCK WALLS—ENTRANCE LOCKS—LOCK GATES AND CAISSONS—QUAY-SIDE APPLIANCES — CRANES — TRANSPORTERS—COAL HOISTS—GRAIN ELEVATORS — GRAVING AND FLOATING DOCKS — DREDGING — SUBAQUEOUS ROCK REMOVAL — CHANNEL DEMARCATION — BUOYS — LIGHTSHIPS — LIGHTHOUSES — SUBMARINE SIGNALS—DIVING

(Contributed and revised by Brysson Cunningham, D.Sc., B.E., F.R.S.E., M.Inst.C.E.)

SECTION XXVII

HARBOURS—TYPES OF BREAKWATERS AND THEIR RELATIVE ADVANTAGES—COST OF CONSTRUCTION AND MAINTENANCE—EXTENT AND DEGREE OF WAVE ACTION—METHODS OF BREAKWATER CONSTRUCTION—DOCKS—DESIGN AND CONSTRUCTION OF DOCK WALLS—ENTRANCE LOCKS—LOCK GATES AND CAISSONS—QUAY-SIDE APPLIANCES—CRANES—TRANSPORTERS—COAL HOISTS—GRAIN ELEVATORS—GRAVING AND FLOATING DOCKS—DREDGING—SUBAQUEOUS ROCK REMOVAL—CHANNEL DEMARCATION — BUOYS — LIGHTSHIPS — LIGHTHOUSES — SUBMARINE SIGNALS—DIVING

Contributed by Brysson Cunningham, D.Sc., B.E., F.R.S.E., M.Inst.C.E.
(Author of 'Dock Engineering,' 'Harbour Engineering,' etc.)

HARBOURS.

Harbours are sheltered areas of water affording safe anchorage for ships, generally also provided with quays and facilities for landing passengers and cargo. There are many harbours where the requisite shelter is forthcoming naturally from the physical configuration of the coast line (Queenstown, Rio de Janeiro, etc.). Where protection cannot be obtained in this way it has to be provided by means of breakwaters, as at Portland, Dover, and elsewhere.

Breakwaters are of two types: (*a*) the mound of rubble stone, and (*b*) the upright wall of masonry or concrete. Frequently the types are combined. Sometimes the mound predominates

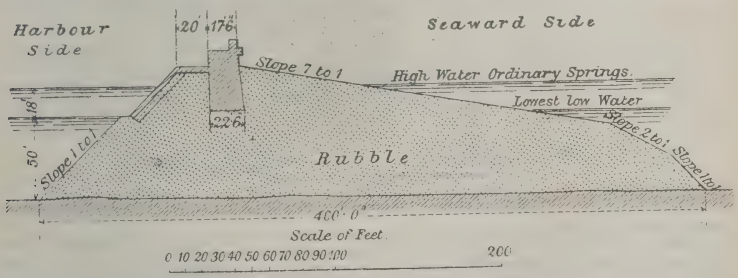


FIG. 1.—Holyhead Breakwater.

and is simply capped by a slight superstructure of regular masonry, as at Algiers and Oran; in other cases it is reduced to a minimum, becoming a mere foundation layer for a wall of massive proportions, as at Ymuiden and Zeebrugge.

The relative advantages of the mound and the wall are as follows:—

1. As regards *efficiency*, the mound is not so serviceable as the wall. The undulations of the sea are transmitted through the interstices of a mass of rubble, and the harbourage area is kept more or less in a state of agitation.

2. As regards *initial cost*, the mound can be formed by unskilled labour, and where that is plentiful and stone abundant, this type of breakwater will commend itself on account of the facility with which it can be constructed. In the absence of these essential conditions, and provided the depth of water be moderate and the foundation sufficiently firm, the wall, involving a much less quantity of material, will be found preferable. Especially will this be the case where skilled labour is readily procurable at reasonable rates. Even the difficulty of a defective foundation may be overcome by one or other of several expedients without perceptibly altering the relative positions. But where the sea bottom lies at a considerable depth (40 feet or more) the superior economy of the pure wall cannot be maintained.

CONSTRUCTIONAL COST OF BREAKWATERS.*

Harbour.	Type.	Mean Depth of Water.	Cost per lin. ft.	Remarks.
		Ft.	£	
Alderney .	Composite	90	259	Mound terminates 12 ft. to 15 ft. below L.W.
Algiers. .	Mound	50	122	Large random concrete blocks surrounding rubble.
Dover . .	Wall	40	415	Concrete blocks weighing 26 to 40 tons.
Holyhead .	Composite	54	162	Mound very predominant.
Marseilles .	Mound	35	87	
Bizerta. .	Composite	58	60	Wall built on caisson system.
Portland .	Mound	44	127	
Naples . .	Composite	93	186	

3. As regards the cost of *maintenance*, this is generally greater in the case of mounds than in the case of walls. A wall, provided it be properly constructed in the first instance, calls for no further attention, save for such rare and occasional damage as results from some storm of exceptional severity. The rubble mound, on the other hand, is peculiarly susceptible to wave

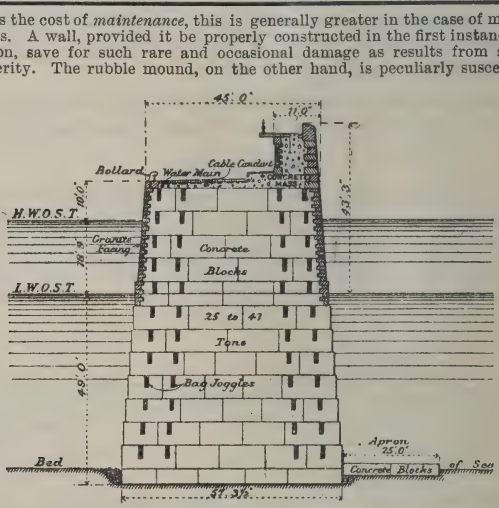


FIG. 2.—Dover Admiralty Pier Extension, Dover.

action, and needs constant replenishment. The cost of this varies very considerably according to situation and exposure. At Holyhead it was for many years as low as 1*s.* 3*d.* per lin. ft. per annum, but latterly there has been some extensive replenishment at considerable outlay ; at Genoa, the cost is stated to be 7*s.* ; at Naples, 13*s.* ; while at Alderney, during a certain period, it rose as high as 45*s.* This last, however, is quite an abnormal figure, and under ordinary conditions the pre-war annual expenditure on mounds of suitable design hardly exceeded a pound a foot.

Wave Action.

Wave Action.—Wave action on breakwaters is most keenly marked between the levels of high and low water, but it extends to a depth of 30 ft., and there are instances on record of serious disturbances at even greater depths. Thus, at Peterhead, blocks weighing upwards of 41 tons have been displaced at 36½ ft. below L.W.O.S.T. But cases of this kind are exceptional. Generally speaking, at a depth of 5 fathoms the sea is fairly quiescent and a rubble mound may be counted upon to stand therein with side slopes of from 45° to 50°.

Above this level much flatter slopes become necessary : 2, 3, 4, 5, and even 7 to 1. Unfortunately, while the equilibrium of the mound demands such gradual inclinations, they serve also

* The impossibility of accurately adjusting costs and prices, where they are quoted, to the altered and variable conditions arising out of the war has rendered it advisable to retain them on their old pre-war basis, leaving the necessary adjustments to be made as occasion may require.

to foster the disruptive action of waves, which, passing up a long seaward incline, have their oscillatory character changed into one of translation. At the summit the impact delivered is so powerful as to produce a pressure which Stevenson records as being six times as great as that against a steep wall. This inimical effect can only be counteracted by the use of huge blocks and monoliths, covering the exposed surface of the mound. The blocks, which in practice rarely weigh less than 25 or 30 tons apiece, and often considerably more, may be deposited either in courses or at random. In the former case they are generally stepped so as to conform to the general inclination. In either arrangement they should be laid as headers, pointing seaward, so as to expose the least extent of surface to wave-action and at the same time gain the utmost

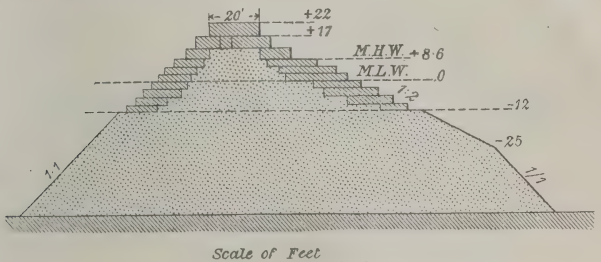


FIG. 3.—Sandy Bay (U.S.A.) Breakwater.

advantage from the moment of resistance to overturning. Hence prisms or parallelopipeds are decidedly preferable to cubes.

The *maximum pressure* exerted by waves does not appear to exceed 3½ tons per sq. ft. At Skerryvore, on the Atlantic, a pressure of from 2½ to 2⅞ tons per sq. ft. has been observed; at Bell Rock, in the German Ocean, 1½ ton; at Dunbar (East Lothian) 3½ tons, and at Buckie (Banffshire) 3 tons.

Composite breakwaters, in which the wall plays any important part at all, should be so designed that the *back draught* or *after-tow* of the waves cannot undermine the superstructure. To be really effective, this means that the wall should be carried down to a depth of at least 30 ft. below low water, and though in the past many such walls have been founded at low water level, or very slightly below it, yet the experience gained has proved that this depth is quite inadequate (the low water zone is particularly dangerous), so that of late years there has been a continual tendency towards increasing the depth of the foundation level. At Bilbao the wall commences at 16½ ft. below low water; at Madras 27½ ft.; at Naples 33 ft.; and at Peterhead 43 ft.

Methods of Construction.

Methods of Construction.—Breakwaters are constructed in several ways, according to situation and type.

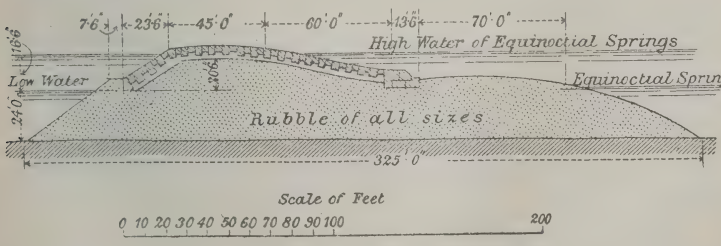


FIG. 4.—Plymouth Breakwater.

For **mound breakwaters,** rubble may be deposited—(*a*) from barges or scows; (*b*) by means of cranes running on temporary staging; and (*c*) from wagons passing over roads laid at or about the level of the top of the mound and extended as the work proceeds.

The first method is best adapted to sheltered situations, and affords an opportunity of depositing rubble uniformly and simultaneously over the whole site, but it is not practicable to carry on operations in this way at or about surface water level nor above it. Moreover, the progress of the work is very dependent on weather conditions, and there may be long periods of enforced inaction. It is to be noted in passing that irregular deposits of rubble lead to current action and scour. The second method (staging) admits of operations being carried on uniformly over the site, though not with quite the same degree of freedom as in the case of barges. But the advantages of a stable working base with infrequent interruptions and higher degree of safety and protection for workers, are very pronounced. The damage sustained by timber staging in storms

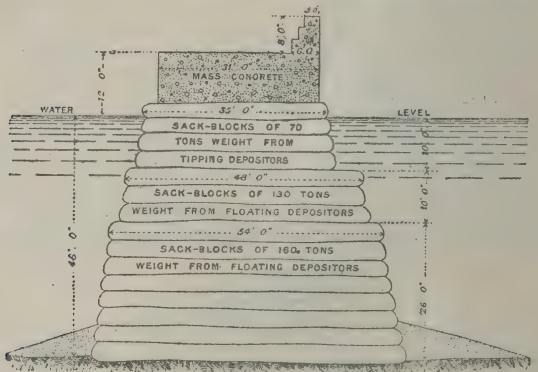


FIG. 5.—La Guayra Breakwater.

and from the attacks of marine borers are drawbacks which detract from the merits of the system, though, generally speaking, the former is proportionately not a serious matter, and any evil results of the latter can be to some extent guarded against by careful inspection. The third, or low-level system of construction, by means of tipping from wagons running on tracks laid on the breakwater itself, assists in the consolidation of the work as it proceeds, and saves the cost of staging, but the area of operation is limited and there is liability to interruption during the prevalence of heavy seas. It is a method more adapted to small embankments, where time also is perhaps not a matter of prime importance.

Wall-Breakwaters.

Walls are constructed either by means of staging, or on the low-level, end-on system: the former being generally more suitable when concrete is deposited in mass, and the latter for blockwork. The blocks, or monoliths, are deposited in place by huge revolving cranes, known as Titans, and overhead travellers known as Goliaths (p. 786). A modern Titan is a powerful cantilever crane capable of dealing with blocks of from 30 to 50 tons weight, at a working radius of as much as 100 ft. A 41-ton steam Titan used on the breakwater at South Shields had a radius of 75 ft., and was carried on 16 central-flanged wheels running on rails set to a 22 ft. gauge. The speeds of the various motions were as follows: Lifting full load, 6 ft. per min.; lifting loads up to 10 tons, 25 ft. per min.; racking full load, 20 ft. per min.; racking loads up to 10 tons, 50 ft. per min.; slewing, one revolution in 4 min. Goliaths are constructed to the same lifting capacity as Titans, and some command a lateral range of travel of 100 ft. or more, but the span is generally limited to about 50 or 60 ft. At Dover, a 42-ton steam Goliath had a range of 130 ft., a clear headway of 25 ft., and a total lift of 120 ft. The speeds of movements were: Lifting, 10 ft. per min.: crab travel, 50 ft. per min.; and main travel, 60 ft. per min.

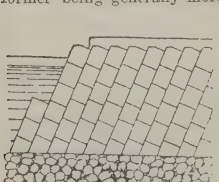


FIG. 6.—Sloping Bond.

Special Methods of Construction.

Special methods of breakwater construction include the use of bags, or sacks, of concrete, weighing from 50 to 200 tons, for deposition under water by divers, as at La Guayra; large caissons, or tanks, of reinforced concrete, with volumes of 60,000 to 70,000 cu. ft., floated out into position, sunk and filled in solid, as at Bizerta; and blocks set on end, slightly tilted (15° to 20°) out of the vertical, so as to form what is called *sloping bond*, the object being to allow for unequal

settlement in the foundation. Small breakwaters in shallow waters are sometimes constructed of cribwork—box-shaped frames of timber in openwork with cross partitioning and ties, weighted when in position with rubble—but the system is not very durable and only suitable for comparatively sheltered situations.

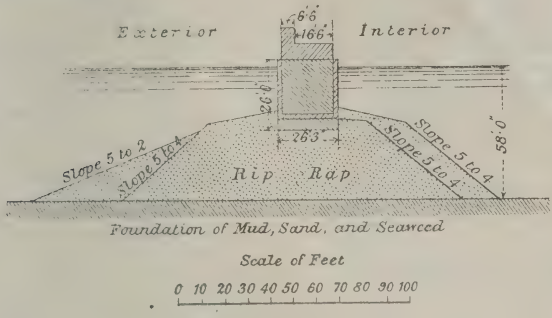


FIG. 7.—Bizerta Breakwater.

DOCKS.

Docks are enclosed repositories for shipping. Where the enclosure is not complete and there is free communication with the sea, the term *Basin*, though not universally employed, is more appropriate. Docks proper are fitted with gates or caissons, either in order to impound the water at a fairly constant level, in which case they are distinguished as wet docks, or to exclude the water, in which case they are known as dry or graving docks. *Floating Docks* are movable structures capable of lifting vessels out of the water and supporting them by their own displacement.

CONSTRUCTIONAL COST OF WET DOCKS.*

(Note: The variety and range of design and equipment render any very effective comparison out of the question.)

	Per acre of Water Surface.		Per acre of Water Surface.
Alexandra Dock, Hull . .	£28,900	Barry Docks	£12,950
Alexandra Dock, Liverpool .	23,300	Prince of Wales Dock, Swansea	18,600
Avonmouth Dock, Bristol .	22,600	Queen's Dock, Glasgow . .	24,450

KING GEORGE V. DOCK.

A notable event of the year 1921 was the opening of the King George V. Dock at London, which adds 64 acres to the enclosed water area of the port. The new dock has a depth of 38 ft., and the quayage aggregates approximately 10,000 ft. A section of the north, west, and east quay walls is given in fig. 11. An unusual feature on the south side of the dock, shown in fig. 12, is the provision of seven reinforced concrete jetties, each 520 ft. long and 22 ft. wide, which have been constructed at a distance of 32 ft. from the face of the main quay wall, the only shore connection being a timber foot-bridge. The arrangement is due to the fact that a preponderating portion of the goods arriving at the port is transferred to barges for conveyance to their ultimate destination up river. Ships are berthed on the outside of the jetties, and the jetty cranes will discharge goods therefrom either on to the quay for delivery to carts or railway trucks, or for sorting or temporary storage at the sheds behind, or, alternatively, into barges lying in the space between the jetties and the wall.

The entrance lock from the river Thames is 800 ft. long by 100 ft. wide, with a depth of water on the sill of 45 ft. below Trinity high water. The chamber is divided into two compartments, of 550 ft. and 250 ft. respectively, by 36-inch steel lock gates, each leaf of which weighs 309 tons. By the use of a floating caisson, for which provision has been made at the inner end of the lock, the available length can be increased to 910 ft.

* See footnote page 1324.

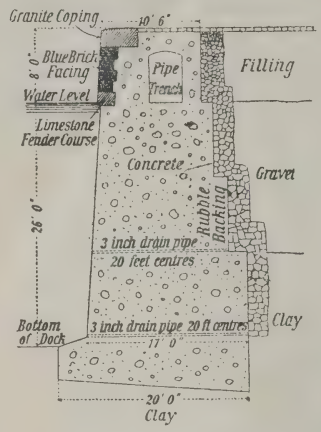


FIG. 8.—Manchester Dock Wall.

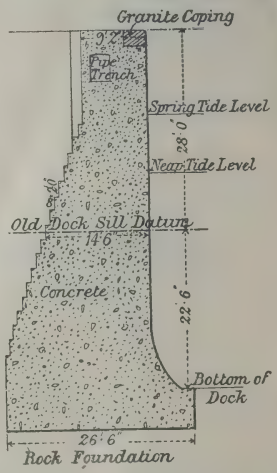


FIG. 10.—Liverpool Dock Wall.

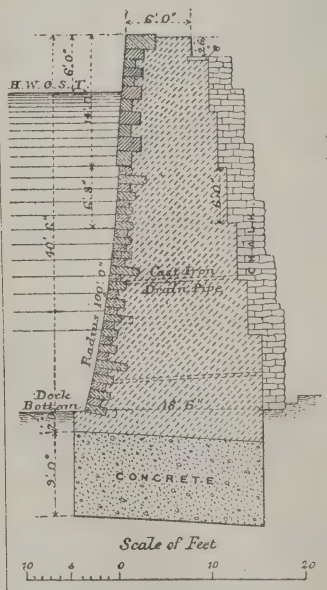


FIG. 9.—Hull Dock Wall.

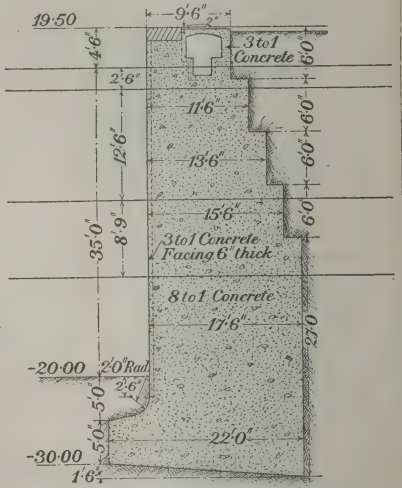


FIG. 11.—King George V. Dock, London: Section of N., E., and W. Quay Walls.

KING GEORGE V. DOCK, LONDON.

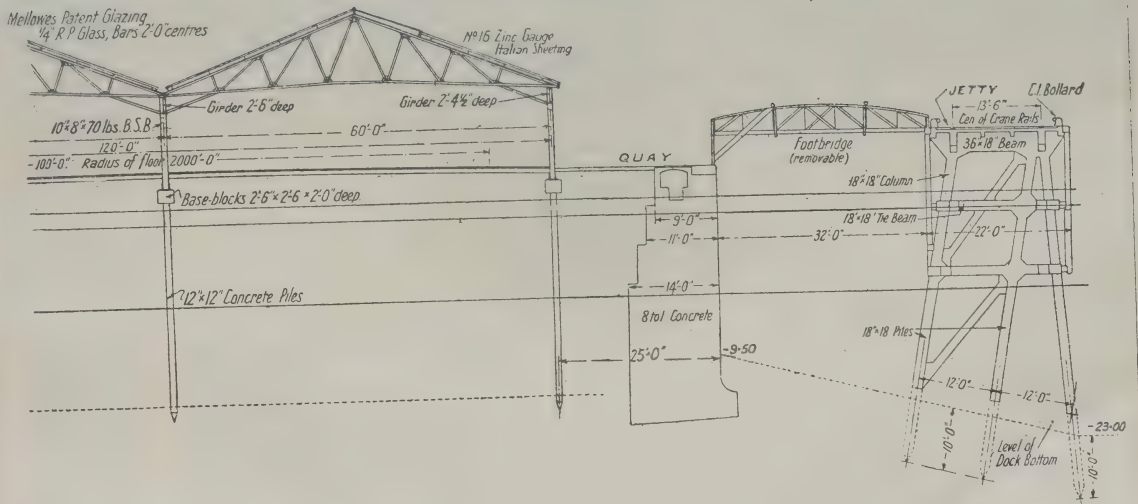


FIG. 12.—Cross Section of South Quay.

Dock Walls.

Dock Walls.—Under present-day conditions it is necessary for quay walls to possess a perpendicular, or almost perpendicular, face. Ships are now built to a square, box-like section amidships, with vertical sides inclining inwards towards the top. Unless, therefore, there is an absence of batter in the walls, vessels will be unable to lie as closely in contact with the quay coping as is desirable, and quay cranes for loading and discharging them will have to be provided with a greater outreach than is absolutely necessary, at an enhanced cost.

Dock walls are constructed of masonry, brickwork and concrete—nowadays generally the latter, deposited in mass with sometimes a brick or stone facing. There is nearly always a coping course of granite. A toe in front of the wall adds to its stability and prevents any undermining of the foundation. The material forming the backing should be carefully selected so as to admit of proper drainage, and weep or vent holes should be provided in the wall at intervals of 50 feet or so, to admit of water escaping through to the front when the level of the dock is lowered in any way.

The composition of *Concrete* for the hearting of dock walls may safely be put at 8 parts of aggregate by volume to 1 part of sound Portland cement. Of the aggregate the sand while not exceeding 3 times the cement will at least suffice to fill the interstices in the gravel. Stone rubble plums can be used to advantage, provided they are completely bedded in concrete and do not come within 6 inches of each other or the face. The facing of the wall, if of concrete, will be composed of equal parts of gravel, sand and cement.

The *essential features of a quay wall* are weight and resistance to slip. The first is secured by using heavy material and providing ample sectional area; the second by giving a suitable bevel to the surface of the foundation so that it slopes downward from the front of the wall to the back, at the same time taking care that the maximum intensity of pressure does not exceed a certain limit, which, in the case of stiff clay, is 3 tons per sq. ft.; in the case of unconfined sand and gravel, is 2 tons; and in the case of soft, uncertain ground, is 10 cwts. per sq. ft.

Stresses in Dock Walls.

Stresses in Dock Walls.—The calculation of the stresses in a dock wall is a very complex problem, involving a considerable number of elements, the exact determination of which is impracticable, so that they have largely to be based on conjecture. Briefly stated, the conditions are as follows: The wall is subjected to the overturning influence of a wedge-shaped mass of earth which represents the excess of material behind the wall lying above the plane of natural slope of the material. The pressure, of course, is intensified by any surcharge upon the surface area of the wedge. The restraining force is the weight of the wall itself, acting vertically downward, assisted to some extent by the earth backing which may rest upon offsets, if any, at the back of the wall.

In fig. 13, let A B D K G be the outline section of a dock wall.

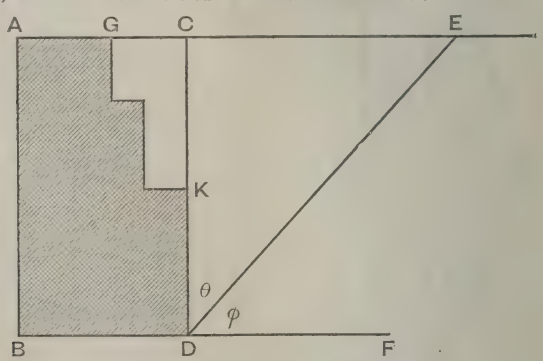


FIG. 13.

Let E D be the plane of natural slope of the ground behind the wall, i.e., the slope which the material would assume if left unsupported. The angle E D F will be designated ϕ and is known as the Angle of Repose.

Let the height of the wall A B be h, and w be the weight per unit volume: and let v be the weight per unit volume of the earth behind the wall.

Then the weight of the wedge of earth behind the wall, tending to overturn it, is

$$\frac{vh^2}{2} \cdot \tan \theta.$$

In order to cover cases where the back of the wall is not vertical and where the surface of the ground is not horizontal, this expression may be written in general terms :

$$\frac{vh^2}{2} \times \text{constant},$$

and the value of the constant, as determined by Professor Rankine in accordance with a theory which neglects any cohesion between the earth particles, is

$$\frac{1-\sin\phi}{1+\sin\phi}.$$

The line of action of the overturning force,

$$\frac{vh^2}{2} \cdot \frac{1-\sin\phi}{1+\sin\phi},$$

is taken as parallel to the surface of the ground and the point of application at one-third the height of the wall measured from the base.

For simple practical calculations for dock walls where the quay surface is almost invariably

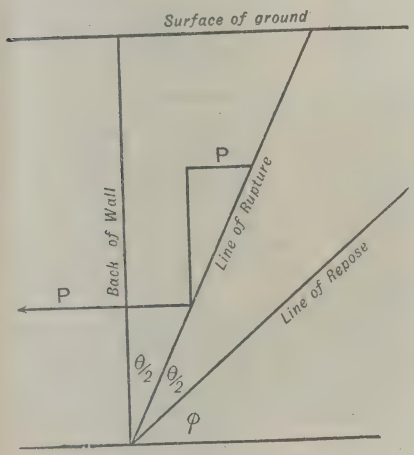


FIG. 14.

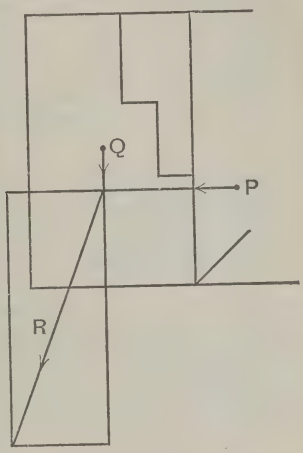


FIG. 15.

horizontal, the angle θ ($=90°-\phi$) is bisected and the value $\frac{\theta}{2}$, fig. 14, taken as representing the angle of the wedge producing maximum pressure, the other moiety being ineffective as regards overturning owing to the support it receives from the earth beneath it. The weight of the triangle $\frac{h^2}{2}\tan\frac{\theta}{2}$ is computed, and the horizontal component, P, taken of the force acting down the plane of rupture, of which $v\frac{h^2}{2}\tan\frac{\theta}{2}$ is the vertical component. This constitutes the overturning force, which may accordingly be written :

$$P=\frac{vh^2}{2}\tan^2\frac{\theta}{2}$$

The point of application of P is again at one-third of the height of the wall.

The restraining force Q is measured by the sectional area of the wall A B D G, fig. 13, multiplied by w, together with the sectional area of the earth G K C resting on the wall, multiplied by v, the two acting vertically downwards through their common centre of gravity.

Calling the overturning force P, and the restraining force Q, fig. 15, and completing the parallelogram of forces, the resultant R will be obtained, representing in magnitude and direction the force acting at the base of the wall.

So long as the line of action of R falls within the base of the wall, there is theoretical stability, but, for practical constructional purposes, it is essential :

(1) That the line of action of R should not fall outside the middle third of the base line, and

(2) That the magnitude of R should not be sufficient to crush the base ; in which connection it is to be noted that the intensity of pressure increases with the eccentricity of the resultant (i.e. its distance from the centre) and that when R passes through the limiting point of the middle third of the base, the intensity of pressure on the outer edge is just twice the mean intensity. As a rough practical rule in designing dock walls, the mean width or thickness may be made about one-third of the height. It should never be less than one-fourth. The base width may be about one-half the height, but need never be more than two-thirds.

EXAMPLES OF PROPORTIONS ADOPTED FOR DOCK WALLS.

Port.	Total Height. h	Base Width. b	Sectional Area. A	Mean Width $= \frac{A}{h}$.	Ratios.	
					Base. Height.	Mean Width Height.
	Ft.	Ft.	Sq. Ft.	Ft.		
Manchester	38	20	476	12·5	·53	·33
Middlesbrough	48	21	648	13·5	·44	·28
Immingham	51	31	910	17·8	·60	·34
Hull	52	20	736	14·1	·38	·27
Liverpool	55	22	760	13·9	·40	·25
Southampton	71½	39	1,692	23·6	·54	·33

CONSTRUCTIONAL COST OF QUAY WALLS.*

	Height of Wall.	Cost per lin. yard.
	Ft.	£
Albert Dock, Hull	49	58
Albert Dock, London	37½	70
Alexandra Dock, Hull	52	84
Antwerp River Quays	56½	250
Dublin River Quay	42	120
Princes Dock, Glasgow	57½	120
White Star Dock, Southampton	71½	195

Entrance Locks.

Entrance Locks.—During periods when the water in a dock is impounded at a higher level than that of the external water, the dock can only be entered through the medium of a lock. The size of lock chambers is governed by the dimensions of the ships making use of them, and these vary at different ports. The largest vessels in existence at the present time are 900 ft. to 950 ft. long by 95 ft. to 100 ft. broad, and they draw from 35 ft. to 38 ft. of water when loaded to their full capacity. No port can claim to be of the first rank which does not receive vessels from 500 to 600 ft. long, with 60 to 70 ft. beam and drawing 30 ft. of water.

Dock Gates.

Dock Gates.—Where the rise and fall of the tide does not exceed about 12 ft. the inducement to provide completely enclosed areas for shipping is not great, but above that limit the necessity for impounding the dock water becomes evident on account of the inconvenience arising from rapid changes of level, frequent alteration in moorings, and chafing against the quayside.

Dock gates are either of steel or wood—in the latter case of greenheart, jarrah, or other hard, heavy, durable timber. Greenheart gates cost more than steel gates—in some cases nearly 50 per cent. more—but their natural durability is very great and the cost of maintenance practically nil. Unfortunately, they are subject to the attacks of sea vermin, and in certain ports considerable trouble has been experienced from this cause. Salt water, especially if contaminated in any way with sewage, is extremely deleterious to ironwork, and the life of a steel gate, under these circumstances, can scarcely be expected to exceed 30 years. Greenheart gates have been found in excellent condition at the end of 50 years.

Stresses in Dock Gates.

Stresses in Dock Gates.—Dock (double-leaf) gates are maintained in equilibrium under the action of four external forces :—(1) the resultant pressure of the water against the back of the gate $= \frac{wh^2}{2}$ per lineal foot of gate, where w (62½ lbs. for fresh, 64 lbs. for salt water) is the weight of a cubic foot of water, and h its height behind the gate. This force acts horizontally at one-third of the height. When there is water on both faces $p = \frac{w}{2}(h^2 - h_1^2)$, and the line of action is

* See footnote page 1324.

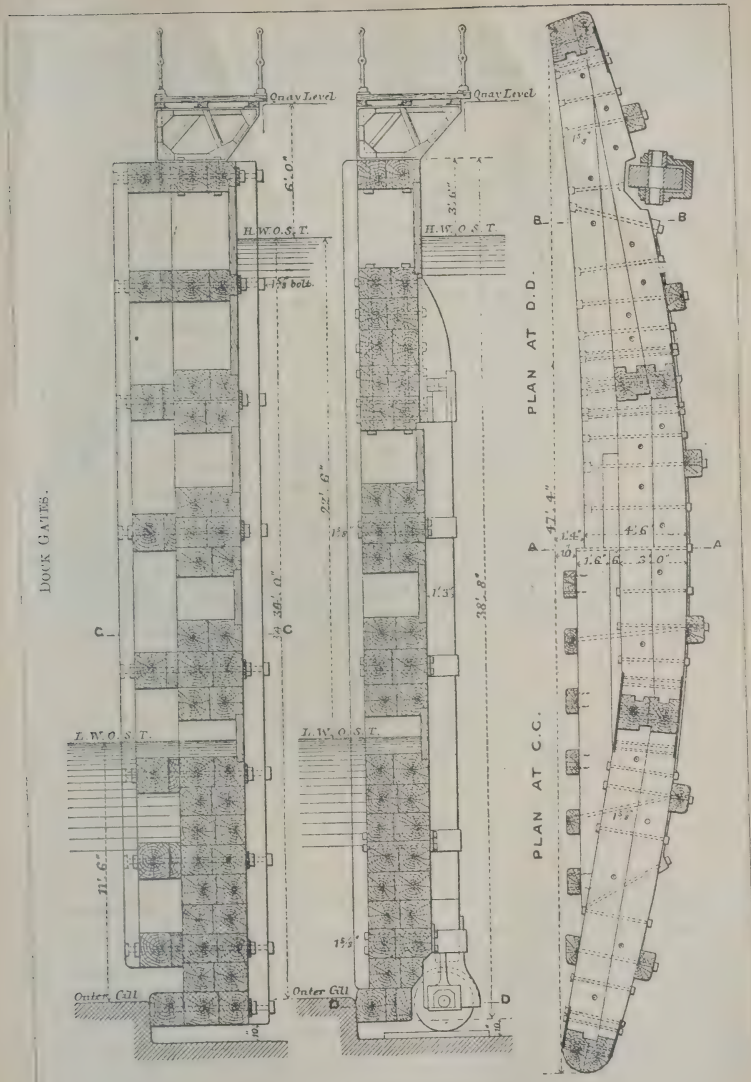


FIG. 16.—Dock Gates. (Timber.)

determined by the centre of gravity of a quadrilateral representing the difference in pressure. (2) The reaction of the mitre or meeting posts of the gates acting perpendicularly to the meeting faces, and therefore also perpendicular to the centre line of the waterway. (3) The reaction of the hollow quoins passing through the heel-post of the gate and also through the point of intersection of the other two forces. (4) The reaction of the sill, which is generally neglected.

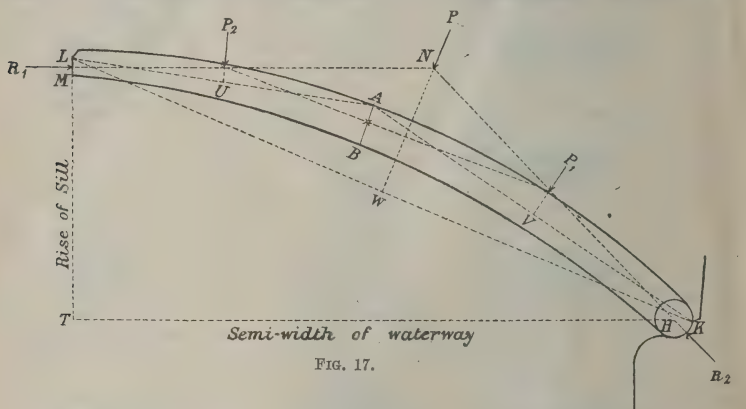


FIG. 17.

Fig. 17 represents the plan of one leaf of a pair of gates. P is the total water pressure upon the back of the leaf, assumed concentrated at its centre. R_1 is the mitre-post reaction of the adjoining leaf, taken as passing through the centre line of the abutting surfaces. R_2 is the reaction of the hollow quoin, assumed to act through the axis of the heelpost. These three forces being in equilibrium, the triangle of forces *ors* (fig. 18) can be drawn, having its sides parallel to

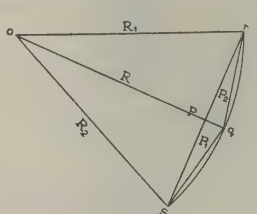


FIG. 18.

the forces P, R_1, and R_2 respectively, and since the magnitude of P is known, the magnitudes of the other two are determined.

If now it be required to find the position and amount of the resultant stress across any section AB (fig. 17) of the gate, the procedure is as follows:—Join the point A to each of the extremities K, L of the water-bearing surface of the leaf; bisect these lines at U and V respectively, and draw perpendiculars to represent the total water pressure on each section. Each section is in equilibrium under the action of these forces: in one case, the water pressure, the heelpost reaction, and the stress across AB; in the second case, the water pressure, the mitre-post reaction, and also the stress acting across AB in the opposite direction. Join the points of intersection of the known forces to obtain the line of action of the resultant pressure at the section AB. Its magnitude may be determined by drawing a parallel line, *qo*, in the force diagram from the point *o* (fig. 18). By taking a series of sections in this way, it will be found that the locus of *q* is sensibly the arc of a circle, and therefore that, except in the case of very flat gates, the resultant pressure is so nearly constant as to be justifiably considered so without serious error.

Rise of Sill.—The 'rise of sill,' MT (fig. 17), varies in different cases from $\frac{1}{2}$ to $\frac{1}{8}$ of the 'span of the gates' or width of waterway. The vicinity of the latter limit is the more common, especially for large cylindrical gates, where a large rise would entail a correspondingly long and deep recess in the side walls.

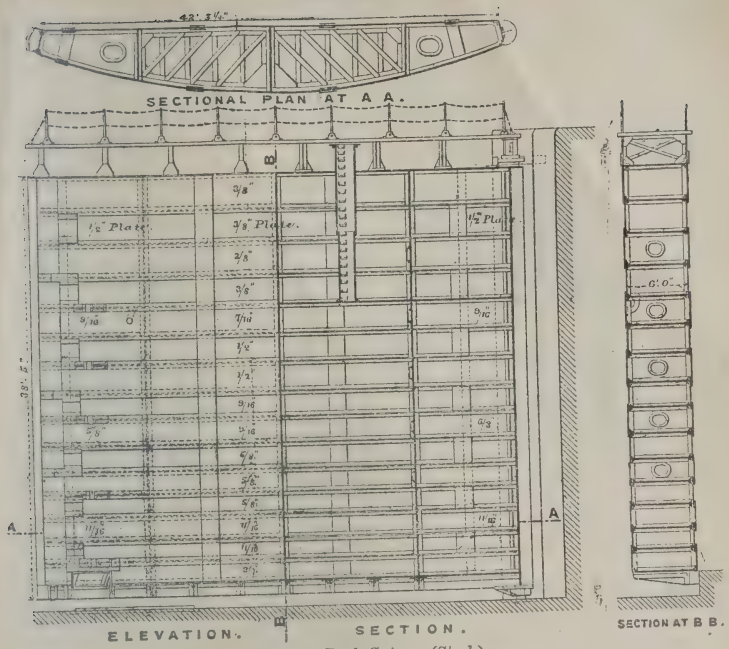


FIG. 19.—Dock Gates. (Steel.)

PARTICULARS OF DOCK GATES.

Port.	Material.	Width of Waterway.	Depth of Water at H.W.O.S.T.	Height of Gates.	Weight of one Leaf.	Cost per sq. ft. of Gate.*	Remarks.
		Ft.	Ft.	Ft.	Tons.	*s. d.*	
Liverpool .	Greenheart	90	39½	44½	165	45 3	
London .	Steel	80	36¼	38¼	185	—	
Do. .	Steel	100	45	38	309	—	
Hull . .	Greenheart	85	34	38½	176	48 0	
Manchester	Steel	65	40	—	—	33 9	Similar Greenheart gates cost 49*s.* 9*d.* per square foot.
Limerick .	Steel	70	23½	26	45	25 3	
Avonmouth	Greenheart, pitch pine and memel	70	38½	48	102	26 0	

CAISSONS.

Caissons are sometimes preferred to gates on the ground that they do not absorb the length of side walls which is required to house gates when a passage is open. Furthermore, although the first cost of a caisson is undoubtedly in most cases greater than that of a pair of gates, yet if the cost of a swing bridge for vehicular traffic, which is a necessary adjunct in the case of gates, be also taken into consideration, the advantage will be found to lie with the caisson.

Caissons are mainly of two types: traversing and floating. Traversing caissons are rectangular boxes with a rectilinear motion either sliding or rolling. When withdrawn from the passage way, they are housed in a special chamber constructed in the side wall. Floating

* See footnote page 1324.

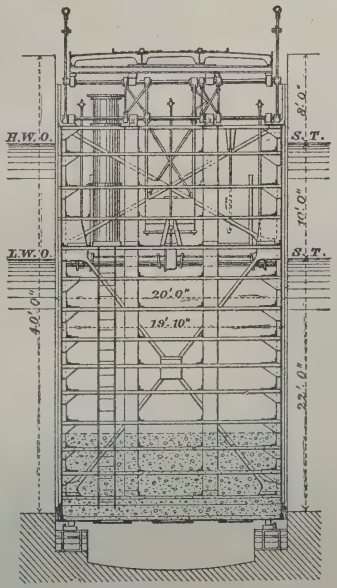


FIG. 20.—Section of Traversing Caisson.

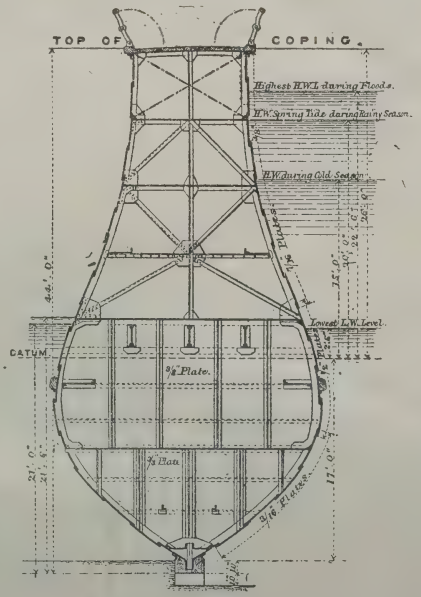


FIG. 21.—Section of Ship Caisson.

caissons are usually ship-shaped, having more or less the form of a navigable vessel, though the curvature of the sides varies very much with the depth of water in which they have to float. Floating caissons are not easy to manage in boisterous weather and strong currents.

PARTICULARS OF CAISSONS.

Port.	Type.	Width of Waterway.	Depth of Water on sill at H.W.O.S.T.	Height of Caisson.	Cost per sq. ft. of Waterway.*
		Ft.	Ft.	Ft.	*s.*
Quebec . . .	Rolling .	62	25½	32	72
Malta . . .	Sliding .	94	36½	40½	85·7
Belfast . . .	Ship . .	80	31	33	35
Barry . . .	Floating .	60¼	26¾	34½	47·2

QUAYSIDE APPLIANCES.

Quay Cranes.

For general work, quay cranes range in lifting capacity from 1 to 3 tons. The usual capacity is 30 to 40 cwts. It very often happens that the parcels from a ship's hold do not exceed 12 to 15 cwts., and, under these circumstances, a hydraulic crane of single and much higher power than this cannot be worked to advantage, as the consumption of pressure water is the same whether the load be infinitesimal or the maximum. Electric cranes are better adapted to variable loads, since the current consumed is directly proportional to the work done. On the other hand, the initial cost of electric cranes is some 30 to 40 per cent. more than that of hydraulic cranes, and the capital charges (interest and depreciation) are factors of considerable importance in estimating the relative economy.

Crane Types.—Quay cranes are generally movable and include several types.

(*a*) The ordinary crane, with a wheel gauge of 10 to 15 ft. running at quay level.

(*b*) The portal crane, with an arched base spanning one or more lines of railway sidings and admitting of the passage of rolling stock beneath the crane.

(*c*) The semi-portal crane, like an inverted L, with one leg or support running on a rail at quay level, and the back support carried by a rail at a higher level on an adjacent shed structure, the object being the same as in the case of the portal crane.

(*d*) The roof crane, carried entirely on the roof of the shed or warehouse.

Types (*a*) and (*d*) are adapted to cases where there are no sidings and type (*d*) where the shed is situated close to the edge of the quay.

The *cycle of operations* of a quay crane consists of lifting from a hold, slewing, depositing, and returning unloaded, and should, in ordinary cases, where the range of lift does not exceed 50 or 60 ft., be performed in about one minute. A good average under favourable conditions would be 50 cycles per hour; but spread over any lengthy period, this rate could hardly be maintained, for reasons entirely unconnected with the crane.

Speeds of Quay Cranes.—The ordinary speeds of 30 to 35 cwts. quay crane machinery are as follows:—

Lifting, full load	250 ft. to 300 ft. per min.
Lifting, light	350 ft. to 400 ft. per min.
Lowering, full load	400 ft. per min.
Lowering, light	150 ft. per min.
Slewing	one revolution in 25 or 30 seconds.

Luffing Cranes.—It is an important consideration in modern quayside work that cranes should have considerable outreach. Not only is it necessary for them to plumb the hatchways of vessels moored alongside, but in many cases it is desirable to command a barge or lighter beyond. This involves an outreach of 50 to 60 ft. from the face of the quay for even vessels of moderate beam, and entails a luffing or derricking movement of the jib. In view of the obstruction to radial movement caused by ships' yards and stays, the luffing of the crane jib has of recent years become an important feature of crane design. Formerly, the load was unavoidably raised during the inward travel of the jib with a correspondingly unnecessary expenditure of energy and time. This has now been obviated by the introduction of compensating luffing gear by means of which the load is carried at a uniform level throughout its range of travel.

Fixed Quay Cranes.—Fixed quay cranes are provided for dealing with special loads of considerable calibre. The powers provided are generally 5, 7, 10, 12, 15 and 25 tons, with appliances at first-class ports ranging up to 100 or 150 tons. The rates of lifting are correspondingly slower; about 150 ft. per min. for 5-ton cranes, 30 ft. per min. for 25-ton cranes, and 20 ft. per min. for 50-ton cranes.

(See also 'Wharf Cranes,' page 790.)

* See footnote page 1324.

Floating Cranes.

Floating Cranes.—For the heavier lifts, floating cranes are often preferred. It is a convenience to bring the crane to the ship rather than *vice versâ*. Against this must be set the greater initial and working cost of a floating crane. Floating cranes are provided at most first-class ports of lifting power ranging from 25 to 100 or 150 tons. A floating crane recently built for a Japanese port has a working load of 200 tons at 105 ft. radius, 100 tons at 150 ft. radius, and 30 tons at 160 ft. radius. The heaviest lifts are performed at the rate of 5 ft. per minute. A revolution takes 6 to 8 minutes.

(See also CRANE Section, page 783.)

A floating crane of 200 tons capacity has recently been acquired by the Mersey Docks and Harbour Board. It is an electrically-driven, derricking, and revolving crane, 154 ft. in length, 88 ft. in breadth, and 16 ft. in depth. The hoisting speeds vary from 6 ft. per min. for loads of 200 tons, to 20 ft. per min. for loads of 60 tons. The highest point of the jib at its highest position is 246 ft. above the water-line, with a maximum radius for loads of 60 tons amounting to 183 ft., and for loads of 200 tons, to 110 ft. The vessel is named the *Mammoth*; in conjunction with its outreach it is claimed to possess the largest lifting capacity of any existing floating crane.

Transporters.

Transporters.—Where loads are uniform, can be readily handled, and have to be transmitted some distance, a transporter offers considerable facilities for dealing with them at high speeds, ranging up to 1,200 or 1,500 ft. per minute. Quayside transporters have generally to be furnished with hinged cantilever ends capable of being raised when out of action. The travelling motion is not necessarily rectilinear, curved tracks being employed where necessary.

Coaling Appliances.

Coaling Appliances.—Coal is shipped in a variety of ways, principally by means of the hoist and tip, and also largely by crane. The hoist raises the wagon to the requisite height and tips it at an angle of 45° or 50°, so that the contents pass into a shoot. The crane lifts the wagon bodily, slings it over the ship's hatchway and there empties it. At Cardiff, the wagon, instead of being lifted, discharges its contents into a hopper placed in a pit on the quay, and the hopper is lifted by the crane and lowered into the hold, where, being fitted with cone valves, it can be emptied within a few inches of the floor. This system is adopted on account of the great liability of the South Wales coal to breakage and comminution. The protection of coal from breakage is of such importance that in nearly all cases where coal is tipped from a considerable height an anti-breakage crane is provided to lower the first few loads to the bottom of the hold.

The belt conveyor is now very generally in use for the purpose of loading coal.

Coal wagons are commonly built to contain 10, 12, 15 or 20 tons of coal, and the gross weight ranges from 15 to 30 tons. To this must be added from 6 to 9 tons for the cradle or platform. Consequently the lifting capacity of a coaling appliance will range between 20 and 40 tons according to the class of wagon dealt with. In certain special cases, as at Goole Docks, provision is made to lift a gross load of 50 or 60 tons, of which 40 tons is coal. The coal is brought along the Aire and Calder Canal in tanks which are floated under the hoists.

The rate of coaling by an ordinary crane or hoist is from 300 to 450 tons and may even reach 600 tons per hour, but it is largely governed by the rate of trimming operations in the hold. The lifting and lowering of the wagons is done at speeds of between 100 and 180 ft. per minute and slewing at about one revolution per minute.

Grain Elevators.

Grain Elevators.—Grain is handled either by the bucket elevator and conveyor, or by the pneumatic elevator or suction apparatus. The latter has the advantage that the pipes, being flexible, can easily be taken to the furthermost parts of a ship's interior, and that no restrictions are imposed by variations in freeboard and depth of hold. The bucket elevator, though cheaper to construct and requiring less power, is hampered in working by the necessity of ploughing and trimming a preponderant portion of the grain—often as much as 80 per cent.—to the elevator leg. A special gang of competent men is required for the purpose, and this, of course, increases the cost of handling.

It is impracticable to do trimming with a ship's winch at a higher average rate than about 80 tons per hour. Beyond this limit the pneumatic machine becomes more effective, and pneumatic elevators can be constructed so as to give outputs of between two and three hundred tons per hour. On the other hand, conditions at ports are often such that so high a rate of discharge cannot be maintained, operations being governed by the rate of delivery. In practice, something like 100 tons per hour is found to be the maximum consistent with effective working.

It has recently been realised that quite small pneumatic plants can be installed in warehouses, mills, etc., with extremely satisfactory and economical results in working. They vary in capacity from 15 to 50 tons per hour, and are generally driven either by the mill shafting or by electric current where available. Convenience in handling, absence of dust and avoidance of trimming are strong points in their favour.

An objection urged against the suction apparatus is that the surface friction of the pipes tends to injure some of the more delicate classes of grain, such as malting barley, but this drawback, for all practical purposes, has been eliminated of late years by the easing of bends and the removal of all internal projections in the pipes. In any case it should not be overlooked that the

cutting and driving action of the buckets of a bucket elevator cannot be without some similar attritional effect.

Bucket elevators are either housed at the quayside or are mounted on barges, in both cases being fitted with derrick supports and suspension gear to enable them to be projected forward and set into the ship's hatchway. Elevator speeds generally range between 200 and 400 ft. per minute, but may be as high as 600 ft. per minute. Band or belt conveyors (page 829) run at 300 to 600 ft. per minute, but for light grain, such as oats, the speed should not exceed 500 ft. per minute.

Timber Appliances.

Timber is not successfully handled by conveyors, and is best dealt with by steam cranes of moderate capacity (30 cwts. to 2 tons) which, arranged to run at right angles to the quay front, convey their loads to an adjacent storage ground at speeds up to 600 ft. per minute. The lifting speed is about 160 ft. per minute, and the slewing speed about 1½ to 2 revolutions per minute.

GRAVING AND FLOATING DOCKS.

A modern graving dock is an excavated chamber, two sides, one end and the floor of which are lined, either naturally or artificially, with watertight material, generally concrete with brick or granite facings and dressings. The remaining end is the entrance and is provided with a pair of gates or a caisson. After the entry of a ship, the entrance is closed and the water is pumped from within the dock, though, in certain cases, where graving docks are entered direct from a river or open waterway where tidal conditions prevail, the operation may be assisted, and sometimes be altogether effected, by the fall of the tide.

The floating dock is an open-ended hollow structure of steel or iron, which, in order to receive a vessel, is sunk to the requisite depth, by allowing its air chambers to fill with water. When the vessel has been berthed, this water is pumped out, the dock rises bodily and so lifts the vessel above the water line.

It is not altogether easy to make an effective comparison of the respective merits of graving and floating docks, on account of the wide divergence in the conditions to which each structure is specially applicable, and, although there are strong and convinced advocates for the general superiority of one or other of the two systems, a brief summary of the most salient considerations will show that it is scarcely justifiable to decide conclusively in favour of either. Floating docks are almost exclusively adopted at Hamburg, Rotterdam and other Continental ports; in the United Kingdom there are, at the present time, about 18 graving docks to every floating dock.

A graving dock requires a good foundation at a reasonable depth, and a disposition of site which frequently involves the appropriation of a considerable area of valuable land.

A floating dock requires a sheltered position with an adequate depth of water, which, if not obtainable naturally, will have to be gained by dredging. The depth of water to be provided for a floating dock must be sufficient to cover the draught of the ship, the depth of the pontoons and the requisite clearances of a foot or two between keel and blocks and between pontoon and bed. Where there is tidal variation, the amount of this must also be added if the dock is to be continuously accessible. In this country the tidal range may be anything up to 35 ft., and between 15 and 20 ft. is very general. For a modern ship of average size drawing 28 to 30 ft. of water, the pontoons would have to be at least 20 ft. deep. This means that the total depth of the floating dock berth below high water level would be about 70 feet, and there are circumstances under which dredging to so great a depth would be not merely difficult, but almost impracticable.

In sites where the foundation is defective, the depth of excavation required for the floor of a graving dock may easily equal the depth of the floating dock pontoons, and the difficulties and expense in these cases are just as pronounced.

The utility of a graving dock is measured by the linear dimensions of the largest vessel which it can accommodate. The weight of the vessel is relatively a matter of little or no importance.

On the other hand, the utility of a floating dock is gauged by its maximum lifting capacity and is independent of the exact size of the vessel. Floating docks can, and often do, take vessels many feet in excess of their own length and, in the case of one-sided docks, in excess of their own width.

The size of the entrance of a graving dock is influenced by the cost of the gates, or caisson, to be used for closing it, and by the greatest width that can safely withstand the pressure of water. In floating docks these considerations do not enter into account.

Relative Costs of Graving and Floating Docks.*

Initial Cost.—The initial cost of graving docks, including pumping and general equipment, measured in terms of their serviceable dimensions (i.e. internal length by breadth of entrance by depth of water over blocks or sill), has varied from 1*s.* 3*d.* to 3*s.* 6*d.* per cubic foot, and, in a rough-and-ready way may fairly be taken for a modern concrete and granite dock of ordinary size, constructed in this country under normal conditions, on a pre-war basis, at 2*s.* per cubic foot.

The initial cost of floating docks measured in terms of their lifting power had generally a range of from 8*l.* to 12*l.* per ton, and may similarly be taken in the United Kingdom as averaging a pre-war price of 10*l.* per ton.

For a vessel 500 ft. long by 55 ft. beam with 28 ft. draught, a graving dock 520 ft. by 60 ft.

* See footnote page 1324.

by 30 ft. would cost under normal conditions from about 95,000*l.* to 100,000*l.* The vessel would have a displacement of, say, 13,000 tons, and, assuming it to be lightened to 10,000 tons, the cost of a floating dock to lift that weight would be about the same. To this would, of course, have to be added the cost of shore connections and dredging where required.

As regards time of construction, a graving dock of any importance could hardly be completed within less than eighteen months or even a couple of years, whereas a floating dock could be ready in half the time. The floating dock could, moreover, be constructed in any convenient locality and transported to its destination at some additional expense for towage and insurance. Many floating docks for the colonies are constructed in home shipyards.

Durability and Upkeep.—A stone or concrete graving dock is practically indestructible, and the only charge brought against it, in this respect, is that of outlasting its utility and becoming obsolete. This is, no doubt, true in regard to the class of vessel for which it is constructed; but, on the other hand, when the growth of shipping has left the graving dock too small for the larger vessels, it is still utilisable for those of smaller size. With the exception of the expenditure on the gates or caisson, which close the entrance, there is practically no maintenance outlay. It is all probably covered by an allowance of $\frac{1}{2}$ per cent. per annum.

The life of a floating dock, considered as an iron or steel structure constantly afloat, will vary with its situation, some waters being more destructive than others. It may be fairly reckoned at from 30 to 40 years, although there is no reason why, with reasonable care and attention, the longer period should not be exceeded. The annual cost of maintenance estimated from several existing examples lies between 1 and $1\frac{1}{2}$ per cent. of the capital outlay. Any cost of dredging required to keep the berth clear of mud deposits must be added to this allowance.

Working Cost.—The amount of pumping to be done in the case of a graving dock generally greatly exceeds that in the case of a floating dock—it may be as much as 3 or 4 times. In a floating dock only so much work is required to be done as is necessary to raise the vessel and the deck of the pontoon above water level. The graving dock chamber, on the other hand, has always to be completely dewatered, no matter what may be the size of the vessel occupying it, and the smaller the vessel the greater the quantity of water to be pumped.

Small graving docks on the banks of a tidal river, in cases where time is unimportant, may be emptied of water by natural means. These cases are exceptional.

But even in the larger docks the cost of pumping is small in comparison with the capital charges. For one hundred dockings a year they probably do not amount to more than 10 or 12 per cent. of the whole annual expenditure.

Again, the pumps being only intermittently employed, one pumping station may be made to serve two graving docks, whereas each floating dock requires its own installation. Possibly an extra hand or two is also needed to attend to the valves of the floating dock in order to maintain an even keel during pumping operations, but generally all the valves are worked from a central position.

As regards general adaptability, floating docks have the advantage, already pointed out, of mobility, and they may be transferred from one port to another, whenever the circumstances require, and even, in case of urgent necessity, one of them could be sent to meet a sinking ship. This step, however, could only be taken as an extreme measure; the docking of a vessel in the open sea would be attended by grave risks.

A floating dock can be trimmed to take a vessel having a list which conceivably might interfere with its passage through a graving dock entrance with vertical sides. This operation was frequently performed during the war.

The mobility of a floating dock is in fact not free from certain drawbacks. The dock may capsize, founder, or be wrecked.

All these varying considerations point to the conclusion that there is scope for both graving and floating docks, and that each may be employed to better advantage than the other under some particular set of local conditions.

SOME OF THE LARGEST FLOATING DOCKS IN THE WORLD.

Location.	Lifting Capacity.	Length.	Inside Width.	Depth of Water over Keel Blocks.	Owners.
	Tons.	Ft.	Ft.	Ft.	
Formerly at Kiel and	40,000	725	147	35	British Government
Wilhelmshaven, now	40,000	702	147	41	Ditto
in this country	40,000	656	147	35	Ditto
Hamburg	27,000	610	106	28	Vulcan Co.
Ditto	20,000	512	96	26	Rheierstieg Co.
Amsterdam	25,000	650	100	26	Amsterdam Droogdok Maatschappij
River Tyne	32,000	680	113	36	British Admiralty
Montreal	25,000	600	100	27½	Canadian Government
Rio de Janeiro	22,000	550½	100	30	Brazilian Government
Rotterdam	40,000	693	—	—	Wilton's Eng. & Slipway Co.
Sevastopol	39,000	656	136	30	Russian Government
Portsmouth	32,000	680	113	36	British Admiralty

Notes on Floating Docks.

(Contributed by Swan, Hunter, & Wigham Richardson, Ltd.)

Floating docks may be conveniently divided into two classes : (*a*) those which are not self-docking, or ' box docks,' and (*b*) those which can be self-docked.

(*a*) The *box dock* is double sided and of ⌊ ⌋ section. It has two side walls, and is the only form of modern floating dock which cannot be divided into more than one part for the purpose of self-docking. The two side walls and the bottom pontoon are one permanent structure. Box docks of great size have been built ; for instance, the British Admiralty floating dock of 33,000 tons lifting capacity built at the Wallsend Shipyard and stationed at the River Medway.

(*b*) By a ' self-docking ' type is meant a dock divided into sections any one of which can be lifted on the remainder of the dock for painting or repairs. The following are the various types of self-docking docks, the *Bolted-Sectional*, the *Sectional Pontoon* or *Rennie*, the *Off-Shore*, the *Havana*, the *Sectional Box*, the *Multi-Sectional*, and the *Depositing*.

The *Bolted Sectional Dock* is the latest improvement, and combines the advantages of the great longitudinal strength of the '*Box*' type with facility for self-docking. It is probably the best

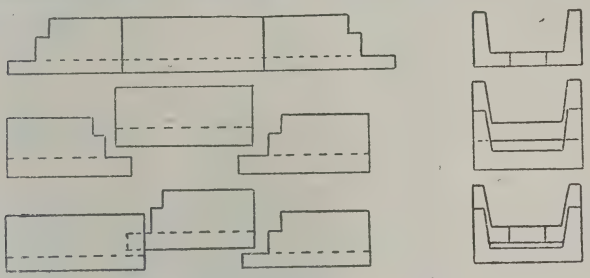


FIG. 22.—Bolted Sectional Floating Dock.

type of dock for large sizes. This type is usually built in three sections of approximately equal lengths, the two end sections being stepped to form landings when carrying out a self-docking operation.

Fig. 22 shows, firstly, the whole dock assembled ; secondly, the centre section lifted by the two end ones ; and thirdly, one of the end sections lifted by the centre and other end section. Examples of the former type of dock may be seen at Port of Spain (Island of Trinidad), Rotterdam, at Callao in Peru, and at Sténia in the Bosphorus. (See fig. 27, page 1343.)

The Sectional Pontoon Dock (also called ' the Rennie Dock,' after its inventor), consists of a number of separate pontoons lying transversely to the length of the dock. Upon these pontoons and bolted to them rest two continuous side walls. The length of each pontoon, i.e. on the keel line, is such that when detached from the rest of the dock it can be passed end-wise between

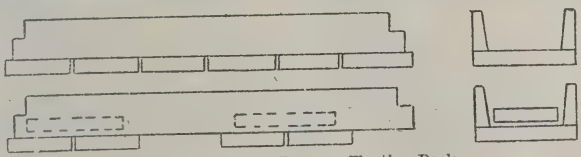


FIG. 23.—Sectional Pontoon Floating Dock.

the walls of the latter and so lifted in the same manner as a ship. Each pontoon can be successively dealt with in the same manner. Fig. 23 shows first the whole dock assembled and then two of the pontoons lifted by the remainder of the dock. This *Sectional Pontoon* type is very suitable for vessels of moderate dimensions, and owing to its form can easily be constructed in places where docks of other types could not be completed. The separate pontoons not being very large in size can be easily erected and launched, after which the walls can be built upon them. Examples of this type of dock were built at Wallsend-on-Tyne for the Government of Southern Nigeria, and for service at Saratov on the River Volga.

The Off-Shore Dock is an ingenious design patented by Messrs. Clark & Standfield in 1884; a well-known example of it was built at Wallsend-on-Tyne for a ship-repairing establishment at Sunderland, and there is another good example of it also constructed by Messrs. Swan, Hunter, & Wigham Richardson, Ltd., at Penarth, near Cardiff. The off-shore dock (fig. 24) of

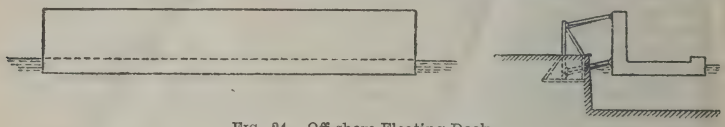


FIG. 24.—Off-shore Floating Dock.

which the end elevation is 'L' shaped, is very easily handled. The side wall is connected to the shore by booms or girders hinged at each end. When the dock is sunk to receive a vessel the latter can enter the dock from either end or may be warped in sideways. It is then rapidly centred by telescopic side shores and supported underneath by mechanical bilge-shores. This type of dock is divided into two sections, and as it has only one wall one-half of the dock can be lifted, so to speak, in the lap of the other.

The Havana type consisted of two continuous side walls between which were three separate pontoons attached to the walls by bolts passing through projecting lugs (fig. 25). This type of dock has been superseded by later types.




FIG. 25.—Havana Floating Dock.

The *Sectional Box Dock* combines the advantage of ease and simplicity in self-docking possessed by the Sectional Pontoon dock, with the strength of the solid or *Box* dock. The dock is divided, like the ordinary sectional dock, into sections of such a length that any one section can be turned round 90 degrees and docked on the rest of the dock. In the Sectional Box dock, however, the sections are all joined together by a strong, rigid joint of a similar type to that used in the bolted sectional docks running round the whole profile of the dock.

The *Multi-Sectional Dock* is a modification of the Sectional Dock type. In small docks it is not necessary to connect the bottom plating right across the width of the pontoon. The joints at the sections only occur, therefore, round the profile of the side wall, the spaces between the pontoons being decked over to form a continuous platform.

The *Depositing Dock* was designed as early as 1877, by Messrs. Clark & Standfield. In section it is 'L' shaped. The single side wall is continuous, but the bottom pontoon is made up of a series of 'fingers' with spaces between them (fig. 26). The necessary stability is given to the dock

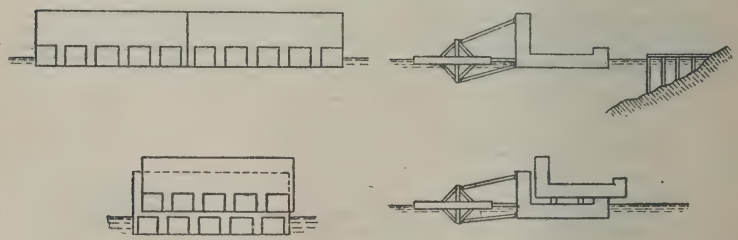


FIG. 26.—Depositing Floating Dock.

by means of parallel booms hinged at each end and connected to a floating outrigger. This type of dock can not only dock vessels, but owing to the peculiar construction of the bottom pontoon is enabled to deposit them on a gridiron formed by groups of piles. There are spaces between each set of piles of such a width as to admit the 'fingers' of the dock. The dock carrying a ship is pushed forward so that the 'fingers' are engaged between the piles and then on sinking the

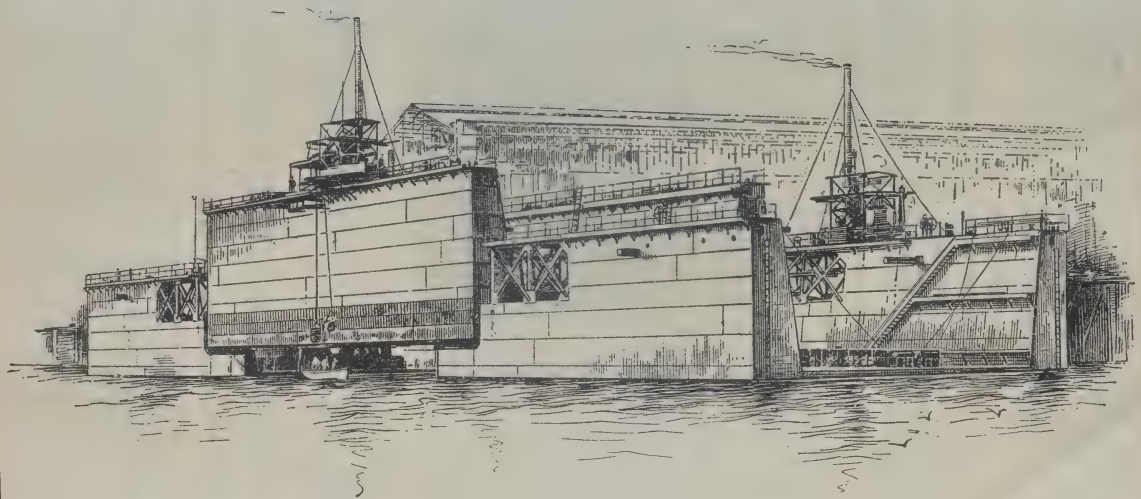


Fig. 27.—Bolted-Sectional Dock.

(Built by *Swan, Hunter, & Wigham Richardson, Ltd.*, Wallsend-on-Tyne, England.)

Self-docking operation; centre section lifted by the two end-sections.

dock the ship is left upon the gridiron. The wall of the dock is divided into two equal lengths either of which can be docked by the other as in the case of the off-shore type.

Depositing docks at Kobe and Barcelona have been used for the purpose of lifting large hollow ferro-concrete blocks for harbour construction. These were built upon the depositing grids, lifted off by the dock, and finally floated off so that they could be towed to their final position and sunk there. In the case of the Kobe dock, some of these monoliths were 120 ft. long by 41 ft. high, and weighed as much as 2,200 tons. In this way the difficulty of launching such large masses was avoided and much expense saved.

DREDGING.

Modern dredging appliances may be summarised under two classes, each with several subdivisions.

Class I.—Digging dredgers, comprising (*a*) the ladder, or elevator, dredger, with a continuous band of buckets; (*b*) the dipper dredger, with a single bucket at the extremity of a long arm, or lever; and (*c*) the grab or grapple dredger, with a drop bucket suspended at the end of a chain.

Class II.—Suction or hydraulic dredgers, comprising (*a*) the sand pump; and (*b*) the suction cutter dredger.

Rock cutters are not dredgers, but constitute an auxiliary class which will be treated separately.

Ladder Dredgers.

Ladder Dredgers, or Elevator Dredgers (sometimes in Europe called bucket dredgers), are characterised by high power and great serviceability under nearly any conditions. They are adaptable to the removal of every variety of material except the harder kinds of rock. The principle upon which they are constructed is that of an endless chain of buckets travelling in an elliptical path about two pivots, or tumblers, set one at each extremity of an inclined plane. The buckets excavate material at the lower tumbler and discharge it into a shoot while passing over the upper tumbler.

Single Ladder v. *Double Ladder Dredgers.*—Dredgers of the ladder type have either one or two ladders. In single ladder dredgers, the ladder is situated along the centre line of the vessel; in the other case, the ladders are placed at each side.

Single ladder dredgers are most in favour for ordinary operations. In machines of the same power, they have the advantage of few working parts and of less working friction. As seagoing craft, they possess a more convenient outline, and their lesser width enables them to pass through narrower waterways and lock chambers. But they cannot work so closely to a quay wall as side ladder dredgers, and, if any breakdown occurs in the chain of buckets, the whole dredger is thrown out of action, whereas, with the double ladder dredger, this is not necessarily the case.

Capacity of Ladder Dredgers.—The capacity of the buckets of ladder dredgers ranges from 5 to 54 cubic ft., but, generally speaking, about 35 cubic ft. is looked upon as the maximum size consistent with convenient utility. A moderately sized dredger, with buckets of 20 to 25 cubic ft. capacity, travelling at speeds from 15 to 20 ft. per minute, and working in water of depths up to 50 ft., may be expected to raise from 400 to 500 tons of stiff clay per hour; in suitable material, such as ballast and gravel, the rate obtained may be as high as 1,000 tons per hour. The most powerful dredgers can double this performance.

Examples of Ladder Dredgers.—The following particulars relate to the 'Corozal,' built in 1911 for the U.S. Government, for work on the Panama Canal:—

Dimensions.	Ft.
Length on load water line	239
„ between perpendiculars	259
„ over all	268¾
Breadth moulded	45
Depth moulded	19½
Draught fully loaded	15½

Propelling speed: 10 knots.

Dredging capacity: 1,200 cubic yds. of mud and sand per hour.

Buckets: Two sets; one of 54 cubic ft. capacity for soft material and one of 35 cubic ft. for stiff clay.

Maximum dredging depth: 50 ft.

The vessel is a hopper dredger, i.e. she discharges into herself instead of into an independent hopper ranged alongside.

Another ladder dredger, the Walter Glynn, of the Mersey Docks and Harbour Board, capable of dredging over 400 tons of stiff clay per hour, has the following dimensions:—

Length, 196 ft.; breadth, 35½ ft.; depth, 13 ft. The speed is 10 knots. The propelling engines are two sets of triple expansion, surface condensing engines with cylinders 14 ins., 22½ ins., and 36 ins. diameter, by 24 ins. stroke, driving twin screws; the indicated horse-power is 1,200. The ladder shaft is driven by a separate engine of 300 i.h.p., triple expansion, with cylinders 12 ins., 18¼ ins., and 30 ins. diameter, by 24 ins. stroke.

Utility of Ladder Dredgers.—Although the serviceability of ladder dredgers does not extend to the removal of hard rock, yet they are capable of scraping away the surface of the softer varieties of sandstone and chalk, and, for this purpose, the bucket edges are sometimes fitted with spikes or tines. A ladder dredger works admirably in marl and stiff clay, and no difficulty even is found

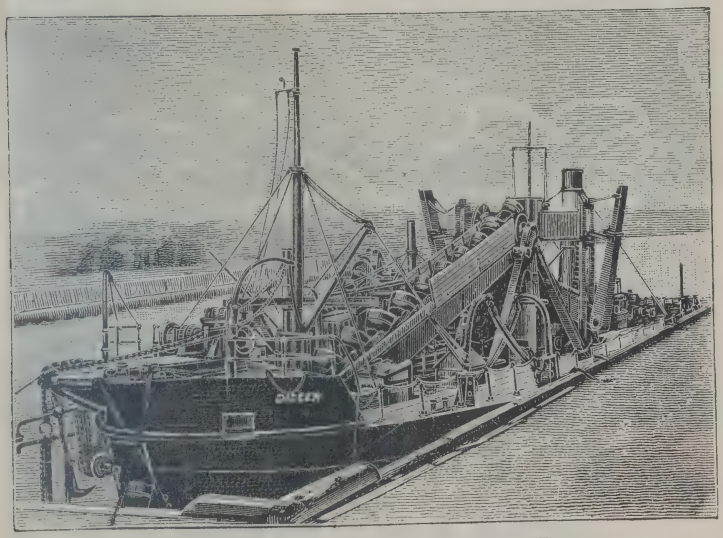
FLOWER & EVERETT LTD.

Contractors for

DREDGING

All kinds of Material from Docks, Harbours and Canals

WITH



SIDE- AND CENTRE-LADDER

STEAM BUCKET DREDGERS

(To a depth of 40 feet of water)

AND STEAM GRAB BARGES.

7 GROSVENOR ROAD, WESTMINSTER, S.W. 1

Shoot:—RAINHAM, ESSEX.

London Shoots and Wharves:—

SAND AND BALLAST LANDED AND SUPPLIED AT WESTMINSTER JETTY;

7 GROSVENOR ROAD, S.W. 1.

Telephones:—5272 Victoria (Head Office); 931 Greenwich; 8 Rainham.

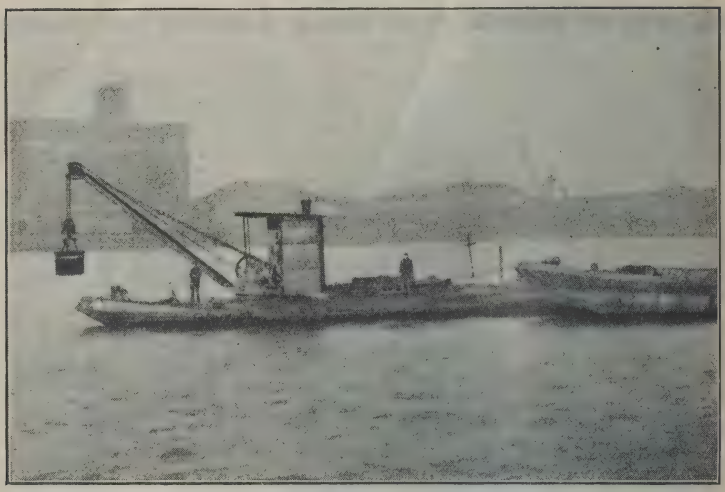
[SEE NEXT PAGE.]

F. 1344

FLOWER & EVERETT LTD.

DREDGING

WITH



STEAM GRAB

AND

STEAM BUCKET DREDGERS.

Craft also placed alongside to receive Mud, Excavation Rubbish, and all descriptions of Refuse.

BARGES LOADED AND UNLOADED AT THEIR LANDING WHARF, WESTMINSTER, and SHOOT and WHARF AT RAINHAM, ESSEX. GOODS AND MATERIAL STORED.

LIGHTERAGE AND TOWAGE.

Barges Built, Repaired, and for Hire at

Point Wharf, Blackwall Dry Dock, East Greenwich.

TELEPHONE, 931 GREENWICH.

All communications receive prompt attention addressed to

7 GROSVENOR ROAD, WESTMINSTER, S.W. 1

TELEPHONE 5272 VICTORIA.

F. 1345

in dealing with heavy boulders which are frequently encountered in clays of glacial formation. The buckets of a first class dredger will readily lift stones weighing from 30 cwts. to 2 or even 3 tons apiece, bringing them up to the surface and within the range of a deck crane. As illustrative of the character of the material dealt with in many cases, the following particulars may be cited, relating to twelve months' work on the river Tees. A quantity of 417,963 cubic yds. was dredged at a cost of 22,432*l.*, equivalent to about 1*s.* 6¾*d.* per cubic yd. About two-thirds of this was hard, boulder clay and there were removed therefrom 1,651 stones, varying in weight from 5 cwts. to 4 tons apiece, of which 1,523 were raised by the dredgers unaided by divers; and, in addition, there were 19 tree trunks, ranging in length from 10 ft. to 20 ft., 16 tree roots and stumps, and 107 miscellaneous obstructions.

Dipper Dredgers.

Dipper Dredgers.—The dipper dredger is almost purely an American type, and is not yet found in European waters. It is mainly employed on the great lakes of the Northern Continent of America, and on river beds and channels when the working depth does not generally exceed 20 ft. or so, and where space for manœuvring is somewhat restricted. This is accountable for by the fact that the dredger is not manipulated by chain moorings, as in the case of the ladder dredger, but is maintained in position by vertical spuds, or posts, which pass down through the vessel to the bottom of the channel, and are raised and lowered as occasion may require. The dipper arm itself assists in manœuvring, being allowed to remain on the bottom while the position of the spuds is changed.

Capacity of Dipper Dredgers.—The single bucket, or scoop, at the end of the lever arm has a capacity ranging from 1 to 12 or 15 cubic yds. The bucket is operated in a curved upward sweep by suitable gearing, on the same principle as a steam navvy or land excavator. The speed of a good dipper dredger in sheltered inland waters is from 30 to 40 seconds per dipper load, and on the sea coast from 40 to 50 seconds. For hard material, the bucket, as in the case of the ladder dredger, is fitted with teeth.

Examples of Dipper Dredgers.—The following particulars relate to a very large dredger, the 'Onondaga,' which worked in New York Harbour:—

Length of hull	140 ft.
Breadth ,,	50 ft.
Depth ,,	15 ft.
Capacity of dipper bucket	12 cubic yds.
Dredging depth	50 ft.

Size of dipper arm: 80 ft. long by 36 ins. square.
Spuds: Four timbers, 80 ft. long by 5 ft. square.
The dipper arm and spuds are both of Oregon fir.
Engines: Double cylinder, condensing.
Cylinders: 20·5 ins. diameter by 24 ins. stroke.

Another instance of a dipper dredger at Montreal Harbour:—

Length of hull	90 ft.
Width ,,	36 ft.
Depth ,,	10 ft.
Capacity of dipper bucket	7 cubic yds.
Dredging depth	40 ft.
Diameter of hoisting rope	2½ ins.
Maximum pull on dipper	120,000 lbs.

Forward spuds: Single timbers (Douglas fir) 60 ft. by 42 ins. square.
Engines: Double cylinder (16 ins. by 18 ins. stroke) non-condensing.

Two dipper dredgers, the 'Gamboa' and the 'Paraiso,' each with buckets of 15 cub. yds. capacity, were built by the Bucyrus Co. in 1914 for work on the Panama Canal.

These dredgers have a displacement of about 1,500 tons, and the hulls, which are of steel, have an over-all length of 136 ft., a width of 44 ft., and a depth at bow of 15½ ft. and at stern of 13½ ft. Each dredger has two dipper buckets, the larger, of 15 cub. yds. capacity, for soft material, and the smaller, of 10 cub. yds. capacity, for harder material. The buckets, of ¾ in. plate, have lips of manganese steel, 2 ins. thick, which are 50 ins. deep at the centre, reduced to 9½ ins. at the back edges. They have no teeth. The handles are of Oregon fir, 72 ft. long.

The rate of working is said to average 6,000 cub. yds. per day each, in two 8-hour shifts.

A dipper dredger at work in Bombay Harbour has a bucket capacity of 6 cub. yds. dredges to a depth of 40 ft., and is capable of lifting boulders of over 12 tons weight.

Comparison of Dipper Dredger with Ladder Dredger.—Compared with the ladder dredger the dipper dredger is not quite so serviceable a machine for all-round purposes, and, for the more intractable kinds of material, it has been demonstrated that the former is more efficient than the latter. Thus, in excavating a channel in indurated clay in the St. Lawrence River, dipper dredgers of the most powerful design failed and were replaced by a ladder dredger which completed the work in a satisfactory manner.

The Grab or Grapple Dredger.

The Grab or Grapple Dredger has a bucket which consists of two or more curved plates, or jaws capable of opening and closing under the action of suitable gear. The grab is suspended from the jib head of a crane which does the requisite raising and lowering. The working is

actually done very largely under the influence of gravity, the bucket being allowed to fall with open jaws under its own weight and to bury itself in the ground, where the jaws are closed and the bucket with its contents is then withdrawn. The principle of the grab is simple, but there are many complex adaptations in practice. Thus, the appliance may be worked by one or by two chains, each of which arrangements admits of several variations, so that there are quite a number of different machines on the market, each possessing special characteristics and advantages.

Comparison of Single and Double Chain Grabs.—The drawback of a double-chain grab is that it cannot be fitted to an ordinary crane; but, on the other hand, it has less intricate and less delicate mechanism, and, consequently, does not run the same risk of getting out of order. With two chains, moreover, there is less likelihood of the bucket being lost through fracture of the hauling gear. There is the further consideration that in many, if not most, single-chain grabs, the full height of lift has to be made before the grab can be opened in order to discharge its contents. Double-chain grabs can discharge at any stage of the lift. This advantage is shared by a few of the single-chain systems. Its importance lies in the fact that the grab might close upon some immovable object below water, and therefore necessitate the sending down of a diver, unless the jaws can be opened mechanically in that position.

Utility of Grab Dredgers.—The grab is not a suitable appliance for extensive operations. It is best adapted to dealing with material in confined and awkward situations inaccessible to other types of dredger. It is thus excellently suited for the removal of mud and silt in the vicinity of dock entrances and passages. Silt is generally of so impalpable a character that any disturbance of the water in which it lies causes it to rise in suspension, and renders it difficult of removal. The grab proves a most effective appliance for dealing with this soft material, entrapping it with the least admixture of water and the least alteration in consistency. Moreover, the grab is an extremely convenient implement for picking up miscellaneous articles which find their way to the bottom of docks; logs of hard wood, rails, coal, bales of hay and wool, barrels of nails and cement, hoop iron, etc.

Capacity of Grab Dredgers.—Grabs are constructed of a capacity up to 10 cubic yards, but for general purposes the most useful size lies between 70 and 120 cubic ft. They work very successfully in water up to 50 or 60 ft. in depth, at a speed of about one dip per minute, raising in this way from 150 to 250 cubic yds. per hour.

Examples of Grab Dredgers.—Several excellent examples of this class of dredger are constantly at work in the Liverpool docks. The grabs are mounted on barges of 1,100 to 1,400 tons hopper capacity. There are four 5-ton or 7-ton cranes of 16 ft. and 19 ft. radius respectively on each barge, each actuating a grab of 70 or 115 cubic ft. capacity. The principal dimensions of the vessels are:—

1,100 ton barges . . . . 200 ft. long by 35 ft. beam by 15½ ft. deep.
1,400 ton barges . . . . 225 ft. long by 38½ ft. beam by 16 ft. deep.

The speed of the barges is about 11 knots.

Bag and Spoon Dredging.—This notice of dredging appliances would be incomplete without some reference to a very rudimentary form of apparatus still practised in restricted areas and where operations are on a small scale. This apparatus consists of a strong leather bag of a capacity of from one-half to one cubic yard attached to a steel rim at the end of a stout spar, or pole, from 20 ft. to 35 ft. long. The bag is kept at the bottom by means of the pole, while it is drawn along the surface by a line attached to the rim. The operation is performed by manual labour, and about half a dozen men are required to man a barge for the purpose. The quantity raised and loaded into the barge will range from 60 to 100 cubic yds. per day. The appliance is really only suitable for dealing with mud in timber ponds and in canals.

Suction or Hydraulic Dredgers.

Suction or Hydraulic Dredgers.—Turning now to the second class of dredging plant, the suction or hydraulic type may be described as consisting essentially of a continuous pipe, or tube, through which material is drawn up by suction from the bottom and discharged either into a hopper or through a long pipe line to a depositing site some distance away. The first application of the principle was to the removal of sand—hence the name Sand Pump—but it has since had a much wider application. As regards sand, the method proved extremely effective from the first, the light granular nature of the substance lending itself admirably to easy incorporation with the body of water flowing into the pump intake. Such difficulty as has been experienced has been merely in regard to securing the deposition of the sand within the hopper, the tendency being for a large proportion to flow out over the sides with the escaping water. Considerable reduction in this unremunerative pumping has been made by giving the effluent stream as long a distance to travel as possible and providing the channel with adjustable coamings.

Sand Pump Dredgers.

Sand Pump Dredgers.—For the purposes of suction dredgers, centrifugal pumps are universally employed, and of these, those with a single inlet have an advantage over pumps with a double inlet, in that there is less concussion and interference with the flow. A double inlet pump, on the other hand, disposes of any question of balancing, which has to be met in a single inlet pump by thrust bearings. The most efficient peripheral speed is stated by the Mississippi River Commission to be about 50 ft. per second. The form of the nozzle of the intake pipe materially influences the percentage of sand raised, which may be anything up to 50.

Examples of Sand Pump Dredgers.—The largest sand pump dredger in existence at the present day is the 'Leviathan' of the Mersey Docks and Harbour Board. Her dimensions are 465 ft. 9 ins. long between perpendiculars, by 69 ft. wide by 30 ft. 7 ins. deep moulded. She is fitted with four suction pumps, each of 42 ins. diameter, and is capable of filling herself with 10,000 tons of clean sand in 50 minutes from a maximum depth of 70 ft. The speed of the vessel is 10 knots. On arrival at the depositing ground, she discharges herself in 10 minutes through large cylinders extending from valve openings, 5 ft. 6 ins. diameter, in the bottom of each hopper to deck level. These valves have a lift of 4 ft. and are operated by hydraulic rams. At work on the bar and entrance channel of the Mersey, the Leviathan pumps up over 12 million tons of sand per annum.

The following particulars relate to the 'Coronation,' a vessel in the same service :—

Length between perpendiculars	332 ft.
Breadth moulded	52·7 ft.
Mean draught, loaded	17·2 ft.
Maximum dredging depth	65 ft.
Speed	10 knots.
Loaded capacity	3,500 tons.
Pumping capacity	4,500 tons per hour.
Suction pipes (two)	36 ins. diameter, 81 ft. long.
Propelling engines	2,000 i.h.p.
Pumping engines	800 i.h.p.
Cylinders of propelling engines	19 ins., 30 ins., and 49 ins. diameter by 30 ins. stroke.
Cylinders of pumping engines	12 ins., 20 ins., and 32 ins. diameter by 18 ins. stroke.

Suction Cutter Dredgers.

Suction Cutter Dredgers.—The success attending the introduction of the sand pump led to an investigation of the possibility of dealing with less tractable material by the same means. Water jets for loosening and disintegrating hard and compact strata were added, and some satisfactory results being obtained, the further step of introducing rotary cutters was taken. There was found to be little difficulty in treating in this way earth of a marly or brittle nature, easily resolvable into disconnected particles. Trouble, however, was experienced in dealing with clay and tenacious material, which clogged the cutters and choked the intake. Eventually this was overcome by the evolution of cutter blades of a suitable form and pitch.

Capacity of Suction Cutter Dredgers.—Suction cutter dredgers are now constructed capable of removing over 1,000 cubic yds. of stiff clay per hour. The 'Jinga,' one of two similar dredgers at work in the port of Bombay, has removed 2,700 cubic yds. of blue clay per hour during 80 actual working hours. In this operation a considerable quantity of heavy quarried stone was encountered, many of the pieces weighing over 400 lbs. each, and these were discharged without any trouble whatever, together with the mud and clay, through a tube or pipe line 4,500 ft. long, 2,000 ft. of which was afloat. This dredger worked to a depth of 30 ft. and is self propelling, with a speed of 8 knots.

Use of the Pipe Line.—The use of the pipe line for discharging purposes is becoming very general, especially in cases where it is practicable to use the dredged material for filling and embankment purposes. These lines are often of great length. A dredger working at Oakland, California, U.S.A., has successfully delivered material through 6,170 lineal ft. of 20-in. diameter pipe. Diameters reach as high as 42 ins. when altogether afloat, and 30 ins. to 36 ins. when partly ashore. In calm water thin sheet tubing will suffice, but in exposed situations long lengths of solidly built sections must be provided. The carrying capacity of a 36-in. pipe with 80 per cent. of solid matter conveyed at a rate of 10 ft. per second would be 7,400 cubic yds. per hour. Sand causes considerable wear and abrasion of the piping and requires a high percentage of water with greater velocity to keep it in suspension. Clay, from its unctuous nature, exercises far less frictional resistance and is sometimes rendered sufficiently fluid by 10 per cent. of water. A velocity of 7 ft. per second for clay and mud, and 10 ft. per second for sand, has been found to give good results.

Compound Dredgers.

Compound Dredgers.—A compound type of dredger has recently been introduced fitted with both the suction, or suction cutter, apparatus and a bucket ladder. This enables the dredger to be applied to a wide variety of material in the most effective manner. The bucket ladder is generally placed in the centre well and the suction apparatus at the sides of the vessel, but in some cases the suction pipe is also centrally situated.

Example of Compound Dredgers.—The dredger 'La Loire,' built for service on the river of that name, is a twin screw combined bucket and suction dredger with cutter gear and pipe line shore delivery. Her dimensions are 173 ft. 10 ins. in length by 32 ft. beam by 14 ft. deep. She is fitted with two centrifugal suction and force pumps, capable of raising material from a depth of 25 ft., and of driving it ashore through floating delivery pipes about 30 ft. long and 24 ins. diameter. The suction pipe is 26 ins. diameter and works, together with the bucket ladder, in a centre well.

The cutter has a diameter of 6 ft. 10 ins. and is driven at 12 revolutions per minute, the engine running at 140 revolutions.

The bucket ladder enables the dredger to work to a depth of 52 ft. 6 ins. The buckets have a capacity of 27½ cubic ft. They are driven at a speed of 16 buckets per minute with the engine running at 170 revolutions.

Both suction and bucket apparatus enable the dredger to excavate her own flotation in advance.

The machinery consists of two complete sets of direct acting, triple expansion, surface condensing, reversible propelling engines, each arranged to drive a centrifugal pump as well as the bucket dredging gear. Each set of engines indicates about 450 h.p. when running at 170 revolutions per minute. The cylinders are 13 ins., 21 ins., and 33½ ins. by 18 ins. stroke.

The cutter gear is driven by means of belting from a separate engine of 200 h.p., which also serves for a centrifugal pump delivering spoil from the buckets into the upper part of the shoot.

For the purpose of working the bucket dredging apparatus the suction pipes and cutter gear are dismounted, but in deepening the bed of the river Loire the latter proved so effective that over 13 million cubic yds. of alluvial material have been removed without recourse to the bucket apparatus.

Hopper Service.

When dredged material has to be removed some distance to a depositing ground it is excavated by the dredger into its own hopper, or into hopper barges ranged alongside.

A combined hopper dredger costs less in initial expenditure and subsequent upkeep than a separate dredger and hopper with corresponding or even greater capacity, and it occupies less valuable space in a crowded waterway.

On the other hand, it involves the discontinuity of dredging operations and the frequent getting out and taking in of moorings. This latter consideration is of importance more to dredgers of the bucket ladder type.

On the whole, it is found expedient on undertakings of considerable magnitude to maintain a fleet of hopper barges in attendance on bucket ladder dredgers. Suction dredgers, when they do not discharge through a pipe line, more commonly are compound vessels with self-contained hoppers.

Capacity of Hopper Barges.—Barges are constructed capable of receiving from 500 to 1,000 cubic yds. of dredged material (say 650 to 1,350 tons) and of making journeys to sea and back at speeds of 10 to 11 knots.

Example of Hopper Barge.—A typical barge of 800 tons capacity has a length of about 190 ft., breadth 30 ft. and depth 14 ft. The engines are triple expansion, surface condensing, with cylinders 16½ ins., 26 ins. and 43 ins. diameter by 27 ins. stroke, which at 110 revolutions per minute develop 820 i.h.p. and give a speed of 10 knots, steam being supplied at 180 lbs. per sq. in. from marine multitubular boilers.

Cost of Dredging Plant.*

The following figures may be useful as approximate indications of the cost of dredging plant which must, of course, vary from time to time with fluctuations in the price of material and the engagements of the shipbuilding yards.

Ladder Dredgers.—A 5 cubic ft. bucket, single ladder dredger, capable of raising 150 tons of soft material per hour from a depth of 40 ft., has cost in round figures 7,000*l.*

A 15 cubic ft. bucket, single ladder dredger, capable of raising 400 cubic yds. of sand, gravel and clay per hour from a depth of 45 ft., has cost about 27,000*l.* and was constructed in six months.

A one cubic yd. bucket, single ladder dredger, capable of raising 750 cubic yds. of ballast per hour from a depth of 55 ft., has cost about 43,000*l.*, and was built in nine months.

Dipper Dredgers.—A one to two yard dipper dredger costs from $8,000 to $12,000; say 1,600*l.* to 2,400*l.* The hull is of timber, about 60 ft. long by 25 ft. wide, with a draught of 3 ft.

A 3½ to 4 cubic yd. machine dredging to a depth of 30 to 35 ft., would cost about $80,000 to $90,000, say 16,000*l.* to 18,000*l.*

A 10 cubic yd. machine dredging to a depth of 35 ft. would cost about $130,000 to $140,000, say 26,000*l.* to 28,000*l.*

Grab Dredgers.—A twin-screw hopper dredger, with a hopper capacity of 1,200 tons, and fitted with 5 hydraulic grab cranes each of 5 tons bucket capacity, working to a depth of 47 ft., has cost about 35,000*l.*

Suction Dredgers.—A suction hopper dredger with a hopper capacity of 70,000 cubic ft., capable of raising 3,500 to 4,000 tons of sand per hour from a depth of 70 ft., has cost about 75,000*l.* A 2,000 ton suction hopper dredger would cost about 50,000*l.*

Compound Dredgers.—A sea-going hopper dredger, fitted with both ladder buckets (18 cubic ft.) and suction pumps, and capable of dredging by the former means 400 cubic yds. per hour, and by the latter means 650 cubic yds. per hour, from a depth of 50 ft., has cost about 53,000*l.*

Hopper Barges.—A steam hopper barge of 800 cubic yds. capacity, with a speed of 11 knots, costs from 18,000*l.* to 20,000*l.*

Cost of Dredging Operations.*

Conditions and circumstances vary with each locality, so that it is difficult to give reliable figures for general guidance. Sand pump dredging can be done for as little as 1*d.* per cubic yd.

* See footnote page 1324.

or even less, and grab dredging from 2*d.* to 6*d.*, but a very great deal depends on the distance the spoil has to be carried. In bucket dredging, either by ladder or dipper, the range of cost is considerable, depending in addition, as it does, on the kind of material dealt with. The following are a few collected records from various sources :—

Port Natal.—The following particulars (extracted from a paper by Mr. William Brown on 'Recent Progress in Dredging Machinery'; *vide* Min. Proc. Inst. C.E., vol. cciii.) relate to the performances of the four principal dredgers at Port Natal, Durban, within a period of several years ended December 31, 1914. The costs include all charges for working, maintenance, insurance, depreciation and interest on capital. The price of coal consumed by the dredgers was low, and seldom exceeded 8*s.* per ton. The three large vessels (Labrus, Cetus, and Nautilus) each employed fourteen Europeans, eighteen Kaffirs, and eleven Indians, or a total complement of forty-three hands, at an annual cost of about 3,850*l.* per vessel. 'With the possible exception of Liverpool, no port hampered by sandbars has made such progress in comparatively recent years as Durban.'

PARTICULARS AND WORKING COST OF SEA-GOING PUMP DREDGING PLANT AT PORT NATAL.

Name of Dredger.	Year Built.	Tonnage.		Hoppr. Capacity (Tons of Sand).	Pumping Speed (Tons of Sand per hour).		Average Spoil handled per ann. (Tons).	Average number of days worked per ann.	Cost per ton handled. (*d.*)	Remarks.
		Net.	Gross.		Contract.	Record.				
Labrus .	1911	1,215	2,097	2,000	2,000	2,000	719,500	244	6·806	Worked exclusively in stiff clay, being fitted with patent clay cutter. All spoil dredged repumped ashore from ship's hoppers for land reclamation.
Cetus .	1905	1,327	2,414	3,000	3,000	7,430	2,151,000	232	2·227	Largely employed for bar work. Spoil mostly coarse loose sand and fine stone, all dumped at sea, two miles from harbour entrance.
Nautilus	1903	1,050	2,034	2,500	3,000	7,894	1,466,000	247	3·109	Employed chiefly on maintenance and deepening of harbour bed and channels. Material mostly fine sand, with occasional admixture of loose clay and mud, all deposited at sea two miles from harbour entrance.
Snipe .	1903	180	265	200	300	340	358,000	256	3·201	Used for clearing up wharf and quay berthage, cutting and maintaining boat channels, occasional reclamation, etc. Spoil deposited within harbour.

Panama Canal.—During 1910 the sea-going suction dredgers 'Culebra' and 'Caribbean' removed 6,083,902 cubic yds. at a cost of 3·7*d.* per cubic yd. The ladder dredger 'Marmot' removed 1,372,665 cubic yds. at 7·82*d.*, and dredger No. 5 removed 560,622 cubic yds. at 13·65*d.* per cubic yd. The small 5 cubic yd. dipper dredgers 'Cardenas' and 'Mindi' removed 1,013,485 cubic yds. at 27·89*d.* per cubic yd. and the 20-in. pipe-line suction dredgers, Nos. 82 and 85,

dealt with 2,472,822 cubic yds. at a cost of 14*d.* per cubic yd. During a period of twelve months ended May, 1916, the dipper dredgers 'Gamboa' and 'Paraiso' each removed over 2,900,000 cubic yds., at costs varying from 2·25*d.* to 5·45*d.* per cubic yd., including operation and maintenance.

Mississippi River.—In 1907 three pipe-line suction-cutter dredgers dredged 1,279,000 cubic yds. at 4·12*d.* per cubic yd. including the cost of idle time. In 1908 the same dredgers accounted for 989,000 cubic yds. at 5½*d.* per cubic yd.

New York Harbour.—In 1909, the sea-going suction dredgers 'Manhattan,' 'Atlantic,' 'Raritan' and 'Navesink,' removed 10,786,638 cubic yds. at a total cost of $424,734 (say 85,000*l.*) or at the rate of 1·97*d.* per cubic yd. made up as follows: Dredging, 1·785*d.*; surveys and examinations, ·125*d.*; contingencies and supervision, ·06*d.* The 'Delaware' removed 1,675,562 cubic yds. at a total cost of 2·39*d.* per cubic yd.

River Thames.—The contract cost of removing hard material (ballast and clay) by ladder dredger from the Thames below London Bridge has ranged at various times before the war from 1*s.* 4*d.* to 2*s.* 6*d.* per cubic yd. largely dependent on the distance the material had to be conveyed. Some work has been carried out departmentally, including all establishment and capital charges, at a figure as low as 7½d. per cubic yd. This was for a quantity of about one million cubic yards, and the distance conveyed was about 30 miles.

River Mersey.—At the bar and in the entrance channels of the Mersey nearly 15 million cubic yds. of sand were removed annually at a pre-war cost of ·6*d.* per cubic yd. exclusive of interest and depreciation on the plant.

SUBAQUEOUS ROCK REMOVAL.

The removal of hard rock under water is generally effected by one or other of two means: (*a*) by drilling and blasting; and (*b*) by the use of the chisel or rock breaker. In both cases a dredger is subsequently required for the purpose of clearing the débris from the site.

Drilling and Blasting.

Drilling and Blasting.—The first is the older method and remains still a most effective means of dealing with rock of adamantine hardness in huge solid masses, such, for instance, as reefs of granite and other igneous rock, and for the harder varieties of limestone.

The holes are drilled by suitable plant at distances apart dependent upon the nature of the rock and the quantity to be removed. In very extensive operations chambers may be formed for the reception of powerful charges.

Two classes of drill are generally available for boring purposes: (*a*) diamond drills and (*b*) jumper drills. The former are hollow rods, fitted with a head or crown of diamonds, costing from 50*l.* to 60*l.*, and driven at from 200 to 300 revolutions per minute. The latter are bars or shafts of steel, furnished with bits, preferably of circular form, which are worked by percussion at the rate of from 20 to 30 blows per minute.

The blasting material is usually dynamite, or any of the numerous compounds of nitro-glycerine to be found on the market.

The following are brief notes on the methods employed in several instances.

Blyth Harbour.—The rock at Blyth harbour is sandstone of the hardness of basalt in places, and the work was done by six drills lifted by steam power and guided by hand. The distance between the shot-holes was 5 ft. in one direction and 6 ft. 2 ins. in the other. The blasting material, bellite, was lowered in canisters through the drilling tubes and fired by fuses and detonators, the holes being tamped with small gravel. The cost of drilling and blasting came to 3*s.* per cubic yd. of rock *in situ*, adding to which 2*s.* 6*d.*, the cost of dredging, and 8·2*d.* for interest and depreciation on the dredger, the total amounts to 6*s.* 2·2*d.* per cubic yd. The average quantity of rock drilled and blasted per week by one barge was 488 cubic yards. The system was afterwards abandoned in favour of the rock-cutter.

Black Rock Harbour, Buffalo, U.S.A.—Here the rock formation is a very hard limestone containing veins of flint. The blasting material was dynamite and, for a quantity of 14,450 cubic yds., the holes were drilled to an average depth of 9 ft. 9 ins. The cost of drilling and blasting only, including an allowance for interest and depreciation of 2 per cent. per month on 8,000*l.* (the value of the plant), came to 2*s.* per cubic yd. On the other hand, a smaller quantity of 333 cubic yds. with holes drilled only to 3 ft. 6 ins. deep cost 23*s.* 2*d.* per cubic yd.

The drill boat employed on this work was a steel hull, 137 ft. by 33 ft., divided into 20 water-tight compartments. It was equipped with five drill frames located along one of the gunwales each with a travel of 25 ft. on longitudinal tracks. Each frame was fitted with an Ingersoll-Rand drill 2½ ins. in diameter, with 4-in. bits, having a vertical range of 21 ft. without changing the drill bars. Each frame was also provided with an engine for hoisting the drills, two davits for handling drill steels and charging pipes and a pipe which was driven, whenever required, through

loose material to the rock to prevent the drill holes from clogging. A 250 h.p. boiler supplied steam to the drills, spud engines and capstans.

Detroit River.—On three sections of the Detroit River, where the blasting material was dynamite and the holes ranged from 5 ft. to 8 ft. in average depth, the total cost is stated to have been 3*s.* 4*d.*, 4*s.* 4*d.*, and 4*s.* 1*d.* per cubic yd., respectively, of useful material, or about half the rates for the whole quantity removed. The holes were spaced 5 ft. apart, and the total number drilled was 94,631 at a cost of about 52,000*l.* It is not apparent that this figure includes any allowance for interest and depreciation.

Fremantle Harbour, Western Australia.—On account of the shallowness of the water, the work of drilling at Fremantle Harbour could be carried on from light wooden stages resting on four-footed trestles. In a couple of days it was possible to erect 20,000 square ft. of this staging, which carried 120 to 160 men drilling with regularity in 20 ft. or more of water. The holes were from 8 ft. to 12 ft. apart, and the charges consisted of 12 to 15 lbs. of dynamite or gelignite. One ton of explosive accounted for 5,600 cubic yds. of rock blasted. The cost of drilling and blasting 1,503,099 cubic yds. was 238,345*l.*, equivalent to 3*s.* 2*d.* per cubic yd.

Rock Breakers or Chisels.

Rock breakers, or chisels, are steel rams weighing from 15 to 20 tons, with pointed ends of hard chrome steel which are detachable for renewal. The appliance is suspended from a frame, or tripod, mounted on a barge, and is worked by a winch. A drop of from 6 ft. to 10 ft. is generally sufficient to produce disintegration. Blows can be repeated with advantage until a depth of 3 ft. is reached, with holes spaced about 3 ft. to 4 ft. apart (about eight blows will give the required penetration), when it becomes desirable to dredge the broken material before proceeding further. A net depth of 2½ ft. over the site will probably thereby be obtained. It is found that the average result in hard rock is 2 cubic ft. per blow and that about 150 blows can be given per hour. This is equivalent in uninterrupted working to about 10 cubic yds. per hour for a single-cutter machine; about 50 per cent. more will be achieved by a double cutter. In moderately hard rock the output will be greater, as about 250 to 300 blows can be given per minute About 200 cubic yds. may be reckoned a good day's work.

There are several types of cutter, but perhaps the Lobnitz rockbreaker is that which is best known. The following are some instances of its employment.

Suez Canal.—On the Suez Canal, where the rock consisted of limestone, calcareous agglomerates and tufa, gypsum and alabaster, 132 blows were delivered per hour of effective working, or 83 blows per hour of whole time, allowing for interruptions from passing ships and stoppages for repairs. The average thickness of rock shattered was 2 ft. 7½ ins., and each cubic yd. of rock required a mean of 5·4 blows. The cost, exclusive of dredging but covering everything else except general charges, varied from 2½*d.* to 7*s.* 6½*d.* per cubic yd.

Blyth Harbour.—At Blyth in hard sandstone of the coal measures, a ram of 15 tons weight, falling through a distance of 8 ft., penetrated the rock to a depth of 3 ft. on an average of 8 or 9 blows. The holes were spaced 4½ ft. apart. The plant comprised two Lobnitz rock-breakers, each consisting of a steel barge carrying sheer legs, from which the rams, 40 ft. to 50 ft. long and 17 ins. to 19 ins. diameter, were suspended. The cost of one rockbreaker was about 6,800*l.* The quantity broken per week by a single machine working night and day was 908 cubic yds., at a cost (including wages, coal, stores, repairs and insurance) of 46*l.* 11*s.* 3*d.*, equivalent to 12·3*d.* per cubic yd. Adding 6½ per cent. for interest and depreciation on plant, the total cost was 14·5*d.* per cubic yd. The cost of subsequently dredging the loose material (including capital charges) was 2*s.* 9·1*d.* per cubic yd., making 3*s.* 11·6*d.* per cubic yd. in all.

Black Rock Harbour, Buffalo, U.S.A.—The cost of working two Lobnitz machines at Black Rock Harbour in hard limestone rock was 2*s.* 9½*d.* per cubic yd. for a quantity of 52,500 cubic yds This does not cover the cost of dredging.

Panama Canal.—On the Panama Canal, a Lobnitz cutter worked mounted on a barge 100 ft. long by 28 ft. beam by 8 ft. deep. The extreme variation in the tides necessitated the use of 3 rams, weighing 15, 16 and 19½ tons respectively. The holes were spaced 4 ft. apart, and 3 ft. of penetration was made in each case. From records during 1910–11 the work done was an average of 16·2 cubic yds. per hour of actual working time, or 11 cubic yds. per hour of total time, at an average cost of 3*s.* 4*d.* per cubic yd.

Value of the method of Drilling and Blasting as Compared with the use of Rock Breaker.—While drilling and blasting is most commonly adopted for hard rock in large masses, it does not necessarily follow that the cutter always gives better results in soft rock. In some cases it is found that the cutter has a tendency to stick in the hole which it makes, and for that reason the extent of penetration should be carefully limited. On the other hand, the cutter offers less interruption to the passage of ships close to the area of operations, and it can be used in positions where blasting is inadmissible. Moreover, the rock is broken to a more uniform and more convenient size, which facilitates the action of dredging. The cost of the work done by the cutter is generally, though not invariably, less than the cost by the alternative method.

CHANNEL DEMARCATION.

Entrance channels to ports are outlined by buoys and important changes of direction are also indicated by beacons and lightships.

Uniform System of Buoyage.

The general Lighthouse Authorities of the United Kingdom have adopted the following uniform system of buoyage.

Conical Buoys (those with pointed tops) denote the starboard hand, or that side which would be on the right hand of a mariner, either going with the main stream of flood tide, or entering a harbour, river or estuary from seaward.

Can Buoys (those with flat tops) denote the port hand, being the left-hand side of the mariner under the circumstances described.

Spherical Buoys, with domed tops, mark the ends of middle grounds.

Pillar Buoys, having a tall central structure on a broad base, mark special positions.

Colour.—Starboard-hand buoys are always to be painted in one colour only; port-hand buoys are to be painted another characteristic colour, either single or particolour. Spherical buoys are to be distinguished by white horizontal stripes. Wreck buoys are to be coloured green with the word 'wreck' in white letters across.

Types of Buoys.

Buoy Construction.—Buoys are generally hollow structures of steel or iron plating about ¼ in thick. They should be constructed in two watertight sections to prevent sinking in case of penetration of one part.

The size and weight of buoys is as follows:—

	Diam. ft.	Weight. tons.
First class	12	4
Second class	10	2½
Third class	8	1¼
Fourth class	6	¾

Gas buoys should be made of welded iron or mild steel, not riveted. Under high pressures the riveted joints tend to leak and are not satisfactory.

Buoy Moorings.—Mooring chains for first-class buoys are about 1½ ins. diameter, and they are attached to sinkers weighing about 50 cwts. For second-class buoys the chains are usually 1¼ ins. diameter, and the sinkers weigh 40 cwts.

Bell Buoys (fig. 28, page 1353) are provided with a bell from 3 to 7 cwts. in weight struck under the action of the sea either by pendant clappers or by a set of balls rolling freely in horizontal grooves.

Whistling Buoys emit a sound by means of air imprisoned in a long central tube during the period of rising in a swell and expelled through a whistle during the period of falling. The tube descends into the water to a considerable depth—about 20 ft.

Luminous Buoys.

Luminous Buoys are lighted by means of oil or gas: the former, petroleum; the latter, either oil gas, Blau gas, or acetylene. On account of the high pressure required for compact storage, coal gas is unsuitable for use as a naked flame, the luminosity of the gas being rapidly reduced by pressure. The heating power, however, remains almost intact, and with a mantle satisfactory incandescence is produced, though the brilliancy and luminous intensity are lower than those of the other agencies. The ratio of calorific value is approximately as follows:—Coal gas, 5; oil gas, 10; Blau gas and acetylene, 14.

The difficulty connected with the use of oil burners is the necessary attention to the wicks. In France carbonised wicks are employed, but they call for extreme nicety of adjustment. In this country the *Wigham* burner has an automatic contrivance which ensures a constant change of surface. The consumption of oil amounts to from 2 to 4 pints per day of 24 hours, according to the size of the lamp. Including oil and attendance, but not repairs, the approximate pre-war running cost of a 31-day buoy lamp works out at about ·13*d.* per hour, of which ·065*d.* is for oil. The prime cost of buoys equipped with the *Wigham* lamp is from about 200*l.* upwards.

Oil gas, as manufactured on the *Pintsch* system, is produced at a cost of about 60*s.* per 1,000 cubic feet, about 75 cubic feet of gas being obtained from one gallon of oil. The average burner of a fixed light consumes about ·75 cubic feet per hour. The gas is stored under pressure, generally of about 90 to 105 lbs. per sq in., but reaching up to 150 lbs. A reservoir of 380 cubic feet in a buoy of 10 ft. diameter, charged to 90 lbs. pressure, would hold a sufficient supply of gas for about four months.

Lenses are usually of 200 to 300 millimetres (8 to 12 ins.) diameter. The candle power of lanterns fitted with incandescent burners and lenses of 200 mm. diameter is about 220, and with 300 mm. lenses about 330.

Blau gas is derived from the decomposition at a lower temperature of the raw or residuary products from which ordinary oil gas is extracted, and is richer than the latter in heavy carbides of hydrogen. It is liquefied for storage in bottles. Before use, the gas requires to be expanded

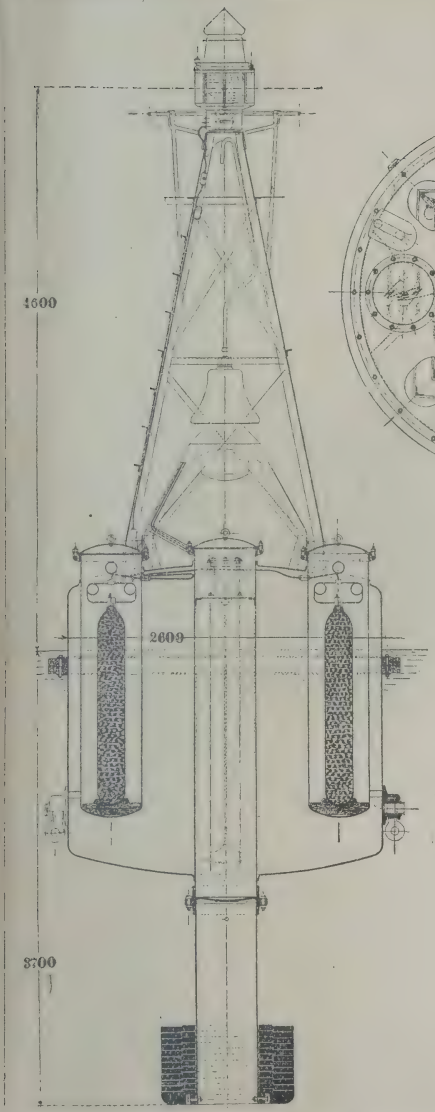


FIG. 28.—Gas and Bell Buoy, the light being obtained from cylinders of dissolved acetylene and the bell operated by carbonic acid mechanism.

[*Gas Accumulator Co. (United Kingdom) Ltd.*]

in an intermediate receiver. The cost of production of Blau gas is considerably higher than that of oil gas, but the cost of transport is much less, and the increased heat of the flame gives an increase of 30 per cent. over oil gas to the intrinsic brilliancy of the mantle and the intensity of the lens.

Acetylene, a gaseous compound of hydrogen and carbon, is produced by the access of water to calcium carbide. In the case of buoys, the water is generally admitted to the chamber containing the carbide through a hole in the bottom, the generation of gas being regulated by the pressure arising from its formation. The system is wasteful of carbide, and only suitable for positions where the buoys can be periodically cleaned and recharged. The better principle, wherever feasible, is the inverse arrangement of the application of carbide to water.

From 1 lb. of commercial calcium carbide can be produced about 4½ cubic feet of acetylene, at a pre-war cost of about 1½*d.* for material only.

Acetylene gas produced as above is not chemically pure, and gives rise to deposit on the burners, but this difficulty can be overcome by the addition of a suitable purifier between the gas-generating chamber and the burner. Unattended lights working on this system will run for six months, or even a year, without recharging.

Dissolved Acetylene.—The compression of acetylene for storage purposes is generally illegal, on account of the liability of the gas, so stored, to explode. On the other hand, compressed acetylene in what is known as the dissolved form is perfectly safe, and cylinders of dissolved acetylene, prepared in accordance with official regulations, are classed by the Home Office as non-explosive.

The solvent commonly employed is acetone, which is a liquid hydro-carbon, possessing the property of absorbing about 25 times its own volume of acetylene at atmospheric pressure, and multiples of this to correspond with the number of atmospheres to which compression is carried.

The steel cylinders for the reception of the dissolved acetylene are first completely filled with a substance having a porosity of 80 per cent., which is then caused to absorb as much acetone as would occupy 40 per cent. of the volume of the cylinder. The actual gas capacity of the cylinder is thus 40 per cent. of 25, or 10 volumes per atmosphere of pressure.

Dissolved acetylene cylinders should not be discharged below the atmosphere gauge pressure, because the rate at which the acetone is carried off by the gas greatly increases as the pressure approaches zero. Acetone vapour has no detrimental effect upon the consumption of the gas in the burner. It is generally found necessary to make up the quantity of acetone, after five to ten refillings of the cylinder with acetylene.

Economies in the consumption of dissolved acetylene have been effected by the introduction of mechanism for emitting flashing or occulting lights invented by Mr. Gustav Dalen and others whereby a wide range of intermittent light signals can be produced automatically.

To the same scientist is attributable the *Sun-valve*, or, more correctly, the *Light-valve*, which is a mechanical device sensitive to light and actuated entirely by the alternation of daylight and darkness. It opens the gas supply at nightfall and closes it at daybreak with perfect regularity, resulting in a saving of some 25 to 40 per cent. of the gas, according to climate, as compared with a constantly burning light. The use of the instrument is generally restricted to shore lights, or lights of considerable magnitude.

Mr. Dalen has further produced complete automatic apparatus for mixing in correct and constant proportions the dissolved acetylene and air and for burning the compound in conjunction with incandescent mantles, either as a constant or intermittent light. This apparatus also by its nature, is most applicable to lights of considerable power, superior to those generally fitted to buoys.

As an instance of the cost of buoy illumination by dissolved acetylene may be mentioned nine light buoys in the entrance channel to the Port of Lido, Venice, which command a light range of 6 miles under conditions of average atmospheric clearness, and contain a supply of gas for a period of 110 days. The lenses are 300 mm. diameter, and the burner consumes 15 litres per hour. According to a statement of Sig. Carlo Duse in the 'Giornale del Genio Civile,' the annual pre-war cost per buoy, covering attendance and repairs and four charges of gas, each of 3 cylinders of 5 cubic metres, at 4*s.* per cubic metre, was 15*l.* 12*s.*

Further reference to the cost of acetylene lighting will be found below under the section on Lighthouses, page 1360.

Lightships.


Lightships afford a more powerful light than luminous buoys, and the focal plane is at a much higher level—generally about 35 ft. above the water surface. They are, of course, more costly both in first outlay and maintenance, and are usually manned by a crew, though this is not essential in all cases.

A notable example of an attended lightship is the Bar at the entrance to the River Mersey. The illuminant in this vessel is petroleum with an incandescent mantle, and the lens is of small third order (750 mm. diameter). The whole optical apparatus is swung on gymbals, so that the beam emitted is kept practically horizontal. It is revolved by clockwork, and gives three powerful flashes, so that the whole installation resembles a floating lighthouse (see fig. 29).

Small lightships, without constant attendance, are stationed at several places on the coast of this country and of France. A vessel of this type is about 40 ft. long, 12 ft. beam, and 8 ft.

FIG. 29.
BAR LIGHTSHIP, LIVERPOOL.

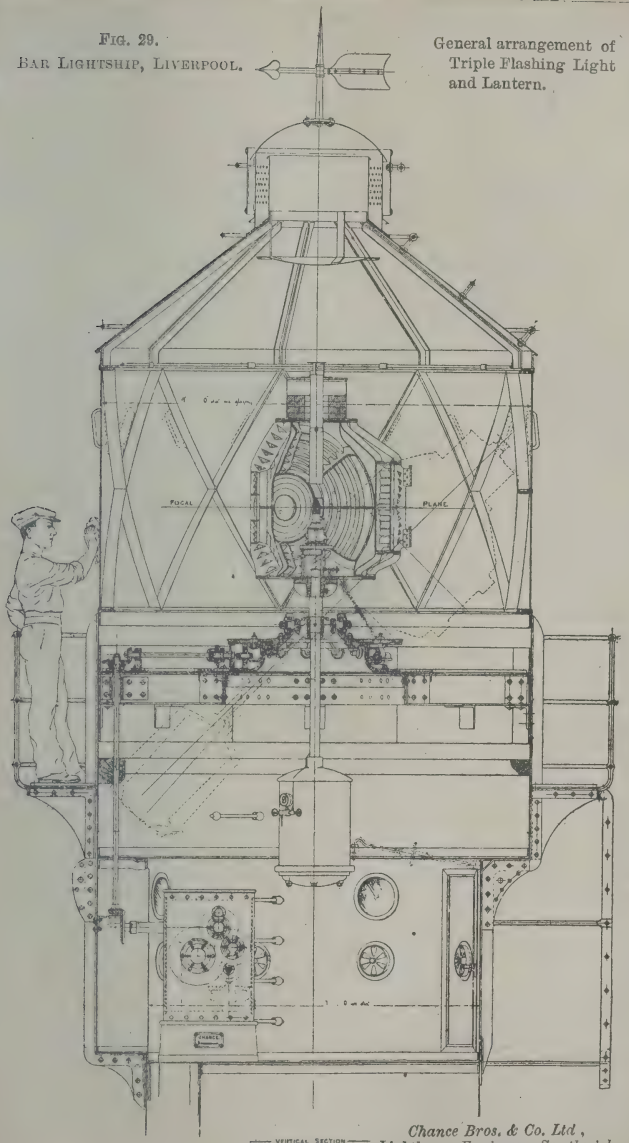General arrangement of Triple Flashing Light and Lantern.



Chance Bros. & Co. Ltd., Lighthouse Engineers, Smethwick, nr. Birmingham.)

deep, fitted with a storeholder containing 2,500 cubic ft. of gas, which is sufficient to maintain a light for 3 months.

Larger vessels, with crews, range from 60 to 150 ft. in length, from 20 to 30 ft. in breadth and from 10 to 20 ft. in depth, the draught being from 7 to 10 ft.

Lenses vary from 500 mm. to 750 mm. in diameter and the candle power from 800 to 5,000. The consumption of gas varies with the type of burner from ·75 to 3 cubic ft. per hour.

LIGHTHOUSES.

The Eddystone Lighthouse.

The most recent type of foundations and general construction of lighthouses is well exemplified by the new Eddystone Lighthouse. In this structure the tendency of the curvilinear outline of Smeaton's and of other similar sea-towers that have succeeded it, to elevate the centre of force of each wave-stroke on the structure, induced Sir James Douglas to adopt a cylindrical base, from which base, at a level of 2½ feet above high-water spring-tides, the curved shaft of the tower commences. The difference in the rise of heavy seas on the two structures during stormy weather is remarkable. The cylindrical base has the further advantage of affording a convenient landing platform, thus adding considerably to the opportunities of relieving the lighthouse.

The base is 44 feet in diameter by 22 feet in height. The tower is a concave elliptic frustum, the generating curve having a semi-transverse axis of 173 feet, and a semi-conjugate axis of 37 feet. With the exception of the space occupied by the fresh-water tanks, the tower is solid for 25 ft. 6 ins. above high-water spring-tide level. At the top of the solid portion the wall is 8 ft. 6 ins. in thickness, diminishing to 2 ft. 3 ins. in the thinnest part of the service-room. All the stones are dovetailed both horizontally and vertically. The system consists in having a raised dovetailed band 3 inches in height on the top bed and on end joint of each stone. A corresponding dovetailed recess is cut in the bottom bed and end joint of the adjoining stones, with just sufficient clearance for the raised band to enter it freely in setting. From experiments made with blocks put together in this manner with Portland cement, it is found that the work is so homogeneous as to be as nearly as possible as strong as the solid granite.

Each stone of the foundation-courses (figs. 30, 31) is sunk to a depth of not less, at any part, than 1 foot below the surface of the surrounding rock, and is further secured by two Muntz metal bolts, 1½ inch in diameter, passing through the stone, and 9 inches into the rock below, the top and bottom of each bolt being fox-wedged.

The masonry consists of 2,171 stones, containing 62,133 cubic feet of granite, or 4,688 tons.

Cost of Construction of Various Lighthouses.

Name of Structure.	Total Cost.	Cubic Feet.	Cost per Cubic Foot.
	£ s. d.		£ s. d.
Eddystone (Smeaton)	40,000 0 0	13,343	2 19 11½
Bell Rock	55,619 12 1	28,530	1 19 0
Skerryvore	72,200 11 6	58,580	1 4 7½
Bishop Rock	34,559 18 9	35,209	0 19 7½
Smalls	50,124 11 8	46,386	1 1 7½
Hanois	25,296 0 0	24,542	1 0 7½
Wolf Rock	62,726 0 0	59,070	1 1 3
Dhu Heartach	72,584 9 7	42,050	1 14 6
Longships	43,869 8 11	47,610	0 18 5
Eddystone (New)	59,255 0 0	65,198	0 18 2

Classification of Lighthouse Apparatus.

Order.	Focal distance, mm.	Order.	Focal distance, mm.
Hyper-radial	1,330	Small third order	375
Meso-radial	1,125	Fourth order	250
First order	920	Fifth ,,	187·5
Second ,,	700	Sixth ,,	150
Third ,,	500		

Different Descriptions of Lights.

(1) Fixed. (2) Revolving light, gradually increasing at definite equal periods to full power, and then gradually decreasing to eclipse. (3) Fixed light varied by flashes; shows a fixed light, which at certain periods is varied by white or coloured flashes. (4) Flashing; shows a single

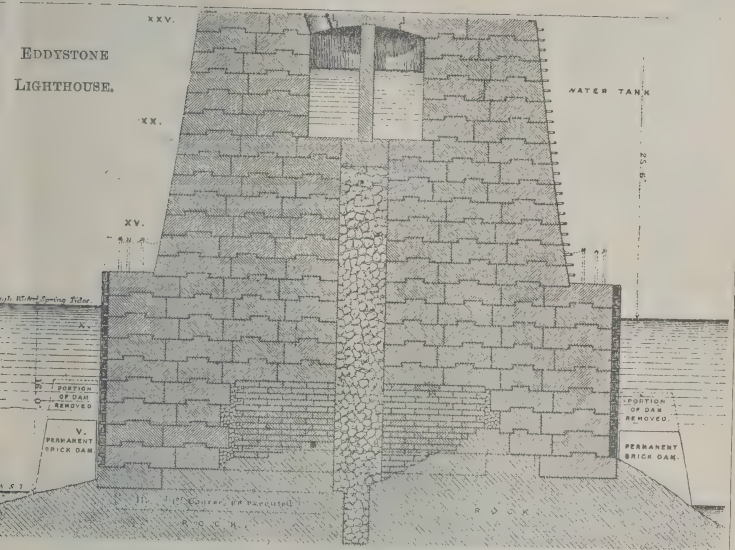

EDDYSTONE
LIGHTHOUSE.
XXV.
XX.
XV.
WATER TANK
PORTION OF DAM REMOVED
V. PERMANENT BRICK DAM
PERMANENT BRICK DAM
ROCK

FIG. 30

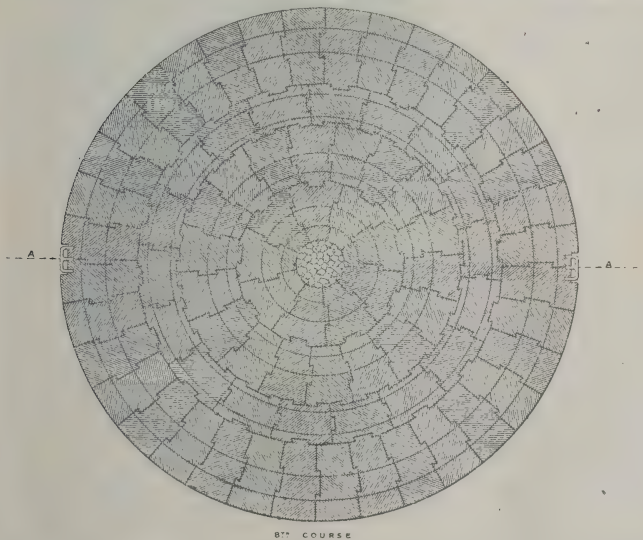

A
A
8TH COURSE

FIG. 31.

flash at short intervals of a few seconds. (5) Group-flashing; shows groups of two or mo flashes in quick succession, separated by a period of eclipse between the groups. (6) Occultin which bursts instantaneously into full power, and after remaining for a period as a fixed lig is suddenly eclipsed. (7) Alternating lights of different colours, generally white and r alternately.

Distance visible from Lighthouses.

The following Table shows the distance of the horizon visible from towers of the heights give In it the necessary correction has been made for refraction :—

H. Heights in Feet.	λ. Lengths in English Miles.	H. Heights in Feet.	λ. Lengths in English Miles.	H. Heights in Feet.	λ. Lengths in English Miles.
5	2·958	80	11·832	250	20·916
20	5·916	90	12·549	300	22 912
30	7·245	100	13·228	350	24·748
40	8·366	120	14·490	400	26·457
50	9·354	140	15·652	600	32·403
60	10·246	150	17·201	800	37·416
70	11·067	200	18·708	1,000	41·833

Optical Apparatus.

The essential part of a lighthouse is the optical apparatus, which is formed of glass lens and reflecting prisms in order to concentrate the light from the burner in the required directio The optical apparatus of a fixed light concentrates the rays in the vertical plane only, and sen out a disc of light which illuminates the horizon over the whole 360° or any less angle which ma be required. That of a flashing light concentrates the rays in both the vertical and horizont planes, and thus throws out a series of beams, the number varying with the character whic the light is required to give. The whole apparatus is revolved, and by this means the bea sweep round the horizon and appear as flashes at definite intervals to the mariner.

Large lights are supported on a mercury float whereby friction of movement is reduced t a minimum; ball bearings are satisfactory for lights of the fourth order and upwards. Th adoption of the mercury float and of the group flashing system, which was invented by Dr. J Hopkinson in 1874, and introduced by *Messrs. Chance Bros. & Co., Smethwick, Birmingha* has revolutionised lighthouse practice. The former enables the largest type of optica apparatu the weight of which runs up to 10 tons, such as that illustrated in fig. 32 (p. 1359), to be rotate by the little finger only, and the latter has so greatly increased the distinctive characters whic can be given to lights that there is now no danger of confusion between them.

It is usual to arrange the optical system so that the flashes have a minimum duration ·2 seconds; it has been found that a shorter duration is not sufficient for the mariner to dete the flash. Fig. 32 also illustrates the lantern which protects the optical apparatus.

Sources of Lighthouse Illumination.

For the ordinary necessities of lighthouse illumination mineral oil is the most suitable an economical illuminant. The use of paraffin in the place of colza oil increases the luminou intensity of a four-wick burner by 10 per cent., and of a one-wick burner by 100 per cent.

Oil and gas lights, when shown through similar lenses, are equally affected by atmospheri variations. The electric light is absorbed more largely by haze and fog, but in all weathers an at all distances its penetration has proved superior.


The luminary now in general use at lighthouses is the incandescent oil burner, to whic paraffin oil is supplied under pressure, and is vaporised in a retort beneath the burner or in vaporiser over the burner, being afterwards consumed in an incandescent mantle. The fo sizes of mantle usually employed are 35 mm., 50 mm., 85 mm., and 110 mm. in diameter, t intensities being 500, 1,250, 2,000, and 3,500 candles, respectively.

The Trinity House has adopted a burner having a 50 mm. mantle and consuming one pi of oil per hour, and a triple-mantle, consisting of a group of three single-mantle burners, wit a service intensity of 3,300 candles and a consumption of 3 pints per hour.

The substitution of incandescent oil burners for concentric wick burners has not only greatl augmented the intensity of the lights, but has resulted in a considerable economy in consump tion, in addition to obviating excessive labour and expense of landing large quantities of o at lighthouses, especially at rocks and isolated positions. The following may be cited as a

FIG. 32.
MANORA POINT LIGHTHOUSE.

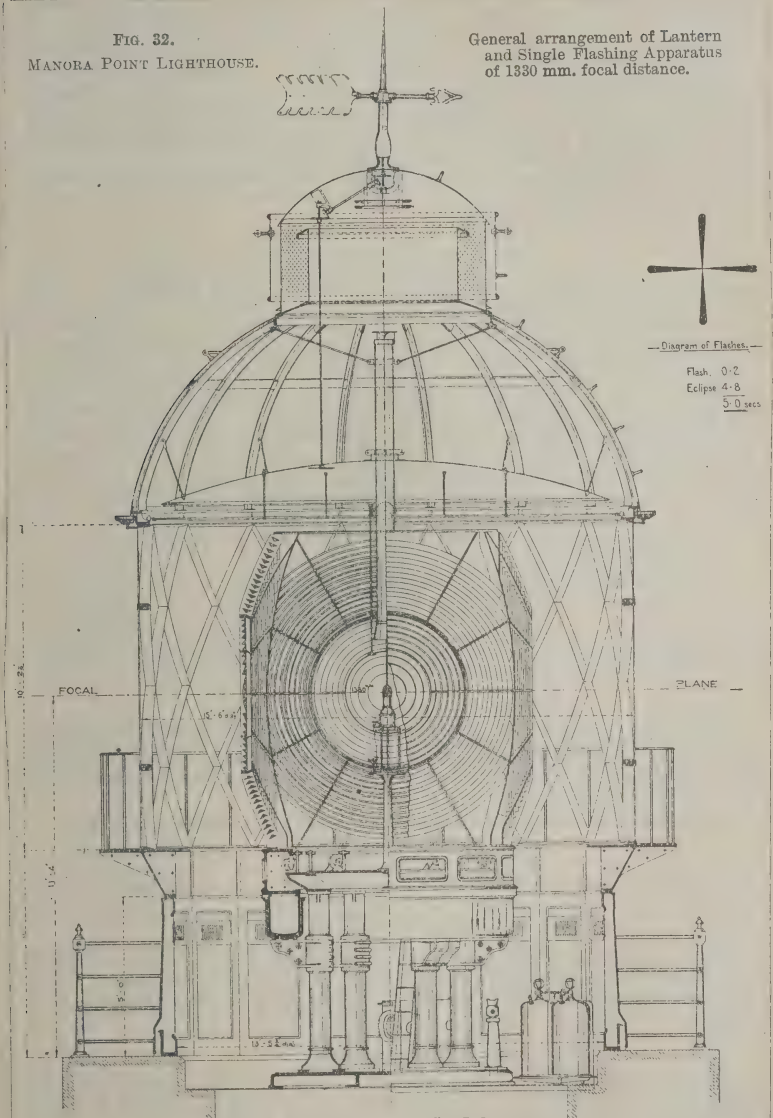General arrangement of Lantern and Single Flashing Apparatus of 1330 mm. focal distance.



(Chance Bros. & Co. Ltd., Lighthouse Engineers, Smethwick, nr. Birmingham.)

Audible Signals.

Fog Bells.

The clockwork of American fog bells is driven by weights of from 700 to 1,000 lbs. The bells themselves weigh about 1,200 lbs.

Sirens.

Sirens require an expenditure of energy to work them of from 7,000 to 29,000 lbs. per second of sound; the air pressure is usually about 40 lbs. per square inch.

When a siren is placed at the summit of a lighthouse the reservoir on which it is mounted cannot have a greater capacity than 500 litres.

Under favourable conditions a steam siren may be heard at a distance of 14 miles, but sometimes the range does not exceed 2 miles.

A compressed-air siren (·125 metre in diameter) has been heard at a distance of 13 miles, but the range is sometimes as low as 1·75 mile. A small-sized siren (·042 metre diameter) cannot be heard at a greater distance than 1·85 mile under favourable conditions.

About 12 horse-power is required for working a large siren.

Explosive Signals.

A 4-oz. charge of cotton powder can be heard under favourable conditions at a distance of 20 miles, and under unfavourable conditions at a distance of 2½ miles.

Submarine Sound Signals.

The Submarine Signal Company, of Boston, U.S.A., have successfully introduced a system of submarine signalling by means of a bell struck by a clapper at depths varying from 10 to 30 ft., but preferably about 25 ft. below the surface of the water. The distance traversed by the sound has reached 15 miles, but 1 to 3 miles is a serviceable test. The apparatus for receiving it consists of two metal tanks, about 22 ins. square, filled with seawater and located, one on each side of the ship, at a certain distance from the forefoot, against the inside skin and below the water line. A specially designed microphone is suspended, wholly immersed, in each tank, and wires connect this microphone with an indicator box on the bridge or elsewhere.

A series of experiments made to determine the most effective weight and shape of the sending apparatus has resulted in the adoption of a bell weighing 220 lbs. with a period of 1,215 vibrations in water.

DIVING.

Forms and Limitations.—Diving is practised in three forms—either naturally, without any extraneous supply of air during submersion, or artificially, under pneumatic pressure (*a*) with a diving dress or (*b*) with a diving bell. The first is the most primitive method and, though still in vogue among natives in Eastern seas, is bound to be intermittent, in spells of short duration, as it causes great physical strain, leading not merely to acute discomfort, but at times to bleeding at the nose, mouth and ears. When practised with the aid of pneumatic apparatus, the period of submersion may be greatly prolonged. The only practical limitation is in regard to depth. For every 33 ft. below water, the pressure on the lungs is increased by 1 atmosphere (14·7 lbs. per sq. in.) Thus, at 50 ft. below the surface the pressure is 22½ lbs. in excess of atmospheric pressure; at 100 ft. it is 44½ lbs., and so on. Such pressures, though considerable, may be sustained with impunity and even a depth of 150 ft. may be reached without ill effects. But greater depths necessitate considerable powers of resistance and are attended with risk. The maximum depth to which any diver has descended, as recorded by authentic testimony, is 210 ft., at which depth the pressure was rather more than 7 atmospheres absolute. Harbour work does not generally entail diving in water of more than 10 fathoms (60 ft.).

Caisson Disease.—After immersion under pressure the blood becomes more or less saturated with nitrogen in dissolved form, and when the pressure is relaxed the surplus gas is given off—if too rapidly, bubbles of gas form in the circulatory system resulting in pains ('pins and needles'), asphyxiation, paralysis and death, according to the intensity. To these symptoms is given the name of *Caisson Disease*, from its association with work carried on in caissons under pneumatic pressure. It is the most formidable antagonist of the diver, prostrating even the most powerful and robust. Fortunately the malady does not manifest itself at all under moderate pressures, viz., those less than 2 atmospheres absolute. For depths exceeding 35 or 40 ft., it is necessary to use circumspection during the process of decompression, i.e., the ascent to the surface should be made slowly, with stoppages at intervals. By this means the evil effects can be neutralised.

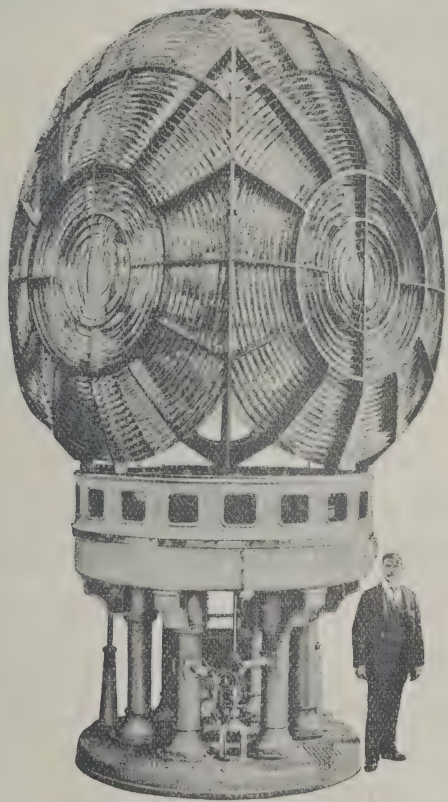
The following table indicates the ordinary time limits in deep water, stoppages in ascent and approximate air supply, in accordance with Prof. Haldane's recommendations and the latest British Admiralty practice.

CHANCE BROTHERS & CO.

LIMITED,

Lighthouse Engineers & Constructors

:: SMETHWICK, BIRMINGHAM ::




Hyper-radial Single-Flashing Light, 1,330 mm. focal distance, for Manora Point Lighthouse, Karachi.

Manufacturers of all forms of Dioptric Lighthouse Apparatus, Lanterns, Iron and Steel Towers, Acetylene Buoys and Unattended Automatic Fixed and Revolving Acetylene Lights and Beacons, :: Marine Fog Signals, Portlights, Shiplights, etc., etc. ::

3D3 F. 1362

DIVING APPARATUS

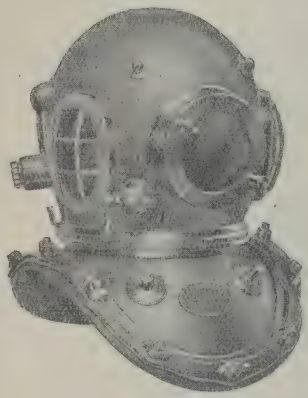And all other Submarine Appliances.



CONTRACTORS TO

THE BRITISH & MOST FOREIGN NAVIES,

WAR OFFICE,

CROWN AGENTS FOR THE COLONIES,

TRINITY HOUSE,

PRINCIPAL HARBOUR AND DOCK WORKS, AND PEARL AND SPONGE FISHERIES OF THE WORLD,

&c., &c.

ALSO MAKERS OF

SMOKE HELMETS.

MINES RESCUE APPARATUS

BREATHING APPARATUS. RESPIRATORS.

ALSO

AIR COMPRESSORS AND VACUUM PUMPS.

SIEBE, GORMAN & CO. Ltd.

'Neptune' Works & 187 Westminster Bridge Road,

LONDON, ENGLAND.

Telegrams: 'SIEBE, LAMB, LONDON.
Cables: 'SIEBE, LONDON.'

Telephone No.:
HOP 3401 (2 lines).

Codes used:—
A1, A B C (4th and 5th EDITIONS)
WESTERN UNION, MARCONI, LIEBER, BENTLEY, ENGINEERING AND PRIVATE.

F. 1363

TABLE.

Depth.		Pressure, Lbs. per Sq. In.	Time under Water from Surface to Beginning of Ascent.	Stoppages in Minutes at different Depths.			Total Time of Ascent, Minutes.	No. of Cylinders needed.	Revolutions of Pump per min.
Feet.	Fathoms.			30 ft.	20 ft.	10 ft.			
0–36	0–6	0–16	No limit	—	—	—	0–1	1	15–20
36–42	6–7	16–18½	Up to 3 hours	—	—	—	1–1½	1	25–30
			Over 3 hours	—	—	5	6	1	25–30
42–48	7–8	18½–21	Up to 1 hour	—	—	—	1½	1	30
			1 to 3 hours	—	—	5	6½	1	30
			Over 3 hours	—	—	10	11½	1	30
48–54	8–9	21–24	Up to ½ hour	—	—	—	2	2	20
			½ to 1½ hours	—	—	5	7	2	20
			1½ to 3 hours	—	—	10	12	2	20
			Over 3 hours	—	—	20	22	2	20
54–60	9–10	24–26½	Up to 20 min.	—	—	—	2	2	25
			20 min. to ¾ hour	—	—	5	7	2	25
			¾ hour to 1½ hours	—	—	10	12	2	25
			1½ hours to 3 hours	—	5	15	22	2	25
			Over 3 hours	—	10	20	32	2	25
60–66	10–11	26½–29½	Up to 15 min.	—	—	—	2	2	25
			¼ to ½ hour	—	—	5	7	2	25
			½ to 1 hour	—	3	10	15	2	25
			1 to 2 hours	—	5	15	22	2	25
			2 to 3 hours	—	10	20	32	2	25
66–72	11–12	29½–32	Up to 15 min.	—	—	2	4	2	25
			¼ to ½ hour	—	3	5	10	2	25
			½ to 1 hour	—	5	12	19	2	25
			1 to 2 hours	—	10	20	32	2	25
72–78	12–13	32–34½	Up to 20 min.	—	—	5	7	2	25
			20 to 45 min.	—	5	15	22	2	25
			¾ to 1½ hours	—	10	20	32	2	25
78–84	13–14	34½–37	Up to 20 min.	—	—	5	7	2	30
			20 to 45 min.	—	5	15	22	2	30
			¾ to 1½ hours	—	10	20	32	2	30
84–90	14–15	37–40	Up to 20 min.	—	3	5	10	2	30
			20 to 40 min.	—	5	15	22	2	30
			40 to 60 min.	3	10	15	30	2	30
90–96	15–16	40–42½	Up to 20 min.	—	3	5	11	2	30
			20 to 35 min.	—	5	15	22	2	30
			35 to 55 min.	5	10	15	32	2	30

Diving Bells.

Diving Bells.—As an alternative to the diving dress, the diving bell, a chamber constructed of mild steel plating, carefully riveted and securely caulked so as to be perfectly watertight, may be suspended over the place of operation and lowered or raised as required. The scope of movement by workers is naturally restricted to the area occupied by the bell, which may be 20 ft. by 10 ft. or thereabouts. Some submarine caissons are of much greater dimensions, but they are not diving bells in the true sense of the word. The interior is fitted with seats and footrests for the occupants, who may perhaps number a dozen. The bell is ballasted with cast-iron kentledge to enable it to sink without risk of overturning.

SECTION XXVIII

NAVIGABLE WATERWAYS—CLASSIFICATION—EXTENT IN UNITED KINGDOM—IMPEDIMENTS TO NAVIGATION IN RIVERS—VELOCITY OF RIVER FLOW—VELOCITY OBSERVATIONS—TREATMENT FOR EROSION—MISSISSIPPI BANK PROTECTION—CHANNEL TRAINING WORKS—GROYNES ON THE WAAL—CHANNEL CURVES—GROUND SILLS—STORAGE RESERVOIRS—RIVER DREDGING—DREDGING PLANT ON THE VOLGA AND MISSISSIPPI—COST OF RIVER REGULATION—RIVER CANALISATION—LATERAL CANALS—RULING CONDITIONS ON BRITISH CANALS—PROJECTED DEVELOPMENTS—COST OF CANAL CONSTRUCTION—CONTINENTAL CANALS—RELATIVE ADVANTAGES OF LOCKS AND MECHANICAL LIFTS—LIFTS AT ANDERTON, LES FONTINETTES AND PETERBOROUGH—INCLINED PLANES—AMERICAN LOCKS—CANAL CURVES—LOSS OF WATER ON CANALS—BANK PROTECTION—TRACTION AND HAULAGE—SHIP CANALS

(Contributed and revised by Brysson Cunningham, D.Sc., B.E., F.R.S.E., M.Inst.C.E.)

SECTION XXVIII

NAVIGABLE WATERWAYS—CLASSIFICATION—EXTENT IN UNITED KINGDOM—IMPEDIMENTS TO NAVIGATION IN RIVERS—VELOCITY OF RIVER FLOW—VELOCITY OBSERVATIONS—TREATMENT FOR EROSION—MISSISSIPPI BANK PROTECTION—CHANNEL TRAINING WORKS—GROYNES ON THE WAAL—CHANNEL CURVES—GROUND SILLS—STORAGE RESERVOIRS—RIVER DREDGING—DREDGING PLANT ON THE VOLGA AND MISSISSIPPI—COST OF RIVER REGULATION—RIVER CANALISATION—LATERAL CANALS—RULING CONDITIONS ON BRITISH CANALS—PROJECTED DEVELOPMENTS—COST OF CANAL CONSTRUCTION—CONTINENTAL CANALS—RELATIVE ADVANTAGES OF LOCKS AND MECHANICAL LIFTS—LIFTS AT ANDERTON, LES FONTINETTES AND PETERBOROUGH—INCLINED PLANES—AMERICAN LOCKS—CANAL CURVES—LOSS OF WATER ON CANALS—BANK PROTECTION—TRACTION AND HAULAGE—SHIP CANALS.

(Contributed and revised by Brysson Cunningham, D.Sc., B.E., F.R.S.E., M.Inst.C.E.)

NAVIGABLE WATERWAYS.

Classification.

Navigable Waterways are conveniently classified as

(1) Natural Channels, i.e., those rivers, or portions of rivers, including estuaries, the normal flow of which is not interfered with by artificial works;

(2) Canalised Rivers, frequently called 'Navigations,' the flow of which is more or less under artificial control, and

(3) Canals, proper, entirely artificial in conception and construction.

The distinction between the three classes is fundamental and important. In the case of the natural channel, improvement works are limited to a rectification of the bed, and no attempt is made to control or augment the natural flow of water, which being derived from the drainage

of the basin, is normally sufficient for purposes of navigation, within the limits of the channel capacity. The canalised portions of rivers consist of sections in which the natural flow is conserved and controlled, as in the manner of a canal, but generally without extraneous sources of water supply. Canals, being works of an entirely artificial character, have to be fed with supplies obtained by the interception of streams, or from other external sources, frequently necessitating pumping and reservoir storage.

Internal Waterways in the United Kingdom.

According to the Report of the Royal Canal Commission, issued in 1909, the total mileage of Canals and Navigations in use in the United Kingdom is about 4,670. Of this total, about 3,639 miles lie in England and Wales, 183 in Scotland, and 848 in Ireland. The length of canals in existence in England and Wales is given as 1,927½ miles, and of navigations, 1,312½ miles. There are 812½ miles of open river and estuary.

IMPEDIMENTS TO NAVIGATION OF RIVERS.

From the point of view of navigation, few rivers are without defect of some kind or other, and, in most cases, artificial treatment is required to produce and maintain a serviceable channel.

In the seaward section the most pronounced disability, where it exists, is the bar. For its removal a very efficient means, producing immediate amelioration, is dredging; but the effect in the majority of cases is merely temporary, and operations must be continuous if the improvement is to be maintained. Where bars are not in evidence, or not very pronounced, a river mouth is often encumbered by shoals, due either to detritus brought down by the river itself or to coastal erosion and drift. In this case also, dredging may be resorted to with immediate advantage. For permanent benefit it is requisite to supplement this temporary expedient by training works of a scope and magnitude dependent on circumstances. Such works comprise longitudinal training walls, or embankments, and groynes, dykes, or jetties, to be alluded to later.

In the upper sections of rivers the principal difficulties encountered are irregularities in flow, due to floods in rainy seasons and depletion of water in periods of drought, excessive current velocity, instability of channels and the formation of shoals. In low-lying lands, it is often necessary as a protection against inundation to raise the river banks with impervious material, well supported from behind. Insufficiency of water may be met by the introduction of weirs, or the formation of storage reservoirs. The remedy for excessive and irregular currents lies in training works of a suitable character.

Velocity of Flow in Rivers.

The velocity of river flow varies very considerably, as will be seen from the following table. As regards navigation, currents exceeding three to four miles an hour or four and a half to six feet per second make a serious deduction from the speed of propulsion of vessels proceeding upstream, and render control difficult in the case of small craft travelling downstream. See also note on Horse Traction, page 1385.

River	Seine at Meulan	2·45 ft. per second.
,,	,, at Paris	4·00 ,, ,, ,,
,,	Thames at London Bridge	3·00 ,, ,, ,,
,,	Tiber at Rome	3·40 ,, ,, ,,
,,	Rhine at Basle	6·36 ,, ,, ,,
,,	Aar at Berne	7·50 ,, ,, ,,
,,	Durance, below Sisteron	8·65 ,, ,, ,,
,,	Maranon, S. America	13·00 ,, ,, ,,

Velocity Observations are taken by means of (*a*) Floats, (*b*) Current Meters, and (*c*) Pressure Tubes.

Floats.—For surface velocities an orange is excellent, floating almost wholly immersed. In the winter season, fragments of ice give similarly good results. The topmost layers of water, however, are frequently affected by the wind. To obviate this the float should extend some distance below the surface. A corked bottle, weighted at the bottom, has proved satisfactory for the purpose. Tube floats are also employed, consisting of tin cylinders about 1 in. diameter, weighted so as to maintain perpendicularity, and leave two or three inches projecting above the surface. Double floats are sometimes used, consisting of a small surface float connected by means of a cord to a float of larger bulk below. In Mississippi experiments, the lower floats were kegs 9 ins. high and 6 ins. diameter, or 12 ins. high and 8 ins. diameter, according as depth

was less or greater than 5 ft. They were without top or bottom, and ballasted with lead. The connecting cords were $\frac{1}{10}$ in. to $\frac{1}{5}$ in. diameter. The upper float was of light pine, $5\frac{1}{2}$ ins. square by $\frac{1}{8}$ in. thick, or of hollow tin, $5\frac{1}{2}$ ins. by $1\frac{1}{2}$ in.

Current Meters.—These record velocity by means of the revolution of a screw, being calibrated by drawing through still water at various speeds. Price current meter, used by United States Geological Survey, consists of six cups attached to a vertical shaft, which revolves on a conical hardened steel point when immersed in moving water. Meter measurements can be made from a bridge, from a cable and car specially installed for the purpose, from boats or by wading. Current meters are affected by friction, and are not very suitable for low velocities; in fact, in feeble currents they cease to act.

Pressure Tubes.—Pitot tubes, which are ⌊ shaped with the lower horizontal limb pointing upstream, record the velocity by the height to which the water in the tube is forced above surface level by the pressure of the current. Darcy's adaptation consists of two tubes in communication, enabling the differential reading to be taken more accurately and eliminating the effect of ripples and oscillations. The apparatus gives good results in small channels with currents of fair velocity, but it is not suitable for large rivers or for very low rates of flow.

Position of Maximum Velocity may be taken generally at or about surface level, but is not infrequently below. The view is generally held that the velocity varies as the abscissæ of a parabola, whose axis is parallel to the surface. The equation for the parabola in the case of the Mississippi was found to be

$$v = -0{\cdot}79222\ d^2 + 3{\cdot}2611$$

where v = velocity in feet per second and d is distance from axis in fractional parts of whole depth considered as a unit.

Mean Velocity.—The position of mean velocity has been found by repeated experiments in U.S. Geological Survey to be located at about 0·6 of the total depth. The mean of velocities obtained at 0·2 and 0·8 of the depth gave the mean velocity of the stream very accurately.

In ordinary cases the least, mean and maximum velocities may be taken in the ratio 3 : 4 : 5. In very slow currents they are nearly as 2 : 3 : 4.

Prony's Formula:

$$\frac{\text{Mean velocity}}{\text{Maximum velocity}} = \frac{\text{Maximum velocity} + 7{\cdot}71 \text{ ft. per sec.}}{\text{Maximum velocity} + 10{\cdot}28 \text{ ft. per sec.}}$$

Computed Velocity.—A great number of formulæ have been published connecting the velocity with the hydraulic mean radius (R) $= \frac{\text{area of stream}}{\text{wetted perimeter}}$, and the sine of slope (S) $= \frac{\text{fall in level}}{\text{length of channel}}$. Most of these expressions can be reduced to the form

$$v = c\sqrt{\text{RS}},$$

where c is a coefficient varying with the class and nature of the channel, as well as with the personality of the observer. Some of the coefficients are very complicated, and the values are variable to a considerable degree. Mr. A. A. Barnes ('Hydraulic Flow Reviewed,' 1916) proposes to modify the powers of R and S so as to admit of a coefficient of constant value. His expression is

$$v = 58{\cdot}4\ \text{R}^{\cdot 694}\text{S}^{\cdot 496}$$

or, approximately,

$$v = 60\ \text{R}^{\cdot 7}\ \text{S}^{\cdot 5}$$

In nineteen observations with ranges in width of stream from ·26 ft. to 2,598 ft., in depth from ·19 ft. to 69 ft., in hydraulic mean radius from ·0786 ft. to 53·6 ft., and in slope from $1\frac{3}{4}$ to 241·2 ft. per mile, velocities of from 1 to $7\frac{1}{2}$ ft. per second were computed and found to agree, within 1 per cent., with actual observation.

In the course of investigations made during three years in connection with the regulation of the Whangpoo and Yangtse Rivers, Dr. Herbert Chatley found that in fairly straight and uniformly sectioned reaches when the flow is steady the above exponential form $v = c\text{R}^{\cdot 7}\text{S}^{\cdot 5}$ gave consistent results. But when the flow was unsteady he found it more satisfactory to take the expression

$$v = c\text{R}^{\cdot 7}\left(\text{S} - \frac{a}{g}\right)^{\cdot 5}$$

where a is the acceleration. In other words, the effective slope was equal to the algebraic difference between the actual slope and an 'acceleration' slope determined by the ratio of the actual mean acceleration of the water to the gravitational acceleration.

Critical Velocities.—The following is a statement founded on the researches of Dubuat and Beardmore of velocities at which various materials in a river bed commence to be eroded :

Soft clay	3 inches per second.
Fine sand	6 ,, ,, ,,
Coarse sand and pea gravel	9 ,, ,, ,,
Gravel as large as French beans	12 ,, ,, ,,
Rounded pebbles, 1 inch diameter	2 feet per second.
Rough gravel ,, ,,	2½ ,, ,, ,,
Pebbles 1½ inches ,,	3¼ ,, ,, ,,
Heavy shingle	4 ,, ,, ,,

TREATMENT FOR EROSION.

Protection of River Banks.—Water plants form a very efficient natural protection, and they assist in retarding the current—sometimes not an unmixed advantage.

Earthen banks of a soft and erodable character may be artificially protected, where stone is procurable, by rubble pitching, laid at a slope of 1½ or 2 to 1, from 8 to 12 ins. thick at the top, and increasing in thickness downwards at the rate of 3 ins. per yard. The foot of the slope should be adequately secured to some firm abutment, such as piling, otherwise the pitching may be undermined and, in that case, it will subside.

Where stone is not procurable, fascine aprons or mattresses, formed of brushwood, may be utilised. These are bundles of branches and twigs (usually willow) from 9 to 12 ins. in diameter, about 12 ft. long and bound with tarred rope at intervals of 4 ft. or so, laid side by side and tied together so as to produce a surface covering of the desired extent. The 'fascines,' as they are termed, should be secured by stakes or short piles to the bank upon which they are deposited.

A plantation of small willows above water level is useful in counteracting the more deleterious effects of floods.

Mississippi River Bank Protection.—The banks of the Lower Mississippi are protected where necessary from erosion below water surface level by means of brushwood mattresses loaded with stone. The portion of the bank above surface level is protected by a covering of stone only, 10 ins. thick, laid to a suitable slope.

The mattresses were deposited from a single barge, or from a couple of barges, placed end to end, so that the combined length of the barges exceeded the width of the mattress. The ordinary size for mattresses was 800 ft. by 250 ft., but some mattresses were 1,000 ft. long by 300 ft. wide. 'The mattresses are constructed on the mattress-barge by laying parallel to the shore, and, 8 or 10 ft. apart, a series of poles, whose aggregate width equals nearly that of the proposed mattress. These poles are small trees from 3 ins. to 6 ins. diameter at the butt, and 25 ft. to 30 ft. long. Smaller poles are then placed at right angles to the larger series, so as to pass alternately beneath and above the successive larger poles, as in basket-work. These smaller poles, when forced into close contact with each other and with the other series, form a tolerably compact web or mattress. When so many of the small poles have been added that they approach the ends of the larger series, whose poles are parallel to the shore, these larger poles are each continued by having another large pole spliced to it, and so on, for the length of the mattress. The brush in the mattress is fastened together frequently with iron wire and cross poles. The whole mattress is strengthened by wire cables about 20 ft. apart, and by ⅝ in. to ¾ in. wire ropes running longitudinally the whole length of the mattress. Transverse cables of wire, about 16 ft. apart, also strengthen the mattress ; and transverse wire ropes in addition are sometimes used.'

As each mattress was woven it was allowed to be floated down stream off the barge by the current, and when a sufficient length had been accomplished it was loaded with stone and sunk, the upper end being sunk first. The customary under-water slope did not exceed 1 in 3, and the depth of the outer edge often ranged from 60 ft. to 100 ft. (*From Report by General C. B. Comstock, on Mississippi River Improvement, to Chicago International Congress*, 1893.)

CHANNEL TRAINING WORKS.

The instability and eccentricity of channels is remedied by training works, comprising (*a*) projecting jetties and groynes, (*b*) longitudinal dykes and embankments, and (*c*) ground sills.

Groynes or Jetties project from the banks to the stream at right angles, or thereabouts (generally within 70° to 90°) to its course, and have the effect of reducing the channel and concentrating the scour of the current within certain bounds. The beneficial effect, however, is largely local, and, in the absence of restraint between the jetties, the stream tends to diffuse

itself over a wider area, so that while the bed may be deepened and improved opposite the ends of the groynes it often becomes actually shallower in the intermediate spaces. To be effective, groynes should be spaced apart not more than five times their own length, and this often renders them less economical than a system of longitudinal dyking, which, on the whole, will be found far more satisfactory and is often ultimately adopted. Groynes should, in fact, only be looked upon as of the nature of a temporary expedient. They may be formed of piling, fascine work, or rubble.

Groynes on the River Waal.—These are so arranged as to point upstream with the axis of the groyne on the concave bank forming an angle of 80° with the projected channel, and that on the convex bank an angle of 70°. This system has been found favourable to the deposit of alluvium between the groynes.

The groynes themselves are formed of a core of sand extending to 11 ft. 6 ins. below ordinary low water. The core is covered with mattresses of fascine work, having a lateral slope of 6 to 4, surmounted by a layer of broken brick and rubble stone. The slope towards the river is 1 in 4. The width of the crown of the groynes is 11 ft. 6 ins., and their height along the boundary of the normal river bed 1 ft. 6 ins. above ordinary low water level, corresponding to about 1 ft. 6 ins. below mean water level.

It is stated that sand forms a satisfactory core if banked in large quantities at a time, and that no harmful results ensue from the slipping away of a certain amount during submergence. A few years after formation the groynes receive a protective covering of basalt.

The River Waal has a velocity varying between 2¼ and 3½ ft. per second. The discharge is about 21,000 cubic ft. per second at lowest water level, and 220,000 cubic ft. during highest floods. (*From Report by M. Baucke to Philadelphia Navigation Congress*, 1912.)

Longitudinal Dykes are walls or embankments of timber, stone, concrete, fascines, or other material built up so that the channel is rigidly confined within definite limits throughout the length treated. At the outlet of the Fen Rivers in the Wash, banks of fascine faggots and clay were constructed 22 ft. wide at the base, 17 ft. high, and 13 ft. wide at the top, at a cost of about 1*s.* 8*d.* per cubic yard. On the River Weser, stone and gravel embankments have been found preferable to fascines on the ground that the surface slopes may be rendered less steep than 45°, which is stated to be the limit for fascine work.

Levees constitute a type of longitudinal dyke. They contract the river channel in its higher stages and protect the adjacent country from inundation. As used in American practice, they are generally banks of earth or spoil, well consolidated, with a central trench forming an impervious connection with the natural ground.

Channel Curves.—The natural tendency of river channels is to form a series of deep water pools on the concave sides of bends, with shoals at the intervening points where the current passes over from one side of the river to the other. A judicious system of training will maintain the natural sequence of these deep pools, at the same time suppressing any unduly sharp bends which might be awkward for navigation. Generally speaking, for vessels of 400 to 600 tons moving at a fair rate of speed a radius of 550 yards should be regarded as a minimum—at low speeds, 220 yards will suffice. The minimum for vessels of very small tonnage (say, 200 tons and under) may be as low as 66 to 88 yards.

Ground Sills are serviceable where there is excessive scour of the bed or undue restriction in width of channel. They have the effect of rendering the fall of the stream more uniform. In German practice they are set from 40 to 50 feet apart, and found to be better than continuous pitching or filling of the bed. They are laid across the river so that their highest levels at the bank are about 12 inches below the normal surface, and they slope downwards to the centre of the stream at an angle of about 1 in 40. On the Mississippi the ground sills consist of either rubble mounds or cribs filled with rubble, or, again, of brush mattresses and stone in alternate layers. Whatever form be adopted, the top should be finished off smoothly to prevent injury to passing vessels. Ground sills may be used where it is desired to raise the low water level or lengthen out a slope.

Storage Reservoirs.—For the augmentation of the flow in dry seasons storage reservoirs have been advocated, and in two instances—the Mississippi and the Volga—have been adopted. Circumstances, however, have to be favourable if they are to prove a satisfactory and economical arrangement. The Volga has its source in a lake and swamp region where land is cheap and unfit for agriculture. The dams required were only 17½ feet high, and a storage capacity of 35,000 million cubic feet was obtained. On the Upper Mississippi above St. Paul, five reservoirs were formed out of an extensive lake area of 480 square miles, with a storage capacity of 93,400

million cubic feet. It is stated that the increase in height obtained at St. Paul during the low water period—about 90 days—averages only 14 inches. The system is not regarded as sufficiently satisfactory to justify its extension elsewhere in the United States. Where there is no original headwater accumulation its adoption is out of the question.

RIVER DREDGING.

The improvement of river channels by means of mechanical dredging has received considerable impetus of late years by reason of the development in power and capacity of dredging plant. The various appliances are described in detail in connection with harbour dredging (*vide* p. 1344, *et seq.*). In some cases, as for instance the Volga, with its tributaries the Oka and the Kama, the application of dredging alone, without the assistance of artificial training works, has proved sufficient to ensure the maintenance of a serviceable channel, while in other cases, notably on the Mississippi and the Mersey, engineers employ both systems conjointly.

Dredging Plant on the Volga.—On the Volga, dredgers work from the shallowest depths up to 20 ft. and consist of both bucket dredgers and suction pumps.

One of the former has a hull 131 ft. by 26 ft. with a draught of 3 ft. 3 ins. It discharges about 300 cubic yards per hour by means of shoots, or 370 cubic yards per hour through a floating pipe-line. Two other dredgers have a length of 157 ft., a breadth of 31 ft. 2 ins., and a maximum draught of 4 ft. 11 ins. They are self-propelling with a speed of 4 knots. The pipe-line is 1,740 ft. in length. The buckets have a capacity of $\frac{1}{2}$ cubic yard, and they are reinforced by centrifugal pumps of 5 ft. diameter. The pipe-line has a diameter of 19 ins. A still more recent dredger is 131 ft. long by 28 ft. wide, with a draught of only 2 ft. 4 ins., a dredging depth of 17 ft., and a working capacity of 196 cubic yards per hour in sandy material.

Particulars of Dredging Plant used on Mississippi River.

All self-propelling, with two main pumping engines, each of horizontal tandem compound condensing type, and centrifugal pumps with water-jet sand agitators.

Details.	Dredger 'Iota.'	Dredger 'Kappa.'	Dredger 'Henry Flad.'	Dredger 'B. M. Harrod.'
Date when built	1900	1902	1902	1906
Cost, complete	20,296*l.*	27,080*l.*	27,080*l.*	48,000*l.*
Material of hull	Steel	Steel	Steel	Steel and iron*
Dimensions of hull	192′×44′×7′	192′×44′×7′	192′×44′×7′	210′×44′×8½′
Draught	4′	4′	4′	5′
Size of engines	16″×26″	15″×30″	15″×30″	20″×34″
Revolutions per minute	165	140	140	140
Stroke	20″	24″	24″	24″
Pumps:				
Diameter of runner	75″	84″	84″	90″
Peripheral velocity, ft. per sec.	53	51·3	51·3	55
Diameter of suction	Two 24″	Two 24″	Two 24″	Two 27″
Width of suction head	23′	23′	23′	32′
Diameter of discharge	32 1/16″	31⅞″	32″	36″
Maximum working depth	20′	20′	20′	20′
Nominal capacity, sand per hour	1,000 cu. yds.	1,000 cu. yds.	1,000 cu. yds.	2,000 cu. yds.
Sand agitators:				
Kind of pump	Duplex comp. cond.	Duplex comp. cond.	Duplex comp. cond.	Centrifugal
Size	16″×15″	16″×15″	16″×15′	Two 12″
Number and diameter of jets	Twelve, ¾″	Twelve, ¾″	Twelve, ¾″	Eighteen, 2″
Pressure	50 to 80 lbs.	50 to 80 lbs.	50 to 80 lbs.	20 lbs.
Boiler:				
Kind	7 Miss. River	7 Miss. River	7 Miss. River	7 Miss. River
Size	44″×30′	44″×30′	44″×30′	47″×28′

* Iron used for hull plating, the piping, and the chimney stacks, as it was found by experience that the life of iron materially exceeds that of steel for such purposes.

(*Extracted from Report by Mr. J. A. Ockerson to Milan Navigation Congress*, 1905.)

Cost of River Regulation.

Country.	River.	Depth.	Length.	Total Cost.	Average Cost per Mile.	Average Fall per Mile.
		Ft.	Miles.	£	£	Ft.
United States	Upper Mississippi (St. Paul to Missouri River)	4½	632	2,050,000	3,244	·44
France . .	Rhone (Lyons to Sea) .	4·1	205	2,689,000	13,000	2·5
Germany .	Rhine	4–10 3–4·1	214	2,636,400	12,200	1·14
Ditto .	Weser (near mouth) .	5–10 3·6–4·6	210	463,300	2,210	1·65
Ditto .	Elbe (near mouth) .	6–10 2·6–4·25	252	2,047,900	8,130	0·98
Ditto .	Oder (near mouth) .	5–8·7	337	1,229,600	3,650	1·29

(*Extracted from Report by Major Harts to Philadelphia Navigation Congress*, 1912.)

RIVER CANALISATION.

The canalisation of rivers is effected by dividing their beds into a series of reaches separated by dams, or weirs, which are provided with a communicating lock, or locks, arranged generally at one side. Dams are either fixed or movable, and they may also be permeable or impermeable. Fixed, impermeable structures are generally resorted to as being more economical in construction and more convenient in action. Movable dams may be said to be required only in cases of excessive flood flow, or where the conditions admit of free navigation during appreciable periods. Fixed weirs are usually constructed of solid stonework, rubble, piling or concrete provided with

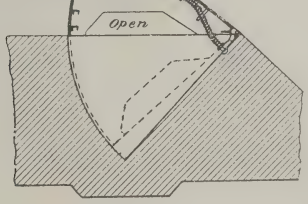


Fig. 1.—Section of Weir near Bremen.

the requisite sluices and overflows. Movable weirs are more often of timber or iron framework with mechanism for lowering and raising them, either wholly or in part by means of leaves or panels. They are of various types with distinguishing names, such as Needle, Chanoine, Boulé and Bear-trap.

Sector Weir near Bremen.—A notably large sector weir which constitutes a development of the bear-trap type, across the River Weser, near Bremen, is illustrated in cross sectional outline in fig. 1. The weir is in two lengths of 177 ft. each, and holds up the water on an average to a height of about 12 ft.; in winter, the height rises to 18 ft. The structure forms the hollow horizontal sector of a cylinder of 21½ ft. radius turning on a horizontal shaft, the angle of the sector being about 45 degrees. The weight of each sector is 129 tons. A description of the weir with the method of raising and lowering is contained in *Engineering* of July 7, 1916.

TYPES OF UNITED STATES RIVER REGULATION WORKS.



FIG. 2.—Brushwood and Stone Dam, Upper Mississippi.

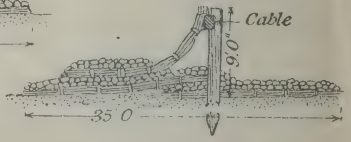


FIG. 3.—Pile and Brushwood Dam, Upper Mississippi.

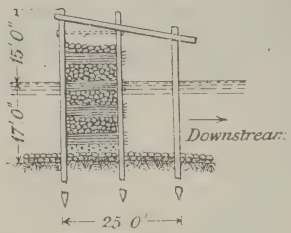


FIG. 4.—Pile, Brushwood, and Stone Dyke, Arkansas River.



FIG. 5.—Pile and Stone Dam, Alleghany River.

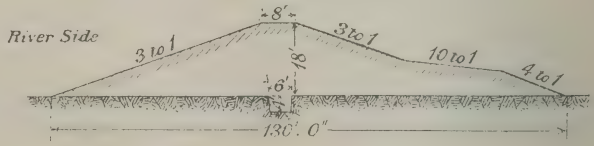


FIG. 6.—Levee on the Lower Misisssippi.

COST OF RIVER CANALISATION.

River.	Length Canalised. Miles.	No. of Locks.	Depth. Feet.	Fall in Feet per Mile.	Total Cost.	Cost per Mile.	Operation and Maintenance. Total.	Operation and Maintenance. Per Mile.
					£	£	£	£
FRANCE:								
Saone	232	30	8·2	·85	1,755,000	7,550	12,100	52
Seine (Montereau to Paris)	61	12	—	·85	991,000	16,300	10,870	178
Seine (Paris to Rouen)	145	9	10·5	·85	3,500,000	24,200	18,450	127
Seine (New Works)	140	9	—	—	2,535,000	18,100	—	—
Yonne	67	26	—	2·43	1,118,000	16,700	6,730	100
Marne	113·5	19	7·25	1·16	1,047,000	9,250	7,980	70
Aisne	35·5	7	—	—	195,400	5,470	2,130	60
GERMANY:								
Saar	19·5	6	4·25–7·9	2·15	354,400	18,170	6,410	330
Main	23·5	5	5·9–8·9	1·40	448,200	19,070	8,010	340
Fulda	17·0	7	6·6–11·9	3·30	157,000	9,240	4,385	260
Salle	89·5	15	4·4–8·8	1·27	383,400	4,280	9,080	100
Unstrut	40·5	12	2·5–8·5	1·72	105,600	2,600	2,840	70
Oder	53·2	14	—	1·90	1,211,800	22,780	43,420	815
UNITED STATES:								
Black Warrior	91	7	6	2·76	508,080	5,583	25,207	275
Coosa	25	3	3	2·58	209,687	8,386	1,587	64
Allegheny	25	3	—	2·06	267,574	10,703	9,328	373
Monongahela	131	15	7–8	2·4	1,369,171	10,452	34,673	265
Muskingum	84	10	6	1·55	—	—	10,026	120
Great Kanawha	90	10	6	0·84	844,765	9,394	16,361	187
Kentucky	226	11	6	0·87	580,662	2,578	31,989	141
Green and Barren	190	7	5	0·49	327,682	1,725	15,177	80
Cumberland	131·4	8	6	0·67	525,076	3,996	6,611	50
Illinois	194	2	7	0 05	303,145	1,563	2,568	153

(*Extracted from Report by Major Harts to Philadelphia Navigation Congress*, 1912.)

Lateral Canals.

As an alternative to river canalisation and where the channel exhibits features which do not conveniently lend themselves to treatment, an independent lateral canal may be constructed, generally following the lie of the river, but also making use of any facilities which may offer themselves for straightening and rectifying the course.

The River Rhone, in the chequered history of its amelioration, has been furnished with three lateral canals to overcome the difficulties of navigation at its natural mouth. Each in turn of the earlier two became inadequate for dealing with the traffic which accrued from its construction, and now there is a recently constructed artificial waterway to the port of Marseilles which is described in detail at p. 1376.

COST OF LATERAL CANALS.

Locality.	Length in Miles.	Locks.	Total Cost.	Cost per Mile.	Maintenance and Operation. Total.	Maintenance and Operation. Per Mile.
			£	£	£	£
FRANCE:						
Loire, Digion to Briare	121·7	37	2,071,000	17,000	6,330	52
Garonne	120	53	2,484,000	20,700	7,500	62½
UNITED STATES:						
St. Mary's Falls	1·1	2	1,611,450	1,464,955	20,620	18.740
Des Moines Rapids	8	3	316,600	39,576	7,754	969
Muscle Shoals	18	11	638,345	35,463	10,280	571
Colbert Shoals	8	1	441,588	55,200	—	—
Cascades Canal	¼	2	764,065	1,528,130	2,877	5,751

(*Extracted from Report by Major Harts to Philadelphia Navigation Congress*, 1912.)

BRITISH CANALS.

The following summary of the conditions prevailing in Great Britain is extracted from the Report of the Royal Canal Commission (1909):

'On the whole, the waterways may be roughly divided into two classes, those having locks of more, and those having locks of less, than 14 ft. in width. Corresponding with these two classes of locks are two classes of vessels usually known respectively as barges and narrow boats, the latter being often called "monkey boats," and chiefly in use on the Southern and Midland canals of England. The barge usually measures from 60 to about 72 ft. in length by 14 ft. in width of beam; the narrow boat is about 70 to 72 ft. in length, but only 7 ft. in width. The narrow boat when loaded, and drawing about 3 ft. 3 ins. of water, will carry about 30 tons over many of the canals. The barge will carry about twice that weight, with the same draught. Both the narrow boat and the barge could carry a heavier cargo if the depth of water were increased sufficiently.

'The usual length of lock, both on the wider and the narrower waterways, in the South and the Midlands, is, accordingly, about 75 ft. But on the wider, or barge canals, the locks are usually between 14 and 15 ft. or more in width, and on the narrow canals between 7 ft. and 8 ft. In both classes of lock the depth of water on the sill varies, speaking very generally and with many exceptions, from 4 ft. to 5 ft.'

	Miles.	Chains
Canals with locks under 14 ft. (narrow)	1,165	5
" " " over 14 ft. (barge canals)	762	29*
Navigations under 14 ft.	478	57
" over 14 ft.	834	20

* Including the Manchester, Gloucester and Berkeley, and Exeter Ship Canals.

DEVELOPMENTS IN CANAL CAPACITY.

In France and South East Belgium the standard boat carries about 300 tons, while in Germany the newest canals are adapted to boats of 600 tons and upwards. In this country opinion as to future policy is divided between the adoption of the 300-ton type and the retention of the smaller class of boat in general use, not exceeding 100 tons. The following are the dimensions recommended for the two classes respectively by Sir J. Wolfe Barry and Partners, who were called in to advise the Royal Commission on the matter:

Dimensions.	100-ton Boat. Canal.	300-ton Boat. Canal.
Length of barge over all	80 ft.	115 ft.
Beam " "	14 "	21½ "
Draught	5 "	6½ "
Area of immersed midship section of barge	69 sq. ft.	138 sq. ft.
Cross sectional area of canal	350 " "	690 " "
Depth of canal	7 ft.	8½ ft.
Top width of waterway in open country	59½ "	92½ "
" " " " in towns	51¾ "	83 "
Width of waterway at bridges	32 "	48 "
Minimum headway of new bridges	10 "	13 "
" " " existing bridges	9 "	13 "
Ruling radius for bends of canal	12 chains	17 chains
Locks: Length, mitre to mitre of gates	253 ft.	266 ft.
" Width between side walls	15 "	22½ "
" Depth on sills	6½ "	8 "

GOVERNING DIMENSIONS OF LARGE BOATS AND CANALS AS DETERMINED BY FRENCH COMMISSION OF PUBLIC WORKS.

Tonnage of Boat.	Dimensions of Boats.			Features of Navigable Waterway.						
						Curves.		Locks.		
	Length.	Beam.	Draught.	Width at 6½ Ft. below Surface.	Depth on Axial Line.	Increased Width.	Radius R.	Serviceable Length.	Width.	Depth on Sill.
	Ft.	Ft.	Ft.	Ft.	Ft.	Ft.	Ft.	Ft.	Ft.	Ft.
300	126·3	16·4	5·9	32·8	7·9	1,246/R	984	132·8	19·7	8·2
600	196·7	23·3	5·9	51·3	7·9	3,018/R	1,919	213·2	29·5	8·2
900	246·0	28·2	5·9	65·6	8·2	4,724/R	2,690	262·4	34·4	8·2
1,200	295·2	32·8	5·9	77·7	8·4	6,888/R	3,509	311·6	39·4	8·2

A boat, 24 to 25 ft. wide by about 200 ft. long, with 6½ ft. draught, has been recommended by experts as a suitable type for a 600-ton barge on the Canal du Nord.

On the Rhone, barges of the same width and 220 ft. long have been put into service, carrying 650 tons on a draught of 6 ft.

The type of boat on the Rhine is the lighter of 246 ft. by 36 ft., which with the same draught carries about 900 tons, but when immersed to 6½ ft. is capable of taking 1,200 tons, with a displacement coefficient of 0·75.

(*'Annales des Ponts et Chaussées,' March–April* 1920.)

Capacity of German Inland Waterways.

Inland waterways have reached a very high pitch of development in Germany. Certain inland harbours surpass important seaports in the amount of traffic handled. The size of craft accommodated far exceeds anything attempted in this country. The following is a statement of the lengths of waterway available for successive grades of tonnage:—

	Tons.	Kilometres.
For vessels of	3,000 or more	615
,, ,, from	1,200–3,000	1,463
,, ,, ,,	600–1,200	2,064
,, ,, ,,	400– 600	2,607
,, ,, ,,	250– 400	1,705
,, ,, ,,	170– 250	1,565
Smaller vessels	—	4,515

An important project now in contemplation is the Rhine-Neckar-Danube Canal, which will complete the waterway connection right across Europe from the North Sea to the Black Sea. The length of the proposed canal will be about 165 miles, of which 125 miles come upon the Neckar section from Mannheim to Plochingen, and the remaining 40 miles on the section Plochingen-Ulm.

CONTINENTAL CANALS.

Canal du Nord, France, duplicating the St. Quentin Canal, which forms part of the navigable waterway connecting Paris with the Northern parts of France.—The ordinary cross

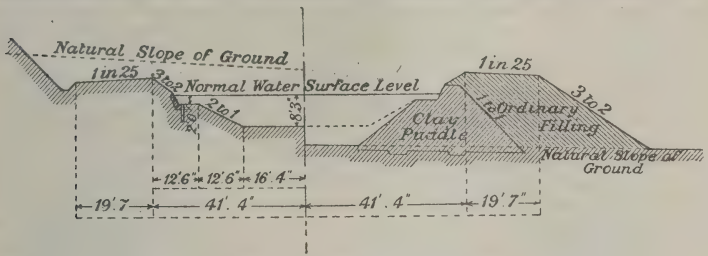


FIG. 7.—CANAL DU NORD.

Section in Excavation. Section in Filling on Impermeable Ground.

section has a minimum width of 33 ft. at the bottom and 39 ft. at a depth of 6½ ft., with a navigable depth of 8 ft. Towpaths, 13 ft. to 20 ft. wide on each bank, one for upstream and one for downstream traffic. Locks provided to accommodate two 300-ton barges in tandem; dimensions, 279 ft. long by 19½ ft. wide by 8 ft. deep. Lifts, 13 ft. to 22 ft., with minimum reach of 1,100 yards between locks. Tunnels of two types: those for single train of boats are 33 ft. wide at springing of arch, and those for double trains of boats abreast are 52½ ft. wide at springing. Each type has two side platforms, 6½ ft. wide carried on piles. Largest tunnel at Ruyaulcourt, which is 2¼ miles long. Canal designed for mean speed of two miles per hour, with barges mechanically hauled. Fig. 7 gives typical sections.

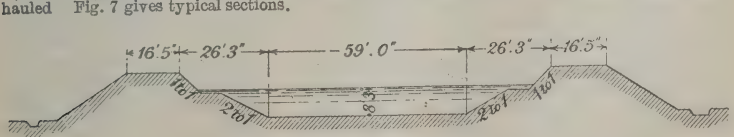


FIG. 8.—Brussels-Charleroi Canal.

The Rhone-Marseilles Canal.—The cross section in the straight lengths gives a width of 82 ft. at a depth of 6½ ft., while the normal depth is 8 ft. 2 ins., and that in the outer portion approaching Marseilles 10 ft. Sills and inverts throughout are laid to this lower level, in order to admit of future deepening. The width of the canal is narrowed to 59 ft. where it passes through the Nerthe Mountain (Rove Tunnel). The canal section on the straight portion has been fixed at five times the immersed section of the present Rhone barges, when loaded to their maximum capacity of 600 tons on a 5 ft. 9 in. draught. These barges have a beam of 26 ft. 3 ins. The dimensions of the locks are 525 ft. internal length, by 52½ ft. in width. The lock at Arles has a lift of 23 ft. at low water. The total cost of the canal is estimated to exceed 3,560,000*l.* The section of the Rove Tunnel shown in figs. 9 and 10 cost 52*l.* per ft. run, of which the masonry work accounted for 16*l.* per ft. run.

Modern German Canals.—Herr Germelmann, in a Report to the Philadelphia Navigation Congress 1912, remarks that in Germany high economic value is attached only to large efficient canals, suitable for vessels of 213 ft. in length by 26¼ ft. in breadth (600 ton barges), or, at least, for vessels of 180½ ft. in length and 26¼ ft. in breadth (400-ton barges) with draughts of 5 ft. 9 ins. The cross sectional area of canals recently constructed is as follows:—Spree-Oder Canal from 705 to 760 sq. ft.; Dortmund-Ems Canal, in cuttings, 640 sq. ft.; in embankment, 810 sq. ft.; Teltow Canal, 652 sq. ft.; Ems-Weser Hanover Canal, in cuttings, 662 sq. ft.; in embankment, 780 sq. ft.; Rhine-Ems Canal, 986 sq. ft.; Berlin-Stettin Canal, about 732 sq. ft.

Trollhätta Canal, Sweden.—This canal, first opened in 1607 and recently enlarged and extended at a cost of about 1,300,000*l.*, has a length of about fifty-two miles, and connects Lake Vänern with the Kattegat, between which there is, at ordinary water level, a vertical difference of 146 ft. The canal is built to accommodate vessels of 13 ft. 1½ in. draught, but with a view to future developments the locks are constructed to pass vessels of 16 ft. 5 ins. draught. The normal bottom width of the canal is 79 ft., but this, at passing places, is increased to 95 ft. and 115 ft. The maximum depth in rock cutting for vessels drawing 13 ft. 1½ in. is 14 ft. 5 ins., and in earth excavation, 18 ft. 3 ins. For the 16 ft. 5 in. vessel these dimensions are increased to 18 ft. and 19 ft. 7 ins. respectively. The lock chambers have a length of 295 ft. and a width of 45 ft., with 18 ft. of water over sills. The greatest change in level at any one lock is 26 ft.

New York State Barge Canal.—This canal, the inception of which dates back to the beginning of last century, has recently been enlarged so as to afford accommodation not only for the largest class of barges at present constructed, but also for those up to 3,000 tons which may be built in the future. A minimum depth of 12 ft. has been provided, with a minimum width of 94 ft. in rock cuttings and of 125 ft. in earth excavation. The locks, 57 in number, have chambers 328 ft. long and 45 ft. wide and are capable of passing vessels with maximum dimensions of 300 ft. by 44½ ft. The lock at Little Falls has a range of 40½ ft., exceeding any single lift on the Panama Canal. The syphon lock at Oswego is the first of its type in the United States, and with a range of 25 ft. is probably the largest of its kind in existence. A description of it is as follows (*vide* '*Engineering*,' August 2, 1918). The general design of the culverts is not unlike that of an ordinary lock, except that at the upper and lower ends the culverts are curved upwards so as to form necks. These rise a little above the highest water level and are shut off from all communication with the outer air, except through the operating pipes. The flow of water in the syphon is started by means of tanks, one of which is built in each wall near the upper end, and communicates through pipes with the upper and lower levels and with both syphons in the same wall; they are shut off from all other communication with the outer air. The cycle of operations is as follows: The tank is first filled with water, then the intake valve is closed and the outlet valve opened. In consequence there is a body of water suspended by its weight, but tending to escape into the lower pool, and thus producing the necessary vacuum. Therefore, on opening the air valve, the air in the syphon rushes towards the vacuum, and water begins to flow up and over the crest in the neck. When using both syphons, the lock chamber can be filled in from 4½ to 5 mins., and it can be emptied in from 5½ to 6 mins. It has been found that the draught of the vacuum is such that, soon after the flow has started, the direction of the air is reversed and the vacuum is restored in the flask. The operating power is accordingly self-renewing except for a small amount of air leakage.

Cost of Canal Construction and Improvement in Great Britain.

In 1905 Mr. J. A. Saner estimated the constructional cost of new canal, suitable for two lighters of not less than 250 tons carrying capacity, or 200 tons when self-propelled, with locks 230 ft. by 22 ft. having 6½ ft. draught of water over sills, the canal itself being 40 to 45 ft. wide at bottom, 80 to 85 ft. wide at top, and 8 ft. deep in centre, at 30,000*l.* per mile, and the cost of improving existing routes to reach the same standard at 15,000*l.* 'These figures are based on the actual cost of the Weaver Navigation and the Manchester Ship Canal; the former has cost about 42,000*l.* per mile, and the latter about 440,000*l.* per mile, inclusive of docks in each case. The Worcester and Birmingham Canal originally cost 20,000*l.* per mile and between 1879 and 1891, the French improved 2,500 miles of river, 2,250 miles of canal, and built 875 miles of new canal, for a total of 21,000,000*l.*, or an average of 3,734*l.* per mile; so that the foregoing figures should be ample.' (*Saner on Waterways in Great Britain, Min. Proc. Inst. C.E.*, vol. clxiii.)

RHONE-MARSEILLES CANAL. SECTIONS THROUGH ROVE TUNNEL.

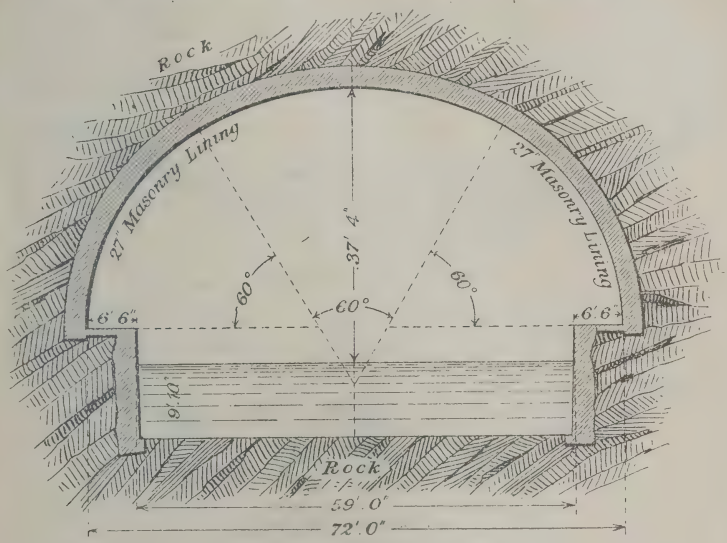


FIG. 9.—In Sections of Low Thrust.

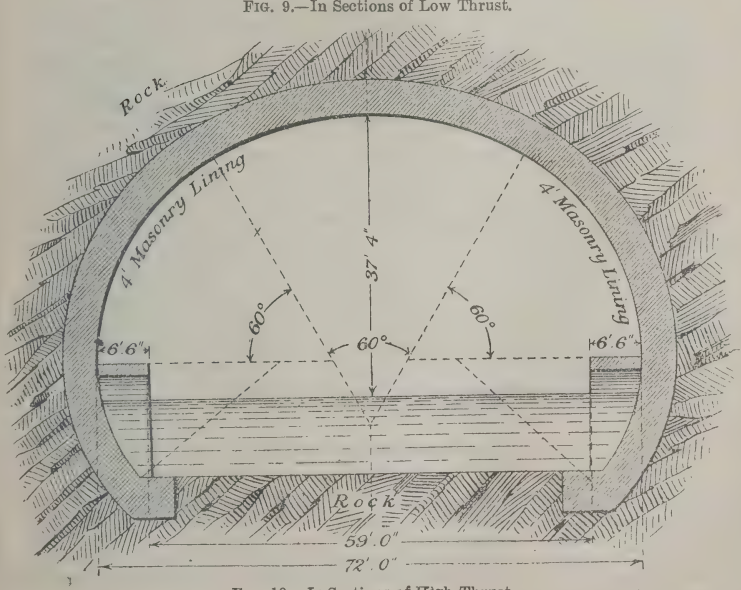


FIG. 10.—In Sections of High Thrust.

EXAMPLES OF MODERN GERMAN CANALS.

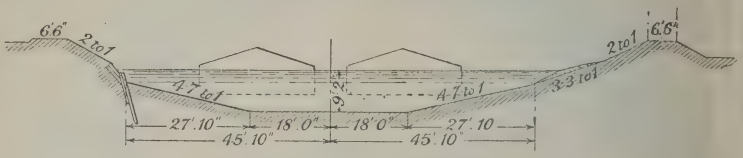


FIG. 11.—Spree-Oder Canal.

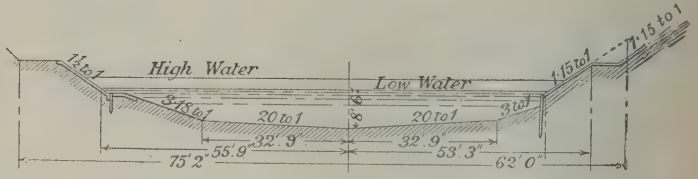


FIG. 12.—Teltow Canal.

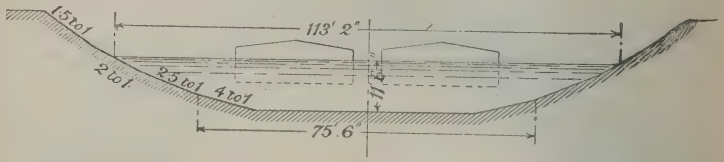


FIG. 13.—Rhine-Ems (Herne) Canal.

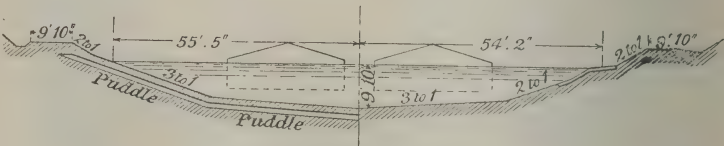


FIG. 14.—Berlin-Stettin Canal.

RELATIVE ADVANTAGES OF LOCKS AND LIFTS ON CANALS.

Changes of level in canals and canalised rivers are effected by (1) locks, and (2) mechanical lifts, the latter being either (*a*) vertical or (*b*) on an inclined plane.

Locks are the simplest and most stable means of attaining the desired object. There is no question of their superiority for all differences of level up to 12 or 15 ft., and circumstances are generally favourable for their adoption for differences up to 25 or 30 ft., and even more. Among

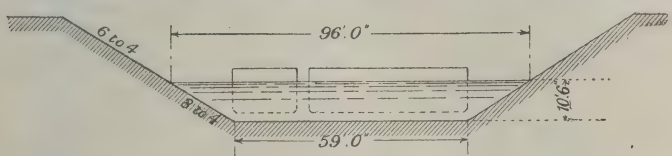


FIG. 15.—Bruges-Ghent Canal (General Section).

the older canals may be instanced a lock on the River Moldau, which has a lift of 29 ft., and another on the St. Denis Canal, which has a lift of 32½ ft. Such heights used to be considered as marking about the limit of the advantageous employment of locks over mechanical appliances. For

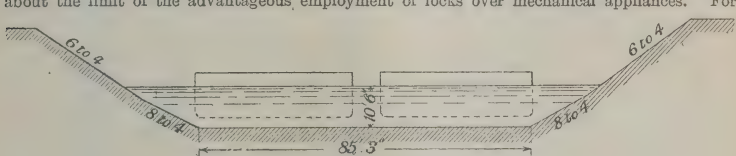


FIG. 16.—Bruges-Ghent Canal (Side Bay).

greater lifts, the strain on the lower gates became very considerable, and the consumption of water in the majority of cases was more than could be afforded.

It is true that by the aid of side ponds and syphons a large proportion of the water used in lockage could be saved—as much as 50 or 60 per cent. in many cases—but even allowing for this the loss was heavy and a mechanical lift was almost universally substituted.

In modern German practice, however, a very striking advance has been made owing to the development in size of vessels, which have now reached to a tonnage of 600 to 1,000 tons. A lock recently constructed at Henrichenburg has a lift of 46 ft. It is provided with five side ponds for the economisation of water, the saving amounting to about 76 per cent. The chamber (312 ft. long by 33 ft. wide with 9 ft. 10 ins. depth of water over sill) is built in concrete on a rock foundation, requiring an invert only 19½ ins. thick. Other locks are being constructed which attain lifts of over 60 ft. The former limit therefore can no longer be said to apply, except in so far that, if it be exceeded, due provision will have to be made for the increase in strength of the gates and side walls, and for the economisation of water.

An appropriate test to apply to the serviceability of locks is the gradient or slope of the canal route. Where this is fairly regular and does not exceed 1 in 100 the rise lends itself to convenient subdivision into reaches of a quarter of a mile each, or more, separated by single locks of about 13 ft. lift. Under ordinary circumstances this is found to be a suitable standard for barge traffic, with barges of moderate tonnage, such as are customary in this country.

Where, on the other hand, the level of the ground changes abruptly, locks of higher lift or a series of locks may be employed, but only if an adequate supply of water is forthcoming to make good the loss from lockage. Where water is scarce it will be necessary to fall back upon some system of mechanical transfer.

Mechanical Lifts are generally more expeditious and time saving in action than locks, but they are also as a rule more expensive, and from their nature they are less durable and more liable to derangement.

From a number of examples of direct acting vertical lifts may be mentioned those at Anderton (Cheshire), Les Fontinettes (France), and Peterborough (Canada).

Lift at Anderton.—In this case the difference in level is 50 ft. The lift consists of two wrought-iron troughs, each 75 ft. long by 15½ ft. wide, originally worked hydraulically and counterbalancing one another, so that it was only necessary to reduce the depth of water in the lower trough by 6 ins. in order to set the apparatus in action. Owing to excessive wear and tear which developed in the hydraulic rams and cylinders, these were replaced in 1907–8 by a system of suspension gear passing over pulleys on an overhead gantry with counter weights at

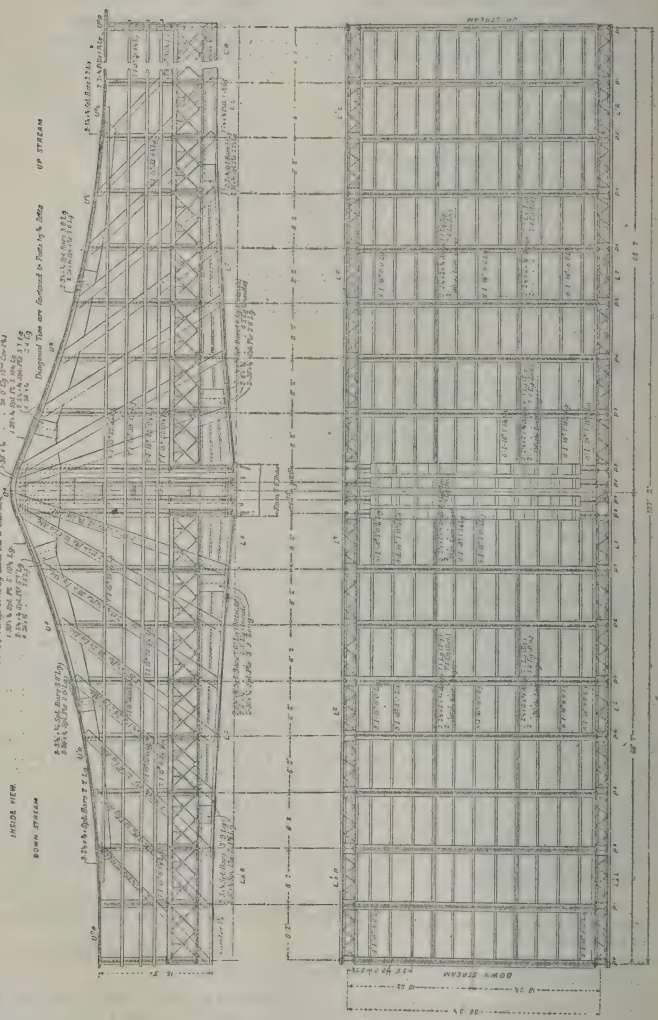


Fig. 17.—Internal View and Plan of Canal Lift Lock at Peterborough, Canada.

the free ends of the ropes. The total weight so suspended is 1,000 tons, each of the caissons weighing 250 tons, of which 80 tons is iron and the remainder water. The reconstructed lift is worked electrically. The main 30 B.H.P. motor runs at about 750 revs. per min., and the large 6 ft. pulleys make about 1 revolution in 2 minutes.

Lift at Les Fontinettes, near St. Omer, France.—The lift consists of two iron troughs containing water and each capable of taking a boat of 300 tons. Each trough is bolted at its centre to the head of a ram or piston, working in an hydraulic press. The two presses are in intercommunication by means of a pipe and constitute an hydraulic balance, vertical movement being obtained by admitting a surcharge of water to the upper tank. The surcharge is 12 ins. in depth, equal to about 64½ tons weight. The difference in level is 43 ft. The troughs are 129 ft. 7 ins. long by 18 ft. 4½ ins. wide, with a minimum depth of water of about 7 ft. The ends are closed by lifting gates. The rams or pistons are 57 ft. long, 6 ft. 6¾ ins. diameter, and 2 ft. 8 ins. thick. They are formed in sections 9 ft. 2 ins. long, flanged inside, bolted together

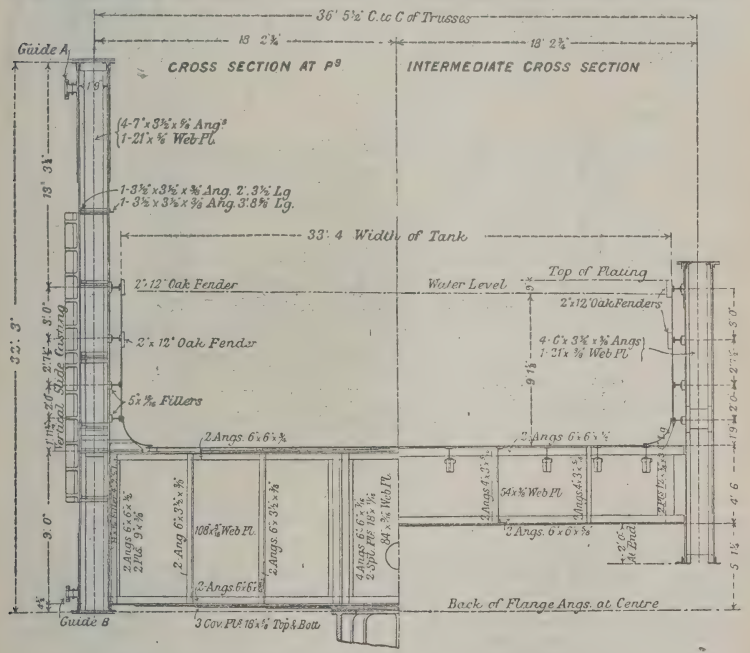


FIG. 18.—Cross Sections of Canal Lift Lock at Peterborough, Canada.

and made water-tight by a ring of sheet copper inserted between the flanges. The hydraulic presses are 71 ft. high and 6 ft. 10 ins. diameter, resting upon concrete foundations at the bottom of excavated pits.

When one trough is raised to summit level there is a margin of 1⅞ ins. between its upstream extremity and the downstream end of the canal aqueduct. At the moment of lifting the gates to allow of the passage of a boat in or out, the joint is made good by indiarubber hose running round the end of the aqueduct and protected by springs. This hose is inflated by air at a pressure of 1½ atmospheres. The same connection is made at the lower level.

The machinery consists of two turbines, one of 50 H.P. and the other of 15 H.P.

The actual time of descent and ascent of the troughs is five minutes. An entire operation, including entry and exit of barges, takes twenty minutes.

The total cost of the lift was about 74,800*l.*

Lifts on the Trent Canal, Canada.——There are two large lifts, one at Peterborough and the other at Kirkfield. The former consists of a pair of tanks, or chambers, 137 ft. long by

33 ft. 4 ins. wide, and with 9 ft. depth of water. Each tank is supported by a ram 7 ft. 6 ins. diameter worked hydraulically, so that the descent of one chamber automatically forces up the other. The range of lift is 65 ft. Under ordinary conditions the upper chamber is held in position at a level about 6 or 8 ins. below the limit of stroke, and this surcharge of water is sufficient, when the by-pass is open, to overcome friction and give the necessary movement. The tanks are supported by openwork lattice trusses, and the total load of water and steel is carried to the top of the ram by four plate girders 9 ft. deep. The following is a description of the gates, which are in pairs, one closing the chamber end and the other the canal reach. 'Each gate is made up of three main 15-in. channels, with a small plate and angle girder at the top, and is stiffened vertically by 10-in. I beams. In every space between these vertical I beams there are placed two galvanised iron air chambers about 11 ft. long. These have the effect of making the gates practically buoyant, and this decreases markedly the amount of work which has to be done in raising the gates from a horizontal to a vertical position. The water-tight plating is, in each case, on the outside of the gate, and the hinges are at the bottom. In the case of the lower reach gates and chamber gates, the hinge for the reach gate is 2 ft. 4 ins. below the hinge of the chamber gate, and 1 ft. 10 ins. separates them in a longitudinal direction. Consequently, the chamber gate is approximately 10 ft. deep, while the reach gate is about 12 ft. 6 ins. deep. As it is never necessary to operate any gate singly, the gates are arranged to work in pairs. At

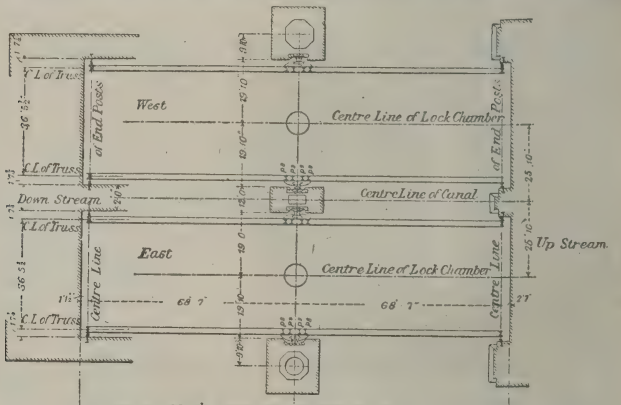


FIG. 19.—General Arrangement of Canal Lift Lock at Peterborough, Canada.

each end of the reach gate there is a pinion meshing into a circular rack set into the dock wall. The centre of the pitch circle of this rack is, of course, coincident with the centre of the hinge of the reach gate. The pinions above referred to are connected by a horizontal shaft running right across the gate, and power is applied to this shaft by means of a sprocket with chain, driven from another shaft, the centre of which is the same as that of the hinge. This shaft is actuated by one of the hydraulic gate engines provided.

'The seal between the reach-gate and the reach is accomplished by a small rubber strip, which lying over the adjacent surfaces is made water-tight by hydrostatic pressure. A similar arrangement is used for making the joints between chamber-gate and chamber water-tight. The seal between the end of the chamber and the end of the reach is accomplished by a collapsible rubber tube, which, when the chamber is away from the reach, lies almost flat against the end of the reach-gate frame. When, however, the chamber is in its proper position, the tube is inflated by compressed air at 90 lbs. per sq. in., and a water-tight joint is obtained.'

The hydraulic cylinders are plain steel castings, built up in flanged sections 5 ft. 3 ins. long. The inside diameter is 7 ft. 8½ ins., and the metal is 3½ ins. thick. The joint packing is of copper, ⅞ in. wide and $\frac{1}{10}$ in. thick, with $\frac{7}{16}$ in. diameter lead wire in press sections. The rams are of cast iron in flanged sections, also 5 ft. 3 ins. long, 90 ins. external diameter, thus giving a water space of 1¼ in. completely round the rams. The jointing is the same as that for the cylinders, except that the lead ring is omitted.

A very full description of this lock appeared in *Engineering* of June 9 and 16, 1916, from which the above particulars were extracted.

Inclined Planes represent a class of mechanical appliances suitable for intermediate conditions, viz., a route gradient too steep for single locks with intermediate reaches, and not suffi-

DIMENSIONS AND EQUIPMENT OF CERTAIN AMERICAN LOCKS.

	Length in feet.	Width in feet.	Depth at low water in feet.	Lift in feet.	Water Supply.	Valves.	Gates.	Gates operated by	Intermediate Gates.	Double Main Gates.	Means for bringing vessels into locks.
Allegheny River	287 to 298	55 to 56	8	7 to 12	Culverts in walls and under sills	Butterfly	Timber, steel	Hand, spar and cable	No	No	None.
Black Rock Harbour	650	70	22	5	Wall culverts	Stoney	Steel	Electric spar	Yes	No	Electric capstans.
Cascades of Columbia River	450	90	8	24	Wall culverts	Butterfly	Steel arched	Hydraulic cables	No	No	Hydraulic capstan.
Louisville and Portland (Old Lock)	310	80	—	11 to 22	Valves in gates	Butterfly	Timber	Steam chains	No	No	Winding engine.
Louisville and Portland (New Lock)	600	85	11	29	Culvert in walls	Butterfly	Steel	Air chain	No	No	Winding engine.
Monongahela River (New)	360	56	11	4 to 11½	Wall culverts	Butterfly	Steel	Air	No	No	None.
Ohio River	600	110	9½	9	Wall culverts	Butterfly	Steel rolling	Air or steam chain	No	No	None.
St. Mary's River (Weitzel Lock)	515	60 to 80	12½	17 to 20	Floor culverts	Butterfly	Timber	Hydraulic cables	No	No	None.
St. Mary's River (Poe Lock)	800	100	17·7	17 to 20	Floor culverts	Butterfly	Steel arched	Hydraulic cables	No	Yes	Hydraulic capstan.
St. Mary's River (New Lock)	1,350	80	24½	17 to 20	Floor culverts	Butterfly	Steel girder	Electric cables	No	Yes	Electric capstan.
St. Mary's River (Canadian Lock)	900	60	18	17 to 20	Floor culverts	Butterfly	Timber	Electric cables	No	Yes	None.
Panama Canal	1,000	110	40	30 to 60	Wall and floor culverts	Stoney and Cylindrical	Steel girder	Electric strut	Yes	Yes	Electric locomotive.

(*From Report by Col. H. F. Hodges, U.S. Army, to 12th Int. Nav. Cong., Philadelphia*, 1912.)

ciently abrupt at any one point for a vertical lift. Generally speaking, gradients of between 1 in 8 and 1 in 10 are most favourable, but they may run up to 1 in 75, or 1 in 80, and, on the other hand, inclined planes are sometimes adopted where the rise is much steeper, as, for instance, at Foxton on the Grand Junction Canal, where the gradient is 1 in 4. The Foxton incline is similar in character to the balanced vertical lift, consisting of two caissons travelling transversely, each maintaining a barge of 70 tons afloat. It is claimed for inclined planes that, in comparison with locks, they save water, and, in comparison with vertical lifts, they save time, since a boat is travelling forward simultaneously with its alteration in level. Moreover, they do not require such deep or expensive foundations as the lift proper. In spite of these advantages, inclined planes have not attained a very marked degree of acceptance among canal engineers.

Canal Curves.—The formula adopted in Belgium for the increased width at curves is

$$S=\frac{A^2+a^2}{R}.$$

Where S is the increase in bottom width to be added to the normal semi-width on the convex side of the curve, R is the radius of the curve, and A and a are the half lengths of the boats which have to pass one another. The units are all in metres, and the value of S must therefore be multiplied by 3·28 to bring it to feet. The increased width is splayed into the straight length at a distance of 2 $(A+a)$ from the commencement of the curve.

LOSS OF WATER ON CANALS.

Rankine summarises the sources of loss of water on canals as follows :

Waste of Water by leakage of the channel, repairs and evaporation *per day* = area of surface of canal × ¼ of a foot, nearly.

Current from the higher towards the lower reaches, produced by leakage at the lock gates *per day*, from 10,000 to 20,000 cubic ft. in ordinary cases.

Lockage.—Single locks are more favourable to economy of water than flights of locks. At a single lock, single boats ascending and descending, alternately, cause less expenditure of water than equal numbers of boats in trains. On the other hand, at a flight of locks, boats in trains cause less expenditure of water than equal numbers of boats ascending and descending alternately. For this reason where a long flight of locks is unavoidable, it is usual to make it double, using one flight exclusively for ascending boats and the other exclusively for descending boats.

Loss by Percolation from Erie Canal.
In Cubic Feet per Second per Mile of Canal.

Location.	Material in Bank.	Cub. ft. per Sec. per Mile of Canal.
Near Dunsbach Ferry	Gravel	1·68
Near East of Schenectady	Sandy loam	1·50
Near West of Schenectady	Gravel	2·24
East of Amsterdam	Gravel	3·03
West of Amsterdam	Coarse gravel	12·89
Canajoharie	Gravel	2·00
Fort Plain	Gravel	6·85
East of Utica	Sandy loam	4·45
East of Rome	Sand and gravel	8·48
West of Rome	Clay loam and gravel	1·75

Note.—The Erie Canal has bottom widths of 52½ ft. and 42 ft. and depths of 7 ft. and 9 ft. in various portions.

Canal Bank Protection in Italy.—The sandy banks along the Candiano Canal in the province of Ravenna are strengthened with a row of reinforced concrete piling. The king piles, 10 to 16 ft. long and 8 ins. square, are driven at intervals of 10 ft. They are secured together at the top by a longitudinal runner 8 ins. by 8 ins., behind which is driven a row of sheet piling from 5½ to 6½ ft. long and 2 ins. thick. The length of the piles depends upon the nature of the ground and the depth of water, and, where necessary, further security is obtained by anchorage tie rods and bars to short piles in the rear. At points where it was possible to remove the water from the canal, or where the bottom was occasionally exposed, it was considered desirable and economical to revet the banks with a surfacing of reinforced concrete 2½ ins. thick in which the reinforcement consisted of expanded metal ·4 to 1·6 in. mesh and ·2 to ·32 lbs. per sq. ft. Where the canal bottom is not subject to erosion during floods, this revetment is continued down as far as 18 ins. above the level of the bottom, and the toe is protected by rubble. In cases of erosive action there is a concrete foundation or sill, sometimes supported by piling : and where the water level cannot be lowered sufficiently for the formation of a sill, the toe of the revetment rests against sheet piling.

TRACTION AND HAULAGE.

Means of Traction.—On ordinary small barge canals horse traction has hitherto remained the principal means of traction, although locomotives have been tried from time to time, generally without success. On the larger canals, such as those on the Continent and abroad, tug haulage is frequently employed and some vessels are self-propelled. Ship canals are navigated by vessels under their own steam, but for passage through the locks of the Panama Canal electric locomotives are provided.

Horse Traction on a straight reach is most effective at speeds between 2½ and 3 miles per hour. Within these limits a steady pull of between 100 and 125 lbs. can be maintained, which is sufficient for loads up to 60 tons. There is the further consideration that at higher speeds the wash against the banks becomes excessive for unprotected surfaces. Where tugs or locomotives are employed some form of bank protection becomes essential.

As regards river navigation Rankine gives the following formula as a rough estimate of the effect of the current of a stream on the load which one horse is able to draw against at a walk.

Load drawn against current = load drawn in still water $\times \left(\frac{3{\cdot}6}{3{\cdot}6 + v}\right)^2$; v being the velocity of the current in feet per second.

Cable Towage.—Lévy system, as adopted on St. Maur Canal between Paris and Joinville.—Cable weighs 2·45 lbs. per lin. ft. Set with permanent tension of five tons. Breaking strength 50 tons. Deflection due to haulage does not exceed 4 ins. Vertical supporting pulleys are 2 ft. 7½ ins. diameter, and have depth of groove of 7½ ins. Circuit may cover distance of 10 to 11 miles, so that two driving machines may be set 20 to 22 miles apart. For a speed of 1½ miles per hour 2 H.P. is required to draw a barge loaded with 350 tons. For a speed of 2½ miles an hour 4½ H.P. is required. Tractive force = $\frac{Wv^2}{2gl}$, where W = weight of boat in lbs., v = velocity in ft. per sec., g = acceleration due to gravity = 32 ft. per sec., and l = length of towline in feet. For a boat of 300 tons a velocity of 3 ft. per sec. and length of line of 300 ft., the tractive force = 315 lbs. Estimated cost of plant, about 12*s.* 6*d.* per lin. yd. Cost of working ranges from ½*d.* to ¼*d.* per ton per mile.

(*Report of Dr Watson to Water Commerce Congress at Chicago*, 1893.)

Electric Traction on an elaborate scale has been installed on the Teltow Canal in Germany since 1905. The tractors run on rails on both banks. The current is continuous at 550 volts, from overhead mains, and each locomotive is driven by two 8 h.p. motors, which are sufficiently powerful to haul two 600-ton barges at a speed of 2½ miles per hour. A similar system is in use on the Douai section of the Canal d'Aire, where the tractors are of 10 h.p. In 1918, some petrol locomotives of 20–25 h.p. were introduced on the Rhine-Rhone Canal in place of horses, but though the experiment was successful the system did not come into general use on the Canal because it would have entailed considerable alteration in the permanent works.

The following advantages among others have been claimed for the use of electric tractors in place of steam tugs:—

1. Assuming that the electric lines are laid on each bank, there will be greater regularity and uniformity of speed in the service than where tugs are used, and there will be less delay in despatching cargoes at short notice and at regular intervals.

2. The banks and bottom of a canal are not so much injured by electric-towing as by tug-towing. In the latter case the peculiar disturbance to the bottom, with consequential injury to the side banks, caused by the motion of the screw, is added to the wave from the moving boats common to each mode of transport.

3. In the case of electric towing there is considerable economy of space and water in locks and lifts, because tugs and steam boats, which, by reason of their machinery, have a smaller cargo-carrying capacity than barges of like dimensions, need not be taken through.

4. Electric power, when once installed along a line of waterway, can be utilised not only for traction, but also for operating locks and other works, and lighting the waterway at night, and can even, perhaps, be utilised for factories establishing themselves along the waterway.

(*Report of Royal Commission on Waterways*, 1909.)

SHIP CANALS.

General Considerations.—It is desirable that the ratio of cross sectional area of the canal to the immersed section of ships, where the traffic is commercial, should not be less than 4 to 1, and it may with advantage be much higher. In the Suez Canal it is about 7 to 1. For vessels

of war, the ratio may be slightly less, as, for instance, in the Kaiser Wilhelm Canal where the ratio is about $3\frac{1}{2}$ to 1. The limiting value is, however, dependent on the speed at which vessels are permitted to travel. In the artificial portion of the Suez Canal the speed is limited to between 6 and 7 knots, and about 8 knots represents an approximate upper limit for narrow shallow waterways. In passing through such waters vessels sink to a lower level than in the open sea on account of the displacement. Thus pilots have a rough rule that when a ship is near the bottom her 'squat' or 'sinkage' in feet may be about one-fifth of her speed in statute miles per hour.

For curves, M. Quellenec, Consulting Engineer to the Suez Canal Commission, recommends widening the bottom so that the longest vessel may preserve in its own direction a free space equal to $1\frac{1}{2}$ times its own length from the slope of the concave side. The formula used on the canal was:

$$W = \sqrt{R^2+(2a)^2}-(R+b).$$

Where
W = amount of widening in feet.
R = radius of axis in feet.
a = length of ship in feet.
b = $\frac{1}{2}$ bottom width (on tangent) of canal in feet.

Kaiser Wilhelm Canal.—This canal, which connects the North Sea and the Baltic, was originally constructed between 1887 and 1895 at a cost of about 7,800,000*l.*, including land purchase. It has a length of $61\frac{1}{4}$ miles. The former dimensions have since been very considerably increased, viz., the bottom width from 72 ft. to $144\frac{1}{2}$ ft., the surface width from 226 ft. to $334\frac{1}{2}$ ft., the depth from about 30 ft. to 36 ft., and the cross sectional area from about 4,500 sq. ft. to 8,868 sq. ft.

At the entrances at each end of the canal there are new twin locks of 1,083 ft. available length, by $147\frac{1}{2}$ ft. clear width and 45 ft. 2 ins. sill depth at mean water level. These locks take the place of the earlier locks, which were 492 ft. long by 82 ft. wide with 32 ft. of water over sill. The new locks are constructed in concrete, and each has three pairs of caissons dividing the chambers into lengths of 725 ft. and 330 ft.

Manchester Ship Canal.—The Manchester Ship Canal was constructed between 1887 and 1893. It has a total length of 36 miles and includes four sets of locks, with an average lift of 15 ft. each, about 160 acres of docks with warehouses and railway sidings, six high level

MANCHESTER SHIP CANAL: TYPE SECTIONS.

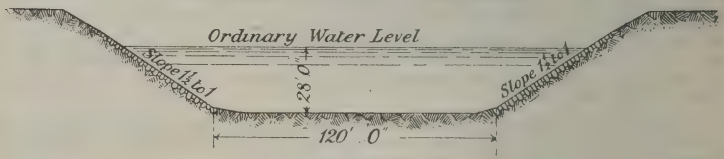


FIG. 20.—Ordinary Section.

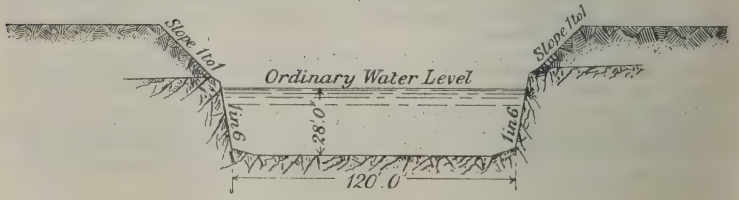


FIG. 21.—Section through Rock.

bridges, seven swing bridges, and a swing aqueduct. The cost was 13,500,000*l.*, including land purchase and promotion, the actual constructional cost being about 9,000,000*l.* The bottom width is 120 ft. The original depth was 26 ft., but this has now been increased to 28 ft. The average annual cost of maintenance is stated to be about 2,000*l.* per mile of canal.

Suez Canal.—The length of the Suez Canal is about 100 miles. It was opened in 1869, the cost of construction, apart from promotion, etc., having amounted to 10,680,000*l.* It has been progressively deepened so that the authorised maximum draught for ships in the canal has been as follows :—

From	1870 to 1890	7 m. 50 = 24 ft. 7 ins.
„	1890 to 1902	7 m. 80 = 25 ft. 7 ins.
„	1902 to 1906	8 m. 00 = 26 ft. 3 ins.
„	1906 to 1908	8 m. 23 = 27 ft. 0 ins.
„	1908 to 1914	8 m. 53 = 28 ft. 0 ins.
„	1914 to 1915	8 m. 84 = 29 ft. 0 ins.
„	1915 to 1919	9 m. 15 = 30 ft. 0 ins.

The canal is in process of being deepened throughout to 12 metres, or 39 ft. 4 ins.

Of the total length of 99·86 miles, 90·08 miles are in straight reaches ; 3·48 miles in curves of 3,280 to 3,500 yds. radius ; 4·97 miles in curves of 2,187 to 3,270 yds. radius ; 1·11 miles in curves of 1,105 to 1,930 yds. radius ; and ·22 mile with a curve of 321 yds. radius. These curves are in process of being modified so that the minimum radius shall be over 2,200 yds.

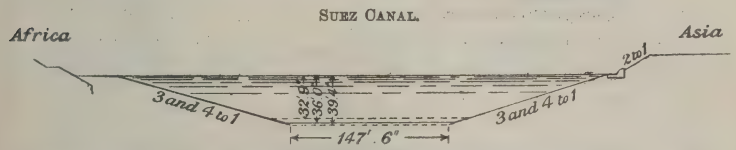


Fig. 22.—Section of Suez Canal, showing progressive deepening, as completed, in course of execution, and contemplated.

There are no locks, the canal being level throughout. At the Suez entrance there is a tidal range, amounting to about 6 ft. in the average at springs. The current flow does not exceed about 3½ ft. per second.

Panama Canal.—The total length of the Panama Canal, measured along its axis, is 50½ miles, but the portion actually within land area between coast lines is only 41½ miles. Of the total length, 14½ miles are at sea level, over 23½ miles in Gatun Lake, nearly 3 miles in locks or alongside approach walls, 1½ miles in Miraflores Lake, and 8 miles in the Gaillard Cut. The summit level is 85 ft. above sea level. The depth lies between 40 and 45 ft. The bottom width varies as follows : For 16 miles the canal is 1,000 ft. wide ; for 4 miles, 800 ft. ; for 22 miles, 500 ft. ; and for 8 miles, 300 ft. wide.

Diagrammatic Sections of Panama Canal. (Not to Scale.)

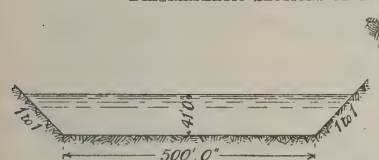


Fig. 23.—From Mindi River to Gatun Locks, and from Miraflores to Panama Bay.



Fig. 24.—Gaillard (formerly Culebra) Cut.

There are six pairs of locks with dimensions of 1,000 ft. in length and 110 ft. in width ; three of these are at Gatun, one at Pedro Miguel, and two at Miraflores. With the exception of the




Fig. 25.—From Gatun Locks to Angle North of San Pablo.

lower lock in the Miraflores flight, the chambers are provided with intermediate gates, dividing them into two sections of 600 ft. and 400 ft. The range of lift of the Pedro Miguel Lock is 30⅓ ft.

At the Gatun flight the lift is 85 ft. divided among the three locks; the actual operating pressure between consecutive locks is therefore nearly 60 ft.

There are 46 pairs of lock gates, constructed of mild carbon steel with yokes and pintles of vanadium steel. The height of the gates varies from 46 ft. to 82 ft. The largest gate weighs about 700 tons.

The approximate cost of the canal, including purchase money, is 75,000,000*l.*

The following is a statement of the unit cost of excavating the Culebra (now Gaillard) Cut for the year 1912:

	Cost per cub. yd.
Transportation	$0·1331
Drilling and blasting	·1157
Tracks	·0885
Loading by steam shovels	·0681
General expenses and supervision	·0503
Dumps	·0479
Plant, arbitrary	·0395
Drainage, structures and clearing	·0045
Total unit cost	$0·5476

SECTION XXIX

STEAM ENGINEERING.

Revised and largely rewritten by T. B. Morley, D.Sc., M.I.Mech.E.

With contributions by W. H. Booth, F.G.S., M.Am.Soc.C.E.; D. Brownlie, B.Sc., F.C.S., A.M.I.Mech.E.; Frank Foster, M.Sc.; H. L. Guy, A.M.Inst.C.E., A.M.I.Mech.E.; W. C. Popplewell, M.Sc., A.M.Inst.C.E.; and A. Hugh Seabrook, M.I.Mech.E., M.I.E.E.

PART I

STEAM—PROPERTIES OF STEAM—FLOW OF STEAM—EXPANSION—HORSE POWER—EFFICIENCIES OF ENGINES—THE INDICATOR AND INDICATOR DIAGRAMS . . . . . pp. 1391-1410

PART II

BOILER DESIGN—TRANSMISSION OF HEAT IN BOILERS—BOILER SHELLS—RULES AND REGULATIONS FOR STEAMSHIP BOILERS—BOILER INSPECTION AND LEGISLATION—RIVETING REGULATIONS—BOILER TUBES—BOILER SETTING—STEAM PIPES—PREVENTIVES OF SCALE AND CORROSION—WATER SOFTENING—FEED WATER REGULATORS—STEAM REGULATORS—OIL SEPARATORS—BOILER CLEANERS—VALVES—DUTY OF BOILERS—TYPES OF BOILERS—BOILER FITTINGS . . . . pp. 1411-1512

PART III

SUPERHEATED STEAM—SUPERHEATERS—STEAM TRAPS—STEAM JACKETS—ECONOMISERS—WATER COOLING TOWERS—STEAM DRYERS AND PURIFIERS—HEAT ACCUMULATORS . . . . . pp. 1513-1528

PART IV

ENGINE TYPES FOR VARIOUS DUTIES—WEIGHTS OF ENGINES . pp. 1529-1543

PART V

(Contributed by H. L. Guy, A.M.Inst.C.E.)

STEAM TURBINES—FLOW OF STEAM—NOZZLES—BLADE EFFICIENCY—LOSSES—PACKINGS—ROTORS—MATERIALS—TEST DATA—TURBINE TYPES—REDUCTION GEARS . . . . . pp. 1545-1587


PART VI

ENGINE DESIGN—M.E.P.—CYLINDER RATIOS—STRESSES—BEARING PRESSURES—TYPICAL EXAMPLE OF DESIGN—FRAMES—CYLINDERS—BEARINGS—FLYWHEELS—GOVERNORS—PISTONS—PACKINGS—SLIDE VALVE GEARS—LINK MOTIONS—CONDENSERS AND AIR PUMPS—FEED PUMPS—POWER PLANT THERMAL EFFICIENCIES . . . . pp. 1589-1632

CLARKE, CHAPMAN & CO. Ltd.,

GATESHEAD.

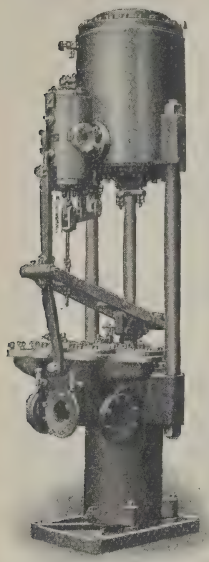Contractors to the British and Foreign Governments.



MANUFACTURERS OF

Direct-acting Slow Speed Feed Pumps.

('Woodeson's Patents.')

Constructed on the Simple, Tandem Compound or Twin Compound Systems of the Piston or Outside Packed Ram Types.

Suitable for all purposes and working pressures.

ECONOMICAL——SIMPLE.

Wear and tear reduced to a minimum.

Will start from any position.

Can also be fitted with controlling tank for Marine Purposes.

WATER-TUBE BOILERS.

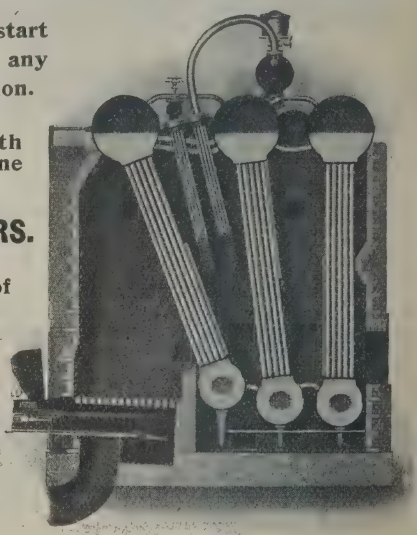
('Woodeson's Patents.')

All Tubes straight and of equal length.
No joints exposed to action of fire.

Maximum Steam release. Minimum Deposits.

Can be fitted with patent Superheater.

Special design for utilising waste gases from Coke Ovens.



WOODESON PATENT WATER-TUBE BOILER FITTED WITH PATENT SUPERHEATER AND UNDERFEED TYPE OF STOKER.

ENQUIRIES SOLICITED.

(See also Advertisement facing page 1973, Marine Engineering Section.)

SECTION XXIX

PART I

STEAM—PROPERTIES OF STEAM—FLOW OF STEAM—EXPANSION—HORSE POWER—EFFICIENCIES OF ENGINES—THE INDICATOR AND INDICATOR DIAGRAMS

(Revised and largely rewritten by T. B. Morley, D.Sc., M.I.Mech.E.)

STEAM

When water is converted into steam by the addition of heat no steam is produced until the temperature of evaporation, or boiling point, is reached. This temperature increases with, and is determined by, the pressure. Whilst evaporation is taking place the temperature remains unchanged, and for this reason the heat required during this process is called the 'latent' heat. After the water has all been converted into steam, the addition of further heat raises the temperature and is said to superheat the steam.

If steam contains liquid moisture mixed with it, it is said to be wet. The percentage of actual steam to total steam and moisture is the dryness fraction.

When the steam is not superheated, but yet contains no moisture, it is dry and saturated, or, for short, dry steam.

It has been established that under certain conditions of expansion, as in turbine nozzles, steam may for a time not be in stable thermal condition, continuing to behave like a vapour although for equilibrium at the prevailing pressure and temperature a portion of it must become condensed. In other words, condensation is temporarily delayed. Steam in this condition is said to be 'supersaturated,' or, since its temperature is lower than the saturation temperature corresponding to the pressure, to be 'supercooled.' This condition is important in connection with the study of steam turbines.

The above general remarks apply to the vapours of all liquids, but the temperatures of evaporation at equal pressures vary widely with different liquids.

Atmospheric pressure in this country is taken as 14·69 lbs. per square inch. At this pressure water boils at 212° Fahr., and has a latent heat of 970 British Thermal Units (B.Th.U.) per pound.

Gauge pressures are measured above atmospheric and are approximately 15 lbs. per square inch below the absolute pressures.

One inch of mercury column at 32° Fahr. is equal to 0·491 lb. per sq. in. Reduce one-hundredth per cent. for each extra degree Fahr. of mercury column temperature.

Heat and work are mutually equivalent. One British Thermal Unit is equal to 778 foot-pounds of work.

The following are useful data relating to heat and work.

1 British Thermal Unit	= 778 ft.-lbs.	2,545 British Thermal Units . . .	= 641 kg. cals.
"	= 0·252 kg. calorie.		= 746 watts.
"	= 107·7 kg. metres.	1·34 h.p. hours . . .	= 1 k.w. hour.
3·968 " " Units	= 1 kg. cal.		= 3,410 B.Th.U.
2,545 " " "	= 1 h.p. hour (British).		= 858 kg. cals.

Steam Tables.

Prof. Callendar has established equations correlating the principal properties of steam, dry and saturated, superheated and supersaturated. His equations are based on general thermodynamic principles, and the constants are chosen to accord with experimental data. He has thus produced valuable steam tables which agree well with the most reliable experimental observations and which are also thermodynamically consistent.

In the following Table I., the total heat, volume, and total entropy of steam are abstracted from Callendar's Tables, published by Edward Arnold, London. The remaining data in Table I. and the other following tables have been calculated by the writer on the basis of Callendar's figures.

TABLE I.—PROPERTIES OF SATURATED STEAM (BASED ON CALLENDAR'S VALUES)

Absolute Pressure. Lbs. per Sq. In.	Temperature. ° F.	Water Heat from 32° F.	Latent Heat of Vapourisation.	Total Heat per Lb. B.Th.U.	Volume, Cub. Ft. per Lb.	Entropy of Water.	Total Entropy of Steam.	Absolute Pressure. Lbs. per Sq. In.
0·5	79·5	47·4	1045	1092	650·5	·092	2·0299	0·5
1	101·7	69·5	1032	1102	333·1	·133	1·9724	1
2	126·1	93·9	1020	1114	173·5	·175	1·9159	2
3	141·5	109·3	1012	1121	118·6	·201	1·8833	3
4	153·0	120·8	1005	1126	90·5	·220	1·8600	4
5	162·3	130·1	1000	1130	73·4	·235	1·8422	5
6	170·1	137·9	995	1133	61·9	·248	1·8277	6
7	176·9	144·9	991	1136	53·6	·258	1·8156	7
8	182·9	150·8	988	1139	47·3	·267	1·8049	8
9	188·3	156·2	985	1141	42·4	·276	1·7956	9
10	193·2	161·1	982	1143	38·4	·282	1·7874	10
11	197·8	165·7	979	1145	35·1	·290	1·7799	11
12	202·0	169·9	977	1147	32·4	·297	1·7731	12
13	205·9	173·9	974	1148	30·0	·303	1·7669	13
14	209·6	177·6	972	1150	28·0	·309	1·7611	14
14·7	212·0	180·0	970	1151	26·8	·312	1·7573	14·7
15	213·0	181·0	970	1151	26·2	·314	1·7557	15
16	216·3	184·3	968	1152	24·7	·319	1·7506	16
17	219·5	187·5	966	1154	23·4	·324	1·7458	17
18	222·4	190·5	964	1155	22·2	·328	1·7414	18
19	225·2	193·3	963	1156	21·1	·332	1·7373	19
20	228·0	196·1	961	1157	20·1	·336	1·7333	20
21	230·6	198·7	959	1158	19·19	·339	1·7294	21
22	233·1	201·3	958	1159	18·37	·343	1·7258	22
23	235·5	203·8	956	1160	17·62	·347	1·7223	23
24	237·8	206·1	955	1161	16·93	·350	1·7189	24
25	240·1	208·4	954	1162	16·29	·353	1·7157	25
26	242·2	210·5	952	1162·5	15·70	·356	1·7126	26
27	244·4	212·8	950	1163	15·17	·359	1·7097	27
28	246·4	214·8	949	1164	14·67	·362	1·7069	28
29	248·4	216·8	948	1165	14·19	·365	1·7042	29
30	250·3	218·7	947	1166	13·74	·367	1·7016	30
35	259·3	228	941	1169	11·90	·381	1·6897	35
40	267·2	236	936	1172	10·50	·392	1·6792	40
45	274·4	243	931	1174	9·40	·402	1·6702	45
50	281·0	250	926	1176	8·52	·411	1·6620	50
55	287·0	256	922	1178	7·79	·420	1·6547	55
60	292·6	262	918	1180	7 18	·427	1·6479	60
65	297·9	268	914	1182	6·66	·434	1·6417	65
70	303·0	273	911	1184	6·22	·441	1·6359	70
75	307·5	278	907	1185	5·82	·447	1·6304	75
80	312·0	282	904	1187	5·49	·453	1·6256	80

TABLE I.—PROPERTIES OF SATURATED STEAM (*continued*)

Absolute Pressure. Lbs. per Sq. In.	Temperature. ° F.	Water Heat from 32° F.	Latent Heat of Vapourisation.	Total Heat per Lb. B.Th.U.	Volume, Cub. Ft. per Lb.	Entropy of Water.	Total Entropy of Steam.	Absolute Pressure. Lbs. per Sq. In.
85	316·2	286	901	1187	5·18	·459	1·6209	85
90	320·2	290	899	1189	4·91	·464	1·6165	90
95	324·1	294	896	1190	4·67	·469	1·6123	95
100	327·7	298	893	1191	4·45	·474	1·6082	100
105	331·3	302	890	1192	4·25	·479	1·6044	105
110	334·7	306	887	1193	4·07	·483	1·6007	110
115	338·0	309	885	1194	3·90	·487	1·5972	115
120	341·1	312	883	1195	3·75	·491	1·5938	120
125	344·2	316	880	1196	3·61	·495	1·5906	125
130	347 2	319	878	1197	3·48	·499	1·5875	130
135	350·1	322	875	1197	3·36	·503	1·5846	135
140	353·0	325	873	1198	3·24	·507	1·5818	140
145	355·7	328	871	1199	3·14	·511	1·5791	145
150	358·4	330	869	1200	3·04	·514	1·5765	150
155	361·0	333	867	1200	2·95	·517	1·5740	155
160	363·5	336	865	1201	2·86	·520	1·5715	160
165	366·0	339	863	1202	2·78	·523	1·5691	165
170	368·4	341	861	1202	2·70	·527	1·5666	170
175	370·7	344	859	1203	2·63	·530	1·5643	175
180	373·1	346	857	1203	2·56	·533	1·5620	180
185	375·3	348	855	1204	2·50	·535	1·5598	185
190	377·6	351	853	1204	2·43	·538	1·5577	190
195	380	353	851	1205	2·38	·541	1·5557	195
200	382	356	849	1205	2·32	·544	1·5538	200
205	384	358	848	1206	2·266	·546	1·5520	205
210	386	360	846	1206	2·216	·549	1·5502	210
215	388	362	845	1207	2·167	·551	1·5483	215
220	390	364	843	1207	2·120	·554	1·5465	220
225	392	366	842	1208	2·076	·556	1·5447	225
230	394	368	840	1208	2·034	·559	1·5429	230
235	396	370	839	1209	1·993	·561	1·5412	235
240	398	372	837	1209	1·954	·564	1·5395	240
245	399	373	836	1209	1·916	·566	1·5379	245
250	401	375	835	1210	1·880	·568	1·5362	250
265	406	382	829	1211	1·780	·574	1·5317	265
315	422	399	815	1214	1·511	·594	1·5179	315
365	436	415	802	1217	1·315	·611	1·5063	365
415	449	429	790	1219	1·165	·627	1·4961	415

TABLE II.—TEMPERATURES OF STEAM AT HIGH VACUA.

Ins. mercury .	29·6	29·5	29·4	29·3	29·2	29·1	29·0	28·9	28·8
Absolute pressure	0·196	0·244	0·293	0·342	0·391	0·440	0·489	0·538	0·587
Temp. Fah. .	52·5	58·5	63·7	68·2	72·1	75·7	78·9	81·8	84·5
Ins. mercury .	28·7	28·6	28·5	28·4	28·3	28·2	28·1	28·0	27·9
Absolute pressure	0·636	0·685	733·0	0·782	0·831	0·880	0·829	0·978	1·027
Temp. Fah. .	87·0	89·3	91·5	93·6	95·6	97·5	99·3	101·0	102·5
Ins. mercury .	27·8	27·7	27·6	27·5	27·4	27·3	27·2	27·1	27·0
Absolute pressure	1·076	1·125	1·174	1·222	1·271	1·320	1·369	1·418	1·467
Temp. Fah. .	104·1	105·6	107·1	108·5	110·0	111·3	112·6	113·8	115·0
Ins. mercury .	26·9	26·8	26·7	26·6	26·5	26·4	26·3	26·2	26·0
Absolute pressure	1·516	1·565	1·614	1·663	1·711	1·760	1·809	1·858	1·956
Temp. Fah. .	116·1	117·2	118·3	119·4	120·4	121·3	122·3	123·3	125·2

NOTES.—Mercury column at 60° F. Referred to a 30-in. barometer. Pressure in lbs. per sq. in. absolute. Height of mercury gauge at a given pressure increases one-hundredth per cent. per deg. F. of mercury temperature above 60. At 60° F. 1 lb. per sq. in. pressure = 2·045 ins. mercury, and 1 In. mercury = 0·489 lbs. per sq. in.

TABLE III.—MEAN SPECIFIC HEATS OF SUPERHEATED STEAM FROM SATURATION TEMPERATURE.

Pressure, Lbs. per Sq. In. Absolute.	Superheat, degrees Fahrenheit.						
	50	100	150	200	250	300	350
20	·503	·500	·497	·495	·494	·492	·491
30	·512	·507	·503	·501	·499	·497	·495
40	·519	·514	·509	·506	·503	·501	·499
50	·525	·519	·515	·511	·508	·505	·502
60	·532	·525	·519	·515	·511	·508	·505
70	·537	·529	·524	·519	·515	·512	·509
80	·542	·534	·528	·523	·519	·515	·512
90	·547	·538	·532	·527	·522	·518	·515
100	·549	·542	·535	·530	·525	·521	·517
120	·560	·551	·543	·536	·531	·526	·522
140	·568	·558	·549	·542	·537	·531	·527
160	·575	·565	·555	·548	·542	·536	·531
180	·580	·570	·561	·553	·546	·540	·535
200	·587	·577	·566	·558	·551	·545	·540
250	·604	·591	·579	·570	·562	·555	·550
300	·618	·603	·591	·581	·572	·563	·556

Table IV. gives the extra heat, above the total heat of saturated steam given in Table I., contained in superheated steam from water at 32° Fahr. The heat added to the water and steam from any higher temperature is less than the value in the table by the number of degrees above 32 from which the heating of the water commences (approximate).

TABLE IV.—HEAT REQUIRED TO SUPERHEAT ONE POUND OF STEAM.

Pressure, Lbs. per Sq. In. Absolute.	Superheat, degrees Fahrenheit.						
	50	100	150	200	250	300	350
20	25·17	50·02	74·62	99·02	123·3	147·5	172·0
30	25·59	50·73	75·54	100·2	124·7	148·9	173·2
40	25·94	51·35	76·43	101·2	125·7	150·2	174·6
50	26·26	51·93	77·20	102·1	126·9	151·4	175·8
60	26·62	52·47	77·92	103·0	127·9	152·5	177·0
70	26·82	52·90	78·55	103·8	128·8	153·5	178·1
80	27·10	53·39	79·20	104·5	129·7	154·5	179·1
90	27·35	53·82	79·76	105·3	130·5	155·4	180·1
100	27·44	54·25	80·33	106·0	131·3	156·2	181·0
120	28·00	55·06	81·43	107·3	132·8	157·9	182·8
140	28·41	55·78	82·42	108·4	134·2	159·4	184·5
160	28·75	56·52	83·31	109·5	135·4	160·8	186·0
180	29·09	57·05	84·17	110·6	136·6	162·1	187·5
200	29·36	57·66	85·0	111·6	137·8	163·5	189·0
250	30·2	59·07	86·9	114·0	140·5	166·4	192·5
300	30·9	60·3	88·6	116·1	142·9	169·0	195·0

Example.—The total heat of steam at 160 lbs. absolute, superheated 150 degrees, from water at 102 degrees, is approximately as follows. (There is a slight inaccuracy owing to the specific heat of water varying a little, which the reader can discover and check for himself from the third column of Table I.)

Total heat of saturated steam from 32°	= 1201	B.Th.U.
Deduct 102 − 32	= 70	,,
Net heat of saturated steam from 102°	= 1131	,,
Add heat of 150° of superheat	= 83	,,
Total heat as required	= 1214	,,

TABLE V.—TOTAL HEAT OF SUPERHEATED STEAM.

Pressure. Lbs. per Sq. In. Absolute.	Superheat, degrees Fahrenheit.						
	50	100	150	200	250	300	350
20	1182·2	1207·1	1231·7	1256·1	1280·4	1304·6	1329·1
30	1191·2	1216·3	1241·1	1265·8	1290·2	1314·5	1338·8
40	1197·6	1223·1	1248·1	1272·9	1297·5	1321·9	1346·3
50	1202·7	1228·4	1253·7	1278·6	1303·4	1327·9	1352·3
60	1207·0	1232·9	1258·3	1283·4	1308·3	1332·9	1357·4
70	1210·5	1236·6	1262·2	1287·5	1312·5	1337·2	1361·8
80	1213·6	1240·0	1265·8	1291·0	1316·2	1341·1	1365·7
90	1216·4	1242·9	1268·8	1294·3	1319·5	1344·4	1369·1
100	1218·7	1245·5	1271·6	1297·2	1322·6	1347·5	1372·5
120	1223·1	1250·1	1276·5	1302·3	1327·8	1352·9	1377·9
140	1226·6	1254·0	1280·7	1306·6	1332·4	1357·6	1382·7
160	1229·7	1257·4	1284·3	1310·5	1336·4	1361·8	1387·0
180	1232·4	1260·4	1287·5	1314·0	1340·0	1365·5	1390·8
200	1234·8	1263·1	1290·4	1317·0	1343·2	1368·9	1394·4
250	1239·9	1268·8	1296·6	1323·7	1350·2	1376·1	1402·2
300	1244·0	1273·4	1301·7	1329·2	1356·0	1382·2	1408·1

The factor of equivalent evaporation 'from and at 212°' is found by dividing the actual total heat of steam as calculated or found from foregoing tables, by 970, which is the latent heat of steam, or heat of evaporation, at atmospheric pressure.

Example.—If the actual total heat is 1067, the factor is 1·1. This means that if the actual evaporation of a boiler is 8·0 lbs. of water per lb. of coal, the 'equivalent evaporation from and at 212°' is $8·0 \times 1·1 = 8·8$ lbs. This basis is widely used because it renders water evaporations and steam consumptions accurately comparable on a uniform basis.

TO CALCULATE THE AMOUNT OF STEAM REQUIRED TO HEAT A GIVEN QUANTITY OF WATER.

G = gallons of water; T and t = temperatures, Fah., after and before heating; $10 \times G \times (T - t)$ = B.Th.U. added to the water; H = total heat per lb. of steam (column 5, Table I., p. 1392); $H - T + 32$ = heat given to water by each lb. of steam; W = lbs. of steam required; then,

$$W = \frac{10 \times G \times (T - t)}{H - T + 32}$$

Note.—One cubic foot of water contains 6·24 gallons. The volume of each lb. of steam is given in Table I.

Flow of Steam through Pipes.

The approximate weight of any fluid which will flow in one minute through any given pipe with a given head or pressure may be found by the following formula :—

$$W = 87·5 \sqrt{\frac{D\,(p_1 - p_2)\,d^5}{L\left(1 + \frac{3·6}{d}\right)}},$$

where W = weight in pounds; d = diameter in inches; D = density or weight per cubic foot; p_1 = initial pressure; p_2 = pressure at end of pipe; L = length in feet.

This formula corresponds to $p_1 - p_2 = 0·0001306 \dfrac{W^2 L\left(1 + \frac{3·6}{d}\right)}{D d^5}$ and also to $h = f \dfrac{v^2}{2g} \cdot \dfrac{4L}{d_1}$, where h = loss of head in feet, d_1 = diameter in feet, f = coefficient of friction of the steam in the pipe, f being equa to $0·0027\left(1 + \frac{3}{10 d_1}\right)$; this coefficient is due to R. C. Carpenter, and is accepted by Unwin.

The following table gives, approximately, the weight of steam per minute which will flow from various initial pressures, with one pound loss of pressure, through straight, smooth pipes, each having a length of 240 times its own diameter. The table is calculated from the above formula.

TABLE OF FLOW OF STEAM THROUGH PIPES.

Initial Pressure by Gauge.	Internal Diameter of Pipe in Inches. Length = 240 diameters.												
	¾	1	1½	2	2½	3	4	5	6	8	10	12	15	18
Lbs. per Sq. In.	Weight of Steam per Minute in Pounds, with One Pound Loss of Pressure.													
1	0·92	1·79	4·80	9·4	15·6	23·8	45·5	75·0	112	209	337	497	799	1160
10	1·14	2·20	5·90	11·5	19·2	29·4	56·0	92·2	137	258	415	611	982	1430
20	1·33	2·58	6·91	13·5	22·7	34·4	65·6	108	161	302	486	716	1150	1680
30	1·49	2·89	7·75	15·2	25·3	39·5	73·5	122	180	338	545	803	1290	1880
40	1·64	3·18	8·54	16·7	27·8	42·5	81·0	133	198	372	600	885	1420	2070
50	1·77	3·44	9·23	18·1	30·1	46·0	87·6	144	215	403	650	956	1540	2240
60	1·89	3·67	9·85	19·3	32·1	49·0	93·5	154	229	429	694	1020	1640	2390
70	2·01	3·91	10·45	20·5	34·1	52·1	99·5	164	244	457	736	1080	1740	2540
80	2·12	4·11	11·0	21·6	35·9	54·9	105	172	266	480	775	1140	1830	2670
90	2·22	4·31	11·6	22·6	37·7	57·6	110	181	269	504	813	1200	1930	2810
100	2·32	4·50	12·1	23·6	39·3	60·0	114	188	281	526	850	1250	2010	2920
120	2·50	4·85	13·0	25·4	42·4	64·6	123	203	302	567	914	1340	2160	3150
150	2·74	5·33	14·3	28·0	46·5	71·0	136	223	332	623	1004	1480	2380	3480
200	3·11	6·04	16·2	31·7	52·8	80·5	154	253	377	705	1140	1670	2700	3920

(*Morley.*)

The foregoing table is based on saturated steam. For any other loss of pressure multiply by the square root of the given loss. For any other length of pipe *divide* 240 *by the given length expressed in diameters, and multiply the figures in the table by the square root of this quotient*, which will give the flow for 1 lb. loss of pressure. Conversely, dividing the given length in diameters by 240 will give the loss of pressure for the flow given in the table.

For superheated steam multiply the values in the table by $\sqrt{\frac{\text{density of superheated steam}}{\text{density of saturated steam}}}$;

or *approximately* $\frac{1}{\sqrt{1 + \cdot 0016\, t_s}}$, where t_s = degrees of superheat.

The loss of head due to getting up the velocity, to the friction of the steam entering the pipe, and passing elbows and valves, will reduce the flow given in the table. The resistance at the opening, and that at a globe valve, are each about the same as that for a length of pipe equal to 114 diameters divided by a number represented by $1 + (3 \cdot 6 \div \text{diameter})$. For the sizes of pipes given in the table these corresponding lengths are, approximately :—

$\frac{3}{4}$	1	$1\frac{1}{2}$	2	$2\frac{1}{2}$	3	4	5	6	8	10	12	15	18
20	25	34	41	47	52	60	66	71	79	84	88	92	95

The resistance at an elbow is equal to two-thirds that of a globe valve. These equivalents—for opening, for elbows, and for valves—must be added in each instance to the actual length of pipe. Thus a 4-in. pipe, 120 diameters (40 ft.) long, with a globe valve and three elbows, would be equivalent to $120 + 60 + 60 + (3 \times 40) = 360$ diameters long; and $360 \div 240 = 1\frac{1}{2}$. It would therefore have $1\frac{1}{2}$ lbs. loss of pressure at the flow given in the table, or deliver $(1 \div \sqrt{1\frac{1}{2}} = \cdot 816)$, 81·6 per cent. of the steam with the same (1 lb.) loss of pressure.

Flow of Steam from an Orifice or Nozzle.

A jet of steam issuing from a vessel under pressure first contracts in section, and then expands if the drop in pressure is more than about 42 per cent. of the absolute pressure in the vessel. The absolute pressure at the narrowest section, which corresponds to the neck of a turbine nozzle, varies a little, but averages about 58 per cent. of the initial pressure for saturated steam, and about 55 or 56 per cent. for superheated steam. The velocity of the steam at this narrowest section is nearly constant except at very low pressures.

For typical values of velocity and discharge see Part V., Steam Turbines, p. 1545.

When the drop in pressure is less than 42 per cent. of the absolute initial pressure, the full velocity and contraction of section do not occur, and the above data do not hold (see Part V. Steam Turbines, p. 1545).

Or the quantity discharged per minute may be approximately found by Napier's formula,

$$W = 6\, a\, p \div 7,$$

where W = weight in pounds; a = area in square inches; p = absolute pressure.

The theoretical flow requires to be multiplied by $k = 0 \cdot 93$ for a short pipe, or 0·63 for a thin opening, as in a plate or a safety valve.

Where the steam flows into a pressure more than two-thirds the pressure in the boiler, then

$$W = 1 \cdot 74\, a\, k \sqrt{p_2 (p_1 - p_2)}, \text{ approximately,}$$

where a, k are as above, and p_1, p_2 are initial and final pressures

Expansion of Steam.

It is found in practice that in engines using saturated steam the expansion line follows closely the hyperbolic law :—

absolute pressure × volume = a constant.

Hence it is usual to compute indicator diagrams on the assumption that the expansion is hyperbolic. With highly superheated steam the pressure falls more rapidly than the hyperbolic curve indicates.

Expansion of Steam.

Referring to fig. 1, the theoretical indicator diagram is A B C D O, there being no clearance and a perfect vacuum. Steam is cut off at B and exhausted at C.

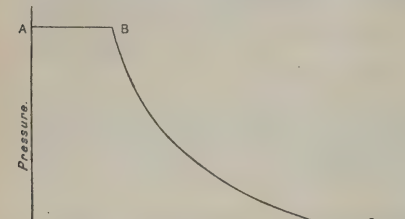


FIG. 1.

p = absolute pressure in lbs. per sq. in;

u = volume in cubic feet;

R = ratio of expansion = $\frac{OD}{AB}$;

W = area of diagram;

P = mean effective pressure in lbs. per sq. in. (M.E.P.);

pu = a constant.

then $W = ABCE + ECDO$

$= p_2u_2 \text{ hyp. log } R + p_2u_2.$

$P = p_1\left(\frac{\text{hyp. log } R + 1}{R}\right) = p_1 K.$

TABLE OF MEAN PRESSURE CONSTANTS K.

The table also gives the points of cut-off (nominal), based on assumed cylinder ratios, L.P. to H.P., in the case of multiple-expansion engines.

R.	K.	Nominal Cut-off (clearance neglected) as proportion of Stroke.			
		Single Cylinder, including Uniflow.	In H.P. Cylinder of Multiple-Expansion Engine.		
			Compound. Cylinder ratio = 4.	Triple. Cylinder ratio = 6.	Quadruple. Cylinder ratio = 8.
1·25	0·979	0·8			
1·4	0·955	0·72			
1·6	0·919	0·62			
1·8	0·882	0·55			
2·0	0·847	0·50			
2·5	0·767	0·40			
3·0	0·700	0·33			
3·5	0·644	0·29			
4·0	0·597	0·25			
4·5	0·556	0·22			
5·0	0·522	0·20			
6·0	0·465	0·17	0·67		
7·0	0·421	0·14	0·57		
8·0	0·385	0·12	0·50		
9·0	0·355	0·11	0·44		
10·0	0·330	0·10	0·40	0·60	
11·0	0·309	0·091	0·36	0·55	
12·0	0·290	0·083	0·33	0·50	
14·0	0·260	0·072	0·29	0·43	0·57
16·0	0·236	0·062	0·25	0·38	0·50
18·0	0·216	0·055	0·22	0·33	0·44
20·0	0·200	...	0·20	0·30	0·40
25·0	0·169	...	0·16	0·24	0·32
30·0	0·147	...	...	0·20	0·27
35·0	0·130	...	...	0·17	0·23
40·0	0·117	...	...	...	0·20

(*Morley.*)

The referred M.E.P. of compound engines is the equivalent M.E.P. if the entire expansion were to take place in the low-pressure cylinder.

The nominal ratio of expansion is the stroke volume of the L.P. cylinder ÷ volume swept by H.P. piston up to point of cut-off, or

$$R = \frac{V_L}{a\ V_H} = \frac{\text{cylinder ratio}}{a}$$

where V_H, V_L are stroke volumes of H.P. and L.P. cylinders, and a is proportion of stroke at which cut-off takes place in the H.P. cylinder.

If C_H and C_L are the clearance volumes at each end of the H.P. and L.P. cylinders, the real ratio of expansion is

$$\frac{V_L + C_L}{a\ (V_H + C_H)}$$

To determine the probable actual mean pressure (referred to the low-pressure cylinder in the case of a multiple-expansion engine) multiply the initial pressure (absolute) by K (see table on previous page), deduct the back pressure, and multiply by a suitable 'diagram factor.'

Diagram factors depend on the type of engine, type of valves and valve gear, jacketing, superheating, speed, etc. Approximate typical values are as follows :—

TABLE OF DIAGRAM FACTORS.

Triple-expansion	·65–·75
Compound condensing, superheated	·65–·75
,, ,, saturated	·7– ·8
,, non-condensing	·8–·85
Simple condensing, trip gears	·9–·95
,, ,, slide valves	·85– ·9
,, non-condensing	·9–·95

Note.—In calculating the M.E.P. the clearance is ignored. If the clearance is allowed for, the ratio of expansion for a given cut-off is lower and the theoretical M.E.P. higher, necessitating a lower diagram factor, particularly for simple and compound engines. Thus, some authorities give from 0·7 to 0·9 for simple engines.

Low revolutions, large clearance, jackets, reheaters, and low compression increase the diagram factor. These special conditions must be allowed for, as in slow-speed pumping engines

Usual Expansions in Various Types of Engines.

Single Condensing Engines	from 2 to 5 times
Two-cylinder Compound Engines	,, 10 ,, 20 ,,
Triple-expansion Engines	,, 12 ,, 25 ,,
Quadruple-expansion Engines	,, 16 ,, 30 ,,
Uniflow Engines	,, 7 ,, 12 ,,

HORSE-POWER OF STEAM ENGINES (DOUBLE-ACTING).

INDICATED HORSE-POWER.

F = Mean pressure on piston, in pounds per square inch ;
A = Area of cylinder, in square inches ;
S = Stroke of engine, in feet ;
R = Revolutions per minute.

$$\text{I.H.P.} = \frac{\text{FAS } 2\text{R}}{33000}.$$

EXAMPLE.—A cylinder 24 ins. in diameter, 3 ft. stroke, running 80 revs. per min., with 28 lbs. mean pressure on piston ; what is the indicated horse-power ?

$$\text{I.H.P.} = \frac{28 \times 24^2 \times \cdot7854 \times 3 \times 2 \times 80}{33000} = 184.$$

In the case of a compound or multiple-expansion engine it is usual to speak of the mean pressure, or mean effective pressure (M.E.P.), referred to the low-pressure cylinder. This is calculated exactly as if the low-pressure cylinder were the only one, the high-pressure and intermediate cylinders being non-existent. Thus, if two engines develop the same power at the same speed, one of them having only one cylinder and the other being a compound engine with a low-pressure cylinder equal in stroke and diameter to the only cylinder of the other engine, the M.E.P., or mean effective pressure, of the single-cylinder engine will be the same as that of the compound engine referred to the low-pressure cylinder.

Average values of the M.E.P. for high-class engines are as follows :—

TABLE OF MEAN EFFECTIVE PRESSURES AT RATED LOAD.

Gauge Boiler Pressure, lbs.	180	160	120	100	80
Triple condensing	31	30	28	—	—
Compound condensing	32	31	29	27	24
,, non-condensing	44	42	34	33	26
Uniflow condensing	38	36	33	—	—

High-speed engines are governed by throttling, the ratio of expansion being fixed. Other high-class engines have variable expansion and are capable of developing about 50 per cent. overload, but rather less at low boiler pressures.

BRAKE HORSE-POWER.

'Actual,' 'Effective,' or 'Brake' horse-power is the measured horse-power given off from the crankshaft of the engine—that is, the indicated horse-power according to the above rule, minus the power required to drive the engine itself. This latter power may be as bad as 18 per cent. for condensing engines, and 13 per cent. for non-condensing engines, but is only half these percentages for really high-class work.

TABLE OF STANDARD HORSE-POWER FOR DIFFERENT NATIONS.

Country.	Kilogrammètres per Second.	Baden Foot-pounds per Second.	Saxon Foot-pounds per Second.	Wurtemberg Foot-pounds per Second.	Prussian Foot-pounds per Second.	Hanoverian Foot-pounds per Second.	English Foot-pounds per Second.	Austrian Foot-pounds per Second.
France and Baden	**75**	**500**	529·68	521·58	477·93	513·53	542·47	423·68
Saxony	75·045	500·30	**530**	523·89	478·22	513·84	542·80	423·93
Wurtemberg	75·240	501·36	531·12	**525**	479·23	514·92	543·95	424·83
Prussia	75·325	502·17	531·97	525·85	**480**	515·75	544·82	425·51
Hanover	75·361	502·41	532·23	526·10	480·23	**516**	545·08	425·72
England	76·041	506·94	537·03	530·84	484·56	520·65	**550**	429·56
Austria	76·119	507·46	437·58	531·39	485·06	521·19	550·57	**430**

STEAM CONSUMPTION.

The ideal steam-engine cycle, adopted as a standard of comparison, is the Rankine cycle. In it the steam is fully expanded adiabatically, and there are no losses due to throttling, clearance, leakage, condensation, etc.

The following tables show the work done (in B.Th.U.) per lb. of steam, and the steam consumption per i.h.p. hour in the case of ideal engines :—

(1) when the expansion is incomplete ;
(2) when the expansion is complete—*i.e.* the Rankine cycle.

TABLE OF STEAM CONSUMPTION AND WORK DONE BY STEAM.

(1)

Theoretical lbs. of steam per i.h.p. hour and work done in B.Th.U. per lb. of steam, assuming adiabatic expansion from dry steam and no compression or clearance losses, to :—

(1) 25 lbs. release pressure with 16 lbs. back pressure.
(2) 10 lbs. release pressure with 2 lbs. back pressure.

All pressures are in lbs. per square inch absolute except the approximate gauge boiler pressure corresponding to the absolute initial pressure at the engine. A pressure drop of 5 lbs. between boiler and engine is assumed.

The correction given in the table is the change in theoretical steam consumption for one pound change in the back pressure, other conditions remaining unaltered.

Boiler Pressure lbs. gauge.	Initial Pressure absolute.	Back Pressure, 16 lbs. absolute.			Back Pressure, 2 lbs. absolute.		
		Lbs.	B.Th.U.	Correction per lb.	Lbs.	B.Th.U.	Correction per lb.
210	220	13·5	188	0·2	9·4	270	0·2
200	210	13·8	185	0·2	9·6	266	0·2
190	200	14·1	181	0·2	9·7	262	0·2
180	190	14·4	177	0·2	9·8	259	0·2
170	180	14·7	173	0·3	10·0	255	0·2
160	170	15·1	169	0·3	10·1	252	0·2
150	160	15·5	164	0·3	10·3	248	0·2
140	150	15·9	160	0·3	10·5	243	0·3
130	140	16·4	155	0·3	10·7	238	0·3
120	130	17·1	149	0·3	10·9	233	0·3
110	120	17·8	143	0·3	11·2	227	0·3
100	110	18·6	137	0·4	11·5	222	0·3
90	100	19·6	130	0·4	11·9	214	0·4
80	90	20·9	122	0·4	12·3	207	0·4
70	80	22·5	113	0·5	12·7	200	0·4

(*Morley.*)

Table of Steam Consumption and Work Done by Steam.

(2)

Theoretical steam consumption in lbs. per i.h.p. and work done per lb. of steam in B.Th.U., assuming adiabatic expansion from dry saturated steam with complete expansion. Rankine cycle.

Absolute Initial Pressure, Lbs.	Lbs. per i.h.p. hour. Back pressure, lbs. abs.				B.Th.U. per lb. of Steam. Back pressure, lbs. abs.			
	14·7	2	1·5	1	14·7	2	1·5	1
220	12·9	8·2	7·85	7·4	198	310	324	344
210	13·0	8·3	7·9	7·45	195	307	321	341
200	13·2	8·4	8·0	7·5	192	303	318	338
190	13·5	8·5	8·1	7·5	188	300	315	334
180	13·8	8·6	8·2	7·6	184	297	311	331
170	14·1	8·7	8·3	7·7	180	293	308	328
160	14·5	8·8	8·4	7·75	175	289	304	324
150	14·9	8·9	8·5	7·95	170	285	300	320
140	15·3	9·1	8·6	8·1	166	280	295	315
130	15·9	9·25	8·75	8·2	160	275	290	310
120	16·5	9·4	8·9	8·35	154	270	285	305
110	17·2	9·65	9·1	8·5	148	264	279	300
100	18·0	9·9	9·3	8·65	141	257	273	294
90	19·1	10·2	9·55	8·85	133	250	266	287
80	20·5	10·5	9·8	9·1	124	243	259	279
70	22·1	10·9	10·2	9·4	115	234	250	271
60	24·7	11·4	10·6	9·75	103	223	241	261
50	28·6	12·0	11·2	10·2	89	211	227	249

(*Morley.*)

The steam consumption, lbs. per i.h.p. hour = 2545 ÷ work done, B.Th U. per lb.

For pressures of 100 to 200 lbs. per sq. in. and back pressures 1 to 2 lbs. per sq. in., the steam consumption of the ideal (Rankine) engine decreases about 6 per cent. for each 100° F. of superheat.

EFFICIENCY OF ENGINES.

The thermal efficiency is the ratio of the work done per lb. of steam (in B.Th.U.), to the heat required to generate 1 lb. of steam, at the pressure and temperature, at the engine stop valve, from feed water at the temperature of the engine exhaust.

$$\text{Thermal efficiency } e = \frac{\text{I.H.P.} \times 42{\cdot}42}{w\,(H_1 - h_2)} = \frac{\text{I.H.P.} \times 2545}{W\,(H_1 - h_2)}$$

where,

w = steam used, lbs. per minute; W = do., lbs. per hour;
H = total heat at pressure and temperature at boiler side of engine stop valve;
h_2 = water heat at temperature of exhaust.

It is customary to express the performance of engines in steam consumption per h.p. hour, but since the heat required to generate the steam increases with pressure and temperature, the steam-consumption figure alone is not a complete criterion of the merit of the engine.

It has been proposed to state the performance of engines in B.Th.U. per minute per i.h.p $= \frac{w\,(H_1 - h_2)}{\text{I.H.P.}} = \frac{42{\cdot}42}{e}$, or in 'equivalent feed,' which is the weight of steam which would be required per i.h.p. hour if $H_1 - h_2$ were 1100, thus equivalent feed $= \frac{W}{\text{I.H.P.}} \times \frac{H_1 - h_2}{1100}$.

Neither of these proposals has been widely adopted.

TABLE OF STEAM CONSUMPTIONS IN POUNDS PER INDICATED HORSE-POWER HOUR.

Steam Pressure, Lbs. Gauge.	Superheat, F.°	Condensing.	Simple.	Compound.	Triple-expansion.
200	100	Yes	—	10·5	10·2
200	0	,,	—	12·0	11·5
160	100	,,	14·0	11·0	10·7
160	0	,,	18·0	12·5	12·0
160	100	No	16·0	14·6	—
160	0	,,	21·0	16·7	—
120	100	Yes	15·5	12·2	12·2
120	0	,,	20·0	14·0	13·5
120	100	No	19·0	16·8	
120	0	,,	24·0	19·0	
80	100	Yes	18·0	15·0	
80	0	,,	23·0	17·0	
80	100	No	24·0	21·0	
80	0	,,	30·0	25·0	
40	0	Yes	28·0		
40	0	No	42·0		

Note.—The above are for highest-class engines of moderate size. For good average practice add from 5 to 10 per cent. For badly clothed or defective engines add 20 per cent. or more. For small engines add from 5 per cent. upwards according to size. The superheat is measured at the engine stop valve. The loss from the superheater may be from 20 to 100 degrees, according to steam-pipe conditions. Uniflow engines and simple (alternating-flow single-cylinder engines) vary a good deal according to the cut-off. In general, a uniflow has about the same steam consumption as a good compound engine, but with a sufficiently early cut-off beats it.

EFFICIENCY RATIO.

The ratio of the thermal efficiency of the actual engine to that of the Rankine cycle—or of the steam consumption of the Rankine cycle to the actual steam consumption (both having the same pressure, superheat, and vacuum (or back pressure))—is the 'efficiency ratio.'

The efficiency ratio varies with the pressure, superheat, and vacuum, as well as with the merit of the engine as regards freedom from condensation, leakage, and other losses.

Nevertheless the 'efficiency ratio' is useful in comparing engine test results and in predicting steam consumptions.

Typical steam consumptions are shown in the following table (*Foster*), a column of 'efficiency ratios' being added.

Typical Steam Consumptions and Efficiency Ratios.

The particulars in the table refer to high-class modern engines with Corliss or drop valves, and of about 600 i.h.p. or upwards working at normal full load.

Type of Engine.	Boiler Pressure. Lbs. per Sq. In. Gauge.	Vacuum. Ins.	Approx. M.E.P.	Super-heat ° F.	Steam. Lbs. per I.H.P. hour.	Efficiency Ratio per cent.
Compound condensing	160	26 to 27	30	nil	13 to 13·5	64
" "	160	26 to 27	30	150	10·5 to 11	72
" non-condensing	160	nil	40	nil	17·5 to 18·5	78
" "	160	nil	40	150	14 to 15	87
" condensing	120	26 to 27	27	nil	14 to 15	62
" "	120	26 to 27	27	150	11·5 to 12·5	69
" non-condensing	120	nil	34	nil	19 to 20	81
" "	120	nil	34	150	15 to 16	91
Triple condensing	180	26 to 27	30	nil	12 to 12·5	68
" "	180	26 to 27	30	150	10·2 to 11	71
Uniflow condensing	160	26 to 27	38	nil	12·5 to 13	67
" "	160	26 to 27	38	150	10·5 to 11·5	70
" non-condensing	160	nil	40	nil	19 to 20	72
" "	160	nil	40	150	17 to 18	72
" condensing	120	26 to 27	35	nil	13·5 to 14·5	64
" "	120	26 to 27	35	150	11·5 to 12·5	69
" non-condensing	120	nil	34	nil	21 to 22	74
" "	120	nil	34	150	18·5 to 19·5	75

The non-condensing uniflow values are subject to considerable variations.

Typical Engine Tests.

Reference No.	1	2	3	4	5	6
Type	H.T.C.C.	V.C.C.C.	—	H.T.C.C.	V.T.C.	Uniflow
Cylinder Diameter, inches	15·94 × 31·94	28 × 57	Same (as No. 2)	26·65 × 45·3	13·7–24·4–39	30·5
" Stroke, "	48	48		47·24	72	39·0
R.P.M.	75·37	80·35	80·5	100·5	50·59	120
Stop Valve Pressure Gauge	124	170	169	146·5	175·7	116·5
Superheat, deg. Fahr.	0	117	110	171	0	142
Vacuum	27·2	25·5	25·6	27·0	27·25	27
H.P. Valves	Corliss	Corliss	—	D.B. Drop	Corliss	D.B. Drop
L.P. Valves	Corliss	Corliss	—	D.B. Drop	Corliss	—
Steam Jackets	No	No	No	L.P.	H.P., I.P., L.P.	Cyl. ends
Reheater	No	Not used	In use	No	Yes	—
Clearance Volume %, H.P.	8·5	6·65	—	5·0	—	(2)
" %, L.P.	5·6	6·4	—	5·0	—	—
" Surface %, H.P.	310	320	—	206	—	(150)
" %, L.P.	185	215	—	161	—	—
Nominal Cylinder Ratio	4·01	4·15	—	2·9	3·17—8·1	—
Total I.H.P.	394	1,401	1,405	1,234	576	570
I.H.P. in H.P. Cylinder %	53·2	55·7	50·0	62·0	26·2	100
" I.P. " %	—	—	—	—	32·3	—
" L.P. " %	46·8	44·3	50·0	38·0	41·5	—
Receiver Pressure Gauge	11·0	18·9	20·8	25	46·5—2·4	—
Total Piston load about H.P. lbs.	22,500	92,000	89,000	76,000	18,500	80,000
" " I.P. lbs.	—	—	—	—	19,500	—
" " L.P. lbs.	18,500	69,000	74,000	32,000	17,500	—
Cut-off in H.P. Cylinder, %	32	31	30	24	38·4	—
" I.P. " %	—	—	—	—	34·5	—
" L.P. " %	45	35	35	42	48·0	—
Dryness H.P. Cut-off %	86	103	97	114·3	—	—
" H.P. Release %	90	95	94	101·2	—	—
" I.P. Cut-off %	—	—	—	—	—	—

TYPICAL ENGINE TESTS—(*continued*).

REFERENCE No.	1	2	3	4	5	6
Dryness I.P. Release % .	—	—	—	—	—	—
„ L.P. Cut-off % .	71	82	90	85	—	—
„ L.P. Release % .	74	86	89	89	—	—
M.E.P. referred to L.P. Cyl.	27·24	28·44	28·41	32·5	26·3	33·2
„ in H.P. Cylinder .	58·2	67·0	60·1	58·3	57·0	33·2
„ in I.P. „ .	—	—	—	—	22·1	—
„ in L.P. „ .	12·75	12·53	14·2	12·36	10·9	—
Total Expansions, apparent	12·5	13·4	13·8	12·1	21·1	—
Piston Speed, ft. min. . .	602	642·8	644	791·2	607	780
Steam per I.H.P. hour lbs.	13·89	11·74	11·67	10·75	11·22	11·86
B.Th.U. per I.H.P. per min.*	259	226	224	218	211	236
Efficiency Ratio* . . %	61	69	69	70	70	68
Drive	Mill	Mill	Mill	Mill	Pumps	—
Date	1896	1907	1907	1909	1895	—
Builders	British	British	British	Belgian	U.S.A.	British
Authority	Longridge	Longridge	Longridge	Longridge	Miller	Stumpf

(*Foster.*)

* Recalculated on basis of Callendar's steam tables.—*T. B. M.*

Economy of High-pressure Working.

The consumption of steam in pounds per horse-power per hour decreases as the pressure rises. The actual steam consumptions vary according to the size and type of engine.

It is estimated that the saving resulting from pressure increase from 200 lbs. to 500 lbs., keeping steam temperature constant at 600° F. and vacuum at 28 ins., would be $1,400 per annum per 1,000 kw. (assuming boiler efficiency 70 per cent., load factor 60 per cent., and cost of 14,000 B.Th.U. coal $5 per ton). Capitalised at 17 per cent., this corresponds to a saving of $8·25 per kw. compared with a probable cost of $3·50 per kw. to work at the higher pressure.

(*J. T. Foster, in 'Electrical World,' May* 11, 1918.)

Steam Saving by Superheating.

Superheating improves the efficiency ratio, so that in practice the saving due to superheating is much greater than that calculated for the Rankine cycle.

Approximate Percentage Reduction in Steam Consumption by Superheating, for Compound and Uniflow Engines.

Superheat, deg. Fahr.	50	100	150	200
Common Steam and Exhaust Ports	12	20	26	30
Separate „ „ „ „	10	16	21	25
Uniflow, about	8	12	17	21

(*Foster.*)

Superheat reduces the steam consumption most in simple engines.

See also Part III, page 1513.

Duty of Engines.

The duty of an engine is rarely spoken of except for pumping engines, and is then expressed in terms of the work done in lifting the water per 1,120 lbs. of steam used, or some other basis. Sometimes 1,000 lbs. of steam is used, especially in America; and sometimes coal or heat units is the basis.

Example.—Pumping engine consumes 14 lbs. of steam and 1·8 lbs. of coal per water, or pump, h.p. hour. The total heat added per lb. of steam is 1,125 B.Th.U.

Duty per 1,120 lbs. steam is $\frac{1,120}{14} \times 33,000 \times 60$ . . . = 158,400,000 ft. lbs.

Duty per 112 lbs. coal is $\frac{112}{1·8} \times 33,000 \times 60$ . . . . = 123,200,000 „

Duty per 1,000,000 B.Th.U. in steam is $\frac{1,000,000}{1,125} \times \frac{158,400,000}{1,120} = 125,700,000$,

The duty of winding engines is rarely measured, but is sometimes stated in terms of steam used per shaft h.p. hour, or per h.p. hour in the coal hoisted. This steam consumption increases

greatly when the cages are not fully loaded and the number of winds is below maximum. Under favourable conditions compound non-condensing engines use from 30 to 50 lbs. of steam per shaft h.p. (in the coal raised) per hour. For high-pressure engines and unfavourable conditions the consumption increases to about 100 or 120 lbs., and occasionally more.

TABLE SHOWING STEAM CONSUMPTION OF WINDING ENGINES.

Colliery.	Cylinders, ins. diam. × stroke.	Boiler Pressure.	Lbs. per Shaft H.P. Hour.
Bolsover	32 × 72	—	129
Denaby and Cadeby	45 × 84	80	83
Tredegar Coal Company	18 & 28 × 48	140	177
A Lancashire Colliery	36½ × 78	60	114
Richard Evans	36 × 78	180	95
Silkstone	32 × 72	120	70
Rotherham	40 × 78	105	48
Hulton	32 × 72	80	102
Hulton	36 × 72	80	129
Atherton	22 × 52	100	58
Hickleton Main	40 × 78	100	88
Sherwood	26 × 54	127	43
Cowper	60 × 84	20	178

(*W. C. Mountain.*)

Tests of a cross-compound non-condensing engine at Sherwood colliery gave a steam consumption of 40 lbs. per S.H.P. hour. The engine cylinders were 32 ins. and 53 ins., stroke 66 ins., pressure 125 lbs. per sq. in., superheat 65° F.

For the steam consumption of turbines *see* Part V., page 1554.

THE INDICATOR.

General Definitions.

The Atmospheric Line, AB, is a line drawn by the pencil of the indicator when the connections with the engine are closed and both sides of the piston are open to the atmosphere. This line represents on the card the pressure of the atmosphere, or zero gauge pressure.

The Line of Absolute Zero Pressure, OX, is a reference line usually drawn about 14·7 lbs. by scale below the atmospheric line. It represents a perfect vacuum, or absence of all pressure.

At any considerable height above sea level the line OX becomes nearer the line AB.

The Clearance Line, OY, is another reference line drawn at a distance from the end of the diagram equal to the same percentage of its length as the clearance and waste room are of the piston displacement. The distance between the clearance line and the end of the diagram represents the volume of the clearance and waste room of the ports and passages at the end of the cylinder.

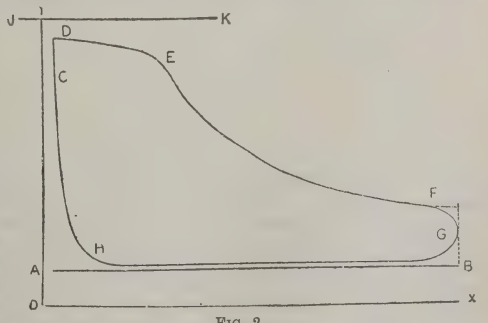


FIG. 2.

The Line of Boiler Pressure, JK, is drawn parallel to the atmospheric line, and at a distance from it by scale equal to the boiler pressure shown by the gauge. The difference in pounds

between it and DE shows the loss of pressure due to the steam pipe and the ports and passages in the engine.

The Admission Line, CD, shows the rise of pressure due to the admission of steam to the cylinder by opening the steam valve. If the steam is admitted quickly when the engine is about on the dead centre this line will be nearly vertical.

The Steam Line, DE, is drawn when the steam valve is open and steam is being admitted to the cylinder.

The Point of Cut-off, E, is the point where the admission of steam is stopped by the closing of the valve. It is difficult to determine the exact point at which the cut-off takes place. It is usually located where the outline of the diagram changes its curvature from convex to concave.

The Expansion Curve, EF, shows the fall in pressure as the steam in the cylinder expands and does work.

The Point of Release, F, shows when the exhaust valve opens.

The Exhaust Line, FG, represents the change in pressure that takes place when the exhaust valve opens.

The Back Pressure Line, GH, shows the pressure against which the piston acts during its return stroke. On diagrams taken from non-condensing engines it is either coincident with or above the atmospheric line, as in fig. 2. On cards taken from a condensing engine, however, it is found below the atmospheric line, and at a distance greater or less according to the vacuum obtained in the cylinder.

The Point of Compression, H, is the point where the exhaust valve closes. It cannot be located very definitely, as the change in pressure is at first due to the gradual closing of the valve.

The Compression Curve, HC, shows the rise in pressure due to the compression of the steam remaining in the cylinder after the exhaust valve has closed.

The Mean Effective Pressure (M.E.P.) is the mean net pressure urging the piston forward.

The Initial Pressure is the pressure acting on the piston at the beginning of the stroke.

The Terminal Pressure is the pressure above the line of perfect vacuum that would exist at the end of the stroke if the steam had not been released earlier. It is found by continuing the expansion curve to the end of the diagram, as in fig. 2. This pressure is always measured from the line of perfect vacuum, hence it is the *absolute* terminal pressure.

Mean Effective Pressure.

This can only be correctly determined by finding the area of the indicator diagram.

The best method of doing this is by the use of the planimeter, which, with careful manipulation, will give the exact area in square inches to hundredths of a square inch. Divide the area thus found by the length of the diagram, and the result will be the height of a rectangle having an

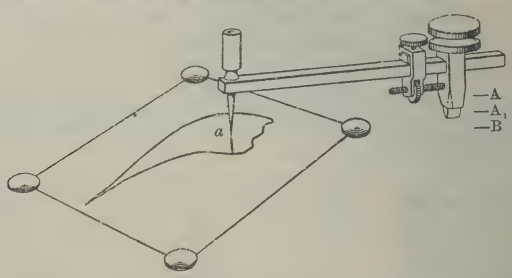


FIG. 3.

area equal to that of the diagram, and will consequently represent the average height of the diagram. Multiply this by the scale of the spring used, and the result will be the mean effectve pressure (M.E.P.).

There are several approximate methods of computing the M.E.P. It is necessary to find the mean ordinate of the diagram, and this may be done with close approximation by the application of Simson's rule for area computation (p. 143), the mean of a number of ordinates being taken. With a number of diagrams this may occupy some little time ; but if it be desired to deal with them quickly, the mean ordinate may be obtained by the application of Professor Goodman's Hatchet Averager with a remarkable degree of accuracy. This instrument (fig. 3), as usually made consists of a short, square steel rod, having at one end a tracing point similar to that on a Planimeter ; the other end is provided with a sharp steel hatchet with a slightly curved edge, so ground that the edge of the hatchet, if produced, will pass exactly through the tracing point. The distance between the hatchet and point is adjusted to the exact length of the diagram by sliding the former along the rod and there clamping it. The diagram is then laid on a level surface and fastened down ; a point *a* is chosen near the centre of the area and a line drawn there-

from to one of the edges of the diagram. The Averager is placed with its rod approximately at right angles to the line drawn with the tracing point on a and the position of the hatchet marked A. The tracing point is then moved along the line and, clockwise, around the diagram and back on the line to a. The hatchet will then have travelled to B; this is marked. To ensure a finer degree of accuracy the diagram is rotated through 180° about a, and the operation repeated in a counter clockwise direction. The hatchet will travel from B to A_1. The distance from B to a point midway between A_1 and A in inches is the mean ordinate. The whole operation occupies considerably less time than it takes to describe. The figure shows the Averager applied to an air-compressor diagram.

The mean ordinate being obtained, its value multiplied into the scale of the indicator spring used gives the M.E.P.

To Calculate the Horse Power of an Engine.

M.E.P. = mean effective pressure on piston, lbs. sq. in.,
A = net piston area (one face), sq. ins.,
S = piston speed, ft. min. (stroke × 2 × R.P.M.),

then

$$\text{I.H.P.} = \frac{\text{M.E.P.} \times A \times S}{33{,}000}$$

If a single-acting engine divide the above by two.

Approximate Steam Consumption, from the Indicator Diagram.

Draw a horizontal (constant pressure) line on the diagram so as to cut the expansion line and compression line (or compression line produced, if necessary) at a pressure just above release (exhaust opening).

If

u = volume in cu. ft. of one lb. dry steam at the pressure of this horizontal line;
a = length of horizontal line between expansion and compression lines;
b = length of stroke of diagram;

then

$$\text{Lbs. dry steam on diagram per i.h.p. hour} = \frac{13{,}750\ a}{\text{M.E.P.}\ b\ u}.$$

This is often referred to as the theoretical steam, the actual being less or greater according to the degree of superheat, jacketing, leakage, etc. Hence the theoretical consumption must be *divided* by a factor (which is approximately the dryness fraction at exhaust opening) as follows, for compound engines at normal full load.

STEAM CONSUMPTION FACTORS.

Cylinder.	H.P.	L.P.
High superheat	1·0 –1·1	0·8 –1·0
Moderate superheat	0·9 –1·0	0·75–0·95
Saturated steam	0·8 –0·85	0·7 –0·75
Badly clothed, saturated steam	0·65–0·75	0·6 –0·7

To Interpret the Indicator Diagram.

The two preceding paragraphs explain how to calculate the horse-power and estimate roughly the steam consumption from the diagram.

Other important information can be learned from a study of the diagram, as follows:—

The diagram will show the opening and closing of the valves, as explained on p. 1405, fig. 2. If the point of cut-off is fixed, as with most slide and piston valve engines, the depth of the steam admission line DE below the boiler pressure line YK is a measure of the loss by throttling. If this is invariably considerable, it may pay to shift the eccentric so as to give an earlier cut off. With a simple slide or piston valve this would make the exhaust open earlier and the compression commence earlier. These, and particularly the latter, must be watched, as too early compression sends the compression pressure above the steam chest pressure. This is not good; although the compression line should rise nearly to the admission pressure. In the case of a reversing engine having a Stephenson, Joy, or similar link motion, the point of cut-off is varied by shifting the equivalent eccentric; and thus at early cut-off the exhaust and compression are both early, but at late cut-off the exhaust and compression both become

late. Hence when studying such diagrams these changes of exhaust and compression with cut-off must always be kept in mind. The points of valve action can also be altered by changing the lap. Thus if the exhaust edge of the valve is chipped the exhaust takes place earlier and the compression later. Similarly chipping some of the lap off the steam edge of the valve makes the cut-off later and lead earlier.

If the admission line DE falls rapidly, the valve is too small or the valve travel too small.

In a multiple-cylinder engine the diagram gives the distribution of power and forces among the several cylinders. As a rule these should be roughly equal for the several cranks, but need not be equal for the two cylinders of a tandem engine. Indeed, in the latter case, the h.p cylinder may with advantage take rather more than half the load if the steam is superheated.

Valve setting should always be checked by actual indicator cards after an engine is first started to work.

It is found in practice that the expansion line (fig. 2) is closely hyperbolic when using saturated steam, the two axes of the hyperbola being the absolute zero line OX and a vertical touching the diagram at CD. These hyperbolic curves can be purchased printed on transparent paper for placing over indicator diagrams. If the expansion line rises above the hyperbola as the pressure falls it indicates leakage past the steam valve into the cylinder. Similarly, if the expansion line falls more rapidly than the hyperbola it indicates either leakage past the exhaust valve out of the cylinder, excessive condensation of steam in the cylinder, or the use of initially superheated steam. If superheated steam is used the vertical axis of the hyperbola should be about the clearance line OY in fig. 2; but the exact position depends on the degree of superheat.

The hyperbola is easily drawn more or less completely as desired when it is remembered that the absolute pressure multiplied by the volume has the same value at all points on the same hyperbolic curve.

To take an Indicator Card.

See that the indicator is in good order, the piston clean and free in the cylinder, all joints in the pencil gear free yet without slack. The pencil should fall by its own weight when the indicator is assembled without a spring. The spring should be chosen with reference to the pressure range so as to give a diagram about 1½ ins. high, or less still if the speed is high. (At very low speeds a lighter spring may be used and a larger diagram obtained.) Assemble the indicator, and see that the spring is properly secured at both ends without any slack. Couple the indicator to the cock F. Adjust the length of cord connecting the indicator drum to the reducing gear, so that there is no knock or slack at either end of the motion of the drum. At high speeds the tension of the drum spring should be considerable, so as to minimise variations in the tension of the driving cord.

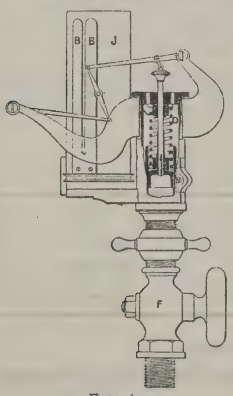


FIG. 4.

Fasten the paper on the drum *J* (fig. 4) by means of the clips BB. Draw the atmospheric line by pressing the pencil lightly on the paper and pulling the drum round by the cord.

Adjust the pencil stop so that the pencil cannot be pressed too hard on the paper. The pencil point must be kept smooth and fine. A clear, fine line will thus be drawn without excessive friction between pencil and paper.

Connect the driving cord to the reducing gear, open the indicator cock, and after allowing steam to blow through for a few seconds, apply the pencil to the paper and allow it to remain in contact for a few revolutions and then withdraw it.

Shut the cock, disconnect the cord, and remove the paper with the indicator diagram.

Mark the card with a reference number and write on it the particulars of speed, pressure, etc., unless these are separately logged.

Defects in Diagrams.

A very common and serious defect in diagrams arises from the stretching of the indicator cord. If two diagrams taken from the same engine at the same time show noticeably unequal lengths the cords are probably inaccurate. As a rule the stretch is greatest when the drum is pulled open. Thus one end of the diagram is widened and the other narrowed, giving incorrect M.E.P. and points of valve action.

The cord used should be as short and as inextensible as possible.

The reducing gear should give an accurate copy of the motion of the engine crosshead, and the cord from the reducing gear should run in a direction parallel with the line of motion of the crosshead.

If the diagram is very much to one side of the card, and if the near end is very straight and vertical, the drum is probably hitting its stop at one end of its travel. Alter the length of the indicator cord.

If the expansion line is stepped in rough terraces the indicator piston is probably sticking and the M.E.P. is too high.

If the expansion is wavy the spring is too light and should be replaced by a stiffer one.

Indicator Piston.

In any indicator the piston should always fit the cylinder loosely enough to allow the steam to blow by it. This is very important, whether the instrument is used at high or low speeds. In regard to any errors that may result from leakage by the piston, it should be distinctly understood that leakage, unless it be sufficient to add to the atmospheric pressure above the piston, cannot affect the accuracy of the indications. Absurd devices have been even patented for keeping the piston tight, while the one thing needful is absolute freedom of motion.

In order that leakage past the piston may not accumulate pressure above the piston, the space above the piston must be in free communication with the atmosphere.

Indicator Connecting Pipes.

In general, short direct connections are preferable.

The use of a long connecting pipe may cause quite an appreciable addition to the clearance volume of a cylinder, especially in the case of small engines. Where the connecting pipe has a bore of $\frac{9}{16}$ in. or $\frac{1}{2}$ in., as is usual, and suffers no contraction up to the indicator tap, however there is no appreciable error in the diagrams due to the connecting pipe being, say, 4 feet long, provided the bore of the two-way cock is quite $\frac{3}{8}$ in.; a bore of $\frac{3}{16}$ in. only, may introduce serious error. (*T. B. Morley, 'Trans. Inst. E. and S.'* 1914–15

The Simplex Indicator.

The Simplex Indicator has a spring of ⊃ form, the ends of the two legs fitting in slots in the piston rod and the resistance abutment. These springs are outside the cylinder, do not become overheated, and can be changed instantly. The Simplex indicator is excellent for gas-engine work. For high pressures, as with the Diesel engine, the piston is reduced in size.

The Crosby Indicator.

This indicator (sold by *Crosby Valve and Engineering Co., Ltd.*, 41–42 Foley Street, London W. 1) has been specially designed for use with high-speed engines, either steam, gas, or oil. Fig. 5 shows the Crosby Indicator as ordinarily made, having a drum $1\frac{1}{2}$ ins. in diameter, this being the correct size for high-speed work, and answering equally well for low speeds.

The special feature in the indicator is the use of a double-coil spiral spring, very carefully calibrated; this form of spring, which is shown in fig. 6, enables the strains to which it is subjected to be transmitted from the centre of the piston through a ball and socket joint. Each spring is made of a single piece of wire wound from the middle into a double coil, the ends of which are screwed into a head with four wings having spirally-drilled holes to receive and hold them securely in place. Adjustment is made by screwing the spring in or out of this head until it is exactly of the right strength, when it is firmly brazed.

Fig. 7 shows a sectional view of the Crosby 'New' Indicator. This has the spring mounted outside the cylinder, where it is easily detached and replaced, and where it is removed from any effect of heat—a very necessary precaution when the indicator is used with superheated steam, or on gas engines. Another novel feature in this indicator is the size and shape of the piston. The area is double that usually used, thus giving a greater active force to overcome any increased inertia due to the longer piston-rod. It is in the form of the central zone of a sphere, an arrangement which practically eliminates cylinder friction. The piston is connected to the pencil mechanism by a rod terminating in a ball-and-socket joint in the centre of the piston. The position of the pencil lever on the drum can be altered by screwing the spring up or down and locking it in place.

For the purpose of making the indicator of the utmost value to engineers, the Crosby New Continuous Drum has been designed, and this apparatus makes it possible to obtain a series of diagrams on a roll of paper. The latest form has a novel arrangement allowing the period between each diagram to be altered at will; the diagrams can be taken close together or farther

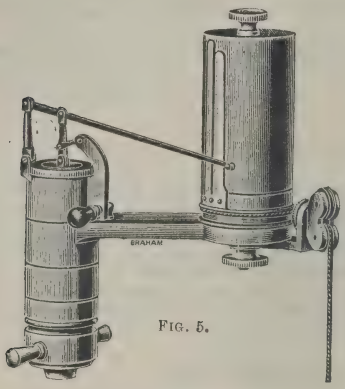


FIG. 5.



FIG. 6.

apart as desired, and the roll supplied is 12 ft. long. Such an apparatus is of great value in ascertaining variations of load in electrical tests, and in connection with rolling and winding engines.

Another useful device, which saves having a reducing apparatus added to an engine, is the Crosby Reducing Wheel. This gives a perfectly correct reduction of the stroke of any engine

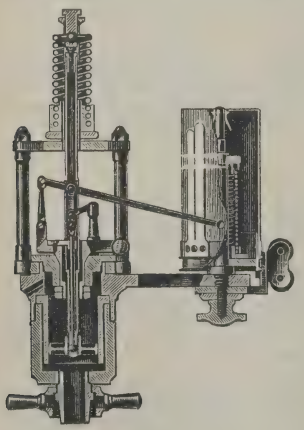


FIG. 7.

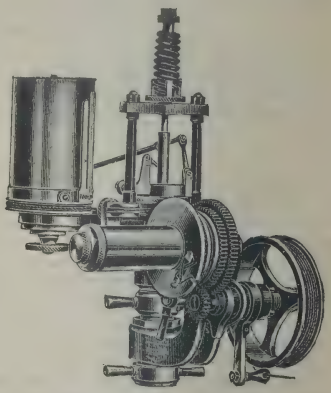


FIG. 8.

to the stroke of the indicator drum, and it is connected directly to the indicator and mounted on the indicator cock. The arrangement is portable and can be used on any engine.

The latest pattern includes a detent device which enables the indicator to be stopped to put on a fresh card without disconnecting the reducing wheel from the engine crosshead. See fig. 8.

SECTION XXIX

PART II

BOILER DESIGN—BOILER SHELLS — TRANSMISSION OF HEAT IN BOILERS—STANDARD CONDITIONS FOR THE DESIGN AND CONSTRUCTION OF MARINE BOILERS—BOILER INSPECTION AND LEGISLATION — BOILER TUBES—BOILER SETTING—STEAM PIPES—PREVENTIVES OF SCALE AND CORROSION — FEED WATER SOFTENING — FEED WATER REGULATORS — STEAM REGULATORS—OIL SEPARATORS — BOILER CLEANERS —VALVES—BOILER EFFICIENCY—TYPES OF BOILERS—BOILER FITTINGS.

(Revised and largely rewritten by T. B. Morley, D.Sc., M.I.Mech.E.)

BOILER DESIGN.

General Considerations.

Simplicity and accessibility for cleaning, favour the tank type of boiler, of which the Lancashire is the best known. The ratios of heating surface to weight and space occupied are, however, necessarily low, and for large units or intensive generation of steam, the tubular boiler has advantages. In order that these advantages may be fully developed, certain problems must be recognised and dealt with, namely—

(*a*) Boiler deposits must be reduced to a minimum, and these constrained in suitable mud drums and other parts.

(*b*) Water and steam spaces must be accessible for cleaning and inspection with a minimum of time and labour for joint breaking and making.

(*c*) Combustion of coal (or oil or gas) in large bulk must be arranged for.

(*d*) Heating surface must be arranged to absorb as much as possible by radiation, and for the remainder to aim at a high ratio of heating surface to length of path of gas flow.

(*e*) Special provision made for overloads.

The first two, (*a*) and (*b*), have received more attention than the other problems. The combustion of fuel in bulk (whether coal or not does not matter, for it is all gaseous before the combustion is completed) needs, for success, a very large combustion chamber and a long path for the flame between the grate and the first tubes or plates. Combustion requires both time and space, and both these have been unduly starved in most large water-tube boiler designs. The large combustion chamber not only gives time and space for efficient combustion, but it increases the surface receiving heat by radiation, and, in general, this is the most efficient of all heating surfaces. The contact heating surface required depends largely on the speed of gas flow, but to keep the latter high involves restricted gas passages, which involve expansion troubles and maintenance difficulties. With attention, these troubles and difficulties may be gradually eliminated, and modern progress with boilers of this type seems likely to be by way of huge combustion chambers with long flame paths, large radiant heat surfaces, and relatively short gas passages between the tubes.

Grate Area—Rate of Combustion—Draught.

Depends on fuel, type of boiler, nature of firing, and draught.

Natural draught depends on temperature of gases and layout of flues. A typical figure is 0·65 in. of water per 100 ft. of chimney height, above the grate. The effective draught at the grate for a Lancashire boiler battery with economiser will be about one-third this figure, and rather less for a water-tube boiler installation with economiser.

The coal burnt per hour per square foot of grate will be about :—

20 lbs. average steam coal ; 5-10 lbs. anthracite very thinly spread.

For other chimneys and draughts the rate of combustion increases not quite in proportion to height.

Heating Surface.

Varies enormously, but typical figures for water-heating surface in square feet per square foot of grate area are :—

Lancashire boiler	25
Water tube	50–60
Water tube, marine	35
Locomotive	60-70
Scotch boiler, marine	35–40
American tubular	50-80

The economiser surface should be about equal to the boiler surface for a Lancashire boiler, and less, down to 50 per cent., for a water tube boiler with ample heating surface.

The superheating surface should be about 20 to 30 per cent. of the boiler surface: rather more for light firing and poor coal, less for hard firing and good fuel.

Evaporation.

Depends mainly on the coal burnt. A typical working figure is 25 lbs. coal per square foot grate area for good natural or moderate assisted draught for stationary boilers, and about 100 lbs. for a locomotive, but this may rise to 200.

Taking 7 lbs. steam per lb. of coal gives about 7 lbs. of steam generated per square foot boiler heating surface per hour for a Lancashire boiler, about 5 lbs. for a water tube, and about 10 or 12, sometimes considerably more, for a locomotive. Superheater and economiser surface not included in the boiler surface.

Boilers fired with blast-furnace gas have about 50-70 per cent. of the coal-fired evaporations, but improvement is being made in this direction.

In hand-fired plants, using coal for fuel, the rate of combustion should not be permitted to fall below 15 lbs. per sq. ft. of grate surface per hour. With stokers the rate of combustion may be as high as the design of the plant will permit. When firing with fine steam-size coal, the rate should not be less than 10 lbs. per sq. ft. of grate-area per hour.

Chimney and Flue Area.

Net sectional area of chimney shaft about 0·5 sq. ft. per 100 lbs. coal burnt per hour at full sustained output. For hard firing rather less. For small chimneys rather more.

Flue areas about 20-40 per cent. greater than chimney area. Sometimes fixed at one-sixth grate area.

Transmission of Heat in Boilers.

The transfer of the heat developed by the combustion of the fuel in the furnace to the water in the boiler takes place in two ways: (1) by radiation from the incandescent fuel and the hot gases ; and (2) by convection and conduction—i.e. conduction through the materials in the path of the heat flow and by the contact of the gases and water with the metal separating them.

The transmission of heat to that part of the heating surface which is directly exposed to the fire is practically entirely by radiation, and that to the remainder of the heating surface practically entirely by convection.

Transmission by Radiation.

The heat transmitted by direct radiation in most boilers is strikingly large, so that the fire-box surface is much the most powerful evaporating surface.

The amount of heat radiated from a fire of temperature T_1 (° F. absolute) to the fire-box surface at T_2 is

$$1{,}600 \times \frac{T_1^4 - T_2^4}{1{,}000^4} \text{ B.Th.U. per hour per sq. ft.}$$

or practically, since T_2^4 is always negligible in comparison with T_1^4,

$$\text{the radiant heat} = 1{,}600 \left(\frac{T_1}{1{,}000}\right)^4.$$

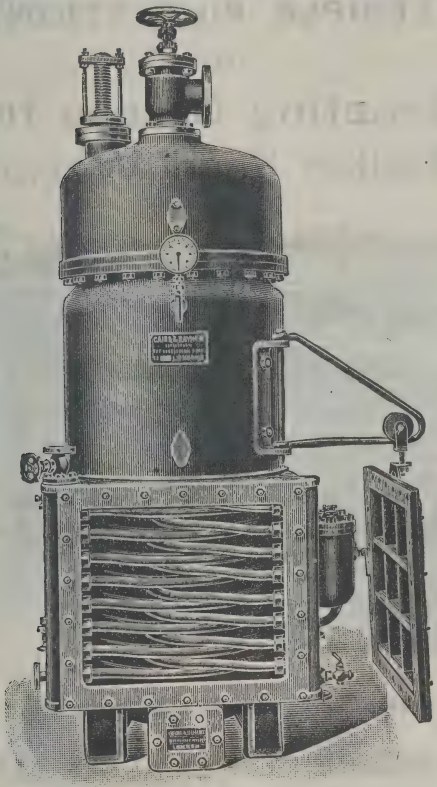
COMPLETE FRESH WATER

DISTILLING INSTALLATIONS (ALL SIZES)

FOR LAND OR MARINE USE,

Evaporators, Condensers, Feed Water Heaters, Feed Water Filters, Storage Calorifiers (automatically controlled), Oil Heaters, Oil Filters,

Supplied to British and Foreign Governments.



EVAPORATOR OPEN FOR INSPECTION.

CAIRD & RAYNER,

ENGINEERS, LIMEHOUSE, LONDON

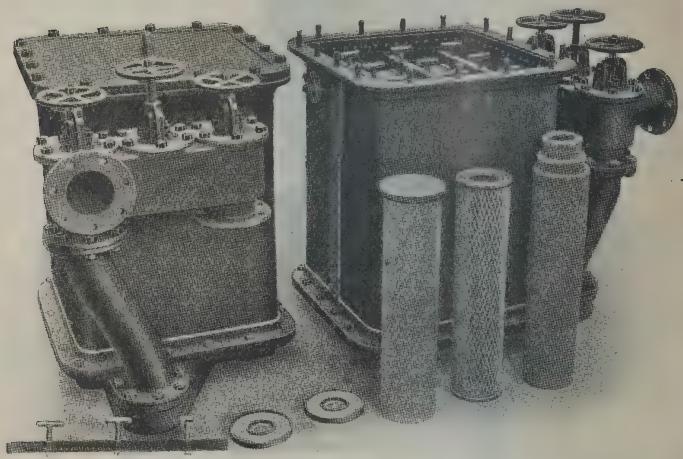
Telegrams: 'VAPORIZE, STEP, LONDON.' Telephone No. EASTERN 210. [SEE OVER

F. 1412

IMPROVED
GRAVITATION TYPE FILTER
(TRIPLE FILTRATION)

FOR

Extracting Grease from Boiler Feed Water.



As supplied to British Admiralty.

(PRESSURE TYPE ALSO MADE).

CAIRD & RAYNER,

ENGINEERS, LIMEHOUSE, LONDON.

Telegraphic Address: 'VAPORIZE, STEP, LONDON. Telephone: EASTERN 210.

F. 1413

Whether the radiating surface to be taken into account in calculating the total heat radiated in the grate area, or a larger amount, is debatable. The formula indicates, however, the importance of the direct heating surface, and also the importance of high combustion temperature for high rates of transmission.

Transmission through Boiler Tubes.

The transmission of heat from a fluid to another fluid on the other side of a metal tube depends on a large number of factors, including, as well as the area of tube surface and the temperatures, the velocities of the fluids, the diameter of the tube, and the nature of the fluids and of the tube surfaces. The change of temperature of the fluid passing through the tube is, of course, itself dependent on the factors named, so that the factors are not all independent. Differences of conductivity and thickness of the metals of the tube are negligible, the resistance to the passage of heat through the metal being a very small portion of the total resistance from fluid to fluid.

In the case of boiler tubes with flue gases passing through them, the change of temperature of the gases, and thus also the heat transferred, can be calculated from the following equation (Lawford H. Fry, *Engineering*, Aug. 27, 1920):—

$$\text{lolog.}\frac{T_1}{t} - \text{lolog.}\frac{T_2}{t} = Mx \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (1).$$

in which T_1, T_2 are the mean flue gas temperatures, ° F. absolute, at two sections of the tube x feet apart, t the mean temperature (absolute) of the tube wall, and 'lolog.' means 'logarithm of the logarithm.'

$$M \text{ is given by } \log. M = B - m \log.\frac{W}{p} \quad . \quad . \quad . \quad . \quad (2)$$

$$\log.(B + 1{\cdot}3) = 1{\cdot}71 - 0{\cdot}54 \log. d \quad . \quad . \quad (3)$$

$$\log. m = 1{\cdot}36 + 0{\cdot}37 \log. d \quad . \quad . \quad . \quad (4)$$

where d = internal diameter of tube in inches, p = perimeter of tube, and W = rate of flow of gas in lbs. per hour. Having determined the fall of temperature of the gases from the above, the heat given up—i.e. the heat transferred—is equal to

$$W \times (T_1 - T_2) \times \text{mean specific heat of gases.}$$

The following table gives the values of M for a number of tube diameters and rates of flow. These values may be used directly in equation (1).

Values of M.

d inches.	W in lbs. per hour.				
	100	200	400	800	1,600
0·5	0·133	0·117	0·104	0·092	0·081
1·0	0·074	0·063	0·054	0·046	0·039
2·0	0·050	0·040	0·033	0·027	0·022
4·0	0·040	0·030	0·023	0·018	0·014
8·0	0·037	0·026	0·019	0·013	0·009

Examples.

(1) To find fall of temperature in flue tube 2 ins. diameter and 12 ft. long, with rate of gas flow of 400 lbs. per hour, boiler pressure 180 lbs. per sq. in., and temperature of gases 2,000° F. at entrance of tubes.

The temperature of the metal of the tube is nearly that of the water in the boiler—i.e. nearly that of steam at 180 lbs. per sq. in.; thus t = 380° F., about. (Slight differences in t have very little influence as a rule.)

From the table, for 2-in. tube, and W = 400 lbs. per hour, M = 0·033

$$\therefore \text{lolog.}\frac{2{,}000 + 460}{380 + 460} - \text{lolog.}\frac{T_2}{380 + 460} = 0{\cdot}033 \times 12;$$

$$\therefore \text{lolog.}\frac{T_2}{840} = 1{\cdot}273;$$

$$\therefore \log.\frac{T_2}{840} = 0{\cdot}1875.$$

$$\therefore T_2 = 1{,}293° \text{ F. abs., or } 833° \text{ F.}$$

(2) To find the heat transferred.

The mean specific heat of flue gases at the temperature in question may be taken as 0·31. Then the heat transferred in B.Th.U. per hour

$$= 400 \times (2{,}000 - 833) \times 0{\cdot}31 = 145{,}000.$$

The tube surface is 6·29 sq. ft., and heat transferred per sq. ft. = 23,100 B.Th.U. per hour.

(3) To find length of tube required to reduce the gas temperature to 700° F., rate of flow and diameter being as before:

$$\text{log.}\frac{2{,}000 + 460}{380 + 460} - \text{log.}\frac{700 + 460}{380 + 460} = 0{\cdot}033 \times \text{length.}$$

from which, length = 15·8 ft.

Boiler Shells.

Mild steel is now almost invariably used for boiler shells. As a rule, in order to provide a margin for wear and tear, plates below $\frac{3}{8}$ in. thick should never be used.

The bending of plates should be done by rolls, and not by hammering. Rivet holes should be drilled and the rough edge removed by a countersinking tool.

Pressures Required for Riveting and Flanging.

The pressure required for riveting is 75 to 125 tons per sq. in. of rivet area, preferably the lower value. Excessive pressure causes local deformation of the plate. The riveting pressure should be maintained for a short period, so that the rivet may cool down a little, otherwise the spring of the plate may stretch the rivet while it is still hot.

The pressure required for flanging boiler plates may be found from the formula:

$$F = \frac{2{\cdot}5\,(L \times t^2}{L + 10},$$

where F = press load in tons, L = length run of flange in feet, t = thickness of plate in sixteenths of an inch. (*Mechanical World Year Book.*)

Welded Seams in Boilers.

The efficiency of welding depends essentially upon the skill and care of the workman who makes the weld; and in view of the uncertainty of the efficiency in practice as compared with tests, it is not advisable to use welds in parts of boilers subjected to tension, though parts in compression, such as furnaces and flue tubes, may be welded.

For particulars of oxy-acetylene and electric welding, see Section XXXVII, pages 2289, 2301.

Many successful boiler repairs have been effected by welding, particularly in the making up of parts that have been wasted away, and the filling up of grooving.

Welded parts should be hydraulically tested to double the working pressure, the material at and around the weld being hammered while under test.

Steel for Boilers.

The steel is usually required to be made by the open-hearth acid process. The tensile strength is about 26 to 30 tons per sq. in. for shell plates, and 24 to 28 tons per sq. in. for plates for furnaces, flue tubes, and endplates.

See page 1416 for Standard Conditions for Marine Boilers.

Strength of Boiler Shells.

Let P = working pressure in lbs. per sq. in.;
t = thickness of plate in inches;
D = diameter (internal) of boiler in inches;
E = efficiency of longitudinal joint—i.e. proportionate strength of joint to plate;
F = factor of safety;
f = tensile strength of plate in lbs. per sq. in.;

then $$P = \frac{2E\,f\,t}{DF} \quad \text{or} \quad t = \frac{PDF}{2E\,f}.$$

The factor of safety is usually between 4 and 6. Frequently rules are used in which the safe working stress is substituted for $\frac{f}{F}$ in the above.

For permissible values of f, F, or $\frac{f}{F}$ the rules of the boiler survey or insurance society concerned should be consulted.

See page 1416 for 'Standard Conditions for Marine Boilers.'

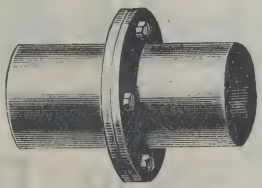
JOHN RUSSELL & CO., LTD.

WALSALL

TUBES


AND FITTINGS OF EVERY DESCRIPTION.

TRADE MARK




TRADE MARK

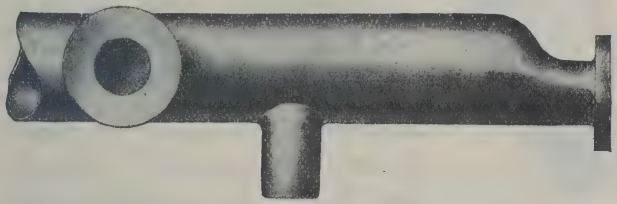FOR MINING AND GENERAL ENGINEERING PURPOSES.



HIGH-PRESSURE TUBES

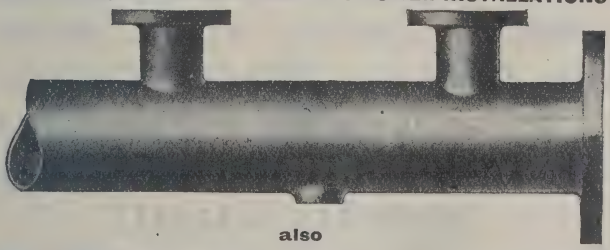FOR STEAM, WATER AND ELECTRIC POWER INSTALLATIONS



also

SOLID-DRAWN SEAMLESS STEEL TUBES

On Admiralty List of Contractors



SOLID DRAWN STEEL TUBES

Weldless Steel Tubes for Naval Boilers, Locomotive Boilers, Superheater Tubes and Elements, Hydraulic Tubes, etc.

BRIGHT DRAWN STEEL BARS.
Free Cutting, also TURNED SHAFTING.

The TALBOT-STEAD TUBE CO. Ltd.

BIRCHILLS, WALSALL

Telegrams: 'Talbot, Walsall.' Telephone Nos.: 276 and 277.

The proportionate strength of joint to plate—i.e. the efficiency of the joint—depends upon the type of joint, and also on the pitch and diameter of the rivets, and thickness of plate.

Typical percentage figures for single riveted lap joints are 40 to 58 ; for double riveted lap 55 to 70 ; for double butt (a butt strap each side of the plate and double riveted) 72 to 77 ; for treble riveted butt, each alternate rivet in outer rows being omitted, 82 to 85.

For the method of calculating the efficiency of riveted joints, see page 1420.

There is a strong tendency now in favour of butt joints for the longitudinal seams, by which the circular form of the shell is maintained, and there is less liability to grooving. The butt strap also protects the joint from corrosion.

All longitudinal seams break joint, as it is termed—that is, the seam in one ring of plates comes opposite to the solid plate in the next ring.

Working Strength of Boiler Flues.

(*Modern Dimensions.*)

P = working pressure, in lbs. per sq. in. L = length, in ft., between seams or hoops.

D = diameter, in inches. t = thickness of plate, in inches.

$$P = \frac{806300t^{2\cdot19}}{D \times L} \div \sqrt{\frac{300}{L}} \text{ (Harrison).} \qquad P = \frac{50t^2}{D\sqrt{L}} - \frac{D}{L} \text{ (M. Longridge).}$$

(t being in 32nds of an inch.)

$$P = \frac{6149t^2}{\sqrt{DL}} \text{ (W. H. Booth).} \qquad P = \frac{48000t^{2\cdot2}}{D\sqrt{L}} \text{ (W. H. Booth).}$$

TABLE OF 2·19 POWER FROM $\frac{1}{4}$ TO $\frac{1}{2}$ INCH.

(*For Harrison's and Booth's formulæ*).

Details.	In.	In.	In.	In.	In.
Thickness of plate . .	·25	·312	·375	·437	·500
Power, 2·19 . . .	·04802	·07829	·116715	·16358	·21915

Every case ought to be finally examined to see that the actual pressure on each square inch of section of plate must not exceed the safe crushing resistance of the material, or $P = 30000t \div Df$. This rule may need applying to test the cases of thick furnaces. The value of f is 3 to 4. This would give, generally speaking, the flue to be about one-third the strength of the shell, but, on the other hand, the strength can be indefinitely increased by the employment of flanged seams, or corrugations.

See also page 1421.

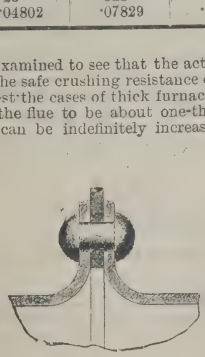


FIG. 1.—Flanged Seam.

The first form of joint in flue and furnace work was ordinary riveting, both transversely and longitudinally, but as weakness developed, the T iron hoop was tried ; this, however, though strong, was found to be too rigid, and to lead to leakage in the seams. The flange out of the solid plate (fig. 1) was then designed by Daniel Adamson, and rapidly made its way to the front. The longitudinal joints are now welded, so that when the flange is adopted, no rivets whatever are exposed to the fire in the furnaces.

BOILER RULES AND REGULATIONS.

'Standard Conditions for the Design and Construction of Marine Boilers' have been recommended by a committee of representatives of the Board of Trade, British Corporation, Lloyd's Register, and Bureau Veritas. An abstract of the rules drawn up is given in the following pages. For boilers constructed to the requirements of a particular surveying body or boiler insurance company, the rules of the body concerned should be consulted.

Standard Conditions for the Design and Construction of Marine Boilers.*

(Abstract.)

MATERIALS OF CONSTRUCTION.

(Based on British Standards.)

Process of Manufacture.—Structural steel for marine boilers shall be made by the open-hearth process, acid or basic.

Freedom from Defects.—The finished material shall be free from cracks, surface flaws, and lamination. It shall also have a workmanlike finish, and must not have been hammer-dressed.†

Tensile Tests: Plates.—The tensile breaking strength of steel plates for shells and girders, determined from Standard test pieces, shall be between the limits of 28 tons and 35 tons per square inch, but a range of not more than 4 tons per square inch shall be permitted in any one case. For plates intended for flanging or welding, and for combustion chambers and furnaces, the tensile breaking strength shall be between the limits of 26 tons and 30 tons per square inch. The elongation, measured on a Standard test piece having a gauge length of 8 ins., shall be not less than 20 per cent. for material of $\frac{3}{4}$ in. in thickness and upwards, required to have a tensile breaking strength between the limits of 28 tons and 35 tons per square inch; and not less than 23 per cent. for material of $\frac{3}{4}$ in. in thickness and upwards, required to have a tensile breaking strength between the limits of 26 tons and 30 tons per square inch.

Stay Bars.—The tensile breaking strength of longitudinal stays shall be between the limits of 28 tons and 35 tons per square inch, with an elongation of not less than 20 per cent. measured on the Standard Test Piece B, but a range of not more than 4 tons per square inch shall be permitted in any one case. For steel bars for combustion chamber stays the tensile breaking strength shall be between the limits of 26 tons and 30 tons per square inch, with an elongation of not less than 23 per cent. measured on the Standard Test Piece B.

Where stay bars are tested on a gauge length of 4 times the diameter (Test Piece F), the elongation shall be 24 per cent. and 28 per cent. respectively.

The tensile breaking strength of angle and tee bars shall be between the limits of 28 and 32 tons per square inch, with an elongation of not less than 20 per cent. measured on the Standard Test Piece A.

For material under $\frac{3}{4}$ in. in thickness the elongation may be 3 per cent., but not more than 3 per cent., below the above-named elongations.

Wherever practicable the rolled surfaces shall be retained on two opposite sides of the test piece.

Rivet Bars.—The tensile breaking strength of rivet bars shall be between the limits of 26 tons and 30 tons per square inch of section, with an elongation of not less than 25 per cent. measured on the Standard Test Piece B or 30 per cent. measured on the Standard Test Piece F. The bars may be tested the full size as rolled.

Bend Tests: Cold Bends.—Test pieces shall be sheared lengthwise or crosswise from plates or bars, and shall not be less than $1\frac{1}{2}$ ins. wide, but for small bars the whole section may be used. For rivet bars bend tests are not required.

---

* Published by His Majesty's Stationery Office.

† The Board of Trade have more detailed instructions which they propose to retain.

Temper Bends.—The test pieces shall be similar to those used for cold bend tests. For temper bend tests the samples shall be heated to a blood-red colour and quenched in water at a temperature not exceeding 80° F. The colour shall be judged indoors in the shade.

In all cold bend tests, and in temper bend tests on samples 0·5 in. in thickness and above, the rough edge or arris caused by shearing may be removed by filing or grinding, and samples 1 in. in thickness and above may have the edges machined, but the test pieces shall receive no other preparation. The test pieces shall not be annealed unless the material from which they are cut is similarly annealed, in which case the test pieces shall be similarly and simultaneously treated with the material before testing.

For both cold and temper bends the test piece shall withstand, without fracture, being doubled over until the internal radius is equal to 1½ times the thickness of the test piece, and the sides are parallel.

For small sectional material these bend tests may be made from the flattened bar.

Bend tests may be made either by pressure or by blows.

Tests for Manufactured Rivets—Rivets selected by the Inspector from the bulk shall withstand the following tests:—

(*a*) The rivet shanks are to be bent cold, and hammered until the two parts of the shank touch, without fracture on the outside of the bend.

(*b*) The rivet heads are to be flattened, while hot, in the usual manner, without cracking at the edges. The heads are to be flattened until their diameter is 2½ times the diameter of the shank.

FORMS OF BRITISH STANDARD TENSILE TEST PIECES.

For Plates and other Structural Material.

TEST PIECE A.

X.—For thicknesses over ⅞ths in.; Maximum width allowed = 1½ ins. Y.—For thicknesses ⅝ths in. to ⅞ths in.: Maximum width allowed = 2 ins. Z.—For thicknesses under ⅝ths in.: Maximum width allowed = 2½ ins.

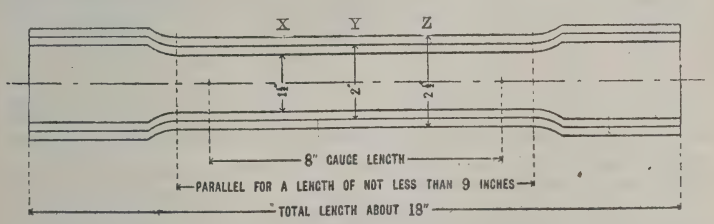


FIG. 2.

NOTE.—It will be observed that the widths given above, being maxima, do not exclude the use of the usual 1½ ins. by 8 ins. test pieces.

TEST PIECE B.

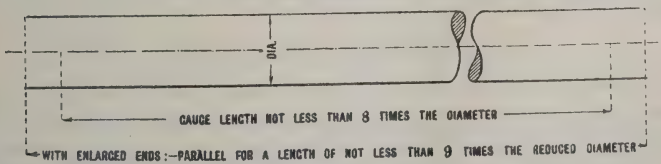


FIG. 3.

TEST PIECE F.

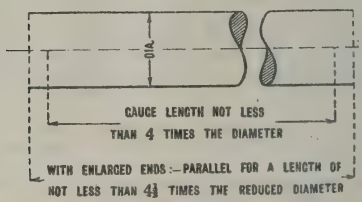


FIG. 4.

SPECIAL IRON FOR SCREW STAYS FOR COMBUSTION CHAMBERS.

In order that iron screw stays may be approved of the same size as would be required for mild steel, the iron must withstand the following tests :—

Tensile Tests.—The tensile breaking strength shall not be less than 21½ tons per square inch, with an elongation of not less than 25 per cent. measured on the Stadard Test Piece B, or of 30 per cent. measured on the Standard Test Piece F.

Bend Tests.—Test pieces either of the bar as rolled, or turned down to 1 in. diameter, shall stand bending cold until the sides are parallel and the space between the two sides is not greater than the diameter of the test piece.

Diameters and Thickness of Plain and Stay Tubes.—The following table may be worked to :—

Outside Diameter in Inches.	Standard Thicknesses in L.S.G.				Suitable for Working Pressures of Lbs. per Square Inch.			
Inches.	A	B	C	D	A	B	C	D
2	—	11	10	9	—	155	215	300
2¼	11	10	9	8	140	190	260	315
2½	11	10	9	8	125	175	230	300
2¾	11	10	9	8	110	160	215	275
3	10	9	8	7	140	190	250	300
3¼	10	9	8	7	130	180	230	280
3½	10	9	8	7	120	165	215	260

The minimum thickness of stay tubes measured under the threads shall be ¼ in. for marginal stay tubes, and $\frac{5}{16}$ in. for other stay tubes.

Thickened Ends.—If stay tubes are required to have their thickness increased at the screwed ends, so that the thickness at the bottom of thread is practically the same as in the body of the tube, the thickening is to be attained by upsetting and not by any welding process, and the tubes are to be annealed after the upsetting.

Screwed Threads to be Continuous.—Stay tubes must be screwed at both ends with a continuous thread, which should not be finer than 10 threads per inch. It is desirable, however, that they should be screwed to the standard 9 threads per inch, therefore, after 30th June, 1921, this should be the rule.

MAIN BOILERS, CYLINDRICAL TYPE.

GENERAL CONDITIONS AS TO DESIGN, WORKMANSHIP, HYDRAULIC TEST, ETC.

In the design and construction of marine boilers the following conditions should be observed :—

Riveting of End Seams.—The riveting of the seams joining the end plates to the cylindrical shell shall be not less than 42 per cent. of that of the solid plate. Where the shell plates exceed ⅝ in. in thickness the seams connecting the shell plates to the end plates are to be double riveted.

Other Circumferential Seams.—The circumferential seam at or near the middle of the length of single-ended boilers should have a strength of joint not less than 60 per cent. of the solid plates. The inner circumferential seams of double-ended boilers should have a strength of joint not less than 62 per cent. of the solid plate. In any case there shall be three rows of rivets when single-ended boilers have shell plates over $1\frac{3}{8}$ ins. in thickness, and when double-ended boilers have shell plates over $1\frac{3}{16}$ ins. in thickness. Where the shell plates exceed $\frac{1}{2}$ in. in thickness the intermediate circumferential seams of double-ended boilers are to be at least double riveted.

Welding and other Treatment of Plates.—No steel plates subject to a direct tensional stress are to be welded except where the weld is covered by a butt strap or straps. For small steam domes, by special permission where the welding is done by hammer and the plates do not exceed $\frac{1}{2}$ in. in thickness, the straps may be omitted. The strength shall, in such cases, be assumed to be 50 per cent. of that of the solid plate. All steel plates which are welded, dished, flanged, or locally heated, are to be afterwards efficiently annealed.

Butt Straps.—Butt straps must be cut from plates, and not from rolled strip.

Rivet Holes.—All rivet holes must be drilled 'fair,' and as far as possible they should be drilled in place. After drilling the plates the burrs should be removed and the faying surfaces of the plates cleaned, and the sharp outer edges of holes removed also.

Stays not to be Welded. Annealing of Fire-worked Stay Bars.—No steel stays are to be welded. If plus threads are desired, the ends of the stay bars may be upset or the bars may be drawn down in the central portions from bars originally of the size of the ends. In either of these two cases the bars must be subsequently annealed throughout.

In double-ended boilers the through longitudinal stays must be supported at or near the middle of their length.

Threads of Screw and other Stays.—All longitudinal stays and also screw stays should have threads in accordance with the British Standard Specification, and true to pitch, viz.:—

After the 30th June, 1921, all screw stays $1\frac{1}{4}$ ins. in diameter and upwards should have 9 threads per inch, and all stays 2 ins. in diameter and above passing through plates and secured by nuts on each side of the plate should have not more than 6 threads per inch.

Compensation Rings to Manholes.—Where the cylindrical shell is cut for a manhole, compensation must be provided and must be such that the strength in way of the hole is not less than that required for the longitudinal joint.

Hydraulic Tests of New Boilers.—In all new boilers working at pressures up to 100 lbs. per square inch the hydraulic test must be twice the working pressure. For boilers working at pressures greater than 100 lbs. per square inch the hydraulic test pressure must be $1\frac{1}{2}$ times the working pressure plus 50 lbs. per square inch.

RULES FOR DETERMINING THE WORKING PRESSURE TO BE ALLOWED ON VARIOUS PARTS OF CYLINDRICAL MARINE BOILERS.

Cylindrical Shells.

Formula for Working Pressure of the Shell.—For the cylindrical shells of steel marine boilers the maximum working pressure (which is designated by W.P. and is in lbs. per square inch) to be allowed shall be calculated from the following formula:—

Where the thickness of the shell plates does not exceed $1\frac{3}{4}$ ins.,

$$\text{W.P.} = \frac{(t - 2) \times \text{S} \times \text{J}}{\text{C} \times \text{D}}$$

Where the thickness of the shell plates exceeds $1\frac{3}{4}$ ins. and double butt straps are fitted,

$$\text{W.P.} = \frac{t \times \text{S} \times \text{J}}{2{\cdot}85 \times \text{D}}$$

where t is the thickness of the shell plates in 32nds of an inch,

S is the minimum tensile strength of the steel shell plates in tons per square inch,

J is the percentage of strength of the longitudinal seams calculated by the methods described below,

C is a coefficient, which is 2·75 when the longitudinal seams are made with double butt straps; 2·83 when the longitudinal seams are made with lap joints and are treble riveted: 2·9 when they are made with lap joints and are double riveted; and 3·3 when they are made with lap joints and are single riveted.

D is the inside diameter of the outer strake of plating of the cylindrical shell measured in inches.

N.B.—The factor of safety must be in no case less than 4.

Methods of Calculating the Strength of Riveted Joints.—The percentage of strength of a riveted joint (J) is found from the following formulæ (I), (II), (III): (I) and (II) are applicable to any type of joint; (III) is applicable only to that type of joint in which the number of rivets in the inner rows is double that in the outer row. The lowest value given by the application of these formulæ is to be taken as the percentage of strength of the joint.

(I) Percentage of strength of plate at joint as compared with solid plate $= \dfrac{100\,(p-d)}{p}$.

(II) Percentage of strength of rivets as compared with the solid plate $= \dfrac{100\,(S_2 \times a \times n \times C)}{S_1 \times p \times T}$

(III) Percentage of combined strength of the plate at the inner row of rivet holes and of the rivets in the outer row

$$= \frac{100\,(p-2d)}{p} + \frac{100\,(S_2 \times a \times C)}{S_1 \times p \times T},$$

where

p = pitch of rivets at outer rows in inches;
d = diameter of rivet holes in inches;
a = sectional area of one rivet in square inches;
n = number of rivets which are fitted in the pitch p;
T = thickness of plate in inches;
C = 1·0 for rivets in single shear as in lap joints;
C = 1·875 for rivets in double shear as in double butt-strapped joints;
S_1 = minimum tensile strength of plates in tons per square inch;
S_2 = shearing strength of rivets, which is taken generally to be 23 tons per square inch, and may be 85 per cent. of the minimum tensile strength of the rivet bars.

Thickness of Butt Straps.—Where the longitudinal seams are fitted with double butt-strapped joints, the outer butt strap should have at least 0·625 of the strength of the plate, and should be of sufficient thickness to permit of efficient caulking of its outer edges. The inner butt strap should be $\frac{4}{32}$ in. thicker than this.

In cases where the number of rivets in the inner rows is double the number in the outer row, this will require the thickness of the outer strap to be

$$t = \frac{5 \times (p-d)}{8 \times (p-2d)} \times T,$$

and that of the inner strap to be at least

$$t_n = \frac{5 \times (p-d)}{8 \times (p-2d)} \times T + \tfrac{4}{32} \text{ in.}$$

Distances between rows of Rivets and between Rivets and Plate Edges.—In all cases the clear space between a rivet hole and the edge of a plate should not be less than the diameter of the rivet hole—i.e. the centre of the rivet hole should be at least $1\frac{1}{2}$ diameters distant from the edge of the plate.

In joints, whether lapped or fitted with butt straps, in which there are more than one row of rivets and in which there is an equal number of rivets in each row, the distance between the rows of rivets should be not less than $0{\cdot}33p + 0{\cdot}67d$, with zigzag riveting, or $2d$ with chain riveting.

In joints in which the number of rivets in the outer rows is one-half of the number in each of the inner rows, and in which the inner rows are chain riveted, the distance between outer rows and the next rows should be not less than $0{\cdot}33p + 0{\cdot}67d$ or $2d$, whichever is the greater, and the distance between the rows in which there are the full number of rivets should be not less than $2d$.

In joints in which the number of rivets in the outer rows is one-half of the number in each of the inner rows, and in which the inner rows are zigzag, the distance between the outer rows and the next rows should be not less than $0{\cdot}2p + 1{\cdot}15d$. and the distance between the rows in which there are the full number of rivets should be not less than $0{\cdot}165p + 0{\cdot}67d$.

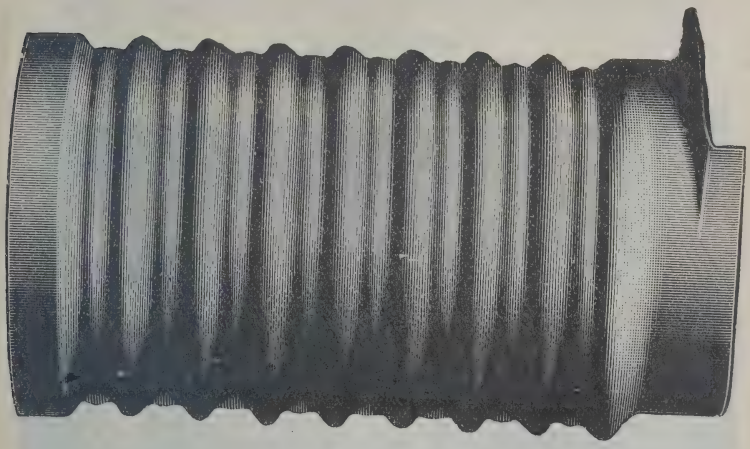
In the above p is the pitch of the rivets in the outer rows.

DEIGHTON'S
PATENT FLUE & TUBE Co., LTD.

Telegrams : 'FLUES, LEEDS.' Telephone 26652.

MAKERS OF

DEIGHTON, MORISON, AND FOX TYPES OF CORRUGATED FURNACES FOR MARINE AND :: :: :: LAND BOILERS :: :: ::



Full particulars and Catalogue on application.

MAKERS TO THE
BRITISH AND PRINCIPAL FOREIGN GOVERNMENTS,
SHIPBUILDERS AND BOILERMAKERS.

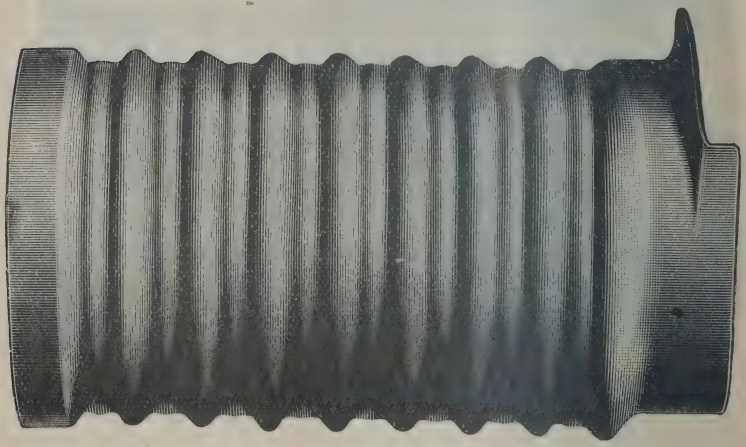
VULCAN WORKS, PEPPER RD., LEEDS.

DEIGHTON'S
PATENT FLUE & TUBE Co., LTD.

Telegrams: 'FLUES, LEEDS.' Telephone 26652.

MAKERS OF

DEIGHTON, MORISON, AND FOX TYPES OF CORRUGATED FURNACES FOR MARINE AND :: :: :: LAND BOILERS :: :: ::



Ful particulars and Catalogue on application.

VULCAN WORKS,
Pepper Road, LEEDS.

F. 1421

Maximum Pitch of Rivets in Longitudinal Joints.—The maximum pitch of the rivets in the longitudinal joints of boiler shells is to be—

$$\text{Maximum pitch in inches} = C \times T + 1\tfrac{5}{8} \text{ ins.}$$

where T is the thickness of the plate in inches and C is a coefficient as given in the following table :—

Number of Rivets per Pitch.	Coefficients for Lap Joints.	Coefficients for Double Butt-strapped Joints.
1	1·31	1·75
2	2·62	3·50
3	3·47	4·63
4	4·14	5·52
5	—	6·00

FURNACES.

Plain Furnaces.—The working pressure to be allowed on plain furnaces or furnaces strengthened by Adamson or other joints, and on the cylindrical bottoms of combustion chambers, is to be determined by the following formulæ, the least pressure obtained by either formula being taken :—

$$\text{W.P.} = \frac{C\,(t-1)^2}{(L+24)\times D}, \text{ or W.P.} = \frac{C_1}{D} \times [10\,(t-1) - L].$$

where D is the external diameter of the furnace or combustion chamber bottom in inches ;

t is the thickness of the furnace plate in 32nds of an inch ;

L is the length of the furnace or of combustion chamber bottom or the length between points of substantial support, in inches, measured from the centres of rivet rows or from the commencement of flange curvature, whichever is applicable ;

C = 1,450 where the longitudinal seams are welded, and 1,300 where they are riveted ;

C_1 = 50 where the longitudinal seams are welded, and 45 where they are riveted.

W.P. is the working pressure in lbs. per square inch.

Corrugated Furnaces.—The working pressure to be allowed on corrugated furnaces is to be determined by the following formula :—

$$\text{W.P.} = \frac{C\,(t-1)}{D},$$

where D is the external diameter measured at the bottom of the corrugations in inches ;

t is the thickness of the furnace plate in 32nds of an inch, measured at the bottom of the corrugation or camber ;

C is a coefficient which is 480 for the Fox, Morison, Deighton, Purves, and other similar furnaces, 510 for the Leeds Forge Bulb Suspension furnace.

N.B.—No furnace, plain or corrugated, should exceed $\frac{13}{16}$ in. in thickness.

FLAT PLATES SUPPORTED BY STAYS SECURED IN VARIOUS WAYS.

Flat Plates supported by Screwed Stays.—The working pressure to be allowed on flat plates supported by stays is to be calculated by the following formula :—

$$\text{W.P.} = \frac{(t-1)^2 \times C}{a^2 + b^2},$$

but if steel of less tensile strength than 26 tons per square inch is used the working pressure allowed shall be correspondingly reduced.

In this formula,

W.P. is the working pressure in lbs. per square inch ;

t is the thickness of the flat plate in 32nds of an inch ;

a is the distance apart of the rows of stays in inches ;

b is the pitch of the stays in the rows in inches ;

C is a coefficient which varies with the method of fixing the stays as follows : —

Where the plates are exposed to flame and the stays are screwed into the plate and their ends are riveted over C = 50.

Where the plates are not exposed to flame and the stays are screwed into the plate and their ends are riveted over, C = 57.

In these cases the thickness of the plate must be at least half the diameter of the stay required by the rule.

Where stay tubes are screwed into tube plates and expanded, C = 52. If they are fitted with nuts, C = 72.

Where the plates are exposed to flame and the stays are screwed into the plate and fitted with nuts on the outside, C = 75. Where the plates are not exposed to flame, C = 86.

Where the stays pass through the plates not exposed to flame and are fitted with nuts inside and outside, C = 96.

Where plates are stiffened by flanging, the inner radius of which is not greater than $2\frac{1}{2}$ times the thickness of the plate, for the support thus given C = 110 when the plates are not exposed to flame, and C = 96 where they are exposed to flame. The pitch is to be reckoned from the commencement of the curvature.

GIRDERS.

Girders Supporting Combustion Chamber Tops.—For girders supporting the tops of combustion chambers the following formula is to be used :—

$$\text{W.P.} = \frac{\text{C} \times d^2 \times t}{(\text{L}-\text{P}) \times \text{D} \times \text{L}} \times \frac{\text{S}}{28},$$

where d is the depth of the girder at centre in inches ;

t is the thickness of the girder at centre, when this is a forging, or the sum of the thicknesses of the plates when the girder is made of two plates, measured in 32nds inch ;

L is the length of the girder in inches, measured between the tube plate and back chamber plate inside, or between tube plates in chambers common to two opposite furnaces ;

P is the pitch of stays supported by the girder, in inches ;

D is the distance apart of the girders, centre to centre, in inches ;

S is the minimum tensile strength of the steel plates forming the girder, in tons per square inch. In the case of forged girders S is to be taken as 24 for iron and 28 for steel ;

C is a coefficient as follows :—

$$\text{C} = \frac{n}{n+1} \times 495,$$

when the number of stays in each girder is odd, and

$$= \frac{n+1}{n+2} \times 495,$$

when the number of stays in each girder is even, n being the number of stays to each girder.

STAYS.

Iron or Steel Screw Stays to Combustion Chambers.—For screw stays with threads not coarser than 9 threads per inch, made of steel or of special wrought iron tested to the requirements, the following formula is to be used :—

$$\text{W.P.} = \frac{(d - 0{\cdot}267)^2 \times 8{,}250}{a},$$

where d is the diameter of the stay over the thread in inches ;

a is the area in square inches supported by one stay.

But in no case must the stress exceed 9,000 lbs. per square inch of section.

Steel Longitudinal Stays.—For steel longitudinal stays with threads not coarser than 6 threads per inch, the working pressure is to be calculated from the following formula :—

$$\text{W.P.} = \frac{(d - 0{\cdot}340)^2 \times 9{,}500}{a} \times \frac{S}{28},$$

where d is the diameter of the stay over the thread in inches;

a is the area in square inches supported by one stay;

S is the minimum tensile strength of the steel in tons per square inch.

But in no case must the stress exceed 11,000 lbs. per square inch of section, when steel of a minimum tensile strength of 28 tons per square inch is used.

In cases where longitudinal stays are made with enlarged ends, and the body of the stay is smaller in diameter than at the bottom of the thread, and in cases where coarser threads than 6 per inch are used, the working pressure is to be calculated from the following formula :—

$$\text{W.P.} = \frac{(d_1 - 0{\cdot}125)^2 \times 9{,}500}{a} + \frac{S}{28},$$

where d_1 is the diameter of the stay at the bottom of the thread or at the smallest part of the body.

Stay Tubes.—On stay tubes, whether of wrought iron or of lap-welded steel, a working stress of 7,500 lbs. per square inch of the net sectional area at the bottom of the thread is permitted.

Dished Ends (Convex Outside).—For ends of steam chests, etc., dished to partial spherical form, the following formula is to be used :—

$$\text{W.P.} = \frac{15 \times S\,(t - 1)}{R}.$$

W.P. is the working pressure in lbs. per square inch;

t the thickness in 32nds of an inch;

R the inner radius of curvature of the end in inches, which shall not exceed the diameter of shell;

S the minimum tensile strength of plates in tons per square inch.

Safety Valves.—At least two safety valves must be fitted to each boiler. They must be arranged so that the springs and valves are cased in, that the valves cannot be overloaded when steam is up, that they can be lifted by easing gear, and turned round on their seats by hand, and in case of fracture of springs they cannot lift out of their seats.

The easing gear must be arranged to lift all the safety valves on a boiler together, and must be workable from some accessible place free from steam danger.

All the safety valves of each boiler may be fitted in one chest, which must be separate from any other valve chest and which must be connected direct to the boiler by a strong and stiff neck, the passage through which should have a cross-sectional area at least equal to one-half the aggregate area of the safety valves in the chest.

Each safety valve box shall have a means of draining it; the pipe shall lead to the bilge or tank clear of the boiler.

Size of Safety Valves.—The minimum aggregate area of the safety valves of the ordinary type in each boiler, whether coal-fired or oil-fired, and whether working under natural, forced, or induced draught, shall be found by the following formula :—

Aggregate area of safety valves in square inches

$$= \text{Total heating surface of boilers in square feet} \times \left(\frac{K}{p + 15}\right).$$

where p is the working pressure in lbs. per square inch.

For coal-fired boilers K is 1·25, for oil-fired boilers and boilers with closed stokehold forced draught K = 1·5.

Accumulation Test of Safety Valves.—All safety valves must be set to the required pressure under steam. During a test of 15 minutes with the stop valves closed, and under full firing conditions, the accumulation of pressure must not exceed 10 per cent. of the loaded pressure. During this test no more feed-water should be supplied than is necessary to maintain a safe working water level.

Superheater Safety Valves and Drains.—Where a superheater is fitted which can be shut off from the boiler it must have a separate safety valve fitted with easing gear, etc. The valve as regards construction must comply with the regulations for ordinary safety valves, but the easing gear may be fitted to be workable from the stokehold only.

The superheater must be fitted with a drain cock or valve to free it from water when necessary.

BOILER INSPECTION.

Boilers must be inspected at least once a year. The owner or user may be made responsible for the effects of an explosion.

To prepare a boiler for inspection it should be thoroughly cleaned inside, scale removed, the manhole and mudhole doors removed, the blow-off cock closed, the steam valve locked to prevent tampering and danger to cleaners and inspectors, the hot feed valve locked, the bars and bridges removed from the furnace, the flues and boiler plates in the flues thoroughly swept clean of soot and dust, and the flue doors removed and the hearth pit plates lifted away.

The special points to be observed by the inspector are the condition of the plates along the seatings and all points of contact with bricks, the dryness of the flues, the absence of lime mortar near the plates, the dryness of the top covering, leakages at seams, circularity of furnaces, blisters, signs of overheating. Internally: grooving at plate junctions, around the angle irons of shell or furnace tube connection to end plates, at the root of angle irons or flanged seams or other points of stress or flexure, tautness of gusset stays, easy slackness of longitudinal stay bolts if present, condition of plates as to cleanliness, corrosion, &c., condition of low-water appliances, scum troughs, feed pipes, gauge openings, and generally all points bearing on the safety of the boiler that may by some unlikely and hard to conceive contretemps lead to mishap of any sort. Experience is necessary to make a good inspector. He must possess judgment and sense of proportion, and be able to order a boiler not to be worked until further notice without it being possible for further enquiry to show that there were not good grounds for his fears. In old boilers the openings in the shell should be looked to in order to ascertain the weakening due to removal of so much plate, and the degree of strength given back by added rings or other reinforcements. It is also desirable to note the quality of the attendance and workings of the boiler periodically, and to test the accuracy of the steam gauge and working of the safety valves.

The foregoing remarks apply more particularly to shell boilers. For water-tube boilers, the caps of the water tubes must all be removed, and each tube examined and seen through for scale deposit, and as far as possible externally for blisters. Locomotive-type boilers are not easy to inspect, should never have riveted shell seams below water line, and must be largely judged by the appearance of such parts as are visible. Every few years the shell should be examined internally, the fire tubes being removed for the purpose. The accessibility of a boiler for complete inspection ought to be a considerable factor in determining the choice of a boiler, and more particularly so when the water is dirty or corrosive in quality.

BOILER LEGISLATION.

The Boiler Explosions Acts, 1882 (45 & 46 Vic. ch. 22) and 1890 (53 & 54 Vic. ch. 35) provide for inquiry into boiler explosions. The Acts extend to the whole of the United Kingdom. The term 'boiler' means any closed vessel used for generating steam, heating any liquid, or receiving steam for heating, steaming or boiling, excepting boilers used exclusively for domestic purposes or in the service of his Majesty. On the occurrence of a boiler explosion, notice must be sent within 24 hours to the Board of Trade by the owner, user, or person acting for him. This notice to state the name of premises or works, postal address, day and hour of explosion, number of persons killed and injured, description of boiler, purpose used for, particulars of failure, working pressure, by whom last inspected, and by whom insured.

The Act of 1890 makes the Act of 1882 applicable to sea and mine boilers.

The judgment of the court of enquiry into the Greenwich explosion of Christmas 1906 has made it a serious matter for engineers who have not acquired the necessary experience by training to assume responsibility for steam boilers. Steam engineers should be in charge of steam plant and machinery, is the lesson of the verdict in that case.

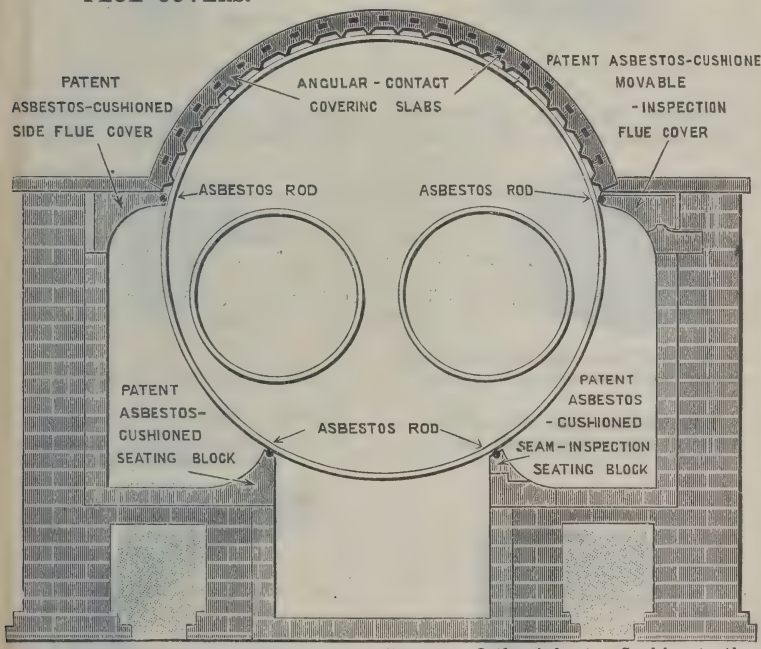
'MODERN METHODS OF SETTING STEAM BOILERS'

BASED ON

EFFICIENCY.

We are the only Boiler Setters who are the Actual Makers of the goods we supply.

A BOILER SET WITH PATENT ASBESTOS CUSHIONED BOILER SEATING BLOCKS AND SQUARE ASBESTOS CUSHIONED FLUE COVERS.



The above illustration shows the application of the Asbestos Cushion to the Seating Blocks and Side Flue Covers.

PREVENTS SHORT-CIRCUIT OF HEAT TO STACK.

E. J. & J. PEARSON, Ltd.,

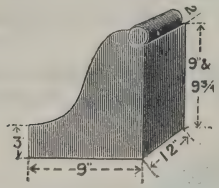
Firebrick Makers,

STOURBRIDGE.

F. 1424


MODERN METHODS OF SETTING STEAM BOILERS BASED ON EFFICIENCY.

PATENT ASBESTOS CUSHIONED SEATING BLOCKS.




No. 1. Short 9″; Long 9¾″

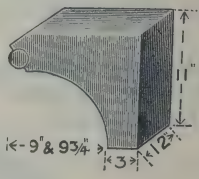PATENT ASBESTOS CUSHIONED FLUE COVERS.




No. 11. Short 9″; Long 9¾″

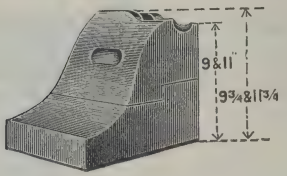PATENT ASBESTOS CUSHIONED SEAM INSPECTION SEATING BLOCKS.




No. 3. For 9″ & 9¾″ Seating Block, Right hand. Made also Left hand to match.

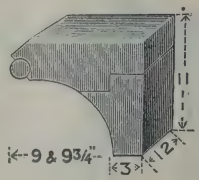PATENT ASBESTOS CUSHIONED SEAM INSPECTION FLUE COVERS.




No. 11. Short 9″; Long 9¾″

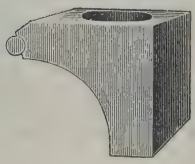PATENT ASBESTOS CUSHIONED FLUE COVER PYROMETER BLOCKS.



No. 17. For 9″ Flues

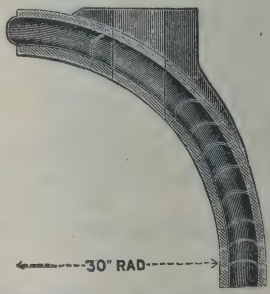PATENT INTERLOCKING ARCH BRICKS AND MANHOLE BLOCKS FOR DOWNTAKES.



N.B.—All the above can be obtained from stock. We also supply all types and patterns.

E. J. & J. PEARSON, Ltd., STOURBRIDGE.

F. 1425

BOILER TUBES.

Approximate Weight of Iron Boiler Tubes.

PER FOOT RUN.

External Diameter.	11 S.W.G.	10 S.W.G.	9 S.W.G.	8 S.W.G.	¼-inch	$\frac{5}{16}$-inch.
Ins.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.
$2\frac{1}{2}$	2·89	3·18	3·55	3·92	5·89	7·16
$2\frac{3}{4}$	3·20	3·51	3·93	4·34	6·54	7·97
3	3·50	3·85	4·30	4·75	7·20	8·79
$3\frac{1}{4}$	3·80	4·18	4·68	5·17	7·85	9·61
$3\frac{1}{2}$	4·11	4·52	5·06	5·59	8·50	10·4
$3\frac{3}{4}$	4·41	4·85	5·43	6·01	9·16	11·2
4	4·72	5·19	5·81	6·43	9·81	12·0
$4\frac{1}{4}$	5·02	5·52	6·19	6·85	10·4	12·8
$4\frac{1}{2}$	5·32	5·86	6·57	7·27	11·1	13·7
$4\frac{3}{4}$	—	6·19	6·94	7·69	11·7	14·5
5	—	6·53	7·32	8·11	12·4	15·3
$5\frac{1}{4}$	—	6·86	7·70	8·52	13·0	16·1
$5\frac{1}{2}$	—	—	8·07	8·94	13·7	16·9
$5\frac{3}{4}$	—	—	8·45	9·36	14·4	17·8
6	—	—	8·83	9·78	15·0	18·6

Surface of Boiler Tubes.

PER FOOT RUN.

External Diameter.	Surface.	External Diameter.	Surface.	External Diameter.	Surface.
Ins.	Sq. Ft.	Ins.	Sq. Ft.	Ins.	Sq. Ft.
$\frac{3}{4}$	·1964	$1\frac{3}{4}$	·4582	$3\frac{1}{4}$	·8509
$\frac{7}{8}$	·2291	$1\frac{7}{8}$	·4909	$3\frac{1}{2}$	·9163
1	·2618	2	·5236	$3\frac{3}{4}$	·9818
$1\frac{1}{8}$	·2945	$2\frac{1}{8}$	·5563	4	1·047
$1\frac{1}{4}$	·3273	$2\frac{1}{4}$	·5891	$4\frac{1}{2}$	1·178
$1\frac{3}{8}$	·3600	$2\frac{1}{2}$	·6545	5	1·307
$1\frac{1}{2}$	·3927	$2\frac{3}{4}$	·7200	$5\frac{1}{2}$	1·440
$1\frac{5}{8}$	·4254	3	·7854	6	1·571

British Standard Specification for Charcoal Iron Lapwelded Boiler Tubes.*

(No. 43–1909.) (*Abstract.*)

1. The tubes shall be lapwelded and shall be made from genuine Swedish charcoal puddled iron of the best quality. 2. The tubes must be perfectly sound and well-finished, clean, and free from surface defects and rust, and the ends must be faced clean and square. They must be of the




Fig. 5.




Fig. 6.

dimensions specified and of uniform thickness, and unless otherwise specified, of uniform diameter throughout. 3. Tubes shall be carefully annealed at both ends. 5. The tubes or strips cut from the tubes shall show a tensile strength between the limits of 19 and 24 tons per square inch inclusive, with a contraction of area of the metal of not less than 45 per cent. 6. The tubes

* By permission of the British Engineering Standards Association.

must stand bulging (fig. 5) both hot and cold without showing either crack or flaw until the diameter of the bulged end measures not less than 15 per cent. greater than the original diameter of the tube when tested hot and 10 per cent. greater than the original diameter of the tube when tested cold. 7. A piece of tube 2 ins. long shall be placed on end and must stand hammering down, until it is reduced to $1\frac{3}{8}$ in. high, without showing crack or flaw. 8. The tubes must when cold stand flattening (fig. 6) until the interior surfaces of the tubes meet without showing crack or flaw. 9. All tubes shall be tested by an internal hydraulic pressure of at least 750 lbs. per sq. in., and any tubes failing to stand this test will be rejected.

BRITISH STANDARD SPECIFICATION FOR COLD DRAWN WELDLESS STEEL TUBES FOR LOCOMOTIVE BOILERS.*

No. 53—1913 (Abstract).

Quality of Material.

The tubes shall be cold drawn and weldless, and shall be manufactured from steel of the best quality made by the open-hearth process. They must not show on analysis more than 0·03 per cent. of sulphur or of phosphorus. The manufacturer shall supply an analysis when required to do so.

Freedom from Defects.

The tubes must be perfectly sound, well-finished, clean, and free from surface defects and rust, and the ends must be faced clean and square. They must be of the dimensions specified, of uniform thickness, and, unless otherwise specified, of uniform diameter throughout.

Annealing.

The tubes shall be carefully annealed throughout their length after the operation of drawing.

Permissible Variation in Weight.

The actual weight of each tube must not differ from the calculated weight by more than $2\frac{1}{2}$ per cent. below or 5 per cent. above the weight calculated from the specified dimensions, allowing 489 lbs. per cubic foot of metal in the tubes.

Tensile Test.

The tubes or strips cut from the tubes shall without further annealing show a tensile strength of not more than 24 tons per sq. in., with an elongation of not less than 28 per cent. in 8 ins. If strips are cut for testing from tubes over $2\frac{1}{4}$ ins. diameter, they may be annealed before testing.

Crushing down Test.

A piece of tube 2 ins. long shall be placed on end and must, when cold, stand hammering down, until it is reduced to $1\frac{1}{8}$ ins. high, without showing either crack or flaw.

Flattening Test.

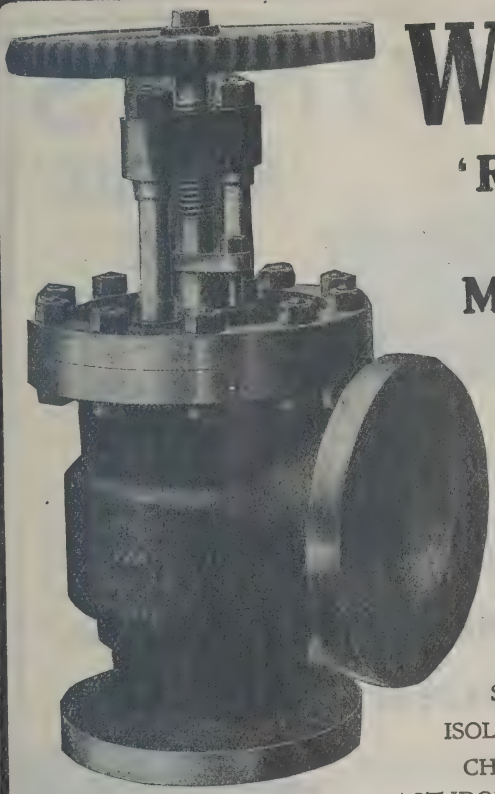
The tubes must, when cold, stand flattening (fig. 6), without showing crack or flaw, until the interior surfaces of the tubes meet, or, when the tubes are over 11 S.W.G. in thickness, until the interior surfaces are brought to a distance apart equal to the thickness of the wall of the tube.

Hydraulic Test.

Every tube shall be tested by an internal hydraulic pressure of at least 1,000 lbs. per sq in., and any tubes failing to stand this test will be rejected.

---

* By permission of the British Engineering Standards Association.



WINN'S

'Reliable' Boiler Mountings AND Engine Fittings

JUNCTION VALVES
GLOBE STOP VALVES
PARALLEL SLIDE VALVES
ISOLATING VALVES
CHECK VALVES
in CAST IRON or CAST STEEL

SAFETY AND RELIEF VALVES
SPRING AND LEVER LOADED TYPES

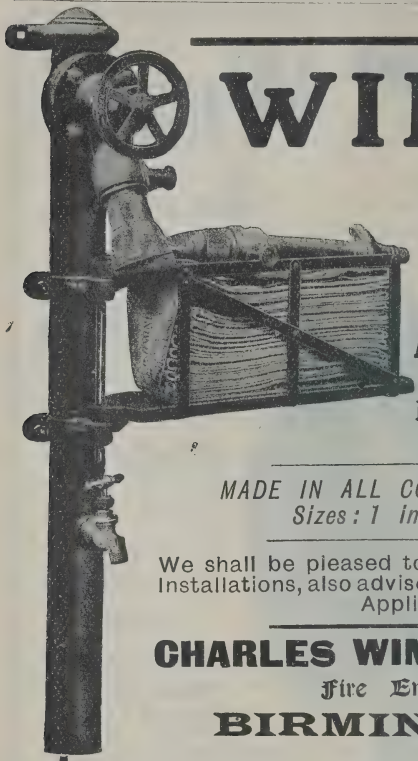
WRITE FOR FULL PARTICULARS

CHARLES WINN & CO. LD.

Steam Engineers

BIRMINGHAM

F. 1426



WINN'S

'RELIABLE' FIRE APPLIANCES

FOR

EVERY CLASS OF BUILDING

MADE IN ALL COUPLING SYSTEMS
Sizes: 1 in. to 2¾ ins.

We shall be pleased to Estimate for complete Installations, also advise as to the most suitable Appliances.

CHARLES WINN & CO. LD.

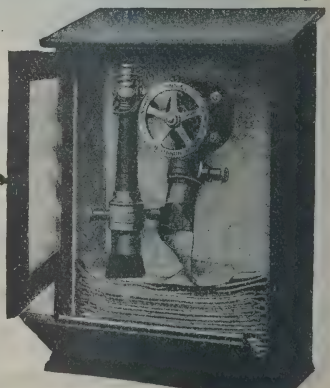
Fire Engineers

BIRMINGHAM

HOSE CRADLE PIPE SETS
FIRE CASES
HOSE CRADLE SETS
HOSE BOARD SETS

HAND FIRE PUMPS
EXTINGUISHERS
CANVAS AND LEATHER HOSE

Catalogue D59 upon request



F. 1427

BOILER SETTING.

(1.)

In ordinary practice, as developed by long experience, a boiler (figs. 7, 8, 9) is set upon two longitudinal walls, parallel to one another, and distant apart over half the diameter of the

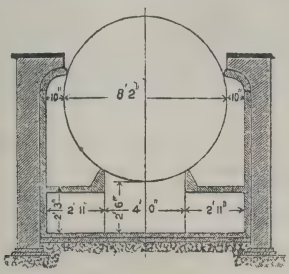


FIG. 7.

boiler. On these walls are laid specially formed seating blocks (fig. 10) of firebrick, the seating edge of which should not exceed 3 inches in width, and may advantageously be convex in

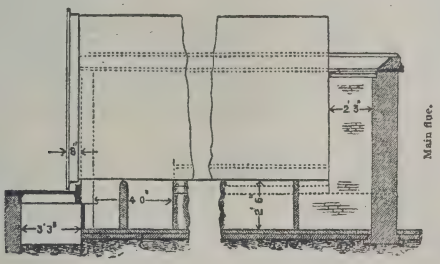


FIG. 8.

profile so as to touch the boiler plate along a line only. Where the ring seams cross the seating blocks, a rectangular gap should be cut across the seating for purposes of inspection, and specially

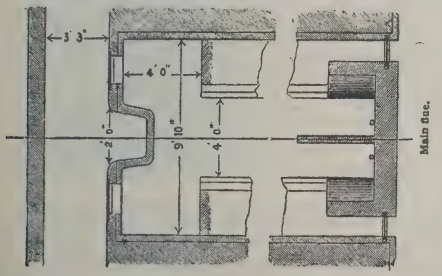


FIG. 9.

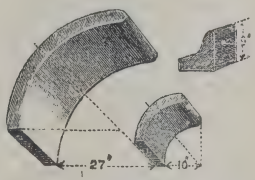


FIG. 10.—Flue Covers and Seating-block.

formed wedge pieces ought to be provided to close these gaps. These are removed for inspection and at once replaced.

Foundations.

In preparing the foundations, a matter of great importance is that good drainage should be ensured, as it is found that serious damage often occurs to boilers owing to dampness which arises from the foundation, such outside wasting not being caused by leakages from the boiler itself, but simply from being built either on wet ground or where surface water is allowed to accumulate. Care should also be exercised that the foundations are built in hard well-burned bricks, and the internal parts of the flue, where exposed to the fire, lined with fire brick; the boiler itself should be set having a fall of about 1 in 240 towards the front end, so as to ensure its being thoroughly drained of its contents when it is emptied for its periodical cleaning. The top of the side flues also should be made up by flue covers (fig. 10) of fireclay, in such a form as generally to allow a flue of about 10 inches at each side of the boiler, the flues themselves being of such dimensions as will allow of a man getting thoroughly round for the purpose of cleaning and examining the boilers from time to time.

The following materials are required to seat a boiler 7 feet in diameter by 30 feet long :—

Fire-bricks, including breakage	6,000
Downtake covers 6 inches wide	14
Seating blocks	52
Flue covers, 12-inch wide	64
Fireclay	3 tons
Common bricks for external walls	Quantity varies according to thickness.

(2.)

Some Modern Improvements.

When preparing the foundations for a boiler or battery of boilers, it is essential that the position chosen be carefully examined, for if the situation is at all damp or there is a liability of the surrounding ground getting soaked with surface water or floods, a proper system of drainage must be adopted. For this purpose an experienced engineer should be consulted. Also where the ground is of a sandy or shaley nature it may be necessary to resort to piling, and as there is no general rule to follow, experience can alone decide the laying out of the work. It is essential that there should be no sinking or warping of the foundations, which not only hastens the formation of cracks in the settings, but induces strains in the pipe work and causes other serious inconveniences.

Most boiler makers supply a general plan of the brickwork setting, which is usually of the old type, and shows broad-faced blocks and semi-circular covers in contact, with two or three courses of brickwork on top. It is far better, however, to have one's own carefully prepared drawing made for the specific installation, prepared by some firm of repute which makes a speciality of this class of work and approved by the engineers and the Boiler Insurance Co.

After the foundations are laid and brought up to the level ready for commencing the boiler setting proper, it is well sometimes to allow several days to elapse to ensure that there will be no further settlement, especially where concrete has been employed.

In the ordinary type of Lancashire boiler the path of the gases, after leaving the boiler flues, is along the bottom flues to the front, and then dividing to the side flues they pass thence into the main flue through separate dampers. There are many instances in which the gases pass first through the side flues and then along the bottom flue to the main. This system is not to be recommended, as the hottest gases should first pass under the boiler. As to the dimensions of the flue passages, these are a compromise, small flues giving difficulty when inspecting, while large flues add too much useless surface. The back downtake should not exceed 2 ft. 6 ins. from back to front, the sides tapering from the width over the furnace tubes to about 3 ft. 6 ins., and not exceeding 4 ft., with a depth of from 3 ft. to 4 ft., depending upon the size of the boiler. It is usual now to give a greater width in the downtake in order to accommodate if necessary a superheater without requiring too much reconstruction. The side flues are made with vertical sides giving 9 to 12 ins. clear from brickwork to boiler plates at the centre line of diameter, and the floor level being about on a level with the bottom of the boiler gives a convenient chamber for an inspector to crawl through while providing ample space for the accommodation of soot.

With the Paxman 'Economic' type of boiler (page 1479) the arrangement is somewhat different. The gases pass from the main iron flues into the back chamber where they divide right and left and return through the internal boiler tubes into two front smoke boxes from whence they pass downwards to two underneath flues separated by a mid feather upon which the boiler rests. These flues meet at the back, and the products of combustion pass out through a single damper or dampers to the main flue.

All parts of flues in direct contact with the hot gas should be lined with firebricks, neat fireclay being used between the joints. All other bricks not subject to a high temperature should be

of a close-grained quality, well burned, of regular dimensions and free from warp, set in with fire-clay unless entirely free from heat, when a good quality of mortar will suffice.

A number of firms make special firebrick blocks for boiler setting. These include mid feather and side seatings, large and small segment blocks for the top of the side flues and back chamber, besides flat blocks and other shapes less commonly employed but often required. However well the brickwork, as constructed on the older plan, may be cemented together, the constant movement of the boiler under steam and the changes of temperature soon begin to cause cracks and crevices to appear, especially between the boiler shell and the brickwork. The result is a loss of draught and short circuits in parts of the flue causing a considerable reduction of thermal efficiency. Further, the blocks being cemented in position the work of the boiler inspector, who has to thoroughly examine the boiler plates on the outside, is not an easy one, and to remove the permanent brickwork entails a very considerable amount of trouble and expense.

(3.)

The 'Pearson Patent' Asbestos Cushioned Seating Blocks and Flue-Covers (*E. J. & J. Pearson Ltd., Stourbridge*) have been specially designed to remedy sources of waste caused by (*a*) corrosion of the plates, due to the presence of moisture in the brickwork; (*b*) short circuiting of the hot flue-gases; (*c*) leakages of cold air into the flues; and at the same time to be readily removable and replaceable when an inspection has to be made.

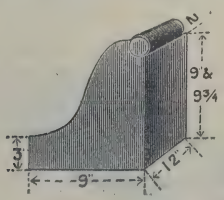


FIG. 11.—Patent 'Asbestos Cushioned' Seating Block.

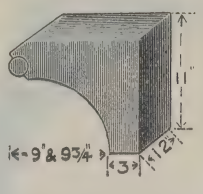


FIG. 12.—Patent 'Asbestos Cushioned' Flue-Cover.

The arrangement, as shown by figs. 11 and 12, consists of a specially prepared cushion of hard asbestos, compressed into a groove formed on the face of the blocks, in such a way that the boiler-plates are completely insulated from all contact with the blocks themselves.

The plates are thus secured against the rubbing caused by the expansion and contraction of the boiler, and also against any risk of corrosion through contact with damp brickwork or blocks, which alone has been the cause of very many serious explosions.

Owing to the non-absorbent nature of the material, and also to the high pressure to which it is subjected, the hard asbestos-cushion does not take up moisture, as is the case with ordinary clay blocks, consequently there is no possibility of corrosion. No corrosion has ever been found in boilers set with these seatings, and boilers can be inspected which have been running for several

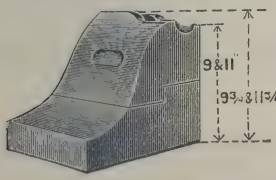


FIG. 13.—Patent 'Asbestos Cushioned' Seam-Inspection Seating Block.

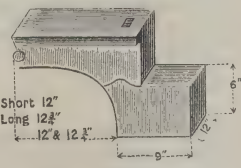


FIG. 14.—Patent 'Asbestos Cushioned' Seam-Inspection Flue Cover.

years. In addition to this advantage, the presence of the compressed asbestos cushion ensures an absolutely gas-tight joint between the boiler plates and the blocks, so that not only is there no risk of any short circuiting of the flue-gases, but (an even more important consideration) no danger of cold air finding its way into the flues from the outside, there being no necessity to fill up large spaces with ashes or sand in order to ensure air-tightness. The arrangement gives a specially large heating surface. Under the old system, 10 per cent. of the external surface of the

boiler was covered up by, and in contact with, brickwork; while in a boiler set with the Patent Asbestos Cushioned Blocks, less than 1 per cent. of the external surface is covered, and at no point are the seating blocks or covers in contact with the boiler plates.

The 'Patent Asbestos Cushioned Seam-Inspection Blocks and Covers' (figs. 13 and 14) are designed to meet the requirements of the Board of Trade and the insurance companies. The Board of Trade now require a proper inspection at least once in fourteen months, and the removal of the brickwork, wherever necessary, is compulsory. These blocks enable complete examination of the ring-seams, without any need to remove more than the block or cover opposite the seam. This means a great saving of time and expense at each inspection. The lower half of the block is built and bonded into the side wall of the flue, rendering it a part of the permanent structure, and enables the upper half to be removed with utmost ease, admitting daylight to the flues and facilitating inspection. The upper part of the block turns slightly on the knuckle joint, and is thereby safe from cracking under boiler expansion. Handholes are inserted in upper half of each cover for lifting purposes.

It is probable that no part of a boiler setting of the old types gives more trouble than the back downtake. The constant expansion and contraction of the boiler causes the blocks or slabs, used to cover in the downtake flue, to crack and fall down into the flue. The 'Pearson Patent Interlocking Downtake Arch' (fig. 15) is an arrangement of great simplicity and reliability. It

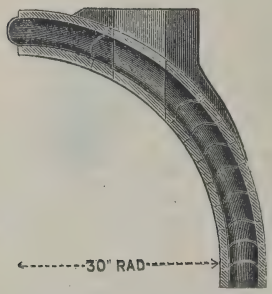


FIG. 15.—'Pearson Patent Interlocking Downtake Arch.'

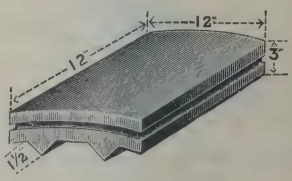


FIG. 16.—'Angular Contact Slab.'

consists of an arch, of the required span, built up of interlocking bricks, so shaped that while they are as easily built up as an ordinary brick, when once in place they cannot be dislodged, and however much the arch may give to the movements of the boiler, no displacement of the brickwork can occur. Each set is fitted with two manhole blocks with lids, by means of which easy access is obtained to the flues, without disturbing the brickwork.

For the covering in of the boiler the 'Angular Contact Slabs' (fig. 16) may be used. In these coverings, advantageous use is made of the well-known fact that an envelope of stationary air is one of the best non-conductors of heat known.

Recent tests, of which particulars are given below, show the efficiency of this method of covering, there being a difference of over 90° C. between the temperature under the covering and the external air temperature.

Tests.

(1.) Report on test of Angular Contact Boiler Covering Slabs with layer of hair felt between slabs and boiler plates:—

Type of boiler, 'Lancashire'	30 ft. × 7 ft. dia.
Working pressure at time of test	40 lbs.
Temperature of atmosphere	8° C.
Shaded temperature taken 3 ins. above surface of bare boiler shell	83° C.
Shaded temperature taken 3 ins. above surface of covering slabs	21° C.
Temperature under covering slabs	107° C.

Boiler housed in shed open both ends.

(2.) Report on test of Angular Contact Boiler Covering laid on boiler shell without felt or silicate cotton :—

Type of boiler, Cylindrical	26 ft. × 6 ft. 6 ins. dia.
Working pressure at time of test	40 lbs.
Temperature of atmosphere	10° C.
Shaded temperature taken 3 ins. above surface of bare boiler shell	81° C.
Shaded temperature taken 3 ins. above surface of covering slabs	15° C.
Temperature under covering slabs	109° C.

Boiler set in the open and not housed.

The covering slabs are quite distinct, and have no connection with the flue-covers, the compressed asbestos cushion preventing any leakage of flue-gases : consequently while radiation of heat from the boiler is prevented, there is also no possibility of the temperature under the slabs being raised by the infiltration of hot flue-gases.

The covering slabs form a surface hard enough to be worked on, and can easily be removed for the inspection of the boiler plates at any time, and as easily replaced, the covering being in no way damaged by the removal.

Leaky Boiler Settings.

Leakage through boiler settings of brick can be lessened by giving the walls two coats of Portland cement wash and then one coat of cold water paint to brighten them up. Or the brick settings may be sealed by applying cement with a covering of canvas pasted over and then painted.

Another method is to build with mortar in which a certain quantity of cement has been mixed, the amount to be gauged by the tenacity of the mortar, which must not hold bricks so that they will be destroyed if it is found necessary to take the brickwork down : a 5 per cent. cement will give this, but may be increased or decreased ; the greater the percentage of cement the tighter the setting, but with the above disadvantage.

Washing the bricks with the liquid cement when building will give best results ; the brickwork should then be coated with the thin pure cement liquid afterwards, the cement being used as a wash. (*Horóbin.*)

Fusible Boiler Plugs.

There are six primary causes for the rejection of fusible plugs, which may be roughly divided into two classes. Under the first class, rejections are included due to mechanical defects of casing material. The second class includes rejections due to lack of purity in the tin filling. The impurities in the latter case may be those either present in the original tin or those introduced during the manufacture of the plug.

The following conclusions have been reached as to the precautions to be taken in the manufacture of fusible plugs :

1. The pig tin should be at least 99·7 per cent. pure, containing not more than 0·1 per cent. lead, or 0·1 per cent. zinc, which are the requirements of the Steamboat Inspection Service.

2. The casing should be of bronze, an alloy the major constituents of which are copper and tin. Small amounts of zinc and lead increase the ease of casting and machining, and are not objectionable if not present in greater amounts than in the following compositions :

	I.	II.
Copper	88	87
Tin	10	7
Zinc	2	5
Lead	—	1

3. The pot or crucible for melting the tin should not be used for melting other metals, thus doing away with the liability of contaminating the good tin when these are not thoroughly cleansed.

4. Casings should be tinned on the inside with the same grade of tin used for filling, but the tin left over from this process should not be added to the filling to be used. Zinc-chloride flux may be used, although hydrochloric acid is preferred, though no flux need be used during the filling process.

5. The casing should be preheated to not above 250° to 275° C. (482° to 527° F.), and tin should be poured at a temperature not above 275° to 300° C. (527° to 572° F.).

(*' Bulletin of the American Institute of Mining and Metallurgical Engineers.'*)

STEAM PIPES.

The ring main should be avoided ; it is no longer employed, and was always bad practice.

The pipes if possible should not rise from the valve on the boiler to the main steam pipe, as this causes a dangerous water pocket and, if suitably drained, only automatic steam traps should be used ; these should be tested by blowing to atmosphere at least twice a day.

The best steam pipe arrangement between engine and boiler is that the boiler stop valve should stand at the top of a vertical pipe on the boiler and there should be a steady, if small, slope from that valve to the engine separator. Rupture from water-hammer occurs from failure of pipe drains, and if possible all drains should be unnecessary by design. The closing of no valve should be able to cause water to accumulate against it. Where it is impossible to avoid drainage points, these should be carefully arranged, and unduly small drain pipes must be avoided lest they choke with rust or dirt. New pipes and drains especially should be well blown through before fixing traps.

Long lengths of drain piping, from steam mains to traps, should be avoided ; they are a continual source of waste, and with superheated steam they more often drain away the water which they have been the means of condensing. Therefore the pipes from steam main to traps should be as efficiently lagged as the main steam line.

Idle parts of the steam range should be isolated when not in use, and carefully drained, as valves often leak when shut, through scoring of faces and grit wedging in, preventing tight closing.

All live steam drains should be returned to the feed tanks.

(See also Manchester Steam Users Association Reports 1907, 1908.)

Steam pipes, where supported on brackets or columns, should be carried on rollers or rubbing-plates, which should be riveted to the pipe, to allow of free contraction and expansion.

The connecting pipes from the boilers to the main steam pipe, and from the main steam pipe to the engines, should be preferably of steel, with half (not 'full,' which would form a 'water pocket') swan-neck bends, to allow for expansion.

When erecting new steam pipes, attention should be given to the thorough cleaning of the pipes, as otherwise fine particles of grit, driven by the steam into the faces of the valves, cut into the seats, causing considerable trouble and expense.

The centre of a main steam pipe should be anchored, to divide the longitudinal expansion. Where engine and boiler room are in line and steam mains are of considerable length, a $\cap$ or Ω shaped bend should be inserted between the engine and boiler room ; the horizontal position is best and should in no case be downwards. Anchor-plates should then be fixed in the centre of the engine-room main and in centre of boiler-room main.

Riveted pipes and flanges may be used from 6 ins. diameter upwards.

The branch-pipes from boilers and engines to steam main having full swan necks of as large a radius as possible (*see* Table of Standard Radius, page 1433), give the greatest amount of play, but necessitate careful draining. They should preferably be of solid-drawn steel.

If the pipes are of riveted steel the necessary thickness must be secured for caulking. It is not the practice to make these plates less than $\frac{1}{4}$-inch ; it is better to use $\frac{5}{16}$-plates. To avoid risk of rivet-heads springing off during caulking, rivets should not be less than $\frac{5}{8}$ in. in diameter.

Copper pipes (although not advisable), if used for steam, should be solid drawn, and not brazed. Flanges to be screwed and brazed should be of brass in all cases. On no account should copper or brass be used for superheated steam, owing to loss of strength at these high temperatures, which to obtain the full benefit of superheat is raised to 650° or 700° F. (*Horobin.*)

Copper pipes above 5 ins. bore should be annealed by slinging them up within easy access of about a 2-in. blast pipe. Charge end of pipe nearest blast connection with light pieces of wood, lighting same with hot cinders or gas blow-pipe, then blow blast through, the wood being repeatedly replenished. The effect to aim at is the emitting at opposite end of pipe of good supply of flame. Too much wood results in dense volumes of smoke, too little wood causes lack of flame and discharge of merely sparks and burnt wood. A little experience soon enables the operator to decide upon the happy medium. In a few minutes the pipe becomes a uniform red heat throughout its whole length. A 12 in. bore or even larger bend, 12 ft. or so long, can be heated by this means from end to end to a good annealing heat in a quarter of an hour or so, at an expenditure of a few pence in wood. This method removes the possibility of any part not being properly heated. Copper will attain to a degree of hardness by mere exposure to the atmosphere, the degree depending upon the time of exposure. It is advisable to re-anneal any pipes that have lain about for over twelve months, especially if any bending or working is required to be done to them.

Brazed copper is apt to be unreliable, and copper steam pipes ought to be wound with steel wire.

Bell's Non-conducting

Boiler Coverings

Save money by conserving heat



"BELLBUOY."

TRADE MARK.

Bell's Asbestos Composition Coverings effect great economies in coal consumption and speedily save the initial cost of application. "Salamander" Asbestos Magnesia Composition has the greatest covering capacity and is the best non-conductor of heat.



"SALAMANDER."

Bellbuoy Flue Pipe Composition is specially recommended for very high temperatures.

Summary of Report of Tests made by Messrs. Lake & Currie, Consulting Engineers, London, with Bell's United Asbestos Non-conducting Composition.

Mean Steam Pressures absolute	154
Mean Steam temp. Fahr.	x371°
Mean lbs. condensed by the BARE PIPE per sq. ft. per hour ...	0·9898
Mean lbs. condensed by the COVERED PIPE per sq. ft. per hour	0·152
Mean difference of temp. Fahr. of external air and steam supplied	x284°
Mean lbs. condensed by the Bare Pipe per sq. ft. per hour per deg. Fahr. diff. of temp.	0·00327
Mean lbs. condensed by the Covered Pipes per sq. ft. per hour per deg. Fahr. diff. of temp....	0·000541
Approx. relative % condensation in Bare Pipe	100%
Approx. relative % condensation in Covered Pipe	16·9%

THIS EQUALS A SAVING IN CONDENSATION OF 83 %

Bell's United Asbestos Co. Ltd..

Pioneers of the World's Asbestos Industry

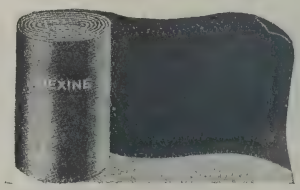
Southwark St. London. S.E.1.

"DEXINE."

ON ADMIRALTY & INDIA OFFICE LISTS

'DEXINE' JOINTING

For Superheated Steam, Air, Water, Acids, Gases, &c.




Sold in Rolls, 36 in. wide. Any Length or Thickness.

Send for a yard and try it.

GIVES ABSOLUTE SATISFACTION WHEREVER USED.

'DEXINE' FLAT PACKING.

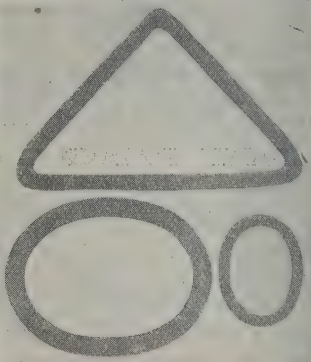MANHOLE AND MUDHOLE JOINTS CUT TO TEMPLATE.



USED ON BOILERS WORKING AT A PRESSURE OF 300 LBS. PER SQ. IN.

WRITE FOR LIST C.

DEXINE LTD.

STRATFORD, LONDON.

Telephone: No. 355 STRATFORD.

Telegrams: 'DEXINE, STRATFORD, LONDON.'

F. 1433

Copper should not be used for superheated steam.

Serviceable and reliable steam pipes may be made up of lap-welded mild steel with heavy wrought-iron flanges, the flanges being screwed on hot and the ends brazed. The flanges must be faced up to enable good joints to be made.

The radius of curvature measured to the centre of pipes should not be less in solid drawn pipes than three times the diameter of pipe; even this radius of curvature causes a reduction in thickness of 20 to 25 per cent. on the outside of the bend, and a corresponding increase in thickness on the inside. Sharper bends can, if necessary, be made by working the pipes out of two plates with a brazed joint along each side. The latter construction is more expensive than the former.

Spigot and socket pipes should not be employed for steam or for hot-water, under any condition.

Bolts in pipe flanges should be in multiples of 4.

Pipes often vibrate under the pulsating demand of steam by an engine. This requires that they should be anchored at one or more points.

The pipes should be marked when cold opposite marks on the walls, and again when hot. Anchors should be at the points where least movement is shown. Pipes are best carried on brackets. Where they rest they should have rubbing pieces firmly attached, and they should not rest on rollers, as the friction helps to check vibration. In long mains there may be an anchorage at or near each end, with a telescopic expansion joint between.

Expansion bends are best arranged to project horizontally from the line of pipe, in order to allow a free passage for water. If they stand vertically upwards they prevent water flowing, and if hung downwards they form water pockets. In both cases they necessitate careful drainage.

Steam pipes between 32° and 212° F. expand by heat 0·0000111 per degree C. = 0·00000618 per degree F., if of cast iron. For wrought iron these figures become 0·0000118 and 0·00000656. Between 60° F. and a pressure of 190 lbs. or a temperature of 383° F. the expansion is about $4\frac{1}{2}$ ins. per 100 ft. The coefficient for steel is 0·000006 per degree F.

With superheated steam, pipes may expand nearly $6\frac{1}{2}$ ins. per 100 ft. of their length. At higher temperatures the coefficient of expansion is considerably larger.

In fixing pipes the expected movement when hot should, if possible, be half provided for in the opposite direction, in order to minimise stresses.

Pipes may be best bent by filling with thoroughly dry sand and plugging the ends. They will then bend without buckling.

Copper pipes are bent by being filled with melted resin, or with solder, the pipe bent cold, and the filling then melted out.

STANDARD RADIUS OF STEEL AND WROUGHT-IRON BENDS FOR STEAM PIPES.

Bore .	Ins. $1\frac{1}{2}$	Ins. 2	Ins. 3	Ins. 4	Ins. 5	Ins. 6	Ins. 7	Ins. 8	Ins. 9	Ins. 10	Ins. 11	Ins. 12
Radius	Ins. 6	Ins. 9	Ft. 1	Ft. Ins. 1 3	Ft. Ins. 1 6	Ft. Ins. 1 9	Ft. 2	Ft. Ins. 2 6	Ft. 3	Ft. Ins. 3 6	Ft. 4	Ft. Ins. 4 6

Radius may be slightly less, but this is not advisable.

PIPE THICKNESS.

If t = thickness in inches; p = pressure in lbs. per sq. in.; d = internal diameter in inches.

$$t = \frac{pd}{6000}, \text{ for lap welded iron;} \quad t = \frac{pd}{3500} + \tfrac{1}{4}'', \text{ for cast iron;}$$

$$t = \frac{pd}{6000} + \tfrac{1}{16}'', \text{ for brazed copper;} \quad t = \frac{p}{6000} + \tfrac{1}{32}'', \text{ for solid drawn copper.}$$

Pipe Hangers.

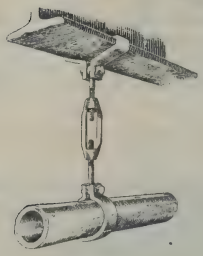


FIG. 17.

DIMENSIONS AND SAFE LOADS FOR PIPE-HANGER PARTS (Fig. 17).

Pipe, Size. Ins.	Pipe, Thick. Ins.	Band, Width. Ins.	Clamp, Thick. Ins.	Clamp, Width. Ins.	Rod, Diam. Ins.	Bolts, Band. Ins.	Bolts, Clamp. Ins.	Safe Load. Lbs.	Length ½ Band. Ins.
2	¼	1¼	⅜	1½	½	½ × 2	½ × 2¼	1,160	6
2½	¼	1¼	⅜	1¼	½	½ × 2	½ × 2¼	1,160	7
3	¼	1¼	⅜	1½	½	½ × 2	½ × 2¼	1,160	8
3½	¼	1½	⅜	1½	½	½ × 2	½ × 2¼	1,160	9
4	¼	1½	⅜	1½	⅝	⅝ × 2	⅝ × 2¼	1,870	10½
4½	⅛	1½	⅜	1½	⅝	⅝ × 2	⅝ × 2¼	1,870	11
5	⅛	2	⅜	2	⅝	⅝ × 2	⅝ × 2¼	1,870	13
6	⅛	2	½	2	⅝	⅝ × 2½	⅝ × 2½	1,870	14
7	⅜	2	½	2	¾	¾ × 2½	¾ × 3	2,830	16
8	⅜	2	½	2¼	¾	¾ × 2¾	⅞ × 3½	2,830	18
9	⅜	2	½	2½	⅞	¾ × 2¾	⅞ × 3½	3,940	20
10	⅜	2	½	2½	⅞	¾ × 3	⅞ × 3½	3,940	22
12	½	2½	½	2½	1	⅞ × 3½	1 × 3½	5,180	25
14	½	2½	½	2½	1⅛	1 × 3½	1⅛ × 3¾	6,510	27
15	½	2½	½	2½	1⅛	1 × 3½	1⅛ × 3¾	6,510	30
16	½	3	⅝	3	1⅛	1⅛ × 3¾	1¼ × 4	6,510	33
18	⅝	3	⅝	3	1¼	1¼ × 4	1¼ × 4	8,410	35
20	⅝	3	¾	3	1¼	1¼ × 4	1¼ × 4½	8,410	37
22	¾	3	¾	3	1½	1¼ × 4½	1½ × 4½	8,410	39
24	¾	3	¾	3	1½	1¼ × 4½	1½ × 4½	8,410	42

(Power).

Exhaust Pipes.

These may be of cast iron and should be free from blow holes. The flanges should be faced and jointed with soft rubber rings. Exhaust pipes should be painted while under vacuum, preferably with several coats of red lead paint well brushed in until all the pores are filled. It has been suggested that exhaust pipes, especially if long, might be laid in a concrete trench under water so as effectually to prevent air leakage. *(W. H. Booth.)*

THICKNESS OF COPPER MAIN STEAM PIPES.

Internal Diameter of Pipe in Inches.	Working Press. of Steam in Boiler in Lbs. per Sq. In.				
	100 lbs.	125 lbs.	150 lbs.	180 lbs.	200 lbs.
	Thickness of Pipe in Inches.				
1½	·140	·143	·147	·152	·155
2	·145	·150	·155	·161	·165
2½	·150	·156	·162	·170	·175
3	·155	·162	·170	·179	·185
3½	·160	·168	·177	·188	·195
4	·165	·175	·185	·197	·205
4½	·170	·181	·192	·206	·215
5	·175	·187	·200	·215	·225
5½	·180	·193	·207	·224	·235
6	·185	·200	·215	·233	·245
6½	·190	·206	·222	·242	·255
7	·195	·212	·230	·251	·265
7½	·200	·218	·237	·260	·275
8	·205	·225	·245	·269	·285
8½	·210	·231	·252	·278	·295
9	·215	·237	·260	·287	·305
9½	·220	·243	·267	·296	·315
10	·225	·250	·275	·305	·325
10½	·230	·256	·282	·314	·335
11	·235	·202	·290	·323	·345
11½	·240	·268	·297	·332	·355
12	·245	·275	·305	·341	·366

(*Philip Dawson.*)

Joints of Steam Pipes.

Pipes for steam and hot water should not be jointed with socket and spigot; this is dangerous.

Steam pipes may be screwed and socketed. This is neat and is easy to cover.

Flanges should have not less than 8 bolts if possible, and bolts should thus number 4, 8, 12, and so on, in multiples of 4.

Faced flanges may be jointed simply with a ring of copper, preferably corrugated. In first-class work, faced flanges and a little paint has sufficed.

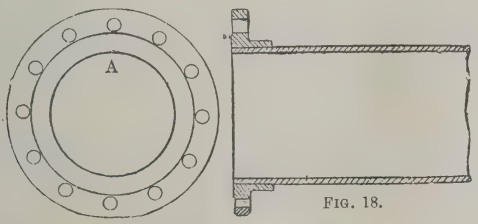


FIG. 18.

In large-sized steam pipes it will be found that the joints can be kept tighter by having the flanges made with a slight boss, which is faced up for the joint, instead of the whole of the flange being faced up for that purpose, as shown at A in fig. 18; from $\frac{1}{16}$ inch to $\frac{1}{8}$ inch is sufficient for the thickness of the boss.

Rubber prepared with plumbago makes a good sound joint, which requires taking up when steam is admitted to the pipe, as the material softens with the heat, although it sets into a hard permanent joint when tightened up.

A cement for pipe joints that is said to be as good, in a faced or rough flange joint, as red lead putty, at one-tenth the cost, consists of a mixture of ordinary pine tar and dry oxide of iron. It is stated that it does not harden so soon as red lead, and is very adhesive under pressure.

The Use of Metallic Gaskets.

The ordinary corrugated copper gaskets are approximately $\frac{1}{16}$ in. thick, and are generally used as a ring inside the bolt circle, two in a joint, because when only one is used the flanges are apt to spring enough under the strain of the bolts to touch, iron to iron, outside the bolts, permitting a leak. In other words, one thin copper gasket is not enough for the ordinary commercial flanges to 'get a bite on.' When two gaskets are used they should be meshed the same way of the corrugation. Metal gaskets should be coated with pipe cement, graphite and oil, or lead and oil, and bolted up before the coating has dried, so that each corrugation flattening under the pressure forces a ring of this filler concentrically around the flange, and the copper gasket practically acts as a binder. There are, however, exceptions to this rule of two gaskets, especially on low-pressure work. Copper gaskets should be annealed soft and pliable at the final process, because in the process of corrugating it becomes hard, stiff and springy. This is because, in corrugating, the fibres of the metal are strained and thrown out of harmony and mesh. Annealing brings these fibres back into harmony and restores the strength of the metal; therefore orders for soft gaskets should always be marked 'to be annealed after making.'

The ideal gasket is one that covers the pipe ends as well as the flange if the pipes are faced off flush with the flange, because such a gasket will save thread leaks. If, however, the pipe does not come out flush with the flange, this cannot be accomplished with any gasket.

(*Power.*)

For jointing purposes the corrugated copper gaskets in common use have not been very successful with superheated steam. The reason lies in the fact that the annealing temperature of copper lies in the neighbourhood of 600° F., corresponding with a boiler pressure of 180 lbs. to a superheat of 220°. Corrugated gaskets, moreover, used by careless pipe fitters are always likely to give trouble owing to the danger of the bolts and flanges being overstrained. Joints of asbestos and of rubber preparations have often been used, but they last but a short time. It is fairly certain that the high temperature of superheated steam at the usual boiler pressures prohibits the use of organic material for jointing purposes if results of any permanence are desired. A satisfactory joint has been found to be one in which a gasket of thin steel of a radial width not exceeding $\frac{5}{8}$ in. has been used, the steel being soft annealed. The comparatively small area of the gasket enables great pressure to be brought to bear by bolts of ordinary size, with the result that the soft steel is thoroughly pressed into the rough surface of the flange. Such a joint will, although simple and cheap, give all the permanence that could be desired.

(*Times Engineering Supplement.*)

'Dexine.'

This material (*Dexine, Ltd.*) is a very suitable substance for making joints. It does not stick to the flanges, nor does it press out, blow out, or burn out; and it can be used over and over again. It is made in sheets from $\frac{1}{64}$th inch upwards.

'Universoline.'

By the use of this substance, which is in the form of a paste (*Sterns Ltd.*), the materials used for making joints (asbestos, rubber, millboard, cardboard, spunyarn, etc.) are prevented from adhering to the metal surfaces. Consequently the materials can be removed undamaged as often as necessary, and thus used over and over again. Scraping and cleaning of the metal surfaces are also rendered unnecessary. It is a rust preventive, so that the formation of rust in the threads of screws, bolts, nuts, etc., is obviated, and the articles can be unscrewed with ease at any time, even should they have been exposed to water.

Asbestos Fibre Rings and Joints.

Compressed asbestos fibre rings and joints are made in any required shape, in thicknesses from $\frac{1}{64}$ in. upwards, by *Turner Brothers Asbestos Co. Ltd., Rochdale.*

Leaks in Steam Pipes.

Leaks in steam pipes that cannot be stopped by caulking or plugging may be stopped with a cement made by mixing black oxide of manganese with enough raw linseed oil to form a thick paste. The steam pressure should be relieved in the pipe, but the pipe should be kept warm enough to dry the oil.

Loss of Heat from Uncovered Steam Pipes.

The large amount of heat lost from bare steam pipes, and the consequent waste of coal, is frequently not fully appreciated. One square foot of uncovered pipe surface, the pipe containing steam at 100 lbs. per sq. in., will dissipate about 3 B.Th.U. per hour per degree of temperature difference between the steam and the atmosphere, or about 850 B.Th.U. per hour at ordinary atmospheric temperatures. The steam condensed per hour due to this square foot of bare pipe will be ·96 lb. In a year of 3,000 working hours the steam wasted will amount to 2,880 lbs., corresponding to a coal consumption of about 410 lbs.

A single 9-ft. length of 6-in. pipe, if uncovered, will waste by heat loss about 2·5 tons of coal per year.

80 to 90 per cent. of this loss may be avoided by the use of suitable coverings, the expense of which is amply counterbalanced by the saving in coal.

It is important that flanges, valves, etc., as well as the body of the pipe lengths, should be covered.

The loss of heat per hour per sq. ft. of surface, in the case of bare pipes, depends principally upon the difference of temperature between the pipe—i.e. practically, that of the steam in the pipe—and the surrounding atmosphere, but also is influenced to some extent by the diameter of the pipe, its position—whether horizontal or vertical—the presence of air currents about the pipe, the nature of the pipe surface, and the velocity of the steam in the pipe.

Complete data on all these factors is lacking.

It is usually assumed that the loss is proportional to the difference of temperature, but careful experiments show that the rate of loss, B.Th.U. per sq. ft. per degree F., increases at the higher temperature differences. Thus from 1·95 at 50° difference, it becomes 2·4 at 150°, 3·26 at 300°, 4 at 400°, and 5·26 at 460°. (*McMillan.*)

There is little experimental data on the effect of pipe diameter, but it appears that the loss per sq. ft. decreases as the diameter increases, and this is in accordance with theory.

The following table shows the heat loss from pipes covered with various thicknesses of 85 per cent. magnesia composition, and the approximate loss from uncovered pipes is given for comparison.

LOSS OF HEAT FROM STEAM PIPES, WITH STEAM 300° F. ABOVE ATMOSPHERIC TEMPERATURE. LOSS IN B.TH.U. PER HOUR PER SQUARE FOOT OF PIPE SURFACE.

	Pipe Diameter.					
	1 in.	2 ins.	4 ins.	6 ins.	8 ins.	12 ins.
Bare pipe	1100	1070	1010	945	920	880
Magnesia covering 0·5 in. thick	340	280	250	240	235	230
,, 1·0 in. ,,	260	200	170	155	148	140
,, 1·5 ins. ,,	220	165	145	120	115	105
,, 2·0 ,, ,,	195	140	110	100	92	87
,, 3·0 ,, ,,	170	120	89	75	71	66
,, 4·0 ,, ,,	—	110	75	65	59	52
,, 5·0 ,, ,,	—	—	66	58	52	46

(*Based on tests by McMillan, 'Trans. Am. Soc. M.E.'* 1915.)

The 'efficiency' of the covering in preventing loss of heat is taken as the ratio (heat loss from bare pipe — loss from covered pipe) ÷ heat loss from bare pipe. The table shows that this 'efficiency' varies with the thickness and the pipe diameter, hence to compare different covering materials, the comparison must be made under the same conditions of thickness, etc. if the comparison is to show the relative insulating properties.

The coverings may also be compared on the basis of cost per foot run—i.e. taking a greater thickness, in the case of the cheaper materials.

The relative properties of various pipe coverings are shown in the following table, the thickness being about 1·4 ins., diameter of test pipe 1 in., steam pressures in pipe 50, 100, and 200 lbs. per sq. in.

RELATIVE VALUE OF PIPE COVERINGS.

Material.	Weight per foot run, lbs.	Insulating Efficiency per cent.		
		At 50 lbs. per sq. in.	At 100 lbs. per sq. in.	At 200 lbs. per sq. in.
Sectional cork	1·0	85	86	87
Slag wool	2·6	83	84	—
Cellular asbestos	2·4	81	82	83
Silk waste	2·3	85	85·5	86
Hair felt and asbestos	2·7	83	84	85
Sectional magnesia	1·6	79	79	—
Plastic magnesia	2·2	77	77	—
Diatomite (plastic)	2·2	79	79	—
Kisol and magnesia (plastic)	2·9	77	78	79
Kisol and hair felt (plastic)	3·0	75	77	78
Slag wool and composition (plastic)	1·5	75	76	—
Mica (plastic)	2·5	73	75	—
Asbestos composition (plastic)	3·9	69	71	72
Thinner Coverings.				
Hair felt 0·5 in. thick	—	79	—	—
Magnesia-filled rope 0·7 in. thick	0·8	61	64	—
Asbestos rope 0·7 in. thick	1·2	47	53	—

(*Bradley.*)

NOTES ON COVERINGS FOR PIPES AND BOILERS.

As well as having good heat insulating properties, it is important that pipe coverings be durable. A material which easily disintegrates under vibration will not long remain an efficient insulator, nor will a material which cannot stand high temperature. For example, hair felt is a good insulator, but will not stand contact with pipes carrying high pressure or superheated steam.

Eighty-five per cent. magnesia has proved to be very durable. Recent trials on coverings which had been eight years in service showed no deterioration, and after further test for two months at the high temperature of 800° F. the covering still showed the average conductivity value, and when removed was in such a condition that it could be re-applied.

Tests with locomotive-type boilers, first uncovered and then covered with 2 ins. of 85 per cent. magnesia, showed in the second case 2·5 per cent. additional evaporation for 13·8 per cent. less coal, or a total coal saving of 16 per cent.

(*'Chem. and Met. Eng.,' Feb.* 16, 1921.)

NOTES ON LAGGING.

The surface temperature of a lagging, when in use, is commonly supposed by engineers to furnish a clue to its efficiency, and conclusions are often formed from the sensation of heat experienced when the hand is placed on the surface. Another test, frequently employed, is to make a small hole in the lagging, into which the bulb of a thermometer is inserted; and it is then assumed that the material in which the lowest reading is obtained possesses a superiority in respect to insulating power. Whilst a correct measurement of the temperature of the surface is of value in conjunction with other tests, if taken alone an entirely erroneous opinion of the merit of the material may be formed.

The important factor which is not taken into account in the above rough-and-ready test is the nature of the surface with respect to its radiating power. A lagging with a rough exterior radiates heat with much greater freedom than one which is finished smooth, and the latter which is superior as an insulator, owing to retention of heat by the surface, will feel hotter than the former when touched by the hand. Hence it follows that a given non-conducting coating, if improved by painting and varnishing the surface, would appear to have suffered in insulating power if judged by its surface temperature only. To avoid such a fallacious conclusion, it is evident that the radiating power must also be taken into account, and only when this is done can a correct inference be drawn.

HEAT RADIATION

from Boilers and Pipe Lines can be most effectively prevented by

KENYON'S KISOL *(Reg.)*

Sample 1 cwt. bag 15/- carriage paid.
Ask for 'Hints on Covering,' post free.

SHEET-METAL WORK

of every description, including

Cylinder Laggings, Winding Drum Shields, Machinery Guards, Insulating Jackets of all kinds.

Write for Particulars.

WM. KENYON & SONS, LTD.

Chapel Field Works, Dukinfield.

London Office : 95-97 Finsbury Pavement, E.C. 2.

Telegrams:
'Kenyon, Dukinfield.'
'Kenyoneers, London.'

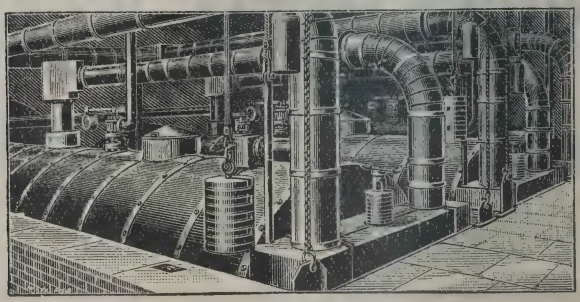
Telephones:
494/5 Ashton-u-Lyne.
6818 London Wall.

F. 1438

As used by H.M. Admiralty, War Office,
Ministry of Munitions, Office of Works, etc.

Sutcliffe Bros. & Bryce Ltd.

CROWN BOILER COVERINGS



OVER 96% SAVING

In Condensation. Highest Economy.
Longest Service. Most Return.

PARK WORKS, GODLEY, near MANCHESTER.
SEAL WHARF, STRATFORD, LONDON, E.15.
Glasgow Office: 170 HOPE STREET. **Derby Office: 10 FULL STREET.**
F. 1439

When the radiating surfaces are identical, the surface temperature furnishes a reliable and delicate guide to the insulating powers of different materials. A smooth metallic surface, such as aluminium paint, may be hotter than an unprepared surface, and yet radiate less.

On reference to a test in which a thermometer bulb is placed in a hole made for the purpose in the outer part of the lagging, into which it is customary to pour mercury to secure a good contact between the material and the bulb of the thermometer, it is difficult to say what the reading indicates, as the temperature recorded will be the mean of that existing between the end of the bulb and the surface; and, moreover, the normal condition of the lagging at this part is entirely changed by the introduction of the mercury and thermometer bulb. One thing is certain: that the reading affords no clue to the surface temperature it is supposed to measure; and in this respect the test is inferior to the application of the hand. The thermal-junction method is undoubtedly the best for obtaining a definite reading of the surface temperature; and as it is now possible to obtain cheap portable indicators for use with a junction, other so-called measurements should be definitely abandoned.

The relations between surface temperature and efficiency may be summarised as follows:—

1. When the surface of a given insulating material is treated so as to reduce its radiating power, the temperature is higher, although the heat escaping is less.

2. If two different materials possess identical surfaces, that which has the higher surface temperature, under given conditions, is the worse insulator.

A recognition of these two points will prevent engineers from being led astray by the extravagant claims frequently put forward for compositions, based entirely on imperfect surface temperature measurements. The advantage of finishing the surface with aluminium paint, instead of ordinary paint and varnish, should be recognised, as not only is the insulating power improved, but the finished work has a better appearance. The fact that such a surface feels warmer to the touch is in this instance not a proof of inferiority, but of the contrary.

(*C. R. Darling*, '*Engineering*,' *Sept.* 22, 1911.)

The holding of slag wool to pipes or boilers (to which asbestos composition has been applied) is best effected by means of wire-bound split laths, so spaced that the finishing overlay of cement may not only be keyed in between them but may also afford a means of locating any leakages, in addition to preserving a favourable density estimated at from 10 to 12 lbs. per cubic foot.

A cheaper but decidedly less effective way of holding slag wool together is by means of wire netting into the meshes of which an overlay of plastic cement is impacted. When, therefore, disintegration takes place and the wool settles down by its own gravity, the upper surface is reduced to a mere shell of wire and cement by which the bulk is held in suspension.

Silk waste, although almost equal in efficiency to slag wool, is wanting in durability.

Hair-felt is one of the finest non-conductors known, but is quickly consumed by direct contact with heated surfaces. (*E. Kenyon.*)

'Crown' Boiler Coverings

(*Sutcliffe Bros. & Bryce, Ltd.*)

These coverings are specially useful for extreme pressures and superheated steam. Official tests show over 96 per cent. saving in condensation, even in long lengths of steam piping. The coverings being almost indestructible will last practically as long as the boiler and piping.

For piping, patent spiral springs (2 ins. or more in diam.) are fixed about every 16 ins., and on these rest specially turned steel sheeting, the space between the piping and the sheeting being filled with 'Crown' slag wool, the whole being firmly bound together by bands at uniform distances. For boilers, steel bridges 3 ins. or 4 ins. high are fixed as saddles on the boiler at distances of 32 ins. from front to back, with short intermediate bridges; 'Crown' slag wool is then used to fill up the space level with the bridges, and covered with steel sheeting secured by strong brass screws to the bridges; any portion of the covering to boilers or piping can thus be removed and refixed with great facility.

Messrs. Sutcliffe Bros. & Bryce, Ltd., Park Works, Godley, near Manchester, are the sole makers of these coverings, as also of the 'Crown' Magnesia, 'Crown' Asbestos, and 'Crown' Telluric Cement Coverings.

Loss of Heat Conductivity.

The loss of heat conductivity in a boiler due to soot on the heating surface has been calculated at 9·5 per cent. for a layer of $\frac{1}{16}$ in. of soot, 26·2 per cent. for $\frac{1}{16}$ in. layer, 45·2 per cent. for $\frac{1}{8}$ in. layer, and 69·0 per cent. for $\frac{3}{16}$ in. layer.

Priming.

The most successful way of separating water carried along by steam is to cause the latter to impinge against a plate interposed at right angles to its course, so that it has to turn down and pass under the edge of the plate and continue its course on the other side.

Preventives of Scale.

As a result of experiment it is stated that $\frac{1}{10}$ in. of scale requires 16 per cent. more fuel to transmit a certain quantity of heat, that $\frac{1}{4}$ in. of scale requires 50 per cent. more fuel, and that $\frac{1}{2}$ in. of scale requires 150 per cent. more.

In regard to the increase in temperature of the plates as scale accumulates, all authorities are in agreement and practical experience confirms the fact. Stromeyer states that with clean plates the plate temperature is only 400° F., with a water temperature of 380°, when the usual quantities of heat per sq. ft. of heating surfaces are being transmitted. With $\frac{1}{4}$ in. of scale he states that the temperature of the plate may go up to 700° F., which, of course, may result in strains being set up which are highly dangerous. Especially is this so if deposits of oil in addition to scale are allowed to accumulate on the water side of the tube, and even a very thin coating of grease may result in the boiler furnace being brought down.

The loss of efficiency for a given thickness of scale will depend on the type of boiler and on the nature of the scale. In a Lancashire boiler the effect of a certain thickness of scale will be much less than with a water-tube or fire-tube boiler, nor will the resistance of a hard fine scale be the same as that of one having a soft porous nature.

Actual experience with Lancashire boilers in industrial concerns confirms the statement made by Stromeyer that, taking the boiler and economiser as a whole, the drop in efficiency will not be more than 5 per cent. with an average accumulation of $\frac{1}{8}$ in. thickness of scale. It will be found also that as the boiler becomes more scaled the outlet water from the economiser will increase in temperature, showing that this portion of the plant is absorbing the heat rejected by the unclean boiler surfaces.

With water-tube boilers in central station work it is a generally accepted figure that after a run of 1,000 hours the scale accumulation will have reduced the efficiency at least 10 to 12 per cent., even when fairly good feed-water is being used.

For sea-water a mixture of 1 part slaked lime to 3 parts soda, and for fresh water containing salts some organic compound, such as Harris's composition, should be placed in the boiler, about $\frac{1}{4}$ lb. per indicated horse-power per month. For muddy water, particularly if it contains salts of lime, no preventive of incrustation will prevail except filtration.

Dr. Joseph G. Rogers has proposed two methods of preventing boiler incrustation. One consists of introducing into the boiler a sufficient quantity of *sodium oxalate*, which converts the scale-forming impurities of the feed-water into insoluble oxalates as soon as they enter the boiler. These oxalates are precipitated as a mushy sediment, which has no tendency to form scale, and which may be blown out from the mud drum from time to time. The other consists in the use of *sodium tannate*, which is kept constantly present in the boiler in solution. It decomposes the calcium and magnesium carbonates as they enter, tannates being precipitated in a light, flocculent, amorphous form, which gradually accumulate in the mud drum, from which they may be readily blown out from time to time. The sodium carbonate formed in the reaction remains in solution, becoming bicarbonate by appropriation of the free carbonic acid in the water. This reacts upon the calcium sulphate, forming sodium sulphate and calcium carbonate, which latter in turn is acted on as above by fresh portions of the sodium tannate. The constant presence of the alkali protects the iron from any injurious action of the tannic acid. A similar reaction will take place between the tannate and the already-formed scale, though the action will be a gradual one.

When boilers are coated with a hard scale difficult to remove, it will be found that the addition of $\frac{1}{4}$ lb. caustic soda per horse-power and steaming for some hours, according to the thickness of the scale, just before cleaning, will greatly facilitate that operation, rendering the scale soft and loose. This should be done, if possible, when the boilers are not otherwise in use.

The chief engineer of a private plant in Brooklyn states that a mixture of graphite and caustic soda in the proportion of 50 ozs. to 30 lbs. has been found effective in preventing boiler scale. His conclusions have been drawn from experience with two 264 horse-power Babcock and Wilcox boilers operating at 110 lbs. pressure. The boilers are treated alternately, the mixture being fed gradually to one boiler, and during that time it is not blown down. The other unit, however, is blown off to 80 lbs. every morning.

Boilerine.

This is a viscous fluid, consisting chiefly of a carbon compound which has no action upon iron, steel, or other metals, but which has the property of rendering all water impurities innocuous and incapable of forming scale, while it also works its way through the interstice of

the scale, the rate of this percolation depending on the porosity and degree of compactness of the same, and when the preparation reaches the underlying plate of the boiler it there diffuses and insinuates itself behind the incrustation, causing it to crumble and flake, so that when the boiler is opened it can readily be removed. The preparation as a preventive of scale differs from the old style of boiler composition, inasmuch as it absorbs the gaseous carbonic anhydride from the water, forming an intermediate salt which throws the scale-forming salts out of solution, suspending them in the water in a non-crystallisable and powdery state. Incrustation is thus forestalled and prevented. Steam generated from sea water containing 'Boilerine' is free from ammonia. Boilerine is not only a preventive, but also a disuniter of incrustation in boilers; it is absolutely non-volatile, and does not affect the purity of the steam produced from water treated with it; it does not discolour the water in the boiler, and it will not cause priming. It is guaranteed free from arsenic, acids and poisonous substances, and is a neutraliser of grease and acids.

The boilers should be blown down and treated with Boilerine *daily*, as by this system greater efficiency is obtained. With average feed waters the cleaning out should be done at intervals not exceeding 150 to 300 hours for vertical and locotype boilers; 500 hours for watertube and marine dry-back boilers; 300 hours for the two bottom rows of tubes of Babcock boilers; 1,000 hours for Lancashire, Galloway, and Cornish boilers.

'FOLIAC' BOILER GRAPHITE.

(Graphite Products Ltd.)

The use of this material enables scale in a boiler to be easily and safely removed, a wire brush being used for the purpose. The graphite does not attack the metal of the boiler, nor, it is claimed, does it cause the metal to be attacked; it is not affected by any acid in the water or by the heat generated in the boiler. Particles of the graphite work through the minute fissures existing in the old scale and gradually penetrate between the scale and the metal. The scale thus loosened may be rapped off or removed with regular cleaning tools with little trouble. If the scale is very hard and thick it may require as long as three or four months for graphite to loosen it, but once removed the scale can never again adhere firmly to the metal as long as the graphite treatment is continued. The graphite also becomes thoroughly intermixed with new scale as it forms, rendering it soft and friable.

The graphite is introduced in the form of fine powder with the boiler feed, about half a pound being used per day for a 250 h.p. boiler.

Preventives of Corrosion.

The outsides of boilers should be well painted and lagged as a protection from moisture.

Ashes should never be cooled in the ashpits.

When the boiler is not at work, corrosion can be effectively prevented by filling quite full (to the top of a small filling pipe if necessary) with water in which soda (about 50 lbs. of common soda to 100 cubic feet of water) has been dissolved. A bright nail should be placed in sample to note if it rusts. No more soda need be used than will make the water alkaline.

In boilers using water over and over again from surface condensers extensive internal corrosion generally occurs. To prevent it, add soda to the feed sufficient to make the water alkaline in the boiler, and place rolled zinc plates in good metallic connection with the inside of boiler, under water, so that no part of the boiler is more than about 6 feet from zinc, and renew them when wasted.

It is of great importance that an analysis should be made of all feed waters and each case treated separately, so that the proper treatment may be determined.

A boiler at a chemical works at Derby was in 1911 dismantled after sixteen years' service for steam-raising purposes with the local water. The boiler was found to be in a perfect state of preservation, and had never required any repairs to the shell during the period named. The method of treatment adopted consisted in adding sufficient soda-ash to the feed-water daily to show faint alkalinity in the boiler, and to blow off daily 1 in. or 2 ins. of water containing the loose deposited salts in the form of mud from the lower blow-off cock. About 1 lb. of soda-ash per day sufficed to bring about this result.

THE CUMBERLAND ELECTROLYTIC PROCESS FOR PREVENTING SCALE AND CORROSION.

This process whilst primarily intended for the prevention of corrosion, when applied to boilers not only arrests corrosion, but owing to the mechanical action of the hydrogen given

off from the negative surface will loosen scale and precipitate it in the form of sludge, which is easily washed or blown out.

Where only the question of corrosion has to be dealt with in boilers, it is found that considerably less current is required than 1 amp. per 300 sq. ft.

One of H.M. cruisers having twelve Yarrow water-tube boilers, with a total heating surface of 49,500 sq. ft., or 4,125 sq. ft. per boiler, was fitted with the process, and it was found in actual practice that all corrosion was arrested and heating surfaces kept clear of scale by using about 1 amp. for 800 sq. ft. of heating surface. The anodes in these boilers consisted of two 7-ft. lengths of 3 ins. × ¾ in. bar iron, fitted in the steam drums of each slightly below the water level, and their life, it is estimated, will be considerably more than two years.

FEED-WATER SOFTENING.

Softening and Purifying Water for Boiler Purposes.

(W. H. Booth.)

To get over the difficulty of incrustation in boilers, the surface condenser as used at sea has been introduced into land practice. Condensed steam is practically free from all scale-forming salts, and as such cannot form scale, but between the feed-water pumped into a boiler and the water delivered by the air pump from the surface condenser there is a discrepancy of 5 per cent. more or less. This is compensated for by the addition of unsoftened water, and some little scale is still deposited in the boiler or in the economiser. Unfortunately, in its passage through the engine, the steam picks up the lubricating oil and carries it to the condenser, in which it is found in the form of an oil-water emulsion of such a perfection that no separation is completely possible by ordinary gravitation. Very fair separation is possible by increasing the gravitational effect by rotary whizzing as in a de Laval cream-separator. There is an electrical process by which the oil emulsion is made to coalesce in drops of a size that will separate out. Another process employs sulphate of alumina as a coagulant of the oil, which can then be removed by filtration. Wood wool, sawdust, finely broken coke, and cloths are variously employed for filtration purposes with fair success. The oil separation is often combined with a softening process introduced for the purpose of dealing with the 5 per cent. of make-up feed-water. But the surface condenser is not only costly ; it is liable, also, to scale and to become inefficient through the coating with scale or oil of its surface : it is apt to leak at its tube ends, and its repairs and maintenance are often considerable. It does not obviate softening if the make-up water is hard. For these and other reasons it would be wise to employ jet condensers in place of more costly surface condensers, and to soften the feed-water in place of removing oil from the water of the surface condenser discharge. Every case must be considered on its merits. Hard waters are rendered so by various salts of lime or magnesia, namely, the carbonates of both and the sulphate of lime. Carbonates are only soluble freely in water when they exist in the form of bicarbonate. Lime bicarbonate is known by the formula $CaCO_3 + CO_2$. The additional molecule of CO_2 may be driven off by boiling, and this explains why it so often happens that carbonate of lime is found to have passed through the economiser to be deposited thickly about the feed inlet of the boiler. Water hardened by carbonate of lime is said to be of temporary hardness only, implying that it will be rendered soft by boiling. Permanent hardness is caused by sulphate of lime, a salt which does not deposit until the water is heated to 400° F. But it will of course deposit from solution when concentrated beyond a certain percentage. In cold water calcium sulphate is soluble to the extent of 0·23 part per 100 of water. At 212° F. it is still soluble to the extent of 0·21 part. Lime carbonate is only soluble in cold water to the extent of 0·0036 part per 100 of water, or about 25 grains per gallon. Deprived of the presence of free CO_2 the solubility falls to only 2·1 grains per gallon, and this is the point down to which a carbonate water may in theory be softened. According to Taveau the solubility per 1,000 parts of water is 0·03 of lime carbonate free from CO_2 in excess, and 2·12 of sulphate at 34° C. down to 1·62 at 100° C.

Water containing iron in solution is obtained from some wells. The iron can be removed by aeration and deposit or filtration. When aerated under pressure the water will corrode iron badly, and should be heated before it is allowed inside a boiler. Heating drives off the air and removes the corrosive quality. It is not generally understood that oxygen is doubly as soluble in water as is nitrogen, so that the air dissolved in water is abnormally rich in oxygen. The iron exists as a carbonate in the form of FeO, CO_2. In addition to oxygen, caustic lime should be added, to absorb the carbonic acid which keeps the iron in solution, thus $FeO, CO_2 + CaO = FeO + CaCO_3$. Then to peroxidise the iron, air is forced into the water, when the following reaction takes place : $2(FeO) + O = Fe_2O_3$; this peroxide being quite insoluble. The process can be carried out at atmospheric pressure by first mixing the water with milk of lime and allowing it to fall through the air or over and through coke so as to expose it to air very fully. The oxide will settle out, after which the water can be passed through a sand filter. When carried out under pressure, particular care must be taken that the entry of the milk of lime is regular, a small quantity being pumped in with every few gallons. Without lime the residual iron may amount to 0·035 grain per gallon. With lime it may be reduced to 0·01, and this will no longer deposit rust after filtration. whereas with 0·035 the water will deposit down to 0·014 grain. The omission of lime

LIME.

The Purest Lime known in Commerce.

THE LARGEST OUTPUT OF LIME AND LIMESTONE IN THE WORLD.

'Old Buxton Lime'

Pure Limestone for Chemical Purposes

In Lump (any size) or Powder.

The Purest Lime for Chemical Work.

Special Trades Catered for Specially.

WHY do the leading Municipalities, Gas Engineers, and Metallurgists use ONLY 'Old Buxton Lime'? BECAUSE IT HAS NO EQUAL.

WHY does a ton of **'Old Buxton Lime'** go farther and give better results as a carrier and as a re-agent than a ton of any other Lime? **Because** of its high degree of **Purity** and its extraordinary property of **Diffusion.** Its intense activity and uniform action are not only due to its **Chemical Purity,** but also to its having a **Physical Character** possessed by no **other** Lime in the Market. To be had **only** from

The Buxton Lime Firms Co. Ltd., Buxton.

Telephone: 312 Buxton. *Telegraphic Address: 'Buxton Lime.'*

HYDRATE OF LIME

Sold under the Trade Name of

'LIMBUX'

IS PURE LIME FLOUR

Head Office: ROYAL EXCHANGE, BUXTON.

District Offices: LONDON, LIVERPOOL, MANCHESTER, LEEDS, GLASGOW, NEWCASTLE-ON-TYNE, GREAT YARMOUTH, BRISTOL, CHESTER, BIRMINGHAM, &c.

LIME

'Old Buxton Lime'

SPECIALLY PREPARED FOR

WATER SOFTENING

ANALYSIS.

SAMPLES FROM NINE QUARRIES 'OLD BUXTON' LIMESTONE:—

	Silica	Oxides of Iron and Alumina	Carbonate of Lime	Magnesia
Quarry No. 1	0.60	0.25	**98.35**	0.30
„ 2	0.55	0.20	**98.95**	0.30
„ 3	0.70	0.25	**98.80**	0.25
„ 4	0.20	0.30	**99.30**	0.20
„ 5	0.40	0.20	**99.20**	0.20
„ 6	0.20	0.30	**99.25**	0.25
„ 7	0.70	0.20	**98.90**	0.20
„ 8	1.00	0.10	**98.70**	0.20
„ 9	1.00	0.20	**98.30**	0.50

Head Office: ROYAL EXCHANGE, BUXTON.
Telephone: 312 BUXTON.
Telegrams: 'BUXTON LIME, BUXTON.'

London Office: 11 QUEEN VICTORIA STREET.
Telephone: 1504 CENTRAL.
Telegrams: 'BUXTOLIM, LONDON.'

Manchester Office: 79 PICCADILLY.
Telephone: 2982 CENTRAL.
Telegrams: 'BUXTON LIME, MANCHESTER.

Liverpool Office: 162 CROWN STREET.
Telephone: 919 ROYAL.
Telegrams: 'BUXTON LIME, 162 CROWN ST., L'POOL.'

for a few minutes will cause trouble in the shape of a length of unlimed water in the main between two lengths of good water. The insufficiently treated water, when it mixes with the other, will in a few hours discolour the whole. An amount of iron only 0·02 per 70,000 will cause water in a tank to be turbid, yellow, and non-transparent. A final filtration through hard lump chalk will remove the last trace of iron and should, if possible, be applied as a safeguard against the occasional passage of insufficiently limed water.

Magnesium carbonate is a little more soluble than lime carbonate. Carbonate of lime may be almost entirely removed by the aid of caustic lime, while lime sulphate may be removed by carbonate of soda with the formation of very soluble soda sulphate as described under 'Hardness of Water.' Magnesia is not recommended for water containing even a feeble amount of chlorides, for hydrochloric acid may be produced and serious corrosion may ensue. This acid reaction is more liable to be produced at high temperatures, hence the fact that feed water good enough for low-pressure boilers may develop virulent corrosion in high-pressure boilers.

Since caustic soda will also destroy carbonate of lime with the formation of carbonate of soda, and carbonate of soda will destroy sulphate of lime, it follows that a water containing both carbonate and sulphate of lime will be purified by caustic soda instead of by caustic lime and carbonate of soda. This of course assumes that the two salts of lime are present in certain equivalents, or the difference must be equalised by a suitable addition of more carbonate of soda, if necessary to destroy more lime sulphate.

It is not probable that anything cheaper than caustic lime can be found for temporary hardness reduction, but no lime is needed if waste heat is properly applied to drive off the carbonic acid gas. Other salts used as softeners are silicate of soda, which gelatinises carbonate of lime and sets free CO_2, leaving carbonate of soda in the water to destroy its equivalent of lime sulphate if present. Oxalate of soda is good but costly, forming a very insoluble calcium oxalate. Oxalate of potash has a similar reaction ($K_2C_4O_8$).

There are many apparatus sold for the carrying out of the Clark process and its variants. One method is to use alternate tanks, weighing into one the correct weight of caustic lime or soda necessary, in a state of solution. The whole is well stirred and allowed to settle. Meantime the other tank of softened water is drawn upon for use.

In the continuous process the water is divided into two streams of a determined ratio, one of which is made to saturate itself with lime in a separate tank. The two streams are re-mixed and agitated and passed through settling tanks. A final filtration is often added, and in one process the hydrate of magnesia that may be left in the water is recarbonated by carbonic acid gas from a coke stove. This renders the water more palatable and prevents deposit of hydrates in pipes. Water fully charged with CO_2 will dissolve 70 grains per gallon of lime carbonate or 0·10 per cent., whereas distilled water will only dissolve 1·3 grain per gallon Caustic lime rapidly absorbs CO_2 from the air; it should be stored in tight metal receptacles.

All the reactions in softening are aided by heat, and some apparatus is specifically provided with heating pipes. Well water is more easily treated than river water. The latter contains organic matter, and precipitation will be helped by using a trace of alum. This coagulates the organic matter and hastens precipitation. In the testing of water for hardness certain standards are employed. Standard hard water is pure water to which has been added 1·11 gramme of fused calcium chloride per 1,000 c.c., or 1 gramme of pure lime carbonate is dissolved in HCl, evaporated to dryness, dissolved in 50 c.c. of water, and neutralised by ammonium hydrate. These solutions are, in brief, the equivalent of 1 gramme of carbonate of lime per litre, or 1 per 1,000. Standard soap solution is a solution of white curd soap in alcohol, 100 grammes of soap to 1,600 of alcohol with heat. The filtered solution is added to 1,000 of water; 22 parts of soap solution should neutralise 40 of standard hard water, that is, should just create a lather permanent for 10 minutes. The above is French.

English standard soap solution consists of 13 grammes of Castile soap dissolved in 500 c.c. of methylated spirits and 500 c.c. of pure water. 1 c.c. of this solution should neutralise 0·001 gramme of carbonate of lime or be equivalent to one degree of hardness. Thus a water of 20 degrees of hardness will call for 20 c.c. of standard solution per gallon. Laboratory tests of course involve much smaller quantities in test tubes only. Usually 12 c.c. of the water to be tested are diluted to 70 c.c., and the soap solution is added 1 c.c. at a time, and shaken until a five minutes' lather persists. Then if, say, 13 c.c. have been added, the water is said to be 12 degrees hard, for even pure water requires 1 c.c. of the solution to show a permanent lather.

Water from various sources varies in hardness from nil to above 114 degrees. A few samples have been taken from 19 to 114 degrees, and the cost of chemicals found to vary from 0·2*d.* to 4·2*d.* per 1,000 gallons, depending much on the ratio of lime to soda required.

As a guide to the value of softening, it may be added, one pound of lime will soften as much water as $4\frac{2}{3}$ lbs. of carbonate of soda or 17 lbs. of hard soap, the relative cost of the three reagents being 1 : 50 : 500.

Filters are charged variously with sponge, wood wool, cloths, crushed quartz, sand, broken coke, or sawdust, suitably packed.

Artesian waters from sand rocks are usually soft, those from limestone rocks or the red marls are hard. Superficial gravels often give hard waters, and the clay rocks, such as the lias, are often productive of hard water. Coal measures often give very bad water, even from sandy strata. Ancient rocks such as granite yield soft supplies, and the moorlands of the north country, being chiefly of millstone grit, yield remarkably soft water. Chalk yields hard water, but where covered with London clay the hardness is very much reduced, often falling to 6 degrees.

Water Softening by Means of Zeolytic Exchange Process.

('Permutit' Process—United Water Softeners, Ltd.)

The 'Permutit' system comprises filtration through a bed of granular material of pearl-like appearance, which is employed in a granular state and which has the property of giving up its sodium base to any water which is flowed through it, in exchange for any calcium or magnesium contained in the water.

This action takes place irrespective of whether the calcium or magnesium in the water is in the form of carbonate or sulphate, i.e. quite independent of whether the hardness is temporary or permanent.

Such a method affords a means of presenting to the hard water a large supply of the softening element in readiness to be drawn upon by the water itself in exact proportion to its quantity and hardness; in other words, Permutit contains, in large excess, the active softening element, which however is effective in precisely the degree required to completely effect the softening of the water, and no more.

This action continues for so long as there remains in the Permutit active material (sodium) available for exchange; the total softening capacity of Permutit being represented by the multiple of the hardness and the quantity of any water, so soon as this quantity of water of the specified hardness has passed through the bed of Permutit, the sodium will become replaced by calcium or magnesium (or both), extracted from the water; thereafter, no further effect takes place either in respect of the Permutit, or of any further water passed through it. A fresh charge of the sodium is then transferred to the Permutit by flowing through it a weak solution of common salt (NaCl), when a similar exchange action takes place."

In this stage revivifying, or in its technical term 'regeneration,' takes place, by an exactly similar process. The bases of the hard salts (calcium or magnesium) are replaced in the Permutit by the sodium contained in the salt solution; and the calcium and magnesium combine with the chlorine of the salt forming the chlorides of these bases, which as a clear liquor may be run into any drain. Any slight excess of salt solution remaining amongst the granular particles of the Permutit after complete regeneration has been effected is washed out by a short rinse with clean water.

A complete cycle of operations has then been completed, when hard water can again be passed through the filter, softening being complete as before, and continuing until the maximum quantity for which the filter is designed has again been treated.

During this to-and-fro softening action, the Permutit itself suffers no damage or wastage, it being merely a vehicle for the zeolytic exchange action which is the peculiar property of the substance. There is, therefore, afforded an extremely simple, though entirely scientific means for completely softening water of any hardness without any deposit of solid matter; any necessity for settlement and subsequent sludging away of precipitates, as was the case in the previous lime and soda systems, is thus completely obviated.

Another important feature attaching to the 'Permutit' system is the valuable means which it affords for treating water as it passes through the mains under pressure; and it has thereby become possible to treat any supply for industrial or domestic purposes as it enters the building in which it will be used, and to deliver the same in a completely softened condition to storage tanks in the top of the building, without any break in the pressure or consequent necessity for repumping.

The process is equally effective when operated cold. Running expense depends mainly upon the relative local cost of lime and salt, or soda and salt according as the hardness in the water is principally temporary or permanent. Elimination of any necessity for repumping, as also for the removal of sludge constituting the by-product of the lime-soda treatment, are, however, features which considerably affect the relative running costs of the two methods of treatment; and in a large number of cases these compensate for any advantage which may exist in favour of the lower price of lime than that of salt in any particular locality.

Absolute uniformity in the final water, as well as elimination of any necessity for skilled control of the treatment by a chemist, are also features of importance attaching to the Permutit system.

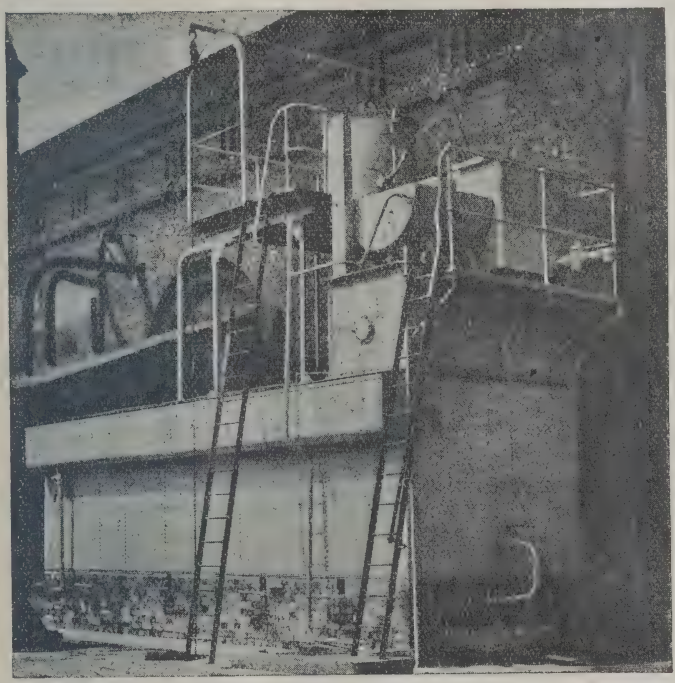
In cases where temporary hardness preponderates heavily, and the difference in cost of lime and salt is also in favour of the lime treatment, a Permutit filter may with advantage be arranged to supplement a preliminary lime treatment.

Elimination of Iron and Manganese from Water Supplies.

By means of a special type of Permutit, prepared and oxydised by the use of manganese salts and permanganate, all traces of iron and manganese can be eradicated from a water supply the treatment being effected under pressure and without calling for any extra pumping.

Large installations for some of the leading public water supplies throughout Europe have been laid down with conspicuous ssucess for this purpose, as well as for the softening of the water as above described.

The Permutit system constitutes practically the only one of certainty and success for the removal of manganese.



UNITED WATER SOFTENERS Ltd.

Engineers and Contractors for every description of Water Purification Plant.
Softening — Filtration — Sterilization.

IMPERIAL HOUSE, KINGSWAY, LONDON, W.C. 2.

TELEGRAMS:
'AQUADOLCE, ESTRAND, LONDON,'

TELEPHONE:
REGENT 5270 (4 lines).

F. 1444

IDEAL SOFT WATER

For ALL PURPOSES
is obtained by installing a

KENNICOTT

WATER SOFTENER
and
PURIFIER.

(See pages 1446-1448 of this work.)

Write for full particulars to—

KENNICOTT WATER SOFTENER CO.
(Proprietors: John Thompson Water Tube Boilers, Ltd.)
WOLVERHAMPTON, Eng.

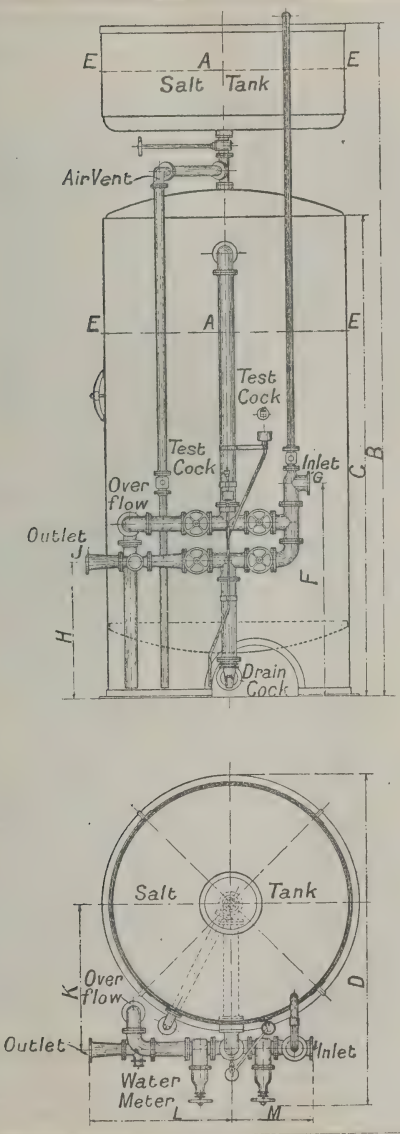


FIG. 19. PERMUTIT WATER SOFTENER.

General Design of Permutit Plant.

The type of plant utilised for effecting Permutit treatment of water is of a standard design, and is shown by fig. 19, page 1445.

A mild steel cylinder of such proportions as are requisite accommodates the proper quantity of Permutit.

Provision is made by means of suitable pipe connections and valves for agitating the Permutit bed by means of a flow in the opposite direction to that of filtration. By this means any uneven action due to air pockets or channels in the bed of the Permutit is prevented.

In the case of single units, the filter carries above it a shallow tank for dissolving the salt for regeneration—which is usually arranged to be effected once in each day.

In the case, however, of multiple-unit plants, these overhead salt tanks are dispensed with : and a common tank in steel or ferro-concrete provided, in which the salt solution is made up for the entire battery of the filters.

A complete plant of this description is in operation for both iron removal and softening at the Hooton Pumping Station of the West Cheshire Water Company.

Plants upon similar lines have been installed by a very large number of the leading industrial concerns both in England and on the Continent, as also by the Municipalities of Breslau, Dresden, and other leading cities.

For ' Lassen-Hjort ' Patent Water Softening system, see page 1450.

The Kennicott Type ' K ' Water Softener.

(Kennicott Water Softener Co., Wolverhampton.)

The Kennicott Type ' K ' Plant is so designed as to be very simple to operate, and at the same time extremely accurate. The plant is absolutely positive in its action, and there are no oscillating parts to get out of order, and no valves or cups to get made up with lime. Fig. 20 shows the general construction of the plant, the action of which is as follows :—

The calculated quantity of chemicals required for a day's supply are run into the chemical tank B, which is filled to a definite level. The hard water enters the plant by way of the pipe E into the hard-water box F, whence it flows through an adjustable slot over the water wheel D and out of the chute G at the bottom of the water wheel casing into the top of the downtake H. The incoming water, passing over a water wheel, provides all the power required for operating the plant. It drives the main shaft, and this shaft drives two vertical shafts, one in the downtake and the other in the chemical tank B. The shaft in the chemical tank B has a 4-bladed agitator at the bottom, and this keeps the chemicals constantly and homogeneously mixed. The shaft in the downtake has an agitator fixed to it, and this ensures that the chemicals added are thoroughly mixed with the water, a most essential feature. In order to proportion the chemicals, a small quantity of hard water from the hard-water box F is bye-passed to the dividing box I, where the small quantity of bye-passed water is divided, a portion running into the regulating tank K, and the rest down the drain. The dividing box is set so that the amount of water run into the tank K fills up this tank in a definite number of hours, generally sufficient for a day's run, and as this tank fills, the float riding on the water in this tank gradually rises and at the same time lowers the weir L in the chemical tank B, the float in the tank K being connected with the weir in the tank B by means of a flexible cable passing over two pulleys. It will thus be seen that the chemicals are added in an absolutely definite proportion to the quantity of water entering the plant. Immediately the chemicals come into contact with the water, the whole is thoroughly mixed by means of the mechanical agitator in the downtake, and the water passes down to the bottom of the downtake H, and finally flows upwards in the direction of the arrows, at a very slow rate, and is finally filtered at the top of the plant.

Any mud contained in the water, and the bulk of the precipitated hardening salts, settle on the bottom, and it is very necessary that this sludge should not be allowed to accumulate, otherwise the moving water will very quickly wash it up into the filter. By means of the *Kennicott Patent Revolving Sludging Gear*, however, the whole of the sludge settled on the bottom can be removed, the action of the sludging gear being very similar to a vacuum cleaner.

No Kennicott plant is made with less than three hours' settling, this being the minimum time that should be allowed for the complete precipitation of the hardening salts. With all Kennicott plants the mixing tank A is supplied. This tank is sufficiently large to hold a full day's supply of chemicals, so there is always a charge in readiness when the proportioning tank B is empty.

As the main tank always stands full of water, the clear soft treated water discharges from the overflow at the side of the main tank at a point above the filter as fast as the water to be treated enters the top of the downtake ' H.'

The machine is continuous and wholly automatic in its operation. The flow of the water furnishes all the power necessary for mixing the chemical reagents with the water and for operating the mechanism.

KENNICOTT TYPE 'K' WATER SOFTENER.

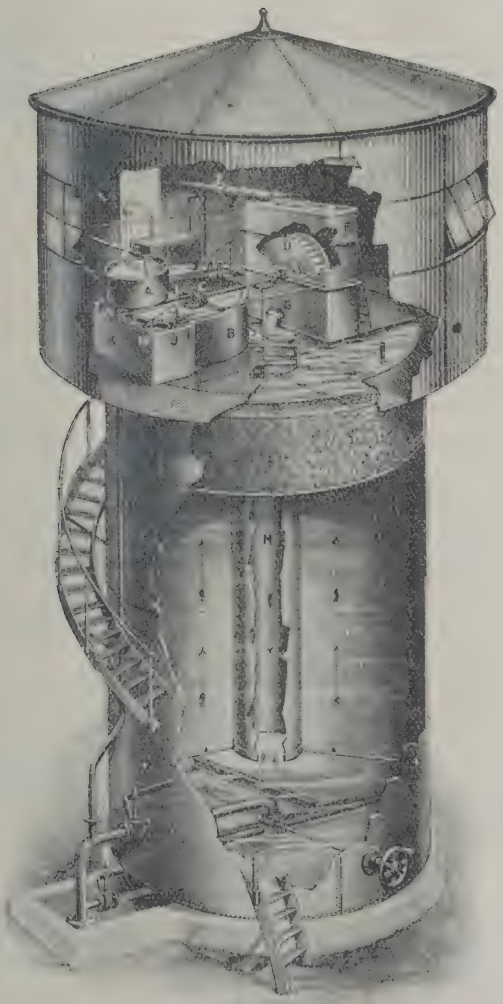


FIG. 20.

Every installation is designed for the work it has to perform, and to suit the site it must occupy. The chamber can be made either cylindrical or rectangular in shape. When a supply of exhaust steam is available, great economy can be obtained by installing a Kennicott Patent Type 'K' combined Heater and Softener.

The operation of this type of plant is exactly similar to the Kennicott Cold Water Softener described above. In addition to the chemical proportioning gear, there is fitted a very substantial heater, fitted with removable trays, over which the water passes. Steam is admitted at the bottom of this heater after passing through an oil separator, and passes upwards through the water. This raises it to boiling point, a considerable proportion of the hardening salts being at the same time deposited in the trays, which are from time to time removed for cleaning purposes. Practically the whole of the hardness originally present in the water is by this system removed, and at the same time a soft feed water of high temperature is available for boiler purposes.

Plants of the latest Type 'K' design of all sizes from 500 to 150,000 gallons per hour capacity are actually in operation.

The Royles Automatic Water Softener and Purifier.

(*Reisert System.*)

In this apparatus, fig. 21, p. 1449 (*Royles, Ltd., Irlam, near Manchester*), the bicarbonate of lime is precipitated by hydrate of lime (lime water), and the sulphate of lime by soda. The softened water is then filtered and discharged.

The apparatus, which acts entirely automatically, consists essentially of an automatic lime saturator and decanter B, a soda chamber D, a water-distributing tank E with a lime-slaking division A and soda-mixing division C, a reaction chamber F, and an automatic self-cleansing filter K.

The *Lime Saturator* B requires no stirring contrivance, and lixiviates the lime completely; and owing to its upward widening shape, it turns the saturated lime water into a clear fluid.

By a constantly uniform water supply through the micrometer valve 3 from the distributing tank E, which is conducted dnwaowrds through the central pipe O, the lime paste at the bottom is stirred up and thoroughly impregnated, and rises, at first partly with the water, until the rapidity of the rising water diminishes so much, owing to the upward widening shape of the saturator, that the undissolved lime particles are no longer able to follow, so that the saturated lime-water, clarified, then leaves the saturator B at the top, and is carried into the reaction chamber F by way of the mixing pipe E^1.

As lime possesses the property of dissolving in a definite proportion in water until the latter is saturated, it is possible to continually keep a uniform stream of saturated lime-water supplied as required, for the precipitation of bicarbonates of lime and magnesia. Upon this uniform addition of lime depends the degree of purification of the water.

In the *Soda Apparatus* D, a quantity of soda (which unlike lime, is very soluble), one gallon of water at 60° F. dissolving up to 1¼ lb. of dry sodium carbonate that will suffice for one of more days, is dissolved in the chamber C and let down into D through cock Q.

The action of the soda apparatus is based on the fact of the soda solution having a greater specific gravity than water, and thus the water flowing from the distributing tank E through the small micrometer valve 1—which is adjusted in accordance with the amount of soda required—into the soda chamber D, remains always on the surface of the soda solution (no mixing taking place), and displaces the same, it being carried through the small pipe from the bottom upwards, and into the mixing pipe E^1, and finally into the reaction chamber F.

The water-distributing tank, E, is supplied with the hard water to be treated, by pipe and cock as shown; it is also provided with an overflow pipe.

It is further provided with three micrometer valves at an equal height, viz.—(1) for the supply to soda tank; (2) for the supply of untreated water to the reaction chamber; and (3) for the supply to the lime saturator B. By arranging these three valves at an equal height the quantities of water flowing from them are always proportionate in the event of less water being supplied to the apparatus than corresponds to the capacity; or in the event of the water supply ceasing altogether, they cease simultaneously.

A *Lime-Slaking Division*, A, is arranged in the distributing tank. In it, once a day, the required quantity of lime is slaked by means of a supply of water obtained from the water inlet pipe. The lime paste is then conveyed in bulk to the bottom of the lime saturator B, through the short depending pipe illustrated, by opening cock R. The *Reaction Chamber* F thus received through the mixing pipe E^1, the untreated water, lime-water, and soda-water, which remain in this chamber until the chemical reactions have been accomplished.

The continuous inflow of the water and chemicals above described overflows *via* the pipe J into the filter chamber K, following the course of the arrows downward through the filter bed and upwards through pipe S into the tank L, the rest flowing away, at M, to reserve or for use. The height of the column of water in the pipe J will vary with the resistance of the filter bed, and as the latter fouls, the water will rise higher and higher in J.

Similarly it will rise to an equal and corresponding height in the syphon pipe L^1, and as soon as the resistance through the filter bed reaches such a point as to cause the water to over-

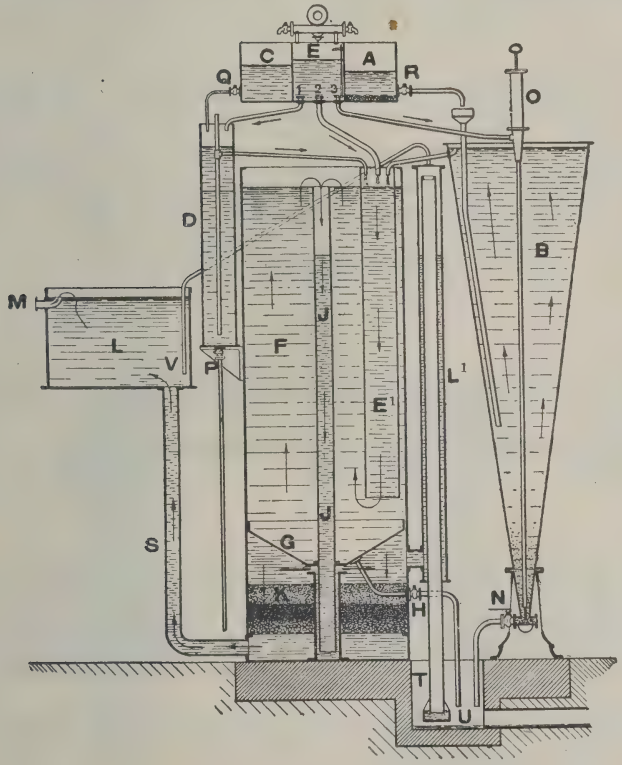


FIG. 21.

flow this pipe, it forms a syphon and instantly reverses the current through the filter bed, drawing backwards the clear water held in the small tank L, thus thoroughly and automatically cleansing the filter, the sediment being discharged at T into the gully U. The small tank L is proportioned to hold sufficient water to thoroughly flush the filter K, and as soon as the tank is empty air enters *via* the pipe V, and destroys the syphonic action.

The filter then resumes its normal working, and so continues until the fouling is again such as to cause the pipe L to overflow, when the cleansing action is repeated. The loss of water in reflushing is very trivial. The filtering material rarely requires renewal.

The Lassen-Hjort Water Softening and Purifying Plant.

(United Water Softeners Ltd.)

A special feature of the Lassen-Hjort patent automatic water softener, fig. 22, is the device it embodies for the separate and exact measurement, in small, absolutely definite, and predetermined quantities, of both hard water and softening reagents. This device (termed the Lassen-Hjort patent measuring apparatus) renders it possible to treat water or effluents of any character with any reagent or combination of reagents, in rigidly proportionate quantities, which can be varied at will and adjusted with the utmost precision.

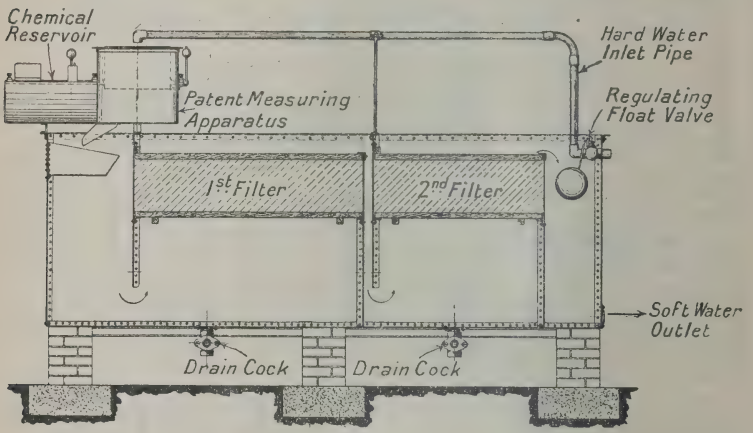


Fig. 22.

The hard water to be softened is ed into the plant by a pipe which alternately fills each of the compartments of a two-chambered tipper oscillating on a shaft carried in bearings. When one of these compartments is full of water the disturbance of equilibrium causes the tipper to over-balance, and, by doing so, to discharge its contents of water into the tank in which it is suspended : at the same time the other compartment of the tipper is brought under the orifice of the inlet pipe and filled in its turn with hard water, to be discharged in the same manner when full. A counter affixed to the tipper shaft registers the number of oscillations, so that the quantity of hard water to be treated is thereby accurately measured.

An important feature of the apparatus is the recently introduced patent locking gear, by means of which the oscillating receiver is prevented from tipping until it contains a predetermined quantity of water. This ensures absolute precision in the measurement and delivery of the water to be softened.

The apparatus, fitted with this locking gear, has been tested as a water meter pure and simple, at the National Physical Laboratory, Teddington, and certified to be correct within 1 per cent.

At each discharge of water from the tipper into the tank in which it works, a corresponding amount of water is displaced from this tank through a standpipe and shoot into the reaction chamber of the softener, and here it receives at the same moment the requisite charge of chemical solution from the semi-circular chemical container affixed to the side of the tipper tank. This is effected by means of a 'positive discharge valve' (patented) placed in the bottom of the chemical container, which is opened at each movement of the tipper, and caused to deliver into the reaction chamber the exact amount of softening reagent (in the majority of cases a mixture of lime and soda ash) required to soften it to the guaranteed figure.

The valve can be adjusted (with great ease and over a wide range) to discharge any specified quantity of reagent required by the volume of water in the tipper compartment, so that the plant can be easily regulated while working without any necessity for altering the strength of the chemicals or changing the solution in the container. The precision with which the chemicals and water are measured and mixed makes for speedy completion of the reaction.

A special feature of the tipper gear is the fact that all the working parts are in sight, whilst the whole gear is simpler (it is claimed) than that of any other water softener plant in use.

The average results obtained with the Lassen-Hjort plants show a hardness of the water after treatment of 2° Clark, while the residual alkalinity (i.e. excess of lime and soda remaining in the water after the conclusion of the softening process) averages only 1·5 grain per gallon, or one and a half parts in 70,000 parts by weight, i.e. practically no excess of alkalinity.

The plant being primarily designed for adding lime automatically to water in exactly measured quantities, is very suitable for carrying out the Houston 'excess lime' process of water sterilisation.

The Lassen-Hjort process has been adopted by Messrs. Babcock & Wilcox, who supply it throughout the world under license from the makers.

Over 6,000 Lassen-Hjort plants are at present in use.

See also 'Purification of Boiler-Feed Water,' No. 4, 1921, *Proceedings Inst. Mech. Engrs.*

THE ROW FEED-WATER HEATER.



FIG. 23.

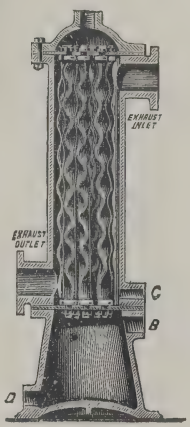


FIG. 24.

In Row's Patent Feed-Water Heater, figs. 23 and 24 *Royles, Ltd., Irlam, near Manchester*), a peculiar form of indented tube is used, which it is claimed is *twice as efficient as an equal amount of plain tube surface*, giving great *compactness* and *efficiency*. The tube is also elastic in the direction of its length, thus avoiding liability of fracture or breakage when fixed between tube plates.

The Heater (fig. 24) shown is intended for good water—i.e. water not liable to scale—in which case the water is sent *through* the patent tubes. For bad water the order is reversed, i.e. the exhaust is sent through the tubes and the water circulates in the casing.

SAVING OF FUEL BY HEATING FEED-WATER. STEAM AT 60 POUNDS.

Initial Temp. of Water.	Final Temperature of Feed-water.							Initial Temp. of Water.	Final Temperature of Feed-water.						
	120	140	160	180	200	250	300		120	140	160	180	200	250	300
	Percentage of Saving.								Percentage of Saving.						
32°	7·50	9·20	10·90	12·36	14·30	19·03	22·90	90°	2·68	4·47	6·26	8·06	9·85	14·32	18·81
35	7·25	8·96	10·66	12·09	14·09	18·34	22·60	95	2·24	4·04	5·84	7·65	9·44	13·94	18·44
40	6·85	8·57	10·28	12·00	13·71	17·99	22·27	100	1·80	3·61	5·42	7·23	9·03	13·55	18·07
45	6·45	8·17	9·90	11·61	13·34	17·64	21·94	110	·90	2·73	4·55	6·38	8·20	12·76	17·28
50	6·05	7·71	9·50	11·22	13·00	17·28	21·61	120	0	1·84	3·67	5·52	7·36	11·95	16·49
55	5·64	7·37	9·06	10·85	13·60	16·93	21·27	130	..	·92	2·77	4·64	6·99	11·14	15·24
60	5·23	6·97	8·72	10·46	12·20	16·58	20·92	140	..	0	1·87	3·75	5·62	10·31	14·99
65	4·82	6·56	8·32	10·07	11·82	16·20	20·58	150	..	..	·94	2·83	4·72	9·46	14·18
70	4·40	6·15	7·91	9·68	11·43	15·83	20·23	160	..	..	0	1·91	3·82	8·59	13·37
75	3·98	5·74	7·50	9·28	11·04	15·46	19·88	170	..	..	..	·96	2·89	7·71	12·54
80	3·55	5·32	7·09	8·87	10·65	15·08	19·52	180	..	..	..	0	1·96	6·81	11·70
85	3·12	4·90	6·63	8·46	10·25	14·70	19·17	200	..	..	..	..	0	4·85	9·93

FEED-WATER REGULATORS.

THE CROSBY PATENT FEED-WATER REGULATOR.

The action of this regulator (*The Crosby Valve and Engineering Co. Ltd.*, 41–42 *Foley Street, London, W.* 1) is in no way dependent upon the rising and falling of a float, and there are very few parts which are liable to give trouble and so to cause the apparatus to work in an erratic manner.

In fig. 25, A is a chamber which is put into communication with the steam space of the boiler, the steam being led in through the pipe H. A pipe L also puts the chamber in connection with the boiler, but in this case with the water space. If, for example, the apparatus is fitted to a Babcock boiler it might be placed at the side of the drum, so that the top of the chamber A is in line with the required water level. If the pipe L be then connected to the drum G, about 12 ins. below the water line, and the pipe H to the top of the drum, the level of the water in the chamber A will be dependent upon the level of the water in the boiler. When the water in the boiler rises, that in the chamber A will rise, and when this chamber is full of water steam will be prevented from entering from the pipe H. When the water in the boiler falls it will also fall in the chamber A and steam can enter, which causes an immediate rise in pressure in the system above the chamber A.

The part of the apparatus above the chamber A is partly filled with water and is connected to the chamber M of a regulating valve by the pipe O which acts as a cold water column. When the apparatus is used for regulating the supply of water to boilers working on a common steam main, the double-beat balanced valve T is connected in circuit with the feed pipe, each boiler being provided with one of these regulating valves. Where there is only one boiler, however, the valve T can be made to control the supply of steam to the feed pump, the latter automatically starting and stopping according to the slight variations in the water level.

There is a diaphragm in the chamber M, this being connected to the double-beat balanced valve by means of a spindle. When the water level in the boiler falls, the pressure formed in the apparatus as described below is exerted on the diaphragm, causing the valve to open against the action of the spring. When, however, the water rises, this pressure falls and the spring causes the valve to close, thus shutting off the supply of water to the boiler.

When the apparatus is first put into use, both the cocks on the boiler are closed, so that neither steam nor water can enter the chamber A. The air valve B is removed, and water is poured in. At the same time the union, or plug, on the diaphragm chamber is loosened, in order to enable the water to drive out the air in the pipe connecting the two pieces of apparatus. This having been done, the union on the chamber M is again tightened up, and more water is poured into the chamber at B when the air valve is closed. Steam from the boiler is then admitted under the partition G and the water in the system above is boiled up, the air valve B being loosened to let the air escape. This process is repeated several times, and on each occasion the apparatus is allowed to cool. In this way a vacuum is created in the apparatus above the partition G, and when a gauge to the left of the upper chamber registers a vacuum of at least

10 ins. the device is ready for use. The gauge serves for registering both pressure and vacuum, the latter being to the left of the zero mark and the former to the right of it.

The vacuum having been obtained, the two cocks on the boiler are opened, and the device commences to work. When the water in the boiler falls and steam is admitted to the chamber A through the pipe H, the heat of the steam is transmitted through the plate G. This heat boils the water in the chamber D. The pressure of the steam so generated, acting on the surface of the water in the top chamber, gives rise to a pressure above the diaphragm in the chamber M. This diaphragm is depressed, and the valve (which is in a battery of boilers arranged in the feed-pipe to each boiler) is opened, a supply of feed-water is admitted to the boiler, and in this way the water level is raised. As the water rises in the drum of the boiler, it also rises in the chamber A, and when the proper level in the boiler has been reached, steam ceases to enter from H. The chamber A then contains nothing but water. Under these conditions the water in the chamber D is no longer evaporated, and the steam condenses, the pressure in the top chamber consequently falls, and the valve closes. The supply to this particular boiler then ceases for

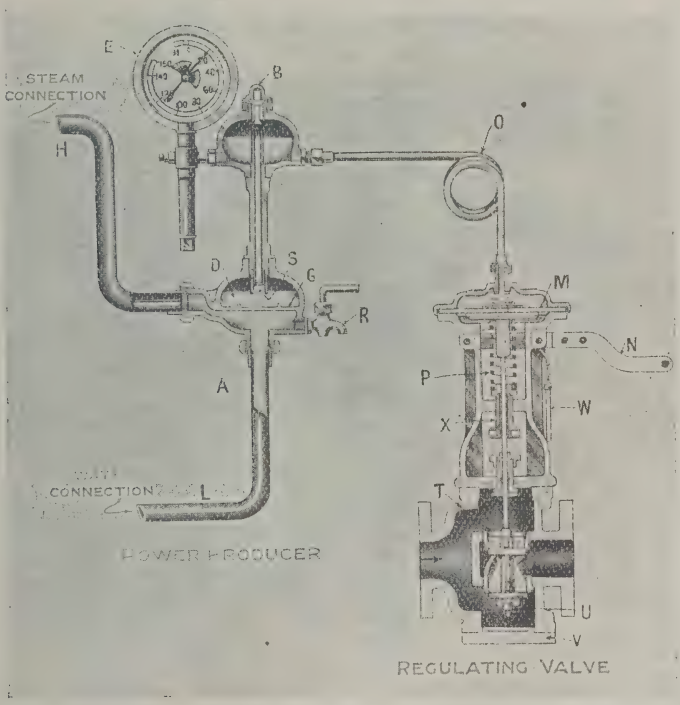


FIG. 25.

the time being. The pressure gauge indicates whether the apparatus is working properly, and in this way the stoker is provided with a means of guarding against low water even should the device get out of order, which, however, is not at all likely to occur.

When the apparatus is working properly the pressure rises and falls slightly in accordance with the fluctuations in level in the boiler, opening the regulating valve wider or allowing it to close, thus increasing or reducing the feed supply to the boiler. It does not constantly open and shut, but regulates the feed so as to keep the water level constant within close limits. A lever is provided on the regulating valve for testing its operation or to keep the valve open if desired and an adjustable device is provided to keep the valve always open a limited amount if required

The principal advantages claimed for the apparatus are the following:—(1) It enables a lower water level to be maintained with perfect safety, thus increasing the steam space in the boiler and ensuring a supply of dry steam; (2) it reduces coal consumption by reason of maintaining a regular feed proportionate to the evaporation of the boiler; and (3) it ensures a greater regularity in the steam-raising, and so tends to prevent fluctuations in the pressure. (4) It will work continuously without requiring attention or repair.

The Warner Hydraulic Automatic Feed-water Regulator.

(Patent.

With this regulator (*Robert Warner & Co.* (*Engineers*), *Ltd.*, 14–16 *Cockspur Street, London, S.W.*), which is shown fitted to the drum of a water-tube boiler, fig. 26, no additional valve

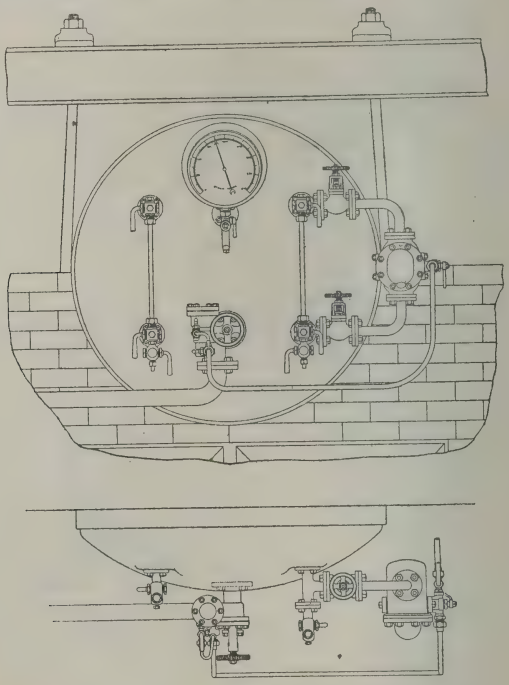


FIG. 26.

for regulating the feed water admission to the boiler is used, but the boiler check valve itself is made to do its own throttling and opening automatically. To the underside of the valve is attached a small piston working in a cylinder, and a definite amount of water is by-passed into a space underneath it.

The way the valve operates is as follows:—The feed water is delivered from the pump as usual underneath the check valve and above the small piston. The pressure exerted by the feed water therefore acts both ways, viz., up and down, while at the same time the pressure in the boiler is holding the valve shut, and the pump cannot lift the check valve, which remains closed. But a small quantity of water is continuously passing to the space underneath the piston. As long as this is allowed to escape, the check valve remains closed. If, however, it is prevented, from escaping, the water instantly fills the space and exerts the same pressure underneath the

WARNER-ANTHONY

HYDRAULIC AUTOMATIC

BOILER FEED REGULATOR

Patents applied for.

Proved to be an essential part of any steam generating plant where the utmost economy in fuel and labour is desired. It is easily and quickly fitted to any type of boiler, and the cost is very moderate.

(*See pages* 1454-1455 *of this work*).

We shall be pleased on receipt of enquiries to send full particulars, and to arrange for prospective clients to inspect the demonstration plant at our Works, or to put them in touch with our nearest representative.

FIT THE WARNER REGULATOR TO YOUR BOILER AND OBTAIN—

REDUCED **Coal Consumption**
Maintenance Costs.

INCREASED **Steam Capacity**
Safety.

IN BRIEF—EFFICIENCY WITH ECONOMY.

WARNER PUMPS

(See pages 1147 & 1148 and facing 1148.)

CASTINGS FOR ALL PURPOSES

From 1 oz. to 3 tons.

ROBERT WARNER & CO. *(Engineers)* Ltd.

Head Office:
14-16 COCKSPUR STREET, LONDON, S.W. 1.

Telegrams: Hydrological, Westrand, London.
Telephone: Gerrard 3930, 3931, 3932.

Works;
WALTON-ON-THE-NAZE.

Telegrams: Foundry, Walton-on-the-Naze.
Telephone: Walton-on-the-Naze 5.

Coal Measurement

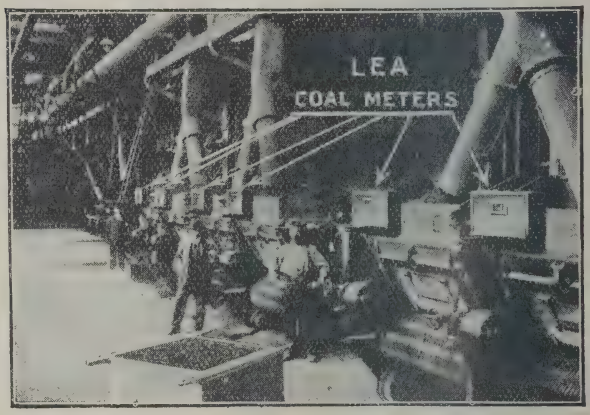


Photo showing six Lea Coal Meters installed at a large Power Station in connection with :: Babcock-Wilcox Chain-Grate Stokers. ::

The Lea Coal Meter, applied to Chain-Grate Stokers of the Babcock-Wilcox, or other types, automatically counts up the cubic feet of coal

JUST AS IT IS BURNED.

The measurement is continuous.
All errors due to moisture are entirely eliminated.

Accuracy guaranteed within $2\frac{1}{2}\%$.

Full particulars, prices, etc., can be obtained from

THE LEA RECORDER CO., LTD.
28 DEANSGATE,
MANCHESTER.

F. 1455

piston as above it; the piston therefore becomes balanced and inoperative, and the feed water pressure raises the check valve, and the pump forces water into the boiler in the usual manner. As soon as the water is allowed to escape from the space, the check valve again closes and stops the pump. The control of the escape of the water from the space therefore constitutes a complete hydraulic control of the check valve.

By this system, instead of its being necessary to control the whole of the water entering the boiler, it is only necessary to control the small quantity passing to the underside of the piston, or about one per cent. of the total feed.

The space below the balance piston is connected by means of a pipe to the control valve situated on the side of the control box. The control box is connected to the boiler in any convenient manner which ensures the same water level in the control box as in the boiler.

The control box contains a displacement float which rises and falls with the water level in the boiler; the float operates the control valve, which controls the by-pass water.

The control valve proper is a semi-rotary barrel valve of such design as to eliminate the danger of jamming up by accumulation of scale.

As the water level in the boiler rises, the float rises and opens the control valve, thus allowing the water under the balance piston to escape. Consequently, the check valve closes. Conversely, as the water level falls, the float also falls, closes the control valve, thus preventing the escape of the water from the underside of the balance piston. It will be seen, therefore, that the piston being balanced, the pressure exerted by the feed pump will raise the check valve and water enters the boiler in the usual manner.

Suitable levelling valves are provided with the control box, and by closing these valves, the whole of the working parts may be taken out and examined whilst under steam, and without stopping the feed.

Provision is made for varying the water level above or below the normal working level, should this at any time be considered desirable.

STEAM REGULATORS.

The Hulburd 'Servo' Patent Regulator.

This regulator, fig. 27 (*The Hulburd Engineering Co. Ltd.*), consists of a single-seated main valve C, formed with a cylindrical throttle valve extension D on its outlet side and a piston on its steam side, containing an auxiliary relief or balancing valve K, which terminates in a slender conical plug and is attached to the valve spindle E. There is no direct connection between the valve spindle and the main valve. The piston, which is rendered steam-tight by an ordinary piston ring, works in a cylindrical extension of the valve casing, forming with it a balancing chamber A. This balancing chamber is in permanent communication, by means of the small hole P in the valve casing cover, with the boiler, and is thus kept under steam pressure, which so long as the auxiliary valve K is closed presses the main valve firmly against its seat S. The regulator is operated by drawing the balancing valve K from its seat within the main valve, thus allowing steam from the chamber A to escape past its conical point until the rate of flow out of the chamber past the valve K is in excess of the steam supply to it through the orifice P, and the pressure in A is thereby reduced. When the pressure in A is thus reduced to a certain point it is insufficient to keep the main valve closed against the steam pressure constantly exerted in an opposite direction on the other or valve side of the piston; the piston, therefore, is forced inwards into its cylinder and draws with it the main valve from its seat. The main valve now takes up a definite position in relation to the auxiliary balancing valve, and so adjusts itself with regard to it that the outflow of steam from A past the small valve K exactly equals the supply admitted through the passage P, which is in permanent communication with the boiler. The main valve, in fact, may now be said to float upon the steam, and in this condition responds instantly to the slightest movement of the auxiliary valve and spindle. When the auxiliary valve is at rest in any given position, the main valve is rigidly held by the steam in that position, and if the auxiliary valve is advanced or withdrawn, the main valve follows it as though the two were one, automatically re-establishing the condition that inflow and outflow of steam in A are equal, without the slightest indication of oscillation or 'hunting.' Indeed, so sensitive and absolute is the control afforded that, as has been demonstrated by experiment, a driver is able to raise his steam chest pressure at will, and with the greatest certainty, by regular increments of

2 lbs. throughout the whole range of pressure. The effort required to manipulate even the largest valve on this system is altogether insignificant, for the auxiliary valve, which is the only one to be moved by hand against steam pressure, does not in any case much exceed one inch in diameter; and the steam itself supplies the necessary power to move the main valve, being set in operation and controlled by the auxiliary valve acting as a sort of relay, so that the least possible exertion is necessary on the part of the driver, who has, in fact, only the friction of the working parts to overcome, and thus is able with a touch to keep his regulator absolutely under control. *It is important to note that the main valve does not in any position exert the slightest pull on the spindle, there being no mechanical connection whatever between the two.*

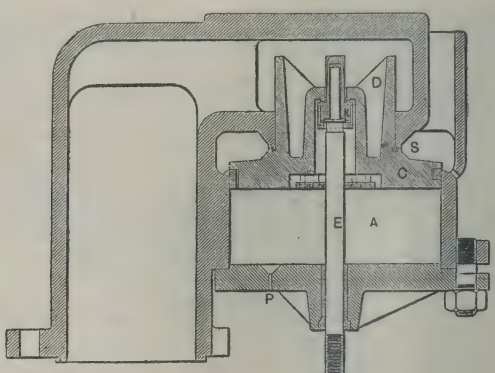


FIG. 27.

The special construction of the valve seat and face is such that the faces are protected by a projecting lip or edge from the cutting action of steam at high velocity at the moment of opening or closing. The design of the throttle valve also prevents any appreciable rush of steam past the main valve faces before they are separated by a considerable interval.

The 'Servo' Regulator forms part of the standard equipment on many leading railways. The principle is also adapted to valves for stationary use, such as winding, hauling, etc., and for marine purposes where a variable speed is required; in such cases it gives excellent results.

OIL SEPARATORS.

Lubricating oil, if allowed to pass into boiler feed-water, constitutes a danger to boilers so serious that means for its separation and removal are now invariably insisted upon by insurance companies. The method generally employed is that of the mechanical separation and extraction of oil and grease from the exhaust steam before it enters the condenser.

The fitting of high-pressure boilers with superheaters has increased the difficulty of the removal of the oil, while rendering the necessity of the complete separation all the more imperative.

For *small* quantities of greasy water, finely-broken coke placed in a perforated-bottom pail and hung below the greasy drip of an exhaust pipe has been found efficient in separating oil.

THE 'BAKER' PATENT OIL SEPARATOR FOR EXHAUST STEAM.

(*Bakers* (*Leeds*), *Ltd.*, *Hunslet, Leeds.*)

This separator is designed to eliminate the lubricating oil from the exhaust steam of all classes of reciprocating engines, it being immaterial whether such engines are exhausting into l.p. turbines, condensers, or heating installations. The steam is cleansed to such a degree that the condensate may be used for boiler feeding or manufacturing purposes without further treatment, a recent analysis of a sample of condensed steam after passing through a 'Baker'

A FEW REASONS WHY

WE CLAIM THAT

THE BAKER OIL SEPARATOR

FOR EXHAUST STEAM

IS THE BEST

We have specialised in this class of apparatus for 26 years and are in possession of exclusive information.

We have made it our business to watch the working of each apparatus supplied and have from time to time improved our designs with the result that we can guarantee maximum efficiency.

We calculate the capacities of our Separators in accordance with the properties of the steam to be dealt with and not merely to fit into a certain size of exhaust pipe.

We can invariably refer you to apparatus in operation in your district, so that you may prove our claims to your own satisfaction.

We are the original Patentees and Manufacturers and can quote competitive prices for apparatus to fit into new or existing installations.

CATALOGUE ON REQUEST.

Wires:
'EXHAUST, LEEDS'

BAKERS' (Leeds) Ltd.
HUNSLET, LEEDS



When did you Scale your Boilers last?

THE

'SKATOSKALO' Patent Scaling Tool

is the quickest and most efficient method of Boiler Scaling ever devised. The Type of Tool here illustrated is the improved pneumatic Tool for Babcock, etc., Boilers—and is one of a range of many types of

Pneumatic, Water Driven and Electrically Driven Boiler Scaling Tools.

Full particulars on application.

FRANK GILMAN, 104 Wilders Drive, Warwick Road, Birmingham.

And remember there is a type of

'SKATOSKALO'

For every Scaling Purpose.



F. 1457

Patent Oil Separator showing ·03 grain of oil per gallon of condensate, which is equivalent to one part of oil in 2,330,000 parts of condensate. Such results as this can be obtained without any expenditure on the separator in upkeep and attention.

For the larger installations the makers claim that a very considerable saving in oil can be shown, as from 50 per cent. to 75 per cent. of the lubricating oil can be recovered and rendered suitable for use again after passing through the special oil filter which they make for the purpose.

BOILER CLEANERS.

The Hulburd Mechanical Boiler Cleaner.

Excellent results have been obtained with the Hulburd mechanical boiler cleaners, apparatus which, although suitable for all classes of boilers, are especially recommended for locomotives, in which reduced efficiency of the heating surfaces, due to formation of scale and obstruction of the water spaces by accumulations of deposit, are above all things to be prevented if possible.

As almost invariably fitted, the cleaners, fig. 28, consist essentially of two portions; one in the boiler barrel, placed in such a position near the forward end as to collect all scum-forming matter in a kind of skimmer-trough, or basin, to which it is brought by the natural circulation of the water and from which it is discharged, while running, by a suitable cock worked from the cab; the other in the water spaces surrounding the firebox, immediately above the foundation ring, to evacuate by means of blow-off cocks the sediment which otherwise inevitably accumulates there. Both front and back portions are in the form of draw-off heads having openings or suckers on their undersides spaced so as effectively to scour the whole of the surfaces with which they have

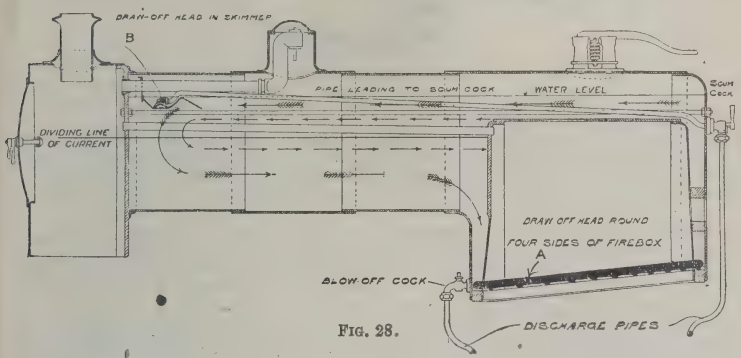


Fig. 28.

to deal, and their efficacy is such that an engine fitted with the apparatus, working on water which may previously have necessitated opening up the boiler and washing out every four or five *days*, can with the Hulburd cleaners be run 5, 6, or even 8 *weeks* without being laid off a single day for cleaning in the ordinary sense.

Among the advantages obtained by the use of the cleaners are:—

1. The immediate stopping of priming by the use of the scum cock in connection with the forward fitting.

2. The preservation of the boiler tubes, firebox sheets, stays, etc., in a clean condition through the removal of all scale-forming matter as soon as it is deposited. The cleaners' action may be advantageously assisted in some cases by the use of a suitable boiler composition, which together with other resultant solid matter is evacuated as soon as it becomes inert.

3. Immunity from leaky tubes, stays, and strained tube plates, owing to the less frequent necessity for cooling down and washing out boilers.

4. Saving in washers' wages, cost of repairs, and depreciation of boiler fabric.

5. More efficient steaming, owing to the entire boiler being kept clean and a consequent saving of fuel.

THE WILLCOX-RAMONEUR BOILER-TUBE SOOT REMOVER.

This apparatus, fig. 29 (*W. H. Willcox & Co. Ltd.*), consists of a 10-foot length of specially-constructed flexible Trellis Metal tubing tested to 375 lbs. per sq. in., attached to the following parts:—*For Smoke Tubes*: a specially-designed, cone-shaped head, made in either of three

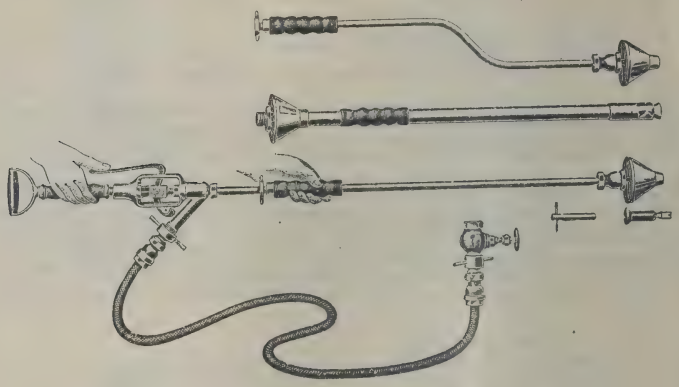


FIG. 29.

sizes, viz.:—*large*—to suit tubes above 2⅜-in. bore; *small*—to suit tubes up to 2⅜-in. bore; *extra small*—for loco. tubes; this cone head is provided with an internal interchangeable nozzle, spiral partitions or webs, and a disc throttle for regulating the admission of air. Steam lance of finest quality steel tube. A sliding hand-hold, also protector on handling end of tubing. Lever regulating valve. Steam valve for fixing to steam pipe on boiler.

A special type is made for locomotives fitted with superheaters. This superheater type is arranged for cleaning both the fire tubes and the superheater tubes from the fire-box end, and is supplied with various cranked lances to reach the nest of tubes. For water tubes a slightly different pattern (for blowing around the outside of the tubes) is supplied.

The action of the apparatus is as follows:—On the steam valve being opened the steam passes through the flexible tube into the nozzle. This nozzle is made in various styles to suit the type of boiler and the existing steam pressure. Passing from the end of this nozzle, the steam meets with ten times its own volume of hot air drawn in from the surrounding flues of the boiler, and is thoroughly mixed with same. The combined hot air and steam strike against spiral-shaped partition webs inside the cone head, and, by the united action of the nozzle and the partitions, emerge at an increased velocity through the mouth of the cone into the boiler tubes in spiral form. The steam at this point has become completely dried by the admixture of hot air, and, further, it is now joined by an additional current of warm air from the exterior of the cone; the whole ærated mass then assumes what is best described as a 'whirlwind' movement, which sweeps with great force through the boiler tube, and drives all deposits out at the opposite end, in a similar manner to that of a projectile from a gun. As the steam is thoroughly dried in the process, there is no coagulation, and formation of sooty incrustations is avoided.

In the water-tube pattern the apparatus is fitted with a tubular end-piece, joined at its base to the form of cone head shown. The opening at the tubular end is provided with a spreader which creates a fan-shaped spray, which is directed upon the outside of the water-tubes. With this arrangement it is possible to sweep away thoroughly, and with equal velocity, the soot and ash dust which collect on the surfaces of these tubes.

For works using both types of boilers the '*Combined Ramoneur*' is supplied. This is arranged with interchangeable heads, so that either the smoke or water-tube pattern may be utilised as required. The head suitable for the particular type of boiler requiring to be cleaned can be readily screwed on, and the apparatus is thus rendered immediately applicable for use.

Steam Turbines and Turbo-Compressors.

A Treatise on their Design and Construction.

By FRANK FOSTER, M.Sc.

Contents.

Descriptions of Turbines—Steam Nozzles—Disc Friction—Blades—Rotors—Governing—Bearings—Gyroscopic Action—Deflection of Discs—Critical Velocity—Balancing—Condensers—Steam Turbine Performance—Marine Turbines—Turbo-Compressors—Gas Turbines—Diagrams and Calculations—Construction—Miscellaneous—History, with an Appendix of Useful Tables.

Press Opinions.

'The book fills a want which all those who are interested in the subject of steam turbines should be grateful to see supplied. It contains some valuable original contributions to the literature of the subject.'—*Engineering News.*

'This work is a step in the right direction. The mechanics and construction of the steam turbine are considered at considerable length and quite practically. We can recommend the book as an attempt to place the steam turbine properly before mechanical engineers. Considering the amount of original work in it, the book is cheap.'—*American Machinist.*

'The descriptive and historical sections of the book are comparatively brief, and on the whole well executed and illustrated; the sections dealing with "the design of details" are relatively full, practical in form, and suited to the requirements of men engaged in the work of designing steam turbines. The scheme of the book is good.'—*Times Engineering Supplement.*

'The book is not merely a popular description of existing machines, but takes the subject up in a common-sense sort of way, giving a great many practical details which affect the efficiency. The work appears to be well worthy of careful consideration.'—*International Marine Engineering.*

'In every particular the book has been made to appeal to the practical engineer. Most of the subject matter is original.'—*Iron Age.*

Price **11/-**, post free.

The Scientific Publishing Co.

(*W. H. Fowler, Proprietor*),

53 NEW BAILEY STREET,

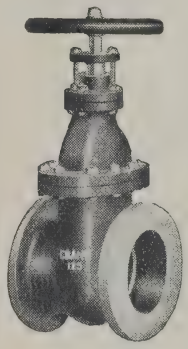
MANCHESTER, ENGLAND.

1855


CRANE

World Wide

1922



No. 920
Cast Iron Sluice Valve.

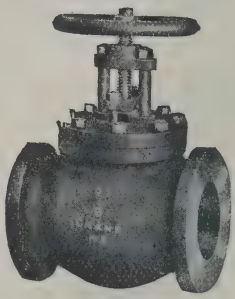

No. 907
Cast Iron Stop Valve.



No. 7
Gun Metal Steam Valve.

Hydraulic Valves & Fittings. Ammonia Valves & Fittings.

Steam Specialities:

CHECK VALVES, SAFETY & RELIEF VALVES, STEAM TRAPS, STEAM & OIL SEPARATORS.

PIPE FITTINGS
Steam, Water, Gas.

PIPE HANGERS

PIPE FITTERS' TOOLS.

PLUMBERS' BRASSWORK
(C. B. L. and J. C. S. W. R.).



Made in Cast Iron, Cast Steel, Forged Steel, Ferrosteel, and Gun Metal, in All Sizes, for All Pressures, and All Services.



Nos. 90 91 92 93, Direct Return
CRANE TILT STEAM TRAPS.

Everything for any Pipe Line.

CRANE-BENNETT Ltd.

HEAD OFFICE:
45-51 Leman St., London, E.1.

BRANCHES:
MANCHESTER . . . . 32 Oxford Road
BIRMINGHAM . Lloyds Bank Chambers, New St.
LEEDS . Oxford Chambers, Victoria Square
GLASGOW . . . . . 355a Argyle Street
CARDIFF . The Motor House, 1 Wood Street
WORKS: Nacton Works, Ipswich.

Sanitary Fittings Specialists.

F. 1459

Simplex Patent Boiler Tube Brushes and Scrapers.

(W. Crockatt & Sons., Ltd., Glasgow.)

The 'Simplex Boiler Tube Brushes' are made with short hardened steel wires which, being comparatively unyielding, are capable of removing deposits which softer brushes will not readily attack. The necessary spring of the brushes is obtained through the action of the arms, which are made of spring steel of sufficient strength to put a reasonable pressure on the tubes being cleaned. The filling of the brush plates is done in a special machine, and in such a way that it is impossible for the bristles to come out, unless they are worn quite away.

Two designs of brush are made, the 'Self-Adjusting Brush,' which depends for its action entirely on the spring of the arms, and the 'Adjustable Brush,' which also has a certain amount of spring in the arms, but which has also a central spindle with a wing nut at each end, by which the diameter of the brush can be increased within a limited range.

The 'Simplex Patent Tube Scraper' is made of drop forgings and will remove harder deposits than will the brushes. It is arranged to scrape only on withdrawal from the tubes, so that the soot, etc., is brought to the front of the boiler, and not shoved into the back ends. This tool also is adjustable by means of a nut which is easily operated as required.

The 'Simplex Condenser Brushes and Scrapers' are for use in marine work as well as on shore.

VALVES.

The large valves on the steam mains should each be provided with a small by-pass valve to enable a length of cold steam pipe to be warmed up, and the pressure balanced before the main valve is opened. This will prevent the straining of the joints caused by sudden expansion, and likewise accidents due to water hammer.

The outlet valve from the boiler should be at the highest point possible, so that there may be a fall from the valve towards the engine. There should not be a vertical pipe rising from the valve since this affords a pocket for water which will be dangerous should the drainage fail.

It has been suggested by W. H. Booth that since the loss of pressure in steam pipes is due to friction, there would be no very serious loss caused by a short length of less diameter placed in the course of a long pipe, and he suggests that the valves might be much smaller than the pipes, being connected to them by conical ajutages. These cones should not be isosceles but scalene, so that the floor of the valve should be in one level with the lower side of the pipe, thus allowing free flow of water. These small valves would greatly reduce the cost of the valve installation, especially where valves are numerous, as in the needlessly complicated pipe systems so much in vogue.

Stop-Valves.

The Hopkinson-Ferranti Patent Stop Valve.

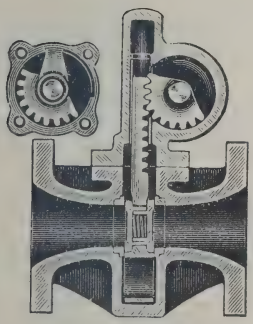


Fig. 30.

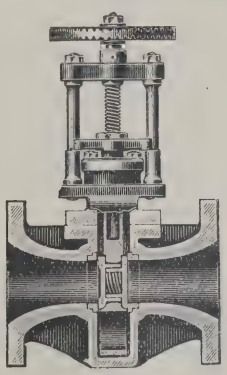


Fig. 31.

This valve, figs. 30 and 31, is designed to pass an amount of steam equal to the full carrying capacity of the pipe. The working parts of the valve are similar to those of the Patent Parallel Slide Valve, and are placed in the throat of a converging-diverging nozzle. The construction allows a large reduction in size, weight, and first cost, as compared with ordinary fullway valves.

The design is such that a part of the pressure energy of the steam is converted into kinetic energy in the converging nozzle, the steam increasing in velocity and dropping in temperature and pressure. With the high velocity thus acquired the steam passes through the valve proper and enters a diverging nozzle in which the kinetic energy is reconverted with an increase of pressure and temperature. The steam thus leaves the valve at the pressure, temperature and velocity with which it entered the converging cone on the inlet side, the loss of pressure under normal conditions being negligible.

The Hopkinson-Ferranti Valve for steam is made in all the standard sizes from 4 inches to 24 inches diameter, with cast-iron or cast-steel body and cover in accordance with the pressure and temperature and with 'Platnam' disc and seats in all cases. Steam can be passed in either direction as required the old pattern with unequal nozzles having been superseded.

The principle is also applied to valves for water and air, and a number of special patterns are manufactured.

United Brassfounders Gun-Metal and Cast-Iron Stop Valves.

A large variety of stop valves are made by *United Brassfounders and Engineers Ltd., Manchester.* The valves, which are all specialised products, are made in large quantities by means of special automatic and semi-automatic machinery, the principal types being as follows: Ordinary gun-metal wheel valves (fig. 32) and renewable disc valves of the well-known 'Fearnought' type (fig. 33). A regrinding type has a special union attachment of the stuffing box to the body, enabling the valve to be taken apart and the parts reassembled with great ease. The special feature of the latter type is that the valves can be reground without the necessity of removing them from the pipe line. Light, medium, and heavy ranges are made to suit various working pressures up to 300 lbs. per sq. in., and they are supplied with screwed or flanged ends and of the straight through or angle patterns as may be required.

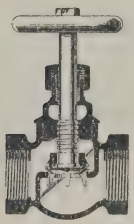


Fig. 32.

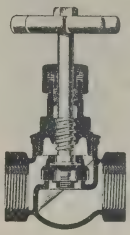


Fig. 33.

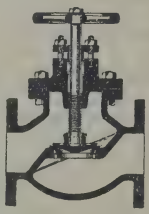


Fig. 34.

Another leading speciality is cast-iron globe stop valves of improved design (fig. 34). In these valves the spindle is of nickel steel and the inner valves of the rotating type, so that every time it is opened it can rotate and find a new position, thus keeping the working faces quite even. The valves are of sturdy proportion and give a very large area through the passages.

Valves are also supplied arranged to act for check and feed. In the cast-iron parallel slide stop valves, which are suitable for 300 lbs. pressure, the seating rings are carried in a manner which prevents the possibility of damage, and dispenses with the use of small diameter springs, the only spring used being of large diameter and made of phosphor bronze wire.



Fig. 35.

Cast-Iron Fullway Sluice Valves.

These valves, fig. 35 (*United Brassfounders and Engineers Ltd.*), are made in three strengths to suit all pressures up to 225 lbs. per sq. in., and embody recent improvements, which give strength and reliability under working conditions. The valve faces on either side of the wedge valve are locked securely by means of an improved dovetailing device, which effectually prevents loosening of the facing rings and consequent leakage, so usual in the case of valves with faces secured by setscrews. All valves have working parts carefully machined to gauge, thus ensuring sound mechanical construction and working. The wedge taper is so designed that the wedge does not touch the faces in the body until the valve is almost closed, which results in easy operation of the spindle and immunity from sticking or jamming of the wedge.

'Sentinel' Valves

OUR NEW WORKS AT

SENTINEL VALVE WORKS, WORCESTER

Are now fully equipped and started for the economical production and quick delivery of Valves of any size and description suitable for all classes of work.

ENQUIRIES SOLICITED.

PLEASE NOTE OUR NEW ADDRESS

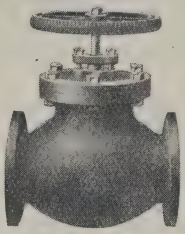
ALLEY & MacLELLAN, LTD., SENTINEL VALVE WORKS, WORCESTER.

Telegraphic Address "Alley, Worcester."
Telephone: Worcester 15


F. 1460

"Sentinel" Valves.

L.P. Stop Valve No. 200.
125 lbs. Working Pressure.



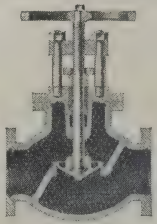H.P. Stop Valve.
No. 206 Cast Iron. 200 lbs. Working Pressure.
No. 208 Cast Steel. 300 lbs. Working Pressure.




L.P. Stop Valve No. 201.
125 lbs. Working Pressure.




L.P Stop Valve No. 202.
125 lbs. Working Pressure



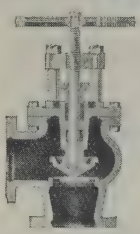
H.P. Stop Valve.
No. 207 Cast Iron. 200 lbs. Working Pressure.
No. 209 Cast Steel. 300 lbs. Working Pressure.



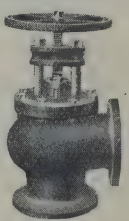
L.P. Stop Valve No. 203.
125 lbs. Working Pressure



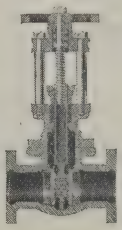H.P. Parallel Slide Valve
No. 260 Cast Iron. 200 lbs. Working Pressure.
No. 261 Cast Steel 300 lbs. Working Pressure



L.P. Sluice Valve No. 270.
125 lbs. Working Pressure.



L.P. Sluice Valve No. 275.
125 lbs. Working Pressure.



258 Catalogue, giving dimensions, weights, prices, and other particulars of many types of "Sentinel" Valves, free on application.

Alley & MacLellan, Ltd.
Sentinel Valve Works. WORCESTER.

The No. 7 Crane Valve.

(With Union Bonnets and Renewable Discs.)

(*Crane-Bennett, Ltd., London.*)

These valves, fig. 36, are designed to be used in plants where continuous service is required and where discs must be changed quickly without injury to the valve. As wheels, stuffing-box nuts, and union bonnet rings receive rough treatment, these parts are made of malleable iron, which is stronger, tougher, and stiffer than brass.

The disc holder slips on to the stem, and is accurately guided in the body, whether the valve is open or closed. The disc may be easily removed from this holder.

Besides the quick change features, and the malleable iron parts, these valves have glands in the stuffing boxes, the stems have bevelled shoulders, which make tight seats against the bonnets, allowing the valves to be repacked while under pressure, and the bodies are heavier than many standard valves.

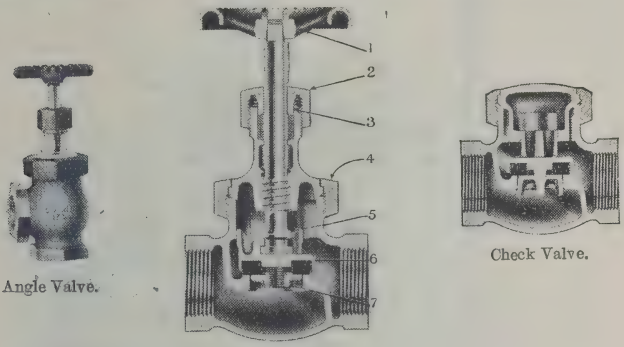


Fig. 36.

Seven Features of the Crane No. 7 Valve:—

1. Malleable iron, non-heating wheel, enamelled red.
2. Malleable iron nut, enamelled red.
3. Brass gland.
4. Malleable iron nut, enamelled red.
5. May be packed under pressure, when valve is wide open.
6. Removable disc holder for quick change.
7. Removable nut for changing discs.

A special feature is the adaptability of the valves to many services, such as compressed air hot and cold water, oil, etc., by the use of different discs.

For ordinary steam service, a composition disc is used, and this is the disc furnished on all orders, unless a different one is specified: a special high-pressure composition can be supplied if required.

For extreme conditions, such as steam throttling, a metallic disc is supplied.

The valves are recommended for working pressures up to 150 lbs. on steam, air, and hot water. They may be used on cold-water lines, not subject to shock, up to 200 lbs. water pressure.

The valves are made with screwed ends in sizes ¼ in. to 2 ins., and with flanged ends, ¾ in. to 2 ins., also horizontal or angle check valves.

Seven other special features are:—Wheel easily removed; heavy brass stem; long and strong stem threads; disc accurately guided; large, heavy hexagons; more than full area everywhere; strong, heavy body—pleasing proportions.

Cockburns' Positively Controlled Regulating and Emergency Throttle Valve.

This valve, fig. 37, p. 1462 (*Cockburns Ltd.*), is a balanced double beat valve fitted with a flexible disc, making it absolutely steam-tight. It is positively opened and closed by a hand wheel. When the valve is to be used as a throttle the locking gear for the positive opening and closing is detached, allowing the valve to be steam operated through the medium of the control valve.

COCKBURNS' POSITIVELY CONTROLLED REGULATING AND EMERGENCY THROTTLE VALVE.

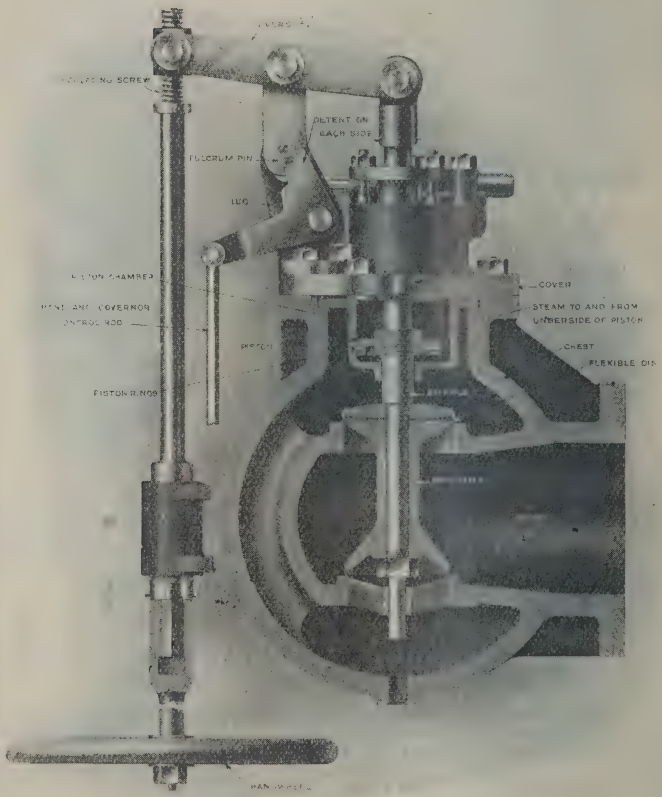


FIG. 37.

Action of Valve.

For ordinary positive opening and closing as a regulating valve the fulcrum pin is locked by the detents as shown. The detents thus allow the valve to be positively opened, as the valve is balanced ; this requires a minimum of power. On closing the valve and hardening down, the fulcrum pin bears against top of lug. During these operations the control valve is in neutral position, preventing steam passing to condenser. The operating piston has also inlet pressure steam on both sides of it, thus effecting a balance.

When the valve is opened to any degree of regulation it can be shut and opened again by the emergency gear in the following manner :—

The throttle lever is moved from open position to shut. The control valve during this operation moves through an intermediate position which allows the control valve to hold the main valve open till detents have cleared themselves from fulcrum pin—then with throttle lever in shut position the main valve closes—the levers (A) swinging from pin on nut of regulating screw. On the throttle lever returning to intermediate position the main valve opens up, and when this occurs the throttle lever, due to the weight of pull rod, drops back again into open position, again locking the fulcrum pin and shutting off all communication from control valve to condenser, thus placing main valve in a position for positive control.

The valve can, if required, be taken adrift in a few minutes.

THE JENKINS' BLOWER VALVES.

These valves, fig. 38 (*Jenkins Bros. Ltd.*), are for use in railroad roundhouses, where they have to be connected to down pipes, which, when not in use, become filled up with water.

The valve is practically a non-return valve, with one size smaller bonnet screwed into a neck which is formed on the bottom of the body. The bonnet carries a spindle with a small collar on the end, which, when the valve is opened, strikes the underside of the check clapper and lifts it from the seat. There is a second collar on the spindle, which strikes the inside or bottom of the bonnet when the valve is closed. The spindle has a left-hand thread, and an

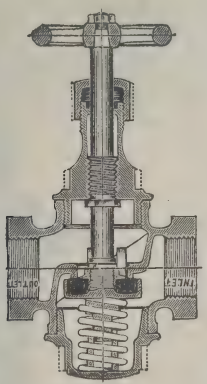


FIG. 38.

extension attached to the wheel end. This extension spindle is carried down to easy reaching distance from the floor. As the valve is *pushed* open by the spindle, instead of pulled, the wheel turns in the same direction as an ordinary wheel valve, and can go only the distance between collars in either direction, consequently it is 'fool-proof.' When the spindle is turned until the collar brings up on the bonnet, the valve closes itself positively, as a non-return valve would, and remains so until it is desired to open it again. The result is, that if it is tight, as it ought to be, there is no dripping, as only steam is on top of the disc-holder, any condensation running back into the main pipe.

The valve is fitted with a renewable composition disc, and all working parts are interchangeable.

Valve Refacers.

The Brooke Valve Refacer.

(Patent.)

The trouble caused by leaky valves, owing to wear or bad cutting of the surfaces, is often a source of great annoyance, and the possibility of refacing the same without removal of the valve is a very important point. This refacing can effectively be carried out by Brooke's valve seat refacer. This machine, fig. 39, is very simple in all its parts, and is capable of standing a fair amount of rough usage without getting out of order, and should last the life-time of any steamer, with ordinary care.

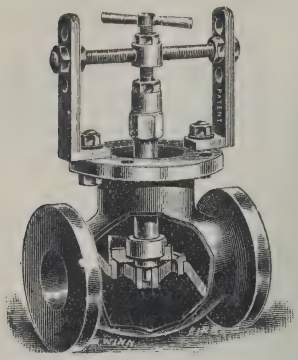


Fig. 39.

In the arrangement, the legs are reversible on the crosshead, the feet being turned inwards for small flanges, and outwards for large, also, whether fastened one way or the other, there is no part that prevents the operator from seeing the cutter. When once the machine is set in position, it need not be disturbed to change the cutter, as the mandril (which may be of any desired length) can be unscrewed from the box nut and taken out, while any extra cutters are easily made by the engineers, if required.

Disc steadies are provided for plain bore seats, and leg steadies for star-ribbed seats, which not only centre the end of the mandril at once, but obviate any tendency to vibrate—so that the machine will reface a valve-seating true, and leave it without jars or riffles.

The machine is operated with an ordinary spanner, and is made complete with five cutters and necessary guides for dealing with all sizes of valves from 1¼ in. to 4½ ins. Larger sizes are made for valves up to 10 ins. diameter. *(Charles Winn & Co. Ltd.)*

The Simplex Patent Valve Reseating and Facing Machine.

(W. Crockatt & Sons, Ltd., Glasgow).

(1)

This tool, fig. 40, has been designed to avoid the necessity of using the studs in the valve chest as a means of steadying. At the same time it is simpler and stronger than the machines which are secured and centred by means of a chuck operated by a scroll.

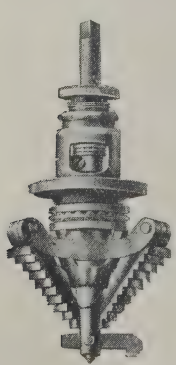


Fig. 40.

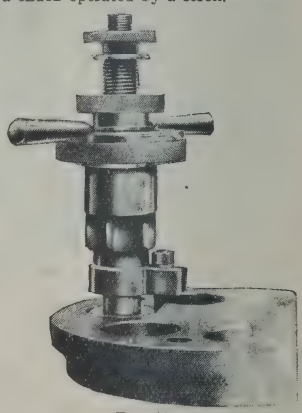


Fig. 41.

The tool is fixed in the valve chest (which may be either plain or screwed) by means of three stepped arms, pivoted at their upper ends. These arms are expanded by a cone which is depressed downwards by means of the hand nut. The action of expanding these arms both centres the tool in the valve and fixes it securely in position. This is ensured by the manufacture of the tool, the arms being turned up truly central with the spindle, after assembling. The cutters

CROCKATT
SIMPLEX

PATENT

VALVE RESEATER

FOR FACING IN SPACE, SEATS OF ALL VALVES, —CHECK VALVES, ETC.—





FOUR-ARM SCRAPER
Drop Forged Arms.
Hardened Cutting Edges.



SELF - ADJUSTING BRUSH
Hardened Steel Bristles.



ADJUSTABLE BRUSH
Spring Steel Arms, Short Bristles.

USED BY—Admiralty, War Office, Ministry of Munitions, Crown Agents, New South Wales Government, over 80 Steamship Cos., leading Railway Cos., Power Stations, etc.

ATTACHMENT SUPPLIED FOR FACING VALVE DISCS.

SIMPLEST MACHINE ON MARKET

ALL SIZES FROM $\frac{3}{8}$" TO 24"

CONDENSER TUBE BRUSHES
WATER - TUBE CLEANERS

for Babcock Boilers, Economisers, etc., driven by Electric Motor, Air or Water Turbine, or by hand.

Complete List on Request.

MACHINE CUT GEARING OF ALL KINDS

W. CROCKATT & SONS, Ltd.

64 Darnley Street, Glasgow.
Tel. Add.: 'CROCKATT.'

12 Bath Street, Liverpool.
Tel. Add.: 'HOLDFAST.'

COAL SAVING

By Scientific Methods in the Boiler-house

OUR UNIQUE SERVICE.

We are a firm of Technical Chemists and Engineers, who have been engaged continuously for the past 10 years in Coal Saving by modern methods of steam generation. Our Engineering department attends to the designing and carrying out of schemes of reorganisation for boiler-plants of every description, including the services of our trained engineers to "tune up" the plant when completed. Our Chemical department undertakes, in our own laboratories, all the chemical analyses necessary, particularly boiler-feed water and fuel (including coal, refuse coal, coke, coke-breeze, oil, blast furnace gas, waste heat, and refuse of every description). Our Building department prepares all Architects' drawings and negotiates the building contract.

The whole forms a unique service for Coal Economy, and as a result we can give you a boiler plant running on the highest degree of efficiency. We are not interested in the sale of any particular plant, machinery or appliances, and no other firm can give you such a service or has had anything like our experience of this business. We also make a speciality of the design and erection of new Boiler and Power plants. Finally, we can produce the highest references from firms for whom we have saved 15-35% of their coal bill.

It is difficult for us to explain our proposition in detail in a short advertisement, and we shall be pleased to send you our literature and full particulars on application. We are also prepared to visit your Works **free of charge,** and give you our opinion of the working of your boiler-plant, or to inspect the site of a proposed new plant.

BROWNLIE & GREEN LTD.

TECHNICAL CHEMISTS AND ENGINEERS.

Specialists in Fuel Economy.

2 AUSTIN FRIARS, LONDON, E.C. 2.

Tel.: 6292 London Wall. GLASGOW—94 HOPE STREET.

Laboratories & Testing Station—Church St., Cheetham, Manchester.

used are made of flat steel, and one end is arranged for flat and the other for bevelled seats. The simplicity of this type of cutter is found to counterbalance any slight advantage the milled type of cutter may have. Also a very much smaller number of cutters can be employed to deal with a large range of valves, as each cutter is adjustable. In order to prevent chattering of the tool, the feed is against the action of a strong spring, which keeps an upward pressure on the tool, so that feeding only takes place when the cutter is forced down by the action of the nut. This prevents the cutter following any irregularities in the face of the seat.

A simple attachment is provided when desired for trueing up the valves themselves. The valves are centred in this part of the tool and faced up by a movable tool, which can deal with either flat or bevelled valves. The arms and lower part of the body of the tool are made of cast steel, so that the machine will stand hard wear. Ball-bearings are fitted throughout, to ensure smooth working and to avoid jarring.

The machine is made in three standard sizes to deal with valves from ¾ in. to 8 ins. diameter, but has been supplied and can be easily adapted to do valves up to 12 ins. or more.

(2)

In order to meet the demand for a tool which will face up the seats of the group valves in Weir's and similar feed pumps, the Simplex No. 3 machine has been introduced. This tool, fig. 41, is secured in position by the expansion of three segments, which are turned concentric with the central spindle, and which are expanded hard against the inside of the bore of the valve seat by the action of the tapered end of the spindle. It can easily be adapted to flat or bevelled seats by simply changing the cutter used.

If it is desired to face up the valves in the bottom seat of the pump without drawing the complete seat, a special tool with an extended body can be supplied.

Besides being suitable for the type of valve mentioned, the tool is equally adaptable to dead-weight safety valves, or indeed, to any design of valve in which the inside of the bore is a plain cylindrical surface. Ball bearings are fitted to ensure smooth and easy working.

WILLCOX'S 'ELLIPTIC' FULLWAY COCKS. (*Allen's Patent.*)

This cock (*W. H. Willcox & Co. Ltd.*) has an absolutely full bore throughout. By its special construction the bore gradually changes from circular at the flanges to an ellipse in the centre

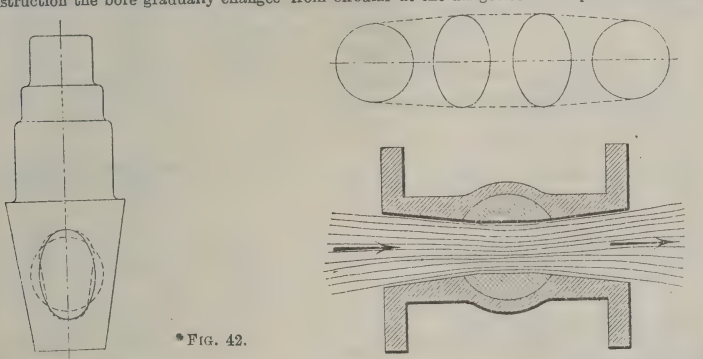


FIG. 42.

or plug, as indicated by fig. 42, and, in doing so, maintains full equal area of the circle right through. The interior is entirely smooth from end to end, there being no projections whatever. The cocks are made from ½ in. up to 6 ins. bore, and are suitable for water as well as for steam.

BOILER EFFICIENCY.

Typical figures are :—

	Per cent.		Per cent.
Small cylindrical boiler, no economiser	45–55	Large water-tube boiler with economiser	70
Large cylindrical boiler with economiser	60–70	Do. highest class	70–75
Do. well fired and maintained	75	Locomotive boiler, moderately fired	65–70
Small water-tube boiler with economiser	50–60	Marine boiler, well fired	60–70

The actual evaporation in lbs. of steam per lb. of coal is a common, but somewhat unscientific, standard of efficiency. It obviously varies with the heat value of the coal, the steam pressure, and the superheat. When stated as the equivalent evaporation 'from and at' 212° F. it is a better basis, but is still dependent upon the quality of the coal. Thus, best Welsh coal will evaporate 25 per cent. more than an inferior slack with the same boiler efficiency. To convert actual evaporations into 'from and at 212' multiply by the B.Th.U. given to each lb. of

Where made		Leicester Woollen Mills.	
System of Firing		Hand.	Bennis Sprinkler Stoker and Compressed Air Furnace.
Duration of test	hours	6½	4¾
(A) PARTICULARS OF THE BOILERS USED.			
Number of boilers		1	1
Type of boiler		Lancashire	Lancashire
Size of boiler		8′ × 30′	8′ × 30′
Heating surface of each boiler	sq. feet	998	998
Grate surface of each boiler	sq. feet	38	41
Nature of draught (natural, forced, or induced)		Natural	Natural
Type of mechanical firing apparatus, if any		None	Bennis Sprinkler
Heating surface of economiser, if any	sq. feet	not estimated	not estimated
Smoke produced during test		None	None
(B) CONDITIONS OF EVAPORATION (AVERAGES).			
Temperature of feed water—entering economiser	° F.	67·0	69·0
entering boiler	° F.	180·0	192·0
Steam pressure by gauge	lbs. per sq. in.	86·4	101·1
Corresponding saturation temperature	° F.	328·6	338·6
Heat supplied to each lb. of water—in economiser	B. Th. U.	118·0	123·0
in boiler	B. Th. U.	1038·2	1028·6
in superheater	B. Th. U.	—	—
total	B. Th. U.	1151·2	1151·6
Factor of equivalent evaporation, as from and at 212° F. including economiser		1·1872	1·1876
Factor of equivalent evaporation, as from and at 212° F., not including economiser		—	—
(C) NATURE OF COAL USED.			
Class of coal		Leicestershire Slack	Slack & Coke Breeze Mixed
Calorific value of coal per lb. as fired	B. Th. U.	10870	9336
Price of coal per ton, delivered		18/6	11/-
(D) QUANTITY OF COAL USED.			
Total weight of coal burnt	lbs.	9520	6496
Coal burnt per boiler per hour	lbs.	1503	1367
Coal burnt per sq. ft. grate surface per hour	lbs.	39·6	33·3
Total weight of ash and clinker	lbs.	—	—
Percentage of ash and clinker to weight of coal	per cent.	—	—
(E) QUANTITY OF WATER EVAPORATED, ACTUAL.			
Total quantity of water evaporated	lbs.	46200	39500
Water evaporated per boiler per hour	lbs.	7295	8316
Water evaporated per sq. ft. boiler heating surface per hour	lbs.	7·3	8·33
Water evaporated per lb. of coal	lbs.	4·85	6·08
Total heat supplied to water per lb. of coal	B. Th. U.	5586·7	7002·5
(F) EQUIVALENT QUANTITY OF WATER EVAPORATED, AS FROM AND AT 212° F.			
Total equivalent evaporation	lbs.	54847	46910
Equivalent evaporation per boiler per hour	lbs.	8660	9876
Equivalent evaporation per sq. ft. boiler heating surface per hour	lbs.	8·68	9·9
Equivalent evaporation per lb. of coal	lbs.	5·76	7·22
(G) EFFICIENCY AND ECONOMIC RESULT.			
Total thermal efficiency obtained	per cent.	51·39	75·01
Cost of fuel to evaporate 10,000 lbs. of water, as from and at 212° F.	pence	172	81·64
(H) COMPARISON OF RESULTS AS FROM AND AT 212° F.			
Extra water evaporated per boiler per hour	per cent.	—	14·0
Extra water evaporated per lb. of coal	per cent.	—	25·3
Reduction in fuel cost per 10,000 lbs. evaporated	per cent.		52·5

BOILER TESTS.

Midland Chemical Works.	A Scottish Power Station.	A South Yorkshire Colliery.		A Lancashire Cotton Mill.		A London Electricity Works.
Bennis Coking Stoker and Compressed Air Furnace.	Bennis Chain Grate.	Hand.	Bennis Sprinkler Stoker and Compressed Air Furnace.	Hand.	Bennis Sprinkler Stoker and Compressed Air Furnace.	Bennis Chain Grate
7	6	15½	14¾	10¾	10¼	7
2	1	2	2	3	2	1
Lancashire	Water tube	Lancashire	Lancashire	Lancashire	Lancashire	Water tube
8′6″ × 30′	—	9′ × 30′	9′ × 30′	8′ × 30′	8′ × 30′	—
1084	—	1184	1184	998	998	3191
37·7	91	39	39	38	38	55·5
Natural Bennis Coker	Natural Bennis Chain Grate	Natural None	Natural Bennis Sprinkler	Natural None	Natural Bennis Sprinkler	Natural Bennis Chain Grate
3200	None	None	None	4200	4200	None
None	None	No observations	No observations	Black when firing	None	None
79·0	—	—	—	111·0	110·0	—
300·6	199·0	184·8	170·3	251·0	245·0	155·0
145·2	191·0	80·0	82·6	177·5	182·2	151·0
363·6	384·3	323·9	326·0	378·6	380·6	366·3
221·6	—	—	—	140·0	135·0	—
925·5	1031·2	1032·2	1047·2	978·1	984·5	1071·7
84·9	105·1	—	—	75·2	82·7	62·7
1232·0	1136·3	1032·2	1047·2	1193·3	1202·2	1134·4
1·2705 including Superheater	including Superheater 1·1718	— 1·0644	— 1·0799	1·2306 including —	1·2397 Superheater —	including Superheater 1·1698
Aldridge Slack	Scotch Nuts	Haigh Moor Slack	Haigh Moor Slack	Shakerley Rough Slack	Shakerley Common Slack	Ibstock Nuts
10835	12472	10907	10850	11792	11558	11148
—	—	—	—	11/-	10/8	—
13580	12760	50064	62720	33180	28448	10000
970	2126·7	1589·3	2188	920	1206	1428·6
25·7	23·37	40·7	54·8	24·2	31·7	25·74
3080	—	—	15680	—	—	775
22·7	—	24·3	25·0	—	—	7·75
94000	110800	27330	402100	197250	201750	75880
6714	18466·7	8676	13708	5466	855	10768·6
6·	—	7·3	11·6	5·47	8·5	3·37
6·9	8·68	5·46	6·4	5·94	7·09	7·54
8527·8	9866·9	5634·8	6713·5	7094	8525·9	8551·1
119427	129886	290915	434227	242730	250122	8818
8530·5	21639	9235	14803	6726	10610	12598
7·87	—	7·8	12·5	6·73	10·63	3·94
8·79	10·175	5·81	6·92	7·32	8·79	8·82
78·7	79·11	51·66	61·88	60·15	78·8	76·70
—	—	—	—	80·55	64·99	—
—	—	—	60·9	—	57·7	—
—	—	—	19·1		20·0	—
—	—	—	16·0	—	19·3	—

Ed. Bennis & Co. Ltd., Little Hulton, Bolton.

water in heating, evaporating and superheating it, and divide by 966. Thus starting with water at 102° and superheating to 150° at 160 lbs. absolute, the B.Th.U. is 1,205, so that the equivalent evaporation factor is 1·25.

Efficiency of Steam-Boiler Plant.

(*Contributed by* ***David Brownlie, B.Sc. Hons. (Lond.), F.C.S., A.M.I. Mech.E.***)
(Brownlie & Green, Ltd., 10 Church Street, Cheetham, Manchester.)

(1)

The following are the true average figures for the performance of 250 steam-boiler plants in 27 different industries, comprising 1,000 boilers with an annual coal bill of 2,166,000 tons. Each test, comprising a day test and a check test of one week, was carried out with the greatest care on the plant as actually working from week to week all the year round. Nearly 2,000 boiler plants were inspected and it was found that all were being worked on the same general lines—that is to say, these average figures apply to the burning of 75–100,000,000 tons of coal burnt per annum in Great Britain for steam generation :—

AVERAGE WORKING FIGURES OF 250 TYPICAL BOILER PLANTS.

TESTS.

Average of 250 *Typical Boiler Plants.*

(A) *Working Day's Test.*

Type of boiler	'Lancashire'	Water evaporated per sq. ft. of grate area per hour	137·4 lbs.
Number of boilers	4	Water evaporated per lb. of fuel	6·56 lbs.
Grate area	152·6 sq. ft.	Equivalent evaporation from and at 212° F., per lb. of fuel	7·46 lbs.
Duration of test	9·43 hours	Equivalent evaporation from and at 212° F., per 1,000,000 British thermal units	631·0 lbs.
Amount of fuel used	30,131·72 lbs.	Temperature of feed-water before economisers	116° F.
Analysis of fuel used :		Temperature of feed-water after economisers	193° F.
British thermal units	11,822	Percentage of fuel bill saved by economisers	7·1 per cent.
Ash	11·5 per cent.		
Fuel burnt per boiler per hour	798·8 lbs.		
Fuel burnt per sq. ft. of grate area per hour	20·9 lbs.		
Water evaporated	197,776·0 lbs.		
Water evaporated per boiler per hour	5,243 lbs.		

(B) *Long Check Test* (one week of 7 days).

Duration	167·5 hours	Water evaporated per lb. of fuel	6·42 lbs.
Amount of fuel used	128·25 tons		
Water evaporated	184,435·0 galls.		

DETAILS.

Draught in side flue	0·40 in. W.G.	Temperature of superheated steam	346·5° F.
Draught in main flue at exit of economisers or chimney base	0·80 in. W.G.	Steam or power used as auxiliary to the production of steam	2·4 per cent.
Temperature of flue gases before economisers	598° F.	Thermal efficiency :	
Temperature of flue gases after economisers	478° F.	(A) Net working efficiency complete, after deducting 2·4 per cent. steam or power used as auxiliary to the production of steam	60·09 per cent.
Percentage of CO_2 in flue gases from side flue of boilers by means of combustion recorder	7·6 per cent.	(B) Boilers only	56·71 ,,
Steam pressure :		(C) Economisers only	4·35 ,,
Pounds per sq. in. (gauge)	89	(D) Superheaters only	0·51 ,,
Pounds per sq. in. (absolute)	104		
Temperature of saturation of steam	330·5° F.		

The installations from which the above average is derived comprise all sizes of plants with annual coal bills of from 750 tons to 70,000 tons ; whilst the average working pressure varied from 12 lbs. to 200 lbs. per sq. in. The fuels used were of every possible description, from the highest qualities of washed nuts, beans, peas, and fine slack, and large and small screened coal, down to inferior fuels of all qualities, including refuse coal mixed with shale, pit sweepings, washer settlings, etc., as well as coke and coke breeze.

The 250 plants had a total of 1,000 boilers, comprising 935 'Lancashire' boilers, 36 modern 'tubular' boilers, 17 'egg-ended' boilers, 6 'Cornish' boilers, 1 'marine' boiler, 2 'vertical' boilers, and 3 'patent' boilers. The plants varied in size from one small 'vertical' boiler to 35 'Lancashire' boilers, 30 ft. by 8 ft.

The total grate area of the 250 boilers was 38,158·6 sq. ft., corresponding to 152·6 sq. ft. per plant, or 38·1 sq. ft. per boiler, which, on the assumption that all the boilers were 'Lancashire,' would give an average grate-area length of approximately 6 ft.

The average figure shows 20·9 lbs. of fuel per square foot of grate area per hour, referring to the average amount burnt per hour per working day, and not to the amount for any particular hour. This figure is considerably below what is possible on a boiler plant run on modern lines, which would give something like 25 lbs. to 30 lbs. per square foot grate area per hour with the average quality of fuel. The boiler plants of the country are working under very easy conditions in this respect, and much more fuel could be burnt per boiler. Figures for fuel consumption depend very largely on the quality of the fuel. Thus a good quality washed coal of, say, 13,000 British thermal units and 7 per cent. to 8 per cent. ash could easily be burnt economically at the rate of 35 lbs. per square foot per hour, whereas purely refuse coals would only give about 15 lbs. Coke of good quality can be burnt at the rate of 22 lbs. per square foot grate area per hour and coke breeze about 15 lbs.

The average for the 250 plants shows 11,822 British thermal units and 11·5 per cent. ash, which includes almost every description of coal and coke varying in quality from 7,000 British thermal units to 14,000 British thermal units.

As regards coke, a good average sample of coke shows about 12,000 British thermal units to 12,500 British thermal units with 12 per cent. ash, whilst a good sample of coke breeze shows 9,000 British thermal units to 10,000 British thermal units and 15 per cent. to 20 per cent. ash. The great trouble with coke and coke breeze is the amount of moisture contained in them. Good samples should only contain about 5 per cent. and certainly not over 8 per cent. Many samples, however, contain regularly 20 per cent., which is a most serious matter from the point of view of economy.

In a well-managed plant with average quality of coal a 'Lancashire' boiler, 30 ft. by 8 ft., can evaporate easily 850 gallons per boiler per hour, an increase of 62 per cent. of steam output as compared with average figures.

Efficiency of Steam Boiler Plant.

(2)

The following are the figures for two separate industries, namely, collieries and chemical works:—

(1) *Collieries.*—Representing average figures for the complete investigation of 100 boiler plants, 570 boilers, annual coal bill 1,250,000 tons.

(2) *Chemical Works.*—Representing average figures for the complete investigation of 60 boiler plants, 236 boilers; annual coal bill, 620,000 tons.

Essential Figures of the Tests.	100 Colliery Plants.	60 Chemical Works Plants.
1. Duration of test	9·68 hrs.	9·20 hrs.
2. Amount of coal used	39,815·0 lbs.	38,025 lbs.
3. Analysis of coal. B.Th.U. per lb.	10,500	11,350
4. " " Ash	15·5 per cent.	12·0 per cent.
5. Coal burnt per boiler per hour	721·5 lbs.	1,059·8 lbs.
6. Coal burnt per sq. ft. grate area per hour	18·9 lbs.	26·6 lbs.
7. Amount of water evaporated	216,900 lbs.	23,358 lbs.
8. Water evaporated per boiler per hour	3,931 lbs.	6,510 lbs.
9. Water evaporated per lb. coal	5·44 lbs.	6·10 lbs.
10. Water from and at 212° F. evaporated per lb. coal	6·07 lbs.	7·00 lbs.
11. Temperature of feed-water. Before economisers	137° F.	103° F.
12. " " After economisers	154° F.	215° F.
13. Percentage of coal bill saved by economisers	1·6 per cent.	10·1 per cent.
14. Draught in side flue	0·60 in. W.G.	0·38 in. W.G.
15. Draught in chimney base (or equivalent)	0·95 in. W.G.	0·70 in. W.G.
16. Temperature of flue gases. Before economisers	690° F.	650° F.
17. " " After economisers	650° F.	500° F.
18. Percentage of CO_2 in flue gases	7·5 per cent.	8·0 per cent.
19. Steam pressure. Gauge lbs. per sq. in.	86 lbs.	102 lbs.
20. Temperature of saturated steam	328·4° F.	339·2° F.
21. Temperature of superheated steam	350·0° F.	384·2° F.
22. Steam or power used auxiliary to the production of steam	1·8 per cent.	6·1 per cent.
Efficiency.		
23. (A) Net working efficiency of plant after deducting steam or power used auxiliary to steam production	55·52 per cent.	57·9 per cent.
24. (B) Due to boiler only	55·02 "	54·2 "
25. (C) Due to economiser only	0·90 "	6·1 "
26. (D) Due to superheater only	0·62 "	1·3 "

TYPES OF BOILERS.

LANCASHIRE AND CORNISH BOILERS.

The distinction between these two general types is that the Cornish has one and the Lancashire two internal flues.

These boilers were originally made with iron plates, and had flat ends (often in two or three pieces), the flat surfaces being strengthened with rod and gusset stays.

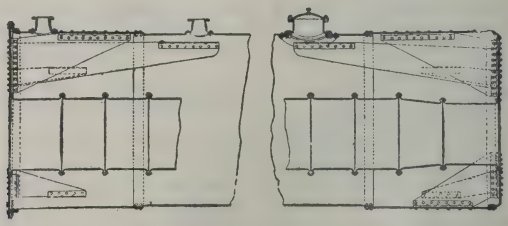


FIG. 43.—Lancashire Boiler (ordinary type, with flat end plates).

When steel took the place of iron, and boiler makers were able to obtain larger plates, the end plates of the largest boilers were then made in one piece, and the shells constructed of seven or nine belts, each in one plate. Fig. 43 shows a section of one of these Lancashire boilers as it is still being made by some firms.

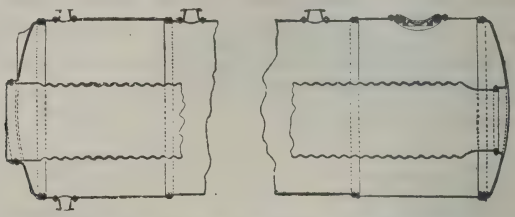


FIG. 44.—Thompson Type, with dish end plates and corrugated flue tubes.

All internally-fired boilers are subjected to straining due to unequal expansion and contraction, the flue tubes and furnace tubes becoming hotter than the shell while the boiler is at work.

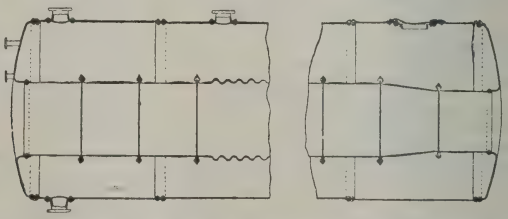


FIG. 45.—Thompson Type, with flue tubes corrugated for part of their length.

Makers of boilers having flat end plates provide for expansion by the flexibility of the end plates.

Some makers avoid the staying required in the case of flat end plates by using dish-end

GALLOWAYS

LIMITED.

Head Office: KNOTT MILL IRONWORKS, MANCHESTER.

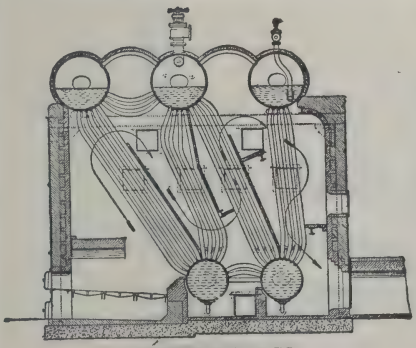
Telegrams: 'GALLOWAY, MANCHESTER.' Telephone: 6312 CENTRAAL.




GALLOWAY PATENT BOILERS.

BOILERS.

LANCASHIRE, GALLOWAY.
WATER-TUBE,
MULTI-TUBULAR, DRY BACK
SUPERHEATERS. FITTINGS.



WATER-TUBE BOILER.

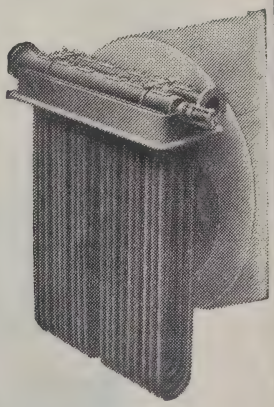

DOUBLE-HEADER ACCESSIBLE SUPERHEATER (COVER REMOVED).

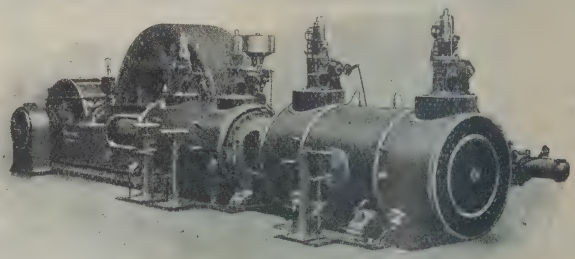
7/926

GALLOWAYS

LIMITED.

Head Office: KNOTT MILL IRONWORKS, MANCHESTER.

Telegrams: 'GALLOWAY, MANCHESTER. Telephone: 6312 CENTRAL.




TANDEM DROP-VALVE ENGINE. ARRANGED FOR STEAM EXTRACTION.

ENGINES.

ROLLING MILLS, WINDING, FACTORIES, SEWAGE, TOWN'S WATER, ELECTRIC POWER.

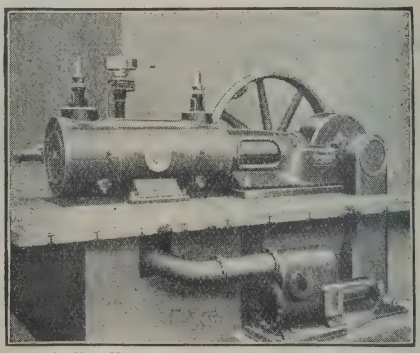LARGE GAS ENGINES.



PATENT UNI-FLOW STEAM ENGINE.

7/926

plates (fig. 44), and provide for the relief of expansion stresses by making the flue tubes corrugated, either for their whole length (fig. 44), or for part of their length (fig. 45).

A length of corrugated flue tube is used by makers of flat end boilers also, for high pressures.

The Galloway Boiler.

The general design and details of the Galloway Boiler (*Galloways, Ltd., Manchester*) are shown by fig. 46. The boiler has two furnaces at the front, joining behind the bridges into one flue of special shape, containing the well-known Galloway cone tubes, and side pockets: otherwise, and in general appearance it is somewhat similar to the two-flued or Lancashire boiler.

The advantages claimed for the Galloway boiler are:—

Increased heating surface—about 10 per cent. additional.

Improved circulation, giving more uniform temperature and reduced expansion strains. This circulation, also, largely prevents the deposit of solid matter upon the furnaces and adds to the durability of the boiler.

Improved heat transmission, owing to good circulation and to sinuous path of flue gases past the cone tubes.

Increased output and higher efficiency.


Details of Standard 'Galloway' Boilers

Size. Length × Diam.	No. of Cone Tubes.	Heating Surface.	Normal Grate Area.	Outside Diam. of Furnace.	Steam Evaporated per Hour, Lbs. — Coal burnt per Sq. Ft. Grate per Hour.			Approximate Net Weight. — Working Pressure.	
					20 lbs	25 lbs.	30 lbs.	120 lbs.	160 lbs.
Ft. Ft. In.		Sq. Ft.	Sq. Ft.	Ft. In.	Lbs.	Lbs.	Lbs.	Tons.	Tons.
14×5 6	6	300	14·5	2 1	2,500	3,100	3,700	7	—
16×5 6	8	350	16	2 1	2,700	3,400	4,100	7·5	—
18×5 6	8	395	17·2	2 1	2,900	3,600	4,400	8	—
16×6 0	8	395	19·5	2 4	3,300	4,100	5,000	8	—
18×6 0	11	445	21	2 4	3,500	4,400	5,300	8·75	—
20×6 0	11	495	22·5	2 4	3,800	4,800	5,700	9·5	—
22×6 0	14	555	22·5	2 4	3,800	4,800	5,700	10·3	—
20×6 6	15	570	23·2	2 7	3,900	4,900	5,900	10·5	12·5
22×6 6	15	605	25	2 7	4,200	5,300	6,400	11	13·25
24×6 6	18	675	27·5	2 7	4,600	5,800	7,000	11·8	14·5
26×6 6	18	725	30	2 7	5,100	6,400	7,600	13	15
24×7 0	18	735	29·7	2 9	5,100	6,300	7,600	14·5	17
26×7 0	20	795	32	2 9	5,400	6,800	8,200	15·5	18
28×7 0	20	850	32	2 9	5,400	6,800	8,200	16·5	19
30×7 0	25	925	32	2 9	5,400	6,800	8,200	17·5	20
28×7 6	20	925	35	3 0	5,900	7,400	8,900	17·75	22
30×7 6	25	1,000	35	3 0	5,900	7,400	8,900	19	23·5
28×8 0	25	1,070	38	3 3	6,500	8,100	9,700	20	25
30×8 0	25	1,120	38	3 3	6,500	8,100	9,700	21	26
30×8 6	25	1,220	40	3 5	6,800	8,500	10,200	23·5	28·3
30×9 0	25	1,310	43	3 8	7,300	9,100	11,000	25·5	31·5


Basis.—8·5 lbs. of water evaporated per lb. of coal. Boiler supplied with hot feed as from a Green's economiser.

On page 1473 are results of tests made by the British Engine, Boiler, and Electrical Insurance Co., Ltd., on two adjacent boilers working into the same chimney, one being a Lancashire boiler and the other a Galloway patent boiler, but otherwise of similar size and seated in similar manner.

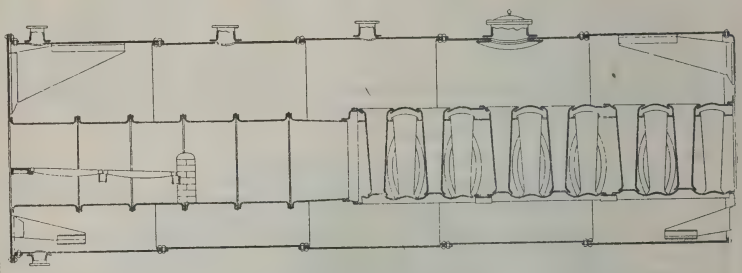
THE GALLOWAY BOILER.




Longitudinal Sectional Elevation.

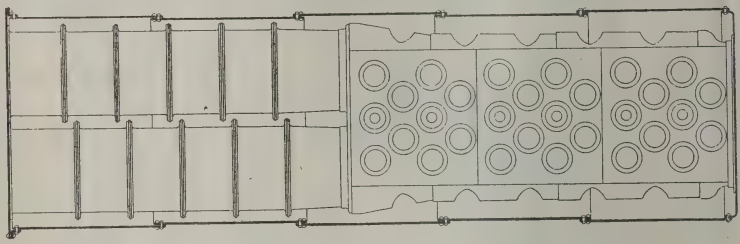


Longitudinal Sectional Plan.

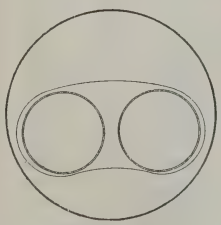

Cross Section behind Fire Grates.

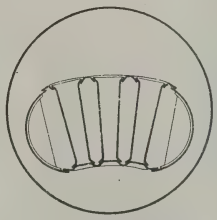

Cross Section through Galloway Flue.

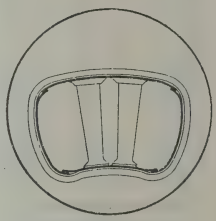

Cross Section at Back End.

FIG. 46.

TESTS OF LANCASHIRE AND GALLOWAY BOILERS.

Details.	Lancashire Boiler.	Galloway Boiler.
Diameter of boiler	8 ft.	8 ft.
Length of boiler	30 ft.	30 ft.
Total heating surface	985 sq. ft.	1,164 sq. ft
Fuel fired per hour	1,421 lbs.	1,424 lbs.
Combustible burnt per hour	1,348 lbs.	1,317 lbs.
Water evaporated per hour	10,565 lbs.	11,485 lbs.
Dried fuel fired per sq. ft. grate per hour	31 lbs.	31 lbs
Water evaporated per lb. combustible from and at 212° F.	9·39 lbs.	10·39 lbs

THE THOMPSON LANCASHIRE BOILER.

(John Thompson (Wolverhampton), Ltd., Wolverhampton.)

This is a boiler (fig. 47, p. 1475) of the dish-end type (figs. 44, 45). The end plates are dished to a convex form and increased in thickness to give the same factor of safety (as obtained with the stayed surface), thereby dispensing with all gusset and longitudinal rod stays. The inside, being free from stays, can be easily cleaned, particularly over the fire-boxes, where the steam is so largely generated.

The table on page 1474 gives some particulars of these boilers, which have been made for working pressures up to 230 lbs. per sq. in.

MULTITUBULAR BOILERS, LOCOMOTIVE TYPE.

THE ROBEY BOILER.

Fig. 48 shows a boiler, locomotive type, by Messrs. Robey & Co. Ltd. of Lincoln. It is rated at 8 h.p. nominal, with enlarged grate suitable for burning inferior fuel, having a grate area of 6·43 sq. ft., and a total heating surface of 164·8 sq. ft. Its working pressure is 150 lbs. per sq. in. The tubes are of steel solid drawn.

The figure shows Messrs. Robey & Co.'s patent roof fire-box girders, which, being supported by the archplate of external fire-box, take all compressive strains off the fire-box front plate and tube plate.

DIMENSIONS OF 8 H.P. LOCOMOTIVE BOILER.

Length of external fire-box	3 feet 5 inches	Height of internal fire-box	3 feet 4 inches
Length of boiler barrel	6 „ 1 „	Height of external fire-box	4 „ 4½ „
Length of smoke-box	1 „ 11 „	Diameter of boiler barrel	2 „ 9¼ „
Width of external fire-box	2 „ 10 „	Number of tubes	32
Width of internal fire-box	2 „ 3⅜ „	Diameter of tubes	2½ „
Length of internal fire-box	2 „ 10 1/16 „		

THICKNESS OF PLATES.

Boiler barrel	0 ft. ⅜ in.	Tube plates	0 ft. ⅝ in
External fire-box	0 „ 5/16 „	Total length of boiler	11 „ 5 „
Internal fire-box	0 „ 5/16 „		
Heating surface in tubes	132·5 sq. ft.	Working pressure	150 lbs. per sq. in.
Heating surface in fire-box	32·3 „	Hydraulic test	250 „ „
Total heating surface	164·8 „	Steam test	150 „ „
Grate area	6·43 „		

Fig. 49 shows a Great Northern Railway locomotive boiler for a 6-ft. 6-in. 4-wheel coupled bogie engine.

TABLE SHOWING DIMENSIONS OF THOMPSON LANCASHIRE BOILERS.

Diameter of Boiler.	Length of Boiler.	Working Pressure, in Lbs. per Sq. In.	Heating Surface, in Sq. Ft.	Grate Area, in Sq. Ft.	Approximate Evaporation, in Lbs. of Water per Hour.	I.H.P., based upon 20 lbs. of Steam per I.H.P. per Hour.	Diameter of Flues.	Thickness of Shell, in Inches.	Thickness of Flues, in Inches.	Thickness of Dish End, in Inches.	Thickness of Flat End, in Inches.
Ft. Ins.	Feet.						Ft. Ins.				
6 6	24	100	640	28	5,000	250	2 6	15/32	8/8	3/4	1/2
6 6	24	120	640	28	5,000	250	2 6	1/2	13/32	3/4	9/16
6 6	24	160	640	28	5,000	250	2 6	5/8	15/32	13/16	21/32
7 3	24	100	680	30	5,500	275	2 9	1/2	8/8	3/4	17/32
7 3	24	120	680	30	5,500	275	2 9	9/16	13/32	3/4	9/16
7 3	24	160	680	30	5,500	275	2 9	21/32	15/32	13/16	21/32
7 3	30	100	875	30	6,000	300	2 9	1/2	8/8	3/4	17/32
7 3	30	120	875	30	6,000	300	2 9	9/16	13/32	3/4	9/16
7 3	30	160	875	30	6,000	300	2 9	21/32	15/32	13/16	21/32
8 3	30	100	1,050	42	7,250	365	3 3	9/16	7/16	13/16	9/16
8 3	30	120	1,050	42	7,250	365	3 3	5/8	7/16	15/16	21/32
8 3	30	160	1,050	42	7,250	365	3 3	23/32	1/2	1	3/4
8 6	30	100	1,100	45	9,000	450	3 5	19/32	7/16	13/16	9/16
8 6	30	120	1,100	45	9,000	450	3 5	21/32	15/32	15/16	21/32
8 6	30	160	1,100	45	9,000	450	3 5	3/4	17/32	1	3/4
9 3	30	100	1,175	49	9,500	475	3 9	5/8	7/16	7/8	9/16
9 3	30	120	1,175	49	9,500	475	3 9	11/16	15/32	15/16	21/32
9 3	30	160	1,175	49	9,500	475	3 9	13/16	17/32	1 1/16	25/32

The above evaporations assume the use of mechanical stokers.

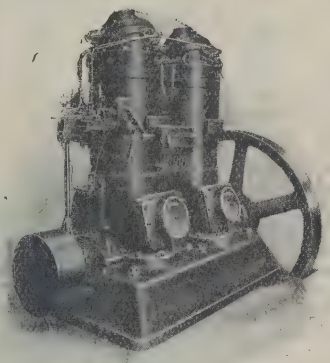
ROBEY & CO., Ltd.,
LINCOLN.

Makers of

AIR COMPRESSORS
ALL TYPES & SIZES

WINDING ENGINES
STEAM & ELECTRIC

BOILERS OF ALL CLASSES



Crude Oil Engine.



Patent Uni-flow Engine.

CATALOGUES ON APPLICATION.

F. 1474

SHOP No. 3719, YEAR 1908.

SHELL IN 3 PLATES ONLY!

SHOP No. 6056, YEAR 1921.



JOHN THOMPSON
(Wolverhampton) Ltd.
WOLVERHAMPTON.

AFTER working for 13 years at **230 lbs. daily pressure,** the users of this 'THOMPSON' Dish-ended Boiler (Messrs. KIRKPATRICK BROS., Limited, Bleachers, Dyers and Finishers, Ballyclare, Co. Antrim), write under date July 27th, 1921:

'The Boiler has been working most satisfactorily since its installation; it has not given the slightest trouble, and we consider it a good Steaming Boiler.'

STANDARD SIZES IN STOCK READY FOR IMMEDIATE DESPATCH.

HAS WORKED FOR 13 YEARS, and STILL WORKING AT 230 lbs. DAILY PRESSURE.

F. 1475

MODERN TYPE OF 'LANCASHIRE BOILER.' DISHED ENDS—SHELL IN FIVE RINGS—CORRUGATED SECTION IN FLUES

(John Thompson (Wolverhampton) Ltd., Wolverhampton.)

Working Pressure 200 lbs. per Square Inch.



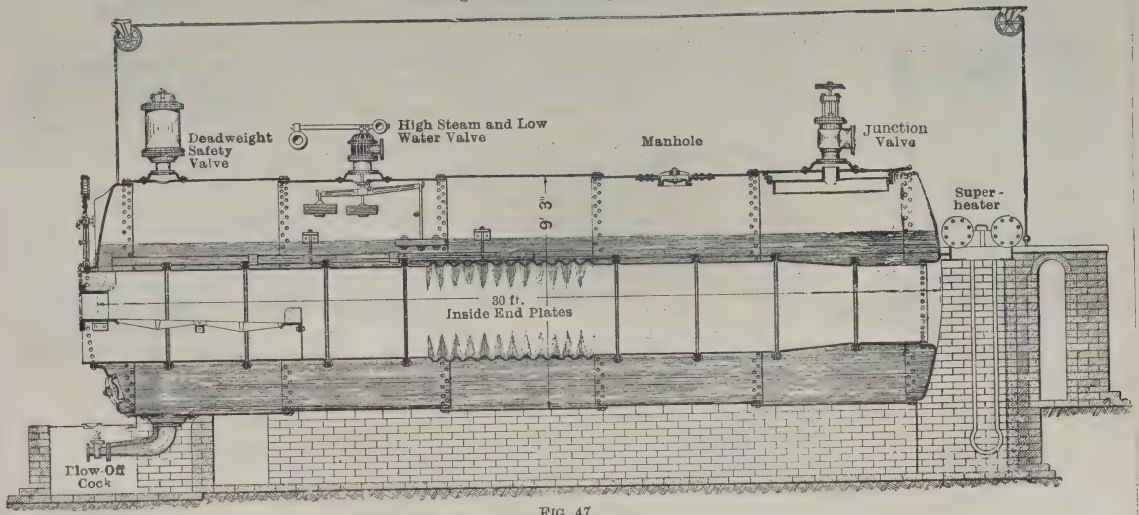


FIG. 47.

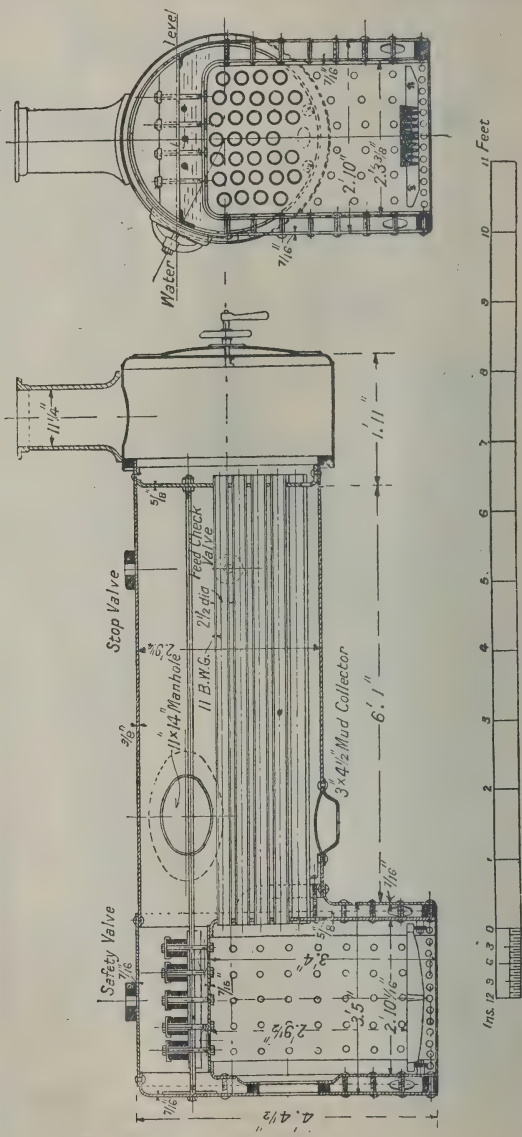

MULTITUBULAR BOILER, LOCOMOTIVE TYPE.

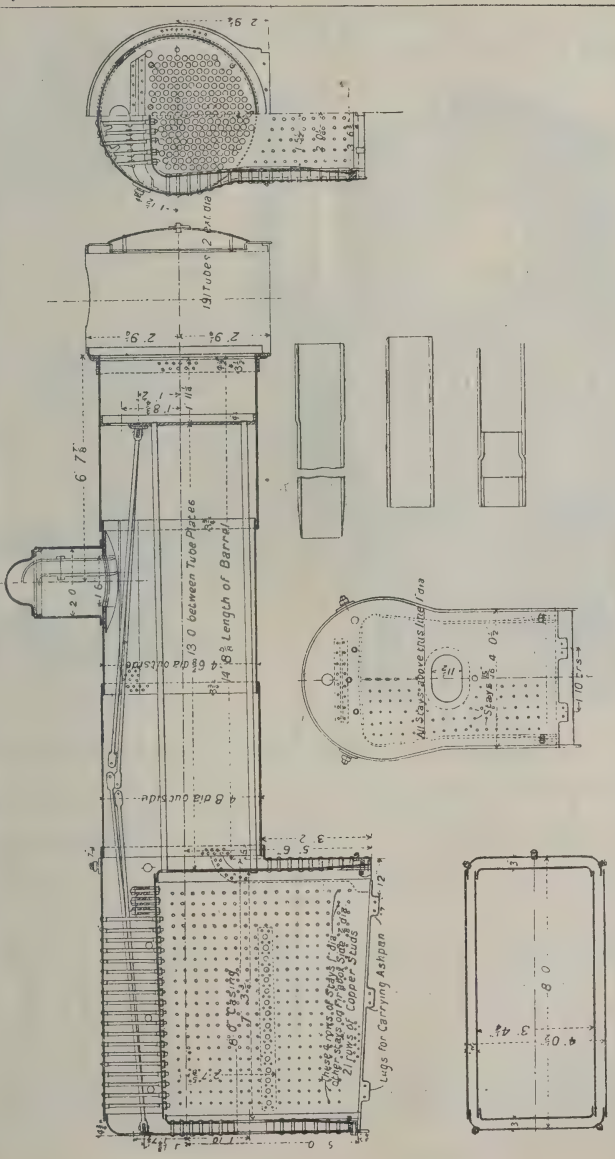FIG. 48



LOCOMOTIVE BOILER FOR 6 FT. 6 IN. 4-WHEEL COUPLED BOGIE ENGINE, GREAT NORTHERN RAILWAY.

FIG. 49.

The Essex Tubular Vertical Boiler.

This is a type of boiler (figs. 50, 51) introduced by Messrs. Davey, Paxman & Co., Ltd., Colchester, and is yielding excellent results.

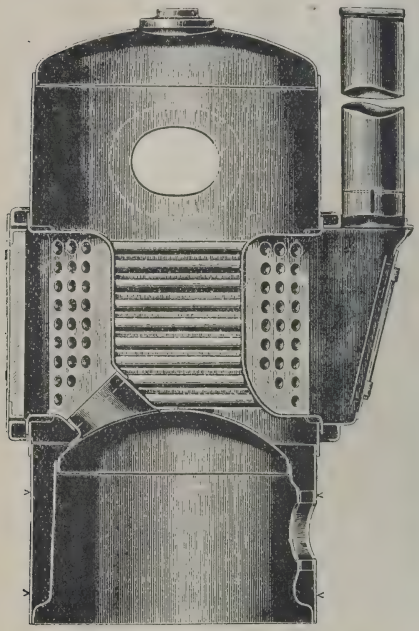


Fig. 50.

A flanged riveted neck, secured to the top of fire-box, conveys the products of combustion into a chamber to the left. This chamber is of a triangular shape (see fig. 51), and has an outer flange by which it is riveted to the shell of the boiler, and to which a door is fitted. An exactly similar chamber is in like manner secured at the opposite side and is fitted with a door, the whole forming the smoke-box, which can be arranged with either up-take or down-take.

These two chambers have a number of tubes, of a semicircular shape, uniting them. The curve of the tubes being of a greater radius than that of the boiler, enables them to be easily put in or withdrawn in a small space.

The chambers (of fine quality steel) are formed, while hot, in a special hydraulic pressing machine,

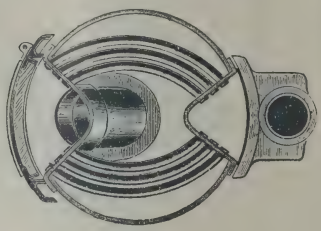


Fig. 51.

and are then annealed. The shape of the flues causes a centrifugal action in the hot gases, which brings every portion of them into direct contact with the tube surface.

Principal Dimensions of Standard Sizes of Paxman Essex Vertical Boilers.
For a Working Pressure of 90 Lbs. per Sq. In.

No.	Height	Diam.	Tubes. No.	Tubes. Diam.	Heating Surface.	Evaporation per Hour.*	No.	Height	Diam.	Tubes. No.	Tubes. Diam.	Heating Surface.	Evaporation per Hour.*
	Ft.Ins.	Ft.Ins.		Ins.	Sq. Ft.	Lbs.		Ft.Ins.	Ft.Ins.		Ins.	Sq. Ft.	Lbs.
2	5 6	2 3	22	2	32·4	180	12	9 3	4 3	62	2¼	170	990
3	6 0	2 8	32	2	51·3	270	14	9 3	4 6	74	2¼	201·7	1,250
4	6 6	2 10	36	2	62·4	340	16	10 6	4 9	80	2¼	233	1,440
5	7 0	3 0	42	2	72·7	390	20	11 6	5 3	92	2¼	284	1,680
6	7 6	3 4	38	2¼	84·5	460	25	12 4	5 8	94	2¼	350	2,256
8	8 0	3 9	48	2¼	116·7	648	30	13 0	6 0	112	2¼	413	2,820
10	8 9	4 0	56	2¼	147·5	840							

* The figures given for the evaporative capacity of each boiler are with feed at 212°F., when burning good coal, and with good draught and stoking. It is of course possible to obtain a much greater evaporation when the draught is ample, and the user is prepared to sacrifice economy to increase the evaporation.

The Paxman Economic Boiler.

This boiler (fig. 52) consists of a cylindrical shell, with one or more internal flues, and a number of small return tubes running from end to end. A combustion chamber of brick receives the products of combustion at the back of the boiler; they then pass through the small tubes to the smokebox in front, and finally return to the back, outside the boiler shell, through the brick flues in the setting, to the chimney.

Whilst the temperature of the waste gases which leave the boiler on their way to the chimney ranges from 600° to 700°F. with many boilers of the Cornish, Lancashire, or similar types, it is only from 450° to 475°F. in the case of the Paxman 'Economic'; with the latter boiler, on account of its large heating surface, there is about 30 per cent. less waste of heat, the temperature named being just sufficient to create a natural draught, indicating that the utmost possible degree of heat has been abstracted from the fuel burnt, and rendering an Economiser unnecessary.

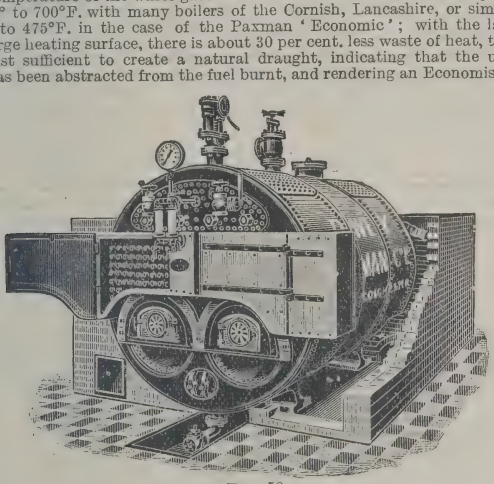


Fig. 52.

An independent test of this boiler by Sir Alexander W. B. Kennedy showed an evaporation of 12·2 lbs. of water from and at 212°F. per lb. of coal.

The operation of sweeping the tubes (preferably daily) can be effected by the stoker, using an ordinary wire tube brush, during any interval of thirty minutes; or, if there is no such interval, a steam cleaning device can be supplied, enabling the operation to be completed in ten minutes.

A Paxman 'Economic' boiler being only about half the length of a Lancashire boiler of corresponding capacity, a very considerable saving is effected in the boiler setting and buildings; and in case of shipment the freightage cost may be only one-third of that for a Lancashire boiler.

Principal Dimensions of Standard Sizes of Paxman Economic Boilers with Single or Double Flues.

No.	Length	Diam.	Flues. No.	Flues. Diam.	Internal Heating Surface.	Evaporation per Hour.*	No.	Length	Diam.	Flues. No.	Flues. Diam.	Internal Heating Surface.	Evaporation per Hour.*
	Ft. Ins.	Ft. Ins.		Ft. Ins.	Sq. Ft.	Lbs.		Ft. Ins.	Ft. Ins.		Ft. Ins.	Sq. Ft.	Lbs.
8	6 5	4 9	1	2 3	140	840	30	11 0	6 3	1	3 2	478	2,860
10	7 0	5 0	1	2 4	174	1,044	35	12 6	6 6	1	3 2	565	3,400
12	8 0	5 0	1	2 6	234	1,400	40	12 6	7 0	2	2 3	665	3,990
14	8 6	5 0	1	2 6	248	1,480	45	12 6	7 6	2	2 4	772	4,530
16	9 0	5 3	1	2 6	276	1,650	50	14 0	7 6	2	2 6	890	5,220
20	9 6	5 6	1	2 9	324	1,940	60	14 0	8 0	2	2 8	1,180	6,960
25	9 6	6 0	1	3 0	393	2,350							

* The figures given for the evaporative capacity of each boiler are with feed at 212°F., when burning good coal, and with good draught and stoking. It is of course possible to obtain a much greater evaporation when the draught is ample, and the user is prepared to sacrifice economy to increase the evaporation.

The Cochran Boiler.

Fig. 53, p. 1481, represents one of Messrs. Cochran & Co.'s Patent Vertical Multitubular Boilers, as manufactured by them at Annan. These boilers are used very largely both ashore and afloat.

The advantage which this kind of boiler presents over other kinds for land use and export has long been recognised, and its principal merits consist in great economy of space, in not requiring any brickwork setting, in having a large amount of highly effective heating surface, in obtaining plenty of steam, and in being very economical in fuel, besides being perfectly accessible for cleaning and repairs outside and inside.

For winch boilers this type combines the advantage of the cross-tube boiler and the horizontal boiler without their disadvantage, and has been found the most suitable for large passenger, mail, and cargo steamers running to all parts of the world.

The boilers are made in a range of standard sizes, as per following Table, which gives full particulars of their standard dimensions.

Evaporation of Cochran Boilers.

Particulars of Boiler.						Heavy Steaming.						Easy Steaming.				
						Coal.		Evaporation.				Coal.		Evaporation.		
Diam. of Boiler.	Height of Boiler.	Grate Area.	Heating Surface.	Ratio $\frac{H.S.}{G.A.}$		Lbs. per hour.	Lbs. per sq. ft. of Grate per hour.	Per lb. Coal.	Per sq. ft. H.S. per hour.	Total per hour by Formula.	Evaporation in lbs. (maximum) nearest round figures.	Lbs. per hour.	Lbs. per sq. ft. of Grate per hour.	Per lb. Coal.	Per sq. ft. H.S. per hour.	Total per hour (calculated).
1	2	3	4	5		6	7	8	9	10	11	12	13	14	15	16
Ft. In.	Ft. In.															
3 0	6 9	4·75	60	12·6		72	15·1	5·0	6·0	360	360	43	9·5	6·2	4·5	270
3 3	7 6	5·75	80	14·0		98	17·0	5·1	6·2	500	500	58	10·0	6·4	4·6	375
3 9	8 6	7·50	100	13·3		144	19·3	5·0	7·2	720	700	86	11·5	6·2	5·4	540
4 0	9 0	8·50	120	14·1		170	20·0	5·1	7·2	868	850	102	12·0	6·3	5·4	651
4 3	9 6	9·25	140	15·1		188	20·4	5·2	7·1	996	1,000	112	12·0	6·6	5·3	747
4 6	10 0	9·75	160	16·4		202	20·8	5·4	6·8	1,098	1,100	121	12·4	6·8	5·1	823
4 9	10 3	11·75	200	17·0		253	21·6	5·5	7·0	1,401	1,400	151	12·5	6·9	5·2	1,050
5 0	11 3	12·50	220	17·6		273	21·8	5·6	6·9	1,531	1,520	163	13·0	7·0	5·2	1,148
5 3	11 9	14·00	250	17·8		312	22·4	5·6	7·0	1,760	1,760	187	13·3	7·0	5·2	1,320
5 6	12 3	16·75	300	17·9		383	22·7	5·6	7·2	2,160	2,160	229	13·6	7·0	5·4	1,620
5 9	13 0	18·75	350	18·7		435	23·3	5·7	7·1	2,504	2,500	261	13·9	7·1	5·3	1,878
6 0	12 6	18·75	350	18·7		435	23·3	5·7	7·1	2,504	2,500	261	13·9	7·1	5·3	1,878
6 0	13 6	18·75	350	18·7		435	23·3	5·7	7 1	2,504	2,500	261	13·9	7·1	5·3	1,878
6 0	14 0	18·75	400	21·4		435	23·3	6·1	6·6	2,667	2,600	261	13·9	7·6	5·0	2,002
6 6	13 6	22·50	450	20·0		533	23·7	5·9	7·0	3,144	3,100	319	14·1	7·3	5·2	2,358
6 6	14 0	22·50	450	20·0		533	23·7	5·9	7·0	3,144	3,100	319	14·1	7·3	5·2	2,358
6 6	14 6	22·50	500	22·2		533	23·7	6·2	6·6	3,304	3,300	319	14·1	7·7	4·9	2,478
7 0	14 0	26·75	500	18·7		643	24·0	5·7	7·3	3,665	3,600	385	14·3	7·1	5·4	2,748
7 0	15 0	26·75	600	22·4		643	24·0	6·3	6·7	4,021	4,000	385	14·3	7·8	5·0	3,015
7 6	16 3	31·50	750	23·8		767	24·3	6·5	6·6	4,939	4,900	460	14·6	8·0	5·0	3,705
8 0	16 6	37·00	850	23·0		966	24·5	6·3	6·7	5,760	5,700	543	14·6	7·9	5·0	4,320
8 6	17 0	41·00	1,000	24·4		1,004	24·5	6·5	6·6	6,610	6,600	602	14·6	8·2	4·9	4,957

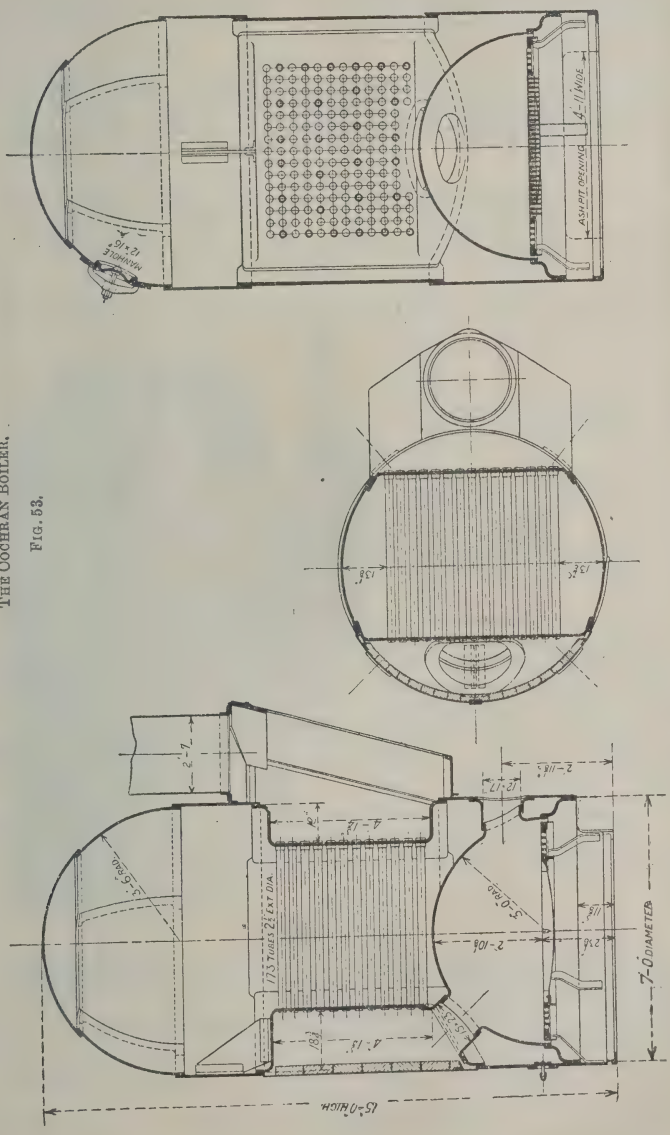
Messrs. Cochran's formula for evaporation is :—

$$E = 26\ (G - 2)\left(5 + \frac{\frac{H}{G} - 13}{7{\cdot}5}\right)$$

where,

E = Evaporation in lbs. per hour ; G = Grate area in sq. ft. ; H = Heating surface in sq. ft.

The first expression of the formula represents the coal burnt per hour ; the second expression represents the water evaporated per lb. of coal.



THE COCHRAN BOILER.

FIG. 53.

The evaporations given by this formula can be obtained under favourable conditions, but the makers' practice is to recommend that about 75 per cent. of this maximum evaporation should be relied upon for continuous working.

In the Evaporation table (p. 1480) it will be noticed that there are two sets of figures, showing coal consumption and evaporation. Under 'Heavy Steaming' are given the evaporations as per formula, and under 'Easy Steaming' the evaporations are calculated at 75 per cent. of this amount.

PRICES OF COCHRAN PATENT VERTICAL BOILERS.

Size of Boilers.				Class A.—For Land Use.		Class B.—For Marine Use.	
Diameter.		Height.	Heating Surface.	Boiler with Fittings only.	Boiler with Fittings and Mountings.	Boiler with Fittings only.	Boiler with Fittings and Mountings.
Ft.	Ins.	Ft. Ins.	Sq. Ft.	£	£	£	£
3	0	6 9	60	153	188	165	223
3	3	7 6	80	167	202	180	239
3	9	8 6	100	189	225	201	260
4	0	9 0	120	210	250	223	289
4	3	9 6	140	240	283	252	321
4	6	10 0	160	267	310	280	348
4	9	10 3	200	290	333	303	373
5	0	11 3	220	315	361	330	401
5	3	11 9	250	342	388	357	428
5	6	12 3	300	373	420	387	461
5	9	13 0	350	427	476	444	519
6	0	12 6	350	453	505	471	548
6	0	13 6	350	453	505	471	548
6	0	14 0	400	473	524	489	567
6	6	13 6	450	501	556	519	603
6	6	14 0	450	501	556	519	603
6	6	14 6	500	516	571	533	617
7	0	14 0	500	560	617	579	670
7	0	15 0	600	581	639	597	689
7	6	16 3	750	735	793	753	845
8	0	16 6	850	811	880	833	935
8	6	17 0	1,000	972	1,041	993	1,096

The above prices are those in operation on January 1, 1922, and for boilers of 100 lbs. working pressure. The boilers are tested by makers to 200 lbs. hydraulic pressure. The price for 'boiler and fittings only' includes boiler with smoke-box, combustion chamber plate and lining, firedoor, manhole and cover, mudholes and doors, and one set of cast-iron firebars and plate ashpit damper. Mountings consist of steam stop valve, safety valve, feed check valve, pressure gauge and protector, blow-off cock, one set of water gauges, and two test cocks.

The plates from which all these boilers are made are of the best quality mild steel, made by the Siemens-Martin process to the requirements of the British standard specification for marine boilers, and tested at the steel works by Lloyd's Surveyor.

Class B boilers are provided with a Lloyd's certificate, and the specification of fittings and mountings is slightly different.

The boiler lends itself readily to firing with oil fuel, the maximum evaporations as obtained with coal fuel being easily obtained when burning oil with a slight increase in efficiency.

The self-contained character of the boilers renders them particularly applicable for the utilisation of waste heat from reheating furnaces, puddling furnaces, coke ovens, etc.

WATER-TUBE BOILERS FOR LAND SERVICE.*

THE NICLAUSSE BOILER.

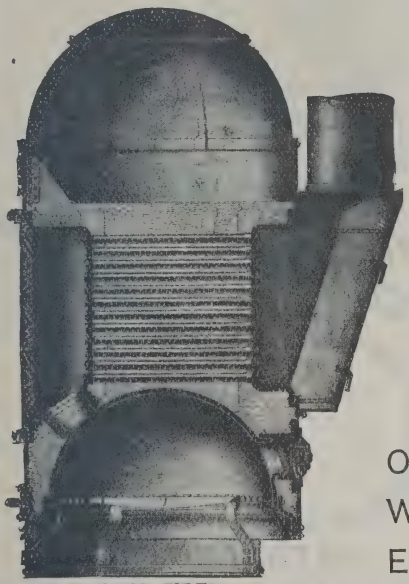
This boiler is built in France by Messrs. J. & A. Niclausse of Paris, and in England by *The British Niclausse Boiler Co., Ltd.*, of Clock House, Arundel Street, Strand, London, W.C. 2.

It consists of a compact nest of large, straight, short solid drawn tubes, closed at each end and mounted at the front end in solid drawn pressed steel headers, upon the top of which is mounted a capacious steam and water drum. There is thus only a single row of headers. The heating surface of the outer tube is rendered highly efficient by the provision of an inner tube to carry the water to its back end, whereby the circulation must always be in only one, and that the correct, direction. The tubes are closed by a tapered screwed pressed steel cap at the back end, and at the front end by a tapered screwed pressed steel plug, to which is

* See Section XXXIII, for Marine Service.

COCHRAN BOILERS

PATENT VERTICAL MULTITUBULAR



COAL FIRED

SUITABLE FOR ALL PURPOSES

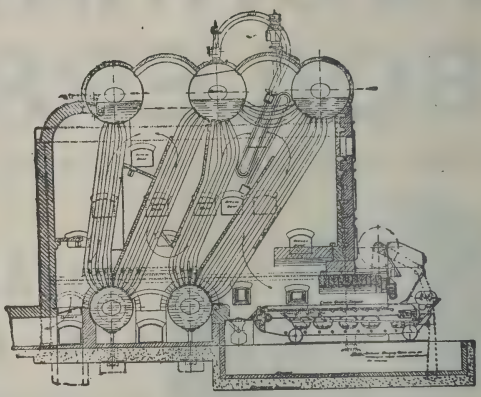
WRITE FOR CATALOGUE

OIL FIRING
WASTE HEAT
ETC.

COCHRAN & CO., ANNAN, LTD.
ANNAN, SCOTLAND

London Office : **7c LOWER BELGRAVE STREET, S.W. 1.**

THE STIRLING BOILER



OVER 6 MILLION
HORSE POWER

See Editorial pages 1488-9.

INSTALLED IN
STIRLING BOILERS

THE STIRLING BOILER CO., LTD.
54 VICTORIA STREET, WESTMINSTER, S.W.1.

F. 1483

attached the inner tube by a swivelling connection, whereby it can be readily withdrawn. Both plugs and caps can be easily removed for inspection and cleaning. It is generally sufficient to remove the front plug and withdraw the inner tube once a year for washing out by means of a hose applied to the outer end of the inner tube *in situ*.

Fig. 54 shows the arrangement of the header and evaporating tube ends.

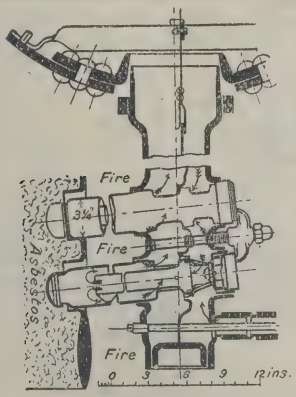


FIG. 54.

No expanding of the tubes into the headers is required, as the joints are made by coned metal-to-metal surfaces, which are formed by special machinery, positively ensuring accurate fitting and interchangeability. The same Niclausse system of jointing is adopted for the connection of the headers to the drum, and it is found to be perfect under the highest working pressures, no jointing material being required.

Owing to the foregoing special constructional features the boiler can be rapidly erected without expert services, and a special feature of the boiler is that any tube can be withdrawn and replaced within a few minutes.

Fig. 55 shows the tools used for inserting and withdrawing the tubes, which can be easily handled by one man.

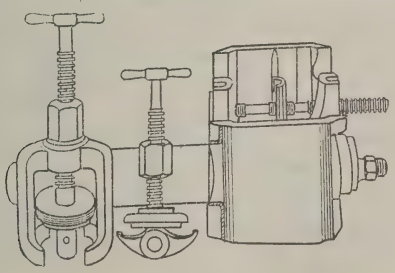


FIG. 55.

The header is divided into two compartments, of which the front communicates with the inner tube and the back with the annular space between it and the outer tube, through corresponding oblong ports cut in the outer tube.

Fig. 56 shows the system of feed distribution. This arrangement ensures that the lower tubes are always supplied with hot and purified feed water and that the deposit of impurities contained in the feed can mainly take place in the trough located for that purpose in the drum. What little escapes from the drum trough harmlessly, settles in the upper tubes (where the temperature is low) and produces only soft mud, which can easily be removed by washing out. The interior surfaces are thus always in a clean and efficient condition.

It will be seen from fig. 56 that the feed water is injected into the steam space against suitable baffles, whence it falls into a trough, which extends throughout the length of the drum, distributing the feed evenly over all the headers.

This method of injecting the feed water has the advantage of liberating contained air, with the result that the deterioration of tubes in this boiler is practically non-existent, their life being anything from 12 to 15 years.

The pressure parts, consisting of tubes, headers, and drum, are supported upon a framework of light structural steelwork, which relieves the relatively small amount of brickwork

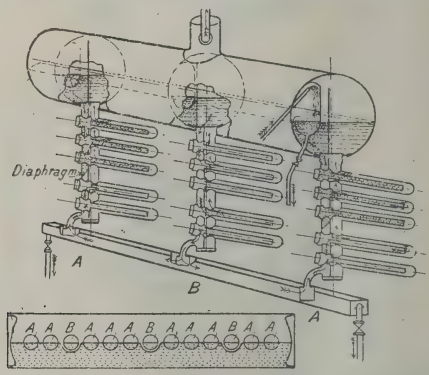


FIG. 56.

required, of all stress, whilst all the pressure parts are perfectly free to expand and contract in any direction, the tubes and headers being held only at one end.

The weight of the boiler and the amount of brickwork it requires is relatively low, the largest piece being the drum, whose diameter invariably is 1 metre, and whose length is proportionate to the number of headers employed.

A very important feature of the boiler is that the means employed for cleaning the exterior surfaces are so simple and easily applied that cleaning is usually done every day, so that

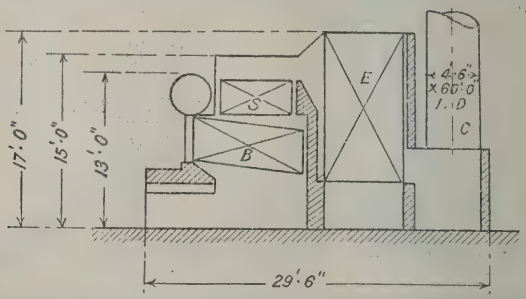


FIG. 57.

the heating surfaces are always in a clean condition, resulting in a very high average efficiency during regular work. External cleaning is done by means of a steam lance inserted through the front doors and headers, which have suitable passages provided in them for this purpose. This process of lancing can be effected within half an hour by one man, without his having to open any doors and interfere in any way with the operation of the boiler.

Another advantage of this boiler is that it gives an exceptionally high capacity per square foot of ground occupied and per cubic foot of space occupied. The depth and height remain constant,

The British Niclausse Boiler Co., Ltd.
The Clock House, Arundel St., Strand, London, W.C. 2.

OVER ALL OTHER TYPES OF WATER TUBE AND CYLINDRICAL BOILERS

THE SINGLE HEADER
PREMIER
SHORT STRAIGHT TUBE

NICLAUSSE

(Entirely Franco-British).

Ensures the following advantages :—

1. Larger grate area immediately under the tubes.
2. Greater capacity per sq. ft. of ground space and less height.
3. Cleaner Heating Surfaces—ever clean inside and outside.
4. Higher average efficiency in regular service.
5. Quicker change of a defective tube—in one hour.
6. Shorter annual overhauls—2 days all tubes out and in.
7. Lesser necessity for spare boiler equipments.
8. Hotter and purer feed to tubes next to grate.
9. Earlier steam at full load ($\frac{1}{2}$ hour)—lesser banking.
10. Better circulation, in the correct way *only*—no surging.
11. Freer expansion and contraction of all parts.
12. Heavier overloads without fear of tube troubles.
13. Lower maintenance and operation charges.
14. Cooler and cleaner boiler-houses.
15. Lighter deadweight in metal and brickwork—cheaper
16. Closer arrangement of Boilers—saving space. [transport.
17. Easier cleaning facilities.
18. Cheaper Steam.

More than 4,000,000 h.p. in service, and now being extensively adopted in England.

It pays even to send us an Enquiry for
BOILERS, SUPERHEATERS,
ECONOMIZERS, STOKERS.

Highest Awards at all International Exhibitions.

The British Niclausse Boiler Co., Ltd.
The Clock House, Arundel St., Strand, London, W.C. 2.

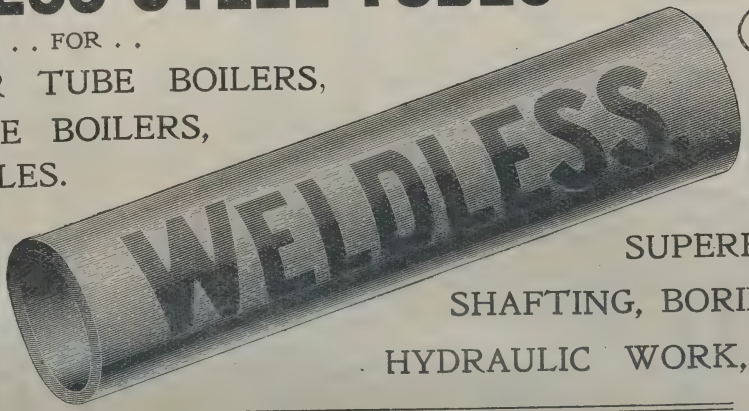
BUY FROM THE ORIGINAL MAKERS

. . OF . .

WELDLESS STEEL TUBES

. . FOR . .

WATER TUBE BOILERS,
LOCOMOTIVE BOILERS,
MOTOR AXLES.



W
TRADE MARK

SUPERHEATERS,
SHAFTING, BORING RODS,
HYDRAULIC WORK, &c., &c.

WELDLESS
TRADE MARK.

THE WELDLESS STEEL TUBE CO., LD.

F. 1458

Telegrams:—'STEEL WEDNESFIELD.'
Telephone:—1301-1302 WOLVERHAMPTON.

WEDNESFIELD, Nr. WOLVERHAMPTON.

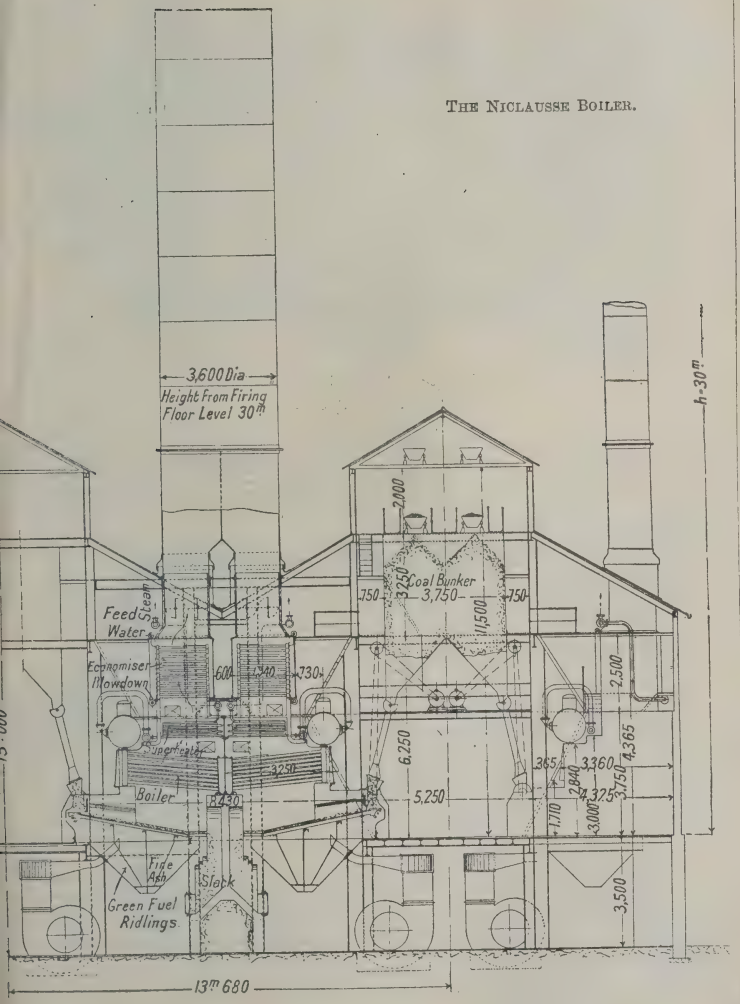


FIG. 58.

Arrangement of Niclausse Boilers, Stokers, Superheaters, and Economisers, in Power House Service.

the width only varying, according to the number of headers employed in proportion to the capacity.

The boilers may be placed back to back, since all parts can be withdrawn entirely from the front, consequently for modern power house equipments and large units the exceptionally compact arrangement shown in fig. 58 is attainable.

In cases as at Rotherham and Southend Electricity Works, where cast-iron economisers are used these can be arranged directly at the back of the boiler, as shown in fig. 58. The firm advocates, in preference to this, their integral type equipment, as at St. Pancras Electricity Works, comprising boiler with superimposed sectional superheater, and steel tube economiser, with forced draught stokers and induced draught short chimneys, as shown in fig. 59, the draught requirements being very moderate.

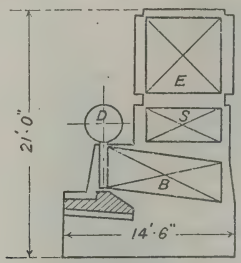


FIG. 59.

The arrangement, fig. 57, p. 1484, gives, for boiler with chain grate stoker, a normal production per square foot of ground space occupied of 95 lbs. of steam per hour from and at 212° F. For boiler, stoker, cast-iron economiser, chimney, and fan, a production of 53 lbs. can be obtained. The normal production per cubic foot of space occupied by the complete equipment is 3·5 lbs., taking overall dimensions.

The arrangement shown in fig. 59 gives a normal production of 130 to 150 lbs. per square foot of ground space occupied, depending upon the types of stokers employed.

The firm's latest high duty marine type boiler (see page 2020) is also applicable for land service. Test performances of this boiler (showing its high efficiency) were given in detail in the 'Engineer' of March 13, 1914, and in the Journal of the Institution of Mechanical Engineers, July, 1914.

THE CLARKE-CHAPMAN BOILER.

(Woodeson's Patent.)

The 'Woodeson' Patent Water-tube Boiler, as shown by fig. 60, is manufactured by Messrs. Clarke, Chapman & Co. Ltd., Gateshead-on-Tyne, and consists of three sections, each comprising steam drum, water drum, and a number of groups of tubes expanded into same; these tubes are nearly vertical and perfectly straight, and manholes are arranged on steel drums immediately over each group through which any tube can be withdrawn.

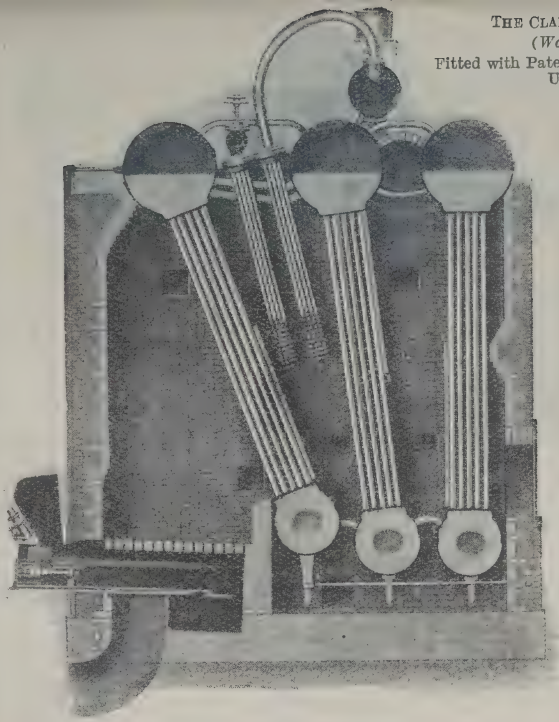
A spacious steam dome is arranged over the steam drums to ensure a supply of dry steam and to maintain a steady water level. The bottom drums are absolutely hanging so that expansion and contraction can take place without effecting any damage to boiler.

The boiler as shown is also fitted with a Clarke-Chapman Patent Superheater between the front and centre sections.


In the design of the 'Woodeson' boiler, a special feature is the ease of access for purposes of examination or repairs, the time which has to be expended on same being practically reduced to a minimum; thus in a boiler of say 6,100 square feet of heating surface, containing 456 tubes, the only work to be done to thoroughly examine the insides of this large number of tubes for their total length is the removal of the manhole door on one end of each bottom drum and one manhole door off each of the three steam drums: thus access can be gained to every tube, and these being perfectly straight they can be thoroughly examined for the whole of their length. The removing and replacing of the manhole doors can be done by an ordinary fireman, no skilled mechanic or complicated tools being required. There is an entire absence of screwed joints in the boiler.

Each tube being nearly vertical and perfectly straight and entering the steam drum direct without intervention of any headers, ensures a perfect steam release, and so adds to the efficiency of the boiler, as there are no sharp turns to retard flow of the steam globules to the steam space. Also, deposits are not retained in the tubes, but are collected in the large mud-drums: thus over-heating and destruction of tubes are reduced to a minimum.

THE CLARKE-CHAPMAN BOILER
(Woodeson's Patent).
Fitted with Patent Superheater and Stoker
Underfeed Type.



Front Elevation.

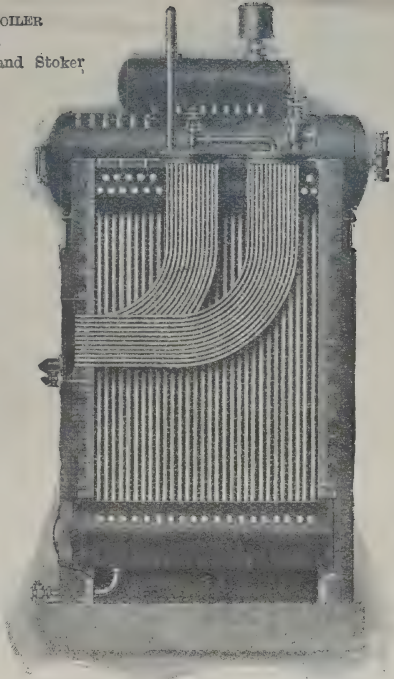

Side Elevation.
(Showing Superheater in position.)

FIG. 60.

THE STIRLING BOILER.

This boiler (fig. 61) consists of two or more steam drums connected by banks of tubes, 3½ ins. outside diameter, to one or more mud drums, the tubes being sufficiently curved to allow them to enter the drums radially. These curves, which are all to the same radius, while materially simplifying the manufacture of the boiler, provide as their main object against any evil results that might be caused by expansion or contraction.

All the upper drums are connected by steam-circulating tubes, but the front and middle drums only are connected by water-circulating tubes.

The tubes employed are of mild steel, and are subjected to a hydraulic test-pressure of 1,000 lbs. per square inch before leaving the maker's works.

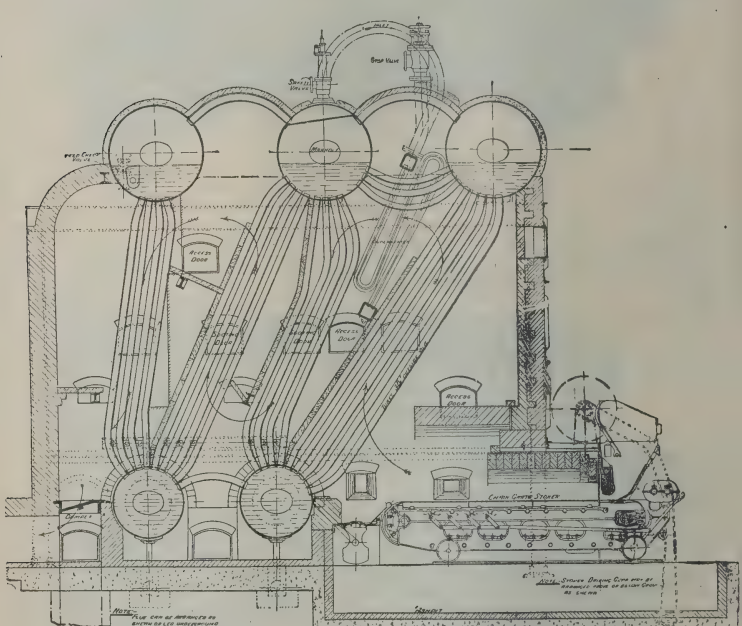


FIG. 61.

The drums are made of the best quality open-hearth boiler steel.

All portions of the boiler are circular in form, so that there can be no tendency to deformation of any part owing to internal pressure.

Each tube has a discharge outlet of its full area for the escape of the steam as generated, so obviating steam pocketing in the tubes, with its attendant risks of blistering, etc., whilst the circulation is rapid, free, and continuous.

The drums and banks of tubes are so arranged that the water in the steam drum, from which the steam supply is taken, is in a state of quiescence, ensuring an absence of priming and an unusually high dryness factor for the steam.

The feed water is introduced into the top rear steam drum, and practically throughout the whole course of its progress through the boiler is travelling in a direction opposite to that taken by the gases, thus securing a very efficient heat transfer throughout the whole surface of the boiler.

The boiler is entirely independent of the brickwork, the upper or steam drums being carried on a steel framework, while the mud drums are supported by the tubes from the upper drums and left free to allow for contraction and expansion.

PARTICULARS OF 25 STIRLING BOILERS, GIVING WEIGHTS.

Working Pressure, 160 Lbs. per Sq. In.

Evaporation in Lbs. per hour from and at 212° Fahr.	Heating Surface in Square Feet.	Grate Area in Square Feet.	Approximate Total Weight in Tons Packed for Shipment.	Space occupied over Brickwork.				Height from Floor Line to Centre of Stop Valve Outlet.	
				Width over Side Walls.		Length from Back to Front.			
				Ft.	Ins.	Ft.	Ins.	Ft.	Ins.
970	261	8·75	6·7	4	10	11	3	11	7
2,000	539	14	9·5	5	4	14	10	12	8
2,950	795	21	11·5	6	10	14	10	12	8
4,000	1,081	21	15·0	6	0	22	0	17	9
5,220	1,410	33	16·5	9	0	16	7	16	0
6,070	1,640	38·5	18·2	10	0	16	7	16	0
7,200	1,949	38·5	23·5	8	6	22	0	17	9
8,130	2,197	45·5	26·2	9	6	22	0	17	10
8,900	2,402	48·75	26·9	9	6	22	0	17	10
9,800	2,644	52·5	29·4	10	6	22	0	17	10
10,240	2,766	56·25	30·0	10	6	22	0	17	10
11,080	2,992	59·5	32·3	11	6	22	0	17	10
12,000	3,234	65	*29·0	10	6	22	3	20	10
13,000	3,513	70	36·9	13	0	22	0	17	11
15,160	4,096	80	*35·7	13	0	22	3	20	11
17,400	4,705	90	*41·6	14	6	22	3	21	0
19,820	5,357	96	*42·0	13	0	23	2	24	0
21,700	5,862	108	*46·4	14	6	23	2	24	0
23,300	6,294	120	*50·4	16	0	23	2	24	0
25,730	6,953	120	*52·0	16	0	23	2	24	1
28,250	7,633	144	*57·7	18	0	23	2	24	1
30,400	8,218	156	*62·2	20	0	23	2	24	1
33,600	9,079	168	*64·3	20	0	23	2	24	1
35,700	9,658	192	*68·7	22	0	23	2	24	1
39,500	10,675	204	*72·6	23	0	23	2	24	1

* These weights do not include furnace fittings.

The overall sizes of a Stirling boiler of a given heating surface can be arranged to suit varying conditions—e.g. a boiler to evaporate 7,000 lbs. of water per hour can be built to occupy from 12 to 20 ft. in height, 7 to 15 ft. in width, and 14 to 21 ft. in length. The boiler can therefore be adapted equally well for boiler-rooms with low ceilings and ample width as for those having little width but ample height.

A marine type of boiler is supplied for land work when the space available is limited.

Taking the average of a great number of tests on the Stirling boiler extending over a period of many years, the efficiency of the boiler runs out from 75 to 78 per cent.

This type of boiler will give satisfactory results with all classes of fuel, and it is much adopted for the utilisation of waste heat, whether in the form of blast-furnace gas, waste heat from coke ovens, heating and puddling furnaces, and the like. It is also largely employed on sugar estates abroad, fired with megass in special furnaces.

THE GALLOWAY FIVE-DRUM WATER-TUBE BOILER.

This is generally similar to the 'Stirling' type boiler, and has been designed for large units and high efficiencies. The arrangement is easy to keep clean internally.

The 'Thompson' Water-Tube Boiler.

('Sinclair' Patents.)

This boiler (fig. 62) consists of either two, four, six, or eight drums, one, two, three, or four at the top for steam and water, and a corresponding number at the bottom. Each series of drums is brought into communication one with the other by a number of short tubes, whilst large, straight tubes, set nearly vertically, connect the top drums with those at the bottom. By this means the water, which is fed into the boiler from the back of the steam and water

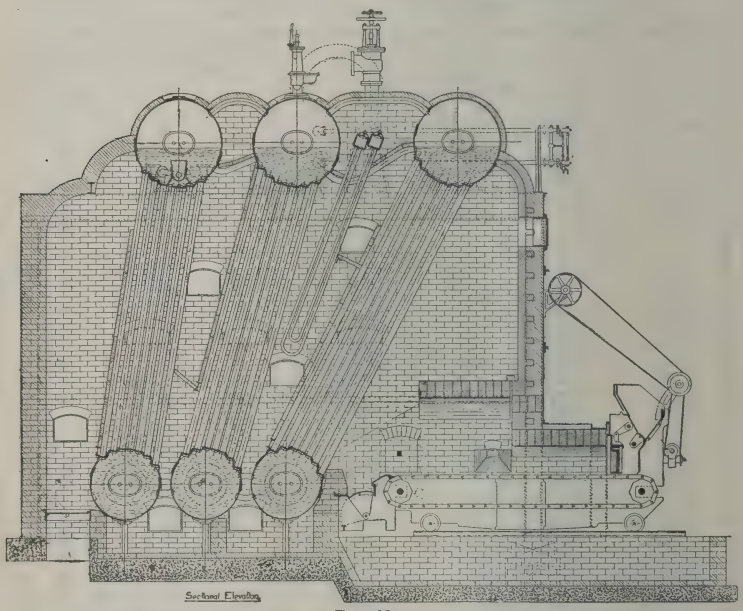


Fig. 62.

drums, passes down the back row of tubes, each of which has a discharge outlet equal to its full area, and thus affords a free, rapid, and continuous circulation which in its turn prevents the deposit of scale on the heating surface of the tubes.

The eight-drum type of boiler is known as the Integral Economiser Boiler, the back or fourth bank of tubes being the Economiser.

The drums (fig. 63), made of mild steel, are longitudinally divided into halves—that proportion which receives the tubes, being hydraulically pressed into a series of flats, forms a right-angled surface and bearing to each tube—consequently, each tube being in its own pocket, any breathing or leakage is obviated.

The following points are special features:—

1. *Tubes.*—The tubes are so arranged, as to spacing, that any one tube may be removed and replaced without in any way disturbing any others.

The tubes are all passed in and out of the boiler by way of the fire-door opening, thus saving the necessity for extra head room.

Each tube can be examined throughout its whole length by holding a lamp at one end.

2. *Drums.*—The steam and water-drums are of a large and ample capacity, so essential for the obtaining of dry steam.

Any scale that may be deposited in the boiler falls into the mud-drums at the bottom.

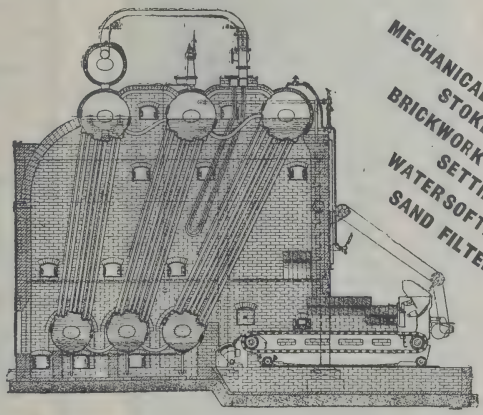
John Thompson . . .
Water Tube Boilers Ltd.

ETTINGSHALL, WOLVERHAMPTON, ENGLAND.

Telephones: 1138/9 W'ton. Telegrams: 'Watertube.'

GREATEST ECONOMY with HIGHEST EFFICIENCY

WATER TUBE BOILERS (Vertical Type)
STEEL CHIMNEYS
ECONOMISERS
STEAM RANGES




MECHANICAL STOKERS
BRICKWORK SETTINGS
WATER SOFTENERS
SAND FILTERS

Specialists in complete Boilerhouse Plant Extensions.

LONDON OFFICE:
WINDSOR HOUSE, KINGSWAY, W.C. 2.
'Phone: Regent 426.

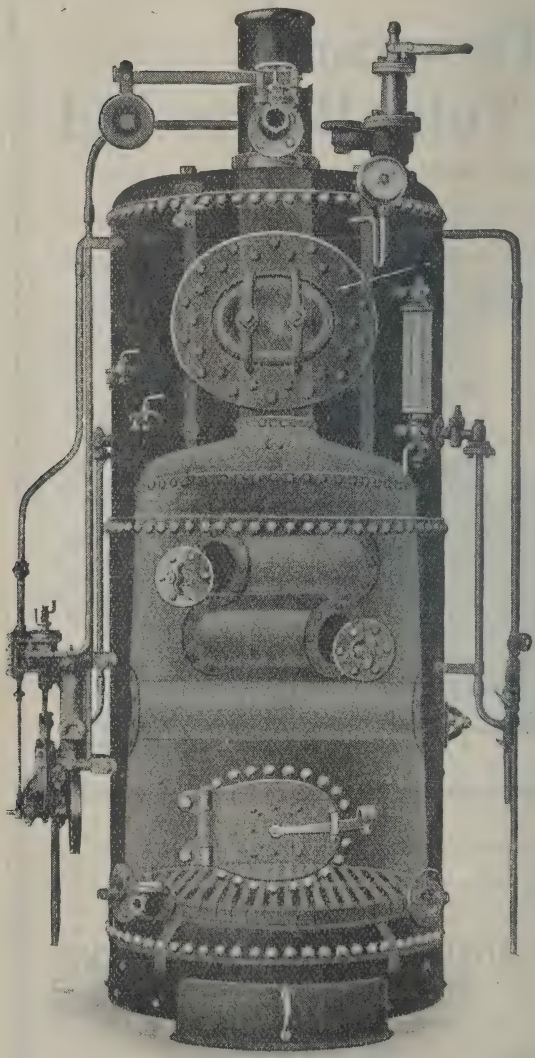AGENTS IN ALL COUNTRIES.



CRADLEY BOILER CO., LTD.

Cradley Heath,
Near
BIRMINGHAM, ENGLAND.

Tel. Address :
'Boiler, Cradley Heath.''
Telephone :
Cradley 53.

Manufacturers of
All Types of Land & Marine Boilers.

Our Speciality :
VERTICAL CROSS-TUBE BOILERS.
All sizes in stock or progress for early delivery.

F. 1491

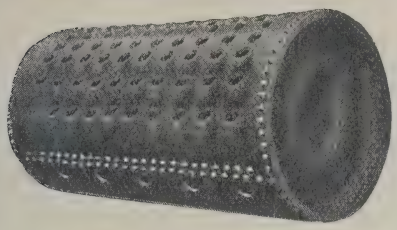


FIG. 63.

3. *Boiler.*—The boiler is suspended from steel girders which rest on steel columns based in cast iron; it is thus entirely independent of the brickwork, ensuring freedom for expansion in every part, and enabling the brickwork to be removed and replaced, if necessary, without in any way disturbing the boiler or its connections.

The largest size of these boilers can be cleaned and restarted in full work within the period of three days, there being only six manhole joints to be made.

PARTICULARS OF 25 'THOMPSON' WATER-TUBE BOILERS, VERTICAL TYPE. GIVING WEIGHTS.

Working Pressure, 150 *lbs. per sq. in.*

Evaporation per Hour from and at 212° Fahr.	Heating Surface.	Grate Area.	Approximate Total Weight Packed for Shipment.	Space Occupied Over Brickwork.		Height from Floor Line to Centre of Stop Valve Outlet.
				Width over Side Walls.	Length from Back to Front.	
Lbs.	Sq. Ft.	Sq. Ft.	Tons.	Ft. Ins.	Ft. Ins.	Ft. Ins.
1,760	450	9	8·4	4 6¾	16 3	14 6½
2,150	552	11·04	10·0	5 2¾	17 3	16 7½
3,100	796	15·92	12·2	6 4½	16 3	14 7½
4,000	1,028	20·56	15·8	7 7	16 3	14 8½
5,400	1,384	27·68	17·4	8 10½	17 3	16 8½
6,450	1,656	33·12	19·2	10 0¾	17 3	16 8½
7,600	1,949	38·98	21·6	11 3¼	17 3	16 8½
8,450	2,164	43·28	22·9	11 3¼	18 9	18 11½
9,450	2,419	48·38	24·5	11 10½	18 9	19 0½
10,050	2,575	51·5	26·5	10 0¾	24 5	18 0½
10,550	2,704	54·08	26·8	8 10½	25 2	21 0½
11,730	3,006	60·12	28·6	11 3¼	24 5	18 0½
12,630	3,239	64·78	28·0	10 0¾	25 2	21 0½
13,680	3,507	70·14	32·2	10 8	25 2	21 1½
15,850	4,056	81·12	33·2	11 10½	25 2	21 1½
17,800	4,557	75·9	*36·8	11 3¼	25 2	24 1½
20,150	5,163	103·3	36·0	14 11½	25 2	21 2¾
23,000	5,897	98·3	*40·4	14 4¼	25 2	24 2¾
25,500	6,535	108·9	*42·0	15 6¾	25 2	24 2¾
26,800	6,857	114·3	*43·8	16 2	25 2	24 3½
29,300	7,508	125·1	*49·4	17 4½	25 2	24 3½
31,850	8,164	136·1	*53·0	18 7	25 2	24 4
35,600	9,114	151·2	*55·2	20 4¾	25 2	24 4
38,200	9,800	163·4	*59·0	21 7¼	25 2	24 4
42,000	10,775	179·6	*62·6	24 1	25 2	24 4

* These weights do not include furnace fittings.

THE BABCOCK & WILCOX PATENT WATER-TUBE BOILER.

STANDARD LAND TYPE.

The structure of this boiler (figs. 64, 65), composed entirely of wrought steel, may be practically considered as having three distinct parts, namely:

A series of inclined water tubes placed over the furnace, in which the water, being divided into small volumes, is quickly raised to a high temperature and rises, at the front end, through vertical connecting boxes or headers (into which the tubes are expanded).

A horizontal steam and water drum, up to which the water rises from the headers, and where the steam separates from the water, the remaining body of water returning through the vertical tubes and headers at the back end into the inclined water-tubes, where it is again subjected to the action of the fire, and again passes into the steam and water drum; thus, a continuous and rapid circulation is kept up, and a uniform temperature maintained throughout the boiler.

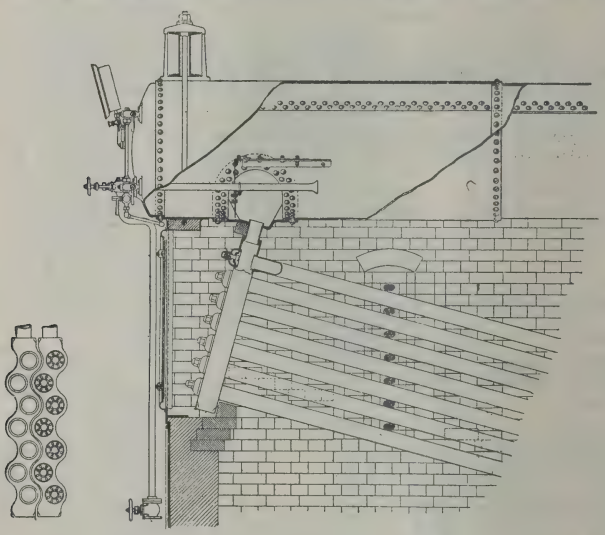


FIG. 64.—Vertical Section showing details.

A *mud-collector* is attached to the lowest point of the inclined water-tubes, into which the matter held in suspension in the water is, to a large extent, precipitated by its specific gravity.

The inclined water-tubes are of steel and the headers at each end into which they are expanded are sinuous (or staggered) and of mild steel, each complete section consisting of one zigzag row of tubes, expanded into a rear and front header. The headers are provided with handholes placed opposite the ends of each tube to permit of cleaning, and, in case of need, the removal of a tube, each handhole being provided with a cap fastened with a wrought steel bolt and clamp and a cap nut, the handhole covers being placed metal to metal. The top ends of each section are connected to the steam and water drum, not directly, but are first expanded into specially designed cross-boxes, which in turn are riveted to and extend from the underside of the drum at each end. The steam and water drum is made of the best selected mild steel double riveted for ordinary purposes; the mud drum is made of mild steel, and is provided with ample facilities for cleaning.

The entire boiler, except the furnace, is suspended by wrought iron slings, from iron girders resting on wrought iron columns, to allow the boiler to expand or contract without straining the brickwork. The boiler and furnace are enclosed in masonry lined with firebrick, the furnace being arranged below the tubes, and firebrick baffles compel the hot gases to pass upwards, then downwards, then upwards again before escaping to the chimney. These hot gases strike the tubes at right angles, thus intercepting the radiant heat from the fuel as effectively as possible; the tubes being zigzagged, the gases are thoroughly broken up as they rise, and, passing into the



BY APPOINTMENT
to His Majesty the KING.

PURVEYORS
OF
BOILERINE



BY APPOINTMENT
to Her Majesty
QUEEN ALEXANDRA.

THE SAFEST AND BEST CURE FOR SCALE

And kindred Boiler Troubles.

BOILERINE Cures Fur

Overcomes Corrosive Feed-waters.

Is formulated on Water Analysis.

Laboratory Grade marked on Barrels and Drums.

Entirely soluble in Water, cannot choke Injectors.

Renders Carbonic Acid inactive by absorbing it.

It does not affect the purity of Steam.

Neutralises Grease, Acids, and resists Pitting.

Eminent Analysts have certified its purity.

SUITABLE FOR USE IN ALL STEAM BOILERS.

It has no harmful effects on Boiler joints or fittings, and is free from acids, and does not injure the metals used in the construction of boilers. It does not cause priming.

BOILERINE LIMITED (Hydrological Chemists)
(Incorporated 1908 with Employees' Co-Partnership).

THE LABORATORIES, LONDON, S.E. 15, ENGLAND,
Also at UNION BANK CHAMBERS, SOUTHAMPTON.
JAMES W. G. ROSS, Governing Director.

Sole Agents for India: **MARSHALL SONS & CO. (INDIA) LTD.,**
Engineers and Boiler Manufacturers,
CALCUTTA, BOMBAY, LAHORE and MADRAS.

BABCOCK & WILCOX
PATENT LTD.

WATER-TUBE STEAM BOILERS.

14,400,000 H.P. LAND TYPE for LAND PURPOSES.

7,000,000 H.P. MARINE TYPE AFLOAT

SUPPLIED OR ON ORDER.

BABCOCK & WILCOX Boilers can be arranged to burn any kind of fuel.

MARINE-TYPE BOILERS
FOR LAND PURPOSES.

PORTABLE BOILERS
FOR EASY TRANSPORT.

BABCOCK & WILCOX also manufacture

- Steam Superheaters.
- Mechanical Stokers.
- Feed-Water Heaters.
- Economisers.
- Steel Chimneys.
- Structural Steel Work.
- Electric Cranes and Charging Machines.
- Oil-driven Cranes.
- Water Softeners and Purifiers.
- Steel Piping Plants.
- Coal and Ash Conveyors.
- Suction Ash Plants.
- Liquid Fuel Appliances.
- Patent Boat Davits.
- Boiler House Accessories.

ALSO MAKERS OF 'EXPRESS' TYPE LIGHT-WEIGHT BOILERS.

Telegrams: Babcock, Cent, London. **Head Offices:** Telephone No.: CITY 6470 (8 *Lines*).

ORIEL HOUSE, FARRINGDON STREET,

LONDON, E.C. 4.

Principal Works: RENFREW, SCOTLAND.

Branch Works: Dumbarton, Scotland; Oldbury, England; also in Italy, Australia and Japan.

F. 1493

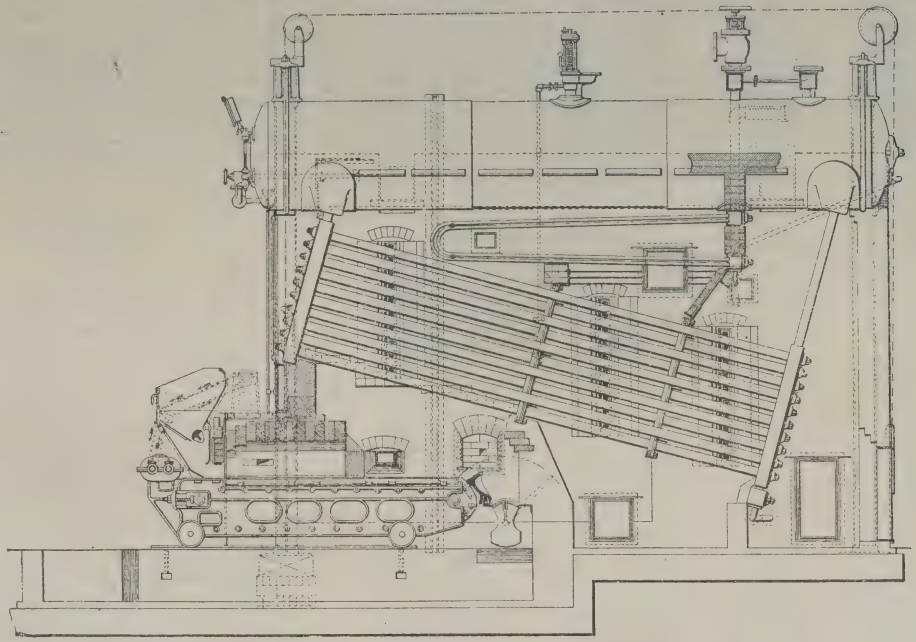


FIG. 65.—Boiler fitted with Superheater and Stoker.

combustion chamber under the drum, they expand and combine before again passing the second and third time through the tubes and on to the flue; thus complete combustion, rapid steaming, and consequent economy are secured.

The damper for regulating the draught and flow of the gases is placed in the back chamber, whilst doors for cleaning the tubes and removing soot are placed on one side of the brickwork.

A comparison of space is afforded by a new electricity works, where six Lancashire boilers, evaporating 48,000 lbs. of water per hour, are placed beside four Babcock & Wilcox boilers of the above type, evaporating 40,000 lbs. of water per hour under the same conditions. The ground space occupied by each range of boilers is in the ratio of 10 for Lancashires to 4½ for Babcock & Wilcox boilers.

CROSS-TYPE BOILER.

The general construction of this form of boiler is the same, but the drum is placed transversely, instead of longitudinally, with the tubes, and the whole boiler is constructed in pieces of comparatively light weight suitable for transport in countries where ordinary means of carriage are not available.

PORTABLE BOILER.

This form is similar to the last described, but is still further sectionalised in the drum portion, which is arranged to be riveted up on site. The boiler is also provided with an iron casing lined with firebrick, and is thus self-contained and independent of the brickwork. This type is also used for countries where transport and facilities in the matter of construction are not available.

In addition to the above types, the boilers are arranged with special furnaces for burning sawdust, lignite, rice husks, bagasse, coke breeze, refuse, coal, gas, and oil fuels.

MARINE TYPE BOILER.

In general construction this boiler (see Section XXXIII) is similar to the foregoing, but with the steam and water drum placed transversely and brought to the front. The principal difference between this boiler and those already described is the largely increased grate area, enabling the boiler to give a greatly increased evaporation per square foot of heating surface compared with the other types.

The 'C T' marine type of boiler, of large evaporative capacity, is fitted with a superheater, chain-grate stoker, and superposed economiser, for evaporating up to 120,000 lbs. of water per hour.

ACTUAL PERFORMANCES WITH BABCOCK AND WILCOX MARINE BOILERS.

(*Date of Trial, June* 1910.)

Heating surface in sq. ft.	2,571					
Firebar surface in sq. ft.	57·89					
Kind of fuel used	Pocahontas hand-picked.					
Duration of trial—hours	24·06	24·5	24	24	6	3
Amount of draught in stokehole, inches of water	—	—	1·41	1·95	1·78	3·0
Average observed gauge pressure, lbs. per sq. in.	202	201·4	202·8	201·6	200·6	200·4
Average observed temperature of water fed to boiler	211·6	211·4	207·8	204·1	200·9	194·4
Pounds coal consumed per sq. ft. grate per lb.	15·22	24·81	35·48	41·53	43·81	70·24
Pounds water evaporated per sq. ft. heating surface from and at 212° F.	3·88	6·43	9·53	10·52	10·52	14·76
Pounds water evaporated per sq. ft. firebar surface from and at 212° F.	172	286	401	468	467	656
Pounds of water evaporated per lb. of coal per hour (actual)	10·76	10·95	10·71	10·64	10·09	8·77
Pounds of water evaporated from and at 212° F.	11·32	11·52	11·3	11·26	10·67	9·37
Number of boilers	1	1	1	1	1	1

The Howden Boiler

This boiler (*The Howden Boiler Co.*), fig. 66, combines an evaporation from plate surfaces, as in ordinary boilers, with that from water-tubes. One boiler may consist of one, two, three, four, or more elements, all parts being made to standard gauges. By the removal of eight manhole doors, the whole of the internal working parts of the boiler, that is top and bottom drums and tubes, are at once open for examination and cleaning when necessary. All the tubes being short and straight, they can all be examined in each element in a few minutes. For outside

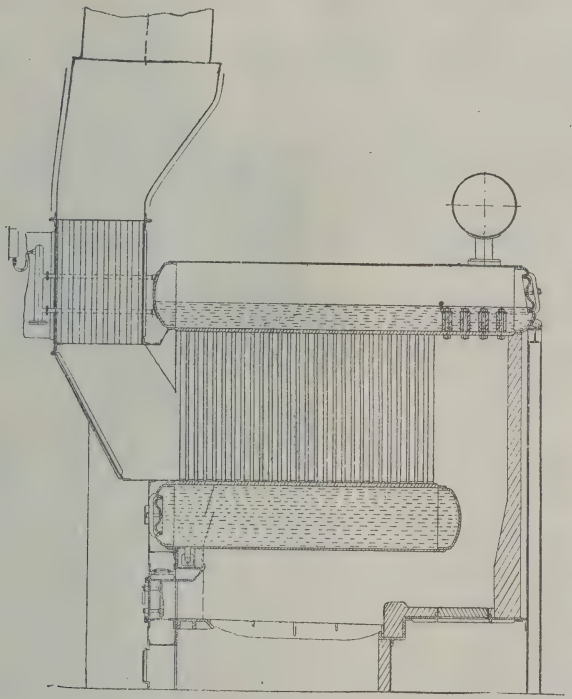


Fig. 66.

examination the side portable doors can be quickly opened or removed, also the smokebox doors, and, further, the combustion chambers are accessible by manholes from their under side, from which the back end tubes can be examined.

All the parts of the boiler when working are under an equal heat, that is, there are no parts hotter and others colder as in cylindrical multitubular boilers or ordinary water-tube boilers, and in raising steam from cold water all parts are brought under heat at same time, thus relieving the boiler from all unequal strains.

The design of the boiler gives it, all over, a rapid positive natural circulation without any piping or other adjuncts, and it is further self-cleansing internally in its water tubes, and likewise in the drums where the water is in a continued rapid circulation all over the surfaces exposed to the hot fire gases.

A No. 1 four-element boiler is capable of evaporating 20,000 lbs. of water per hour from a grate surface of 54 sq. ft., with a good bituminous Scotch steam coal, and a total heating surface of 3,125 sq. ft., under a steam pressure of 200 lbs. from a low temperature of feed water.

The 'Spencer-Hopwood' Patent Boiler.

This, a vertical boiler with inclined water-tubes (manufactured by *Messrs. Spencer-Bonecourt, Ltd., London and Hitchin, Herts.*), has the tubes spread immediately over the fire, making it extremely rapid in steam raising; 100 lbs. pressure per square inch can be obtained from cold water in the boiler in thirty-five minutes from the time of lighting the fire. A number of man-doors of the McNeil type are provided opposite both ends of the nest of tubes, giving easy access to them and also to the entire interior of the boiler for cleaning and renewal purposes.

The standard 'Spencer-Hopwood' patent boiler will evaporate from 50 to 100 per cent. more steam than a vertical cross-tube boiler of the same dimensions.

This boiler is also made in a squat pattern for use where head room is limited, and most modern railway breakdown cranes are fitted with it.

Recently a new and improved 'Spencer-Hopwood' patent boiler has been put on the market, having a much deeper nest of tubes than in the standard pattern, resulting in a higher thermal efficiency and still smaller space required for the output. In the smaller sizes this is done by arranging the major axes of the manholes in a vertical direction instead of the usual horizontal one, and using more than two, thus deepening the nest of water-tubes 33 per cent. In the larger sizes there are two or three rows of manholes which enables the nest to be deepened as much as 300 per cent. Further, by the use of more than two manholes per row of manholes, the width of the tube nest can be increased to anything desired, enabling these boilers to be made up to 8 ft. 6 ins. diameter and over, to evaporate up to 10,000 lbs. of steam from and at 212° F. per hour, so that they can be installed to do the work of a Lancashire boiler and to give as high an efficiency, without the floor space, without the brick setting, without the chimney, and without the necessity of taking hours to raise steam.

Where superheated steam is required, a superheater can be supplied for all sizes, that for the small sizes being arranged in the uptake, and that for the large sizes arranged in the centre of the deep water-tube nest.

Evaporation of 'Spencer-Hopwood' Patent Boilers.

Standard Pattern for General Purposes.						Squat Pattern for Railway Breakdown Cranes and other Purposes where Headroom is limited.					
Number of Boiler.	Evaporation lbs. per hour. Natural Draught.	Evaporation lbs. per hour. Induced Draught.	Height.	Diameter.	Approximate Weight.	Number of Boiler.	Evaporation lbs. per hour. Natural Draught.	Evaporation lbs. per hour. Induced Draught.	Height.	Diameter.	Approximate Weight.
			Ft. Ins.	Ft. Ins.	Cwts.				Ft. Ins.	Ft. Ins.	Cwts.
2	261	300	5 3	2 6	18	2	257	320	4 0	2 6	17
3	376	480	6 3	2 9	21	3	336	460	4 6	2 9	19½
4	453	550	6 6	3 0	25	4	418	550	4 9	3 0	24
5	537	650	6 9	3 3	32	5	480	600	5 0	3 3	26½
6	625	760	7 6	3 6	36	6	545	690	5 0	3 6	29
8	748	960	8 0	3 9	44	8	656	880	5 6	3 9	34½
10	903	1,160	9 0	4 0	52	10	736	970	6 0	4 0	39½
12	1,053	1,360	9 9	4 3	60	12	867	1,160	6 9	4 3	49
16	1,400	1,940	10 9	4 9	77	14	1,055	1,500	7 6	4 6	56
20	1,850	2,750	11 6	5 3	115	16	1,235	1,800	8 3	4 9	70
24	2,680	3,640	12 0	6 0	130	18	1,400	2,100	9 0	5 0	85
28	3,700	5,100	12 6	7 0	187	20	1,550	2,300	9 0	5 3	94
32	4,900	6,700	12 6	8 0	270	22	1,700	2,500	9 0	5 6	100

The evaporations given are based on actual tests with 5 ft. of chimney only, feed water at 212 deg. F., steam at 100 lbs. pressure per square inch, and good steam coal.

Induced draught is obtained from a steam jet included with the boiler mountings.

The new deep nest pattern will exaporate from 20 per cent. to 25 per cent. more steam than the standard pattern of the same diameter.

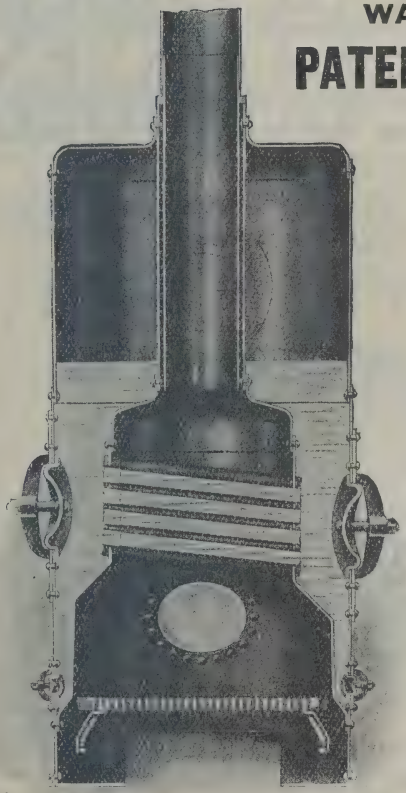
These boilers fired with oil evaporate 25 per cent. to 30 per cent. more than they do when fired with coal.

The Yarrow Water Tube Boiler.

This well-known boiler, which has been widely adopted in marine practice, is now being developed for land work. Several installations for land purposes have already been made, including one unit of about 11,000 square feet total heating surface, for a power station on the Tyne.

'SPENCER-HOPWOOD'

WATER-TUBE PATENT BOILERS.



Standard Squat & Launch Patterns.

Advantages.

Easy to clean.
Economical.
Rapid Steaming.
No leakage troubles.
No long chimney necessary.

Patentees and Sole Makers—

SPENCER-BONECOURT LTD.

Parliament Mansions, Victoria Street, London, S.W. 1.

Telephone: VICTORIA 5563. Telegrams: BONECOURT, PHONE, LONDON.

Works: HITCHIN, HERTS.

Telephone: HITCHIN 5. Telegrams: ENGINE, HITCHIN.


F. 1493

"EUREKA"
GAUGE GLASSES

ESTABLISHED 1853.

Makers of the New S.H.P. Gauge Glass for Special High-Pressure Boilers.

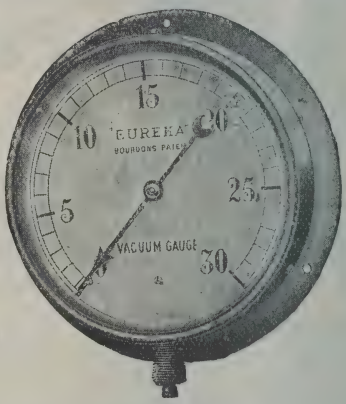MAKERS OF STEAM GAUGES.



PRESSURE AND INDICATING GAUGES OF ALL DESCRIPTIONS

JOSEPH TOMEY & SONS, Ltd.,
Aston, BIRMINGHAM.

This installation marks a distinct advance in power station boiler plant, and it is hoped to give details of its working in a subsequent issue.

See also Section XXXIII.

Life of Boilers.

Lancashire and Cornish boilers last about 30 years, although there are cases in which Lancashire and Galloway boilers (with dirty, but not very scaly, water) have lasted for 50 years. Water-tube boilers (subject to a good deal of re-tubing) may be taken to last 20–25 years. Marine boilers, if properly treated and taken care of, should last at least 20 years under forced draught, and 25 years under natural draught.

The life of any boiler depends, naturally, upon the degree of care with which it is handled.

BOILER FITTINGS.

SAFETY VALVES.

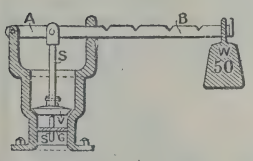


FIG. 67. B, lever; A, short arm of lever; SS, stem; V, valve; G, guide; W, weight.

To find the Weight necessary to put on a Lever, when the Area of Valve, Pressure, &c., are known.

If A = area of valve in sq. ins., P = pressure in lbs. per sq. in., l_1 = distance of valve from fulcrum, l_2 = length of lever, w_1 = weight of lever in lbs., l_3 = distance of centre of gravity of lever from fulcrum, w_2 = weight of valve and stem in lbs.

Then W, the weight required at the end of the lever,

$$= \frac{P \times A \times l_1 - w_1 \times l_3 - w_2 \times l_1}{l_2}.$$

SAFETY VALVE AREAS.

Since the steam production of a boiler is sensibly the same at all pressures, and since the density of steam increases very nearly as the pressure, and since steam escapes at an outlet at practically constant volume, it appears that safety valves, like boiler stop valves, may be reduced in size as pressure increases. Ordinary valves have a very small lift. Special valves in which the steam reaction is utilised to increase the lift will give a much greater opening. If a valve lift a height equal to a fourth of its diameter the area of opening is equal to the valve area, and no greater lift would give greater output.

It is not sufficiently well known that boilers working at a low pressure require larger safety-valves than boilers at a high pressure. Thus, for example, a boiler working at 15 lbs. by the steam gauge requires three times the area of safety valve opening that is required by a boiler at 75 lbs. This is the more important when it is remembered that in a boiler which is safe only at low pressure, an additional 15 lbs. pressure doubles the strain, whilst in the boiler at 75 lbs. a rise of 15 lbs. adds but a fifth to the stress on the plates. This point as to the safety-valves on old low-pressure boilers is too little known or recognised.

Safety-valve areas should be inversely as the absolute pressure.

In well-proportioned dead-weight safety valves it is usually expected that if a pressure of 60 lbs. per sq. in. opens the valve, a pressure of 70 lbs. will keep it sufficiently open for the escape of all the steam produced.

For the rules applicable to safety valves, see 'Standard Conditions for Marine Boilers,' p. 1416.

The former Board of Trade rules are largely followed, and as they are more detailed, bringing out many points of importance, extracts are given below, also extracts from the rules of Lloyd's and Bureau Veritas.

BOARD OF TRADE RULES FOR SAFETY VALVES.

The area per square foot of fire-grate surface of the locked-up safety valves for boilers with natural draught should not be less than that given in the table (page 1499) opposite the boiler pressure intended, but in no case should the valves be less than 2 ins. in diameter.

When ascertaining the fire-grate area, the length of the grate should be measured from the inner edge of the dead plate to the front of the bridge, and the width from side to side of the furnace on the top of the bars at the middle of their length.

[*Note.*—The table corresponds to the formula $A = \frac{37 \cdot 5}{P + 15}$, where A = safety-valve area in sq. ins. per sq. ft. of grate, and P = pressure in lbs. per sq. in.]

Where forced draught is used, the area should not be less than $\frac{A}{20} \times$ estimated coal consumption in lbs. per hour per sq. ft. of grate.

The safety valves should be fitted with lifting gear, so arranged that the two or more valves on any one boiler can at all times be eased together, without interfering with the valves on any other boiler. The lifting gear should in all cases be arranged so that it can be worked by hand either from the engine-room or stoke-hole.

Care should be taken that the safety valves have a lift equal to one-fourth their diameter; that the openings for the passage of steam to and from the valves, including the waste-steam pipe, have each an area not less than the area according to the table; and that each valve box has a drain pipe fitted at its lowest part.

In the case of lever valves, if the holes in the lever are not bushed with brass, the pins must be of brass; iron and iron working together must not be used.

Too much care cannot be devoted to seeing that there is proper lift, also that free means of escape for the waste steam are provided, as it is obvious that unless the means for escape of the waste steam are ample, the effect is the same as reducing the area of the valves or putting an extra load upon them. The valve seats should be secured by studs and nuts.

At least two valves should be fitted to each boiler.

The springs and valves must be so cased in that they cannot be tampered with.

Provision must be made to prevent the valves flying off in case of the springs breaking.

The requisite safety-valve area must be cased in and locked up in the usual manner of the Government valves.

The size of the steel of which the springs are made must be in accordance with that found by the following formula.

$$d = \sqrt[3]{\frac{L \times D}{C}}.$$

Where,

L = the load on the spring, in pounds:
D = the diameter of the spring—from centre to centre of wire—in inches.
d = the diameter, or side of square, of the wire, in inches:
C = a constant, being 8,000 for round and 11,000 for square steel.

The springs must be protected from the steam and impurities issuing from the valves.

When valves are loaded by direct springs, the compressing screws must abut against metal stops or washers, when the loads sanctioned by the surveyor are on the valves.

The springs must have a sufficient number of coils to allow a compression under the working load of at least one quarter the diameter of the valve.

Spring-loaded valves are tested under full steam and full firing for at least twenty minutes with the feed-water shut off and stop-valve closed.

When the valves are of novel design, and the accumulation of pressure exceeds 10 per cent. of the loaded pressure, the case has to be specially reported upon by the surveyor.

Lloyd's Rules and Regulations for Safety Valves.

Two safety valves to be fitted to each boiler, and loaded to the working pressure in the presence of the surveyor. In the case of boilers of greater working pressure than 60 lbs. per square inch, the safety valves may be loaded to 5 lbs. above the working pressure. If common valves are used their combined areas to be at least half a square inch to each square foot of grate surface. If improved valves are used, they are to be tested under steam in the presence of the surveyor; the accumulation in no case to exceed 10 per cent. of the working pressure.

An approved safety valve also to be fitted to the superheater.

In winch boilers one safety valve will be allowed, provided its area be not less than half a square inch per square foot of grate surface.

Each valve to be arranged so that no extra load can be added when steam is up, and to be fitted with easing gear which must lift the valve itself. All safety-valve spindles to extend through the covers and be fitted with sockets and cross handles, allowing them to be lifted and turned round in their seats, and their efficiency tested at any time.

Bureau Veritas Rules and Regulations for Safety Valves.

At least two spring safety valves of an approved design must be fitted to each main boiler. The total area of the safety valves is given by the formula

$$A = \frac{8{\cdot}7}{\sqrt[3]{(P - 18)^3}}$$

where,

A = sectional area of safety valve in sq. ins. per sq. ft. of grate surface; P = working pressure in lbs. per sq. in. No safety valve to be less in diameter than 1¼ in.

When forced draught or oil fuel is provided for, the area is to be increased in proportion to the increased evaporative power of the boilers.

Suitable arrangements and gear to be fitted in connection with the safety valves, whereby they may be lifted from the deck as well as from the stoke-hole floor.

ROYLES LIMITED,

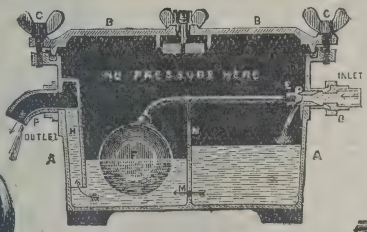
IRLAM, NEAR MANCHESTER.

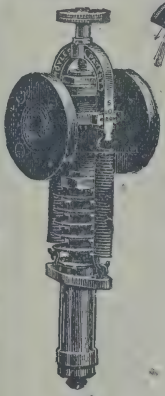
Telegrams: 'ELYOR, CADISHEAD.' Telephone: 68 URMSTON, MANCHESTER.

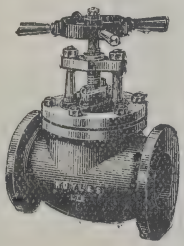
LONDON:
Suffolk House, E.C.

GLASGOW:
32 Robertson St.

NEWCASTLE:
26 Grey St.








'SYPHONIA'
(Reg. Trade Mark)
STEAM TRAPS.
OVER 175 000 IN USE.

Reducing Valves, Stop Valves, Wedge Valves, Steam and Hydraulic.

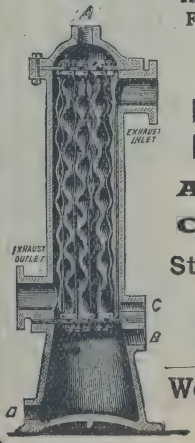
RECEIVERS AND PUMPS
For Returning Condensation to Boilers.



Row's Patent
FEED-WATER HEATERS.
AIR HEATERS.
CALORIFIERS.

Steam and Gas Kettles.

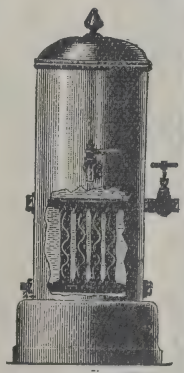
BOILING BATTERIES,
Twice as efficient as Coils.



We Catch Units of Heat.
If you have any waste heat we shall be pleased to advise.

Row's Patent
STEAM KETTLES
Copper Bodies, all water surfaces tinned.

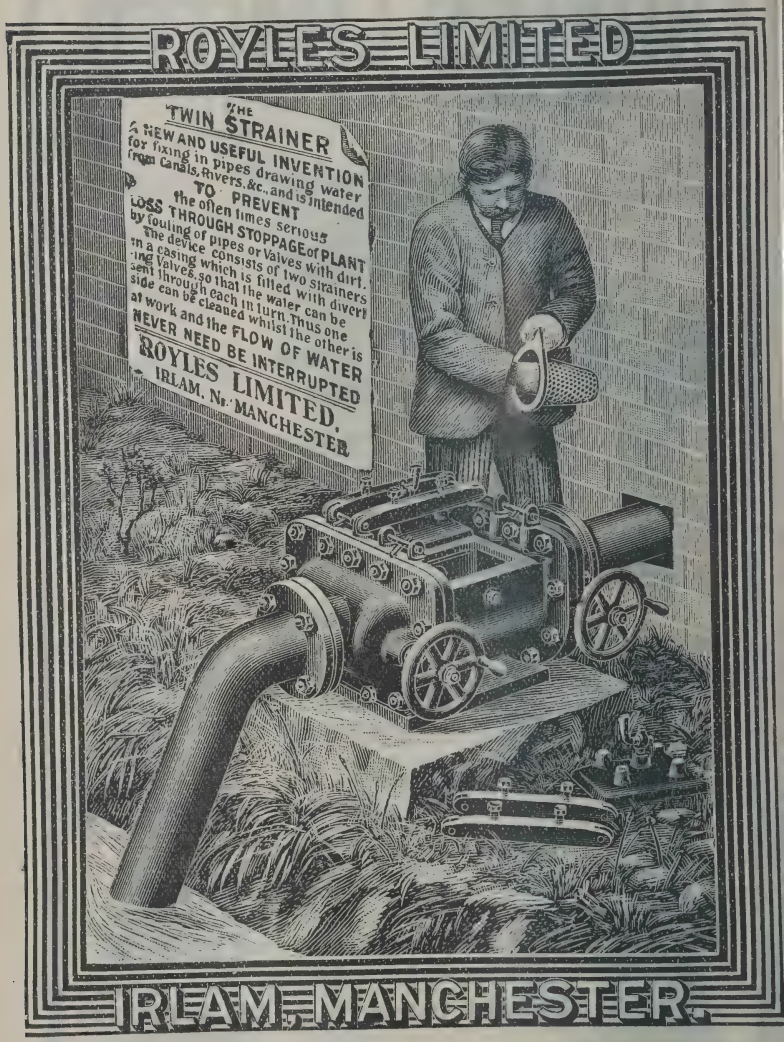ROYLES LIMITED



IRLAM, MANCHESTER.

BOARD OF TRADE RULES AND REGULATIONS FOR STEAMSHIPS.

SAFETY-VALVE AREAS. (*Abridged Table.*)

Boiler Pressure.	Area of Valve per Square Foot of Fire-grate.	Boiler Pressure.	Area of Valve per Square Foot of Fire-grate.	Boiler Pressure.	Area of Valve per Square Foot of Fire-grate.	Boiler Pressure.	Area of Valve per Square Foot of Fire-grate.
Lbs.	Sq. Ins.	Lbs.	Sq. Ins.	Lbs.	Sq. Ins.	Lbs.	Sq. Ins.
15	1·250	62	·487	109	·302	156	·219
16	1·209	63	·480	110	·300	157	·218
17	1·171	64	·474	111	·297	158	·216
18	1·136	65	·468	112	·295	159	·215
19	1·102	66	·462	113	·292	160	·214
20	1·071	67	·457	114	·290	161	·213
21	1·041	68	·451	115	·288	162	·211
22	1·013	69	·446	116	·286	163	·210
23	·986	70	·441	117	·284	164	·209
24	·961	71	·436	118	·281	165	·208
25	·937	72	·431	119	·279	166	·207
26	·914	73	·426	120	·277	167	·206
27	·892	74	·421	121	·275	168	·204
28	·872	75	·416	122	·273	169	·203
29	·852	76	·412	123	·271	170	·202
30	·833	77	·407	124	·269	171	·201
31	·815	78	·403	125	·267	172	·200
32	·797	79	·398	126	·265	173	·199
33	·781	80	·394	127	·264	174	·198
34	·765	81	·390	128	262	175	·197
35	·750	82	·386	129	260	176	·196
36	·735	83	·382	130	·258	177	·195
37	·721	84	·378	131	·256	178	·194
38	·707	85	·375	132	·255	179	·193
39	·694	86	·371	133	·253	180	·192
40	·681	87	·367	134	·251	181	·191
41	·669	88	·364	135	·250	182	·190
42	·657	89	·360	136	·248	183	·189
43	·646	90	·357	137	·246	184	·188
44	·635	91	·353	138	·245	185	·187
45	·625	92	·350	139	·243	186	·186
46	·614	93	·347	140	·241	187	·185
47	·604	94	·344	141	·240	188	·184
48	·595	95	·340	142	·238	189	·183
49	·585	96	·337	143	·237	190	·182
50	·576	97	·334	144	·235	191	·181
51	·568	98	·331	145	·234	192	·181
52	·559	99	·328	146	·232	193	·180
53	·551	100	·326	147	·231	194	·179
54	·543	101	·323	148	·230	195	·178
55	·535	102	·320	149	·228	196	·177
56	·528	103	·317	150	·227	197	·176
57	·520	104	·315	151	·225	198	·176
58	·513	105	·312	152	·224	199	·175
59	·506	106	·309	153	·223	200	·174
60	·500	107	·307	154	·221		
61	·493	108	·304	155	·220		

WATER GAUGES.

The breakage of a water-gauge glass in high-pressure steam boilers is fraught with danger, especially in places where the attendants are working in confined places from which it is difficult for them to escape, and any appliance which prevents the serious consequences arising from this cause is one of the most important and desirable safety fittings that can be attached to a steam boiler.

WINN'S ASBESTOS-PACKED WATER GAUGE.

(Patent.)

In Winn's Patent 'Reliable' Asbestos-packed complete Automatic Water Gauge (fig. 68), when the glass breaks, automatic valves in both top and bottom arms instantly close, and shut off the water and steam. Both top and bottom arms can be blown through for cleaning, the

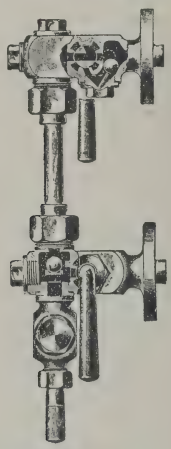


FIG. 68.

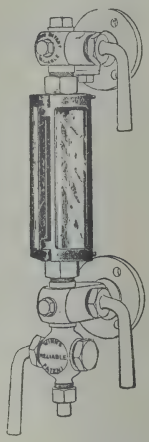


FIG. 69.

automatic valves in no way interfering with this operation; also, clearing-rods can be passed through the passages into the boiler unobstructed. The automatic valves cannot cause false water level to be shown. *(Charles Winn & Co., Ltd.)*

WINN'S GAUGE-GLASS PROTECTOR.

(Patent.)

Winn's Patent Reliable Gauge-glass Protector (fig. 69) is formed in halves hinged at the front, and is thus readily attached by means of thumb clips to spigots projecting from the faces of the glass gland nuts, which enables the glass nuts to be adjusted without removing the Protector. This is an important improvement, as it ensures absolute protection to the attendant at a time when the gauge-glass tube is most likely to fracture.

The plate sight glasses are easily removed for cleaning by opening the thumb clips without the use of tools. Fig. 69 shows the Two-glass Model Protector; but a four-glass model is also made specially suitable for locomotives.

Both patterns give absolute protection from personal injury by broken gauge glasses, and large numbers are in use. *(Charles Winn & Co., Ltd.)*

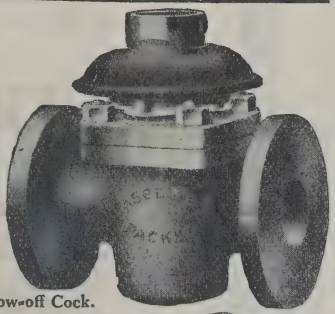
THE 'RELIANCE' GAUGE-GLASS PROTECTOR.

This protector *(United Brassfounders and Engineers Ltd.)*, which can easily be fitted to existing mountings, is a simple but strong and effective safeguard against accident due to bursting glasses. The plate-glass sides are made from specially toughened glass and subjected


UNITED BRASSFOUNDERS & ENGINEERS LIMITED.

UBEL UBEL

Gunmetal Valves, Cocks & General Steam Fittings





Asbestos-Packed Test Cock.

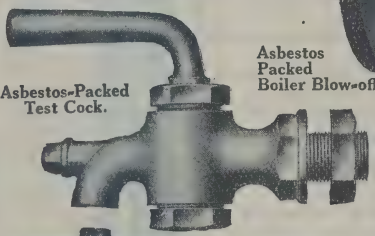


Asbestos Packed Boiler Blow-off Cock.

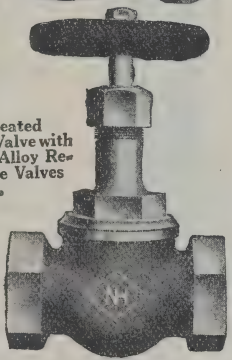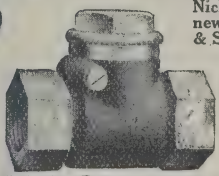Superheated Steam Valve with Nickel Alloy Renewable Valves & Seat.





Swinging-Pattern Check Valve.

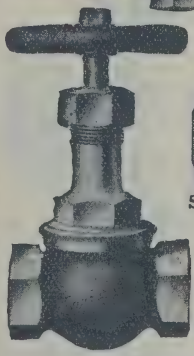

Fearnought Valve with Renewable Composition Disc.

WRITE for CATALOGUE (SECTION 'A'). Free on Application.

Codes:—A B C 5th Edition; Lieber.
Telephone: 3134 Central (3 lines).
Telegrams: 'Stork,' Manchester.

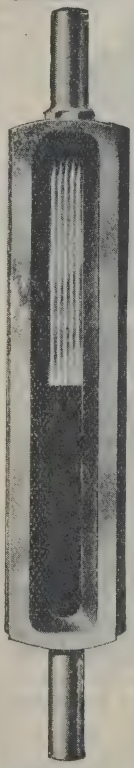
United Brassfounders and Engineers Limited

FIVE WORKS HEAD OFFICE EMPRESS FOUNDRY UBEL 3000 WORKERS CORNBROOK MANCHESTER ENGLAND

Depots also at London, Glasgow, Newcastle, Birmingham, Belfast, Cardiff, and all principal world centres.

UNITED BRASSFOUNDERS & ENGINEERS LIMITED.

UBEL UBEL



Attachable Pattern.

The

'REFRAX'

WINDOW WATER LEVELS


The 'Refrax' Window Water Level is a Gauge Glass and Protector combined and is self-contained.

Any other protecting device is superfluous.

Owing to special construction the water appears black, while the steam space shines like silver. The water level is therefore shown at a glance.

The illustrations show the attachable pattern, which can easily be fitted to any existing set of water gauges

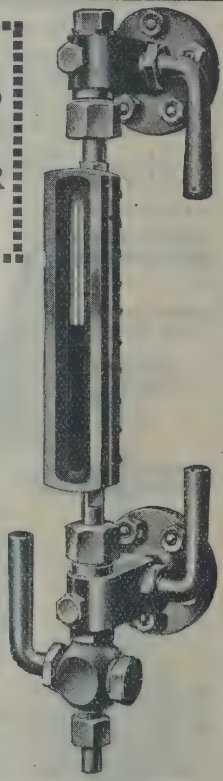ILLUSTRATED LEAFLET FULLY DESCRIBING THIS APPLIANCE FREE ON REQUEST



Attachable Pattern, 'Fixed.'

Codes:—A B C 5th Edition; Lieber.
Telephone: 3134 Central (3 lines).
Telegrams: 'Stork,' Manchester

United Brassfounders and Engineers Limited

FIVE WORKS HEAD OFFICE EMPRESS FOUNDRY — UBEL — 3000 WORKERS CORNBROOK MANCHESTER ENGLAND

Depots also at London, Glasgow, Newcastle, Birmingham, Belfast, Cardiff, and all principal world centres

to Admiralty tests. Special glasses with embedded wire netting are made, thus adding considerably to the strength and safety of the protector. The Reliance protector can also be fitted with an enamelled iron back plate (fig. 70) having black and white diagonal lines across same, which when looked at from front of gauge are magnified greatly up to the water level,

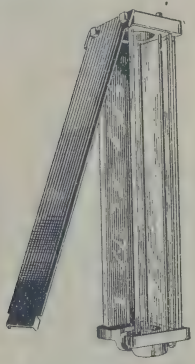


FIG. 70.



FIG. 71.




FIG. 72.

thus showing the correct level distinctly at a glance (fig. 71). These back plates are provided with a hinge-like attachment at the top, which allows the plate to swing free in the event of the glass tube bursting, and thus prevents any possibility of sudden accumulation of pressure injuring the plate-glass sides of the protector.

'REFRAX' WINDOW WATER LEVEL

This arrangement, fig. 72 (*United Brassfounders and Engineers Ltd.*), is a gauge glass and a protector combined and is self-contained. It can be fitted to any existing gauge mounting. Owing to its special construction the water appears black, while the steam space shines like silver. The water level is therefore shown at a glance and cannot be mistaken. Two types are made and stocked, suitable respectively for large and small boilers.

HULBURD'S CARTRIDGE SIGHT GLASSES.

(*Patent.*)

A neat and efficient device for protecting and rapidly removing and replacing sight glasses in water gauges and sight-feed lubricators is provided by Hulburd's Patent 'Cartridge' System (fig. 73). In Hulburd's make of gauge frames and lubricators the glasses are packed at leisure in metallic guards or sheaths, each thus forming a self-contained 'cartridge' from which the system derives its name. In the event of breakage of a glass the complete cartridge, containing the broken fragments, is easily withdrawn while under steam, and a new one readily inserted in its place. The metallic guard or cartridge case enables all splinters of glass to be removed without danger to attendants, and permits the immediate screwing up of the gland nuts without the possibility of fracture, the metallic cartridge case receiving the gland pressure and completely protecting the glass tube within it. Suitable windows are provided in the cartridge case of ample size to afford an unobstructed view of the glass tube and contents, and in the case of gauges the back is arranged as a water level indicator of special design, which shows with peculiar distinctness the height of the water column and makes it impossible to mistake an empty glass for a full one.



FIG. 73.

'WOODITE' PACKING.

The material known as 'Woodite' (*The Woodite Co.*) is of a special secret composition to resist the action of high or low pressures, whether of steam or water, and is impervious to acidulated

or other chemically impure fluids. 'Woodite' is made to any shape or size and of a quality of flexibility to suit the service to which it is to be applied. It has been extensively employed for conical gauge-glass rings, packing rings, pump valves, hydraulic packings, gaskets, etc., with most satisfactory results. The chief advantages of the Woodite conical gauge-glass and packing rings for steam users are their ease of application or renewal, the maintenance of a perfectly tight joint, the entire avoidance of unnecessary pressures on the glasses or rods, which causes breakages in the former and excessive friction in the latter, and the elimination of the dangers incident to steam or water passages becoming choked in the case of gauge glasses. On large slow-moving boiler feed-pumps these conical packing rings have shown excellent results and economy, working at 135 lbs. steam pressure with superheat, the piston rods being 3⅝ ins. diameter.

Ordinary valve spindles packed with these packings will always be found free to move, no matter how long the valve has been idle.

Defects in Water Gauges.

As ordinarily fitted, the gauge is usually attached directly to the boiler and provided with three taps, one connecting to the steam space, the second to the water space, and the third controlling the discharge to atmosphere. The latter should always discharge inside the boiler-house, where the effluent can be seen, and not be as it sometimes is, with a mistaken idea of cleanliness, coupled to a waste pipe, led outside, where the evidence of its action is not visible when the attendant opens the tap. It is of value to have duplicate gauges, as the cost is comparatively trifling, and one gauge serves as a check on the other. All three taps should be tested independently, that is to say, the bottom tap should be shut while the top one is opened and *vice versa*, the top one shut while the bottom is opened, so as to give a thorough 'blow through' of the steam and water connections to the boiler. Unless this is done there is no certainty of the gauge being in working order, while there is risk of the top and bottom connections becoming choked and causing a false reading. More than one serious accident has been traced to defects in the taps themselves, owing to the holes in the plugs of the taps not coinciding with the thoroughfare of the fitting, so that when the position of the handle suggests the tap is open it is in reality nearly closed. Another cause of false readings is the blocking of the passage in the glass tube through the indiarubber packing ring working over the ends of the glass, owing to the glass being cut too short and the gauge not being provided with a nipple in the bottom of the gland to protect the glass against this risk. Having regard to the serious results which may attend overheating from shortness of water, it is advisable whenever possible to supplement the water gauge with a fusible plug, and if the boiler is a large one, with a low-water safety-valve as well. (*Mechanical World.*)

Gauge Glasses.

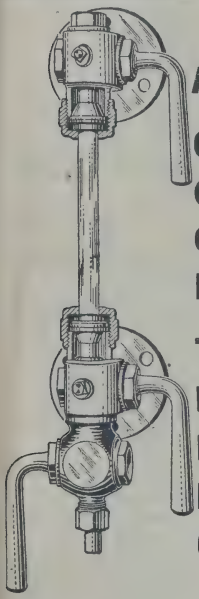
It is important to have the fittings exactly in line with each other, and to have them large enough so as not to cause the glass to bind or to be cramped in the least. When the fittings are not in line the glass is apt to be cramped either when putting it into the sockets in the fittings or when tightening the packing nuts. Wrenches should not be used for tightening the packing nuts around the gauge glass. When a glass is packed with the proper kind of packing and the nuts have been screwed up just tight enough to prevent leakage when both the glass and the packing have been warmed, the glass may readily be turned around in the fittings with merely the thumb and forefinger.

After putting in a new glass turn on a very little steam, leaving the drip at the bottom of the glass open so that the steam will gradually fill the glass and escape through the drip-cock. The glass is thus warmed thoroughly before the water is let into it and before it is subjected to pressure. When the glass has become thoroughly hot, open the steam valve wider, then open the water valve a like amount, and continuing to open both valves alike until fully open, then slowly close the drip at the bottom. This method not only allows the fittings to be thoroughly blown out, but enables the operator to increase the pressure on a new glass and new packing more gradually. It is best to anneal all the glasses before using them. This is generally accomplished by means of a water and steam bath, the water and the glasses being heated by steam. It is cheaper in the long run to cut glasses with a gauge-glass cutter than to attempt to cut or break them off with a broken file, or by similar means, because a slight nick in the glass at the wrong place may mean the early destruction of the glass when subjected to pressure and varying temperature. Some engineers fit a thin brass or copper thimble into the upper end of the tube, as shown in fig. 74, which prevents scale and water from coming in contact with the glass when blowing out the latter, and hence it reduces the eroded and pitted appearance commonly seen at the upper end of unprotected glasses. Tubes made of aluminium may be obtained of dealers in engineers' supplies which accomplish the same result.

These tubes and thimbles, it will be seen, protect the inner surfaces of the glass only, and as the glass is liable to be crowded to one side or the other in the packing nut as well as in the fitting itself, it is a good plan to also protect the glass on the outside.

A simple means of protecting the glass on the outside is also obtained from dealers in gauge

WOODITE GAUGE GLASS RINGS.



Absolutely reliable for water and steam pressures.

Greatly prolong life of Gauge Glasses.

Overcome breakages due to excessive pressure.

Only require a few moments to instal or renew.

Do away with all digging out of old packings.

The glass is only subjected to boiler pressures.

Hindrances to free passage of water or steam avoided.

Impossible to overpack as with other packings.

Never adhere to nor corrode the glass.

Give ideal results under all conditions.

Data required—Internal and external (bottom of thread) diameter and depth of stuffing boxes, also outside diameter of gauge glass.

Adopted by H.M. Navy, War Dept., Foreign Navies, and most of the leading Steamships and Railway Companies in all countries, as well as by Manufacturers and Steam Users generally.

THE WOODITE COMPANY,

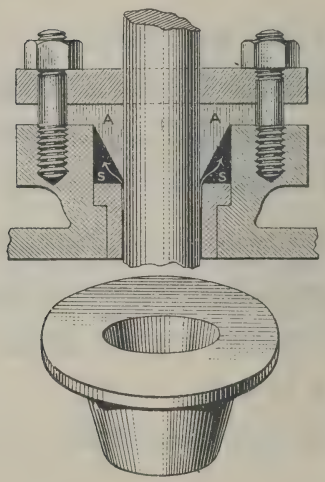
MITCHAM COMMON,

SURREY, ENGLAND.

F. 1502

WOODITE PACKING RINGS.

AS A SUBSTITUTE.



Piston rod or valve stem packings should be tight and frictionless.

Our well-known conical packing rings fulfil both these conditions.

Wearing away of rods or spindles positively eliminated.

Easily and quickly installed or replaced.

Reduce the costs of operation to a minimum.

Scoring or scratching of rods or spindles impossible.

A slight tightening of the gland or cap nut all that is necessary.

Valve spindles packed with these rings are always free and never stick.

Every Engineer should try them to be convinced.

Do not forget that power saved is money earned.

Data required—Diameter of rod or spindle—Distance between stud bolts (if flanged), or diameter (bottom of thread) if screwed, inside diameter and depth of stuffing box.

THE WOODITE COMPANY,

MITCHAM COMMON,

SURREY, ENGLAND.

Also Woodite for Pump Cups, Hydraulic 'U' Rings, Pump Valves, Gaskets and Joints of all kinds, Sheeting, etc.

F. 1503

glasses. The arrangement consists of a rubber sleeve adapted to slide over the end of the glass, as shown in fig. 75. The glass cannot come in contact with the socket in the fitting, neither can the packing nut touch the glass when the packing is screwed up. The combination of the thimble and the latter device prevents the rapid wear of the glass at the top, and also retains the glass clear of all metallic contacts, which has been found to be very desirable where glasses are subjected to high pressure and temperature and sudden changes in the latter.

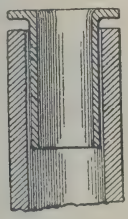


FIG 74.

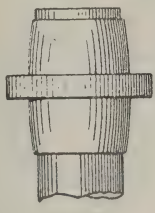


FIG. 75.

When the rubber protector is employed, separate packing rings are not needed, because the packing forms a part of the sleeve, as shown. Annealed gauge glasses protected inside and out by this or similar means will last as long under any circumstances as it is possible to make them by any means thus far made known.

If packing 'rings' are used, then in order to secure a tight joint with the least possible pressure, thus avoiding any tendency to break or to cramp the glass due to the packing, it is necessary to obtain a form of packing that will fit snugly in the space in the nut.

(*H. E. Waverly*, '*Mechanical World*.')

Superheated water acts on most varieties of glass as a violently corrosive agent, and for gauge glasses a special glass has to be used. A special gauge glass, under the name of 'Bishop's Adamant,' to resist high-pressure steam, is supplied by S. & C. Bishop & Co., St. Helens.

UNBREAKABLE WATER GAUGE.

A simple and effective form of water-level indicator which has all the advantages of the test cocks in checking the water level, but does not suffer from their disadvantages, has been patented by Messrs. Cammell Laird & Co., Ltd., and is being manufactured by Messrs. W. Crockatt & Sons, Ltd., of 64 Darnley Street, Glasgow. It consists of a perforated metal tube, and replaces the $\frac{3}{4}$-in. glass tube in an ordinary water-gauge mounting. The diameter of the holes is $\frac{1}{32}$ in. On the gauge cocks being opened, water issues from the hole below the water line in the form of a rapidly diverging white cloudy spray, well defined and readily distinguished. Steam, on the other hand, which issues from the holes above the water line, is only faintly visible and is hardly discernible. The steam jet is almost parallel and quite distinct in character from that of the water; a definite indication is therefore assured. The character of the water jet bears a distinct relation to the thickness of the wall of the tube; by reducing the thickness of the tube, the jet can be made to assume wider proportions. Good results are obtained by thinning the tube down to $\frac{1}{32}$ in. round a $\frac{1}{32}$ in. diameter hole. Much smaller holes than these, however, will give a perfectly visible jet.

PRESSURE GAUGES.

'UBEL' PRESSURE AND VACUUM GAUGES.

Pressure, vacuum and hydraulic gauges, designed on scientific principles and embodying many improvements, are manufactured and supplied by *United Brassfounders and Engineers Ltd.* (fig. 76.) The special feature of these gauges is the fitting of an improved pillar movement, by means of which the complete internal mechanism, including the Bourdon tube, is mounted entirely on an independent frame (fig. 77). This ensures absolute accuracy, as the mechanical parts are free from any strains which may be put upon the casing during fixing. This is usually a source of inaccuracy in ordinary types of gauges, where important parts are attached direct to the thin sheet metal back of the gauge, with the result that they are often twisted out of truth during fixing, and the accuracy of the mechanism thereby destroyed.

In the 'Thomas Patent Duplex Pressure Gauge' there are two Bourdon tubes (connected to two different pointers) of different length and strength, so that one is more sensitive than the other; if the two indications are identical, therefore, it is a proof that the gauge is indicating accurately. When in working order each pointer will indicate the same pressure on its respec-

tive scale, and any discrepancy between the two readings will serve as a warning to the attendant that the gauge is unreliable.

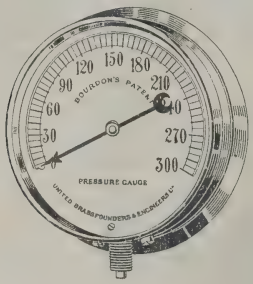


FIG. 76.

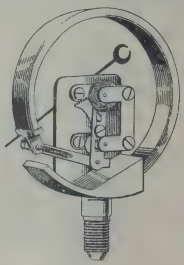


FIG. 77.

Other types of special purpose gauges are manufactured by *United Brassfounders and Engineers Ltd.* as follows:—Combined pressure and vacuum gauges, motor-car and aeroplane gauges, gas mineral water, and other miscellaneous types.

Apparatus for Testing Pressure and Vacuum Gauges.

(*Brotherhood's Patent.*)

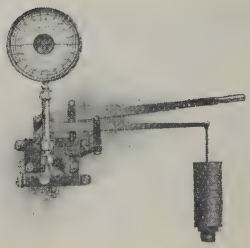


FIG. 78.



FIG. 79.

This apparatus will test the accuracy of gauges at all steps on the scale, instantaneously, independent of temperature variation, and does not rely on springs. A permanent accuracy within ½ per cent. is proved by official tests. In the pressure-gauge testing-machine a hand-operated oil pump supplies pressure below a ram which, while being entirely oil-tight under the highest pressure, will fall freely by its own weight when the pressure is released. For moderate pressures the ram lifts graduated weights direct, and for higher pressures, up to 6,000 lbs. per sq. in., weights are applied through a lever carried on hardened steel knife edges. This is shown in fig. 78.

In the vacuum-gauge testing-machine, shown in fig. 79, an oil-sealed pump exhausts the air in the space above the plunger and below the gauge. The readings being controlled by the absolute difference of pressure within and without the gauge, no correction for barometric or temperature conditions is needed. In this respect the machine possesses great advantages compared with the mercury column often employed.

The machines can be made for fixing to the wall or to stand on a shelf or table, and are enclosed in dust-proof boxes.

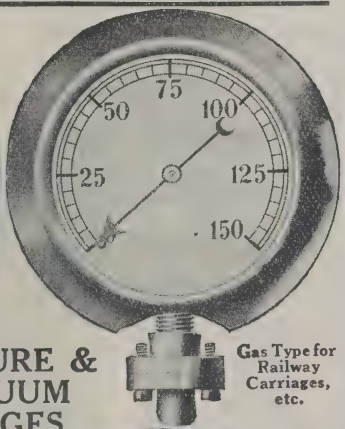
A certificate of the National Physical Laboratory can be supplied with each machine.

UNITED BRASSFOUNDERS & ENGINEERS LIMITED.

UBEL UBEL




Bourdon Type for Steam or Vacuum.




Gas Type for Railway Carriages, etc.

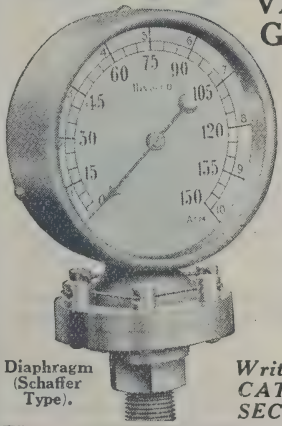PRESSURE & VACUUM GAUGES



Diaphragm (Schaffer Type).

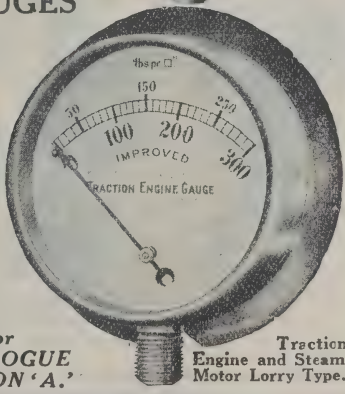

Traction Engine and Steam Motor Lorry Type.

Write for CATALOGUE SECTION 'A.'

Codes :—A B C 5th Edition ; Lieber.
Telephone : 3134 Central (3 lines).
Telegrams : 'Stork,' Manchester.

United Brassfounders and Engineers Limited

FIVE WORKS UBEL 3000 WORKERS
EMPRESS FOUNDRY
CORNBROOK MANCHESTER ENGLAND

Depots also at London, Glasgow, Newcastle, Birmingham, Belfast, Cardiff, and all principal world centres.

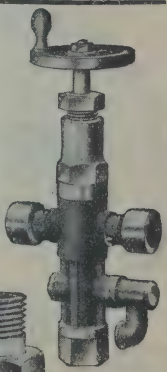
UNITED BRASSFOUNDERS & ENGINEERS LIMITED.

UBEL UBEL


Injectors, Ejectors and General Jet Appliances.




Giffard Type.




Halls Type.

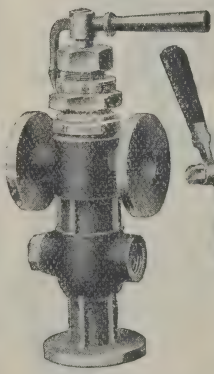

One-Movement Self-Acting Type.

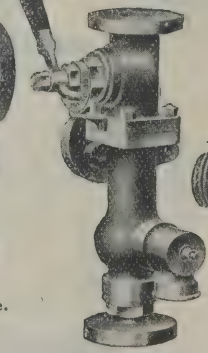

'Schaffer' Type.

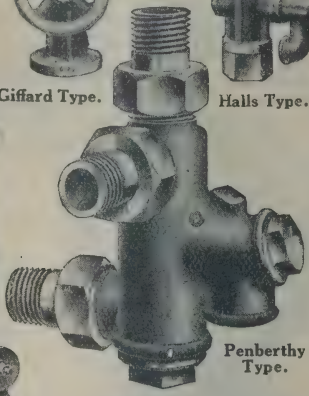

Penberthy Type.

CATALOGUE SECTION 'J'
Free on Application.

Codes :—A B C 5th Edition ; Lieber.
Telephone : 3134 Central (3 lines).
Telegrams : 'Stork,' Manchester.

United Brassfounders and Engineers Limited

FIVE WORKS HEAD OFFICE EMPRESS FOUNDRY UBEL 3000 WORKERS CORNBROOK MANCHESTER ENGLAND

Depots also at London, Glasgow, Newcastle, Birmingham, Belfast, Cardiff, and all principal world centres.

INJECTORS.

To compute the Diameter of Throat and Volume of Discharge.

d = diameter of throat in millimetres; V = volume of water required per hour in gallons; P = pressure of steam in pounds per sq. in.

$$d = \cdot 709 \sqrt{\frac{V}{\sqrt{P}}} \qquad V = 1 \cdot 985\ d^2 \sqrt{P}.$$

Example.—The pressure of steam is 200 lbs., and the volume of water required to be delivered per hour is 1,010 gallons.

Then
$$\cdot 709 \sqrt{\frac{V}{\sqrt{P}}} = \cdot 709 \times 8 \cdot 45 = 6 \text{ millimetres};$$

and
$$1 \cdot 985\ d^2 \sqrt{P} = 1 \cdot 985 \times 36 \times 14 \cdot 142 = 1{,}010 \text{ gallons.}$$

The above particulars apply to all properly proportioned live steam injectors.

The Penberthy Injector.

The 'Penberthy' Injector (fig. 80) is a perfectly automatic arrangement; by this is meant that when the injector is working and forcing water to the boiler, if the current of water be suddenly broken by any cause, such as a sudden jar or jolt in the case of a traction engine or road roller, or in the case of a marine boiler by the rolling of the vessel throwing the sea-cock out of the

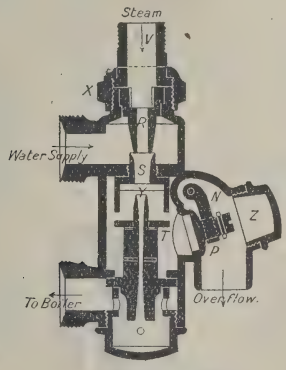


FIG. 80

R, steam jet; O, plug; N, overflow hinge; S, suction jet; V, tail pipe; P, overflow valve; Y, delivery jet; X, coupling nut; Z, overflow cap.

water for a moment, the injector will pick up the water and again establish the current to the boiler automatically, i.e. without the manipulation of a single valve or the least attention from an attendant. It is this quality which has made the 'Penberthy' so popular among marine engineers and which has led to its adoption by the great majority of the traction and threshing engine manufacturers.

The Penberthy delivers water to boiler at 160° to 212° Fahr., according to temperature and steam pressure; but 200° to 211° can always be delivered at nearly all pressures over 50 lbs. by throttling the suction valve and delivering the minimum capacity.

The injector is made in fifteen sizes, from ⅜ in. to 2½ ins., and it is also supplied in three distinct styles to suit various positions. The maximum quantity delivered is from 80 to 4,200 gallons per hour according to size, and it is applicable to boilers up to 600 h.p. Two sizes, viz. AA. to C., are especially supplied for traction, portable, and ploughing engines. It is most efficient at the pressures of 50 to 80 lbs. (when with the valve wide open it will lift 20 ft.), although it will work at a lower pressure and also up to as high as 180 lbs. under favourable conditions. It is suitable for all classes of boilers. A *low-pressure* non-lifting pattern is supplied for steam pressures below about 20 lbs.: these injectors will start at from 1 to 3 lbs. steam pressure where water is taken from a barrel or tank at, or just above, the level of the injector. With water pressure of 20 lbs. they will start at from 10 to 12 lbs. low steam, but with two globe valves in water-supply pipe the pressure can be reduced and injectors started at correspondingly lower pressures.

A special pattern (Nos. 328, 332) also is being made in ½ in., ¾ in., and 1 in. sizes, for very high pressures—namely, up to 200 lbs. No. 328 AA. is used extensively for steam wagons and tractors.

For pressures to 240 lbs., and for hot-feeds, the Auto-positive type is supplied. This type has fine working parts, and combines the features of both the positive and the automatic injector.

Over 700,000 of the Penberthy Injectors are in use.

POWER AND CAPACITY OF PENBERTHY INJECTORS.

Size.	Horse-power.	Pipe Connections.	Capacity per Hour. 1 to 3 ft. lift, 60 to 100 lbs. Steam Pressure.	
			Maximum.	Minimum.
O O. .	4 to 8	⅜ inch	80 gallons	45 gallons.
A . .	8 „ 16	½ „	135 „	70 „
A A. .	12 „ 22	½ „	180 „	100 „
B . .	17 „ 32	¾ „	260 „	140 „
B B. .	20 „ 45	¾ „	355 „	180 „
C . .	40 „ 65	1 „	475 „	300 „
C C . .	45 „ 80	1 „	600 „	350 „
D . .	50 „ 100	1¼ „	800 „	425 „
D D. .	75 „ 135	1¼ „	1,000 „	525 „
E . .	100 „ 180	1½ „	1,400 „	800 „
E E. .	115 „ 255	1½ „	1,900 „	900 „
F . .	160 „ 320	2 „	2,400 „	1,300 „
F F. .	200 „ 400	2 „	3,000 „	1,600 „
G . .	300 „ 500	2½ „	3,600 „	2,000 „
G G. .	375 „ 600	2½ „	4,200 „	2,500 „

(*W. H. Willcox & Co. Ltd.*)

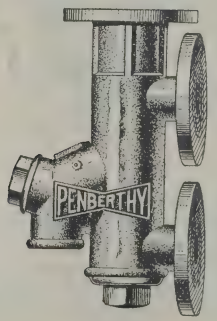


FIG. 81.

Owing to the increasing use of flange connections in this country, especially on fine works, the Penberthy Injector is now made up with flanges as shown in fig. 81. The working qualities

of the flanged injector are only slightly different from those of the screw-nipple machine, except that by the different construction of the body the high working pressure is brought up to 180 to 185 lbs. The injector with flanges is connected and operated in precisely the same manner as the injector with screw nipples. It is made in all sizes except $\frac{1}{4}$ and $\frac{3}{8}$ in.

Size No.	Pipe Connections.	Diam. of Flanges.	Thickness of Flanges.	Gallons of Water delivered to Boiler per Hour on 60 to 85 lbs. Steam Pressure, 1 to 3 ft. lift.		Horse-power.
	Ins.	Ins.	Ins.	Maximum.	Minimum.	
228	$\frac{1}{2}$	$2\frac{9}{16}$	$\frac{3}{8}$	180	100	12 to 22
230	$\frac{3}{4}$	$3\frac{5}{16}$	$\frac{7}{16}$	355	170	20 ,, 45
232	1	$4\frac{5}{16}$	$\frac{1}{2}$	600	350	45 ,, 80
234	$1\frac{1}{4}$	$5\frac{1}{8}$	$\frac{1}{2}$	1000	525	75 ,, 135
236	$1\frac{1}{2}$	$5\frac{1}{2}$	$\frac{9}{16}$	1900	900	115 ,, 255
238	2	$6\frac{5}{16}$	$\frac{9}{16}$	3000	1600	200 ,, 400
240	$2\frac{1}{2}$	$7\frac{1}{16}$	$\frac{11}{16}$	4200	2500	375 ,, 600

(*W. H. Willcox & Co. Ltd.*)

UNITED BRASSFOUNDERS' INJECTORS (PENBERTHY TYPE).

Penberthy type automatic injectors to meet every ordinary requirement are manufactured on specialised lines by *United Brassfounders and Engineers Ltd.* The construction and action of this type of injector are well known, and are generally in accordance with the theoretical particulars given on page 1505. Particulars stating the horse-power for which various injectors are suitable, on the assumption that they are required for ordinary tube boilers, are

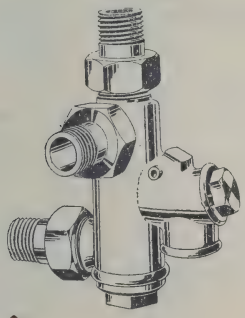


FIG. 82.

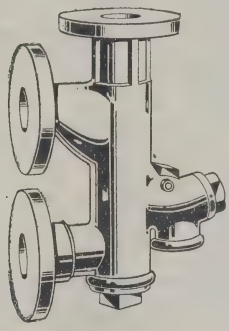


FIG. 83.

given in the table, page 1508, together with the particulars of their delivering capacity. Fig. 82 shows an external view of a standard type injector, but a large number of patterns are available, giving alternative positions of suction and delivery branches, which can be arranged to meet special requirements. A useful pattern, having flanged ends, is shown by fig. 83, the dimensions of which are given in the table, page 1508.

Other types of specialised injectors are as follows:—One-movement self-acting and re-starting injectors; 'Giffard' type injectors; 'Gresham' type injectors; 'Halls' type injectors; 'Schaffer' type re-starting injectors. A one-movement self-acting injector is also supplied, having a separate water spindle directly connected, by means of a yoke, to a main steam spindle, from which the water supply is regulated in proportion.

Size No.	Horse Power.	Capacity per hour 100 to 120 lbs. Pressure. 3 ft. lift.		Size of Pipe Connections.	Diameter of Flanges.	Weight each complete packed.
		Maximum.	Minimum.	ins	ins.	lbs. ozs.
AA	12 to 22	Gals. 180	100	$\frac{1}{4}$	$2\frac{9}{16}$	6 0
BB	20 to 45	„ 355	170	$\frac{3}{4}$	$3\frac{9}{16}$	9 8
CC	45 to 80	„ 600	350	1	$4\frac{5}{16}$	17 8
DD	75 to 135	„ 1,000	525	$1\frac{1}{4}$	$5\frac{1}{8}$	23 0
EE	115 to 255	„ 1,900	900	$1\frac{1}{2}$	$5\frac{1}{2}$	27 8
FF	200 to 400	„ 3,000	1,600	2	$6\frac{5}{16}$	47 8
GG	375 to 600	„ 4,200	2,500	$2\frac{1}{2}$	$7\frac{5}{16}$	90 0

(*United Brassfounders and Engineers Ltd.*)

Willcox's Ejector Steam-Jet Pump or Water Raiser.

This ejector, fig. 84 (*W. H. Willcox & Co. Ltd.*), will lift water 20 ft. with any steam pressure above 25 lbs., and 25 ft. with pressure at 40 lbs. or over. On pressures above 80 lbs.,



Fig. 84.

steam must be throttled to get best results on a lift. It will also elevate 50 ft. at 60 lbs. pressure, and 65 to 75 ft. on pressures of 80 to 100 lbs., by placing the ejector within 12 to 18 ins. of water supply.

Size Nos.	1	2	3	4	5	6	7*	8*	9*	10*
Pipe connection, steam ins.	$\frac{3}{8}$	$\frac{1}{2}$	$\frac{3}{4}$	1	1	$1\frac{1}{4}$	$1\frac{1}{2}$	2	2	$2\frac{1}{2}$
„ suction and delivery „	$\frac{1}{2}$	$\frac{3}{4}$	1	$1\frac{1}{4}$	$1\frac{1}{2}$	2	$2\frac{1}{2}$	3	$3\frac{1}{2}$	4
Capacity per Hour.										
40 to 65 lbs. Steam, 3 ft. lift, gall.	240	500	840	1,350	1,950	3,500	5,700	9,500	13,600	18,400
20 „ 40 „ or 65 to 100 lbs. „	235	450	700	1,300	1,850	3,000	4,350	8,160	12,400	17,100
40 „ 65 „ 50 ft. elevation „	120	250	420	650	975	1,750	2,500	4,750	6,800	9,200
40 „ 65 „ 25 ft. „ „	180	375	625	950	1,450	2,600	3,750	7,200	10,200	13,800
Vertical Lift.										
40 to 75 lbs. Steam ft.	23	25	25	24	26	26	26	25	25	25
25 „ 40 „ or 75 to 100 lbs. „	20	22	$21\frac{1}{2}$	$21\frac{1}{2}$	$21\frac{1}{2}$	$21\frac{1}{2}$	22	20	21	21
Horse-power of Boiler	2 to 6			8 to 12			15 to 20		25 to 30	

The ejectors are also suitable for exhausting air from pumps to create vacuum, and are largely used for this purpose.

Notes on Injectors.

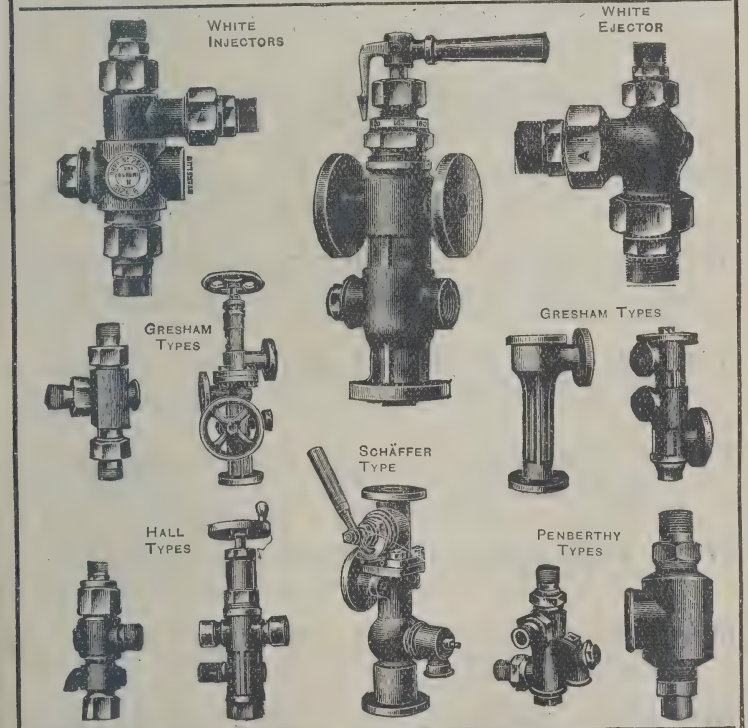
A very frequent cause of trouble is that by one means or another the injector becomes overheated and refuses to lift its water. This may be due to steam leaking past the check valve into the body of the injector, and then passing to the suction pipe, so that the latter becomes too hot. Under these conditions it is impossible to make the injector work. Another cause of overheating is sometimes to be traced to the proximity of the fitting to the hot boiler shell, which allows heat from the latter to pass to it by conduction and radiation. In the first case the remedy is to fit a well-made check valve, combined with a plug cock, between the injector and the boiler. This should be done, even if the former is designed with a self-contained back-pressure valve. Further, the plug cock should be shut off when the injector is not in use. In the second instance, it sometimes happens that an injector is employed which is fitted with its own back-pressure valve, and it is then bolted directly to the boiler. This is very bad practice, as a single valve is not dependable in the first place, and a further point is, that the injector is much too close to the hot boiler. This is a fruitful cause of trouble. Also, should anything

Thirty-five years' experience and reputation

In the manufacture of all kinds of Injèctors, Ejectors and Jet Appliances for every service.

UPWARDS OF 120,000 IN USE.

Below are a few of the many types made.



WHITE'S INJECTORS LIMITED.

PENDLETON **MANCHESTER**

London Office: 38 VICTORIA STREET, S.W. 1.

F. 1508

CROSBY LOCKWOOD & SON'S PUBLICATIONS.

BOILERS, ECONOMISERS AND SUPERHEATERS: THEIR HEATING POWER AND EFFICIENCY. By ROBERT H. SMITH, Assoc.M.I.C.E., M.I.M.E., M.I.E.E., Em. Prof. of Engineering. 128 pages, with Illustrations. Demy 8vo, cloth. 9*s*. net.

MODERN STEAM BOILERS: THE LANCASHIRE BOILER. A Practical Manual for Owners and Users of Lancashire Boilers. By W. D. WANSBROUGH, Author of 'The A.B.C. of Differential Calculus,' 'The Portable Steam Engine.' 168 pp. with 117 Illustrations. Demy 8vo. 6*s*. net.

LIQUID FUELS FOR INTERNAL COMBUSTION ENGINES. A Manual for Engineers, Designers, Chemists, etc. By H. MOORE, M.Sc. Tech., F.C.S., etc. About 200 pp., with numerous Illustrations. Demy 8vo, cloth. 15*s*. net.

STEAM BOILER CONSTRUCTION. A Practical Handbook for Engineers, Boiler Makers, and Steam Users. By W. S. HUTTON. Fifth Edition. Revised and Enlarged. 680 pages, 500 Illustrations. Medium 8vo. 21*s*. net.

THE APPLICATION OF HIGHLY SUPERHEATED STEAM TO LOCOMOTIVES. Being a Reprint from a series of Articles appearing in *The Engineer*. By ROBERT GARBE, Privy Councillor, Prussian State Railways. Edited by LESLIE S. ROBERTSON, M.Inst.C.E., etc. Medium 8vo. 9*s*. net.

THE PRACTICAL ENGINEER'S HANDBOOK. A Treatise on Modern Engines and Boilers, Marine, Locomotive, and Stationary. By W. S. HUTTON, Seventh Edition. Revised and Enlarged. Medium 8vo. 560 pages, 420 Illustrations. 21*s*. net.

TABLES, MEMORANDA, AND CALCULATED RESULTS FOR MECHANICS, ENGINEERS, ARCHITECTS, BUILDERS, SURVEYORS, etc. Selected and arranged by FRANCIS SMITH. Seventh Edition, revised, including ELECTRICAL TABLES AND FORMULÆ. 280 pages, waistcoat-pocket size. *New edition in preparation.*

STEAM ENGINEERING IN THEORY AND PRACTICE. By GARDNER D. HISCOX, M.E. With Chapters on Electrical Engineering by NEWTON HARRISON, E.E. 450 pages, 400 Illustrations. Medium 8vo. 21*s*. net.

STEAM ENGINE INDICATORS AND VALVE GEARS. By L. V. LUDY, Professor of Steam and Gas Engineering, University of Wisconsin. 180 pp., 150 Illustrations. 6*s*. 6*d*. net.

MECHANICAL HANDLING AND STORING OF MATERIAL. A Treatise on the Handling and Storing of Material such as Coal, Ore, Timber, etc., by Automatic or Semi-Automatic Machinery, together with the Various Accessories used in the Manipulation of such Plant, and dealing fully with the Handling, Storing, and Warehousing of Grain and Coal. By G. F. ZIMMER, A.M.Inst. C.E. 750 pp., royal 8vo, cloth, with over 1,000 Illustrations (including Folding Plates) specially prepared for the Work. 50*s*. net.

LONDON: CROSBY LOCKWOOD & SON,
7 Stationers' Hall Court, Ludgate Hill, E.C. 4.

F. 1509

go wrong with the injector, it is necessary to blow down the boiler before it can be put in order; whereas, with a combined check valve and plug cock, the latter can be closed, and the injector removed under steam.

An injector will not work satisfactorily if supplied with wet steam; therefore, in order to ensure that this is as dry as possible, it should be taken from the highest available point in the boiler.

Another defect sometimes arises through the check valve not having sufficient lift, or on account of some sort of obstruction in the delivery pipe. The effect of this is that the injector will lift the water, but on account of the greater pressure due to the obstruction against which it has to work, it will be unable to force the water into the boiler, which will consequently find an escape through the overflow instead.

In some cases the water supply to the injector is taken from a tank placed beside the boiler, on the boiler-house floor, the supply to the tank being from an external source, and controlled by a ball cock with a float attached, so that the level of the water in the supply tank is constant. This is a very satisfactory arrangement. In other instances the source of supply may be some little distance away, and connected to the injector by means of pipes. Further, if the water is taken from a well the level may vary between considerable limits. Hence, when purchasing an injector, it is of the utmost importance that the manufacturer should be given all possible data, such as the greatest static head and the length of pipe with the number of bends, so that he can obtain the total suction lift and supply an injector to suit the conditions.

Much trouble will be experienced if the feed-water is allowed to become hot. The lower the temperature the better. There are many so-called hot-water injectors, but even these will not prove very satisfactory if the temperature of the feed-water is allowed to rise too near to the maximum temperature specified by the makers. In order to prevent as much as possible any rise in temperature, it is of the greatest importance that the overflow from the injector should not be allowed to drain back into the feed-tank. An overflow pipe should be fitted that will lead this hot water clear of the feed supply. Such a pipe should not be closed, but should enter an open cup, similar to the overflow of the circulating water in a gas-engine jacket. It is then under constant observation of the man in charge, and if any irregularity occurs it is quickly detected.

Occasionally an injector will refuse to work, due to a leak in the suction pipe. If this defect is present it may be located by fixing a plug in the suction pipe and opening the steam supply to the injector, when the position of the leak will be easily detected.

Lastly, dirt and grit are a source of trouble at times. To prevent this as far as possible, a straining rose should be fitted to the suction pipe. This will not exclude all grit, and occasionally small grains of solid matter suspended in the feed-water will find their way through and lodge on the internal surface of the injector. Also if the water contains soluble salts of magnesium and calcium, it becomes heated on passing through the injector, and some of these salts are deposited, forming incrustations which may cause the injector to refuse to work, either because it has become totally choked up, or else small particles of the incrustations may break away and become lodged under the back-pressure valve or check valve and prevent its closing, when the injector will refuse through overheating.

It is always advisable to keep a spare injector in stock, and if the water contains a considerable amount of impurity, instructions should be given to change the injector at regular periods. The length of time that one should be allowed in continual service must be governed by experience with the particular conditions under consideration. In order to loosen the deposit the injector may be left to soak in diluted hydrochloric acid.

If the above very easily followed points are given attention, injectors will be found most reliable, and few complaints will be heard.

(*'Mechanical World.'*)

REDUCING VALVES.

These are very needful fittings in connection with steam appliances when steam has to be reduced from a high to a uniform low pressure. It is a common mistake to order reducing valves too large, which leads to their excessive wear. No reducing valve should be implicitly trusted; but wherever a rise in steam-reduced pressure is liable to bring about serious results a relief valve should follow the reducing valve.

Reducing valves which are too large for the amount of steam they are to pass are usually unsatisfactory; either they will open and close continually and chatter violently, or will stand in a position nearly closed and become steam-cut and leaky. It is more satisfactory to use two small valves in parallel, one set slightly heavier than the other, so that one will supply steam up to its maximum capacity before the other opens. Another way is to use one reducing valve equal to about one-half the maximum demand, and a by-pass of about the same capacity with a hand-operated valve in it, so that when the reducing valve reaches its capacity the by-pass valve may be opened wide and the reducing valve will close down and simply make up the shortage. This, of course, requires that an attendant shall observe the pressure gauge occasionally.

(*'Power.'*)

Fitting.	Description. Specification 'A—1922.' For Lancashire Boilers up to 120 lbs. Working Pressure and 8 ft. 6 ins. Diameter.	Description. Specification 'B—1922.' For Lancashire Boilers up to 160 lbs. Working Pressure and 8 ft. 6 ins. Diameter.	Description. Specification C—1922.' For Lancashire Boilers up to 200 lbs. Working Pressure and 8 ft. 6 ins. Diameter.
Safety Valves:	One Hopkinson's 'Duad' Safety Valve, fig. 7, for High Steam and Low Water, fitted with C.I. Valve Box, 'Platnam' Valves and Seats and C.I. Plate-Weights complete	One Hopkinson's 'Duad' Safety Valve, fig. 7, for High Steam and Low Water, fitted with C.I. Valve Box, 'Platnam' Valves and Seats and C.I. Plate-Weights complete	One Hopkinson's 'Duad' Safety Valve, fig. 24, for High Steam only, with Cast-steel Valve Box, fitted with 'Platnam' Valve and Seat, and C.I. Plate-Weights complete
	One 3-in. Hopkinson's Patent 'Ipsed' Safety Valve, fig. 10, for High Steam only, with parts subject to pressure in cast iron	One 2½-in. Hopkinson's Patent 'Ipsed' Safety-Valve, 'Platnam' Valve and Seat, with Controlled Flow and Lock-up Weights, fig. 10, for High Steam only	One Hopkinson's Patent 'Sprised' Safety Valve, with Cast-steel Valve Box and Y Pipe and 'Platnam' Seats, Controlled Flow and Lock-up Weights, fig. 24, for High Steam only
Steam Valve:	One 7-in. Hopkinson's Patent 'Triad' Junction Valve, fig. 1000, with C.I. Body and Cover, 'Platnam' Valve and Seat	One 7-in. Hopkinson's Patent 'Triad' Junction Valve, fig. 1004, with Hopkinson's 'Hipress' Cast-steel Body and Cover, fitted with 'Platnam' Valve and Seat	One 7-in. Hopkinson's Patent 'Triad' Junction Valve, fig. 1004, with Hopkinson's 'Hipress' Cast-steel Body and Cover, fitted with 'Platnam' Valve and Seat
Feed Valve:	One 2½-in. Hopkinson's 'Accessible' Check Feed-Valve, fig. 1320, with C.I. Body and Cover, 'Platnam' Valves and Seats	One 2½-in. Hopkinson's 'Accessible' Check Feed Valve, fig. 1322, with Hopkinson's 'Hipress' Cast-steel Body and Cover, 'Platnam' Valves and Seats	One 2½-in. Hopkinson's 'Accessible' Check Feed Valve, fig. 1322, Hopkinson's 'Hipress' Cast-steel Body and Cover, 'Platnam' Valves and Seats
Blow-off Valve:	One 2½-in. Hopkinson's Parallel Slide Blow-off Valve, fig. 2540, bronze, with 'Platnam' Seats and Discs, Improved Locking Gland, and Patent 'Oplok' Pinion	One 2½-in. Hopkinson's Blow-off Valve, fig. 2540, bronze, 'Platnam' Metal Seats and Discs, Improved Locking Gland, and Patent 'Oplok' Pinion	One 2½-in. Hopkinson's Blow-off Valve, fig. 2540, bronze, 'Platnam' Metal Seats and Discs, Improved Locking Gland and Patent 'Oplok' Pinion
	One 2½-in. Wrought-iron Box Key, fig. 6223, for ditto	One 2½-in. Wrought-iron Box Key, fig. 6223, for ditto	One 2½-in. Wrought-iron Box Key, fig. 6223, for ditto
Water Gauges:	Two ¾-in. Hopkinson's Patent 'Absolute' Water Gauges, fig. 6440, bronze, which automatically shut off both steam and water when the glass breaks, fitted with Hopkinson's Patent Safety Plugs and Shields (Class B) to 18-in. centres	Two ¾-in. Hopkinson's 'Absolute' Water Gauges, fig. 6440, bronze, which automatically shut off both steam and water when the glass breaks, fitted with Hopkinson's Patent Safety Plugs and Shields (Class B) to 18-in. centres	Two ¾-in. Hopkinson's Patent 'Absolute' Water Gauges, fig. 6440, bronze, which automatically shut off both steam and water when the glass breaks, fitted with Hopkinson's Patent Safety Plugs and Shields (Class B) to 18-in. centres
	One Water-Level Pointer, fig. 6250, bronze	One Water-Level Pointer, fig. 6250, bronze	One Water-Level Pointer, fig. 6250, bronze
Steam Gauge:	One 10-in. Hopkinson's Steam Gauge, fig. 4000, graduated to 240 lbs., red mark at 120 lbs., with flanged asbestos-packed bronze cock and syphon, and Inspector's Gauge connection, fig. 4180	One 10-in. Hopkinson's Steam Gauge, fig. 4000, graduated to 320 lbs., red mark at 160 lbs., with flanged asbestos-packed bronze cock and syphon, and Inspector's Gauge connection, fig. 4180	One 10-in. Hopkinson's Steam Gauge, fig. 4000, graduated to 400 lbs., red mark at 200 lbs., with flanged asbestos-packed bronze cock and syphon, and Inspector's Gauge connection, fig. 4180

Fitting.	Description. Specification 'D—1922.' For a Cornish or Small Lancashire Boiler up to 120 lbs. Working Pressure.	Description. Specification 'W—1922' For a 'Babcock & Wilcox' Water-Tube Boiler up to 200 lbs. Working Pressure.	Description Specification 'S—1922.' For a 'Stirling' Water-Tube Boiler up to 200 lbs. Working Pressure.
Safety Valves:	One Hopkinson's 'Duad' Safety Valve, fig. 7, for High Steam and Low Water, fitted with C.I. Valve Box, 'Platnam' Valves and Seats, and Plate-Weights complete	One Hopkinson's Patent 'Ipsed' Valve, fig. 10, on each Boiler Drum	One Hopkinson's Patent 'Ipsed' Valve, fig. 10, on each Boiler Drum
(Alternative)	——	Hopkinson's Patent 'Dused' Valve, fig. 12, or the 'Sprised' Valve, fig. 24 High and Low Water Whistle Alarm, fig. 340, can be supplied if required	Hopkinson's Patent 'Dused' Valve, fig. 12, or the 'Sprised' Valve, fig. 24 High and Low Water Whistle Alarm, fig. 340, can be supplied if required
Steam Valve:	One 5-in. Hopkinson's Patent 'Triad' Junction Valve, fig. 1000, C.I. Body and Cover, with 'Platnam' Valve and Seat	One Hopkinson's Patent 'Triad' Junction Valve, fig. 1004, with Body and Cover of Hopkinson's 'Hipress' Cast-steel and 'Platnam' Valve and Seat	One Hopkinson's Patent 'Triad' Junction Valve, fig. 1004, with Body and Cover of Hopkinson's 'Hipress' Cast-steel and 'Platnam' Metal Valve and Seat
Feed Valve:	One 2-in. Hopkinson's 'Accessible' Check Feed Valve, fig. 1320, C.I. Body and Cover, with 'Platnam' Valves and Seats	'Accessible' Check Feed Valves, fig. 1377, with Body and Cover of Hopkinson's 'Hipress' Cast-steel and 'Platnam' Valves and Seats	2-in. Hopkinson's 'Accessible' Check Feed Valves, fig. 1322, with Body and Cover of Hopkinson's 'Hipress' Cast-steel and 'Platnam' Valves and Seats
Blow-off Valve:	One 2-in. Hopkinson's Blow-off Valve, fig. 2540, bronze, with 'Platnam' Seats and Discs, Improved Locking Gland and Patent 'Oplok' Pinion	2-in. Hopkinson's Blow-off Valves, bronze, fig. 2540, 'Platnam' Metal Seats and Discs, Improved Locking Gland, and Patent 'Oplok' Pinion	2-in. Hopkinson's Blow-off Valves, bronze, fig. 2540, 'Platnam' Metal Seats and Discs, Improved Locking Gland, and Patent 'Oplok' Pinion
	One 2-in. Wrought-iron Box Key, fig. 6223, for ditto	One 2-in. Wrought-iron Box Key, fig. 6223, for above	One 2-in. Wrought-iron Box Key, fig. 6223, for above
Water Gauges:	Two ¾-in. Hopkinson's Patent 'Equilibrium' Water Gauges, fig. 6540, bronze, which automatically shut off water when the glass breaks, fitted with Patent Safety Plugs and Shields (Class B) to 18-in. centres	Two sets ¾-in. Hopkinson's Patent 'Absolute' Water Gauges, fig. 6440, bronze, which automatically shut off both steam and water when the glass breaks, fitted with Patent Safety Plugs and Shields to 19½-in. centres	Two sets ¾-in. Hopkinson's Patent 'Absolute' Water Gauges, fig. 6440, bronze, which automatically shut off both steam and water when the glass breaks, fitted with Patent Safety Plugs and Shields to 18-in. centres
(Alternative)	One Water-Level Pointer, fig. 6250, bronze		
Steam Gauge:	One 10-in. Hopkinson's Steam Gauge, fig. 4000, and flanged asbestos-packed bronze cock and syphon, and Inspector's Gauge connection, fig. 4180	One 12-in. Hopkinson's Steam Pressure Gauge, fig. 4000, complete with massive bronze syphon and cock, fig. 4196	One 10-in. Hopkinson's Steam Pressure Gauge, fig. 4000, complete with bronze control cock, fig. 4242, and bronze angle control cock on drum, fig. 6621

HOPKINSON'S STANDARD SPECIFICATIONS OF BOILER MOUNTINGS—*continued.*

Fitting.	Description. Specification 'P—1922.' For a Dry-Back or Marine Type Boiler.	Description. Specification 'G—1922.' For a Clarke-Chapman Water-Tube Boiler up to 200 lbs. Working Pressure.
Safety Valves:	One Hopkinson's Patent 'Dused' Valve, fig. 12, for High Steam only, with parts subject to pressure in Cast-steel, 'Platnam' Valves and Seats	One Hopkinson's Patent 'Ipsed' Deadweight Valve, fig. 10, for high steam only, on each boiler drum, with parts subject to pressure in Cast steel, 'Platnam' Valve and Seat
(Alternative)	Hopkinson's Double Marine Spring Safety Valve, fig. 64, for high steam only	Hopkinson's Patent 'Dused' Valve, fig. 12, or the 'Sprised' Valve, fig. 24. High and Low Water Whistle Alarm can be supplied if required
Steam Valve:	One Hopkinson's Patent 'Triad' Junction Valve, fig. 1004, with Hopkinson's 'Hipress' Cast-steel Body and Cover, 'Platnam' Valve and Seat	One Hopkinson's Patent 'Triad' Junction Valve, fig. 1004, with Hopkinson's 'Hipress' Cast-steel Body and Cover, 'Platnam' Valve and Seat
Feed Valve:	One 2½-in. Hopkinson's 'Accessible' Check Feed Valve, fig. 1374, with Hopkinson's 'Hipress' Cast-steel Body and Tee-piece, 'Platnam' Valves and Seats	One Hopkinson's 'Accessible' Check Feed Valve, fig. 1375, with Hopkinson's 'Hipress' Cast-steel Body and Cover, 'Platnam' Valves and Seats
Blow-off Valve:	One 2½-in. Hopkinson's Blow-off Valve, fig. 2540, bronze, with 'Platnam' Seats and Discs, Improved Locking Gland, and Patent 'Oplok' Pinion	Three Hopkinson's Blow-off Valves, fig. 2540, bronze, with 'Platnam' Seats and Discs, Improved Locking Gland, and Patent 'Oplok' Pinion
	One 2½-in. wrought-iron Box Key, fig. 6223, for above	One wrought-iron Box Key, fig. 6223, for above
Water Gauges:	One Polished Bronze Pillar, Pattern B, fig. 6476, fitted with two sets Hopkinson's Patent 'Absolute' Water Gauges, fig. 6440, bronze, which automatically shut off both steam and water when the glass breaks, and Patent Safety Plugs and Shields, also	Two sets ¾-in. Hopkinson's Patent 'Absolute' Water Gauges, fig. 6440, bronze, which automatically shut off both steam and water when the glass breaks, fitted with Patent Safety Plugs and Shields
Steam Gauge:	One 10-in. or 12-in. Steam Pressure Gauge, fig. 4000, with Pillar Syphon and Tester Bend for Inspector's Gauge, fig. 4197	One Hopkinson's Steam Pressure Gauge, fig. 4000, complete with bronze control cock, fig. 4242, and bronze angle control cock on drum, fig. 6621

NOTES.—When several boilers are connected in parallel, it is most important that Hopkinson's Patent Isolating Valves, figs. 6000 and 6005, should be used.

The Steam and Feed Valve sizes are to be chosen in accordance with the evaporation and steam pressure of the boiler.

Cast-steel Junction and Feed Valves can be supplied at an extra cost if preferred, in those cases where Cast-iron Valves are specified.

Safety Valves can similarly be supplied with the parts subject to pressure in cast steel, if preferred, at an extra cost.

SECTION XXIX

PART III

SUPERHEATED STEAM—SUPERHEATERS—STEAM TRAPS—STEAM JACKETS — ECONOMISERS — WATER COOLING TOWERS — STEAM DRYERS AND PURIFIERS — HEAT ACCUMULATORS.

(Revised by T. B. Morley., D.Sc., M.I.Mech.E.)

SUPERHEATED STEAM.

When sufficient heat is added to water to just convert it all into steam, the steam is said to be dry and saturated or, for short, saturated. If more heat is added it becomes superheated. The degree of superheat is measured by the rise of temperature above that of saturated steam.

The heat required to superheat steam varies with the pressure and temperature (see Table IV., on p. 1395), but is roughly 0·55 B.Th.U. per pound of steam for each degree Fah. of superheat.

Superheating does not alter the pressure of the steam, but increases its volume in proportion (very roughly) to the absolute temperature.

Superheated steam is greater in volume than saturated steam of the same pressure; the volume of the latter is found from steam tables.

The volume of superheated steam may be determined approximately from the equation

$$V = v(1 + \cdot 0016 t_s)$$

where,

v = volume of dry saturated steam; t_s = degrees of superheat Fah. *(Goudie.)*

For the mean specific heat, heat required to superheat, and total heat of superheated steam, see Tables III, IV, V, Part I, pp. 1394, 1395.

The advantages of superheating are chiefly :—

1. Greater thermal efficiency of the engine, due to reduced condensation loss.
2. If the boiler plant is not provided with very ample heating surface the addition of a superheater increases the boiler plant efficiency apart from the engine effect.
3. As compared with saturated steam, higher steam velocities in the pipes may be used with superheated steam, and consequently the pipes may be smaller. For this reason, and also the lower coefficient of heat transmission, the percentage loss of heat in the pipe system is lower, in spite of the higher temperature.
4. Reduction in size of auxiliary plant owing to smaller weight of feed water and coal.

Degree of Superheat.

In modern practice the following are usual :—

1. General engine practice : superheat at boilers 150° F., or, say, 120° to 130° at engine Up to 650° F. total temperature, say 260° F. of superheat at 200 lbs. pressure, can be used if the engine is designed for it.

2. General turbine practice: superheat at turbine 200°-250° F., say up to 650° F. total temperature.
3. Latest turbine practice: superheat at turbine of 250° to 300° F., say up to 750° F. total temperature, at about 350 lbs. sq. in. pressure.

In general, with flat slide or Corliss valves on the high-pressure cylinder, the lower temperatures (about 550° F. total temperature) must not be exceeded.

Economy of Superheat.

Superheating reduces the steam consumption approximately at the rate of 1 per cent. for each 10° F. of superheat, but the rate is greater for the lower grades of superheat and less for higher grades.

The practical steam and fuel economy due to the use of superheated steam are about as follows, all superheats being measured at the engine stop valves:—

1. Piston and slide valve engines: 20 per cent. reduction in steam and fuel for 100° F. of superheat.
2. Drop valve and Corliss engines: 16 per cent. saving for 100° F. superheat; 21 per cent. for 150° F.
3. Uniflow engines: 12 and 17 per cent. saving at 100° and 150° F. respectively.
4. Steam turbines: 16 and 26 per cent. at 200° and 350° F. respectively.

Characteristics of Superheat.

Condensed steam is a slight lubricant. The absence of this must be met by adequate lubrication when using superheated steam. The high temperature requires a special oil of high flash-point. Pipe friction losses are reduced by superheating.

In reciprocating engines a later cut-off is required to develop the same horse-power. Hence the maximum power which can be developed is slightly reduced by superheating.

Very high superheats lead to growth and distortion of cast-iron turbine cylinders. Steel should be used at the high-pressure end.

Moderate superheat, about 50° or 100° F., is desirable for evaporating and similar heating purposes, especially with long pipe mains, but very high superheats are undesirable, as the steam should have little, if any, superheat by the time it reaches the heating surfaces of the evaporators, etc., on account of the lower efficiency of these heating surfaces with superheated steam.

Throttling slightly raises the superheat in steam; expansion, as in a turbine nozzle, very greatly reduces it.

Except for very moderate superheat, cast-iron and copper must not be used.

SUPERHEATERS.

The superheat added to the steam depends upon:—

1. The heating surface per pound of steam per hour.
2. The temperature difference, gas to steam.
3. The velocity of the steam in the superheater.
4. The velocity of the hot gases past the tubes.
5. The pressure of the steam.

Factor 2 is very difficult to predetermine accurately, and hence superheaters are still mainly designed by rule-of-thumb. Modern superheaters are frequently so made that the steam velocity can be altered, thus permitting an adjustment if an incorrect estimate has been made. There are two principal methods of altering the velocity; by plugging up tubes, or removing them, and by rearranging the proportion of tubes in parallel to those in series. The first method is of practically no value.

Factors 2, 3 and 4 change with the amount of steam used, as with the load. The effect of load on factor 2 (temperature) is more marked the further the superheater is from the grate, and is very marked if in the downtake of a Lancashire boiler for instance. Factor 2 is also very much dependent on the normal rate of firing and the quality of coal used. Thus with poor coal a superheat of 100° F. at full load may fall to 30° F. at half load. If the normal rate of firing is high or the quality of coal good, the change of loading has less effect.

Heating Surface of Superheater.


(1.)

Typical values of the superheating surface as a percentage of the boiler heating surface, not counting the economiser, are:—

	Per Cent.
Lancashire boiler	28
Water-tube, B. and W. type	30
Water-tube, 3-drum type	25
Locomotive	22

'UNIT' SUPERHEATERS

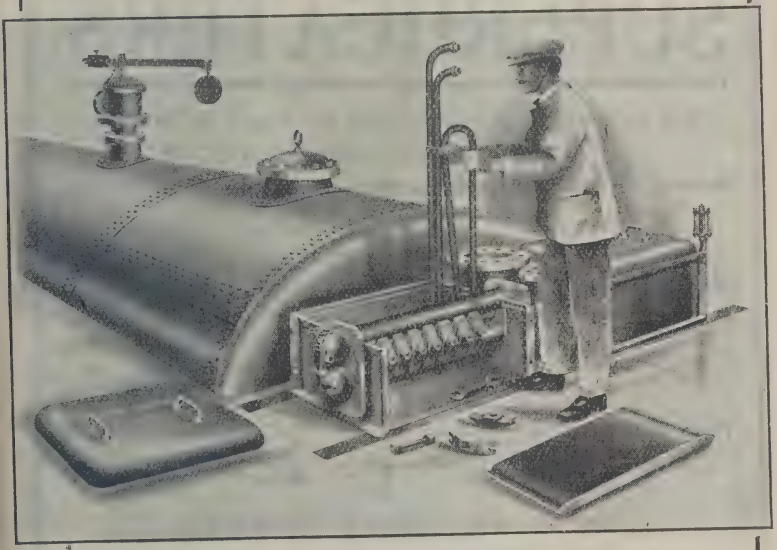THE MOST EFFICIENT AND ACCESSIBLE SUPERHEATER ON THE MARKET.



EVERY TUBE ELEMENT IS DETACHABLE.

ALL PARTS INTERCHANGEABLE.

HEAD OFFICE:

SUPERHEATER UNITS, LTD.

4 CASTLE SQUARE, SWANSEA.

Works - {UNIT WORKS, STRAND, SWANSEA, and INKERMAN WORKS, SWANSEA.

F. 1514

McPHAIL & SIMPSON.

[Proprietors—John Thompson (Wolverhampton) Ltd.].

SPECIALITY:

PATENT DOUBLE HEADER WROUGHT STEEL

SUPERHEATERS

For Lancashire, Cornish, and all Types of Boilers.

Tubes Evenly Distributed.

More than 3,000 of these Superheaters now in Daily Use.

NO LARGE JOINTS. NO STUDDED JOINTS.
EACH TUBE ACCESSIBLE WITHOUT DISTURBING INSTALLATION.
LEAKAGE IMPOSSIBLE.

THIS SUPERHEATER HAS STOOD THE TEST OF MANY YEARS, SUPERSEDING ALL OTHER DESIGNS.

LARGE ECONOMY IN FUEL.
POWER PLANT EFFICIENCY INCREASED.

ESTIMATES & FULL PARTICULARS ON APPLICATION.

ETTINGSHALL WORKS,

WOLVERHAMPTON

Telephone 1138-9.

These values cannot be relied upon for superheats above about 200° F. For the highest values, 300°-350° F., a complete revision of the superheater boiler arrangement is necessary.

Boilers with superheaters require a smaller heating surface to give a desired efficiency.

Heating Surface of Superheater.

(2.)

The heating surface may be approximately calculated on the assumption that the heat transmission per sq. ft. of heating surface is 5 B.Th.U. per hour per degree F. of difference of mean temperatures of gas and steam.

Thus, if W = steam generated in lbs. per hour,

H = heat required to superheat 1 lb. of steam (see Table IV, p. 1395),

T = mean gas temperature,

t = mean steam temperature,

then the heating surface in sq. ft.

$$= \frac{W \times H}{(T - t) \times 5},$$

For example, let W be 6,000 lbs. per hour, the pressure 160 lbs. per sq. in., and superheat 200° F. The saturation temperature is 371° F., and final steam temperature 571° F., so that t = 471° F. H (from Table IV) = 110 B.Th.U.

Assuming a Lancashire boiler, with the superheater placed in the downtake, the value of T may be 900° F., the heating surface $= \frac{6{,}000 \times 110}{(900 - 471) \times 5} = 307$ sq. ft.

Oil for Superheated Steam.

'800 F' Occentoline.

This is a special oil for superheated steam, supplied by *Messrs. Sterns Ltd.* It has an exceptionally high flash point (650° F., the fire test being 750° F.) and is a guaranteed pure hydrocarbon, free of impurities. It is non-corrosive. It will leave no deposit, and will effectually lubricate cylinders at highest temperatures and greatest pressures.

The Gordon Patent Sectional Superheater.

This superheater (*The Gordon Superheating Company, Regent House, Kingsway, London, W.C.* 2) is constructed of mild steel, the headers being of mild steel of circular section, while the tubes are solid drawn steel of 'U' form, as shown in fig. 1.

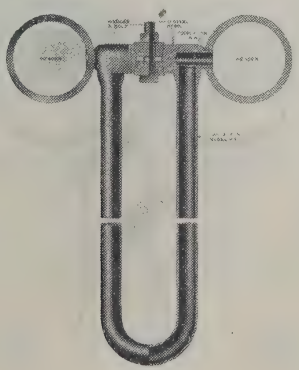


Fig. 1.

The Gordon Patent Superheater.

THE MCPHAIL & SIMPSON PATENT SUPERHEATER.

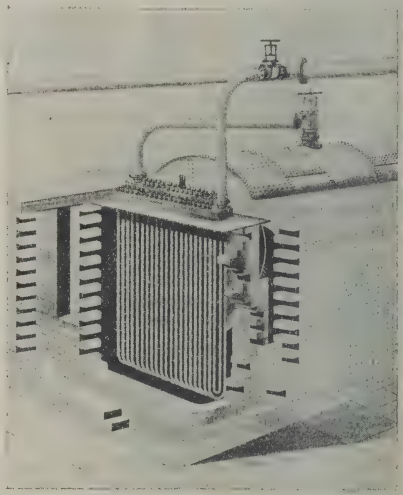


FIG. 2.

THE 'GALLOWAY' SUPERHEATER.

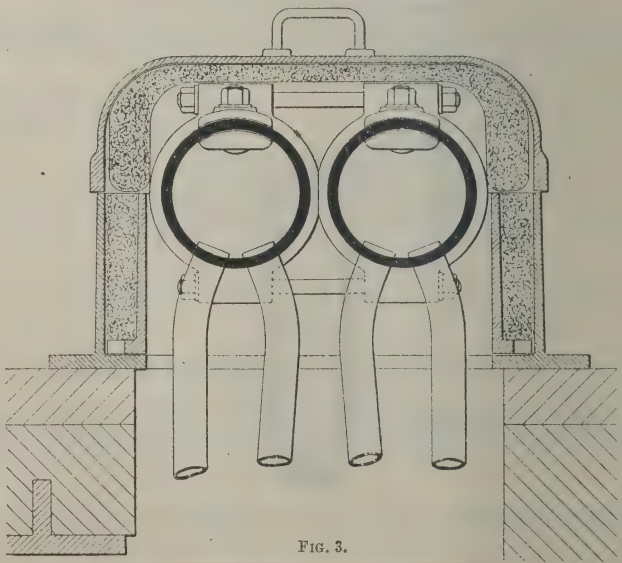


FIG. 3.

FLANGED PIPEWORK

for

HIGH PRESSURE STEAM, COMPRESSED AIR AND ALL OTHER SERVICES

INSTALLATIONS DESIGNED AND ERECTED COMPLETE



FOSTER BROTHERS, LIMITED

Sales Offices :

REGENT HOUSE, KINGSWAY, LONDON, W.C. 2.

Works :

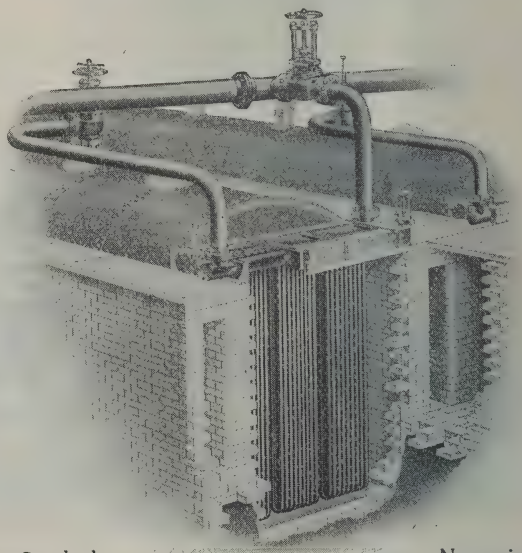
LEA BROOK WORKS, WEDNESBURY.

F. 1516

GORDON PATENT SECTIONAL SUPERHEATERS

FOR LANCASHIRE, WATER-TUBE
AND ALL TYPES OF BOILERS

INDEPENDENTLY FIRED SUPERHEATERS



Standard Interchangeable Construction

No specially skilled labour for fitting

BOOKLET UPON APPLICATION.

The Gordon Superheating Co.

REGENT HOUSE, KINGSWAY,
LONDON, W.C. 2

F. 1517

A particular feature of the superheater is the patented wedge joint shown. The one bolt illustrated tightens each pair of joints; no special tools are required, and the joint is said to remain perfectly steam-tight under all working conditions. The headers are circular in form, and are connected together by stretcher plates of ample strength at suitable distances apart to withstand the thrust of jointing up the sections.

Cover plates are fixed over the tube ends to give free access to the whole of the sections, any one of which can be removed without having to shut down the boiler or disconnect the steam pipes.

Suitable drains are arranged for on the headers to carry off water of condensation which may accumulate during the time the plant is shut down.

The standard elements employed are applicable to superheaters for Lancashire, Dry Back Marine, Water-tube, or any other form of boiler, and also to independently fired superheaters.

The McPhail & Simpson Patent Superheater.

(McPhail & Simpson, London.)

The headers and tubes of these superheaters (fig. 2) are of solid drawn wrought steel.

The simple construction, and high-class material and workmanship used in their construction, render the superheaters absolutely steam tight, and at the same time ample means are provided for getting at the tubes should they by any chance require attention. This is made possible by the provision in the headers of the patent stoppers opposite the ends of each tube, whereby easy access to the tubes is obtained for expanding, examination, etc., and any individual tube can be removed and replaced in a very short time, without disturbing the other tubes or pipe connections and without breaking a large joint.

There are no studs and no large joints used in these superheaters.

The substantial nature of the tubes entirely prevents warping.

The superheaters are adaptable to any type of boiler—Lancashire, Cornish, Babcock—and all types of water-tube boilers, both land and marine, and for independent firing.

Flooding of the superheaters, or the use of dampers, is not recommended.

The Galloway Superheater.

(Galloways, Ltd.)

This superheater (fig. 3) is made entirely from mild wrought steel. All parts are of circular cross-section and therefore very strong. There are two headers rigidly stayed together to prevent movement and vibration, and connected by seamless steel tubes. The tubes are in groups of five, each group commanded by an internal cap so as to facilitate inspection and cleaning. The headers are carried in a double-walled box resting on the brickwork and covered by a cast-iron cover, thus minimising radiation losses and protecting the superheater from weather and damage.

The joints between the superheater and the main steam piping are vertical, thus enabling the superheater to be removed for inspection without disturbing the steam pipes. If it is desired to work with the superheater removed, a slightly bent connection or cross-over pipe is inserted in its place.

The superheat usually attained is about 150° F. with moderate firing, and less at light rates of combustion or with poor coals.

The Babcock & Wilcox Standard Integral Superheater.

(Babcock & Wilcox, Ltd.)

The Babcock & Wilcox Patent Steam Superheater (fig. 4) consists of solid-drawn steel tubes bent into **U** shape, and connected at both ends with boxes or manifolds (F and H), one of which (F) receives the natural steam from the boiler through the dry pipe (N) and inlet pipes (D). The other (H) receives the superheated steam after it has traversed the superheater tubes (G), delivering it through pipes (J) and cross-box (K) to the stop valve (L) placed above the cross-box. Handholes are placed in the manifolds opposite the ends of the superheater tubes to facilitate inspection.

The flooding arrangement consists in a connection with the water space of the boiler drum; by means of the larger of two cocks (B) and connecting pipe (S) water can enter the lower manifold (H) and fill the superheater to the water level of the boiler. Any steam formed in the superheater tubes is returned into the boiler drum, through the collecting pipes (D), which, when the superheater is at work, convey saturated or natural steam into the upper manifold (F). Prior to opening the stop valve (L), when a superheater has been flooded, the water is drained away from the manifolds by the pipe (O) and the smaller cock (C). A sight glass (A) is attached to the outlet of the small cock to show when all the water has been blown out.

The superheater is placed in a position where there is practically no deteriorating condensation of the gases, and where the temperature is sufficiently high to ensure the steam receiving from 100° to 250° F. of superheat, or more if desired. It is not subject to the immediate action of the fire, as the furnace gases must first pass through the front part of the boiler, which comprises a

THE BABCOCK & WILCOX STANDARD INTEGRAL SUPERHEATER.


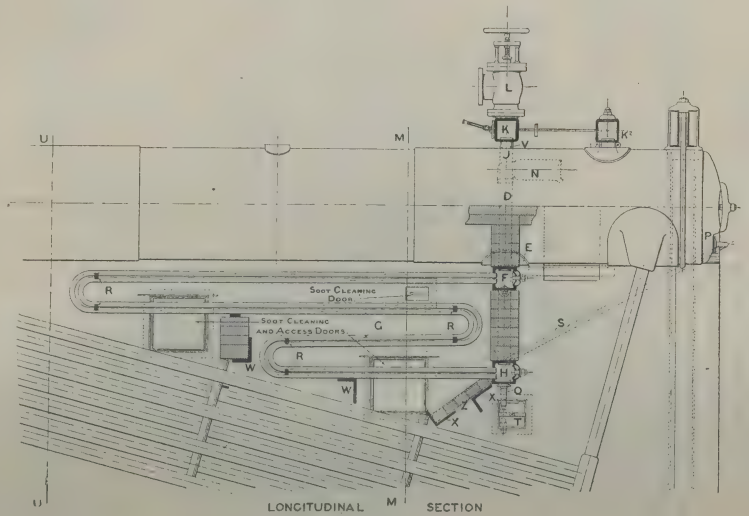


FIG. 4.—Longitudinal Section.

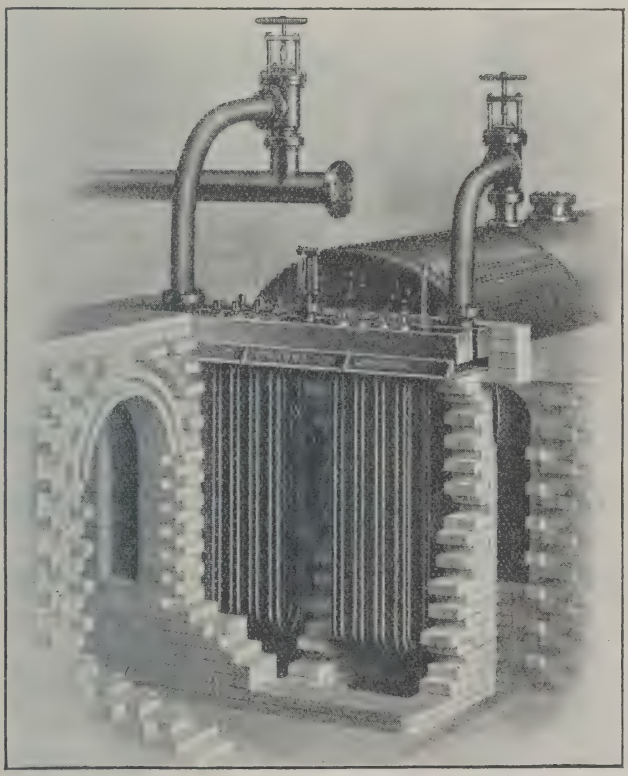The SUGDEN STANDARD SUPERHEATER



As applied to a Lancashire Boiler.

T. SUGDEN LTD., *Engineers & Contractors,*

180 FLEET STREET, LONDON, E.C.4.

SEE PAGE 1519 FOR FURTHER INFORMATION.

SUPERHEATERS

For Lancashire, Cornish, Vertical, and all types of Land Boilers.

Also SUPERHEATERS for Marine Boilers.
Locomotives and Independent Firing.

(See Articles, pages 601, 1519 & 2027)

The most reliable and accessible Superheater.
Made throughout in WROUGHT STEEL.

T. SUGDEN, Limited

Engineers and Contractors

180 FLEET STREET, LONDON, E.C. 4.

Telegrams:
'Tubularity, Fleet, London.'

Telephone No.:
186 Holborn.

THE

'Sugden' Magnifying Thermometer

For reading temperatures from a distance.

SPECIALLY MADE *to* SUIT ENGINEERS' REQUIREMENTS

□ □ □

For use in connection with SUPERHEATERS, ECONOMISERS, STEAM TURBINES, THRUST BLOCKS, REDUCTION GEARS ——————AND BEARINGS.——————

Also THERMOMETERS fitted with ELECTRIC ALARMS

THERMOMETERS for GAS WORKS, CHEMICAL WORKS, BREWERIES, and all Industrial Purposes.

For full particulars write :—

T. SUGDEN, LTD., 180 FLEET STREET, E.C. 4.

considerable heating surface. Assuming the boiler to be in regular work, and the firing even, no great fluctuations in temperature can take place where the superheater is fixed. It is readily accessible for examination, and for the renewal of tubes. There are no flanged joints, all the tube joints are expanded. Expansion is provided for by the tubes being free at one end, and by the manifolds not being rigidly connected with each other. Prevention against over-heating during steam raising from cold water after cleaning, etc., is ensured by the arrangement for flooding with boiling water, and using the superheater as part of the boiler-heating surface.

The Thompson Patent Sectional Superheater.

(*John Thompson (Wolverhampton) Ltd., Wolverhampton.*)

This superheater (fig. 5, p. 1520) consists of a pair of mild steel cylindrical headers connected by two groups of U or W tubes. The tubes have tapered ends machined to gauge and fitted into milled holes in the headers, making a metal-to-metal joint, and are held in position by a right- and left-hand screw stud. The advantages of this method of fixing the tubes are, perfect interchangeability and speed and ease with which any tube can be removed or replaced for any purpose, as every tube can be taken out without disturbing the headers, pipe connections, or brickwork.

The steam passes through the hot gases four times, consequently the velocity of the steam is increased and great efficiency obtained.

This superheater is adaptable to all land boilers, and is suitable for the highest pressures.

The Sugden Patent Down-Take Superheater.

(*Messrs. T. Sugden, Ltd.*, 180 *Fleet Street, London, E.C.* 4.)

This superheater (for Lancashire, Cornish, and other boilers with external flues) consists of two mild steel headers, connected by solid drawn mild steel loop tubes, and is fixed in the down-take flue at the back end of the boiler.

In the Single Flow Double Header Superheater, one of the headers is used as an inlet box, and is connected by piping to the main stop valve of the boiler. The saturated steam from the boiler passes forward from the inlet header through the loop tubes into the outlet header, and from thence it is supplied as superheated steam to engines or for distribution as required. Superheat temperatures up to 700° F. can be obtained.

The special features of this superheater are as follows :—

The tubes are connected to each header by expanding the tube ends, thus making a simple reliable joint free from leakage troubles. A handhole is fitted over each group of four tubes, thereby providing easy accessibility for blocking off, re-expanding, or renewing the loop tubes.

The branches for connecting to the steam pipes are pressed up out of the solid metal of each header, thereby eliminating all uncertainties which occur with welded or screwed-in branches.

Access covers are provided between the inlet and outlet boxes for examination of the down-take, and these covers also enable the condition of the U-tubes to be easily examined from the outside, and any accumulation of ashes or soot can be brushed off the superheater tubes.

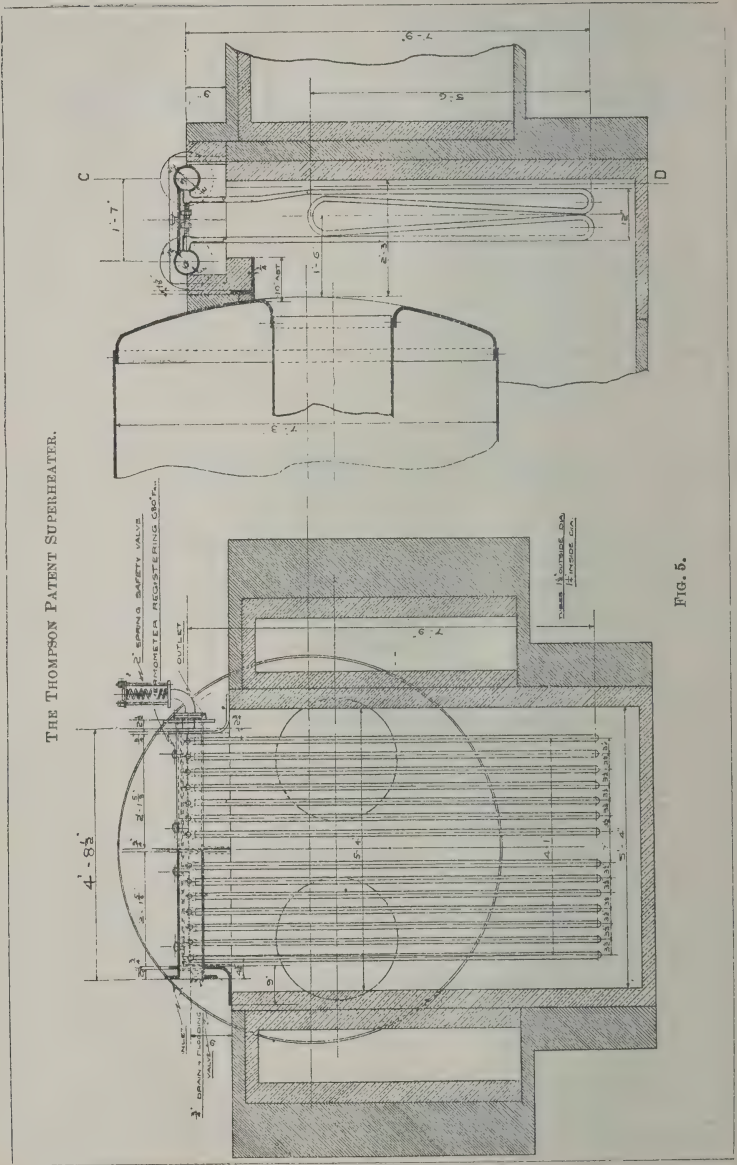
The headers are supported by strong cast-iron plates and are built into the brickwork, thereby reducing radiation losses and preventing the admission of cold air to the flues.

Messrs. Sugden also supply 'Double-header Multiflow Superheaters,' and a patent 'Single-header Superheater' for restricted down-takes. This superheater takes up a width of about 6 ins., and can be placed in a down-take 1 ft. 6 ins. wide without any serious interference with the space required by an inspector for examination of the back end of the boiler.

Messrs. Sugden claim that the superheater is of the simplest and most reliable construction, and that it has stood the test of twenty years' use under all kinds of working conditions, also that the maintenance costs are exceedingly low, and in many cases 'Sugden' superheaters have been at work for 15 to 17 years without any repairs or replacements, and are still working satisfactorily in exactly the same condition as when first installed.

The superheater is supplied as a complete apparatus or is delivered in sections and built up on the site, and is arranged so that the loop tubes can be renewed without removal of the headers or any disturbance of the brickwork.

The firm are also makers of independently fired superheaters for tubular and all types of land boilers, also for marine and locomotive boilers.



THE THOMPSON PATENT SUPERHEATER.


FIG. 5.


STEAM PLANT ECONOMY

REDUCE YOUR COAL BILL

THE

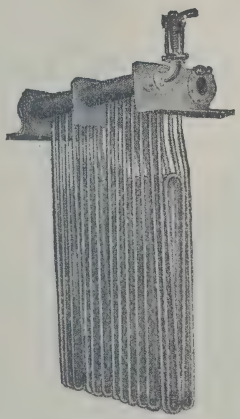'THOMPSON' SUPERHEATER





Right and Left Hand Box Thread. By tightening or releasing this, the Tube is fixed or removed in less than a minute.

(Patent No. 1317 of 1914.)

Suitable for LANCASHIRE, CORNISH, ECONOMIC (DRY BACK), OR WATER-TUBE BOILERS.

All Tubes Interchangeable. Minimum Erection Costs. No Expanding Required.

Write for Illustrated Catalogue or ask for one of our Engineers to Call and Advise you on the Economical Running of your Steam Plant.

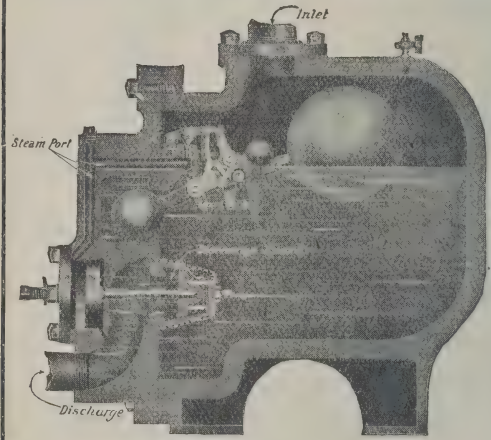
JOHN THOMPSON (Wolverhampton) Ltd.

WOLVERHAMPTON.

F 1520

STEAM TRAPS

The BRADFORD Steam Trap.



Greater Capacity than any other.

Instantaneous Opening and Closing.

No Wire Drawing.

Discharge Full Open or Dead Closed.

Will Deal with Flooding or Priming.

Piston or Weight-Operated Discharge.

Hand Flushing Lever for blowing through when required.

Sent on Approval.

(*See article, page 1521.*)

Plummer's FEED WATER HEATER and PURIFIER.

PREVENTS SCALE WITHOUT CHEMICALS.

United States Metallic Packing Co. Ltd.,

Soho Works, Bradford.

116 Fenchurch St., London; 632 Royal Liver Bldg., Liverpool; Palatine Bldgs., Bolton; Pembroke Bldgs., Swansea; 52 St. Enoch Sq., Glasgow; 2 Collingwood St., Newcastle-on-Tyne, &c., &c.

F. 1521

STEAM TRAPS.

Steam traps are indispensable adjuncts to steam apparatus in which water of condensation should be drained off with regularity and certainty and without loss of steam.

A steam trap should work well and economically, and without adjustment, at all steam pressures.

'The Bradford' Steam Trap.

'The Bradford' Steam Trap (Nicholson-Lloyd Patents) embodies a new principle in this class of device. It is a float trap, but with an important difference. The float does not open or close the discharge valve. It simply releases or engages a weighted lever, which is so arranged that the outlet is instantaneously opened or instantaneously closed. There is no middle position. This effectually prevents the wire-drawing of the discharge, which cuts the valve and seat and so destroys the efficiency of those traps where the opening and closing take place gradually.

The method of operation is as follows (figs. 6 and 7). The water accumulates in the collecting chamber and gradually raises the float until the latter reaches the desired point,

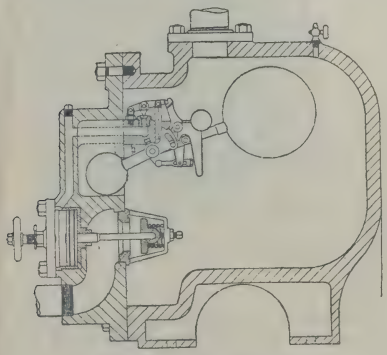


FIG. 6.—Piston-Operated Trap.

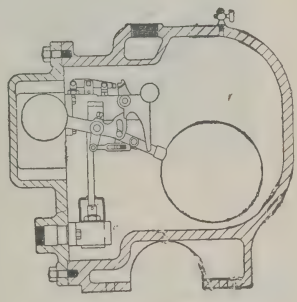


FIG. 7.—Direct-Operated Trap.

when it trips the weighted lever, which immediately opens the discharge to its fullest extent. The water is then forced out under full pressure until it reaches the bottom level, when the lever is again tripped and the discharge is at once closed. The outlet is always submerged, so that there can be no escape of steam.

The apparatus is made in two classes, viz. the piston-operated trap and the direct-operated trap. Fig. 6 represents the piston-operated trap, in which the discharge valve is operated by the steam acting on a piston working in a cylinder. By this method the maximum diameter of outlet opening is obtained without reference to the steam pressure. This is a most important feature, as in consequence of the unusually large outlet the trap will deal equally well with flooding and priming as with ordinary condensation. Fig. 7 shows the direct-operated trap, in which the action is simpler, the discharge being opened and closed directly from the trip lever, but the area of the outlet is smaller.

The traps will work at any pressure from 250 lbs. downwards, and are made in several sizes. The piston-operated traps will discharge from 10,000 to 160,000 gallons per hour when working at 100 lbs. pressure. In the direct-operated traps the discharge capacities range from 325 to 1,800 gallons per hour at 100 lbs. pressure. Both traps will force the discharge water 1 foot high for every pound of steam pressure.

An *eliminator*, which combines the above trap with a convenient form of separator, is also prepared, the manufacturers being The United States Metallic Packing Co., Ltd., of Soho Works, Allerton Road, Bradford.

The 'Ubel Fullbore' Float Type Steam Trap.

In this arrangement, fig. 11, p. 1523 (*United Brassfounders and Engineers Ltd.*), when the water in the tank 'D' rises above the lip of float 'C,' and fills the float, the pin valve 'A' is drawn down, due to the float sinking. This allows a certain amount of liquid to pass through to the outlet, and equalises the pressure on both sides of the main valve 'B.' Just before reaching the bottom, the pin in 'A' comes in contact with the bottom of 'B,' and draws 'B' off its seating, leaving the fullbore for the remainder of the liquid to escape through. Nos. 1, 2, 3, and 4 sizes have ¾ in., 1 in., 1¼ in., and 2 ins. inlets and outlets, and have discharge capacities of 800, 1,500, 3,300, and 5,600 gals. per hour: it is recommended that one-fifth of the discharge capacity be taken, in order to provide an ample margin.

Cranetilt Steam Traps.

(Crane-Bennett Ltd., London.)

These traps are made in different types, and are adaptable to every duty in connection with the trapping of steam and handling of condensation.

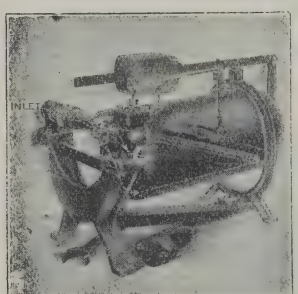


Fig. 8.



Fig. 9.

The Non-return Trap.

This type (fig. 8) will discharge against any pressure less than that at the inlet, and positively traps all the steam. The mere fact that it is seen to work is a guarantee that steam is not blowing through.

The 3-valve Lifting Trap.

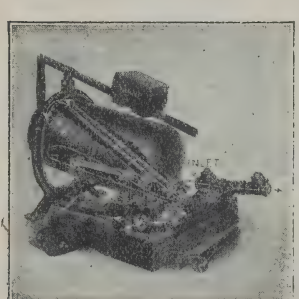


Fig. 10.

This type (fig. 9) will discharge against a pressure greater than at the inlet, and serves the double duty of a pump and receiver governor. It is thoroughly automatic and operates at a small cost; it is very simple in construction and durable; its up-keep is practically negligible. It will handle water at any temperature without danger of becoming steam-bound.

The Direct Boiler Return Trap.

This type (fig. 10) will discharge directly into boilers and has all the advantages over a pump, referred to in the case of the Lifting Trap. It will return condensation to the boilers at nearly the temperature of the steam from which it was condensed, and tests have shown temperatures as high as 300° in the water being fed to the boilers. As 10 to 11 degrees rise in feed-water temperature means 1 per cent. saving in fuel, considerable coal economy is effected.

Cranetilt traps will work with one adjustment, at any pressure up to 250 lbs. The tanks are made of malleable iron, and are subject to a 800 lbs. hydraulic test. The valves and trunnions are made of non-corrosive metals, and for superheated steam, or special duties, special metals are used.

General Notes on Steam Trap Practice.

Steam traps when cold are wide open, so that at starting all air and water are expelled from the pipes when steam commences to pass. The traps close automatically, so that there is no possible chance of water hammer and rents occurring in pipes through an accumulation of cold water suddenly receiving the impact of live steam, the cause of many accidents.

The traps should always be fixed at a point where a droop or bend in the pipe is situated, and at the lowest possible point.

In the event of the drain pipe being screwed into a cylinder or pipe, great care should be taken that the drain does not rise above the inside of the vessel or pipe, otherwise perfect drainage is not possible.

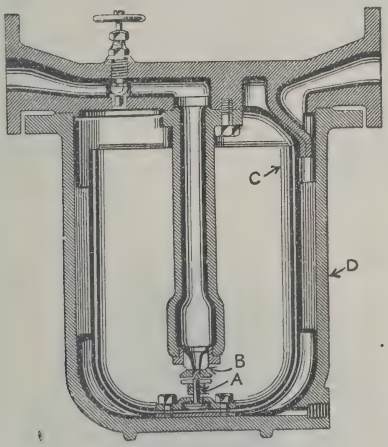


FIG. 11.

FIG. 11.—The ' Ubel Fullbore ' Float Type Steam Trap.

It will be found that if a length of pipe is fitted between traps and vessels to be drained, so as to form a reservoir for the water, it will greatly facilitate the easy working of the trap, as the discharge water is much cooler, and enables the trap to do a larger amount of work than it would do under ordinary conditions.

Every pound of steam will lift a column of water 2½ feet, so that in arranging for tanks, if 2 feet of water for every 1 lb. of steam pressure is allowed for, the allowable height for placing the tank can be ascertained. In this case a non-return valve, similar to a boiler feed check valve, should be placed on the outlet side when the trap is used for lifting water, to prevent the water returning into the pipes when main steam is shut off.

When discharging into a sealed drain it is advisable to fit a three-way cock to the outlet, so that the trap can be adjusted with the cock opened to the atmosphere. There is an additional advantage in having a three-way cock fitted, as the trap's working can be inspected at all times by simply opening the cock to the atmosphere.

By blowing the pipes through with live steam before fixing the trap, the dirt will be cleaned out, and much trouble saved in the after working of same.

The greatest precaution taken cannot always prevent grit getting into the pipes, and if same is not blown out at starting it is likely to get into the trap and become fixed in the seat or valve face. The consequence is, the trap is likely to let steam pass. Steam at high pressure cuts almost as badly as compressed air, and the longer the steam is allowed to blow through the worse the valve is cut. When this takes place the valve should be examined, and, if cut, it should be trued up in a lathe, or if badly cut it should be renewed.

STEAM JACKETS.

Steam jackets are rarely adopted to-day except for slow-running engines. There is no doubt that a well-arranged jacket leads to considerable economy when the engine is supplied with saturated steam. The economy is much less marked with superheated steam, especially as jackets are usually arranged. Having regard to the extra first cost and complication, jackets are not to be recommended with superheated steam unless the conditions are exceptional.

The usual arrangement of steam supply is defective: the steam is supplied to the jacket, and a trap fitted to drain away the condensed steam, but there is no through flow. Usually, on intermediate and low-pressure cylinders the jacket steam pressure is reduced to a few pounds above the steam chest pressure; except to relieve the cylinder barrels and liners of mechanical stress, there is no justification for such an arrangement; from the point of view of steam economy it is ridiculous and largely nullifies the value of the jackets. Wherever possible, the jacket steam should have a through flow. With saturated steam the engine steam should pass through the jackets and then through a water separator before entering the cylinders.

When jackets are used with steam superheated 100° F. or more, they are unnecessary on the high-pressure cylinder.

Reheaters, which are a form of steam jacket applied to the receivers between the cylinders, are useless with saturated steam.

Small and slow-running engines benefit most from jackets.

ECONOMISERS.

General Notes.

The standard pattern for pressures up to 250 pounds per square inch is represented by the Green and similar economisers.

For the latest turbine practice, with pressures of 350 to 450 pounds per square inch, steel pipes are used, and it is becoming usual to design the economiser as an integral portion of the

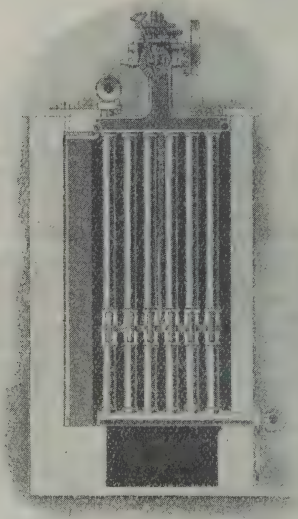


FIG. 12. The 'Green' Economiser

boiler unit. In this sense there is no economiser, but only an equivalent addition to the boiler heating surface. An alternative method is to use cast-iron pipes of moderate surface, sufficient to heat the water to about 200° F. A rotary pump then delivers the water into the boiler proper. The aim of this arrangement is cheapness and the use of standard plant.

Economiser surface can decrease almost inversely as the gas and water velocities, and in fact follows very much the same laws as for boiler and superheater surface.

When using very cold feed, below 90° or 100° F., it should be preheated to 100° F. by live or other steam before passing to the economiser, or the pipes will usually sweat and serious external corrosion take place.

The 'Green' Economiser.

The 'Green' Fuel Economiser, fig. 12 (*E. Green & Son Ltd.*), is a flue-heated feed-water heater. It consists of a series of sections or rows of cast-iron tubes 4.$\frac{3}{16}$ ins. in diameter and 9 ft. long, placed in an enlarged part of the main flue, the tubes being fitted on their external surface with slow-moving scrapers. The sections are from 4 to 12 tubes in width, and the usual number of tubes is 96 per Lancashire boiler. When of large size the economisers are divided into a series of groups of 72 or 96 tubes each. The temperature of the waste gases may be reduced from 650° F. to 350° F., and the feed-water heated to a temperature of from 225° to 300° F. It is not advisable to feed an economiser with water at a lower temperature than 100° F. When the feed-water is colder than this, a small pipe should be led from the heated feed into the entering water, thus raising the temperature by mixture. This prevents external corrosion of the tubes, and improves the action of the scrapers.

The weight of an economiser is about 1 ton for each eight tubes. Its water capacity is 6$\frac{1}{4}$ gallons per tube, and its heat-absorbing surface 10 sq. ft. per tube. The general rule is to provide 4 tubes per ton of coal per week (56 hours). Another rule is to provide 1 tube for each 3 indicated horse-power, but a more accurate standard by which to calculate the size of the economiser required for a given boiler plant, is the evaporative capacity of the boilers.

This economiser is claimed to effect a saving in coal varying from 15 per cent. to 20 per cent in ordinary practice.

The 'Hudson' Economiser.

This economiser (*The Hudson Economiser Co.*) which is also a steam condenser, is of simple construction, and, having no tubes, is claimed to cost nothing for renewal of parts.

The apparatus possesses two special features, viz.:—

1. It extracts the grease from the exhaust steam *before* the latter comes in contact with the cold feed, and thus purified steam is obtained. This is important, as it is said to be impossible to perform the operation of separating the grease from the water afterwards without incurring considerable and constant expense.

2. The *purified steam* comes into direct contact with the *cold* feed (which enters the top chamber of the machine through a patent spray), the water being boiled, a large proportion of the carbonates and other impurities are thrown down, and these are easily removed through the manhole. Thus softened water may be obtained, *absolutely free from oil*, at a temperature of from 200° to 210° F. suitable for boiler feed, and, if required, a large surplus of hot softened water for washing and various other purposes may also be obtained by condensing the whole of the exhaust steam.

In many cases this softened water (free from oil) is being used for cask-washing in breweries, also in public baths, laundries, dye works, mineral-water factories, ice-making works, etc.

By use of this economiser, *incrustation* is entirely arrested before the feed-water enters the boiler, and generally the use of a metal brush may be substituted for the costly chipping of scale from the interior of the boiler shell. In this way a large saving is effected, and the apparatus by reason of this fact alone is of great value to steam users.

A report on *economy trials* by Professor T. H. Beare, M.I.C.E., showed an economy of fuel of 18·8 per cent. by the use of the economiser.

Economiser Data.*

The present standard design of economiser has been practically the same since the first inception, and it would seem to be a very difficult matter to suggest any real improvement on the original design.

The economiser pipe is usually of a standard dimension of 9 ft. length and 4.$\frac{9}{16}$ ins. external diameter, being constructed to suit the boiler pressure and tested by hydraulic pressure to, say, 200 lbs. over working pressure. Each of these standard pipes has approximately 10 sq. ft. of heating surface, holds 6$\frac{1}{4}$ gallons of water and weighs $\frac{1}{3}$ ton. The power required to drive the scrapers is very small, being, for example, about $\frac{1}{2}$ h.p. for a set of 96 tubes. Cast iron is the most suitable material for the tubes, at any rate up to 300 lbs. steam pressure, as steel, wrought iron, copper, brass, etc., will not resist so well the corrosive action of the hot gases.

Makers recommend an installation large enough to hold one hour's supply of feed water in the pipes. Thus if a boiler is evaporating 650 gallons per hour, each tube holds 6$\frac{1}{4}$ gallons, and the number of economiser tubes would be then 104. When the evaporation is not known it is customary to allow 4 pipes for every ton of coal burnt per week of 54 hours, or one pipe for every 3 i.h.p. developed.

* Abstract from 'Exact Data on the running of Steam Boiler Plants.' (D. Brownlie, B.Sc. Hons. (Lond.), F.C.S., J. Compston, and H. W. Royse; *Engineering*, November 1, 1918.)

Out of 250 boiler plants (see page 1468) only 155 were fitted with economisers, the other 95 having no means of utilising the waste heat from the boiler flues. In these 155 plants, the exact average saving obtained was 11·4 per cent. of the coal bill. In actual practice, therefore, only about 17 per cent. of the plants fitted with economisers were saving 15 per cent. or over of the coal bill, whilst over 30 per cent. were saving less than 10 per cent., the true average for the whole 155 plants being 11·4 per cent. as stated.

The average figures from the 155 plants added together showed a beneficial rise in temperature of the feed-water of from 115 deg. F. before the economisers and 241 deg. F. after, i.e., an average rise of 126 deg. F., equivalent to 11·4 per cent. saving. The corresponding fall in the flue gas temperatures from the 155 plants were 581° F. before the economisers and 389° F. after.

The reason the average figures for the actual saving are only 11·4 per cent. is not the fault of the economiser as an appliance, but is due to the fact that the economical generation of steam on scientific lines is not understood, and economisers generally are not installed on correct lines. The economiser is an absolutely essential part of any up-to-date boiler plant, and the saving obtained should be 17½ per cent. to 20 per cent. under average conditions.

Other advantages of the economiser are the reduction of the strain on the boilers by the provision of a high-temperature feed water preventing unequal expansion and contraction, and also that there is always a large reserve of hot water at hand for any sudden demand for steam. Further, the evaporative capacity of the boilers is greatly increased.

The chimney, as a draught producer, is an unscientific and wasteful method of creating a draught, depending for its efficiency on a great waste of heat. If this waste is utilised to the full by the economiser then the draught is curtailed and it is impossible to burn the necessary amount of coal to maintain the evaporation, in spite of the assistance of the economiser. There are many boiler plants that are forced, for this reason, to open slightly the by-pass dampers and allow a portion of the hot gases to go straight up the chimney to waste, so as to maintain a draught to burn the amount of coal required to keep up steam. The mere installing of economisers on rule-of-thumb lines may therefore in some cases be of little real advantage. This difficulty is, however, of little or no importance in the case of mechanical draught.

The water delivered into the economisers should not be over, say, 5 deg. to 6 deg. hardness, when all encrustation troubles will be at an end.

Thousands of economiser pipes have been rendered useless in a few years because of corrosive action. One remedy is to ensure that the feed water does not enter the economiser at a temperature of less than 100 deg. F., by providing an automatic circulating arrangement to take continuously a small portion of the water from the hot end and mix it with water from the cold end.

TABLE SHOWING RESULTS OF WORKING WITH ECONOMISERS.

Division according to Saving Obtained.	No. of Plants.	Average Temperature of Feed-water.		Average Temperature of Flue Gases.		Draught in Inches. W.G.		Steam Press Gauge.	Total Evaporation on Plant per Hour.	No. of Tubes on Plant.
		Before.	After.	Before.	After.	Chimney Base.	Side Flue or Down-take of Boilers.			
		deg. F.	deg. F.	deg. F.	deg. F.			lbs. per sq. in.	lbs.	
No economiser at all .	95	—	—	—	—	—	—	—	—	—
Less than 5 per cent. .	14	134	172	568	371	0·85	0·41	80·0	17,616·0	228
5 per cent. to 7½ per cent.	15	123	194	576	423	0·61	0·35	79·0	15,340·0	203
7½ per cent. to 10 per cent. . . .	23	119	261	549	374	0·74	0·33	100·0	16,630·0	231
10 per cent. to 12½ per cent. . . .	33	118	243	583	403	0·88	0·39	106·0	29,723·0	401
12½ per cent. to 15 per cent. . . .	46	110	262	584	379	0·99	0·41	99·0	19,760·0	280
Over 15 per cent. . .	24	170	284	610	375	1·35	0·60	119·0	23,497·0	392
Total plants .	250									

BOOKS. * * * BOOKS

B. T. BATSFORD, LTD.,

Scientific & Technical Booksellers,

94 HIGH HOLBORN, LONDON,

HAVE

The Largest Stock in Great Britain

OF

NEW AND SECOND-HAND BOOKS

DEALING WITH

Civil, Mechanical, Electrical, and Marine Engineering, Ship Building, Mining & Metallurgy, Arts, Trades, Manufactures, Architecture and Building, &c.

Complete Sets and Portions of Sets of

SCIENTIFIC PERIODICALS AND PROCEEDINGS, TRANSACTIONS OF SCIENTIFIC SOCIETIES, &c.

The Whole on Sale at Very Moderate Prices.

THE WORKS OF ALL TECHNICAL PUBLISHERS, ENGLISH AND AMERICAN, KEPT IN STOCK.

SPECIAL ATTENTION GIVEN TO COLONIAL AND FOREIGN ORDERS.

B. T. BATSFORD, Ltd., 94 High Holborn, LONDON.

Catalogues free. Telephone: 7693 Central.

PREMIER
WATER COOLERS

OUR long experience in supplying Water Coolers of every description and for all purposes, to many of the largest Organisations in the country, enables us to give advice based upon years of practice as to the most suitable Cooler for any given conditions and to guarantee results from any plant supplied by us. Let us tell you of the many installations we have made and of the satisfaction which our customers experience.

Let us also forward you particulars regarding our

WET AND DRY AIR FILTERS, OIL SEPARATORS & UNIC STEAM TRAPS.

THE PREMIER COOLER and ENGINEERING CO. LTD.

Station Works, Shalford, nr. Guildford.

Telegrams: 'PRECOOLER SHALFORD'

Phone: 'SHALFORD 27.'



THE CUMBERLAND ELECTROLYTIC PROCESS FOR PREVENTING CORROSION.

This process eliminates corrosion and prevents scale in economisers of all kinds; in those of the Green, Lowcock or Clay Cross type it is necessary to replace the usual 4-in pipes with others of 8 ins. diameter, otherwise the process cannot be installed

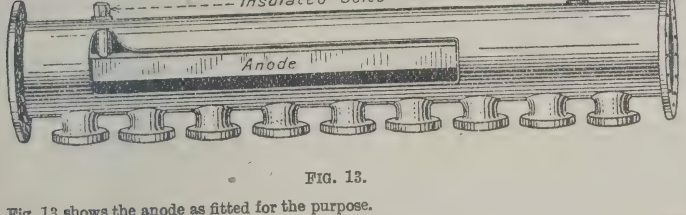


FIG. 13.

Fig. 13 shows the anode as fitted for the purpose.

WATER COOLING TOWERS.

(The Hudson Economiser Co., 110 Bishopsgate, London, E.C. 2.)

In the 'Hudson' patent Water Cooling Towers an allowance of not more than 5 per cent. of the volume of water in circulation is required to make up for loss due to evaporation and possible leakage. The water being frequently heated and 're-cooled' is considerably improved in quality; should it be of a 'hard' nature the carbonates, etc., are precipitated, and a few circuits destroy its scale-forming properties. In cases where large 'cooling reservoirs' are still in use a small 'cooling tower' may be beneficially erected to work in conjunction with them, the reservoirs being utilised to complete the 'cooling' process to the requisite temperature, and a small 'chimney tower' being used to carry all steam and vapour to a height of about 60 feet before liberating it, thus overcoming the inconvenience of having 'steaming' water spread over a large area.

In the system a perfectly free and unrestricted circulation of air in contact with the water is effected, the interior fittings being arranged so as to expose the descending water to the rising air current under the best possible conditions to effectively cool it; even in the hottest climate it is possible to reduce the temperature of the water several degrees below that of the local atmosphere.

The efficiency of the Hudson 'cooling tower' is due to its fulfilling the following conditions :— (1) A perfectly free upward circulation of air. (2) The retention of the water sufficiently long to ensure a complete cooling process. (3) A continuous breaking of the water into a fine spray. (4) The spreading of the water 'film-like' over extensive and exposed surfaces. (5) An evenly distributed 'shower-like' descent of the water from one tier of hurdles to the next. It is effective when working under adverse climatic conditions—viz. when the surrounding temperature is high and the air saturated with moisture.

An important feature of the Hudson apparatus is the great simplicity of its interior fittings. The hurdles are laid in specially prepared recesses, obviating the necessity of 'nailing' down, and whilst being perfectly secure against displacement they can be easily and quickly removed when necessary. Copper rivets are exclusively used in their construction, and there is consequently no corrosion : they are specially treated with a patent composition and are practically indestructible. The hurdles (used for the purpose of breaking up and exposing the descending water) are arranged in tiers laid at an angle of 45 degrees, and are reversed at suitable intervals, for the purpose of retarding the water in its descent. Each hurdle consists of three bars, each bar having four unequal sides. The upper surface of each bar acts as an irrigation or splash bar, causing the water to be broken up into a very fine spray, in which form it readily evaporates and gives up its heat to the rising air current. The bars are grooved at frequent intervals, and the natural tendency of the water to adhere to the wood and flow from the lower point in a thick stream is thus checked and a perfectly uniform and evenly divided shower throughout the cooler is ensured.

STEAM DRYERS AND PURIFIERS AND WATER SEPARATORS.

Dry steam plays a far more important part in the efficiency of engines and boilers than is generally recognised, the economical efficiency of an otherwise high-class plant being frequently marred by the waste, condensation, broken joints, etc., due to wet steam.

Water carried forward from the boiler by priming, although it does no work whatever, is nevertheless heated up to the same temperature as the steam itself, and therefore represents a loss in coal proportionate to its weight. All boilers prime more or less, but priming is invariably heavy in boilers that are worked to their limit, or in any way hard pushed.

An engine may be economical in steam according to diagram, and yet anything but economical if regard is had to the quantity of water contained in the steam, or to the amount of condensation in the cylinder, which the presence of water greatly increases. In the same way a boiler may appear to have a high evaporative efficiency, judged by the quantity of water it disposes of, whereas its efficiency would frequently appear in quite a different light if judged only by the amount of water it evaporated, i.e., gave off as dry steam.

Dry steam itself is not a good conductor of heat, but water is, and therefore its presence in steam pipes and cylinders should never be permitted, as by acting as a conductor between the steam and the metal it sets up active condensation and absolutely prevents economical results being obtained, even in engines of the best design.

In addition to the above considerations, there is also the fact that water in steam pipes invariably causes leaky joints and other annoyances of a nature only too well known.

HEAT ACCUMULATORS.

Where, as in the case particularly of rolling mill engines and winding engines, large quantities of steam are exhausted intermittently, this steam may be profitably utilised in exhaust steam turbines. In order to give a steady supply of steam to the turbine, the exhaust from the high pressure is first passed into a storage vessel or heat accumulator, which consists essentially of a large container in which a large mass of material is placed which can absorb the heat of the engine exhaust during its working periods and redeliver it to the turbine during the 'bridge' periods, i.e. when the reciprocating engine is not exhausting any steam.

An exhaust steam turbine working with steam at, say, 16 lbs. per sq in. abs., and a vacuum of 27·5 ins., will require, with allowance for auxiliaries, about 40 lbs. steam per K.W. hour, so that for every 1,000 lbs. exhaust steam per hour available, and deducting 16 per cent. for wetness and leakage, $\frac{1,000-160}{40} = 21$ K.W. can be obtained.

The proportions of the accumulator depend on the bridge period or time of regeneration, the range of temperature allowable, and the material used to store the heat, as well as on the steam rate. Early accumulators were made up of old boilers packed with old rails, etc., but water is a much more efficient material, for iron has a specific heat of about 0·11 and a specific gravity of about 7, so that its volumetric specific heat is only about 0·77.

The range of temperature to be allowed in the accumulator must be decided upon, and from these figures the mass of water to be employed must be calculated. If the accumulator becomes too hot it will reduce the power of the engines which feed it. If it becomes too cold this proves that the turbine is doing more work than can be supplied by the waste steam. It is considered that usually the stops to be bridged by the accumulator are 60 secs. in colliery work and 30 to 45 in rolling mills. The admission to a steam turbine is assumed to be 16·5 lbs. absolute, the range being 15 to 18 lbs., or 10° F. In some plants, pressure rises more than ½ lb. above atmosphere, and it may fall to 12 lbs. absolute or 5½ ins. of vacuum. A reflux valve is arranged in that case to prevent the vacuum getting back to the engine—an important safeguard for a winding engine.

In calculating accumulators,

$$\mathrm{WTL} = wt,$$

where,

W = lb. of steam supply per sec.; w = lb. of water in accumulator; T = time of regeneration in secs.;

L = latent heat of steam per lb.; t = range of water temperature in accumulator.

It is essential that the steam should mix with the water, or this will be locally heated only. Shallow dishes of water piled in tiers with narrow spaces for steam admission between them have been used, or the water may be kept in continuous circulation by a pump which delivers it in a shower through an upper steam space.

In the Rateau-Morison type of steam accumulator, great attention has been paid to efficient circulation. This has been attained by means of a number of vertical open-ended cylinders, each containing a nozzle with upturned star-shaped opening. This is placed 9 ins. below water-level, and sets up a powerful up-flow through the cylinder, which draws from the base of the accumulator and discharges the heated water at the surface.

As many as 30 such circulators are hung on curved branch pipes from each side of the exhaust main which runs along the crown of the accumulator boiler. Below the main is a third row. The accumulator is a plain cylinder laid horizontally with about 6 ft. of water depth. Circulation is so rapid that a difference of only 2° F. occurs between top and bottom of the water. The circulation cylinders have their discharge openings all turned to one end of the accumulator, and all oil is then drifted that way and collected behind two vertical plates and blown off periodically.

Accumulators are made of old Lancashire boiler shells, or built up of cast iron segments or may be of ferro-concrete.

An increase of vacuum from 26 to 28½ ins. will reduce the steam consumption of a turbine by 25 per cent. With this vacuum the condensate will be about 80° F., and if there is any spare steam it should be applied to feed heating. In this case by heating the feed to 200° an economy of 12 per cent. is secured.

THE PAXMAN Positive Valve Gear engines are suitable for boiler pressures up to 200 lb. per square inch, with a total steam temperature up to 600 degrees Fahr.

The economy of the steam consumption of these engines is remarkable, it being possible to obtain one-horse power for every $9\frac{1}{2}$ to $10\frac{1}{2}$ lb. of superheated steam.

With an installation comprising our 'Economic' type of boiler and Positive Valve Gear engine combined, we are able to guarantee consumptions of 1·1 to 1·2 lb. of coal per I.H.P. per hour under suitable conditions.

Paxman

Steam Engines and Boilers of all types.
Superheaters, Gas Engines & Producers.

DAVEY, PAXMAN & CO. Ltd.,
(Branch of Agricultural & General Engineers, Ltd.).
Colchester, and Central House, Kingsway, W.C. 2.

F. 1528

ENCLOSED HIGH-SPEED ENGINES.

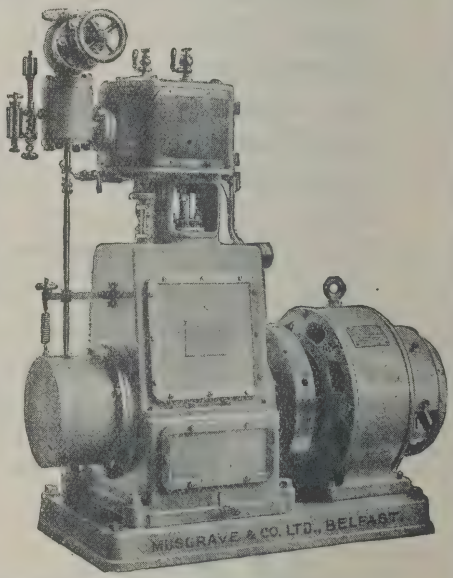
(FORCED LUBRICATION.)

For Direct Coupling to FANS, DYNAMOS, PUMPS, &c.

□ □ □

These Engines embody all the latest developments suggested by up-to-date experience and research, and being designed on liberal lines throughout can always be relied upon even under most exacting conditions.

□ □ □



Full particulars and prices of Single Engines or Combined Sets on application.

On ADMIRALTY LIST.

MUSGRAVE & Co. Ltd.,

BELFAST: St. Ann's Iron Works -	Telegrams:	CENTIGRAD.
MANCHESTER: 42 Deansgate - -	,,	CENTIGRAD.
CARDIFF: 24 Queen Street - - -	,,	CENTIGRAD
LONDON: Sardinia House, Kingsway, W.C. 2 -	,,	MUSGRAVE, HOLBORN
GLASGOW: 11 Bothwell Street - -	,,	CENTIGRAD.

Codes: LIEBER'S. A B C, *5th Edition.* ENGINEERING TELEGRAPH, *2nd Edition.*

SECTION XXIX

PART IV

ENGINE TYPES FOR VARIOUS DUTIES—WEIGHTS OF ENGINES.

(Revised by T B. Morley, D.Sc., M.I.Mech.E.)

ENGINE TYPES FOR VARIOUS DUTIES.

Each type of engine has a field, not sharply defined, in which it shows to best advantage.

Elaborate and expensive types are least desirable when coal is very cheap, the working hours few, labour unskilled, or the working conditions very rough.

Non-condensing engines consume from 20 to 50 per cent. more steam and coal than condensing engines.

Unless floor space is limited or very high speeds are desired, a horizontal engine is generally more satisfactory than a vertical. It is cheaper to instal and more accessible for running and overhauling.

Steam turbines are relatively uneconomical in very small units. In the neighbourhood of 1,000 to 1,500 horse-power they surpass the best reciprocating engines, and for very large units—unless for some special purpose, as driving a reversing rolling-mill—are without serious rival. To show to advantage a turbine must be run condensing, with a good vacuum.

Where economy is at all important the ordinary simple (single-expansion) engine is at a marked disadvantage; which, however, is least with steam superheated 120° or 150°F. For most purposes the compound is the standard type, although the uniflow (a special form of single-expansion engine) is widely adopted. Triple and quadruple expansion engines are more economical than compound, but are more costly and complex. They are therefore chiefly employed on ships, for towns pumping, flour mills, and other situations where coal consumption is specially important. Their superiority over the compound engine is reduced if the steam is superheated.

The class of engine is frequently designated by the valve gear. Thus the plain slide valve gives the cheapest engine and also, other things being equal, the least economical.

The piston valve is really a circular slide valve, and gives an engine of similar characteristics. For the highest economy and class of engine Corliss or drop valves are desirable. The Corliss valve is really a circular slide valve of small diameter which rotates to and fro through a small angle in its valve chamber. The drop valve may be of the double-beat seating type or of the double-beat piston type. As a rule Corliss and drop valves are operated by a trip valve gear or other form of valve mechanism enabling the cut-off to be automatically varied to suit the load. Slide and piston valves, on the other hand, are not so suitable for cut-off governing and are not usually so arranged, but rely on throttling the steam to meet changes of load. High-speed engines almost invariably have piston or slide valves, because trip and other cut-off gears are unsuitable at high speeds of revolution.

Cut-off, or expansion, governing gives the best economy for variable loads, except at very light loads, when throttling is superior. The difference is least with highly superheated steam, which tends to equalise the steam consumptions at different loads (measured per horse-power, of course).

The superior economy of Corliss and drop valve engines is often believed to be due to the superior qualities of trip valve gears. Actually this is a very minor factor. The chief gain arises from the fact that the inlet and exhaust ports and valves are usually quite separate.

The following list shows the engine types adopted for various duties in first-class engineering practice :—

Duty.	*Type of Engine.*
Agriculture, occasional service	Simple, slide or piston, N.C.
„ regular service	Compound, slide or uniflow, N.C.
Cement works	Compound, Corliss or drop, uniflow, S.
Electric generating, small	Compound, high-speed vertical, Corliss, or drop, S.
„ „ medium	Compound, Corliss or drop; uniflow; or turbine, S.
„ „ large	Turbine, S.
Factories, cotton mills, etc.	Compound, Corliss or drop, uniflow, S.
Flour mills	Compound or triple, Corliss or drop, uniflow, S.
Paper mills	Compound, Corliss or drop; uniflow, also with steam extraction, S.
Portable	Same as agriculture.
Pumping, centrifugal	Compound, usually high-speed vertical, also uniflow if at moderate speed, S.
„ hydraulic and town water	Triple three-crank vertical, slow-speed, Corliss or drop, S.
„ well pumps	Compound or triple, Corliss or drop, S.
Rolling mills, not reversing	Horizontal compound, Corliss or drop, uniflow, S.
„ „ reversing	Two- or three-crank, piston valves, simple or tandem compound, often N.C., S.
Winding	Two-crank simple or compound (tandem usually), N.C., S.

Note.—N.C. indicates non-condensing. S. indicates superheated steam.

Engine Types, General.

As coal increases in price the general tendency must be towards the more efficient engines. Thus, for agricultural, portable, and other 'occasional' engines, superheated steam is highly desirable. Condensation is often difficult to arrange, and this makes the merit of the uniflow engine less pronounced. Compounding does not add very much to the cost and justifies itself where the total hours worked in the year reaches a reasonable figure.

For factory working, a high-class compound or uniflow engine is essential and the steam should be superheated 100 to 150° F.; similarly for electric generation, other than occasional or intermittent use.

For large electric generating sets the steam turbine alone need be considered, and should use high pressure and high superheat.

For rolling mills and winding engines a fairly high degree of superheat, 100 to 150° F., is essential. If non-condensing the exhaust steam should be utilised in a low-pressure turbine. If this is not convenient condensation should be employed, although it is not yet usual. In that case compounding should be adopted. Compounding is probably almost always justified for winders for deep shafts.

The Uniflow Engine.

The special characteristic of the uniflow engine is that the steam is exhausted through a central ring of ports; the piston has a length about 90 per cent. of the stroke, and uncovers the exhaust ports at about 90 per cent. of the working stroke (see fig. 1). The steam enters by inlet valves, usually of the double-beat seating type, placed at the cylinder ends, and, as it leaves at the middle, the inlet ends are never cooled by exhaust steam rushing over their surfaces, nor are the exhaust ports exposed to live steam. The clearance volume is 2 to 3 per cent. of the stroke volume, and compression normally begins when the piston covers the exhaust ports—i.e. at about 10 per cent. of the compression stroke.

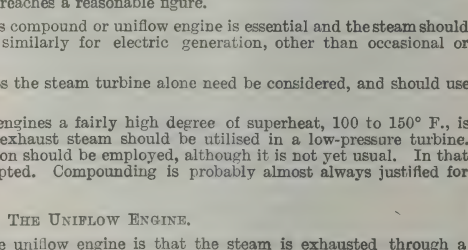


Fig. 1.

The high compression serves to heat not only the clearance surface, but the piston face, and condensation during admission is reduced to a minimum. Cyclic temperature changes in the cylinder walls are reduced, and the temperature falls gradually from the ends to the exhaust belt.

The entire expansion takes place in one cylinder, hence early cut-off is necessary.

The number of expansions is usually about 10; that is, about 10 per cent. cut off. This is not quite so high a figure as a typical compound engine, but owing to the absence of receiver losses and reduced initial condensation, a better economy by 5 to 10 per cent. is obtained with the uniflow, if condensing.

The full steam pipe pressure comes on the large piston, and the load on the line of parts is high in proportion to the M.E.P. This makes for weight and cost, but higher unit stresses, if based on steam pressure only, are permissible if due advantage is taken of the heavy reciprocating parts and high rotational speed to give a high inertia loading. The turning is then equal to a good tandem compound engine, but is inferior at low rotational speeds.

Owing to the high compression ratio, if the vacuum falls below normal, the pressure at the end of compression would become excessive unless an efficient preventive device ('compression release gear') is provided.

The Galloway Uniflow Engine.

(Galloways, Ltd., Manchester.)

The steam valves are double-seated drop valves, and are placed in the cylinder covers, which form steam jackets for the valves and cylinder ends. In boring the cylinder, allowance is made for the higher temperature, and consequent greater expansion, at the ends when working. The cylinder is provided with an inspection door, by removing which the piston rings and cylinder bore may be inspected.

The novel features of the engine described are the patent shockless high-speed valve gear and the automatic compression release gear. In this valve gear (fig. 2) oil under pressure is

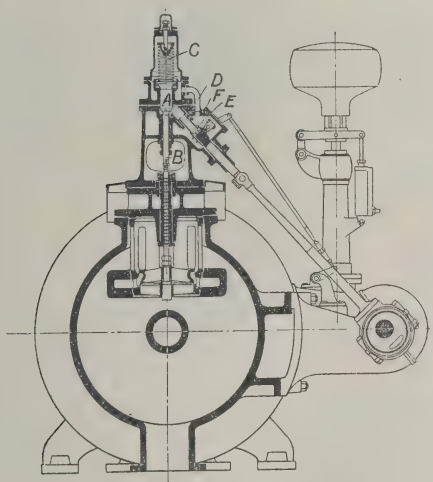


Fig 2.—Cross Section of Cylinder.

applied below the plunger A connected to the valve spindle B and lifts the valve. An eccentric on the lay shaft operates the ram D of an oil pump in the valve bonnet. The ram is hollow, and has a ring of slots or ports E, which at certain parts of the travel may be covered by a sleeve F, the position of which is controlled by the governor. On the upstroke of the pump oil is forced into the chamber below the plunger, thus raising the plunger and the steam valve. At a point determined by the position of the governor, the ports in the hollow ram are overrun by the sleeve and the oil escapes. The valve is then free to close under the combined

action of a spring and dashpot. The valve gear is silent, compact, and takes little power to operate it.

The automatic compression release gear is shown in Fig. 3. Two supplementary exhaust valves G, H, are arranged on the side of the cylinder. They are normally kept closed by springs J, K. On the engine lay-shaft is a sleeve L carrying two cams of tapering form, which are capable of longitudinal movement. Their axial position is made to correspond automatically with the vacuum by means of the spring-controlled piston O of a small cylinder P at the end of the lay-shaft, one end of this cylinder being in communication with the condenser. The

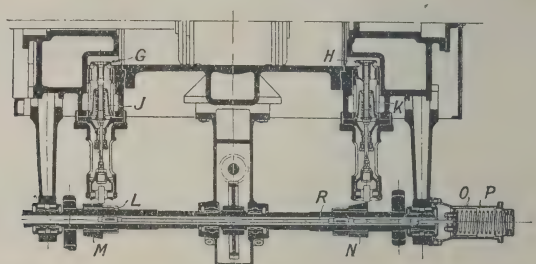


FIG. 3.—Arrangement of the Automatic Exhaust Gear.

piston operates the cams by the rod R. At normal vacuum the small end of each cam is just clear of the roller on the valve stem, and the valves are not opened. If the pressure in the condenser rises the cams move axially, so that each exhaust valve is opened during part of the compression stroke, the amount and duration of the opening depending on the cam position, and hence on the vacuum. This engine starts without vacuum, as it drives its own air pump, and the compression release gear gives full relief of compression until a vacuum is established, and then permits the compression to increase until at normal vacuum full compression is reached. Fig. 4 shows the action of this gear.

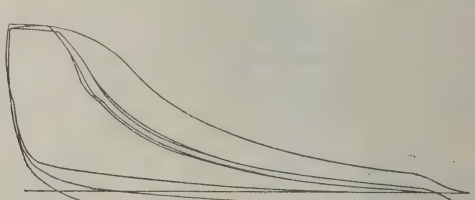


FIG. 4.—Indicator Diagrams, showing Operation of Compression Release Gear.

THE PAXMAN POSITIVE VALVE GEAR ENGINE.

The Paxman type of engine is chiefly noticeable for its simple positive valve gear, its high rotational speed, massive construction, and silent running, its sensitive inertia governor, frictionless metallic packing, and also for its low steam consumption, a result of under 10 lbs. per i.h.p. hour being obtainable under favourable working conditions.

With the Paxman valve gear, fig. 5, no dash-pot is used. The valve is raised by the cam lever A, acting upon the roller B, this lever being moved by the eccentric, and the whole movement is accomplished without noise or hammering. The roller B is always kept in close contact with the cam or lever A during the travel of the valve, by means of the spring shown in the

bonnet. The cam does not move clear of the roller until after the valve is seated, and consequently, even when the engine is running at the highest speeds, the gear is entirely silent. The friction to which the valve is exposed is practically nil.

There is no tripping movement with the valve gear, but the valve is lowered gently on to its seat by means of the cam (the profile of which is so shaped as to allow this to be done rapidly) and when the valve is seated, and not until then, the cam moves clear of the roller. The system renders quite permissible the employment of such high piston speeds and revolutions (even in the case of very large engines) as could not be possible with trip-gear.

The valves are free to lift easily in the case of any abnormal pressure arising within the cylinder, and they thus act as relief valves, avoiding all danger of water shock.

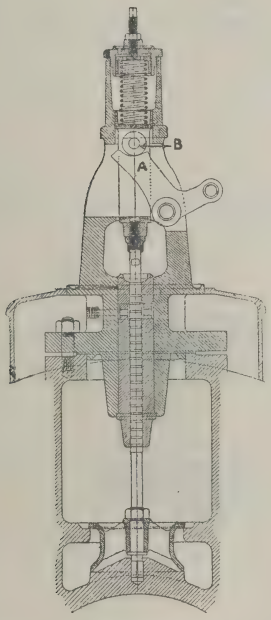


FIG. 5

The valve spindles are grooved and work in cast-iron sleeves; by means of the Paxman system of draining, no stuffing boxes are required, which reduces the friction to a minimum, and allows the governor to be extremely sensitive while having great stability.

The governor is of the inertia type, and is placed on the side shaft; it is directly connected to the two high-pressure steam eccentrics, which eccentrics are movable on a slide block keyed to the shaft: thus the governor can alter the eccentricity, and consequently the cut-off. It regulates within an exceptionally short period, and the momentary change of speed due to the load being thrown on or off is only slightly in excess of the permanent change. Fig. 6 shows graphically the very slight alteration in speed occasioned by throwing the load suddenly off or on the engine, the resultant change of speed being hardly perceptible. The action of the Paxman governor is immediate, and it combines extreme sensibility with a perfect stability comparable with the best turbines.

Fig. 7 shows the piston-rod packing of the Paxman effective type. By eliminating springs, friction is reduced to a minimum, and as the packing is free from wear, perfect steam

tightness is assured. The packing consists of a series of cast-iron rings which fit over the rod, and are held in cast-iron boxes which allow them to oscillate sideways, thus avoiding friction between rod and rings. There is no gland bush, the steam having direct access to the packing, but it returns to the cylinder during the period of expansion, instead of leaking through the packing. The rings form a series of chambers which are efficiently drained, any steam escaping

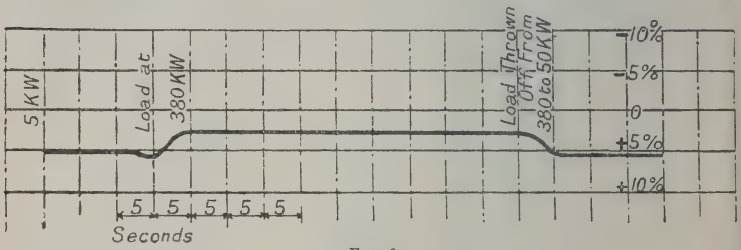


FIG. 6.

from the front chamber entering the second chamber, and there expanding. A small part of it may escape to the third chamber and undergo further expansion, and so on, but the last ring will never show the slightest leakage.

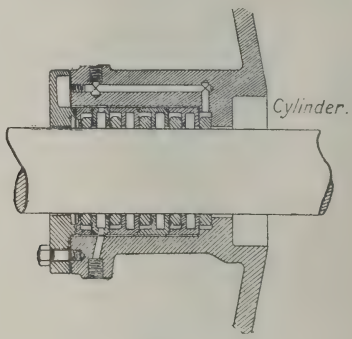


FIG. 7.

Paxman engines are made of the single-cylinder coupled compound, or tandem compound horizontal types, and for any steam pressure up to 190 lbs. at the engine stop valve.

ROBEY DROP-VALVE REVERSING AND OVERWINDING GEAR.

(Patent.)

The distinguishing feature of this gear, fig. 8, page 1535, is its simplicity combined with absolute efficiency.

Both steam and exhaust valves are actuated by the one eccentric marked A. This is effected by the rod B actuating the rocking lever C, which is supported on a fixed bearing D, giving an up-and-down motion to the steam actuating lever E, and the exhaust lever F; the latter, by means of the bell crank lever G, opening the exhaust valve at the proper moment.

The steam admission rod E by means of the well-known Robey trip-motion opens the steam valve. The rods E and F have a constant movement, and the reversing is done by varying the

position of the rod B. This is effected by moving the eccentric A (the strap and connections are omitted in the figure). This eccentric is mounted on a square block H, which is driven from a fixed plate on the layshaft.

By means of the sliding sleeve on the layshaft, and two bell crank levers, the eccentric A can be moved to the position indicated by the dotted lines, and the engine will then run in the opposite

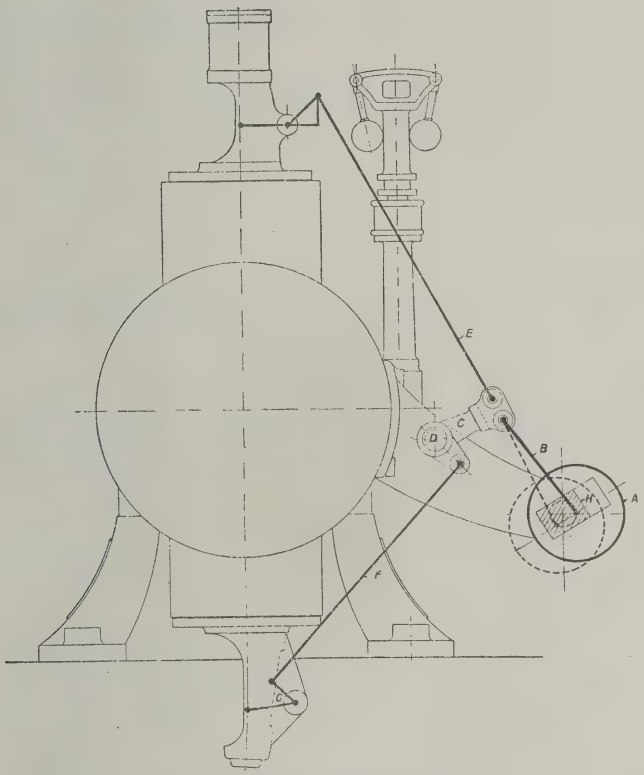


FIG. 8.—Robey Drop-Valve Reversing Gear.

direction. The sliding sleeve is connected by a simple fork connection to the reversing lever and the power necessary to move this eccentric A is very small indeed, and the lever can be worked by hand in engines up to the largest sizes.

Each end of the cylinder has an exactly similar arrangement of the gear, and the same sliding sleeve actuates both eccentrics.

When it is desired to have the gear under the control of the governor, and not by hand alone, it is necessary to have a small auxiliary eccentric on the layshaft, which is keyed on in a fixed

position, and does not vary with the direction of running of the engine. This auxiliary eccentric, in conjunction with the governor, regulates the exact cut-off in accordance with the speed of the engine.

When the governor is in the lowest position, the cut-off is at the maximum, and the driver has therefore only to turn full steam on at the commencement of the wind, as the governor will cut off the steam when maximum speed is obtained. The connection of the governor to the gear is automatically thrown out of action when the engine is reversed, thus enabling the driver to put full steam against the engine.

The steam admission valves are of the well-known Robey type, and there is no liability whatever for the valve to hold up. As a measure of precaution, however, an arrangement is fitted which closes the valve positively if it should by any means not fall, but this has never been known to come into action.

Indicator diagrams show that the lead at all points is practically constant.

In the patent overwinding gear the steam is shut off immediately at the cylinder instead of at the throttle; this renders the system particularly effective.

The overwinding gear is absolutely part of the valve gear, and has not to be driven by an independent chain or gearing of any description.

The Robey High-Speed Vertical Engine.

(Open Type.)

Figs. 9, 10 show the latest type of high-speed vertical engine with open front. It is fitted with the Robey improved crankshaft throttle governor driven direct from the crankshaft without either gearing or belt, thus ensuring absolute reliability. The flywheel can be supplied either suitable for belt driving or of the disc type suitable for direct coupling.

Specification.

Cylinder is made of the best cold-blast iron, free from all defects, fitted with bright covers secured by studs and nuts. All stuffing boxes have gunmetal neck bushes and gunmetal glands. Cylinder drain cocks are fitted with copper-pipe connections.

Governor is of the crankshaft throttle type, dispensing with either belts or gearing for actuating governor. The speed of the engine can be varied while running by means of the adjusting arrangement fitted on the governor.

Piston is of cast iron fitted with expanding rings.

Piston Rod is of steel, coned at top end, fastened to end of piston by nut and pin, and forged solid with crosshead.

Crosshead is of forged steel, fitted with cast-iron slipper, with ample bearing surface and suitable means of adjustment.

The gudgeon pin is of case-hardened tough mild steel ground up true.

Connecting Rod is of best mild steel finished bright all over, fitted with marine large end, and small end provided with adjustment. The top is fork ended and with gudgeon pin shrunk in.

Valve Rod is of best mild steel with case-hardened eye adjustable by a small cotter.

Crankshaft is of steel turned all over and of the balanced slab type.

Standard is of special design with open front, securely attached to baseplate and cylinder, and has a removable polished pillar in front.

Crosshead Guide is tooled out perfectly true, and well fitted with oiling arrangements.

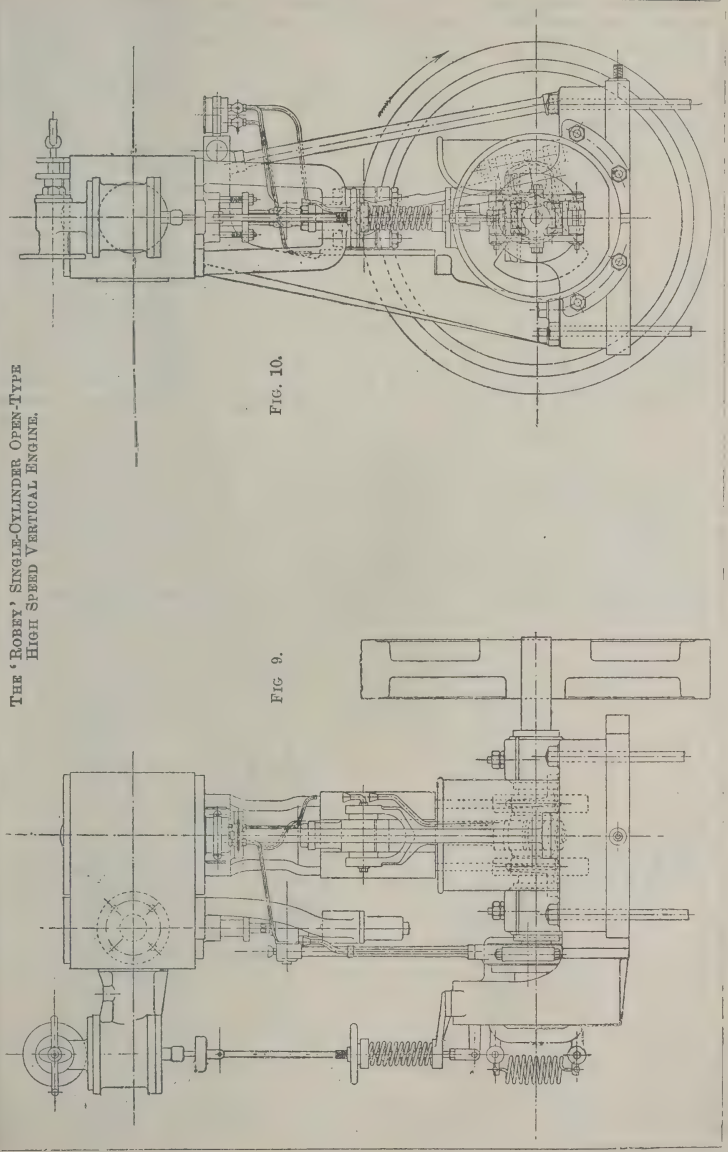
Base Plate and Bearings.—The cast-iron base plate has two adjustable bearings, fitted metal to metal, resting in bored-out carriages formed in base plate and secured by cast-iron caps, with brass and glass needle or drop-feed lubricators.

Flywheel is provided of a heavy pattern, accurately balanced, and turned on face for driving belt, or of the disc pattern with facing for direct coupling to dynamo as required.

Oiling Arrangements.—A special oil reservoir is provided at the top of engine standard with connecting pipes to all working parts.

The crank chamber is formed to collect the oil after use, which may be drawn off by means of a small cock provided at the bottom of the engine bedplate. Suitable splash plates are provided.

Extended Bedplate.—This can be made of suitable design to suit any make of dynamo.



THE 'ROBEY' SINGLE-CYLINDER OPEN-TYPE HIGH SPEED VERTICAL ENGINE.

FIG. 10.

FIG. 9.

WEIGHTS AND MEASUREMENTS OF ROBEY HIGH-SPEED VERTICAL ENGINES (OPEN TYPE).

Cylinder.		Belt Fly-Wheel.		Space Required.		Approximate Weights.				Approximate Cubic Measurement, packed, both.
						With Pickering Governor.		With Shaft Governor.		
Diam.	Stroke.	Diam.	Width.	Length over Crank.	Width over Bed.	Unpacked.	Packed.	Unpacked.	Packed.	
Ins.	Ins.	Ft. Ins.	Ins.	Ft. Ins.	Ft. Ins.	Cwts.	Cwts.	Cwts.	Cwts.	Ft.
3½	3	1 9	3	2 0	1 4½	5	7	6	8	11
4½	4	3 0	3	2 5	1 8	6	8	6½	8½	12
5½	5	3 0	4½	2 9	1 10¾	7	9	8½	11	20
6½	6	3 6	5	3 2	2 0	12½	15	12½	15½	40
7½	7	4 0	6	3 7	2 5½	16	20	18	22	46
8½	8	4 0	6	3 8	2 8½	20	24	22	28	52
9½	9	4 6	8	4 3	3 7½	35	40	38½	46½	62
10½	10	4 6	9	4 6	3 6	42	50	43½	52	86
11½	11	4 6	10	5 5	4 2⅛	60	70	62	72	126
12½	12	5 0	12	5 10	4 5	91	101	96	108	190
13½	13	6 0	12	6 6	4 8	122	140	130	150	250
14½	14	7 0	15	7 0	5 3½	150	170	160	180	300

THE GALLOWAY DROP PISTON VALVE ENGINE.

(*Patent.*)

The special features of this engine (*Galloways Ltd.*) lie in the steam valves, fig. 11, which are of the drop piston type working in a slotted seat, which in turn is carried by a short vertical cylinder standing in the inlet valve of the steam chest. This short cylinder is surrounded on all sides by steam at one temperature and pressure, and remains truly circular under all conditions however much the steam temperature and pressure may vary. This preserves the circularity of the valve liner and therefore its steam-tightness.

The piston valve itself is of the double-beat type fitted with 'Duplex' spring rings. The duplex rings are so arranged that they cannot fall out of the body of the valve in case of breakage.

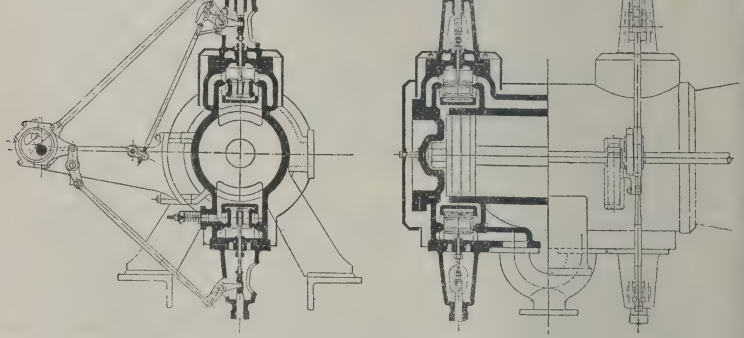


FIG. 11.—Sections through Cylinder, showing Drop Piston Valves.

There being two rings, one inside the other, bedded against each other over their whole circumference, the ring cannot be collapsed by the application of sudden pressure, as when the ring passes over a steam port. On test, the steam leakage in a 14-inch steam valve of this type proved to be a fraction of 1 per cent.

The Galloway Reversing Rolling Mill Engine.

In connection with the reversing rolling mill engines Messrs. Galloways fit a patent single lever expansion control gear. By the employment of one handling lever, both the throttle valve and the cut-off are suitably varied in a predetermined manner. This is so arranged that during the mean rolling period the engine works with variable cut-off and full steam pressure in the cylinders, thus securing maximum economy. When starting up, the gear partially closes the throttle and gives late cut-off so as to produce an even steady turning at a slow speed. When the handling lever is brought to mid gear at the completion of a pass, the control valves are forcibly closed so that no steam leakage can take place. By means of this valve gear the steam consumption is claimed to have been reduced to one-half, or less, of that normally required, whilst the output of the rolling mill is increased, as the single lever expansion control gear gives very rapid action on the part of the engine.

Forced Lubrication.*

Forced lubrication as a continuous or arterial system of conveying oil under pressure to all the working parts of an ordinary reciprocating engine was patented in 1890 (No. 7397) and introduced by Messrs. Belliss & Morcom Ltd. of Birmingham in their self-lubricating engine (*vide* sectional illustration, fig. 12, which shows their original design of compound engine 'O' type). The constant supply of oil under pressure prevents the working surfaces coming together, the film of oil taking an appreciable time to squeeze out, which is sufficient in a double-acting engine running at a high speed to last until the stress is reversed and the film on the other brass comes into operation; the bearing surfaces are thus prevented from coming into actual contact. In this system the engine is enclosed, and oil drawn from a reservoir in the bedplate by a pump is fed to circumferential grooves in each of the main bearings. The crankshaft is drilled, so that oil drawn from the circumferential grooves in the main bearings is conducted to similar circumferential grooves in the crankpins and thence to the crosshead pins and guides. The valve motion is lubricated in the same way, also the working joints in the governor. The oil escaping from the journals returns to the oil-well in the bed for re-use. The pump, which is of the oscillating type without loose valves or packings, is operated from the eccentric and draws its supply through a gauze strainer. The pressure of oil generally used may be anything between 10 and 25 lbs. per sq. inch.

The Belliss and Morcom 'O' Type High-Speed Engine.

The special feature of this engine, fig. 12, is the arrangement of the slide valves, requiring one eccentric and rod only. The low-pressure valve is superimposed above the high-pressure, working in the same valve chamber, the high-pressure valve taking steam on the inside and exhausting direct to the low-pressure, which cuts off on the outside edge. The cranks are necessarily set opposite to each other, the steam being admitted simultaneously to the top of one cylinder and the bottom of the other, by which arrangement the reciprocating parts are to a great extent balanced, the stress on the bearings much reduced, and a high speed of revolution made possible. A variation of speed not exceeding 3 per cent. between full and no load can be guaranteed. The governor gear is arranged so that the speed of the engine is capable of being adjusted whilst running.

A modification of this design of engine, more recently introduced, is the 'V' type (see fig. 13, page 1540).

Back Pressure and Extraction Engines.

Increasing attention is now being paid to the saving of fuel, which is rendered possible by the combination of power supply and heating services, the heating being effected by using exhaust steam or steam taken from the engine at an intermediate pressure. Factories using steam for heating in their own industrial processes offer special opportunities in this direction, though schemes have also been successfully carried out in which the heating of adjoining offices and houses has been effected in addition to the heating required in the factory processes.

For example, in a factory requiring 200 i.h.p. for driving machinery, and 3,200 lbs. of steam per hour at about 5 lbs. per sq. in. gauge pressure for heating purposes, the methods of independent and combined supply may be compared as follows. In the independent method an economical condensing engine would be used, taking, say, 11 lbs. steam per i.h.p. hour, or $11 \times 200 = 2,200$ lbs. steam per hour. The total steam is thus $2,200 + 3,400 = 5,600$ lbs. per hour.

In the combined system, a back pressure engine would be used, exhausting at the pressure required for the heating steam. It would require, say, 18 lbs. steam per i.h.p. hour, or 3,600 lbs, per hour. Allowing 10 per cent. for loss by condensation, 3,240 lbs. exhaust steam per hour are available for heating. Thus the steam to be generated for all purposes is 3,600 lbs., as

Continued on page 1543.

* See also Index.

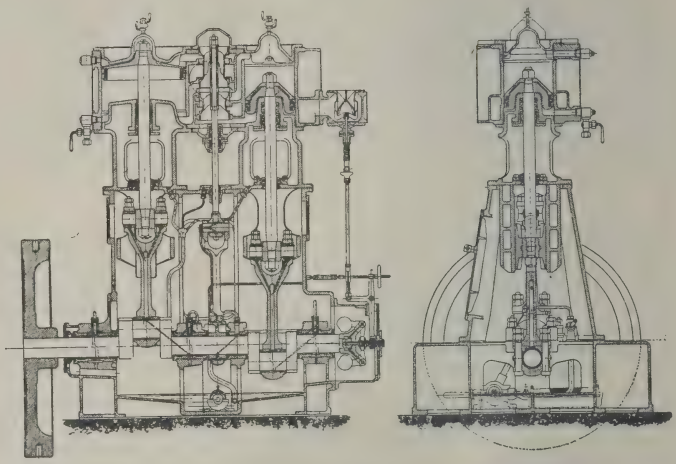


FIG. 12.—Belliss Patent Self-lubricating 'C' Type Compound Engine.

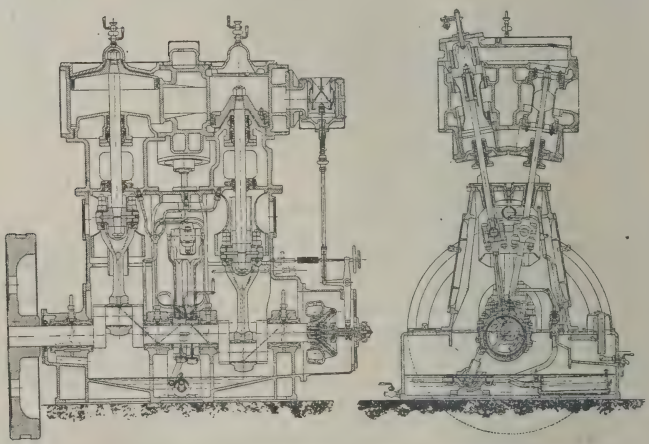



FIG. 13.—Belliss Patent Self-lubricating 'V' Type Compound Engine.

ESTAB. 1852.

BELLISS & MORCOM LTD.


BIRMINGHAM.

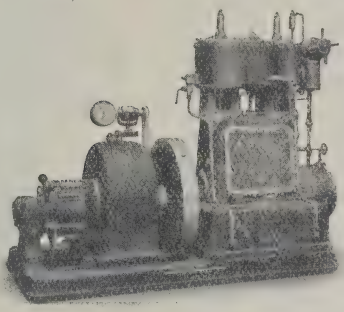For
Electric Power,
Traction, and
Lighting of
Mills, Factories,
and Ships,
also for
Operating
Pumps, Fans,
etc.



'C' Type Compound Engine and Dynamo.

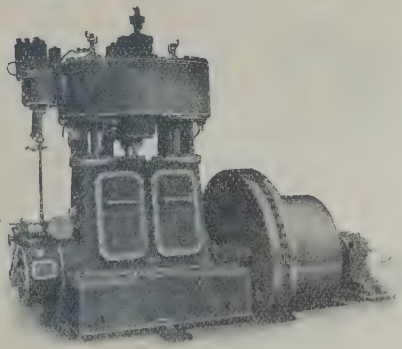STEAM ENGINES



Made in Standard
Sizes
up to
3,000 B.P.H.
of
Simple,
Compound
or
Triple-Expansion
Types.

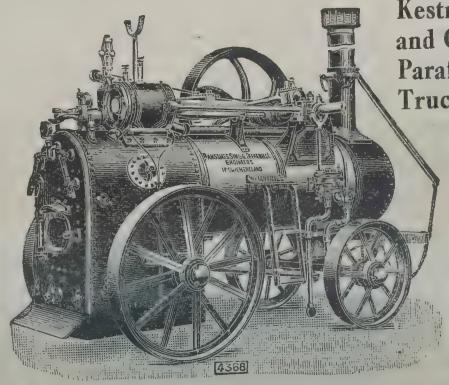
'V' Type Compound Engine with Belt Pulley.

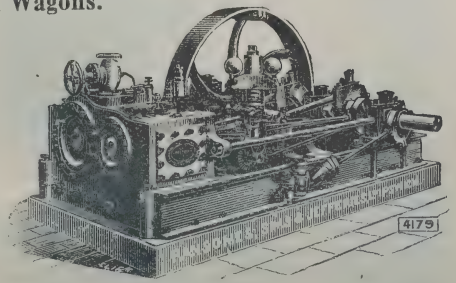
MORE THAN 7,000 SETS SUPPLIED,
representing 2,000,000 H.P.

F 1450.

RANSOMES, SIMS & JEFFERIES, Ltd.

Steam Portable, Traction, Semi-Portable, Undertype and Stationary Engines, High Pressure and Compound, Steam Boilers, including Kestner Patent Water Tube Boilers, Crude Oil Tractors and Crude Oil Engines, Small Two-stroke Cold-starting Paraffin Engines, Electric Vehicles and Platform Trucks, Steam Wagons.





Orwell Works, Ipswich & 46 Queen Victoria St., London, E.C.4.

Telegraphic Addresses:
'RANSOMES, IPSWICH.' 'ANGLIA, LONDON.'

Telephones:
896 IPSWICH. **10817** LONDON CENTRAL.

DIMENSIONS AND WEIGHTS OF STEAM BOILERS AND ENGINES.

(H. Coltman & Sons, Loughborough.)

Vertical Cross-tube Boilers for 80 lbs. per Square Inch W.P.

Height, boilers . . . ft. and ins.	4 0	4 6	5 0	5 0	5 6	6 0	6 6	7 0	7 6	8 0	8 6	
Diameter „ . . . „	2 0	2 0	2 3	2 6	2 6	2 6	2 9	3 0	3 3	3 3	3 6	
Cross-tubes, number of	1	1	1	1	1	2	2	2	3	3	3	
Uptake diameter . . . . ins.	6	6	6	7	7	8	9	9	10	10	11	
Heating surface . sq. ft., approx.	16	17	20	24	27	33	42	50	66	70	79	
Grate area . . . „ „	2·0	2·0	2·6	3·0	3·0	3·0	4·0	5·0	6·0	6·0	7·0	
Gross weight . . cwts. „	7	8	10	12	13	15	19	23	30	31	36	
Measurement . . cub. ft. „	30	32	43	51	55	60	76	93	115	122	147	
Nominal horse-power	1	1½	—	2	2½	3	4	5	6	7	8	

Height, boilers . . . ft. and ins.	9 0	9 0	10 0	11 0	12 0	12 3	12 6	13 0	14 0	15 0	15 0	
Diameter „ . . . „	3 6	4 0	3 9	4 0	4 3	4 6	4 9	5 0	5 0	5 6	6 0	
Cross-tubes, number of	3	3	3	4	4	4	4	5	6	6	6	
Uptake diameter . . . . ins.	11	13	12	13	14	15	16	18	18	19	20	
Heating surface . sq. ft., approx.	85	95	93	118	137	152	168	195	220	250	278	
Grate area . . . „ „	7·0	9·6	8·2	9·6	11·0	12·5	14·1	16·0	16·0	19·6	23·7	
Gross weight . . cwts. „	38	47	47	55	65	69	79	89	97	120	136	
Measurement . . cub. ft. „	150	202	200	247	303	343	386	440	472	594	696	
Nominal horse-power	9	10	10	12	14	15	16	18	20	25	30	

Vertical Multitubular Boilers for 80 lbs. per Square Inch W.P.

Height, boiler . . . ft. and ins.	4 0	5 0	6 0	6 6	7 0	7 6	8 0	8 6	9 0	10 0	11 0	
Diameter „ . . . „	2 0	2 6	2 6	2 9	3 0	3 3	3 3	3 6	4 0	3 9	4 0	
Firebox-height . . . „	2 0	2 3	2 6	2 9	3 0	3 3	3 6	3 9	4 0	4 3	4 6	
„ diameter . . . „	1 7	2 1	2 1	2 4	2 6	2 9	2 9	3 0	3 6	3 3	3 6	
Tubes, diameter . . . . ins.	2¼	2¼	2½	2½	2½	2½	2½	2¾	2¾	2¾	2¾	
Tubes, number of	7	10	13	16	16	18	22	24	24	24	26	
Heating surface . sq. ft., approx.	14	24	36	48	60	72	84	96	120	120	144	
Grate area . . „ „	2·0	3·0	3·0	4·2	5·0	6·0	6·0	7·0	9·6	8·3	9·6	
Gross weight . . cwts. „	8	13	15	19	23	30	32	37	47	47	55	
Measurement . . cub. ft. „	30	52	60	77	98	119	136	153	202	205	254	
Nominal horse-power	1	2	3	4	5	6	7	8	10	10	12	

Horizontal Steam Engines for 100 lbs. per Square Inch W.P.

Cylinder, diameter . . . . ins.	3½	4½	5½	6¼	7¼	8	9	10	11	12	13
Stroke . . . . . „	7	8	8	10	10	12	12	14	14	16	16
Crank-shaft, diameter . . . „	1¾	2	2¼	2½	2¾	2¾	3	3¾	4	4½	5
Crank-shaft, length . . . „	33	39	42	45	48	54	57	63	66	69	72
Fly-wheel, diameter . . . „	21	24	30	36	39	45	48	54	60	66	72
Fly-wheel, width . . . . „	4	4½	5½	6½	7	8	8½	9	9½	10	10½
Revolutions, per minute . . .	240	210	210	168	168	140	140	120	120	105	105
Measurement . . cub. ft., approx.	12	13	15	21	25	33	39	65	75	105	117
Gross weight . . cwts. „	7	9	11	15	19	25	30	42	47	55	65
Nominal horse-power	1	2	3	4	5	6	8	10	12	14	16

Vertical Steam Engines for 100 lbs. per Square Inch W.P.

Cylinder, diameter . . . . ins.	3½	4½	5½	6¼	7¼	8	9	10	11	12	13
Stroke . . . . . „	7	8	8	10	10	12	12	14	14	16	16
Crank-shaft, diameter . . . „	1¾	2	2¼	2½	2¾	3	3¼	3¾	4	4½	5
Crank-shaft, length . . . „	33	39	42	45	48	54	57	63	66	69	72
Fly-wheel, diameter . . . „	21	24	30	36	39	45	48	54	60	66	72
Fly-wheel, width . . . . „	4	4½	5½	6½	7	8	8½	9	9½	10	10½
Revolutions, per minute . . .	240	210	210	168	168	140	140	120	120	105	105
Gross weight . . cwts., approx.	7	9	11	15	19	25	30	38	43	52	60
Measurements . . cub. ft. „	13	18	21	31	41	62	64	95	100	140	152
Nominal horse-power	1	2	3	4	5	6	8	10	12	14	16

PORTABLE STEAM ENGINES.

(Messrs. Davey, Paxman & Co. Ltd., Colchester.)

COMPOUND PORTABLE STEAM ENGINE ON ROLLED GIRDER FRAME (Working Pressure, 140 lbs.).

Nominal Horse-Power.	Brake Horse-Power.		Diameter of Cylinder.		Stroke. Both Cylinders.	Fly-Wheel.			Total Heating Surface.	Approximate Space required.			Approximate Weight.		Approximate Cubic Measurement Packed.
	Economical Load.	Maximum Load.	High Pressure.	Low Pressure.		Diameter.	Face.	Revolutions per Minute.		Length Overall.	Width over Wheel Caps.	Height to top of Fly-Wheel.	Unpacked.	Packed.	
	H.P.	H.P.	Ins.	Ins.	Ins.	Ft. Ins.	Ins.		Sq. Ft.	Ft. Ins.	Ft. Ins.	Ft. Ins.	Cwt.	Cwt.	Cub. Ft.
8	19	23	5½	9	14	5 0	7	155	145·4	11 6	5 7	9 1	108	121	430
10	26	30	6½	10½	14	5 0	8	155	172·8	12 0	5 10	9 6	130	144	500
12	30	35	7	11½	14	5 0	9	155	219·7	12 6	6 7	9 11	153	168	580
16	41	48	8	13	14	5 6	10	155	274·8	13 1	7 0	10 8	206	222	750
20	50	60	9	15	16	6 0	11	135	350·7	14 0	7 7	11 6	260	278	930
25	68	78	10	16	18	7 0	12	120	410·8	16 0	7 10	11 11	310	330	1,100
30	77	90	11	18	18	7 0	14	120	486·5	16 6	8 2	12 2	350	370	1,200

PAXMAN PORTABLE ENGINES. SINGLE CYLINDER. (Working Pressure, 120 lbs.)

Nominal Horse-Power.	Brake Horse-Power.		Cylinder.		Flywheel.			Approximate Space Required.						Approximate.		
	Economical Load.	Maximum Continuous Load.	Diam.	Stroke.	Diam.	Face.	Speed.	Length.		Width.		Height.		Measurement Packed.	Weight Unpacked.	Weight Packed.
			Ins.	Ins.	Ft. Ins.	Ins.	R.P.M.	Ft. Ins.		Ft. Ins.		Ft. Ins.		Cub. Ft.	Cwt.	Cwt.
2	4	5½	4½	8	3 6	4½	210	7	10	4	8	6	10	230	45	52
2½	6	8½	5½	8½	3 6	4½	200	8	10	4	8	6	10	240	52	59
3	8	11½	6½	10	4 0	5	170	9	1	4	11	7	3	255	60	67
4	10	13½	7	12	4 6	6	140	10	2	5	0	7	7	325	70	79
5	13	17	7½	12	4 6	6½	140	10	9	5	6	8	1	355	80	90
6	16	20	8½	12	5 0	6½	140	10	11	5	6	8	5	410	90	100
7	19	23	9½	12	5 0	7	140	11	10	5	6	8	9	465	100	115
8	22	27	10	12	5 0	7½	140	11	11	6	2	9	0	510	115	125
10	28	35	11	14	5 6	8	130	12	8	6	3	9	6	585	128	150
12	36	46	12	16	5 9	9	125	13	3	7	0	10	2	650	146	170

PAXMAN PORTABLE ENGINES. DOUBLE CYLINDER. (Working Pressure, 120 lbs.)

8	20	27	7	12	5 0	7½	140	11	11	6	3	9	0	510	110	125
10	26	34	7½	12	5 0	8	140	12	8	6	3	9	6	585	128	143
12	32	40	8½	12	5 0	9	140	13	3	6	6	10	0	645	150	165
14	39	48	9½	14	5 6	9	125	13	11	6	9	10	0	740	175	190
16	46	56	10	14	5 6	10	125	14	3	7	1	10	1	875	195	215
20	57	71	11	16	6 0	11	115	15	1	8	1	10	9	940	225	245
25	72	90	12	18	6 6	12	110	16	5	8	6	11	0	1,090	255	275
30	84	110	13	18	6 6	14	110	17	2	8	9	12	0	1,310	290	315

NOTE.—The Power given in Columns 2 and 3 is the Brake Horse-Power; the Indicated Horse-Power will be correspondingly higher.

against 5,600 lbs. in the former case, and even though the whole of this steam has to be generated at high pressure and (preferably) superheated, the fuel consumption at the boiler is reduced in nearly the same proportion. The saving in fuel is thus $\frac{5,600 - 3,600}{5,600} \times 100 = 35{\cdot}6$ per cent. nearly.

In the 'intermediate steam extraction' system, which is adapted for fluctuating power and heating requirements, a compound engine is used, the heating steam is taken from the receiver between the cylinders, and only a part of the steam used in the h.p. cylinder passes to the l.p. cylinder, and thence to the condenser. By means of a pressure regulator, the intermediate pressure is allowed to vary only between fixed limits. With an increased demand for heating steam, the pressure falls slightly, the pressure regulator makes the l.p. cut-off take place earlier, and, if the load on the engine remains unchanged, the speed governor makes the h.p. cut-off correspondingly later; thus more steam passes through the h.p. cylinder and less through the l.p. Provision is usually made for supplementing the 'extraction' steam, when necessary, by steam taken directly through a reducing valve from the live steam main; this additional supply is also controlled automatically. The l.p. cylinder may with advantage be of the uniflow type.

By means of such systems the large proportion of heat carried away and lost in the condensing water of even highly economical power plants is greatly reduced; cases are on record in which the heat utilised as work in the engine, together with heat made available for heating purposes, amounts to 77 per cent. of the heat in the steam delivered by the boiler.

SECTION XXIX

PART V

STEAM TURBINES.*

FLOW OF STEAM—NOZZLES—BLADE EFFICIENCY—LOSSES—PACKINGS—ROTORS—MATERIALS—TEST DATA—TURBINE TYPES—REDUCTION GEARS.

(Contributed by H. L. Guy, Wh. Exh., A.M.Inst.C.E., A.M.I.Mech.E.)

In this section the following symbols have been used in the indicated significance, except where otherwise stated :—

c = absolute velocity in ft. per sec.
g = constant of gravitation = 32·2 ft. per sec.^{2}
H.h. = heat drop in B.Th.U.
N = speed in r.p.m.
P = pressure in lbs. per sq. ft.
p = pressure in lbs. per sq. in.
t = temperature °F.
T = absolute temperature °F = (460 + t)
U = peripheral velocity in ft. per sec.
v = specific volume in cubic ft. per lb.
W = weight of steam in lbs. per sec.
w = relative velocity in ft. per sec.
λ = ratio of the specific heats of a gas.
ω = angular velocity in radians per sec.
J = Joule's Equivalent = 778 ft. lbs. per B.Th.U.

FLOW OF STEAM.

When steam flows through a simple orifice from a chamber (denoted by suffix 1) into a space (denoted by suffix 2) the velocity with which discharge takes place is always dependent on the steam conditions existing before the orifice, and sometimes dependent upon those existing on the discharge side.

If the pressure, P_1, in the chamber is maintained constant, while that beyond the orifice is gradually reduced from an initial value equal to P_1, the velocity and quantity of discharge gradually increase and depend on the pressure drop over the orifice, until a critical value is reached corresponding to a definite value of the ratio $\frac{P_2}{P_1}$.

Dr. Zeuner† has shown theoretically, and the result is borne out by experiment, that the critical drop is reached when

$$\frac{P_2}{P_1} = \left(\frac{2}{\lambda+1}\right)^{\frac{\lambda}{\lambda-1}} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (1)$$

For saturated steam $\lambda = 1{\cdot}135$, and $\frac{P_2}{P_1} = 0{\cdot}577$.

For superheated steam $\lambda = 1{\cdot}3$, and $\frac{P_2}{P_1} = 0{\cdot}546$.

---

* See also Marine Steam Turbines, Section XXXIII.
† *Technical Thermodynamics*, Dr. Zeuner.

After this *Critical Pressure Drop* has been reached, the quantity and velocity of discharge remain constant for smaller values of P_2, the discharge being accompanied by strong acoustic vibrations.

Dr. de Laval was able to obtain—and used in his turbine—much higher velocities than the critical velocity, by adding a conically divergent nozzle to the orifice. In this way the vibrations are eliminated, and although the velocity of exit from the nozzle may be considerably greater than the critical velocity, the velocity at the minimum section or throat of the nozzle and the weight of steam discharged remain unchanged from the values which would exist in a simple orifice.

From this it will be apparent that there is a discontinuity in the phenomena accompanying discharge of steam through an orifice or nozzle, and that the equations existing between the various terms entering into the formulæ of steam flow must be considered in two groups.

(a) *When the Pressure Drop is less than the Critical Drop.*

i.e., when $P_2 > 0{\cdot}577\ P_1$, for saturated steam; $P_2 > 0{\cdot}546\ P_1$, for superheated steam.

The theoretical velocity c_1 with which discharge takes place, can be calculated from the formula due to Wantzel and St. Venant,

$$c_1 = \sqrt{2g \frac{\lambda}{\lambda - 1} (P_1 v_1 - P_2 v_2)} \quad . \quad . \quad . \quad . \quad . \quad . \quad (2)$$

The actual velocity of discharge c_2 is less than c_1, on account of the friction and eddy losses in the orifice, and is given by

$$c_2 = \phi\, c_1,$$

$$\text{Where } \phi = \text{velocity coefficient} = \frac{\text{Actual velocity of discharge}}{\text{Theoretical velocity of discharge}}$$

The value of ϕ for various cases is given in Table II., page 1550.

The weight of steam discharged per second is given by the relation

$$W = k\, S \frac{c_2}{v_2} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (3)$$

where v_2 = specific volume of the steam in the lower state, in cubic ft. per lb.
S = the sectional area in sq. ft. of the smallest section or throat of the orifice.
k = coefficient of discharge (see Table II.).

The expansion takes place with very great rapidity and for purposes of calculation it may be assumed to be adiabatic without serious error. The validity of this assumption has been questioned, but Dr. A. Loschge* has proved its approximate correctness by obtaining equal discharge through duplicate nozzles made of metal and of porcelain, and it need only be added that formulæ deduced from this basis agree very closely with experimental results.

For adiabatic expansion—

$$P_1 V_1^{\lambda} = P_2 V_2^{\lambda} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (4)$$

from which, by combination with (2) and (3), we get

$$W = k S \sqrt{2g \frac{\lambda}{\lambda - 1} \frac{P_1}{v_1} \left[\left(\frac{P_2}{P_1}\right)^{\frac{2}{\lambda}} - \left(\frac{P_2}{P_1}\right)^{\frac{\lambda+1}{\lambda}} \right]} \quad . \quad . \quad . \quad . \quad (5)$$

Alternative Method.

The following method of dealing with such problems, due to Dr. Zeuner, is often more simply manipulated than that already given, especially when used in conjunction with the Mollier or other entropy diagram.

If

H_1 = total heat of 1 lb. of the steam in the higher condition in B.Th.U.;
H_2 = total heat of 1 lb. of steam in the lower condition in B.Th.U.;
h_a = the heat drop available for adiabatic expansion = $H_1 - H_2$.

---

* *Engineering*, October 17, 1913.

Then

$$c_1 = \sqrt{2g \cdot J \cdot h_a} \quad . \quad . \quad . \quad (6), \quad \text{and } c_2 = \phi \cdot c_1.$$

W can be calculated as before from (3); h_a can either be measured directly off a Mollier diagram or calculated from steam tables in the following manner :—

If $t°$ = degrees of superheat; L_1 = latent heat corresponding to P_1; T_1 = absolute temperature corresponding to P_1; h_1 = sensible heat corresponding to P_1; X_1 = dryness fraction of the steam in the higher state; T_2 = absolute temperature corresponding to P_2; h_2 = sensible heat corresponding to P_2; X_2 = dryness fraction of the steam in lower state; ϕ_1 = entropy of the liquid in the higher state; ϕ_2 = entropy of the liquid in the lower state.

Then

$$X_2 = \frac{T_2}{L_2}\left[\frac{X_1 L_1}{T_1} + C_p \log_e\left(\frac{T_1 + t}{T_1}\right) + \phi_1 - \phi_2\right],$$

and

$$h_a = X_1 L_1 + C_p \cdot t \cdot + h_1 - X_2 L_2 - h_2.$$

In these formulæ the mean value of the specific heat of superheated steam at constant pressure C_p for the range of the superheat should be taken.

Nozzles which are designed for a smaller pressure drop than the critical are wholly convergent and must be sized according to the methods given in this section.

Simple orifices, the nozzles of Rateau or Zoelly turbines, and both the rotating and stationary blades of Parsons turbines, fall into this class.

(b) When the Pressure Drop is Greater than the Critical Drop.

i.e., when $P_2 < 0{\cdot}577P_1$, for saturated steam; $P_2 < 0{\cdot}546P_1$, for superheated steam.

In this case let the suffix m denote the conditions in the minimum section on 'throat' of the nozzle.

Then whatever the total pressure difference over the nozzle, that from P_1 to the throat pressure is always equal to the critical value, and the nozzle must be convergent to the throat.

By combining (1) with (2) and (4), the velocity in the throat is obtained.

$$c = \sqrt{g\lambda \cdot P\,v} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (7)$$

if $\phi = 1{\cdot}0$.

(7) is identical with the expression for the velocity of sound in the conditions present in the throat, so that the velocity in the throat, or the critical velocity, is equal to sound velocity.

By substituting from (1) and (4) in (5)—

$$W = k S_m \sqrt{2g \frac{\lambda}{\lambda + 1}\left(\frac{P_1}{v_1}\right)\left(\frac{2}{\lambda + 1}\right)^{\frac{2}{\lambda - 1}}} \quad . \quad . \quad . \quad . \quad . \quad (8)$$

from which the discharge per second can be obtained, S_m being the area at the throat in square feet.

The nozzle from the throat to the mouth must be divergent, the area at the mouth being calculated from the relation

$$S_2 = S_m \cdot \frac{v_2}{v_m} \cdot \frac{c_m}{c_2} = S \left[\left(\frac{2}{\lambda + 1}\right)^{\frac{1}{\lambda + 1}} \left(\frac{P_1}{P_2}\right)^{\frac{1}{\lambda}} \sqrt{\frac{\frac{\lambda - 1}{\lambda + 1}}{1 - \left(\frac{P_2}{P_1}\right)^{\frac{\lambda - 1}{\lambda}}}}\right] \quad . \quad . \quad (9)$$

Expressions involving λ are strictly applicable only when the expansion takes place wholly in either the superheated or the saturated region, the corresponding value of λ being introduced.

The following expressions will be found to give approximately the same results as (9).

For Superheated Steam.

If $P_1 = (1{\cdot}732 \text{ to } 20)\ P_2$ $\quad S_2 = S\left(0{\cdot}7175 + 0{\cdot}163\,\frac{P_1}{P_2}\right)$

$P_1 = (20 \text{ to } 100)\ P_2$ $\quad S_2 = S_m\left(1{\cdot}5 + 0{\cdot}125\,\frac{P_1}{P_2}\right)$

For Saturated Steam.

If $P_1 = (1{\cdot}832 \text{ to } 25)\ P_2$ $\quad S_2 = S_m\left(0{\cdot}777 + 0{\cdot}1216\,\frac{P_1}{P_2}\right)$

$P_1 = (25 \text{ to } 100)\ P_2$ $\quad S_2 = S_m\left(1{\cdot}875 + 0{\cdot}0812\,\frac{P_1}{P_2}\right)$

Introducing the numerical value of λ (1·135 for saturated steam and 1·3 for superheated steam), and with $g = 32{\cdot}2$, formula (7) becomes—

For Saturated Steam. $\quad c'' = 70{\cdot}2\ \phi\ \sqrt{p_1 v_1}$

For Superheated Steam. $\quad c_m = 72{\cdot}38\ \phi\ \sqrt{p_1 v_1}$

In the same way formula (8) would produce two expressions for the discharge depending on the condition of the steam as regards superheat. Recent researches by Loschge* and Bendemann have however shown that the numerical coefficient of the formula for nozzles having a convergent entrance is the same both for saturated and superheated steam, and that this value is 2 per cent. higher than is obtained by inserting $\lambda = 1{\cdot}135$.

This is in accordance with the previously known fact that for saturated steam the discharge from such a nozzle exceeds the theoretical amount.

Just prior to the publication of these researches Mr. H. M. Martin* propounded the ingenious theory that with steam initially saturated an unstable condition exists in the throat, cooling taking place below the saturation temperature without condensation. The decrease in specific volume which results from this 'Under-Cooling' would account for the measured excess in discharge over that calculated on the assumption of adiabatic expansion.

Prof. Stodola has suggested that this under-cooled steam obeys the same law of expansion as superheated steam, so that the experimental fact that the discharge both for saturated and superheated steam is given by one formula is rational and in line with theory.

The formula for discharge deduced from Loschge's experiments is :—

$$W = 44{\cdot}11\ k\ S_m \sqrt{\frac{p_1}{v}}.$$

Table I., giving the critical velocity and the discharge per square inch of throat area, has been calculated on the assumption that $\phi = 1{\cdot}0$ and $k = 1{\cdot}0$; the necessary correction for other values will be obvious.

The following simple formulæ, the first due to Napier and the second to Rankine, are often useful where an error of a few per cents. is admissible.

For Dry Saturated Steam.

$P_1 > \frac{5}{3} P_2$, $W = \frac{s \cdot p_1}{70}$; $\qquad P_1 < \frac{5}{3} P_2$, $W = 0{\cdot}029\ s\ \sqrt{p_2(p_1 - p_2)}$

where s = area of orifice in square inches.

---

* *Engineering*, October 17, 1913.

TABLE I.—DISCHARGE OF DRY SATURATED STEAM WHEN $P_2 < 0{\cdot}57\ P_1$.

Pressure before nozzles.—Lbs. per sq. in. g.	260	220	200	180	160	140	120	100	80	60	40	20	10	0
Steam velocity in throat.—Ft. per sec.	1510	1508	1504	1500	1496	1492	1486	1480	1472	1465	1450	1432	1415	1392
Discharge.—Lbs. per sec. per sq. in. throat area	3·92	3·55	3·07	2·8	2·51	2·24	1·94	1·67	1·39	1·09	0·813	0·523	0.376	0·229

TABLE IA.—DISCHARGE OF SUPERHEATED STEAM WHEN $P_2 < 0{\cdot}54\ P_1$.

Pressure before nozzles.—Lbs. per sq. in. g.	Superheat °F.	260	220	200	180	160	140	120	100	80	60	40	20	10	0
Discharge.—Lbs. per sec. per sq. in. throat area	100	3·61	3·1	2·84	2·59	2·32	2·07	1·81	1·55	1·29	1·02	0 755	0·486	0·35	0·211
Discharge.—Lbs. per sec. per sq. in. throat area	200	3·39	2·91	2·67	2·43	2·19	1·94	1·70	1·45	1·20	0·96	0·712	0·457	0·329	0·198
Discharge.—Lbs. per sec. per sq. in. throat area	300	3·19	2·76	2·53	2·31	2·08	1·85	1·61	1·38	1·15	0·913	0·673	0·434	0·311	0·190

TABLE II.

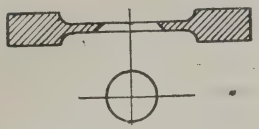
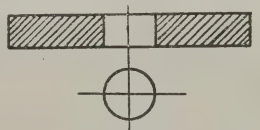
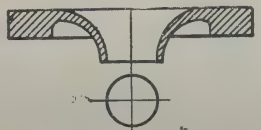
Type of Orifice.	Velocity Coefficient ϕ and Discharge Coefficient k.	Name of Experimenter.	Reference.
A  Circular Hole in Thin Plate.	$\phi = 0{\cdot}86$	Rosenhain	Proc. Inst. C.E. vol. cxl.
	$\frac{P_2}{P_1} = 0{\cdot}95 \quad 0{\cdot}8 \quad 0{\cdot}6 \quad 0{\cdot}4$ $k = 0{\cdot}63 \quad 0{\cdot}68 \quad 0{\cdot}77 \quad 0{\cdot}83$	Rateau	'Flow of Steam' A. Rateau
B  Cylindrical Hole.	$\frac{P_2}{P_1} = 0{\cdot}95 \quad 0{\cdot}8 \quad 0{\cdot}7 \quad 0{\cdot}6$ and smaller values $k = 0{\cdot}79 \quad 0{\cdot}83 \quad 0{\cdot}86 \quad 0{\cdot}88$	Gutermuth	Z. Ver. Deutsch. Ing. January 1904
C  Straight Convergent Nozzle.	$c_o = 500 \quad 900 \quad 1{,}300$ ft. per sec. $\phi = 0{\cdot}936 \quad 0{\cdot}965 \quad 0{\cdot}993$ Saturated steam $\phi = 0{\cdot}954 \quad 0{\cdot}967 \quad 0{\cdot}98$ Superheated steam	Loschge	Z. Ver. Deutsch. Ing. January 11, 1913
	$\frac{P_2}{P_1} = 0{\cdot}95 \quad 0{\cdot}8 \quad 0{\cdot}7 \quad 0{\cdot}6$ smaller values $k = 0{\cdot}94 \quad 0{\cdot}967 \quad 0{\cdot}975 \quad 0{\cdot}99 \quad 1{\cdot}0$	Rateau	'Flow of Steam' A. Rateau
D  Rectangular Orifice.	$\frac{P_2}{P_1} = 0{\cdot}95 \quad 0{\cdot}8 \quad 0{\cdot}7 \quad 0{\cdot}6$ smaller values $k = 0{\cdot}8 \quad 0{\cdot}88 \quad 0{\cdot}91 \quad 0{\cdot}93 \quad 0{\cdot}93$	Gutermuth	Z. Ver. Deutsch. Ing. January 1904

TABLE II.—*continued.*

Type of Orifice.	Velocity Coefficient ϕ and Discharge Coefficient k.	Name of Experimenter.	Reference.
E  Convergent-cylindrical Nozzle. Circular Throat.	$c_1 =$ 200 500 1,000 1,500 ft. per sec. $\phi =$ 0·923 0·935 0·95 0·97 $\frac{P_2}{P_1} =$ 0·95 0·5 $k =$ 1·0 1·0	Briling	Z. Ver. Deutsch. Ing. February 1910
		Hirn ('Experiments on Air')	'Flow of Steam' A. Rateau
F  Straight Convergent-divergent Nozzle. Circular Throat.	For a nozzle 3 ins. long $\phi = 0·95$ " " 6 " " $\phi = 0·915$ $\frac{P_2}{P_1}$ Less than 0·89 $k = 0·98$	Sibley and Kemble	Journal Amer. Soc. M.E. November 1909
		Gutermuth	Z. Ver. Deutsch. Ing. January 1904
G  Turbine Convergent Nozzle. Rectangular Throat.	$c_1 =$ 1,200 1,400 1,600 ft. per sec. $\phi =$ 0·86 0·89 0·91 $k = 1·0$	Christlein	Z. Für. G. Turbinenwesen January 1912
H  Turbine Divergent Nozzle. Circular or Rectangular Throat.	$c_1 =$ 1,700 2,000 2,200 2,700 3,300 4,000 ft. per sec. $\phi =$ 0·92 0·92* 0·93 0·94 0·95 0·955 $k = 1·0$	Christlein	Z. Für. G. Turbinenwesen January 1912
		*Loschge	Z. Ver Deutsch Ing. January 1913.

Design of Nozzles.

The values of ϕ and k as determined by experiment are given in Table II. for orifices and nozzles of various kinds.

The coefficient of discharge k depends amongst other things upon the friction loss, the coefficient of contraction, and usually for a pressure drop below the critical, upon the ratio $\frac{P_2}{P_1}$.

Professor Rateau found that for nozzle C the value of k was slightly greater than unity when P_2 is less than $0{\cdot}5P_1$.

In reference to nozzles G and H, which are of the types used in impulse turbines, it should be mentioned that although the value $k = 1{\cdot}0$ has been inserted in Table II., Dr. Christlein found that the actual discharge exceeds the theoretical by a few per cent. This effect had already been observed by Mr. Rosenhain for nozzles of form F having well-rounded entrances, and he concluded from his experiments that a loss in efficiency results, and was, therefore, led to recommend that the entrance should be only slightly rounded.

These facts are confirmed by Dr. A. Loschge's researches and explained by Mr. H. M. Martin's theory, which is referred to in the preceding paragraph.

The value of ϕ for nozzle G cannot be very satisfactorily determined from Dr. Christlein's experiments; for a given value of c_1, ϕ appears to increase with the pressure and to decrease with the superheat before the nozzle.

Unfortunately, the results of Mr. Rosenhain's experiments, like those of Messrs. Siberly and Kemble, are vitiated by the fact that the wetness of the steam during the experiments was not measured.

Nozzles of type B are useful for approximate measurements of the amount of steam flowing through a pipe line. It is only necessary to put a thick plate having a cylindrical hole in it between two of the pipe flanges. If the pressure is observed before the plate (P_1) and also in the cylindrical hole (P_2) by means of a hole drilled from the rim through the centre thickness of the plate, the flow can be calculated from formula (5).

Of course, the hole in the plate should be of such a diameter that the ratio $\frac{P_2}{P_1}$ is not less than 0·6.

Several steam meters operate on this principle.

The nozzles of turbines are usually of rectangular cross-section, and the steam in passing through them turns through an angle of about 70°, as indicated in figs. G and H, page 1551. It is important to bear this in mind when employing data relating to ϕ and k deduced from straight nozzles of circular cross-section—the type usually favoured by experimentalists.

For a given ratio of expansion the length of the nozzle depends on the angle of divergence. If this angle is too great the steam does not completely fill the cone, which results in considerable loss. If the angle is too small the length of the nozzles becomes very great, and many experiments indicate that the friction loss depends on the length. An angle of divergence of 10° is very common.

The experiments of Mr. Rosenhain, and more recently of Messrs. Siberly and Kemble, show that there is no appreciable difference in efficiency for angles varying from 9° to 20°.

If the ratio $\frac{S_2}{S_m}$ is less than that theoretically required, expansion is completed beyond the nozzle. Rateau's experiments demonstrate that when this *under-expansion* is small, little loss results. On the other hand, if $\frac{S_2}{S_m}$ is greater than that theoretically required, the steam is expanded in the nozzle below the condition into which it discharges. Such *over-expansion* results in steam shock with great loss of efficiency.

When the divergent nozzles of a turbine are correctly designed for the normal load, over-expansion takes place at overloads, and under-expansion at partial loads, with nozzle cut-out governing.

The entrance of divergent nozzles should be smoothly rounded off, with a radius about equal to the throat diameter; larger radii are unnecessary and should be avoided.

Since the efficiency of a nozzle depends upon the smoothness of the surfaces with which the steam is in contact, the material of which it is constructed should be capable of withstanding erosion and oxidisation—nickel steel or a bronze highly polished is usually employed for the divergent nozzles of De Laval and Curtis turbines where high steam velocities are encountered, while cast in mild steel plates have given quite satisfactory results with the large nozzle areas and moderate velocities used in the convergent nozzles of Rateau and Zoelly turbines.

Turbine Efficiency.

The 'Overall Efficiency' of a turbine is obtained by comparing the work actually done per lb. of steam, with that which would be performed by an ideal engine working on the Rankine cycle and having the same initial and final steam conditions as the turbine.

This latter amount of work is equal to the mechanical value of the change in total heat contents (h_a B.Th.U.) which takes place during adiabatic expansion from the steam conditions before the governor valve, to those obtaining in the turbine exhaust.

h_a is referred to as the 'adiabatic heat drop' or the 'available heat drop,' and its value for the steam conditions usual in practice is given in Table III.

TABLE III.—ADIABATIC HEAT DROP IN B.TH.U.

Vacuum 30 ins. Barm.	Superheat ° F	Pressure Lbs. per Sq. In. Absolute. 220	200	180	160	140	120	100	80	60
27″	0	322·0	316·0	309·5	302·0	293·5	283·5	272·0	257·5	239·0
	100	343·4	337·0	329·5	321·0	311·5	301·0	288·5	273·0	253·5
	200	365·0	358·0	350·5	342·0	332·0	321·0	308·0	291·5	271·0
	300	388·5	381·5	373·5	364·5	354·5	343·0	329·5	312·5	292·0
27·5″	0	331·0	325·0	318·0	310·5	302·5	292·5	281·0	267·0	248·5
	100	352·5	346·0	338·5	330·5	321·0	310·5	298·5	282·5	263·0
	200	374·5	367·5	360·0	351·5	342·0	330·5	318·0	301·5	281·0
	300	398·5	391·0	383·0	374·5	364·5	353·0	340·0	323·0	302·0
28·0″	0	341·5	335·5	329·0	321·5	313·0	303·5	292·0	278·0	259·5
	100	363·5	357·5	350·0	342·0	332·5	322·0	310·0	294·5	275·0
	200	386·0	379·0	371·5	363·0	353·5	342·5	330·0	314·0	293·5
	300	410·5	403·0	395·0	386·5	376·5	365·0	352·0	335·5	315·0
28·25″	0	347·5	342·0	335·0	328·0	319·5	310·0	298·5	284·5	266·5
	100	370·0	364·0	356·5	348·5	339·0	328·5	316·5	301·5	282·0
	200	392·5	385·0	378·5	370·0	360·5	349·5	337·0	321·0	300·5
	300	417·0	410·0	402·0	393·5	383·5	372·5	359·0	343·0	322·5
28·5″	0	355·0	349·0	342·5	335·0	327·0	317·5	306·0	292·0	274·0
	100	378·0	371·5	364·0	356·0	347·0	336·5	324·5	309·5	290·0
	200	400·5	394·0	386·5	378·0	368·5	357·5	345·0	329·0	309·0
	300	425·0	418·0	410·5	401·5	392·0	380·5	367·5	351·0	331·0
28·75″	0	363·0	357·5	351·0	343·5	335·5	326·0	315·0	301·0	283·0
	100	386·5	380·0	373·0	365·0	355·5	345·3	333·5	318·5	299·0
	200	409·5	403·0	395·0	387·0	377·5	366·5	354·0	338·5	318·5
	300	434·5	427·5	419·5	411·0	401·0	390·0	377·0	361·0	340·5
29·0″	0	373·0	367·0	361·0	353·5	345·5	336·5	325·0	311·5	293·5
	100	397·0	390·5	383·0	375·5	366·5	356·0	344·5	329·5	310·5
	200	420·0	413·5	406·0	398·0	388·5	378·0	365·5	349·5	330·0
	300	445·5	438·5	431·0	422·0	412·5	401·5	388·5	372·5	352·5

TABLE IIIA.—ADIABATIC HEAT DROP IN B.TH.U. DRY SATURATED STEAM.

Vacuum 30 ins. Barm.	Pressure Lbs. per Sq. In. Absolute. 14	15	16	17	18
27·0	144·0	148·0	152·5	156·5	161·0
27·25	149·0	153·0	157·5	161·5	166·0
27·5	154·5	158·5	162·5	166·5	171·0
27·75	160·0	164·0	168·0	172·5	176·5
28·0	166·5	170·5	175·0	179·0	183·5
28·25	174·0	178·0	182·0	186·0	190·5
28·5	182·5	186·5	190·5	194·5	199·0
28·75	192·0	196·0	200·5	204·5	209·0
29·0	203·0	207·0	211·0	215·0	219·5

If

d = steam consumption in lbs. per S.H.P. hour; N = overall efficiency of the turbine, then

$$N_T = \frac{2,545}{d.h_a} \times 100 \text{ in per cent.}$$

If

d_1 = steam consumption in lbs. per K.W. hour; N_G = generator efficiency in per cent., then

$$N_T = \frac{3,414}{N_{G1}.d_1.h_a} \times 100 \text{ in per cent.}$$

The total steam consumption of the turbine is given by

$$W = \frac{d\ (\text{S.H.P.})}{3,600} \text{ lbs. per sec., or, } W = \frac{d_1\ (\text{K.W.})}{3,600} \text{ lbs. per sec.}$$

While the efficiency calculated with h_a as already defined is the true index of the performance of a turbine when running, it is sometimes the practice—and it is one which has a special value to turbine designers—to calculate the efficiency by taking the heat drop h'_a as that available between the conditions existing after the governor valve, that is, before the nozzles, and the exhaust of the turbine.

This is equivalent to eliminating the consideration of the pressure drop through the governor valve, which is rightly regarded as not being an inherent loss to any given turbine.

Suppose, for example, that two turbines are sold as 1,000 k.w. units to operate with certain steam conditions, and that one is actually capable of developing a load of 1,100 k.w., while the second can only pull a load of 950 k.w.

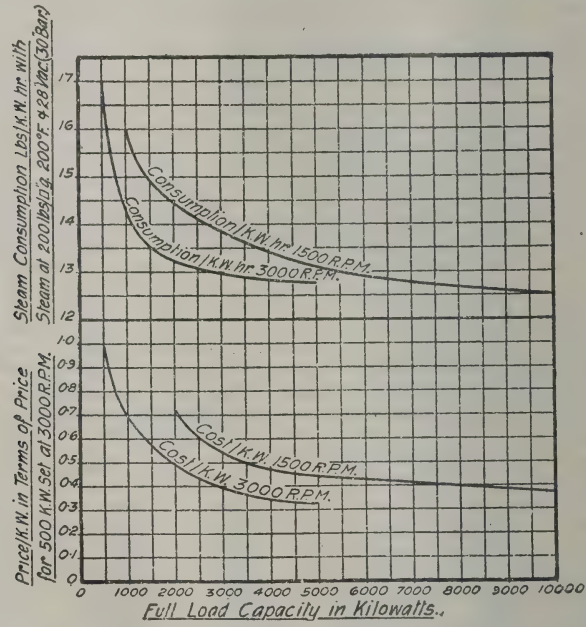


FIG. 1.—Effect of Speed on Steam Consumption and Cost of Turbo-alternators.

If these two turbines are tested on a load of 1,000 k.w., the latter will show the better steam consumption, because with the former the steam will be throttled at the governor to the greater extent. Of course, the first machine is in every way the better from the customer's point of view, providing the excess of power is not too great to be carried by the generator.

The steam consumption which can be expected from turbo-generators using steam at 200 lbs. per square inch, 200° F., and exhausting into a vacuum of 28 ins., is shown by fig. 1* for 1,500 and 3,000 r.p.m. The former speed is the highest which can be used for 25-cycle generators, while the latter can be used for either 25 or 50 cycles. These curves illustrate the effect of speed on efficiency, and cost of turbo-generator plant; thus at 3,000 k.w. the steam consumption of the 3,000 r.p.m. set is 6·15 per cent. better than at 1,500 r.p.m., while the cost per k.w. is 27·8 per cent. lower.

The steam consumption which can be obtained for other steam conditions can be approximately obtained by means of the correction curves shown in fig. 2, which are based on those given in Mr. Baumann's paper.†

The following is a summary of the results of a twenty-four hour test on a typical industrial installation consisting of the following :—

Turbine.—2,000 k.w., 3,000 r.p.m., British Westinghouse Rateau Impulse type.

Steam Conditions.—160 lbs. per sq. in. g., 160° F. supht., 28-in. vacuum.

Generator.—50-cycle, 3-phase, 6,600 volts.

Condensing Plant.—Le Blanc Multiple jet type, to condense 28,700 lbs. of steam per hour, when supplied with 2,200 g.p.m. of water at 75° F., pumps engine driven.

Cooling Tower.—Balcke type, reduced 143,000 gals. water per hour from 98° F. to 75° F., with air temp. of 60° F., humidity 75 per cent., area at base of tower 2,220 sq. ft. Height of tower, 80 ft.

Boiler.—Stirling type, 33,000 lbs. per hour capacity, 8,900 sq. ft. heating surface, drop link stokers, 96 sq. ft. grate area, no economiser.

Feed Heater.—Holden and Brooke type, into which the condenser pump engine and Weir feed pumps exhaust.

Date of test, March 15 and 16, 1916.

SUMMARY OF RESULTS. (Duration of test, 24 hours.)

BOILER HOUSE.	
Total weight of coal burnt	76,776 lbs.
" " ash	3,304 "
" " ash, divided total weight of coal	4·3 %
Average calorific value of coal (lower value)	13,724 B.Th.U./lb.
" moisture in coal	2·391 %
" ash by sample	4·36 %
Total feed water metered	641,000 lbs.
" town " "	471,000 "
" " " divide total feed water = make up water for all purposes	73·5 %
Average feed water temperature after heaters	158° F.
" flue temperature	486° F.
" CO_2	8·82 %
Efficiency of boilers	69·83 %

CONDENSING PLANT.	
Average injection water temperature	68° F.
" extraction	87·5° F.
Water ratio	50 to 1
" injection quantity (average)	2,230 G.p.m.
Average vacuum temperature	99·6° F.
" " efficiency	96·16 %
" difference in vacuum temperature and extraction water temperature	12·1° F.

ENGINE ROOM.	
Average steam pressure before stop valve	157 lbs./sq. in. g.
" steam temperature before stop valve	510° F.
" vacuum (30-in. barometer)	28·1 ins.hg.
Total k.w.'s metered	36,570
Load factor	76·4 %


COOLING TOWER.	
Temperature of air near tower	40° F.
Inlet temperature of water at top of tower	91·75° F.
Temperature of water in sump	70° F.
Drop in temperature of water through tower	21·75° F.
Velocity of air at top of trays	188 ft. per min.
Wet-bulb thermometer over top of trays	77·5° F.
Dry-bulb thermometer over top of trays	78·8° F.
Humidity top of trays	93·4 %
Wet-bulb temperature near tower	37·96° F.
Dry " " " "	39·43° F.
Relative humidity near tower	88·26 %
Cooling water over tower	2,200 G.p.m.
Barometer	29·68 ins.
Water taken up per cubic ft. air passing through tower	7·26 grains


RESULTS.	
Coal per k.w. hour	2·1 lbs.
Steam per lb. of coal	8·35 "
Feed water metered for all purposes per k.w. hour	17·52

* *Steam Turbines for Land Purposes*, H. L. Guy, Manchester Association of Engineers, January 1917.

† *Recent Development on Steam Turbine Practice*, Inst. of E. E., April 1912.

STEAM CONSUMPTION CORRECTIONS FOR TURBINES DESIGNED FOR VARIOUS CONDITIONS.

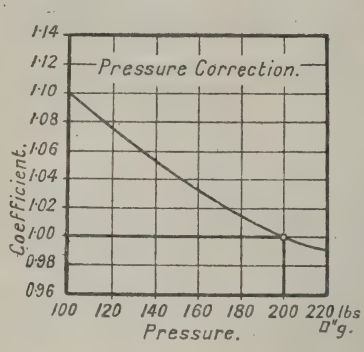

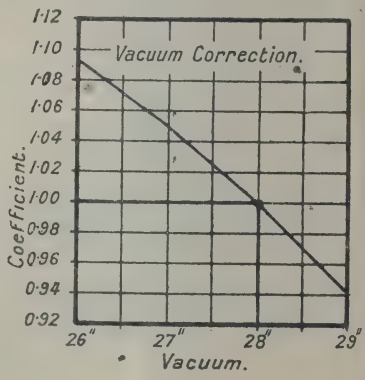

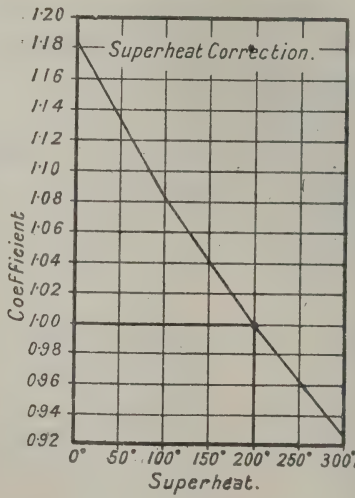


FIG. 2.

STANDARD STEAM CONDITIONS:

200 lbs. per sq. in. g.

200° F.

28 in. Vac.

For other steam conditions, multiply the consumptions obtained from fig. 1 (page 1554) by the coefficients obtained from the curves.

IMPULSE TURBINES.

A pure impulse turbine is one in which the available heat energy of the steam is completely converted into kinetic energy in stationary nozzles.

The steam jet thus produced performs mechanical work by impinging on a rotating row of blades or successive rows of rotating and guide-blades placed immediately before the nozzles.

An impulse turbine in which the whole pressure drop available is utilised in a single set of nozzles is said to consist of one *pressure stage.* If the pressure drop is subdivided between two, three, or more successive sets of nozzles, it consists of two, three, or more pressure stages.

When the kinetic energy of the steam jet is utilised in one row of rotating blades, the turbine is said to have one *velocity stage* per pressure stage. If after the first row of rotating blades, a guide blade is placed to reverse the direction of steam so as to impinge on a second row of rotating blades, the turbine is said to have two ' velocity stages,' and so on.

Since a minimum nozzle height will be fixed by practical considerations (not less than $\frac{1}{4}$ in. even in the smallest turbines), the arc over which the nozzles will extend depends upon the total nozzle mouth area required. In the high-pressure stages this may be, and in fact generally is, less than the mean circumference of the blades. Such a turbine is said to be working with partial admission, and the arc over which the nozzles extend is termed the ' arc of admission.'

This arrangement lends itself especially well to conveniently and efficiently dealing with overloads, it being only necessary to increase the ' arc of admission ' by admitting steam to additional sets of nozzles.

In the same way it is possible to divide the total number of nozzles into blocks controlled by separate cutout valves. Thus one block of nozzles can be designed to give all loads from 0 to $\frac{1}{2}$ full load, while these together with a second block give $\frac{1}{2}$ to $\frac{3}{4}$ and so on.

By this means the loss of pressure through throttling at the governor valve is reduced to a minimum, and substantial economies can be effected on partial loads. The nozzle cutout valves may be operated automatically or by hand. Nozzle cutout governing is not possible with reaction turbines.

(a) Single Pressure Stage Turbine with a Single Velocity Stage.

The nozzles of all impulse turbines can be designed by the methods already indicated, while the work done and the efficiency can be obtained by drawing the triangles of velocity a_1 and a'_2 (see fig. 3). All velocities are in feet per second.

Let

W = total weight of steam through nozzles in lbs. per sec.; c_1 = absolute velocity leaving nozzles; U = peripheral velocity at mean diameter of blades; w_1 = relative velocity at entry

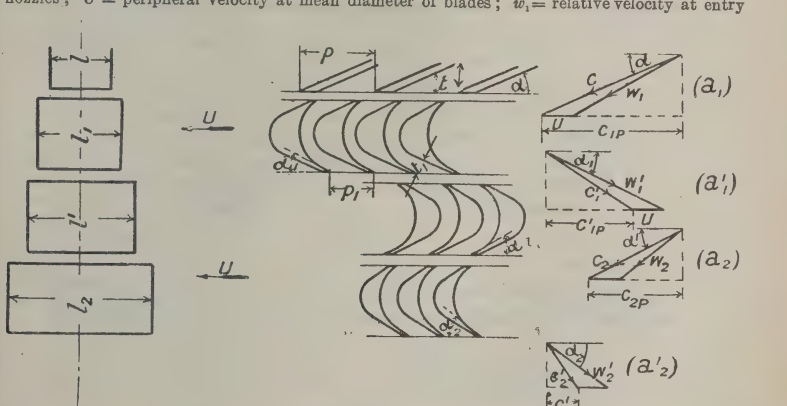


FIG. 3.

to moving blades; w_1' = relative velocity at exit from moving blades; c_1 = absolute velocity leaving the moving blade; c_{1P} $c_1'_P$ = the peripheral components of c_1 and c_1', respectively.

Then

$$w_1' = \psi_1' w ,$$

where $(1 - \psi_1')$ is the loss of velocity due to friction in the blade (see fig. 7, page 1561), ψ is called the *velocity coefficient* for the blades.

The total work done, or
The indicated work $\Big\} = \frac{W\,U}{g}\,(c_{1P} + c_{1'P})$ ft. lbs. per sec.

The blading efficiency $\eta_B = \frac{\text{(total work in ft. lbs. per sec.)}}{W.\,J.\,g.\,h_a}$

If

l = the required nozzle height; l_1 = the required blade height;

then

$$l_1 = l \cdot \frac{c_1}{w_2} \cdot \frac{t}{t_1} \cdot \frac{p_1}{p}$$

The de Laval turbine, which is of this type, is made in sizes from 5 to 500 h.p., running at 30,000 r.p.m. in the smallest size, and 10,000 r.p.m. in the largest outputs.

The peripheral speeds are as high as 1,300 ft. per second, and the steam velocity at exit from the nozzles as high as 4,000 ft. per second.

It can be shown that the efficiency varies with $\frac{U}{C_o}$ where C_o is the velocity theoretically obtained if $\phi = 1{\cdot}0$.

For a maximum efficiency, $\frac{U}{C_o}$ should be about equal to 0·5 (see fig. 5, page 1560, which gives the results obtained experimentally by Dr. O. Lasche).

(b) Single Pressure Stage. Two Velocity Stages.

In this case the work done in the first row of blades is obtained in exactly the same way as in case (*a*).

The guide-blade returns the steam jet towards the direction of U, the steam leaving it with an absolute velocity $c_2 = \psi_2 c_1'$.

The relative velocity of exit from the second rotating blade is $w_2' = \psi_2' w_2$, knowing which, the velocity triangles a_2, a_2' can be drawn. In a_2 and a_2' the same symbols are employed as in a_1 and a_1', a suffix 2 denoting the guide-blade, while a dash denotes the second moving blade.

The total work per second is now

$$= \frac{W\,.\,U}{g}\Big\{(c_{1p} + c_{1'p}) + (c_{2p} + c_{2'})\Big\} \text{ ft. lbs. per sec.}$$

Work done in 1st and 2nd Rows of Velocity Wheels. 3,000 R.P.M.

Initial conditions :—200 lbs. per sq. in. g., 200° F. supf.; steam pressure in casing = 34 lbs. per sq. in. g.; temperature in casing = 410° F.


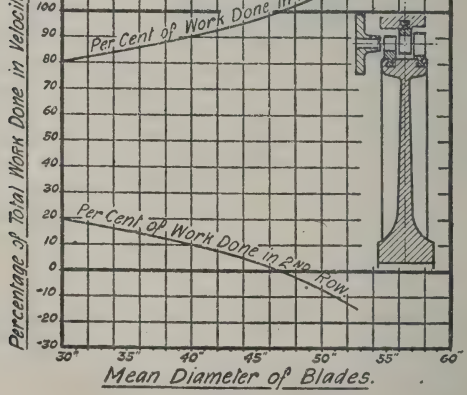


Fig. 4.

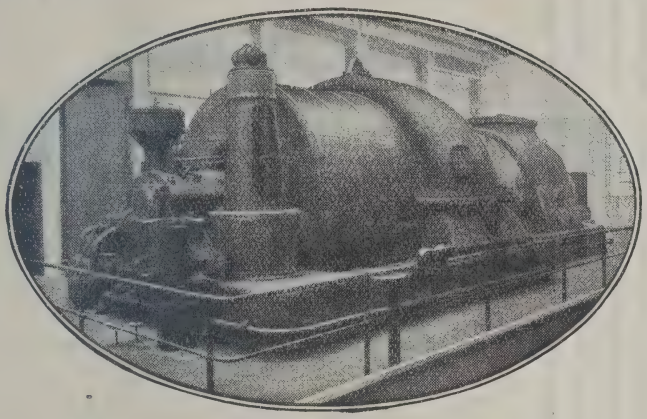

Turbo-Generator Sets

The following advantages are claimed for our Turbo-Generator Sets :—

High Efficiency at full and partial loads. . . . .

Compactness and readiness of access. . . . . .

Precise and sensitive governing. . . . . .

The

ENGLISH ELECTRIC

Company Limited

WORKS: BRADFORD, COVENTRY, PRESTON, RUGBY, & STAFFORD

HEAD OFFICE :—

Queen's House, Kingsway, London, W.C. 2

TELEPHONE——————HOLBORN 830

SEE ALSO OUR ADVERTISEMENTS ON GREY PAGE XIX, AND FACING PAGES 667, 1177, 1673 & 1908.

Metropolitan-Vickers

RATEAU-TYPE

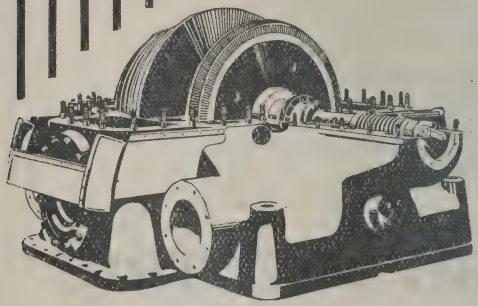
MARINE TURBINES

The Reliability of these turbines is a recognised feature by marine engineers.

Less Engine Room is required allowing greater cargo-carrying capacity.

There are many special features and improvements inclusive to this type of turbine.

Over 130,000 S.H.P. have been installed or are under construction.



WRITE TO
TRAFFORD PARK WORKS

THE Mark of Efficiency

METROPOLITAN Vickers ELECTRICAL CO. LTD.

TRAFFORD PARK MANCHESTER

215A

F. 1559

and

$$\eta_B = \frac{\text{(Total work in ft. lbs. per sec.)}}{W \,.\, J \,.\, g \,.\, h_a}$$

The height of the guide-blade $l^1 = l \,.\, \frac{c_1}{c_a} \,.\, \frac{t}{t^1} \,.\, \frac{p^1}{p}$

The height of the second rotating blade $l_2 = l \,.\, \frac{c_1}{w_2{}^1} \,.\, \frac{t}{t_2} \,.\, \frac{p_2}{p}$

As the mean peripheral velocity of the blades increases the proportion of the work done in the first row increases. This effect is illustrated in fig. 4, from which it will be seen that for the condition stated the second row does no positive work if the mean diameter of the blades exceeds 47½ ins.; it can therefore be dropped with advantage. For this reason two-row wheels are rarely used in modern high-speed machines.

(c) Single Pressure Stage. More than two Velocity Stages.

The solution of this case can be obtained from (*b*) in exactly the same way as (*b*) was obtained from (*a*).

Single-wheel Curtis stages belong to classes (*b*) and (*c*) and are very much employed for small high-speed turbines, where efficiency is not the first consideration.

The peripheral speeds for Curtis wheels are as high as 600 ft. per second, and the steam velocity 2,500 ft. per second.

For a maximum efficiency $\frac{U}{C_o}$ should be about 0·23 for two rows of moving blades, and 0·15 for three rows (see fig. 5, page 1560).

(d) Multi-Pressure Stage Turbine with Single Velocity Stages.

In order that reasonable efficiencies may be reached with practicable peripheral speeds, it becomes necessary to limit the heat drop utilised in each set of nozzles to some value considerably less than the total available between the conditions before the turbine stop valve and those present in the exhaust.

Up to a certain point, which is rarely reached in the conditions of actual design, the efficiency of each stage increases with the value of the ratio $\frac{U}{C_o}$ (see fig. 5, page 1560).

When the value of $\frac{U}{C_o}$ is known, which corresponds to the desired turbine efficiency, the value of C_o and hence of h_a the heat drop to be utilised per stage can be calculated, since U will be fixed by mechanical considerations.

Then for an equal distribution of energy over the pressure stages,

if H_a = the total heat drop available for the whole turbine,

$$\text{The required number of stages } n = e \,.\, \frac{H}{h_a}$$

where *e* is the '*reheat factor*' which depends on the amount of friction and eddy losses, the number of stages, the stage efficiency, etc., and varies between 1·03 and 1·07.

It is usually the practice to give the first stage a larger heat drop than the remainder, thus reducing the total number of wheels required, and having the considerable advantage of reducing the maximum temperature and pressure to which the turbine casing is subjected.

Having apportioned the heat drops, the steam conditions at each stage can be found—most conveniently by the Mollier diagram—and each stage can be designed as indicated under case (*a*).

The Rateau and Zoelly turbines are of this type.

In practice U varies from 350–600 ft. and the steam velocities from 800–1,600 ft. per second.

(e) Multi-Pressure Stage Turbines with Multiple Velocity Stages.

In precisely the same way as has been explained under (*d*), two- or three-row velocity wheels may be employed in the individual pressure stages.

The heat drop which can be advantageously used per pressure stage is then greater than in the case where a single row of blades is used, and thus the required number of pressure stages is reduced, but the efficiency is somewhat decreased, as may be deduced from fig. 5, page 1560.

The general design of each stage is similar to that of case (*b*).

The Curtis turbine is of this type.

(f) Combination Impulse Turbines.

It has recently become the practice to construct pressure-compounded impulse turbines of type (*d*) with a Curtis wheel having two rows of blades in the first stage. By this means a large heat drop can be employed in the first stage with reasonable efficiency and with the consequent advantages already mentioned.

The Curtis-Rateau and Curtis-Zoelly turbines are of this type.

Diagram showing the best efficiencies obtained in Dr. O. Lasche's experiments on Impulse Wheels. The efficiencies have been corrected for disc friction.

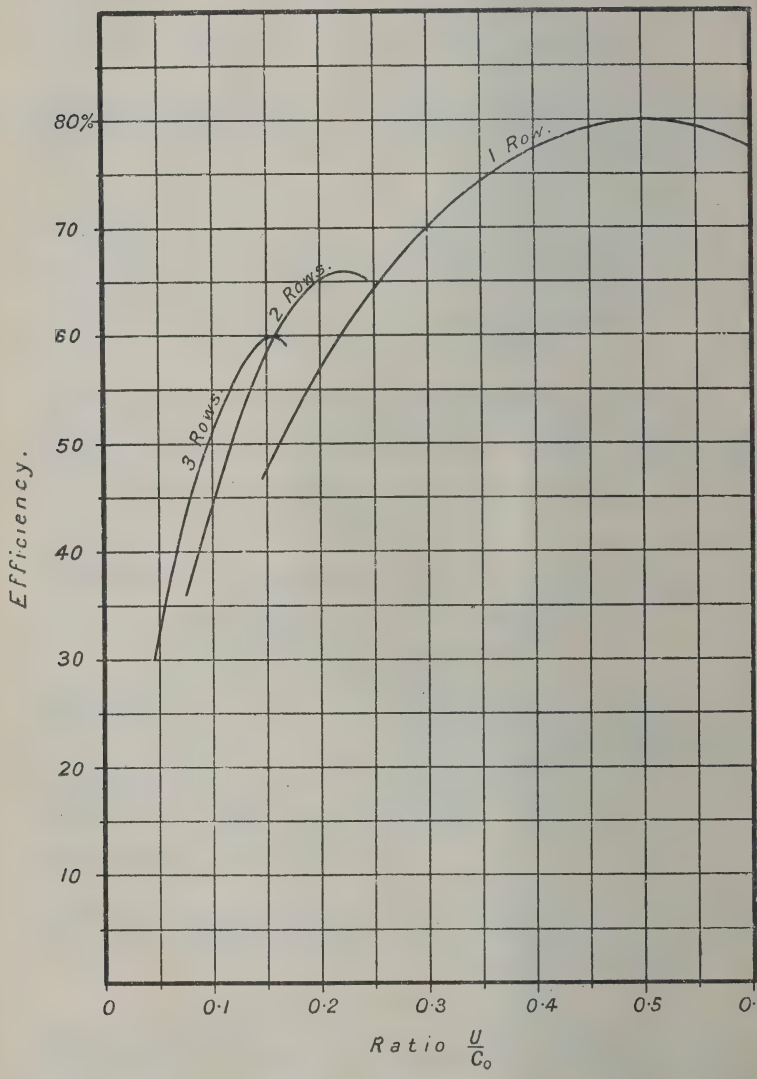


FIG. 5.

CARRY-OVER ENERGY.

In pressure-compounded impulse turbines, the kinetic energy of the steam leaving the last blade of any pressure stage—except the last—is not entirely lost; part of it at least being recovered in the succeeding stage.

The total energy available in the succeeding stage is then greater than the adiabatic heat drop by an amount equal to $\frac{a c^2}{2g}$, where c is the absolute velocity of exit from the velocity blades and a is a constant.

For full admission, Prof. Rateau has suggested the value $a = \frac{2}{3}$, while for partial admission the value $a = \frac{1}{2}$ may be taken.

THE VALUE OF ψ, THE VELOCITY COEFFICIENT FOR BLADES.

The value of ψ has been the subject of researches by Prof. Rateau* and Dr. N. Briling.†


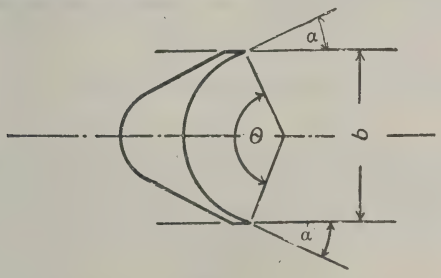


FIG. 6.

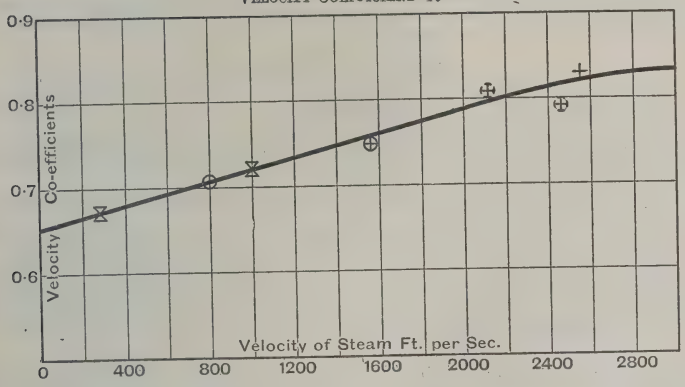

⊕ *Rateau. (Engineering 10/12/09.) Mean Values.*

⊕ *Values deduced from Rateau's experiments on Bucket Reaction; Congrès International de Mécanique Appliquée 1900.*

⧖ *Briling's Experiments with 20 m/m Buckets (Engineering 29/4/10).*

\+ *Stodola "Steam Turbines" deduced from Delaporte's Test of a de Laval Steam Turbine.*

FIG. 7.

* *Engineering*, December 10, 1909. † *Z. Ver. Deutsch. Ing.*, January 1906.

Prof. Rateau found that ψ was a characteristic of each type of blade depending on their size and spacing and slightly increasing with velocity.

Dr. Briling, whose experiments covered a wider field, found that ψ increased with velocity, decreased with the width of the bucket, and appeared to be principally dependent upon the angle through which the steam was diverted in the blade.

Briling deduced the following formula from his experiments :

$$\psi = \psi_o - 0{\cdot}000432\,\theta^{\frac{4}{3}}$$

where θ = total angle in degrees through which steam is turned in the blade (see fig. 6).

ψ_o = 0·90–0·97 for blades with rounded inlet edges.
= 0·95–0·99 for blades with sharp edges.

Mr. H. M. Martin* has given a useful diagram combining Rateau and Briling's results with others deduced from various tests, which is reproduced in fig. 7; from this the following expression can be deduced.

$$\psi = 0{\cdot}65 + \frac{w}{15{,}000}$$

w being the velocity of the steam relatively to the blade in ft. per sec.

PITCH OF IMPULSE BLADES.

The best value of the pitch p has been determined experimentally by Dr. Briling † as being connected with the blade angle $\alpha°$—which he takes as being the same at the inlet and outlet—and the blade width by the following relation.

$$p = \frac{r}{2 \sin \alpha°}$$

$$r = \frac{b}{2 \cos \alpha°}$$

Briling is of the opinion that 30° is the most suitable angle for impulse blading.

In practice, the blade angle varies from 20° to 50°, the largest angles being used at the exhaust end of a turbine when it becomes difficult to provide sufficient area. The pitch varies from 0·5 to 0·75 of the blade width.

REACTION TURBINES.

In a reaction turbine the available heat energy of the steam is converted into kinetic energy, both in the stationary and the moving blades.

In the most usual case—*considering a stage as consisting of a fixed blade and the following moving blade*—one-half of the available heat drop per stage is utilised in the fixed blade and the remainder in the moving blade. The turbine is then said to have a half degree of reaction.

Thus, both the fixed and moving blades perform the function of a nozzle in precisely the same way, and are identical in form and thermodynamic purpose.

Since there is a heat drop in the moving blades, there must also be a pressure drop across them. This is a characteristic of the reaction turbine as compared with the impulse turbine.

A second characteristic lies in the fact that the arc of admission to the first stage of a reaction turbine must extend around the complete circumference. For this reason nozzle cutout governing is not possible, and overloads can only be dealt with by admitting steam at some intermediate point in the expansion with a consequent loss in efficiency. The point usually chosen is immediately before the I.P. expansion.

The steam enters the moving blades with a relative velocity approximately in an axial direction, and leaves them at a higher velocity in a direction inclined to the plane of rotation, the blades being impelled forward by the reaction of the leaving steam.

Reaction Blading with Half Degree of Reaction.

In this case since the outlet angles of the fixed and moving blades are the same, and the heat drop utilised in both is the same, the velocity triangles at inlet to and exit from the moving blade are identical (see fig. 8).

* *Steam Turbines—their Theory and Construction*, H. M. Martin.
† *Z. Ver. Deutsch. Ing.*, January 1906.

Hence

$$c_1 = w_1' \; ; \; c_1' = w_1.$$

If h = heat drop in any stage (one fixed and one moving blade) and with the remaining symbols as were used when considering impulse turbines—

$$c_1 = \frac{1}{2\,U\cos\alpha}\,(25{,}050\,\zeta\,h + U^2)$$

Where $(1 - \zeta)$ is the energy loss in the conversion of heat to velocity.

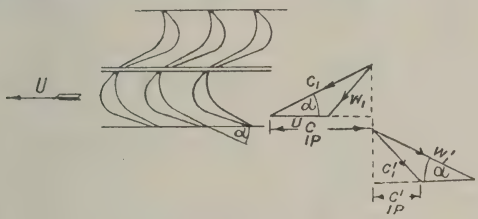


FIG. 8.

Capt. Riall Sankey has given 0·8 as the value of ζ, whereas the statement of Sir Chas. Parsons that the blading efficiency in the low-pressure end of the turbines of the 'Mauretania' reached the value of 85 per cent., shows that ζ may be as high as 0·86 under those conditions, while the efficiencies reported to have been obtained with the Ljungström turbine of quite small capacities could only be reached if ζ was as much as 0·85.

U and α being known, the velocity triangles can be drawn.

The work done per stage

$$= W\,\frac{(c_1^2 - c_1'^2)}{2g}, \text{ or, } = W\,\frac{(2k\cos\alpha - 1)}{g}v^2, \text{ where } k = \frac{c_1}{U}.$$

The blading efficiency

$$\eta_B = \frac{c_1^2 - (c_1'^2)}{2g\,J\,.\,h}, \text{ or, } = U^2\,\frac{(2k\cos\alpha - 1)}{J\,.\,g\,h}.$$

The required blade length can be obtained from the relation

$$\pi\,.\,D_m\,.\,l\,.\,q = \frac{W\,.\,v_2}{W_1'},$$

Where D_m = mean diameter of annulus in feet; l = radial length of annulus in feet = (blade height) + (tip clearance); v_2 = the specific volume after the moving blade in cubic feet per lb.; q = annulus area factor.

At any stage the 'annulus area factor' is the ratio of the available area of the channels at exit from the blades in a direction at right angles to α, to the area of the annulus between the drum and the casing at that stage.

The properties of Parsons blading, with the exception of q and α, were published by M. Lelong,* and will be found in Table IV.

As in the case of impulse blading, the blading efficiency varies with $\frac{U}{c_1}$ and reaches a maximum when $\frac{U}{c_1} = 0{\cdot}9$. Such a high value is not practicable in ordinary working conditions, nor is it necessary for the realisation of high efficiency, because the curve connecting $\frac{U}{c_1}$ and η_B is very flat in the region of its maximum.

Fig. 9, which gives this relation for $\zeta = 0{\cdot}8$, is due to Stodola.†

The efficiency for changes of ζ within the limits actually to be met with can be obtained by increasing the efficiency as obtained from fig. 9 by the same percentage as ζ exceeds 0·8.

In electrical work $\frac{U}{c_1}$ varies from 0·4 to 0·6.

The peripheral velocity of forged steel drums may be as high as 400 ft. per second, and even higher speeds are possible with solid drums, or drums made from special steels of high ultimate strength.

---


* *Turbines à Vapeur Marines*, R. Lelong; and *Engineering*, March 1, 1912.

† *Die Dampfturbinen*, 4th Ed., A. Stodola.

TABLE IV.—DATA RELATING TO BLADES AND CAULKING PIECES FOR PARSONS TURBINES.

Blades.						Caulking Pieces.								
						Casing.					Drum.			
Section Number.	Class of Blade.	Exit Angle of Blade α. in deg.	Annulus Area Factor q.	Weight per foot run.	Usual Limits of Length.	Section Number.	Number Required per in. run.	Weight per foot run.	Grooves.		Section Number.	Number Required per in. run.	Weight per foot run.	Grooves.	
									Width.	Depth.				Width.	Depth.
									In.	In.				In.	In.
120B	Normal	20	0·3	0·041	Up to $\frac{3}{4}$ ins.	120C	5·8	0·106	0·243	$\frac{1}{4}$	120C	5·8	0·106	0·243	$\frac{1}{4}$
130B	Normal	20	0·3	0·089	$\frac{3}{4}$ in. to 4 ,,	130C	3·7	0·264	0·364	$\frac{1}{4}$	130S	5·2	0·159	$\frac{23}{64}$	$\frac{1}{4}$
130B	Semi-Wing	35	0·53	0·089	$\frac{3}{4}$,, ,, 4 ,,	131C	3·3	0·315	0·415	$\frac{1}{4}$	131S	3·7	0·300	$\frac{13}{32}$	$\frac{1}{4}$
132B	Wing	45	0·68	0·077	$\frac{3}{4}$,, ,, 4 ,,	132C	3·2	0·400	0·406	$\frac{1}{4}$	132S	3·6	0·320	0·400	$\frac{1}{4}$
240B	Normal	20	0·3	0·180	4 ,, ,, 8 ,,	240C	2·75	0·450	0·510	$\frac{3}{8}$	240S	3·4	0·400	0·510	$\frac{3}{8}$
240B	Semi-Wing	35	0·53	0·180	4 ,, ,, 8 ,,	241C	2·54	0·643	0·540	$\frac{3}{8}$	241S	3·2	0·450	0·540	$\frac{3}{8}$
250B	Normal	20	0·3	0·246	8 ,, ,, 12 ,,	250C	2·2	0·783	0·610	$\frac{3}{8}$	250S	2·7	0·600	0·610	$\frac{1}{2}$
250B	Semi-Wing	35	0·53	0·246	8 ,, ,, 12 ,,	251C	2·1	0·917	0·661	$\frac{1}{2}$	251S	2·6	0·670	0·661	$\frac{1}{2}$
252B	Wing	45	0·68	0·237	8 ,, ,, 12 ,,	252C	1·96	1·080	0·716	$\frac{1}{2}$	252S	2·44	0·79	0·716	$\frac{1}{2}$

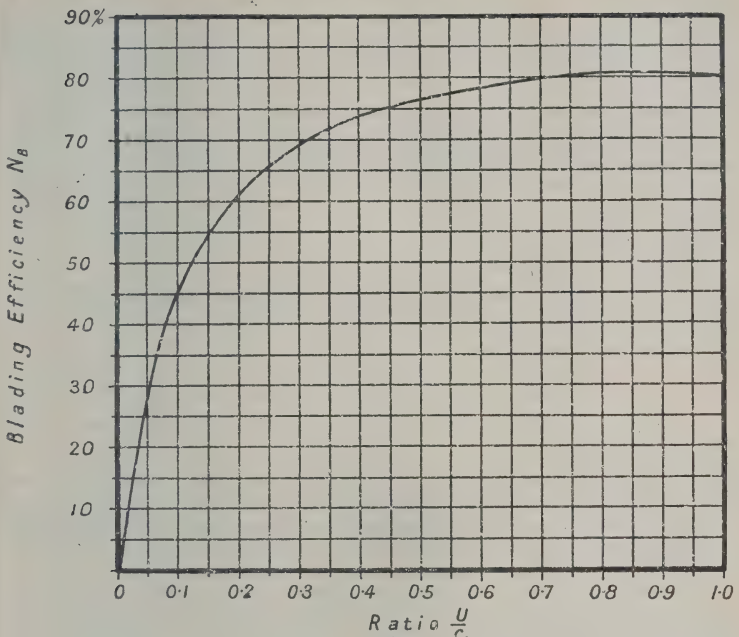For Double Wing Blades α 60°; q = 0·85 in.



EFFICIENCY OF REACTION BLADING FOR $\zeta = 0{\cdot}8$.

FIG. 9.

The velocity of the steam c_1 varies from 500 to 800 ft. per second.

In marine work $\frac{U}{c_1}$ varies from 0·3 to 0·45, and for the high-pressure stages the peripheral velocity varies from 80 to 120 ft. per second.

REACTION TURBINE DESIGN.

The blades of Parsons turbines are not usually increased in height from row to row, but are arranged in groups having the same height and the same mean diameter. The angles of the blades of any one group are usually the same, but in some cases they are gradually increased so as to obtain the correct progression of areas for constant steam velocity relatively to the blade.

The blades of such turbines for land purposes are generally placed on three-drum diameters of increasing size, referred to as the H.P., I.P. and L.P. expansions.

The relative distribution of heat drop between the different expansions and their relative geometric properties are given in the following table :—

Expansion.	H.P.	I.P.	L.P.	H.P.	I.P.	L.P.
Adiabatic heat drop used . .	1	1	2	1	1	1
Number of groups of blades .	1	1	2	1	1	1
Mean diameter of annulus . .	1	$\sqrt{2}$	2	1	$\sqrt{2}$	2
No. of rows of blades per group .	1	$\frac{1}{2}$	$\frac{1}{4}$	1	$\frac{1}{2}$	$\frac{1}{4}$
No. of rows of blades per expansion	1	$\frac{1}{2}$	$\frac{1}{2}$	1	$\frac{1}{2}$	$\frac{1}{4}$

The first of these arrangements is that most commonly adopted.

In electrical work there are from two to three groups of blades in the H.P. expansion.

In any given turbine and for groups of blades with the blade angle the same, the ratio $\frac{D^2l}{v}$

should be constant, where D = mean diameter of the blades, l = their length, and v = the mean specific volume of the steam in the group.

The last group on the L.P. expansion is often made the same height as the preceding group, semi-wing blades being used in place of ordinary blades. In some cases it is necessary to use semi-wing blades in earlier stages, when wing or double-wing blades would be used in the last group.

In order to reduce the unsupported length between bearings, and to enable the tip clearance to be kept small, it is becoming the practice in turbines of 5,000 kw. and over to use two cylinders. The first cylinder contains the H.P. expansion only and can be made of cast steel, very fine clearances being possible by eliminating the danger due to the growth of cast iron.

c_1, for any particular stage, can be calculated from the formula already given when the heat drop h is known.

The blading efficiency throughout the turbine can be found from fig. 9 when the ratio $\frac{U}{c_1}$ is known.

For groups of blades having the same angles and height:

if

n = number of blades in the group considered; R = ratio of expansion over the group; H_a = adiabatic heat drop for the group.

Then the heat drop used in the first stage

$$h_1 = \frac{(1+e)H_a}{\left[0{\cdot}07 + \left(\frac{R^2-1}{R^{\frac{2}{N}}-1}\right)\right]}$$

The heat drops for the other stages of the groups form with h_1 a geometric progression having $R^{\frac{2}{N}}$ as a common ratio.

In most cases it will be sufficient to calculate the first and last stages of any one group.

Considerable changes can be made in the output of a Parsons turbine by twisting the blades of the first few rows so as to increase or diminish the openings at exit. Such adjustments are sometimes necessary on the test plate, and alterations up to 20 per cent. on output can sometimes be effected in this way.

Disc Drum Type.

Just as in the development of the pure impulse turbine combinations of the simple types have been evolved so the disc drum type has been introduced into the sphere of the reaction turbine.

In this case the high pressure and less-efficient part of the reaction turbine is replaced by a Curtis wheel having as a rule two rows of blades. This design possesses the advantages already mentioned in connection with combination impulse turbines, and in addition it results in a considerably shorter and stiffer rotor than in the pure Parsons machine.

TURBINE LOSSES.

Diaphragm Gland Loss.

The diaphragms of a pressure-compounded impulse turbine must obviously be provided with a clearance between themselves and the shaft, thus providing a leakage area through which steam can pass.

The diaphragm gland is usually made either as a labyrinth packing or as a closely fitting white metal bush.

Although the clearances may originally be very small they are greatly increased by whipping of the shaft, or even by the static deflection.

The percentage leakage can be estimated as being equal to the ratio of the clearance area to the nozzle area in any diaphragm.

In order to reduce this loss, some designers employ carbon packings held together by garter springs in the diaphragms.

The diaphragm clearance is usually from $\frac{10}{1000}$ ins. to $\frac{30}{1000}$ ins. radially.

LABYRINTH PACKINGS.

The glands at the cylinder ends are usually of the labyrinth packing type.

In impulse turbines the labyrinth is invariably of the radial clearance type, while in Parsons turbines the packing at the thrust block end is of the axial clearance type, the other being of the radial clearance type.

Mr. H. M. Martin* has deduced the following formulæ:

$$\text{Weight of leakage steam} = 68 \cdot A \sqrt{\frac{p_o\left(1-\frac{1}{r}\right)}{v_o(N + log_e r)}} \text{ lbs. per sec.,}$$

where,

p_o = pressure before the gland in lbs. per sq. in.; v_o = specific volume of steam in cub. ft. per lb.

* *Steam Turbines—their Theory and Construction*, H. M. Martin.

r = ratio of expansion through gland; N = number of labyrinths; A = sectional area of leakage path in sq. ft.

If the velocity with which the steam flows out of the last labyrinth is greater than sound velocity, this formula should be amended, but the correction is small, and as it is in the nature of a reduction in the weight of the leakage steam, it can safely be neglected where N is greater than 8, which is the usual case in practice.

N varies between wide limits and may be from 8 in the case of low-pressure glands of impulse turbines to 30 for the high-pressure glands of Parsons turbines.

The clearance usually allowed varies from $\frac{10}{1000}$ in. to $\frac{80}{1000}$ in., but this may increase in actual working in the same manner as the diaphragm clearances.

In order to reduce the loss of turbine efficiency due to gland loss which might otherwise be considerable, the high-pressure packing is usually connected at one or two points in its length to some intermediate stage in the turbine.

The leakage over each of these sections can be calculated by the formulæ already given, r now being the ratio of expansion over any section, and $p_0 . v_0$ the conditions before that section.

Except in those cases where a water gland is used, the gland at the exhaust end is sealed by steam at a higher pressure than atmospheric, taken from a stage in the turbine, and in order to ensure that air is not leaking into the exhaust, the pressure is adjusted until a small quantity of steam is seen escaping into the engine-room.

The cylinder glands of the A.E.G., Zoelly, and Curtis turbines are of the carbon type, for which a considerable reduction in leakage is claimed.

The advantages of these are questionable since they cannot be renewed or adjusted without opening the turbine, and in some designs it is even necessary to strip the rotor.

The carbon rings which are in segments are kept together and caused to bear on the shaft by grater springs. This type of gland requires frequent inspection and renewal.

Dummy Loss.

In the majority of single-flow Parsons turbines the axial thrust on the blades and drum is balanced by dummy pistons. A labyrinth packing is formed on the periphery of the dummy pistons to reduce the leakage of steam which would otherwise take place across the dummy piston to the exhaust to which they are connected on one side.

The loss of steam through the dummy clearances can be calculated in precisely the same way as the loss through a labyrinth packing, and in many designs is of considerable magnitude.

The double-flow type of turbine was in the first instance introduced to eliminate this loss by obviating the necessity of balance pistons.

Disc Friction.

A considerable amount of work may be absorbed in rotating the discs of impulse turbines in the dense steam present in the first stages of a pressure-compounded (disc) turbine.

Professor Stodola* has given the following formula for the disc friction loss:

$$\text{B.H.P.} = \frac{6.1}{10^8} D^2 U^3 \gamma,$$

where,

D = mean diameter of blades in feet; U = mean peripheral velocity feet per sec.; γ = density of steam in lbs. per cubic ft.

The experiments upon which this formula is based were performed either in air, superheated steam, or in steam whose exact condition as regards wetness was unknown.

Professor Lewicki has demonstrated that the combined work of disc friction and windage falls off with superheat, some of his experiments showing a reduction of 10 per cent. in the work done for an increase of superheat of 100° C. As the total loss due to disc friction is usually of the order of a few per cent. of the output of the turbine, the reduction with superheat is of little importance.

On the other hand, it seems probable that the disc friction would increase rapidly with the wetness of the steam, but there are at present no data for estimating this increase. For these reasons, the disc friction loss for any given turbine cannot be calculated with certainty.

Windage.

In addition to the disc friction, loss results from the fanning action of the blades as they rotate.

The laws governing this action cannot be regarded as established, the range of experiments has been limited, and results by the same experimenters are discordant. Professor Stodola* gives the following formula:—

$$\text{B.H.P.} = \frac{4 \cdot 6}{10^7} . D . l^{1.5} . U^3 . \gamma . ,$$

where,

l = blade length in inches; D = mean diameter of blades in ft.; U = mean peripheral velocity in ft. per sec.; γ = density of steam in lbs. per cubic ft.

* *Die Dampfturbinen*, 4th Ed., Prof. A. Stodola.

Mr. W. Kerr has recently carried out some careful tests on this subject, and by comparing his own results with those of Prof. Stodola and Dr. Lasche, suggests that for wheels carrying two rows of blades the work calculated by the above formula must be multiplied by 1·23, for three rows by 1·8, and for four rows by 2·9.*

When mixed pressure turbines are working with low-pressure steam the high-pressure end is rotating idly in an atmosphere of steam, and with disc turbines the work done in disc friction and windage is not negligible. With reaction turbines a windage loss alone is present, and this is mainly due to the fanning action of reaction blading. Sir C. A. Parsons has stated that in the case of a reverse element of a marine turbine rotating in a vacuum the loss is of the order of 1 per cent., so that the loss due to the rotation of the high-pressure element of a mixed-pressure Parsons turbine rotating in steam twelve times as dense as a 28-in. vacuum may be considerable.

Water Glands.

An interesting feature in the development of turbine design consists in the introduction of the water gland.

In this type, an air-seal is produced by a paddle-wheel acting as a centrifugal pump. The pressure difference over the gland is balanced by the centrifugal head produced in the water as it is whirled around covering areas of different internal radii on the two faces of the paddle.

The ribs on the sides of the paddle should be $\frac{1}{4}$ in. deep.

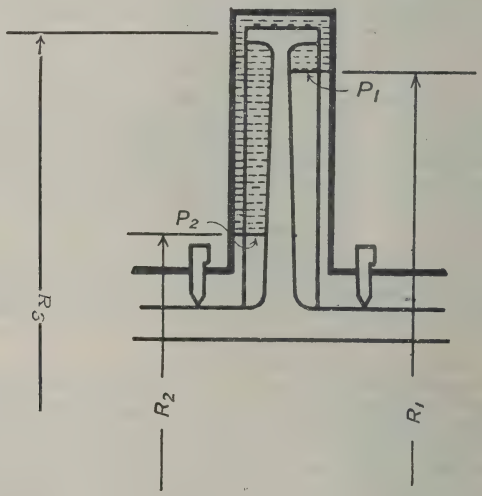


FIG. 10.

If P_1 (fig. 10) = the pressure on the high-pressure side in lbs. per square ft.; P_2 = the pressure on the low-pressure side in lbs. per square ft.; R_1 = inner radius in ft. of the whirling water on the H.P. face; R_2 = inner radius in ft. of the whirling water on the L.P. face; p = density of water = 62·3; ω = angular velocity of paddle in radians per second. Then

$$P_2 - P_1 = \frac{\omega^2 \rho}{240\,A}(R_1^2 - R_2^2) \text{ and } P_3 - P_1 = \frac{\omega^2 \rho}{240\,A}(R_2^2 - R_1^2)$$

The value of A varies from 0·9 to 1·10″.

Although the water gland when first introduced gave rise to troubles, it has proved successful when used in conjunction with a labyrinth packing, for the purpose of preventing air leaking into the turbine casing.

* *Engineering*, August 22, 1913.

Since a sufficient centrifugal head to form a seal is not developed until the turbine is running at some speed near the normal, it is necessary to steam-seal the glands as the turbine is started up.

The gland must be supplied with a constant stream of water to make up the loss which takes place by evaporation on the vacuum side of the seal. The water is admitted at the periphery of the gland, and should be supplied from a head of about 15 ft. This will, of course, be equal to $(P_3 - P_1)$.

A water gland cannot be used to seal against steam at a pressure above atmospheric, because the water boils and the seal is destroyed.

Tip Clearance Loss.

As has already been pointed out, there is always a difference of pressure over both the fixed and rotating blades of a reaction turbine.

In consequence of this pressure drop there must always be a leakage of steam over the blades through the clearance which must be provided at their tips. The magnitude of the tip clearance is determined by the experience of the designer with his particular type of machine; it depends on the diameter of the drum, its flexibility, the maximum temperature to which the blades may be subjected, the possibility of distortion of the casing, and the exigencies of meeting stringent guarantees.

The amount of clearance varies with different makers, from about $\frac{15}{1000}$ in. to $\frac{80}{1000}$ in., but no definite rules can be laid down.

The smallest clearances are to be found at the high-pressure end, for it is there that the loss in stage efficiency is most serious and may amount to over 50 per cent. with the small blade heights often necessary.

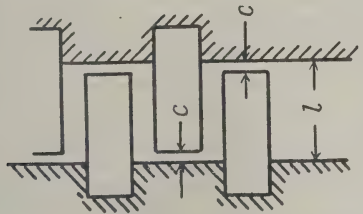


FIG. 11.

Mr. Alexander Jude* has conducted some interesting experiments on this subject, and the following formula is a slight modification of the result he deduces.

$$\text{The ratio } \frac{\text{leakage steam}}{\text{total steam}} = \frac{\lambda c}{q l}$$

Where l (fig. 11) = radial length of the annulus; c = tip clearance; q = annular area factor; λ = ratio of actual steam flow through the clearance to that which would blow straight through if there were no distortion or friction.

From his experiments on standard ½-in. Parsons blades, Mr. Jude has deduced the following values of λ:—

Clearance	0·01	0·02	0·03	0·04	0·05	0·06	0·07 in.
λ	0·42	0·66	0·81	0·9	0·95	0·98	1·0 ,,

According to Sir C. A. Parsons the loss of stage efficiency from tip clearance leakage is about twice as great as the ratio of the leakage steam to the total steam.

As in the case of the other losses which depend upon the value of fine clearances, it is probable that the tip clearance loss increases with the life of a turbine; and in particular, this effect will arise where very small tip clearances were originally adopted to enable high efficiencies to be obtained on the test-plate.

Bearings.

l = the length of a bearing in inches; d = diameter of journal in inches; p = pressure on bearing per square inch projected area; N = speed of turbine in R.P.M.; μ = coefficient of friction; v = peripheral speed of journal in feet per second.

Then the work done in overcoming the bearing friction is

$$\text{Friction work} = \frac{\mu \pi l d^2 p \text{N}}{720} \text{ ft. lbs. per sec.}$$

The heat equivalent of this work must be carried away from each bearing if they are to remain at a constant temperature.

* *The Theory of the Steam Turbine*, A. Jude.

According to Lasche's experiments, if $t°$ F. is the final steady temperature of the bearing, the coefficient of friction is given by the following relation :—

$$\mu \cdot p \cdot (t° - 32°) = 51{\cdot}2.$$

For turbine bearings $t°$ should be from 120° F. to 150° F.

Assuming a temperature of 140° F., which is about an average value, these expressions can be reduced to:

$$\text{Work done in friction} = 3{\cdot}75 \left(\frac{l}{10}\right) \left(\frac{d^2}{100}\right) \left(\frac{N}{1{,}000}\right) \text{b.h.p.}$$

With average bearings bedded in the normal way, it is found that the work done exceeds the amount just given, being usually about twice as great.

One of the striking features of the recent developments in steam turbines has been the successive increases in the specific loadings and rubbing speeds on bearings.

This rating up of bearings has been accompanied by uniform success in all cases where the natural requirements of good lubrication have been safeguarded.

The oil supplied to the bearing has two functions to perform : it must sustain the oil film, and it must flush the bearing copiously to carry away the heat generated in shearing the oil film.

The quantity of oil required by the latter consideration is by far the greater of the two; the necessary amount of oil can readily be estimated from the relation that for ordinary turbine oils—

1·0 b.h.p. in oil friction raises 1·0 gallons of oil per minute by 10° F.

In the average case the temperature of the oil passing through the bearings is such that its temperature rise in passing through the bearing is from 20° to 40° F.; therefore, for 40° F. rise in temperature the oil quantity which should be supplied to a bearing is given by oil which should be supplied $= 2 \times \frac{3{\cdot}75ld^2N}{40 \times 10^3}$ gals. per min., or, approximately, $= \frac{2ld^2N}{10^5}$ gals. per min.

This represents the minimum quantity required, and may be increased up to double this amount with advantage.

The lengths of turbine bearings vary from $l = 2{\cdot}5d$. to $l = d$, the former value being usual for lightly loaded slow-speed bearings of older design, and the latter being approached with modern high-speed high-rated bearings.

At the present state of the art it is impossible to state the upper limits for permissible loading and rubbing velocity. Bearings are now quite common with loadings up to 110 lbs. per sq. in. and with rubbing velocities up to 130 ft. per sec.

According to modern ideas and practice, the old rules of the form pv = constant are quite unsound—in fact, when p is increased, v can and should be increased.

After leaving the bearings the oil is passed through an oil cooler, where it is cooled to some temperature usually below 110° F., although, of course, the actual temperature depends upon that of the cooling water available.

Turbine bearings give remarkably little trouble, providing the oil is kept clean, and there is no tendency to emulsify.


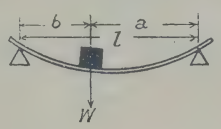

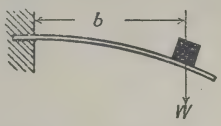




There are a large number of suitable oils available for turbine work, but in all cases care should be taken to see that any oil used readily separates out completely when subject to an emulsification test.

In very small turbines the bearings are sometimes ring-lubricated, and in such cases the peripheral speed should not exceed 40 ft. per sec.; at higher speeds the oil tends to be thrown to the outside of the ring by centrifugal force.

Even in very small turbines there is now a tendency to fit a forced lubrication system provided with an oil cooler.

Lubricating System.

In all cases except where ring lubrication is employed for small turbines, an oil pump is provided to maintain a pressure of about 10 lbs. per sq. in. in the lubricating system. It should be emphasised that the actual oil pressure is of secondary importance, the prime object being to flush the bearings with a copious flood of oil, and that for this purpose 2 lbs. per sq. in. may be sufficient in a properly designed system. The oil on leaving the pump passes through a cooler of sufficient capacity to maintain the temperature of the oil leaving the bearings at about 60–68°F. above that of the inlet cooling water, bearing temperatures of 150° F. being quite permissible. The main oil pump is usually driven by gearing from the turbine shaft, and the normal pressure is reached when the turbine motor is running at about one-third the normal speed. A hand pump is usually provided to supply oil under pressure during starting up or shutting down, when the speed of the set is less than one-third the normal. An oil strainer should be placed on the suction side of the pumps to prevent grit being circulated. Two to three gallons of oil should be taken out of the tank daily and carefully filtered, the level of the tank

Uniform Shaft with Distributed Load.		Concentrated Load Carried by a Weightless Shaft.	
Method of Support.	Critical Speed in R.P.M.	Method of Support.	Critical Speed in R.P.M.
	$N = \frac{1,853}{l^2}\sqrt{\frac{E \cdot I}{w}}$		$N = 325\sqrt{\frac{E \cdot I \cdot l}{W \cdot a^2 \cdot b^2}}$
	$N = \frac{662}{l^2}\sqrt{\frac{E \cdot I}{w}}$		$N = 325\sqrt{\frac{E \cdot I}{W \cdot b^3}}$
	$N = \frac{2,960}{l^2}\sqrt{\frac{E \cdot I}{w}}$		$N = 325\sqrt{\frac{E \cdot I}{W \cdot a^3}}$ Approximate; holds if load near centre.
	$N = \frac{4,200}{l^2}\sqrt{\frac{E \cdot I}{w}}$		$N = 325\sqrt{\frac{E \cdot I \cdot l^3}{W \cdot a^3 \cdot b^3}}$ Approximate; holds if load near centre.

N = Critical Speed in R.P.M.
w = Weight of Shaft or other Distributed Load in lbs. per inch run.
W = Weight of Concentrated Load in lbs.
a, b, or l = Length of Span in ins,

E = Young's Modulus of Elasticity in lbs. per sq. in.
I = Transverse Moment of Inertia in inch units = $\frac{\pi d^4}{64}$ for Round Shafts.
d = Diam. of Shaft in ins.

Note Units employed.

being kept constant by making up with freshly filtered oil, or when necessary, new oil. Once in each twelve months the oil tank and all accessible portions of the lubricating system should be emptied and cleaned ; the tank should then be filled sufficiently with paraffin oil to enable the whole system to be flushed by operating the hand pump. The paraffin oil dissolves any gummy matter which may have deposited from the lubricating oil and thoroughly flushes away all dirt to the oil tank ; the paraffin can then be removed and new or freshly filtered oil put in. These simple precautions will result in a real economy in oil consumption and a freedom from troubles and maintenance charges which will amply repay the trouble involved.

See also 'Lubrication' (page 910).

Critical Speeds of Turbine Shafts.

At the critical speed of a loaded shaft, a small disturbance sets up vibrations which may reach a dangerous magnitude. For a uniform shaft, when the obliquity of the loading masses may be neglected, the critical speed coincides with the natural frequency of transverse vibration.

Although turbines have been run for considerable periods at their critical speeds without failure, this is a very dangerous proceeding and should be carefully avoided. It follows, therefore, that the critical speed should always be estimated, and should be at least 30 per cent. removed from the running speed.

This particularly applies to turbines of the disc type, and the calculation can be made with some degree of certainty. In drum turbines, the calculation is much more difficult, but in such cases as usually arise the critical speed is much above the running speed.

Table V. gives the formula for calculating the critical speeds of shafts of uniform diameter in certain standard cases.

Dunkerley has evolved theoretically, and demonstrated experimentally, a law from which can be determined the critical speed of a loaded system which corresponds to any combination of the standard cases.

By means of Table V. in conjunction with Dunkerley's formula, the first critical speeds of sensibly uniform shafts can be approximately calculated for any combination of loading, and any method of fixing the shaft at the bearings.

Thus if a rotor consists of a uniform shaft loaded with weights $W_2 W_3$ etc. as external loads,

n_1 = the critical speed of the shaft without the external loads.
n_2, n_3, etc. = the critical speed of a massless shaft loaded with weights $W_2 W_3$ etc.

Then the critical speed N of the system is given by

$$\frac{1}{N^2} = \frac{1}{n_1^2} + \frac{1}{n_2^2} + \frac{1}{n_3^2} + \ldots\ldots$$

In those cases of rotors having shafts stepped in diameter, as is usually the case in practice, the method already given is only a rough approximation, owing to the difficulty of judging the diameter of the equivalent uniform shaft.

Such cases may be dealt with by obtaining the maximum static deflection y of the shaft under various loads, by the graphical methods due to Mohr.

Then if

N = critical speed in R.P.M.
$N^2 y = C$, where C is constant.

For impulse turbine shafts supported in bearings which do not fix the direction of the shaft Mr. K. Baumann* has found that the value of C varies from 10·5 to 10·6.

See also pages 924, 927.

MATERIALS FOR TURBINE CONSTRUCTION.

The use of such high peripheral speeds as are common in turbine practice introduced a new consideration into machine design ; because, unlike the conditions existing in reciprocating engine parts, the stresses in the various members are in the main due to centrifugal forces resulting from their own rotation. The stresses in a given turbine will, therefore, be proportional to the square of the numbers of revolutions per minute, and to the density of the material.

With an increase in the possible speed of rotation of a given turbine, the efficiency will in general be improved, since the average ratio $\frac{U}{C_a}$ in the various stages will be increased, or a greater heat drop can be utilised with the original efficiency.

On the other hand, the available heat drop per stage might be increased, so that the required number of stages for a given efficiency can be correspondingly reduced, or with the same number of stages the mean diameter of the blades can be reduced inversely as the revolutions per minute, both of which alternatives would result in a cheaper turbine.

Hence, it will be seen that in turbine work it is eminently desirable to use the highest possible peripheral speeds, the limit of which will be determined by the ultimate strength of the material employed.

* *Recent Developments in Steam Turbine Practice*, Inst.E.E., April 1912.

British Electrical and Allied Manufacturers Association's Specifications for Turbine Forgings, Etc.

The following particulars have been extracted from the Association's specifications for forgings for turbine discs, shafts, and general forgings for use on land turbines.

The following table gives the minimum physical properties acceptable for each of four grades of materials:—

Grade *	I.			II.			III.			IV.		
	L.	T.	R.	L.	T.	R.	L.	T	R.	L.	T.	R.
Minimum ult. tensile tons per sq. in.	30	30	30	35	35	35	40	40	40	48	48	48
Yield point	15	15	15	17½	17½	17½	20	20	20	30	30	30
Minimum elongation per cent.	30	23	20	25	20	18	22	18	16	17	14	12
Minimum reduction in area, per cent.	45	40	38	40	35	32	35	32	30	40	35	30
Bending Angle	180°	160°	150°	180°	150°	135°	180°	150°	120°	180°	130°	100°
Test radius	⅛″	⅛″	⅛″	¼″	¼″	¼″	¾″	¾″	¾″	¾″	¾″	¾″

* L.=Longitudinal. T.=Tangential. R.=Radial.

Grades Nos. I, II, and III are for carbon steels, whereas grade IV applies to an alloy steel. A margin of 3 per cent. below the reductions in area given in the above table is allowed to the steel maker providing this is compensated by a corresponding increase of 3 per cent. on the elongation.

Bend Tests.

A cold bend test is made upon test pieces having a rectangular section of ⅜ in. by ¾ in. These test pieces shall be machined and the edges rounded to a radius of ⅛nd. The test pieces shall be bent over the thinner section, and the bending shall be done by pressure or by blows. The test pieces must withstand being bent around the radii and through the angles given in the table without fracture.

Additional Test before Rejection.

If either tensile or bending test fail to fulfil the test requirements, and the inspector agrees that the test piece does not clearly represent the quality of the material, two duplicate specimens may, if the maker wishes, be tested, and if the results from both are satisfactory the quality of the material shall be judged therefrom, and not from the original test which failed. If, however, either of the duplicate tests fail the material represented will not be approved, and the manufacturer shall have the option of retreating and again presenting for test.

Table VI. gives the physical properties of steels used for steam turbine blading, the data for which have been supplied by the courtesy of Messrs. Thomas Firth & Sons, of Sheffield.

The blades of Parsons turbines are commonly of brass, the usual mixture being alloy of 63 per cent. copper to 37 per cent. zinc, having an ultimate strength of 20 tons per sq. in., an elastic limit of 12 tons per sq. in., and an elongation of 40–50 per cent.

The blades of impulse turbines are usually made of 5 per cent. nickel steel, although bronze blades are sometimes called for.

The physical properties of a bronze are greatly dependent on the treatment to which it may have been subjected, cold working having the effect of raising the ultimate strength and reducing the ductility.

Such an increase in the ultimate strength is to a large extent artificial, the material returning to its virgin state under the influence of high temperature or vibration.

The importance of this effect will be emphasised by the figures published by M. Breuil† and reproduced in Table VII. respecting the effect of temperature on some materials used for blading.

† *Engineering*, July 5, 1912.

TABLE VI.—PHYSICAL PROPERTIES OF STEELS USED IN STEAM TURBINE CONSTRUCTION.

Nature of Material.	Yield Point, Tons per sq. in.	Ultimate Strength, Tons per sq. in.	Elongation on 2-in. Gauge Points.	Purpose for which Material is Employed.	Remarks.
			Per Cent.		
5 per cent. nickel steel sheets	—	40	17	Turbine blades and shrouding strips supplied mild in sheets for stamping and bending	—
5 per cent. nickel steel sheets	—	35–42	20–24	Turbine blades and shrouding strips	Higher carbon content than above
5 per cent. nickel steel bars	30–35	40–45	25	To be drawn into blade sections	—

TABLE VII.—MATERIALS FOR TURBINES.

Nature of Material.	Elastic Limit, Tons per Sq. In.	Ultimate Strength, Tons per Sq. In.	Elongation.	Temperature.
			Per Cent.	
70 per cent. copper, 28 per cent. pure zinc	34·9	36·2	11	Ordinary
	34·3	36·2	8·5	100° C.
	32·7	34·3	11	200°
	22·2	24·1	30	300°
	7·6	12·7	75	400°
85 per cent. copper, 15 per cent. manganese	38·7	41·3	10·2	Ordinary
	36·8	40·0	10·5	100° C.
	37·5	41·0	11·0	200°
	33·0	36·8	21·0	300°
	21·0	24·1	68·0	400°

From this it follows that before figures relating to the strengths of alloys can be accepted as working data, the effect of temperature and the previous history of the specimens fractured in the test should be known.

Phosphor bronze has been largely employed for impulse turbine blading when conditions were such that abnormal corrosion was expected, and gives satisfactory results with dry steam where the steam velocities are moderate and the stresses induced in the blades relatively small. The following represent the average properties of this material as given by Mr. W. B. Parker.*

Maximum tensile stress	Not under 24 tons per sq. in.
Elastic limit	„ 12 „ „
Elongation on 2 ins.	13 per cent.
Modulus of elasticity	16,000,000 to 17,800,000 lbs. per sq. in. within a stress range of 0 to 10 tons per sq. in.

The average composition is as follows :—

Tin	From 3 to 5 per cent.
Copper	From 94·9 to 96·9 per cent.
Phosphorus	Not less than ·1 per cent.

* *Steam Turbine Blading*, Institute of Metals, September, 1915.

Copper nickel alloys are now being used for the manufacture of turbine blading, the best known being Monel metal, which has the following properties when in the form of turbine blading :—*

Maximum tensile stress	38·7 to 39 tons per sq. in.
Elastic limit	14 to 16 „ „
Elongation on 4 ins.	32 to 33 per cent.
Reduction in area	66·75 to 70·7 per cent.
Modulus of elasticity	22,500,000 lbs. per sq. in. over a stress range of 1 to 15 tons per sq. in.

The composition is as follows :—

Silicon	0·14 per cent.
Lead	Trace.
Copper	27 per cent.
Iron	3·85 „
Manganese	1·87 „
Nickel	67·1 „
Carbon	Nil.

Monel metal may contain both graphitic and combined carbon totalling up to ·5 per cent.

TURBINE TEST CORRECTIONS FOR STEAM CONDITIONS.

While it is rarely possible to make tests upon a turbine under the exact steam conditions for which it has been designed, the performance which may be expected under the designed conditions can be estimated from the steam consumption actually obtained during the test.

The usual practice consists in correcting the test consumption for the difference between the steam superheat, pressure, and vacuum during the test, and that which is specified for the turbine.

These 'corrections' are arranged as coefficients by which the observed consumptions must be multiplied, and are determined for any steam conditions from consideration of the changes in available heat-drop and turbine efficiency which takes place with any change in that condition.

A very complete list of these corrections has been published by Mr. K. Baumann† and the values he gives are incorporated in this section.

Superheat Correction.

Where the superheat is different from that specified, the following corrections should be made, both for high-pressure or low-pressure turbines.

Between :—

0–100° F. superheat 1 per cent. improvement of steam consumption for every 10° F. superheat.

100–200° F. superheat 1 per cent. improvement of steam consumption for every 12° F. superheat.

200–300° F. superheat 1 per cent. improvement of steam consumption for every 14° F. superheat.

Correction for Initial Wetness of Steam.

For each 1 per cent. wetness the steam consumption, if measured as condensed water, will be 2 per cent. too high.

Pressure Correction.

The correction which is to be made for the pressure depends upon whether the change in pressure is before the stop valve or before the nozzles.

Thus, if in the case of a high-pressure turbine working on a constant generator load the pressure before the stop valve is raised, say 10 lbs. per sq. in., the governor valve closes slightly, but the pressure before the nozzle will be very little altered, the only result being that the steam is throttled to a greater extent than formerly.

---

* *Steam Turbine Blading*, Institute of Metals, September, 1915.

† *Recent Developments in Steam Turbine Practice*, Inst.E.E., April 1912.

The effect of such an increase of pressure will be that the steam consumption will be improved by the small amount corresponding to the superheat due to the additional throttling.

In such cases the steam consumption will be improved by 0·5 per cent. for every 10 per cent. increase of pressure.

When, on the other hand, the pressure before the nozzles is increased, the correction is of quite different magnitude and is:

For high-pressure turbines, an improvement of 1½ per cent. in steam consumption for 10 per cent. increase in pressure.

For low-pressure turbines, an improvement of 4 per cent. in steam consumption for 10 per cent. increase in pressure.

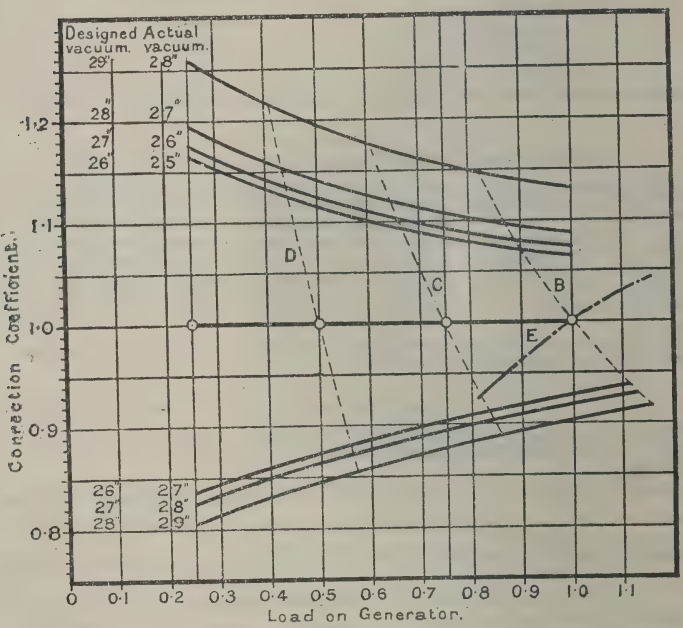


FIG. 12.—Vacuum Correction for Low-pressure Turbines.

Vacuum Correction.

In any test, the correction for vacuum is usually of greater magnitude than that for pressure or superheat. Although every care has been exercised in estimating these corrections, it is obviously desirable that the total correction should be as small as possible, and if only for this reason every effort should be made to obtain during a test a vacuum as little different as practicable from that for which the turbine was designed.

Table VIII. gives the correction for vacuum which should be employed for various designed conditions with high-pressure turbines or mixed-pressure turbines, working with high-pressure steam.

TABLE VIII.—VACUUM CORRECTION FOR HIGH-PRESSURE AND MIXED-PRESSURE TURBINES.

Partial loads are expressed as fractions of the full load for which turbine is designed.

The correction is to be made when the turbine is run on a vacuum other than that for which it was designed.

Designed Steam Conditions.			Theo. Corr. for 1 in. Vac. Variation.	Actual Correction for 1 in. Vac. Variation.						Range of Vac. Variation. Ins.
Pressure, Lbs. per sq. in. g.	Supt. °F.	Vacuum ins.		H.P. ¼ Load	M.P. ¼	H.P. ½	M.P. ½	H.P. ¾	M.P. ¾	
180	150	26	4·4	3·0	3·8	4·8	6·5			24—26—27
		27	5·5	3·7	4·6	5·6	7·6			25—27—28
		28	7·0	5·1	6·2	7·5	9·7			26—28—28½
		29	10·3	7·5	8·5	10·2	12·8			28—29
140	150	26	4·7	3·2	4·2	5·0	6·9			24—26—27
		27	5·8	3·9	4·8	5·9	8·0			25—27—28
		28	7·3	5·3	6·3	7·8	10·2			26—28—28½
		29	11·0	7·8	8·8	10·7	13·5			28—29
100	150	26	5·0	3·5	4·5	5·5	7·5			24—26—27
		27	6·2	4·2	5·3	6·4	8·7			25—27—28
		28	7·9	5·7	6·6	8·4	10·9			26—28—28½
		29	11·9	8·5	9·5	11·5	14·5			28—29
75	150	26	5·4	3·8	4·8	6·0	8·0			24—26—27
		27	6·6	4·6	5·6	6·9	9·4			25—27—28
		28	8·5	6·1	7·1	9·0	11·6			26—28—28½
		29	12·7	9·1	10·3	12·3	15·5			28—29
50	150	26	5·9	4·3	5·2	6·7	8·7			24—26—27
		27	7·2	5·0	6·0	7·7	10·3			25—27—28
		28	9·2	6·6	7·7	9·9	12·6			26—28—29
		29	13·5	9·9	11·3	13·3	16·8			28—29

The Theoretical Correction is given for 150° F. Superheat.

The actual correction given for various loads can be used for any superheat between saturation and 300° F.

It should be noted that at any load and for the same designed steam conditions and actual vacuum, the correction in the case of a mixed-pressure turbine (M.P.) is greater than for a high-pressure turbine (H.P.).

Thus, for example, the correction for an M.P. turbine at full load and working with high-pressure steam is the same as for a H.P. turbine on half load. The assumption underlying this is that the M.P. turbine is designed to give the same output on H.P. as on L.P. steam, and that, therefore, the conditions in the nozzles and blading of the L.P. end of the M.P. turbine are the same as that of a H.P. turbine designed for twice that output. Changes in vacuum only affect the conditions in the last few stages of a turbine, and these in a M.P. turbine on H.P. steam are operating under the same conditions as those of a H.P. turbine at half load.

Vacuum correction for low-pressure turbines or for mixed-pressure turbines working with low-pressure steam are still larger than those already considered.

In fig. 12 a coefficient will be found for various loads on the generator which is the ratio :—

$$\frac{\text{Steam consumptions for 1 in. } \begin{matrix}\text{above}\\ \text{or}\\ \text{below}\end{matrix} \text{ the designed vacuum.)}}{\text{(Steam consumption for the designed vacuum.)}}.$$

While the corrections as given above can be applied to the generality of cases, special conditions may arise where corrections must be separately considered.

Thus, it is possible to obtain little or no benefit by increasing the vacuum with a turbine designed for a certain load at a certain vacuum and modified to operate on a considerably higher load and a higher vacuum; in such a case the velocity in the exhaust would be exceedingly high, and may even approximate to sound velocity.

In back pressure turbines, or the high pressure end of reducing turbines, all corrections will be considerably larger than those given above, and these require separate consideration in each case.

It cannot be too strongly emphasised that every endeavour should be made to arrange the test conditions in such a way that all corrections are as small as possible.

TYPES OF TURBINES.

Turbines may be classified according to the steam conditions under which they operate. It should be noted that the energy available in adiabatic expansion of steam from 180 lbs. per sq. in. g. and 100° F. superheat to 28 ins. vacuum, is about twice that available if the expansion is carried down to atmospheric pressure only. Hence the addition of condensing plant approximately doubles the amount of work which can be done per lb. of coal, without necessitating any increase in boiler capacity.

High-Pressure Turbines.

High-pressure turbines take their steam directly from the boilers, and expansion takes place in the turbine down to the pressure in the condenser. This may be regarded as the fundamental class of turbine. The steam conditions are usually 200–150 lbs. per sq. in. g. pressure, 0°–200° F. superheat, and 27½ ins. to 28½ ins. vacuum (30 ins. Barm.). Of course, the range of possible conditions is greater than these: for instance, in collieries and steel works, steam pressures of 100–50 lbs. per sq. in. are to be met with, while steam temperatures of 700° F. will probably be adopted in the near future.

Low-Pressure Turbines.

Low-pressure turbines take their steam at about atmospheric pressure, the source almost invariably being the exhaust from non-condensing reciprocating engines. The initial steam pressure is usually from 20–15 lbs. per sq. in. abs., and should in all cases be above atmospheric pressure in order to eliminate the risk of air leakage into the steam pipe line. Low-pressure turbines require no governor gear if connected either mechanically or electrically to the reciprocating engine from which they obtain their steam. In the event of the engine being shut down the turbine is supplied with steam from the boilers through a reducing valve.

Back-Pressure Turbines.

Back-pressure turbines take their steam directly from the boilers and exhaust at or above atmospheric pressure. Such turbines may be used in case where the exhaust steam is required for heating purposes, and the back pressure usually ranges from 1–20 lbs. per sq. in. g.

In certain cases the back pressure may be as high as 40 lbs. per sq. in. g.

Back-pressure turbines are used to a considerable extent to drive the auxiliaries, their exhaust steam being utilised for feed heating; by this means the losses in the turbine are recovered in the feed heater, and an overall efficiency for back-pressure turbine and feed heater of over 90 per cent is obtained.

Mixed-Pressure Turbines.

When L.P. steam is utilised in an L.P. turbine it is obviously desirable that the turbine set may be operated at will independently of the reciprocating engines from which it obtains its steam, so that in the event of the engine being shut down the turbine may operate with reasonable economy. This becomes possible by the addition of what is really a B.P. exhausting into the L.P. turbine, and having a common casing and spindle. This combination forms a mixed-pressure turbine, which can operate not only on either H.P. or L.P. steam, but if sufficient L.P. steam is not available to carry the load, the deficit is automatically supplied by admitting H.P. steam to the H.P. end of the turbine.

The governor gear is automatic and adjusts itself so that all the L.P. steam available is used in preference to H.P. steam.

In mixed-pressure turbines the governor gear is of special importance, as for successful working in parallel with other alternators the changes from L.P. steam to H.P. steam must be effected without any appreciable change in speed or load of turbo-alternator.

Reducing Turbines.

With a B.P. turbine the amount of steam available for heating purposes, and the work done by the turbine, are directly connected. In most installations it is desirable to be able to vary these quantities independently of each other, and to meet this demand 'Reducing' turbines were introduced.

An R.P. turbine consists of a B.P. turbine to which an L.P. turbine is added. The B.P. turbine is designed for the maximum amount of steam required by the heaters it supplies.

As the demand for heating steam decreases, an automatic governor gear by-passes the supply to the L.P. end of the turbine, and at the same time the supply of steam to the H.P. end is decreased.

In this way the load the generator can carry is independent of the amount of heating steam required.

The governor gear should be operated in such a way that the pressure of the heating steam remains constant.

An increasing demand for this type of machine has arisen in recent years as a result of the extremely economical results which can be obtained in those manufacturing works requiring both electrical power and heating steam.

In order to obtain the best result the pressure at which steam is taken from the turbine for

heating purposes should be as low as possible in view of the requirements of the heating process. The effect of back pressure on the consumption of heating steam can be seen from

POWER OBTAINED FROM HEATING STEAM.

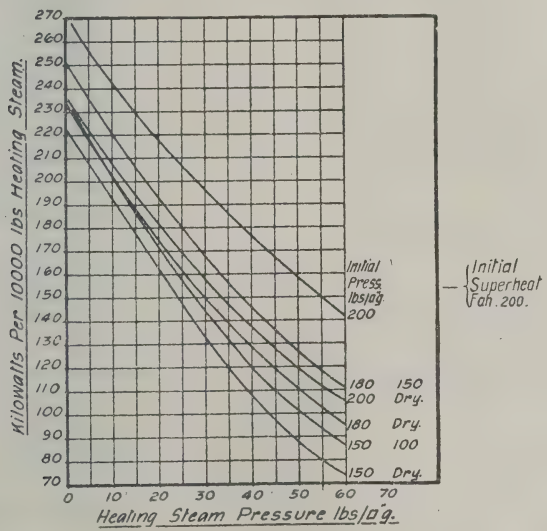


FIG. 13.

the following table, while the variation in the power which can be obtained from back pressure on reducing turbines is shown in fig. 13 for various steam conditions.

PERCENTAGE CHANGE IN STEAM CONSUMPTION OR WORK CAPACITY OF HEATING STEAM FOR A CHANGE IN HEATING STEAM PRESSURE OF 5 LBS. SQ. IN. G.

Initial Pressure. lbs. sq. in.	Initial Superheat. Degrees F.				
	Dry.	50	100	150	200
200	6·85	6·5	6·15	5·8	5·45
190	7·3	6·92	6·52	6·15	5·77
180	7·75	7·35	6·9	6·5	6·1
170	8·22	7·75	7·25	6·82	6·37
160	8·7	8·15	7·6	7·15	6·65
150	9·25	8·65	8·1	7·5	6·95

BRITISH ENGINEERING STANDARDS SPECIFICATION FOR STEAM TURBINES FOR ELECTRICAL PLANT.*

No. 132–1920 (Abstract).

RATING.

The rating of the steam turbine shall be the rated output of the generator to which it is coupled. (The British Engineering Standards Committee have laid down that the rating of the generator shall be the load which it is capable of carrying continuously with a temperature rise of 40° C.)

* By permission of the British Engineering Standards Association.

Margin of Capacity of Steam Turbine.

The steam turbine shall be provided with means for developing 10 per cent. greater load than the rated load of the generator with the specified steam conditions. This margin is provided with a view to allowing the turbine to drive the generator at its rated capacity when the steam conditions are worse than those specified, and is not provided with the object of obtaining overloads on the generator.

Output of the Turbine when Working Non-Condensing.

If the specified steam pressure is not less than 165 lbs. per sq. in. absolute, and the rated output of the turbine is not more than 3,000 kw., the turbine shall be capable of developing 30 per cent. of its rated output when exhausting to the atmosphere. For turbines of larger capacity the output must be settled between the purchaser and the manufacturer.

Note.—It is undesirable to work high-pressure steam turbines exhausting to the atmosphere and this should only be done in cases of emergency. Even under this condition, the turbine should not operate in this way for a longer time than is absolutely necessary.

Maximum Speed.

The turbine shall be capable of withstanding for five minutes, without injury, a speed 15 per cent. in excess of the rated speed.

Governing Characteristics.

When the rated load is taken off or on the permanent speed variation shall not exceed 3 per cent., nor shall the momentary variation exceed 6 per cent.

Governing Adjustment.

Means shall be provided to enable the speed to be adjusted by plus or minus 5 per cent., when working under synchronising conditions.

Emergency Cut-off Speed.

The emergency governor shall be set to shut off steam if the speed exceeds 9 to 11 per cent. of the rated speed.

Economic Rating of the Turbine.

The turbine shall be designed to give a minimum steam consumption at 80 per cent. of its rated output.

Guarantee Steam Consumptions.

If steam consumptions are guaranteed for various outputs, the average steam consumption shall be obtained by

Mutiplying the steam consumption at the rated output by 3.
" " " 80 per cent. of the rated output by 4,
" " " 60 " " " " 3,
" " " 40 " " " " 2,
and dividing the sum by 12.

Load at which Steam Consumption is Guaranteed.

The load or loads at whch the steam consumption is guaranteed shall be stated in the order. Unless otherwise specified, the guaranteed steam consumptions shall be deemed to be the average steam consumptions as defined above.

Tolerance.

For the purpose of comparing test consumptions with the guarantee performance a tolerance calculated as follows shall be allowed:—

Percentage tolerance (+ or —) =

$$\frac{\text{Arithmetical sum of percentage corrections} - 5}{4} + 2\tfrac{1}{2} \text{ per cent.}$$

Hydraulic Test for Parts Exposed to Full Boiler Pressure.

All parts exposed to the rated steam pressure shall be tested with a hydraulic pressure 50 per cent. in excess of the rated pressure. The machine as a whole shall be tested with a hydraulic pressure of 15 lbs. per sq. in. gauge.

Critical Speed of Shaft.

The critical speed of the turbine shaft shall not be within 30 per cent. above or 35 per cent. below the rated output.

TURBINE SPEED-REDUCTION GEAR.*

The speed at which it is most desirable to run a turbine is limited only by the strengths of the materials used in its construction. Unfortunately, this limit of speed cannot be approached when the turbine is employed for direct driving of propellers, D.C. generators of large output, rolling mills, line shafting, etc., and in such cases where comparatively low speeds are essential not only does the turbine become heavy, costly and inefficient, but direct turbine drive is often quite out of the question.

For this reason several systems of speed reduction have been introduced, and are being successfully applied.

Double Helical Gears.

Speed reduction by means of double helical gears was employed in the earliest days of turbine engineering by Dr. Delaval, whose turbines, running at speeds of the order of 10,000 r.p.m., could not be directly coupled to electric generators. The gearing of these turbines gave remarkably little trouble, and although the outputs were low it is notable that even to-day this is the most successful system of speed reduction.

Double helical gearing for large turbines was introduced by Sir C. A. Parsons, who with characteristic courage first introduced the system in the famous case of the propelling machinery of the s.s. 'Vespasian,' and the drive of a rolling mill at Calderbank Steel Works.

In the earlier installations difficulties were experienced through minute inaccuracies of the gear teeth, which gave rise to very noisy working. This was traced to errors in the gearing of the table of the gear-cutting machine by Sir C. A. Parsons, who has very materially reduced the trouble by arranging a 'Creeping' table giving the gear blank an advance of 1 per cent. relatively to the main table of the machine. The improvements in modern gear-cutting machines have eliminated the inaccuracies referred to, so that the creeping device is no longer essential.

The helix angle adopted varies from 20° to 45°, the usual angle in modern practice being 30°.

The teeth of modern double helical gears are of the standard involute type, the pressure angle adopted by different makers varying from 14½ to 22 inches.

If p = average pressure in lbs./inch tooth face.
L = total length of tooth face in inches.
D = diam. of pitch circle of pinion in inches.
R = revs. per minute of pinion.
V = pitch speed in feet per second $= \frac{\pi D}{12} \times R$.

Then

$$\text{Horse-power transmitted} = P = \frac{pLV \times 60}{33{,}000} = \frac{pLV}{500}.$$

Professor Stoney states that V should be kept between the limits 100 and 130 ft./sec. He also gives the maximum permissible pressure $p = 120d$ for pinions smaller than 5 inches diameter, and $p = 175\sqrt{d}$ for larger pinions.

Fig. 14 shows curves co-ordinating p and d, published by Mr. F. H. Hodgkinson (*Engineering*, Jan. 10, 1919).

With pinions having two bearings where E = Young's modulus of elasticity = 30 by 105 lbs./D inch,

$$I = \text{the moment of inertia of the pinion} = \frac{\pi D^4}{64}.$$

$$\text{Transverse deflection at the centre} = \delta_1 = \frac{5}{384} \cdot \frac{pL^4}{EI}$$

This is one of the determining factors in design, and, according to Stoney, should not exceed 0·0002 inches.

For pinions having three bearings, the maximum deflection on each portion of the pinion between two bearings should not exceed 0·0002 inches, and in most cases this is not the condition determining the diameter.

Another condition fixing the design of the pinion arises from the fact that the torsional deflection opens the teeth, thus preventing uniform distribution of pressure on them. This torsional opening, δ_2, according to Stoney, must be limited to less than 0·0001 inches, and is given by the following expressions :—

$$\text{For two or three bearing pinions } \delta_2 = \frac{OL}{10 \times 10^4} \text{ inches over one helix.}$$

In the Melville-McAlpine gear, manufactured and developed by the Westinghouse Machine Co., the pinion is supported in a floating frame which permits its axis to take up a slight inclina-

* See also 'Reduction Gear for Propulsion,' Section XXXIII.

DOUBLE HELICAL GEAR CURVES.

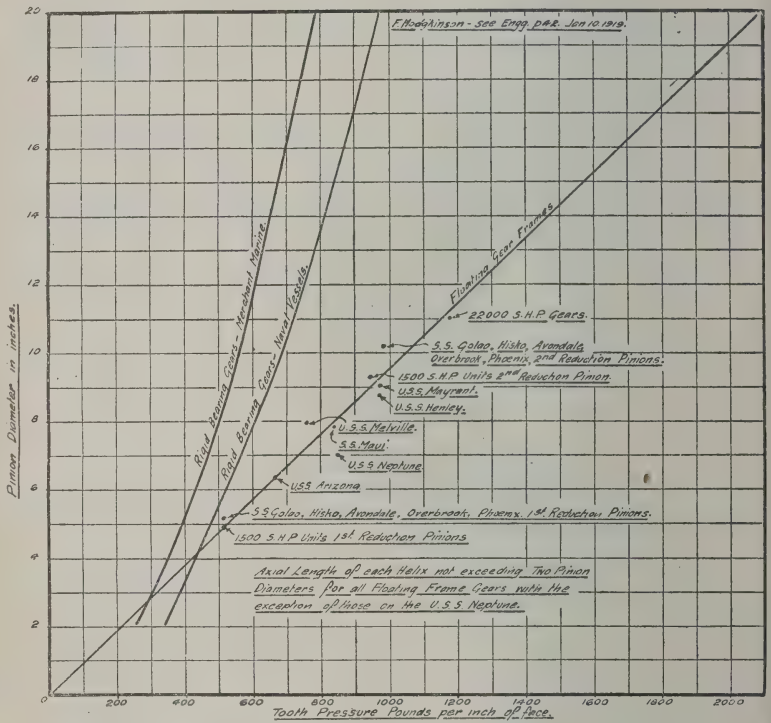


FIG. 14.

tion in the vertical plane relatively to the slow speed shaft. The torque on the pinion tends to increase the helix angle of one half of the pinion and decrease that of the other half, so that if the helix angle of the pinion is the same as that of the wheel, as load comes on, the helix angles become different. If the axis of the pinion is inclined in a vertical plane relatively to the wheel, the change in the helix angle with load can, it is claimed, be very largely compensated, so that with the floating pinion larger torques can be transmitted through a given size pinion than through a pinion supported in rigid bearings. According to the inventors, the floating frame also corrects to a certain extent errors in the teeth and in alignment of the gears.

The action of this gear is well explained, together with some authoritative notes on double helical gearing, in a series of articles by Mr. J. H. McAlpine, which appeared in *Engineering*, commencing May 5, 1916.

In these articles Mr. McAlpine suggests the use of the 'Power Constant' for comparing different gears; these he defines as follows:

If D = pitch diameter of pinion in ins.; L = length of tooth face in ins.; p = average pressure in lbs. per in. of tooth face; R = r.p.m.; C = power constant; P = horse-power transmitted;

Then

$$P = \frac{\pi D R p L}{33000 \times 12}.$$

For correctly designed gears, p and L vary as D, therefore

$$P = C (D^3 R),$$

and

$$C = \frac{P \times 1000}{D^3 R}.$$

For gears having the pinion supported in two rigid bearings, the power constant 'C' should not exceed 1·5.

'C' is usually from 1·2 to 3·0, for gears having three bearings on the pinion.

Gears having the pinion supported in a floating frame have worked very successfully with a power constant of 4.

The ratio $\frac{L}{D}$ should preferably be equal to 4-in. gears having the floating frame.

For best results the pinions for all sizes should have from 26 to 30 teeth; if the number is appreciably reduced interference takes place.

The efficiency in double helical gearing varies from 98·5 per cent. in large gears to 97·5 per cent. in small sets, so that from 1·5 per cent. to 2·5 per cent. of the heat equivalent of the power transmitted has to be dissipated in the lubricating oil cooling system.

The gears are usually lubricated by spraying the oil on the teeth at the point of contact.

The success of a gear depends to a larger extent than is generally supposed on the rigidity and correct design of the gear-box and lubricating system, and where experienced engineers are responsible for these details every confidence can be placed in a turbo-geared proposition.

Table IX gives some particulars of notable installations of geared turbines.

Recently, rapid advances have been made in the application of steam turbines to the mercantile marine, by the introduction of double reduction gearing. Single reduction gears having ratios larger than 15 to 1 are scarcely practical for ship propulsion, but a reduction of, say, 42 to 1 can be commercially obtained by a double reduction gear having two trains of wheels, the first having a reduction of, say, 6 to 1 and the second 7 to 1.

Such double reduction gears are now being used having efficiencies at full load of about 97 per cent.

Now that such large ratios of reduction are commercially practicable, both the turbine and the propeller can be run at the speed most suitable for each respectively.


See also pp. 885, 888, and 'Reduction Gear for Propulsion,' Section XXXIII.

Hydraulic Transmission.


Prof. Fottinger has invented an ingenious system of speed reduction in which the turbine drives a centrifugal pump which delivers water into a water turbine to which the propeller or generator is coupled.

The possibilities and limitations of this type of transmission are illustrated by the following figures given by Prof. Fottinger.*

No. of Stages.	Gear Rates.	Estimated Efficiency.
1	5 to 1	90 per cent.
2	7½ to 1	90 „
3	10 or 12 to 1	88 „

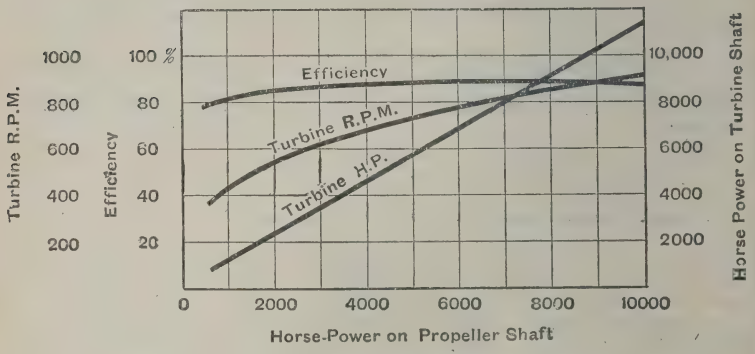

FORWARD ELEMENT

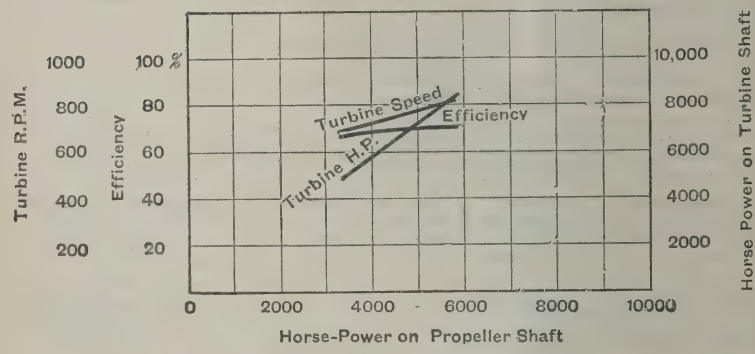

REVERSE ELEMENT

FIG. 15.

Unfortunately the ratios usually required for marine purposes are from 10 to 1 up to 20 to 1. and as it is doubtful if more than single stage transmitters could be commercially adopted, it will be seen the field open to this type is limited. A distinct advantage lies in the fact that the discharge from the turbine pump element can be diverted to a reverse water turbine, by which means reversal can be easily and economically effected. The water used in the transmitter is usually the boiler feed, and in this way some of the losses can be recovered in feed water heating, but it is difficult to see how the gain can possibly exceed 1 per cent. measured at the driven shaft.

Fig. 15 shows the results of tests on a 10,000 B.H.P. transmitter.†

* *Engineering*, March 14, 1913.

† *Z. d. V. I.*, May 16, 1913.

Name of Installation.	Kind, Maker.	B.H.P.	R.P.M. of Turbine.	Gear Ratio.	Blade Gear Ins. Pitch Circ.	Pinion Ins. Pitch Circle.	Teeth on Wheel.	Teeth on Pinion.	Reference.
Hope Natural Gas Company	American Westinghouse Co.	3,400	1,500	12 to 1	120·089	10·007	300	25	'Engineering,' May 26, 1916.
Cleveland Elec. Illuminating Company	"	5,500	1,800	9·6 to 1	99·689	10·392	250	26	"
U.S.S. Melville	"	4,000	1,400	12·3 to 1	95·550	7·784	320	26	"
Cruising Gears, U.S.S. Arizona	"	2,000	2,500	12·35 to 1	78·520	6·351	260	21	"
S.T.D. 1000 Gear Kw.	"	1,850	3,600	4·93 to 1	25·595	5·196	128	26	"
U.S.S. Pennsylvania	"	1,600	1,800	14·4 to 1	69·474	4·811	346	24	"
Swedish Cruisers T.S.	"	5,500	3,600	17·2 to 1	129·326	7·506	430	25	"
Prop. for U.S. Torpedo Boat Destroyer W.M. Co.	"	8,500	2,200	4·9 to 1	48·5	9·9	127	26	"
	"	4,250	3,600	8 to 1	53·1	6·64	184	23	"
	Rigid Gear	4,500	2,750 H.P. 1,689 L.P.	6·15 to 1 3·78 to 1	66·0	10·75 17·5	—	—	"
T.S. Vespasian	C. A. Parsons	1,095	1,459	19·9 to 1	99·5	5	398	20	'Engineer,' April 7, 1911.
S.S. Transylvania and Tuscania	"	5,450	1,707	12·25 to 1	Nearly 120	9·8	405	About 33	'Engineering,' May 26, 1916.
S.S. Ciudad de Buenos Aires and Ciudad de Monte Video	"	2,900	2,320 H.P. 1,630 L.P.	8·71 to 1	54·275	6·233 H.P. 8·831 L.P.	—	—	"
Rolling Mill, Calderbank Steel Works	"	750	2,000	5·25 to 1 5·53 to 1	18·4	3·5 4·47	131 127	25 23	'Engineer,' April 7, 1911.
Melville-McAlpine	American Westinghouse Co.	6,000	—	5 to 1	70	14	175	35	'Engineering,' Dec. 3, 1909.
Melville-McAlpine Geared D.C. Gen.	"	5,030	1,800	10 to 1	100	10	259	26	'Engineering,' Jan. 31, 1913.
T.S. King Orry	C. A. Parsons	8,000	2,210 H.P. 1,617 L.P.	13·58 to 1 5·39 to 1	—	—	221	30 41	'Engineering,' June 27, 1913.
	Power Plant Co.	2,010	3,000	10 to 1	76·67	7·667	229	23	'Engineer,' Oct. 1, 1915.
Melville-McAlpine	American Westinghouse Co.	2,670	3,750	5 to 1	33·7	6·74	116	23	'Steam Turbines for Land Purposes,' Manch. Assoc. of Eng. Jan. 27, 1917
Messrs. C. & J. Hirst	D. Brown	360	3,000	8·57 to 1	43	5	216	25	
Birmingham Corporation	Power Plant Co	133	2,500	4·76 to 1	20·16	4·24	101	21	

TABLE IX.—PARTICULARS OF SOME NOTABLE INSTALLATIONS OF GEARED TURBINES—*continued.*

Name of Installation.	Kind, Maker.	Face Width.	Angle of Helix.	Pressure in Lbs. in W.D.	Pitch Line Speed. Ft. per Sec.	Power Constant.	Face Width ÷ Pinion. Diam.	Efficiency of Gear.	Reference.
Hope Natural Gas Company	American Westinghouse Co.	40	30°	715	65·5	2·26	4·0	—	'Engineering,' May 26, 1916.
Cleveland Elec. Illuminating Company	"	40	30°	925	81·5	2·72	3·85	—	"
U.S.S. Melville	"	32	30°	720	47·5	3·02	4·12	—	"
Cruising Gears, U.S.S. Arizona	"	24	30°	662	69·2	3·12	3·78	—	"
S.T.D. 1000 Gear Kw.	"	20	30°	625	81·5	3·66	3·85	—	"
U.S.S. Pennsylvania	"	22	30°	526	37·75	3·99	4·57	—	"
Swedish Cruisers T.S.	"	31	30°	825	118·0	3·61	4·13	—	"
Prop. for U.S. Torpedo Boat Destroyer W.M. Co.	"	39	30°	1,255	95·0	3·88	3·94	—	"
	"	27	30°	830	104·0	4·03	4·07	—	"
	Rigid Gear	27	—	710	129·0	1·32 H.P. 0·497 L.P.	2·51 H.P. 1·54 L.P.	—	"
T.S. Vespasian	C. A. Parsons	24	20°	394	31·8	3·00	4·8	98·5%	'Engineer,' April 7, 1911.
S.S. Transylvania and Tuscania	"	About 48	—	442	70·7	1·80	5·05	—	'Engineering,' May 26, 1916.
S.S. Ciudad de Buenos Aires and Ciudad de Monte Video	"	About 28	—	450	63·0	2·58 H.P. 1·29 L.P.	4·5 3·18	—	"
Rolling Mill, Calderbank Steel Works	"	—	23°	270	62·4 24·7	8·75 4·2	—	—	'Engineer,' April 7, 1911.
Melville-McAlpine	American Westinghouse Co.	—	30°	—	92	—	—	98·99%	'Engineering,' Dec. 3, 1909.
Melville-McAlpine Geared D.C. Gen.	"	—	30°	—	79	2·85	—	—	'Engineering,' Jan. 31, 1913.
T.S. King Orry	C. A. Parsons	—	44° 22½′	—	—	—	—	—	'Engineering,' June 27, 1913.
	Power Plant Co.	—	—	325	100	1·49	—	—	'Engineer,' Oct. 1, 1915.
Melville-McAlpine	American Westinghouse Co.	26·5	30°	404	110	1·86	3·93	98·5%	'Steam Turbines for Land Purposes,' Manch. Assoc. of Eng., Jan. 27, 1917.
Messrs. C. & J. Hirst	D. Brown	11	32° 12′	275	65·5	0·96	2·2	98%	
Birmingham Corporation	Power Plant Co.	12	23°	132	46·3	0·696	2·83	—	

Electrical Transmission.

Various schemes of electrical reduction of speed have been suggested at various times, for which an overall efficiency of from 90 to 92 per cent. is claimed.

The General Electric Company * have installed an electrical transmission of considerable importance in the collier 'Jupiter' for the U.S.A. Navy, the following particulars of which are of interest :—

The ship is of 20,000 tons displacement, and is driven by a six-stage Curtis turbine, in which each wheel has two rows of blades and runs at 2,000 r.p.m., coupled to a bipolar 3 P.H. generator supplying current at 2,200 volts to two motor-driven propellers. The motors have 36 poles, so that the ratio of synchronous speed reduction is 18 to 1. The efficiency of the motors is 95 per cent.

At the designed speed of 14 knots the propeller speed is 110 r.p.m., and the output at the propellers 5,600 s.h.p.

Under these conditions the consumption on test was 12 lbs. per s.h.p., with a steam pressure of 190 lbs. per sq. in., dry saturated steam, and exhausting into vacuum of 28½ ins. Hg., 30 ins. Baro. Thus the thermal efficiency of the turbine generator and motors is 19 per cent., but this does not include any loss in switchgear or cables.

Variations in speed are obtained by varying the speed of the turbine, the gear ratio remaining constant, and in the process of reversal water-cooled resistances are put in circuit with the rotors of the motors.

A system which is virtually an electrical speed reduction has been introduced where direct current is desired with steam turbines as the prime movers, in which the turbine drives an alternator which is electrically coupled to a rotary converter. As compared with direct-current generators driven by double helical gearing, it appears that in plants of over 1,500 kw. capacity the pure electrical scheme may be the more advantageous. Other considerations peculiar to a particular installation often arise demanding the electrical scheme for smaller outputs than 1,500 kw.

Very large installations of electrically driven ships are now being completed for the United States Navy, and this system may possess certain advantages for such ships as operate for a large proportion of their time at speeds very much less than the maximum which they are able to develop. In such cases the turbines can run at their normal speed independently of the speed of the propeller. Further, the main turbines can be disposed in any convenient position in the ship without reference to the position of the propeller. These conditions are not important in the case of the majority of ships in the mercantile marine.

---

* *Engineering*, August 23, 1912.

SECTION XXIX

PART VI

ENGINE DESIGN—MEAN EFFECTIVE PRESSURES—CYLINDER RATIOS — STRESSES — BEARING PRESSURES — TYPICAL EXAMPLE OF DESIGN — FRAMES — CYLINDERS — BEARINGS—FLYWHEELS—GOVERNORS—PISTONS —PACKINGS —SLIDE VALVE GEARS—LINK MOTIONS—CONDENSERS AND AIR PUMPS—THERMAL EFFICIENCY—FEED PUMPS.

(Revised by T. B. Morley, D.Sc., M.I.Mech.E.)

ENGINE DESIGN.

The type of engine is first settled from a consideration of duty, steam consumption, price of fuel, space available, working conditions, water supply, first cost, etc.

Cylinder proportions and speed of revolution are then fixed. Typical British cylinder ratios and mean effective pressures are given in the tables below. On the European Continent the cylinder ratios adopted are usually considerably below the tabular values. That is, a larger high-pressure cylinder is adopted. This makes for economy with superheated steam, but for a two-crank engine tends towards unequal distribution of load on the two cranks which is not altogether desirable. This objection does not apply in the case of tandem engines. These remarks are illustrated by the test results tabulated on page 1403.

TYPICAL MEAN EFFECTIVE PRESSURES AT NORMAL FULL LOAD IN LBS. PER SQ. IN.

Boiler Pressure—Gauge	80	100	120	140	160	180	200
Simple Condensing, about	30	34	37	—	—	—	—
„ Non-Cond. „	35	40	43	—	—	—	—
Compound Condensing	25	27	28	29	30	31	32
„ Non-condensing	26	30	34	37	40	—	—
Triple Condensing	—	—	—	27	29	30	30·5
Uniflow Condensing	30	33	35	37	38	39	40
„ Non-Condensing, about	26	30	34	37	40	—	—

Note.—The above are often exceeded 5 or 10 per cent. (*Foster.*)

USUAL BRITISH CYLINDER RATIOS. HORIZONTAL. CUT-OFF GOVERNING.

Boiler Pressure, lbs. Gauge	100	120	140	160	130	200
Initial Piston Press., absolute	110	130	150	170	190	210
Compound Non-Condensing	2·3–2·5	2·5–2·7	2·8–3·0	3·0–3·2	—	—
Compound Condensing	3·0–3·3	3·2–3·5	3·7–3·8	4·0	4·3–4·6	4·5–4·7
Triple Condensing:						
L.P. to H.P.	—	—	5·2–5·6	5·6 –6·0	5·9–6·3	6·0–6·6
I.P. to H.P.	—	—	2·3–2·36	2·36–2·45	2·43–2·5	2·45–2·67

(*Foster.*)

Having fixed the cylinder sizes the probable steam pressures on the pistons are put down, and from these the total piston loads are obtained. From these, by allowing suitable stresses and bearing pressures the principal sizes are fixed.

Usual stresses in high-class engines are as follows:—

USUAL ENGINE STRESSES.

Crank and crosshead pins, up to. . .	9,000 lbs. sq. in.	Connecting rod bolts .	4,000–6,000 lbs. sq. in.
Crankshaft journals .	7,000–9,000 „	Main studs and bolts .	5,000 „
Piston rod, net tension at cotter hole . .	5,000–6,000 „	Lesser „ „ .	4,000–6,000 „
Piston rod, gross tension (direct plus bending in body) . . .	9,000 „	Connecting rod body, small end . .	3,000–6,000 „
		Shear on cotters .	3,000–5,000 „
		Bending on cotters .	up to 7,000 „
		General forgings . .	4,000–8,000 „

Cast Iron in Tension.

Simple frames, direct pull	700–900 lbs. sq. in.	Flywheel arms (C.F.) .	1,500–2,500 lbs. sq. in.
Frames, with some bending	500–800 „	Cylinder barrels, new .	1,200–2,000 „
Complex frames, with bending	500–600 „	„ „ usual .	1,500 „

It should be noted that in calculating the above frame tensions only the direct pull is included. If bending is calculated separately and added on, very high figures are sometimes reached.

As an example, take the case of a cotton mill engine of 1,500 i.h.p. normal load, the engine to be of the cross-compound condensing type; boiler pressure 160 lbs.

The cylinder ratio we take to be 4 nominal, piston rods being ignored. We aim at equal loading on the two cranks so that of the total drop in pressure from stop valve to condenser one-fifth will take place in the low-pressure (l.p.) cylinder. Allowing 12 lbs. vacuum and losses of 5 lbs. and 8 lbs. at the steam pipe and intermediate receiver respectively, the total effective pressure drop is 159 lbs., of which 32 takes place in the l.p. cyl. and 127 in the h.p. If the engine has a stroke of 5 ft. and runs at 66 r.p.m. (higher speeds are coming into favour), the piston speed is 660 ft. per min., and the area of the l.p. cylinder for a m.e.p. of 30 lbs.

$$= \frac{1{,}500 \times 33{,}000}{660 \times 30} = 2{,}500 \text{ sq. ins.}$$

This is taken as the gross piston area, giving a diameter of 56·5 inches. The actual m.e.p. would therefore be about 31 lbs. The h.p. cylinder should then be 28·25 ins. diam., but odd dimensions are unsatisfactory, and the cylinders will be fixed at 28 and 56 inches, giving a nominal m.e.p. of 30·5 lbs., which is rather below modern practice, which tends rather to higher m.e.p. than given in the table above.

Ignoring the piston rods, the gross load on the l.p. piston is $32 \times 2{,}500 = 80{,}000$ lbs. The load on the h.p. piston is the same. Owing to the effect of the rods this value is rather high, but the difference may be ignored, and 5 per cent. added to cover variations in the load distribution, making the total piston load 84,000 lbs. Taking bearing pressures of 1,250 and 850 lbs. per sq. in. on the crosshead pin and crank pin, the projected areas of these become 67·2 and 98·8 sq. ins. respectively. We may thus fix the pin bearings (diam. × length) as 6·75 × 10 and 10 × 10 ins.

HORIZONTAL ENGINE BEARING PRESSURES.

Bearing.	Lbs. per Sq. In.	Bearing.	Lbs. per Sq. In.
Crosshead pins . . .	1,200–1,300	Second motion bearings .	100–200
Crank pins	800– 950	Crosshead slides . . .	40– 50
Crankshaft journals (steam load)	100– 150	Intermediate piston rod slides	20– 40
Crankshaft journals (combined loads) . . .	150– 200		

USUAL BEARING PRESSURES FOR VERTICAL HIGH-SPEED ENGINES.

Bearing.	Lbs. per Sq. In.	Bearing.	Lbs. per Sq. In.
Main bearings . . .	200– 300	Crosshead slippers . .	40–50
Crank pins	400– 550	Eccentric straps . . .	60–70
Crosshead pins . . .	1,000–1,200		

Inertia should be allowed for in special cases.

Journal speeds are rarely taken into account, but there is at present a tendency to do so, especially in Germany. The influence of speed is complex. In many cases it improves the load which can be carried, but it also increases the heat developed per second, and where the pressures are not such as to endanger the oil film, may limit the safe load on the bearing by the tendency towards overheating. For this a rule of the form—

Pressure per sq. in. × journal speed in ft. per sec. = constant,

is used, but the 'constant' varies so widely that its value in the present state of knowledge is limited.

We now turn to the size of the crankshaft neck. The bending 'arm' from centre of crank pin to centre of main crankshaft neck, we estimate at about 26 ins., so that the bending moment is $M = 84{,}000 \times 26 = 2{,}180{,}000$ inch lbs. The twisting moment is

$$T = 84{,}000 \times 30 = 2{,}520{,}000 \text{ inch lbs.}$$

The equivalent bending moment is

$$M_e = \tfrac{1}{2}\left[M + \sqrt{M^2 + T^2}\right] = 2{,}755{,}000.$$

Adopting a stress of 8,000 lbs. per sq. in., the modulus of the neck section is

$$Z = \frac{2{,}755{,}000}{8{,}000} = 344.$$

For a solid neck of diam. d, $Z = 0{\cdot}0982d^3$. Hence $d = 15{\cdot}2$ ins., say 15·5 ins. The length of the neck must be determined to give a suitable bearing pressure from dead weight and steam load.

The piston rod diam. is next fixed, and partly from it and partly directly from the load the proportions of the connecting rod. The piston rod is proportioned so that the stress round the cotter hole at the crosshead is about 5,000 to 5,500 lbs., whilst the total direct tension plus tension due to bending (assuming a tail support to the rod) does not exceed about 9,000 lbs. The net section of the frame will lie between about 100 and 170 sq. ins. according to type, the highest stresses being allowed where there is least bending.

The size of the crosshead slipper is determined as follows:—If the connecting rod is 5 cranks long, centre to centre, divide the total piston load by 5. The result, 16,800 lbs. in this case, is approximately equal to the maximum load on the slide due to piston pressure. To this should be added the dead weight in the case of a horizontal or inclined engine, giving, say, about 18,000 lbs. in all. Taking a pressure of 45 lbs. per square inch (less if the pressure is steady and not highly variable), gives a slipper area of 400 sq. ins.

Testing Crankshaft Alignment.

Place the crankshaft, fig. 1, on its top centre and set either a micrometer gauge or a gauge made of round iron between the crank webs at the bottom. Turn the crankshaft

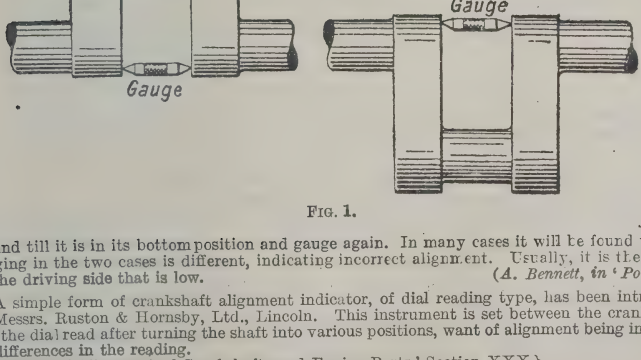


FIG. 1.

around till it is in its bottom position and gauge again. In many cases it will be found that the gauging in the two cases is different, indicating incorrect alignment. Usually, it is the bearing on the driving side that is low. (*A. Bennett, in 'Power.'*)

A simple form of crankshaft alignment indicator, of dial reading type, has been introduced by Messrs. Ruston & Hornsby, Ltd., Lincoln. This instrument is set between the crank webs, and the dial read after turning the shaft into various positions, want of alignment being indicated by differences in the reading.

(See also 'Alignment of Crankshafts and Engine Parts,' Section XXX.)

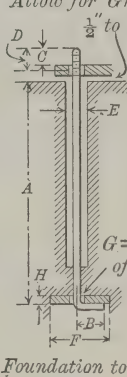
FRAMES.

Bedplates and other frames are almost invariably of strong cast iron. They should be so formed as to reduce bending to a minimum consistent with convenience for the engine attendant and reasonable cost. To secure this they should be as nearly as possible symmetrical on both sides, and also above and below the centre line. This does not mean strict geometrical symmetry, as this is very rarely attainable except as regards the two sides ; but it implies an approximately equal distribution of stress. Circular bored and turned joints make for truth in alignment and often for cheapness in manufacture. Ample bearing surface on the foundations must also be allowed.

Foundation Bolt Dimensions.

For bolts 2 ins. or over in diameter, a nut is used under the washer or anchor plate, instead of the bolt being clinched, as indicated by dimension *B*.

STANDARD DIMENSIONS FOR SETTING FOUNDATION BOLTS.



Bolts. (Inches.)						Washers. (Inches.)		
Dia.	A	B	C	D	E	F	G	H
¼	—	—	—	—	—	—	—	—
⅜	—	—	—	—	—	—	—	—
½	12	2½	¾	1	2	5 by 5	⅞	⅝
⅝	15	2⅝	1	1¼	2	5 by 5	⅞	⅝
¾	18	2¾	1⅛	1½	3	5 by 5	⅞	⅝
⅞	21	3	1⅜	1¾	3	6 by 6	1¼	¾
1	24	3	1½	2	3	6 by 6	1¼	¾
1¼	27	4	1⅝	2¼	4	8 by 8	1⅝	1
1½	30	4	1⅞	2½	4	8 by 8	1⅝	1
1⅝	36	5	2¼	3	4	10 by 10	2	1¼
1¾	42	5	2⅝	3½	5	10 by 10	2	1¼
2	48	Nut	3	4	5	12 by 15	2¼	1
2¼	54	Nut	3⅜	4½	6	12 by 15	2¼	1
2½	60	Nut	3¾	5	6	12 by 20	3	1½

(*'Machinery,' Mar.* 24, 1921.)

CYLINDERS.

Cylinders should be hard and strong. Apart from questions of strength, for information on which see the table of stresses on p. 1590, the following important points should not be overlooked :—

(1) The clearance volume should be as small as reasonably possible.

(2) The clearance surface should be reduced to a minimum.

(3) The exhaust and inlet ports are better separated.

(4) The ports should be short, direct, and not too large. Large ports involve increased clearance surface.

(5) The covers which, however, are closely influenced by the piston details, should be free from recesses and curves.

(6) Where there are jackets the steam should be arranged to have a decided through flow, the more rapid the better.

(7) Proper relief valves and drainage should be provided.

(8) Metal bosses and projections connecting to the frames or atmosphere facilitate heat radiation, and should be kept small.

The clearance surface is specially important. Some particulars of usual practice are given in the table of tests on p. 1403, and in the following :—

TYPICAL CLEARANCE SURFACES.

Cylinder and Valves. (Piston Area × 2 = 100%.)	Surface, Per cent.	Authority.
H.P. slide valve	200	J. Stumpf
L.P. trick valve	180	,,
H.P. piston valve	300	,,
L.P. piston valve	220	,,
Double-beat drop valve	182	,,
Corliss valve	170	,,
Uniflow, double-beat valve	133	,,
H.P. Corliss valve	210–320	Foster
L.P. Corliss valve	180–300	,,
H.P. drop-piston valve	210–300	,,
L.P. drop-piston valve	200–300	,,

The port sizes are based on a steam velocity of 100 to 125 feet per second for inlet ports, and 90 to 120 feet per second for exhaust ports when using saturated steam. With superheated steam these speeds are increased to 130 or even 150 feet per second.

BEARINGS.

With very rare exceptions oil is dragged into a bearing by the relative movement of the two so-called rubbing surfaces by a kind of wiping or dragging action. The bearings of an electric motor provide an excellent example. To prevent loss of lubrication the oil must not be allowed to escape from the bearing except at the proper place. Ordinary crosshead pin bearings work mostly by suction. The slight pulsation of the pin in the bearing draws in oil on alternate strokes. On the return of the pressure the oil has not time to escape.

Oil grooves should be looked upon as local supply reservoirs.

Bearing clearances should not increase so rapidly as the diameter of the journal. They vary according to the class of work.

White metal for bearings (Section XXXVII) is a safety precaution in case of overheating. It also has constructive merits.

Usual bearing pressures are given on p. 1590.

For the Michell bearing see Section XXXIII.

Cooling Bearings.

'COOLORICID.'

This is a preparation (*Sterns, Ltd.*) expressly prepared to obviate the risk of seized bearings By an application of 'Cooloricid' it is claimed that the temperature of the hottest bearing will be reduced to normal, thus obviating seizing or fracture. The material is packed in ½-cwt. and 1-cwt. drums, price 2*s.* 6*d.* per lb. ; sample tins containing 10 lbs. are supplied at the same price.

Alignment Pins.

'Alignment,' 'steady,' or 'fixing' pins are brought into service in the erection of machinery details for the purpose of ensuring that one particular piece shall be superimposed upon another

piece in its precise and correct position, no matter how many times the respective pieces may be separated. The use of such pins is far preferable to fitting bolts to each and every hole; the holes for the bolts should be 'clearance' holes, i.e. holes through which the bolts can pass freely.

Fig. 2 shows a pin which has been used frequently in small engines, dynamo-electric machinery, and, notably, in the casings of large steam turbines, with unqualified success and approval.

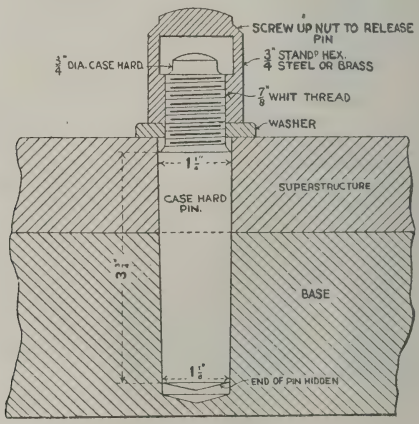


FIG. 2.

It will be observed by those familiar with the use and application of these alignment pins, that a pin such as is shown in the figure is all but imperatively necessary where it is required to fit it to a blind bottom, as represented above. ('*The Electrical Review*,' Sept. 17, 1920.)

FLYWHEELS.

A = Area of turning moment curve per revolution = Work done per revolution in ft. lbs.
a = Excess or deficiency of turning moment curve from resistance curve (usually taken as the mean steady load) = k A.
k = Coefficient of energy fluctuation.
I = Moment of inertia of flywheel in lbs. ft.^{2}
d = Diameter of gyration of wheel in feet.
D = „ rim face „ „
C = Number of complete turning-moment cycles per revolution.
G = Total weight of wheel in lbs.
W = Effective „ „ „ if placed at rim face, diameter D, velocity V.
V = Linear velocity of rim face, ft. per sec.
N = R.P.M.
X = Cyclic irregularity of turning.
Y = Angular deviation from true uniform turning.
F = Frequency of (electric) alternations per second.
p = Number of poles in alternator field magnets.

$$K = \text{Flywheel coefficient} = \frac{\text{Stored energy in flywheel}}{\text{Work done per revolution}} = \frac{WV^2}{2gA}.$$

Then (the suffixes $_1$, $_0$, and $_2$ referring to maximum, mean, and minimum),

$$X = \frac{N_1 - N_2}{N_0} = \frac{V_1 - V_2}{V_0} = \frac{k}{2K} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (1)$$

$$K = \frac{k}{2X} = \frac{a}{2AX} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (2)$$

$$Y_1 - Y_0 = 28{\cdot}65\,\frac{X}{C} \quad . \quad . \quad . \quad . \quad \text{mechanical degrees} \quad . \quad . \quad . \quad . \quad (3)$$

$$= 14{\cdot}32\,\frac{pX}{C} \quad . \quad . \quad . \quad \text{electrical degrees} \quad . \quad . \quad . \quad . \quad (4)$$

$$= \frac{1719\,FX}{NC} \quad . \quad . \quad . \quad \text{electrical degrees} \quad . \quad . \quad . \quad . \quad (5)$$

The above formulæ are based on sine curves for the turning moment, and are rarely strictly correct as regards the angular deviation $Y - Y_0$, but formulæ (1) and (2) are always correct if the value of a is properly determined.

Considerable uncertainty arises as to the value of a in the case of multi-crank engines.

Certain flywheel data are given in the three following tables. It will be understood that these are typical values, and that considerable variations occur in practice.

TYPICAL VALUES OF ENERGY COEFFICIENTS, k.

Engine.	Cranks.	Double or Single Acting.	Cycles per rev. C.	k	Crank Angles.
Steam engines;					
Simple	1	Double	2	0·12 –0·16	
Tandem	1	,,	2	0·11 –0·14	
Cross-compound	2	,,	4	0·06 –0·09	90
Triple	3	,,	6	0·025–0·03	120
Uniflow	1	,,	2	0·11 –0·13	
Gas engines, 4-cycle :					
Tandem, two cylinders	1	Double	2	0·13 –(0·2)	A
,, four ,,	2	,,	4	0·06 –(0·1)	90 A
One cylinder	1	,,	0·5		
One cylinder	1	Single	0·5	0·2 –2·4	
Two cylinders, tandem	1	,,	1	0·9 –1·1	360
Two cylinders, twin	2	,,	1	0·9 –1·0	360
Two cylinders, opposed	1	,,	0·5	1·3 –1·5	180
Three cylinders	3	,,	1·5	0·5 –0·6	120
Four cylinders	4	,,	2	0·1 –0·13	180
Six cylinders (tandem)	3	,,	3	0·06 –0·08	120

$k = \dfrac{\text{maximum excess energy}}{\text{work done per revolution}}$. A indicates figures in brackets, adopted to cover misfiring.

TYPICAL CYCLIC IRREGULARITIES X AND FLYWHEEL COEFFICIENTS K.

Driving.	Connection.	Engine.	No. of Cranks.	X	K
Alternators in parallel	Direct	Large	—	$\frac{1}{210}$	—
,, ,,	,,	High-speed	—	$\frac{1}{250} - \frac{1}{300}$	—
D.C. dynamos	,,	Steam	—	$\frac{1}{100} - \frac{1}{125}$	—
,,	,,	Large gas	—	$\frac{1}{150}$	—
,,	,,	Small gas	—	$\frac{1}{80} - \frac{1}{125}$	—
,,	,,	Diesel	—	$\frac{1}{100} - \frac{1}{125}$	—
,,	Ropes	Various	—	$\frac{1}{80} - \frac{1}{125}$	—
Best factory	,,	Steam	1	$\frac{1}{165}$	12
,, ,,	,,	,,	2	$\frac{1}{200} - \frac{1}{240}$	7–12
General factory	,,	,,	1	$\frac{1}{125} - \frac{1}{144}$	8–10
,, ,,	,,	,,	2	$\frac{1}{170} - \frac{1}{240}$	6– 9
Pumping, reciprocating	Direct	,,	3	—	·15–·5
Pumping, usual	,,	Triple vert.	3	—	0·45

VALUES OF FLYWHEEL COEFFICIENTS K FOR VARIOUS VALUES OF X AND k.

Engine.	Cranks	k	X					
			$\frac{1}{75}$	$\frac{1}{100}$	$\frac{1}{125}$	$\frac{1}{150}$	$\frac{1}{200}$	$\frac{1}{250}$
Steam :								
Double acting	1	0·13	4·9	6·5	8·1	9·8	13·0	16·3
" "	2	0·07	2·7	3·5	4·4	5·3	7·0	8·8
" "	3	0·03	1·2	1·5	1·9	2·3	3·0	3·8
Gas: double acting tandem	1	(0·2)	7·5	10·0	12·5	15·0	20·0	25·0
" " "	2	(0·1)	3·8	5·0	6·3	7·5	10·0	12·5
Gas : 4-cycle single-acting :								
One cylinder	1	2·3	86	115	144	173	230	288
Two cylinders tandem	1	1·0	37·5	50·0	62·5	75·0	100·0	125·0
Two cylinders opposed	1	1·4	52·5	70·0	87·5	105·0	140·0	175·0
Three cylinders	3	0·55	20·6	27·5	34·4	41·2	55·0	68·8
Four cylinders	4	0·13	4·9	6·5	8·1	9·8	13·0	16·3
Six cylinders	3	0·07	2·7	3·5	4·4	5·3	7·0	8·8

NOTE.—The values of k are based on the assumption of a uniform engine load, and do not apply accurately to engines driving pumps, blowers, or even electric alternators. (*Foster.*)

Example.—Tandem compound engine of 1,200 i.h.p. normal load at 94 r.p.m., driving an alternator of 50 cycles. The deviation must not exceed two electrical degrees on either side of the mean position.

From the tables we see that k is about 0·13, and C=2.
In formula (5) we have

$$C = 2,\ Y_1 - Y_0 = 2,\ F = 50,\ N = 94$$

Hence

$$X = 0{\cdot}00437 = \frac{1}{229}.$$

Inserting the value of X in formula (2) we obtain K=14·9.
The work done per revolution is

$$A = \frac{1{,}200 \times 33{,}000}{94} = 421{,}000 \text{ ft.-lbs.}$$

The stored energy in the flywheel is KA or 6,280,000 ft.-lbs.
If the flywheel is 18 ft. diam., the rim velocity is 88·6 ft. per sec., and the equivalent weight at this diameter is, therefore, 51,500 lbs. The actual flywheel weight should be about 70 per cent. in excess of this, say 87,500 lbs. This makes no allowance for the flywheel effect of the alternator rotor, which is usually considerable and need not be ignored.
Alternator builders commonly state the flywheel quantity of their alternators in terms of GD^2, which is short for weight multiplied by the square of the diameter of gyration. If the units employed are kilogrammes and metres, the corresponding GD^2 in lbs. and feet can be obtained by multiplying by 23·7.

$$\text{Stored energy} = GD^2 \times \left(\frac{\pi N}{60}\right)^2 \times \frac{1}{2g} = \frac{GD^2 \times N^2}{23{,}500}.$$

If G, D are in lbs. and feet, the stored energy is in ft.-lbs. The stored energy at the revolutions of the machine is readily calculated by assuming any convenient diameter of gyration, calculating the corresponding weight and velocity and thence the kinetic energy. The flywheel effect is sometimes stated as T tons (or lbs.) at 1 ft. radius. The GD^2 is then T × 4 in tons (or lbs.) × feet^2. The actual diameter need not be known, which is a convenience of this method of expression. Occasionally the moment of inertia is given, which is equal to GD^2 divided by $4g$, which is 128·8 in ft.-lb. units and 39·24 in kg. metre units. (This gives the moment of inertia in 'engineers' units,' i.e. mass × length^2 ÷ g.)

GOVERNORS.

It is the function of the governor to adjust the quantity of steam to the load on the engine. The sensitiveness of the governor should depend on the nature of the load, but in all cases the governor should be as free from friction (which also applies to all the valve mechanism operated by the governor) as possible. Friction tends to coarse governing and hunting. On the other hand, a very sensitive governor, especially if of great power on an engine with insufficient flywheel, tends to produce hunting, which should be corrected by an oil dashpot on the governor mechanism. In governor design attention must be paid to the levers and connections so as to give a reasonably equal ratio of governor movement to speed variation at all loads.
The plain Watt fly-ball governor is rarely used, being deficient in power. When loaded with a central weight (Porter governor) it is satisfactory on typical factory engines, especially

if carried on ball-bearings and knife edges throughout. The centre weight makes it somewhat sluggish in following changes of speed, and springs replace the weight in many modern governors. The springs need not be vertical.

If the governor is mounted on the crankshaft it may become bulky owing to its slow speed, but has some merits where eccentrics or valve rods have to be moved directly. Shaft governors, owing to their bulk, tend to be sluggish and to lag behind the engine when the speed changes. This inertia effect has been utilised in the inertia shaft governor, in which it is the falling behind of the governor weights due to inertia and not their outward movement under centrifugal force which operates the valve gear.

Relay Governors.

In relay governors the movement of the valve gear is effected by a motor, usually taking the form of a cylinder and piston operated by oil pressure. The movement of the piston is controlled by a small sensitive governor, usually of the centrifugal type. This governor has only to move the oil valve and can be relatively small, whilst the force exerted by the relay piston may be anything desired. The oil is supplied by a reciprocating or, more usually, a rotary pump. A simple drum or toothed-gear pump is entirely satisfactory. Any pressure can be obtained, but 50 or 60 lbs. sq. in. is a convenient value. In calculating the pump capacity allow for the maximum reasonable movement of the relay piston, and for 25 to 50 per cent. slip at the pump according to the speed, size, and pressure of the pump. These governors are common on large turbines and growing in favour for large oil, gas, and steam engines. Unlike the ordinary centrifugal governor insufficient power shows itself chiefly by slow action and not very much by a large difference in the rising and falling speeds. In short, the relay governor is, under these conditions, slow but accurate.

Governors are best driven by gears, but chains may be used and even belts or ropes if the last two are in duplicate or triplicate to minimise trouble in case of one belt or rope breaking.

Governors are best arranged to knock off at over speed, but this function may be arranged for by a simple separate governor.

Governors are often termed 'expansion' or 'throttle' governors, but these expressions refer to the valve gear rather than the governor. Expansion control is the more economical in most cases, but more difficult to arrange for except in the case of engines having Corliss or drop valves and running at moderate speeds only.

Area of Steam Passages and Valves.

The area is usually calculated from the mean piston speed. Thus if the pipe or valve area is one-tenth the piston area and the piston speed is 600 ft. min. or 10 ft. sec. the steam speed through the pipe or valve is 100 ft. sec.

Usual values for steam and exhaust valves, ports, and pipes:—

Saturated steam	100 ft. per sec.
Superheated steam	125 ,,

For drop-seated valves add about 50 per cent. at high speeds, and up to 100 and 150 per cent. for uniflow engines.

For steam turbines base on actual weight of steam, but assumed saturated, and allow 90 ft. per sec. This is equal to about 120 ft. sec. for steam superheated about 150° Fah. at the turbine. A rough rule is 1000 lbs. of steam per hour at rated load per sq. in. of pipe area.

For the main steam range, unless this is very short, base on actual volume, assumed saturated, flowing at about 90 ft. per sec.; rather less, say 75 to 80 ft. per sec., for reciprocating engines or pipes below 4 ins. in diameter.

PACKINGS.

General Notes.

A packing may operate on two principles. It may, as its name implies, pack the stuffing box as tight as possible, stopping every channel of escape and relying on the quality and lubrication of its materials to prevent undue friction; or it may employ accurately fitting stop-plates and rings adjusted to give minimum friction and thus permitting a very trifling leakage, which if sufficient to be noticeable is sucked away to the intermediate steam pipe or exhaust, as the case may be. All the old and many of the new packings were on the first principle. Some of the new are on the second; and for valve spindles, where friction is most undesirable, the second should always be adopted. In turbines the second is almost universal, the fitting being very slack but not casual, and the leakage considerable.

Asbestos Plaited Packing is made in coils in any diameter from ¼ in. upwards, round or square section. It is supplied either plaited throughout, with stranded centre and plaited cover, or graphited and lubricated throughout.

For high-pressure steam and superheat a white-metal cloth type is made, but it is also supplied in non-metallic and other styles, in many qualities to suit varying conditions of working. It is made in coils of about 60 ft. length, and in diameters ¼ in. and upwards.

THE UNITED STATES METALLIC PACKING.

This packing is made in four distinct forms: 1, block type of packing; 2, cone or locomotive type of packing; 3, duplex type, consisting of combination of the block and cone types; 4, atmospheric-duplex type, specially designed for use on low-pressure condensing cylinders.

Figs. 3, 4, show the duplex type of packing. The block portion consists of eight blocks which are held in strong rings, having pockets or horns holding springs. The packing blocks are put together in sections, four blocks to a section. Each section is, therefore, composed of two working blocks, babbit lined, and two guide blocks. The joints between the blocks in one section are at right angles to those in the other section, thus breaking joint. The blocks are regulated by springs, which merely keep the parts in place when steam is shut off, as when the steam is applied the steam pressure regulates and sets the packing. A ball-joint on one side and follower with springs on the other give the packing free play and keep it steam-tight, without regard to the vibration of the rod. It works equally well whether the rod vibrates or not, and, causing no friction, it does not wear the rod, but gives it a high polish. With efficient lubrication the blocks wear very slowly, many of the packings having given over twenty-four years' service without renewal of the blocks.

The United States Duplex Packing.

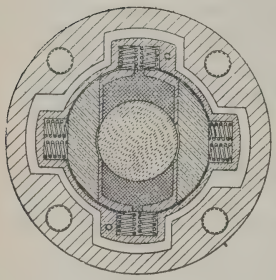


FIG. 3.

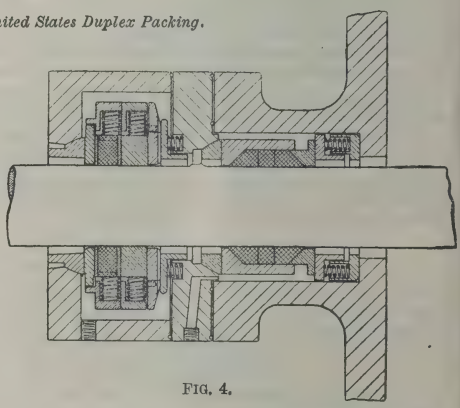


FIG. 4.

The cone portion of the duplex packing consists of three white metal rings placed in a floating cup, the interior of which is partly conical. This cup rests against ball and socket-ring, and the whole is kept in place by a follower with suitable springs, which allow the packing free play in all its movements. The whole is enclosed in a strong case, and bolted to the cylinder head with the usual stud bolts. The packing is steam setting, hence the friction is reduced at least 50 per cent. as compared with non-steam-setting packings. Drain valves are provided for removal of water, core sand, or other accumulations.

The block type of packing is used for pressures under 100 lbs. per square inch. The duplex type is employed for pressures over 100 lbs. Either packing can be arranged for working with steam superheated to 700° F.

Fig. 5 shows the cone or locomotive type of packing, which is practically similar to the cone packing described above. The white metal rings are the only parts which require renewal, and it is no uncommon thing for locomotives to run 80,000 to 100,000 miles without requiring adjustment of packing. All packings can be arranged to pass over enlarged ends.

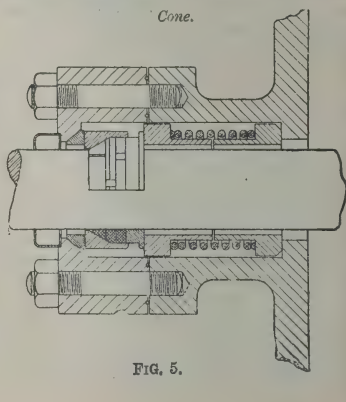


FIG. 5.

PACKING

FOR STEAM ENGINES

INCREASES POWER BY DECREASING FRICTION.

USED ALL OVER THE WORLD. OVER **400,000** SUPPLIED.

ADOPTED BY:

BRITISH, UNITED STATES, DUTCH, JAPANESE,
FRENCH, SPANISH, BRAZILIAN, ETC., NAVIES.
CUNARD, UNION CASTLE, ORIENT, AMERICAN
ROYAL MAIL, ELLERMAN, ETC., STEAMSHIP LINES.
PRINCIPAL RAILWAY, INDUSTRIAL & ELECTRICITY CONCERNS.

HIGHEST AWARDS PARIS 1900.

United States Metallic Packing Co. Ltd.

Soho Works, BRADFORD.

Telegraphic Address—**Metallic, Bradford.** Telephone Nos. **4705, 4706.**

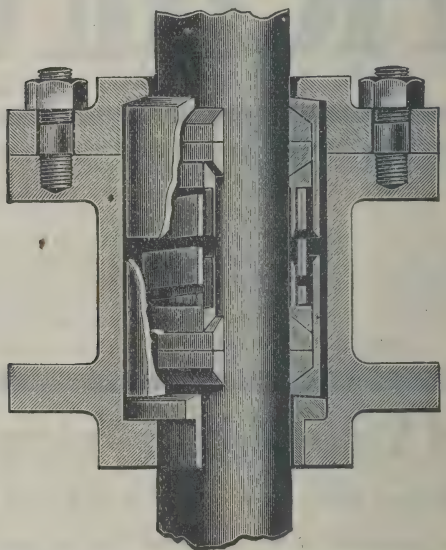
BRANCH OFFICES.

LONDON 116 Fenchurch St., E.C. T.N. 2710 Avenue T.A. Zircons.
LIVERPOOL, 632 Royal Liver Bldg. T.N. 8878 Bank - T.A. Undeniable.
BOLTON - Palatine Bldgs. - T.N. 406 - - T.A. Hollo.
SWANSEA - Pembroke Bldgs. - - T.N. 919 Central T.A. Metallic.
GLASGOW - 52 St. Enoch Sq. - - T.N. 8276 Central - T.A. Floating.
NEWCASTLE-ON-TYNE, 2 Collingwood St. T.N. 2102 Central T.A. Packing.
BIRMINGHAM, BRISTOL, HULL, BELFAST, EDINBURGH, NOTTINGHAM, SHEFFIELD, PORTSMOUTH, &c.

THE UNITED KINGDOM SELF-ADJUSTING ANTI-FRICTION METALLIC PACKING (PATENT).

The Simplest and Most Durable Metallic Packing for all classes of Engines.

Perfectly Elastic. **Keeps Rods True.**
Prevents undue wear to Rods.
Admits of Drain Cock in spring space.



Small number of parts. **No multiplication of springs.**
Lasts for years without renewal.
Minimum of wear on Rod and least possible amount of friction.
Can be fixed and removed with less trouble than any other.

PACKING SUPPLIED TO HOME, COLONIAL, AND FOREIGN RAILWAYS AND LARGEST ENGINE BUILDERS.

Many Thousands in Use. *All Packings Guaranteed.*
Specially Adapted for Superheated Steam and Refrigerating Machines

Apply for particulars to—

Head Offices: 14 COOK STREET, LIVERPOOL.

Telegrams 'PACKING, LIVERPOOL.' Telephone: 4875 BANK.

F. 1599

The United Kingdom Self-adjusting Anti-friction Metallic Packing.

The arrangement of this packing is shown by fig. 6. The only wearing parts are the rings C, D, L, M, which are of special anti-friction metal. These rings are fitted on the rod in segments taking the shape of a truncated cone held together by gunmetal sleeves (B and K) and kept in their place by gunmetal spring rings (E and N), which in their turn are compressed by the steel coil spring (F) placed between them. At the end of the sleeves (B and K) are concentric spherical bearings which allow of free lateral motion where there is any inaccuracy in the running of the rod.

The angle on the rings for the purpose of wedging them on the rods to make a steam-tight joint being more than double that in general use in metallic packings, the friction on the rod is extremely small, thus reducing the wear on the special metal rings and the rod itself to a minimum.

For swell-ended and large rods a slightly different arrangement of the gunmetal rings is adopted, but under no circumstances are screwed packings necessary.

A special feature in the arrangement of the 'United Kingdom' packing is that it cannot be tampered with. It yields freely to all vibrations of the rod which it packs, and also tends

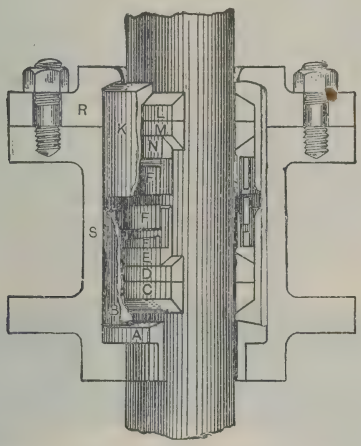


FIG. 6.—A, Neck Bush; B and K, Gunmetal Sleeves; C, D, L and M, Special Anti-Friction Metal Rings; E and N, Gunmetal Spring Rings; F, Steel Coil Spring; R, Gland; S, Stuffing Box.

to support it, because the concentric spherical bearings at the end of the brass sleeves, which contain the wearing parts, will not allow the packing to drop vertically, although it can angle in any direction, pivoting about the piston head.

It is claimed that the friction is less than one-fourth that with any other existing form of packing, this result being effected by the packing being double, an inner packing throttling the steam in the stuffing-box, so that instead of the outer packing having to withstand the full cylinder pressure, it has only the wire-drawn steam in the stuffing-box between the two packings to contend with.

In addition to the reduced friction, the wearing parts are much larger than is usually the case. It is stated that this packing has for a test been run for six months on an engine doing hard work, without any other lubrication than there is in the steam, and that it was in perfect order at the end of that time, the rods showing no sign of wear.

'Lion' Metallic Packing.

(James Walker & Co. Ltd.)

Fig. 7 (page 1601) shows the Block type of this packing. The packing is made in folds and not in layers, the fabric being taken and folded up on itself, so that the steam getting between these folds causes it to expand both to the rod and the box. This was the original type made by Messrs. James Walker & Co. Ltd., and it is still largely used.

Fig. 8 shows a more recent type of packing. This 'Lion' Expanding packing is made on an expanding principle, and in this instance, instead of the pressure acting upon the folds of cloth, there is a V recess in the top of the packing, into which the pressure finds its way and causes an expansion to the rod and the box.

It will be seen that with either of these types of packing, when there is no pressure there is no friction, and when the pressure is on, the friction is reduced to the smallest minimum on account of the internal pressure alone being required to ensure tightness, no pressure from an external gland being necessary. Both the above types of packing are used for steam purposes, and the expanding type for hydraulic work.

Fig. 9 shows a set of Block packing in section, and fig. 10 a set of the Expanding type in section.

The Automatic type of 'Lion' packing shown n fig. 11 is used principally for hydraulic work. The recess is made on the face of the packing, an arrangement which, it is claimed, is unlike any other type. The action of the Automatic packing is practically the same as that in a ram leather, and the pressure getting at the back of the lip causes it to swell out to the ram of the accumulator or pump.

Fig. 12 shows a set of packing in section; between each turn of packing there is a recess, and the pressure getting into these recesses is baffled. The Automatic packing will stand a test pressure of over 4,000 lbs. per sq. in.

One very important feature with regard to these packings is that a metallic wearing face is formed by the introduction of white metal studs or pins, in order to form in a stuffing-box the same principle of a white metal bearing that is obtained in an ordinary bearing; that is to say, there is a white metal lateral bearing. The studs are so placed that they touch the rod at all points, thus securing a complete metallic wearing surface which reduces friction, does away with the scoring of the rod, and lengthens the life of the packing.

Fig. 13 shows a new type of packing recently introduced and sold under the name of 'Lion' Two-Lip Packing. It will be observed that this packing has a lip on both back and front

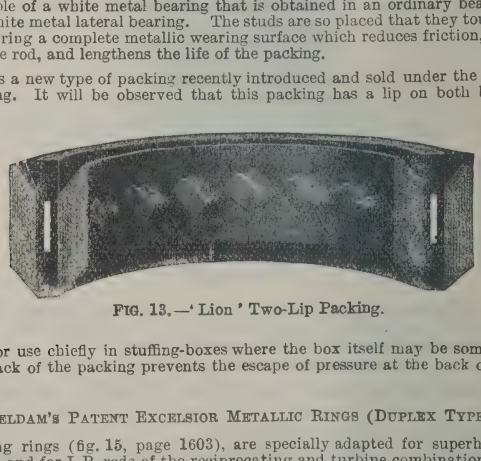


Fig. 13.—'Lion' Two-Lip Packing.

It is intended for use chiefly in stuffing-boxes where the box itself may be somewhat worn, and the lip at the back of the packing prevents the escape of pressure at the back of gland.

Beldam's Patent Excelsior Metallic Rings (Duplex Type).

These packing rings (fig. 15, page 1603), are specially adapted for superheat, the highest steam pressures, and for L P. rods of the reciprocating and turbine combination engines.

This packing has been designed in order that the pressure of steam through the neck bushes of the cylinders shall be gradually counterbalanced and cushioned by the pressure of the receivers.

With this system the rings are maintained in equilibrium, thereby preventing any undue wear, the rod being subjected to a minimum of friction.

All the rings are self-adjusting and interchangeable.

Fig. 15 shows the rings as fitted to high-pressure rods working at a pressure of 220 lbs.

'LION' METALLIC PACKING.
(James Walker & Co. Ltd.)

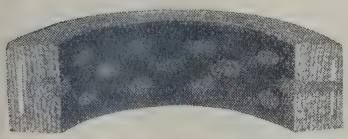


FIG. 7.—'Lion' Block Packing for Steam.

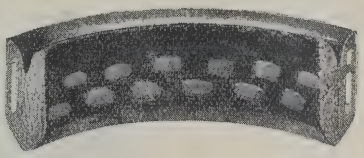


FIG. 8.—'Lion' Expanding Packing for Steam.

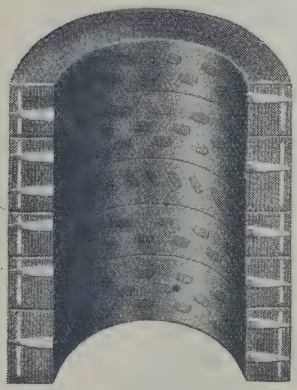


FIG. 9.—Set of 'Lion' Block Packing (in Section).



FIG. 10.—Set of 'Lion' Expanding Packing (in Section).

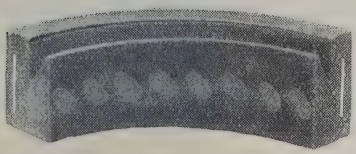


FIG. 11.—'Lion' Automatic Packing for Pumps and Hydraulic Work.

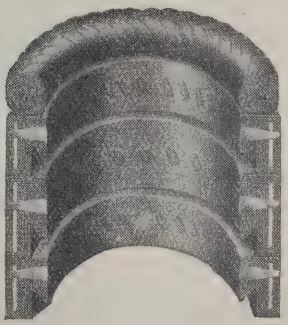


FIG. 12.—Set of 'Lion' Automatic Packing (in Section).

BELDAM'S PATENT 'V' PILOT PACKING (FOR HIGHEST STEAM PRESSURES).

This packing is constructed from a flexible white metal bar, pure asbestos, and high quality steam resisting rubber.

This packing ensures an entirely metallic bearing surface on the rod on the slightest pressure of the gland.

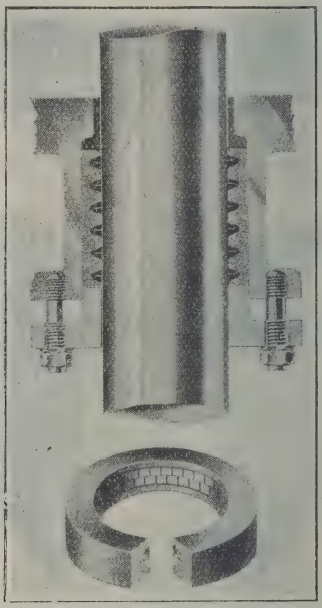


FIG. 14.—Beldam's 'V' Pilot Packing.

Although fig. 14 apparently shows two bars of metal, in reality there is only one bar, which is so constructed that when formed into the 'V' shape the slots on the face are staggered, thus preventing any possibility of the steam escaping down the rod.

These slots also serve a useful purpose in holding oil, thus ensuring the rod being well lubricated.

Rods will not be scored, but, on the contrary, will be kept in perfect condition by using this type of packing, which will be found very strong and pliable, and easily bent round the smallest rod.

Under steam this packing expands so much that the gland nuts require to be only finger tight, and the gland should enter the stuffing box the depth of one turn of packing to allow for slackening back of gland nuts.

'V' Pilot Packing is specially designed to stand the highest pressures, and is in use in a number of steamers, etc., working at 220 lbs. pressure.

For ammonia, low pressure steam, pumps, winches and hydraulics, it is manufactured from stout canvas in place of asbestos, and has been proved to be an excellent packing.

Packing Lubricants.

'GLANDOLINE.'

This composition (*Sterns Ltd.*) is an acidless packing paste for packings and piston rods of engines, steam hammers, hot and cold water pumps, hydraulic machinery, etc.; by its employment the frequent oiling of rods and the use of tallow is rendered unnecessary. It is claimed that the consumption of the composition in practice is extremely small, being but one-twentieth of that in the case where tallow is used. Packings are made by impregnating cotton, hemp, asbestos, linen, canvas, or other material with 'Glandoline.'

BELDAM'S PATENT EXCELSIOR METALLIC RINGS.
(DUPLEX TYPE.)

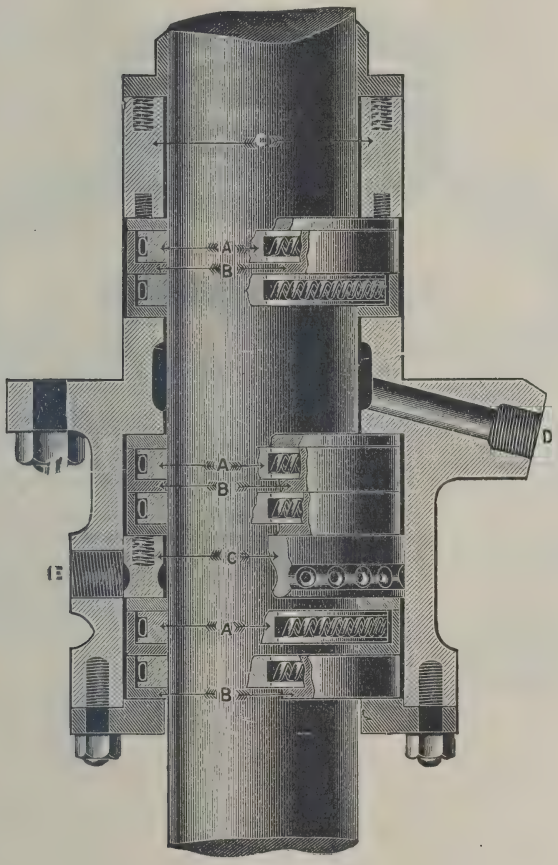


FIG. 15.

A.—Excelsior Metallic Ring.
B.—Floating Container Box.
C.—Spring Loaded Distance Piece.
D.—Pipe to I.P. Receiver.
E.—Pipe to L.P. Receiver.

PISTONS.

The Rowan Patent Piston.

In the Rowan patent piston (*John Hind & Sons, Ltd.*) absolute steam tightness and absence of friction are obtained by the use of three separate springs, one contained within each packing-ring for outward expansion, and the third lying between the two rings and keeping them in close contact with the piston flanges. These springs are so arranged as to give a *predetermined pressure*

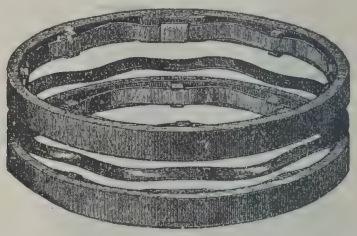


Fig. 16.




Fig. 17.

against the sides of the cylinder, which pressure is not increased (as in other types) by screwing down the junk-ring. It is stated that the cylinders in which these pistons are employed do not wear wide at the ends, but remain parallel and in perfect condition. By recent patented modifications, the Rowan piston has been rendered suitable for use in high-speed engines now employed for the generation of electricity. Fig. 16 shows the form of these rings for use with solid piston heads (fig. 17).

Nut-Lock Plate.

Fig. 18 shows a lock plate used to hold on the follower plate nuts of a steam engine piston. The circular ring, or plate A, is $\frac{3}{8}$ in. plate steel; the holes are drilled for the studs or bolts and a slot cut on the outside edge to within $\frac{1}{4}$ in. of each hole, as shown at B. The lock plate

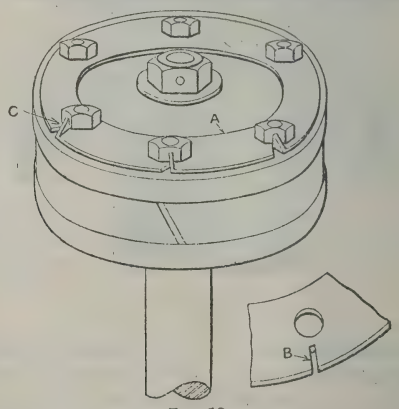


Fig. 18.

is put on and the nuts all set up tight; then with a cold chisel the tab is bent up against the flat of the nut side, as shown at C. (*Machinery.*).

THE 'ROWAN' PISTON-RINGS

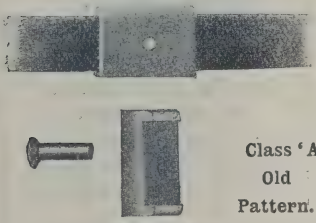
ARE MADE ONLY BY

JOHN HIND & SONS, Ltd.

75 Gt. George's St., Belfast, IRELAND.




All packings now supplied by us are fitted with our New Patent Combined Sleeves and Knuckles, which render it impossible for the knuckles to become detached from the springs. The advantages of this improvement are manifest from the illustrations given below.



Class 'A.' Old Pattern.

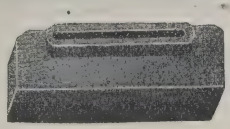In three parts: Sleeve, Knuckle and Rivet



Class 'A.' New Pattern

Knuckle and Sleeve in one piece.

The Packings are made in three Types, specially designed to suit the varying conditions of pressure, speed and superheat under which they have to work, particulars of which will be supplied by the makers on application.

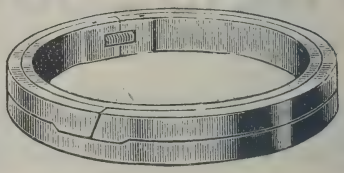
The 'ROWAN' Packing is the only one that can be fitted to solid pistons of all sizes, and in Fuel, Repairs and Renewals, the most economical in the market

Telegrams: 'PISTONS,' Manchester. Telephone: 794-795 Pendleton.

'THE LANCASTER' (R.T.M.) SUPER-LIMIT PISTON RINGS.

No loose parts.


Adjustment readily accomplished.



No tongue pieces required.

Specially designed to meet the increased pressures and speeds now obtained.

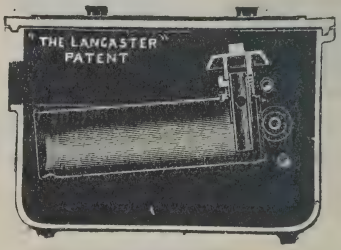
STEAM TRAPS



Have a world wide reputation for Reliability, Durability and Economy.

Supplied to all the leading Engineers and Manufacturers.

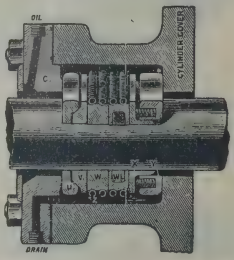METALLIC PACKINGS



For Piston Rods and Valve Spindles.

Suitable for all Pressures, Speeds and Superheats.

FIRST ORDERS ALWAYS 'ON APPROVAL.'

MACHINE MOULDED WHEELS A SPECIALITY.

LANCASTER & TONGE Ltd.
PENDLETON, MANCHESTER.

SLIDE VALVE GEAR.

(Revised by W. C. Popplewell, M.Sc., A.M.Inst.C.E.)

The movements of an ordinary eccentric driven slide valve are shown by A, fig. 19. S and S_1 are ports leading from the steam chest to the back and front of the piston respectively; E is the port leading to exhaust. The valve itself is shown sliding on the port face. As shown by A, the valve is in mid-position; *ef* is the outside lap, and *gh* the inside lap. As the valve is moved upwards by the eccentric, it reaches a position B where *e* has come opposite *b*, and the steam port S_1 is opening to the steam chest; the amount by which the valve is open at the beginning of the piston stroke is the 'lead.' In position C the steam port is fully open; the valve then returns to D, thus shutting off the supply of steam to the cylinder. This point is 'cut off.' The movement continues until *h* reaches *c*, as at E, when communication is effected between S_1 and E. This point is called 'exhaust.' After opening S_1 fully to exhaust, the valve returns to F, where the exhaust is closed and the point 'compression' reached. This completes the cycle for one end of the valve.

The movements of slide and other eccentric driven valves are analysed by such diagrams as the 'Valve Ellipse' (II, fig. 20), 'Zeuner's Valve Diagram' (fig. 21), and several others designed for the same use. Of these the Valve Ellipse can be made to take account of obliquity of both connecting rod and valve rod, and so yield accurate results. Zeuner's Diagram makes no allowance for obliquity, and in consequence is only approximately accurate, but for purposes of design, where existing data are not available, the Zeuner is the more useful, as it enables the principal dimensions to be approximately fixed. In such a case final adjustments may be completed by using the Valve Ellipse.

Valve Ellipse.

To set this out, begin by drawing the crank circle as at I, fig. 20, and dividing it into a number of equal angles (in this case 8), the crank-pin points being 0, 1, 2, 3, 4, 5, 6, 7. Take the connecting-rod length $1, 1_1$, and set it off successively from the crank-pin positions, marking off points on the stroke line $0_1, 1_1, 2_1, 3_1, 4_1$. These are positions of the piston corresponding to 0, 1, 2, 3, 4, of the crank-pin, and are seen at II. A similar construction is followed out for the eccentric circle at III (fig. 21). This is turned through a right angle as compared with I, and the 'angle of advance' is marked 0°. The distances of the valve from its mid-position, corresponding to the successive positions of the piston, are shown below the eccentric circle. These are set up as ordinates from the horizontal points on II, and a smooth curve drawn through the points so found. Thus from 1_1 on the line of piston travel at II is plotted an ordinate which represents the distance of the valve from its central position when the piston is at 1_1; this is the distance from ZZ to the line marked 1 at III. Next draw a horizontal line at distance *l* above $0_1, 4_1$, in II, this is the 'lap' line; also a second line at a distance *p* beyond the lap line, which is the 'port opening.' Similarly below $0_1, 4_1$ are two further lines at l_1, 'inside lap,' and p_1, 'exhaust opening.' The points where the ellipse cuts these lines represent the chief incidents in the cycle. They are B (admission), where the valve is just opening to steam; C (full port); D (cut-off); E (release); F (compression).

In the case of the back plate of a gear of the Meyer type, separate ellipses must be drawn for the edge of the plate, and the points where these cut the main ellipse noted.

(W. C. Popplewell.)

Zeuner Diagram.

A few of the principal cases are given in what follows. The results are not strictly accurate, because they are vitiated by the angularity of the eccentric rod. But with reasonable proportions a design will be sufficiently near what the diagram shows. Fuller information may be found in Zeuner's treatise, or in the small book of Cowling Welch, who reduced Zeuner's methods to practice.

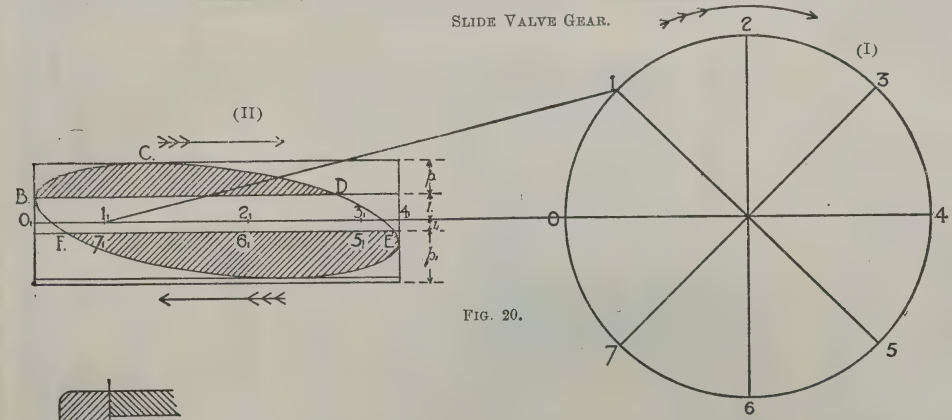


FIG. 20.

FIG. 21.

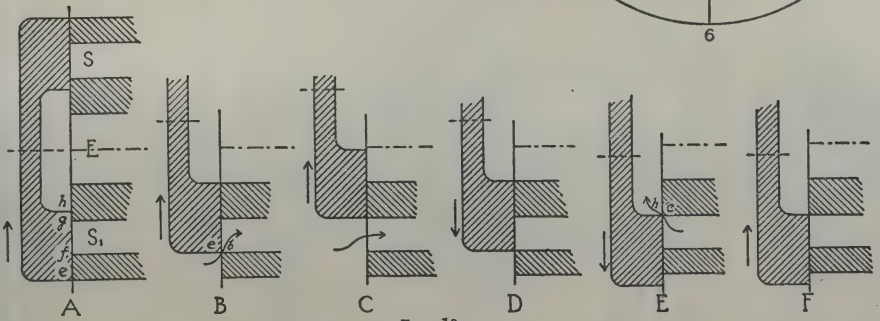


FIG. 19.

Reversing gears which do not employ two eccentrics usually derive motion from some point on the connecting rod. Such are the Joy gear and others, for all of which special advantages are claimed under certain conditions, though as valve movements it is doubtful if any give better results than plain link gears. The newer motions often involve considerable sliding movement of a block in an inclined link, this link being pivoted so as to reverse its inclination, whereby the valve, driven by the block which slides up and down in the inclined link, has its movement reversed or varied according to the degree of inclination either way of the link. Such valve movements are best studied by the aid of models, with variable dimensions; made from flat bars of cedar or baywood.

SIMPLE SLIDE VALVE.

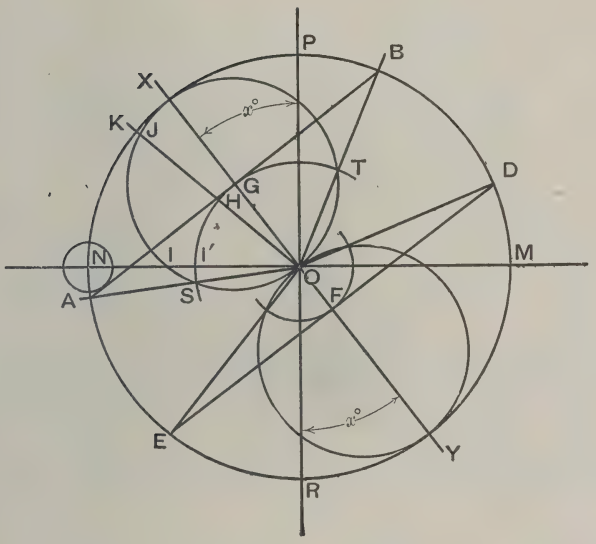


FIG. 22.

Fig. 22 shows Zeuner's diagram of slide valve motions, simple case.

Draw NM and PR at right angles; NM=piston stroke.

OP = OR = valve travel each side of centre point; OA = crank when steam is admitted; OB = crank at cut-off.

Bisect AB. Join OX, OY perpendicular to AB.

X° + 90°=angular advance of eccentric; SGT=outside lap circle: cuts 'valve' circle at ST; OS=position of valve from centre when admitting steam; OT=position of valve from centre when cutting off steam; OF=inside lap; OD=crank when exhaust commences; OE=crank when exhaust closes.

The intercena of any radius from O, cut off by valve circles, shows distance of valve from its midstroke for that crank angle. Thus when crank is at OK valve has moved a distance OJ from its centre and steam port is open a width HJ.

DY = YE. AX = BX. Lead = small circle N = 2 I.I'.

Double Back-Plate Cut-off.

Figs. 23 and 24 show Zeuner's expansion valve diagram, Meyer valve.

Draw AB, XY at right angles, OD at angular advance $\phi°$ = half travel of main valve OR = crank at admission : ON = lap circle. Draw OP slightly in advance of latest opening of main valve as shown by point *t*. This gives a minimum cover *ts*. Join PD, and draw OE parallel to it and DE parallel to OP. Then OE = half travel and position of the cut-off eccentric which will

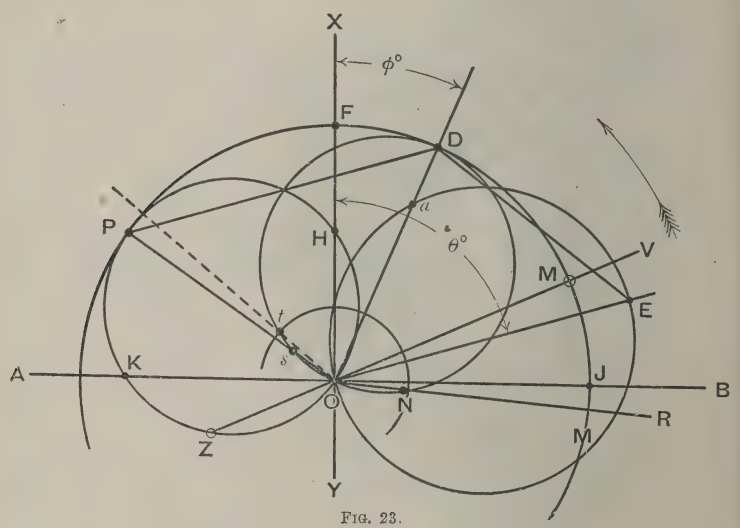


Fig. 23.

cut off steam when the crank, OR, reaches the position OP. It need not cut off later than this, for then the main valve has already acted.

The radius Oα or any other vector of the cut-off valve circle shows the movement of the cut-off valve from its middle position, OE being the half throw of the cut-off eccentric, and $\theta°$ its angular advance. Any radius vector of the auxiliary circle OP will show the relative displacements of the main and cut-off valves from each other. At the crank position OP the cut-off plates are drawn close together. Draw the large circle APDM through P. Then for any position OV of desired cut-off the length of the cut-off valve must be increased by separating the two cut-off plates of the right and left screw to the amount MZ. To cut off at OX of the crank would demand the movement FH, while to cut off at the dead point OB the movement of the plates would be JK. The length over the steam ports in the back of the main valve will be equal to the sum of the length of the cut-off plates plus twice OP. The edges of the cut-off plates when fully extended have a maximum distance from the main valve centre of JK (or MZ if OM is the earliest desired cut-off). But at no moment must the inside edges of the cut-off plates uncover the inside edges of the ports in the main valve. These ports have a width *a*. At the latest cut-off, viz. at OP, the cut-off plates will be drawn together so that x=nil.

To find movement of cut-off plates from centre for any point of cut-off, as with crank at OV, the plates must be screwed out a distance x = MZ. If cut-off is at OF position of crank, then x = FH.

Taking the position of earliest cut off at OV, to find the proportions L and l of valves which will be a maximum :—

Calling FE $= y = \mathrm{L} - l - x$ for earliest cut-off, the maximum relative movement of the valve centres by the eccentrics is OP. Since at the position OV the valve centres are the opposite way removed from cut-off by the amount OZ and that OP is the maximum relative movement, we have $\mathrm{L} - l = \mathrm{OP}$ when x=nil and x must be OP+OZ = MZ for earliest cut-off. When the crank reaches OP the cut-off valve is moved out already a distance $x = \mathrm{MZ}$ and it is moved a further distance OP by the eccentric, so that the outer edge of the cut-off plate is a distance OP+OP+OZ from the middle of the main valve. And when so far the inner edge of the cut-off plate must not overrun the inner edge of the back port a. Therefore $\mathrm{L}-a=2\mathrm{OP}+\mathrm{OZ}$ $\therefore$ $\mathrm{L}=\mathrm{OP}+\mathrm{OP}+\mathrm{OZ}+a$ and $\mathrm{L}-l=\mathrm{OP}$ $\therefore$ $l=\mathrm{OP}+\mathrm{OZ}+a$. Since the main valve has cut-off at the position Ot there is safety lap of ts on the main port below even if the inner edge of the cut-off plate then reaches the port a.

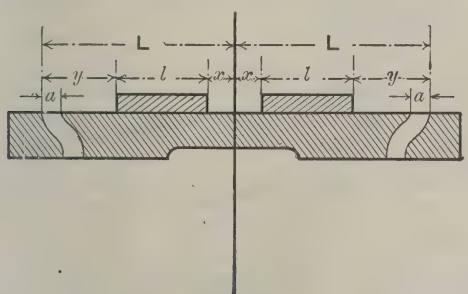


FIG. 24.

In the figure the main valve travels 4¼ ins. and the cut-off valve 5¼ ins. The cut-off plates are each moved out by screws at earliest cut-off $x=3\frac{1}{4}$ ins., and by eccentric movement 2¼ ins. relative to main valve, or a total of 5½ ins. The main valve has a length $\mathrm{L}=5\frac{1}{2}+a$ and the cut-off plate (or $\mathrm{L}-\mathrm{OP}=l$) a length of 3¼ ins. $+ a$.

If $a=1$ in. then L=6¾ ins. ; $l=4\frac{1}{4}$; $x=2\frac{1}{4}$ ins. maximum plus 3¼ screw-out.

If early cut-off is desired in the general working of the engine with quick action the auxiliary circle OP should be near to 90° from the cut-off position of the crank. Thus at the position OD the two valves are moving at high relative speed. It is usual to give the greater travel to the cut-off valve.

LOCOMOTIVE LINK MOTIONS.

These may be investigated also by the Zeuner method. A link motion is simply built up with two eccentrics, either of which may be made to bear fully and directly on the valve spindle and cause an engine to run forwards or backwards. This is accomplished by connecting the two eccentric rods by a link in which the end of the valve spindle is carried. At the extreme end position the spindle is wholly driven by one eccentric, while at intermediate positions the two eccentrics combine to give a gradually shorter movement to the valve.

There are three general link gears. 'Stephenson's,' in which the link is raised or lowered to give the desired position of the spindle block or link block ; and the link is concave to the axle and has a radius equal to the length of the eccentric rods.

'Gooch's,' with link convex to the axle and not movable up and down ; movement of the block being effected by a radius rod and the link having this radius of curvature.

'Allen's,' in which the link is straight and both link and radius rod are raised and lowered in opposite directions.

All three forms are made with open or crossed rods, the former giving greater lead of the valve near the middle position of the link block, and the latter giving less lead towards the middle position. In Gooch's motion the lead is of course always constant.

STEPHENSON LINK MOTION.

Open Rod Design.

In fig. 25, AE=link, BD=link block in forward and backward gear. OJ=virtual single eccentrics to give requisite travel to B or D in full gear. Join OB, cutting valve circle on OJ at K. Join JM through K. Then the arc struck from *c* through JMJ will contain the ends of all the eccentric radii or valve circle diameters for all positions of the slider B or D. Dividing this arc in the same ratio as B divides the link AE will give the ends of the valve circles for each point of the link. And the real eccentrics will have the position and half travel OF, OF just as the ends of the link lie beyond B and D. If the link end-pin comes opposite the extreme

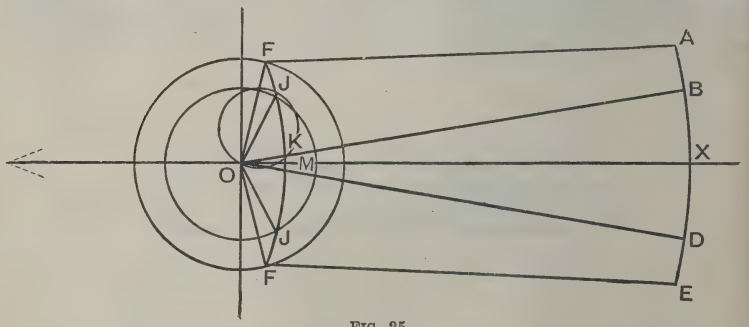


FIG. 25.

positions BD of the block then OJ become the real eccentrics in position and in half throw, i.e. XB : XA : : MJ : MF. Rods are said to be *open* when they are as FA, FE when the eccentric arms point towards the link. With open rods the valve lead increases with the expansion.

Crossed Rod Design.

In fig. 26, AE=link. BD=link block in full forward or backward gear. OJ=virtual single eccentric that would give requisite valve travel in full gear. Join OD, cutting upper valve circle on OJ at L. Join JN through L. N is on the line OX. Then the arc struck from C through JNJ contains the ends of all the valve circles for every position of the slide block, the arc JNJ being divided for each diameter in the same ratio as the slide block divides the link AE.

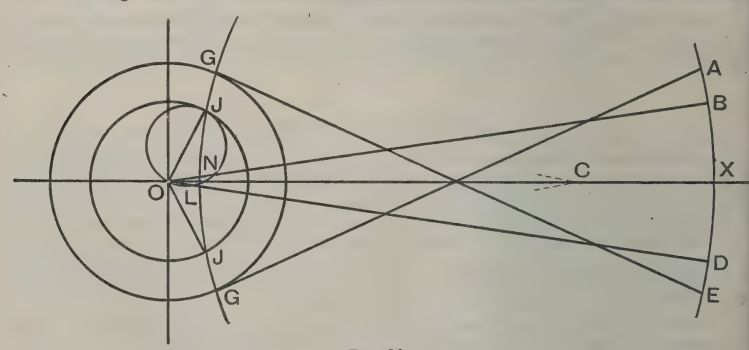


FIG. 26.

Thus OG, OG become the actual eccentric arms, and NJ : NG : : XB : XA. Rods are said to be *crossed* when they are as GA, GE, the eccentric arms pointing towards the link. With crossed rods the lead of the valve decreases with increased expansion. Specially note that OD cutting the valve circle at L is employed in this construction, whereas OB is the line used in the open-rod diagram.

GOOCH'S LINK MOTION.

In this motion, fig. 27, the 'curve' of valve circle centres is a straight line aa distant from O an amount $f = \frac{r}{2}\left(\sin\delta^\circ + \frac{c}{l}\cos\delta^\circ\right)$ for the open rod design, and $\frac{r}{2}\left(\sin\delta^\circ - \frac{c}{l}\cos\delta^\circ\right)$ for the crossed rod design, where

r = eccentricity of eccentric or OE;

m is the point from which the link is hung and is a fixed point;

the versed sine of the link arc is $\frac{c^2}{2l_1}$;

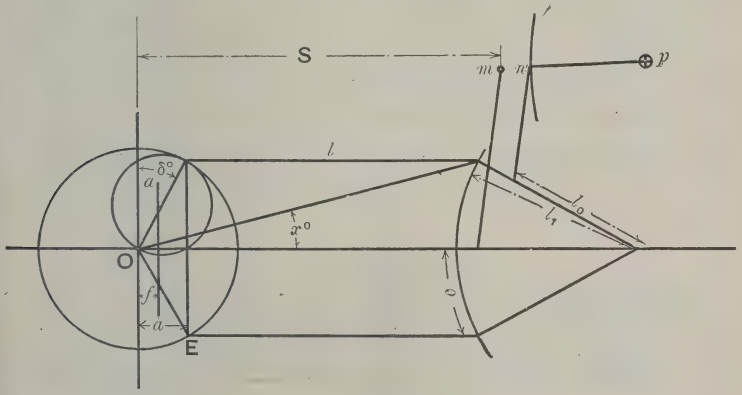


FIG. 27.

m is distant from O a length $S = -\frac{c^2}{2l_1}$;

n is the point from which the radius rod is hung;

$On = l + l_1 - l_0 - \frac{c^2(l+l_1)}{2ll_1}$.

The point n should move in a parabola whose parameter $= 2l_1$ or a circular arc of radius l_1.

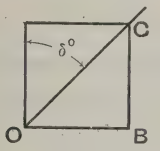


FIG. 28.

The co-ordinates of any point on the curve of centres are as per fig. 28, where

for open rods, $OB = \frac{r}{2}\left(\sin\delta^\circ + \frac{c}{l}\cos\delta^\circ\right)$;

for crossed rods, $OB = \frac{r}{2}\left(\sin\delta^\circ - \frac{c}{l}\cos\delta^\circ\right)$.

$BC = \frac{r}{2c}\frac{u}{}\left(\cos\delta^\circ \pm \frac{c}{l}\cos\delta^\circ\right)$, according as the rods are open for $-$ or crossed for $+$ signs, where c = half length of the link and u = the variable position distance of the slider block from the middle of the link.

The lead is constant at all grades of expansion. The link is so hung that its middle point moves to and fro horizontally by the combined effect of the arc of swing and the cant due to slope of the link, the suspension link being pinned at the centre of the chord of the link.

The radius rod l_o is so hung that its to-and-fro motion produces a minimum of sliding of the link block in the link. The extreme positions of n being known the actual arc in which it moves is arranged in practice with a shorter arm np than theory demands, the best compromise possible being accepted which can be arranged under the conditions. The Gooch gear, for any given distance between axle and cylinder, has very short rods compared with the Stephenson gear. Also the angle δ° in fig. 28 is equal to the angle δ° as found in fig. 22, p. 1607, for the simple slide valve, plus the angle x° in fig. 27, p. 1611.

ALLEN'S STRAIGHT LINK MOTION.

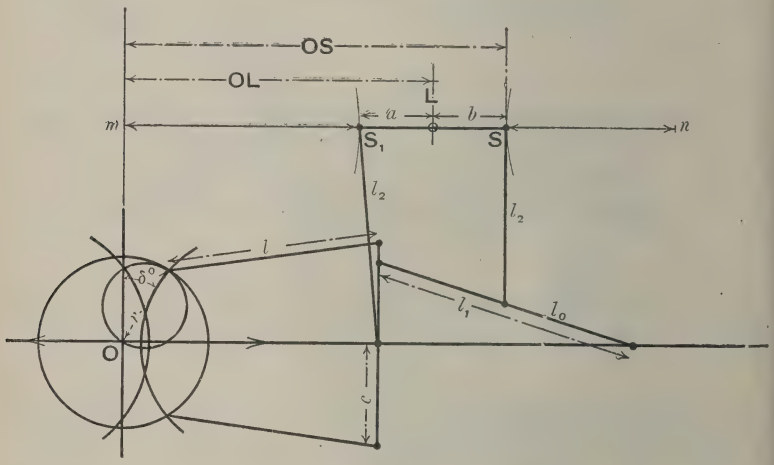


FIG. 29.

$$\frac{b}{a} = \frac{l_o}{l}\left(1 + \sqrt{1 + \frac{l}{l_1}}\right); \; n = 1 + \left(\frac{l_1}{l_o}\,\frac{b}{a}\right).$$

Curve of centres is a parabola whose vertex is distant from $O = \frac{r}{2}\left(\sin\delta + \frac{c}{l}\cos\delta\right)$ for open rods, and $\frac{r}{2}\left(\sin\delta - \frac{c}{l}\cos\delta\right)$ for crossed rods, and is concave towards O for open rods, and convex for crossed rods. Parameter for both open and cross rods $= \frac{nlr}{2c\cos\delta}\cos\delta \mp \left(\frac{c(n-1)}{nl}\sin\delta\right)^2$ for which a circular arc may be substituted of one half the parameter.

S and S_1 should move in parabolas of $2l_1$ and $2l$, or in arcs of l_1 and l radius.

As arranged in practice $a + b = (l_1 - l_o) +$ a little extra l_2 as long as possible.

$$Os_1 = \left(l - \frac{c^2}{2l}\right); \; OL = l + a - \frac{c^2}{2}; \; ms_1 = l; \; ns = l_1; \; Os = l + l_1 - l_o - \frac{c^2(l + l_1)}{2l\,l_1}.$$

Lead increases with expansion with open rods and decreases with crossed rods.

WALSCHAERT GEAR.

(See page 593.)

STEAM CONDENSERS.

(1.)

(Frank Foster, M.Sc.)

Jet condensers are preferred to surface if the cooling water is fit for boiler feed or if a suitable boiler feed, other than the condensed steam, is available.

Jet condenser capacity to be about half the volume of the low-pressure cylinder or cylinders.

Surface condenser cooling surface may be based on 6 lbs. of steam per square foot of surface. Ten pounds is sometimes adopted, but is too severe unless the temperature of the cooling water is low, say 60°F., or less. For tropical countries the lower rate of condensation should be taken and even less when very hot condensing water is anticipated.

Air pumps are usually single-acting, and low-pressure engine cylinders double-acting. On this basis for ordinary bucket pumps the piston displacement of the low-pressure cylinder is about 6·5 times that of the pump for jet condensing compound engines in this country and 5·5 times for India and hot tropical climates. For surface condensers this air pump ratio varies from 10 to 12, the lower figure for the smaller and less efficient engines.

Air pumps of the Edwards type usually have about 75 or 80 per cent. as much capacity as the ordinary pumps.

It is tacitly assumed that the vacuum aimed at is about 26 ins., and that considerably greater capacity is necessary for higher vacua.

Air pump bucket speeds rarely exceed 200 ft. per minute unless the buckets are of the solid plunger type. A usual value is 180 ft. per minute.

(2.)

Quantity of Cooling Water.

Let T_3 = temperature of steam at inlet, corresponding to the vacuum; H_3 = sensible heat at inlet; T_4 = temperature of the condensed water at outlet; H_4 = sensible heat of the condensed water at outlet; T_1 = temperature of cooling water at inlet to condenser; T_2 = temperature of cooling water at outlet of condenser; L = latent heat in B.Th.U. per lb. of steam; W = steam weight; Q = water weight; R = ratio of water and steam quantity; x = dryness fraction; then

Heat (in B.Th.U.) given up by exhaust steam = $W\{xL + (H_3 - H_4)\}$.

Heat (in B.Th.U.) gained by cooling water = $Q(T_2 - T_1)$.

In practice H_3—H_4 may be neglected, therefore

$$WxL = Q(T_2 - T_1), \quad \text{and,} \quad \frac{Q}{W} = R = \frac{x\,L}{T_2 - T_1}.$$

To allow a small margin, x—which generally varies between 0·8 and 1·0—can be neglected, and as L only varies slightly with the vacuum, it is generally assumed to be a constant for all vacua at 1,050 B.Th.U.'s per lb. of steam. Therefore the general equation for all vacua can be taken as

$$R = \frac{Q}{W} = \frac{1050}{T_2 - T_1}.$$

For surface plants, T_2—T_1 ranges from 8° to 20° F., and for jet plants, 4° to 8° F.

Condenser Efficiency may be expressed as the ratio of the vacuum at the condenser inlet to the vacuum corresponding to the outlet cooling water temperature, thus

$$\text{Condenser efficiency} = \frac{P_3}{P_2} \times 100;$$

where P_2 = vacuum corresponding to the outlet cooling water temperature (see page 1614).
P_3 = vacuum (referred to a 30-in. baro.) at the condenser inlet flange.

Vacuum Efficiency may be expressed as the ratio of the vacuum at the condenser inlet to vacuum corresponding to the temperature of the condensed steam, thus

$$\text{Vacuum efficiency} = \frac{P_3}{P_4} \times 100;$$

where P_4 = vacuum corresponding to the condensed steam temperature (see page 1614).

In jet condensers $T_2 = T_4$, therefore the vacuum and condenser efficiencies are the same.

The condenser efficiency is entirely dependent on the design of the condenser, while the vacuum efficiency is dependent both upon the design of the condenser and air pump.

It is important that the condensed steam should be at as high a temperature as possible, since this water is usually returned to the boilers, therefore it is essential that all the heat possible should be recovered.*

PROPERTIES OF SATURATED STEAM.

Per Increment of Vacuum reduced to 30 ins. Baro.

Inches of Vacuum.	Absolute Pressure Lbs. per Sq. In.	Temp. °F.	Spec. Vol. Cub. Ft. per Lb.	Inches of Vacuum.	Absolute Pressure Lbs. per Sq. In.	Temp. °F.	Spec. Vol. Cub. Ft. per Lb.
0	14·69	212	26·79	25	2·45	133·8	143·5
1	14·20	210·3	27·64	25·2	2·35	132·1	149
2	13·71	208·5	28·54	25·4	2·25	130·5	155
3	13·22	206·7	29·52	25·5	2·21	129·8	158·5
4	12·73	204·9	30·61	25·6	2·16	128·9	161·5
5	12·24	202·9	31·75	25·8	2·06	127·2	169
6	11·75	201	32·95	26	1·96	125·3	177
7	11·26	198·9	34·37	26·1	1·91	124·4	181
8	10·77	196·8	35·80	26·2	1·86	123·4	185·5
9	10·29	194·6	37·35	26·3	1·81	122·4	190
10	9·80	192·3	39·1	26·4	1·76	121·4	195·5
10·5	9·56	191·1	40	26·5	1·71	120·4	200·5
11	9·31	189·9	41	26·6	1·67	119·6	206
11·5	9·07	188·7	42	26·7	1·62	118·4	212
12	8·82	187·4	43·15	26·8	1·57	117·3	218·5
12·5	8·58	186·1	44·25	26·9	1·52	116·2	225
13	8·33	184·8	45·5	27	1·47	115·1	232
13·5	8·09	183·4	46·8	27·1	1·42	113·9	239·5
14	7·84	182	48·2	27·2	1·37	112·6	247
14·5	7·60	180·6	49·6	27·3	1·32	111·3	255
15	7·35	179·1	51·2	27·4	1·27	110	265
15·5	7·11	177·6	52·8	27·5	1·23	108·7	276
16	6·86	176·1	54·6	27·6	1·18	107·3	286
16·5	6·62	174·4	56·4	27·7	1·13	105·8	298
17	6·37	172·8	58·3	27·8	1·08	104·3	310
17·5	6·13	171·1	60·5	27·9	1·03	102·7	324
18	5·88	169·3	63	28	0·98	101·1	339
18·5	5·64	167·4	65·5	28·1	0·93	99·4	356
19	5·39	165·5	68·4	28·2	0·88	97·6	374
19·5	5·15	163·5	71·4	28·3	0·83	95·7	395
20	4·90	161·4	74·7	28·4	0·79	93·8	418
20·5	4·66	159·3	78·4	28·5	0·74	91·7	444
21	4·41	157	82·5	28·6	0·69	89·5	474
21·5	4·17	154·7	86·9	28·7	0·64	87·1	508
22	3·92	152·2	92·1	28·8	0·59	84·6	548
22·5	3·68	149·6	97·7	28·9	0·54	81·9	597
23	3·43	146·8	104·3	29	0·49	79	653
23·5	3·19	143·9	112	29·1	0·44	75·8	721
24	2·94	140·7	121	29·2	0·39	72	806
24·5	2·70	137·4	131	29·3	0·34	68	913
24·6	2·65	136·7	133·5	29·4	0·29	63	1060
24·8	2·55	135·2	138·3	29·5	0·25	59	1230

Degree of Vacuum.—The maximum vacuum obtainable is dependent upon the inlet circulating water temperature. For engine work 26 ins. to 27 ins. is the maximum vacuum desirable, owing to the limitations in size of the low-pressure cylinder and ports, etc. For turbine work high vacua are necessary. The most economical vacuum depends upon individual installations

* Every 8°–10° Fahr. difference in the hot-well temperature means approximately 1 per cent. difference in fuel consumption. The gain obtained with an increase in hot-well temperature can be calculated as follows :—

$$\text{Percentage gain in B.Th.Us.} = \left(\frac{100\,T}{H_T + T - T_4 + 32}\right) \times \frac{100}{B_P}$$

where T = difference in hot-well temperature (F.°); T_4 = final hot-well temperature (F.°); H_T = total heat of steam at boiler pressure (B.Th.Us. per lb.), reckoned from 32° F.; B_P = percentage boiler efficiency.

and is generally decided by the power required to be expended by pumping the cooling water, price of coal, available water supply, etc.

For general purposes the following may be taken under average conditions as being the maximum commercial vacua.

Temp. of inlet water, F.°	55	60	65	70	75	80	85
Vacuum in ins. (baro. 30 ins.)	28·8	28·6	28·5	28·3	28·0	27·8	27·5

Air enters the condenser in the following manner :—

1. With the steam entering from the boiler having been dissolved in the feed water ; this is usually a small amount in the nature of 1 to 3 per cent. of the total volume of feed water.

2. Air leakage from the atmosphere through the glands of the prime mover or other sources : this cannot easily be measured, and an allowance has to be made accordingly to cover contingencies.

3. In jet condensers air in solution with the cooling water which is released when in the vacuum space ; this varies from 1 to 5 per cent. of the total volume of water.

Due to air contained in the cooling water in the case of a jet condenser, a much larger air pump is required than for a surface plant of similar duty.

For turbine work to cover cases (1) and (2) it is usual to allow for 6 to 8, and, in the case of low-pressure turbines, up to 11 lbs. of air per 10,000 lbs. of steam.

For engines, about two or three times this amount is required according to the type of engine.

These figures are for one unit only ; if two or more turbines or engines exhaust to the one condenser an extra margin of 10 or 15 per cent. per extra turbine or engine, respectively, should be allowed.

(See also page 779.)

Surface Condensers.

Cooling water should be arranged to pass through the tubes and steam to flow over the tubes. It is usual to divide the tube element in two, three, or four passes according to the design of the plant, the passes being arranged so that the hottest water meets the hottest steam.

The rate at which the heat contained in the steam is transmitted through the tubes to the cooling medium is mainly dependent on :—

(1) The mean temp. diff. between steam and cooling water.
(2) „ water velocity through the tubes.
(3) The steam velocity over the tubes.
(4) „ size and condition of tubes.
(5) „ presence of air in the condenser.

The transmission rate and velocities should be arranged such that the steam condensed per square foot of cooling surface should not be more than 8 to 10 lbs. for average vacuum and cooling water conditions, or 5 to 6 lbs. for high vacuum with a high temperature of cooling water.

While the rate of heat transmission slightly increases as the tube diameter decreases, too small a diameter of tube should be avoided owing to the higher water frictional head caused in the condenser by their use. The generally adopted standard for condenser tubes for land work is $\frac{3}{4}$ in. external diameter by 18 S.W.G. thick.

Fig. 30 shows the head lost in friction per 10 foot of tube element for $\frac{5}{8}$ in., $\frac{3}{4}$ in., and 1 in. external diam. by 18 S.W.G. smooth brass tubes. For application it is necessary to take the total length of the tube element (the length of the tubes multiplied by the number of water passes) and add the 'loss at entry (including loss at exit also) per pass,' values for which are given on the bottom curve.

Large spaces should be allowed between the tubes at the condenser inlet to obtain a good flow of steam into the heart of the condenser. The steam flow should always be as direct as possible, changing the direction of flow should be avoided, and to ensure an evenly distributed flow over the top of the tubes a dome should be formed on the top of the condenser body.

Tube Plates.

These are usually of rolled brass alloy of copper 62 per cent., zinc 37 per cent. and tin 1 per cent., and are generally made of a thickness equal to tube diameter + 0·25 in.

Tubes.

These are of solid drawn brass alloy, of copper 67 per cent., zinc 32 per cent., tin 1 per cent., or where salt or corrosive water is used, of Admiralty mixture alloy, of copper 70 per cent., zinc 29 per cent. tin 1 per cent. For tube-plates the proportions of copper and zinc,

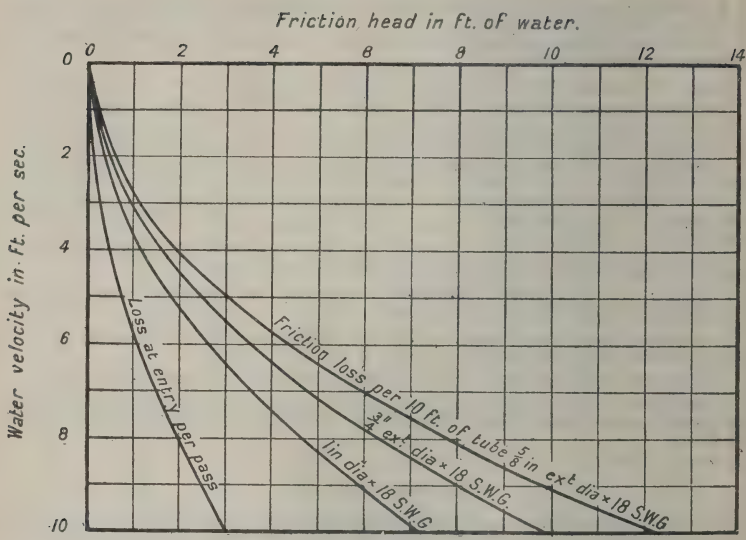


FIG. 30.

are altered, the former being reduced to 62 per cent. and the latter increased to 37 per cent., while tin remains the same. A still better tube to use where corrosion is liable to occur is copper of 99·5 per cent. purity, but the initial cost of these is often found prohibitive. Tinned tubes should be avoided, since unless the tinning is absolutely perfect, serious pitting is liable to occur. The Admiralty practice is to adopt untinned tubes of the alloy referred to.

The unsupported length of tubes should not exceed 100 times the diameter, and where the length of the condenser exceeds this dimension, tube-supporting plates should be fixed. The tubes should be secured in the tube plates by tape packing and ferrules, the latter having an internal lip to prevent 'creeping' of the tubes.

The pitch of the tubes should be such that they will allow sufficient area for the flow of steam without an excessive pressure drop through the condenser. The number of tubes which can be fixed in a square foot of plate can be obtained as follows :—

$$N = \frac{166}{p^2};$$ where N = number of tubes per sq. ft. of plate ; p = pitch of tubes in ins.

TUBE PACKING.

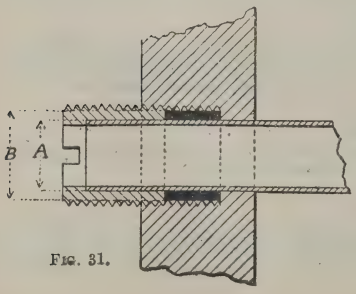


FIG. 31.

'Compressed Asbestos Fibre Tube Gromets,' fig. 31 (*Turner Brothers Asbestos Co. Ltd., Rochdale*), are an entirely new device. The Gromets are essentially for packing the tube ends of surface condensers, feed-water heaters, etc.; they are a sliding fit between the tube and the tube plate, making a perfectly tight joint with a few turns of the screw, after which no 'following up' is necessary.

When ordering, the dimensions at 'A' (the outside diameter of tube) and at 'B' (the apex of thread in socket), together with the length of Gromet required, should be given ; the necessary clearance is allowed for in manufacture.

Air-Pump.

The essential feature of a plant having a high vacuum efficiency is an air pump capable of operating without cooling the condensed steam. Excepting in small plants where the heat loss is not so appreciable, all surface condensers should be arranged with two pumps working on the vacuum side, i.e. an air-pump capable of dealing with all the air entering the condenser and a water-pump capable of dealing with all the condensed steam. This is what is known as a 'dry system.' Cases where only one pump is employed for the combined duty are known as a 'wet' system. In order to cut down the size of the air-pump in the latter system to reasonable proportions, the condensed steam is usually cooled by means of the last few rows of tubes in the condenser being arranged so that they are always flooded, or by an intercooler. This of course impairs the vacuum efficiency of the plant.

(See also page 1623.)

Capacity of Air-Pump in order to Remove given Amount of Air.

The diagram (fig. 32, p. 1618) shows the properties of mixtures of air and steam such as exist at the air-pump suction. Thus, if the temperature is 100° F., and the vacuum 26 ins., the volume of 1 lb. of air (together with the associated vapour) is 204 cub. ft. and the weight of air per lb. of steam is 1·75, i.e. 204 cub. ft. of the mixture contains 1 lb. of air and 0·57 lb. vapour.

The scale on the right provides a basis for calculating the air-pump capacity if the air leakage and the temperature and vacuum are known. For example, assume a surface condenser installation for a reciprocating engine in which allowance is to be made for 16 lbs. air per 10,000 lbs. steam, vacuum 27 ins., temperature at air-pump suction 100° F. From the right-hand scale the volume of air per lb. of condensate, measured at the conditions of the air-pump suction, is 0·395 cub. ft. for an air proportion of 10 lbs. per 10,000 lbs. steam. Thus in the present case the volume is $0{\cdot}395 \times \frac{16}{10} = 0{\cdot}63$ cub. ft. per lb. steam.

If the steam condensed is 15,000 lbs. per hour, the *effective* capacity of the 'dry' air-pump will then be $\frac{15{,}000}{60} \times 0{\cdot}63 = 157$ cub. ft. per minute.

For a 'wet' air-pump the volume of the condensate must be added. The actual capacity of the pump must be greater than the capacity thus found, on account of losses of volumetric efficiency due to clearance, slip, leakage, and valve or port resistance.

The diagram shows the reduction in volume due to cooling of the air-steam mixture before it passes to the air-pump.

In a jet condensing plant the air introduced by the injection water must also be allowed for.

Circulating Pump.

The pump for delivering the required water quantity to the condenser is nearly always of the centrifugal type. The head against which this pump has to deliver is made up of the static difference in water levels between the inlet and discharge points, plus the pipe and condenser friction. In cases where water is drawn from and returned to a river or canal, the discharge pipe end can be sealed, thus forming a closed or syphon system. In arranging syphon systems care should be taken to ensure that the highest point in the system is never above a vertical distance of 25 ft. from the water level, otherwise the air contained in solution with the water is liable to be released and accumulate, thus breaking the syphon and throwing extra head on the pump.

Jet Condensers.

Where the cooling water contains a large amount of foreign matter liable to choke the tube of a surface condenser, or is of such a nature that it would cause corrosion, a jet plant is the best proposition to instal. It is a cheaper plant as regards initial cost than the surface condenser but requires more power for operation. With low-level jet plants it is necessary that the cooling water should be drawn in by virtue of the vacuum, and an efficient vacuum breaker be fitted whereby in the event of the pumps connected to the condenser suddenly shutting down, the vacuum will be broken, thus stopping the flow of the injection water.

DIAGRAM SHOWING THE PROPERTIES OF MIXTURES OF AIR AND STEAM, SUCH AS EXIST AT THE AIR PUMP SUCTION.

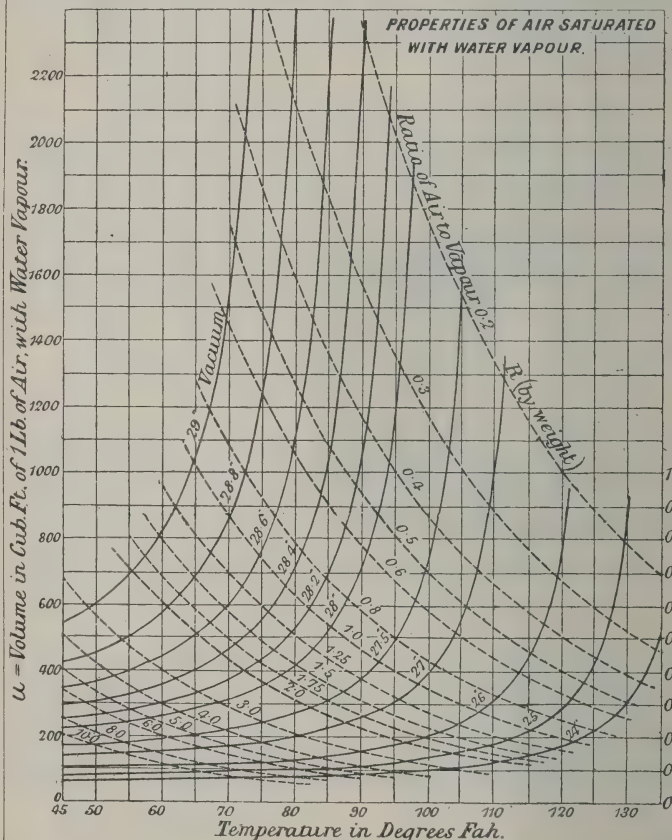


FIG. 32.

The mixture of cooling water and condensed steam is withdrawn at the bottom of the condenser, and the air is taken off near the top. Separate air and water pumps should always be installed in the case of this type of condenser. In the barometric or elevated type of jet condenser no water extraction pump is required, as the condenser being fixed at the barometric height is self-draining. Usually, however, an injection pump is required to lift the water partly up to the condenser, as the vacuum can be utilised to a certain extent for drawing the water into the condenser the same as in the low-level plant. These condensers are more expensive than the low-level type, and, due to a long exhaust pipe being necessary, require to maintain a slightly higher vacuum for an equivalent exhaust pressure at the turbine or engine exhaust flange.

STEAM CONDENSERS.—*continued.*

(3.)

(*W. H. Booth.*)

The vacuum in a condenser ought to maintain itself an hour with a drop of only 2 lbs.

The smallest air-pump found practicable by Mr. R. W. Allen had 0·5 cub. ft. of displacement per pound of steam condensed.

With circulation water at 65° to 70° F. a vacuum of 28½ ins. at full load with a single-stage air-pump can be maintained without special accessories. It is not advisable to allow less than 0·75 cubic ft. of air-pump volume per 1 lb. of steam condensed, and it ought to be possible to maintain a 98½ per cent. vacuum.

In a surface condenser the cooling water usually passes twice through, first through the lower part and then through the upper set of tubes.

Tube plates are made of rolled brass alloy of copper 62, zinc 37, tin 1 per cent., and are 1 in. to 1½ in. thick. Tubes are of brass ⅝ in. diameter and 0·048 in. thick (18 S.W.G.). They are secured into the plates by screwed ferrules with tape packing. Ferrules should allow a space for free movement of the tube ends.

Mr. Allen uses a short overflow pipe upstanding in the condenser so as to keep immersed the lower tubes which serve to cool the water going to the air-pump and so improve the vacuum. Tube surface is allowed at the rate of $\frac{1}{8}$ to $\frac{1}{10}$ sq. ft. per lb. of steam condensed per hour with circulation water entering at 65° F. Above that temperature the area allowed is ⅛ to ⅕.

The openings to a condenser should be large to allow for a slow velocity of entering steam. The tubes are more widely spaced at the top so as to give free admission for the steam among the tubes. It is specially undesirable to place a nearly continuous wall of tubes in the path of the steam. The tubes are heated and expel the steam molecules which do not find their way to the colder tubes below.

According to Stanton, in a condenser of a given surface for maximum efficiency, the tube length should be as great as possible. As regards tube diameter he says that condensers will be equally efficient in which the ratio $\frac{l^{n-1}}{d} = \text{constant}$, where l = length in feet, n = number of tubes, d = diameter of tube in feet external. Tube diameters should be chosen which offer the least aggregate resistance to flow. Resistance is, he finds, proportional to $l^{4\cdot2n}$, and is therefore least when the tubes are the smallest practical diameter. He considers the best position for tubes is vertical and the water movement downward.

The surface of a condenser should not fall much, if anything, short of 1 sq. ft. per 10 lbs. of steam hourly condensed. The modern tendency in condenser construction is to provide a more open way for steam to reach the heart of the tube bundles and to provide division plates to catch and drain away the water formed in several sections thus divided off, so that the condensed water shall not fall upon the whole mass of tubes but shall be led away, more nearly as formed to the bottom without touching any tube surfaces. Turbulent flow is given by such devices as the Rowe indented tube or by spiral strips of thin metal inserted in tubes to produce a rotary movement or mixing effect, so that pools of water with cold centres may not pass through the tubes. But tubes must not be too much obstructed, or the work of circulating the water through them will be increased.

The 'Weir-Uniflux' Condenser and Dual Air-Pump.

This arrangement is a new type of surface condenser introduced by *Messrs. G. & J. Weir Ltd., Cathcart, Glasgow*, based on a series of researches on heat transmission. The condenser secures the passage of steam over every part of each tube at uniform velocity, in practically a direct line from the exhaust inlet to the vapour and air outlet. There are no baffle plates or partitions to interfere with the steam flow. Owing to the high velocity of the circulating water, and the improved transmission rate per unit of surface, the Weir Uniflux Condenser is, duty for duty, claimed to be smaller and lighter than other types. The combination of these advantages with the special shape of the condenser make it specially adapted for use on board ship, while its high efficiency makes it specially suitable for turbine installations.

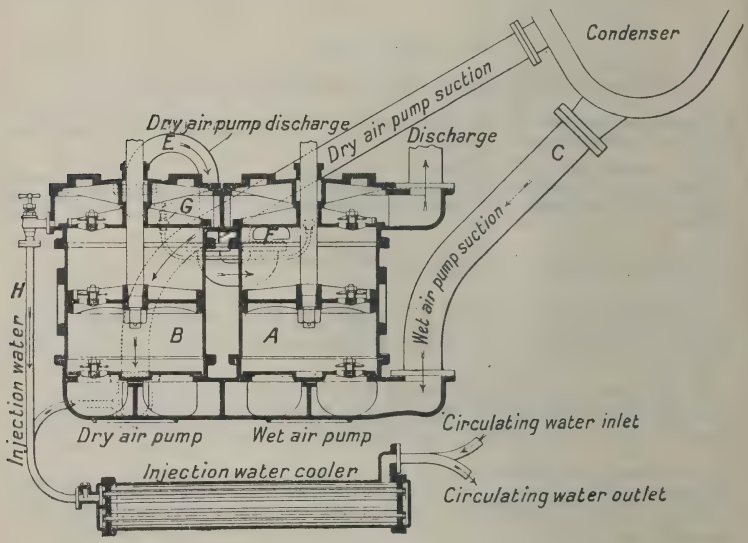


Fig. 33.

In conjunction with the Weir Dual Air-Pump, the Weir Uniflux Condenser enables the condensed water to be discharged at approximately the vacuum temperature if no air leakage exists, and at the minimum temperature loss under leakage conditions. The accumulation of scale on the tubes is minimised by the removal of the conditions favourable to scale deposition. The condenser is simple and free from fittings and complications requiring attention and adjustment.

The duty of an air-pump is to take from the condenser a mixture of air, water, and vapour, and to obtain economical working this should be done at the highest possible temperature. If a single pump is used to handle this mixture, the hotwell temperature for a given vacuum is dependent on the amount of air leakage and the air-pump capacity. Consequently, with a single air-pump the temperature of the mixture must be to a considerable degree colder than the theoretical temperature due to the vacuum.

By the use, however, of separate pumps handling the air and water, the dry pump having a cold injection non-returnable to the feed, the above conditions are changed, and higher thermal efficiency is rendered possible,

This method enables the wet (or water) pump to handle water at approximately the steam temperature, while at the same time the dry pump will deal with the air and vapour at the volume and temperature conditions imposed by the temperature of the injection water.

With the Dual Pump the above advantages are obtained, together with increased efficiency of the dry pump, due to its contents being densified or decreased in volume through cooling by the injection water, which circulates continuously, never leaves the system, and is never subjected to atmospheric pressure with consequent aeration. The dry air pump further works only at less than half the pressure range, as it discharges below the head valves of the wet pump. The apparatus, moreover, is compact, self-contained, and of good mechanical design.

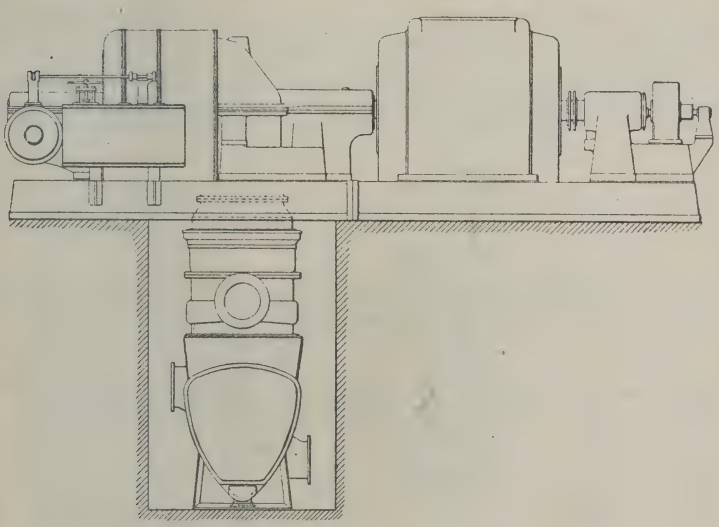


FIG. 34.—The Weir-Uniflux Condenser.

Fig. 33 shows in a diagrammatic form the arrangement of the Uniflux Surface Condenser Dual Air Pump, and Injection Water Cooler. In all cases the pump A, or wet pump, is situated below the steam cylinder, as this pump is the only one which works under any considerable load; the dry pump B is driven by the beam and links in the usual manner. A connection, C, is led from the condenser to the wet pump, and a separate branch pipe, D, is taken from a point higher up the condenser and led to the dry pump. Both pumps are generally of the three-valve marine type, but in certain cases the dry pump may be of the suction valveless type.

The first and most important difference from an ordinary twin pump consists in the dry pump discharging through the return pipe E, through a spring-loaded valve F into the wet pump at a point below its head valves. The next point concerns the supply of water to the dry pump for water sealing, clearance filling, cooling, and vapour condensing. When starting the pump the filling valve G must be opened for a minute or so to enable the vacuum to draw in a supply from the hotwell of the wet pump. The valve is then closed, and the water passes from the hotwell of the dry pump by the pipe H to the annular cooler, and after being cooled passes into the suction of the dry pump, then passing through the pump it becomes heated and again passes to the cooler, and so on in a continuous closed circuit, any excess passing over the pipe E to the wet pump. The spring-loaded valve F is adjusted to maintain about 20 ins. vacuum in the dry pump hotwell when the condenser is working at 28 ins. vacuum, and this 8 ins. difference of pressure is sufficient to cause the water to overcome the cooler friction and pass into the suction, and at the same time never allow any direct air connection between the dry suction and discharge.

Since its introduction in 1908, the Weir-Uniflux Condenser has been adopted by H.M. and by sixteen other Governments, and by the leading mail and passenger steamship lines. The ' Weir-Uniflux ' Condenser has now been fitted to approximately twelve millions h.p. Fig. 34 shows one of five sets of ' Weir-Uniflux ' condensing plant supplied to the Clyde Valley Electrical Power Company for their Motherwell and Yoker Power Stations to work in conjunction with 5,000 kw.. turbo-generators of the British Westinghouse Rateau type. The condenser has a capacity of 80,000 lbs. of steam per hour, and a cooling surface of 6,000 sq. ft. The air-pump takes only 12½ h.p. when the turbine is running full or on overload, and no trouble is experienced in maintaining a 96 to 96½ per cent. vacuum. The results actually obtained are stated to have shown a saving of 30 per cent. in the fuel consumption at the Motherwell Power House.

(See also Section XXXIII.)

The Ejector Condenser.

This condenser is at once an air-pump and a condenser. It acts on the principle that steam will flow into a vacuum at a velocity of many hundred feet per second. The water supply to the ejector should flow to it under a head of several feet. The steam condenses in the jet of water, and the combined jet has a velocity which is a mean of the velocity of the steam and of the

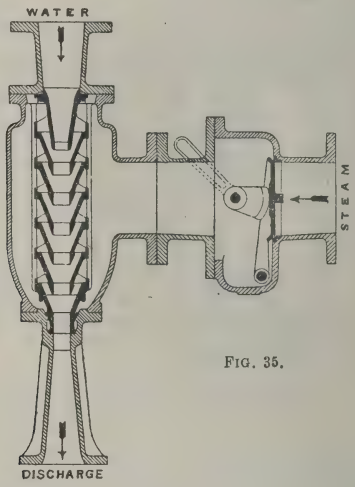


Fig. 35.

water. Thus let the water approach at a velocity 30 feet per second and the steam at 1,200 feet per second. Let the combined jet be assumed to have a temperature of 100° F. and the water to be supplied at 60° F. The water gains 40° F. The steam loses say 1,100 B.Th.U. Then $1,100 \div 40 = 27$ = ratio of water weight to weight of steam. The total weight of combined jet is 28. The velocity difference is $1,200 - 30 = 1,170$, to be divided over a mass of 28, or $\frac{1,170}{28} = 42$ feet per second nearly. Add the initial velocity of the water 30, and the final velocity is 72 feet per second. This corresponds with a head of $H = (72 \div 8)^2 = 81$ feet; and since 1 foot of water column equals 0·43 pounds, 83 feet will represent 36 pounds nearly. Since a perfect vacuum is only 14·7 pounds, it follows that with ordinary ratios of water and steam an efficiency of less than 50 per cent. should give an excellent vacuum.

The apparatus (fig. 35) consists of a converging water nozzle into which water is directed from a centrifugal pump or other pressure source, or from an overhead source of 15 to 20 feet head. This jet flows downwards through a series of steam cones to which the exhaust steam has admission at their upper wide portion. The steam flows down each of these short cones and imparts further velocity to the jet as it condenses, and finally the jet flows into a divergent

CROSBY LOCKWOOD & SON'S PUBLICATIONS.

BOILERS, ECONOMISERS AND SUPERHEATERS: THEIR HEATING POWER AND EFFICIENCY. By ROBERT H. SMITH, Assoc.M.I.C.E., M.I.M.E., M.I.E.E., Em. Prof. of Engineering. 128 pages, with Illustrations. Demy 8vo, cloth. 9*s.* net.

MODERN STEAM BOILERS: THE LANCASHIRE BOILER. A Practical Manual for Owners and Users of Lancashire Boilers. By W. D. WANSBROUGH, Author of 'The A.B.C. of Differential Calculus,' 'The Portable Steam Engine.' 168 pp. with 117 Illustrations. Demy 8vo. 6*s.* net.

LIQUID FUELS FOR INTERNAL COMBUSTION ENGINES. A Manual for Engineers, Designers, Chemists, etc. By H. MOORE, M.Sc. Tech., F.C.S., etc. About 200 pp., with numerous Illustrations. Demy 8vo, cloth. 15*s.* net.

STEAM BOILER CONSTRUCTION. A Practical Handbook for Engineers, Boiler Makers, and Steam Users. By W. S. HUTTON. Fifth Edition. Revised and Enlarged. 680 pages, 500 Illustrations. Medium 8vo. 21*s.* net.

THE APPLICATION OF HIGHLY SUPERHEATED STEAM TO LOCOMOTIVES. Being a Reprint from a series of Articles appearing in *The Engineer*. By ROBERT GARBE, Privy Councillor, Prussian State Railways. Edited by LESLIE S. ROBERTSON, M.Inst.C.E., etc. Medium 8vo. 9*s.* net.

THE PRACTICAL ENGINEER'S HANDBOOK. A Treatise on Modern Engines and Boilers, Marine, Locomotive, and Stationary. By W. S. HUTTON, Seventh Edition. Revised and Enlarged. Medium 8vo. 560 pages, 420 Illustrations. 21*s.* net.

TABLES, MEMORANDA, AND CALCULATED RESULTS FOR MECHANICS, ENGINEERS, ARCHITECTS, BUILDERS, SURVEYORS, etc. Selected and arranged by FRANCIS SMITH. Seventh Edition, revised, including ELECTRICAL TABLES AND FORMULÆ. 280 pages, waistcoat-pocket size. *New edition in preparation.*

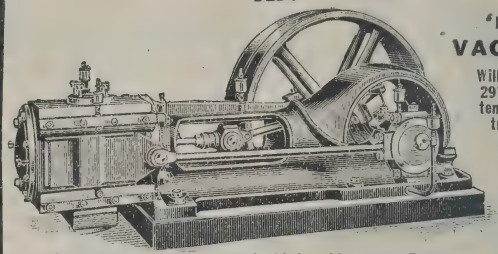
STEAM ENGINEERING IN THEORY AND PRACTICE. By GARDNER D. HISCOX, M.E. With Chapters on Electrical Engineering by NEWTON HARRISON, E.E. 450 pages, 400 Illustrations. Medium 8vo. 21*s.* net.

STEAM ENGINE INDICATORS AND VALVE GEARS. By L. V. LUDY, Professor of Steam and Gas Engineering, University of Wisconsin. 180 pp., 150 Illustrations. 6*s.* 6*d.* net.

MECHANICAL HANDLING AND STORING OF MATERIAL. A Treatise on the Handling and Storing of Material such as Coal, Ore, Timber, etc., by Automatic or Semi-Automatic Machinery, together with the Various Accessories used in the Manipulation of such Plant, and dealing fully with the Handling, Storing, and Warehousing of Grain and Coal. By G. F. ZIMMER, A.M.Inst.C.E. 750 pp., royal 8vo, cloth, with over 1,000 Illustrations (including Folding Plates) specially prepared for the Work. 50*s.* net.

LONDON: CROSBY LOCKWOOD & SON,
7 Stationers' Hall Court, Ludgate Hill, E.C. 4.

BAILEY'S PUMPS
AND VALVES



Patent Belt-driven Slide Valve Vacuum Pump.

'K' PATENT 'DRY'
VACUUM PUMPS

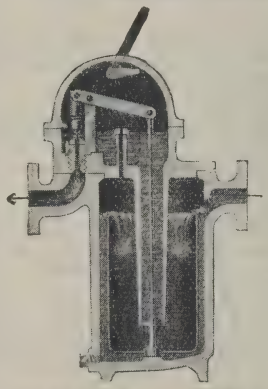
Will maintain a vacuum of over 29·8 ins. of mercury at normal temperature and with a Barometric pressure of 30 ins.

Remarkable for high Efficiency.

No delicate parts to wearout.

SIMPLE AND COMPOUND.

Steam, Belt, or Electric Driven




BAILEY'S VACUUM PUMPS are particularly suitable to work as Air Pumps for Condensers for Steam Engines, Central Condensation Plants, Cooling Towers, Condensers for Evaporating Plants, Vacuum Drying Plants, Distillers, etc.

BAILEY'S
'SCAVENGER' STEAM TRAPS
FOR PRESSURES TO 200 LBS.

LARGE CAPACITY, HAND BLOW-THROUGH WORKS WITHOUT ADJUSTMENT AT ANY PRESSURE. WORKING PARTS EASILY EXAMINED WITHOUT BREAKING PIPE JOINTS.

'POP' ACTION, NO DRIBBLING. RENEWABLE VALVE AND SEAT.

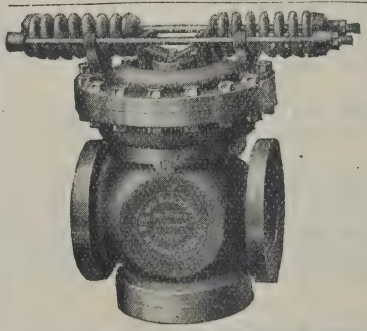SAVES TIME IN 'STARTING UP' AS LONG PIPES CAN BE QUICKLY DISCHARGED OF COLD AIR AND WATER.



BAILEY'S CLASS 'W'
'FULL BORE'
REDUCING VALVE
FOSTER'S PATENT.

FOR SATURATED AND SUPER-HEATED STEAM PRESSURE REGULATION.

MAINTAINS CONSTANT DELIVERY PRESSURE IRRESPECTIVE OF VOLUME DEMANDED.

MOST SENSITIVE, DURABLE, AND EFFICIENT OF ALL REDUCING VALVES.

MADE IN ALL SIZES ½ in. to 24 ins.

MANUFACTURERS

Sir W. H. BAILEY & CO. Ltd., ALBION WORKS, SALFORD.

discharge cone at a velocity as above indicated, carrying with it any air that has come in with the steam, and discharging it. The degree of vacuum is of course that proper to the jet temperature, and the proportion of water can, as seen, be sufficiently great to admit of a moderate final jet temperature and therefore a good vacuum. The ejector condenser occupies very little space and for jet condensing is very simple. The centrifugal water supply pump is conveniently direct driven by an electric motor. While the jet final temperature is amply low for good vacua, the velocity of the combined jet is still more than sufficient to run freely against atmospheric external pressure; but it is always desirable to give the water a fair initial velocity, and there is nothing lost by giving the discharged jet a good fall in a long tail pipe.

The Barometric Condenser is a simpler form of ejector condenser, in which the water enters the head of the apparatus as a spray about the steam entrance, and the vacuum is produced by the fall of the water down a tail pipe of at least 30 feet in vertical drop. By suitable formation of the head the air which enters with the steam is entrained with the water, or, by means of a special surface condenser at the side of the head the air is drawn over cold tubes and carried down to a lower point in the draught tube, whereby it is withdrawn from the head at a minimum temperature, with the object of securing a maximum degree of vacuum.

AIR-PUMPS.

The Edwards Patent Air-Pump.

In the Edwards Patent Air-Pump, fig. 36, foot and bucket valves are entirely dispensed with. The only valves used are those which in the old type of pump are known as 'the head valves,' but which in the Edwards pump are simply called 'the valves,' as there is no need to distinguish them in any way.

The condensed steam flows continuously *by gravity* from the condenser into the base of the pump, and is there *dealt with mechanically* by the conical bucket working in connection with a base of similar shape. Upon the descent of the bucket the water is projected *silently and without shock* at a high velocity through the ports into the working barrel, as shown in fig. 37. The rising water is followed by the rising bucket, which closes the

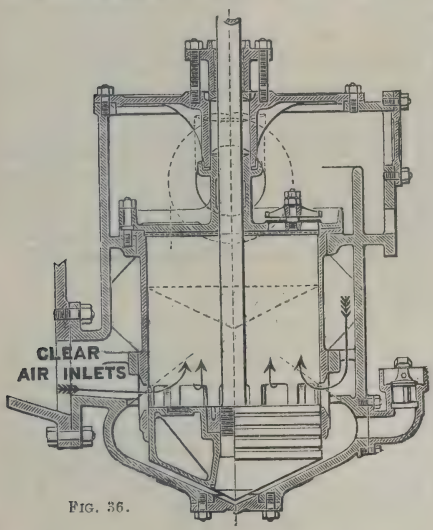


Fig. 36.

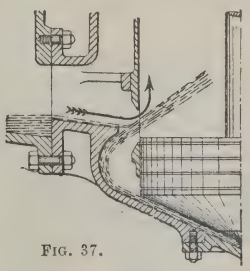


Fig. 37.

ports, and sweeping the air and water before it discharges them through the valves at the top of the barrel.

The essential feature of the Edwards pump is that the water is dealt with *mechanically*, and is in no way dependent on *pressure* in the condenser to drive it up into the pump; consequently increase of speed does not impair its efficiency. The speed of the water must correspond with the speed of the bucket, and the pump thus having a regular quantity of water to deal with at each revolution is particularly well suited to work at high speeds.

Another point of considerable importance in the design of the pump is that *clear air inlets are maintained*. As the bucket descends and the ports open there is absolutely no obstruction between the condenser and the pump. The air has a perfectly free entrance into the barrel, as

indicated by the arrow in fig. 37, while immediately afterwards the water is injected at a high velocity; thus, instead of obstructing the entrance of the air, the water tends to compress that already in the barrel, and to carry more air in with it.

Before any air pump can discharge, all the air in the barrel must be compressed to slightly in excess of the atmospheric pressure, and consequently the greater the amount of air remaining in the clearance water the more inefficient the pump becomes. By reducing the top clearance to a minimum, as is done in the Edwards pump, the efficiency is considerably increased.

By means of the door at the top of the pump the only valves used can be readily examined, cleaned, and, if necessary, renewed while the pump is at work.

The door also allows the engineer-in-charge to estimate the air duty of the pump, and after a little experience to tell whether there is any serious leakage into the system.

For marine pumps a weir is arranged between the door and the valves (see fig. 36); this enables the door to be taken off while the pump is at work, without loss of water, even when there is a heavy list on the ship.

The following table gives the dimensions of 3-throw pumps suitable for electrical and other land installations, and for dealing with the stated quantities of steam, when working in connection with *surface* condensers of the ordinary type.

SIZE, SPEEDS, AND APPROXIMATE OVER-ALL DIMENSIONS OF THREE-THROW EDWARDS AIR PUMPS WHEN WORKING IN CONNECTION WITH SURFACE CONDENSERS FOR VARIOUS AMOUNTS OF STEAM.

Lbs. of Steam per Hour.	Number of Pump Barrels.	Dia.	Str.	Revs. per Min.	Approximate Dimensions.		
					Height to Centre of Shaft.	Length without Motor.	Width.
10,000 to 12,500	3	8 ins.	8 ins.	160 to 200	5 ft. 1 in.	4 ft. 9 ins.	1 ft. 10 ins.
12,500 to 15,000	3	9 ins.	9 ins.	140 to 170	5 ft. 6 ins.	5 ft. 2 ins.	2 ft. 0 ins.
15,000 to 20,000	3	9½ ins.	9 ins.	150 to 200	5 ft. 6 ins.	5 ft. 2 ins.	2 ft. 0 ins.
20,000 to 25,000	3	10 ins.	10 ins.	160 to 200	6 ft. 0 ins.	5 ft. 4 ins.	2 ft. 1 in.
25,000 to 30,000	3	11 ins.	11 ins.	150 to 180	6 ft. 6 ins.	5 ft. 6 ins.	2 ft. 3 ins.
30,000 to 35,000	3	12 ins.	12 ins.	140 to 165	6 ft. 10 ins.	6 ft. 0 ins.	2 ft. 3 ins.
35,000 to 40,000	3	13 ins.	12 ins.	140 to 160	6 ft. 10 ins.	6 ft. 6 ins.	2 ft. 5 ins.
40,000 to 45,000	3	14 ins.	12 ins.	140 to 160	6 ft. 10 ins.	7 ft. 0 ins.	2 ft. 6 ins.
45,000 to 50,000	3	14½ ins.	12 ins.	145 to 160	6 ft. 10 ins.	7 ft. 0 ins.	2 ft. 6 ins.
50,000 to 55,000	3	15 ins.	12 ins.	150 to 165	7 ft. 0 ins.	7 ft. 6 ins.	2 ft. 8 ins.
55,000 to 60,000	3	16 ins.	12 ins.	145 to 160	7 ft. 0 ins.	7 ft. 6 ins.	2 ft. 8 ins.

(*The Edwards Air-Pump Syndicate, Ltd.*)

THE LEBLANC AIR-PUMP, SIMPLE JET TYPE.

In the Leblanc Simple Jet Condenser and Air-pump, water is jetted across the exhaust pipe from the engine by means of a reversed turbine wheel which rotates in a closed casing alongside the pipe, there being an opening into the pipe at a portion of the turbine periphery. There are thus a series of flat sheets of water traversing down the vertical pipe, and serving both to condense and to draw off the steam and air. The water can be used over again if not too hot, and the pump is thus intended for use as a wet and dry air-pump. As there are quite a number of water vanes acting together and moving with great energy down the eduction pipe, there is only a small pressure difference between adjacent vanes, and there is quite a mass of water always acting. The vanes of water practically act like an extension of the metal vanes of the central fan, so that this fan is in a sense an absolute fit in the casing like a scoop wheel, and air is withdrawn between each such vane and the next following. The fan or turbine is practically a water-packed radial-bladed wheel which scoops out the air as it rotates.

THE LEBLANC ROTARY AIR-PUMP.

In the Leblanc type of Rotary Air-pump, section of which is given in fig. 38, the air from the condenser is trapped between thin sheets of water thrown out by a series of turbine vanes, which rotate at a high speed in an enclosed casing. The discharge opening in the casing uncovers a certain portion of the turbine periphery where the sealing water drawn in at centre and passing through the distributor nozzle, gets shot out in sheets from the revolving blade wheel, down the narrowing part of collecting cone discharge pipe, at a high velocity, trapping on its way a certain volume of air between the water sheets discharged.

A compact column is thus produced which passing through the throat of the converting cone into the diverging diffuser has its velocity energy transformed into work of compression, overcoming the atmospheric pressure and carrying away the gaseous products from the condenser. In

this type of pump the only moving part is the impeller or blade wheel mounted on its shaft. There are no valves or reciprocating parts, so there is little to get out of order. The pump readily lends itself to direct drive by electric or steam driven motors.

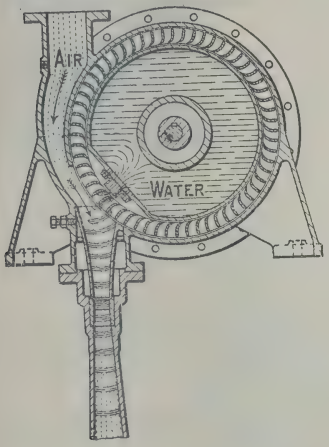


FIG. 38.

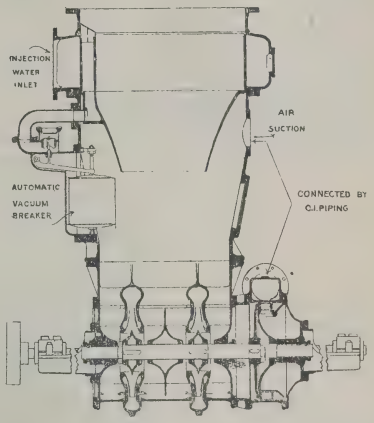


FIG. 39.

Fig. 39 shows the application of the Leblanc pump to a Multi-jet condenser. The air and incondensable gases collecting near the top of condenser are drawn off by the Leblanc Rotary Air-pump, and the injection and condensation waters are withdrawn from the bottom of condenser by special pump. The pump impellers are mounted on a common shaft and driven by one motor.

THE MIRRLEES-LEBLANC EJECTOR AIR-PUMP.

This apparatus, which is shown in fig. 40, is a steam ejector working in two stages placed in series and mounted in tandem. In the first and second stages a number of small nozzles are

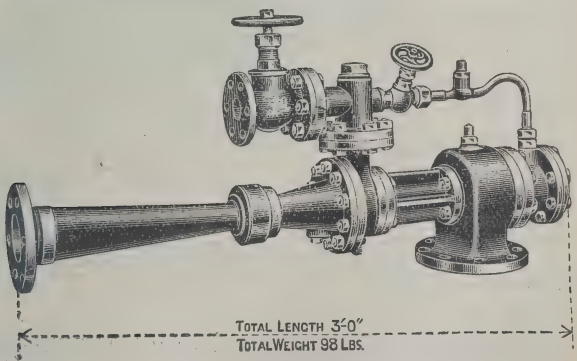


FIG. 40.

fitted, which are supplied with steam at a pressure of about 90 lbs. per square inch and upwards. The air suction from the condenser is placed on the first stage, the air being entrained by surface friction by the jets of steam issuing from the nozzles, the speed of the steam effecting compression

up to a limited degree. The compression to atmospheric pressure is completed in the second stage, which is specially designed to have a very high ratio of compression. By employing a large number of small nozzles the entraining surface of the steam is considerably increased, and therefore the efficiency of the Mirrlees 'Leblanc' Ejector is much higher than is usual with this class of apparatus.

When working on high vacuum installations, stability of the ejector is assured by means of an annular opening on the diffuser cone, and this opening may be either air or steam sealed. The centrifugal pump withdrawing the condensed steam from the condenser discharges into a small tank, and into this tank the exhaust steam from the ejector is led. By this system practically the total heat of the operating steam for the ejector is returned to the feed water, which in turn is de-aerated when passing through the filter tank. The ejector can be designed for either very high or comparatively low vacuum, and as there are no moving parts, it is extremely simple, while it has other advantages in the matter of weight and space occupied.

Condensing Plant with Hick-Breguet Ejectair.

(*Hick, Hargreaves & Co., Ltd., Bolton.*)

Modern high-vacuum apparatus is designed on one basic principle, viz. the extraction of air and water at different points, entirely independent of one another, a centrifugal pump being used for extracting the water, and a steam jet pump for extracting the air. The Hick-Breguet condensing apparatus, of the surface jet and barometric types, is fitted with pumps of the above types.

The water-extraction pump is single-stage, designed for efficient continuous running under all load variations, and is driven through a flexible coupling by an electric motor or by a steam turbine.

The 'Ejectair' air-extraction apparatus, fig. 41, is operated by two steam ejectors in series, with an intermediate condenser, giving a high degree of air-extraction combined with low steam consumption. The first ejector withdraws the air from the condenser, compressing it slightly and discharging it into the intermediate condenser, where the steam from the first ejector is condensed and the air reduced in volume, thus increasing the volumetric efficiency of the second ejector.

The water from the auxiliary condenser, along with the condensate of the first ejector, is delivered by means of a 'U' balance pipe direct to the extraction-pump suction, in this way raising the temperature of the condensate from the main condenser and conserving the heat in the first jet.

The steam from the second jet, along with the air, is discharged preferably into a surface heater, through which the discharge water from the extraction pump passes, in this way conserving the heat from the second jet and still further raising the temperature of the condensate.

A high thermal efficiency is thus obtained. At the same time the apparatus is extremely simple in construction, requiring no attention when put into service, there being no moving parts except the extraction-pump spindle.

The plant is put into operation by simply opening the steam valve to the two jets and closing the switches controlling the circulating-pump and extraction-pump motors. The amount of steam used by the jets is small, about 1 per cent. of that used by the main unit.

The surface condenser is designed to ensure the whole of the steam coming into intimate contact with the tubes, and the tubes are disposed so as to reduce to a minimum the resistance to the passage of steam. The condensate is withdrawn at as high a temperature as possible, usually that corresponding to the vacuum at the turbine exhaust, divided by 0·99. Thus, if the vacuum at the exhaust is 28·5 ins., the temperature of the condensate will be that corresponding to a vacuum of $28{\cdot}5 \div 0{\cdot}99 = 28{\cdot}78$ ins., or 85° approximately.

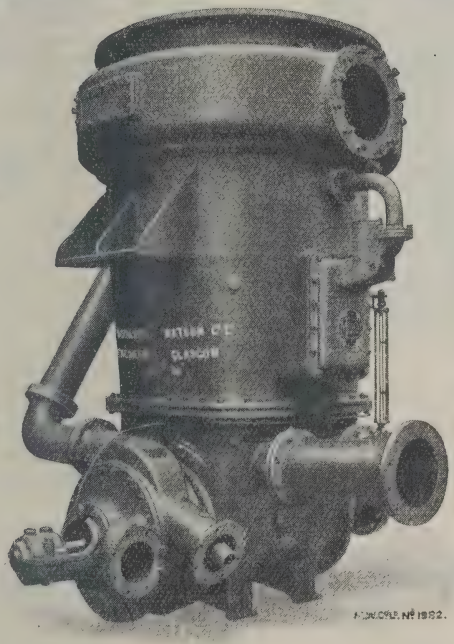
To ensure the air being withdrawn at maximum density, it is drawn through a 'devaporising' chamber, formed in the lower pass of the condenser by steel plates enclosing about 8 per cent. of the total number of condenser tubes. The reduction of volume of the air thus effected adds to the efficiency of the air-extracting apparatus.

The jet nozzles are designed for a steam pressure of usually 145 lbs. per sq. in. gauge, though they can be designed for any pressure from 70 lbs. per sq. in. upwards, and for either saturated or superheated steam.

MIRRLEES

THE

MIRRLEES JET CONDENSER



THE MOST UP-TO-DATE TYPE OBTAINABLE.

THE MIRRLEES WATSON COMPANY LTD.

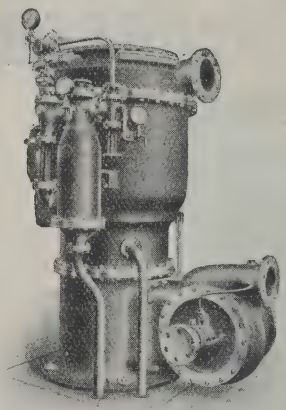
Specialists in Condensing Plant.

Head Office and Works : SCOTLAND STREET, GLASGOW.

London Office: 7 Crosvenor Gardens, S.W. 1.

P. 1626

CONDENSING PLANT



Surface and Multi-Jet. Fitted with the

HICK-BREGUET —EJECTAIR—

(*Patented*)

For high vacuum.

No reciprocating parts. Guaranteed reliability. Minimum up-keep charges. Absolute stability.

Vacuum unaffected by 20% fall in steam pressure. Patent Automatic Control ensures vacuum stability. The plant with lowest operating power.

We are specialists in the design, lay-out and manufacture of Condensing Plant for Power Installations of all sizes. The services of experienced Engineers are always available for advice in connection with new installations or improvements and additions to existing plants.

UNIFLOW DROP VALVE & CORLISS STEAM ENGINES. MILL GEARING IN ALL ITS BRANCHES.

HICK, HARGREAVES & CO. LTD.

BOLTON——————ENGLAND.

London Office:

90 TEMPLE CHAMBERS, TEMPLE AVENUE, LONDON, E.C.

The condenser inlet is usually connected to the turbine exhaust by means of a galvanised wrought-steel bellows pipe, which permits of relative expansion between turbine and condenser. The condenser may be mounted on springs and the bellows pipe dispensed with, but in this case expansion joints are required for all piping connected to the condenser.

To minimise depth of foundations the head of water required on the suction side of the extraction pump is reduced by careful design to 24 ins., measured from the pump spindle to the inside of the bottom of the condenser shell, and may in special cases be reduced to 20 ins.

The Hick-Breguet jet condenser is of multiple jet type, the number of nozzles being propor-

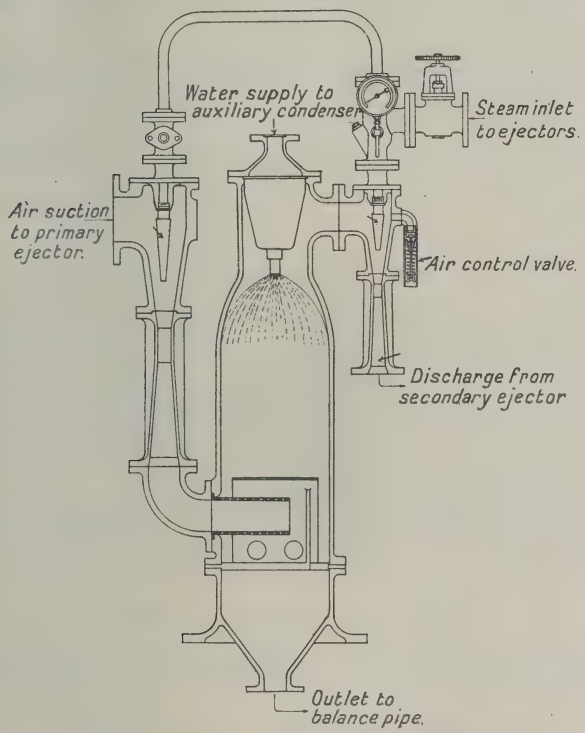


FIG. 41.—Sectional Arrangement of Hick-Breguet Ejectair.

tionate to the duty of the plant. The upper portion is designed to eliminate almost entirely resistance to the passage of the steam on to the finely divided water sprays, condensation thus being immediate and complete.

An ejectair is used as described above, but in this case the air is withdrawn from just above the surface of the water in the bottom of the condenser, and is cooled by a water jet connected to the main injection pipe, the air temperature at withdrawal being approximately that of the injection water. In this type of plant, the heat of the first jet is usually not conserved, the water from the auxiliary condenser being passed back into the main condenser, from whence it is discharged by the extraction pump to a cooling tower or pond. The loss so entailed is extremely small. The steam from the second jet may be used in a feed heater or open feed tank, as may be preferred. No lift pump is required, the extraction pump being capable of lifting the water to the usual height of a cooling tower.

THE BAILEY AIR-PUMP.

(See p. 1084.)

The Measurement of Condensed Steam.

The condensate may be measured by passing over a V-notch in a suitably arranged tank, the height of the water surface above the apex of the notch being measured at a point at such a distance from the notch that the water is nearly still.

If h is the height in inches, Q the flow in cub. ft. per minute, and the angle of the notch is 90°, then $Q = ch^2\sqrt{h}$, where c is approximately 0·305, but, more accurately, varies from 0·31 at $h = 2$ ins., to 0·301 at $h = 9$ ins. or over. Less heads than 2 ins. should not be used, it being better to increase the head by using a notch of narrower angle; the discharge is approximately proportional to the tangent of half the notch angle.

For the 90° notch the cubic feet of flow per minute $= 0{\cdot}305h^2\sqrt{h}$, where h is the depth from the water level in the still pond above the notch measured down to the point of the V.

If one notch will not pass the water, two may be used, and the reading of the instrument doubled.

THE LEA AUTOMATIC WATER RECORDER FOR STEAM ENGINES.

This instrument, made by *The Lea Recorder Co. Ltd.*, measures the discharge of the air-pump by means of a 90°, 60°, 30° or finer V notch. A float in a chamber connected to the tank-space above the notch plate rises and falls with the water. On the float-rod is a toothed rack. This turns a pinion on a drum spindle. The pencil of a recording drum is moved across the record paper, which is clock driven, by means of a spiral cut in the first-named drum. This spiral has an increasing pitch, starting at 0 when the water is down to the apex, and increasing in the ratio $h^2\sqrt{h}$; so that the pencil movement is always proportional to the volume flowing. The gravity of the water and drum approximately compensate for the expansion of the water, so that the instrument remains correct for changes of discharge temperature. By means of the recorder small changes in the régime of the engine, such as cut-off, jacket temperature, superheat temperature, vacuum, etc., are promptly shown by the record, and what are now long series tests can be made in a few minutes in rapid succession with an accuracy and certainty that cannot be secured over long periods of possible change in other conditions. The instrument is at its best when each engine has its own surface condenser, but good results can be secured with jet condensers, or even with condensers common to two or more engines, especially where general economy is sought for. A system of deductive calculation of a simple order enables this to be done.

TABLE OF FLOWS THROUGH 90° V NOTCHES.

Depth in Notch in Ins.	Flow per Hour.		Depth in Notch in Ins.	Flow per Hour.	
	Galls.	Lbs.		Galls.	Lbs.
2	654	6,540	9	27,300	273,000
3	1,785	17,850	10	35,600	356,000
4	3,640	36,400	11	45,000	450,000
5	6,350	63,500	12	56,050	560,500
6	9,970	99,700	13	68,400	684,000
7	14,650	146,500	14	82,600	826,000
8	20,300	203,000	15	79,900	979,000

(*Barr.*)

It is easy to make a correct allowance for time lags by making one or two observations on the time elapsing after making a change before the instrument records it. On a steady load, the addition of some further load can be made and its power absorption known in a few minutes. Information only acquired by weeks of testing, and then only approximately, can be acquired by means of the apparatus in a few hours, for it is only necessary to allow conditions to become steady between each test. The instrument is, of course, most readily applicable to surface

condensing engines, the record forming a jet condenser requiring the simultaneous observation of water temperatures, so as to discover how much of the discharge represents engine steam.

The apparatus is being extensively used for the measurement of boiler feed water, and can be obtained in two patterns, viz., the indicating and recording type, and the combined indicating recording and counting type. With the latter the total quantity can be read off directly, just as in the case of a gas meter.

Injection Cocks

Are usually of the hollow plug type, in gunmetal. One per condenser is sufficient. Two or three standard sizes are generally available to choose from. The minimum size can be checked, as in the following example:—

Maximum load under normal conditions	1,000 i.h.p.
Steam per i.h.p. hour	15 lbs.
Steam per second	4·17 lbs.
Condensing water per pound of steam	40 lbs.
" " per second	167 lbs.
" " "	2·67 cub. ft.
Vacuum in condenser, worst	24 ins.
" " in feet of water	27 ft.
Vertical height water level to injection cock	11 ft.
Head of water on injection service, 27–11	16 ft.
Assume spent in friction	50 per cent.
Net head at injection cock	8 ft.
Velocity of water at cock=$8\sqrt{8}$	22·6 ft. sec.
Hence area of opening	0·118 sq. ft.
" "	17 sq. ins.

If in doubt add a margin of 25 to 30 per cent. It is, of course, understood that the above level, steam consumption, etc., must be modified to suit the actual conditions. Thus in tropical countries 60 should be substituted for 40 lbs. of condensing water per lb. of steam.

Force or Feed Pumps.

When the boiler feed-pump is driven off the engine it is usual to allow sufficient capacity for other works purposes.

The following are frequently adopted:—

Textile spinning mills	25 lbs. water per i.h.p. hour.
Textile weaving sheds	40 " " "
Mixed spinning and weaving	30 " " "
Flour mills	35 " " "
Bleach works	50 " " "

It will be seen that an ample allowance is made, and for economical superheated-steam engines a reduction of about 5 lbs. can be made. The above are based on actual pump displacement. The plunger speed should not exceed about 200 ft. per minute.

Pump Openings.

The velocity of water in pump openings should not exceed 500 feet per minute.

Power Plant Thermal Efficiencies.

In the curve diagram (page 1630) the steam pressure is in *absolute* pounds per square inch, and the object is to divide up the overall thermal efficiency of a power plant between the boiler plant (which includes superheater and economiser) and the turbo-generator plant.

Take, for instance, the 80 per cent. boiler efficiency line, which is about as high as can be expected in year-in and year-out working. From this it will be seen that 1,595 B.Th.U. must be applied to the boiler furnace to obtain 1 lb. of steam at a total heat of 650° F.

POWER PLANT THERMAL EFFICIENCIES.

Ratio between Gaseous Fuel and K.W.H.

Curve showing—1. Pence per K.W. Hour (A) and £ per K.W. Year (B) with varying costs per million B.Th.U.

2. " " " " with varying costs per thousand C.F. Gas.

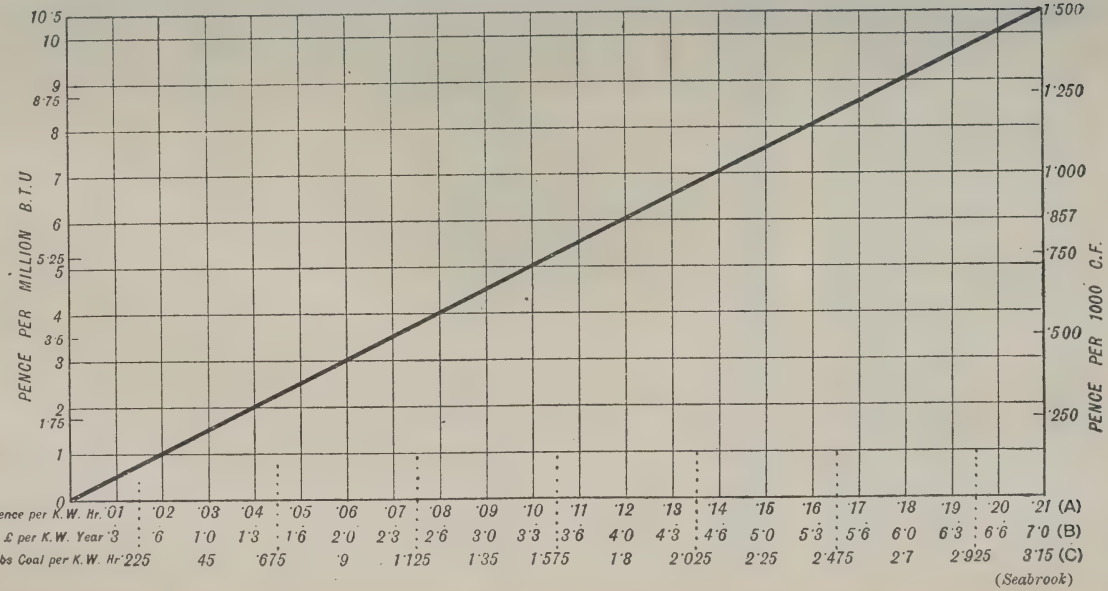
Assuming :—17 per cent. Thermal Efficiency. 143 B.Th.U. per C.F.

50 K.W. Hours per million B.Th.U. 8,000 Hours per annum.

3. Ratio between pence per K.W. Hour and £ per K.W. Year (A and B).

(Pence per K.W. Hour × $3\cdot\dot{3}$ = £ per K.W. Year.)

(C) Coal @ 12/6 T. and 11,000 B.Th.U. per lb. (B) ÷ 2·22 = (C).



(Seabrook)

The best thermal efficiency practicable year in and year out, and even then only obtainable on a very high load factor, is a turbo-generator consumption of 11 lbs. per k.w.hr. (See Curve B.) This, combined with the boiler efficiency, gives a thermal efficiency over all of 19·42 per cent., or 17,550 B.Th.U., applied at the boiler furnace per k.w.hr. It is questionable whether better results than this can be obtained until higher total temperatures than 650° F. can be worked to.

It is quite easy to arrive at a boiler efficiency and the efficiency of a turbo-generator separately, but these data do not give the power station engineer the year-in and year-out over-all thermal efficiency of a power plant from the fuel to the switchboard. This over-all figure, which has now reached 17 per cent. in some large power stations in this country, working on a load factor of about 60 per cent., is likely to be increased in the near future; it must take into account *all losses*, that is to say, the power required for operating a power station itself. These losses include lighting, motors, pumps (whether steam or electrically driven), condensing plants, cooling tower equipments, etc., also leakages due to blow-down of boilers, traps, drains, and so on. The station may have a high boiler efficiency, and a high turbo-generator efficiency, while the over-all efficiency may be very low, and very often is, because the consumption of power for driving the power station is frequently overloaded

(*A. Hugh Seabrook*, ***A.M.Inst. C.E.***)

At a discussion on Power Station Design at I.M.E.A. Convention, June 1920, the view was expressed by Selvey that 17,500 B.Th.U. per unit generated was then in sight, or 19·5 per cent. overall efficiency; and Mr. Ferranti was of the opinion that 28 per cent. would be attained with steam plant in the future.

SECTION XXX

Revised and amplified by A. Vincent Clarke, A.M.Inst.C.E., M.I.Mech.E., A.M.I.E.E.

With contributions by G. A. Burls, M.Inst.C.E., M.Inst.A.E.; A. P. Chalkley, B.Sc., A.M.Inst.C.E.; Major D. H. Kennedy, F.R.Aë.S., R.A.F.; and G. E. Windeler, M.I.Mech.E.

PART I

GENERAL DATA RELATING TO POWER GAS . . pp. 1635-1641

PART II

GAS ENGINES . . . . . pp. 1643-1665

PART III

OIL ENGINES

DIESEL ENGINES — SEMI-DIESEL ENGINES — THE 'STILL' (I.C. + STEAM) ENGINE—HIGH-COMPRESSION OIL ENGINES —LOW-COMPRESSION OIL ENGINES—INTERNAL COMBUSTION TURBINES—LLOYD'S RULES FOR MARINE INTERNAL COMBUSTION ENGINES . . . . . pp. 1667-1700

PART IV

HOT-AIR ENGINES . . . . . pp. 1701-1704

PART V

AERO AND MOTOR CAR ENGINES—MOTOR CARS pp. 1705-1740

PART VI

AIRCRAFT . . . . . pp. 1741-1763
(Contributed by Major D. H. Kennedy, F.R.Aë.S., R.A.F.)

SECTION XXX

Revised and amplified by A. Vincent Clarke, A.M.Inst.C.E., M.I.Mech.E., A.M.I.E.E.

With contributions by G. A. Burls, M.Inst.C.E., M.Inst.A.E.; A. P. Chalkley, B.Sc., A.M.Inst.C.E.; D. H. Kennedy, R.A.F.; and G. E. Windeler, M.I.Mech.E.

PART I

GENERAL DATA RELATING TO POWER GAS.

Interrelations of Units.

In calculations relating to Power Gas, the following physical data and interrelations of units will be found convenient for reference:—

1 metre = 39·37079 ins. = 3·2809 ft. = 3 ft. 3¼ ins. (app.).
25·4 millimetres = 1 inch.
1 square inch = 6·4516 square centimetres.
1 cubic inch = 16·387 cubic centimetres.
1 gallon = 8 pints = 277·3 cubic inches (app.) = 4·5435 litres.
1 gallon of pure water at 62° F. weighs 10 lbs.
1 cubic foot = 6·23 gallons.
1 cubic foot of pure water at 62°F. weighs 62·3 lbs. = 28·315 litres.
1 cubic foot of average river water weighs 63 lbs.
1 cubic foot of sea water weighs 64 lbs.
1 litre = 1,000 cub. cm. = 61·03 cub. ins. = 1·761 pints.
1 pound (av.) = 7,000 grains = ·45359 kilogramme.
1 gramme = 15·432 grains = ·0022046 lb.
1 gramme per litre = 70·13 grains per gallon = 436·9 grains per cub. foot.
1 kilogramme = 15,432 grains = 2·2046 lbs.
1 British ton = 2,240 lbs.
1 metric ton = 2,205 lbs. = 0·9844 British ton.
1 atmosphere = 14·7 lbs. per sq. in. = 2116·8 lbs. per sq. ft.
" = 33·977 ft. of water.
" = 26,220 ft. of (homogeneous) air.
" = 30·0 ins. of mercury (app.).
" = 760 mm. of mercury (app.).
1 kilogramme per sq. cm. = 14·22 lbs. per sq. in.
" " = 0·9673 atmosphere.
1 inch of mercury = 0·490 lb. per sq. in.
1 inch of water = 0·0360 lb. per sq. in.
1 British thermal unit (B.Th.U.) = heat necessary to raise 1 lb. of water through 1°F.
" " " = 778 ft.-lbs. of work.
1 centigrade thermal unit (C.Th.U.) = heat necessary to raise 1 lb. of water through 1°C.
" " = 1·8 B.Th.U.
" " = 1400·4 ft.-lbs. of work.

1 (major) calorie = heat necessary to raise one kilogram of water through 1°C.
" = 2·2046 C.Th.U.
" = 3·9683 B.Th.U.
" = 3087·3 ft.-lbs. of work.
1 British horse-power = 33,000 ft.-lbs. of work per minute.
" " = 42·416 B.Th.U. per minute.
" " = 2,545 B.Th.U. per hour.
" " = 23·564 C.Th.U. per minute.
" " = 1,414 C.Th.U. per hour.
" " = 10·69 calories per minute.
1 metric horse-power = 75 kilogrammetres per second.
" " = 0·9863 British horse-power.
1 kilowatt = 1·34 British horse-power.
Absolute temperature °F. (T) = 460 + ord. temp. °F.
" °C. = 273 + ord. temp. °C.

The volume of 1 lb. of a gas varies with its pressure and temperature and for purposes of comparison a definite pressure and temperature are selected. If normal pressure and temperature be one atmosphere and 32°F., this may conveniently be denoted by N.T.P.

Mass and Bulk of some Gases and Vapours at N.T.P.

Air is by *weight*, composed of 77 per cent. nitrogen and 23 per cent. oxygen.
By *volume* its composition is 79 per cent. nitrogen and 21 per cent. oxygen.
One pound of oxygen is contained in $\frac{100}{23} = 4{\cdot}35$ lbs. of air.
One cubic foot of oxygen is contained in $\frac{100}{21} = 4{\cdot}8$ cub. ft. of air.
One pound of dry air at N.T.P. occupies 12·387 cub. ft.
One cubic foot of dry air at N.T.P. weighs 0·08073 lb.
The following table gives data relating to the heaviness and bulkiness of the more usual gases:—

HEAVINESS AND BULKINESS OF SOME GASES, ETC., AT N.T.P.

Gas.	Symbol.	Specific Gravity; Hydrogen = 1.	Heaviness of 1 Cubic Foot at N.T.P.; Lbs.	Bulkiness of 1 lb. in Cubic Feet at N.T.P.
Column:—	1	2	3	4
Hydrogen	H_2	1	0·00559	178·89
Methane (marsh gas)	CH_4	8	0·04472	22·36
Water (gaseous)	H_2O	9	0·05031	19·88
Acetylene	C_2H_2	13	0·07267	13·76
Carbon monoxide	CO	14	0·07826	12·78
Ethylene (olefiant gas)	C_2H_4	14	0·07826	12·78
Nitrogen	N_2	14	0·07826	12·78
Air	$O_{23}+N_{77}$	14·44	0·08073	12·387
Oxygen	O_2	16	0·08944	11·18
Carbon dioxide	CO_2	22	0·12298	8·13
Normal benzene	C_6H_6	39	0·21801	4·59

p = abs. pressure, in lbs. per sq. foot;
= 144 {14·7 + pressure in lbs. per sq. in. above atm.};
v = volume of 1 lb. of gas, in cubic feet;
T = absolute temperature in °F.;
= 460 + ord. temp. °F.

Then for a perfect gas:—

$$pv = c\,T \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (1)$$

Where c is constant for any, the same, gas.

For dry air at N.T.P.:—

$p = 14{\cdot}7 \times 144 = 2116{\cdot}8$ lbs. per sq. ft.
$v = 12{\cdot}387$ cu. ft. (Table, col. 4.)
$T = 460 + 32 = 492$°F. (abs.).

Whence, by Eq. (1), we have $c = 53{\cdot}29$. Thus the characteristic equation for dry air regarded as a perfect gas, is :—

$$pv = 53{\cdot}29\ \mathrm{T}. \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (2)$$

Equations (1) and (2) show that in a perfect gas the value of the product pv is proportional to the absolute temperature. If the pressure remains constant, the volume and absolute temperature are mutually proportional. So also, if the volume remain constant, the pressure and absolute temperature are mutually proportional.

The specific heat of dry air at constant pressure, k_p, is 0·2374 B.Th.U. per lb.

The specific heat at constant volume, k_v, is less than k_p by the heat equivalent of the external work of expansion under constant pressure.

If Eq. (1) be differentiated at constant pressure we have :—

$$p\ dv = c\ d\mathrm{T};$$

thus, putting $d\mathrm{T} = 1°\mathrm{F}.$, we have $c = p\ dv$; so that c expresses the external work of expansion under constant pressure in foot-lbs. As Joule's equivalent, J, is 778 foot-lbs. per B.Th.U., we have for dry air :—

$$k_v = 0{\cdot}2374 - \frac{53{\cdot}29}{778} = 0{\cdot}1689.$$

The ratio of k_p to k_v is important in the theory of gas engines, and is usually denoted by γ; thus for dry air :—

$$\gamma = \frac{k_p}{k_v} = 1{\cdot}4056.$$

Isothermal and Adiabatic Expansion.

The two fundamentally important modes of expansion of gases are :—

(1) Isothermal expansion.
(2) Adiabatic expansion.

(1) *Isothermal Expansion.*—When a mass of gas changes volume at constant temperature, the change is described as 'isothermal.' In the case of perfect gases, Eq. (1) shows that in this case the value of the product pv remains constant. If $p_o\ v_o\ \mathrm{T}_o$ be respectively the initial values of pressure, volume, and (abs.) temperature, and v any subsequent simultaneous values, we have in isothermal expansion :—

$$pv = p_o\ v_o = c\ \mathrm{T}_o \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (3)$$

The external work W done in expanding from volume v_o to volume v, is expressed by :—

$$\mathrm{W} = \int_{v_o}^{v} p\ dv \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (4)$$

as, in isothermal expansion, $pv = p_o\ v_o$, we have $p = \frac{p_o\ v_o}{v}$; hence (4) becomes for this case :—

$$\mathrm{W} = p_o\ v_o \int_{v_o}^{v} \frac{dv}{v} = p_o\ v_o\ \mathrm{Log}_e \frac{v}{v_o} \quad . \quad . \quad . \quad . \quad . \quad (5)$$

$\frac{v}{v_o}$ is the volume ratio of expansion, and may be denoted by ρ; thus, from (5), we have in isothermal expansion :—

$$\mathrm{W} = p_o v_o\ \mathrm{Log}_e \rho = c\ T_o\ \mathrm{Log}_e \rho \quad . \quad . \quad . \quad . \quad . \quad . \quad (6)$$

As the internal energy of a perfect gas depends only on its temperature, it follows that in isothermal change the internal energy of the gas remains constant. Hence, in isothermal expansion of a perfect gas the heat given to the expanding gas is the exact equivalent of the

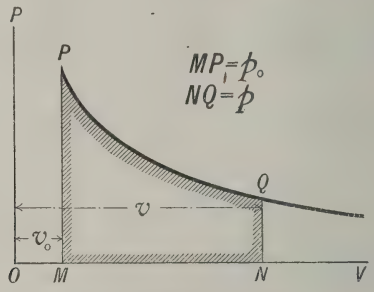


FIG. 1.

external work performed by the gas. And, conversely, in isothermal compression of a perfect gas, the heat that flows from the gas during compression is the exact equivalent of the work done on the gas in compressing it.

Frequently in engineering thermodynamics it is found that actual expansion and compression curves of diagrams can be closely represented by an equation of the form :—

$$pv^n = p_0v_0^n, \text{ a constant} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (7)$$

where the index n is constant in value.

When $n=1$ we have the particular case of isothermal change, which has just been considered. For all other values of n, the external work done during expansion from volume v_0 to volume v—represented by the hatched area MNQP of fig. 1—is given by :—

$$W = \int_{v_0}^{v} p\,dv = p_0v_0 \int_{v_0}^{v} v^{-n}\,dv, \text{ by Eq. (7)}$$

That is,

$$W = \frac{1}{n-1}\left\{p_0v_0 - pv\right\} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (8)$$

The expanding substance being assumed a perfect gas, we have $p_0v_0 = cT_0$, and $pv = cT$; hence, in expansion of this type Eq. (8) may also be written :—

$$W = \frac{c}{n-1}\left\{T_0 - T\right\} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (9)$$

Thus if n be greater than unity, expansion is accompanied by a falling temperature. If n be equal to unity the temperature remains constant during expansion. While if n be less than unity expansion is accompanied by a rising temperature. Equation (9) shows further that in expansion of this type the external work done is proportional to the change of temperature of the expanding gas.

Again, the heat expended, H, is equal to the sum of the external work and change of internal energy of the gas ; thus we have :—

$$H = \frac{c}{n-1}(T_0 - T) + k_0(T - T_0)$$

as $c = k_p - k_v$, this becomes on reduction :—

$$H = \frac{n\,k_v - k_p}{n-1}(T - T_v) \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (10)$$

which shows that the heat expended is also proportional to the change of temperature of the expanding gas ; and that the gas expands with an apparent specific heat which is constant, and expressed by $\frac{nk_v - k_p}{n-1}$ B.Th.U. per lb.

(2) *Adiabatic Expansion.*—When a mass of gas changes its volume without any heat communication from without, the changes are said to be adiabatic.

Thus in adiabatic expansion the external work is done wholly at the expense of the internal energy of the expanding gas ; its temperature, and consequently its pressure, rapidly fall during expansion. And contrariwise, in adiabatic compression, the work done in compressing the gas appears as an increase of the internal energy of the gas ; hence, the temperature and consequently the pressure rapidly rise during adiabatic compression.

The adiabatic equation for a perfect gas is at once obtained from Eq. (10). For as, by supposition, there is in this case no heat communication with outside bodies, we have only to put $H = 0$ in Eq. (10), and then deduce the corresponding value of n. But if $H = 0$ we must have $nk_v - k_p = 0$, so that $n = \frac{k_p}{k_v} = \gamma$ in this case.

Hence, the adiabatic equation of a perfect gas is

$$pv^\gamma = p_v v_v^\gamma, \text{ a constant} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (11)$$

By aid of Eq. (1) the following two equations are at once obtained from Eq. (11), giving the relation between change of temperature and volume, and change of temperature and pressure respectively, in adiabatic changes :—

$$T = T_v \times \left(\frac{v_v}{v}\right)^{\gamma - 1} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (12)$$

$$T = T_v \times \left(\frac{p}{p_v}\right)^{1 - \frac{1}{\gamma}} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (13)$$

For dry air, as $\gamma = 1{\cdot}4056$, we have accordingly from Eqs. (11) (12) and (13) :—

$$pv^{1{\cdot}4056} = \text{constant} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (14)$$

$$T = T_v \times \left(\frac{v_v}{v}\right)^{0{\cdot}4056} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (15)$$

$$T = T_v \times \left(\frac{p}{p_v}\right)^{0{\cdot}2886} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (16)$$

Thus, in Diesel engines, the ratio is commonly about 13. Assume the initial temperature of the air to be 70°F., and the pressure to be atmospheric. Then $T_v = 460 + 70 = 530$; and $p = 14{\cdot}7$ lbs. per sq. inch : hence from (15) we have : $T = 530 \times 13^{0{\cdot}4056} = 1500°$F. or $1500 - 460 = 1040°$F. by ordinary scale. This is a sufficiently high temperature to at once ignite the charge of fuel oil on injection. The corresponding pressure from Eq. (14) is 540·8 lbs. per sq. in. abs. = 526 lbs. per sq. in. above atmosphere.

Moisture in Air.

Ordinary air always contains water vapour in greater or less degree, and the presence of this vapour modifies its physical properties.

The pressure of saturated steam formed at temperatures below 212°F. is usually described as the 'vapour tension' of water. In table, page 1640, some data are given relating to the vapour tension of water from 32°F. to 212°F.

DATA RELATING TO AIR SATURATED WITH MOISTURE AT ATMOSPHERIC PRESSURE. ESTIMATED FROM 32°F.

Temperature. t°F.	Per 1,000 cu. ft. of Saturated Air.			Cu. ft. of Saturated Air, per Lb.	Cu. ft. of Dry Air, per Lb.	Density ratio of Saturated to Dry Air.	Heat of 1,000 cu. ft. of Sat. Air from 32°F. at t°F.				B.Th.U. per Lb. of Saturated Air.
	Lbs. of Dry Air.	Lbs. of Water Vapour.	Total Weight in Lbs.				B.Th.U. of Heat of Dry Air.	B.Th.U. of rise of Temp. of Water.	B.Th.U. of Vaporisation of Water.	Total B.Th.U. per 1,000 Cu. Ft.	
Column	1	2	3	4	5	6	7	8	9	10	11
32	80·241	0·3046	80·546	12·415	12·387	0·998	0	0	326	326	4·05
40	78·779	0·4073	79·186	12·628	12·56	0·995	149	3·26	434	586	7·4
50	76·943	0·5855	77·529	12·898	12·84	0·995	329	10·54	621	961	12·4
60	75·068	0·8264	75·894	13·176	13·09	0·993	499	23·14	872	1,395	18·4
70	73·112	1·1494	74·261	13·466	13·34	0·991	660	43·7	1,207	1,911	25·7
80	71·042	1·5625	72·605	13·773	13·60	0·987	810	75·0	1,633	2,518	34·7
90	68·821	2·146	70·967	14·091	13·85	0·983	948	124·5	2,231	3,304	46·6
100	66·396	2·833	69·229	14·445	14·10	0·976	1,072	192·6	2,930	4,195	60·6
110	63·691	3·731	67·422	14·832	14·35	0·968	1,179	291·0	3,839	5,309	78·7
120	60·650	4·926	65·576	15·250	14·60	0·957	1,267	433·5	5,041	6,741	102·8
130	57·204	6·329	63·533	15·740	14·85	0·943	1,331	620·0	6,442	8,393	132·1
140	53·269	8·130	61·399	16·287	15·11	0·928	1,366	878	8,230	10,474	170·6
150	48·729	10·309	59·038	16·938	15·36	0·907	1,365	1,217	10,378	12,960	219·5
160	43·498	12·903	56·401	17·730	15·61	0·880	1,322	1,652	12,917	15,891	281·8
170	37·442	16·000	53·442	18·712	15·86	0·848	1,227	2,208	15,925	19,360	362·2
180	30·431	19·802	50·233	19·917	16·11	0·809	1,069	2,931	19,594	23,594	470·0
190	22·406	24·390	46·796	21·369	16·37	0·766	840	3,854	23,992	28,686	613·0
200	13·117	29·762	42·879	23·322	16·62	0·713	523	5,000	29,101	34,624	807·5
210	2·460	35·971	38·431	26·021	16·87	0·648	104	6,403	34,949	41,456	1078·7
212	0·000	37·383	37·383	26·750	16·92	0·632	0	6,729	36,277	43,006	1150·4

DATA RELATING TO THE VAPOUR TENSION OF WATER FROM 32°F. TO 212°F.

At °F.	Absolute Pressure, in Lbs. per Sq. In. P'.	Cu. Ft. Occupied by 1 Lb. u.	Latent Heat, in B.Th.U. per Lb.	At °F.	Absolute Pressure, in Lbs. per Sq. In. P'.	Cu. Ft. Occupied by 1 Lb. u.	Latent Heat, in B.Th.U. per Lb.
Col.:	1	2	3	Col.:	1	2	3
32	0·089	3,283	1070·5	130	2·209	158	1017·9
40	0·122	2,455	1066·3	140	2·871	123	1012·3
50	0·177	1,708	1060·9	150	3·699	97·0	1006·7
60	0·253	1,210	1055·7	160	4·719	77·5	1001·1
70	0·359	870	1050·3	170	5·970	62·5	995·3
80	0·502	640	1045·1	180	7·492	50·5	989·5
90	0·691	466	1039·7	190	9·310	41·0	983·7
100	0·939	353	1034·3	200	11·496	33·6	977·8
110	1·264	268	1028·9	210	14·09	27·8	971·6
120	1·681	203	1023·3	212	14·70	26·75	970·4

When air contains a maximum of water vapour it is said to be saturated. The quantity of moisture depends only upon the temperature, and is estimated by aid of :—

DALTON'S LAW.—The pressure, and consequently the mass of vapour which saturates a given volume, is the same at the same temperature, whether the volume already contains a gas or is vacuous.

Consider a volume of V cubic feet of saturated air at a pressure of P lbs. per sq. in., and temperature t°F. By Dalton's Law this consists of (1) V cubic feet of water vapour at the pressure P' lbs. per sq. in. corresponding to t°F., as in column 1 of above table, together with (2) V cubic feet of dry air at pressure $(P-P')$ lbs. per sq. in., and temperature t°F.

Thus the weight, S, in lbs. of 1,000 cubic feet of saturated air at temperature t°F. and pressure P lbs. per sq. in. is :—

$$S = \frac{1000}{u} + 80{\cdot}73 \times \frac{492}{460+t} \times \frac{P-P'}{P} \quad . \quad . \quad . \quad . \quad . \quad (17)$$

the values of u being given in column 2 of table. If the pressure be atmospheric, P = 14·7, and in this case :—

$$S = \frac{1000}{u} + 80{\cdot}73 \times \frac{492}{460+} \times \frac{14{\cdot}7-P}{14{\cdot}7} \quad . \quad . \quad . \quad . \quad . \quad (18)$$

By aid of Eq. (18), table (p. 1640) has been compiled.

This table may be useful in connection with the heat expended in providing the moisture-laden air supplied to gas producers

SECTION XXX

PART II

GAS ENGINES.

Types of Gas Engines.

The many gas engines in existence may be classified under the following types :—

Type I.—Engines igniting their charge at constant volume, without compression. This type is obsolete ; it included the Lenoir and Hugon.

Type II.—Engines igniting at constant volume without compression, with free piston, and utilisation of vacuum during instroke. This type also is obsolete ; it included the Barsanti, Wenham, and Otto and Langen.

Type III.—Engines igniting at constant pressure, with previous compression of the charge. This type includes the early Brayton and Simon engines, and the modern Diesel engine.

Type IV.—Engines igniting at constant volume, with previous compression. This type includes the very great majority of gas engines in everyday use.

The vast majority of present-day gas engines are operated upon the Otto, Beau de Rochas or four-stroke cycle wherein the sequence of strokes is suction, compression, working, and exhaust ; and in most cases, particularly of British engines, the cylinders are single-acting ; the large double-acting engines have been perfected mainly by the great Continental firms.

A not inconsiderable number, especially of engines of large size, are now built upon the two-stroke cycle, both single and double-acting, and much attention has in recent years been devoted to this type.

Crossley Gas Engines.

Messrs. Crossley Bros. Ltd., of Openshaw, produce annually a very large number of gas engines of horizontal and vertical design, working on the four-stroke cycle. The range of power is from 3½ to 260 b.h.p., and over 80,000 engines have been supplied.

Horizontal engines of 80 b.h.p. and upwards are also made with two cylinders, the flywheel being mounted on the crankshaft between the cylinders. These double-cylinder engines are specially suitable for all purposes where very steady driving is required, as they run with great regularity. The vertical engines, which are of the four-cylinder high-speed design, are also most suitable for driving dynamos.

The rated powers of the producer-gas engines are obtained when running on gas made from anthracite, bituminous coal, and wood fuel, but are reduced by six per cent. when running on gas made from coke. Working on town gas, the increase in power varies from about 20 per cent. on the small sizes to about 1½ per cent. on the largest size, which develops 130 b.h.p. in one cylinder. The weight of the standard horizontal engine varies from about 2½ to 3 cwts. per b.h.p., and the weight of the double-cylinder engines is about 2 cwts. per b.h.p.

The sizes from 6 b.h.p. and upwards are now all governed on the throttle, giving a smooth drive and low pressures at reduced engine loads. Fig. 2 shows a recent horizontal single-acting four-stroke design ; the girder-type bed and balanced crankshaft will be noted. Other features included are the absence of any liner bolts in the water jackets ; adjustable timing to the electric ignition ; double ring lubrication to the bearings with forced lubrication to the cylinders and other parts ; screw-down producer-gas cock ; hardened steel cams, rollers, and pins ; and a combustion chamber so designed that dust and oil cannot collect at the bottom and form troublesome deposits, but are swept out of the exhaust valve with the burnt gases.


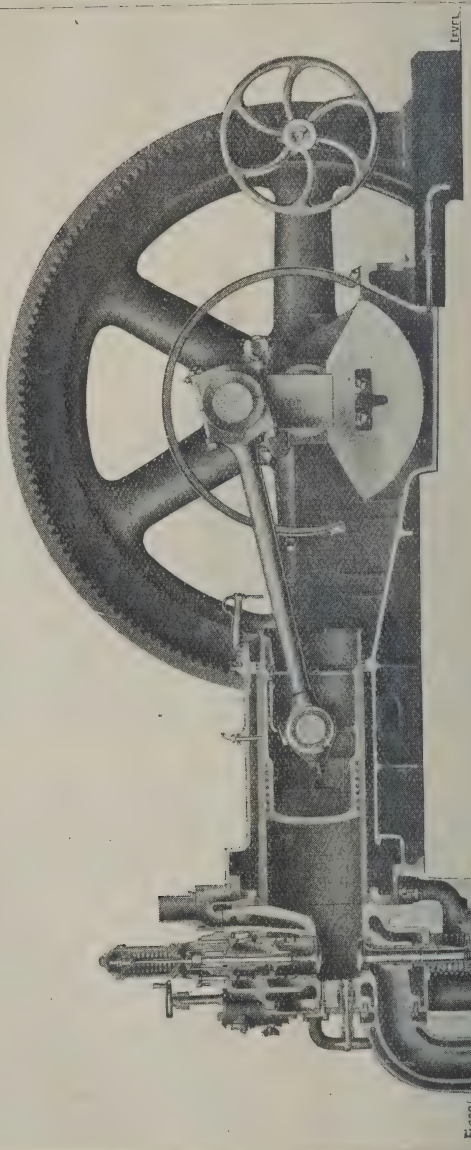


FIG. 2.—Section of Crossley Gas Engine.

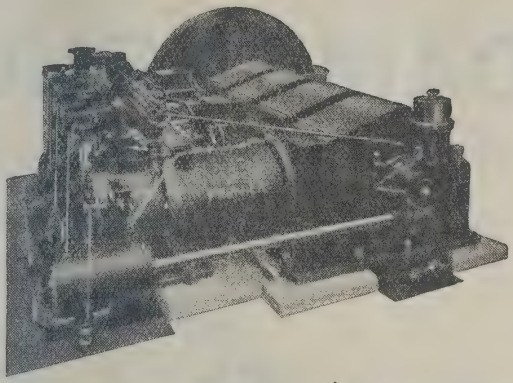

The consistent reliability of

PREMIER GAS ENGINES

together with the low consumption of fuel and oil and their complete accessibility, have placed them in a class by themselves.

THE PREMIER GAS ENGINE Co. Ltd.
(CROSSLEY BROTHERS LTD.)
SANDIACRE, NEAR NOTTINGHAM, ENGLAND.
London Office: 139-141 Queen Victoria Street, E.C. 4.

F. 1644

CAMPBELL

HORIZONTAL GAS ENGINES



Our Horizontal Engines are built with one, two or four Cylinders up to 400 B.H.P.

The design throughout is such as to secure the utmost reliability with high efficiency.

Governing is on our improved 'Variable Quality' system.

SUCTION GAS PLANTS

To work with Anthracite, Bituminous Coal, Coke, Charcoal, Peat, Lignite, Wood, Rice Husks, Cotton Seed, etc., etc.

THE CAMPBELL GAS ENGINE CO., LTD.

HALIFAX, ENGLAND.

F. 1645

Ruston-Hornsby Gas Engines.

The Ruston gas engines and the Hornsby-Stockport engines are now made by Messrs. Ruston & Hornsby, Ltd., Lincoln, the engines being of the horizontal four-stroke cycle type, built in single and multi-cylinder sizes. The range of powers is from 5 to 300 b.h.p. Figure 3 shows one of these engines in conjunction with a Ruston gas-producer. The engines supplied to the oil-fields are capable of working either on gas or on oil, so that the natural gas found when well-sinking can be used, and, when the supply of this diminishes, the engine can be changed over to oil fuel.

The bed-plate is in one piece, carrying the main bearings and cylinder liner, and the thrust of the connecting rod is taken by the bed-plate, as the cylinder is not overhung. The crankshaft is carried by three bearings, the outer bearing being provided to support the weight of the flywheel. Regular running is ensured by having a balanced crank, and by using high compression which allows of a weak charge being fired.

A special automatic device is used for starting the engine on compressed air, and this is also made use of for charging the air-receiver, by means of the engine piston acting as an air-pump



Fig. 3.—Ruston Gas Engine with Suction Producer.

for the time being. Efficient lubrication is provided for all of the bearings, the piston, and the exhaust valves. Governing is effected by the Ruston patent throttle gear which varies the opening of the gas and air inlet-valves to suit the load. This gear consists of a roller forming a movable fulcrum between a lever having a constant angular movement and the upper surface of the inter-valve plunger, the lift of the valve varying directly as the distance of the roller from the lever fulcrum. The roller and the pressing surfaces are of hardened steel, and the movements are arranged so as to avoid slip.

Campbell Gas Engines.

The Campbell Gas Engine Co. Ltd., Halifax, are builders of horizontal and vertical gas engines in the single-cylinder type from 3 to 156 b.h.p. and with two and four cylinders up to 575 b.h.p. The engines are of the four-stroke cycle type, and can be arranged for working on gas or adapted for oil.

The single-cylinder horizontal design has the cylinder well supported by the bed plate, which extends beneath the cylinder as far back as the combustion chamber, and the cylinder liner is removable. Horizontal engines are also made with two cylinders and four cylinders; these engines have the bed plate and crankshaft housing in one casting, to which the cylinders are bolted. The cylinders are also supported on a sole plate resting on the foundation, and the combustion chambers are detachable.

The governing of the horizontal engines is by the hit-and-miss system up to 24 b.h.p., which has the advantage of being simple and gives economical running at all loads. On all larger engines a throttle governor is fitted giving variable-quality governing, in which the piston receives an impulse at every cycle and the compression pressure is the same at all loads. The weights of the horizontal as well as of the vertical engines are about 2½ to 3 cwts. per horse-power.

Ignition is by high-tension magneto up to 10 b.h.p., and above this size low tension with timing adjustments.

Cylinders and pistons are fitted with forced lubrication, crankshaft and camshaft bearings with ring lubrication, and the big-end and small-end connecting-rod bearings with sight-feed automatic lubricators.

The Campbell vertical gas engines are of the enclosed crank-chamber type, and are built with two, three, or four cylinders from 75 to 575 b.h.p. Forced lubrication is fitted to the cylinders and all enclosed bearings. Ignition is by low-tension magneto with separate machine and operating gear to each cylinder. Governing is on the throttle, the governor being driven direct from the crankshaft by its own independent gearing. The vertical engines run at a higher speed than the horizontals, and are well adapted for direct coupling to dynamos owing to their good balance and low coefficient of speed fluctuation. The rotation is so uniform that it is claimed even alternators may be operated in parallel.

National Gas Engines.

Horizontal and vertical four-stroke cycle gas engines are made by the National Gas Engine Co. Ltd., of Ashton-under-Lyne, the power ranging from 1½ to 1,500 b.h.p. Up to 10 b.h.p. the engines are of the horizontal overhung cylinder design; for greater powers a special design of girder bed and supported cylinder is adopted.

The horizontal engines are built in various sizes up to 95 b.h.p. per cylinder. Ignition is by low-tension magneto, a sparking-plug being fitted in the combustion chamber. Governing of the smaller sizes is on the hit-and-miss principle but throttle governing can be supplied if desired, and the larger sizes of engines are fitted with a patent variable admission governing gear.

The National Gas Engine Co.'s vertical engines are of the tandem single-acting design. They are made in two standard parts, known as the 18-in. standard and 24-in. standard; that is, parts suitable for engines having these strokes and the power ranges from 300 to 1,500 b.h.p. The engines are suitable for working on the various gases mentioned above, and the cyclical variation is such that there is no difficulty in running electric alternators in parallel.

A recent test of an engine of this type furnished the following results :—

Engine.—A 750 b.h.p. National Vertical Tandem Single-Acting engine having three cranks and six cylinders, the three upper cylinders being each of 23 ins. bore, and the three lower each of 22 ins. bore. Piston sleeve 6 ins. diameter, stroke 24 ins.

Details.	At Overload.	At Full Load.	At ¾ Load.	At ½ Load.	At ¼ Load.	At No load.
Duration of trial; minutes . .	60	60	45	30	15	18
Revolutions per minute . . .	203	204	204	206	206	206
B.H.P. developed	903	748	571	380	208	0
Cu. ft. gas per B.H.P. hour . .	68·4	66·4	72·3	85	124	—
B.Th.U. per cu. ft. of gas (lower) .	151	149	139	150	150	—
B.Th.U. per B.H.P. hour . .	10,328	9,894	10,050	12,750	18,600	—
Brake thermal efficiency, per cent.	24·64	25·72	25·32	20·0	13·7	—

The engine was driven by Mond gas. At full load 6·55 gallons of cooling water were raised 42°F. in temperature per b.h.p. hour, being 27.8 per cent. of the heat evolved by the gas used.

The pistons are unwatered. Forced lubrication is supplied to all parts, the oil pressure being about 20 lbs.

Vickers Gas Engines.

Large gas engines of the horizontal four-stroke cycle type are constructed by Vickers Ltd., Barrow-in-Furness. The engines are double acting, and range from 1,500 b.h.p. in single line tandem cylinders to 5,000 b.h.p. in twin tandem engines.

A number of these engines have been supplied for driving dynamos, alternators, etc. Eight of these engines for the Appleby Iron Co., of Appleby and Frodingham, have cylinders 1,100 mm. dia. by 1,200 mm. stroke, and develop 1,200 kw. when running at 100 r.p.m.

Separate cylinder liners are fitted. The inlet valves are located on top, and the exhaust valves at the bottom of the cylinder; they are operated by shaped rolling levers driven by eccentrics on the half-speed shaft. The crankshaft is forged in one piece and balance weights are fitted. The main bearings are in four parts, lined with white metal, and have self-aligning wedge adjustment. The main bearings of the 1,500 b.h.p. engine are 21 ins. diam. and the piston rod 10·75 ins. diam.; the latter is hollow to convey the cooling water to the pistons.

Governing is on the 'quantity and quality' system, and it is possible to run direct-driven alternators in parallel. Hand adjustment is provided for regulating the speed while running. Separate hand control for gas and air for each end of both cylinders is provided.

Ignition is effected by means of two low-tension 'make and break' ignition plugs in each end of each cylinder. A motor generator delivers current at 70 volts, which is distributed by a rotary wiper, and is fitted at the rear end of the side shaft.

The 1,500 b.h.p. blowing engine runs at 80 r.p.m. and delivers 27,000 cub. ft. of free air per minute against 12·5 lbs. per sq. in. The total weight of this engine is approximately 305 tons.

Hindley Gas Engines.

Messrs. E. S. Hindley & Sons manufacture vertical single-acting four-stroke cycle gas engines in sizes from 10 to 350 b.h.p. of the fast revolution type designed for direct coupling to high-speed machinery as dynamos, centrifugal pumps, fans, etc.

The engines are light and compact; special care has been given to the balancing, and the weight of pistons and connecting-rods has been reduced as much as possible to enable the engines to run freely and quietly at high speeds; being multi-cylindered, and having adequate flywheel inertia, the cyclic variation is small.

Governing is effected by varying the quality of the mixture of gas and air; ignition is by high-tension magneto, with variable timing; frequently high-tension coil ignition is also fitted as a stand-by.

The cylinders are cast in one with the valve-boxes, the construction of the water-jacket being the subject of a patent. The outer water-jacket, the cylinder, and the valve-box form one casting, so that there is no joint to cause trouble. At the same time the special corrugated form of water-jacket permits of unequal expansion between the cylinder walls and the jacket. All joints in the cylinder which are subject to the pressure of the power-stroke are ground-in metal-to-metal joints, no packing being used either in the case of the top cylinder cover, valve cover, or ignition plugs. The connecting-rods are of forged steel, and are so arranged that, together with the pistons, they can be withdrawn through the top cover, which can be easily removed without disconnecting any gear. The crankshaft is of special quality steel, machined from a solid forging, and is not bent or subjected to strain in manufacture. The governor controls the admission of gas, so that compression is practically constant at all loads.

The camshaft runs in three or more bearings, and is driven from the crankshaft by means of gearing, the whole being enclosed in the crankcase. The crankcase is of box section, strongly webbed, and carrying the crankshaft bearings; it is provided with large inspection doors, which give easy access to all the working parts. The lubrication is forced under pressure to all bearings by a valveless oil pump; this system of lubrication ensures economy in oil consumption, which is in some cases as low as ·0002 of a gallon per b.h.p. per hour.

Davey, Paxman & Co.'s Gas Engines.

The Paxman gas engine is of the single-cylinder horizontal type, operating on the four-stroke cycle, and for large powers two engines are coupled with a single crankshaft, having the flywheel between the cylinders. The sizes are given in the subsequent table, and the engine is illustrated in figs. 4 and 5. The powers obtained with coal gas, and with producer gas, are given in the table, the suction producers, suitable for anthracite and coke, being made by Davey, Paxman & Co., Colchester.

Special features of the engines are the shape of the combustion chamber, which gives an excellent combustion of the fuel together with freedom from fracture, and the patented timing arrangement for the spark to facilitate starting, the general design following accepted practice and having supported cylinder with removable liner.

STANDARD SINGLE-CYLINDER GAS ENGINES BUILT BY DAVEY, PAXMAN & CO. LTD., COLCHESTER.

Type.	Brake Horse Power.			Revs. per Min.	Flywheels.			Pulley.		Capacity of Water Cooling Tanks.
	Max. with Coal Gas.	With Producer Gas.			No.	Diam.	Width.	Diam.	Width.	
		Max.	Normal.			Ft. Ins.	Ins.	Ft. Ins.	Ins.	Gallons.
B	2·5	—	—	300	1	2 5½	4½	0 8	6	85
C	5	—	—	280	2	3 0	4½	1 0	6	168
D	8·25	—	—	280	2	3 3	4½	1 2	8	210
E	11	8	7	300	2	3 6	4¾	1 6	8	250
F	13	10	8·5	300	2	3 6	4¾	1 6	8	336
G	15·5	12·5	11	270	2	3 10	5	2 3	10	420
H	20	16	14	270	2	4 4½	5	2 3	10	500
J	25	20	18	250	1	5 4	7½	3 0	11	750
X	31	26	23	250	1	5 4	7½	3 0	11	750
Y	37	31	28	240	1	5 6	8	3 0	12	840
K	42	36	32	240	1	6 0	8	3 6	12	1,000
L	52	45	40	220	1	7 0	8	3 9	14	1,000
M	64	55	50	220	1	7 3	8½	4 0	17	1,680
N	77	65	58	200	1	7 3	9½	4 4	19	2,100
O	90	76	68	200	1	7 6	9½	4 6	20	2,100
P	108	90	80	190	1	8 0	12	5 0	21	2,520
Q	120	100	90	190	1	8 3	12	6 0	24	2,520
R	135	115	105	180	1	9 0	15	6 3	24	3,500
S	155	135	120	180	1	9 0	17	6 6	26	4,500
T	175	150	135	160	1	9 0	19	7 0	29	5,500

The flywheel sizes tabulated are as supplied for ordinary industrial service. Any of the standard types given can also be coupled with one flywhee between the two engines.

A large number of Davey, Paxman & Co.'s gas engines are in operation, working on a variety of fuels. The utmost attention has been given to securing reliability, and their design of combustion chamber makes the engines very economical.

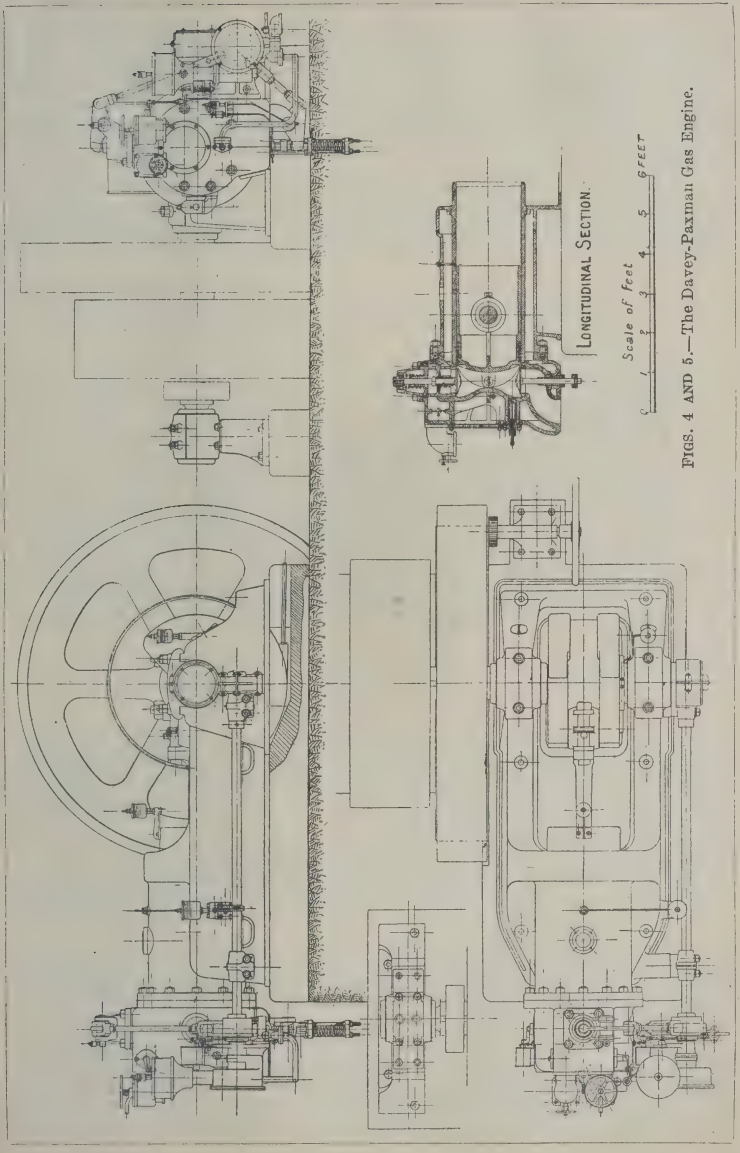
FIELDING & PLATT'S GAS ENGINES.

Gas engines of the horizontal four-stroke cycle type are manufactured by Fielding & Platt, Ltd., Gloucester, in various sizes up to 130 b.h.p. For larger powers, two engines are coupled together having a flywheel between the cylinders mounted on the two-throw crankshaft, these engines being made in sizes up to 250 b.h.p.

The cylinder has a separate liner supported throughout its whole length in the water-jacketed extension of the bed. The variable-admission governor controls the opening of the gas-and-air-mixing valve, thereby varying the volume of charge admitted to the cylinder. The stroke of the mixing-valve is directly under the control of the governor, and, although the volume of charge is varied, the ratio of gas and air in the mixture remains practically constant. By this means an explosion takes place every cycle, and it is claimed that, when working with a suction plant, this steady method of drawing the gas ensures a better quality of gas, and avoids the possibility of trouble through insufficient gas under variable loads.

The cylinder jacket and combustion chamber have separate water circulation, and special care has been taken to reduce the number of parts. Ignition is by means of a low-tension magneto, and the ignition plug can be readily removed from the cylinder for examination. The engines are suitable for running on gas produced from a large variety of fuels, and the 'Fielding' suction gas plants have several important features, enabling the plant to be quickly started up and to respond instantly to all varying loads.

The Fielding gas engine installations are extremely simple to operate, and the makers state that any man of ordinary intelligence can be entrusted to work it, as they have made a special study of simplicity.



FIGS. 4 AND 5.—The Davey-Paxman Gas Engine.

Premier Gas Engines.

The Premier Gas Engine Co., Ltd. (*Crossley Brothers, Ltd.*), of Sandiacre, specialise in multi-cylinder gas engines of the horizontal type, ranging in powers from 126 to 1,000 b.h.p. Large numbers of these engines have been installed for all classes of work, including the driving of alternating current generators in parallel. The speeds of the engines are suitable for coupling to electric generators, and the engines have a small cyclic irregularity.

From the sectional view, Fig. 6, the arrangement of the cylinder, combustion chamber, valves, and cam operating gear can be seen. It will be noticed that the breech end and cylinder form one casting, and the usual joint in the combustion space is avoided. This removes any risk of water leaking into the cylinder.

These engines work on the four-stroke cycle and are made in two, three, and four cylinders, bolted to massive beds which support the crankshafts. The cranks are completely covered by oil splash guards, and the main bearings are supplied with oil by a pump, which is of the valveless oscillating type, operated by the side shaft. The cylinders, piston pin, crank pin, and exhaust valve spindles are also lubricated under pressure automatically.

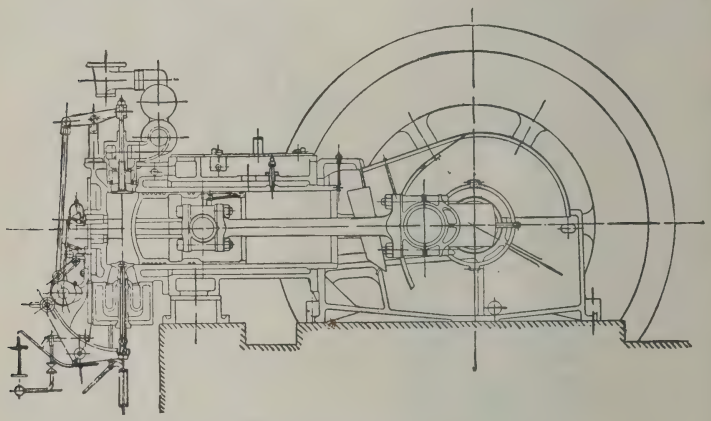


Fig. 6.—Premier Gas Engine.

The valves open directly into the cylinders, the inlet valve being directly over the exhaust valve, a design introduced by the Premier Co. as far back as 1893. A large throttle valve is fitted to control the air supplied to all the cylinders, and can be readily adjusted by hand; in addition, separate throttle valves are fitted on each cylinder. All the valves are operated by a shaft running in self-oiling bearings behind the cylinder, so arranged that the jacket inspection cover can be removed without disturbing it.

Governing is effected by controlling a throttle valve in the gas supply, and the governor is of the high-speed type, powerful and sensitive, driven direct from the crankshaft.

Starting is automatic by means of compressed air, which makes the engines easy to start.

These engines have the advantages of even turning moment, good balancing, forced lubrication, and they occupy little floor space for their power. Very high economy, both in fuel and lubricating oil, is claimed.

As will be seen from the illustration, the Premier gas engine is very accessible, both for cleaning and overhauling, as all of the working parts can be inspected and reached from floor level. This allows of good supervision, and as the piston and connecting-rod can be removed from the crankshaft end of cylinder, this operation can be carried out without disturbing any part of the valve gear or cylinder covers.

For powers of 1,000 b.h.p. and above the Premier Company manufacture a special type of double acting vertical engine. This engine is of the four-stroke type, and therefore with four cylinders there are four impulses per revolution. As there is a compression on every stroke smooth running is obtained as a result of this and also because of the forced lubrication system which supplies oil at a pressure to all motion joints.

The design is suitable for powers of 1,000–2,250 b.h.p. continuous load with four cylinders and one crank, and for twice these loads, 2,000–4,500, with two-crank and eight-cylinder design,

the speeds being from 125 r.p.m. for the smallest to 94 r.p.m. for the largest. A single crank for every four cylinders is one of the greatest innovations of the engine, and the small space required for this type of engine is a valuable characteristic.

It is specially adapted for the generation of electricity at steelworks and blast furnaces, especially where gases are available as a bye-product, and not produced artificially, and the rough usage of a steelworks is more readily resisted by this moderate speed engine.

The Premier Company is now engaged on the designs for some larger engines of the same type, which are to develop 3,000 horse-power per four cylinders.

Tangye Gas Engines.

Horizontal gas engines of the four-stroke cycle type are made by Tangyes, Ltd., Birmingham, in sizes from 3½ to 490 b.h.p. Four designs, AA, X, H, and HT, are supplied, and a large number of engines have been sold.

The smaller sizes of engines have horizontal cylinders bolted to the beds, and the liners are removable. Governing is on the hit-and-miss principle; the AA design have highly sensitive inertia governors; in the X design the governor is of the centrifugal type, arranged so that the speed of the engine can be regulated while running.

Engines of the HT type have the cylinders well supported by the bed, which extends up to the combustion chamber and forms the water-jacket. The cylinder liners are separate and are made of a special hard mixture of cast iron. Governing is on the variable-admission system with Tangye's patent operating gear, which controls the quantity of the charge admitted to the cylinder and an impulse is obtained every cycle.

Ignition is by means of low-tension magneto, the spark being produced in the combustion chamber by means of a mechanically operated make-and-break arrangement, with variable timing device. On the larger sizes the sparking-plug is arranged so that the internal sparking points can be cleaned while the engine is at work. The engines are designed so that they can make long continuous runs; they are very simple to operate and are easily started, compressed-air apparatus being supplied with the larger sizes.

Tangyes were among the first firms to call attention to the fuel economy to be obtained from the use of gas engines with suitable suction gas producers, especially as engines would work on such inferior fuels as wood refuse, etc. The economy may be gathered from the following table which gives the approximate cost of fuel in a plant developing continuously 50 b.h.p. for sixty hours:

Nature of Fuel.	Rate of Fuel Cost.	Consumption per b.h.p. per hour.	Cost of 50 b.h.p. for 60 hours per week.
'Town' gas	2/- per 1,000 cubic ft.	15 cubic ft.	£4 10 0
Anthracite	40/- per ton	·75 lb.	2 0 0
Gas coke	30/- "	1 lb.	2 0 0
Charcoal	40/- "	1½ lbs.	3 7 0
Bituminous non-caking coal	24/- "	1½ lbs.	2 0 0
Wood refuse	Nil	2½ lbs.	Nil

The figures given above are an average, but the cost of running will depend, of course, upon the size of the engine and the relative prices and qualities of the different fuels.

Grice Gas Engines.

The Grice gas engines are made in sizes between 9 and 110 b.h.p. in one cylinder, and from 100–220 b.h.p. with two cylinders, by the Anderson-Grice Co. Ltd., of Carnoustie. The engines are of noteworthy design, as the arrangement of the inlet and exhaust valves side by side below the combustion chamber makes an attractive and very simple appearance.

The engine operates on the four-stroke cycle and there is no cylinder overhang. The whole of the bed, which extends under the cylinder and forms the water-jacket, is solidly supported on foundation. The design is exceptionally substantial and the question of maximum rigidity has been carefully studied. Regular running is obtained by the patent throttle governor, which adjusts the quality and quantity of the mixture according to the load. The gas valve lift is controlled by a small die plate operating between two inclined surfaces.

The inlet and exhaust valves can readily be removed by taking off the cover on the top of the combustion chamber, allowing of immediate access for inspection and cleaning. Low-tension magneto ignition is fitted to all engines, and the usual make-and-break sparking-plug is fitted with variable timing.

The fuel costs of the Grice engine are low, especially when working in conjunction with their producer plants, which are very simple to operate. The generator is designed with a cast-iron

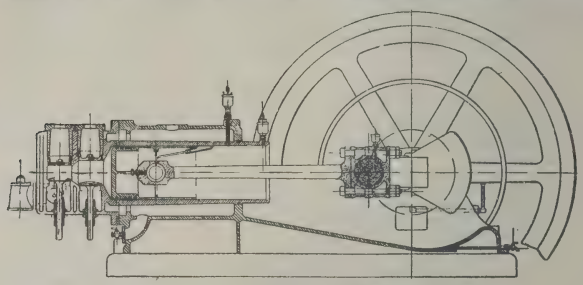


FIG. 7.—Grice Gas Engine—Longitudinal Section.

base and is square in plan, allowing the use of rectangular fire-bricks, which can be laid without skilled labour.

The jackets have large water-spaces, and when the liner is removed both the combustion chamber and cylinder jacket can be inspected. The engines are of very massive construction and the weights of the ordinary type vary from about 2½–3 cwts. per horse-power.

GARDNER GAS ENGINES.

The Gardner engines are made of both vertical and horizontal design and operate on the four-stroke cycle. The range of sizes is from ¾ to 110 b.h.p. Horizontal engines up to 14 b.h.p. can be supplied to work on either town gas, paraffin, or spirit.

The engines are of very neat design and substantially constructed. They give particularly smooth running, and a large number have been supplied.

The small sizes have been specially designed for gaseous and liquid fuels and are substantially constructed in order to make them suitable for heavy commercial duties and long continuous runs, such as for electric lighting, etc. The workmanship and design of even the smallest size are exceptionally high class, as the engines are intended for production in large quantities.

The larger horizontal engines are fitted with single fly-wheel and outer pedestal bearings. The special features are the sensitive centrifugal throttle governor, giving low-speed variation, and the silent-running that is obtained. They are easy to start, economical to work, and have a high efficiency.

In addition, a range of Gardner engines made in twelve sizes, from 10 to 110 b.h.p., have been designed for marine and stationary work. They are supplied for running on town and producer gas, paraffin, spirit, and heavy oils, and are most suitable for marine work, driving electric generators, and for industrial purposes.

PETER BROTHERHOOD GAS ENGINES.

Horizontal engines of the single-cylinder, four-stroke cycle type, developing 10 to 150 b.h.p., are manufactured by Messrs. Peter Brotherhood, Ltd., Peterborough. The engines are made with two cylinders in sizes from 172 to 300 b.h.p. Producer gas plants capable of working on a wide range of fuels are also made by this firm.

The engines are very simple and neat in appearance, being well proportioned. They are easily operated, and there are no parts liable to get out of order. Several patented features are embodied in the design, which make for efficiency and reliability.

The governor is on the variable-admission principle; the charge of gas and air admitted to the cylinder is varied in quantity to suit the load, but there are no cut-outs and the engine receives an impulse every cycle. Special attention has been given to all the working parts of the valve gear, etc., the cams are of hardened steel and the valves are made from nickel steel, alloy steel being used for the exhaust valve lever.

The bed of the engine is formed with the cylinder jacket and supports the cylinder liner throughout its length. The combustion chamber has specially large water-jacket spaces, which are quite accessible for cleaning, it only being necessary to remove a cover.

Ignition is by means of a low-tension magneto, having powerful double magnets; special timing gear is fitted so that the engine can be easily started. The ignition plug is arranged to prevent any possibility of the striking spindle bearings becoming coated with rust or deposit, and patented terminals are used on the plug and magneto.

Positive lubrication has been provided, so that when running the engine requires very little attention. A low-pressure self-starter can be fitted for engines of moderate powers, but, for engines of 100 h.p. and over, air starting is recommended, as with this it is claimed that even the largest engines start up as easily as a steam engine.

A number of improved features have been embodied in the producer, making it very simple to operate and capable of working with all grades of anthracite, coke, charcoal, and other inferior fuels.

Lilleshall Gas Engines.

Gas engines ranging in power from 500 to 4,000 b.h.p. are manufactured by the Lilleshall Co. Ltd., of Oakengates, Shropshire. The engines are of the tandem, horizontal, double-acting, four-stroke cycle type, and a working impulse on every stroke is obtained. A section is shown in fig. 8 of the 2,500 b.h.p. engine, from which the general disposition of parts can be clearly seen.

The Lilleshall Co. have recently introduced a number of important improvements, making for additional strength and reliability. The pistons and rods are, of course, water-cooled, the water supply being at a pressure of from 45 to 65 lbs. per square inch on account of the reciprocating motion of these parts; this is supplied by a pump worked from the crankshaft. For the jackets of the cylinders and covers the water is supplied at a pressure of about 15 lbs. per square inch. Each cylinder is provided with an open tank into which all exit water-pipes deliver, the discharge from each being thus always in view; each exit-pipe is fitted with a thermometer and regulating valve by which the temperature of the cooling water can be maintained at the desired degree.

These engines are installed to a very large extent in iron and steel works and collieries, as well as in electrical power stations.

An output up to 1,500 b.h.p. can be developed in one cylinder, the consumption of heat per b.h.p. hour amounting—at normal output—to about 9,900 B.Th.U.

The engines are very strongly constructed, and simple in general arrangement as well as in each individual part. The surface pressures on the moving parts are small, and their lubrication is effected automatically. The frame, cylinder, connecting piece, and rear slide are centrically connected with one another, so that the engine axis is accurately fixed.

The cast-iron cylinders are symmetrically formed, in order to avoid undue strains caused by the heat, and are amply cooled. The cooling-water jackets are easily accessible for purposes of cleaning. In addition to the cylinders, the exhaust-valve seats, the hollow piston rod, and the pistons, are cooled.

The cooling-water consumption amounts per b.h.p. hour to 7·7 gallons at an inlet temperature of 60° F.

The weight of the pistons and piston rod is not carried in the stuffing boxes, but by special crossheads, in the frame, the connecting piece, and the rear slide.

The inlet valve gear consists of a positive action which opens the air valve and gas inlet valve. By means of the governor the valve lift, and consequently the quantity of mixture, is changed according to the engine output. The ignition is effected electrically by a small accumulator battery. The time of ignition can be easily regulated during operation.


By means of compressed air the engines are very easily started.

Alternate-current dynamos driven by these gas engines can be connected in parallel without any trouble.

From tests of a tandem double-acting horizontal four-stroke engine of this type, developing 1,200 b.h.p. on blast-furnace gas, and having cylinders of 33·46 ins. bore with 43·3 ins. stroke, the following results were obtained :—

Test Results from a 1,200 h.p. Engine using Blast-Furnace Gas.

Item.	Quarter Load.	Half Load.	Three-Quarter Load.	Seven-Eighths Load.	Full Load.
Duration in minutes	33	28	29	26·8	25·33
Revs. per minute	106	105·8	106·3	106·5	105·6
I.H.P.	—	807	1,146	1,312	1,427
B.H.P.	280	557	871·5	1,037	1,186
Mechanical efficiency per cent.	48·5	69	76·2	79	83·1
M.E.P. in lbs. per square inch	—	42·5	60·0	68·7	75·3
Cu. ft. gas per b.h.p. hour	213	145·6	120·5	109·5	101·8
B.Th.U. per cu. ft. of gas	88·5	88·5	89·4	89·6	87·9
B.Th.U. per b.h.p. hour	18,532	12,262	10,794	9,921	8,976
Per cent. brake thermal efficiency	13·8	20·9	23·7	25·8	28·5

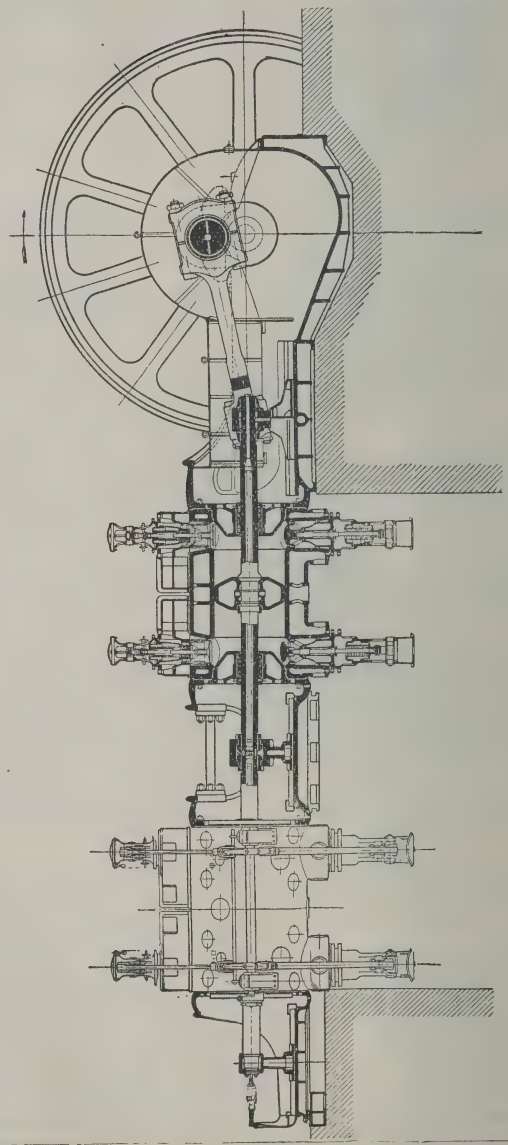

Lilleshall Gas Engine—Longitudinal Section.

Fig. 8.

Galloway Gas Engines.

Messrs. Galloways, Ltd., Manchester, took up in 1909 the manufacture of the large gas engines of the Ehrhardt and Sehmer type and have since introduced many improvements. The range of powers is given in the following table :—

Electric Generating Engine.

Cylinder Diameter.		Stroke.		R.P.M.	Normal continuous B.H.P.	Max. continuous B.H.P.	Max. Momentary B.H.P.	Blowing Engines.	
Mm.	Ins.	Mm.	Ins.					Max. R.P.M.	Normal B.H.P. at Max. R.P.M.
950	37·4	1,100	43·3	107	1,200	1,300	1,440	95	1,060
1,050	41·4	1,200	47·3	94	1,400	1,540	1,680	85	1,270
1,150	45·3	1,300	51·2	94	1,850	2,000	2,200	85	1,650
1,250	49·2	1,400	55·1	94	2,320	2,550	2,780	80	1,970

The standard Galloway engine is tandem double-acting four-stroke cycle with horizontal cylinders. For sizes over 3,000 h.p. a twin tandem engine is adopted, i.e. two lines of cylinders working on two cranks on a common crankshaft. The engines are designed to run on blast-furnace gas, coke-oven gas, and producer gas.

The special features of the engine are : (*a*) Patented built-up cylinder. The barrel is in two main parts, and the water-jacket is formed by a steel plate casing. Both casting and expansion stresses are eliminated. (*b*) Patent piston with internal diagonal ribs to prevent bending stresses. (*c*) Patented method of fixing piston on rod, allowing of longitudinal adjustment. (*d*) Improved piston rod packing. (*e*) Patented water-cooled exhaust valve box and seat, the exhaust valve itself not being water-cooled. (*f*) Simplified valve gear. (*g*) Powerful servo-motor governor.

The piston and rod are water-cooled and all water discharges are open for inspection purposes. The engine is of simple and strong construction, arranged for ease of accurate alignment, and free to expand when working without distortion or stress. All water-jackets and internal parts are easily accessible for inspection and cleaning.

Experience with a recent installation of these engines showed that they can be relied upon to run for 6,000 hours without overhauling, and on inspection after that period the cylinders and piston rings were found to be in excellent condition, and all the main working parts free from appreciable wear.

Browett-Lindley Gas Engines.

Messrs. Browett-Lindley & Co. Ltd., Patricroft, have developed a vertical gas engine of the ordinary four-stroke cycle type for direct coupling to electric generators and other purposes.

The engines are made with two, three, four, and six cylinders ranging in power from 60 to 750 b.h.p. A number of these engines have been supplied for such industrial work as driving mills, etc., and are very satisfactory in operation.

The sectional view of a four-cylinder engine given in fig. 9 shows the accessibility of these vertical engines. The design allows the piston to be easily removed and the cylinder covers are quite free from valves or other gear. The valve gear is quite simple, hardened steel cams are used to operate the valves and the cam roller guides are of the piston type. Both the inlet and exhaust valves can be readily removed for inspection when desired, and the latter are provided with renewable seats.

The governor fitted to these engines is very powerful and the working parts are lubricated by oil under pressure, so that reliable operation can always be expected. Forced lubrication is provided for all of the principal bearings on the engine, the oil being supplied under pressure from a valveless pump.

Features of the Browett-Lindley engines are the simple design, the absolute freedom from back firing, and the equal distribution of power to each cylinder at all loads. A large number of installations are at work on town and producer gas, and very economical running is obtained.

The lowest heat consumption recorded with these engines is 9,540 B.Th.Us. per b.h.p., and the highest 10,260. The mechanical efficiency of the engines is about 85 per cent. A cyclical regularity suitable for driving alternators in parallel can be obtained without the need of excessively heavy flywheels. The weights of the standard engines vary from about 2 to 2½ cwts. per horse-power.

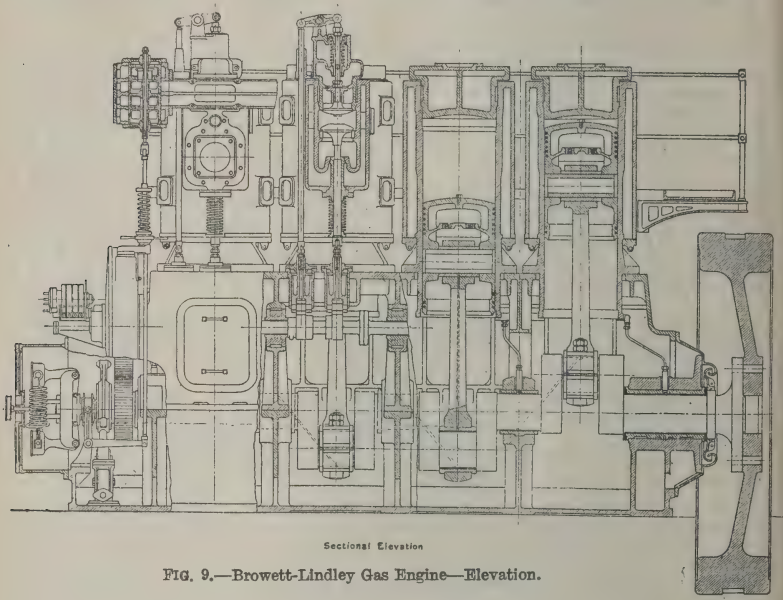


FIG. 9.—Browett-Lindley Gas Engine—Elevation.

FULLAGAR GAS ENGINES.

An important development of the opposed piston type of engine appears in the recent two-stroke design of the late Mr. H. F. Fullagar (fig. 10).

Each 'unit' comprises *two* open-ended cylinders placed side by side; each cylinder contains two pistons as in the Oechelhauser design, but in the Fullagar design opposite pistons of each cylinder are connected by diaginal rods as indicated, thus dispensing altogether with return connecting rods, while a *two*-throw crankshaft suffices for the four pistons of the unit.

The obliquity of the tie-rods is small, and the side thrusts due to this obliquity are taken by the crossheads and guides shown above A and C; it will be seen that pistons A and D are connected, as also are B and C, by long diagonal rods. An explosion between A and B drives B downwards, thus actuating the left-hand crank, and simultaneously drives A upwards, thus actuating the right-hand crank through the tie-rod connecting A and D; the crankshaft accordingly receives as the result of each explosion a practically pure turning couple, or 'torque.' It will also be observed that as the cylinders are open-ended there are no vertical stresses set up in the framing of the engine when running; hence the Fullagar engine may be expected to be light in relation to its power output.

The engine works on the two-stroke cycle, and thus each cylinder furnishes one working impulse per revolution. As a unit includes two cylinders, each *unit* furnishes *two* working impulses per revolution. Stationary engines for land installations usually comprise two or three units, furnishing four or six working impulses per revolution. In the case of great power, or where height is limited and the speed must be high, as e.g. in submarines, engines would consist of even four units. The usual inlet and exhaust ports are indicated in fig. 10; the charge is supplied at a pressure of between 2 and 3 lbs. per sq. in. by gas and air pumps, which may be driven by the engine.

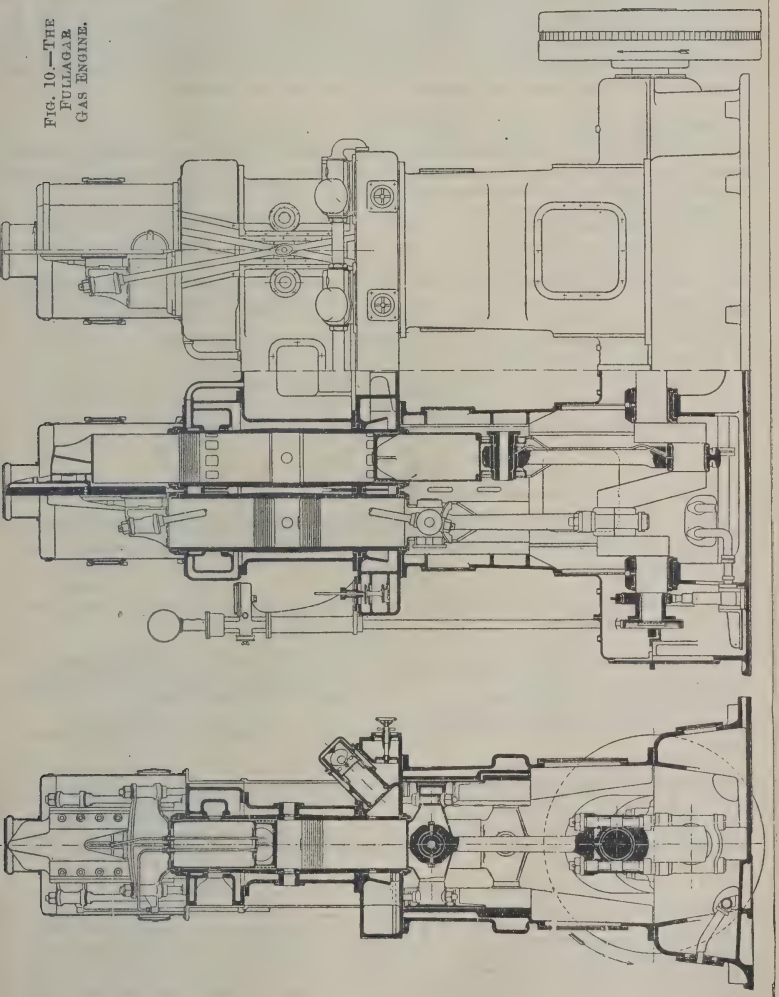


FIG. 10.—THE FULLAGAR GAS ENGINE.

The upper guides are modified to act as scavenge air pumps, the upper crosshead being fitted to operate as pistons, unless separately driven blowers or pumps are required.

The Fullagar engine may be arranged to run in either direction ; it is only necessary to alter the timing of the fuel admission valve and the ignition.

An experimental gas engine of 550 b.h.p., constructed by Messrs. W. H. Allen, of Bedford, to the designs of the Fullagar Engine Ltd., has been installed at the Newcastle Electricity Supply Company's station at Gateshead-on-Tyne ; this engine consists of *two* units, the cylinders being of 12 ins. bore, while each piston has a stroke of 18 ins. The normal speed is 250 revolutions per minute, corresponding to a piston speed of $\frac{250 \times 18}{6} = 750$ ft. per minute.

Sectional views of this engine are given in fig. 10.

If p denote the mean effective pressure in lbs. per sq. in. within a cylinder during the working stroke, then the work done upon *each* piston in foot-lbs. is $p \times \frac{\pi}{4} d^2 \times \frac{s}{12}$. Where d and s are respectively the bore and piston stroke, in inches.

As each cylinder contains two pistons, the work done by each cylinder per working stroke is $2 \times p \times \frac{\pi}{4} d^2 \times \frac{s}{12}$ foot-lbs., and this is the work done per cylinder per revolution of the crankshaft. Now a unit comprises two cylinders, and hence the work done by a unit per crankshaft revolution is $2 \times 2 \times p \times \frac{\pi}{4} d^2 \times \frac{s}{12}$ foot-lbs., that is $\frac{\pi}{12} \cdot pd^2s$ foot-lbs. Accordingly if the crankshaft makes n revs. per minute, the indicated horse-power is given by :—

$$\text{I.H.P.} = \frac{1}{33{,}000} \cdot \frac{\pi}{12} \cdot pd^2sn \text{ per unit} \quad . \quad . \quad . \quad . \quad . \quad (19).$$

As the Gateshead engine includes two units, its i.h.p. will be twice this, or :—

$$\text{I.H.P.} = \frac{\pi}{33{,}000 \times 6} \cdot p.d^2sn \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (20).$$

Though the mechanical and thermal efficiency of this type of engine is high, the ratio of $\frac{\text{B.H.P.}}{\text{I.H.P.}}$ on the experimental engine was only about 0·8, as for experimental purposes the air blower and gas pumps were of a somewhat temporary character ; hence 550 b.h.p. corresponds to $\frac{550}{0{\cdot}8} = 690$ i.h.p. roundly.

Putting 690 for i.h.p., 250 for n, 12 for d, and 18 for s, in Eq. 20 we get as the value of the mean effective pressure :—

$$p = 67 \text{ lbs. per sq. in.}$$

A 30-hour test by Prof. Hopkinson showed that this engine has an overall thermal efficiency from heat supplied to b.h.p., of 30 per cent., while the indicated thermal efficiency attains the value 37·6 per cent., the difference being due to the somewhat inefficient pumps.

The weight of the engine, including flywheel, is roundly 21½ tons: this corresponds to only about 87½ lbs. per b.h.p., which is much lighter than other stationary gas engines of the same power.

A 2,000 h.p. engine, constructed by Messrs. Belliss & Morcom, Ltd., of Birmingham, to the designs of the Fullagar Engine Ltd., of Gateshead, was started during 1918 in a Waste Heat Station on the North-East Coast, using coke-oven gas of a calorific value of about 440 B.Th.U. per cubic foot (net value). This engine has six cylinders, i.e. three Fullagar engine units with 12 pistons. The cylinders are 18-inch bore and 27-inch stroke, the speed being 171·4 r.p.m. The engine is of the totally enclosed forced lubrication type, the overall dimensions over engine and alternator being :—

Length, 38 ft. 7½ ins. Breadth, 15 ft. 3½ ins. Height, 21 ft.

The approximate weight of the engine, including all auxiliaries but without alternator, is 110 tons. The piston heads are oil-cooled and scavenge air is supplied by a separate electrically-driven blower, the gas-charging pumps being coupled directly to the crankshaft of the engine. The preliminary full load trials have shown a gas consumption of under 30 cubic feet per kilowatt hour, with an electrical output of 1,250 k.w. net at the generator terminals (i.e. after deducting the amount of power required by all auxiliaries). The direct-coupled alternator supplies electricity to the Newcastle Electricity Supply Company's system.

The Fullagar system is being developed for use with liquid fuel by Messrs. Cammell, Laird & Co. Ltd., of Birkenhead, John Brown & Co. Ltd., David Rowan & Co. Ltd., Dunsmuir & Jackson, Ltd., and Palmer's Shipbuilding and Iron Co. Ltd. (*Merz & McLellan.*)

(See also Section XXXIII.)

Other Gas Engine Makers.

Among other manufacturers may be mentioned Messrs. Robson of Shipley, who build a number of horizontal engines, the Anderson Foundry Co., Glasgow, and Bates & Co., Denton. In addition there are a number of oil engine makers who developed their engines, under stress of war conditions, to use town and producer gas instead of oil, when the latter was so difficult to obtain.

Marine Gas Engines.

A certain number of gas engines have been built for marine work in Holland and in America, but very little has been done in Great Britain, although Messrs. Hindley, London and Bourton, Dorset, have constructed engines for such purposes. Marine gas engines are also made by Messrs. Gardner.

In 1919, ships propelled by gas engines first crossed the Atlantic. One, the *Bessie A. White*, is of a net tonnage of 594 tons, and has a 200 b.h.p. gas engine with suction producer. Another vessel laden with 1,400 tons of lumber propelled by a 200 b.h.p. engine made a most successful crossing.

The *Wilhelmina* is one of the largest ships fitted with gas engines, this being propelled by a 350 b.h.p. gas engine, and two suction producers are installed. The American plants usually consist of Wolverine engines and Galusha producers.

The type of marine gas engine most commonly employed is the Van Rennes, built in Holland, but this has not been manufactured in sizes beyond about 200 i.h.p. The 150 i.h.p. four-cylinder engine, of which many examples have been built for coastal cargo-carrying boats, has a cylinder bore of 290 millimetres and a stroke of 300 millimetres, the speed of revolution being 300 per minute. The compression pressure adopted is 150 lbs. per square inch and the mean effective pressure is about 95 lbs. per square inch. The fuel consumption is approximately 1 lb. of anthracite per b.h.p. hour. The motors are directly reversible.

Prices and Weights of Gas Engines.

The prices and weights of gas engines vary considerably, depending on the type and design, but may be taken as from about 15*l.* to over 20*l.* per horse-power at the makers' works. The weight is largely affected by the type and design, engines being single or multi-cylindered, slow speed or high speed, horizontal or vertical, the different designs being necessary to suit the various requirements.

Thermal Efficiency of Gas Engines.

The brake thermal efficiency of four-stroke gas engines has risen from 14 per cent. in 1812 to 32 per cent. in 1908; the following table from Sir Dugald Clerk ('The Gas, Petrol, and Oil Engine,' p. 243) illustrates the rise in efficiency:—

Indicated and Brake Thermal Efficiencies of Four-Stroke Gas Engines from 1882 to 1908.

(*Sir Dugald Clerk, F.R.S.*)

Year.	Experimenter.	Engine.	Bore & Stroke. inches.	Efficiencies per Cent.		
				Mech.	Indic. Thermal.	Brake Thermal.
1882	Slaby	Deutz	6·75 × 13·7	87·6	16	14
1884	Thurston	Crossley	8·5 × 14	84·2	17	14·3
1888	Soc. Arts	Crossley	9·5 × 18	86·1	22	18·9
1888	Soc. Arts	Griffin (6 cycle)	9·02 × 14	80·9	21	17
1888	Kennedy	Beck (6 cycle)	7·5 × 15	87·3	21	18·3
1892	Capper	Crossley	8·5 × 18	82·0	22·8	17·4
1898	Robinson	National	10 × 18	87·0	28·7	25
1900	Humphrey	Crossley	26 × 36	83·0	31	25·7
1900	Witz	Cockerill	51·2 × 55·1	81·7	28	22·9
1905	Inst. C. E.	National	14 × 22	85·5	35	29·9
1907	Burstall	Premier	16 × 24	77·1	41·5	32
1908	Hopkinson	Crossley	11·5 × 21	87·5	36·8	32·2

In tests made on a Crossley-Otto engine in 1882, 1 i.h.p. hour was obtained with an expenditure of 23·7 cubic feet of London gas, while at the Society of Arts trials, held in 1888, a Crossley engine consumed 20·55 cubic feet per i.h.p. hour. Sir Dugald Clerk found, in 1894, when testing a Crossley engine, that the consumption of gas (Openshaw) per i.h.p. hour was as low as 14·5 cubic feet.

At the present time it may be taken that the consumption of town gas per b.h.p. hour at full load varies from 15 cubic feet to 25 cubic feet per hour, according to the size of the engine, and also according to the heating value of the gas. In a test carried out by J. H. Greenhill, of Belfast, on a Stockport gas engine, the gas consumption was 16·83 cubic feet per b.h.p. hour, this being obtained on a 50 b.p.h. engine, which was not being worked up to its full capacity.

The increased efficiency that has been obtained in the best-known forms of engines is probably due to greater compression of the gas before it enters the cylinder, and to some lesser extent to improved means of displacing the burned gases from the cylinders.

Large stationary gas engines are now very commonly of the horizontal tandem double-acting four-stroke type, as with this arrangement a working impulse is obtained at every stroke. Pistons and piston-rods are of course always water-cooled in such engines.

Piston speed in large gas engines has reached 800 to 850 feet per minute. Mean pressures of 85 to 95 lbs. per sq. in. can be obtained in the cylinder with gas of 110 B.Th.U., though engines are usually rated on an assumed 70 lbs. only.

Gas Engine Starters.

Large gas engines are very usually started by means of compressed air pumped by the engine, when running, into a reservoir. They may be started by means of a small gas engine, after the fashion of the barring engine for steam-engines. This small engine must be able to compress the charge of the large cylinder or one of them sufficiently to ignite; or gas and air may be pumped into the cylinder by a small engine and ignited just as the engine is turned off its dead point.

The Wells Starter.—The Wells Bros. starter consists of a small hand-pump fitted at the rear end of the combustion chamber. The action of this pump is to force gas into the cylinder, the crank of the engine being already fixed in the forward position; the action of a valve then permits the pumping of air into the cylinder, and upon the proper mixture being obtained the charge is ignited by ordinary means.

The Clerk-Lanchester Starter.—The action of this starter depends upon a preliminary explosion in a separate vessel, which forces a compressed mixture of gas and air into the engine cylinder which is then exploded.

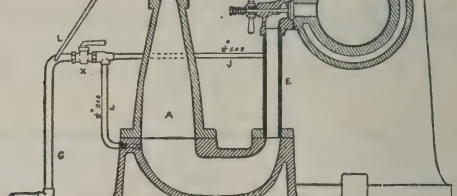


FIG. 11.—The Clerk-Lanchester Starter.

A (fig. 11) is a chamber outside and separate from the engine, and of a capacity rather greater than that of the cylinder, with which it is connected by a pipe E and check valve W. The crank being set at about 15°, gas is turned on by a tap X from the gas main G, and flows into the chamber by the pipe J, mingling with the air therein and forming an explosive mixture. At the same time gas flows into the chamber by the pipe shown. When the mixture is so far formed as to be inflammable it lights at the jet Y, and a little later becomes of sufficient explosive strength. The tap X is then closed, and, the ejecting pressure ceasing, the flame at Y shoots back, ignites the gaseous mixture in the chamber, and this forces the gas in E into the cylinder under a pressure of about 50 lbs. per square inch, and forms there a compressed mixture which, on ignition, gives an average pressure in the cylinder of about 85 lbs. per square inch, and starts the engine and its load.

THE GAS, PETROL, & OIL ENGINE

VOLUME II.

THE GAS, PETROL AND OIL ENGINE IN PRACTICE.

A Complete Treatise on the 'Explosion' Engine. 838 pp. and 481 Illustrations.

BY

Sir DUGALD CLERK, D.Sc., F.R.S., M.Inst.C.E.

Member of Council of the Institution of Mechanical Engineers; Vice-Chairman of the Royal Automobile Club and Chairman of the Expert and Technical Committee; Member of Council of the Royal Society of Arts, etc.

AND

G. A. BURLS, M.Inst.C.E.

Special Lecturer to the University of London on Internal Combustion Engines; Member of Council of the Institution of Automobile Engineers; Whitworth Exhibitioner. Author of 'Aero Engines.'

Price 28/- net.

UNIFORM WITH THE ABOVE

VOLUME I.

Thermodynamics of the Gas, Petrol, and Oil Engine, together with Historical Sketch. With 5 Plates and 126 Illustrations in the Text. 8vo. 16s. net.

The two volumes together give a comprehensive account of the principles and practice of Internal Combustion Engines of all types.

LONGMANS, GREEN & CO.,

39 Paternoster Row, London, E.C. 4.

New York, Bombay and Calcutta.

HEENAN & FROUDE, LTD.,

WORCESTER, ENGLAND.

Manufacturers and Specialists in

HIGH-CLASS SCIENTIFIC MACHINERY

Specialities

AIR FILTERS.	For the ventilation of Turbo-Alternators, Generators, Air Compressors and Diesel Engines, etc.
AIR COOLERS.	For the ventilation of Cinemas, Hotels, Workshops, Offices and Mines; also for filtering and extracting micro-organisms in Breweries.
AIR HUMIDIFIERS.	For the humidification of air in Textile and Tobacco Factories, etc.
AIR DEHUMIDIFIERS.	For the ventilation of Ammunition Factories in humid tropical climates; also for Doping Shops in Aeroplane Works, etc.
DYNAMOMETERS.	For rapidly ascertaining the exact B.H.P. of any description of Engine.
ELECTRIC TRUCKS.	For use on Railway Platforms and Docks; also for General Workshop Haulage purposes.
OIL COOLERS.	For cooling the oil of quenching tanks in the Heat Treatment of Steel.
REFUSE DESTRUCTORS.	For the Hygienic disposal of Towns' Refuse with the maximum production of steam.
REFRIGERATING MACHINERY.	For Ice-Making and Cold Storage Equipment.
STRUCTURAL STEELWORK.	For Bridges, Steel Framed Buildings, Piers, etc.
WATER COOLERS.	For cooling the circulating water of Internal Combustion Engines, Air Compressors, Refrigerating Plants, etc. Also general Industrial purposes.

F. 1661

The Fielding and Platt Starter.—Arranged in close proximity to the engine is an air receiver, into which air is pumped under pressure. After gas has been admitted into the engine cylinder, indicated by a flame at a junction pipe, compressed air is admitted into the cylinder from the receiver, and the mixture is ignited at the moment of combination.

The Tangye Starter.—The action of this starter depends upon a previous mixture of air and gas in a separate receptacle, which is passed into the engine cylinder and there exploded.

The Simplex Starter.—A simple method of starting a gas engine is that used in the 'Simplex' gas engine. In this engine an explosive mixture enters the cylinder during the third or expansion stroke. Therefore, to set the engine in motion it is necessary to turn the flywheel by hand until the piston has moved through three-quarters of its second forward stroke : a mixture then enters the cylinder owing to the vacuum caused by the forward movement. The flywheel is then reversed, which has the effect of compressing the mixture, and the electric current (which is the ignition method used in this engine) is turned on and the whole charge is exploded. Although the explosion is practically one of low pressure, it is sufficient to start the engine on its work.

In engines considerably above 100 h.p. a small gas engine may be used as a starter.

Cooling Water for Internal Combustion Engines.

With stationary engines a cooling water tank or reservoir is usually provided, and in such cases the loss by evaporation varies from 0·2 to 0·4 gallon per b.h.p. hour ; with large gas engines it is usual to employ cooling towers. The water is pumped from a well through the engine jackets, etc., and passes thence to the top of the tower ; falling to the bottom, it returns to the well at but little above the atmospheric temperature. With a cooling tower the loss by evaporation is greater than with a cooling tank, and commonly amounts to from 0·4 to 0·5 gallon per b.h.p. hour. From 30 to 35 gallons of cooling tank capacity is required per b.h.p.

The 'Heenan' Water Cooler (p. 1107) is particularly suitable for these installations, and in addition to occupying small space has the advantage that it consumes only approximately 0·1 to 0·2 gallon of water per b.h.p. hour.

The ordinary standard sizes of these machines vary in capacity from 625 gallons of water per hour up to 55,000 gallons per hour, which the machines are capable of cooling from 120° down to 90° F. under temperate climatic conditions.

As an example, a *medium* size cooler of the type in question is capable of dealing with the following problems and providing the corresponding water temperatures :

Application.	Quantity g.p.h.	Water Temperatures.	Heat extracted per Hour.
1. Petrol engines and dynamometers . .	10,000	170°/100° F.	7 million B.Th.U.
2. Gas, oil, and Diesel engines . . .	,,	120°/90° F.	3 ,, ,,
3. Steam-engine condensers . . .	,,	105°/85° F.	2 ,, ,,
4. Air compressors	,,	85/°75°.F	1 ,, ,,
5. Refrigerating plant	,,	72°/67° F.	500,000 B.Th.U.

DATA RELATING TO COOLING WATER USED IN INTERNAL COMBUSTION ENGINES.

Type of Engine.	Bore and Stroke. Ins.	B.H.P.	Cooling Water Temperatures.			Gallons circulated through Jackets, etc., per B.H.P. hour.	B.Th.U. removed by cooling Water per B.H.P. hour.
			Inlet. °F.	Outlet. °F.	Rise of Temp. °F.		
Normal petrol car engines	—	15 to 75	160	200	40	7·5	3,000
Diesel, 3-cyl.	17·75 × 27	360	54	103	49	5·62	2,750
Diesel, 1-cyl.	11·8×18·1	40	60	100	40	6·25	2,500
Oechelhauser	26·5×37·5	500	72	108	36	5·9	2,125
Nuremberg double-acting tandem	33·5×43·3	1,200	60	100	40	7·5	3,000
National single-cyl. horizontal	22·5×30	140	60	140	80	3·5	2,800
National 6-cyl. tandem vertical	22×24	750	58	100	42	6·5	2,730

The water necessary for cooling the pistons and valves is also included in this table in the cases of engines so provided.

Rosseline.

This medium (*Boilerine, Ltd.*) is for the purpose of obviating the incrustation which takes place in water-jackets when salts are present in the cooling water. There are no acids in the preparation, so that joints or attachments cannot sustain any injury. Where scale is already in existence, the action of Rosseline is to cause it to flake and crumble. An average of a quarter pound of Rosseline per brake h.p. per week should be used, the proportion being one pound per 1,000 gallons of water, the approximate quantity of water used to keep a cylinder cool being four gallons per b.h.p. per hour.

Parts of Gas Engines.

In the following formulæ (mainly from Guldner), a maximum explosion pressure of 350 lbs. per square inch is implied.

1. *Cylinders* are of hard, close-grained cast iron; for the inner wall (i.e. working barrel) the working stress may be taken in design at 1,500 lbs. per sq. in. to reduce wall thickness and distortion under heat. If d be the cylinder bore, in inches, and t the wall thickness, then :—

$$t = \cdot 047\ d + \cdot 375 \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (21)$$

the ·375 being added as an allowance for reboring, etc. Cylinders up to about 8 ins. bore may have cylinder walls not less than $\frac{11}{16}$ in. thick if cast in one, or $\frac{5}{8}$ in. if with separate working barrels. For bores of 24 ins. and above, the wall thickness may be diminished gradually, or by steps, until at the open end it becomes :—

$$t = \cdot 02\ d + 0 \cdot 5 \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (22)$$

2. *Pistons* are of close-grained cast iron; in large engines cast steel is sometimes used. Piston rings are of medium hard, but not very brittle, cast iron. The rings are usually parallel and are of the Ramsbottom type.

3. *Gudgeon, or wrist pins* are usually of steel with a hardened outer surface; the diameter δ may be estimated from the formulæ :—

$$\delta = 0 \cdot 35 \sqrt[3]{d^2 l_o} \text{ ins.} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (23)$$

where l_o is the distance from centre to centre of the gudgeon pin lugs, in inches. The intensity of bearing pressure at the moment of explosion should not exceed about 1,800 lbs. per sq. in. of projected area of bearing; this leads to the formula for the length, l, of gudgeon bearing :—

$$l = 0 \cdot 15 \frac{d^2}{\delta} \text{ ins.} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (24)$$

The gudgeon bush is of phosphor bronze; sometimes white-metal lined in larger sizes.

4. *Connecting Rods* in small engines are usually drop-forgings of mild steel; in large engines steel forgings machined all over are used. Connecting rods are treated in calculations as long columns supported at the ends; a factor of safety of 12 is usual; Euler's formula then leads to the result that the full diameter, $\triangle$, of a rod of circular section may be :—

$$\triangle = 0 \cdot 128 \sqrt{d\,\mathrm{L}} \text{ ins.} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (25)$$

where L is the length of the rod in inches. Towards the gudgeon end, the diameter may be diminished to ·9 or ·8 $\triangle$. The big end of the connecting rod is very commonly of marine type; when of more than about 5 ins. diameter this bearing is usually of cast iron or cast steel, white-metal lined; for smaller sizes bronze is general.

5. *Crankshafts.*—For large engines high-grade steel forgings with an u.t.s. of at least 70,000 lbs. per sq. in. and 20 per cent. ductility in 8 ins.; or open-hearth steel of u.t.s. at least 65,000 lbs. per sq. in. and 18–20 per cent. elongation in 8 ins. may be used. Recently, in special cases, nickel steel has been adopted with an u.t.s. of about 98,000 lbs. per sq. in. and 21 per cent. elongation in 8 ins.

For ordinary steels the allowable working stress is about 12,000 lbs. per sq. in. If s be the stroke, in inches, then H. Allen gives for the crankshaft diameter, D :—

$$\mathrm{D} = 0 \cdot 42 \sqrt[3]{d^2 s} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (26)$$

With the higher pressures occurring in engines of the Diesel type (see p. 1667) the constant 0·42 must be increased to 0·52 in this equation.

Crank-pin diameter may be about 1·1 times the crankshaft diameter; the length should be about $0 \cdot 18 \frac{d^2}{\mathrm{D}}$ ins. The bearing pressure in crankshaft bearings should be about 400 lbs. per sq. in. of projected area of bearing.

The crank web may have a depth of 1·33 to 1·66 D and a thickness of 0·85 to 0·55 D.

Valves of Internal Combustion Engines.

The valves of present-day internal combustion engines of all kinds are practically all of the 'Poppet' or 'Mushroom' type. In small sizes the valves and stems are in one piece, and usually either of medium carbon steel or nickel steel. Large valves, especially when water-cooled, have cast-iron discs and medium carbon steel stems; such valves in some cases attain large dimensions, the Siegener Co., for example, having built Koërting type engines with valves 19·68 ins. in diameter and a lift of 3·14 ins. Valve cages and seats are of hard close-grained cast iron. Inlet valves are sometimes automatic; exhausts must be mechanically operated. It is preferable to place valves with their axes vertical whenever possible. The mean velocity of gas through the valves is 5,000 to 6,000 ft. per minute in good practice.

Flywheels.

6. *Flywheels* when of cast iron in one piece should not have a rim velocity exceeding 100 ft. per second. If b be the breadth, and R and r the outer and inner radii of the rim, all in feet, and if n denote the number of revolutions per minute, then the kinetic energy, or stored work in the rim, is:—

$$\text{Kinetic energy} = 0{\cdot}1205\,(R^4 - r^4)\,b\,n^2. \quad \text{Foot-lbs.} \quad (27)$$

The 'Cyclic Irregularity' or 'Coefficient of Fluctuation of Speed' is the ratio borne by the difference between the maximum and minimum angular velocity of the crankshaft in any one complete cycle, to its mean angular velocity.

The Cyclic Irregularity is often denoted by $\frac{1}{m}$; its permissible value varies with the nature of the work to be done by the engine; the following are a few typical cases:—

Nature of Work.	m
Ordinary workshops; wood-working, pumping, etc.	30–40
Belt-driven continuous-current dynamos in series	80
,, ,, in parallel	120
Belt-driven alternators in parallel	180
Cotton-spinning machinery	200
Direct-coupled alternators in parallel	250

Mathot has proposed the following formula for rapidly calculating flywheel sizes:—

$$W = C \cdot \frac{m\,P}{R^2 n^3} \cdot 10^6 \text{ tons} \quad (28)$$

where:—

W = weight of flywheel rim in tons.
R = mean radius of rim, in feet.
P = b.h.p. of engine.
n = normal speed, in revs. per min.
C = a numerical coefficient.

The following are suitable values for C:—

		C
1.	For single-cylinder, single-acting engines	265
2.	For two single-acting cylinders side by side; cranks at 180°	167
3.	,, ,, opposed; cranks at 180°	125
4.	,, ,, side by side; cranks at 0°	125
5.	,, ,, opposed; cranks at 0°	167
6.	,, ,, tandem; cranks at 0°	125
7.	For four single-acting cylinders opposed two and two; cranks at 0°	42
8.	For single-cylinder, double-acting engines	167
9.	For two double-acting cylinders side by side; cranks at 0°	42
10.	,, ,, tandem, on same crank-pin	42

The total weight of the flywheel is about 1·4 W tons.

Flywheels are frequently more massive than the above calculation indicates, especially in cases where the speed fluctuation must be kept small even although one or more explosions be missed due to governor action.

Breakages in Internal Combustion Engines.

The following table is compiled from a wide induction of cases from the records of Insurance Companies, and indicates the relative frequency of failure of the several organs of internal combustion engines:—

ANALYSIS OF FAILURES OF PARTS OF INTERNAL COMBUSTION ENGINES.

Description of parts which are believed to have given way first.	Average before 1904.	1904-1908.	1909.	1910.
	Per cent.	Per cent.	Per cent.	Per cent.
Valves and valve-gear	30·1	33·3	29·6	42·8
Cylinders and cylinder ends	19·3	16·1	15·4	8·5
Pistons	9·7	5·0	2·7	5·1
Connecting-rods and their bolts	11·9	10·3	9·4	9·1
Main shafts	5·1	11·2	13·4	7·9
Governors and governor-gear	5·1	7·0	5·4	3·4
Silencing-boxes and exhaust-pipes	2·8	3·6	1·3	2·8
Flywheels and driving-drums	5·1	5·4	0·7	2·8
Clutches and couplings	1·7	0·0	0·0	0·6
Frames and pedestals	3·4	1·8	1·3	1·7
Bolts *	4·6	1·5	2·0	1·7
Total wrecks, cause not ascertained	0·6	0·4	0·0	0·6
Main driving-ropes and belts	0·6	0·6	0·0	0·0
Miscellaneous	—	2·2	7·4	4·5
Gas-producer plants	—	1·6	11·4	8·5
	100·0	100·0	100·0	100·0

* These do not include bolts in connecting-rods, valve-gear, or other moving parts, the bolts in these parts being tabulated with the parts themselves.

Notes on Fixing a Gas Engine.*

(F. R. Parsons.)

Foundations.

The outline of the foundation of an engine will be determined by the over-all dimensions of its bed or framing. Races for the flywheels must be allowed for if their diameter is such that clearance cannot be obtained otherwise. In a general way a margin of from 3 ins. to 6 ins. all round on engines of from 5 to 25 b.h.p. will meet the case. Above this and up to 100 b.h.p. a margin of from 9 ins. to 12 ins., according to needs and the formation of the bed, will be required. The depth of the concrete foundation depends a great deal upon the character of the subsoil. An engine standing on a good gravel bed would require much less concrete depth than one standing on a clay soil, or made-up ground. Engines up to 10 b.h.p. should in a general way have a bed at least 2 ft. to 2 ft. 6 ins. thick; up to 100 b.h.p. this should be increased to from 3 ft. 6 ins. to 4 ft. Modern-type horizontal gas engines which have a box-section framing and little cylinder overhang are much less susceptible to vibratory troubles, hence the depth of the bed need not be so excessive.

Opinions vary considerably as to the composition of concrete for engine beds. Always, however, it is much more profitable in the long run to have a fairly strong mixture, thereby diminishing considerably the setting period, and ensuring a good firm job. The following mixture has been found to be a highly satisfactory one for any class of high-speed machinery or engines of any power: broken rubble (stones or bricks), 4; clean river sand, limestone, or granite chippings, 4; cement, 1. Dirt or loose soil adhering to the material detracts from its homogeneity and delays setting. It is a good plan to wash well the stones and larger material from a hosepipe before mixing. Each layer of concrete should be well rammed as it is laid, so as to force the material to the outer extremities of the bed. If the latter cannot be completed right out of hand, the old surface should be well wetted before proceeding with the new material.

Holding-down Bolts.

Always leave ample bolt freedom in the concrete bed so that there shall be no difficulty of getting the engine into position, and also permitting it within certain limits to be moved in either direction if so desired. Use square-necked bolts and washer-plates with square holes, the plates being of ample area in order to resist the pull enforced by the nuts. Grout the bolts in with a mixture of clean fine sand and cement in equal parts when the exact position of the engine has been found, and it has been levelled and set. Holding-down bolts are better not arranged below the concrete foundation, but embedded therein; say, allowing from 6 ins. to 18 ins. of concrete,

* *Mechanical World*, July 18, 1919.

according to the size and thickness of the bed, below them. Set the bolts and plates on this, then proceed with the filling in. Bolts need not be tied together with a single long plate unless one happens to come so close to the outside of any part of the bed as to have insufficient hold. Always set the bolts in a wood-frame templet having holes in it similarly placed to those in the engine bed.

Size of Gas Meter.

Given the brake horse-power of the engine, the size of a meter required to pass a sufficient quantity of gas per hour can be ascertained by the following rule: Multiply the b.h.p. of the engine by the constant 3·4, then add the constant 5, the result being the size of the meter in 'lights.' For example, suppose the engine we are erecting is 60 b.h.p., then $3{\cdot}4 \times 60 + 5 = 209$. As this rule allows ample margin, we should therefore decide upon a 200-light meter.

Size of Gas Service.

To find the correct size of gas pipe to connect between the meter and the engine, the following rule may be applied: Multiply the meter size, in lights, by the constant 0·008, then add the constant 0·75, the result being the bore of the service pipe in inches. Thus, using the previous example, we have $200 \times 0{\cdot}008 + 0{\cdot}75 = 2{\cdot}35$ ins. In this case, if the connection between the meter and the engine was fairly straight, and not over-long or containing many curves, a pipe 2¼ ins. bore would be ample. But if a considerable distance divided the two points indicated, or many bends were introduced, it would be better to use a 2½ in. bore pipe.

Exhaust Pipes.

Generally, engines from 1 to 5 b.h.p. may have an exhaust pipe from 1 in. to 1¾ ins. diameter; 5 to 30 b.h.p., from 1¾ ins. to 2½ ins.; above this and up to 100 b.h.p., from 2½ ins. to 5 ins. in the bore.

Circulating Water.

Almost all gas engines require on an average about 4½ gals. of water per indicated horse-power hour, in order effectively to reduce cylinder temperature, this assuming the temperature of the return water not to exceed 150° F. To effect this by means of circulating tanks would be equivalent to an amount of from 25 to 30 gals. of water per b.h.p. as the contents of the tanks. The effective height of a tank should not be less than 2½ to 3 times its diameter. The higher the tank is situated above the cylinder jacket the more brisk becomes circulation. To keep the bottom of a tank at or about cylinder level causes circulation to be sluggish, and promotes the accumulation of sediment and deposit. For this reason it is generally best to keep the tank bottom at least a foot above the centre of the engine cylinder. A ball tap should be provided to supply cold water to the coldest tank, and if the engine is heavily worked it may also be necessary to arrange for an overflow from the hottest tank. Engines up to 25 b.h.p. can be served from 2 ins. diameter pipes; above this to 50 b.h.p., 2½ ins.; up to 100 b.h.p., 3 ins. to 3½ ins. diameter pipes should be used. The return pipe should be sloped all the way to the tank.

General.

In setting a gas engine on its concrete bed it is advisable to keep the cylinder end slightly the highest, an amount of about ¼ in. in every 3 ft. being ample. This assists in draining the waste oil from the cylinder and other parts of the engine to a point where it may be drawn off and collected.

The exhaust box should not be built solid into the ground or in a pit. It is advisable to mount it on iron rollers placed upon a flat stone or on an iron plate. This provides the necessary means for expansion, without which the joints and connections might suffer.

The gas-inlet pipe to the meter, or from the meter to the engine, should on no account be placed close alongside the hot exhaust pipe. This tends to raise the temperature of the gas, thus making it more rarefied and of less heating value per cubic foot. The cooler the gas admitted the more dense is the charge and the more powerful the explosion.

SECTION XXX

PART III

OIL ENGINES.

DIESEL ENGINES.

A Diesel engine is a prime mover actuated by the gases resulting from the combustion of a liquid or pulverised fuel injected in a fine state of subdivision into the engine cylinder at or about the conclusion of a compression stroke. The heat generated by the compression to a high temperature of air within the cylinder is the sole means of igniting the charge. The combustion of the charge proceeds at, or approximately at, constant pressure.

The Diesel engine, fig. 12, although an internal combustion engine, does not work on the same principle as the gas or ordinary oil engine where the combustible charge drawn into the cylinder is ignited and burnt instantaneously. In the case of the Diesel engine, only pure air is drawn into the cylinder and compressed, and the oil is injected as a fine spray into this highly compressed air and burns gradually as long as the injection is maintained. During this whole period the pressure in the cylinder does not rise much above the compression pressure.

The engines work on the four- and two-stroke cycle, and run according to requirements at low or high speed. When working on the four-stroke cycle, air at atmospheric pressure is drawn into the cylinder during the first stroke. It is compressed during the second stroke to a pressure of about 480 lbs. per sq. in. Owing to this increase in pressure the temperature of the charge rises to about 1,000° F. which is sufficient to ignite the spray of oil injected during part of the third or working stroke. As soon as the injection stops, the gases expand and the exhaust valves open shortly before the piston reaches the end of the third stroke. The products of combustion are expelled during the fourth stroke of the piston.

In the case of the two-stroke engines the air, instead of being drawn into the cylinder by the engine piston, is delivered thereto under low pressure and is also used partly to expel the exhaust gases. After the air-inlet ports or valves have closed this charge of pure air is compressed to the same pressure (about 480 lbs. per sq. in.) as in the case of the four-stroke engine. The fuel is injected in the same manner as in the four-stroke engine. The gases expand as soon as combustion is completed and the exhaust ports are uncovered by the piston shortly before reaching the bottom dead centre, the gases being expelled by the entering charge of air.

The thermal efficiency at full load reckoned on the b.h.p. is about 30 per cent. and the fuel consumption at this load about ·44 lb. per b.h.p. The products of combustion are invisible and odourless.

Nearly all four-stroke engines are built of the vertical type, with a strong cast-iron 'A' frame, the upper part of which forms the outer cylinder of the water jacket; into this upper part is fitted a liner of special close-grained cast-iron, which is water-jacketed for almost its entire length.


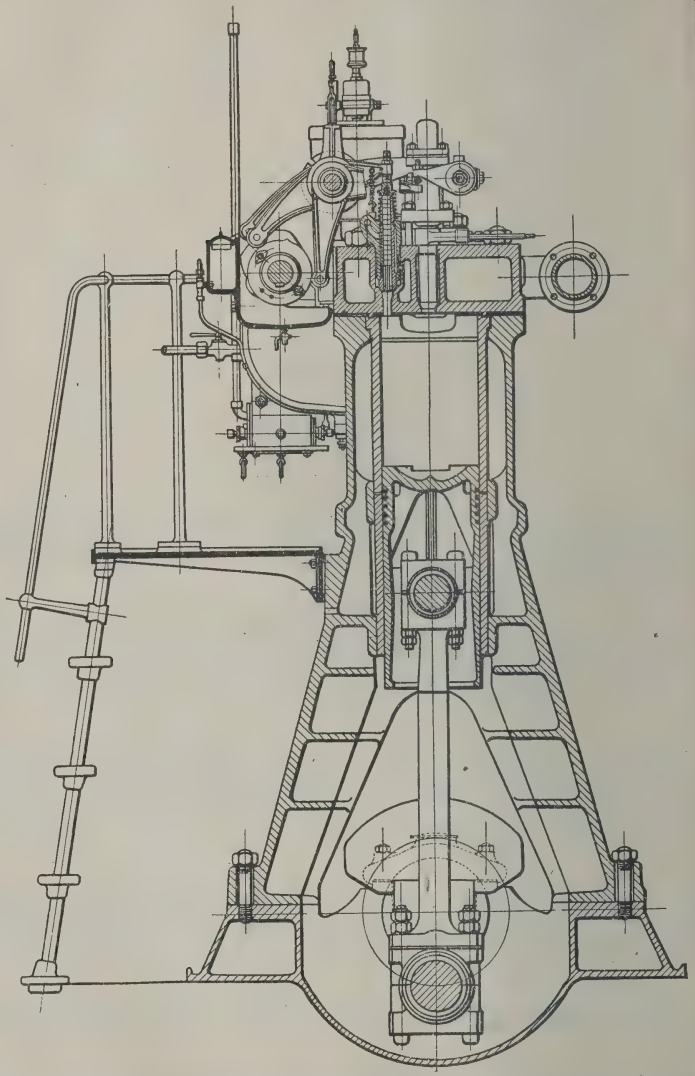


FIG. 12.—The Diesel Engine.

MIRRLEES, BICKERTON & DAY, LTD.

HAZEL GROVE, STOCKPORT.

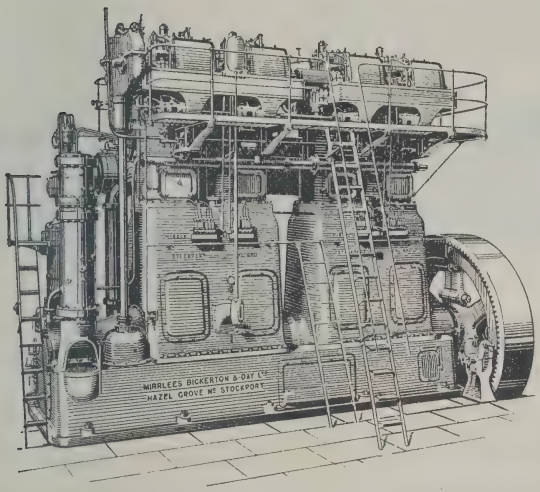MAKERS OF THE
DIESEL OIL ENGINE



Four-cylinder, 500 B.H.P. Engine, Crosshead type.

Mirrlees-Diesel Engines embody the results of 25 years' experience in their manufacture and are made in works specially equipped and devoted exclusively to their manufacture.

LONDON OFFICE:

7 GROSVENOR GARDENS, WESTMINSTER, S.W.1

F. 1668

SULZER

TWO-CYCLE DIESEL MARINE ENGINES



M.S. CONDE DE CHURRUCA,
fitted with Two SULZER Engines 1,250 h.p. each.

DISTINCTIVE FEATURES:

1. Valve controlled port scavenging.
2. Cylinder Heads of simplest design.
3. Pistons effectively cooled by sea-water.
4. No valves opening into combustion space.
5. Can use cheapest grade fuel oils.
6. Fuel consumption ·480 lbs per B.H.P.
7. Small number of working parts.
8. Saving in weight and cargo space.

SULZER TWO-CYCLE ENGINES TOTALLING
500,000 H.P. ARE IN OPERATION
BUILT IN UNITS OF FROM 300 TO 10,000 H.P.

SULZER BROS.

31 BEDFORD SQUARE,
— LONDON, W.C. 1. —

MANCHESTER: 21 Spring Gardens. **SWANSEA:** Castle Buildings.

F. 1669

The cylinder cover contains four valves, the two large ones being the exhaust and air-inlet valves. The central valve is a needle valve which admits fuel to the cylinder about 1° or 2° before the completion of the compression stroke, gradually to 15° to 20° of the working stroke. The fourth valve controls the admission of the compressed air which is used in starting the engine. The cover is thoroughly water-jacketed to prevent the valves from overheating.

The exhaust and air-inlet valves are of the mushroom type and are self-contained in cast-iron casings which bed on cone seatings in the cover, so that should it be necessary to replace a valve, with the minimum loss of time a complete valve and casing can be substituted.

The starting valve, like the suction and exhaust valves, opens into the cylinder. The fuel admission valve opens outwards, except in the Burmeister & Wain engine, in which it opens inwards; failures of cylinders occasionally occur through this valve sticking up and thus permitting leakage of fuel oil, and also of the very high pressure blast air, into the cylinder, causing either pre-ignition of the charge or the attainment of a compression pressure much in excess of the normal. To guard against these contingencies some makers of Diesel engines fit relief valves in the cylinder heads, and in view of some recent experiences with these engines this would seem to be a very desirable practice.

All valves are closed by springs and opened by rocking levers actuated from the horizontal camshaft, which is supported by ring-lubricated bearings, bolted to the cylinder frame. The camshaft derives a half-speed motion through spiral gearing from a vertical shaft, which in turn is driven by spiral gearing from the crankshaft. In some engines there is a direct gear drive from the crankshaft to the camshaft. This vertical shaft drives a centrifugal governor acting directly on the suction valve of the fuel pump.

A cast-iron trunk piston is adopted, made sufficiently long to be a guide in the cylinder and to take the side thrust due to the angularity of the connecting rod, and is provided with six to seven 'Ramsbottom' rings to maintain a gas-tight cylinder; in recent large engines the crosshead type is, however, becoming usual.

The fuel pump of the engine operates as follows:—

The plunger draws a full stroke of oil from a reservoir into the pump chamber past the inlet valve. This quantity of oil is in excess of that required for combustion. The excess is returned past the suction valve on the delivery stroke by the action of the governor which holds open the inlet valve for a sufficient length of time to allow the excess fuel drawn in to escape into the suction pipe. In this way the amount of fuel delivered to the engine is precisely the amount required to do the work taken from the engine at that instant.

This method of governing by adjusting the fuel supply in accordance with the demand of every working stroke permits of a power stroke at every other revolution in each cylinder, as there is never any actual cut-out.

A feature of the Diesel engine is the facility and certainty with which it starts, it being quite possible to start the engine within 45 seconds.

The engine is able to burn any class of oil, from refined to the cheap petroleum residue, as well as tar oil, and provided the calorific value is not less than 18,000 B.Th.U.'s per lb. the makers guarantee the consumption at full load not to exceed 0·4 lb. per b.h.p. hour in the larger sizes and 0·5 lb. per b.h.p. hour in the smaller sizes.

The following figures, given by the Diesel Engine Co., are from a test of a 300 b.h.p. engine:—

Fuel per i.h.p. hour	0·309 lb.
,, b.h.p. ,,	0·417 ,,
Mechanical efficiency	73 per cent.

or a thermal efficiency reckoned on the b.h.p. of 30·0 per cent. and a thermal efficiency reckoned on the i.h.p. 40·7 per cent.

The initial pressure being generated by gradual compression of atmospheric air, the engine runs quietly and without shock, and there is no sudden rise of temperature during the whole cycle. There is no danger of an explosion owing to the high flashpoint of the oil which is used as fuel. The engine is therefore safe for marine purposes.

The fuel consumption of Diesel engines increases per b.h.p. hour as the load decreases, but the increase is not so marked as in the case of steam engines. The following figures (p. 1670) relating to a test carried out by the writer on a 300 h.p. high-speed Sulzer-Diesel engine are representative and indicate approximately the average extent of the increase in specific consumption with a decrease of load. It will be noticed also that at the maximum overload of 30 per cent. the fuel consumption per b.h.p. hour is also increased. High-speed engines are always slightly less economical than those of the low-speed type. The amount of cooling water usually required in ordinary Diesel engines is in the neighbourhood of four to six gallons per b.h.p. hour, the outlet temperature being generally 150 to 120 degrees.

TEST ON 300-H.P. FOUR-CYLINDER HIGH-SPEED DIESEL ENGINE.

B.H.P.	Load.	Lbs. per b.h.p. Hour.
75	Quarter	·635
150	Half	·465
225	Three-quarters	·435
300	Full load	·42
330	10 per cent. Overload	·425
360	30 per cent. Overload	·44

MIRRLEES-DIESEL ENGINES.

The Mirrlees-Diesel engines are now built in large numbers at the works of Messrs. Mirrlees, Bickerton & Day, Ltd., Hazelgrove, near Stockport.

At the end of October 1921 Messrs. Mirrlees, Bickerton & Day, Ltd., had built and on order about 757 engines of an aggregate of 128,000 b.h.p.; the average h.p. per engine is about 170 b.h.p. The units supplied range from 40 b.h.p. to 750 b.h.p.

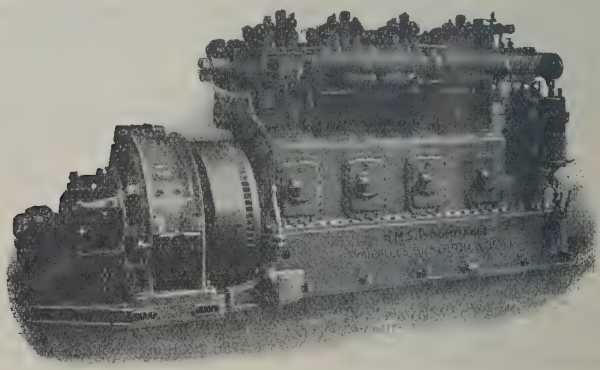


FIG. 13.—Mirrlees-Diesel Four-cylinder Type, direct coupled to a dynamo.

The larger engines are of the usual inverted vertical marine type; the standard open, three-cylinder, single-acting, four-cycle 150 b.h.p. engine runs at 250 revolutions per minute, and has cylinders 12 ins. bore with 18½ ins. stroke. With every engine a definite guarantee of the fuel consumption at various loads can be given, and with this size is as follows:—

Full load	0·44 lb.	per b.h.p. per hour.
¾ load	0·46	,, ,,
½ ,,	0·52	,, ,,
¼ ,,	0·69	,, ,,

The Mirrlees Company also specialise in enclosed high-speed Diesel engines, many of which have been supplied to the British Navy; fig. 13 illustrates the four-cylinder type direct-coupled to a dynamo, and engines of this high-speed type have been supplied to numerous British as well as to several foreign warships. Recent developments include the adaptation of engines to use tar oil as fuel, and the introduction of a 'crosshead' type engine for large sizes.

The crosshead type enclosed engine is a distinct advance in the construction of these Diesel engines and the largest size at present made is the six-cylinder 750 b.h.p. engine. The speed is 200 r.p.m. and the engines are also built in three and four-cylinder units.

The arrangement of fuel pump on Mirrlees engine using tar oil as fuel is illustrated on page 1816.

Belliss & Morcom Diesel Engines.

Diesel engines of 50 and 80 b.h.p. per cylinder are standardised by Belliss & Morcom, Ltd., Birmingham, in single, two, three, and four-cylinder units. They are of the vertical open design and run at 230 and 210 r.p.m.

Accessibility is one of the features of these engines; the control levers are within easy reach from the floor, and enable one man to start the engines. The platform, being bolted to the front of the cylinder, gives access to the valves and valve gear. The valve operating gear is self-contained on the cylinder head, and the cams run in oil baths. This obviates the necessity of lubrication by hand and results in a clean working engine.

The air compressor for injecting the fuel is fitted with disc valves and is of the three-stage type, the air from each stage being cooled and the oil separated. The suction and delivery valves can be removed quickly for examination.

The following are total works costs for one of the 220 b.h.p. four-cylinder engines, in their own power station, for the year ending September 30, 1915.

(1) *Fuel Oil.*—279,390 units have been generated in 2,404 hours with a consumption of ·725 lbs. per k.w. hour. The load factor for the year is 85 per cent., giving a corresponding mean consumption of ·47 lbs. per b.h.p. hour, taking dynamo efficiency as 87 per cent. at this mean load. 90·2 tons of fuel have been weighed in, and, based on the average price paid during the year, gives a figure of ·26 penny per unit generated.

(2) *Lubricating Oil, Waste, etc.*—Special care has been exercised to keep down the lubricating oil consumption, as much prejudice exists against the Diesel engine in this direction. By repeatedly filtering the used oil and afterwards disposing of it at sixpence per gallon to an outside firm the cost of oil, waste, polishing paste and all sundries has been brought to the low figure of ·014 penny per unit generated.

(3) *Wages.*—This represents the whole of one driver's time, which in a station of more than one engine could be reduced somewhat; it also carries part of the wages of the other drivers in the station, and works out at ·094 penny per unit generated.

(4) *Maintenance.*—This includes a thorough overhaul at Easter, repairs of water cooler, attention to dynamo, and motor for water pump, valve cleanings and various other odd jobs to plant. ·05 penny per unit generated.

Tabulated, these give the following total works cost:—

1. Fuel	·26
2. Lubricating oil, waste, etc.	·014
3. Wages	·094
4. Maintenance	·05
Per unit generated	·418*d.*

Cole, Marchent & Morley Diesel Engines.

Diesel engines ranging in power from 50 to 500 b.h.p. are manufactured by Cole, Marchent & Morley, Bradford, and are of the usual vertical open type. Four cylinder sizes developing 50, 75, 100 and 125 b.h.p. each are adopted.

The cylinder head is simplified by the method of operating the valves by levers worked from a camshaft located near the bottom of the water-cooled portion of cylinder. In addition, this arrangement makes it possible completely to enclose the cams, and the rockers and rollers, so that the whole of the gear can run in an oil bath, thereby reducing noise and wear. Starting is simplified by this arrangement, as the levers can be operated from below without any additional links.

The valves are arranged with their own independent casings, efficiently water-cooled, and all of the valves can be removed and replaced without disturbing the valve gear or pipe connections. The air compressor for injecting the fuel is of the two-stage inter-cooled type driven direct from the engine crankshaft. The engines are suitable for direct coupling to electric generators and for rope and belt driving.

Tests of a 100 k.w. three-cylinder engine taken at Basingstoke showed that the fuel consumption for full, ¾, ½ and ¼ loads respectively are ·646 lb., ·694 lb., ·705 lb. and 1·09 lb., per k.w. hour.

Hick, Hargreaves Diesel Engines.

Hick, Hargreaves & Co. Ltd., Bolton, manufacture Diesel engines of both the open and enclosed design in powers from 50 to 1,020 b.h.p., as shown in the following table :—

Symbol and Type.	B.H.P.	R.P.M.	No. of Cyls.	Net Weight of Engine in Tons.	Net Weight of Normal Flywheel in Tons.	Cyclic Irregularity.	Fuel Consumption. Full Load. Lb.	¾ Load. Lb.	½ Load. Lb.
'A.' Enclosed Trunk Piston.	50	250	1	9	7	1/120	0·48	0·5	0·58
	100	,,	2	16	7	1/174	0·46	0·49	0·54
	150	,,	3	22	5·75	1/144	0·45	0·47	0·53
	200	,,	4	30	4	1/120	0·43	0·45	0·51
'C.' Enclosed Trunk Piston.	80	250	1	18·5	13	1/120	0·48	0·5	0·58
	160	,,	2	25	13	1/138	0·46	0·49	0·54
	240	,,	3	33·5	10	1/138	0·45	0·47	0·53
	320	,,	4	40·75	7	1/138	0·43	0·45	0·51
	480	,,	6	58	7	1/174	0·42	0·44	0·5
'D.' Open Trunk Piston.	100	187	1	27	18	1/138	0·46	0·48	0·56
	200	,,	2	36·5	18	1/174	0·45	0·47	0·54
	300	,,	3	48·25	14	1/140	0·44	0·46	0·53
	400	,,	4	60	7	1/228	0·42	0·45	0·5
	600	,,	6	85	7	1/330	0·41	0·44	0·49
'E.' Enclosed, fitted with Crosshead.	250	187	2	37·5	20	1/102	0·45	0·47	0·54
	375	,,	3	46·5	18	1/145	0·44	0·46	0·52
	500	,,	4	60	7	1/178	0·43	0·44	0·51
	750	,,	6	82	7	1/184	0·42	0·43	0·5
'H.' Open, fitted with Crosshead.	510	150	3	88	27·25	1/135	0·435	0·445	0·49
	680	,,	4	107·5	12	1/131	0·43	0·44	0·48
	1,020	,,	6	152·75	12	1/160	0·42	0·435	0·47

The engines are of the vertical four-cycle stationary type.

English Electric Co.'s Diesel Engines.

The Willans-Diesel oil engine is manufactured at the Rugby Works of the English Electric Company Limited, and since 1906 upwards of 45,000 b.h.p. have been supplied or are on order. These engines are in use in all parts of the world, driving all kinds of machines, centrifugal pumps, electric generators, etc., both direct coupled and by means of belts or ropes. They are made in the following standard sizes :—

B.H.P.	No. of Cylinders.	Speed R.P.M.	B.H.P.	No. of Cylinders.	Speed R.P.M.
100	2	250	335	4	220
150	3	250	500	4	200
200	4	250	300	6	250
250	3	220			

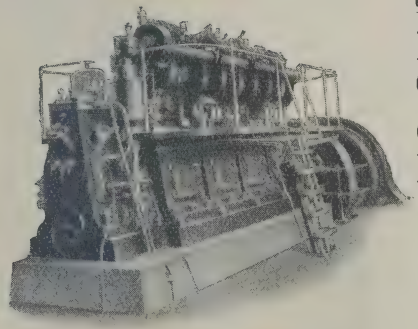
Up to and including 335 b.h.p., the engine is of the vertical open type, oil-ring lubrication being employed. In the 500 b.h.p. the crank chamber is enclosed and forced lubrication used. The air-compressor for supplying air for fuel injection and starting purposes is fitted on the end of the engine bedplate and driven from the crankshaft. The speed is controlled by a centrifugal governor, acting upon the inlet valve of the fuel pump, thus regulating the quantity of fuel exactly to the load. The consumption of residue oil is guaranteed not to exceed 0·41 to 0·46 lbs. per b.h.p. hour at full load, depending on the size of the engine, while at half load the consumption per b.h.p. hour is but 15 per cent. higher.

The engines are made to jigs and limit gauges, thus ensuring interchangeability of spare parts, which is of the utmost importance in cases where engines are installed in remote countries.

Schneider Diesel Engines.

Schneider & Co., Le Creusot, have had an extensive experience in the manufacture of large Diesel engines for land and marine purposes. One of the firm's experimental engines, a single cylinder two-stroke cycle type, has developed 1,200 h.p. at 150 r.p.m.

THE HICK - DIESEL OIL ENGINE



For Low Fuel Consumption.

Continuous heavy duty.

Ability to burn Low Grade : Fuels. :

The Hick-Diesel Oil Engine combines unique and distinctive features of design and construction, with the reputation of nearly a century for highest class Engineering. The most economical prime mover for the generation of Electric Power, Oil and Water Pumping, etc. Made in Standard Sizes ranging from 50 to 1,020 B.H.P. in both open and enclosed types.

HICK, HARGREAVES & CO. LTD.

BOLTON——————ENGLAND.

Sole Agents for the British Isles: **BANKS, WARNER & CO. LTD.,** ALBERT EMBANKMENT, VAUXHALL, **LONDON, S.E. 11.**

F. 1672

DIESEL ENGINES FROM STOCK.

HIGHLY satisfactory reports from users in all parts of the world confirm our claim that by virtue of high economy in fuel and labour, ease of control and compactness, Willans Diesel Oil Engines are, for some purposes, greatly superior to any other type of plant.

We are now in a position to offer for immediate delivery Diesel Engines of the following sizes:—

1100 B.H.P. at 250 R.P.M.
150 B.H.P. at 250 R.P.M.
200 B.H.P. at 250 R.P.M.
335 B.H.P. at 220 R.P.M.

The
ENGLISH ELECTRIC
Company, Limited.

HEAD OFFICE:
Queen's House, Kingsway, London, W.C.2.

Telephone: HOLBORN 830.
Telegrams: 'ENELECTICO, WESTCENT, LONDON.'



SEE ALSO OUR ADVERTISEMENTS ON GREY PAGE XIX AND FACING PAGES 667, 1177, 1558 & 1908.

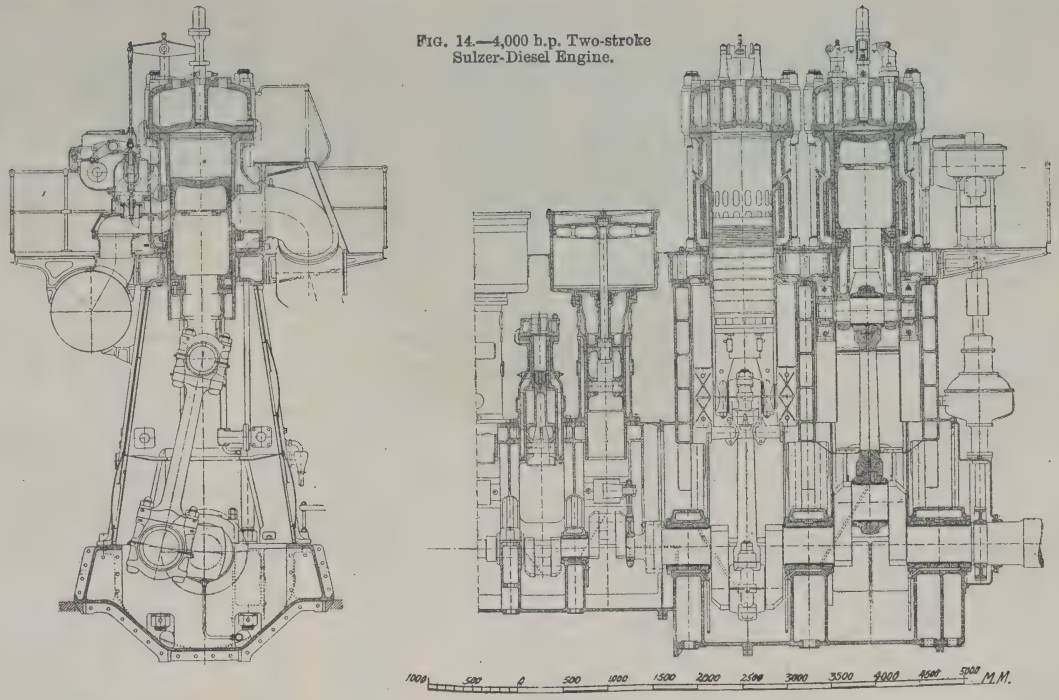


FIG. 14.—4,000 h.p. Two-stroke Sulzer-Diesel Engine.

Two-stroke cycle Diesel engines of various powers up to 2,400 h.p. have been made and a number of these have been in regular work for over seven years. Four-stroke cycle engines have also been made and give very satisfactory service.

The Schneider engines are of the vertical type, of both the open and enclosed design, and all of them are fitted with crossheads. The makers have also completed some double-acting stationary Diesel engines of the four-cycle type developing up to 2,600 h.p.

Sulzer-Diesel Engines.

Sulzer Brothers of Winterthur, Switzerland, make stationary engines of the four-cycle type from 50 to 1,000 b.h.p. Their wide experience has led this firm to employ the two-cycle principle for higher powers and for all marine engines.

Fig. 14 shows an early design of a 4,000 b.h.p. six-cylinder engine with direct-driven scavenging pump. Engines of this type have been running a number of years, but the design has since been considerably improved, notably in regard to the cylinder cover, which is now made in the form of a simple symmetrical casting as shown in fig. 50, page 2045, Marine Engines.

The reciprocating scavenge pumps are also replaced, in the larger engines, by rotary turbo-blowers, supplying scavenge air at a pressure of 1½ to 2 lbs. per square inch. This simplifies the engine, and enables a greater shaft horse-power to be obtained from a given size of engine using the same mean indicated pressure in the cylinder.

For further particulars of the Sulzer two-cycle engine see Section XXXIII, 'Marine Oil Engines.'

Beardmore-Tosi Diesel Engines.

These engines are made in various sizes up to 2,400 b.h.p. and are of the four-stroke cycle enclosed type. The range of horse-power developed per cylinder is 15 to 400 b.h.p., the dimensions ranging from 180 mm. to 630 mm. Crossheads have been adopted in both the land and marine types. The Tosi design gives the greatest freedom from trouble for the piston and gudgeon pin.

Great attention has been paid to the design of the details of these engines, especially to the lubrication and water circulating systems. The consumption of fuel oil is between ·42 and ·45 lb. per b.h.p. per hour. The engines are also very economical in lubricating oil, as only about ·0045 lb. per h.p. is required for the slow-speed engines.

A feature of the Tosi engines is that they will fire regularly at speeds as slow as 40 r.p.m., at which speed compression pressure is 450 lbs., as against 485 lbs. per square inch at normal speed. One reason for the capacity to run at such a reduced speed is the fact that the phase and duration of the fuel injection period can be regulated according to the speed of the engine. At low speeds the quantity of fuel injection air is reduced and the cooling effect of the excessive quantity that would enter the cylinder, were no means of regulation provided, is entirely absent.

Other Makers of Diesel Engines.

Geo. Ansaldo & Co., Rome, manufacture Diesel engines of large powers, and a number are in regular use. One of their 1,100 b.h.p. two-stroke cycle engines running at 100 r.p.m. was recently subjected to severe tests to determine the flexibility and overload capacity. It was found possible to run the engine at as low a speed as 35 r.p.m., and the following are particulars of the overload trials:—


Overload Trial on 1,100 b.h.p. Ansaldo Diesel Motor.

Overload.	Duration of Trial in hours.	R.P.M.	B.H.P.	Fuel Oil consumption, lbs. per b.h.p. hour.	Lubricating Oil consumption, lbs. per b.h.p. hour.
47 per cent.	1	127·7	1,622·5	0·445	—
30 ,,	30	116	1,433	0·440	·006
12 ,,	5	104·7	1,232·5	0·425	—

These figures dispose of any doubt as to whether the Diesel engine as now constructed can be over-loaded for a long period without damage.

Diesel engines are also manufactured by Carels Frères, Ghent, in various sizes up to 3,000 h.p. and are made in both the four-stroke and two-stroke cycles. These engines are of the open vertical type and a large number have been supplied. The Carels engine is one of the best known Continental designs.

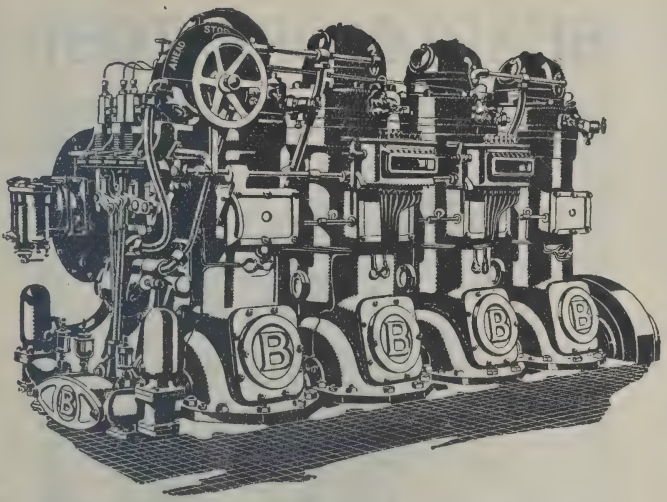(For further information on Marine types of the Diesel engine, see Section XXXIII., 'Marine Engineering.')



BEARDMORE OIL ENGINES

VALVELESS TWO-CYCLE TYPE

FOR CRUDE OR RESIDUAL OILS

10 to **600** B.H.P. One to Six Cylinders
MADE FOR LAND & MARINE PURPOSES

SIMPLE. RELIABLE.
ECONOMICAL. DURABLE.

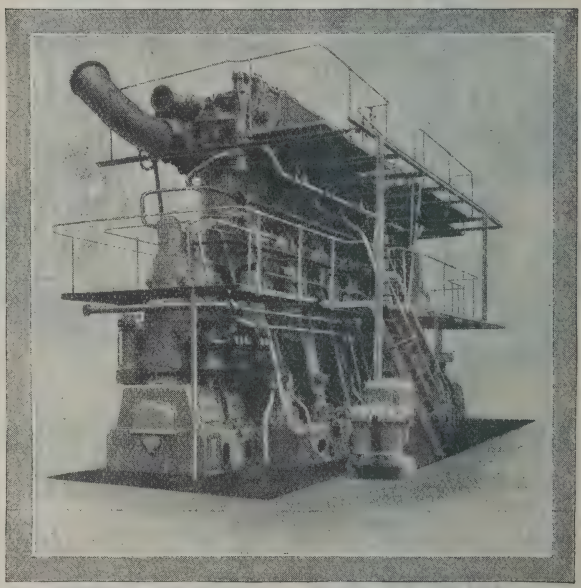
WILLIAM

BEARDMORE

AND COMPANY LIMITED.

REG. OFFICE: 36 VICTORIA ST., LONDON, S.W.1
WORKS COATBRIDGE, SCOTLAND

BEARDMORE-TOSI



DIESEL ENGINE

Patent valve gear. Exhaust valve troubles eliminated.
Remarkable and efficient cooling arrangements. Patent cylinder head.
The Beardmore-Tosi Diesel Engine embodies the latest and most approved Diesel Engine practice. :: Catalogues from—

WILLIAM
BEARDMORE
AND COMPANY, LIMITED.

PARKHEAD
GLASGOW
&
NAVAL CONSTRUCTION WORKS
DALMUIR——————SCOTLAND

F. 1675

Weight of Diesel Engines.

For land installations, considerations of economical production have resulted in cast iron being extensively used in the Diesel engine; due to this, and to the high pressures employed, the weight per b.h.p. is somewhat high; thus, including fly-wheels, Guldner gives as the weight per b.h.p. :—

A. In single-cylinder engines : 600 lbs.
B. „ two- „ „ 520 lbs.
C. „ three- „ „ 350 lbs.

In recent practice, and particularly in cases where weight reduction is of importance, as e.g. in Diesel engines for submarines, these figures have been largely reduced; this is effected by using materials of considerably greater tensile strength in place of cast iron, and weights as low as 300, 250, and 200 lbs. per b.h.p. for cases A, B, and C respectively, may be found. In high-speed engines the weight has even been reduced to as little as 60 lbs. per b.h.p. with four-stroke engines, and 45 lbs. with two-stroke designs.

The Diesel engine is more economical in fuel consumption than any other type of internal combustion engine, but in construction it is necessarily a somewhat costly type.

Cost of Diesel Engines.

The price of Diesel engines varies considerably, depending upon the design and speed, and may be taken as being from about 25*l.* to over 30*l.* per h.p. at the maker's works.

Diesel Engine Crankshafts.*

All shaft failures investigated owe their origin to lack of alignment of the main bearings. This is usually the result of unequal rates of wear of the several bearings supporting the shaft, though in some cases it can be traced to negligence during erection, or, in older engines, to defective foundations.

The following system of assuring perfect alignment of the shaft is recommended especially to those engineers who have no reserve plant and who have to get repairs done during the week-end.

If the engine is a 4-cylinder, take out bearing C first and micrometer it. Look up the log-book and ascertain how much it has worn since the shaft was last realigned. Then take out bearing A, micrometer it, and ascertain the extent of wear in the same period. If it has worn down $\frac{8}{1000}$ in., and bearing C has worn down $\frac{12}{1000}$ in., then scrape down bearing A $\frac{4}{1000}$ in. more, re-bed it to the shaft, or, preferably, to a special dummy journal, and then replace it. Treat all the bearings in like manner. If the engine is a 2-cylinder, or a single-cylinder unit, then probably the bearing adjacent to the flywheel is most worn. It therefore should be taken out first, measured up, and replaced, scraping only if found 'high' at one end. Then take out the other bearings and scrape them in accordance with the data obtained. In the case of a 3-cylinder engine, the probability is largely in favour of bearing B being the lowest, and this, therefore, should be taken out first.

Thus, where plant is not in excess, the engineer can readjust a bearing each week-end until the whole set is completely put in order, and he runs very little risk of heated bearings if he is careful. The system has its limits. It would not do to apply it in this manner if rate of wear were very variable.

It is necessary to dismantle the whole engine to make a good start with the system. If the engine has been very carefully erected, and is not more than a year or two old, then one may exercise his discretion and assume that any large differences in the thickness of the main bearing shells is due to difference in rate of wear.

As regards the subsequent adjustment, running clearance of main bearings, it is not usually feasible to measure this with feelers. Where possible, it is preferable to feel the lift in each bearing, and let the cap closer and closer until the bearing either heats (in which case scrape out the cap) or until the lift just disappears.

Recourse may be had to leads so long as they are considered only as a means of obtaining the *relative* and not the absolute clearance in a bearing. In the ordinary way, if one use 20 or 21 gauge lead wire, running clearance will be right if the lead squeezes out to $\frac{8}{1000}$ in. or $\frac{9}{1000}$ in. thick. If one uses 16 gauge, then this may squeeze to about $\frac{10}{1000}$ in. or $\frac{12}{1000}$ in. thick. The actual clearance is probably only $\frac{4}{1000}$ in. to $\frac{6}{1000}$ in. The difference between real and apparent clearance depends upon a number of factors. It should be borne in mind that leads do not show the true clearance in a white-metal bearing.

Best Proportion of Shafts.

Tensile strength, not less than 34 tons.
Ductility not less than 25 per cent. in 2 ins.

* Paper by P. H. Smith read before the Diesel Engine Users' Association, July 12, 1916.

Diameter of pins and journals, 0·525 to 0·54D.
Length of main bearings, 0·75 to 0·8D.
Length of big end pin, 0·525 to 0·54 D.
Thickness of webs not less than 0·32D, but centre to centre of cylinder made minimum possible, and any excess over the proposed length of pin and journal to be put into the webs.
Fillets to be not less than one-tenth the diameter of the shaft.
For details of Diesel engine parts see 'Marine Diesel Engines,' page 2035.

Alignment of Crankshafts and Engine Parts.*

(Geo. E. Windeler, M.I.Mech.E.)

Where small units are built up with separate bedplates and columns or crank cases, it is imperative to check the parallelism of the crankshaft journal from the planed surfaces of the bedplate. The other details which require alignment checking are the connecting rod and the piston, it being essential that the top and bottom bearings of the connecting rod are perfectly parallel and free from twist.

The following is a simple and efficient method for measuring the inaccuracies:—

Place into the bottom end of the connecting rod (fig. 15) an accurately ground mandril, say $\frac{5}{1000}$ in. or $\frac{6}{1000}$ in. less in diameter than the bore of the bearing. A similar mandril is placed in the top end bearing. Generally speaking this mandril is five to six times the length of

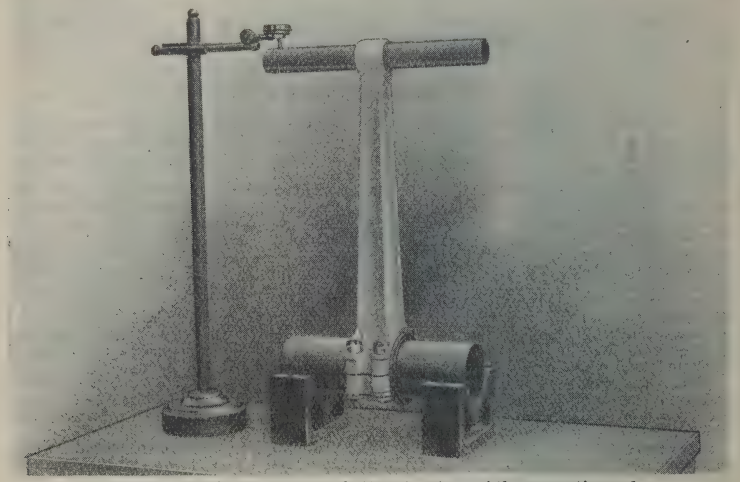


FIG. 15.—Testing the top and bottom bearings of the connecting rod.

the bearing. The whole is then placed vertically in two V blocks, and a scribing block fitted with a micrometer screw is then used to measure the height of the mandril at each end which projects through the rod. The difference between the two dimensions is the exaggerated amount of inaccuracy, and, assuming that the bar is five times the length of the bearing, then the actual amount of error on the connecting-rod bearing itself would be one fifth of the total error shown; so that if the test bar showed an out of parallel from one end to the other of $\frac{3}{1000}$ in., then the top end bearing of the connecting rod would be out of parallel with its bottom end bearing to the extent of $\frac{3}{1000}$ in. This is an instance of measuring, by exaggeration, very fine inaccuracies.

It is also desirable to test the rod to ensure that the holes lie perfectly parallel with each other in the vertical plane, that is to say, to ensure that the holes are not twisted with each other. To carry this into effect the rod is lowered down into a horizontal position (fig. 16) and a packing piece is placed under the rod immediately below the centre of the bearing. A scribing block with a micrometer screw is then used to test the height from one side to the other, in

* Abstract of paper on Alignment of Machinery read before the Manchester Association of Engineers, December 8, 1917.

the same way as the vertical test was carried out. If any twist occurs with small rods, this can be corrected by twisting the rod, but in large rods other means have to be adopted to remove the error.

The same method is adopted for testing whether the piston pinhole is at right angles to the piston (fig. 17).

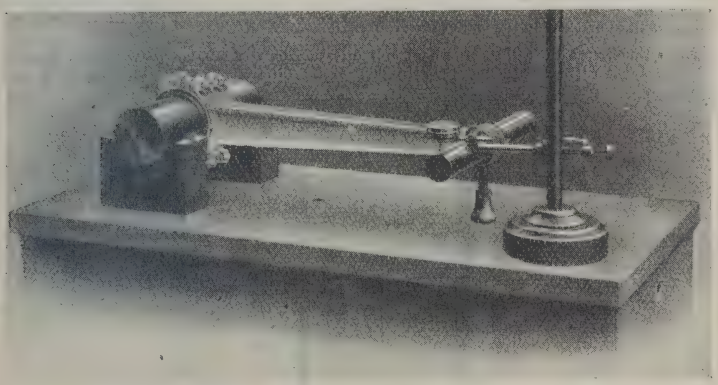


FIG. 16.—Testing the alignment of the holes with the vertical plane.

In moderate sized units the alignment of the cylinders and parts is often carried out by means of dummy parts which are accurately made, and may be regarded as a form of jig for testing the parts during the course of erection. With larger sized units this is not always practicable and other means have had to be resorted to to obtain the same degree of accuracy.

In large units such as are in general use to-day, and in which the rate of revolution is high and the running clearances very close—as, for instance, in a large vertical engine, say

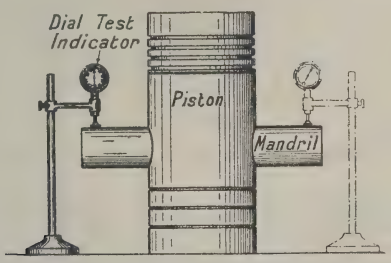


FIG. 17.—Diagram showing method of testing alignment of hole in piston for gudgeon pin.

20 ft. above the crankshaft, with the piston clearance $\frac{1}{1000}$ in. diameter when cold—it is imperative that the cylinder and guide should be at right angles to the shaft, and that the readings of the alignment should be accurately taken for tabulation. A fine wire is generally used for the alignment of the vertical compoents, but as it is a flexible member and gives to slightest pressure of contact really reliable data is not obtained from its use in the ordinary way.

The following describes a simple audible electrical device used in conjunction with the fine-wire system for accurately checking the alignment of engine parts :—

It is assumed that the engine bedplate is machined on the under side and parallel with the top side of the bedplate. The bedplate is then accurately levelled on parallel strips, both longitudinally and transversely, and supported by such strips at defined points. The crankshaft

is then placed in its bearings and tested for parallelism with the planed surface of the bed, and at the same time the shaft journals are tested for concentricity with each other by similar means to that described under small engines. Assuming this to be satisfactory, the columns are placed accurately in position and the cylinders placed on top of the columns. A fine wire is then stretched over the whole length of engine, the ends passing over uprights secured to the engine bed and adjacent to the ends of the crankshaft. Suspended at each end is a non-magnetic 'plumb bob' of sufficient weight to keep the wire taut. The wire is then set so as to intersect the centre lines marked on the end of the crankshaft.

The cylinders are then lined true longitudinally to this wire and correctly pitched one with another. Long wires are then passed through each cylinder, of sufficient length to pass

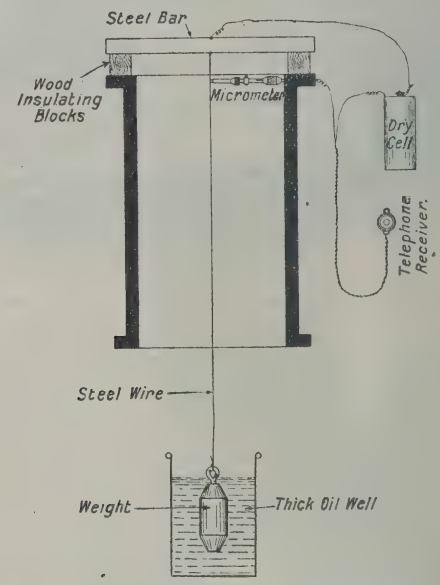


FIG. 18.—Diagram showing method of aligning cylinder using audible warning device.

between the crank webs, and a heavy 'plumb bob' is secured to each wire and immersed in viscous oil contained in a small vessel, to prevent oscillations of the 'plumb bob' and the wires. These wires are set accurately to the centre of the top end of the cylinders by means of the audible device, and readings are then taken at the top and bottom of cylinders and between the crank webs. The wire is suspended over a rounded knife-edge metal bar at the top end of the cylinder, in such a way as to prevent kinking and cutting of the wire, and this metal bar is supported on hard wood blocks from the top face of the cylinder. The use of wood blocks is necessary to insulate the metal bar from the engine parts. Connected to the metal bar by one of its terminals is a dry battery (fig. 18), the other terminal of which is earthed to the engine frame with a telephone receiver in circuit; then contact between the suspended wire and the cylinder will cause the electrical circuit to be closed.

The micrometer gauge is then set to half the diameter of the cylinder, less half the diameter of the wire, plus say $\frac{1}{2}$/1,000 of an inch. This setting allows $\frac{1}{2}$/1,000 in. pressure against the wire when the wire is set dead central at the top of the cylinder. The micrometer gauge is then inserted between the wire at the points named above, and if the gauge touches the wire the electrical circuit becomes closed by this contact and a distinct noise is transmitted through the telephone receiver. To enable the operator to have the use of both hands, the receiver may be held to his ear by means of an elastic band passed round his head. The micrometer gauge being adjustable, any 'plus' or 'minus' readings can be taken at will with a definite known amount

of contact pressure on the wire. The readings obtained are entered on a chart. By reference to this chart the foreman decides what action should be taken to rectify the error shown, and the preliminary and final records are filed for reference.

With this device it is possible to obtain the same readings consistently, and it has the advantage that it is portable and adjustable to any engine, either horizontal or vertical. It can be sent out to inspectors to check the alignment of engines which have been some time at work. Also the wear of the bore of the liners can be accurately recorded with the exact position at which the wear has taken place.

In multi-cylinder engines it is important that the crankshaft should be properly supported at each journal, otherwise springing of the shaft takes place at each compression and power stroke, which may ultimately result in fracture of the shaft. It is therefore important that the shaft and bearings should be periodically examined. One of the insurance companies has adopted a simple means of measuring the amount, and proceeds in the following manner:—

The engine is barred round with each crank on its respective top centre, and the distance between the crank webs is measured with a micrometer gauge at a definite point and recorded. Each crank is then barred down to its bottom centre, the distance between the crank webs again taken, and the difference between the two readings noted. A simple calculation gives a close approximation of the amount that the shaft is clear from its bearings, and a new bearing can be fitted by gauging the thickness of the existing shell from outside diameter to inside diameter and then making the new bearing thickness plus the amount calculated from the figures taken between the crank webs. This method can also be used to detect any want of alignment of outboard bearings of gas and oil engines, and is invaluable for this particular difficulty. It is a very accurate and reliable method, and has saved many cranks from ultimate fracture.

Cyclic Variation Recorders.

A number of arrangements have been made for the purpose of accurately recording the cyclic variations of the rotational speed of an engine; the first attempts were mainly with tuning-forks, and this form of apparatus was well developed by Manlove, Alliott & Co. A variation of this was first used by the writer to test the cyclic regularity of steam engines built by Davey Paxman & Co. in 1907.

In this apparatus the tuning-fork was replaced by an electric motor running at a constant speed and the records were taken on the peripheries of the flywheels, the flywheels having been suitably prepared.

Mirrlees, Bickerton & Day have taken tests of the cyclic variation of their Diesel engines in a similar manner, and the arrangement of the apparatus is as follows:—

On a base is formed a V, so that an ordinary lathe compound tool rest can be fitted to same, which tool rest is operated across the face of the wheel by a quick-pitch, square-thread screw, actuated by a heavy handwheel, so as to obtain as near as possible uniform movement across the space to be traversed, though this is not essential to the accuracy of the results.

Mounted on the compound rest is a small electric motor arranged in such a manner that it can be worked towards or away from the surface of the wheel by the compound rest. Secured on the end of the motor spindle is mounted a carefully balanced disc into which is inserted a hardened steel, accurately-ground pointer. Immediately below this is fixed a small bracket which holds another adjustable pointer vertically below the point of the rotating pointer on the disc when touching the face of the flywheel of the prime mover.

The object of the fixed pointer is to scribe a line in the form of a helix circumferentially on wax on the rim of the flywheel, whilst the duty of the rotating pointer is to cut short intersecting marks across these lines at constant intervals of time. These objects are obtained by moving the slide rest parallel to the surface of the wheel whilst the prime mover is running at normal revolutions and the electric motor at uniform speed.

The fixed pointer marks a helical line in the wax deposited on the periphery of the flywheel and the pointer marks off distances on this line at equal intervals of time. These distances are a record of the average speed of the flywheel during small intervals of time and from them a speed curve can be plotted.

It is essential that the points are in line vertically, so that the mark cut by the revolving pointer is bisected fairly accurately by the helical line. The electric motor, which is run at a high speed of revolutions, is supplied with current from an ordinary 12-volt motor-car lighting battery, which forms part of the equipment.

Generally speaking, the length of the record should be not less than 4 or 5 revolutions, though the number is only limited by the width of the flywheel surface and the pitch of helical line, which is usually about $\frac{1}{2}$ in. The motor is arranged at such a speed as to give a suitable number of readings on the periphery of the wheel, so that slight variations in the velocity of the rim can be detected. The distances between the marks are then carefully measured off with a steel tape and

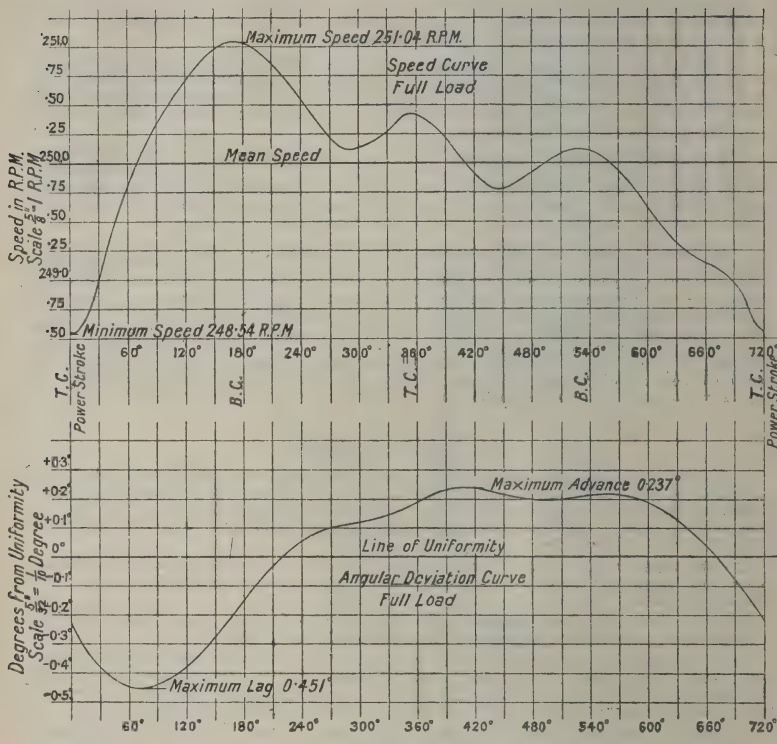


FIG. 19

Scale.—$\frac{5}{8}$ in. (i.e., one square) = 30° of angular movement.

vernier, and the figures obtained are plotted in graph form and show clearly the variations that occur in the speed of the prime mover.

This device has been used on different types and sizes of engines with good results.

The theoretical figures and graphs were based on information obtained from diagrams from actual engines several years before the results were taken by the instrument. The graphs shown on fig. 19 indicate these theoretical figures, and the graphs shown on fig. 20 are those produced by the information obtained with the Mirrlees, Bickerton & Day Cyclic Variation Recorder.

The novelty of the device lies in the use of the periphery of the flywheel of the prime mover as the recording drum, and the application to the flywheel of a delicate recording substance such as wax.

Having plotted a correct speed curve from data given by the trial, the angular deviation from true uniformity of rotation is obtained either (1) fairly accurately by direct calculation from the speed curve, or (2) very accurately by plotting another graph from the speed curve showing the changes in angular position of the flywheel relative to an imaginary wheel rotating uniformly.

The apparatus is inexpensive and of such a character that it can be readily manufactured and easily operated by any careful person with engineering experience. The data obtained can readily be transposed into scaled graphs by a skilled draughtsman.

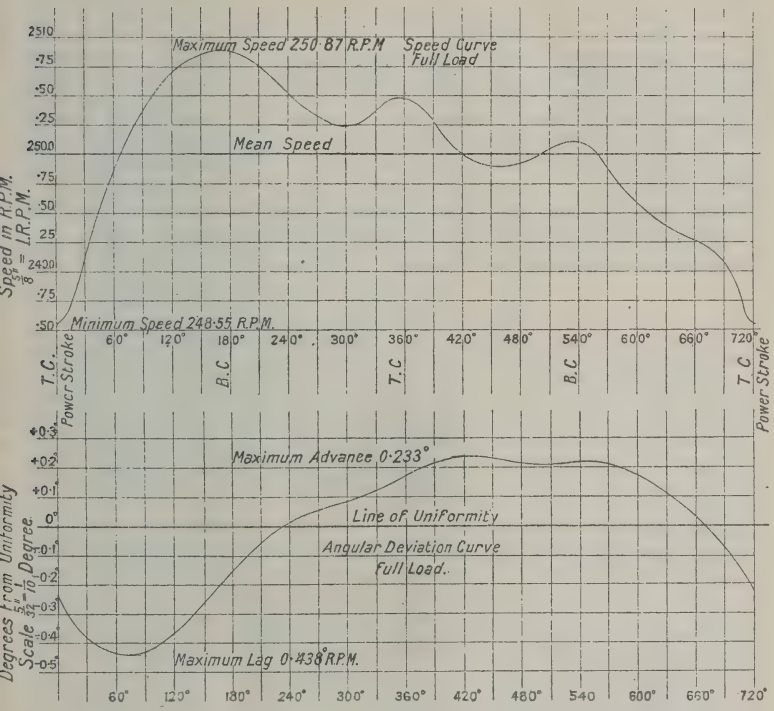


FIG. 20.

Scale.— $\frac{5}{32}$ in. (i.e., one square) = 30° of angular movement.

The amount of current used for operating the electric motor is very small, as its duty is to merely maintain at a constant speed the disc carrying the pointer, and to overcome the slight resistance offered by the pointer scratching the marks (one per revolution of the motor) on the surface of the wax.

The method adopted for securing the wax to the wheel is as follows :—The wheel is thoroughly polished and carefully rubbed down, whilst running, with turpentine ; the wax, which is pure beeswax, is carefully heated to a liquid state in a glue kettle and then plastered on to the surface of the wheel. The use of the glue kettle was found necessary, as if the wax were overheated during the process of warming it would not adhere to the surface, the overheating apparently reducing its resilience and causing it to become 'short.'

The thickness of wax deposited on the wheel should be about $\frac{3}{16}$ in. and turned down till it is about $\frac{1}{16}$ in. thick. It can be readily removed afterwards with a scraper, but it was found undesirable to use the same wax over and over again, as a certain amount of greasy matter (probably oil vapour condensed on the wax) mingled with it and destroyed its nature ; so that in carrying out experiments it is desirable to use fresh wax each time.

SEMI-DIESEL ENGINES.

A semi-Diesel engine is a prime mover actuated by the gases resulting from the combustion of a hydrocarbon oil. A charge of oil is injected in the form of a spray into a combustion space open to the cylinder of the engine at or about the time of maximum compression in the cylinder. The heat derived from an uncooled portion of the combustion chamber, together with the heat generated by the compression of air to a moderate temperature, ignites the charge. The combustion of the charge takes place at, or approximately at, constant volume.

The semi-Diesel engine is the simplest form of oil engine, especially if of the two-stroke cycle type, and can be arranged to work satisfactorily with practically the same range of fuel oil as the Diesel engine.

Moderate compression pressures of 150 to 200 lbs. per sq. in. are adopted, consequently the working pressures are low and a comparatively light and inexpensive engine is obtained. The majority of engines operate on the two-stroke cycle and have solid injection of the fuel.

The weight of the engines varies from about 1¼ to 2¼ cwts. per h.p., and the price at the makers' works is from about 12*l.* to 18*l.* per b.h.p. depending on the size.

Blackstone Crude Oil Engines.

In the Blackstone Company's crude oil engine a hot-bulb is used for ignition; air alone is compressed—as in the Diesel—though not to so high a pressure as to cause spontaneous ignition.

In these engines Scotch shale and other crude oils such as Texas, Borneo, and Russian, also petroleum residue, may be used efficiently without the aid of an abnormally high compression; ordinary refined petroleum may also be used. The compression of the charge is comparatively low, viz. 150 lbs. per sq. in. The fuel is injected into the cylinder at or near the end of the compression stroke by air compressed to a pressure of about 400 lbs. per sq. in. A very high compression is necessary to raise air to a sufficiently high temperature to ignite crude oils, therefore with a compression of only 150 lbs. some additional means had to be provided to ignite the charge. Ignition is effected by the employment of a dual spraying device, consisting of a main jet adapted to deliver its charge into the combustion chamber, and an auxiliary one, delivering a smaller charge into a bulb-shaped ignition chamber, heated at starting by a lamp and afterwards kept incandescent by the combustion of the fuel. This ignition chamber communicates with the combustion chamber by a port so arranged that the flame produced in the ignition chamber impinges upon and ignites the main fuel spray in the combustion chamber. The oil is delivered from a tank to the spraying device by a governor-controlled pump, and first reaches the auxiliary or igniter spray, all oil in excess of the quantity required for this overflowing into the main spray. This method ensures a charge of oil being injected into the igniter at every cycle, thus keeping it hot irrespective of the engine running light or loaded. The air compressor for the sprays is attached to the side of the cylinder and is worked by an eccentric on the crankshaft.

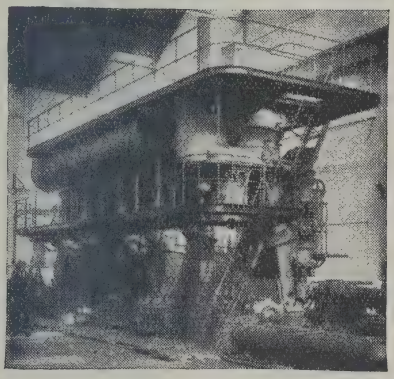
A great object kept in view in the design of this engine has been to prolong the initial pressure of the explosion in the cylinder. The pressure line on the indicator diagram is parallel to the atmospheric line for some distance along the working stroke, thus resembling those obtained from a steam engine working with a good cut-off. Means are provided by which the injection of the charge is sufficiently prolonged to keep the pressure in the cylinder at its maximum during the first portion of the working stroke. To effect this, an oil reservoir is provided in conjunction with the main spraying valve into which the surplus oil from the igniter spray flows. This chamber is so formed that it is not immediately emptied when the spraying valve is opened, but a further supply of fuel is forced into the combustion chamber as the working stroke proceeds, thus maintaining the combustion and the pressure for a portion of the stroke.

The effect produced by the prolonged injection of the fuel is to give increased mean effective pressure without high initial pressure. Both the auxiliary and the main spraying valves are actuated through suitable levers from a single push rod worked by a cam on the lay shaft, and means are provided whereby the movement of both valves can be adjusted.

Strong points in favour of crude and residual oils are freedom from danger and uselessness for any other purpose than that for which they are intended. Crude Texas is almost uninflammable, in fact a bucketful thrown on to a fire of shavings and sticks will act almost as if it were water instead of oil. In view of the danger attaching to the use of petrol in and about farm buildings and the higher fire insurance premium demanded where used, this consideration is of special value.

The engines are of very massive design. In the larger sizes the cylinder jackets and bedplate are cast in one piece, the base extending along the whole length of the cylinder with facings for attachment of the camshaft bearings and compressor. The governor is of the enclosed spring-loaded centrifugal type; it is placed in front of the engine and driven directly from the crankshaft, so avoiding the jump caused by the action of the exhaust cam. Speed is controlled by the governor varying the stroke of the fuel oil pump by inserting or withdrawing a wedge-shaped piece between the ends of the pump actuating lever and pump plunger; the actuating lever is connected with a dashpot to prevent 'dancing.' The camshaft bearings are ring lubricated; for the main bearings, piston, etc., forced lubrication is employed.


CARELS



2,000 H.P.
DIESEL
ENGINE.

DIESEL & STEAM

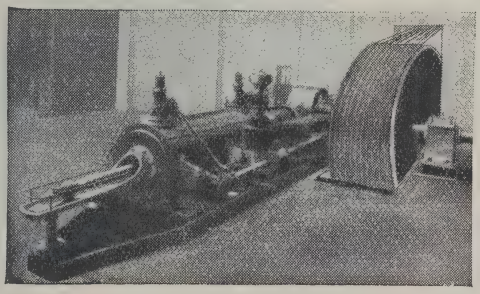2,000 H.P.
UNIFLOW
STEAM
ENGINE.



ENGINES

All enquiries to:
Carels Diesel and Steam Engines (London) Ltd.,
Carlton House, Regent Street, London, S.W.
Telegrams: 'Dieselben, Piccy, London.' Telephone: Regent 3484.

Vickers-Petter Oil Engines

(PETTER'S PATENTS)

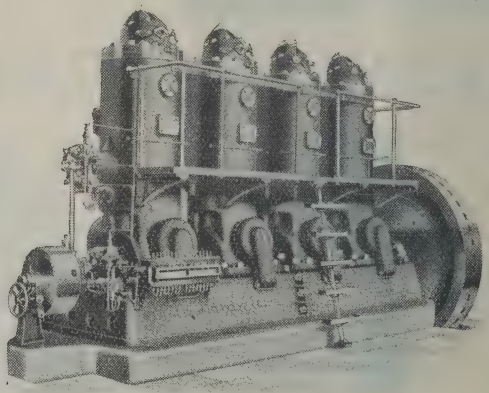
INDUSTRIAL & MARINE

THE PIONEER SEMI-DIESEL CRUDE OIL ENGINE

Simplest, safest and most economical power in the world

LOW FUEL and LUBRICATING OIL CONSUMPTION

Awarded Grand Prix Turin International Exhibition, 1911.



SIZES UP TO 50 B.H.P.

Write for Catalogue

VICKERS - PETTERS LTD.

IPSWICH, ENGLAND.

Branch Offices and Showrooms:

LONDON 75B Queen Victoria Street, E.C. 4. BRISTOL - 140 Victoria Street.

DUBLIN - 30 Lower Sackville Street. GLASGOW - 163 Hope Street.

F. 1683

VICKERS-PETTER SEMI-DIESEL ENGINES.

The Vickers-Petter semi-Diesel engine is one of the most important manufactured in Great Britain, and is constructed for larger output than any similar design built in this country. It is built in sizes up to 450 h.p. in six cylinders, and is adapted either for marine or stationary work.

Messrs. Petters Ltd. of Yeovil, and Vickers-Petter of Ipswich, specialise entirely in two-stroke valveless oil engines, which have been developed by them in the direction of greater simplicity and fuel economy. The 2½ b.h.p. to 8 b.h.p. sizes are vertical, with electric ignition, and start at once on petrol, automatically changing to kerosene, after running a minute or two. Engines from 10 b.h.p. to 450 b.h.p. are vertical and are of the semi-Diesel type, using either paraffin, crude or residual oils. Vegetable oils, especially palm oil, have also been used with great success. The fuel consumption of the larger engines at full load compares favourably with that obtained with Diesel engines, taking into account the lower working pressure and greater simplicity, which can be seen on reference fo fig. 21.

Large numbers of these engines have been supplied for factories and for electric lighting and power stations. The multi-cylinder engines are especially suitable for the latter work owing to their great uniformity in rotation, and a number of engines have been supplied for driving alternators running in parallel with other machines.

The admission of air to the cylinder and the period of exhaust are controlled by the piston, which overruns ports at the lower end of the cylinder. Consequently no valves are required on the cylinder, and the air inlet valve on the crank case is only subjected to a few pounds pressure, the air from the crank case being transferred to the cylinder when the piston is at the bottom of its stroke. The fuel pump delivers oil direct to the cylinder through a pulveriser when the piston is at the top of its stroke, that is, at the period of maximum compression. The air blast for the fuel injection, which is usual on Diesel and on some makes of semi-Diesel engines, has been eliminated on the Petter engine, and by dispensing with the air compressor and operating gear this engine is greatly simplified. A separate fuel pump is provided for each cylinder.

Accessibility is a marked feature of this engine, and it will be seen that the cylinders are entirely independent from one another.

The fuel injection system embraces a patent shaft governor, which varies the length of the fuel pump stroke and at the same time automatically controls the moment of injection of the fuel in relation to the load on the engine. The patent light running gear secures complete combustion on light loads by means of a supplementary fuel injection timed in advance of the normal injection. Consequently the lamp is never required after the engine has been started and the use of water injection into the cylinder is eliminated.

Messrs. Vickers-Petters Ltd. have specialised in quick starting arrangements of which two alternative methods are employed by them.

1. The safety rapid starting burner (patent) using paraffin fuel, which enables the engine to be started within one minute from cold. Cleanliness, efficiency, and safety are ensured by the use of this burner.

2. Electric starting, by means of an electrically heated wire element. The engine can be started instantly from cold without external heating. The patent electric torch is only exposed to the heat of combustion for a few minutes, and being then withdrawn is not liable to get burnt out.

The single-feed lubricator. This is a new patent spray lubricator, by means of which the cylinder as well as the large and small connecting rod bearings are lubricated from one jet through which the lubricating oil is introduced mixed with air in the form of a spray. This invention reduces the lubricating oil consumption in this engine by one-half.

The leading dimensions of the engine illustrated are :

Cylinder bore 12 ins., stroke of piston 14 ins., rated h.p. 70, flywheel diameter 66 ins., flywheel width 10 ins., approximate weight 7 tons.

The results of some tests of an engine of this type are here given :—

Details.	Full Load.	Half Load.	Quarter Load.
Brake horse-power	71	36·8	18
Revolutions per minute	227	229	231
Total fuel used, pints	62	18	14
Hours run	2	1	1
Fuel per hour, pints	31	18	14
Fuel per b.h.p. hour, pints	0·437	0·49	0·778
Fuel used	Crude Texas	Crude Texas	Crude Texas
Specific gravity of fuel	0·9	0·9	0·9

The Vickers-Petter direct-reversing marine oil engine is similar in design to the above, and the reliability of the engines makes them especially applicable for ship propulsion. In comparison with other internal combustion engines, they have the advantages of lower fuel consumption and the absence of water injection in the cylinders, thus the amount of fuel to be carried on the ship can be reduced and there is no need to provide fresh-water tanks for the water drip. The engines work equally well on any crude or crude residual or refined petroleum obtainable throughout the world. In comparing fuel consumptions with those of the Diesel type, brake horse-powers and not indicated horse-powers should be considered, as the mechanical

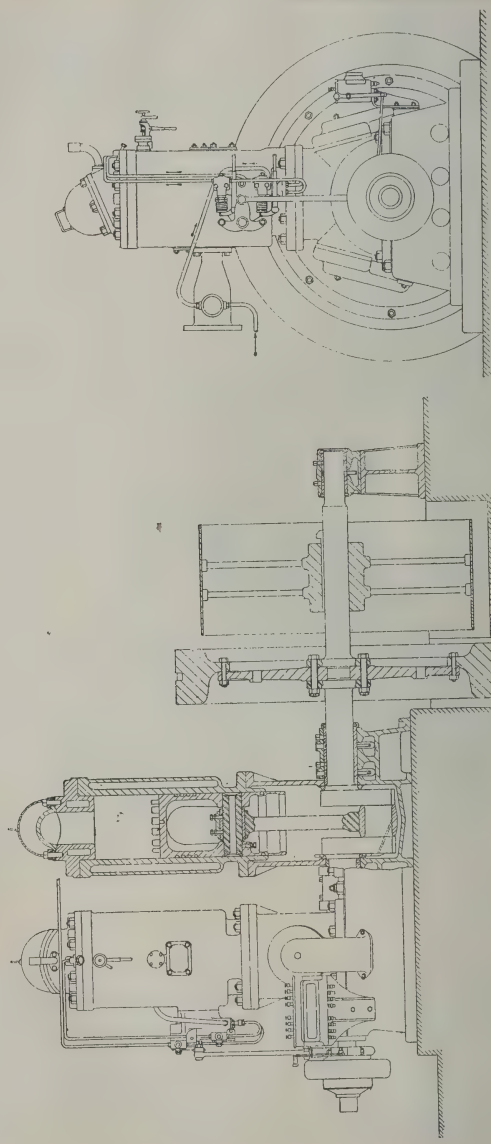


FIG. 21.—Sectional Arrangement of a Vickers-Petter Semi-Diesel Engine.

efficiency is less in the Diesel type. The direct reversing system is remarkably simple and certain; its action is positive and the whole operation from full speed 'ahead' to full speed 'astern' can be accomplished in less than half-a-minute.

One of the best of the recent improvements in semi-Diesel engines is the patented method whereby the Vickers-Petter engine will run light or at reduced speeds indefinitely without misfiring or cooling down.

Marshall Crude Oil Engines.

Messrs. Marshall Sons & Co., Gainsborough, make crude oil engines of the semi-Diesel type, both horizontal and vertical, in sizes from 8 to 300 b.h.p. They supply a number of the horizontal engines on portable carriages for agricultural and other work.

The engines operate on the two-stroke cycle and have an impulse every revolution. The governor is mounted on the crankshaft and controls the throw of the eccentric operating the fuel pump plunger; thus the amount of fuel injected into the cylinder is always proportional to the load on the engine.

Marshalls' engines have a wide range of speed variation, and do not cool down when running quite light. Also they will take overloads without trouble and no water injection is required in the cylinder. Separate cylinder liners are fitted on all engines.

Campbell Crude Oil Engines.

Vertical engines of the two-stroke cycle are made by the Campbell Gas Engine Co., Halifax, in sizes from 5 to 320 b.h.p. for land and marine purposes. They are supplied with single, two, and four cylinders.

The engines are of the usual valveless type, and have ports in the cylinder so that the air inlet and exhaust periods are controlled by the piston. All of the parts are substantially constructed and the engines are easily started; the smallest sizes by hand and sizes above 22 b.h.p. by means of air compressed at 120 to 150 lbs. pressure.

Lubrication, as well as other important details, has received careful attention on the engines and the large number in use indicate the success of the engines. They work on gas oil, solar oil, kerosene, and the lighter crude and residual oils.

Beardmore Oil Engines.

Engines in powers from 10 to 600 b.h.p. are made by William Beardmore & Co. Ltd., Coatbridge. The engines are of the vertical design working on the two-stroke cycle and are supplied in from one to six cylinders for both land and marine purposes.

The crank-case of the engine is used as a pump, the air drawn in through the covers is compressed during the downward stroke of the piston and admitted to the cylinder when the piston is nearly at the bottom of its stroke. The exhaust ports are already uncovered and the shape of the piston top deflects the air to assist in scavenging the cylinder. The air in the cylinder is compressed during the upward stroke of the piston and fuel is injected by means of a pump through an atomiser into the combustion chamber when the piston is nearly at the top of its stroke.

A number of these engines are in use for electric lighting and power purposes and for driving various kinds of industrial machinery, but the majority have been installed in yachts, barges, and coasting vessels of all descriptions.

The weight of the engines varies from about 1¾ to 2½ cwts. per horse-power for land work and from about 1½ to 2 cwts. per horse-power for marine propulsion.

Allen Oil Engines.

Crude oil engines are made by W. H. Allen, Sons & Co. Ltd., Bedford, in single, two and four cylinder sizes ranging in power from 10 to 320 b.h.p. Particulars of the engines, giving cylinder

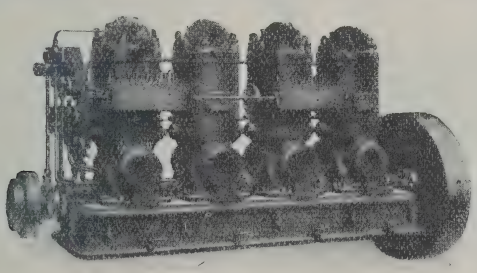


Fig. 22. The Allen Crude Oil Engine.

dimensions, are shown below. The rating and speeds are moderate and the engines are capable of running continuously at full power.

The engines work on the two-stroke cycle and have an impulse every revolution, the governor being arranged to control the amount of fuel oil injected in proportion to the load. They can be started in a few minutes by preliminary heating of the vaporiser with a blow lamp, which is used at starting only. They will run at any load for an indefinite period without the starting lamp or any other additional device; also no adjustment is required for light running, and the engine will run under no-load without misfiring.

B.H.P.	Revs. per minute.	Number of Cylinders.	Bore and Stroke (Inches).	Size of Flywheel (Inches).		Overall Dimensions of Engines (Inches).			Approximate Weight of Engine complete (Cwts.).	
				Dia.	Width.	Height.	Width.	Length.	Nett.	Gross.
25	375	1	9½ × 11	42	8	59	42	74	48	57
35	325	1	11½ × 13	51	10	70	51	88	72	83
50	275	1	13¾ × 15	60	12	81	60	98	103	117
50	375	2	9½ × 11	42	8	59	42	101	73	85
70	325	2	11½ × 13	51	10	70	51	130	108	123
80	250	1	16¾ × 17½	66	14	95	66	121	165	183
100	275	2	13¾ × 15	60	12	81	60	146	155	173
100	375	4	9½ × 11	42	8	59	42	151	122	138
140	325	4	11½ × 13	51	10	70	51	152	184	204
160	250	2	16¾ × 17½	66	14	95	66	167	248	279
200	275	4	13¾ × 15	60	12	81	60	175	258	290
320	250	4	16¾ × 17½	66	14	95	66	232	415	460

A noteworthy feature is that the engines will work satisfactorily when running at reduced speeds, down to as low as half the normal speed. Regular running is obtained and the exceptional economy of these engines is still maintained.

The engines will work on almost any good quality crude or residual oil of specific gravity up to ·95, and the fuel consumption is only ·5 pint per b.h.p. per hour at full load. At ¾-load the consumption per b.h.p. is slightly increased and at ½-load the increase is not more than 20 per cent Thus each engine has a large economical range of power.

Peter Brotherhood Oil Engines.

Single-cylinder horizontal oil engines in sizes from 16 to 120 b.h.p. are manufactured by Peter Brotherhood, Peterborough. The engines operate on the four-stroke cycle.

An illustration of one of these engines is shown in fig. 23, from which the substantial design

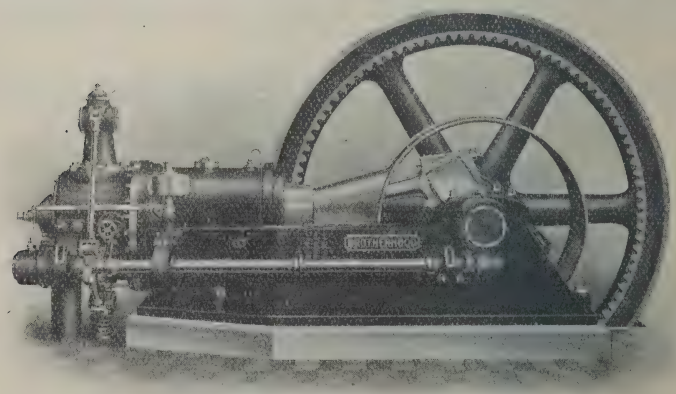


Fig. 23—Peter Brotherhood Oil Engine.

can be seen. The bed is well supported on the foundation and the thrust of the connecting rod is taken by it. The cylinder liner is removable and the combustion chamber is bolted to the bed.

Ignition is automatic, after the preliminary heating of the vaporiser by the starting lamp. The atomiser is of an extremely efficient design. It contains a needle valve, loaded with a suitable spring, and this is lifted at each stroke of the fuel pump. The stroke of the fuel pump plunger is controlled by the governor automatically in proportion to the load.

Robey Oil Engines.

Semi-Diesel engines for land and marine work are made by Robey & Co., Lincoln, in various sizes from 6 to 200 b.h.p. They are of the vertical two-stroke cycle type and are extremely simple.

The fuel is injected into the combustion chamber through a special form of sprayer, which gives good atomisation. The governor is of the centrifugal type mounted direct on the crank-shaft and controls the amount of fuel injected in proportion to the load.

Robey engines will run on the usual kinds of refined, crude, or residual oil, and they have worked satisfactorily on tar oil.

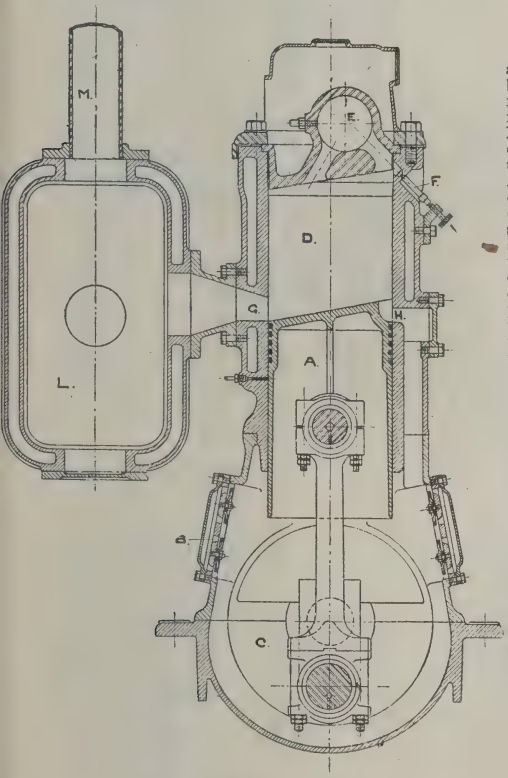


Fig. 24.—The Bolinder Engine.

Bolinder Engines.

The Bolinder engine (fig. 24), although essentially of the hot-bulb type, contains several features which distinguish it from other motors of this class. It is a high standardised production, and is now made in sizes up to 500 b.h.p. in four cylinders. As in most other motors of this design, the air is drawn in the crank chamber on the compression stroke of the piston, this air being compressed to a relatively low pressure in the crank chamber by the piston on its outward stroke. Just before the piston reaches the end of its stroke the exhaust ports are uncovered in the cylinder, allowing the exit of the exhaust gases, which are finally completely driven out through the exhaust pipe by the admission of the compressed air from the crank chamber through further ports in the cylinder wall uncovered by the piston as it continues on its downward stroke. On the upward stroke the piston compresses the air thus taken into the cylinder, and on reaching the top of its stroke the fuel is sprayed into the hot-bulb, thus causing combustion, vaporisation, and expansion within the cylinder. The bulb is kept hot by the heat due to the combustion, and the compression is usually about 125 to 150 lbs. per square inch. It is, of course, necessary to heat up the bulb by a blow-lamp before starting, but once the engine is running it is not necessary to keep the lamp burning, even when operating on light load.

Engines of 90 b.h.p. and above dispense with water injection into the cylinder, and are fitted with small two-stage air compressors driven from the main crankshaft. Compressed air is forced into the bulb at the same time as the fuel. If required the engine can be run at about three-quarters power with the air compressor disconnected and without overheating. On the smaller sizes, water injection is retained, as it is possible to obtain a higher power for given cylinder dimensions.

THE STILL (I.C. + STEAM) ENGINE.

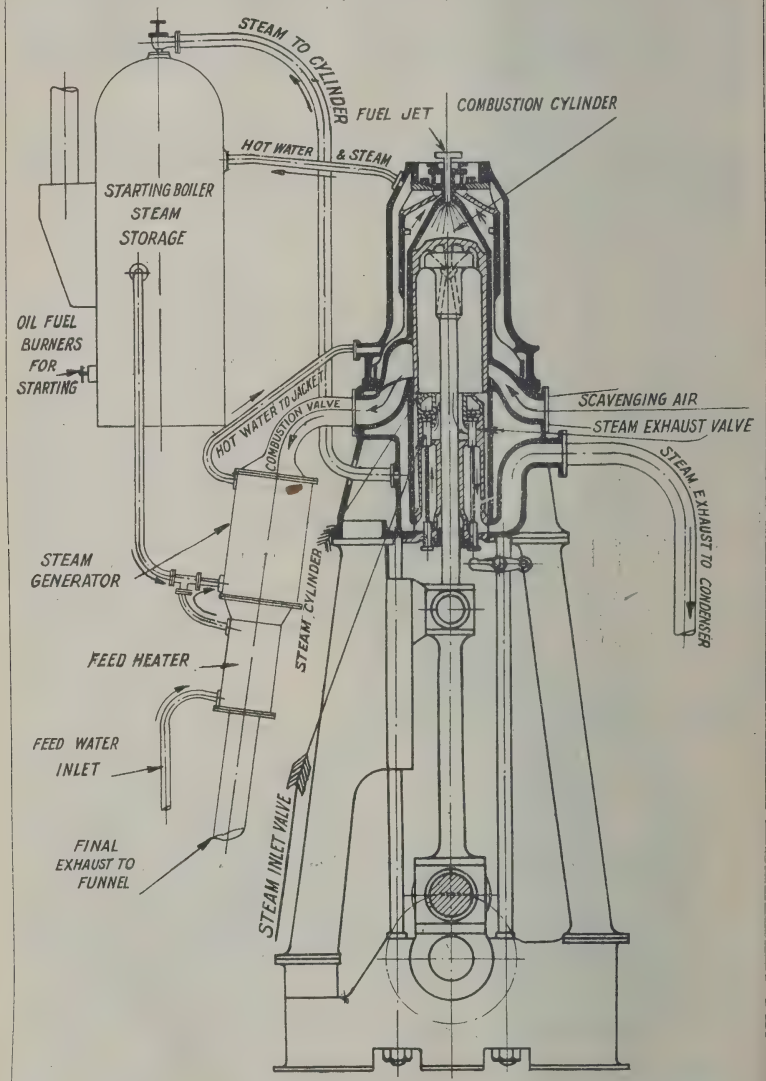


FIG. 25.

For marine work, the Bolinder engine is made directly reversible, the principle being, broadly, the injection of fuel to cause an explosion, after the engine has slowed down nearly to the point of stopping, whilst the piston is on the upward stroke, so that reversal of motion follows. This is carried out by a special device regulating the action of the fuel pump.

The Bolinder motor is manufactured in Stockholm, but is handled in Great Britain by Messrs. James Pollock, Sons & Co. Ltd.

Other Makes of Semi-Diesel Engines.

Semi-Diesel engines of the horizontal four-stroke cycle type are manufactured by Tangyes, Ltd., Birmingham; Fielding & Platt, Gloucester; and Bates & Scholes, Ltd., Denton, Manchester. Engines of the vertical design operating on the two-stroke cycle are also made by Plenty & Son, Newbury; the Aster Engineering Co., Wembley; John Kirkaldy, Ltd., Burnt Mill; Norris, Henty & Gardners Ltd.; the Keighley Gas & Oil Engine Co., Keighley; Widdop & Co., Keighley; and Clayton & Shuttleworth, Lincoln.

Still (I.C. + Steam) Engines.

An engine of high thermal efficiency has been developed by the Still Engine Co. and is manufactured by several licencees. The main working cylinder uses liquid or gaseous fuel, and in the same cylinder, on the opposite side of the piston, steam is employed. The steam is produced by the recoverable heat from the internal combustion side, which passes through the walls of the cylinder as well as into the exhaust gases.

Heat, wasted in other internal combustion engines, is usefully employed in the Still engine to increase the power of the engine and reduce the consumption of fuel per horse-power developed.

As will be seen from fig. 25, the jacket and cooling water form part of the circulating system of a steam generator, which may be an integral part of the engine. The cylinder liner is specially constructed and is about one-third of the usual thickness; it is ribbed externally to add to its conducting surface. The quantity of steam capable of being generated from the rejected heat of an internal combustion engine depends upon the efficiency of the combustion cycle and on the load. At full load the quantity may be about 7 lbs. per b.h.p. of the engine.

In the indicator diagram (fig. 26) taken from the under, or steam, side of the piston, the

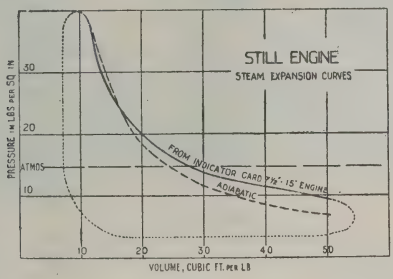


Fig. 26.

adiabatic expansion line as plotted shows there is no loss from condensation. Heat is taken from the piston and cylinder walls and the steam exhausts at a slight superheat.

An experimental engine tested by Professor Vernon Boys generated 3·28 lbs. of steam from the jacket alone, and from the jacket and exhaust together 6 lbs. of steam per b.h.p. hour. The average m.e.p. from the combustion stroke was 90 lbs. per sq. in. The steam evaporated by the heat rejected gave 14 lbs. m.e.p. per sq. in. on every return stroke of the piston. Thus, the four-stroke cycle engine had a total m.e.p. of 118 lbs. per cycle.

The possibilities of this design are very great; by admitting additional steam generated by fuel under the boiler, the total m.e.p. can be increased considerably. This enables the engine to take big overloads, and by the use of steam easy starting and manœuvring are obtained.

The thermal efficiency of the Still engine compared with other prime movers is shown in the following table:—

Marine steam engine, superheated	16% to 17%
Parsons steam turbines	15 „ 20
Gas engines	22 „ 30
Petrol engines	23 „ 27
Semi-Diesel engines	27 „ 30
Still gas engine	31
Still petrol engine	33
Diesel engines	30 „ 36
Still oil engines	38 „ 44

HIGH-COMPRESSION OIL ENGINES.

The high-compression oil engine is the outcome of experiments to simplify and reduce the cost of Diesel engines. Many attempts have been made to produce engines capable of burning cheap heavy oils with an economy approaching that of the Diesel, but in which the high-pressure air blast is avoided without sacrificing the capability of the engines to start immediately from cold.

Among the first of the successful engines was the Vickers, which has been largely developed for propelling submarines. Several other makes of high-compression engines are now on the market, and the elimination of the air compressor has produced a marked improvement as regards simplicity compared with Diesel engines.

What is known as 'solid injection' is adopted for spraying the fuel into the cylinder, the oil being raised to a high pressure by the fuel pump momentarily at the period of injection, or permanently in a small receiver and admitted to the cylinder by timing the opening of the fuel admission valve.

The weight and price per horse-power are lower on these engines than Diesel engines, but up to the present the economy is not quite so good.

Vickers Oil Engines.

High-compression oil engines for land or marine purposes are manufactured by Vickers, Ltd., Barrow-in-Furness, in sizes from 500 b.h.p. upwards. The engines are of the vertical, multi-cylinder, four-stroke cycle type.

The mechanical fuel injection system on these engines has been used for the last eight years and no air blast is required for the fuel. The engines will start from cold without preliminary heating of any part. A sufficiently fine spray into the cylinder is obtained, forcing the oil at a high pressure through minute holes in a special nozzle below the fuel-injection needle valve.

A fuel pump may be fitted for each cylinder, or two pumps can be used for all the cylinders, and delivers the oil at a pressure of from 2,000 to 4,000 lbs. per sq. in. into a pulsator tube from which it passes through a special strainer to the needle valve in the cylinder head. The pressure depends upon the speed and power at which the engine is running. Control of the power is obtained by varying the time and the amount of opening of the fuel valve, and by adjusting the pump to the desired pressure.

Engines of a total horse-power of nearly 500,000 have been built, and the makers claim the following advantages over Diesel engines:—

High-pressure air for fuel injection eliminated.
Increased safety in working and lower compression pressure.
Reduction of space, weight, and cost.
Elimination of cooling effect of air blast on piston and cylinder head.

The six-cylinder 1,250 b.h.p. engine has cylinders 24·5-in. diam. by 39-in. stroke, and the normal speed is 118 r.p.m. The fuel consumption is stated to be as low as 0·38 lb. per b.h.p. per hour.

Crossley Oil Engines.

Crossley Bros., of Openshaw, Manchester, make high-compression oil engines in sizes from 8 to 130 b.h.p. single cylinder, and up to 260 b.h.p. double cylinder. The engines are of the horizontal four-stroke cycle type.

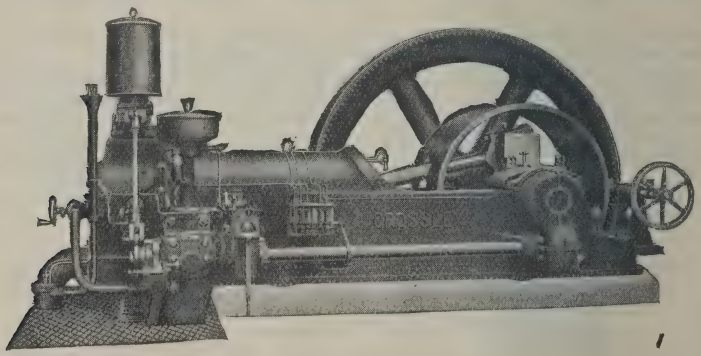



Fig. 27.—The Crossley Oil Engine

CROSSLEY

COLD-STARTING

OIL ENGINES

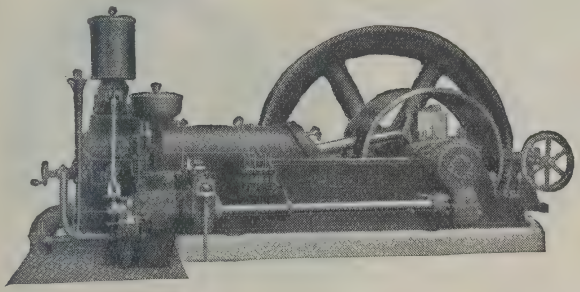combine Simplicity and Reliability with remarkable Economy in Fuel Consumption.



ALTERNATIVE FUELS

These engines can now be supplied as convertible engines to work with either

FUEL OIL OR PRODUCER GAS

This is very useful in many trades and in many countries, especially where, periodically, refuse fuels, for making producer gas, are available for little or nothing.

Write for particulars to

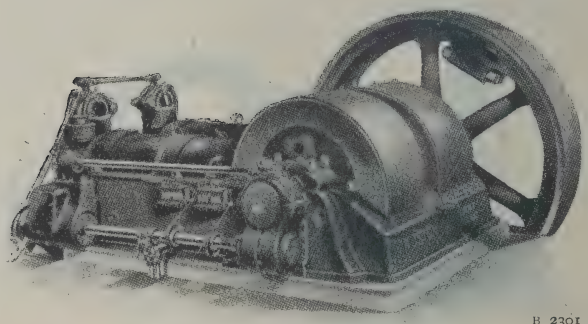
CROSSLEY BROTHERS LTD.

MANCHESTER——————ENGLAND.

F. 1690

RUSTON

OIL AIRLESS Cold Starting ATOMISER ENGINE



B 2301

Uses Low-Grade Fuel Oils
(e.g., Furnace Oil of ·95 Spec. Gravity).

Low Consumption Guaranteed
(·42 lbs. per B.H.P. hour).

No Lamp. No skilled attendant needed.

Made in sizes from 15 to 340 B.H.P. by

Ruston & Hornsby Ltd.
LINCOLN ENGLAND.

F. 1691

All of the engines start up from cold without pre-heating, and will work on crude, refined, or residual oils. The patent fuel pump and governor gear are particularly interesting, as the commencement of the fuel injection is constant at all loads. Governing is effected by reducing the amount of the charge delivered by the fuel oil pump at reduced engine loads; the full consumption is thus, as far as possible, proportioned to the power output. Messrs. Crossley state that in a recent test the consumption of (crude) oil for b.h.p. hour at full load was 0·42 lb., and at about half load rose to only 0·43 lb. with their governing arrangement; and that consumptions as low as ·40 lb. have been obtained. They point out that this performance compares favourably with that of the more costly Diesel type of engine.

These engines can be supplied as convertible engines to work with either fuel oil or producer gas, whichever may be the cheaper fuel at the time.

Ruston-Hornsby Oil Engines.

This engine of Messrs. Ruston & Hornsby, Ltd., fig. 28, is of the solid injection type. The makers have succeeded in dispensing with the high-pressure air blast for fuel injection

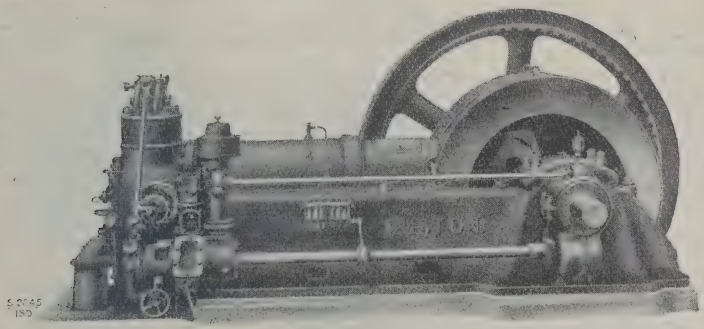


Fig. 28.—The Ruston-Hornsby Oil Engine.

altogether, a quick-acting fuel force-pump being employed to inject the fuel oil through a specially designed mechanical atomiser. The engine is of the high compression type and is started from cold without a lamp. It will use the same heavy oils as are used on a Diesel engine, and the principle is extended to engines of large power. The engines are built in single and multi-cylinder forms giving a range from 15 b.h.p. to over 340 b.h.p. An illustration of the 130 b.h.p. engine is given in fig. 28. The bedplate is in one piece carrying the liners and main bearings. A special feature is the valve gear, which is actuated by means of eccentric gear and one side shaft, thus reducing the number of working parts to a minimum, and giving a compact and silent running engine.

The action of the engine is as follows:—The piston on its outstroke takes in air, which, on the return stroke, is compressed in the combustion chamber, and nearly at the point of greatest compression, the oil fuel is injected by a pump, which forces the oil through a mechanical atomiser. The compression temperature is sufficient to ignite the charge. The power stroke follows, then the exhaust, after which the cycle is repeated. By adopting this cycle, on the one hand a high compression can be used with its attendant economy, without incurring pre-ignition, whilst, on the other hand, an air compressor and air receiver are avoided.

The oil-fuel pump is driven through a lever by a quick-acting cam on the layshaft, which is completely enclosed and runs in oil. A lever is provided by which the pump can be worked by hand, or thrown out of action altogether to stop the engine. The fuel pump and side shaft are carried by the bedplate, thus relieving the cylinder head.

The mechanical atomiser, which is fixed in the combustion head, consists of a duplex valve loaded by a powerful spring, which is lifted at each stroke of the oil-fuel pump. The valve has two seats of different diameters, the smaller of which closes the opening of the combustion chamber, and the larger a leak pipe to the oil tank. When the smaller valve lifts, the oil is forced through channels converging to a central outlet, which so split up the stream that it emerges on

either side of the nozzle in a cone-shaped cloud of oil particles. The movement of the valve is about $\frac{1}{10}$th inch, and is entirely automatic in action. There is no packing or oil-tight diaphragm, or any complication liable to get out of order, and the action, though delicate, is found in practice to be absolutely reliable.

The regulation of the speed is effected by the opening of a by-pass valve by the governor, the toe of the valve resting upon a lever carried upon a cam. The fulcrum of the lever is adjustable by a screw, so that although the lift of the valve is minute, there is always a means at hand for easily keeping it in perfect adjustment. The only attention required to the atomiser is cleaning out the oil passages after about every 300 hours' run. The consumption of oil, even the lowest grade of crude, residue, or fuel oils, is complete, while the economy is remarkable.

Tests which have been made show that a high thermal efficiency is obtained with the cheapest fuel oils on the market, the consumption ranging from ·40 to ·47 lb. per b.h.p. hour according to the size of the engine.

Campbell 'High-Compression' Crude Oil Engines.

The 'high-compression' crude oil engine made by the Campbell Gas Engine Co. Ltd., of Halifax, Yorks, works on the four-stroke cycle with a compression pressure of about 300 lbs. per sq. in.

Air only is taken into the cylinder and compressed by the piston. The fuel is injected at about the end of the compression stroke, so that pre-ignition is rendered practically impossible. The fuel is injected by a cam-operated ram pump through a mechanical atomiser which delivers the fuel into the combustion chamber in the form of an extremely fine spray or mist. The speed of the engine is governed by increasing or diminishing the stroke of the fuel pump and thus the quantity of fuel injected in each cycle; there is no by-pass on the fuel pump. This system provides a working impulse in every cycle at all loads, thus ensuring minimum speed fluctuation and approximate equalisation of the working stresses in consecutive cycles.

By a recent improvement the heating lamp can be dispensed with entirely and the engine started up immediately from cold. This system is the standard for all except small engines, but it can be applied to the latter if required.

In the Campbell high-compression engine water drip or injection to the cylinder is not required under any conditions, and no provision is made on the engine for using it.

It is claimed that any kind of crude or residual petroleum may be used, even if it contains asphalt or bitumen. Tar oil (distilled from coal, specific gravity 1·05) can also be used.

The Campbell Co. state that the consumption varies with the size of engine and heat value of the fuel. When using residual petroleum of about 18,000 B.Th.U. per lb., the consumption varies from ·55 lb. per b.h.p. per hour in an engine of 9 b.h.p. to about ·43 lb. in one of 100 b.h.p. A test was recently conducted on an engine of 35 maximum b.h.p. extending over a fortnight, running not less than 12 hours per day, including runs of 24 and of 30 consecutive hours, and finishing with a non-stop run for seven days and nights. This last run consisted of 72 hours consecutively at full load, 24 hours each at $\frac{3}{4}$, $\frac{1}{2}$, and $\frac{1}{4}$ load with a two hours' interval each day at loads varying from zero to maximum, and concluding with 24 hours at full load.

The fuel used during this trial was Mexican fuel oil of 0·96 sp. gr. containing about 3·2 per cent. of asphalt and having a viscosity of 1,500 sec. as tested in a No. 1 Redwood viscometer. The whole of the fuel used was weighed, and the consumption was found to be:—


At full load	·49 lb.	per b.h.p.	per hour
,, $\frac{3}{4}$,,	·485	,,	,,
,, $\frac{1}{2}$,,	·515		
,, $\frac{1}{4}$,,	·656	,,	,,

The test was carried out by independent engineers, and during the whole of the time no adjustment of any kind was made to any part of the engine.

The Campbell high-compression engine is built in a range of standard sizes from 9 to 100 max. b.h.p., single cylinder, 120 to 200 b.h.p. in two cylinders, and 200 to 400 b.h.p. in four cylinders. It is also built in the vertical type with two or four cylinders from 70 to 500 b.h.p. Higher powers can be had if required. The makers claim that this engine possesses all the advantages of the Diesel engine, while it is simpler in construction, easier to handle, and lower both in first cost and in running and maintenance.

CAMPBELL

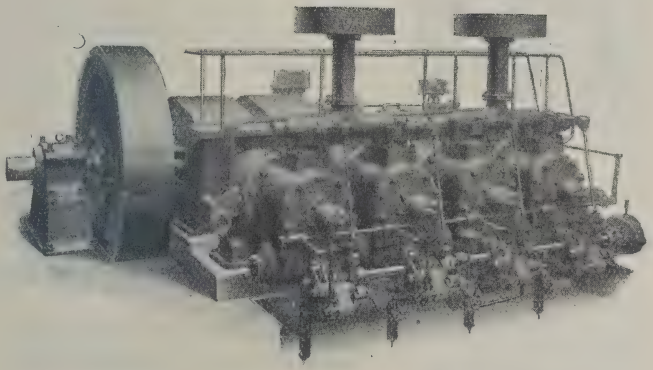HIGH COMPRESSION
CRUDE-OIL ENGINES



RUN ON ALL KINDS OF CRUDE OR RESIDUAL PETROLEUM or on TAR OIL.

Consumption, ·45 to ·55 lb. per B.H.P. Hour.

Start from **cold state** at a moment's notice
without use of heating lamp.

No lamp is used for starting. Water injection to cylinder is not used. Standard Sizes, 9 to 400 B.H.P.

We also build Vertical Crude-Oil Engines, Land and Marine Types.

THE CAMPBELL GAS ENGINE CO., LTD.
HALIFAX, ENGLAND.

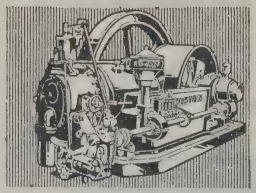
F. 1692

PIONEERS AND LARGEST MANUFACTURERS OF SOLID INJECTION OIL ENGINES

With our latest Lampless Cold-starting type we obtain

A FUEL CONSUMPTION OF ·4 LB. PER B.H.P. HOUR.

'The economy of the Diesel without the complication of its air-compressor.'




The following Oils have been successfully used :—

	Sp. Gr.		Sp. Gr.
Tar Oil	1·04	Italian Residue...	·94
Comodoro Rivadavia (Fuel Oil)	·96	Anglo - American (Fuel Oil) ...	·93
Mexican (Fuel Oil)	·96	Pennsylvanian Crude	·89
Tarakan (Fuel Oil)	·95	Texas Crude ...	·89
Borneo Crude ...	·94	Russian Crude ...	·84
		Persian Crude ...	·84

Also, amongst others, Masut, Grosny, Roumanian, Peruvian, Burmah, Assam, Java, and Sumatra Crude Petroleums; Resoleum and Gasoleum; Asiatic Petroleum Co.'s Fuel Oil; American and Russian Refined Petroleum; Shale Oil, Scotland; Gas Oil, Great Britain; Disoil.

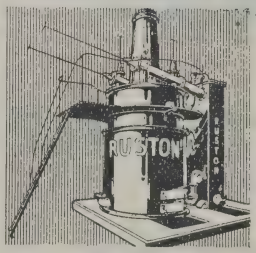WASTE REFUSE SUCTION GAS PRODUCERS



for generating gas from wood blocks, wood chippings, saw-dust, plumstones, husks and such combustible refuse, giving

THE CHEAPEST POWER ON EARTH.

RUSTON & HORNSBY LTD.

LINCOLN. GRANTHAM. STOCKPORT.

ON ADMIRALTY AND WAR OFFICE LISTS.

Established 1815. Five Works, comprising 180 acres. 10,600 Employees.

Also Manufacturers of

Gas Engines, Anthracite Suction Gas Producers, Internal Combustion Oil Locos; Fixed, Portable and Traction Steam Engines; Steam and Oil Road Rollers; Centrifugal Pumps; Boilers and riveted work of all descriptions; Excavators and Transporters.

Telegrams: 'RUSTON, LINCOLN.' Telephone: 580 LINCOLN.

LOW-COMPRESSION OIL ENGINES.

The early oil engines were all low-compression engines, and the desire to use the heavier grades of petroleum, which are cheaper than the more refined grades, caused the development of higher pressures, so that the increased temperature could completely vaporise the heavier fuels.

The low-compression oil engines still have, and will always continue to have, a wide application, owing to the low working pressures and small cost.

In the normal 'oil engine' a heavy kerosene is usually employed as fuel; Russian oil is, in general, rather preferred, though the ordinary American brands are also used with quite satisfactory results. A standardised oil described as R.V.O. (Russian vapourising oil) of specific gravity ·825 and flash point 86°F. (close test) is regarded as the normal fuel for these engines; other descriptions commonly used, however, include Rocklight, Russolene, Homelight, Gladiator, Phœbus, Silver Spray, Crown Diamond, Royal Daylight, White Rose, Tea Rose, and Bear Creek. Among the heavier fuels used are refined shale-oils as Broxburn and Scotch Lighthouse, and also the refined heavy oils of Burma, Assam, Roumania, etc.

The average composition of the petroleum oils used is 85½ per cent. carbon, 13½ per cent. hydrogen, and 1 per cent. oxygen, and the mean calorific value, by Berthelot calorimeter, is roundly 19,600 B.Th.U. per lb. When arranged to use either petrol, kerosene, or heavier oils, engines usually develop powers in the proportion of about 100 : 90 : 80, respectively.

It should be carefully noted that the nominal power of internal combustion engines in general is for location at sea-level; when required to work at an altitude a deduction from the nominal power should be made of 3 per cent. for each 1,000 feet of height, due to the diminished density of the air (see table, page 1742).

In the ordinary oil engine the heavy kerosene fuel is vaporised in a heated chamber maintained at the necessary temperature either by heat derived from the successive explosions (hot-bulb vaporisers), or from the exhaust of the engine; or lastly, in a few cases, by means of a separate blow-lamp. In most cases a preliminary heating of the vaporiser by a blow-lamp is necessary for 10 to 15 minutes before the engine can be started. These engines are practically all of the single-acting four-stroke type, and compress a mixture of kerosene vapour and air into the combustion chamber.

Ignition of the charge is sometimes automatic, as in the Hornsby and Blackstone oil engines; high and low tension magneto ignition is also used, while in cases where lamp-heated vaporisers are adopted tube ignition is general. On account of the care and attention necessary where lamps are used, and also in some cases due to increased fire risks, makers are in general favouring one or other of the methods of lampless ignition.

Ruston-Hornsby Oil Engines.

This widely-known engine, invented by Mr. Akroyd Stuart 1886–1890, first successfully adopted the now largely used 'hot-bulb' in order to vaporise the oil fuel and automatically explode the charge at the proper instant. A sectional view is given in fig. 29 of a present design

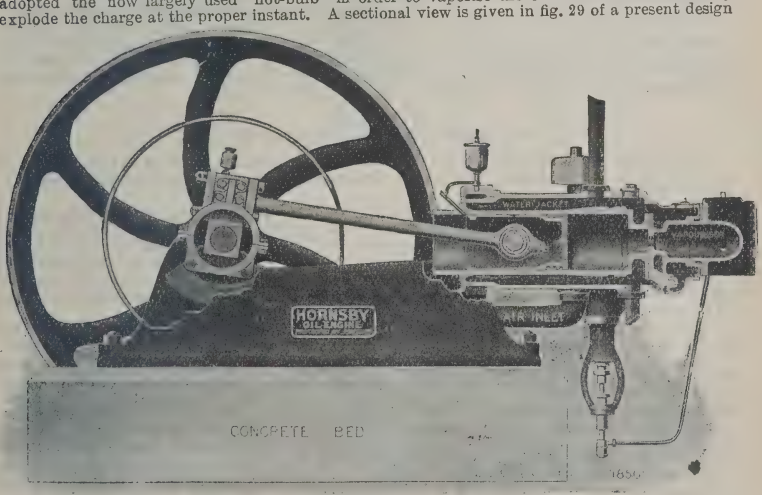


Fig. 29.—The Ruston-Hornsby Oil Engine.

by Messrs. Ruston & Hornsby, Ltd.; the hot-bulb is seen as an unjacketed, or partly jacketed, extension of the combustion chamber, the connection being by a narrow passage as shown; this hot-bulb receives a preliminary heating by a blow-lamp for 10 to 15 minutes and the engine is then turned by hand. On the suction stroke the piston draws a charge of air only into the combustion chamber and cylinder while at the same time a few drops of oil are injected by the fuel pump into the hot-bulb and there vaporised; on the compression stroke the air is packed into the combustion chamber and hot-bulb and mingles therein with the heavy petroleum vapour; the mixture is at first too rich to explode, but as the compression proceeds it becomes more and more dilute, and the capacities are so adjusted that just as the piston reaches the end of its stroke the heat of the walls of the hot-bulb automatically explodes the charge. The working stroke next follows and is succeeded by the exhaust; the cycle then recurs.

The temperature of the hot-bulb is maintained by the heat derived from the successive explosions and the ignition is entirely automatic. The engine is thus of the single-acting four-stroke type.

A test by Prof. W. Robinson in 1908, of a single-cylinder 32 b.h.p. Hornsby engine, using 'Russolene' as fuel, furnished the following results:—

Duration of trial	1 hour
Compression pressure, lbs. per sq. in.	85
Explosion pressure, lbs. per sq. in.	260
Revolutions per minute, mean	230·2
Brake horse-power	32
Total oil burned, lbs.	19·6
Lbs. oil per b.h.p. hour	0·613
Brake thermal efficiency, per cent.	22·6

Blackstone Kerosene Engines.

In the kerosene engines of Messrs. Blackstone of Stamford there is also a hot-bulb vaporiser in the form of an annular chamber, or jacket, surrounding an inner explosion chamber, this latter forming an extension of the cylinder head and being connected therewith by a short passage containing a mechanically-operated ignition timing valve which cuts off the explosion chamber at the end of the suction stroke, and reopens near the end of the compression stroke when the compressed charge is admitted to the explosion chamber and instantly fired by an automatic igniter of the internal hot-tube variety which is kept hot by the successive explosions. A preliminary heating of the vaporiser by blow-lamp is necessary, as usual, in order to start the engine. In these kerosene engines no force fuel pump is required, the piston suction causing a current of air to traverse a spraying nozzle and thus 'snift' the charge of kerosene spray into the vaporiser Any ordinary refined oil as Rocklight, Russolene, Royal Daylight, etc., may be used.

During occasional light load periods it is sometimes desirable to keep the blow-lamp in action in order to maintain the temperature of the vaporiser and prevent a smoky exhaust; this is a frequent necessity of kerosene engines at such times. Also, if long periods of full load service are required, a water spray is admitted to the cylinder during the suction stroke in engines not fitted with the above-mentioned timing valve to remove the 'pounding' or pre-ignition knocking otherwise liable to occur in a hot engine using a heavy petroleum fuel.

Blackstone Vertical Kerosene Engines.

This is a simple and compact four-stroke engine using ordinary kerosene as fuel, fitted with a vaporiser similar to that of the horizontal engines, and with water drip to prevent 'pounding' at heavy loads.

The enclosed crank chamber is provided with large inspection doors, through which big end adjustments can be made; the main bearings are ring-lubricated, while the crank-pin and piston are supplied by a sight-feed lubricator; the camshaft is also enclosed in an oil-containing casing, and is driven by skew gear from the crankshaft. Speed regulation is by a simple specially designed governor of the inertia type, which is claimed to act as effectively as the disc governor fitted to the larger Blackstone engines; the speed may be adjusted by hand while the engine is running.

This type of engine is also supplied in portable form, mounted on a massive four-wheeled girder carriage, and also in semi-portable form, both being provided with water-cooling apparatus.

There is no water pump, the pulsations of the exhaust being ingeniously utilised to cause the cooling water to circulate around the cylinder jacket. The device comprises a double-chambered valve-box to one compartment of which a branch from the exhaust pipe is attached; in this branch the water rises to the level of that in the cooling tank, but is prevented from returning by a non-return valve; the two compartments are connected through a second non-return valve, and from the second compartment the delivery pipe to the cylinder jacket proceeds; this delivery pipe is fitted with an air vessel.

When exhaust occurs the pressure in the first compartment impels the water into the second and then, via the delivery pipe, to the cylinder jacket; on completion of the exhaust stroke

a fresh charge of water flows by gravity from the cooling tank, through the non-return valve, to the first compartment. After passing through the jacket the hot water is delivered into a receiver surmounting a perforated cone through which it flows, becoming cooled by evaporation, and so returns to the supply tank.

CAMPBELL OIL ENGINES.

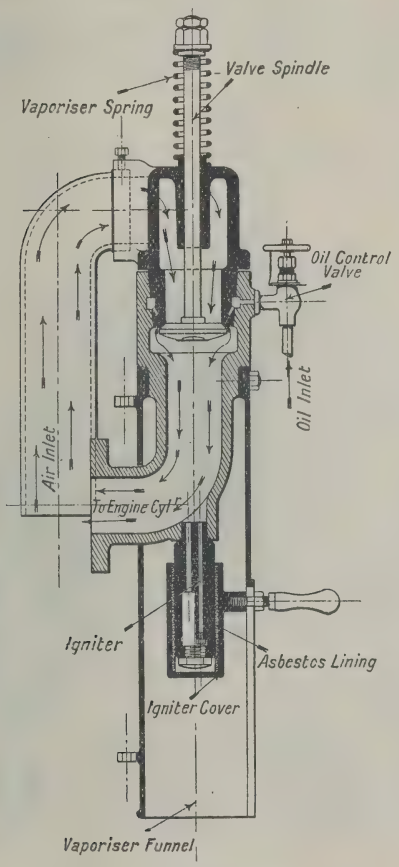


FIG. 30.—The Campbell Kerosene Engine.

In the kerosene engines of the Campbell Gas Engine Co. a very simple arrangement of vaporiser is adopted, as will be seen from fig. 30. The automatic inlet valve shown serves for admission of the whole charge of air to the cylinder ; the kerosene feed is through the seat of the inlet valve, and ignition is automatically effected by the thick-walled hot tube in the lower part of the apparatus. The kerosene is drawn into the vaporiser by the suction of the piston from the fuel tank which is formed in the engine bedplate. The feed pipe is connected to the oil control valve shown.

A preliminary heating of the vaporiser and ignition tube is necessary for 10 to 15 minutes before the engine can be started. Water spray is admitted to the cylinder when running at full load. The Campbell kerosene engines are very simple and satisfactory in service; they are built in sizes from 3 b.h.p. at 320 r.p.m. to 31 b.h.p. at 220 r.p.m.

National Oil Engines.

Oil engines of the horizontal four-stroke cycle type are made by the National Gas Engine Co., Ashton-under-Lyne, in sizes from 2½ to 47½ b.h.p.

The special feature of these engines is the vaporiser and ignition timing device, which secures effective vaporisation of the oil and the proper timing of the ignition at all loads. A lamp must be used for starting, and the vaporiser needs to be heated for about ten minutes to make it hot enough to start the engine.

The engines are supplied both stationary and portable, and are suitable for agricultural and industrial work.

Hamworthy Oil Engines.

Hamworthy oil engines are made in four sizes—2½, 5, 9, and 15 b.h.p.—and are manufactured on strictly repetition lines by the Hamworthy Engineering Co., Poole.

They are supplied as stationary, semi-portable, or portable engines, and are suitable for any purpose requiring power.

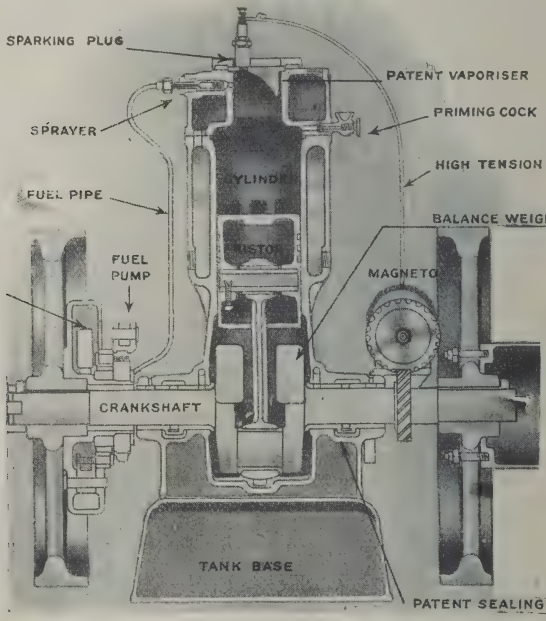


Fig. 31.—The Hamworthy Oil Engine.

Fig. 31 shows the extreme simplicity of these engines; they are stated to be most economical, the full load fuel consumption being only 0·5 to 0·6 pint per b.h.p. hour.

Magneto ignition is fitted and the engines can be started up immediately by one turn of the crankshaft on petrol, then changed over to paraffin fuel.

Robson Oil Engines.

Horizontal oil engines of the four-stroke cycle type from 9 to 75 b.h.p. are manufactured by John Robson Ltd., Shipley.

The engines are suitable for using paraffin and light crude oils. A separate cylinder liner is fitted and the bed is well supported on the foundation, the bed and cylinder jacket being in one casting.

The combustion chamber is a separate casting bolted to the bed, and the valves are arranged vertically, so that they are easily accessible. The governor is of the centrifugal type and regulates the amount of fuel injected into the combustion chamber.

Petter Oil Engines.

Engines of the two-stroke vertical type have been manufactured by Messrs. Petters, Ltd., of Yeovil, for many years, and the company have supplied over 20,000 oil engines. The small sizes are the well-known 'Petter Junior' engines, suitable for farm, estate, and factory machinery, electric lighting, pumping, and other purposes.

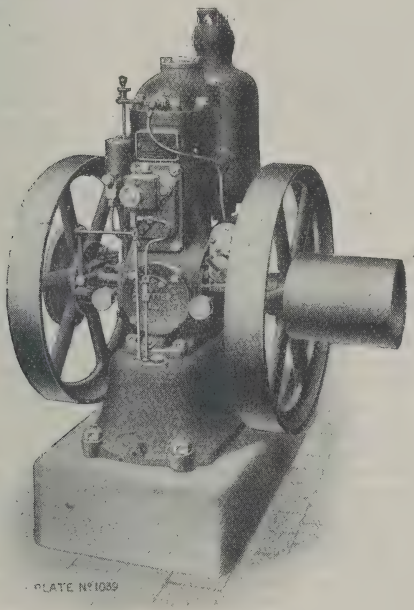


Fig. 32.—The Petter Junior Oil Engine.

The Petter Junior engines are made in three sizes: 2, 5, and 8 b.h.p.; and in three patterns: stationary, for fixing on concrete (as illustrated), semi-portable on wood skids, and portable on four-wheeled carriage.

These engines work on paraffin and have magneto ignition. They are started on a small quantity of petrol, and change over automatically to paraffin after working for a few minutes. By means of the patent fuel injector, the paraffin is vaporised and burnt with the same completeness as in a petrol engine, and at half the cost of fuel.

Other Makers of Oil Engines.

Engines of the horizontal four-stroke type are also made by Crossley Bros., Ltd., Manchester; Fielding & Platt, Gloucester; Tangyes Ltd., Birmingham; and Davey Paxman & Co., Colchester.

Vertical engines are made by Gardner & Sons, Patricroft; Griffin Engineering Co., Bath; the Parsons Motor Co., Southampton; J. I. Thornycroft & Co., Basingstoke; and the New Pelapone Co., Leeds.

INTERNAL-COMBUSTION TURBINES.

Many inventors have devoted attention to the excessively difficult problem of the internal-combustion turbine, and some success has now been attained. From the theoretical aspect, the operation of a jet of gas acting directly on the rotor of a turbine is attractively simple, but when an attempt is made to realise the idea in practice serious difficulties of construction are encountered, in consequence of the inadequate properties of the materials available. The chief difficulty arises from the action of the intensely high temperatures on the metal employed. In the case of the steam turbine with the use of superheated steam an extreme temperature of 400°C. is involved, but the metal work of the gas turbine is exposed to heated gases which may range from 1,500°C. to 2,000°C. The solution of the problem, therefore, depends largely on the question of the provision of suitable materials, especially for the turbine blades. One of the earliest inventors was John Barber, who, in 1791, constructed a machine in which an ignited mixture of gas and air issued in a continuous stream of flame and impinged upon the vanes of a turbine wheel, thus causing rotation; water was injected into the explosive mixture to reduce the high temperature and increase the mass of gas impinging on the vanes. This machine operated on the combustion at constant pressure method, but was not practically successful.

Recently the late M. Réné Armengaud succeeded in obtaining an output of 300 b.h.p. from a large constant-pressure internal combustion turbine by reducing the flame temperature at efflux to about 750°F. by large additions of steam; this machine may thus be equally fairly described as a highly superheated steam turbine. Petrol was used as fuel, the consumption amounting to roundly 3 lbs. per b.h.p. hour, which is about five times as great as in a petrol gas engine of good design.

M. Karovodine has also constructed a turbine in which explosions from atmospheric pressure are caused to occur in rapid succession and utilised to drive a small impulse turbine; this machine was very small, developing only 1·6 b.h.p. at 10,000 revolutions per minute, and the fuel consumption was very high. Mr. Holzwarth has also built a turbine designed for an output of 1,000 b.h.p., but it is said that so far only about 160 b.h.p. has actually been obtained with it. Designs involving the direct impact of flame on turbine vanes appear to present almost insurmountable practical difficulties. Sir Dugald Clerk, F.R.S., has suggested that in the not distant future very large internal combustion power units may become commercially possible by combining a device of the ingenious Humphrey internal combustion pump type with an efficient reaction turbine; it is certainly conceivable that such a combination may prove successful in large stationary land installations. Dr. Clerk points out that the machine would be of great simplicity in details as neither pistons, connecting-rods, nor crankshafts would be necessary.

An important work upon the gas turbine appeared in 1913 by Herr Holzwarth (English Trans. by A. P. Chalkley, B.Sc.: Griffin & Co.), in which the present position, both in theory and practice, is clearly set out. The fundamental unit of the Holzwarth turbine comprises a combustion chamber supplied by a suitable pump with a mixture of gas, or vapour, and air, through mechanically operated inlet valves. The mixture is delivered at a small pressure and ignited by H.T. magneto. The resulting gases at high temperature and pressure then discharge themselves through a spring-controlled flap valve termed the 'nozzle' valve, and issuing from a nozzle impinge on the vanes of a rotor. On passing these vanes, the gases next enter an exhaust, wherein a partial vacuum is maintained by a suitable exhauster. Shortly after ignition the nozzle valve is slowly closed mechanically, sufficient time being permitted, however, to allow a gust of scavenging air to pass through by which the combustion chamber is cleared in readiness for the next working charge, and the nozzle and vanes of the rotor are cooled.

The action is thus intermittent, and the design involves three valves together with charging and exhausting pumps. In the actual turbine several such units are arranged symmetrically around a turbine wheel, or rotor, whose rotation is maintained by the successive impulses thereby imparted to its vanes. Experiments are being continued by Herr Holzwarth and his colleague Mr. E. Junghaus.

A combined steam and gas turbine appears to be the most promising lines upon which the problem should be tackled, and some experimenters see great prospects of success in this direction.

Lloyd's Rules for Marine Internal-Combustion Engines.

The following rules for the survey of internal combustion engines for marine purposes have been drawn up by Lloyd's Register of British and Foreign Shipping:—

General.

Section 1.—In vessels propelled by internal combustion engines the rules as regards machinery will be the same as those relating to steam-engines so far as regards the testing of material used in their construction and the fitting of sea connections, discharge pipes, shafting, stern tubes, and propellers.

Construction.

Section 2.—1. The following points should be observed in connection with the design of the engines:—

2. The shaft bearings, connecting-rod brasses, the valve gear, the inlet and exhaust valves must be easily accessible.

3. The reversing gear and clutch must be strongly constructed, and easily accessible for examination and adjustment.

4. In engines of above 60 b.h.p. which are not reversible, and which are manœuvred by a clutch, a governor or other arrangement must be fitted to prevent racing of the engine when declutched.

5. Efficient positive means of lubrication—preferably sight feed—must be fitted to each part requiring continuous lubrication.

6. When the engines are of the closed-in type they must be so fitted that the contained lubricating oil can be drained when necessary, and in wood vessels an easily drained metal or metal-lined tray must be fitted to prevent leakage of either fuel oil or of lubricating oil from saturating the woodwork.

7. Carburettors, where petrol is used, and vaporisers, where paraffin is used, should be so designed that when the engine is stopped the fuel supply is automatically shut off. If an overflow is provided in the carburettor or vaporiser, a gauze-covered tray with means of draining it must be fitted to prevent the fuel from flowing into the bilges.

Strong metallic gauze diaphragms should be fitted either between the carburettor (or vaporiser) and cylinders or at the air inlets.

8. If the ignition is electric, either by magneto or by coil and accumulator, all electric leads must be well insulated and suitably protected from mechanical injury. The leads should be kept remote from petrol pipes, and should not be placed where they may be brought into contact with oil.

The commutator must be enclosed, and the sparking coils must not be placed where they can be exposed to explosive vapours.

9. No exposed spark gap should be fitted.

10. In paraffin and heavy-oil engines, where lamps are used for ignition or for vaporising, these lamps should be fixed by some suitable bracket, and the flame enclosed when in use.

11. The circulating pump sea suction is to have a cock or valve on the vessel's skin placed on the turn of the bilge in an easily accessible position, and the circulating pipe is to be provided with an efficient strainer inside the vessel. The discharge overboard is to be fitted with a cock or valve on the vessel's skin if it is situated under or near the load line of the vessel.

12. A bilge pump worked by the engines or an independent power-driven bilge pump is to be fitted to draw from each part of the vessel. In open launches this bilge pump may be omitted, provided suitable hand pumps are fitted.

13. The cylinders are to be tested by hydraulic pressure to twice the working pressure to which they will be subjected, the water-jackets of the cylinders to 50 lbs. per sq. in., and the exhaust pipes and silencer to 100 lbs. per sq. in.

14. The exhaust pipes and silencer should be efficiently water-cooled or lagged to prevent damage by heat, and if the exhaust is led overboard near the water-line, means must be arranged to prevent water from being syphoned back to the engine.

15. The machinery must be tried under full working conditions, the report stating the approximate speed of vessel, the number of revolutions of the engines at full power, both ahead and astern, and the lowest number of revolutions of the engines which can be maintained for manœuvring purposes.

Rules for Determining Sizes of Shafts.

Section 3.—The crank, intermediate and other shafts, if of ordinary mild steel, are to be of not less diameters than as given in the following table. When special steel is used, the sizes are to be submitted for consideration.

1. For petrol or paraffin engines for smooth water services :—

$$\text{Diameter of crank shaft in inches} = C\sqrt[3]{d^2 s},$$

here d = diameter of cylinder in inches,

s = stroke of piston in inches.

Four-stroke Cycle.	Two-stroke Cycle.	Bearing between each Crank.	Two Cranks between the Bearings.
For 1, 2, 3, or 4 cylinders	1 or 2 cylinders	$C = \cdot34$	$C = \cdot38$
,, 6 ,,	3 ,,	$C = \cdot36$	$C = \cdot40$
,, 8 ,,	4 ,,	$C = \cdot38$	$C = \cdot425$
,, 12 ,,	6 ,,	$C = \cdot44$	$C = \cdot49$

For open sea service add ·02 to C.

Diameter of intermediate and screw shafts in inches

$$= C \sqrt[3]{d^2 s} (N+3),$$

where d = diameter of cylinder in inches,
s = stroke of piston in inches,
N = number of cylinders.

For smooth water services—	For open sea services—
C = ·155 for intermediate shafts.	C = ·165
C = ·170 for screw shafts fitted with continuous liners.	C = ·180
C = ·180 for screw shafts fitted with separate liners or with no liners.	C = ·190

In engines of two-stroke cycle N is to be taken as twice the number of cylinders.

2. When ordinary deep-thrust collars are used, the diameter of the shaft between the collars is to be at least $\frac{21}{20}$ of that of the intermediate shaft.

3. In the cases of Diesel and other engines in which very high initial pressures are employed particulars should be submitted for special consideration.

Fuel Tanks and Connections.

Section 4.—1. Separate fuel tanks are to be tested with all fittings to a head of at least 15 ft. of water. If pressure feed tanks are employed, they are to be tested to twice the working pressure which will come on them, but at least to a head of 15 ft. of water. If the tanks are made of iron or steel, they should be galvanised.

2. Strong and readily removable metallic gauze diaphragms should be fitted at all openings on petrol tanks.

3. Paraffin or heavy oil tanks, not used under pressure, are to be fitted with air pipes leading above deck. Pressure-feed tanks and tanks containing petrol should be provided with escape valves discharging into pipes leading to the atmosphere above deck. The upper ends of all air pipes are to be turned down, and pipes above 1 in. diameter are to be provided with gauze diaphragms at the end.

4. No glass gauges are to be fitted to fuel tanks containing either petrol, paraffin, or heavy oil.

5. Filling pipes are to be carried through the deck so that the gas displaced from the tanks has free escape to the atmosphere.

6. Separate fuel tanks should be provided with metal-lined trays to prevent any possible leakage from them flowing into the bilges or saturating woodwork. Arrangements are to be provided for emptying the tanks and draining the trays beneath them. For petrol tanks the trays must have drains leading overboard where possible, or they should be gauze-covered trays with means for draining them.

7. All fuel pipes are to be of annealed seamless copper with flexible bends. Their joints are to be conical, metal to metal. A cock or valve is to be fitted at each end of the pipe conveying the fuel from the tank to the carburettor or vaporiser. The fuel pipes should be led in positions where they are protected from mechanical injury and can be exposed to view throughout their whole length.

8. The engine-room and the compartment in which the fuel tanks are situated are to be efficiently ventilated.

9. An approved fire-extinguishing apparatus must be supplied.

Periodical Surveys.

Section 5.—1. The machinery is to be submitted to survey annually. At these surveys the cylinders, pistons, connecting-rods, crank and other shafts, inlet and exhaust valves and gear, clutches, reversing gear, propeller, sea connections, and pumps are to be examined. The electric ignition is to be examined and the electric leads tested. The fuel tanks and all connections are to be examined and, if deemed necessary by the surveyor, to be tested to the same pressure as required when new. If practicable, the engines should be tested under working conditions.

2. The screw shaft is to be examined annually and drawn at intervals of not more than three years in the cases of shafts fitted with continuous liners, and not more than two years in the cases of other shafts. (On the application of owners, the Committee will be prepared to give consideration to the circumstances of any special case.)

High Compression Oil Engines.

Rules for the Construction and Survey of Diesel engines and their auxiliaries have been adopted by the General Committee of Lloyd's Register, and can be obtained on application to Registrary, 71 Fenchurch Street, London, E.C. 3.

SECTION XXX

PART IV

HOT-AIR ENGINES.

In these the working air receives its heat from an external furnace by conduction through the walls of a metal containing vessel ; such engines may thus be described as ' External Combustion Engines ' to distinguish them from ' Internal Combustion Engines ' wherein the air is heated by chemical combustion occurring throughout its mass. In the Stirling engine the diagram consists of two isotherms and two constant volume lines (fig. 33). The contained air is (1) compressed isothermally at (abs.) temperature T_1 from v_1 to v_2 ; (2) heated at constant volume v_2 to pressure p_3 and temperature T_3 ; (3) expanded isothermally at temperature T_3 behind the working piston from pressure p_3 and volume v_2 to pressure p_4 and volume v_1 ; and (4) cooled at constant volume v_1 from temperature T_3 to temperature T_1, the pressure corre-

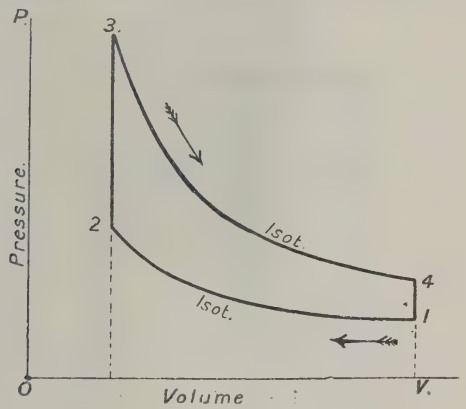


FIG. 33.

spondingly falling from p_4 to p_1. The useful work done is represented by the area 1, 2, 3, 4. If r denote the expansion ratio v_1/v_2 we have :—

$$\text{Heat supplied} = k_v (T_3 - T_1) + c\, T_3 \,.\, \text{Log}_e\, r.$$
$$\text{Heat rejected} = k_v (T_3 - T_1) + c\, T_1 \,.\, \text{Log}_e\, r.$$

The useful work is the difference of these, viz. :—

$$(T_3 - T_1) \,.\, c \,.\, \text{Log}_e\, r\,.$$

And the thermal efficiency is accordingly :—

$$\frac{(T_3 - T_1) \,.\, c \,.\, \text{Log}_e\, r\,.}{k_v (T_3 - T_1) + c\, T_3\, \text{Log}_e\, r\,.} \quad . \quad . \quad . \quad . \quad . \quad . \quad (29)$$

This has a value much less than that of the Carnot engine working between T_1 and T_3, viz. $\frac{T_3 - T_1}{T_3}$, on account of the term $k_v (T_3 - T_1)$ in the denominator. The Rev. R. Stirling, in 1827, introduced the regenerator or 'heat-filter' for storing the heat $k_v (T_3 - T_1)$ given out during the period

4, 1, fig. 33, and restoring it to the air during the period 2, 3; by this device the term $k_v(T_3-T_1)$ disappears from the denominator and, if perfectly realised, the efficiency would then become equal to that of the perfect Carnot engine, viz. $\frac{T_3-T_1}{T_3}$. The first Stirling engine (made in 1830) is shown diagrammatically in fig. 34. A is a light, bulky displacer filled with brickdust, and fitting easily in its cylinder. The lower portion of the air chamber, B, is situated immediately over the furnace C, the upper portion being kept always cool by a system of cold-water circulating pipes W. In the annular space EE, surrounding the cylinder within which A works, is a series of very thin metal plates separated by spaces of about ·02 in. width only; this is the regenerator. Its upper end is constantly at about the temperature T_1, and lower end at the temperature T_3; H is the working cylinder, and K its piston.

In the configuration shown, the displacer is at the top of its stroke, while K is at the bottom of its stroke; the contained air is thus at minimum volume and maximum temperature, and the

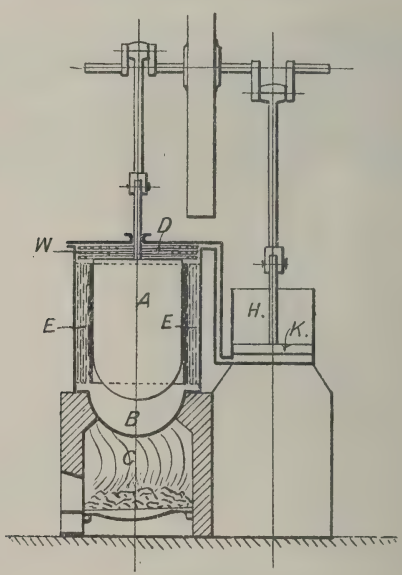


FIG. 34.—The Stirling Engine.

corresponding point on the diagram fig. 33 is 3. The piston next moves out on its working stroke, the pressure falling with expansion and heat being supplied to the working air from the furnace. At the end of the out-stroke of K, A is at the bottom of its stroke and has thus passed the working air from B, through the regenerator EE to the cooled end W of the air chamber; its temperature is now T_1, and pressure accordingly low. The air in passing from B to W through EE gives up to the plates the heat $k_v(T_3-T_1)$ in the ideal case, and this heat is restored again to the air on its return passage through EE from W to B; by this device the economy was much improved.

It will be noted that there are no valves; the working piston is always in communication with the air chamber, and the air in the working cylinder is always at low temperature. By closing the working cylinder H at the top, and connecting it to a second air chamber and displacer the engine becomes double acting. Though theoretically interesting, the hot-air engine proved so impracticable in any but the smallest powers that it is now quite obsolete. The practical difficulties of rapidly heating a large volume of air; failure of the bottom of the air vessel B; and the great weight and bulk of these engines have combined to effect their disuse. The actual thermal efficiency realised in practice is only from 7 per cent. to 10 per cent.; the mechanical

efficiency is also, in general, low. In the following short table some trial results are given for reference :—

Air Engine.	Date.	Cyl. Bore. Ins.	Stroke. Ins.	Revs. per Min.	Horse Power.		Mechl. Eff. Per Cent.	Lbs. Fuel per Hour.	
					Indic.	Brake.		per I.H.P.	per B.H.P.
Buckett	1883	24·0	16·0	61	20·2	14·4	71	1·8	2·5
Benier	1887	13·4	13·8	117	5·8	4·0	69	3·1	3·6
Bailey	1883	14·6	6·9	106	2·4	1·3	55	4·2	7·6
Rider	1898	6·7	9·5	128	0·66	0·23	35	—	—
Ericsson	1898	8·0	3·9	101	0·23	0·06	27	—	—

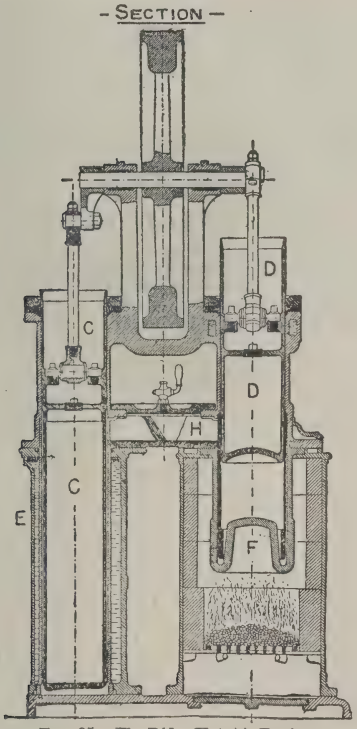


FIG. 35.—The Rider Hot-Air Engine.

Owing to their ease in working and absolute safety, small hot-air engines are still usefully employed in certain situations as, e.g. for driving fog signals on lightships and lighthouses, and for domestic purposes, as pumping, sawing, driving small tools, etc., in cases where only small power is needed.

The 'Robinson' is a small hot-air engine of the Stirling type, made in five sizes from $\frac{1}{4}$ to $\frac{3}{8}$ b.h.p., by A. E. Robinson & Co., Beswick, Manchester, and handled by Messrs. Norris, Henty & Gardners, of 115 Queen Victoria Street, London, E.C.4.

Another much used air engine is the 'Rider,' made by Messrs. Hayward, Tyler & Co. Ltd., 99 Queen Victoria Street, London, E.C., in three sizes, of ¼, ½, and 1 b.h.p., respectively. It includes all the features of the early Stirling engine except that the working cylinder is in communication with the hot end of the air chamber, and not the cold end as in all Stirling's designs.

In this engine (fig. 35) there are two vertical cylinders, each of which contains a piston or plunger, their strokes and diameters, however, not being equal, that in the power cylinder, in which the air is heated, being the larger. One of these (that to the left hand), lettered C, is the displacer, while that on the right, D, is the power piston. The crankshaft carries a flywheel in the middle of its length and cranks at each end attached to C and D by connecting-rods, as shown.

The cranks are so placed that when C is at the bottom, D is slightly above the middle of its stroke. A fire, F, is maintained below the power cylinder, while the displacer cylinder is cooled by a water jacket. The cylinders C and D are constantly in communication through the passage H, in which is contained a regenerator consisting of a number of thin wrought-iron plates placed very close together, whose function has already been explained (*supra*).

The bottom of the power cylinder is maintained at a high temperature by the fire below it; when the power piston D is at the bottom of its stroke the air beneath it, being highly heated, is at pressure and the piston accordingly moves upwards as D is of larger diameter than C. The accompanying descent of C transfers air from the cool displacer cylinder through the regenerator in H—where it becomes warmed up—and delivers it by way of a pendent liner in the power cylinder below the rising working piston D when it becomes heated, thus increasing in pressure, and assists in driving D to the top of its stroke.

When this point is reached, the displacer plunger C is at half-stroke upwards, and the subsequent descent of D transfers air from the power cylinder, via the regenerator, to the cooled displacer cylinder, the temperature and pressure consequently falling, and heat being stored up in the regenerator to be absorbed during the next power stroke.

Efficiency of Hot-Air Engines.

In the best hot-air engines a consumption of 1·8 lb. of gas coke has yielded 1 indicated horse-power, or 2·54 lbs. of coke per b.h.p., the h.p. being calculated after deducting the work required to compress the air. The absolute efficiency is therefore only about 7·9 per cent. referred to b.h.p. In the smaller sizes of hot air engine the consumption of fuel is usually very much higher than this, and is often 20 lbs. or more per b.h.p. hour.

SECTION XXX

PART V

AERO AND MOTOR CAR ENGINES—MOTOR CARS.

AERO ENGINES.

Engines for aircraft are either air-cooled or water-cooled, and operate on the four-stroke cycle. Vertical, diagonal, radial, and rotary types are used. The majority of engines are now water-cooled, but air cooling has certain advantages in low weight per h.p. and compactness when used with radial or rotary engines, so will always be in demand, especially for short journeys and low powers.

Vertical type engines have cylinders arranged vertically over the crankshaft. Six or eight cylinders are used, with a corresponding number of throws in the crankshaft. The engines are mainly water-cooled.

Diagonal or Vee type engines have cylinders mounted in two rows inclined at an angle of from 45 to 90 degrees, two cylinders acting on each crankshaft throw. The number of cylinders is eight or twelve, and they are invariably water-cooled in the larger sizes.

A modification of this type is sometimes called the fan or broad-arrow type; this has two rows of diagonal with one row of vertical cylinders in between. The high-powered engines are of this design, and are water-cooled.

Radial type engines have cylinders spaced radially around a rotating crankshaft. An odd number of cylinders, usually seven or nine, are used to secure an even turning moment. Both water-cooled and air-cooled engines are made.

Rotary type engines are similar in general appearance to the radial engine, but the cylinders and crankcase rotate around a fixed crankshaft; the cylinders are air-cooled. The first successful engine of this type was the Gnome.

In September 1910, Mr. F. W. Lanchester published the following figures relating to the Antoinette, Renault, and Gnome aero engines, and, for the purposes of comparison, corresponding results for the standard 22 h.p. and 38 h.p. Daimler-Knight car engines :—

Item.	Antoinette.	Renault.	Gnome.	Daimler-Knight.	Daimler-Knight.
Nominal horse-power	50	55	50	22	38
Actual b.h.p.	54·3	58·8	46	39	57·3
At revolutions per min.	1,200	1,800	1,000	1,400	1,200
Bore in inches	4·35	3·44	4·35	3·8	4·9
Stroke in inches	4·15	4·75	4·73	5·14	5·14
No. of cylinders	8	8	7	4	4
Brake mean effective pressure, lbs. per sq. in.	72·5	73·6	74·3	94·5	97
Engine weight, as defined, lbs.	292·4	375	167	360	520
Weight in lbs. per b.h.p.	5·38	6·4	3·63	9·2	9·1
Allow extra for radiator	—	—	—	1·0	1·0
Lbs. of petrol per b.h.p. hour	·94	·96	·89	·67	·54

The weight is defined as that of the engine in running order, including all accessories, with radiator and contained water (if fitted), but excluding silencer, flywheel (if any), and petrol and oil tanks. The low mean pressure and large petrol consumption of the aero engines will

be noted; well-designed car engines of from 30 to 60 h.p. require only about ·65 lb. of petrol per b.h.p. hour; the average of the three aero engines above gives ·91, an excess of 40 per cent. The consumption of lubricating oil is, in general, also abnormally large in aero engines. The primary consideration has so far been weight reduction in this class of engine.

Particulars of some British aero engines were given by Lord Weir in a paper read before the N.E. Coast Institute of Engineers and Shipbuilders, July 1919, and representative air-cooled and water-cooled were tabulated as follows :—

Ref. No.	Type.	Method of Cooling.	No. of Cylinder.	Bore m/m.	Stroke m/m.	Compression Ratio —to 1.	Piston Speed ft. per minute.
1	Bentley, Rotary 2 . . .	Air .	9	140·00	180·00	5·26	1,536·0
2	A.B.C., Fixed Radial, 'Dragon-fly'	Air .	9	139·7	165·09	4·42	1,787·5
3	Straight Six, Siddeley, 'Puma'.	Water	6	145·00	190·00	5·00	1,558·0
4	2 rows of 4 V. at 90 deg. Sunbeam, 'Arab'	Water	8	120·00	130·00	5·3	1,707·0
5	2 rows of 6 V. at 60 deg. Rolls-Royce, 'Eagle' 8	Water	12	114·29	165·09	5·3	1,950·0
6	2 rows of 6 V. at 60 deg. Galloway, 'Atlantic'	Water	12	145·00	190·00	5·4	1,872·0
7	2 rows of 6 V. at 60 deg. Rolls-Royce, 'Condor'	Water	12	139·69	190·5	5·1	2,187·5
8	3 rows of 4 V. at 60 deg. Napier, 'Lion'	Water	12	139·69	130·17	5·55	1,708·0

Ref. No.	B.H.P.		Speed.		M.E.P.		Normal Propeller Speed.	Dry Weight in Lbs.	Lb. per H.P.		Petrol lbs. per Normal H.P. Hour.	Oil lbs. per Normal H.P. Hour.
	Normal.	Max.	Normal. R.P.M.	Max. R.P.M.	Normal.	Max.			Dry.	Wet.		
1	230	234	1,300	1,360	92·0	—	1,300	498	2·165	—	0·63	0·088
2	320	350	1,650	1,750	110·0	—	1,650	635	1·98	—	0·585	0·028
3	250	266	1,400	1,500	115·0	123·0	1,400	645	2·58	—	0·6	0·062
4	212	220	2,000	2,100	112·0	—	1,200	550	2·6	3·24	0·486	0·039
5	359	368	1,800	1,900	127·2	131·4 at 1,500	,08	926	2·58	3·23	0·5	0·025
6	550	575	1,500	1,600	126·3	—	1,500	1,150	2·09	2·74	0·504	0·045
7	610	656	1,750	2,000	129·0	129·4	971	1,350	2·21	2·86	0·495	0·0225
8	450	468	2,000	2,100	122·0	126·0	840	1,318	1·86	2·51	0·495	0·0225

The advance made by British manufacturers will be appreciated by a comparison of the two tables. Low weight per h.p. is now obtained, and the economy in petrol and lubricating oil is noteworthy; also the m.e.p. is approaching the theoretical maximum. Even compared with 1914, when the average engine developed about 100 h.p. and weighed approximately 3·75 lb. per h.p., remarkable progress has been made.

In stating the power of aero engines, the h.p. developed at ground level is given, but the machine operates under quite different conditions when up in the air. Taking the usual approximate rule of allowing 3 per cent. loss of power for every 1,000 feet altitude, the reduction in the h.p. of an engine is considerable when flying at 15,000 feet or over.

To prevent this loss, or to reduce it, some engines have been designed for the rarefied air conditions and have smaller clearance volume and forced induction. The full development of their power at ground level is prevented, as if no alteration is made the power and pressures at ground level will always be higher and may damage the engine.

On some engines a blower is provided to force more air into the cylinders at high altitudes and the pressure of the exhaust is employed. The exhaust turbine has now reached a high state of efficiency, and has been developed by Rateau for this supercharging of aero engines.

Supercharging permits of the realisation of a constant pressure of the cylinder charge at the end of the suction stroke, and makes it possible to obtain constant power under any atmospheric conditions. At first it was the practice to supply a small extra charge at the end of the suction

stroke, but now it is possible for a turbine or blower to supply the whole of the charge to the cylinders.

The altitude laboratory of the American Bureau of Standards is specially equipped for testing engines under various atmospheric conditions, and fig. 36 shows the results of altitude, as well

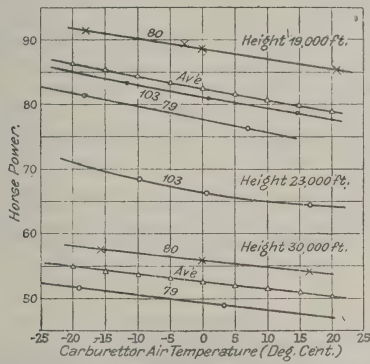


FIG. 36.—H.P. Temperature Curves at various altitudes: Hispano-Suiza Engine, 8 cylinder, 150 h.p.

as of varying air temperatures, upon the power of a Hispano-Suiza 150 b.h.p. engine. Three designs of carburettor were used, i.e., Claudel hand-adjusted 5·3 to 1, Claudel hand-adjusted 6·2 to 1, and Tice inherent-adjusted 5·3 to 1. The second gave the best results.

Carburation.

With radial and rotary engines, it is usual to fit a single simple carburettor without float chamber, the petrol flow being hand-adjusted to suit engine speed and atmospheric conditions.

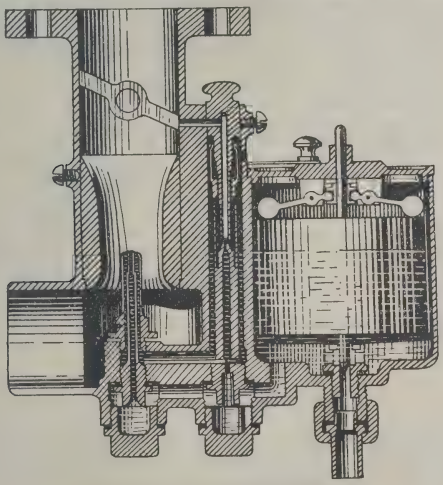


FIG. 37.—The Zenith Carburettor

With stationary engines two or four carburettors are fitted according to the size of the engine. Representative types are the Zenith and Claudel-Hobson, which are fitted with float-chambers, and designed to give a practically constant mixture under the usual variations of load and speed. These carburettors require to be carefully adjusted to each engine so as to give the same results, the operation of adjusting being known as 'synchronising.'

Aero engine carburettors must operate under variable circumstances. As the machine rises the density of the atmosphere decreases, and the quantity of petrol required per cubic foot of free air becomes less. The desired reduction in petrol flow is now carried out by hand adjustment, either by throttling the supply to the jet or, in the case of carburettors with float chambers, by reducing the pressure difference between the float chamber and the jet.

One of the best-known carburettors is the Zenith, fig. 37. The arrangement of the induction piping is a most important factor in getting good carburation; sudden changes in the speed of the charge, and sharp bends, cause a considerable loss. Also there must be no dip in the pipes. The usual methods of heating are by water circulation, by exhaust gases, and by hot air taken into the carburettor.

The purpose of the choke tube is to obtain the correct velocity of air around the jets in order to get the best mixture at all speeds. The main jet has most influence at high speeds, and the compensator, which corrects the irregularities of the main jet, has the greatest influence at low speeds. Besides these parts there is in the Zenith carburettor a special device to regulate slow running.

Water-cooling.

Water-cooling for aircraft has followed motor-car practice in general principles, but there has been great diversity of opinion as to radiator design. There was a tendency to utilise brass film, which is still predominant in car construction, owing to its low cost, but the fact that the water path is in long vertical channels which, under field-service conditions, are liable to become blocked, its liability to develop leakages, and the difficulty of repair, led to its complete elimination.

The tube honeycomb type has become standardised. Here again there was diversity, and after the trial of round, square, and hexagonal tubes, the survival of the fittest resulted in the selection of a round tube with hexagonally bulged ends. This gives maximum cooling surface with minimum solid frontal area, and therefore minimum head resistance.

Opinions of designers have also varied greatly as to the best position of the radiator. The 'nose' position, in which the radiator is placed immediately behind the propeller, has most adherents, but excellent results have also been obtained where the radiator is placed, (*a*) in two halves on the sides of the fusilage, or (*b*) below the fusilage.

In the latter case it is provided with a lifting gear, so that it can be drawn up into the fusilage for the purpose referred to below.

The Germans have also tried extensively a radiator inserted in the top plane centre section, but lately have abandoned this method.

The quantity of water carried is very small, and it is circulated somewhat rapidly by a pump so that the heat is dissipated quickly.

Radiator Shutters.

In machines designed for flying at very high altitudes, it is necessary to provide a variable cooling device to obviate the danger of the radiator freezing when high speeds are obtained in diving. For this purpose either the device referred to above, or more frequently a Venetian-blind type of shutter, which can be closed to prevent the air having access to the radiator, is provided.

It is controlled by the pilot, who also has a radiator thermometer enabling him to keep a watch on the radiator temperature.

Aero Engine Production.

According to the report of the Ministry of Munitions the total horse-power of aero engines manufactured between August 1914 and the end of 1918 amounted to 7,094,000, and more than half of this was turned out in the last year. The output in 1918 was 4,143,000 h.p. The horse-power of internal combustion engines for aeroplanes, motor vehicles, and tanks used during the war came to the huge total of 10,000,000 h.p.

Engines for British Aircraft Competitions, 1920.

In connection with the British Aircraft Competitions for prizes amounting to 64,000*l.*, the following list of engines for use by competitors has been approved by the Air Council. It will be left to the discretion of the judges to decide whether any new engine not included in this list fulfils the conditions of the competition.

A.B.C. (all types).
Beardmore (160 h.p.).
B.H.P.
B.R. 1.
B.R. 2.
Cosmos (all types).
Galloway Adriatic.
Galloway Atlantic.
Galloway Pacific.
Green (all types).
Napier Lion.
R.A.F. (all types).
Rolls-Royce (all types).
Siddeley Puma.
Sunbeam (all types).
Wolseley Viper.

Gnome Engines.

The first successful rotary engine was the Gnome. Thus, in the 'Aerial Derby' of 1913, of eleven machines which started, six had Gnome engines, two Anzani, two Le Rhône, and one Austrian-Daimler; no British engine appeared in this contest. The 50 h.p. Gnome engine has seven cylinders symmetrically arranged as shown in fig. 38; the 100 h.p. type has nine cylinders.

The Gnome rotary engine is air-cooled, dispenses with a flywheel, is very light for its power, and by its large angular momentum prevents 'fluttering' of the propeller and irregular running.

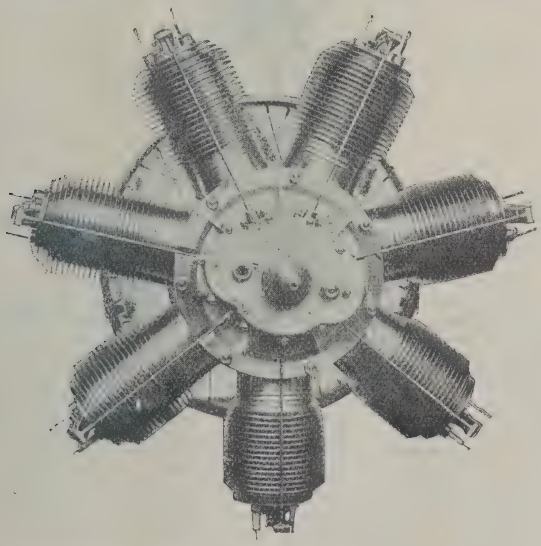


Fig. 38.—The 50 h.p. 'Gnome' engine.

In the 50 h.p. seven-cylinder type the cylinders are placed at equal angular intervals and, together with the crank-chamber, rotate around a fixed crankshaft. The seven connecting rods are all in the same plane and operate on one crank-pin; one of the rods is in one piece with the 'big-end,' which includes two large rings of L section having each six holes drilled in them at angular distances apart of 51⅓ degrees (fig. 39); these holes severally receive the six pins connecting up the big ends of the remaining six connecting rods to the crank-pin. One rod is necessarily rigidly connected to this large double-ring cage in order to define its position. The cage is fitted with two ball races through which the actions of the several rods are communicated

to the crank-pin. The angularity of the six shorter rods slightly exceeds that of the seventh rigid rod, but the difference does not appreciably affect the running of the engine; the rods are of steel, of H section, with milled surfaces.

The cylinders are machined from solid steel ingots, the finished thickness of the cylinder walls being but 1½mm. (·059 in.); the necessary strength is furnished by the fins left on the outer surface; these, as shown in fig. 38, increase in diameter towards the combustion chamber ends of the cylinders. The cylinder tops are removable and contain the exhaust valves; the bore is 4·35 ins. and stroke 4·73 ins.

The crank chamber is cylindrical in form, and of nickel steel; no aluminium whatever is used; the crank chamber is borne on the fixed crankshaft by a pair of ball bearings housed in the end plates; one end plate bears a cylindrical extension about 5 ins. diameter, to which the propeller boss is attached by means of two keys. Through the hollow fixed crankshaft the working

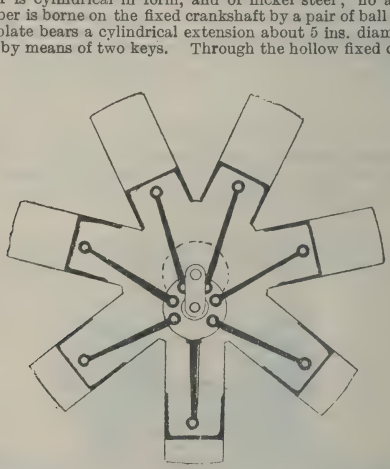


FIG. 39.—Diagrammatic sketch of the 'Gnome' engine, illustrating the method of coupling up the connecting rods to the single crank. It will be noticed that one connecting rod is rigid with the common big end.

charge of petrol vapour and air is introduced into the crank chamber; the hollow shaft also permits two copper lubricating pipes to be led into the centre of the engine. The carburettor is of a simple single-jet type without float chamber, the supply of petrol being hand regulated by the driver through a screw-down needle valve. Engine speed is regulated by a disc throttle valve placed at the junction of the carburettor and crankshaft. The inlet valves are of the spring-controlled automatic type formerly used in car engines, but now entirely superseded by the mechanically operated design. The automatic valve is here adopted partly to save weight and partly because it may then be located in the centre of the piston crown. Both inlet and exhaust valves are counterbalanced against the centrifugal actions arising from the cylinder rotation. The engine operates on the four-stroke single-acting system. As already mentioned, the exhaust valves are placed in the cylinder heads and the exhaust is discharged from them directly into the atmosphere. The pistons are of steel, very thin and light, and are fitted sometimes with three spring rings, sometimes with one broad one only. The spring rings are compound, and consist each of a thin L-shaped gunmetal ring with a stiff steel Ramsbottom spring ring behind it; the gunmetal rings are very thin and are considered to act somewhat in the manner of a cup-leather in preserving gas-tightness.

Dr. Watson has pointed out that in engines of this type, if the working impulses are required to occur at equal angular intervals during the working of the engine, then there must be an *odd* number of cylinders. Ignition is by high-tension magneto, the armature being so geared as to run at 1¾ times the revolution rate of the engine cylinders.

Lubrication has presented considerable difficulties with this type of engine, and in order to obtain satisfactory running the amount of lubricating oil used has frequently been abnormally great. Castor oil is used, and in one test the consumption *per hour* amounted to 1½ gallon. The surplus oil is whirled from the engine and discharged, with the exhaust gases, into the atmosphere from the cylinder heads.

110 H.P. Le Rhône Engines.

The Gnome and Le Rhône Co. also manufacture this engine, which has 9 cylinders, 112 mm. dia. by 170 mm. stroke, and operates on the four-stroke cycle. The weight of the engine, with oil pump and magneto, is 330 lbs. The engine is of the rotary air-cooled type, and gives a total of 127 h.p. when running at 1,200 r.p.m., which is reduced to a useful power, deducting windage, of 113 h.p.

Consumptions of ·765 pint petrol per h.p. per hour, and 12 pints of lubricating oil per hour are obtained.

To balance the rotating masses and to eliminate dead centres, the number of cylinders is an odd number, and the valve gear is arranged to fire them alternately. The Le Rhône differs from the Gnome engine, as inlet valves are fitted to the cylinder heads instead of the piston uncovering ports at the bottom of the cylinder, and induction pipes are led to each of the valves in the heads from the crankcase.

Zeitlin Engines.

Rotary four-stroke cycle Zeitlin engines having a designed b.h.p. of 220 at 12,000 ft. are being developed by the Zeitlin Engine Co., and have a cylinder diameter of 135 mm. A noteworthy feature in this engine is the variation in length of the stroke during each cycle, the working

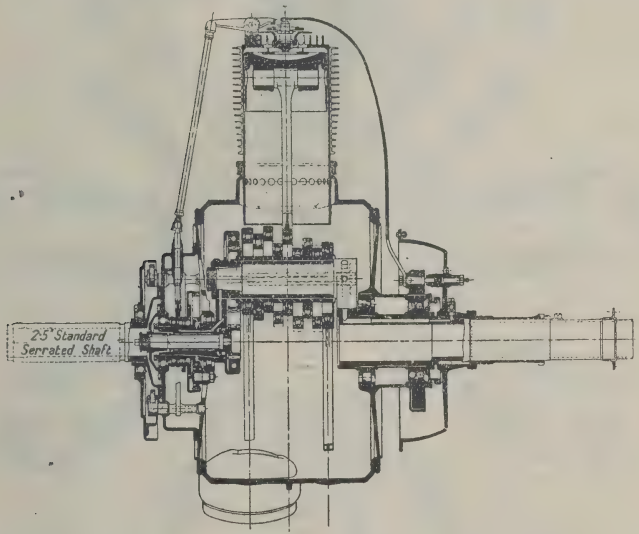


Fig. 40.—The Zeitlin Engine.

stroke is 188 mm., the exhaust and compression strokes are 203·5 mm., and the suction stroke is 226 mm.

The extra length of the exhaust stroke brings the piston almost up to the cylinder head and thoroughly scavenges the cylinder through the mechanically operated valve in the head. The still longer suction stroke draws in a supply of air through the exhaust valve, and at the bottom of the stroke uncovers ports; the mixture from the crankcase then passes into the cylinder. The following stroke compresses the charge to the desired pressure and upon the charge being fired the working cycle is repeated.

The piston, in addition to its ordinary reciprocating motion through 181 mm., performs a

harmonic motion through the range of 22·5 mm. This result is achieved by coupling the connecting-rod on to an eccentric bush of 15·907 mm. throw, surrounding the crank pin, and by driving this bush round the crank pin as axis, in the same direction as the engine and at one-half the engine speed. The crank throw is 101·75 mm.

The weight of air drawn into the cylinder at 12,000 ft. altitude, together with that obtained from the crank case with the mixture, is sufficient to permit the engine to develop its full rated power at that altitude. At lesser altitudes the weight of air drawn in past the exhaust valve during the suction stroke is in excess of actual requirements, and the exhaust valve is opened again during a portion of the compression stroke to expel the excess air from the cylinder before it has time to mix thoroughly with the explosive vapour. The length of time during which the exhaust valve is left open is regulated to suit the altitude, and the engine can be made to give the same power at all altitudes from the ground up to 12,000 ft.

COSMOS ENGINES.

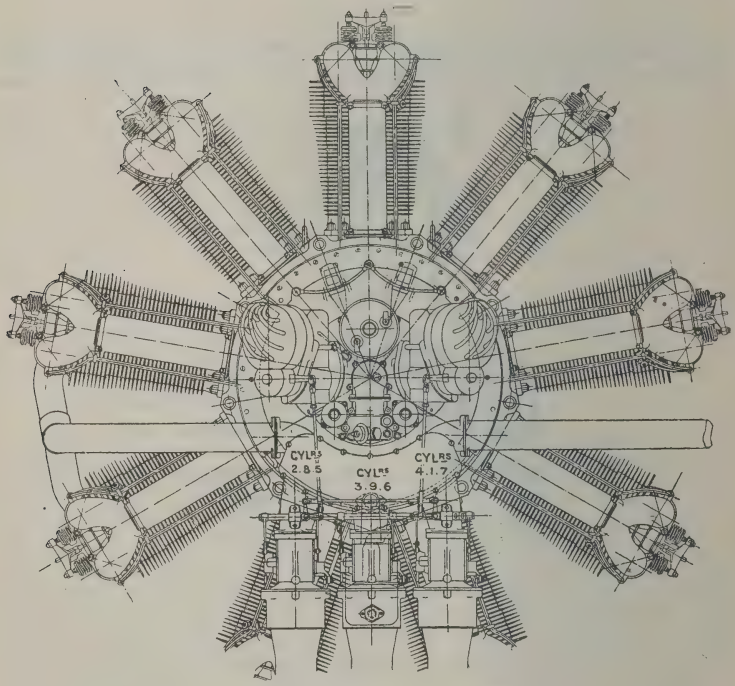


FIG. 41.—The Cosmos Jupiter Engine. Rear View.

The nine-cylinder Jupiter engine, fig. 41, is of the air-cooled radial type, and is made by the Bristol Aeroplane Co., Ltd. The cylinder dimensions are 5¾ ins. by 7½ ins. and 450 b.h.p. is developed at 1,850 r.p.m. The weight of the engine including carburettors, magnetos, etc., is 636 lbs., which gives a record low weight of 1·413 lb. per h.p.

The air-screw is direct driven, but the engines can also be supplied fitted with epicyclic gear reduction to drive the air-screw at 1,200 r.p.m. Accessibility is a special feature of this engine,

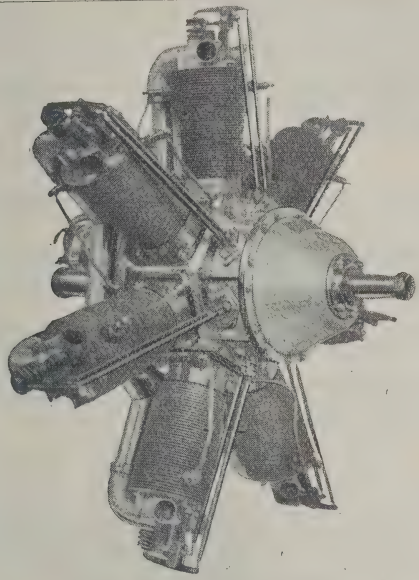


FIG. 42.—The A.B.C. Engine.

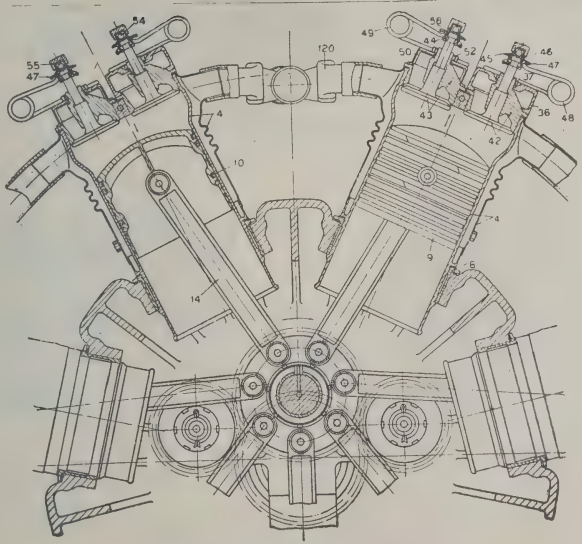


FIG. 43.—The Salmson Engine, 2 M7 Type.

all parts can be readily removed for inspection. The crankcase is an aluminium casting in two parts, held together by long bolts, and these bolts also hold the engine to the fusilage. The steel cylinders are turned from solid billets and bolted to crankcase. The carburettors are fitted, each feeding three cylinders, and ignition is by two Thomson-Bennett magnetos.

100 h.p. three-cylinder air-cooled radial engines are also made. These engines run at 1,600 r.p.m. and have steel cylinders 5¾ ins. by 6¼ ins., with aluminium heads.

A.B.C. Engines.

Air-cooled radial engines developing 50, 160, and 340 b.h.p. respectively, are made by Waltons Motors, Ltd. The 50 b.h.p. engine has five cylinders, and develops its normal power when running at 1,800 r.p.m. The total weight of this engine is 150 lbs.

The 160 b.h.p. engine (fig. 42) has seven steel cylinders with copper-coated fins, and runs at normal speed of 1,650 r.p.m. The cylinder dimensions are 4⅜ ins. by 6¼ ins, and the head is fitted with over-head valves, two exhaust and one inlet. The weight of the engine including airscrew boss is 350 lbs.

Two A.B.C. 48 mm. carburettors are fitted and the petrol consumption is ·56 pint per b.h.p. hour. Six pints of lubrication oil are consumed per hour and distributed by two rotary plunger pumps.

The nine-cylinder radial engine has cylinder dimensions of 5½ ins. diameter by 6½ ins. stroke and develops 340 b.h.p. when running at 1,650 r.p.m. The total weight of this engine is 600 lbs. giving a weight of 1·765 lbs. per b.h.p.

Salmson Engines.

The Dudbridge Iron Works make the Salmson water-cooled radial engines in powers up to 300 b.h.p., in nine cylinders, and each has two admission and two exhaust valves. The usual method of coupling the connecting rod to the crank pin in radial engines is by means of a master rod (see fig. 39, p. 1710) to which the other rods are attached, but in the Salmson engine the connection to the crank pin is shown in fig. 43. It will be seen that the ends are supported on pins carried by a cage engaging with an epicyclic train, which maintains the correct relationship to the cylinders.

The inlet and exhaust valves, as well as the method of holding the cylinder, are shown, and it will be noticed that the valves are held to their seats by a novel design of spring. The mixture is supplied by two Zenith carburettors fitted with the Salmson design of choke tube; ignition is by the ordinary high tension magneto.

Rolls-Royce Engines.

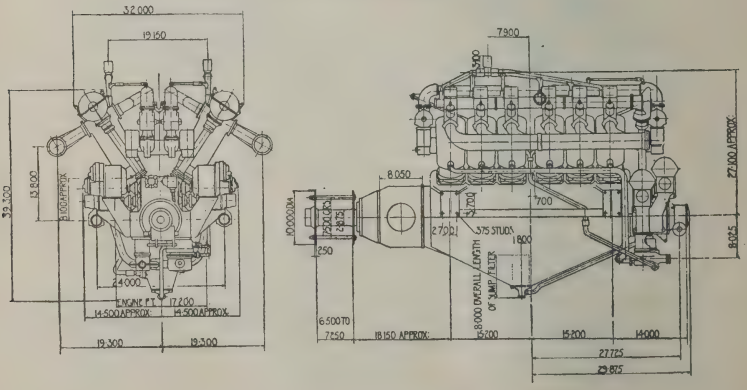


Fig. 44.—The Rolls-Royce Engine.

Aero Engine Supremacy

Current Expressions of Opinion.

An outstanding feature of the past year is the sweeping success of the 450 h.p.

NAPIER

aero engine. It has indisputably *proved* itself to be the best in the world. The following are a few recent opinions—opinions voiced on 1921 achievements:

'There is no finer engine for commercial work in the world.'
Evening News, 1.8.21.

'The premier aero engine in the world to-day.'
Daily Telegraph, 5.1.22.

'Absolutely and admittedly at the top of the tree.'
Tatler, 4.1.22.

D. NAPIER & SON. LTD.
14, New Burlington Street, W.1.
Works: ACTON, LONDON, W.3.

F, 1714

The *Proved* Best.

NAPIER

40/50 h.p. Six Cylinder Motor Carriages.

'No other car has ever put up so fine a performance.'
Bystander, 16.11.21

The 40/50 h.p. Six Cylinder Napier is Hall-marked by the Royal Automobile Club.

Its success does not rest on unofficial statements—it is officially *proved* by the recent trial over the Alps under the observation of the Royal Automobile Club—a trial which no other British manufacturer has had the courage to undertake.

2118 miles were covered, including over **70,000 ft.** of Alpine climbing. **Petrol consumption** was **18·7 miles per gallon. Speed** on **Brooklands 72·38 miles per hour.**

No water or **oil** was added during the progress of the trial, and **no work**—beyond greasing and oiling—was done to the car.

Let us send you full particulars.

Dunlop Tyres are the standard fitment on the 40/50 h.p. Napier

We, the Napier Company, guarantee that this trial was carried out with a standard chassis.

D. NAPIER & SON, Ltd.
14 New Burlington Street, W. 1
Works : ACTON, LONDON, W.3.

Rolls-Royce engines are famous as the first to cross the Atlantic, and to fly to Australia, in 1919. An aeroplane fitted with two Rolls-Royce 360 h.p. engines covered the 1,880 miles across the Atlantic in 15 hours 57 mins. Another machine, using the same size engines, flew the whole distance of 10,925 miles to Australia in 27 days, 20 hours, 20 mins. During the war, Rolls-Royce engines, totalling over 1,000,000 h.p., were in the possession of the Royal Air Force.

The 360 h.p. size is standardised for commercial purposes and the price of the engine is about 5*l*. per h.p.

The engine is of the water-cooled 12-cylinder diagonal type as shown in fig. 44, and runs at 1,650 r.p.m. Epicyclic reduction gear is used for driving the air-screw at about 1,200 r.p.m. The cylinders are of steel, arranged at 60°, and are 4½ ins. diameter by 6½ ins. stroke. A fuel consumption of approximately 0·47 pt. per b.h.p. is obtained, and 8 pints of lubricating oil are required per hour. With reduction gear the weight is 900 lbs. and without this gear the weight is reduced to 836 lbs.

The American 'Liberty' engines were designed mainly on the lines of Rolls-Royce aero engine.

Sunbeam Engines.

The Sunbeam Motor Car Co. have standardised 8 sizes of aero engines. The 100 h.p. engine is of the 6-cylinder vertical type, having two valves per cylinder. The dimensions are 120 mm. by 130 mm. and the normal revolutions are 1,200 r.p.m., at which speed 110 h.p. is developed.

The first engine was made in the record period of five weeks from the time the drawings were issued, and passed through 120 hours' testing under various conditions required by the Admiralty. It was then transferred in a non-rigid airship without any modifications and has since run for nearly 200 hours without any adjustment whatever. Two pressure feed carburettors are fitted, and the petrol consumption is ·54 pints per h.p. per hour. The average lubricating oil required is 6·5 pints per hour, and this is supplied to the main engine bearings at 45 lbs. per sq. in. When dry the engine weighs 399 lbs.

Eight-cylinder diagonal type engines with cylinder dimensions of 120 mm. by 130 mm. and developing 200 h.p. at 2,000 r.p.m. are also made. Another engine of the same type is the Sunbeam twelve-cylinder 300 h.p. engine which has cylinders 110 mm. diameter by 135 mm. stroke on the master rod side and 142 mm. stroke on link rod side.

The largest aero engine is the Sunbeam 800 h.p. 12-cylinder engine, of the Vee type, and these engines have cylinders 180 mm. diameter by 210 mm. stroke running at 1,400 r.p.m. There are 3 inlet and 3 exhaust valves of the overhead type in each cylinder, and both hand and electric starters are fitted.

Napier Engines.

The Napier 450 h.p. aero engine is of the diagonal fan type, having three rows of four-cylinders each, one vertical and two at 60 degrees. The cylinder dimensions are 5½ ins. by 5½ ins., and the normal power is developed at 2,000 r.p.m. The cylinders are steel forgings machined all over and have water-jackets of steel. The head is of aluminium, detachable, and contains inlet and exhaust passages, valves and valve mechanism.

Two inlet and two exhaust valves are fitted to each cylinder. The pistons are of aluminium alloy and have two packing and two scraper rings. The master connecting rod is coupled to the pistons of the vertical cylinders, and has lugs on either side, to which are attached the short auxiliary rods for the pistons of the right and left-hand cylinders. The fuel consumption is ·48 lb. per b.h.p. hour and lubricating oil consumption ·02 lb. per b.h.p. per hour. The weight of the engine is 850 lbs. and the gross weight in running order with fuel and oil for six hours is 2,670 lbs.

The Napier patent air petrol starter is provided by means of which explosive mixture is pumped into the cylinders and ignited by a hand-starting magneto operated through the special distributer rotors of engine magnetos. The starter comprises a hand-operated air pump, petrol vaporiser, air distributing cock and simple mechanism for opening the valves on each block of cylinders by hand.

Galloway Engines.

Six-cylinder engines developing 200 h.p. when running at 1,400 r.p.m. are made by the Galloway Engineering Co. (fig. 45). The cylinders are arranged in two blocks of three each, consisting of aluminium casting comprising cylinder barrels, combustion chambers and valve guides. The cylinder dimensions are 145 mm. by 190 mm.

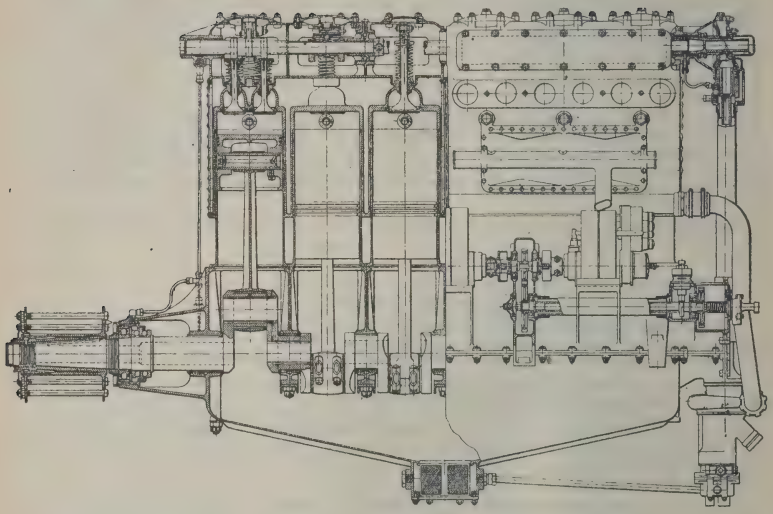


FIG. 45.—The Galloway Engine.

Forced lubrication at 20 lbs. pressure is supplied to the principal bearings and the oil consumption is ·029 pint per b.h.p. hour. The petrol consumption is ·58 pint per b.h.p. hour. Two Zenith carburettors are mounted on the right-hand side of engine and the two magnetos are of the Fellows type, with two independent sparking plugs in each combustion chamber.

The largest engine made by this Company develops 550 b.h.p. and is of the twelve-cylinder fan type.

ARMSTRONG SIDDELEY ENGINES.

The Puma engine is made by Armstrong Siddeley Motors, Ltd., Coventry, and is of the six-cylinder vertical type, developing 230 b.h.p. at 1,500 r.p.m. The cylinder dimensions are 145 mm. by 190 mm. The liners are shrunk and screwed into the aluminium alloy cylinder heads, and the cylinder jackets are cast in two blocks of three.

One inlet and two exhaust valves of tungsten steel are fitted to each cylinder. The exhaust valves are worked direct from the overhead counter shaft and the inlet valve is operated from this by a rocking lever. Lubrication is forced, and the aluminium alloy pistons are fitted with scraper rings to prevent the oil getting past the piston. Ignition is by two independent systems with separate magnetos or with one magneto and one high tension electric system. The petrol consumption is ·55 and lubricating oil consumption is ·03 pint per h.p. hour. The compression ratio is 4·9 to 1, and total weight 630 lbs.

OTHER MAKERS OF AERO ENGINES.

Other aero engines of the vertical type are Beardmore 120 b.h.p. six-cylinder, 130 mm. by 175 mm., and the Beardmore 160 b.h.p., six-cylinder engine, 142 mm. by 175 mm., running at 1,350 r.p.m. In addition vertical aero engines are made by the Green Engine Co., and a large number have been fitted to airships.

Aero engines of the diagonal type are the Wolseley and R.A.F. engines. This type of engine has also reached a high state of development in the Renault and Hispano-Suiza designs.

Rotary engines of other makes are the Clerget made by Gwynnes, Ltd., and the Bentley, which is an improved design of the Clerget. Large numbers of both have been fitted to aeroplanes.

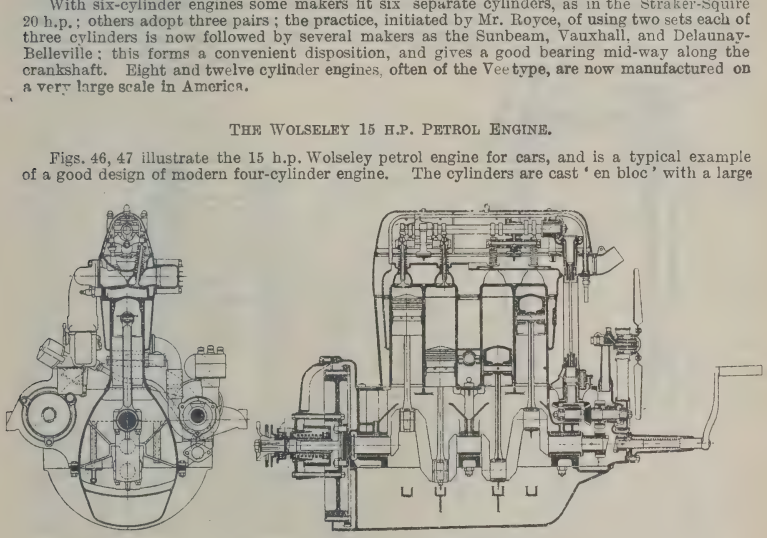
MOTOR CAR ENGINES.

The four-stroke single-acting inverted vertical type of engine is mainly used for motor cars, and the 'en bloc' type of cylinder, i.e. with the four cylinders all in one casting, has been largely adopted. This practice results in a short, neat, compact engine of simple external appearance, and lends itself well to the thermo-syphon system of cooling now so largely used.

With six-cylinder engines some makers fit six separate cylinders, as in the Straker-Squire 20 h.p.; others adopt three pairs; the practice, initiated by Mr. Royce, of using two sets each of three cylinders is now followed by several makers as the Sunbeam, Vauxhall, and Delaunay-Belleville: this forms a convenient disposition, and gives a good bearing mid-way along the crankshaft. Eight and twelve cylinder engines, often of the Vee type, are now manufactured on a very large scale in America.

The Wolseley 15 h.p. Petrol Engine.

Figs. 46, 47 illustrate the 15 h.p. Wolseley petrol engine for cars, and is a typical example of a good design of modern four-cylinder engine. The cylinders are cast 'en bloc' with a large



Figs. 46, 47.—15 h.p. Wolseley Engine.

water space between Nos. 2 and 3; the crankshaft is carried in three substantial bearings; cooling is of the thermo-syphon type, and the ignition is effected by high-tension magneto. The engines are also made in 24 and 30 h.p. sizes, with six cylinders.

The Daimler Engine.

The Daimler-Knight sliding valve engine.—In this engine, which operates on the four-stroke single-acting method as usual, the poppet valves are replaced by cylindrical sliding valves. These engines run very quietly, and it is impossible to get the valve setting wrong after manufacture.

The piston is enveloped by two open-ended shells which are in turn contained within the cylinder casting.

These shells are reciprocated in a vertical direction by short links or connecting rods mounted on a miniature crankshaft running parallel with the main crankshaft. Cut in these shells are narrow ports extending a considerable way round the shell, which are covered or uncovered by the sliding of the shells over one another and in the cylinder. At certain periods, dependent upon the position of the piston, the ports in the sleeves and in the cylinder casting register with one another, thereby allowing fresh mixture to enter the cylinder or exhaust gases to escape, as the case may be.

The sizes of this engine for the 1921 season are 6-cylinder 30 h.p. 90 × 130 mm. and 6-cylinder 45 h.p. 110 × 130 mm. The crankshaft is of substantial construction, hollow, with bearings lined with white metal. These bearings are hung from the top plate of the crank case, and allow the bottom portion of the case to be withdrawn without disturbing the bearings, the bottom portion serving merely as an oil well.

Mounted parallel with the crankshaft is the layshaft, which for simplicity of construction is formed in two parts. This shaft runs in three plain bronze bearings which can be pushed through into position in the crank case with the shaft *in situ* after the crank case has been erected.

On the layshaft are two spiral gear wheels cut from the solid shaft. The forward one operates, by means of a small shaft running across the crank chamber between two cylinders, the magneto on the one side and the water-pump on the other. The rear one drives the low-tension contact breaker or distributer, according to what system of accumulator ignition is fitted as reserve. This shaft also drives off one of the crank pins a small pump supplying air pressure to the fuel tank at about 4 lbs. pressure.

Surrounding the piston U (figs. 48 and 49) are two shells—B the inner one and A the outer one—both shells and the piston being in turn surrounded by the cylinder, which has a detachable

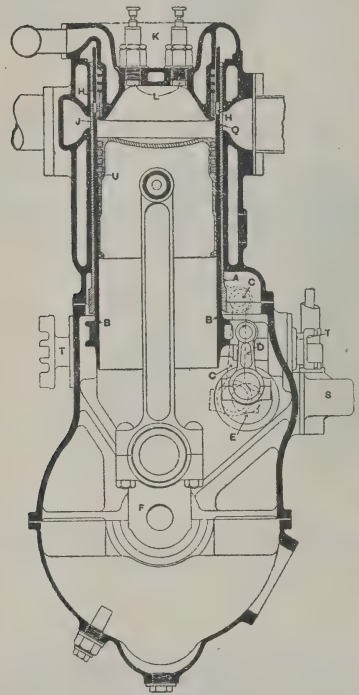


FIG. 48.—Cross-section of engine.

A, outer valve shell; B, inner valve shell; C, operating lever for A; D, operating lever for B; E, layshaft; F, crankshaft; H, valve openings in sliding shells; J, inlet port; K, cylinder head; Q, exhaust port; S, casing for spiral gears driving L.T. contact maker; T, cross-shaft driving pump and magneto; U, piston.

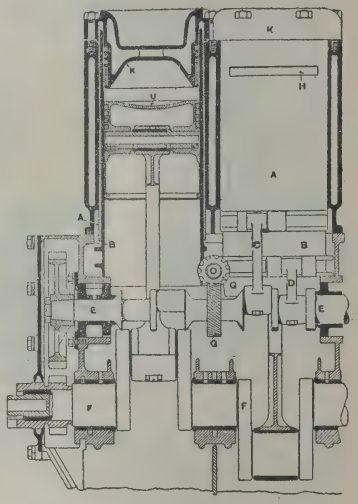


FIG. 49.—Longitudinal section of engine.

A, outer valve shell; B, inner valve shell; C, operating lever for A; D, operating lever for B; E, layshaft; F, crankshaft; G, helical gears; H, valve opening; K, cylinder head; L, sparking plug holes; O, cross-shaft driving pump and magneto; U, piston.

head K of peculiar design. This head projects down into the cylinder, and is provided with a number of piston rings, which form a gas-tight joint between the combustion chamber and the shell B. The ports in these shells are shown at H, J, and Q, being the ports in the cylinder casting, to the flanges of which the inlet and exhaust piping is bolted. E is the layshaft carrying the small connecting rods C and D which operate the shells A and B respectively. The motion given the shells is obviously a reciprocating one, as the levers C and D are carried on crank pins on the shaft E, which is driven in the same direction and at half the speed of the crankshaft by means of a silent chain off the crankshaft and enclosed in a cover in the front of the engine.

The Napier Engine.

The 40 h.p. Napier engine (fig. 50), which has six cylinders, 4 ins. by 5 ins., is of noteworthy design as it is modelled on the lines of aero engines. The cylinders and upper part of the crank-case are of cast aluminium, and steel liners are fitted in the cylinders. Aluminium alloy pistons are used and their weight is reduced to a minimum.

Overhead valves of non-corrodible steel are mounted in the detachable head, which, when removed, carries with it the whole of the valve mechanism. Two sparking-plugs are fitted to each cylinder and there are two systems of ignition. One is the usual high tension magneto and the other obtains current from the starting battery ; both systems operate independently.

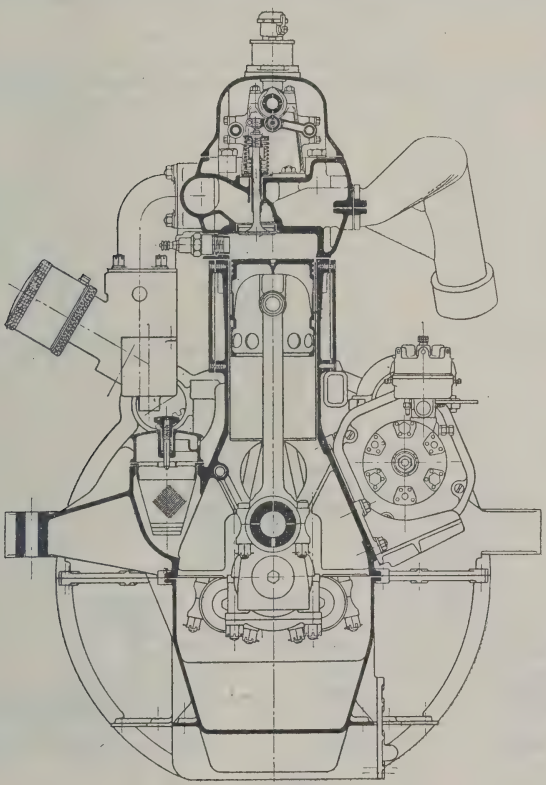


Fig. 50.—The Napier Engine.

The Napier S.U. carburettor supplies the mixture, and the jet is regulated by hand, as well as controlled by the automatic depression needle. Thus an initial mixture can be provided to suit varying atmospheric conditions, whilst the proportions of air and gas are regulated automatically.

In addition to obtaining a high volumetric efficiency, hence a high power output per cylinder, an advantage of the overhead valves is the short length of engine, which gives a short and stiff crankshaft. This helps to eliminate whipping tendencies, and increases the resistance to torsional stress.

The Dorman Engine.

The Dorman 12 h.p. four cylinder, 69 mm. by 120 mm. engine is another example of the improvement effected by overhead valves. This has valves worked by push-rods operated from two timing shafts located in the top of the crankcase, and the gear is very compact and accessible. An aluminium casting forms the cylinder jackets and crankcase, and separate cast-iron cylinder liners are fitted.

When the cast-iron detachable head is removed it brings away with it all the valves, springs and tappet levers; no adjustment is upset. Lubrication has received special attention, even the valve gear is automatically lubricated, and the design has reached a high state of perfection.

Dormans specialise in the manufacture of motor car and motor vehicle engines of the following sizes, and have been awarded the W.D. subvention certificate.

Brief Particulars of Dorman Engines.

Type.	Bore mm.	Stroke mm.	Cubic Capacity.	Brake Horse Power Guaranteed.		
				Petrol.	Paraffin.	Speed. r.p.m.
4 M.V.	69	100	1,490	10	—	1,000
4 K.N.	69	120	1,795	13	—	1,000
4 M.W	75	120	2,120	15	—	1,000
4 M.R	80	130	2,613	19	15	1,000
2 J.J.	110	140	2,660	16	13	1,000
2 J.O.	120	140	3,166	20	16	1,000
4 J.U.	95	140	3,970	25	20	1,000
4 J.J.	110	140	5,321	32	25	1,000
4 J.O.	120	140	6,333	40	32	1,000
4 M.O.	140	180	11,100	72	54	1,000

The Tylor Engine.

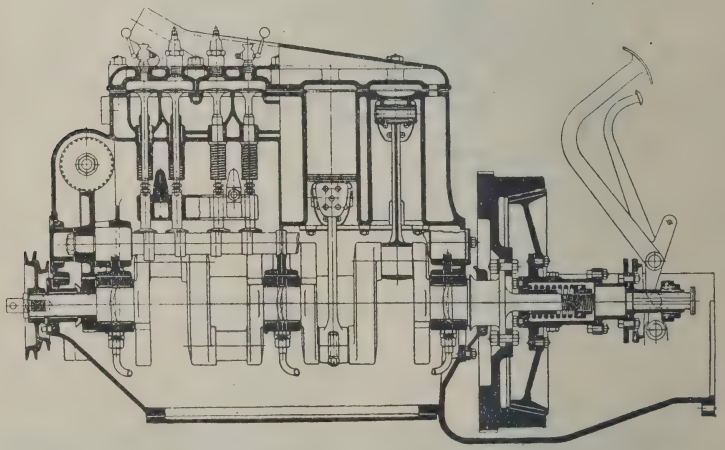


Fig. 51.—The Tylor Engine.

45 b.h.p. Tylor engines, 5 in. bore by 6 in. stroke, are fitted to the motor vehicles manufactured by the Associated Equipment Co. The normal speed is 1,000 r.p.m. and the engine is an approved subsidy model.

The cylinders are cast in two pairs with side pockets for the valves, and the induction passages are cored through the cylinders to enable the carburettor to be fitted on the other side. The three main bearings and the big end bearings are of gunmetal lined with white metal, and oil is forced to these, as well as to the camshaft bearings, by a pump. Ignition is by high-tension magneto with separate induction coil.

An illustration of 14·9 h.p., 76 mm. by 127 mm., engine as fitted to the Argus Sanderson car is shown in fig. 51. The four cylinders are cast 'en bloc,' and the upper part of the crank case is in the same casting. The cylinder head is separate and easily removable.

The engine is well balanced and the makers state that even at 2,000 r.p.m. very little vibration occurs. Thermo-syphon cooling is adopted, and the induction and exhaust manifold is a single casting bolted to the cylinders. A 'hot spot' is provided in the induction portion to ensure complete vaporisation of the incoming charge before it enters the cylinder.

The White and Poppe Engine.

White and Poppe, Coventry, specialise in the manufacture of engines for motor cars and vehicles. The engines are of the four-cylinder design, ranging in power up to 40 b.h.p.; the smallest cylinder is 60 mm. by 90 mm. and the largest 127 mm. by 180 mm.

They can be supplied for using paraffin fuel; their special carburettor ensures a non-smoky exhaust, and prevents any sooting-up of the valves.

The Aster Engine.

An attractive four-cylinder engine intended for light cars is made by the Aster Engineering Co. and develops 10 b.h.p. The cylinder dimensions are 65 mm. by 100 mm. and they are cast in one with the crank case and water-jacket.

Overhead valves are fitted in the detachable cylinder head and the operating gear is quite enclosed and automatically lubricated by taking the oil mist from the crank case into the cover. Thermo-syphon cooling is adopted, a horizontal Zenith carburettor is fitted, and ignition is by means of high-tension magneto.

Air-cooled Engines.

Air-cooled engines are fitted to a number of light cars; they are of the stationary type and weigh much less than water-cooled engines. They keep cool even after long runs, and display a high standard of reliability and economy.

The air-cooled engines have decided advantages in the winter, there is no risk of damage by frost, and the elimination of radiator, pump, and piping is of importance.

Horizontal opposed engines of this type, developing 10 b.h.p., are fitted to the Palladium, G.N., and A.B.C. cars. The Speedy car has an 8 b.h.p. J.A.P. air-cooled engine. A 10 b.h.p. three-cylinder radial engine of the inverted Y type is fitted to the Cosmos Engineering Co.'s car. The cylinders have a bore and stroke of 80 mm. with separate heads of aluminium alloy and cast-in steel valve seats. The Enfield-Allday 10 h.p. motor car is fitted with an air-cooled engine of the five-cylinder radial type. The cylinders are 68 mm. in diameter and have aluminium alloy pistons with four thin and deep packing rings. Concentric valves in the form of sleeves, working one inside the other on to taper valve seatings, are arranged for operation by overhead rocking levers actuated by tension rods from a camshaft in front of the engine. The cylinders are cooled by the fan-shaped flywheel, and the efficiency of cooling does not depend upon the motion of the car.

Air-cooled engines are largely used on motor-bicycles; one of the best-known is the two-cylinder Vee engine made by J. A. Prestwich & Co. This engine operates on the four-stroke cycle and develops 8 b.h.p. at 2,000 r.p.m. Another well-known engine is the Douglas.

Trend of Motor Car Engine Design.

An interesting comparison of engine changes since 1913 was made by M. Charles Favoux after the last Paris Exhibition, and is as follows:—

Details.	1919.	1913.
	Per cent.	Per cent.
Four-cylinder chassis	75	89
Six " "	20	10
Eight " "	3	1
Single valve-shaft engines	57	42
Overhead valves engines	28	22
Spiral-gear timing	80	3
Teeth on bias (not helical)	18	92
Chain timing drive	2	3
Cylinders 'en bloc'	52	21
Electric starter and lighting set	92	4

BROOKLANDS STANDARD ENGINE CLASSES, BASED ON 'CYLINDER CAPACITY' $\frac{\pi}{4}d^2sN$ (*February* 1912).

Letter of Class	A	B	C	D	E	F	G	H	J
*Maximum cylinder capacity in cubic inches	100	125	150	175	235	305	475	850	over 850
*Maximum cylinder capacity in cubic centimetres	1,639	2,048	2,458	2,868	3,851	4,998	7,784	13,929	over 13,929
*Minimum cylinder capacity in cubic inches	—	101	126	151	176	236	306	476	851
*Minimum cylinder capacity in cubic centimetres	—	1,640	2,049	2,459	2,869	3,852	4,999	7,785	13,930
†Weight in lbs.	1,400	1,500	1,600	1,800	2,000	2,250	2,500	2,700	3,000
Maximum stroke in ins. for a bore of 2½ ins. (4 cyl.)	5·118	6·391	—	—	—	—	—	—	—
,, ,, mm. ,, 65 mm. (,,)	123·5	154·3	—	—	—	—	—	—	—
,, ,, mm. ,, 70 mm. (,,)	106·5	133·0	159·7	—	—	—	—	—	—
,, ,, mm. ,, 75 mm. (,,)	92·7	115·9	139·1	162·3	—	—	—	—	—
,, ,, ins. ,, 3 ins. (,,)	3·554	4·438	5·322	6·207	—	—	—	—	—
,, ,, mm. ,, 80 mm. (,,)	81·5	101·8	122·2	142·6	191·5	—	—	—	—
,, ,, mm. ,, 85 mm. (,,)	—	90·2	108·3	128·3	169·7	—	—	—	—
,, ,, ins. ,, 3½ ins. (,,)	—	3·261	3·910	4·560	6·119	—	—	—	—
,, ,, mm. ,, 90 mm. (,,)	—	—	96·6	112·7	151·4	196·4	—	—	—
,, ,, mm. ,, 100 mm. (,,)	—	—	—	91·3	122·6	159·1	—	—	—
,, ,, ins. ,, 4 ins. (,,)	—	—	—	3·491	4·685	6·077	—	—	—
,, ,, mm. ,, 110 mm. (,,)	—	—	—	75·4	101·3	131·4	—	—	—
,, ,, ins. ,, 5 ins. (,,)	—	—	—	—	—	3·889	6·054	—	—
,, ,, ins. ,, 6 ins. (,,)	—	—	—	—	—	—	4·204	7·520	—
,, ,, mm. ,, 155 mm. (,,)	—	—	—	—	—	—	103·1	184·5	—
,, ,, mm. ,, 190 mm. (,,)	—	—	—	—	—	—	—	122·8	—

* Fractions of a cubic inch or cubic centimetre will be reckoned as 0·0 if below 0·5, and as 1·0 if 0·5 or over. † Minimum weight, includes driver.

NOTE.—1 cubic inch = 16·38706 cubic cent. 1 cubic cent. = 0·0610237 cubic inch.

Cranks and Crankshafts.

Crankshafts are usually of the hardest steel that can be satisfactorily worked. The grades used vary from steels having an elastic limit of about 28 tons per sq. in. and ultimate strength of 35 tons per sq. in. to an elastic limit of 90 tons per sq. in. and an ultimate strength of over 100 tons per sq. in. Nickel, vanadium, and chrome steels are largely used. The following table illustrates practice :—

TABLE OF SOME SUITABLE STEELS FOR MOTOR CARS.

Part of Car.	Tensile Tests. Elastic Limit, Tons per Sq. In.	Ratio of Elastic to Maximum per Cent.	Maximum Strength Tons per Sq. In.	Elongation, per Cent.	Material.
Crankshafts	48·5	86·5	56·0	22	Chrome Nickel
" "	48·0	85·7	56·0	19	Chrome Vanadium
Connecting Rods (stamping)	30·0	62·5	48·0	26	5 per Cent. Nickel
Gear Shafts (*a*)	98·0	89	110·0	13	Chrome Nickel
" " (*b*)	88·0	78·5	112·0	2·5	
Live Axles	57·0	77	73·8	18	Chrome Nickel
	48·0	65·7	73·0	14	
Piston Gudgeon Pins	29·0	85·2	34·0	31	Flather & Co.'s Ubas Annealed Case-hardening Steel

Most of these steels are more susceptible to variation during their hardening and tempering processes than is ordinary carbon steel, and unless handled with knowledge and skill are liable to give very disappointing results. As an illustration of the importance of careful and accurate heat treatment, take the test of gear shaft steel (*b*) in the above table.

To give the results specified in the table, this steel is heated in a muffle to 750° C. with all air carefully excluded or consumed by burning with coal gas. At 750° C. it is quenched in oil and tempered by reheating in the muffle to 330° C. for 15 minutes and plunged into oil until cool. The same steel heated to 740° C. and tempered at 400° C. gives the following tensile test :—

Elastic Stress, Tons per Sq. In.	Ratio of Elastic to maximum per cent.	Maximum Stress, Tons per Sq. In.	Elongation, per cent.
78	87·6	89	10

For case-hardening steels the best results are obtained by allowing the pieces to get quite cool before unpacking them from the carbonising boxes, then reheat and quench until cool.

With four-throw crankshafts having three bearings the shaft diameter must be slightly greater than when five bearings are fitted in order to provide the necessary stiffness ; crankshaft design in motor-car engines has regard to stiffness as the primary consideration. In the four-cylinder 14 h.p. de Dion, and 12 h.p. Delage engines, the crankshaft is carried in *two* bearings only ; the cylinders are ' en bloc,' and kept as close together as possible ; this is the extreme case. The three-bearing four-throw crankshaft is adopted by many first-class builders and may be regarded as entirely satisfactory in practice.

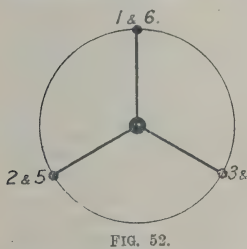


FIG. 52.

Disposition of Cranks.—From considerations of balance, in two-cylinder engines the crank-throws are nearly always at 180°. This, however, involves the disadvantage that two working strokes occur in one revolution, the succeeding revolution being idle ; the turning moment is thus very un-uniform.

With the very light pistons and connecting-rods now used it becomes possible to place the crank-throws together (i.e. at 0°) ; this is done in the 2-cylinder 9 h.p. de Dion engine and one or two others ; there is then a working impulse in every revolution of the shaft.

In four-cylinder engines the crank-throws are always placed all in one plane, the two centre throws being together and at 180° to the two outer throws. With this arrangement two orders of firing are possible, viz. 1 2 4 3 and 1 3 4 2 ; both are used, but 1 3 4 2 appears to be the sequence preferred. With this arrangement of crank-throws a practically perfect balance is obtained. In four-cylinder engines the crankshaft diameter is about one-third of the cylinder bore in five-bearing designs, to half the bore in three-bearing arrangements.

In six-cylinder engines the usual arrangement of crank-throws is the ' two 3-cylinder engines reversed,' which gives an excellent balance. Thus (fig. 52) throws numbers 1 and 6 are together, as also are 2 and 5, and 3 and 4.

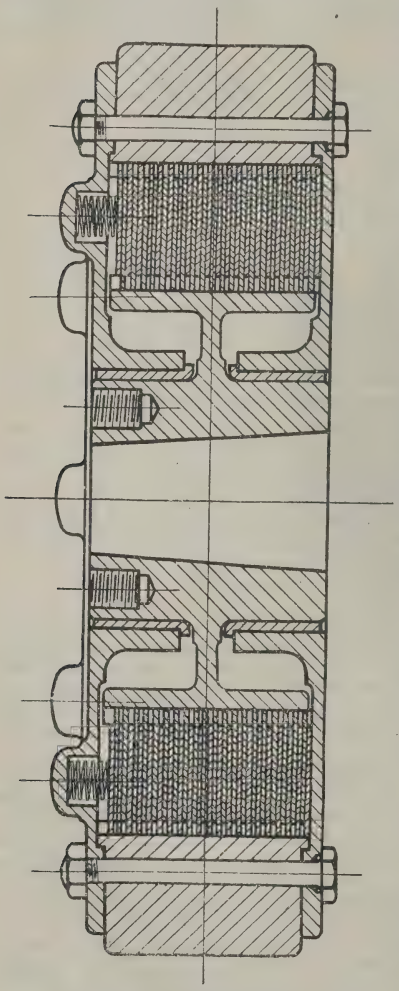


Fig. 53.—Lanchester Torsional Vibration Damper.

With this disposition, eight orders of firing are possible, four of which are ' mirror images ' of the other four ; these are :—

5	3	6	2	4	1		1	4	2	6	3	5
2	3	6	5	4	1		1	4	5	6	3	2
5	4	6	2	3	1		1	3	2	6	4	5
2	4	6	5	3	1		1	3	5	6	4	2

It is to be noted that 5 3 6 2 4 1 and its image 1 4 2 6 3 5 are the only two in which no two adjacent cylinders fire consecutively ; these are the orders usually adopted, as giving greatest freedom of exhaust.

Torsional Vibration of Crankshafts in Six-Cylinder Engines.

Torsional vibration of the crankshafts occurs at certain critical speeds on almost all six-cylinder high-speed engines. In cases which have come under observation periodic or torsional vibration has occurred at or about three-fourths the normal running speed of the engine, e.g. an engine rated at 1,200 r.p.m. vibration occurred at about 900 r.p.m. An engine rated at 385 r.p.m., vibration occurred about 290–5 r.p.m. ; whilst in the case of another engine having 200 r.p.m., vibration occurred between 150-160 r.p.m. The normal B.H.P. ratings of the examples referred to were respectively 150, 1,200, and 750 B.H.P.

One method of eliminating or reducing the effect has been to reduce the weight of reciprocating parts, in particular the piston, which, generally speaking, is now made of an aluminium-copper alloy.

Another method has been to considerably increase the diameter of the journals, crankpins, and crankwebs of the crankshaft.

A third method has been to increase only the diameter of the journals and crankpins of the three cylinders nearest the flywheel, or that end of the crankshaft from which the power developed is taken off.

A fourth method is to fit a Lanchester Torsional Vibration Damper, which permits of retaining a shaft of normal dimensions. This damper is usually fitted on the end of the crankshaft *furthest* from the flywheel, or that end from which the power developed is taken off. The apparatus, fig. 53, consists of a rotor (which is firmly secured to the end of a crankshaft) which has cut upon its circumference a number of axial slots.

Mounted externally upon this rotor are two diametrical side plates, and sandwiched between them is a small flywheel rim secured by suitable bolts. The side plates are bushed with bronze, and are housed upon the external diameter of the fixed rotor, so that the rim and side plates are free to move independently on the fixed rotor. On the internal diameter of the flywheel rim is also cut a number of axial slots, and in the annulus formed by the rim and the rotor are placed a number of thin, hard steel plates. These are provided with keys

or projections which fit loosely in the axial slots formed in the fixed rotor and the internal circumference of the small flywheel rim. These plates are so placed that they engage alternately in the slots formed, much in the same way as the plates are fitted in a multi-disc plate clutch.

The plates are pressed together by means of a number of springs, housed in one of the side plates, and the spaces between the plates are filled with thick engine oil.

The flywheel rim and side plates are driven solely by oil friction between the plates.

In all crankshafts an intermittent torsional stress is produced by the work done as each piston transmits its force to the shaft.

At certain speeds a reactionary effect is produced throughout the length of crankshaft, of such a severe character as to set up a severe and ofttimes intense vibration, which, if not eliminated, will ultimately fracture the shaft.

The function of the Lanchester Damper is to prevent or soften down this reaction, and it does so in the following manner:—

The small flywheel rim, which is driven by oil friction through the plates, is rotating normally at a uniform speed and as the torsion on the crankshaft increases at each impulse the shaft is, in a sense, wound up, say like a clock spring, and in its reactionary effect seeks to unwind or to return to its normal. The reversal of energy is transmitted to the floating flywheel rim, and in doing so deaccelerates gradually, owing to the rim being permitted to slip, and again gradually accelerates to uniform speed without producing any sudden changes, and thus prevents the torsional vibration occurring at certain critical speeds.

The effect of fitting this apparatus is most marked, and its value to engine builders cannot be too fully recognised.

Bearings.

Crankshaft and big-end bearings are usually white-metal lined; gudgeon bushes of bronze. Corresponding to a maximum explosion pressure of 300 lbs. per sq. in., the bearing pressure in lbs. per sq. in. of projected area is as follows:—

For 'big end' bearings:—800 to 1,100 lbs. per sq. in.; more usually the latter.

For 'gudgeon' bearings:—1,500 to 2,700 lbs. per sq. in.; average about 2,000 lbs. per sq. in.

Pistons.

Pistons are usually of medium hard, close-grained cast-iron, usually with three but occasionally four cast-iron spring rings; an additional oil-excluding or 'scraper' ring is often fitted near the piston bottom; in normal touring-car engines the length of piston averages 1·16 times its diameter. Pressed steel pistons are now being used in order to reduce the mass of the reciprocating parts as far as possible.

The Ricardo Piston.

This piston, fig. 54, is a 'slipper' type, and aims at securing increased power by the reduction of friction and weight. The contamination of the lubricating oil due to gas leaking past the rings, which takes place in the ordinary form of piston, is reduced by allowing the

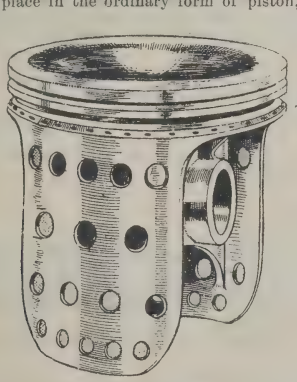


Fig. 54.

leaking gas to escape before reaching the piston skirt. Also the lower ring groove is bevelled and drilled to enable the ring to act as a scraper. The general advantages are as follows: (1) Gas pressure is transmitted direct from the crown of the piston to the centre of the gudgeon

pin bosses; (2) Thrust from the connecting rod is transmitted directly to the bearing surfaces; (3) Bearing surface is provided only where it is needed; (4) Gases that pass the piston-rings may escape freely into the crankcase; (5) No load is transmitted through the side walls, or past the piston-ring grooves; (6) The lower piston-ring acts as a scraper, so that oil that has worked up past the slippers can be returned through the small holes beneath.

Experiments made with the Ricardo piston showed a marked reduction in oil consumption, in one case this consumption falling from ·06 lb. per horse-power-hour, to ·035 lb. At the same time the fuel consumption dropped 4 per cent. and the brake horse-power was increased 4 per cent. approximately. The whole piston is extremely light. For cylinder bores ranging from 3½ ins. to 5 ins. diameter, the weight of the piston complete with gudgeon pin and piston-rings can be reduced to ·1 lb. per sq. in. of piston area.

Ratio of Stroke to Bore.

This has increased during recent years, especially in small-bore engines, and may be considered to range from 2·0 in engines of 6-15 h.p. (as, e.g., the Gregoire, Lion-Peugeot, Calthorpe, Le Gui, Delage and Jackson), to 1·0 in large car engines as instanced by the Lanchester, Maudslay, and Napier designs. An average value for the normal touring-car engine of 15 to 30 h.p. may be taken as 1·5.

Connecting Rods.

Connecting rods are in nearly all cases of stamped steel of H-section; the length of connecting rod varies but little from 2½ times the piston stroke.

Weight of Reciprocating Parts.

If m denote the weight of the piston and connecting rod, in lbs., and if r denote the ratio of stroke to bore, and d be the cylinder diameter in inches, then for cast-iron pistons :—

$$m = \cdot 08\, d^3\,(1 + \cdot 15r) + 1 \cdot 5 \qquad (30)$$

(*Burls.*)

For steel pistons the coefficient of d^3 may be reduced from ·08 to ·05; Eq. (30) well represents current practice.

Ignition.

Ignition is almost universally by high-tension magneto. Battery and coil ignition is occasionally fitted for starting and as a stand-by. In the Bosch Dual Ignition device the high-tension magneto and battery-coil ignitions are ingeniously combined, with one sparking plug only to each cylinder; with this one has :—

(A) A momentary ignition by trembling coil and battery; or permanently if desired.
(B) A permanent ignition by non-trembling coil and battery.
(C) A permanent ignition by high-tension magneto.
(D) An effective self-starting arrangement for four-cylinder engines.

As the magneto armature gives two firing sparks per revolution, it must be driven at a rate relatively to that of the crankshaft as follows :—

No. of cylinders	1	2	3	4	6
Ratio $\frac{\text{Armature speed}}{\text{Crankshaft speed}}$	½	½	¾	1	1½

Practically, however, in one-cylindered engines the magneto is driven at *half* the crankshaft speed, and in two-cylindered engines with cranks at 180°, the armature is driven at crankshaft speed, so that in each of these cases half the sparks are idle. In single-crank two-cylinder engines, however, as there is a working stroke in every revolution, the magneto is driven at half the crankshaft speed, and there are no idle sparks.

The advantages of the high-tension magneto as compared with the coil and battery are broadly :—

1. Weaker mixtures can be fired regularly.
2. Faster and quieter running of the engine can be obtained owing to the plain make-and-break device embodied in the magneto.

With an efficient coil, a Siemens 'G.W. 4' dry battery (see Index) would give permanent ignition in a two-cylinder engine for some 1,000 miles. For starting purposes only it should last for about two years.

Valves.

Excepting only the Daimler-Knight sliding valve engines, the poppet valve is almost universally employed in the petrol engines of automobiles. The valve axes are in general vertical and parallel to that of the cylinder; both inlets and exhausts are mechanically operated. Practice is about equally divided in the matter of valve location, some makers fitting them on the same and some on opposite sides of the cylinder; in a few instances, as e.g. the Maudslay, they are fitted in the cylinder head. Recently the old arrangement, common in the days of automatic inlets, of placing the inlet valve piston above the exhaust, and operating it by some form of overhead gear, is being revived; this gives a compact combustion chamber, and the ingoing fresh charges pass over the exhaust valve top and tend to keep it from becoming overheated.

Valves are usually of mild, or nickel, steel with coned seats having an angle of about 30°; the inlets and exhausts are very usually made exactly alike, so as to be interchangeable; the exhaust valve lift is sometimes from $\frac{1}{32}$ in. to $\frac{1}{16}$ in. larger than that of the inlet, and *vice versâ*.

In the table below, the diameter and lift of the inlet valves is shown for twenty-four touring-car engines of 1910 design; in each case the exhaust was of the same diameter as the inlet. The two columns on the right show the ratio of valve diameter (in throat) to cylinder bore, and of valve lift to valve diameter, respectively. The valve diameter in throat is denoted by δ and the lift by λ, fig. 55, p. 1728, both in inches. The ratio of valve diameter to bore varies from 0·345 to 0·563, the average proportion being 0·41; the average lift is, roundly, 0·2 of the valve diameter.

VALVE PROPORTIONS OF SOME TOURING-CAR ENGINES.

Bore d. Ins.	Stroke s. Ins.	Valve Diameter δ.	Valve Lift λ.	δ/d.	λ/δ.
2·44	4·33	1·02	0·19	·418	·186
2·95	4·73	1·18	0·23	·400	·195
3·15	3·54	1·16	0·276	·368	·238
3·15	4·73	1·58	0·276	·502	·175
3·5	4·5	1·625	0·22	·465	·135
3·55	5·12	1·25	0·38	·351	·304
3·74	5·32	1·97	0·315	·527	·160
3·94	5·12	1·42	0·26	·361	·183
4·0	3·0	1·38	0·31	·345	·225
4·0	5·0	1·50	0·344	·375	·229
4·0	5·0	2·25	0·438	·563	·195
4·25	5·0	1·75	0·344	·412	·197
4·25	5·5	2·0	0·28	·470	·140
4·5	4·5	2·0	0·35	·444	·175
4·5	4·75	1·75	0·375	·389	·214
4·53	5·12	1·69	0·375	·373	·222
4·73	5·12	1·61	0·433	·340	·269
4·73	5·12	1·65	0·276	·349	·167
4·75	5·0	2·0	0·31	·348	·155
4·75	5·52	1·73	0·34	·366	·197
5·0	5·12	2·36	0·433	·472	·184
5·12	5·52	2·36	0·473	·427	·200
5·0	5·25	2·0	0·313	·400	·156
5·92	7·08	2·13	0·394	·360	·185

Examination of nearly 150 engines of good design in 1910–1911 showed a mean velocity V of gas through the throat of the inlet valve of 7,000 to 8,000 ft. per minute, as computed by aid of the formula :—

$$V = \left(\frac{d}{\delta}\right)^2 \sigma \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (31)$$

where σ is the piston speed in ft. per minute; n denoting the speed in revolutions per minute, and s the stroke in inches :—

$$\sigma = \frac{n\,s}{6} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (32)$$

In present practice σ is occasionally as high as 1,400 ft. per minute, under normal running conditions, but this is rare; 1,000 ft. per minute is, however, common, and 1,200 ft. is often attained. If in (31) we put $V = 7{,}000$ and $\sigma = 1{,}200$, then

$$\delta = 0{\cdot}414\, d \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (33)$$

which is a convenient rule for the practical proportioning of valves; the lift may be one-fifth of δ for ordinary touring engines. In recent designs V is only from 6,500 to 7,000 ft. per minute.

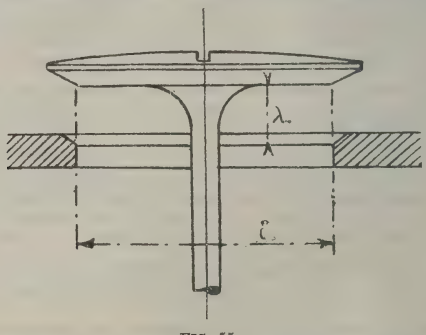


FIG. 55.

Valve setting.—As determined from an examination of forty touring-car engines in 1910, the average setting was :—

Inlets :—Open . . .	12° late.	Close	20° late.
Exhausts :—Open . .	45° early.	Close . . .	6° late.

In racing engines an 'overlapping' setting is sometimes adopted, i.e. the inlet opens before the exhaust has closed, so that for a few degrees of crankshaft revolution both valves are partly open. This is done to assist scavenging and is sometimes beneficial in such cases, but it is not a practice that tends to economy in running.

According to a bulletin on 'The Manufacture and Use of Alloys,' by Mr. Henry D. Hibbard, and issued by the United States Bureau of Mines, high-speed steel is being used for the exhaust valves of petrol motors and has given excellent results, owing to its heat-resisting quality.

Compression.

Compression.—If V denotes the volume of the combustion chamber, in cubic inches, then,

$$\text{Volume ratio of compression} = C = \frac{V + \frac{\pi}{4} d^2 s}{V} \quad . \quad . \quad . \quad . \quad . \quad (34)$$

whence,

$$V = \frac{\frac{\pi}{4} d^2 s}{C - 1} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (35)$$

In petrol engine practice C varies quite irregularly over a range from about 3 to 5; in most cases, however, the value is between the narrower limits of $3\frac{1}{2}$ to $4\frac{1}{2}$. Recent examination of a large number of well-designed engines shows the average value of C to be about $4\frac{1}{4}$, corresponding to an absolute compression pressure of 100 lbs. per sq. in., or 85 lbs. per sq. in. above the atmosphere. The compression pressure realised is dependent on the engine speed, the 'volumetric efficiency' or proportion of actual charge received to full charge diminishing at high speeds. The limit of compression for touring-car engines is $C = 5\frac{1}{2}$, corresponding to a pressure (absolute) of about 135 lbs. per sq. in.; above this pre-ignition troubles usually arise.

Alcohol used in an engine with a raised compression can be made to give approximately 50 per cent. more power than when a compression suitable for petrol is used.

Efficiency.

Mechanical Efficiency.—The mechanical efficiency of a good four-cylinder four-cycle single-acting petrol engine at about 1,000 revs. per min. should depart but little from the value 0·85.

Brake Thermal Efficiency.—For engines of this type also, the brake thermal efficiency is between 0·20 and 0·25, the latter being exceptional; an average good performance is 0·22.

Of the whole heat of combustion of the petrol, roundly 22 per cent. appears as b.h.p.; 33 per cent. appears in the cooling water; and 45 per cent. is lost in the exhaust gases and by radiation. If P denote the number of pints of petrol used per b.h.p. hour, then :—

$$\text{Brake Thermal Efficiency} = \frac{2545}{16800\,P} \quad . \quad . \quad . \quad . \quad . \quad (36)$$

for ordinary petrols. A brake thermal efficiency of 22 per cent. thus corresponds to a petrol consumption of 0·69 pint per b.h.p. hour.

Power Rating.

Power Rating of Petrol Engines.—Many rating formulæ have been proposed; some of these are discussed in a report on Horse-Power Formulæ for Petrol Engines prepared by G. A. Burls, M.Inst.C.E., for the Society of Motor Manufacturers and Traders in 1908.

The R.A.C. Formula.—For taxation purposes the authorities have up to the present used the old Royal Automobile Club formula, viz. :—

$$\text{Power Rating} = 0{\cdot}4\,d^2N \quad . \quad . \quad . \quad . \quad . \quad . \quad (37)$$

where d is the cylinder bore, in inches, and N is the number of cylinders.

This rating is independent of the stroke of the engine and is thus unsuitable for actual power rating purposes. It implies a constant piston speed of 1,000 ft. per minute, and a constant value of 67½ lbs. per sq. in. for the 'brake mean effective pressure.'

The Joint Committee's Formula.—An investigation into the question of rating was made by a joint committee of the Royal Automobile Club, the Institute of Automobile Engineers, and the Society of Motor Manufacturers. This joint committee issued its report in February 1911, and recommends that the following be regarded as the *maximum* practicable b.h.p. per cylinder that can be obtained from carefully-designed and well-built touring-car engines of bore from 2½ ins. to 5 ins. on bench tests under onerous, but safe, conditions :—

$$\text{B.H.P. per cyl.} = 0{\cdot}45\,(d+s)\,(d-1{\cdot}18) \quad . \quad . \quad . \quad . \quad (38)$$

This formula implies (1) a brake mean effective pressure increasing with the cylinder bore and (2) a maximum practicable piston speed increasing with the stroke-bore ratio. In the table below, some ratings furnished by Eq. (38) are given for convenience of reference :—

JOINT HORSE-POWER FORMULA COMMITTEE'S RATINGS PER CYLINDER.

r = STROKE-BORE RATIO.

r =	d = ins.	s = ins.	Rating per Cyl.	r =	d = ins.	s = ins.	Rating per Cyl.
	2½	1⅞	2·6		2½	3⅜	3·7
0·75	3	2¼	4·3		3	4½	6·1
	4	3	8·9	1·5	3½	5¼	9·1
	5	3¾	15·0		4	6	12·7
					4½	6¾	16·8
	2½	2½	3·0		5	7½	21·4
	3	3	4·9				
1·0	3½	3½	7·3		2½	5	4·5
	4	4	10·2	2·0	3	6	7·4
	4½	4½	13·5		4	8	15·2
	5	5	17·2		5	10	25·8
	2½	3⅛	3·3		2½	6¼	5·2
	3	3¾	5·5	2·5	3	7½	8·6
1·25	3½	4⅜	8·2		4	10	17·8
	4	5	11·4		5	12½	29·6
	4½	5⅝	15·1				
	5	6¼	19·3				

The Brooklands A.C. Rating.—The Brooklands Automobile Racing Club in February 1912 adopted the volume displaced by the pistons as a rating basis, the formula being :—

$$\text{Brooklands Rating} = \frac{\pi}{4} d^2 s N \quad . \quad . \quad . \quad . \quad . \quad . \quad (39)$$

where N denotes the number of cylinders.

The table on page 1722 shows the mode of classification adopted.

Burls' Maximum Horse-power Formula.

Extremely high powers per cylinder are obtained from racing engines by the use of specially large valves, piping, and carburettors, and very high piston speeds arising from exceedingly light reciprocating parts. For such cases Burls, making a certain assumption, has suggested (*vide* Proc. Inst. A.E. 1910–1911) for rating purposes, the formula :—

$$\text{Max. B.H.P. per cyl. for racing engines} = 0{\cdot}5\ d\ (d - 1{\cdot}18) \sqrt{\frac{d^2 s}{m}} \quad . \quad . \quad (40)$$

where d and s are the bore and stroke in inches, and m is the mass of the piston and connecting-rod jointly, in lbs., as given by Eq. 30, page 1726.

The valve diameter of such engines is given by :—

$$\delta = 0{\cdot}29 d \sqrt[4]{\frac{d^2 s}{m}} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (41)$$

and yields results giving, on the average, a value of δ of about $0{\cdot}52\ d$. Where it is considered that the value of δ is too high, the practice of fitting two inlet and two exhaust valves to each cylinder is resorted to.

Weight of Engines.

Weight of Petrol Engines.—The weight per b.h.p. is somewhat variable, as some makers employ an exceedingly high piston speed and thus obtain increased power. Including radiator, fan, pumps, carburettor, magneto, silencer, and flywheel, all complete and in running order, but without fuel or water, the weight per b.h.p. at *normal* power output varies from 16 to 24 lbs., and at *maximum* power output from 8 to 16 lbs.

Lubrication.

There are various systems of lubrication in vogue amongst automobile engine manufacturers ; generally speaking they may be classified under three headings :

Splash ; Gravity or indirect forced ; and Forced.

Splash, which was at one time almost universally used, is so well known that it needs no description.

Gravity lubrication is the term applied to systems in which oil is measured out by mechanical means into separate ducts or conduits, through which it flows by gravity to its appointed bearings. Frequently a pump is employed in this system which draws the oil from a reservoir or sump in the crank case and redelivers it to the upper reservoir from which it is distributed. This combination is sometimes erroneously termed forced lubrication.

Forced lubrication is that system in which a pump is employed to force oil direct into the bearing, and in its complete form lubricates not only the crankshaft but the connecting-rod end and piston gudgeon. The pump draws oil from a well or reservoir into which the surplus oil returns after circulating through the bearings, etc. One advantage which this system has over others is that no dashboard fittings are required, excepting a pressure gauge or some other form of pressure indicator.

Forced lubrication as a system embracing all the working parts of an ordinary reciprocating steam engine was patented and introduced by Messrs. Belliss & Morcom in 1890, being employed in their steam engines to lubricate crank journals, crank pin, and gudgeon pin bearings. It was adapted to automobile engines by the Lanchester Motor Co. in 1904, and at the present time it is used by many motor manufacturers. Recently, however, the combination of an oil pump delivering

from a pump into movable troughs placed below the big ends is becoming common ; the troughs are kept full to overflowing, and the engine is lubricated by the big-end splash. The troughs are connected with the throttle control in such manner as to be raised when the throttle is more fully opened, and *vice versâ* ; the oil supply is thus increased at increased engine speed. It is advantageous to cool the oil by passing it through an external reservoir before it re-enters the troughs.

(See also page 1539.)

Cooling.

Thirty to forty per cent. of the total heat generated in the cylinder of an internal combustion engine is lost through the water jacket.

Excessive cooling is detrimental to the economical working of the engine. Some experiments have shown the highest efficiency when the cooling water leaves the jacket at 180° F. to 200° F. It is probable that the latter figure is the average most efficient temperature. The efficiency of a motor-car radiator is materially increased by coating with black, and tests have demonstrated that a radiator may be coated with dull black varnish or lacquer up to as many as fourteen coats, its efficiency being increased slightly by each coat.

A radiator should have at least 40 square inches of effective cooling surface to 1 square inch of total combustion chamber surface of the motor cylinders if the water is circulated by a pump delivering about 2 gallons per minute. If the water is circulated by natural convection or 'Thermo-syphon' it is usual to allow more radiator surface per unit of heated surface of the cylinders, 45 : 1 being at least necessary.

It is usual to provide a fan to draw air through the radiator, but unless the radiator surface is insufficient the fan is not necessary above a speed of about twenty-five miles per hour.

If aluminium is used in parts of the radiator or circulation system exposed to the waters the use of crude glycerine as a preventive against freezing should be avoided.

The admixture of glycerine to the cooling water is rare ; the safer plan is to drain off the water if there is any risk of frost.

Thermo-syphon cooling is now very largely adopted and as now fitted is entirely satisfactory ; it seems probable that it will soon completely supersede pump circulation. It lends itself especially well to engines having the 'en bloc' arrangement of cylinders.

Boilerine Radiator Tablets.

These tablets, invented and manufactured only by Boilerine Limited, are for the purpose of obviating the fur which forms in radiators and water-jackets of motor-cars, cabs, lorries, or buses. There is nothing in the preparation detrimental to the joints or metal parts. Where scale is already in existence 50 tablets per gallon of water take the lime into solution, dissolving the particles, thus leaving the walls of the cylinder-jackets and radiator tubes perfectly clean.

Following this cleaning process all water put in the radiator should be 'Boilerined' to the extent of 2 tablets per gallon, up to 14 degrees of hardness, and one extra tablet for every 7 degrees beyond ; one tablet per gallon for rain water to prevent rust.

When water is poured into the radiator, it amounts to putting in a quantity of lime or chalk, or if soft water, a means of producing rust.

If this is done without 'Boilerine' tablets, the lime adheres to the walls of the cylinders and radiator tubes until efficiency is choked out of the cooling system.

Boilerine Limited have proved from tests that thirty hours heating of water at 190° F. gives nearly the same amount of deposit as half an hour's boiling, thus, surely, though unseen, the motor is, at the working temperatures, storing up in its cooling system this cause of trouble, consequently the flow of water is reduced, producing overheating, or allowing the impurities in the water to cause rust and corrosion, hence leakages.

These claims are confirmed by the reports given on tests of twelve and six months' duration, respectively, made by Messrs. Thomas Tilling, Ltd., and Messrs. W. H. Dorman & Co., Ltd., Stafford, copies of which can be had on application to Boilerine Limited.

Carburettors.

Carburettors.—The only wick carburettor now surviving is that of Lanchester. With this exception, the float-fed spray-nozzle type is practically universal. In many cases this does not far depart from the original Maybach model, but some makers employ double nozzles ; in other cases, as e.g. the Wolseley, three nozzles are used ; the first is very small and used only for slow running ; a further throttle opening cuts this first nozzle out of action and brings the second into operation ; this is of a size to give economical running at ordinary speeds. At full throttle the third jet comes into action jointly with the second ; this third jet is relatively large and increases the richness of the mixture, high power being the primary requisite at full throttle, and maximum economy then a secondary consideration.

The Daimler carburettor has seven jets in as many choke tubes, whose upper ends converge into the mixing chamber at different heights and are uncovered in succession by a sliding sleeve which functions automatically in response to the rise and fall of the negative pressure in the gas mixture pipe. One of the jets has an adjustable needle and serves as a 'pilot' jet for starting. The carburettor casing is jacketed to the water circulation, and the air is warmed by the exhaust pipe.

In the well-known Polyrhöe (many-jet) carburettor, an exceedingly large number of very fine jets is used; these are arranged along one edge of a rectangular air opening and are brought into action by a sliding throttle in accordance with the requirements of the engine, the proportion of air to petrol thus continuing the same at all degrees of opening.

In the White and Poppe carburettor, from which also excellent results are obtained, the petrol nozzle is gradually increased and the air supply simultaneously proportionately increased as the throttle is opened. A common practice to prevent over-richness of mixture at high speeds is to introduce between the carburettor and engine an automatic spring-controlled extra air valve which opens when the engine is speeded up and admits air into the induction pipe, thus diluting the mixture; the device is imperfect, but answers quite well in many ordinary cases.

The essential organs of the float-feed spray carburettor, now so widely employed, are shown in the accompanying sectional view, fig. 56.

The float chamber A contains a light brass or copper cylindrical float, B, which maintains the petrol supplied through the branch C at a constant level within the chamber by its action on the central needle valve D through the weighted levers E. The float chamber is in constant communication with the spray chamber F through the passage H; J is the spray nozzle, within which

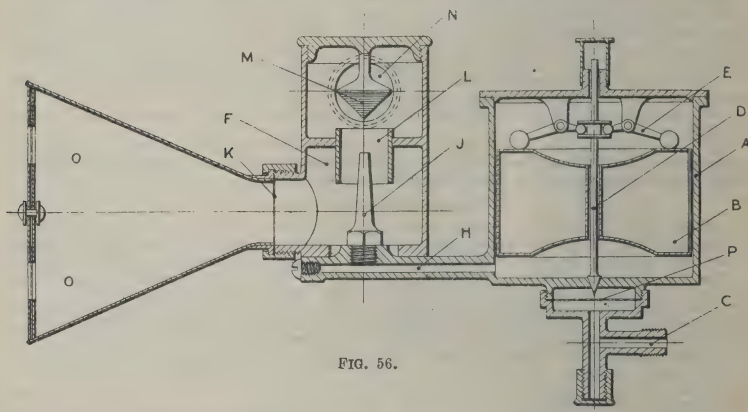


FIG. 56.

the petrol rises nearly to the top when there is no suction. During the suction stroke of the engine air enters through the funnel-shaped intake OO and gauze screen at K and passes into the 'choke tube' L surrounding the spray nozzle; in the choke tube its velocity is much increased, due to the contraction of area, and the pressure consequently falls below that of the atmosphere. The petrol accordingly issues from the nozzle in a fine stream, and mingling with the inrushing air is broken up into a cloud of spray; this 'atomisation' and the subsequent vaporisation are assisted by the mixture impinging on the serrated cone M depending from the cover of the chamber. The mixture thence passes to the engine by way of the inlet branch N.

P is a gauze strainer to intercept any solid particles in the petrol which might cause the needle valve D to leak, or obstruct the spraying nozzle J. The supply of air through the intake OO can be regulated by means of a perforated movable diaphragm as shown in the illustration. It will be observed that the buoyancy of the float is utilised to forcibly close the needle valve, and that when the float sinks the weighted outer ends at the small belt-cranked levers E permit it to rise. Fig. 56 shows an early and simple, though quite effective, form of carburettor; a multitude of variations of detail and minor refinements appear in the many designs which have been produced in recent years.

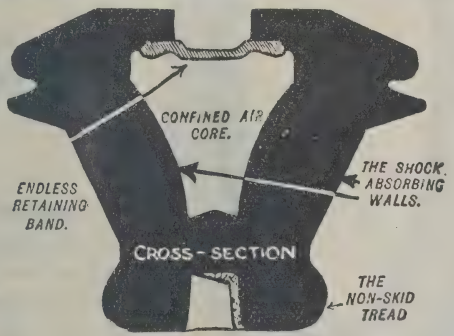
Paraffin Carburettors.

Paraffin carburettors which have been used on marine motors for a number of years past are now being adopted to a certain extent on motor cars and particularly on commercial motor vehicles. Although there are many types that have been employed the general principle is practically the same in every case, namely heating the mixture on its passage to the cylinder by means of the exhaust gases. The arrangement adopted is to pass the mixture through a vaporiser, around which the exhaust gases have to flow on their way to the silencer. In any case, however, the motor must always be started on petrol. Up to the present time paraffin carburettors have not been entirely successful for automobiles.

MACINTOSH N·A·P UNPUNCTURABLE TYRES

The Ideal Tyre for Industrial Motors.

Guaranteed in the United Kingdom for 10,000 miles or 12 months



Section of an N·A·P Tyre.

MACINTOSH N·A·P TYRES

Require no pump and cannot puncture or burst.
Require no study of air pressures, they are automatic.
Require no repair outfit.
Have no internal casing.
Do not require a spare wheel.
Absorb and swallow up road inequalities.
Are perfect non-skids.
Require no vulcanizing plant.
Give the maximum resistance to the abrasive action of the road.
Have the most durable tread that it is possible to manufacture.

See Editorial Notice in this Work, page 1736.

CHAS. MACINTOSH & CO. Ltd.

Cambridge Street, MANCHESTER

(Established 1824).

Telephone:
7147 Central Manchester.

Telegrams and Cables:
'Macintosh, Manchester.'

[SEE ALSO OVERLEAF]



The Macintosh TITAN TYRE

As supplied to the British, South African and other Governments, and in demand all over the world.

Manufactured by

Chas. Macintosh & Co. Ltd.

Cambridge Street, Manchester.

Codes—Bentley's, A B C (5th and 6th Edn.), Marconi.
Telephone—**7147** Central, Manchester.
Telegraphic Address—'Macintosh, Manchester.'

NOTE.—Chas. Macintosh & Co. Ltd., who were established in 1824 and were the original patentees of the Vulcanizing Process, make all sizes and classes of tyres—cord and fabric; straight side and beaded edge. *They strongly recommend their* 32 × 4½ *straight-side cord tyres for Ford* 1-*Ton Trucks.*

F. 1733

MOTOR CARS.

Many designs of motor cars are now on the market, but the general features have now become somewhat standardised in the most important makes. An example of good design of a 10 h.p. motor car is the Wolseley, illustrated in fig. 57, and the leading particulars of this and the other cars made by Wolseley Motors are given in the following table.

Maker's H.P.	R.A.C. Rating.	Weight of Chassis Empty.	Engine.				Wheel Base.	Track.	Body Space.	
			Bore.	Stroke.	No. of Cyls.	Normal Revs.			Dash to End of Frame.	Width of Frame.
10	10·5	9	in. $2\frac{9}{16}$ mm. 65	in. $3\frac{3}{4}$ mm. 95	4	1,700	ft. in. 8 3	ft. in. 3 10	ft. in. 5 5	in. 27
15	15·6	16	in. $3\frac{1}{4}$ mm. 80	in. $5\frac{1}{8}$ mm. 130	4	1,700	ft. in. 9 10	ft. in. 4 4	ft. in. 7 9	in. 34
20	23·5	—	in. $3\frac{1}{4}$ mm. 80	in. $5\frac{1}{8}$ mm. 130	6	1,400	ft. in. 11 5	ft. in. 4 6	ft. in. 8 8	in. 32

No. of Gears.	Drive.	Standard Axle Ratio.	Approximate Road Speed (M.P.H.) at Normal Engine Revs.					Approx. Road Wheel Dia.	Tyres, All Wheels.	Turning Circle.
			1st.	2nd.	3rd.	4th.	Reverse.			
3	Worm	$\frac{7}{38}$	$8\frac{1}{2}$	17	26	—	11	in. 28	710×90	ft. 34
3	Worm	$\frac{7}{38}$	10	20	34	—	$12\frac{1}{2}$	in. 32	815×105	ft. 36
4	Worm	$\frac{9}{37}$	8	$16\frac{1}{2}$	24	$32\frac{1}{2}$	8	in. 32	820×135	—

Cooling of the engine cylinders is by thermo-syphon and is assisted by a three-blade fan running on ball bearings mounted on a bracket carried up from the timing gear case. An eccentric adjustment is provided for the tension of the flat fan belt. On the other side of the engine is mounted a 'Blic' electric motor for starting the engine. The flywheel is cast iron and has bolted to it a mild steel gear ring in which the pinion on the motor engages when starting the engine.

The clutch is of the multi-disc type, completely enclosed, and running in oil. The back axle, which also carries a three-speed gear box, is driven through a universally-jointed shaft with a fabric type joint at the leading end and slipper box type at the back end. The final drive is by a worm wheel which surrounds the straight tooth differential.

The pedal and hand brake operate upon a single drum bolted to the hub, and are of the internal expanding cam-operated type. The design is quite novel. The two fulcrum pins are set at 90 degrees, and the webs of the shoes are made to pass one another. The braking surface of each of the four shoes covers about 80 degrees of the circumference and extends across the full width of the drum, so that each brake has the benefit of the full wearing surface on the drum. The torque member is a steel casting bolted to the front of the gearbox, and has a spherical end which fits into a link machined to fit the sphere which hangs from a tubular cross-member upon which it is free to swing. The car is propelled through the springs.

The gear change is of the quadrant type, the selector rods being hinged in line with the centre of the sphere on the torque member. The gears slide upon a castellated shaft which is

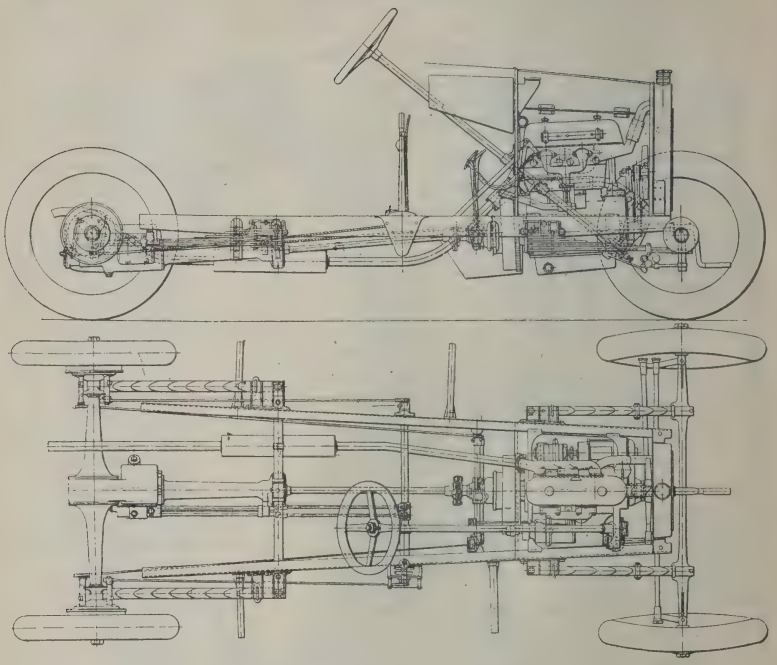


FIG. 57.—The Wolseley 10 h.p. Motor Car.

integral with the driving worm. All shafts and road wheels run on Timken roller bearings of ample dimensions. The springs are of the cantilever type directly bolted to the axles, and the pressed channel steel frame.

The panels and other sheet metal portions are pressed to shape, and there are various types of bodywork, as follows: For the 10-h.p. chassis, two-seater, three-seater and two-seater *coupé* bodies; for the 15-h.p. chassis, touring and saloon bodies; and for the 20-h.p. chassis, touring, landaulette, limousine, and four-seater *coupé* with folding head bodies.

MOTOR OMNIBUSES.

The greatly improved construction, reliability, low running cost, ability to instantly change route, and to at once expand the service when necessary, have all contributed to render the present-day 34-seated petrol motor omnibus a most formidable competitor of the 78-seated electric tramcar with its high initial and maintenance charges and fixed route. There is moreover very much less obstruction to other traffic with the newer independent carrying unit.

At the end of 1912 about 300 miles of streets were daily traversed by about 2,600 motor omnibuses in Greater London alone; of these about 2,450 were petrol driven, the remaining 150 (roundly) being operated by steam.

Along the main highways of Central London three motor omnibuses per minute, in each direction, is now usual; thus 6,120 passengers can be conveyed per hour past a given point in each direction with this normal frequency of service without interference with the other heavy traffic existing.

Where regular motor-bus services are run over ordinary roads of water-bound macadam, rapid deterioration of the surface occurs due to the formation of very numerous and large 'pot-holes'; such road surfaces are unsuited to this new fast and heavy traffic, and will be gradually replaced by stronger tar-treated crusts.

In the London district the average daily mileage per motor bus is from 100 to 120; the total running cost per mile from 7½*d.* to 8*d.*, and the average revenue from 10½*d.* to 11*d.* per mile.

In country services the daily mileage is often not more than 75 per bus, due to inferior and hilly roads, while the total running cost per mile is often from 9*d.* to 1*s.*

The following table (from E. Shrapnell Smith) shows the inclusive running cost per mile of London motor omnibuses during 1909, and also during 1912; it will be observed that a reduction of no less than 2·23*d.* per bus mile has been effected at the later date :—

TOTAL RUNNING COSTS PER MILE OF LONDON MOTOR OMNIBUSES.
(*From E. Shrapnell Smith.*)

Item.	Average of 1907-type Motor Buses Running during 1909.	Average of Petrol and Petrol-electric Motor Buses during 1912.
	Pence per Mile.	Pence per Mile.
Traffic expenses	2·65	2·43
Running and maintenance	3·28	2·44
Tyres	1·33	1·02
General expenses	0·79	0·62
Depreciation	1·00	0·50
Interest on capital	0·50	0·31
Totals	9·55	7·32

It is estimated that in the United Kingdom at the end of 1912 there were, roundly, 4,500 motor omnibuses, practically all being operated by petrol.

The various types of double-deck omnibus now used weigh from 3 to 4½ tons, when fully equipped for the road, and the weight of a full load of passengers (sixteen inside and eighteen outside), together with the driver and conductor, averages 2·5 tons, making the total weight of a fully loaded omnibus 5½ to 7 tons.

The load on the driving wheels with the omnibus fully loaded averages about 0·6 of the total weight; thus the maximum load on the driving wheels is about 3¾ tons, or 1·9 ton per wheel.

The average weight of an omnibus body is between 28 and 29 cwts.

COST OF WORKING MOTOR-BUSES.

The 1916 report of the working of the Manchester Corporation Tramways shows that the Corporation motor omnibuses ran 180,956 miles, and carried 1,416,760 passengers; the cost per mile run, including depreciation, was 9½*d.*, and the earnings nearly 9¾*d.*

The weights of some petrol omnibuses are tabulated below :—

	Weight of Chassis.			Complete Omnibus.		
	Tons	Cwts.	Qrs.	Tons	Cwts.	Qrs.
24 H.P. De Dion	2	2	2	3	11	2
30 H.P. Dennis	2	12	0	4	1	0
28 H P. Milnes Daimler	2	14	0	4	3	0
24 H.P. Scott Stirling	3	0	0	4	9	0
30 H.P. Straker Squire	2	14	2	4	3	2
30 H.P. Wolseley	2	13	0	3	18	0

The leading dimensions of the average omnibus are as follows :

Extreme length varies from 18 ft. 6 ins. to 22 ft. 6 ins. Extreme width varies from 6 ft. 3 ins. to 7 ft. 2 ins. (7 ft. 2 ins. being the maximum width allowed). Extreme height to hand rail of top deck, 11 ft. 6 ins. to 11 ft. 9 ins. The average wheel base is 12 ft. The average width of track is 6 ft. 2 ins.

Due to increased experience and consequent improvement in manufacture, the tyre-mileages attained by the London motor omnibuses are now very much larger than at first; makers of solid rubber tyres are usually willing to give a guarantee of 10,000 to 12,000 miles, but, as the short table hereunder shows, in favourable circumstances these distances are greatly exceeded :—

SOME EXCEPTIONAL TYRE-MILEAGES IN LONDON MOTOR-BUS SERVICES.

Name of Tyre.	Mileage Attained.	Notes.
Macintosh	79,885	Tyre removed from motor omnibus 30th June 1921
Dunlop	27,605	Used on a 'Metropolitan' steam bus
Dunlop	32,663	" " "
Continental	18,346	Average of 543 motor omnibus tyres
Hercules	27,000	Used on a 'motor omnibus'

It may be taken that an average all round of 20,000 miles may be assumed as the mileage life of the solid rubber tyres of motor omnibuses in London service.

Pneumatic Tyres.

Pneumatic tyres are, in general, manufactured in the following varieties :—Plain, Grooved or Ribbed, Rubber Studded, Steel Studded. The following table gives the most usual sizes together with the recommended air pressure to be used :—

USUAL SIZES AND PRESSURES FOR PNEUMATIC TYRES.

Wheel Diameter.		Tyre Diameter.		Maximum Load per Tyre, in Lbs.	Air Pressure, Lbs. per Sq. In.		Notes.
In mm.	In inches.	In mm.	In inches.		In Front Tyres.	In Back Tyres.	
650	25·6	65	2·56	450	60	70	Used on miniature cars.
750	29·5	65	2·56	450	60	70	
700	27·6	85	3·35	600	70	80	Used on normal motor cars
750	29·5	85	3·35	600	70	80	
760	29·9	90	3·54	900	70	80	
765	30·1	105	3·93	1,050	75	85	
800	31·5	85	3·35	600	70	80	
810	31·9	90	3·54	900	70	80	
810	31·9	100	3·94	1,000	75	85	
815	32·1	105	4·13	1,050	75	85	
820	32·3	120	4·73	1,300	80	85	
875	34·4	105	4·13	1,050	75	85	
880	34·6	120	4·73	1,300	80	85	
895	35·2	135	5·32	1,400	80	85	
915	36·0	105	4·13	1,050	75	85	
920	36·2	120	4·73	1,300	80	85	
935	36·8	135	5·32	1,400	80	85	
1,020	40·2	120	4·73	1,300	80	85	
—	30·0	—	3·0	—	65	75	Used on American motor cars.
—	30·0	—	3·5	—	70	80	
—	32·0	—	3·5	—	70	80	

The air pressures given in the foregoing table are for the maxima loads per tyre ; for lighter roads the chart, fig. 59, may be used.

THE MACINTOSH N.A.P. UNPUNCTURABLE TYRE.

(Chas. Macintosh & Co., Ltd., Manchester.)

This tyre, fig. 58, is so constructed that it possesses a large hermetically sealed core containing uncompressed air. It has a broad and flat base similar to that of the ordinary solid tyre, thick, strong, and abnormally flexible walls, and a narrow tread having a central row of triangular cavities about half an inch deep, which give definite non-skidding and side-slipping properties on slippery surfaces. This form of construction is such that it is claimed to need no

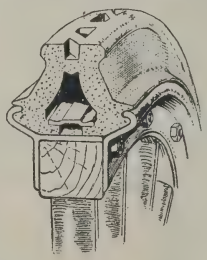


FIG. 58.

attention whatever during the whole life of the tyre, which is guaranteed to be a minimum of 10,000 miles or twelve months, whichever expires the sooner. Another important feature is that the walls are entirely of rubber and contain no fabric, with the result that exceptionally cool running is obtained. The Lancashire United Tramways, Ltd., are using it for all their medium-weight vehicles. This tyre seems to combine in a remarkably efficient manner the advantages both of the pneumatic and the solid variety.

CHART OF PRESSURES FOR PNEUMATIC TYRES.

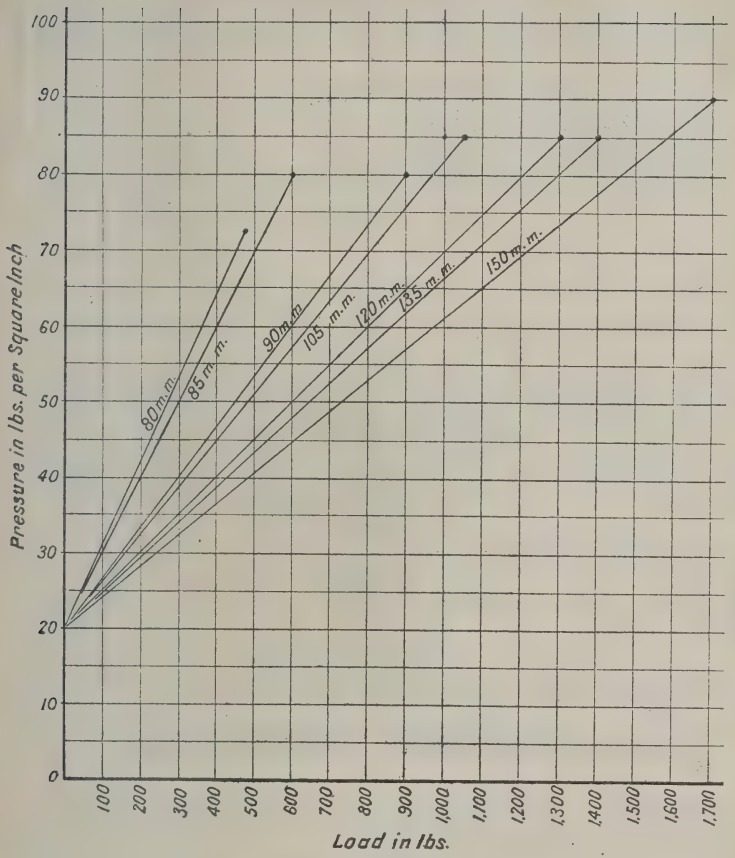


FIG. 59.

MISCELLANEOUS DATA.

Valve Springs.

The high revolution speed of the petrol engine necessitates the employment of stiff helical springs to ensure sufficiently quick closing of the valves notwithstanding the small mass of these. Let,

m = the mass of valve, tappet rod, roller, etc., all complete, in lbs.;
μ = the mass of the spring itself, in lbs.;
λ = the lift of the valve, in inches;
n = the number of revs. per minute of engine;
f = the *average* necessary compressive force in the spring, in lbs.
Then f may be found from the equation :—

$$f = 11{\cdot}5\ (2m + \mu)\ n^2\lambda \times 10^{-6} \quad . \quad . \qquad 3\ T\ 2$$

Helical Springs.

Helical springs, often, though incorrectly, referred to as 'spiral' springs, made of steel wire of round or square section, are most commonly used for the valves of internal combustion engines. Let,

D = the mean diameter of the coils, in inches;
δ = the diameter or side of square of wire, in inches;
F = the load on the spring, in lbs;
K = the compression of spring, in inches, under F.;
N = the number of complete working coils;
c = 8,000 for round steel; = 11,000 for square steel;
a = $1{\cdot}44 \times 10^6$ for round steel; = $1{\cdot}96 \times 10^6$ for square steel;

then,

$$\delta = \sqrt[3]{\frac{FD}{c}} \text{ ins.} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (43)$$

and,

$$K = \frac{FND^3}{a\delta^4} \text{ ins.} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (44)$$

For example, if $m = 1$ lb., $\lambda = \frac{7}{16}$ in., $n = 2{,}000$, and $\mu = \frac{1}{2}$ lb., we have from Eq. (42):—

$f = 50{\cdot}3$ lbs., average compressing force.

In petrol engines, the 'accumulation' of the valve springs, or ratio of the compressing forces with valve fully lifted and seated respectively, may be taken roundly at the value 3·0.

Hence, the maximum compressing force is about $1{\cdot}5f$ and the minimum $0{\cdot}5f$; thus in the example here taken, the maximum compressing force = 75·5 lbs.

The total compression of the spring due to the maximum load of $1{\cdot}5f$ is easily found to be $1{\cdot}5\lambda$, or 0·65625 inch.

We may now find a suitable spring, knowing that F = 75·5 and K = 0·65625. The design of the engine leaves room for a value of D = 1·5, say; then, using round wire, we have from Eq. (43):—

$$\delta = 0{\cdot}242 \text{ in.}$$

the diameter of the spring wire.

While from Eq. (44) we next obtain:—


$$N = 12{\cdot}72$$

as the necessary number of working coils.

(See also page 931.)

Laminated Springs.

Let the spring contain n leaves each of breadth b inches and thickness t inches. Let L_1 be the effective length of the spring in inches as indicated in fig. 60.



Effective length $L_1 = L - l$

FIG. 60.

Let W be the load at the centre, in tons; and let K be the deflection of the centre due to the load W tons. Then for ordinary laminated steel springs:—

$$W = \frac{24\,nbt^2}{L_1} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (45)$$

and,

$$K = \frac{WL_1^3}{36{,}000\,nbt^3} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (46)$$

Joint Packings.

A preparation which has been recommended for use in packing the cylinder joints of internal combustion engines is made by mixing graphite and kerosene into a thick paste, which is applied to both sides of sheet asbestos. This may also be used in packing the joints of induction or exhaust pipes.

When the joint packing is exposed to water and high temperatures a better packing is made by soaking sheet asbestos in boiled linseed oil for six to twelve hours; the packing should then be allowed to dry for about twenty-four hours. The surface of the packing should be wiped or dusted with graphite before using.

Notes on Traction.

The force necessary to maintain the motion of a wheeled vehicle is dependent upon the nature and condition of the road surface, the diameter of the wheel, the width and material of the tyre, and the type of axle bearings.

On hard roads whose surface is not sensibly impressed narrow tyres may be used with advantage; directly a 'rut' is made, however, the tractive resistance greatly increases and wider tyres become desirable. The table hereunder gives some tractive force results obtained by various experimenters, with iron tyres and plain bearings:—

SOME EXPERIMENTAL RESULTS ON RESISTANCE TO TRACTION.

Description of Road.	Resistance R, in Lbs. per Ton.	Authority.	Notes.
Railroads	6–10	—	Average value.
Tramways	30	—	" "
Good asphalte	15	Telford	—
Ordinary asphalte	22	Whyte-Smith	—
Poor asphalte	30	U.S. Agr. Bur.	—
Wood paving	30	Whyte-Smith	Average of 3 expts.
Good setts	35	Telford	—
Good macadam	43	U.S. Agr. Bur.	—
" "	46	" "	In dry weather
" "	42	Telford	" "
" "	45	Soc. of Arts	Omnibus trials
" "	50	Whyte-Smith	In wet weather
Ordinary macadam	60	"	" "
" "	80	Telford	" "
Soft macadam	97	Whyte-Smith	" "
Good gravel road	57	U.S. Agr. Bur.	—
Best cobbles	60	" "	—
Ordinary cobbles	130	Telford	—
Very bad cobbles	240	"	—
Hard dry clay	100–110	Telford & U.S. Agr. B.	—
Sand road	360	U.S. Agr. Bur.	—
Loose road	560	Telford	—

Resistance to Motion on Road.

The resistance to motion of any automobile may be found by permitting it to run freely down a measured length S feet of a known slope, and observing the velocity v feet per second acquired from rest. If h denote the vertical distance through which the vehicle descends, and R the resistance to motion on the level, estimated in lbs. per ton, then,

$$R = \frac{2240}{S}\left(h - \frac{v^2}{2g}\right) \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (47)$$

Horse-Power necessary to Propel Automobiles.

Let,
R = resistance on level, in lbs. per ton;
W = gross weight of automobile in tons;
V = velocity in miles per hour;
V_1 = velocity in miles per hour, relatively to the wind;
A = area in sq. ft. normal to action of wind;
P = actual horse-power necessary at road wheels;
e = efficiency of transmission from clutch to road wheels;
B.H.P. = Brake horse-power of engine;
Slope of gradient = 1 in m;

then,

$$P = \frac{WV}{375}\left(R + \frac{2240}{m}\right) + \frac{8{\cdot}5}{10^6} A V_1^3 \quad . \quad . \quad . \quad . \quad . \quad . \quad (48)$$

and,

$$B.H.P. = \frac{P}{\epsilon} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (49)$$

R may be determined as in Eq. (47), or by direct pull. It is, however, generally sufficient for English service to take R as 70 lbs. per ton (see table, p. 1739). The second term in Eq. (48) represents the wind resistance horse-power; this is, in general, negligible at speeds below 20 miles per hour.

As a typical case, let it be required to estimate the b.h.p. of engine necessary to propel a car having a gross weight of 1 ton at 20 miles per hour up a 1 : 15 gradient on top gear. The car opposing an area of 30 square feet to a wind blowing in the opposite direction at 10 miles per hour. As in direct-driving top gear there is only one gear transmission from clutch to road wheels, we may take $\epsilon = 0{\cdot}85$.

We have therefore for this typical case :—

$$R = 70,\ W = 1,\ V = 20,\ V_1 = 20 + 10 = 30,\ A = 30,\ \epsilon = 0{\cdot}85, \text{ and } m = 15.$$

Hence from Eq. (48) :—

$$P = 11{\cdot}7 + 6{\cdot}9 = 18{\cdot}6.$$

And from Eq. (49) :—

$$B.H.P. = \frac{18{\cdot}6}{0{\cdot}85} = 21{\cdot}9.$$

Gear Ratios of Motor Cars.

Let n = number of revs. per minute of engine;
N = " " " of driving wheels;
D = diameter of driving wheels in feet;
V = desired speed of car in miles per hour;
G = total gear ratio from engine to driving wheels;

then,

$$G = \frac{n}{N}; \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (50)$$

and,

$$N = \frac{28\ V}{D}; \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (51)$$

so that,

$$G = \frac{n\ D}{28\ V} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (52)$$

For example, in the typical case above, if the driving wheels are 760 mm. in diameter we have $D = 2{\cdot}5$. Assume the normal engine speed to be 1,000 r.p.m., and the desired speed of the car 20 miles per hour. Then $n = 1{,}000$, and $V = 20$.

Thus from Eq. (51) :—

$$N = 224 \text{ revs. per minute.}$$

While Eq. (52) gives :—

$$G = 4{\cdot}46.$$

A very complete and valuable table giving the gear ratios of all the principal motor cars of the year 1913 appeared in 'The Autocar' of September 20, 1913. Not only are the gear ratios given, but also the number of cylinders, their bore and stroke, the cubic capacity, and the diameter of the driving wheels. It may be referred to with advantage in this connection.

SECTION XXX

PART VI

AEROPLANES — GENERAL DATA — THE ATMOSPHERE — WINGS OF MONOPLANES—AIR SCREWS—AEROPLANE PERFORMANCE — NOTABLE FLIGHTS — AIRSHIPS FOR COMMERCE—STANDARD DATA FOR AIRSHIP CALCULATIONS—OXYGEN APPARATUS—PARACHUTES.

(Revised and amplified by Major D. H. Kennedy, O.B.E., F.R.Aë.S.)

GENERAL DATA.

The Atmosphere.

That the temperature of the atmosphere diminishes as one ascends is obvious from the fact that the summits of high mountains are constantly snow-covered.

The rate of diminution is, naturally, somewhat variable, but for London averages about 3·5°F. per 1,000 feet of height. The mean annual temperature of London is roundly 50°F. Hence, as the average condition a temperature of 50°F. may be taken at the surface of the earth, and a fall of temperature of 3·5°F. per 1,000 feet of height.

At h feet, therefore, the average temperature is assumed as :—

$$t = 50 - 3{\cdot}5 \times \frac{h}{1000} \text{ °F.}$$

Or, using absolute temperatures :—

$$T = 510 - {\cdot}0035\ h \text{ °F. abs.}$$

Hence the characteristic Equation (1) becomes in this case :—

$$p\ v = c\ (510 - {\cdot}0035\ h) \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (53)$$

If at height h feet the pressure be p, then at height $(h+dh)$ feet the pressure must be $(p+dp)$, dp including its sign ; the (negative) increment dp is due to the weight of a layer of air 1 square foot in horizontal section and dh feet high, and is therefore numerically equal to $\frac{dh}{v}$; hence :—

$$dp = -\frac{dh}{v},$$

From Eq. (53) this becomes :—

$$c\frac{dp}{p} = -\frac{dh}{510 - {\cdot}0035h}$$

hence,

$$c\int_{p_o}^{p}\frac{dp}{p} = -\int_{o}^{h}\frac{dh}{510 - {\cdot}0035h}$$

where p_o is the pressure at the earth's surface ; performing the integration, reducing, and taking $p_o = 14{\cdot}7$, we have for determining p, the pressure in lbs. per square inch at height h feet :—

$$\text{Log. } p = \overline{1}4{\cdot}654741 + 5{\cdot}36.\ \text{Log. } (510 - {\cdot}0035h) \quad . \quad . \quad . \quad . \quad . \quad (54)^*$$

From this equation the table on page 1742 has been prepared ; in addition, the table gives the absolute and ordinary average temperatures in °F. for heights up to 30,000 feet ; the pressures in lbs. per square inch and in inches of mercury ; the ratio of the pressure at height h to the pressure at the earth's surface, and the volume of 1 lb. of air, in cubic feet, at the several heights. It will be found useful in calculations relating to aeronautics.

* Common Logs.

PRESSURE AND TEMPERATURE OF THE AIR AT DIFFERENT HEIGHTS.

Height in Feet above Sea Level. h.	Temperature, °F.		Pressure:—		Ratio p/p_o	Volume of 1 Lb. in Cubic Ft.
	Absolute.	Ordinary.	In Lbs. per Sq. In.	In Ins. of Mercury.		
Column:—	1	2	3	4	5	6
0	510	50	14·70	30·0	1·00	12·84
1,000	506·5	46·5	14·17	28·91	0·964	13·23
2,000	503	43	13·65	27·86	0·929	13·64
3,000	499·5	39·5	13·15	26·83	0·894	14·06
4,000	496	36	12·66	25·84	0·861	14·50
5,000	492·5	32·5	12·19	24·90	0·830	14·95
6,000	489	29	11·73	23·95	0·798	15·42
7,000	485·5	25·5	11·29	23·04	0·768	15·91
8,000	482	22	10·86	22·17	0·739	16·42
9,000	478·5	18·5	10·45	21·32	0·711	16·95
10,000	475	15	10·04	20·49	0·683	17·51
11,000	471·5	11·5	9·65	19·70	0·657	18·08
12,000	468	8	9·27	18·93	0·631	18·68
13,000	464·5	4·5	8·91	18·18	0·606	19·30
14,000	461	1	8·55	17·46	0·582	19·94
15,000	457·5	−2·5	8·21	16·76	0·559	20·62
16,000	454	−6	7·88	16·08	0·536	21·32
17,000	450·5	−9·5	7·56	15·43	0·514	22·05
18,000	447	−13	7·25	14·80	0·493	22·81
19,000	443·5	−16·5	6·95	14·19	0·473	23·61
20,000	440	−20	6·66	13·60	0·453	24·44
21,000	436·5	−23·5	6·38	13·03	0·434	25·31
22,000	433	−27	6·11	12·48	0·416	26·21
23,000	429·5	−30·5	5·85	11·95	0·398	27·15
24,000	426	−34	5·60	11·43	0·381	28·14
25,000	422·5	−37·5	5·36	10·94	0·365	29·17
30,000	405	−55	4·27	8·72	0·291	35·08

The weight of 1 cubic foot of air in lbs. is of course the reciprocal of the figure in column 6, at any given height.

The effect of the fall in temperature with height is to cause the pressure to be slightly *less* than if the temperature were uniform throughout; thus at 9,000 feet, with uniform temperature of 50°F. throughout, the pressure is 21·54 inches of mercury, while with diminishing temperature (*vide* table) it is 21·32 inches. Actually the atmosphere is very rarely quiescent, and in the uniform condition here assumed; the results obtained are, however, useful for calculation. In particular, for a few hundreds of feet above the surface of the earth the air is usually in a condition of more or less complex turbulence with eddies, ascending heated currents, etc., due to the nature and configuration of the country beneath.

This table should be regarded as approximate only until further actual observations as to the temperatures and pressures at altitudes are available. The observed temperature on January 2, 1919, at an altitude of 30,500 ft., was −38°F.

Flight of Heavier-than-Air Machines.

The following elementary treatment of the subject furnishes results of some practical interest and exhibits clearly the *rationale* of mechanical flight:—

Wind Pressure on a Normally Moving Smooth Plane.

Let A = the area of the plane in square feet.
v = the velocity of the plane, relatively to the air, in feet per second.
G = the weight of the air, in lbs. per cubic foot.
g = 32·2.
P = the resulting pressure on the plane, in lbs.

Then in one second a mass (GAv) lbs. of air impinges on the plane and its momentum is

destroyed; the momentum is $(GAv)\times v$, and the momentum destroyed per second measures the force, in absolute units (i.e. poundals); hence we have :—

$$P = \frac{1}{g}(GAv)\,v \text{ lbs.} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (55)$$

Actually, however, owing to the air streams formed, and the action at the back of the moving plane, the case is not quite so simple, and it is found necessary to unite :—

$$P = f\,GA\,\frac{v^2}{g} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (56)$$

where f is a coefficient whose value is determined by experiment.

Very numerous experiments have at various times been made to determine f, with somewhat widely differing results according as the size, shape, and material of the plane have been varied. Recent experimental results of M. Eiffel and Dr. T. E. Stanton suggest that f may be taken, for large surfaces, at the value $\frac{5}{8}$ roundly, so that Eq. (56) becomes, putting 32·2 for g :—

$$P = \cdot 0194\times GA\,v^2 \text{ lbs.} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (57)$$

Power Required to Drive the Plane.

If E be the horse-power necessary to drive the plane at v feet per second in opposition to a resistance of P lbs., we have :—

$$E = \frac{1}{550}Pv \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (58)$$

By aid of Eq. (57) this becomes :—

$$E = \frac{35\cdot 3}{10^6}GAv^3 \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (59)$$

Thus the horse-power necessary varies :—

Directly as the heaviness of the air.
Directly as the area of the plane.
Directly as the cube of the relative speed of plane and air.

Case of a Smooth Plane inclined to the Direction of Motion.

Let the smooth plane be inclined at an angle $\phi°$ to the direction of its motion (assumed as horizontal).

As the plane is smooth, the resultant pressure R upon it must be normal to its surface. R may be resolved into a horizontal component H, which directly resists the progress of the plane, and a vertical component L which measures the upward thrust of the air, or 'lift of the plane.'

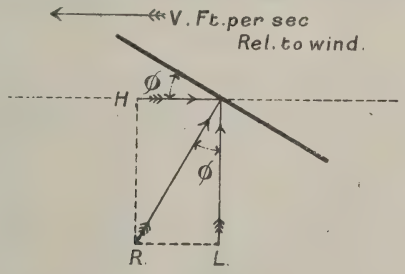


FIG. 61

From fig. 61 it is evident that :—

$$H = R\sin\phi \quad . \quad . \quad . \quad . \quad (60) \qquad L = R\cos\phi \quad . \quad . \quad . \quad . \quad . \quad (61)$$



Experiments on the normal pressure of air on inclined planes show that the complete relation connecting P, H, L, and ϕ is exceedingly complex. M. Eiffel finds that the value of $\frac{R}{P}$ is independent of v; that it increases with the area of the plane; and that for rectangular plates with the shorter dimension inclined, and for values of ϕ, in degrees, not exceeding 12 :—

$$\frac{R}{P} = \frac{3{\cdot}2 + 0{\cdot}5\ n}{100}\ \phi \text{ (app.)} \quad . \quad . \quad . \quad . \quad . \quad . \quad (62)$$

where n is the proportion of span to chord of the plane, or its 'aspect ratio.'

In general the value of n is about 6; taking this value in Eq. (62) we get as an average case,

$$R = 0{\cdot}062\ \phi \text{ P. lbs.} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (63)$$

Hence from Eqs. (57), (60) and (61) :—

$$H = {\cdot}0012\ \phi \sin \phi\ GAv^2 = a\ GAv^2 \text{ lbs.} \quad . \quad . \quad . \quad . \quad (64)$$

$$L = {\cdot}0012\ \phi \cos \phi\ GAv^2 = b\ GAv^2 \text{ lbs.} \quad . \quad . \quad . \quad . \quad (65)$$

and as $E = \frac{1}{550} Hv$, we have,

$$E = \frac{2{\cdot}187}{10^6}\ \phi \sin \phi\ GAv^3 = c\ GAv^3 \quad . \quad . \quad . \quad . \quad (66)$$

whence, dividing Eq. (66) by Eq. (65) there results :—

$$E = \frac{1822{\cdot}5}{10^6} \tan \phi \times v\ L = k_0\ v\ L \quad . \quad . \quad . \quad . \quad . \quad (67)$$

which connects power, inclination, velocity, and lift.

In order to achieve horizontal flight the velocity of the plane relatively to the air, v, must be just so great as to make the lift, L, equal to the weight of the plane, W.

Substitute, then, in Eq. (65), W for L, and we obtain on transposition :—

$$v_{min} = \frac{1}{\sqrt{b}} \sqrt{\frac{W}{GA}} = k_1 \sqrt{\frac{W}{GA}} \text{ feet per sec.} \quad . \quad (68)$$

Thus the speed necessary for horizontal flight varies :—

Directly as the square root of the weight of the plane.
Directly as the square root of the volume of 1 lb. of the air in cu. ft. (Table, p. 1692, col. 6).
Inversely as the square root of the area of the plane.

The horse-power necessary to just maintain horizontal flight is from Eqs. (67) and (68), putting W for L :—

$$E_{min} = k_0\ k_1 \sqrt{\frac{W^3}{GA}} = k_2 \sqrt{\frac{W^3}{GA}} \quad . \quad . \quad . \quad . \quad . \quad (69)$$

Values of a, b, c, k_0, k_1 and k_2 from $\phi = 0°$ to $\phi = 12°$ are given in the following table.

ϕ in Degrees.	a. $\times 10^6$.	b.	c. $\times 10^6$.	k_0. $\times 10^6$.	k_1.	k_2. $\times 10^6$.
0	0	0	0	0	∞	0
1	21	·0012	·038	31·8	28·9	920
2	84	·0024	·1523	63·6	20·4	1,299
3	188	·0036	·3426	95·5	16·7	1,593
4	335	·0048	·6088	127·4	14·5	1,841
5	523	·0060	·9508	159·4	13·1	2,088
6	753	·0072	1·3684	191·6	11·8	2,265
7	1,024	·0083	1·8613	223·8	10·9	2,451
8	1,336	·0095	2·4291	256·1	10·3	2,627
9	1,689	·0107	3·0717	288·7	9·7	2,795
10	2,084	·0118	3·788	321·4	9·2	2,957
11	2,519	·0130	4·579	354·3	8·8	3,113
12	2,994	·0141	5·444	387·4	8·4	3,264

From Eq. (69) it is seen that the power necessary to maintain the plane in horizontal flight varies :—

Directly as the $\frac{3}{2}$ power of the weight.
Directly as the square root of the bulkiness of the air as given in table, page 1742, col. 6.
Inversely as the square root of the area.

As the bulkiness of the air increases with the altitude, it appears from Eq. (68) that both the velocity necessary for horizontal flight and also the horse-power must increase as the plane ascends.

If the horse-power developed, E, exceed E_{min} the difference is expended in causing the plane to ascend. In the absence of any vertical resistance, the rate of ascent will be :—

$$\text{Rate of ascent} = \frac{550}{W}(E - E_{min}) \text{ ft. per second} \quad . \quad . \quad . \quad . \quad (70)$$

When ϕ is small, sin ϕ and tan ϕ are each sensibly the same, and equal to $\frac{\phi}{57{\cdot}3}$, while cos ϕ is practically unity. Hence, as we are here considering values of ϕ not greater than 12°, we may with sufficient accuracy write :—

$$10^6 \times a = 21\ \phi^2. \qquad b = {\cdot}0012\ \phi.$$
$$10^6 \times c = {\cdot}038\ \phi^2. \qquad 10^6 \times k_0 = 31{\cdot}8\ \phi.$$

Accordingly Equations (64), (65), (66), and (67) respectively become :—

$$H = \frac{21}{10^6}\phi^2\, GAv^2 \text{ lbs.} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (71)$$

$$L = {\cdot}0012\ \phi\, GAv^2 \text{ lbs.} \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad . \quad (72)$$

$$E = \frac{{\cdot}038}{10^6}\phi^2\, GAv^3 \text{ horse-power} \quad . \quad . \quad . \quad . \quad . \quad . \quad (73)$$

and,

$$E = \frac{31{\cdot}8}{10^6}\phi\, v\, L \text{ horse-power} \quad . \quad . \quad . \quad . \quad . \quad . \quad (74)$$

From these equations it is seen that, within the range of inclination taken :—

The horizontal resistance, and the horse-power required, vary directly as the square of the angle of inclination of the plane, while the lift varies directly as the angle simply.

The velocity necessary for horizontal flight, v_{min}, diminishes as ϕ increases agreeably with the values of k_1 as given in table, page 1744 : but the necessary horse-power increases with increase of ϕ, as shown by the increasing values of k_2 (*vide* table p. 1744), in consequence of the rapid increase in H.

AEROPLANES.

Aeroplanes may be broadly classed as follows :—

Monoplanes, having a single main plane, developed from the early Antoinette and Blériot machines.

Biplanes, having two superposed main planes, developed from the Wright and Farman designs.

Triplanes, having three superposed main planes, first put into practical form by Mr. A. V. Roe.

There are no practical examples of more than three planes, but the development of large aeroplanes may necessitate some such arrangement.

In general, the biplane gives the best all-round results, being stronger than a monoplane of equal lift and speed, and offering less head resistance than a monoplane of equal strength.

The very small Blériot monoplane which, on July 25, 1909, crossed the Channel from Calais to Dover, covering 31 miles in 43 minutes, had a wing span of only 25 ft. 7 ins., a total length of 26 ft. 3 ins., and a gross weight including pilot and in flying order, of only 650 lbs.

The superficial area of the planes was about 150 square feet; sufficient petrol was carried for a two hours' flight, and the engine was a 3-cylinder air-cooled 20 h.p. 'Anzani,' driving a two-bladed propeller. The wing frames were of ash covered with water-proofed linen.

The engine was placed in front, below the planes, and the pilot sat above the engine. This machine was caused to ascend by depressing the after ends of the planes; horizontal steering was effected by a vertical rudder placed at the rear; the planes were normally inclined about 8° to the horizontal.

It will be seen that the upward pressure amounted to $\frac{650}{150}=4\frac{1}{3}$ lbs. per sq. foot of wing area in this case; from 3 to 6 lbs. per sq. foot is usual, though in races, with shortened planes, the figure is said to rise sometimes as high as 10 lbs. per sq. foot.

A distance of 31 miles in 43 minutes implies an average speed, relatively to the *earth*, of $63\frac{1}{3}$ feet per second. If the Anzani engine developed just 20 b.h.p., the effective horse-power with a propeller efficiency of 70 per cent. was 14.

It is of interest to apply the formulæ obtained to the foregoing case. Thus we have W=650, A=150; and as the flight was not at a great height, we may take $\frac{1}{G}=13$ (table, col. 6, p. 1742); also $\phi=8$. Hence, Eq. (68) gives:—

$$v_{min}=77 \text{ feet per sec.}$$

relatively to the *air*.

While, putting L=650, Eq. (74) gives:—

$$E_{min}=12\frac{3}{4} \text{ effective horse-power.}$$

Assuming the propeller efficiency as 70 per cent., the necessary brake horse-power of the engine must accordingly be, roundly, $18\frac{1}{2}$.

Remembering that the formulæ were deduced for the simple case of a smooth true plane these figures may be regarded as giving a helpful indication. Actually the wings are neither smooth (see table, p. 1748) nor are they true planes (see fig. 62, p. 1747); there is also the resistance offered by the air to the body, rudder, stays, etc., etc., of which no account has been taken in the above investigation.

The velocity of the wind is, in general, least near the earth's surface, and in flying round a closed circuit the effect of a wind from any quarter is, on the whole, to retard the aeroplane. Hence, in aerodrome speed trials (i.e. speed relatively to the *earth*) pilots usually fly very near the ground.

It appears from Eq. (69) that the horse-power necessary to maintain horizontal flight slowly increases with the altitude of the plane. Eqs. (68) and (69) show, in fact, that both the velocity and power for horizontal flight must increase in proportion to $\sqrt{\frac{1}{G}}$, that is, in proportion to the square root of the bulkiness of the air. For example, at an altitude of 20,000 feet we have from table, col. 6 (p. 1742), $\frac{1}{G}=24{\cdot}44$. Hence, in the case above taken, the necessary velocity at this height must be $77\times\sqrt{\frac{24{\cdot}44}{13}}=105{\cdot}5$ feet per second, while the effective horse-power must be $2\frac{3}{4}\times\sqrt{\frac{24{\cdot}44}{13}}=17{\cdot}5$. Thus both the velocity relatively to the air, and the power, must, in this case, be increased by 37 per cent. to sustain horizontal flight at an altitude of 20,000 feet, owing to the diminished density of the air.

For the first two or three thousand feet of ascent as $\frac{1}{G}$ alters but little (see table, p. 1742), there is, in the example taken, an excess of $17\frac{1}{2}-12\frac{3}{4}=4\frac{3}{4}$ horse-power available for causing ascent so that, neglecting all vertical resistances, the plane would rise during the first part of its flight at a maximum rate, agreeably with Eq. (70) of $\frac{4{\cdot}75\times550}{650}=4{\cdot}0$ feet per second, or 1,000 feet in 4·15 minutes.

This, again, is a result of the right order of magnitude; for example, the winning machine in the International Air Competition at Hendon on September 27, 1913, attained a height of 2,700 feet in 13·17 minutes, i.e., at the rate of 1,000 ft. in about 4·9 minutes.

The types of aeroplanes now in general use are :—

Use.	Type.	Name.	Seats.	Engine.
Training	Biplane	Avro	Two	Rotary, air-cooled.
Scout	Monoplane	Bristol	One	,, ,,
,,	Biplane	S.E. 5	,,	Stationary, water-cooled.
,,	,,	S.V.A.	,,	,, ,,
,,	,,	Snipe	,,	Rotary or radial, air-cooled.
,,	,,	B.A.T.	,,	,, ,, ,,
,,	,,	Dolphin	,,	,, ,, ,,
,,	,,	Nieuport	,,	,, ,, ,,
R.L.B.*	Biplane	R.E. 8	Two	Stationary, air-cooled.
,,	,,	De H. 4	,,	,, water-cooled.
,,	,,	De H. 9	,,	,, ,,
,,	,,	Bristol	,,	,, ,,
,,	,,	A.W.	,,	,, ,,
H.B.†	Biplane	Caudron	,,	Rotary, air-cooled.
,,	,,	De H. 10	,,	Stationary, water-cooled.
,,	,,	Handley-Page	,,	,, ,, (Two)
,,	,,	,,	Four	,, ,, (Four)
Seaplanes	Biplane	Short	Two	,, ,,
,,	,,	Fairey	,,	,, ,,
Flying Boat	,,	F.B.A.	,,	,, ,,
,,	,,	Porte	Four	,, ,, (Two)

* Reconnaissance and Light Bombing. † Heavy Bombing.

Wings of Aeroplanes.

The main planes or wings of aeroplanes are commonly of rectangular form in plan, with a transverse length, or 'span,' about 6 times the fore-and-aft length, or 'chord' ; the ratio of transverse to fore-and-aft length is termed the 'aspect ratio' ; hence the 'aspect-ratio' has usually a value about 6.

The planes on either side of the fore-and-aft centre lines are set at an angle to the horizontal plane, known as the 'dihedral' or 'anhedral' angle, according to whether the planes are above or below the horizontal.

Experiments by Mr. Horatio Phillips in 1885 showed clearly that the best form of fore-and-aft

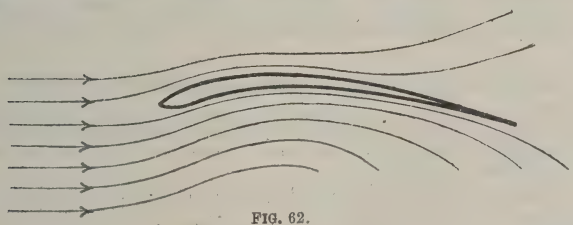


FIG. 62.

section for the wings is as indicated in fig. 62, the maximum height occurring at about one-third of the length measured from the front edge.

The approximate direction of the impinging air streams is as indicated ; the reduction of pressure on the *upper* surface actually contributes the larger portion of the lifting force.

The value of the 'aspect-ratio' is important ; if the wings be too long in a fore-and-aft direction diminished performance results ; at the Rheims aviation contest, by reducing the fore-and-aft length of the wings of his aeroplane by about one foot, M. Blériot, carrying the same weight as before, flew much faster with the same engine.

The ' Aerial Derby ' of 1913 was won by G. Hamel, who, by shortening his wings prior to the contest, averaged a speed of 76 miles per hour (relatively to the earth). It is obvious from Eq. (68) that a reduction in A causes an increase in v_{min}; the horse-power necessary must also be increased in the same proportion, however, as is shown from inspection of Eq. (69). The wing area is now frequently reduced for speed contests.

' Skin Friction ' of the Planes.

The experiments of Dr. Zahm of Washington led him to conclude that, in proportion to their densities, the frictional resistance of air is at least as great as that of water, and that this resistance is an important factor in the problem of high-speed flying. Some of Dr. Zahm's results are exhibited in table below. He states also that ' the frictional resistance of a plane or arched surface soaring at small angles on a horizontal course is equal to the *horizontal projection* of the surface multiplied by the average friction per square foot as given by table below.'

Experiments were made to determine the effect of the nature of the surface of the plane upon the frictional resistance; practically no difference was found with dry varnish, sticky varnish, wet surface, sheet zinc, glazed cambric, calendered or uncalendered paper, or drawing paper. With coarse buckram having sixteen meshes to the inch, the friction at 10 lbs. per second was, however, found to be from 10 to 15 per cent. greater than with the uncovered surface.

FRICTION OF AIR PER SQUARE FOOT OF PLANE FOR VARIOUS FORE-AND-AFT LENGTHS. (*Dr. Zahm.*)

Speed of Wind. Miles per hour	Lbs. per sq. ft. Friction for fore-and-aft lengths of plane of					
	1 Ft.	2 Ft.	4 Ft.	8 Ft.	16 Ft.	32 Ft.
20	·00402	·00384	·00365	·00349	·00332	·00317
25	·00602	·00579	·00551	·00527	·00501	·00478
30	·00850	·00810	·00772	·00736	·00701	·00668
35	·01130	·0108	·0103	·0098	·00932	·00888
40	·0145	·0138	·0132	·0125	·0125	·0114
50	·0219	·0209	·0199	·0190	·0181	·0172
60	·0307	·0293	·0279	·0265	·0253	·0242
70	·0407	·0390	·0370	·0353	·0337	·0321
80	·0522	·0500	·0474	·0452	·0431	·0411
90	·0650	·0621	·0590	·0563	·0536	·0511
100	·0792	·0755	·0719	·0635	·0652	·0622

Calculation of Frictional Resistance and Horse-Power.

In using the above table, it must be remembered that a material plane exposes *two* surfaces to the action of the air. For example, the frictional resistance of a material plane of 24 feet span, and with a fore-and-aft length (' chord ') of 4 feet, at a speed of 80 miles per hour relatively to the air is to be estimated as follows :—

From the table the friction per square foot for a fore-and-aft length of 4 feet at a relative speed of 80 m.p.h. is ·0474 lb.; and as there are $2 \times 24 \times 4 = 192$ square feet of total area exposed to the action of the air, the total frictional resistance of the material plane is $192 \times \cdot0474 = 9{\cdot}1$ lbs.

Eighty miles per hour $= 1{\cdot}47 \times 80 = 117{\cdot}6$ feet per second; hence the work necessary to overcome friction alone is $117{\cdot}6 \times 9{\cdot}1 = 1070{\cdot}2$ foot-lbs. per second; and thus $\frac{1070{\cdot}2}{550} = 1{\cdot}95$ horse-power must be expended to overcome this resistance. In the practical design of aeroplanes it is, of course, necessary to take account not only of the frictional resistance of the wings, but also that of the body, stays, and other parts of the machine exposed to the relative velocity of the air.

Control of Aeroplanes.

When in flight an aeroplane has freedom of motion in three dimensions about its own centre. Its motion in these dimensions is controlled by :—

The Rudder, a movable vertical surface, adjusted by the pilot's feet, controlling the direction of flight in a horizontal plane.

The Elevator, a movable horizontal surface adjusted by a lever in the pilot's hand, controlling the direction of flight in a vertical plane within the limits set by the lift of the main planes and the power developed by the engine.

The Ailerons, small movable planes attached to the outer ends of the main planes, arranged so as to increase or decrease the lift on either side of the aeroplane and adjusted by the same lever which controls the elevator. The ailerons enable the machine to be kept laterally horizontal, and to be tilted or 'banked' as required for any manœuvre in the air.

Stability.

Aeroplanes may be unstable, or inherently stable. The former require constant vigilance on the part of the pilot, or the incorporation of some mechanical device such as the Sperry Gyroscopic Stabiliser, which gives them 'automatic stability.' The latter possess a tendency to return to their normal flying position after any disturbance.

Inherent stability is obtained by correct proportioning of the main and auxiliary planes and their dihedral angles, and a proper balancing of the couples about the centre of the machine due to the lift and resistance of the planes, the mass of the machine, and the thrust of the propeller.

Unstable machines can be manœuvred more rapidly and accurately than can highly stable machines; they are therefore more suitable as fighting machines, whilst the latter have a wider application for commercial purposes.

Airscrews.

Airscrews for aircraft are now constructed entirely of wood; laminations of walnut and mahogany are glued and pegged together, and shaped to the correct pitch and blade section. Blades may be copper tipped, but more often are left bare. Two- and four-bladed airscrews are generally used.

The metal propellers fitted to some of the early Blériot monoplanes are now obsolete, but experiments continue to be made, and it is probable that a practicable form will be evolved, as in some cases metal is preferred to wood.

For the sake of efficiency, airscrews should be of large diameter, and should run at a low speed. In large engines, a reduction gear is usually incorporated so as to allow the engine to run at a higher speed than the propeller. With modern airscrews, an efficiency as high as 77 per cent. and over has been obtained.

Colonel Dorand has found that the diameter of the airscrew should be proportional to the weight supported per h.p. and to the square root of the total weight of the machine. Also, that the r.p.m. of the airscrew should be inversely proportional to the square of the weight supported per h.p. and to the square root of the total weight.

The loss in the efficiency of airscrews running at a high speed is serious, and has been found greater than any gearing loss; therefore, for engines running at high rotational speeds, it is necessary to fit reduction gearing to allow the airscrew to run at about 1,200 r.p.m. Tip speeds up to 800 ft. per second have been used, but it is better for the speed not greatly to exceed 600 ft.

An exhaustive treatise on aviation is that of Mons. G. Eiffel, entitled 'The Resistance of the Air and Aviation' (Eng. Trans. by J. C. Hunsaker, Constable & Co., 42*s.*); the subject is treated as completely as is at present possible, and the work may be studied with advantage by engineers interested in the design and construction of aircraft.

Resistance of Wood to Reversals of Stress.

The limiting resistance of spruce (used for aeroplane wing spars) to alternate tension and compression was proved by experiment to be above 1,600 lbs. per sq. inch, and below 1,970 lbs. per sq. inch. For spruce of this quality the safe range of stress under reversals of bending would be

approximately ± 1,800 lbs. per sq. inch, or one quarter of the ultimate stress, which was found to be 6,800 lbs. per sq. inch. In this respect spruce appears to be at a slight disadvantage compared with mild steel, in which the safe limit of stress under similar circumstances is generally about one-third of the ultimate stress. (*The National Physical Laboratory.*)

Resistance of Tension Members of a Structure to Lateral Vibrations.

In cases in which the tension members of a structure are attached to the pin joints of the frame by means of a screw connection unaccompanied by a universal joint, it has been found that the screws are liable to the development of fatigue cracks at the bottom of the threads, and to ultimate failure.

It has been found that if a universal joint be provided at both ends of a wire subjected to lateral vibrations, a load of one-third of the breaking load will in the case of high class material be borne for an unlimited number of vibrations, but that if only a single joint be used fracture takes place under one-sixth of the breaking load after a few hours. (*The National Physical Laboratory.*)

Rough Prediction of Aeroplane Performance.*

The curves (fig. 63) show how the speed of flight near the ground and at 10,000 ft. depends on the nominal power of the engine and the gross weight of the aeroplane. The ratio of horse-power to weight is used. Regarded as an empirical curve, however, it is found that the performances of the smallest and largest aeroplanes are equally well predicted. Like all generalisations it has its limitations, and a designer who has given special attention to one type will be able to give a closer prediction. On the other hand, any record of performance showing striking departure from the curve may be regarded with mistrust.

The curves illustrate the aerodynamic disadvantages of high speed. It is to be noted that a gross weight of 1,000 lbs. can be carried by an aeroplane of modern type for an expenditure of 25 h.p., but there is no reserve and the pilot could not climb or cope with down currents. His speed would be about 55 m.p.h. The necessary horse-power for the same load could be reduced by providing bigger wings and flying slower, and it has been pointed out by various writers that the most economical design aerodynamically requires speeds of flight below those of commercial utility.

Using the curves of fig. 63, it can be seen that the aerodynamic quality of the aeroplanes at the beginning of the war was not appreciably less than those of the present day, for all give performances indicated by the curve. Progress has followed the development of the aero-motor which now permits the use of one horse-power for each 8 lbs. of gross weight, whereas in 1914 the same power was yoked to a load of nearly 25 lbs. The most recent of our large aeroplanes carries nearly 20 lbs. per horse-power, and its performance on speed and ceiling is not greatly different from that of the 'Avro' or B.E.2C. It is now accepted as a fundamental truth that the weight-carrying aeroplane cannot be the fast aeroplane, and the rate at which the horse-power curve is rising shows that the conditions become progressively worse. It needs little imagination to see that increase of top speed beyond present limits will not easily be attained, and that no great increase such as that during the war period is within the limits of reasonable expectation. The table given below is instructive in the economics of aeroplane carriage.

Speed of flight, m.p.h.	Gross weight, lbs. per h.p.	Percentage of gross weight available for passengers and merchandise.
60	38	45
70	35	44
80	28	41
90	21	38
100	17	33
110	13	27
120	10	20
130	8	10

It will be seen that the choice lies between a time of six hours and a useful load of 40 per cent. of the total and a time of four hours and 20 per cent. of load useful. Only the particular need of the moment can determine a final choice. (*Leonard Bairstow, F.R.S.*)

* Extract from the Wilbur-Wright Lecture 1919, 'Progress in Aviation in the War Period,' delivered before the Royal Aeronautical Society by Leonard Bairstow, F.R.S., O.B.E.

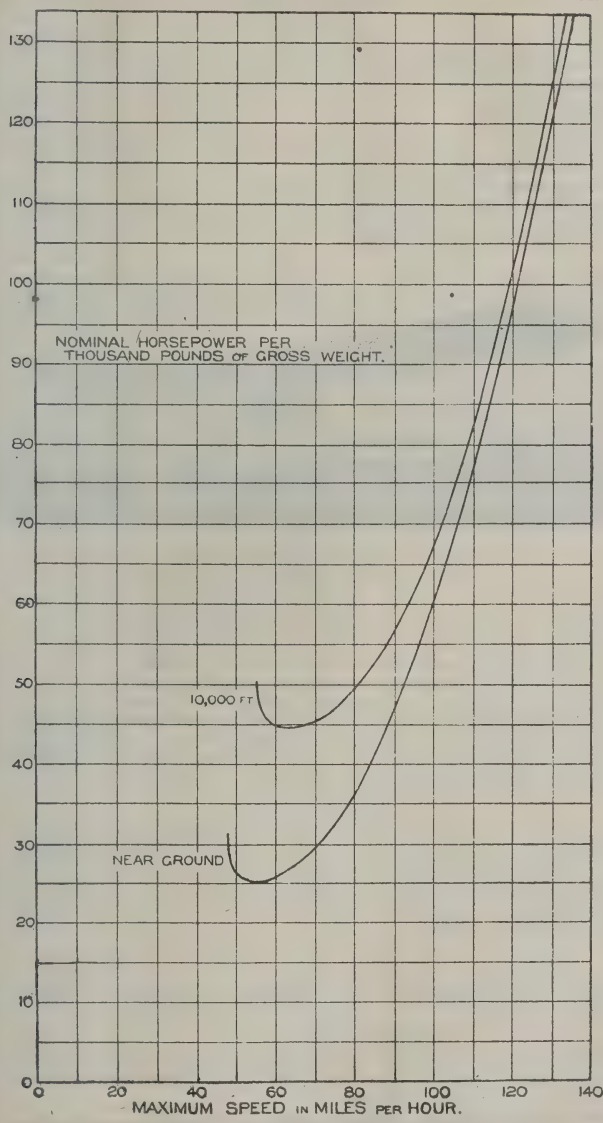


FIG. 63.—Curves showing how speed varies with ratio of H.P. to gross weight.

Notable Flights.

Atlantic Flights.

The first crossing was made by the seaplane N.C.4, piloted by Commander Read, which accomplished the journey from Newfoundland to Plymouth in three stages, as follows :—

Newfoundland to Azores	1,381 miles	15 hours	19 mins.
Azores to Lisbon	1,034 ,,	9 ,,	42 ,,
Lisbon to Plymouth	895 ,,	5 ,,	1 ,,

The gallant attempt made on May 18, 1919, by Mr. H. G. Hawker and Lieut. Commander Grieve in a single-engine Sopwith machine failed, the aviators being picked up 1,000 miles from land by the small ship *Mary*.

Three weeks later the direct crossing was successfully accomplished from St. John's to Galway Bay, Ireland, by a Vickers-Vimy double-engined (Rolls-Royce) aeroplane (fig. 64), piloted by Captain John Alcock, D.F.C., and navigated by Lieut. Arthur Whitten Brown. The 1900 nautical miles was compassed in 15 hours 57 minutes.



FIG. 64.—Atlantic Flight: Vickers-Vimy Rolls-Royce Aeroplane.
(Now in Victoria and Albert Museum.)

Length 47 ft.	Carried 867 galls. of petrol.
Span 70 ft.	(Used two-thirds of this.)
H.P. 700 (2 Eagle Rolls-Royce of 350 h.p.)	Cruising speed 80 m.p.h.
Total weight 16,000 lbs.	Maximum speed 105 m.p.h.
Time crossing Atlantic 15 hrs. 57 mins.	Climbs to 25,000 ft.

For this fine performance, the airmen were knighted by His Majesty the King.

In the following month, a British airship, R34, starting on July 2, 1919, from England, crossed the Atlantic to Newfoundland, and went on to New York, whence it returned direct to its starting point, arriving on July 13. This flight was remarkable for the fact that the airship was, during the whole of its six-thousand-mile trip, in wireless communication with the Air Ministry in London. Moreover, it was furnished with continuous information as to weather conditions ahead of it, and was able to modify its route in order to avoid storm-swept areas.

Anglo-Australian Flight.

The Australian Government prize of 10,000*l.* for a flight from England to Australia, in a heavier-than-air machine of British construction, was also won by a Vickers-Vimy aeroplane, piloted by Captain Ross Smith, accompanied by his brother, Lieut. K. M. Smith, and two sergeant mechanics. This wonderful journey, commenced on November 12, 1919, was completed in twenty-eight days, the total flying time being only 124 hours. This makes it evident that by organising relays of machines it would be possible to provide a mail service to Australia with a transit time of less than one week.

First Flight across Asia.

Lieuts. Ferrarin and Masiero started from Rome on February 14, 1920, and flew across Asia to Japan, arriving at Tokyo on May 31. Intermediate stops were made at the under-mentioned cities: Adalia, Bagdad, Bunder Abbas, Delhi, Calcutta, Rangoon, Bangkok, Canton, Tsingtao, Peking, Seoul, and Osaka.

London to Turin, Direct Flight.

On May 31, 1920, Mr. Bert Hinkler, an Australian pilot, left Croydon at 4.50 A.M., flying a Baby Avro with a 35 h.p. Green engine—which engine had been built in 1910.

Passing over Dover, Paris, Lyons, and clearing the Alps, he arrived, without an intermediate stop, at Turin at 2.20 P.M. on the same day.

Six hundred and fifty miles in 9½ hours on twenty gallons of petrol.

For fuel economy this flight brings the aeroplane into competition with the motor-car.

Aerial Derby.

The 1921 Aerial Derby was won by Mr. J. H. James on a Bamel aeroplane built by The Gloucester Aircraft Company with a 450 h.p. Napier 'Lion' engine. The speed of the winner for the two-circuit 200 miles route worked out at 163·34 m.p.h.

Mr. James also won the Handicap Race, being the last competitor to start and the first to finish.

British Speed Records.

At Martlesham Heath, July 17, 1920, Mr. R. L. Tait Cox in a Nieuport Goshawk (300 h.p. A.B.C. Dragonfly engine) attained a speed of 167·5 m.p.h.

In December 1921, at Martlesham Heath, Mr. J. H. James achieved a maximum speed of 212 m.p.h. over the measured kilometre, and averaged in four trials 196 m.p.h. This was accomplished on the same Bamel machine, with Napier 'Lion' engine, which had won the Aerial Derby, and when passed by the authorities, will constitute a world speed record.

Civil Aviation.

Half-yearly reports on the progress of civil aviation are issued by the Air Ministry in March and September.

The reports for 1921 deal with improvements and developments in ground organisation and night-flying arrangements, particularly on the Continental route.

The safety of the machines and passengers is being carefully safeguarded.

All British machines operating on cross-Channel routes are now fitted with wireless apparatus, and this will be made compulsory for all machines capable of carrying ten or more passengers.

Both Croydon and Pulham air stations have now been provided with wireless direction-finding stations which, working in conjunction, enable an aircraft to 'fix' its exact position by means of the junction of the bearings obtained simultaneously by the two stations.

In addition, experiments are being carried out with satisfactory results into the possibilities of using radio-telephony as a means of directing an aircraft into an aerodrome when it is invisible to the pilot owing to fog or mist.

Some success has also been obtained in using pyrotechnic signals for this purpose, and a system for colouring the beam of a high-power searchlight is being investigated.

Arrangements are now being completed by which the Croydon-Lympne air route could be opened at short notice for night flying; these include the provision of an automatic apparatus placed mid-way, to indicate by a system of coloured lights the strength and direction of the wind prevailing at any given moment.

It has been decided that, while a monopoly is undesirable, unrestricted competition would tend to prevent the development of air routes on a commercial basis.

Three companies, Handley Page Transport, Limited, Instone Air Line, Limited, and Daimler Hire, Limited, have been chosen to operate the London-Paris routes, with extensions, if desired, to Manchester and Basle or Zurich.

One company only, which the Aerial Route Syndicate, Limited, proposes to establish, has been selected to operate the London-Brussels route, on which considerably less air traffic is at present anticipated.

The Air Council reserves the right to approve at a later date other firms for the Paris-Brussels routes. The London-Amsterdam route, the prospects of which appear less promising, is, for the present, in abeyance.

During the six months ending September 30, 1921, the number of departures and arrivals of British aircraft to and from the Continent amounted to 671, and the passengers carried in British machines on the cross-Channel routes to 4,006.

The total machine mileage for British civil aviation was 321,500 miles, the number of passengers carried 31,853, and the weight of goods 9 tons. Imports by air amounted to £206,357 and exports to £110,400.

Notes on Airships for Commercial Purposes.

(Published by the Air Ministry.)

(*Abstract.*)

The airship is essentially a long-distance weight-carrying craft as compared with the short-distance high-speed aeroplane. An airship with a speed of 77·6 m.p.h. can be considered slow only relatively to the aeroplane, being fast in comparison with land and sea methods of transport.

An airship is not liable to forced descent in case of engine failure, as is the aeroplane. Quite large repairs to engines, such as the changing of a cylinder, are possible in an airship.

The airship can be used over land of a wooden or broken nature, such as to be unsuitable for the landing of aeroplanes, and on journeys involving non-stop flights of 1,000 miles and upwards. It can be used in flying at night or in fog or clouds, and the great lift permits of much more comfortable accommodation being provided than is possible in an aeroplane. In the case of a rigid airship, for example, a walk of 400 or 500 ft. may be taken along the keel.

Official statistics show that only one airship has been lost in this country owing to catching fire in the air, although 83,360 hours have been flown and over 2½ million miles covered during the war. In the case referred to the flight was an experimental one with a new type of ship, and the cause has since been ascertained and eliminated.

For commercial purposes large rigid airship stations should be established at distances of 2,000–3,000 miles apart, mainly for trans-oceanic traffic, while the aeroplane would be used for bringing passengers and merchandise to these from the neighbouring countries.

Although airships are generally considered to be fair-weather craft, up to the end of November there were only nine days in 1918 when no airship flight took place in the British Isles—which are notorious for possessing almost the worst weather conditions of any country in the world.

The latest German rigid airship has a disposable lift available for crew, fuel, merchandise, etc., of over 38 tons, which gives her a theoretical endurance (if all the available lift be employed in carrying petrol) of 177·5 hours (7 days) at a cruising speed of 45 m.p.h.—the maximum speed being 77·6 m.p.h.—during which 8,000 miles would be covered.

An airship has been successfully moored out for six weeks in a perfectly open expanse to a specially designed mast. Only two or three men are required to look after the ship, and winds of up to 52 m.p.h. have been ridden out without any damage resulting.

A system of recovering water-ballast during flight would obviate waste of hydrogen by preventing the ship becoming 'light,' owing to the consumption of fuel during a long voyage.

Increase in size of aeroplanes brings many difficulties in its train with no compensating improvement in efficiency, but increase in size of airships results in a reduction of the difficulties experienced at present, and gives improved efficiency.

Progress in Heavier-than-Air (H/A) and Lighter-than-Air (L/A) Machines: 1914–1918.

In 1914, the average endurance of a German rigid at cruising speed was under one day, and the maximum full speed about 50 m.h.p. In 1918 (German L.70 class, 2,195,000 cub. ft. capacity), the endurance at 45 m.p.h. has risen to 177·5 hours (7·4 days) and the maximum full speed to 77 m.p.h. The ceiling has correspondingly increased from 6,000 ft. to 23,000 ft. The British R.38 class (2,720,000 cub. ft. capacity) has an estimated cruising endurance at 45 m.p.h. of 211 hours (8·8 days), 54 hours greater than the German L.70 class.

The D.H.10A has been taken as the best all-round machine in August, 1918. Although the two-engined Handley-Page and Caproni have greater endurance and weight-carrying capacity, their all-round efficiency appears inferior to the D.H.10A. The Handley-Page V. gives promise of having a slightly better performance than the D.H.10A, but this machine is still in the experimental stage and reliable performance figures are not available.

Tables 1 and 2 give the progress in L/A and H/A since 1914. Table 3 shows the difference in performance between corresponding L/A and H/A craft of 1918.

Table 1. L/A.

—	August, 1914. Average figure for German Naval Zepp.	August, 1918. German L.70.	Progress.
Maximum speed at 10,000 ft.	50 m.p.h.	77·6 m.p.h.	55%
Endurance at 45 m.p.h.	20 hours	177·5 hours (7·4 days)	787·5%
Total lift.	30 tons	66·64 tons	122%
Disposable lift	8·5 tons	38·84 tons	357%
Efficiency ratio	27·3%	58·3%	113·5%
Static ceiling	6,000 ft.	21,000 ft.	250%
Indicated H.P.	800	2,100	162·5%

TABLE 2. H/A.

—	August, 1914. Avro.	August, 1918. D.H.10A.	Progress.
Speed at 10,000 ft.	70 m.p.h.	125 m.p.h.	78·3%
Endurance	4 hours	10 hours	150%
Total weight loaded	·737 tons	4·02 tons	445%
Useful load	·268 tons	1·45 tons	445%
Efficiency ratio	36·3%	36·1%	0·55% (Decrease)
Ceiling	14,000 ft.	22,500 ft.	35·7%
Indicated H.P.	80	810	913%

	August, 1914. Avro.	August, 1918. Handley-Page.	Progress.
Speed at 10,000 ft.	70 m.p.h.	85 m.p.h.	21·4%
Endurance	4 hours	12·5 hours	212·5%
Total weight loaded	·737 tons	5·97 tons	524%
Useful load	·268 tons	2·17 tons	709%
Efficiency ratio	36·3%	36·4%	0·28%
Ceiling	14,000 ft.	15,000 ft.	7·1%
Indicated H.P.	80	720	800%

TABLE 3. COMPARISON OF EXISTING H/A & L/A MACHINES.

August, 1918.	H/A. D.H.10A.	L/A. German L.70.	Percentage Superiority.
Speed at 10,000 ft.	125 m.p.h.	77·6 m.p.h.	H/A. 61·1%
Cruising endurance	14 hours	177·5 hours	L/A. 1,167%
Total lift (=weight loaded)	4·02 tons	66·64 tons	L/A. 1,557%
Disposable lift (=useful load)	1·45 tons	33·84 tons	L/A. 2,580%
Efficiency ratio	36·1%	58·3%	L/A. 61·5%
Ceiling	22,500 ft.	21,000 ft.	H/A. 7·1%
Indicated H.P.	810	2,100	L/A. 159%

It will be seen that at the present time the largest rigids in commission have over 10 times the total lift of the corresponding H/A, and that the disposable lift is about 25 times greater.

The proportion of useful lift compared to gross lift is much higher in airships than in aeroplanes. An approximate figure for an aeroplane of average engine power is $\frac{1}{3}$, while in a rigid the useful lift available for fuel, crew, passengers, freight, etc., is well over $\frac{1}{2}$. In the case of L. 70 the figure is 58·3 per cent., although this ship is the most heavily engined and fastest airship yet built.

It cannot be too strongly emphasised that many of the advantages apparently possessed by H/A at the present time result from their relatively small lift. Thus, an aeroplane of 60 tons total lift, if found to be possible at all, would certainly be very much less convenient to land and handle on the ground than aeroplanes of existing sizes, and would require overall dimensions about twice those of the largest existing machines.

It is important to note that in H/A there is no automatic improvement in efficiency resulting from greater dimensions. In L/A, on the other hand, such an automatic improvement takes place to a very marked degree. The reason for this difference is as follows:—In similar H/A machines of different dimensions, the total lift, air resistance, and b.h.p.—other things being equal—all very nearly as the plane areas, i.e. as the square of the linear dimensions.

It follows that the ratio $\frac{\text{weight of machinery}}{\text{total lift}}$ does not vary much with size of machine. The ratio $\frac{\text{weight of structure}}{\text{total lift}}$ tends to increase with size of machine. Unit area of wing surface can only exert a definite lifting effect, and as the machine increases in size it is necessary to increase proportionally the weight of each preceding unit area of wing surface to make the machine proportionally strong. A point is finally reached where every additional unit of wing surface results in as much increased weight as its lifting effect, so that any further increase in size will involve a definite falling off in the total lifting capacity of the machine. A further small increase in size can be effected by increasing the number of planes; but, owing to the inefficiency of middle plane surfaces, due to the blanketing effect of the top and bottom planes, the resulting gain in endurance will not be large, and it will only be effected at the price of a loss in efficiency.

A 10,000,000 cub. ft. capacity rigid has five times the lift of the present 2,000,000 cub. ft. capacity rigid, but the length of the former is only 1·7 times greater, and therefore the weight of the structure only five times greater $(1{\cdot}7)^3$.—i.e. the weight of the structure is directly proportional to the total lift.

This theoretical property of structure may, to a certain extent, be modified by the material used. Thus, for ships of 2,000,000 to 4,000,000 cub. ft. capacity duralumin is the most suitable material for the hull structure, while for ships of 8,000,000 to 10,000,000 cub. ft. capacity a saving in weight can be effected by the use of steel.

In H/A machines, therefore, all-round efficiency, as measured by the ratio of $\frac{\text{disposable lift}}{\text{total lift}}$ tends to decrease with greater dimensions. Greater efficiency will, therefore, not result from increase in size, but, on the contrary, great increase in size will not be attainable until greater efficiency has been first obtained by progress in design and materials.

In L/A, the total lift varies as the cube of the linear dimensions, while the air resistance and b.h.p.—other things being equal—vary as the square of the linear dimensions. Hence the ratio $\frac{\text{weight of machinery}}{\text{total lift}}$ decreases automatically. Values for this 'coefficient of tractive resistance' for airships are given in Table 4.

TABLE 4.

Gross Lift of Rigid.	Coefficient of Tractive Resistance at		
	45 m.p.h.	60 m.p.h.	80 m.p.h.
	Per cent.	Per cent.	Per cent.
60 tons	1·9	3·8	7·7
80 „	1·7	3·4	6·7
100 „	1·5	3·0	6·0
150 „	1·3	2·5	5·0
200 „	1·1	2·2	4·4
250 „	1·0	2·0	4·0
300 „	0·9	1·8	3·6

It will be seen that they vary from ·9 per cent. for a large rigid at 45 m.p.h. to 7·7 per cent. for a small rigid at 80 m.p.h., compared with 15 per cent., which may be taken as an average figure for H/A craft.

It will further be seen that as the size of the rigid increases, the coefficient of tractive resistance decreases to a marked extent. With a proportionate increase in h.p., it is easier and proportionately more economical for a 10,000,000 cub. ft. capacity rigid to fly at 80 m.p.h. than for a 2,000,000 cub. ft. capacity rigid to fly at 60 m.p.h. In the case of H/A craft, however, increase in size effects no decrease in the coefficient of tractive resistance.

The figures for tractive resistance are based on the German L.33 streamline form, and from the experimental results already obtained by the National Physical Laboratory it is reasonably certain that a more efficient streamline form can be obtained which will appreciably reduce these figures.

As the ratio $\frac{\text{weight of structure}}{\text{total lift}}$ is, in airships, fairly constant, it follows that the ratio $\frac{\text{disposable lift}}{\text{total lift}}$ increases with dimensions. The natural tendency will, therefore, be towards larger airships, in order to secure the benefit of the resulting gain in efficiency.

A further point of great importance emerges from the above. As the total lift varies as $(\text{dimensions})^3$ in H/A, and as $(\text{dimensions})^3$ in L/A, increase in total lift is secured in the latter with less increase in dimensions than in the former. Thus, to secure five times the total lift we must increase the dimensions 124 per cent. in H/A and only 70 per cent. in L/A.

If total lift is increased indefinitely in both types, the dimensions of the H/A will, therefore, ultimately pass those of L/A, when almost the last remaining advantage of the former over the latter will disappear.

The proportion of useful lift compared to gross lift is much higher in airships than in aeroplanes. An approximate figure for an aeroplane of average engine power is 33 per cent., while in a rigid the useful lift available for fuel, crew, passengers, freight, etc. is well over 50 per cent. In the case of the German L.70 the figure is 58·3 per cent., as has already been mentioned.

It is concluded that the outstanding characteristics of H/A will remain as at present: high speed, handiness, moderate lift, independence of all weather conditions except the worst.

As regards L/A, the functions now performed by the smaller airships will be usurped more and more by H/A. Airships may be expected to develop in the direction of increased size to a limit

which is not yet in view. The outstanding characteristics of L/A will be reasonably high speed very long endurance, great weight-carrying capacity for freight, stores, passengers, etc.

The line of policy to be adopted is to develop the aeroplane for transport over distances under say, 500–800 miles, and the rigid airship for trans-oceanic and possibly trans-continental flight of over this length.

Table 5 shows the approximate dimensions of a series of airships similar in form to R.33.

TABLE 5.

Capacity in cubic ft.	Gross lift in tons.	Length.	Diameter.
2,000,000	60·7	643′	79′
3,000,000	91·1	736′	90·4′
4,000,000	121·4	810	99·5′
5,000,000	151·8	872′	107·2′
6,000,000	182·2	927′	113·9′
7,000,000	212·5	976′	119·9′
8,000,000	242·8	1021′	125·4′
9,000,000	273·3	1061′	130·4′
10,000,000	303·6	1100′	135·1′

It will be seen that although a 10,000,000 cub. ft. capacity rigid has five times the gross lift and over five times the disposable lift of the present 2,000,000 cub. ft. capacity rigid, the dimensions of the large ship are only 1·7 times greater, and it could be docked in a shed of no more than one-third larger dimensions than those at Killeagh, i.e. 1,150′ long × 160′ high × 180′ wide. compared with 850′ long × 130′ high × 150′ wide, for Killeagh.

As regards constructional sheds, the most economical method of accommodating such large airships would perhaps be to lengthen existing constructiona sheds, which are sufficiently wide, to at least 1,150 ft. long (present length 700 ft.), and lower the floors as necessary to secure the required height. A somewhat similar course could probably be taken with existing housing sheds.

If the endurance of a rigid is increased to a sufficient extent, it will be possible to carry out flights with a regularity comparable to that maintained by surface craft. The range is almost unlimited, and the weight-carrying capacity large. A 10,000,000 cub. ft. capacity rigid will have a disposable lift of over 200 tons, which is available for petrol, ballast, crew, passengers, and freight.

There is no other type of vessel which is so efficient.

With a rigid of about 10,000,000 cub. ft. capacity, and endurance of approximately three weeks at 40 to 45 m.p.h., with a maximum speed of 70 to 80 m.p.h., a ceiling of some 30,000 ft. can be obtained, and a maximum range of over 20,000 miles.

Standard Data for Airship Calculations.

(1) *Lift of Hydrogen* to be taken as 68 lbs. per 1,000 cu. ft. of gas space at sea level.
The variation of lift with height to be taken as proportional to the density of the 'Standard Atmosphere.'

(2) *The Volume of Gas* assumed in lift calculations to be as follows:—

For rigids, the total volume of the gasbags when filled with a slight pressure not exceeding 5 mm. at the bottom.

For non-rigids, designed volume of the envelope with ballonets empty, plus an allowance of 5 per cent. for stretch.

(3) *Gross Lift*, at sea level, is defined as the volume, determined as in para. (2), multiplied by the lift per unit volume, as given in para (1).

(4) *Standard Flying Height* to be taken as 2,000 ft. above sea level in the case of rigid airships, and 1,000 ft. above sea level in the case of non-rigid airships.

Values of atmospheric density, pressure, and temperature at sea level and standard flying height are :—

	Density. Lbs. per cu. ft.	Relative Density. Per cent.	Temperature. ° C. Abs.	Pressure. Mb.	Pressure. Lbs. per sq. in.
Sea level	·0782	100·0	282·0	1,014·0	14·70
1,000 ft. above sea level .	·0757	96·8	281·0	978·0	14·18
2,000 ft. above sea level .	·0733	93·8	279·7	943·4	13·68

(5) *Fixed Weights* are defined as all constant and non-consumable weights which an airship would carry under all conditions of service, including :—

Structure.
Fabric.
Cars.
Machinery—including liquids in the system and radiators (not petrol or oil in service tanks or float tanks, or water in radiator headers intended as a reserve supply).
Gun mountings (ex guns and ammunition.)
Wireless telegraphy equipment.
Approved navigating equipment (including instruments).
Approved allowance of handling and mooring ropes, etc.
Internal gassing hose.
All fixed tanks.
All pipe systems.
All electrical systems.

In the case of commercial ships, all passenger cars and car fittings should be taken as fixed weights.

(6) *Disposable Weights* are defined as all weights other than fixed weights, and therefore include :—

Crew and effects.
Food and fresh water.
All water ballast.
All fuel and oil.
All reserve water for radiators.
All slip containers.
All bedding.
Parachutes.
Life-saving jackets.
Oxygen apparatus.
Spares and tools.
Water ballast bags and all other approved gear and equipment not included in the fixed weights.
Passengers, merchandise, guns, ammunition, and bombs.

(7) *Dischargeable Weights* are defined as :—

All fuel and oil except reserve as defined in para. (9).
All ballast except emergency as defined in para. (9).
All slip containers (except such as may be necessary to contain reserve fuel, oil, and ballast).
Bedding.
All other loads which may have been raised by the ' Useful Lift ' (see para. (9)).

(8) *Maximum Static Height or ' Static Ceiling '* to be calculated on the following assumptions :—

(*a*) The ship to be lightened by removal of all dischargeable weights (para. 7), and no others.
(*b*) All other disposable weights to be carried in accordance with approved complement and equipment (see para. (9)).
(*c*) The variation of lift with height to be taken in accordance with the standard atmosphere, as in para (1).

(9) *Useful Lift* is defined as the lift available for :—

Fuel and oil,
Passengers and merchandise.
Food and drinking water,
Guns, ammunition, and bombs,

and to be determined by deducting from the gross lift at sea level the following :—

All fixed weights.
Ballast necessary to reach the standard flying height, amounting to :—
For non-rigids . . . 3·2 per cent. of gross lift, (at 68 lbs. per 1,000 cu. ft.).
For rigids . . . 6·2 " " " "
(See para. 4.)
Emergency water ballast, amounting to 3 per cent. of the gross lift at sea level.
Reserve fuel and oil for two hours' flight at normal full speed at standard flying height.
All tanks and containers not already included in the fixed weights.
Approved reserve of water for radiators.
Crew : Approved complement, the weight of each member being taken as 180 lbs., including clothing and personal kit.

All approved spares and tools.

Approved equipment:

Bedding.	Oxygen apparatus.
Parachutes.	Fire extinguishers.
Life-saving appliances.	Emergency ration (iron ration).

All other approved disposable equipment, e.g. First Aid equipment, which would be taken on board at commencement of flight under all conditions of service.

(10) *Speed* to be stated in knots, i.e. nautical miles (6,080 ft.) per hour, for all classes.

Speeds in all cases to be calculated under the standard atmospheric conditions corresponding to standard flying height, as laid down in para. 4.
Maximum speed.
Normal full speed, to be defined as 90 per cent. max. speed.
Cruising speed, to be defined as 80 per cent. max. speed.
Comparison speed. 40 knots.

(11) *Endurance* to be calculated on the following assumptions :—

The whole of the useful lift (para. 9) to be employed for fuel, oil, food, and drinking water.
Rate of fuel and oil consumption to be the approved figure for the ship at the speed in question and at the standard flying height (para. 4), with corresponding atmospheric conditions.
Rate of consumption of food and fresh water to be taken as 10 lbs. per day for each member of the approved complement of crew ; that is $a_s \frac{\text{complement} \times 10 \text{ lbs.}}{24}$ per hour.

Thus if ' A ' be the total fuel and oil consumption in lbs. per hour at a given speed, and if ' B ' be the consumption of food and fresh water in lbs. per hour. The endurance in hours at that speed $= \frac{\text{Useful Lift.}}{A + B}$

High-flying Oxygen Breathing Apparatus.

High-pressure Apparatus

In this apparatus the oxygen in gaseous form is stored in a specially constructed seamless cold-drawn steel tube charged to a pressure of 2,250 lbs. per sq. in. (150 atmospheres).

The tubes were produced during the war in two sizes, one capable of holding 500 litres at the above-mentioned pressure and the other 300 litres. They are extremely light, weighing 4 lbs. and 6¾ lbs. respectively for the smaller and larger sizes.

The tubes before being passed by the Aeronautical Inspection Department are subjected to an internal pressure test of 3,750 lbs. per sq. in., being inserted in suitable water-jackets for measuring any increase in volume. The cylinders are rejected if the permanent increase of volume (after the hydraulic pressure is removed) exceeds the increase of volume under pressure by 20 per cent. Two per cent. of each batch of tubes after manufacture are also subjected to a proof pressure test to destruction, and if the bursting pressure is less than 4,250 lbs. per sq. in. further samples are selected and treated in like manner, and if these fail under destruction test the whole batch is rejected. They may, however, be heat-treated again.

The final test (flattening test) is carried out on the uninjured portion of those selected from batches in previous destruction test, and the cylinders are flattened until the inner surfaces are 1 in. apart. If cracking results from this treatment, as before, the rest of the batch are scrapped, although they may be re-heat treated.

In the necks of the cylinders are sweated valves with forged bronze bodies and parallel-threaded shanks, with screwed inlet and outlet connections, each valve weighing approximately 9 ozs. All valves are tested hydraulically to 2,250 lbs. per sq. in. The cylinders when valved are subjected to a final compressed air test at about 1,000 lbs. and immersed in water to ensure a perfect joint between cylinder and valve.

The cylinders are fixed in the machines in convenient positions by means of specially constructed spring clips, and from the cylinders the gas is led through fine copper tubing some 10 ft. in length to the oxygen regulator, which performs the double function of reducing the gas from high to low breathing pressure and at the same time regulating the flow to the airmen.

The regulator consists in the main of a pressure gauge for indicating the pressure of gas as received from the cylinders already described; a reducing valve for reducing the pressure of gas from the pressure in the cylinder to a normal breathing pressure of between 1 to 2 atmospheres absolute; a control valve for regulating the delivery according to the height of the aeroplane and a flow indicator to indicate that gas is flowing.

An improved indicator has a graduated tube introduced which has the additional function of recording the exact rate of flow of gas.

There are two distinct types of control valve, an automatic control by means of a diaphragm valve in one model and a hand-controlled valve in the other model. In aerial combat the hand-controlled instrument was preferred, whereas on long-distance flights the automatic valve was favoured. In the former case the airmen were able to inhale any quantity and cut off at leisure if otherwise engaged, and in the latter case, where long duration was necessary, the oxygen was consumed economically.

The low-pressure gas after leaving the regulator passes along a flexible tube to the breathing mask, which in the latest type is embodied in the pilot's headgear, being readily detachable by means of a separate strap on the main portion of the helmet. The pilot inhales the oxygen by means of a pipe-mouthpiece which is swivelled and can be easily discarded.

The 300-litre cylinder at altitudes between 10,000 ft. and 15,000 ft. is capable of supplying oxygen at an average rate of flow of 1·35 litre per minute continuously for approximately 3½ hours, but between altitudes of 15,000 ft. and 20,000 ft., where an increased rate of flow is necessary, owing to decrease in atmospheric pressure, the same quantity of gas at an average rate of flow of 2·55 litres per minute would only be available for approximately two hours.

Liquid Oxygen Breathing Apparatus.

In this type of apparatus the liquid oxygen is first placed in a vaporiser, which has an inner spherical chamber varying in sizes to accommodate from 1 to 5 litres, according to the length of flight and altitude.

The vaporiser embodies the ordinary vacuum flask principle where an inner and outer vessel are constructed and the space between the two rarefied down to about 1/1000 mm. vacuum.

A small quantity of specially selected charcoal is placed in a tube in the inner vessel to absorb any moisture. The ends of the tube which terminate in the vacuum space are covered with gauze. The vaporisers vary in weight, the largest, of 5 litres capacity, weighing approximately 12 lbs. when empty and capable of holding 12 lbs. of liquid oxygen when charged.

The vaporiser thus consists of nner and outer vessels, neck, and charcoal receptacle, and in the neck is a syphon tube which passes into the body of the vessel. The oxygen in liquid form passes up this tube into the heating and evaporation coils, which are bent round the neck in the form of solid drawn copper tubes. The oxygen after leaving these tubes passes into a flash boiler which, not being evacuated, is at a much higher temperature than the liquid oxygen, and in consequence the latter is converted into the gaseous state.

To cause additional radiating surface a number of blind tubes are added underneath the flash boiler.

The oxygen then passes along to the pressure gauge which indicates the pressure of the oxygen from the vaporiser, and is graduated to accommodate pressures from 0 to 25 lbs. per sq. in.

From experiments it has been ascertained that the best results are obtained when the oxygen passes from the vaporiser at a pressure of about 5 lbs. per sq. in.

The oxygen from the vaporiser passes by means of a rubber connection to the control fitting, the function of which is to control the supply of oxygen to the airmen. The fitting consists simply of control valve and pressure release valve, which is used to indicate the quantity of oxygen passing to the airmen's breathing masks. The flow of oxygen is indicated by the impact of a jet of gas upon a pivoted vane provided with a pointer moving over a dial. The calibration of the flowmeter is from 0 to 6 litres per minute and the quantities of oxygen required for airmen at varying altitudes are as given in the description of the high-pressure breathing apparatus.

Liquid oxygen storage vessels known as containers, and capable of holding approximately 27 litres of the liquid are also specially constructed on the vacuum principle and used for charging the vaporisers. The container forms a convenient means of storing the liquid, and owing to the very high vacuum which is created between the inner and outer vessels the loss of liquid oxygen due to evaporation is brought to an absolute minimum.

The liquid oxygen apparatus has one great advantage over the high-pressure type in that there is no danger in connection with the use thereof in serial warfare, owing to high-pressure gas being non-existent. In the case of the gaseous oxygen apparatus, the very high pressure to which the steel tubes are charged creates a source of danger which frequently results in damage to pilot and machine when the tubes are struck by enemy bullets.

Liquid Oxygen Plant.

The plant as manufactured by Messrs. Société L'Air Liquide, Boulogne-sur-Seine, Paris, was designed for the purpose of mounting on a railway truck and capable of delivering at least 15 litres of liquid oxygen per hour with 96 per cent. purity. The plant, fig. 65, works on the well-known Claude principle and is made up of the following components :—

1. Petrol engine to supply motive power (the particular engine used was the 100 h.p. Ricardo engine as supplied by the Mechanical Warfare Department).

2. Air compressor.

3. Water separator.

4. Purifier and drier to decarbonise the air.

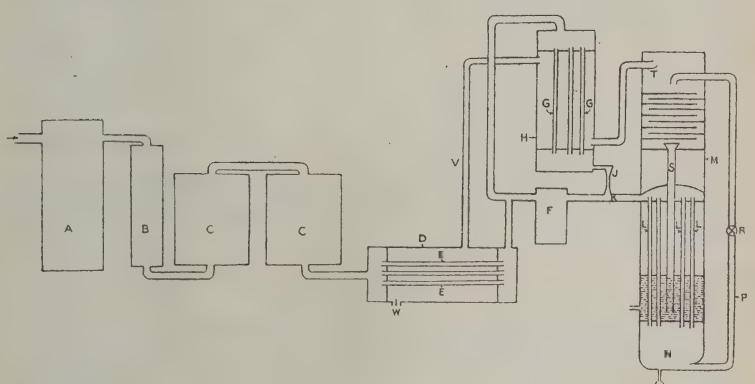


FIG. 65.—Diagram illustrating Liquid Oxygen Plant.

5. Liquefaction and rectification column, each in itself comprises :—(a) A temperature exchanger to cool the compressed air. (b) An expansion engine which is responsible for rapid drop in temperature. (c) Brake dynamo and rheostat to absorb the power given out by the expansion engine which would be otherwise wasted. (d) Liquefying column embodying rectifier.

The air is first drawn into the two-stage compressor (A), fig. 65, from the atmosphere, and passed at a high pressure of about 45 atmospheres to the separator (B) where moisture absorbed from the injection water in the cylinders of the compressor is removed. The air then passes successively through the purifying chambers (C, C), filled with caustic soda or caustic potash, rom whence it emerges perfectly dry and free from CO_2.

The dried and purified air passes into the temperature exchanger (D) and traverses the nest of small tubes (E) therein, which are cooled by expanded and cold gas flowing in the opposite direction. The air, considerably cooled, leaves the temperature exchanger, part entering the expansion engine (F) and the other part a nest of tubes (G) in the liquefier (H). The air entering the expansion engine does external work on the piston and is expanded and thus cooled.

The air in the nest of tubes (G) in the liquefier is cooled by expanded and cold gas flowing in the opposite direction, and, under the continued action of cooling and pressure, liquefies, and, passing through the needle valve (J), mixes in the pipe (K) with the cold and expanded air issuing from the expansion engine. The cold air and the liquid air enter the top of another nest of tubes (L) called the vaporiser, which is contained in the rectification column (M). On leaving these tubes the mixture of gas and liquid enters a sump (N) at the bottom of the column, and from thence rises through the pipe (P) and regulating valve (R) to the top of the column. The top portion of the rectifying column contains a series of staggered and perforated trays. The liquid in the mixture descends through the trays and enters the vaporiser by means of the pipe (S). The gas in the mixture, which contains a large quantity of nitrogen, since nitrogen has a lower boiling point than oxygen, leaves the top of the column by the pipe (T), entering the

liquefier in the space surrounding the nest of tubes (G), thus cooling the compressed air in the tubes, and from thence enters the temperature exchanger (D) by the pipe (V) in the space surrounding the nest of tubes (E). Thus it fulfils the same function of cooling the compressed air flowing in the opposite direction; it ultimately leaves by the pipe (W) warmed, but still at some degrees below the temperature of the incoming air.

When the liquid air supply is sufficiently large for liquid oxygen to be formed, the valve (R) is slowly closed down, but not completely shut. The exhaust pressure in the expansion engine then rises to the same as that of the liquid air in the nest of tubes (L) in the vaporiser, and causes the surrounding liquid to boil. The gas thus formed, and consisting mainly of nitrogen, rises through the plates, while all the liquid formed rises through the valve (R) and flows into the top of the column; the liquid thus descends through the trays, while the gas ascends and eventually finds its way into the atmosphere through pipe (W). Thus it will be seen that the continued action of progressive refrigeration gradually purifies the liquid in the column (M) and which approaches pure liquid oxygen. In the same manner the gas, passing through pipe (T) and eventually through pipe (W), gradually becomes richer in nitrogen and with greater cooling effect on the oncoming compressed air in the temperature exchanger.

At a test, the first signs of liquid were not observed until two hours after the starting of the plant. It was not possible to analyse the purities of the liquid oxygen directly, although the purity of the evaporated gas was taken. The relative density of the liquid oxygen was found to be approximately 1·11, and the flow of liquid per hour was never less than 17·2 litres.

The original specification called for 18 to 22 litres. At a second test, the liquid was produced one and a half hours after the plant was re-started, and a further two hours realised the total of 43·6 litres, giving an increased average per hour of 21·8 litres.

The compressor was running at an average speed of 245 r.p.m., and in two stages compressed the gas to a maximum of 45 atmospheres.

The expansion engine was running at about 160 r.p.m. and the dynamo for absorbing the waste energy from the expansion engine was able to give an average output of 35 amps. at average pressure of 70 volts. The average purity of the oxygen gas was 92 per cent. and the average purity of oxygen liquid 97 per cent.

Parachutes.

In the early days of the war the use of man-carrying parachutes was confined entirely to kite balloons and proved of very great service in life saving. It is estimated that at least six hundred of our balloon observers effected their escape by this means.

At this very early period on the Western front the parachute then in use was of Spencer manufacture, known as the 'conical' type, afterwards superseded by another Spencer type, known as the 'flat-case' type.

The conical type of parachute consists of a silk body having a flattened hemispherical form with 48 cords attached to its periphery at equal distances and terminating in a single rope. In the centre of the body there is a hole 9 ins. in diameter through which the current of air escapes as the parachute descends. This gives stability to the parachute, which would otherwise swing violently, although the swinging to a certain extent cannot be prevented in any parachute. The parachute and cordage are packed into a conical canvas case which is hung mouth downwards from the basket of the kite balloon.

The flat case type of parachute is another method of packing and consists of a flat case fastened to the side of the basket and into which the parachute is packed.

It was towards the end of the war before parachutes were seriously considered by the Air Ministry for use with aeroplanes. The urgency for aeroplane man-dropping parachutes was so apparent that a special parachute department of the Air Ministry was created. When this section was formed there were in existence several types of parachutes, of which perhaps three stood out prominently from the rest as being very suitably adapted for aeroplanes.

The effect of additional weight and bulk occasioned by the parachute case was found to reduce the speed of the machine by three miles an hour and the climb by 50 feet per minute.

When an aeroplane is under control and flying on a level keel, exit by parachute is comparatively safe provided always that ordinary precautions are taken, but with a machine on fire or completely out of control escape is always problematical and dangerous. The parachute does, however, provide the airman with a chance of saving his life, whereas without this chance he would otherwise go to almost certain death.

The 'Guardian Angel' type of parachute differs from other types in that it has the advantage of a 'positive opening,' which means that the parachute on delivery always leaves its case with its mouth open. This is effected in the A1 type by the following means:—The silk body is pleated until it forms a tube and is then folded down upon a disc of duralumin some 24 inches

in diameter, another similar disc being placed above it. The two discs are separated by a duralumin distance tube of about five inches diameter. The rigging lines (in the form of stout tapes) are folded in fillets below the discs and fastened by boxwood toggles to the periphery of the parachute and the whole is covered and kept weathertight by a waterproof cover. The parachute when folded resembles in outline an ordinary plum cake with a handle on the top, the lower extremities of the tapes, twelve in number, being fastened to a central bolt of duralumin, which is ultimately attached to the harness of the aviator. When the aviator leaves the aeroplane and his weight comes upon the centre bolt the lower portion of the cover comes away, the tapes are pulled out to their full extent, and the parachute body is pulled out over the lower disc in the form of a pleated silken tube 2 ft. in diameter and 14 ft. long filled with air. The parachute, continuing to descend in this condition, cannot fail to expand to its full extent, and this fact gives great confidence to the user. This parachute when packed weighs 30 lbs. and measures 24 ins. in diameter and about 12 ins. through and its cost is considerable, being in the neighbourhood of 100*l*. The rate of descent averages 15 ft. a second for a 12-stone man, a perfectly safe rate of speed. From 80 to 90 yards of silk are required for the manufacture of this parachute. In its latest form the parachute is packed upon a bent wood ring, the duralumin discs done away with, and other modifications made, so that the 'Guardian Angel' D4 type with Taylor-shaped body now weighs 18 lbs., measures 20 ft. across, and is compressible into about 5 ins. in depth. The cost is also proportionately reduced.

Drops from an aeroplane going at 130 miles per hour have been made.

The 'Guardian Angel' parachute invariably opens in the first 100 ft. of falling.

The 'Mears Knapsack' type is a Spencer parachute pleated and folded in such a way as to make its opening a practical certainty.

It has never been known to fail to open, but has no mechanical means of extending its mouth upon delivery. After longitudinal pleating of the body a strip of canvas ending in a length of webbing is placed upon it and is rolled up with the silk in much the form of a snail. The parachute with rigging is then placed in a weather-proof knapsack with the webbing protruding, which is attached to the aeroplane. The knapsack is worn by the aviator either on his back or attached to his harness in front. When the aviator jumps, the reaction between his falling weight and the moving plane causes the webbing to pull the parachute out of the knapsack, and the parachute then unfolds and expands, leaving the strip of canvas and the webbing still attached to the machine. This parachute has many good qualities in that the aviator is well clear of the moving plane before the parachute unfurls and is, therefore, more or less free from the danger of fouling. It is also cheap and easy to pack and comparatively light in weight.

The 'Smiths Salvus' parachute also possesses the good quality of the positive opening like the D4 and also is better adapted for the forward positions in large machines such as Handley-Page or Vickers-Vimy, as the distance of fall before the body inflates can be regulated according to the type of machine it is to be used for. In this parachute the periphery of the body is held to a wooden ring, making it a positive opening type until a certain distance from the machine has been covered, when the periphery is released automatically and the body expanded to its full extent.

The weight of this parachute is about 19 to 20 lbs., the diameter packed, 21 ins., and the depth about 8 to 10 ins. It is a very good and reliable appliance.


SECTION XXXI

FUELS: SOLID, LIQUID, AND GASEOUS

Contributed by Harold Moore, M.Sc.(Tech.), A.I.C., F.C.S.,
Consulting Chemist.

(Author of 'Liquid Fuels for Internal Combustion Engines.')

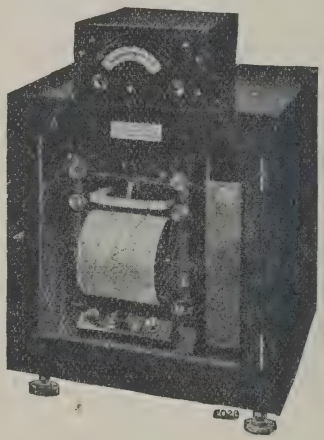Cambridge Electrical CO_2 Instruments



THESE instruments provide an entirely new method of determining the percentage of CO_2 in Flue gases.

NO CHEMICALS

PRACTICALLY NO TIME LAG

NO GLASSWORK

ROBUST and ACCURATE

Write for our descriptive List No. 957a.

The Cambridge and Paul
INSTRUMENT Co Ltd

WORKS:- LONDON & CAMBRIDGE

Head Office & Showrooms:- 45, GROSVENOR PLACE, LONDON, S.W.1.

SECTION XXXI

FUELS: SOLID, LIQUID, AND GASEOUS.

(Contributed by Harold Moore, M.Sc.(Tech.), A.I.C., F.C.S., Consulting Chemist.)

Fuels may be most conveniently classified according to their physical state, as 'solid,' 'liquid,' and 'gaseous.' Another division may also be made into fuels for external combustion (e.g., for boiler firing, for furnaces, etc.), and fuels for internal combustion, that is to say, fuels which are consumed in internal combustion engines.

COMBUSTION.

The heat yielded by burning any fuel is produced by the combination of the carbon, hydrogen, and sulphur present in it with the oxygen of the atmosphere. A little heat may be either liberated or absorbed by the decomposition of the compounds present in the fuel into their elements. When a fuel is burned in a furnace, or in an internal combustion engine, under correct conditions, the carbon burns to form carbon dioxide (CO_2), the hydrogen to form water (H_2O), and the sulphur, which is not usually present in large quantities, to form sulphur dioxide (SO_2). If insufficient air be present the carbon is incompletely burned, and forms to some extent, carbon monoxide (CO), a considerable amount of heat being lost by this reaction taking place. The weight of air theoretically required for complete combustion, may be ascertained by the formula:

$$\text{Air required in lbs.} = 0{\cdot}116\ [C + 3\ (H - \tfrac{1}{8}\ O)]$$

where C, H, and O are the percentages of carbon, hydrogen, and oxygen respectively present in the fuel.

Both the theoretical quantity of air required, and the percentage of carbon dioxide theoretically correct in the flue gas, are dependent upon the ultimate composition of the fuel.

COMPOSITION OF FLUE GASES.

With an average steam coal the theoretical quantity of air for combustion would yield a flue gas containing some 18·5 per cent of carbon dioxide, but if only the calculated quantity of air be admitted to the furnace there is danger of loss of heat by the formation of some carbon monoxide, and if the supply of air be any less than the calculated quantity, a very serious loss is certain to take place for this reason. On the other hand, a slight excess of air over the calculated amount does not result in great loss of heat. It is therefore desirable to allow a slight excess of air. The best working is obtained by endeavouring to maintain a proportion of about 14 per cent. of carbon dioxide in the flue gas.

The thermal value of all combustible mixtures containing only the quantity of air required for the complete combustion of the fuel is, for all practical purposes, a constant, the value of which is 120 British thermal units per cub. foot of air used. Or, conversely, the number of cubic feet of air required for the complete combustion of any fuel equals the calorific value in British thermal units divided by 120. This applies to either gaseous, liquid, or solid fuels, and may be used where the calorific value is given by volume or by weight indifferently.

(*Jas. Dunlop.*)

The majority of methods for the estimation of carbon dioxide are based on the absorption of this gas by potassium hydrate (caustic potash) solution, the process consisting in measuring a volume of flue gas at a definite temperature, and then absorbing the CO_2 by means of a 33 per cent. solution of caustic potash, after which the volume of gas is again measured, the reduction in volume indicating the volume of CO_2 originally present. Many simple forms of chemical apparatus are available for this purpose.

It is frequently desirable in gas analysis to estimate carbon monoxide and oxygen as well as carbon dioxide. Similar apparatus with other absorbent solutions for the respective gases may be used. In the common form of Orsat apparatus, pipettes containing absorption solutions

of caustic potash (for CO_2), acid cuprous chloride (for carbon monoxide), and alkaline pyrogallol (for oxygen) are used. The apparatus also contains a measuring burette and levelling bottle, and is generally built up in a wooden case to make the complete set easily portable.

In some cases it is necessary to estimate methane or other hydrocarbons in gas, in which case means are provided for exploding the gas with oxygen, after which the newly-formed CO_2 may be estimated, and the content of hydrocarbon gases calculated therefrom. Special forms of apparatus, made solely for the object of estimating methane and carbon monoxide, are available.

For the control of combustion, beyond occasional tests of carbon monoxide, the only product which requires frequent estimation is carbon dioxide, and in view of the importance of knowing the carbon dioxide content of flue gases, several forms of continuous recording instruments have been marketed for measuring this gas.

CO_2 Recorders.

The majority of CO_2 recorders depend upon the absorption of CO_2 by caustic potash solution, a definite quantity of flue gas being intermittently measured out, and then the CO_2 absorbed and a record made of the diminution of volume, the chart being adjusted to read in volume-percentages of CO_2 present in the flue gas.

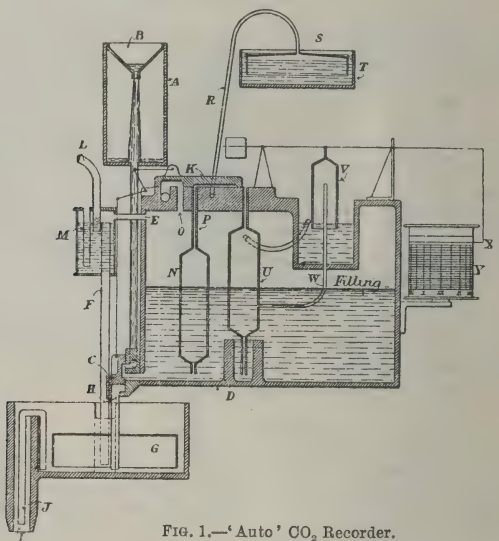


FIG. 1.—'Auto' CO_2 Recorder.

The method employed in the 'W.R.' Patent CO_2 Recorder depends on the difference of pressure generated on the two sides of a porous pot, one side of which is exposed to flue gas whilst the other contains caustic potash, which absorbs the incoming CO_2.

The Cambridge Scientific Instrument Company have recently marketed a recorder the action of which depends upon the greater heat conductivity of gas containing CO_2. In this instrument electrical resistance coils are exposed to air and flue gas, the extra heat conductivity of the flue gas being denoted by the lower resistance of the coil.

In fig. 1 is shown, in diagrammatic form, the construction of the instrument known as the 'Auto' CO_2 Recorder, which has been designed and constructed by the *Auto Recorder Company*, and is now in successful operation in connection with a large number of boiler installations in this country and on the Continent. The action of the apparatus is as follows:

A small stream of water is allowed to run into the tank A through the small funnel B, which only allows sufficient water to pass to work the instrument at a suitable speed. The water runs from the tank A through the valve C into the chamber D. When the chamber D is filled up to the pipe E, the water overflows down the pipe F and under the float G, which it raises, thereby moving the valve C upwards and shutting off the water supply from the tank A into the chamber D. This motion of the valve C opens a communication from the chamber D through the pipe H, the water rising over the float G until it flows down the pipe I, and the chamber D is empty; the

pipe J then acts as a syphon and drains the water from under the float G, which is then allowed to fall again, and the chamber D to be once more filled. By this means the chamber D is alternately filled and emptied, and, as the float is connected by a system of levers to the distributing slide valve K, the water flowing through is the prime mover of the instrument.

The operation of gas analysis is very simple. The pipe L is connected to the supply of gas to be analysed and, as the end of the pipe dips slightly into the water seal in M, no gas can be drawn back. When the water in the chamber D is running out, there is a slight vacuum in this chamber which draws the gas through the pipes L and E, and, as the first measuring vessel N is in communication with the chamber D through the passages O and P and the slide valve K (this valve having moved over to the right by the rising of the float G), it is entirely filled with flue gas. Much more gas is drawn in than is analysed, in order that the sample may be as fresh as possible. When the water reverses and begins again to run into D (the valve K having moved over to the *left*, by the sinking of the float G), the gas enclosed in the vessel N is sent through the pipes P and R, and under the dome S, which stands immersed in a solution of caustic potash contained in the vessel T. This dome is of large area, and the gas is in a thin layer between the wet dome and the top of the solution, so that the absorption of the CO_2 is rapid. After the water has risen and expelled all the gas from the vessel N into the absorber, and has again begun to run out, the valve K having moved over to the *right*, the water, as it descends in the second measuring vessel U, draws in from the absorber S the gas which has not been absorbed. As the measurer U is of the same capacity as the measurer N, it follows that, if there is not sufficient gas received from the absorber S to fill it, it will, after emptying the absorber, draw the remainder from under the bell V through the pipe W, and cause the bell to descend; the greater the amount of CO_2 absorbed, the lower the bell V will be pulled down. As the bell is suspended from a balanced lever, which has a pen X attached to it, the pen marks the chart Y, which is placed round a clockwork drum, the lines made by the pen being of varying lengths, according to the amount of CO_2 which was in the quantity of gas in the first measurer N.

It has been found that one of the greatest troubles with recorders of this kind is to keep the pipes from the flue to the instrument clean; in the 'Auto' Recorder this is effected by a special filter.

The 'W.R.' Patent CO_2 Indicator.

(W.R. Patents, Ltd., London and Leeds.)

The present-day high cost of coal renders the use of a CO_2 indicator highly necessary. Fig. 2 shows a new type recently introduced and placed on the market, which can be used in

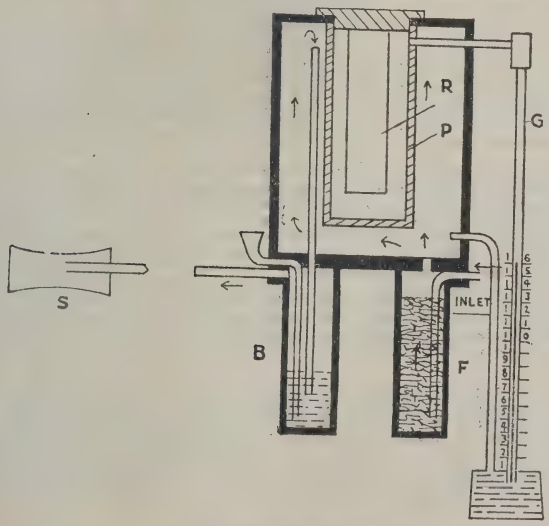


FIG. 2. (Small Indicator.)

all cases of combustion where any class of fuel is used, and where CO_2 is a product of this combustion. The arrangement adopted, differs materially from other CO_2 indicators.

An aspirator, S, fig. 2, worked by the natural draught which it increases, is fixed at a point as near the chimney base as possible, and continually aspirates gases from the flue it is desired to keep under observation. The path of gases is shown by the arrows. They are first drawn through a filter F, and pass from thence into a chamber containing a porous pot, inside which is a dry reagent, R. The flow of gas is shown by continuous bubbling through water in vessel B. A pipe connects the chamber with a vessel containing water into which dips one end of another pipe, G, the other end of which is taken into the inside of the porous pot. Some of the gases penetrate into the interior of this pot, and are absorbed by the reagent, with the result that a partial vacuum is formed, and the water is forced up the pipe G. The latter is provided with a scale so graduated that the percentage of CO_2 in the flue gases can be read.

CO_2 or Carbon Dioxide.

The process of distillation which goes on in a boiler furnace, resulting in the separation of the gases and fixed constituents in the fuel, requires widely different and constantly varying conditions in the matter of air supply for the attainment of perfect combustion. Efficient combustion (i.e. economical combustion) is secured by burning the correct proportion of fuel and air under the varying conditions of coal and atmosphere. The point, therefore, to aim at is to generate the required steam by burning as much air as possible and as little fuel as necessary. The burnt air given off passes up the flue in the form of carbon dioxide (CO_2), therefore the object to achieve is to secure as large an amount of CO_2 (say from 10 per cent. to 14 per cent.) as is possible. The relation of coal consumption to CO_2 in the flue gases has been worked out, and the result is given in standard treatises on fuel. These results are as follows:

Temp. of Exit Gases.		Percentage of CO_2 in Exit Gases.											
		4%	5%	6%	7%	8%	9%	10%	11%	12%	13%	14%	15%
F.°	C.°	Total Percentage of Fuel wasted.											
400	204	32·4	26·2	21·8	18·9	16·4	14·9	13·4	12·3	11·4	10·6	9·8	9·2
500	260	40·5	32·7	27·3	23·6	20·8	18·6	16·8	15·4	14·2	13·2	12·3	11·6
600	316	48·6	39·3	32·8	28·3	24·9	22·3	20·2	18·5	17·1	15·9	14·8	13·9
700	371	56·7	45·8	38·2	33·1	29·1	26·0	23·5	21·6	19·9	18·5	17·2	16·2
800	427	64·8	52·4	43·7	37·8	33·2	29·7	26·9	24·7	22·8	21·2	19·7	18·5

The above figures necessarily include the unavoidable loss present in every boiler plant, and the performance of any plant must be judged by comparing the total losses given in the respective columns. The figures in the columns below the 'Percentage of CO_2 in Exit Gases,' represent the wastage of coal with that percentage of CO_2. For example, take the third column and the second line. Temperature of Exit Gases °F. 500—percentage of CO_2, 6 per cent. The wastage of coal is 27·3 per cent. Following the line on to the tenth olumn, it is shown that with 13 per cent. of CO_2 the coal wastage is 13·2 per cent. Thus by increasing the CO_2 from 6 per cent. to 12 per cent. a saving of 14·1 per cent. of coal is effected. The W.R. CO_2 or Combustion Indicator is an apparatus which continually, automatically, and accurately, indicates the percentage of CO_2 which is passing throrgh the flues at any hour of the day and night. With this Indicator installed on the boiler plant the percentage of CO_2 obtained can be seen at once, and the necessary steps taken to increase this amount and thus save fuel.

The Indicator is prompt in its action, having a lag of three minutes only. Its deviation from absolute accuracy has been found to be only 0·1 per cent. It is well constructed; has no mechanically moving parts; is fireproof and foolproof, and can be worked by any boy of average intelligence. With each Indicator the manufacturers furnish a blue print showing the method of fitting to each particular boiler, also special detailed instructions for installing the apparatus, which operation can be completed in from four to six hours by any works' engineer or fitter. In cases where a recording graph is desired, one of a specially approved form can be supplied by W.R. Patents, Ltd.

All recording graphs are necessarily somewhat complicated, and are apt to get out of order through dirt, etc., but even if the instrument should go out of order when fitted to the Indicator, the Indicator itself will still continue to work. The cartridges last 24 hours of continuous working.

The exhaust gases from internal combustion engines are subject to the same considerations as flue gases. They, however, cannot be regulated so as to produce a definite CO_2 percentage, as to obtain this result it would be necessary to throttle down the incoming air, thus loading the engine by increasing the difference in pressure between exhaust and inlet, in which case a loss of efficiency would occur. The graphs in fig. 3 show the composition of the exhaust gases

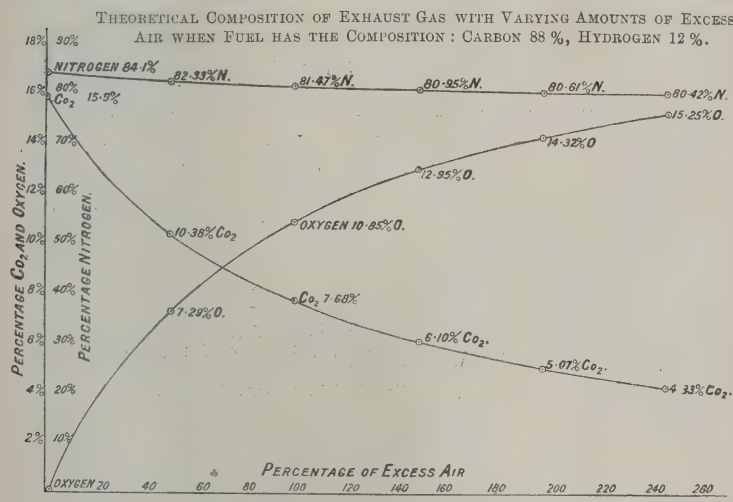


FIG. 3.

of an engine burning heavy petroleum (about 88 per cent. C and 12 per cent. H) with various quantities of excess air. Diesel oil engines running at full load generally take about 100 per cent. excess air : semi-Diesel engines a somewhat greater percentage excess air.

Thermal Efficiency.

The following table gives the thermal efficiency obtainable when converting the heat of fuels into work by various types of engines :—

Type of Engine.	Thermal Efficiency.
	Per cent.
Reciprocating steam engine and boiler	12
Steam turbine and boiler	18
Petrol engine	22
Gas engine with producer	24
Gas engine with suction producer	26
Petrol engine (aircraft)	27
Semi-Diesel oil engine	34
Alcohol engine	36
Diesel oil engine	36

THERMAL EFFICIENCY CURVE.

Curve A (fig. 4) represents the best thermal efficiency that can be expected from gas-engine plants ; B, a moderate efficiency from the same plant ; C, a poor efficiency from gas plant, but

probably the very best that can be expected from a large gas-fired turbo-generator plant; D may be considered a good thermal efficiency for the latter.

These efficiencies can only be expected in power plants working at a high load factor

(*A. Hugh Seabrook.*)

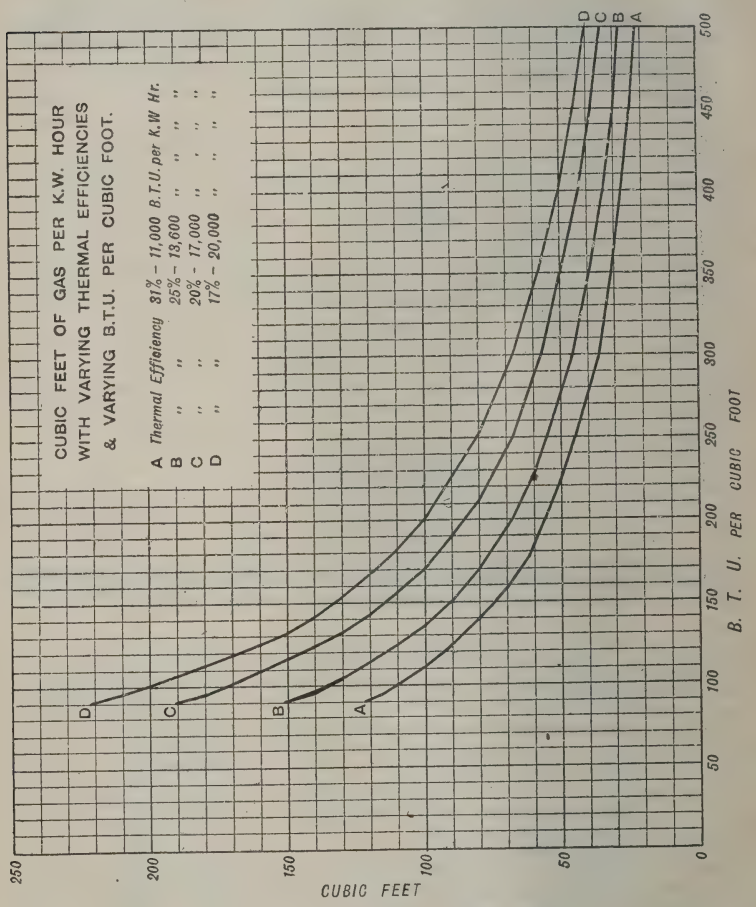


FIG. 4.—Thermal Efficiency Curve.

TEMPERATURES OF SPONTANEOUS IGNITION.

The thermal efficiency of internal-combustion engines is dependent upon the compression pressure employed in the engines. The compression pressure permissible in engines is dependent upon the temperature of spontaneous ignition of the fuel employed.

The following are recent figures for the spontaneous ignition temperatures of fuels:—

SPONTANEOUS IGNITION TEMPERATURES (IN OXYGEN).

Liquids.	Sp. Gr.	S.I.T.	
Pratt's perfection spirit No. I.	0·710	272 C.°	522 F.°
" " No. II.	0·724	270	518
Paraffin oil	0·782	253	487
Gas oil (petroleum)	—	254	489
Various crude petroleums and residua	—	254 to 275	489 to 527
Shale oil	—	253	487
Commercial 100 per cent. benzol	0·875	566	1,051
Creosote oil	1·010	415	779
Coke-oven tar oil	1·046	478	892

(*Moore*, '*J.S.C.I.*', Feb. 15, 1917.)

Gaseous Fuels (in Air).

Hydrogen	758 C.°	1,396 F.°
Carbon monoxide	910	1,670
Ethylene	895 to 905	1,643 to 1,661
Coal gas	850	1,562
Petrol gas	900	1,652
Methane (No ignition below 1,000)	1,000	1,832

(*McDavid*, '*J.C.S.*,' *Nov.* 1917, p. 1003.)

To determine whether a coal is likely to ignite spontaneously, take a convenient quantity of the coal and weigh it pretty accurately. Heat the sample to 250° F., hold it at that temperature for three hours, and then weigh it. If the weight has gone up 2 per cent. or more, the coal is a dangerous one from the point of view of spontaneous combustion. The sample must be dry coal, the drying being done at about 100° F. (*J. F. Springer in* '*Power.*')

SOLID FUELS.

The most important naturally occurring solid fuels are:—

Coal; Lignite; Peat; Wood

These may be burned in the raw state, or may be subjected to destructive distillation. In the latter case solid, liquid and gaseous products are evolved. The more important solid fuels which may be prepared by this treatment are coke (of two kinds, metallurgical and gas-works coke), lignite coke (of little value), peat charcoal, and wood charcoal.

Powdered coal is sometimes made into briquettes by the addition of a small percentage of coal-tar pitch or other binding material, and pressing in moulds.

Coal.

The composition of coal from various fields varies considerably according to the conditions to which the coal has been subjected during its formation. Its variation in composition can be seen from the following table of coal analyses:—

ULTIMATE COMPOSITION OF COAL (*Brame*).*

Type of Coal.	Carbon.	Hydrogen.	Oxygen and Nitrogen.	Fixed Carbon.	Volatile Matter.
Lignites and brown coals	69·5	5 5	25·0	52·0	48·0
Splint coal (Fife)	82·0	5·0	12·8	61·0	39·0
Gas coal (Durham)	85·0	5·5	8·2	66·0	34·0
Coking coal	87·3	5·05	6·9	73·5	26·5
Smokeless steam (Welsh)	91·3	4·05	3·9	85·5	14·5
Anthracite (Scotch)	91·1	3·5	4·65	88 5	11·5
Anthracite (Welsh)	91·0	3·9	4·28	93·0	7·0

* '*Fuels: Solid, Liquid and Gaseous*,' p. 32.

Coal possesses a sp. gr. of from 1·2 to 1·5 (water = 1) mainly depending on its composition. It also varies considerably in hardness and texture. The combustible portion of coal usually consists of from 73 to 93 per cent. carbon, 3 to 6 per cent. hydrogen, 2 to 20 per cent. oxygen, 1 to 2·5 per cent. nitrogen, and 0·5 to 5 per cent. sulphur. When completely burned coals yield from 1 to 15 per cent. ash. The moisture content varies within very wide limits. The heat value of coal is generally from 14,000 to 16,000 B.Th.U. gross. A comparison of the properties of coal with those of other solid fuels may be seen in the following table :—

CALORIFIC PROPERTIES OF VARIOUS FUELS.

Substance.	Calorific Power.		Observed by
	Calories.	B.Th.U.	
Scotch peat briquettes (16 per cent. H_2O)	4,754	8,558	F. Mollwo Perkin.
Coke from Scotch peat	7,600	13,680	,,
Oak (containing 13·3 per cent. H_2O)	3,990	7,182	Gottlieb.
,, ,, 11·8 ,,	4,155	7,479	,,
Yoke elm ,, 12·2 ,,	4,151	7,490	,,
Beech ,, 12·95 ,,	4,168	7,502	,,
,, ,, 13·95 ,,	4,101	7,382	,,
,, ,, 13·75 ,,	4,114	7,405	,,
Birch ,, 11·83 ,,	4,207	7,573	,,
Pine ,, 12·17 ,,	4,422	7,960	,,
Fir ,, 11·80 ,,	4,485	8,073	,,
Anthracite	8,400	15,120	Dosch.
Anthracite from Westphalia	7,575	13,635	Langbein.
Short flame sinter coal	8,200	14,760	Dosch.
Kentucky coal (U.S.A.)	7,785	14,013	U.S. Geological Survey.
Illinois coal ,,	7,056	12,701	,,
Pennsylvania coal ,,	7,875	14,175	,,
Coke	6,900	12,420	Dosch.
,,	6,919	12,454	Langbein.
Lignite	4,000	7,200	Dosch.
Earthy lignite	3,000	5,400	,,
Lignite briquettes	4,668	8,402	Langbein.
Lignite from Saxony (moist).	2,622	4,720	,,
Peat	4,230	7,614	,,
Sawdust briquettes	4,065	7,317	,,
Spanish lignite	5,761	10,369	H. Moore.
Asphaltum (extracted from petroleum).	9,550	17,190	,,

ANALYSIS OF COAL.

The chemical tests usually made upon coal are to ascertain the calorific value, coke value, ash content, moisture content, and ultimate composition. The volatile matter per cent. is obtained by deducting the coke value plus ash content of any coal from 100. The 'fixed carbon' is obtained by deducting the ash content from the coke value.

Of these only the first four are necessary for ordinary fuel purposes, and they are known as proximate analysis. The analysis for ultimate composition is expensive, difficult to make, and not essential. The determination of the calorific power is indispensable (unless actual evaporation tests are made on a boiler, in which case it is useful for comparison). When comparing two fuels, the value of the fuel of higher calorific power is generally greater than might be calculated by considering the value to be proportional to the calorific value. It is, however, advisable to note the number of B.Th.U. per penny when buying coal.

CALORIFIC VALUE OF COAL.

If it is impossible to determine the calorific values of coal in a calorimeter it can be roughly estimated from the ultimate composition by the formula :—

Net calorific value = 8,137 C + 29,100 (H − $\frac{1}{8}$O) + 2,500 S − 600 H_2O, where C, H and O are the percentages of carbon, hydrogen and oxygen respectively present, and H_2O the percentage of hygroscopic water present.

When the ultimate analysis is not known and it is desired to obtain a rough estimate of the calorific power from the proximate analysis, this can be obtained by the formula :

$$\text{Calorific value} = 1{\cdot}8(82C + aV)\ \text{B.Th.U}$$

in which C = per cent. fixed carbon, V = per cent. volatile matter, and a is a constant computed from the following: $a_1 = 100V/(C + V)$.

a_1	5	10	15	20	25	30	35	38	40
a	145	130	117	109	103	98	94	85	80

The question of ash content is a serious one, as its removal from boilers involves labour and expense. The clinker to be removed from a steam plant is greater in quantity than the weight of ash content obtained by calculation from the results obtained in the laboratory.

High moisture content not only shows that water is being bought for coal. It must be remembered that this moisture has to be driven off in the form of steam, and in this way takes up heat from the combustion zone, and is liable to cause smoking.

ANALYSES OF COALS. (*Gray & Robinson.*)

Constituents.	1.	2.	3.	4.	5.	6.	7.	8.	9.	10.	11.	12.
Carbon	62·55	65·50	68·64	69·50	72·14	73 77	74·99	74·57	77·00	76·71	78·80	85·70
Hydrogen	3·87	4·23	4·33	4·42	4·40	4·55	4·66	4·74	4·51	4·67	4·92	2·97
Sulphur	1·62	0·67	1·33	0·67	0·61	0·41	0·55	0·47	0·78	0·73	0·50	0·62
Water	8·63	7·92	8·96	9·28	8·34	7·99	7·21	0·95	2·31	1·94	2·72	3·15
Ash	11·78	10·15	6·90	5·97	4·22	1·76	2·68	1·37	7·17	8·49	4·18	3·59
Oxygen and nitrogen	11 55	11·53	9 84	10 16	10·29	11·52	9·91	11·90	8·23	7·46	8·88	3·90
Coke	61 74	61·06	57·53	59·12	58·47	56·93	56·59	56·84	74·61	72·32	66·43	92 03
Fixed carbon	49·96	50·92	50·63	53·15	54·25	55·17	53·91	55·47	67 44	63·83	62·25	88 44

1. Splint coal, Lochgelly, Fife.
2. Boiler fuel (a mixture), Fife.
3. Ell coal, Bothwell.
4. Main coal, Bothwell.
5. Poytshaw coal, Bothwell.
6. Dunfermline splint, Cowdenbeath, Pit 10.
7. Splint coal, Bothwell.
8. Dunfermline splint, Cowdenbeath, Pit 7.
9. Boiler fuel, Aitken Pit Kelty.
10. Haughri. g coking coal, Kilsyth.
11. Coking coal, Kilsyth.
12. Anthracite, Kilsyth.

ECONOMIC EFFECTS OF IMPURITIES IN COAL.

Each per cent. of sulphur reduces the boiler capacity by about 1·5 per cent. In experiments made in America with a chain grate stoker, using Illinois coal mixed with various percentages of ash, the efficiency dropped gradually as the ash increased up to 35 per cent., after which the efficiency dropped to zero rapidly with a fuel containing 40 per cent. of ash.

LOSS OF THERMAL VALUE OF COAL BY STORAGE.

An average of 741 tests, in America, of a particular coal showed, after three years in the open air, a reduction of from 35 to 28·3 per cent. of volatile combustible matter, indicating a thermal value loss of 20 per cent.

Coal in storage should be inspected regularly. If the temperature reaches 150° F. the pile should be carefully watched, and if the temperature rises to 175° or 180° F. the coal should be removed as promptly as possible. The coal should be thoroughly cooled before being replaced in storage.

UTILISATION OF ANTHRACITE WASTES.

A series of tests made in America, consisting of 30, 50, and 70 per cent. run-of-mine coking coal mixed with anthracite culm, showed that the pulverised bituminous coal alone produced better results, except the mixture of 30 per cent. culm with 70 per cent. bituminous, which was equal to that of the bituminous coal alone.

STOWAGE SPACE OF COAL.

The stowage space occupied by coal is 40 to 42 cubic feet for one ton of Welsh steam coal 45 cubic feet for one ton of North country coal, and 45 to 50 cubic feet per ton of Scotch coal.

EVAPORATIVE POWER.

The heat required to evaporate one pound of water at boiling point is 967 B.Th.U.

To raise water from 100° F. to boiling point and evaporate into steam at 212° F., 1,078 B.Th.U. per pound of water are required.

By dividing the calorific power (in B.Th.U.) of a fuel by 1,078 we obtain the *theoretical* quantity of water which it will raise from a feed-water temperature of 100° F. and evaporate at 212° F.

In practice a good boiler develops a thermal efficiency of about 70 per cent., and the actual evaporation obtained is therefore about 70 per cent. of the theoretical figure.

EVAPORATIVE POWER OF COAL.

Coal.	Calorific value. B.Th.U.	Evaporative power from 100° F (37·7°C.) to Saturated Steam at 212° F. (100° C.).	
		Theory.	Practice. (70 % efficiency.)
Welsh anthracite . .	15,000 to 15,500	13·9–14·4 lbs.	9·7–10·1 lbs.
Scotch anthracite . .	14,500 to 15,000	13·45–13·9 ,,	9·4–9·7 ,,
Welsh navigation coal .	14,000 to 15,000	13·00–13·9 ,,	9·1–9·7 ,,
Average British steam coal	12,000 to 13,500	11·1–12·5 ,,	7·8–8·75 ,,

(See also Table of Evaporative Values, page 1780.)

EVAPORATION FACTORS.

To reduce results to 'from and at 212° F.'

Temp. of Feed Water in F°.	Boiler Pressure in Pounds per Square Inch.												
	60	80	100	120	140	160	180	200	220	240	260	280	300
40	1·209	1·214	1·218	1·222	1·226	1·229	1·232	1·234	1·237	1·239	1·241	1·243	1·245
50	1·198	1·204	1·208	1·212	1·215	1·218	1·221	1·224	1·226	1·229	1·231	1·233	1·235
60	1·188	1·193	1·198	1·202	1·205	1·208	1·211	1·214	1·216	1·218	1·220	1·222	1·224
70	1·178	1·183	1·187	1·191	1·194	1·197	1·200	1·203	1·206	1·208	1·210	1·212	1·214
80	1·167	1·173	1·177	1·181	1·184	1·187	1·190	1·193	1·195	1·198	1·200	1·202	1·204
90	1·157	1·162	1·167	1·170	1·174	1·177	1·180	1·183	1·185	1·187	1·189	1·191	1·193
100	1·147	1·152	1·156	1·160	1·164	1·167	1·170	1·172	1·175	1·177	1·179	1·181	1·183
110	1·136	1·142	1·146	1·150	1·153	1·156	1·159	1·162	1·164	1·167	1·169	1·171	1·173
120	1·126	1·131	1·136	1·140	1·143	1·146	1·149	1·151	1·154	1·156	1·158	1·160	1·162
130	1·116	1·121	1·125	1·129	1·132	1·136	1·138	1·141	1·144	1·146	1·148	1·150	1·152
140	1·105	1·110	1·115	1·119	1·122	1·125	1·128	1·131	1·133	1·135	1·137	1·139	1·141
150	1·095	1·100	1·104	1·108	1·111	1·115	1·118	1·120	1·123	1·125	1·127	1·129	1·131
160	1·084	1·090	1·094	1·098	1·101	1·104	1·107	1·110	1·112	1·115	1·117	1·119	1·121
170	1·074	1·079	1·083	1·087	1·091	1·094	1·097	1·099	1·102	1·104	1·106	1·108	1·110
180	1·063	1·069	1·073	1·077	1·080	1·083	1·086	1·089	1·091	1·094	1·096	1·098	1·100
190	1·053	1·058	1·062	1·066	1·070	1·073	1·076	1·078	1·081	1·083	1·085	1·087	1·089
200	1·042	1·048	1·052	1·056	1·059	1·063	1·065	1·068	1·071	1·073	1·075	1·077	1·079
210	1·032	1·037	1·042	1·046	1·049	1·052	1·055	1·057	1·060	1·062	1·064	1·066	1·068

For every 10° superheat, 0·0055 is to be added to the above factors.

THE 'Auto' Fuel Waste Recorder.

(CO_2 RECORDER.)

This Instrument, for the Automatic Analysis of Boiler Flue Gases, is an absolute necessity for ensuring the economical use of Fuel and Cheap Steam Production.

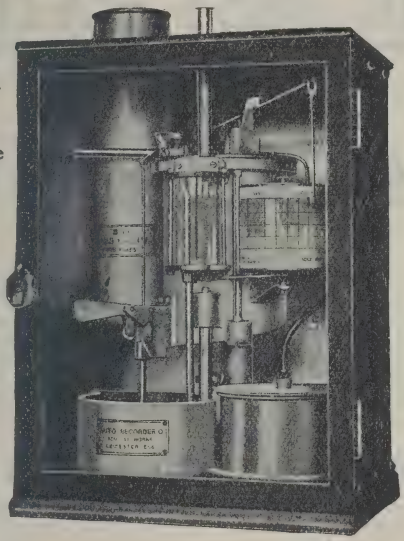
A Check for the Employer.

A help to the Fireman.

Simple and Reliable.

Entirely Automatic.

Worked by a trickle of Water.



Special Type for Marine Use.

Size 15 in. × 12½ in. × 21 in.

Weight 120 lb.

All Metal Case.

Requires less than Five minutes' attention daily.
Guaranteed accurate within half per cent.
Large numbers in use and giving satisfaction.

Repeat orders over 60%.

Patentees and Sole Manufacturers:

THE 'AUTO' RECORDER CO.

Kent Street Works, LEICESTER, ENGLAND.

Telegrams: 'LIFTING.' Telephone No. **575.**

Codes: A B C, 4th and 5th Editions.

GAS COKE

THE FUEL THAT SHOWS

THE BEST RATIO

OF

COST & NET EVAPORATIVE VALUE

WEIGHT FOR WEIGHT, DRY COKE OF CALORIFIC VALUE 13,000 B.Th.U. PER LB. GAVE 4 OR 5 PER CENT. MORE RADIATION THAN COAL OF 14,500 B.Th.U. PER LB.—*Extract from Special Report issued by the Fuel Research Board o the Department of Scientific and Industrial Research.*

THE LOWEST RECORDED FUEL COST

per unit sold has been secured at Power Stations equipped with the patent Sandwich System of firing Coke and coal slack on mechanical chain grate stokers. Results obtained with the Sandwich System—which also prevents the formation of smoke—evaporation, 9.2 lb.; fuel consumption, 35 lb. to 40 lb. per grate-foot-hour with natural draught only; plant efficiency 80 per cent. Full particulars and free expert advisory service on application to

THE LONDON COKE COMMITTEE,

84 Horseferry Road, Westminster, S.W. 1.

Write for free pamphlet on

'COKE AND ITS USES.'

Dealing with Hand-Firing, Mechanical Stoking & Smoke Prevention.

F. 1777

Coke.

Coke is produced by the destructive distillation of bituminous coal either in coke ovens or in gasworks.

High-temperature Distillation of Coal.

Coke-oven coke is produced by slowly heating the coal to a high temperature, about 1,000° C., by which means a hard product, almost entirely free from volatile matter, is obtained. This coke is employed in blast-furnaces, and commands a slightly higher price than the product of the gasworks. It possesses a calorific power slightly lower than that of pure carbon (14,540 B.Th.U.).

The process employed in coke ovens, namely, the gradual heating of the coal to a very high temperature, results in the production of a very hard, unfriable coke, which will withstand the high crushing stresses necessary for metallurgical operations, especially blast-furnace work. It contains all the ash, and nearly half the sulphur, present in the original coal.

Gasworks coke is a product from the horizontal, inclined, or vertical retorts used in the manufacture of coal gas. In all such plants the heat is applied more rapidly than in coke ovens, and the resulting coke is softer and more friable than coke-oven coke. The process is, of course, primarily designed to give a high yield of gas, and the coke is a by-product.

Gas coke of average quality has a calorific power of about 12,500 B.Th.U. per lb., as sold, including moisture. Coke breeze, or coke dust, is about 10,000 B.Th.U. per lb.

Experiments made with quite dry coke and a sample artificially watered up to 16 per cent. of its weight show that a given quantity in a given time furnished 228 B.Th.U. wet and 365 B.Th.U. dry, approximately 39 per cent. advantage in favour of dry coke. The proportion of moisture in coke may vary from 2 per cent. to 20 per cent., and in the condition indicated in the experiment the heat in the grate or boiler was partly used to dry out the water, which escaped as moisture into the flues, carrying heat with it and thereby reducing efficiency.

Low-temperature Distillation of Coal.

This consists in the gradual heating of bituminous coal to a comparatively low maximum temperature (500 to 600° C.). The retorting vessels employed are designed in such a way as to ensure the rapid removal of the volatile products. By such a process a low yield of very rich gas is obtained, and a high yield of thin tar. The tar is richer in low boiling-point fractions than the tars produced by the gasworks or coke-oven plants. The residual coke contains approximately 10 per cent. of volatile matter, and may be marketed for use in domestic fires, for which purpose it is claimed to be easily ignitable, and at the same time to give off the major portion of its heat as radiant heat, and to burn without generating smoke. Until recently the process has not met with success, largely on account of mechanical difficulties in the operation of the retorts; these difficulties, however, appear to be now overcome by 'Low-temperature Carbonisation, Ltd.,' in their production of 'Coalite.'

Coalite.

The following are results obtained in the manufacture of Coalite :—

Coalite and tar obtained from 1 ton of coal	Coal used	70 % Claycross 30 % Thorncliff
	Coalite, 72 %	1,612·8 lbs.
	Tar	17 gallons

Heat Balance Sheet

Raw Materials	B.Th.U.'s	Products in B.Th.U.'s		B.Th.U.'s
Coal	30,000,000	Coalite 72%	1,612·8 lbs. =	22,000,000
		Tar	17 gallons =	3,000,000
		Loss		5,000,030
	30,000,000			30,000,000

The foregoing, which shows a heat balance in B.Th.U.'s, does not include the surplus gas, since it is not certain what amount will remain over after heating the retorts. Also, the B.Th.U.'s value of the benzol to be recovered from the gas is not included. This latter is omitted, because the quantity is not definitely known. Without these, the balance is good and efficiency high. A good gas works' practice will give 22,000,000 B.Th.U.'s, or 73 per cent. efficiency, against the 25,000,000 (coalite and tar) B.Th.U.'s, or 82 per cent. efficiency.

(T. M. Davidson and R. H. S. Abbott.)

YIELD FROM ONE TON OF AVERAGE COAL (say 25-30 per cent. volatile matter).

	Low-temperature Carbonisation.	High-temperature Carbonisation.	
		Gasworks.	Coke Ovens.
Temperature of carbonisation	1,000° F.	About 1,800° F.	About 1,800° F.
Gas	6,000-6,500 cubic feet of rich gas, 700–750 B.Th.U. per cubic foot.	12,000 cubic feet of medium quality (town's) gas, 550 B.Th.U. per cubic foot.	11,500 cubic feet of poor quality coke-oven gas, 450 B.Th.U. per cubic foot.
Liquid	20 gallons coalite oil (fractionated to, say, 3 galls. motor spirit, 8-9 galls. Diesel or fuel oil, and 8-9 galls. lubricating oil).	10 gallons coal tar. (Fractionated to about half-gallon motor spirit, carbolic acid, a large amount of naphthalene, fuel oil, &c.)	8 gallons coal tar.
Sulphate of ammonia (from the ammonia)	15 lbs.	25 lbs.	28 lbs.
Residue in retort	14 cwt. of smokeless fuel coalite containing about 9-10 per cent. volatile matter.	13½ cwt. of soft coke, containing about 1 per cent. volatile matter.	14-14½ cwt. of hard coke, containing less than ½ per cent. volatile matter.

(*David Brownlie, A.I.Mech.E.*).

COKE AS A BOILER FUEL

(Contributed by E. W. L. Nicol, M.I.Mar.E., A.I.E.E.)

With a view to cheapening the cost of steam raising by improving steam-boiler efficiency, and to eliminate the emission of visible smoke, gas coke is now largely used as fuel in lieu of crude

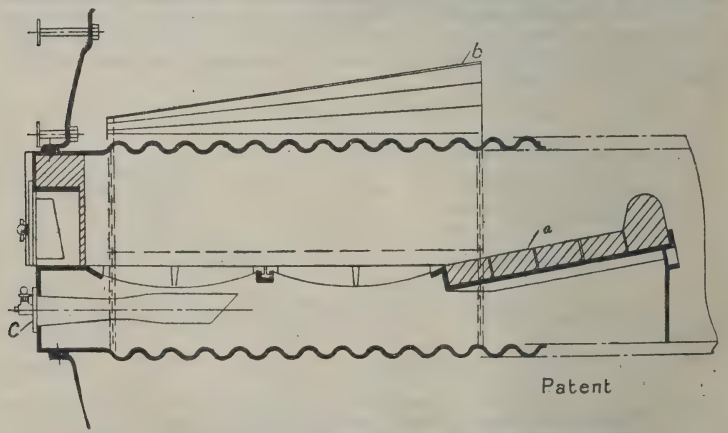


FIG. 5.—*a*, Gallagher Crompton baffle bridge; *b*, Ross Schofield circulator.

coal. In hand-fired boilers, coke exclusively is used under ordinary natural draught conditions. With a draught of 0·25 in. W.G. over the fire, the average rate of combustion is 12 lbs. to 14 lbs.

of suitably graded coke per sq. ft. of grate area per hour. Some form of impelled draught is necessary if this rate is insufficient. The forced draught apparatus usually employed is some form of steam-jet blower applied to the enclosed ashpit of the boiler, and used to maintain a 'balanced' draught over the fire (fig. 5). The steam consumption of the jets should not exceed 3 per cent. of the total steam generated when burning graded coke at a rate of 20 lbs. per grate-foot-hour. For hand-fired boilers the minimum allowance of grate area should be 1 sq. ft. per 22 to 25 lbs. of coke consumed per hour. In practice it is found that this rate can be exceeded only at the expense of efficiency.

Unlike coal, the combustion of coke is practically completed on the grate, a supply of secondary air over the fire being unnecessary. This tends to localise the heating effect to the boiler furnace area. The introduction of a circulator, *b*, tends to neutralise this effect and set up active circulation of the water in the boiler. The operation of cleaning fires, and the losses incidental thereto, due to inrush of cold air and consequent loss of steam pressure, are minimised by the use of the Gallagher Crompton baffle bridge *a*, also shown in the figure. During the cleaning operation the live fuel is heaped up on the baffle bridge.

In mechanically-stoked boilers fitted with both forced and induced draught, average rates of combustion exceeding 40 lbs. of graded coke per grate-foot-hour are maintained. Types of mechanical stokers specially adapted for use with coke or coke breeze include the 'Underfeed travelling grate' and the 'Babcock balanced draught chain grate.' Existing chain grate

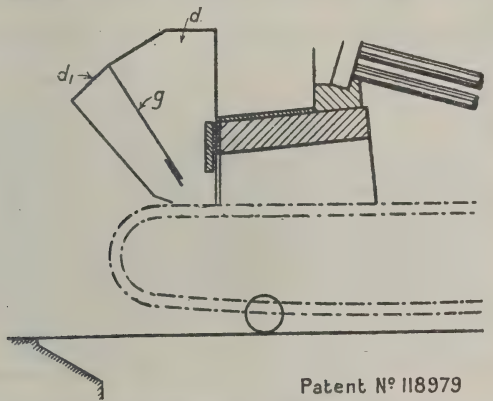


FIG. 6.—Sandwich System as applied to Chain-grate Stoker. d_1, coal hopper; d, coke hopper; g, separating diaphragm.

mechanical stokers have largely been adapted to use admixtures of coke or breeze up to 75 per cent. at full normal rates under ordinary natural draught conditions, by means of the patent 'Sandwich' system (fig. 6), which is designed to feed, from a double hopper, well-defined layers of coal slack and suitably graded coke of any desired thickness, the coal being uppermost. Using this system at the L.C.C. Greenwich Power Station, the General Manager gives the following data relating to the year 1919–1920 :—

Tons of fuel burnt	. 176,400	Average percentage of ash	10·0
Average price for coal	. 41*s.* 11·3*d.*	calorific value of breeze	9,000 B.Th.U.
,, calorific value	. 10,780 B.Th.U.	,, percentage of ash	18 to 20
,, percentage of ash	. 14·59	Coke and breeze consumed	25,000 tons
,, calorific value of coke	11,500 B.Th.U.		

With coal at 42*s.* per ton, and coke breeze at 22*s.* 6*d.* per ton, the fuel cost per 1,000 gallons evaporated was 19*s.* 6*d.* with equal quantities of each fuel, as against 23*s.* 2*d.* with Scotch nuts alone, a saving of about 16 per cent. The official report says. 'Apart from the saving in money, low grade classes of fuel can be dealt with on the Sandwich system at a much higher efficiency than would be the case if burnt separately. The results have been extremely satisfactory and a saving of about £8,000 a year can be effected.' Average evaporation obtained with 50 per cent. mixture of coal and breeze, 7·25 lbs.; with coal and coke 9 lbs. from and at 212° Fahr. Gas coke is also used extensively as fuel for road transport vehicles of both the under-type ('Sentinel,' 'Leyland,' and 'Atkinson') and the over-type wagon ('Foden' and 'Garrett,' etc.). The following table shows the fuel cost of evaporation from and at 212° Fahr. with common solid fuels at varying prices :—

APPROXIMATE FUEL COST OF EVAPORATION FROM AND AT 212° FAHR.

(*Compiled by E. W. L. Nicol, M.I.Mar.E., A.I.E.E., Fuel Expert to the London Coke Committee.*)

Coal Slack.		Hard Steam Coal.		Smokeless Welsh Coal.		Gas Coke.	
Mechanically Stoked.		Hand Fired : Natural Draught.		Hand Fired : Natural Draught.		Hand Fired : Forced Draught.	
At per Ton.	Evaporative Value. 7·5 lbs.	At per Ton.	Evaporative Value. 9·5 lbs.	At per Ton.	Evaporative Value. 10·5 lbs.	At per Ton.	Evaporative Value. 9 lbs. net.
	per 1,000 gallons evaporated.		per 1,000 gallons evaporated.		per 1,000 gallons evaporated.		per 1,000 gallons evaporated.
s. d.	*s. d.*	*s. d.*	*s. d.*	*s. d.*	*s. d.*	*s. d.*	*s. d.*
19 0	11 4	26 0	12 2	28 0	11 10	25 0	12 4
20 0	11 11	27 0	12 8	29 0	12 4	26 0	12 10
21 0	12 6	28 0	13 1	30 0	12 9	27 0	13 5
22 0	13 1	29 0	13 7	31 0	13 2	28 0	13 11
23 0	13 8	30 0	14 0	32 0	13 7	29 0	14 5
24 0	14 4	31 0	14 6	33 0	14 0	30 0	14 10
25 0	14 11	32 0	15 0	34 0	14 5	31 0	15 4
26 0	15 6	33 0	15 6	35 0	14 10	32 0	15 10
27 0	16 1	34 0	16 0	36 0	15 4	33 0	16 4
28 0	16 8	35 0	16 5	37 0	15 9	34 0	16 10
29 0	17 4	36 0	16 11	38 0	16 1	35 0	17 4
30 0	17 11	37 0	17 5	39 0	16 6	36 0	17 10
31 0	18 6	38 0	17 10	40 0	16 11	37 0	18 4
32 0	19 1	39 0	18 4	41 0	17 4	38 0	18 10
33 0	19 8	40 0	18 9	42 0	17 9	39 0	19 5
34 0	20 4	41 0	19 2	43 0	18 2	40 0	19 11
35 0	20 11	42 0	19 8	44 0	18 7	41 0	20 5
36 0	21 6	43 0	20 2	45 0	19 0	42 0	20 10
37 0	22 1	44 0	20 8	46 0	19 5	43 0	21 4
38 0	22 8	45 0	21 1	47 0	19 10	44 0	21 10
39 0	23 4	46 0	21 7	48 0	20 4	45 0	22 4
40 0	23 11	47 0	22 0	49 0	20 9	46 0	22 10
41 0	24 6	48 0	22 6	50 0	21 2	47 0	23 4
42 0	25 1	49 0	23 0	51 0	27 7	48 0	23 10

Lignite.

The composition of lignite, and its properties, lie between those of wood and coal.

Lignite occurs in most European countries and is abundantly found in the Colonies, but does not occur in quantities in the British Isles. Lignites vary widely in composition, but generally between the following limits : carbon 55 to 80 per cent., hydrogen 5 to 7 per cent., oxygen 10 to 35 per cent (in the dry state). The calorific value is from 9,000 to 14,000 B.Th.U. on dry sample. The high ash and water contents of lignite frequently make it unsuitable for direct combustion, but good grades may be used for steam raising. Lignite is frequently subjected to destructive distillation, whereby valuable liquid products are obtained. It may also be used for the manufacture of fuel briquettes, or be utilised in gas producers.

Peat.

Large deposits of peat occur within the British Isles, but little use has been made of them hitherto, the high water content (80 to 96 per cent. when in bog, and 30 to 60 per cent. after air drying) being a great drawback to their utilisation. Peat is suitable for use in gas producers, and is sometimes carbonised, when peat charcoal is the main fuel product.

Anderson and Dillner (*Jour. Soc. Chem. Ind.*, 1902, 459) give the following calorific powers for peat (in the dry state) :—

Average from bog	8,100 to 11,000 B.Th.U.
Reed grass peat	7,450 to 9,820 „
Mud peat	7,825 to 8,200 „

Wood.

When freshly cut, wood contains up to 50 per cent. of water, but this can be reduced to about 20 per cent. by air drying. The composition of dry wood is about 49·5 per cent. carbon, 6 per cent. hydrogen, 44 per cent. oxygen, and ·5 per cent. ash, and the heat value is generally a little

MANUFACTURERS OF

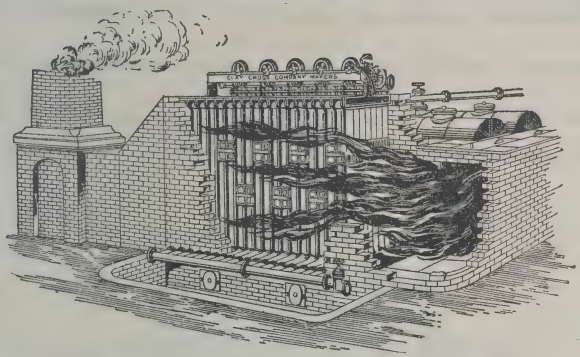
Modern High-Pressure

STANDARD SIZE

Fuel Economisers

Save 15 to 25 per cent. in Coal.

Awarded Gold Medal, London, 1908.



The 'Clay Cross' Modern Economiser, with all the latest pattern Internal Lids, Triple Scrapers, with Overlapping Joints and Chilled Cutting Edges.

Supplied to Steam Users throughout the World.

Full Particulars on application to—

The Clay Cross Co., Ltd.,

Near CHESTERFIELD,

DERBYSHIRE.

Telephone : 479 Chesterfield. Telegrams: 'Jackson, Claycross.'

Code used ABC (5th Edition).

BRICK MAKING MACHINERY

Herbert Alexander
& Co, Ltd
Charmouth St.,
LEEDS.

Telegrams: 'Alexson, Leeds.' Telephone No. 23274 Leeds.

London Office - - 1 Great Scotland Yard, Whitehall, S.W. 1.

BRIQUETTE MACHINERY LTD,

CHARMOUTH ST., LEEDS.

MACHINERY FOR BRIQUETTING
COAL, IRON ORE, PEAT, ETC.
PATENT COAL DRIER.

Telegrams: 'Briquette, Leeds.' Telephone No. 23274 Leeds.

London Office - - 1 Great Scotland Yard, Whitehall, S.W. 1.

below 9,000 B.Th.U. It only finds use in countries where large forests exist and where coal is not readily obtainable.

Wood Charcoal.

Wood charcoal consists mainly of carbon and possesses a calorific value of 11,000 to 13,500 B.Th.U. (Brame). Its use as a fuel is very limited.

Briquette Fuel.

Small coal cannot be burnt so economically in the furnaces of boilers in its original state as when in the form of briquettes. Briquettes made exclusively with anthracite coal burn too slowly, and it is advisable to mix a certain proportion of bituminous coal to overcome this objection. Up to the present, no kind of agglomerating material other than pitch or resin, or a mixture of these, has given satisfactory results. Briquettes made with resin alone become soft and lose their shape in the fire; those having a mixture of 4 per cent. of pitch and 1½ per cent. of resin give better results.

Briquette fuel is compounded from small coal which is mixed with cementing material and pressed into blocks or cakes. Highly bituminous coal may be formed into briquettes by heating considerably and pressing while hot. Certain lignites may be similarly agglomerated. Less bituminous coal requires about five to eight per cent. of pitch. The pitch is ground fine and mixed with the small coal, and the mass is heated until the pitch softens sufficiently to enable hard compact briquettes to be pressed. The rectangular block occupies least space, but it requires to be stacked by hand and broken for burning. The best form of briquette otherwise is the soap cake variety sufficiently flat not to roll. These can be moved in mass, lifted by a grab, and easily shovelled. They are not too mobile and do not flow out of a bunker door with the freedom of spherical briquettes. Clay, mucilage, Irish moss, lime, solidified petroleum, and many other starchy or sticky substances have been and are used in the cementing material of briquettes. Nothing is better than pitch; it must be of such quality as not to soften in the hottest climate to which the briquettes may be exposed; softer pitch will serve for home use. Pitch may be tempered with tar, and the following qualities are secured, according to mixture :—

	Dry Pitch.		Pitch and 9 per cent. Tar.		Pitch and 17 per cent. Tar.		Pitch and 25 per cent. Tar.	
	F.	C.	F.	C.	F.	C.	F.	C.
Ductile at . .	167°	75°	158°	70°	122°	50°	104°	40°
Pasty at . .	203°	95°	194°	90°	140°	60°	131°	55°
Liquid at . .	230°	110°	212°	100°	176°	80°	140°	60°

Briquettes are tested for toughness by tumbling, and noting the proportion wasted.

When made of pulverised coal of good quality the calorific power of briquettes is fully equal to that of round coal of the same variety. A pressure of 1,200 kilos per square centimetre will agglomerate a bituminous lignite alone. Ordinary briquettes are made with a pressure of 100 to 140 kilograms per square centimetre, or say 1,500 to 2,200 lbs. per square inch. Mr. Middleton recommends a pressure of as much as double these figures.

Preparation of Fuel Briquettes.*

Medium hard coals are best adapted to the production of fuel briquettes. Material suitable for briquetting should all pass through a ½-in. sieve; that is, it should consist of a mixture of grains of all sizes from ½ in. downwards. The presence of a certain amount of dust is required, in order to fill up the spaces between the coarser grains so as to produce a dense and strong briquette. If the dust employed, however, be in excess, the use of an increased amount of binding material is necessary. The average ash content of the coal should not exceed 12 per cent. if pitch is to be used as a binding material. In other cases it must be less than this amount, so that the ash content of the finished briquette shall not be above 10 per cent. There is no difficulty, however, in reducing the ash content of even the finest coal to 12 per cent. in the modern washing plant.

For successful briquetting it is essential to use a pitch that softens between 40° and 70° C., and yields a hard sintered residue on coking. About 70 per cent. of this residue should be extracted by the use of carbon disulphide; its hydrogen content should not exceed 5 per cent., and its calorific value should not be less than 8,500 calories. Blast furnace pitch is not suitable as a binding material, as this material always gives a puffed residue on coking. The amount of pitch necessary to effect a proper adhesion of the particles of coal in the finished briquette varies between 7 and 10 per cent. of the mixture. Generally speaking, the amount to be added increases with the hardness of the coal, with the increasing proportion of dust, with the increasing moisture content, and with a decrease in the pressure used in moulding the briquette.

* Abstract of paper read by F. C. A. Lantsberry and J. Drummond Paton, before the Manchester Geological and Mining Society, December 19, 1916.

Firebars.

The following proportions are for the usual cast-iron bars :—

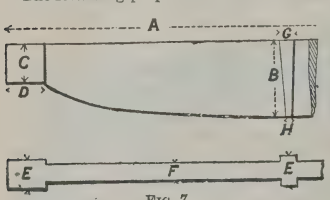


FIG. 7.

A.	B.	C.	D.	E.	F.	G.	H.
Ft. Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.
2 0	3 1/4	1 5/8	1 3/4	1 1/4	3/4	3/8	3/8
2 6	3 1/4	1 3/4	1 3/4	1 1/4	3/4	3/8	3/8
3 0	3 1/4	1 3/4	2	1 1/4	3/4	3/8	3/8
3 6	3 3/4	2	2	1 1/2	7/8	3/8	1/2
4 0	4 1/4	2	2 1/4	1 1/2	7/8	3/8	1/2
4 3	4 3/4	2	2 1/4	1 5/8	7/8	3/8	1/2
4 6	5	2 1/4	2 1/2	1 5/8	1	3/8	1/2
4 9	5 1/4	2 1/4	2 1/2	1 5/8	1	7/16	1/2
5 0	5 1/4	2 1/4	2 1/2	1 1/2	1 1/8	7/16	5/8

Firebars require to be suited to the fuel. Clean riddled coal-nuts or cobbles may be burned on a $\frac{1}{4}$-in. bar with $\frac{1}{4}$ in. to $\frac{1}{2}$ in. spaces, but slack coal requires wider bars and narrow spaces. Bars are often made with projecting fingers or corrugations in plan, thus increasing the length of air space considerably, though reducing it in respect of the increased width of the bar body. Such bars are made to rock for the purpose of shaking the ashes out of the fire and of breaking up clinker. Air, to supply a secondary demand behind the bridge for the combustion of the gases, is often admitted through hollow bars which heat the air and keep themselves cooler thereby, and under suitable conditions good results may be obtained.

Some firegrates are built up of short bars or links pinned together to form a side travelling band or chain ; such grates are self-cleaning and are much used in mechanical stokers, and are good, if provided with suitable air control damper plates below. Other firegrates have a somewhat steeply inclined surface, and may be built up either of longitudinal bars or of transverse bars, in which latter case they form the so-called ' step ' grate. Such grates may have a creeping or a shaking movement of the bars in order to assist gravity to lower the burning fuel down hill to make up at the foot of the slope the vacant space left as the fuel burns away. The fuel is mechanically fed in, above, or at the head of the sloping grate surface, and gradually descends under the combined influence of gravity and the moving bars. A dumping device is often added at the foot of the slope, by means of which the ash and refuse may be cleared from the furnace by movement of a lever.

Grates for anthracite coal, which develops an intense heat in the fire—not sending off much gas by the heat-absorbing process of distillation—are often made in the form of flat plates with a number of perforated nipples or little mounds raised half an inch above the general surface. The space between the air mounds fills level with dust and preserves the iron surface from heat and checks the adherence of clinker.

Firegrate bearers must never be rested upon the actual plates of furnace tubes of internally fired boilers, but must rest on angle bracket pieces riveted to the plates by not less than two rivets each. For convenience in handling it is usual to employ two or three bars in the length of a 6-ft. grate.

Hollow bars are necessarily (or more conveniently) made in one length ; this, however, makes them cumbersome, and is one cause of their being sometimes unpopular, for they are heavy to remove and replace when cleaning ; but where conditions are favourable, hollow bars with outlets to the surface and a steam-impelled supply of air through the bars will beget economy, by enabling a cheaper grade of fuel to be employed.

Coal Combustion and Smoke.

Bituminous coal cannot be burned smokelessly except under certain proper conditions. These are that the whole of the products of combustion must be allowed to travel over the full length of the fire towards the bridge ; that additional air must be admitted in fine streams above the fire after each fresh charge of fuel. The fresh air thus admitted mingles with the gases from the fuel, and the mixture must be hot enough to burn at the bridge, beyond which point there must be a clear space in which combustion may complete itself. The combustion chamber may with advantage be wholly or partially brick-lined. The draught necessary should be not less than 30 ft. per sec. To compel air to enter over the fire, dampers are sometimes fitted to the ash pits.

The most satisfactory results in coal combustion are obtained with the thickest possible fires, but the thickness of a fire depends on the draught and on the size of the fuel. The largest fuel will bear the thickest fire and the strongest draught. The three factors are interdependent.

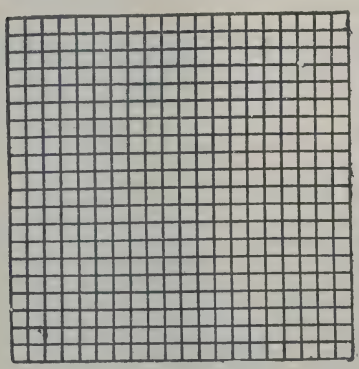
Where gases rise directly upwards from a grate amongst water tubes without the admixture by travel pointed out above, smoke is inevitable.

Fine dust fuel can now be burned at the rate of 40 lbs. per sq. ft. of furnace area per hour. Given furnace room, the cheapest fuel is usually the most economical. In practice the best


economy is that due to the use of the cheapest fuel which can be employed to raise the steam necessary.

The foregoing, of course, is qualified by the amount of ash in the coal where the extreme of removal is great.


With externally fired boilers which permit of a liberal design of furnace with suitably disposed firebrick, smoke can readily be prevented. It is less easy to secure perfect combustion with internally fired boilers, because of the difficulty of applying durable firebrick linings. But the question of smoke prevention is wholly one of air mixture and temperature. The burning gases must not too soon be brought into contact with cold plates or tubes.



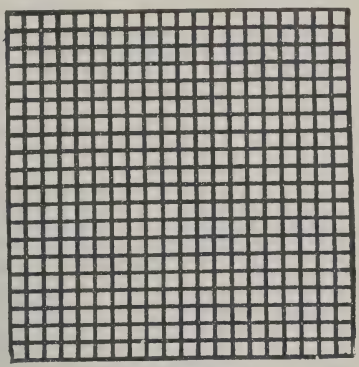
2. Light grey smoke.



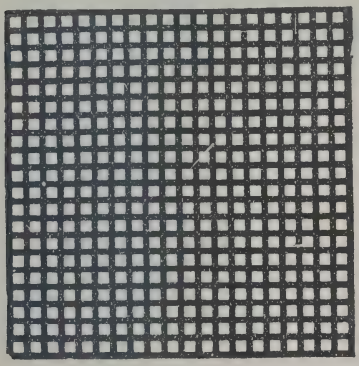3. Darker grey smoke.



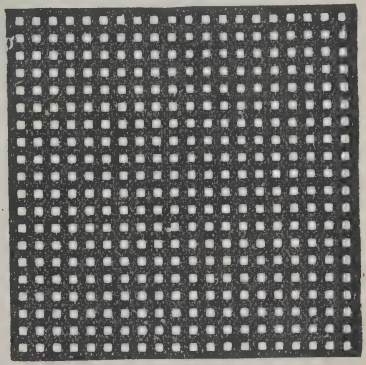4. Very dark grey smoke.



5. Black smoke.

FIG. 8.

In burning bituminous coal only a part of the total heat is generated at the grate. Part of the heat of the fuel is absorbed in driving off the volatile parts of the coal in gaseous form. This heat becomes latent and very materially reduces the furnace temperature. The gases pass off, containing a third of the total heat capacity of the coal, as well as the heat of gasification. Unless mixed with air and burned later, these gases may be totally lost. To burn bituminous coal not only demands thorough air mixture, but also a sufficient temperature, and the heat of the burning gases must not be abstracted by too early bringing them into contact with the cool surfaces of the boiler. Sufficient length and clear space must be afforded for combustion to complete itself, or black smoke will be formed. The furnace arrangements of the Lancashire boiler are correct in

form, but the water-cooled plates are a hindrance to certain combustion in the case of hand-firing: when high temperature mechanical-stoker conditions are obtained, however, it is much easier to prevent smoke with bituminous coal in a Lancashire boiler than it is in a water-tube boiler.

Water-tube boilers require a special setting to enable them to burn coal smokelessly. No furnace can be smokeless where the gases from the fire rise vertically and pass amongst cold-water tubes. Bituminous fuel can rarely be burned satisfactorily unless there is some extent of firebrick lining to protect the gases from too early chilling. Cross water-pipes in the inner flues of the Lancashire or Cornish boiler are bad, and will seriously hinder perfect combustion and produce black smoke.

Colour of Smoke.

The colour of smoke is best indicated by Ringelmann's smoke charts, which are numbered from No. 1, all white, to No. 6, all black. In fig. 8 intermediate sizes 2, 3, 4, 5, are shown, the ratio of line to space breadth being respectively, 10 : 90; 23 : 77; 37 : 63; and 55 : 45. Large charts drawn to these proportions and hung about 50 feet from the observer where the chimney top can be seen simultaneously, if possible, are very great aids in correctly estimating the relative blackness of smoke.

The four scales of the figure are called light grey, darker grey, very dark grey, and black, the extreme all white or all black being respectively no smoke or dense black.

MECHANICAL STOKERS.

Mechanical stokers are of two types, coking, and sprinkling. In coking stokers the combustion of the volatile hydrocarbons contained in the fuel is effected at a different portion of the grate surface from the combustion of the fixed carbon or coke. Sometimes an independent air supply is provided for the combustion of each portion of the fuel. In coking stokers the fuel is usually fed on to the front of a moving grate, the volatile portion being expelled and burnt near the front, while the fixed portion is burnt whilst being conveyed towards the back of the fire by the movement of the grate surface. The incombustible portion of the fuel (ash) is dropped into a chamber behind the grate. The movement of the grate surface may be reciprocating, or it may be a continuous movement backwards. The 'Underfeed' class of grate also belongs to the coking type. In this class the fuel is forced onwards and upwards in a central trough by a helix conveyor or ram; it rises along the whole length of the trough, to the apex of the grate surface which is like a flattened $\wedge$ in cross-section; the hydrocarbons are expelled and burnt near the apex, and the coke is supposed to be burnt whilst it is conveyed (often by a rocking movement of the overlapping grate-bars) to the sides of the furnace. In sprinkling stokers the fuel is thrown on to the grate surface by means of a throwing shovel or equivalent device, and almost the whole of the grate surface is utilised for the combustion of both volatile and fixed portions of the fuel. The furnace bars of this type of stoker are usually given a reciprocating movement in order to provide for the continuous and automatic removal of clinker.

The relative advantages of the two types of machine stokers depend largely on the class of fuel to be burnt; but, in general, it may be said that, if properly worked, the sprinkling type will usually generate more steam from a given boiler, and with at least equal efficiency. On the other hand, with coals containing a high percentage of volatile matter, machines of the coking type can be worked smokelessly with less skill on the fireman's part than is needed by sprinkling machines.

The Babcock and Wilcox Patent Improved Mechanical Chain Grate Stoker.

The grate of this stoker (*Babcock & Wilcox, Ltd.*), as illustrated on page 1493, consists of an endless chain of short interlocking cast-iron grate bars, linked together, running on angle irons and rollers, and driven by a revolving shaft and sprocket wheels at the front end of the stoker. The necessary power to drive the revolving drum is transmitted through a link chain and sprocket wheels from a shaft arranged either overhead or underground. The starting or stopping of the stoker, or the variation of speed, is effected through the Babcock and Wilcox patent gear box, which can be driven at varying speeds. This box forms an oil bath in which the gear runs, and also contains an efficient clutch for putting the driving gear out of action should any unusual strain arise from an obstruction on the grate. Any small repair, such as replacing a link, can be carried out with the stoker in place under the boiler; but in case of need the whole stoker can be brought out clear of the boiler, the frames being provided with wheels running on rails placed at the sides of the ashpit. The slack of the chain can be taken up from the front end of the stoker, thus avoiding the necessity for obtaining access to the back end for tightening the grate. The grate bars or links are of a special interlocking pattern, which allow the smallest coals to be used, and, while providing for an ample supply of air for the combustion of the fuel, prevent the influx of cold air at the back of the grate. The coal is fed over the whole width of the grate, and the depth of the fire is regulated by the adjustment of the vertically lifting fire-door.

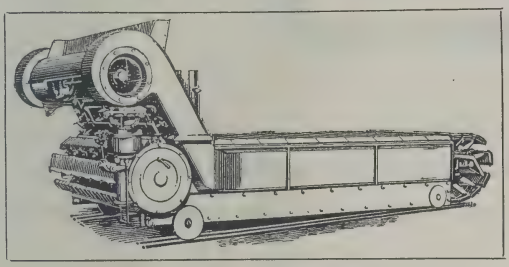
The feed of the coal is slow, and the gas evolved from the fresh fuel as it drops on to the grate readily perfects its combustion by passing over the incandescent fuel further on. The depth of the fire being regulated by a vertically lifting fire-door, the stoker can be adjusted in

UNDERFEED STOKER CO. LTD.

Coventry House, South Place

LONDON——E.C. 2

Combustion Engineers



MECHANICAL STOKERS

PULVERIZED FUEL EQUIPMENTS

(LOPULCO SYSTEM)

ASH CONVEYORS

AIR HEATERS

WATER HEATERS

'USCO' DRAUGHT INDICATORS

CO_2 THERMOSCOPES

F. 1784

SAVE COAL AND INCREASE BOILER EFFICIENCY

WILTON'S

Patent Forced Draught Furnaces burn low grade inferior fuels, such as coke, coke breeze, slack, trade or town's refuse instead of coal.

. . . . .

The Furnaces can be fitted with mechanical feeding appliances and self-cleaning apparatus, the workings of which are absolutely automatic.

. . . . .

Oil burners can be fitted to work in conjunction with or independent of coal firing.

Write for Booklet.

DEPT. H., THE CHEMICAL ENGINEERING & WILTON'S PATENT FURNACE Co. Ltd.
76 Victoria Street, London, S.W. 1.

By Adopting

WILTON'S FURNACES AND APPLIANCES

F. 1785

a moment to suit the class of fuel to be consumed and varying demands for steam, both by the depth of the fire and the speed of the grate. Where the special requirements of the work make it desirable, the stoker can be fitted with an arrangement of vanes for cutting off the air supply to a portion of the grate during periods of light load, thus enabling the general efficiency to be kept up under all conditions of work.

Babcock & Wilcox also manufacture forced draught boxed-in chain grate stokers for efficiently burning low-grade and other difficult fuels. When average quality coal is used forced draught is not necessary, and by simply opening the two front ashpit doors—an operation occupying only a few minutes—the stoker can be used as an ordinary natural draught plant.

The Bennis Sprinkler Stoker.

This apparatus, fig. 9 (*Ed. Bennis & Co. Ltd., Little Hulton, Bolton*), affords a perfectly regular output of steam under the most trying conditions; its flexibility permits a rapid response to urgent demands for increased steam. Minimum labour costs, low fuel bills, and smokelessness are a few of the leading advantages that accrue where the sprinkler stoker is in

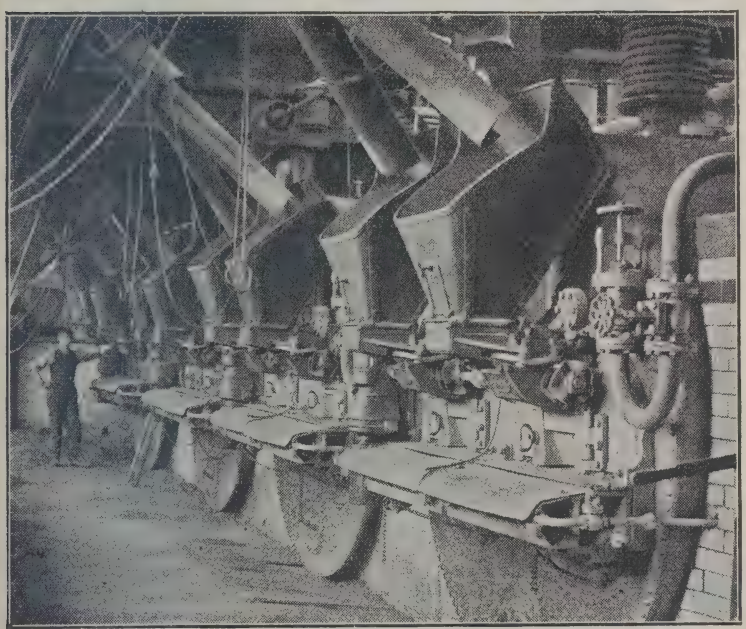


Fig. 9.

operation. The fuel fed into the hopper of the stoker—preferably mechanically fed—is led to the front of the pusher plate where it is evenly pushed over a ledge formed by the base of the feeding-box. The weight of fuel pushed is regulated, the fuel being deposited on to a flat plate called the shovel box, and then projected into the fire at intervals by an angular shovel actuated by patent pneumatic gear and effectually scattered over different portions of the grate where and as the fire requires it.

The pneumatic gear actuating the shovel, which includes an air cushion to obviate the possibility of shock or jar on the boiler front, is noiseless in operation.

An integral portion of the sprinkler stoker is the self-cleaning compressed air furnace, which prevents clinkering, and ensures perfectly clean fire-bars.

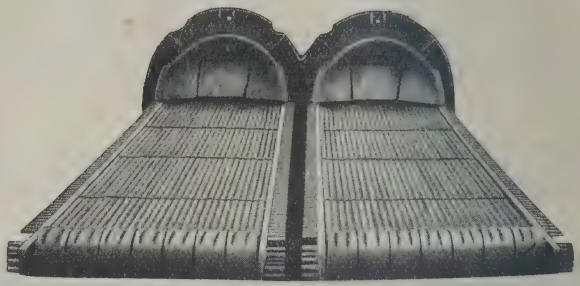


FIG. 10.—BACK VIEW OF THE BENNIS COMPRESSED AIR FURNACE.

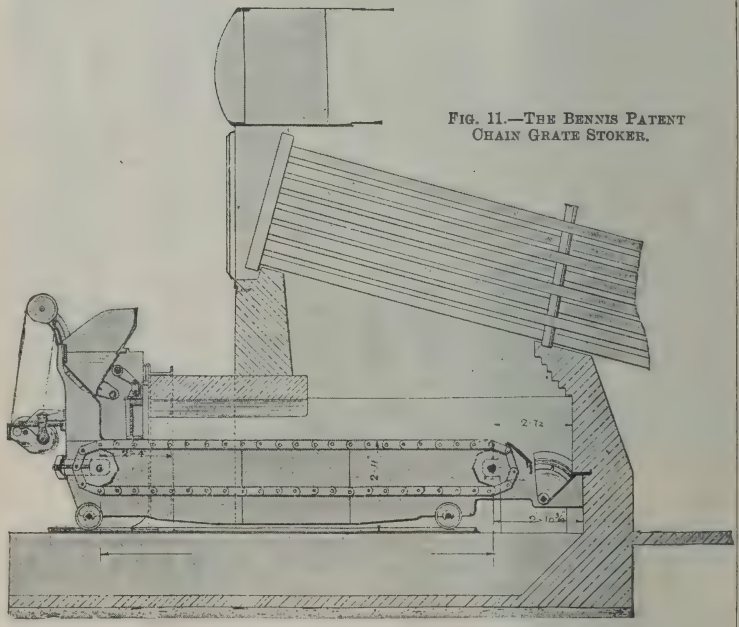


FIG. 11.—THE BENNIS PATENT CHAIN GRATE STOKER.

THE BENNIS HIGH TEMPERATURE SMOKELESS AND GRITLESS COKING STOKER.

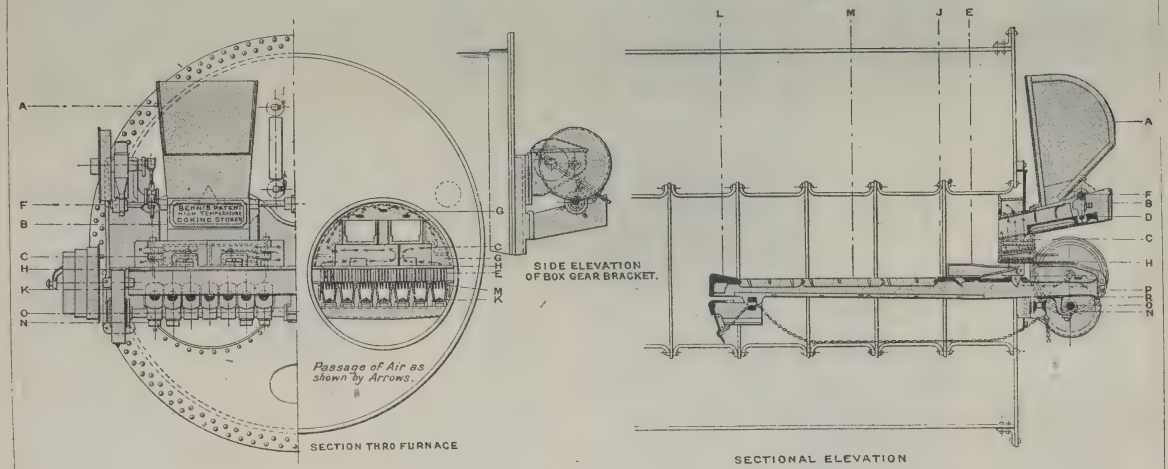


FIG. 12.

The Bennis Self-Cleaning Compressed Air Furnace Arranged for Hand-Firing in Collieries.

This furnace, fig. 10 (*Ed. Bennis & Co. Ltd., Little Hulton, Bolton*), thus arranged burns any class of fuel, large or small, and burns with special advantage poor quality and refuse fuels, pond settlings, coal pickings, large lumps or small, coke dust, shale, or material which contains a large percentage of ash or clinker. With such refuse it is stated to be able to generate steam as quickly as furnaces fitted with stationary bars burning a higher grade coal. The furnace consists of a strong cast-iron front lined with fire-brick, and fitted with a door of ample size for hand-firing.

The Bennis Patent Chain Grate Stoker.

This arrangement, fig. 11 (*Ed. Bennis & Co. Ltd., Little Hulton, Bolton*), is applicable to any water-tube boiler or to return-tube boilers—where the fire is under the boiler shell and the flame returns through the tubes—to brewers' coppers and similar furnaces. One of the principal advantages claimed for this particular chain grate is that a larger grate area can be obtained under the boiler than with those of other makes. The Bennis chain grate with the patent halved link was the first chain grate capable of satisfactorily burning fine slack coals. There are many improvements connected with this grate, in addition to the central improvement which gives to the grate its distinction.

The chain grate stokers at Neasden, London, N.W., the power station of the Metropolitan Railway, have all been fitted with the Bennis improved link, in the place of that of another make, with the result that considerable economies have been effected by using cheaper coal.

The Bennis Coking Stoker.

This stoker, fig. 12 (*Ed. Bennis & Co. Ltd., Little Hulton, Bolton*), is an improvement on the ordinary type of coker, as it ignites the fuel and cokes it at a more rapid rate than is possible with other types. It is claimed that the immediate result is a higher evaporative boiler duty and greater economical efficiency. It consists of a machine supplied with hoppers into which the fuel is fed. Beneath the hoppers are duplicate feed-boxes with reciprocating feeder rams which feed the coal into the furnace intermittently. A sight hole situated between the feed-boxes makes it easily possible to ascertain the state of the fire at any moment. The feeder rams are worked by means of levers. The rate of the coal feed is easily adjustable. Large air-cooled fire doors are provided beneath the feeder-boxes, their object being to pass cool air into the protection plates fitted immediately round the stoker front on the fireside, thereby preventing damage to the stoker front and also to the boiler.

The Underfeed Stoker.

In this stoker (*The Underfeed Stoker Co. Ltd.*) the fresh fuel for the maintenance of the combustion is continuously supplied from *below* the level of the fire and gradually advanced upward to the zone of combustion by the mechanism shown by fig. 13.

A is a retort or fuel magazine, in the lower or circular part of which revolves a taper-feeding worm which conveys the coal; B, terraced grates; C, windbox; and D, green coal; the latter being gradually pushed up to the burning point, commences to ignite at the point E, where it

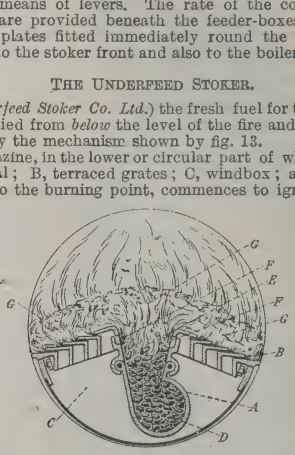


Fig. 13.—Cross-Section of Underfeed Stoker in the Flue of a Lancashire Boiler.

meets the incoming air from the tuyeres F and F'. Here the coal is coked, i.e. deprived of its volatile hydrocarbon gases. This being mixed with air introduced at this point through the air inlets of the fuel magazine, and escape being possible only by rising through the glowing coke above, the gases are heated to such a high temperature that they are completely consumed without smoke, while the combustion of the fixed carbon of the coal is completed by the air introduced through the apertures in the sides of the terraced grates B.

The effect of this method of underfeeding is to keep a continually clear, bright surface of incandescent fuel, combustion with even highly bituminous coals being complete.

The Underfeed Stoker Co.'s Class 'A' Stoker.

In this stoker, the unit idea of construction adopted combines the impelled draught fans and driving mechanism with the grate itself, with many resulting advantages. It will be seen from fig. 14 that the fans are mounted one on each side of the fuel hopper, with short, easy connecting air ducts leading to the air chambers of the grates. The driving motor, bolted to a base plate which forms the front side of the hopper, has its armature shaft extended at each end to carry the fan wheels. This shaft runs at from 850–1,090 r.p.m., and by means of a chain of the 'silent' type in conjunction with a worm and wheel, both encased in a common chamber, the speed is reduced to 9–10 r.p.m. From this mechanism a direct connection is made to the grate

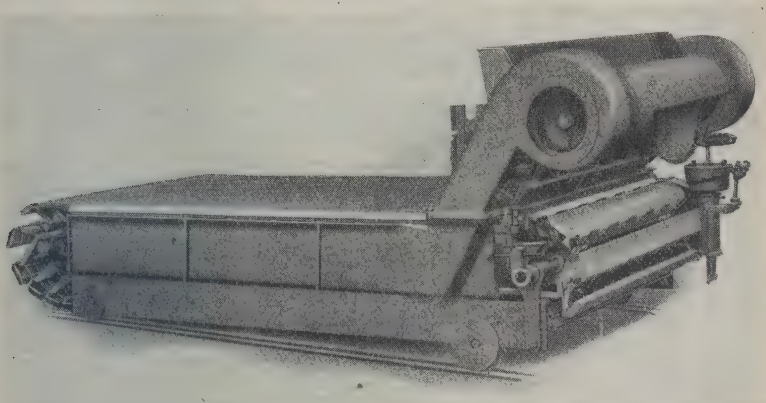


Fig. 14.

change-speed gear. This gear has eight different adjustments for speed, varying the travel of the grate from a combustion of fuel for 8 lbs. per sq. ft. to 60 lbs. per sq. ft. of grate area.

The whole of the driving mechanism, whether high speed or low speed, runs in dust-tight oil bath chambers, and the oiling arrangements are reduced to the greatest simplicity. Some of the advantages claimed are :—The reduction of the power required to drive the complete machine, comprising fans and grate, to one-third of one per cent. of the steam generated by the boiler ; the removal of the dust and dirt of the boiler room at the point where it is created, thus keeping a clean, well-ventilated room ; the avoidance of large air-carrying ducts, and what was formerly the necessity of breaking joints with duct at such times as it was necessary to remove the stoker from the furnace.

The air pressures employed in the air chamber of the stoker vary from $\frac{1}{4}$ in. to $\frac{7}{8}$ in., depending upon the nature of the fuel. The higher pressure is employed in such fuels as coke breeze, which is very fine in texture and lies very closely upon the grate.

The Underfeed Stoker Co.'s Class 'E' Stoker.

In this stoker, figs. 15 and 16 (*The Underfeed Stoker Co. Ltd.*), the fuel is deposited by coal-conveying machinery or hand labour, in a large hopper, and conveyed under the fire by means of a reciprocating sliding bottom which runs the full length of the trough. As the coal rises from the trough it is distributed to the sides of the furnace by means of moving bars.

The coking and burning coal is constantly carried, by the action of the moving bars, to the dumping trays along each side wall, where the resulting clinker and ash are deposited. These dumping trays are operated by levers on the outside of the furnace, enabling the ash and clinker to be automatically discharged.

The sliding bottom is actuated by a steam motor shown in fig. 15 at C, the number of strokes of which may be varied from one in three minutes to fifteen in one minute, each stroke carrying into the furnace about 6 lbs. of coal.

The movement of the piston of cylinder C is transmitted directly through the piston rod to the crosshead D, which is bolted to the sliding bottom E. This sliding bottom extends the full length of the retort. The block B has the same movement as D and E ; thus the coal is fed by

THE UNDERFEED STOKER CO.'S CLASS 'E' STOKER.

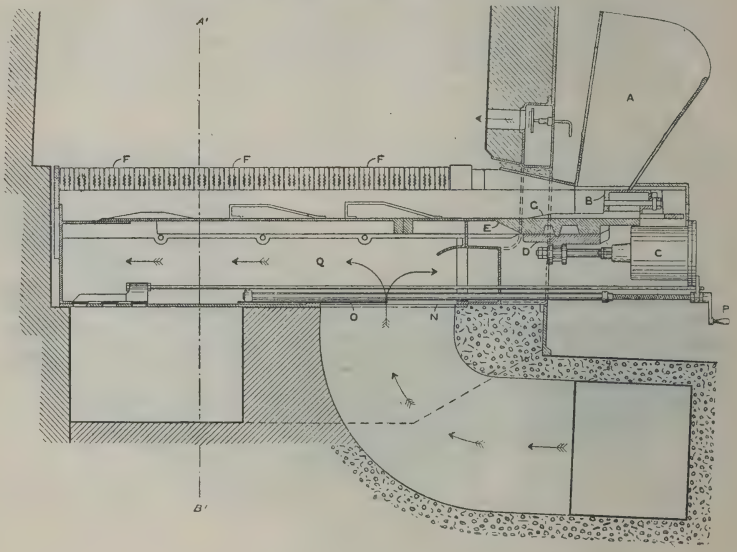


FIG. 15.


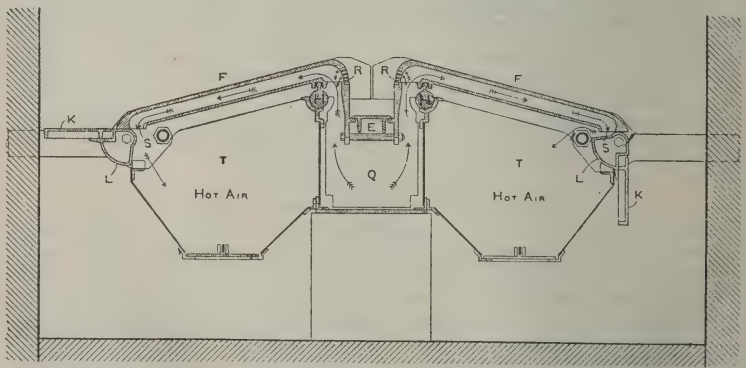


FIG. 16.

THE GALLAGHER-CROMPTON
BAFFLE BRIDGE
for Boiler Furnaces.

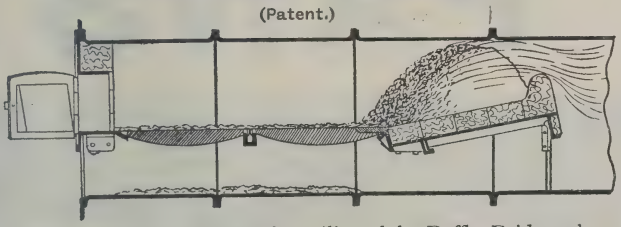(Patent.)



The above diagram shows the utility of the Baffle Bridge when 'cleaning out.' The live fuel, being banked up on the Bridge, prevents the inrush of cold air during the operation, thus obviating the cooling down of the flues, preventing loss of steam pressure, saving fuel, and enabling the fireman to remove the clinker more effectively and quickly, without withdrawing an undue amount of combustible matter along with it, while a much larger body of live fuel remains to restart the fires. The Baffle Bridge is suitable for all classes of coal and coke and can readily be adapted to all types of boiler furnaces with stationary grates, whether of the forced, induced, or natural chimney draught type.

SAVES FUEL.

MAINTAINS UNIFORM OUTPUT when the fires are being 'clinkered.'

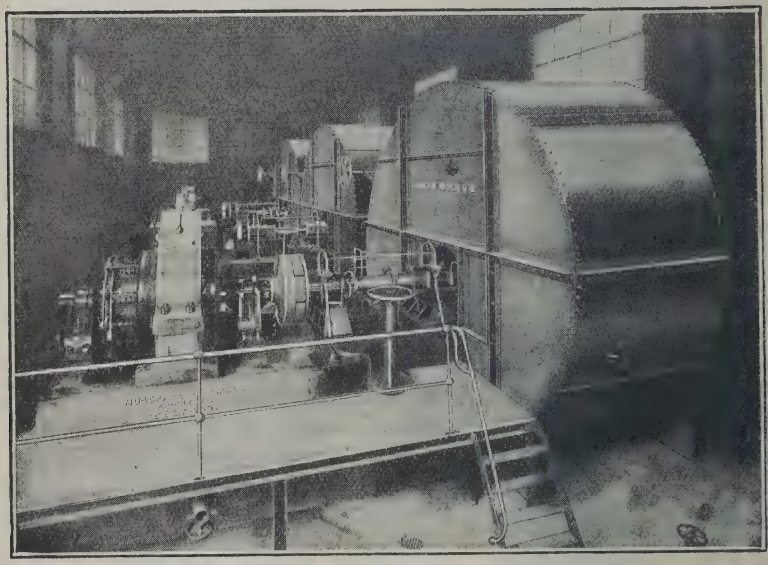
THE IDEAL FURNACE BRIDGE FOR USE WITH COAL, COKE OR COKE BREEZE.

GALLAGHER & CROMPTON,

ENGINEERS,

MANCHESTER: 3 Upper Cleminson Street, Salford.
LONDON: 3 Greechurch Lane, Leadenhall Street, E.C. 3.
(PHONE: AVENUE 4540.)
NEWCASTLE-ON-TYNE and N.E. COAST:
4 Beaconsfield Crescent, Low Fell, Gateshead-on-Tyne.

MECHANICAL DRAFT
MUSGRAVE'S 'ULSTER'
FANS



Forced or induced draft on Boilers—15 to 25 per cent. economy in fuel.

Smoke and Fume Removal. Drying and Ventilating.

SKILLED ADVICE AT CUSTOMERS' SERVICE.

MUSGRAVE & Co. Ltd.,

BELFAST · St. Ann's Iron Works - - - - Telegrams : CENTIGRAD.
MANCHESTER : 42 Deansgate - - - - - ,, CENTIGRAD.
CARDIFF : 24 Queen Street - - - - - ,, CENTIGRAD.
LONDON : Sardinia House, Kingsway, W.C. 2 - ,, MUSGRAVE, HOLB.
GLASGOW ; 11 Bothwell Street - - - - - ,, CENTIGRAD.

Codes :—LIEBER'S. A.B.C., *5th Edition.*
ENGINEERING TELEGRAPH, *2nd Edition.*

F. 1791

block B from the bottom of hopper A on to the sliding bottom E, which not only carries it to the back end of the furnace, but forces it to rise the full length of the trough. As the coal rises in the trough, or coking retort, it is flooded on to the bars F. These bars are alternately moving and fixed. The moving bars work transversely to the retort. The extent of the movement is from ½ in. to 1 in., depending upon the size of the furnace and other conditions. On the bottom of each moving bar are cast two lugs which engage with the bulb of the longitudinal rocking bars H, shown in fig. 11. These rocking bars in turn receive their movement through the agency of two spirals and nuts, which mechanism is entirely outside the furnace. The nuts are bolted to the crosshead D and therefore reciprocate with the bottom E. The reciprocation of the nuts causes the spiral to rock to and fro.

The movement of the grates, in addition to carrying the burning fuel to the sides of the furnace, also conveys the clinker down and deposits it on dump plates K, which are fastened to hinge-bar L This hinge-bar is actuated by a lever, conveniently placed outside the furnace, to dump the accumulation of ash and clinker into the ash-pit.

One of the important features of this stoker is the distribution of the air, which enters the stoker through the aperture N, controlled by the wind gate O. This wind gate is adjusted by the crank P. The air, upon entering the wind box Q, passes upward along each side of the trough, or retort, and is discharged, partly through the holes R, into the retort. The remaining air passes through the bars F, which are made hollow. These bars have no openings in their top surfaces, and no air can find its way into the fire above until it has passed through the aperture S at the bottom end of the bar, from which aperture it is discharged into the enclosed air chambers T. From here the air rises and passes through the small spaces between the bars into the coked fuel. The action of the air in passing through the bars keeps them cool, thus greatly prolonging their life. The heat taken off the bars in this way raises the temperature of the air in the air chambers T to from 350° F. to 400° F. The pressure of air in the chamber T varies from zero to ⅜ of an inch of water.

As the casing forming the air chambers T is sealed from the main ash-pit of the furnace there is no escape of air into the furnace when the dump plates K are dropped.

MECHANICAL DRAUGHT.

Various mechanical methods have been introduced for increasing the draught for boilers; this may be accomplished by an exhausting fan drawing the products of combustion through the flues, or by blowing air into a closed stokehold or an enclosed ashpit, and forcing the air through the fire with the necessary pressure, which varies according to rate of combustion desired. There is also a combination of these mechanical means, termed 'balanced draught,' in which air is forced under pressure into the ashpit by one fan and the gases are drawn off by an exhausting fan so arranged that there is neither pressure nor vacuum above the fire. Another method is the 'ejector draught' system in which the flue gases are drawn up the chimney by a high speed jet of air.

The advantage of mechanical draught produced by a fan is that the first cost is less than half that of a chimney: also the draught is independent of atmospheric conditions, can be varied instantaneously to suit the demand for steam, permits of economisers, and allows the reduction of the temperature of the waste gases to be carried to the lowest practicable point. It increases the capacity of the boiler, and permits of a more perfect combustion with less excess of air. It allows the use of lower grade and less expensive fuel, and so produces steam more cheaply.

Any desired rate of combustion from the normal of 20 lbs., to 30 or 40 lbs. of coal per square foot of grate area, may be maintained with a mechanical draught plant. The air volume required depends upon the style of boiler, condition of boiler setting, skilful stoking, the kind of coal used, and other factors; in round numbers 250 to 300 cub. ft. of air will be required per lb. of coal; these figures represent about 12 per cent. and 10 per cent. CO_2 respectively.

To drive a fan requires about ½ to 1 per cent. of the total power generated. The full benefits of mechanical draught are only obtained where means are employed to utilise to the fullest extent the heat of the flue gases (by means of superheaters or economisers) before the latter are discharged into the chimney. The cost of installing a fan and engine is very much less than the cost of a chimney, so that mechanical draught is economical in first cost.

Fan draught enables a heated air supply to be employed, and it is said that by heating the air supply to 180° the fire temperature will be raised an additional 360°, owing to better combustion, etc.

The Musgrave System.

(Musgrave & Co. Ltd., Belfast.)

To obtain flexibility and perfect control in a mechanical draft installation, an independent fan drive by steam engine or electric motor is preferable to a drive from a line shaft by means of belt or rope. The speed of the engine or motor can be immediately adjusted to suit the varying draft requirements, and in suitable cases an entirely automatic control can be utilised.

To obtain maximum economy the design of the fan must be correctly proportioned to the

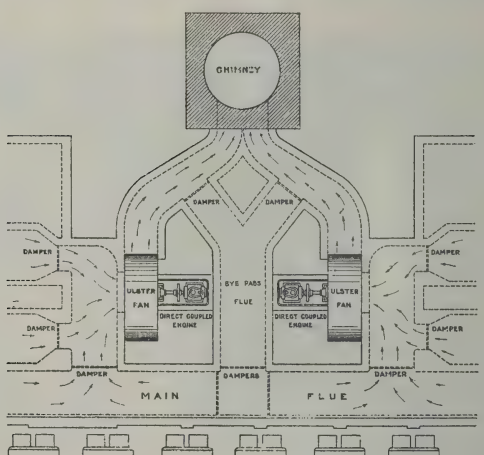


Fig. 17.

required duty, so that the air supply necessary for efficient combustion may be obtained with the minimum expenditure of power under all conditions. All flues should be as short and direct as possible, avoiding all unnecessary bends, changes of section and obstructive dampers.

Reliability is assured by the provision of ample bearing surface on engine and fan bearings, liberal design throughout, an efficient water cooling system to the fan bearings in the case of induced draft work, and fans of sound scientific and mechanical design.

Fig. 17 shows a well-designed arrangement of two engine-driven induced draft fans working in conjunction with a large battery of Lancashire boilers. The plant is compact and accessible, and the passage of the gases from the boilers to the stack direct and unobstructed.

The Sturtevant Systems.

Figs. 18 to 19 show the various systems installed by the *Sturtevant Engineering Co. Ltd., London*, which are in use in power stations, workshops, factories, warships, passenger and freight steamers, etc.

Induced Draught (fig. 18). This is the most commonly adopted system, as it is generally applicable to an existing boiler installation, and is economical in operation. The products of

combustion are drawn through the flues, economisers, etc., by an exhaust fan, and discharged to an existing stack or to a short length of steel chimney built just high enough to carry the gases above surrounding buildings. The fan is fitted with water-cooled bearings.

Forced Draught (fig. 19) is advantageous for burning small or low grade fuel. The fan blows air under pressure into the closed ashpit, and the gases are discharged either to existing stack or short steel chimney. For ship use the closed stokehold method is generally used.

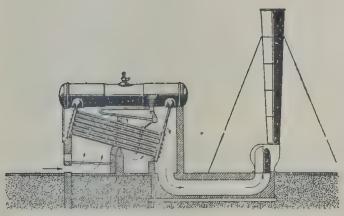


FIG. 18.

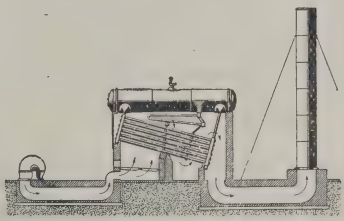


FIG. 19.

Balanced Draught (fig. 20) is a combination of induced and forced draught. Air is forced under pressure into the closed ashpit by one fan, and the gases are drawn off by an exhausting fan so arranged that there is neither pressure nor vacuum above the fire. This is only used in special cases, owing to the cost being much higher than either fig. 18 or fig. 19.

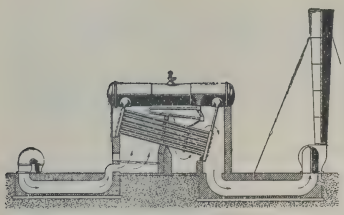


FIG. 20.

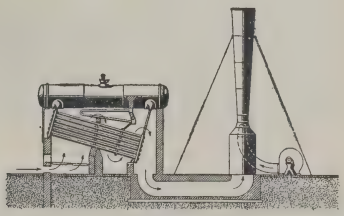


FIG. 21.

Indirect Induced Draught with Ejector (fig. 21). The combustion gases are drawn up a chimney of special design by the effect of a high speed jet of air, which if desired can be mixed with a portion of hot gases. This system is of special value in cases where the flue gases are corrosive or excessively hot, as they need not pass through the fan. This plant requires very careful designing, otherwise the efficiency is very low indeed.

THE HOWDEN FORCED DRAUGHT SYSTEM.

The principles on which this system of forced draught (*James Howden & Co. Ltd., Glasgow*) is based are (1) the supplying under pressure of hot air for combustion in quantities suited to the quality of coal used; and (2) the utilisation of the heat in the waste gases for the purpose of raising the temperature of the air for combustion.

Briefly stated, the following are the principal advantages of this method of combustion :—

(1) Great increase in the steaming power of the boilers. (At least 30 per cent. and probably much more over best natural draught conditions. Probably as much as 50 per cent. could be obtained if necessary, though quite such a high rate is not recommended for regular working.)

(2) Unequalled economy in fuel. (At least 10 per cent. and frequently 15 per cent. per lb. of water evaporated over the best natural draught conditions and probably much more.)

(3) Reduced size and weight of boilers for a given power, giving correspondingly additional space available for other purposes.

(4) Complete control of combustion and steam supply under all conditions of the atmosphere. (With this system of draught the volume and pressure of the air for combustion is entirely controlled by the fan and the manipulation of the air valves in the furnace fronts.)

(5) Capability of burning all classes of steam coal. Low grade fuel can always be burned satisfactorily where this system of forced draught is applied. Under natural draught conditions this is often difficult and sometimes impossible owing to the inability of supplying the greater volume of air always required where the greater quantity of inferior fuel is used. For the reasons stated in (4) this difficulty is surmounted, the additional quantity and pressure of air necessary being easily obtained by running the fan a little faster.

(6) Preservation of the boilers on account of the more uniform temperature maintained in the furnaces. Boilers fitted with the Howden system of draught are less liable to the leakage and trouble generally present under natural draught conditions; the reasons being that no cold air ever enters the furnace during the period of working, and much greater uniformity of temperature is maintained than under natural draught conditions. Sudden alternations from heat to cold, and the consequent contraction and expansion, have an injurious effect on the internal parts of steam boilers, and such sudden fluctuations in temperature are prevented by the use of this system. When the furnace doors are opened the air pressure in the ashpit immediately ceases, and only the hot air from the upper air supply valve passes into the furnace, first in a direction vertically downwards, thereby forming a hot screen over the furnace mouth and preventing access of cold air. Such conditions when firing or cleaning fires are also conducive to economy. The benefit of the system regarding fluctuations of furnace temperature is most marked and appreciated when it is compared with the working conditions of the closed stokehold system. In the latter a considerable air-pressure is generally used, so that the fluctuation in temperature of furnace is both rapid and violent and puts a severe strain on the boiler structure. This is quite obviated in the Howden system.

(7) Reduction of smoke.

(8) No high chimney required. For land installations a small iron funnel, sufficient to carry off the waste gases clear of the surrounding buildings, is ample for the purpose.

(9) Coolness in boiler-room and ease of working. With this system the air casing, reservoirs, and furnace fronts on the boiler end effectually prevent radiation into the stokehold, which is thereby kept quite cool, making the work easier than with the closed stokehold system, which is very trying for the firemen.

(10) Great reserve power available in case of emergency.

The general arrangement of the Howden system consists of a fan (driven by a steam engine, electric motor, or belt), which supplies the air for combustion, discharging it through a conduit into the air-heating chambers. In these air-heating chambers the air circulates round a series of tubes. The waste gases, after leaving the boiler, and before entering the uptake, pass upward through these tubes in the air-heating chambers, or in the Lancashire type of boiler horizontally through tubes in air heaters in the side flues, thus giving up part of their heat to the air, which then passes along passages into air-tight reservoirs or chambers surrounding the furnace fronts. From these chambers the air is passed through furnace fronts by valves into the ashpits, and over the fires through air distributing boxes in proportions exactly suited to the kind of fuel used and the rate of combustion required, thus ensuring a very perfect combustion of fuel.

In the furnace fronts the ashpit air valves are operated by one handle, and a safety locking device is also fitted, which prevents the furnace door from being opened until the ashpit air valves are closed. In marine type boilers, retarders are also fitted (one in each boiler tube).

Silley patent smokebox door fastenings form an important adjunct to the forced draught apparatus. These fastenings ensure a thoroughly air-tight smokebox and entirely obviate the trouble usually experienced with buckling, etc., in doors secured by other methods.

At the present time there are about 6,600 installations of the Howden system fitted, and the number is rapidly increasing every year. The aggregate i.h.p. of these is over 24,000,000. They comprise steamers for almost all the principal steamship companies of the world, and a considerable number of installations on land boilers. Many warships, and the principal fast Channel steamers, are also fitted with the system.

PULVERISED COAL.

(Contributed by L. C. Harvey, London.)

General.

Coal in pulverised form was first successfully applied to cement burning kilns. This method of heating cement kilns has now become universal practice, the steady long flame with its resulting continuous and unvarying heat development inside the rotary kilns being ideal for this work. Moreover, the ash which has always been a source of trouble in other applications does not apply in this industry, where ash forms a useful addition to the ultimate product.

For cement burning the coal is reduced to a fineness of about 80 per cent. through a 100-mesh screen (10,000 holes to the square inch). This is now considered to be a coarse degree of fineness.

For metallurgical work coal is reduced to 85 per cent. through a 200-mesh screen (40,000 holes to the square inch). This fine degree of coal-dust, coupled with a low pressure on the air supply, thereby decreasing the velocity of the gases passing through the furnace or boiler, has resulted in the removal of the former troubles due to the formation of ash slag in chequer-work, on metal to be heated, or on boiler tubes.

Mill House Plant.

Fig. 22 shows an outline arrangement of a typical coal pulverising plant.

The coal delivered by rail wagon is crushed to ¾-in. cube and passed up the No. 1 elevator to the crushed coal storage bin.

From this bin the crushed coal is fed by gravity into the rotary drier, wherein the moisture content of the coal is reduced to 1 per cent.

From the drier the coal passes up No. 2 elevator to the dried coal bin, passing over a magnetic separator pulley in order to remove iron bodies from the coal, and is fed by gravity into the pulveriser.

The latter may be a mill of the 'air separator' or 'screen separator' type.

Screen separator mills, such as the 'Fuller,' made by the Fuller Lehigh Company, have been universally used in the cement industry for pulverising the coal and for grinding the cement clinker. In this type of mill the fine particles of coal are thrown tangentially through the mill screen; the fine product is then raised by means of No. 3 elevator to the powdered coal bin, or it is delivered direct into the screw conveyor or into a Fuller-Kinyon pump, for transport to the bins at the furnaces.

In the air-separator type of mill the fine coal-dust is exhausted through a fan and deposited by means of the upward air current into the cyclone collector, whence it is delivered into the powdered coal storage bin, or direct on to the screw conveyor in the manner shown in the figure.

A great number of the American companies supplying special powdered coal apparatus, or systems, use the screen separator 'Fuller' mill, but certain firms prefer the air-separator type, such as the 'Raymond' or special 'Fuller' mill, whilst the Bonnot Company, which controls the Holbeck patents, supplies the 'Bonnot' type of air-separator mill.

'Griffin' roller mills are also in use in a few instances for pulverising coal.

The air-separator mill combination requires considerably more power, but tends towards a cleaner mill house than the screen separator outfit.

Coal Driers.

These are fitted with furnaces, either hand fired, stoker fired, or arranged for burning powdered coal. The hot gases from the furnace should not pass through the drier in direct contact with the coal until these gases have been considerably cooled off. Some of the driers are fitted up so that the hot gases do not pass over the coal before they have travelled the full length of the drier through a central tube, when they are diverted into the outer portion of the drier and pass back to the furnace end in direct contact with the coal.

The average coal consumption in the drier is about 20 to 30 lbs. of coal per ton for a reduction of 10 per cent. in the moisture content. When coal is very wet it then becomes necessary to pass the coal twice through the drier. The final temperature of the coal leaving the drier should not be above 250° F.

Transportation of Pulverised Coal.

The original method of transporting coal-dust was by means of weathertight screw conveyors, and this method, Fig. 22, p. 1796, is very extensively used at the present time.

The Quigley Furnace Specialities Co. have recently introduced an excellent system of transporting the coal-dust from 'blowing tanks' situate at the mill house. The coal-dust is forced from these tanks by means of compressed air applied to the top of the coal, and the coal is forced through 3-in. or 4-in. pipes to the bins at the furnaces.

Semi-automatic solenoid controlled switch valves are placed at the branches from the main supply pipe. This method of transportation is very compact, convenient, and successful in use.

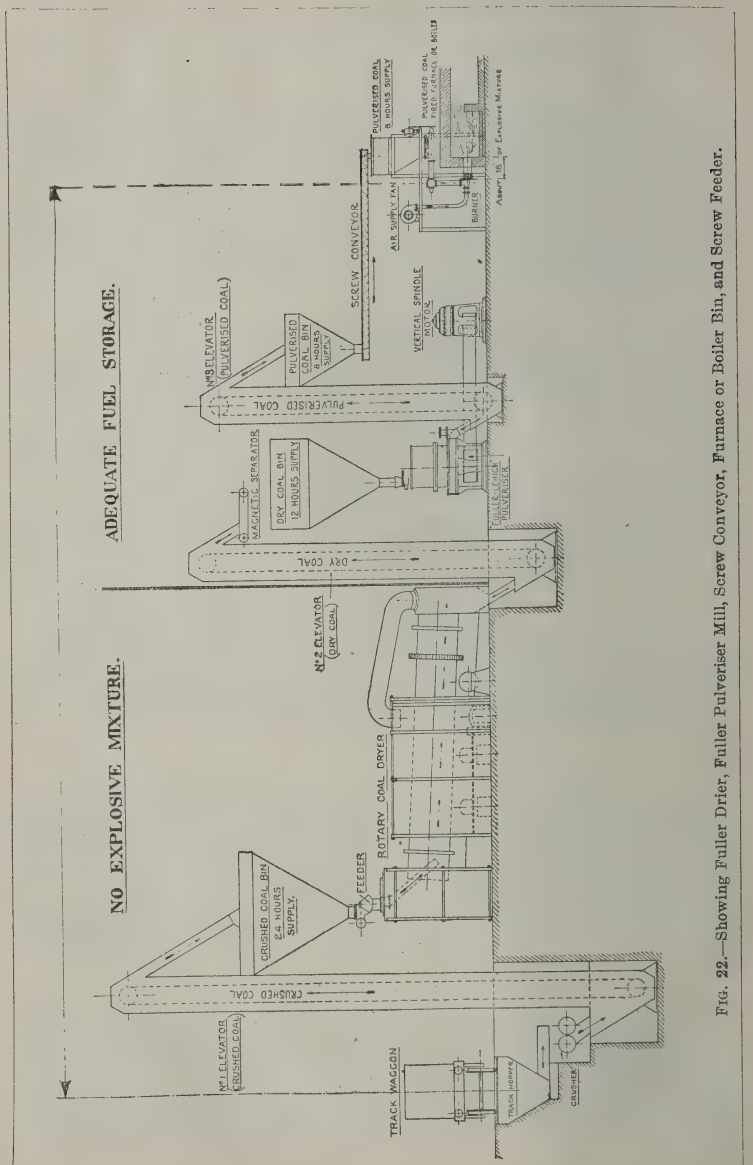


FIG. 22.—Showing Fuller Drier, Fuller Pulveriser Mill, Screw Conveyor, Furnace or Boiler Bin, and Screw Feeder.

THE FULLER-KINYON PULVERISED COAL PUMPING SYSTEM.

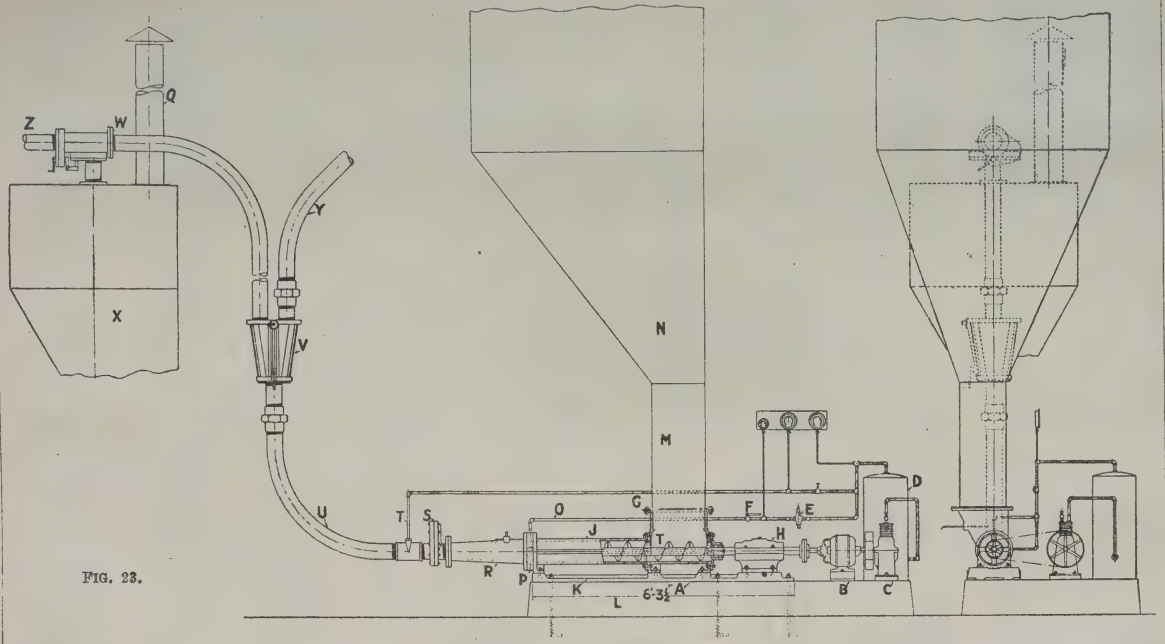


FIG. 23.

A, Fuller-Kinyon 6" Pulverised Material Pump. B, Electric Motor. C, Air Compressor. D, Air Receiver. E, Pressure Reducing Valve.
F, Air Valve. G, Pump Hopper. H, Main Bearing. I, Forcing Worm. J, Pump Barrel. K, Pump Base. L, Foundation.
M, Supply Spout. N, Material Bin. O, Aerating Line. P, Aerating Ring. Q, Vent Stack to Receiving Bin. R, Reducing Nozzle.
S, Single Diverting Valve. T, Conduit Clearing Air Line. U, Convertor Conduit. V, Distributing Valve. W, Double Diverting Valve.
X, Receiving Bin. Y, Branch Conveyor. Z, Continuation of Conveyor.

In another system, the 'air-transmission system,' the coal-dust is mixed at the mill house with approximately 50 per cent. of the air required for combustion. The mixture is forced through the supply pipes at a velocity of about a mile a minute, and ordinary branch pipes are taken to the furnaces. No furnace bins are therefore needed with this system. Care must be exercised in arranging this system to suit existing conditions, so that danger of accidental explosion taking place in conveyor mains may be realised and necessary precautions taken.

The Fuller-Kinyon system of pumping powdered coal through supply pipes has now been developed by the Fuller Engineering Company, whereby a small quantity of air delivered by a pressure blower is pumped into the powdered coal to prevent 'packing,' so that the fuel can be transported long distances with a minimum of power. Ordinary pipes are used which can be laid underground or placed overhead in the same way as for water pipes. (See Fig. 23.)

Feeders.

Whenever coal-dust is supplied to furnace bins, feeders fitted with screws or worms must be employed to introduce the dust into the air-blast as it enters the furnace.

The screw or worm of the feeder is usually operated by means of a variable speed motor, but the Quigley Company now supply feeders with adjustable jaws to govern the supply of dust, and in this way constant-speed motors can be used.

In the Holbeck air-transmission system no feeders at all are required.

Burners.

A coal-dust burner is usually of very simple construction. It merely consists of an air-carrying supply pipe into which the coal-dust is fed by the screw feeder.

Some special burners have been devised whereby a premixing of coal-dust and air is effected before the final stream of air for combustion is introduced.

Power of Motors.

Mill House Plant (for 40 tons per 10 hours).

Preliminary crusher (not required with slack coal)	15 to 20 h.p.
Nos. 1, 2, and 3 elevators	5 h.p. each.
Drier	10 to 15 h.p.
Pulveriser mill, screen separation	60 „ 75 h.p.
„ „ air „	80 „ 100 h.p.

(Mill capacity, 4 to 5 tons per hour.)

Fuel Transportation (say 5 tons per hour, 300 ft. and 40 ft. lift).

*By screw conveyor	15 h.p. (motor).
†By air pressure	75 „ (compressor).
*By air mixture	60 „ (fan mixer).
*By screw pump	20 „ (screw pump and compressor)

* Continuous operation. † Intermittent operation.

Coal-dust Feeders.

Constant or variable speed motors . . . . . 1 to 3 h.p.

(½ h.p. motors are sometimes used, but are generally unsuitable under mill conditions.)

Air Fans.

No accurate figure can be given for the power required for air fans, as this will depend upon the size of burner used. The total quantity of air per pound of coal allowed is usually 180 cub. ft., 120 cub. ft. being supplied at a pressure of 3 or 4 ozs. per square inch; the remainder is induced at the burner

Progress in America.

The amount of pulverised coal used in the U.S.A. up to 1912, chiefly in the cement industry, was approximately six million tons per annum. Since this date in the copper, steel, and iron industries for locomotives and boiler work, and including the cement industry, the annual usage of coal in powdered form has been increased to some 18 million tons. Pulverised coal firing has been adopted for use at a 200,000 kw. super-power station.

Self-contained Pulveriser Units.

The figures given in the table on page 1803 represent the capital outlay required for complete mill-house plants of various capacities. The initial cost of same, with transportation system, furnace bins, motors feeders, etc., necessitates an expenditure which, in many cases, will or can only be contemplated when actual results have proved that the collective advantages and economies thereby introduced render such an investment wholly attractive.

For smaller fuel requirements and for testing pulverised-coal firing upon individual boilers or furnaces, a self-contained pulveriser unit should be installed. The 'Aero,' 'Raymond,' or 'Stroud' machines are of this type, but built upon entirely novel principles is the 'Atritor' unit, which embodies the use of eddy currents of air within the grinding zone for the dual purpose of rapid agitation and deflocculation of coal particles and the exposure of maximum surface for driving off moisture. In this unit, therefore, is combined for the first time the operation of drying and pulverising.

Coal containing comparatively high percentages of moisture—20 per cent. or so—can be fed into the 'Atritor' pulveriser, and through the medium of hot air, up to 500° C., the resultant fuel powder will be practically bone dry. Coal containing 5 per cent. to 10 per cent. of moisture can be dried and pulverised with air at atmospheric temperature, the resultant degree of fineness depending upon the humidity in the atmosphere at the time of grinding.

By the installation of self-contained units the value of pulverised-coal firing for any specific purpose can be ascertained, so that the question of capital outlay upon a complete mill-house plant and attendant equipment can be based upon the results ascertained in this manner.

Pulverised Coal for Locomotives.

The advantages for pulverised coal, lignite, etc., as a locomotive fuel are—
30 to 40 per cent. fuel economy as against hand-firing, running mileage and cylinder power of engines increased, cost of firing tools and repairs to fire grating eliminated, no cinders or sparks from the smoke stack, reduction of fire-box strains, firing conditions with pulverised-coal firing analogous to oil-firing with similar fuel-bunkering facilities. Any local fuel within reason can be used.

The following fuels have been and can be used:

CHICAGO AND NORTH-WESTERN RAILWAY.

	A	B	C	D
	Per Cent.	Per Cent.	Per Cent.	
Illinois bituminous	3·18–15·36	34·47	10·00	10,720–12,400
Kentucky bituminous	1·9 – 2·8	36·54	8·00	13,964
North Dakota lignite	1·8 –47·25	40·91	9·32	10,960

NEW YORK CENTRAL RAILWAY.

Pennsylvania bituminous	0·51–21·63	59·17	8·94	13,671
	0·95–30·85	65·19	13·21	14,096
Brazilian bituminous	1·73– 9·50	34·73	23·14	8,820
	9·15–29·52	60·50	29·35	10·177

THE DELAWARE AND HUDSON RAILWAY.

Pennsylvania anthracite culm	0·5 – 8·3	72·09	12·22	12,000
" bituminous	0·5 –33·0	57·50	9·0	13,750

A. Range of moisture. C Volatile matter.
B. Ash. D. Calorific value. B.T.U. per lb. (dry).

On the Lehigh Valley Railway a locomotive has been run on a mixture of 55 per cent. raw anthracite silt and 45 per cent. bituminous coal. Full steam pressure is maintained easily at all times, and the anthracite silt contains 38·42 per cent. of ash, and has a B.T.U. value of 9,675, while the soft coal which is mixed with this has an ash content of 11·6 per cent. and a B.T.U. value of 12,650. Analyses of these coals are as follows:—

Anthracite Silt.	Per Cent.	Soft Coal.	Per Cent.
Moisture	2·26	Moisture	1·90
Volatile	10·39	Volatile	36·59
F.C.	49·30	F.C.	49·89
Ash	38·42	Ash	11·60

Some approximate savings in fuel consumptions that have been realised in practice are as follows :—

Boilers—80 per cent. efficiency, and savings of 15 to 50 per cent. over hand firing.

Open-Hearth Steel Furnaces—a saving of 300 lbs. per short ton of steel as against producer gas for small plants.

Puddling Furnaces—a saving of 1,500 lbs. per short ton of iron over hand firing, and from 300 to 500 lbs. over mechanical stokers.

Reheating Furnaces—20 to 40 per cent. saving over hand firing.

Heavy Forge Furnaces—25 per cent. saving over hand firing.

Light Forge Furnaces—20 to 40 per cent. saving over hand firing.

Annealing Furnaces—30 per cent. saving over hand firing.

Tinning and Galvanising—20 to 30 per cent. saving over hand firing.

Sheet and Pair Furnaces—30 to 40 per cent. saving over hand firing.

Copper Smelting Furnaces—40 per cent. saving over hand firing.

Locomotives—30 to 50 per cent. saving over hand firing.

The output from many of these furnaces has been greatly increased by reason of coal-dust firing, what are known as 'stickers' in the tin-plate trade having been reduced 60 per cent., whilst the quantity of tin and zinc used has been reduced considerably owing, in a great measure, to the improved surface of the metal, and also to the more even heating of the kettles.

Reduced oxidisation of steel and iron heated in powdered coal-fired furnaces and increased life of annealing boxes have accounted for an annual saving of many thousand pounds in some works.

TABLE SHOWING NUMBER OF PULVERISER MILLS REQUIRED FOR INSTALLATIONS OF VARIOUS CAPACITIES, LABOUR HOURS, COAL DRIERS ETC.

Daily Output in Tons.	Output per Hour in Tons.	Number and Size of Mills.		Number and Size of Driers.		Number of men per Shift.	Labour. Hours per Day.	No. 8-Hour Shifts per working Day.	Maximum Output per Shift. Tons.	Approx. Output per Labour Hour. Tons.
		Running Plant.	Stand-by Plant.	Running Plant.	Stand-by Plant.					
		Ins.	Ins.	Tons.	Tons.					
5	½	1-24	none	1-4	none	1	16	2	4	0·32
10	2	1-33	,,	1-4	,,	2	16	1	16	0·62
15	2	1-33	,,	1-4	,,	2	32	2	16	0·17
20	2	1-33	1-33	1-4	,,	2	32	2	16	0·625
30	2	1-33	1-33	1-4	,,	2	32	2	16	0·94
40	2	1-33	1-33	1-4	,,	2	32	2	16	1·25
50	4	1-42	1-42	1-4	,,	2	32	2	32	1·55
60	4	1-42	1-42	1-4	,,	2	32	2	32	1·87
70	4	1-42	1-42	1-4	,,	2	32	2	32	2·19
80	4	1-42	1-42	1-4	,,	2	48	3	32	1·63
90	4	1-42	1-42	1-4	,,	2	48	3	32	1·87
100	6	3-33	1-33	1-8	,,	2	48	3	48	2·1
150	8	2-42	1-42	1-8	1-8	2	48	3	64	3·1
200	12	3-42	1-42	1-10	1-10	3	48	2	96	4·2
250	12	3-42	1-42	1-14	1-14	3	72	3	96	3·5
300	16	4-42	1-42	1-14	1-14	3	72	3	128	4·2
350	16	4-42	1-42	1-14	1-14	3	72	3	128	4·9
400	20	5-42	1-42	2-10	1-10	4	96	3	160	4·2
450	20	5-42	1-42	2-10	1-10	4	96	3	160	4·7
500	24	6-42	1-42	2-14	1-14	5	120	3	192	4·2
550	24	6-42	1-42	2-14	1-14	5	120	3	192	4·6
600	28	7-42	2-42	2-14	1-14	6	144	3	224	4·2
650	28	7-42	2-42	2-14	1-14	6	144	3	224	4·5
700	32	8-42	2-42	2-14	1-14	6	144	3	256	4·9
750	36	9-42	2-42	4-10	1-10	7	168	3	288	4·5
800	40	10-42	3-42	4-10	1-10	8	192	3	320	4·2
850	40	10-42	3-42	6-10	1-10	8	192	3	320	4·4
900	40	5-57	1-57	4-14	1-14	6	144	3	320	6·25
950	48	6-57	1-57	4-14	1-14	6	144	3	384	6·6
1,000	48	6-57	1-57	4-14	1-14	6	144	3	384	6·9

In a properly designed plant, and with due attention to ordinary common-sense regulations there is *no fear of explosion* from the coal-dust, and, as has been already stated, the old troubles with the ash slag have been overcome.

There are certainly many instances where the use of fuels in powdered form would show a handsome return for capital invested, and the following table will enable an estimate to be made as to economy that can be expected.

APPROXIMATE COST OF COMPLETE MILL HOUSE, PLANTS AND OPERATION EXPENSES.

(Average 1920 Figures.)

Daily Output in Tons.	Labour, Cost per Ton.	Power, Cost per Ton.	Drier Fuel, Cost per Ton. 2 per cent. of coal dried.	Repairs, Cost per Ton.	Without Stand-by Plant.				With Stand-by Plant.			
					Cost of Mill House Plant, including Building.	Interest per Ton at 6 per Cent.	Depreciation per Ton at 10 per Cent.	Total Preparation. Cost per Ton.	Cost of Mill House Plant, including Building.	Interest per Ton at 6 per Cent.	Depreciation per Ton at 10 per Cent.	Total Preparation. Cost per Ton.
	s. d.	*s. d.*	*d.*	*d.*	£	*s. d.*	*s. d.*	*s. d.*	£	*s. d.*	*s. d.*	*s. d.*
5	5 10	3	$10\frac{1}{2}$	4	3,500	2 $9\frac{1}{2}$	4 8	17 6	—	—	—	—
10	2 $11\frac{1}{2}$	2 10	$10\frac{1}{2}$	4	6,700	2 8	4 $5\frac{1}{2}$	14 $1\frac{1}{2}$	—	—	—	—
15	3 11	2 10	$10\frac{1}{2}$	4	6,700	1 $9\frac{1}{2}$	3 0	12 $8\frac{1}{2}$	—	—	—	—
20	2 11	2 10	10	4	9,300	1 9	2 $10\frac{1}{2}$	11 $6\frac{1}{2}$	10,300	1 $11\frac{1}{2}$	3 3	12 $1\frac{1}{2}$
30	1 $11\frac{3}{4}$	2 10	10	4	9,300	1 3	2 1	9 $3\frac{3}{4}$	10,300	1 $4\frac{1}{2}$	2 $3\frac{1}{2}$	9 $7\frac{3}{4}$
40	2 2	2 8	10	4	9,300	11	1 7	8 6	10,300	1 $0\frac{1}{2}$	1 9	8 $9\frac{1}{2}$
50	1 2	2 8	10	4	11,100	$10\frac{1}{2}$	1 6	7 $4\frac{1}{2}$	12,700	1 0	1 $8\frac{1}{2}$	7 $8\frac{1}{2}$
60	1 0	2 8	10	4	11,100	9	1 3	6 10	12,700	$10\frac{1}{2}$	1 5	7 $1\frac{1}{2}$
70	10	2 8	10	4	11,100	$7\frac{1}{2}$	1 1	6 $4\frac{1}{2}$	12,700	$8\frac{3}{4}$	1 $2\frac{1}{2}$	6 $7\frac{1}{2}$
80	1 1	2 6	10	$3\frac{3}{4}$	11,100	$6\frac{1}{2}$	11	6 $2\frac{1}{2}$	12,700	$7\frac{1}{2}$	1 1	6 $5\frac{1}{2}$
90	1 0	2 6	10	$3\frac{3}{4}$	11,100	6	10	5 $11\frac{3}{4}$	12,700	$6\frac{1}{2}$	11	6 $1\frac{1}{2}$
100	$10\frac{1}{2}$	2 6	$9\frac{3}{4}$	$3\frac{3}{4}$	14,300	7	$11\frac{1}{2}$	6 $0\frac{1}{2}$	15,350	$7\frac{1}{2}$	1 $0\frac{1}{2}$	6 2
150	7	2 6	$9\frac{3}{4}$	$3\frac{3}{4}$	15,000	$4\frac{1}{2}$	8	5 $7\frac{1}{2}$	18,100	$5\frac{1}{2}$	$9\frac{1}{2}$	5 6
200	$5\frac{1}{4}$	2 6	$9\frac{3}{4}$	$3\frac{3}{4}$	20,000	$4\frac{1}{2}$	8	5 $1\frac{1}{2}$	25,500	6	1 0	5 $6\frac{3}{4}$
250	$6\frac{1}{4}$	2 6	$9\frac{3}{4}$	$3\frac{3}{4}$	20,000	4	$6\frac{1}{2}$	5 $0\frac{1}{2}$	25,500	5	$8\frac{1}{2}$	5 3
300	$5\frac{1}{4}$	2 6	$9\frac{3}{4}$	$3\frac{3}{4}$	26,100	$4\frac{1}{4}$	7	5 0	31,600	5	$8\frac{1}{2}$	5 $2\frac{1}{4}$
350	$4\frac{1}{2}$	2 6	$9\frac{3}{4}$	$3\frac{3}{4}$	28,300	4	$6\frac{1}{2}$	4 $10\frac{1}{2}$	32,000	$4\frac{1}{2}$	$7\frac{1}{4}$	4 $11\frac{3}{4}$
400	$5\frac{1}{4}$	2 6	$9\frac{3}{4}$	$3\frac{3}{4}$	28,300	$3\frac{3}{4}$	$5\frac{3}{4}$	4 $9\frac{1}{2}$	32,000	4	$6\frac{1}{2}$	4 11
450	$4\frac{1}{2}$	2 6	$9\frac{3}{4}$	$3\frac{3}{4}$	31,000	$3\frac{1}{2}$	$5\frac{1}{2}$	4 $8\frac{3}{4}$	35,500	$3\frac{3}{4}$	$6\frac{1}{4}$	4 10
500	$5\frac{1}{4}$	2 6	$9\frac{3}{4}$	$3\frac{3}{4}$	31,000	3	5	4 $8\frac{1}{2}$	35,500	$3\frac{1}{2}$	$5\frac{3}{4}$	4 $9\frac{1}{2}$
550	$4\frac{1}{2}$	2 4	$9\frac{1}{2}$	$3\frac{3}{4}$	32,000	$2\frac{3}{4}$	$4\frac{3}{4}$	4 $5\frac{1}{2}$	37,000	$3\frac{1}{4}$	$5\frac{1}{2}$	4 $6\frac{1}{2}$
600	$5\frac{1}{4}$	2 4	$9\frac{1}{2}$	$3\frac{3}{4}$	32,000	$2\frac{1}{2}$	$4\frac{1}{4}$	4 5	37,000	3	5	4 $6\frac{1}{2}$
650	5	2 4	$9\frac{1}{2}$	$3\frac{3}{4}$	32,000	$2\frac{1}{4}$	4	4 $4\frac{1}{2}$	37,000	$2\frac{3}{4}$	$4\frac{1}{2}$	4 $5\frac{1}{2}$
700	$4\frac{1}{2}$	2 4	$9\frac{1}{2}$	$3\frac{1}{2}$	35,000	$2\frac{1}{2}$	4	4 $3\frac{3}{4}$	41,000	$2\frac{3}{4}$	$4\frac{3}{4}$	4 $4\frac{3}{4}$
750	5	2 4	9	$3\frac{1}{2}$	37,000	$2\frac{1}{2}$	4	4 4	42,500	$2\frac{3}{4}$	$4\frac{1}{2}$	4 $4\frac{3}{4}$
800	$5\frac{1}{2}$	2 2	9	$3\frac{1}{2}$	43,000	$2\frac{1}{2}$	$4\frac{1}{4}$	4 $2\frac{3}{4}$	50,500	3	5	4 4
850	5	2 2	9	$3\frac{1}{2}$	45,500	$2\frac{1}{2}$	$4\frac{1}{4}$	4 $2\frac{1}{2}$	53,500	3	5	4 $3\frac{1}{2}$
900	$3\frac{1}{2}$	2 2	9	$3\frac{1}{2}$	48,000	$2\frac{1}{2}$	$4\frac{1}{2}$	4 $0\frac{3}{4}$	54,000	$2\frac{3}{4}$	$4\frac{3}{4}$	4 $1\frac{1}{2}$
950	$3\frac{1}{4}$	2 2	9	$3\frac{1}{2}$	49,500	$2\frac{1}{2}$	$4\frac{1}{2}$	4 $0\frac{1}{2}$	55,200	$2\frac{3}{4}$	$4\frac{3}{4}$	4 $1\frac{1}{4}$
1,000	$3\frac{1}{4}$	2 2	9	$3\frac{1}{2}$	53,500	$2\frac{1}{2}$	$4\frac{1}{2}$	4 $0\frac{1}{2}$	59,500	$2\frac{3}{4}$	$4\frac{3}{4}$	4 $1\frac{1}{4}$

Cost of plant exclusive of foundations and erection.

Table of costs is based on the following assumptions :—

Labour at £4 per man per 44-hour week.

Power at $1\frac{1}{2}d.$ per kilowatt hour and an average allowance of 20 kw. hours per ton of coal pulverised and delivered to the exit of mill house, including power for all operations. Driers to be fired with pulverised coal, which is taken as 40*s.* per ton at the drier burners; an average allowance of 2 per cent. of the coal dried is made for drier fuel, assuming the moisture content of coal to be reduced from 15 per cent. to 1 per cent.

Yearly output is based on 300 working days.

REFUSE DESTRUCTORS.

Calorific Value of Refuse.

The calorific value of refuse is about $\frac{1}{5}$ to $\frac{1}{4}$ that of an equal weight of good dry coal.

Average composition and calorific value of London ashbin refuse, containing the average percentage of water :—

Component parts of Refuse.	Amount in 100 lbs. of Refuse.	Calorific Value.
	Lbs.	B.Th.U.
Coal	·35	3,260
Coke	·15	1,200
Bones and offal	·37	1,970
Breeze and cinder	25·55	102,000
Rags	·40	1,330
Paper, straw, fibrous material, and vegetable refuse	13·15	33,100
Ash	47·00	Nil
Dust and dirt	9·75	,,
Bottles	·48	,,
Metals, including tins	·68	,,
Crockery	1·72	,,
Glass	·37	,,
	99·97	142,860

The above is the average of 1,000 cart-loads.

About 60 per cent. of the refuse is combustible.

The character of the refuse varies a great deal. In factory districts the percentage of unburnt cinder is high, whereas in residential districts with gardens it is much lower.

When it is considered that ordinary green garden refuse when piled in a heap over a nucleus of fire will consume itself, it is obvious that refuse containing cinders will contain enough heat, if properly applied, for its perfect destruction. It is essential that combustion should take place in brick cells, and that no heat should be abstracted until combustion is complete, after which the gases may be used for steam raising. If 40 per cent. only of the refuse is combustible, its calorific value per pound will be about 5,800 B.Th.U. if it were dry. Taking it only as 1,500, this is more than would raise the temperature of the whole gaseous and solid matter to a red heat. If half the weight were water, this would absorb about 600 B.Th.U. to evaporate and about 300 to become red hot, or 900 in all. The remainder of 600 B.Th.U. would raise the gases and solids to nearly 5,000° F. Thus destruction may be perfect with only the equivalent of one-tenth its weight of dry carbon. Inodorous combustion demands high temperature, and hence must occur in brick cells, with suitable movement of the fuel, so that the gases and steam cannot escape until fully incandescent.

Extract from Official Test of 'Heenan' Refuse Destructor at Pontypridd.

U.D.C. Electricity Generating Station, Treforest.

Date of test	February 10, 1910.
Plant tested	One unit (3 cells of 25 sq. ft.) 75 sq. ft. grate area, B. & W. Water Tube Boiler of 2,010 heating surface, Green's Economiser of 96 tubes, 4 ins. in diameter.
Duration of test, 10 A.M. to 6 P.M.	8 hours.
Weight of refuse burnt	18 tons, 1 cwt. 1 qr. = 40,460 lbs.
Rate of burning per hour	$\frac{18{\cdot}0625}{8}$ = 2·257 tons per hour.
Equivalent evaporation from and at 212° F. of destructor plant without economiser	3·223 lbs.
Mean temperature in combustion chamber over 8 hours.	2,437° F. (1335° C.)
Average percentage of carbon dioxide in products of combustion under boiler	14·65 per cent.
The station is working non-condensing, the consumption basis being 40 lbs. of steam. Estimated per kilowatt, the units generated on test (an equivalent of 151 units per ton of refuse)	2,724 B.Th.Us.
The actual was 104 B.Th.Us. The total, 1,905 B.Th.Us.	

Feb. 11, 1910. (*Signed*) J. E. Teasdel.

UTILISATION OF REFUSE

'HEENAN'
REFUSE DESTRUCTORS

ERECTED IN ALL PARTS
OF THE WORLD.

—

**SPECIALISTS IN SCREENS
and SORTING BELTS.**

—

Combined Destructors, Screens
and Sorting Belts designed
to meet Requirements.

—

HEENAN & FROUDE LTD.
WORCESTER,
ENG.

Specialists in High-class
Scientific Machinery.

F. 1804

LEONARD C. HARVEY,

in association with

FRANK B. SPENCER,

25 Victoria Street, Westminster, S.W. 1.

Telephones, Victoria 3467, 4280. Telegrams, 'Fuelecon, Phone, London.'

ENGINEERS INDUSTRIAL MANAGERS

Affiliated Offices—NEW YORK AND PARIS.

ORGANISATION, REPRESENTATION AND FINANCE IN TECHNICAL AND INDUSTRIAL ENTERPRISE.

NEGOTIATION OF BRITISH AND FOREIGN PATENT RIGHTS.

URBAN DISTRICT COUNCIL OF PONTYPRIDD.

Electricity Generating Station.

Comparative Statement of Coal and Refuse and Units Generated in the latter half of 1908 and 1909 respectively.

Month Ending.	Refuse Tons.	Coal Tons.	From Refuse Units.	From Coal Units.	Total Units.	Units per Ton Refuse.	Units per Ton Coal.
1908.							
Sept. 9	Refuse	219	—	77,658	77,658	—	355
Oct. 7	Des-	225	—	84,300	84,300	—	375
Nov. 4	tructor	275	—	92,567	92,567	—	336
Dec. 2	not yet	289	—	91,949	91,949	—	318
Dec. 30	in opera-	290	—	103,611	103,611	—	357
Jan. 27, 1909	tion.	269	—	100,955	100,955	—	375
		1,567	—	551,040	551,040	—	Av. 352
1909.							
Sept. 8	553	54	62,302	19,008	81,310	113	352
Oct. 6	660	66	65,622	23,232	88,854	99	352
Nov. 3	782	86	68,185	30,272	98,457	99	352
Dec. 1	776	57	85,894	20,064	105,958	110	352
Dec. 29	863	56	95,304	19,712	115,016	110	352
Jan. 26, 1910	917	46	98,966	16,192	115,158	108	352
	4,551	365	476,273	128,482	604,753	*Av. 104·5	Av. 352

* This does not take into account steam wasted in blowing off.

Total works costs reduced from 1·10 to ·82 per unit—1,500*l.* per annum on 100,000 units per month (four weeks).

Value of coal 13·5 shillings per ton (2,240 lbs.).

Note, in the preceding tables, that from September 1908 to the end of January 1909 the destructor had not been installed. In the corresponding months of 1909 and 1910 note the large reduction in the coal consumed, notwithstanding the increased current consumption.

At Rotterdam Messrs. *Heenan & Froude, Ltd.*, have installed a large combined destructor and generating station. The refuse collected daily suffices to drive a 1,250 kw. generator and supplies current for operating the whole of the cars of the city. This is one of the largest and best equipped stations in the world, having a destroying capacity of about 500 tons per day of 24 hours, although, at the present time, only something approximating one-half of this is available.

The following tables give particulars of the evaporation and the electrical output, as well as the refuse burnt on representative weeks during the months of September and October 1912. It will be noted that the quantity of refuse collected and delivered at the Destructor Depot is an increasing one, and it will further be noted that the calorific value of the refuse during the winter months rises appreciably.

ROTTERDAM INSTALLATION.

Log Sheet for week commencing September 14, 1912.

Day.	Refuse (Kgs.)	Water (Litres).	Total (Kw.).	Kw. per Ton.	Evap. per Kg.	Steam Lbs. per Kw.
Saturday	225,294	158,400	16,090	72	·70	21·7
Monday	198,350	137,100	15,730	81	·69	19·3
Tuesday	191,105	160,600	18,450	98	·84	19·3
Wednesday	203,200	166,500	18,700	94	·83	19·6
Thursday	200,645	173,500	18,160	91	·86	20·9
Friday	219,455	176,900	20,130	93	·81	19·3
Average	206,341	162,166	17,876	88	·79	19·8

Log Sheet for week commencing October 25, 1912

Day.	Refuse (Kgs.).	Water (Litres).	Total (Kw.).	Kw. per Ton.	Evap. per Kg.	Steam Lbs. per Kw.
Friday	242,665	244,300	18,580	77	1·01	29
Saturday	230,595	255,100	16,730	72	1·11	34
Monday	233,318	218,500	16,530	71	·94	29
Tuesday	220,436	225,200	21,120	96	1·02	23
Wednesday	194,596	213,300	21,520	111	1·10	22
Thursday	221,086	208,000	22,080	100	·95	21
Average	223,783	227,400	19,430	87	1·01	26

THE 'HORSFALL' DESTRUCTOR.

(The New Destructor Company, Ltd., Pershore.)

In the 'Horsfall' automatic tub-feed destructor the refuse arrives at the destructor in carts, being tipped through a shoot into storage tubs placed conveniently in a pit. Each tub will accommodate one cart or van load of refuse; when charged, the tub is lifted by an overhead travelling crane and deposited on the upper storage platform, level with charging door on top of furnaces. At regular intervals a cell is charged, a full tub being lifted by the crane and placed on a cradle on the top of the cell. The weight of the tub causes this cradle to descend, and by a simple system of levers a large charging door is lifted from its water-sealed seat and travels away, permitting the lower edge of the cradle to descend over the mouth of the charge hole. The crane continues to lower, and the bottom of the storage tub thereupon opens and the whole load of refuse falls directly into the furnace and spreads itself over the grate.

Immediately the refuse is discharged the crane lifts the empty tub, and by means of counterbalance weights the cradle ascends, bringing back automatically the large charging door which drops into its water seal, and the operation of charging is over, the time taken to deposit 20 to 30 cwts. of refuse into the furnace occupying about thirty seconds, and this is done entirely by one man who controls the crane.

In this tub-fed system no inclined road is necessary, the refuse is kept out of sight, and there is no hand shovelling required.

Good examples of this type of destructor may be seen in operation at Greenock, Leeds, Liverpool (Mersey Dock and Harbour Board), Poplar, and Zurich (Switzerland).

Several large 'Horsfall' destructor plants are at work in the tropics, the most recent installation being at Colombo, Ceylon, where about 60 tons of tropical refuse is dealt with per day, in addition to carcases of bulls, and other offal.

The 'Sterling' type of destructor is also manufactured by the firm, and successful plants on this system are in operation at Abertillery, Bath, Blantyre, Farnborough, Larkhall, Luton, Napier (N.Z.), New Stevenston, Manly (N.S.W.), Pembroke (Dublin), Sutton Coldfield, Sydney (N.S.W.), and Yeovil.

A special feature of the 'Sterling' destructor is the patent cast-iron surround to the grate, which is designed for durability, and is recommended where refuse of high calorific value is to be dealt with, such as is found in colliery districts.

Upwards of 150 destructor installations on the 'Horsfall' system have been erected in the United Kingdom and abroad, varying in capacity from 10 tons to 360 tons of refuse per day; also a large number of smaller plants have been installed in connection with hospitals, sanatoria, and factories.

The 'Horsfall' self-contained single unit destructor was adopted by the British and Allied Governments for use in military camps and hospitals during the recent war.

For dealing with small quantities of refuse in hospitals, factories, and small communities, the single unit self-contained destructors have proved highly successful, and have been very widely adopted.

The 'Horsfall' and 'Stirling' system of refuse disposal includes front-fed, back-fed, and top-fed furnaces, and many plants of all these types are still in work after twenty years' continuous service.

INFLUENCE OF INTRODUCTION OF DESTRUCTOR ON FUEL AND TOTAL WORKING COSTS OF ELECTRICITY WORKS.

Fuel Costs.

Town.	1907.		1908.		1909.		1910.		1911.		Max. Dif.
	Fuel.	Total.	Fuel.	Total.	Fuel.	Total.	Fuel.	Total.	Fuel.	Total.	
Redditch	·53	1·22	·74	1·50	·75	1·60	**·49**	**1·34**	·53	1·17	·26
Cheltenham	·42	1·08	·47	1·16	**·36**	**1·12**	·30	1·00	·29	1·02	·18
Bury St. Edmunds	·95	1·89	1·18	2·14	**·83**	**1·89**	·75	1·84	—	—	·45
Rotherham	·24	·88	·29	·88	·30	·97	**·24**	**·96**	·27	·87	·06
Dorking	·87	2·60	·87	2·60	·64	2·47	**·53**	**2·55**	—	—	·34
Coventry	·25	·66	·37	·75	·28	·65	**·18**	**·43**	·16	·38	·21
Farnworth	·41	1·06	·51	1·13	·46	1·11	—	1·26	—	**·97**	·29
West Bromwich	·30	·85	·31	·88	·28	·78	**·25**	**·80**	·24	·75	·07
Cheltenham	·42	1·08	·47	1·16	·36	1·12	**·30**	**1·00**	·29	1·02	·18
Hertford	1·77	2·40	1·72	2·45	1·80	2·54	**1·61**	**2·47**	—	—	·19
Pontypridd	·57	1·59	·56	1·38	·52	1·27	**·30**	**1·00**	—	—	·27

NOTE.—The figures in black type indicate the year in which the Destructor's influence commenced to be felt.

The above figures are taken from the *Electrical Times*, and the fuel costs would include such payments as have been made by the Electricity Department to the Cleansing Department for steam supplied by the latter, and therefore the difference shows the saving made by the Electricity Department irrespective of the saving made by the Cleansing Department due to payments received from the Electricity Department, as referred to above.

LIQUID FUELS.

Whereas solid fuels are solely used for external combustion it is possible to employ almost all liquid fuels for either external or internal combustion. On comparing the most important liquid fuel petroleum with the most important solid fuel, coal, many remarkable advantages of the former over the latter are found to exist. The heat value of petroleum is some 50 per cent. greater than that of average coal, the stowage space being slightly less. Liquid fuels are more convenient to store (places inaccessible to coal may be employed) and are more easily transported than solid fuels. Liquid fuel is almost entirely free from ash. When used for internal combustion the thermal efficiency of liquid fuels is double that of the solid fuels used for power production. Certain liquid fuels can be employed in high speed engines, whereby a higher power per unit weight of engine is obtainable than by any other type of prime mover.

The most important liquid fuels are petroleum, shale oils, coal tars and their products, and lignite tars and products.

Petroleum.

Petroleum occurs in the earth, and is generally found in strata of conglomerate or of oil sands. It is generally accompanied by gaseous and also by solid hydrocarbons. The crude oil is usually brown or black, and the products of different fields vary greatly both in physical and chemical properties.

Petroleum consists almost entirely of carbon and hydrogen. These are present in the form of compounds known as hydrocarbons. Hydrocarbons may be divided into three main groups, known as aliphatic, aromatic and hydroaromatic hydrocarbons. These groups may be subdivided into numerous series, the members of which possess certain definite relationships between the number of carbon and hydrogen atoms present in the molecules. The physical properties of the members of these series generally progress by fairly regular steps. The carbon atoms in the aliphatic hydrocarbons are connected together in the form of chains, and the more important series of this type of hydrocarbons are :—

Paraffin Series.
General formula—C_nH_{2n+2}


Methane	CH_4
Ethane	C_2H_6
Propane	C_3H_8
Butane	C_4H_{10}
Pentane	C_5H_{12}

Olefine Series.
General formula—C_nH_{2n}

Ethylene	C_2H_4
Propylene	C_3H_6
Butylene	C_4H_8
Pentylene	C_5H_{10}

The carbon atoms of the aromatic compounds are connected together in the form of rings, a typical compound being :—

Benzene, formula C_6H_6 . . . .



The hydroaromatic compounds also contain carbon rings, but are richer in hydrogen than the aromatic hydrocarbons. A typical hydroaromatic compound is hexamethylene, C_6H_{12}.

Petroleum oils contain members of all these series, but the proportion varies according to the locality from which the oil has been obtained. Pennsylvanian oils consist mainly of aliphatic hydrocarbons, Russian oil mainly of hydroaromatic compounds. The products of the destructive distillation of coal consist mainly of aromatic compounds. Crude petroleum from Mexico and South America generally contains quantities of a viscous sulphur-containing body known as asphaltum, which has great influence on their properties as fuels. Little petroleum is consumed in the crude state, it being usual to separate it into fractions boiling over various ranges by means of repeated distillations. Many petroleum fractions are also treated with sulphuric acid and with caustic soda in order to remove certain undesirable constituents.

The principal fuels obtained from petroleum are :—

Benzine	boiling from 70°–150° C., 158°–302° F.	Specific gravity	·700–·760
Kerosene, illuminating, or paraffin oil	boiling from 150°–300° C., 302°–572° F.	„ „	about ·800
Gas oils, solar oils, etc. .	boiling from 250° C., 482° F. upwards.	„ „	„ ·850
Petroleum residuum, 'fuel oil,' boiling point varies greatly		„ „	·880–·950

The world's production of petroleum in 1918 was in round figures 67 million metric tons, and the U.S. production was about 46 million tons, or over two-thirds of the total.

The import of motor spirit or petrol into the U.K. in 1919 was 200 million gallons.

Benzine.

Benzine is the petroleum fraction from which motor spirits are prepared. Motor spirits are generally called petrol in this country. Petrol contains about 14 per cent. hydrogen and 86 per cent. carbon. Heavy fuel oils contain about 12 per cent. hydrogen and 88 per cent. carbon.

Kerosene.

Illuminating oil or kerosene, generally known in this country as 'Paraffin Oil,' possesses a specific gravity in the neighbourhood of ·800. It is slightly lower in calorific value than petrol, but on account of its higher specific gravity it yields more heat per unit volume of fuel. The ultimate composition of kerosene is approximately carbon 87 per cent. and hydrogen 13 per cent. Apart from illuminating purposes, kerosene finds frequent use as a fuel for vaporising engines. A large number of heavy distillates of petroleum are prepared for various technical purposes. Of these gas oil is probably the most important. Gas oil is prepared with a view to its use in the preparation of carburetted water gas or oil gas, and is also used as fuel for semi-Diesel and Diesel engines. It is a brown clear liquid of specific gravity about ·850, and has a net calorific value of about 18,000 B.Th.U. The distillates, whether prepared from asphaltic or non-asphaltic petroleum oils, are generally very similar in quality, though the proportion of each distillate yielded by the different crude oils may vary considerably. The residuum which is run off the still at the end of distillation, and is frequently marketed as 'fuel oils,' varies very greatly in properties according to the nature of the crude oil from which it originates. The non-asphaltic petroleum residuum which is sold as fuel oil is generally dark brown or black, almost opaque, quite mobile, and has a specific gravity of ·870 to ·920. It is largely used as a fuel for semi-Diesel and Diesel engines, also for boiler firing in the Navy. The residua prepared from asphaltic oils are usually black opaque liquids possessing high viscosities and specific gravities from ·920 to ·980, the viscosities and specific gravities being dependent on the asphaltum content.

Examples of analyses of the more important petroleum fuel products are given in the table on page 1814.

Shale Oil.

Shale exists in many parts of the British Empire, the shale oil industry being most fully developed in Scotland. The shale is mined in a similar manner to coal, and is then subjected to destructive distillation, the principal products of value being ammonia and crude shale oil. The crude oil is subjected to distillation, whereby a series of products similar to the petroleum distillates is obtained. The shale oils are richer in unsaturated bodies than petroleum. In fuel properties they very closely resemble the petroleum products.

Petrol.

Petrol, known in France as 'Essence' and in America as 'Gasoline,' is a mixture of liquid hydrocarbons principally composed of the chemical 'paraffins,' Hexane C_6H_{14}, Heptane C_7H_{16}, Octane C_8H_{18}, and Nonane C_9H_{20}: these have boiling points 155°F., 208° F., 248° F., and 302° F. respectively. It is obtained by distillation from crude petroleum and, as now used, varies in sp. gr. at 60° F. from about 0·70 to 0·76, the average being about 0·725. The consumption in Great Britain rose from about nineteen million gallons in 1905 to upwards of two hundred million gallons in 1919. Petrol, being a mixture of hydrocarbons, has no fixed boiling point, and its density increases during evaporation; it was largely from this cause that surface carburettors proved unsatisfactory, selective evaporation occurring and a heavy non-volatile residuum being finally left; with the jet-carburettors now almost universally employed no selective action is possible.

As petrol is very expansible, tanks and closed vessels should never be quite filled with the liquid, so as to avoid risk of rupture following a rise in temperature. Coefficient of expansion, 0·0004 per ° F. (0·000224 per ° C.).

The composition of commercial petrol averages about 85¼ per cent. carbon and 14¾ per cent. hydrogen, and the net calorific value per lb. varies but little from 18,600 B.Th.U.

Heavy petrol gives quite satisfactory results with modern carburettors; motor omnibuses employ ·760 spirit very largely on account of its lower cost.

Petrol vapour is, roughly, 3½ times as heavy as air; hence at atmospheric pressure and 60° F. 1 lb. of petrol vapour occupies about 4 cub. ft.; in the liquid form its volume is about 38⅝ cub. ins.; hence, converted into vapour it increases its volume by 180 times. For complete conversion into CO_2 and H_2O 1 lb. of petrol requires about 3·45 lbs. of oxygen, corresponding to 15 lbs. of air; the exhaust consists, by weight, of 3·13 lbs. CO_2; 1·32 lb. H_2O (vapour); and 11·55 lbs. nitrogen. Total, from 1 lb. of petrol = 16 lbs. of exhaust. Exhaust composition is always, however, reckoned by volume, and, moreover, the water vapour is condensed to (practically) zero volume and accordingly does not directly appear. Hence, when combustion is just perfect, the exhaust should consist, by *volume*, of 14·6 per cent. CO_2 and 85·4 per cent. of nitrogen. If there be insufficient air to complete combustion, the exhaust contains, in addition to CO_2 and water vapour, CO, CH_4, and H; these being combustible gases, some of the heat of combustion is in such cases carried away in the exhaust and wasted. If α denote the volume percentage of CO in the exhaust, and β be the per cent. of CO_2, then the fraction of the total heat of the fuel wasted in the exhaust is:—

$$\text{Proportion of heat wasted in exhaust} = \frac{0{\cdot}7}{1{\cdot}12 + \frac{\beta}{\alpha}} \qquad (\textit{Burls.})$$

On the other hand, if the air supply exceed about 15 lbs. per lb. of petrol, there is an air excess and no CO appears in the exhaust; instead one gets free oxygen. The practical range is from about 11 air to 1 petrol, to 17 air to 1 petrol; recently the Royal Automobile Club has adopted as the standard for carburettors such a mixture as would give an exhaust containing about 1 per cent. of free oxygen; this prevents the presence of CO, and gives nearly the highest thermal efficiency and also nearly the maximum power. Maximum thermal efficiency usually occurs with a somewhat greater excess of air, and maximum power with a slight defect of air, due in this latter case to the higher mean pressure obtained by reason of the considerable expansion in the products of combustion with 'rich' mixtures. One lb. of petrol, occupying 4 cub. ft., requires for its complete combustion roundly 15 lbs. of air occupying 196 cub. ft. at 60° F.; the 16 lbs. of mixture thus occupies a volume of 200 cub. ft. at 60° F., and contains 2 per cent. by volume of petrol vapour.

Taking 0·7 pint of 0·72 sp. gr. petrol, i.e. 0·63 lb. per b.h.p. hour as an average good performance for well-designed engines, we see that for a 15 to 1 air-petrol ratio this corresponds therefore to $\frac{200 \times {\cdot}63}{60} = 2{\cdot}1$ cub. ft. of mixture per b.h.p. min.—a useful figure in design.

COMPARISON OF PROPERTIES OF FUELS FOR PETROL ENGINES.

Description.	Sp. Gr. at 20° C.	Gross Cal. Value.	Retort Test.	Sulphur.	Sulphuric Acid Colouration Test.
		Calories.	Per Cent.	Per Cent.	
Pratt's Perfection	0·706	11,090	87 at 120° C.	0·44	Pale yellow.
„ No. II.	0·713	—	87 „	—	„ „
„ Taxibus	0·722	11,155	86 „	0·306	„ „
Mex. spirit	0·718	11,535	88 „	0·40	Deep yellow.
Mead King Robinson, Grade 700–725	0·714	—	88 „	—	Very pale yellow.
M.K.R., Grade 735–750	0·735	—	80 „	—	„ „
„ Grade 735–770	0·747	11,092	70 „	0·104	Pale yellow.
Benzol	0·875	9,877	100 at 100° C.	0·90	Very dark.
Alcohol (industrial)	0·819	6,115	100 at 80° C.	0·13	—

The specific gravities and distilling temperatures of petrols are liable to be varied from time to time as the market conditions warrant. The increased demand for motor spirit during recent years has been to a large extent met by including both higher and lower boiling distillates in the motor spirit fraction. By subjecting the crude oil to high temperatures in the absence of air, frequently accompanied by high pressures, a decomposition of the more complex hydrocarbons is brought about. This action, which is technically known as 'cracking,' results in large yields of motor spirit. The motor spirit prepared in this way is rich in unsaturated compounds, possesses a characteristic odour, and is higher in specific gravity than the direct distilled petrol which comes over between the same temperatures.

Some of the petrol at present being imported into this country is naturally rich in benzene and toluene, and this is particularly the case with the Borneo spirit imported by the Shell group, and it has been found, both experimentally and in practice, that owing to the higher spontaneous ignition temperatures of benzene and toluene, mixtures containing these hydrocarbons do not so readily cause preignition or detonation in petrol engines. In view of this, petrol which does not naturally contain benzene has occasionally been mixed with benzene in order to decrease the liability to preignition.

Recent analyses of Pratt's No. 1 and Shell No. 1 spirit by Messrs. Ormandy & Moore, on behalf of *The Motor*,* give the following results:—

Pratt's No. 1 Motor Spirit:—Specific gravity, 0·729 at 15° C. (59° F.).

ENGLER DISTILLATION TEST: Initial boiling point, 33° C. (91·4° F.).

Temperature	C.°	55	60	70	80	90	100	110	120
„	F.°	131	140	158	176	194	212	230	248
Drop per cent.		—	1·0	3·5	11·5	21·5	31·0	45·0	57·5
Temperature	C.°	130	130	140	150	160	170	180	190
„	F.°	266	266	284	302	320	338	356	374
Drop per cent.		67·5	67·5	77·0	83·0	87·5	91·5	93·0	94·5

Initial boiling point is the temperature at which the first drop falls from the bulb of the thermometer when the latter is placed ½ in. below the outlet tube of flask.

Drop temperature is taken when the first drop leaves the end of the condenser.

Acid Coloration.—Acid has brick-red colour, and petrol separates out slowly.

Aromatic hydrocarbon content = 10·2 per cent. by weight.

* *The Motor*, September 7, 1921.

Shell No. 1 Motor Spirit: Specific gravity, 0·754 at 15° C.

Engler Distillation Test: Initial boiling point, 34° C.							
Temperature	C.°	57	70	80	90	100	110
"	F.°						
Drop per cent.	.	—	1·5	6·0	12·5	24·0	39·0
Temperature	C.°	120	130	140	150	160	170
"	F.°						
Drop per cent.	.	53·5	67·0	78·0	86·5	92·0	95·0

Acid Coloration.—Acid only slightly discoloured, light brown, and petrol separates out almost immediately.

Aromatic hydrocarbon content = 21 per cent. by weight.

Benzol.

Benzol had come into prominence before the war as an alternative home-produced fuel for the engines of motor vehicles, partly in consequence of the high price of petrol. Since the withdrawal of the restrictions on the use of benzol its use has become more general than before, though the motoring public do not yet fully appreciate its value as a fuel. Benzol is the commercial name for a mixture of hydrocarbons prepared by the distillation of coal tar, and also obtained by stripping the gas which is produced as a by-product from coke ovens. Commercial benzol consists almost entirely of a mixture of the hydrocarbon benzene (C_6H_6: not to be confused with the petroleum fraction 'benzine') and the hydrocarbon toluene (C_7H_8). The usual commercial grades are '90 per cent. benzol,' which on distillation from a retort yields 90 per cent. of distillate at 100° C., and consists of approximately 70 per cent. benzene and 30 per cent. toluene, together with traces of the xylenes (C_8H_{10}), and '100 per cent. benzol,' which on distillation from a retort yields 100 per cent. of distillate at 100° C., and contains a higher proportion of the hydrocarbon benzene than 90 per cent. benzol.

There is little to choose between these two bodies as motor fuels, and provided they have been satisfactorily refined they are both preferable to pure benzene, as the mixtures do not so readily solidify in cold weather. Pure benzene solidifies at a temperature of + 6° C. (43° F.), and boils at 80·4° C. It possesses a specific gravity of ·88 at 15° C., and a gross heat value of about 18,090 B.Th.U.

Both commercial benzol and pure benzene possess very high temperatures of spontaneous ignition, and they will withstand compressions of about 200 lbs. per square inch in internal combustion engines without being affected by preignition. This property, together with the high specific gravity, accounts for the increased mileage per gallon obtained when using benzol as fuel instead of petrol. Benzol gives about 16 per cent. greater mileage than petrol, and also gives greater power to the engine. When changing over from petrol to benzol it is advantageous slightly to reduce the size of jet, though it is not absolutely necessary to make any modification. The colour of benzol for motor use should be perfectly clear and white, as yellowish colour indicates unsatisfactory refining. Certain bodies (mainly phenols, unsaturated hydrocarbons and sulphur containing compounds) are present in benzol when it is first prepared by distillation. These compounds are removed by treatment with caustic soda solution and afterwards with concentrated sulphuric acid. If these bodies are not removed there is a liability for the benzol to form resinous substances after prolonged standing, and also to form gummy deposits in the engine. Petrol undergoes a similar refining process during its preparation, but it is rare to meet with badly refined petrol nowadays, as the quality necessary for the motor spirit market is well understood by the petroleum firms. Petrol and benzol are perfectly soluble in each other, and can be used with satisfaction in the form of mixtures.

BRITISH STANDARD SPECIFICATION FOR BENZOL FOR MOTOR FUEL.*

Report No. 135, 1921 (*Abstract*).

(1) The term 'Benzole' shall denote a liquid consisting essentially of a mixture of benzene and not more than 30 per cent. by volume of toluene and xylenes.

(2) The material shall be a clear 'water white' liquid, free from undissolved water and other visible impurities.

(3) The specific gravity at 15·5° C. (60° F.) shall be not less than 0·870, and not more than 0·885.

(4) When 100 cc. of the material are distilled in the Standard Distillation Apparatus, at a rate of 7 cc. per minute, there shall distil at 760 mm. pressure—

Not less than	60 cc. at or below	90° C. (194° F.).
„ „	75 cc. „	100° C. (212° F.).
„ „	90 cc. „	120° C. (248° F.).

The flask shall be dry at a temperature not exceeding 125° C. (257° F.). The temperature recorded by the thermometer shall be corrected for emergent stem and barometric pressure.

(5) The amount of non-volatile residue remaining when 20 cc. of the material are evaporated, and subsequently heated for two hours on a water bath at 100° C. (212° F.), shall not exceed 0·01 per cent. by weight.

(6) The coloration imparted to pure sulphuric acid (90 per cent. H_2SO_4), free from nitric acid, when 90 cc. of the material are shaken with 10 cc. of the acid for five minutes at ordinary temperatures, shall be not more than a light brown.

(7) The total sulphur content shall not exceed 0·4 per cent. by weight. Freedom from acid and alkali.

(8) The material shall give no reaction for free acid or alkali when tested.

(9) The material shall give no reaction for sulphuretted hydrogen when tested.

(10) The freezing point shall not be higher than —14° C. (7° F.).

Detailed descriptions of the methods employed in testing are given in the original publication.

Alcohol.

Although the heat value of alcohol per lb. is comparatively small, yet, on account of its heaviness as a vapour, and the small volume of air required to burn it compared with benzene and petrol, it yields 89·2 B.Th.U. per cub. ft. of mixture at 60° F. and atmospheric pressure. Moreover, the products of combustion are 6½ per cent. greater in volume than that of the unburnt mixture, with corresponding increase in the pressure developed. There is thus, thermally considered, not very much to choose between alcohol and petrol; alcohol is, in fact, an excellent fuel for suitably designed internal combustion engines, and is largely used in Germany, where its production is encouraged by the Government; in 1904 the price of alcohol in Germany was only 9*d.* per gallon when purchased in large bulk.

Mr. E. Bury of the Skinningrove Iron & Steel Works, Middlesbrough, has made trials of a process for the abstraction of ethylene from coke-oven gas and its recovery as alcohol, by which an average yield of 1·6 gallons per ton of coal carbonised is obtained. The application of this process to the whole of the 14,635,000 tons of coal reduced to coke in this country in 1918 would yield 23 million gallons of alcohol. It is calculated that the recovery of alcohol from the gas-works of the country on similar lines would yield 27 million gallons per annum.

Alcohol has a great affinity for water, and ordinary commercial qualities contain water in various proportions up to about 15 per cent.; in the following table estimated calorific values per lb. are given for alcohol-water mixtures containing from 0 to 50 per cent. of the latter ingredient.

* By permission of the British Engineering Standards Association.

ESTIMATED CALORIFIC VALUE OF ALCOHOL-WATER MIXTURES.

Proportions by Weight.		B.Th.U. per Lb.	
Alcohol.	Water.	Higher Value.	Lower Value.
Column :—	1	2	3
1·00	0·00	12,420	11,285
0·9	0·1	11,178	10,060
0·8	0·2	9,936	8,835
0·7	0·3	8,694	7,609
0·6	0·4	7,452	6,385
0·5	0·5	6,210	5,160

Alcohol engines require larger carburettors and piping and valves than are necessary when petrol is used. As the latent heat of alcohol much exceeds that of petrol, especially when water is present in any considerable proportion, it is also necessary to well jacket the carburettor with hot water or exhaust gas, and to heat the in-going air to about 350°F. in order to ensure complete vaporisation. The cylinder-jacket water should also be kept nearly at 212°F.; too cool a cylinder results in imperfect combustion of the mixture, acetic acid, aldehyde, etc., being formed instead of CO_2 and H_2O only, with loss of efficiency and corrosion of internal parts. Starting up from cold is a special difficulty with alcohol, and engines are usually started with petrol, the alcohol being turned on when everything is well warmed up. Some engines are arranged so as to start and *stop* on petrol; in this way any traces of water or acid from the alcohol are cleared out of the cylinders and passages during the last few revolutions of the engine, and risk of corrosion of parts is thus avoided. Tests on a 14 horse-power 'Locomobile' alcohol engine of 8·28 ins. bore and 11·8 ins. stroke made by Prof. E. Meyer in 1901 showed a brake thermal efficiency of 24 per cent., using alcohol containing about 13 per cent. of water. The volume ratio of compression was 5·9. The cylinder-jacket water temperature was maintained at 208°F. The engine ran at 280 revs. per minute and developed 13·9 b.h.p. at full load.

In some German trials of alcohol engines in 1902 a horizontal Deutz engine of 8·3 ins. bore and 11·8 ins. stroke, with the high volume ratio of compression of 8·9, and using as fuel alcohol containing 13·9 per cent. of water (about 9,980 B.Th.U. per lb., lower value), consumed at the full output of 16·55 b.h.p. only 0·813 lb. of this fuel per b.h.p. hour, corresponding to the high brake thermal efficiency of 31·4 per cent.

Coal Tars and Coal Tar Distillates.

When bituminous coal is subjected to destructive distillation, gas, coke, tar and ammonia are obtained. The physical and chemical properties of the tars are dependent upon the type of coal from which they originate, and the conditions which exist in the carbonising chamber. The appliances in use for the carbonisation of coal are mainly gas manufacturing plants and coke manufacturing plants. A few special plants exist which do not belong to either of these categories.

Gas manufacturing plants may be divided into three classes—horizontal retort, inclined retort, and vertical retort plants. Retorts of the first type yield tars of high specific gravity, 1·15 to 1·25, rich in free carbon, and viscous. Vertical retorts yield thin brown tars of low gravity (about 1·05), which are comparatively low in free carbon content and rich in aliphatic hydrocarbons. The tars from inclined retorts are intermediate between the products of horizontal and vertical plants in their chemical and physical properties.

Coke-oven tars are very variable, but usually approximate to horizontal retort tars in composition.

Tars from gas producers are generally too high in water-content to be of use as fuels.

Blast furnaces yield tars containing large quantities of ash which render them useless in the raw state.

Several processes for the low temperature carbonisation of coal have been advocated, but no large quantity of the tar, which is exceptionally suitable for fuel purposes, is available.

The majority of coal tars may be employed for boiler firing purposes. Tars from vertical retorts have been found suitable for use on both two and four cycle Diesel engines, providing that certain special adjustments or fittings are employed, large quantities of such tars being

PROPERTIES OF PETROLEUM FUELS. (*Moore.*)

Description of Fuel.	Sp. gr.	Water. %	Sulphur. %	Ash. %	Asphaltum. %	Coke Value. %	Flash Point. °F.	Temp. of Spont. Ignition in Oxygen. °C.	Viscosity in Redwood Units. @70°F. 21·1° C.	Viscosity in Redwood Units. @100°F. 37·7° C.	Calorific Power. Gross. Calories.	Gross. B Th.U.	Net. Calories.	Net. B.Th.U.
Petrol (Pratt's perfection)	·706	None	0·44	None	None	None	Below 60	272	4·0	4·0	11,090	19,962	10,280	18,504
Petrol substitute	·762	,,	—	,,	,,	,,	,,	260	4·0	4·0	11,320	20,376	10,545	18,981
Petrolite	·814	,,	0·87	,,	,,	,,	104	251	5·0	5·0	11,020	19,836	10,294	18,529
Homelight kerosene	·807	,,	0·17	,,	,,	,,	82	251	4·54	4·45	10,960	19,728	10,295	18,531
Pennsylvanian gas oil	·850	,,	0·21	,,	,,	0·35	184	254	7·7	7·0	10,880	19,584	10,198	18,347
Standard Mexican fuel oil	·948	0·75	2·91	0·09	25·4	12·20	200	259	1210	288	10,248	18,446	9,663	17,393
Light Mexican fuel oil	·914	Traces	2·27	None	5·6	5·09	235	259	56·8	24·6	10,600	19,080	9,963	17,933

Description of Fuel.	Engler Distillation Test. °C. Drop.	120	200	250	300	350	Retort Test (Bulb of Thermometer Immersed). °C. Drop.	100	120	200	250	300	350	400	420
		%	%	%	%	%		%	%	%	%	%	%	%	%
Petrol (Pratt's perfection)	—	—	—	—	—	—	—	—	87	—	—	—	—	—	—
Petrol substitute	—	0·5	95	—	—	—	—	0·5	2	90	—	—	—	—	—
Petrolite	137	—	22·5	63	95	—	—	—	—	—	—	—	—	—	—
Homelight kerosene	170	—	—	64	89	—	170	—	—	25	64	89	—	—	—
Pennsylvanian gas oil	—	—	—	—	—	—	206	—	—	—	—	32	—	—	—
Standard Mexican fuel oil	245	—	—	1	12	55	300	—	—	—	—	—	15	34	40
Light Mexican fuel oil	—	—	—	—	—	—	110	—	—	—	8	15	22	33	41

used in Diesel engines on the Continent. Some coke-oven tars are suitable for use in Diesel engines. The compositions of several British coal tars are given in the accompanying table :—

PROPERTIES OF TARS. (*Moore.*)

Description.	Sp.Gr. at 15° C.	Per cent. Chemical Composition.					Ash.	Coke.	Calorific Power (Dry Tar).		Free Carbon.
		H_2O.	C.	H.	O.&N.	S.			Gross.	Net.	
Horizontal retort tar	1·180	1·75	91·5	5·2	2·6	0·5	0·2	24·0	9093	8645	18·2
Inclined retort tar	1·157	1·11	89·9	6·0	3·6	0·5	0·02	18·5	9096	8671	14 0
Vertical retort tar	1·089	2·25	88·0	6·8	3·8	0·6	0·03	6·1	9246	8664	1·7
Otto Hilgenstock coke oven tar	1·208	6·00	90·0	5·4	3·8	0·8	0·02	26·8	8921	8624	23·9
Simon-Carvé coke oven tar	1·090	0·50	88·1	5·6	6·1	0·2	0·07	6·0	9695	9261	traces
Chamber oven tar	1·082	1·29	88 2	6·9	4·6	0·3	traces	7·3	9229	8737	3·0
Low temperature carbonisation tar	1·058	3·00	85·8	8·1	5·5	0·9	0·11	8·2	9196	8776	2·2
Water gas tar	1·054	0·59	92·2	6·8	0·4	0·6	traces	18·7	8951	8647	6·8
Blast furnace tar	1·172	3·00	89·5	5·7	0·5	0·84	0·36	23·4	8563	8288	9·5

The volatile products obtained by the distillation of coal tar (mainly benzol and toluol) have been extensively used in automobile engines prior to the war. Creosote and anthracene oils are high boiling distillates of coal tars and are extensively employed for fuel purposes, both for external and internal combustion. The 'tar oil' sold for fuel is usually a mixture of both these above-mentioned fractions. Analyses of some tar oils, together with a petroleum residuum, and alcohol, are shown in the following table :—

PROPERTIES OF MISCELLANEOUS FUEL OILS. (*Moore.*)

Description.	Sp.Gr. (15°C)	Per cent. Chemical Composition.					Ash.	Coke.	Flash pt.	Calorific Power.	
		H_2O.	C.	H.	O.&N.	S.				Gross.	Net.
Coal tar creosote	1·053	traces	89·7	7·4	2·23	0·66	traces	1·30	93°C.	9342	8964
Blast furnace oil	0·907	0·00	82·6	9·9	7·22	0·29	0·00	1 26	70°C.	9992	9603
Vertical retort tar oil	1·019	0·70	85·8	7·9	5·1	0·5	traces	1·65	88°C.	9189	8762
Scottish shale oil	0·945	1·6	87·00	9·50	1·04	2·35	0·11	0·18	56°C.	9917	9245
Premier tarless process oil	0·995	traces	82·6	8·6	8·8	0·50	0·10	1·52	76°C.	9472	9008
Mexican fuel oil (petroleum)	0·952	1·00	82·6	10·9	1·5	2·85	0·17	12·2	93°C.	10350	9734
Mineralised alcohol (commercial)	0·822	—	46·6	12·7	40·56	0·13	—	—	below 20°C.	6115	5421

Lignite Tars and Lignite Tar Distillates.

Lignite yields valuable liquid products by destructive distillation. The tar is of a butter-like consistency and possesses a specific gravity of ·860 to ·920. Its sole use in the raw state is as fuel for Diesel engines, for which purpose its richness in aliphatic hydrocarbons makes it behave similarly to petroleum. It therefore does not require either raised cylinder compressions or the use of an ignition oil.

Fuels for petrol engines and heavy oil engines can be obtained from lignite tar by distillation. Their properties are very similar to those of the corresponding fractions obtained from petroleum.

Tar oils have been used in considerable quantities on Diesel engines in this country recently, on account of the scarcity of petroleum. The difficulties encountered in burning tar oils are mainly due to their comparatively high spontaneous ignition temperature. The ignition of the fuel charge in a Diesel engine is dependent upon the temperature of compression, no special

ignition device being provided. With the fuel oils derived from petroleum or shale it has been found that a compression pressure of 450 to 500 lbs. is sufficient to ensure regular ignition under starting conditions and at all loads. Whereas the spontaneous ignition temperature (in atmosphere of oxygen) of petroleum and shale oils is in the neighbourhood of 270° C., this value for tar oils is generally over 400° C.* As a result of the high ignition point engines will not start, or run at low loads, on tar oil unless special means are taken for raising the temperature of the air in the combustion space at the time of fuel injection. The more important methods adopted for this purpose are—(1) to heat the cycle air, blast air and fuel, (2) to increase the

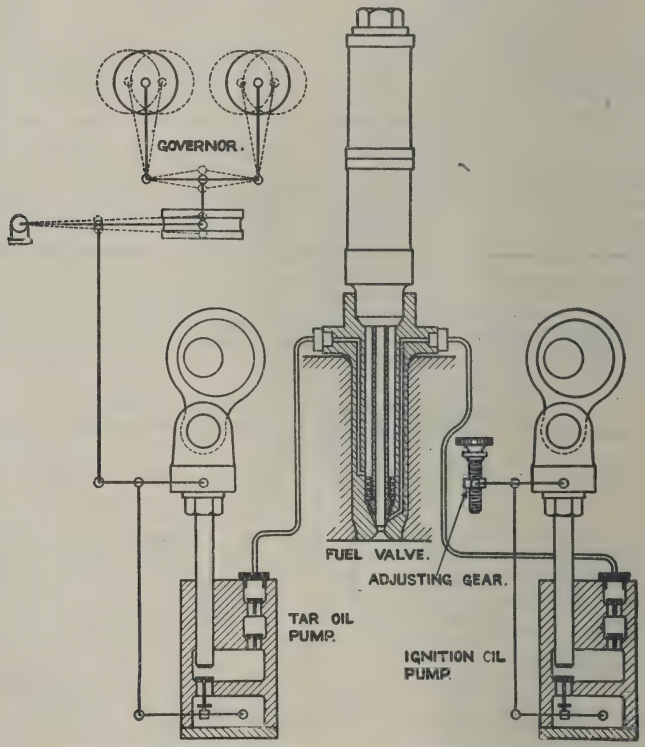


FIG. 25.—Diagrammatic Arrangement of Fuel Pumps for Tar Oil Engine.

compression ratio, (3) to employ an ignition oil, and (4) to inject a small charge of tar oil prior to the main tar oil charge.

Heating of cycle air, blast air and fuel is difficult to effect under starting conditions and has a deleterious action on the fuel valve when running. The increase of compression necessitates a specially heavy design of engine to withstand the higher stresses on liners, cylinder cover, and bearings. To ensure certain starting on tar oils the compression would require to exceed 600 lbs. The starting difficulty may be overcome by running the engine on a petroleum oil before closing down and when starting. If the engines can be always maintained at half load or over, a compression pressure of about 550 lbs. per square inch will give good running.

* Moore, *Jour. Soc. Chem. Ind.*, February 15, 1917, p. 109.

The introduction of a small charge of a petroleum oil into the working cylinder prior to the main charge of tar oil has been found the most satisfactory method of burning tar oils. The ignition oil charge is pumped to the atomiser nearer the cylinder than the place where the main tar oil charge enters. Thus when the fuel valve opens the ignition oil is first injected into the cylinder and is immediately followed by the tar oil charge. The combustion of the ignition oil heats the air in the cylinder so that the temperature exceeds the spontaneous ignition temperature of the tar oil. The proportion of ignition oil is 6 to 8 per cent. of the total fuel at full load; at other loads the quantity of ignition oil remains practically constant, the proportion increasing to about 50 per cent. at no load. This method has been found to yield satisfactory results at all loads, and under starting conditions, with cylinder compression pressures of 480 to 500 lbs. per square inch. An arrangement of ignition oil gear as given in a paper by Mr. C. Day,* is shown in fig. 25. Devices have been designed to give a small charge of tar oil prior to the main charge of tar oil. The device is so arranged that the initial tar oil charge is not accompanied by any appreciable blast air, the expansion of which would reduce the temperature of the combustion space. Such devices are said to have given good results on the Continent, but are little used in this country.

In addition to the ignition question tar oils are particularly liable to form deposits in the atomisers of Diesel engines. A résumé of some experiences of burning tar oils on Diesel engines was given by Mr. G. Porter in a paper read before the Diesel Engine Users' Association, May 24, 1917. In this paper several specifications for tar oils for use in Diesel engines are given. An abstract of these specifications is appended below :—

Specifications of Tar Oil Fuel for Diesel Engines.

(1) Specification of the M.A.N. Company :—

The tar oil must be a distillate of coal tar.

The oil must flow freely at 61° F., and on being cooled down to 46·5° F. and resting in a place undisturbed by vibration no separation shall take place at this temperature within the space of half an hour.

The following constituents shall not be present in quantities greater than the stated percentages—

Ash	·05 per cent.
Sulphur	1·0 „

Proportions of water and coke residue not stated.

Per cent. insoluble in xylol ·2.

(2) Continental specification for tar oil quoted by Mr. C. Day in his paper on 'Tars and Tar Oils as Fuel for Diesel Engines' (January 19, 1916) :—

Tar oils must not contain more than a trace of constituents insoluble in xylol.

The water content should not exceed 1 per cent.

The coke residue should not exceed 3 per cent.

At least 60 per cent. of the oil should be distilled on heating up to 300° C. (572° F.).

The net calorific value should not be less than 15,840 B.Th.U.'s per pound.

The open flash point must not be below 65° C. (143·6° F.).

The oil must be quite fluid at 61° F.

(3) Specification of tar oil proposed by Mr. C. Day (January 19, 1916) :—

The tar oil must be a product of the distillation of coal tar. No product that has not undergone distillation must be present.

Per cent. insoluble in xylol	Not more than	2·0
„ ash	„ „	0·08
„ water	„ „	2·5
„ coking residue	„ „	3·0

The oil must be liquid at 60° F. when maintained at that temperature for half an hour.

* C. Day. Paper read before the Diesel Engine Users' Association January 19, 1916.

(4) Specification of tar oil by Mr. Batho (the Diesel Engine Users' Association, February 23, 1916) :—

Specific gravity—Between 1·0 and 1·1.
Viscosity—Generally 2° Engler.
Flash point—100° F. to 130° F.
Colour—One drop on white paper should show no black residue, as is the case with tar.
Lower calorific value—Between 15,800 and 16,500 B.Th.U.'s per 1 lb.
Ash—Should not exceed 1 per cent. (unburnt residue of tar oil is mostly harmless).
Water—Should not exceed 1 per cent.
Sulphur—·5 to 1 per cent.

The burning of raw tars on Diesel engines has been accompanied by the same difficulties as the burning of tar oils, but an additional trouble is encountered on account of the free carbon which is always present in raw coal tars.

Furnace Firing with Liquid Fuel.

Liquid fuel possesses many advantages over coal or other solid fuels for furnace firing. The advantages when using heavy petroleum oils may be briefly enumerated as follows :—

(1) Petroleum fuel oil possesses a gross heat value of approximately 19,200 B.Th.U., whilst the gross heat value of coal averages about 14,000 B.Th.U. This fact alone shows two pounds of oil to be about equivalent to three pounds of coal.

(2) In spite of its lower specific gravity, oil can be stored in less space than a corresponding weight of coal.

One ton of coal occupies about 43 cubic feet.
„ oil „ 40 „

For marine purposes oil is conveniently stored in ballast tanks and inaccessible places, which could not be utilised for coal bunkerage.

(3) Oil rarely contains more than 0·1 per cent. of ash, a negligible quantity, while coal may contain as much as 15 per cent. ash. This ash necessitates the removal of clinker from the fires, and besides involving expense it causes a serious loss of heat.

(4) Oil can be conveyed by pipe line, a cheaper, cleaner and more rapid method than any method of coal conveying.

This is of great importance in naval work.

(5) Oil firing does not involve so much manual labour and attendance charges which accompany furnace firing with solid fuel.

(6) A boiler fired with oil will raise about 30 per cent. more steam than the same boiler coal fired.

(7) The furnace doors can be kept closed when oil firing, thereby increasing the efficiency of the boiler and lessening the wear and tear on the boiler plates caused by frequently being chilled with cold air, as is the case when burning solid fuel.

(8) Boilers can raise steam much more quickly when oil fired, thus lessening stand-by charges.

(9) Boilers fitted for burning both solid and liquid fuel may be run on coal under normal conditions, while oil can be burned for peak loads, thus minimising the number of boilers in use.

1 lb. coal under favourable conditions raises 9 lbs. steam.
1 lb. oil under similar conditions raises 14½ lbs. steam.

It is essential that firing devices for liquid fuel should break the oil into an exceedingly fine state of division, so that the air can reach the oil readily and ensure speedy combustion.

The methods of breaking up the oil are :—

(1) By means of steam.
(2) By means of compressed air.
(3) By a high pressure on the oil, which is pulverised on passing through a fine jet.
(4) By means of mechanical breaking up in a pulverising chamber.

Steam Jets.

The majority of oil-burning installations used on land are operated by steam. Steam is always available at the face of the boiler, and at the same time steam burners, though not giving quite so high an efficiency as air burners, give a soft flame, which is less liable to injure the plates or tubes with which it comes into contact. For marine purposes there is a distinct disadvantage in the use of steam on the oil burners, as it causes the loss of a considerable quantity of water, which has to be carried in storage tanks or else has to be specially prepared by a distillation plant whilst at sea. This drawback does not apply to land installations, where plenty of water is usually available. Steam burners operate on a variety of principles, the majority of constructions being somewhat in the form of an injector.

The Kermode steam jet burners, which have met with much success on land service, are designed to impart a rotary motion to the gases by passing the oil through a helical groove. The steam is passed through an annular space surrounding the oil duct, and in addition to causing atomisation, it is used to induce an air current which assists in the combustion of the fuel.

With the Holden steam jet burner, fuel steam and air are passed through annular spaces, the centre of the burner being left open to facilitate cleaning.

Another principle used for pulverising oil by a steam jet is to allow the oil to trickle from a weir over a thin slit through which the steam is passing. This system is used in the common type of burner known as the 'Mexican trough.' A modification of this principle is also used in the Ajax burner, made by Bamford & Co.

Compressed Air Burners.

The use of compressed air for pulverising purposes allows a higher efficiency on boiler-firing installations. At the same time the saving is not so great as might be anticipated, as the steam or power used for driving the compressors is almost as great as the amount lost through steam burners. The flame has a higher temperature than that of the steam jet, and greater care must be taken to prevent it impinging on the plates. Some of the most recent types of compressed air burners will operate on air at low pressure (about 10 lbs. per square inch), and therefore do not necessitate costly air compressors, as they can be operated with complete satisfaction by low-pressure air from a rotary blower. Such burners are the 'White' burner, the 'J. Samuel White,' and one of the burners by Alldays Onions.

The Oil Pressure System.

This is mainly used for marine purposes, and complete oil-burning installations on this principle are comparatively expensive, on account of the necessity for well-constructed and effective preheaters, fitters, and the specially constructed fuel pumps.

In this type of burner the oil is forced through fine jets under a comparatively high pressure. Many burners are so constructed as to impart a rotary motion to the pulverised fuel (e.g. Korting burner). The pressure system, although expensive, is probably the most efficient of oil-burning appliances. The power consumed in driving the fuel pumps is almost negligible, and the combustion is excellent. The pressure system is meeting with much success in marine work at the present time. Good examples of this type of apparatus are made by the Wallsend Slipway Co., Kermode, and Korting.

Mechanical Pulverisers.

It is possible also to pulverise oil by mechanical means, such as breaking the oil up in a squirrel cage. The rich oil-fog thus produced can then be treated as a gas and burned together with secondary air in the furnace. Installations of this type, however, have not met with much success, probably on account of their high initial cost.

Atomisers.

Holden's steam atomiser is shown by fig. 26; fig. **27** shows the Guyot atomiser used in the French Navy.*

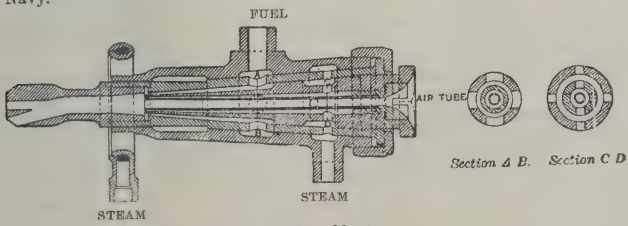


Fig. **26.**

Where boilers have the mixed coal and oil system, the oil is best atomised into the front of the furnace, parallel with the grate and about 10 ins. above it.

Where liquid fuel is used alone, the draught required is very small, because the greater part of the draught is always spent in overcoming the resistance of the fuel bed on the grate.

* From 'Liquid Fuel and its Combustion,' by W. H. Booth.

Whereas the calorific capacity of liquid fuel is roundly 20,000 B.Th.U. per pound, as compared with 15,000 for best coal, the commercial value is more nearly as 2 : 1, because liquid fuel can be burned perfectly with very little excess of air, and the temperature in the furnace is higher, the boiler efficiency is better, the boiler being also cleaner, and there are no expenses for removal of ashes and for flue cleaning. About 15½ pounds of air are required chemically to burn one pound of liquid fuel, or say 200 cubic feet of air. In the mixed system of coal and oil firing, a large excess of air may be admitted through the coal fire, and will be used by the oil, which is atomised above the fire.

In locomotives the blast-pipe may be much enlarged for liquid fuel so as to soften the draught. The Macallan variable blast-cap is used on the Great Eastern Railway for this purpose. The flow of oil requires special regulation. Exactness is secured by such devices as a stop-cock, in which the hole through the plug is square and placed diagonally, thus admitting of fine regulation.

To be successful, the burning of oil fuel must follow the lines of successful bituminous coal combustion, viz., air mixture, space, and temperature; hence the need for refractory brick linings to keep off the too early chilling effect of cold plates. In steam raising, liquid fuel has a higher percentage efficiency than solid fuel, because less excess of air need be employed; furnace temperature is higher, causing higher efficiency of heating surface, which is also cleaner. There is a large

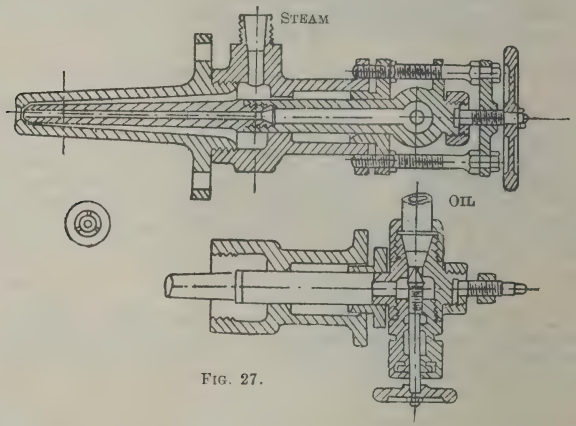


FIG. 27.

saving in labour of stoking, cleaning, ash removal, etc., but perhaps greater expense in firebrick renewals.

Liquid fuels can be burned by means of mechanical burners, without steam or air spraying, if heated to not much more than 140° F., and forced through a whirling jet nozzle at a pressure of not less than 40 lbs. per sq. in. and, with benefit, up to 150 lbs.

For general purposes ashore, high-pressure steam is a more satisfactory spraying agent than air.

At sea, for forced draught conditions, the United States Navy Liquid Fuel Board consider air to be the best medium, especially as it avoids the otherwise inevitable loss of fresh water.

In the ss. 'Nebraskan,' oil heated to 175° F. was atomised by air of 1¼ lb. pressure. The oil had a pressure itself of 15 lbs., and a very fine spray resulted; the air was heated. Retarders were necessary in the 3-in. tubes of the Scotch boilers to enable the heat of the gases to be utilised by retarding the flow, or probably by mixing up the gas.

WALLSEND-HOWDEN PATENT LIQUID FUEL BURNING SYSTEM.

In this system the liquid fuel is injected into the furnaces under pressure by means of special oil-fuel pumps, these pumps being fitted in duplicate so that one can act as a stand-by in cases of breakdown to the working pump. On its way to the burners the liquid fuel is passed through strainers and heaters in which it is thoroughly filtered and then heated to the correct temperature.

The oil is forced into the furnace in the shape of a conical spray of exceeding fine particles,

JAMES HOWDEN & CO.

LIMITED.

Head Offices and Works:

SCOTLAND STREET,

GLASGOW.

Branch Offices—

LONDON:

9 Billiter Square, E.C. 3.

and

CAXTON HOUSE,

Westminster,

S.W. 1.

Branch Offices—*cont.*

LIVERPOOL:

Cunard Building.

MANCHESTER:

86 Cross Street.

NEWCASTLE-ON-TYNE:

Milburn House.

NEW YORK:

277 Broadway.

HOWDEN'S

PATENT

FORCED DRAUGHT

IS APPLIED TO

ALL THE LEADING STEAMSHIPS OF THE WORLD.

FANS,

FAN ENGINES (all types),

FURNACE FRONTS,

RETARDERS,

SILLEY SMOKE BOX DOORS, etc., etc.

WALLSEND-HOWDEN OIL-BURNING APPARATUS.

HIGH SPEED STEAM ENGINES enclosed type with forced lubrication for TRACTION, POWER and LIGHTING.

STEAM TURBINES FOR ELECTRICAL PURPOSES.

HOWDEN WATER DRUM BOILERS.

3 Y

F. 1820

THORNYCROFT

FAST PASSENGER STEAMERS and CARGO VESSELS up to 5,000 tons.

HIGH SPEED MOTOR BOATS. TUGS.

Pleasure Power-Craft of all types.

WATER TUBE BOILERS AND OIL FUEL GEAR.

SHIPS' REPAIRS and OVERHAULS.

MARINE, OIL & PETROL MOTORS from 15 b.h.p.

MOTOR VEHICLES for 2, 3, 4 & 5 tons.

John I. THORNYCROFT & Co. Ltd.

Shipbuilders and Engineers,
Thornycroft House, Smith Sq.,
Westminster S.W. 1.



which burst into flame at a distance of six to eight inches from the nozzle. The flame being conical, and there being no fire-bars fitted in the furnace, the whole circumference of the furnace is available for heating surface. This is a great advantage in the ordinary multitubular boiler, as the lower portion of the boiler becomes heated sooner than would be the case with coal, and consequently the circulation of the water in the boiler is improved. Moreover, as the lower portion of the boiler is heated up uniformly with the upper portions, and as there is no inrush of cold air, since there are no furnace doors to be opened, there is practically none of that straining action which results from unequal expansion and contraction, due to rapid changes consequent on the opening of the door in coal stoking.

In the improved construction of the furnace front arrangement (fig. 28), which constitutes the principal feature of the arrangement, each of the oil fuel spraying nozzles projects through a

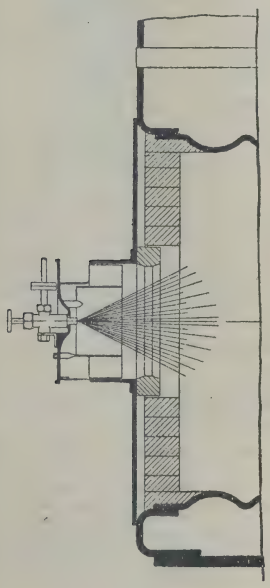


FIG. 28.

Arrangement for Working under Natural Draught or Closed Stokehold Draught.

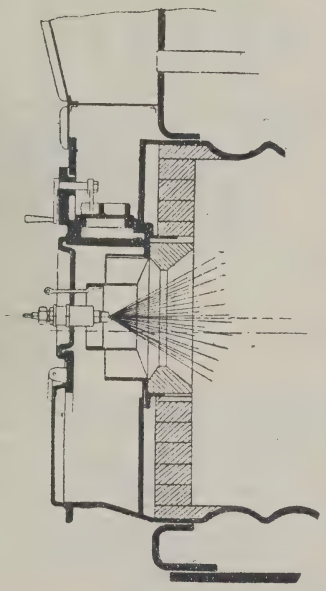


FIG. 29.

Arrangement for Working under Howden's Forced Draught.

baffle plate or the front plate of the casing into an air trunk having lateral openings at its outer end. This air trunk projects concentrically with a second air trunk carried by the furnace front, and the annular space between the inner and outer air trunks is fitted with deflectors constructed in such a manner as to give the air passing through the annulus a spiral motion. One result of this arrangement is, that the openings for the supply of air are so disposed that direct radiation of heat from the furnace is prevented. The admission of air through the second or outer air trunk keeps the outer casing cool, and hence radiation from this part is reduced to a minimum. A feature of the arrangement is the small amount of brickwork required.

With this system steam can be raised on any boiler from the start by means of oil fuel. This advantage is obtained by means of a special design of auxiliary heater and pump.

The Wallsend System is specially adapted for burning oil in conjunction with coal.

When burning liquid fuel on this system with Howden's Forced Draught, fig. 29, 16·22 pounds of water were evaporated (from and at 212° F.) per pound of oil burnt. The calorific value of the liquid fuel was 18,770 British Thermal Units, giving a boiler efficiency of 83·9 per cent.

Thornycroft Oil Fuel System.

In this system, fig. 30, the oil is sprayed under pressure into the furnace by means of a special patent sprayer having both edges of supply grooves tangential to the whirling chamber, the spray being produced within a steel cone of special construction which introduces and mixes the air and the oil-spray in such a manner as to produce perfect combustion. The system can be applied to either water-tube or marine type boilers. Water-tube boilers can be arranged for either oil only or coal combined with oil.

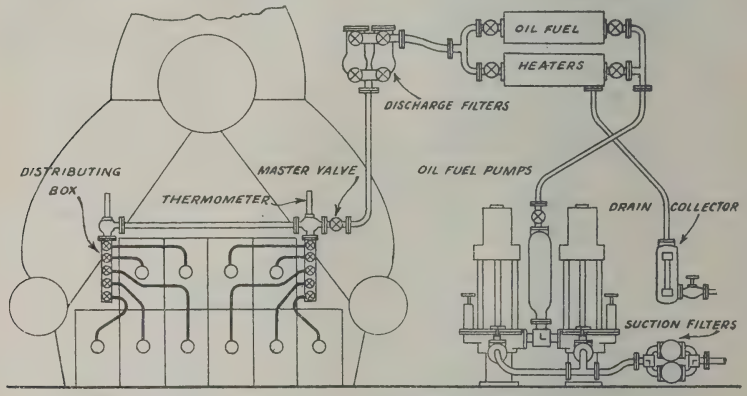


FIG. 30.—The Thornycroft Oil Fuel System.

The oil, which may be of any crude description such as Texas, Borneo, Mazout, or Shale, is stored in tanks in any part of the ship, and is drawn to the stokehold by a pump which forces it through the necessary strainers and the tubular steam-heater to the sprayers.

Lighting up is effected with crude oil by means of a U tube and hand-pump. Steam can be raised in from half to three-quarters of an hour.

When fitted in conjunction with Thornycroft boilers of latest design and fairly large size the makers are prepared to guarantee that the equivalent evaporation will be at least 16 lbs. of water from and at 212° F. per lb. of oil per hour, if the rate of evaporation does not exceed 4 to 5 lbs. per sq. ft. from and at 212°, and they can guarantee a maximum output of 18½ lbs. per sq. ft. from and at with an evaporation of 14 lbs. per lb. of oil from and at. This rapid rate of evaporation has no detrimental effect on the boiler if the arrangement is properly designed, while the combustion is smokeless up to moderate powers, and smoke is only just visible at the highest powers.

These results enable very large powers to be developed on small weight, and with the highest efficiency, and at small cost. The number of men necessary for a stokehold developing 16,000 h.p. is only 3.

Air required for Oil Fuel Combustion.

The amount of air required in practice at normal atmospheric temperature for the combustion of 1 lb. of oil fuel is from 250 to 450 cub. ft.; this is 1·6 to 2·5 times the theoretical amount.

British Admiralty Specification for Oil Fuel for the Navy.

(*Abstract.*)

'The oil fuel supplied shall consist of liquid hydrocarbons, and may be either (*a*) shale oil or (*b*) petroleum, as may be required, or (*c*) a distillate or a residual product of petroleum, and shall comply with the Admiralty requirements as regards flash-point, fluidity at low temperatures, percentage of sulphur, presence of water, acidity, and freedom from impurities.



From : OIL FIELD to BOILER

Pipe Line Pumps
Refinery Pumps
Transfer Pumps
Oil Cargo Pumps
Oil Fuel Pumps

Special Weir Designs for all Classes of Oil.

G. & J. WEIR, Ltd. CATHCART GLASGOW

F. 1822

IF YOU HAVE TROUBLE WITH CORROSION, or the failure of metals due to the action of Alkalies, Salt Water, or Superheated Steam—TRY



—a natural nickel-copper alloy successfully used in Soap Works, Sugar Refineries, Chemical Works, Dye Works, etc., where other metals have failed. Booklet on application.

G. & J. WEIR, Ltd. Monel Department CATHCART, GLASGOW

F. 1823

'The flash-poin ishall not be lower than 175° Fahr., close test (Abel or Pensky-Martens). The proportion of sulphur contained in the oil shall not exceed 3·00 per cent. The oil fuel supplied shall be as free as possible from acid, and in any case the quantity of acid must not exceed 0·05 per cent., calculated as oleic acid when tested by shaking up the oil with distilled water, and determining by titration with deci-normal alkali the amount of acid extracted by the water, methyl orange being used as indicator. The quantity of water delivered with the oil shall not exceed 0·5 per cent.

'The viscosity of the oil supplied shall not exceed 2,000 secs. for an outflow of 50 cubic centimetres at a temperature of 32° Fahr., as determined by Sir Boverton Redwood's standard viscometer (Admiralty type for testing oil fuel). The oil supplied shall be free from earthy, carbonaceous, or fibrous matter, or other impurities which are likely to choke the burners.'

British Admiralty Specification for Oil Fuel for use in Diesel Engines.

'Quality :—The oil fuel supplied shall consist of liquid hydrocarbons, and may be either (*a*) shale oil, or (*b*) petroleum, as may be required, or (*c*) a distillate, or a residual product of petroleum, and shall comply with the Admiralty requirements as regards flash-point, fluidity at low temperatures, percentage of sulphur, presence of water, acidity and freedom from impurities.

'The flash-point shall not be lower than 175° Fahr., close test (Abel or Pensky-Martens). (This compares with a flash-point of 200° Fahr. in 1910.)

'The proportion of sulphur contained in the oil shall not exceed 3·00 per cent. (as against 0·75 in 1910).

'The oil fuel supplied shall be as free as possible from acid, and in any case the quantity of acid must not exceed 0·05 per cent., calculated as oleic acid when tested by shaking up the oil with distilled water, and determining by titration with deci-normal alkali the amount of acid extracted by the water, methyl orange being used as indicator. (In 1910 it was required that the oil should be free from acidity.)

'The quantity of water delivered with the oil shall not exceed 0·5 per cent.

'The viscosity of the oil supplied shall not exceed 2,000 secs. for an outflow of 50 cubic centimetres at a temperature of 32° Fahr., as determined by Sir Boverton Redwood's standard viscometer (Admiralty type for testing oil fuel).

'The oil supplied shall be free from earthy, carbonaceous, or fibrous matter, or other impurities which are likely to choke the burners.

'The oil shall, if required by the inspecting officer, be strained by being pumped on discharge from the tanks, or tank steamer, through filters of wire gauze having 16 meshes to the inch.

'The quality and kind of oil supplied shall be fully described. The original source from which the oil has been obtained shall be stated in detail, as well as the treatment to which it has been subjected and the place at which it has been treated. The ratio which the oil supplied bears to the original crude oil should also be stated as a percentage.'

Special Oil Mixtures used for External Combustion.

Pitch-Creosote Mixtures.

Recently the use of mixtures of pitch and coal tar creosote has become common for furnace firing.

The pitch creosote oils are marketed in three grades containing 25 per cent., 50 per cent., and 75 per cent. pitch respectively. As pitch is but little lower than creosote in heat value, and generally commands about half the price, there is a pronounced economic advantage in burning pitch mixtures wherever possible.

Petroleum-Tar Mixtures.

The addition of tar or tar products to heavy petroleum oils causes a thick semi-solid deposit of pitch to separate, and this has till recently prevented the use of such mixtures. This difficulty has recently been overcome by the use of emulsifying agents which are capable of maintaining the constituents in a state of emulsion for prolonged periods.

Coal Dust-Petroleum Mixtures.

The U.S. Navy authorities have met with success in preparing fuel mixtures from very fine coal dust mixed with petroleum fuel oil. The coal is prevented from settling by the action of emulsifying agents. Such oils are claimed to have given satisfaction for boiler firing on the U.S. warships.

Safety in Use of Oil Burners.

Serious accidents to engineers and firemen have frequently occurred from the practice of improper methods of lighting and handling oil fires.

In starting a new fire the steam should be turned on and the bypass opened in order that the oil and steam passage may be cleaned out and warmed up. The bypass should then be closed and the steam shut off. Then the damper must be opened ; on no account try to start a fire with a damper closed. Next light a torch or bunch of oily waste and place about 10 ins. to 12 ins. in front of the burner, turn on a small amount of steam (just enough to carry the oil from the burner tip to the torch) and crack the oil control valve a little. As it generally takes some little time for the oil to fill the burner passage, do not turn on more fuel but wait until the passage is filled, when the fire will light easily.

The moment the fire is out, either intentionally or accidentally, the oil should be shut off and the door opened. After a few minutes the gases (which are violently explosive) will have passed off and the fire may be rekindled.

In regulating a fire the attendant should hold the door open just enough to enable him to watch the flame and be in a position to duck his head in case of a flare back. To increase the fire the oil valve should be operated first, then the steam turned on until the flame is clear. If not enough steam is used, the flame will appear red and smoky ; too much steam will cause the fire to look ragged and will have a tendency to extinguish it. In reducing the flame the steam is throttled down first, then the oil is reduced.

Once the fires have been set, they may be regulated over quite a range by increasing or decreasing the pressure applied to the oil supply without opening the fire-door or changing the steam supply. This can be done by manipulating the pump throttle or a bypass valve between the suction and discharge lines.

When extinguishing a fire, the flame should be cut down as low as possible ; then by opening the bypass immediately after shutting the oil valve, the oil passage will be blown out without danger, as the flame will not be extinguished until the passage is clear.—*A. C. McHugh.*

Notes on Oil Fuel.

At a large London factory at which some Lancashire boilers were converted from coal to fuel oil firing, the water evaporation per lb. of coal, having a calorific value of 11,451 B.Th.U., was 7·22, whereas when working with the pressure system of oil burning, using an oil having a calorific value of 18,750, the evaporation per lb. of oil reached 14·44 lbs. The quantity of water evaporated per sq. ft. of heating surface with coal was 3·3 lbs., whereas, according to Mr. A. F. Baillie in a paper read before the Manchester Association of Engineers, the quantity evaporated with oil was over 7 lbs., thereby increasing the boiler rating by over 100 per cent.

In most engines of the hot-bulb type, oil fue commonly known as gas oil or residuum is employed, this having a specific gravity of between 0·86 and 0·9. In some motors Tarakan crude oil has been used with success, whilst the other Mexican fuel oil, in spite of its relatively high percentage of sulphur, has operated very successfully. Paraffin is, of course ,also suitable for these motors, but owing to its high price it is not often made use of.

GASEOUS FUELS.

The more important gaseous fuels used commercially are generally mixtures. The combustible gases found in such mixtures are hydrogen, carbon monoxide together with the three hydrocarbons—methane, ethylene, and acetylene—also higher hydrocarbons of the series of which these are examples, together with benzene vapour, and occasionally other hydrocarbons.

Calorific Values, etc., of Gaseous Fuels.

In the table on page 1825 the calorific values per lb. of the usual fuels are given, together with the weight of the products of combustion, both when burnt in pure oxygen and also when burnt in dry air. The 'higher value' is that obtained when the water produced in the combustion is considered as having been condensed to the liquid condition, thus yielding up heat at the rate of about 970 B.Th.U. per lb. produced.

Usually in calculations relating to internal combustion engines it is found more convenient to deal with the volume rather than the mass of the gaseous mixture ; accordingly in the

Fuel. 1 lb. of :—	Sp. Gr. (H = 1).	Burnt to :—	Combustion per Lb. of Fuel.					Heat of Combustion in B.Th.U. per Lb.	
			Lbs. of Oxygen needed.	Lbs. of Air needed.	Weight of Products in Lbs.			Higher Value.	Lower Value.
					Burnt in Oxygen.	Burnt in Air.	Lbs. of Nitrogen.		
Column :—	1.	2.	3.	4.	5.	6.	7.	8.	9.
Hydrogen	1	H_2O	8·0	34·80	9·0	35·80	26·80	61,500	52,800
Marsh gas . . .	8	H_2O & CO_2	4·0	17·40	2·75 CO_2 2·25 H_2O 5·00 Total	18·40	13·40	24,000	21,820
Carbon	—	CO	1·334	5·80	2·334	6·80	4·466	4,400	4,400
Carbon	—	CO_2	2·667	11·60	3·667	12·60	8·933	14,600	14,600
Acetylene	13	H_2O & CO_2	3·077	13·385	3·3846 CO_2 0·6924 H_2O 4·077 Total	14·385	10·308	21,850	21,180
Carbon monoxide . .	14	CO_2	0·571	2·484	1·571	3·484	1·913	4,370	4,370
Olefiant gas . . .	14	H_2O & CO_2	3·4285	14·914	3·143 CO_2 1·285 H_2O 4·428 Total	15·914	11·486	21,900	20,660
Alcohol (abs.) (vapour)	23	H_2O & CO_2	2·087	9·078	1·913 CO_2 1·174 H_2O 3·087 Total	10·078	6·991	12,420	11,285
Normal benzene (vapour)	39	H_2O & CO_2	3·077	13·385	3·385 CO_2 0·692 H_2O 4·077 Total	14·385	10·308	18,000	17,330

following table the calorific value and weight per cubic foot at N.T.P. and also at 60° F. and atmospheric pressure are given for the usual fuels :—

CALORIFIC VALUES, AND WEIGHTS PER CUBIC FOOT.

1 Cubic Foot of Gas.	Weight in Lbs. per Cub. Ft.		Calorific Value ; B.Th.U. per Cub. Ft.			
			At N.T.P.		At 60°F. & 1 Atm.	
	At N.T.P.	At 60°F. & 1 Atm.	Higher.	Lower.	Higher.	Lower.
Column :—	1.	2.	3.	4.	5.	6.
Hydrogen	·00559	·00529	344	295	325	279
Methane	·04472	·04231	1,073	976	1,015	924
Acetylene	·07267	·06875	1,588	1,539	1,502	1,456
Carbon monoxide	·07826	·07403	342	342	323·6	323·6
Ethylene	·07826	·07403	1,714	1,617	1,621	1,529

One cubic foot of CO_2 at N.T.P. weighs ·12298 lb. ; in its formation from free carbon and oxygen 490 B.Th.U. were evolved.

At 60°F. (15·5° C.) and 1 atm. one cubic foot of CO_2 weighs ·11634 lb , and in its formation 463 B.Th.U. were evolved.

In the following table the volumes of oxygen and of air just necessary for the complete combustion of one cubic foot of gas are given, together with the change of volume of the products of combustion and the heat evolved per cubic foot of the mixture of gas and air before combustion :—

VOLUMES OF OXYGEN AND OF AIR NECESSARY PER CUBIC FOOT OF GAS, AND HEAT PER CUBIC FOOT.

One Cubic Foot of Gas.	Cubic Feet for Complete Combustion.		Vol. of Mixture before Combustion in Cub. Ft.		Cubic Feet of Nitrogen in Mixture.	Ratio of Vol. of Nitrogen to whole Volume.	Vol. of Mixture after Combustion in Cub. Ft.		Ratio of Final to Initial Volume.	B.Th.U. evolved per Cub. Ft. of Initial Volume with Air at 60°F. & 1 Atm.
	Of Oxygen.	Of Air.	With Oxygen.	With Air.			With Oxygen.	With Air.		
Column :—	1.	2.	3.	4.	5.	6.	7.	8.	9.†	10.*
Hydrogen . .	0·5	2·4	1·5	3·4	1·9	·56	1·0	2·9	·853	82
Methane . .	2·0	9·6	3·0	10·6	7·6	·716	3·0	10·6	1·000	87·2
Acetylene . .	2·5	12·0	3·5	13·0	9·5	·731	3·0	12·5	·962	112·0
Carbon monoxide	0·5	2·4	1·5	3·4	1·9	·56	1·0	2·9	·853	95·2
Ethylene . .	3·0	14·4	4·0	15·4	11·4	·740	4·0	10·6	1·00	99·3

† Of mixture with air. * Lower values.

Hydrogen.

From the above table it will be noted that a hydrogen-air mixture contracts after combustion to only ·853 of its initial volume, the pressure of the explosion being correspondingly reduced. Further, notwithstanding the very high calorific value of hydrogen *per pound*, its excessive bulkiness results in a heat evolution of only 82 B.Th.U. *per cubic foot* of its admixture with air at 60°F. and atmospheric pressure. Hydrogen-air mixtures are also very sharply explosive and trouble is experienced in engines from pre-ignition at the compression pressures usual in practice when hydrogen is present in large proportion in a gaseous fuel. Thus it is clear that hydrogen alone would be a comparatively poor and very troublesome fuel to employ for power purposes, though its presence is often beneficial in conferring sufficiently prompt inflammability upon dilute mixtures of other gases. For heating purposes a large hydrogen content is advantageous on account of the high temperature obtained in its combustion. Hydrogen constitutes about 45 per cent. by volume of modern coal gas, on the average.

Marsh Gas.

Marsh Gas (Methane) is an excellent fuel for power purposes; it has a greater heat value per cubic foot of air mixture than hydrogen, and the volume of the products of combustion is equal to that of the mixture before combustion.

The 'natural gas' so largely used in the United States consists principally of marsh gas, that of Olean (N.Y.), for example, containing no less than 96½ per cent. of this constituent. In 1908 more than 100,000 horse-power was developed by engines operated by natural gas in the United States; the gas usually issues from the wells at high pressure, occasionally approaching 1,000 lbs. per sq. in. The Snow engine of the N.Y. & Penn. Traction Co. at Olean is supplied by natural gas issuing at a pressure of 200 lbs. per sq. in., which is reduced down to 1·8 lb. per sq. in. before being admitted, mixed with air, to the engine. With natural gas compression pressures of 150 lbs. per sq. in. are common, and mean effective pressures of 80 lbs. per sq. in. are often attained.

Acetylene.

Acetylene has so far been but little used as a fuel for internal combustion engines. It is very violently explosive when mixed with air, and owing to its endothermic nature the pressure developed is unusually high.

The range of explosive mixtures with air is also considerable; Grover found that at atmospheric pressure explosive mixtures were produced with one volume of acetylene to from 4 to 18 volumes of air; at a compression of three atmospheres even a 30 : 1 air-acetylene mixture was found to be explosive.

Acetylene is soluble in water to the extent of 1·1 volume; in alcohol to about 6 volumes; while acetone at 60°F. and atmospheric pressure absorbs about twenty-five times its volume of the gas, and at a pressure of about 180 lbs. per sq. in., about 300 volumes. A solution of acetylene in acetone contained in a porous matrix under a pressure of 150 lbs. per sq. in., is sold commercially as dissolved acetylene ('D. A.'); the 'D. A.' cylinders contain 100 times their own volume of acetylene at 60°F. and ten atmospheres. Commercial calcium carbide on addition of water usually yields about 4½ cubic feet of acetylene per lb.

If bubbled through petrol, acetylene gas becomes heavily 'carburetted'; 100 cubic feet of acetylene thus treated will produce about 150 cubic feet of 'carburetted' acetylene. According to Dr. Caro, as a heating agent this exceeds pure acetylene about in the ratio of 3 : 2.

Used as a fuel for internal combustion engines some remarkable results have been obtained with acetylene. Some early tests on a 2 h.-p. engine showed that only 8¾ cub. ft. of the gas were required per b.h.p. hour, as against 35 cub. ft. of coal gas. In another case 6·35 cub. ft. of acetylene yielded 1 b.h.p. hour. And with a 6 h.p. engine using a 20 : 1 mixture, and a compression pressure of 115 lbs. per sq. in., Cuinat found that only 6·26 cub. ft. of acetylene were consumed per b.h.p. hour, the consumption by volume of coal gas being about three times as great. Specially designed acetylene engines of from 1 to 10 b.h.p. are built; these are mainly employed in pumping water for the generators of large village installations. The average consumption is about 7 cub. ft. of acetylene per b.h.p. hour, costing about 2¼*d.*; it is thus an expensive fuel for power purposes, as at present produced.

Several types of acetylene self-starting devices for the engines of motor vehicles have appeared during recent years, but unless caution be exercised in their use the extreme suddenness and violence of the starting explosion may result in damage to piston or cylinder.

See also Index.

Carbon Monoxide.

Carbon Monoxide yields the large return of 95·2 B.Th.U. per cubic foot of mixture with air, notwithstanding its low calorific value per lb.; this results from its weight being fourteen times that of hydrogen. The products of combustion occupy, however, only 0·835 of the volume of the original mixture; it is the principal combustible constituent of producer and blast furnace gas. Carbon monoxide is extremely poisonous, forming with the red corpuscles of the blood a stable chemical compound of a bright red colour termed carboxyhæmoglobin; care must always be taken to prevent any leakage of the gas into the atmosphere, and all engine and producer houses should be freely ventilated.

Olefiant Gas.

Olefiant Gas (Ethylene) is usually present to a small extent (up to about 4 per cent. by volume) in coal gas, and is a valuable producer of heat.

Owing to Government restrictions on the use of petrol, many trials were made in the use of coal gas as a fuel for motors designed for the use of liquid fuels. Large gas-proof bags have been attached to the roofs of taxi-cabs, or placed underneath motor buses, and good running obtained by filling up with coal gas at frequent stopping stations. Needless to say, the mileage of such an arrangement is very limited. Otherwise its performance is quite satisfactory, and, at present prices, considerably more economical than the use of petrol.

GASEOUS FUELS EMPLOYED IN GAS ENGINES.

1. Natural Gas.
2. Coal Gas.
3. Coke-oven Gas. (See page 1829.)
4. Acetylene Gas. (See page 1829.)
5. Producer Gas. (See page 1830.)
6. Blast Furnace Gas. (See page 1844.)

NATURAL GAS.

Natural Gas.—Large quantities of natural gas are evolved in most petroleum oilfields. The composition of the gas varies in different localities, but it always contains a high percentage of methane. The net calorific power is usually 750 to 950 B.Th.U. per cubic foot. It is used in gas engines and for heating and illuminating purposes.

2. COAL GAS.

Coal Gas is still almost exclusively used in the smaller sized stationary gas engines, especially in towns; it is an admirable fuel for internal combustion engines of any size, however large, but its use for considerable powers is usually precluded by its relatively high cost. The introduction of the Welsbach mantle, and the largely increased use of gas for domestic heating and cooking, has enabled the gas companies within recent years to supply a gas of lower intrinsic illuminating power than formerly at less cost to the consumer, and this reduction in cost has done much to encourage its use for power purposes.

The composition and properties of coal gas have been considerably affected by war conditions. The following table gives the pre-war composition and heat values of coal gas from several centres :—

CONSTITUTION AND CALORIFIC VALUE OF COAL GAS.

Place of Manufacture.	100 Volumes of Gas contain of :—							B.Th.U. per Cubic Foot at 60°F. and 1 Atm.
	H	CH_4	CO	Heavy Hydro-carbons.	CO_2	O	N	
Column :—	1	2	3	4	5	6	7	8
								(Lower)
Cambridge . .	47·2	35·2	7·15	4·8	0	0·25	5·4	585
Sheffield . .	46·86	35·6	7·35	5·42	0·25	0·43	3·21	620
London . .	45·2	29·9	10·3	5·1	0	0·5	10·0	538
Birmingham . .	43·4	33·67	9·46	4·48	0·16	0·13	8·7	553
Manchester . .	42·9	30·93	14·99	6·8	2·14	0·0	2·24	578
Average . . .	45	33	10	5·3	0·5	0·3	5·9	575

The average composition by volume from these five analyses is given in the bottom line; from table on page 1826 the corresponding calorific value per cub. ft. at 60° F. (15·5° C.) and 1 atm. (lower) is estimated as follows :—

Item.				B.Th.U.
Hydrogen	0·45	×	279	= 125·5
Marsh gas.	0·33	×	924	= 308·0
Carbon monoxide	0·10	×	323·6	= 32·3
Heavy hydrocarbons (say)	0·053	×	2000	= 106·0
Total B.Th.U. per cub. ft.				= 571·8

Say, roundly, 572.

The volume of air theoretically just necessary for complete combustion of this gas is estimated by aid of the second table on page 1826 as follows :—

Item.				Cub. Ft. of Oxygen necessary.
Hydrogen	0·45	×	0·5	= 0·225
Marsh gas	0·33	×	2·0	= 0·660
Carbon monoxide	0·10	×	0·5	= 0·050
Heavy hydrocarbons (say)	0·053	×	5·0	= 0·265
Total vol. of oxygen necessary				= 1·200 cub. ft.

The corresponding volume of air needed, as the gas contains 0·003 of its vol. of free oxygen, is : (1·200—·003) × 4·8 = 5·75 cub. ft.

BRICK AND FUEL ECONOMY

ON the authority of Sir Charles Ruthen, President for 1922 of the Society of Architects, no less than ONE MILLION HOUSES are needed to meet urgent demands.

If these million houses are built to use gas in lieu of coal for heating and cooking purposes, no less than *5,000 bricks in each house can be saved* owing to the substitution of small flues in the walls for chimney stacks and chimney breasts.

The consumption of gas in the house in preference to solid fuel conserves the nation's coal and secures for the consumer the maximum of efficiency, economy and convenience.

This question has been specifically discussed in Issue No. 81 of an illustrated monthly for business men and women entitled 'A Thousand and One Uses for Gas,' which will be orwarded post free, on receipt of 6d. in stamps, by the Secretary—

The British Commercial Gas Association



30 Grosvenor Gardens, S.W. 1

F. 1828

5. PRODUCER GAS.

In normal combustion, when an excess of air is present in the combustion space, the carbon of the fuel is burnt to form carbon dioxide according to the reaction

$$C+O_2 \rightarrow CO_2.$$

Nitrogen from the air passes through the combustion space into the resulting gas without entering into the reaction. By this reaction one pound of carbon generates 14,647 B.Th.U.

By restricting the air supply and arranging to maintain a comparatively great depth of fuel upon the grate the carbon may be burnt into carbon monoxide according to the reaction

$$2C+O_2 \rightarrow 2CO,$$

nitrogen again passing through the grate without being affected.

By this latter reaction, 4,400 B.Th.U. are generated for each pound of carbon gasified, the residual heat value obtainable from the carbon by complete combustion, i.e. 14,647 − 4,400 = 10,247 B.Th.U., remaining in the resultant gas.

The greatest quantity of heat obtainable in the form of cool carbon monoxide from the air-carbon reaction is therefore only $\frac{10,247}{14,647} = 70$ per cent. of the heat originally available in the carbon.

Of the 30 per cent. of heat given out during the reaction, a large portion leaves the producer in the form of sensible heat.

The heat generated in the producer is sufficient to cause a temperature too high for satisfactory working.

In order to cool the producer and to utilise this excess of heat, steam is introduced into the combustion space, when, if conditions are favourable, the following reaction takes place:

$$C+H_2O \rightarrow CO+H_2,$$

For each pound of fuel entering into the reaction 4,320 B.Th.U. *are absorbed* from the heated fuel.

By the use of air and steam in certain proportions, it is possible to absorb the excess heat generated by the air reaction and maintain a practically constant temperature in the producer.

By alternately blowing the producer with an excess of air and raising its temperature by the combustion of carbon, either to the monoxide or to the dioxide, and then cutting off the air supply and passing steam into the hot fuel until the producer temperature has again fallen it is possible to generate water gas (the result of the steam-carbon reaction) which may be collected separately.

Water gas in conjunction with oil gas (generated by the cracking of heavy petroleum distillates) is largely used for the preparation of illuminating gas in normal times.

As the fuel used is not pure carbon, other considerations than those mentioned in the above theoretical outline affect producer design and working. As coals undergo a destructive distillation in the producers it is necessary to make use of special devices for the removal of tar from the producer gas. The recovery of ammonia generated from the nitrogen of the coal is also of the greatest importance in the economics of producer gas plants. These particulars are treated in greater detail in the following descriptions of various types of plant.

(*a*) Pressure producer gas from anthracite (Dowson).
(*b*) " " " coke (")
(*c*) Suction and suction-pressure producer gas from anthracite (Dowson).
(*d*) " " " " wood, sawdust, chips (Dowson).
(*e*) " " " " charcoal (Dowson).
(*f*) " " " " coke and anthracite (Dowson).
(*g*) " " " " coke (Dowson).
(*h*) " " " " bituminous coal (Dowson).
(*i*) Pressure producer gas from bituminous coal (Mond).
(*j*) Suction and suction-pressure producer gas from anthracite (Mond).
(*k*) " " " " coke (")
(*l*) " " " " charcoal (")
(*m*) Suction-pressure producer gas from wood, semi-bituminous (")
(*n*) Suction producer gas from bituminous coal (Farnham).
(*o*) Producer gas from other substances, as colliery refuse, sawdust, wood chips, cocoanut shells, belt pickings, lignite, and peat.

In the table on page 1828 some results of analyses are given of producer gas from anthracite, coke, and bituminous coal. The number of cub. ft. of air necessary for just complete combustion is obtained by aid of table on page 1826 from the formula :—

$$\text{Cub. ft. of air} = \frac{4{\cdot}8}{100}\left\{\tfrac{1}{2}(H + CO) + 2\,CH_4 - O\right\} \quad . \quad . \quad . \quad . \quad (21)$$

the values of H, CO, CH_4, and O being as in table on page 1828.

COMPOSITION OF PRODUCER GASES WITH HEAT VALUES, ETC.

Description of Producer Gas.	Kind of Fuel used.	Per Cent. Composition by Volume.						B.Th.U. per Cub. Ft. (lower) at 60°F. (15·5° C.) and 1 Atm.	Cub. Ft. of Gas made per Ton of Fuel.	Cub. Ft. of Air required per Cub. Ft. of Gas.	B.Th.U. evolved per Cub. Ft. of Mixture.	Per Cent. Thermal Efficiency of Producer on lower value of Gas.
		H.	CH_4.	CO.	N.	CO_2.	O.					
Column :—	1.	2.	3.	4.	5.	6.	7.	8.	9.	10.	11.	12.
Dowson Pressure	Anthracite	19·8	1·3	23·8	48·8	6·3	0·0	150·7	171,500	1·41	60·0	82
Dowson Suction	Anthracite	15·7	1·8	22·0	54·5	6·0	0·0	137·5	180,000	1·02	61·8	80
Dowson Suction	Gas Coke	13·0	0·55	25·4	55·65	5·4	0·0	130·0	168,000	0·95	63·3	75
Mond 1. Pressure	Non-Caking Bituminous Coal	22·65	3·5	16·05	44·55	13·25	0·0	147·3	147,500	1·26	65·2	60·4*
Mond 2. Pressure	Ditto	16·60	3·35	27·3	47·5	5·25	0·0	165·4	138,250	1·38	69·6	71·5*
Mond 3. Pressure	Ditto	17·36	1·20	25·55	49·82	5·77	0·30	142	190,000	1·13	66·7	—

* Including steam for blowing engine and washers.

With ammonia recovery and steam saturation temp. 175°F. (79·4° C.). 2 Ditto, and 140°F. (60·0° C.). 3. Without ammonia recovery.

Gas Producers.

Some account of producers and producer gases from material supplied by manufacturers of gas plant is given hereunder :—

Dowson Gas.

The Dowson gas is made by passing a mixture of superheated steam and air through incandescent fuel. There is no external fire, as in ordinary gas retorts, and no skilled labour is required to work the apparatus.

The original type of Dowson plant included a small steam boiler, to give the steam required and to work an air injector. Excellent results have been obtained in this way, and for some purposes it is still the best plant to use. It is now known as the 'Dowson Steam-jet Pressure Plant,' and is used when gas is required from one apparatus to serve several gas engines or one or more engines and heating appliances.

Another type of Dowson gas-making plant is the 'Dowson Suction Plant,' which has been installed in large numbers in this and many other countries. This type of apparatus requires no boiler or gasholder, and the engine itself draws the air required through the fire in the gas generator : the engine, therefore, governs the rate of producing the gas to suit its varying consumption, and there can be no waste of gas. Moreover, the dry steam required is produced by waste heat, and the fuel which is to be converted into gas is also heated by waste heat before it reaches the combustion zone. Throughout the apparatus the loss of heat is therefore reduced to a minimum, and the efficiency is exceptionally high. Sir Dugald Clerk's 'James Forrest Lecture,' delivered in 1904 to the Institution of Civil Engineers, refers to exhaustive tests made by him with this suction plant, the heat efficiency being proved to be about 90 per cent.

In both types of the Dowson apparatus anthracite peas or nuts, charcoal, or coke can be used. The consumption depends somewhat on the type of plant and the kind of fuel used. With the suction plant the Dowson Company guarantee that the consumption of small coke of good quality will not exceed $1\frac{1}{8}$ lb. per b.h.p. per hour, at full load, with any good gas engine suitably adjusted for working with the plant.

If anthracite peas (from $\frac{3}{8}$ in. to $\frac{3}{4}$ in. cube) are used, the consumption is guaranteed not to exceed 0·9 to 1 lb. per b.h.p. per hour.

As regards stand-by losses, careful independent investigations have shown that at four different places Dowson gas generators, ranging from 100 to 375 b.h.p. each, during long stand-by hours, consumed an average of only 3 lbs. per generator per hour, while gas of good quality could be ready for use in about ten minutes. With steam power the stand-by loss is far greater.

A further important advantage of the gas is that it does not condense or lose power on its way to the engine ; on the contrary, the more the gas is cooled the better it is for the engine, as each charge of gas which enters the cylinder is more dense, and has consequently greater energy. With steam the condensation in the pipes, etc., is considerable ; with gas there is no such loss. It is easy to prevent leaks of gas from the piping, owing to the low pressure of the gas, whereas with steam there is often much loss and inconvenience on this account.

With the suction plant there cannot be a leak of gas when the engine is working, but piping, scrubbers, etc., must be absolutely tight to avoid air leaks.

The wages of firemen are about the same for the gas plant as for a steam boiler of equal power. The quantity of water per b.h.p. per hour in the gas plant is about 1 gall. ; with steam power it is usually two or three times as great. The cost of repairs (pre-war period) is approximately as follows :—

For 100 b.h.p.	£4 per annum.	For 400 b.h.p.	£12 per annum
,, 200 ,,	6 ,, ,,	,, 500 ,,	15 ,, ,,
,, 300 ,,	9 ,, ,,		

As regards labour, with the suction plant the usual allowance is one man for about an hour each day to start the fire, clean, etc., and about one hour per day to put fuel in the generator. When the plant is worked with a boiler the labour required is greater, but not more than for steam power of equal size.

Although about four volumes of Dowson gas are required to do the same work in a gas engine as one volume of town gas, yet Dowson gas is produced so cheaply that the equivalent of 1,000 cubic feet of ordinary town gas costs only seven to twelve pence, according to the scale of working and price of fuel.

With Dowson gas 1 lb. of coal will produce ·70 cubic feet of gas, and 1 cubic foot of this gas requires only 1·1 cubic foot of air for complete combustion, against 6 to 8 cubic feet for ordinary gas.

A complete Dowson apparatus does not occupy more space than that required for the boiler of a steam engine of the same power.

The Dowson gas is used for heating and furnace work of all kinds, as it is a cheap and cleanly fuel, under perfect control. Many large manufacturers using Dowson gas lead part to gas engines and part to heating apparatus. Thus the well-known B.S.A. Company of Small Heath serve several

POWER
MOND GAS
HEATING

TELEGRAMS:
'Tetratomic,
Stockton-on-Tees.'

TELEPHONE:
501 Stockton-on-Tees.

GAS PRODUCER PLANTS

WITH AND WITHOUT BYE-PRODUCT RECOVERY

IN WORLD-WIDE USE



CHART SHOWING COUNTRIES WHERE OUR GAS PRODUCER PLANTS ARE INSTALLED.

GASIFICATION CAPACITY OF PLANTS INSTALLED

3¼ MILLION

TONS OF FUEL PER YEAR

THE POWER-GAS CORPORATION LTD.

(MOND & LYMN PATENTS)

PARKFIELD WORKS STOCKTON-ON-TEES

(SEE OVERLEAF)

POWER
MOND GAS
HEATING

TELEGRAMS:
'Tetratomic,
Stockton-on-Tees.'

TELEPHONE:
501 Stockton-on-Tees.

GAS PRODUCER PLANTS

OF

PRESSURE, SUCTION AND SUCTION-PRESSURE TYPES.

FOR GASIFYING:—

BITUMINOUS COAL, COKE, ANTHRACITE, PEAT, LIGNITE, BROWN COAL, CHARCOAL, WOOD, Etc.

ALSO MECHANICALLY OPERATED PRODUCERS.

OTHER SPECIALITIES:—

BYE-PRODUCT RECOVERY PLANT.
GAS FIRED FURNACES.
CLEANING PLANT FOR BLAST FURNACE, COKE OVEN AND PRODUCER GAS.
BENZOL RECOVERY AND RECTIFYING PLANT.
TAR DISTILLING AND TAR DEHYDRATING PLANT.
STATIC GAS WASHERS AND REACTION TOWERS.
CHEMICAL PLANT AND CONSTRUCTIONAL WORK.
METERS FOR COKE OVEN AND PRODUCER GAS.
Etc. Etc. Etc.

THE POWER-GAS CORPORATION LTD.

(MOND & LYMN PATENTS)

PARKFIELD WORKS STOCKTON-ON-TEES

(SEE OVERLEAF)

large engines, over 30 hardening furnaces, and 20 tempering vats—all taking gas from the same gas-holder. The Home, Canadian, and Indian Governments have adopted Dowson apparatus for heating purposes in various military establishments. At the Royal Arsenal, Woolwich, and elsewhere, the gas is used for annealing cartridge cases.

The following comparative estimates (pre-war period), for 25 and 50 b.h.p., show that it is much cheaper to use gas power than electricity, even where the latter is sold at 2*d.* per unit :—

25 B.H.P.	Per week. £ *s.* *d.*	Per annum. £ *s.* *d.*
Electricity—25 B.H.P.=18¾ B.Th.units×50 hours =937½ units at 2*d.*	7 16 3	390 12 6
Town Gas Power.—25 B.H.P.×20 cubic ft.×50 hours=22,500 cubic ft. at 2*s.* 6*d.*	2 16 3	140 12 6
Dowson Gas Power.—25 B.H.P.×85 cubic ft.×50 hours=106,000 cubic ft. at 3*d.*	1 6 6	66 5 0

50 B.H.P.	Per week. £ *s.* *d.*	Per annum. £ *s.* *d.*
Electricity.—50 B.H.P.=37½ B.Th.units×50 hours =1,875 units at 2*d.*	15 12 6	781 5 0
Town Gas Power.—50 B.H.P. × 20 cubic ft. × 50 hours=45,000 cubic ft. at 2*s.* 6*d.*	5 12 6	281 5 0
Dowson Gas Power.—50 B.H.P.×85 cubic ft.×50 hours=212,000 cubic ft. at 3*d.*	2 13 0	132 10 0

A trial of Dowson plant with gas engines was made by Messrs. Handcock & Dykes, electrical engineers, at the printing works of Messrs. Harmsworth Bros. at Gravesend. The general results are as follows :—

Length of run, 36 hours. Mean load, 40·85 kilowatts Mean B.H.P., 64·4

Total anthracite weighed out during run	2,520 lbs.
Total actually added after clinkering	532 ,,
Add allowance for clinkering the third time	266 ,,
Total anthracite	3,318 ,,
Less amount recovered	577 ,,
	2,741 lbs.

2,741 lbs. equals total anthracite consumption for one generator and engine for three days of 12 hours each, including 'standing by' losses of another generator for 36 hours, and loss whilst both engines were running together whilst changing over.

Anthracite per k.w. per hour=1·86 lbs. Anthracite per b.h.p. per hour=1·18 lbs. Total coke consumed=448 lbs. Coke per k.w. per hour=·3047 lbs. Coke per b.h.p. per hour=·193 lbs.

Making total fuel in generator and boiler { Per k.w. per hour=2·16 lbs. / Per b.h.p. per hour=1·37 lbs.

N.B.—It should be noted that the load 60 b.h.p. was only 75 per cent. of the normal working load of engine and producer. Messrs. Harmsworth have since made large additions to their Dowson gas plant.

More recently Mr. Dowson has introduced a new type of producer, to work with bituminous coal, which is a new departure in several respects. In producers which are worked with bituminous coal the tarry vapours from the hydrocarbons in the fuel mix with the gas, and the tar is usually afterwards extracted in separate apparatus. Mr. Dowson has always held the opinion that the tar should be got rid of in the producer itself, and he has succeeded in doing this.

The producer is double-acting—i.e. air is drawn in through the top and through the bottom of the fuel column. The coal is put in at the top, and the upper part of the fire burns downwards. The hydrocarbons are distilled off and various reactions occur, the coke which remains sinks downwards into the lower part of the producer. The coke is there converted into ordinary producer gas by the upward current of air (accompanied by steam), which is drawn in at the bottom. The mixture of gases leaves the producer through an outlet about halfway between the top and bottom. There is no external fire, and the gas is made as quickly as it can be consumed, as in the other types of Dowson gas plant.

When working with ordinary bituminous coal, or with lignite and several other varieties of fuel, there is no tar ; it is removed altogether in the producer, and no mechanical or other tar

extractor is required. After leaving the producer the hot gas passes through a vaporiser to cool the gas, and to raise the steam required for making the gas. It then passes through suitable scrubbers and is ready for use in the engine to be worked with it.

This bituminous plant is worked by suction, and consequently there is no escape of gas; it is also easy to work, and the cost of labour is about the same as with an ordinary plant working with anthracite or coke.

When the plant is to be worked by the suction of an engine as in the smaller powers, viz., 25 up to 100 h.p., there is a fan to start it, as in ordinary suction plants, and this is stopped when the engine is running. For powers 100 h.p. and upwards there is a fan or blower to draw the gas from the plant and deliver it to the various engines or heating apparatus requiring gas. Each fan or blower produces the suction on the plant and governs the make of gas. Of course with all heating work and where there is more than one engine requiring gas, even for the small powers, a fan or blower is always installed to deliver the gas under pressure.

The quality of the gas made in this plant is about the same as that of gas made with coke in ordinary suction plants. The heat efficiency of the new plant is exceptionally high, and with a good engine under full load the consumption of fuel is little over 1 lb. per b.h.p. hour. The stand-by losses are small, and after standing over-night or during meal hours, good gas can be ready for the engines in a few minutes.

A well-known firm in the Birmingham district, who used Dowson anthracite gas for many years, started one of their bituminous plants for 500 h.p. in October 1908, and have used it regularly ever since. The results were so satisfactory that in October 1909 they started a second plant of this type for 700 h.p., and they now use both plants to serve thirteen gas engines of different powers. They have stated that the gas made from local bituminous coal containing as much as 30 per cent. of volatile matter is as clean as the anthracite gas previously used. The consumption of bituminous coal, including all stand-by losses, does not exceed the previous consumption of anthracite under like conditions.

At first it was thought that these bituminous plants would not be suitable for small powers; but with slight modifications they can be made in any size from 25 h.p. upwards.

The Moore Producer.

Messrs. The Dowson & Mason Gas Plant Co. Ltd. manufacture also the Moore patent water-jacketed producer with by-product recovery.

The characteristic feature of this producer is that the fuel is treated continuously in three zones. (1) In the lowest, a firebrick-lined high-temperature zone, the bulk of the gas and ammonia is generated with only such an excess of steam as will prevent the temperature rising too high; (2) a water-jacketed or low-temperature zone in which the gas is cooled with the object of preventing the decomposition of the ammonia formed without the necessity of a large excess of steam; and (3) really a continuation of the second zone, an upper or air-cooled zone.

In order to insure a graded cooling effect the internal diameter of the producer, which is slightly conical, is less in proportion to its height than usual; and to get the best effect from the water jacket and air-cooled surfaces, the producer is elliptical in form with rounded corners in cross-section.

The producer is continuously fed with fuel through a gas-tight feeding device, whilst the ashes are withdrawn without the use of a water bottom by means of two circular coned tables, one on either side of the grate, which is built up in halves. By this arrangement the producer is always approximately full, whilst the fuel is kept in slow but steady movement downwards, the tendency for the fuel to jamb being prevented by its conical form. At the same time the necessity for poking is reduced to a minimum, as the gradual heating combined with the constant movement tend to prevent caking.

The water jacket, in addition to cooling the gases, supplies the bulk of the steam necessary for operating the plant; the remainder of the steam furnished by an outside source, calculated upon the total coal gasified in the producer, amounts to only about 8·5 per cent. of the total; the steam from outside sources required for the producer is at most ½ lb. per lb. coal, which is stated to be but one-third of the quantity required by ordinary recovery producers.

The temperature of the gas leaving the producer is only about 250° C. A dust-catcher fitted before the air condensers removes any dust carried forward from the producer.

The gas, after extraction of tar and ammonia, leaves the plant about atmospheric temperature and is practically free from suspended water. The whole of the by-products, both tar and ammonia, being recovered centrally there is no further deposition of tar in mains or flues, and no periodic cleaning is required.

The calorific value of the gas, working under conditions which allow a recovery of from 80 to 90 lbs. sulphate of ammonia per ton, varies from 155 to 160 B.Th.U. net per cubic foot at N.T.P. The average analysis of the gas is as follows: CO_2 10 per cent., CO 20·0 per cent., H_2 20·0 per cent., CH_4 3·0 per cent. The comparatively small percentage of carbonic acid and large percentage of carbon monoxide render the gas specially suitable for furnace work, whilst the percentage of hydrogen is not in any way detrimental to the successful operation of gas engines for central power stations and under varying load conditions.

GAS FOR HEAT OR POWER

Gas-fired Furnaces

FOR

All Purposes.

Gas Power Plants.

CONSTRUCTIONAL IRONWORK

Including Blast Furnace Work, Stills, Bunkers, Steel Chimneys, Tanks, Gas Tubing, Gasholders, &c.

Please send us your Enquiries.

THE

DOWSON & MASON

GAS PLANT CO., LTD.,

LEVENSHULME, MANCHESTER.

Telegrams: 'Gasify, Levenshulme.'
Telephone: 261 and 262 Heaton Moor.

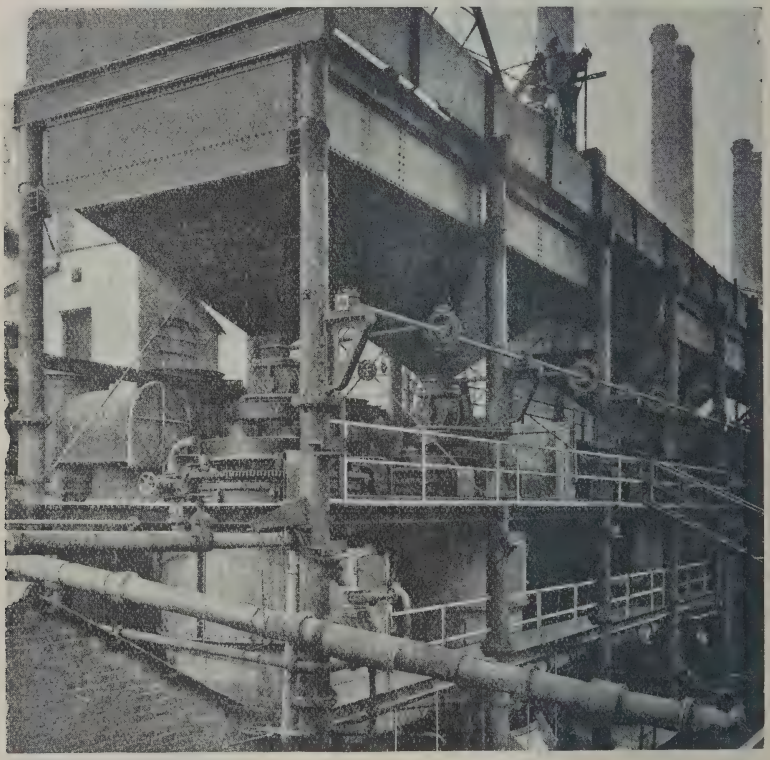
KERPELY MECHANICAL GAS PRODUCERS

With Mechanical Poking, Feed & Fuel Distribution (Bentley's System) and Automatic Ash Discharge.

GASIFYING BADLY CAKING AND CLINKERING COAL CONTAINING **30** to **40**% DUST.

NO HAND LABOUR
REQUIRED FOR CHARGING, POKING OR ASH DISCHARGE.

GAS PRODUCED OF UNIFORM GOOD QUALITY.
LOW CARBON IN ASH



E. G. APPLEBY & CO. LIMITED,

70 Victoria Street, Westminster, London. S.W.1
Telegrams: 'Appelcran, London,' Telephone: Victoria 6503.
SPECIALISTS IN PRODUCERS FOR EFFECTIVELY GASIFYING BAD FUELS.

(*See also page* 1835)

By reducing the quantity of steam added to the blast, it is possible to obtain a gas containing 25 per cent. or more of carbon monoxide, but the ammonia yield is reduced by about 20 per cent. In cases where the quality of the gas is of less account than a high yield of ammonia, it is economically possible to obtain a much greater yield than 80-90 lbs. sulphate of ammonia per ton of coal.

It is claimed that the net available quantity of gas is 20 per cent. more than that obtained from ordinary recovery producers, and that the first cost of the producer plant is less than that of ordinary recovery plants, whilst the ground space required is very much less.

The Kerpely Revolving Grate Gas Producer.

(E. G. Appleby & Co. Ltd., 70 Victoria Street, Westminster, London, S.W. 1.)

The Kerpely grate, a sectional view of which (dimensioned for the standard 3-metre diameter producer) is shown by fig. 31, is of polygonal shape and is placed eccentrically on the water trough. It has a continuous and not an intermittent action in crushing any formation of clinker that may occur. The water-cooled jacket in the fire zone prevents the formation of clinker on the walls of the producer. The clinker, when entering the ash zone, is caught by the numerous edges of the revolving grate and pressed horizontally sideways against the seal apron, and is consequently broken or crushed into small fragments, which, dropping into the water trough, are removed

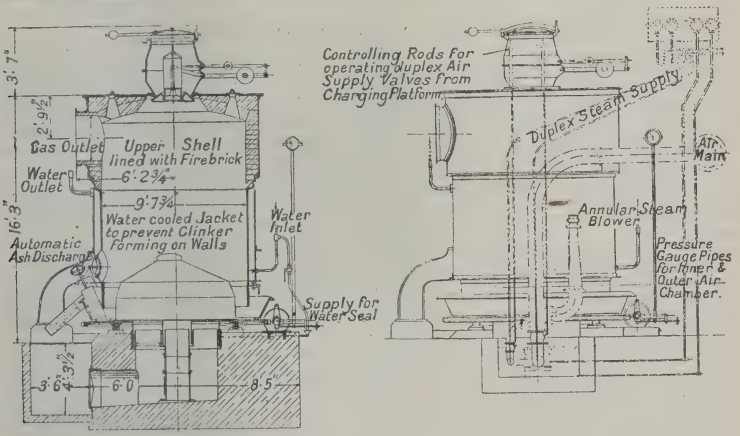


Fig. 31.—The Kerpely Revolving Grate Gas Producer.

by the ash scraper. The latter automatically discharges the ash and clinker accumulating in the bottom of the producer, and, being constructed to suit the shape of the ash trough, the ash is not only pushed aside, but is piled up and continuously discharged into an ash shoot. The automatic discharge of the ash and clinker from the Kerpely producer results in considerable saving of labour in the removal of ash, and ensures continuous working of the producer and gas of uniform quality. Labour is saved in poking, a small amount only of steam is required, and a dry gas is obtained, which ensures a prolonged life of the furnace linings. The supply of air steam to the Kerpely producer is separately conveyed to the inner and outer sections of the grate, and, being transmitted through spaces between the plates of the revolving grate, ensures uniform combustion over the whole grate area, the maximum gasification capacity per square foot of grate area, and effective control of the fuel bed.

The Kerpely producer can be fitted with the Appleby-Bentley Patent Mechanical Rotary Fuel Feed and Distributor, or this mechanical feed combined with patent balanced and adjustable fuel agitators and levellers, as the fuel conditions may determine.

Campbell Gas Producers.

The Campbell Gas Engine Co. are makers of several types of suction producers. They were among the pioneers of the enclosed type, which is still their standard for anthracite or coke and—with certain modifications—for charcoal.

Another type, first introduced by the Campbell Gas Engine Co., is the open-hearth suction gas plant, which is particularly suitable for inferior anthracite, collie coal, and small coke. It

also works successfully with locomotive smoke-box char, and plants to use this fuel have been supplied to the leading British railways and to railways abroad.

A third type of gas plant built by this company is designed for working with bituminous non-caking coal, lignite, etc. This plant works on the double draught principle in order to convert a considerable proportion of the tarry matter from the fuel into a fixed gas in the producer, and thus dispense with complicated scrubbing and cooling apparatus.

A fourth type of suction gas producer with which this firm has achieved success is their wood refuse plant. This as its name indicates is used for gasifying all descriptions of chips, shavings and sawdust. Plants of this type have been operated for considerable periods on sawdust alone with entirely satisfactory results. The consumption of such fuel varies considerably according to its quality, but averages about 3 lbs. per b.h.p. per hour.

These gas plants are supplied from 35 to 750 h.p. Several large plants have been supplied to leading British railway companies in conjunction with vertical gas engines and run entirely on the refuse produced in the wood-working shops, developing more than sufficient power to drive the whole of the machinery in these shops.

With certain modifications the producers are also supplied for using such fuels as rice husks, cotton seed, sunflower seeds, olive husks, etc.

Ample 'scrubbing' capacity is provided in all types, and careful provision is made for easy access to all parts for cleaning, thus keeping running costs at a low level.

The Crossley Patent 'Open Hearth' Suction Gas Plant.

Crossley waste fuel suction gas plants are designed to work on a variety of refuse fuels, including waste wood of all kinds, spent tan, rice husks, olive refuse, sugar-cane refuse, cocoanut shells, coir dust, cocoa and coffee refuse, etc. Particular attention has been given by the designers to the removal of impurities from the gas and to allow of the continuous working of the plant by unskilled labour. The distinctive features are: open hearth fire grate, air-lock feed hopper, and sound construction, which give the advantage of easy cleaning, regular quality of gas, freedom from stoppages and reduce the amount of attention required.

In this producer, illustrated in fig. 32, the fire is always in full view of the operator. The fire-brick-lined generator *a* is supported by legs *b*, which also carry the circular cast-iron plates forming the patented stepped grate, so inclined as to exceed the natural angle of repose of the fuel and thus prevent any of this falling from the grate; at the bottom the fuel rests on its own bed of ashes.

Water delivered by a small pipe *d* running round the generator casing, passes into the funnels *e*, and so to the grate plates, overflowing from upper to lower; the grate is thus prevented from becoming burnt, while steam is generated which assists in the gas production. The absence of the usual vaporiser at the top of the apparatus enables the poker to be passed through the fuel from above in a direction parallel to that of the firebrick lining, the clinkers being thus very easily removed without risk of injury to the brickwork.

With this stepped grate every part of the fire is readily cleaned; thus section No. 1 may be cleaned by raking from the top stepped plate; No. 2 by raking from the lower plate; and No. 3 by raking straight across the ash pile supporting the central fuel column. It is to be noted also that with the open hearth stepped grate there is no variation in the quality of the gas produced arising from the opening of fire doors, which might cause slowing down, or even stoppage, of the engine. From the generator the hot gas passes to an external vaporiser *g*, consisting of a casing supporting a box *h* with gilled tubes *j*, exposing a large absorbing surface for extracting heat from the gas for vaporising the water. This water passes through an automatic regulator and thence into the tube *k* which is open at the bottom; the water rises in the gilled tube to the overflow *l*, to which the feed pipe of the next gilled tube is connected in series, and so on throughout this system of tubes, excepting the last, *m*. The tube *m* forms the connection between the steam space *n* of the vaporiser, and the steam distribution pipe *o* to the producer, and the water overflowing from the adjacent gilled tube passes down *m* and is flashed into steam.


In this producer the gas to be cooled is *external* to the water to be heated, so that both the cooling and heating are most effectually provided for.

The partially cooled gas next passes through two cascades of water, *p*, produced by the overflow from the scrubber; these remove the grosser impurities of the gas. It is next passed through a cast-iron coke scrubber, *r*, containing two coke-charged trays and fitted with doors so arranged that the coke in the bottom of the scrubber—which is the first to become fouled—can be renewed without interfering with that in the upper portion; from this scrubber the gas passes on to a combined drier and expansion box.

Instead of the usual pressure fan for blowing up the fire, a hand-operated exhausting fan is here employed which draws air and water vapour through the producer in a manner similar to that of the engine itself; this confers the advantage that the fan can be placed close to the engine gas supply cock so that when good gas comes over (as tested by lighting at the small test cock) the engine may be started at once by the assistant at the fan.

The automatic water regulator to the vaporiser above referred to consists of two tubes *s* connected to a small vacuum chamber *t*, which in turn is connected by the pipe *u* to the gas outlet pipe *v* from the generator. Water is fed from a tap into the funnel *w* and when the engine is not taking gas this water overflows from the pipe *x* into the seal box. When the engine takes

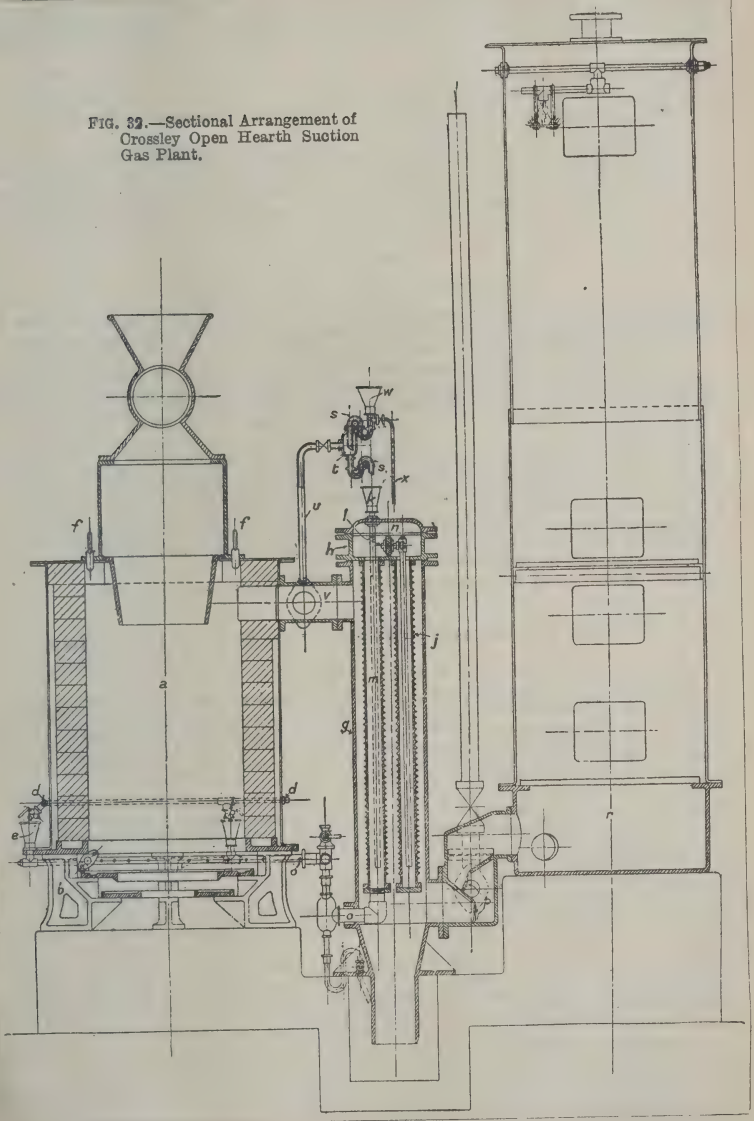FIG. 32.—Sectional Arrangement of Crossley Open Hearth Suction Gas Plant.



gas, however, a vacuum is created in the chamber *t*, and the water is accordingly sucked over the upper tube *s* and runs into the lower funnel and so to the vaporiser; the simplicity and effectiveness of the device are noteworthy. The leading features of this patent producer of Messrs. Crossley are claimed to be :—

1. Its simplicity of construction.
2. The fire is always in full view of the operator.
3. The easy removal of ash and clinker without affecting the quality of the gas made.
4. The poke-holes are parallel to the fire-brick lining.
5. The cast-iron water-cooled stepped plates are not liable to get burnt out.
6. The absence of moving parts in the automatic water-supplying device to the vaporiser.
7. The large use of cast iron to avoid corrosion and thus prolong the life of the plant.
8. The exhausting hand fan alongside the engine valve enabling one man to start up the plant.
9. The practicability of using small fuel, as fine anthracite peas or grains, or low-grade coke.

Mond Gas.

(*The Power-Gas Corporation, Ltd., Stockton-on-Tees.*)

The Mond Gas Producer Plant was originally developed by the late Dr. Ludwig Mond for the conversion of bituminous fuels into power and heating gas, along with the simultaneous recovery of the nitrogen in the form of sulphate of ammonia.

The plants are constructed by The Power-Gas Corporation, Ltd., and in the course of time mechanical details have been improved and various parts of the plant modified. Within the last few years The Lymn Chemical Engineering Co. has been absorbed, and characteristic features of this Company's designs are now embodied in plants offered to operate under the Mond and Lymn system.

Plants of both the recovery and non-recovery type are constructed for power and for heating purposes, but considerations of economy rarely justify the installation of the recovery type in units of less than 2,000 h.p. or equivalent capacity. The non-recovery type, however, is installed in much smaller units.

Both types of plant can be adapted for utilising inferior fuel, such as the waste products from collieries and coke ovens, and the gas used for gas-engine driving, industrial furnace heating or boiler firing, and in such cases with the recovery plant the return from the sulphate of ammonia will go a good way towards meeting the running expense of the plant.

The Mond Non-recovery Water-cooled Gas Producer Plant.

(*Mond and Lymn System.*)

The modern type of Non-recovery Water-cooled Gas Producer Plant, as installed for generating gas from bituminous producer coal of suitable grading, quality, and condition for use in gas engines or for other purposes where cleanliness equal to gas-engine practice is required, may be considered as composed of two sections: the 'Gas Generating Section'—comprising the producer and its accessories—and the 'Gas Cooling and Cleaning Section'—comprising vertical static cooler and washer, centrifugal cleaners, and sawdust scrubber.

The producer is of the central blast type, with steel casing designed to sit on concrete foundations (provided by purchasers) and dip into a water-lute, formed in the foundations, and from which the ashes can be removed evenly all round without interrupting the working of the producer. The grate is conical in form, built up of two or more C.I. sections, and provided with air slots. It is located concentrically with the producer shell, and is connected up to the blast pipe which passes through the foundations to the outside of the producer. The lining of the producer is built of special quality firebricks and fireclay. The producer is fitted with a series of horizontal poke holes about the level of the air slots in the grate, and also with poke holes on the top giving access to the whole of the fuel bed, these top poke holes being fitted with spherical closers.

A fuel hopper is fitted on the top of the producer, with sliding cover and inner cone valve operated by lever and balance weight. The fuel in the hopper is discharged into a fuel container or inner bell, the top of which is provided with suitable poke holes, and from this container, automatically on to the fuel bed; this method of charging ensuring a more constant quality of gas. The gas outlet branch is fitted on the side of the producer casing close to the top.

A steel chequer plate operating platform is arranged at the level of the top of the producer shell with suitable protecting handrailing and ladder giving access from ground level.

Fuel handling plant is frequently included, and the type usually recommended comprises a power-driven enclosed bucket type elevator, lifting the fuel from a boot at ground level into a bunker, which is mounted on substantial supports over the producer and fitted with a shute furnished with lever-operated discharge valve leading down to the producer hopper.

The air-blast for the producer is provided by a blower of the steam-jet type, arranged so as to ensure a thorough intermixture of air and steam before the blast reaches the grate, but in some installations a steam-driven Roots or turbo-type blower is included, the exhaust steam from the blower engine or turbine being led into the blast pipe.

Leaving the producer, the gas enters the cooler and washer, which is of patented design, and provides an effective means of gas washing by the employment of a novel and efficient method of utilising the momentum of upward flowing gases to atomise liquid falling in thin sheets, with a resultant intimate contact between gases and liquid without the use of any mechanical spraying device.

The apparatus consists of a cylindrical casing of mild steel, fitted with top and bottom plates, gas inlet and liquid outlet at the bottom, and with gas outlet and liquid inlet at the top. When desirable, the bottom of the casing can be arranged for water-luting.

A vertical stationary shaft is located in the centre of the apparatus, extending the height of the casing. At suitable distances from each other, a series of discs or distributing devices for the liquid are fixed on this shaft, and attached to the casing are a corresponding series of inverted truncated cones which serve as collecting devices, the design of these internal parts being varied to suit particular requirements.

Falling by gravity alternately from the distributors to the collectors and *vice versa*, the thin sheets of liquid are atomised, and in the form of fine spray actually driven by the gas—itself flowing in zigzag path in the opposite direction—on to the collectors and distributors, where the spray again forms into thin sheets of descending liquid. Each particle of gas is thus brought into contact with the liquid many times before it leaves the apparatus.

The distributors are constructed with diameters considerably smaller than the lower diameters of the collectors, and thus the gas passage is not restricted, and the loss of pressure occasioned is very small.

Packing or filling materials, such as coke, earthenware tiles, or wooden boards, which baffle the passage of the gas, are dispensed with, and the troubles of stoppage and renewals attendant upon such materials getting choked with tar and dust are thus eliminated.

This type of washer is of established efficiency, and the absence of moving parts, together with the freedom from possibilities of blockage, which is a feature of the design, make it a thoroughly reliable apparatus requiring a minimum of attention, with no upkeep charges for labour and material for packing or filling renewals such as have to be met with in other types of washer.

From the washer the gas passes to the first of two centrifugal cleaners. These two cleaners are normally arranged to work in series, but where desired, the requisite cross connections and valves can be added to enable either cleaner to be cut out of operation and by-passed for purposes of overhauling should such be necessary. Each cleaner has a tar drain water-sealed in a lute in the foundations, and the gas delivery branch of the second cleaner is joined up to a sawdust scrubber, to the outlet of which the gas main leading to the gas engines, etc., is connected.

The scrubber is a rectangular cast-iron box fitted with wooden grids, on which are spread layers of wood chips, shavings, and sawdust. The gas enters at the bottom, and passing up through these layers receives its final drying and purification.

The scrubber requires very little attention, only needing to be cleaned out and refilled a few times per year, according to the load on the plant. A special lifting arrangement is provided to facilitate the removal of the cover, and all the spent material taken out can be burnt under the boiler which provides the steam for the plant.

The drains from the various parts of the plant are run to the settling tank, which takes the form of a concrete pit with iron or reinforced concrete partition plates, so arranged as to keep back the tar and allow only the water to run to the drains. The tar is then scooped or run off and disposed of in the most convenient manner, either being sold, used for boiler-firing purposes, dehydrated, or distilled, according to the quality and quantity available and local conditions.

The auxiliaries of the plant—elevator and centrifugal cleaners—can generally be most advantageously and economically driven by electric motors if electric supply is available, a direct or continuous current being preferable to an alternating current supply

Where requirements call for a minimum fluctuation in the gas supply pressure, an automatic governor can be added to plants in which a power-driven blower is installed. Such a governor would be of the gasholder type, but of small capacity, and hence of negligible storage value. The bell of the holder would be so arranged that as it approaches its top position it actuates a relief valve connected to the air-blast main, reducing the blast supply to the producer when the gas make is in excess of the requirements, and thus automatically controlling the gas production.

In installations where the gas generated is used to supply gas engines and also to fire furnaces, it is advisable that a non-return valve should be provided in the gas main to the furnaces.

A suitable and sufficient supply of steam is required for blast saturation purposes, also a suitable and sufficient supply of cold water to the washer, cleaners, and producer lute. Where

cold water is scarce, water-cooling and circulating plant may be installed, and a considerable portion of the water required can be used over and over again. Suitable motive power for the auxiliaries is also required, in the form of electricity or steam.

This description is typical of units up to about 1,100 b.h.p. capacity, larger units being generally similar but having two or more producers, gas main connections between producers and washer, to suit, and additional scrubber units.

The labour required on such a plant is small; it is easily understood, simple in operation, and will run for long periods without requiring replacements or renewals.

The Mond Bye-product Recovery Gas Producer Plant.

(*Mond and Lymn System.*)

Under normal circumstances, the installation of this type of plant is not, generally speaking, justified in units smaller than 2,000 b.h.p. in capacity, and local conditions and values may even require a larger unit, to afford an economical proposition. Thus, the usual plant of this type comprises more than one producer unit with corresponding superheaters, etc., but, except for plants of unusually large capacity, the washing, etc., vessels are installed in single units, with the scrubbers in multiple units, according to requirements.

This plant is made up to a certain extent of similar parts to the non-recovery type, but the design of several of these parts is modified to suit the different working conditions, and additional apparatus is included.

The plant may be considered as composed of four sections :—

(1) The Gas Generating Section, comprising producers and superheaters.
(2) The Gas Washing and Cooling Section, comprising dust washer, ammonia absorber, gas coolers and air saturator.
(3) The Gas Cleaning Section, comprising gas cleaners and scrubbers.
(4) The Sulphate Recovery Section, comprising sulphate of ammonia, evaporating and drying plant.

If the gas from the plant is required only for heating purposes, then Section (3), or, in some cases, the scrubber portion of this section, is not required.

The producers are similar to the non-recovery type, but with increased depth and other constructional modifications.

A steel chequer-plate operating platform common to the battery of producers is arranged at the level of the top of the producer shells, with suitable protecting handrailing and ladder giving access from ground level.

Fuel-handling plant is generally included, and the type usually recommended comprises a power-driven enclosed bucket type elevator, lifting the fuel from a boot at ground level into an overhead bunker, together with push-plate conveyor. The bunker, constructed of steel, is generally of parabolic section, extending over the whole of the battery and suspended from substantial supports, which also carry the producer platform. The bunker is provided with discharge shutes leading down to the fuel hoppers of the producers, each shute being provided with a lever-operated discharge valve. When required, a light iron framing and corrugated sheet-iron covering is supplied to cover in the coal conveyor and bunker top. For large installations, fuel-handling plant of the travelling overhead crane and grab type offers advantages which merit its adoption.

The air-blast for the producers is provided by blower or blowers of the steam-driven type, and on its way to the producers passes through the air saturator, where it is brought in intimate contact with water previously used for cooling the gas in the cooler built above the saturator, and from this hot water picks up a large proportion of the vapour required for blast saturation purposes. Leaving the saturator, it then passes forward through the superheaters into the producers, the additional steam required to complete the saturation being added on the way.

Leaving the producer, the gas enters the superheater, and passes through counter-currentwise to the air-blast.

The gas from each producer and superheater set passes into the gas-collecting main which joins up the various producer and superheater units, and from which it enters the dust washer, where intimate contact with falling sprays of water washes out a large proportion of the dust. From this vessel the gas passes on to the ammonia absorber, which is the same type of vessel as the washer used with the non-recovery gas-producer plant.

From the absorber, the gas passes to the first gas cooler, which is built above the air saturator. Both saturator and cooler are of similar construction to the absorber, but their relative position permits the cooling water pumped to the top of the cooler, after exercising its function in this vessel, to pass through into the undermounted vessel, where it is brought into contact, as previously mentioned, with the air-blast. Draining from the saturator into the water tank below, the water is from there again pumped to the top of the first cooler, and thus kept in circulation through the two vessels.

From the first cooler, the gas passes forward into the final cooler, which again is a vessel of the patented washer type.

For certain heating purposes the gas may be taken off for use from the exit of this cooler, but if further cleaning is required, it next passes forward to the first of two centrifugal cleaners, which in detail and arrangement are exactly similar to those described as part of the non-recovery plant.

Where the gas is required to be of gas-engine cleanliness, the delivery branch of the second cleaner is connected to a bus-pipe joining up to the inlets of the scrubbers, the outlets of these vessels being connected with a bus-pipe, from which the main for the gas engines may be taken.

Where for special purposes the final cleaning in scrubbers is not required, then the gas may be taken off from the exit of the second centrifugal cleaner.

The scrubbers are formed in separate sections in a rectangular cast-iron box, each section being provided with wooden grids on which are spread layers of wood chips, shavings, and sawdust. The gas enters at the bottom, the various sections working in parallel, and the operation, etc., being generally similar to this portion of the non-recovery plant.

The fourth section of the plant, in which the sulphate of ammonia is made in crystal form from the liquor obtained from the absorber, is generally housed in a building to itself. The plant comprises stock liquor tanks, into which the liquor at suitable saturation is withdrawn from the circulating system of the absorber and stored. From these tanks the liquor is pumped up to overhead feed tanks, from which it is fed into the vacuum evaporator, which operates in conjunction with a condenser of the ejector-jet type. Here the liquor is evaporated and the crystals discharged from the base into a specially designed aspirator, and from thence passed on for final drying in power-driven hydro-extractor. The dry salt is then delivered into the store, usually arranged in the basement of the building, where it is packed in bags ready for distribution or shipment.

A steel circulating tank is provided for use in connection with the absorber, and located closely adjacent thereto, to contain the weak sulphuric acid solution which is used as the circulating liquor in this vessel, and a pump, constructed of acid-resisting metal, is provided for circulating this liquor, with the repuisite connections between the tank, pump, and absorber, and from the tank to the stock liquor tanks. It is necessary for purchasers to provide acid and water supply pipes to this tank, to supply the make-up for the liquor withdrawn from circulation. Suitable pumps are also provided for supplying the circulating water to the dust washer and to the gas cooler and saturator, but it is usually left for purchasers to supply the cold water supply and pipe-line to the top of the final cooler, to the centrifugal gas cleaners, and to the jet condenser, as also the requisite drain connections for the disposal of the waste water from condenser and settling tanks.

The drains from the washing and cleaning sections of the plant are run to the settling tanks, as in the non-recovery plant, and the tar similarly dealt with.

The auxiliaries of the plant—elevator and conveyor, centrifugal cleaners, pumps, and hydro-extractor—can generally be most advantageously and economically driven by electric motors if electric supply is available, a direct or continuous current being preferable to an alternating current supply, but it is the usual practice to couple up the blowers to steam prime movers, the exhaust from which, as before mentioned, is utilised for blast saturation.

Automatic governor and non-return valve are provided when required to meet the same conditions as in the non-recovery type of plant, while steam, water, and motive power supplies will similarly be required.

In addition to the types of producer plant described above, The Power-Gas Corporation Ltd. design and construct :—

Heating producers for hot raw gas.

Rotating grate mechanical ash discharge water-cooled gas producers.

Rotating grate mechanical ash discharge gas producers with automatic coal feed and stirring gear.

Suction type producers, gasifying anthracite, coke, or charcoal (for power), 10 h.p. up to 450 b.h.p. single units.

Suction-pressure type producers for gasifying anthracite, coke, or charcoal (for power and for heating), 10 h.p. up to 450 h.p. single units.

Steam jet pressure type producers for gasifying anthracite, coke, or charcoal (for power and for heating).

Suction-pressure semi-bituminous type producers for gasifying wood, lignite, semi-bituminous coal, cocoanut shells, peat, etc. (for power and for heating).

'H.G.' (high grade) type producers for gasifying free-burning, non-caking fuels (for high temperature heating purposes).

All these types embody well-known features of this firm's Mond bituminous pressure plant —substantial construction, simplicity in design and working, reliable and economical operation, and a high efficiency under even severe running conditions.

Mond Gas for Industrial Heating Purposes.

Mond gas is extensively adopted for a great variety of industrial heating purposes, especially in connection with the heat treatment of metals and other materials, drying, melting, etc., displacing town gas and oil fuel on the score of the substantial economies in running costs, and direct solid fuel firing by virtue of the many advantages of gaseous fuel, such as :—

1. Higher temperature and more complete combustion.

2. Furnace temperature under absolute and easy control.

3. By recuperation, a large amount of heat, otherwise lost in the waste gases, returned to the furnace, etc.

4. Smoke nuisance eliminated.

5. Labour (coal and ash handling, etc.), by being centralised, much reduced.

6. A reducing or oxidising flame obtained at will, and, being clean and free from dust or dirt, the most delicate materials can be treated without fear of contamination.

7. Output of furnace, stove, etc., owing to the uniformity of temperature, is increased.

8. Stand-by losses greatly reduced, as, if desired, the gas can be shut off immediately the charge is drawn.

9. A saving of 20 per cent. to 30 per cent. in weight of fuel is readily obtained by efficient gas-firing, whilst the producer will also utilise generally a cheaper quality of fuel.

The gas is delivered cool, clean, and dry within practical limits and at any reasonable pressure required, the gas being of uniform quality and reasonably free from fluctuations in supply.

If the temperature is attainable by Mond gas, it may be assumed that the work will be done with equal satisfaction as compared with town gas or oil fuel, and, of course, on much superior lines to the direct use of solid fuel.

Bituminous Suction Producers.

The production of a satisfactory suction plant using bituminous fuel has proved a problem of very great difficulty, but several types of such plant have recently appeared, and they are now built commercially by Messrs. Dowson, Messrs. Crossley, and others. In these the leading idea is to destroy any tar produced by distillation of the fuel *in the producer* before the crude gas enters the coolers and scrubbers. This is usually accomplished by taking the gas from the hot zone of the producer, and arranging the supply of air and steam from both above and below ; the fuel enters from a hopper on top, and the gases coming off from the fresh coal pass down together with some air and steam to the hot zone where reactions take place which destroy the tar by converting it into useful gases. The fuel, now largely carbonised, passes slowly downwards towards the grate supporting the whole mass, and being traversed by a current of mixed air and steam passing upwards yields carbonic oxide and hydrogen as usual. Engines driven by these plants frequently require only about 1·2 lb. of slack to the producer per b.h.p. hour. Messrs. Farnham, of Glasgow, manufacture a bituminous suction producer of a different type to the above, the bituminous fuel being fed to the usual fire-brick lined iron shell *below* an incandescent zone of coked fuel, the products of distillation passing upwards, with air and steam, and becoming decomposed before arriving at the top of the fuel bed. With this arrangement the tar is so completely removed that less ' scrubbing ' of the crude gas is required than is necessary even in a normal anthracite suction producer.

A prolonged trial of a Farnham producer using a mixture of a highly bituminous caking coal and coke was made by Sir Dugald Clerk in 1910, who reported that the results were in every way satisfactory ; the consumption of total fuel amounted to only 1·13 lb. per b.h.p. hour, including stand-by and starting losses, and there was practically complete freedom from tar in the gas supplied to the engine by the producer. The fuel consisted of 78½ per cent. caking bituminous coal, and 21½ per cent. of coke ; the dried bituminous coal contained from 31·7 per cent. to 34·8 per cent. of volatile gases and tarry matter.

The ' Ruston ' Suction Gas Plant for Anthracite, Coke, Charcoal, etc.

The latest improved producers of Messrs. Ruston & Hornsby, Ltd., are designed for long working life, and also to be capable of operation with fuels of quality inferior to those usually employed in suction gas plants so as to ensure low working expenses; a sectional view is given in fig. 33, of a recent design.

The gas generator has an improved ash box with water-sealed bottom, enabling clinker and ashes to be removed while the engine is running and without weakening the gas. The vapour chamber is of steel plates with the outer casing removable for cleaning purposes, a vital necessity if dirty water be used. Before entering the vapour chamber the water is raised to a high temperature in an external feed water heater, by which means much of the sensible heat of the outgoing gas is recovered; high efficiency and an abundant supply of steam are thus attained, and the formation of clinker is reduced to a minimum.

Poking holes are provided in the top plate, in line with the inside of the firebrick lining, through which any clinker adhering to the bricks may be readily detached.

By taking off the gas at four points from the top of the generator a uniform draught is induced throughout the fire zone, and an equal distribution of heat to the vapour chamber; the fuel chamber is of such capacity that the plant can run for several hours without attention.

A patented three-way valve is fitted for shutting off the scrubber from the gas generator during stand-by periods of the plant; the possibility of an explosion occurring is thus eliminated.

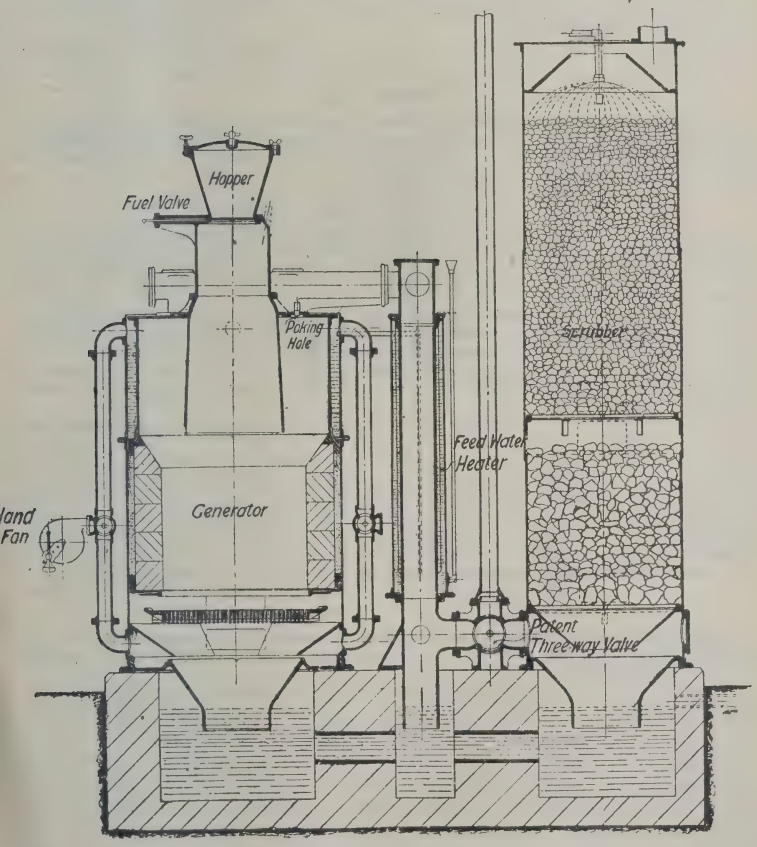


FIG. 33.—'Ruston' Improved Suction Gas Producer.

The 'Ruston' Wood-Refuse Suction Gas Producer.

Many gas producers have been made to deal with wood refuse from sawmills, such as sawdust, wood blocks, chippings, bark, etc., and similar fuels, a successful design being that made by Ruston & Hornsby, Ltd.

The chief endeavour has been to obviate the stoppages for cleaning usually necessary when working on such fuels. The little cleaning that is required is at the gas outlets from the generator, and this can be easily performed in a few minutes while the plant is in operation by means of special scrapers, so that the usual week-end cleaning is done away with, and the plant can be worked continuously if required.

Other advantages claimed are as follows:—small space occupied, very little attention required, no coke scrubber to become clogged with tar, simple in design and construction, and gas free from grit, dust, or tar. The consumption of wood refuse is from 2½ to 3½ lbs. per b.h.p. according to the amount of moisture in the fuel, and the plant will produce four or five times the power as when the fuel is burned for direct steam raising.

The producer is also suitable for working efficiently on anthracite, coke, charcoal, peat, lignite; as well as various waste materials, including cocoanut husks and shells, olive refuse, sunflower seeds, tea prunings, etc. etc.

A large number of these producers have been supplied at home and abroad for all classes of fuel.

Water Gas.*

In 'Water Gas' producers the action is intermittent, the fuel being alternately raised to incandescence by an air blast which is then shut off and steam alone passed through the glowing mass; the steam is dissociated into free hydrogen and oxygen, and the oxygen combines with the carbon present in excess and forms CO; thus:—

$$H_2O + C = H_2 + CO$$
$$2 \text{ vols.} + 1 \text{ vol.} = 2 \text{ vols.} + 2 \text{ vols.}$$

In theory, therefore, water gas should contain 50 per cent. by volume each of hydrogen and carbon monoxide; practically a small quantity of CO_2, N and O generally appears, as shown in the analysis given below. The passage of the steam through the mass of incandescent coke soon cools it down, when the steam is cut off and the air blast again turned on; the cycle of operations is then repeated.

Water gas plants are frequently installed in gas works, and the water gas is often enriched or 'carburetted' by admixture of heavy hydrocarbon vapours and in this condition used either alone or mixed with coal gas for lighting, heating, and power purposes.

The following results of analyses suffice to give a general idea of the characteristic constitution of water gas, carburetted water gas, mixed gas (i.e. mixed water gas and coal gas), and normal coal gas:—

	H.	CH_4.	CO.	Heavy Hydrocarbons.	CO_2.	O.	N.
Water gas	48·6	0·4	44·0	—	3·3	—	3·7
Carburetted water gas . .	29·35	20·48	33·19	11·32	—	—	5·66
Mixed gas	46·73	24·57	14·46	4·91	1·45	0·73	7·15
Normal coal gas . . .	45	33	10	5·3	0·5	0·3	5·9

6. BLAST FURNACE GAS.

In 1895 the late Mr. B. H. Thwaite showed that the hitherto waste gases from blast furnaces could be used in gas engines, and his discovery has stimulated the construction of the very large gas engines now becoming common.

The gas is taken from the gas main and forced by a blower through a scrubber into a holder regulator, and then to the engine. About 180,000 cubic feet of gas are produced per ton of fuel consumed in the furnace, and about 124 cubic feet of gas are used in the engine for each horse-power hour. From tests made on Mr. Thwaite's first plant at Wishaw by Mr. W. H. Booth, it is estimated that for each ton of fuel used per week in a blast furnace, 10 horse-power may be continuously obtained by gas engines. It is proposed to thus utilise the gases of all blast furnaces and so produce several millions of horse-power for distribution for railway, lighting, canal, traction, and general power purposes. Table I., page 1845, gives the analyses of blast-furnace gas in two cases where the Thwaite system is in use, and a comparison with producer gas, while Table II., page 1845, gives results of a volumetric analysis of the Wishaw gas.

* See also Section XXXIV.

TABLE I.

	Coal Fuel. *Wishaw.*	Coke Fuel. *Frodingham.*	A Dowson Gas Producer.
Carbonic oxide	24·75	27·3	23·8
„ acid	5·75	6·0	6·3
Hydrogen	2·33	1·5	19·8
Marsh gas	0·75	—	1·3
Nitrogen	66·42	65·2	48·8
	100·00	100·00	100·00
Heat units per cubic foot	97·8	96·7	164·0
Calculated cubic feet per H.P.	79·44	80·34	70·0
Percentage combustible	27·83	28·8	44·9

TABLE II.

Gas.	Per Cent. Vols.	Weight per cub. ft.	Lbs. Wt. per 100 cub. ft. of Mixed Gas.	Actual Weight of Elements per 100 cubic feet of Gas.			
				C	O	H	N
Carbonic oxide, CO	24·75	·0784	1·9404	·8316	1·1088	—	—
Hydrogen, H	2·33	·0056	0·0130	—	—	·0130	—
Marsh gas, CH_4	0·75	·0448	0·0336	0·252	—	·0084	—
Nitrogen N	66·42	·0784	5·2073	—	—	—	5·2073
Carbonic acid, CO_2	5·75	·1234	0·7095	·1935	·5160	—	—
	100·00	·079038	7·9038	1·0503	1·6248	0·0214	5·2073
						7·9038	

From 80 to 100 cubic feet of gas are obtained from each pound of fuel used. The foregoing table shows about 98 cubic feet of gas per pound of carbon, but some of the carbon comes from the limestone flux and from the ore, and even from the blast itself. In the gas engine, with the necessary enlargement of the gas inlet as compared with that necessary for town gas, and with a fair amount of initial compression, the action of blast-furnace gas is perfect, and no misfires are found to occur. The poverty of the gas is, in fact, no bar to its employment for power purposes. In fact the blast furnace is described in Mr. W. H. Booth's report as an ideal gas-producer. The employment of blast-furnace gas for power purposes enables cold-blast iron to be made, for with a sale for gas the economy of fuel per ton of iron ceases to be of importance.

Approximately each pound of carbon in the fuel used will produce about 98 cubic feet of gas, and each 100 cubic feet of gas produced weighs nearly 8 lbs. The tests on the small engine at Wishaw showed only about 1¼ lb. of coal per electrical horse-power, or 1·12 per i.h.p., assuming an efficiency of 75 per cent. between the cylinder and the terminals of the dynamo and allowing for temperature. Approximately each ton of fuel used per week in a furnace would give continuously 10 horse-power.

There has been a very considerable extension of the use of blast-furnace gas in Germany, where full advantage was promptly taken of Thwaite's teachings, and after a period of attempting to work with uncleaned gas Thwaite's method of cleaning was practically adopted. It is very important that the gas should be cleaned of its dust. Failure has occurred at an American iron-works where the engine valves became heavily loaded with dust. Fans may be employed through which the gas is circulated, jets of water being entered at the side of the fan casing. Rotating gas washers also are employed, and washer boxes in which the gas is passed under diaphragms which project an inch or two below water and compel the gas to bubble up through the water.

Large scrubbers with cellular work of light lathwork with water trickling over them will arrest much dust. Thwaite employed a sawdust filter as a final catcher, arranged so that the sawdust could be rapidly changed. Thwaite relied much on sawdust for removal of the tar of which it is difficult to get rid. Though blast-furnace gas may contain as little as 27 per cent. of combustible gas it presents no ignition difficulties when electrically fired in a state of compression in the cylinder. A. Witz has shown that the average calorific value of the gas from twenty-seven Belgian furnaces was 111 B.Th.U. per cubic foot, while nineteen Luxembourg samples showed 114 B.T. .U., twenty-three German furnaces showed 108 B.Th.U., and nine French and Spanish furnaces 107 B.Th.U. He takes a general average of 110, but the value may fall to 97 with an acid flux. Such poor gas will bear high compression, and will safely bear 7 to 9 atmospheres. No matter how poor a gas it will ignite if sufficiently compressed, and at Seraing as high as 11 atmospheres were employed in 1901. Hence the excellent efficiency that is obtained with blast-furnace gas.

Blast-furnace gas contains but little hydrogen, as no steam is used in the blast furnace ; it approximates, in fact, closely to the gas that would be given by an ordinary producer supplied with air only. The small hydrogen content enables very high compression pressures to be used without danger of pre-ignition ; when well cleaned, this gas is an excellent fuel for large engines, the heat evolved per cubic foot of maximum mixture at 60° F. and 1 atm. being about 57 B.Th.U. as an average lower value ; as already pointed out in an earlier part of this section, with cylinders of 30 ins. in diameter and over, in order to avoid overheating troubles it is found desirable in practice to introduce only from 35 to 40 B.Th.U. per cubic foot of piston displacement ; thus, although low in comparison with most other gaseous fuels, the heat evolution per cubic foot of blast furnace gas mixture is fully adequate to the needs of large gas engines.

Some average results for the principal gaseous fuels used at the present day are given in the following table :—

HEAT VALUE AND COMBUSTION OF USUAL GASEOUS FUELS.

(*From Sir Dugald Clerk.*)

Nature of Gaseous Fuel.	B.Th.U. per Cub. Ft. (Lower Value) at 60°F. and 1 Atm.	Cub. Ft. of Air Necessary for Complete Combustion.	B.Th.U.(Lower) per Cub. Ft. of Max. Mixture at 60°F. and 1 Atm.	B.Th.U. as in Col. 3 × a Volumetric Eff. of 0·85.
Column :—	1	2	3	4
Coal gas	500	5·0	83·3	71·0
Coke oven gas . .	400	4·0	80·0	68·0
Mond gas	150	1·1	71·0	60·3
Pressure producer gas from anthracite . .	150	1·1	71·0	60·3
Pressure producer gas from coke . . .	130	0·95	67·0	57·0
Suction producer gas from anthracite . .	130	0·93	67·0	57·0
Suction producer gas from coke . . .	130	0·92	68·0	57·8
Blast furnace gas . .	100	0·75	57·0	48·4


60° F. = 15·5° C.

THE KIRKE PATENT GAS-FIRED BOILER.

The original Bonecourt Surface Combustion Boiler has now been superseded by the Kirke Patent Gas-fired Boiler, invented by Mr. P. St. G. Kirke, M.A., A.M.I.C.E., A.M.I.M.E., and manufactured by *Spencer-Bonecourt, Ltd., Parliament Mansions, Victoria Street, S.W.* 1, and *Hitchin, Herts.*

Fig. 34 is a section of a Kirke Patent Gas-fired Steam Boiler. The design is based on the discovery that, if such gases as coal gas, coke-oven gas, blue water gas, producer gas, and natural gas are induced into empty tubes of great length relative to their bore, together with the air theoretically required for combustion, or some 10 per cent. in excess thereof, they can be completely burnt in the tubes without being previously mixed, and the resulting products of combustion reduced to 70° C., or less, above the temperature of the water in the boiler. Further, that this can be done either with natural draft or with high induced draft of 4 ins. of water and over, provided that the length of the tubes is greater relative to their bore, the higher the draft adopted.

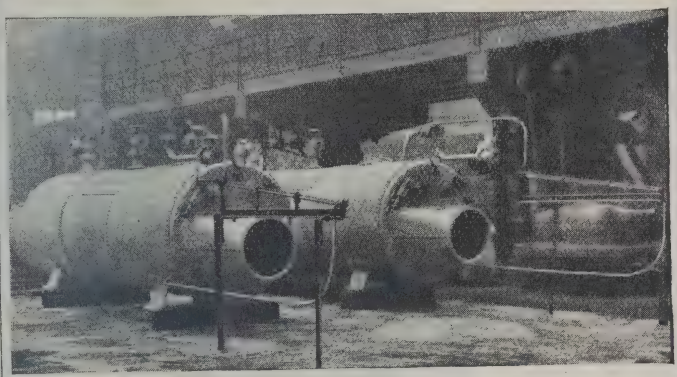The Kirke Patent Gas-fired Boiler in its simplest form consists of a drum traversed by a number of long tubes with nothing in them, which function as combustion chambers, as mixing chambers, and as extractors of the sensible heat remaining in the resulting products of combustion.



Recover Your Waste Heat

The two Boilers shown are effecting a reduction in coal consumption to the extent of £4,000 per annum; without counting the saving in labour charges. If you have steel furnaces, retorts, coke ovens, or large gas engines, instal a

'Kirke' Patent Waste-Heat Boiler

and your boiler house expenses will be reduced materially, for this fuelless boiler will provide you with steam *free of cost*.

Write for full particulars.

SPENCER - BONECOURT LIMITED,

Parliament Mansions, Victoria Street, London, S.W. 1.

Works: Hitchin, Hertfordshire.

TELEGRAMS: 'BONECOURT, PHONE, LONDON.

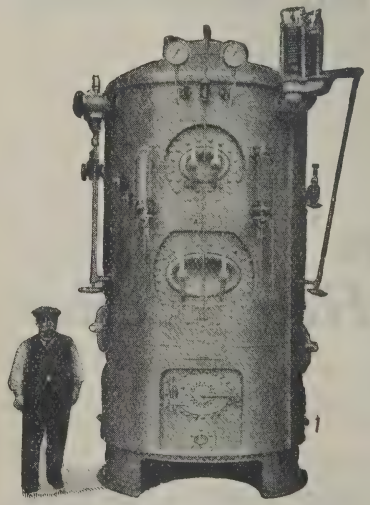
F. 1846

SPENCER-HOPWOOD

Patent Water-Tube Vertical Boilers

ADVANTAGES:

Quickest steam-raising vertical boiler on the market. High evaporative capacity, fuel and upkeep economy, complete accessibility, easy to clean, no leakage or priming. : :



STANDARD, SQUAT, MARINE AND LAUNCH PATTERNS.

—

Also patentees and makers of the 'Kivke' High-efficiency Boiler for gas firing, oil firing, and utilisation of waste heat.

SPENCER-BONECOURT LTD.

Parliament Mansions, Victoria Street, London. S.W.1.

Works: HITCHIN, HERTS. Telephone: VICTORIA 5563.

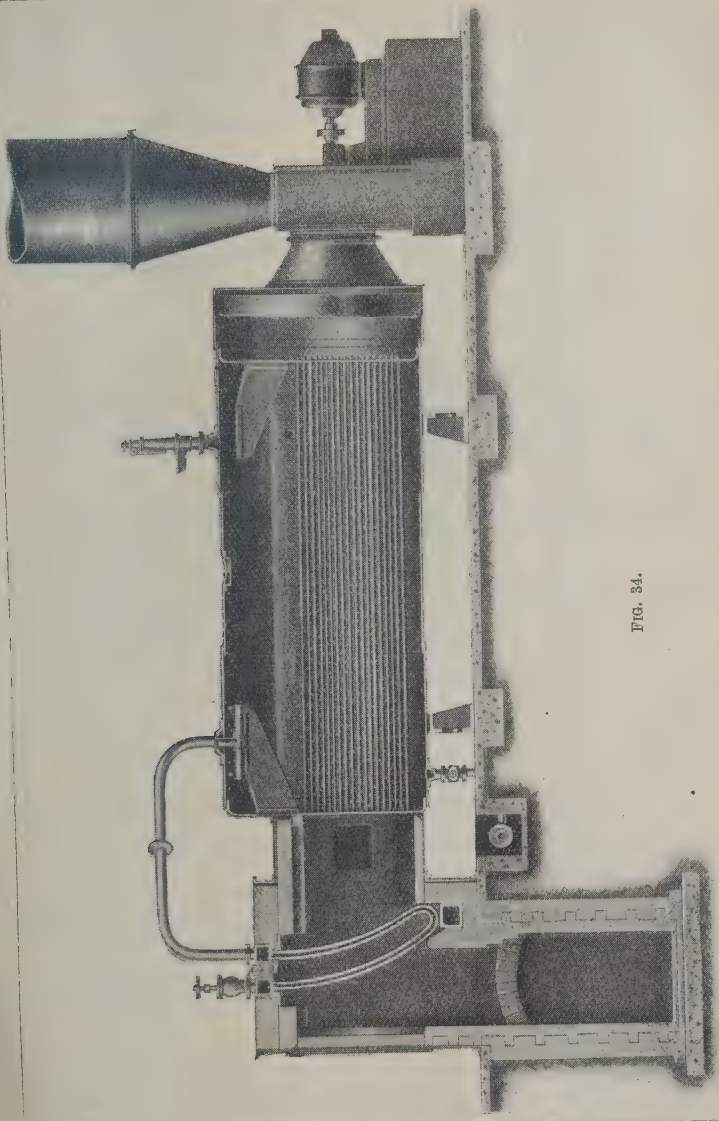


FIG. 34.

At the inlet end of the tube is a patent gas burner or distributor which discharges a jet of gas into each tube, the amount of which is determined by the size of the holes from which the gas issues and the pressure of the gas in the burner, the latter being controlled by the large gas inlet valve shown at the bottom of the burner. The requisite air for combustion enters each tube from the atmosphere, the quantity being controlled by the amount of draft which is varied to suit the load.

The following are figures obtained from a single tube evaporating water in an open wood tank lined with zinc :—

Gas burnt in cubic feet per hour	230
Steam raised from and at 212° F. in lbs. per hour	104
Cubic feet of gas per lb. of steam from and at 212° F.	2·21
Temperature of gases leaving the boiler	188° C.
Suction in inches of water	8
Gas pressure in inches of water	4
Evaporation per sq. ft. of heating surface in lbs. from and at 212° F. per hour	18
Net calorific value of the gas in B.Th.U.'s.	480
Thermal efficiency without economiser	91 per cent.

A single drum boiler of this type 7 ft. diameter by 21 ft. long, fired with coke-oven gas, will evaporate 21,000 lbs. of steam per hour with a suction of 4 ins. ; 16,000 lbs. with a suction of 2½ ins. ; and 10,500 lbs. with a suction of 1 in. The radiation loss from the shell when completely lagged (except for the front tube plate) is only ½ per cent. at full load and under 3 per cent. when unlagged.

The following table gives the power required by the fan, assuming 15½ lbs. of steam from and at 212° F. are required to generate 1 b.h.p.

Nature of Fuel burnt in Kirke Patent Fuel-fired Boilers.	Draft.	Percentage of Boiler Output required to create 4 in. suction.	Approximate B.H.P. required by the Exhauster for an Evaporation of 10,000 lbs. of steam from and at 212° F. per hour.
	Ins.	Per Cent.	
Water gas	4	0·93	6
Coke oven gas	4	1·00	6½
Producer gas	4	1·25	8
Crude oil	4	1·35	8¾
Coal	4	1·71	11
Blast-furnace gas	4	2·00	13

There are two ways of superheating the steam. The first is to insert larger tubes to accommodate superheaters of the locomotive type, as is universal in locomotive practice.

The second method, which appears to be preferred, is to divide the drum into two halves and insert the superheater between them, or to halve the length of the drum and make the gases pass through the boiler, first in one direction and then through return tubes in the other, placing the superheater in the chamber connecting the two sets of tubes.

When the floor space is very restricted, it is easy to put one drum on the top of another and, if desired, to couple them together in the steam and water space. In this way, for a given evaporation, only one-fifteenth of the floor space required by Lancashire boilers for the same evaporation is required.

The cleaning of the tubes on the water side is made easy by division of the tubes into two nests. A man can enter the boiler through the manhole and walk along the whole length of the boiler between the two nests, so that he can scrape the surface of all the tubes for their entire length, the distance between the tube centres being sufficiently great to enable him to get a suitably shaped scraper to all the tubes. This, however, is better avoided by softening the water or using a suitable boiler fluid.

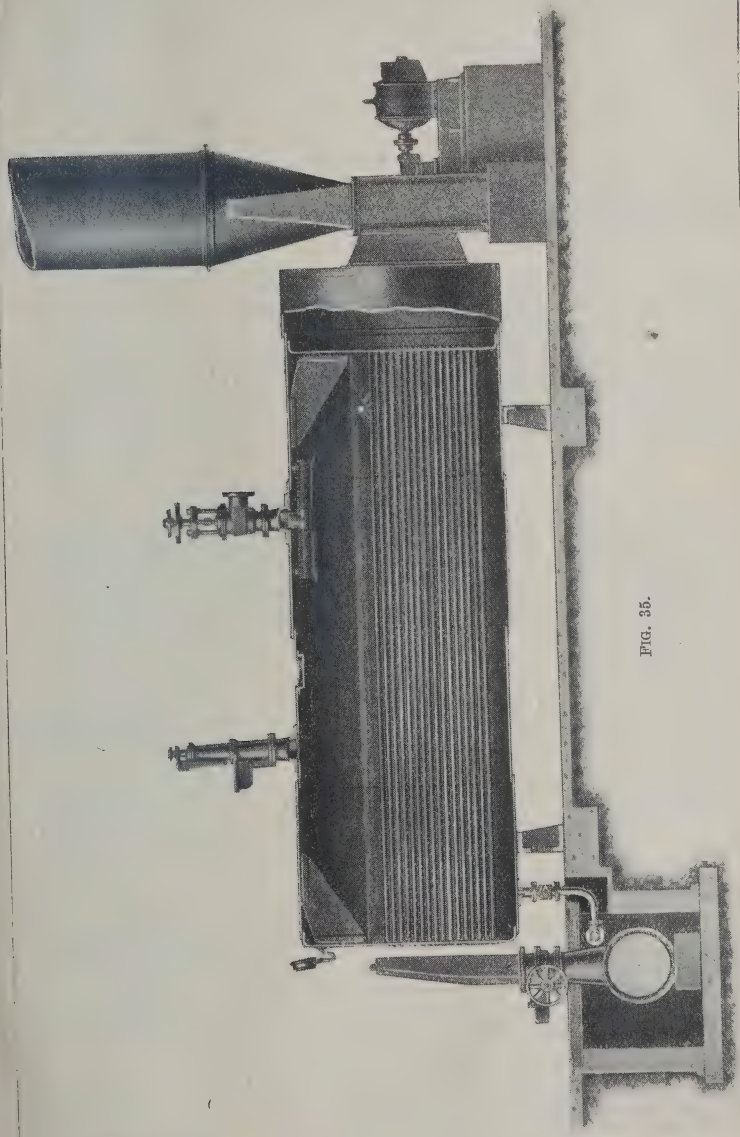


FIG. 35.

The following are the approximate fuel consumptions per lb. of steam raised from and at 212° F. for various fuels burnt in Kirke Patent Boilers without economisers:—

Producer gas	8 cubic ft.	Poor coal gas	2·7 cubic ft.
Coke oven gas	2½ ,,	Natural gas	1·2 ,,
Water gas	3⅜ ,,	Crude oil	1/17th lb.
Rich coal gas	2·2 ,,		

Kirke Patent Waste-Heat Boilers.

There are two types of Kirke Patent Waste-heat Boilers, a very short or squat one for dealing with clean gases which are at a positive pressure exhausted from large gas engines or Diesel engines, and an entirely different and very long one for dealing with dirty gases usually found at a negative pressure.

Internal Combustion Engine Pattern.

In the short or squat type for internal combustion engines, the tubes are very short and in them are placed twisted metal spirals.

The short or squat Kirke Patent Waste-heat Boiler has been evolved and put on the market to obtain the many advantages which may be obtained with twisted spiral cores, the twisting of which to a sufficient degree requires special machinery and special material. A short vertical boiler for a fairly large National Gas Engine which has been working for years was found to save its whole cost in twelve months. A short boiler of the horizontal type working on another gas engine was found to raise steam from cold in 30 minutes from the starting up of the engine.

Industrial Furnace Pattern.

In the long pattern Kirke Patent Waste-heat Boiler, made for large industrial furnaces, there are *no spirals placed in the tubes*. By using a high velocity of flow through the tubes a small boiler can be made for a big output and the capital cost kept low. The high velocity is compensated for by having the tubes very long relative to their bore, the length depending on the velocity chosen and the temperature of the hot gases in the boiler. Tube efficiency is usually about 90 per cent., and can be raised to 95 per cent. In this way the gases leaving the boiler are made cool enough to enter the exhauster, the boiler being so efficient that in many cases it is hardly worth while going to the expense of installing an economiser at all. Except when the water in the boiler is cold, it is impossible for the gases leaving the boiler to corrode the tubes or the fan impeller, because the water in a steam boiler is always above 212° F., and therefore the steam in the products cannot condense and combine with any sulphur in the gases to form sulphuric acid. If an efficient boiler is installed and an economiser inserted between the fan and the boiler, the gases may easily be reduced to such a temperature as to corrode both economiser and fan, and stop the whole plant. For this reason, if it is required to add an economiser, it should be put on the exhaust side of the fan, so that if the economiser is eaten away the boiler and fan remain intact.

If the gases entering the boiler are at a very low temperature, and an inefficient boiler needing an economiser is installed, the waste heat in the gases leaving the boiler will often heat far more water in the economiser than the boiler can use. It is very important, therefore, that the boiler should be a very efficient one, so that all the water heated in the economiser can be used and not wasted.

Fig. 35 shows a section of a Kirke Patent Waste-heat Boiler and Superheater without economiser.

When dealing with dirty gases containing very large quantities of dust—such as are obtained from cement kilns—Messrs. Spencer-Bonecourt have protected an arrangement for enabling boilers to be cleaned while they are running. The fan is arranged at the top or at the side of the boiler so as to leave the cover plate of the outlet products chamber unobstructed. In this cover plate small holes are drilled large enough to pass a tube brush or steam lance through for pushing through the whole length of tubes. One of these little holes will allow some nine tubes to be cleaned, and while leakage of air into several of the holes is not sufficient to reduce the draft, it is not necessary to open more than one at a time for cleaning purposes.

There are cases where gases are 1,000° C. or more, and in them a type of armoured superheater is recommended and arranged in the roof of the inlet products chamber. The superheater tubes are protected by cast-iron covers, so that with temperatures up to 1,000° C. and over, oxidation of the tubes themselves is entirely prevented. When dealing with such hot gases the boiler tube ends also are protected by ferrules.

The Kirke Patent Waste-heat Boiler can be adapted to burn blast-furnace gas. The usual inlet products chamber is replaced by an ordinary combustion chamber with any form of burner on the market which may be preferred. There is a place for the usual coke fire for relighting the gas after a temporary lull in the supply, so often experienced, but coal gas or coke-oven gas pilot jets are far simpler, and provision is also made for them.

The Kirke Patent Waste-heat Boilers are claimed to have a number of advantages over water tube boilers. First, air leakages which are troublesome in many types of water tube boilers, are avoided. If too much draft is put on to a water tube boiler with brick setting, the setting is apt to leak and spoil the performance of the boiler by reducing the temperature of the gases before the heating surfaces are reached, and by also adding uselessly to the volume of the products and, consequently, to the power absorbed by the fan. Also, the gases travel through these tubes of Kirke Boilers in an absolutely straight path, changing their velocity but gradually, and their direction not at all; consequently, for a given evaporation, the power required by the fan is much less than in a water tube type of boiler where the gases have to repeatedly change their direction of flow, and repeatedly accelerate and retard their velocity.

The following table gives the power required to create a draft of 4 inches of water for a Kirke Patent Waste-heat boiler evaporating 10,000 lbs. of steam from and at 212° F. per hour, assuming 15½ lbs. of steam from and at 212° F. per b.h.p.:—

Temperature of Waste Products.	Draft.	Percentage of Boiler Output required to create said Draft.	Approximate B.H.P. required by Exhauster for said Draft.
	Ins.	Per Cent.	
Blast-furnace gas	4	2	13
Waste products at 1,000° C.	4	2	13
Do. 800° C.	4	2·71	17½
Do. 600° C.	4	4	26
Do. 400° C.	2	4	26

The following test results have been obtained from Kirke Patent Waste-heat Boilers working on large industrial furnaces running 24 hours per day. In No. 3 the boiler was unlagged.

	1	2	3
Length of boiler	18½ ft.	18½ ft.	18½ ft.
Diameter of boiler	6 ft.	6 ft.	5 ft.
Temperature of products entering the boiler	850° C.	650° C.	383° C.
Duration of test in hours	4	3¾	6
Temperature of the gases leaving the boiler	219° C.	—	192° C.
Steam pressure	62 lbs.	62 lbs.	100 lbs.
Steam from and at 212° F. per hour	5,830	3,700	1,466
Draft at fan inlet in inches of water	2½	2½	2½
Draft at boiler inlet in inches of water, i.e. taken by the furnace	⅝ in.	½ in.	½ in.
Temperature of the exhaust gases above that of the steam	64° C.	—	29° C.
Tube efficiencies	90·8 %	—	89·6 %
Steam per sq. ft. of heating surface from and at 212° F. per hour	4	2·53	1·43
Coal saved per annum in tons, due to boiler running night and day at constant load	2,380	1,450	575

In case 1 the value of coal saved would pay for the boilers in a few months, in case 2 in a year, and in case 3 a little over a year.

When desired, these boilers can be fitted with extra tubes for separately firing with gas to increase the output of the boiler when the waste heat is insufficient.

By fitting a second drum containing one or more large firing flues in front of the Kirke Patent Waste-heat Boiler, the latter can be adapted for burning liquid fuel (or coal) and for recovering

waste heat alternatively or simultaneously. The following is an independent test on one of the boilers fired with oil in which the large flue and waste heat tubes were fitted in a single drum:—

Oil	Mexican fuel oil.
Temperature of oil . . .	200° F.
Calorific value of oil in B.Th.U.'s per lb.	18,550
Specific gravity of oil . . .	0·95
Oil burnt per hour in lbs. . .	215
Diameter of boiler in ft. . .	4½
Length of boiler in ft. . . .	16½
Heating surface in sq. ft. . .	230
Water evaporated per hour in lbs. actual	3,130
Steam from and at 212° F. per hour in lbs.	3,702
Steam pressure in lbs. per sq. in. .	26
Induced draft in ins. of water	1
Temperature of steam. .	134° C.
Temperature of products .	282° C.
Temperature of feed water .	53·6° F.
Pounds of steam from and at 212° F. per lb. of oil .	17·1
Pounds of steam from and at 212° F. per hour per sq. ft. of heating surface .	16·1
Combustion . . .	Smokeless.
Thermal efficiency of boiler *without* economiser .	89 per cent.

SECTION XXXII

ELECTRICAL ENGINEERING — UNITS — RESISTIVITIES — ELECTRICITY SUPPLY CABLES — CONDUITS — ELECTROCHEMISTRY — ACCUMULATORS — GENERATORS — CONVERTERS — MOTORS — ALTERNATING CURRENTS — TRANSFORMERS — STATIC BALANCERS — POWER FACTOR IMPROVEMENT — GROUND DETECTORS — TRANSMISSION SYSTEMS — ALUMINIUM CONDUCTORS — INSTRUMENTS — METERS—LAMPS—FIRE RISK RULES—ELECTRIC CLOCKS — LIGHTNING CONDUCTORS — ELECTRIC HEATING AND COOKING—ELECTRICITY IN AGRICULTURE—TELEGRAPHY AND TELEPHONY — WIRELESS TELEGRAPHY — INSULATING MATERIALS.

(Revised and amplified by A. H. Allen, M.I.E.E.)



are unequalled for maintaining perfect insulation in the windings of Electrical Machinery, and in preventing the deleterious penetration of moisture, oils, acids, etc.

MINERVA SPECIALITIES are regularly used by the leading Electrical Manufacturing Firms, Lighting and Power Stations, Railways, Tramways, etc., which constitutes definite proof of their *practical* utility.

For further information please see pages 1966-1967, or write to INSULATING DEPARTMENT,

PINCHIN, JOHNSON & Co., Ltd.

(Associated with WILKINSON, HEYWOOD & CLARK, LTD.),
Varnish, Color, Paint, and Enamel Manufacturers,
General Buildings, Aldwych, London, W.C. 2

Also please see pages 415, 1966, 1967, 2353 and 2354 for particulars of other Special Paints.

F. 1855

SECTION XXXII

ELECTRICAL ENGINEERING — UNITS — RESISTIVITIES — ELECTRICITY SUPPLY CABLES—CONDUITS—ELECTRO-CHEMISTRY — ACCUMULATORS — GENERATORS — CONVERTERS — MOTORS — ALTERNATING CURRENTS — TRANSFORMERS—STATIC BALANCERS—POWER FACTOR IMPROVEMENT—GROUND DETECTORS—TRANSMISSION SYSTEMS—ALUMINIUM CONDUCTORS—INSTRUMENTS—METERS—LAMPS—FIRE RISK RULES—ELECTRIC CLOCKS—LIGHTNING CONDUCTORS—ELECTRIC HEATING AND COOKING — ELECTRICITY IN AGRICULTURE — TELEGRAPHY AND TELEPHONY—WIRELESS TELEGRAPHY—INSULATING MATERIALS.

(Revised and amplified by A. H. Allen, M.I.E.E.)

Electrical Units.

Unit.	Symbol.	Name.	Value in C.G.S. Units.	Dimensions in terms of	
				Length Time Mass.	Length Time Force Velocity.
Electromotive force	E	Volt	10^8	$L^{\frac{3}{2}}M^{\frac{1}{2}}T^{-2}$	$V\sqrt{F}$
Current	I	Ampere	10^{-1}	$L^{\frac{1}{2}}M^{\frac{1}{2}}T^{-1}$	$\sqrt{F}$
Quantity	Q	Coulomb	10^{-1}	$L^{\frac{1}{2}}M^{\frac{1}{2}}$	$T\sqrt{F}$
Resistance	R	Ohm	10^9	LT^{-1}	V
Capacity	C	Farad	10^{-9}	$L^{-1}T^2$	TV^{-1}
Inductance	L	Henry	10^9	L	L
Power or rate of working	P	Watt	10^7	L^2MT^{-3}	VF
Energy	W	Joule	10^7	L^2MT^-	LF

The values of these units are as follows :—

One Volt is equal to 0·9818 of the E.M.F. of a Weston normal cell at 15° C.

One Ampere is the current which will deposit silver from a solution of nitrate of silver in water at the rate of 4·025 grammes per hour.

One Coulomb is the quantity of electricity represented by 1 Ampere passing for 1 Second.

One Ohm is the resistance at 0° C. of a column of mercury of uniform cross-section and length equal to 106·3 cm. whose mass is 14·4521 grammes.

One Farad is that capacity which is charged to a potential of 1 Volt by a current of 1 Ampere flowing for 1 Second.

One Henry is the inductance of a circuit in which an E.M.F. of 1 Volt is induced by a current variation of 1 Ampere per Second.

One Watt is the rate at which work is being done when a current of 1 Ampere passes through a resistance of 1 Ohm.

One Joule is the amount of work done, or heat generated, by 1 Ampere flowing for 1 Second through a resistance of 1 Ohm.

The following multiples and sub-multiples of these units are in common use :—

One millivolt	= one-thousandth of a volt.	**One microhm**	= one-millionth of an ohm.
One milliampere	= one-thousandth of an ampere.	**One microfarad**	= one-millionth of a farad.
		One millihenry	= one-thousandth of a henry.
One megohm	= one million ohms.	**One kilowatt**	= one thousand watts.

The following relations will be found useful :—

***One horse-power* is equal to 746 watts.**

***One foot-pound* is equal to 1·356 joules = 0·323 calorie.**

One calorie is the work done in raising 1 gramme of water 1° C., = 4·2 joules.

One joule is equal to 0·238 calorie.

One joule is equal to 0·7373 foot-pound.

One dyne is the force which, acting horizontally on a mass **of 1 gramme for 1** second, will give it a **velocity of 1 cm. per second.**

One erg **is the work done by 1 dyne acting through 1 centimetre.**

One watt = 0·00134 horse-power = 0·7373 ft.-lb. per second = 44·24 ft. lb. per minute = 0·0573 British thermal unit per minute = 1 joule per second.

One kilowatt-hour = 1,000 watt-hours = one Board of Trade Unit = 1·34 horse-power-hours = 2,656,400 ft.-lb. = 3,440 British thermal units = 867,000 calories.

The practical standard of electromotive force is the Weston Normal cell, which has an E.M.F. of 1·0185 volts at 15° C., decreasing by 0·00004 volt per degree C. rise of temperature.

The Clark cell, formerly used as the standard, has an E.M.F. of 1·433 volts at 15° C., decreasing by 0·078 per cent. per degree C. of temperature rise.

Laws of Currents in Conductors.

Ohm's law states that : Electromotive force = Current × Resistance, or $E = I \times R$.

Kirchhoff's first law states that : The algebraic sum of the currents meeting at any point of a network of conductors is zero.

Lenz's law states that : The current induced in a conductor flows in such a direction that its reaction opposes the change of position or state by which it is produced.

The power represented by a current of I amperes flowing under a difference of potential of E volts through a conductor of resistance R ohms $= I \times E = I^2R = E^2/R$ in watts.

The heat energy generated by a current of I amperes flowing through a conductor of resistance R ohms for t seconds $= I^2Rt$ in joules.

Resistivity of Pure Annealed Metals, and Alloys, at 0° C. (32° F.).

(Fleming & Dewar.)

Metal.	Microhms per cm. cube.	Microhms per inch cube.	Ratio to Copper.	Temp. Coefft. F. per cent.	Temp. Coefft. C. per cent.
Aluminium	2·665	1·048	1·68	0·342	0·435
Antimony	36·0	14·17	22·7	0·217	0·39
Arsenic	33·3	13·1	21	—	—
Bismuth	111·0	43·7	69·6	0·195	0·35
Copper	**1·588**	**0·6252**	**1**	**0·237**	**0·426**
Gold	2·20	0·866	1·38	0·209	0·377
Iron	9·07	3·57	5·71	0·347	0·625
Lead	20·4	8·03	12·8	0·228	0·411
Mercury	94·07	37·04	59·2	0·040	0·072
Nickel	12·3	4·84	7·75	0·345	0·62
Platinum	10·92	4·299	6·88	0·204	0·367
Silver	1·47	0·579	0·926	0·222	0·40
Tin	13·05	5·138	8·22	0·244	0·44
Zinc	5·75	2·26	3·62	0·226	0·406
Constantan	51	20	32	±0·0005	±0·001
German Silver	30	11·8	19	0·0152	0·0273
Manganin	46·7	18·4	29·4	0·0008	0·0015
Nichrome	95	37·5	60	0·0239	0·043
Platinoid	38	15	24	0·0122	0·022

The resistance of metals increases with the temperature in accordance with the approximate formula

$$R_t = R_0 (1 + kt)$$

where k is the coefficient given in col. 5 or 6 (according to the temperature scale employed) divided by 100.

At 15·5° C. (60° F.), the resistance of a copper conductor is accurately given by the formula

Res. in microhms = 8 × Length in feet/Cross-section in square inches.

SIZES, WEIGHTS, AND INSULATION RESISTANCES OF CABLES INSULATED WITH VULCANISED RUBBER.

ASSOCIATION CABLES, 600-MEGOHM GRADE.

(Abstract from Silvertown List.)

Nominal Area of Conductor.	Number and Diameter of Wires.	Minimum Thickness of Dielectric.	Minimum Insulation Resistance per Mile.	Grade S. Taped, Braided and covered preservative Compound.		Grade RL. Taped and Lead covered.	
				Approximate Overall Diameter.	Approximate Weight per 1,000 yds.	Approximate Overall Diameter.	Approximate Weight per 1,000 yds.
Sq. Inch.	Inch.	Inch.	Megohms.	Inch.	Cwt.	Inch.	Cwt.
·0010	1/·036	·034	2000	·165	·43	·200	3·01
·0015	1/·044	·034	„	·173	·5	·208	3·2
·0020	3/·029	·036	1250	·195	·64	·230	3·64
·0030	1/·064	·036	2000	·197	·75	·232	3·76
·0030	3/·036	·038	1250	·215	·83	·250	4·13
·0045	7/·029	·039	„	·226	1·02	·261	4·49
·0070	7/·036	·041	900	·259	1·44	·314	6·49
·0100	7/·044	·043	„	·287	1·92	·342	7·53
·0145	7/·052	·046	900	·317	2·53	·392	10·28
·0225	7/·064	·049	„	·359	3·56	·434	12·30
·0400	19/·052	·056	750	·441	6·11	·516	16·53
·0600	19/·004	·062	„	·513	8·82	·608	23·33
·0750	19/·072	·066	600	·596	10·96	·656	26·75
·1000	19/·083	·072	„	·663	14·25	·723	31·79
·1200	37/·064	·075	„	·702	16·25	·762	34·82
·1500	37/·072	·080	„	·768	20·16	·848	43·94
·2000	37/·083	·088	600	·889	26·17	·949	52·94
·2500	37/·093	·095	„	·973	33·12	1·053	66·02
·3000	37/·103	·102	„	1·057	40·13	1·137	75·96
·4000	61/·093	·114	„	1·197	53·44	1·297	99·96
·5000	61/·103	·121	600	1·301	64·72	1·421	121·13
·6000	91/·093	·125	„	1·425	77·42	1·525	138·3
·7500	91/·103	·131	„	1·547	93·78	1·667	166·77
1·0000	127/·103	·141	„	1·773	128·63	1·893	212·29

ASSOCIATION CABLES, 2,500-MEGOHM GRADE.

Nominal Area of Conductor.	Number and Diameter of Wires.	Minimum Thickness of Dielectric.	Minimum Insulation Resistance per Mile.	Grade C. Taped, Braided and covered preservative Compound.		Grade CL. Taped and Lead covered.	
				Approximate Overall Diameter.	Approximate Weight per 1,000 yds.	Approximate Overall Diameter.	Approximate Weight per 1,000 yds
Sq. Inch.	Inch.	Inch.	Megohms.	Inch.	Cwt.	Inch.	Cwt.
·0010	1/·036	·034	5000	·165	·43	·200	3·01
·0015	1/·044	·034	,,	·173	·50	·208	3·2
·0020	3/·029	·036	4500	·195	·64	·230	3·64
·0030	1/·064	·036	5000	·197	·75	·232	3·76
·0030	3/·036	·038	4500	·215	·83	·250	4·13
·0045	7/·029	·039	,,	·226	1·02	·261	4·49
·0070	7/·036	·041	4000	·259	1·44	·314	6·49
·0100	7/·044	·043	,,	·287	1·92	·342	7·53
·0145	7/·052	·046	4000	·317	2·53	·392	10·28
·0225	7/·064	·049	3500	·359	3·56	·434	12·30
·0400	19/·052	·056	3000	·441	6·11	·516	16·55
·0600	19/·064	·062	,,	·513	8·82	·608	23·33
·0750	19/·072	·066	3000	·596	10·96	·656	26·73
·1000	19/·083	·072	,,	·663	14·25	·723	31·79
·1200	37/·064	·075	,,	·702	16·25	·762	34·82
·1500	37/·072	·080	,,	·768	20·16	·848	43·94
·2000	37/·083	·088	2500	·889	26·17	·949	52·94
·2500	37/·093	·095	,,	·973	33·12	1·053	66·02
·3000	37/·103	·102	,,	1·057	40·13	1·137	75·96
·4000	61/·093	·114	,,	1·197	53·44	1·297	99·96
·5000	61/·103	·121	2500	1·301	64·72	1·421	121·13
·6000	91/·093	·125	,,	1·425	77·42	1·525	138·3
·7500	91/·103	·131	,,	1·547	93·78	1·667	166·77
1·0000	127/·103	·141	,,	1·773	128·63	1·893	212·29

BRITISH STANDARDS FOR INSULATED ANNEALED COPPER CONDUCTORS FOR ELECTRIC LIGHT AND POWER.*

(No. 7—1919.) (*Abstract.*)

The International Standards of Resistance for Copper are as follows :—At 20° C. (68° F.), the resistance of a wire of standard annealed copper 1 metre long and of 1 sq. millimetre cross section is $\frac{1}{58}$ (0·017241) ohm. The density of such copper at 20° C. is 8·89 grams per cub. centimetre, and the temperature coefficient of resistance is 0·00393 per degree C. At 60° F. (15·56° C.) the resistance of a solid conductor of standard annealed copper 1,000 yards long and of 1 sq.in.

* By permission of the British Engineering Standards Association.



Electric Wiring in a Modern Works—YOUR Works—

to be efficient demands a high standard of Cable manufacture as a first essential

It calls for a type of cable having at least some of the following merits :—

Waterproof.
Stands Rough Usage.
Resists Corrosion.
Not affected by Electrolysis.
Unkinkable.
Resists Acids, Oils, etc.
Low Cost and Upkeep.
Very Neat.
Extremely adaptable.
Minimum of Skilled Labour Required.
No Special Fittings or Tools needed.

C.T.S. Cable (Patent No. 3996/11) possesses *all* the above points—how many can be placed to the credit of the type of cable *you* are using *to-day* ?

ST. HELENS Cable & Rubber Co. Ltd., WARRINGTON.

F. 1858

FREDERICK SMITH & CO.

(Incorporated in the LONDON ELECTRIC WIRE CO. and SMITHS, Ltd.),

Anaconda Works, Salford, Manchester.

HIGH CONDUCTIVITY COPPER WIRE

100% Conductivity.

HARD DRAWN H.C. COPPER LINE WIRE.

Special Binders and Tapes for Improved Binding.

COPPER RODS, TAPES, & STRAND

For Lightning Conductors.

TROLLEY WIRE,

H.C. COPPER OR BRONZE.

SPECIAL NON-FOULING SECTIONS.

SILICIUM BRONZE WIRE, 'Cog Wheel Brand.'

PHOSPHOR BRONZE WIRE.

The London Electric Wire Co. & Smiths,

Limited,

PLAYHOUSE YARD, GOLDEN LANE, LONDON, E.C. 1.

COTTON COVERED AND BRAIDED WIRES, STRIPS, AND CABLES.

SILK COVERED WIRES.

ENAMEL INSULATED WIRES.

FLEXIBLE CORDS.

Platinoid, Eureka, and other Resistance Wires.

F. 1859

cross-section is 0·0240079 ohm; the density is 8·892015, and the temperature coefficient of resistance is 0·0022221 per degree F.

For the purposes of the specification an increase of 2 per cent. in the length of each wire in the stranded conductor has been assumed, and the area of the stranded conductor has been taken to be that of the solid wire which has the same resistance. In the case of multicore cables, an increase of 2 per cent. has been taken, to allow for the laying-up of the cores.

Tolerances allowed on solid conductors are, in weight, 3 per cent.; in resistance, 3 per cent. plain, 4 per cent. tinned (0·036 in. diameter upwards), 5 per cent. (below 0·036 in.). On stranded wires, in weight 2 per cent.; in resistance, 2 per cent. plain, 3 per cent. tinned (0·036 in. diameter upwards), 4 per cent. (below 0·036 in.).

The resistance of hard-drawn copper is about 3 per cent. higher than that of annealed copper conductors.

The resistance of a copper conductor 1,000 yards long and 1 sq. in. cross-section at various temperatures is given below, with the constant by which the value at 60° F. must be multiplied to give this figure :—

Temperature.	Resistance.	Multiplier.	Temperature.	Resistance.	Multiplier.
°F.	ohm.		°F.	ohm.	
40	0·02294	0·9556	90	0·02561	1·0667
50	0·02347	0·9778	100	0·02614	1·0889
60	0·02401	1·0000	110	0·02668	1·1111
70	0·02454	1·0222	120	0·02721	1·1333
80	0·02507	1·0444	—	—	—

The pressure test is to be carried out with alternating current of sine wave form at any frequency between 25 and 100 periods per second, at the r.m.s. values specified, for fifteen minutes continuously; the works test is to be made after twenty-four hours immersion in water.

660-Volt Paper or Jute Insulated Cables.

(Thicknesses of Dielectric and Lead Sheathing.)

Nominal Area of Conductor.	D. Dielectric.	Single.	Concentric.	Triple Concentric.	Twin.*	Three-Core.*	Four-Core.*	Twin Concentric*
		Lead.	Lead.	Lead.	Lead.	Lead.	Lead.	Lead.
Sq. in.	Inch.	Inch.	Inch.	Inch.	Inch.	Inch.	Inch.	Inch.
0·0100	0·080	0·060	0·070	0·090	0·070	0·070	0·080	—*
0·0600	0·080	0·070	0·080	0·090	0·080	0·090	0·100	0·090
0·1000	0·080	0·070	0·080	0·100	0·090	0·100	0·110	0·100
0·1500	0·080	0·070	0·080	0·100	0·090	0·100	0·110	0·110
0·2000	0·080	0·070	0·090	0·110	0·100	0·110	0·120	0·120
0·2500	0·090	0·080	0·100	0·110	0·110	0·120	0·130	0·120
0·3000	0·090	0·080	0·100	0·120	0·120	0·130	0·140	0·130
0·4000	0·100	0·090	0·110	0·130	0·130	0·140	0·150	0·150
0·5000	0·100	0·090	0·120	0·140	0·140	0·150	0·160	0·160
0·6000	0·100	0·100	0·130	0·150	—	—	—	—
0·7500	0·110	0·100	0·140	0·160	—	—	—	—
1·0000	0·110	0·110	0·150	0·170	—	—	—	—

D is the thickness of the dielectric between any one conductor and the next conductor or the lead sheathing. Test for paper, at works, 2,500 volts for 15 mins.; when laid and jointed, 1,000 volts for 15 mins. Test for jute, at works, 1,500 volts for 15 mins.; when laid and jointed, 1,000 volts for 15 mins.

* Circular conductors; with segmental conductors the thickness of lead is generally slightly less.

BRITISH STANDARDS FOR SOLID AND STRANDED CIRCULAR CONDUCTORS.
(Standard Annealed Copper.)

Standard Sizes.		Number and Diameter of Wires.	Weight per 1,000 yards.		Resistance per 1,000 yards at 60°F.			Standard Sizes.
Nominal Area.	Calculated Area.		Standard.	Minimum Allowable.	Standard.	Maximum for Plain Wires.	Maximum for Tinned Wires.	Nominal Area.
Sq. in.	Sq. in.	Inch.	lbs.	lbs.	Ohms.	Ohms.	Ohms.	Sq. in.
0·0010	0·001018	1/·036	11·77	11·42	23·59	24·29	24·53	0·0010
0·0015	0·001521	1/·044	17·58	17·06	15·79	16·26	16·42	0·0015
0·0020	0·001943	3/·029	23·37	22·91	12·36	12·61	12·85	0·0020
0·0030	0·002994	3/·036	36·02	35·30	8·019	8·180	8·260	0·0030
0·0030	0·003217	1/·064	37·20	36·09	7·463	7·687	7·761	0·0030
0·0045	0·004546	7/·029	54·39	53·30	5·281	5·387	5·493	0·0045
0·0070	0·007005	7/·036	83·81	82·14	3·427	3·496	3·530	0·0070
0·0100	0·01046	7/·044	125·2	122·7	2·294	2·340	2·363	0·0100
0·0145	0·01462	7/·052	174·9	171·4	1·643	1·675	1·692	0·0145
0·0225	0·02214	7/·064	264·9	259·6	1·084	1·106	1·117	0·0225
0·0400	0·03960	19/·052	475·5	466·0	0·6063	0·6184	0·6244	0·0400
0·0600	0·06000	19/·064	720·3	705·9	0·4002	0·4082	0·4122	0·0600
0·0750	0·07592	19/·072	911·6	893·4	0·3162	0·3225	0·3257	0·0750
0·1000	0·1009	19/·083	1211	1187	0·2380	0·2427	0·2451	0·1000
0·1200	0·1168	37/·064	1403	1375	0·2056	0·2097	0·2118	0·1200
0·1500	0·1478	37/·072	1776	1741	0·1625	0·1657	0·1673	0·1500
0·2000	0·1964	37/·083	2360	2313	0·1223	0·1247	0·1259	0·2000
0·2500	0·2465	37/·093	2963	2904	0·09738	0·09933	0·1003	0·2500
0·3000	0·3024	37/·103	3635	3562	0·07939	0·08098	0·08177	0·3000
0·4000	0·4064	61/·093	4886	4789	0·05908	0·06026	0·06085	0·4000
0·5000	0·4985	61/·103	5994	5874	0·04816	0·04913	0·04961	0·5000
0·6000	0·6062	91/·093	7290	7144	0·03961	0·04040	0·04079	0·6000
0·7500	0·7435	91/·103	8942	8763	0·03229	0·03294	0·03326	0·7500
1·0000	1·0376	127/·103	12481	12231	0·02314	0·02360	0·02383	1·0000

Western·Electric

WESTERN ELECTRIC COMPANY LIMITED
CABLES TELEPHONE APPARATUS
TRADE MARK
LONDON

TELEPHONE INSTRUMENTS AND SWITCHBOARDS

(Manual and Automatic)

TELEPHONE APPARATUS

POWER CABLES

TELEPHONE CABLES

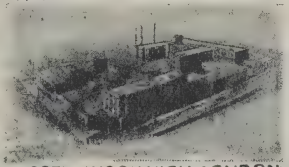
SWITCHGEAR

TRAFFIC CONTROL APPARATUS

DOMESTIC APPARATUS

Western·Electric·Works

Write for Bulletins



NORTH WOOLWICH LONDON

Send us your problems

NORFOLK HOUSE, VICTORIA EMBANK., W.C. 2
Telephone : City 3400

62 FINSBURY PAVEMENT, E.C. 2
Telephone : London Wall 7608

BRANCHES : Cardiff, Manchester, Leeds, Newcastle, Birmingham, Glasgow, Sydney, Johannesburg, Buenos Ayres, Simla, Singapore, &c., &c.

F. 1860

100,000 SQ. FEET OF FLOOR SPACE DEVOTED EXCLUSIVELY TO THE MANUFACTURE OF UNION CABLES AT DAGENHAM DOCK, ESSEX, WHERE BRITISH MATERIALS, BRITISH WORKPEOPLE, AND BRITISH CAPITAL ARE EMPLOYED.

UNION CABLES

PAPER
BITUMEN
RUBBER
AIR-SPACE

UNION CABLE Co Ltd
Dagenham Dock,
ESSEX.

Telegrams: Cable Hall, Dagenham. Telephone: Rainham 28



F. 1861

RUBBER-INSULATED CABLES.

(Thicknesses of Dielectric and Lead Sheathing.)

Nominal Area of Conductor.	Number and Dia. of Wires.	Pressures not varying from earth potential by more than 250 volts, or three-phase, with centre point earthed, not more than 500 volts between phases.				Pressures not varying from earth potential by more than 660 volts.			
		D.	Lead.			D.	Lead.		
		Di-electric.	Single.	Concentric or Twin.	Three-Core.	Di-electric.	Single.	Concentric or Twin.	Three-Core.
Sq. in.	Inch.	Inch.	Inch.	Inch.	Inch.	Inch.	Inch.	Inch.	Inch.
0·0010	1/·036	0·034	0·040	0·040	0·050	0·055	0·050	0·050	0·060
0·0015	1/·044	0·034	0·040	0·040	0·050	0·055	0·050	0·050	0·060
0·0020	3/·029	0·036	0·040	0·040	0·050	0 056	0·050	0·050	0·060
0·0030	3/·036	0·038	0·040	0·040	0·050	0·057	0·050	0·050	0·060
0·0030	1/·064	0·036	0·040	0·040	0·050	0·057	0·050	0·050	0·060
0·0045	7/·029	0·039	0·040	0·050	0·060	0·058	0·050	0·060	0·070
0·0070	7/·036	0·041	0·050	0·050	0·060	0·059	0·060	0·060	0·070
0·0100	7/·044	0·043	0·050	0·050	0·070	0·060	0·060	0·060	0·080
0·0145	7/·052	0·046	0·060	0·060	0·070	0·061	0·060	0·070	0·080
0·0225	7/·064	0·049	0·060	0·060	0·070	0·062	0·060	0·070	0·080
0·0400	19/·052	0·056	0·060	0·080	0·090	0·063	0·060	0·080	0·090
0·0600	19/·064	0·062	0·070	0·080	0·090	0·065	0·070	0·080	0·090
0·0750	19/·072	0·066	0·070	0·080	0·090	0·066	0·070	0·080	0·090
0·1000	19/·083	0·072	0·070	0·090	0·100	0·072	0·070	0·090	0·100
0·1200	37/·064	0·075	0·070	0·090	0·100	0·075	0·070	0·090	0·100
0·1500	37/·072	0·080	0·080	0·090	0·100	0·080	0·080	0·090	0·100
0·2000	37/·083	0·088	0·080	0·100	0·110	0·088	0·080	0·100	0·110
0·2500	37/·093	0·095	0·090	0·110	0·120	0·09	0·090	0·110	0·120
0·3000	37/·103	0·102	0·090	0·120	0·130	0·102	0·090	0·120	0·130
0·4000	61/·093	0·114	0·100	0·130	0·140	0·114	0·100	0·130	0·140
0·5000	61/·103	0·121	0·110	0·140	0·150	0·121	0·110	0·140	0·150
0·6000	91/·093	0·125	0·110	—	—	0·125	0·110	—	—
0·7500	91/·103	0·131	0·120	—	—	0·131	0·120	—	—
1·0000	127/·103	0·141	0·120	—	—	0·141	0·120	—	—
		Pressure test at works, 1,000 volts; laid and jointed, 500 volts.				Pressure test at works, 2,500 volts; laid and jointed, 1,200 volts.			

D is the thickness of the dielectric on each conductor.

When the cable is intended to be laid underground the minimum thickness of the lead sheathing shall be 0·060 inch.

THICKNESSES OF DIELECTRIC AND LEAD SHEATHING, AND PRESSURE TESTS, FOR CABLES INSULATED WITH PAPER OR RUBBER.

Working Pressure.	Paper and Rubber.		Paper-Insulated Cables.				Rubber-Insulated Cables.			Pressure Tests.			
					Three-core.					At Works.	Laid and Jointed.	Three-phase Centre-point Earthed.	
	Dielectric D.	Dielectric OC.	Concentric, Lead.	Twin, Lead.	Lead.	Dielectric E.	Single, Lead.	Concentric and Twin, Lead.	Three-core, Lead.			At Works.	Laid and Jointed.
Volts.	In.	In.	In.	In.	In.	In.	In.	In.	In.	Volts.	Volts.	Volts.	Volts.
2,200	0·12	0·08	0·10	·10–·12	·10–·12	0·10	·07–·10	·08–·12	·09–·13	6,000	4,000	3,600	2,400
3,300	0·14	0·09	·10–·11	·10–·12	·10–·12	0·11	·07–·10	·08–·12	·09–·13	10,000	6,000	6,000	3,600
5,500	0·18	0·09	·10–·11	·10–·12	·10–·13	0·14	·07–·10	·08–·12	·09–·13	15,000	10,000	9,000	6,000
6,600	0·20	0·10	·10–·12	·10–·13	·10–·13	0·15	·08–·11	·10–·13	·11–·14	18,000	12,000	10,800	7,200
11,000	0·30	0·11	·10–·13	·10–·14	·10–·15	0·21	·08–·11	·10–·13	·11–·14	25,000	20,000	15,000	12,000

D is the thickness of the dielectric, as follows :—

Paper cables : (1) Concentric cables, not earthed ; between the conductors, and between the outer conductor and lead sheathing. (2) Concentric cables earthed ; between the conductors. (3) Twin cables ; and Three-core cables, centre point not earthed; between the conductors, and between any conductor and lead sheathing.

Rubber cables : (1) Single-conductor cables ; on the conductor. (2) Concentric cables, not earthed ; on each conductor. (3) Twin and three-core cables ; on each core.

OC is the thickness of dielectric on the outer conductor of concentric cables with the outer earthed.

E is the thickness of the dielectric between any conductor and the lead sheathing of three-core cables when the centre point is earthed.

When the outer conductor of a concentric cable is to be earthed, the pressure test between the outer conductor and earth (irrespective of the working pressure) is : at works, 2,500 volts ; laid and jointed, 1,000 volts.

The foregoing particulars, summarised from ten tables in the British Standard Specification, relate to eight sizes of cable ranging from 0·0225 sq. in. to 0·25 sq. in. Where segmental conductors are used, the thickness of lead sheathing is sometimes slightly less than in the case of circular conductors.

THICKNESSES OF ARMOURING, BEDDING, BRAIDING AND SERVING.

Diameter of Cable to be Armoured.		Single Wire Armouring.		Double Wire Armouring.	
Above.	Up to.	Galv. Wire. Diameter.	Bedding.	Galv. Wire. Diameter.	Bedding.
Inch.	Inch.	Inch.	Inch.	Inch.	Inch.
—	0·40	0·064	0·040	0·056	0·040
0·40	0·80	0·072	0·060	0·064	0·060
0·80	1·05	0·080	0·100	0·072	0·100
1·05	1·30	0·104	0·100	0·080	0·100
1·30	1·60	0·128	0·100	0·104	0·100
1·60	2·00	0·160	0·100	0·128	0·100
2·00	3·00	0·192	0·100	0·160	0·100

THICKNESSES OF STEEL TAPE AND BEDDING.

Diameter of Cable to be Armoured.		Steel Tape.	Bedding.
Above.	Up to.		
Inch.	Inch.	Inch.	Inch.
0·50	0·75	0·030	0·060
0·75	2·00	0·040	0·100
2·00	—	0·060	0·100

THICKNESSES OF OVERALL BRAIDING AND SERVING.

Diameter of Cable.		Thickness in the finished Cable of	
Above.	Up to.	Braiding.	Serving.
Inch.	Inch.	Inch.	Inch.
—	0·80	0·045	0·060
0·80	—	0·060	0·100

LIVERPOOL ELECTRIC CABLE CO.

LIMITED

WORKS:—

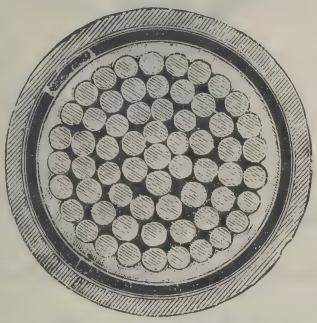
Linacre Lane, Bootle, LIVERPOOL.

Telegrams: 'Concentric.' Telephone: 542 Bootle.

. . Manufacturers of . .

Vulcanized Rubber Cables.

FIRE-RESISTING CABLES.



TRAILING CABLES FOR MINES.

'LIVERPOOL CABLES'

Are all made at our works in Liverpool to

The Standards of the C.M.A. of which we are Members.

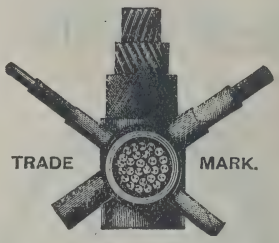
F. 1862

CRAIGPARK CABLES

INSULATED WITH

IMPREGNATED PAPER.

VULCANISED INDIA RUBBER.



VULCANISED BITUMEN.

GUTTA-PERCHA.

TO ALL SPECIFICATIONS.

THE CRAIGPARK ELECTRIC CABLE CO., LTD.

Head Office and Works: **SPRINGBURN, GLASGOW.**

Branches:

London:
17 Victoria Street, Westminster, S.W.1.

Manchester:
4 Deansgate.

F. 1863

CONDUCTORS FOR FLEXIBLE CORDS.

Nominal Area.	Number and Diameter of Wires.	Resistance per 1,000 yards at 60° F.		
		Standard.	Maximum for Plain Wires.	Maximum for Tinned Wires.
Sq. in.	Inch.	Ohms.	Ohms.	Ohms.
0·0006	14/·0076	39·7	40·5	41·3
0·0010	23/·0076	24·2	24·6	25·1
0·0017	40/·0076	13·9	14·2	14·4
0·0030	70/·0076	7·94	8·10	8·26
0·0048	110/·0076	5·05	5·15	5·25
0·0070	162/·0076	3·43	3·50	3·57

COMPARATIVE TABLE

showing the relation between the old standard sizes of conductors and the new standard sizes.

New Standard.		Old Standard.		New Standard.		Old Standard.	
NEW Nominal Area in Sq. Inches.	Number and Diameter in inches of Wires.	Number and Gauge or Diameter in inches of Wires.	OLD Nominal Area in Sq. Inches.	NEW Nominal Area in Sq. Inches.	Number and Diameter in inches of Wires.	Number and Gauge or Diameter in inches of Wires.	OLD Nominal Area in Sq. Inches.
·0010	1/·036	1/20 S.W.G.	·0010	·0600	19/·064	19/16 S.W.G.	·0600
·0015	1/·044			·0750	19/·072	19/15 ,,	·0750
		1/18 ,,	·0018			19/14 ,,	·0937
		3/22 ,,	·0018	·1000	19/·083		
·0020	3/·029			·1200	37/·064	37/16 ,,	·1168
		7/25 ,,	·0022			19/13 ,,	·1250
·0030	3/·036	3/20 ,,	·0030	·1500	37/·072	37/15 ,,	·1500
		7/23 ,,	·0031			37/14 ,,	·1824
·0030	1/·064	1/16 ,,	·0032	·2000	37/·083	37/·083″	·2000
		7/22 ,,	·0042			37/·092″	·2500
·0045	7/·029			·2500	37/·093		
		7/21½ ,,	·0049	·3000	37/·103		
·0070	7/·036	7·20 ,,	·0070			37/·104″	·3000
		7/19 ,,	·0086			61/·092″	·4000
·0100	7/·044			·4000	61/·093		
		7/18 ,,	·0125	·5000	61/·103		
·0145	7/·052					61/·104″	·5000
		7/17 ,,	·0170			61/·112″	·6000
·0225	7/·064	7/16 ,,	·0221	·6000	91/·093		
		19/18 ,,	·0338			91/·101″	·7500
		7/14 ,,	·0346	·7500	91/·103		
·0400	19/·052					127/·101″	1·0000
		19/17 ,,	·0459	1·0000	127/·103		

ELECTRICITY SUPPLY CABLES.

The figures in the table on page 1864 apply to single cables run in pairs and touching one another, and refer to situations where the maximum temperature of the air does not exceed 80° F. (26·7° C.).* The figures in columns 3 and 4 are the currents corresponding, in the case of rubber-insulated cables, to a rise in temperature of 20° F., and, in the case of paper-insulated cables, of 50° F. above that of the surrounding air. The lengths in circuit given in columns 3*a* and 4*a* when working at the currents given in columns 3 and 4 are calculated on the assumption that the temperature of the cable will be 100° F. in the case of rubber insulation and 130°F. in the case of paper insulation. For thickness of dielectric, see page 1859 *et seq.*

* The figures in columns 3 and 4 may be multiplied by the following constants for the classes of cable shown: Concentric, 0·93; 3-core, 0·88; 4-core, 0·82.


ELECTRICITY SUPPLY CABLES.

Table showing maximum currents, feet per volt drop, insulation resistance, and conductor resistance of insulated copper conductors.

(Abridged from the I.E.E. Wiring Rules, revised October, 1919.)

Number of wires and diameter of each wire.	Nominal cross-sectional area of conductors.	Rubber Insulated Cables.		Paper or Fibre Insulated Cables.		Minimum Insulation Resistance of one mile at 60°F.			Conductor resistance, per 1,000 yards at 60° F.
		Maximum current permissible.	Total length in circuit (lead and return) for 1-volt drop (Col. 3).	Maximum current permissible.	Total length in circuit (lead and return) for 1-volt drop (Col. 4).	Vulcanised Rubber. Up to 250 volts.	Vulcanised Rubber. Up to 660 volts.	Paper or Fibre. (Class B.)	
1.	2.	3.*	3a.	4.*	4a.	5.	6.	7.	8.
Inches.	Sq. Inches.	Amperes.	Feet.	Amperes.	Feet.	Megohms.	Megohms.	Megohms.	Ohms.
1/·036	0·0010	4·1	31	4·1	31	2,000	5,000	For conductors smaller than 7/·064", the insulation resistance must not be less than 140 megohms.	23.59
1/·044	0·0015	6·1	31	6·1	31	2,000	5,000		15 79
3/·029	0·0020	7·8	31	7·8	31	1,250	4,500		12·36
3/·036	0·0030	12·0	31	12·0	31	1,250	4,500		8·019
1/·064	0·0030	12·9	31	12·9	31	2,000	5,000		7·463
7/·029	0·0045	18·2	31	18·2	31	1,250	4,500		5·281
7/·036	0·0070	24	34	28·2	31	900	4,000		3·427
7/·044	0·0100	31	39	42	31	900	4,000		2·294
7/·052	0·0145	37	46	57	31	900	4,000		1·643
7/·064	0·0225	46	56	75	33	900	3,500	140	1·084
19/·052	0·0400	64	72	104	42	750	3,000	120	0·6063
19/·064	0·0600	83	84	135	49	750	3,000	110	0·4002
19/·072	0·0750	97	91	157	53	600	3,000	110	0·3162
19/·083	0·1000	118	99	191	58	600	3,000	100	0·2380
37/·064	0·1200	130	105	210	61	600	3,000	90	0·2056
37/·072	0·1500	152	114	246	66	600	3,000	90	0·1625
37/·083	0·2000	184	125	296	73	600	2,500	90	0·1223
37/·093	0·2500	214	135	343	79	600	2,500	80	0·09738
37/·103	0·3000	240	147	385	87	600	2,500	80	0·07939
61/·093	0·4000	288	165	464	97	600	2,500	80	0·05908
61/·103	0·5000	332	175	540	102	600	2,500	80	0·04816
91/·093	0·6000	384	184	624	107	600	2,500	80	0·03961
91/·103	0·7500	461	188	738	111	600	2,500	70	0·03229
127/·103	1·0000	595	204	932	123	600	2,500	70	0·02314

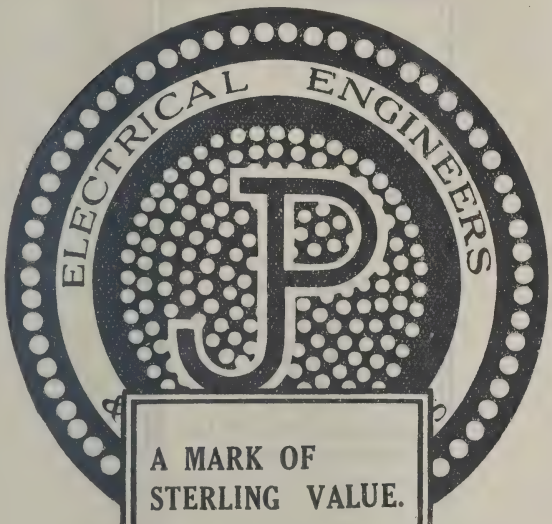* In lighting circuits where the determining factor is the drop in volts, the maximum currents may be less than those shown in columns 3 and 4.



A MARK OF STERLING VALUE.

One which has never depreciated—a guarantee of efficiency in all classes of Cables and Electrical Plant.

It has been that for nearly half a Century and its reputation as a Hall Mark of Quality is World-renowned.

On the other side we list the lines with which it is identified.

Johnson & Phil ips Ltd.
Charlton, London, S.E.7

City Office—12, *Union Court, Old Broad St., E.C.2.*

The J. & P. mark

is identified with the following—

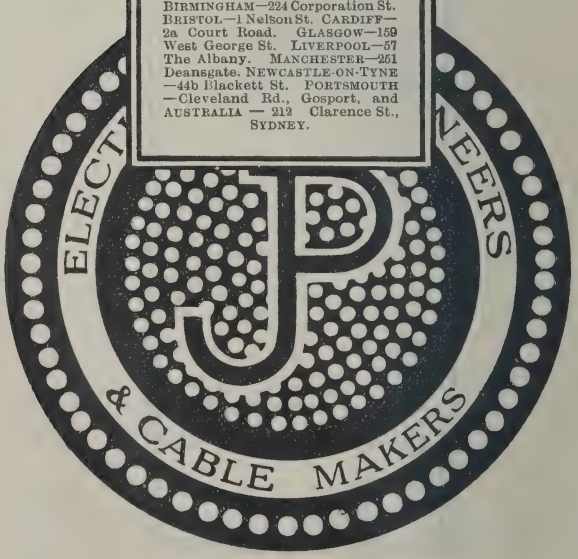
Cables for all Services, Cable Boxes, Overhead Lines, Transformers, Switchgear & Instruments.

Descriptive Catalogues and fullest details will be gladly furnished from Head Office or any of the following Branches.

JOHNSON & PHILLIPS Ltd.
CHARLTON, LONDON, S.E.7

City Office—12 *Union Court Old Broad St., E.C.2.*

BIRMINGHAM—224 Corporation St. BRISTOL—1 Nelson St. CARDIFF—2a Court Road. GLASGOW—159 West George St. LIVERPOOL—57 The Albany. MANCHESTER—251 Deansgate. NEWCASTLE-ON-TYNE—44b Blackett St. PORTSMOUTH—Cleveland Rd., Gosport, and AUSTRALIA — 212 Clarence St., SYDNEY.



Cab Tyre Sheathed Cable.

This well-known type of protected cable patented by *The St. Helens Cable & Rubber Co. Ltd.*, Warrington, is manufactured under licence by most of the large British cable makers. It is generally known as C.T.S. It was designed for use in positions where ordinary protected cables often give trouble, principally as trailing or portable cables, and has since been found of value in all kinds of dangerous situations.

The conductors are usually insulated in accordance with the standards of the C.M.A., the whole then being sheathed with the same tough rubber material as is used in the manufacture of cab tyres. The principal characteristics of this rubber are durability, non-corrodibility, and non-absorbence. This type of cable is, therefore, now used in the numerous places where corrosion, moisture, hard wear, climatic or temperature changes are likely to be met with.

An advantage for some classes of work is that the elastic flexibility of the material prevents it from being kinked.

This class of cable is being largely used for general wiring. Being a portable solid system, not needing any further protection, it is easily and cheaply run.

The use of C.T.S. without further protection of any kind is authorised by the Wiring Rules of the Institution of Electrical Engineers (see p. 1950, *re* 'Tough Rubber Compound' Protection).

The following specification for this class of cable is based on the British Admiralty Specification Tests for Cab Tyre Sheathing :—

Revised Specification for Cab Tyre Sheathed Cable.

The cab tyre sheathing shall contain not less than 35 per cent. and not more than 40 per cent. of first-grade plantation rubber or other rubber of not less good quality.

The surface of the sheathing shall not be treated or dressed without the consent of the Admiralty Overseer.

The acetone extract of the vulcanised sheathing shall not exceed 5 per cent. calculated on the weight of the complete sheathing as manufactured.

Bending Test.—A test length of the complete cable containing the conductor shall be bent round a hard rod having the same diameter as the external diameter of the cable to form a loop. The unbent portions of the test piece shall be bound together so that the two parts touch one another closely throughout their length from their ends up to the beginning of the loop.

In cables of large size when this method is not practicable the test piece shall be bent in a loop so that the maximum extension of the external surface at the curvature at the bend reaches 50 per cent.

The sample in either case shall be left untouched for a period of 48 hours and at the termination of this time shall show no signs of cracking.

Immersion Tests. (*a*) *Chemical.*—Test pieces 6 ins. long shall be prepared, and after the conductor and dielectric have been removed they shall be dried at a temperature of 100° C. for one hour in an air oven ; they shall then be cooled in a desiccator for two hours, and at the end of this period shall be weighed. The ends of the test pieces shall be plugged with rubber bungs and sealed with paraffin wax for a length of half an inch from each end. The test pieces thus prepared shall be completely immersed in a vertical position in the following solutions for a period of 48 hours at normal temperature ; they shall then be removed and washed in running water for a period of two hours, afterwards being wiped dry and the wax and plugs removed. The samples shall then be dried in an air oven for one hour at a temperature of 100° C. and shall be cooled for two hours in a desiccator ; they shall then be reweighed. The difference in weights before and after immersion shall be calculated as grammes per 100 sq. ins. of surface exposed to the solution.

(1) *Acid Test.*—The solution shall be hydrochloric acid having a specific gravity of 1·045. The figure calculated as stated above shall not exceed 1·0.

(2) *Alkali Test.*—The solution shall be sodium hydrate having a specific gravity of 1·116. The figure calculated as stated above shall not exceed 1·5.

(*b*) *Oil Test.*—A test piece shall be prepared 6 ins. long ; one end shall be sealed so as efficiently to prevent access of oil to the interior. The test pieces shall be immersed in pure rape oil of the best quality to such a depth that not less than 2 ins. of sheathing is exposed to the action of the oil. The immersion shall be continued for six hours, the oil during that time being maintained at a temperature of 100° C. After immersion the sample shall be removed and rolled dry between blotting paper ; the seal shall then be removed and the sample reweighed.

The difference in weights shall be calculated as grammes per 100 sq. ins. of surface exposed and the figures so obtained shall not exceed 15.

The cable should be generally in accordance with Patent No. 3996/1911.

See also 'Maconite,' p. 1967.

Directions for Making Joints in Electric-Light Conductors.

(Silvertown Instructions.)

Preparing Ends and Making Metal Joints.

The braiding should first be removed, the tapes unlapped, and the conductor exposed for a length of not less than eight to ten times its diameter (for small wires the length should not in any case be less than 2 ins.). With vulcanised or similar cables the rubber should then be cut off at a right angle, care being taken not to nick the wires. With pure rubber cables the pure rubber should be unwrapped, not cut.

In making all joints resin should be used, either raw, or a little powdered resin dissolved in spirits of wine to a thin paste.

The soldering-bit should always be kept clean. This is best done by dipping it into a saturated solution of sal ammoniac and water.

The copper conductor to be jointed should always be carefully cleaned; and when the joint is finished, all rough points should be removed by means of a file, so that the surfaces may be smooth for insulating.

For a Single-conductor Wire.—The ends of the copper should be filed to a long bevel—i.e. scarfed—and the two ends so filed laid one on the other, the object being to get a long surface of contact. The scarf should then be carefully soldered and whipped with small binding-wire, and the whole again soldered and cleaned up with emery cloth or a file; the finished diameter should now not greatly exceed the original diameter of the conductor.

For a 7-strand Cable.—The whole of the strand should first be soldered up solid; then scarfed and jointed as a solid wire, in the same way as above.

For a 19-strand Cable.—The conductor should be bared to a suitable length, and a small binder tied round the ends next to the rubber to keep the strand in place. The 12 outside wires should then be unstranded and turned back. The central 7-strand should then be soldered up and jointed as a solid conductor. To joint the 12 wires over this, every alternate wire should be cut off short, and the two sets of 12 married—that is, the long wire from the one end jointed to the short wire on the other, and so on round the central strand; thus half the joints on the single wires will be on the one side of the joint in the central strand, the other half being on the other side. The joints in these single wires need not be scarfed, but only butted together at each end of the joint, where the long and short wires are soldered together. A narrow whipping of binding-wire should be put on at each end and soldered, the whole being then filed down smooth.

For a 37-strand Cable.—If flexibility is required, the same method is followed out, with the addition that the 18 wires surrounding the 19-strand joint are married in the same way.

If flexibility is not essential, the 19-strand should be scarfed and jointed in the same way as the 7-strand, and the 18 remaining wires only are to be married.

For a 61-strand Cable.—The joint should be made the same as the 37-strand, with the addition that the remaining 24 wires surrounding the 37-strand should be married in the way previously described.

Directions for Making T-Joints in Conductors.

To Joint a Single Wire to another Single Wire.—The smaller wire should be scarfed and laid along the surface of the other wire, and then whipped with binding-wire and soldered and finished smooth; the binding should, however, not be continued up to the point where the smaller wire is bent.

To Joint a Single Wire to a Strand.—The surfaces should be carefully cleaned, and the single wire wound spirally round the strand at the end, but lying flat with the strand at the point of junction; this flat part should be whipped, and the whole soldered.

To Joint a 7-strand on to a larger Cable.—The 7-strand should be unstranded, and, after cleaning the wires separately, the wires should be twisted round the larger cable, three being twisted parallel in the one direction and four in the reverse direction, and on the other side of the T, and a light whipping of copper wire round each end; and the whole should then be carefully soldered together.

For Large T-Joints.—Each conductor should be soldered up solid. The smaller one should then be scarfed and a recess filed in the other, about halfway through, the shape of the scarf; the whole should then be soldered together, and whipped with binding-wire, and soldered again. Where the joints are heavy strong binding-wire should be used.



SPECIFY

SILVERTOWN CABLES and WIRES

and ensure an installation which will give the utmost satisfaction to all concerned.

We are members of the Cable Makers' Association, and our products are made in accordance with their standards and formula.

Write for List No. 40. which gives full particulars and prices.

The India Rubber, Gutta Percha and Telegraph Works Co., Ltd.

(The Silvertown Co.),

Head Office: 106 Cannon Street, London, E.C. 4.

Works: Silvertown, London, E. 16.

BRANCHES :—

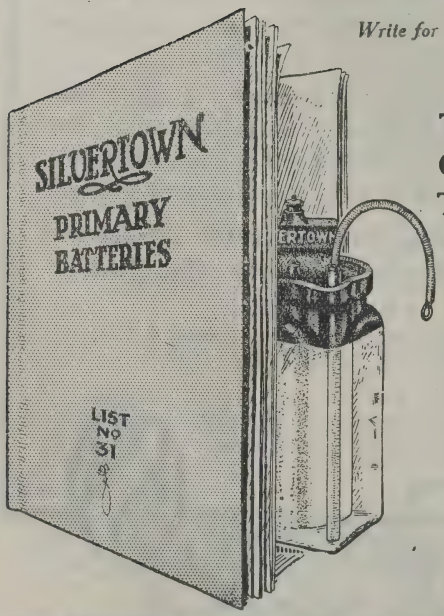
HOME.—Belfast, Birmingham, Bristol, Cardiff, Dublin, Glasgow, Leeds, Liverpool, London, Manchester, Newcastle-on-Tyne, Portsmouth, Sheffield.



Silvertown
Primary Batteries

THIS LIST is brimful of useful information and data regarding the various types of cells manufactured by us at Silvertown, and will enable you to choose the exact type of Cell most suitable for a particular duty.

Write for a copy—List No. 31.



The India Rubber, Gutta Percha and Telegraph Works Co., Ltd.
(The Silvertown Co.).

Head Office:
106 Cannon Street,
London, E.C. 4.

Works: Silvertown,
London, E. 16.

BRANCHES:
Belfast, Birmingham, Bristol, Cardiff, Dublin, Glasgow, Leeds, Liverpool, London, Manchester, Newcastle-on-Tyne, Portsmouth, Sheffield.

F. 1867

DIRECTIONS FOR INSULATING JOINTS.

Vulcanised Rubber Joints.—When the conductor joint is finished the rubber should be carefully trimmed and cut with as long a bevel as possible, according to the thickness of the rubber; the copper conductor and the bevelled ends should then be rubbed with pure benzol and slightly heated with a spirit lamp. The conductor and the bevelled edges of the rubber should then be lapped with a pure rubber strip laid on as tightly as possible in one or two layers according to size: this pure rubber should then be covered with special rubber solution, rubbed in so as to exclude air as much as possible; the joint should then stand until thoroughly dry. When the solution is sufficiently dry, and will not adhere to the fingers, a special rubber strip should be lapped on spirally, forming a uniform covering over the first coat of pure rubber, care being taken, by lapping tightly and evenly, to exclude all air. This rubber should be put on in two or more layers, until the diameter is equal to that of the original insulation, and over this a layer of proofed tape should then be applied, the whole joint so made slightly exceeding in diameter that of the original insulation. When so completed the next process is that of vulcanisation. To do this it is necessary to cover the joint with special sheeting cut to the whole width of the joint and firmly rolled round it, making a longitudinal seam, binding the sheeting over all by a strong cotton selvedge tape applied spirally, and as tightly as possible by hand. The sheeting thus will serve as a mould to keep the joint together during the process. The joint should then be fixed in the 'cure' (a cast-iron box) and the cover bolted on; and, to prevent damage to the original insulation and to make the box tight, the insulation on each side of the joint, for the proper distance to fit the cure, should be lapped with two or more coats of tape, to cover the original insulation down to the point of junction. When the cure has thus been made tight molten sulphur compound, previously melted in a suitable pot, should be poured into the cure round the joint through the small hole in the top of the cure, and a suitable thermometer afterwards inserted in this hole, to enable the temperature of the sulphur compound to be noted. This temperature should be kept as constant as possible between 290° and 300° F. by means of spirit lamps.

After the joint has been kept at the full temperature for about half an hour the molten sulphur is run out and the cure-cover unbolted. The joint should then be taken out, the wrappings stripped off, and it will then be found to be vulcanised. A rough test of the degree of vulcanisation may be made by trying with the thumb nail (when the joint is cool) to indent it. If the mark of the nail remains in the rubber, or if the rubber is too hard, the joint is a failure, and should be cut out and remade. If the joint thus examined is found to be in good order, it should be finished off by lapping over all special tapes, extending, say, over about 2 ins. each side of the braiding; this taping to be then painted with shellac varnish.

When insulating with rubber the hands should be kept dry and perfectly clean. When solution is used, it should only be used in small quantities, and the spirit allowed to evaporate before the whole is again covered up. The spirit used should be of the best quality, so that it evaporates quickly and leaves little or no residue behind. Special care should be taken that the rubber applied be brought into immediate contact with the prepared ends, and that no tapes of the original insulation, or foreign material which would conduct moisture, should intervene between the two surfaces to be joined. Unless everything used is perfectly clean, and all air excluded by careful and tight lapping, the joint may be found to have blown, even though the rubber is properly vulcanised. Special attention, therefore, is required to these points.

If, during vulcanisation, the temperature should drop below 290°, the heat will require to be maintained for a longer time; say, if at 280°, the cure would last for about three-quarters of an hour instead of thirty minutes; but it is important that the temperature should be kept as constant as possible between the limits of 290° and 300° F.

If the pure rubber appears hard and brittle it should be slightly warmed before using. Should the compound tape become dirty or too hard, it can be softened by wiping with benzoline.

The Electrical Testing of Electric-Supply Mains.

The accurate testing of electric-light mains before and after laying, and periodically during use, is a matter of great importance if the efficient working of a system is to be obtained and maintained. For the purpose of accurate testing each station should be provided with a sensitive high-resistance mirror galvanometer, a shunt box, a resistance coil of not less than 10,000 ohms (if possible, a megohm), a condenser, keys, and a battery of not less than 100 Leclanché cells. For tests during laying this battery should consist of 400 to 600 cells. It is often possible, however, to use the current from the mains at the normal supply voltage, on a direct-current system.

The shunt boxes usually supplied with the mirror galvanometers are fitted with shunts having for that particular galvanometer multiplying powers of 10, 100, and 1,000. For the varying insulation resistances which have to be measured in electric-light testing a resistance box having coils of units, tens, hundreds, and thousands is most convenient for use as a galvanometer shunt box, as it enables work to be done between very wide limits, and the obtaining of the deflection upon any part of the galvanometer scale. The Ayrton-Mather 'Universal' shunt-box can be used with advantage, as the multiplying powers are independent of the resistance of the

galvanometer. The instruments should be erected and adjusted before the work of laying or pulling is commenced, so that tests may be taken on the arrival of the drums of cable and the specified insulation resistance assured.

The test should be taken with the drums of cable immersed in water wherever possible; but where this cannot be done they must be well wetted, except in the case of lead-sheathed cable.

The preparation of both ends of the cable is of the utmost importance if the real insulation resistance of the dielectric is to be obtained, the difference in the results given with properly and improperly prepared ends being very great. For vulcanised rubber cables the tapes, braiding, or other covering should be removed for at least 6 inches from the ends, and the tape next the rubber

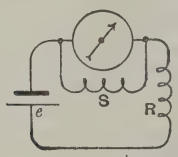


FIG. 1.

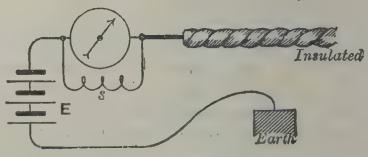


FIG. 2.

should be carefully removed, and the surface of the rubber washed with naphtha, and well scraped to remove any fragments of the tape. The rubber should be tapered off with a pair of clean, bent scissors, the length of the taper being 1 to 2 inches. Next thoroughly dry the whole of the prepared end by means of a spirit lamp, allowing the flame to play round the rubber, care, however, being taken not to burn it. If the test cannot be taken immediately, the prepared end should be well warmed and lapped with clean, warm, pure indiarubber tape, well stretched.

The most accurate method of obtaining the insulation resistance of a highly insulated cable is the direct deflection method—i.e. by a comparison of the deflection of the galvanometer needle produced by a given battery power working through a known high resistance with the deflection produced by the same battery power working through the insulation of the cable. This method is as follows :—

A small battery (usually 1 cell) is first connected up, as shown by fig. 1, with the galvanometer and with a resistance, R, of 10,000 ohms, the galvanometer being shunted by a shunt, S (usually the $\frac{1}{1000}$th shunt), so that a convenient deflection, D, is obtained; this is called taking the constant. The connections are then altered as shown by fig. 2, a large battery, E (about 100 or more cells), being used, and the wire whose insulation is to be measured being joined up as shown. Let the deflection be d, and the shunt s on the galvanometer be the $\frac{1}{n}$th (usually $\frac{1}{10}$th $\frac{1}{100}$th or $\frac{1}{1000}$th—i.e. $n = 10$, 100, or 1,000); also let the shunt used when the constant is taken be the $\frac{1}{N}$th shunt; then

$$\text{Insulation resistance of wire in megohms} = \frac{D \times N}{n} \times K \times R \div d \times 10^6,$$

where K is the ratio between the number of cells used in taking D and in taking the constant; thus, if d is given by 100 cells and D by 1 cell, then K = 100. When great accuracy is required the exact ratio of the electromotive force of the large to the small battery has to be determined, for it is seldom that 100 cells have exactly 100 times the E.M.F. of 1 cell, though in a large number of cases it is sufficient to consider it as such, care being taken that the cells are all in good condition. If a megohm resistance (1,000,000 ohms) is available, the constant may be taken with the same battery as is used for testing the insulated wire, the megohm being used in the place of the 10,000 ohms; in this case K = 1. A short-circuit key must be connected across the galvanometer terminals, and must always be closed so as to short-circuit the galvanometer at the beginning of each test, otherwise the rush of current from a high battery power will probably demagnetise the needle. For testing short lengths of highly insulated cable a battery of at least 400 Leclanché cells should be used. If the battery is kept on for fifteen minutes, during which readings are taken every minute, it will be noticed that the deflection falls rapidly the first two or three minutes, the fall per minute becoming gradually less, till, at the end of fifteen minutes, the deflection is falling very slowly. It would thus appear as if the insulation resistance rises during the test; but the chief reason is, that when the battery is first connected, and after the first rush of current, the dielectric electrifies or absorbs current, and this absorption naturally becomes less and less as the cable becomes fully charged. The great use of this test is that it shows the existence of minute faults in a cable which on a one-minute test would pass the specification, as, if there is little or no electrification, or the existing electrification proceeds unsteadily, it is certain the dielectric contains undeveloped faults. For this test it is absolutely necessary that the cable should be in water,

THE MACINTOSH CABLE CO. LTD.

Registered Office:

ASHBOURNE ROAD MILLS, DERBY

ELECTRIC CABLE MAKERS

Paper Insulated Cables.
Vulcanised Rubber Cables and Wires.
Vulcanised Bitumen Cables.
Lighting Flexibles.
Telephone Cables.
Switchboard Cables, Wires and Cords.

FIRE RESISTING CABLES.

MACONITE INSULATED SIGNAL CABLES.

Cables for Railway Electrification
A SPECIALITY.

Contractors to the Ministry of Munitions, War Office, Admiralty, Air Ministry, Office of Works, Dockyards, Railways, Collieries, Corporations, Consulting Engineers, Light and Power Companies, Councils, &c., &c.

DERBY:	LONDON: Contracting Department.	LIVERPOOL:
Ashbourne Road Mills.	22/3 Jewin Street.	Rice Lane, Walton.
Telegrams—"Macintosh, Derby."	"Lark Barb."	"Conductor, Liverpool."
Telephones—1200 Derby.	1603 City.	73 Walton.

F. 1868

MACINTOSH CABLES.

INDIA RUBBER, BITUMEN
AND PAPER INSULATED.



E.H.T. Split Conductor Line.

Send enquiries to—

THE MACINTOSH CABLE CO., LTD.

CONTRACTING DEPT.

22/3 Jewin Street, London, E.C. 1.

as no reliable results could be obtained even from a well-wetted drum ; and of course it cannot be taken on a system connected up to transformers, etc., though frequently before connecting up the electrification is very pronounced. It is customary to take the reading of the deflection d at the end of one minute's electrification.

In order to avoid error due to leakage from the lead between the galvanometer and the cable, the galvanometer key should be depressed before the lead is connected to the cable ; any deflection

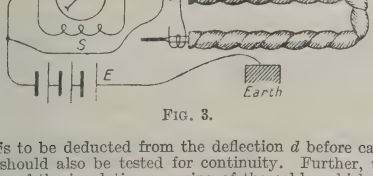


FIG. 3.

that may be observed is to be deducted from the deflection d before calculating the insulation resistance. The leads should also be tested for continuity. Further, to prevent error due to leakage over the surface of the insulating covering of the cable, which is often of considerable importance, especially when the length of cable under test is short and the insulation resistance very high, a 'guard wire' should be connected at one end to the junction between the battery and the galvanometer, the other end being wrapped round the prepared insulating surface at each end of the cable (if both ends are accessible) : this device (fig. 3) by-passes round the galvanometer any current due to surface leakage, and greatly improves the conditions of testing.

All insulated conductors should be tested after at least twenty-four hours' immersion in water, and none but those giving the specified insulation resistance should be accepted. When laid or drawn in, but before jointing, the section having one end in the station should have its ends prepared, the distant end being well warmed and lapped, and a careful test taken ; if all right, prepare section 2, and having by means of a short piece of fine wire connected it to section 1, test both sections together. If the insulation resistance per mile is found to be correct, the two sections may be jointed, after which they should be again tested, and if not up to the previous tests the joint must be remade. Sections 1 and 2 being jointed and passed, section 3 may be temporarily connected and tested, jointed, and the three sections tested, and so on till the entire system is jointed and the final test taken. If this method is carried out the engineer in charge will have a record of tests—1st, upon each section in water ; 2nd, upon each section after laying ; 3rd, upon the system as each length is jointed on—and he will feel satisfied that the cables are up to the specification, that they have not been damaged in laying, and that the joints are all well made.

With vulcanised indiarubber joints in a vulcanised indiarubber insulated cable there is no difficulty in keeping the completed system up to the specified insulation resistance per mile of the cable. It is manifestly absurd to lay down high-class mains and, by means of inferior joints, reduce the insulation resistance to a few thousand ohms. If a section cannot be tested from the station, or if the jointing cannot be commenced at the station end of the mains, a portable testing set should be employed ; and when all the sections are jointed up a final test should be taken with the station instruments.

With portable testing apparatus it is not possible to attain the same degree of accuracy as by the method outlined above ; but, on the other hand, the insulation resistance of cables and wires when laid or installed in position is usually very much lower than in the former case, and therefore does not call for equally refined methods of testing. The most convenient portable instrument for testing insulation resistance is the 'Ohm-meter,' of which several patterns are obtainable, each combined with a generator which gives the necessary testing pressure without the aid of a battery. These instruments are capable of applying a testing pressure of 500 or even 1,000 volts, and of measuring to a sufficient degree of accuracy insulation resistances up to 1,000 megohms.

Testing sets are also made for carrying out tests of insulation resistance by the direct deflection method, using a galvanometer of the pivoted type, and a battery ; these instruments in some cases are so designed as to be capable of being applied also to the measurement of direct currents and pressures, low resistances, etc., and for localising faults on cable networks. The Evershed ohmmeters are described on p. 1940.

Metallic Resistance Materials.

Metallic resistance materials are classified by the British Engineering Standards Association for maximum temperatures of 60, 200, 300, 700, and 1,000° C. respectively. According to Report No. 115—1921, the resistivity at 20° C. is not to differ more than 5 per cent. from that declared by the supplier, and the material must be uniform in resistance within 5 per cent. ; the temperature coefficients in the two low-temperature classes must not exceed 0·00002 and 0·00004 per degree C. respectively, and these classes must withstand temperatures of 60° and 150° C respectively for ten hours without the resistance changing more than 0·01 per cent. Lists of standard sizes of wires, sheets, and tapes are given in the Report.

Cable Soldering Sockets.

Specification No. 91—1921 of the British Engineering Standards Association gives the standard dimensions of cast and wrought lug sockets, clamp sockets, and clamps, for cables from 0·0018 to 1·000 sq. in. sectional area. Cast lug sockets are of brass containing 70 per cent. of copper, and wrought lug sockets are of solid-drawn copper tubing; clamp sockets are of brass or other suitable non-ferrous metal. Sweating surfaces are to be drilled and tinned ,and contact surfaces machined.

Cables for Installation Work.

As far as electrical installation work, and particularly conduit work, is concerned, the type of cable with which the contractor has mostly to deal is that known as a rubber insulated cable. The real properties of rubber insulated cables are more or less obscure, and the question as to what constitutes a good cable is almost impossible to answer with any degree of accuracy. To give some indication as to the quality of the rubber compound covering, a careful chemical test is required, and this combined with a stretching test will give a distinct clue as to the possible durability of the material.

The following specification for high-grade electric power and lighting cables for working pressures up to 500 volts is based on the British Admiralty Specification.

Specification for Vulcanised Rubber Insulated Wires and Cables.

Conductor.—The conductor is either to be a single wire or is to be composed of a strand formed of the number of wires specified. Each wire is to be of high conductivity copper and drawn as accurately as possible to the specified gauge. In no case shall the weight of any wire in any foot length of the wire or cable vary more than 2 per cent. either way from the standard weight of such length. The several wires in the cable shall be stranded together to form a compact strand, the lay on each ring of which shall be uniform throughout the length of the cable, except in the case of conductors in which great flexibility is required, when they shall be twisted uniformly. All wires are to be British drawn.

Copper.—Each wire is to be of solid well-annealed copper, having a conductivity of not less than 98 per cent. of annealed high conductivity commercial copper, which is to be taken to have a resistance of 0·66788 microhm per cubic inch at a temperature of 60° F. The copper must be capable of elongating at least 15 per cent. in a length of 6 ins.

Tinning.—Each wire is to be double tinned uniformly and efficiently, and must be thoroughly cleansed before stranding or covering. The tinning is to be free from lead or other impurity, the minimum thickness of the tin being such that the conductor shall show no signs of sulphide of copper after vulcanising.

Joints in Conductors.—Not more than two joints are to be made in any one of the single wires forming 1,000 yds. of completed cable and no joint is to be within 12 ins. of any other joint in the same ring. Joints should be avoided altogether if possible, but where made they are to be brazed or electrically welded. No joint may be made in the conductor after it has been stranded.

Stranding.—All wires are to be stranded right and left-handed. The lay is to be uniform in each ring throughout its length and must be such as not to increase the resistance of the stranded conductors more than 2 per cent. above that of a conductor of the same length with parallel wires.

Dielectric.—The conductor is to be covered with three layers of indiarubber, viz. :—first a layer of pure indiarubber (the pure rubber shall not contain more than 0·35 per cent. of sulphur), then a separator, and lastly, a jacket. The first covering is to be of the finest Brazilian Para rubber. The separator and jacket are to be composed of the finest Brazilian Para rubber mixed with sulphur and mineral matter only. The quantity of rubber which is to be used in the separator and jacket mixtures must not be less than 40 per cent. (forty per cent.). No re-manufactured rubber or rubber substitute is to be used.

The pure rubber is to be applied to the conductor by being lapped around it, care being taken that each successive turn amply overlaps the last so as to leave no possibility of an opening in the covering. The separator and jacket are to be applied longitudinally, great care being taken that the conductor is accurately centred in the dielectric.

The conductor insulated as described is to be spirally lapped with an indiarubber proofed tape, and the whole vulcanised together into a compact homogeneous body.

Thickness of Dielectric.—To be not less than that specified in the published list of the Cable Makers' Association.

Stretching Test of Dielectric.—Samples of the vulcanised rubber from which the conductor has been removed are to return to within 25 per cent. (twenty-five per cent.) from original length within 6 hours after being stretched for 24 hours at or about 60° F. to three times its length.

Insulation Resistance.—The insulation resistance of each length of cable is to be measured by means of the direct deflection method, employing a battery giving not less than 500 volts. The cable is to be negatively electrified for one minute, during which the electrification is to progress steadily, and at the end of this time the insulation resistance shall not be less than that specified.

Immersion in Water.—All cables are to be immersed in fresh water, making efficient electrical connection with earth for a period of not less than 24 hours immediately preceding the tests.

The foregoing details give some indication of the main features which are to be looked for in

a high-class rubber insulated cable. As regards the conductors, the conductivity question is one of considerable importance, but it should be mentioned that trouble in this direction very seldom arises, because there is little difficulty in maintaining a standard purity in electrolytically refined copper. The phrase ' to show no sign of sulphide of copper after vulcanising ' refers to the appearance of the wire when it is stripped of its insulating covering. It should then present a clean, bright appearance, free from blackening.

The building up of the rubber dielectric in three layers represents the usual English practice, and the wording of the specification is designed to exclude the use of adulterants and deleterious substances, these being practically synonymous so far as the life of the rubber insulation is concerned.

The specifying of a minimum percentage of Para in addition practically leaves no room for anything but legitimate compounding ingredients, the choice of which is left to the experience and skill of the cable manufacturer.

There is, perhaps, no industry so greatly dependent on detailed experience and skill in applying that experience as that of the manufacture of rubber, and when electrical conditions are involved this is doubly true.

Generally speaking, therefore, where consideration of quality and durability are paramount it will always be best to purchase rubber insulated cables, either to a specification such as that instanced above, or to agreed standards such as those of the Cable Makers' Association.

The provision of suitable outer coverings for rubber insulated wires and cables which are exposed to abnormal conditions is a point which should not be overlooked. Conversely, in a given situation, a certain method of installing may be unsuitable. For instance, condensation effects, which occur in tubes and pipes, are notoriously bad for rubber cables, and in such situations either the method of installing should be varied or special coverings, such as a bitumen sheath, should be applied to the cables. Many cable makers are prepared to advise as to the best type of covering and method of running or fixing cables under abnormal surrounding conditions.

A second quality of vulcanised rubber cable has been placed on the market to meet the demand of those users who are satisfied with a cheaper grade of cable. Such cable, known as ' non-Association ' cable, is quite satisfactory when properly manufactured, and may be safely used in cases where only a moderate insulation, combined with good mechanical properties, is required, and where the conditions do not require a permanent maintenance of high elasticity of the dielectric.

CONDUITS.

Simplex Conduits and Fittings for Electrical Installations.

(*Simplex Conduits, Ltd.*)

Simplex conduits, with the exception of the seamless or drawn varieties, are made from specially selected steel strip, varying in gauge according to the diameter of the tube. The strips are rolled to a circular section of exact external and internal diameter, by a method which ensures freedom from internal roughness and an even surface to facilitate the drawing of the wires into the conduit, thus preventing injury to their insulation. Exact sizes are essential in order to obtain a tight junction between the conduit and fittings with both socket and screwed junctions.

The conduits are made in two different types, viz., Light Gauge, for socket and continuity junctions, and Heavy Gauge for screwed junctions.

The applications of the various grades are as follows :—

Light Gauge Socket Conduits.

1. *Simplex Ordinary Conduit.*—This has a longitudinal seam, the edges of which, although abutting closely together, are not metallically united. It is suitable for general house wiring and dry situations generally, in which no extraordinary risks are incurred, but should never be buried under plaster or cement. Where price is the main consideration, Simplex Ordinary Conduit with socket junctions should be used, but in cases where electrical continuity is insisted upon by the Authorities the Continuity Junction should be employed.

2. *Simplex Light Elektroduct Conduit*—is a specially brazed tube, for use when the conduit work on the socket or continuity system is buried under the plaster of the building.

3. *Simplex Light Cableduct Conduit*—is used for superior surface work in which the socket or continuity junction is employed.

Simplex Heavy Gauge Screwed Conduits.

1. *Simplex Screwed Elektroduct*—is a specially brazed tube with extremely smooth interior and exterior surfaces. It is the cheapest of the Heavy Gauge Conduits, and should be employed for installation work where ' Heavy Gauge Screwed Conduits ' are specified.

2. *Simplex Screwed Wireduct*—is a welded tube drawn over dies to exact diameters, manufactured by a process which keeps the interior free from burrs and other obstructions.

3. *Simplex Screwed Cableduct*—is a high grade conduit, and is essentially a drawn tube. It is recommended for the best class of work where price is not of the first importance; it provides a high degree of security from fire risks, with long life, freedom from faults and security against breakdown to the installation.

Protective Covering of Conduits.

Simplex conduits are supplied in two standard finishes, as follows :—

(1) Stove enamelled (black); (2) Galvanised.

For all ordinary installation work in the interior of buildings, the enamelled conduits will be found satisfactory in working.

The enamel employed is flexible, acid-resisting, insulating, and durable.

The conduits are well cleaned before being enamelled, and are subsequently stored at an even temperature until the enamel is set, so that it is not liable to flake or break away when the conduit is bent. The enamel will resist any chemical action which is likely to be found in the plaster of buildings.

Where conduit is subjected to excessive chemical action, especially when buried in cinder-fill concrete, quick-drying chemical plasters, and the like, a more efficient protection is required, and this is afforded by the galvanising.

Simplex conduits have been supplied to Government Departments.

SELECTION OF TYPE OF CONDUIT.

Contract Price at which the Work has been accepted.—Where the price is cut very fine, ordinary conduit, being the cheapest grade, should be employed, as its low initial cost and low labour charges make it especially applicable. Where a higher grade conduit can be allowed for, then either 'Elektroduct' or 'Cableduct' may be used.

Condition of Building.—If the building is in course of construction, the conduit system will usually be concealed, and in wiring before the plastering is commenced it would be advisable to employ Elektroduct, except under floor boards, where the ordinary conduit may be used.

Circumstances entailing unusual risks.—(1) Risk of damage to protective covering, such as would be met with on steamships, in shipyards, collieries, breweries and engineering works; (2) Risk of damage due to excessive moisture, steam, water or vapour—such are present in boiler rooms, laundries, baths, etc. In these cases, electro-galvanised heavy gauge screwed conduit should be used.

JUNCTIONS FOR SIMPLEX CONDUITS.

There are three forms of junctions or unions used with Simplex conduits, viz. :—

(1) The *socket* junction for *light gauge* conduits.

(2) The *screwed* junctions for *heavy gauge* conduits only.

(3) The continuity or screw-socket junction for either light gauge or heavy gauge unscrewed conduits.

The Socket Junction is the simplest and cheapest, and secures proper alignment of the conduits—a feature of importance in surface work. It also requires a minimum of time, labour, and expense in erection, and is, therefore, the most economical junction, as no special tools or skilled labour are necessary.

Simplex couplings, fittings and boxes for use with this junction are accurately bored out for a distance depending upon the diameter of the outlet, and a slight shoulder is formed, against which the conduit abuts. Thus a good fit is secured.

The Screw Junction is the one used for connecting up heavy gauge conduits and fittings. The conduits are threaded on the outside, and this threaded portion screws into the tapped outlet or inlet of the fitting, forming an electrically continuous joint.

The Continuity Junction enables light gauge unscrewed conduit to be connected, and have electrical continuity throughout. Thus the Simplex Continuity System may be earthed as effectively as the Simplex Screwed System.

The advantages claimed for this system are :—

(1) No screwing tools required.

(2) No twisting of cables under any circumstances.

(3) Standard screwed fittings are used.

(4) Permanent continuity obtained on sound mechanical lines.

BRITISH STANDARD SPECIFICATION FOR STEEL CONDUITS FOR ELECTRICAL WIRING.*

(No. 31—1910.) (*Abstract.*)

Steel conduits for electrical wiring shall be either close-joint, brazed, welded or solid drawn They shall be of mild steel free from burrs, flaws or other defects. They and their accessories, when these are made of steel or iron, shall be stove enamelled or galvanised inside and out by an approved process.

* By permission of the British Engineering Standards Association.

Two classes of steel conduit for electrical wiring are recognised as standard :—

(A) Plain.

(B) Screwed.

Class (A) consists of light gauge conduit of the thicknesses and dimensions given in the annexed table. The socket joining the lengths of tubing is a sleeve and neither the ends of the conduit nor the socket are screwed.

Class (B) consists of heavy gauge conduit of the thicknesses and dimensions given in the annexed table. Both ends of the conduit are screwed with the Whitworth form of thread. The couplers are also screwed inside throughout their entire length with a right-handed thread of Whitworth form, but having the number of threads per inch given in the annexed table. The screwed portions of both conduits and couplers are not enamelled.

Both classes of conduit shall be manufactured in straight lengths of ten, twelve, or fourteen feet.

The thickness of any bend or tee shall be not less than that of the corresponding straight length.

Conduits and their accessories shall be gauged at the works of the manufacturer, before enamelling or after galvanising.

TABLE OF STANDARD DIMENSIONS OF STEEL CONDUITS.

Outside diameter in ins.			$\frac{5}{8}$	$\frac{3}{4}$	1	$1\frac{1}{4}$	$1\frac{1}{2}$	2
Threads per in.			18	16	16	16	14	14
Depth of thread in ins.			·0356	·0400	·0400	·0400	·0457	·0457
Max. permissible length of thread on end of conduit in ins. $= \frac{1}{8}(D+\frac{3}{8})$			$\frac{1}{2}$	$\frac{9}{16}$	$\frac{11}{16}$	$\frac{13}{16}$	$\frac{15}{16}$	$1\frac{3}{16}$
Min. permissible length of thread on end of conduit in ins. = max. less $\frac{1}{16}$			$\frac{7}{16}$	$\frac{1}{2}$	$\frac{5}{8}$	$\frac{3}{4}$	$\frac{7}{8}$	$1\frac{1}{8}$
Nominal Thickness	Class (A)	S.W.G.	19	18	18	17	16	16
		(ins.)	(·040)	(·048)	(·048)	(·056)	(·064)	(·064)
	Class (B)	S.W.G.	16	15	15	15	14	13
		(ins.)	(·064)	(·072)	(·072)	(·072)	(·080)	(·092)
Weight per 100 ft. in lbs.	Class (A)	Max.	28·9	40·8	55·4	79·9	108·7	146·7
		Min.	23·6	34·4	46·6	68·9	95·4	128·1
	Class (B)	Max.	42·2	56·9	78·1	99·3	132·1	202·4
		Min.	37·4	51·0	69·8	88·5	119·0	184·7
Combined lengths of recessed portions of plain sockets in ins.			$2\frac{1}{4}$	$2\frac{1}{2}$	3	$3\frac{1}{2}$	4	5
Thickness of plain socket in ins.			·060	·072	·072	·084	·096	·096
Length of coupler in ins.			$1\frac{1}{8}$	$1\frac{1}{4}$	$1\frac{1}{2}$	$1\frac{3}{4}$	2	$2\frac{1}{2}$
Thickness of coupler in ins. (before screwing)			·128	·144	·144	·144	·160	·184
Minimum radius of bends in ins.			$1\frac{7}{8}$	2	$2\frac{1}{2}$	$3\frac{3}{4}$	$5\frac{1}{4}$	$8\frac{1}{2}$

The Henley Wiring System.

(W. T. Henley's Telegraph Works Co. Ltd.)

In this system the cables carry their own metallic protection, which is of a flexible nature : it is consequently very easily and speedily erected. The wires and cables are of very small diameter, and when painted, distempered, or stained and varnished to match existing decorations, they are to all intents and purposes indistinguishable. If desired, the cables may be buried in plaster and concealed generally. The cables may be run under floorboards, in lofts or cupboards, and dropped down between the faces of lath-and-plaster partition walls. The chasing of walls or cutting away of joists is very much less than is required with tubing.

The system covers two classes of wire : the earthed concentric for use on alternating-current systems through a double wound transformer, for private plant installations, and also for use in certain districts where the use of an earthed system has been approved by the Board of Trade. The other is the two-wire insulated type laid up in the form of a flat twin. This cable, of course, may be used on both direct and alternating current systems. In both classes of wire the insulation consists of pure and vulcanised indiarubber protected from mechanical damage by a seamless metallic sheath (of a special alloy) formed closely round the core or cores.

The fittings are arranged to be connected to the cables without a soldering iron or blow lamp.

The outer or earthed return conductor of the cables for the *Concentric System* is composed of copper tape which is wrapped round the core in a spiral manner, the whole being then sheathed with a solid-drawn tube of the special alloy.

For the *Twin System* the cables employed are of flat section of one, two, and three conductors, each conductor composed of tinned copper wires, insulated with pure and vulcanising india-rubber taped with proofed tape of a distinctive colour, the whole then vulcanised together, cores laid side by side and sheathed with a solid-drawn tube of the special alloy.

TABLE OF CONCENTRIC SYSTEM CABLES.

Class C.E.T.

Size of Conductor (Inner).		Minimum Guaranteed Insulation Resistance at 60° F. per Mile.	Amperes at I.E.E. Standard.	Approximate Overall Diameter.	Approximate Weight per 1,000 Yards.
Square Inch.	Number and Size of Wires.				
		Megohms.		Inch.	Cwts.
0·0015	1/·044	2,000	6·1	0·241	3·9
0·002	3/·029	1,250	7·8	0·260	4·4
0·003	1/·064	2,000	12·9	0·267	4·7
0·003	3/·036	1,250	12·0	0·285	5·1
0·0045	7/·029	900	18·2	0·298	5·7
0·007	7/·036	900	24·0	0·353	8·4
0·010 *	7/·044	900	31·0	0·390	9·8
0·0145 *	7/·052	900	37·0	0·446	13·5
0·0225 *	7/·064	900	46·0	0·500	16·7
0·040 *	19/·052	750	64·0	0·606	23·3

* In these larger sizes the outer conductor is of tinned copper wires instead of copper tape.

Test Pressure.—1,000 volts alternating for 15 minutes after 24 hours' immersion in water at 60° F. (15·6° C.).

TABLE OF SINGLE-CORE, TWO-CORE, AND THREE-CORE CABLES.

Nominal Area.	Conductor.	Minimum Insulation Resistance per Mile at 60° F.	Amperes at I.E.E. Standard.	Approximate Overall Dimensions.	Approximate Weight per 1,000 Yards.
		SINGLE CORE—CLASS ZM.			
Sq. In.	In.	Meg.		In.	Cwts.
0·0015	1/·044	2,000	6·1	0·208	3·2
0·002	3/·029	1,250	7·8	0·230	3·64
0·003	1/·064	2,000	12·9	0·232	3·76
0·003	3/·036	1,250	12·0	0·250	4·13
		TWO CORE—CLASS ZZMF.			
0·0015	1/·044	2,000	6·1	0·232 × 0·360	5·01
0·002	3/·029	1,250	7·8	0·254 × 0·404	5·78
0·003	1/·064	2,000	12·9	0·256 × 0·408	6·02
0·003	3/·036	1,250	12·0	0·274 × 0·444	6·66
0·0045	7/·029	1,250	18·2	0·305 × 0·486	8·93
0·007	7/·036	900	24·0	0·338 × 0·552	10·51
0·010	7/·044	900	31·0	0·366 × 0·608	12·38
0·0145	7/·052	900	37·0	0·416 × 0·688	16·82
0·0225	7/·064	900	46·0	0·458 × 0·772	20·49
0·040	19/·052	750	64·0	0·580 × 0·976	34·85
		THREE CORE—CLASS TZMF.			
0·0015	1/·044	2,000	6·1	0·252 × 0·508	8·71
0·002	3/·029	1,250	7·8	0·274 × 0·574	10·00
0·003	1/·064	2,000	12·9	0·276 × 0·580	10·36
0·003	3/·036	1,250	12·0	0·294 × 0·634	11·43

Test Pressure.—1,000 volts alternating for 15 minutes after 24 hours' immersion in water at 60° F. (15·6° C.).

FITTINGS.

Concentric System.

When the switch and light points have been chosen, the lower half of the H.W.S. screw fitting (*a*), fig. 4, is screwed into the wall or ceiling at the point fixed; the stud (*b*) is then screwed into its head, and a washer (*c*) is slipped on. The fitting is then ready to receive the outer conductor of the cable. The ends of the cables to be finished at this point are prepared in the usual way, the outer conductor (*d*) being unwrapped from the core, straightened out, and bent back at a point about 1 in. from the finish of the metal covering. A hole is punched through the double thickness of tape by means of a plier punch; the hole so made is then slipped over the stud, and

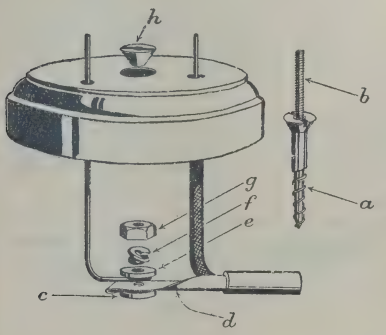


FIG. 4.

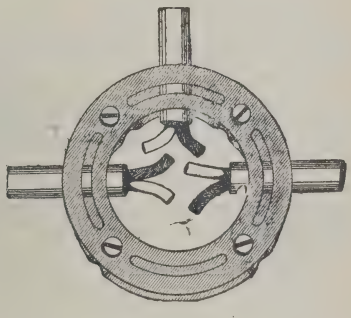


FIG. 5.

followed by a brass and a spring washer (*e*, *f*). The whole is then held securely by the hexagonal nut (*g*); the wood block being placed over all, and held in position by means of the cone-shaped nut (*h*). Where a connection to the external conductor is required, such as at light points, a piece of copper wire may be clamped between it and one of the washers.

Twin System.

For the purpose of bonding the sheathing at switch and light points the Universal Bonding Clamp is provided. This clamp, fig. 5, has been designed so that one clamp only, instead of

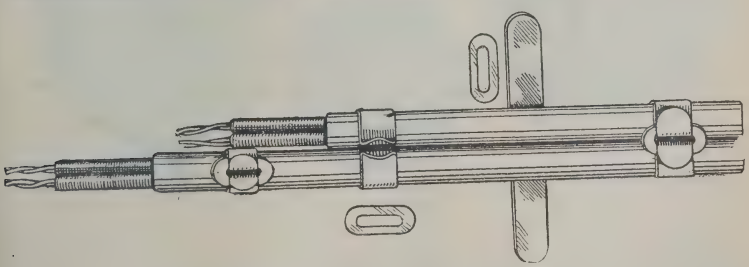


FIG. 6.

several, may be used at any point, thereby reducing to a minimum the necessity for stocking various sizes of clamps for various numbers and sizes of wires, etc.

In the case of electroliers controlled by two switches, in many instances it will be found most economical to use a 4-plate ceiling rose, taking both switch and light feeds to this rose, connecting the switches with a 3-core cable.

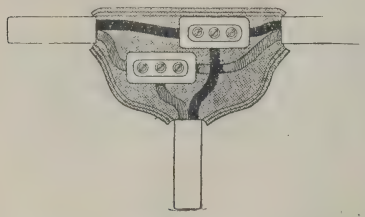


FIG. 7.

Straight through and tee joints are made with the use of the boxes provided under the system.

For fixing the cables, the 'Link' clip, fig. 6, is specially convenient. These clips are made from tinned brass, and may be fixed with either nails or countersunk-headed screws.


Fig. 7 shows a recent form of Tee and Joint box for the twin system. These boxes are manufactured from brass heavily tinned; the internal connectors are of the porcelain type, these being made in various forms according to requirements. The continuity of the metal sheathing of the cables is preserved by means of mechanical bonds that clamp the lugs on the boxes to the cables.

Figs. 8 and 9 show a plug (called a 'Rawlplug') for fixing link clips, saddles, protective covering or other articles, to plaster, brick, marble, slate, stone, etc. These plugs are highly suitable for soft plasters. They consist of a tube of stiffened fibres which expand when a screw is driven into them.



Section showing plug in position ready for screw.


FIG. 8.



Screw entering, showing expansion of plug against sides of hole.

FIG. 9.

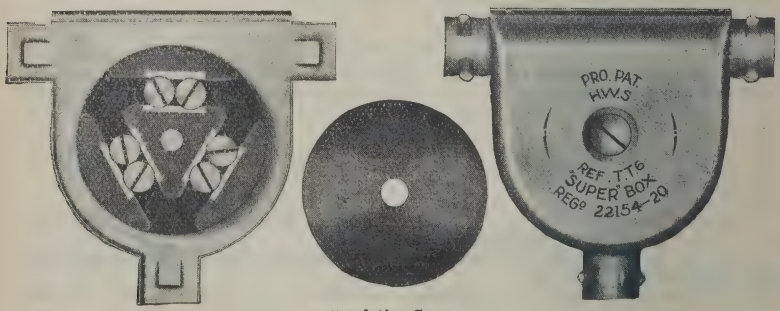Recently a 'Super Box' (fig. 10) has been introduced in connection with the system. This box has no loose screws or nuts, requires no special tools, cannot possibly be fitted up wrongly, makes a perfect automatic bond, and has an unloseable screw in the cover, which is self-centring,



Insulating Cover.

FIG. 10.

The terminal screws and cover-screw fit only in their proper places, and are easy to fit. The cover is securely held in its correct position by means of one screw only, which also ensures efficient bonding, and it forms a spring washer grip which prevents subsequent loosening by vibration.

Electro-chemistry.

A current of I amperes will, in T units of time, deposit from a solution of any salt of a metal, under suitable conditions, ITa grammes of the metal (if time is reckoned in seconds), or ITb grammes (if time is measured in hours), where a and b have the values given below, due account being taken of the valency of the metal in solution. One 'gramme-equivalent' of any substance is dissolved, deposited, or decomposed by the passage of 96,494 ampere-seconds (coulombs) or 26·80 ampere-hours. This quantity of electricity is known as the 'faraday.'

Element.	Atomic Weight.	Valency.	a Gm. per coulomb.	b Gm. per amp.-hr.	Element.	Atomic Weight.	Valency.	a Gm. per coulomb.	b Gm. per amp.-hr.
Aluminium	27·1	3	0·00009362	0·3370	Mercury .	200·6	2	0·001036	3·731
Arsenic .	74·96	3	0·000259	0·9322	„	„	1	0·002073	7·462
Bismuth .	208·0	3	0·0007185	2·587	Nickel .	58·68	2	0·0003040	1·094
Calcium .	40·07	2	0·0002077	0·7478	Nitrogen .	14·01	3	0·00004840	0·1742
Chlorine .	35·46	1	0·0003675	1·323	„	„	1	0·0001452	0·5227
Cobalt .	58·97	2	0·0003056	1·100	Oxygen .	16·00	2	0·00008291	0·2985
Copper .	63·57	2	0·0003294	1·186	Platinum .	195·2	4	0·0005057	1·821
„	„	1	0·0006588	2·372	Potassium	39·10	1	0·0004052	1·459
Gold . .	197·2	3	0·0006812	2·452	Silver .	107·88	1	0·001118	4·025
Hydrogen	1·008	1	0·00001045	0·03762	Sodium .	23·00	1	0·0002384	0·8387
Iron . .	55·84	3	0·0001929	0·6944	Tin . .	118·7	4	0·0003083	1·110
„	„	2	0·0002894	1·042	„	„	2	0·0006166	2·220
Lead . .	207·2	2	0·001073	3·863	Tungsten .	184·0	2	0·0009535	3·432
Magnesium	24·32	2	0·0001260	0·4536	Zinc . .	65·37	2	0·0003388	1·220

In order to find the volume of gas evolved, multiply the weight in grammes by the volume occupied by one gramme of the gas at normal temperature and pressure. For the gases included in the table, the volumes in litres per gramme are as follows:—Chlorine, 0·3103; hydrogen, 11·12; nitrogen, 0·7990; oxygen, 0·6998.

To reduce the weights to pounds, multiply the weight in grammes by 0·0022. To reduce the volumes to cubic feet, multiply the volume in litres by 0·0353.

Resistivity of Electrolytes.

Electrolyte.	Grammes in 100 of Solution.	Specific Gravity.	Resistivity.	Temperature Coefficient, C.	Gramme equivalent per litre.
H_2SO_4 at 18° C.	5	1·0531	4·82	0·00121	1·065
	10	1·0673	2·57	0·00128	2·182
	20	1·1414	1·54	0·00145	4·667
	30	1·2207	1·36	0·00162	7·487
	40	1·3056	1·48	0·00178	10·68
	50	1·3984	1·86	0·00193	14·30
KOH at 15° C.	4·2	1·0382	6·85	0·00188	0·619
	8·4	1·0777	3·69	0·00187	1·580
	12·6	1·1177	2·67	0·00189	2·515
	16·8	1·1588	2·20	0·00194	3·477
	21·0	1·2088	1·97	0·00200	4·534
	25·2	1·2439	1·86	0·00210	5·599
	29·4	1·2908	1·85	0·00222	6·778
	33·6	1·3332	1·92	0·00237	8·001
	37·8	1·3803	2·10	0·00258	9·319
$CuSO_4$ at 18° C.	2·5	1·0246	92·4	0·00214	0·322
	5	1·0513	53·2	0·00217	0·661
	10	1·1073	31·4	0·00219	1·393
	15	1·1675	23·8	0·00232	2·202
	17·5	1·2003	21·9	0·00237	2·642

(*Kohlrausch & Holborn.*)

PRIMARY BATTERIES.

Siemens ' Dry Cells.

These cells (*Siemens Brothers & Co., Ltd.*), originally known as the ' Obach,' embody the result of many years of research and experience in this class of primary battery, and combine all the latest improvements. The cells are supplied in large quantities to the British and Colonial Post Offices and other Government Departments to comply with very rigid specifications. They are made round or rectangular in shape and in sizes to suit all requirements.

The following table gives the sizes, etc., and the output of a few of the standard sizes when discharged continuously through a resistance of 10 ohms until the P.D. has fallen to 0·75 volt on closed circuit, in each case :—

	Approximate Overall Dimensions (including terminal).	Approximate Weight.		E.M.F.	Internal Resistance.	Output.
		Lb.	Oz.	about	about	Amp. Hours.
M	$4\frac{7}{16}$ ins. × $4\frac{7}{16}$ ins. × $8\frac{1}{8}$ ins. high	10	0	1·5 volt	0·15 ohm.	260
N	$3\frac{5}{8}$ „ × $3\frac{5}{8}$ „ × $7\frac{1}{2}$ „	5	4	1·5 „	0·15 „	100
O	$2\frac{13}{16}$ „ × $2\frac{13}{16}$ „ × $6\frac{5}{8}$ „	3	0	1·5 „	0·20 „	37
P	$2\frac{1}{4}$ „ × $2\frac{1}{4}$ „ × $6\frac{1}{8}$ „	1	14	1·5 „	0·25 „	15

The cells are made up into batteries to give an e.m.f. of $4\frac{1}{2}$ or 6 volts. They are supplied in various shapes and sizes, and are extensively used for starting up on motor-cars, for small lights, cautery, and many other purposes.

Siemens Patent Inert Cell.

These cells (*Siemens Brothers & Co. Ltd.*), originally known as the ' Dura,' are similar in size and efficiency to the Siemens dry cell, and are also similar in construction, with the important exception that whilst the dry cells, as supplied, are in active condition, this cell is absolutely inert, and water must be added to bring it into activity. In the one case the exciting agent is in the form of a damp paste, and in the other in the form of a dry powder which, when water is added, also becomes a damp paste, and consequently the inert cell is converted into one having all the characteristics of a dry cell.

The special utility of this construction is that the cell will keep for an unlimited time in any climate without deteriorating in the least, and may be converted at any time into a newly made, so-called, dry cell.

ACCUMULATORS.

Storage cells should be placed in a well-ventilated room, preferably with louvres at the top to allow of the free escape of the gases evolved during charging ; and the room should also be well lighted, both naturally and artificially, provision being always made for a hand inspection lamp to enable cells to be examined individually. The room should not be exposed to undue draughts, as this promotes evaporation of the electrolyte, and it then becomes necessary to add an abnormal amount of water to keep the plates well covered with electrolyte.

Trays and Insulators.

When glass boxes are used, they should stand in separate trays containing sawdust, and these in turn should be supported on glass oil insulators, excepting in the smaller sizes, where indiarubber discs are used instead of trays, one of these discs being placed on top of each insulator between the latter and the glass box.

Stands.

The cells should stand on strong wooden shelves, protected with shellac varnish ; when in tiers, a space of not less than 30 ins. should be allowed between the shelves. The cells should be placed with the edges of the plates to view, and should only be arranged in double rows when they are accessible from each side. A space of about one inch should be left between adjacent boxes, or half an inch between trays.

Poles

The positive pole is painted red and is that to which the brown plates are connected : the negative pole is painted black and is that to which the grey plates are connected. The positive pole of each cell must be connected to the negative pole of the next cell throughout the battery, so that there will be a disconnected positive terminal at one end and a disconnected negative terminal at the other end of the battery. These are the battery terminals, which are

HART BATTERIES

are made in all sizes from

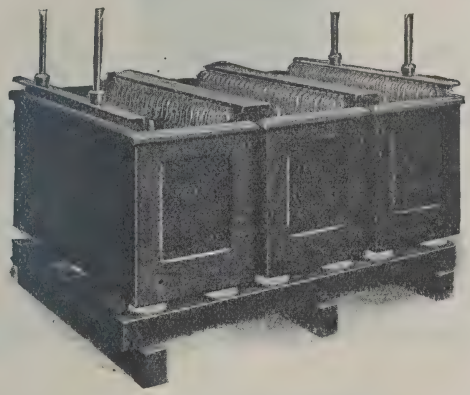
1 to 6,000 A.H. CAPACITY

for

Central Stations
Private Electric Lighting Installations
Motor Car Electric Lighting and Starting

LONG LIFE NO SKILLED ATTENTION REQUIRED

Apply for Illustrated Catalogue.



HEAD OFFICE & WORKS:

MARSHGATE LANE, STRATFORD, LONDON, E. 15

HART ACCUMULATOR Co. Ltd.

F.1878

ENGINEERS KNOW

from actual experience, and
by their own good judgment

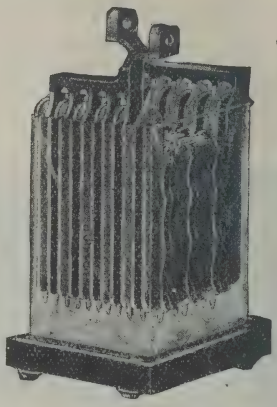
HART BATTERIES

REDUCE MAINTENANCE COSTS
SAVE FUEL
HAVE 90% AMPERE-HOUR EFFICIENCY

WRITE FOR LISTS

QUOTATIONS ON APPLICATION

HART



HART

HIGH EFFICIENCY

STEADY VOLTAGE

A World-wide Reputation for Reliability

HEAD OFFICE & WORKS:
MARSHGATE LANE, STRATFORD, LONDON, E. 15

HART ACCUMULATOR Co. Ltd.

F. 1879

connected to the dynamo as indicated in the diagram of connections in fig. 16. Cells should never be connected in parallel so as to form single cells of larger capacity; but if necessary they may be formed into batteries, and the batteries connected in parallel by coupling their ends.

An automatic switch should be provided in the charging circuit.

Dynamo.

The dynamo used for charging should be shunt-wound, and the electromotive force required will be 2·6 volts for each cell in series. Before connecting up the dynamo it should be tested for polarity, which may be done as follows: Place two clean strips of sheet lead in a stone jar filled

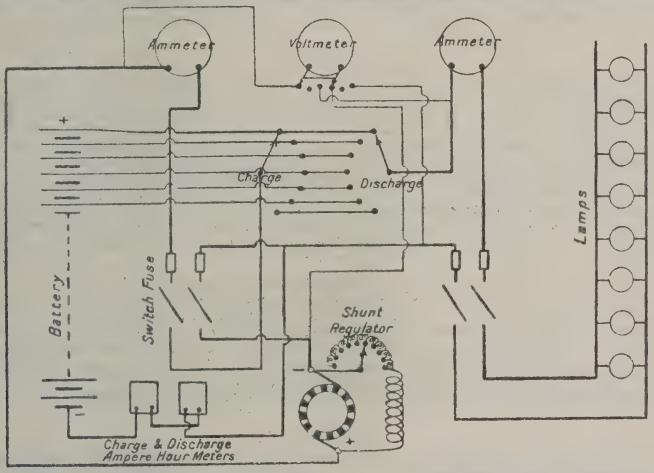


FIG. 11.

with dilute acid; separate them about two inches by means of a block of wood; connect one strip to one terminal of the dynamo and the other strip to an incandescent lamp which has its second terminal connected to the second terminal of the dynamo. After the dynamo has been running for a few minutes one of the lead strips will become brown, showing that the dynamo terminal connected to this strip is the positive terminal.

Instruments.

In addition to the voltmeter and to the ammeters in the charging and discharging circuits, it is very desirable to have in circuit a pair of ampere-hour meters, one to record the charge and the other the discharge. These may be connected in series as shown in the diagram of connections, and fitted with pawls which will prevent backward running, so that there will be a continuous record of both charge and discharge.

Water.

The water used for the cells should be distilled, as this avoids any danger of impurities entering the cell. Tap water should not be used.

Acid.

The Hart Accumulator Co. advises that the acid used for the electrolyte should be 'brimstone' sulphuric of 1·840 specific gravity, and free from impurities of all kinds, such as arsenic, etc. Before being poured into the cells it must be carefully diluted as shown below.

On the Continent, sulphuric acid prepared by the catalytic process is generally preferred for accumulators, on account of its great purity; this process originated in 1875 at the works of *Messrs. Spencer Chapman & Messel, Ltd.*, which firm likewise carry on the old process of manufacture from brimstone, and for both acids nothing but distilled water is used for dilution, the purity of the acids being thereby ensured.

Mixing Acid.

The acid must be poured slowly into the water in a separate vessel. This must be done with great care on account of the heat generated. The proportions by measure are five parts of water to one part of acid. The mixture should be well stirred and allowed to cool, when the specific gravity may be taken. This should be 1·190 as shown by the hydrometer.

Filling up.

When everything is ready for charging, the acid must be put into the cells to a height of not less than one inch above the plates. The acid must not on any account be allowed to remain long in the cells before charging, which must begin immediately after the electrolyte has been poured in. The specific gravity will drop slightly during the first few hours of charge.

Charging.

Before the battery is switched into circuit with the dynamo care should be taken that the field-magnets are properly excited and the proper e.m.f. generated. The initial charge should be continued for not less than 36–40 hours at the normal charge rate specified by the makers for the battery in use. The dynamo should on no account be stopped for the first twelve hours, nor should the battery be used to supply current until gas is being freely liberated from both positive and negative plates in each cell. The specific gravity will begin to rise slowly after the charging has commenced. If at the end of the first charge it rises above 1·210, pure water must be added to reduce it to 1·205–1·208. When, as in such a case, it may be necessary to add water, it should be introduced into the bottom of the cell by pouring through a glass or rubber tube with a funnel at its top end. The water will then be thoroughly mixed with the electrolyte. Any such addition of water should be made at the end of a charge whilst the plates are gassing.

Discharge.

The permissible rate of discharge depends upon the number of hours for which the discharge is required—the longer the time the smaller the rate. The product of rate into time is, however, not constant, but is greater with low rates of discharge than with high. Thus in the Hart Accumulator, 25 plate Lighting Type, the rates of discharge for 5, 7 and 10 hours are 126, 101 and 84 amperes respectively, giving discharge capacities of 630, 707 and 840 ampere-hours. The discharge rates for different times are always given by the makers, and should never be exceeded, the ampere-hours taken out being recorded on the discharge ampere-hour meter.

Recharging.

The cells should be recharged as soon as possible after each discharge. The normal charge rate is specified by the makers, and the time of charge will depend upon the previous discharge. The ampere-hours put in should usually be 10 per cent. in excess of the number taken out. If the battery is charged and discharged with great regularity every day this may be reduced to about 5 per cent. excess. A daily record of charge and discharge, as observed on the meters, should be kept on a form provided by the makers for the purpose.

Level of Electrolyte.

The level of the electrolyte must never be allowed to fall to less than half an inch above the top of the plates. Any loss due to evaporation must be made up by adding pure distilled water as above explained. Evaporation will be greatly retarded by the use of glass spray arresters covering the top of the plates. These must be so placed as to be easily removable for the purpose of examining the cells. Acid should not be added, except under the maker's advice.

Specific Gravity.

The specific gravity of each cell should be taken and recorded at least once a week, and if the consecutive readings so obtained are carefully compared, it is possible at once to detect a backward cell and take steps to remedy what is amiss. The hydrometer should be long enough to float in about two-thirds of the total depth of the electrolyte. The specific gravity varies to some extent with the temperature, and during the summer months will be rather lower than during the winter. The standard is taken at 60 deg. Fahr.; for every 2·7 degrees above this 1 degree of specific gravity may be added; for every 2·7 degrees below 1 degree of specific gravity may be deducted.

Cell Voltage.

Each cell should be tested at least once a week with a cell-testing voltmeter. This test should be made at the end of discharge, when the e.m.f. per cell should not be lower than 1·8 volts, normal current then passing. If any cell is lower than the others it should be at once examined for internal short-circuits or buckled plates. Low-voltage cells should be disconnected from the discharge circuit for a few days, but connected in charge in the usual way. This can

readily be done if the cells are of the type having bolted connections which can be easily undone The charge voltage will commence at about 2·20 volts per cell and rise to as much as 2·75 volts, the latter figure depending on the rate of charge. The discharge voltage will commence at about

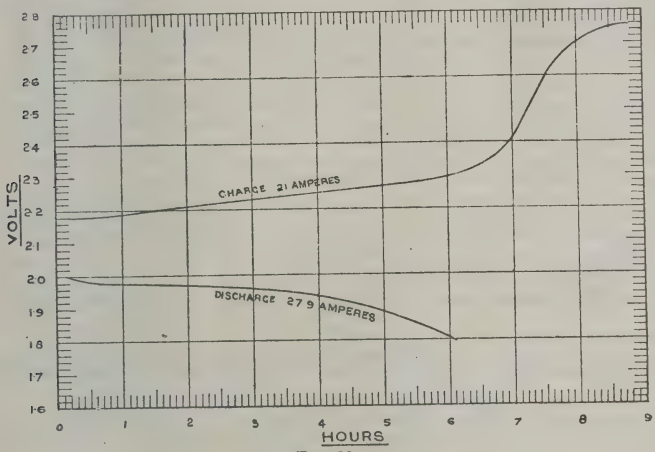


FIG. 12.

2·00 volts and gradually fall to 1·80 volts at the completion of the discharge. Fig. 12 gives typical charge and discharge curves of cell voltage of a seven-plate LL. type Hart accumulator.

Buckled Plates.

Buckled plates should be removed and straightened by pressing between thick boards. The positive plates are most easily straightened when fully charged, as they are then softer and not so liable to crack. The negative plates should be kept in dilute acid while the positives are being overhauled, as otherwise they may get heated by oxidisation with the air.

Idle Cells.

When a battery is not required for several weeks it should be thoroughly charged and the plates well covered with electrolyte. The cables should then be disconnected at the ends of each row to avoid any possibility of electrical leakage. Cells will remain in this condition for several months. If a charge can be given once every six or eight weeks it is best to do so; this should be given at 75 per cent. of the normal rate and continued until the full charge is completed, and the plates gas freely.

Battery Rooms.

SIZE OF BATTERY ROOMS REQUIRED FOR 25, 50 AND 100-VOLT HART BATTERIES.

Capacity in Amp. Hours.	25 Volt.		50 Volt.		100 Volt.	
	Single Tier.	Two Tier.	Single Tier.	Two Tier.	Single Tier.	Two Tier.
	′ ″ ′ ″	′ ″ ′ ″	′ ″ ′ ″	′ ″ ′ ″	′ ″ ′ ″	′ ″ ′ ″
140	6 6×3 9	3 6×4 3	6 9×5 0	7 0×4 3	13 3× 5 0	13 3× 4 3
280	9 3×3 9	5 0×4 3	10 0×5 0	10 0×4 3	12 9× 8 9	9 9× 6 0
420	6 9×5 0	6 9×4 3	13 0×5 0	13 0×4 3	16 6× 8 9	12 6× 6 0
630	9 0×5 0	9 0×4 6	11 6×8 9	9 0×6 6	16 9×12 6	16 9× 6 6
770	10 6×5 0	10 6×4 6	13 3×8 9	10 6×6 6	19 6×12 6	13 3×11 0
1,050	13 3×5 0	13 3×4 6	17 0×8 9	13 3×6 6	25 3×12 6	17 0×11 0

In preparing this Schedule the number of cells is as follows: 25-volt circuit, 13 cells; 50-volt circuit, 27 cells; 100-volt circuit, 54 cells. The height of room in each case should not be less than 8 feet.

Care of Storage Batteries.

Use only chemically pure acid (symbol CP).
Always pour the *acid* into the water.
Always cool electrolyte to 60° before pouring into cells. Stationary cells, sp. gr. 1·200.
Portable and automobile may go as high as 1·300.
High sp. gr. = low resistance, but danger to plates by sulphating if run too high.

Tests for impurities :—

Hydrochloric Acid (Chlorine).—To a small quantity of dilute electrolyte add a few drops of nitric acid, then add 3 drops of silver nitrate. The formation of a white, cloudy precipitate indicates the presence of chlorine in some form.

Nitric Acid.—Mix a solution of diphenylamine in concentrated sulphuric acid, and add it to the sample under test. Nitric acid will be indicated by a blue colour.

Iron.—Fill a test-tube with dilute electrolyte and heat to boiling point; add several drops of concentrated nitric acid and boil again. Repeat two or three times. When solution is cold add a few drops of potassium sulphocyanide, which will colour a deep red if iron is present.

Copper.—Add common ammonia until the resultant mixture gives an alkaline reaction; a deep blue indicates the presence of copper.

Arsenic.—Add an equal quantity of hydrogen sulphide solution ; a yellow precipitate indicates arsenic.

Chemically pure reagents only must be used.
Plates must not stand in acid longer than two hours without charging or they will sulphate.
Charging temperature should not rise above 100° F. ; if it exceeds this the current should be reduced.
The charging rate may be found by dividing the ampere hour capacity by 8.
The sp. gr. drops considerably at first, due to absorption by the plates, but will rise during the charge to slightly over the correct sp. gr. ; when charged it is about 0·025 higher than when discharged.
Never discharge below 1·8 volts per cell.

Edison Nickel-Iron Accumulator.

The Edison storage cell, which is largely used for propelling vehicles, has a positive plate of iron and a negative plate of nickel, immersed in a solution of potassium hydrate. The E.M.F. when fully charged is 1·5 volts, falling to 1·0 volt, or less, at the end of discharge. The output is 14 to 16 watt-hours per lb. of complete cell.

DIRECT-CURRENT GENERATORS.

Design of Direct-Current Generators.

The general design of the Westinghouse multipolar direct-coupled generator is as follows :—

A circular field yoke carrying inwardly-projecting pole pieces of laminated soft steel. The field ring is divided horizontally or vertically to suit variable conditions of service. When the machine is coupled at one end of a high-speed engine, and there is sufficient overhead room, the horizontal position is adopted. But when overhead room is restricted or if the machine be placed between the cranks of a cross-compound engine, the field ring is split vertically, the two halves being set on a guide plate. This vertical division of the field affords facility for inspection or removal of armature or field coils without the necessity of removing the outboard bearing or dismantling the engine. The opening of the field in a horizontal direction is of convenience where head room is limited and cranes or other devices for handling heavy castings are not available.

The armature core consists of punchings of carefully annealed steel held together between end-plates. This core is built upon an iron spider, which also carries the commutator. The spider is pressed and keyed upon the extended engine-shaft, and may be drawn off at will should that ever be necessary, without in any way interfering with the permanent arrangement of the commutator and winding. Ventilating spaces through the spider and armature core are so arranged as to give a constant circulation of air through the commutator and winding.

The generator field is over-compounded to compensate for drop of potential in the line. By means of a shunt on the series coils, the compounding may be adjusted for different degrees of over-compounding. The shunt and series coils are separately wound and removable at will. The series coils are composed of forged copper conductors of rectangular section.

The periphery of the armature is slotted. The armature winding of all machines of 50 kw. and over is made from bars of drawn copper, forged into proper shape on cast-iron formers.

It is important to buy THE RIGHT ACID for ACCUMULATORS and all Electrical purposes.

Medal Awarded St. Louis, 1904.

Specially Prepared and Tested.

THE PUREST AND THE BEST ACCUMULATOR ACID is—



B A A.



Approved by all Electricians.

GUARANTEED MADE FROM BEST BRIMSTONE AND DISTILLED WATER.

Is used the world over.

EXPORT A SPECIALITY.

Sole Manufacturers—

F. W. BERK & CO. LTD.

1 FENCHURCH AVENUE, LONDON, E.C. 3, ENGLAND.

Telegraphic Address: 'Berk, London.'

Works: Abbey Mills, Chemical Works, Stratford.

F. 1882

BOOKS FOR ELECTRICAL ENGINEERS.

***FUEL ECONOMY.** By W. H. BOOTH. A practical work of direct value to all Central Station Engineers and electricians in charge of steam-raising plant who are interested in the use of coal combined with economy and efficiency. Second Edition, revised and enlarged. Cr. 8vo, illustrated. **2s. 9d.** net, post free.

HANDY ELECTRICAL DICTIONARY. By W. L. WEBER. Thoroughly up to date. Contains definitions of over 4,800 distinct words, terms, and phrases. Cloth, **1s. 8d.** net; leatherette, **2s. 8d.** net, post free.

PRACTICAL ILLUMINATION. By JUSTUS ECK, M.A., M.I.E.E. A most useful pocket-book, full of information for lighting contractors, architects, consultants, etc. Highly recommended by experts. **1s. 2d.** net, post free.

ARMATURE WINDING. By C. SYLVESTER, A.M.I.E.E. An up-to-date and splendidly illustrated manual on this most important subject. It has been carefully prepared so as to give clear and full instruction to all interested in the various types of windings, and can be strongly recommended. Cl. 8vo. **8s.** net, post free.

***THE PRACTICAL ELECTRICIAN'S POCKET-BOOK.** An invaluable work of reference. Thousands sold annually. Recommended by all the electrical journals. **3s. 4d.** net, post free.

ELECTRIC BELLS, ALARMS, AND SIGNALLING SYSTEMS. By H. G. WHITE. A book of direct interest to all bell fitters, and to colliery signal engineers. Profusely illustrated. New and enlarged edition. **3s. 9d.** net, post free.

THE APPLICATION OF ARC LAMPS TO PRACTICAL PURPOSES. By JUSTUS ECK, M.I.E.E. A splendid manual for Contractors, Foremen, Trimmers, etc. Gives clear working diagrams and details of the leading types. Cloth 8vo, 101 pp., 92 illustrations. **2s. 9d.** net, post free.

***TELEPHONE ERECTION AND MAINTENANCE.** A Handbook for the Contractor and Wireman. By H. G. WHITE. Officially recommended by the C. & G. Examiners. Illustrated. **3s. 10d.** net, post free.

***DYNAMO AND MOTOR ATTENDANTS AND THEIR MACHINES.** By FRANK BROADBENT, M.I.E.E. A thoroughly practical and reliable work, of which over 35,000 copies have already been sold. **4s. 10d.** net, post free.

***THE PRACTICAL TESTING OF DYNAMOS AND MOTORS.** By CHAS. F. SMITH, M.I.E.E. A book of direct interest to all electricians concerned in the construction, installation, and management of continuous current machinery. Fifth Edition. Cl. 8vo, 292 pp., illustrated. **6s. 10d.** post free.

ROTARY CONVERTERS: Their Design, Construction, and Use. By C. SYLVESTER, A.M.I.E.E. A clear and eminently practical description of these machines, with numerous diagrams. Of direct value to all sub-station engineers, students, etc. Cr. 8vo. **2s. 3d.** net, post free.

QUESTIONS AND ANSWERS ABOUT ELECTRICAL APPARATUS. By J. W. CRAIG. A very handy work, containing more than 200 live practical questions and answers for central station operators and men in the repair and trouble departments. Limp cl. 8vo, illustrated. **7s. 6d.** net, post free.

***ELECTRICAL ENGINEERING PRACTICE.** By J. W. MEARES (Electrical Adviser to Govt. of India), and R. E. NEALE, B.Sc. Hons., A.C.G.I. A concise non-mathematical treatise, dealing thoroughly with fundamental principles and modern practice. An expert treatise of unique scope. Positively the only book of its kind. 642 pages, 86 figures and over 100 special tables. **26s.** net, post free.

*Books marked * are recommended by the City & Guilds Institute.*

S. RENTELL & CO., LTD.,

36 MAIDEN LANE, STRAND, LONDON, W.C. 2.

WRITE FOR CATALOGUE No. 39.

After being thus shaped, the bars are thoroughly insulated and baked to remove all moisture. The coils are held in slots by means of retaining wedges of hard fibre driven into notches near the top of the slots, parallel to the shaft. These fibre wedges may be pressed out should it become necessary to remove any armature coil.

The brush-holder mechanism is carried by brackets projecting from a ring concentric with, and supported by, the field. A hand-wheel rocker arrangement accomplishes the adjustment of all the brushes simultaneously. The ring carrying the brush-holder brackets does not project over the commutator face ; the commutator face and brushes are therefore clear of obstructions, and may easily be inspected at any point. Carbon brushes are used in connection with all these machines.

A feature of particular importance in the Westinghouse engine-type generators is that all brushes of the same polarity are maintained at the same potential. Trouble has frequently been experienced in working with large multipolar direct-current machines owing to the difficulty of securing the same magnetic strength in all the poles ; the E.M.F. generated in conductors under one pole differed from that generated in conductors similarly situated under another pole of the same polarity, the result being a slight difference of potential between brushes of similar polarity. This caused currents to flow from one brush to another, and from one section of the armature winding to another, an occurrence attended by wasteful heating and the sparking of brushes. The difficulty is obviated in these generators by a particular method of electrical balancing. By the use of this method, the armature could be considerably out of centre and no injurious results occur, as the balancing currents flow, not through the brushes, but through specially provided connections. The pull exerted by one side of the field on a large armature out of centre by even the small fraction of an inch may become as high as several tons ; this method of balancing prevents such an increased pull.

Care of Direct-current Generators.

Steadiness.—It is important that the machine be firmly fixed to a good foundation. A machine may be run successfully on an upper floor, if supported on solid joists either of timber or iron. The machine will spark and the brushes and commutators wear unduly if there is vibration.

Commutator and Brushes.—These will always repay careful attention. If the brushes are left to wear unequally, and the commutator is not cleaned, the machine will soon commence to spark badly, and both brushes and commutator will wear rapidly. If, however, these parts are attended to in accordance with the following instructions, the wear and tear will be very small.

Adjustment of Brushes.—The brushes must be set truly on a diameter so that the point of one is diametrically opposite the point of the other. Gauze and metal brushes as they wear must be advanced to maintain the same distance, and consequently to bear the same angle on the surface of the commutator. They must be advanced frequently, even though the wear may be very small, otherwise the brush will not bed properly on the surfaces of the commutator when advanced. Each brush must always bed equally well at the point, or toe, and at the heel. If brushes are allowed to wear too much before advancing (but this should not be), they must be taken out and filed to fit truly. In filing a brush, clamp it firmly, and file by taking long strokes with a file always in one direction. If it is the toe that requires filing, after filing to fit take off the sharp edge, leaving the toe always $\frac{1}{16}$ inch thick. One brush often wears faster than its fellow (or fellows), and must be set up accordingly. Moreover, sometimes a whole set of brushes on one side of the commutator will wear faster than those on the other side, and this must be allowed for, or the brushes will cease to be on a diameter, and sparking and flatting of the commutator may result.

Carbon Brushes are usually set radially to the commutator and therefore require no diagonal adjustment. They require periodical inspection, adjustment and cleaning, as the toes or heels usually burn away and a new surface giving the full contact area of the brush must be again obtained. The best results with carbon brushes of ample contact area and good designs fitted with flexible tails are obtained by keeping the brushes absolutely clean and free from dust and the commutator true and polished with polishing paste.

Flats.—The most common source of the formation of little 'flats' upon the surface of the commutator is the brushes being out of adjustment.' Another cause is vibration of the brushes, due primarily to vibration of the machine, owing to improper foundations or a badly-jointed belt. Flats are sometimes caused by the pressure of the brushes being reduced to too low a limit.

Pressure.—It is well to have the pressure as light as possible, so long as no sparking and no vibration takes place at the brushes.

Oiling and Cleaning the Commutator.—In the case of metal brushes use a little good mineral oil or vaseline, applied with a piece of rag. Do not on any account apply oil with a feeder, or on a piece of waste. A commutator well looked after will acquire in time a dark-coloured, smooth polish. When this takes place run a piece of No. 0 0 emery cloth on the commutator occasionally before starting to work. In flour-mills and dusty places it is necessary to clean the commutator with a little benzoline every day before starting, or, if run continuously, during the run, taking care not to drench the commutator; also to apply emery cloth about once a week as just directed.

Belting.—Where practicable, the drive should be arranged so that the under side of the belt is the tight or driving side. A flexible belt should always be used. Leather-linked belting, arched on the face next the pulleys and flat on the outside, is very suitable. Such a belt should *not* be taken off after working. Single belting with double edges makes a good cheap belt for ordinary use, and may be jointed with a butt joint, secured by belt fasteners. If an ordinary single belt is used, it should be straight and of good quality. It should be jointed with a laced butt joint, until it has stretched, and then a proper spliced and cemented joint made. A dynamo belt must run evenly. A belt which lashes either up and down, or from side to side, should not be tolerated.

Oiling the Bearings.—Adjust the sight-feed lubricator to give about 3 to 10 drops per minute. The amount required varies with the quality of the oil used and the load on the machine. If the machine has been standing, give it a few extra drops before starting. Good castor-oil is the best lubricant. It is well to use an oil feeder made entirely of copper. Keep the machine clean—free from copper dust and waste oil.

Should the commutator wear out of truth or becomes very uneven (scored), take out the armature and turn up the commutator in a lathe, being careful to use a fine-pointed tool and not to take heavy cuts; afterwards polish with emery cloth. If the commutator should be only scored, it may be dressed in the machine with coarse, and afterwards fine, emery cloth, finishing with No. 0. Slight 'ringing' does not matter.

Mather & Platt Direct-Current Generators.

One of the latest phases of electrical engineering is the driving of large D.C. slow-speed generators, through gearing, by steam turbines, and a considerable number of these plants have been installed up and down the United Kingdom by Messrs. Mather & Platt, Ltd., of Park Works, Manchester.

A typical generator is shown in fig. 13. This machine is installed at the works of the Electro Bleach and By-Products, Ltd., Middlewich, Cheshire, and is driven by a steam turbine, of the 'Howden-Zoelly' Multi-Stage Impulse type, running at 3,000 r.p.m., manufactured by Messrs. James Howden & Co., Ltd., Glasgow. The generator is driven through double helical gearing and runs at a speed of 250 r.p.m. The substantial character and satisfactory operation of the plant—which runs day and night—cannot be better exemplified than by the fact that a further set of 1,000 kw., consisting of two 500 kw. machines in tandem, and a 1,250 kw. set have recently been installed, and set to work.

The details of construction of this machine is as follows:—

Carcase.—The frame is a plain ring of high permeability cast steel; the main poles consist of steel stampings accurately punched and assembled, and are bolted to the frame. Magnetic symmetry is thus ensured.

Bearings.—The bearings are of the self-lubricating, parallel bush, pedestal type; the bushes are of cast iron with white-metal lining, and all bushes and pedestals are split horizontally. Each bearing is lubricated automatically by means of two oil rings running in an oil well of large capacity.

Commutator.—The commutator is designed with a very high factor of safety. The segments, of hard-drawn copper, are insulated by megohmit, mounted on a strong cast-iron hub, and clamped between steel end rings. Before connection to the armature every commutator is subjected to an insulation flash test of 3,000 volts.

Armature Core.—The armature is built of thin steel slotted laminations of the highest electrical and magnetic quality, insulated from each other and clamped together under pressure on a strong cast-iron hub, an extension of which carries the commutator hub.

Armature Winding.—All wires and strips are thoroughly impregnated before winding, and the main insulation consists of mica sheet mechanically protected by leatheroid. The completed armature is finally dried and impregnated with varnish.

Field Winding.—All shunt coils are solidly built, dried, and impregnated *in vacuo*. Each coil is provided with stout terminals which relieve the last turns of wire from all stress, and the connections are made with bolted heavy copper strip.

Brush Gear.—The brush gear is of simple and rigid construction, split horizontally, and is supported by a separate frame. The brush-holders, which are of the direct-acting box type, are bolted to a carrier arm which keeps them in strict alignment, and are easily adjustable. The insulation is micanite throughout. When the brush rocker has been once set in the working position, it remains fixed for all loads up to the maximum permissible overload.

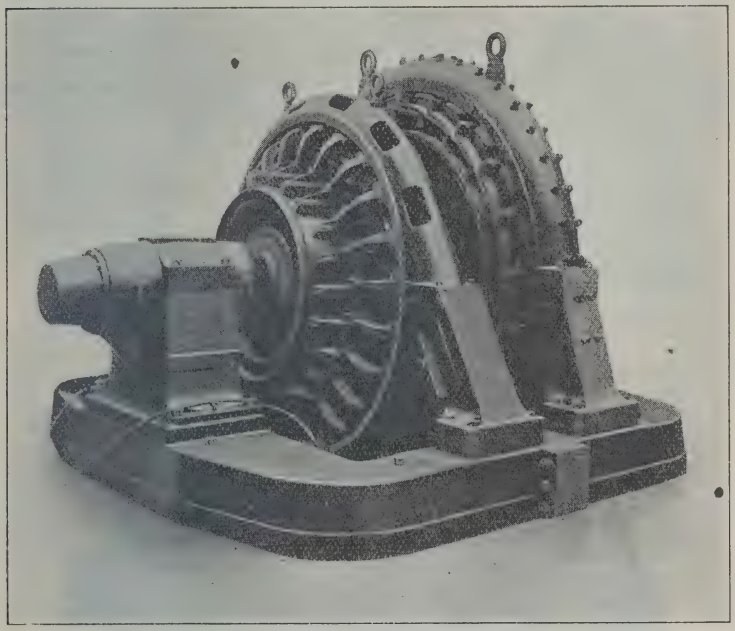


FIG. 13.—Mather & Platt D.C. Generator.

While many D.C. machines nowadays are driven by steam turbines through gearing, a similar arrangement is adopted with alternators in spite of the fact that it is not very difficult, either from an electrical or a mechanical point of view, to construct medium-size high-speed turbo alternator sets. The geared alternator is adopted from motives of economy, as the steam turbine can then be designed for speeds of over 3,000 r.p.m.

Fig. 14 shows a 1,250 k.v.a. generator, 2,200 volts, suitable for a speed of 500 r.p.m., and arranged for gear driving from a steam turbine of over, say, 4,000 r.p.m. Such a machine is constructed on the following lines:—

The stator consists of a cylindrical core, built up of thin steel laminations of the highest electrical and magnetic quality, insulated from each other, and firmly clamped together in a rigid cast-iron frame.

The windings are fully insulated before insertion in the slots, the latter being usually of the open type. High-tension coils are insulated with moulded mica, and low-tension coils with our standard mica sheet mechanically protected by leatheroid. In all cases the insulation forms a complete sealed tube completely enclosing the straight part of each coil, and extending

for a considerable distance beyond the stator core at each end. The coils are held in position by hard wood wedges.

In normal machines, the poles are completely laminated, the core and tip being stamped in one piece. The built-up poles are usually bolted to the rim of a cast-steel hub. In special cases, however, the above construction may be modified.

For small machines with few poles, the field coils consist of cotton-covered wire or strip. Each coil is provided with terminals which relieve the last turns of wire from all stress. The coils are thoroughly dried and impregnated in vacuo with an oil- and moisture-resisting varnish. For larger machines copper strip bend on edge is used in all cases where it is practicable.

The shaft is of mild steel of ample size and stiffness. Each bearing is of the pedestal type, with a cast-iron bush of large diameter and length, lined with white metal, and lubricated automatically by two oil rings running in an oil well of large capacity. The oil channels and escape grooves are carefully designed to eliminate oil-flinging and creeping, and the overflow is so arranged that frothing or churning of oil in the oil well does not cause any drip. The pedestal and bearing bush are split horizontally.

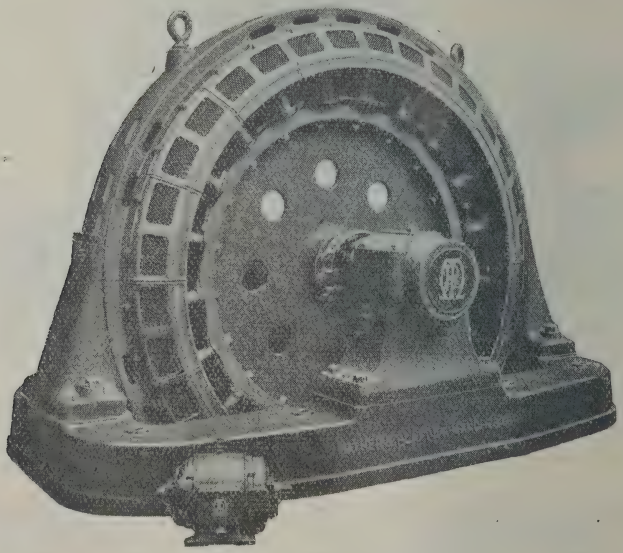


FIG. 14.—Mather & Platt 1250 k.v.a. Generator.

The slip rings are of bronze, insulated entirely by mica. The brush-holders are of our direct-acting box type, and the whole brush gear is simple and strong.

G.E.C. 'WITTON' DIRECT-CURRENT GENERATORS.

Fig. 15 shows three 1,000 kw. direct-current generators, driven through gearing by 'Parsons' turbines, as supplied to a large Explosives Factory. These sets deliver direct

current at a pressure of 220 volts, and run at a speed of 400 r.p.m. with the turbines operating at 3,000 r.p.m. The gearing is employed to enable the speed of the generator to be

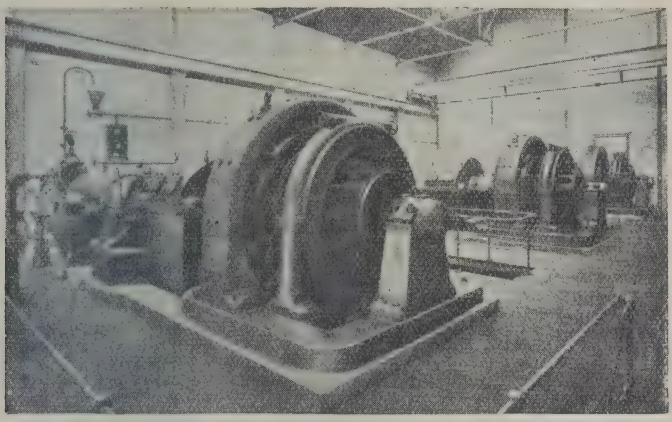


FIG. 15.—Three 1,000 kw. G.E.C. 'Witton' Direct-current Generators, Turbine driven through gearing.

reduced to such a point that the best commutation is obtained, and to enable the turbine speed to be raised to the point of highest efficiency.

ALTERNATING-CURRENT GENERATORS.

The following is a specification of a Class D alternator, made by *The English Electric Company, Ltd.*

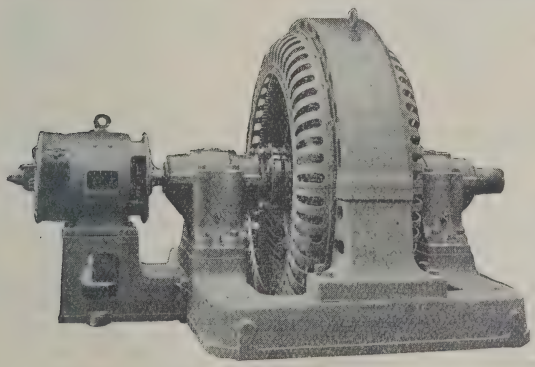


FIG. 15A.—English Electric Co.'s Class D Alternator.

These generators are supplied in various standard types as follows: the Protected Type, the Engine Base Type, the Sole Plate Type, the Bedplate and Two-Pedestal Bearing Type, the Bedplate and Three-Pedestal Bearing Type, and the Engine Shaft Type.

The 'Protected Type' (sizes up to D.16 inclusive) consists of a stator frame with feet, core, coils and terminals, two end-shields carrying the bearings, rotor with poles and field coils, slip-rings, shaft and half coupling and complete collector gear.

The 'Engine Base Type' consists of a stator frame with feet, core, coils, and terminals, one pedestal bearing, rotor with poles and field coils, shaft, slip-rings and coupling, complete collector gear, screws for fixing stator frame and pedestal to the engine base, and screws for adjusting the height of the frame.

The 'Sole Plate Type' is practically the same as the Engine Base Type with the addition of three sole plates suitable for building directly into the foundations.

The 'Bedplate and Two Pedestal Bearing Type' is similar to the Engine Base Type, but has a second pedestal bearing and a bedplate on which the stator frame and the two pedestal bearings are mounted. The shaft is suitable for coupling drive, or in certain cases for drive with belt or rope pulley.

The 'Bedplate and Three-Pedestal Bearing Type' is the same as the above, but has a third bearing with a correspondingly extended bedplate. The shaft is suitable for fitting with spur wheel, belt or rope pulley.

The 'Engine Shaft Type' differs from the Sole Plate Type by the omisssion of the shaft, coupling and the pedestal together with its sole plate, the rotor being suitably bored for forcing directly on the engine shaft.

Stator.—The Stator Frame is of cast iron, of great stiffness and substantial design, and is cast in one piece, not split. The ventilation of the stator winding and core is extremely good, the air being driven outwards by fan blades on the rotor and directed on to the winding and core by the end shrouds or end shields.

The stator core abuts directly on a surface turned in the frame. Up to size D.16 inclusive, it is held in place by clamping rings keyed to the frame, and for sizes above D.16 either by a similar arrangement or by through bolts. The core is built up of high quality sheet steel plates, insulated from one another by a heat-resisting material. The stator slots are of the overhung type and are accurately punched.

The stator coils are held in place in the slots by insulating keys. They are amply insulated, in the case of low-voltage machines by a combination of mica and fibrous insulation, and in the case of high-voltage machines by a carefully formed tube or covering of mica. The individual conductors are insulated with impregnated cotton. The out-hanging portions of the coil are protected from mechanical injury by the end shields or by the shrouds secured to the frame. The coils are thoroughly impregnated before putting into place.

Rotor.—The rotor consists of a cast steel wheel on which are mounted special cast steel poles rigidly bolted to the wheel, the securing bolts being locked to prevent their working loose.

In the smaller sizes the poles are cast as an integral part of the rotor wheel, and the pole shoes are rigidly secured thereto by screws.

Field Coils.—The field coils are usually wound on metal formers, from which they are carefully insulated.

In the larger sizes and wherever possible the field coils consist of copper strip wound on edge and carefully insulated from the pole limb. Adjacent turns are insulated from one another by stout paper. Metal flanges are provided at the ends of the coil and are secured under heavy pressure. This form of winding is specially recommended owing to the excellent cooling it provides for the windings and its great mechanical strength and suitability to high peripheral speeds. It is advisable, whenever possible, to select a low voltage for excitation, so that a strip-on-edge winding can be used.

Slip-rings.—These are of gun-metal and are shrunk on to a sleeve, from which they are insulated with mica. The complete sleeve with rings is pressed on to the shaft.

Terminals.—In the Protected Type machines the terminals are carried in a terminal box mounted on the machine frame. In the larger Pedestal Bearing Type machines the terminals are arranged on the machine frame either at the side or at the lowest point of the frame.

Bearings.—On Protected Type machines with two end-shield bearings (viz. sizes up to D.16 inclusive), either sleeve bearings or 'Hoffman' heavy type ball or roller bearings are fitted, as required; this also applies to the pedestal bearing when a third bearing for these sizes is called for. For sizes above D.16 sleeve bearings are employed throughout, with bearing bushes of cast iron lined with white metal, the bearing bushes being spherically seated.

Fig. 16 (page 1889) shows a type of alternator made by Messrs. Crompton & Co. Ltd. These alternators are supplied for mounting direct on the engine crankshaft, for coupling direct, or for belt or rope driving. They are of the stationary armature type, with open parallel slots or semi-enclosed slots depending on the general design of the machine and the duty required. The coils are held in position by hard wood or fibre wedges. The magnets are of the rotating radial pole type, with the poles and shoes laminated or cast solid, according to the design. The field coils wound on insulated formers are held in position by the pole shoes.

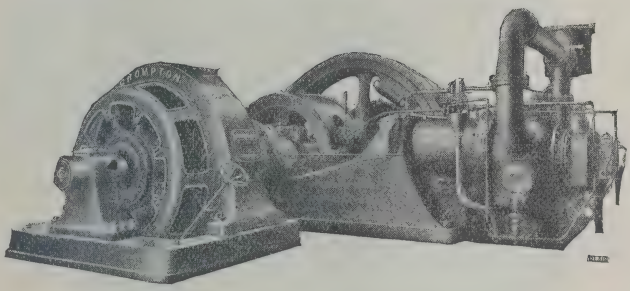
When driven by slow-speed gas or oil engines, amortisseur or damping coils are often fitted.

The ventilation is a special feature of these machines. The armature coils are protected with metal covers, which assist in directing the air currents from the revolving field of the machine radially through the armature end windings to the back of the armature stampings, and thence through the ventilating holes in the cast-iron frame of the machine.

Specify

CROMPTON

Electrical Equipments



Oil Engine Driven D.C. Generator.

ALTERNATORS.
DYNAMOS.
MOTORS.
BOOSTERS.
CONVERTERS.
MOTOR GENERATORS.
SWITCHGEAR.
INSTRUMENTS.
POTENTIOMETERS.
ARC LAMPS.
SEARCHLIGHTS.
CEILING FANS.

Self-Starting Synchronous Polyphase Motors

for unity or leading power factor, and capable of starting against overloads.

CROMPTON & CO. LTD.

ARC WORKS, CHELMSFORD.

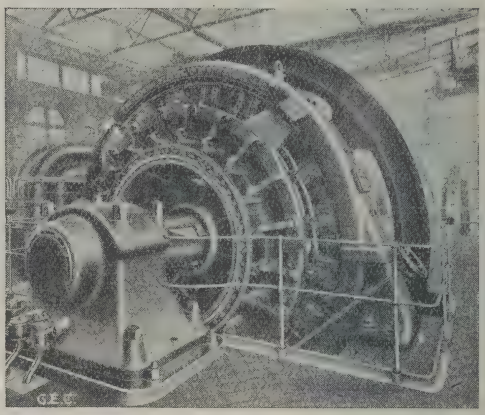
Works: Telegrams: 'CROMPTON, CHELMSFORD.' Telephone: 161 CHELMSFORD.

Regd Office and Export Dept.: SALISBURY HOUSE.

Telegrams: 'Crompton, Phone, London.' Phone: 488 Central; 86 London Trunk.

G.E.C.

Large Electrical Plant



One of two 1150 k.w. D.C. Generators, 230 volts, driven at a speed of 107 r.p.m, by a Blast Furnace Gas Engine, installed in a large Lincolnshire Steelworks. This station also contains a 750 k.w. D.C. Generator, and a 750 k.w. Motor Generator Set. All these units being manufactured at the Company's Works at Witton, Birmingham.

The General Electric Co. Ltd., design and manufacture Complete Electrical Equipments for all modern industrial requirements. The Company's exceptional manufacturing facilities enable them to produce every detail of Power House Equipment within their own organisation.

REGD TRADE MARK.

The GENERAL ELECTRIC CO. Ltd.

Head Office : Magnet House, Kingsway, London, W.C.2

Engineering Works: { Witton, Birmingham. Fraser & Chalmers Engineering Works, Erith, Kent.

REGD TRADE MARK.

In the larger size machines the stationary armature is divided on the horizontal centre to facilitate transport and erection.

The exciter is of the usual standard construction for continuous current machines, and is usually arranged direct coupled to an extension of the alternator shaft, fitted with an outer bearing and mounted on an extension of the alternator bed plate.

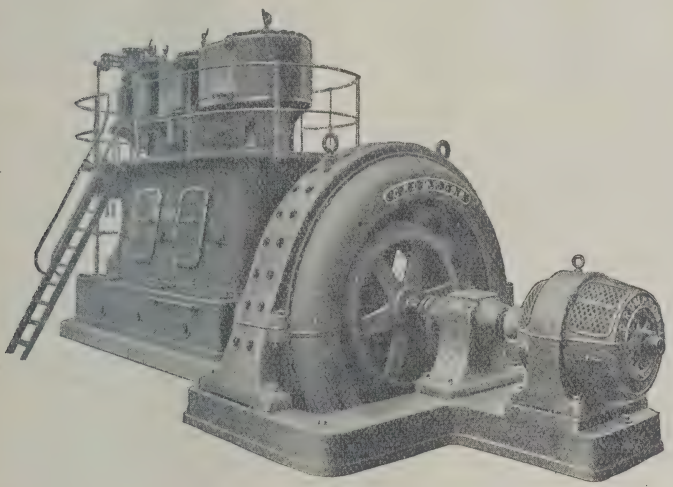


FIG. 16.—'Crompton' Alternator.

ALTERNATING-CURRENT TURBO-GENERATORS.

THE G.E.C. ALTERNATING-CURRENT TURBO-GENERATOR.

The following is the specification of a G.E.C. turbo-alternator of the standard type:—

The generator is of the enclosed type, fitted with drum-type rotor and forced ventilation. Shaft and exciter is included, but no pedestal bearings or coupling.

Stator Frame.—This is a massive cast-iron construction of box section, accurately bored to accommodate and clamp tightly the laminations. Stout end-plates are used for this purpose, and are secured in such a way that no bolts pass through the stampings, thereby avoiding a considerable amount of iron loss. All longitudinal ribs are dovetailed for keys to which the stampings are secured. The casting is fitted with two feet, which are connected with strong ribs to the main body to avoid flexure or vibration.

Laminations.—These are accurate stampings of best charcoal iron, punched out of large plates with the best tools to avoid burrs. They are re-annealed after punching, and insulated as a last operation. No filing or scraping takes place after the laminations are assembled, as it was found that this, owing to the length of the core, causes much higher iron losses due to eddies than in ordinary machines. For the same reason, the insulation between plates is increased by sheets of stronger paper placed at suitable intervals.

Stator Winding.—The winding, owing to special conditions of work, requires great care both from the designing and the manufacturing point of view. Whenever possible, strip copper is used in the slot and in the connections. The insulating tubes for the conductors are of micanite, and if possible they are moulded on to the coil itself. The complete coil with the insulation is then pushed through the slot from one end, one end of the coil being left straight for this purpose. Each conductor is then bent and connected up singly, thus making it absolutely certain that the insulation of the slot and also that between adjacent conductors is in perfect condition.

The arrangement of the conductors in the slot is also such that no high voltage can take place between adjacent conductors, so that the danger of breakdowns is entirely avoided.

Stator Ventilation.—A fan arranged at the coupling end of the rotor drives air from a duct, usually connected with the foundations, into the space enclosed by the guards. From here after cooling this side of the stator coils, the air is pressed through a large number of axial channels provided in the core. It escapes at the other end, and after cooling the coil connections, finds its way out of the machine through a funnel-shaped orifice. It should be particularly noticed that no air which is used for cooling the rotor is used to cool any part of the stator, and that the two streams of air are kept quite separate, thereby obtaining very low even temperature rises all over the machine. The use of filters for the air used for cooling is always recommended, but a decision as to their necessity can only be made upon knowledge of local conditions in each particular case.

Clamping of Stator Windings.—Heavy metal clamps are arranged all round the winding to prevent any movement of the connectors or of the projecting ends of the coils under the strain imposed upon them when the machine is switched in or out of circuit, or whenever a sudden short-circuit occurs in the distributing system. Wood used for clamping is considered conducting, and micanite plates are always inserted to insulate the coils from the wood.

Terminals.—The terminals are usually arranged at the bottom of the shell at the slip-ring end, the cable being brought up to them from the cellar underneath. They are thus in a naturally protected position without necessitating unsightly boxes in the engine-room.

Rotor Construction.—The rotor is of the drum type, the rotor winding being distributed in slots all round the periphery. Whenever possible the rotor body and shaft are one solid forging. This design has been adopted, as a solid forging is the strongest possible mechanical construction and gives the highest possible critical speeds well above the running speeds. The slots are obtained by milling them out of the solid drum. All insulating material used is practically incombustible.

Rotor Winding.—The winding consists of coils embedded in the slots all round the periphery of the rotor. They are wound beforehand on a frame. Strong and ample insulation is provided between the winding and the rotor, as well as between the conductors themselves, particular care being taken of the crushing action due to the centrifugal force.

Ventilation of Rotor.—A fan arranged at the slip-ring end draws air from the ducts at the opposite side through longitudinal channels arranged in the rotor. These are kept as close as possible to the winding where the heat is generated. Both fans are of steel plates of high tensile strength. Their shape is designed with particular regard to the efficient working of the fan, and results have proved that windage losses are much smaller than in any other make, due to the care paid to this important detail.

Clamping of Rotor.—Metal wedges are used to keep the winding in the slots. These are driven in tightly whilst the insulation is bent down by means of hot tools, which avoid any damage due to breakage. At the two ends the connections are kept down by strong steel shrouds of ample strength to withstand with safety the centrifugal stresses at maximum speed. These are put on moderately warm to enable ample amount of insulating material being left between winding and the shrouds. The shrouds are located at one end on a spigot provided in the core, at the other end on strong steel end-plates carried from the shaft. Balancing grooves are provided at both ends of the rotor. The whole rotor obtains in this way an extremely mechanical and solid appearance, the winding being entirely boxed in and protected from injury.

Slip Rings.—The current is brought to the winding by means of two steel slip-rings shrunk on to an iron sleeve with a layer of micanite in between. Any danger of distortion or of getting out of truth under speed is thereby avoided. Particular attention is paid to the leads connecting the rings to the winding. These are protected by being sunk into a groove in the shaft and a key-shaped cover fixed over them.

Bearings.—The bearings are of ample dimensions to run without overheating. They are finished off only after the whole of the rotor is completed to ensure a true surface. Ample oil flirts are left at both sides.

Exciter.—This is fixed on a bracket carried from the bearing at the slip-ring end. It is a standard continuous-current generator, fitted with special devices for keeping it cool at high speeds and for balancing it independently of the turbine. It is usually shunt-wound and fitted with auxiliary poles.

Tests.—Numerous tests are carried out during the process of construction to see that the materials are satisfactory at all stages. Amongst the tests which are carried out at the completion of the work are:—

(*a*) Breakdown test for tubes after inserting them in the core.

(*b*) Test between adjacent conductors in a slot, not less than ten times the working voltage between conductors.

(*c*) Between finished coils and between any coil and earth, twice working voltage, but in any case not less than 2,000 volts.

(*d*) Rotor winding tested to earth, with 2,000 volts before running and with 1,000 volts after balancing test. The same test is applied when all connections are made to the slip-rings.

(*e*) Static balancing on flat rails.

(*f*) Dynamic balancing at half-speed.

(*g*) Balancing test at full speed.

(*h*) Synchronous run at full speed to measure iron, windage and excitation losses. During this test the open-circuit curve and the short-circuit curve are obtained.

(*The General Electric Co. Ltd.*)

Air Coolers and Filters.

'Heenan' Air Filter.

The overload capacity of turbo-alternators and generators is dependent to a considerable extent upon the supply of suitable volumes of cool air for carrying away the heat generated by electrical loss. The usual method is to mount fans on the rotor shaft, arranged to extract air through a supply system in which a combined air filter and cooler is inserted.

The 'Heenan' Air Filter (*Heenan & Froude, Ltd.*) receives ordinary unfiltered air from the neighbourhood of the generating station and brings it into very thorough and intimate contact with wet scrubbing surfaces. The arrangement of these surfaces has undergone a complete transformation since the machine was last described in the ENGINEER'S YEAR-BOOK. The rotary principle has been given up in favour of stationary air screens, the surfaces of which are kept thoroughly wetted by water issuing from jets. After cleansing the scrubbing surfaces the water gravitates to a tank, from which it passes through strainers to a centrifugal circulating pump and thence to the distributing jets. The atomisation of water forming part of certain air-filtering systems is entirely avoided. The air leaves the filter in an entirely natural condition, containing no trace of loose moisture.

The filtering efficiency of this apparatus is extremely high, both heavy and fine dust being eliminated. The cooling effect in hot summer weather in temperate climates is often as high as 20° or 30° F. In tropical climates the latter figure is sometimes exceeded. The consequent reduction in air temperature is of great value in permitting the generating plant to run on heavy overloads without overheating.

ROTARY CONVERTERS.

The G.E.C. Rotary Converter

The following is a specification of a Rotary Converter of standard type :—

Frame.—The frame is constructed of cast iron or steel of high magnetic permeability. It is split horizontally and bolted together by strong steel bolts. The construction permits the top half to be readily removed for inspection or repair.

Main Pole-Pieces.—The main pole-pieces, which are bolted to the frame from the outside are built up of laminations in order to reduce eddy-current losses in the pole faces to a minimum. The design is such as to permit the removal of a field coil without disturbing the armature or yoke. In exceptional cases cast steel poles with laminated shoes may be employed.

Armature.—The armature is built up of best quality stampings of high permeability and low iron loss. They are mounted on a cast-iron spider and held tightly in position by heavy end-plates. The laminations are accurately punched before assembling and are covered with a special insulating compound which is effective in reducing eddy-currents to a minimum. The core is held together between the end-plates by means of bolts which, however, do not pass through the active portion of the core and therefore introduce no local circuit for eddy-currents. Ventilating ducts, adequate in number and ample in dimensions, are provided at frequent intervals. Similar ducts are included at the two ends between the core and end-plates. The general construction of the armature is such as to afford a current of air to the field coils for ventilation and cooling. The armature spider is extended at one end for carrying the commutator so that the latter is driven positively, independently of the shaft. The armature winding is composed of former wound coils, taped, varnished, and baked before assembly. The slots are lined with several layers of non-hygroscopic insulating material. Special care is taken to make the leakage surfaces as large as possible. The aperture at the top of the slot is filled by strong wooden wedges driven in tightly. There are no binding bands on the armature core itself, that part of the winding being retained in position by the wooden wedges. The end windings are so shaped that the surface exposed for cooling is as large as possible. After winding a black insulating compound is sprayed by compressed air on to the armature until it is completely coated. A large number of equalising connections is provided to ensure that out-of-balance currents, if any, shall not pass through the brushes. Prior to assembling in the frame the armature is balanced statically, and, on test, care is taken to assure that this has been done accurately.

Commutator.—The commutator is built up of hard-drawn copper segments, insulated by best mica insulation and held tightly between two V-shaped clamping rings in such a manner that the inevitable expansion of the copper and iron on account of temperature rise, may take place without in any way affecting the commutator surface. During its construction the commutator is subjected to several baking processes, with the result that there can be no possibility of moisture remaining in the mica insulation, and when completed the whole commutator gives a true ring, which indicates that the entire mass has been formed into one rigid body. In addition, the construction is such that 'breathing' is reduced to a minimum and the possibility of moisture permeating the insulation is eliminated. A considerable distance to the iron parts is allowed at the front and back of the commutator in order to secure a high insulation resistance to earth, and to prevent any leakage to the iron. The radial depth of the segments is ample for the size of the commutator, and varies somewhat with the size of the machines. For commutators of over 14 ins. diameter the wearing depth is at least one inch. Before leaving the works, the mica between the segments is grooved to a suitable depth to promote good commutation. To assist in cooling, the commutator lugs which connect the segments to the armature windings are given a considerable width and thus provide a large cooling surface.

Field Coils.—Shunt field coils are wound upon spools composed of a material with high insulating properties, a former larger than the poles being employed in the winding process to ensure that no undue stresses are imposed upon the spool when in position. The wires are insulated with a double cotton covering and after being wound are put into a heated impregnating chamber where they are dried for several hours under vacuum, the vacuum pump drawing off all moisture. After removal from this chamber they are flooded in a duplicate chamber (while still under vacuum) with a heavy insulating compound. They are then subjected to heavy pressure at the same temperature, the insulating compound being forced right through the layers of the coils. Series coils are wound with bare copper strip and painted with an insulating compound. Ample leakage surfaces to the frame are provided. The connections between the coils on adjacent poles, both for shunt and series windings, are of great mechanical strength.

Commutating Poles.—G.E.C. rotary converters are fitted with commutating poles of a design which permits sparkless collection of current at all loads with fixed brush position. The coils are wound with bare copper strip and painted with an insulating compound. The mica spools are wound direct on the poles and ample leakage surfaces are provided.

Damping Winding.—A substantial damping winding is fitted to the field poles. This is instrumental in strongly opposing any tendency to hunt, whether that tendency may arise from changes in load or from any low-frequency oscillations originating in the generating plant. It consists of a pair of heavy copper rings bolted together by copper bolts between the poles and connected up by drawn copper rods passing through the pole faces and fixed at each end of the rings. In order that any pole winding may be removed, the rings are divided up between the poles and jointed in a manner which permits the joint to be readily unmade for the removal of the pole or winding, and at the same time in no way impairs the mechanical strength or the electrical conductivity of the rings. A damping winding of high conductivity and great rigidity is thus obtained which completely damps out all oscillations.

The damping winding is also necessary for improving the starting characteristics of the converter when started from the alternating current side, from transformer tappings.

Booster.—The booster—if provided—takes the form of an alternating current generator, with a stationary field. The booster armature is mounted on the main shaft side by side with the armature of the rotary converter, and is constructed on the same principle as the armature of the rotary. The current passes from the converter slip rings through the booster armature to the armature of the rotary. The booster field-frame is split horizontally into two parts, and mounted on the bedplate by the side of the main frame. The booster field may be excited either by shunt or series windings, or both.

Six-phase and Four-phase Connections.—Rotary converters intended to work on a three-phase supply are usually wound as six-phase machines, drawing a six-phase supply from three-phase transformers in order to take advantage of the greater output and more even heating of a six-phase armature as compared with a three-phase. Similarly converters for operating on a two-phase supply are wound four-phase.

D.C. Brush Gear.—The direct-current brush-holders are fixed to a strong cast-iron arm projecting radially inwards from the brush rocker. The rocker is carried in a spigot in the yoke and can be turned by means of a hand-wheel and screw. The rocker is split across the horizontal diameter, so that the halves can be readily removed for inspection or repair. The rings connecting the brush sets of the same polarity are carried behind the brush rocker on insulating supports; they are well insulated from the rocker and have ample clearances and cooling surfaces. Provision is made for separating the halves of the rings should it be desired to remove one-half of the brush rocker for any reason. Each brush carbon is contained in a separate box-type holder to avoid rubbing, and a helical steel spring exerts radial pressure upon the brushes. This steel spring, which is enclosed in a brass tube and is therefore not exposed to dust, presses down a plunger, the tip of which is insulated and therefore prevents the spring from carrying current. The design of the brush holder is such that each brush mechanism is self-contained; the pressure of the brushes can therefore be adjusted when running, and one brush can be removed without in any

way disturbing the others. The brush gear is of compact design, giving a maximum distance between adjacent brush sets, thereby assisting in the prevention of flashing-over.

A.-C. Brush Gear.—The alternating current brush holders are mounted on semi-circular arms which are carried on, and insulated from, a strong bracket projecting from the pedestals bearing on the slip-ring end of the converter. Each brush is contained in a separate box-type holder of a similar design to those working on the commutator. Each brush can be easily adjusted independently of the rest of the brush-gear. Terminals for the incoming cables are provided and are fixed direct on to the arms.

Slip-rings.—The slip-rings are of phosphor bronze, and so designed as to ensure efficient cooling. Each ring is so cast that the portion between the contact face and the internal diameter takes the form of a fan. The rings are given a large radial wearing depth. A cast-iron sleeve which is securely keyed to the shaft forms the base for the slip-ring structure. This sleeve is insulated throughout its length with compressed mica ground to shape, the slip-rings being shrunk on to this. The connections from the armature to the slip-rings consist of solid copper bars strongly bolted into the slip-rings at one end and supported at the other by a steel ring shrunk on to the sleeve, similarly to the slip-rings. These connecting bars are covered with insulating material and are efficiently protected from breakdown to the other slip-rings through which they have to pass. Ample clearances are provided for cleaning. Wherever possible, each tapping of the armature winding is brought to the rings separately in order to avoid unbalanced current. Thus the slip-rings themselves act as balancing rings.

Shaft.—The shaft is of such strength that it will carry the armature without undue flexure or vibration. It is supported by two main bearings lined with white metal and split in halves.

Bearings.—The bearings are of the self-oiling type, and have rings which dip into oil chambers of large dimensions. The bushes are of cast-iron lined with best quality white metal and are split horizontally. The ratio between the length of the bearing and the diameter of the shaft is as 2·5 to 1. A glass level gauge with draw-off tap is fitted to each bearing. The general design of the bearing is such as to preclude any oil flinging.

Bedplate.—A strong bedplate of box section is provided, having heavy ribs connecting the sides at various points. Its general construction is substantial and ensures complete freedom from vibration. The bedplate is fixed to the foundations by strong bolts and plates supplied with the machine.

Speed-Limiting Device.—All large rotary converters (and small ones if desired) are equipped with a speed limiting device which will shut down the machine if by any chance the normal speed should be exceeded by a predetermined amount. This device works on the centrifugal principle. A weight which tends to move under the action of centrifugal force is mounted on a shaft and revolves with it. Under the action of the centrifugal force it tends to swing outwards against the compressive resistance of a spring. At a predetermined speed the arm, to which the weight is attached, flies out sufficiently to trip a trigger device, which makes contact in a tripping circuit, and thereby opens the direct current circuit breaker or, if desired, cuts out resistance from the converter field circuit. This device is usually fixed at the direct current end of the rotary shaft.

Oscillating Gear.—If desired, an oscillating device can be supplied for moving the armature to and fro longitudinally while it is running, thus preventing grooving of the commutator and slip-rings. As the armature rotates, it is alternately pushed out of the magnetic centre and then released, thus causing a smooth oscillation.

Temperature Rise.—The rotary converter is capable of developing its full rated load continuously with a rise in temperature of 40° C. (72° F.).

Overload Capacity.—The rotary converter will give an overload of 25 per cent. for two hours, and 50 per cent. for 15 minutes. It will also withstand overloads of 100 per cent. momentarily.

Starting Motor.—If the rotary be supplied with a starting motor, the latter is mounted on an extension of the bedplate. The motor is of large capacity and is adequate in size to run the converter up to speed in a short time. The motor is either of the solid rotor or slip-ring type, as circumstances demand. The starting torque is sufficient to permit rapid acceleration in the first moments of starting, even though the supply voltage is below normal, as may be the case after a shut-down at the main power station.

Tests.—All material is subjected to tests at various stages of its manufacture to ensure that no faults exist in the completed machine. Tests for static and dynamic balance are also carried out before the machine leaves the works. Excellence in this respect is assured. Standard final tests on rotaries for 650 volts direct current or under include a 2,000 volt flash test with alternating current for five minutes, and six hours run on full load to ascertain the efficiency and temperature rise

G.E.C. Methods of starting Self-Synchronising and Controlling Rotary Converters.

It is usually required that rotary converters shall be of the self-synchronising type, as the running of sub-stations is thereby facilitated. This practice can therefore be considered standard. If two rotary converters are run in parallel on both the alternating and continuous-current sides, difficulties are experienced in that the load divides itself unequally between the two machines, depending on slight differences in resistance on the commutators and the like. When an alternator has been required, therefore to feed directly two rotaries in parallel it has commonly been arranged with two separate windings, one for each rotary. This method, however, leads to difficulties in the winding of the alternator. The means adopted by the G.E.C. to meet both these requirements are described and illustrated below.


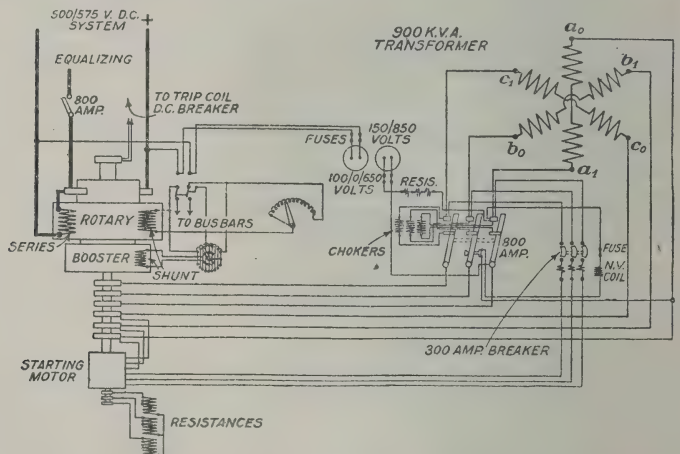


FIG. 17.—Diagram of connections for self-synchronising rotary converter.

The scheme of connections for G.E.C. rotary converters is given in Fig. 17. The essential features are the synchronising switch and the choking coils. The rotary converter is provided with a starting motor, which is started by closing the triple-pole circuit-breaker shown at the right of the figure. This brings the set up to approximately synchronous speed. Meanwhile the switch shown in the figure is closed in its starting position, where the blades make contact on the long synchronising contacts. Under these conditions the slip-rings of the rotary are connected to the source of alternating-current supply through the choking coils, which limit the current taken by the machine. This current, however, is sufficient to pull the set into synchronism. When this has happened, the synchronising switch is pushed right home, so that the blades go into the full-on contacts. Mechanism is provided which prevents the attendant from accidentally closing the synchronising switch straight away in its fully-closed position. On slightly pulling it towards the "off" position a pin releases a slotted bar, which falls under its own weight, allowing the pin to pass along the slot and permitting the synchronising switch to be pushed right home. When this happens, an interlocking contact is operated which opens the no-volt coil of the starting-motor circuit breaker, tripping the latter, so that the converter set is left in synchronism with the starting motor disconnected.

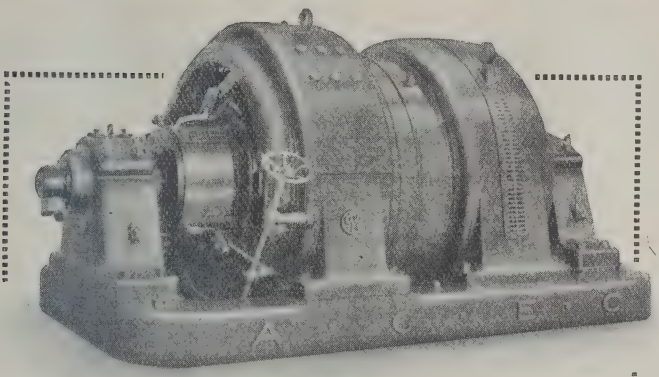The standard starting motor used is provided with a solid rotor. The stator windings are adjusted once for all when the set is first put into use so as to give the best value of slip to the starting motor and so as to necessitate the minimum value of synchronising current. At the bottom of Fig. 17 a fixed resistance will be seen connected to the slip-rings of the starting motor. This is provided in those cases where it is desired to run the starting motor for prolonged



A · C · E · C
LA COUR MOTOR CONVERTERS

are provided with our patent automatic starting and self synchronising gear which enables them to be started and synchronised by anyone without the necessity of a skilled operator being in attendance.

They are supplied with either two or three bearings and in the latter case are made with our patented method of interconnections between the rotor and the armature, thus avoiding the inherent weakness of a hollow shaft.

There is no high tension current on any revolving part and the machines automatically balance the two sides of a three wire system within fine limits.

Full particulars will be supplied on request.

THE
A · C · E · C
(Ateliers de Constructions Electriques de Charleroi).

LONDON OFFICE:
56 Victoria Street, S.W. 1
Telephone: Victoria 3662, *Telegrams:* 'Edempain, Sowest, London,'

FOR CONVERTING from A.C. to D.C.

Three methods are available :—

(1) La Cour Motor Converters.
(2) Rotary Converters with transformers.
(3) Motor Generators.

□ □

THE most suitable type of machine depends upon the conditions which obtain in each individual case.

As manufacturers of all these types we shall be glad to place our experience at your disposal.

We also manufacture everything required for the complete electrical equipment of central stations, substations, railways and tramways, steelworks, collieries and factories, as well as all classes of paper and rubber insulated cables, electric cranes, transporters and centrifugal pumps.

Full Particulars of any or all will be supplied on request.

THE
A · C · E · C
(Ateliers de Constructions Electriques de Charleroi)
LONDON OFFICE:
56 Victoria Street, S.W. 1
Telephone: Victoria 3662. *Telegrams:* 'Edempain, Sowest, London.'

F. 1895

periods for grinding the commutator or slip-rings, etc., as a solid rotor on this duty would tend to over heat.

The method adopted by the G.E.C. for the parallel running of rotary converters involves the use of a balancing transformer. This transformer consists of three cores, upon each leg of which two windings are arranged, each winding being in series with the corresponding phase of either rotary. It will be clear from this that when the currents are equal, the windings being reversed with regard to each other, no magnetism is induced in the core of the balancing transformer. Directly the currents become unequal, however, the magnetic balance is upset, and a voltage is induced in the one winding of such a character as to restore the balance. It is found in practice that quite a small balancing transformer is sufficient to balance large machines, and this scheme has been in successful operation in several places.

MOTOR CONVERTERS.

The Motor Converter represents a compromise between the motor generator and the rotary converter, combining the best features of each type of converting plant. It consists of a self-starting a.c. motor, the rotor of which is coupled both electrically and mechanically to the armature of a d.c. generator, about half the power supplied to the motor being transmitted to the generator by way of the shaft, and half by the electrical connections. The motor fulfils the dual functions of a transformer and a motor, while the generator similarly acts both as a rotary converter and a dynamo. The rotating parts—the rotor of the motor and the armature of the generator—run at half the speed corresponding to the frequency of supply. The motor converter is used to supply direct current when fed with alternating current, and *vice versa*, the ratio of the a.c. and d.c. voltages being determined by the design.

Comparing the three methods of conversion, the motor-generator is more expensive, takes up more floor-space, and is much less efficient than its rivals, whilst it possesses no advantages comparable with these drawbacks, except under special circumstances, such as very wide voltage regulation or very low power factor (when working d.c. to a.c.). The chief advantage of the rotary converter is that, including transformer losses, it is slightly more efficient than the motor converter at full load—about 1½ per cent. for 1,000 kilowatts. On the other hand, the motor converter has a high efficiency at half and quarter load, is not easily thrown out of step with the generating plant by a heavy drop in voltage, and is practically immune from liability to flash over on a short circuit occurring, while it can carry heavy overloads without sparking. The motor converter is very easily started up from the a.c. side and synchronised with the supply frequency, without risk of reversal of the d.c. polarity—a drawback to which the rotary converter is very subject; it can equally well be started from the d.c. side, and it works with unity or leading power factor, which varies very little when the d.c. voltage is varied over a wide range The rotor of the motor converter is usually wound for 12 phases, conferring upon it very high synchronising power and stability of running. The generator can be shunt or compound wound, according to requirements, being capable of a variation of d.c. voltage of 40 per cent.; thus it can be used alternatively for supplying a light and power system at, say, 400 volts, or a traction system at 550 volts, and like a rotary converter, it can be arranged for use in connection with a three-wire system, automatically balancing the load. As the motor and generator together have the same total number of poles as the equivalent rotary converter, each machine has fewer poles than the latter, so that a 50-cycle motor converter operates under as favourable conditions as a 25-cycle rotary converter, with corresponding advantages in respect of the wider spacing of poles (entailing less magnetic leakage) and of brushes (with consequent freedom from flash-over). As the slip rings of the motor-converter are only used for starting up, or for balancing a three-wire system, their maintenance is less onerous than that of the six slip-rings and brushes which carry the whole of the a.c load in a rotary converter.

Owing to the stator of the motor being wound for the full supply pressure (up to 10,000 volts), no transformers are necessary, and thus the floor-space occupied is a minimum; the switch-gear also is simple and compact. When exceptionally wide variations of d.c. voltage are required, the motor converter can be provided with a 'booster,' as in the case of a rotary converter, but as the booster carries only half the load, it is much smaller. The starting current is from 25 to 35 per cent. of the normal full-load current.

Whilst the machine is usually required for converting from three-phase or two-phase current, it is also suitable for use on a single-phase supply, and in this case it offers special advantages its synchronising power being practically as good as on a polyphase supply, and its efficiency being but little lower.

Motor converters run perfectly in parallel at either or both ends, and are not subject to hunting. Whilst their good d.c. regulation is highly appreciated on lighting systems, their ability to cope with heavy overloads and violent load fluctuations renders them particularly well suited for supplying d.c. tramway and railway systems.

The Peebles Motor Converters.

The Peebles Motor Converter, fig. 18 (of which *Bruce Peebles & Co. Ltd., Edinburgh*, are the sole manufacturers for Great Britain, its Colonies, and other countries), is designed to convert polyphase alternating current into continuous current or ***vice versa***. This type of machine has met with considerable success in actual practice, and it is claimed by the makers that while escaping the defects of the older types of converting plant—motor generators and rotary converters—the motor converter possesses practically all their advantages, and in addition has several valuable features peculiar to itself but unattainable in any other machine.

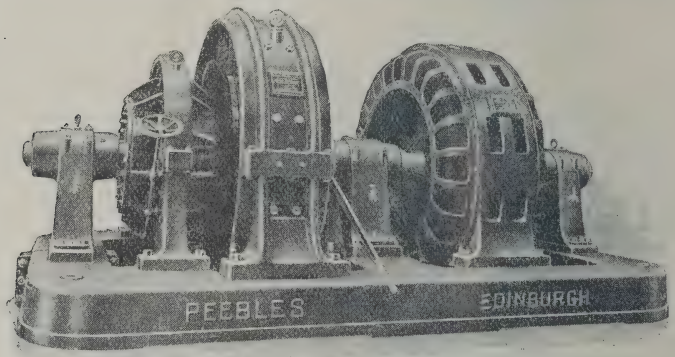


Fig. 18.—2,000 KW. 50-Cycle Peebles-la Cour Motor Converter.

An important feature of the motor converter is that transformers are unnecessary, as the stators of these machines can be wound for high-pressure currents; the rotor, however, always carries low-pressure current only.

The motor converter is self-starting, but runs synchronously when up to speed. Voltage regulation up to 40 per cent. at the continuous-current end can be obtained, an instance being the machines with this voltage variation supplied to Manchester Corporation. The motor converter is particularly suitable for 3-wire supply, as it will automatically take care of unbalanced loads. With these machines there is no possibility of reversal of polarity, and the brush-holder arms being widely spaced, 'flashing over' will not occur even under the extreme conditions of a dead short circuit.

Principle of Motor Converter.

The motor converter consists of an induction motor coupled to a D.C. generator, the rotor winding of the former and the armature winding of the latter being electrically connected. For the sake of simplicity, assume that the induction motor and D.C. generator each have the same number of poles, and—leaving out the question of starting—that the combined rotating element revolves at a speed corresponding to half the synchronous speed of the induction motor, or, in other words, that the 'slip' is 50 per cent. It follows that the rotating field set up in the stator by the supply current rotates relatively to the rotor at a speed corresponding to half the periodicity of the supply circuit, and it thus induces in the A.C. rotor windings a series of E.M.F.'s which will have a periodicity equal to half that of the supply circuit. Now the number of poles of the D.C. generator is assumed to be equal to that of the induction motor, and the D.C. armature being coupled to the induction motor rotor is rotating at a speed corresponding to half the periodicity of the supply circuit; therefore the E.M.F.'s induced in the D.C. armature winding must have the same periodicity as the E.M.F.'s in the A.C. rotor winding. On account of this fact it is possible to connect the rotor and armature windings together (provided each is wound with a suitable number of turns); when such connections are made the speed remains constant, and the two ends of the motor converter thus connected together operate as a single synchronous machine.

Owing to the induction motor rotor revolving at a speed corresponding to half the periodicity of the supply circuit, only half the electrical energy led into the stator is converted into



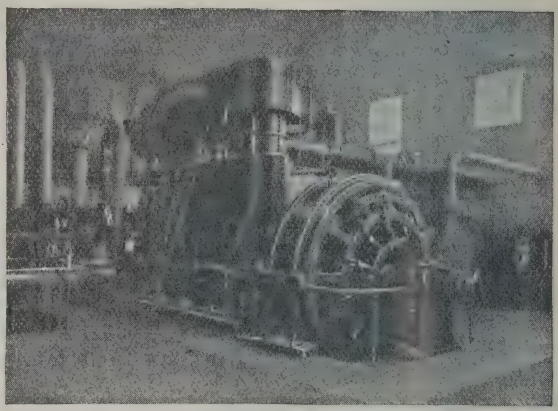
Three 500 K.W., 50 Cycle, Double Commutator, 2317
Peebles-la Cour Motor Converters in Sub-station.

PEEBLES

Converting Plant

TELEGRAMS:
'Peebles, Edinburgh.'
BRUCE : PEEBLES & CO. LTD.
Engineers,
EDINBURGH
TELEPHONES:
Central 1867-8-9.

¶ Read the notes on Motor Converters on pages 1896-1898.



Peebles 1000 K.W., Open Type Dynamo, coupled to an Allen Steam Engine at Pretoria. 2225

PEEBLES

Electrical Machinery

TELEGRAMS:
'Peebles, Edinburgh.'
BRUCE : PEEBLES & CO. LTD.
Engineers,
EDINBURGH
TELEPHONES:
Central 1867-8-9.

¶ We have designs of A.C. & D.C. Motors to suit all Industries.

F. 1897

mechanical energy, and transmitted by means of the shaft to the D.C. generator; the other half of the supplied energy, however, is transferred through the inter-connections between the two halves of the combined rotor to the D.C. armature in the form of electrical energy; thus the induction motor operates half as motor and half as transformer, while the D.C. generator operates half as an ordinary generator and half as a rotary converter.

As the size of the induction motor depends on the speed of the revolving field and not on that of the rotor, the motor of a motor converter is, theoretically, only half as large, at the motor converter speed, as it would require to be if it converted the whole of the electrical energy led into it into mechanical energy. Similarly the D.C. generator of a motor converter runs at a speed corresponding to half the frequency of the supply circuit—which, incidentally, is of considerable advantage from a commutation point of view—and consequently it is smaller than (for the same output, primary frequency and speed) an ordinary D.C. generator or rotary converter would be.

The rotor is generally built with twelve phases, and this accounts for an exceedingly strong synchronising force which makes it almost an impossibility for the motor converter to fall out of step.

Fig. 19 shows a simple diagram of connections of the Peebles Motor Converter.

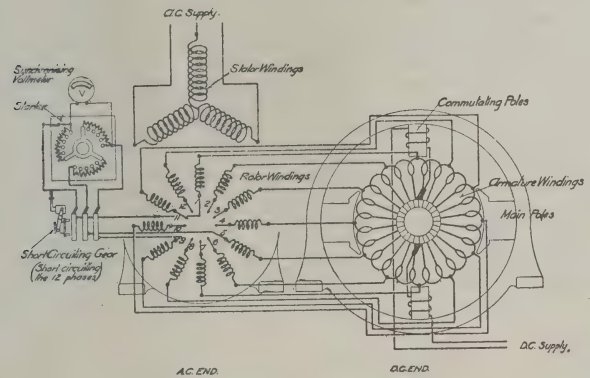


FIG. 19.—Diagram of Connections of Peebles Motor Converter.

The synchronising current taken at no load is only the watt current necessary to cover the no-load losses, the absence of higher harmonics being due to the feature of the polarity of the revolving field, and to the high reactance of the A.C. end. The motor converter can be used for power factor correction at a certain predetermined load and voltage ratio.

Spare or stand-by motor converters may also be used solely as power factor improvers. When a motor converter is to be used for this purpose, it is run up and synchronised as usual on the A.C. side, but the D.C. circuit is left 'open,' and if the D.C. excitation is sufficiently increased by shunt regulation the A.C. side will supply leading wattless current.

General Design and Construction.

Motor converters are generally provided with three bearings, the electrical connections between the rotor and armature being carried by leads through hollow portions of the shafts. The slip-rings are placed close to the rotor windings and are of small dimensions, their function being merely to start the machines, and in 3-wire installations to carry out-of-balance current. All motor converters are fitted with slip-ring short-circuiting gear, which is brought into operation when the machines are synchronised.

Standard motor converters are fitted with commutating poles and will carry 100 per cent over-load for short periods without any injurious sparking at the commutator, and with fixed brush position.

Machines for traction service are arranged to compound automatically from 500 volts at no

load to 550 volts at full load; the power factor is unity at about three-quarter load, while at larger loads the wattless current is leading, this having a favourable effect on the supply system.

A feature of motor converter installations is the simplicity of the control gear, rendering skilled attention unnecessary.

Mercury Vapour Rectifiers.

The necessity of converting alternating to direct current in many cases, and the desirability of dispensing with running machinery in sub-stations, etc., has led to the development of the rectifying properties of the mercury vapour lamp for this purpose. Essentially the rectifier consists of an arc *in vacuo* between iron anodes and a mercury cathode, which allows the current to pass in one direction only, namely, from the anodes to the cathode, as the names imply. In order to enable the rectifier to deal with large amounts of power, the original glass bulb has been replaced by a steel container, the difficulty of making stanch joints having been overcome; and whereas in rectifying single-phase current the resulting unidirectional current pulsates between zero and a maximum value, in the case of three-phase current the pulsations are reduced in amplitude by using three anodes connected to the three phases, or better still, by connecting the transformer to give six-phase current and using six anodes, the fluctuation can be almost wholly eliminated. Rectifiers of this type can now be made for outputs of 250 kw. per cylinder, and being characterised by low first cost, small depreciation and maintenance, and high efficiency, besides requiring very little attention, are rapidly coming into use. They work well in parallel with one another and with a battery, and possess the property of close regulation; the average overall efficiency is about 90 per cent., the power factor on full load about 94 per cent., and the rectifier is practically independent of frequency and wave-form. Installations up to 16,000 amperes at 250 volts are in operation, and as there is a constant drop of 15 to 20 volts through the rectifier, the higher the voltage the higher the efficiency.

The rectifier consists of a steel cylinder, exhausted to at least 0·1 mm. of mercury, with the mercury cathode at the bottom and six iron anodes suspended from the cover, suitably insulated. Auxiliary anodes, one for starting the rectifier (which operation takes only a few seconds) and two for excitation (to keep the rectifier in operation if the load temporarily falls to zero), are provided. The rectifier chamber is water-cooled, as the temperature in the interior must not exceed 70° C., and a cooled chamber on the top of the main cylinder condenses the vaporised mercury, which returns to the cathode by gravitation. A vacuum pump is necessary to maintain the high vacuum, but after a few months' working the residual gases are all removed and the pump need not be used. Choking coils or induction regulators ensure stability of operation and provide means of regulating the D.C. voltage. The transformer used in conjunction with the rectifier is specially wound, and is practically equivalent to an ordinary transformer of a kvd. rating about 40 or 50 per cent. larger than the D.C. output. A 750-kw. rectifier occupies about the same space as a rotary converter of 100 kw., and weighs 4,100 kilograms.

The 'Tungar' rectifier, which is suitable for charging small storage batteries, is more closely allied to the 'valves' used in wireless telegraphy, the cathode being an incandescent filament.

COST OF ELECTRICAL ENERGY.

Electricity is now supplied in all industrial districts and large towns in the United Kingdom at cheap rates, the figures in Table I being typical of average prices in 1919. The cost of producing the Board of Trade unit is widely used as a means of comparing the economy of one station

TABLE I.

Name of Town.	Maximum Load.	Cost per unit exclusive of Capital Charges.	Average Price received per unit.	Percentage of Gross Profit to Capital.
	Kilowatts.	*d.*	*d.*	
Ashton-under-Lyne	2,636	0·55	0·85	7·50
Birmingham	54,930	0·91	1·28	9·46
Bury	5,128	0·55	0·82	8·10
Glasgow	55,610	0·83	1·21	8·35
Leeds	24,920	0·52	1·04	8·31
Liverpool	29,048	0·76	1·51	10·41
Sheffield	57,338	0·48	0·88	13·36
Stalybridge	9,000	0·45	0·82	11·37
City of London	21,000	1·55	2·55	7·01
County of London Company	18,500	1·42	2·19	7·14
London Company	23,300	0·80	1·06	4·36
South London Company	4,350	1·12	1·92	6·87
South Metropolitan Company	9,800	0·96	1·51	8·19

with another, and the selling price per unit is also commonly used as a measure of the excellence of an electricity supply undertaking, but these values depend so greatly upon local conditions that such comparisons are very misleading unless qualifying factors are introduced to take account of these. The table shows that wide variations exist in the cost of production and the average price received. The figures for power companies are not published, but are generally lower than those given in the table.

The total cost of supplying electricity is made up of :—

Power Station Charges.—Capital charges (interest, reserve, depreciation and sinking funds—say, 10 per cent. on the capital) ; fuel and stores ; wages and salaries ; repairs, rents, rates, etc.

Distribution Charges.—Capital charges ; maintenance, rates, wages, salaries, etc.

The total capital charges usually represent about 50 per cent. of the total cost of supply. The average cost of connecting a consumer, including the service main, meter, and proportion of the distribution main, is about 25*l.* The coal bill represents about 25 per cent. of the cost, and the other charges make up the remaining 25 per cent. If, therefore, by using their supply for longer hours without increasing the maximum demand, consumers double the number of units supplied to them, the cost of the whole supply will only be increased by 25 per cent., and the average cost per unit will be reduced by 37 per cent. As the distribution capital represents about half the total capital, and the cost of transformation, distribution, and maintenance of meters represents some 20 per cent. of the total cost, no decrease in the price of energy supplied in bulk from super-stations can possibly result in a very large reduction in price to the small consumer ; he can make a greater reduction in the price per unit himself by making a better use of the supply. In an ordinary private house, if the units used for lighting are about 300 per annum, the units used for heating and cooking will be about 3,000 per annum. Taking the price for lighting at 6*d.* per unit, and the price for heating and cooking at 1*d.* per unit, the average price per unit will be 1·4*d.*

Table II shows the cost of underground and overhead transmission lines. Under the best conditions, the cost of transmission for distances exceeding 20 miles is a serious item. The increased cost of plant and mains implies that the supersession of existing plant will be delayed.

TABLE II.—SHOWING THE COST OF TRANSMISSION SYSTEMS AT 1919 PRICES FOR LABOUR, TAKING COPPER AND LEAD AT 100*l.* AND 25*l.* PER TON RESPECTIVELY.

Size of Conductors and Pressure.		Useful Capacity in Kilowatts.	Capital Cost per mile run.	Capital Cost per Kilowatt per mile run.	Working Cost.	
					Per mile run.	Per Kilowatt per annum per mile run.
		Underground System.				
□″	Pressure. Volts.	Kilowatts.	£	£	10 per cent. on Capital, £	£
·075	3,300	320	4,000	12·5	400	1·25
·125	3,300	540	5,000	9·3	500	0·93
·125	11,000	1,800	5,500	3·0	550	0·30
·125	22,000	3,600	6,000	1·7	600	0·17
·125	33,000	5,400	7,000	1·3	700	0·13
		Overhead System.				
□″	Pressure. Volts.				12½ per cent. on Capital, £	
·075	3,300	320	1,300	4·0	162·5	0·51
·125	3,300	540	1,600	3·0	200	0·37
·125	11,000	1,800	2,600	1·45	325	0·18
·125	22,000	3,600	2,900	0·80	350	0·10
·125	33,000	5,400	3,200	0·6	400	0·08

Two cables and six overhead wires are included in each line to work with three-phase alternating current. (*J. S. Highfield*, '*Journal of the Society of Arts.*')

Electricity Supply.

The standard pressures of supply laid down by the British Engineering Standards Association (Report No. 77—1921) for new systems and installations are as follows (at consumers' terminals):—

Direct current, 220 and 440 volts; alternating current, 240 volts between neutral and each phase, 416 volts between phases.

Extra high pressures, 3,000, 6,000, 10,000, 30,000, 60,000, 100,000, and 120,000 volts.

In each case the station pressure is assumed to be 10 per cent. higher at full load.

Under present conditions the cost of generating electrical energy in power-stations has increased by more than 100 per cent. compared with pre-war conditions. At the large power-station of the Detroit Edison Company at Connors Creek, U.S.A., the following results have been obtained (cents per kilowatt-hour) :—

	Year ended June 30.	
	1916.	1920.
Operation :—		
Superintendence	0·013	0·010
Wages	0·043	0·062
Fuel	0·158	0·471
Lubricants	0·001	0·001
Station supplies	0·005	0·011
Maintenance :—		
Station buildings	0·006	0·010
Steam equipment	0·019	0·036
Electrical equipment	0·003	0·001
Total	0·248	0·602
Kilowatt-hour output	125,158,800	488,060,600
Maximum demand (30 minutes), kw.	35,000	104,000
Average load, kw.	14,300	55,600
Load factor	0·409	0·534
Coal per kw.-hr., lb.	1·44	1·83
British thermal units per kw.-hr.	19,700	22,800

This station is one of the largest and most up-to-date in the world. It should be observed that the costs given above are production costs only, to which must be added interest and depreciation charges, management, taxes, etc., and the cost of distribution, in order to arrive at the selling price.

Averaging twelve stations in 1920, aggregating 250,000 kw. capacity, the cost of production was 1·35 cents per kw.-hr., the total operating cost 2·625 cents per kw.-hr. sold, the coal consumption 2·4 lb. per kw.-hr. generated, and the load factor from 30 to 40 per cent. The average revenue per kw.-hr. sold was 3·9 c., and the average prices were for lighting 9·1 c., and for power 2·6 c. (*'Electrical World.'*)

An examination of some 120 European installations shows that for large examples of over 10,000 e.h.p. the minimum cost of the hydraulic works is 8·4*l.* per h.p. installed and the maximum 79·6*l.* per h.p. For the majority of the installations the cost lies between 25*l.* and 45*l.* The cost of the electrical plant and transmission lines also varies greatly, ranging from 1·25*l.* to 28·4*l.* per h.p., while the cost of the turbines ranges from 4*l.* to 8*l.* per h.p. The working costs vary between 1·3*l.* and 6·8*l.* per e.h.p. year, with an average of 3*l.* From these figures it appears that on the average, allowing 15 per cent. for interest and depreciation, the cost per e.h.p. per annum is in the neighbourhood of 10·5*l.* In many cases, however, the cost is very much less. The Ontario Power Company, for example, is able to supply power to the Hydro-Electric Commission of Ontario at 1·8*l.* per e.h.p. per annum. It is estimated that many of the large powers in Canada can be developed at a total cost, including all generating machinery and transmission lines, ranging from 12*l.* to 20*l.* per e.h.p., in which case the cost per h.p. per annum should not exceed 2*l.* to 3*l.*

(*Times Engineering Supplement.*)

Diversity Factor.

The 'diversity factor' is the ratio of (the sum of all the individual maxima of the various motors or factories supplied) to (the maximum actually observed at the plant supplying them). Thus in a factory the sum of the maximum outputs of a number of motors over a given period may be 1,000 horse-power, while the highest observed load at the power house at any one time during that period may not exceed 700 horse-power, owing to the fact that the motors are not all working at their greatest load at one time. In this case the diversity factor would be 1·43.

Similarly over a large supply area the sum of the maxima of all the factories, etc., supplied will be greater than the maximum load at the power house. The diversity factor varies in different localities and in different industries. At Sunderland the diversity factor is 1·25, at Leeds 2·40 an average value would be 1·6. The diversity factor is not necessarily the same thing as the ratio of the total kilowatts installed to the maximum load observed, although the two have a certain connection. (*Snell, Journal Inst. E.E.*)

Periods allowed for Repayment of Loans by the Electricity Commissioners.

Purpose of Expenditure.	Maximum Periods., Years.
Land—	
Freehold	60*a*
Leasehold (subject to duration of lease)	30
Substantial buildings	30
Plant and machinery	20
H.-P. trunk transmission mains	40*a*
Mains and services	25
Meters	10
Wiring of premises	10
Apparatus to be let on hire	7–10

(*a*) Except in Scottish cases, for which the present maximum period is 30 years..

Depreciation.

The following table gives (A) the approximate life in years of the various classes of machinery, etc., in an electrical undertaking if properly maintained, and (B) the probable residual value at the end of that term in per cent. of original cost.

	A.	B.
Land	—	—
Foundations	100	nil
Buildings	80	nil
Boilers (water tube)	25	5
Boilers (Lancashire)	22	3
Dynamos and alternators	30	8
Engines and other machinery	25	6
Cables (armoured)	35	15
Cables (solid in wood trough)	40	12
Buildings (sub-station)	50	nil
Sub-station equipment	25	12
Accumulators	15	10
Arc lamp-posts	40	5
Arc lamps	12	5
Motors	25	9

(*Preece.*)

MOTORS.

DIRECT-CURRENT MOTORS.*

Shunt-wound Motors.

This is by far the most common type of winding, and is generally applied to motors designed for operating at constant speed under constant or varying loads. Nearly all commercial applications, particularly those of large capacity, require this type of motor. When necessary, considerable speed variation can usually be secured by means of a rheostat in the field circuit, increased resistance resulting in an increased speed.

* Abstract from British Westinghouse Instruction Book ; by permission.

It is the practice on many shunt-wound commutating-pole motors to use a stability winding for the purpose of insuring stability under all conditions of operation. This is, in effect, a light series winding which, however, does not change the speed-torque characteristics from those of an ordinary shunt-wound motor.

Series-wound Motors.

These are variable-speed machines particularly adapted to such uses as railway and crane service. The characteristic features of a series-wound motor are its great torque at starting and low running speeds possible.

Compound-wound Motors.

For some special classes of service, in which it is necessary to start under heavy load and later operate at approximately constant speed, a series winding is added to assist the shunt field at the low-speed points. A compound-wound motor combines the characteristics of both shunt and series-wound motors. In most cases, however, the series winding has comparatively little effect except during the starting period.

Starting.

All direct-current shunt and compound-wound motors larger than the very small sizes are started by first giving the shunt field full excitation and then connecting the armature, with a starting resistance in series, to the circuit. The resistance is then cut out in steps as the motor accelerates, the time required to attain full speed varying from about 15 seconds for small, to one minute for large motors. These limits should be used with discretion, since more time is required to start with heavy load than with light load.

After all connections are made according to instructions and all mechanical preparations are complete, see that all the field adjusting resistance (if used) is cut out and that the starting resistance is all in circuit. Close the circuit-breaker (if used), then the line switch, and lastly cut out the starting resistance step by step, allowing enough time for smooth speed acceleration. Too rapid starting results in excessive starting current and possibly flashing at the brushes. The motor should generally start when the armature circuit is first closed through the starting resistance, and failure to start when the second or third step of resistance is cut out is a signal to open the line switch or circuit-breaker at once and find the cause of the failure.

Stopping.

Never move a starter or controller handle to the off position under any circumstances if by doing so the shunt-field circuit of the motor is opened. The high inductance of the motor field may generate voltage enough to puncture the insulation. If it is necessary to open a shunt-field circuit it should be done very slowly, allowing the field current to die out, owing to the resistance of the arc across the switch terminals. If a field circuit must be opened in this manner often, a field switch should be installed, so that a local circuit is closed through the field before the latter is disconnected from the line. Starting rheostats are usually so arranged that the field circuit is always closed through the motor armature. If the starter or controller is provided with a low-voltage release, the line switch or circuit-breaker should always be opened first for stopping; the motor speed will then decrease until the starting resistance is automatically cut into circuit.

Brushholder Adjustments.

The correct position for the brushes in either direction is clearly marked before the machine is shipped, and before starting up the position should be checked. Sparking at the brushes when the machine is operating with load can frequently be entirely removed by shifting the brushes slowly from or towards the neutral point. In any case the correct distance of the brushes from the neutral point is very slight, and the movement should be made with great care, for shifting the brushes too much will cause violent sparking.

Care of Commutator and Brushes.

Carbon brushes are used on all Westinghouse direct-current machines. The chief considerations in caring for such machines are to keep the commutators clean, the brushes properly adjusted, and the contact surface of the brushes good. The last condition, once fulfilled, will usually take care of itself until the brushes are worn out, provided the other conditions are complied with. At intervals depending on the service and the location, the commutator contact surface and end should be thoroughly wiped with clean cloth that is free from lint.

A few drops of oil on the cloth or a piece of paraffin rubbed lightly across the commutator surface will give all the lubrication necessary. Lubricant should be used very sparingly on a commutator, and no grease, oil, or dirt should be allowed to accumulate on the commutator or the brushes.

The ideal appearance of a commutator surface is polished dark brown or chocolate colour. Such a commutator needs no attention other than cleaning when necessary. If the surface has a raw copper colour with gradual roughening, it should be smoothed with sandpaper or, if very rough, with a piece of sandstone; emery paper or cloth should not be used for this purpose. The sandpaper should be held against the commutator by means of a block having the same curvature as the commutator. The sandstone likewise should be curved to fit the commutator. The brushes should be lifted from the commutator surface when using sandpaper or stone, and should not be placed in contact again until the commutator surface is thoroughly cleaned of all gritty particles

Grinding in the Brushes.

When making proper contact with the commutator, the face of the brush is glazed. If the glazed portion does not extend over very nearly all the brush face the brushes should be ground in by wrapping a long strip of fine sandpaper closely around the commutator with the rough side toward the brushes and then rotating the commutator and the sandpaper slowly through perhaps one revolution. Shorter pieces of sandpaper held close to the commutator surface and drawn a few times back and forth under each brush or set of brushes will answer the same purpose. The commutator surface should be wiped clean after the brushes are ground in, and lubricated with a few drops of fresh oil on a clean cloth.

Field Coils.

An open-circuited shunt field coil can be detected by touching the terminals of a voltmeter to the terminals of the individual coils while full voltage is applied to the field circuit. The voltmeter will show no deflection until the defective coil is reached and will then indicate the full voltage.

A short-circuited shunt field can be found by the same test, the voltmeter deflection being least on the defective coil. The short-circuiting of one field coil may easily result in burning out one or more of the others if full voltage is applied to the circuit, unless a resistance equivalent to that of a perfect coil is included in the circuit.

In replacing a field coil make sure that the polarity of the pole differs from that of either adjacent pole. The polarity can be tested with a small bar magnet or a piece of steel wire suspended from its centre by a string. In holding the magnet near the poles successively, it should reverse at each pole, i.e. no two successive poles should attract the same end of the magnet.

Cautions.

Never allow the load to be entirely removed from a series-wound direct-current motor while operating, or to be reduced enough to cause a dangerously high speed. A series motor should not be belted, on account of the possibility of the belt running off, thus permitting the motor to race.

Never open the shunt-field circuit of a motor in operation, otherwise the motor will race, and serious damage will result.

When the shunt-field circuit of a motor or a generator is excited, never open it quickly unless a path for the inductive discharge is provided. The circuit can be opened slowly, if desired, the arc at the opening serving to reduce the field current gradually. *Do not permit any part of the body to bridge this opening*, or a serious shock will be received.

Always follow a fixed regular order in closing and opening switches, unless there are special reasons for departing from this order. A routine method will aid in avoiding mistakes. Keep all switches open when the motors are idle. Close switches carefully, keeping firm hold of the handle until completely closed.

A routine method of making inspections, replenishing lubricants, etc., will also prevent oversights and possible damage.

(*British Westinghouse Instruction Book.*)

AVERAGE EFFICIENCIES OF D.C. MOTORS.

(*Meares.*)

Output, B.H.P.	½	1	2	3	5	10	20	50	100	200
Efficiency, per cent.	75	77	82	83	84	86	87	91	92	93

Speed Regulation of Direct-current Motors.

There are three commercial methods of varying the speed of direct-current shunt-wound motors : (1) by altering the terminal voltage ; (2) by a resistance in series with the machine ; (3) by a resistance in series with the shunt circuit. The first method is not employed as a rule with the ordinary industrial motor, but is only used in connection with self-contained plants such as winding, and certain printing press control equipments. The second method is largely adopted where only a small regulation is required, but it is not efficient by any means, and a fine regulation is difficult to obtain, the power consumption of the motor remaining practically the same throughout the whole range of speed, a large amount of the power being dissipated in the resistance. The method is convenient where it is desired to regulate the speed down to about half for very short periods, such as for crane and haulage work. The third method of control is one which has received a good deal of attention during the last few years, and Messrs. Crompton & Co. have developed a line of motors which are capable of speed regulation by field resistance up to 4 : 1 and in certain cases up to 6 : 1, the torque being maintained constant over the whole range.

APPROXIMATE COMMERCIAL EFFICIENCY OF DIRECT-CURRENT MOTORS PLOTTED AS A FUNCTION OF THE BRAKE H.P.

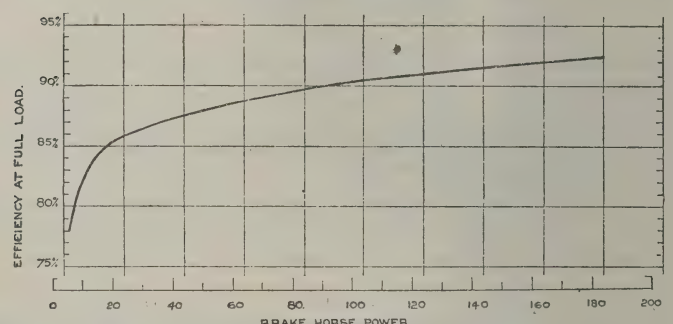


FIG. 20.

Such large variations of speed generally require some special device to compensate for the cross magnetisation of the armature due to armature reaction, and in this series of motors interpoles or auxiliary poles are employed. The poles are placed mid-way between the main field poles and carry either the full armature current or a percentage of it. The interpole flux therefore varies directly as the load and as the armature reaction, and as the tendency of the motor to spark increases as the load, so the compensating flux increases proportionately.

The size of motors with shunt regulation is determined by the minimum speed and the maximum b.h.p., although it may be necessary for the motor to give a much lower output at the minimum speed. This is clear when it is considered that minimum speed requires maximum flux and maximum speed requires minimum flux, that the magnetic circuit must be large enough to carry the full flux, and that the dimensions of the armature are also determined by the number and size of the armature conductors. The only variable, therefore, is the field flux. The efficiency does not largely vary throughout the range of speed at a given load, owing to the fact that at the minimum speed the electrical losses are a maximum, whereas the friction and windage losses are a minimum ; but at the maximum speed the electrical losses are a minimum and the friction and windage losses a maximum. The curve shown in fig. 20, giving the full-load commercial efficiency as a function of the brake horse-power, is typical of constant speed motors running at the normal speeds recommended by the British Engineering Standards Association. Motors with series resistance regulation have their sizes determined by the maximum speed and maximum output, and although the torque can remain constant throughout yet the output or power will be reduced in proportion to the speed.

The Direct-current Series-Wound Motor.

Fig. 21 is a view of a standard direct-current series-wound motor made by the British Westinghouse Electric Company for tramway service. This motor is of 45 b.h.p.; the field frame is of cast steel divided into an upper and lower half, the two parts being hinged together on the side opposite to the axle. The figure shows the lower half hanging open, exposing the armature, the bearings of which are bolted to the upper half of the frame. The pole pieces are built up of annealed soft-steel punchings riveted together between wrought-iron end-plates.

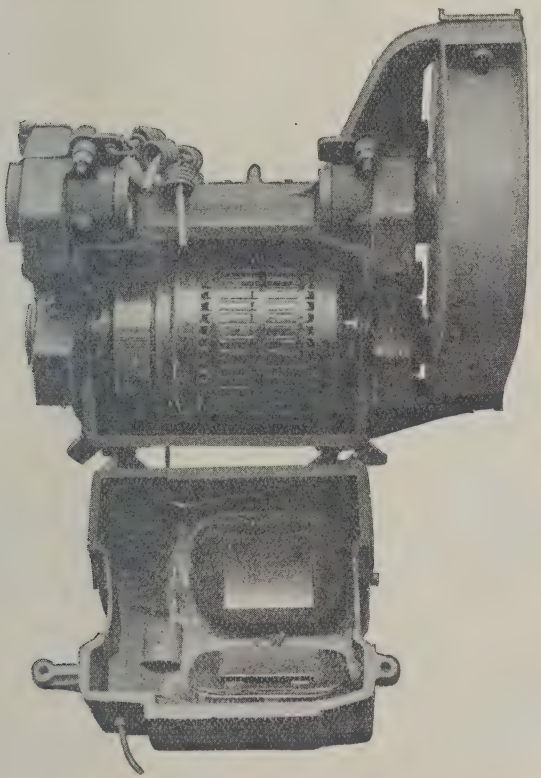


FIG. 21.

The field coils shown in the figure are held in place by a brass support resting on the projecting pole tip. The armature is of the slotted drum type, the core being built up of annealed soft-steel punchings. Ventilation is provided by six axial and one radial air-duct. The armature coils are completely formed before being put in place and are held by steel wire bands sunk in the surface of the armature, so that in the event of the armature bearings being worn the bands do not touch the pole pieces. The winding is of the two-circuit type designed to give a balance of armature circuits should the armature get out of centre owing to wear of bearings. The commutator consists of 117 hard-drawn segments pressed on and keyed to the armature spider. The bearings are of cast iron with special Babbitt metal linings; either oil or grease may be used. The pinion is of forged steel and the gear wheel of cast steel made in two parts bolted

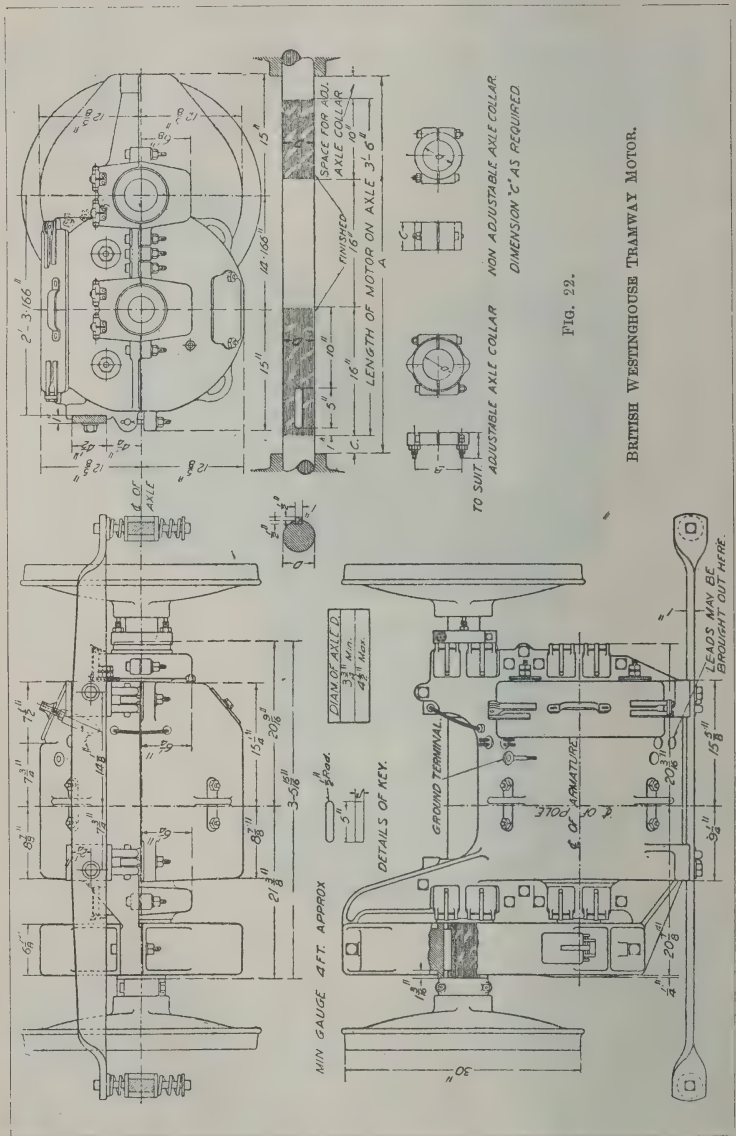


FIG. 22.

BRITISH WESTINGHOUSE TRAMWAY MOTOR.

together. The gears that may be used vary from a 15-tooth pinion and 70-tooth gear to a 22-tooth pinion and 63-tooth gear; the standard gear ratio is 16 to 69.

Fig. 22 illustrates the method of suspension, which in this case is what is known as the cross-bar type. A rectangular suspension-bar is supported on the truck frame, and the motor is bolted to this through machined facings on the upper field-frame. On the other side the motor is supported on the gear-wheel axle in the usual way.

The weights of this motor are as follows. Motor complete with gear-wheel and gear-case, 2,764 lbs. Armature and pinion alone, 540 lbs. Axle gear-wheel and case alone, 340 lbs. The clearance between the top of the rail and the lowest part of the motor with 30 in. wheels is $2\frac{3}{8}$ ins.

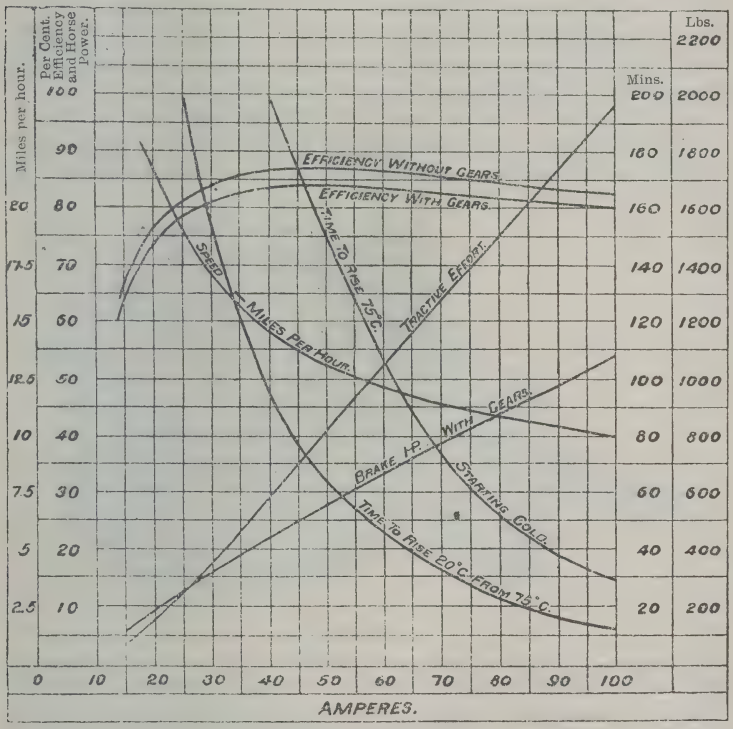


FIG. 23.

Fig. 23 gives the characteristic curves for this motor, from which all necessary information regarding the performance of the motor may be derived. The curves given are those of efficiency, speed, tractive effort, horse-power, and temperature.

The upper temperature curve shows that under the standard conditions under which tramway motors are generally rated, i.e. 75° C. rise in temperature after one hour's continuous run, the corresponding current for this motor would be 75 amperes, which at 500 volts represents an input of 37,500 watts. Following the 75-ampere line to the speed curve, the speed for this current and volts is seen to be 11·1 miles per hour, and continuing the ampere line up to the tractive effort curve the tractive effort is seen to be 1,380 lbs.: this is the useful draw-bar pull with gear and driving wheel used in the test. Using the formula watts $= 2 \times S \times T$ the output in watts is found to be 30,600, or 41 horse-power, giving an efficiency of 82 per cent. as shown on the efficiency curve for 75 amperes. The corresponding efficiency without gears is

given as 85 per cent., representing a draw-bar pull of 1430 lbs., showing a loss of 50 lbs. in the gears. The above rating of 41 horse-power is that for one hour's run; the continuous rating will be considerably less than this, and depends upon the mean terminal voltage. The continuous capacity at 300 volts is given as 38 amperes and is equivalent to a load of about 550 lbs. at the draw-bar. On the other hand the motor will stand large momentary overloads without injury or sparking.

Direct-Current Traction Motors.

(*The English Electric Co., Ltd.*)

The Direct Current series wound traction motor gives in result the effect of the change-speed gear of a motor-car engine, which enables a small-powered motor to exert a big effort when required for acceleration or for climbing gradients. It is capable of working both large and small units both for short distances and main line traffic. The three features of design which have contributed to give the D.C. Motor its present wide range in traction work are:—

(*a*) commutating poles; (*b*) ventilation; (*c*) high-tension design.

(*a*) *Commutating Poles.*—The coils are connected in series with the armature, and their effect is to counterbalance the field set up by armature reaction under the brushes, so that commutation under all conditions of loading is practically sparkless, even with a field shunted, thus giving a range of economical speeds to traction equipments.

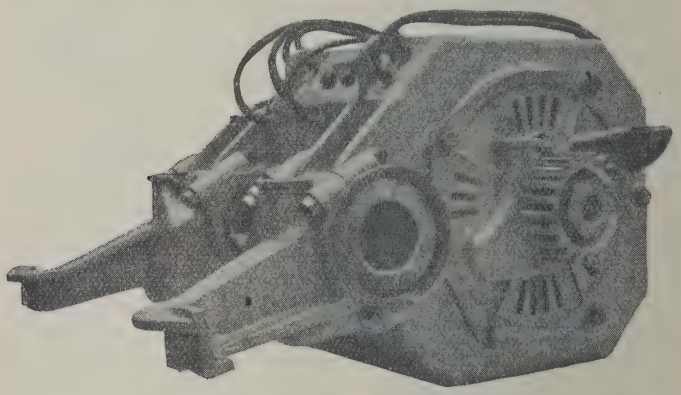



FIG. 24.


(*b*) *Ventilation.*—Through the introduction of ventilation, it is now possible to transmit up to 400 h.p. on a single axle, on standard gauge, with 48-in. wheels, on the one hour rating of the motor.


All motors manufactured by *The English Electric Co.*, ranging from 30 h.p. to 400 h.p., are fitted with interpoles and are either self or force ventilated. Motors up to 250 h.p. are self-ventilated by means of a fan, which forms part of the armature spider at the pinion end. The air is drawn in through apertures at the commutator end of the motor, and expelled at the pinion end. The fan is provided with two sets of blades, one of which draws the air through ventilating ducts in the armature, and the other over the surface of the armature and round the fields. Motors over 250 h.p. are arranged for forced ventilation in which the air is driven through the motors by means of separately-driven fans.


(*c*) *High-tension D.C. Motors.*—High-tension D.C. motors are successfully in use on the Lancashire and Yorkshire Railway, and on the Newport-Shildon Branch of the North-Eastern Railway, the voltages being 1,200 and 1,500 respectively. Lines up to 3,000 volts direct current are in successful operation abroad, and this voltage has been recommended for use on the South African railways.

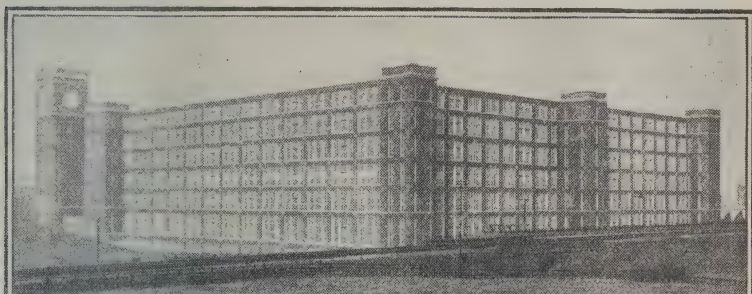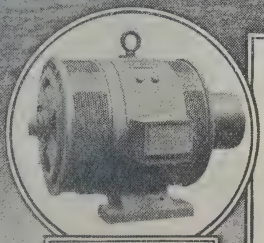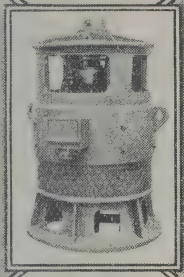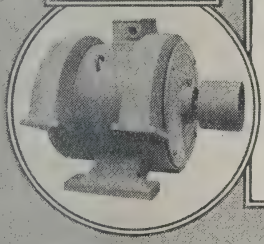The high-tension motors are specially insulated, mica and mica compounds being used throughout for the insulation of armature, field coils, and brushes, so that the di-electric strength of the machines is not affected by high temperatures.









A.C. & D.C. INDUSTRIAL ELECTRIC MOTORS

LONG designing and manufacturing experience coupled with a close study of customers' requirements, enable the English Electric Company to supply reliable electric motors to meet all industrial requirements.

The illustrations show a typical enclosed ventilated motor, a vertical spindle motor and a drip-proof motor, while the background illustrates a large modern factory equipped with English Electric Motors.

The

ENGLISH ELECTRIC

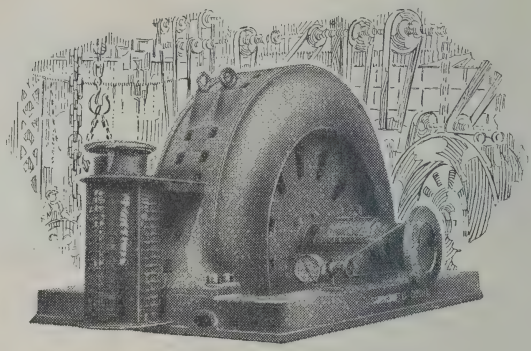
Company Limited.

Works :— Bradford, Coventry, Preston, Rugby and Stafford.

Head Office :—

Queen's House, Kingsway, London, W.C. 2.

SEE ALSO OUR ADVERTISEMENTS ON GREY PAGE XIX AND FACING PAGES 667, 1177, 1558 & 1673.



Cascade Induction Motors



NOTABLE in the simplicity of their construction, Cascade Induction Motors possess all the advantages of the 'Slipring' type of motors without the use of sliprings or rubbing contacts.

Very high power factor and efficiency are ensured by their special design and mechanical construction.

Cascade Motors are particularly suitable for Mining Machinery. They are also thoroughly efficient for driving all classes of machinery, and have proved successful where Motors of ordinary construction have failed.

CATALOGUE containing full details and specifications sent on request.

Sandycroft LTD.

LONDON & CHESTER

HEAD OFFICE: 4 Broad Street Place, London, E.C. 2.

Works: Sandycroft, Chester.

Agents in Manchester, West Hartlepool, Cardiff and Glasgow.

On the larger sizes—such as the 350 h.p. motors supplied to the Chemin de Fer du Midi—the motors drive on to the axles through twin gearing, the teeth of the pinions at each end of the armature being staggered to assist in giving uniformity of turning moment.

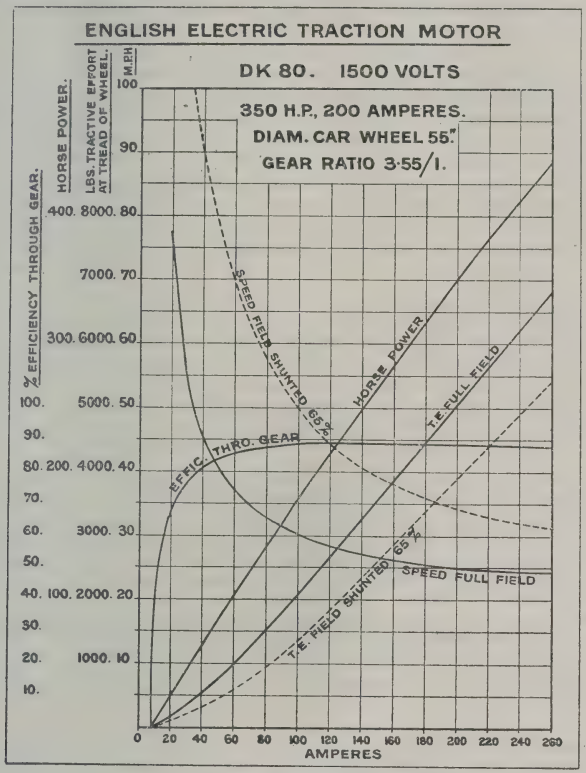


FIG. 25—Alternating-Current Motors,

Fig. 24 shows a typical English Electric 350 h.p., 1,500 volt, traction motor, of which the characteristic curve is shown in fig. 25.

ALTERNATING-CURRENT MOTORS.

Alternating-Current Motors may be divided into the following classes:—Synchronous, Induction, and Commutator Motors.

Synchronous Motors.

An alternating-current generator will, if brought up to speed, excited, and connected to a suitable alternating-current supply, run as a motor at a speed in revolutions per second equal to the frequency divided by the number of pairs of poles. Such motors are called synchronous motors and they will operate only at approximately synchronous speed. They will not start under load, and have to be started by auxiliary means. If overloaded beyond a certain point they will fall out of step with the primary current and come to a standstill. Their sphere of usefulness is limited, and they are most commonly employed as phase regulators on transmission lines, or for driving direct-current generators.

Induction Motors.

Induction motors may be divided into polyphase and single-phase induction motors. The action of a polyphase induction motor may be likened to that of a continuous-current motor in which both the fields and the armature are capable of rotation. Supposing the fields of such a motor to be fully excited, and rotating at full speed with the armature at rest, a current of any desired magnitude may be induced in the armature by simply short-circuiting it, since the generation of a current depends simply on the relative motion of the fields and the armature. The torque produced by the action of the fields on the induced current will tend to turn the armature, and if the fields be kept rotating at a uniform rate, the armature will speed up until the relative motion of the fields and the armature is sufficient to generate a current that exactly balances the load; uniform speed has then been reached. The slip, or the difference between the speed of the armature and the speed of the fields, is generally stated in per cent. of the speed that would be reached if the load were nothing, that is, if the armature were rotating at the same speed as the fields. This speed is spoken of as the speed of synchronism. In a polyphase induction motor the rotation of the field is produced by magnetising the fixed part, or stator, by two or more alternating currents in such a way that the resultant magnetic field rotates at a uniform speed. Generally three alternating currents are used differing in phase by 120°. One advantage of such a motor over the continuous-current motor is found in the absence of a commutator, for the current in the armature, or, as it is called, the rotor, can be induced by short-circuiting its coils, the current from the line being led directly into the stator without any moving contacts.

In the single-phase induction motor there is an inductive action between the field and the armature, similar to that which takes place in a polyphase induction motor: the field, however, is not a simple rotating field but may be regarded as two fields rotating in different directions. The result of this is that at starting the armature is subject to an equal pull in both directions—in other words, the motor will not start by itself. But when once the armature has been started in either direction and brought up nearly to the speed of synchronism of either one of the two fields, it will follow that field as if the other were not present. This type of induction motor therefore needs some special device to enable it to be started. Such a device is used in the Heyland single-phase motor, which will start up on full load torque with about twice the current required for an equal torque at full speed.

In a polyphase system the ratio of the current usefully employed to that generated, as measured by the power factor, depends mainly upon the width of the air-gap between the fixed and moving parts of the motor. Hence it is of great importance to reduce the clearance to the smallest limit consistent with safety. This necessitates very careful construction and special precautions have to be taken to prevent any chance of contact between the rotor and the stator. Some mechanical engineers consider the necessity of such a small clearance to be a fatal objection to the use of polyphase motors on railways, but experience shows that such motors can be constructed to run continuously without accident.

Variation of Speed with Load.—In a polyphase motor the speed is nearly independent of the load. This is in marked contrast to the action of a continuous-current series-wound motor, such as is generally used on electrical railways, in which a reduction of speed of 40 per cent. from no load to full load is not uncommon. The polyphase motor maintains the speed at the expense of a corresponding amount of power, while the continuous-current motor economises power at the expense of speed.

Maximum Load.—As the load increases the speed slightly decreases. As the load still further increases, the speed falls off in a greater ratio, until the maximum load is reached. This is called the breakdown load. If the load be increased beyond this the motor cannot recover itself, and is brought to a standstill. In practice the working load should not exceed 50 to 60 per cent. of the breakdown load.

Speed Regulation.—If a resistance be placed in the circuit of the rotor so as to increase the total resistance, say, to double it, the slip for equal torque will be double what it was with the original resistance. The breakdown load is the same as before, but takes place with twice the slip. Thus with any load any required speed can be obtained by merely altering the rotor resistance.

Starting.—There is a certain rotor resistance corresponding to standstill with maximum torque. If the rotor resistance has this value at the moment when the motor is connected to the line, it will start with its maximum torque. If the resistance is taken out of the circuit as the motor speeds up, the torque can be maintained constant and equal to the maximum starting value up to full speed for that load. In other words, the torque and therefore the acceleration can be maintained constant practically up to full speed.

Windings.—There are two kinds of windings. In the first the rotor winding consists of copper bars, rather longer than the rotor core, which are all connected together at their ends. In the second the rotor has a bar winding arranged in such a manner as to allow of an outside resistance being introduced into the rotor at starting to supplement for the time being the resistance of the bars. The former is shortly described as a 'short-circuited' rotor, the latter as a 'wound' rotor.

Comparison of Motors.—From the above it will be observed that, whereas in the motor with the short-circuited rotor there must be, owing to the low resistance of the bars, a considerable rush of current at starting, in the motor with the wound rotor the current at starting may be kept quite low by means of the supplementary resistance. When giving its full load effort, at starting, a wound rotor with resistance in its circuit will take little more than its normal full load current, but a short-circuited rotor will take several times this. If the latter has only to exert at starting a fraction of its full load effort, the current can be kept down by using a starting transformer. This appliance feeds the motor at reduced pressure until it begins to get up its speed, when by a switch it is put out of action.

On account of the constructional simplicity of short-circuited rotors it is preferable, whenever possible, to use motors having these. Save as regards starting current, the short-circuited rotor is superior in every respect to the wound rotor. The momentary excess of current it takes at starting does no harm to the motor itself, but its effect on the regulation of the supply system may be sometimes objectionable, a point which must be carefully considered.

Effect of Starting Motors.—In choosing motors it is necessary to distinguish between those intended to work on town supply mains where the greater part of the current is used for lighting, and those suitable to a scheme in which the bulk of the current is used for power, the lighting being but incidental. In the former case it is necessary that the working of motors should not interfere with the constancy of pressure on the lighting circuits; in the latter case an occasional jump in the lighting may be of no importance.

The effect of a sudden overdraft of current at a low power factor is disturbance to a greater or less extent of the whole supply system, and fluctuations in pressure such as would cause no inconvenience in the working of a power transmission plant would not be permitted on town lighting circuits. The magnitude of the disturbance depends primarily on the amount of the overdraft relatively to the capacity of the generating plant, and to the margin of current-carrying capacity in the supply network.

Choice of Motors.—It will be evident from the foregoing that the choice of the motor depends upon circumstances, and that neither class can be pronounced the better under all conditions.

Motors with short-circuited rotors take momentarily about three times their full load current, if at starting they have to give their full load effort, or from one to one-and-a-quarter times their full load current giving 25 to 30 per cent. of their full load effort, and using a starting transformer. For connection to town mains it is usual, consequent on the possibility of disturbance to neighbouring lighting circuits which might arise from the starting, to limit this class of motor to 5 h.p. or so, when it has to start at full load effort, or to 10 h.p. when operated with a starting transformer.

In a power transmission scheme where there are no neighbours to consider and the lighting is subsidiary, the short-circuited class of rotor can be employed for large sizes, provided that at starting no individual motor takes a current great enough to prejudicially affect the working of the plant. Thus, in a 500 h.p. transmission, motors of 25 h.p. may be switched right on to the mains without the use of starting transformers, while if the starting effort required is only from 25 to 30 per cent. of the full load effort, motors of 50 h.p. provided with starting transformers are quite permissible.

The conditions under which motors with wound rotors should be used are determined by elimination, that is to say, motors of this class are installed in all cases where it is not advisable to use the other. They have their place on town mains for sizes above 5 or 10 h.p., and in power transmission work, when they have to start at full load effort, and their sizes are comparatively large in proportion to the generating plant. Again, in all cases where motors have to start with overload effort, a wound rotor should be used. Not only do motors of this class give at starting their full load effort with only full load current, but 50 or 100 per cent. over the full load effort can be obtained with a current proportionately increased. This control of the current at starting constitutes the advantage of motors with wound rotors.

The curve in fig. 26 shows the power-factor at full-load of polyphase induction motors, as designed by Messrs. Crompton & Co., plotted as a function of the horse-power per revolution. Other things being equal, the maximum power-factor that can be obtained depends upon the number of poles with a given core diameter. For the same size of machine the larger the number of poles the lower will be the power-factor. It will be noticed from the curves that as the size of the machine increases the curves become very flat, and therefore after a certain point a very large increase in size will only increase the power-factor by a very small amount. For the smaller motors, however, the power-factor increases much more rapidly with the size. The horse-power ratings shown are for a normal temperature rise, and show the maximum power-factor that can be reached in these conditions.

The standard windings of these motors are arranged to work on voltages of 110, 220, 440, and 500. They can, however, be wound for any other periodicity and for any higher voltage. The machines can be supplied for polyphase or single-phase circuits with either wound or short-circuited rotors. They are manufactured in 19 standard sizes and are supplied in the same types, and are of the same substantial design and construction as the continuous-current motors.

The machines are designed to give a high power-factor at all loads, and to withstand heavy overloads before falling out of step. When required to start against a load, it is advisable to use motors with wound rotors and starting resistances. Motors with short-circuited rotors are capable of exerting their full-load torque when starting, but the sudden rush of current may be

CURVE SHOWING THE POWER FACTOR OF POLYPHASE INDUCTION MOTORS PLOTTED AS A FUNCTION OF THE H.P. PER REVOLUTION.

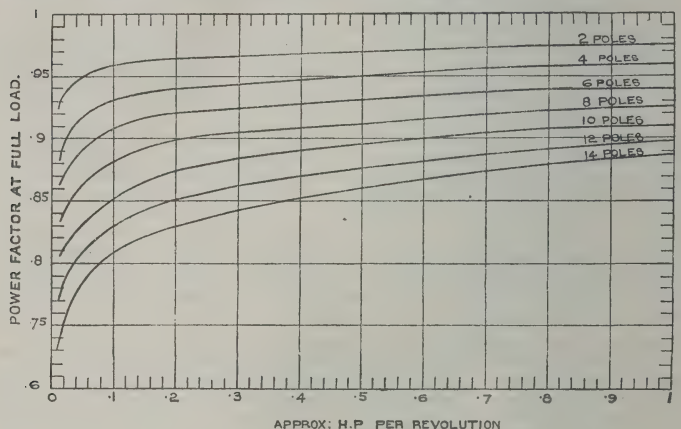


FIG. 26.

as high as four or five times the normal full-load current. Motors of this type may be either switched direct on the line or a special auto-transformer may be used to reduce the line current at starting. Special motors can be designed with permanently short-circuited rotors, and with high resistance winding, capable of starting up against the full-load or even higher torque, but such motors are usually required for special kinds of intermittent working, such as hydro-extractors.

The Cascade Motor.

The 'cascade' principle was originally applied to two motors mechanically coupled with their windings electrically connected in such a way as to make it possible to obtain two speeds. In the case of induction motors, the arrangement adopted was to connect the rotor slip-rings of motor No. 1 to the stator windings of motor No. 2, the torque of the combination being controlled by resistances placed in the circuit of the rotor of No. 2, slip-rings being used. If both machines had an equal number of poles, the 'cascade' connection gave effects equivalent to doubling the number of poles. Or if, for example, one was an eight-pole and one a four-pole motor, the speed for 'cascade' connection was that for a twelve-pole machine. Considerable use has been made of this system, notably on railways, the locomotives on the Valtellina line and for the Simplon tunnel being operated on this principle. The same effect may be secured by connecting the two rotors in series: the starting resistances may then be placed in the stator circuit and the use of slip-rings can be avoided.

In the Hunt 'Cascade' Induction Motor made by Sandycroft, Ltd., this principle has been developed so that the advantages secured hitherto only with two motors can be obtained in a single motor. In an ordinary induction motor, the stator acts on the rotor and there the inductive action stops. Starting torque and speed regulation can only be obtained by inserting resistances in the rotor winding. In the 'Cascade' motor, the rotor, by means of a supplementary magnetic field, reacts inductively upon the stator, to which the starting and speed regulating resistances are connected. The rotor in fact reflects back to the stator part of the energy received from it. This is accomplished by winding the rotor in such a way that it can, under the inductive action of the stator, simultaneously produce two magnetic fields of different numbers of poles; one of these reacts on the stator and generates in its winding induced currents. Each branch of the stator winding is divided into two parallel circuits which are tapped at suitable points. In the case of single-speed motors, or two-speed motors requiring starting or regulation with reduced rheostatic losses below two-thirds speed, these points are connected to resistances by which the torque and speed are controlled.

Owing to the presence of two magnetic fields, one of which is at its maximum when the other is at its minimum, a very even turning movement is obtained at slow speeds, and a perfectly even pull with maximum torque can be obtained at as low as two revolutions per minute. This is a feature of importance with all kinds of winding engines. The slip of an induction motor depends upon the resistance of the windings in which the secondary currents circulate. In the 'Cascade' motor, these windings are in the stator and are of very low resistance, consequently the slip in these motors is very much less than that of ordinary induction motors, and the speed variation between full load and no load is only about 1·2 per cent. For constant speed work the absence of slip-rings is a matter of moment, especially in mining installations. These motors develop full-load starting torque with full-load current, and have a higher power factor than ordinary motors at low speeds where the tendency is for the power factor to become unfavourable.

The question of economical running at two or more speeds is one of great importance. The synchronous motor must run in step with its generator, and the induction motor runs at a speed very nearly that of synchronism. The speed of the former cannot be varied, the speed of the latter can only be varied by inserting resistances in the rotor at great loss of efficiency. A simple modification of the windings of the 'Cascade' motor, described above, enables two speeds to be obtained without rheostatic losses. Slip-rings are connected to a normal rotor winding in star mesh connection. When these rings are open circuited, the portion of the winding connected to the slip-rings is idle, the rotor reacts on the stator, as previously described, and the motor runs at 'Cascade' speed. When the slip-ring circuit is closed, the rotor winding becomes symmetrical, and produces only one number of poles; there is no reflex action on the stator and the motor runs as an ordinary induction motor. Thus, for example, in a twelve-pole 'Cascade' motor, running at 500 r.p.m., there are two fields, one of eight and one of four poles, the latter being the result of rotor reaction. When this is removed by current through the slip-rings, the effective number of poles is eight, and the motor runs at 750 r.p.m. without any resistance. If intermediate speeds are required, they may be obtained by the use of resistances in the usual manner. Other economical speed changes can be obtained in addition by pole-changing, etc. A special application of the two-speed motor, apart from economical running at two speeds, is the avoidance of large starting peaks by two speed starting in connection with winding and similar work, combined with a reduction in starting losses.

A self-synchronising synchronous type of Hunt motor is now on the market and has many unique features. It resembles the Cascade Induction Motor, but has a modified form of stator winding. At synchronous speed the auxiliary field is stationary, and is excited by direct current supplied to the stator windings. These windings are connected to form two parallel-connected star windings, and the exciter is coupled to the neutral points. The direct current produces a field having half as many poles as the main field. The machine is started by resistances connected to the slip-rings, and when so connected the speed can be taken up to synchronous (Cascade) speed or even above it, so that all the usual difficulties of pulling-in are obviated. The motor will start and synchronise with loads of two to three times normal, and with a high starting-power factor and low-current consumption. With motors designed for a leading power factor of 0·7, the starting current for full-load torque is of the order of 10 per cent. to 15 per cent. more than normal full-load current, and the starting-power factor is 88 per cent. to 93 per cent., depending upon the speed for which the machine is built. A remarkable feature possessed by this machine is its entire immunity from 'hunting' or 'phase-swinging.' Extensive tests have been made, but no trace of these troubles has ever been found.

The latest development of the Hunt machine is a self-paralleling generator. This motor closely resembles the synchronous motor, but, as slip-rings are not required, the rotor winding is of the low-voltage short-circuited type as used for the induction motor. These machines possess the same properties as the synchronous motor, and will run in parallel under conditions which would be impossible with generators of the usual type.

AVERAGE EFFICIENCIES OF POLYPHASE INDUCTION MOTORS.

(*Meares.*)

Output, B.H.P.	1	5	10	20	50	100	150	200	300
Efficiency per cent.	80	85	86	88	89	90	91	92	93

Single-Phase Commutator Motors.

These motors are in most respects similar to ordinary direct-current series motors, with commutator and brushes. The armature is in series with the fields, and hence these motors are sometimes called single-phase series motors. In its simplest form such a motor would have a very low power factor, and would spark badly when run with alternating current. The sparking is largely due to the fact that the armature coils short circuited under the brush form a secondary to the corresponding field winding, a definite transformer action taking place. To overcome these objections special compensating arrangements have to be used. Thus in the Westinghouse motor, used on the Heysham branch of the Midland Railway, neutralising coils are employed to diminish the armature inductance. A further development of the single-phase commutator motor is known as the Repulsion motor, a modification of which has been adopted on the London, Brighton & South Coast Railway.

SMALL MOTORS.

(1)

Specification for Induction Motors, Classes A.G. (Squirrel-cage) and A.G.S. (Slip-ring).

(The English Electric Co.)

The standard machine consists of stator frame with end shields, rotor, terminals, and complete internal connections. Unless otherwise stated in the quotation, the machine is supplied without pulley, coupling, sliding base, foundation bolts, or spanners.

A.G. and A.G.S. Motors are usually supplied in the Protected or in the Enclosed-Ventilated type, but they are also made as Pipe-ventilated or Drip-proof Motors.

The *Protected type* motor is so designed that the internal rotating parts and live parts are protected mechanically from accidental or careless contact, a perforated metal cover being fitted to the cylindrical opening over the rotor fan.

The *Enclosed-ventilated type* is similar to the protected type, but a perforated metal cover is fitted over both cylindrical openings in the frame.

The stator frame is of cast iron. The stator core is built up of insulated stampings bedding directly on the stator frame. The coils are of the 'hair-pin' type in the larger sizes and of the 'dropped-in' type in the smaller sizes, the slots being nearly closed.

The rotor is built up of stampings with nearly closed slots.

In the case of squirrel-cage rotors the end rings are cast on to the rotor bars. The winding is specially designed to give a good starting torque.

In slip-ring rotors the ends of the windings are separated sufficiently to allow a free circulation of cool air.

A cast-iron terminal box is provided on the stator frame, and is fitted with a flange to take screwed conduit. Up to sizes A.G. 6 and A.G.S. 6 inclusive, for all pressures up to 650 volts, six terminals are provided. On sizes larger than these, six terminals are usually provided for all pressures up to 650 volts, but for certain 210-volt motors the standard terminal box will take three terminals only. For pressures above 650 volts three porcelain-insulated terminals are provided.

A trifurcating box can be supplied to fit the above-mentioned terminal box. A trifurcating box can also be supplied for the rotor leads.

End shields are in the form of end plates bolted to facings on the stator frame, and form substantial supports for the bearings.

Ball or roller bearings, or in certain cases a combination of both, are used, and are of ample proportions. On the larger machines a ball-thrust bearing is fitted.

The bearings are enclosed in dust-proof housings.

This type of bearing has stood the test of lengthy experience in practical use, and is particularly advantageous in the case of induction motors, as there is no appreciable wear of bearings, and consequently no change in the length of air gap after extended use. As the bearings will work equally well in any position, provided the shaft is horizontal, the motor may be fixed to wall or ceiling, without altering the position of bearings or end shields, as is necessary with ring-lubricated machines.

The slip rings are of phosphor bronze, and are arranged outside the end shield on an extension of the motor shaft. There is no earth connection to the slip rings.

The standard design permits of the addition of a short-circuiting and brush-lifting device, by which, through the movement of a hand wheel, the slip rings are short circuited and the brushes lifted out of contact with the rings, thus increasing the efficiency of the motor and reducing wear on both slip rings and brushes. With this device, a cover giving total enclosure to the slip rings is always supplied, and the brush holders are of the lever type.

If the short-circuiting and brush-lifting device is not provided, the slip rings are enclosed in a perforated metal cover and box-type brush holders are used.

The following accessories are supplied as extras, if required :—

Pulley, standard or otherwise, or half-coupling or flexible coupling.

Sliding base, with adjusting screws and four bolts for fixing the motor to the base.

Foundation bolts for fixing the sliding base to the foundations.

Spanners and spanner rack.

(2)

Specification for Direct-current Machines, Class C.B.

(The English Electric Co.)

These machines are of the two end-shield type, and are supplied with standard shaft extension but without pulley, coupling, sliding base or foundation bolts, unless otherwise ordered.

Commutation poles are fitted as standard on all sizes from C.B. 7 upwards.

C.B. machines are usually supplied in the Protected or in the Enclosed-ventilated type, but they are also made as Pipe-ventilated, Drip-proof, or Totally-enclosed machines.

The *Protected type* motor is so designed that the internal rotating parts and live parts are protected mechanically from accidental or careless contact, a perforated metal cover being fitted to the cylindrical opening over the armature fan.

The *Enclosed-ventilated* type is similar to the Protected type, but a perforated metal cover is fitted over both cylindrical openings in the frame.

The frame is circular, of cast steel. The four main poles are bolted to the frame and are laminated except in the smallest sizes, C.B. 5 and C.B. 6, which have solid poles. Commutation poles, when fitted, are of solid wrought iron.

End shields are in the form of end plates bolted to facings on the magnet frame, and form substantial supports for the bearings.

Ball or roller bearings, or in certain cases a combination of both, are used, and are of ample proportions. On the larger machines a ball-thrust bearing is fitted.

The bearings are enclosed in dust-proof housings.

This type of bearing has stood the test of lengthy experience in practical use. It requires practically no attention. As the bearings will work equally well in any position provided the shaft is horizontal, the motor may be fixed to wall or ceiling without rotating the end shields, as is necessary with ring-lubricated bearings.

The field coils of all sizes are former wound, thoroughly impregnated and taped all over. All coils are heavily insulated from the poles and the frame, to safeguard against earthing.

The armature is slotted and drum wound, and is specially designed to give thorough ventilation of the windings, core, and field coils. The core plates are keyed directly to the shaft, and are held in position by two end flanges. The windings are carefully impregnated.

The commutator is built up of segments of hard-drawn copper which are held in position by end flanges fitting into deep V grooves in the segments.

The brush rocker which carries the brush spindles is mounted on a turned seating on the end-shield. The brush holders are substantial castings, and the brushes are easily replaceable.

A terminal box is arranged on the magnet frame, and is provided with a cast-iron cover. A flange is provided on the terminal box to receive screwed conduit.

The standard direction of rotation is counter-clockwise when viewed from the commutator end; if the opposite direction of rotation is required, this must be stated on the order.

The following accessories are supplied as extras, if required:—

Pulley for rope or belt (standard or otherwise) or half-coupling or flexible coupling.

Sliding base with adjusting screws and four bolts for fixing the machine to the base.

Foundation bolts.

British Engineering Standards Association's Standardisation Rules for Electrical Machinery.*

(No. 72—1917.) (*Abstract.*)

Rating of Machines.

Two classes of rating are recognised by these Rules:—

(*a*) Continuous Rating. (*b*) Short-time Rating.

(*a*) The British Standard for continuous rating is the output at which a machine can work for an unlimited period and comply with these rules. This rating includes the equivalent of the over-load allowance formerly made.

(*b*) Two standards for short-time rating are recognised, namely, the output at which a machine can work (i) for one hour, (ii) for one half-hour, and comply with these rules.

Variable-speed machines are to have a definite rating for each of the limiting speeds specified.

The maximum temperature of the cooling air is fixed at 40° C., and the rating is based upon the observable temperature and the temperature rise above this value, varying with the insulating material employed. For cotton, silk, paper, etc. (impregnated), and enamelled wire the final temperature of rotating armatures with commutators must not exceed 90° C.; continuous-current field coils, A.C. windings in slots, and transformer windings, 95° C.; commutators and slip-rings, 90° C. When the insulating material is asbestos, mica, etc., the limit is 20° C. higher in each class. Unimpregnated materials are limited to a temperature 10° C. lower than the same materials when impregnated.

The temperature is to be measured by resistance in some cases, by thermometer where the resistance method is inapplicable. If R_2 = the resistance hot and R_1 = the resistance cold, and t_2 the initial temperature, the final temperature of the winding $= t_2 + (R_2/R_1 - 1)/\text{temp. coefficient}$. The temperature coefficient is calculated from the formula $1/(234{\cdot}5 + t_2)$, and at 15° C. = 0·00401.

* By permission of the British Engineering Standards Association.

Mechanical Tests.

Any machine with continuous rating must be able to withstand on test for 15 seconds a load in amperes 100 per cent. in excess of the British Standard rating; an induction motor must withstand without stalling a torque 75 per cent. in excess of its standard rating. Motors for intermittent service must withstand a torque 100 per cent. in excess of the standard rating, and (except squirrel-cage induction motors) exert a starting torque 100 per cent. in excess of the standard.

Dielectric Tests.

High-pressure tests are to be applied for one minute between the windings and the frame of the machine with the core connected to the frame. The test pressure (R.M.S.) varies from twice rated pressure + 500 volts in machines below 746 watts, and twice rated pressure + 1,000 volts in larger machines, to three times rated pressure in machines over 3,000 kw. and up to 5,000 volts, and ten times rated pressure in the case of rotating field coils. The insulation resistance, in megohms, should not be less than

Rated pressure in volts / (1,000 + Rated output in kva.) with a minimum of one megohm, using a pressure of 500 volts D.C.

Rating Plate.

Full particulars are to be given on the rating plate of the machine, including, in the case of a three-phase transformer, a vector diagram showing the general phase relations; a special system for marking the terminals is also prescribed.

Electrical Pressures, etc.

The pressures in most general use (apart from traction) are for continuous current 110, 220, 440, and 500 volts, and for alternating current 200, 400, 500, 2,000, 3,000, 6,000, and 10,000 volts. Generators are usually standardised according to their destination, motors, for the above-named D.C. voltages, and for 200, 400, and 500 volts A.C. The standard frequency for A.C. machines is 50 cycles per second, and the standard number of phases three, the wave-form to be approximately sinusoidal.

British Standard Switch-gear.

Specifications for air-break switches and circuit breakers for pressures up to 660 volts are given in the *British Engineering Standards Association's Reports* Nos. 109 and 110, 1921. Researches are in progress with regard to the rupturing capacity, etc., and in the meantime the specifications do not apply to switch-gear for use in circuits containing high inductance. Lists of standard current ratings are given, and it is specified that the temperature rise on continuous full load shall not exceed 20° C. for switch-gear rated below 100 amperes, or 30° C. for 100 amperes and upwards.

Marble or slate slabs must be free from metallic veins, and, if of slate, must be treated all over with a damp-proof medium; the slabs are to be insulated from fixing bolts and the supporting framework. The sizes of round copper-back connections and their spacing are tabulated in the Reports. The test pressure to be applied to a switch or circuit breaker is 1,000 volts plus twice the rated pressure, with a minimum of 2,000 volts alternating.

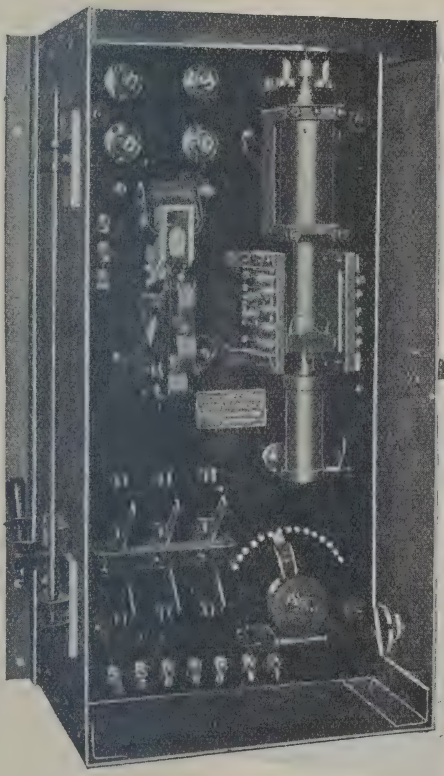
In the case of circuit breakers, the temperature rise of coils is not to exceed 50° C., nor the actual temperature 90° C., unless the insulating material consists of asbestos, mica, or air, in which case the limiting values are 70° and 110° C. respectively. Reverse-current devices must be capable of operating with 15 per cent. or less of the rated current; low-voltage releases must not operate unless the pressure falls to 65 per cent. or less of the rated pressure, but must operate before the pressure falls below 25 per cent. of the normal, at the rated frequency. A reverse-current circuit breaker must not be rendered inoperative if the pressure across the potential coil falls to (Class A) zero, (Class B) 50 per cent. of normal, and a reverse-current device must not operate with a forward current of any magnitude. Magnet-closing circuit breakers must operate between the limits 20 per cent. below and above normal pressure, and pressure-operated tripping coils must operate between the limits 50 per cent. below and 20 per cent. above normal pressure, at 40° C.

When type tests have been made by a recognised authority, a millivolt drop test is to be accepted in lieu of a temperature test.

ELECTRO-MECHANICAL BRAKES.

Electro-mechanical brakes are used in connection with a variety of electrically driven machines, such as lifts, cranes, hoists, elevators, conveyors, rolling mills, paper reeling, slipways, presses, machine tools, etc., where either a quick 'stop' or adjustable gradual 'stop' is desired when the power is cut off either intentionally or unintentionally.

D.C. Automatic Electric Control Gear.



Manufacturers
of the
'ELEVANJA'
Automatic
Fool-proof
Switch Gear
for the
Control of
Electrically Driven
Lifts, Cranes,
Hoists,
Transporters,
Pumps,
Air Compressors,
Machine Tools,
Printing
Machinery, etc.

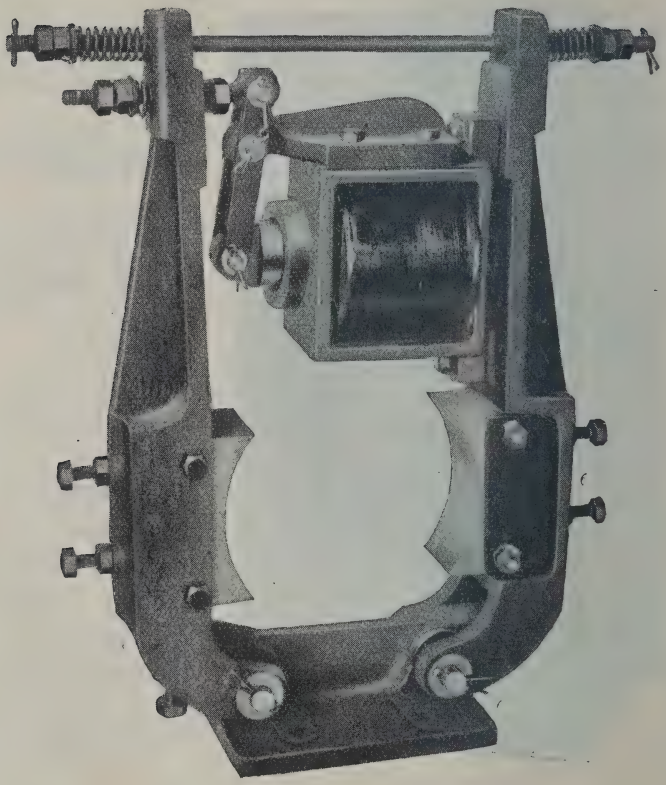
Full particulars from

ELLISTON, EVANS & JACKSON, LTD.,
13 Cross Street, London, E.C.2.

F. 1916

ELECTRO-MECHANICAL

BRAKES



ELLISTON, EVANS & JACKSON, Ltd.,

13 CROSS STREET, FINSBURY, E.C. 2.

Telephones: Clerkenwell 1924 & 1925. Telegrams: 'Elevanja, Avenue, London.

F. 1917

These brakes consist primarily of an electro magnet which operates the brake blocks through a system of levers or other medium. The magnet is so arranged that, when the current is applied, the magnet is energised and lifts the brake blocks from the drum. If for any reason the current is cut off the magnet is de-energised and the brake blocks are pressed against the drum, the requisite pressure being obtained by springs, weights, or a combination of each.

The brakes are quite automatic in action; thus, in the case of an electrically driven crane, as soon as the driver applies the current to the motor to raise the load the brake is automatically released, and when he switches off the cuerent to stop the brake is immediately applied. Should for any reason the supply current fail, the brake automatically goes on and takes charge of the load.

It is desirable that an electro-mechanical brake should have the following features: compactness of design, robust construction, few and simple working parts, easy adjustment for brake blocks and pressure exerted by same. Coils should be liberally rated, well insulated, and protected from mechanical injury, and so placed that they are not likely to be damaged by oil exuding from the machine. The brake blocks should be readily renewable. If springs are used they should be of the compression pattern.

(*Elliston, Evans & Jackson, Ltd., London.*)

AUTOMATIC CONTROL GEAR.

(*Electric Control Ltd., Empire Works, Glasgow.*)

An automatic controller entirely eliminates the personal judgment of the operator in many cases, which is a distinct advantage where men accustomed to heavy work such as is met with in shipyards, steel mills and the like, are called upon to start up large machines. The controllers are now made suitable for practically any purpose, any horse-power, any supply, and for any particular design of motor requiring special starting apparatus.

The foolproof nature of automatic gear is not the only or the principal argument in its favour as compared with hand-operated controllers under frequent and heavy service.

An automatic controller is one in which the current supply to the motor is regulated by means of one or more switch units, each unit being operated by an electro-magnet; the operation of the magnet is controlled by an auxiliary switch, which therefore only has to deal with very small magnet-currents. This auxiliary switch can be put at any distance from the motor in the most convenient place, whereas the main automatic controller can be installed beside the motor, thus effecting the greatest economy in cable connections.

The original face-plate type of starter, which is still the standard type for moderate size motors starting up only a few times per day, has had to give place to the drum type controller for frequently operated motors as on cranes. This type of controller has been greatly improved in its mechanical and electrical construction, but its design has such inherent limitations when it has to deal with the large currents now employed that excessive wear of the contacts is produced. This necessitates constant attention to the wearing parts, and high maintenance charges. By inherent limitations is meant the fundamental fact that in order to carry larger currents the contact pressures must be increased, and such increase greatly increases the mechanical wear, so that in some cases the contacts may have to be renewed after a few weeks' operation. With an automatic controller of proper design, the wear is very much less, and does not increase with the size of the controller. Contacts operating under severe conditions will only require renewal about once or twice a year.

D.C. motors are controlled by a number of solenoid-operated switches or 'contactors' fitted with powerful magnetic blow-outs and arc shields; they are electrically interlocked so that they can only close in correct sequence, and so arranged that the motor cannot be started up except with all resistance in the armature circuit.

In almost all cases the time intervals between the closing of successive contactors depend upon the acceleration of the motor. This is generally determined by means of series relays fitted to each contactor except the last one. These relays are in the main motor circuit, and are adjusted so as to operate when the motor current drops to the value at which further acceleration is impossible. The operation of the relay closes the control circuit of the next contactor, which therefore closes, thereby cutting out a section of the resistance and speeding up the motor. This is repeated each time until the motor reaches full speed. It is thus evident that the motor current

is kept within safe limits while the motor is accelerated to full speed in the minimum time, which means the minimum loss of power in the starting resistances.

The automatic control of any A.C. motor is now as reliable as with a D.C. motor, for A.C. switches and contactors are manufactured for controlling motors of any horse-power on high or low tension supplies. A standard controller for a slip-ring motor consists of a stator switch or contactor and a number of D.P. rotor contactors complete with relays, the number depending on the h.p.

The stator switch coil is controlled by a small switch, accumulator switch or float switch, pressure regulator or other means, and on being energised closes the stator switch automatically, and the motor is connected to the mains with all the rotor resistance in circuit.

A time element controls the closing of the first D.P. rotor switch, which, on closing automatically, cuts out a section of the resistance in the three phases of the rotor circuit. As with the D.C. set, this is repeated until the motor is up to full speed with the leads to the rings short-circuited.

Pumps are arranged to stop and start according to the rise or fall of water in a tank by means of float gear and an automatic controller. The automatic control of air compressors is being universally adopted on account of the great convenience and economy effected in many cases, irrespective of the benefit of the elimination of skilled attendance.

Each plant requires individual investigation in order to ascertain the most economical method of control. On a D.C. or A.C. supply the compressor can be arranged to stop and start at maximum and minimum pressures only, or to stop and start at maximum and minimum pressures, the speed being reduced or increased between certain definite pressures, unloading at starting, or to run continuously, unloading only at maximum pressure, when the demand for air is great.

Since last year the eddy-current controller for slip-ring motors has been still further developed, and some of the results obtained are noteworthy.

Three solid steel cores of several inches diameter are fixed between solid steel end plates which are fitted with eye-bolts for lifting purposes. Three coils are supported by these cores, and coupled up in either 'star' or 'delta.' The coils are protected by planished steel covers or perforated sheet. The controller has no moving parts whatever.

For steel mill service, especially for live roll gears, these starters have proved eminently satisfactory, and have in fact many advantages over the contactor-type controller. A live roll equipment consists of master switch and mechanically interlocked contactors for the stator, if over 30 h.p., and master switch only if under. In addition to this, the electrical equipment is complete with the addition of the eddy-current starter, which is connected to the slip-rings of the motor without any brakes or braking contactors.

The equipment could not possibly be simpler, and the operation is perfect, for all the usual steel mill requirements can be carried out, and the possibilities of breakdown are made still more remote than they were with contactor gear.

The eddy-current starter limits the starting current, and yet gives the motor ample starting torque, and has proved satisfactory when operating 500 to 800 times an hour. The current at starting on this duty is about 2½ times full load running current, and the plant reaches full speed in about three seconds.

One of the greatest advantages of this type of starter, apart from its simplicity and fool-proof features, is the braking effect produced on quick reversals. Though very powerful, the braking is effected without jarring, and there is in consequence no clashing of gearing.

On reversing the stator switch twice, line frequency and voltage are applied to the starter, which produces a retardation about twice as quick as the initial acceleration. For plate edge planers this point is especially noteworthy, for the slowing down, reversing, and accelerating in the opposite direction is automatic, certain, and done in the shortest possible time, thus increasing output and the range of the machine.

Live rolls can be reversed from full speed in one direction to full speed in the opposite in 2½ seconds, and by manipulation of the master switch 'inching' can be done as with contactor resistance controllers.

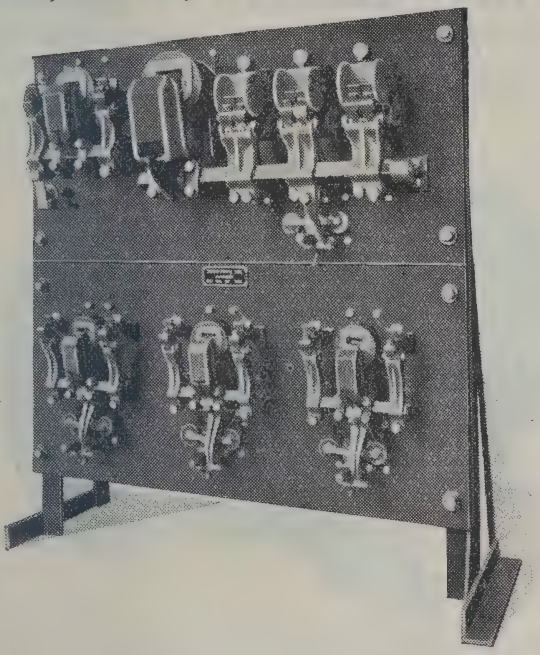
One further advantage which commends the gear to many steel works engineers is the fact that there are no adjustments possible or necessary, and in consequence any mechanical defect shows up immediately and can be rectified. With contactor gear, adjustment of relays enables the plant to be speeded up to the detriment frequently of plant and motor.

'EMPIRE'

AUTOMATIC CONTROLLERS

for

CRANES, HOISTS, CONVEYORS AND CAPSTANS



A.C. CONTRACTOR TYPE CONTROLLERS

of the type illustrated are made up to 1,000 H.P. for all Voltages and Frequencies.

ELECTRIC CONTROL LIMITED

EMPIRE WORKS, GLASGOW.

When a current flowing in a circuit lags θ degrees behind the impressed e.m.f., the current may be regarded as equivalent to two separate currents at right angles to one another, i.e. one 90° in time behind the other, one of these components being in step with the impressed e.m.f. and the other at right angles to it. If I be the current as actually flowing, then the value of the component in step with the e.m.f. is I cos θ; this is called the power component of the current. The other component is I sin θ, and is called the wattless component. Hence the true power in an alternating circuit is given by the product E × I cos θ, and for this reason cos θ is called the power factor.

Drop in Alternating Current Lines.

Fig. 28 is a vector diagram giving the relations between the e.m.f. of the line, the load, and the generator. E is the e.m.f. of the generator, and e the e.m.f. impressed upon the load; a and b are respectively the ohmic and inductive components of c, the impedance drop of the line; f and g are respectively the ohmic and inductive components of e. The ratio of f to e is the power factor of the load, or the ratio of the true to the apparent watts. The difference between E and e is the drop in the line, or the regulation volts, i.e. the rise in the generator e.m.f. required to maintain the impressed e.m.f. constant. This difference is equal to d, the radial distance between the arc drawn with E as radius and that drawn with e as radius.

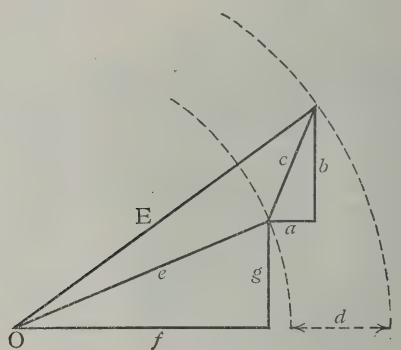


FIG. 28.

The inductive component of c is due to the alternating field set up round the conductor by the current, and the strength of this field depends upon the current, the distance apart of the wires, and the size of the wires. The number of lines of force per ampere per centimetre of length of two parallel wires δ cm. apart and of α cm. radius is given by Maxwell's equation:

$$L = \left(4 \operatorname{Log}_e \frac{\delta}{\alpha} + 1\right) 10^{-6} \text{ millihenries.}$$

The reactance voltage per ampere at N periods per second is then given by the equation

$$e = 2\pi NL10^{-3} \text{ volts.}$$

In the accompanying table are given the reactance volts per ampere as calculated by this formula for various sized wires placed at different distances apart (1) for 1,000 ft. of line of two parallel wires; (2) for one mile of line of two parallel wires. The periodicity assumed in the table is 60~ per second, the reactance volts for any other periodicity will be in proportion to the number of cycles. Values for other distances apart can readily be found by interpolation. From the above equation for L it is seen that the reactance is the same so long as the ratio of the diameter of the wire to the distance apart remains constant.

TABLE OF VOLTAGE DROP IN ALTERNATING-CURRENT LINES.

Size of Wire B. & S.	Weight in lbs.	Resistance Volts of Line per ampere.	Reactance-Voltage per ampere at 60 cycles per second for the distances given, between centres of conductors.										
			½ in.	1 in.	2 ins.	3 ins.	6 ins.	9 ins.	12 ins.	18 ins.	24 ins.	30 ins.	36 ins.
			1000 feet of line (2,000 feet of Wire)										
0000	1,278	·098	·046	·079	·111	·130	·161	·180	·193	·212	·225	·235	·244
000	1,014	·124	·052	·085	·116	·135	·167	·185	·199	·217	·230	·241	·249
00	804	·156	·057	·090	·121	·140	·172	·190	·204	·222	·236	·246	·254
0	638	·197	·063	·095	·127	·145	·177	·196	·209	·228	·241	·251	·259
1	506	·248	·068	·101	·132	·151	·183	·201	·214	·233	·246	·256	·265
2	402	·313	·074	·106	·138	·156	·188	·206	·220	·238	·252	·262	·270
3	318	·394	·079	·112	·143	·162	·193	·212	·225	·244	·257	·267	·275
4	252	·497	·085	·117	·149	·167	·199	·217	·230	·249	·262	·272	·281
5	200	·627	·090	·121	·154	·172	·204	·223	·236	·254	·268	·278	·286
6	158	·791	·095	·127	·158	·178	·209	·228	·241	·260	·272	·283	·291
7	126	·997	·101	·132	·164	·183	·214	·233	·246	·265	·278	·288	·296
8	100	1·260	·106	·138	·169	·188	·220	·238	·252	·270	·284	·293	·302
			One mile of line (Two miles of Wire)										
0000	6,752	·518	·243	·417	·586	·687	·850	·951	1·02	1·12	1·19	1·24	1·29
000	5,354	·653	·275	·449	·613	·713	·882	·977	1·05	1·15	1·22	1·27	1·32
00	4,246	·824	·301	·475	·639	·739	·908	1·00	1·08	1·17	1·25	1·30	1·34
0	3,370	1·04	·332	·502	·671	·766	·935	1·04	1·10	1·20	1·27	1·33	1·37
1	2,670	1·31	·359	·533	·687	·797	·966	1·06	1·13	1·23	1·30	1·35	1·40
2	2,118	1·65	·391	·560	·728	·824	·993	1·09	1·16	1·26	1·33	1·38	1·43
3	1,680	2·08	·417	·591	·755	·856	1·02	1·12	1·19	1·29	1·36	1·41	1·45
4	1,332	2·63	·449	·618	·787	·882	1·05	1·15	1·22	1·32	1·38	1·44	1·48
5	1,056	3·31	·475	·639	·813	·908	1·08	1·18	1·25	1·34	1·42	1·47	1·51
6	838	4·18	·502	·671	·834	·940	1·10	1·20	1·27	1·37	1·44	1·49	1·54
7	664	5·27	·533	·697	·866	·966	1·13	1·23	1·30	1·40	1·47	1·52	1·56
8	526	6·64	·560	·729	·893	·993	1·16	1·26	1·33	1·43	1·50	1·55	1·60

The following example illustrates the use of the table:—Let it be required to transmit 1,000 kilowatts ten miles, at 10,000 volts, 25 cycles, with a power factor of 80 per cent., using No 0 B. & S. copper conductors spaced 36 inches apart. The apparent power will be $1{,}000 \div 0{\cdot}8 = 1{,}250$ kilovolt-amperes, the current being therefore 125 amperes. From the table, the resistance drop per mile of line is 1·04 volts per ampere, or for 10 miles at 125 amperes $10 \times 125 \times 1{\cdot}04 = 1{,}300$ volts; the reactance drop per mile from the table is 1·37 volts per ampere at 60 cycles, or for 125 amperes 10 miles at 25 cycles the total drop is $10 \times 125 \times 1{\cdot}37 \times 25 \div 60 = 713{\cdot}5$ volts. The impedance drop may be found by measuring the hypotenuse of a right-angled triangle with sides proportional to the resistance and reactance voltages respectively, or by calculation it equals $\sqrt{1{,}300^2 + 713{\cdot}5^2} = 1{,}483$ volts. Hence the generator pressure should be 11,483 volts.

The above calculations assume a single-phase transmission. A simple transposition makes the table serviceable in the case where three-phase currents are used. A three-wire three-phase transmission in which the conductors are symmetrically related may, so far as loss and regulation are concerned, be replaced by two single-phase circuits having no inductive interaction, and identical with the three-phase line as to size of wire and distance between wires. Therefore to calculate a three-phase transmission, calculate a single-phase circuit to carry one-half the load at the same voltage. The three-phase transmission will require three wires of the same size and distance between centres as obtained for the single-phase. If the regulation volts be given, and it is required to find the proper size of the wire, the result must be obtained by trial. Assume a size of wire and calculate the drop. The table will indicate the direction and extent of the change necessary in the size of the wire.

TABLE SHOWING INCREASE IN RESISTANCE OF COPPER WIRES BY INCREASE OF ALTERNATING-CURRENT FREQUENCY.

$n\,d^2$	K	$n\,d^2$	K	$n\,d^2$	K
0	1·0000	720	1·3180	2,880	2·3937
20	1·0000	980	1·4920	5,120	3·0956
80	1·0001	1,280	1·6778	8,000	3·7940
180	1·0258	1,620	1·8628	18,000	5·5732
320	1·0805	2,000	2·0430	22,000	7·3250
500	1·1747	2,420	2·2190		

n = frequency; d = diameter of wire in centimetres; K = increase in resistance.

(*M. E. Hospitalier.*)

Size of Mains for Alternating-current Circuits.

In calculating the cross-sectional areas of conductors for the transmission of power by alternating currents, the stress on the insulating material, the loss in the line, the power factor of the load, and the A.C. system employed should be taken into consideration. The simplest plan is first to calculate the size of conductor required to transmit the given power by direct current, using two conductors, and then to ascertain the size of the corresponding A.C. conductor by means of the table given below.

For the same virtual voltage, the stress on the insulation of A.C. mains is 1·4 times as great as in the case of D.C. mains; this must be taken into account when high voltages are concerned, but is usually disregarded when dealing with low voltages. The table therefore gives the multipliers for the same virtual voltage in each case, with the same percentage drop of volts in the line, i.e. the same line efficiency.

System.	Power Factors.				
	1	0·95	0·90	0·85	0·80
D.C. two-wire (unity power factor)	1	1	1	1	1
A.C. Single-phase, two-wire	1	1·052	1·111	1·176	1·250
A.C. Two-phase, four-wire A.C. Three-phase, three-wire	0·5	0·526	0·556	0·588	0·625

If KW = the power transmitted in kilowatts, E the supply pressure in volts, p the percentage drop in the line (referred to the supply pressure), and L the total length of the conductor (twice the distance) in feet, the cross-section of the conductor for D.C. two-wire is given by :—

$$A = 0{\cdot}8\ KW \times L / p\ E^2 \text{ in sq. inches,}$$

for a temperature of 15·5° C. (60° F.)

Having found the D.C. cross-section A, the corresponding cross-section of *each conductor* for any of the other systems can be found by multiplying A by the factor given in cols. 2 to 6 of the above table, in accordance with the power factor of the circuit.

No account is here taken of the capacity of the line, which would be of importance in the case of a long transmission, or of increase of resistance of the line due to a rise of temperature or of 'skin effect.'

TRANSFORMERS.

TRANSFORMERS IN PARALLEL.

The simple distributing transformer usually has two high-voltage leads and four low-voltage leads coming out from its windings, as indicated in fig. 1 (p. 1923). It will be seen from fig. 2 that the two centre leads of the low-voltage coils are crossed inside the transformer before they are brought out through the case. This does not make any change in connecting the two sections in series on the outside of the transformer, as this is the same as connecting two batteries in series.

When the coils are connected in parallel, care must be exercised and adjacent leads connected together, as in fig. 4. Looking at the connections from the outside of the transformer, it would appear as though the two sections of the winding were short-circuited, but the diagram shows that the right-hand terminals of each section are connected together, also the left-hand terminals. This is just what is done in connecting batteries or other direct-current elements in parallel—like poles are connected.

Transformers to operate in parallel should be the same voltage, frequency, size, and possess the same characteristics, which means that they should be of the same make. In connecting transformers in parallel, it is only necessary to observe the same rules as used for connecting two or more pieces of direct-current apparatus in parallel; namely, connect like poles to like poles. The question now arises which are like terminals on two or more transformers. This is easily determined in most cases. After the transformers are arranged symmetrically, as in fig. 5, connect the right-hand terminals together and the left-hand terminals together and bring out a lead from each junction point, as indicated.

There is, however, a chance that one of the transformers may have its leads brought out in such a way as to cause a short-circuit when the transformers are connected as shown in the figure.

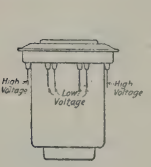
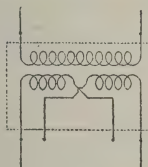


Fig.1


Fig.2

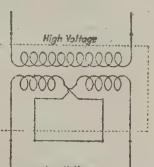


Fig.3

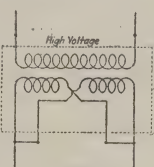


Fig.4

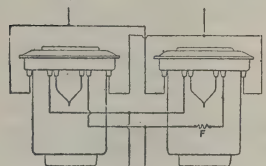
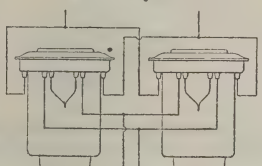


Fig.5


Fig.6

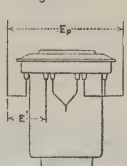


Fig.7

To guard against this a piece of small fuse wire may be connected, as indicated at F. If the connections are correct, the fuse will not blow when the transformers are made alive without load, otherwise the fuse will blow. In case of a wrong connection it may be remedied by crossing either the high or low-voltage leads on one of the transformers, as indicated in fig. 6. A better way would be to test the transformers and find out which has wrong polarity and correct it.

The polarity may be tested as represented in fig. 7. Connect the high-voltage terminals to the line and with one terminal of the low-voltage coil to the high-voltage winding, as indicated in the figure. Measure the electromotive force at E_p and E'. If it is greater at E' than at E_p, the transformer has the correct polarity; if less, the polarity is wrong and either the high or the low-voltage leads must be crossed inside the transformer. The test may be made with 110 or 220-volt current. (*Power.*)

Notes on Transformers.

To seal up holes in transformers or oil-switch cases where wires pass through, a mixture of sulphur and plaster of Paris may be used; if the two are mixed half and half it gives a very hard substance when it has set, and one that is impervious to transformer oil. The sulphur should be melted in a ladle or pot and then an equal quantity of plaster of Paris mixed thoroughly into it. This mixture should be poured into place while hot.

Trouble is often experienced from oil being siphoned out of transformer cases on account of the braided insulation on the lead wires. When this takes place it is usually found that the insulation on the wires dips down into the oil. If the oil level is lowered below the terminal board inside the case and the insulation on the leads scraped off so that where the wire enters the surface of the oil its metallic surface only is exposed to possible contact with the oil, and the leads are properly sealed, there will be little trouble due to siphon action.

Static Balancers.

In three-phase distribution circuits, the voltages commonly used for power purposes are often too high for lighting circuits; accordingly, where lighting is desired, it is necessary to introduce some means of obtaining a reduced voltage. A customary method of providing for this is to take advantage of the fact that by using a star connected generator or transformer having its secondary winding connected in star, it is possible to obtain between any one phase and the neutral point of either generator or transformer a reduced voltage. For example, in a circuit with 400 volts between the phases, it is possible, by taking out a connection from the star point, to obtain a voltage between this point and any one phase of $\frac{400}{\sqrt{3}} = 230$ volts only. To do this, however, the generator or transformer has to be star connected in such a manner that a cable can be brought out from the star point, and this cable must be led to the point where lighting is required. Apart from the cost of this cable, which for any distance is considerable, any out-of-balance lighting would cause unbalanced voltages due to the resistance of this cable and thus would affect the

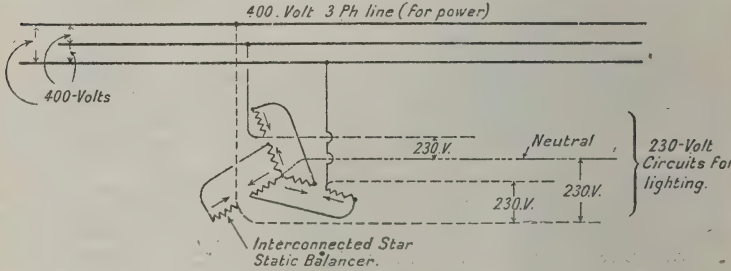


FIG. 29.

lighting detrimentally. Alternatively to the above arrangement, it is possible, by using static balancers, to save the cost of the cable referred to, and also to minimise very largely the out-of-balance effects.

The Westinghouse static balancer, which is shown diagrammatically in fig. 29, consists of a three-phase auto-transformer having a lead brought out from the neutral point of the windings, and the three phases so inter-connected, that current flowing through the neutral passes equally through them.

Static balancers for ordinary industrial conditions are quite small, and of correspondingly low cost. On a 100-k.v.a. circuit, with a maximum out-of-balance current not exceeding 25 per cent. of the full-load current in the outers, a balancer would be similar in size to a 5-k.v.a. transformer, and under these conditions, the out-of-balance of the phase voltage would correspond to one-third the percentage voltage drop of such a 5-k.v.a. transformer. In cases where the voltage required for lighting is not exactly but only approximately the line voltage divided by $\sqrt{3}$ a combined balance and auto-transformer may be used to advantage.

The advantages gained by using static balancers are: (1) The balancer may be placed at any point on the system where lighting is required and the length of neutral wire greatly reduced. (2) The drop in the neutral wire is much reduced, so that better voltage balancing is obtained between the different phases. (3) The current is more equally distributed between the line wires. (4) A standard polyphase wattmeter can be used instead of a special four-wire wattmeter. (5) It is possible to supply a four-wire circuit from a transformer group connected in star-star or star-delta, thereby saving in the cost of the main transformers.

Power Factor Improvement.

With the continual growth of alternating current distribution, the necessity of improving the power factor resulting from an industrial load has become more and more apparent, as a low power factor, by reducing the working capacity of the generating plant and mains and lowering the efficiency of the system, adds to both the fixed and the running charges, besides unfavourably influencing the voltage regulation of the network. In fig. 30 curves are given for commercial induction motors at 500 and 1,000 r.p.m., showing the effect of output and speed on the power factor at various loads.

The power factor can be raised by three methods :—(1) Static condensers ; (2) Rotary condensers ; (3) Phase adjusters.

(1) Static condensers afford the simplest, cheapest, and most efficient solution of the problem, as they require no attendance and involve very little loss of energy. In the *General Electric Review* of August 1918, W. P. Taylor gives a diagram, fig. 31 (page 1926), by means of which the capacity of the static condenser required to neutralise more or less completely

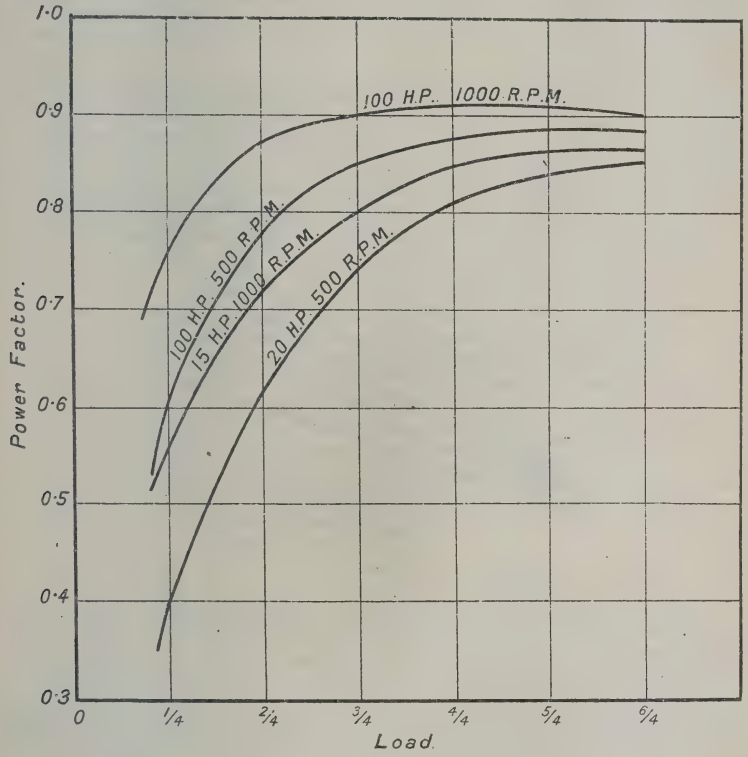


FIG. 30.

the wattless component of the power can be determined. The use of the diagram is best explained by an example. An A.C. feeder carries a current of 500 amperes at 500 volts, and the power factor is 0·6 ; required the capacity necessary to raise the power factor to 0·9. Taking on the 0·6 p.f. line the point corresponding to 250 k.v.a., it will be found that the wattless k.v.a. (ordinate) is 200 and the energy kw. (abscissa) 150. The 150-kw. ordinate cuts the 0·9 p.f. line at a height corresponding to 73 wattless k.v.a. Subtracting 73 from 200 gives 127 k.v.a. as the required condenser capacity. Similarly 88 k.v.a. would raise the power factor to 0·8 and 47 k.v.a. would raise it to 0·7.

The effect of added capacity is greatest when the power factor is lowest ; owing to the relatively large capacity required to bring the power factor up to unity, it is not commercially advisable to attempt to raise it much above 0·9. The condensers should be fixed near the load, in order to improve the power factor in the mains as well as at the generator. The condensers should be disconnected at times of light load, lest the leading current they then take should lower the

power factor, thus bringing about the evil they are meant to remedy. High voltage and high frequency are favourable to the use of static condensers; they are made for pressures up to 750 volts by the *British Insulated and Helsby Cables, Ltd.*, and for higher pressures they are connected in series. In the case of low pressures such as 400 volts, it may be found economical to install transformers to raise the voltage at the terminals of the condensers, thus reducing the capacity required. Another method is to insert a suitable amount of inductance in series with the condensers, whereby the pressure across the latter is increased. To protect the condensers, the control switches should be fitted with overload trips, and to prevent accidents due to the stored-up charge, provision should be made for discharging the condensers through resistances when they are switched off. The efficiency of condensers exceeds 99·5 per cent.

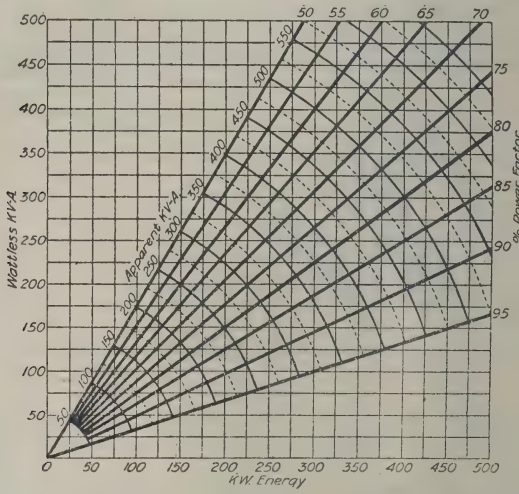


FIG. 31.

(2) Rotary condensers are simply synchronous A.C. motors, over-excited so as to take a leading current, in which condition they act like static condensers. The motor may be run without load, but in this case the method is costly, and it is preferable to use a loaded motor. A rotary converter can be employed for the same purpose. The necessary capacity to produce a given improvement in the power factor of the system is determined in the same way as that of static condensers, using fig. 32; the greater the mechanical load on the motor, the less will be its condenser effect, the rule being that the square of the k.v.a. capacity of the machine is equal to the sum of the squares of the kw. load and of the wattless k.v.a., so that the motor is used to the best advantage when the wattless output = the power output × 0·71 of the k.v.a. rating of the motor. The synchronous motor is usually started up as an induction motor with the aid of an auxiliary squirrel-cage winding embedded in the poles of the field system, or by means of an induction motor coupled to the same shaft, the field being unexcited until full speed is attained; direct-current excitation must be provided, either by a direct-coupled exciter or by an external source.

(3) The phase adjuster is a special machine, resembling a commutator induction motor, which is coupled to the slip-rings of an induction motor whose power factor needs correction, and is mechanically driven, either from the shaft of the main motor or by a small separate motor, the power taken being only that required to overcome friction and windage, and being fully compensated by reduced losses in the main motor. The function of the phase adjuster is to supply the magnetising current for the motor, thus raising the power factor to unity, or even passing that point and supplying current to the system to compensate for low power factor in other machines. An oscillatory type of phase adjuster is also made. A great advantage of this method is that the power factor of the individual motor is improved, so that a smaller motor can be used, with reduced losses. Advantages common to all methods are that the losses in the generators and cables are reduced, and the load factor of the plant is raised so that fewer generators need be run, and considerable economy of fuel as well as of capital outlay can be effected.

Ground Detectors.

Ground Detectors are required in mining work in stations covered by the following extract from the Home Office Rules :—

> ' In every completely insulated circuit, earth or ground detectors shall be kept connected up in every generating and transforming station, to show immediately any defect in the insulating of the system.'

Generally Ground Detectors are either one or other of two kinds, depending upon the pressure of the circuit on which they are used :—

(*a*) For circuits not exceeding 750 volts a milli-ammeter is used. This consists of a voltmeter, the scale of which is calibrated to read milli-amperes. This instrument is used in conjunction with resistances which are so proportioned that in the case of a bad fault giving full line voltage to earth, the needle would indicate the maximum reading marked on the scale.

For three-phase circuits one instrument with resistance is used as shown in fig. 32, illustrating ' Westinghouse Ground Detectors.' One pole of the instrument is connected to earth, the other pole being connected to the centre point of a special three-way key switch. Under normal working conditions the instrument is connected through the three-way key switch and the three resistances shown on the diagram to the three phases, the three keys being locked in the closed position, thus ensuring that the leakage detector is kept in circuit permanently.

If a fault occurs on one of the mains, a deflection is obtained on the milli-ammeter, and to determine upon which phase the fault exists it is only necessary first to release all three keys and

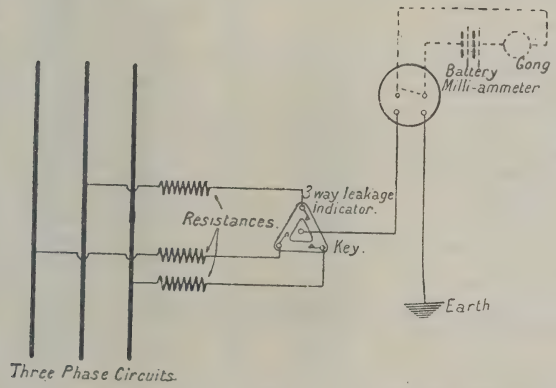


FIG. 32.

then to depress them one at a time. The faulty phase will give the smallest deflection. As indicated in the diagram, a bell and battery can be included and the milli-ammeter can be provided with special contacts so that in the event of a serious fault occurring on the mains the bell would sound an alarm.

(*b*) For circuits having pressures greater than 750 volts, it is customary to use a Static Ground Detector. In this instrument, the indicating pointer carries a large black disc, which under normal conditions appears in the centre of the scale. This disc and pointer are electrically connected to the case of the instrument, which in turn is earthed. The live portion of the instrument consists of two metal plates embedded in the porcelain base of the instrument to the right and left respectively of the central position normally taken up by the black disc on the pointer. When the condition of the system is healthy, the pointer retains the central position, since the pull between the disc and each one of the live pieces of metal is equal. As soon as a fault occurs on one main, however, the attraction between the centre disc and the particular stem to which the faulty main is connected becomes less and the disc is consequently attracted towards the other stem. The scale is calibrated so that the deflection is an approximate measure of the actual conditions. Since the two stems must be connected one to each phase, it is necessary in the case of a three-phase circuit to employ two instruments.

Electrostatic Ground Detectors can only be used on circuits having an insulated neutral. In the case of systems where the neutral is earthed, it is customary for an ammeter to be placed in the earthed connection.

TRANSMISSION SYSTEMS OF THE WORLD OPERATING AT AND ABOVE 70,000 VOLTS.
(Compiled for the *Electrical World* by Selby Haar.)

Name.	Operating Voltage.	Frequency Cycles.	Rating of Plant, Kw.		Dist. of Trans., Miles.
			Present.	Ultimate.	
Pacific Light and Power Co.	150,000	50	59,500	300,000	241
Au Sable Elec. Co.	140,000	60	19,000	86,500	245
Southern Sierras Power Co.	140,000	60	8,750	40,000	239
Utah Power & Light Co.	130,000	60	33,000	84,000	135
Pacific Gas & Electric Co.	125,000	60	25,000	142,500	110
West Penn. Trac. & Water Power Co.	125,000	60	32,000	105,000	106
Tennessee Power Co.	120,000	60	15,000	75,000	140
Connecticut River Transmission Co.	120,000	60	14,400	14,400	60
Inawashiro Hydroelectric Power Co.	115,000	50	42,000	73,500	144
Au Sable Electric Co.	110,000	30	9,000	45,000	35
Hydro-Electric & Power Commission of Ontario	110,000	25	106,800	175,000	135 90
Lauchhammer, A. G.	110,000	50	15,000*	20,000	35
Georgia Ry. & Power Co.	110,000	60	50,000	63,000	210
Alabama Power Co.	110,000	60	48,000*	300,000	150
Mississippi River Power Co.	110,000	25	112,500	225,000	144
Lehigh Navigation Electric Co.	110,000	25	30,000*	100,000	24
Cedar Rapids Mfg. & Power Co.	110,000	60	90,000	135,000	60
Ebro Irrigation & Power Co. Ltd.	110,000	50	50,000	200,000	105
Chile Exploration Co.	110,000	50	40,000*	160,000	86
Great Falls Power Co.	102,000	60	21,000	125,000	150
Colorado Power Co.	100,000	60	10,000	10,000	152
Great Western Power Co.	100,000	60	50,000	100,000	154
Shawinigan Water & Power Co.	100,000	60	45,000	80,000	87
Los Angeles Aqueduct	100,000	50	22,500	138,000	47
Tata Hydroelectric Co.	100,000	50	40,000	64,000	43
Pfalzwerke, A. G.	100,000	50	10,000	50,000*	155 65
Societa Italiana di Elettrochimica	88,000	42	23,280	29,100	124
Appalachian Power Co.	88,000	60	20,610	75,000	75
Rio Janeiro Tramway, Light & Power Co.	88,000	50	48,800	90,000	51
Sao Paulo Electric Co.	88,000	60	30,000	50,000	56
Tasmania Hydroelectric & Metal Co.	88,000	50	—	50,000	64
Mexican Light & Power Co.	85,000	50	58,500	100,000	169
Toronto Power Co.	85,000	25	80,000	95,000	80
Victoria Falls & Transvaal Power Co.	84,000	50	40,667	40,667*	30
Energia Electrica de Cataluna	80,000	—	—	100,000+	—
Swedish State Railways	80,000	15	26,400	52,800	73·4
Katsuragawa Denryoku Kabushiki Kaisha	77,000	50	22,400	56,000	48
Au Sable Electric Co.	72,000	30	3,000	3,000	66
Societa Generale Elettrica dell' Adamello	72,000	42	45,000	75,000	72
Montana Co.	70,000	60	21,500	60,000	100
Hidroelectrica Espanola Molinar	70,000	50	27,000	27,000	158
Pennsylvania Water & Power Co.	70,000	25	71,500	100,000+	40
Guadalajara, Mexico	70,000	50	8,000	8,000	180
Societa Elettrica Riviera di Ponente	70,000	50†	27,000	60,000	155
Swedish State Railways	70,000	25	17,600	52,800	73·4
City of Winnipeg	72,000	60	15,000	48,000	77

* Steam-driven; all the rest hydraulic. † Also 16⅔.

Transformer connections: Step-up, L.T., 44△, 5Y; H.T., 20△, 30Y (5 not stated). Step-down, L.T., 37△, 12Y; H.T., 30△, 20Y (6 not stated). Material of Line Conductor, Copper 41, Aluminium 12 (4 not stated).

TABLE OF STANDARD ALUMINIUM CABLES (see next page).

S.W.G. Size.	Amps. at 600 per Sq. In.	Diam of Wire.		Diam. of Strand.		Effec. Sec. Area.		Resistance.		Weight.		Copper Equivalents.		
		In.	Mm.	In.	Mm.	Sq. In.	Sq. Mm.	Ohms per 1,000 Yds.	Ohms per Mile.	Lbs. per 1,000 Yds.	Lbs. per Mile.	Solid Diam.	Strand No. and Diam.	Sec. Area in Sq. In.
3/16	5·7	·064	1·63	·138	3·51	·00946	6·101	4·322	7·607	34·70	61·08	·085	3/·050	·00568
3/14	8·9	·080	2·03	·172	4·37	·0148	9·532	2·767	4·868	54·22	95·43	·106	3/·062	·00887
3/12	15·0	·104	2·64	·224	5·69	·0249	16·10	1·638	2·882	91·60	161·3	·138	3/·081	·0150
3/8	35·5	·160	4·06	·345	8·73	·0591	38·14	·6916	1·217	216·8	381·7	·212	3/·124	·0355
7/12	35·1	·104	2·64	·312	7·92	·0584	37·70	·6995	1·231	213·2	375·3	·211	7/·081	·0351
7/11	43·6	·116	2·95	·348	8·84	·0727	46·91	·5617	·9886	265·2	467·0	·236	7/·090	·0436
7/10	53·1	·128	3·25	·384	9·75	·0885	57·11	·4617	·8126	322·9	568·4	·260	7/·099	·0531
7/9	67·2	·144	3·66	·432	11·00	·1121	72·30	·3648	·6419	408·7	719·6	·293	7/·112	·0672
7/8	83·0	·160	4·06	·480	12·20	·1383	89·23	·2955	·5201	504·5	888·2	·325	7/·124	·0830
7/7	100·4	·176	4·47	·528	13·40	·1674	107·9	·2442	·4298	610·4	1075	·358	7/·136	·1004
7/6	120	·192	4·88	·576	14·60	·1992	128·4	·2052	·3612	726·5	1279	·390	7/·149	·1195
7/5	146	·212	5·39	·636	16·20	·2429	156·7	·1684	·2963	885·6	1559	·431	7/·164	·1457
19/10	144	·128	3·25	·640	16·3	·2398	154·7	·1704	·2999	877·8	1545	·428	19/·09?	·1439
19/9	182	·144	3·66	·720	18·3	·3036	195·8	·1347	·2370	1111	1956	·482	19/·112	·1822
19/8	225	·160	4·06	·800	20·3	·3748	241·8	·1091	·1920	1372	2415	·535	19/·124	·2249
19/7	272	·176	4·47	·880	22·4	·4534	292·5	·0902	·1587	1659	2922	—	19/·136	·2720
19/6	324	·192	4·88	·960	24·4	·5396	348·1	·0757	·1333	1975	3477	—	19/·149	·3238
19/5	395	·212	5·39	1·060	26·9	·6579	424·5	·0621	·1093	2408	4239	—	19/·164	·3948
37/9	355	·144	3·66	1·008	25·6	·5909	381·3	·0692	·1217	2166	3813	—	37/·112	·3546
37/8	438	·160	4·06	1·120	28·4	·7295	470·6	·0560	·0986	2673	4705	—	37/·124	·4377
37/7	530	·176	4·47	1·232	31·3	·8826	569·4	·0463	·0815	3235	5693	—	37/·136	·5297
37/6	631	·192	4·88	1·344	34·2	1·051	678·3	·0389	·0685	3849	6775	—	37/·149	·6304
37/5	768	·212	5·39	1·484	37·7	1·280	826·0	·0319	·0562	4693	8258	—	37/·164	·7685
61/8	721	·160	4·06	1·440	36·6	1·202	775·6	·0340	·0598	4408	7759	—	61/·124	·7214
61/7	873	·176	4·47	1·584	40·2	1·455	938·5	·0281	·0494	5333	9389	—	61/·136	·8730
61/6	1040	·192	4·88	1·728	43·9	1·731	1117	·0236	·0416	6346	11170	—	61/·149	1·039
61/5	1270	·212	5·39	1·908	48·5	2·111	1361	·0194	·0341	7737	13620	—	61/·164	1·267
91/6	1550	·192	4·88	2·112	53·6	2·586	1667	·0158	·0279	9468	16660	—	91/·149	1·550
91/5	1890	·212	5·39	2·332	59·3	3·148	2033	·0129	·0228	11540	20320	—	91/·164	1·889

ALUMINIUM CONDUCTORS.

Conductivity.

The conductivity of aluminium depends upon the purity, and, to a less extent, upon the amount of work put upon the metal in its evolution from billet to the finished wire or bar. The British standard of resistance for hard copper is 2 per cent. higher than that of soft, and this difference also applies to hard and soft aluminium. In comparing the relative conductances of copper and aluminium, therefore, hard should be referred to hard, and soft to soft copper and aluminium, respectively. The conductivity of aluminium usually supplied for electrical purposes is not less than 60 per cent. of Matthiessen's standard for copper, and the accompanying tables are calculated on this basis. An aluminium conductor of the same resistance and length as a given copper conductor will have an effective cross-section in the ratio of 100 to 60=1·666. The effective sectional area of an aluminium conductor is, therefore, 66·6 per cent. greater than that of the equivalent copper conductor, and the diameter will be some 29 per cent. greater.

Weight.

The specific gravity of cast aluminium is about 2·68, but when drawn into wire this is increased to 2·71. As the specific gravity of copper wire is about 8·89, the relative weight of a given volume of each metal is in the ratio of 8·89 to 2·71=3·3. In other words, a copper wire of any given size and length will weigh 3·3 times as much as an aluminium wire of the same size and length. Aluminium, therefore, having a conductivity of 61 per cent. of that of copper, will have a sectional area 1·642 times as great as a copper conductor of the same resistance and length, and the ratio of the weights will be 3·3 to 1·642=2·01 ; that is to say, a copper conductor of any given resistance and length will weigh approximately twice as much as an aluminium conductor of the same resistance and length.

The ratios are therefore as follows :—

	Copper.	Aluminium.
Conductance for equal section	1	0·61
Section for equal conductance	1	1·642
Diameter for equal conductance	1	1·28
Weight for equal bulk	3·3	1
Weight for equal conductance	2·0	1

Tensile Strength.—The tensile strength of aluminium depends largely upon the amount of work that is put upon it during its evolution from the billet or slab to the finished article. It is possible, by employing special rolling and drawing processes, to produce aluminium wire of very high tensile strength, but such wire is hard and 'short,' and is not to be recommended for ordinary purposes, where a certain amount of ductility and 'give' are of advantage.

Durability.—Aluminium has withstood the test of varying and severe climatic conditions. Lines have been in operation for over ten years in exposed positions on the sea coast which show little signs of deterioration. The metal is less affected by sulphurous and sulphuric fumes than copper, and shows less deterioration in the presence of any of the commoner acids. On the other hand, aluminium is somewhat deteriorated by strong alkalies, particularly in a moist atmosphere, and under such circumstances should be protected by a weather-proof covering.

Increase of Resistance with Temperature.—The coefficient of increase of resistance with temperature varies somewhat with the extent and nature of the impurities present, and the temperature range over which it is taken, but is in all cases somewhat lower than for copper. Tests made on different samples of commercially pure aluminium give figures varying between ·32 and ·39 per cent. per degree Cent. between 0 and 50° C. compared with ·38 to ·43 for copper.

Coefficient of Linear Expansion.—The coefficient of linear expansion being somewhat greater with aluminium than with copper, due allowance should be made for this when installing long lines of solid feeders or bars.

Ductility.

Aluminium wires are very ductile and can, without fracturing, be twisted one complete turn in a length equal to their own diameter. This test has been applied to the area of joint of two wires welded in the flame of a blow pipe, for various diameters of wire, and in all cases the joint has stood up and the twist distributed itself evenly over the whole length of wire subjected to the test.

Action of Acids.

Aluminium is not acted upon by any of the common acids in a cold state, with the exception of hydrochloric acid, and withstands the effects of sea-water better than either copper or iron ; but galvanic action is set up between aluminium and any of the common metals in the presence of moisture, and for this reason copper or iron clamps should not be used for outdoor work unless the junction be taped over and thoroughly protected from moisture.

Sulphur has no effect upon aluminium at ordinary temperatures, and consequently aluminium withstands the action of smoke and fog much better than either silver or copper. A thin transparent film of insoluble oxide forms immediately on the surface of aluminium when it is exposed

PHYSICAL PROPERTIES OF ALUMINIUM AND COPPER.

Property.		Aluminium.	Copper.
Chemical symbol		Al	Cu
Atomic weight		27	63·2
,, volume		10·6	7·2
Position in electrochemical series		10	24
Melting point, degrees Centigrade		655	1,100
,, ,, ,, Fahrenheit		1,210	2,010
Specific heat (Water = 1)		0·212	0·094
Thermal conductivity (Silver = 100).		31·3	73·6
Electric ,, ,,		58·5	97·5
Coefficient of linear expansion, degrees Centigrade		·0000245	·0000167
,, ,, ,, ,, Fahrenheit		·0000136	·0000093
Specific gravity, cast		2·68	8·78
,, ,, rolled or drawn		2·71	8·89
Tensile strength, Lbs. per square inch		26,000–33,000	55,700–62,500
,, ,, Kgs. per square millimetre		17–23	28–42
Elastic limit, per cent. of tensile strength		70%	7–%
Modulus of elasticity, Lbs. per square inch		9,800,000	16,000,000
,, ,, ,, Kgs. per square millimetre		6,905	11,200
Specific resistance, microhms per cm. cu. at 60° C. (15·5° C.)	Soft	2·770	1·690
	Hard	2·870	1·725
Specific resistance, microhms per cm. cu. at 0° C. (32° F.)	Soft	2·610	1·595
	Hard	2·770	1·650
Resistance of conductor, 1,000 yards long by 1 sq. in. cross-section	Soft	·03932	·02398
	Hard	·04070	·02443
Coefficient of increase of Resistance with Temperature	Degrees Centigrade	·0032–·0039	·0038–·0043
	,, Fahrenheit	·0018–·0022	·0021–·0024
Weight per 1,000 Yds., 1 square inch section, Lbs.		3,520	11,700
,, ,, 100 Ft., ,, ,, ,,		117·3	392
Ratio of conductivities for equal area		0·61	1·0
,, areas for equal resistance		1·64	1·0
,, diameters for equal resistance		1·28	1·0
,, weights for equal area		1·0	3·3
,, ,, ,, resistance.		1·0	2·0

to the atmosphere, protecting it from further oxidisation or corrosion. This film of oxide is a good insulator and will withstand the application of considerable pressure before breaking down. Advantage is being taken of this feature in the manufacture of magnet windings, etc., which are otherwise uninsulated.

Capacity and Inductance.

Aluminium being a non-magnetic material, the inductance or capacity of the line can only be affected by the increased diameter. This increased diameter will decrease the inductance and increase the capacity by some 5 per cent., but as all transmission lines possess more inductance than capacity, this difference is in favour of aluminium, tending to improve the power factor of the system and to reduce the pressure drop due to inductance.

Heating Effect.

Aluminium, having a larger surface than copper of equal conductance, is more easily able to get rid of its heat, and to transmit a given current with a given I^2R loss aluminium will remain the cooler. This is a considerable advantage when installing electric apparatus in a hot atmosphere, or where current-carrying capacity is of more importance than the permissible pressure drop. In any case aluminium will have a higher overload capacity, from a heating point of view, than copper of equal resistance.

ALUMINIUM CABLE, STEEL-REINFORCED.

After the introduction of aluminium for electrical conductors it became apparent that if a conductor could be obtained, combining the advantages of lightness of aluminium with the strength of high-grade steel now obtainable on the market, the highest efficiency would result. Cables of this character were made up and have now been in service in such a variety of localities and conditions that their efficiency has been thoroughly demonstrated.

The cables consist of a steel core about which the aluminium is stranded. The steel for the smaller size cables consists of a single strand, while for the larger sizes several strands are used. These are composed of 'Extra High Strength' steel having an ultimate strength upwards of 160,000 lbs. per square inch, an elastic limit of 130,000 lbs., and an ultimate elongation of 4 per cent. in 18 ins. These strands are double galvanised, and after the aluminium strands are in place over the steel, around which they fit closely by reason of the stress resulting from the

load on the cable, the steel is to a large extent protected from corrosive action. This protection is due to the almost complete exclusion of moisture from the steel core by the aluminium envelope, and further on account of the insulating oxide film on the aluminium, which tends to prevent the flow of small local electric currents. Another feature which adds to this desirable condition is the fact that zinc and aluminium are closer together in the electro-chemical series than any other two metals in common use.

The following table shows at a glance the superiority in mechanical characteristics of steel-reinforced conductors over all-aluminium, or copper of equivalent conductance.

Size.	—	Aluminium.	Al.-Steel Reinforced.	Copper.
6/0 S.W.G. Cu Equiv. (Stranded)	Weight . . .	1·00	1·89	2·38
	Diameter. . .	1·00	1·17	0·83
	Ultimate strength .	1·00	2·71	1·62
2 S.W.G. Cu Equiv. (Stranded)	Weight . . .	1·00	1·48	2·14
	Diameter. . .	1·00	1·14	0·81
	Ultimate strength .	1·00	1·96	1·17
8 S.W.G. Cu Equiv. (Cu solid, Al Stranded)	Weight . . .	1·00	1·47	2·05
	Diameter. . .	1·00	1·07	0·69
	Ultimate strength .	1·00	1·84	1·36
Average . . .	Weight . . .	1·00	1·61	2·19
	Diameter . . .	1·00	1·13	0·78
	Ultimate strength .	1·00	2·17	1·38

Splicing.

In the matter of splicing the same general rules apply as for all-aluminium conductors, except that for the larger sizes the steel and aluminium are joined separately, the former by means of a steel McIntyre sleeve, and the latter by a two-piece compression joint.

For the smaller sizes the steel and aluminium are joined by the same sleeve. The sleeves are made of aluminium and 2½ times the length used for all-aluminium cables. The middle section is given 1½ turns in the opposite direction to the other parts.

Dead ending.

In order to develop the strength of the cable and to prevent overstraining the aluminium by reason of the slipping of the steel, dead and anchor clamps should grip the aluminium and steel separately.

Copper Equivalent S.W.G.	Total Area. sq. in.	Diameter. ins.	Weight per 1,000 yds.	Elastic limit. lbs.	Ultimate strength in lbs.
8	·0408	·25	187	1240	1770
7	·0471	·28	216	1440	2050
6	·0564	·30	259	1730	2460
5	·0688	·33	315	2100	2990
4	·0823	·36	373	2520	3590
2	·1161	·43	532	3550	5040
0	·1610	·51	737	4920	6990
2/0	·1849	·55	848	5650	8030
4/0	·2590	·65	1270	9300	12880
6/0	·3465	·77	1695	12440	17140

The values given for elastic limit and ultimate strength are taken as the sum of the corresponding values for the individual strands. These values for the individual strands are based upon the following data :—

Elastic Limit, Aluminium . . . . . 14,000 lbs. per square inch.
" " Steel . . . . . 130,000 " " "
Ultimate Strength, Aluminium . . . . 24,000 " " "
" " Steel . . . . . 160,000 " " "

Aluminium cable, steel-reinforced, being a composite material does not have definite values for its coefficient of expansion and modulus of elasticity. Approximate values for these quantities have, however, been derived, and it has been found from experience that deflections calculated by means of them are sufficiently close to the actual to meet all practical requirements.

OVERHEAD TRANSMISSION LINES.

Length of Span.

In England, short spans of from 120 to 150 ft. are commonly adopted. In Norway, Sweden, Switzerland, Italy, Canada, and U.S.A., spans averaging 500 to 550 ft. are becoming standard practice. These lines are designed upon lower factors of safety than those prevailing for the relatively small transmission projects in this country.

Sag.

The formulæ usually employed take no account of elasticity in the conductor, which allows the wire to stretch and thus relieve the strain, so that under actual working conditions the stresses in the wire at temperatures below the temperature of erection will always be lower than that calculated. This in itself constitutes a factor of safety, so much so that the British Post Office ignores wind pressure altogether for small copper wires, as being compensated for by elasticity. It is more or less standard American and Canadian practice to calculate the sag so as to give a theoretical maximum stress on the wire equal to its elastic limit at minimum temperatures. with an actual wind velocity of 65 miles per hour (equal to 10·5 lbs. per sq. ft. effective wind pressure on the projected area of the wire). The maximum temperature range commonly taken is 150° F., and the elastic limit of aluminium wire at 14,000 lbs. per sq. in.—such values having been found ample in practice. Continental official regulations stipulate a factor of safety of three on the breaking load, which latter is usually taken as 30,000 lbs. per sq. in.; this limits the maximum theoretical stress on the wire to 10,000 lbs. per sq. in.

The British Post Office Regulations specify a factor of safety of 4 on the wire, and a maximum wind pressure of 17 lbs. per sq. ft., and for small wires they neglect wind pressure altogether. The British Board of Trade Regulations for lines under their jurisdiction specify a factor of safety of 5 on the breaking load of the wire. Assuming an average tensile strength of 30,000 lbs. per sq. in., this limits the maximum theoretical stress on the wire to 6,000 lbs. per sq. in. Wind pressure is taken as 25 lbs. per sq. ft. on a flat surface, corresponding to 15 lbs. per sq. ft. effective wind pressure on a cylindrical surface.

The following table shows the sags on two typical sizes of aluminium cable on a short and long span, respectively, and brings out very clearly the disadvantage under which lines are erected under the conditions prevailing in Great Britain. These large sags necessitate heavier and more costly poles, increasing the cost of the line, and generally militate against the adoption of long-span long-distance transmission.

SAGS ON ALUMINIUM STRANDED CABLES.

	Tensile Strength	Factor of Safety.	Maximum Stress.	Effective Wind Pressure.	120 ft. span. 0·5 in. diam. Cable. Calculated Sags.		500 ft. span. 1·0 in. diam. Cable. Calculated Sags.	
	Lbs. per Sq. In.		Lbs. per Sq. In.	Lbs. per Sq. Ft.	0° F.	150° F.	0° F.	150° F.
					Ft. Ins.	Ft. Ins.	Ft. Ins.	Ft. Ins.
America & Canada .	—	—	14,000	10·5	0 3	2 6	3 1	13 10
France . . .	31,500	3	10,500	(12·5)	0 6	3 1	4 4	14 1
England . . .	30,000	5	6,000	15	1 3	4 7	8 4	15 10

These data have been calculated from the following formulæ, which are those most commonly employed, but it should be noted that they take no account of elasticity in the conductors, so that the actual stresses at temperatures below that of erection will in practice be lower than those assumed in the calculations, owing to the wire extending and relieving the strain. This provides a further margin of security, which is allowed for in Continental practice by taking lower factors of safety.

$$d = \frac{l^2 w}{8S} \qquad d_1 = \sqrt{(d^2 + \tfrac{3}{8} k T l^2)}; \qquad w = \sqrt{W^2 + P^2}$$

Where

l = length of span in feet; d = sag at minimum temperature; d_1 = sag at maximum temperature; S = stress at minimum temperature in lbs. = breaking load of wire ÷ factor of safety; W = weight of wire in lbs. per foot run (see table, p. 1929); P = ·06 × wind pressure in lbs. per sq. ft. × diameter of wire or strand in inches; T = difference between minimum and maximum temperatures Fahr.; k = coefficient of linear expansion per degree Fahr. (see table, p. 1931).

(*The British Aluminium Company, Ltd.*)

The Pacific Coast companies are giving considerable attention to the use of steel in place of copper for transmission lines. Steel conductors not only effect a saving due to reduced cost per unit of length, but also because of the longer spans permissible. Standard spans of 350 ft. to

450 ft. have been used extensively in the past; with the introduction of steel a 700-ft. span was selected as standard, and many miles of line have been built with spans of this length. The spans necessitate large sags, and the old style triangular construction, with pole-top pin, has been adopted, to give greater clearances between conductors.

Owing to the greater strains, more careful guying is required at corners, and at sharp corners four or six anchors to the pole are occasionally required. The San Diego Co. has installed in main or branch lines, exceeding a mile in length, 201 wire miles of ¼ in., $\frac{5}{16}$ in. or ⅜ in. standard steel; 75 wire miles are under construction, and there are 52 wire miles of ½-in. steel in constant-current series circuits. Most of the constant-pressure circuits are at 11,000 volts, though a few are at 2,300 volts. (*Electrical World.*)

The world's longest span of overhead h.t. transmission wires has recently been built in Norway, by the Stavanger Electric Power Company. It was required to transmit 12,000 h.p. from the power station at Lysefjord across Hoegsfjord to a transforming station at Oltedal, and from this station over 50,000-volt lines to Stavanger. The three wires of the transmission line are supported from three steel towers 7 m. high on each side of the fjord. The total free span is 1,384 m., the sag is 80 m., and the distance to the water surface 40 m. at the centre of the fjord and 80 m. at one side. The biggest span previously built was 1,350 m. across the Strait of Carquinez, in America. The steel cable has 19 strands and a diameter of 16 mm., the breaking strength being 15 kg. per sq. mm. When no wind is blowing the total stress in the cables is 4 tons, but with maximum wind pressure the stress is 7 tons. (*Electrical Times.*)

Ministry of Transport Regulations.

Every application for the consent of the Electricity Commissioners to the placing of electric lines above ground should be accompanied by the following particulars:—

1. Where the undertakers are a company, or a local authority supplying outside their own area, evidence of consent of the local authority for the district.

2. A statement showing commercial or other considerations why underground cables should not be used.

3. A brief description of the proposed system, whether by continuous or by alternating current; the working voltage; the kind of wire, whether copper or aluminium; whether solid or stranded; the total sectional area; tensile strength and elongation; average and maximum length of span; minimum height of wires from the ground; name or description of automatic protective device, if any.

4. A statement whether the supply is to form (1) an extension of an existing system of underground cables, or (2) of an existing traction system, or (3) an independent system.

5. An ordnance map on a scale of 6 ins. to the mile, showing the proposed route of the overhead lines and any existing overhead lines. The sheets of these maps must be fastened together.

6. In the case of high and extra-high pressure, plans of construction of poles, etc., on a scale of about 1 in. to the ft., or a reference to previously deposited plans where these are identical with the proposed work.

Codes of regulations have been made (1) for overhead lines for low-pressure and medium-pressure continuous-current supply, and for low-pressure alternating-current supply, and (2) for pressures exceeding low- or medium-pressure continuous current and low-pressure alternating current. Regulations will be made for each case separately, following these codes unless special alterations are sanctioned.

Attention is called to the necessity for obtaining the approval by the Postmaster-General of plans and works under Sec. 14 of the Schedule to the Electric Lighting (Clauses) Act, 1899.

The official Regulations for high-pressure overhead conductors assume the maximum conditions of loading to be a wind of 25 lbs. per sq. ft. at a temperature of 22° F. without snow or ice on the conductors, and a factor of safety of 5 is required on the conductors (breaking strength) under these conditions. Wooden poles must have a factor of safety of 10.

The larger the conductor, the longer is the economical span. The higher the tension of stringing, the longer is the economical span, and the less is the cost of the line. The most economical span length is never likely to be less than 250 ft. Span lengths in this country range from 150 to 300 ft. with wooden poles, and up to 350 ft. with steel poles; abroad, 500 ft. is usual. (G. V. Twiss in the *Journal I.E.E.*)

The relative costs of underground cable and overhead lines of the same carrying capacity, using three conductors of 0·1 sq. in. in each case, and carrying out the work on the very best lines, are stated by B. Welbourn (*Journal I.E.E.*) to be as follows:—


Voltage	Cable laid underground	Overhead line
6,000	£1,400	£900
11,000	1,550	950
20,000	2,100	950

Overhead conductors should be spaced apart, up to 6,000 volts, 2 ft.; up to 11,000 volts 2½ ft.; up to 20,000 volts, 3 ft. The minimum size of wire suitable for overhead lines is No. 11½ S.W.G. Earth plates should be of cast iron, 1½ ft. sq. and ¼ in. thick.

The whole subject is under investigation with a view to the drastic amendment of the Regulations by the Electricity Commissioners.

WESTON

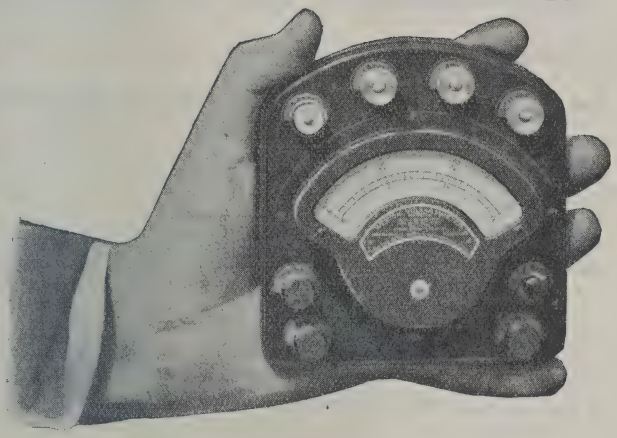ELECTRICAL INSTRUMENT CO. LTD.



Model 280 Portable Type.

MINIATURE PRECISION D.C. INSTRUMENTS.

Moving Coil Type Ammeters, Voltmeters,
Mil-Ammeters, Milli-Voltmeters and Volt-Ammeters.
About 300 Standard Ranges.
Accurate, Dead beat and Reliable.
May be carried conveniently in the pocket.
Weight ranges from 11 oz. to 1 lb.

Write for List D 3.

AUDREY HOUSE, ELY PLACE, HOLBORN, E.C.1.

Telephone No.: 2029 Holborn. Telegrams: 'Pivoted, Smith, London.'

(See also next page.)

WESTON

Instruments for Research.

For Research Work the following Portable Instruments are recommended:

	Accuracy.	Scale Length.
Model 1, Standard Portable D.C. Ammeters, Mil-ammeters, Voltmeters and Milli-voltmeters	$\frac{1}{5}\%$ ...	$5\frac{1}{4}''$
Model 5, Laboratory Standard D.C. Ammeters, Mil-ammeters, Voltmeters and Milli-voltmeters	$\frac{1}{10}\%$ ...	$11\frac{1}{8}''$
Model 310, Standard Portable Single-phase A.C. and D.C. Wattmeters, including Special Low-power Factor Instruments	$\frac{1}{4}\%$ ...	$5\frac{1}{4}''$
Model 329, Standard Portable Polyphase Wattmeters	$\frac{1}{2}\%$ ...	$5\frac{1}{4}''$
Model 322, Standard Portable Micro-ammeters...	$\frac{1}{4}\%$ ...	$5\frac{1}{4}''$
Model 341, Standard Portable A.C. and D.C. Voltmeters	$\frac{1}{4}\%$ ...	$5\frac{1}{4}''$
Model 370, Standard Portable A.C. and D.C. Ammeters and Mil-ammeters	$\frac{1}{4}\%$ ...	$5\frac{1}{4}''$
Model 326, Electrodynamometer Laboratory Standard A.C. and D.C. Ammeters Voltmeters and Wattmeters	$\frac{1}{10}\%$ ...	$12''$

WESTON Transformers of high accuracy are supplied to operate in conjunction with the above A.C. Instruments.

Full particulars will be sent upon application.

WESTON ELECTRICAL INSTRUMENT Co. LTD.

AUDREY HOUSE, ELY PLACE, HOLBORN, E.C.1.

Telephone No.: 2029 HOLBORN. Telegrams: 'PIVOTED, SMITH, LONDON.'

(See also previous page.)

ELECTRIC MEASURING INSTRUMENTS.

Weston Standard Ammeters and Voltmeters.

Direct Current.

In these instruments, although the scales are remarkably uniform, no particular 'law' of deflections is assumed, as must be done when printed or engraved scales are used. A skeleton of each scale is laid out by actual comparison with an accurate standard, and the lines afterwards are inked in. Finally, the work is checked by comparison with the same standard. No multiplying constant is necessary (except with high-range voltmeters), as simple inspection of the position of the pointer on the scale gives the value in amperes or volts. Time in making readings is therefore saved, and errors of calculation are avoided. The scales of all direct-current instruments have practically uniform divisions from zero to the top mark. The range is thus greater than is common, while the uniform size of the scale divisions permits of their visual subdivision with uniform accuracy. The pointer comes to rest at once, although absolutely no friction can be detected, thus reducing the time required for readings, and preventing unnecessary wear of the moving parts.

There is no 'magnetic lag,' giving rise to different deflections with the same current or potential, as in instruments having iron in the moving parts. The 'temperature correction' is negligible, being for all voltmeters having a range above 15 volts, not greater than ¼ per cent. for a range of 35° F. above, or 35° below, 70°, and for the ammeter, less than 1 per cent. for the same range of temperature. The instruments of the 'Direct Current' type may be kept in circuit any length of time, as the heating effect, except in the higher ranges, is so small as to be inappreciable. In the voltmeters provided with a 'calibrating' coil, changes in scale-value resulting from accidental injury are easily checked; this is a very valuable feature, as all instruments are subject to occasional accidents and to rough usage, which may prove injurious. The user of these instruments can at any time roughly check their scale-values by applying a single cell of some constant form to the terminals of the calibrating coil.

Alternating and Direct Current.

These instruments can be used in measuring the current or voltage of both alternating and direct-current circuits with equal accuracy, being of the electrodynamometer type. Owing to the principle of operation, they cannot be made with a uniform scale throughout, but the upper two-thirds of the scale is practically uniform. To prevent errors from parallax, mirror scale-plates and knife-edge pointers are provided. The entire movable and field coil system is mounted in a double closed iron shield, which effectually protects it from external magnetic fields and electrostatic influences. Damping is accomplished by means of an air damper, which is very effective.

In voltmeters it is necessary for great accuracy to have the current taken by the instrument as small as practicable; the Weston Model 341 voltmeter is designed with this object in view and the current required is much less than is usual in this type of instrument. For ordinary measurements no corrections are necessary for temperature or for frequencies up to 133 cycles per second, nor is it necessary to take reverse readings on direct-current circuits. When great accuracy is required, however, such corrections can be made. The instruments may be left in circuit continuously. In general, they are guaranteed to have an accuracy of ¼ of one per cent. of full-scale value on the working portion of the scale.

Similar characteristics are found in the portable wattmeters made by the company.

All ammeters are really milli-voltmeters, as they merely measure the drop of potential across a constant resistance. This constant resistance is termed a shunt. The potential drop is directly proportional to the current passing through the shunt, if the shunt is correctly designed, and the instrument can therefore be graduated in amperes. The resistance of these shunts is very low: for a Weston switchboard ammeter of 100 amperes the resistance of the shunt is approximately ·0005 ohm. The shunt must not be strained when fixing to the bus bars or the resistance may be altered, which would alter the reading of the instrument. For this reason shunts are usually securely fastened to a base of hard wood. Low-range ammeters up to about 200 amperes can have the shunt contained within the instrument case. The resistance of the instruments does not exceed about 2 ohms, and about 25 to 30 milli-amperes is required for full-scale deflection.

Voltmeters which are placed directly across the circuit must be high-resistance instruments, and only require about 10 or 15 milli-amperes for full-scale deflection. For special testing work Weston voltmeters can be obtained which have a resistance of 2,500 ohms per volt, and only require ·0004 ampere for full-scale deflection. It is important to have a high-resistance voltmeter for testing the E.M.F. of dry batteries, etc.

Owing to the temperature coefficient of copper being high, all copper in the instrument should be reduced as much as possible to eliminate temperature errors. The moving system should be as light as possible to reduce the wear upon the pivots, which should work in good

jewels. The air gap must be small to insure the permanence of the magnet, which must be specially aged and carefully made. In Weston instruments the air gap is approximately ·04 in. Any number of different range shunts may be used with moving coil ammeters, so that accurate readings may be taken over a wide range.

More current is required to operate moving iron instruments than is necessary for moving coil instruments. For this reason moving iron voltmeters are not suitable for testing dry cells. The resistance per volt of moving iron instruments is about 12 to 20 ohms, against 60 to 100 or higher for moving coil instruments. The pointers of moving iron instruments always move in one direction, irrespective of the direction of flow of the current, and cannot therefore be made with centre zero. They will not have such uniform scales as moving coil instruments, the scale being contracted at one end, and in some instruments at both ends. Moving iron ammeters cannot be supplied with shunts to obtain a wide range of readings.

In reading instruments, the eye, the pointer, and the mark on the scale should be in a line at right angles to the plane in which the pointer moves, in order to avoid errors due to parallax. In edgewise instruments this line of vision must pass through the centre of the arc swept out by the pointer; one eye must be closed. In multi-range instruments each range should be a simple multiple of the other ranges; and the figures upon the scale of the instrument should preferably

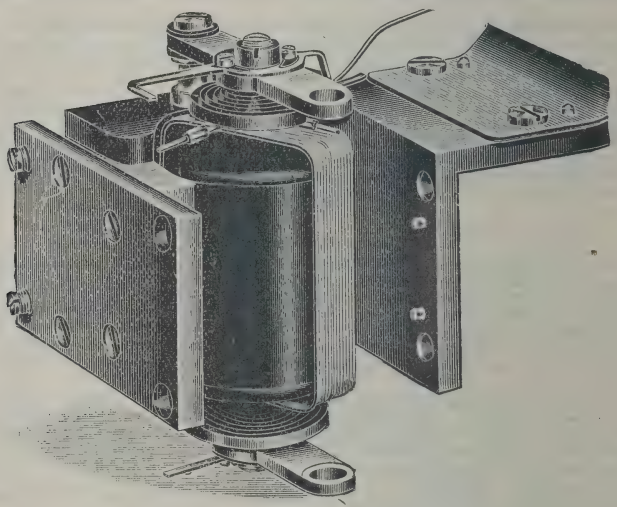


FIG. 33.

indicate the number of scale divisions. An instrument having a range of 150 or multiples thereof should be calibrated to have 150 divisions, figured 0–150. There is less liability of error in reading direct in scale divisions, and afterwards multiplying by a correct constant, than in mentally calculating the value of a fraction of a scale division, especially if there is a rapidly fluctuating load.

The accuracy of an instrument is best expressed as a percentage of the maximum load the instrument is intended to measure. For instance, an instrument having a range of 500 volts with an accuracy of $\frac{1}{10}$ per cent. should be correct at every point upon the scale to within half a volt. If the instrument has 100 scale divisions, this corresponds to $\frac{1}{20}$ of a scale division, which could be accurately read upon a portable instrument with a knife-edge pointer working over a mirror to eliminate errors due to parallax. If, however, the accuracy is taken as a percentage of the actual reading, when reading this instrument at 100 volts the error would not have to exceed ·1 volt, which would correspond to $\frac{1}{10}$ of a scale division, and would not be readable by the naked eye. If the instrument is supplied with an additional range to read 0–100, an accuracy of $\frac{1}{10}$ per cent. upon this range would represent ·1 volt, and would correspond to $\frac{1}{10}$ of a scale division.

Fig. 33 shows the moving coil of a Weston D.C. milli-voltmeter in position, for which purpose the magnet and one pole piece have been removed. The moving coil is a light rectangular aluminium frame, upon which are wound a few turns of silk-insulated copper wire; this frame is pivoted to

work in hard and highly-polished sapphire jewels. The pivots are small, specially hardened, and very finely ground and polished, so that no friction can be detected when they work in the jewel centres. The moving coil rotates in the narrow air gap formed between the pole pieces, only one of which is shown, and a soft iron core. As this air gap is only ·04 in. it is essential for the moving coil to be very accurately pivoted, so as to move freely in this narrow angular space. With such a narrow air gap it is also necessary for the sides of the rectangular frame to be formed to a radius slightly greater than the radius of the core. The motion of this coil is controlled by two flat spiral springs, which are made from a special Weston alloy ; they are arranged to work in opposition to each other, so that one uncoils and the other coils up when the moving coil rotates. The inside end of each spring is fastened to one end of the winding upon the coil, and the outside end fastened to an adjustable arm. One of the binding posts is connected directly to one of the arms, and the other binding post is connected to the other arm through a suitable resistance. The magnet, which is very carefully aged, is accurately ground to fit over the pole pieces, to which it is securely fastened.

THE SYNCHROSCOPE.

Apart from special methods only applicable to polyphase machines, two devices are in general use for synchronising alternators, (*a*) the synchronising lamp or voltmeter, and (*b*) the rotating field synchroscope. The former is more simple, but suffers from the defect of being insensitive as regards the exact moment of switching in, which should be when the machines are in exact coincidence of phase. Machines may be as much as 16 degrees out of phase before the synchronising voltmeter shows 1 per cent. of variation from its maximum reading, so that a little error of judgment may result in a considerable shock on switching in. A further objection is that although the rapidity of fluctuation of the lamp or voltmeter reading indicates the difference between the frequencies of the machines, there is nothing to show which of the two machines is the faster, and considerable time may thus be wasted. In order to make the lamp method of real service, therefore, it is necessary to combine it with some device for indicating exact coincidence of phase and also whether the incoming machine is fast or slow ; and this is what has been done in the Weston Synchroscope.

If an ordinary dynamometer wattmeter has both its fixed and moving coils wound with fine wire, and two alternating voltages are applied to the terminals of these coils, it will show very accurately when these two voltages are in exact *quadrature*, as the wattmeter will indicate zero in this case, and deflect to right or left if the phase difference is greater or less than 90. By connecting a condenser in series with one of the coils, and introducing a small amount of inductance into the other, it is easy to arrange that the wattmeter indicates zero when the two voltages are in phase instead of in quadrature, and this can be checked by connecting the two circuits to the same supply. Under these circumstances, if one circuit is connected to the bus bars and the other to the incoming machine it is only necessary to see that the synchronising lamp is bright and the watt meter pointer at zero to be able to throw in without any shock.

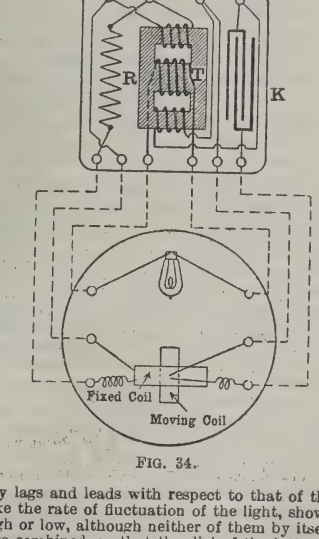


FIG. 34.

But this only indicates when the machines are in exact synchronism, and not whether the incoming machine is too slow or too fast. If the speed of the incoming machine is low or high, the lamp will flicker in the ordinary manner and the wattmeter will also deflect to right and left alternately as the voltage of the machine alternately lags and leads with respect to that of the bus bars. The rate of oscillation of the pointer, like the rate of fluctuation of the light, shows the amount by which the speed of the machine is high or low, although neither of them by itself indicates which. But if the lamp and wattmeter are combined, so that the dial of the latter is illuminated by the former, the difficulty is at once solved. For if the machine is fast the wattmeter pointer swings over from left to right while the lamp is bright, while when it swings back the lamp is dark. In consequence the back swing is not seen, and instead of the pointer appearing to oscillate it appears to rise with the dawn of light at the left-hand side of the scale, to swing across in full light and to disappear on the right of the dial with the extinction of the light, almost exactly like the rising and setting of the sun, and as if it were steadily revolving in one direction.

When the machine is slow, the lamp is bright as the pointer swings from right to left, and the direction of rotation is therefore apparently reversed. As far as its practical application is concerned, the instrument resembles in every way the rotating field synchroscopes (except that the fluctuation of the light is visible), and the arrangement is extremely simple, and free from any loose contacts.

The actual indicating instrument is almost identical in construction with the switch-board wattmeter, the only differences being that the dial carries a bold central mark with two arrows indicating ' Fast ' and ' Slow,' and that the synchronising lamp is inserted behind it. This lamp can be easily withdrawn and replaced. An auxiliary box contains an ordinary synchronising transformer, T, for the lamp, and a non-inductive resistance, R, and a condenser, K, for connecting in series with the two wattmeter coils respectively. A small inductive coil for adjusting the exact quadrature is included in the instrument case. Fig. 34 is a diagram of the connections of the instrument and box, which will be readily understood from the principle of the instrument.

METERS.

In all commercial motor meters there is necessarily a certain amount of friction, which as time goes on tends to increase more or less according to the design, and to cause the meter to slow down.

This defect manifests itself particularly at low loads, and is the more serious as the majority of meters are worked at points very low down on their load curves. For long periods the working point is frequently at or below one-tenth full load capacity, and in many instances, particularly where metal filament lamps are used, the working load is liable to be between one-twentieth and one-fiftieth the full load capacity of the meter for many consecutive hours daily.

Pointer type clocks should have light machine cut gears, and should run with an exceedingly small amount of friction, which, being constant, is easily compensated for. This fact constitutes an important advantage in favour of clocks of this type.

Roller cyclometer clocks have more friction than the pointer type, and moreover possess the defect that as the friction is a varying quantity it cannot be compensated for. A meter may have to move round one counter only, or again it may have to move up to five counters at one time.

Jumping figure cyclometer clocks are a modification of the roller type, having the friction load more evenly distributed through the use of a falling weight device. This weight is wound up slowly by the meter. It is released at the proper time, and in falling carries round the additional counters which it is necessary to move.

This partial equalisation of friction makes cyclometer clocks which have springing figures better than the roller type, although not so good as the pointer type clocks, where the friction is a constant quantity. An important feature of springing figures in comparison with roller type counters is that with the former no halving of figures takes place.

In all meters, the friction tends to increase more or less according to the design, etc., of the meter, and to cause the speed to slow down correspondingly, and it is essential to obtain the highest possible accuracy initially.

Manufacturers are generally willing to guarantee the accuracy of their meters, so that a.c. meters can be obtained which are capable of easy adjustment within plus or minus 2 per cent. from 50 per cent. overload down to one-fiftieth of full load.

The voltage drop in the main coils should be as low as possible. The drop varies with the size of the meter, being greatest in the smaller sizes and diminishing as the ampere capacity increases, due to the fact that in meters of large capacity fewer turns are required to create a similar torque. The loss in the shunt circuit should also be small, but should not be reduced at the expense of the torque, as in meters where the torque is reduced in consequence of the current in the shunt circuit being very low, the retarding effect of friction becomes great, affecting the accuracy of the meter under low load conditions. Moreover, with low torque more compensation will be required to balance the friction, and under such conditions trouble from ' creeping ' through vibration, due to street traffic or other external causes, will be much more liable to occur.

A record should be kept of the life of every meter on the system of any supply undertaking. As meters are received from the makers they should be checked against a standard which should be certified from time to time by some recognised authority such as the National Physical Laboratory. This check should be made at various loads, say 125 per cent., $\frac{3}{4}$, $\frac{1}{2}$, $\frac{1}{4}$, $\frac{1}{10}$, $\frac{1}{20}$ and $\frac{1}{50}$ full load, at unity power factor, and at half load 50 per cent. power factor, and the results obtained should be plotted on a card; a note of any subsequent attention required by the meter should be added to its record, and at the end of recognised intervals—say every two or three years—each meter should be brought in for overhaul and tested carefully before breaking any seals. The result obtained should be added to the record, thus affording a means of continuously studying the behaviour of every meter.

The following tests, arranged in order of their relative importance, are easily made :—

(1) Accuracy at varying currents from 2 per cent. to 150 per cent. load with voltage, frequency, and power factor constant.

(2) Accuracy at varying voltage with constant current and frequency.

(3) Accuracy at varying power factor with voltage, frequency, and current constant.

(4) Accuracy at varying frequency with constant load and voltage.

BRITISH STANDARD SPECIFICATION FOR ELECTRICITY METERS.

(*No.* 37—1919.) (*Abstract.*)

16. The construction of the meter shall be mechanically sound and suitable for its purpose and shall be such as to give reasonable assurance of permanence in all mechanical electrical and magnetic adjustments and shall not be seriously affected by external magnetic fields.

17. The parts of the meter within the case shall be carried on a substantial stiff framework forming, if desired, part of the case. The framework shall not be liable to distortion by changes of temperature, presence of moisture, or other cause. They shall be completely enclosed in a substantial dust-tight metal case, the front and sides of which may be glazed. The case shall be of sufficient strength to afford adequate protection to the working parts against mechanical injury with reasonable usage, and capable of being sealed in such a manner that access to the working parts and the electric or magnetic adjustments of the meter can only be obtained by breaking the seals. Care shall be taken to ensure that the mechanism as well as the interior of the case is free from dust or other extraneous matter immediately prior to sealing.

18. One or more substantially glazed dust-tight windows shall be provided in the front of the case in such a manner as to give a clear view of the register, and also of those working parts the observation of which is necessary for rapid testing of the meter. It shall be impossible to remove the glass without breaking the seals of the case or breaking the glass itself.

20. The terminals of the meter itself, unless of the switchboard type, shall be enclosed by a separate cover suitable for sealing, or contained in an external compartment of the case.

21. All meters of sizes above 100 amperes shall be provided with soldering sockets, except where provision is made for coupling with strip or bar connections.

22. The pressure circuit shall be connected to the supply side of the main circuit, and a disconnecting device shall be provided in the terminal compartment, to enable the pressure circuit to be entirely disconnected from the main circuit, in order that it may be supplied with current from a separate source for purposes of testing. The disconnecting device is not necessary where separate terminals are provided for the pressure circuit.

23. The meter, unless of the switchboard type having external connections, shall be provided with separate facilities enabling the purchaser to seal independently the terminal compartment and the meter case. Facilities may also be provided for independent sealing by the manufacturer.

24. Every meter, the accuracy of which is affected by small changes in level, shall be provided with means of ascertaining, without breaking the seals, that it is correctly levelled.

25. A diagram of connections to be attached to the meter.

26. The circuits of the meter shall be capable of carrying full load continuously without injury to any part of the meter, without any permanent change in its accuracy, and without the temperature of any accessible part of the case exceeding 10° C. above the temperature of the surrounding air, except when a shunt is employed in a separate compartment forming an integral part of the meter, when the temperature of any accessible part of the case of such compartment shall not exceed 30° C. above the temperature of the surrounding air.

27. Every external resistance shall be completely enclosed in a strong metal case.

Every external resistance shall be so constructed that when the marked pressure is applied to the meter and resistance combined and is maintained continuously, no injury shall be done to any part of the resistance, and the temperature of any accessible part of the case shall not exceed that of the surrounding atmosphere by more than 30° C.

28. The insulation resistance between all the electric circuits of the meter coupled together, and the containing case, or other metal not intended to be insulated when the meter is in use, shall be not less than 5 megohms.

The insulation resistance between the main circuit and the pressure circuit (if any) shall be not less than 2 megohms.

The insulating material between all the electric circuits and the containing case, or other metal not intended to be insulated when the meter is in use, shall withstand, for one minute, an alternating pressure equal to twice the pressure of the circuit for which the meter is intended, with a minimum of 1,000 volts. All the electric circuits shall be coupled together before applying the high pressure.

The insulation resistance shall be measured with a pressure of not less than 200 volts nor more than 500 volts (direct), applied for a sufficient time for the reading of the insulation indicator to become practically steady.

---

* By permission of the British Engineering Standards Association.

29. The rate of loss of energy in the pressure circuit at marked pressure shall not exceed the values given in the following table:—

Meter.	Marked Pressures up to 250 volts.	Marked Pressures above 250 volts.
Direct current	5 watts	2 watts per 100 volts
Alternating current	2 watts	1 watt per 100 volts

The rate of loss of energy in the meter current circuit for all meters having a marked current not exceeding 50 amperes shall not exceed 10 watts; with the further restriction that the pressure drop shall not exceed 2 volts.

When the meter has more than one element the above requirements shall apply to each element independently.

30. The forward direction of rotation of the rotor, if any, shall be clearly indicated.

32. The following shall be the standard sizes of meters:—2·5, 5, 10, 20, 40, 50, 100, 150 200, 300, 400, 500, 600, 800, 1,000, 1,500, 2,000, 3,000, 4,000, and 5,000 amperes.

34. When a current equal to one-hundredth of the marked current of the meter (or when this is less than one-twentieth of an ampere, then one-twentieth of an ampere) traverses its main circuit, the rotor shall start and continue running steadily, the pressure circuit, if any, being energised at the marked pressure in phase with the current in the main circuit.

35. The error of the meter at the standard or marked temperature, pressure, frequency, and at unity power factor shall not exceed the following values:—

PERMISSIBLE LIMIT OF ERROR.

Load.	Meters without external shunts or transformers.	Meters with external shunts or transformers.
	Per cent. from true reading.	Per cent. from true reading.
Full load to one-fifth full load (inclusive)	+ or − 2	+ or − 2·5
From one-fifth to one-tenth full load	2·5	2·5
At one-twentieth full load	4·5	5·0

36. If the meter has a pressure circuit, a variation of 5 per cent. above or below the marked pressure at any load from full to one-tenth shall not cause a change in the rate of registration in respect of such variation of more than one per cent.

39. The meter shall not be injured, and its accuracy shall not be permanently impaired, by a current 25 per cent. in excess of its marked current maintained for a period of one hour, or by the passage of a current in the main circuit not exceeding 30 times the marked current of the meter for a period not exceeding half a second, the rotor, if any, being free to rotate, and the pressure circuit being energised at marked pressure.

40. The meter shall not be injured, and its accuracy shall not be permanently impaired, by the application of a pressure 15 per cent. above the marked pressure for a period of one hour.

41. Every meter having a pressure circuit shall not register with its main circuit open when the pressure circuit alone is acting, either when marked pressure is applied or when this pressure is increased to 10 per cent. above the marked pressure.

THE EVERSHED MEASURING INSTRUMENTS.

Evershed & Vignoles.)

These instruments are very largely used for the measurement of the resistance of insulators and conductors; they embrace ranges from 1 microhm up to 10,000 megohms. All are direct reading in the strictest sense, and the ruling feature of each is to provide a means of measurement which shall be so simple that it can be used by any unskilled person, so rapid to use that a test shall occupy but a few seconds and so portable that the instrument can be taken anywhere to do the work required.

EVERSHED'S

REGISTERED TRADE MARK

MEGGER

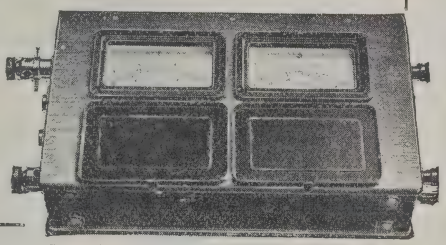
BRIDGE-MEGGER AND DUCTER

TESTING SETS

Measure Resistances from 10,000 megohms to One microhm.

We also make Indicating and Recording Instruments *for*

CURRENT
PRESSURE
AND
POWER



Portable Pattern, single or multi range types for one or two instruments in one case

Eversheld & Vignoles Ltd.

Acton Lane Works, CHISWICK, LONDON, W. 4

Telephone : CHISWICK 1370 (2 lines)
Telegrams : 'DOROTHEA, CHISK, LONDON'

SEND FOR DESCRIPTIVE PAMPHLETS

SULLIVAN INSTRUMENTS

the recognised Standards for Electrical Test Rooms and Laboratories.

Universal Galvanometers and Shunts.
Wheatstone Bridges.
Testing and Signalling Keys.
Testing Sets, and every type of Instrument used by Cable Manufacturers in Test Room and Laboratory.
Precision and Standard Equipments for D.C. & A.C. High-Frequency Determinations.
Non-Reactive Resistances and Bridges.
Condensers of Low Power Factor, Continuously Adjustable, also Fixed Patterns.
Sullivan Patent Wireless Telephone Receivers (Resistances up to 8,000 ohms).
Wireless Apparatus of every description.

All Instruments Guaranteed and accompanied, if desired, with Certificates of Accuracy from the National Physical Laboratory.

H. W. SULLIVAN

Winchester House, London, E.C. 2.

Works: Liverpool House, Middlesex Street, London, E. 1.

Telegrams— 'Deadbeat, Stock, London.' Telephones— London Wall 3518. Works: Avenue 4871.
Codes:—Western Union Universal Edition; A B C, 5th Edition; Engineering, 2nd Edition.

THE 'MEGGER' TESTING SET consists of a moving-coils type ohmmeter combined in one box with a high-pressure generator driven by a folding crank handle. The general principles of the construction and the electrical connections of the set are shown in the following diagram.

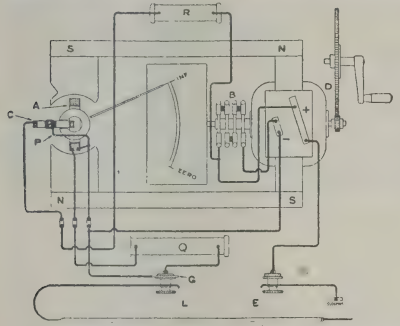


FIG. 35.—Megger Testing Set.
Diagram of Connections.

A=current coil; P=pressure coil; C=compensating coil; N, S=magnets; Q, R=resistances; B=brush gear; D=driving gear; + − =generator terminals; G=guard plate; L=external 'line' terminal; E=external 'earth' terminal.

In external appearance the 'Megger' testing set is similar to the 'Bridge Megger' testing instrument shown by fig. 36, but without the terminals at the end of the case. To carry out an insulation test on a system, connect the 'line' terminal to the circuit and the 'earth' terminal to a good earth. If testing between two wires, connect one wire to each terminal.

When the handle of the generator is turned at about 100 r.p.m. the rated voltage will be developed, and the value of the insulation resistance under test will be indicated directly by the pointer over the scale. The instruments are fitted with either variable or constant-pressure generators; the constant-pressure type should always be used when testing the insulation of circuits having considerable electrostatic capacity, such as large house-wiring installations, supply and feeder cables, etc. The constant-pressure device consists of a centrifugal friction-clutch, which secures that when the handle is turned above the slipping speed, the speed of the generator, and consequently the terminal E.M.F., remains constant. All 'Megger' and 'Bridge Megger' testing sets are provided with a system of guarded insulation to ensure that no internal or surface leakage can affect the readings. Any error in tests of high insulation due to leakage across the surface of the material under test can be eliminated by the use of a guard wire connected to the 'guard' terminal, which is provided on all high-range instruments.

THE BRIDGE-MEGGER TESTING SET, fig. 36, is a combined ohmmeter and generator of the usual 'Megger' type for insulation testing, but also arranged so that the ohmmeter can be converted into a Bridge Galvanometer by means of the change-over switch fitted. The current for the Bridge tests is provided by the generator (constant-pressure type), and a direct-reading resistance box of special and convenient design is supplied as a standard of comparison. The whole combination forms the most rapid known means of measuring that range of resistances for



FIG. 36.—Bridge-Megger Testing Set in Use.

which the Bridge method is adapted, and the value of the resistance is given plainly in a row of figures, which prevents errors. The series of ranges covers Bridge measurements from 0·01 ohm upwards, and insulation measurements up to 1,000 megohms. In addition to the measurement of insulation and conductor resistances, the set may be used for the localisation of faults on telephone and telegraph cables, or on electric light cables if their resistance falls within the limits of Bridge methods.

THE 'DUCTER' POTENTIAL OHMMETER TESTING SET provides for the measurement of resistances from 1 microhm up to 100 ohms by the direct deflection method. The current for this set is supplied by a separate battery, and a pair of duplex handspikes are used for making contact on the resistance under test. With these instruments the resistances of switch and fuse contacts, armature windings, rheostat coils, rail-bonds, sheathing and earth circuits in collieries, joints and the like, are easily and rapidly determined.

LAMPS.

Metal Filament Lamps.

Tungsten has a specific gravity of about 20. Its melting point is over 3,000° C., which is higher than that of any other known metal. The proportion of its total radiations which is in the visible spectrum is greater than that of other substances which are considered normal.

While the melting point of tungsten is very high it oxidises at a very low temperature—(about 300° C.). It also softens at a very low temperature, and filaments which are easily broken when cold can be bent permanently into any desired shape at a temperature below the oxidising point. This characteristic is taken advantage of in making many filaments of special form, especially in making low voltage lamps ; many filaments of spiral or helical form are made by winding straight pieces of filament on hot mandrels. Similar forms of filaments when made of carbon must be made in the desired form before carbonisation. The specific resistance cold of carbon is 800 times that of tungsten and at normal working temperature it is 33 times that of

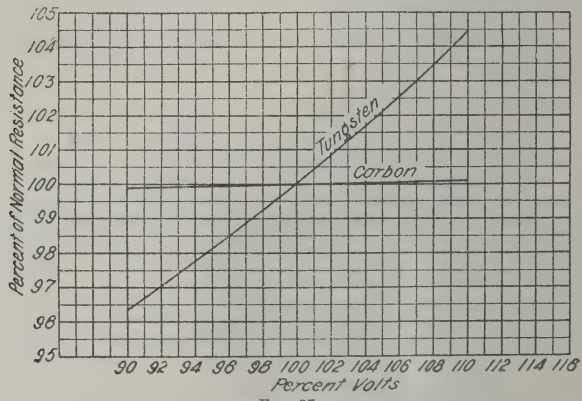


FIG. 37.

tungsten. The low specific resistance of tungsten is a disadvantage in making high voltage lamps, making it necessary to use very long thin filaments for these lamps. The length of filaments for 120-volt lamps ranges from 450 mm. for 20-watt lamps to 1,400 mm. for 500-watt lamps. Lamps of standard voltage are now made ranging from 20 watts and 16 c.-p. to 500 watts and 400 c.-p., all of which are well designed and of good quality.


Fig. 37 shows that in a tungsten filament an increase in voltage is met and partly counteracted by an increase in resistance, while in a carbon filament the resistance remains practically constant ; consequently any increase in voltage produces less increase in watts, less increase in candle-power, and less decrease in life in a tungsten filament than in a carbon filament. The curve (fig. 38) shows that an increase of 3·7 per cent. in voltage will halve the life of a carbon lamp, while it requires an increase of 5·2 per cent. to halve the life of a tungsten lamp. The cold resistance of a tungsten filament is only one-twelfth the resistance at normal operating temperature, consequently when first connected to the circuit the current is for an instant much greater than the normal current. This excessive current is of sufficient duration to cause an instantaneous rise (overshooting) in candle-power, which is higher than the normal candle-power. The best filaments are more fragile than are carbon filaments. Tungsten filaments when burning are quite soft and plastic and must be supported at points sufficiently near together to prevent the filaments sagging and touching each other or the glass. Spring supports are used in many lamps designed to prevent sagging, and they do in fact keep the filaments nearly straight under all circumstances. These supports prevent the filaments being attracted over against the glass and being broken by static electricity, which is a frequent cause of trouble with carbon lamps. The variation of light from a filament due to the variation in current caused by the successive impulses of an alternating current depends upon the heat capacity of the filament, the heat-radiating characteristic and the resistance characteristic. Tungsten has a specific gravity about 10 times that of carbon and a specific heat one-fifth as great, so that the heat capacity of a tungsten filament is about twice that of a carbon filament of the same dimensions. The heat radiating characteristic of tungsten is better than that of carbon because at a given temperature it radiates heat less rapidly than does carbon. The

Osram G.E.C.

ELECTRIC LAMPS

Of Established Reputation for all lighting requirements.

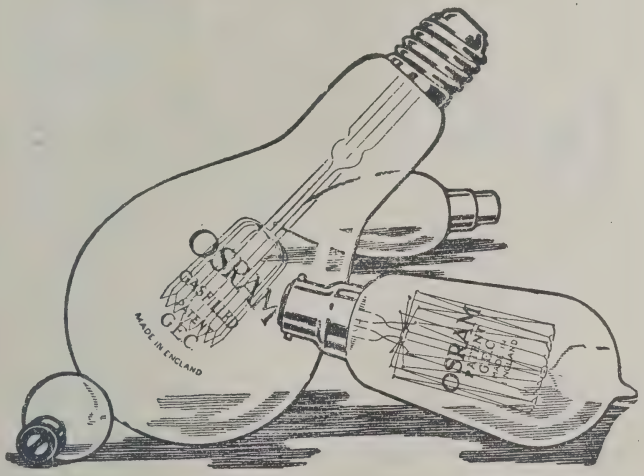The Illuminating Engineering Department of the G.E.C. will be pleased to collaborate with you in the scientific application of these lamps to any particular requirement.



Advt. of The General Electric Co. Ltd., Magnet House, Kingsway, London, W.C.2.

B T-H

Supreme Economy

THE high efficiency, brilliance and extraordinary physical strength of Mazda lamps are essential to any lighting scheme which shall ensure larger output and lower costs.

Science, by developing the Mazda Gasfilled lamp, has reduced the original cost of electric lighting and enormously extended its field of application. With Mazda lamps, suitably equipped and arranged, you can have artificial illumination which is as good in quality and intensity as daylight, and is less costly and far less troublesome than the relatively ineffective illuminants hitherto in vogue.

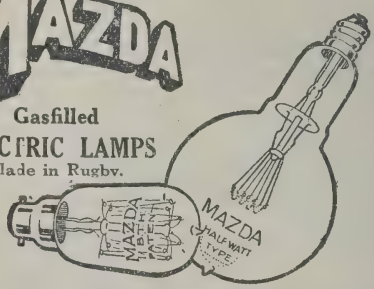
Mazda Gasfilled lamps will provide all the light you want. Our Illuminating Engineers will, if you wish, show you how to employ this light to the best advantage—to get the utmost results therefrom in the form of effective and appropriate illumination. This expert advice entails no obligation on your part—it is just part of the unrivalled Mazda service.

MAZDA

Gasfilled

ELECTRIC LAMPS

Made in Rugby.



Lighting Advice Free.

The BRITISH THOMSON-HOUSTON CO. Ltd.

Mazda House, 77 Upper Thames Street, London, E.C.4.

Works: Rugby, Willesden, Coventry and Birmingham.

Branches: Manchester, Liverpool, Birmingham, Sheffield, Leeds, Newcastle, Middlesbro', Cardiff, Swansea, Glasgow and Dublin.

resistance characteristic of tungsten is also more favourable than that of carbon for the retention of energy and heat as the current wave recedes. All these physical characteristics of tungsten are therefore better than those of carbon in respect of the retention of heat, and they all tend to make the flicker of tungsten lamps less than of carbon lamps of the same size filament. The actual diameters of tungsten filaments, however, are much smaller than those of carbon filaments of the same candle-power lamps and this more than offsets the advantages of the other characteristics, for the flickering of tungsten lamps is greater than that of carbon lamps of the same candle power while it is much less for lamps with the same size filaments. The flicker of a 25-watt tungsten lamp on a 60-cycle circuit may be observed by standing with your back to the lamp and moving a pencil rapidly backwards and forwards. The flicker of a 40-watt tungsten lamp on a 60-cycle circuit is scarcely perceptible on a moving pencil.

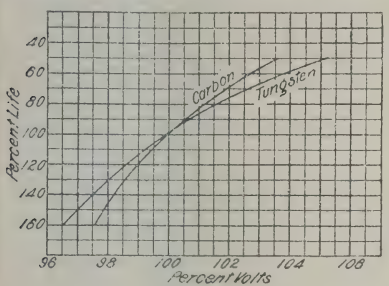


FIG. 38.

(J. W. Howell, Am. Inst. E. E. Proc.)

The British Engineering Standards Association has issued a standard specification for 'normal type vacuum tungsten-filament electric lamps' (Report No. 133, 1921), in which limiting values are given for the dimensions of the bulbs and bayonet caps, and the conditions of test are laid down. The limits of variation in initial watts and in initial watts per average candle. (mean spherical candle-power) at rated voltage are given in the following table; the initial candle-power must not differ from the candle-power computed from the rated watts and nominal initial watts per average candle (cols. 2 and 3) by more than plus or minus 15 per cent. at rated voltage. The mean of the values of the candle-power measured after 1,000 hours' burning is not to be less than 80 per cent. of the mean value at the commencement of the test.

INITIAL WATTS PER CANDLE, TOTAL WATTS, AND TEST LIFE.

1.	2.	3.	4.	5.		6.		7.
Lamps for Voltages.	Rated Watts.	Nominal Initial Watts per Average Candle.	Watts per mean Horizontal Candle. (Approx)	Initial Watts per Average Candle (Col. 3).		Initial Total Watts.		Test Life. Hours.
				Max.	Min.	Max.	Min.	
100 to 130	10	1·65	1·30	1·78	1·52	12·0	8·0	750
	20	1·55	1·20	1·64	1·46	24·0	16·0	850
	30	1·50	1·15	1·59	1·41	34·5	25·5	850
	40	1·50	1·15	1·59	1·41	46·0	34·0	850
	60	1·40	1·10	1·48	1·32	69·0	51·0	850
	100	1·35	1·05	1·43	1·27	115·0	85·0	850
200 to 260	20	1·75	1·35	1·89	1·61	24·0	16·0	700
	30	1·65	1·30	1·75	1·55	36·0	24·0	800
	40	1·55	1·20	1·64	1·46	46·0	34·0	800
	60	1·50	1·15	1·59	1·41	69·0	51·0	800
	100	1·40	1·10	1·48	1·32	115·0	85·0	800

DRAWN-WIRE MAZDA LAMPS.

This is a tungsten filament lamp (*The British Thomson-Houston Co. Ltd.*), in which drawn wire has replaced the pressed filament formerly used, the drawn wire being many times stronger than the old pressed filament at any time during its entire life.

Siemens 'Britannia' Lamps.

These lamps are sold by *Messrs. English Electric & Siemens Supplies, Ltd.*, and are manufactured in England at Dalston and Preston. They have drawn tungsten wire filaments, and the Standard Vacuum type operate at an efficiency of, approximately, 1·2 watts per c.p. The 'gasfilled' type represents the latest development in metal filament lamp manufacture, and the larger sizes attain an efficiency of, approximately, 0·5 watts per c.p. Both types of lamps are made in an extensive range of voltages and candle-powers. The following are descriptions of the various types available.

Siemens Britannia Standard Type Lamps.—These are made in voltages from 20 to 260, and in wattages from 5 to 100, and cover the lamps in general demand for ordinary electric lighting schemes of average intensity.

Siemens Britannia Traction Type Lamps.—This type of lamp has been introduced to meet the requirements experienced in situations where lamps are subjected to severe shock and vibration, and is now largely used on the leading tramway systems and tube railways. A totally new arrangement of the filament is employed, which ensures maximum strength and adequate support. The complete length of filament is spiralised and carried in a series of loops on a special spider in the usual Siemens manner. The distance between the top and bottom supports is considerably reduced, which ensures maximum strength, while neighbouring lengths of filament are more widely separated, thus obviating short-circuiting of adjacent lengths of filament, which sometimes occurs in the ordinary type of lamp subjected to severe vibration. The filament has no sharp bends, and will not 'sag,' so that the lamp may be used in any position. The spherical candle-power of the lamp is increased, and the light emitted is uniform in all directions other than towards the cap end. It is claimed for this design that these additional advantages have been obtained without appreciable loss of efficiency in operation.

Siemens Britannia Gasfilled Lamps.—The gasfilled type lamp was originally introduced in high candle-power types only, but the range has been increased, with the result that these lamps are now obtainable for standard lighting voltages from, approximately, 30 to 1,500 watts. Owing to their high efficiency, these lamps became known to the public as 'Half Watt' type lamps. It is, however, an essential condition to their production that they should be gasfilled in order to obtain a satisfactory life at the efficiency mentioned. The leading manufacturers are therefore stamping the word 'gasfilled' on the bulbs of these lamps, so that the consumer may be protected should he be offered lamps which, though resembling genuine high-efficiency lamps, are not gasfilled.

The range of Siemens Britannia gasfilled lamps now includes Automobile head-light lamps, from 4 to 14 volts from 8 to 48 watts; Siemens Britannia gasfilled lamps for Railway Lighting, 25 volts, can be obtained from 15 to 100 watts. The 50- to 60-volt gasfilled lamps are supplied from 30 to 500 watts; 100- to 130-volt from 40 to 1,500 watts; and the high voltage gasfilled lamps, 200- to 260 volts, from 60 to 1500 watts. These high candle-power lamps are being employed in large numbers for general lighting in stores, workshops, factories, offices, shops, etc., and for street lighting. They produce illumination without flicker, and require no attention after installation, save occasional cleaning.

Siemens Britannia Automobile and Battery Type Lamps.—In addition to the range of gasfilled automobile head-light lamps mentioned above, Siemens Britannia Battery Lamps are made for automobile lighting, sign lighting, omnibus and yacht lighting; while there is also a variety of types suitable for use in miners' hand and rescue lamps. The voltages of these vary from 2 to 14, and the wattages from, approximately, 1 to 36 watts.

Osram (G.E.C.) Lamps.

The filament of the Osram (G.E.C.) lamp (*The General Electric Co. Ltd.*) consists of pure drawn tungsten wire.

In addition to the low c.p. sizes of Osram lamps, a new tungsten lamp has been introduced in which a gas-filled bulb is used in place of vacuum; the efficiency of these lamps approximates to ½ watt per candle, as compared with vacuum lamps which consume about 1 watt per candle. The Osram gas-filled lamp is known as the 'Atmos' type lamp, and is made from 30 to 3,000 candle-power. The high candle-power lamps are largely used in the place of arc lamps.

The Osram standard or 1-watt lamp is made in sizes from 4 to 400 c.p., and, in addition, standard types have been supplemented by special types for different purposes, such as with concentrated filaments for projection and focusing work; with 'Axial' type filaments for downward illumination, such as over desks, etc.; and for use from low voltage batteries, such as miners' and general portable hand-lamps and automobiles (including motor-bases). The Osram (G.E.C.) lamp 'Atmos' type is also made for automobile headlights.

Notes on Incandescent Lamps.

Efficiency.—Rated according to their mean horizontal candle power, the English parliamentary candle being used as a unit, the highest commercial efficiency of carbon lamps of 8 c.p. and over is 3·1 w.p.c. with a useful life approximately of 450 hours; of a gem lamp, 2·5 w.p.c. with equal useful life; of a tantalum lamp, 2 w.p.c. with a useful life of 800 hours on d.c., uncertain on a.c.; of a tungsten lamp, 1·25 w.p.c. with a life of 1,000 hours.

Although the operating temperature of the tungsten filament is higher than that of any of the other illuminants mentioned herein, the lamp itself, while in service, is much cooler than the carbon, gem, or tantalum lamp.

Intrinsic Brilliancy of Lamp Filaments.—The candle power per square inch of the filament of carbon 3·1 w.p.c., gem 2·5 w.p.c., tantalum 2 w.p.c., and tungsten 1·25 w.p.c. lamps is 480, 625, 750, and 1,000 respectively.

Quality of Light.—The light of tungsten lamps more closely approaches daylight than that of other illuminants. It naturally follows that tungsten lamps cause colours to retain more nearly their true values than any other artificial light source.

The Tungsten Lamp Association has formally endorsed the standards advocated by the British Electrical and Allied Manufacturers Association and the British Engineering Standards Association. These pressures are 100, 110, and 115 for low voltages, and 200, 220, and 230 for high voltages. At the moment, the Association does not propose to go so far as these figures indicate, but to adopt a wider range, as follows :—25, 50 and 55 volts for under 100 volts ; 100, 105, 110, 115, 120 and 125 volts for low voltages ; and 200, 210, 220, 230, 240, and 250 volts for high voltages. It is felt that the change can be made more easily by a gradual transition. Eventually the standards of the B.E.A.M.A. and of the British Engineering Standards Association will be made applicable to lamps manufactured by members of the Association.

Having given the number, candle-power, watts per candle, and voltage of electric lamps, the current consumed is given by the formula :

$$A = \text{No. of lamps} \times \text{c.p.} \times \text{watts per candle} \div \text{voltage}.$$

Thus 20 tungsten lamps of 25 c.p., taking 1·2 watts per candle on a 200-volt circuit consume

$$20 \times 25 \times 1{\cdot}2 \div 200 = 3 \text{ amperes}.$$

ARC LAMPS.

In a D.C. arc lamp the top or positive carbon burns about $1\frac{1}{2}$ inches per hour, and twice as fast as the bottom or negative carbon of the same diameter. A 1,000-candle-power lamp requires carbons about $\frac{9}{16}$ inch in diameter and consumes about 1,000 watts.

SIZES OF CARBONS.

Current of Lamp, in amperes .	4	5	6	7	8	9	10	12	14	15	20
Diam of Plain Carbons, in mm. .	7	7	8	8	9	9	10	11	12	12	13
Diam. of Cored Carbons, in mm. .	10	12	14	14	16	16	17	19	21	21	23

ANGOLD MAGAZINE FLAME ARC LAMP.

(The General Electric Co. Ltd.)

The Angold Magazine Flame Arc Lamp is arranged to burn carbons of comparatively short length (maximum 15 ins.) without copper coating or metal core ; twelve pairs of these carbons can be filled in the magazine at one time, and thereby, according to the type of lamp, 120 to 150 hours be obtained.

The carbons are so arranged that as soon as one pair is consumed the next pair comes into operation. The magazines can be filled up if only part of the trim has been consumed, so that at any time the full burning hours obtainable with a full magazine can be assured. The positive carbons cannot be put into the negative magazine, and when the last carbons are consumed, the feeding gear is automatically put out of action. Partly burnt carbons need not be removed. The interval of time during which the light is extinguished does not exceed two seconds.

The direct current lamp is manufactured for 8 or 10 amperes and can be supplied with self-contained equivalent resistance and automatic cut-out, or it can be supplied without these accessories. In the latter case, however, the lamps can only be used singly, on suitable voltage, or two in series on 100–120 volts. For longer series (or even for two lamps on higher voltage) equivalent resistances and automatic cut-outs have to be provided. If it is inconvenient to have these accessories self-contained they can be supplied in the suspension type, or if it is necessary to lower the lamp from contact gear a box-type is recommended.

Both 8-ampere and 10-ampere lamps are designed for 9 mm. positive and 8 mm. negative carbons, 15 ins. long. Each trim of carbons consists of 12 pairs.

An alternating-current lamp of this make will burn in parallel singly on any voltage between 100 and 250 volts—25 cycles to 100 cycles. Each lamp is fitted with a self-contained transformer choker so that it can be connected directly to the mains.

(For 'Illumination' see Section XXXV., Part III., page 2137.)

Fuses.

FUSE TABLE. (APPROXIMATE S.W.G.)

Approximate Fusing Current in amperes.	Tin.	Lead.	Copper.	Approximate Fusing Current in amperes.	Tin.	Lead.	Copper.
1	37	35	47	60	12	12	21
2	31	30	43	70	10	9·5	20
3	28	27	41	80	9·5	8·5	19
4	26	25	39	90	9	8	18·5
5	25	23	38	100	8·5	7	18
10	21	20	33	120	7	6	17·5
15	19	18	30	140	6	5	17
20	17	17	28	160	5	4	16·5
25	16	15	26	180	4	3	16
30	15	14	25	200	3·5	2	15
35	14·5	13	24	225	2	1·5	14·5
40	14	13	23	250	1·5	0	14
45	13·5	12·5	22	275	0	2/0	13·5
50	13	12	21·5	300	2/0	3/0	13

(*P. W. Harley.*)

FUSING CURRENTS FOR COPPER WIRE.

The following table has been found to be closely correct for average conditions:—

Size of wire B.S. gauge	30	28	26	25	24	22	21	20	19
Fusing current in amperes	10	15	20	25	30	40	50	60	70
Size of wire B.S. gauge	18	17	16	15	14	13	12	11	10
Fusing current in amperes	80	100	120	140	160	200	240	280	330

To restore a service temporarily it is useful to know the above if no regular alloy fuse wire is to hand, when motor or other circuits have blown their protective links.

THE ELECTRICAL EQUIPMENT OF SHIPS.

REGULATIONS ISSUED BY THE INSTITUTION OF ELECTRICAL ENGINEERS (SEPTEMBER 1919).

(*Abbreviated.*)

General.—These regulations apply to all sea-going ships except ships of war. They relate to the use of electrical energy for all purposes except the propulsion of ships, and comprise the main requirements for ensuring satisfactory results.

Nature of Supply.—Standard systems of distribution are two-wire D.C. or A.C., three-wire D.C., three-phase three- or four-wire. Standard pressures are 110 volts and 220 volts D.C., 110 volts single-phase A.C. Standard pressures have not been fixed for polyphase currents, but must not exceed 150 volts for lighting and 250 volts for power and heating. The standard frequency is 50 cycles per second.

Generating Plant.—Generators shall conform to the British Standardisation Rules, except that they shall be capable of sustaining an overload of 25 per cent. for two hours in temperate climates and cool situations on board ship. Generators shall be over-compounded 5 per cent.; they shall be placed where they do not affect the compasses, with their axes fore and aft, and the frames shall be efficiently earthed.

Switchboards.—If marble or slate be used, all conducting parts connected to one pole shall be insulated with mica or micanite, and the slab shall be similarly insulated from the frame, which must be earthed. All circuits and apparatus shall be labelled. Voltmeters and lamps shall be protected with fuses on each insulated pole, and switches shall be so connected that their moving parts are not alive in the off position. Switches shall be connected between the fuses and the omnibus bars. A distinctive system of colouring shall be employed on switchboard omnibus bars and conductors. Where generators are run in parallel, each shall be protected with a circuit-breaker with overload and reverse-current trips; if compound-wound generators are used, an equaliser switch shall be interlocked with the circuit-breaker. On three-wire systems no fuse or switch shall be inserted in the neutral conductor. In three-phase three-wire systems each generator must have a triple-pole circuit-breaker with overload trips on at least two phases; if four wires are used, the circuit-breaker must have an overload trip on each phase. Unless one pole is permanently earthed, the main switchboard must be provided with means for testing

the insulation of the system. Conductors and switches must be so proportioned that their temperature shall not rise more than 54° F. above the temperature of the surrounding air, when carrying the normal working current. Up to 10 amperes, the fusing current of fuses shall be three times the normal working current of the circuit; above 10 amperes, twice the normal current. Fuses shall comply with the British Standard Specification No. 88, and shall not be placed in switches, ceiling roses, or wall plugs or sockets.

Conductors.—All conductors shall be of annealed copper conforming to British Standard Specification No. 7. No cable shall have a less cross section than 0·0015 sq. in., except for ornamental fittings, for which the cross section may be 0·001 sq. in. All conductors over 0·0033 sq. in. shall be stranded. The size of conductors shall be such that the fall of pressure between the main switchboard and any point on the installation under the maximum probable load shall not exceed 2 volts plus 3 per cent. of the omnibus-bar pressure for lighting, and 2 volts plus 5 per cent. for power and heating. Standard sizes for ship installations are given in the table on page 1864.

Cables, whether single or twin, must be either vulcanised-rubber insulated (braided or lead-covered, with or without armour) or paper insulated and lead-covered, with or without armour. For particulars see tables on pages 1861 and 1862 for single cables, 250 volts, rubber insulated, and on page 1859 for paper insulated cables.

The insulated conductors must be able to withstand a test-pressure of 1,000 volts for half an hour, alternating at a frequency between 25 and 100 cycles per second, after twenty-four hours' immersion in water and whilst still immersed. Cables must be made with a distinctive coloured braiding. Flexible cords shall be vulcanised-rubber insulated in accordance with the table on page 1861, and shall withstand a test of 1,000 volts alternating for fifteen minutes, after twenty-four hours' immersion. The ends of all cables of 0·007 sq. in. and over shall be provided with soldering sockets. Cables may be run in wood casing in dry situations; otherwise, armoured and lead-covered cables shall be secured with metal clips and the resistance of the metal sheathing between any two points of a completed installation shall not exceed 2 ohms. Metal staples must not be used. If exposed to damage, cables shall be protected with sheet-iron plating or heavy-gauge screwed conduit, electrically and mechanically continuous, earthed and drained. Cables in machinery spaces or exposed to sea-water shall be lead-covered. Cables in refrigerating chambers shall be in full view from end to end, and shall be lead-covered and supported by non-metallic clips. Conductors of opposite polarity carrying direct current may be, and if carrying alternating current they shall be, bunched when in conduit. Lead-covered and armoured cables may, in all cases, be bunched, whatever their polarity. All connections between rubber-insulated cables shall be made by means of joint boxes; between cables and flexibles by clamped connections in suitable receptacles. Connections between lead-covered paper-insulated cables shall be made by the same means as for rubber-insulated cables, or preferably, instead of joint boxes, lead sleeves wiped on to the cable coverings may be used, filled with insulating compound. Cables passing through decks or watertight bulkheads shall be provided with deck tubes or watertight glands; unarmoured cables passing through beams and non-watertight partitions shall have the holes bushed with lead or other soft non-ferrous metal.

Distribution.—Final sub-circuits for lighting, etc., shall carry not more than 600 watts, with a maximum of ten points, and shall be connected to a sub-distribution board. Every sub-distribution board, and every consuming device taking more than 600 watts, shall be connected to a section or main distribution board, and the latter to a separate way on a larger board or the main switchboard. Each two-wire circuit on a distribution board shall be protected by a fuse on each insulated pole, and, except in the case of a sub-distribution board, by a switch on one insulated pole. No fuse or switch shall be connected to an earthed pole. The neutral of a three-wire system, or of a three-phase four-wire system, shall never be interrupted by a fuse or switch. Every three-phase circuit shall be controlled by a triple-pole circuit-breaker with overload trips on at least two phases, or by a triple-pole linked switch and a fuse on each pole. No fuse rated at less than 3 amperes need be employed on any final sub-circuit.

Earth Connections.—Only steel ships shall be wired on the single-conductor system. Earthing connections carrying current shall be of the same size as the corresponding insulated conductor. Earthing connections not normally carrying current shall be of copper of the same size as the working conductor (but not less than 0·003 sq. in.) up to 0·007 sq. in., and above that size not less than 0·007 sq. in. for every 50 amperes of working current or part thereof. Earth connections shall be secured by screws not less than $\frac{3}{8}$ in. in diameter.

Interference with Compasses.—Dynamos, batteries, and all apparatus producing an external magnetic field shall be fixed at such a distance from the compass that the magnetic field produced thereat has a negligible value. No single-conductor cable carrying continuous current shall be fitted within 30 ft. of standard and steering compasses. Conductors in the vicinity of the compass shall be twin, or as close together as possible. Incandescent lamps used for lighting the compass shall not consume more than 0·6 ampere, and no live part shall be less than 7 ins. from any part of the magnetic system.

Navigation Lamps.—Each navigation lamp is to be separately wired and controlled by a separate switch and fuses, and to have an automatic indicator in circuit to give warning of the failure of the light.

Storage Batteries.—The cells shall be so constructed that the electrolyte cannot be spilled with strong containers (not celluloid). They should be in a single tier and mounted on oil insulators. The deck must be lined with lead or other acid-resisting material, and all exposed metal protected with acid-resisting paint. The battery compartment must be well ventilated. Switches and fuses must be fixed outside the battery room. All connections in the battery room are to be of bare metal or lead-covered cables.

Fittings.—Fittings are to be so designed and fixed that dust and moisture cannot accumulate within them, and are not to be mounted on surfaces liable to become damp. In exposed positions they are to be weatherproof and waterproof; open type fittings must not be used near inflammable goods or where inflammable dust or gases can occur. Switches, etc., must not be installed in bunkers or where inflammable gases may be present. Weatherproof portable lamp fittings with metal frames must have all metal parts connected to earth by a third conductor in the flexible cord, and must be provided with hooks to hang them up with. Lampholders in weatherproof portable fittings must be earthed, and in open type fittings they must be insulated and protected with insulating shields. Plugs and sockets must be so constructed that they cannot be readily short-circuited or earthed or allow an arc to be maintained. Plugs must be provided with hand-shields or interlocked with switches in the sockets. Weatherproof plugs and sockets must be employed in exposed positions.

Lamps.—Arc lamps must have the whole of their live parts insulated from the frame, and must be provided with wired globes or other protection; they must not be fitted near combustible goods or where gases can accumulate, and each circuit must be controlled by a switch and fuse on each insulated pole.

Motors.—Motors over $\frac{1}{8}$ b.h.p. are to conform with the British Standardisation Rules, with carbon brushes, suitable terminals, and automatic lubrication. If fitted in compartments where inflammable goods or gases may be present, they must be of the flameproof type; where the temperature is liable to exceed 120° F., they are to be either pipe-ventilated or of the forced-draught type. Motors over 3 b.h.p. must have starters with no-volt release, or controllers.

Control Gear.—Regulators and controllers are to be of incombustible materials and guarded or enclosed in incombustible cases; contacts shall be renewable, and all live parts enclosed by metal covers, and so designed that they cannot be touched by the operator. Resistances shall not rise to an excessive temperature, and no accessible part of the apparatus may rise above 130° F. Internal connections shall not be soldered. Control gear shall not be placed where inflammable gases can accumulate, unless it is flameproof; in exposed situations it shall be totally enclosed. Resistances shall be placed in well-ventilated compartments and away from combustible material.

Heating and Cooking Apparatus.—Appliances shall be so constructed that parts which are handled cannot exceed a temperature of 130° F. The elements shall be readily replaceable; live and highly-heated parts shall be guarded. Connections between the elements and switches or external leads shall be made without solder, and their temperature shall not exceed 200° F. All appliances for pressures exceeding 150 volts shall be efficiently earthed. Whether portable or fixed, appliances shall be controlled by fixed switches; portable appliances shall have at least one section of the elements controlled only on the live side of the wall plug or other connection with the fixed portion of the circuit. Non-luminous appliances shall be provided with visual indicators showing when current is passing No appliance taking over 1,000 watts shall be portable.

Internal Communications.—Transforming apparatus and batteries shall conform with the rules for lighting and power plant. If the working pressure exceeds 25 volts, all parts of the apparatus shall be made and fitted in accordance with the rules for lighting and power circuits. Cables shall be made and fixed in accordance with the rules for light and power cables. Fuses need not be fitted in branch circuits for pressures not exceeding 25 volts, or in circuits supplied from primary batteries.

Lightning Conductors.—Conductors shall be fitted to all vessels having wooden masts, of copper tape or rope having not less than 0·15 sq. in. sectional area. When in dry dock, ships' lightning conductors shall be connected to an efficient earth on shore.

Oil Ships.—On oil ships the pressure shall not exceed 110 volts; no part of the system shall be earthed, and double-pole linked switches shall be used on every circuit or sub-circuit. All cables shall be lead-covered, with or without armour. Distribution shall be on the two-wire two-conductor system. No wiring shall be taken into oil-holds or coffer-dams, which must be lighted by lamps entirely outside the space and separated from it by an airtight glass bowl. Lamps in dangerous spaces shall be in gas-tight fittings, and the switches shall be outside the spaces; no portable lamps other than self-contained battery-fed lamps (mining type) may be used in dangerous spaces.

Trials.—The insulation of the whole system, with all lamps and fuses in place, is to be tested before putting into service with direct current at twice the working pressure between the system of conductors and earth, and shall not be less in megohms than 10 divided by the number of lamps (on lighting circuits), but the insulation resistance of any final lighting sub-circuit need not exceed one megohm. The insulation resistance of every piece of apparatus, with switch or control gear, etc., shall be not less than half a megohm. The installation shall be run for six hours and all the apparatus operated, not necessarily simultaneously.

General Rules of the Institution of Electrical Engineers.

(Revised 1916.)

(*Abbreviated.*)

LOW PRESSURE, NOT EXCEEDING 250 VOLTS.

General Arrangement.

Every system not being an earthed concentric system must be protected by main linked switches or main linked fuse-switches under the control of the consumer, and these must be easily accessible and placed as near the generator or the point of entry of the supply as circumstances permit.

Where the supply is given from the three wires of a three-wire system, the neutral conductor, whether earthed or not, must never be interrupted unless the outer conductors are simultaneously interrupted; hence no fuse or unlinked switch may be included in the main neutral conductor.

When the pressure between the outer conductors of a three-wire system exceeds 250 volts and the three wires of the system or two pairs of wires are brought into premises, the supply must be given from two pairs of terminals arranged so as to minimise the danger of shock, and the wiring from these terminals, including that behind distribution boards, must be kept distinct throughout in separated circuits which must not be bunched.

Where energy is taken from all the conductors of a two-phase or three-phase system, the conductors must be protected on each pole by an automatic circuit-breaker, or by a fuse in conjunction with a linked switch, or by a fuse-switch.

Conductors must radiate from distributing centres, and in large systems feeders will be necessary between centres and sub-centres. For lighting purposes in any sub-circuit which supplies more than a single point, the current must not exceed 6 amperes up to 125 volts, nor the power 600 watts, from 125 to 250 volts, and the maximum number of points on any sub-circuit must not exceed 10. Every sub-circuit must be protected on each pole by a fuse.

When protected from mechanical injury by metal conduits, or by a covering of tough rubber compound, conductors of opposite polarity may be bunched, and when carrying small currents for incandescent lighting, from sub-centres, conductors of the same polarity, if without joints, may be bunched when the protecting tubing or casing is non-metallic. If the supply is alternating and the protection iron or steel, the lead and return conductors must be bunched.

There must be no contact between conductors (or their insulating material, metallic sheathing or tubing) and gas pipes. Non-conducting distance pieces must be used where necessary.

Earthing conductors must be of copper and of a sectional area not less than that of No. 14 s.w.g.

Gas pipes must never be used to obtain an earth connection.

In places where inflammable or explosive dust, gases, or vapours are liable to be present, dynamos, arc lamps, mercury-vapour lamps, and wall plugs and sockets must not be used. In such situations, glow lamps must, with their holders, be enclosed in air-tight fittings of thick glass; switches, fuses, and resistances must be enclosed in flame-tight incombustible cases; and motors, with their live parts, starters, terminals, and connections, must also similarly be enclosed.

Conductors—Size and Conductivity.

Excepting for wiring fittings, the cross-sectional area of any copper conductor must not be less than that of No. 18 s.w.g. The cross-sectional area of fittings wires must not be less than that of a No. 20 s.w.g.

The size of conductors on lighting circuits within a building will be determined by the permissible drop in volts, which should not exceed 2 per cent., plus a constant allowance of 1 volt.

Insulated copper conductors must be of annealed copper, and must have a conductivity not less than that of the E.S.C. standard; where sulphur compounds are present in any part of the insulating material the copper in contact with the insulating material must be protected therefrom by tinning or otherwise.

All insulated copper conductors having a greater area than that of a No. 16 s.w.g. wire must be stranded.

Conductors—Insulation.

Conductors must be specially insulated with material which does not rapidly deteriorate at the highest temperature to which it will be subjected; for instance, rubber must not be allowed to exceed 130° F., and paper or fibre 176° F

The insulating material on any conductor other than a flexible must be throughout either—

(*a*) A non-hygroscopic dielectric, such as vulcanised rubber of the best quality, which only needs mechanical protection; or

(*b*) A hygroscopic dielectric, such a impregnated paper or fibre, which must be encased in a waterproof sheath, generally of soft metal, such as lead, drawn closely over the dielectric.

The dielectric must not soften sufficiently to allow decentralisation under working conditions.

The dielectric must be such that when the insulated conductor has been immersed in water for twenty-four hours it will, while still immersed, withstand a pressure test of 1,000 volts for half

an hour in the case of 250 volt cables, and one of 2,500 volts for half an hour in the case of 650 volt cables, with an alternator capable of giving an output of not less than 5 kilowatts.

Concentric conductors should in all respects conform to the requirements laid down for single conductors.

Conductors—Flexible.

Flexibles must be of a sectional area not less than that equivalent to No. 22 s.w.g., and they must be made up of wires twisted together on a short lay, the sectional area of each wire being not less than that of No. 36 s.w.g. The insulating material used as the dielectric must be pure rubber equal to washed Para rubber of the best quality or vulcanised rubber of the best quality. Pure rubber must be laid on in two layers, care being taken that each layer overlaps, and the radial thickness of the dielectric must not be less than 20 mils. Each coil of pure rubber flexible must be tested for 15 minutes with a pressure of 1,500 volts alternating between the conductors at a frequency of 50–100. Vulcanised rubber flexible must be insulated with one layer of pure rubber and two layers of vulcanised rubber. In the case of flexibles having a conductor cross-sectional area less than ·0009 sq. in., the radial thickness must not be less than 33 mils for low pressures and not less than 62 mils for medium pressures. When sulphur is present, the insulating material must not be in direct contact with the copper wires.

Conductors—Bare.

Conductors without any insulating covering may be used indoors—

As collector wires for travelling cranes and similar appliances, but they must be so supported upon insulators as to prevent contact between the conductors themselves, or between the conductors and the walls or the structural or other metal work, should a collector wire be displaced from any insulator. The insulation at each straining point must consist of double insulation with proper straining gear. The current must be under complete control by means of a switch and a fuse, or a fuse-switch, in each supply conductor. Lightning arresters must be fitted if the bare wiring extends to a position exposed to lightning.

As trolley wires for locomotives, cranes, and similar appliances, but they must be insulated by means of double insulation with proper straining gear between each wire and earth at their points of support. Wall rosettes or brackets used as supports for span wires should not be fixed within 1 ft. of any gas pipe. Controlling switches and fuses, or fuse-switches, and lightning arresters must be provided.

As battery connections, but such conductors must be well spaced from each other and from all structural or other metal work, and be rigidly supported on insulators.

For other purposes, under special circumstances and in positions inaccessible to unauthorised persons, but permission for such use should be previously obtained from the Fire Offices insuring the risk.

Conductors—Protection.

Insulated conductors (except flexibles) may be cased in steel conduits in accordance with the British Standard Specification, which must be earthed throughout; or they may be cased in wood, in dry places. Insulated conductors protected with tough rubber compound 50 mils thick and capable of resisting abrasion, acids, oils, and alkalis, may be used without conduits or wood casing.

Joints and Connections.

Joints, when unavoidable, must be accessible, and they must be mechanically and electrically perfect to prevent heat being generated. All joints must be soldered, except where flexibles are connected to hard wires. Soldering fluids containing acid, or other corrosive substances, must not be used.

When junction-boxes are used they must be so constructed that—

(*a*) the conductors cannot be readily short-circuited;
(*b*) the insulation between opposite poles is rigid and durable;
(*c*) the connections do not heat;
(*d*) if used in damp places, moisture is excluded by suitable means.

Conductors of larger sectional area than that of 7/18 s.w.g. must be soldered into proper cable thimbles for connection to terminals. Where there is any possibility of stress on the thimbles the conductors must be secured, in addition to the soldering, by some mechanical device, such as one or more set screws.

Switch and Distribution Boards.

Main and distribution switch and fuse boards must be fixed in dry situations, and be so arranged that a fire thereon cannot spread, whether occurring at the front or back. Their bases must be of incombustible and insulating material, with moisture-proof bushes fitted at the points of support if the material is hygroscopic. The possibility of a permanent arc must be prevented either by sufficient spacing of all live parts, or by the use of separating partitions.

Connections at the back of main boards must be accessible, symmetrically placed, and spaced apart, and so arranged as to prevent the access of acid fumes from batteries to the board.

No open-type fuses may be placed at the back of switchboards.

The cases of instruments, if metallic, must be insulated from the circuits.

Every voltmeter or pilot lamp with its connecting wires should be protected by a fuse on each pole.

Combination switch and fuse boxes must be so arranged that it is possible to operate a switch without uncovering the fuses, if these are of the open type.

When fuses are of the open type and grouped together, the case of the distribution board will be a sufficient protection from the fused metal provided the distance from cover to fuse exceeds 1 in. with glass-fronted cases. If made of wood, the case must be protected with fire-resisting material, and a clearance of 1½ in. should be provided.

Switches.

Switches, whether fixed separately or combined with lampholders or fittings, must comply with the following requirements :—

(*a*) Overheating must not take place at the point of contact or elsewhere, when the full current flows continuously.

(*b*) They must be so constructed or arranged that the contacts cannot accidentally close when left open.

(*c*) They must be incapable of forming a permanent arc when breaking circuit, and they must be tested with pressures and currents 50 per cent. in excess of those which will be used on the circuits for which they are intended.

(*d*) The bases must be of incombustible non-conducting and moisture-proof material.

(*e*) Circuit-breakers must be so arranged and placed that no combustible material is endangered by their action.

(*f*) Unless placed in an engine-room or in a compartment specially arranged for the purpose, switches must have their live parts covered. The covers must be of incombustible material, and must be either non-conducting, or of rigid metal, and clear of all internal mechanism.

(*g*) Switches in positions where they are liable to injury, or contact with goods, should be further protected by an open-fronted box or other suitable guard.

(*h*) Handles must be insulated and so arranged that the hand cannot touch live metal, or be injured through an adjacent fuse blowing.

(*i*) Switches having a handle projecting through an open slot in the cover must not be used.

Fuses.

Fuses must comply with the following requirements :—

(*a*) No overheating of any part must take place when the full current flows continuously.

(*b*) They shall effectually interrupt the current when a short-circuit occurs, and when the working current through them does not exceed 10 amperes the fuses must interrupt the current before it exceeds three times the working current.

(*c*) The terminals must be so spaced apart or screwed that an arc cannot be maintained when the fuse is blown.

(*d*) The bases must be of incombustible, non-conducting, and moisture-proof material.

(*e*) Unless placed in an engine-room or in a compartment specially arranged for the purpose, fuses must have incombustible covers to retain the fused metal.

(*f*) Fuses must not be placed in ceiling roses, lampholders, or wall sockets.

Branch fuses must be grouped together in accessible positions in sight, and should be symmetrically placed and labelled for each circuit.

Wall Plugs and Sockets.

Wall plugs and sockets must be capable of withstanding a test with pressure and current 50 per cent. in excess of those for which they are intended. They must have incombustible bases, and in damp places they must be watertight.

Wall plugs and sockets must be constructed so that they cannot be readily short-circuited. Clearances should be such that an arc cannot be started if the connector is pulled out while the current is flowing.

Flexibles for portable fittings must end in a wall plug and socket fitted with a suitable cord-grip.

Every wall plug and socket must be independently controlled by a fixed switch on the live side. To avoid leaving the flexibles alive, it is preferable that the portable fittings themselves should not be provided with switches.

Ceiling Roses.

Ceiling roses must comply with the following requirements :—

(*a*) The bases must be of incombustible, non-conducting and moisture-proof material ;

(*b*) The covers must be of incombustible material, and must be either non-conducting, or of rigid metal clear of all live parts ;

(*c*) The terminals must be relieved of the direct pull of the attached conductor and fitting, and be so arranged that no short circuit can take place ;

(*d*) They must not be used for attachment to more than two pairs of flexibles, unless specially designed for multiple pendants.

Fittings for Supporting Lamps.

Wherever brackets, electroliers, or standards require to have the conductors threaded through tubes or channels formed in the metal work, these must be of ample size and have no sharp angles or projecting edges, which would be liable to damage the insulating material, and the open ends should, where possible, be bushed.

Where possible, the conductors should be carried without joints through the fittings to the lamps, but where connections at the fitting are unavoidable special care must be taken to make the joints equal in conductivity and insulation to the rest of the work.

Lampholders.

Lampholders must—

(1) be incombustible ;

(2) not be hung from flexibles exposed to the weather ;

(3) not contain a switch if for pressures above 250 volts.

Switch lampholders must be controlled, preferably in groups of not more than ten, by a wall switch.

Arc Lamps.

Arc lamps must—

(*a*) be guarded by lanterns or globes arranged to intercept falling particles of carbon ;

Note.—Lanterns or globes may be dispensed with where an open arc is essential, as in photography, and where no combustible material is present, as in a foundry ; but the flooring immediately under the lamp, if of a combustible nature, must be protected from falling particles of carbon. Open inverted arc lamps, in the presence of combustible matter, must have metal reflectors rigidly attached beneath the arc, which at all times must be below the level of the upper edge of the reflector. The reflector must project at least 15 ins., measured horizontally beyond the arc on all sides.

(*b*) be insulated from their support ;

(*c*) be fixed so that their cases cannot come into contact with any metallic object ;

(*d*) be controlled by linked switches and protected by a fuse on each pole.

Glow Lamps.

Glow lamps must—

(*a*) Not be placed in close proximity to combustible materials unless specially protected ; shades made of combustible materials must be kept free from contact with the lamps and their holders by suitable guards or supports ; celluloid or similar material for shades and candle tubes is strictly prohibited ;

(*b*) be fitted with guards if placed in positions where goods are liable to be stacked in contact with them ;

(*c*) with their holders, be enclosed in air-tight fittings of thick glass, if placed in positions where they are exposed to inflammable vapour or gas, or to excessive dust or flyings, as in dust-rooms and in raising-rooms.

Heaters.

Heaters must be—

(*a*) so constructed and mounted that their supports and connections cannot become overheated, precautions being taken with regard to their surroundings as in the case of non-electrical heating appliances. They must not be placed in close proximity to combustible materials, unless suitably protected ;

(*b*) controlled by double-pole switches if consuming over 1,000 watts.

Heating circuits must be protected by a fuse on each pole and by a wall switch in each room.

Resistances, Choking Coils, and Alternating-Current Transformers.

The live parts of the above must be—

(*a*) carried on frames or supports and enclosed in cases. These frames, supports, and cases must be of incombustible material efficiently insulated from the conductors ;

(*b*) amply ventilated. Where there is danger of inflammable dust or flyings entering, apertures in the cases must be protected by fine-mesh wire gauze or by finely-perforated sheet metal ;

(*c*) so proportioned that their cases cannot attain a temperature exceeding 176° F.

(*d*) so fixed that no unprotected combustible material is within 6 ins. of the frames or cases containing them, or within 24 ins. measured vertically above them.

Motors.

Motors rated at more than one-third of a horse-power must comply with the following requirements :—

(*a*) They must be protected from damp, dust, and mechanical injury.

(*b*) They must be so placed that no unprotected woodwork or combustible material is within

a distance of 12 ins. from them measured horizontally, or within 4 ft. measured vertically above them, unless they are of a totally enclosed type.

(*c*) When mounted upon wood flooring, unless of the totally enclosed or ventilated type, they must have a sheet of metal inserted between them and such flooring.

(*d*) In positions exposed to inflammable dust or flyings, or where combustible materials are manipulated or stored, they must be either of the totally enclosed or of the ventilated type, provided that any ventilating openings in the cases of continuous-current machines are protected by fine-mesh wire gauze or by finely perforated sheet metal, and that all slip-rings, commutators, and brushes are totally enclosed. Inspection openings fitted with plate glass or fine-mesh wire gauze are allowed. Induction motors may have unprotected ventilating holes in their metal cases, but slip-rings or brushes or any sliding contacts must be completely enclosed in metal cases.

(*e*) They must be controlled by a double-pole switch and protected by a fuse or circuit-breaker on each pole, except with earthed concentric wiring.

(*f*) The starting gear of a continuous-current motor must consist of a starting switch with a no-volt release, and a series starting resistance.

(*g*) The shunt circuit of any motor must be so connected that the field is excited before the armature circuit is completed.

(*h*) Every alternating-current motor must be provided with a suitable starting device.

Dynamos.

Dynamos must comply with the following requirements:—

(*a*) They must not be placed in positions exposed to inflammable dust or flyings, nor where combustible materials are manipulated or stored.

(*b*) They must be protected from damp, dust, and mechanical injury.

(*c*) They must be so placed that no unprotected woodwork, or other combustible material, is within a distance of 12 ins. from them measured horizontally, or within 4 ft. measured vertically above them.

(*d*) When mounted upon or above wood flooring, they must have a sheet of metal inserted between them and such flooring.

(*e*) They must be controlled by a double-pole switch and protected by a fuse, or by a circuit-breaker, on each pole, except with earthed concentric wiring.

Accumulators and other Batteries.

The room in which accumulators or primary batteries are placed must be well ventilated.

The case of each cell must stand on insulators.

Bare conductors are preferable for end and regulating cell connections; and each regulating cell should be protected by a fuse. Each independent circuit from the battery must be suitably fused.

Testing.

The insulation resistance between conductors and between conductors and earth of the whole or any part of the wiring must not be less in megohms than 30 divided by the number of points under test.

In the case of lighting circuits, the whole of the lamps having been connected to the conductors and all switches and fuses being on, the insulation resistance of the whole or any part of the installation must not be less in megohms than 25 divided by the number of lamps.

The value of systematically inspecting and testing apparatus and circuits cannot be too strongly urged. Records should be kept of all tests, so that any gradual deterioration of the system may be detected. Cleanliness of all parts of the apparatus and fittings is essential.

Before making any repairs or alterations, the circuits which are being attended to must be entirely disconnected from the supply.

ELECTRIC CLOCKS AND TIME SERVICE.

The Pulsynetic System.

The Pulsynetic system, designed by *Messrs. Gent & Co., Ltd., Leicester*, is arranged to operate any number of impulse clocks, workmen's time recorders, turret clocks, etc., installed in any large building or institution and connected electrically in series. The hands of such dials are all caused to advance simultaneously at half-minute intervals by means of step by step impulse propulsion movements (fig. 39), which, taking the place of the ordinary spring, or weight, and train of wheels, are operated by electric currents sent out periodically by a MASTER PENDULUM or TRANSMITTER. The latter (fig. 40A) consists of a pendulum, which, by means of a pawl, causes a ratchet count wheel to revolve tooth by tooth—one tooth at every vibration. One of the teeth on the wheel is cut deeper than the others, so that a prolongation of the pawl is enabled to engage with and move aside a spring detent, which it misses during the passage of the other teeth. The detent, when moved aside, allows a weighted gravity lever to descend, and this, through the medium of a friction roller carried thereon and an inclined plane fixed on the side of the pendulum, gives an impulse to the latter, imparting energy sufficient to enable the pendulum to swing during another revolution of the wheel—that is, for a period of half a minute. This gravity

impulse is, of course, constant and invariable, so that other factors, such as temperature variation, etc., being suitably provided for, the time-keeping qualities of the pendulum are exceptionally good. The descent of the gravity lever is caused to close an electrical circuit, which fulfils a dual function : (*a*) energising an electro-magnet, which causes the restoration of the gravity lever to its potential position and (*b*) sending an electrical impulse through the external circuit to

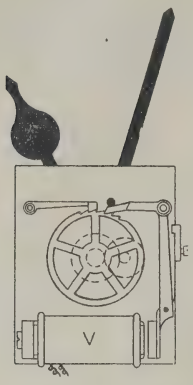


FIG. 39.

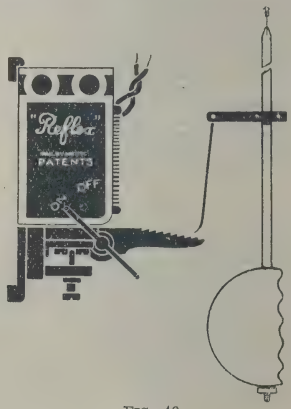


FIG. 40.

operate the impulse movements. The duration of this contact is about ·05 second ; but, depending upon the total self-induction of the circuit, its duration is self-regulating, in that the contact is not broken until the self-induction has been overcome and all the dials operated.

The system includes in series with the transmitter and the clocks a weak battery warning-bell which rings automatically every half minute should the battery run down and so endanger the safe working of the system. This warning is given before the actual breakdown point is reached, affording a safe margin of time in which to recharge or renew the battery. With the latest form of impulse movement one cell only is required in the battery for every three 12-in. clocks in circuit.

The system lends itself conveniently to the automatic operation of sound signals for the starting and ceasing of work, and also to the convenient operation of output and idle machine recorders. This class of recorder has proved itself useful in connection with textile machines and machines which should not be idle during working hours.

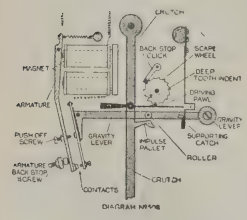


FIG. 40A.


Workmen's Time Recorders are now controlled from the half minute impulses of the system by means of the 'Pulsynetic Reflex' Pendulum Control (fig. 40). With this control the recorders remain independent units, and no mechanical alterations are made, but with the 'Reflex' fitting, as shown in fig. 40, attached to their pendulums, all recorders are compelled to keep in step with the transmitter.

Even if the electrical connections be removed the recorders continue to work under their own power as before, but uncontrolled. This 'Reflex' control is also applicable to the pendulums of large public clocks, and its introduction is a marked advance in the science of the Unification of Time.

For large turret clocks, the accuracy of whose performance is subject to interference from variation in wind pressure or from accumulations of snow and ice on the hands, a special WAITING TRAIN movement is used, in which the hands are driven continuously by a special type of electric movement sufficiently powerful to overcome any such resistance ordinarily to be expected. The hands are caused to travel at a slightly faster rate than usual, to gain in fact about two seconds per half minute. Every half minute, however, the driving train disconnects

The

OUTSTANDING FEATURES *of* GENTS' Pulsynetic System of Electric Clocks:



¶ The operation of 'Start and Cease Work' Sound Signals.

¶ The regulation of existing Workmen's Registers.

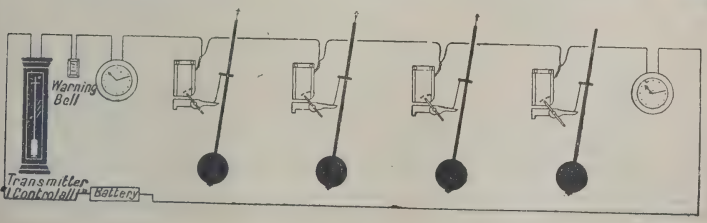
¶ The control of Works, Office & Yard Clocks.

RESULTS—
ONE FACTORY
—ONE TIME

FARADAY Wks
GENT & Co Ltd
LEICESTER
Get details for future reference.

LONDON—25 Victoria St., S.W.1
NEWCASTLE-ON-TYNE—Tangent House, 52 Blackett St.

GENTS' 'REFLEX' PENDULUM CONTROL
will govern the pendulum of any mechanical clock, and make such clock keep dead in step with transmitter. Invaluable for Workmen's Registers.
Even if wires foul or fall, mechanical clocks 'carry on' as before under own power.



F. 1954

LIGHTNING CONDUCTORS

MANUFACTURED, SUPPLIED, AND SCIENTIFICALLY INSTALLED BY

R. C. CUTTING & CO.,

of Vulcan House, 56 Ludgate Hill,

LONDON, E.C. 4.

Contractors to: The Lords of the Admiralty; H.M. Government; Office of Works; War Department; Home Office; The Principal Railways, Corporations, Colleges, Cathedrals, Titled and Landed Gentry throughout the World.

Established 1879.

Telegrams: ADJUNCTOR, PHONE, LONDON.



Telephone: 8495 CENTRAL.

Architects' Plans inspected and free schemes and quotations submitted

Steel Structures a Speciality.

Expert advice given on existing installations. Competent mechanics sent to all parts. Detailed instructions for fixing supplied with all exported goods.

Contractors also for erecting, razing, heightening, or restoring, with inexpensive scaffolding, STEEL, BRICK, or CONCRETE Chimney SHAFTS, Church SPIRES, Tall TOWERS, and other lofty and dangerous structures.

itself from the hands, which then wait until the driving power is reconnected by means of the usual half-minute electric impulse current sent out by the transmitter driving the other impulse clocks in the building. The waiting period is practically unnoticeable—so that in very large turret clocks immunity from the usual weather interruptions is achieved, together with a greater degree of accuracy in timekeeping than in clocks operated in the usual manner. Efficient electric striking, or striking and chiming apparatus, can be supplied for bells of any size.

This WAITING TRAIN movement has been chosen for driving the hands of the largest electric clock in the world, in the towers of the offices of the Royal Liver Friendly Society at Liverpool. This has four 25 ft. dials, and the weight of a pair of hands is 5 cwt. The minute hands are 14 ft. long, 2 ft. 6 ins. wide at the greatest width, and 9 ins. thick where attached to the spindle. The combined weight of each pair of hands, spindles, and internal counter-weights, is a trifle over half a ton. The area of the hands exposed to snow and wind is very great, nevertheless the type of mechanism employed has shown itself able to withstand the disturbing effect of several severe storms since its erection in 1911.

For ship use special clocks are provided, the Impulse Transmitter being fitted with an automatic arrangement, which enables the whole of the ship's clocks to be automatically advanced or automatically retarded, while sailing east or west. These Pulsynetic marine clocks are installed in a large number of liners and ocean-going steamers.

LIGHTNING CONDUCTORS.

CODE OF RULES FOR THE ERECTION OF LIGHTNING CONDUCTORS.

(*Lightning Rod Conference*, 1882, *and Lightning Research Committee, Royal Institute of British Architects*, 1905.)

Two main lightning rods, one on each side, should be provided, extending from the top of each tower, spire, or high chimney stack by the most direct course to earth. Horizontal conductors should connect all the vertical rods (*a*) along the ridge, or any other suitable position on the roof; (*b*) at or near the ground line. The uppermost conductor should be fitted with aigrettes or points at intervals of 20 or 30 feet. Short vertical rods should be erected along minor pinnacles and connected with the uppermost horizontal conductor. All roof metals, such as finials, ridging rain-water and ventilating pipes, metal cowls, lead flashing, gutters, etc., should be connected to the horizontal conductors. All large masses of metal in the building should be connected to earth, either directly or by means of the lower horizontal conductor. Where roofs are partially or wholly metal lined they should be connected to earth by means of vertical rods at several points. Gas pipes should be kept as far away as possible from the positions occupied by lightning conductors, and as an additional protection the service mains to the gas meter should be metallically connected with house services leading from the meter.

Material for Rod.—Copper, weighing not less than 6 oz. per foot run, either in the form of tape or rope of stout wires, no individual wire being less than No. 12 S.W.G. Iron may be used but should not weigh less than 36 oz. per foot run. Subsidiary conductors for connecting metal ridging, etc., to earth may with advantage be of iron and of a smaller gauge, such as No. 4 S.W.G. galvanised iron.

Points.—The point of the terminal should not be sharper than a cone of which the height is equal to the radius of its base: but a foot lower down a copper ring should be screwed and soldered on to the upper terminal, in which ring should be fixed three or four sharp copper points, each about 6 ins. long. The number of conductors or points to be specified depends upon the size of the building, the material of which it is constructed, and the comparative heights of the several parts; no general rules can be given, but even ordinary chimney stacks, when exposed, should be protected by short terminals connected to the nearest rod, as accidents often occur owing to the good conducting power of the heated air and soot in a chimney.

Fixing.—Rods should preferably be taken down the side of the building which is most exposed to rain. They should be held firmly by holdfasts of the same metal as the conductors (not by insulators), but not so tightly as to prevent free expansion and contraction due to changes of temperature. They should not be bent abruptly round sharp corners; the vertical rods should be carried at a certain distance from the wall to prevent dirt accumulating, and to avoid the necessity of running them round projecting masonry or brickwork. In some cases it may be necessary to carry a rod through a string-course or other projecting stonework to avoid curvature, in which case the hole should be large enough to give ample clearance to the conductor, but it is better to run outside, keeping the rod away from the structure by means of holdfasts as mentioned above.

Joints.—Joints in series of conductors should be as few as possible. As a rule they should only be necessary where the vertical and horizontal conductors are connected, and the main conductors themselves should always be continuous, without artificial joints. Connections between vertical and horizontal conductors should always be in places readily accessible for inspection. Every joint, besides being well cleaned, screwed, scarfed, or riveted, should be thoroughly soldered, and should be protected from the action of the air, especially in cities.

Painting.—Iron rods, whether galvanised or not, should be painted; copper rods may be painted or not, according to architectural requirements.

Protection.—Copper rods to the height of 10 ft. above the ground should be protected from injury and theft by being enclosed in an iron pipe reaching some distance into the ground.

Earth Connections.—It is essential that the lower extremity of the conductor be buried in permanently damp soil; hence proximity to rain-water pipes and to drains is desirable. It is a very good plan to make the conductor bifurcate close below the surface of the ground, and adopt two of the following methods for securing the escape of the lightning to earth: a strip of copper tape may be led from the bottom of the rod to the nearest gas or water *main*—not merely to a lead pipe—and be soldered to it; or a tape may be soldered to a sheet of copper 3 ft. sq. and $\frac{1}{16}$ in. thick, buried in permanently wet earth, and surrounded by coke, charcoal, or pulverised arc-lamp carbons (coke, however, is likely to set up corrosive action on the earth-plate), or many yards of the tape may be laid in a trench filled with coke, well rammed. Where iron is used for the rod, a galvanised iron earth-plate should be employed. A tubular earth connection driven into moist ground makes an effective earth, especially if it is connected to a rain-water pipe. (See also 'Earth Connections,' *below*.)

Masses of Metal.—As far as practicable the conductor should be connected to all extensive masses of metal, such as ornamental ironwork, hot-water pipes, etc., both external and internal; but it should be kept away from all soft metal pipes, and from internal gas-pipes of every kind. Church bells and turret clocks should be connected with the conductor. In the case of a long line of metal ridging, each end of the ridging should be directly connected to earth by a rod. Where the ridge is non-metallic, a horizontal conductor should be run at a short distance above the ridge and be connected to earth.

Factory Chimneys.—These should have a copper band round the top, and stout sharp copper points, each about 1 ft. long, at intervals of one or two feet all round the circumference. The rods should be connected with all bands and metallic masses in or near the chimney. As an alternative, the rods above the band may be curved into an arch provided with three or four points. Two lightning rods should be carried down from the band to earth.

Colleries.—Undoubted evidence exists of the explosion of firedamp in coal mines through sparks from atmospheric electricity being led in to the mine by the wire ropes of the shaft and the iron rails in the galleries; hence the head-gear of all shafts should be protected by proper lightning conductors.

Inspection.—Before giving his final certificate the architect should have the conductor carefully examined and tested by a qualified person, as injury to it often occurs up to the latest period of the works from accidental causes, and often from the carelessness of the workmen.

Earth Connections.

In making earth connections for electrical circuits, lightning rods, etc., it is desirable to provide several paths to earth, as far apart as possible. Connection should be made with the stratum of permanently moist earth nearest the surface of the ground, rather than to deeper layers or even to the water in a deep well. The best earth connection is a water pipe. For most purposes galvanised iron pipes, about 1 in. in diameter, give satisfactory results; in a series of experiments such pipes, driven into stony clay soil, gave the following average results per pipe:—

1 ft. deep .	149 ohms	4 ft. deep .	50 ohms.
2 ft. „ .	88 „	6 ft. „ .	36 „
3 ft. „ .	64 „	8 ft. „ .	29 „

Generally, if moist earth is reached, pipes need not be driven deeper than 10 ft. The resistance of two earth-pipes in series, driven 10 ft. deep, becomes practically constant at any distance apart from 10 ft. upwards. Earth-pipes connected in parallel should be at least one foot apart. They need not be larger than 2 ins. in diameter.

If earth-pipes are used it is better to bury two small plates 20 ft. apart, connected by a stout wire, than one large plate. They should be on edge, with the soil well rammed on both sides. In shallow soil over rock, long narrow strips of metal buried in trenches should be used. Patented devices offer no special advantages. Two plates in parallel, each 2 ft. by 4 ft., 6 ft. deep, 5 ft. apart in stony clay soil had a joint resistance of 16 ohms. A strip of galvanised iron 1·5 ins. wide and 20 ft. long, in a trench 12 ins. deep, had a resistance of 17·7 ohms. The resistance of a water pipe is usually less than 1 ohm, averaging $\frac{1}{4}$ ohm. The addition of salt to the soil round the earth connection greatly reduces the resistance; so does the packing of coke or charcoal round the plate, but both these devices hasten the corrosion of the plate. As a high potential gradient may exist on the surface near the earth connection, unless it is of the buried type, the earth-pipe and connecting lead should be guarded to prevent accidental contact with them. The joint between the lead and the earth-pipe or plate should be embedded in concrete for protection, and the earth-wire should be covered throughout its length. All earth connections should be inspected and tested at least once a year.

Phœnix Office Rules for Lightning Conductors.

The Phœnix Fire Office, in their rules for lightning conductors, point out that the only way to obtain absolute security against lightning is to enclose the building in a metal framework constituting the 'bird-cage' system of conductors. This can be accomplished generally by utilising the rain-water pipes and gutters as part of the system. The ordinary conductors must be fixed in addition, and the whole system effectively earthed. The material of the conductor should

be of copper tape, measuring at least 1 inch by $\frac{1}{8}$ inch, or, if copper cable be adopted, it should not consist of less than seven strands, each $\frac{1}{4}$ inch diameter. Soft iron must be used in place of copper, and, except for chemical reasons and for permanence, the sectional area need not be greater than in the case of copper. Conductors should be kept a certain distance away from walls so as to prevent the accumulation of dirt, but they must not be insulated. If a copper plate is used for the earth connection it should not be less than 3 square feet in area and $\frac{1}{8}$ inch in thickness, and should be adopted only where it will always be in water or moist earth; otherwise connection should be made to the water mains, or the 'tubular' system should be employed. The number of connections depends on the ground area of the building, but there are few structures where less than two are necessary. The elevation rod of factory chimneys should be a circular band placed round the top of the shaft, with points fixed at an angle of 45°, and extending outwards, or an arch of metal, provided with points, may be fixed across the mouth of the chimney.

ELECTRIC HEATING AND COOKING.

A Swiss Commission reporting on the experience of 38,000 consumers using electrically heated apparatus states that the average lives of the heaters are: boilers, 2–10 years; frying-pans, 2–4 years; hot-plates, 1–2 years; flatirons, 2–8 years. Pure mica is the most satisfactory insulating material; clay insulators are also effective. For the plug connections, porcelain or steatite is recommended. The contact plug should be more than 4 mm. in diameter. Hot-plates are preferred to boilers. The average consumption is 0·88 kw. hr. per head per day, exclusive of heating water for washing; including water-heating, 1·04 kw. hr. Each connection for a family of average size (4½ persons) requires a supply of 250 watts for lighting, and 2,500 watts for cooking, or 0·55 kw. per person. There are in winter three peaks due to the cooking load—morning 20 per cent., mid-day 45 per cent., and evening 25 per cent. of the capacity connected. In the case of a network laid out for lighting and power (excluding large factories), if one-fifth of the families cooked solely by electricity, the mains would have to be increased in capacity by 50 per cent. In the case of a large town with 15,000 lighting connections, if one-fifth of the families cooked by electricity the maximum load would be increased by 9 per cent. and the energy sold by 12 per cent.

The time required to boil a given quantity of water with a heater of known wattage is approximately given by the formula :—

$$\text{Time in minutes} = 3{,}700 \times \text{pints} \div \text{watts}.$$

More generally, to heat any liquid to any temperature not exceeding its boiling point is given by the following formula (*Simplex Co.*) :—

$$\text{Time in minutes} = n.g.s.\,(t - t_1) \times 2{,}180 - (\mathrm{W} \times e),$$

where n = no. of pints, g = specific gravity of liquid, s = specific heat of liquid, t and t_1 = initial and final temperatures Fah., W = watts, e = thermal efficiency, per cent. (from 90 to 95 per cent.).

The following are average data for domestic cooking apparatus, etc. :—

Ovens of 1½ to 2 cub. ft., 1½ to 2½ kw. on full heat.
Hot-plates, 6 ins. diameter, 300 watts.
" 18 ins. × 12 ins., 1,800 watts on full heat.
Toasters, 500 to 600 watts.
Egg-boilers, 3 eggs, 300 watts; 6 eggs, 400 watts.
Saucepans, fish-kettles, etc., 1 pint, 400 watts; 12 pints, 1,500 watts.
Frying-pans, 8 in. diameter, 400 watts; 12 in., 650 watts.
Irons, 0·3 lb., 200 watts; 15 lb., 500 watts.
Sterilisers, 400 to 1,600 watts.
Glue-pots, 250 watts upwards.
Soldering-irons, 130 watts upwards. (*Mears.*)

For large kitchens in restaurants, works canteens, etc., various sizes of apparatus are made and combinations. The following data are taken from actual installations.

Class of Kitchen.	Total kilowatts.	Annual Consumption units.	No. of Meals per week.
Restaurant	247·6	146,500	9,518
Staff feeding	130·9	97·140	2,944
" "	40·5	21·141	991
" "	32·8	20,690	640

In the United Kingdom there were in January, 1918, over 400 installations of this class, having a total capacity of about 22,000 kw., and preparing nearly 130,000 meals per day. (*W. A. Gillott.*)

Electricity at one penny or even three-halfpence per unit compares favourably with gas at 2*s.* 3*d.* to 3*s.* per thousand cubic feet for all oven work. (*C. Scott.*)

ELECTRICAL PRECIPITATION OF SMOKE AND DUST.

In recent years the Lodge system of precipitating dust particles or fumes in gases, such as the flue gases from metallurgical works, cement mills or boiler furnaces, has been greatly developed by the Research Corporation, U.S.A., under Cottrell's patents. The apparatus consists of iron pipes through which the gases are led, preferably downwards, with a steel or nichrome wire suspended in the axis of each tube; the wires are charged to a pressure of 30,000 to 100,000 volts and the pipes are earthed. The electric charge is derived from A.C. transformers with mechanical rectifiers driven in synchronism with the alternating pressure so that the polarity of the wires is always negative. The process can be carried on without cooling the gases and requires little power, from 5 to 50 kilowatts being usually sufficient. Resistance should be inserted in the low-pressure circuit to limit the short-circuit current and to provide means of regulation, and reactance in the high-pressure circuit to prevent surging of the electric charge. From 80 to 98 per cent. of the dust can be deposited; in some cases the introduction of steam is necessary. In the case of blast furnace and cement mill gases, large quantities of potash can be recovered, particularly if salt is added to the charges of the blast furnace. Particulars of some successful installations are given below :—

Nature of Process.	Number of Pipes.	Length and Diameter of Pipes.	Pressure volts.	Rate of Flow of Gases.	Remarks.
Copper converter	608	10 ft. × 5 in.	30,000	10 ft. per sec.	97·25 per cent. recovered.
Silver furnace .	Chamber 8 ft. × 6 ft. × 16 ft.		50,000	—	Electrodes 6 in. lead strip.
Cement mills .	800	15·5 ft. × 12 in.	70,000	3·5 ft. per sec.	Temp. 900° F. 20 tons per day
Copper and lead smelting works	384	15 ft. × 12¼ in.	60,000	10,000 cub. ft. per day	Plant increased to 1,312 pipes.
Detarring coal gas	—	—	40,000 to 80,000	30,000 cub. ft. per hour	Unrectified alternating current.

Careful tests should be made before deciding on the dimensions, etc., of the apparatus to be installed. Corrosive substances can be dealt with satisfactorily. At a certain cement factory the potash recovered is worth more than the cement. The kenotron is an efficient rectifier up to 250,000 volts. A similar process is used for separating oil from water.

ELECTRICITY IN AGRICULTURE.

The principal use of electricity in agriculture is to drive machines, in addition to lighting the farm buildings; it is also experimentally used for stimulating the growth of plants. The average power required on a British farm of not more than 100 acres is about 3 h.p.; more than 10 h.p. is rarely needed. In Wales, 270 installations on farms were carried out by one firm in ten years. Motors are used either to drive stationary machines indoors from counter-shafting, or, being mounted on wheeled trucks or stretchers, to drive portable machines out of doors, through belting. A farm load has an excellent diversity factor, and as it does not come on during the evening peak load it is very acceptable to a public supply system. At Hereford the average revenue from farms is about 20*l.* each per annum. With an electric milker one person can milk six cows at once, using 20 watt-hours per cow. To churn 80 lb. of butter requires 1 kw.-hour. Cutting 1 ton of ensilage consumes 1·38 kw.-hours. Threshing corn requires 70 watt-hours per bushel of oats, 100 watt-hours per bushel of barley, 160 watt-hours per bushel of wheat. Grinding a bushel of oats takes 420 watt-hours. Elevating 1 ton of hay, 200 watt-hours. The most suitable type of machine is the three-phase induction motor, on account of its simplicity and safety from fire; fire risk is a most important consideration in connection with farm work.

Electric ploughing is a special application of electricity under exceptional conditions; it is usually effected with hauling gear mounted on trucks, which travel along the sides of the field, hauling the plough (with three to five shares) to and fro across the land. The tractive effort required for ploughing in light soil is 740–820 lb. per sq. ft. of section ploughed; in heavy soil 1,100–1,250 lb. For ploughing a furrow or furrows w ft. wide and d ft. deep, at v ft. per second, the horse-power required = $kwdv/550$, k being a constant as above, depending upon the soil. The speed v should not exceed 5 or 6 ft. per second. The motor should be capable of hauling double the normal load at times. Furrows up to 650 yds. long can be ploughed in this way. On a large farm the capital charges amount to 12*s.* per acre, wages to 2*s.*, energy at 1*d.* per unit to 2*s.* 6*d.* per acre for deep ploughing (12–14 ins. deep), total 16*s.* 6*d.* per acre. For ordinary ploughing the cost is 11*s.* 4*d.* per acre. The hauling gear can be used also for harrowing and rolling the land, and for driving other machinery. The motor for ploughing should be of 25–30 h.p.

(*Delamarre.*)

For stimulating plant growth, the silent discharge from fine bare wires suspended above the crops at a pressure of 50,000 volts or more, D.C., has been much used for experimental purposes. The Agricultural Discharge Co. suspends the wires 13 yds. apart, at a height of 18 ft., using 40 to 50 poles per acre. The Board of Agriculture reports that in 1916 there was an average increase of 30 per cent. in the yield of the crops electrically treated. Experiments are also in progress to determine the effect of passing an electric current through seed in a chemical solution, but official tests gave discouraging results.

TELEPHONY.

Telephonic Transmission.

When an electrical impulse is started in a conductor, the effect of resistance, or of uniformly distributed low insulation, results in a definite attenuation which increases with the length of the circuit, and the effect of capacity is to cause the wave to spread out, this "tailing," as it is termed, not only increasing the attenuation by lowering the amplitude, but causing distortion of the wave itself. This distortion eliminates the higher notes and harmonies, and in extreme cases causes the voice to lose its characteristic tone, and ultimately to become inarticulate. It is found that with long circuits free from external disturbance, such as underground wires, the practical limiting distance of speech is fixed by the loss of amplitude of the waves ; in other words by the diminution of volume rather than by the loss of articulation, although when these limits are approached it is found that articulation begins to suffer, and when the line is still further lengthened, the tones become low and hoarse, and speech ceases to be practicable. This points to the fact that in practical work attenuation due partly to resistance, and partly to electrostatic capacity, is the dominant factor, and this attenuation when combined with disturbance from neighbouring electrical conductors actually determines the limit of speech.

The simple K R law applies with some degree of accuracy to telephonic cables in cases in which wires of approximately the same gauge are concerned, but it fails in cases in which the electrical constants K, R and L vary materially, and it is quite inapplicable as part of a general law to open lines where self-induction is a marked factor or where the conductivity of the wires varies materially. Observations made by the Bell Companies in America show that the K R law fails owing to no account being taken of the important factor L. We are now fairly well acquainted with the various factors that govern and limit the range of possible speech, and the methods by which these limits can, under favourable conditions, be extended ; such, for example, as the partial neutralisation of the effects of static capacity by the addition of self-induction.

For the purpose of determining the limits of speech, and ascertaining the degree of volume and articulation, or in other words the audibility, which may be accepted as satisfactory, and further to establish standard circuits with well-known constants of R, L and K to which all lines may be reduced, one of the types of ordinary lead-covered paper insulated cables, in which the above constants are measurable, has been selected, both in America and in England, and the dimensions of the English standard cable, which agree closely with American figures, are as follows :—

Gauge S.W.G.	Weight per Mile.	Diameter.	R (loop).	K Wire to wire.	L.	Insulation.
	Lbs.	Mils.	Ohms.	Mfd.	Henries.	Ohms.
20	20	36	88	0·056	0·001	200

It is necessary to take into account the variable conditions under which long-distance speech is frequently held. The insulation of long overhead wires may drop in extreme cases to a figure as low as the metallic resistance of the conductors themselves : slight inductive noises are never really absent. The human element largely affects the result. Indistinct speech, disregard of regulations, all tend to limit long-distance speech, and to render the application of very accurate determinations difficult. As in all engineering matters, there must be a considerable factor of safety to ensure satisfactory intercommunication. It is generally considered by telephone administrations that from 42 to 46 miles of the above-named standard cable is the effective commercial limit although conversations have been held by experts over sixty miles of such a cable.

A lengthy series of experiments has been made on all classes of Post Office conductors, overhead, underground, and submarine, and they have been balanced by means of a standard apparatus to their equivalent lengths of actual standard paper cable. The equivalent lengths have also been calculated by Pupin and Campbell's formulæ, and the following table shows the degree of concordance in the results. It will be observed that the calculated limits of speech based on attenuation agree absolutely with experimental results on all the underground cables. There are, however, variations in the calculated and observed results obtained on overhead lines, and these are no doubt due to variations in insulation and to slight disturbances which affect the audibility materially when approaching the limits.

TABLE OF EQUIVALENTS BASED ON ATTENUATION FORMULÆ AND EXPERIMENT.

(Limiting Distance based on Speech Limit of 43 Miles of Standard Cable.)

Type of Line. Air-space Cable Underground.	Constants per mile of Loop. R. Ohms.	K. Mfd.	L. Henries.	Calculated Miles.	Observed Miles.
10 lbs. cable	175·6	0·070	0·001	26	26
20 ,,	86·0	0·055	0·001	43	43
40 ,,	42·0	0·056	0·001	63	63
70 ,,	25·0	0·063	0·001	79	—
100 ,,	17·0	0·058	0·001	105	—
150 ,,	11·7	0·065	0·001	127	127
200 ,,	8·75	0·070	0·001	151	—
Submarine Cable.					
160 lbs. Cu. and 300 lbs. G.P., per knot	12·9	0·12	0·0165	99	88
Aerial Wires.					
100 lbs. Cu. Open	18·0	0·00808	0·00390	363	—
150 ,, ,,	11·9	0·00839	0·00376	503	473
200 ,, ,,	9·0	0·00862	0·00366	632	626 Means of
300 ,, ,,	6·0	0·00893	0·00354	903	903 several
400 ,, ,,	4·5	0·00919	0·00344	1,122	1,075 trials
600 ,, ,,	2·97	0·00958	0·00331	1,582	1,582
800 ,, ,,	2·25	0·00987	0·00322	1,969	Not determined owing to disturbance.

(*Gavey, Proc. Inst. E.E.*)

Loading Coils for Telephone Cable Circuits.

(*Western Electric Co. Ltd.*)

The use of loading coils improves the efficiency of telephonic circuits, and thereby increases the distance over which telephonic transmission is possible. The method generally adopted in adding the required inductance to the telephone line consists of inserting inductance coils at calculated intervals.

The two most important factors which enter into every problem of telephone transmission are the attenuation and the distortion of the high frequency waves which constitute telephonic currents. By attenuation is meant the loss of energy of the waves of the telephonic (or voice) currents. Distortion is the impairment of the many component waves of which the voice currents are composed.

In a telephone circuit, where loading coils are not used, the waves are rapidly altered, both in form and in amplitude, as they progress along the line. An increase in the inductance of the line, however, such as results from the introduction of loading coils, has the effect of largely preserving the original wave form, as well as maintaining the initial wave amplitude, and is therefore highly desirable from the standpoint of transmission efficiency.

In an ordinary paper insulated air space telephone cable, the high attenuation limits to comparatively short distances the length of cable over which speech can be commercially transmitted. With properly selected loading for such a cable, the rate of attenuation is so reduced that a very large increase in range of transmission is obtained. Thus, it has been found by practical tests that, with proper coil-loading and with suitable terminal conditions, the transmission efficiency of the loaded cable may be increased more than six times for 2·5 mm. (·099 in.) cable, and over four times for 1·3 mm. (·051 in.) cable, as compared with a non-loaded cable of equal length. It should be particularly noted that the increased transmission efficiency, obtained by means of loading the cable, is obtained at a very much smaller cost than would be possible by any other method—as, for example, increasing the weight of line copper. Two representative cases are cited below, one for a ·915 mm. loaded cable, the other for a 1·27 mm. loaded cable. In each case the loaded cable is compared with a non-loaded cable of such design as to give the same transmission efficiency. The same number of pairs have been allowed in either case.

TABLE SHOWING ECONOMIES FROM LOADING.

Type.	Number of Pairs in Cable.	Diameter of Condrs.		Weight of Condrs.		Diameter of Lead Sheath.		Weight of Lead Sheath.		Relative costs of Cables.
		Inch	Mm.	Lbs. per Mile.	Kg. per Km.	Inch.	Mm.	Lbs. per Mile.	Kg. per Km.	
				Case No. 1.						
Non-Loaded Cable	40	·096	2·46	150	42·3	2·78	70·6	32,200	9,137	3·75
Loaded Cable .	40	·036	·915	20	5·6	1·08	27·4	7,336	2,080	1*
				Case No. 2.						
Non-Loaded Cable	25	·137	3·48	300	84·6	2·94	74·6	36,344	10,313	3·8
Loaded Cable .	25	·050	1·27	40	11·2	1·15	29·2	8,450	2,400	1*

* Including cost of loading equipment.

It will be noted from the above table that the cost of the non-loaded cable in either case is nearly four times as great as that of the equivalent loaded cable.

The efficiency of loaded cable is even more strikingly illustrated by the following case: A cable having 1·83 millimetre (·072 in.) conductors (weighing 80 lbs. per mile or 22·5 kg. per kilometre), if loaded, would have an attenuation constant equal to ·0129 per mile or ·0080 per kilometre. In order to obtain the same attenuation constant with a non-loaded cable, it would be necessary to use 8·2 millimetre (·32 in.) conductors, weighing 1,600 lbs. per mile or 450 kg. per kilometre. A cable, having a weight of copper at 450 kg. per kilometre of conductor, would be entirely uncommercial, so that it is evident that it would be impossible to obtain the same transmission efficiency by the use of non-loaded cable as is very readily obtained by means of loading. It would be necessary to use an open wire line of approximately 35 kg. per kilometre if it were desired to obtain the required transmission efficiency with a non-loaded circuit.

Whenever a new cable is planned or designed it should be remembered that the use of loading coils permits of a considerably smaller sized conductor to give equally good transmission.

Cables of ordinary or twin type used for junction working, trunk junctions and terminal cables from long-distance aerial lines can be improved, if suitably equipped with loading coils. Aerial cables, which, in many instances, contain small gauge conductors, can also be improved by loading and their speaking distances increased.

The advantages gained by loading underground and aerial cable circuits can be obtained in many cases for long-distance open-wire circuits. In fact, it is not possible to maintain, economically, efficient telephonic service over distances approximating 1,000 miles without the use of loading coils.

The loading coils manufactured by the Western Electric Company Ltd. are designed to give the highest efficiency under all conditions of service. Commercial conditions, such as manhole space, demand that the loading coils shall be of a minimum size per unit of inductance. In order to meet this demand it is necessary to include iron in the magnetic circuit of the coil. The loading coils are wound on a ring-shaped core, which consists of finely divided, well insulated iron wire. This construction has the advantage of giving the loading coil a closed magnetic circuit which obviates mutual interference between coils mounted closely together. The grade of iron wire used, and the method adopted in the winding of the coils, produces a loading coil which combines a low effective resistance with high inductance to alternating currents of telephonic frequency. By effective resistance is meant the resistance of the coil to direct current plus the energy loss resistance equivalent, produced by eddy currents and hysteresis.

Practical tests have proved, conclusively, that loading coils, so designed, eliminate undesirable distortion of the telephonic waves to practically the same extent as do coils in which iron has been eliminated from the magnetic circuit. These tests also revealed the interesting fact that the waves of the highest frequency of the voice currents were not reduced to such an extent as to affect materially the quality of the transmitted speech. In other words, the sound of the voice did not lose its timbre.

The Western Electric Company Ltd. is now in a position to supply and install loaded cable in which the superimposed (or phantom) circuits are guaranteed to be entirely free from overhearing. In this arrangement, in addition to the gain in transmission, derived from the use of loading coils, there is the further economy of 50 per cent. more circuits in the same sized cable as compared with the ordinary (or twin) type of cable, while the extra (phantom) circuits obtained are more efficient than the metallic circuits, from which they are derived.

As an example of a cable successfully loaded on the superimposed principle, may be mentioned the direct trunk telephone cable between London and Birmingham. This cable was manufactured, laid, spliced and equipped with loading coils by the Western Electric Co. Ltd., and was put into service by the British Post Office in July 1915. The superimposed loaded circuits in this cable are in commercial use, research and service tests having proved the absence of overhearing between any of the superimposed and physical circuits. A detailed description of the London-Birmingham cable was published in the *Telegraph and Telephone Journal* for November 1915.

Loading coils can be designed to meet almost any inductance requirement. It has, however, been found convenient to establish certain standard types of coils, which cover the range of inductance required in most cases. These are, broadly speaking, classified (according to the amount of inductance) as 'extra light,' 'light,' 'medium, and 'heavy' loading coils. The inductance of these coils covers a total range of from 60 to 250 millihenrys. Each type is carefully adjusted to meet the particular inductance requirement desired.

The coils are potted in strong cast-iron cases, which are made air- and water-tight. These cases are designed so as to maintain a very high insulation even under adverse conditions of installation. Thus, if a loading coil case is placed in a manhole, which becomes flooded periodically, this will in no way interfere with the loading coils or their operation, as the cases are made absolutely watertight. Cases can be supplied to hold any desired number of coils, ranging from 2 to 98

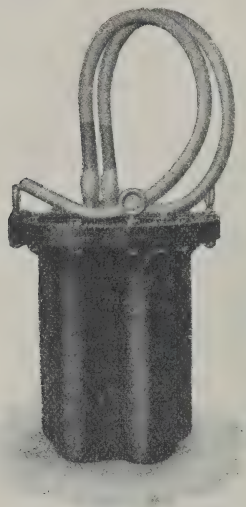


FIG. 41.

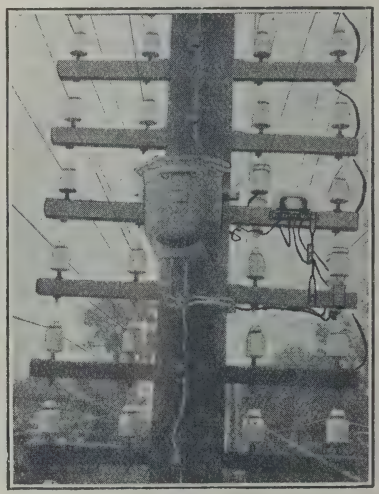


FIG. 42.

Fig. 41 shows a typical case, designed to hold 50 coils. The leading-out wires are contained in two short cables, which are connected to the main cable, the coils thus being inserted in the circuits.

These cases are placed in manholes along the route of cable to be loaded, and the coils are connected to the cable through a suitable junction box.

Fig. 42 shows the method used in connecting a loading coil to an aerial circuit. The containing case holding one loading coil is mounted on the pole itself. Fitted on the cross-arm, to the right, is a lightning protector, enclosed in a small cast-iron case.

Poles for Telegraph and Telephone Lines.

Report No. 139, 1921, of the British Engineering Standards Association provides a specification for red fir poles. They should be felled when the sap is down, and contain the natural untrimmed butt of the tree. After seasoning, the poles should be impregnated with a minimum of 12 lbs. of creosote oil per cu. ft., the specific gravity of the oil being between 1·015 and 1·07 at 38° C. The properties of the oil are detailed in the Report, together with the methods of determining them, and the limiting dimensions of light, medium, and heavy poles, from 16 to 85 ft. long, are tabulated.

RADIO-TELEGRAPHY.

In a radio-telegraphic system electric impulses from a transformer cause sparks across a spark gap, which charges, discharges, and recharges the aerial. If the inductance and capacity of the aerial have values of, say, 0·56 microhenry (L) and 0·00004 microfarad (C),

then there will be oscillatory waves in the aerial whose time interval between the crests of successive waves is given by the formula $2\pi\sqrt{LC}$, which with the foregoing values of L and C gives the time interval as ·03 millionth of a second. The wave length, that is the distance between the crests of successive waves, or more strictly, between points of equal intensity of electric stress, is equal to the velocity of propagation, multiplied by the time interval. Hence, in the case of the oscillator just considered, the wave length is $300 \times 10^6 \times \frac{0{\cdot}03}{10^8} = 9$ metres. In practical wireless telegraphy the oscillating circuits employed have much larger values of L and C, and the wave length is from 300 to 6,000 metres.

A plain aerial radiates energy rapidly, that is to say, it is a good radiator. After each discharge there are only three or four rapidly damped oscillations, whereas a much greater number is necessary for long-distance work. If the voltage of the charge is too great, the air breaks down at the top end of the aerial, by what is known as a brush discharge, and thus a limit is fixed to the energy which can be imparted to the short train of electro-magnetic waves. The practical result is that the maximum range obtainable is about seventy miles.

For long-distance working it is necessary to impress a large amount of energy on the aerial without requiring too great a voltage, and at the same time to produce a long series, or train of waves, with very little damping. An arrangement of this kind is adopted in the Marconi system, as shown by fig. 43, and is the foundation of all the practical wireless telegraphy of to-day: it has enabled commercial working to be carried out at a range of 2,400 miles, between Clifden, Galway, and Glace Bay, Nova Scotia.

The arrangement consists of an oscillatory circuit into which a large amount of energy can be put, and an aerial oscillatory circuit which receives energy from the oscillatory circuit and radiates it in the shape of electro-magnetic waves. These two circuits must have the same period—that is, must be tuned—and they are inductively connected by means of a transformer, called a 'jigger,' the primary of which is in the oscillatory circuit and the secondary

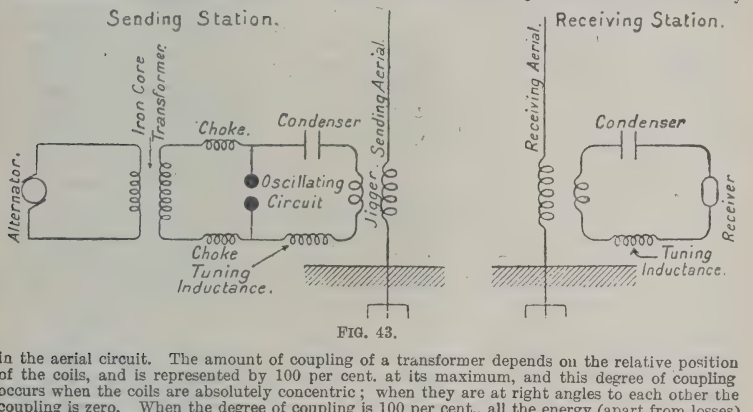


FIG. 43.

in the aerial circuit. The amount of coupling of a transformer depends on the relative position of the coils, and is represented by 100 per cent. at its maximum, and this degree of coupling occurs when the coils are absolutely concentric; when they are at right angles to each other the coupling is zero. When the degree of coupling is 100 per cent., all the energy (apart from losses) is transferred from the primary to the secondary in half a cycle, but if it is desired to transfer only a small portion of the energy at each oscillation from the primary to the secondary, the degree of coupling must be small. In wireless telegraphy the coupling is about 6 per cent. or even less.

Fig. 43 also shows the receiving arrangement, the signals being received on a telephone receiver. The receiving apparatus can be so arranged that it will not respond to signals sent out with wave lengths other than those to which it is tuned. In this way, a receiving station can isolate itself from other wireless stations, and thus not be interfered with when receiving a message from its own station. The train of electro-magnetic waves maintains oscillations in the receiving aerial, which are inductively transmitted to the oscillating circuit, and being properly timed, the energy is accumulated therein, and becomes sufficient in amount to actuate the receiver, and give signals in the telephone. Unless the time period of both the small and large systems is the same as that of the waves, there will be no accumulation of energy in the large system at the receiving station, and the energy transmitted to the oscillating circuit will be insufficient to actuate the receiver. The oscillating circuits and the aerials at the sending and at the receiving stations must therefore be tuned to the same period, which must be the period adopted for the electro-magnetic waves.

For small stations, the condenser takes the form of an ordinary Leyden jar with inner and outer coatings of tinfoil. In some cases, for portable wireless stations, the test-tube form is

adopted, and the tinfoil at the bottom is strengthened by a copper cap. Recently, however, test-tube condensors have been used, coated inside and out with electrolytically-deposited copper. It is important that the capacity of each jar or tube of a set should have the same capacity. For ship stations, thin zinc sheets are placed either in wooden boxes lined with zinc, or else in galvanised-iron boxes which are filled with special oil of high flash point and high dielectric strength. The capacity of these condensers is 0·065 microfarad, and they are arranged in groups so that they can be connected either in series or parallel. For this purpose a commutator—known as a Swiss commutator—is used, and the connections are made by long plugs split in two directions. For land stations, a satisfactory type of condenser consists of glass plates coated on both sides with tinfoil, a large number of such plates being immersed in oil contained in glazed earthenware vessels. At some high-power stations air-condensers are used; in the latest, they consist of thin zinc sheets suspended from the roof and placed about 6 ins. apart. The cubic space occupied by such a condenser is necessarily large. Thus for a capacity of 1·8 microfarad the space required is 200,000 cubic feet. The primary of the high-frequency air core transformer or 'jigger' consists of a few turns of conductor and is placed in the oscillating circuit; the secondary has more turns than the primary and is placed in the aerial circuit.

The secondary of the jigger, which is included in the aerial circuit, consists of a few turns of conductor, and it is connected to an inductance fitted with a suitable arrangement for putting more or less turns in circuit for tuning purposes. The size and nature of the conductor used, and the number of turns both in the primary and in the secondary, depend on the size of the station. Excepting for very large stations, the same aerial is used, both for sending and receiving. Three principal types are in use, namely, 'T,' 'L' and 'Umbrella.' With the Umbrella type the electro-magnetic waves are radiated equally in all directions, with the T type, which is that generally adopted for ship work, the radiation is almost uniform in all directions; but with the L type there is a very distinct directional effect, and in this case, the aerials are arranged with a comparatively short vertical height and a long horizontal length pointing away from the station to which it is desired to send messages.

For ship work the masts of the ship are utilised; for land work frequently wooden masts, similar to those on ships, are employed, but recently tubular steel masts have been adopted, built in sections consisting of half-cylinders bolted together by means of flanges. The longitudinal flanges are placed alternately at right angles to each other, and by an ingenious arrangement the mast forms its own scaffolding for erection. Steel masts of lattice form are also employed. The earth connection consists of wires led to ground plates, and great care is needed to obtain a good earth. This is a matter which requires expert knowledge. Sometimes, instead of the actual earth, a wire-gauze net is spread on the ground, and in this case the earth connection is obtained partially by a condenser effect.

The following table gives the results of observations as to the range, the power absorbed, and the wave length:—

Power Required.	Range in Nautical Miles.				Wave Length (Metres).
	Oversea.	Over Land.			
		Flat.	Hilly.	Mountainous.	
300 watts	100	77	30	13	300
	100	95	73	52	1200
1½ kw.	220	170	67	28	300
	220	210	160	115	1200
3 kw.	280	220	84	36	300
	280	270	200	145	1200
5 kw.	340	260	100	43	300
	340	325	240	175	1200
10 kw.	470	360	138	59	300
	470	450	330	240	1200

(*Sankey.*)

Thermionic Valve.

During the war the 'thermionic valve,' based upon an invention of Dr. J. A. Fleming, was developed to such a degree as to revolutionise practice in wireless telegraphy, and to render wireless telephony commercially practicable; it has also been usefully applied in connection with long-distance wire telephony, and in other directions. Its action depends upon the emission of electrons from a heated filament in an evacuated bulb, and their reception upon a cold plate in the same enclosure, together with a controlling 'grid' to which an electromotive force is applied. In wireless telegraphy the grid is energised through a transformer, by the infinitesimal currents received on the antenna, with the result that variations are produced in the current flowing between the plate and filament, which are far greater than the original waves; these effects can similarly be magnified, almost without limit, and thus the reception of wireless signals sent halfway round the world has become possible. The magnified signals, within limits, are practically free from distortion, a fact which enables the device to be used for telephony, speech being

reproduced with great clearness and fidelity. Besides acting as a detector of minute electric oscillations, the valve can also be used to rectify currents which oscillate in direction, and by making the valve react upon itself it can be used as a generator of high-frequency oscillations. In conjunction with the microphone, the valve is used to vary the amplitude of the waves emitted, thus solving the problem of wireless telephony. The valves are extremely economical of energy; it is stated that wireless telephonic communication can be maintained over a distance of sixteen miles with an expenditure of only ten watts. In ordinary telephony the valve is used as a relay on long lines, in which capacity it is far superior to any type of mechanical relay.

Thanks largely to the three-electrode valve, for long-distance transmission much smaller antennæ now serve, and the continuous-wave system is generally adopted; for receiving signals, so great is the magnifying power of the valve that a fixed antenna is almost superfluous, a coil of wire wound on a frame a few feet square sufficing for the purpose. The ratio of magnification of the signals may be several hundred thousand times. Wireless telephony has been accomplished over distances of several thousand miles between land stations, and is perfectly feasible between vessels at sea, and between aircraft, over considerable distances.

The essential features of the three-electrode thermionic valve or 'triode' are shown in fig. 44, which is a curve plotted between the plate current I (a few milliamperes), and the grid voltage or P.D. between the grid and the filament, V, the pressure applied between the plate or anode and the filament being constant. It will be seen that when the grid is slightly negative to the filament at A, the plate current is completely stopped; when the grid voltage is zero, the plate current

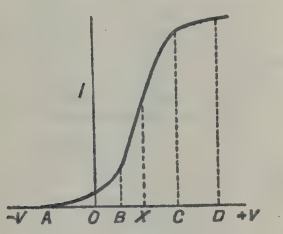


FIG. 44.

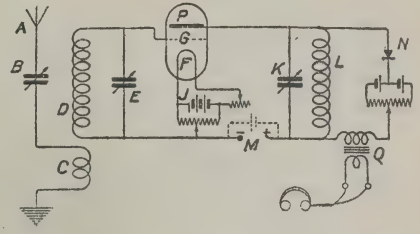


FIG. 45.

has a low value, but as the grid becomes more positive to the filament the plate current increases very rapidly (between B and C), until a maximum or 'saturation' value is reached at D. Assuming the grid voltage to be at the value corresponding to point X on the curve, obviously an alternating voltage applied to the grid will cause an alternating current to flow in the plate circuit, with greatly increased amplitude, but of similar wave-form. Under these conditions the valve acts as an amplifier. When the grid voltage is that corresponding to point B on the curve, a slight increase in the positive voltage of the grid will produce a current wave in the plate circuit as before, but a slight decrease in the voltage of the grid will have little effect on the plate current, the result being that, when an alternating voltage is applied to the grid, a series of practically unidirectional currents will flow in the plate circuit. The valve under these conditions acts as a combined rectifier and amplifier. Similar rectifying effects are produced at the point C, but in the reverse direction. The shape of the curve and its position vary with the temperature of the filament and the pressure applied to the plate, but the curve is always of the same nature.

The variations in the connections and combinations of apparatus used in conjunction with valves are limitless; precise knowledge as to the phenomena which take place within the valve is not yet available, but its practical operation is well understood. We give below some examples of its principal uses in the simpler forms. Fig. 45 shows the connections of a single valve used as a high-frequency amplifier in wireless telegraphy; the aerial antenna A is connected to earth through a variable condenser B and coil C, and is tuned by means of the condenser, with added inductance if necessary, to the wave-length to be received. The coil C with coil D forms an air-core transformer or 'jigger,' by which the electrical oscillations received on the antenna are transferred to the grid circuit, consisting of coil D and a variable condenser E, tuned to the same wave-length as the antenna. One terminal of the condenser E is connected to the filament F by way of a regulating potentiometer, and the other terminal to the grid G in the valve. The filament is kept incandescent by the small battery J, with a regulating resistance. The plate circuit of the valve consists of the anode or plate P, inductance coil L and variable condenser K, and a high-voltage battery M, of which the negative terminal is connected to the filament. Shunted across the plate circuit inductance is a rectifying crystal N, and the primary of an iron-cored transformer Q, the secondary of which is connected to a pair of telephone receivers. The plate circuit is tuned to the wave-length of the incoming signals and a current flows round this circuit through the valve.

The incoming oscillations, transferred from the antenna to the grid circuit by the 'jigger,' set up a magnified alternating electromotive force between the grid and the filament, superposed upon the potential difference due to the battery J. Owing to the characteristic properties of the valve, an oscillatory current of much greater amplitude is set up in the plate circuit, which is rectified by the crystal and affects the telephone receiver. A number of valves may be connected together in cascade to produce successive amplifications, the final ratio being of the order of 20,000 or more; with suitable arrangements it is possible to detect with certainty an alternating current in the input circuit corresponding to one-ten-thousand-millionth part of one volt.

Fig. 46 illustrates the use of the valve as a rectifier. It will be seen that the plate circuit consists only of the high-voltage battery, shunted by a condenser, and the primary coil of the telephone transformer, no crystal being necessary. In this application the grid voltage is adjusted to such a value that the valve is working at the bend of the characteristic curve of the plate current (point B in fig. 44). Besides rectifying the current, the device affords a large measure of amplification, and by using a rectifying valve at the end of a series of amplifying valves a highly sensitive and efficient receiving apparatus is obtained.

Fig. 47 shows the connections of a valve used as a generator of continuous oscillations, for the reception of signals on the 'continuous-wave' system, by 'beats.' The frequency of vibration of the incoming signals being far above the limits of audition, a very efficient method of

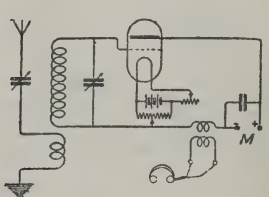


FIG. 46.

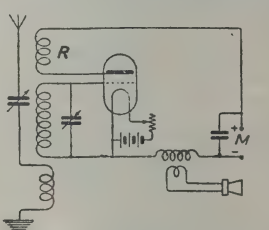


FIG. 47.

rendering the signals audible is by combining them with locally generated oscillations at a slightly different frequency, producing 'beats' as in music, the frequency of the beats being equal to the difference between the frequencies of the two sets of waves. It will be seen that the circuits are almost the same as those of fig. 46, the only change being the addition of a reaction coil R magnetically coupled with the inductance in the grid circuit. The arrangement is known as a 'self-heterodyne,' the valve performing the three functions of rectifying, magnifying, and heterodyning by the production of local oscillations. These oscillations are produced by the reaction of the current in the plate circuit on the grid circuit, and the necessary adjustment is made by varying the position of the reaction coil with regard to the inductance. The grid potentiometer, which is omitted from fig. 45, can be dispensed with in the other diagrams also, the valve being adjusted by the plate potential. When it is desired to use the valve as a transmitter, impressing continuous waves on the antenna, the plate and high-voltage battery are connected to the tuning circuit, and the grid to the reaction coil, the telephone being omitted. For wireless telephony a microphone is added, so arranged as to vary the amplitude of the oscillations in accordance with the speech vibrations. The foregoing illustrations are taken from the *Wireless World*.

The evolution of the valve has made possible wireless telephony over a distance of 1,800 miles with only 2·5 kw.; communication with aeroplanes at a distance of 200 miles with 75 watts; the recording of time signals with an accuracy of 0·02 second; and the determination of the direction of a source of wireless signals, with portable apparatus. Other uses to which the valve has been put are to actuate a calling-up device on board ship, to maintain a tuning-fork in vibration, to produce the rotation of a toothed disc by a direct current, and to measure infinitesimal currents and pressures.

INSULATING MATERIALS.

'MINERVA' INSULATING VARNISHES.

These varnishes (*Messrs. Pinchin, Johnson & Co., Ltd.*) are made in a great variety (nineteen) according to requirements.

When circumstances permit, the work to be treated should be dipped, but if this method is not convenient the varnish can be brushed on. When varnish is applied by dipping, best results can be obtained by placing armature and field coils in an oven at a temperature above

the boiling-point of water for one to two hours before immersing the same in the varnish. After this preliminary stoving, the coils should be taken from the oven and dipped at once in varnish, allowed to drip over the dipping tank and again placed in the oven and then thoroughly baked. In following this method, the first cost of treating coils is slightly increased. The value of this treatment, however, is apparent. The moisture is driven out, the air in the coil expands, allowing proper penetration, and the coat of varnish given the coil immediately upon being taken from the oven, effectually prevents further absorption of moisture. The life of apparatus thus treated is materially lengthened.

The oven should be ventilated at the top to permit the escape of gases which form while the varnish is in process of drying. Provision should also be made for the ingress of air at the bottom of the oven, thus permitting free circulation of fresh air with its accompanying oxygen over the work to be dried. Uniformity of heat throughout the stove is essential, and this is accomplished by placing the pipes which carry the heat near the floor and on *all sides* of the oven. Care should be exercised not to overbake the varnish, otherwise its elasticity will be destroyed.

Elastic Insulating Varnish (*Clear*).—This type of clear insulating varnish (No. 481) possesses the essential properties which go to make up a clear, baking, insulating varnish. It has high and uniform insulating properties, is flexible and elastic, and withstands the action of heat for a long period without becoming brittle. It is waterproof and oilproof. It should be baked six to eight hours at a temperature of 200° F.

Quick-drying Insulating Varnish (*Clear*).—Under favourable climatic conditions, a thinned coat of this varnish (No. 482) will air dry over night. On account of its heavy body it will admit of considerable thinning and still give a strong, elastic coat of high insulation. It is especially recommended to electric railways and manufacturers for use on coils and other work where facilities for stoving are not available, although it may also be used as a stoving varnish. When artificial heat is employed for drying, the varnish can be used at its full body. It should be allowed to 'set,' however, one to two hours on all dipped work, before subjecting it to heat. It can then be dried thoroughly in four to six hours, baking at a temperature of 175°F. or 80°C. It effectually resists the action of moisture and lubricating oils.

Voltalac (*Air-Drying*).—'Voltalac (No. 485) has been used for some years by electric railways, tramways, etc. It is made especially to withstand the severe service to which windings of electric traction railway motors are subjected. It is a black, combined, air-drying and baking varnish, waterproof and water-repellent. The initial puncture test, alternating current, is about 1,000 volts per mil (430 v. per 0·01 mm.) of thickness, and this puncture value is maintained indefinitely. It is permanently plastic, a quality which enables Voltalac to retain its insulating and waterproofing properties indefinitely, under long periods of heat and excessive vibration. The varnish may be used to advantage on former-wound armature coils of dynamos and motors, dynamo and motor field coils, overhead and underground connections, backs of switch and panelboards to keep off moisture and prevent surface leakage, slight breaks in insulation of armatures and fields of dynamos and motors in service, and on street railway motor armatures, etc., wherever high insulation and moisture-resisting properties are requisite. It may be applied either by dipping or with a brush.

Glimalac.—Glimalac (No. 495) is used for making up mica plates into 'micanite.' It is specially good for making commutator segments, mica collars, cones, etc. It has exceptional sticking power and ability to dry absolutely hard. It has also great flexibility before baking and can be quite readily moulded into any shape, without losing any of its virtue, and can then be baked hard as desired. The method of using this varnish consists in building up the plates in the ordinary way with thin pieces of mica and putting into moulds or press. Steam (or heat) should be applied for about ten minutes to allow the varnish to 'set' before putting on pressure. Pressure, in conjunction with steam to the moulds or press, is then applied for about half an hour. This will vary according to the amount of heat applied. The press or moulds can then be cooled off as quickly as desired. Standard hydraulic press and moulds are recommended.

(*Messrs. Pinchin, Johnson & Co. Ltd.*)

Maconite.

This insulation material (introduced by *The Macintosh Cable Co., Ltd.*) has been used for some years by one of the principal railway companies in this country, in long tunnels where corrosive fumes and fluids are always present.

In appearance and texture, the material resembles a black rubber. In toughness, according to grade, it varies from something rather stronger than ordinary vulcanised insulating rubber, up to a point not far short of that possessed by the tough rubber known as C.T.S., etc., whilst its elasticity and durability are very high.

Whilst the measurable insulation of Maconite is lower than that of some vulcanised rubbers, this insulation is constant and is unaffected by prolonged immersion in water or in a saturated solution of caustic soda; also its resistance to breakdown pressure is high.

The following are details of tests to which Maconite has been satisfactorily subjected Except where specifically mentioned, no tests of less duration than some thousands of hours are given:—

Extremes of temperature.—

(1) Freezing Maconite Cable in a block of ice for several days, and testing at 1,000 volts A.C. for 30 minutes. Then thawing out in running water and again testing at 1,000 volts A.C.

(2) Boiling in water and for 3 hours in a weak solution of caustic soda.

(3) Exposure for several months in temperature of 100° F. above boilers and brass furnaces.

In all these cases, not only did the cable withstand the tests, but its flexibility was found to be absolutely unimpaired at the end.

Exposure to Chemical Action.—

(1) Immersion in dilute uric acid.
(2) ,, copper pickling acid.
(3) ,, 50 per cent. solution of sulphuric acid.
(4) ,, 5 per cent. solution of nitric acid
(5) ,, 50 per cent. solution of hydrochloric acid.
(6) ,, slaked slag water.
(7) ,, two samples of corrosive pit waters.
(8) Immersion in saturated solution of caustic soda.
(9) ,, saturated solution of common soda.
(10) ,, 10 per cent. solution of ammonia.
(11) ,, saturated solution of common salt.
(12) ,, sea water.

In all these cases the cables withstood the tests, the cables carrying direct current at 250 volts, two cables being on test in each solution, and being connected to the positive and negative poles of the system respectively. This was done in order to be certain that the material would withstand osmotic action.

The general results of the tests indicate that cables insulated with Maconite are particularly suited for installation in chemical works, steel works, dye works, long railway tunnels, etc., etc., where corrosive fumes or liquids are always present.

The material may prove to be suitable as a sheath for cables in the place of lead alloys or bitumen. It is already being used as a sheath for a surface wiring system which requires no bonding or earthing.

Experiments are being conducted with a view to using Maconite sheath on paper insulated cables.

Dexonite.

This material (*Dexine Ltd., Stratford, London, E.*) possesses the properties of vulcanite and ebonite, but unlike the two latter it retains its normal degree of hardness under high temperature. It is easy to tool, screw, and tap, is not brittle, and is capable of being moulded into any shape or size. It has a high electrical resistance, and is non-corrosive and acid resisting. *Specific Gravity* at 60° F., 1·2765. *Tensile Strength*: Stress per sq. in. at maximum load, 6,765 lbs., equivalent to 3·02 tons.

Articles made from Dexonite include insulating parts for electrical apparatus, medical requisites, binocular parts, etc. It is also supplied in sheet, rod, or tube form to any convenient sizes.

'Willesden' Paper (*The Willesden Paper and Canvas Works, Ltd.*) is a material largely used for electrical insulation, chiefly on the field magnets and armatures of continuous current dynamos, and is found by manufacturers to be of great value, as it is less hygroscopic than other materials formerly employed. It can also be used with advantage instead of vulcanised fibre in many places such as small switches, washers on fuse and switch boards, and for telephone work, etc.

'Press Paper,' and mica in thin lamina or built up into thicker plates and rings, are much used as insulating materials.

Asbestos Millboard Tubes (*Turner Brothers Asbestos Co. Ltd., Rochdale*), for the construction of electrical resistances and other electrical appliances, are made in all lengths and diameters with walls of any thickness.

Switch and Transformer Oil.

For switches, to prevent explosions from taking place, the best quality mineral oil should be used. It should contain no trace of animal or vegetable oils. It must be free from dust or foreign matter and be well filtered. If the oil be heated for long periods whilst in contact with air, no trace of acidity should develop, nor should it dissolve moisture when standing in a damp

atmosphere. A flash point below 375°F. is to be avoided. At 140°F. the viscosity should not be more than 850, and at 70°F. not less than 100, as measured in Redwood's viscometer. The oil must not show any tendency to sludge. The dielectric strength should be such that the oil will withstand an alternating pressure of 12,000 volts between a needle point and a disc ·125 apart without breaking down, the diameter of the disc being $\frac{1}{2}$ in. A similar specification would be suitable for a transformer oil, but the flash point need not be so high nor the viscosity so strictly specified.

The presence of ·025 per cent. of moisture reduces the insulating properties of oil 70 per cent.; it is therefore important to test transformer oil before using it, and if necessary extract the moisture by filtering through dry blotting paper, or by any other approved method. Dry oil will withstand pressures up to 50,000 volts (alternating) between brass discs 0·5 in. in diameter with a separation of 0·2 in. For use in high-voltage transformers the oil should be required to withstand a test of 45,000 volts under the above conditions.

The seal at the bung of the containing drum should have a rubber or lead washer so as to completely exclude moisture.

Test for Moisture in Transformer Oil.

While a thorough test for the suitability of oil for transformers and oil switches can be made only with high-tension testing apparatus, very good indications of the presence of moisture have been obtained by Mr. J. K. Mackie, superintendent of the Connecticut Power Co., as follows:— A sample of the oil to be tested is drawn from the bottom of the transformer, oil switch, or storage tank. (Samples from the upper parts of the tank are not considered suitable for the test, as water is heavier than oil and usually collects at the bottom.) In the sample thus taken is placed powdered anhydrous copper sulphate. If moisture is present the copper sulphate will be dissolved, producing a blue colour that will diffuse through the oil if moisture is in suspension. Since enough copper sulphate is added to ensure a saturated solution, the intensity of the blue tint will be a measure of the amount of moisture present. As small percentages of moisture have a very deleterious effect on the dielectric strength of oil, however, the lightest shade of blue is sufficient indication that the oil should be dried by filtering. It may be pointed out that other substances giving a deeper tint than copper sulphate may be used, the only requirement being that they dissolve quickly in water but not in oil.

Relation between the Breakdown Voltage and the Dielectric Strength of an Insulator.

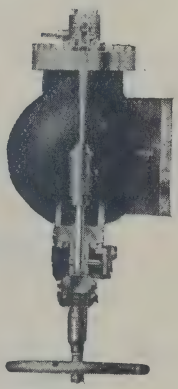
If d = thickness of dielectric in millimetres; V = potential difference in volts; c = a constant representing the potential difference in volts necessary to break down a sample of the dielectric 1 mm. thick; then

$$V = cd^{\frac{3}{2}}.$$

Values of c:— Dry air, 3,300; Empire cloth, 12,500; Fuller board, 19,000; Mica, 58,000. (*Baur.*)


COCKBURN'S
LIMITED
CARDONALD
GLASGOW
The World Renowned Steam Valve Specialists

Positively Controlled Regulating Throttle and Emergency
VALVE



For Reciprocating Engines.

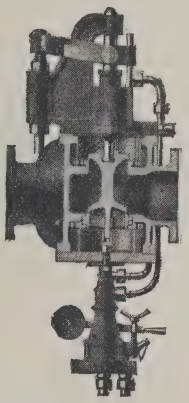Improved Ahead and Astern Manœuvring and Emergency
VALVE



For Turbine Machinery.

ADVANTAGES:

Perfectly Balanced, Absolutely Steam Tight, Positive in their Action. Throw Light Duty on Governor. Few and Simple Working Parts. Take up Minimum Space. Economical—initially and in service.

FULL PARTICULARS ON APPLICATION.

Telegrams:
'Cockburn, Glasgow.'
Telephone:
No. 361 Govan (2 lines).

Codes:
A B C (5th Edition)
Liebers
Marconi International.

MANUFACTURERS OF PATENT EMERGENCY SHUT-OFF VALVES AND POSITIVELY CONTROLLED MANŒUVRING VALVES FOR DIRECT DRIVE AND GEARED TURBINES.

PATENT SAFETY STOP AND REDUCING VALVES AND BOILER MOUNTINGS OF ALL ——— DESCRIPTIONS. ———

Established COCKBURN'S LIMITED CARDONALD GLASGOW 1862.

The World Renowned Steam Valve Specialists

TELEPHONE: 361 Govan (2 lines).

TELEGRAMS: 'Cockburn, Glasgow.'

PATENT FEED WATER FILTERS, PATENT STEAM TRAPS AND SPIRAL SPRINGS FOR ALL PURPOSES.

□ □ □


OUR EXPERIENCE OF OVER HALF-A-CENTURY IS AT YOUR DISPOSAL—TAKE ——ADVANTAGE OF IT.——

SECTION XXXIII

NAVAL ARCHITECTURE AND MARINE ENGINEERING

(Contributed and Revised by Professor Percy A. Hillhouse, D.Sc., M.I.N.A., and James Thomson, M.I.N.A.)

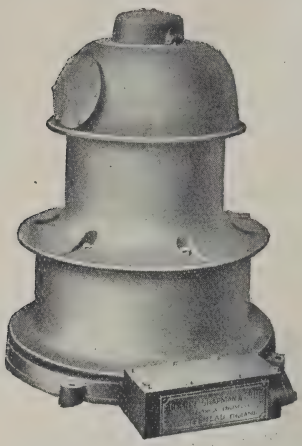CLARKE, CHAPMAN & CO. LTD.



Above Ground Capstan.

Electrical Engineers,

GATESHEAD.

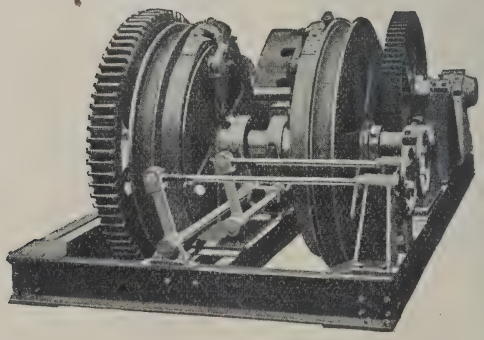
Contractors to the Admiralty, War Office, India Office, and Foreign Governments.

Manufacturers of Searchlight Projectors, Mirrors and Diverging Lenses, High-Speed Engines, Open and Enclosed Types, Dynamos and Motors, Patent 'Cracker' Type Resistance for all Duties including Arc Welding.

□ □ □

And Contractors for Electric Light and Power Installations on Board Ships.

ELECTRIC HAULAGE GEAR



Endless Rope Haulage Gear.

A Speciality.

Electrically Driven
Winches
Cranes
Capstans
Steering Gears
Hoists
Whips
Pumps, &c.

Catalogue on Application. *Enquiries Solicited.*

[See also announcement facing page 1391.]

SECTION XXXIII

NAVAL ARCHITECTURE AND MARINE ENGINEERING. DIMENSIONS AND GEOMETRY OF SHIPS—DISPLACEMENT, STABILITY, AND TRIM—WEIGHTS OF HULL AND MACHINERY—DEADWEIGHT—RESISTANCE OF SHIPS—ADMIRALTY COEFFICIENTS—ECONOMICAL SPEEDS—COAL CONSUMPTION—RUDDERS—ESTIMATING HORSE-POWER—DESIGNING MARINE ENGINES AND BOILERS—TURBINES—REDUCTION GEAR—TURBINE MACHINERY—CONDENSING PLANTS—DIESEL ENGINES—PROPELLERS.

(Contributed and Revised by Professor Percy A. Hillhouse, D.Sc., M.I.N.A., and James Thomson, M.I.N.A.)

DIMENSIONS OF SHIPS.

Moulded Dimensions.

LENGTH L = 'Length between Perpendiculars' = Length on load water-line measured from the fore side of the stem ('F.P.,' or 'Fore Perpendicular') to the aft side of the stern post ('A.P.,' or 'After Perpendicular'), or fore side of rudder stock if there is no stern post.

BREADTH B = 'Moulded Breadth' = Breadth measured over the widest part of the frame at the middle of the length L.

DEPTH D = 'Moulded Depth' = Depth measured from top of keel to top of deck beam at side at the middle of the length L. To avoid error the name of the deck to which the depth is measured should be stated.

Registered Dimensions.

LENGTH = Length from fore part of stem head to aft side of stern post, or fore side of rudder stock if there is no stern post.

BREADTH = Breadth measured over the outside of the shell plating at the widest part.

DEPTH = 'Depth of Hold' = Depth measured from top of ceiling to top of deck beam at the centre line of the vessel at the middle of the length. This depth is measured to the 'tonnage deck,' which is the 'second deck from below.'

Overall Dimensions.

LENGTH = 'Length Overall' = Length measured from the foremost point of the stem or figure-head (but excluding bowsprit if any) to the aft side of the taffrail, or cruiser stern.

BREADTH = 'Breadth Extreme' measured over the outside of the shell plating or belting or paddle sponsons, if any.

DEPTH = Depth from top of keel to top of deck amidships.

Drafts of a Ship.

The DRAFT d of a ship is the distance of the lowest point of the keel (or of the line of the keel produced) below the water line.

The MEAN DRAFT is half the sum of the drafts at the forward and after perpendiculars, or at the stem and the stern post.

The MOULDED DRAFT δ is the distance of the top of the keel (or of the line of the top of keel produced) below the water line.

The LIGHT DRAFTS of a vessel are the drafts forward and aft when the vessel is floating complete, but without coal, cargo, stores, water or other loads.

The LOAD DRAFT of a vessel is the mean draft of the vessel when floating complete and ready for sea and with all coal, cargo, passengers, crew, baggage, stores, spares, water, and other loads. The maximum load draft is determined by the freeboard tables of the Board of Trade; for passenger vessels the actual draft is limited to that determined by the spacing of the water-tight bulkheads, in accordance with the recommendations of the Convention for the Safety of Life at Sea. This draft is called 'The Bulkhead Draft.'

The FREEBOARD of a vessel is the height of the top of the wood deck at side at the middle of the length above the water line. The minimum freeboard allowable for any vessel entering or leaving a British port is fixed by law. It is assigned for each vessel by the Board of Trade and must be marked upon each side of the vessel amidships by the 'Freeboard Disc' or 'Plimsoll Mark.'

The 'TRIM' or 'LEAD' of a vessel is the difference between the drafts forward and aft. It is said to be 'by the head' or 'by the stern' according as the draft forward or the draft aft is the greater. When the drafts forward and aft are equal, the vessel is said to be 'on even keel.' 'Change of Trim' is the arithmetical sum of the changes of draft forward and aft.

Displacement.

The DISPLACEMENT of a vessel is the amount of water displaced by the underwater portions of her hull. It may be stated either by volume or by weight. The weight of the water displaced by a floating vessel is equal to the total weight of the vessel and her contents. If the vessel be floating in salt water, her displacement in tons, Δ, is equal to $\frac{1}{35}$ of her volume of displacement, V, in cubic feet. If in fresh water, $\Delta = \frac{V}{35{\cdot}8}$.

The TONS PER INCH of a vessel at any draft is the number of tons weight which must be placed on board in order to increase the mean draft one inch.

$$\text{Tons per inch, in salt water} = \frac{\text{area of water plane}}{420} = \frac{A}{420},$$

$$\text{Tons per inch, in fresh water} = \frac{A}{430},$$

where A is the area of the water plane in square feet.

Coefficients of Displacement.

The BLOCK COEFFICIENT, or *Coefficient of Fineness*, C_b, is the ratio of the immersed volume of displacement to the volume of the circumscribing parallelepipedon.

$$\text{Block coefficient} = C_b = \frac{V}{L\,B\,\delta} = \frac{35\,\Delta}{L\,B\,\delta} \text{ in salt water} = \frac{35{\cdot}8\,\Delta}{L\,B\,\delta} \text{ in fresh water.}$$

Where V = Immersed volume of displacement in cubic feet.
Δ = Displacement in tons.
L = Length on load water-line, in feet.
B = Moulded breadth in feet.
δ = Moulded draft in feet.

The PRISMATIC COEFFICIENT, C_p, is the ratio of the immersed volume of displacement to the volume of the circumscribing cylinder having the same form of cross section as the vessel below the water line amidships.

$$\text{Prismatic coefficient} = C_p = \frac{V}{La} = \frac{35\,\Delta \text{ or } 35{\cdot}8\,\Delta}{La},$$

where a is the immersed area of the midship section to outside of frame in square feet.

The MIDSHIP SECTION COEFFICIENT, C_m, is the ratio of the area of the midship section up to the waterline to the area of the circumscribing rectangle.

$$\left.\begin{matrix}\text{Midship section coefficient}\\ \text{or midship area coefficient}\end{matrix}\right\} = C_m = \frac{a}{B\,\delta}.$$

From the above values for the three coefficients it is easily seen that

$$C_p \times C_m = C_b.$$

Wetted Surface.

The WETTED SURFACE or IMMERSED SURFACE of a vessel is the total area of the surface of the shell plating, keel, bilge keels and rudder in contact with the water in which the vessel is afloat.

Approximately,

$$\text{Wetted surface} = S = L\,(1{\cdot}7\,\delta + C_b B) + \text{surfaces of keel, bilge keels, and rudder.}$$

Or again,

$$\text{Wetted surface} = S = 15{\cdot}4\sqrt{L\Delta} + \text{surfaces of keel, bilge keels, and rudder,}$$

where L = length between perpendiculars, in feet,
δ = moulded draft, in feet,
C_b = block coefficient,
B = moulded breadth, in feet,
Δ = displacement, in tons,
S = wetted surface, in square feet.

Curves of Displacement, etc.

As the draft of a vessel changes, the displacement, area of water plane, coefficients, etc., also vary, and it is customary to record these changes by means of curves whose vertical abscissæ represent draft, while the horizontal ordinates represent areas, displacements, coefficients, etc.

The ordinate of the curve of displacement at any draft is proportional to the area of the curve of water plane areas up to that draft.

The PRISMATIC CURVE for any draft is a curve whose horizontal base represents to scale the length of the vessel on load water-line, and whose ordinate at any point is proportional to the immersed area of the corresponding transverse section of the vessel. This curve shows the longitudinal distribution of the displacement which has an important bearing upon the resistance.

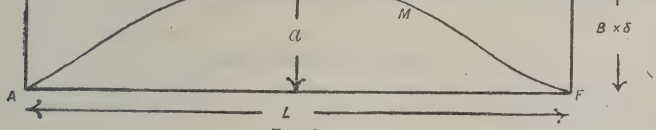


FIG. 1.

Let A M F (fig. 1) be a prismatic curve, inscribed within a rectangle C F of height representing the area of the midship section, and surrounded by another rectangle B F of height representing the area of the rectangle circumscribing the midship section. Then

Area of prismatic curve is proportional to displacement.

$$\frac{\text{Area of prismatic curve}}{\text{Area of rectangle C F}} = \frac{V}{L \times a} = \text{Prismatic coefficient.}$$

$$\frac{\text{Area of prismatic curve}}{\text{Area of rectangle B F}} = \frac{V}{L \times B \times \delta} = \text{Block coefficient.}$$

$$\frac{\text{Height of rectangle CF}}{\text{Height of rectangle B F}} = \frac{a}{B \times \delta} = \text{Midship section coefficient.}$$

Centre of Buoyancy.

The CENTRE OF BUOYANCY, B, at any draft, is the centre of gravity of the volume of displacement at that draft. The vertical position of the centre of buoyancy is the same as that of the centre of gravity of the curve of water plane areas, and its longitudinal position is the same as that of the centre of gravity of the prismatic curve.

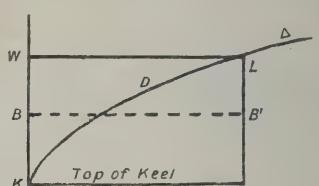


FIG. 2.

To find the height, K B, of the centre of buoyancy above the top of keel, draw the line BB′ across the displacement curve so that the area of the rectangle WB′ is equal to the area W L D K above the displacement curve.

MORRISH'S RULE.

Very approximately $K B = \frac{\delta}{6}\delta - \frac{V}{3A}$;

where K B is the height of the centre of buoyancy above top of keel, in feet

δ is the moulded draft, in feet;

V is the displacement, in cubic feet;

A is the area of the water plane, in square feet;

$\frac{V}{A}$ is called 'Rankine's Mean Draft.'

Centre of Flotation.

The CENTRE OF FLOTATION is the centre of gravity of the water plane. The two waterlines defining any small change of trim intersect at the centre of flotation.

Transverse Metacentre.

If a vessel be slightly inclined to one side the centre of buoyancy, B, will move slightly from the middle line towards that side, say to B′, and the vertical line through B′ representing the upward pressure of the water will cut the inclined middle line at the point M called the 'Transverse metacentre.'

$$BM = \frac{I}{V}.$$

where BM is the height of the transverse metacentre above the centre of buoyancy,
I is the transverse moment of inertia of the water-plane about its middle line,
and V is the volume of displacement.

The METACENTRIC HEIGHT, GM or m, in any condition of loading is the vertical distance between the transverse metacentre, M, and the centre of gravity, G, of the whole vessel and her contents. If, in the upright condition, G lies above M the vessel is unstable and will not remain upright; if G lies below M, the vessel is stable and will return to the upright position. GM is a measure of the vessel's 'Initial Stability.'

The value of GM can be obtained either by separate calculation of the heights of G and M or by an inclining experiment.

Inclining Experiment.

In carrying out an 'Inclining Experiment' on a vessel, to determine the height, KG, of the centre of gravity, the following procedure should be observed :—

Have the vessel free from wind, tide, current, transverse mooring ropes, gangways, and particularly from loose water or other weights liable to move when the vessel is inclined. Have no men on board except those engaged on the experiment. Read the drafts carefully at each end from a small boat. Move any known weight w (enough to produce an inclination of about 2°) transversely across the deck through a total distance, a, and observe the corresponding deflection d, of a simple pendulum of length l, suspended anywhere on board. Several shifts of the weights are usually made to each side of the ship and the mean value of d taken. From the draft readings and the curves of displacement and transverse metacentres we can obtain the value of Δ, and of KM.

Then GM as inclined $= \frac{w\,a\,l}{\Delta\,d}$, w and Δ being in tons, GM and a in feet, and l and d in inches

and KG as inclined = KM − GM.

These results apply only to the vessel in the inclining condition. To obtain the metacentric height for any other condition it is necessary to make suitable corrections for the different amounts and positions of the various items of loading and for the new values of Δ and KM.

It is usual to estimate the value of GM for the following conditions :—

Light Condition.—Ship and machinery complete, boilers and condensers full, but no coal, cargo, passengers, crew, baggage, stores, spares, fresh or salt water, or reserve feed-water on board.

Docking Condition.

Load Condition.—Fully loaded condition : ship and machinery complete, boilers and condensers full, and with all coal, passengers, crew, baggage, stores, spares, fresh and salt water, reserve feed-water, and holds filled with homogeneous cargo of such density as to bring the vessel to her load draft.

Spent Condition.—Same as full load condition, but with all coal, water, and stores consumed.

Ballasted Condition.—Same as spent condition, but with water-ballast tanks filled.

Any other special conditions likely to arise in practice.

Rolling Period of a Vessel.

In Smooth Water.

K = Radius of gyration of the vessel and all weights on board, about a longitudinal axis passing through her centre of gravity.

m = Metacentric height.

2 T = Time of double roll, say from port to starboard and back again, in seconds.

g = Force of gravity = 32·2.

Then $T = \pi\sqrt{\frac{K^2}{g\,m}} = \cdot 554\frac{K}{\sqrt{m}}$.

The period 2T of a double roll varies from about 3 to 30 seconds ; in large Atlantic liners it is about 20 seconds.

Stability.

The INITIAL STABILITY of a vessel is the measure of the tendency of the vessel to return to the upright if she is forcibly inclined to a small angle, θ, of not more than about 10°.

Initial Stability or Righting Moment at the inclination θ = $RM_\theta = \Delta\,m\,\theta$ foot-tons,

where Δ = displacement in tons,

m = metacentric height in feet,

θ = angle of heel in circular measure,

= inclination in degrees ÷ 57·3.

Curve of Stability.—When a vessel is inclined to any angle θ (fig. 3), large or small, the centre of buoyancy moves to one side (B to B'). The upward force of buoyancy, Δ, now acts through B', while the weight acts downwards through G, the centre of gravity. These two forces form the righting couple, whose arm is GZ (the righting arm) and whose moment is W.GZ

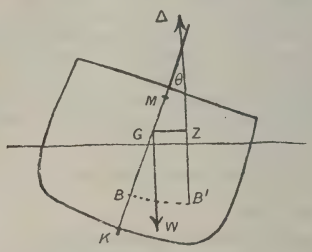


Fig. 3.

(the righting moment). When θ is small, B'Z passes through M, as already stated, and $GZ = m\theta$; at larger angles GZ must be separately calculated, and it is customary to obtain its value at each 10° of inclination and to connect the series of righting arms by a curve which is called the curve of stability (fig. 4).

OR is called the 'Range of Stability,' H the 'Maximum Righting Arm,' occurring at some

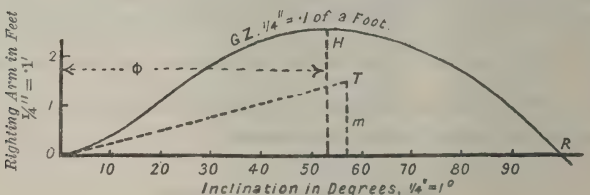


Fig. 4.

angle ϕ, while the initial slope of the curve is measured by the metacentric height, m, set up at 57·3° ($\theta = 1$), as shown in the figure, where OT is tangent to the curve at the origin O. (The scales marked are those to which the curves are usually drawn, but of course do not apply to the reduced figure.) The area of the curve of stability up to any angle is proportional to the work which must be done (by wind or other external forces) in order to incline the vessel to that angle. The work so done is called 'Dynamical Stability.'

Longitudinal Metacentre.

If a vessel be slightly inclined about a transverse horizontal axis, the centre of buoyancy will move longitudinally, and the point in which the vertical line through the new centre of buoyancy cuts that through the centre of buoyancy corresponding to even keel is called the 'longitudinal metacentre.'

The height of the longitudinal metacentre above the centre of buoyancy = LBM = $\frac{I}{V}$, where I is the moment of inertia of the waterplane about a transverse axis through its centre of gravity, and V is the volume of displacement.

The Longitudinal Metacentric Height, LGM, is the height of the longitudinal metacentre above the centre of gravity = LBM − BG = M.

The longitudinal GM is used in calculating changes of trim. If any weight, w, be moved longitudinally through a distance, a, the 'moment to change trim' is wa.

The 'moment to change trim one inch' or 'inch trim moment' $= {}''M = \frac{\Delta M}{12L} \overset{\cdot}{=}^{*} \frac{I}{420L}$

Approximately, ${}''M = \frac{30\,t^2}{B}$

where ${}''M$ = inch trim moment, in foot tons.
Δ = displacement, in tons.
L = length between perpendiculars, in feet.
t = tons per inch.
B = moulded breadth, in feet.
I = longitudinal moment of inertia of water plane.

The *change of trim* in inches due to any moment $w\,a$ is $\frac{w\,a}{{}''M}$. Of this total change of trim half is usually added to the draft at the end towards which the weight w was moved, and half deducted from the draft at the other end.

If instead of merely moving a weight already on board, we desire to find the alteration of drafts due to placing a new weight on board, first imagine the weight to be placed at the centre of flotation F. This will increase the drafts both forward and aft equally by an amount $\frac{w}{t}$. Then imagine the weight moved longitudinally to its assigned position and calculate the change of trim. Then combine these changes of drafts with the additional immersions $\frac{w}{t}$ and so find the total changes of draft forward and aft.

Curves connecting the mean draft with the position of the centre of flotation, the tons per inch, and the inch trim moment should be prepared to facilitate such calculations.

For large additions of weight the above method is not accurate, and it is necessary to prepare a complete list of all the items making up the displacement, together with their moments forward or aft of midships. Then

$\frac{\text{Total moment}}{\text{Total weight}} = \text{G}\boxtimes$ or $\boxtimes\text{G}$ = distance of centre of gravity aft or forward of midships.

From a curve connecting draft with the distance of the centre of buoyancy for even keel from midships, we can find the value of $\text{B}\boxtimes$ or $\boxtimes\text{B}$, and hence the value of GB or BG, that is the longitudinal distance of the centre of gravity aft of or forward of the centre of buoyancy. The moment to change trim is then $\Delta \times \text{GB}$, and the change of trim $\frac{\Delta\,\text{GB}}{{}''M}$

RALSTON'S STABILITY AND TRIM INDICATOR.

This useful piece of apparatus (fig. 6) determines the metacentric height and trim of a vessel by mechanical means instead of by calculation. It consists of a capacity profile of the vessel

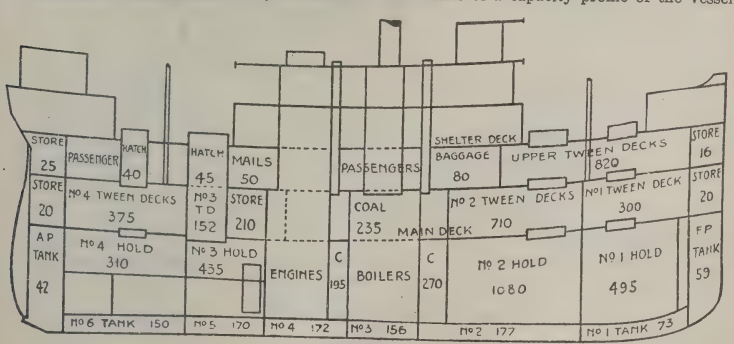


FIG. 5.

(fig. 5), the vertical scale of which, for convenience, is made greater than the longitudinal scale. This profile is mounted on a swinging table and is surmounted by a longitudinally-sliding

* $\overset{\cdot}{=}$ is the symbol for 'approximately equal.'

RALSTON'S STABILITY AND TRIM INDICATOR.


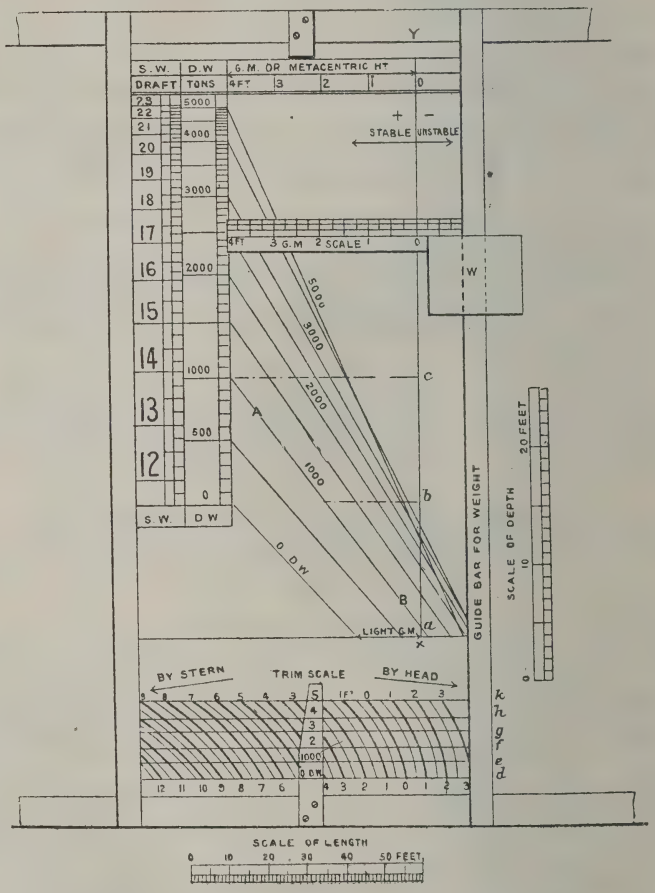


FIG. 6.

diagram which in turn carries a vertically-sliding balance weight (fig. 6). The diagram gives mean drafts, metacentric and trim curves for various deadweights, and the balance weight is provided with a G.M. scale. The combined weight of table and sliders is made proportional to the light weight of the ship and in the zero position of the sliders the common centre of gravity corresponds in position to that of the ship in the light condition. The weights of cargo, coal, stores, water, etc., are represented by a series of small brass weights which are placed in position on the capacity profile so as to represent any condition of loading for which it is desired to know the metacentric height and trim. The table is then supported firstly upon a longitudinal axis passing through the light C.G. and the vertical slider moved until a balance is obtained. The mean draft and metacentric height can then be read off from the curve corresponding to the total deadweight. The table is next supported on a vertical axis passing through the light C.G. and the longitudinal slider moved until the whole is in equilibrium, when the amount of trim can be read from the scales. The movements of the sliders are effected by means of racks and pinions. The instrument is simple, ingenious, and accurate; it takes into account all the features of the vessel's form and weight-distribution, obviates a considerable amount of calculation, and is being extensively adopted in the mercantile marine.

Weights.

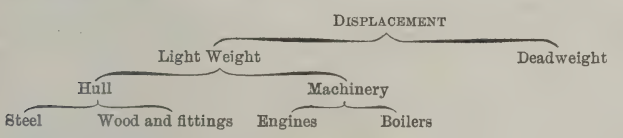The total weight or displacement of a merchant vessel may be subdivided as follows :—



The *Weight of Steel* includes :—
Steel and iron plates and bars of all kinds.
Structural forgings and castings, whether of steel or of bronze.
Pillars.
Steel masts.

The *Weight of Wood and Fittings* includes :—

Carpenter work.	Deck machinery and piping.	Cement.
Joiner work.	Electric lighting installation.	Insulation.
Plumber work.	Refrigerating machinery.	Rigging and sails.
Wood masts and spars.	Heating installation.	Canvas covers and awnings.
Upholstery.	Ventilation.	Sheet iron work.
Boats.	Galley outfit.	Fixed ballast.
Smithwork.	Paint.	Deck Coverings. Etc.

The *Weight of Engines* includes :—

Main propelling engines.	Sanitary and fresh-water pumps.	Piping in engine-room and tunnel.
Shafting and propellers.	Floors, ladders, and gratings in engine spaces.	Water in condensers and piping.
Condensers and circulating pumps.	Feed water.	Tools etc.
Air-pumps and bilge-pumps.		

The *Weight of Boilers* includes :—

Main boilers and donkey boiler.	Piping in boiler rooms.	Floor-plates, ladders, and gratings in boiler-rooms.
Uptakes and funnels.	Feed-pumps.	Tools.
Fans and fan engines.	Feed water.	Etc.
	Hot water in boilers.	

Deadweight includes :—

Spare gear.	Salt water for ship's use.	Provisions.
Crew and effects.	Reserve feed water.	Stores.
Passengers and baggage.	Water ballast.	Bedding and napery.
Coal in bunkers and on fire-bars.	Bilge water.	Cutlery and crockery.
Fresh water for ship's use.	Mails and cargo.	Glass and silverware.
	Oil fuel in tanks and pipes.	Etc.

Hull weight may be estimated either in detail or as a whole. Detail calculation requires that complete plans of the vessel are available, together with reference lists giving weight-rates or actual weights of all varieties of fittings. An accurate record of the finished total weights of the various items of the outfit of previous completed vessels is of great value in this connection.

For preliminary work, where a rapid estimate of the weights is required, the method of coefficients is largely relied on. In this method the whole weight of the hull, or of certain sectional portions thereof, is compared with some arbitrary parameter or parameters of simple form, depending upon the principal dimensions of the vessel or of her sectional parts. For each vessel completed an accurate record of these weights is filed, and the values of the 'Coefficients of Weight' $\left(= \frac{\text{weight}}{\text{parameter}} \right)$ worked out. Then for any proposed new vessel the weight of the hull, or of any of its parts, is found approximately by multiplying the proper parameter by a suitable coefficient chosen from among those of similar finished vessels.

The most commonly used parameter is the *Cubic Number*, which is the product of the Length Breadth, and Depth, divided by 100.

Cubic number $= N = L\,B\,D \div 100$.

where L = Length between perpendiculars, in feet,

B = Breadth moulded, in feet,

D = Depth moulded, in feet, taken to the highest deck to which the shell plating extends continuously or almost continuously throughout the whole length of the vessel.

Then,

Weight of Hull, $H = N \times$ Coefficient of Weight of Hull

$= N \times C_h$

Similarly,

Weight of Steel, $S = N \times Cs$.

Weight of Wood and Fittings, $W = N \times Cw$.

The weights of deck machinery, refrigerating machinery, insulation, etc., may either be included in the wood and fittings coefficient or separately estimated.

The following table gives average values of these coefficients :—

Type of Vessel.	*Cs.*	*Cw.*	*Ch.*
Torpedo Boat Destroyer	·27	·10	·37
Cruiser	·34	·12	·46
Battleship	·33	·12	·45
River Paddle Steamer	·20	·10	·30
Channel Steamer	·25	·13	·38
Coasting Steamer	·32	·20	·52
Cargo Tramp	·35	·12	·47
Intermediate Liner	·42	·17	·59
Fast Mail Liner	·42	·16	·58
Oil Tanker	·38	·06	·44

Other parameters sometimes used for estimating the weight of wood and fittings are

$(L \times B)$ and $L\,(B + D)$.

Weight of Machinery.

In making preliminary estimates, the weight of machinery can be taken as proportional to the horse-power, the number of horse-power per ton of total machinery weight being recorded for all vessels completed and tried. A more accurate method is to record separately the weight of engines and the weight of boilers per horse-power, and to employ these rates when estimating the weights of proposed machinery of similar type. The weight of reciprocating engines may be taken as proportional to the volume of the low-pressure cylinder. For the greatest accuracy the weights of both engines and boilers must be made up in detail from the drawings and the detailed weight records of previous jobs. The following table gives the relative weights and spaces occupied by various types of machinery.

COMPARATIVE FIGURES FOR DIFFERENT TYPES OF MACHINERY.

No. of Screws.	Engines.	Boilers.	Steam.	Relative Fuel Consumpt.	Relative Weight of Machinery.	Relative Areas. Engin Room.	Relative Areas. Boiler Room.
	FAST LINER.						
4	Triple direct Turbines .	Cylindrical	Saturated	100	100	100	100
2	Single geared ,, .	,,	,,	89	93	90	92
2	,, ,, ,, .	,,	100° Superheat	84·5	93·5	90	86
2	Double ,, ,, .	,,	200° ,,	75	88·5	86	77
	INTERMEDIATE LINER.						
3	Recipro. and Turbine .	Cylindrical	Saturated	100	100	100	100
2	Single geared Turbines .	,,	,,	93	80	87	92
2	,, ,, ,, .	,,	100° Superheat	88	81	87	91
2	Double ,, ,, .	,,	200° ,,	74	72	83	80·5
	CROSS-CHANNEL STEAMER.						
3	Compound direct Turbines	Cylindrical	Saturated	100	100	100	100
2	Single geared Turbines .	Water tube	,,	91·5	75	100	97
2	,, ,, ,, .	,, ,,	100° Superheat	86·5	76	100	97
2	Double ,, ,, .	,, ,,	200° ,,	73·5	68	95	86
	CARGO STEAMER.						
1	Triple Reciprocating .	Cylindrical	Saturated	100	100	100	100
1	Single geared Turbines .	,,	,,	83·5	79	85	95·5
1	,, ,, ,, .	,,	100° Superheat	79	79·5	85	94
1	Double ,, ,, .	,,	200° ,,	66	72·5	80	87·5

A. Cleghorn (Transactions of Engineers and Shipbuilders in Scotland).

Deadweight.

The total deadweight may either be specified by the owner or must be made up in detail from the particulars of the service to be performed.

Spare Gear.—Make up the weight in detail from the specified list of spares or allow a total approximate amount by reference to the actual weights carried by similar steamers. The amount may vary from about two tons in river paddle steamers and fast Channel steamers to about 40 tons in an Atlantic liner.

Crew and Effects.—Allow about one ton per ten men.

Passengers.—Allow one ton for every fifteen persons in ordinary cases and for every twenty persons in excursion crowds including women and children.

Baggage.—For the hand baggage of excursion passengers allow about one ton for every 250 persons. For long voyages allow about three tons for every ten persons.

Fuel in Bunkers = horse-power at sea, including that of auxiliaries × pounds of fuel consumed per horse-power per hour ÷ 2240 × distance between fuelling stations furthest apart ÷ service speed, + coal for galleys etc. + allowance for use in port + a margin of 10 to 20 per cent. for emergencies.

For rates of coal consumption see tables on pages **1995, 2013.**

Coal on Bars.—Allow about 35 lbs. per square foot of grate area.

Fresh Water.—Allow about one ton per day for every 25 first or second-class passengers and about one ton per day for every 75 third-class or steerage passengers and crew.

Salt Water.—For sanitary purposes from ½ ton to 5 tons according to the extent of the sanitary accommodation.

Reserve Feed Water.—Allow about 4 tons per 1,000 H.P. per 24 hours for short voyages and about half as much in vessels where distilling apparatus is carried.

Provisions.—Allow about one ton per day for every 75 first and second-class passengers and about one ton per day for every 250 third-class or steerage passengers and crew.

Water Ballast.—As may be required for purposes of immersion, stability or trim during the voyage. Say one-half of weight of consumables.

Bilge Water.—Is more or less inevitable, but should not amount to much if proper care in pumping is continually taken. Allow about one-fifth of the vessel's 'tons per inch.'

Mails, cargo and stores.—As required by owners.

Bedding and napery
Cutlery and crockery } Together about one ton for every 15 persons on board.
Glass and silverware

Resistance of Ships.

The total resistance to the ahead motion of a ship is made up of three parts :—

1. 'Skin-friction resistance,' or 'skin resistance.'
2. 'Wave-making resistance,' or 'wave resistance.'
3. 'Eddy-making resistance,' or 'eddy resistance.'

The two latter are usually considered together under the name 'residuary resistance,' or 'wave resistance' merely, since eddy resistance is very small in comparison with the other two.

HORSE-POWER.

The horse-power required to overcome any of these resistances is proportional to the resistance multiplied by the speed, and is called the 'effective horse-power.' It is from about ·63 to ·45 of the corresponding indicated or shaft horse-power developed within the vessel, the remainder of the power developed being absorbed by engine and shaft friction and losses in the propeller. The ratio of effective horse-power to indicated or shaft horse-power is called the 'propulsive efficiency.' or 'propulsive coefficient.'

$$e = \frac{\text{E.H.P.}}{\text{I.H.P.}} \text{ or } \frac{\text{E.H.P.}}{\text{S.H.P.}}$$

= from ·63 to ·45.

Skin Effective Horse-Power.

Skin E.H.P. is directly calculable :—

$$\text{Skin E.H.P.} = E_s = \frac{S}{100} \times F_{10} \times \left(\frac{K}{10}\right)^{2\cdot83}.$$

where S = wetted surface in square feet.
F_{10} = Skin E.H.P. per 100 square feet at 10 knots.
K = speed in knots.

The following table gives the values of F_{10} and of $\left(\frac{K}{10}\right)^{2\cdot83}$ for various lengths and speeds :—

L.	F_{10}.	L.	F_{10}.	K.	$\left(\frac{K}{10}\right)^{2\cdot83}$	K.	$\left(\frac{K}{10}\right)^{2\cdot83}$
50	1·999	450	1·832	10	1·00	18	5·28
100	1·918	500	1·826	11	1·31	19	6·15
150	1·888	600	1·816	12	1·68	20	7·11
200	1·873	700	1·807	13	2·10	25	13·37
250	1·863	800	1·798	14	2·59	30	22·40
300	1·854	900	1·790	15	3·15	35	34·65
350	1·846	1000	1·782	16	3·78	40	50·56
400	1·839			17	4·49		

From these figures curves may be drawn upon squared paper from which intermediate readings can be obtained.

Wave Effective Horse-Power.

The wave effective horse-power is not directly calculable, although several empirical formulæ and curves of coefficients have been published.

Taylor gives :—

$$\text{Wave E.H.P.} = E_w = B_0 \frac{\Delta^{\frac{2}{3}}}{L} \times \cdot0030707\ K^5.$$

Where B_0 = from ·35 to ·55, according to the degree of fulness of the vessel and her ratio of length to breadth.

The most accurate method of estimating E_w is by using the results of model experiments or of actually tried vessels, and Froude's 'Law of Comparison.' The Law of Comparison may be stated thus :—If two vessels of exactly similar form, but of different size, are run at speeds proportional to the square roots of their lengths, then their wave effective horse-powers will be proportional to the products of their displacements by their speeds. If, then, we are designing a vessel n times as long as a model or similar smaller ship whose speeds and corresponding wave E.H.Ps. we know, the following ratios which various elements of the design bear to corresponding elements of the prototype may be used :—

Linear dimensions	n	Speeds	$\sqrt{n}$
Surfaces	n^2	Wave resistances	n^3
Displacements	n^3	Wave E.H.Ps.	$n^3\sqrt{n}=n^{3\cdot5}$

Speeds related as above are called 'Corresponding Speeds,' and the ratio $\frac{K}{\sqrt{L}}$ of speed to square-root of length is called the 'Speed-Length Ratio.'

Model experiments give us the total E.H.P. at any speed. From this the wave E.H.P. can be obtained by separately calculating the skin E.H.P., as above described, and deducting it from the total. The wave E.H.P. for the full-size ship will be $n^{3\frac{1}{2}}$ times that of the model, and the skin E.H.P. for the full-size ship can be separately calculated. The sum of these two results gives the total E.H.P. for the full-size ship. It is then finally necessary to assume a suitable value for e, the propulsive coefficient, and calculate the I.H.P. or S.H.P. by dividing the total E.H.P. by e. If we are designing from the trial results of a similar completed vessel, the procedure is slightly different :—

I.H.P. or S.H.P. of Type Ship $\times e$ = E.H.P. of Type Ship

$\frac{S}{100} \times F_{10} \times \left(\frac{K}{10}\right)^{2\cdot83}$ = Skin E.H.P. of Type Ship } at K knots.

Difference = Wave E.H.P. of Type Ship

Multiply by $n^{3\frac{1}{2}}$

and so obtain Wave E.H.P. for Design

$\frac{S'}{100} \times F'_{10} \times \left(\frac{K'}{10}\right)^{2\cdot83}$ = Skin E.H.P. for Design } at $\sqrt{n}$ K knots.

Sum = Total E.H.P. for Design

Divide by e

To obtain I.H.P. or S.H.P. for Design

Where
S = wetted surface of type ship, in square feet,
$S' = n^2S$ = " design "
K = speed of type ship, in knots,
$K' = \sqrt{n}\,K$ = corresponding speed of design, in knots,
F_{10} = skin E.H.P. per 100 square feet at 10 knots for type ship,
F'_{10} = " " " for design.

D. W. Taylor's book, 'The Speed and Power of Ships,' which contains a series of curves based on model experiments and covering a large range of proportions of dimensions and speeds, will be found to give very accurate estimates of effective horse-power.

For fast, fine vessels, the paper 'On some Results of Model Experiments,' by R. E. Froude, published in the 'Transactions of the Institute of Naval Architects for 1904,' may be advantageously consulted. Many other experimental results have now been published, both in Great Britain and America.

Admiralty Coefficients.

The 'Admiralty Coefficient of Performance' $= \frac{\Delta^{\frac{2}{3}} K^3}{P} = C$

Where
Δ = displacement, in tons,
K = speed, in knots,
P = I.H.P. or S.H.P.

Conversely $P = \frac{\Delta^{\frac{2}{3}} K^3}{C}$, so that if C is known or can be correctly assumed, P can readily be calculated. In similar ships at 'corresponding speeds' $\Delta^{\frac{2}{3}} K^3$ varies as $(n^3)^{\frac{2}{3}} (\sqrt{n})^3$, that is, as $n^{3\frac{1}{2}}$. Hence, if P were also to vary as $n^{3\frac{1}{2}}$, the values of C would remain the same. And also, if for any given vessel P varied as K^3, C would be the same for all speeds. For these reasons C is sometimes called the 'Admiralty Constant,' but as the above relations are theoretical assumptions only, and C is found to vary from speed to speed and from ship to ship, it is better to use the term 'Admiralty Coefficient.'

Although wave-making power follows the law of comparison, and therefore varies as $n^{3\frac{1}{2}}$, skin-friction power does not obey the same law and only increases at the lesser rate

$$n^2 \frac{F'}{F} (\sqrt{n})^{2\cdot83} = \frac{F'}{F} n^{3\cdot415}.$$

And hence larger ships have relatively less power and larger values of C than smaller vessels. In the case of large vessels, also, a lesser proportion of power is lost in overcoming internal friction and eddy-making, and a further increase of C is the result.

In spite of its known defects, the 'Admiralty Coefficient' is largely used for estimating horse-power, the assumed value being based upon that for a similar, or nearly similar, completed vessel at 'corresponding' speed, and suitable allowances made for variations in size and proportions.

If the prismatic coefficient of the type ship differs from that of the proposed vessel, we may still find suitable values for C by modifying the 'corresponding speed' of the type ship, thus :—

$$K = K' \sqrt{\frac{L}{L'} \cdot \frac{1 - C_p}{1 - C'_p}}$$

where K, L, and C_p are the corresponding speed, length between perpendiculars, and prismatic coefficient respectively for the type ship, and K', L', and C'_p the desired speed, length, and prismatic coefficient for the proposed vessel.

Economical Speeds.

For each vessel there is a certain 'suitable' or 'economical' speed, determinable in relation to her length and fineness, above which she would be wasteful of power or 'overdriven' and below which she would be unnecessarily fine.

The following table (A) expresses these relations, and Table B gives possible values of the Admiralty coefficient for vessels agreeing with Table A :—

TABLE A.

$Cp.$	$\frac{V}{\sqrt{L}}$	$Cp.$	$\frac{V}{\sqrt{L}}$
Prismatic Co-efficient	Speed Length Ratio.	Prismatic Co-efficient.	Speed Length Ratio.
·61	·925	·73	·758
·63	·897	·75	·730
·65	·869	·77	·703
·67	·842	·79	·675
·69	·814	·81	·647
·71	·786		

TABLE B.

L.	C.	L.	C.
Length on Waterline.	Admiralty Coeffi-cient.	Length on Waterline.	Admiralty Coeffi-cient.
100	137	500	307
150	188	550	310
200	227	600	312
250	255	650	315
300	275	700	317
350	289	750	319
400	297	800	321
450	303	850	323

Table B assumes an efficiency, *e*, of about 55 per cent.; for large turbine work *e* appears to be about 50 per cent., so that in estimating shaft horse-power in such cases C should be taken at about 10 per cent. less than is given by the above table. For single-reduction geared turbines *e* = about 54 per cent.; for double-reduction geared turbines *e* = about 57 per cent.

The formula $C_b = 1{\cdot}06 - {\cdot}5\ V \div \sqrt{L}$ has also been proposed as expressing a suitable connection between block coefficient and speed-length ratio.

Admiralty Coefficient applied to Coal Consumption.

A variation of the Admiralty Coefficient much used by superintendent engineers, when comparing performances at sea, consists in substituting the daily coal consumption in tons for horse power in the formula $C = \frac{\Delta^{\frac{2}{3}} K^3}{P}$. We thus get :—

$$\text{Coal Coefficient of Performance} = \frac{\Delta^{\frac{2}{3}} K^3}{T}$$

where Δ = mean service displacement in tons,
K = mean service speed in knots,
T = daily coal consumption in tons.

Rudders.

The area of a vessel's rudder is determined by dividing the product of her length and load draft by about 30 to 40 in the case of warships, 60 to 70 for fast liners, 90 to 100 for slow cargo tramps. The most efficient angle is about 35° from the middle line, at which angle the total pressure upon the rudder in tons is about $\frac{AK^2}{700}$, where A is the rudder area in square feet and K her speed in knots. The centre of pressure at 35° is found by assuming that the pressure on each elementary horizontal strip is applied at a point, $\frac{3}{8}$ths of the breadth of the strip from its loading edge, summing the moments for each strip, and dividing by the total area.

Let h be the distance of the centre of pressure from the axis in inches, and P the total pressure upon the rudder in tons. Then T, the twisting moment in inch-tons, $= Ph$, and

$$D = \text{diameter of stock, in inches} = \sqrt[3]{\left(\frac{16\,T}{\pi F}\right)}$$

where F = maximum allowable shearing stress in material in tons per square inch.

$$\text{If } F = 5{\cdot}1,\ D = \sqrt[3]{T}$$

In practice the diameters of the rudder stocks of all classified vessels are determined by the rules of the Classification Societies.

Estimate Sheet.

When making preliminary estimates of dimensions, weights, power, etc., the following form will be found convenient;—

Number of Enquiry. Type of Vessel. Owners. Date.

Conditions.

Length × Breadth.

Type. Length × Breadth × Depth. Cubic Number.

S Steel Weight. Steel Coefficient.

W Wood and Outfit Weight. W. & O. Coefficient.

M Machinery Weight. H.P. per Ton.

D Deadweight.

$$\frac{\text{Displacement}^{\frac{2}{3}} \times \text{Speed}^3}{\text{Admiralty Coefficient}} = \text{Horse Power.} \qquad \frac{\text{Length} \times \text{Breadth} \times \text{Draft full}}{35} = \text{Block Number}$$

$$\frac{\text{Block Coefficient}}{\text{Displacement}}$$

For example, in figures :—

Enquiry No. 42. Cargo and Passenger Steamer. Messrs. Brown and Black. 3.3.22.

To carry 6000 tons and steam 13½ knots on 24 ft. draft. Class, 100 A1 at Lloyd's. Sixty first-class. 100 second-class.

	19200		
T.S.S.	400 × 48 × 30		5760
S.	2200	·382	
W.	850	·147	
M.	750	4·54	
D.	6000		

$$\frac{9800^{\frac{2}{3}} \times 13\tfrac{1}{2}^3}{313} = 3400 \text{ I.H.P.}$$

$$\frac{400 \times 48 \times \overset{24'\ 0''}{\overset{2''\text{ keel}}{23'\ 10''}}}{35} = 13080$$

$$\cdot 75$$

$$9800$$

These figures are arrived at by a process of trial and error-correction until a satisfactory balance is reached between weights and displacement, block coefficient and speed length ratio, horse-power and weight of machinery.

PARTICULARS OF 13-KNOT ATLANTIC CARGO STEAMERS TO ILLUSTRATE THE RELATIVE FUEL ECONOMY OBTAINED BY INCREASE OF DIMENSIONS.

Dimensions.				Block Coefficient.	Load Displacement.	Horse-power on Service.	Light Displacement.	Dead-weight.	Coal used on Voyage.	Coal in Bunkers.	Stores and Water.	Cargo.	Tons of Cargo per ton of Coal used.
Length.	Breadth.	Depth to Shelter Deck.	Draft.										
ft.	ft.	ft. ins.	ft. ins.		tons.		tons.	tons.	tons.	tons.	tons.	tons.	
300	40	31 0	22 0	·742	5,600	3,250	2,335	3,265	500	550	300	2,415	4·8
350	45	34 6	24 2	·762	8,250	3,950	3,260	4,990	610	675	350	3,965	6·5
400	50	38 0	26 4	·780	11,750	4,800	4,440	7,310	740	825	400	6,085	8·1
450	55	41 6	28 6	·796	16,000	5,750	5,900	10,100	890	975	450	8,675	9·8
500	60	45 0	30 8	·810	21,300	6,750	7,670	13,630	1,040	1,150	500	11,980	11·4
550	65	48 6	32 10	·822	27,500	7,850	9,820	17,680	1,210	1,350	550	15,780	13·1
600	70	52 0	35 0	·832	35,000	9,000	12,370	22,630	1,390	1,550	600	20,480	14·7

Type.	Moulded Dimensions. L.	B.	D.	Gross Tonnage.	Steel Wght. — Coefft.	Wood and Outfit Wght. — Coefft.	Wght. of Engines.	Light Wght.	Dead Wght.	Load Dispt. — Block Coefficient.	Load Draft.	H.P. at Sea. — Admiralty Coefficient.	Sea. Speed.	Engine.				Boilers. No.	Diam.	Lgth.	Parent Builders.
A	400	52	31	5,030	2,225 0·346	405 0·063	570	3,200	8,175	11,375 0·762	25–1	2,500 268	11	27	44	73	48	3	15–6	11–6	Henderson, Glasgow.
B	400	52	31	5,030	2,325 0·361	405 0·063	570	3,300	8,075	11,375 0·762	25–1	2,500 268	11	27	44	73	48	3	15–6	11–6	Henderson, Glasgow.
C	331	46–6	25–6	3,000	1,390 0·354	300 0·077	460	2,150	5,050	7,200 0·760	21–8	2,200 258	11·5	25	41	68	45	3	14–0	11–6	Tyne I. S. Co., Willington Quay.
D	285	41–9	21–3	2,300	1,110 0·440	240 0·095	420	1,770	2,980	4,750 0·732	19–0	1,900 226	11·5	25	41	68	46	2	16–6	11–9	Austin, Sunderland.
E	376	51–6	29	4,400	1,920 0·342	400 0·071	570	2,890	7,020	9,910 0·749	23–9	2,500 280	11·5	27	44	73	48	3	15–6	11–6	Duncan, Port Glasgow.
F	411–6	55–6	29	6,440	2,565 0·388	520 0·079	620	3,705	10,795	14,495 0·775	28–8	3,650 281	12	27	45	75	54	3	16–0	12–3	Thompson, Sunderland.
*	400	53	35–5	5,680	1,920 0·256	430 0·057	620	2,935	9,000	11,935 0·745	26–4	3,650 246	12	27	45	75	54	3	16–3	12–6	Northumberland Co., Howdon.
G	450	58	40	8,000	3,200 0·306	650 0·062	1,350	5,200	10,800	16,000 0·740	29–0	5,500 253	13	26½	44	73	48	3	16–3	20–6	Workman, Clark & Co., Belfast.
H	303	43	23	2,800	1,150 0·384	300 0·100	360	1,810	3,960	5,670 0·780	19–6	1,400 261	10·5	22	36	59	39	2	15–6	10–6	Austin, Sunderland.
†	385	52	29	4,600	2,070 0·357	200 0·035	550	2,820	7,520	10,340 0·750	24–0	2,500 287	11·5	27	44	73	48	3	15–6	11–6	Russell, Port Glasgow.
N	411–6	55–6	38–2	6,500	2,600 0·299	520 0·060	570	3,690	10,500	14,190 0·770	28–0	2,300 294	10·5	Geared Turbine				3	Babcock		Swan, Hunter, Newcastle.
A′	400	52	31	5,250	2,600 0·404	350 0·054	570	3,520	7,885	11,405 0·760	25–1	2,500 269	11	27	44	73	48	3	15–6	11–6	Laing, Sunderland.
Z	400	52	31	5,800	2,360 0·367	317 0·049	570	3,400	8,000	11,400 0·762	25–1	2,500 269	11	27	44	73	48	3	15–6	11–6	Swan, Hunter, Newcastle.

* Shelter deck. † 'Tween deck. A′ Converted oiler. Z Oiler. All single-screw vessels.

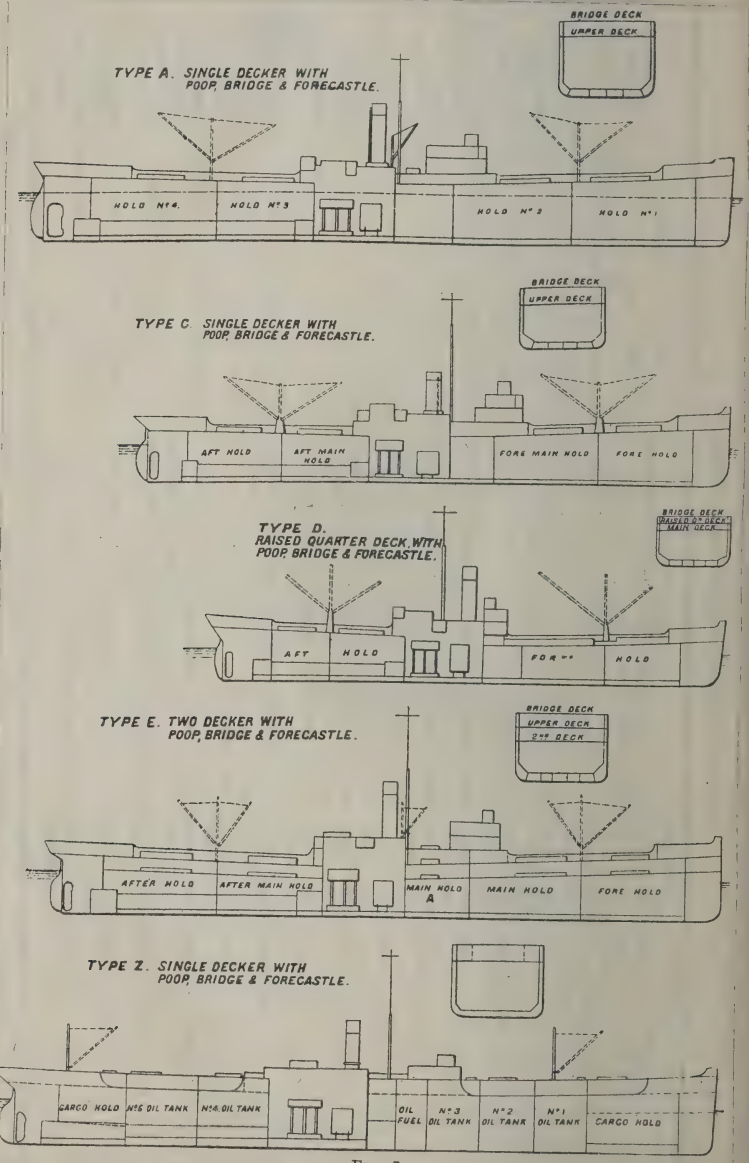

BRIDGE DECK
UPPER DECK
TYPE A. SINGLE DECKER WITH POOP, BRIDGE & FORECASTLE.
HOLD N°4.
HOLD N°3
HOLD N°2
HOLD N°1
BRIDGE DECK
UPPER DECK
TYPE C. SINGLE DECKER WITH POOP, BRIDGE & FORECASTLE.
AFT HOLD
AFT MAIN HOLD
FORE MAIN HOLD
FORE HOLD
TYPE D.
RAISED QUARTER DECK WITH POOP, BRIDGE & FORECASTLE.
BRIDGE DECK
RAISED QUARTER DECK
MAIN DECK
AFT
HOLD
FOR
HOLD
TYPE E. TWO DECKER WITH POOP, BRIDGE & FORECASTLE.
BRIDGE DECK
UPPER DECK
2ND DECK
AFTER HOLD
AFTER MAIN HOLD
MAIN HOLD A
MAIN HOLD
FORE HOLD
TYPE Z. SINGLE DECKER WITH POOP, BRIDGE & FORECASTLE.
CARGO HOLD
N°5 OIL TANK
N°4 OIL TANK
OIL FUEL
N°3 OIL TANK
N°2 OIL TANK
N°1 OIL TANK
CARGO HOLD

FIG. 7.

Nationality.	British.					Ex-German.			French.	
Owners.	Cunard Steamship Company.		White Star Line.			——			Cie. Général Transatlantique.	
Names.	Aquitania.	Mauretania.	Britannic.	Adriatic.	Olympic.	Kronprinzessin Cecilie.	George Washington.	Imperator.	France.	Paris.
Built at	Clydebank	Wallsend. Clydebank.	Belfast	Belfast	Belfast	Stettin	Stettin	Stettin	St. Nazaire	St. Nazaire
Date	1914	1907	1914	1906	1910	1907	1908	1911	1910	1913-1921
Length	865	760	845	709	850	683	698	880	685	735
Breadth	97	88	93	75½	92	72	78	98	75½	85
Depth	64	60½	63·5	57½	64½	44	52¾	63	53	59
Gross tonnage	45,647	32,000	50,000	24,500	45,000	19,400	26,000	52,117	23,400	35,000
Draft	36′	33′ 6″	34′ 7″	30′	34′ 6″	30′	33′	35′ 6″	29′ 6″	29′ 6″
Displacement	53,000	38,000	53,000	40,000	62,000	27,000	36,000	57,000	28,000	36,500
Passengers I.	618	560	790	510	735	730	520	700	535	566
,, II.	614	460	836	310	674	320	380	600	442	464
,, III.	1,998	1,150	953	1,790	1,026	740	2,040	2,690	908	2,200
Engines	Turbine	Turbine	Combination	Quadruple	Combination	Quadruple	Quadruple	Turbines	Turbine	Turbine
Cranks	—	—	2 × 4	2 × 4	2 × 4	2 × 6	2 × 4	—	—	—
Cylinders No.	—	—	2 2 2 2	2 2 2 2	2 2 2 2	4 4 4 4	2 2 2 2	—	—	—
Cylinders Dia.	—	—	54 84 97 97	35½ 51 73½ 104	54 84 97 97	37 49 75 112	38 57 80 112	—	—	—
Stroke	—	—	75	63	75	71	67	—	—	—
Revolutions	155	189	77. 170	82	75, 165	82	83	185	240	—
Boilers	21 D	23 D : 2 S	24 D : 5 S	8 D : 4 S	24 D : 5 S	12 D : 7 S	8 D : 4 S	46 Yarrow	11 D : 8 S	15 D
Pressure	195	195	200	210	215	220	213	235	200	214
Furnaces	168	192	159	60	159	124	60	—	120	120
Heating Surface	138,596	159,000	154,958	52,000	144,142	101,900	52,500	203,000	99,303	97,419
Grate Area	3,542	4,060	3,461	1,260	3,466	2,970	1,280	3,767	2,555	2,559
Draught	Howden	Howden	Natural	Natural	Natural	Natural	Howden	Howden	Howden	—
Horse Power	60,000	70,000	50,000	16,000	46,000	45,000	20,000	76,250	46,370	45,000
Speed	23	26·06	21	16	22·7	23·5	18·5	22·5	23·6	22·5

BASES OF ENGINE AND BOILER DESIGN.

Cylinder Ratios.

Considerations of weight and space usually limit the dimensions of cylinders for the machinery of high speed cross-channel vessels. For ordinary merchant and mail steamers these considerations are of minor importance; coal consumption however is of the utmost importance and consequently a higher ratio of expansion of steam is utilised, involving larger cylinder dimensions, in order to obtain maximum economy of coal consumption. In fast passenger vessels with high revolutions per minute, four-crank triple-expansion engines are invariably adopted, there being one H.P., one M.P., and two L.P. cylinders. This arrangement admits of a satisfactorily balanced engine being obtained, reducing vibration to a minimum, and the weight of the moving parts of the L.P. cylinders is considerably reduced compared with the ordinary three-crank triple engine or four-crank quadruple. The following table of cylinder area ratios is in accordance with modern practice for various types of marine engines:—

TABLE SHOWING CYLINDER AREA RATIOS.

Type of Engine.	Boiler Pressure. Lbs. per Sq. In.	Ratio of Cylinder Areas.			
		L.P. / H.P.	2nd M.P. / H.P.	1st M.P. / H.P.	H.P.
Quadruple expansion . .	200 to 220	8 9	4·0 4·3	2·0 2·08	1 1
				M.P. / H.P.	
Triple expansion, ordinary merchant practice . . .	160 to 180	6·5 to 7·5		2·5 to 2·7	1
Cross-channel steamers . .	180 to 200	6·25		2·4	1
Compound engines, screw .	100 to 140	4 to 5		—	1
,, ,, paddle .	90 to 130	3·5		—	1

The reciprocating engine is now, however, being displaced by direct or geared turbines in all classes of vessels, from fast passenger and mail steamers and cross-channel boats to cargo vessels, even of the tramp class, owing to the reduction obtainable thereby in fuel consumption.

Mean Pressures and Expansion of Steam.

The total power developed in an engine may be varied by altering the point at which steam is cut off in the H.P. cylinder, and generally provision is made to enable the cut-off in each cylinder to be independently adjusted if necessary to equalise the powers developed in each cylinder. For the maximum designed power the cut-off in the H.P. cylinder takes place at from ·65 to ·75 of the stroke, and the total number of expansions of the steam is

$$= \frac{\text{Volume of L.P. cylinder}}{\text{Volume of H.P. cylinder at point of cut off}};$$

or

$$\frac{\text{Ratio of } \dfrac{\text{L.P. cylinder area}}{\text{H.P. cylinder area}}}{\text{Cut off in H.P. cylinder (expressed in fraction of stroke)}}.$$

The total expansion of the steam is usually considered with clearance neglected and neglecting also the fact that release takes place before the end of the stroke. In estimating the mean pressure obtainable in any multiple-stage expansion engine it is referred to the L.P. cylinder, the mean pressure thus obtained being that necessary if the whole of the power were developed in the L.P. cylinder. The actual referred mean pressure is, therefore, in the case of a triple expansion engine equal to

$$\text{Mean pressure in L.P. cylinder} + \frac{\text{Mean pressure in M.P. cylinder}}{\text{Ratio of L.P. to M.P. cylinder area}} + \frac{\text{Mean pressure in H.P. cylinder}}{\text{Ratio of L.P. to H.P. cylinder area}}.$$

The theoretical referred mean pressure may be calculated, assuming that the steam is moderately moist, the curve of expansion being a hyperbola. It depends upon the designed number of expansions and the absolute admission pressure of the steam.

Let Pa = absolute initial pressure.

Pm = absolute theoretical referred mean pressure.

r = total number of expansions.

$\frac{1}{r}$ = cut off, or reciprocal of r.

$$Pm = Pa \frac{1 + \text{hyp. log. } r}{r}.$$

PRESSURE OF STEAM IN CYLINDERS OF COMPOUND AND TRIPLE-EXPANSION ENGINES.

The values of $\frac{1 + \text{Hyp. Log. } r}{r}$ for Various Expansions are given on page 1398.

The initial pressure, Pa, should be taken 5 to 10 lbs. below the absolute boiler pressure to allow for the drop between boilers and engines, and the back pressure, which must be deducted from Pm as found above, should be taken at not less than 4 lbs. per square inch absolute.

Diagram Factor.

Owing to the losses which occur while the steam is expanding in the various cylinders the actual referred mean pressure obtained from indicator diagrams is less than the theoretical referred mean pressure, and consequently the latter must be multiplied by a diagram factor which takes into account the losses due to clearance, condensation, radiation, friction of ports, compression, drop in pressure between the cylinders, and other losses. The value of this factor is obtained by experience, and, when possible, should be derived from engines similar to the one projected, and working under similar conditions. The values for various types of engines are approximately :—

Quadruple-expansion engines	·63 to ·68
Triple-expansion engines, merchant service	·6 to ·65
,, high-speed cross-channel engines	·56 to ·63
Compound engines	·63 to ·70

When cylinders are jacketed the diagram factors may be increased by about 5 per cent.

The power is usually divided equally among the cylinders of an ordinary compound, triple, or quadruple-expansion engine, and if N is the number of cylinders and P the referred mean pressure (i.e. theoretical mean pressure × diagram factor) the mean pressure in the various cylinders of a triple-expansion engine, for example, will be :

$$\text{L.P. cylinder mean pressure} = \frac{P}{N}$$

$$\text{M.P. ,, ,, ,,} = \frac{P}{N} \times \frac{\text{L.P. cylinder area}}{\text{M.P. cylinder area}}$$

$$\text{H.P. ,, ,, ,,} = \frac{P}{N} \times \frac{\text{L.P. cylinder area}}{\text{H.P. cylinder area}}$$

In the case of four-crank triple-expansion engines the power developed in each L.P. cylinder is usually five-eighths that of the H.P. or M.P. cylinder.

Piston Speed.

The mean piston speed is usually reckoned in feet per minute and is equal to stroke in feet × 2 × revolutions per minute.

The power which may be obtained from a given weight of engine varies almost directly with the piston speed ; the wear and tear of the engine, however, is increased with the higher speeds on account of the increased inertia stresses involved.

Piston speed may be increased either by increasing the stroke and keeping the revolutions constant or by increasing the revolutions, keeping the stroke constant.

By adopting the former method the cost, dimensions, and weight of the engines are increased, whilst by adopting the latter method there is practically no increase in any of the items mentioned. It is evident, therefore, that in cases where weight and space are limited high piston speed must be obtained by high revolutions; these have a limit, however, on account of the stresses due to the inertia of the reciprocating parts.

The piston speed and revolutions of engines fitted in various types of vessels are as shown in the following table :—

TABLE SHOWING PISTON SPEED AND REVOLUTIONS OF RECIPROCATING MACHINERY FOR VARIOUS TYPES OF STEAMSHIPS.

Description.	Number of Cranks.	Piston Speed in Feet per Minute.	Revolutions per Minute.
Large mail steamers	4	800 to 900	75 to 90
	3	600 ,, 750	70 ,, 80
Cargo vessels	4	650 ,, 800	70 ,, 100
	3	550 ,, 650	60 ,, 100
Channel steamers	4	800 ,,1000	170 ,, 200
	3	750 ,, 900	130 ,, 180
Paddle steamers	—	550 ,, 650	45 ,, 55

(Also see remarks about propeller revolutions for geared turbines.)

Calculation of Cylinder Diameters.

In determining the diameter of cylinders required for an engine of a given I.H.P., the type of vessel for which the engine has to be designed to a certain extent determines the piston speed and cylinder ratios, due consideration being given to the boiler pressure, the number of expansions being increased as higher boiler pressures are adopted.

Having decided the piston speed and the mean pressure referred to L.P. cylinder as already described, the area of the L.P. cylinder may be calculated, and from the cylinder ratios decided upon the areas of the remaining cylinders are determined.

Let piston speed = S feet per minute.

referred mean pressure = P lbs. per square inch.

Then

$$\text{Indicated H.P.} = \frac{\text{Area of L.P. cylinder} \times P \times S}{33{,}000}$$

or

$$\text{Area of L.P. cylinder} = \frac{\text{I.H.P.} \times 33{,}000}{P \times S}$$

$$\text{Area of M.P. cylinder} = \text{Area of L.P. cylinder} \times \text{Ratio of } \frac{\text{M.P. cylinder area}}{\text{L.P. cylinder area}}$$

$$\text{Area of H.P. cylinder} = \text{Area of M.P. cylinder} \times \text{Ratio of } \frac{\text{H.P. cylinder area}}{\text{M.P. cylinder area}}$$

Combined Recipro-Turbine Machinery.

In vessels of say under 18 knots the direct coupled turbine installations are not suitable, since the comparatively low rotational speed necessary for an efficient propeller necessitates for an efficient turbine a considerable increase in dimensions and hence increase in weight and cost. In such cases a combination of reciprocating engines and turbines was employed, there being two reciprocating engines to deal with the high-pressure steam and one or two turbines to expand the exhaust steam down to the lowest possible pressure. In the steamer 'Otaki' this system is credited with a saving of about 17 per cent. in the coal consumption; it has also been fitted to the White Star Liners 'Laurentic' and 'Olympic,' the Orient Liner 'Orama,' and other vessels.

In the 'Reina Victoria Eugenia' a four-shaft 'combination' arrangement was adopted, the two inner shafts being driven by reciprocating engines and the two outer shafts by low-pressure turbines. At low powers the reciprocating engines produced about three-quarters of the total power and the turbines one-quarter; at full output the proportions were about two-thirds and one-third respectively. The steam consumption was only about 11 lbs. per h.p. per hour or about 20 per cent. less than that required for quadruple expansion reciprocating machinery.

The WEIR CLOSED FEED System

FOR ELECTRIC STATIONS
AND
LAND POWER PLANTS.

■

In conjunction with the
WEIR EVAPORATOR
FEED MAKE-UP EQUIPMENT
provides the most perfect Feed System for Boiler preservation.

■

Simply and cheaply applied to existing plants.

■

Should have the consideration of every Station Engineer.

■

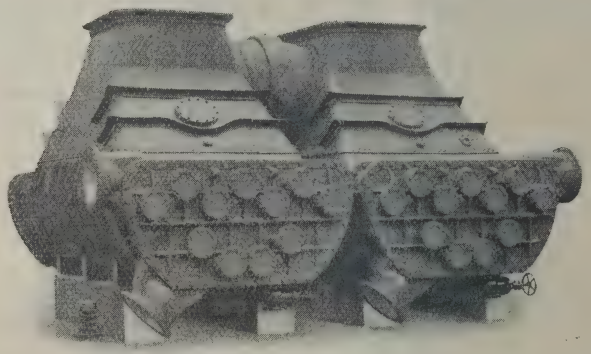
PARTICULARS ON APPLICATION
Dept. C.F.S.

G. & J. WEIR Ltd. CATHCART GLASGOW

WEIR
Uniflux
CONDENSING PLANTS for POWER STATIONS

Consult us on your lay-out.

We have the technical knowledge, specialised experience and unique facilities necessary to secure the best results.



Above illustration shows Twin-Type Condensers.
One of two sets installed in connection with two 12,500 K.W. Turbo-Alternators

ENQUIRIES TO CONDENSER DEPARTMENT.

G. & J. WEIR Ltd. CATHCART, GLASGOW.

F. 1995

The revolutions of the reciprocating engines were about 113 per min., those of the turbines about 480. The sister vessel 'Infanta Isabel de Borbon' had the usual three-shaft combination, the revolutions of the turbines at full power being 276 per min. and of the reciprocating engines 116 per min.

In a three-shaft combination installation with 92 revolutions per min. for the reciprocating engines and 250 for the turbines, the reciprocating portion of the machinery produced 56 per cent. and the turbine portion 44 per cent. of the total full power, but the propulsive effect of the turbine propeller is rather disappointing. This machinery has been displaced by the geared turbine.

TURBINES.*

The development of the steam turbine as a motor for ship propulsion has progressed rapidly in the last decade. In the earlier stages of its adoption, when the turbine was directly coupled to the propeller shafting, the high revolutions necessary to obtain suitable blade speeds for low steam consumption without abnormally increasing the size and weight of the turbines entailed small propellers which were inefficient except for fast vessels, and even in these the turbines were run at an uneconomically low speed in order to improve the propellers.

The introduction of single-reduction gearing between the turbines and propellers enabled advantage to be taken of high-blade speeds and fairly efficient propellers for vessels of over about 16 knots speed, and for all speeds of vessels double-reduction gearing permits the turbine and propeller designers to select the revolutions most suitable for their individual purposes so as to obtain the maximum efficiency of turbine and propeller respectively. The revolutions of the most efficient propeller for a vessel depend on horse-power, speed and form of vessel, and should be worked out in conjunction with experimental results such as those published by Taylor and Froude, but the following method gives very satisfactory results for turbines, gearing and propellers :—

R = revolutions of propeller per minute.
SHP = shaft horse-power of each shaft.
V = speed of vessel in knots on trial.

$$R = C\sqrt{\frac{V^3}{SHP}}.$$

VALUES OF C.

—	Direct Coupled.	Single Reduction Gearing.	Double Reduction Gearing.
Merchant vessels—ocean	12 to 13	7 to 8	5 to 6
,, ,, channel	13 ,, 14	9 ,, 10	5 ,, 6
Battleships	10 ,, 12	7 ,, 8	—
Light cruisers	11 ,, 13	9 ,, 10	—
Destroyers	13 ,, 15	7 ,, 8	—

RELATIVE I.H.P., S.H.P. AND COAL CONSUMPTION FOR ALL PURPOSES ON AN OCEAN LINER.

—	Reciprocating.		Turbine.		
	Triple.	Quadruple.	Direct.	Single Gear.	Double Gear.
Effective horse-power	5,000	5,000	5,000	5,000	5,000
Propulsive coefficient $\frac{EHP}{SHP}$	·6	·6	·50	·54	·6
S.H.P.	8,333	8,333	10,000	9,260	8,333
I.H.P.	8,950	8,950	—	—	—
Lbs. steam per S.H.P.	—	—	14·25	13·75	13·5
,, ,, ,, I.H.P.	17·1	16·2	—	—	—
Lbs. coal per S.H.P.	—	—	1·425	1·375	1·35
,, ,, ,, I.H.P.	1·71	1·62	—	—	—
Tons coal per hour	6·8	6·5	6·4	5·7	5·0

* See also 'Steam Turbines,' p. 1545.

PARTICULARS OF THE 36 HOURS COMPARATIVE TRIAL OF THE 'CAIRNROSS' & 'CAIRNGOWAN.

	'Cairnross' Geared Turbines.	'Cairngowan' Triple-expansion Engines.
Draught on trial, mean	23 ft. 8½ ins.	23 ft. 4¼ ins.
Displacement on trial . . . . . tons	9,950	9,891
Revolutions per min. (mean for 36 hours)	61·76	61·68
Coal per day . . . . . tons	27·8	32·7
I.H.P.	—	1,790
S.H.P.	1,570	—
Ratio of S.H.P. 'Cairnross' to I.H.P of 'Cairngowan'	·877	—
Lbs. of coal per I.H.P. per hour, all purposes	(equiv.) 1·45	1·704
" " S.H.P. " "	1·65	(equiv.) 1·94
Estimated water consumption per hour, all purposes	22,000 lbs.	27,200 lbs
" " per I.H.P. hour	(equiv.) 12·3 lbs.	15·18 lbs.
" " " per S.H.P. hour	14 lbs.	(equiv.) 17·3 lbs.
Hot-well temperature	79° Fah.	104° Fah.
Feed temperature	203° Fah.	221° Fah.
Estimated lbs. of water per lb. of coal from feed temp.	8·5	8·97
Percentage of ash	12·5	9·36
Pressure, steam pipe in engine room	158 lbs.	175 lbs.
Initial pressure h.p. turbine	138 lbs.	—
Vacuum	28·75 ins	26·8 ins.
Circulating water temperature, inlet	50° Fah.	50° Fah.
" " " outlet	70° Fah.	95° Fah.

COMPARATIVE RESULTS OF PARSONS SINGLE REDUCTION GEARED TURBINES AND RECIPROCATING ENGINES IN SIMILAR SHIPS.

Name of Vessel.	Type of Machinery.	Dimensions and Tonnage (Approx.).			Speed (Knots).	Coal per Day.	Saving in Coal for Turbines.
			Gross.	Displacement.			
						Tons	
(1) Vespasian .	(A) Turbine single screw .	275×38·75	2,150	4,350	9½	14·17	17%
	(B) Recipro. " " .	"	"	"	9½	17·07	
(2) Cairnross .	(C) Turbine single screw .	370×50¼	4,000	10,000	10·15	27·8	15%
Cairngowan	(D) Recipro. " " .	"	"		10·15	32·7	
(3) Mahanada .	(E) Turbine single screw .	470×58	7,200	13,500	12·138	54·8	19%
Malakuta .	(F) Recipro. " " .	"	"	"	11·533	67·4	
(4) Cumberland	(G) Turbine twin screw .	474×60	9,470	15,600	13·11	77·5	15%
Devon. .	(H) Recipro. " " .	473×60	9,661	"	12·8	91·5	

Note.—In 3 and 4 the speeds of the turbine vessels are higher than the corresponding vessels with reciprocating machinery. If the speeds had been equal the saving would have been greater than as recorded.

Arrangement of Turbines.

The turbine machinery may be arranged to drive one, two, three, or four lines of shafting as shown by figs. 8 and 9.

In mercantile vessels with direct-coupled turbines three lines were adopted, the centre shaft being driven by a high-pressure turbine, the steam from which was exhausted into two low-pressure turbines driving the two wing shafts. Astern turbines were incorporated in the aft end of the l.p. ahead turbine casings, and during normal ahead running revolved idly in vacuum. A separate high-pressure steam connection was fitted to each astern turbine, and also to each low-pressure ahead turbine. When manœuvring in and out of harbour the wing turbines only were employed, each turbine being controlled independently of the other.

In some installations of turbine machinery in large mail steamers four shafts were employed and the steam expanded in series through an h.p. and i.p., and two l.p. turbines. This arrangement, while introducing more complication in the intermediate receiver connections, enabled a higher efficiency to be secured than in the usual three- or four-shaft arrangement.

In torpedo boats and torpedo destroyers the practice was to adopt a three-shaft arrangement similar to that described above. Most of the vessels fitted in this manner were provided with h.p. and i.p. cruising turbines in order to maintain economy at low speeds, and these turbines were cut out of action as the power increased.

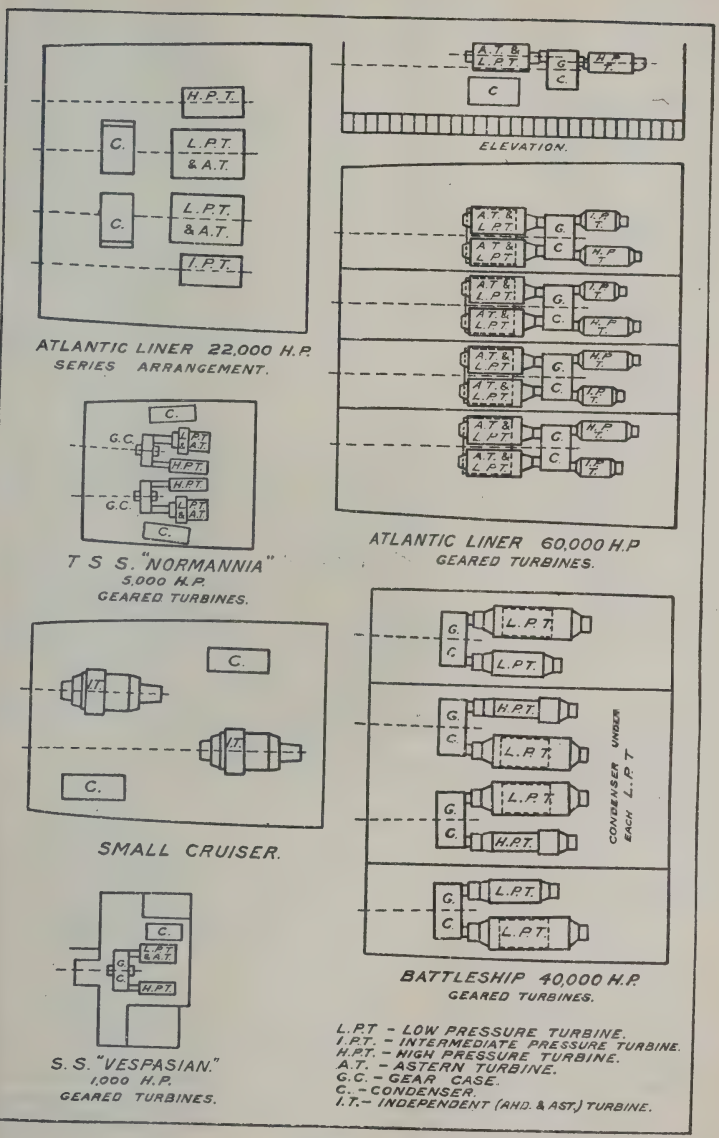

H.P.T.
C.
L.P.T. & A.T.
C.
L.P.T. & A.T.
I.P.T.
ATLANTIC LINER 22,000 H.P.
SERIES ARRANGEMENT.
A.T. & L.P.T.
G. C.
H.P.T.
C
ELEVATION.
ATLANTIC LINER 60,000 H.P
GEARED TURBINES.
C.
G.C.
L.P.T. & A.T.
H.P.T.
H.P.T.
G.C.
L.P.T. & A.T.
C.
T S S. "NORMANNIA"
5,000 H.P.
GEARED TURBINES.
C.
C.
SMALL CRUISER.
L.P.T.
L.P.T.
H.P.T.
L.P.T.
L.P.T.
H.P.T.
CONDENSER UNDER EACH L.P.T.
L.P.T.
L.P.T.
BATTLESHIP 40,000 H.P.
GEARED TURBINES.
C.
L.P.T. & A.T.
G. C.
H.P.T.
S. S. "VESPASIAN."
1,000 H.P.
GEARED TURBINES.
L.P.T - LOW PRESSURE TURBINE.
I.P.T. - INTERMEDIATE PRESSURE TURBINE.
H.P.T. - HIGH PRESSURE TURBINE.
A.T. - ASTERN TURBINE.
G.C. - GEAR CASE.
C. - CONDENSER.
I.T. - INDEPENDENT (AHD. & AST.) TURBINE.

FIG. 8.

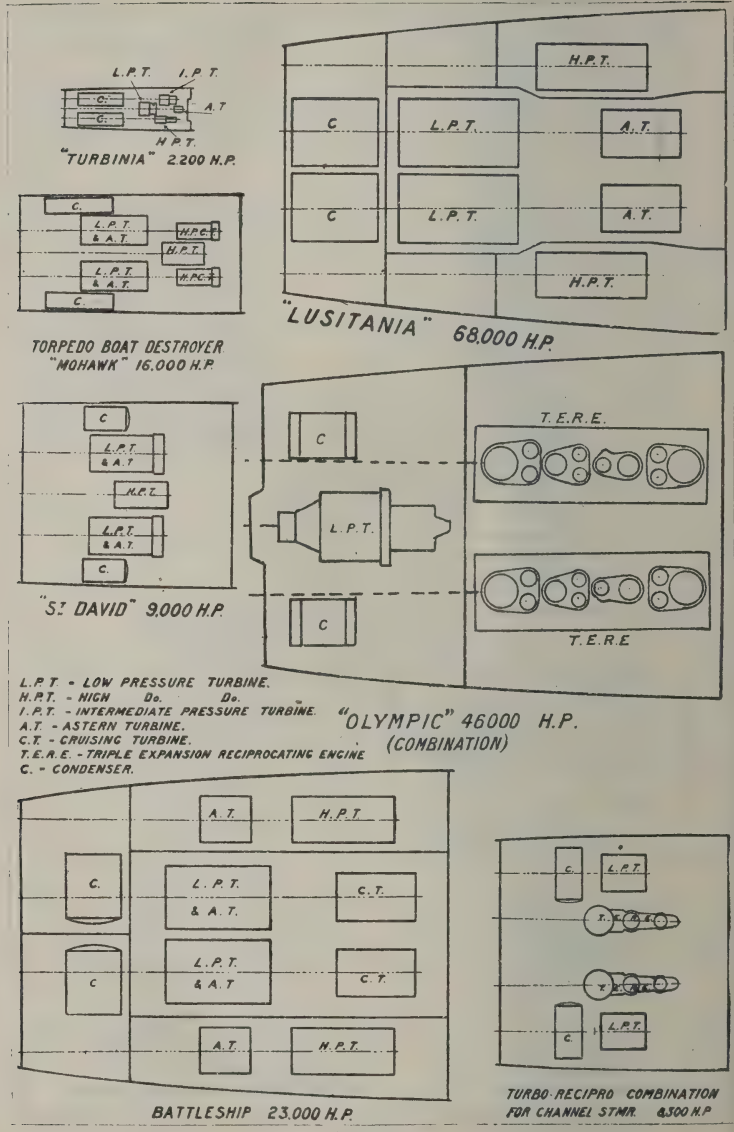

L.P.T.
I.P.T.
A.T
H.P.T.
"TURBINIA" 2.200 H.P.
C.
L.P.T. & A.T.
H.P.C.
H.P.T.
TORPEDO BOAT DESTROYER "MOHAWK" 16.000 H.P.
H.P.T.
C
L.P.T.
A.T.
"LUSITANIA" 68.000 H.P.
"St. DAVID" 9.000 H.P.
T.E.R.E.
L.P.T. - LOW PRESSURE TURBINE.
H.P.T. - HIGH Do. Do.
I.P.T. - INTERMEDIATE PRESSURE TURBINE.
A.T. - ASTERN TURBINE.
C.T. - CRUISING TURBINE.
T.E.R.E. - TRIPLE EXPANSION RECIPROCATING ENGINE
C. - CONDENSER.
"OLYMPIC" 46000 H.P. (COMBINATION)
C.T.
BATTLESHIP 23.000 H.P.
TURBO-RECIPRO COMBINATION FOR CHANNEL STMR. 8.500 H.P

FIG. 9.

More recent experience has shown that there are several objections to this arrangement, and in particular to the weight of these cruising turbines, and as a consequence the 'independent type of turbine has been adopted. Where direct turbines are still fitted the installation usually consists of twin screws driven by turbines of the Parsons' or Brown-Curtis types, having the astern turbine incorporated in the same casing as the ahead turbine.

In light cruisers the machinery usually consists of two independent sets of single-geared turbines fitted in compartments separated by longitudinal or transverse bulkheads, and so arranged that in the event of damage to the one set the other will be available for use. Geared cruising turbines have also been fitted for low power.

In battle cruisers and battleships the turbine installation usually consists of two complete sets arranged in two or three compartments divided by longitudinal bulkheads. In the latter arrangement the h.p. turbines are placed in the wing compartments and the two l.p. turbines in a common central compartment, while in the former the bulkhead is placed between the l.p. turbines.

On each outer shaft there is a h.p. ahead turbine forward and an independent h.p. astern turbine aft. On each inner shaft there is a l.p. ahead turbine, having incorporated with it in the same casing a l.p. astern turbine. All four shafts are thus in use for manœuvring either ahead or astern, the steam exhausting from the h.p. ahead or astern to the l.p. ahead or astern turbine, as the case may be, and from thence to the condenser.

With geared turbines each shaft is driven by an independent unit consisting of one h.p. ahead turbine and one l.p. ahead turbine with an astern turbine incorporated in the same casing with the latter.

With double-reduction gearing the high pressure unit is sometimes divided into an h.p. and i.p. in separate casings so as to reduce the length of rotor between bearings and enable higher revolutions to be run without 'whipping.' Where manœuvring requires greater astern power than can be transmitted by one pinion an h.p. astern turbine is fitted at the end of the h.p. or i.p. ahead turbine separately or in the same casing with a diaphragm to prevent astern steam entering the l.p. ahead turbine and vice versa. This arrangement is also preferred with superheated steam to minimise the change of temperature in the astern turbine when reversing.

For marine propulsion the two principal types which have been adopted are the Parsons and the Brown-Curtis. In the merchant service turbines of both types with single-reduction gear have been extensively fitted in high-speed steamers for cross-channel mail and passenger service, and the more recent development of double-reduction geared turbines is now being extensively adopted in vessels where the speed is lower, and on that account the propeller revolutions of single-reduction gear are not suitable.

The direct-coupled turbine is rarely fitted now owing to the many advantages and greater economy of the geared installations.

For naval service, so far as this country is concerned, either Parsons' turbines or Brown-Curtis turbines with single-reduction gearing are now being fitted in all battleships, cruisers, or torpedo-boat destroyers. The Brown-Curtis, being of the impulse type, and in consequence not having of necessity, fine blade tip clearances as in the Parsons' reaction type, is able to make use of superheated steam with less risk of blade stripping due to distortion of the turbine casing under high temperature. In practice it is found that an economy of about 1 per cent. in steam consumption is obtained for each 10° Fah. of superheat.

In a number of recent installations of Parsons' turbines an impulse wheel has been fitted at the inlet end of both the ahead and astern turbines. The steam supply in these cases is admitted as in the case of Brown-Curtis turbines, through a group of valves on the turbine end, to the nozzles which direct the steam to the impulse wheel, each valve controlling the steam supply to a section of nozzles, and each section having from three to twelve nozzles. The section of nozzles through which steam is admitted is adjusted to suit the power required. At full power all the valves will be open, at extreme low power only one may be open. The steam pressure in the nozzle valve chest is maintained at a maximum, and the reduction in pressure takes place in doing useful work passing through the first set of nozzles, thereby economy at low powers is improved as compared with turbines having only the usual Parsons' reaction blading where the reduction in steam pressure at low powers takes place at the regulating valve without doing useful work. This arrangement dispenses with the very short first-stage blades, shortens the turbine, and reduces the pressure on the gland and end thrust of rotor.

Parsons' Geared Turbines.

A set of Parsons' turbines of 3,000 s.h.p. with double-reduction gearing is shown in figs. 10, 11, and 12.

There is one h.p. and one i.p. ahead turbine each developing approximately one quarter of the total power and driving separate pinions geared to one first reduction gear-wheel. The l.p. turbine develops one half power and is geared to the first reduction gear-wheel on the opposite side of the main wheel. An h.p. astern turbine is incorporated in the same casing as the i.p. ahead turbine but separated from it by a diaphragm and the l.p. astern turbine is also incorporated with the l.p. ahead.

Owing to the high revolutions at which turbines can run with double-reduction gearing, the desired blade speed can be obtained with a small diameter of rotor and consequently the end thrust due to steam pressure is low enough to be taken entirely on a thrust block of the pivoted

PARSONS TURBINES.

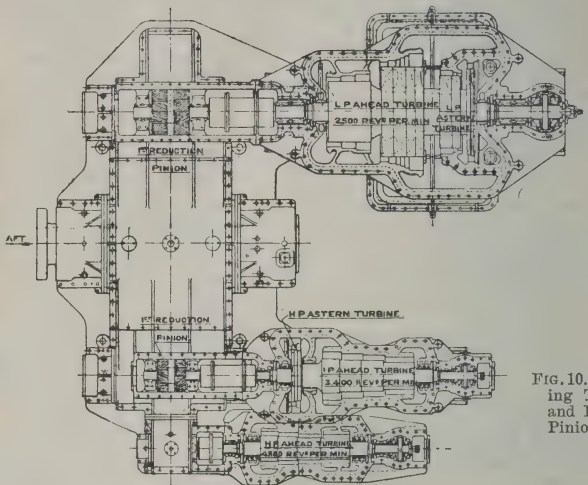


FIG. 10.—Plan View showing Turbine and I.P. and L.P. 1st Reduction Pinion Covers removed.

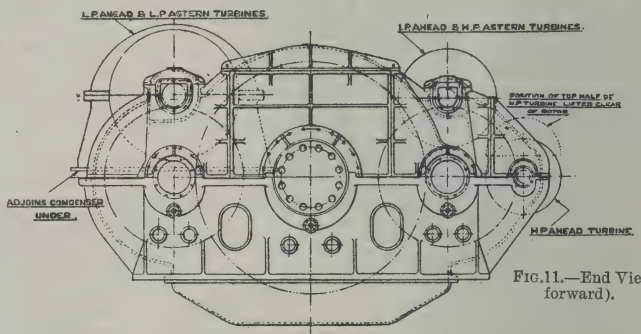


FIG. 11.—End View (looking forward).

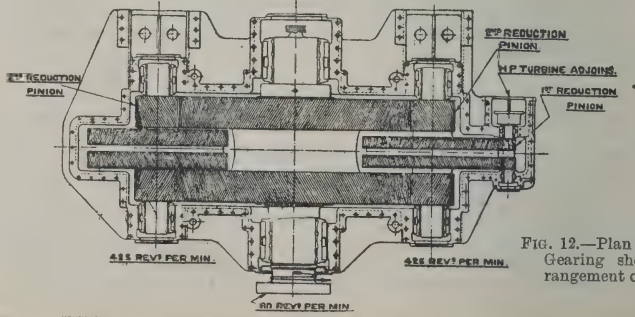


FIG. 12.—Plan View of Gearing showing arrangement of Wheels.

PARSONS TURBINES.

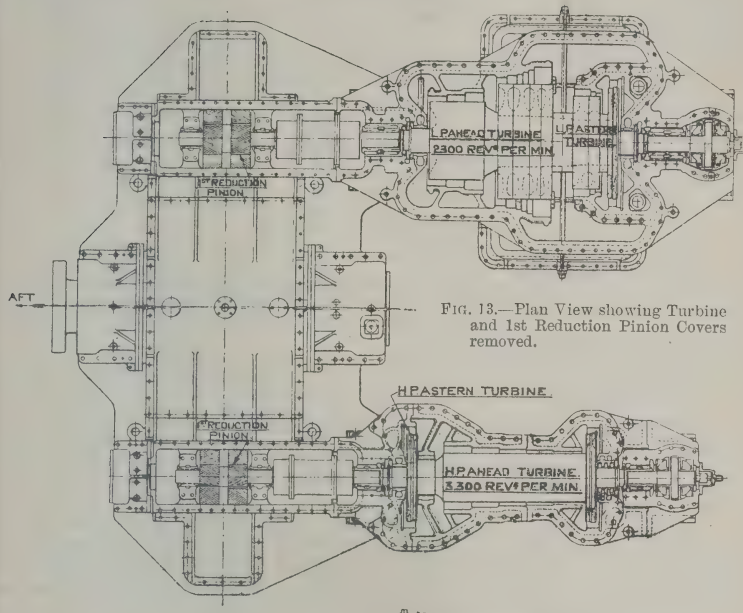


FIG. 13.—Plan View showing Turbine and 1st Reduction Pinion Covers removed.

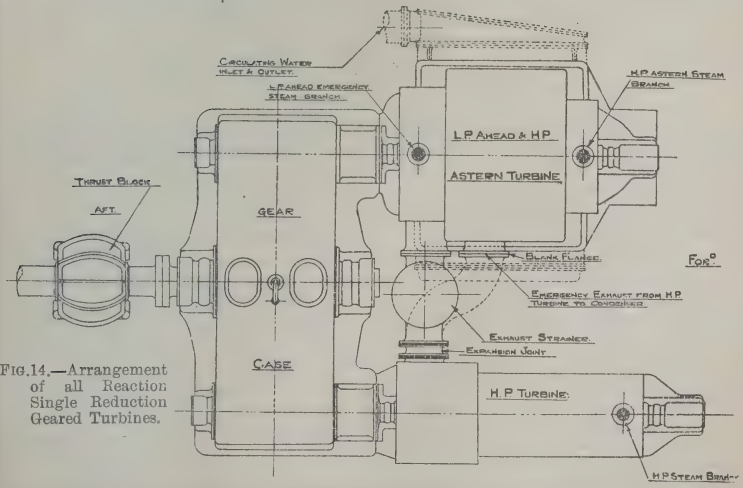


FIG. 14.—Arrangement of all Reaction Single Reduction Geared Turbines.

type, thus dispensing with dummies and the leakage caused by them. In addition, the blade heights to pass the steam are greater than in large rotors of equal power, but as the clearance is not increased the percentage loss due to leakage past the tips is much less in the geared turbine. As a result of these and other advantages the steam consumption is much reduced from that required for direct-coupled turbines, and if superheat is used, say 200° F., the consumption for turbines only, exhausting to 28 inches vacuum, will be from 8 to 8½ lbs. per hour.

Figs. 11 and 12 show the arrangement of the double-reduction gearing for this set of turbines.

Fig. 13 shows an alternative arrangement with two turbines instead of three. There is one h.p. and one l.p. ahead turbine with a corresponding astern turbine in each casing.

This arrangement is simpler, but the consumption is slightly higher than in the three-turbine arrangement.

Fig. 14 shows a set of single-reduction geared turbines with one h.p. and one l.p. ahead turbine and an h.p. astern turbine incorporated with the latter.

This arrangement is suitable for low powers or where the propellers can be run at higher revolutions as in channel or shallow-draught steamers.

Brown-Curtis Turbines.

Figs. 15, 16, and 17 show a set of Brown-Curtis turbines for a double-reduction geared installation for one shaft of a liner.

The h.p. turbine is sometimes designed with three wheels each with two rows of buckets or moving blades, and at others with one two-bucket wheel and several single-bucket wheels. The m.p. and l.p. ahead turbines have single bucket wheels, and in the astern turbines there are usually two three-bucket wheels, or if a greater proportion of astern power is required, one three-bucket and two two-bucket wheels.

The turbines are arranged with the h.p. and m.p. in line and coupled together, driving one pinion of the gearing and the l.p. turbine driving a separate pinion. This arrangement enables the designer to choose the revolutions most suitable for each turbine.

The astern turbines are arranged with the first or h.p. stage in the low pressure end of the m.p. ahead turbine casing, but separated from it by a diaphragm, and the l.p. astern in the corresponding l.p. ahead casing exhausting through the common pipe to the condenser. The astern drive is thus distributed over both pinions, and especially with superheated steam the change in the casing temperature of the first stage when astern steam is turned on is not so great.

The casings and diaphragms are of cast iron, except where superheated steam is used, when the casing of the h.p. is of cast steel and the diaphragms of special bronze.

The rotors and wheels are of mild steel and specially designed to avoid ' whipping ' and to withstand the stresses caused by the high speed of rotation. The blades or buckets are of special bronze capable of maintaining its strength at high temperatures, and the nozzles are formed of steel plates embedded in the diaphragms during casting. The rotors pass through glands at each end of the casing, which are packed with carbon rings to prevent the egress of steam at the high pressure or inlet of air at the low pressure stages.

The end thrust of the rotor is small and is taken up by a thrust block, usually of the Michell type.

The Ljungström Turbine.

(The British Ljungström Marine Turbine Co. Ltd.)

In the Ljungström reaction turbine special attention has been given to the effect of hot steam on its components, and arrangements have been made so as to avoid any unfavourable influence of varying steam pressure and steam temperature on the adjustment of the different parts. The expansion and contraction of the material may take place without altering either the centring and balancing of revolving parts or the clearance between revolving and stationary parts ; consequently the working safety of the turbine is insured both at high and at low temperatures, so that the system can be applied in conjunction with the highest steam temperatures and steam pressures that are attainable with existing types of boilers and superheaters.

The turbine consists of a number of blade rings concentrically arranged and fixed on two turbine discs. The live steam enters at the centre of the turbine inside of the innermost blade ring, and from thence passes through the blade rings outwards in a *radial* direction. The blade rings in one disc run between the blade rings in the other. The two discs run with the same number of revolutions but in opposite directions. The blades in one disc act as guide blades for directing the steam jets blowing against the blades in the other disc. As a result of this arrangement of moving guide blades, the system enables the extraction of mechanical work from the steam with only one-fourth the number of blade rings otherwise necessary. Partly for this reason, and partly owing to other constructive features, the turbine requires considerably less space than turbines built with stationary guide blades. In the system of double rotation, introduced by Messrs. Ljungström, the guide blade rings are similar in design to the blade rings, and the two turbine discs are practically identical one with the other. The live steam enters at the centre of each turbine disc inside of the innermost blade ring through a number of holes in the hub of the disc which is specially shaped. An important point is the slanting-off angle at the ends of the blades, which is kept within a certain limit. The connections between the ring sections are made by strengthening rings which also are attached to the outer edges of the blade rings, and serve to take up the centrifugal stresses acting on the blade system.

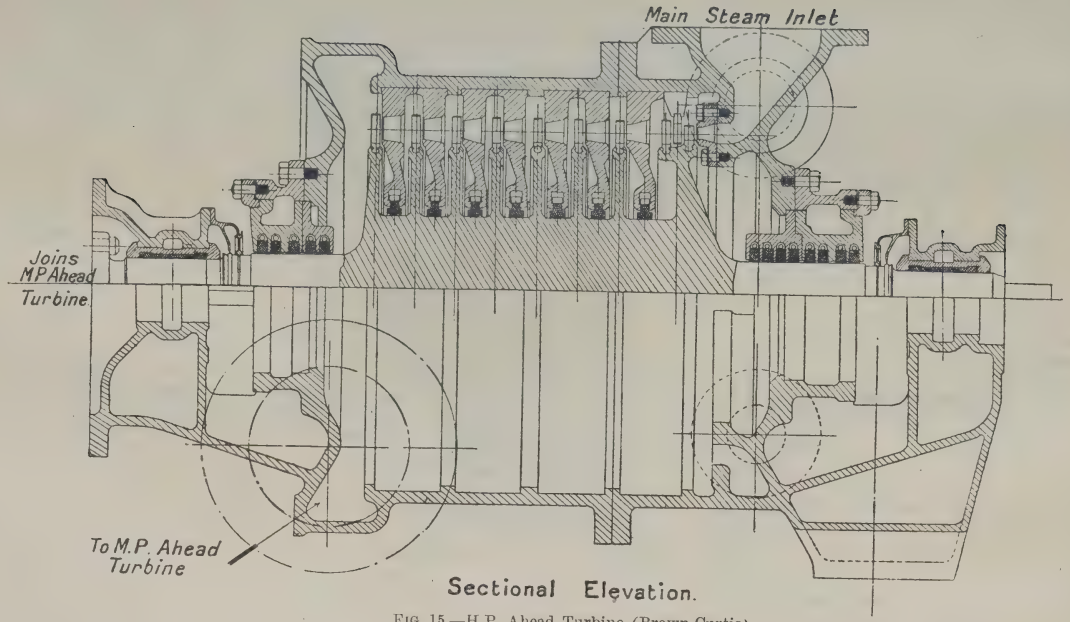


FIG. 15.—H.P. Ahead Turbine (Brown-Curtis).

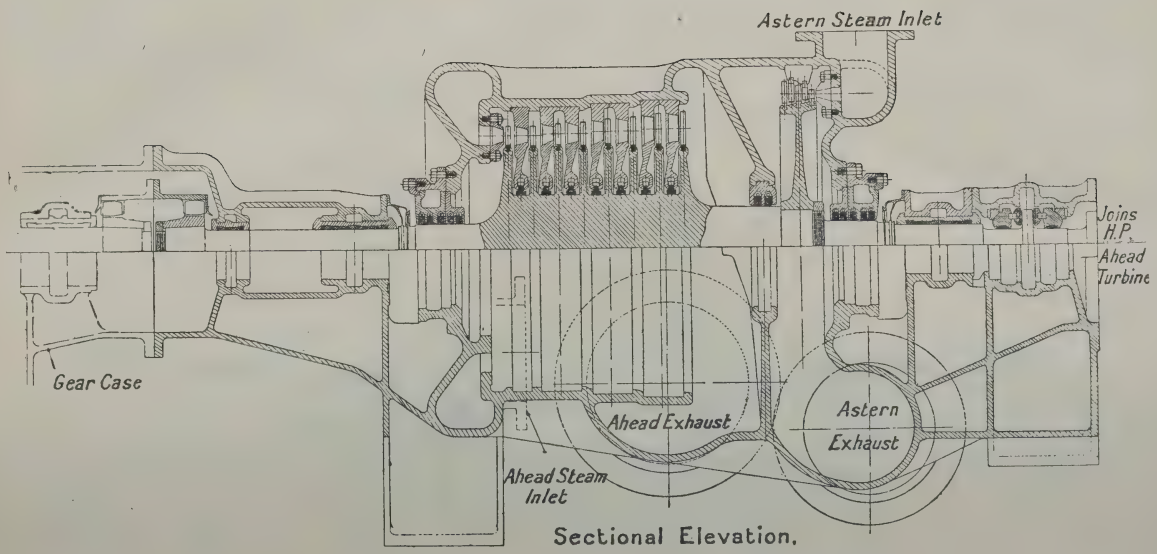


FIG. 16.—M.P. Ahead and H.P. Astern Turbine (Brown-Curtis).

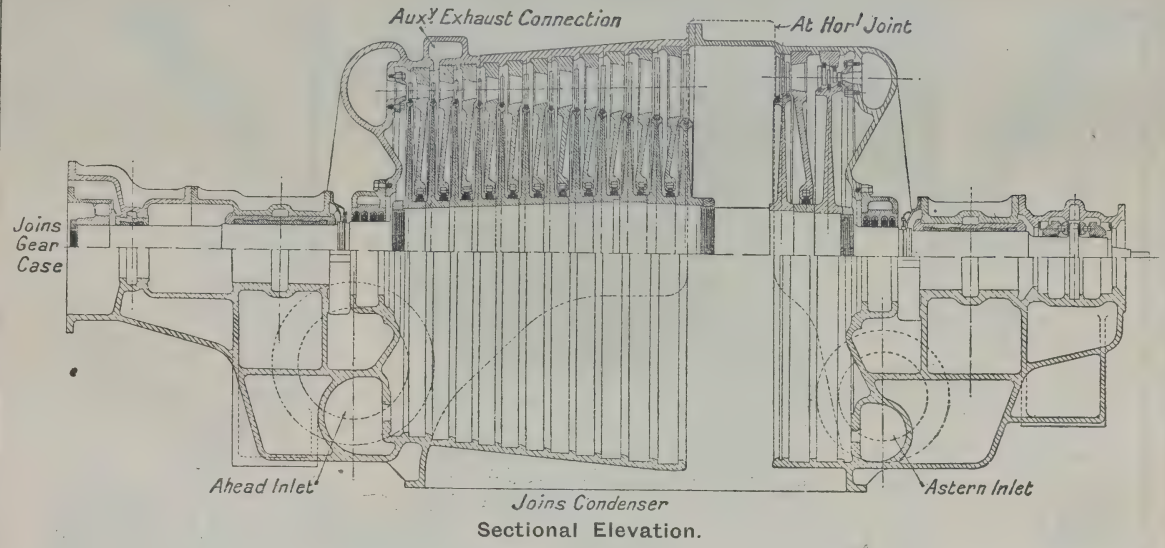


FIG. 17.—L.P. Ahead and Astern Turbine (Brown-Curtis).


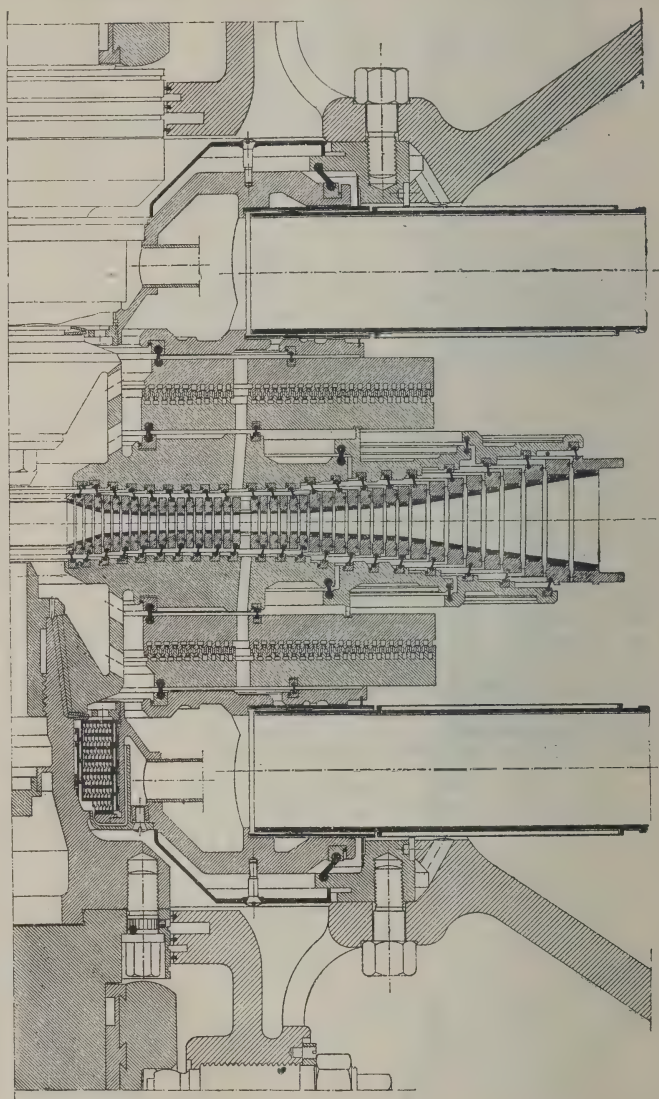


FIG. 18.—Longitudinal Section of a 1,000 K.W. Turbine (Lower part).

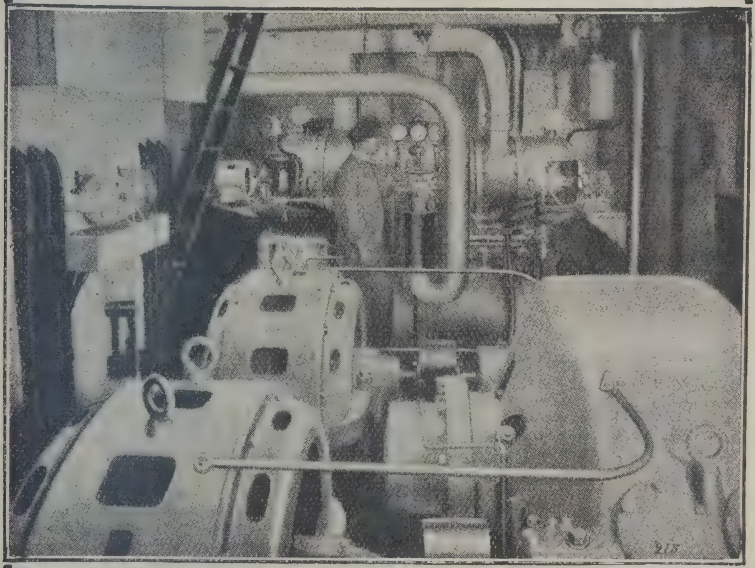Turbo-Electric Propulsion.



VIEW OF ENGINE ROOM OF SS. 'MJOLNER' FITTED WITH LJUNGSTROM STEAM TURBINES.

38 per cent. more economical in service than Sister Ship with Reciprocating Engines.

The British Ljungstrom Marine Turbine Co., Ltd.

195 STRAND, LONDON, W.C. 2.

Telegraphic Address: 'Portuary, London.' Telephone Number: City 974.

Turbo-Electric Propulsion.

The following represent the contracts received for Ljungstrom turbo-electric equipments placed since the trial of the 'MJOLNER':—

Total Number of Ships completed or under construction with

LJUNGSTROM TURBO-ELECTRIC EQUIPMENTS,

57.

Aggregate Equivalent in Indicated Horse Power,

118,000.

THE BRITISH LJUNGSTROM MARINE TURBINE CO., LIMITED,

195 STRAND, LONDON, W.C. 2.

F. 2007

A characteristic feature of the Ljungström turbine is the design and execution of the blades and blade rings. A turbine of 1,000 k.w. has about 40 blade rings.

The turbine blades are retained in their positions by means of thin sheet-iron strips in which are punched holes of the same cross section as the blades and at a distance corresponding to the pitch or spacing of the blades. The strips are applied in their places simultaneously with the assembling of the blades and welding discs, the angles of the blades being thus properly adjusted, and the blades prevented from being wrung out of place during the welding operation. On the completion of the welding, the sheet-iron strips are cut away and the welding discs turned off; the turbine blades are thus practically bound together into a firm, rigid system. The blade rings are inserted in corresponding grooves in the turbine disc and are tightly secured there by means of the caulking strips, so that they possess sufficient rigidity to exclude all risk of their changing their circular shape. An 'expansion ring' transmits the heat between the turbine wheel and the blade ring, and prevents such increase of temperature as would produce detrimental stresses in the blades, and influence the ring diameters and clearances.

Fig. 18 is a longitudinal section of a 1,000 k.w. turbine with turbine wheels and other internal parts. The outer blade rings are of larger cross sections than the inner rings in order to resist the higher stresses produced in the former by the centrifugal force. The blade rings are all made with blades in one uninterrupted length.

Due to the very powerful securing produced by the welding and to the methods of manufacture, the blading system employed in the Ljungström steam turbine affords a very high degree of safety as regards strength and resistance to distortion, both during the erecting of the turbine and after it has been put in regular service.

The part of the shaft situated within the turbine casing, and subjected to heating by the steam, is made hollow, the object of this arrangement being to accelerate the heating so as to make the fluctuations of temperature in shaft and hub follow one another, and thus avoid play between the hub and the shaft.

The axial balancing, or counteracting of the steam pressure axially on the inner side of the turbine wheel, is effected by the aid of two dummy discs provided with a number of concentric labyrinth packings, one of the discs being located at the back of the turbine wheel and the other being attached to the stationary steam chests or 'side discs' of the turbine. Steam is admitted between these discs from the centre of the turbine. In the inner labyrinth packings, accordingly, the full steam pressure prevails, while in the remainder of the packings the pressure gradually decreases in proportion to the distance of the packing from the centre, until it finally drops to that of the condenser outside of the outermost labyrinth packing. The labyrinth packings are divided into one inner and one outer section. Any axial motion of the rotating wheel affects the clearances in these two sections differently, a movement in one direction increasing the passages in the outer section but not in the inner one, while a shifting in the other direction enlarges the inner passages but not the outer ones. By this means the entrance and discharge of the steam, and at the same time also the steam pressure on the labyrinth discs, is varied in such a manner that the labyrinth disc fixed on the turbine wheel will *quite automatically* occupy the axial position required for making the steam pressure on the entire dummy disc fixed to the turbine wheel exactly equal to the steam pressure on that side of the turbine disc to which the blade rings are fastened. As this position is very distinct, and practically remains constant at all steam pressures, no thrust bearing is required in the Ljungström turbine for fixing the axial position of the rotors.

The packings around the shafts for excluding the atmosphere from the interior of the turbine are composed of labyrinth rings. All these rings are of the same thickness. When the steam passes through, therefore, they will all be heated equally thickly, and as a consequence the clearances between the ribs will be the same in both hot and cold state. Accordingly, the clearances will be comparatively small, and the steam quantity transmitted per unit of time will be unimportant. The leaking steam is discharged by special pipes from the shaft packings to a feed-water heater for the boiler, the steam being thus utilised, so that practically the flow of steam through the packing boxes involves no loss of heat nor increased fuel consumption.

Great radiation of heat is avoided in the turbine, and as a result the engine-room can be kept almost at ordinary room temperature.

Speed regulation is effected by a centrifugal governor mounted on the same vertical shaft as the oil pump.

Owing to its construction, the turbine is specially adapted for the full utilisation of *high steam temperatures* and *high pressures*, and mention may be made of the fact that a turbine generator of the system designed for a normal output of 5,000 k.w. will at a steam pressure of 300 lbs. per square inch, a steam temperature of 750° Fahr., and an absolute back pressure in the steam exhaust of 1 inch of mercury, consume about 6·5 lbs. of steam per b.h.p. an hour.

LJUNGSTRÖM STEAM TURBINE.

An installation of the Ljungström turbine driving the propeller by means of electrical transmission and mechanical gearing was fitted on the single-screw steamer, 'Wulsty Castle.'

In the six hours dock trial the power delivered to the propeller shaft was 1,117 k.w. or 1,496 s.h.p. The power generated by the main turbine sets was 1,281 k.w., and rating the steam consumption on the shop trial at 12·72 lbs. per k.w. the steam consumption is 10·9 lbs. per s.h.p. per hour for all propelling purposes, and including steering gear and electric light, but excluding bilge and sanitary pumps, heating and cooking and evaporator for make-up feed. This consumption is based on a steam pressure of 181 lbs. at stop valve superheated 247° F. and a vacuum of $\frac{28 \cdot 74}{30}$ ins. In smaller sets the consumption will be slightly higher, but with increased power it will be decreased to 10½ lbs.

The weight of the installation is approximately 20 per cent. less than reciprocating machinery of corresponding power, and is approximately equal to a modern geared turbine installation.

The space occupied is slightly less than with turbines, and if the motors are arranged aft and the boilers and generators amidships a gain of 5 per cent. in cargo capacity can be obtained.

Reduction Gear for Propulsion.*

The rapid development of the turbine during recent years has led the way to the adoption of indirect transmission between the turbine and propeller in order to utilise to the fullest extent the economy to be derived from running the turbines at high relative speeds and the propellers at reduced speed, as compared with direct-driven turbines. The importance of saving a few ounces of coal per h.p. per hour, or one or two per cent. in propeller efficiency in modern large power ships, either naval or mercantile, is obvious. In the former the radius of action with available fuel supply is increased, and in the latter a substantial reduction is made in the annual fuel bill.

The two systems which so far have proved successful and may be now considered beyond the experimental stage are :—

(*a*) Parsons' mechanical gearing.
(*b*) Fottinger's hydraulic transformers.

Each system will have certain fields of application where its particular advantages render its use desirable. The relative advantages and disadvantages of the two systems are briefly as follows :—

MECHANICAL GEARING.

Advantages.

(1) Reduction in weight from 10 to 15 per cent. compared with direct-driven turbines.
(2) Reduced coal consumption of 8 to 10 per cent. on same basis.
(3) High mechanical efficiency of gearing, approximately 98 per cent.
(4) Large speed reduction ratio permissible, as high as 30 : 1.
(5) Simplicity of mechanism.

Disadvantages.

(1) Separate turbines for astern running necessary, and having only 60 to 70 per cent. of ahead power.
(2) Noise in engine room. This, however, has been minimised to a great extent by recent improvements in gear cutting.
(3) Wear on teeth. Experience has shown, however, that this is very slight under normal conditions of working.

HYDRAULIC TRANSFORMERS.

Advantages.

(1) Astern turbines dispensed with and about 85 per cent. of ahead power available for astern running with reversible transformer.
(2) Absence of noise.
(3) Relatively no wear.
(4) Practically no limitation in power to be transmitted, the driving turbine being the limiting power.
(5) Increased manœuvring power due to greater astern power and practically instantaneous reversal.
(6) Increased economy and saving in weight as compared with direct-driven turbines.

Disadvantages.

(1) Lower efficiency, about 89 per cent., as compared with mechanical gearing.
(2) Limitation in speed reduction ratio, the maximum being about 6 : 1.
(3) More complicated mechanism.

* See also pages 888, 1581.

Parsons' Gearing.*

This gearing consists of a large gear wheel with double helical teeth about $\frac{7}{16}$ in. pitch, coupled to the propeller shaft, and driven by either one or two pinions, coupled to the turbines. The connection between the pinion spindle and turbine spindle is by means of a claw coupling, which under running conditions permits of any slight lateral movement due to the expansion of the turbine rotor under steam being taken up. The gearing is completely enclosed in a cast-iron casing, which also forms the support for the bearings of the gear wheel shaft and pinion spindles. Jets of lubricating oil from the forced lubrication system impinge on the teeth at the point of contact of the pinion and wheel, and the spindles and shaft bearings are also connected to the forced lubrication system. The double helical gear ensures the transmission of pressure from one tooth to another without shock or vibration, and as the teeth are of true involute form complete line contact exists during the time they are in mesh. The pinions are made of nickel steel, having a tensile strength of about 40 tons per sq. in. with 25 per cent. elongation, and the gear wheels of carbon steel having a tensile strength of about 32 tons per sq. in. with 26 per cent. elongation. Absolute accuracy in cutting the gearing is essential, and any corrective process or hand work after the gear is cut is inadmissible. The machines employed are the result of extensive and costly experiments, both in design and construction. In the double reduction gears the pitch of the teeth in the intermediate pinion and large wheel is about 1 inch.

Marine Reduction Gears.

(*The Power Plant Co. Ltd., West Drayton.*)

According to the ratio of reduction of the turbine speed to the propeller speed, single or double reduction gears are employed; for instance, single reduction gears are quite practicable and a large number of vessels are running with a reduction up to 20 to 1.

This last reduction has recently been effected for two Dutch Royal Mail steamers by the above company.

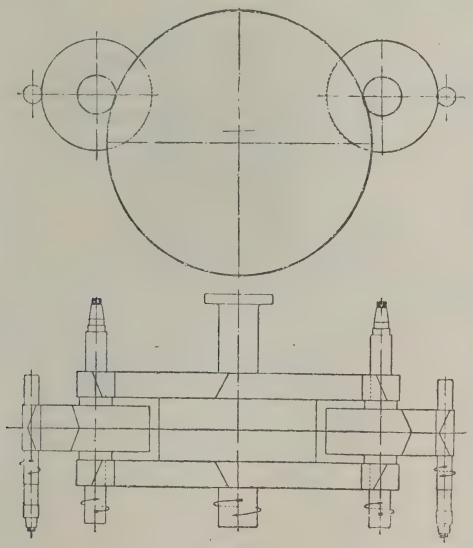


Fig. 19.

Where, however, a power exists about 4,000 h.p., and for any reduction from 20 to 1, the low speed wheel becomes too large for practical purposes; recourse must then be made to double reduction gears.

* See also page 1581.

PARSONS' GEARING.

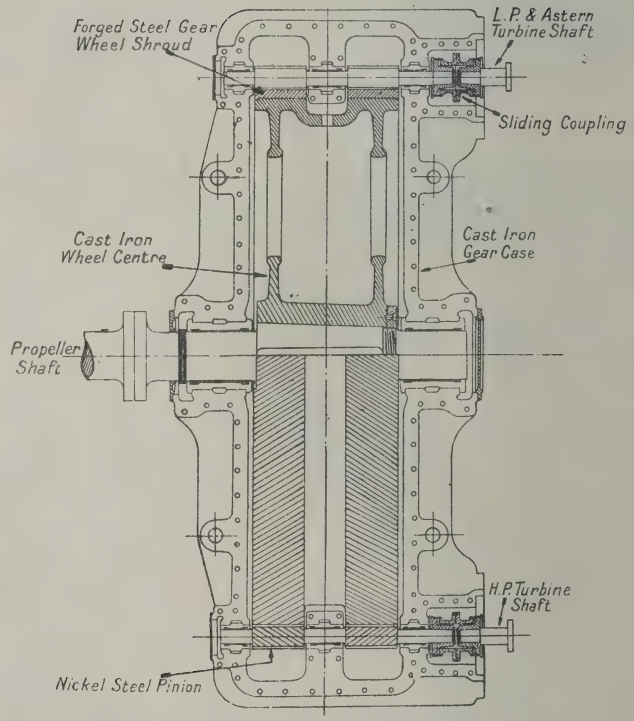


FIG. 20.—Plan with top casing removed.

Up to the present time double reduction gears have been supplied for a total reduction ratio of 70 to 1, but there is no reason why 100 to 1 could not be effected just as easily. The general arrangement of a typical double reduction set is shown in figs. 12, 19, and 20.

The essential feature of these gears is the use of two independent high-speed gear trains, each driven from one turbine, and a second reduction with a common wheel for the drive from both turbines, the low-speed train being arranged symmetrically relative to the high-speed trains. The advantages of the arrangement are that the power from each turbine is transmitted to the final wheel independently, whereby an even distribution of pressure on the teeth of same can be relied upon. The housing of all the gear trains in one casing effects a considerable saving in space fore and aft, where space is of most value, and reduces the gear weight without sacrifice of strength and rigidity. The gear wheels and bearings forming an arrangement symmetrical at right angles to the shafts, the deflections caused by the load are reduced to a minimum. The use of a single gear case simplifies the oiling arrangements and greatly simplifies the construction of the gear seatings in the vessel. The reduction of the number of bearings required to a minimum improves the overall efficiency and simplifies supervision.

With regard to efficiency, single reductions will go up to 98½ per cent., and double reductions up to 97 per cent.

The first steamer to be equipped with reduction gearing (made by *The Power Plant Co., Ltd.*) was the 'Vespasian,' a single-screw steamer of 2,150 tons. This gearing, as tested by Sir Charles Parsons, gave 98½ per cent. efficiency, and a fuel economy of about 13 per cent. was obtained. The cross-channel steamers, 'Normannia' and 'Hantonia' (with gearing made by The Parsons Marine Turbine Co., Ltd.), with a gear ratio of about 7 : 1, consumed only 43 tons of coal per trip, as compared with 70 tons per trip required by direct-driven turbine vessels of similar dimensions and speed, engaged in the same service.

Mechanical gearing for turbines has developed enormously in recent years, and is now being used extensively for ships of all powers and classes. Double reduction gearing is now being introduced, making it possible to run the turbines twenty or thirty times as fast as the propellers with a consequent gain in overall efficiency.

FOTTINGER'S HYDRAULIC TRANSFORMER.

The hydraulic transformer (fig. 21) consists of two centrifugal pump wheels, A, keyed to the primary shaft, which is driven by the turbine. On the secondary, or propeller, shaft three impulse reaction water turbine wheels are mounted, the after two, B and C, for ahead driving, and the forward one, D, for astern driving. The wheels for ahead driving absorb the energy

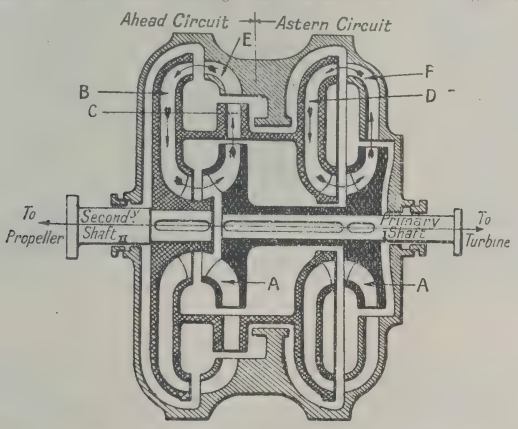


FIG. 21.—Fottinger's Hydraulic Transmitter.

delivered to them from the water discharged by the pump wheel in two stages, the primary stage, C, being connected to the astern water turbine wheel, D. Having given up part of its energy in the primary ahead stage, the water moves in continuous compact flow through guide vanes, E, in the casing to the second stage ahead wheel, B, which absorbs the remaining energy in the water. The discharge from the second stage wheel flows back to the beginning of the circuit in the pump wheel, giving up to it the remaining energy of discharge. In the same way the astern driving wheel, D, receives its energy from the water discharged by the forward pump wheel guided into it by the stationary vanes, F, in the casing.

The vanes in the ahead and astern turbine wheels are spaced in opposite directions to each other, thereby giving the reversed motion.

A change valve, controlled by a lever, admits the water from either pump wheel to the corresponding turbine wheel to give the desired direction of rotation.

The wheels and vanes of the transformer are made of bronze, and the casings of cast iron.

The efficiency of the transformer decreases with an increase of speed reduction ratio on account of the higher velocities causing increased fluid friction.

Fresh water is used in the system, and on account of the work done upon it by friction during its passage through the vanes heat is generated. Part of this heat, which would otherwise be lost, is saved by using the water for feeding the boilers, the quantity of water in the transformer system being maintained by filling up with colder water from the air-pump discharge.

COCKBURNS' GEARED TURBINE EMERGENCY SHUT-OFF AND POSITIVE CONTROL MANŒUVRING GEAR FOR SATURATED AND SUPERHEATED STEAM.

In this arrangement, fig. 22, the manœuvring valves are of the single handwheel type. Rotation in one direction from mid position opens the ahead valve, and by the opposite direction the astern valve is opened. With the arrangement shown it is impossible to have the two valves open at the same time.

The emergency valves are incorporated in the bulkhead valves and are steam operated by an automatic governor on the turbine rotors. They shut off steam completely, which, in the case of a broken shaft, prevents the turbine from being spun, as would occur with the ordinary butterfly throttle, through the quantity of steam that passes the latter valve when it is closed

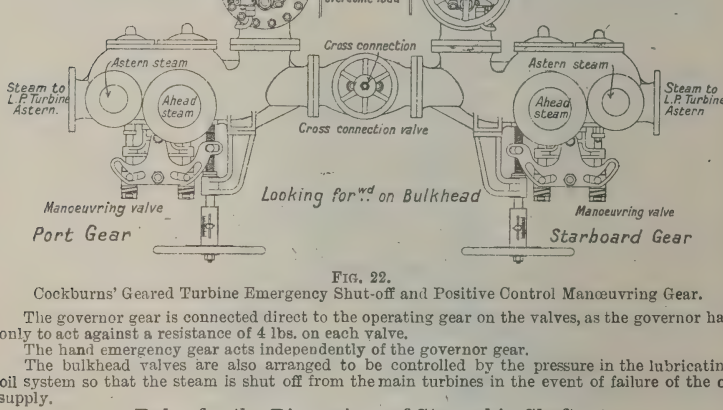


FIG. 22.
Cockburns' Geared Turbine Emergency Shut-off and Positive Control Manœuvring Gear.

The governor gear is connected direct to the operating gear on the valves, as the governor has only to act against a resistance of 4 lbs. on each valve.

The hand emergency gear acts independently of the governor gear.

The bulkhead valves are also arranged to be controlled by the pressure in the lubricating oil system so that the steam is shut off from the main turbines in the event of failure of the oil supply.

Rules for the Dimensions of Steamship Shafts.

See pages 923–926.

BOILERS.

In determining the principal dimensions of a boiler, or boiler installation, consideration must in the first instance be given to the system of draught employed, whether it is to be forced or natural draught, and since the quantity of steam which a boiler is capable of generating depends on the weight of coal consumed, it follows that the dimension which must first be decided is that of the grate area, the heating surface being proportioned from the grate area depending upon the type of boiler employed. The efficiency of the boiler largely depends on the rate of evaporation per square foot of heating surface, which should be kept as low as possible.

Coal Combustion.

The weight of coal which can be burnt per square foot of grate area per hour under varying conditions of draught is approximately :—


Natural draught	16 to 20 lbs.	Forced draught 2 ins. air pressure	45 to 50 lbs.
Forced draught ½ in. air pressure	20 to 25 lbs.	,, 3 ins. ,,	55 to 60 lbs.
,, 1 in. ,,	30 to 35 lbs.	,, 4 ins. ,,	60 to 70 lbs.

ECONOMICAL.

MORISON'S PATENT EVAPORATORS

FOR

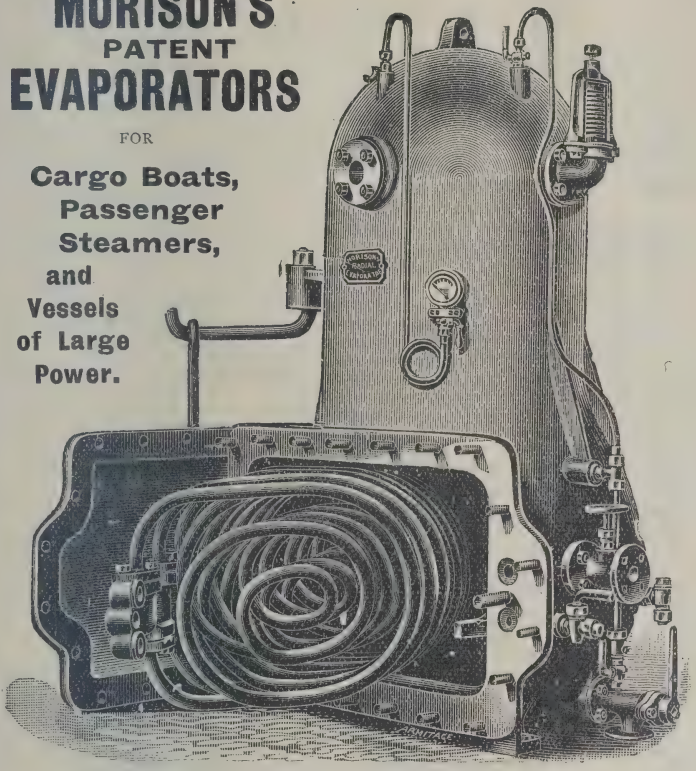Cargo Boats, Passenger Steamers, and Vessels of Large Power.



ACCESSIBLE.

Richardsons, Westgarth & Co., Ld.,

MARINE ENGINE and TURBINE BUILDERS,

HARTLEPOOL.

Also Middlesbro' and Sunderland.

F. 2012

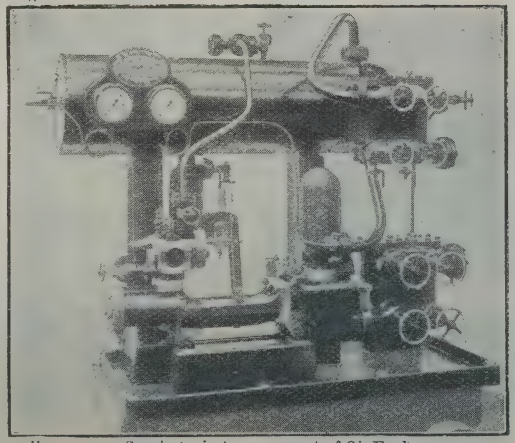
Telegrams:
'White, East Cowes.'

J. SAMUEL WHITE & CO. LTD.

Telephone:
No. 3, Cowes.

SHIPBUILDERS and ENGINEERS,

EAST COWES, I. of W.



Single Unit Arrangement of Oil Fuel Burning Installation.

BUILDERS OF

Passenger Steamers. Cargo Steamers.
Special Service Vessels.
Shallow Draught Vessels.
Torpedo Boat Destroyers.
Steam and Motor Launches of every class.

MANUFACTURERS OF

Marine Steam Turbines. Reciprocating Engines.
'White-Forster' Water Tube Boilers.
Marine Return Tube Boilers.
'White-Diesel' Heavy Oil Engines.
The 'J. Samuel White' Super Semi-Diesel Oil Engines.
The 'J. Samuel White' Oil Fuel Burning Installations (Low Pressure System) for Marine and Land Purposes.

Registered *J. Samuel White & Company* Trade Mark

LONDON OFFICE: 28 Victoria Street, S.W. 1.

LIVERPOOL OFFICE: 310 Royal Liver Building.

With cylindrical boilers and water-tube boilers for cruisers and battleships the maximum combustion per square foot of grate rarely exceeds 40 lbs. when working with closed stokeholds and 30 lbs. under Howden's system of forced draught; with the express type of water-tube boiler as fitted in torpedo boats and torpedo boat destroyers the combustion varies from 60 to 80 lbs. of coal per square foot of grate.

Boiler Surfaces.

The heating surface and grate area for a required boiler is determined by the method of draught employed, whether natural or forced, the kind of coal used on account of the difference in calorific values of different varieties of coal, and the type of engine to which steam is being supplied, quadruple expansion engines, for instance, requiring less boiler surface than compound engines on account of the greater economy in steam consumption per I.H.P. of the former.

Economy in coal consumption is attained by using natural draught, which for this reason is generally employed in cargo vessels; where, however, considerations of weight and space are of importance, as in naval machinery and fast passenger vessels, forced draught to a greater or less degree is invariably employed, in which case the coal consumption at maximum power is greater than when natural draught is used.

The following table gives the average I.H.P. developed per square foot of grate, and the ratio of heating surface to grate area of different types of boilers and average consumptions of coal for various types of engines.

TABLE SHOWING PARTICULARS OF BOILERS OF VARIOUS TYPES OF STEAMSHIPS.

Type of Ship.	Type of Engine.	Type of Boiler.	Draught.	Coal per H.P. per Hour in Lbs.	H.P. per sq. foot of Grate.	Ratio Heating Surf. Grate Area.
Merchant	Compound	Cylindrical	Natural	2·0 to 2·3	8 to 7	30 to 25
,,	Triple	,,	,,	1·6 ,, 1·8	10 ,, 9	35 ,, 30
,,	,,	,,	Howden	1·5 ,, 1·7	15 ,, 13·5	40
,,	Quadruple	,,	Natural	1·5 ,, 1·6	11 ,, 10	35 to 32
,,	,,	,,	Howden	1·45 ,, 1·55	16·5 ,, 15	40
,,	Combination	,,	Natural	1·3 ,, 1·4	12·5 ,, 11·5	35 to 32
,,	,,	,,	Howden	1·25 ,, 1·35	17·5 ,, 16·5	40
Fast Passenger and Mail Steamers	4 Crank Triple	,,	Closed Stokeholds	1·7 ,, 1·9	20 ,, 15	35 to 30
,,	,,	,,	Howden	1·6 ,, 1·8	18 ,, 15	40 ,, 36
,,	Quadruple	,,	Closed Stokeholds	1·55 ,, 1·7	17 ,, 15·5	35 ,, 30
,,	,,	,,	Howden	1·45 ,, 1·6	17 ,, 15·5	40 ,, 36
,,	Turbine, Direct	,,	Closed Stokeholds	1·4 ,, 1·6	19 ,, 16·5	35 ,, 30
,,	,,	,,	Howden	1·3 ,, 1·5	19 ,, 16·5	40 ,, 36
,,	Turbine Single Gear	,,	Natural	1·35 ,, 1·45	12·5 ,, 11·5	35 ,, 32
,,		,,	Howden	1·3 ,, 1·4	17 ,, 15·5	40
,,	Turbine Double Gear	,,	Natural	1·3 ,, 1·4	13 ,, 12	35 to 32
,,		,,	Howden	1·25 ,, 1·35	17·5 ,, 16	40
Paddle	Compound	,,	Natural	2·0 ,, 2·3	8 ,, 7	32 to 28
,,	,,	,,	Howden	2·0 ,, 2·3	17 ,, 15	40 ,, 36
,,	,,	,,	Closed Stokeholds	2·2 ,, 2·5	14·0 ,, 11	32 ,, 27
Battleships and Cruisers	Turbine	Water Tube (Babcock-Wilcox)	Closed Stokeholds	1·3 ,, 1·45	16 ,, 14·5	35 ,, 33
			Moderate forced			
,, ,,	,,	Water Tube (Yarrow)	Closed Stokeholds	1·35 ,, 1·5	25 ,, 22·5	60 ,, 55
Torpedo Boat Destroyers	,,	Water Tube (Express)	Closed Stokeholds	1·9 ,, 2·1	35 ,, 32	60 ,, 55
				Oil fuel	H.P. per cub. foot of combust'n chamber	Heating Surf. cub. ft. of combust'n chamber
,, ,,	,,	,,	,,	1·0 ,, 1·1	9 to 7·5	9 to 8

Draught.

The two systems of forced draught most commonly adopted are closed stokeholds and Howden's system (page 1793) with closed ashpits. In the former an air pressure is maintained in the boiler rooms by forcing in air with fans, all openings in the boiler room are closed down with doors, and air locks fitted for access purposes. With Howden's system the boiler room is open, no air locks being required, and the air is forced by fans over the surface of a nest of tubes situated in the uptakes, through which the products of combustion pass on the way to the funnel. The air is raised to a temperature of about 250°F. by contact with the hot tubes, and passes through passages on either side of the uptake into a reservoir surrounding the furnace fronts, from which reservoir the air is admitted to the furnaces by valves in the furnace fronts, at the sides and the top, to the ashpit and above the fire respectively. Valves are fitted to control the admission of air above and below the fires : these must be shut before opening the furnace door to fire the boiler, otherwise the flame would be blown out into the stokehold. The proper use of the top valve prevents excessive smoke without reducing the boiler efficiency or the amount of evaporation per lb. of coal. Special strips of twisted steel ribbon called ' retarders ' are placed in each boiler tube, causing the hot gases traversing the tubes to take a spiral course and be retained longer in contact with the tubes than they otherwise would.

The latest type of furnace fronts has the side valves controlled by one handle, and is also fitted with a safety guard, so that the furnace doors can only be opened when the air valves are shut, thereby preventing the possibility of any flame coming back through furnace door when it is opened.

On account of the abstraction by the air of what would otherwise be waste heat passing up the funnel, a considerable measure of increased boiler efficiency is attained compared with the closed stokehold system, and the uniform condition of furnace temperatures which Howden's system ensures tends to reduce the wear and tear of the boiler.

A more uniform efficiency of furnace can be maintained with forced draught and it may be readily controlled to suit any desired rate of combustion, being quite independent in this respect of prevailing atmospheric conditions.

Furnaces and Firebars.

If forced draught is employed it is not desirable to have firebars longer than 6 ft. on account of the tendency for large quantities of air to pass through the firebars if the fire should burn into holes. With Howden's system 5 ft. 6 ins. is the maximum length of firebar generally adopted. In naval practice with modern water-tube boilers working at full power under a moderate forced draught of 0·5 in. to 0·75 in. of air pressure, grate bars having a maximum length of 7 ft. are frequently employed ; this, however, requires skilful firing, and extreme care to ensure the boiler efficiency being maintained at a maximum. For natural draught the length of grate bar should not exceed 6 ft. 6 ins., but increased boiler efficiency will be attained by using shorter bars, on account of the greater control over the fires. The diameter of furnaces for cylindrical boilers (figs. 23 and 24) should not be less than 32 ins. nor greater than 48 ins., and the number of furnaces which can be fitted in boilers of the following dimensions is :—

Boilers up to 9 ft. 0 ins. diameter	1 furnace
„ „ „ 13 ft. 0 ins. „	2 furnaces
„ „ „ 15 ft. 6 ins. „	3 furnaces
„ exceeding 15 ft. 6 ins. „	4 furnaces

The grate area of a cylindrical boiler is equal to :—Length of firebars × mean diameter of furnace × number of furnaces.

Length of Cylindrical Boilers.

The length of a cylindrical boiler is determined by the length of combustion chamber tubes or the furnace which is practically the same length as the tubes, the length of the combustion chamber and the water spaces at their backs. The combustion chamber measured horizontally should be as long as possible and usually is about 30 ins. in single-ended boilers and from 50 to 57 ins. in double-ended boilers. The water space between the back of the combustion chamber and the back end-plate of the boiler should be from 5 to 7 ins. at the bottom and wider at the top, the taper being about $\frac{1}{2}$ in. per foot on the combustion chamber back.

Heating Surface.

The heating surface of cylindrical boilers consists of the external surface of the tubes, the length being measured between the tube plates, the surface of the furnaces above the firebar level, and the surface of the combustion chambers. The surface of the front tube plate on the boiler end, although in contact with the hot gases, is not usually reckoned as effective heating surface, and should not be included in the total heating surface of the boiler. The heating surface of a water-tube boiler is the total external surface of the tubes in contact with the fire and hot gases.

CYLINDRICAL MARINE BOILER.

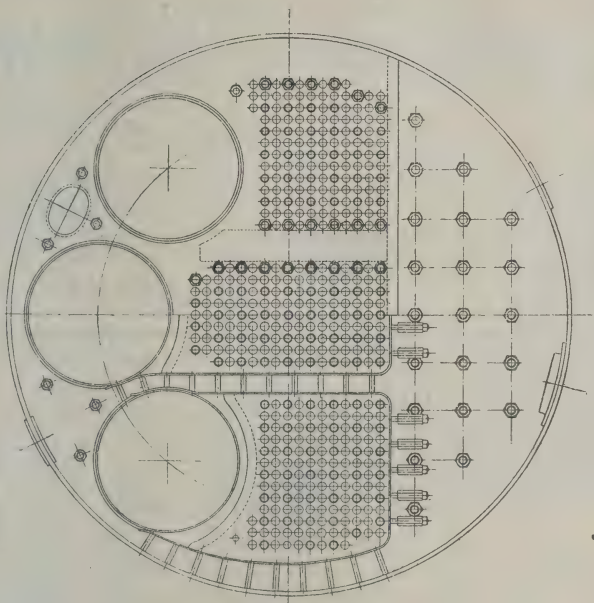


FIG. 24.

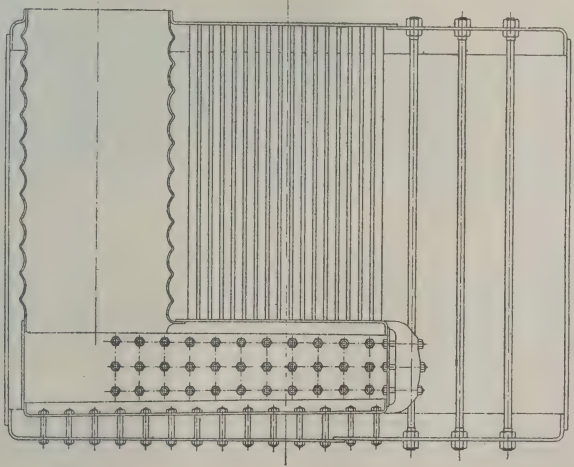


FIG. 23.

Diameter of Tubes for Cylindrical Boilers.

In forced-draught boilers the combustion chamber tubes are generally $2\frac{1}{2}$ or $2\frac{3}{4}$ ins. diameter, and in natural-draught boilers the diameter is 3 ins. to $3\frac{1}{2}$ ins., the increased sectional area being necessary to reduce the resistance to flow of the products of combustion.

Thickness of Cylindrical Boiler Shells.

The shell plates of cylindrical boilers must be of the following thickness to satisfy the requirements of the revised rules of the Board of Trade, Lloyds, British Corporation, and Bureau Veritas.

The thicknesses shown assume the steel to have a minimum ultimate tensile strength of 28 tons per sq. in., and the longitudinal joint to have double butt straps with an efficiency of riveting equal to 84 per cent.

THICKNESS OF SHELL PLATES IN INCHES.

Internal Diameter.	Working Pressure, lbs. per Sq. In.							
	220	210	200	190	180	170	160	150
10 feet	1·027	0·983	0·940	0·896	0·852	0·808	0·765	0·721
11 ,,	1·124	1·076	1·028	0·980	0·931	0·883	0·835	0·787
12 ,,	1·220	1·168	1·115	1·063	1·010	0·958	0·905	0·853
13 ,,	1·316	1·260	1·203	1·146	1·089	1·023	0·975	0·918
14 ,,	1·413	1·352	1·291	1·229	1·167	1·106	1·045	0·984
15 ,,	1·509	1·444	1·378	1·312	1·246	1·181	1·116	1·050
16 ,,	1·606	1·536	1·466	1·396	1·326	1·255	1·186	1·116
17 ,,	1·703	1·629	1·554	1·479	1·404	1·330	1·256	1·182

WATER-TUBE BOILERS.

Water-tube boilers are divided into two distinct classes, viz. :—Large-tube boilers as fitted in cruisers and battleships and to a limited extent in merchant vessels, and small-tube boilers as fitted in torpedo boats, torpedo boat destroyers, and launches.

The principal advantages of water-tube boilers as compared with cylindrical boilers are :—

(1) Rapidity with which steam can be raised.

(2) Capability to endure forcing to a great extent.

(3) Reduced weight.

(4) Reduced space occupied.

The large-tube boilers now adopted in the British Navy are of the Babcock & Wilcox type (figs. 25, 26) and the Yarrow type, both of which have straight tubes, the former $1\frac{1}{16}$ in. diameter and the latter $1\frac{3}{8}$ in. diameter. The tubes in the Babcock & Wilcox boiler are expanded into front and rear headers, sinuous in form and constructed of forged steel. Opposite each tube in the headers handholes are fitted, giving access for expanding, cleaning and renewal when necessary. The front headers are connected at the top by short tube nipples to the steam drum, and by similar nipples at the bottom to the mud drum. Return tubes about 4 ins. diameter connect the rear headers to the steam space in the steam drum.

The Yarrow large-tube boiler is a development of the Yarrow express type, and is very similar in design and construction. It consists essentially of a central upper steam drum, and two smaller water drums, the latter being situated about the level of the firebars. The generating tubes are expanded into the steam drum and each of the water drums, a manhole being fitted in the front end of each drum for access when expanding or cleaning of the tubes is necessary.

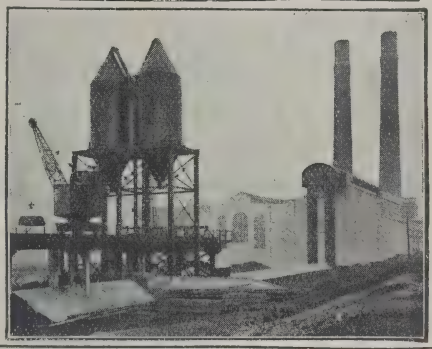
BABCOCK & WILCOX Ltd.

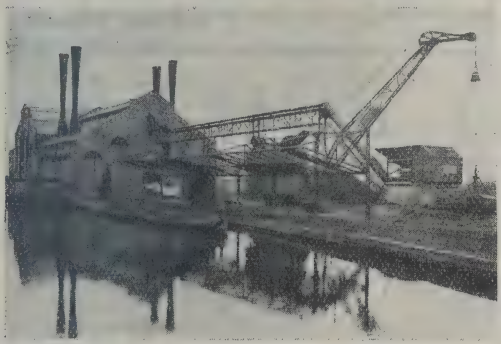
PATENT WATER-TUBE STEAM BOILERS

Electric Crane and Conveyor Departments.

SUCTION ASH PLANTS, ETC.

Babcock & Wilcox Boilers, Conveyors, Suction Ash Plant, and Electric Crane, to the order of London & North-Western Rly. Co.





Midland Electricity Works, equipped with Boilers fitted with Superheaters, Chain Grate Stokers, and Superposed Economisers, Crane and Conveyor by Babcock & Wilcox, Ltd.

Prospective Users are invited to consult us — in all matters of Economical Handling.

Telegrams: 'Babcock Cent, London.'

HEAD OFFICES:

Telephone: 6470 City (8 lines).

Oriel House, Farringdon St., LONDON, E.C.4.

Works: RENFREW, SCOTLAND.

Branch Works: Dumbarton, Scotland; Oldbury, England; Italy, Australia and Japan.

COOPER & GREIG

LIMITED,

ENGINEERS AND BOILERMAKERS

Britannia Works, Dundee, N.B.

Makers of

MARINE ENGINES AND BOILERS

Standard Sizes :
from 250 to 3,000 I.H.P.

LONDON OFFICE:

17 VICTORIA ST., WESTMINSTER, S.W. 1

Telephone : 962. Code : Lieber—5 Letter
Telegraphic Address : 'Condenser, Dundee'

THE BABCOCK AND WILCOX MARINE-TYPE BOILER.
(As fitted to Vessels in the Mercantile Marine.)

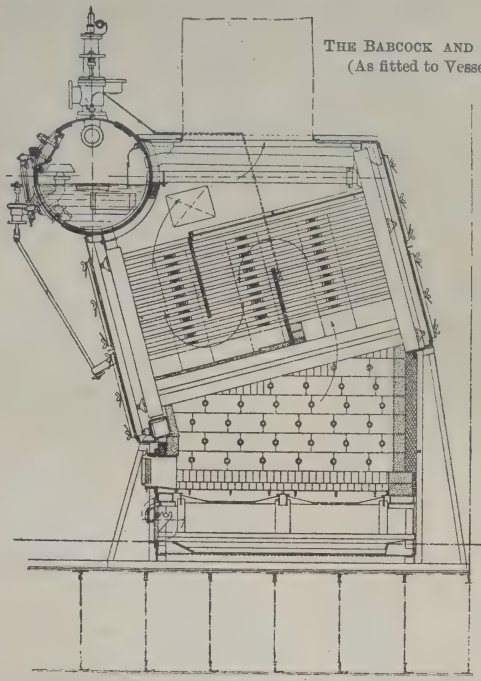


FIG. 25.

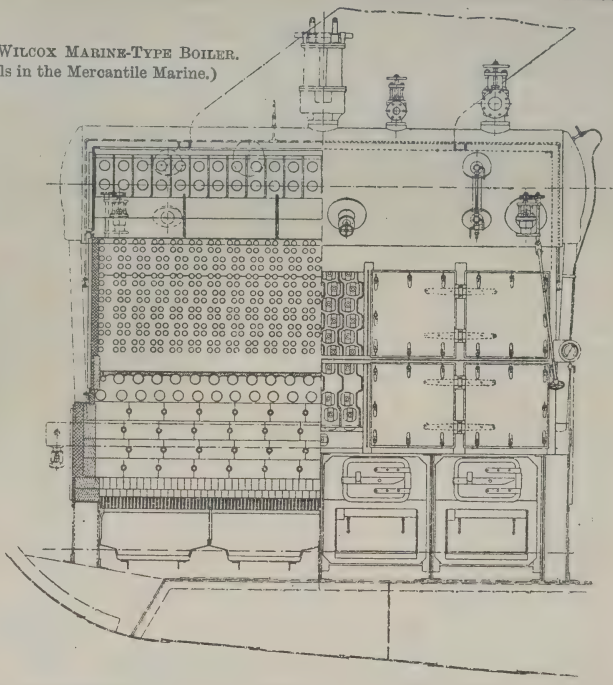


FIG. 26.

COMPARATIVE SIZES, WEIGHTS, AND SPACES OF CYLINDRICAL AND BABCOCK AND WILCOX BOILERS.

Type of Ship.	Intermediate Passenger Steamer.		Large Cargo Liner.		Large Combined Passenger and Cargo Liner.		Large Intermediate Atlantic Liner.			Large Fast Atlantic Liner.			Large Fast Atlantic Liner.	
Estimated steam production per hour from feed at 150°F. 200 lb.	75,000		112,500		140,000		240,000			750,000			1,000,000	
Estimated steam per i.h.p. per hour for all purposes	15		15		14		15			15			14·3	
Equivalent horse-power	5,000		7,500		10,000		16,000			50,000			70,000	
Type of boiler	Cylindrical	Babcock	Cylindrical	Babcock	Cylindrical	Babcock	Cylindrical	Babcock		Cylindrical	Babcock	Babcock alternative	Cylindrical	Babcock
Heating surface, sq. ft.	13,300	16,370	21,750	25,850	26,500	32,515	52,150	57,810	66,200	146,000	188,510	164,650	158,350	221,544
Grate area, sq. ft.	335	450	530	650	700	900	1,260	1,600	1,800	4,000	5,170	4,480	4,050	5,474
Approximate weight of boilers and water, and all mountings and fittings, but no funnels or uptakes, or stokehold accessories, tons	20	195	535	282	780	380	1,320	672	825	4,200	2,360	2,035	4,750	2,615
Draught	Howden	Assisted	Assisted	Assisted	Howden	Assisted	Natural	Natural	Natural	Assisted	Assisted	Assisted	Howden	Assisted
Floor space occupied by boiler-rooms, sq. ft.	1,850	1,585	3,420	2,280	3,885	3,068	7,275	5,700	5,920	20,268	20,268	13,460	18,285	16,115
Fore and aft length of boiler-rooms and transverse bunkers	56 ft.	44 ft.	72 ft.	51 ft.	77 ft.	71 ft.	7 ft.	106 ft.	117 ft.	321 ft.	321 ft.	252 ft.	—	—
Increase of H.S., per cent.	—	23·0	—	19·0	—	22·5	—	10·81	26·9	—	29·0	12·8	—	39·9
Increase of G.S., per cent.	—	34·3	—	22·5	—	28·5	—	27·0	42·8	—	29·15	12·0	—	35·3
Saving in weight, tons	—	225	—	303	—	400	—	648	495	—	1,840	2,165	—	2,135
Saving in floor space, per cent.	—	41·33	—	Entire forward stokehold	—	20 per cent. and longitudinal bulkheads now fitted 6 ft. 6 in. from sides	—	Entire forward stokehold	10 ft. saving in length and longitudinal bulkheads 7 ft. in from side adopted	—	Existing spaces used to instal much larger boilers	Longitudinal bulkheads installed	—	11·63
Saving in fore and aft length	—	12 ft.	—	About 27 ft.	—	6 ft.	—	21 ft.	—	—	—	69 ft.	—	53 ft.

Water-Tube Boilers—Express Type.

The small tube or express type of water-tube boilers principally adopted in British naval practice are the Yarrow, the White Foster, and the Thornycroft type (figs. 27, 28). The tubes of all these boilers are from 1 in. to 1½ in. external diameter, and generally the two rows next the fire are at least ⅛ in. larger in diameter and one wire gauge thicker.

The White Foster boiler has a similar arrangement of drums, casings, and furnace to that of the Yarrow type. The tubes, however, are bent in such a way that any one can be withdrawn and received through the manholes in the upper steam drum when required.

The modern Thornycroft boilers have one upper steam drum and two lower water drums, and are suitable for burning oil and coal, separately or combined.

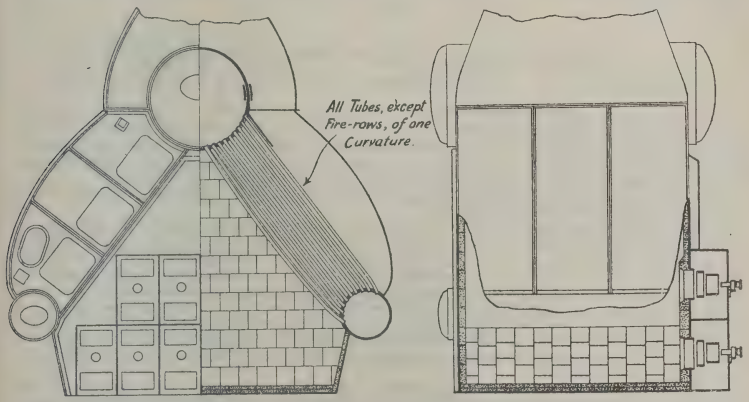


FIG. 27. FIG. 28.

The Thornycroft Boiler.
(Oil Fuel Burning.)

The tubes are straight except for a slight curve at the lower end where they enter the water drums. The tubes can be inspected throughout the whole of their length by holding a light in the lower barrel. The lower water pockets being cylindrical can be made of solid drawn steel, thus eliminating possibilities of leakage and also making a lighter and stronger construction. The tubes of any one diameter are all curved to the same radius, so that any tube will do for either row, which greatly simplifies the spares. This also allows of the lower drums being made smaller, thus saving weight.

The Yarrow Water-Tube Boiler with Superheater.

Figs. 29 and 30, page 2021, show this boiler, which consists of a top steam collector, as usual, and two lower water pockets. On the left-hand side is the superheater, and on this side of the boiler there are fewer rows of generator tubes than on the other side, where there is no superheater, it being thought desirable that the total heating surface and the resistance to the gases on both sides of the boiler should be approximately the same. In one of these boilers with a total heating surface of 6,700 sq. ft., 1,265 sq. ft. consisted of superheating surface; the total heating surface on the superheater side of the boiler being 3,453 sq. ft., and on the other side 3,247 sq. ft.

The superheater consists of a number of U tubes expanded into two longitudinal collectors, small doors being fitted so that access can be obtained to the tubes when required. The leading feature of the arrangement is that the superheater is placed on one side of the boiler only, and a damper is fitted in the up-take on the same side. If this damper is closed the whole of the gases are deflected towards the opposite side of the boiler, and no heated gases pass the superheater, the object being that if the main engines should be suddenly eased or stopped, or when raising steam, the superheater may be shut off, so as to prevent the tubes being damaged, or the steam being superheated to an excessive extent, owing to there not being sufficient circulation of steam. In this way one objection to the introduction of superheating for marine installations is overcome.

A further advantage of the arrangement is that, when the consumption of steam is suddenly reduced or stopped, not only does the damper prevent the superheater tubes from being burnt, but it also greatly diminishes the output of the boiler at the time when a reduced supply of steam is wanted, because only about one-half of the heating surface comes into contact with the hot gases. To avoid the possibility of the damper getting distorted through over-heating, it is provided with a hollow spindle, to which air is admitted and which passes from thence between the two plates of the damper, escaping at the edge, and thus keeping the damper cool. This arrangement of damper has proved thoroughly successful under the most trying conditions.

At the maximum rate of evaporation with the damper open, namely, when burning 1·237 lb. of oil per square foot of heating surface per hour, the degree of superheat was 93·5° F.; 14·6 lbs. of water were evaporated per lb. of oil per hour, with a steam pressure of 242 lbs.

The results of other experiments indicate that in a properly designed boiler of the type described, it is possible to burn, without injury to the boiler, 2 lbs. of oil per square foot of heating surface per hour.

The Clarke-Chapman Marine Water-Tube Boiler.

(*Woodeson's Patent.*)

The 'Woodeson' patent marine water-tube boiler, as shown by fig. 31, page 2022, is manufactured by Messrs. Clarke, Chapman & Co. Ltd., Gateshead-on-Tyne, and consists of two sections, each comprising steam drum, water drum, and a number of groups of tubes expanded into same; these tubes are nearly vertical and perfectly straight, and manholes are arranged on steam drums immediately over each group through which any tube can be withdrawn.

The bottom drums are absolutely hanging so that expansion and contraction can take place without causing any damage to the boiler.

In the design of the 'Woodeson' boiler, a special feature is the ease of access for purposes of examination or repairs, the time which has to be expended on the same being practically reduced to a minimum; thus in a boiler of say 6,100 square feet of heating surface, containing 456 tubes, the only work to be done to thoroughly examine the insides of this large number of tubes for their total length is the removal of the manhole doors on one end of each bottom drum, and one manhole door off each of the three steam drums: thus access can be gained to every tube, and these being perfectly straight they can be thoroughly examined for the whole of their length. The removing and replacing of the manhole doors can be done by an ordinary fireman, no skilled mechanic or complicated tools being required. There is an entire absence of screwed joints in the boiler.

Each tube being nearly vertical and perfectly straight and entering the steam drum direct without intervention of any headers, ensures a perfect steam release, and so adds to the efficiency of the boiler, as there are no sharp turns to retard the flow of the steam globules to the steam space. Also, deposits are not retained in the tubes, but are collected in the large mud-drums; thus over-heating and destruction of tubes are reduced to a minimum.

The superheater consists of a number of mild-steel tube boxes, into which are expanded the tubes, which are bent to L shape and belled out.

The superheaters are provided with the necessary fittings, including specially designed by-pass valve for regulating the degree of superheat, also a large drain valve in the lowest part of the superheater for draining.

The Niclausse Boiler.

This boiler is principally adopted by the French Navy, though it is used by 15 other navies, there being now upwards of 2,000,000 h.p. afloat in the Naval and the Mercantile Marine Services.

Fig. 32, page 2023, shows the most modern design of this type of boiler, as applied to a large French cruiser of 35,000 h.p. in course of construction. It is the high duty type referred to in the 'Engineer' of March 13, 1914, and the Institution of Mechanical Engineers' Journal of July 1914. This boiler is described on page 1432 ('Water-Tube Boilers for Land Service').

The tubes are either 84 or 60 mm. diameter and the boiler is therefore of the large tube type, but the characteristic feature of the Niclausse inner tube gives it all the advantages of the small tube type. Its special features comprise a considerable saving of space and deadweight, and in respect of the former it will be noticed that the boilers can be located back to back and adjacent to each other, all access being entirely from the front.

Marine boilers of this type are fired by either oil or coal, or both, and excellent results are claimed by the makers, who lay more stress on average than on test efficiencies. Other features are great flexibility and overload, the cleaning facilities provided, and the ability to quickly effect the withdrawal and replacement of defective tubes, which can be done within an hour from time of stop to restart under full steaming power.

The Standard Water-Tube Boilers adopted for the United States Emergency Wooden Steamships are described and illustrated (from *International Marine Engineering*) in 'Engineering,' Nov. 9, 1917.

THERE ARE AFLOAT TO-DAY

'NICLAUSSE' BOILERS

AGGREGATING OVER

2,000,000 Horse Power.

The 'Niclausse' is pre-eminently the Boiler for the Merchant Service, as it is for the Naval Services, especially if Oil Fuel is used, because:—

(1) It saves weight and space and height.

(2) No Boiler gives so high an average efficiency in ordinary service over long periods.

(3) It is not subject to the troubles experienced with those types having Headers or Drums at each end of Tubes expanded into them.

(4) It gives excellent results in Drifters, Trawlers, Tugboats, River and Lake Steamers, Tramps, Liners, and all classes of War Ships.

Installations on 35 Seine Steamers, fitted between 1895 and 1900, have since aggregated over Nine Million Miles without the changing of a single tube, or suffering any delay due to boiler troubles.

British, French and Italian War Ships, fitted with Niclausse Boilers, even though in some cases fifteen to twenty years old, are still giving excellent results in active service.

THE BRITISH NICLAUSSE BOILER CO. LIMITED,

CLOCK HOUSE, ARUNDEL STREET, STRAND, LONDON, W.C. 2

YARROW

& CO. LTD.

Yarrow's Patent Water Tube Boilers, with or without Yarrow's Patent Superheater. For both Marine and Land Installations.

Cargo & Fast Passenger Vessels propelled by Steam Engines, Turbines or Diesel Engines.

Shallow-draught River Steamers, propelled by stern-wheels or screws working in tunnels, fitted with Yarrow's Patent Balanced Flap aft, by which means a considerable increase of speed is secured without additional power or cost. . . . . .

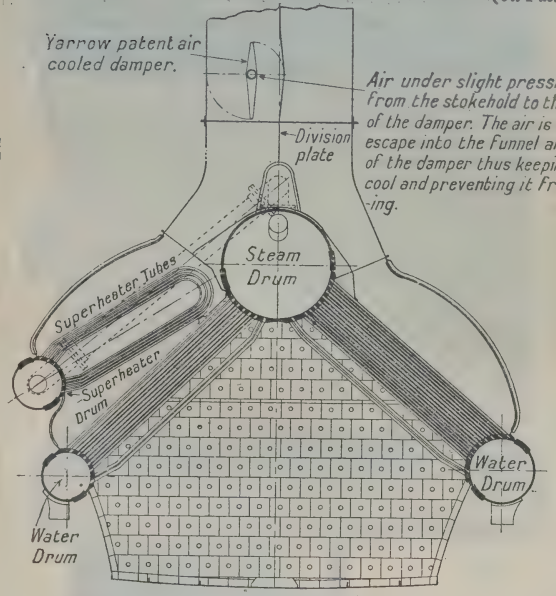
GLASGOW

(Formerly of POPLAR, LONDON.)

F. 2021


THE YARROW PATENT WATER-TUBE BOILER WITH SUPERHEATER AND CONTROL DAMPER.

(Oil Fuel Burning.)



Transverse Sectional Elevation.

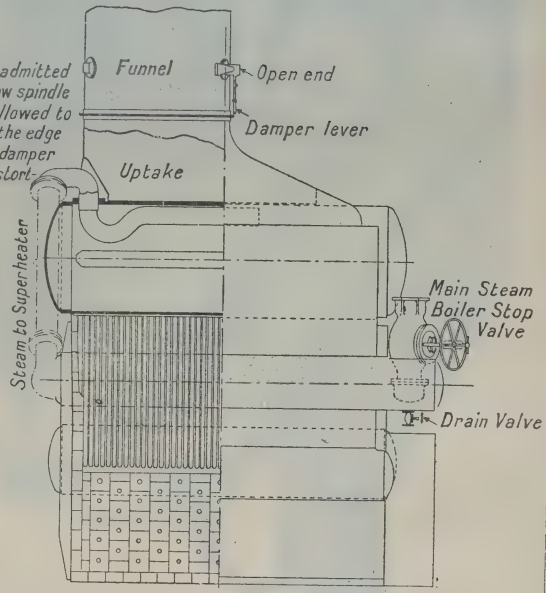FIG. 29.



Half Side Section. Half Side Elevation.

FIG. 30

THE CLARKE-CHAPMAN MARINE WATER-TUBE BOILER.
(*Woodeson's Patent.*)

FIG. 31.

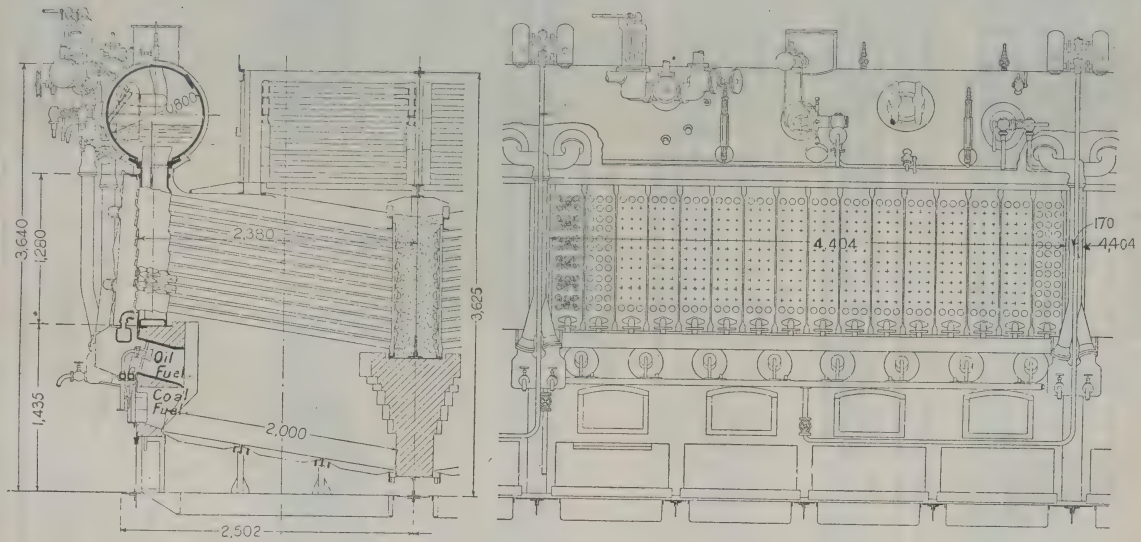

3,640
1,280
1,435
2,380
3,625
Oil Fuel
Coal Fuel
2,000
2,502
4,404
170
4,404

FIG. 32.

Life of Marine Boilers.

The life of a marine boiler depends to a certain extent on the care and attention bestowed on it during the first few months of its existence, provided that the plates have been properly treated at the building of the boiler—that is, all mill scale removed and the plates kept dry and free from atmospheric corrosion. The mill scale, if not removed, has a very irritant action on the clean metal of the boiler, and is most hurtful to the plates if allowed to remain on them. The greatest care and attention is needed for the first period of working of new boilers to keep the new metal free from corrosion. It is advisable on the first voyage to put into the boilers before closing them up ; 5 lbs. of lime per 1,000 i.h.p., and afterwards for a period of about six days 2 lbs. of lime per day per 1,000 i.p.h. should be passed through the hotwell as milk of lime, and 1 lb. of lime per day per 1,000 i.h.p. during the remainder of the voyage.

Rules and Regulations with reference to Boilers of Steamships.

Standard Conditions for the Design and Construction of Marine Boilers.

A set of rules has been framed and agreed to by representatives of the Board of Trade, Lloyd's Register of Shipping, the British Corporation for the Survey and Registry of Shipping, and the Bureau Veritas International Registry of Shipping, and recommended for favourable consideration and adoption. An abstract of these rules is given on pages 1416–1424.

Boiler Casings.

The casings of both the Babcock & Wilcox and Yarrow boilers are constructed of light steel plates and angles, and designed to avoid distortion due to the high temperature of the gases with which they are in contact. In way of the furnaces the casings are lined with brickwork, other parts of the casings are lined with asbestos millboard or some other non-conductor, to prevent radiation of heat to the stokeholds. In the Babcock & Wilcox type of boiler, wide use is made of 'Cellinsulate,' a special form of non-conductor which possesses greater resistance to heat transmission per unit of weight than any other form of lagging.

MARINE SUPERHEATERS.

The Robinson Superheater.

The 'Robinson' marine smoketube superheater, fig. 33 (2-furnace boiler), is composed of a number of solid-drawn mild steel pipes, manufactured from best Swedish steel billets, and headers or steam collectors, into the sides of which the ends of the superheating pipes are expanded.

In applying this superheater to a 3-furnace marine boiler, the headers or steam collectors

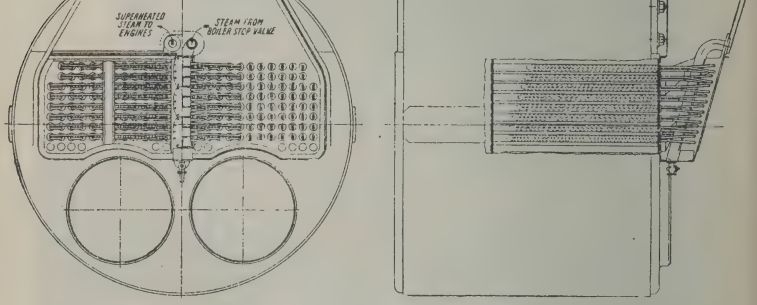


Fig. 33.—The Robinson Superheater.

are placed vertically in front of the boiler in the space between the inner row of smoke-tubes of the wing combustion chambers and the outer row of smoketubes in the centre combustion chamber.

The headers are secured to the boiler by means of suitable flanges, and are divided into a number of separate transverse compartments, several of which receive and distribute saturated

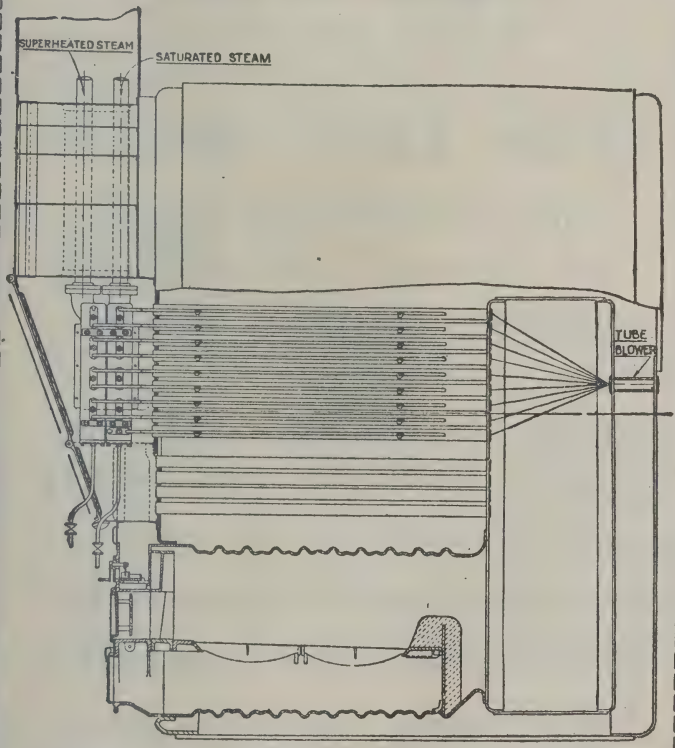
MARINE & LOCOMOTIVE SUPERHEATERS LIMITED

TRAFFORD PARK, MANCHESTER.

195 Strand, London, W.C. 2.

Telephone No. : City 3263.

Exclusive British Proprietors of the Schmidt Patents.



STANDARD "M.L.S." SCHMIDT TYPE MARINE SUPERHEATER

"M.L.S." SCHMIDT TYPE

—MARINE—

SUPERHEATERS

supplied from our
Trafford Park Works
aggregate

Over 1,500 Boilers

equal to 1,500,000 S.H.P.
for Geared Turbines and
Reciprocating Engines

COAL ECONOMY - 12%-20%

2,800 VESSELS EQUIPPED

Marine & Locomotive Superheaters Ltd.

WORKS:
TRAFFORD PARK, MANCHESTER

HEAD OFFICE:
195 STRAND, LONDON, W.C. 2.

steam from the main saturated steam pipe to the superheating pipes, and the remainder of these compartments receive the superheated steam from the superheating pipes and distribute the same to the steam pipes leading to the steam chest of the engine cylinders. The superheated and saturated steam compartments are open at the front of the header to permit of the header being examined internally, for the introduction of the tube expanders into the ends of the superheating pipes, for expanding the same into holes in the sides of the header and also for removing any accumulation of incrustation which may be deposited in the header. The superheater pipes are also readily disconnected from the header by means of suitable tools, which are inserted through the front of the header. The front of the header is made steam tight by means of cover plates, secured with a number of studs and nuts.

The advantages claimed for the ' Robinson ' marine superheater are that it is of simple and substantial design and free from a multiplicity of parts. The steam compartments in the header being accessible, allow of ready examination, cleaning, and renewal of superheating pipes, and facilitate the production of good sound castings. Copper joints, rings, bridge bars, studs and nuts for securing the elements to the header are dispensed with.

Some tests have shown a saving of over 20 per cent. in coal consumption, but average conditions would indicate 10 per cent. saving of coal for 200° F. superheat.

The ' North Eastern ' Superheater.

(*The North Eastern Marine Engineering Co. Ltd.*)

This superheater is specially designed for the Scotch (or cylindrical) type of boiler, this type being the universally adopted boiler for the mercantile marine.

The superheater, fig. 34, consists of headers arranged in pairs between the nests of boiler tubes. These headers, which are fitted in the smoke box and attached to the boiler end, comprise saturated steam headers and superheated steam headers, the saturated being connected by pipes to the boiler stop valve, and the superheated by pipes, so as to deliver superheated steam to the engines.

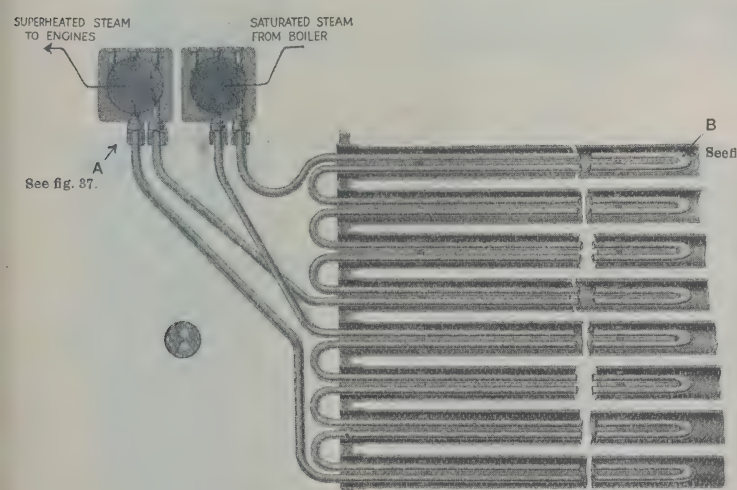


Fig. 34.—The ' North Eastern ' Superheater.

The superheater tubes, or elements, are connected between the saturated and superheated headers and consist of a series of small steel tubes of ' U ' form carried into, and out of the boiler tubes. A number of these ' U ' tubes, generally about four, are coupled in series between a saturated and its corresponding superheated steam header.

Where the ends of the elements project into the boiler tubes, and are subject to intense heat, the ends of each pair of tubes are fitted with a special steel cap, fig. 35, welded to the tubes by oxy-acetylene welding. The end of the element where joining the header, fig. 37, is fitted with a

THE 'NORTH EASTERN' SUPERHEATER

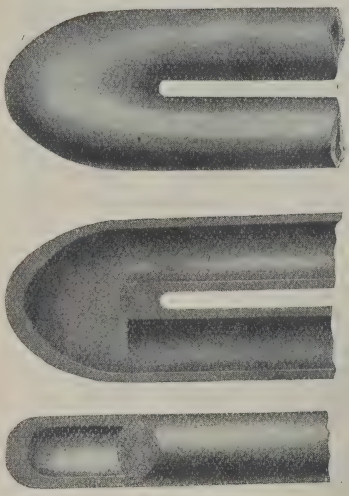


FIG. 35.

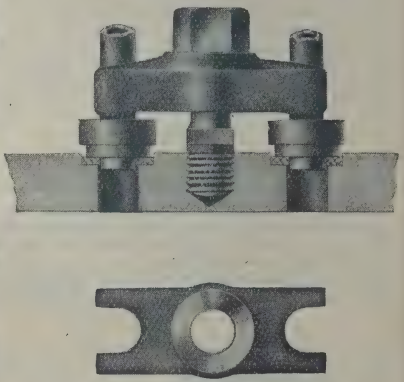


FIG. 37.

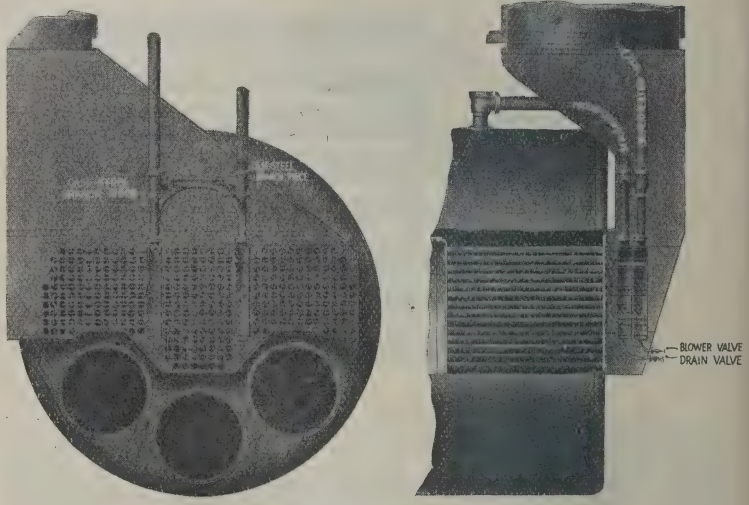


FIG. 36.

The North Eastern Marine Engineering Company, Ltd.,

WALLSEND-ON-TYNE and at SUNDERLAND.

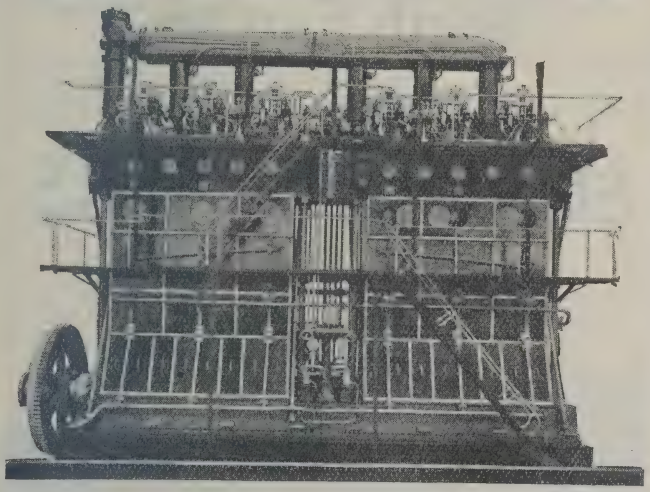
Head Office & Works: Wallsend.
Tel.: 'News, Wallsend.'

London Office: 22 Billiter St., E.C.3.
Tel.: 'Nemerio, Fen, London.'

Sunderland Works.
Tel.: 'News, Sunderland.'

Liverpool Office:
529 Tower Building, Water St.
Tel.: 'Skilful, Liverpool.'

Engineers, Forge Masters, Founders, Coppersmiths.



1,500 H.P. 'WERKSPOOR' MARINE DIESEL ENGINE.
Made at our Wallsend Works.

Designers, Builders and Repairers of Reciprocating and Turbine Engines and Boilers for all classes of vessels. Engines and Boilers or Complete Sets of Machinery constructed for Export : : and Fitting out of same supervised if desired. : :

Makers of 'North Eastern Werkspoor' Diesel Oil Engine; also Makers of Engine Room Auxiliaries.

Propeller Shafts and Forgings of all descriptions in rough or finished state.
Special facilities for the manufacture of Superheaters for Marine Boilers.

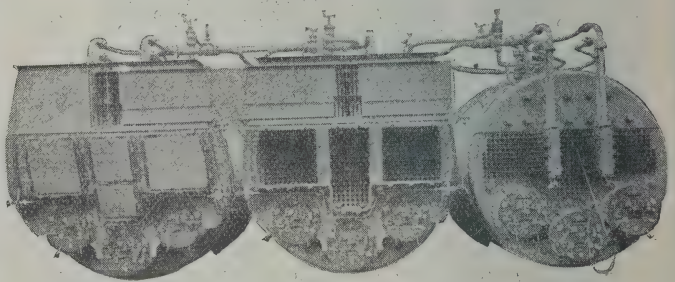
The North Eastern Marine Engineering Company, Ltd.,

WALLSEND-ON-TYNE and at SUNDERLAND.
(Head Office).

Manufacturers of

'North Eastern' SMOKE-TUBE SUPERHEATERS

FOR MARINE BOILERS.



THREE MARINE BOILERS ARRANGED FOR COAL OR OIL FIRING IN CONJUNCTION WITH HOWDEN'S FORCED DRAUGHT, AND FITTED WITH 'NORTH EASTERN' SMOKE-TUBE SUPERHEATERS.

F. 2027

special form of joint, consisting of a collar fixed to the end of the tube, which collar fits into a recess in the header where a steam-tight joint is made with a jointing ring. The collars are held in place by means of special steel dogs or clamps, each clamp securing a pair of collars, and screwed down to the header by means of a stud and nut.

Sugden Superheaters for Marine Boilers.

(T. Sugden, Ltd., 180 Fleet Street, London, E.C. 4.)

The Smoke Tube Superheater.

The Smoke Tube Superheater is more generally adopted than any other type, and special advantages are claimed for the arrangement and details of construction adopted.

The superheaters are constructed of mild steel throughout, and are therefore quite free from explosive and fracture risks which are incident to the use of cast-iron headers.

The elements are formed as loops of solid drawn steel tube, with the spear ends welded and reinforced, and the ends are secured to the headers by loose flange blocks, and fixed by two studs of substantial proportions.

Messrs. Sugden claim that the connection by loose flange blocks, which they have adopted, has overcome all the difficulties which have been experienced in making satisfactory and lasting joints between the headers and the tubes, and that the cost and trouble of continuously re-making these joints has been entirely overcome.

With this superheater, temperatures from 600° to 700° F. can be obtained.

The Smoke-Box Superheater.

The Sugden Smoke-Box Superheater, fig. 38, is fixed in the smoke-box, immediately below the air heater (if the boiler is provided with an air heater).

The headers are placed in a convenient position outside the smoke-box casing, immediately above the door. The elements are formed in coils, and the end of each tube is expanded into the header boxes and bell-mouthed.

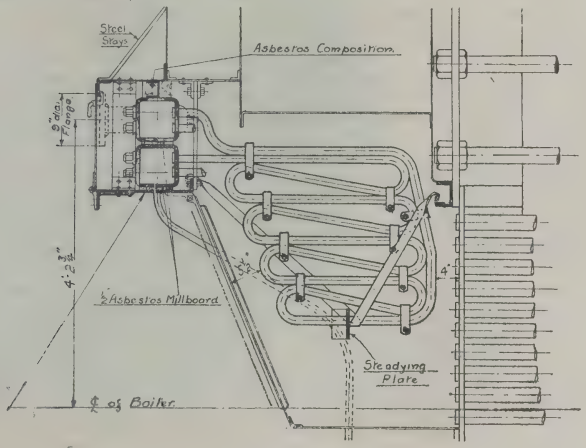


FIG. 38.—Sugden Marine Superheater (smoke-box type).

The coils hang vertical from the headers between the smoke-tubes, and are arranged so that they do not restrict access to the tubes for inspection or renewal.

The Up-take Superheater.

A special Up-take Superheater for coasting steamers and trawlers, and for the supply of steam at a moderate superheat, is also made by Messrs. Sugden.

The headers are placed across the front of the boiler shell, and the tubes are expanded into the headers.

The coils are arranged in loops which hang vertical from the headers and terminate above

the top row of the boiler smoke-tubes, and therefore offer no restriction to access for inspection, cleaning, or renewal of the boiler smoke-tubes.

For conditions where a moderate degree of superheat is required, the up-take design of superheater is very convenient. It requires little alteration to an existing boiler, and can be readily fitted at a very low cost.

The expanded method adopted for fixing the tubes of marine superheaters is one which Messrs. Sugden have successfully used for twenty years in connection with their Standard Down-take Superheater for Lancashire boilers, and Messrs. Sugden claim that general experience has proved that it is the simplest and most reliable method of making steam-tight connections for boilers and superheaters.

Oil Fuel.

The advantages of fuel oil as compared with coal are as follows :—

(1) Reduction in weight and space occupied by the boiler installation.
(2) Increased evaporation of water per lb. of fuel in the ratio of about 14 : 9 as compared with good quality coal.
(3) Utilisation of remote parts of the ship and of constricted spaces, such as the double bottoms, for stowage of fuel.
(4) Less manual labour and greater rapidity in stowage.
(5) No reduction in speed due to cleaning fires, difficulty in trimming coal from remote bunkers, or exhaustion of stokers.
(6) Reduced wages bill for boiler room staff, no trimmers, and comparatively few attendants for the burners being required.
(7) A prompt and effective control of the steam output due to the mechanical supply of the fuel, permitting of more rapid changes of speed than is the case with coal.
(8) Absence of smoke if air supply is properly controlled.
(9) No trouble due to accumulation of ashes ; ash expellers or ejectors are dispensed with.
(10) In the case of naval vessels, fueling can readily be carried on at sea.

Both water-tube and cylindrical boilers are now adapted for burning oil fuel, the direct-pressure system being the one most generally in use for naval and mercantile service.

Pressure pumps fitted in the boiler rooms have suctions from the oil tanks, and discharge at a pressure of from 50 to 150 lbs. per sq. in. through cold filters having fine mesh wire gauze grids; from thence the oil passes through a tubular heater, the oil being inside the tubes and heating steam outside. The temperature of the oil is raised to about 150° Fah. in the heater, and before finally reaching the burner it is passed through a second, or so-called, hot filter.

It is necessary to heat the oil in order to reduce its viscosity so that it can be atomised and forced through the fine passages of the burner, which are so designed as to give it a rapid whirling effect due to centrifugal force when liberated through tangential passages at the lip of the burner, and thus reduce it to a fine spray of conical formation. The air supply to the burner passes through directing slots cut in a steel truncated cone, 12 to 15 ins. diameter and about 16 ins. long. The burner is fitted at the centre of the entrance to the cone, and the admixture of the air passing through the slots with the oil spray from the burner produces almost perfect combustion.

In the case of naval vessels the closed stokehold system is adopted, the air pressure in the boiler rooms being controlled to suit the output of the burners. For cylindrical boilers in merchant steamers the Wallsend-Howden system (page 1820) with open stokeholds is now in extensive use. The arrangement of burners and air cones is similar to that described above, but the air supply is heated by the waste gases, as in the ordinary Howden forced draught system (page 1793) applied to coal burning. Each burner can pass from 400 to 600 lbs. of oil per hour, and it is possible to burn about 13 lbs. per cubic foot of combustion chamber. The area of the furnace front limits the number of burners which can be fitted, and it is desirable that the volume of the combustion chamber should be as large as possible.

(See also pages 1807, 2057.)

EVAPORATORS.

For Fresh Feed Make-up Water for Boilers.*

With the high pressures of steam (usually from 150 to 200 lbs. per square inch) now carried in steam boilers for use with modern triple-expansion and other engines, it is found necessary to provide fresh feed-water for the make-up, in order to prevent the great deposit of scale on the heating surfaces which results from these high temperatures.

* Also used in connection with distilling condensers for producing fresh drinking water instead of the old way of distilling from the donkey boiler.

The quantity of auxiliary feed-water required amounts to from 1 to 5 tons per 24 hours per 1,000 h.p.

To provide this, evaporators have come into general use.

In these evaporators the sea water is boiled by the heat from steam passing through tubes

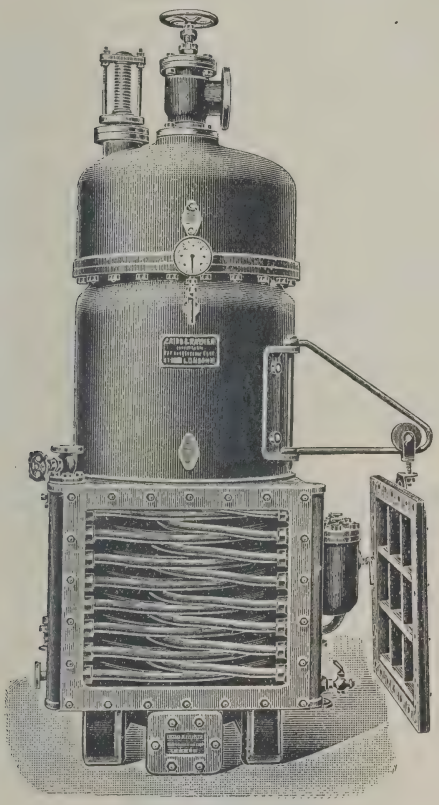


FIG. 39.

immersed in the salt water. The condensed steam from these tubes is usually drained back to the condenser or hot-well, and so back to the boiler, and the secondary steam produced from the sea water is led to the main condenser, and is there condensed along with the exhaust steam from the engines, and thus delivered to the boiler as fresh feed-water.

The scale formerly left in the boilers is deposited in the evaporators, which are arranged so as to be easily cleaned when necessary.

The Caird and Rayner Automatic Evaporator.

(Caird & Rayner, Commercial Road, London.)

In this evaporator, shown in general view by fig. 39, page 2029, live steam is led from the boilers through a series of coils of solid-drawn copper tube. Sea water being admitted to surround the coils, and automatically maintained at a constant level, is by the heat of the steam within them converted into vapour, which rises to the upper part of the evaporator, and is led hence to the condenser, where, mingling with the condensed steam from the engines, it provides the required auxiliary feed in the form of distilled water, which is pumped into the boilers by the ordinary feed pump.

The form of the heating coils is a very special feature of this evaporator, as by this their self-cleaning property is secured. The helical form gives them greater elasticity, as they expand and contract with the varying temperatures to which they are subjected in working, and especially so each time the brine is blown out and a fresh charge of cooler water admitted. This action causes the scale, which is naturally deposited on the coils, to be thrown off from time to time, and fall to the bottom of the evaporator, from which it is easily removed. This self-cleaning property of the coils, by which the heating surface is kept practically clean, secures the continued efficiency of the evaporator. The ends of the coils are connected to pockets on each side close to the front of the evaporator, so that the door can be removed, and all the joints that are subjected to primary steam pressure can be tested in full view. The pockets have suitable divisions cast in them to regulate the flow of steam through the coils suitable for the pressure of steam to be used.

An automatic feed ensures that the level of the water to be evaporated is maintained at a constant level, and also that it shall be impossible that, through any accidental neglect or carelessness, the sea water can accumulate so as to fill the evaporator and pass over into the condenser.

A series of baffle plates, specially arranged in the upper part of the shell, ensures that no priming shall take place.

In ships where there are many auxiliary engines at work, the exhaust steam from them is economically used in these evaporators on a system patented by Caird and Rayner, which has been adopted by the British Admiralty in their ships.

The exhaust steam is maintained at a pressure of about 25 lbs. by a loaded valve on the main exhaust pipe, so that any excess over that pressure can pass direct to the auxiliary condenser.

By this arrangement distilled water is obtained without any expenditure of fuel whatever.

The evaporators are usually worked under a vacuum into the auxiliary condenser, the degree of vacuum in the evaporator being regulated by a specially-designed control valve.

The evaporators will produce from 1 up to 100 tons of fresh water per 24 hours, according to size.

The Row Evaporator.

In the Row Patent Evaporator (*Royles, Ltd., Irlam, near Manchester*), the peculiar indented tube is a distinctive element in its construction. It is found that this form of tube

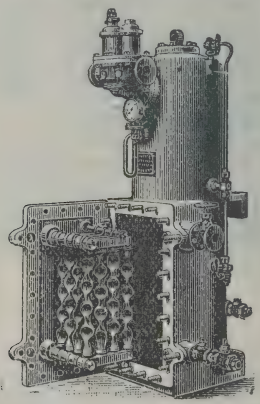


FIG. 40.—The Row Evaporator.

surface casts its scale very readily and is otherwise highly efficient as an evaporating surface. Fig. 40 shows one of these evaporators open for cleaning. All the tubes are erected

upon the inside surface of the door, so that when this latter is opened, which is done without breaking any pipe joints, all the tube surface is accessible for cleaning. The evaporator is fitted with the usual complement of fittings, and is very compact and efficient. It is made in seven sizes, to produce from 2½ to 30 tons per 24 hours.

The Weir Vertical Type Evaporator.

This evaporator is of the vertical type. The shell and dome are of the best close-grained cast iron. The heating surface is formed of heavy solid-drawn copper tubes attached to the inlet and outlet chambers by means of hollow conical couplings. The tube space is separated from the steam space by a deflector. The arrangement of this deflector allows the steam to rise, but throws down the water so that it is returned again to the water space. With this arrangement it is almost impossible to make the evaporator prime under anything like reasonable limits. The usual mountings consist of steam inlet valve, vapour outlet valve, feed check valve, brine valve, drain valve, and coupling to hot-well, blow-off cock, safety valve, gauge glass fittings, pressure gauge, compound gauge, salinometer valve, and gunmetal feed pump to work off the main engine levers.

Heating Tubes.—In the latest designs the heating tubes are arranged in elements, each element consisting of a single tube coil with special hollow couplings on inlet and outlet ends in the same plane. These hollow couplings pass through a steam chamber cast on the back or side of the evaporator, and are secured in place from the outside by means of a cap nut on the ends of each coupling. The outlet opening from the tubes is of smaller diameter than the inlet, with the exception of that in the lowest or drain tube, which is the same area throughout, and through which any steam passing through the smaller outlets from the tubes is again returned through the evaporator along with the water of condensation and drained to the hot-well. By this means the pressure in the stand-pipe chamber at the outlet end is always lower than in the chamber at the inlet end, and a constant current is kept up through all the tubes, thus preventing any accumulation of air and water.

Each element or tube can be taken out separately for cleaning, and in this way the cleaning can be more expeditiously and thoroughly done.

The arrangement also provides a means of keeping two or more elements as spares. These can be quickly substituted for elements requiring cleaning, and the evaporator set to work again while the dirty tubes are being scaled. The tube attachments are strong and substantially made, and are kept tight by screwing up from the outside against a strong shoulder on the inner portion of the coupling.

Automatic Feeding and Continuous Brining.—A water jet is so arranged as to induce the flow of brine from the evaporator and discharge the mixture overboard at any suitable level. Sea water at a sufficient pressure is obtained by a connection from the sanitary tank, which is placed at a height sufficient to give the necessary head. As the evaporator feed is now usually obtained from the same source, to permit of automatic feeding through a feed regulator, an effective and simple combination is obtained whereby the minimum of piping is required and the feed and brining arrangements may be made integral with the evaporator.

Condensers and Water Heaters.

The Weir 'Uniflux' Condenser.

This design of condenser introduced in 1909 has since become extensively adopted in this country for naval and high-class merchant steamers, and the high vacua attainable by its adoption when working in conjunction with the Weir 'Dual' type of combined wet and dry air pump has been an important factor in the improved efficiency of steam turbines.

The construction of the condenser introduces no novel features except as regards the pear-shape of shell which has been designed with the object of causing the exhaust steam to flow over the tubes at a uniform velocity without short circuiting, the steam inlet being arranged as far from the air-pump suction as possible.

The 'Dual' air-pump is of the beam type having one steam cylinder and two pump barrels, one pump for air and vapour and the other for water, air and vapour. Cold injection water is introduced at each stroke into the dry-air pump barrel to condense the vapour and cool the air, and in order to avoid the expansion of the air present in the water filling the clearance space of the dry pump at the moment of discharge the dry-air pump is arranged to discharge below the head valves of the wet-air pumps.

The combination of improved design of air-pump and condenser in conjunction with an increased supply of circulating water has resulted in a reduction of the condensing surface from 20 to 25 per cent. as compared with the condensing plant previously fitted.

The Weir Direct Contact Feed-Water Heater.

This system consists in taking a portion of the steam from the low-pressure receiver of the engine and utilising it to heat the feed water on its passage to the boiler. In actual practice on board ship, this steam is also supplemented by the exhaust from the auxiliary engines.

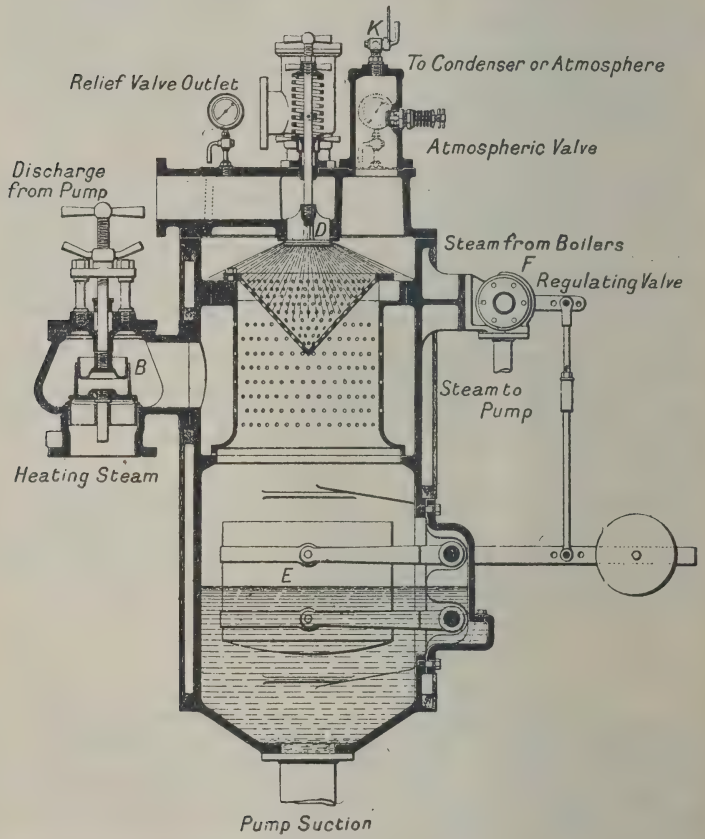


Fig. 41.

Fig. 41 shows a sectional view of the heater. The heating steam is taken from the low-pressure casing of the main engine, and the exhaust of the auxiliary engines is also led into the heater through the non-return valve B on the side of the apparatus. A perforated cylindrical waist piece forming an annular steam space round the heater, and surmounted by a conical spray piece, also perforated, is fitted to ensure the uniform mixing of the steam and water. A Weir direct-acting feed pump, or the main engine feed-pump, delivers the feed water into the heater

through the spring-loaded valve D on the cover. The feed water is forced through this valve in a thin sheet, and is instantly heated by contact with the steam. The water is further broken up into fine spray by passing through the conical spray piece, thereby bringing the greatest possible surface into contact with the steam. As the pressure in the heater is generally much less than that of the entering water, the effect of this lowering of the pressure, and sudden heating of the water, is to liberate the air in the water, and this is removed to the condenser, or to the atmosphere, by a small cock K on the air vessel placed on the top of the heater. (In the case of twin-screw

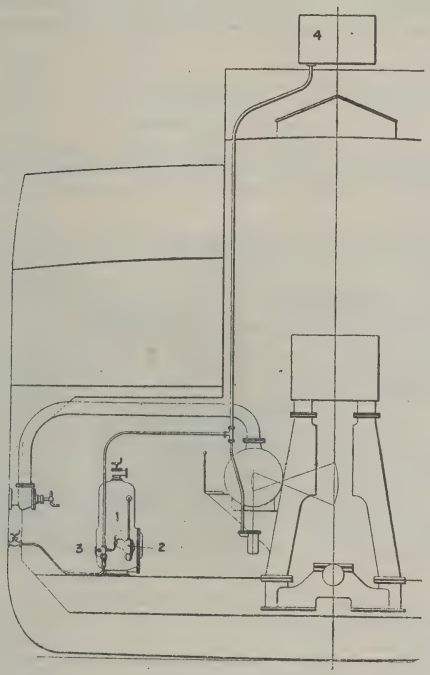


FIG. 42.—Arrangement on board ship of Evaporator with 'Weir' Feed Regulator and Brine Ejector.

1. Evaporator.
2. Feed Regulator.
3. Brine Ejector.
4. Sanitary Tank.

vessels fitted with one feed heater, the lever cock on the heater air dome is coupled up to both condensers by a T piece.) The feed water is thus rendered non-corrosive, and falls to the bottom of the heater at the boiling temperature corresponding to the pressure.

The combination, fig. 42, of the automatic regulating gear with the heater is a special feature of the Weir apparatus. The float E shown in the lower part of the heater is a pan, with water-tight bottom sides, but open on the top. It is suspended on two levers, so as to move up and down with a parallel motion; the top lever spindle is carried through the door at one end, and is balanced by a lever and weight. The float is always full of water, and the weight is adjusted to balance when one-half is immersed in water. The weight lever is connected by a rod to another

lever, which actuates the throttle valve F and controls the supply of steam to the pump drawing from the heater. When the water in the heater rises, the float is raised, and the throttle valve opened, and, when the water level is lowered, the float follows, and the valve is closed ; the level of the water is thus kept constant in the heater, and the pumps are completely filled with water.

When feed heaters are placed on the discharge side of the feed pump they are necessarily subjected to the boiler pressure, and must therefore be of a very substantial character. Such heaters are always of the surface type. Messrs. Weir have two special designs of heater of this class—the 'Multiflow' and the 'Uniflux.'

As affecting the engines, it is found that this system secures a fuel economy of from 5 to 8 per cent., according to the steam pressure carried, and the number of expansions in the engine.

The heater has been fitted by Messrs. G. & J. Weir Ltd. to over 4,000 vessels.

Bearings.

The Michell Bearing.

Michell Bearings (thrust and journal) are largely used in modern marine practice, and are manufactured by Michell Bearings, Ltd., Newcastle-on-Tyne. There are in the British Navy alone ships aggregating over ten million horse-power fitted with main thrust blocks of this type,

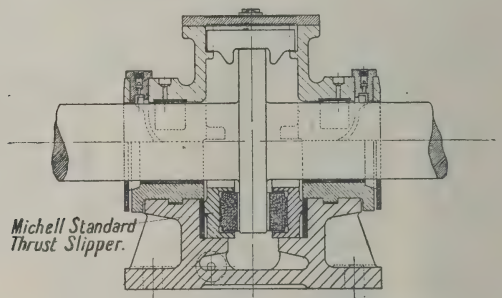


Fig. 43. Michell Slipper Type Thrust Bearing.

and in passenger and merchant ships the Michell Thrust Block is commonly used, both for reciprocating engines and steam turbines.

A standard thrust block used for light craft of all kinds is shown in fig. 43. This is self-lubricating, and can be arranged upon an extension of the engine-bed or upon a separate seating immediately aft of the crankshaft coupling. The oil level in the thrust block is usually kept just above the under-side of the shaft. The bearing surfaces are lubricated by the thrust collar carrying oil upon its edge, and the oil is scraped from this by the scraper at top, thus giving a continuous cascade of oil on the pads. The pads are so pivoted that a film of oil is led into the space between pad and thrust collar, and this oil film can withstand a heavy pressure. A feature of the bearing is that as the speed increases, the pressure per square inch can be increased.

Michell thrust blocks have a single collar shaft with a series of pivoted pads arranged forward and aft, and it will be noticed from the illustration that the pads need only be in the bottom half of the bearing. Thrust blocks, however, can be designed to utilise an existing multi-collar thrust shaft.

Large engines are usually fitted with a thrust block arranged for continuous oil circulation, and in these blocks the upper as well as the lower portion of the body sustains thrust load. Oil is introduced into the space behind the pads and compelled to travel radially across the thrust faces. This oil can be cooled and used over and over. In these blocks the upper and lower parts of the body are keyed together, and liners for adjustment are fitted behind each of the rings which carry the pads.

The Michell principle is also applied to journal bearings, and fig. 44 illustrates one as fitted to a marine oil engine. When speeds are high the ring lubrication is replaced by a continuous

HADFIELDS LTD.

Workmen Employed during the war, 15,000.

East Hecla and Hecla Works, SHEFFIELD.

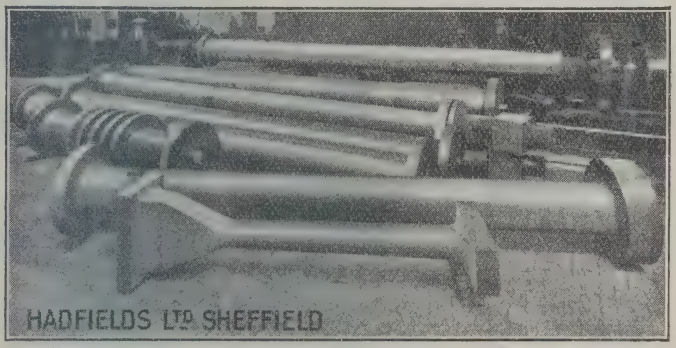
Works Area Over 200 Acres.

MANUFACTURERS OF

TRADE HECLA MARK

Steel Forgings

in the rough, rough machined or finished for Marine and other Engineering purposes, of any analysis, and to pass any required tests.



GROUP OF MARINE FORGINGS IN HADFIELD'S 'HECLA' STEEL.

STEEL CASTINGS

of every description up to 30 tons in weight.

HIGH SPEED AND OTHER TOOL STEELS of the first quality.

ERA

(TRADE MARK.)

SOLE MAKERS OF HADFIELD'S PATENT

Manganese Steel

THE SUPREME MATERIAL

for the Wearing Parts of Stone Breaking and Ore Crushing Machinery, Railway and Tramway Special Track-work, etc.

F. 2034

DOXFORD OPPOSED PISTON

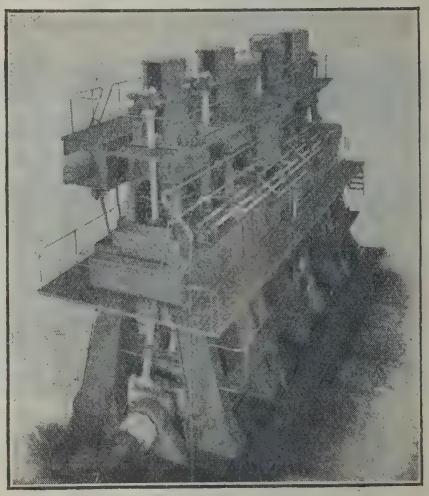
TWO-STROKE

MARINE OIL ENGINE

Solid Injection.—Perfect Combustion with Crude Oils.

(Patents Granted.)

3,000 H.P. FOUR-CYLINDER SINGLE-SCREW INSTALLATION. 22¾ in. Bore, 77 Revolutions, 12-KNOT TRIAL, in course of construction for *BRITISH OWNERS.*



Vessel 9,300 tons on 25½-draft, 10½-KNOT Voyage on 9 TONS Consumption per day of 24 hours.

WILLIAM DOXFORD & SONS, Ltd.,

Shipbuilders, Engineers and Government Contractors,

Tel. Add.: 'Doxford, Sunderland' SUNDERLAND. Tel. Nos.: 412, 413, 414, 1141.

F. 2035

supply of oil from a pump. It will be noticed that the oil is taken on to the shaft by means of a ring, and this ring is always kept in a central position, even if the ship pitches, as the central part of the oiling ring is guided by grooves in rollers arranged upon the shaft.

Considerable economy in length is effected by this bearing, as a pressure of about 500 lbs. per square inch projected journal area is satisfactorily carried at any speed.

The pivoting principle, upon which all Michell bearings work, ensures, perhaps, the nearest approach possible to perfection in lubrication. Astonishingly high pressures are quite safely

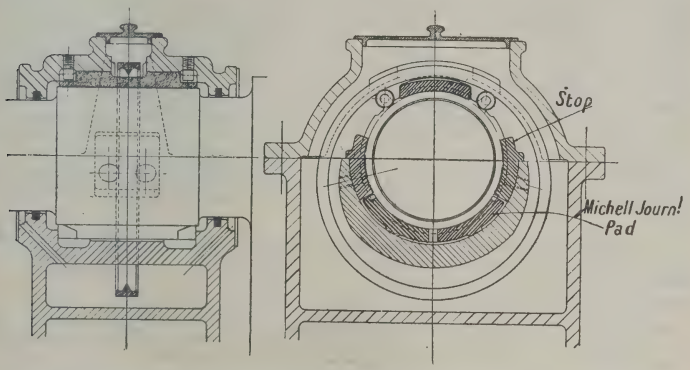


FIG. 44.—Michell Journal Bearing for Marine Oil Engine.

carried (under test as much as 5 tons per square inch has been successfully imposed), whilst speeds of any magnitude may be run by regulating the quantity of oil supplied. High speed is an advantage, inasmuch as oil film thickness increases with the speed.

MARINE DIESEL ENGINES.

Contributed by A. P. Chalkley, B.Sc., A.M.Inst.C.E.

Author of 'Diesel Engines for Land and Marine Work.'

Revised by James Thomson, M.I.N.A.

The Diesel engine as designed for marine work differs in no essential principle from the stationary type; with each manufacturing firm there are certain modifications and peculiarities of construction. On the whole the two-stroke-cycle single-acting engine is considered to have best prospects for the future, but for the very large engines for naval purposes the double-acting two-stroke-cycle motor is expected to give best results, whilst a number of firms still adhere to the four-stroke-cycle single-acting principle for moderate powers, with which type a majority of existing motor ships are fitted.

The superiority of the Diesel engine for marine work in certain cases is not entirely due to its fuel economy. This must always be an uncertain matter, dependent on the relative prices of the fuels. The consumption of oil with a Diesel marine engine is practically the same as for the stationary type, except that when the two-stroke-cycle motor is employed the efficiency is slightly lower. Generally speaking, with oil of a calorific value of about 18,000 **B.Th.U.** per lb. or 10,000 calories per kg. the fuel consumption for marine work may be taken as 0·4 to 0·5 lb. per b.h.p. hour, which is rather over than under estimated. Unlike reciprocating steam engines, and steam turbines, the larger Diesel engines possess practically no advantage over smaller ones. It is usually estimated that the weight of fuel consumed by a Diesel marine engine is $\frac{1}{2}$ to $\frac{1}{3}$ that required

for a vessel equipped with small reciprocating steam plant and about ⅓ for double-reduction geared turbines, making allowance for standby losses, etc., and it has been found that this estimate has been well borne out in practice, although owing to the difference in efficiency between large and small steam engines and turbines it cannot apply absolutely. There is, therefore, an economy of fuel costs by the employment of Diesel engines, as compared with steam, when the price of fuel oil is not more than 3 to 5 times that of coal, but a Diesel ship with the same bunker capacity of a steamship has a radius at least 3 times as great, and hence is able to take more ready advantage of buying fuel at the most economical port.

Among the most important advantages of the Diesel engine for marine work are the reduced space occupied by the propelling machinery and the smaller weight of the plant. This permits of greater cargo-carrying capacity, or a smaller vessel for the same cargo, with a corresponding reduction in the cost of the hull, although at the present time the cost of a Diesel engine is in excess of a steam engine and boiler plant. It has been estimated—and the estimate has been found nearly correct in practice—that a vessel equipped with Diesel engines has from 10 to 15 per cent. extra cargo-carrying capacity as compared with a steam engine, and this is materially increased if the amount of fuel carried is reckoned on the basis of the same radius in both cases, when considerable extra bunker space is rendered available for cargo in the Diesel ship. With special precautions, moreover, the fuel oil can easily be carried in the double bottom of the ship, which allows a further gain in space. In war vessels the advantage of the economy in fuel with Diesel engines will no doubt be utilised by increasing the possible radius, which may be taken at 4 times that of a steam vessel with geared turbines owing to the relative high economy at lower powers, this being a feature of the Diesel engine as compared particularly with the steam turbine.

In a Diesel ship the number of attendants in the engine room required is less than in a steam vessel, being usually in the neighbourhood of ⅔. Firemen are entirely dispensed with, the handling of fuel is easy, rapid, and clean, whilst the astern power is equal to the ahead, which is not the case in turbine vessels.

As a typical instance may be mentioned the motor tankship 'Juno' (5,050 tons d.w.), with two 1,100 h.p. Diesel engines, in which the engine-room staff consists of four engineers, three assistant engineers, three greasers, one donkey-man and one pump-man.

For the same speed a vessel equipped with Diesel engines usually requires slightly more power than when propelled by a steam engine for similar conditions, as the revolutions are too high for the most efficient propeller.

Types of Marine Diesel Engines.

There are three distinct types of Diesel marine engines, two of which have already been largely constructed and put into actual service, whilst of the third type several engines have been constructed, although none are yet installed in actual vessels. The first two are the single-acting engines of the four-stroke-cycle and two-stroke-cycle type respectively, whilst the third is the two-stroke-cycle double-acting engine. Four-stroke cycle double-acting engines have also been proposed for marine work, and they are occasionally employed for stationary purposes (horizontal type). The chief advantages of the four-stroke-cycle motor are its high efficiency and the long experience which has been gained with it for land work. The two-stroke-cycle single-acting engine has the advantage of reduced weight and space, simplicity in reversing arrangements and cheapness of manufacture. It necessitates the employment of scavenge pumps which reduce the overall efficiency of the motor. Larger powers can be developed in single cylinders, and although the limit is not yet certain, it is anticipated that 3,000 h.p. can be produced from a single cylinder. Up to the present 1,800 h.p. is the highest power that has been attained in a single-acting two-stroke-cycle motor per cylinder.

The reason for the employment of the double-acting two-stroke-cycle engines is to obtain the maximum power per cylinder, and engines have been built on this principle giving 2,750 b.h.p. per cylinder. The chief difficulty encountered with the double-acting engine is to get rid of the heat in the cylinder, and there is also the question of the most convenient method of operating the valves in the bottom cover of the cylinder. It is stated that these troubles have now been satisfactorily overcome.

As regards the two-stroke-cycle single-acting type, the chief difference in the design of different manufacturers, apart from details of the reversing gear, is in the method of the provision of the scavenge air. In some engines scavenge valves are employed, fitted in the cylinder cover, and through these the scavenge air enters the cylinder, whilst in other types ports are provided at the bottom of the cylinder usually extending half-way round the circumference, opposite the ports for the discharge of the exhaust, such as are always arranged in two-cycle engines. Scavenging through ports presents some difficulties in regard to cleaning out all parts of the cylinders

thoroughly, and various arrangements are employed to make it more efficacious, some of these being described later. With valves, the scavenging is excellent, but the valves must be large, and they add to the complication of reversing. The scavenging pumps usually work at a pressure of 3 to 6 lbs. per square inch, above atmosphere, and the power they absorb is generally about 8 to 10 per cent. of the output of the engine. The power developed from a single-acting two-stroke-cycle Diesel engine is about 1·5 to 1·75 times that from a corresponding four-stroke-cycle motor, and not twice as is sometimes supposed.

The question of reversing Diesel engines is not one of particular difficulty, the only requirement being a variation in the time of opening of the different valves. In the four-stroke-cycle engine this includes the exhaust valve, which is omitted in the two-stroke-cycle type, whilst if in the latter scavenge ports are provided, the matter is further simplified by the absence of scavenge valves. There are various methods of reversing, which, however, practically do not differ at all in principle, the arrangement being to alter the times of openings of the various valves relative to the crank shaft. In one arrangement which is commonly employed, a single cam shaft is provided on which are fixed two separate sets of cams, one for the ahead motion and one for the astern, each valve thus being capable of operation by either of the two cams. For reverse running the cam shaft can slide in a longitudinal direction, and this motion brings the astern set of cams underneath the levers operating the valves, so that the valves are thus set for going astern. Before the cam shaft can be moved, the rollers of the valve levers have to be moved clear of the cams in order to let them pass under.

A second method of reversing consists in having two separate cam shafts, on one of which the cams for ahead running are mounted, and on the other those for the reverse, and either cam shaft is set in a position for its cams to actuate the valve levers, according as it is required to run ahead or astern. There are various other means adopted for reversing, such as by a rotation of the cam shaft relative to the crank shaft, and utilising the same cams for both direction which necessitates special setting of these cams. In another design a combination of this method and the first is adopted, whilst there are certain other special arrangements, one of which is described later.

Burmeister & Wain Type.

The engine designed and constructed by Messrs. Burmeister & Wain, of Copenhagen, may be taken as a typical four-stroke-cycle marine Diesel motor. It is built with six or eight cylinders, according to the power, the engines of the 'Selandia' and several other boats having each eight cylinders, and developing about 1,200 to 1,300 i.h.p. at 140 revolutions per minute.

As is now common in most Diesel engines, and will, no doubt, be generally adopted in the future, crossheads with water-cooled guides and connecting rods are employed, which, although increasing the height, are of considerable advantage in dismantling and for facility of inspection. An enclosed crank chamber is used, but in front and back there are readily removable covers. The engine is not entirely self-contained, inasmuch as only the high-pressure stage of the air compressor for injection air is driven direct off the crank shaft. The low-pressure stage is separate, and driven direct by an oil engine, steam engine, or electric motor, as may be desired.

The engine may be considered as arranged in two sets of four cylinders, which is convenient for the placing of the valve gear, and manœuvring mechanism described later. The valves are fitted in the cylinder cover, as is generally the case, and each cylinder has a starting air valve, fuel inlet valve, exhaust valve, and an air inlet valve, besides a relief valve in the side of the cylinder. The cam shaft carrying the cams which operate the levers controlling the valves is not situated on a level with the top of the cylinders, as is common in many four-cycle engines, but at about half the height of the engine. Each of the valves, except the relief valve, has two separate cams for its control on the cam shaft, one for ahead and one for astern running. In order to reverse the engine, the valve levers are lifted and the cam shaft moved longitudinally a distance equal to the cam width, so that, on dropping the valve levers once more, they are now immediately above the astern cams and are in a position for running in the opposite direction. The sliding of the cam shaft is accomplished by means of a disc carried on it, which moves in a slotted drum on an auxiliary shaft, the slot slanting from left to right. The auxiliary shaft can be turned by means of an air motor controlled from the starting platform, and in turning the cam shaft moves to the left or right, according to the direction of rotation of the auxiliary shaft. The actual operation of the valves from the cams is carried out by having long hollow vertical rods, whose upward and downward motion causes the rocking levers at the top to actuate the valves. It may be mentioned that, contrary to usual practice, the injection valves open inwards towards the cylinders. The drive of the cam shaft is through helical gearing and a vertical intermediate shaft, direct from the crank shaft. Sometimes a direct gear drive is adopted.

The question of the number of fuel pumps for pumping the oil to the injection valves is somewhat controversial, as some manufacturers prefer to have one pump per cylinder, whereas others think it desirable to minimise the number as far as possible. In this engine there is but one fuel pump for each set of four cylinders and a small hand pump is employed for pumping the oil up to the valves when required, the usual overflow cocks being fitted.

In most Diesel engines, the governor controls the amount of fuel admitted to the cylinder by acting upon the suction valves of the fuel pump, and holding them open a longer period during the pressure stroke, if it is required to reduce the oil supply. In this engine the control is from the starting platform and a governor is fitted, which is only for the purpose of preventing the speed rising above 140 revolutions per minute, by cutting off the fuel

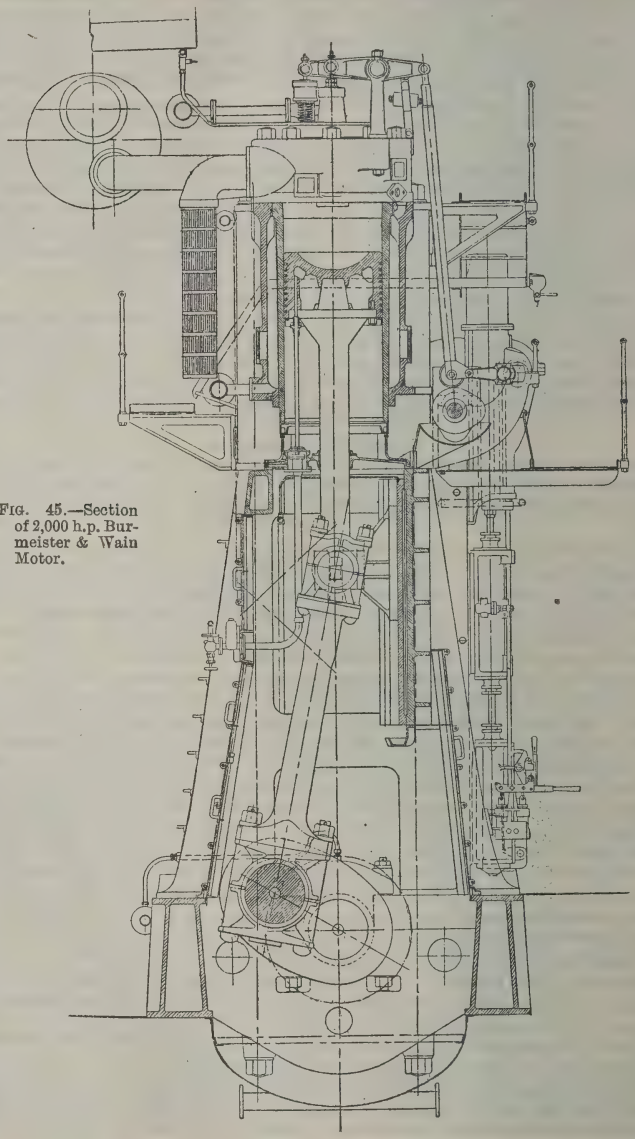


FIG. 45.—Section of 2,000 h.p. Burmeister & Wain Motor.

BURMEISTER & WAIN MARINE DIESEL ENGINE.

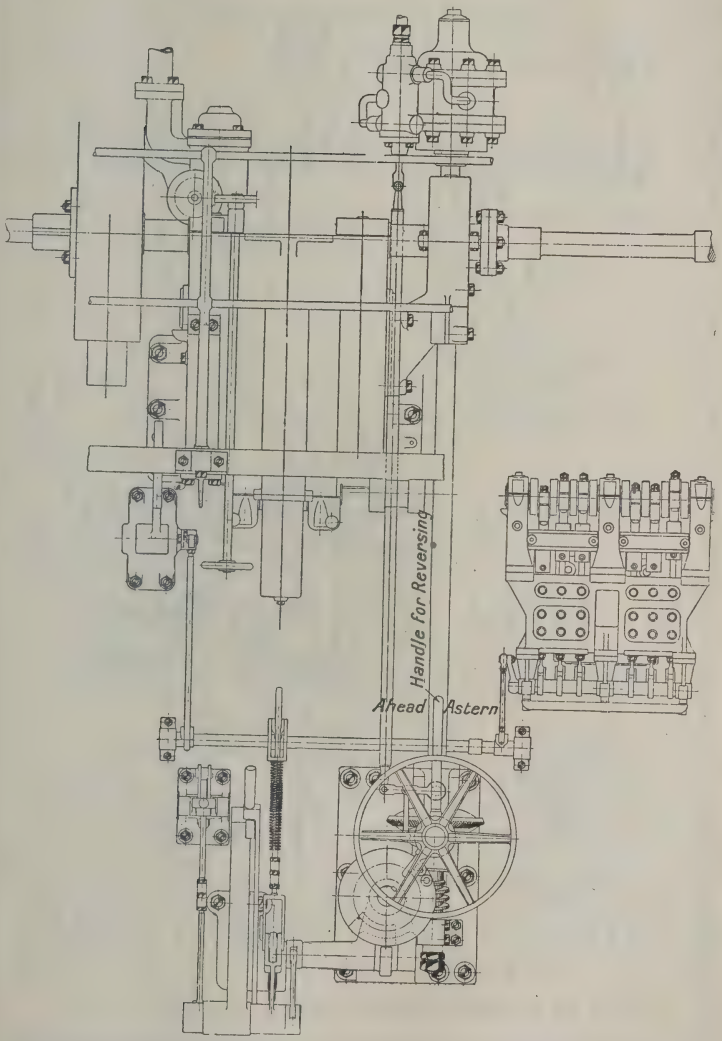


FIG. 46.—Details of Control Arrangements. Front View.

BURMEISTER & WAIN MARINE DIESEL ENGINE.

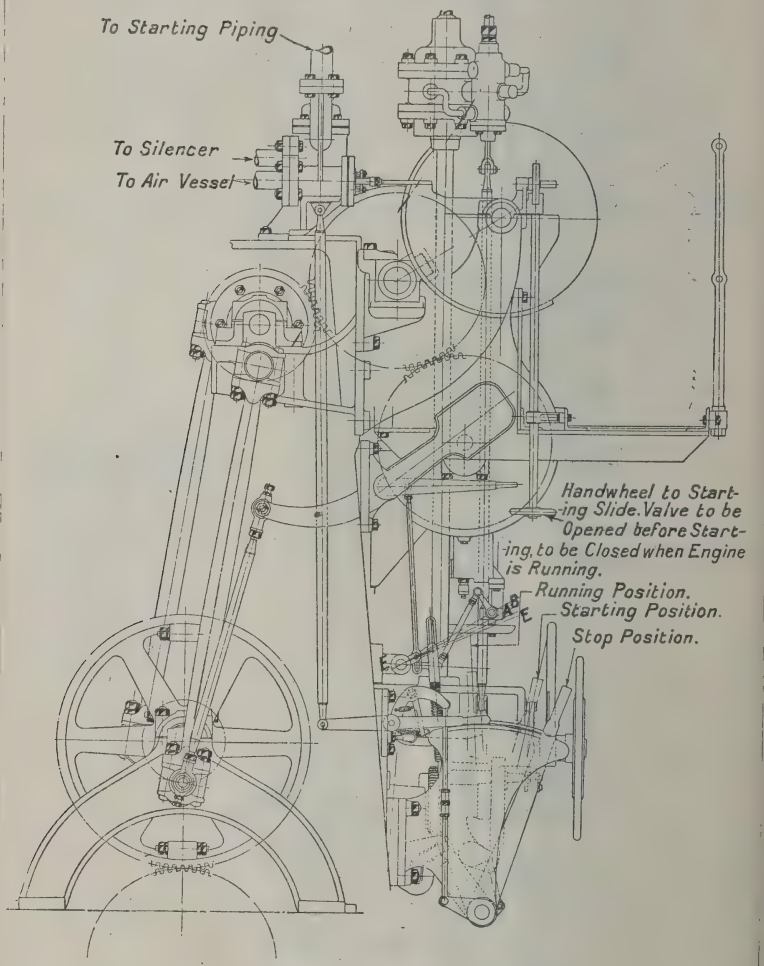


FIG. 47.—Details of Control Arrangements. Side View.

White Antifriction Metals

THE EYRE SMELTING COMPANY LIMITED

Contractors to: War Office, Admiralty, Air Ministry, Indian Office, Crown Agents for the Colonies, General Post Office, L.C.C. and all the leading Railways and Marine Engineers.

Three Brands that never let you down:

TANDEM PLASTIC METAL
TANDEM WHITE NAVY BRONZE
TANDEM "A"

All Metals supplied by us are made from Virgin Metals smelted in our Works.

THE EYRE SMELTING CO. LTD.

Merton Abbey, London, S.W. 19.

Telegrams: Analyzing, London. Telephone: Wimbledon 604 & 605.

F. 2040

NON-FERROUS ALLOYS

White Antifriction Metal

Tin Alloys

Stereo and Type Metal

Solder

Phosphor Bronze

Cored and Solid Chills and Castings

Bamber's Non-Encrusting Zincs

Gunmetal and Brass

Cored and Solid Chills and Castings

THE EYRE SMELTING CO. LTD.

Smelters, Assayers and Metal Refiners

Merton Abbey, London, S.W. 19

Telegrams : Analyzing, London. Telephone : Wimbledon 604 & 605

altogether. Forced lubrication is adopted for the engine, and the oil is water-cooled and circulated continuously. In some of the later engines one fuel pump is employed for each cylinder, and this appears a preferable arrangement.

There have been some very distinct modifications with the later and larger type of motor. Six-cylinder sets are now built developing 2,000 i.h.p., having a cylinder diameter of 740 mm. (29 ins.) and a stroke of 1,100 mm. (43¼ ins.). This is by far the largest output for a four-cycle marine motor that has yet been attained, although cylinders in greater dimensions are now being built. With an efficiency of 80 per cent. the corresponding brake horse-power is about 1,600. The speed of revolution is 100 per min., and the consumption of the engine is 0·32 lb. per i.h.p., or about 0·4 lb. per b.h.p. A vertical three-stage air compressor is driven direct off the main engine, having a capacity of 13·5 cub. metres of air per min., whilst the actual consumption of the engine is normally 12 cub. metres per min. Another modification lies in the fact that a separate fuel pump is provided for each cylinder. Owing to the size of the piston it is not possible to carry out the cooling by means of oil as with the smaller cylinders, and sea water is used for the purpose as with most other types of motors. It may be mentioned that some designers prefer to avoid the use of sea water for cooling purposes owing to the possibility of deposit, but the matter is largely an open question. The whole of the arrangements for operating the valves and reversing are the same as in the smaller motors, except that the camshaft, instead of being driven by two long horizontal rods, is in this case operated through spur gearing from the crankshaft, three intermediate spur wheels being provided between the crankshaft and the camshaft. It is claimed with this design that there is less likelihood of any variation in the setting of the cams due to wear and other causes.

There are many engines of this type being built, the highest powered developing 4,000 h.p. in eight cylinders. The general design of these large engines is exactly the same as the motor just described.

In fig. 45 (p. 2038) a section is given of a 2,000 h.p. Burmeister & Wain motor of the latest type, whilst figs. 46, 47 (pp. 2039, 2040) give illustrations of the control arrangements for this motor.

Werkspoor Type.

Another Diesel engine is that constructed by the Nederlandsche Fabriek, of Amsterdam, the first large engine of this design being installed in the 'Vulcanus,' and others of larger power up to 1,500 b.h.p. have now been built.

The motor, fig. 48, p. 2042, is usually of six cylinders, and in general details, such as the arrangement of valves in the cylinder cover, the division of the engine into two sets of three (or more) cylinders, etc., the design is similar to that of the Burmeister & Wain type.

The chief point of difference lies in the arrangements for operating the valves and the method of reversing. In this case two separate camshafts are provided, on one of which the ahead cams are fixed, and on the other the astern cams. Both shafts are nearly on a level with the top of the cylinders as in stationary engines, and they are driven by means of long connecting rods, operated by eccentrics on the crankshaft between the end cylinder and the flywheel. Both camshafts rotate continuously, whether the engine is running ahead or astern, and in reversing the engine the valve levers are first raised so as to be out of range of the cams, after which the astern camshaft is brought into operation by turning a forked piece carrying both shafts. The ahead camshaft then rotates idly out of range of the valve levers and these are actuated by the cams on the astern camshaft. This operation is carried out by means of a handle on the starting platform, or compressed air may be used for the purpose in larger engines. This is a totally distinct method of reversing from that already described, in which the camshaft is moved longitudinally, and illustrates the diversity of the arrangements which may be employed for reversing Diesel engines.

In large engines of this type (1,000–1,500 b.h.p.) whilst the principle remains the same, the methods of carrying it out vary. The two camshafts are on the same level as before, and are fixed in position relatively to each other, so that their distance apart is always the same. The bearings of these two camshafts are carried on flat horizontal guides, and are capable of moving transversely to the engine, thus carrying the shafts bodily towards, or away from, the centre of the engine. As the astern cams are fixed on one shaft and the ahead cams on the other, the direction of rotation of the engine depends on the position of the two camshafts. When the ahead camshaft comes under the valve lever rollers the engine is set for running ahead and *vice versâ*. The levers are, of course, lifted during the movement of the camshafts.

The motor is of the open type, contrary to the Burmeister and Wain engine, and the cylinders are supported entirely by steel columns extending from the bedplate to the cylinder, whilst there are also diagonal steel columns for stiffening. Light covers are fitted at the bottom and can be readily removed. The air-compressor is of the two-stage type, contrary to ordinary practice, and is driven by means of levers off one of the crossheads. Circulating water and bilge pumps are also driven direct off the engine. There are two fuel pumps for the six cylinders, of which only one is usually in operation.

Carels Type.

The marine engine, fig. 49, p. 2043, developed by Messrs. Carels, of Ghent, which was perhaps one of the earliest constructed, is of the two-stroke-cycle, single-acting type, and many motors of this type have been built by the firm in conjunction with their various licensees. Up to


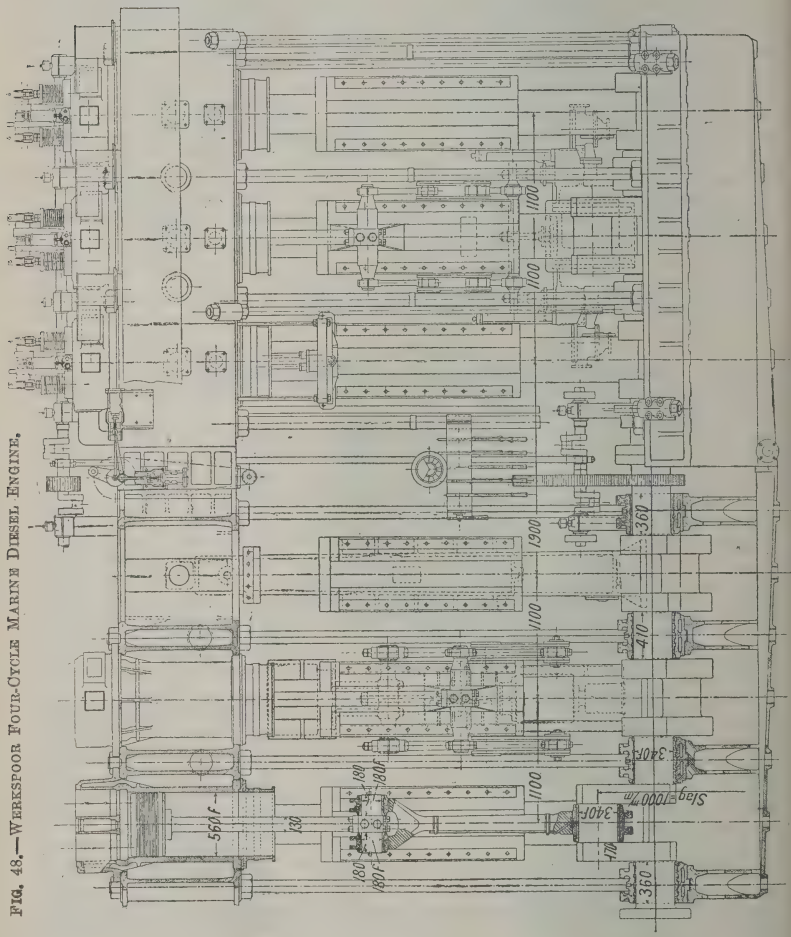


FIG. 48.—Werkspoor Four-Cycle Marine Diesel Engine.

CARELS MARINE DIESEL ENGINE.

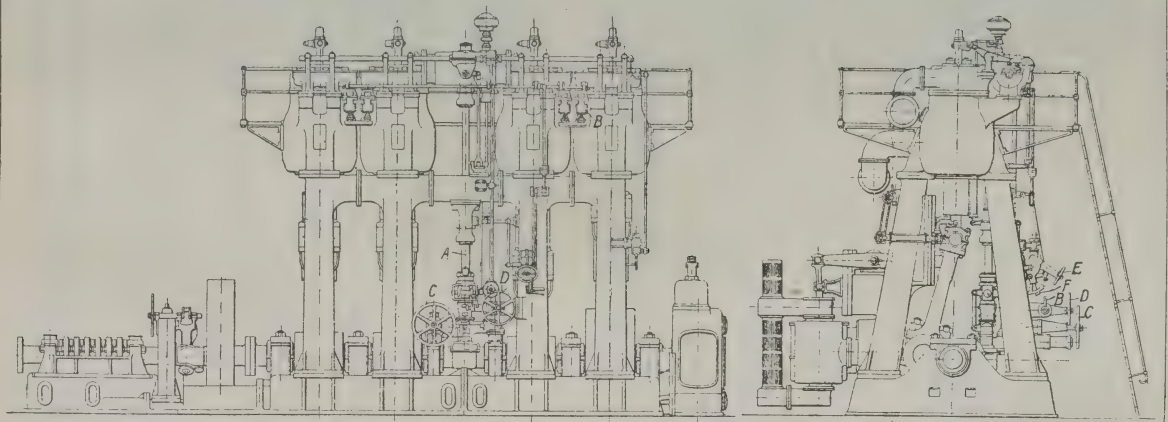(Slow Speed Type.)



A Vertical spindle driving camshaft.
B Lever controlling air motor for reversing.
C Hand wheel for same in case of failure.
D Manœuvring wheel.
E Controlling handle for speed variation by adjustment of fuel.
F Wheel for controlling governor setting.

FIG. 49.

powers of about 1,000 b.h.p., a four-cylinder design is adopted, whilst above this power a six-cylinder engine is common.

The two-stroke-cycle principle involves the employment of scavenge pumps, and these are operated from the engine crosshead by means of levers, two scavenge pumps being adopted for both the four- and six-cylinder engines. For the admission of the scavenge air for clearing the cylinder of exhaust gases, and filling it with air for the next compression stroke, four scavenge valves are fitted in the cylinder cover, this number being used in order to have a sufficient inlet area. Ports are, of course, employed for discharging the exhaust gases after expansion, these being arranged in the bottom of the cylinder, and are uncovered by the piston in its downward stroke.

Fig. 49, p. 2043, represents a four-cylinder 800 b.h.p. Carels engine of the standard design. The motor is of the open type, somewhat resembling a steam engine in appearance, a crosshead and connecting rod being employed. The cylinders are arranged in pairs, with the reversing and control gear in the centre. Hollow cast-iron columns support the cylinders, and these columns are used for conveying the scavenge air from the pumps to the inlet valves. The air compressor for the injection is of the Reavell type and driven direct off the crankshaft at the end of the engine.

For reversing, it is necessary to provide separate cams for the fuel inlet and starting air valves, whilst one cam is sufficient for the scavenge valve, provided its angular relationship to the crankshaft is altered when the direction of rotation is required to be reversed. The camshaft is driven off the crankshaft by spur gearing through a vertical shaft, as with stationary engines.

When it is desired to run the engine in the astern direction, the valve levers are lifted off the cam, the camshaft is turned through a certain angle to bring the scavenge valve cams in the right position relative to the crankshaft. An auxiliary or manœuvring shaft in front of the camshaft is moved longitudinally, and this movement alters the position of the rollers of the levers operating the fuel inlet and starting air valves, so as to bring them over the astern cams on the camshaft. The process of reversing is usually carried out by means of compressed air, a small air motor in front of the engine being employed, although it can be accomplished by hand, if necessary.

In later types some modifications were made, particularly in connection with the scavenge pumps and air compressors, the arrangements for the introduction of the scavenging air into the cylinders being unaltered. The ordinary type of reciprocating air compressor was introduced, arranged so that better balance of the engine could be maintained.

Sulzer Marine Diesel Engines.

Messrs. Sulzers' experience of both four-cycle and two-cycle engines has led them to adopt the two-cycle engine for all marine work, and they have standard designs of 4, 6, and 8 cylinder marine engines developing from 300 to 7,200 b.h.p., the latter being a unit of 8 cylinders, or 900 b.h.p. per cylinder.

The Sulzer two-cycle engine has important differences from the other engines described. Chief amongst these is the method of scavenging through a double row of ports, the upper row of which is above the exhaust port opening and is controlled by means of a rotary sleeve valve.

On the downward stroke of the piston, the upper row of scavenging ports is first uncovered, but the valve controlling these ports remains shut and the exhaust commences to take place only when the piston has descended further and uncovered the exhaust row of ports.

Scavenging commences as soon as the lower row of scavenging ports is uncovered and continues through both rows of ports, the control valve for the upper ports having been opened shortly before bottom dead centre. Finally, scavenging is maintained through the upper ports after the piston has closed the exhaust ports.

Not only is the scavenging much improved in this manner, but it will be seen that it is possible to obtain a super charge of air, i.e. a slight increase above the atmospheric pressure in the cylinder at the commencement of compression.

Messrs. Sulzers have found that the good combustion obtained by this method of scavenging, and also the simplicity of the cylinder cover design (fig. 50) enables them to maintain with safety a higher mean pressure in their two-cycle engines than in four-cycle engines.

The power for a given size of cylinder on the Sulzer two-cycle type is more than double the power of a similar size cylinder on the four-cycle type, both being assumed to run at the same piston speed.

The fuel consumption is also practically the same as the best four-cycle engine when working under service conditions, viz. 0·42 lbs. per b.h.p. hour.

Fig. 51 shows the section through working cylinder of a standard Sulzer Marine Engine of 1,350 b.h.p. running at 110 r.p.m.

The double row of scavenge ports and the rotary control valve for the upper ports are seen on the right (fig. 51), while the exhaust ports and exhaust collector are on the left.

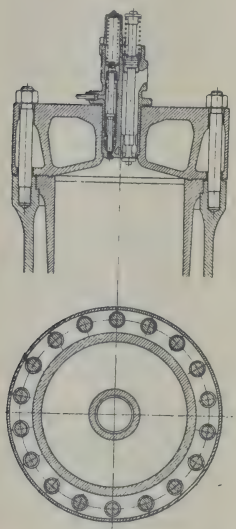


FIG. 50.

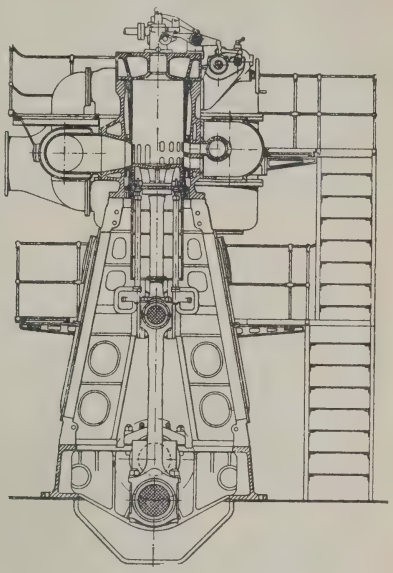


FIG. 51.

The engine shown is provided with a direct driven scavenging pump seen between the h.p. air compressor at the end of the engine and the main engine cylinders.

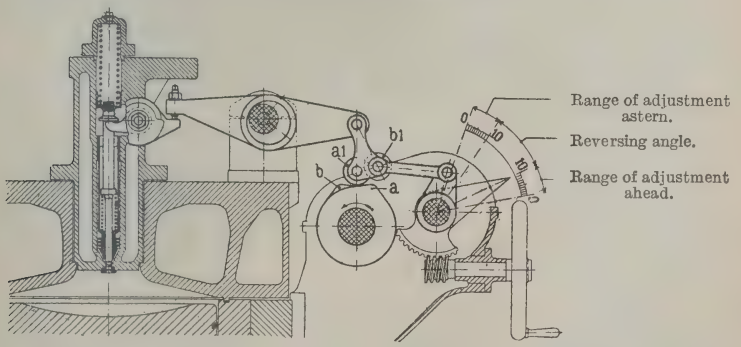


FIG. 52. Sulzer Reversing Mechanism.

In the latest type of engine, the scavenging pumps are in the form of independent rotary blowers electrically driven. This is an advantage from the constructional point of view, and the arrangement has the further gain that the scavenging pump may be speeded up independently of the main engine when it is desired to increase the power. This does not involve any

increase in the size of the electric generating sets where electrically driven winches are installed, as these latter are only running in port when the scavenging pump is idle.

The engine illustrated, when made with separate turbo-blowers, develops 1,500 b.h.p., working at approximately the same indicated mean pressure and piston speed as the 1,350 b.h.p. engine with reciprocating scavenge pumps.

Reversing is carried out with a minimum requirement of power, and is effected by bringing a second set of rollers and cams into operation (fig. 52). Each starting and fuel valve therefore has one cam and roller, a and a^1 for running ahead, and another, b and b^1, for running astern. The hand wheel shown in the above illustration brings a and a^1 or b and b^1 into operation in accordance with the required direction of running.

The weight complete of Sulzer Diesel Marine Engines is approximately 2 cwt. per h.p., i.e. 10 h.p. per ton.

Submarine engines of Sulzer two-cycle type have been built developing 4,000 h.p. in 8 cylinders, these engines being the most powerful marine Diesel engines in the world.

The 'Doxford' Engine (Fig. 53, p. 2047).

Messrs. William Doxford & Sons, Ltd., have completed a 3,000 i.h.p. Diesel oil engine of the opposed piston type, with opposed pistons working on the two-stroke cycle, for the ship *Yngaren*.

The engine consists of four cylinders in each of which there are two pistons acting outwards. The lower piston is coupled by crosshead and connecting rod to a crank below the centre of the cylinder and the piston acting upwards has a crosshead above it, extending fore and aft beyond the walls of the cylinder and coupled by two connecting rods to two cranks, one on each side of the centre crank, but arranged in line diametrically opposite to it. The fuel is injected between the pistons when they are close together, and when combustion takes place the pistons are driven apart, thus exerting an almost perfect turning moment on the crank without a reactionary load on the framework of the engine.

The products of combustion are exhausted through a port at the top of the liner, which is uncovered by the upper piston at the end of the stroke, and a corresponding port is uncovered by the lower piston in the bottom end of the liner to admit the scavenging air, which thus sweeps the entire cylinder. The covering of these ports at the beginning of the return stroke traps the contained air, which is thus compressed ready for the injection of the fuel and repetition of the cycle.

The elimination of exhaust and induction valves, with their liability to defects, is a great advantage, and in dispensing with the cylinder cover many difficulties of jointing and cooling are obviated.

The fuel oil is injected transversely across the cylinder through two spray valves placed diametrically opposite, so that the oil does not impinge on the pistons before combustion has taken place but spreads throughout the combustion space.

The valve gear is very simple, consisting of one camshaft, upon which there are two fuel and one air starting cams for each cylinder for going ahead, and a similar set for astern working. These cams are carried on a sleeve which can be moved fore and aft when reversing in order to bring the desired set under the rocking levers. The rocking levers are mounted on an intermediate shaft, arranged so that the air starting levers are engaged and the fuel valve levers withdrawn when starting up, and vice versa when fuel is to be admitted to the cylinder.

When changing from ahead to astern, all the levers are lifted by a movement of this shaft, which is worked by the main control hand wheel, which also regulates the suction-valve opening of the fuel-measuring pumps.

The cylinder liners and pistons are water-cooled. Messrs. Doxford ran a satisfactory trial of five weeks' duration on an experimental engine of 640 i.h.p., with an average mechanical efficiency of about 76 per cent., and a consumption of Mexican fuel oil of ·43 lb. per b.h.p. per hour. A seven days' continuous trial on the test bed of the 3,000 i.h.p. engine gave the following results :— i.h.p., 3,050 ; b.h.p., 2,610 ; revs. per min., 76·7 ; ·441 lbs. oil per b.h.p. per hour ; oil used, Anglo-American of 17,750 B.Th.U. or Anglo-Mexican of 17,680 B.Th.U. There is no difficulty in burning the heaviest oil without the use of additional or lighter oil to assist combustion, as proved byexperiments with tar oils, Mexican, and Californian oil with 40 to 50 per cent. asphaltum Roumanian, residue oil, and Russian mazut.

The Neptune Marine Oil Engine.

The Neptune Marine Oil Engine type 'A' is designed and built by Messrs. Swan, Hunter, & Wigham Richardson, Ltd., who are licensees of the Atlas Diesel Co., Stockholm.

This engine is of the reversible, inverted, single acting type, designed to burn heavy oil.

The general design of the engine is shown by the drawings reproduced in figs. 54 and 55.


This engine consists of six working cylinders, six scavenging cylinders, and one air compressor.

The scavenging pumps are arranged directly below the working cylinders, while the air compressor is driven from an extension of the crank shaft, at the forward end of the engine.

THE 'DOXFORD' MARINE OIL ENGINE.

FIG. 53.

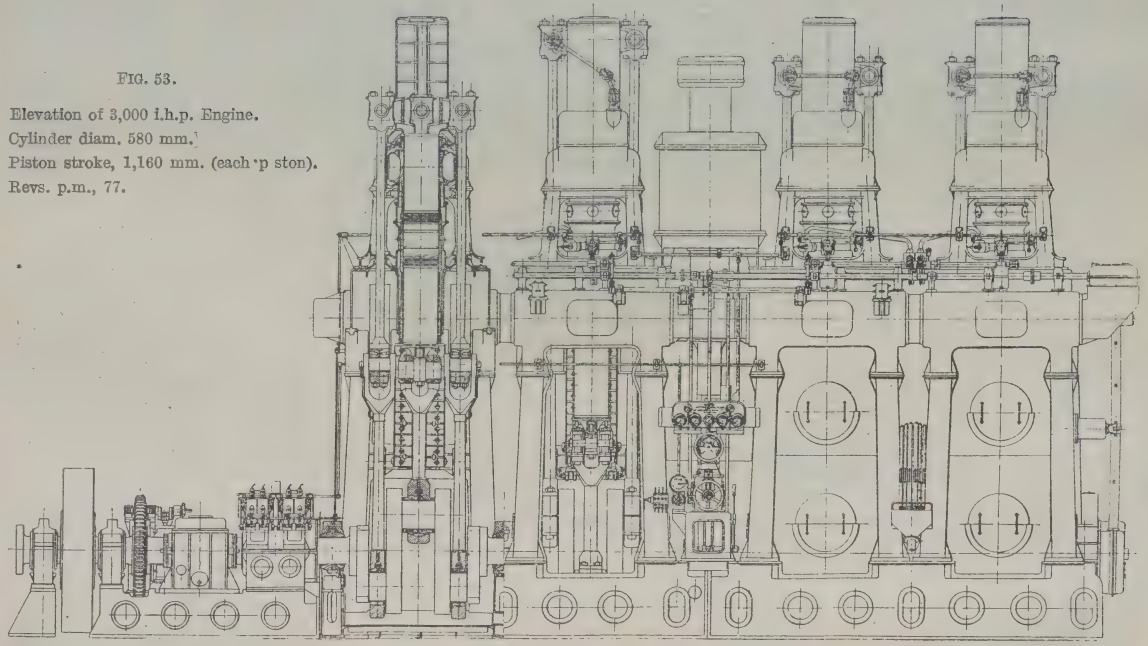Elevation of 3,000 i.h.p. Engine.
Cylinder diam. 580 mm.
Piston stroke, 1,160 mm. (each piston).
Revs. p.m., 77.



Each pair of cylinders is supported by three cast-iron columns at the front, which are arranged to carry the crosshead guide plates, and three cast-iron columns at the back, which are bolted to the front columns. The columns are secured to the bedplate and scavenging cylinders, and continuous bolts connect the working cylinders to the bedplate.

The crank shaft is of the built-up pattern, with two cranks in each section, two cylinders thus forming one unit, allowing this type of engine to be built with two, four, six, eight, or more cylinders. The working cylinders are fitted with a separate liner, in which are arranged the scavenging and exhaust ports.

A special feature of the Neptune engine is that the valve mechanism controlling the admission and discharge of the scavenging air to the scavenging cylinders is also adapted to control the admission and discharge of the compressed air for starting the engine, an arrangement which greatly simplifies the starting mechanism, and which has proved very successful in previous Neptune engines. The arrangement of the valve gear is clearly indicated on the drawings. The main parts of each set of the valve gear consist of a piston valve A (fig. 54), which controls the direct passage of the scavenging air or of the compressed air for starting, as the case may be, to and from the scavenging cylinders through ports in the scavenging cylinder walls, and a change valve B (fig. 54), which serves to admit either the scavenging air or the compressed air for starting to the piston valve A (fig. 54), as may be desired. The piston valve A (fig. 54) is actuated by an eccentric on the cam-shaft, the eccentric being set by an axial movement of the cam-shaft to the required position for driving the engine in the desired direction. The changing of the cams on the cam-shaft and the setting of the eccentric for the valve gear are thus effected in a single operation by imparting an axial movement to the cam-shaft. One set of valve gear is provided for each pair of cylinder units, the cranks of each unit being arranged 180 degrees apart for this reason. Above the piston valve A (fig. 54) is arranged an air receiver, consisting of a vertical pipe C (figs. 54 and 55), and a horizontal pipe D (fig. 55), from which the scavenging air passes to the working cylinders.

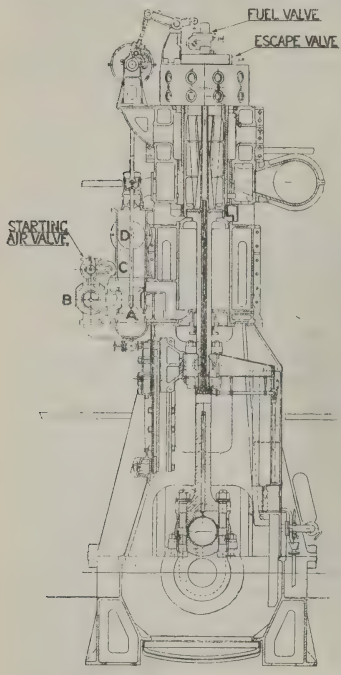


FIG. 54.—Neptune Marine Oil Engine.

Atmospheric air for scavenging purposes is admitted to the change valve B (fig. 54) through the inlet ports E, E (fig. 55), while compressed air for starting is admitted through the compressed air valve F (fig. 55). The change valves B (fig. 54) are placed in the desired position by means of a lever worked from the starting platform. In order to diminish back pressure or exhaust resistance when starting with compressed air, the change valve B (fig. 54) is arranged so that most of the air is exhausted through the ordinary air intake pipes E, E (fig. 55).

When the piston valve A (fig. 54) is below the central position, air passes through the bottom row of ports into No. 1, 3, or 5 scavenging cylinder, and at the same time the top row of ports are open and allow No. 2, 4, or 6 scavenging cylinder to discharge into the receiver C (figs. 54 and 55). When the piston valve A (fig. 54) is above the central position, No. 2, 4, or 6 scavenging cylinder is taking in air through the top ports, and No. 1, 3, or 5 scavenging cylinder is discharging into the receiver C (figs. 54 and 55), through the bottom ports.

The rotating motion of the cam-shaft is transmitted from the crank-shaft by means of eccentrics, rods, and counter-shaft (fig. 54), this arrangement of gear being very convenient for adjustment. Each cylinder is provided with a fuel injection valve situated on the top of the cylinder cover. Each valve is supplied with fuel from a separate fuel pump, and each pump is arranged with double discharge valves to prevent leakage.

The fuel pumps, which are driven through gearing from the cam-shaft, are arranged so that they are out of action during the operation of reversing, and remain so until the engine is rotating in the desired direction, when they are automatically brought into action again, thus avoiding excessive pressure in the cylinder during this operation. The suction valves of the fuel pumps are controlled by hand and by a centrifugal governor which is driven from the cam-shaft.

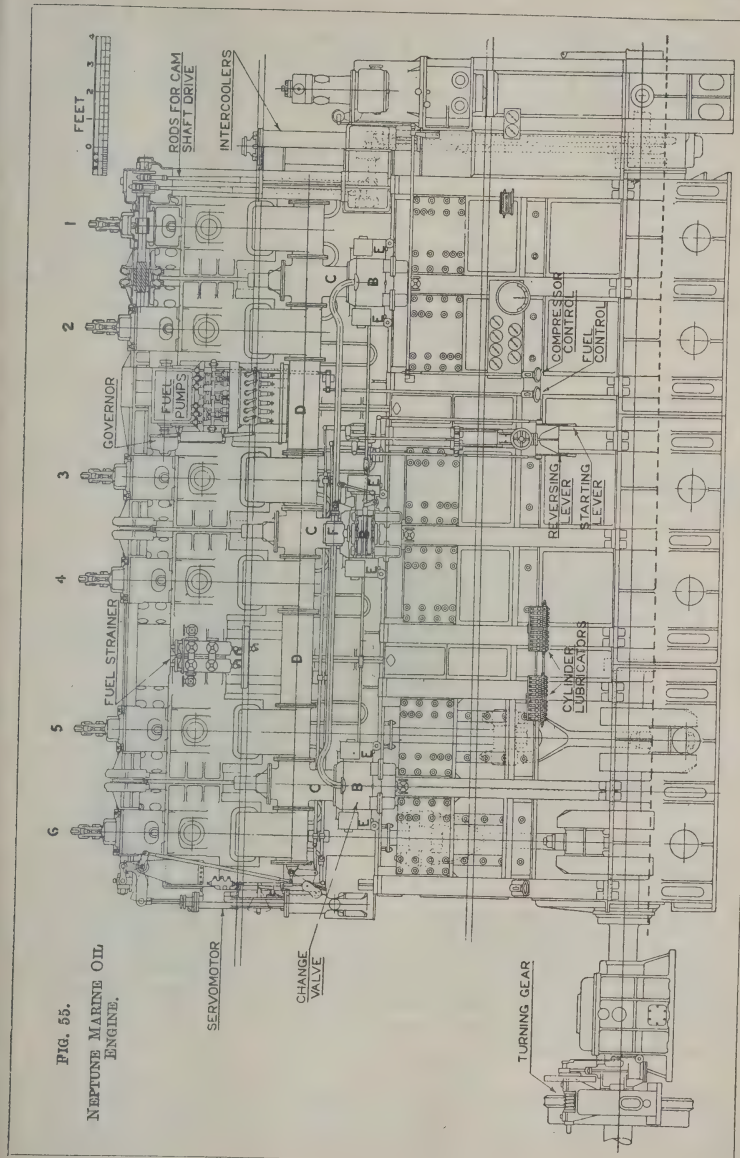


FIG. 55.
NEPTUNE MARINE OIL ENGINE.

As the starting and scavenging air is led through ports, the fuel injection valve and the escape valve are the only valves placed on the top of the cylinders, and the number of small working parts is therefore much reduced in comparison with those Diesel engines which have valves on the cylinder top for the operations referred to.

Sea-water is used for piston cooling, the water entering and leaving the piston through telescopic tubes by way of the hollow piston rod, large air vessels being provided to prevent water hammer.

The hand gear for controlling the engine is arranged so that one man can carry out the necessary operation, while the necessary pressure gauges and revolution counter are arranged in a suitable position.

For manœuvring, the cam-shaft is moved in a horizontal direction by a Servomotor located on the after end of the engine, which is operated from the hand controlling gear.

There are four cams in all for each fuel valve—two for full power, one ahead and one astern, and two smaller cams, one ahead and one astern, the latter being arranged for slow running.

The air compressor is of the single-acting three-stage crosshead type. The h.p. cylinder is fitted with a loose liner, while the other cylinder liners are cast with their water jackets.

The intercoolers, which are of the vertical tube type, are located at the forward end of the engine, as shown in fig. 55, and are fitted with separators on each stage.

The engine is totally enclosed, forced lubrication being provided throughout.

A sight feed lubricator, driven by gearing from the crank-shaft, is provided for lubricating the working and compressor cylinders.

The engine illustrated will develop 1,500 i.h.p. at about 125 revolutions per minute.

Messrs. Swan, Hunter, & Wigham Richardson, Ltd., are also developing a marine oil engine which will be suitable for vessels where the height of the engine is to be considered. All the principal details of the Neptune engine will be embodied in this alternative design, the principal difference being that the scavenging cylinders will be driven by levers, thus making a much lower engine.

The Camellaird-Fullagar Engine.

Cammell, Laird & Co., Ltd., Birkenhead, have developed the Fullagar engine for marine work, and make various sizes of engines of the two-stroke cycle, opposed piston Diesel type with the oil fuel injected by compressed air.

The principal features of the design are: the elimination of the cylinder cover, the provision of a plain cylinder liner, the straight-through scavenge from end to end of the cylinder, the perfect balance of the reciprocating parts provided by the opposed pistons, one connecting-rod and one crank per cylinder.

A 1,000 b.h.p. engine is illustrated in fig. 56. There are four cylinders, in each of which the upper piston of one cylinder is connected to the lower piston of the other cylinder by external tie rods and crossheads, so that each crank receives two impulses per revolution. The horizontal component of the pull of the tie rods is taken up by guides at the top and bottom of the cylinder. The upper crossheads are enclosed and form scavenge pumps, compressing to 1½ to 2 lbs. per sq. in. The pistons uncover air and exhaust ports at opposite ends of the cylinders, and excellent scavenging is obtained.

The Fullagar design enables double the power to be produced in the same space compared with ordinary Diesel engines, and a lighter weight per h.p. As the forces and reactions are largely self-contained by the moving parts, very little load comes on to the framework of the engine, and the construction can be correspondingly light. For marine work the engines have the great advantage of being able to run at a slow speed, also they are very accessible for overhauling.

The 1,000 h.p. engine has cylinders 18½ ins. diameter by 25 ins. stroke, and the speed is 110 r.p.m. Fresh water cooling is adopted to prevent sand and grit from being deposited in the jackets and pistons, and is therefore preferable on this account to salt water. The starting and fuel valves are in the centre of the cylinder, between the pistons, and are operated by a horizontal cam-shaft driven by skew gearing from a vertical shaft operated by crank-shaft. Governing is effected by controlling the lift of the suction valves on fuel pump in the manner usual with Diesel engines, and to reverse the direction of rotation it is only necessary to turn the hand wheel to set the vertical shaft for the ahead or astern position.

See also page 1656.

The 'White' Diesel Engine.

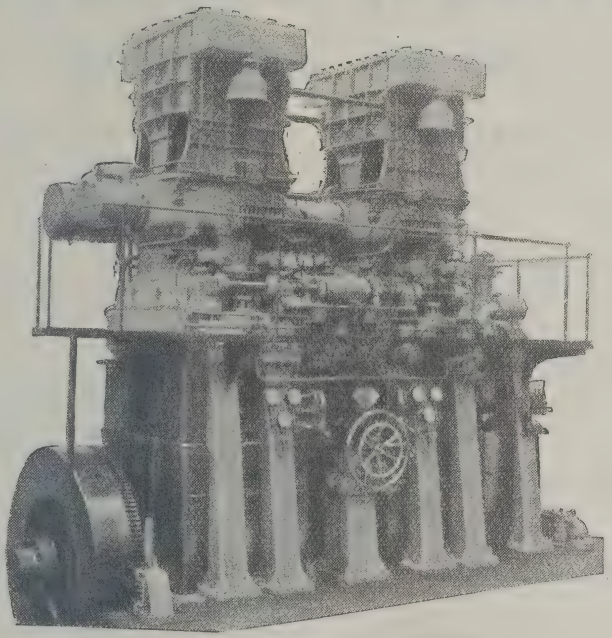
The Diesel engines made by Messrs. J. Samuel White & Co., Cowes, were first used for submarines, and they are now supplied for all marine purposes.

One of the White 450 b.h.p. two-stroke cycle engines was subjected to severe tests in order to prove its capabilities as regards power, flexibility and endurance. A 72-hour full load trial

CAMMELL LAIRD

& CO., LTD.

BIRKENHEAD.



CAMELLAIRD - FULLAGAR

MARINE OIL ENGINES.

for all Classes of Merchant Vessels.

SIMPLE * SILENT * RELIABLE.

LONDON: 3, Central Buildings, Westminster, S.W.1

NOW READY—FOURTH EDITION, Revised and Enlarged.

Containing 364 pages with 172 illustrations.
Demy 8vo, cloth. Price **12**s. **6**d. net.

Diesel Engines

FOR

LAND AND MARINE WORK,

BY

A. P. CHALKLEY, B.Sc. (Lond.), A.M.Inst.C.E., A.I.E.E.

With an Introductory Chapter by Dr. RUDOLF DIESEL.

PRESS OPINIONS.

***The Times* (*Engineering Supplement*).**

'Throughout, the subject is treated in a graphic and forceful way. Mr. Chalkley has written a very interesting book, and it should find wide appreciation.'

Gas and Oil Power.

'It gives pleasure to recommend those interested in Diesel engines, whether for land or marine work, to read Mr. Chalkley's book, as in our opinion there has not been published in England such a clear, concise, and practical work.'

Shipping World.

'Mr. Chalkley has written a book which is well entitled to the wide appreciation with which it has been received.'

Electrical Review.

'Concise, distinct, up-to-date, well illustrated, and well indexed, the book should find a place in the library of every engineer who wishes to keep abreast of modern developments.'

International Marine Engineering.

'There is hardly any successful type of Diesel engine which is not fully described in this book.'

Birmingham Daily Post.

'The author is well qualified for the work he has undertaken. He produces evidence of scientific qualification and has had practical experience with the machines he describes.'

CONSTABLE & CO., Ltd., 10 Orange St., London, W.C.2

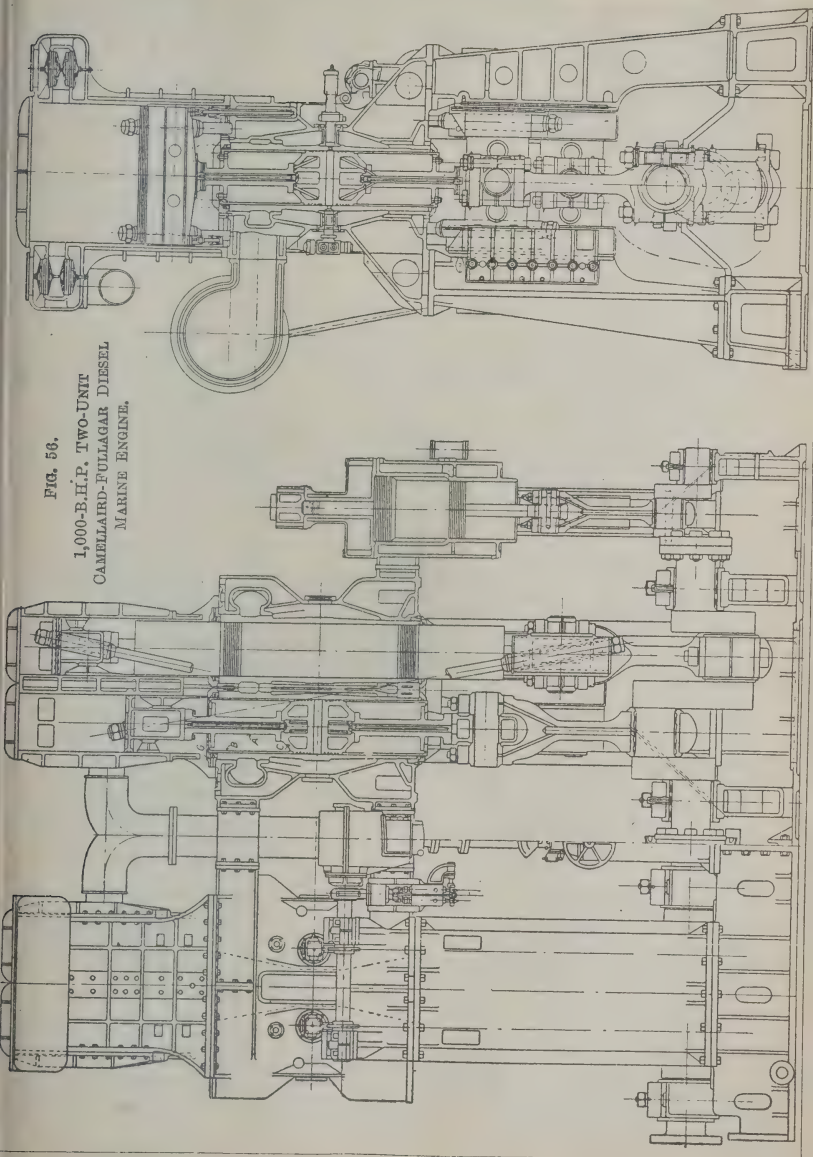


FIG. 56.
1,000-B.H.P. TWO-UNIT CAMELLAIRD-FULLAGAR DIESEL MARINE ENGINE.

was satisfactory, and it was proved that the engine did not require vigilant attention. The exhaust was practically invisible. At the end of this run the engine was slowed down to two-thirds speed and manœuvring trials were conducted. It was seen that 14 cubic feet of air at 900 lbs. per sq. in. was sufficient for starting and reversing the engine 42 times, the pressure of air going down to 90 lbs., which was insufficient for starting.

As an example of flexibility, the tests to determine the minimum speed consistent with smooth running of the engine are interesting. The speed was gradually reduced from 400 down to 150 r.p.m. with suitable power and without alteration to fuel pumps, etc. It was found that 150 r.p.m. could be maintained without fluctuations, and with a steady blast pressure of 630 lbs. per sq. in.

The White engines are vertical, with stepped pistons, the working piston having a clearance of about ·024 in. and relying for gas-tightness wholly upon its rings, while the lower portion fits the cylinder liner and takes the side thrust of the connecting-rods; this lower portion is always comparatively cool, and hence is easily kept effectively lubricated. An important feature of the latest design is the rotating scavenge valves, the sleeve within which they work forming part of the reversing mechanism of the engine.

The Beardmore Diesel Engine.

Messrs. Beardmore & Co., Dalmuir, manufacture the Tosi design of Diesel engine, of which large numbers have been supplied for submarines and other work. The engines are of the four-stroke cycle type, and are very economical, the full load fuel consumption being only 0·4 lb. per b.h.p. hour.

The engines are of the enclosed design and are noteworthy for the elegance of their appearance. They are made in a number of sizes up to 4,000 b.h.p. Before standardising the four-stroke cycle engines, Messrs. Franco Tosi constructed a two-stroke cycle engine, so that they could take comparative tests. The latter engine had six cylinders and developed 1,300 b.h.p. when running at 300 r.p.m. The results of the tests showed that their eight-cylinder 1,450 b.h.p. engine was much more economical in fuel.

Other Types of Marine Diesel Engines.

Among the other British makers of Diesel engines for marine work are Harland & Wolff, of Belfast, the North British Diesel Engine Works, Glasgow, and Scotts Shipbuilding Co. All of these makers are well known in marine engineering and, in their manufacture of Diesel engines, uphold the high traditions of British marine practice.

There are various other types of Diesel engines, but although they differ in some details from the engines already described, the points of difference are not usually important. In the single-acting two-cycle engine of the Maschinenfabrik Augsburg Nürnberg A.G., a stepped piston is adopted, the scavenge pumps being directly below the working cylinders. This arrangement has the advantage of occupying less floor space although the height is greater. The motors are not so accessible, but the amply dimensioned gudgeon pin is kept cool, and there is a large guide face. With the large low-speed engines of the open crosshead type, scavenge pumps are driven off the extended crankshaft, or by rocking levers. Four-cycle engines are also built by the M.A.N. Co.

In the low-speed, two-stroke-cycle engines constructed by Messrs. Krupp, of Kiel, the general design is similar to the Carels type, except for some slight modification in the reversing gear, whilst for high-speed engines employed in submarines enclosed engines are constructed. These are made up to 1,000 h.p. and have a scavenge pump at each end and an air compressor in the centre. A section through a Krupp-Diesel slow-speed engine of 1,150 b.h.p. is shown in fig. 57.

One of the most interesting of the large Diesel engines that has been developed during the past few years is that of the F.I.A.T. Company of Turin. This is of the two-cycle type, and it is of especial interest in that after experience with two-cycle motors with valve scavenging the newer types are provided with ports in the cylinder walls for the admission of the scavenging air. Auxiliary ports are also fitted to allow extra air to enter after the main scavenging ports are closed and these are controlled by means of relatively small valves.

Six-cylinder marine Diesel engines of this design have been built in power up to 3,200 h.p. in six cylinders.

A development of the past year or so which seems likely to have a marked effect on the question of the manufacture of small internal combustion motors is the low powered type of Diesel marine engine built by the Polar Company of Stockholm. It is of the four-cycle non-reversible type running at about 550 r.p.m. and is made in 1, 3, 4, 6 and 8 cylinders, each cylinder having an output of 12½ h.p. It is so far as possible totally enclosed and the construction is perfectly standardised. A reverse gear of the ordinary type has to be employed with engines of this design, since they are not made reversible as are the larger sets.

THE KRUPP MARINE DIESEL ENGINE.
(1,150 b.h.p.)

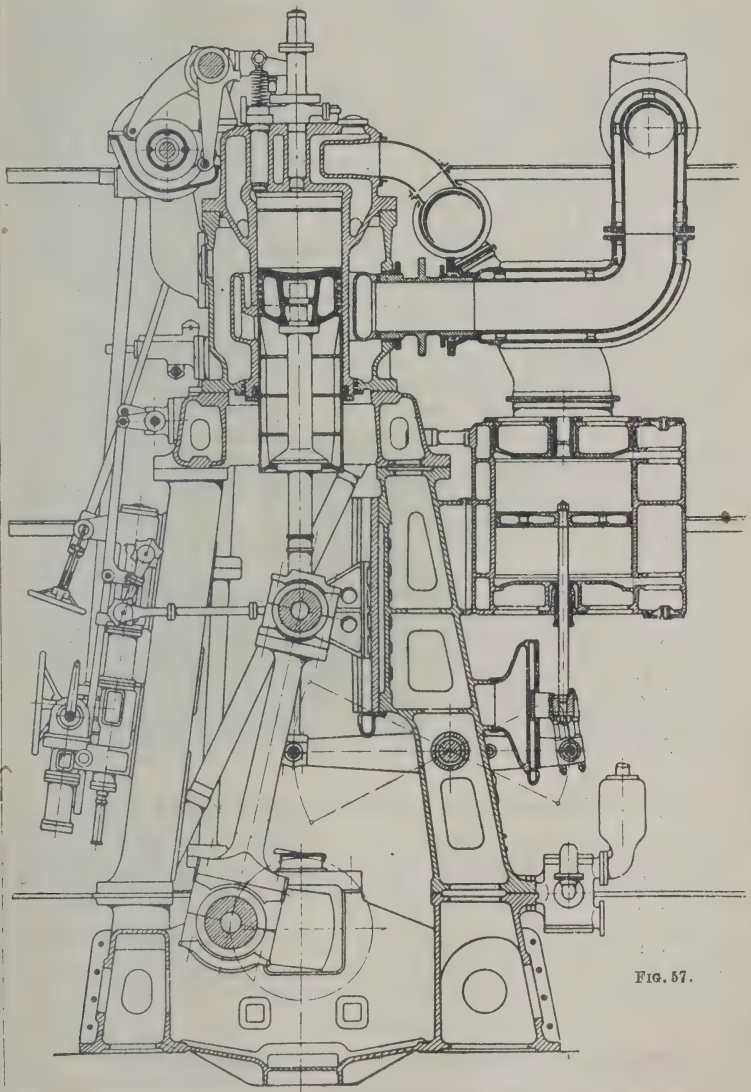


FIG. 57.

Diesel Engines for Submarines.

Practically all the European and American navies are now solely relying upon Diesel engines for the propulsion of submarines on the surface. These motors are of totally distinct type from those of the ordinary marine engine owing to the necessary high speed in order to reduce the weight sufficiently. They usually run at 400 to 500 r.p.m., and they are now constructed in powers up to 1,300 b.h.p. In the German and several other European Navies the Krupp two-cycle engine was employed, and also that of the M.A.N. Co., which is likewise of the two-cycle single-acting type. The former is a six-cylinder machine with two scavenge cylinders in the centre driven direct off the crankshaft, whilst in the latter the scavenge pumps are arranged directly beneath each working cylinder. The air pumps for air injection are also driven off the engine, so that it is practically self-contained. The weights of these motors are low, and usually somewhere in the neighbourhood of 50 to 60 lbs. per b.h.p. hour. For the British Navy the Vickers type is usually employed, which is a four-cycle twelve-cylinder motor of about 1,200 b.h.p. In this engine, solid injection of fuel is always adopted—thatis, the injection by mechanical means instead of compressed air. The advantage of this is that no air compressor is required, which is very desirable in a submarine. Although the engine as a Diesel engine is not quite so efficient as with air injection, the absence of air compressor renders the overall economy about the same as in other types of motors. It is doubtful, however, whether such heavy fuel may be satisfactorily employed as with the other engines, and Broxburne shale oil is generally used in these submarines. Two-cycle engines have also been designed for operation with mechanical injection.

Other types of Diesel engines are now used in British submarines, and one of the first of the two-cycle types to be employed for the purpose is the F.I.A.T., which was installed in the first submersible built by Scott's Shipbuilding and Engineering Co. In this engine the scavenge pumps are arranged beneath the working cylinders as with the M.A.N. engine previously mentioned, the pistons being stepped in the ordinary manner. Other types of two-stroke Diesel motors will be installed in British submarines, if they have not already been so fitted.

In order to keep the piston speed of submarine engines within the limits which it is not desirable to exceed (from 900 to 1,100 ft. per min.), it is usual to make the ratio of the stroke to the bore very much less than with the ordinary mercantile type of motor. Frequently the stroke is made equal to the diameter of the cylinders, and is very seldom more than 10 per cent. greater. In this way it is possible to construct Diesel for submarine purposes almost equal from the point of view of reliability to the slow-running types. High-speed engines of 1,300 h.p. have been constructed for installation to submarines, and others of over 2,500 b.h.p. in eight cylinders have been designed, and are possibly now being built for the same purpose.

A particularly important type of submarine Diesel engine is illustrated in fig. 58. This is a Sulzer motor as employed in several navies, and mainly follows along the lines of the slow speed mercantile Diesel motors built by the same firm and described in the preceding pages. The most notable feature is that port scavenging is employed and the method of introduction of an extra supply of scavenging air through valve controlled auxiliary ports is the same as in the larger sets. It had been thought that the high speed of rotation (350–500 r.p.m.) might render this system inefficient for submarine engines, but this does not appear to be the case. Motors of this design are being built in powers up to 4,000 b.h.p. per engine.

In their latest submarine motors the F.I.A.T. Company have also adopted the port scavenging arrangement, and engines of 1,300 h.p. in eight cylinders built according to this principle have already been installed in Italian submarines.

Output, Dimensions, and Weights of Diesel Marine Engines.

The design of Diesel engines in regard to the main dimensions of cylinders, etc., is not yet on a very definite or exact basis, mainly owing to the variations of mean effective pressure in the cylinders, and the uncertainty regarding the best speed of revolution. The output of a cylinder varies with the diameter, the stroke, the mean effective pressure, and the speed of revolutions. In general terms it may be expressed as follows:

B.H.P. $= KD^2 LNn$, where K = a constant; D = diameter of cylinder L = stroke of piston; N = revolutions per min.; n = number of cylinders.

Taking the dimensions of the cylinders in inches it is found that for four-cycle engines the value of K varies between ·00007 and ·00009, a good average figure being

$$K = \cdot 00008.$$

For two-cycle engines the value is between ·000125 and ·000155, the average being

$$K = \cdot 00014.$$

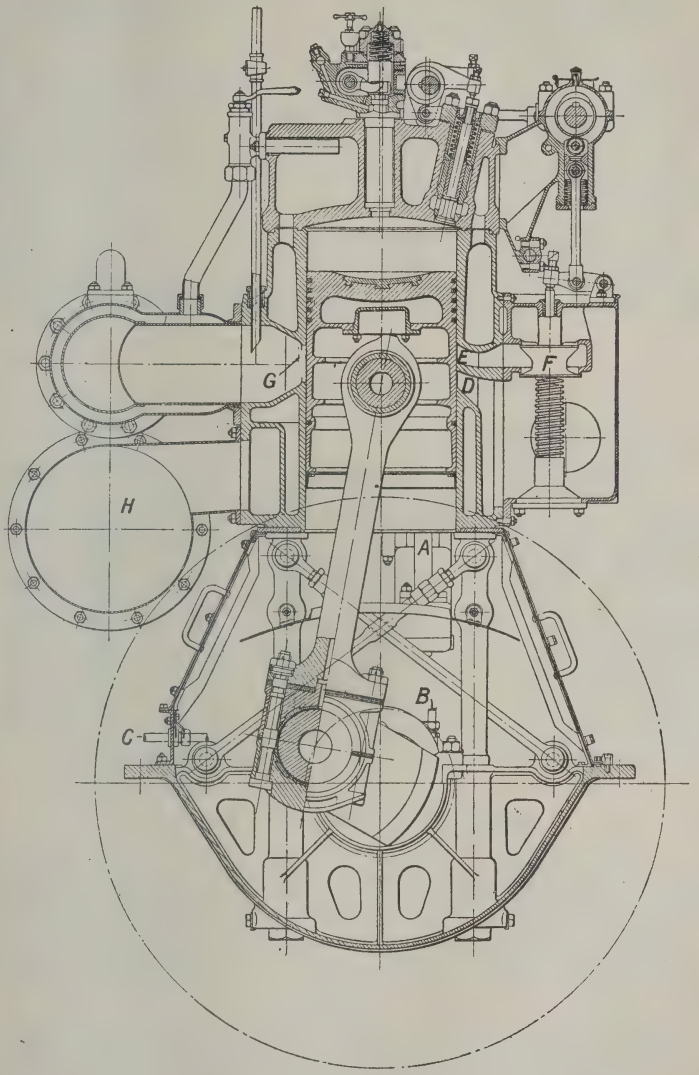


FIG. 58.—SULZER SUBMARINE DIESEL ENGINE.

As the mean effective pressure varies between 70 and 105 lbs. per square inch, and is sometimes higher, it is evident that cylinder dimensions are no absolute criterion of the exact output of a Diesel engine at a constant speed of revolution.

The piston speed in two- and four-cycle engines is approximately the same, namely, about 3 metres per sec., or 580 ft. per minute, with the ordinary slow-speed marine motors. It does not often vary between wider limits than 550 and 650 ft. per min., except in high-speed engine of the type employed in submarines, when it may be as much as 1,100 ft. per minute.

The ratio of stroke to bore is a matter of wide variation, and in some cases is as low as 1·3 and others as high as 1·8. This latter figure is common in most two-cycle motors with value scavenging, whilst 1·3 to 1·45 is more usual with port scavenging engines. Some types of four-cycle motors have a ratio of 1·4 and others 1·8.

The weight of Diesel marine engines varies as a rule between 200–300 lbs. per b.h.p., but is reduced to 60–70 lbs. per b.h.p. in submarine motors. Four-cycle engines are heavier than two-cycle, but the difference is not very marked, except in special cases, average figures being 300 lbs. in the first case and 250 lbs. in the second. This includes air compressors, scavenge pumps (in two-cycle motors) and various bilge, oil, and circulating pumps driven direct off the engine.

Power of Diesel Marine Engines.

The following table gives details of the dimensions and powers of some of the types of Diesel marine engines as now built :—

Engine.	B.H.P.	Diam.	Stroke.	R.p.m.	No. of Cyl.
Sulzer	850	18·5	26·8	160	4
Polar	800	15·7	21·25	165	6
Burmeister & Wain	1,100	20·5	28·5	140	8
Werkspoor	1,100	22	39·4	125	6
Carels	1,800	23·5	43·2	90	6
„	1,500	20	36·4	120	6
Krupp	1,150	17·3	31·4	130	6
Burmeister & Wain	1,150	21·3	28·6	140	8
Carels	900	17·6	22	234	4
Werkspoor	600	15·75	27·625	160	6
„	400	15·75	27·625	160	4
Polar	350	11·4	11·8	500	6
Fullagar	1,000	18·5	25·5	110	4
Doxford	2,700	22·4	45·5	77	4

Diesel Marine Engines in Service.

Motor ships have now been in operation for some considerable time, and it is possible to see in what manner the chief defects have developed. On the whole the four-cycle engines have proved most satisfactory, probably owing to the fact that more experience has been gained with this type of motor previously for land work. In the two-cycle engines one of the chief difficulties encountered has been the cracking of cylinder covers which has occurred with many engines. Cast steel, which was employed in some instances, has now been abandoned entirely in favour of cast iron, and with a proper mixture it is probable that the cracking of covers will in future be avoided. Air compressors have in some instances given rise to difficulty, whilst in the four-cycle motors, as might have been anticipated, the exhaust valves have required special attention.

The 1919 report of *Lloyd's Register of Shipping* devotes considerable attention to the development of the Diesel oil engine. Several vessels of considerable size fitted with Diesel engines were built during the war to the Society's class by Messrs. Harland & Wolff and by Messrs. Burmeister & Wain, of Copenhagen. The largest Diesel engines which have been fitted in any merchant vessel are the twin screw engines made by Messrs. Harland & Wolff, of Glasgow, for the motor vessel 'Glenapp' of 7,374 tons gross, which was built in 1918 by Messrs. Barclay, Curle & Co. Ltd.

The following table of typical vessels illustrates the advance which has taken place in the construction of Diesel engines :—

Name.	Tons.	Twin or Single Screw.	Date of Build.	Cylinders.		Stroke.
				No.	Diam.	
Vulcanus	1,179	Single	1910	6	$15\frac{3}{4}$	$23\frac{5}{8}$
Selandia	4,950	Twin	1912	16	$20\frac{7}{8}$	$28\frac{3}{4}$
Juno	2,345	Single	1912	6	22	$39\frac{3}{8}$
Siam	5,296	Twin	1913	16	$23\frac{1}{2}$	$31\frac{1}{2}$
Fiona	5,219	,,	1914	12	$29\frac{1}{2}$	$43\frac{5}{16}$
Panama	5,239	,,	1915	12	$24\frac{13}{16}$	$37\frac{13}{16}$
Glenamoy	7,269	,,	1916	12	$26\frac{3}{4}$	$39\frac{3}{8}$
Glenauy	5,075	,,	1917	12	$24\frac{13}{16}$	$35\frac{1}{2}$
Glenapp	7,374	,,	1918	16	$29\frac{1}{2}$	$43\frac{5}{16}$

There are now 69 vessels in service fitted with Diesel engines, which have been constructed in accordance with the Society's rules.

Oil Fuel for Diesel Engines.

(See also FUELS Section, page 1807.)

The fuel most commonly used in Diesel engines is that known as the residual oil, which is obtained by the process of distilling the crude oil when the lighter spirits are carried over, and the residual remains. Some crude oils are, however, directly used in Diesel motors, and in particular Texas oil, which does not contain sufficient proportion of petrol and other lighter oils to warrant its distillation. The only oil fuel which is unsuitable for employment is that from an asphaltum base, and it is for this reason that Mexican fuel oil is not as a rule employed for these motors without special treatment. Besides Texas oil, that from the Californian, Persian, Trinidad, Galician, Roumanian, and Russian oilfields is satisfactory for use in Diesel motors. Tar oil, which is obtained from the distillation of tar, is also very largely utilised in Germany, where the duties on imported oils are excessive, and often render the employment of Diesel engines unprofitable. Tar oil has a higher specific gravity than the petroleum fuel (usually in the neighbourhood of unity or slightly over), and has a lower calorific value, so that the consumption of an engine using this fuel is greater than when running on the ordinary oil. It is very viscous and, therefore, often requires heating, whilst some slight modifications have usually to be made in the fuel injection arrangements in order that an engine should run quite satisfactorily on tar oil. The usual method is to allow the injection of a small quantity of a lighter fuel oil before the main body of the tar oil passes into the cylinders through the pulveriser. It is claimed, however, that some motors run without any modification whatever, but this should not be taken as a general statement.

For information relating to Diesel engines for land installations, see page 1667.

COMPARISON OF MACHINERY FOR A CARGO SHIP DRIVEN BY A TRIPLE-EXPANSION RECIPROCATING STEAM ENGINE AND BY AN OIL-DRIVEN DIESEL ENGINE.

Dimensions of ship 360 ft. by 48 ft. by 29 ft.

Speed . . . . . 13 knots.
E.H.P. 1,500

Diesel Engine—

Revolutions	140	
Propeller efficiency	·52	
B.H.P.	3,500	
Weight of 6-cylinder single-acting 2-cycle engine	310	tons
Weight of donkey boiler 13 ft. by 10 ft. with water uptakes and gunnel	45	,,
Steam-driven auxiliaries and condenser	30	,,
Silencers, piping and other fittings in engine room	35	,,
Shafting propellers and other tunnel weights	70	,,
Tons	490	

Steam Engines—		
Revolutions		80
Propeller efficiency		1·66
I.H.P.		3,000
Weight of engines and boilers, etc.—		
(*a*) with Howden draft at 5·5 I.H.P. per ton		545 tons
(*b*) ,, natural ,, 5 ,,		600 ,,
Length of machinery spaces except bunkers—		
Oil engine		68 ft.
Steam engine, Howden draft		50 ,,
,, natural ,,		65 ,,

			Per h.p. per hour. Lbs.	Per day. Tons.
Fuel Consumption	Oil Plant	Main engine . . . . . oil	·45	17·0
		Auxiliary machinery, oil-fired boiler . . .	·07	2·6
		Total	·52	19·6
	Steam Plant	Main and auxiliary machinery . . . coal	1·7	55
Engine Room Complement	Oil Engines:	Engineers	6	14
	,,	Greasers	8	
	Steam Engine:	Engineers	4	30
	,,	Greasers	6	
	,,	Stokers and Trimmers . . .	20	

LLOYD'S RULES FOR MARINE INTERNAL-COMBUSTION ENGINES. *See page* 1698.

Metals for Propellers.

A properly designed bronze screw will give a very marked increase of speed (as much as *half a knot*) as compared with an iron or steel propeller, this being due to reduced scantlings, smoother surfaces, etc. Whilst the efficiency of a bronze screw continues unimpaired, that of an iron or steel propeller diminishes, through the pitting and corroding of its surface. In the case of solid screws the reduction in weight as compared with a cast-iron screw ranges from 20 to 25 per cent.

Nearly all vessels of any size or pretension are now fitted with bronze propellers. The metal has a tensile breaking strength of about 32 tons per square inch with about 20 per cent. elongation, and a transverse strength of over 7,500 lbs. per square inch. All warships as well as many merchant steamers are fitted with bronze propellers. Cast-steel propellers cost about twice as much, and bronze propellers about five times as much, as those of cast iron.

The *Bull's Metal Company* have with great success combined the study of Bronze Propeller designs with that of material, manufacture, and finish, large numbers of ordinary Bronze Propellers having been replaced with Bull's Metal propellers, giving, it is stated, a very material increase in speed on a reduced consumption of coal.

The *Delta Metal Co. Ltd.*, supply their special corrosion-resisting 'Delta' propeller bronze for casting propellers and propeller blades.

(See also Section XXXVII, METALLURGY.)

Propeller Design.

As this is largely based upon experimental data it is impossible to give any reliable formula for designing propellers. The most generally recognised authorities on the subject are Froude in this country and Taylor in America, the results of whose experiments have been published in the form of series of curves in the Transactions of the Institution of Naval Architects (of Britain) for 1892 and 1908 (I) and of the Society of Naval Architects and Marine Engineers (of America) for the year 1904. To these volumes therefore we refer the reader.

Metals for Marine Engines.

Delta Bronze Nos. I. and IV. alloys (see Index), Phosphor bronze, and Phosphor white lining metal No. II. are especially suitable for various parts of marine engines; the latter metal (phosphor white) has a higher fusing point than good Babbitt metal, thus allowing a bearing to heat without causing the metal to melt, a matter of some importance at sea.

Delta Bronze No. IV., a malleable bronze of great strength and tenacity, is specially adapted to replace steel in cases where a material of the highest corrosion-resisting qualities is desired. For this reason it is employed on a very large scale in the form of forgings or extruded or rolled rods, etc., for air and circulating pump rods, shafts, plungers, spindles, thrust block bolts and other parts of marine engines. For particulars of corrosion-tests, see page 252.

BULL'S
METAL & MELLOID CO.
LTD.,

Telegram Address: 'Melloid, Yoker.'
Post Office Telephone No. {183 Clydebank. 182 ,,

YOKER, nr. GLASGOW.

CONTRACTORS TO THE ADMIRALTY, WAR OFFICE, &c.



BULL'S METAL

Propellers,
Tail Shafts,

Pump Rods,
Valve Spindles,

Bars, Forgings,
Bolts, Nuts, Castings.

'MELLOID'

Condenser Tubes,
Condenser Plates,
Sheets, Plates,
Bars, Forgings,

Loco Fireboxes,
Boiler Stays,
Beater Bars,
Bearings, Glands,

Bushes, Axle Boxes,
Slide Valves,
Piston Rings,
Etc., Etc.

'White Metal B' for lining of Bearings, Eccentric Straps, etc., etc.

'Tempalto' for Metallic Packings.

F. 2058

BULL'S METAL & MELLOID CO.

LTD.,

Telegram Address: 'Melloid, Yoker.'
Post Office Telephones, No. { 183 Clydebank. / 182 " }

YOKER, nr. GLASGOW.

Bull's Metal Propellers

Combine the strength and toughness of mild steel with the resistance to corrosion of gun metal. Their adoption means a considerable increase in speed or saving in coal consumption. See our Catalogue.

Bull's Metal Bars & Forgings

Possess the mechanical properties of mild nickel steel with extreme resistance to wear and corrosion. See our Catalogue.

F. 2059

Phosphor-bronze sheet is superior to copper in withstanding the action of sea-water. In a comparative experiment made at Blankenberghe, lasting over a period of six months, between the best English copper and phosphor bronze, the following results were arrived at : the loss in weight due to the oxidising action of the sea-water averaged for copper 3·058 per cent., while that of the phosphor bronze was only 1·158 per cent.

For lining bearings, crank-pin bushes, and other parts, exclusive of crosshead bushes, the following alloy has been found to give good results after extended experience in hard ocean steaming :—12 parts tin, 1 part copper, 1 part antimony, mixed in the following way : 6 parts tin alloyed with 1 part of antimony, and 6 parts tin with 1 of copper, and the two mixed together. For lining crosshead brasses the following harder alloy has been found to give good results : 85 per cent. tin, 5 per cent. copper, and 10 per cent. antimony.

The *Eyre Smelting Co. Ltd.*, who have made a special study of bearing metals for marine engines, supply a particular alloy of white metal which is stated to give good results in the big end bearings of Diesel engines. For the small end bearings the company supply a mixture of phosphor bronze, which is largely used in this country and on the Continent.

Painting Ships' Bottoms.

Ordinary oil paints are not suitable for this purpose, particularly because the drying of each coat of oil paint takes a longer time than owners can afford to allow vessels to remain in dock ; besides, these paints possess little or no power to prevent fouling. The practice, therefore, is to use what are termed ' compositions,' which are usually applied in two coats.

The composition paints have to be used in combination. The anti-corrosive, as a preservative and insulating coating, should be applied when the bottom is well scraped and dried. The anti-fouling composition contains powerful poisons and can be applied almost immediately after the primary coating, and the vessel can be floated as soon as the painting is completed, although it is desirable to allow the compositions a few hours to harden before the vessel enters the water.

It is very important to remove all rust or scale on the plates, as when such is not done corrosion is likely to continue beneath the surface and will eventually throw off any paint that can be applied. The ingredients in the best compositions are very expensive and are consequently not used to any extent in the manufacture of the cheaper brands.

The careful *stirring* up of these compositions is an essential point too often overlooked. The more valuable ingredients are heavy, and tend to form a sediment at the bottom of the drums, which requires to be carefully worked up. Much also depends upon careful painting—a thing which is unfortunately very difficult to arrange for in many of the dry docks owing to hurried and inefficient work.

Concrete Vessels.

A concrete weighing but 110 lbs. per cub. ft. and having a crushing strength after 28 days of 4,000 lbs. per sq. in. has been employed in the construction of reinforced concrete vessels of large tonnage, in America, for the United States Government. The aggregate itself, although light and cellular in structure, is not porous. The lighter quality will actually float on water, and as a test the United States Shipping Board authorities kept an amount of aggregate floating in water for some months, and it was demonstrated that the absorption was very small.

The aggregate is made from clay, calcined in kilns in a similar manner to that employed in the manufacture of bricks, the fundamental difference being that the heat (about 2,000° F.) is applied in a comparatively short time of 30 hours. This relatively sudden application of heat causes the material to swell, forming a clinker. The clay may be pressed into bricks and partially dried and stacked in kilns in the ordinary manner, care being taken to provide sufficient room around the bricks for expansion during burning. The size of the brick adopted in the United States is $8\frac{1}{2}$ ins. by $4\frac{1}{2}$ ins. by $2\frac{3}{4}$ ins. During burning, the bricks run together and form a solid mass of clinker, which is allowed to cool for about 3 days, in order to ensure a high degree of toughness. The cooling of the material is then completed by water, which causes the mass to split into pieces suitable for handling, and it is also found that this greatly facilitates the unloading of the kilns. The material may also be calcined in cement rotary kilns, the clay in this case being pressed into lumps of suitable size.

After burning, the product is crushed to the desired size. During the operation a proportion of the lightest aggregate is reduced to dust. This, however, is used to take the place of the sand or crushed stone in ordinary concrete, the constituent parts being carefully selected and graded. Light pneumatic hammers are used to vibrate the shuttering during ramming, materially assisting the flow of the concrete around the steel reinforcement, and producing a dense and impermeable material.

A number of reinforced light concrete oil tankers and cargo steamers of 7,500 tons deadweight have been under construction in various parts of the United States. These vessels are 434 ft. long. (*W. L. Scott, ' Engineering.'*)

When wood is used as a reinforcing material for concrete it should be impregnated with magnesium chloride, and the wood must be so placed that any change in the cross-sectional area does not affect the durability of the structure. If the latter precaution is overlooked the concrete may crack. Small strips of wood are better than larger ones, and rushes appear to be excellent for the purpose, especially for thin-walled structures such as ships.

(Beton u. Eisen.)

LLOYD'S RULES FOR FERRO-CONCRETE VESSELS.

No definite rules have as yet been formulated, but in regard to the quality and testing of steel to be used for reinforcements these are the same as given in Section 3 of the Rules of the Society, for Steel Ships. The cement should comply with the requirements of a recognised standard specification for Portland cement or the equivalent thereto. In the matter of the preparation of the concrete, the proportions of the cement, sand, and aggregate have been left to the individual constructors to submit their proposals for the consideration of the Committee, as these depend to some extent on the local facilities for obtaining sand and gravel, the quality of which varies in different districts.

In the design of vessels to be built of ferro-concrete, it is considered that concrete is incapable of withstanding any of the main tensional stresses, and the steel reinforcements embedded in the concrete must therefore be of sufficient strength to take up all the tensional stresses produced in the structure due to strain from longitudinal bending.

LLOYD'S TENTATIVE REGULATIONS FOR THE APPLICATION OF ELECTRIC ARC WELDING TO SHIP CONSTRUCTION.

(Abstract.)

Before welding, the surfaces to be joined must be fitted close to each other.

All butt and edge connections are to be lapped or strapped.

With lapped connections the breadths of overlaps of butts and seams and the profiles of the welds are to be in accordance with the following table :—

Thickness of plate. Inches.	Width of overlap seam and butt. Inches.	Throat thickness. Inches.
·40 and under	$2\frac{1}{4}$	·28
·60	$2\frac{1}{2}$	·38
·80	$2\frac{3}{4}$	·48
1·00	3	·50

Intermediate values may be obtained by direct interpolation, and for thicknesses below ·40 the throat thickness is to be about 70 per cent. of the thickness of the plate.

See also ' Electric Welding ' Section XXXVII.

SECTION XXXIV

GAS AND GASWORKS—GENERAL PRINCIPLES GOVERNING THE SIZE AND CAPACITY OF APPARATUS—COMPOSITION OF VARIOUS GASES — CONDENSATION, PURIFICATION, STORAGE — RETORTS — TAR DISTILLATION—WATER GAS—COMPLETE GASIFICATION—CYANOGEN—BENZOL RECOVERY —SULPHATE OF AMMONIA—FLOW OF GAS IN MAINS—GAS TESTS—ACETYLENE GAS—PETROL AIR GAS.

(Contributed by Alwyne Meade, A.M.Inst.C.E., author of 'Modern Gasworks Practice.)

W. J. JENKINS & CO., LTD.,

RETFORD, NOTTS.

CONTRACTORS FOR EVERY DESCRIPTION
OF STRUCTURAL STEEL AND CAST IRON-
:: WORK FOR GASWORKS LANT, ETC. ::

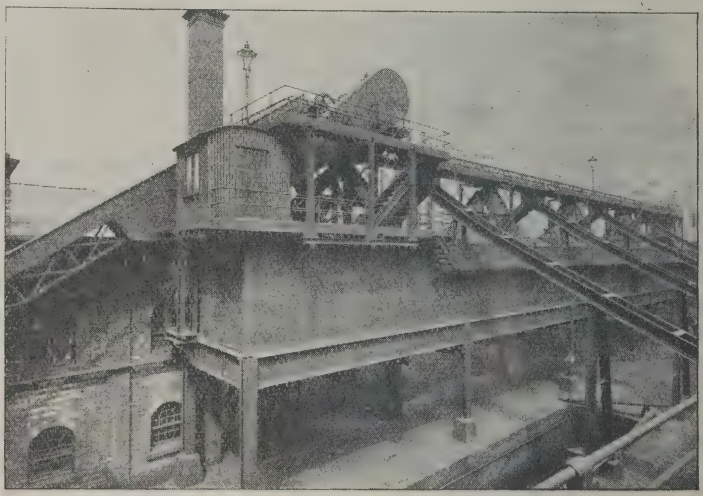


Illustration of Coke-Handling Plant constructed and erected by us.

Makers of—
D.B. Patent Hot Coke Conveyors, Simmonds Patent Anti-Dip Pipes, JENKINS D.B. Patent Projector Charging Machines and D.B. Patent Pushers.

Also Makers of—
Breakers, Tar Extractors, Washers, Fans, Wagon Tippers, Portable Conveyors and Elevators, Telpher Carriages, Revolving and Jigging Screens, Band Conveyors, Gravity Bucket Conveyors (fitted with D.B. Patent Chain) and Elevators, etc., etc., etc.

Telephone: Nos. 131 & 132 Retford Two lines.
London Office: 17 VICTORIA STREET, S.W. Tel. 2752 Victoria.
Telegrams: 'Jenkins, Retford.'

F. 2063

SECTION XXXIV

GAS AND GASWORKS—GENERAL PRINCIPLES GOVERNING THE SIZE AND CAPACITY OF APPARATUS—COMPOSITION OF VARIOUS GASES—CONDENSATION, PURIFICATION, STORAGE—RETORTS—TAR DISTILLATION—WATER GAS—COMPLETE GASIFICATION—CYANOGEN—BENZOL RECOVERY—SULPHATE OF AMMONIA—FLOW OF GAS IN MAINS—GAS TESTS—ACETYLENE GAS—PETROL AIR GAS.

(Contributed by Alwyne Meade, A.M.Inst.C.E., author of 'Modern Gasworks Practice.')

Parliamentary.

The public supply of gas in this country is governed largely by local Acts, but in general by the Gasworks Clauses Acts of 1847 and 1871, the Sale of Gas Act of 1859, and the Gas and Water Works Facilities Acts of 1870 and 1873, and most recently by the Gas Regulation Act (1920). London companies are, in addition, under the regulations of the Metropolitan Gas Act (1860). Under the Public Health Act of 1875, the local authority may become its own gas supplier, or may purchase an existing undertaking by agreement. Thus gasworks are controlled by—

(*a*) Statutory companies.
(*b*) Non-statutory companies.
(*c*) Local authorities.

The supply of gas in Scotland is, for the most part, in the hands of the local authorities. In England local authorities predominate as owners in the counties of Yorkshire and Lancashire, and in the North generally, but in the Home and Southern counties private ownership is the general rule. In addition to the Acts named above, the supply of gas in Scotland is governed by the Gas Acts of 1864 and the Burghs Gas Supply Acts of 1876 and 1893.

The obligations of the gas undertakings in the way of standards of quality were somewhat modified by an order made by the Minister of Munitions in June, 1918, as to the manufacture and production of gas, compliance with which order by the gas undertaking protected the undertaking from any forfeiture for failing to comply with its statutory obligations with regard to the illuminating power or the calorific power of the gas supplied, provided that in any event gas of a lower calorific power than 450 B.Th.U. gross was not supplied to the consumers.

In July, 1918, a measure—The Statutory Undertakings (Temporary Increase of Charges) Bill—was introduced and passed. The Bill, although it fell short of its objective, was designed to provide relief from the provisions of the Sliding Scale, provisions which had shown themselves to be particularly inequitable during abnormal conditions such as resulted from the European War. In effect, the Bill enabled any statutory undertaking adversely affected by circumstances arising out of the war to make application to the Board of Trade for permission to modify its charges to an extent not more than sufficient to enable it to pay a dividend on its ordinary stock or shares at three-quarters of the standard rate or one-half of the pre-war rate, whichever might be the lower. The decision was made applicable not only to gas undertakings but to other public utility services, namely, electricity, water, and tramways.

It may be said that a new era in the supply of gas was marked by the introduction of The Gas Regulation Bill. The commodity is no longer sold on a basis of cubic feet, but in terms of 'Therms.' In other words, the consumer now pays for the useful energy only, i.e. British Thermal Units; accordingly, the incombustible constituents in gas have no longer any commercial value. The standard 'Therm' is equivalent to 100,000 B.Th.U. Thus, if 10,000 cubic feet of gas are registered on the consumer's meter, and the 'declared' or normal calorific power of the gas is 500 B.Th.U. per cubic foot, then the number of B.Th.U. consumed is 5,000,000, or 50 Therms.

The main provisions of the Act are as follows:—

(*a*) The obligation to charge consumers on the heat unit basis.

(*b*) The adjustment of the 'standard' or 'maximum' price (on the heat-unit basis) to meet the additional expenses of manufacture and distribution arising from post-war conditions.

(*c*) Powers are given to the Board of Trade to limit the proportion of inert constituents in the gas, if thought fit; but the committee recently appointed to examine the question of incombustibles recommended that no limit should yet be imposed.

(*d*) There is an obligation to supply gas at 2 ins. water pressure in mains or services of 2 ins. diameter and upwards.

One of the most noteworthy provisions of the Act is the latitude which is given to gas undertakings in connection with the quality of gas supplied. The old standard of illuminating power has completely given way to calorific power, and the producer is permitted a free choice in the type of gas he distributes. He must, however, declare at what calorific power he is prepared to supply, consumers' appliances must be adjusted by him to consume the 'declared' variety of gas to the best advantage, and, in order to preclude excessive fluctuations in quality, certain penalties are imposed when the heating value falls below a prescribed limit. As regards the machinery for carrying on the Act, powers are given to the Board of Trade to grant facilities which in the past have entailed formal application to Parliament.

A non-statutory company operates as the result of established practice, or under the goodwill of the local authority. Its position is in many respects similar to that of a statutory company, but before opening roads for the laying of mains permission must be obtained from the district or county authority.

Consumption per Head of Population.

In the larger towns the average consumption of gas per head of population varies from 5,500 to 10,000 cub. ft. per annum. In smaller towns it ranges between 3,000 and 7,500 cub. ft. Gas-works statistics are, however, generally based on the consumption per consumer, which figure, for consumers through ordinary meters, approximates to 42,000 cub. ft. per annum, and 15,000 cub. ft. for those taking the gas through 'slot' meters. In addition, there will be an appreciable consumption for public lighting, and about 5 per cent. of the whole output will be written off as 'unaccounted for.' In straggling districts with long lengths of mains the latter figure may reach so much as 10 per cent. Taking the country as a whole, the average consumption per consumer at the present time works out at almost exactly 30,000 cubic feet (say 150 therms) per annum.

Capital Expenditure.

This item varies considerably in accordance with the size of the installation and the current price of labour and materials. In pre-war times, however, a concern promoted for the erection of a modern works with the accompanying distribution plant found it possible to complete the scheme for 600*l.* per million cubic feet sold per annum. For smaller country works, the outlay was very much greater, varying from 750*l.* to 1,000*l.* per million cubic feet, or even more. The following figures show the approximate capital outlay in 1919 (neglecting floating capital and nominal additions) in the case of representative companies:—

	Per million cubic feet. sold per annum.
Gaslight & Coke Company	495*l.*
Brighton	437*l.*
Derby	358*l.*
Birmingham (Corporation)	262*l.*
Manchester (Corporation)	583*l.*

It is a somewhat surprising fact that at the present day the expenditure on the district mains, etc., is generally rather greater than that laid out in the erection of the works. Of the total outlay approximately 55 per cent. will be expended on the district, 38 per cent. on the works, and the remainder on Parliamentary, promotion, and engineers' expenses.

General Rules relating to Capacity of the Apparatus, etc.

LAND

The area of land required for the erection of the works will amount to at least 2½ acres per million cubic feet of gas per maximum diem.


(NOTE.—The make of gas per maximum diem is calculated by dividing the total annual production by the factor of 240.)

RETORT HOUSE.

Dependent upon the size of the unit, i.e. the number of retorts set in each arch or section. The make per retort per 24 hours for different types of units is given in the following table:—

STOP-ENDED OR 'SINGLE' RETORTS.

	Cub. ft. per diem.
Length 9 to 10 ft., section 15 ins. round	3,000 to 4,000
,, 10 ft., section 16 ins. round	4,000 to 5,500
,, 10 ft., section 21 ins. by 15 ins. dee	7,000 to 8,500
,, 10 ft., section 22 ins. by 16 ins. dee	

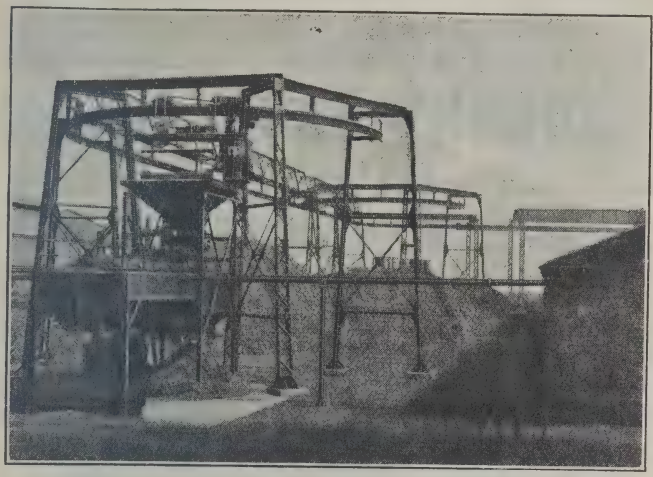

ROBERT DEMPSTER & SONS
LIMITED.

ELLAND, YORKSHIRE.

Designers, Manufacturers and Erectors of

HANDLING PLANTS

Comprising: Telpherage,
Conveyors and Elevators,
Screens, Ropeways, Hoists,
Cement Plants, Etc., Etc.

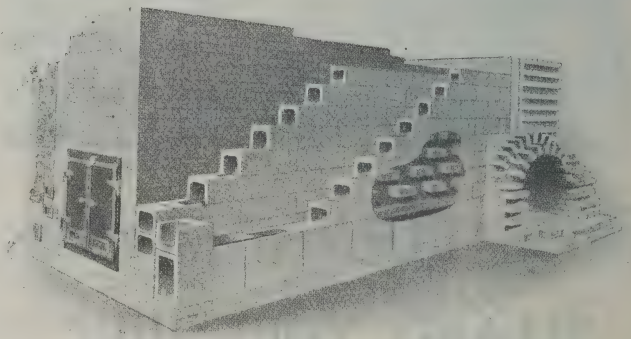
TELEGRAMS 'Dempster Elland.'
PHONES: 261, 262, 263 Elland.

Telegrams:
'GIBBONS, LOWER GORNAL.'

Telephone: 2150 DUDLEY
(3 lines).

GIBBONS BROS. Limited
DUDLEY

Constructional Engineers



SPECIALISING IN

GAS WORKS PLANT

Comprising Retort House Buildings complete, with installation. Retort Benches, Settings and Regenerators of every description. Charging and Stoking Machines (Guest Gibbons Patent). Elevators, Hoppers, and Conveying Machinery to suit any plant. Telpher Tracks and Runs. Gibbons and Masters' Patent ABC Tiles.

MUFFLES, FURNACES & OVENS

For Annealing, Case-hardening, Enamelling and General Heat Treatment for all kinds of Metals.

F. 2065

'Through' Retorts.

	Cub. ft. per diem.
Length 20 ft., section 24 ins. by 16 ins. dee	18,000 to 20,000
„ 20 ft., section 22 ins. by 18 ins. oval	18,000 to 21,000

A later development is the short 'through' retort, 12 to 16 ft. in length.

Vertical Retorts.

	Cub. ft. per diem.
Woodall-Duckham type	30,000 to 80,000
Glover-West type	25,000 „ 50,000
Intermittent type	12,000 „ 20,000
Glasgow type	31,500 „ 37,500
Chamber ovens	100,000 „ 120,000

The gas yield from vertical retorts is extremely flexible, very much depending upon the proportion of steam admitted.

(Note.—It is usual on gasworks to speak, not of the make per retort, but of the 'make per mouthpiece' per diem. As a 'through' retort has two mouthpieces—one each end—the make on this basis is half the retort make.)

Coal Storage.

In the present day, owing to uncertainty of delivery and such causes, it is advisable for gasworks to keep in hand much larger stocks than were thought necessary some years ago. No undertaking can now afford to risk three weeks' storage, although this is a usual and sufficient allowance for that kept under cover. When ground area is available large stocks may be arranged for out in the open. The calculation of the stock of coal in hand may be performed by assuming that one ton of average gas coal occupies from 42 to 43 cub. ft. For the convenience of dealing with stocks of other materials used on gasworks the following figures are given :—

One ton of coke occupies	85 cub. ft. (average).
„ „ broken coal occupies	40 „
„ „ cannel coal occupies	35 to 45 cub. ft. (varies considerably).
„ „ anthracite coal occupies	35 to 39 „
„ „ breeze occupies	60 to 65 „
„ „ lime occupies	42 „
„ „ oxide of iron (Dutch)	45 „
„ „ ditto (prepared)	41 „
„ „ sulphate of ammonia	47 to 48 „
„ „ ashes	50 „ (about).
„ „ Portland cement	23 to 26 „
„ „ loose earth	28 to 30 „

Condensers.

Water condensers are now largely used in preference to atmospheric types. Many of the latter kind are, however, still in use, and are not without their recommendations. Rules for condenser capacity vary to some considerable extent, and there is by no means agreement on the subject. The following are given as representing the average practice :—

Atmospheric condensers.—Allow 5 sq. ft. of atmospheric condensing surface per 1,000 cub. ft. of gas made per diem.

Water condensers.—Allow 3 sq. ft. of surface per 1,000 cub. ft. per diem.

In using the first of these two rules it must be borne in mind that the figure arrived at includes (in addition to the areas exposed by the actual condenser) the area of all piping between the outlet of the hydraulic main and the inlet of the condenser. In making calculations the actual surface to be considered is that with which the gas is in contact. Thus, when the gas travels inside a tube the interior surface must be taken, and when outside the exterior surface is considered.

Water condensers are of two distinct types :—

(*a*) Multitubular condensers.
(*b*) Water-tube condensers.

In the first type the gas passes through the tubes, which are surrounded by a water jacket. In the second type the water is within the tubes and the gas around them. As to which type is chosen depends entirely upon the conditions of working. When any deposit is likely to take place it is preferable to have this within the tubes which may be readily cleaned. Thus, when muddy water alone is available there should be no hesitation about adopting the water-tube type. On the other hand, when the gas dealt with is likely to be particularly dirty or to contain a large quantity of heavy tar vesicles the multitubular type is to be preferred. Condensers for carburetted water-gas are invariably of the water-tube type. As regards general dimensions the height of the apparatus should be from two to five times the diameter; 3-in. tubes are preferable for the larger condensers, but 2-in. pipes will suffice for those of smaller design. Th

ratio of the length of the tube to its diameter should be within the limits of 80 to 1, otherwise the tube loses in structural stability. In the direction of the number of tubes to be employed a good basis to work upon is that of arranging the tubes so that they occupy about 18 per cent. of the total area of the tube-plate. For water-gas condensers this may be increased to 25 per cent.

EXHAUSTERS.

In a works of from 4 to 6 million cub. ft. capacity per annum the saving to be effected by the installation of exhausters is problematical, after consideration has been given to interest on capital and running costs. Over six millions capacity the advantages of the machine are unquestionable. In the smaller works (from 15 to 20 million cub. ft. per annum) driving is nearly always carried out by means of a gas engine, the same engine providing power for operating tar, liquor, and other pumps. The effective hourly capacity of an exhauster is guaranteed by the makers. For the capacity of a four-blade machine, however, the following formula may be taken; it is not to be recommended when dealing with very large or very small exhausters:—

$$Q = 65D^2LN;$$

where Q = cub. ft. passed by the exhauster per hour; D = inside diameter of outer drum in ft.; L = length of drum in ft.; N = number of revolutions per minute.

This gives the gross capacity. To arrive at the nett capacity, about 20 per cent. must be deducted (for 'slip') from the figure obtained.

On the larger works it is usual to maintain a vacuum of about 4 ins. of water at the exhauster inlet. At the outlet, the pressure to be overcome varies in accordance with the resistance offered by the apparatus following and the quantity of gas passing at the time. As a general rule the total back-pressure may vary between 8 and 10 ins. on a small country works to as much as 50 ins. of water on the largest plants, but under average conditions the following pressures will approximate to those found at the different portions of the apparatus:—

Retorts	Level gauge.
Hydraulic main	½ in. to 1 in. vacuum.
Exhauster inlet	4 ins. vacuum.
,, outlet	30 ins. pressure.
Tar extractor, outlet	26 ins. ,,
Washers, outlet	24 ins. ,,
Scrubbers, outlet	22 ins. ,,
Purifiers, outlet	9 ins. ,,
Station meter, outlet	8·5 ins. ,,
Holder, inlet and outlet	8·5 ins. ,,

It will be seen from the above that the forcing of the gas through the dry purification material and the raising of the holder bell account for by far the greatest portion of the work against back-pressure which the exhauster is called upon to perform.

RUNNING SPEED.

The speed at which the exhauster operates should be gauged, not by a consideration of the revolutions performed per minute, but by the peripheral speed of the tips of the blades. This speed should be approximately constant for all sizes of exhausters, and should lie within the limits of 650 to 850 ft. per minute.

LUBRICATION.

This is a point requiring the most careful attention. Much depends upon the type of lubricant made use of, the best being a mixture of refined creosote and a mineral oil. These should be admixed in the proportion of one part of creosote to three parts of mineral oil. A vegetable oil should not be used, as this will tend to thicken the tar inside the drum.

In modern practice there is a tendency for the ordinary rotary blade type of machine to give way to the newer high speed turbo-exhauster working on the fan principle and providing large clearances. An advantage attached to this type of machine is that it has some considerable volumetric capacity per unit of floor-space occupied. The construction consists of an outer case provided internally with two or more impellers which rotate on a common axis, but in distinct cells. The gas is passed from cell to cell in series until it is discharged from the machine at the requisite pressure, the pressure obtained being dependent upon the size and speed of the impellers.

WASHERS AND SCRUBBERS

WASHERS.

The capacity of the wet purification plant depends very largely upon the type of apparatus employed, whether mechanical or merely static. Mechanical washer-scrubbers are now largely used, while of the static washers the well-known Livesey type has few rivals.

Rules for Capacity.—For washers of the Livesey and similar types allow one-seventh to one-fifth of a cubic foot capacity per 1,000 cub. ft. of gas passed per maximum diem.

For mechanical washer-scrubbers an allowance of one-half to three-quarters of a cubic foot capacity per 1,000 cub. ft. of gas per diem may be made.

Scrubbers.

Some works are provided with scrubbers of the tower type only, and have no separate washing vessels. In such cases the size of the scrubbers and their number may be based on the following rule :—

Allow 10 cub. ft. of capacity per 1,000 cub. ft. of gas dealt with per maximum diem. When the scrubbers are operated in conjunction with mechanical washer-scrubbers the above allowance may be reduced to from 5 to 6 cub. ft. When Livesey and such washers are employed prior to the scrubbers, the latter should have a capacity based on 6 cub. ft. of volume per 1,000 cub. ft. of gas per diem.

Washing and scrubbing capacity is greatly dependent upon the manner in which condensation is carried out. Extremely effective condensation will be the means towards reducing the usual wet purification allowances by nearly 50 per cent.

Horse-Power Required to Drive Washer-Scrubbers.

The following figures refer to the power necessary for the modern vertical type of machine. The horizontal machines of similar capacity will usually require one or two horse-power less :—

500,000 cub. ft. capacity per diem	4 H.P.
1,000,000 ,, ,, ,,	5 H.P.
2,000,000 ,, ,, ,,	7 H.P.
3,000,000 ,, ,, ,,	10 H.P.

It is advisable to allow a small margin (about 20 per cent.) above these figures for emergencies.

If the power employed is electricity, and this is obtainable for a halfpenny per unit, the cost of driving amounts to about 0·033*d.* per 1,000 cub. ft.

The ratio of the height to the diameter of tower scrubbers varies between 2½ and 5 to 1. In exceptional instances, however, it may be so much as 7 to 1, particularly in the case of scrubbers of small capacity. When the diameter becomes greater than 30 ft. the flat cast-iron top is inclined to sag. In such cases it may be found advisable to provide a domed top having a rise equivalent to one-sixth of the diameter, and made from steel.

As regards the material employed for packing, Livesey has given the following figures relating to the area of wetted surface exposed to the gas :—

	Sq. ft. per cub. ft. of Scrubber Capacity.
Coke	8½
Drain pipes, 3 ins. diameter	17
,, 2 ins. diameter	21
Boards on edge	31

Boards on edge, although expensive in the first instance, are to be preferred to any other type of packing. They conform to no hard and fast rule as regards size, but the following will afford satisfactory results :—

6-in. boards, ¼ in. thick, laid ⅜ in. apart.
11-in. boards, ½ in. thick, laid ½ in. to ¾ in. apart.

Water Required.

The amount of water required to effect wet purification depends very largely on the type of apparatus, but very variable results are found. As an average it may be taken that the water admitted to the final scrubber will vary between 10 and 13 gallons per ton of coal carbonised. At Salisbury Works it was found that with a modern form of vertical washer-scrubber the whole of the ammonia could be removed by admitting only 3¾ gallons of water per ton of coal carbonised.

DRY PURIFICATION PLANT.

Capacity of the dry purifiers depends upon the extent to which purification is carried. Nowadays it is customary to remove sulphuretted hydrogen alone, but if lime purification (for the removal of carbon disulphide) is resorted to it is advisable to employ rather larger vessels. It is always as well, however, that the vessels should be too large rather than too small, for the first cost increases but slowly as compared with the capacity, and purification charges undergo considerable reduction as the unit capacity becomes greater. For oxide boxes the following rule may be taken :—

For a set of four purifiers allow *for each box* an area of 0·5 sq. ft. per 1,000 cub. ft. of gas to be dealt with per maximum day. If lime is to be used this figure should be increased to 0·6 sq. ft., or 0·65 to 0·7 if no catch boxes are available.

Hunt's rule for the total amount of purification space required, i.e. the combined area of all boxes, says that 20 to 30 sq. ft. per ton of coal carbonised per maximum day should be allowed.

As regards the purifying capacity of oxide of iron it may be taken that one ton will purify about two million cubic feet of gas before it is finally spent.

Purifiers are invariably square or rectangular in shape and are constructed from cast-iron plates bolted together. In one or two isolated instances reinforced concrete vessels have lately been experimented with.

As regards the necessary thickness of the cast-iron plates the following figures may be taken as indicative of the general practice :—

Purifiers up to 10 ft. square	$\frac{5}{8}$ in. plates.
,, ,, 20 ,, ,, ...	$\frac{11}{16}$ in. ,,
,, above 20 ,, ,, ...	$\frac{3}{4}$ in. ,,

The flanges are usually cast $\frac{1}{16}$ to $\frac{1}{8}$ in. thicker than the body. The smallest vessels are usually 3 ft. deep, while the largest sizes vary from 6 to 8 ft. in depth. The following rule is suggested for ascertaining the required depth :—

$$\text{Depth in feet} = \sqrt[4]{\text{Total superficial area} \times 1{\cdot}1}.$$

The depth as given may be taken to the nearest foot. For smaller purifiers, i.e. up to 300 sq. ft. in area, multiply by 1·3 instead of 1·1.

PURIFIER CONNECTIONS.

The diameter of the connecting mains is most readily and accurately computed from the following formula :—

$$\text{Diameter of pipe in ins.} = \sqrt{\text{area of each box in sq. ft.}}$$

For small purifiers (up to 60 sq. ft. area) the result can be taken as it stands, but for medium size boxes deduct 16 per cent., and for large vessels 25 per cent.

CONSTRUCTIONAL NOTES.

From the point of view of economy water-lute purifiers should be so constructed that the lute is portion of the side plate itself and not a distinct unit. This method of construction facilitates erection and is less costly in the first place. The depth of the lute is usually half the depth of the side plate, but the depth of water obtainable must in all events be sufficient to withstand the greatest pressure which is likely to prevail within the box. The covers of purifiers are invariably made from wrought iron or steel plates, usually about $\frac{1}{4}$ in. in thickness. They are either flat or slightly curved, but in either case some form of trussing or stiffening is necessary, and strong curbs should be provided when the vessel is of any size. In modern purifiers the water-lute principle is largely abandoned, and dry-luted covers are provided. These possess many advantages over the older method, chiefly in the direction of initial outlay, whilst they combine greater durability with increased safety. Moreover, owing to the lighter construction of the covers the lifting apparatus may be less cumbersome and costly. A gastight joint between cover and box is usually ensured by inserting a strip of rubber or tallowed hemp between the parallel flanges, the two flanges being afterwards pulled together by means of special fasteners or ordinary bolts.

For carburetted water gas purifiers the capacity allowed should be rather greater than is the case with purifiers used in connection with coal gas. A satisfactory allowance is 0·8 sq. ft. per 1,000 cub. ft. of water gas per maximum day.

STORAGE CAPACITY.

The holder capacity necessary is somewhat dependent upon whether or not the works is provided with a water gas plant. If such a plant is available the storage allowed for need not exceed 18 hours maximum make, but if there is no water gas to fall back upon provision should be made for 21 to 24 hours maximum production. In years gone by it was customary to provide considerably greater storage chiefly on account of the heavy fluctuations in output. The levelling up of the hourly load-curve has, however, had a marked effect in the direction of diminishing the quantity of gas kept in hand.

PROPORTIONS OF GASHOLDERS.

Single lift height = 0·3 to 0·4 of diameter.
Multiple lift height = 0·6 to 1·0 of diameter.

In computing the capacity of a holder the volume enclosed by the crown is neglected, as the gas contained therein is not available for distribution. Accordingly

$$\text{Capacity in cub. ft.} = \cdot 7854 \times \text{diameter in ft.}^2 \times \text{height in ft.}$$

With multiple lift holders the capacity of each lift should be estimated separately by applying the above formula to each section.

DEPTH OF LIFTS.

Each lift will be approximately of equal depth.

RISE OF CROWN.

The greater the rise the stronger will be the crown. The dome should conform to a segment of a sphere. Normally, the rise will range between $\frac{1}{5}$th to $\frac{1}{10}$th of the diameter, but when trussing is employed it may be less than when the plain crown only is used.

The cubic capacity of the crown space may be found from the following :—

$$\text{Volume in cub. ft.} = \cdot 5236\text{R}\left(\text{R}^2 + \frac{3\text{D}^2}{4}\right)$$

where

R = rise of crown in ft.;
D = diameter of top lift in ft.

The depth of each lift should never be less than one-seventh of its diameter, otherwise locking or tilting may occur. In general, the proportion varies between one-fourth to one-fifth of the diameter.

The crown sheeting of gasholders varies from 14 gauge to 10 gauge (about $\frac{5}{64}$ in. to $\frac{1}{4}$ in.), but much depends upon the size of the holder.

The side sheeting varies from 12 gauge to 10 gauge, but curb or cup and grip rows are thicker, $\frac{1}{4}$ in. to $\frac{3}{8}$ in. Top lift sheets are usually thicker than those of succeeding lifts, often about 8 gauge.

The thinner sheets of the bell are generally riveted up cold with $\frac{1}{4}$ in. rivets at a pitch of 1 in. to $1\frac{1}{8}$ in. All rivets above $\frac{1}{2}$ in. must be driven hot.

GASHOLDER TANKS.

Steel tanks have many advantages over the masonry variety, and cast-iron as a material for this purpose may now be looked upon as obsolete.

The thickness of plate required may be calculated as follows :—

$$\text{T} = \frac{\text{PD}}{2fe},$$

where

T = thickness of the plate in ins.;
D = diameter of the tank in ins.;
f = allowable working stress (usually $5\frac{1}{2}$ tons per sq. in.);
e = the efficiency of the vertical riveted seams. This will range up to 90 per cent. for large holders. For small holders it will vary between 75 and 85 per cent.;
P = the pressure due to the water in lbs. per sq. in.

The latter may readily be found from the following :—

$$\text{P} = \text{WD},$$

where

W = the weight of a cub. ft. of water = 62·4 lbs.;
D = depth below the surface of the section under consideration.

As regards the apportionment of the cost of gasholders, the following figures represent normal conditions :—

	Per Cent. of Total Outlay.
Bell, complete	35 to 45
Guide framing	18 to 23
Tank (steel)	35 to 45

Single lift holders (up to about 50,000 cub. ft.) cost in pre-war days from 25*l.* to 28*l.* per 1,000 cub. ft. If of the spiral type the outlay would be reduced by 25 per cent. Two lift holders (about 250,000 cub. ft. capacity) ranged from 16*l.* to 20*l.*; or, if spirally guided, about 10*l.* per 1,000 cub. ft. capacity. Holders varying from 2 to 3 million cub. ft. capacity cost from 9*l.* to 12*l.* per 1,000 cub. ft. The large 12-million holder at the East Greenwich Works cost five guineas per 1,000 cub. ft. capacity, whilst a $10\frac{1}{2}$-million holder at Manchester worked out at 5*l.* per 1,000 cub. ft.

CALCULATION OF PRESSURE THROWN.

The pressure thrown is dependent upon the weight of the floating portion and its diameter. It may be found as follows:—

$$\text{Maximum pressure (ins. of water)} = \frac{549W}{D^2},$$

where

W = weight of bell and water in lutes, in tons;
D = diameter of holder in ft.

When dealing with a multiple lift holder take the mean diameter.

Size of Works Mains.

No hard and fast rules are adhered to, but the following will form a guide as to the average conditions:—

Size of Works.	Suitable Size for Mains. Ins Diam.
3 to 4 million cub. ft. per annum.	5
6 to 10 ,, ,,	6
15 to 25 ,, ,,	8
30 to 45 ,, ,,	10
55 to 90 ,, ,,	12
100 to 150 ,, ,,	15
200 to 300 ,, ,,	18
350 to 450 ,, ,,	20 to 21
500 to 600 ,, ,,	24
600 to 900 ,, ,,	30

Composition of Various Gases.

Per Cent. by Volume.	Coal Gas.	Carburetted Water Gas.	'Blue' Water Gas.	Mond Gas.	Suction Gas.	Dowson Gas.
Hydrogen	49·0	35·0	52·0	26·0	16·0	20·0
Carbon Monoxide	9·0	32·0	38·0	15·0	34·0	24·0
Carbon Dioxide	2·5	4·5	4·5	12·0	3·0	6·0
Methane	27·0	13·0	1·0	3·0	nil	1·0
Heavy Hydrocarbons	4·0	10·0	nil	nil	nil	nil
Nitrogen	8·5	5·5	4·5	44·0	47·0	49·0
Candle Power	14·0	18·0	nil	nil	nil	nil
Calorific Power, B.Th.U. gross	550	580	300	165	160	155

Composition of Coal and Coke.

Per Cent.	Anthracite Coal.	Average Gas Coal.	Average Gas Coke.
Carbon	94·0	80·0	88·0
Hydrogen	2·5	5·5	0·2
Oxygen	0·25	8·8	traces to 3·0 (varies considerably)
Nitrogen	0·5	1·5	2·0
Sulphur	0·5	0·8	1·0
Ash	2·25	3·4	5·8
Calorific Power, B.Th.U.	15,500 per lb.	14,800 per lb.	13,500 per lb.
Volatile Matter	8 per cent.	30 per cent.	1 per cent.

Products of Distillation.

One ton of average gas coal will yield (approximately) the following products —

Gas (unstripped)	13,000 cub. ft. of 13½ to 14 candle-power.
Coke	13 to 14 cwts., including breeze.
Breeze	1 cwt.
Tar	9 to 11 gallons.
Ammoniacal liquor	32 to 40 gallons at 8 ozs.
Sulphate of ammonia	24 to 28 lbs.
Sulphur	5 to 7 lbs.
Cyanogen (HCN)	4 lbs.
Virgin liquor	10 to 12 gallons.

The yield of gas as given above is the normal obtained when benzol recovery is not practised.

(The sulphate of ammonia is obtained from the ammoniacal liquor, and not in addition to it. The virgin liquor is included in the figure given for total yield of ammoniacal liquor. The figure given for sulphur is that which may be recovered during purification of the gas, and does not include the quantity remaining behind in the coke.)

The approximate distribution of the elements of the original coal, and the manner in which each exists after the process of carbonisation, is illustrated in the following table :—

One ton of coal, consisting of :—	Lbs.
Carbon, 1,792 lbs., distributed as—	
Coke	1,385
Breeze	107
In gas, as CO and CO_2	30
In gas, as hydrocarbons	130
In tar	122
As scurf, cyanide, etc.	18
Hydrogen, 123 lbs., distributed—	
In gas and tar	98·5
As ammonia	1·0
As water	18·5
In coke	5
Oxygen, 197 lbs., distributed—	
In gas, as CO, CO_2, and combined in tar	49
As water	148
Nitrogen, 34 lbs., distributed—	
In gas (free)	11·8
In coke	14·1
In tar (combined)	1·0
As ammonia	5·8
As cyanogen (total HCN 4 lbs.)	1·3
Sulphur, 18 lbs., distributed—	
As gaseous impurities and in liquor	6
In coke	12
Ash, remaining in coke and breeze	76
Total	2,240

Amount of Coke Used as Fuel.

The quantity of coke used for heating the retort benches varies in accordance with the system of firing adopted. There are three types of firing now in common use, namely :—

(*a*) Direct-fired settings.
(*b*) Semi-gaseous settings.
(*c*) Gaseous-fired settings.

In addition, some works employ external producers, in which the producer gas is generated in a producer of special design situated away from the retorts, and forming a central source from which all the settings are supplied.

The following shows the amount used :—

	Per cent. of the original weight of coal carbonised.
Direct-fired settings	28
Generator settings	15 to 18
Regenerator settings	11 to 14
Vertical retorts :—	
(*a*) Intermittent types	16
(*b*) Continuous types	11½
Outside producers	13 to 16

With modern systems it should be possible actually to sell 10 cwts. of coke per ton of coal. See also ' Coke as Boiler Fuel,' page 1778.

Composition of the Producer Gas.

The following is the average composition under good conditions :—

	Per cent. by volume.
Carbon monoxide	25
Carbon dioxide	5
Hydrogen	6
Methane	1
Nitrogen	63

(Oxygen should be absent, for its presence indicates an excess of primary air.)

The analysis of the waste gases emitted from the retort setting should approximate to the following —

	Per cent. by volume.
Carbon monoxide	19
Oxygen	0·4
Nitrogen	80·6

(The presence of carbon monoxide in the waste gases is indicative of a deficiency of secondary air, and is wasteful in firing. The oxygen, if above 0·5 per cent., denotes an excess of secondary air.)

Gasworks Temperatures.

	F.°
Retorts	1800 to 2100
Ascension pipes	200 to 300
Foul main (inlet)	140
Condensers (inlet)	125
„ (outlet)	75 to 85
Washers and scrubbers (outlet)	60
Purifiers (inlet)	60
„ (outlet)	65
Holders	60

The modern combustion chamber temperature rarely, if ever, exceeds 2800 F.°. The prevailing temperature of the fuel-bed is in the neighbourhood of 1800 to 1900 F.°

Before the introduction of the regenerative system, one of the chief causes of the loss of heat arose from the escape of the waste gases of the producer at unnecessarily high temperatures. In such cases the normal temperature at which the gases are allowed to leave the settings is in the neighbourhood of 1700 to 1800 F.°, but by the transference of the sensible heat from these gases to the inflowing secondary air the temperature of the waste gases has, in the modern regenerator, been reduced to 600–800 F.° before their escape is permitted. In the ordinary way, the secondary air approaches a temperature of 1800 F°. before combustion.

Grate and Chimney Area.

The grate area of the retort bench producer must in all cases be ample, so as to ensure a steady travel for the air passing through the fuel. When the ordinary horizontal fire-bar grate is employed the recognised modern rule for grate area is as follows :

Allow one-tenth square foot of grate area for every lineal foot of retort in the setting. Thus, for a through setting of ten 20-ft. retorts, this gives a total grate area of 20 sq. ft. Another, but less common rule, is that which gives the allowance as 1 sq. ft. of area for every 8 lbs. of coke consumed by the furnace per hour. As the actual consumption of coke (which is shot into the producer hot) is somewhat difficult to compute, the rule is not readily applied.

The ordinary horizontal form of bar grate is now rapidly giving way to the sloping form of grate. The original sloping arrangement consisted of a number of flat plates placed progressively in the manner of a stairway, cooling being effected by a small stream of water which was permitted to drop from step to step. The latest development is the Grille grate, which is composed of a number of independent components set together so as to form an interlocking grille. The grate is made entirely from special cast iron, and embraces a series of hanger bars, which are hung from specially shaped cross-bars. When in the working position each hanger is automatically locked, so that it cannot be displaced during the process of cleaning the fire, while at the same time, should it be necessary to remove any one of the hangers, this may readily be done by applying a slight forward movement to the lower end. The grate is employed in conjunction with a supply of steam, and the formation of clinker is practically avoided, the inert matter coming down in the form of a fine dust.

The rule given above for grate area does not apply when grates of the sloping type are employed, for, owing to the more favourable conditions of the base of the fuel bed, the circulation of primary air is uninterrupted by layers of dead matter. With the Grille type of grate the following rule may be employed :—Allow 0·6 sq. ft. of sloping superficial area per 10 linea ft. of retort in the setting.

Flue and chimney area is calculated by allowing 1½ sq. ins. of area per lineal foot of retort in all those settings which depend upon the flues and chimney under question. Thus, if a retort bench consists of eight settings, each containing ten 20-ft. retorts, the area required would be 16½ sq. ft.

In large retort houses the height of the chimneys varies from 50 to 70 ft. The chief considerations to bear in mind are the heights of adjoining buildings, also the avoidance of down-draughts and the effect of shifting winds. It is not advisable to connect a chimney to a greater number of retort beds than ten, for above this number its dimensions become unwieldy. Circular chimneys, except for vertical retort installations, are now almost things of the past. The rectangular chimney with an external batter is most commonly employed. The batter usually varies between the limits of 1 in 36 to 1 in 40. Retort house chimneys are usually braced for their entire height ; the general methods being to run angle-iron up each corner, the angles being held in position by tie bands placed at intervals of about six feet. An inspection door should be left at the base of the shaft for cleaning purposes. As regards material of construction, stock bricks may be employed for the external courses, but a lining of fire bricks in the interior is essential. Very frequently the whole chimney is constructed from fire bricks, in which case no lining is, of course, necessary. The volume of gas drawn up a chimney increases in proportion to the square root of its height ; thus any increase in height produces only a comparatively small change in this respect. On the Continent it is occasionally found that a separate chimney is installed for each retort setting, but the idea is confined almost wholly to stop-ended settings. The construction of retort bench shafts should be such that the cross sectional area, in spite of the batter, is constant throughout the whole height. This may readily be arranged for by reducing the thickness of the brickwork from the bottom upwards.

Proportions of Horizontal Retort Benches.

The following normal dimensions are given as exemplifying the usual proportions of various types of retort houses and benches :—

(*a*) Single retort bench, 10-ft. retorts :—

	ft.	ins.
Width of bench	12	6
At back of bench	1	6
In front of bench	18	0
Total width inside house	32	0

The height of the retort house to the eaves would be 20 ft., and the height of the retort bench from ground level 11 ft.

(*b*) Through retort bench, hand charging and discharging—

	ft.	ins.
Width of bench	20	0
Each side of bench, 20 ft.	40	0
Total width of house	60	0

The height of the retort house to eaves, if house of the stage type, would be about 35 ft. ; if of the subway type 8 to 10 ft. less. The height of the retort bench from base of producers to top of brickwork about 20 ft., if retorts set in three tiers.

(*c*) Through bench, mechanical charging and discharging—

	ft.	ins.
Width of bench	20	0
Charging side of bench	23	0
Discharging side	17	0
Total width of house	60	0

The height of the bench from base of producers to top of brickwork would be about 25 ft. if retorts are set in five tiers. The height of the house (stage type) to eaves would be about 40 ft. if continuous coal hoppers overhead were included. As an approximate rule for ascertaining the height of the bench from charging floor to top of brickwork, allow 29 ins. for each tier of retorts. The width of the main setting arch will be, for two rows of retorts, from 7 ft. 9 ins. to 8 ft. 9 ins.; for three rows of retorts, 8 ft. 6 ins. to 9 ft.

RETORTS.

VERTICAL RETORTS.

Modern vertical retorts are of three types, namely, (*a*) continuous; (*b*) intermittent; (*c*) continuous-intermittent. The best known examples of the continuous type are the Woodall-Duckham and Glover-West systems.

Woodall-Duckham System.

Length of 5½ ton retorts is 25 ft. The shape of the retorts is rectangular tapered, their dimensions at the top being 4 ft. 3 ins. by 7 ins., and at the bottom 5 ft. 3 ins. by 18½ ins. Each retort will carbonise from 4½ to 5½ tons of coal per diem, and it is usual for two or four of them to be erected in one unit. The coke is extracted by a revolving rake device which makes one revolution in from 50 to 70 minutes, and the speed of extraction of the coke regulates the speed of inflow of coal at the top of the retort. The coke, after extraction, drops into a receiving hopper which is emptied about every three hours. The power required to drive the mechanical portion amounts to approximately 1·8 b.h.p. per ton of coal per maximum day.

Glover-West System.

In this case the retorts are elliptical in shape, having a taper towards the bottom. The length of the 9-ton retorts is 21 ft., and their dimensions at the top are 33 ins. by 10 ins., and at the bottom 39 ins. by 18 ins. Usually eight retorts are set in each unit, each retort being capable of carbonising from 3½ to 4½ tons of coal per diem. The extractor takes the form of a vertical spiral, and requires about 3 b.h.p. for its operation.

Intermittent (Dessau) System.

In this system the retorts are operated on the same principle as horizontal retorts, that is, they receive a definite charge which is entirely withdrawn and replaced by a fresh charge of coal at definite intervals. The length of the retorts is either 4 or 5 metres, and the 5-metre types are capable of carbonising about 22½ cwts. of coal per diem. The shape of the retorts is oblong with rounded corners, and their dimensions at the top are 21 ins. by 8½ ins., whereas at the base they are 27 ins. by 14 ins.

Recently the principle of steaming has been applied to the continuous systems of vertical retorts with extremely promising results. Blue water gas is thus generated *in situ*, and besides increasing the yield of gas per ton of coal carbonised, some noticeable augmentation of the liquor and tar yield has resulted. With Wigan Arley coal Mr. John West, M.Inst.C.E., has obtained the following results :—

	Cub. ft. of gas per ton of coal.	Calorific Value B.Th.U. (gross).	Total Units per ton.
Without steaming	12,834	572	7,353,883
With steaming	23,016	453	10,439,756

In a few instances, where gasworks are situated in a neighbourhood in which there is likely to be a demand for foundry coke, special chamber ovens have been introduced for carbonisation purposes. A notable instance is the Birmingham Corporation Gasworks, where a large battery of Koppers' ovens is in use. These ovens, laid horizontally, are 35 ft. in length, and have a rectangular tapered cross section. Their height is 8 ft. 10 ins., width at narrow end 18 ins. and at wide end 19½ ins. Each is capable of dealing with from 8 to 10 tons of coal per diem, and of yielding from 100,000 to 120,000 cub. ft. of gas. The distillation period continues for from 24 to 30 hours, and at Birmingham they are fired by means of external producers of the Mond type.

Fireclays as used on Gasworks.

(See Section IX., p. 427.)

Retort Bench Fittings.

The following may be taken as giving the approximate size of ascension pipes necessary with horizontal retorts :

Works making under 10 million cub. ft. per annum . . . 5-in. pipes.
" " between 10 and 200 million cub. ft. per annum 6-in. "
" " above 200 million cub. ft. per annum . . 7-in. "

The above refer to retorts having an ascension pipe at both ends. If a single pipe is used it should not be less than 8 ins. in diameter.

Joints for Ascension Pipes.

These must on no account be made with lead. Rust joints are to be preferred to any others, although they may entail no little labour when having to be cut out. To prepare the material for these joints, cast-iron borings should be damped down with gas liquor; the mixture is then rammed well down into the joint space. When the bench is at work the heat soon hardens off the joint. If borings cannot be obtained, a serviceable joint may be made from the following :

Ewell brick dust . . . . 1 part.
Slaked lime . . . . . 2 parts.

This is rammed into the joint dry, no moistening being necessary.

For the joints between the cast-iron mouthpiece and the fireclay retort the following may be used :—1 part of cast-iron borings to 2½ parts of fireclay. This mixture is then damped down with a solution of sal ammoniac. The amount of sal ammoniac required is about 1 lb. to every cwt. of the fireclay and borings. Ammoniacal liquor may be used in lieu of the sal ammoniac, but the latter is to be preferred, as a more complete rusting action is thereby set up.

Hydraulic Mains.

These are now of two types, i.e. :

(*a*) Distinct mains, one to every retort bench, on either or both sides.
(*b*) Continuous mains, one uninterrupted main extending over a number of settings.

The latter type have their advantages as regards initial cost, but distinct mains are otherwise to be preferred owing to the greater ease with which they are adjusted. In addition, by their use a single setting may be readily shut down and isolated.

The gas take-off from the hydraulics should be arranged from the cover of the box, rather than from the side, as is so frequently found.

Foul Main.

The size of the foul main must depend upon the combined areas of all pipes leading into it. Generally speaking, the following sizes are those prevailing, and which may be safely applied

Capacity of Bench per 24 hours.	Size of Foul Main.	
	If one.	If two.
30,000 to 100,000 cub. ft.	6 ins. to 9 ins. . . .	—
200,000 to 500,000 cub. ft.	12 ins. to 15 ins. . . .	—
1 million to 1¾ million cub. ft.	18 ins.	14 ins.
2 million to 3 million cub. ft.	24 ins.	18 ins.

Another rule is that which states that the foul main (if it delivers all the gas) should be 125 per cent. of the area of the main works connections.

The modern practice is to construct the foul main from lap-welded steel plates or solid drawn tubes in lieu of cast-iron pipes. When steel is used, however, some form of expansion joint should be introduced, for the main is liable to undergo some considerable expansion when the settings are fired up from cold. With the cast-iron main, the lead joints at the spigots will be sufficient to cope with any change of length, and flange joints should therefore be avoided unless some form of expansion joint is inserted.

Tar and Liquor Removal.

The method employed for removing the tar and liquor condensed out of the gas in the hydraulic main is of extreme importance, for if an efficient principle is not employed endless trouble results in the shape of pitched-up hydraulics, stopped ascension pipes and tar mains, and considerable loss of ammonia. The tar-tower system has been regarded as one of the best methods and is a considerable improvement on the older systems. The objection to the tar-tower, however, is that it is not automatic in action, requiring periodical 'running-off,' during which process there is every possibility of temporarily unsealing the dip-pipes. The latest method, which eliminates the drawbacks of the tar-tower, is the 'Reflux' system, which is entirely automatic and may be left for weeks at a time with no attention whatever. The system separates tar and liquor while hot, and by means of a compressed gas installation it effects the continuous circulation of hot liquor in the hydraulics, which presents many advantages from the point of view of practical working.

Retort House Governors.

The retort house governor is a more or less essential auxiliary of the modern retort house. It differs from the station governor in that, whilst the latter is employed with the object of reducing pressure, the retort house governor is interposed for the purpose of reducing the intensity of vacuum created by the exhauster. Thus the governor ensures a constant vacuum in the hydraulic main, whatever the volume of gas coming away from the coal charges may be. The intensity of vacuum required is obtained by loading the bell on similar lines to those employed with the station governor. The best place for the governor is on the top of the retort bench, as close up to the end of each section of the foul main as possible, for it is not so sensitive when interposed at the inlet or outlet of the condenser as is occasionally found. By-passes should be fitted to the governor, for it will require cleaning out about every four months.

COMPARATIVE COST OF OPERATING RETORTS BY HAND AND MACHINERY.
(*Pre-war prices.*)

	Per Ton of Coal Handled.
Hand charging and discharging	2*s.* 6*d.* to 3*s.*
'Manual' machines	1*s.* 10*d.* to 2*s.* 2*d.*
Power machines (older types)	1*s.* 3*d.*
Projector and pusher	1*s.* to 1*s.* 2*d.*
Discharging chargers	10*d.* to 1*s.*
Inclined retorts	1*s.* 2*d.*
Vertical retorts (both types)	4*d.* to 6*d.*
Chamber ovens	1½*d.* to 3*d.*

Gasworks Conveyors and Elevators.

The formula given below may be taken as giving a useful guide as to the capacity of bucket conveyors:

$$\text{Capacity} = \frac{S \times B \times W}{96{,}768 \times P} \text{ tons per hour,}$$

where

B = capacity of buckets in cub. ins.;
S = speed of conveyor in ft. per minute;
W = weight per cub. ft. of substance carried (see page 2065);
P = pitch of buckets in ft.

The horse-power required to operate elevators and conveyors may be readily arrived at by adopting a coefficient of friction in accordance with the conditions under which the machine is working.

Let
M = the weight of material carried in lbs.
W = the weight of the moving parts in lbs.
K = the coefficient of friction.
S = the speed of the conveyor or elevator in ft. per minute.

Then, for

(*a*) Vertical elevator

$$\text{H.P.} = \frac{M \times S}{33{,}000} + \frac{K \times S(M+W)}{33{,}000};$$

(*b*) Inclined elevator:

Let α° = the angle of inclination with the horizontal.

Then

$$\text{H.P.} = \frac{M \times S \times \sin\alpha^\circ}{33{,}000} + \frac{K \times S(MW)\cos\alpha^\circ}{33{,}000};$$

(*c*) Horizontal conveyor:

$$\text{H.P.} = \frac{K \times S(M+W)}{33{,}000}.$$

As regards the value of K, the following figures may be taken:

0·15 for metal sliding on metal;
0·07 to 0·8 „ „ (well lubricated)
0·25 for wood sliding on wood.

Purification of Coal Gas.

The purification of coal gas is carried out in two stages, namely, by means of wet purification in the washers and scrubbers and afterwards in the dry purifiers. During the wet purification of the gas the alkaline ammonia is made use of for removing a portion of the acidic impurities, sulphuretted hydrogen and carbon dioxide. The two last-named are, therefore, absorbed with the formation of certain salts, which are themselves soluble in water. The resultant solution

consists of water containing a certain proportion of these salts, and is known as ammoniacal liquor. In crude coal gas the ammonia content is usually in the neighbourhood of 1·5 per cent. by volume, and of this amount from about one-third to one-half will have been deposited prior to the gas reaching the wet purification plant. Hunt has given the following figures for the distribution of ammonia :

	Per cent. of total.
Ammonia removed by condensation	42·7
,, ,, first scrubber	43·3
,, ,, second scrubber	14·0

When gas containing carbon dioxide and sulphuretted hydrogen comes in contact with a solution of ammonia both acid and normal salts are formed. Thus we have :

(*a*) $2NH_3+H_2O+CO_2=(NH_4)_2, CO_3$ (normal) (*c*) $2NH_4OH+SH_2=(NH_4)_2S$ (normal) $+2H_2O$
(*b*) $NH_3+H_2O+CO_2=NH_4, HCO_3$ (acid) (*d*) $NH_4OH+SH_2=NH_4, HS$ (acid) $+H_2O$

Composition of Gas Liquor.

The ammonia present in gas liquor is combined in two distinct ways. In the first place it is present as easily decomposible compounds, such as carbonates and sulphides, and secondly, as more stable compounds which will only undergo decomposition by heating in the presence of a caustic alkali. In general, the final mixture of gas liquor obtained consists of from 75 to 80 per cent. of the more unstable salts, i.e. 'free' ammonia, whereas the remaining 20 to 25 per cent. is made up of the more stable salts, i.e. 'fixed' ammonia. The possible constituents of gas liquor are enumerated below, although it must be borne in mind that any one sample of liquor will seldom contain all of the compounds given. In fact, some of those included are only met with on rare occasions.

Water, containing in solution:

Ammonium carbonate ,, bicarbonate ,, carbamate ,, sulphide ,, hydrosulphide ,, cyanide ,, polysulphide	'Free' ammonia.
Ammonium chloride ,, sulphocyanide ,, sulphite ,, thiosulphate ,, sulphate ,, ferrocyanide ,, acetate	'Fixed ammonia.

Also phenols, amines, and other nitrogenous bodies.

The amount of ammonia in gas liquor is in reality quite small, and varies between 1·5 and 2 per cent. In general, it will be apportioned as follows :

	Per cent.
'Free' ammonia	1·2 to 1·6
'Fixed' ammonia	0·3 to 0·4

The following figures relate to sulphuretted hydrogen and carbon dioxide :

	Per cent.
Carbon dioxide in gas liquor	1·3 to 2
Sulphuretted hydrogen	0·1 to 0·6

The distribution of the total ammonia in gas liquor varies, of course, to some considerable extent. The following table, however, refers to the average solution :

	Per cent. of total ammonia.
Ammonium sulphides	6
,, carbonates	74
,, chloride	15
,, sulphocyanide	1·75
,, thiosulphate, sulphite, etc.	3
,, sulphate	0·25

The most effective manner of operating the washing and scrubbing plant is to ensure that the gas on first entering the apparatus is treated with the strongest liquor available. In each succeeding vessel the washing liquor employed becomes gradually weaker and weaker until, in the final scrubber, clean water should be employed. Where circumstances permit, it is preferable that the first washer should be operated with the liquor from the hydraulic main, for in this way both CO_2 and SH_2 may be considerably reduced.

The amount of water which must be added for the purpose of wet purification seems to vary to some considerable extent in accordance with the conditions prevailing. The writer has

found with Durham coal that the ammonia may be completely removed in ordinary coke-filled tower scrubbers by adding from 10 to 13 gallons per ton of coal carbonised. When mechanical washer-scrubbers are in use the quantity of water required will be considerably less, probably no more than 4 gallons per ton of coal.

Mr. Thos. Glover states that the liquor distributed per sq. ft. of cross sectional area of the scrubber should be 0·145 gallons per minute. This is less the quantity of clean water added to the final scrubber.

Ammonia Lost.

The quantity of ammonia lost in the direction of that permitted to go forward from the final scrubber may be conveniently calculated as so many gallons of 10 oz. liquor.

$$\text{Quantity of 10-oz. liquor lost per week (in gallons)} = \frac{\text{Total grains of ammonia passing forward from scrubber per week.}}{1{,}522}$$

Impurities in the Gas at various stages.

	Grains per 100 cub. ft.
Outlet of condensers—	
Ammonia	200 to 300
Sulphuretted hydrogen	600 „ 900
Carbon dioxide	900 „ 1,400
Sulphur compounds	35 „ 45
Hydrocyanic acid	60 „ 80
Naphthalene	20 „ 25
Inlet of purifiers—	**Grains per 100 cub. ft.**
Ammonia	nil to 1·5
Sulphuretted hydrogen	450 „ 700
Sulphur compounds	35 „ 45
Hydrocyanic acid	50 „ 70
Carbon dioxide	750 „ 1,150
Outlet of purifiers—	**Grains per 100 cub. ft.**
Ammonia	nil
Sulphuretted hydrogen	nil
Carbon dioxide	750 to 1,150
Sulphur compounds	35 „ 45
Hydrocyanic acid	nil „ 10

(The last three named above may all be removed, or partially removed, by the employment of special processes, but in the majority of gasworks such processes are not resorted to.)

Removal of Sulphuretted Hydrogen.

Sulphuretted hydrogen is now almost universally removed by means of oxide of iron in one of its forms. Natural ferric oxide (bog-ore) is still largely employed for the purpose, although in recent years various artificial preparations have found a good deal of favour, chiefly owing to their lower cost. The natural bog-ore is chiefly obtained from deposits in Holland, Belgium, and Ireland. In the dried state its composition varies between the following limits :

	Per cent.
Hydrated ferric oxide (Fe_2O_3, H_2O)	60 to 65
Organic matter	15 „ 25
Silica	3 „ 6
Alumina	1

The active material in bog-ore and artificial preparations is not actually the iron oxide, but the oxide plus a certain quantity of water of combination, i.e. a hydrated ferric oxide. In addition to this moisture the material as used should contain a further quantity of water, usually from 20 to 30 per cent. The artificial oxides are employed with a similar degree of moisture. The made-up or artificial material, if of good quality, is usually rather more active than the natural product, owing to a rather higher content of ferric hydrate, which may reach so much as 70 to 75 per cent.

Reactions during the Removal of Sulphuretted Hydrogen.

The absorption of SH_2 by the active oxide occurs in two distinct ways :

(*a*) $Fe_2O_3, H_2O + 3H_2S = Fe_2S_3 + 4H_2O$.
(*b*) $Fe_2O_3, H_2O + 3H_2S = 2FeS + S + 4H_2O$.

In the first instance ferric sulphide is formed, whilst secondly the result is ferrous sulphide and some free sulphur.

When spent and inactive the material is removed from the purifier and subjected to the process of revivification, or exposure to the air, when the sulphides are oxidised to oxides and the material is ready for further use. The following are the revivification reactions :

$$(a)\ 2Fe_2S_3 + 3O_2 + 2H_2O = 2Fe_2O_3, H_2O + 3S_2.$$
$$(b)\ 4FeS + 3O_2 + 2H_2O = 2Fe_2O_3, H_2O + 2S_2.$$

Oxide is generally laid in the purifiers on grids to a depth of from 8 to 10 ins. In some works, however, it is still customary to employ deep layers of as much as 30 ins. This is particularly the case in those purifiers in which hurdle grids are made use of.

A space of at least two inches should be left between the top of one layer and the base of the sieves or grids of the layer immediately above. Oxide as it becomes fouled increases in bulk, hence this precaution. Partial revivification *in situ* is nearly always arranged for in present-day systems. This is effected by admitting a small measured quantity of air to the purifiers along with the gas. The air may be taken from a small compressor and forced into the box, or may be injected by means of steam. In other cases it is sucked in with the gas through a pipe attached to the main on the inlet side of the exhausters. When air is admitted at some point prior to the washers and scrubbers it should not be overlooked that undesirable reactions may be set up in the wet purification plant.

It is generally understood that the material in any one purifier cannot simultaneously extract sulphuretted hydrogen and undergo revivification. The assumption is not entirely accurate, but the process of suphiding takes place at a very much more rapid rate than does the oxidation effect.

If the capacity of the purification plant is not ample the full effect of the admitted air will not be realised. For the most effective results a slight excess of air above that theoretically required (as determined from the SH_2 present) should be admitted.

When air is admitted to a purifier a rise in temperature of about 5 degrees Fahr. will usually be found as the gas passes from inlet to outlet. The air acts, of course, as a diluent, and therefore a careful check must be kept on the quantity admitted with the gas. As regards the effect of the air in this direction the following may be quoted :

Audonin and Berard found that 1 per cent of air reduces illuminating power by 6 per cent.

	Per cent.
2 per cent. of air reduces illuminating power by . .	11
3 " " " " . .	18
4 " " " " . .	26

Würtz has stated that

3 per cent. of air causes 15·69 per cent. loss in light.
5 " " 24·0 " "

Dr. W. B. Davidson, in more recent experiments, has found the following results :

			Per cent.
1 per cent. of oxygen		reduces candle power by .	8
1 "	"	" calorific power by .	1
1 "	nitrogen	" candle power by .	2·8
1 "	"	" calorific power by .	1
1 "	carbon dioxide	" candle power by .	3·5

Lime Purification.

Prior to the year 1905 lime purification for the removal of carbon dioxide and sulphur compounds other than sulphuretted hydrogen was in almost universal use. To-day, purification by this method is met with only in isolated instances.

Lime in the slaked condition is an active absorbent of sulphuretted hydrogen and carbon dioxide, and—after special treatment—is capable of removing carbon disulphide. The following reactions occur during the process of purifying by means of lime :

(*a*) Removal of carbon dioxide—

$$Ca(OH)_2 + CO_2 = CaCO_2 + H_2O.$$

(*b*) Removal of sulphuretted hydrogen—

$$Ca(OH_2 + 2SH_2 = Ca(SH)_2 + 2H_2O.$$

(*c*) Removal of CS_2.

It must be borne in mind that slaked lime in itself has no action upon carbon disulphide. The active medium which accounts for the removal of the CS_2 is now generally supposed to be calcium hydroxyhydrosulphide. This is prepared by sulphiding the slaked lime, in other words by admitting gas containing sulphuretted hydrogen to the vessels which are destined to

remove the CS_2. Carbon disulphide certainly cannot be absorbed according to the following equation, which has been so often set down as illustrating the reaction :

$$CaS + CS_2 = CaCS_3.$$

Veley has laid down the following theory as to the actual reactions which occur :

(1) Calcium hydrosulphide is formed in the first place—

$$Ca(OH)_2 + 2H_2S = Ca(SH)_2 + 2H_2O.$$

(2) By the addition of water or oxygen the hydrosulphide is converted into hydroxyhydrosulphide—

$$(a)\ Ca(SH)_2 + H_2O = CaOH,SH + SH_2$$

or

$$(b)\ 2Ca(SH)_2 + O_2 = 2CaOH,SH + 2S.$$

(3) The carbon disulphide and hydroxyhydrosulphide then react as follows :

$$(a)\ 2CaOH,SH + CS_2 = SH_2 + Ca(OH)_2,CaCS_3$$

or

$$(b)\ 3CaOH,SH + CS_2 + H_2O = 2SH_2 + Ca(OH)_2,CaCS_3.$$

When gas is manufactured and is to be freed from the whole of its impurities it is usual to instal a system in which oxide of iron and lime are used in conjunction. Many methods of operating for this purpose are employed, but one of the most common systems is that generally known as the 'Beckton' method. It consists in the main of four sets of purifiers operated in rotation :

First Set, Lime.—These remove the whole of the CO_2 and some SH_2, which is afterwards displaced by CO_2. Some CS_2 is also absorbed.

Second Set, Oxide.—These remove the whole of the SH_2, including any which may be displaced from the lime in the previous set.

Third Set, Lime.—This lime has been previously 'sulphided' and removes the bulk of the CS_2. It will not remove the whole of this impurity.

Fourth Set, Oxide.—These vessels remove any SH_2 which is disengaged from the third set.

Cost of Purifiers.

It is difficult to give any reliable figure, based on each 1,000 cub. ft. capacity, for the cost of purifiers, for everything is dependent upon the size of the vessel. The larger the box, the lower the cost per unit of capacity. As regards the distribution of the cost, the following is illustrative of normal conditions with a medium size installation :

	Per cent. of total expenditure.
Purifying boxes	50
Covers (dry lute)	15
Lifting apparatus	4 to 6
Grids	6 to 10
Connections and valves	20 to 30

Castings for the boxes, in normal times, cost from 10*l.* to 11*l.* per ton. The covers cost from 17*l.* to 19*l.* per ton. As regards valves, it is usual to base these per inch of diameter. The following figures are approximate pre-war costs :

	Per inch of diameter.
Ordinary rack and pinion valve	1*l.*
Centre valves	9*l.*
Weck's valves, and such types	10*l.* 10*s.*

Removal of CS_2 by Hot Purification.

Owing to the uncertainty and expense of lime purification for the removal of sulphur compounds other methods of effecting the same end have recently been introduced. The most important of these is the Carpenter-Evans system of hot purification, which is now in everyday use at some works. The principle of the process consists in converting the CS_2 into sulphuretted hydrogen, and then removing the latter by means of ordinary oxide of iron purification. The gas, after being purified from SH_2 in the usual way, is passed into special chambers containing a catalyst heated to a temperature of about 800°F. The CS_2 is thereby decomposed according to the following reaction :

$$CS_2 + 2H_2 = 2H_2S + C.$$

The catalytic agent employed consists of fireclay balls about 1 in. in diameter impregnated with nickel reduced from the chloride. The free carbon resulting from the reaction is left behind in the catalysing apparatus, and after about thirty days' run it is necessary to remove it. This is

carried out by the process known as 'aeration.' Air is pumped through the catalyser tubes at a definite rate, thus burning out the carbon and disposing of it as carbon dioxide. The aeration process on the larger plants usually occupies about one week, after which the apparatus is again ready for work. When starting and stopping special precautions have to be taken to ensure immunity from explosion. The effect of the process on the general composition of the gas seems to be but slight; as an instance the following figures, given by Dr. Carpenter, are quoted:

Analysis of Gas.	Before Treatment.	After Treatment.
CO_2, per cent. by volume	1·44	1·45
Heavy hydrocarbons	3·55	3·63
Oxygen	0·33	0·06
Carbon monoxide	8·16	8·03
Methane	26·85	27·26
Hydrogen	54·19	54·25
Nitrogen	5·48	5·32
Illuminating power	14·70	14·70
Calorific power (Gross, B.Th.U.)	590·0	594·40

The present-day cost of operating the Carpenter-Evans system of purification is shown in the following table:—

	Pence per 1,000 cubic feet.
Fuel (coke @ 42*s.* 6*d.* per ton)	0·2550
Conveying coke and cleaning producer	0·0240
Power	0·0129
Labour and chemical supervision	0·1180
Repairs and maintenance	0·1649
Capital charges	0·1967
Total	0·7715*d.*

Purification by means of Charcoal.

Mr. W. Gordon Adam has recently introduced a method for removing carbon disulphide and thiophen by passing the gas, after washing and scrubbing, through animal or wood charcoal in a granulated state. The impurities (including naphthalene) are afterwards removed from the charcoal in an unchanged condition by the application of heat, a temperature of about 300° C. being sufficient. After this treatment the charcoal is ready for further use, and is employed in a purifying vessel of ordinary construction. The prevention of ethylene absorption is effected by curtailing the quantity of charcoal used—in other words, by increasing the space-velocity above that at which ethylene is extracted.

Removal of Naphthalene.

During recent years it has become usual to employ special naphthalene solvents, to the action of which the gas is subjected before travelling to the district mains. Paraffin, water-gas, tar, and anthracene oil have all proved effective, particularly the latter. In general the gas will contain, if no special treatment is accorded it, from 6 to 12 grains of naphthalene as it leaves the works. Butterfield has pointed out that a million cubic feet of gas cooled from 68° to 50°F. may deposit about 14 lbs. of naphthalene. The introduction of carburetted water gas has to a certain extent lessened the naphthalene evil, although its effect in this direction is somewhat erratic. As regards the methods of washing with solvents, the most ready plan to adopt is that of treating the gas in a Livesey or mechanical washer just prior to its entering the holders.

Carburation with the aid of solvents was introduced by Botley, who injected, by means of a special spray, about 4 gallons of thoroughly atomised paraffin oil per million cubic feet of gas. Botley found that petroleum oil was more suitable for the purpose than spirits such as benzol. Leather made use of a creosote oil for washing the gas, but owing to the 'stripping' properties of this oil he took the precaution to pre-benzolise it first. The practice of Ferguson Bell is somewhat uncommon. The gas whilst in a warm state is washed with warm tar, and at the outlet of the wet purification plant it is further treated with a naphtha oil.

Recovery of Cyanogen on Gasworks.

Cyanogen is a subsidiary by-product which is only recovered on the largest of works. The maximum amount which can be obtained from a ton of coal is about 1½ lbs. of hydrocyanic acid, or about 10,000 grains. The processes now employed recover the hydrocyanic acid either as ammonium sulphocyanide or as sodium ferrocyanide (prussiate of soda). The most readily

applied method is that operating on the polysulphide principle. In this system the gas, prior to washing and scrubbing, is passed through a special vessel (of the nature of a small purifier) containing a layer of spent oxide of iron about 2 ft. in depth. Above the oxide material sprays are arranged around the box, and the oxide is periodically sprayed with water or weak cyanide liquor. The gas, containing hydrocyanic acid, passes upwards through the layer of oxide and comes in contact with the polysulphide solution trickling through the mass. The hydrocyanic acid combines with the ammonium polysulphide and yields ammonium sulphocyanide according to the following equation :

$$(NH_4)_2S_2+HCN=NH_4SCN+NH_4SH.$$

The spent oxide used in the process should contain about 50 per cent. of sulphur, and it is a surprising fact that although sulphur is required for the completion of the reaction the spent oxide, when removed from the vessel after working for about three months, shows little or no loss in sulphur, while occasionally some slight increase may be found. Accordingly, the process would be of a continuous nature were it not for the fact that the physical nature of the oxide gives rise, after a time, to excessive back-pressure, when the only remedy is the substitution of a fresh layer. Figures obtained in practice show that one ton of spent oxide is capable of removing the cyanide evolved from 350 tons of coal.

The Recovery of Crude Benzol.

While the 'stripping' of gas for the recovery of the aromatic series of hydrocarbons has been carried out in the case of coal gas produced on coke-oven works for some years, the practice has only recently been introduced in gasworks, primarily as a means of meeting the demand for certain essential war products. The coal gas, either in the semi-crude state (i.e. after the wet purification plant) or when completely purified, is subjected to washing with a solvent which absorbs the benzene hydrocarbons but which has no effect on the remainder of the constituents. The solvent employed consists usually of a coal-tar distillate known as 'green oil,' although other substances, such as creosote, blast-furnace oil, or crude petroleum, may also be employed. The oil, after having been in contact with the gas, is said to be benzolised, when it may contain up to 5 per cent. of benzene hydrocarbons, according to the extent to which 'stripping' is carried. The benzolised oil is then passed through a series of vessels comprising the distilling plant in which the benzene hydrocarbons, with some light naphthas and a small proportion of naphthalene, are driven off and separated from the wash-oil. The benzene vapours thus obtained are condensed and collected as a crude spirit, while the wash-oil, having been 'debenzolised,' is cooled and once more employed for treating the gas. In general, it is customary to recover from normal coal gas from 1½ to 2½ gallons per ton of coal carbonised, depending upon the amount of aromatic hydrocarbons contained in the original gas and the proportion of these which it is deemed advisable to extract. The crude spirit will vary in composition, but in general about 65 to 70 per cent. will distill over up to 120° C., and 80 per cent. up to 160° C. The portion which distills over will consist of about 80 per cent. of benzol and 15 per cent. of toluol, the remainder being xylol. The amount of wash-oil employed for extraction per ton of coal carbonised undergoes considerable variation in accordance with the taste of the responsible engineer. It may be said, however, that it should never be less than 60 gallons per ton of coal, while it may be so much as 100 gallons. Water in the wash-oil is strongly to be guarded against, and should never exceed 1 per cent. by volume if effective results are to be obtained. Temperatures play an important rôle in the process, and it may be said that the scrubber should never exceed about 70° F., and as regards the temperature of the debenzolised oil a good rule to observe is that of maintaining the oil about 5° F. above the temperature of the gas. Now that the demand for explosives has ceased many gas undertakings have discontinued the recovery of benzol.

Tar Distillation.

(Contributed by Harold Moore, M.Sc., A.I.C., F.C.S.)

The yield of coal tar depends very largely upon the volatile content of the coal; but, in addition, it is considerably affected by the design of the retort. Retorts in which heating is conducted gradually, and which ensure the rapid removal of the volatile products from the heat zone, yield the largest quantities of tar. The nature of the tar depends, to a slight extent, upon the type of coal used, but is much more seriously affected by the carbonising conditions. A rapid rise in temperature, with a high maximum temperature, tends to produce tar high in specific gravity, high in viscosity, rich in free carbon, and mainly consisting of aromatic hydrocarbons. Gradual heating, low maximum temperature, and rapid removal of the volatile products result in brown mobile tars, comparatively devoid of free carbon and rich in aliphatic hydrocarbons.

Horizontal retorts subject the coal to a very rapid heating with a high maximum temperature, whilst the volatile products have to pass along the heated retort walls, whereby they undergo cracking. The result is a viscous tar, rich in free carbon. Horizontal retort tars frequently

contain over 20 per cent. They possess a specific gravity of about 1·2. In continuous vertical retorts the coal is slowly passed from the cool zone into a hotter zone, undergoing gradual heating, whilst the volatiles are removed from the cooler end of the retort, and, therefore, are not so liable to undergo cracking. The resulting tar possesses a specific gravity of about 1·08, and about 1 to 5 per cent. of free carbon. Inclined retorts give products of intermediate composition; whilst coke ovens yield tars of very varied composition, depending upon the design of the ovens.

Special processes for the low-temperature carbonisation of coal, such as the Coalite and Premier Tarless systems, yield brown low-gravity tars in which free carbon is almost entirely absent. Gas works and coke ovens supply nearly all the tar produced in this country. Tar produced in gas works is accompanied by ammoniacal liquor, and requires settling out previously to distillation. The tar in distillation is usually divided into the following fractions in English distilleries:—

	Temperature.	Approx. Yield.
1. Crude naphtha	Up to 110° C.	3 per cent.
2. Light oil	110° to 200° C.	7 ,,
3. Crude carbolic oil	200° to 240° C.	7 ,,
4. Creosote oil	240° to 270° C.	15 ,,
5. Anthracene oil	270° to finish	10 ,,
6. Residuum of pitch	—	58 ,,

The finishing-point of the distillation is decided by the quality of pitch desired. The yields of the above products vary, of course, with the nature of the tars, horizontal retort tars yielding a residue of about 65 per cent. of pitch, whilst vertical retort tars give only about 50 per cent. of pitch. The benzene and toluene are mostly present in the crude naphtha fraction, the yield of benzene being about 2 gallons to the ton of tar. They are separated by distillation combined with washing with dilute alkali, which removes phenols, cresols, and other acidic bodies, followed by washing with dilute acid, which removes pyridine, quinoline, and other basic substances, and are finally refined by treatment with strong sulphuric acid, which removes certain sulphur-containing compounds and a portion of the unsaturated hydrocarbons originally present in the tar. Similar processes of refining are adopted for other fractions, though the strong acid treatment is usually applied only to the benzene, toluene, and solvent naphtha-containing fractions. The most common grades of these three distillates are sold under the names of 90*s.* benzol, 90*s.* toluol, and 90*s.* xylol. The 90*s.* benzol distils 90 per cent. of its volume at 100° C. by the tar distillers' retort test; 90*s.* toluol yields 90 per cent. at 120° C. by the same test; whilst 90*s.* solvent yields 90 per cent. at 160° C. The solvent fraction consists mainly of the three isomeric xylols. Naphthalene and anthracene are removed from the higher boiling fractions (naphthalene mainly from the carbolic oil fraction, anthracene from anthracene oil) by cooling and decantation, or by cooling and filtration.

The limiting temperatures of the fractions are liable to alteration, depending upon market conditions, whilst the distillation is frequently stopped at an earlier stage than that indicated in the above table, in order to yield a soft residue known as treated or refined tar, which is used for tar spraying on the roads. A soft finished residue is also frequently sold as pitch-creosote mixture, and used for the fuel market.

Benzol is mainly used for motor fuel, together with a considerable quantity of the toluol, though smaller amounts are employed in the synthetic chemical industry. Carbolic acid (phenol) and cresylic acid (cresols), obtained by alkali washing, both find their main market for the manufacture of disinfectants. Creosote oil is used for timber preservation and as fuel. The use of creosote as fuel is somewhat intermittent, depending upon the price of petroleum. Pitch is mainly used for road repairing, but also for many other purposes, a considerable amount being consumed for electric insulation.

WATER GAS.

Manufacture of Water Gas.

Water gas as now employed as an auxiliary to coal gas in gasworks is nearly always of the carburetted type, although in some instances the unenriched, or 'blue,' gas is admixed when the quality of the coal gas is above that normally manufactured. The composition of these two gases has already been given on pp. 1844, 2072. The reactions occurring in the generator of the water gas plant are as follows:

$$(a)\ C + 2H_2O = CO_2 + 2H_2.$$
$$(b)\ C + H_2O = CO + H_2.$$

The carbon dioxide produced in the lower portion of the fuel bed according to equation (*a*) is then reduced to carbon monoxide on passing through the remainder of the fuel bed :

$$(c)\ CO_2 + C = 2CO.$$

The extent to which the reaction (*b*) takes place depends largely upon the temperature prevailing in the lower part of the fuel bed.

As the above reactions are of an endothermic nature the heat of the fuel bed is gradually absorbed, accordingly this is replaced at intervals by the process of blowing. The reaction occurring during the 'blow' is of an exothermic nature, being simply as follows :

$$C + O_2 = CO_2.$$

All practical water gas plants are now operated on the intermittent principle of providing for short periods of a gasmaking 'run' and a 'blow.' In the more common carburetting plants the 'run' continues for 5 or 6 minutes, and is followed by a 'blow' extending for 3 or 4 minutes. In certain forms of plant intended entirely for the production of 'blue' gas the blowing period is generally of much shorter duration, lasting for about 70 to 90 seconds. The primary object of the 'blow' is to convert the coke direct into CO_2, thereby liberating the maximum quantity of heat, but this condition is never attained in practice, some CO being always present. This CO, in the enriching plants, is made use of for heating up the subsequent apparatus in which enriching takes place. In some of the later forms of 'blue' plants (in which no enriching vessels are required) the CO is employed for the purpose of raising the steam required during the 'run.' The average composition of the 'blow' gases issuing from the top of the generator is as follows :

Carbon monoxide	. . . .	17	per cent. by volume.
Carbon dioxide	. . . .	10	" " "
Nitrogen	. . . .	73	" " "

Traces of hydrogen, methane and sulphuretted hydrogen may also be found. The CO is at a maximum, and the CO_2 at a minimum, during the first minute of the 'blow,' and as the period proceeds the CO undergoes reduction while the CO_2 increases in quantity.

As regards temperatures the generator should, at the commencement of the 'run,' be worked up to 2,000F.° By the time that the 'run' is completed the temperature will have dropped by from 300° to 500°. Owing to this fact the quality of the water gas undergoes gradual deterioration from the commencement of the 'run' onwards ; thus at the end of the first minute of the 'run' the CO_2 content will only amount to some 2 per cent., whilst at the end of the fifth minute it may amount to from 7 to 8 per cent. The temperature of the carburettor and superheater varies in accordance with the type and quantity of oil in use at the time. Under normal conditions the following will apply :

Carburettor	1350 to 1400 F.°
Superheater	1400 to 1450 F.°

For the manufacture of carburetted water gas the materials required are given below :

Coke . .	35 to 41 lbs. per 1,000 cub. ft. of gas ;
Oil . . .	about 2½ gallons per 1,000 cub. ft. of 18 candle gas ;
Steam . .	27 to 30 lbs. per 1,000 cub. ft. of gas.

The cost of carburetted water gas is mainly influenced by the current value of the enriching oil utilised. To-day, blue water gas is a far more common and important product, so that many plants formerly utilised for producing carburetted gas are now employed for the production of blue gas only. The present-day cost of manufacturing blue gas is given below :—

BLUE WATER GAS: COST OF MANUFACTURE.

	Per 1,000 cubic feet. *d.*
Coke, for generator	9·0
Coke, for steam	3·0
Water, for steam	0·125
Wages	3·50
Maintenance	2·50
Purification	0·45
Establishment charges	1·00
Total	19·575*d.*
Cost per therm	6·5*d.*

WHEN YOU ARE CONSIDERING

COAL GAS
WATER GAS
HYDROGEN GAS
AND ALL APPARATUS
RELATING TO GASES
OR THEIR BY-PRODUCTS
FOR
COMMERCIAL USES
COMMUNICATE DIRECT TO
THE MANUFACTURERS

R. & J. DEMPSTER LTD.,
GAS PLANT WORKS
MANCHESTER.

F. 2084

AN AUTHORITATIVE AND COMPREHENSIVE MANUAL INDISPENSABLE TO ALL INTERESTED IN THE INDUSTRY.

Second Edition, revised and enlarged, Crown 4to, containing about 900 pages, with 500 illustrations. Price **£2 15s. 0d.** net.

MODERN GASWORKS PRACTICE

BY

ALWYNE MEADE, Assoc.M.Inst.C.E.

Engineer of the Wapping Works of the Commercial Gas Company. Formerly Lecturer in Gas Engineering and Allied Subjects to the London County Council and at the Regent Street Polytechnic.

SOON after the publication of the first edition some four years ago, 'Modern Gasworks Practice' established itself as the recognised standard reference book of the gas industry, not only in this country, but in America and on the Continent.

The first edition was rapidly exhausted and a new edition has been eagerly awaited for a long time. During the last four years the technique of gasworks methods has undergone nothing less than an upheaval, and it was necessary to await some semblance of quiescence in gasworks development before putting into permanent form new principles which might prove of but ephemeral interest. **So great have the developments been that it has been necessary completely to revise the greater part of the work and to increase its bulk by 50 per cent.**

The new edition, which contains nearly 900 pages and 500 illustrations, represents the most up-to-date and comprehensive treatise on the important subject with which it deals; and notwithstanding the fact that gasworks officials must to-day combine the qualifications of engineer, scientist, and administrator with a specialised knowledge of their primary subject, they will find every phase dealt with fully, clearly, and accurately in 'Modern Gasworks Practice.'

BENN BROTHERS LTD.,

'The Gas World' Offices, 8 Bouverie Street, London, E.C. 4.

F. 2085

The impurities in water gas consist of carbon disulphide and sulphuretted hydrogen, which are present in the following quantities :

	Grains per 1,000 cub. ft.
Sulphuretted hydrogen	110 to 120
Carbon disulphide	10 to 15

As regards water gas tar, S. Carter has given the following analysis :

Specific gravity	1·0665
	Per cent.
Benzol	1·11
Naphtha	2·33
Creosote oil	21·35
Naphthalene	4·09
Anthracene oil	15·91
Pitch	56·70

The Complete Gasification of Coal.

Now that the choice of the quality of gas to be distributed rests with the gas engineer instead of being stipulated by Parliament, some considerable impetus has been given to the process known as the complete gasification of coal. By this is meant the treatment of the coal under such conditions that no solid residue other than ash remains. Complete gasification may, of course, be carried out in two ways, namely, by treating the coal in two stages for the production, firstly, of straight coal gas, and secondly, of blue water gas in distinct plants, the two gases being subsequently mixed either in the crude or purified state. The alternative is to employ plant of special design in which the above two processes are carried out simultaneously.

From the standpoint of gas production, the two methods may be contrasted as follows :—

A. Dual Process.

1 ton of coal yields—		B.Th.U.
13,000 cubic feet of straight coal gas @ 520 B.Th.U. and 11 cwts. surplus coke.	=	6,760,000
11 cwts. coke yields :—		
20,500 cubic feet of blue gas @ 300 B.Th.U.	=	6,150,000
Total yield in gaseous form from 1 ton of coal.	=	12,910,000

B. Single Process.

1 ton of coal yields—		B.Th.U.
50,000 cubic feet of mixed gas @ 370 B.Th.U.	=	18,500,000

The composition of the gas obtained from the modern single-stage complete gasification plant is as follows :

	Per Cent.
Hydrogen	51·0
Carbon monoxide	30·0
Methane	8·0
Unsaturated hydrocarbons	1·4
Carbon dioxide	4·6
Nitrogen	5·0
Oxygen	trace
Yield per ton of coal (cubic feet)	50,000
Calculated calorific power (gross)	370
Therms per ton of coal	185

SULPHATE OF AMMONIA.

Average commercial salt contains :

Ammonia	from 24½ to 25½ per cent.
Equal to	
Nitrogen	20·2 to 20·8 per cent.
Free acid	0·4 per cent.
Moisture	2 to 3 per cent.

Materials required for the manufacture of 1 ton of sulphate of ammonia :

Liquor, approximately	3,400 gallons of 8 oz. strength.
Acid ,,	18 cwts. at 80 per cent. strength
Lime ,,	3 cwts.

The sulphate of ammonia recovered per ton of coal varies in this country between 24 and 28 lbs.

Equation for formation:

$$2NH_3 + H_2SO_4 = (NH_4)_2SO_4.$$

Gallons of liquor × ounce strength × 0·0823 = lbs. of sulphate.

CONCENTRATED LIQUOR.

The exigencies of the war were responsible for a new gasworks product in the form of concentrated and purified ammoniacal liquor. This product contains about 25 per cent. of ammonia, while the sulphuretted hydrogen is reduced to 0·5 per cent. by volume. The concentrated liquor is prepared by passing the ordinary liquor from the storage well through a desulphurising column in which the carbon dioxide and sulphuretted hydrogen are removed, the purified liquor being afterwards concentrated in a special still. With the war ended the majority of these plants have been shut down.

USEFUL MEMORANDA.

1 in. of mercury = 0·490 lbs. per sq. in.
1 in. of water = 0·0361 ,, ,,
1 lb. per sq. in. = 27·7 ins. of water.

A British Thermal Unit is the amount of heat required to raise 1 lb. of pure water 1° Fahr.; correctly, from 39·1° Fahr. to 40·1° Fahr.

A Calorie is the amount of heat required to raise 1 kilogramme of water 1° Cent.; correctly, from 0° to 1° Cent.

NOTE.—The above is the *large* calorie, which is the unit employed on gasworks.

1 British Thermal Unit = 0·252 calories.
1 Calorie = 3·968 B.Th.U.

CALORIFIC POWER OF VARIOUS SUBSTANCES.

	B.Th.U. per lb.		B.Th.U. per lb.
Coke-oven coke	14,436	Petrol, specific gravity 0·684	20,923
Peat, 5 per cent. water	9,900	Shale oil	18,217
Wood, pine	9,153	Blast-furnace oil	16,080
,, oak	8,316	Heavy tar oil	16,050
Petroleum, American	19,627	Coal gas tar	15,500
,, Texas	19,242	Alcohol, absolute	12,931
,, Russian	19,440		(*Lewes.*)

At normal temperature and pressure 32 cub. ft. of coal gas (14 candle power) weigh approximately 1 lb.

1 cub. ft. of coal gas (14 candle power) at N.T.P. weighs ·03125 lb.
1 ,, blue water gas ,, ,, ·0376 lb.

GASWORKS TERMS.

A barrel of tar	25 gallons	A fodder of lead	19½ cwts.
A butt of liquor	108 ,,	A hundred of deals	120 in number
(Usually 8 oz. strength)		A load of lime	32 bushels
A bushel of coal	80 lbs.	(A bushel = 70 lbs.)	
A bushel of coke	45 lbs.	A long thousand of slates	1,200 in number
A chaldron of coal	25½ cwts.	A seam of glass	120 lbs.
(Varies according to locality)		A short ton (American)	2,000 lbs.
A chaldron of coke	12½ cwts.	A tonne (French)	2,204·6 lbs.
(Varies according to locality)		A ton of freight	40 cub. ft.
A cord of wood	128 cub. ft.	A truckload of bricks	About 3,300 in number

VOLUMES OF OXYGEN AND AIR REQUIRED FOR COMBUSTION OF ONE VOLUME OF COMBUSTIBLE GAS.

Combustible Gas.	Oxygen.	Air containing 21 per cent. Oxygen.	Volume of Products of Combustion.
Hydrogen . .	0·5	2·38	1 vol. H_2O
Carbon Monoxide	0·5	2·38	1 vol. CO_2
Marsh Gas . .	2·0	9·52	1 vol. CO_2, 2 vols. H_2O
Ethylene . .	3·0	14·28	2 vols. CO_2, 2 vols. H_2O
Incomplete Combustion.			
Marsh Gas . .	1·5	7·14	1 vol. CO, 2 vols. H_2O
Ethylene . .	2·0	9·25	2 vols. CO, 2 vols. H_2O

Light Obtained from Various Burners.

Burner.	Candles per cubic foot per Hour.	Cost per Candle per Hour with Gas at 5*s.* per 1,000 cubic feet.
		d.
Flat Flame } Old-fashioned types . . .	2·0	·03
Argand } Old-fashioned types . . .	3·3	·019
Regenerative } Old-fashioned types . . .	10·0	·006
Incandescent (O Burner)	15·0	·004
,, Inverted	20·0	·003
,, Keith's High-pressure Inverted .	60·0	·0009

For high-pressure lighting the cost of compressing the gas only amounts to from 2½ per cent. to 4 per cent. of the total cost of the gas consumed, which is very small when it is compared with the extra light obtained.

With a water-driven compressor, from 250 to 300 gals. water are required per 1,000 cubic feet gas compressed to, say, 9 ins. pressure; with a gas-driven plant, 12·4 to 13·4 cubic feet per 1,000 cubic feet compressed to same pressure.

Compressing coal gas reduces the illuminating value until, with a pressure of 200 lbs. per sq. in., the loss is 16 per cent.

(See also ' LIGHTING, Section XXXV., Part III, p. 2137.)

Incandescent Burners.

The Bunsen burners used for incandescent lighting should give a flame with a green inner cone and not a violet one, so as to show that the proportion of air used for primary combustion is as large as possible. This ensures an intense heat in the flame, which intensity adds greatly to the light emitted by the burner. This intensity of flame is obtained in the high pressure systems, which are now becoming so general for street and shop lighting, by increasing the pressure of this gas to about 2 lbs. per sq. in., and when this is used with an inverted mantle of a much longer shape than the ordinary low pressure ones, the rush of gas at this high pressure at the nipple causes the full quantity of air required for combustion to be drawn in at the base of the burner mixing tube and so give a flame of the highest intensity. This flame only gives off the same heat per cubic ft. of gas as an ordinary Bunsen burner, but the heat is concentrated and the flame is much smaller. If the quantity of air induced by the current of gas into the mixing tube is 2½ times that of the gas there will be a lilac inner cone, and the hottest part of the flame will be about 2,800°F., and the mantle will then show about 20 candles per cubic ft. of gas consumed. If 3½ times of air are induced, a green inner cone will be noticed, and then the flame will be about 3,000°F., and 30 candle power per cubic ft. of gas obtained.

Products of combustion must be conveyed away and not allowed to enter at the primary air hole of the Bunsen burner. The air used there should contain the full proportion of oxygen to ensure proper combustion. Mantles must fit the flame, or, inversely, the flame must fit the mantle, as then it will be in the hottest part of the flame which is at the outside where the C in the gas is combining with the O_2 of the air to form CO_2 with the evolution of the heat. As the flame is hollow, if the mantle is smaller than the flame it will be in the cooler region of the flame where the gas is not being fully burned. Upright burners give their greatest light horizontally, inverted burners downwards. Shades for gas lights should be at 45° with the horizontal, not 60° or 70° as usually adopted, when very little light is reflected.

The best effects are obtained with burners which permit of the adjustment of both air and gas. These burners should be adjusted from time to time. The burner should be thoroughly cleaned out each time a mantle is fixed.

Incandescent Mantles.

Mantles are made from cotton, ramie, or artificial silk knitted into a 'stocking' or hose about 2 ins. in diameter. This stocking is thoroughly washed and dried. Then it is saturated with a solution of nitrate of thorium and 1 per cent. of nitrate of cerium. After the stocking has been washed and dried, it is either cut to proper size and impregnated with the thorium solution, or is first impregnated and then cut to the required lengths. The impregnated stockings, after being cut and dried, are sewed at one end with asbestos thread so as to form a head provided with a loop, which serves to hold the mantle in process of manufacturing and when in use on the burner. Then the impregnated stocking is hung on a wire by the asbestos loop, and heated in a gas flame of the Bunsen type. This is done in order to burn out the thread. The next process is called the shaping. The mantle now consists only of ashes of thorium (oxide of thorium), and is carefully held over a high pressure Bunsen flame, and gradually given the right shape, at the same time being hardened. As soon as the mantle is shaped and hardened it is practically completed, but in order to protect it from breakage it is 'dipped' in a stiffening solution. There are many forms of 'dip,' but the one most used is made of soluble cotton (gun cotton) dissolved in good alcohol and acetone. To this mixture castor oil and shellac are added.


Gas versus Electricity.

The inverted incandescent gas lamp requires 47 B.Th.U. per candle-power hour obtained. The one-watt electric lamp requires 54 B.Th.U., and the ½-watt lamp 31 B.Th.U. A considerable proportion of gas burners consist of the upright type, which are less efficient, requiring 82 B.Th.U. per candle-power hour. The average may be taken at 64 B.Th.U. per candle-power hour. High-pressure incandescent burners reduced the heat consumption to 23 B.Th.U. per candle-power hour and flame arcs in electric lighting use only 15 B.Th.U. At about 75 per cent. of full load a gas engine of the ordinary type would deliver to the consumer as actual or brake horse-power 11 per cent. of the heat used at the gasworks, while an electric motor would deliver, also as brake horse-power, only 6·8 per cent. of the heat used at the electricity generating station. The efficiency of the gas power production and distribution was thus over 1·6 times that of the electricity system.

(Sir Dugald Clerk.)

Gas Piping.

In the following diagram the point of intersection of consumption in cub. ft. per hour and length of pipe falls into an area indicating size of pipe for the work.

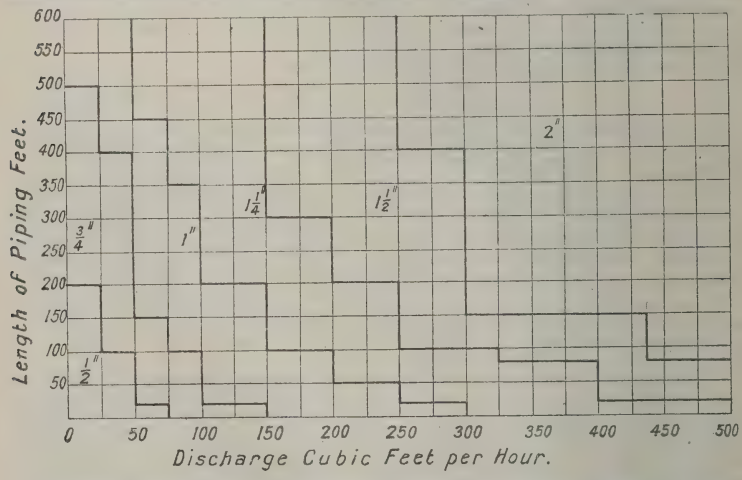

The diagram shows the size of pipe for the conveyance of a given quantity of gas. It is based on a fall of pressure between the extreme ends of the pipe of $\frac{3}{10}$-inch water gauge, and for

ordinary low-pressure gas supply it would not be desirable to have a drop greater than this. The diagram does not provide for piping smaller than ¼ in. because generally sizes smaller than this are only used for the branches to pendants or other apparatus consuming less than 25 cub. ft. per hour. Up to 10 cub. ft. per hour ¼ in. pipe is sufficient and for 10 to 25 cub. ft. ⅜ in.

WEIGHT OF WROUGHT-IRON GAS PIPES.

Bore in inches	¼	⅜	½	¾	1	1¼	1½	1¾	2	2½
	2½	2¾	3	3½	4	4½	5	5½	6	
Outside diameter	17/32	11/16	27/32	1 1/16	1 11/32	1 11/16	1 29/32	2 5/32	2⅜	2⅝
	3	3¼	3½	4	4⅜	5	5½	6	6½	
Threads per inch	19	19	14	14	11	11	11	11	11	11
	11	11	11	11	11	11	11	11	11	
Weight in lbs. per ft.	0·38	0·58	0·81	1·16	1·60	2·36	3·00	3·60	4·10	4·60
	5·33	5·84	6·33	7·16	8·05	9·08	10·17	11·49	12·57	

WEIGHT OF CAST-IRON GAS PIPES.

Bore, in inches.	Thickness of Metal.							
	⅜	½	⅝	¾	⅞	1	1⅛	1¼
	Lbs. per Lineal Foot.							
2	8·7	12·3	16·1	—	—	—	—	—
3	12·4	17·1	22·2	—	—	—	—	—
4	16·1	22·1	28·3	—	—	—	—	—
5	19·8	26·9	34·4	42·3	—	—	—	—
6	23·4	31·9	40·6	49·7	—	—	—	—
7	27·1	36·8	46·7	56·8	—	—	—	—
8	30·8	41·6	52·8	64·3	—	—	—	—
9	34·4	46·0	58·9	71·7	—	—	—	—
10	—	51·4	65·1	79·0	93·3	—	—	—
11	—	56·4	71·0	86·4	101·8	—	—	—
12	—	—	77·3	93·7	110·4	127·4	—	—
14	—	—	89·6	108·4	127·5	147·0	—	—
15	—	—	—	115·7	136·1	156·8	—	—
16	—	—	—	123·1	144·7	166·6	—	—
18	—	—	—	139·9	161·8	186·2	—	—
20	—	—	—	—	178·9	205·8	260·3	—
22	—	—	—	—	—	225·4	284·8	—
24	—	—	—	—	—	245·0	309·3	—

The weight of two flanges or one socket may be reckoned weight of 1 foot.

AVERAGE WEIGHTS OF GAS PIPE CONNECTIONS.

Internal Diameter.	Tees.			Collars.			Syphons.			Caps.		
	Cwts.	Qrs.	Lbs.	Cwts.	Qrs.	Lbs.	Cwts.	Qrs.	Lbs.	Cwts.	Qrs.	Lbs.
2	0	1	17	0	0	12	2	0	14	0	0	9
3	0	2	11	0	0	25	2	0	25	0	0	16
4	0	3	9	0	1	5	2	1	4	0	0	21
5	1	1	0	0	1	22	4	0	14	0	1	[illegible]
6	1	2	0	0	2	0	4	1	7	0	1	13
7	1	3	21	0	2	20	4	1	25	0	1	21
8	2	1	21	0	3	7	4	2	7	0	2	[illegible]
9	2	3	14	1	0	11	4	2	14	0	2	24
10	3	2	11	1	0	14	4	3	25	0	3	5
12	4	2	7	1	2	7	6	1	0	1	0	14
14	6	3	7	2	0	0	7	0	7	1	1	25
15	7	0	18	2	1	0	7	0	7	1	3	7
16	8	1	7	2	2	14	7	2	25	1	3	14
18	9	1	21	3	0	14	11	1	0	2	1	11
20	10	1	14	3	1	4	12	2	14	2	1	25
24	16	3	0	5	0	0	13	0	0	3	1	7

Flow of Gas in Mains.

Pole's Formula.

Let Q = the discharge of gas in cub. ft. per hour.
d = the diameter of pipe in inches.
p = pressure of gas in inches of water.
s = specific gravity of gas, air being 1.
l = length of pipe in yards.

Then

$$Q = 1350d^2\sqrt{\frac{p\,d}{s\,l}}\,;\quad d = \sqrt[5]{\frac{Q^2 s\,l}{(1350)^2 P}}\,;\quad p = \frac{Q^2 s\,l}{(1350)^2 d^5}\,;\quad l = \frac{(1350)^2 d^5 p}{Q^2 s}$$

Unwin's Formula for High Pressure Gas Mains.

Let D = diameter of pipe in ft.
S = specific gravity of gas (air being 1).
L = Length of pipe in ft.
P_1 = initial pressure in lbs. per sq. inch absolute.
P_2 = final pressure in lbs. per sq. inch absolute.
C = coefficient of friction $= 0{\cdot}0044\left(1+\frac{1}{7D}\right)$
U_1 = initial velocity of gas in feet per second.
U_2 = final velocity of gas in feet per second.
W = area of pipe in sq. ft.
Q = discharge in cub. ft. per hour.

Then

$$Q = 1{,}323{,}250\sqrt{\frac{P_1^2 - P_2^2}{P_1^2}\cdot\frac{P_1^2}{P_2^2}\cdot\frac{D^5}{CSL}}\,;\quad U_1 = 468\sqrt{\frac{D}{CSL}\cdot\frac{P_1^2 - P_2^2}{P_1^2}}\,;\quad U_2 = \frac{P_1}{P_2}U_1.$$

Table of Constants for Friction in Gas Mains.

Diameter of Main in Ins.	Diameter of Main in Ft. = D.	Area of Main in Sq. Ft. = W.	Value of C = Coefficient of Friction $= 0{\cdot}0044\left(1+\frac{1}{7D}\right)$
2	0·166	0·022	0·0082
3	0·250	0·049	0·007
4	0·333	0·087	0·0063
5	0·417	0·136	0·006
6	0·500	0·196	0·0057
7	0·583	0·267	0·00554
8	0·666	0·349	0·00537
9	0·750	0·442	0·00527
10	0·833	0·545	0·00515
12	1·000	0·785	0·005
14	1·166	1·069	0·00492
15	1·250	1·227	0·00488
16	1·333	1·396	0·00485
18	1·500	1·767	0·0048
20	1·666	2·182	0·00475
21	1·750	2·405	0·00473
24	2·000	3·142	0·0047

(Professor Unwin.)

Gas Pressures.

Generally, gas pressures (in a factory, for example) are sufficiently constant for the correct working of gas-consuming apparatus, but occasionally owing to piping being of insufficient size a variation in the consumption will cause a variation of pressure. The best remedy is to relay or supplement the piping in the building, but, as a temporary measure, governors can be installed on any apparatus which needs a fairly constant supply of gas. The Stott, Peebles, Tilley, Sugg, and Williams governors are typical of this appliance. They maintain a constant pressure on their outlet regardless of wide variation at the inlet.

Gas Meters.

Size of Meter.	Normal Capacity.	Safe Maximum Capacity.
Lights.	Cub. ft. per hour.	Cub. ft. per hour.
5	30	60
10	60	100
20	120	200
30	180	300
50	300	450
60	360	480
80	480	600
100	600	750
150	900	1,100
200	1,200	1,500
250	1,500	1,900
300	1,800	2,300
400	2,400	3,000
500	3,000	3,700
600	3,600	4,500
800	4,400	6,000
1,000	5,000	7,500

It is desirable that the normal capacity should not be exceeded for continuous working, as there will be some risk of the meter breaking down and the supply of gas temporarily stopped. If additional gas-consuming apparatus is installed a larger meter should, if necessary, be used.

GAS TESTS AS PRESCRIBED BY THE METROPOLITAN GAS REFEREES.

As gas is now sold on the 'Therm' basis, the determination of calorific power is the most important of the official tests. Illuminating power, however, is frequently required as a matter of interest rather than importance, and for this reason the test is given below.

(1) *Illuminating Power.*

Although calorific power is taking the place of illuminating power as a standard of quality, the latter test is still carried out in many instances.

This test is made by a photometric comparison between (*a*) a standard Argand burner called the Metropolitan Argand Burner No. 2, of which a part section drawing is given in fig. 1; (*b*) a standard flat-flame wing burner $\left(\text{Bray's } \frac{G}{L} \text{ 5 ft. } \frac{15}{10}\right)$ having a slit 0·028 in. wide, and a 10-candle power standard lamp burning a mixture of pentane and air. The standard lamp is shown in fig. 2. A is a receptacle subdivided by seven alternate partitions which do not extend the full width of the chamber; so that air, drawn in through the cock S_1, by means of which the supply is regulated, is caused to traverse the surface of the liquid, with which the chamber is filled to about two-thirds of its height, eight times. The mixture of gas and air passes through the cock S_2 to a burner B, consisting of a steatite ring pierced with thirty holes between 1·5 and 1·25 mm. in diameter. The flame is viewed through a mica window in G. Careful adjustments are made to regulate the height of the flame and the concentricity of the chimney D.

The pentane for the lamp is prepared and tested in the following manner:—Light American petroleum, such as is used for making air-gas, is rectified by three successive distillations, at 55° C., 50°, and 45°. The distillate is shaken up from time to time, during two periods of not less than three hours each, with one-tenth its bulk of (1) strong sulphuric acid, (2) solution of caustic soda. After this it is again distilled, and that portion which comes over between the temperatures of 25° and 40° is collected. This consists chiefly of pentane, with small quantities of other homologues the presence of which does not affect the light of the lamp.

The density of the liquid pentane at 15° C. should lie between 0·6235 and 0·626 compared with water of maximum density.

Any admixture with pentane of hydrocarbons having a higher photogenic value, such as benzene or amylene, must be avoided. The presence of these may be detected by the following test:—Pour into a stoppered 4-oz. bottle of white glass 10 c.c. of dilute nitric acid, specific gravity 1·32; add 1 c.c. of a dilute solution of potassium permanganate (1 gr. in 200 c.c.). Pour into the bottle 50 c.c. of the sample of pentane, and shake strongly during five successive periods of 20 seconds. If there is an admixture of as much as ½ per cent. of amylene or benzene, the pink colour will disappear.

The photometric comparison is made by producing equality in the illumination of a white paper screen by shifting the test burner nearer to or further from the screen; the result, after applying barometric and temperature corrections, is expressed to the nearest hundredth of a candle.

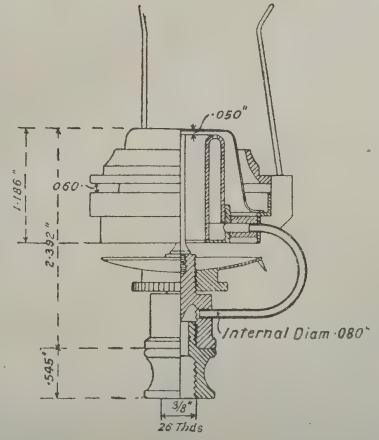


FIG. 1.

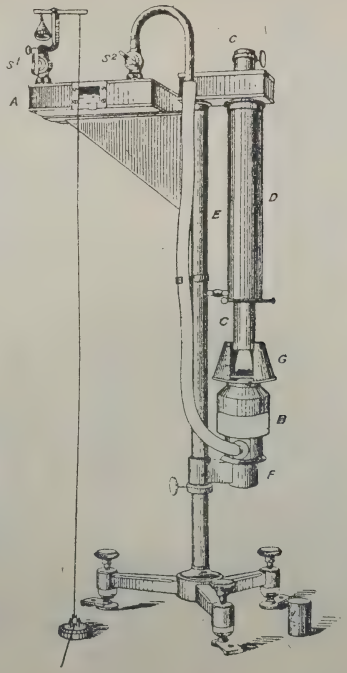


FIG. 2

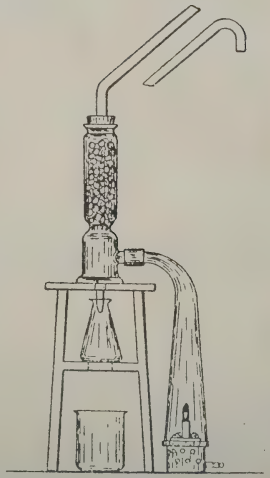


FIG. 3.

(2) *Test for Sulphuretted Hydrogen.*

The gas is passed through a glass vessel in which are suspended strips of bibulous paper moistened with a solution of 6·5 grams acetate of lead crystals in 100 c.c. water. The gas having been turned into the vessel long enough to sweep out the air, is ignited at the issuing orifice, and when it has burned for three minutes one of the slips is compared with a slip similarly moistened but not exposed to the gas. The gas is taken as exhibiting a trace of H_2S if the exposed is unmistakably darker than the unexposed slip.

(3) *Tests for other Sulphur Compounds.*

Ten cubic feet of gas is burned in a Bunsen burner at the rate of ·5 cubic foot of gas per hour. The stem of the burner is surrounded with about 2 ounces of sesquicarbonate of ammonia, and the combined products of combustion and volatilisation are collected by means of a trumpet

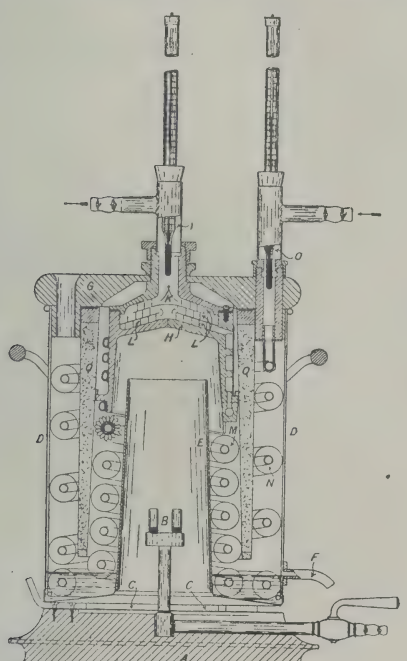


FIG. 4.

glass fitted over the burner and salt, an air-way being provided for the burner in the stand upon which it is placed (see fig. 3). The products are condensed as far as possible in the upper glass vessel, which, to aid the condensation, is filled with a number of glass balls about 15 mm. in diameter. The distillate, collected in a beaker placed beneath the bottom orifice of the condenser as shown, is poured, together with the washings of the trumpet and condenser, into a measure glass. A sample $\left(\frac{1}{n}\text{th part}\right)$ of the liquid is treated with hydrochloric acid in a covered beaker until there is an excess of acid, and then raised to boiling point; an excess of a barium

chloride solution is added, and the boiling continued for five minutes. After standing for a time, barium sulphate settles; the latter is filtered off and washed with hot distilled water, in order to remove all traces of ammonium and barium chlorides. (A sample of the washings is tested for this in a test tube with silver nitrate, the washing being continued until no cloudiness is produced by the nitrate.) The filter paper with the barium sulphate is heated in a weighed platinum crucible until the paper is removed. When cool the crucible is placed in a desiccator over strong sulphuric acid and again weighed. The number of grains of barium sulphate thus obtained, multiplied by $\frac{11n}{8}$ (n being the quantity of liquid under test as above), gives the grains of sulphur per 100 cub. ft. of gas. This figure is corrected for barometric and temperature variations as in the case of the illuminating power test.

(4) *Tests for Calorific Power.*

These are carried out by observations taken by means of the special calorimeter illustrated in fig. 4, in which water flowing at a calibrated rate is heated by a double burner consuming the gas at a rate of $\frac{1}{10}$ cub. ft. per minute. The calorimeter having been set up, the burners lighted, and the water flow adjusted, the heating is allowed to proceed for not less than half an hour. Four readings of the inlet thermometer and fifteen readings of the outlet thermometer are taken at periodic intervals, during which the discharged water is collected in a measuring vessel and the operation timed by means of a chronograph. The temperature of the air about the apparatus, the gas in the meter, and the effluent gas are also observed. The mean of the four readings of the inlet temperature is subtracted from the mean of the fifteen readings of the outlet temperature, and the difference is multiplied by 3 and by the number of litres of water collected. The product is divided by a tabular number.* The difference in degrees Centigrade of the temperature of the effluent gas and of the surrounding air divided by 6 is added to the result previously found if the effluent gas is the warmer of the two, or subtracted if the effluent gas is the cooler. The result is the gross calorific power of the gas in calories per cubic foot (c).

In addition to the foregoing, the amount of condensed water resulting from the combustion of the gas is measured. For this purpose the condensation water is led into a flask not less than 20 minutes after the calorimeter has been set up. The amount collected in not less than 30 minutes is measured, the time of collection being accurately noted on the chronograph. The number of cubic centimetres collected is multiplied by the number of seconds and by the number 1·86 (a). The number of seconds during which the condensed water is collected is multiplied by the tabular number (b). The first product (a) divided by the second (b) and subtracted from the gross calorific power (c) gives the net calorific power in calories per cubic foot. The gross and net calorific power in British thermal units is obtained by multiplying the corresponding numbers of calories by 3·968.

The meters used for these tests are of the 'wet' type, having a calibrated capacity of $\frac{1}{5}$ cubic foot per revolution of the drum. The drum carries an index-hand moving over a dial divided into 100 divisions, and the meters are provided with a thermometer for measuring the normal gas temperature.

ACETYLENE.

(Contributed by the late Professor Vivian B. Lewes, F.C.S., F.I.C.) Revised by Charles Bingham, C.E.

Acetylene, which is a gaseous compound of hydrogen and carbon, represented by the formula C_2H_2, is a colourless gas with a density of 0·92. As ordinarily prepared, it has a strong and very penetrating odour, but when purified from minute traces of other gases, invariably present with it in its crude state, has a not unpleasant ethereal odour. It can be converted into a liquid at a pressure of 21·53 atmospheres, at a temperature of 0° C., and liquefies under ordinary atmospheric pressure when cooled to a temperature of −82° C. The critical point of the gas is 37° C., and at this temperature the pressure has to be raised to 68 atmospheres for its liquefaction.

Acetylene is readily soluble in water, which at normal temperature and pressure takes up about its own volume of the gas; its solubility in other liquids is given in the following table:

100 Volumes of		Volumes of Acetylene.	100 Volumes of		Volumes of Acetylene.
Brine	absorb	5	Fusel oil	absorb	100
Water	,,	110	Benzene	,,	400
Alcohol	,,	600	Chloroform	,,	400
Paraffin	,,	150	Acetic acid	,,	600
Carbon disulphide	,,	100	Acetone	,,	2,500

* The tabular number depends upon the barometer reading and the normal temperature of the gas passing through the meter.

Many years ago experiments were carried out in this country with alcohol and petrol, which were enriched with acetylene, owing to the property possessed by these liquids of absorbing far more acetylene than their own volume. The object at that time was not so much to get a richer fuel, as to obtain easier starting of the single and two-cylinder cars then in general use. The results obtained with these enriched fuels (for which various patents were obtained in this country) were apparently quite satisfactory, but with the coming of the 4-cylinder and 6-cylinder cars, starting was rendered much easier, and the use of the enriched fuels disappeared.

Lately the high price of petrol has caused the use of acetylene for enriching liquid hydrocarbons to be taken up again, and in one country at least, alcohol enriched with acetylene is being pushed with considerable vigour.

Extended researches by Bistrow and Liebreich upon the toxic properties of acetylene show that it acts upon the blood in much the same way as carbon monoxide, but exhaustive experiments show that it is less poisonous than ordinary coal gas.

Acetylene forms compounds of an explosive character with copper and silver, and at first this was thought to be a great drawback to its general use ; but experience has shown that these fears were unfounded, and that brass gas fittings, when gas-tight, can be used with perfect safety.

When heated to a temperature slightly below its decomposing point, acetylene rapidly polymerises into a large number of other more complex hydrocarbons, amongst which have been identified benzene, toluene, naphthalene, anthracene, indene, diphenyl, fluorene, pyrene, and chrysene. When heated to a temperature of 780° C. it decomposes into carbon and hydrogen with the evolution of so much heat that the carbon is rendered incandescent and emits light, this being due to the fact that acetylene is one of the few bodies the formation of which is attended with the disappearance of heat ; it is for this reason termed an ' endothermic ' compound.

Experiments carried out lately by the French Acetylene Office have shown that, whereas, as stated above, polymerisation only takes place at a comparatively high temperature when the gas itself is heated in the way customary in the laboratory, it commences at a far lower temperature in the generating chamber of a commercial acetylene apparatus, when calcium carbide is brought into contact with water.

Polymerisation has been shown to start in the carbide chamber at as low a temperature as 135° C., or at not much above the boiling-point of water, while the heat liberated by the polymerisation itself sets up additional polymerisation.

These experiments are of the utmost importance, particularly as regards oxy-acetylene welding.

There are numerous acetylene generators in this country, in which the temperature in the generating chamber considerably exceeds 135° C., chiefly owing to the fact that the quantity of water fed to the carbide is not sufficient to carry off the very considerable amount of heat liberated when the carbide is decomposed to form acetylene.

The result in such cases is that a portion of the acetylene is polymerised—i.e. converted into gases, such as hydrogen, methane, etc., and even into tarry products. These other gases and tar have very little or no value for welding purposes, and on many occasions have even led to the welding being most unsatisfactory, although the expenditure in carbide, oxygen, and labour may have been far higher than it should have been.

In contact with air acetylene inflames at a temperature of 480° C. and burns with a flame which, when properly spread out so as to obtain a large quantity of oxygen, emits more light than any other gaseous compound of carbon and hydrogen.

Gas.	Candle hours per 5 cub. ft.	Carcel hours per cub. metre.	Gas.	Candle hours per 5 cub. ft.	Carcel hours per cub. metre.
Methane	5·2	3·5	Propane	56·2	40·0
Paris gas	13·3	9·6	Ethylene	70·0	49·0
London gas	16	11·5	Butylene	123·0	86·0
Ethane	35·7	25·0	Acetylene	240·0	168·0

Professor Clowes has shown that acetylene has a wider range of explosibility when mixed with air than any other combustible gas, the limits in percentages being as follows :

	Per cent.		Per cent.		Per cent.
Acetylene	3 to 82	Carbon monoxide	13 to 75	Methane	5 to 13
Hydrogen	5 to 72	Ethylene	4 to 22		

Acetylene is made commercially by acting upon a compound known as calcium carbide (CaC_2) with water, when acetylene gas is liberated and calcium hydrate (slaked lime, $Ca(HO_2)$) is formed.

Calcium carbide is made by fusing together very pure coke (or high-carbon anthracite coal) and very pure lime by the intense heat of the electric furnace. No other way of heating the mixture to the required temperature has yet been discovered, although many attempts have been made, for instance by the use of the oxy-acetylene blowpipe.

Acetylene generators, in which the interaction of the calcium carbide and water to generate the gas takes place, may be either automatic or non-automatic. In the former class, devices are used to stop the generation of the gas automatically, by cutting off the supply of water or the supply of carbide, thus doing away with the need of a large store-holder for the gas, whilst in the non-automatic class the action is allowed to continue until all the carbide is decomposed, the gas being stored in a holder from which it is used as required.

In making acetylene, water may be brought in contact with the carbide either by adding it to the carbide, or by adding the carbide to water.

The overwhelming majority of acetylene generators in practically all countries are now constructed on the water-to-carbide system.

Of late years the automatic type of apparatus for the generation of acetylene has almost entirely superseded the non-automatic type, owing to the very large quantity of acetylene now being required for the oxy-acetylene welding process.

Experience has shown that automatic generators can be constructed with a high factor of efficiency, while the capital outlay per unit of gas generated is considerably less than in the case of non-automatic apparatus.

Owing also to the much smaller space occupied by the automatic type, it has also been found much more convenient for private use.

The oxy-acetylene blowpipe has been most successfully used for a considerable time for case-hardening various parts of machinery, and in particular the gear-wheels and other parts of motor cars. Lately a most important development has taken place in this direction, the blowpipe having come into the most extensive use, not only for cutting and repairing rails, but for applying an exceedingly hard surface, to a depth reaching even the high figure of ¼ inch and more, to the entire rail system of electric tramways.

The improvement shown in the wearing properties of rails is shown by the following figures :

	Wear of rails in 12 months.		No. of cars
	Untreated.	Treated.	carried.
Bristol	0·045	0·0157	300,000
Liverpool . . .	0·030	0·0125	200,000

The rails are hardened *in situ*, without otherwise interfering with the track in any way.

Acetylene as obtained from ordinary generators contains a certain amount of impurities. The use of the acetylene blowpipe for welding high-class steels has shown more and more clearly the necessity for removing these impurities from the gas, a purification which can easily be effected by the use of such purifying materials as catalysol, heratol, etc.

One pound of commercial calcium carbide, when acted upon by water, yields on an average about 4·5 cub. ft. of the gas.

Before the war the price of carbide was about 12*l.* 10*s.* per ton, packages included. The price is now about 20*l.* in the United Kingdom, while it is still higher in many of the countries producing it, notably in Italy and France.

Dissolved Acetylene.

By an Order in Council issued in 1897 the compression of acetylene was made illegal, but further orders were issued in 1901 and 1912 exempting the process now known as 'dissolved acetylene.' This is acetylene thoroughly purified and washed, and compressed into steel cylinders previously filled with a porous mass and having a fixed quantity of acetone added. Acetone is a liquid hydrocarbon, having the property of absorbing 25 times its own volume of acetylene at atmospheric pressure and 15° C.

For each additional atmosphere of pressure, the same proportion of gas is absorbed, but an allowance has, of course, to be made not only for the volume occupied by the porous filling of the cylinder, but, in addition, in order to allow for expansion, so that it is customary to charge these cylinders with only 43 per cent. of acetone.

A cylinder will therefore in actual practice contain about 100 times its own volume at 10 atmospheres pressure and about 150 times at 15 atmospheres pressure.

In order to show the enormous capacity for storing light obtained in this manner, it may be mentioned that the standard oil-gas cylinder in use on railways has a capacity of 14 cub. ft. at atmospheric pressure. As the oil-gas is usually compressed to 12 atmospheres, this gives a gas volume of 168 cub. ft., which, if filled with oil-gas, will supply eight burners using 2 ft. per hour and burning eight hours per day, for about a day and a half. If this cylinder were filled with porous material and acetone in the manner described above, and charged with acetylene at 15 atmospheres, its capacity would be 2,100 cub. ft., or sufficient to supply eight acetylene burners of 1 cub. ft. each (giving a most brilliant light), for about thirty-three days (basing on eight hours' lighting per day), before the cylinders would require to be re-charged.

The possibility of obtaining acetylene in compressed form opens up a very wide field for the expansion of its utility.

The tests carried out by the Home Office Authorities before issuing the exemption order of 1901 were exhaustive, and furnished satisfactory proof of the safety attending the process of manufacture and the use of the cylinders.

Storage of Dissolved Acetylene.

Acetylene dissolved in acetone and stored, under a pressure not exceeding 225 lbs. per sq. in., in a vessel filled as completely as possible with some porous substance such as charcoal, is not deemed an explosive, and can therefore be manufactured, stored, and used without risk of infringing the Explosives Act.

(See also 1919 Order in Council, ' Dissolved Acetylene.')

Porous Material.—Various types of filling are in use and appear to give satisfaction. In this country the Kapok filling, patented by *Allen-Liversidge, Ltd.*, is chiefly in use. The porosity of the material should not exceed 80 per cent. The material should completely fill the receptacle, and should contain no pockets or cavities.

The Solvent.—Acetone is the most suitable commercial solvent, but substitutes for acetone could be permitted. The solvent should not completely fill the porosity of the material under any rise of temperature likely to be met with in practice.

Pressure Allowed.—The pressure can be 225 lbs., provided the cylinders used are of the solid drawn type, the pressure to be measured at 60° F. This increased pressure is only allowed for acetylene welded cylinders above 100 cubic feet in capacity if the construction of the cylinders is such that the strength at the top and bottom joints is not solely dependent on the strength of the welds at these points. This concession to acetylene-welded cylinders is made to expire after a limited period.

The Cylinders.—The cylinders should be made of mild steel containing not more than 0·25 per cent. of carbon and not more than 0·05 per cent. each of phosphorus and sulphur. The test pressure should be four times the working pressure, and should be maintained for not less than fifteen minutes. The use of oxy-acetylene welded cylinders should be discontinued as soon as possible, and, in the meantime, the ends of such cylinders should be made additionally strong by spinning them over. All cylinders should be annealed, but the use of fusible plugs, at present compulsory on acetylene cylinders, should be discontinued, as they are apt to become loose and, further, in the event of fire occurring, may actually lead to the fire being augmented.

It is not considered necessary to impose any conditions as regards the retesting of acetylene cylinders beyond requiring them to be thoroughly examined visually at intervals. The form of retesting to which oxygen and other cylinders are subjected cannot readily be applied to acetylene cylinders with their content of porous material and solvent.

Acetylene Lighting.

For the illumination of buildings, towns, and large areas by acetylene, generators of some suitable type are in general use.

Dissolved acetylene is used successfully from an economical and efficient point of view for many purposes where a constant supply of acetylene is required, and is particularly adaptable where space available for the apparatus is strictly limited.

In the matter of motor vehicle lighting it has been very extensively adopted. A cylinder containing acetylene absorbed in acetone under pressure and of convenient size is attached to the footboard or other suitable position on the car. Such a cylinder contains a sufficient supply of acetylene to meet the requirements for the lighting of the necessary lamps. The time for which the supply is available is variable according to the rate of consumption; the pressure of gas in the cylinder is reduced by an automatic governor or regulating valve, and the supply in the service pipes is maintained at a constant pressure to the lamps.

The standard automobile cylinders contain 20 cub. ft. and 40 cub. ft. of dissolved acetylene, and by the exchange system originated by the manufacturers it is possible for users to obtain refills at practically all important garages throughout the country.

Larger vehicles, such as motor omnibuses, mail vans, motor lorries, etc., may be equipped with outfits of larger capacity to meet the requirements of any particular case.

Another recent departure is the manufacture and circulation of cylinders containing dissolved acetylene of such capacity to meet the demands of motor cyclists. These cylinders are

standardised and contain 5 and 10 cub. ft of acetylene and, as with the standard cylinders for automobile work, they may be exchanged throughout the country.

For buoy and coast lighting dissolved acetylene has many advantages. The purity of the gas in this form, which is assured before compressing, gives the light increased brilliance and greater penetrating power, hence a shorter light period can be employed than with any other illuminant. Various special apparatus are in use, in which flashes of long or short duration are obtained by automatic means, the light being extinguished between the flashes instead of obscured (a small bypass burner remaining alight), thus economising gas. In some cases a flash of as short duration as one-tenth of a second is obtained, with perfect accuracy and flame. By means of this economical consumption and the great storage capacity of a comparatively small cylinder, a gas supply for periods as long as 12 months can be easily carried on a buoy, no attention being required until the gas is exhausted, when the cylinder is disconnected and replaced by a full one. The cylinders may be arranged in the form of a battery where larger consumption is involved.

Owing to the smallness of space required for acetylene in this form it is particularly adaptable for lighting railway coaches, yachts, and small craft. The effect of atmospheric temperature on the gas in this form is almost negligible, and other advantages are obtained by reason of the purity of gas and the elimination of handling carbide, water, waste and residue, and by the fact that the gas in this form can be stored indefinitely without deterioration.

The applications of this form of acetylene are ever increasing, and it has been recently applied with success to cinematographs, searchlight, signalling and projection work, where a small and compact plant consistent with efficiency is required.

The most recent application for illuminating purposes is that of its adoption for portable hand-lamps for mining and other similar purposes.

Lately acetylene buoys have commenced to displace other forms of coast-lighting to a very considerable extent. Such buoys take a very large charge of calcium carbide, usually one to two tons. They are entirely automatic, require practically no attention, and as they run for six to twelve months before requiring recharging, they form an exceedingly economical means of coast and harbour-lighting. Another great advantage is the fact that the light can be recognised at a much greater distance than that of the oil, or oil-gas, buoys previously used.

(See also pages 1352, 1354, 1360, and Section XLII, Lighting.)

PETROL AIR GAS.

(Contributed by E. Scott-Snell, A.M.S.E.)

Petrol gas is made by impregnating air with the vapour of petroleum spirit, this mixture being sent through pipes in the usual way for combustion with incandescent mantles. The essential features of an apparatus for producing this gas are an air compressor, a carburettor—in which the air and petrol are brought into contact—and a gas-holder from which the pipe service is fed. In automatic apparatus, i.e. machines in which gas is made according to the demand, the holder is also used as a governor for controlling the supply of air and petrol to the carburettor. The relative proportions of air to petrol are very important: in fact, upon the relation of these ingredients, and the constancy of this relation under varying load and climatic conditions, the success or failure of any apparatus must depend. As a mantle is used for light-giving, a flame is required at the burner which shall give the highest possible temperature, i.e. the amount of air mixed with the petrol vapour must be such as to completely combust it. With the more volatile spirit, mainly hexane (C_6H_{14}), used for making this gas, complete combustion is assured when approximately two volumes of vapour are mixed with 98 volumes of air. This is calculated from the typical equation $2\ C_6H_{14}+19O_2=12\ CO_2+14H_2O$ representing the combustion of the chief constituent of light spirit. At present, opinion seems to be divided as to the advisability of sending such a mixture—which from its composition is obviously an explosive one in a confined space such as a gas-holder—through the system. It is found, however, that when the percentage of vapour in the mixture exceeds 4½ per cent., e.g., a 5 per cent. or 6 per cent. mixture, the gas is incombustible without the addition of further air, and in the better class machines advantage is taken of this fact to make a slightly richer gas than 4½ per cent., diluting it with the extra air required for complete combustion by the aid of Bunsen burners.

The air-compressing apparatus of a petrol gas machine may be actuated by any motive power, but as the work of forcing the gas through the pipes is comparatively light, nothing more powerful than a hot-air motor or wound-up weights is usually required. In a good apparatus, the relative amounts of air and petrol are mechanically measured before passing to the carburettor, so that constancy of mixture is obtained under all conditions of temperature within wide limits. When other means are adopted, such as leading the air across a bath of petrol, selective evaporation takes place, producing erratic results, the make of gas varying with every change of temperature. In fact, attempts to make apparatus of this sort automatic almost inevitably end in failure.

Petrol gas is probably one of the safest lighting mediums known, by reason of the small compass over which mixtures of petrol vapour and air are explosive (1½ per cent. to 4½ per cent., c.f. acetylene 3·3 per cent. to 52·3 per cent., coal-gas 7·9 per cent. to 19·1 per cent.) and the fact that over 90 per cent. of the escaping gas from any leak is air. It is also non-asphyxiating.

The gas varies in calorific value according to the proportions of the mixture and the spirit used, but a 6 per cent. mixture from 0·680 sp. gr. petrol has a gross calorific value of nearly 300 B.T.U.'s per cubic foot. Although this is a comparatively low figure, cooking and heating can be efficiently performed with suitably proportioned burners.

One gallon of light spirit gives 5,000 candle-power hours (Lewes). With petrol at 1*s.* a gallon this is equivalent to 2·4*d.* per 1,000 candle-power hours. The Government tax of 3*d.* per gallon is remitted when petrol is used for purposes other than propelling road vehicles.

Petrol gas can be stored almost indefinitely over water, but since a small 'Bijou' mantle requires anything from 4 to 12 cub. ft. per hour (according to whether a 6 per cent. or 2 per cent. mixture is used) the storage of any reasonable quantity of the gas entails the use of very large holders. Hence the advantage of the weight-driven type of automatic generator.

Attempts are being made to effect economy by using the less volatile petrols of 0·720 to 0·760 sp. gr. for lighting purposes, such as are in general use for motor cars. The physical characteristics of these spirits, however, are such that they do not lend themselves readily to cold carburation, for either considerable quantities will pass through the carburettor unvapourised, or if heat is used to evaporate them, heavy condensation is unavoidable in the pipe service, which must necessarily be very carefully laid to provide for it.

An explosive (or 'weak') mixture in the pipes and holder is unavoidable if heavy spirits are used, since they are not sufficiently volatile to allow of the use of a 'rich' mixture. See also Scott-Snell on 'Petrol Air Gas,' Soc. of Eng. Journal and Trans., March 1911; Illuminating Engineer's Soc. Journal and Trans., February 1913.

Heating Value and Candle-Power of Petrol-Air Gas.

According to *The Snercold Engineering Co.*, as the result of tests of a variety of different brands and grades of petrol, the fair average heating value of a gallon of petrol is 143,500 B.Th.U., and the maximum candle-power hours that can be obtained under the best conditions is 6,025. The following table shows different mixtures in percentages of petrol vapour used; for calculation purposes the heating value has been taken as 143,000 B.Th.U., and the candle-power hours as 6,000 per gallon.

TABLE SHOWING VARIOUS MIXTURES OF PETROL-AIR GAS.

Mixture Percentage of Petrol Vapour.	Gallons per 1,000 Cubic Feet of Gas.	Heating Value B.Th.U. per Cubic Foot.	Cubic Feet of Gas to the Gallon.	Candle-power Hours per Cubic Foot.
6	2·184	312	458·3	13·104
5½	2·0	286	500	12·0
5	1·82	260	555	10·92
4½	1·638	234	612	9·828
4	1·4638	208	687·5	8·7828
3½	1·274¼	182	785·7	7·644
3	1·092	156	916·6	6·552
2½	0·91	130	1100	5·46
2	0·728	104	1375	4·368
1½	0·546	78	1833·2	3·276

The heating value of coal-gas varies from 420–550 B.Th.U.'s per cubic foot according to the source of supply.

THE SNERCOLD PETROL-AIR GAS PLANT.

In this plant a 5½ per cent. mixture is generated. The carburettor will vaporise petrol in very cold weather without the application of warmth; in it, the temperature of evaporation falls as low as 49° of frost (– 17° F.), which is well below the lowest winter temperature in this country; for this reason condensation is impossible with the apparatus. The arrangement extracts the moisture from the air, which is carefully kept from contact with water, and thus the air on carburation is dry; hence it always absorbs the correct proportion of petrol, and a uniform gas is produced without possibility of variation. The air cannot obtain more than the predetermined quantity of petrol, while from the design of the carburettor it must take all that is supplied. When no gas is being consumed the apparatus is entirely inactive.

THE WELLS LIGHT.



FIG. 5.

Wells Light (*A. C. Wells & Co., Midland Road, St. Pancras, London, and Manchester*), fig. 5, is a portable light, up to 3,000 candle-power, produced from oil spray blown horizontally; the flame is quite unaffected by wind or rain. The arrangement is self-contained, and the containing vessel can easily be charged with oil and air during working, while accessibility of all parts for cleaning, combined with strength and simplicity, are features of the lamp.

The most useful sizes are as follows:

		Ins.	Ins.
No. 0, 500	candle-power; size of tank	13½	× 9
„ 1, 500 and 1,500	„ „ „ „	16	× 10½
„ 2, 1,500	„ „ „ „	24	× 15
„ 3, 2,500	„ „ „ „	24	× 18

The Wells Light has been adopted by more than 26 Governments, for military and naval purposes, and also by the principal Railway Companies in England and abroad.

(For 'LIGHTING,' see Section XXXV., Part III.)

WELLS'

'LIGHTNING'
LIME & COLOUR WASHER

Wallwork and Wells' Patents.

OVER 8,000 SOLD.



TYPE No. 4A.
Larger and smaller sizes stocked

LIME, WHITING or COLD WATER PAINTS

applied at a speed of from 10 to 20 square yards per minute, in a manner superior to brushwork. One coat with the machine on rough surfaces is equal to two applied with brushes.

A GREAT SAVING OF TIME, LABOUR, AND MONEY.

Saves its Cost in a few days.

POWER PLANT SUPPLIED FOR DOPES, VARNISHES, AND OIL LEAD PAINTS.

WELLS' WASTE OIL FILTERS

With Patent 'Sight-feed' Syphons.

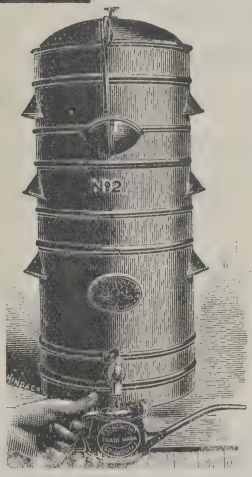
OVER 25,000 SOLD.

Money Savers to any Users of Machinery.

Pay first cost in a short time. Dirtied oil, which has hitherto been thrown away, can be filtered and used again and again.

Invaluable to all users of Machinery, Steam, Oil or Gas Engines.

MANUFACTURERS OF OIL STORAGE CABINETS.



A. C. WELLS & CO.

MIDLAND ROAD, ST. PANCRAS, LONDON.
Works - Carnarvon Street, MANCHESTER.

TO SAVE FUEL
PREVENT WASTE

REPORTS PREPARED. **ESTIMATES GIVEN.**

SUCCESS GUARANTEED

RECONSTRUCTION OF EXISTING PLANTS UNDERTAKEN

HEATING
VENTILATING
DRYING
HOT WATER SUPPLIES
COOKING AND
USE OF WASTE HEAT

BY THE MOST MODERN METHODS FOR PUBLIC & PRIVATE BUILDINGS

Sole Agents for 'TRANE' Heating Specialities for utilising Exhaust Steam

MUMFORD BAILEY & PRESTON

Heating Specialists and Engineers
22/23 CLERKENWELL CLOSE, LONDON, E.C. 1.

TELEGRAMS: 'EXHAUST, SMITH, LONDON.'
PHONES: CITY 517.

F 2101

SECTION XXXV

PART I

HEATING BY HOT WATER, STEAM, GAS, &c.—DRYING MACHINERY (pp. 2103-2125)

PART II

VENTILATION (pp. 2127-2136)

PART III

LIGHTING (pp. 2137-2146)

PART IV

FIRE EXTINCTION (pp. 2147-2150)

THE CENTRAL HEATING COMPANY LTD

HEATING
VENTILATING
HOT WATER SUPPLY
HUMIDIFYING
DRYING
DUST & FUME
EXTRACTION



COOKING
LAUNDRY
SANITARY
EQUIPMENT
FUEL ECONOMY
AND SMOKE
REDUCTION

INCORPORATING
J. F. PHILLIPS & SON.

LONDON
Denman St. S.E.1.

LEEDS
Mark Lane

BRIGHTON
Richmond Buildings.

Recent installations include
HOTEL CECIL, LONDON
8,000,000 B.T.Us.

F. 2103

SECTION XXXV

PART I

HEATING.

(Revised by J. Roger Preston, Member of the Council of the Institution of Heating and Ventilating Engineers.)

General.

The unit of heat or British Thermal Unit (B.Th.U.) is the heat required to raise the temperature of 1 lb. of water 1° F.; the unit of surface is the square foot; the unit of pressure is the pound per square inch; the unit of temperature is the degree Fah. Air may be expressed in cubic feet or in pounds weight, and Table A shows how these are convertible.

TABLE A.

Air Temperatures.	12°	22°	32°	42°	52°	62°	72°
Relative Volume of dry air at given temperatures (Volume at 32° F. = 1) . . .	·960	·980	1·00	1·02	1·04	1·06	1·08
Weight per cubic foot in pounds	·0842	·0824	·0807	·0791	·0776	·0761	·0747

NOTE.—The volume of 1 lb. of dry air at 32° F. = 12·38 cub. ft. For any other of the above temperatures multiply by the relative volume.

The *unit loss of heat* for direct radiation may be taken as 1·8 heat units per square foot per hour per degree difference of temperature on the two sides of the surface, under normal conditions, viz.: in still dry air at a temperature of 60° F.

OPEN FIRE GRATES.

It would seem that the open fireplace is not the criminally wasteful contrivance that it is commonly supposed to be, and that the 'well' type of fireplace is open to criticism. 'The pleasant British practice of sitting round the open fire,' says the Fuel Research Board Report, 1918–19, 'is amply justified from the scientific point of view, when we know that so much as one-fifth of the total heat of the coal is immediately available for absorption by the sitters if they constitute themselves into a sufficiently close screen around the fire.' In addition to the directly measured radiant heat, the open fire, it seems, is to be credited with heat conducted, radiated, and convected from the fireplace, chimney, and walls to an extent which is such that all together some 60 to 70 per cent. of the heat of the coal is utilised in warming the room and the general fabric of the building.

The following hints as to the best method of altering ordinary house fire-grates, so that they will be more effective and economical, have been circulated by the Royal Institute of British Architects: 'Line your grates with fire-bricks. See that the fire-bricks are high enough to stand up above the fire. Take care that the back brick leans forward and is not more than 4 ins. from the front bars. Fill in the space at the back with fire-clay. See that your register is open not more than one-fourth of its full capacity. If you have no register, partially close the chimney opening with another fire-brick. Fill in the front space beneath the grate with a movable piece of metal. If you cannot do this, put a small fire-tile in the bottom of the grate.'

Heat Losses.

When a room is maintained at a higher temperature than the surrounding air, there is always a loss of heat through the windows, walls, air-change, etc. Modern practice demands that these losses shall be estimated as accurately as possible; a few of the most useful factors concerned are given below:—

Brick wall 12″ thick	. .	0·30	B.Th.U.'s loss per deg. diff. per sq. ft.
Brick wall 18″ thick	. .	0·24	" " "
Without plaster 12″ thick	.	0·34	" " "
Without plaster 18″ thick	.	0·26	" " "
Concrete wall 4″ thick	. .	0·53	" " "
Concrete wall 8″ thick	. .	0·40	" " "
Single window	. . .	1·06	" " " cub. ft.
Double window	. . .	0·76	" " "
Air	. . . . .	0·019	" " "

The following are some of the channels through which heat may be lost:—

Gases of high calorific value escaping the chimney unburnt.
Flue gases passing away at high temperatures.
By radiation and convection from uncovered pipes and fittings in Boiler House.
" " " " " " in Trenches.
" " " " " " in Basements.
" " " " " " on Roof.
Steam blowing away into atmosphere.
Condense water cooling in collecting well, etc.
Leakage from, and the cooling of air in, ducts where heated at intake.
Heated air passing away without doing any useful work.
Excessive heating of rooms.
Normal heating of rooms where not in use.
Leakage from air flues.

Reliable comparison of existing work can only be made after exhaustive tests, as owing to conditions varying so much, comparison can easily be misleading, a careful theoretical test balance would be more reliable than an incomplete one of existing conditions.

Care in design at every point to prevent waste, makes a very important whole in large buildings.

Economy.

The most economical system is that which wastes the least heat and costs the least in attendance and upkeep, providing the initial cost is reasonable.

Direct radiation plants are the most economical. Systems where the air is fully heated at the intake and distributed by ducts throughout the building will obviously have a rather high fuel consumption.

As a distributing medium, hot water comes the first, except where exhaust steam is available; there is not a great deal of difference between water and steam, providing that each is the best of its kind.

Cost of Heating.

The warming of the air costs much more than moving it; where it would take 1*d.* to move 1,000,000 cubic feet, it would cost 7½*d.* to heat it from 30° to 60° F.

Heating Systems.

The heating medium may be either water, steam, or gas. In the case of water and steam, these may be distributed in various ways, as follows:—

Water	Low pressure gravity circulation. Forced or induced circulation by accelerators. Various automatic induced. Gravity return.
Low-pressure steam.	Condense through traps (live-steam or exhaust-steam). Vacuum systems. Automatic vapour systems.

Heating by Hot Water.

Gravity Circulation.

For installations not exceeding, say, 5,000 sq. ft. of radiating surface, where upkeep and attention are serious items, this system is very suitable, and, if no exhaust steam is available, for economy it cannot be beaten.

Arrangements of Circulation.

The two-pipe method was at one time nearly universal. The single pipe has taken its place to a great extent, but a combination of the two is most general. The 'drop' system gives a very rapid circulation.

The following points require to be borne in mind :—Short circuits, dips and air-pockets, size and lengths of mains.

Size of Mains.

The first thing to decide is the maximum drop in temperature to be allowed between the flow and return; a small drop is desirable, but not always practicable, 20° may be taken as a standard. The following formula agrees very well with practice :—

$$U = \left[\left(16{\cdot}353 \frac{\left(H - \frac{S_1 H}{S_2} \right) 12D}{L} + 0{\cdot}00665 \right)^{\frac{1}{2}} - 0{\cdot}0816 \right] D^2 1224F.$$

where,

H = height of circulation in feet; S_1 = specific gravity of water in flow pipe; S_2 = specific gravity of water in return pipe; L = equivalent length of pipe in feet (bend, say, 12 diameters), D = diameter of pipe in inches; F = drop between flow and return in degrees; U = British Thermal Units per hour.

The rapidity of circulation in vertical pipes often increases at a greater rate than as the $\sqrt{H}$, owing to bubbles of steam forming.

The above formula gives B.Th.U.'s, but the curves on the following diagram, fig. 1, are in sq. ft. of radiation, calculated on an average of 160 B.Th.U.'s per ft. of radiating surface.

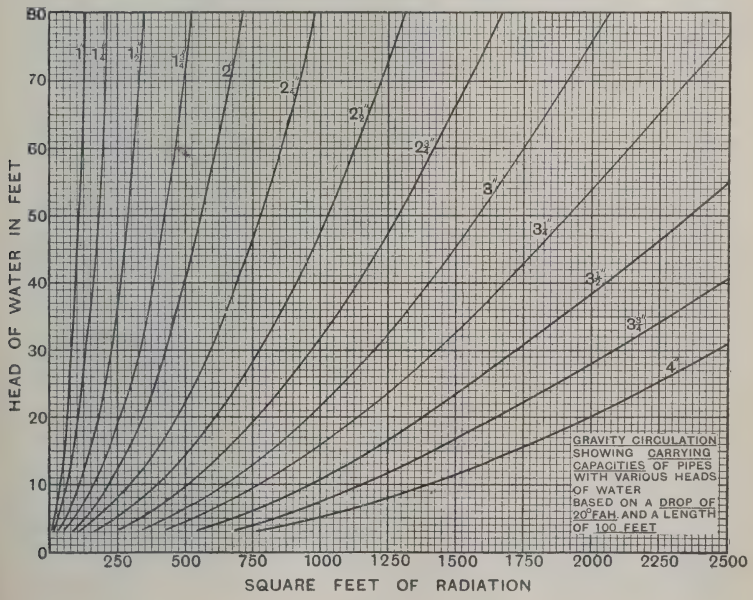


FIG. 1.

For short pipes, such as connections to radiators, a liberal allowance should be made to make up for velocity loss at entry and through connections; these have a considerable effect, so that apart from having a well-designed scheme, it is necessary to have an intelligent fitter.

TABLE OF FACTORS FOR DIFFERENT LENGTHS OF MAINS.

Length of Main. Ft.	Factor.
50	1·5000
100	1·0000
150	0·8125
200	0·7000
250	0·6125
300	0·5375
350	0·4875
400	0·4500
450	0·4375
500	0·3875

For different lengths of mains, multiply the heating surface from fig. 1 by the factor given.

CIRCULATION BY ACCELERATORS.

In large buildings where the radiation is extensive and at many different levels, pumps may be employed to circulate the water; this allows of smaller mains, owing to the higher velocities obtained. The piping may be arranged either on the one-pipe or two-pipe system. With the one-pipe, practically only the mains are under the influence of the pump, though there is a little pull on the branches, due to the loss of head on the main between the point where the flow is taken off and the return back.

The number of gallons of water required to supply the heat can be ascertained as follows:—

$$G = \frac{U}{10D}$$

where,

G = number of gallons per hour; U = heat loss in B.Th.U.'s; D = drop in temperature (F°) allowed between flow and return.

The size of mains depends upon their length, the number of gallons, and the maximum loss of head due to friction to be allowed. A fair velocity in the mains is from 200 to 600 ft. per min., according to the size and length, arranging for the total head not to exceed about 20 ft.; this is a point that should be carefully watched, as a contractor may cut down the size of mains to save initial cost, but, as a result, increasing the cost of upkeep.

The friction head and power required may be calculated in the usual manner for cold water.

There are several special types of accelerators on the market, though most centrifugal pumps are suitable, also drum or other pumps may be used if desired.

AUTOMATIC INDUCED CIRCULATION.

Where power is available, a simple accelerator is to be preferred; but there are conditions where an automatic arrangement is an advantage. These utilise the power of steam in some form, either by condensation, a partial vacuum being formed, which exerts a powerful pull on the water in the returns, or by the pressure being utilised to lift water from one tank to another at a higher level, the water returning through the circuits by gravity; a separate steam boiler is not always needed, steam being formed in connection with the water boiler.

Apart from the particular apparatus for producing the motive power, the heating system is the same as any other low-pressure system.

Low Pressure Steam Heating.

Gravity Return.

In this system the condense water finds its way back to the boiler by gravity. The steam may be distributed to the radiators by either the one or the two pipe systems.

In single pipe work the steam in the mains travels in the direction of the condense water, but in the risers and branches they meet (except in the drop system), and when starting the heat, noise is created. Where absence of noise is essential at all times, the two-pipe system is preferable; with this arrangement there are two pipes to each radiator, the condense pipes are carried down into a wet return or fitted with an automatic water-seal at the outlet to the radiator.

Size of Pipe.

The size of pipe to supply a given amount of heat at a given point depends upon the length, initial pressure, and the maximum loss of pressure to be allowed.

Taking the known formulæ for steam, and modifying the exponent and value of P, we get the following:—

$$U = \left(\frac{WPD^5}{L\left(1 + \frac{3 \cdot 6}{D}\right)} \right)^{\frac{1}{2}} 10^5$$

where,

U = British Thermal Units per hour; W = weight of a cubic foot of steam; P = loss of pressure in inches of water; D = diameter of pipe in inches; L = length of pipe in feet.

The results shown in Fig. 2 have been worked out for about 1·3 lb. initial gauge pressure and 3 ins. water gauge drop.

For one pipe work, multiply B.Th.U.'s by 0·5.

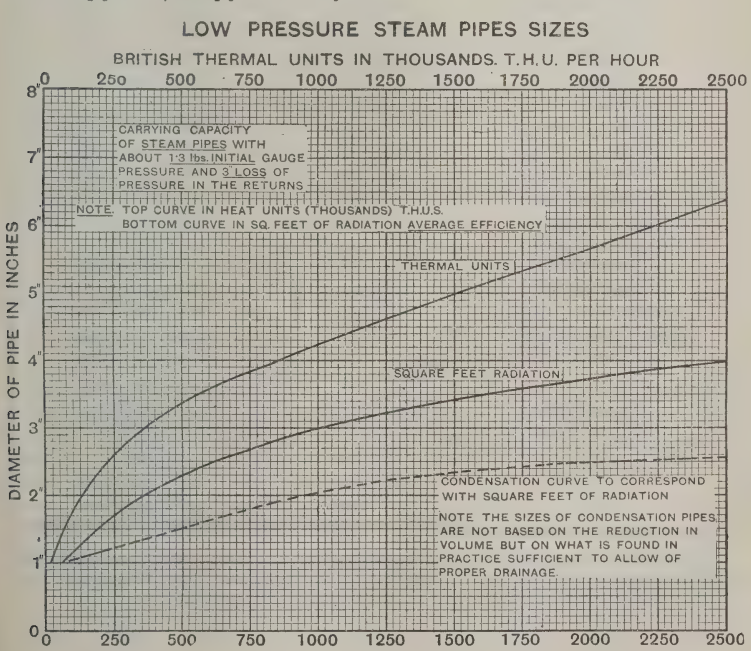


FIG 2

British Standard Low-pressure Heating Pipes.*

(No. 40—1908.) (*Abstract.*)

For working pressures up to 100 ft. head.

Dimensions of Pipes (fig. 3).

			Ins. 2	Ins. 3	Ins. 4	Ins. 5	Ins. 6	Ins. 7	Ins. 8	Ins. 9
Pipe.	Internal Diameter	A	2	3	4	5	6	7	8	9
	Approximate External Diameter	B	$2\frac{3}{8}$	$3\frac{7}{16}$	$4\frac{15}{32}$	$5\frac{9}{16}$	$6\frac{5}{8}$	$7\frac{11}{16}$	$8\frac{3}{4}$	$9\frac{13}{16}$
	Approximate Thickness	C	$\frac{3}{16}$	$\frac{7}{32}$	$\frac{15}{64}$	$\frac{9}{32}$	$\frac{5}{16}$	$\frac{11}{32}$	$\frac{3}{8}$	$\frac{13}{32}$
	Diameter of Spigot Bead and Astragal	D_1 D_2	$2\frac{5}{8}$	$3\frac{3}{4}$	$4\frac{25}{32}$	$5\frac{15}{16}$	7	$8\frac{1}{8}$	$9\frac{3}{16}$	$10\frac{5}{16}$
	Projection of Spigot Bead and Astragal	E_1 E_2	$\frac{1}{8}$	$\frac{5}{32}$	$\frac{5}{32}$	$\frac{3}{16}$	$\frac{3}{16}$	$\frac{7}{32}$	$\frac{7}{32}$	$\frac{1}{4}$
	Width of Spigot Bead	F	$\frac{5}{16}$	$\frac{3}{8}$	$\frac{7}{16}$	$\frac{1}{2}$	$\frac{1}{2}$	$\frac{9}{16}$	$\frac{5}{8}$	$\frac{11}{16}$
	Radius of Spigot Bead	G	$\frac{5}{16}$	$\frac{3}{8}$	$\frac{25}{64}$	$\frac{15}{32}$	$\frac{1}{2}$	$\frac{9}{16}$	$\frac{19}{32}$	$\frac{21}{32}$
	Width of Astragal	H	$\frac{9}{16}$	$\frac{5}{8}$	$\frac{11}{16}$	$\frac{3}{4}$	$\frac{3}{4}$	$\frac{3}{4}$	$\frac{7}{8}$	$\frac{7}{8}$
	Clearance	I	$\frac{1}{8}$	$\frac{3}{32}$	$\frac{7}{64}$	$\frac{1}{8}$	$\frac{1}{8}$	$\frac{1}{8}$	$\frac{5}{32}$	$\frac{5}{32}$
	Caulking Space	$E_1 + I$	$\frac{1}{4}$	$\frac{1}{4}$	$\frac{17}{64}$	$\frac{5}{16}$	$\frac{5}{16}$	$\frac{11}{32}$	$\frac{3}{8}$	$\frac{13}{32}$
Socket.	Internal Diameter	J	$2\frac{7}{8}$	$3\frac{15}{16}$	5	$6\frac{5}{16}$	$7\frac{1}{4}$	$8\frac{3}{8}$	$9\frac{1}{2}$	$10\frac{5}{8}$
	External Diameter	K	$3\frac{7}{16}$	$4\frac{9}{16}$	$5\frac{21}{32}$	$6\frac{15}{16}$	$8\frac{1}{16}$	$9\frac{1}{4}$	$10\frac{7}{16}$	$11\frac{5}{8}$
	Thickness	L	$\frac{9}{32}$	$\frac{5}{16}$	$\frac{21}{64}$	$\frac{3}{8}$	$\frac{13}{32}$	$\frac{7}{16}$	$\frac{15}{32}$	$\frac{1}{2}$
	Internal Depth	M	3	$3\frac{1}{2}$	4	4	$4\frac{1}{2}$	$4\frac{1}{2}$	5	5
	Internal Radius	N	$\frac{7}{16}$	$\frac{15}{32}$	$\frac{1}{2}$	$\frac{19}{32}$	$\frac{5}{8}$	$\frac{11}{16}$	$\frac{3}{4}$	$\frac{13}{16}$
	External Radius	O	$\frac{9}{16}$	$\frac{9}{16}$	$\frac{5}{8}$	$\frac{11}{16}$	$\frac{3}{4}$	$\frac{3}{4}$	$\frac{7}{8}$	$\frac{15}{16}$
	Diameter of Beads	P	$3\frac{15}{16}$	$5\frac{1}{4}$	$6\frac{13}{32}$	$7\frac{11}{16}$	$8\frac{15}{16}$	$10\frac{1}{8}$	$11\frac{7}{16}$	$12\frac{5}{8}$
	Width of Beads	Q	$\frac{7}{16}$	$\frac{25}{32}$	$\frac{13}{16}$	$\frac{7}{8}$	1	1	$1\frac{1}{8}$	$1\frac{1}{8}$
	Projection of Beads	R	$\frac{1}{4}$	$\frac{11}{32}$	$\frac{3}{8}$	$\frac{3}{8}$	$\frac{7}{16}$	$\frac{7}{16}$	$\frac{1}{2}$	$\frac{1}{2}$
	Distance between Beads	S	$1\frac{3}{8}$	$1\frac{7}{16}$	$1\frac{19}{32}$	$1\frac{15}{32}$	$1\frac{11}{16}$	$1\frac{3}{4}$	$1\frac{15}{16}$	$1\frac{13}{16}$
	Distance of Bead from Edge	T	$\frac{1}{4}$	$\frac{1}{4}$	$\frac{3}{8}$	$\frac{3}{8}$	$\frac{3}{8}$	$\frac{3}{8}$	$\frac{3}{8}$	$\frac{7}{16}$
	Taper on End	U	$\frac{1}{16}$	$\frac{1}{16}$	$\frac{3}{32}$	$\frac{3}{32}$	$\frac{3}{32}$	$\frac{3}{32}$	$\frac{1}{8}$	$\frac{1}{8}$
	Width of Rest at Top	V	$\frac{7}{16}$	$\frac{21}{32}$	$\frac{5}{8}$	$\frac{11}{16}$	$\frac{3}{4}$	$\frac{3}{4}$	$\frac{7}{8}$	$\frac{7}{8}$
	Width of Rest at Bottom	W	$\frac{9}{16}$	$\frac{25}{32}$	$\frac{13}{16}$	$\frac{7}{8}$	1	1	$1\frac{1}{8}$	$1\frac{1}{8}$

Minimum Weights of Pipes (fig. 4).

Overall Length. Feet.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.
3	15	24	32	50	67	86	108	130
6	27	45	61	94	125	160	201	243
9	—	66	90	138	182	234	294	356

All sizes of low-pressure heating-pipes and fittings shall be tested by an internal hydraulic pressure of 100 lbs. per square inch, applied for at least 2 minutes. While under pressure each pipe and fitting shall be struck all over with a hand hammer weighing $\frac{1}{4}$ lb.

* By permission of the British Engineering Standards Association.

British Standard Hot Water Fittings.

For working pressures up to 100 ft. head.

Dimensions of Fittings (fig. 5).

Internal Diameter	A	Ins. 2	Ins. 3	Ins. 4	Ins. 5	Ins. 6	Ins. 7	Ins. 8	Ins. 9
Approximate External Diameter of Pipe	B	$2\frac{3}{8}$	$3\frac{7}{16}$	$4\frac{15}{32}$	$5\frac{9}{16}$	$6\frac{5}{8}$	$7\frac{11}{16}$	$8\frac{3}{4}$	$9\frac{13}{16}$
Approximate Thickness of Pipe	C	$\frac{3}{16}$	$\frac{7}{32}$	$\frac{15}{64}$	$\frac{9}{32}$	$\frac{5}{16}$	$\frac{11}{32}$	$\frac{3}{8}$	$\frac{13}{32}$
Internal Diameter of Socket	J	$2\frac{7}{8}$	$3\frac{15}{16}$	5	$6\frac{3}{16}$	$7\frac{1}{4}$	$8\frac{3}{8}$	$9\frac{1}{2}$	$10\frac{5}{8}$
External Diameter of Socket	K	$3\frac{7}{16}$	$4\frac{15}{16}$	$5\frac{21}{32}$	$6\frac{15}{16}$	$8\frac{1}{16}$	$9\frac{1}{4}$	$10\frac{7}{16}$	$11\frac{5}{8}$
Thickness of Socket	L	$\frac{9}{32}$	$\frac{5}{16}$	$\frac{21}{64}$	$\frac{3}{8}$	$\frac{13}{32}$	$\frac{7}{16}$	$\frac{15}{32}$	$\frac{1}{2}$
Internal Depth of Socket	M	3	$3\frac{1}{2}$	4	4	$4\frac{1}{2}$	$4\frac{1}{2}$	5	5
External Radius of Socket	O	$\frac{9}{16}$	$\frac{9}{16}$	$\frac{5}{8}$	$\frac{11}{16}$	$\frac{3}{4}$	$\frac{3}{4}$	$\frac{7}{8}$	$\frac{15}{16}$
Centres of Sockets	X	$4\frac{1}{8}$	$5\frac{1}{2}$	$6\frac{3}{4}$	8	$9\frac{1}{4}$	$10\frac{1}{2}$	12	$13\frac{1}{2}$
End of Socket to Centre Line of Spigot	Y	$5\frac{3}{4}$	$6\frac{13}{16}$	$8\frac{1}{8}$	$8\frac{3}{4}$	$9\frac{7}{8}$	$10\frac{5}{8}$	$11\frac{15}{16}$	$12\frac{3}{4}$
Length of Spigot	Z	9	10	$11\frac{1}{2}$	13	$14\frac{1}{2}$	16	$17\frac{1}{2}$	19
Radius of Centre Line of Bend	r_1	$2\frac{7}{16}$	$2\frac{3}{4}$	$3\frac{3}{8}$	4	$4\frac{5}{8}$	$5\frac{1}{4}$	6	$6\frac{3}{4}$
Internal Radius of Bend	r_2	$\frac{7}{8}$	$1\frac{1}{32}$	$1\frac{9}{64}$	$1\frac{7}{32}$	$1\frac{5}{16}$	$1\frac{13}{32}$	$1\frac{5}{8}$	$1\frac{27}{32}$

Socket of fittings to be the same as for straight pipes of corresponding bore.

British Standard Flue or Smoke Pipes.*

No. 41—1908). (*Abstract*).

Principal Dimensions of Pipes (fig. 3).

Pipe. Internal Diameter	A	Ins. 4	Ins. $4\frac{1}{2}$	Ins. 5	Ins. 6	Ins. 7	Ins. 8	Ins. 9	Ins. 10	Ins. 12
Pipe. Approximate External Diameter	B	$4\frac{1}{4}$	$4\frac{3}{4}$	$5\frac{1}{4}$	$6\frac{5}{16}$	$7\frac{3}{8}$	$8\frac{7}{16}$	$9\frac{1}{2}$	$10\frac{9}{16}$	$12\frac{5}{8}$
Pipe. Approximate Thickness	C	$\frac{1}{8}$	$\frac{1}{8}$	$\frac{1}{8}$	$\frac{5}{32}$	$\frac{3}{16}$	$\frac{7}{32}$	$\frac{1}{4}$	$\frac{9}{32}$	$\frac{5}{16}$
Clearance	I	$\frac{1}{8}$	$\frac{1}{8}$	$\frac{1}{8}$	$\frac{5}{32}$	$\frac{5}{32}$	$\frac{3}{16}$	$\frac{3}{16}$	$\frac{7}{32}$	$\frac{7}{32}$
Caulking Space	E+I	$\frac{3}{16}$	$\frac{3}{16}$	$\frac{3}{16}$	$\frac{7}{32}$	$\frac{7}{32}$	$\frac{1}{4}$	$\frac{5}{16}$	$\frac{11}{32}$	$\frac{11}{32}$
Socket. Internal Diameter	J	$4\frac{5}{8}$	$5\frac{1}{8}$	$5\frac{5}{8}$	$6\frac{3}{4}$	$7\frac{13}{16}$	$8\frac{15}{16}$	$10\frac{1}{8}$	$11\frac{1}{4}$	$13\frac{5}{16}$
Socket. External Diameter	K	5	$5\frac{1}{2}$	6	$7\frac{3}{16}$	$8\frac{5}{16}$	$9\frac{1}{2}$	$10\frac{3}{4}$	$11\frac{15}{16}$	$14\frac{1}{16}$
Socket. Thickness	L	$\frac{3}{16}$	$\frac{3}{16}$	$\frac{3}{16}$	$\frac{7}{32}$	$\frac{1}{4}$	$\frac{9}{32}$	$\frac{5}{16}$	$\frac{11}{32}$	$\frac{3}{8}$
Socket. Internal Depth	M	3	3	$3\frac{1}{4}$	$3\frac{1}{2}$	$3\frac{1}{2}$	4	4	$4\frac{1}{4}$	$4\frac{1}{2}$
Socket. Angle at Bottom of Socket	—	$22\frac{1}{2}°$	$22\frac{1}{2}°$	$22\frac{1}{2}°$	$22\frac{1}{2}°$	$22\frac{1}{2}°$	$22\frac{1}{2}°$	$22\frac{1}{2}°$	$22\frac{1}{2}°$	$22\frac{1}{2}°$

Minimum Weights of Pipes.

Overall Length. Feet.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.	Lbs.
3	18	20	25	34	$45\frac{1}{2}$	59	76	94	128
6	33	36	46	63	86	112	144	176	245

The specification No. 41 also gives details of bends and of soot doors in the latter

* By permission of the British Engineering Standards Association.

British Standard Heating Pipes.

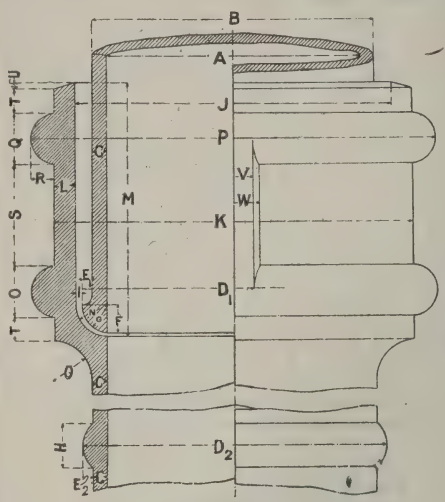


Fig. 3.

Fig. 4.

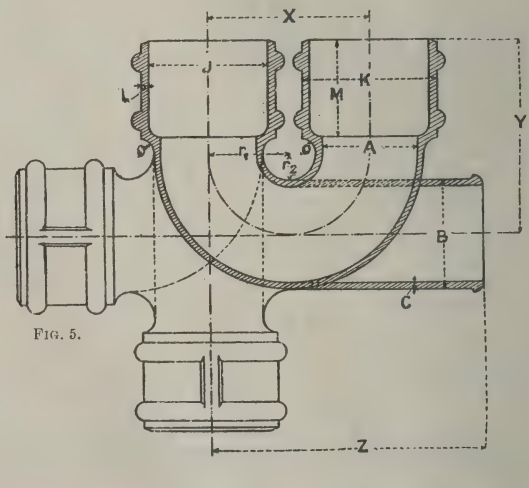


Fig. 5.

Vacuum System.

One of the objections to the ordinary gravity steam work is the difficulty of displacing the air in the radiators, and controlling the heat; this may be overcome by attaching a system of piping to the air valves connected to a small exhausting pump, which draws away the air and forms a partial vacuum; another way is to attach all the condense mains to a pump which will exhaust the air and draw away the condense water, this method is known as the 'Vacuum System.'

The piping is much the same as an ordinary gravity arrangement, except that the mains are rather smaller, and the condense pipes much smaller.

Owing to the thorough circulation of steam, the radiating surface as a high efficiency per sq. ft. per degree difference. It should be noted, however, that this does not materially affect the fuel efficiency.

The success of a vacuum system depends to a large extent on the proper working of the valves which are fixed on the radiators, or wherever condense water is likely to collect.

There are numberless different traps on the market, but a trap embodying the now well-known principle of the 'Laminated Strip' made up of two metals having different coefficients of expansion is very efficient. Some of the diaphragm traps are also good. The 'Trane' and 'Dunham' are typical examples of the foregoing respectively.

Heating by Exhaust Steam.

The use of exhaust steam for heating and other purposes such as drying, hot-water supplies, etc., is to be recommended wherever possible, as the adoption of this system enables the latent heat in the steam to be used, whereas this cannot possibly be used for the production of power, and the extension of this system would render many small and inefficient power plants at present in existence more efficient than any large condensing plant could possibly be.

For instance, the Technical Advisor to the Coal Controller states that the average thermal efficiency of steam-driven electric power plants at the present time is only 8½ per cent., whereas, if sufficient demand for heat can be found to enable the exhaust steam to be used for heating purposes, etc., the thermal efficiency of these plants might be increased to something like 60 per cent.

The exhaust steam can be either taken direct from the engines and conveyed without back pressure, for considerable distances, by the adoption of a modern vacuum system, or alternatively it can be used to heat water in calorifiers and the water pumped round to the various points where heat is required.

In many institutions, hotels, etc., it is found that there is practically no difference in the coal consumption whether the power is purchased from outside or generated on the premises, as there is a demand for heat all the year round which can be met by the exhaust steam from the power plant, so that the extension of this system to general domestic heating from the existing small power plants would enable these small power plants to run at a greater efficiency than any large condensing plant.

The utilisation of exhaust steam for heating when, as is too frequently the case, there is a back pressure on the engine—does not always result in economy. For assume that at a large works offices are to be warmed, requiring 800 sq. ft. of radiation, which offices are at such a distance from the main engine that a back pressure of 8 to 10 lbs. is required to force the circulation, the engine being 200 h.p. cutting off automatically at one-third of its stroke; the effect of the back pressure in this case would be to decrease the range of expansion to approximately one-half stroke, and presuming the initial pressure to be 80 lbs., and the consumption at one-third stroke to be 25·7 lbs. weight of steam per h.p. per hour, the consumption would be increased to 29 lbs. per h.p. hour, or a total for the 200 h.p., of 200 × 3·3 (the latter figure being the difference in the consumption without and with back pressure) = 660 lbs. of steam per hour. Now as the amount of radiation mentioned would require, at 8 to 10 lbs. pressure, less than 300 lbs. per hour, there is, so far from being an economy, a loss of over 360 lbs. of steam per hour as the result of using the exhaust steam under such conditions of back pressure. Only when it is used without back pressure will the full economy be derivable from the utilisation of exhaust steam for heating.

One square foot of radiation will give off about 250 heat units an hour. One pound of steam an hour will supply about 4 square feet of radiation. A rough-and-ready rule for finding the radiation that may be supplied by an engine is to multiply the horse-power of the engine by 131. When estimating on exhaust-steam heating, with non-condensing engines, the steam consumption for each indicated horse-power an hour will be about as follows :—

Engine.	Total.	Available for Heating.
Compound automatic	20 lbs.	18 lbs.
Simple Corliss	30 lbs.	27 lbs.
Simple throttling	40 lbs.	36 lbs.
Simple automatic, single valve	35 lbs.	31 lbs.

When exhaust steam is employed as the heating medium it is necessary to extract the grease by means of a separator, so placed as to intercept the grease before the steam enters the heating

main. It is also necessary to have an outlet to the atmosphere which should be closed by a valve weighted to open at a pressure of ½ lb. above the atmosphere, so as not to cause any back pressure. So low a pressure can, however, only be used for circulation when a vacuum return line is maintained, as in the vacuum system, for unless the air is first exhausted from the apparatus, a definite pressure is required to force it out through the air valves. With a vacuum return line no air valves are required on the radiation, and no foul air from the radiators is discharged into the rooms under any circumstances.

Plenum System.

'Plenum' is the name given to the system where the air is dealt with at the intake, tempered, washed, heated, and blown into the various rooms in such a quantity as to provide ventilation and make good the heat losses, the size of outlets being so proportioned as to allow of a slight pressure in the building, hence the name 'Plenum.'

The inlets may be from 8 to 10 ft. above the floor level, outlets at floor level on the same side of the room, the initial velocity of the air carrying it across the room, some of it cooling and gradually falling on the way—an extra outlet at ceiling level is advisable, especially if gas is the illuminant. Two ducts are necessary, one for hot and one for tempered or cold air.

Note.—Any system where the air is propelled into a building and maintained at a higher pressure than the atmosphere is a Plenum system, though the name is usually associated with downward methods of ventilation only.

Centrifugal fans are the most suitable, as the resistance of the heaters is considerable, apart rom the ducts.

There are several special makes, including the multivane types, for which a much higher efficiency is claimed.

For economy a fan should be chosen that will pass the amount of air just running at a suitable speed to overcome the resistance, as the power rises as the cube of the speed, while the output is only directly as the speed.

In steam heating, the temperature depends on the pressure of steam in accordance with the figures given in the following table :—

Table of the Properties of Saturated Steam.

Absolute Pressure per Square inch.	Tempera-tures.	Total Heat of One Pound of Steam from Water at 32 deg. F.	Latent Heat of One Pound of Steam from Water at 32 deg. F.	Weight of One Cubic Foot of Steam.	Volume of One Pound of Steam.	Pressure as shown by Gauge.
Lbs.	Deg. Fah.	Units.	Units.	Lbs.	Cub. Ft.	
7	176·9	1135·3	990·0	·01889	52·936	15
7·5	180·0	1136·3	987·8	·02016	49·610	14
8	182·9	1137·2	985 7	·02142	46·686	13
8·5	185·7	1138·0	983 8	·02268	44·097	12
9	188·3	1138·8	981·9	·02394	41·777	11
9·5	190·8	1139·5	980·1	·02547	39·261	10
10	193·3	1140·3	978·4	·02642	37·845	9
10·5	195·6	1141·0	976·7	·02767	36·145	8
11	197·8	1141·7	975·2	·02890	34·599	7
11·5	200·1	1142·4	973·6	·03026	33·045	6
12	202·0	1143·0	972·2	·03137	31·879	5
12·5	204·0	1143·6	970·8	·03260	30·678	4
13	205·9	1144·2	969·4	·03382	29·573	3
13·5	207·8	1144·8	968·1	·03504	28·536	2
14	209·6	1145·3	966·8	·03627	27 573	1
***14·7**	**212·0**	**1146·1**	**965·2**	**·03797**	**26·360**	**0***
15	213·1	1146·4	964·3	·03870	25·843	—
16	216·3	1147·4	962·1	·04112	24·320	1
17	219·6	1148·3	959·8	·04253	23·513	2
18	222·4	1149·2	957·7	·04594	21·766	3
19	225·3	1150·1	955·7	·04834	20·687	4
20	228·0	1150·9	953·8	·05074	19·710	5
21	230·6	1151·7	951·9	·05311	18·828	6
22	233·1	1152·5	950·2	·05549	18·022	7
23	235·5	1153·2	948·5	·05786	17·282	8
24	237·8	1153·9	946·9	·06023	16·603	9
25	240·1	1154·6	945·3	·06259	15·977	10

Approx. inches of Vacuum.

Approx. pounds per sq. inch.

* Atmospheric Pressure.

TABLE FOR CALCULATING HEATING BY EXHAUST STEAM.

Details.	Above Atmosphere.								Below Atmosphere.		
Steam pressure	0	1	2	3	4	6	8	10	2	4	6
Absolute pressure	14·7	15·7	16·7	17·7	18·7	20·7	22·7	24·7	12·7	10·7	8·7
Temperature of steam	212	216	219	222	225	230	235	240	204	201	199
Temperature of air	70	70	70	70	70	70	70	70	70	70	70
Temperature difference	142	146	149	152	155	160	165	170	134	131	129
B.T.U. per min. from 100 sq. ft. rad.	426	438	447	456	465	480	495	510	402	393	387
Total heat in steam above 212°	966	967	968	969	970	971	973	974	964	961	957
Latent heat in steam	966	963	960	958	957	954	950	947	970	979	986
Cubic feet in 1 lb. steam	26·4	24·6	23·2	21·0	20·6	19·5	17·8	16·4	31·9	38·0	47
Cubic feet steam in ⅔ lb.	17·6	16·4	15·5	14·0	13·7	13·0	11·8	10·9	21·2	25·3	31
Cubic feet steam per min. to supply 100 sq. ft. radiation—air 70°	11·6	10·9	10·3	9·3	9·0	8·6	7·8	7·2	10·8	16·8	20·8
Weight per cubic foot steam—lb.	0·038	0·0387	0·041	0·437	0·046	0·061	0·056	0·0609	0·031	0·026	0·021
Throttling Engine—Radiating surface supplied—sq. ft.	152	146	143	139	136	131	128	126	162	175	188
Automatic Engine—Radiating surface supplied—sq. ft.	134	129	127	122	121	120	119	117	146	151	168
Simple Corliss—Radiating surface supplied per horse-power	114	110	107	104	101	98	96	95	122	127	146
Compound Engine—Radiating surface supplied per horse-power	95	91	90	87	84	82	80	79	104	108	116

Boilers.

If plenty of draught is available, a boiler with a liberal amount of secondary flues and small grate area may be chosen: if the draught is small, one with less flue resistance would be more suitable. It should be of such a design as to allow of proper combustion in the fire-pot, free circulation in the waterways, the lighting, feeding, and ash doors to be well fitted, so as to stop an inrush of air at undesirable points; the general design to allow of clinkering and flue cleaning to be carried out with a minimum of trouble. The catalogue rating should give the number of B.Th.U.'s given off with a *six hours' firing interval*; *this should be taken from test, not based upon square feet of boiler heating surface, the value of which varies very much with different makes.* The *fuel efficiency* should be stated, and should *not be less than* 60 *per cent.* On testing a well-known sectional boiler, the highest efficiency was found to be at seven hours' firing interval (78 per cent. evaporative test), with a slight drop to four hours (due to loss from high flue temperature) and a quick drop to ten hours (due to incomplete combustion). While in power boilers combustion has received a deal of attention, heating boilers have been neglected in this respect.

Approximate Minimum Size of Boiler House for Different Sized Heating Installations.

Amount of Radiation in Feet Super.	Dimensions of Boiler House.*		
1,000 . . .	9 ft. long	5 ft. wide	7 ft. 6 ins. high
2,500 . . .	11 ft. ,,	6 ft. ,,	7 ft. 6 ins. ,,
5,000 . . .	13 ft. ,,	9 ft. ,,	8 ft. ,,
10,000 . . .	14 ft. ,,	13 ft. ,,	9 ft. ,,
20,000 . . .	18 ft. ,,	16 ft. 6 ins. ,,	10 ft. ,,
50,000 . . .	18 ft. ,,	32 ft. ,,	10 ft. ,,

* Exclusive of fuel space.

If hot water supply, boiler, etc., are required, extra space must be allowed.

Approximate Size of Chimney for Various Sized Installations.

Radiation in feet super. . . .	1,000	2,500	5,000	10,000	20,000	50,000
Size of chimney in inches . . .	9×9	14×9	14×14	21×18	24×24	36×36

Fuel.

The average calorific value per pound of fuel may be calculated at 12,000 B.Th.U., but of this it is only possible to obtain in the boiler an actual efficiency of 70 to 75 per cent. In other words, 8,000 B.Th.U. would represent the heat available from the boiler per pound of fuel burnt, the coal being of an average quality.

Size of Minimum Fuel Space Required for Various Sizes of Heating Installations on a Basis of One Month's Supply.

Radiation in feet super . . .	1,000	2,500	5,000	10,000	20,000	50,000
Fuel space in cubic feet . . .	500	1,000	2,000	3,800	7,600	19,000

Radiators.

Radiating Surface.

Vertical Loop Radiators are mostly used. Their efficiency varies with the design and size. They should be plain, smooth, and the loops so spaced as to allow of every part being easily cleaned.

Where it is permissible for the pipe supplying the radiators to be above the floor, the initial cost is considerably reduced, as will be seen from fig. 7; this is an important point often lost sight of in considering the cost of a heating installation.






Pipes below floor: cost £31.

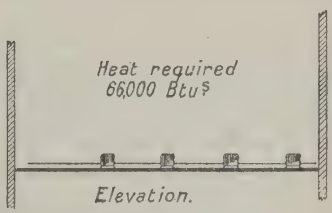FIG. 6.





Pipes above floor: cost £19 8s.

FIG. 7.

The above figures show the advantage of having the pipe above the floor where permissible

Note.—Prices fair competitive basis. (Jan. 1922.)

The amount of radiating surface will vary according to the class of surface and its temperature.

The relative efficiency may be put as follows:

Open pipe work	2 ins.	2·27	B.Th.U. per deg. steam.
" "	4 "	2·17	" "
Single column radiators	36 ins. high	1·75	" "
" "	24 " "	1·9	" "
Double column "	36 " "	1·66	" "
" "	24 " "	1·75	" "

The radiation from a surface is proportional to the difference of the fourth power of the absolute temperature, but a so-called radiator in practice also acts as a convector, the total heat given off per degree difference under normal conditions varying about as the 2·8 root of the difference in temperature between the skin of the radiator (5° less than the water) and the room.

The total heat loss from a room divided by the amount of heat given off from 1 sq. ft. of radiating surface will give the amount of radiation needed.

The following example shows how the amount of heat may vary:

Heat Loss from Room . . 100,000 *B.Th.U.'s.*

	Surface required in Sq. Ft.		
	Steam 210.	Water 185.	Water 160.
Open pipe work	293 (Min.)	376	505
Single column radiators 36 ins. high	380	487	660
" " 24 " "	350	450	605
Double column radiators 36 " "	400	513	690 (Max.)
" " 24 " "	380	487	660

Fig. 8 shows the variation needed for drop in temperature on a hot water circuit, each room being supposed to have exactly the same heat loss.

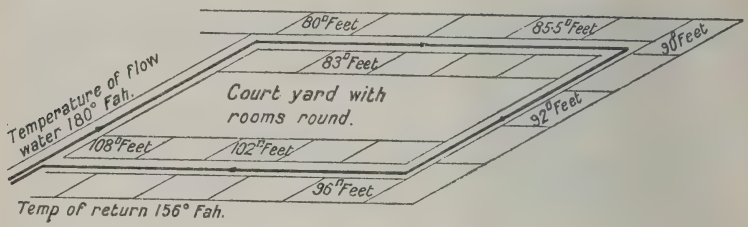


FIG. 8.

The above figure represents a number of rooms which are supplied with a hot water ring main, either forced or gravity circulation; each of the rooms are supposed *to have the same heat loss* (about 14,800 B.Th.U.'s); the figures show the amount of double col. radiation required, and shows the *increase in surface required* due to drop in temperature of the water in main. A total drop of 24 degrees is taken. The chief object of this diagram is to draw attention to a fact which is often given secondary consideration.

NOTE.—It is good practice if possible to arrange the circulations so that the hottest water is at the coldest side of building.

In indirect radiators, the B.Th.U.'s vary approximately as the square root of the velocity of air passing over the heated surfaces.

AMOUNT OF RADIATION SURFACE REQUIRED IN ROOMS OF AN AVERAGE HOUSE.

Type of Room.	Radiation in Feet Super. per 1,000 Cub. Ft. (To supplement domestic fires.)	Radiation in Feet Super. per 1,000 Cub. Ft. (Without fires in rooms.)
Corner room with large exposed wall and window surface	12	20
Less exposed room	9	15
Passage	—	20
Bedrooms	10	16

RADIATING SURFACE REQUIRED FOR DIFFERENT CLASSES OF BUILDINGS, AND COST OF HEATING.

Type of Building. (Taking the total cube.)	Average Heating Surface in Feet Super. per 1,000.	Approximate Cost of Heating per 1,000 Cubic Feet.
Churches	12	76 pence
Hospitals	20	170 ,,
Block of offices	15	135 ,,
Public buildings	12	108 ,,
Factories	7 to 10	51 ,,
Residences	12	108 ,,
Retail shops, etc.	8	70 ,,

The amounts given include the surface in mains for average work.

These costs, which are based upon present-day prices (January 1922), do not include builders' work, cutting away, making good, etc.

For country work add 10 per cent. to cover additional allowance to workmen, travelling, and incidental expenses.

APPROXIMATE HEATING SURFACE REQUIRED FOR HORTICULTURAL HEATING.

Type of House.	Approx. surface in feet super per 1,000 cubic feet.
Houses requiring to be kept at a temperature above 35° in order to prevent frost entering	16
Peach and similar Houses	27
Greenhouses	40
Tomatoes. Vines, etc.	60
Forcing Pits	130

TABLE OF RADIATION.

Height of Radiator in Ins.:		46	38	32	26	23	20	18
Type.	Length of One Section. Ins.	Heating Surface per Section in Ft. Super.						
Single column	3	—	3	2½	2	1⅔	—	—
Two columns	3	5	4	3½	2⅔	—	—	—
Three ,,	2¾	6	5	4¼	3½	—	—	2¼
Four ,,	3	—	8	6½	5	—	—	3

To find the space necessary for radiators, multiply the above figures by the number of sections required, adding 8 ins. in length for valve, elbow, union, and bushing.

WIDTH OF RADIATORS AT FEET.

	Ins.		Ins.
Single column	5½	Three columns	10½
Two columns	8⅔	Four ,,	11

The kind of metal, and the thickness of the latter, of which the radiator is made, has little effect upon the heat transmission, provided the radiator is painted.

Some recent experiments have proved that painting may affect the radiation as much as 28 per cent.

The white enamels give rather a better effect (103 %) than a plain unpainted surface (100 %). The ordinary white paints give about 100 %, the greens dropping to 96 %. Copper and aluminium bronzes are the worst, 72 %.

The *thickness of the coat* makes very little difference.

THE WESTINGHOUSE PATENT STEAM RADIATOR.

The Westinghouse Patent Radiator shown in fig. 9 was designed to overcome the disadvantages formerly attendant on the use of steam for heating purposes. Steam enters the radiator at A and passes through the opening in the valve seat B into a distribution pipe C, in the upper side of which a small hole is drilled opposite each column. It then passes up each column as shown by the arrows and into tube D. This tube contains another tube E of metal with a high coefficient of expansion, and when it reaches a temperature of about 210° F. or any lower temperature to which it is set, expands and closes the valve F, thus shutting off steam until the temperature is slightly reduced, when the valve again opens.

The temperature of the radiator can be varied as desired up to the maximum by moving the handle H which, owing to the screwed socket J, moves the tube E and valve F near to, or further from its seat B, and thus causes the valve to close at a lower or higher temperature as desired. The temperature of the radiator can never exceed 212° F., as the steam inlet is restricted by

the valve while the outlet is fully open to the return line, and the steam is therefore entirely condensed in the radiator, only water escaping to the return line. It will therefore be seen that the temperature of the radiator does not depend on the pressure of the steam supply, nor is it affected by the distance of the radiator from the source of supply.

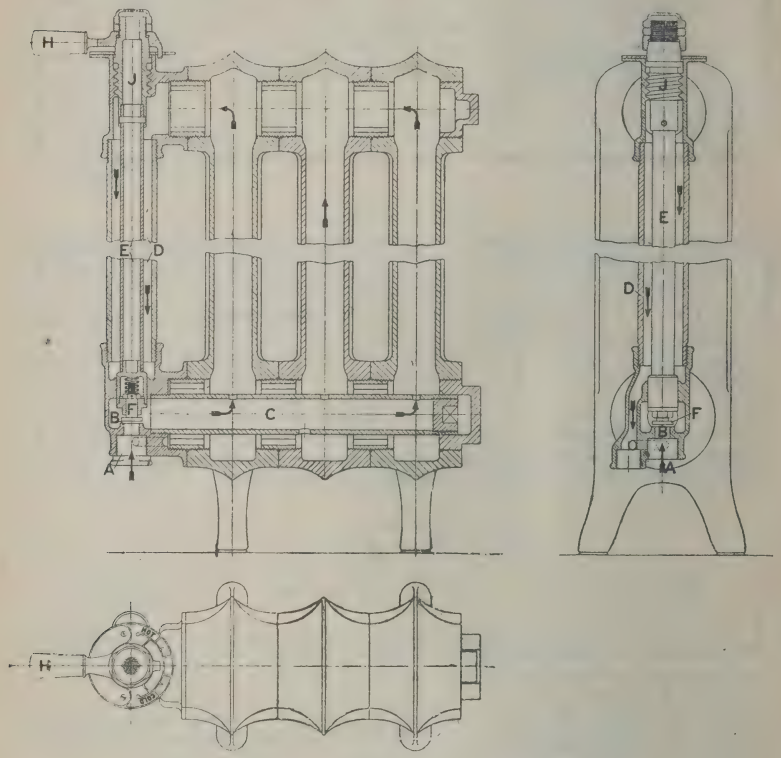


FIG. 9.—THE WESTINGHOUSE PATENT RADIATOR.

Temperature Regulation.

Complete automatic temperature regulation is conducive to health, comfort, and of its economy there is no doubt.

The temperature of each room should be regulated; this is accomplished in the principle system by means of compressed air acting on a diaphragm at the valves controlling the heat supply. Whatever it may be, either steam, water, or air, an instrument—sometimes a Thermostat—is hung in a suitable position in the room; it has a sensitive part made of metal (see p. 2378) or composition (according to make) which expands with heat and actuates the small valves controlling the compressed air.

Another method of temperature regulation is to have a system of 'telethermometers,' all leading to one central point where the engineer is stationed.

Contract Temperatures and their Equivalents.

(Direct Radiation.)

These, which are of considerable interest to architects and engineers, have been the subject of considerable controversy. Some years ago a Committee of the American Institute of Heating and Ventilating Engineers reported on the subject; in 1903 Mr. Walter Jones gave a paper before the English Institute. Professor Allen's paper on 'The Coefficient of Heat Transmission in Cast Iron Radiation,' June 1908, is one of the most modern.

The expression

$$\frac{t_3 - t_2}{t_2 - t} = \frac{t_3 - t_5}{t_5 - t_4}$$

is considerably in error, *even taking into consideration the different coefficients of transmission, extra losses due to increased air changes, etc.* In the discussion on Professor Allen's paper, Mr. C. B. Thompson said he had recently made some tests, but could not get more than 105° F. inside, with an outside temperature of 85° F. and surface that gave 70° inside when 0° outside.

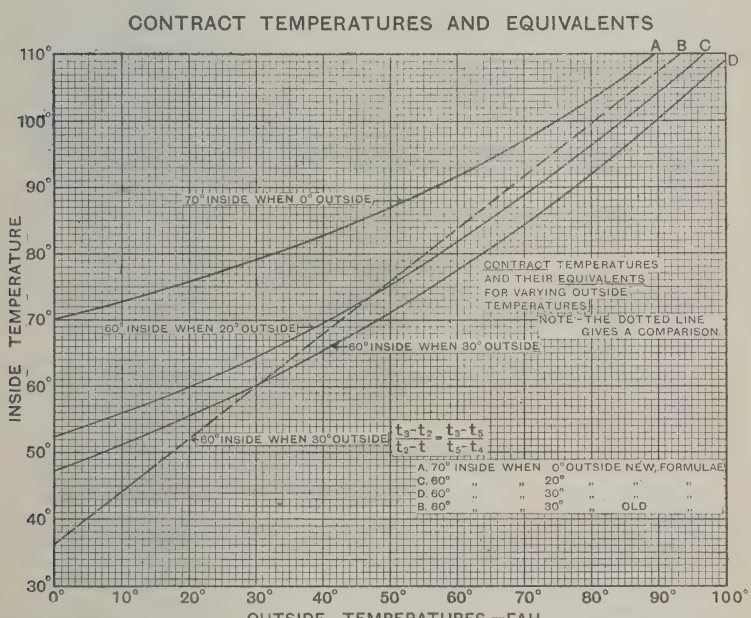


FIG. 10.

The following empirical formula is found to agree closely with *actual tests*:—

$$t_4 = [t_1^{12} - t_2^{12} + t_3]^{\frac{1}{12}}$$

where,

t_1 = contract inside absolute temperature F.
t_2 = contract outside " "
t_3 = existing " "
t_4 = estimated inside " "

The curves shown in fig. 10 are worked out from the above formula for reference under different contract conditions.

The time factor is an important one, as will be seen from fig. 11, which is from an actual test of a large public building warmed by steam-heated accelerated hot water. The upper curve shows the inside temperature, and the lower curve the outside temperature.

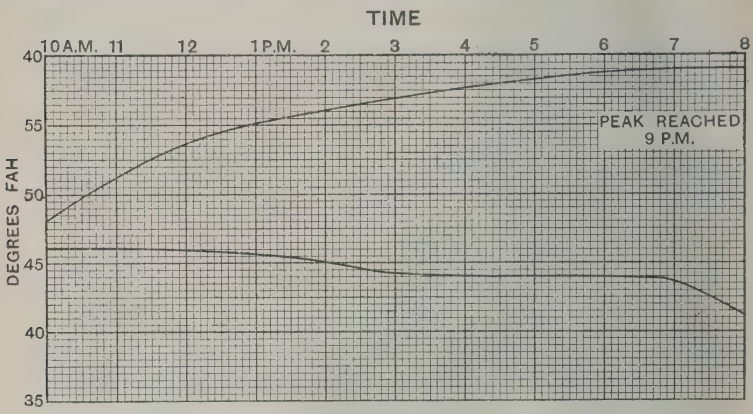


FIG. 11.

HOT WATER SUPPLY.

Hot water supply can be divided into three classes :—

1. Domestic hot water supply suitable for ordinary houses.
2. Hot water supply for institutions, hotels, etc.
3. For industrial work.

Domestic Hot Water Supply.

The general apparatus for this purpose in an ordinary house is a boiler behind the range, a cylinder in a convenient position, and a supply tank. Points which should have attention are as follows :—

Boiler and its flues should be so fixed in the range as to be easily cleaned ; also it should have an emptying tap.

Cylinder should be as near the boiler as possible, so as to ensure an easy circulation.

Feed tank should be in an accessible position unprotected from frost.

The fuel efficiency of a range boiler is low, and experience proves that even in quite small houses an independent boiler is more economical. It will be found that the major portion of the fuel used in a range is taken by the boiler, and not by the ovens required for cooking.

Institutions and Hotels Hot Water Supply.

For this class of work where steam is not required for other purposes, independent hot water boilers are the most economical. The type of boiler will depend on the nature of the water ; where the water is hard it is desirable to have the boiler of as simple a form as possible, with ample provision for cleaning out, a bolted top being very desirable in this connection. In some cases it may be found necessary to either soften the water or put in a system of secondary heating,

in which case the water in the boiler is circulated through a coil which heats the water in a secondary manner. Where the water is not hard, the sectional boilers bower-barffed have proved very successful and highly efficient. In domestic supply it is desirable that the cylinder, which would usually be of a horizontal type with dome ends, should be as near the boiler as possible; from this cylinder, secondary circulations of considerable length may be taken to the various parts of the building, to supply the different fitments. In arranging hot water supply circulations and draw-offs, it must always be remembered that where there is a branch off the circulation, and the tap on the end of that branch is open, so that water will flow both ways, both from the flow direction and from the return direction, the return, therefore, should connect to the cylinder at a high point. This is most important, and many failures have been due to neglect of this necessary arrangement.

In many cases steam is required, especially in institutions and hotels, for different purposes, such as cooking, etc., in such cases instead of having a separate hot water supply boiler, it is desirable to heat the water by steam; this is done by means of a calorifier; in principle it is simply a coil of steam pipe enclosed in a vessel of water, the steam being condensed and the latent heat of the same being conveyed through the coil to the water outside. This system also lends itself to thermostatic control. For this class of work it is very necessary that the pipe from the supply tank to the storage cylinder be of ample size. In some installations of a large size it is desirable to do away with the supply tank and simply keep the installation full by means of a pump, the pump automatically starting on a tap being opened. This system has many advantages, but is not so well known as the usual one of having a supply tank.

Method of ascertaining Heat necessary for a given Supply of Hot Water.

The basis of the calculations is that one British Thermal Unit will raise the temperature of 1 lb. of water 1° F. This figure varies a little according to the temperature of the water, but the variation is so small that for the purpose of hot water supply calculation, it may be neglected.

On this above basis we get the following simple formulæ

$$B = \frac{G \times 10 \times T}{H} + R,$$

where,

B = British Thermal Units per hour.
G = gallons of water.
T = degrees it is required to raise the temperature of water.
H = time in hours allowed for obtaining the required temperature.
R = radiation losses from pipes and cylinder, per hour.

Exampl .

It is required to raise 100 gallons of water from 40° F. to 150° in 2 hours; then

$$B = \frac{100 \times 10 \times 110}{2} = 55{,}000.$$

With regard to radiation losses, we may assume the cylinder and pipes loss to be, say, a mean of 10,000 B.Th.U. per hour; the total B.Th.U. per hour would then be

$$55{,}000 + 10{,}000 = 65{,}000.$$

It is assumed that the circulating pipes and cylinder would be covered with non-conducting material to conserve the heat.

A boiler will transmit on an average from 25,000 to 7,000 B.Th.U. per hour per foot of boiler surface, 2,500 being for secondary flue surface, and 7,000 for fume firepot surface. An average of 5,000 may be taken for an ordinary independent boiler with normal firing. A tube in a well-designed calorifier will transmit from, say, 8,000 B.Th.U. per foot at 1 lb. pressure to 37,000 B.Th.U. at 50 lbs. pressure. The pressure of the water surrounding the tubes has quite an appreciable effect on transmission, apart from the temperature of the steam.

Apart from the usual hot water supply in a hospital, a special sterilised supply is required for surgical work in the operating theatres; steam is generally used for this purpose, and the water is heated to sterilised temperature, or generally boiled, and the apparatus so arranged that the sterilised water does not come into contact with unsterilised water or air before it is delivered at the taps for the use of the surgeon.

Hot Water by Gas.

Gas is often used for the purpose of heating water, especially in small installations, and a very usual application of this, in an ordinary size house, is to connect up the gas-heating boiler to the circulating pipes, so that during the summer when the range is not required (the gas-cooker being used for cooking) the gas-heater boiler can be used when desired. Apart from the geysers, etc., the systems of heating the water are arranged in a general manner, as regards arrangements of circulation, etc. The amount of gas necessary is on the basis of the calorific value per cubic foot. The average calorific value of town gas is, say, about 500 B.Th.U.'s per cubic foot. Assuming the boilers of the heaters to have an efficiency of 80 per cent., this would mean that 400 B.Th.U.'s of the 500 should be actually transmitted to the water, so that, taking the amount of water to be heated as mentioned above, namely, 100 gals., to be raised 110°, which requires 65,000 B.Th.U.'s, this divided by 400 will give 16,250 cub. ft. of gas necessary.

Heating Water by Electricity.

For domestic uses, surgical work, industrial, and other purposes, a method of heating water by electricity is very handy; but there is a disadvantage, it is very expensive if a very large quantity of water is required; this will be seen from the following:—

The electrical Board of Trade Unit contains 3,411 B.Th.U.'s, and as the efficiency of electrical heating apparatus is very high, it may be considered that 3,000 B.Th.U.'s of the 3,411 would be transmitted to the water. Again, taking the quantity mentioned above, the amount of electricity required would be 65,000 B.Th.U.'s divided by 3,000, which gives us 21·9 units of electricity required. With regard to the type of heater, one very handy form, and one easily replaced, is the 'Immersion Heater.'

Industrial Hot Water Supply.

Hot water is required in a great many industries, and the method of heating the same is generally similar to the foregoing methods, although, very often, waste heat of the furnaces in various industrial processes can be utilised for heating the boiler. For some requirements, such as bottling, washing, etc., where it is desirable to have the water under considerable pressure, the closed pump system lends itself to this class of work. (*J. Roger Preston.*)

Heating and Drying.

Not infrequently rooms and chambers are found provided only with steam pipes, which have to do duty at night and in the day time in order to keep pace with requirements. Such rooms are very bad drying places, and very slow into the bargain, because the essential air current is lacking, and failure attends the introduction of a fan under these circumstances, owing to the influx of cold air following its use and lowering the temperature. To be effective the air must be raised to the required temperature before distribution and should act as a vehicle for the conveyance of the heat to and about the drying rooms or chambers.

To derive the maximum benefit from the use of exhaust steam, drying rooms of considerable size should have two or more divisions, as by this means operations may commence in one section soon after starting the engine, and conveniently proceed so that the operators may work in the cool part and finish up within a period of time to coincide with shutting off steam.

The proper temperature to effect rapid and perfect drying varies considerably, and depends upon the nature and texture of the material to be treated. Provided, however, the warm air current is fairly proportioned, then mechanical drying will considerably enhance the value and quality of the work, and vastly expedite and cheapen the process.

Heating and Drying by Gas.

Gas can be readily applied for the provision of a current of heated air for drying purposes on a small or large scale. Simplicity, low installation costs and accurate control (by themselves if desired) are the principal advantages. The temperature and degree of humidity of the heated air may if desired be put under automatic thermostatic control.

THE HUDSON AERO-CONDENSER.

This arrangement, figs. 12 and 13 (*The Hudson Economiser Co.*), is for the purpose of heating and drying by means of the spent steam from the exhaust pipe of the engine. The apparatus consists of a number of flat hollow galvanised steel plates, assembled in groups or batteries

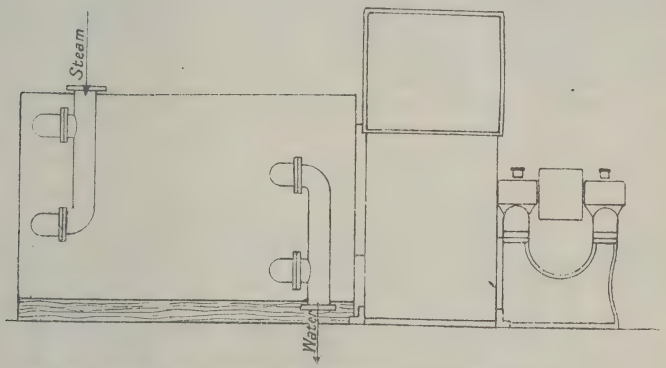


FIG. 12.—PATENT AIR HEATER AND CONDENSER, WITH CENTRIFUGAL FAN. (Top Horizontal Discharge.)

and arranged in a sheet iron case, to work in combination with a fan or blower. The plates are connected by an improved method, which provides a passage for the steam into and through the whole series, and preserves a given space for the air to pass between the separate elements. Cold air is drawn or forced by the fan through the spaces between the plates and absorbs the heat from

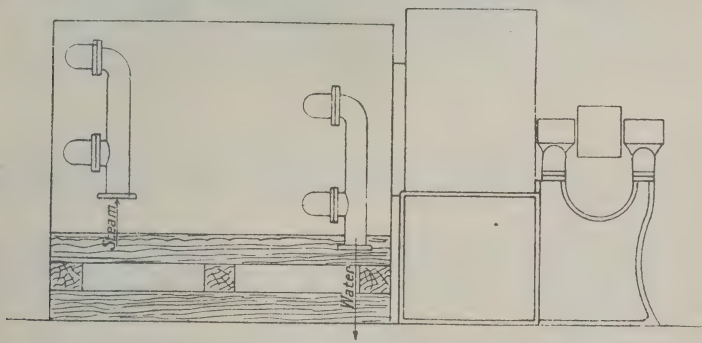


FIG. 13.—PATENT AIR HEATER AND CONDENSER, WITH CENTRIFUGAL FAN. (Bottom Horizontal Discharge.)

the steam circulating within. The steam and air are thus split up and divided into very thin alternate layers which move in opposite directions and rapidly exchange their temperatures, reducing the steam almost instantaneously from the vaporous condition to that of water and tending in like manner to raise the temperature of the air to a corresponding degree. The water of condensation falls to the bottom of the plate, and from thence to the drain pipe, to which may be attached an air pump when required for the production of vacuum.

The compact method of construction may be gathered from the fact that in each cubic foot of space occupied by the condensing battery there is no less than 38 square feet of effective surface.

and equal in point of area to 114 linear feet of 1-inch steam tube. The over-all measurement of an apparatus capable of passing 10,000 cubic feet of air per minute and raising its temperature 60° to 70° above the surrounding atmosphere is 2 ft. 2 ins. × 2 ft. 2 ins. × 4 ft. 6 ins.

The apparatus may be used in combination with a fan of the open type, or with a centrifugal fan, and the suitability or merits of one type compared with the other depend on the method proposed for the distribution of the hot air. The positive action of the centrifugal fan renders the best service in the delivery of air through ducts or channels of considerable length, and especially so when these have bends or branches which offer resistance to the passage of air, but in other circumstances the open-type air propeller has the advantage in moving a large volume of air at a minimum expenditure of power.

The apparatus may be fixed in a vertical or horizontal position, and will drain equally well in either case.

Drying Machinery.

The Ruggles-Coles Rotary Drying Machine.

This form of dryer (manufactured by *Electro-Metals Limited*, 56 *Kingsway*, *London*, *W. C.* 2) is of the double-shell type (fig. 14). It consists of two long concentric steel plate cylinders, set with the delivery end slightly lower than the feed end. Between the shells is the space which holds



Fig. 14.

the material being dried. The two cylinders are rigidly connected midway between the ends by six heavy cast braces. Additional support is obtained by placing swinging arms between this centre and each end, which allow for the unavoidable expansion and contraction due to differences in temperature. By means of this construction, shearing of rivets or loosening of joints is entirely eliminated.

The dryer is supported on two steel tyres riveted to the outer cylinder. These rest on four bearing wheels arranged in pairs on swinging arms, which latter rest on substantial cast-iron bases. The front base has thrust bearing wheels to hold the tyres on the supporting wheels. Distribution of the weight of the dryer takes place on eight bearing wheels, each of which has two bearings which prevent wear or overheating. The dryer is rotated by means of a heavy spur wheel fixed between the tyres and driven by a pinion shaft and pulley.

The interior construction of the dryer is as follows :—Lifting plates are fastened to the inside of the outer shell, running parallel to the axis of the dryer for its entire length. The revolving of the dryer causes these plates to lift, and drop the material being dried on to the hot inner shell, and by the inclination of the dryer the material is carried from the feed end to the delivery end. On the inside of the discharge head at the delivery end are riveted buckets which discharge the dried material through a central delivery casting. At the feed end the inner cylinder extends beyond and through the stationary head, and connects directly with the flue from the furnace. This inner cylinder forms an extended combustion chamber for the unconsumed gases leaving the furnace. Doors are provided at both ends of dryer for inspection purposes.

While the necessary draught for drying may be produced by a chimney stack, this is only possible where the exit gases are at a high temperature, about 450 to 500 degs. F., and if the gases were allowed to escape at this temperature the efficiency of the machine would be very low indeed.

The average temperature of the exit gases, depending of course upon the class of material to be dried, is 150 deg. F. or less. It is necessary, therefore, for an exhaust fan to be used for drawing the gases out of the dryer.

The operation of this type of dryer is as follows :—

The heated air and products of combustion from the furnace pass through the brick-lined connecting flue into the inner shell, thence to the rear end, where they turn and go back through the material being dried, and through an exhanst fan or stack to the outer air. The material is fed through the front head into the space between the two shells, is picked up by the lifting buckets, and dropped on to the inner shell. By the revolution of the machine it is dropped again to the outer shell to repeat the operation until, due to inclination of the machine, it reaches the rear end, where it is elevated and discharged through the centre of the rear head.

As the products of combustion travel twice the length of the shell, the capacity is practically the same as a single shell dryer of double its length.

On entering the machine, the temperature of the products of combustion is high (about 1,400°), but they begin to transfer their heat at once, through the wall of the inner shell to the cold and wet material, being held on top of it by the radial vanes. As they pass toward the rear end they give up practically all their heat, so that when they turn to pass back through the drying material they have been reduced to about 250 degrees. Additional outside air is then admitted to mix with them, so that the outside shell is cool at all times and the loss by radiation practically nothing. In passing back through the drying material being dried, from the delivery end to the feed end, they are still further reduced in temperature until, when they pass out through the fan or stack, they have been reduced to 150° F. or less, and the loss of heat in the exhaust is less than 7 per cent.

By this system of not allowing the products of combustion to come into contact with the material until they have been reduced to a very low temperature, the material can be delivered perfectly dry at a temperature below 212 degrees, so that little loss is occasioned by the sensible heat of the finished product. This is particularly valuable in a coal dryer, as no volatilisation or ignition is possible, while the economy of direct heat is obtained. On account of the small amount of radiation and the low temperature of the exhaust gases and dried materials an efficiency of 75 per cent., or better, is obtained in these dryers, figured from the calorific value of the fuel.

The class ' A ' type of dryer, generally described above, is made in eight different sizes and can be safely used where no harm is likely to be caused by the products of combustion coming into contact with the material being dried.

There are many materials which may be heated to a high temperature but which cannot be dried by direct heat on account of possible injury from the products of combustion. Again, many materials necessitate a steam-heated dryer. To deal with the former a modified form of dryer is used where the hot gases from the furnace, after passing through the central cylinder, return through tubes and out to the exhaust fan. For the latter, steam-heated pipes are used, the condensate being blown out automatically six times for every revolution of the dryer.

Several other types of Ruggles-Coles dryers exist, the whole range of designs providing a means by which practically any sort of material can be safely and satisfactorily dried.

SECTION XXXV

PART II

VENTILATION.

Amount of Air Necessary for Ventilation.

This should be based upon the number of occupants, the purpose for which the room is intended, and the number of hours it will be in constant use at one time.

The amount of carbon dioxide (CO_2) found present may be taken as an indication of the sanitary condition of the air and of its change of condition. Taking a standard of 6 volumes of CO_2 per 10,000 of air, each occupant would require about 3,000 cubic feet of air per hour.

The loss from any one surface, or amount of air, can be ascertained by the following formula:

$$U = H\ (t_1 - t_2)\ S.$$

Where U = British Thermal Units; t_1 = inside temperature F.; t_2 = outside temperature F.°; H = factor or heat loss from one sq. ft. of surface per deg. difference.

The combined losses from the various surfaces will give the total loss. For large rooms, 10 % less than the above is sufficient at ordinary temperatures generally required in this country, viz. 60° inside when the outside temperature is 30° (i.e. a difference of 30°), but the higher temperature of 70° inside is required in some countries.

Apart from the losses of heat through walls, etc., badly fitted window frames, direction of prevailing winds and aspect are points requiring consideration.

The curve (Fig. 15, p. 2128) shows the result of an actual test of air, observed in a large building heated by low-pressure hot water, the water being heated by high-pressure steam.

Distribution of Air.

The position and size of inlets and outlets depend upon the system of ventilation and style of building. In ordinary extract ventilation, the inlets are generally behind the radiators, the outlets at ceiling level. It is advisable to have extra outlets at floor level, as they assist to carry away any matter that may have fallen into the lower strata of air. Under certain conditions it may be advisable to have some outlets at the window-sills; cross ventilation may occasionally be applicable.

Convection currents are a most important factor in ventilation, and should be very closely studied; this can be conveniently done by blowing air through HCl and NH_3, thereby causing a dense white smoke (not heated), or by balanced mica vanes.

Out of over 100 tests, it was found that the CO_2 in upward ventilation under normal conditions increased with the height, while in downward ventilation it was fairly equally distributed. Inlets should never be quite at floor level or in such a position as to catch the dust. Where permissible, a brisk movement of air in a room gives a feeling of freshness.

Air Ducts and the Flow of Air.

The flow of air through a building resembles an electrical circuit, the inlets, outlets, and ducts acting as the resistance, and absorbing some of the aeromotive force. *To ensure an even flow in various ducts requires considerable care*, the resistance must be low, as the initial force in ventilation is small, usually equal to about 0·25 ins. of water, or 17 pneumatic units. In natural ventilation it is much less than this.

Air Cooling.

Tempering or heating coils may be used for this purpose by circulating calcium chloride brine through them.

Cooling costs much more than heating, owing to the condensation of the vapour present in the air. An ideal system is to have a combination cooling and heating plant, by which means the temperature and relative humidity are under complete control. In practice the air may be cooled from 15° to 20°, generally reducing the room temperature about 10°. The amount of brine to be circulated should be based on a drop of about 3°; the specific heat of the brine may be taken as 0·82, and in calculating the heat required for the reduction in temperature, the condensation of the vapour, according to the amount present or assumed, must not be forgotten. The heat in B.Th.U.'s required, divided by 12,000, will give the size of plant required, in tons of refrigeration per day of twenty-four hours.

Air Washers and Humidification.

The air washer finding the most favour at the present day for public buildings, and probably the most cleanly, is an arrangement of nozzles producing a fine spray. The washing action of this in part is probably due to a similar action to that found in Dr. Aitken's Dust Counter.

After passing the sprays, the air comes in contact with the eliminator plates, which collect the surplus moisture; the air at this point should be at such a temperature that, when raised to the room temperature, it will have a relative humidity of 60 per cent. to 70 per cent.

The relative humidity with either sprays, evaporating, or cooling coils, may be controlled in a similar manner to temperature, a 'humidistat' being used instead of a thermostat.

Flow of Air through Pipes.

The following will be found a handy formula for the flow of air through pipes:

$$C = \frac{39d^{2\cdot5}}{\left(\frac{L}{H}\right)^{\frac{1}{2}}}$$

where,

d = diameter of pipe in inches; L = length of pipe in feet; H = drop of pressure in inches of water; C = cubic feet of air per minute.

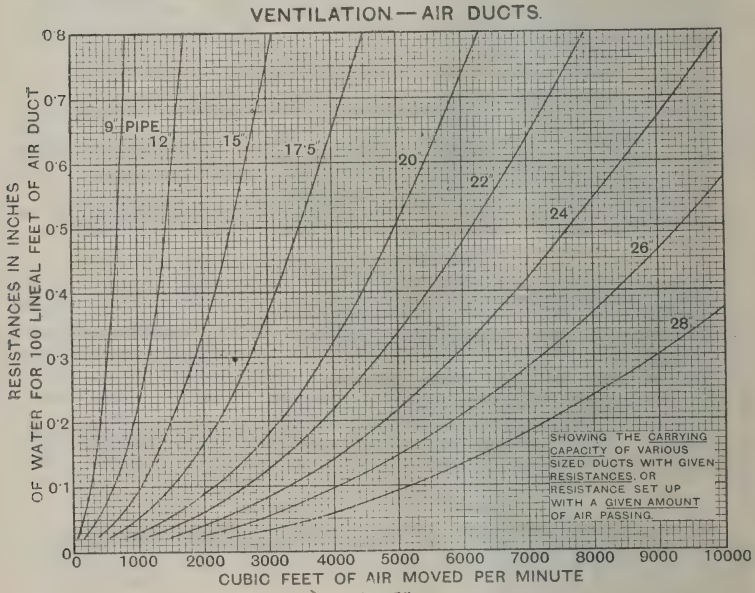


FIG. 15.

Fig 15 gives the carrying capacity at different pressures.

The number of bends, loss due to entry and registers, are a variable quantity. A bend may be taken as equivalent to a pipe 18 diameters in length; loss due to entry and register, 80 diameters.

Movement of Air Caused by Difference of Temperature.

As the air in a flue such as a chimney or outlet duct from a warmed room is at a higher temperature than the outside atmosphere its density is less, and the tendency is for it to rise. The resulting velocity of flow varies within wide limits, but is theoretically given by

$$V = 480\sqrt{\frac{h(T-t)}{t+460}},$$

where V = velocity of air in feet per minute: h = height of flue; T = temperature of heated air; t = outside temperature.

The actual velocity is considerably lower in practice, and the result from above formula should be multiplied by 0·25 to 0·6, according to size, shape, and materials.

THE BOYLE 'AIR-PUMP' VENTILATOR.

In the latest patented forms of Boyle's patent 'air-pump' ventilators the wind, striking against and being deflected by curved vanes causes a suction effect which draws out the foul air and effects perfect ventilation.

One form of the 'air-pump' ventilator, known as the *ridge* ventilator, is shown by fig. 16. The wind blows through the openings, and in passing over the curved plates causes a strong upward draught.

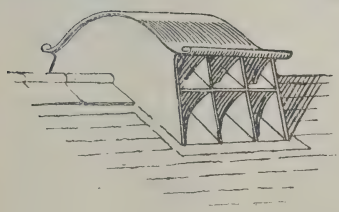


FIG. 16.

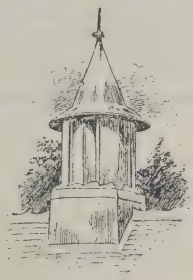


FIG. 17.

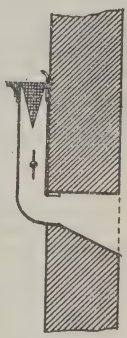


FIG. 18.

In the 'air-pump' ventilator (fig. 17) the curved vanes are set vertically.

For the necessary admission of fresh air to take the place of that extracted by the ventilator, Boyle's Air-Inlet Bracket, shown by fig. 18, may be adopted. The top of the inlet should be about 5 ft. 9 ins. above the level of the floor, and the outside opening should be covered with an iron grating.

Ventilation by Means of Fans.

PROPELLER FANS.

When the resistance of the ducts is small, say not more than 0·25 W.G., the propeller type of fan is suitable; it is cheap and easily fixed. As the resistance increases, the output drops very rapidly, as will be seen from fig. 15, p. 2128, plotted from actual tests.

To minimise noise, fans are arranged to run at a low speed; the output under these conditions is still more affected by resistance. Many failures are due to this point. The remedy is to have liberal sized ducts and fans.

An approximate formula for ascertaining the output of propeller fans is:—

$$O = KD^3R.$$

where,

O = output in cubic feet per minute; D = diameter in feet; R = revolutions per minute; K = a constant varying from 0·55 to 0·85, according to make of fan.

In testing several well-known makes of fans, K was found to vary as above. An open-bladed fan is more efficient than a close-bladed one under nearly all conditions.

CENTRIFUGAL FANS.

When the resistance is likely to be higher than 0·25 W.G., a centrifugal fan should be used; the efficiency is higher, but so is the price.

The actual outlet area of an ordinary centrifugal fan is about twenty-two times the capacity area; owing to the 'venacontracta' the effective area is about 0·8 of the actual, therefore the velocity at the outlet is 0·83 that of the peripheral speed. The amount of air required and resistance being known, the effective area can be calculated.

The ducts for 'propeller' fans, when required, should always equal the area of the fan at the fan; and care should be given to the design, so that the velocity of the air is as low as practicable. More than 760 feet per minute velocity will result in a considerable reduction of the output of the fan.

If silence is desired the peripheral speed of a 'propeller' fan should not exceed 4,000 feet per minute, and is safe at about 3,000 feet per minute.

The capacity of a 'centrifugal' fan varies very considerably according to design. For ventilating, drying, boiler draft, and similar work fans with blades curved forward at the tip are coming into general use: and they are capable of giving very high efficiencies. For a given duty the size of the casing, and therefore space occupied, is less than that of straight-bladed fans.

The power required to run a 'centrifugal' fan for a given duty is given by the following formula:—

$$\text{H.P.} = \frac{\text{C} \times \text{w.g. in.} \times 5{\cdot}2 \times 100}{33000 \times \text{E}},$$

where C = volume in cubic feet per minute; w.g. = resistance in inches of water; E = efficiency.

The efficiency is a very variable quantity, and depends upon the make of fan, also as to whether a suitable size of fan is used. If a suitable fan is chosen E will be about 40 per cent. with a straight-bladed fan, and about 50 per cent. with a curved forward bladed fan. A straight-bladed fan usually has six or eight blades, and a curved forward bladed fan from sixteen upwards.

When air is passed through ducts (steel, wood, or brick) a resistance is set up which varies as the square of the velocity. In other words, if the velocity is doubled the resistance will be quadrupled.

According to Professor Unwin, the resistance at 50° F. may be obtained by the following formula:—

$$\text{R} = \frac{\text{LV}^2}{14450d},$$

where R = resistance in inches of water (i.e. in. w.g.); L = length of duct in feet; V = velocity of air in feet per second; d = diameter or side of duct in inches;

from which, for a given resistance in inches w.g., the capacity of a given duct is

$$\text{Cubic feet per minute at } 50° \text{ F.} = 40\sqrt{\frac{d^5\text{R}}{\text{L}}}, \text{ for a circular duct;}$$

$$\text{" " " } = 50\sqrt{\frac{d^5\text{R}}{\text{L}}}, \text{ for a square duct.}$$

For different temperatures, multiply results by $\sqrt{\frac{460+t}{510}}$, where t = actual temperature (F.°) of air.

For a given resistance in ins. w.g. and given length, the size of duct is

$$\text{Diameter of duct} = \sqrt[5]{\left(\frac{\text{C}}{40}\right)^3 \times \frac{\text{L}}{\text{R}}},$$

$$\text{Side of square duct} = \sqrt[5]{\left(\frac{\text{C}}{50}\right) \times \frac{\text{L}}{\text{R}}},$$

where C = cubic feet per minute; L = length of duct in feet; R = resistance in inches of water.

The following particulars may be taken as representative of good practice for cased fans (fig. 19) suitable for ventilation purposes.


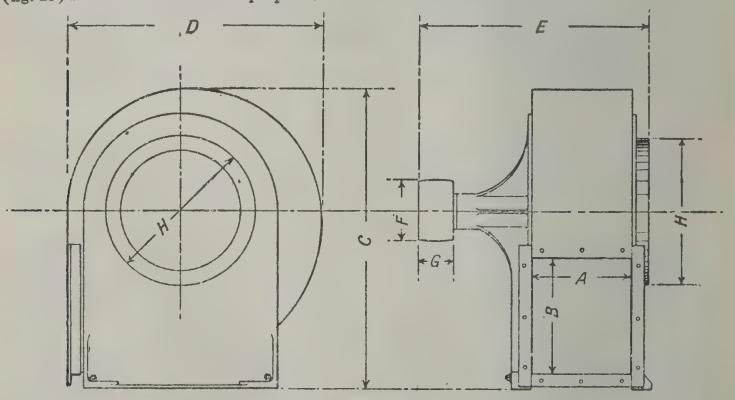


FIG. 19.

Awarded the £50 Prize with Grand Diploma (only prize offered) at the International Ventilator Competition, London.

BOYLE'S LATEST PATENT 'AIR-PUMP' VENTILATOR

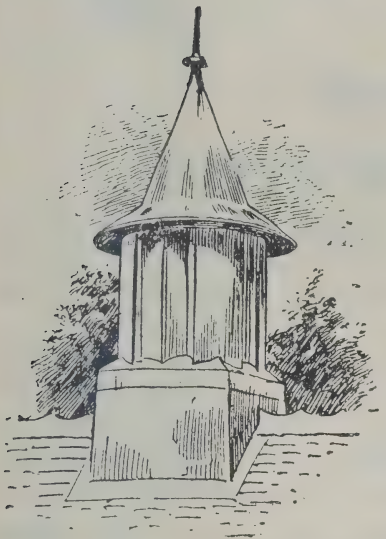HAS DOUBLE THE EXTRACTING POWER OF EARLIER FORMS.



No. 175

REPORTS.

"I have seen several different forms of Mr. Boyle's 'Air-Pump' Ventilator in actual operation, and have much pleasure in testifying to their efficiency."—LORD KELVIN.

"Since these excellent Ventilators have been introduced, we have now got a perfect method of ventilation."—SIR B. W. RICHARDSON, F.R.S., *Founder of the Royal Sanitary Institute.*

"It is constructed on sound scientific principles, acts in strict accordance with the laws of nature, and cannot fail to operate."—PROFESSOR GRANT.

"Messrs. Robert Boyle & Son, the founders of the profession of Ventilation Engineering, have raised the subject to the dignity of a science."—REPORT ON THE VENTILATION OF THE LONDON CUSTOM HOUSE.

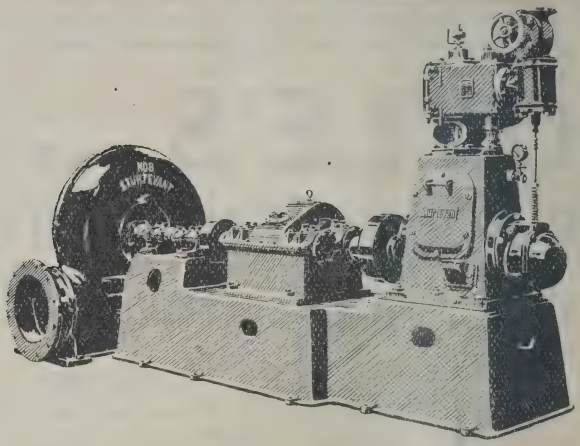
"Mr. Boyle's complete success in securing the required continuous upward impulse is testified to by high authorities."—EXTRACT FROM GOVERNMENT REPORT (*Blue Book*).

Highest Award (Two Gold Medals), Paris International Ventilator Competition.

ROBERT BOYLE & SON, Ventilating Engineers,

64 Holborn Viaduct, LONDON, E.C. 1.

F. 2130



Fans and Fan Systems

High Speed Steam Engines up to 450 B.H.P. for all purposes.

Steam-driven Electric Generating Sets of all sizes.

Heating and Ventilating, Dust and Refuse Collecting, Mechanical Draught, Forges & Forge Plants, Drying, &c.

Vacuum Cleaning, Stationery & Portable Plants

Complete Superphosphate Plants, Crushing, Grinding and Screening Machinery, Elevators and Conveyors.

Illustrated Booklets on any of these subjects sent on request.

Telegrams: 'Sturtevant, London.'

Sturtevant Engineering Co. Ltd.
147 Queen Victoria St., London

Please mention Engineer's Year Book.

F. 2121

APPROXIMATE DIMENSIONS IN INCHES, ETC.

No.	A.	B.	C.	D.	E.	F.	G.	H.	Against 1 in. w.g. resistance. Cub. ft. per min.	Speed r.p.m.	Power B.H.P.
12	10	11½	29½	25	23	6	3½	14½	2,750	980	0·9
15	12½	14½	37½	31	27½	7½	4½	18	4,550	810	1·5
18	15	17½	44	36⅜	33½	9	5½	21½	6,400	660	2·0
21	17½	20	50½	43	37¼	10½	6½	25	8,850	570	2·8
24	20	23	59	49	41½	12	7	28⅝	11,450	500	3·6
27	22½	26	66	55½	45½	13½	7	32½	14,600	440	4·6
30	25	29	73½	61¼	50	15	9	36	18,000	400	5·7
36	30	34½	88½	73¾	60	18	10½	43	26,000	335	8·2

(*Oswald Stott.*)

Blowers and Exhausters.

STURTEVANT BLOWERS AND EXHAUSTERS.

The design of a fan depends upon the pressure against which it has to discharge. A blower designed for low pressure is not suitable for high, and *vice versâ*. Figs. 20 to 26 show various types.




FIG. 20.

AIR PROPELLER.

For moving large volumes of air from one part to another where the resistance is low. Used for ventilating and exhausting.

MULTIVANE CENTRIFUGAL FAN.

For moving large volumes of air against 1 to 4 ins. water gauge. Fan wheel has shallow blades with corrugations to prevent lateral slip. Used for ventilating, drying apparatus, mechanical draught for boilers, etc.




FIG. 21

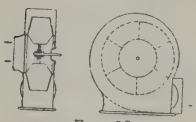


FIG. 22.

STEEL PLATE CASED CENTRIFUGAL FAN.

For air pressures up to 8 or 10 ins. water gauge. The square section steel plate casing is used, but the wheel has deeper blades and side plates (shrouds). Used for dust exhausting, conveying, etc.

CAST IRON CASING FAN.

For obtaining higher pressures up to 15 ins. water gauge, the casing must be more carefully designed and preferably made in cast iron. The wheel is narrower and deeper than that for lower pressures. Used for blowing forges, furnaces, etc.




FIG. 23.




FIG. 24.

HIGH PRESSURE FANS.

For blowing cupolas, etc., requiring air pressures from 12 to 30 ins. water gauge. The scroll must be most carefully designed and the wheel have a greater number of blades. For sizes and capacities of this fan see page 2252.

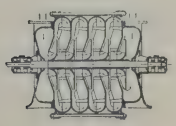


FIG. 25.

MULTISTAGE FANS.

For blowing and exhausting air at pressures up to 3 to 4 lbs. per square inch.

Rotary Blowers.



Fig. 26.

These are used for many duties, for blowing and exhausting air or gases where pressures up to 5 lbs. per square inch are required.

Power Variation of a Blower at Constant Speed.

Propeller Fans.—Power rises slightly with pressure; volume decreases rapidly as pressure rises.

Centrifugal Fans.—Power increases as pressure falls, and volume increases.

Rotary Blowers.—Power increases directly with pressure, volume remaining about constant.
(*Sturtevant.*

The 'Wing' Fan.

(*F. W. Potter & Co.*)

The general arrangement of the blades of the Wing fan or air propeller is shown by fig. 26. It is claimed that the Wing fan, for a given amount of power, will move a greater volume of air than any other pattern, owing to the shape, angle, and curvature of the blades, and the method of securing them to the central boss. It has been found that an angle of 27½° to 30° is the best all-round angle for combined output and efficiency.

A distinctive and useful feature of the fan is the adjustability of the angle of the blades, the latter being readily set to any angle. If desired, the direction of the air current may be reversed, this reversal of the air current being effected without impairing the efficiency of the fan.

The blades of the Wing fan are usually made of steel, but for certain purposes they are made of copper, aluminium, or Muntz metal.

The fan wheel is mounted on a spindle running in bearings lined with best quality Babbitt metal, and the framing is constructed of cast iron or wrought iron according to circumstances.

The Wing fan is manufactured in all sizes, arranged with pulley for belt drive, or direct coupled to electric motor.

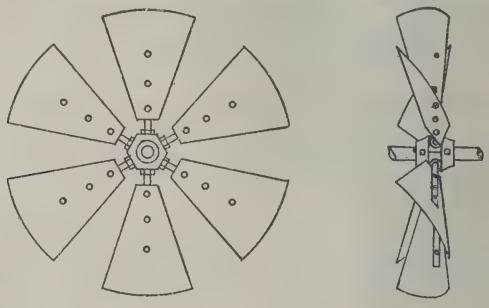


Fig. 27.

Economy of Power.—Where conditions permit of the choice between a propeller type and a centrifugal type of fan, the following rules are useful:—

(*a*) For open ventilation use propeller fans.
(*b*) Make main air duct same diameter as fan, or larger, avoiding acute or sharp angle bends.
(*c*) When small ducts and sharp bends are unavoidable use centrifugal fans.
(*d*) Use large fans at as low a speed as will overcome whatever resistance is in the way of free passage of air.

Example.—A 10 ft. Wing fan at 90 revs. per min. delivers 71,000 cu. ft. of air per min., absorbing 1·2 h.p.

A 5 ft. Wing fan at 720 revs. per min. delivers 71,000 cu. ft. of air per min., absorbing 19·2 h.p. Volume for volume, therefore, the smaller fan uses 16 times the power absorbed by the larger fan.

(*c*) Use two fans of the same diameter at low speed instead of one at double the speed.

Example.—A 48 in. Wing fan at 600 revs. per min. delivers 30,200 cu. ft. of air per min., absorbing 3·6 h.p.

Two 48 in. Wing fans at 300 revs. per min. deliver 30,200 cu. ft. of air per min., absorbing ·9 h.p. together.

Volume for volume, therefore, one fan uses four times the power absorbed by two fans.

APPROXIMATE CAPACITIES OF 'WING' FANS (SMALLER SIZES).

Diam. of Fan Blades Ins.	Silent Speed.			For ordinary Ventilation.			For Factories and Engine Rooms.			Fast Speeds.		
	Revs. per Min.	Net H.P.	Cubic Ft. per Min.	Revs. per Min.	Net H.P.	Cubic Ft. per Min.	Revs. per Min.	Net H.P.	Cubic Ft. per Min.	Revs. per Min.	Net H.P.	Cubic Ft. per Min.
14	680	·012	850	1,090	·05	1,360	1,540	·13	1,930	2,000	·29	2,500
18	530	·02	1,410	850	·08	2,250	1,200	·22	3,170	1,600	·51	4,250
24	398	·034	2,510	640	·14	4,050	960	·40	5,680	1,200	·92	7,550
30	318	·052	3,900	510	·21	6,260	720	·63	8,850	960	1·50	11,800
36	265	·074	5,620	425	·30	9,000	600	·87	12,700	800	2·05	17,000
42	228	·10	7,680	364	·43	12,250	515	1·20	17,400	685	2·75	23,100
48	200	·14	10,100	318	·55	16,100	450	1·55	22,600	600	3·60	30,200
54	177	·17	12,700	283	·68	20,300	400	1·95	28,700	535	4·70	38,300
60	145	·19	14,300	255	·85	25,000	360	2·4	35,400	480	6·00	47,200

MOTORS FOR DRIVING VENTILATING FANS.

Too much cannot be said regarding the location of the motor. On account of the nature of the work it is frequently necessary to place the machine in an out-of-the-way place, although this does not necessarily mean that it must be in an inaccessible location. If it is so placed that it is difficult to care for, it will probably be neglected, with the result that the service will be impaired and the maintenance charge will be high. The placing of a motor in an inconvenient place because nothing else will go there, is false economy generally, and results in dissatisfaction. The question of motor efficiency in regard to fan drives is an important one and involves two factors—the efficiency of the motor when operating under normal speed, and the efficiency at other than normal speeds. Although the latter is, to some extent, influenced by inherent characteristics of the motor, the largest factor is the method of control, especially with direct-current motors. If, on account of its lower cost, a motor is selected, where adjustable speed is required, that will, when operating at normal speed, drive the fan at the maximum required speed, and it is necessary to operate for considerable periods at reduced speed, low efficiency will result.

The cost of the power lost in the armature external resistance will usually pay a handsome dividend on the additional capital required to install a motor and controller that, at normal speed, will drive the fan at the lowest speed required and beyond this point adjust the speed by field control.

The horse-power required to drive a centrifugal fan can be estimated from the following formula:

$$HP = \frac{5{\cdot}2 \times Q \times WG}{33{,}000 \times E}$$

Where, HP = horse-power of motor; Q = cubic feet of air per minute; WG = pressure of air in inches by water gauge; E = efficiency of fan, which is approximately 0·5 for steel plate fan, 0·65 for Sirocco, and 0·45 for cone type.

The following mathematical relations are theoretically true for all centrifugal fans: Volume of air delivered varies as the speed; pressure of air delivered varies as the square of the speed; horse-power required varies as the cube of the speed. Hence a fan, which, when operated at 100 r.p.m. delivers 8,000 cub. ft. of air at ½ oz. pressure, requires 2 h.p., will, when operated at 200 r.p.m., deliver 16,000 cub. ft. of air at 2-oz. pressure and will require 16 h.p. It is therefore necessary, in selecting a motor for driving a fan, to figure the horse-power requirements at the maximum speed of the fan.

Reduction of the area of the inlet or discharge of a centrifugal fan will reduce the power required, whereas increasing the area of either will increase the power. Disc fans produce a relatively low pressure, and it is customary to figure their output on a basis of velocity. The

relations between volume, speed, and horse-power for centrifugal fans hold good for disc fans. However, if the outlet of a disc fan is restricted, the pressure and the power required increase, and with a totally closed outlet the power needed is almost double that with an unrestricted outlet. (*' Power.'*)

The Plenum System.

This system (*The Sturtevant Engineering Co. Ltd.*) is well adapted for the economical warming and ventilation of workshops, large halls, theatres, and other large buildings. The apparatus consists of a fan which draws in fresh air, delivering it through a heater where it is

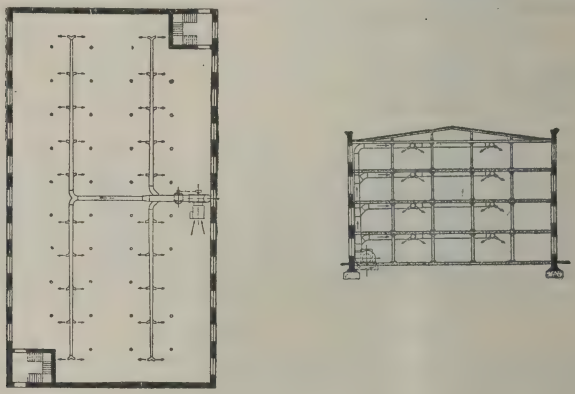


FIG. 28.

warmed to the required temperature, and then evenly distributed through a series of ducts to every part of the building. The fan is usually of the steel-plate type driven by belt from line shafting, steam engine, or electric motor; the heater is built up with a nest of pipes for

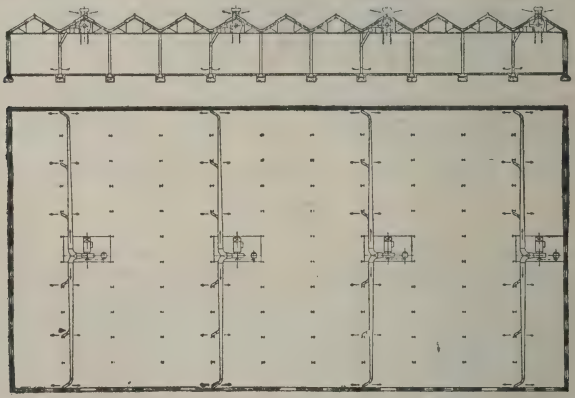


FIG. 29.

use with live or exhaust steam, hot water, furnace gases, etc. Ducts for distributing the air are constructed of galvanised sheet steel, masonry, wood, or other materials, and may be built in the walls or floors, or suspended from the roof or walls.

The system ensures even distribution of warmth throughout the whole building with proper ventilation. In the summer the heater can be eliminated and fresh air distributed throughout the buildings. Workshops can be quickly warmed up in the morning before work is commenced, by recirculating the air. The fan and heater can be installed at one central point either inside the building or outside, and they are under complete control of one man who can regulate the temperature of the air supply as required.

Two types of buildings equipped with this system are shown by figs. 28 and 29. Fig. 28 illustrates a building of several storeys, in which the apparatus is placed in the basement, one air main being carried up through the building with overhead horizontal distributing pipes on each floor.

Fig. 29 shows a large workshop of considerable height, in which the apparatus is divided into four units in order to keep down the size of the air piping. The sets of apparatus are placed out of the way in the roof, the air being distributed by overhead pipes and discharged at floor level through downtake pipes arranged alongside the column. An alternative arrangement would be to install one set of apparatus and connect it with each of the pipe mains.

Notes on the Progress of Mechanical Ventilation.

The point now reached in the practice of ventilation cannot be ascertained by a mere examination either of public buildings or of those edifices erected in recent years by our urban school boards; valuable information can, however, be obtained by observing the effect of the regulations issued by the Secretary of State under the Cotton Cloth Factories Act, 1897. The Chief Inspector of Factories in his Annual Report for 1900, referring to a regulation on the ventilation of humidified weaving sheds, says that it 'for the first time in the history of factory legislation, aimed at a scientific standard of ventilation based on the actual purity of the air breathed by the workers. This was to be determined by ascertaining the proportion of carbonic acid (CO_2) present in the air of the shed.' The regulation, which was made after an exhaustive enquiry by a committee consisting of Sir Henry Roscoe (chairman), the late Sir Wm. Roberts, and Dr. Ransome, reads as follows:—

'The arrangements for ventilation shall be such that, during working hours, in no part of the Cotton Cloth Factory shall the proportion of carbonic acid (carbon dioxide) in the air be greater than 9 volumes of carbonic acid to every 10,000 volumes of air.'

In practice this is complied with if the CO_2 in the shed does not exceed that outside the factory at the time by more than 5 volumes per 10,000.

In the Report, a table gives the results of tests made in 35 weaving sheds (affecting over 6,000 workers), and shows the improvement effected by (mechanical) ventilating arrangements, viz., that the number of volumes of CO_2 due to respiration (as the 5 above mentioned) was reduced on an average from 9·0 to 3·9, and in some instances in the proportion of 3 to 1. With these may be compared tests taken recently by a qualified observer in a manufacturing district. As the tests in weaving sheds are taken by H.M. Inspector at any time without previous notice, and at any point he may choose, it is clear that the distribution of ventilating effect is satisfactory.

The cost of installing and working the plant is very moderate, varying with the number of operatives, and the excellent value in ventilation for the outlay is no doubt partly consequent on the fact that shafting for driving the fans employed is easily available throughout the sheds.

Large numbers of fans are used in these weaving sheds; they are generally 14 ins. in diameter, and are fixed a moderate distance apart. Some in each shed draw fresh air downwards through the roof and blow it abroad immediately below the tie beam level; others, a smaller number suitably placed, continually exhaust vitiated air, discharging it upwards through the same roof.

One of the points thus secured is that none of the air passed through the building remains inside long enough to become overcharged with CO_2, and another is that there is slight plenum maintained, preventing any inrush of cold air through open doors, etc.

These sheds are, as a rule, warmed by lines of steam pipes suspended overhead, and a coil of smaller steam piping is often fitted inside the air inlet tube, so that in cold weather the fresh air is warmed as it is drawn in by the fan. The arrangement, as above described, includes little or no resistance to be overcome by the fans; the driving power required is therefore very small.

Size of Outlet Shafts.

The total sectional area of the outlet shafts, looking only to the atmospheric pressure as a motive force, can be approximately calculated for varying conditions of temperature and different heights of shafts from the following formula :—

x = total sectional area, in inches, of the required outlet shafts. D = total cubic feet of fresh air to be supplied by warm and cold air inlets. H = height of heated air column from level of inlets to top of outlets. t = excess, in degrees F., of the mean temperature of heated air column over outside air.

Then $$x = k\frac{D}{9\sqrt{Ht}};$$

where k is a constant depending on the size, height, and nature of the shaft ; its value is generally taken at $\frac{1}{3}$ to $\frac{1}{2}$.

With ordinary open fireplaces the sectional area of the outlet shaft need only be half the value thus found, the smoke flues doing duty for the rest.

SECTION XXXV

PART III

LIGHTING

Standards of Light.

The legal standard unit for measuring the intensity of light is assumed to be that produced by a sperm candle, 'short 6.' burning 120 grains per hour.

A spermaceti candle 0·85 in. in diameter burns about 1 in. per hour, but for practical purposes the Harcourt lamp burning pentane, having a value of 10 candles (see Gas Section), the official gas referees' standard, is more convenient. In Germany the standard used is the Hefner (an amylacetate lamp). It is now coming largely into use in connection with the extended use of German-made rare metal metallic filament glow lamps. Its value is about 88 standard candles.

By an agreement which came into force on April 1, 1909, between the National Physical Laboratory, the Bureau of Standards, and the Laboratoire Centrale d'Electricité, a common unit of light was adopted for Great Britain, the United States, and France, namely, 1 pentane candle = 1 bougie décimale = 1 American candle, which is practically identical with the British Parliamentary candle above-mentioned. The Hefner unit is 0·90 of the international candle, and the Carcel unit = 9·6 int. candles.

Illumination.

Illumination, or the amount of light received by an object per unit area, is measured in terms of foot-candles. Thus a small surface held one foot away from a standard candle would have an illumination of one foot-candle.

The intensity is directly proportional to the C.P. and inversely proportional to the square of the distance, i.e. $I = \frac{C.P.}{d^2}$. If 1 C.P. be considered as the centre of a sphere of 1 ft. radius, the intensity on the internal sphere will be unity (spherical C.P.). The surface illuminated will be 4π sq. ft. Hence, if the sphere be of radius r, the surface will be $4\pi r^2$, and $I = \frac{4\pi}{4\pi r^2} = \frac{1}{r}$ candle feet. If a surface be oblique to the rays, $I = \frac{C.P.}{r^2} \cos\theta$, $\cos\theta$ being the angle of incidence.

I to light a room is generally based upon the assumption that 16 C.P. 8 ft. high is sufficient for a surface of 8 ft. square (64 sq. ft.), but this depends largely upon the reflecting power of ceilings and walls which varies greatly (see table).

Approximate Reflecting Power of Surfaces.

	Per cent.		Per cent.
White, rough	82	Blue paper	25
Cream	80	Wood, dirty	20
White, smooth	70	Brown paper	13
White printed matter (grey)	60	Brown, dark	4
Wood, clean	50	Black cloth	1·5
Yellow paper (light)	40	Black velvet	·5
Yellow, dark	30		

Under favourable conditions, I, for a given surface illumination, may be considerably reduced but, on the other hand, the figure given above may not be sufficient.

In fig. 1, if A is a lamp (electric or otherwise) giving 16 c.p. in a horizontal direction, the illumination at the point B, four feet distant, would be $\frac{16}{4^2} = 1$ foot-candle, since the intensity of light varies inversely as the square of the distance. To get the normal illumination at any given point, the candle-power in the proper direction must be divided by the square of the distance to the point illuminated. As previously explained, if the surface illuminated is not at right angles to the direction of the light, the value of the illumination obtained as above must be multiplied by a reduction factor, taking into account the angle at which the rays strike. A beam of light coming in the direction OD (fig. 2) falls upon a plane AB, illuminating it

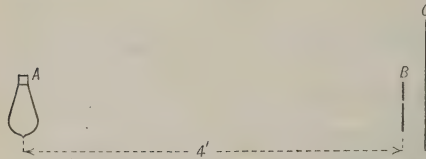


FIG. 1.

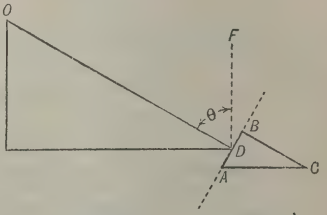


FIG. 2.

with an intensity of 1 foot-candle. Then the illumination on the plane AC, which intercepts the same amount of light as AB, would be less than 1 foot-candle (as the light is spread over a larger surface) in the ratio of AB to AC, which is the cosine of the angle ODF. Thus the illumination effective on any plane at a given point will be

$$\frac{\text{c.-p.}}{(\text{distance})^2} \times \cos\theta$$

where θ is the angle between the direction of the ray and a perpendicular to the plane considered.

Photometers.

Lights of different colour cannot be compared accurately. No two observers agree upon the candle-power of a light by the ordinary photometer.

The Simmance-Abady Flicker Photometer is based on the fact that if a spot be illuminated in rapid alternations by two different coloured lights of equal intensity the spot will be steadily illuminated without appearance of flicker.

To obtain, by means of this photometer, the candle-power of a powerful light of a white colour relative to the standard Pentane burner, the light to be tested is made to shine on one side of a polished prism, and an Argand flame of the same colour as the Pentane lamp flame shines on the other side. The two sides incline at an angle of 90°. The prism (or, rather, right-angled mirror) is driven rapidly to and fro in the line of the lights through a short distance, an electric motor serving to drive it. The alternation of the mirror is very rapid, and the two pencils of light on the opposite sides are reflected alternately to the eye. The Argand light is regulated by a lever until the spot loses its flickering appearance; the two lights are then in balance. The Argand burner is now compared on the ordinary bar method with the standard flame. The Flicker photometer is so arranged that the first and second lights have a ratio of 100 : 1. Thus by multiplying the ratio of the second and third by 100, the ratio of the first to the third or standard is secured irrespective of colour influence.

Distribution Curves.

The basis of most calculation of illumination is the distribution curve of the lighting unit (lamp plus reflector or globe). Such a curve is shown in fig. 3, and indicates the distribution of light in a vertical plane, the lamp being hung tip downward. The distance from the centre to any point on the curve is directly proportional to the candle-power in that direction, which may conveniently be read off by the aid of the equally spaced concentric circles on the diagram.

The effect of a reflector in directing the light and improving the distribution may be seen

from a comparison of the two curves in fig. 3. The bare lamp (Curve A) throws nearly one-half the light above the horizontal where it is ordinarily of little use. On the other hand,

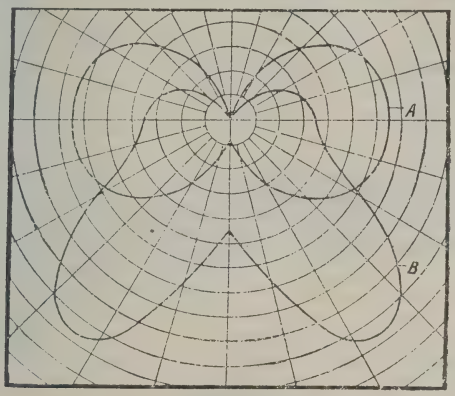


FIG. 3.

with a properly designed reflector (Curve B), the total light below the horizontal besides being more advantageously directed is increased by over 20 per cent.

REQUIREMENTS OF GOOD ILLUMINATION.

Illumination must be acceptable to the eye. We should be able to see objects clearly and with a minimum of fatigue. To accomplish this result certain conditions must be fulfilled.

(1) There must be sufficient illumination. Since objects are seen by means of the light which they reflect, more light must be thrown on dark objects than on light ones.

(2) There must not be too much illumination. Too strong a light tires the eye, partly due to the muscular effort of contracting the iris, and partly because of the strong light reaching the sensitive retina.

(3) Intensely bright lights in the field of vision should be avoided. The iris closes somewhat in order to afford a protection from such lights, and the amount of light received from illuminated objects is thereby so reduced that they cannot be seen clearly. This accounts for the well-known dazzling effects of searchlights and of many headlights. The intrinsic brilliancy or candle-power per square inch of luminous area should therefore be kept as low as possible ; it should not ordinarily be higher than 4 to 6, if the source of light is in the field of vision. Clear bulbs should certainly never be used where the filaments are continuously in view. When reflectors are used it is generally desirable to ' bowl-frost ' the lamps, i.e. frost only the lower portion of the bulbs.

(4) Flickering lights should be avoided. Poorly regulated circuits, such as those having varying power loads, cause disagreeable flickering. Metal filament lamps have an inherently better regulation than carbon filament lamps.

(5) The light should have a continuous spectrum, i.e. one containing every colour, in order that the relative colour values of objects illuminated may be the same as when seen by daylight. For matching delicate tints, as in silk and paper mills, the light should be as white as possible, while for general illuminating purposes a ' warm ' light is best ; cold glaring lights too rich in green and blue are to be avoided.

The size of the units is somewhat a matter of choice. In deciding upon the proper sizes of lamps to use, one must consider the spacing of present outlets, if building is already wired, and the location of pillars, beams, etc. In general the fewest units consistent with good distribution will be the most economical, as the total cost of outlets, fixtures, and lamps, as well as the maintenance charges, will be reduced.

TABLE SHOWING THE INTENSITY OF ILLUMINATION REQUIRED IN DIFFERENT PLACES.

Places.	Foot Candles Required.
Auditoriums, Theatres	1 to 3
Bookkeeping	3 ,, 5
Corridors, Halls	·5 ,, 1
Assembly Halls and Churches	·75 ,, 1·5
Drafting Rooms	5 ,, 10
Desk Lighting	2 ,, 5
Engraving	5 ,, 10
Factories, General, where individual drops are used	2 ,, 3
,, Complete, no individual drops	4 ,, 5
Hotel Halls	1 ,, 5
,, Rooms	2 ,, 3
Offices (Waiting Rooms)	1·25 ,, 2·5
,, (Private)	2 ,, 3
,, (General)	3 ,, 4
,, (where desk lights are used)	1·5 ,, 2·5
Post Offices	2 ,, 5
Reading	1 ,, 3
Residences	1 ,, 3
Shops (Light Goods)	2 ,, 3
,, (Dry Goods)	4 ,, 6
,, (Clothing)	4 ,, 7
Shop Windows	5 ,, 20
School Rooms	2 ,, 3
Saloons, Cafés, depending on effects	2 ,, 5
Stations (Waiting Rooms)	1·5 ,, 2·5
Train Sheds	1·5 ,, 2
Warehouses	1·5 ,, 2

(*Bulletin of the National Electric Lamp Association.*)

Reflectors.

The importance attaching to a suitable reflector as a means of efficiently distributing the light in the direction required, in addition to concealing the bare filament of the lamp, cannot be over-estimated. Particularly does this apply in the case of the half-watt lamp, the glare

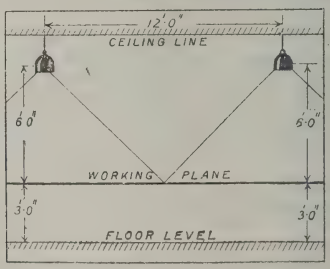


FIG. 4.

of which, consequent upon the high intrinsic brilliancy, renders a reflector or shade of some sort absolutely necessary. Care must be taken to avoid too much light from any particular direction, causing shadows and uneven illumination. The following four types of reflectors may be used :—

Extra Extensive Type :—Spaced at a distance apart equal to two and a half times their mounting height.



Factory Lighting.

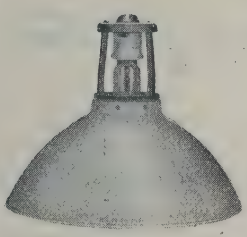
The necessity of efficient lighting in Factories is more than ever emphasised at present, when it is appreciated that the majority are engaged in producing important commodities requiring the utmost efficiency in all conditions pertaining to their production.

This efficiency in Illumination can only be obtained by the use of scientifically designed fittings—our speciality—and the large range of designs included in our latest list enables the Engineer to meet all conditions.

Fittings for use with half-watt lamps have been given particular attention, as we consider that the combination of the half-watt lamp with a Benjamin Reflector reaches a degree of efficiency hitherto unattainable.

We retain an Engineering Department at your free disposal for the formulating of Industrial Lighting Schemes and cordially invite your enquiries.

Specify Benjamin British Made Reflectors, full particulars of which will be sent on application.



Concentrating Type Reflector Fitting for half-watt lamps up to 1500 watts.

THE

Benjamin Electric Ltd.,

BRANTWOOD WORKS,

Tariff Road, Tottenham, London, N. 17

A few Benjamin Lines



CONCENTRATING TYPE REFLECTOR FITTING.



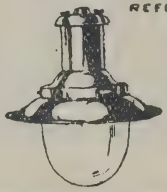
INTENSIVE TYPE STEEL REFLECTOR



DISTRIBUTING TYPE REFLECTOR FITTING



CONCENTRATING TYPE CLUSTER FITTING



HALF-WATT LANTERN.



PARABOLIC TYPE REFLECTOR FITTING



DISTRIBUTING TYPE CLUSTER FITTING

& a few of their outstanding features.

THE ORIGINAL & MOST WIDELY USED of any form of Industrial Lighting Fittings.
PRACTICALLY INDESTRUCTIBLE—constructed throughout of Steel
SCIENTIFIC DESIGN giving the best distribution of light.
ALL FITTINGS SUPPLIED COMPLETE WITH HOLDER.
FOR USE WITH HALF-WATT OR ONE-WATT LAMPS.
WIDE RANGE OF DESIGNS for every class of Installation.
LOW INITIAL COST with no renewal expenses.
BRITISH MADE in our own London Works.

REGISTERED TRADE MARK

THE BENJAMIN ELECTRIC LIMITED,
Brantwood Works, TARIFF ROAD, TOTTENHAM, LONDON, N. 17.

Extensive Type:—Spaced at a distance apart equal to twice their mounting height.

Intensive Type:—Spaced at a distance apart equal to one and a half times their mounting height.

Focusing Type:—Spaced at a distance apart equal to their mounting height.

The mounting height is the distance between the centre of the light source and *the working plane.*

Fig. 4 shows the importance of adhering to these spacing rules as closely as possible, uniform



FIG. 5.—General Lighting in a large Cable Works (Benjamin Reflector Fittings).

illumination being obtained on the working plane with the two extensive type reflectors only when spaced correctly (twice their mounting height).

In this fig. the working plane is shown 3 ft. above floor level, but this height will vary according to conditions and class of work carried on.

Local lighting is necessary where an intensive illumination is needed over a limited area, as in the cases of machines, lathes, benches, etc. Also it is essential that the light should be well shaded owing to its close proximity to the operator's eyes.

A combined scheme of local and general lighting is necessary in the case of a great number of industrial installations, the local lighting being used in places requiring a greater intensity of illumination than that given by the general lighting units. In addition, a scheme of this sort is to be recommended, inasmuch as the inclusion of the general lighting is the means of avoiding fatigue to the eyes of the operators consequent upon the great contrast between the brightly illuminated local points and the dark surroundings.

The above recommendations deal more particularly with the direct system of illumination. Other forms include indirect and semi-indirect systems, both of which, however, are dependent to a large extent on the surroundings, such as ceilings, walls, etc., for efficient reflection. Owing, however, to the general absence of such favourable surroundings in the typical industrial establishment or engineering workshop, they are not to be recommended. There are, of course, instances such as drawing offices, etc., where such methods are the only ones likely to give the desired results, the entire absence of glare and the perfect diffusion of light being important points in their favour. From the standpoint of economy the semi-indirect and indirect systems of illumination do not compare unfavourably with the direct system when the conditions are suitable for their adoption.

Calculation of Illumination.

A short way of computing illumination is based on the fact that a certain definite quantity of light is required to illuminate one square foot of surface with an intensity of one foot-candle. This unit is known as the 'Lumen'; therefore when a lamp is capable of illuminating 400 sq. ft. with an average of one foot-candle it may be rated at 400 (effective) lumens. To arrive at a satisfactory result, however, the effective lumens per watt of the lamp used should be known. This constant is the most useful in illumination calculation, as it is invariable and can be used as a factor in a simple manner to give effective lumens, wattage, or intensity in foot-candles.

The average generated lumens per watt for half-watt lamps is 14, and for one-watt lamps 9 lumens per watt. Based on a variety of installations, it has been ascertained that approximately 50 per cent. of the generated lumens are effective, allowing for absorption, etc. Therefore the effective lumens per watt can be safely taken as 7 for half-watt lamps, and 4·5 for one-watt lamps.

If A = area to be illuminated ; C = a constant ; I = intensity in foot-candles required ; W = watts required ; then

$\frac{A \times I}{C}$ = watts ; $\frac{C \times W}{A}$ = intensity in foot-candles ; $\frac{I \times A}{W}$ = constant (effective lumens per watt).

Example: It is required to know the necessary wattage for an installation, the following data being given :—

I = 5 ft. candles ; A = 500 sq. ft. ; C = 7 (constant for half-watt lamp).

Then

$$\frac{I \times A}{C} = \frac{5 \times 500}{7} = 357 \text{ total watts.}$$

The area should be next divided into squares with units located in centre of each (bearing in mind the type of reflectors it is proposed to use).

The above recommendations apply for areas and works with the usual surroundings and conditions ; in the case of dark surroundings, or where the colour of the material or machines worked upon is dark, it is advisable to allow more light, increasing the wattage by 20 per cent. to 50 per cent. or even more, according to conditions. The necessity of this is an established fact and should always be borne in mind when deciding on the light required.

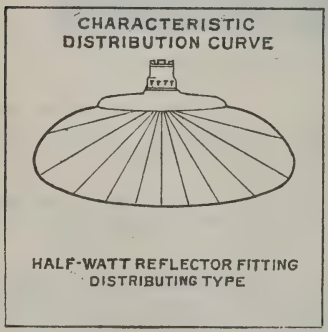


Fig. 6.

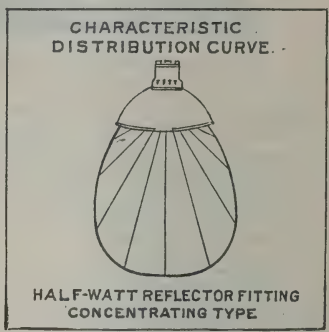


Fig. 7.

Figs. 6, 7 respectively show the characteristic distribution curves of a distributing reflector fitting, which to obtain even illumination should be spaced at a distance apart equal to one and a half times to twice the mounting height, and a concentrating reflector fitting, which should be spaced at a distance apart equal to its mounting height.

It should be borne in mind that polar distribution curves represent the intensities corresponding with different angles to the vertical or horizontal axis of an illuminant. The area enclosed by such curves must not be associated with the total quantity of light emitted by the source.

SOME TYPICAL REFLECTING SHADES.

The selection of the correct form of reflecting shade for a given set of conditions constitutes nine-tenths of the art of lighting. The polar curves in fig. 8 show some features which will indicate the scope for the exercise of judgment in this matter.

The upper diagram contains two polar curves. The symmetrical one (heavy dotted) shows

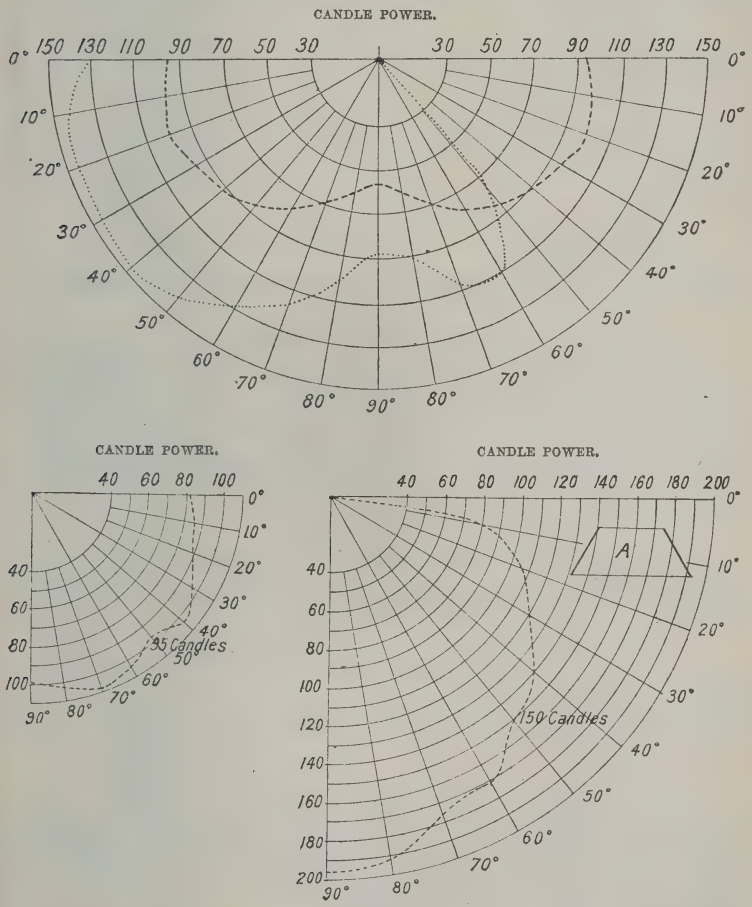


FIG. 8.

the distribution of light from the naked mantle. The asymmetrical curve shows the redistribution of light due to the use of what is technically known as a parabolic shade. A shade of this kind would be chosen when the light has to be distributed mainly in one direction.

The two lower diagrams show respectively the distribution of light from a bare mantle and

the same mantle when used with a reflecting shade (enamelled steel) of the form outlined in section at A. Shades of this type are extensively used for factory lighting purposes and for other purposes where a symmetrical downward illumination is desired.

TABLE SHOWING THE INTENSITY OF ILLUMINATION REQUIRED IN VARIOUS CLASSES OF INDUSTRIAL ESTABLISHMENTS.

Place.	Foot-candles Required.
Carpenters' Shop	3·0 to 5·0
Drawing Office	6·0 to 10·0
Factory (Machine Shop)—	
General and Localised	1·0 to 2·0
General only	3·0 to 5·0
Local	4·0 to 6·0
Foundry	3·0 to 5·0
Pattern Shop	4·0 to 6·0
Paint Shop	3·0 to 6·0
Power House	2·0 to 3·0
Sewing Rooms—	
Light Goods	4·0 to 6·0
Dark Goods	8·0 to 10·0
Warehouse and Stock Room	1·5 to 2·0
Wharf	1·5 to 2·0

Factory and Workshop Lighting.

The report of the Departmental Committee appointed by the Home Secretary to inquire into 'the conditions necessary for the adequate and suitable lighting (natural and artificial) of factories and workshops,' recommends that the working areas be lit in such a way that on a horizontal plane at the floor level the illumination will not be less than 0·25 foot-candle. In ironfoundries the minimum illumination should be 0·4 foot-candle. Passages, stairways, lobbies, and similar parts of the building should have a minimum illumination at the floor level of 0·1 foot-candle. Open yards and approaches should be lit as favourably as a fairly well lighted side street, namely, with 0·05 foot-candle at the ground level, and this illumination is to be maintained from one hour after sunset until one hour before sunrise.

GAS LIGHTING IN FACTORIES.

This may be either of high pressure (60 to 100 inches water gauge) or low pressure (4 to 6 inches water gauge).

The amount of gas that must be consumed to provide a given number of foot-candles of illumination over the area of a workshop may be computed as follows:—

High pressure $\frac{A \times i}{200}$ = c. ft. per hour; Low pressure $\frac{A \times i}{100}$ = c. ft. per hour,

where A is the area to be lighted in square feet and i is the average illumination required in foot-candles.

Thus assume a workshop having a floor area of (say) 2,000 sq. ft., and an average illumination of 4-ft. candles is required. According to the foregoing formula, the lighting units as a whole would have to consume,

High pressure $\frac{2{,}000 \times 4}{200} = 40$ c. ft. per hr.; Low pressure $\frac{2{,}000 \times 4}{100} = 80$ c. ft. per hr.

It must, however, be remembered that the higher efficiency of the high-pressure system is only obtainable by the installation of a gas compressor, unless, as frequently happens, a high-pressure gas supply is provided ready for use. The installation of a compressor and means for driving involves an expense which must be set off against the higher lighting efficiency. This expense is relatively trifling on a large plant but assumes larger proportions on smaller sizes. Generally it will not pay to put in high-pressure plant unless the total candle-power exceeds 1,000 candles. High-pressure gas is frequently used for purposes other than lighting, in which case the same apparatus will serve for the lighting.

It remains to subdivide the installation into separate lighting units, so as to ensure as nearly as possible a uniform illumination in order that all parts of the workshop are equally available for practical use.

For instance, to develop the light from 80 cubic feet of low-pressure gas, any one of the following arrangements may be used.

No. of Lamps.	Each consuming cub. ft. per hour.	Total Consumption of all Lamps.
20	4	80
16	5	80
10	8	80
8	10	80

Even larger lamps may be used, units ranging from 25 to 4,000 candle-power being available. The particular arrangement that may be used will depend partly upon the structural features of the building and the kind of work being done. Sometimes a uniform illumination must be aimed for, or in other cases it may be desirable to have certain areas extra-illuminated, the intervening areas being somewhat subdued.

Generally it is not advisable to rely upon the reflecting power of walls, because in the first place the use of reflecting shades prevents much of the light from the lamps reaching the walls, and secondly, although the whitewashed surfaces have a reflection coefficient of 80 per cent. when new, this rapidly deteriorates to less than half this value, due to dust created by moving machinery.

The greater the candle-power of the lighting unit used, the higher it should be placed; and in order that the illumination from the separate lamps shall overlap they should be disposed so that the distance between their centres is $1\frac{1}{2}$ to 2 times their height above the level at which work is being done.

The following points may be noted :—

If gas lamps have to be arranged amongst running shafting or belting, remote control may be used to ensure safety in lighting and extinguishing.

If there is excessive vibration the premature fracture of mantles can be prevented by using anti-vibrators.

Gas lamps may be arranged if required for use at various heights.

If the air round the lamps is extraordinarily dusty, the use of Keith-Blackman's 'group' system will ensure their perfect working.

For large work, lamps 9 feet to 10 feet above floor level will be found convenient. This would need moderate size lamps, consuming 10 to 15 cubic feet per hour and spaced 9 to 12 feet between centres.

For smaller work, lamps consuming 5 cubic feet per hour, set at 7 to 8 feet above floor level and 6 to 9 feet between centres, will be found suitable.

Electric Lighting in Factories.

In the preliminary estimate the lighting load may be assumed as between 55 and 60 per cent. of the manufacturing load. The circuits should be divided into three classes—machine-tool circuits, consisting of one 16-c.p. lamp for each machine tool, which should be turned on by the engineer as soon as light begins to fail in the factory; day circuits, which are on throughout the entire day, consisting of one 32-c.p. lamp for each office desk, drafting board, etc., and 16-c.p. lamps in the storehouse and isolated parts of the factory; and general lighting circuits, which should be turned on five minutes before time of shutting down, consisting of arc lights at each elevator, stairway, or main entrance, all the out-of-door lighting, and incandescent lamps in locker and washrooms, passage-ways, etc. One 16-c.p. light placed 7 ft. from the floor will satisfactorily light 250 sq. ft. in a storehouse, and from 100 sq. ft. to 110 sq. ft. general lighting for the factory proper.

Modern Lighting Fittings.

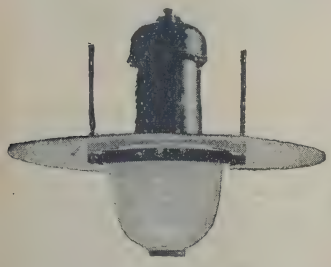


Fig. 9.—'Strela' lantern for street lighting with half-watt type lamps. Equipped with holophane refractor bowl (shown in section in fig. 10).



Fig. 10.



Fig. 11.

Figs. 9 and 10 (*The British Thomson-Houston Co. Ltd.*) show one of the latest types of street lighting fittings employing half-watt type lamp and holophane bowl refractor, giving wide angle distribution of light, in horizontal plane, with low diversity factor. The refractor is supported by a frame with sliding rods, and can be lowered for the purpose of cleaning or replacing lamps.

Fig. 12 is a fitting for interior lighting.

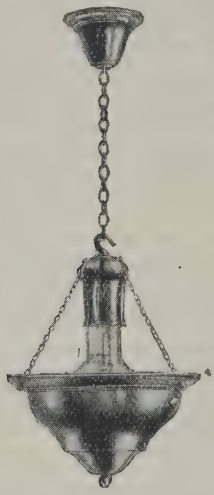


FIG. 12.—'Lumina' fitting for interior lighting with half-watt type lamps, semi-indirect type, with over reflector.



FIG. 13.—Mazdalux reflector.

For industrial lighting B.T.H. Mazdalux metal reflectors, fig. 13, give excellent results.

In indirect or concealed lighting, the luminous source is entirely hidden behind an opaque surface. The lamps, supported in mirror reflectors, project their light upon the white ceiling, from which it is diffusely reflected, giving an agreeable and attractive illumination for rooms, halls, etc. By this means the light is well diffused and closely approaches the illumination given by diffused daylight. With the B.T.H. 'Eye-rest' system, which employs a suspended metal or plaster bowl, containing upturned silvered glass reflectors, this effect is obtained in a very efficient manner, and by utilising different forms of reflectors it is possible to maintain this efficiency for various conditions. Indirect lighting is not shadowless, but the shadows are soft and transparent instead of being hard and opaque, as is usually the case with direct lighting.

In the B.T.H. 'Tubolite' system, tubular lamps are mounted in porcelain holders, and in the position of maximum efficiency within polished aluminium reflectors. The latter may be erected behind cornices to illuminate ceiling surfaces evenly; the system is also used largely for showcase and picture lighting.

In semi-indirect lighting most of the light is thrown on to the ceiling, while a proportion is transmitted through the translucent glass bowl of the fitting. The general advantages of indirect lighting apply also to semi-indirect lighting, but the visibility of the light source (at a greatly reduced brilliancy), in the latter case, gives a more familiar aspect to the installation. The British Thomson-Houston Co. have embodied this principle in some of their latest fittings, using dishes and hemispheres of the well-known Veluria and Alabas glass. These fittings give very effective and efficient lighting results.

ARTIFICIAL DAYLIGHT.

In producing artificial daylight, the object for which it is to be used should be considered. For artists' studios and for picture galleries the main thing is to prevent the blues from darkening and the yellows from turning pale. So long as the colours are well rendered the light is satisfactory. For dye works and drapers' shops accurate matching must be possible, and the effect on certain difficult colours, such as the purples and greens, must be studied. It is a mistake to imagine that it is more easy to match pale colours by artificial light because there is not much colour present. In the grading of flour a very small deficiency of blue in the artificial light makes the light slightly yellow, or if the right proportion of green is wanting, the light will have a pink tinge. If one of these colours is present in the flour the result will be a brightening of apparent whiteness instead of the manifestation of a tint. It is not necessary to produce a light the spectrum of which extends to violet-blue, because there is little luminosity in that part. Hues which are apparently violet are generally found to be purple when analysed.

SECTION XXXV

PART IV

FIRE EXTINCTION.

STANDARDS OF FIRE-RESISTANCE.

STANDARD TABLE FOR FIRE-RESISTING SINGLE DOORS, WITH OR WITHOUT FRAMES.

Classification.	Sub-Class.	Duration of Test at Least.	Minimum Temperature.	Thickness of Material.	Minimum Superficial Area under Test.	Minimum Time for Application of Water under Pressure.
		Min.	Deg. F.		Sq. Ft.	Min.
Temporary protective class	A	45	1500	2 in. and under	20	2
	B	60	1500	Optional	20	2
Partial protective class	A	90	1800	2½ in. and under	20	2
	B	120	1800	Optional	20	2
Full protective class	A	150	1800	½ in. and under	25	2
	B	240	1800	Optional	25	5

(*International Fire-prevention Congress.*)

Fire-Resisting Substances.

Exhaustive tests seem to show that sulphate of aluminium is one of the best fire-resisting substances for wood, as it checks combustion by forming an infusible and non-conducting coating, while such substances as ammonium sulphate or ammonium phosphate when heated check combustion by emitting an incombustible gas.

The following is the formula for what is known as the United States 'Government whitewash mixture,' which also acts as a fire-retarding coating over interior wooden surfaces:—Slake a half bushel of quicklime with boiling water, keeping it covered during process; strain and add one peck of salt dissolved in warm water; put 3 lbs. ground rice in water and boil to a thin paste; ½ lb. of powdered Spanish whiting; 1 lb. of clean glue dissolved in hot water. Mix well and let it stand for several days. Keep the mixture in a kettle or receptacle, and apply as hot as possible with a whitewash or paint brush.

(See also pp. 343, 349.)

Fire Streams.

TABLE SHOWING PRESSURE REQUIRED AT NOZZLE AND AT PUMP, WITH QUANTITY AND PRESSURE NECESSARY TO THROW GOOD EFFECTIVE STREAMS VARIOUS DISTANCES THROUGH DIFFERENT SIZE NOZZLES, USING 100 FEET OF ORDINARY 2½-INCH RUBBER-LINED HOSE AND SMOOTH NOZZLES.

Size of Nozzle, ¾ inch.

Pressure at nozzle, in lbs. per sq. in.	40	50	60	70	80	90	100
Pressure at pump, „ „ „	46	57	68	80	91	102	114
Imperial gallons per minute . .	86	96	105	114	122	129	136
Distance thrown horizontal, in ft.	44	50	54	58	62	65	68
Distance thrown vertical, in ft. .	60	67	72	76	79	81	83

Size of Nozzle, ⅞ inch.

Pressure at nozzle, in lbs. per sq. in.	40	50	60	70	80	90	100
Pressure at pump, „ „ „	50	63	75	88	101	113	126
Imperial gallons per minute . .	118	132	144	156	167	177	186
Distance thrown horizontal, in ft.	49	55	61	66	70	74	76
Distance thrown vertical, in ft. .	62	71	77	81	85	88	90

Size of Nozzle, 1 inch.

Pressure at nozzle, in lbs. per sq. in.	40	50	60	70	80	90	100
Pressure at pump, „ „ „	58	72	87	101	115	130	144
Imperial gallons per minute . .	154	173	189	204	218	232	245
Distance thrown horizontal, in ft.	55	61	67	72	76	80	83
Distance thrown vertical, in ft. .	64	73	79	85	89	92	96

Size of Nozzle, 1⅛ inches.

Pressure at nozzle, in lbs. per sq. in.	40	50	60	70	80	90	100
Pressure at pump, „ „ „	69	86	103	120	138	155	172
Imperial gallons per minute . .	197	221	241	260	279	295	312
Distance thrown horizontal, in ft.	59	66	72	77	81	85	89
Distance thrown vertical, in ft. .	65	75	83	88	92	96	99

Size of Nozzle, 1¼ inches.

Pressure at nozzle, in lbs. per sq. in.	40	50	60	70	80	90	100
Pressure at pump, „ „ „	84	106	127	148	169	190	211
Imperial gallons per minute . .	246	275	301	325	348	368	388
Distance thrown horizontal, in ft.	63	70	76	81	85	90	93
Distance thrown vertical, in ft. .	67	77	85	91	95	99	101

Size of Nozzle, 1⅜ inches.

Pressure at nozzle, in lbs. per sq. in.	40	50	60	70	80	90	100
Pressure at pump, „ „ „	107	134	160	187	214	240	268
Imperial gallons per minute . .	301	337	369	398	426	452	476
Distance thrown horizontal, in ft.	66	73	79	84	88	92	96
Distance thrown vertical, in ft. .	69	79	87	92	97	100	103

N.B.—The above pressures are based on the supposition that the hose is coupled direct to the delivery of the pump and while the stream is flowing; if, however, the hose is coupled to a hydrant which is supplied direct from the pump, then the corresponding fire pump pressure must be greater than the hydrant pressure by an amount equal to friction loss and difference of head between hydrant and pump.

The pressures given in the table are *indicated* pressures, not effective pressures; effective pressures would be slightly greater.

The distances given are for *effective* fire *streams* adapted for fire purposes, and are not for mere isolated drops. (*Freeman.*)

Fire Streams and Electric Circuits.

It has always been believed to be dangerous to those handling a hose line to allow the stream to come in contact with an electric circuit. Prof. F. C. Caldwell has found by experiment that there is no danger of shocks when the distance between the nozzle and circuit is more than 25 ft., irrespective of the voltage. (*'Power.'*)

Fire Extinguishers.

Sawdust possesses some special merits as a fire extinguisher when dealing with small outbreaks of liquid combustibles, such as lacquer and petrol, which are usually difficult to extinguish by ordinary means. Sand is generally looked upon as the best substance to use in such cases when it can be applied promptly, but tests have shown sawdust to be superior.

The British Fire-Prevention Committee carried out a series of tests, the results of which tended to prove that sawdust intimately mixed with bicarbonate of soda and applied in bulk has certain advantages over sand and similar materials as an extinguishing medium for comparatively small fires occasioned by the ignition of the vapour of petroleum spirit (petrol) and other inflammable liquids. Ordinary sawdust, as obtained from saw-mills, is the most suitable for this purpose. It must be free from shavings and chips of wood, but it does not require to be either specially dried or to contain added moisture. The addition of bicarbonate of soda, although not essential, is advantageous. The Committee found an effective proportion of bicarbonate of soda to sawdust to be 10 lbs. to 1 bushel (or, say, 12 lbs.) of sawdust. The Committee wished to emphasise the fact that so far their investigations had been limited to small quantities of inflammable liquids, not exceeding 2 gallons, and the areas over which they were spread did not exceed 6 ft. square. These conditions are met with in motor garages and hangars, for which, in the opinion of the Committee, the proposed mixture is applicable and economical. The Committee added that their tests showed that the application of this or any similar mixture in small quantities from tubes or canisters does not give satisfactory results.

Electric Vehicle Equipment of the London Fire Brigade.

In machines in which the same petrol motor is utilised both for vehicle propulsion and pump-operating, the engines develop 65 h.p. at 1,100 revolutions, and centrifugal pumps have an output of 500 gallons per minute, at a working pressure of over 120 lbs. per sq. in

In the more hilly districts of London the stations are equipped with petrol-motor escape vans, fitted with engines of about 50 h.p., some petrol-electric vehicles, that is, machines with petrol engines as the prime mover, with electrical in place of mechanical transmission of the power to the road wheels, being also on order.

The majority of the electrically-propelled fire appliances are of the Cedes type; they are equipped with series-wound motors mounted in the hubs of the front road wheels, which are thus driven direct without the intervention of any gearing, the Cedes Co. claiming an efficiency of from 78 to 85 per cent. for their motors, which are rated at 15 electrical h.p. The power is provided by a battery of 84 Tudor cells of a capacity of 200 ampere-hours at a 6-hours' discharge rate, giving a normal running output of about 30 h.p. The cells are carried in trays, either under a bonnet in the front of the driver or just to the rear of the forward wheels below the driver's seat. The machines can run about 30 miles on one charge if necessary, but owing to the nature of the service they stand fully charged ready to give out the maximum output on receipt of a call. There are electric brakes on the front wheel motors, and two hand and foot controlled mechanical brakes on the rear wheels, which are sufficient under ordinary circumstances. The controller is of the series-parallel type, with seven notches for three forward speeds, two reverse motions and two brake positions. All the contact fingers of the controller are interchangeable and can be removed without the use of any tool. Should a finger burn out, it can be replaced by another in two or three seconds.

The weight of an electric escape van ready for running, but without ladders, hose, and small gear, and men, does not exceed 3½ tons, the total weight of the van complete being about 5¼ tons. The test requirements of the electric escape vans are that they shall be able to maintain a speed of 25 m.p.h. on the level with a full load of ladder, equipment and firemen, or 29 m.p.h. with men and equipment but without ladder. They must be able to climb a gradient of 1 in 20 at 14½ to 16 m.p.h., while the battery must be capable of enabling a distance of 30 miles to be run on one charge at 20 m.p.h. In practice, these speeds can easily be exceeded, from 28 to 29 m.h.p. being reached on the level, with plain tyres, and from 26 to 27 m.p.h. when non-skids are fitted. The escape vans carry a ladder capable of being extended to at least 50 ft., and are also furnished with supplementary ladders, hose and tools for getting to work from hydrants, and a cylinder holding about 30 gallons of water, fitted with 180 ft. of rubber garden-hose for extinguishing small fires. This type of appliance, the crew of which is on duty night and day, is ready for an

instantaneous turn-out, and only attends fires on the ground immediately protected by the station, the distance it may travel to fires rarely exceeding one mile.

The electric motor turn-table ladders are kept at the stations in localities where there are many high or warehouse buildings. These appliances, whilst intended, generally speaking, for attending local calls, are considered available in case of serious fires in high buildings within a radius of about five miles. Owing to their weight, which, complete in fire-attending order, ranges from 5¾ to 6 tons, it is not considered necessary to specify that the electric motor turn-table ladders, which can be safely used as water towers to a height of 60 ft., shall travel at more than 20 miles per hour, but with plain tyres they can attain 27 m.p.h., or with non-skids 25 m.p.h. Several of these machines are fitted with 5-h.p. electric motors for raising the ladders, some to a height of nearly 100 ft., an operation which is accomplished in the rapid time of 10 seconds. The motor, which takes its current from the vehicle battery, serves as a brake when lowering the ladder.

Whenever an electric vehicle goes out, its battery is immediately put on charge on its return.

The average annual cost of an electric escape van, under the heading of repairs to chassis and body, and tyre renewals, is 25*l*. Taking into account the first cost, depreciation and maintenance, an electric escape van and a petrol escape van came out to practically the same running and maintenance cost, viz. 150*l*. per annum, which is less than that for horse traction.

It is no uncommon thing for an electric escape van to turn out in seven or eight seconds, whereas with other types of motor vehicles the best time is 15 seconds.

Dubbing for Preserving Leather Hose.

Melt 2½ lbs. of perfectly clean tallow, free from salt, and mix with it when hot 1 gallon or 9 lbs. of cod oil.

The best mode of clearing tallow for this purpose is to boil it in water, which will take up the salt and other impurities, and can be poured away when cold.

Care must be taken not to boil the oil, as this would deprive it of some of its principal qualities.

The tallow must be first melted, and when it is warm the oil is to be poured on, and stirred into it until the whole mixture is perfectly cold. This will make a good stiff dubbing.

SECTION XXXVI

(Contributed by Prof. Henry Louis, M.A., D.Sc., A.R.S.M., M.Inst.C.E., F.I.C., F.G.S., etc.)

PART I


MINING (pp. 2153-2226)

PART II

MINERAL VALUATION (pp. 2227-2232)


'Flexible Metallic Tubing'

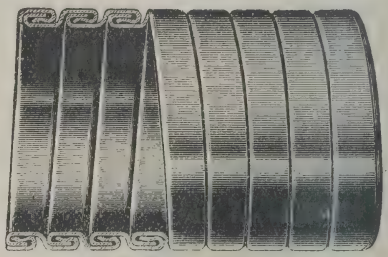FOR HIGHEST STEAM PRESSURE.



FOR SUCTION AND DELIVERY, PUMPING OIL, PETROLEUM, Etc.

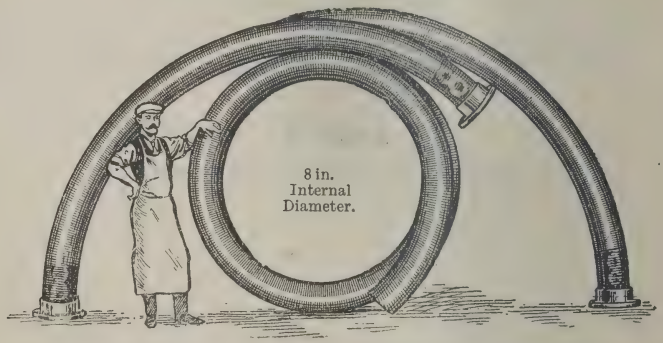'ENTIRELY METAL.' The only Flexible Hose which successfully resists the Heat of High Pressure Steam and the action of Oil.



In all sizes to 15 inches Internal Diameter.

Invaluable for Mining, Marine Salvage, Rock Drills, Compressed Air, etc.

THE UNITED FLEXIBLE METALLIC TUBING CO. Ltd.,

112 QUEEN VICTORIA ST., LONDON, E.C. 4.

Works: PONDERS END, MIDDLESEX.

SECTION XXXVI

PART I

MINING

(Contributed and revised by Professor Henry Louis, M.A., D.Sc., A.R.S.M., M.Inst.C.E., F.I.C., F.G.S., etc.)

LEGAL—CLASSIFICATION OF MINERAL DEPOSITS—COAL—METALLIFEROUS MINERALS—BORING—DRILLING AND BLASTING—DRIFTS—SHAFTS—COAL CUTTERS—SHAFT PILLARS—MINING IN VEINS AND MASSES—HAULAGE—WINDING—WIRE ROPES—ELECTRIC CABLES—PUMPS AND PUMPING—VENTILATION—SAFETY LAMPS—RESCUE APPARATUS—DRESSING OF ORES—GOLD MILLING—ALLUVIAL MINING.

Legal.

Definitions of Minerals and Mines.

By the term 'mineral,' as used in legal documents, is meant a constituent of the earth's crust which possesses in its severed condition an intrinsic value by virtue of its composition, that is to say, 'any substance that can be got from within the surface of the earth which possesses a value in usé apart from its mere possession of bulk and weight' (Lord Fletcher Moulton, Court of Appeal, Nov. 23, 1908). The meaning of the word 'mineral' may be affected by the context; according to Lord Halsbury, in 'a grant of *mines* and *minerals*,' it 'is a question of fact what these words meant in the vernacular of the mining world, the commercial world and landowners at the time when they were used in the instrument' (Lord Provost of Glasgow *v.* Fairie, 13 App. Cas. 1888).

In this country a *mine* is defined as a working for mineral carried on by artificial light without intentionally disturbing the surface, whilst a *quarry* is an excavation for the extraction of mineral open to the day; the distinction is important from a legal point of view. It must be noted that a quarry less than 20 feet deep is by law classed as a factory. In many other countries, notably in the United States of America, the distinction between a 'mine' and a 'quarry' depends not upon the method of working but upon the mineral wrought, any working for e.g. building stone, whether underground or open, being classed as a quarry. In legal instruments *mine* sometimes has the wider meaning of the space containing the minerals, or even from which the minerals have been extracted.

Ownership of Minerals.

In this country the mineral occurring within any area is the property of the owner of the freehold of the surface, with some few exceptions, the most notable of which are the Forest of Dean and the Isle of Man, where the minerals are Crown property. Minerals containing precious metals—where these metals form the essential value of the mineral—are the property of the Crown wherever found (except in Scotland). Minerals under copyhold land are mostly the property of the Lord of the Manor, who cannot, however, as a rule, deal with them save with the consent of the copyholder, for, although the property in the minerals is in the Lord, the copyholder has them in possession.

Generally speaking, in this country the minerals are leased to those exploiting them. 'A mining lease is really a sale payable by instalments' (Henn Collins, Master of the Rolls, *In re* Aldam's Settled Estates, Chanc. 2, 1902). Most often the rental is based on the tonnage exploited, the rate per ton or *royalty* being fixed. For coal this may range from 2*d.* to 2*s.*, but is usually between 4*d.* and 7*d.*, the average for the United Kingdom having been pre-war, probably just

about 5½*d.* per ton (Royalties Commission, 1889); it is now (1920) about 7½*d.* Sometimes the rental is a fraction of the value of the coal, this ranging from $\frac{1}{8}$ to $\frac{1}{20}$; sometimes the rental is a proportion of the profit made; sometimes a price per inch thickness of coal seam per acre wrought out forms the rental. In addition to royalty, wayleaves have often to be paid for; average wayleave in United Kingdom is about ½*d.* per ton (Royalties Commission, 1889).

Royalties on stratified ironstone vary from 2½*d.* to 1*s.* 6*d.* per ton, averaging about 6*d.*

In the hæmatite mines of Cumberland and Lancashire the royalties vary normally from 1*s.* to 2*s.*, averaging about 1*s.* 4*d.* In the Forest of Dean royalties on iron ore vary from 3*d.* to 5*d.* per ton.

Royalties in Cornwall on tin and copper ores range from $\frac{1}{20}$ to $\frac{1}{30}$ of the value of the mineral raised

Royalties on lead and zinc ores range from $\frac{1}{8}$ to $\frac{1}{20}$ of the value of the ore raised.

Royalties are often on a sliding scale, the ratio increasing with the market price of the mineral or of its metallic contents.

List of Principal Legislative Enactments affecting Mines and Minerals.

Land Tax Redemption Act, 1798, and subsequent Acts; '**The Mining Code,**' **Railway Clauses Consolidation Act, 1845, Ss. 74–85; Waterworks Clauses Consolidation Act, 1847, Ss. 18–27; Public Health (Support of Sewers) Act, 1883**—see, however, **New Moss Colliery** *v.* **Manchester Corporation, 1908, and Howley Park Coal and Canal Co.** *v.* **L. & N.W. Railway, 1912; Copyhold Act, S. 48, 1852; Coal Mines Act, 1860; Metalliferous Mines Acts, 1872, 1875; Explosives Act, 1875; Rating Act, 1874; Stratified Ironstone Mines (Gunpowder) Act, 1881; Conveyancing Act, S. 2, 1881; Slate Mines (Gunpowder) Act, 1882; Coal Mines Regulation Act, 1887; Quarries (Fencing) Act, 1887; Quarries Act, 1894; Coal Mines (Check Weigher) Act, 1894; Workmen's Compensation Act, 1897; Coal Mines (Weighing of Minerals) Act, 1905; Workmen's Compensation Act, 1906; Notice of Accidents Act, 1906; Coal Mines Regulation (Eight Hours) Act, 1908; Small Holdings and Allotments Acts, Schedule I., 1908; Mine Accidents (Rescue and Aid) Act 1910; Coal Mines Act, 1911; Coal Mines (Minimum Wage) Act, 1912; Coal Mines Act, 1914; Feudal Casualties (Scotland) Act, S. 7, 1914; Price of Coal (Limitation) Act, 1915; Coal Mines Control Agreement (Confirmation) Act, 1917; Coal Mines Regulation (Amendment) Act, 1917; Petroleum (Production) Act, 1918; Coal Mines Act, 1919; Coal Industry Commission Act, 1919; Coal Mines (Emergency) Act, 1920; Mining Industry Act, 1920; Finance (1909–10) Act, 1910, Ss. 1–5, 20–24, 25–27, 33, 34; Finance Act, 1912, S. 11; Finance (No. 2) Act, 1915, S. 43; Finance Act, 1916, S. 46; Finance Act, 1917, S. 21; Finance Act, 1919, S. 33; Finance Act, 1920, Ss. 49, 57; Income Tax Act, 1918, Schedule III.**

Principal Clauses in Colliery Lease.

Description of contracting parties (lessor and lessee) and of property demised.

Powers granted to lessee:—
- To break surface, make shafts, adits, etc.
- To win and work coal, bring to bank, make merchantable, dispose of.
- To work by instroke or outstroke or both.
- To make and dispose of coke and other products.
- To have necessary surface accommodation.
- To have necessary wayleaves.
- To construct roads, tramways, railways, etc.
- To erect buildings, machinery, plant, etc.
- To work quarries of lime, clay, etc. (sometimes for own use only).
- To remove coals, dead and live stock, plant, etc., after expiration of lease.
- To relinquish at stated times before termination of lease.
- To renew lease for a further period.
- To generally do all things necessary for getting coal, etc.

Reservations to lessor:—
- Of mines and minerals not demised.
- Of certain rights and wayleaves.
- Of use of ways, railways, etc.

'Habendum':—
- Lessee to have and hold property for a fixed term of years.

'Redendum':—
- Annual certain rent or deadrent, usually merging into royalty.
- Royalty per ton or otherwise.
- Rent for surface occupied.
- Rent for wayleaves, waterleaves, or other facilities.

Provisoes:—
- No royalty payable in respect of colliery consumption.
- Power to make up short workings of previous years.
- Power to carry over excess workings to subsequent years.
- For distress in case of default in payments.
- For re-entry if rents, etc., remain unpaid for certain period.

Covenants on part of lessee :—
For due payment of rents and royalties.
For due payment of taxes.
For compensating for damage done to surface or to neighbours.
For erecting (or against erecting) buildings, houses, coke-ovens, etc.
For keeping proper accounts accessible to lessor, and rendering the same.
For keeping proper mine plans, and permitting inspection of mine.
For leaving proper barriers.
For working in approved and miner-like manner.
Against sub-letting without authority.
For giving up possession in good condition at determination of lease.
For keeping mine, plant, buildings, etc., in good repair.
For properly fencing or securing shafts, adit mouths, etc.
For giving lessor power to purchase plant, etc., at a valuation on determination of lease.
Covenants on part of lessor :—
For proper title.
For quiet enjoyment.
Arbitration clause.

Leases of ironstone mines as also of metalliferous mines follow practically the same lines; as regards the latter, it is usually set forth that the royalty shall be a certain part of the value of the minerals, cleaned, dressed, smelted, or otherwise rendered merchantable, as the case may demand, at the expense of the lessee. There are often clauses specifying that a certain amount of development work, driving, sinking, etc., shall be performed.

A tacknote or license to prospect is often granted; this differs from a lease, inasmuch as it transfers no interest in the property. Its usual form is a license for one year to explore for all or for certain specified minerals within a definite area, usually for a nominal consideration, the licensee making compensation for all damages, and paying a royalty on all minerals gotten and sold. The license is generally renewable at the option of the licensee for a term of years, usually three, and the licensee is entitled to a lease upon conditions specified; this specification often takes the form of a schedule embodying the conditions of a draft lease.

Classification of Mineral Deposits.

A mineral deposit may be defined as a portion of the earth's crust containing mineral matter of intrinsic value under favourable conditions.

The mineral substances that form the subject of mining operations may be classified as under :—

Group I., Fuels; II., Ores; III., Salts; IV., Gems; V., Rocks.

Group I. contains the different varieties of coal, asphalts, bitumen, and other solid hydrocarbons, mineral oils, etc., while sulphur may conveniently be included.

Group II. contains the various heavy metals either in the native state or in combination.

Group III. contains the haloids, sulphates, carbonates, silicates, phosphates, borates, etc., of the alkaline earths and alkalies.

Group IV. contains those minerals that are prized as gems on account of their hardness, brilliancy, and transparency, as well as the semi-gems, such as opal, turquoise, etc., which though opaque are prized as precious stones on account of the beauty of their colouring and their rarity.

Group V. comprises the various rock masses, such as granite, slate, limestone, etc., the exploitation of which is more properly considered under quarrying.

With respect to their mode of occurrence, mineral deposits may be classified morphologically as follows :—

Tabular = Beds, veins.
Irregular = Masses, lenses, pipes, etc.

A more complete classification, based on genetic as well as morphological characters, is as follows :—

- **Class I.—Symphytic;** Syngenetic, contemporaneous or stratified
  - Group *a*, clastic.
  - Group *b*, formed by chemical agencies.
  - Group *c*, formed by organic agencies.
  - Group *d*, disseminated through beds.
- **Class II.—Epactic;** Epigenetic, subsequent or non-stratified.
  - Sub-Class A—Veins.
    - Group *a*, fissure.
    - Group *b*, bedded.
    - Group *c*, contact.
    - Group *d*, gash.
  - Sub-Class B—Masses.
    - Group *a*, stockworks.
    - Group *b*, disseminated in igneous rocks.
    - Group *c*, connected with igneous rocks.
    - Group *d*, connected with soluble rocks.

Class I.—Group *a* includes auriferous alluvials, tin-bearing alluvials, ironsands, etc. Group *b* contains deposits due to chemical precipitation, to evaporation or to metasomatic changes. Practically all the stratified ironstones belong to this group. Of group *c* the most important

representative is coal. Group *d* includes the Knottensandstein of Mechernich, the Kupferschiefer of Mansfeld, the Banket beds of Johannesburg, and similar deposits.

Class II.—Sub-Class A. Group *a* includes most of the important vein systems of the world, such as those of Cornwall, etc.

Group *b* includes veins parallel to the stratification.

Group *c* embraces certain veins following the contact of dissimilar rocks.

Group *d* contains veins carrying galena and zinc blende that characterise certain limestone districts, e.g., that of Missouri.

Sub-Class B. Group *a* consists of masses traversed by minute veinlets carrying ore, such as the tin deposits of Saxony.

Group *b* comprises such deposits as the Kimberley diamond-bearing pipes, the copper deposits of Lake Superior, etc.

Group *c* are very largely lenticular in form; the pyrite deposits of the Huelva district are a typical example.

Group *d* may be represented by the red hæmatite deposits of Cumberland and Lancashire.

Branches of Mining.

I. Prospecting, the most important part of which is 'boring.'

II. Exploiting, including the various operations of opening up mineral deposits by shafts or adits, extracting and transporting the mineral, securing, pumping and ventilating the workings, and the proper care of the men employed.

III. Dressing or preparing the mineral extracted for the market.

COAL.

Classification.

Coal is generally classified under the three main heads of 'lignite' or 'brown coal,' 'bituminous coal,' and 'anthracite.' Bituminous coal is further classified according to the purposes for which it is best adapted, such terms as gas coals, house coals, furnace coals, smithy coals, steam coals, etc., being usually employed. The classification that is most widely adopted is based upon Gruner's work, and is as follows :—

Description of Coal.	Composition of Ash-free Coal.			Percentage of Fixed Residue.	Nature of Residue.	Calorific Power.
	Carbon.	Hydrogen.	Oxygen.			
						Cal.
Lignite . .	70–75	5·6	15·25	50	Non-coking .	6,000
Dry coals with long flame (furnace coals)	75–80	4·5–5·5	15–19·5	55–66	Pulverulent or very slightly coking	8,000–8,500
Fat coals with long flame (gas coals)	80–85	5·0–5·8	10·0–14·2	60–68	Completely agglomerated, porous	8,500–8,800
Fat coals proper (smithy coals)	84–89	5·0–5·5	5·5–11·0	68–74	Completely agglomerated, more or less porous	8,800–9,300
Fat coals with short flame (coking coals)	89–91	4·5–5·5	5·5–6·5	74–82	Coked, compact	9,300–9,600
Anthracite .	90–93	4·0–4·5	3·0–5·5	82–90	Pulverulent .	9,200–9,500

Seyler's classification is based upon the percentage of hydrogen in the ash-free coal and the ratio of carbon to hydrogen :—

Genus.	H per cent.	C : H.
1. Anthracite	< 4	> 22
2. Carbonaceous	4–4·5	20·3–23·35
3. Semi-bituminous	4·5–5	16·6–20·4
4. Bituminous	5–5·8	14·6–18·2
5. Per-bituminous	> 5·8	12·9–14·7

(*Strahan & Pollard.*)

Other classifications are also used; one much liked in America is based upon the 'fuel ratio,' that is the figure obtained by dividing the percentage of fixed carbonaceous residue by the percentage of volatile matter.

Calorific Power.

The calorific power may be calculated from the ultimate analysis by the 'Deutscher Verband' formula :—

$$\text{Cal. power in calories} = 81\ C + 290\left(H - \frac{O+N}{8}\right) + 25\ S - 6\ W,$$

where C, H, O, N, S, and W are the percentages, respectively, of Carbon, Hydrogen, Oxygen, Nitrogen, Sulphur, and Moisture.

Gontal's formula is applied where only the proximate analysis (percentages of fixed carbon, volatile matter and ash) is known.

Let C be percentage of fixed carbon, V of volatile matter, A of ash; then

$$\text{Cal. power in calories} = 82\ C + a\ V,$$

where a is a coefficient depending upon the percentage of volatile matter in the ash-free coal, i.e. upon $\frac{100\ V}{100-A}$ as follows :—

$\frac{100\ V}{100-A}$	5	10	15	20	25	30	35	40
a	145	130	117	109	103	98	94	80

The ash of coals varies usually between 3 and 15 per cent.

1 lb. of ordinary coal requires theoretically 130 cub. ft. of air for complete combustion.

Coke.

Ordinary bituminous coal, containing 25 to 30 per cent. of volatile matter, coked in a modern regenerative bye-product coke-oven plant, yields approximately :—

Coke	70–75 per cent.
Tar	3·5–4·5 „
Ammonia as ammonic sulphate	1–1.25 „
Crude benzol	1 „

Surplus gas, 3,000 to 5,000 cub. ft. per ton of coal.

The composition of this gas is about as follows :—Hydrogen, 48 to 55 per cent.; methane, 25 to 34 per cent.; carbonic oxide, 6 to 8 per cent.; carbonic acid, 2 to 2·5 per cent.; hydrocarbons, 2 to 4 per cent.; nitrogen, etc., 5 to 12 per cent. The calorific power is about 480 to 600 B.Th.U. gross, or 425 to 550 B.Th.U. net.

Weight of Coal.

The specific gravity of coal varies from 1·1 to 1·6, most bituminous coals approximating to 1·3. The following table shows the weight of coal contained in one acre of superficial area per inch thickness of seam.

Table of the Weight of Coal under Different Circumstances.

Specific Gravity.	Weight in the Natural Bed, per Acre, per Inch Thick, in Tons.	Weight of a Cubic Foot in the Broken State, in Lbs.	
		Large Coal.	Small Coal.
1·10	111·411	42·62	37·12
1·15	116·475	44·56	38·81
1·20	121·540	46·50	40·50
1·25	126·604	48·43	42·18
1·30	131·668	50·37	43·87
1·35	136·732	52·31	45·56
1·40	141·796	54·25	47·25
1·45	146·860	56·18	48·93
1·50	151·925	58·12	50·62

To find the contents of coal of any given specific gravity per acre multiply the figure in the table by the thickness of the seam in inches; the thickness measured along a vertical line should always be taken, as the correct result will thus be obtained, whatever may be the inclination of the coal seam.

The weight of coal in its broken state, that is, as it comes to the surface, in tubs or otherwise, will depend on its largeness; it has here, however, been computed to weigh in proportion to the solid coal as 62 is to 100, and the weight of the small as 54 is 100.

The calculation now most commonly adopted in the North of England to ascertain the weight of coal in the solid state is to reckon 19 cwts. per cubic yard = 78·815 lbs. per cubic foot. On this calculation, a seam 1 foot in thickness would contain 1,532 tons 13 cwts. 1 qr. 10 lbs. per acre, and a seam 1 yard thick would contain 4,598 tons per acre.

A summary way of reckoning the quantity of available coal in a given area of a seam is to take an acre of coal 1 inch thick to produce 100 tons. This leaves a sufficient margin for faults and losses in barriers and in working.

METALLIFEROUS MINERALS.

By *metalliferous* minerals or *metallic* minerals are meant those minerals that are technically utilisable for the extraction of the ordinary, commercial heavy metals, metals of the alkalies and alkaline earths being excluded; this is almost identical with the meaning of *ores*, or with Group II. of above classification. In United States of America and Canadian statistics, a wider meaning is given to *non-metallic* minerals, which includes all minerals not actually used for the extraction of metals, e.g. ochre, although this is an oxide of iron, because it is used as a pigment and not as a source of iron.

COMPOSITION OF MORE IMPORTANT ORES.

Name.	Formula.	Percentage of Metal.
Magnetite	Fe_3O_4	Fe 72·4
Hæmatite	Fe_2O_3	„ 70
Limonite	Fe_2O_3,H_2O	„ 60
Brown hæmatite	Hydrated ferric oxide, with 10–15 per cent. H_2O	„ 45–55
Siderite	$FeCO_3$	„ 48·3
Ilmenite	$(TiFe)_2O_3$	„ 30–40
Pyrites	FeS_2	„ 46·7
Pyrrhotite	Fe_5S_6	„ 60·5
Pyrolusite	MnO_2	Mn 63·3
Manganite	$Mn_2O_3H_2O$	„ 62·5
Wad	Impure hydrated manganese oxide	„ 25–50
Chalcopyrite	$Cu_2SFe_2S_3$	Cu 34·6
Chalcocite	Cu_2S	„ 79·8
Malachite	$2(CuO)CO_2H_2O$	„ 56
Cinnabar	HgS	Hg 86·2
Galena	PbS	Pb 86·6
Cerussite	$PbCO_3$	„ 77·5
Anglesite	$PbSO_4$	„ 68·3
Blende	ZnS	Zn 67
Calamine	$ZnCO_3$	„ 52
Stibnite	Sb_2S_3	Sb 71·8
Mispickel	$FeAs_2S_2$	As 46
Cassiterite	SnO_2	Sn 78·7
Wolfram	$(FeMn)OWO_3$	W 70
Scheelite	$CaOWO_3$	„ 74·8

IRONSTONE.

Ironstone is the term applied to stratified or symphytic deposits workable for iron, iron ore to epactic deposits, veins or masses. Bessemer ore or hæmatite ore is generally understood to mean iron ore with less than 0·035 per cent. of phosphorus when the ore contains about 50 per cent. of iron. Such ores are usually quoted on a basis of 50 per cent. of iron, with a definite increase or deduction in price for each unit of iron above or below that figure, and a penalty for every unit of silica above a given percentage, often 8 per cent.

The yield of ironstone is often taken roughly at 2,000 tons per foot thick per acre.

TABLE OF BRITISH MESOZOIC IRONSTONES.

Formations.			*Name of Ironstone.*
CRETACEOUS—Neocomian	Wealden	Lower Greensand	Seend, Wiltshire.
		Weald Clay	
		Hastings Sand	Sussex and Kent.
			Westbury, Wiltshire.
			Claxby, Lincolnshire.
JURASSIC	Upper Oolite		
	Middle Oolite	Corallian	Dover, Kent.
		Oxford Clay	Westbury, Wiltshire.
	Lower Oolite	Great Oolite	
		Estuarine Beds	
		Northampton Sands	Northamptonshire.
			Cleveland Dogger or Top Seam.
	Upper Lias	Upper Lias Clay	
		Toarcian	Isle of Raasay.
	Middle Lias	Middle Lias Limestone	Cleveland Main Seam.
			Cleveland Pecten Seam.
			Cleveland Avicula Seam.
		Marlstone	Blenheim, Oxfordshire.
			Melton Mowbray, Leicestershire.
			Caythorpe, Lincolnshire.
	Lower Lias		Frodingham, Lincolnshire.

COMPOSITION OF BRITISH MESOZOIC IRONSTONES, DRIED AT 100° C.

	Iron.	Silica.	Lime.	Sulphur.	Phosphorus	Loss on Ignition.
	per cent.	per cent.	per cent.	per cent.	per cent.	per cent.
Cleveland Main Seam	30	12	5	0·3	0·5	26
Northamptonshire	38	17	3	0·15	0·7	32
Lincolnshire	25	9	21	0·2	0·35	36
Oxfordshire	28	13	11	0·15	0·3	35
Raasay	25	10	17	0·5	1·0	20

COPPER, TIN, LEAD AND ZINC ORES.

Copper, tin, lead and zinc ores are usually sold by assay. The value is calculated on the current market price of the metal multiplied by the percentage of metal present less the percentage estimated to be lost in the operation of smelting; from the value thus found there is then deducted the 'returning charge,' being the estimated cost of smelting the ore, including the smelter's profit, etc. The following were the generally accepted (pre-war) methods :—

COPPER ORES.—Weight paid for is gross weight less moisture and less 1 per cent. draftage. Wet assay less 1 per cent. for ores assaying 3–4 per cent. (deduction varied proportionately for richer or poorer ores); for value per unit (1 per cent.) take 0·01 of price of best selected copper, less returning charge of 2*s.* 3*d.* to 2*s.* 6*d.*

Example.—Cargo of 1,000 tons ore assaying 4 per cent. copper, ¼ per cent. moisture. Net weight $= 1{,}000 - \left(\frac{1{\cdot}25}{100} \times 1{,}000\right) = 987{\cdot}5$ tons.

4 per cent. − 1 per cent. = 3 per cent. copper to be paid for.

Best selected quoted that day 82*l.* 10*s.* per ton = 16*s.* 6*d.* per unit, less 2*s.* 3*d.* returning charge = 14*s.* 3*d.* 3 units at 14*s.* 3*d.* = 42*s.* 9*d.* per ton of ore.

Value of cargo 987·5 tons at 42*s.* 9*d.* = 2,110*l.* 15*s.* 7½*d.*

LEAD ORE.—Weight paid for is net dry weight. Percentage paid for is dry assay less 4 units, on basis of soft foreign lead price in London, subtracting 40*s.* per ton for returning charge. Silver above 3 oz. per ton paid for at current rate for fine silver. Price is understood to be delivered smelter's works.

Example.—150 tons net of galena assaying 78 per cent. of lead and 5 oz. of silver per ton, quotations being : lead, 20*l.* per ton; silver, 2*s.* 3*d.* per oz. Lead, 150 tons at (78 − 4) per cent. = 111 tons at 20*l.* = 2,220*l.*, less 150 tons at 40*s.* = 1,920*l.* Silver, 150 × (5 − 3) oz. = 300 oz. at 2*s.* 3*d.* = 33*l.* 15*s.* Total value of ore, 1,953*l.* 15*s.*

Zinc Ore.—Weight paid for is net dry weight. From percentage of zinc, as determined by wet assay, subtract 9 units, multiply by $\frac{18}{20}$ of price of spelter, and subtract returning charge of 3*l.*; difference is price per ton delivered smelter's works.

Example.—If ore assays 50 per cent., London quotation for spelter being 18*l.*, the ore is worth $£\left(\left[\frac{50-9}{100}\cdot\frac{18}{20}\cdot 18\right]-3\right) = 4l.\ 0s.\ 3d.$ per ton.

The general gangue of most ores is quartz; solid quartz averages about 165 lbs. per cub. ft. (13½ cub. ft. to the ton), broken about 100 lbs. (22½ cub. ft. to the ton), but varies considerably. The weight of veinstuff containing metalliferous minerals can be calculated from the specific gravity of the minerals.

Table of Specific Gravities and Weights per Cubic Foot of Minerals.

Mineral.	Sp. gr.	Cwts. per cub. ft.	Mineral.	Sp. gr.	Cwts. per cub. ft.
Copper pyrites	4·1–4·3	2·34	Ilmenite	4·5–5·0	2·64
Copper glance	5·5–5·8	3·15	Hæmatite	4·5–5·3	2 73
Malachite	3·7–4·0	2·20	Brown hæmatite	3·4–4·4	2·17
Cinnabar	8·9–9·0	5·00	Spathic ore	3·4–3·9	2·04
Galena	7·3–7·7	4·18	Pyrolusite	4 3–4·9	2·67
Cerussite	6·4–6·5	3·60	Cassiterite	6·4–7·1	3·76
Anglesite	6·1–6·4	3·50	Wolfram	7·1–7·6	4·12
Zinc blende	3·9–4·2	2·23	Scheelite	5·9–6·1	3·34
Calamine	4·0–4·5	2·40	Quartz	2·5–2·8	1·50
Stibnite	4·5–4·6	2·50	Calcspar	2·5–2·8	1·50
Pyrites	4·8–5·2	2·78	Dolomite	2·8–2·9	1·56
Mispickel	6·0–6·4	3·45	Fluorspar	3·0–3·2	1·73
Magnetite	4·9–5·2	2·80	Felspar	2·5–2·8	1·50

A rib of mineral 1 in. thick = 3 cub. ft. per square fathom.

Calculation of Mineral Mixtures.

The percentages of two minerals present in a mixture can easily be calculated if the sp. gr. of the mixture and of the ingredients is known. A convenient method is that proposed by R. T. Hancock.

Take a weight of x grms. of the mixture containing two ingredients of sp. gr., a and b respectively, where $\frac{1}{x} = \frac{1}{a} - \frac{1}{b}$ or $x = \frac{ab}{b-a}$; then the volume of this weight of a alone will differ from that of the same weight of b alone by 1 c.c., and for every 1 per cent. of a (the lighter substance) present in the mixture, the volume will be greater by 0·01 c.c. than the volume of b alone and for every 1 per cent. of b present, less by 0·01 c.c. than the volume of b alone. It is usually convenient to take $10x$ grms., when the differences will be 0·1 c.c.

Example.—To determine percentage of cassiterite (sp. gr. 7) and 'black sand' (sp. gr. 4·5) in a mixture of these. Since $\frac{1}{4\cdot5} - \frac{1}{7} = \frac{1}{12\cdot6}$, take 126 grms. Volume of mixture, measured by pouring the mixture into a burette partly filled with water and noting the difference in the burette readings, = 20 c.c. Volume of 126 grms. of black sand would be $\frac{126}{4\cdot5} = 28$ c.c. Hence percentage of cassiterite = 10 (28 − 20) = 80 per cent.

BORING.

Boreholes are put down by one or other of the following methods :—

I. Percussive: (*a*) Using solid rigid rods.
(*b*) Using ropes.
(*c*) Using hollow rods (water-flush method).
(*d*) Using a hydraulic ram.

II. Rotary: A. Core drills.
(*a*) Using diamonds.
(*b*) Using steel cutting teeth.
(*c*) Using chilled shot.
B. Hydraulic rotary oil drill.

Generally speaking, percussive methods are used when the primary object is to get a hole down rapidly, where information as to the nature of the ground passed through is of less importance, whilst rotary core drills, by the use of which a more or less continuous core is obtained, are employed when an accurate knowledge of the strata passed through is the first consideration.

Sometimes both methods are combined ; thus in some of the boreholes put down in Kent, boring through the secondary rocks was performed by percussion, whilst rotary core-boring was substituted after the coal measures had been reached. Percussion boring by the ordinary 'English' method can be used to depths of about 500 ft., costing about 10*s.* to 20*s.* per foot, and advancing 2 ft. to 6 ft. per twenty-four hours. Beyond this depth a free-falling cutter must be used, and in this way depths of 3,000 ft. or more may be reached.

Rope boring with round ropes on the American system is used almost exclusively in boring for oil, salt, etc. The plant for a hole 2,000 ft. deep would weigh about 80 tons complete and cost about 2,000*l.* ; holes range from 6 ins. to 15 ins. in diameter. In Pennsylvania and Ohio such boring has been done for as little as 2*s.* per foot, and contracts are usually let at prices ranging from 4*s.* to 8*s.* The rate of boring is from 20 ft. per day upwards. In Middlesbrough, 8-in. holes have been put down to depths of about 1,000 ft. at a cost of about 8*s.* per foot with a speed of 60 ft. per day. Boring with flat ropes by the Mather and Platt system is used for very large boreholes, as for instance for waterworks ; holes up to 45 ins. in diameter have been bored by this method.

The water-flush method, of which there are many varieties (Fauck, Raky, etc.), is used in hard rocks for boreholes of medium size (rarely under 8 ins. in diameter). Very fast boring can be done in this way ; e.g. in the Ruhr district a borehole was put down to a depth of nearly 2,000 ft. at an average speed of 157 ft. per twenty-four hours ; 30 to 50 ft. is quite a usual rate down to depths of about 2,000 ft., and over 20 ft. a day has been bored down to a depth of over 3,000 ft.

The hydraulic ram method appears to offer certain important advantages, especially for boreholes of moderately large diameter, but has hardly passed the experimental stage.

Core Boring.

Diamond boring is in use to-day for hard rocks ; the main drawback is the high price of the 'diamonds' (bort, used in the softer rocks, costs 2*l.* to 3*l.** per carat, carbon costs 6*l.* to 12*l.* per carat), which tells severely against boreholes larger than 6 ins. in diameter. The cost of diamond boring in this country is about 7*s.* 6*d.* per foot down to 500 ft. and 12*s.* to 18*s.* down to 1,500 ft. for a 5-in. borehole. A 5-in. borehole put down in Scotland to 1,800 ft. cost only 6*s.* 4*d.* per foot ; the rate of advance was about 6 ft. per day. In British Columbia a borehole 2,200 ft. deep cost 8*s.* 6*d.* per foot, and was bored at the rate of 10 ft. per day. In Victoria the Government does much boring to aid prospectors ; the bores are mostly shallow, but in one case a depth of 1,110 ft. was reached in about 120 days ; the average cost of boring in coal measures in 1912 was 9*s.* 3*d.* and in the harder rocks 14*s.* per foot. In Nova Scotia 2 in. diamond boreholes put down by the Government in moderately hard ground to depths of 200 to 400 ft. averaged about 9*s.* per foot in 1913.

Steel cutting teeth can only be used in tolerably soft ground. The cutter should make 15–25 r.p.m. A 10-in. borehole in Kent was put down by this method by the Calyx Company to a depth of 1,400 ft., the speed at times reaching 10 ft. per hour.

The chilled shot method is very generally applicable, and is used for relatively large bore holes in hard ground. The cutter should run at 100–150 r.p.m. ; about No. 5 shot is generally used. It is usually somewhat slower but cheaper than diamond boring. The consumption of shot with a cutter 4½ ins. in diameter ranges from 0·15 lb. per foot bored in shale to 1·2 lbs in hard sandstone, but may be much higher in broken ground, where shot escapes into the fissures. In Nova Scotia 6 in. Government boreholes by this method averaged 10*s.* 6*d.* per foot in 1913.

The hydraulic rotary drill is the name given to a form now much used in boring oil-wells ; it cuts out the whole of the material, leaving no core, the debris being brought to the surface by a water-flush. Over 100 ft. per day has been bored by this method.

Location of Bore-holes for Valuation of Alluvial.

When ground is systematically tested by pits or boreholes at regular intervals, three conventional views are possible :—

1. That there should be so many pits or holes per acre, or
2. That the distance between pits or holes should be so much, or
3. That no point on the ground should lie beyond a certain distance from a pit or hole.

The first two are those most generally held, but the last seems the most logical, and to attain it with the least amount of work the holes should lie at the corners of a series of equilateral triangles, the length of whose sides, or the distance of the pits apart, is equal to the maximum distance under condition (3) multiplied by $\sqrt{3}$. A line is run in any desired direction and staked at intervals equal to the distance between pits. From these stakes lines are turned off at angles of 60° or 120°, and staked at similar intervals starting from the turning-off point. The stakes are numbered to indicate their position on their own line and the number of the turning-off point, so that the pits sunk at them can be readily identified.

The advantages of this method over the more usual square lay-out are considerable. There is 6 per cent. less work involved in the lay-out of the holes, and 23 per cent. less in the sinking and sampling. The computation of values can also be more accurately done. Interpolation

* All costs throughout this article refer to prices before 1913.

of values can be done on the plan, much as in contouring from spot levels, and a reliable assay plan prepared. (*R. T. Hancock.*)

The following is a list of some of the more important boreholes in the world :—

	£ s. d.		£ s. d.
Czuchow, Rybnik, Upper Silesia . 7,350 ft.	2 3 4 per ft.	Bezuidenville, Transvaal . . 5,800 „	2 2 0 „
Virgina, U.S.A. (1918) 7310 „		Schladebach, Prussia . . . 5,737 ft.	1 1 2 per ft.
Macdonald, Penn. U.S.A. . . . 7200 „		Dornkloof, Transvaal . . . 5,582 „	
Paruschowitz, Silesia . . . 6,572 „	0 11 6 „	Wheeling, West Virginia . . . 4,500 „	
Johannesburg, Transvaal . . 6,340 „		Balfour Main, Fifeshire . . . 4,060 „	
Dentingen, Lorraine 5,925 „			

Drilling Shot Holes.

Performed by hand, either by jumper for moderately hard rocks, by hammer and drill for hard rocks, or by the coal miner's hand machine, now used almost exclusively in coal and very largely in ironstone (W. Charlton, *Trans. Inst. Min. Eng.*, 1902, vol. xxiv., p. 526). Average rate of boring is 4 to 8 ins. in bituminous coal, 2 to 4 ins. in shale, per minute.

'Mushrooming' of shank end of drill causes loss of 20 lbs. steel per man per annum. Tempered pear-shaped shank ends are being used at East Rand Proprietary Mines. (*Journ. Chem. Met. and Min. Soc. South Africa*, 1919, vol. **xix.** p. 168.)

Mechanical Drilling.

Also either rotary or percussive. Rotary drills mostly of the twist-drill type confined to the softer rocks; Steavenson electric drill averages 40 ins. per minute in ironstone, uses 6 h.p. Siemens and others make small electric drills, taking 1 to 2 h.p., boring 6 to 10 ins. per minute in coal. For boring in hard rock the Brandt machine has been used in the Simplon tunnel and in some German collieries ; hydraulically driven under head of 1,500 lbs. per sq. in. ; bores 15 ft. per hour in gneiss. The Kellow drill used in North Wales is similar ; has drilled 5 ft. per minute in slates.

Percussive drills are almost exclusively worked by compressed air (for Air Compression, see p. 1075). Drills are of two kinds: piston drills, in which the drill bit is rigidly connected with the piston rod, and hammer drills, in which the piston rod strikes on the end of the drill bit, the latter being lighter, smaller, and running at much higher speeds.

Drills may be classified by their valve action :—

1. Valve moved by external tappets.
2. „ „ internal „
3. „ „ air with auxiliary valve moved by tappet.
4. Valve moved by air.
5. Valveless, the piston itself acting as a valve.

Most modern drills belong to Class 3, but several types belonging to Classes 2 and 4 are also in use ; very many hammer drills belong to Class 4.

Piston drills are further classified by their piston diameter, ranging from 2 to 4 ins. ; 2¼-in. drills are largely used for stoping, 2¾ to 3¼ ins. for drifting, 3 to 3½ ins. for sinking. In 1902 70 per cent. of the drills in use on the Rand were 3¼ drills. Such drills use 60 to 90 c. ft. of free air per minute at pressures between 60 and 90 lbs. per sq. in. A 3-in. drill evolves about 1¾ h.p., for which about 5 h.p. must be applied to the drill piston and 10 to 25 h.p. to the steam end of a direct-driven air compressor.

Average speed of boring, including setting up, is 10 to 25 ft. per 10-hour shift. Costs of boring in hard rock in Sweden are about 8*d.* to 10*d.* per foot bored, of which 40 per cent. is for wages and 30 per cent. for power ; average boring speed is 5 ft. 6 ins. to 8 ft. per hour for downward holes and 4 ft. to 6 ft. 6 ins. for upward holes.

Hammer drills use 25 to 50 cubic feet of free air per minute ; speed of boring about the same as piston drills, but holes are usually smaller. Hammer drills with a relatively rapid turning action of the bit and using bits with a chisel edge, but specially twisted steel, are used very successfully in coal.

A complete 6-piston-drill plant costs about 500*l.*

Two-stage compressors, delivering air at 100 lbs. gauge pressure, weigh on the average 27 lbs. and cost on the average 12*s.* in the U.S.A. per cubic foot piston displacement.

Sharpening Steel Bits.

A good blacksmith and striker can sharpen 30 to 40 bits per hour.

By the use of power drill-sharpeners, many of the shortcomings attendant upon the hand-sharpening process are got rid of, and drills can be kept true to gauge, with the result that where these machines are used it is possible to accomplish more drilling, whilst the cost of sharpening is considerably reduced.

According to experiment, the fastest cutting bit is the Carr (double chisel bit with central hole) the Z, + and 6 edged star in this order ; cutting speed $\propto$ (drill diameter) $^{-2}$; cutting speed $\propto$ air pressure ; pressure of 85 lbs. per square inch most generally satisfactory.

(*Bull. Amer. Inst. Min. Eng.*, August 1917, p. 1079.)

TABLE I.—CUBIC FEET OF FREE AIR REQUIRED TO RUN ONE DRILL.

Gauge Pressure.	Size and Cylinder Diameter of Drill.											
	A35	A32 A86	B	C	D	D	D	E	F	F	G	H	H9
	2 ins.	2¼ ins.	2½ ins.	2¾ ins.	3 ins.	3½ ins.	3 3/10 ins.	3¼ ins.	3½ ins.	3 5/8 ins.	4¼ ins.	5 ins.	5½ ins.
60	50	60	68	82	90	95	97	100	108	113	130	150	164
70	56	68	77	93	102	108	110	113	124	129	147	170	181
80	63	76	86	104	114	120	123	127	131	143	164	190	207
90	70	84	95	115	126	133	136	141	152	159	182	210	230
100	77	92	104	126	138	146	149	154	166	174	199	240	252

TABLE II.—MULTIPLIERS TO DETERMINE CAPACITY OF COMPRESSOR REQUIRED TO OPERATE FROM 1 TO 70 ROCK DRILLS AT ALTITUDES COMPARED WITH SEA LEVEL.

Altitude Above Sea Level.	Number of Drills.																		
	1	2	3	4	5	6	7	8	9	10	12	15	20	25	30	40	50	60	70
	Multipliers.																		
0	1·	1·8	2·7	3·4	4·1	4·8	5·4	6·0	6·5	7·1	8·1	9·5	11·7	13·7	15·8	21·4	25·5	29·4	33·2
1,000	1·03	·85	2·78	3 5	4·22	4·94	5·56	6·18	6·69	7·3	8·34	9·78	12·05	14·1	16·3	22·0	26·26	30·3	34·2
2,000	1·07	1·92	2·89	3·64	4·39	5·14	5·78	6·42	6·95	7·60	8·67	10·17	12·52	14·66	16·9	22·9	27·28	31·46	35·52
3,000	1·10	1·98	2·97	3·74	4·51	5·28	5·94	6·6	7·15	7·81	8·91	10·45	12·87	15·07	17·38	23·54	28·05	32·34	36·52
4,000	1·14	2·05	3·08	3·88	4·67	5·47	6·15	6·84	7·41	8·09	9·23	10·83	13·34	15·62	18·01	24·4	29·07	33·52	37·8
5,000	1·17	2·10	3·16	3·98	4·8	5·62	6·32	7·02	7·61	8·31	9·48	11·12	13·69	16·03	18·49	25·04	29·84	34·4	38·84
6,000	1·20	2·16	3·24	4·08	4·9	5·76	6·48	7·2	7·8	8·52	9·72	11·4	14·04	16·44	18·96	25·68	30·6	35·4	39·84
7,000	1·23	2·21	3·32	4·18	5·04	5·9	6·64	7·38	7·99	8·73	9·96	11·68	14·39	16·85	19·43	26·32	31·36	36·16	40·84
8,000	1·26	2·27	3·40	4·28	5·17	6·05	6·8	7·56	8·19	8·95	10·21	11·97	14·74	17·26	19·9	26·96	32·13	37·04	41·83
9,000	1·29	2·32	3·48	4·39	5·29	6·19	6·96	7·74	8·38	9·16	10·45	12·26	15·09	17·67	20·38	27·6	32·9	37·92	42·83
10,000	1·32	2·38	3·56	4·49	5·41	6·34	7·13	7·92	8·58	9·37	10·69	12·54	15·44	18·08	20·86	28·25	33·66	38·8	43·82
12,000	1·37	2·47	3·7	4·66	5·62	6·57	7·4	8·22	8·9	9·73	11·1	13·02	16·03	18·77	21·64	29·32	34·94	40·28	45·48
15,000	1·43	2·57	3·86	4·86	5·86	6·86	7·72	8·58	9·3	10·15	11·58	13·58	16·73	19·59	22·59	30·6	36·46	42·04	47·47

EXAMPLE.—Required the amount of free air necessary to operate thirty 5-in. 'H' drills at 9,000 ft. altitude, using to operate these drills air at a gauge pressure of 80 pounds per sq. in.

From Table I we find, when operating the drills at 80 pounds gauge pressure at sea level, that one 5-inch 'H' drill requires 190 cubic feet of free air per minute.

From Table II we also find that the factor for 30 drills at 9,000 feet altitude is 20·38; multiplying 190 cubic feet by 20·38 gives 3,872 cubic feet air per minute, which is the displacement of a compressor for the above outfit under average conditions, to which must be added pipe line losses, such as friction and leakage.

The Leyner compressed air operated drill sharpener, which can be handled by one man, is capable of sharpening up to 100 drill bits per hour, the number depending upon the size of the bits and steels to be handled.

In the case of small quarry plants or contract work, where drilling is done in the open, dry steam at a pressure of from 80 to 100 lbs. can be used, but will not give such good results as compressed air. Where a number of drills are used, a compressed air plant should preferably be installed, and is indispensable in underground drilling. With a properly laid pipe line of suitable size, there is very little loss in conveying compressed air from a central plant over very large distances.

Notes on Rock Drills.

In mining practice, drills are required to be of rapid boring capacity, and at the same time of light weight, so that the work may be both rapidly advanced and the whole outfit moved in awkward places with a minimum of trouble. In driving main headings, the piston type of drill, mounted on columns, is generally used. Where space is limited, it is not uncommon to mount two drills on arms attached to one column, two runners and a helper being sufficient to handle the machines so arranged ; in large tunnels the drills, from 1 to 4 in number, and of heavy pattern, are frequently mounted on drill carriages, thus enabling the equipment to be rapidly moved away from the face when the round of holes is ready for firing, without the necessity of dismantling. In stopes, raises, or small headings, the telescope-feed hammer drill, which is largely used, is a one-man drill, and is a rapid boring machine. Where the rock is of such a nature as to cause a considerable amount of dust, a condition which is to be met with in almost every metalliferous mine, drills having an automatic water feed are used. In the case of the heavy drills, the water is fed through the piston and drill bit under pressure ; of this type is the Leyner-Ingersoll. Telescope-feed stope drills can also be arranged for water feed through the heads and drill bits, which have a central hole running from the shank to the cutting face for this purpose.

For hammer drill work, drill bits are furnished with single chisel, double chisel, 6 point and 'Z' cutters, the steels themselves being sometimes hollow and sometimes round, hexagonal or spiral, the section depending upon the class of rock to be bored.

The Hardy-Simplex Air Hammer Rock Drill (*Patent*).

(*The Hardy Patent Pick Co. Ltd., Sheffield.*)

In this drill, fig. 1, the valve action is as follows:—When the air pressure is suddenly reduced at one end of the valve, the piston uncovers the main exhaust ports, and the full pressure

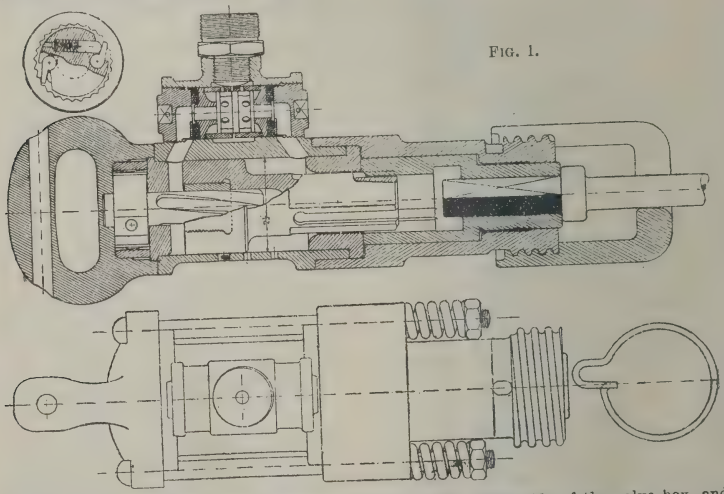


Fig. 1.

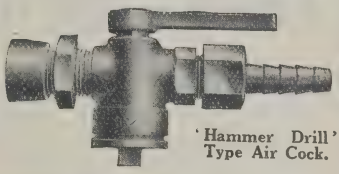
acting on the opposite end causes the valve to travel to the other side of the valve box and thereby change the direction of the air pressure and reverse the piston or hammer. The action of the valve does not depend on compression set up by the piston in order to accomplish its

UNITED BRASSFOUNDERS & ENGINEERS LIMITED.


UBEL UBEL

ROCK DRILL FITTINGS for Mines & Quarries

Enquire our prices for spares.




'Hammer Drill' Type Air Cock.

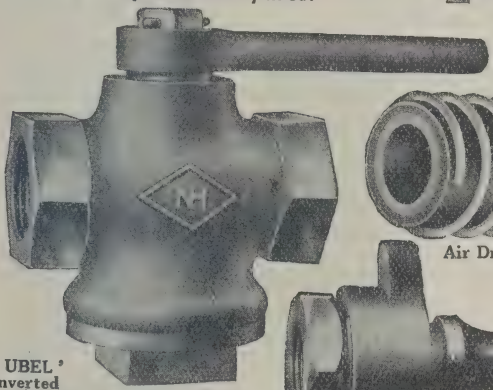


'UBEL' Inverted Spring Plug Air Cock.



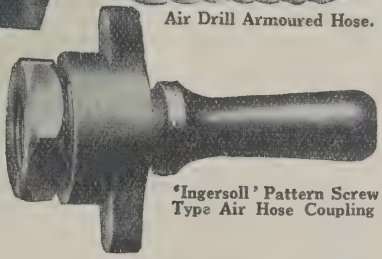Air Drill Armoured Hose.



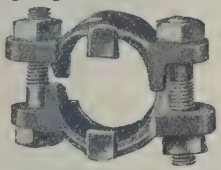'Ingersoll' Pattern Screw Type Air Hose Coupling



'Ingersoll' Pattern Hose Clamp.

CATALOGUE SECTION 'D' Free on Request.

Codes :—A B C 5th Edition ; Leber.
Telephone : 3134 Central (3 lines).
Telegrams : 'Stork,' Manchester.

United Brassfounders and Engineers Limited

FIVE WORKS — EMPRESS FOUNDRY — UBEL — 3000 WORKERS — CORNBROOK MANCHESTER ENGLAND

Depots also at London, Glasgow, Newcastle, Birmingham, Belfast, Cardiff, and all principal world centres

Super Royal 8vo. Cloth. Price **30**/- net. Containing 544 pages with 416 Illustrations, including numerous folding Plates.

THE

Dressing of Minerals

By HENRY LOUIS, M.A., D.Sc., A.R.S.M.

Member of the Institution of Civil Engineers; Fellow of the Institute of Chemistry of Great Britain; Fellow of the Geological Society; Member of the Institution of Mining Engineers; Professor of Mining and Lecturer on Metallurgy at Armstrong College, Newcastle-on-Tyne.

THE 'Dressing of Minerals' is a term that is intended to include all the series of operations that intervene between the extraction of a mineral from its natural deposit and its production in a condition ready for sale or for further use in the arts or manufactures; it practically covers the whole series of operations which have for their object the separation of a mass of mixed minerals into its mineralogical constituents, or the cleaning of ore constituent from the accompanying mineral or minerals which may be looked upon from the technical point of view as the impurities of the former.

The object of Professor Louis is to give an account of the theory and practice of the subject, and the present volume—the first English treatise on the subject—will prove of the greatest service to the miner or metallurgist who desires to understand the principles upon which the art is based, as also to the manufacturer who supplies the necessary appliances, and above all to the student who is preparing for either of the above professions.

SUMMARY OF CONTENTS.

I.—General Considerations. II.—Volumetric Sizing. III.—Sorting and Washing. IV.—Comminution. V.—Separation by Specific Gravity. VI.—Appliances depending essentially on Vertical Fall. VII.—Jigs. VIII.—Horizontal Current Separators. IX.—Shaking Tables. X.—Pneumatic Separation; Magnetic Separation; Electrostatic Separation; Separation by Surface Tension. XI.—Accessory Appliances. XII.—General Construction of Dressing Works.

LONDON:

EDWARD ARNOLD & CO., 41-43 Maddox St., W.1

reversal. It is not dependent on a tight piston and cylinder. It moves only $\frac{1}{64}$ in. in order to cut off the main air supply, but it has a further considerable travel before readmitting air. By the arrangement, all valve losses are practically eliminated, and the delay in readmitting air in quantity for the reversal of the piston diminishes internal resistance, so that a very powerful blow is given with a very small air consumption.

The valve will preserve its air tightness practically indefinitely, whilst at the same time it is perfectly balanced, and so light as to have great rapidity of action. The cylinder and valve box are forged together in one piece of special steel, bored, case-hardened to a glass hardness, and then accurately ground. The valve and valve bush are both manufactured from special alloy steels, both parts being hardened to suit the demands made on them. The rotation is effected by means of a rifle bar and a ratchet wheel situated at the rear of the machine in combination with a number of straight grooves cut in the piston or hammer working through a steel guide nut, situated in the chuck or drill holder. All parts of the rotation device are of hardened steel and are readily renewable.

The drills are retained by means of a cap which is provided with a strong round thread, screwing over the front of the drilling machine and embracing the collar on the drill shank. The cap is slotted its full length, thereby enabling the machine to be at once disengaged from the drill steel should this for any reason become necessary.

The drills are made in three sizes, viz., the B5, B6, and B7, weighing 23 lbs., 27 lbs., and 40 lbs. respectively. The B5 pattern is for all overhead work in any class of rock; it is also used for coal boring on long wall faces and in headings, etc. The B6 pattern will bore easily holes up to 10 ft. in depth where necessary, in rock of any hardness, the speed of boring varying from 6 to 8 ins. per min. in hard granite to 30 ins. per min. in soft sandstone, and up to 48 ins. per min. in hard coal. Air at 60 to 80 lbs. per sq. in. The B7 pattern has been designed specially for 'down holes' in very hard ground in mine shafts and in quarries. It will easily drill holes up to 25 ft. in depth, starting at 3 ins. in diameter. Its normal boring speed in hard granite is 8 to 10 ins. per min. with air at 80 lbs. per sq. in.

Compressed Air Drilling Plants.

Air Receivers.

An air receiver is not intended so much for storage as to equalise pressure, and to allow of an even flow of air through the pipe, there being a certain amount of pulsation from the air compressor discharge itself. In long pipe lines a smaller receiver should be placed in the pipe line near the point of application of the compressed air, furnished with suitable drain cocks, for the purpose of drawing off the superfluous moisture which might collect, and the consequent prevention of freezing in the line. The following table gives sizes and details of receivers which are usually considered standard practice:—

Table III.—Air Receivers and Pressure Tanks for Standard Working Pressures. Tested to 165 lbs. Water Pressure.

Diam. in Ins.	Length in Ft.	Contents Cub. Ft. (about).	Thickness of Shell. Ins.	Thickness of Heads. Ins.	Weight Lbs. (about).	Diam. of Safety Valve. Ins.	Diam. of Inlet and Discharge Openings. Ins.	Compressor Capacity Receiver is Best Adapted for in Cub. Ft. Free Air per Minute.
18	6	10	$\frac{3}{16}$	$\frac{5}{16}$	350	1	$2\frac{1}{2}$	90
24	6	18	$\frac{7}{32}$	$\frac{5}{16}$	575	$1\frac{1}{2}$	$2\frac{1}{2}$	120
30	6	29	$\frac{1}{4}$	$\frac{3}{8}$	950	$1\frac{1}{2}$	3	150
36	6	42	$\frac{1}{4}$	$\frac{3}{8}$	1,000	$1\frac{1}{2}$	$3\frac{1}{2}$	150 to 200
36	8	56	$\frac{1}{4}$	$\frac{3}{8}$	1,350	$1\frac{1}{2}$	4	200 to 300
42	8	77	$\frac{9}{32}$	$\frac{3}{8}$	1,750	2	5	300 to 500
42	10	96	$\frac{9}{32}$	$\frac{3}{8}$	2,000	2	6	500 to 700
48	8	100	$\frac{11}{32}$	$\frac{7}{16}$	2,480	$2\frac{1}{2}$	6	500 to 800
48	12	150	$\frac{11}{32}$	$\frac{7}{16}$	3,000	$2\frac{1}{2}$	7	700 to 1,200
54	12	190	$\frac{3}{8}$	$\frac{7}{16}$	3,300	$2\frac{1}{2}$	8	1,200 to 2,100
60	14	275	$\frac{13}{32}$	$\frac{1}{2}$	5,500	$2\frac{1}{2}$	9	2,000 to 3,000
66	18	437	$\frac{7}{16}$	$\frac{9}{16}$	7,500	$2\frac{1}{2}$	10	3,000 and over
24	6	18	$\frac{7}{32}$	$\frac{5}{16}$	625	$1\frac{1}{2}$	4	These are only furnished horizontal style and are used as water traps in air lines.
36	6	42	$\frac{1}{4}$	$\frac{3}{8}$	1,100	$1\frac{1}{2}$	6	
48	8	100	$\frac{11}{32}$	$\frac{7}{16}$	2,200	$2\frac{1}{2}$	6	

(For Air Compressors see p. 1076.)

'Ubel' Air-Service Cocks.

The 'Ubel'-Inverted Spring Plug Air Cocks, fig. 2 (*United Brassfounders and Engineers Ltd.*), are of special construction, embodying many improvements as a result of extensive experience in the use of Rock Drill and other Air-Service Fittings. The design and construction of these cocks is such that, whilst perfectly air-tight, they cannot possibly stick, and can be opened and shut under pressure with great ease. The standard fittings are supplied either all gun-metal or cast iron, or all malleable iron. Cast and malleable iron cocks are also largely supplied, having gun-metal plugs. This arrangement is strongly recommended in cases where there is much moisture in the pipe line, for the reason that this construction prevents any possibility of the ground surfaces rusting together. The standard sizes (screwed standard W.I. pipe) are ¼ in., ⅜ in., ½ in., 1¼ in., 1½ in., 2 in., the all gun-metal fittings weighing respectively 1 lb. 8 ozs., 3 lbs. 6 ozs., 4 lbs. 10 ozs., 6 lbs. 4 ozs., 8 lbs. 4 ozs., and 13 lbs. 8 ozs.

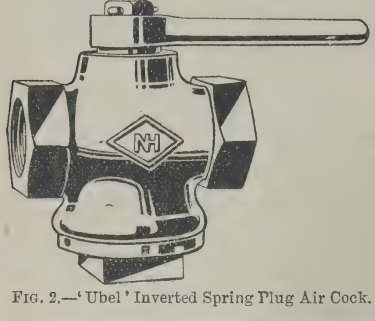


Fig. 2.—'Ubel' Inverted Spring Plug Air Cock.

The 'Purser' Combined (Inverted Spring Plug) Cock and Air-Saver has for its object the prevention of waste, the arrangement being that it automatically closes under 'no load,' and will not entirely open except under approximately full load conditions. An auxiliary valve inside the plug of the cock has its position regulated by small ports in the plug and in the body of the cock. When the cock is open, and the machine to which it is attached is under full load, the air pressure above and below the valve is in equilibrium, allowing the cock to operate as an ordinary plug cock. Should, however, the cock be opened or left open, under 'no load' conditions, the pressure above the auxiliary valve is relieved, and the air entering the cock on the inlet side having access to the underside of valve raises same, thus automatically closing the passage in the cock. The ports are so arranged that when the valve is in the top position, compressing the spring and closing the passage of the cock, a small quantity of air passes through the cock. This air serves a double purpose. (1) It enables the face of the stope to be cleared for subsequent operations. (2) When the load is again applied it assists in building up the pressure between cock and machine operated, until equilibrium is again effected on either side of the auxiliary valve, when the spring forces valve back into its original position, thus leaving the passage of cock again open. The standard sizes are similar to those of the 'Ubel' Inverted Spring Plug Air Cock described above. The weights are, respectively, 3 lbs. 4 ozs., 4 lbs. 6 ozs., 6 lbs. 6 ozs., 8 lbs. 4 ozs., 13 lbs., and 21 lbs.

Metallic Tubing.

Flexible Metallic Tubing (*The Flexible Metallic Tubing Co. Ltd.*, 112 Queen Victoria Street, London) is specially suitable for mining work. Its durability renders it economic, and it diminishes 'breakdowns,' as the tubing cannot kink and is not easily crushed; it is also unaffected by changes of atmosphere, or by vermin, white ants, etc.

BLASTING.

Explosives are divided into low explosives, with a slow rending action and fired by simple ignition, and high explosives, with a rapid shattering action, fired by means of a detonator. The rate of explosion of gunpowder, typical of the former, is 3 to 4 metres per second, and of blasting gelatine, typical of the latter, up to 7,000 metres per second.

For blasting in fiery coal-mines explosives known as safety explosives are employed, which have a lower temperature of detonation. No explosive can, however, be considered really safe in a fiery atmosphere. In this country only those explosives are allowed to be used that have passed the Government tests and which are scheduled in the Home Office Order in force for the time being. A shot-hole in coal should never be placed in the solid, i.e. in coal that has not previously been kirved.

If D be the depth of a properly placed shot-hole, the volume of rock blasted out averages with one free face $0{\cdot}37\ D^3$; with two free faces volume $= 0{\cdot}84\ D^3$, and with three free faces $1{\cdot}33\ D^3$. In drifting and shaft sinking the volume blasted out is approximately $0{\cdot}75\ D^3$. If L be the line of least resistance, D = about 1·75 L.

The quantity of explosive required for charging a shot-hole may be calculated by the following formula, modified from Chalon :—

Let Q be the quantity of explosive in lbs., L the line of least resistance in feet, then

$$Q = \epsilon\kappa L^2,$$

where ϵ is a coefficient depending on the explosive and κ a coefficient depending on the character of the rock.

NOBEL

Manufacturers of

Every Type of Explosive for Mining and Blasting Purposes.

Also

Detonators. Electric Detonators.
Safety Fuse. Electric Powder Fuses.

Suppliers of Cable, Batteries and every Shot-Firing Accessory.

Agencies throughout the United Kingdom and in most Foreign Countries.

Descriptive pamphlets free on request from the ADVERTISING DEPARTMENT.

NOBEL INDUSTRIES, LIMITED,
NOBEL HOUSE, BUCKINGHAM GATE,
LONDON, S.W. 1.

Explosives

Engineers and Mine Managers requiring information concerning the use of Explosives for all purposes should obtain the literature published by NOBEL INDUSTRIES, LTD., and their constituent Companies.

Recently Published Booklets:—

'Blasting Explosives & Accessories.'
'Blasting in Collieries and Hints on Electric Shot-firing.'
'Ground Clearing and Tree Stump Blasting.'
'The Storage of Explosives.'

COPIES WILL BE SENT FREE
on application to
ADVERTISEMENT DEPARTMENT,
NOBEL INDUSTRIES, LIMITED,
NOBEL HOUSE,
BUCKINGHAM GATE,
S.W. 1.

F. 2167

VALUES OF ϵ.

Blasting gelatine	0·14	No. 3 dynamite (33 per cent. nitro-glycerine)	0·37
No. 1 gelatine dynamite	0·20	Compressed powder	0·41
Tonite	0·245	Ordinary blasting powder	0·61
Roburite, bellite and similar 'safety' explosives	0·25		

VALUES OF κ.

Very hard rocks, quartzite, hard igneous rocks, etc.	1·0 [1]
Hard igneous and metamorphic rocks, etc.	1·0 to 0·8
Schists, crystalline limestones, hard sandstones, etc.	0·8 „ 0·5
Coal measure shales, soft sandstones, etc.	0·5 „ 0·3
Chalk, soft shales, etc.	0·3 „ 0·15
Coal	0·2 „ 0·1
Gravel and other non-coherent rocks	0·1 „ 0·05

Low-tension electric fuses require a tension of about 1 volt; medium, about 4 volts; high, about 100 volts. Low tension fuses best in series, high tension in parallel.

Liquid air is used extensively in the ironstone mines of Lorraine; a cartridge containing sawdust, powdered cork, soot, or a similar substance impregnated with liquid air or liquid oxygen is employed. No detonator is required, but the shot must be fired within 15 minutes of charging. The addition of aluminium powder to the charge greatly increases the detonating action. The quantity of liquid air used is 0·3 litre per ton of ironstone, and the cost of this explosive per ton blasted is given as 0·303 per cent. as against 0·571 per cent. with cheddite and 0·597 per cent. with compressed black powder. Liquid oxygen is preferred to liquid air, because the latter is apt to produce fumes containing oxides of nitrogen which injuriously affect the miners, whereas with the former no noxious gases at all are evolved.

Under Explosives Order No. 1194 of 1921, the production in the mine of an explosive by impregnating carbonaceous material with liquid air or oxygen is now permitted under licence, thus modifying Section 50 of the Explosives Act, 1875.

Detonators.

Detonators.—These are known by numbers, the charge of which varies somewhat. The following is about the average practice:—

Detonator numbers	1	2	3	4	5	6	7	8
Weight of mixture in grains	4½	6	8	10	12	15	23	30

The mixture consists of 80 per cent. fulminate of mercury, 20 per cent. chlorate of potash.

Detonating Cord (Cordeau détonant) consists of a flat tube of lead, tin or aluminium usually 7 mm. wide, 3 mm. thick, filled with nitro-methylaniline or trinitrotoluol, containing usually about 10 grams of explosive per metre. An explosion is propagated through this at a velocity of about 7,000 metres per second. A piece of this cord is attached along a row of blasting cartridges and ensures their complete and instantaneous detonation, even in wet holes. It is stated that the efficiency of the explosive is increased by 20 per cent., and that experiments at Lievin have shown that an explosive mixture of firedamp is not ignited by the detonation of 3 metres of cord.

Ordinary fuse burns at the rate of 30 seconds per foot.

(See also EXPLOSIVES, Section XXXVIII.)

Drifts.

In collieries, drifts of ordinary size, say 35 to 50 square feet in sectional area in ordinary coal measures, range in price for hand labour in **1913** from 1*s.* to 2*s.* per linear yard for each square foot, according to nature of strata and width of drift, being less the wider the drift. The cost in shale is about two-thirds of the cost in ordinary sandstone. Mean rate of advance of such drifts, about 4 to 6 yards per week in sandstone, 6 to 8 yards per week in shale, 3 shifts per day, two miners in face with two to three labourers.

For inclined drifts rising at high angles the prices will be up to 50 per cent. higher; for drifts dipping at a high angle up to 100 per cent. In very hard sandstone the speed of driving will be about one-half, and the costs about double those given above, and in hard tough igneous rocks, such as basalts, the speed may fall to one-fourth, and the cost rise to four times these figures.

By the use of rock drills the speed may be greatly increased, especially in hard rocks, but the actual drivage costs are not much diminished, except in the harder rocks.

In making height where a top or bottom canch of stone has to be blasted, the price for a top canch of shale ranges from 1½*d.* to 2*d.* per inch for a width of 6 ft.; sandstone, 2*d.* to 3*d.* Bottom canches cost about 20 per cent. more than top canches. These prices include stowing the stone

Driving in hard carboniferous limestone drift 30 sq. ft. in cross-section, cost about 60*s.* per

yard ; three men in three shifts can drive about 4 to 5 yards per week by hand. In one case with hand-drilling the cost was 55*s.* per yard, and rate of advance 4 yards per week, and with machine drilling the cost fell to 25*s.* and the rate of advance rose to 10 yards.

In metalliferous mines.—By hand.—A drift 5 ft. by 7 ft. in the clear, in rock of medium hardness, can be driven by hand at a rate of 30 to 40 feet per month by employing two ten-hour shifts per twenty-four hours. In soft rock as much as 100 ft. per month can be penetrated. The cost in moderate rock with labour at 12*s.* per shift will average about 2*l.* per foot, including timber and strap rails.

By machine.—A 5-ft. by 7½-ft. drift was run in Colorado, U.S.A., at the rate of 236 feet per month. This speed is above the average and was due to a well-trained crew (three shifts per day) working on a bonus system. Rock was granite, gneiss, and schist, very hard to drill and breaking badly. Labour, 16*s.* per shift. Cost, 2*l.* 14*s.* per foot.

At Cripple Creek, wages 13*s.* 6*d.* per eight-hour shift, ground moderately hard, 896 ft. of 5 ft. by 7 ft. drifts were run by machines, at a cost of 1*l.* 4*s.* per foot ; 1,229 ft. of 5 ft. by 7 ft. crosscuts were run at a cost of 1*l.* 9*s.* per foot.

At Park City, Utah, with miners' wages at 12*s.* per eight-hour shift, a timbered drift 7 ft. by 11 ft. was run in quartzite by means of 3½ inch air drill, 3 shifts per 24 hours, at rate of 4·75 ft. per day, at a cost of 2*l.* 4*s.* per foot of drift, or 7*s.* 1*d.* per ton of material broken. No hoisting.

At the same mine crosscuts 7 ft. by 7 ft. in the clear are run by air drills at a rate of 8 ft. per day at a cost of 2*l.* 15*s.* per foot or 15*s.* per ton of material broken.

The Chipeta Adit in Colorado, U.S.A., 7½ ft. by 7½ ft. in clear, was run in hard rock a distance of 1,712½ ft. in 152 days. The best monthly average was 342½. Two 3½ in. air drills were employed. The cost, including track and pipe, power, timber, labour and explosive, was 2*l.* 4*s.* per foot. The amount of powder (40 per cent.) consumed was 14½ lbs. per foot of tunnel. Wages 16*s.* per day.

In Western Australia the drifts vary in size from 5 ft. by 7½ ft. to 6 ft. by 7 ft., and the crosscuts from 5 ft. by 7 ft. to 8 ft. by 8 ft. In eleven of the principal mines the rate of driving and crosscutting varies from 25 ft. to 90 ft. per month, averaging 60 ft. Working costs range from 46*s.* to 103*s.* per foot, averaging 60*s.* The total costs of drives were from 3*l.* 6*s.* to 4*l.* 2*s.* per foot and crosscuts from 3*l.* 3*s.* to 3*l.* 14*s.* At the Braden Copper Mine, Chili, all development work in the nature of drifts, crosscuts and upraises with average section of 4·53 square metres are run at an average cost of 14*s.* per foot driven. This cost includes all labour (native Chilian), supplies, explosives, machinery, and tramming. No timber is used. The work is done under contract and rock is moderately hard and breaks well. Machine drills are used. The rate of progress is about 130 ft. per month or 13 ft. per month per man.

Timbering Drifts.

Props 3 ins. to 5 ins. diameter and crowntrees 5 × 2½ ins. are often used in colliery drifts ; in main roads balks of much larger size may be used.

Resistance to crushing of pit props in tons per square inch of small end :

Scandinavian white wood, 1½ ; Larch, 1½ ; Scotch Fir, 1¼ ; Oak, 1 ; Beech, 1⅜.

Prof. Hudson Beare gives the following :—

Scots Pine, 1·767 ; Spruce, 1·892 ; Larch, 1·871 ; Japanese Larch, 1·379 ; Finnish Red and White Wood, 1·784 tons per square inch of mean area of prop.

In main roads ferro-concrete props are coming into use : their crushing strength is about 1·3 tons per sq. in. Tests by W. A. Machin (*Trans. Nat. Assoc. Col. Man.*, xv., p. 155) gave 1·58 to 1·82 tons per sq. in. on Keedon props 6 ft. long, about 4½ ins. square.

Instead of balks, steel H girders are often used. The following are some of the usual sizes :—

Depth by width, in ins.	6 × 6	6 × 5	6 × 4	5 × 4	4½ × 4
Weight in lbs. per linear foot	31	27	24	22	18
Tons that will be carried in middle by beam 1 ft. long, supported at both ends	160	130	120	105	60

Drystone arching for roadway 6 to 7 ft. high and 3 ft. to 4 ft. 6 ins. wide in Alston district costs about 12*s.* 6*d.* per linear yard for labour. The cost of labour for ordinary arching ranges from 7*s.* to 10*s.* per linear yard. Concrete arching varies from 6*s.* to 10*s.* per cubic yard of concrete put in. Arches of steel H girders supporting galvanised sheets have been used successfully in big drifts.

A coating of magnesia cement on the timbers of mines is stated to be an economical and efficient assurance against fire, especially in the arid regions where timber becomes highly inflammable and is difficult to replace. It is elastic, adheres firmly to almost any surface, and is stable and durable.

A layer of cement put on by means of the 'cement gun' (p. 400) is sometimes used for covering timbers, also the sides and roofs of drifts, etc.

SHAFTS.

Modern shafts are generally either rectangular or circular in cross-section; the former are used in sinking upon narrow veins or seams, where the ground is not very heavy nor the amount of water excessive, or where good timber is cheap; under other conditions round shafts are preferred, but local custom also exercises much influence. Inclined shafts are practically always rectangular; elliptical shafts have been sunk in some places (Forest of Dean) but are now rarely used.

Rectangular Shafts.

Rectangular shafts for large mines may be up to 25 ft. long by 15 ft. wide in the clear. Exceptionally large shafts are used in Pennsylvania, e.g., No. 5 Wilkesbarre anthracite mines, 52 ft. by 12 ft., Exeter Red Ash, 46 ft. 2 ins. by 13 ft. 10 ins.

Round shafts, say from 8 ft. to 24 ft. diameter in the clear; a colliery shaft to wind 1,000 tons per day is usually 16 to 18 ft. diameter.

Rectangular shafts are mostly wood-lined; they are either cribbed or timbered with sets holding lagging in place. In Fifeshire shafts up to 30 ft. by 12 ft. are cribbed with 'barring' of 9 ins. by 3 ins. up to 6 ins. by 12 ins. The timber for a shaft 23 ft. by 8 ft., including buntons, etc., would amount to about 125 cubic feet, and would cost, including nails, wedges, etc., about 13*l.* 10*s.* per fathom. The cost of sinking (the ground is usually easy) and putting in the timber is about 30*l.* per fathom. In the iron-ore mines of Cumberland and Lancashire shafts about 10 ft. by 5 ft. are cribbed with 10 ins. × 5 ins. plank, the ends being half checked; the total cost including sinking, timbering, timber, stores, etc., is about 30*l.* per fathom, the ground being carboniferous limestone that requires blasting. Sets are made of squared timber 4 ins. × 6 ins. for a small shaft up to 9 ins. × 15 ins. for a very large one; sets are 3 ft. to 6 ft. apart, held together by hook bolts of 1¼ in. round iron with wing nuts.

Horned sets or bearer sets are put in about every 6 sets or so, depending on the nature of the ground; lagging is often 9 ins. × 3 ins. plank.

Round Shafts.

Round shafts are lined with brick or concrete in ordinary strata; special methods are adopted where shaft traverses water-bearing strata and the lining is required to keep back water. For shafts over 18 ft. in diameter ordinary brick may be used; for smaller shafts wedge bricks should be employed. Let f be the width of the inner face of the brick, b of the outer face, l the length of the brick and R the radius of the shaft. Then $b = \frac{(R + b)f}{R}$; if, as is often the case, $l = 2f$, this becomes $b = f + \frac{2f^2}{R}$. Instead of bricks, firebrick lumps 6 ins. × 8 ins. × 12 ins. to 8 ins. × 10 ins. × 15 ins. may be used. They should also be made wedge shaped in accordance with the above formula. A shaft 10 ft. in diameter lined one brick thick requires about 350 bricks laid in mortar, per foot of depth. The thickness of the lining depends on the nature of the ground and the diameter of the shaft.

Cost of Sinking.

Sinking in ordinary coal measures costs 1*l.* to 2*l.* per fathom for each foot in diameter of the shaft; to this must be added surface labour, fuel, etc., 30*l.* to 50*l.* per week. If more water than 100 gallons per minute is met with, these costs will increase rapidly. Walling, including the cost of the bricks, amounts to between 15*s.* and 30*s.* per cubic yard of brickwork. Walling a shaft 13 ft. in the clear, 15 ft. over all, cost about 15*l.* per fathom = 30*s.* per cubic yard; walling a shaft 22 ft. in the clear, 25 ft. over all, cost 24*l.* 5*s.* per fathom = 15*s.* 6*d.* per cubic yard. A walling curb costs about 10*l.* Sinking a shaft 12 ft. in the clear cost 24*l.* per fathom (sinkers and waiters-on 13*l.* 10*s.*; general labour 7*l.* 10*s.*; explosives and stores, 3*l.*). Sinking a shaft 13 ft. in the clear costs 23*l.* to 30*l.* for labour in ordinary strata, and 70*l.* to 100*l.* in basalt, per fathom.

Sinking two shafts at Hylton colliery in 1897–99 cost as follows per fathom :—

	Shaft 20 ft. in the clear.						Shaft 15 ft. in the clear.					
	£	s.	d.	£	s.	d.	£	s.	d.	£	s.	d.
Labour—Sinkers (incl. explosives)	21	0	6				17	0	0			
Wallers	7	7	2				5	11	0			
Miscellaneous	8	7	4				2	16	0			
				36	15	0				25	7	0
Materials—Bricks	9	12	0				5	2	0			
Cement, lime, sand	4	16	0				2	11	0			
Walling cribs	2	6	0				2	0	0			
Miscellaneous	0	15	0				0	10	0			
				17	9	0				10	3	0
Total per fathom				54	4	0				35	10	0

Sinking three 20 ft. shafts at Horden, each 210 fathoms deep, against a flow of 9,000 gallons of water per minute, cost 350,000*l.* (*J. J. Prest.*)

The cost of sinking and tubbing a section of 22-ft. shaft at Blackhall with feeders of water from 300 to 2,885 gallons per minute was as follows :—

	£	s.	d.	
Underground labour	70	10	10	per linear yard.
Surface „	26	13	7	
Materials, coal and stores	87	2	1	
	£184	6	6	

The cost of sinking a 22-ft. shaft through limestone and tubbing it, against feeders of water averaging 3,000 gallons p.m., may be averaged at about 275*l.* per yard of depth.
(*J. J. Prest*, Tr. Inst. M. E. xlvii. p. 611.)

Shafts may be lined with cement, either by setting sheet iron cylinders and ramming concrete round these, lifting the cylinders when the cement has set, or by walling with thin blocks or slabs (about 2 ft. 6 ins. × 3 ft. 6 ins. × 5 ins.), and ramming cement behind this facing ring. The cost of an 18-in. monolithic lining in a 22-ft. finished shaft was made up as follows :—

	s.	d.	
Mixing concrete	1	0	per cub. yd.
Cement	4	2	„
Lining shaft with concrete	2	6	„
Coal and stores	0	9	„
Steel cylinders and other plant	1	4	„
Total	9	9	per cub. yd.

There were 28 cubic yards to the fathom, hence the cost per fathom was 13*l.* 13*s.* It took seven hours to complete the concreting of one fathom.
The cost of walling a similar pit with brickwork was 24*l.* 3*s.* 3*d.*
Lining a 22 ft. shaft at Blackhall with a monolithic cement concrete (6 : 1) lining cost per linear yard :—

	£	s.	d.
Labour in loading sand and gravel	1	18	6
Enginemen and attending mixer	0	4	1
Cement	3	13	6
Interest and depreciation on shuttering, etc.	0	19	0
Coal, stores, etc.	0	10	6
Labour in shaft	3	1	7
	£10	7	2

Lining with concrete blocks 3 ft. 6 ins. × 2 ft. 6 ins. × 5 ins. backed solid by ramming in concrete, all also 6 : 1, cost practically the same. The average cost of sinking and walling with 18 in. concrete was 26*l.* 1*s.* 8*d.* inclusive. Suitable bricks would have cost 45*s.* per 1,000, and at this price brickwork in cement would have cost 15*l.* per running yard. (*Loc. cit.*)

In a 14 ft. pit the total costs of labour for sinking and concreting came to 15*l.* 15*s.* per fathom. The cost of the concrete was about 21*s.*, and the labour of lining the shaft with it about 1*s.* 6*d.*, or altogether 22*s.* 6*d.* per cubic yard. There were 10½ cubic yards per fathom, so that the cost of the concrete lining amounted to 11*l.* 16*s.* per fathom ; with four men at the surface and four men in the pit, the concrete was put in at the rate of a fathom in six hours. At Karwin, Silesia, an 18 ft. shaft was lined with concrete put in from above downwards at the rate of a fathom in fourteen hours at a cost of 62*l.* per fathom complete ; the same shaft lined in the upper part with brickwork had previously cost 132*l.* per fathom. Ferro-concrete has been used in place of simple concrete. At Zweckel, near Gladbeck, a shaft was lined with ferro-concrete slabs backed with concrete, into which the iron framework of the slabs was continued, for 23*l.* per fathom. At Rheinelbe a shaft 20 ft. in diameter was lined with Monier ferro-concrete 11 ins. thick at a cost of 2*l.* 5*s.* 6*d.* per cubic metre of lining, or 30*l.* 12*s.* per fathom of shaft ; for a similar shaft at the Hansa colliery lined 9½ ins. thick the prices were 2*l.* 3*s* 6*d.* per cubic yard or 29*l.* 14*s.* per fathom.

Shaft Lining.

In heavily watered strata a lining has to be put in strong enough to resist the pressure of water. The thickness of such lining may be calculated as follows :—

Let R be the internal radius of the shaft, s the maximum admissible stress in the wall, p the pressure to be resisted, all to the same units, which are preferably inches and pounds, then :—

$$\text{Thickness of wall} = R\left(\sqrt{\frac{s}{s-2p}}-1\right)$$

(*Aldis*, N.E. Inst. M. E. xxxii. p. 201.)

The resistance to crushing of the various materials used in lining shafts is :—

Common brick	800 to 1,000 lbs. per square inch.
Fire brick	1,500 to 2,000 „ „ „
Sandstone	2,000 to 5,000 „ „ „
Concrete 1 : 3 : 6 to 1 : 1 : 3. Average	1,500 to 5,000 „ „ „
	3,000 „ „ „
Cast iron	90,000 to 120,000 „ „ „

Safe loads may be taken as $\frac{1}{10}$ of these; for best brick laid in 1 : 3 Portland cement up to 250 lbs.; for ferro-concrete up to 600 lbs. per sq. in.: for frozen sand fully saturated with water at −12° C. up to 340 lbs. per sq. in. (*Alby*, Bull. Soc. Ind. Min. 1895, p. 273.) L. Sauvestre has shown that frozen sand is highly plastic, and that its resistance to crushing increases by $28\frac{1}{2}$ lbs. per sq. in. for each drop of 1° C. (*Annales des Mines*, Ser. xi., vol. ix., 1920, Pt. I, p. 5.)

The pressure to be resisted is usually taken merely as the head of water, namely (0·434 h) lbs. per sq. in., where h is the head expressed in feet. For quicksands Poetsch adopts a formula equivalent to $p = 1{\cdot}042\ h \tan^2\left(45° - \frac{\alpha}{2}\right)$, where α is the angle of repose of the sand; Poetsch gives $\alpha = 35°$ for fine quicksand, and 20° for coarse sand. These figures are used in calculating the thickness of the ice-wall required in the freezing method of sinking.

Many approximations are used for ordinary shaft linings :—

J. J. Atkinson : Thickness in inches $T = \frac{5{\cdot}2\ R\ h}{s - 0{\cdot}434\ h}$, or for cast iron $T = \frac{5{\cdot}2\ R\ h}{9{,}000 - 0{\cdot}434\ h}$.

Chaudron: for cast iron, $T = 0{\cdot}8 + \frac{0{\cdot}434\ R\ h}{600}$ where $h < 165$ ft. and $T = \frac{130}{h} + \frac{0{\cdot}434\ R\ h}{600}$, where $h > 165$ ft. (here s is taken at only 7,200).

Riemer takes $s = 11{,}400$, and writes :—

$$T = 0{\cdot}8 + \frac{0{\cdot}434\ R\ h}{950} \text{ for } h < 165,$$

$$\text{and } T = \frac{130}{h} + \frac{0{\cdot}434\ R\ h}{950} \text{ for } h > 165.$$

Cast-iron tubbing is always stiffened by ribs and flanges, and these should be taken into account (see *Morrow*, Trans. Inst. M.E. xxxiv. p. 100).

Coffering.

Coffering may be used for moderate pressures and shallow depths; costs range from 20*l.* 10*s.* per fathom (16-foot shaft) to 38*l.* per fathom (18-foot shaft), being considerably less than cost of cast-iron tubbing.

Tubbing.

Tubbing is put in either by English or German method: in the former, segments are 2 ft. to 3 ft. deep, flanges are external, not machined, and the joints are made with wood sheeting and wedges; in the latter, segments are 5 ft. to 6 ft. deep, flanges are internal, are machined, and the joints are made with lead sheeting and bolts. In both forms the tubbing is carried upon wedging curbs, followed usually by a foundation ring. In some few recent cases the wedging curb has been dispensed with, and the tubbing set direct upon a good bed.

Cost of Tubbing.

Cost of English tubbing varies with the price of pig iron, etc., from 5*l.* to 7*l.* 10*s.* per ton; putting in the tubbing costs 2*l.* to 2*l.* 10*s.* per ton of tubbing put in, or 5*l.* to 7*l.* per fathom of shaft. The following are the detailed costs of tubbing a 15 ft. shaft with 12 segments to the ring, 2 ft. deep, $\frac{3}{4}$ in. thick, each ring weighing 2 tons 10 cwt. :—

	£	s.	d.
Three rings, 7 tons 10 cwt. at 7*l.* 10*s.*	56	5	0
Sheeting, 213 ft. at 8*s.* per 100	0	17	0
Wedges, 3,500 at 10*s.* per 1,000	1	15	0
Labour putting in and wedging	6	0	0
Total	64	17	0
Cost per fathom, about	64	0	0

To the above must be added a due proportion of the wedging curb. The castings for the curb of a 15-ft. shaft cost 25*l.* to 35*l.*, sheeting and wedges 5*l.*, putting in and wedging 10*l.* to 15*l.* Dressing the curb seat may cost from 10*l.* to 40*l.* according to circumstances. About ten men are usually employed in the shaft in wedging tubbing, and they can wedge two to three rings per shift.

The cost of 'German' tubbing usually comes out a little less than English tubbing per fathom. The seams and joints are all machined, this costing 3*l.* 10*s.* to 4*l.* per ring; three shifts of four men can put in and bolt up four rings (20 to 24 ft.) per 24 hours.

The cost of 'German' tubbing in an 18-ft. shaft, the tubbing being 1 in. to 1½ in. thick, 12 segments to the ring 5 ft. deep, was as follows in this country :—

	£	*s.*	*d.*	
Cast-iron tubbing, 13 tons 4 cwt. at 7*l.* 10*s.* .	99	0	0	per fathom
Lead for sheeting and washers, 6 cwt. . .	6	0	0	
Bolts and nuts	3	5	0	
Labour	7	10	0	
Cost per fathom	115	15	0	

In the Minister Achenbach Colliery a shaft 17 ft. in diameter was tubbed with 18 rings of tubbing 8 ft. 2 ins. high, 1 in. to 1½ in. thick, each ring composed of 10 segments. The weights of material employed were :—

Tubbing . . .	192 tons 10 cwt.	Lead washers . . .	1 ton 2 cwt.
Lead strips . .	2 „ 8 „	Bolts, nuts and washers .	6 „ 3 „

Where the ground is weak and apt to run, suspended tubbing can be used to much advantage. This method was used at Astley Green (*Trans. Inst. M. E.* xxxix. p. 543), also at Hamsterley (*Trans. Inst. M. E.* xxxviii. p. 320); the latter shaft was 10 ft. in diameter and 35 ft. deep. The cost was :—

Materials, 627*l.* 2*s.* 10*d.*, labour, 141*l.* 0*s.* 3*d.*, equal to 83*l.* 16*s.* per fathom. The method is to be recommended for safety, speed and economy.

The above, which may be called ordinary methods of sinking, can only be used where a moderate influx of water has to be contended with; the greatest quantity ever dealt with by these means has been in the sinkings at Blackhall Rocks, where the Horden Colliery Company has sunk two shafts through the Magnesian Limestone in which 14,300 gallons per minute were being pumped from a depth of about 90 yards. Very much less than this is generally sufficient to cause special methods to be resorted to, 5,000 gallons per minute being generally considered prohibitive. The increase of cost due to a heavy flow of water in deep sinkings is well shown by a table of estimated costs of sinking in wet ground in Westphalia :—

COSTS OF SINKING SHAFTS 16 TO 17 FT. IN DIAMETER IN WESTPHALIA PER FATHOM.

To Depth of	Where the Average Flow of Water is	
	880 Gallons per Minute.	1,760 Gallons per Minute.
Fathoms.	£	£
27	458	548
55	566	750
82	686	960
110	804	1,170
137	914	1,316
164	1,006	1,554
219	1,188	1,920
273	1,316	2,286
328	1,554	2,652

(*L. Hoffman*, 'Glückauf,' xxxvii. p. 775.)

COST OF SHAFT SINKING IN GOLD MINES.

A shaft 4 ft. by 8 ft. in clear can be sunk in California, where wages are 14*s.* per shift, by hand drilling, at a cost of 4*l.* 10*s.* per foot. This includes labour, timbering, explosives and supplies. The hoisting done by a horse whim and no water to pump. The rate of progress is about one foot per day.

In Nevada a shaft 4 ft. by 8 ft. in clear was sunk 100 ft. in 31½ days by means of hand drilling. The cost per foot was 6*l.* 10*s.* Labour 16*s.* per shift.

Large Shafts.—In Western Australia shafts vary from 4 ft. by 10 ft. to 5½ ft. by 13½ ft. On eleven of the mines in the district the cost per foot of shaft is from 11*l.* to 16*l.*, and from 2*s.* 9*d.* to 5*s.* 6*d.* per cub. foot of material excavated. The average monthly advance was 34 ft. to 60 ft. with an average of 50 ft. Machine drills used on all above shafts.

In Utah, wages 12*s.*, a shaft 17 ft. by 65 ft. was sunk in ground of medium hardness at a cost of 12*l.* per foot driven or 1*l.* 16*s.* per ton of material broken. Machine drills used. Pumping from 300 ft. Rate of sinking 0·9 ft. per day.

On the Rand a shaft (Brakpan, Ltd.) 43 ft. by 9 ft. in the clear was sunk at a rate of 204 ft. per month. The working cost was 14*l.* 10*s.* per foot and the total cost 22*l.* 14*s.* per foot. Ground soft. Hand drilling employed.

The following are some of the Rand shafts and the cost per ton of material handled :—

Shaft.	Size.	Speed per Month.	Cost per Ton.	Method Employed.
			s. *d.*	
Rand Collieries . .	34 ft. by 9 ft.	120 ft.	10 9	Machine
Kleinfontein . .	34 ft. by 9 ft.	107 ft.	11 8	,,
Brakpan . . .	43 ft. by 9 ft.	124 ft.	8 11	Hand.
City Reef . . .	46 ft. by 9 ft.	125 ft. 6 ins.	9 2	,,
Hercules . . .	47 ft. by 9 ft.	119 ft.	8 5	,,
Wolhunter . . .	46 ft. by 9 ft.	95 ft.	10 6	,,

Winzing and Raising.

At Park City, Utah, winzes 11 ft. by 7·5 ft. in quartzite are sunk at a cost of 6*l.* per foot sunk, or 1*l.* 10*s.* per ton of material broken. The advance is about 1 ft. per day. In same mine raises, 17·5 ft. by 5·5 ft., are put up at a cost of 1*l.* 14*s.* per foot or 4*s.* per ton of material broken. The advance is at the rate of 3·3 ft. per day.

In Western Australia winzes are from 4 to 5 ft. in width and 6 to 8 ft. long. They are 50 ft. to 200 ft. deep and the average total cost per foot in eleven of the mines is 4*l.* 15*s.*

The rises in the same district extend from 25 ft. to 120 ft. in height, and are 4 ft. to 5 ft. wide and 6 ft. to 8 ft. long. The total cost on the average is 3*l.* 18*s.* 7*d.* per foot.

Special Methods of Sinking.

In hard, very wet ground :—

Kind-Chaudron : maximum diameter of shaft, 15 ft. ; greatest depth yet attained by it 1,335 ft. ; Nos. 1 and 2 pits Marsden Colliery (the first sunk in this country by this method) cost respectively 362*l.* 8*s.* and 293*l.* per fathom ; in the North of France shafts 8 to 12 ft. diameter to depth of 100 fathoms cost 80*l.* to 240*l.* per fathom, and the rate of sinking varied from 2 to 6 fathoms per month. In Germany it is estimated that to sink 55 fathoms by this process at a depth of about 300 fathoms would cost about 1,400*l.* per fathom for a shaft 14 ft. 6 ins. in diameter.

Poetsch Freezing Process.—Applicable both to fissured firm ground and to running ground. The brine used is a 25 per cent. solution of magnesium chloride cooled down to —20°C., its freezing point being about —35°C. The following table shows the pressures at which ammonia gas liquefies at different temperatures :—

Temperatures.		Pressures in Lbs. per Sq. In.
—20°C.	— 4°F.	27
—10°C.	+14°F.	41
0°C.	+32°F.	62
+10°C.	+50°F.	89
+20°C.	+68°F.	125

Shafts have been sunk to 130 fathoms by this method, the cost for shafts 13 ft. to 16 ft. in diameter ranging from about 150*l.* to 250*l.* per fathom. The cost of sinking two pits, 12 ft. and 16 ft. 6 ins. respectively in diameter, at Anzin, in 1895, to a depth of 50 fathoms, was as follows :—

	£ *s.* *d.*	£ *s.* *d.*
Cost of freezing plant		73 2 0
Cost of freezing operations		48 6 0
Cost of sinking and tubbing : labour .	32 16 0	
Cost of tubbing	66 10 0	
		99 6 0
Total cost per fathom		220 14 0

The cost of sinking a pair of 20 ft. shafts by freezing under ordinary conditions should be :—

	£
To a depth of 50 fathoms	17,500
„ „ 100 „	28,000
„ „ 200 „	50,000

(*W. W. Wilson*, Tr. Inst. M.E. xli. 353.)

Freezing an 18-ft. shaft at Monkwearmouth cost 230*l.* per fathom to a depth of 60 fathoms.

Cement injection has been used with success in several cases, first by M. Reumaux at Lens, by M. Deffieux at the Mine de Marles (1908), and by M. François in this country ; in the former case the cost was about the same as that of freezing. The François system consists in boring 10 to 20 holes within the shaft, the bottom being first, if necessary, sealed with a plug of cement concrete ; cement slurry is forced through these holes at pressures up to 500 lbs. per sq. in., so as to fill all fissures when sinking is resumed ; another section is then cemented, and so on. Cementation in ordinary ground will cost about 50*l.* per yard for a 20-ft. shaft. See paper by *T. Blandford*, Trans. Inst. M.E., liii. (1916–17), p. 22.

This system has been used in sinking a shaft 16 ft. in diameter at the Holditch Iron Mine, Chesterton, Staffs. The shaft is sunk through the water-bearing Keele strata to a depth of 632 ft., the upper bed giving off 30,000 gallons of water per hour. The total time occupied was 69 weeks, and the costs were 40*l.* 4*s.* 4*d.* for labour and 36*l.* 3*s.* 9*d.* for material per yard of finished shaft (1916–17), or together 76*l.* 8*s.* 1*d.* ; it is estimated that sinking with underhung tubbing would have cost 91*l.* 4*s.* 8*d.* The shaft was lined with reinforced concrete. Cement for injection of boreholes 350 tons 13 cwt., for the concrete walling 998 tons 6 cwt., and for the injection of the walling 50 tons 10 cwt. (*A. Hassam and T. T. Mawson*, Trans. Inst. M.E. lviii. p. 16.)

A deep sinking has been carried out by this process at Beeringen in 1920 ; a depth of 1,640 ft. of clay, quicksand, and water-bearing chalk was first sunk through in this way, and subsequently the process was applied to the more difficult task of passing through a bed of running sand 46 ft. thick, at a depth of 2,000 ft. under a pressure of 926 lbs. to the sq. in.

(*Annales des Mines*, Ser. xi., vol. ix., 1920, Pt. I, p. 5.)

In porous sandstones M. François first injects separately solutions of silicate of soda and sulphate of alumina, and follows this up with cement. This process was used successfully at Hatfield Main.

In the sinking of No. 19 pit at Courrières in 1909, which was sunk by the freezing method difficulties were encountered in the upper part of the shaft owing to running water, and these were overcome by the injection of cement to a depth of 57 ft. ; over 1,000 tons of cement were used. (*Annales des Mines*, Ser. xi., vol. ix., 1920, Pt. I, p. 38.)

In running ground :—

Sheet piling can be used for relatively shallow sinking, near the surface. At Bowburn Colliery, co. Durham, 6 fathoms of wet sand were driven through by wooden piles in 1906 at a cost of 26*l.* per fathom for timber and 34*l.* 10*s.* for labour. Interlocking steel piling (p. 499) of joists of various forms has also been used.

The dropshaft method is employed in various forms, sometimes by weighting a cutting shoe and curb, on which an iron or brickwork cylinder is built up, or more usually by building a brick or concrete pressure block against which work hydraulic rams that force down tubbing of cast iron, or in exceptionally difficult cases of cast steel. The former method (forcing down a shoe by dead-weight) was found much superior to forcing a shoe down by jacks in sinking a shaft 14 ft. by 8 ft. through 70 ft. of loose strata at Des Moines, Iowa (*Trans. Amer. Inst. Min. Eng.*, vol. lv., p. 232). The following table shows probable costs for shafts of normal size in ordinary running ground (Hoffman) :—

For depth.	Cost per fathom sunk.	For depth.	Cost per fathom sunk.
	£		£
From 15 fathoms to 27 fathoms .	320	From 82 fathoms to 110 fathoms .	1,280
„ 27 „ to 55 „ .	732	„ 110 „ to 137 „ .	1,554
„ 55 „ to 82 „ .	1,006	„ 137 „ to 165 „ .	1,830

The *Honigmann* system has been used in a few cases down to depths of 70 fathoms on the Continent ; the shaft is bored out by a dredge-borer, the walls being kept up by internal hydrostatic pressure, and the shaft is lined with tubbing composed of rings of channel iron riveted together and subsequently lined with concrete.

LIST OF DEEP SHAFTS IN THE WORLD (1912).

Mine and Shaft.	Locality.	Depth, Ft.	Mineral Wrought.
St. John Del Rey	Brazil	5,826	Gold
Village Deep Main	Central Rand	5,350	,,
Tamarack, No. 3	L. Superior	5,253	Copper
Calumet and Hecla, Red Jacket	,,	4,920	,,
Victoria Reef Quartz	Bendigo	4,614	Gold
Tamarack, No. 4	L. Superior	4,450	Copper
New Chum Railway	Bendigo	4,318	Gold
Flenu, Ste. Henriette	Belgium	3,809	Coal
Viviers, Gilly	,,	3,750	,,
Przibram, Maria	Bohemia	3,694	Silver, Lead
Przibram, Adalbert	,,	3,665	,,
Lazarus New Chum	Bendigo	3,682	Gold
Kimberley Main Rock Shaft	Kimberley	3,601	Diamonds
Kimberley Prospect Shaft	,,	3,520	,,
Kennedy	California	3,555	Gold
Zwickau, Morgenstern	Saxony	3,550	Coal
Long Tunnel Walhalla (incline shaft)	Walhalla	3,450	Gold
Oelsnitz, Frisches Glück	Saxony	3,055	Coal
Dolcoath, William Shaft	Cornwall	3,000	Tin
Kaiser Wilhelm II.	Clausthal	2,960	Silver, Lead
Ashton Moss	Lancashire	2,880	Coal
Cooks Kitchen	Cornwall	2,580	Tin
De Beers Main Rock Shaft	Kimberley	2,466	Diamonds
Rosebridge	Lancashire	2,446	Coal

Coal Cutters.

In hand kirving, the average height of a kirving is 13½ ins. in front and 1⅜ in. at back, by a depth of 3 ft., giving a volume of 1·9 cub. ft. of coal kirved out per linear foot of coal face (equal to 16 per cent. on a 4 ft. seam). In a 6-hour shift a hewer in ordinary coal will kirve a bord 5 yds. wide to a depth of 1 yd. or about 7½ sq. ft. per hour of shift. A man will kirve about 9 sq. ft. per hour's actual hewing time after the jud has been nicked in a bord; in a wall he can kirve about three-quarters as much as in a bord, and in longwall work he can kirve one and a-half times as much as in average narrow work. Allowing for his other work a hewer in Northumberland and Durham averages about 38 sq. ft. of kirving per shift.

Machine cutting gives up to about 65 per cent. more output per man employed; on the average about 10 per cent. more round coal is made by machine than by hand, and a greater output of coal can be obtained from a given seam.

Coal-cutting machines for longwall work are chain-cutters, disc-cutters and bar-cutters, the former being applicable in seams where the coal is fairly hard, the cleat not too well marked, and the roof tolerably good. The disc machine makes a kirving 3½ ins. to 5½ ins. deep, the bar machine a kirving tapering from 7½ ins. in front to about 3½ ins. at the back. Machines may be air-driven, using compressed air at 35 to 65 lbs. per sq. in. at the machine, or electrically driven (direct, alternating or tri-phase) at voltages of 250 to 450. The power consumption varies between wide limits, between 12 and 30 h.p. Compressed air coal-cutters cost 250*l.* to 300*l.*, electrically-driven coal-cutters 350*l.* to 450*l.*; a complete plant for a pit using 10 machines would cost about 10,000*l.* with the former and 11,000*l.* with the latter form. The area undercut per hour varies from 45 to 140 sq. ft., 90 sq. ft. being about an average, per hour of running time. An average shift's work may be taken as about 500 sq. ft. Air consumption 1,000 to 3,000 cub. ft. free air per sq. yd. undercut.

According to Mr. Mavor (*Trans. Inst. Min. Eng.*, vol. l., 641) a good compressor will compress 6 cub. ft. free air per minute to 60 lbs. per sq. in. per b.h.p. Tests showed coal cutters to use 413 to 1,146 cub. ft. free air per minute, or 620 to 3,642 cub. ft. per sq. yd., at mean pressure of 32 lbs. per sq. in. at machine and 68 lbs. at compressor.

Costs.

Mr. Mavor gives average costs as follows:—

	Per shift. s. d.	Per ton. d.
Interest 5 per cent. on 450*l.*	1 9	0·21
Depreciation 12½ per cent.	4 4	0·52
Labour	33 0	4·00
Air Power	23 0	2·77
Picks, Oil, etc.	8 4	1·00
Repairs	12 10	1·50
Total	83 3	10·00

In narrow work percussive coal-cutters are mostly used, also chain machines. Percussive cutters supported on a fixed column are mostly in favour; they work with compressed air at 50 to 70 lbs. per sq. in., the air consumption being 100 to 300 cub. ft. of compressed air per sq. yd. undercut; different makes run at 300 to 600 blows per minute. A machine has undercut 30 sq. ft. per hour, but their usual performance is 80 to 100 sq. ft. per shift. Percussive cutters of the Ingersoll type on wheels are also used; these machines weigh 5 to 7½ cwts.; they use air at 70 to 90 lbs. pressure per sq. in., with an average consumption of 100 cub. ft. of free air per min., and strike about 150 blows per min.; they will undercut 15 to 50 sq. ft. per hour of running time, or 50 to 200 sq. ft. per shift.

Chain heading machines may be driven electrically or by compressed air, using 10 to 20 h.p.; these machines can undercut about 50 sq. ft. per hour, but it is rare that 200 sq. ft. can be kirved per shift.

The Stanley header cuts roads circular in cross-section through coal, using 15 to 40 i.h.p. A road 5½ ft. in diameter can be driven through coal at the rate of 10 ft. per 8-hour shift or six times as fast as handwork, the cost being sometimes rather less, sometimes rather more than hand labour, namely 2*s*. 6*d*. to 4*s*. per foot of advance, everything included, as against 2*s*. 8*d*. per hand.

In connection with coal-cutters in thin seams face conveyors are much used for bringing the coal to the gateways. There are three main types:—(1) troughs containing scraper-chains, either endless or reciprocating, (2) endless belts, (3) shallow trucks or trays hauled by ropes. The Blackett conveyor is an example of the first type; the chain is 6-inch pitch and rests in a trough 12 ins. wide at the bottom, 18 ins. at the top, 9 ins. deep, made in 6 ft. lengths; it will carry up to 30 tons per hour along faces 100 yds. in length. Most of the other forms have lower capacities, and are suited to smaller outputs or shorter faces. In one case where hand-cutting and filling cost 2*s*. 4*d*. per ton (face costs only), machine cutting and hand filling cost about 1*s*. 8*d*. per ton (1*s*. 4*d*. face costs, plus 4*d*. for power, repairs, stores, depreciation), and machine cutting and conveyor filling 1*s*. 3*d*. (9*d*. and 6*d*. respectively). In most cases a considerable saving is shown, especially in stonework, but the amount varies considerably according to circumstances.

Wages and general costs may be taken as 120 per cent. higher in 1920 than all those here given.

The 'Hardiax' Coal Cutter.

(The Hardy Patent Pick Co., Ltd., Sheffield.)

This cutter consists essentially of a long stroke air-drill, which is fixed in position and held up to its work by means of a solid drawn steel tube provided with powerful jack-screw and toothed head and foot. The machine is seated in a cone cup forming part of a hinged clamp attached loosely to the column. This clamp carries a worm, the teeth of which mesh with those

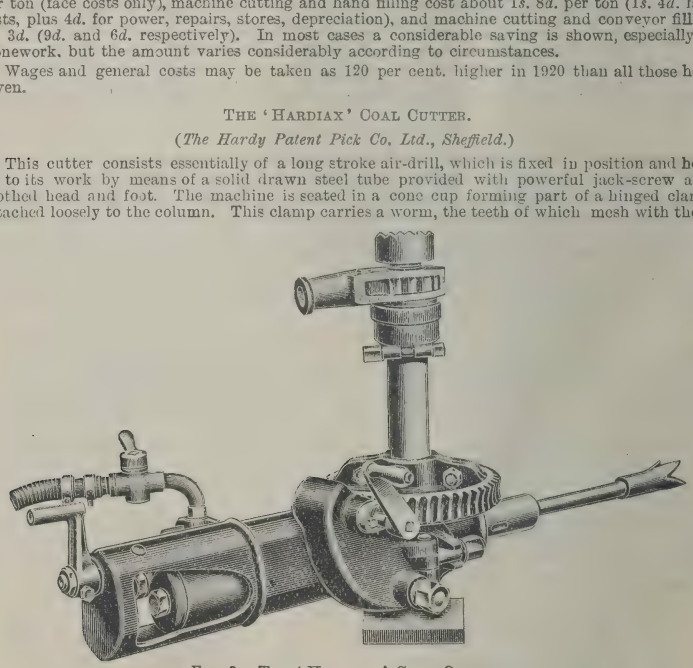


Fig. 3.—The 'Hardiax' Coal Cutter.

of a worm-wheel bolted rigidly on the column. By turning the worm-handle the coal cutter is caused to move around the column, whilst the forward movement into the coal is obtained by the feed screw controlled by a handle at the back of the machine. Figs. 3 and 4 give side views of the complete apparatus fixed for work at floor level. The machine may be fixed to cut at any height between floor and roof. The friction between the hinged clamp

carrying the machine and the column itself is regulated to a nicety, relieving the worm of the shock of the recoil without in any way impeding the free movement of the machine right and left across the coal face.

When air is admitted to the machine the rapid and powerful blows quickly cut away the coal or other material, whilst the machine is swung right and left by the worm gear and fed forward as is necessary. An arc-shaped and continuous channel or undercut is thus speedily made, increasing in depth and width as each successive length of cutter-bar is inserted in the piston of the machine.

As soon as the desired depth is attained at the centre of the working place the operator commences to play in gradually decreasing sweeps upon the right- and left-hand sides of the arc-shaped cut, using longer cutter-bars where necessary, until the undercut or channel is of uniform depth at every point, and square at the sides and corners. When pillars are taken out, or in working on a longwall face, the successive cuts break into one another, giving a continuous undercut of perfectly even depth the whole length of the coal face, whatever this may be. The cut may be any width up to, say, 20 ft. from one setting of the column. The depth of the cut

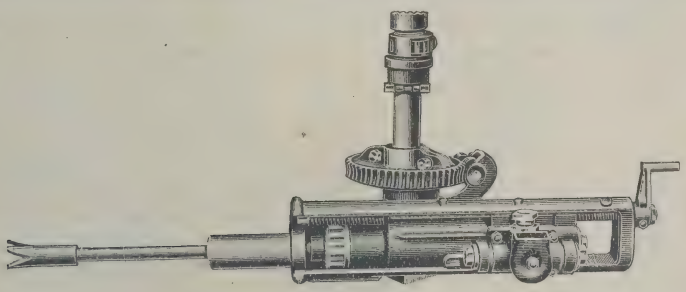


FIG. 4.—THE 'HARDIAX' COAL CUTTER.

is generally from 4 ft. to 6 ft. and the height $3\frac{1}{4}$ ins. to $4\frac{1}{2}$ ins. The diameter of the cutters is varied to suit different requirements.

The special constructional features of the machine are: (1) Crucible Cast Steel Cylinder, (2) Crucible Cast Steel Valve Box, (3) Crucible Cast Steel Cradle, (4) Crucible Cast Steel Gears, (5) Valve and Main Piston Hardened and Ground.

The machine is provided with a new patented piston valve action, giving great cutting power with low air consumption.

The air-pressure should, preferably, be from 40 to 60 lbs. per sq. in. or more, at which pressure the air consumption is approximately 120 cub. ft. free air per minute.

Pillars.

Shaft Pillars.—The 'draw' in ordinary horizontal strata is between 5° and 8° to the vertical; in inclined strata with workings in the direction of the dip the draw increases roughly in proportion to the dip until in strata dipping 18° to 24° the 'draw' is about at right angles to the strata (O'Donahue). In Staffordshire draws between 8° 45′ and 11° 10′ were observed in strata dipping 1 in 24 (W. Hay, *Trans. Inst. Min. Eng.*, xxxvi. p. 427).

In Westphalia the angle of draw in the coal measures is found to be 15° on both rise and dip sides, when the dip of the seam $< 5°$; for dips greater than 15°, it is 15° on the rise side and increases up to 55° on the dip side, reaching this value with seams dipping 35°. In the overlying clay beds, the draw is uniformly about 20°. Depth of subsidence $= K \cdot T \cdot \cos \alpha$, where T is the thickness of the seam, α is its inclination, and K a coefficient, which is 0·8 when the goaf is not stowed at all; with well-stowed goaf K = 0·4 when α is 0°–10°, 0·3 when α is 10°–35°, 0·25 when $\alpha = 35°$.

There are very many formulas for the size of shaft pillars; the following seems to be as satisfactory as any:—

Let D be the depth of the seam, T its thickness R the radius of the shaft pillar, all in feet, then,

$$R = (0{\cdot}19 + 0{\cdot}01\ T)\ D.$$

This formula applies to horizontal beams.

If the seam be inclined at a dip of 1 in x, then the distance from the centre of the shaft to the edge of the pillar on the rise side should be $R + \frac{2}{3}\left(\frac{x}{1+x^2}\right)D$, and on the dip side $R - \frac{1}{3}\left(\frac{x}{1+x^2}\right)D$; a circular pillar may therefore be set out with radius $R + \frac{1}{6}\left(\frac{x}{1+x^2}\right)D$; the distance of the centre of the circle being $\frac{1}{2}\left(\frac{x}{1+x^2}\right)D$ to the rise side of the centre of the shaft.

If a rectangular pillar is preferred, the square circumscribing the circle as above determined may be taken.

Bord and Pillar working.—Pillars may be square but are mostly rectangular, sides varying from 30 to 80 yds.; 30 yds. by 40 yds. to 40 yds. by 60 yds. are usual sizes. Some engineers give areas proportional to depth; for seams 100 to 200 yds. from surface, pillars about 30 by 40 yds.; 200 yds. to 300 yds., 35 by 50 yds.; 300 to 400 yds., 40 by 60 yds.

The Coal Conservation Committee of the Ministry of Reconstruction recommends the following proportions:—

Depth from Surface.	Area of Pillar.
< 100 yds.	300 sq. yds.
100–200 ,,	500 ,,
200–300 ,,	800 ,,
300–400 ,,	1100 ,,
400–500 ,,	1400 ,,
500–600 ,,	1700 ,,

In *panel working* a rib 30 to 60 yds. wide is left between the districts, the latter being usually 20 to 50 acres in area. In American mines the width of rib is often determined by the expression T (5 + 0·01 D), where T is the thickness of the seam and D its depth below surface.

Welsh Stall working.—Single stalls are usually about 12 yds. wide with 12-yd. ribs, double stalls up to 18 yds. wide with 24-yd. ribs between them. In America the following method is sometimes used:—

Width of pillar $W = \frac{T\,D}{100}$, and width of stall $= \frac{D}{W}$, where T is the thickness of seam and D its depth, both in feet.

Subsidences.

According to O'Donahue, the working out of a coal seam 4 ft. thick will cause a subsidence of the surface of 3 ft. if the seam be not more than 200 yds. deep, and from 12 to 18 ins. if it be 800 yds deep. It was shown that at Monkwearmouth, working two seams 6 ft. and 4 ft. thick respectively at depths of 1,725 ft. and 1,600 ft., caused surface subsidences of 6 ft. to 6ft. 9 ins.

In Staffordshire working a 5 ft. seam at a depth of 1,626 ft. caused surface subsidences varying from 1·34 to 1·74 ft.; these reached their maximum in about 29 months.

Working Costs in Getting Coal.

Working brokens is usually about 25 per cent. cheaper than working in the whole coal. Typical examples of basis yard prices in whole coal to show relative costs:

	2 yds. wide.	3 yds. wide.
Winning headways	1*s.* 6*d.*	1*s.* 2*d.* per yard.
Holing walls	1*s.* 5*d.*	1*s.* 2*d.* ,,
Bords	1*s.* 1*d.*	0*s.* 11*d.* ,,

In brokens.—Jenkins, 3 yds. wide, 8*d.*; half-pillar walls, 3 yds. wide, 10*d.*; skirtings, 3 yds. wide, 6*d.* per yard.

Allowances for wet places ½*d.* to 1*d.* per ton; for band up to 2½ ins. thick, ½*d.* per ton, with ½*d.* additional for every further inch in thickness of band. For taking down ramble 3 ins. to 6 ins. thick, 1*d.* additional per ton, with 1*d.* additional for every further 3 ins.

Longwall.—Hewing price is usually about halfway between whole and broken tonnage price. An average hewing price may be taken to be 1*s.* 6*d.* per ton for a 3-ft. seam, the price rising or falling 1*d.* per ton for every 1 in. decrease or increase in thickness of seam.

All these prices are subject to local percentage increases.

PERCENTAGES OF ITEMS IN PRICE OF COAL AT PIT'S MOUTH.

Year	1913.	1901.	1866–96.	1700–50.
	Per cent.	Per cent.	Per cent.	Per cent.
Royalty	5·35	7·96	8·5	12·5
Wages	62·55	67·37	66·0	37·5
Materials	16·45	16·54	17·0	25·0
Administration	7·00			
Interest and Profit	8·65	8·13	8·5	25·0

Recent costs are given as follows:—

	Average for 1913.*	Average for Year ending March 31, 1920.*	Average for First Six Months of 1920.
	s. *d.*	*s.* *d.*	*s.* *d.*
Labour	6 4	19 7½	24 0·44
Timber and stores	1 0	3 10	
Other costs	0 11	1 6	6 10·66
Administration, etc.	—	0 1	
Control and contingencies	—	0 2	
Royalties	0 5½	0 6½	0 7·55
Capital adjustments	—	0 4	0 4·44
Owners' profits	1 5	1 2	3 9·12†
Pithead value	10 1½	27 3½	35 8·20

Hydraulic Stowage.—The best built packwall will compress down to 70 per cent. of its original height, whilst hydraulically stowed material will not compress to less than 90 per cent. Material used in Germany varies from sand to washery residues about 1¼ in. cube. Cast-iron pipes 6 to 8 ins. diameter are used, often lined with hard cast-iron or porcelain. A cast-iron tube 7½ ins. in diameter ¾ in. thick will transport about 1,300,000 cub. yds. of stowage material before it is worn out. The average cost of tubes is 3*d.* per cub. yd. stowed. Average rate of stowage 25 to 30 cub. yds. per hour; some mines stow over 4,000 cub. yds. per day. The total cost of hydraulic stowage varies from 4*d.* to 1*s.* 6*d.* per ton of coals got—average appears to be under 1*s.*

Colliery Consumption.—According to the Coal Conservation Committee of the Ministry of Reconstruction, 1918, colliery consumption in Britain varies from 5 to 9·43 per cent., averaging 6·8 per cent., of which 6·2 per cent. is produced by the direct combustion of coal under boilers, and the balance from outside sources.

Mining in Veins and Masses.

Methods employed are:

Underhand stoping.
Overhand stoping.
Combined underhand and overhand stoping.
Rill stoping.
Shrinkage stoping or magazine mining.

Irregular deposits, wide veins, thick and steeply inclined seams may be worked by the following methods:—

Lost pillars.
Vertical slices.
Horizontal slices taken transversely.
Horizontal slices taken longitudinally.
Top slicing.
Caving.
Magazine mining.
Square set timbering.

Of these, overhand stoping is the most general, underhand stoping being only used in quite special cases, as when there is only a small quantity of payground to be taken below a given level. Overhand stoping can be used for veins of medium width, say up to 10 ft. on the average. Rill stoping is mainly employed in Western Australia. Magazine mining suits veins of any width, provided that they are not too flat, that the walls are fairly good, and that the whole of the veinstuff has to be extracted. Slicing and caving are used in wide veins and irregular masses when the value of the mineral is not great and where cheap methods of working are

* *Third Report of Fuel Economy Committee, Brit. Assoc.*, 1920.
† Of this amount 2*s.* 1·3*d.* goes to the colliery owners.

essential; it is largely used in the hæmatite mines of Cumberland and Lancashire. Square sets can only be used where the mineral is valuable and where large timber is abundant and cheap.

The costs of stoping vary within very wide limits, and may be illustrated by typical examples.

In Western Australia, with the contract system in force, a miner breaks 7·31 tons of ore per shift. Formerly a miner on day's pay broke only 4 tons per shift.

In eleven of the West Australian mines treating from 9,000 to 22,000 tons of ore per month with veins varying from 4–20 ft. to 6–60 ft. in width the stoping costs per ton of ore ranges from 6*s.* 4*d.* to 9*s.*, averaging 7*s.* This includes breaking ore, filling stopes, trucking, hoisting, etc. On the Rand it costs from 3*s.* 6*d.* to 5*s.* 6*d.* to stope a ton of milling ore in stopes 40 to 60 inches in height. To these figures must be added cost of compressed air, rock drill maintenance, steel sharpening and administration underground. The first three factors amount roughly to about 1*s.* per ton, while the last would not exceed 1*d.* In some Rand mines one man can break 12 tons per shift per machine, and uses one case (50 lbs.) of blasting gelatine to break 3·5 fathoms of ground. At other mines only 7 tons are broken per man and one case of explosives is used to break 2·5 fathoms.

In Nevada at the Silver Peak Mines each miner breaks 8·6 tons of rock per shift. The total stoping cost is 5*s.* per ton. Miners here receive 16*s.* per shift.

At the Braden Copper Mines native miners break 12 tons of ore per man per day with rock drills in moderately hard rock. The total cost per ton of ore broken, including superintendence and general charges, is given as 1*s.* 9*d.*

In Utah in quartzite with a stoping width of 10 ft., square set system, small air drill, the stoping cost per ton varies from 6*s.* to 8*s.*

At Douglas Island, Alaska, the ore is a mineralised igneous rock of fair hardness, the workable portions of which vary upwards from 30 ft. in width. Wages 12*s.* Machine used 3¾ inches piston diameter. The following figures are taken over a year's working :—

COST OF BREAKING GROUND AT DOUGLAS ISLAND, ALASKA.

General Details.	Ready Bullion.	700 Ft.	Mexican.	Treadwell.
Average number of drills used	10·12	11·586	14·917	39·13
Tons ore broken	151,460	238,696	232,875	830,551
Tons waste broken	2,756	—	10,509	1,670
Tons broken, total	154,216	238,696	243,384	832,221
Total footage drilled	241,679	269,990	362,519	803,542
Tons ground broken per machine per shift:				
Stoping	47·36	42·998	41·26	—
Developing	8·65	11·323	6·58	—
Cutting out	14·30	7·334	10·34	—
Average	23·06	30·41	24·19	28·47
Footage drilled per machine per shift:				
Stoping	29·39	33·587	33·50	—
Developing	39·14	37·78	39·71	—
Cutting out	40·11	33·954	34·79	—
Average	36·12	34·37	35·7	29·41
Tons broken per foot of hole drilled:				
Stoping	1·61	1·28	1·23	—
Developing	0·22	0·19	0·165	—
Cutting out	0·31	0·33	0·30	—
Average	0·64	0·88	0·669	0·96
Costs of breaking ground per shift per machine:	£ *s.* *d.*	£ *s.* *d.*	£ *s.* *d.*	£ *s.* *d.*
Labour	1 14 0	1 8 0	1 10 0	1 9 0
Explosives	9 8	11 4	12 2	11 4
Supplies and power	1 0 0	18 2	1 0 0	1 0 0
Total	3 3 8	2 17 6	3 2 2	3 0 4
Cost per foot of hole drilled	1 10	1 8	1 9	2 0
Cost per ton of ground broken	2 10	11	2 8	2 1
Total cost of mining, including development	4 0	4 9	4 10	4 6
Percentage of total mining cost	2 9	8	2 2	1 11

In the Granite Gold Mine, B.C., on a vein of hard quartz from 8 inches to 5 feet wide dipping 35° to 50°, the stoping costs per ton are as follows :—

	s.	d.
Stoping by hand	14	0
„ by ¾-in. piston drills	11	6
„ by 2¼-in. „ „	8	4
„ by 2-in. hammer drills	6	4

Mining costs at the Elko Prince Mine, Nevada, in 1917, stoping a 2 ft. 6 in. vertical vein of hard quartz by magazine mining, using hammer drills with 1⅛ in. cruciform steel, were as follows :—

	Per Ton of Ore
	$
Timbering, including ore shoots	0·5588
Blacksmith	0·0995
Stoping	0·8083
Tramming	0·2822
Hoisting	0·1956
Compressed air	0·1288
Explosives, detonators and fuse	0·4452
Repairs	0·0486
Drill steel	0·0570
Supervision, taxes, assaying, etc.	0·4987
Cost per ton	$3·1227 = 12s.

(*Bull. Amer. Inst. Min. Eng.*, Aug. 1918.)

For detailed costs of mining operations in various West Australian mines, see pages 2182-2185.

Drilling.

Ordinarily two men can drill double-handed 25 to 33 ft. of 1-inch holes per day in limestone, 4 to 8 ft. in granite. With double hammers 10 ft. of 2-inch holes can be drilled in medium rock.

On the Rand generally one white man and five Kaffirs run two air-drills ; in some cases one white man and seven Kaffirs run three drills. Eight 6-ft. holes is considered a shift's work for two machines ; these holes break on an average two fathoms of ground. The cost is as follows :—

	£	s.	d.	
One white man	1	5	0	
Five Kaffirs		15	0	
Powder for two machines		16	0	
Maintenance		4	0	
Total	3	0	0	per fathom.

In Chili, with native labour, contracts are let on the basis of the number of holes drilled. The rock is moderately hard.

By hand.—1,008 man-days, by single hand work, drilled 13,855 ft. at a cost of 4·1*d.* per foot. Average amount drilled per man per day 13·8 ft.

By machine.—The actual cost of drilling for one month was as follows :—164 man-days (9 hours) with two ¾-in. air drills, drilled 5,082 ft. at a cost of 1·01*d.* per foot. Average amount drilled per man-day, 31 ft.

HAULAGE.

Rails.

Mine rails weigh 10 to 40 lbs. per yard. The following table shows the least weight that should be used for the given loads (weight of 1 loaded tub) and low speeds :—

Loads, in cwts.	7	10	15	20	25	30
Weight of rails per yard, lbs.	10	12	15	18	20	22
Gauge of track, in inches	15–18	15–18	16–20	18–22	20–26	20–30

For speeds above 5 miles per hour heavier rails are to be preferred.
Weight of 1 mile of single track in tons = 1·571 × weight of rail in lbs. per yard.
Sleepers 2 ft. 6 ins. to 3 ft. 6 ins., usually 3 ft. apart.

Sleepers 8 ins. to 12 ins. longer than gauge of track, 3–4 ins. deep, 6 ins. wide. A pair of fishplates and 4 bolts for 18 lb. rails, weigh 4–8 lbs., usually 5 lbs. ; 100 dogspikes for same weigh about 14 lbs. Weight of fishplates, bolts and spikes is approximately 1 cwt. per ton of rails.

[*Continued on page* 2186.

COST OF MINING OPERATIONS IN VARIOUS WEST AUSTRALIAN MINES.

General Details.	Shaft Sinking.			
	Oroya Brownhill.	Sons of Gwalia.	Lake View.	Great Fingall.
Size of machine used	3½	3½	3⅝	—
Time taken rigging and pulling down machine	1 hour (3 men)	5 hours	4 hours	—
Time boring	8 hours	24 hours	16 hours (2 machines and 4 men)	—
Number of holes bored in face	9	31	26	—
Average depth of holes . . . ins.	60	72	78	84
Feet bored in 8 hours	45	62	42·9 (1 machine)	—
Time taken to fire out end	7·5 hours	6·5 hours	5 hours	—
Depth of cut . . . . ft. ins.	3	5	6	5·2
Cost of compressed air per hour to run drill	1*s.* 11·5*d.*	2*s.* 1*d.*	2*s.* 6*d.*	—
Total cost of air to bore out end	15*s.* 5*d.*	2*l.* 10*s.*	4*l.*	—
Amount of explosives used in firing out cut (3 holes) . . . . . lbs.	—	—	—	—
Amount of nitro used in firing out cut (3 holes) . . . . . lbs.	—	—	—	—
Cost of explosives used in firing out cut	—	—	—	—
Amount of explosives used in firing out remaining holes . . . . lbs.	—	—	—	—
Amount of nitro used in firing out remaining holes . . . . lbs.	—	—	—	—
Cost of explosives used in firing out remaining holes	—	—	—	—
Length of fuse used in firing out end . ft.	90	216	168	—
Number of detonators used in firing out end	15	36	30	—
Cost of detonators used in firing out end	9*d.*	1*s.* 3½*d.*	1*s.* 1·2*d.*	—
Total cost of explosives, fuse, and detonators used to fire out end	1*l.* 12*s.* 10*d.*	3*l.* 19*s.* 1*d.*	4*l.* 3*s.* 4*d.*	—
Cubic contents of ground broken	180 cu. ft.	840 cu. ft. 5′ × 21′ × 8′	630 cu. ft. 15′ × 7′ × 6′	706 cu. ft. 17′ × 8′ × 5·2′
Amount of explosives used per foot lbs.	13·3 Gel.	17½ Gel.	12½ B.G.	24·2 Gel.
Amount of nitro used per foot . . lbs.	8·64	11·37	12·5	15·73
Amount of explosives used per ton . lbs.	2·44 Gel.	1½ Gel.	1·42 B.G.	2·12 Gel.
Amount of nitro used per ton . . lbs.	1·58	0·81	1·42	1·37
Amount of explosives used in firing out end . . . . . lbs.	40 Gel.	87½ Gel.	75 B.G.	125 Gel.
Amount of nitro used in firing out end lbs.	26	56·87	75	81·75
Cost of fuse used in firing out end	2*s.* 1*d.*	4*s.* 10½*d.*	3*s.* 6*d.*	—
Cost of explosives used to fire out end	1*l.* 10*s.*	3*l.* 12*s.* 11*d.*	3*l.* 18*s.* 9*d.*	—
Tons broken	16·36	70	52·5	58·8
Amount of explosives per hole . . lbs.	4·45 Gel.	2·82 Gel.	2·88 B.G.	—
Amount of nitro per hole . . . lbs.	2·89	1·83	2·88	—
Tons broken per hole bored	1·81	2·26	2·02	—
Method of boring end	Stope cut	Centre cut	Centre cut	Centre cut

COST OF MINING OPERATIONS IN VARIOUS WEST AUSTRALIAN MINES—*continued.*


Driving.				Cross Cutting.			
Oroya Brownhill.	Sons of Gwalia.	Lake View.	Great Fingall.	Oroya Brownhill.	Sons of Gwalia.	Lake View.	Great Fingall.
2¼	3½	3⅝	—	2½	3½	3⅝	—
1 hour (1 man)	2 hours	2 hours	—	1 hour (1 man)	2 hours	2 hours	—
20 hours	20 hours	24 hours	—	17 hours	21 hours	24 hours	—
15	15	15	—	15	15	14	
66	72	72	—	72	72	72	
32·5	36	30	—	42	34·3	28	
1·5 hour	6 hours	4 hours	—	1·5 hour	7 hours	4 hours	—
5	5′ 6″	5	4·15	5′ 6″	5′ 6″	5′ 6″	4·72
1*s.* 6*d.*	2*s.* 1*d.*	2*s.* 6*d.*	—	1*s.* 6*d.*	2*s.* 1*d.*	2*s.* 6*d.*	—
1*l.* 10*s.*	2*l.* 1*s.* 8*d.*	3*l.*	—	1*l.* 5*s.* 6*d.*	2*l.* 3*s.* 9*d.*	3*l.*	—
20 Gel.	22½ B.G.	13¾ B.G.	—	20 Gel.	17½ B.G.	—	—
13	22·5	13·75	—	13	17·5	—	—
15*s.*	1*l.* 5*s.* 1¼*d.*	14*s.* 5*d.*	—	15*s.*	19*s.* 6¼*d.*	—	—
30 Gel.	45 Gel.	50 Gel.	—	30 Gel.	40 Gel.	—	—
19·5	29·2	32·5	—	19·5	26	—	—
1*l.* 2*s.* 6*d.*	1*l.* 17*s.* 6*d.*	1*l.* 17*s.* 6*d.*	—	1*l.* 2*s.* 6*d.*	1*l.* 13*s.* 4*d.*	—	—
96	96	120	—	96	100	108	—
16	18	20	—	16	20	20	—
9*d.*	7¼*d.*	8¾*d.*	—	9*d.*	9*d.*	8¾*d.*	
2*l.* 0*s.* 4*d.*	3*l.* 5*s.* 5*d.*	2*l.* 15*s.* 1¾*d.*	—	2*l.* 0*s.* 4*d.*	2*l.* 15*s.* 11*d.*	2*l.* 5*s.* 1¾*d.*	—
210 cu. ft.	221·375	210 cu. ft.	174 cu. ft.	231 cu. ft.	211·75	231 cu. ft.	198 cu. ft.
7′×6′×5′	7′×5′9″×5′6″	7′×6′×5′	7′×6′×4·15′	7′×6′×5′6″	5′6″×7′×5′6″	7′×6′×5′6″	7′×6′×4·72
10 Gel.	4·09 B.G. 8·18 Gel.	2¾ B.G. 10 Gel.	10·84 G.	9·1 Gel.	3 B.G. 7·27 Gel.	10·23 Gel.	13·6 Gel.
6·5	9·40	9·25	7·04	5·91	7·73	6·64	8·84
2·62 G.	1·11 B.G. 2·23 Gel.	0·82 B.G. 3 Gel.	3·8 Gel.	2·38 Gel.	0·99 B.G. 2·26 Gel.	2·87 Gel.	—
1·70	2·55	2·77	2·47	1·54	2·45	1·86	—
50 Gel.	22·5 B.G. 45 Gel.	13⅔ B.G. 50 Gel.	55 Gel.	50 Gel.	17½ B.G. 40 Gel.	56·25 Gel.	64 Gel.
32·5	51·7	46·25	35·75	32·5	43·5	36·56	41·6
2*s.* 1*d.*	2*s.* 2*d.*	2*s.* 6*d.*	—	2*s.* 1*d.*	2*s.* 3½*d.*	2*s.* 3*d.*	—
1*l.* 17*s.* 6*d.*	3*l.* 2*s.* 7½*d.*	2*l.* 11*s.* 11*d.*	—	1*l.* 17*s.* 6*d.*	2*l.* 12*s.* 10½*d.*	2*l.* 2*s.* 2*d.*	—
19·09	20·11	17·5	—	21	17·64	19·25	—
3·34 Gel.	1·43 B.G. 3 Gel.	0·91 B.G. 3·34 Gel.	—	3·34 Gel.	1·16 B.G. 2·67 Gel.	4·01 Gel.	—
2·17	3·38	3·08	—	2·17	2·89	2·60	—
1·26	1·34	1·16	—	1·4	1·16	1·37	—
Centre cut	Centre cut	Centre cut	—	Centre cut	Centre cut	Centre cut	—

COST OF MINING OPERATIONS IN VARIOUS WEST AUSTRALIAN MINES—*continued.*

General Details.	Rising.			
	Oroya Brownhill.	Sons of Gwalia.	Lake View.	Great Fingall.
Size of machine used . . . . ins.	2½	3¼	3⅝	—
Time taken rigging and pulling down machine	2 hours (2 men)	2 hours	4 hours	—
Time boring	20·8 hours	17 hours	26 hours	—
Number of holes bored in face . . .	13	11	17	10
Average depth of holes . . . ins.	60	59	72	54
Feet bored in 8 hours	25	25′ 4″	31·15	—
Time taken to fire out end . . .	3 hours	4 hours	6 hours	—
Depth of cut . . . . ft. ins.	4′ 6″	4′ 6″	5	4·28
Cost of compressed air per hour to run drill	1*s.* 6*d.*	2*s.* 1*d.*	2*s.* 6*d.*	—
Total cost of air to bore out end . .	1*l.* 11*s.* 2*d.*	1*l.* 15*s.* 5*d.*	3*l.* 5*s.*	—
Amount of explosives used in firing out cut (3 holes) . . . . . lbs.	20 Gel.	18¾ B.G.	20 B.G.	—
Amount of nitro used in firing out cut (3 holes) . . . . . lbs.	13	18¾	20	—
Cost of explosives used in firing out cut .	15*s.*	1*l.* 1*s.*	1*l.*	—
Amount of explosives used in firing out remaining holes . . . . lbs.	30 Gel.	23¾ Gel.	50 Gel.	—
Amount of nitro used in firing out remaining holes . . . . . lbs.	19·5	15·4	32·5	—
Cost of explosives used in firing out remaining holes	1*l.* 2*s.* 6*d.*	19*s.* 9½*d.*	1*l.* 17*s.* 6*d.*	—
Length of fuse used in firing out end ft.	96	90	120	—
Number of detonators used in firing out end	16	18	20	—
Cost of detonators used in firing out end .	9*d.*	7½*d.*	8⅜*d.*	—
Total cost of explosives, fuse, and detonators used to fire out end	2*l.* 0*s.* 4*d.*	2*l.* 3*s.* 5*d.*	3*l.* 0*s.* 8½*d.*	—
Cubic contents of ground broken . .	180 cu. ft.	189 cu. ft. 4′6″ × 6′ × 7′	175 cu. ft. 7′ × 5′ × 5′	116 cu. ft. 4′6′ × 6′ × 4·28′
Amount of explosives used per foot lbs.	11·1 Gel.	4·15 B.G. 5·3 Gel.	4 B.G. 10 Gel.	9·3 Gel.
Amount of nitro used per foot . . lbs.	7·21	7·57	10·5	6·04
Amount of explosives used per ton . lbs.	3·05 Gel.	1·12 B.G. 1·5 Gel.	1·37 B.G. 3·42 Gel.	—
Amount of nitro used per ton . . lbs.	1·98	2·09	3·59	—
Amount of explosives used in firing out end . . . . . lbs.	50 Gel.	18·75 B.G. 23·75 Gel.	20 B.G. 50 Gel.	40 Gel.
Amount of nitro used in firing out end lbs.	32·5	34·15	52·5	26
Cost of fuse used in firing out end . .	2*s.* 1*d.*	2*s.*	2*s.* 6*d.*	—
Cost of explosives used to fire out end .	1*l.* 17*s.* 6*d.*	2*l.* 0*s.* 9½*d.*	2*l.* 17*s.* 6*d.*	—
Tons broken	16·36	15·75	14·58	—
Amount of explosives per hole . . lbs.	3·84 Gel.	1·7 B.G. 2·16 Gel.	1·37 B.G. 3·43 Gel.	—
Amount of nitro per hole . . . lbs.	2·49	3·1	3·59	—
Tons broken per hole bored . . .	1·25	1·42	0·84	—
Method of boring end	Centre cut	Centre cut	Centre cut	—

COST OF MINING OPERATIONS IN VARIOUS WEST AUSTRALIAN MINES—*continued.*

Winzing.				Stoping.			
Oroya Brownhill.	Sons of Gwalia.	Lake View.	Great Fingall.	Oroya Brownhill.	Sons of Gwalia.	Lake View.	Great Fingall.
					(Average for 3 faces)	(Stope 14′ × 12′)	
2½	3¼	3⅝	—	2½	2½	2½, 3½, 3⅝	—
1 hour (2 men)	3 hours	6 hours	—	2 hours	6 hours (3 times)	4 hours	—
12 hours	29 hours	26 hours	—	8 hours	56 hours	28 hours	—
9	14	17	16	5	24	16	8
60	62	72	60	72	62	96	60·72
30	24	31·15	—	30	17′ 8″	36′ 6″	—
7½ Winch 15 Windlass	4 hours	48 hours	—	4 hours	6 hours (3 faces)	24 hours	—
3	4′ 9″	5	5·10	6	4′ 6″	9	—
1*s.* 6*d.*	2*s.* 1*d.*	2*s.* 6*d.*	—	1*s.* 1·37*d.*	1*s.* 3*d.*	1*s.* 10*d.*	—
18*s.*	3*l.* 2*s.* 6*d.*	3*l.* 5*s.*	—	1*l.* 13*s.* 3*d.*	3*l.* 10*s.* (3 faces)	2*l.* 11*s.* 5¼*d.*	—
15 Gel.	17½ B.G.	20 B.G.	—	—	—	—	—
9·75	11·37	20	—	—	—	—	—
11*s.* 3*d.*	14*s.* 7*d.*	1*l.*	—	—	—	—	—
15 Gel.	30 Gel.	50 Gel.	—	—	—	—	—
9·75	19·5	32·5	—	—	—	—	—
11*s.* 3*d.*	1*l.* 5*s.*	1*l.* 17*s.* 6*d.*	—	—	—	—	—
72	85	120	—	72	140	120	—
12	17	20	—	12	28	20	—
7*d.*	7¼*d.*	8¾*d.*	—	—	1*s.*	8¾*d.*	—
1*l.* 4*s.* 8*d.*	2*l.* 2*s.* 1½*d.*	3*l.* 0*s.* 8¾*d.*	—	2*l.* 5*s.* 6*d.*	3*l.* 6*s.* 8*d.* (3 faces)	2*l.* 0*s.* 8¾*d.*	—
120 cu. ft.	182·87 cu. ft. 4′9″ × 5′6″ × 7′	175 cu. ft. 5′ × 7′ × 5′	275 cu. ft. 9′ × 6′ × 5·10′	720 cu. ft.	1262·25 cu. ft. 13′6″ × 11′ × 8′6″	1,512 cu. ft. 14′ × 12′ × 9′	—
10 Gel.	10 Gel.	4 B.G. 10 Gel.	11·9 Gel.	—	—	—	—
6·5	6·5	10·5	7·73	—	—	—	—
2·75 Gel.	3·12 Gel.	1·37 B.G. 3·42 Gel	—	0·9 Gel.	0·714 Gel.	0·39 Gel.	—
1·77	2·02	3·59	—	0·58	0·464	0·25	—
30 Gel.	47·5 Gel.	20 B.G. 50 Gel.	61 Gel.	58 Gel.	75 Gel.	50 Gel.	—
19·5	30·87	52·5	39·65	37·70	48·7	32·5	—
1*s.* 7*d.*	1*s.* 11*d.*	2*s.* 6*d.*	—	1*s.* 7*d.*	3*s.* 2*d.*	2*s.* 6*d.*	—
1*l.* 2*s.* 6*d.*	1*l.* 19*s.* 7*d.*	2*l.* 17*s.* 6*d.*	—	2*l.* 3*s.* 4*d.*	3*l.* 2*s.* 6*d.* (3 faces)	1*l.* 17*s.* 6*d.*	—
10·9	15·24	14·58	—	65	—	126	—
3·34 Gel.	3·4 Gel.	1·37 B.G. 3·43 Gel.	—	4·8 Gel.	3·125 Gel.	3·12 Gel.	—
2·17	2·21	3·59	—	3·12	2·03	2·02	—
1·21	1·08	0·84	—	5·4	4·37	7·87	—
Stope cut	Centre cut	Centre cut	—	—	—	—	—

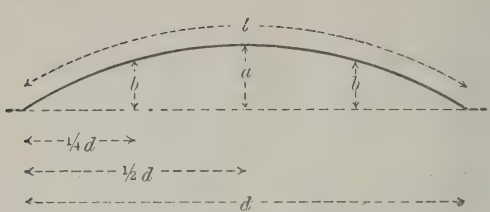

To bend rails to any curve, let l be length of rail, r radius of curve, both in feet, a the middle ordinate in the centre of the curve, b the quarter ordinate, midway between a and the end of the rail (both a and b in inches) :—

Then

$$a = 1{\cdot}56\,\frac{l^2}{r}, \qquad b = 1{\cdot}17\,\frac{l^2}{r}.$$

Width of track ¼ in. to ⅜ in. greater than gauge of wheels.

Additional width round curves :—

Gauge of track	15	18	24	30 ins.
Additional width	¼	½	⅝	¾ in.

In going round a curve with locomotive traction or on self-acting inclines, the outer rail must be elevated ; with rope haulage the inner rail may have to be elevated.

Let e = super-elevation in feet, s = gauge of track in feet, v = velocity in feet per second, r = radius of curve in feet.

For outer rail $e = \dfrac{v^2\,s}{32{\cdot}2\,r}$.

For inner rail, the elevation depends upon whether the centrifugal force due to the velocity of running is greater or less than the inward pull on the drawbar ; it will be greater at high speeds, say, exceeding 20 miles per hour, and less at low speeds ; under ordinary conditions at 15 miles per hour the elevation of the inner rail should be about 2 ins. The above formulas are based on certain theoretical considerations, which never quite obtain in practice, and therefore give the maximum super-elevation.

Colliery Tubs.

Colliery tubs carry from 7 to 40 cwts. of coals.

In North country average dimensions of tub body are about 3 ft. 9 ins. × 3 ft. × 2 ft. ; wheels 11 ins. diameter, axles 1¾ in. diameter.

Such a tub if made of wood will carry about 7½ cwts. of coals, if of iron about 9 cwts. ; wooden tubs weigh about 55 per cent. of the load, iron tubs about 50 per cent. Tubs cost approximately 15*s.* to 17*s.* per cwt., and their upkeep is about 10*s.* per annum.

Coefficient of friction of tubs on well-kept mine road (level) 1 per cent. to 3 per cent., average say 1·5 per cent. ; with tubs badly greased on roads in bad repair may be two to three times as much. Coefficient of sliding friction (wheel spragged) is from 12 to 20 per cent. ; if m be coefficient of rolling friction, m' of sliding friction, the coefficient of friction with :—

1 wheel spragged $= \dfrac{3m + m'}{4}$; 2 wheels spragged $= \dfrac{m + m'}{2}$; 3 wheels spragged $= \dfrac{m + 3m'}{4}$.

Additional friction in going round curve of radius r, where the gauge of the track $= s$ (both in feet) is $\dfrac{s}{2r}\,m'$.

Tractive effort with 18-in. wheels on good level track, 40-in. gauge, at 5 to 6 m.p.h. = 24·3 lbs. per ton with plain bearings, 12·8 lbs. with roller bearings. (*Trans. Amer. Inst. Min. Eng.*, vol. lv. p. 29.)

With ' wheel ' greasers the consumption of grease averages about ¼ lb. per tub per diem for ordinary collieries.

On the average a putter can put 10 tons of coal over a distance of 200 yards (level) in an 8-hour shift.

A horse does its best work when travelling at a speed in feet per second $= \dfrac{1}{4}\,h$, where h is the height of the horse in hands, and exerting a pull in lbs. of $\dfrac{60\,c^2}{h}$, where c is the circumference of the horse's chest in feet (*Baron*). Average pull is about 1¼ cwt.

Maximum gradient for hand putting, 17 per cent.

Maximum gradient for horse haulage, 12 per cent.

Gradient at which resistance of full tub downhill equals that of empty tub uphill :—Let W be the weight of a loaded tub, w that of an empty one, θ the inclination of the road, μ the coefficient of friction :—$\tan\theta = \mu\,\dfrac{(W - w)}{W + w}$ (usually $\tan\theta = 0{\cdot}005$ about).

Work done in hauling a tub of weight W up or down an incline of length $l = l\,(\mu\,W\cos\theta \pm W\sin\theta)$

Self-acting Incline.

Self-acting Incline.—Let the sets consist of n tubs each of weight w lbs., and capable of carrying W lbs. of mineral. Let the slope of the incline, assumed uniform, be $\alpha°$. Let l be the length of the rope (= length of incline) in feet, c its weight in lbs. per foot.

Let the rope be supported on rollers, the weight of which per foot of rope (= weight of one roller divided by the distance in feet between the centres of successive rollers) is r lbs. Let D be the diameter of the rollers, d of the spindle. Let μ be the coefficient of friction of the tub on rails (usually say about 0·015) and μ_1 the coefficient of friction of lubricated bearings (say 0·005 to 0·008). Let F be the frictional resistance of the drum at the head of the incline, including that of the rope coiled upon it—a figure that is always relatively small and may often be neglected. Then at any distance x feet from the starting point the full set is just able to move down the incline when :—

$$\tan \alpha = \frac{\mu n (\mathrm{W} + 2w) + \mu_1 l (c + r) \frac{d}{\mathrm{D}} + \mathrm{F}}{n\mathrm{W} - c(l - 2x)}$$

By putting $x = 0$ the above expression gives the angle at which the set will just start from the top of the incline.

The time occupied in descending a distance x will be :—

$$t \text{ seconds} = \sqrt{\frac{2x[n(\mathrm{W} + 2w) + (c + r) l + \mathrm{M}]}{g\left[\sin \alpha (nw - cl) - \cos \alpha \left(l (c + r) \frac{d}{\mathrm{D}} \mu_1 + n(\mathrm{W} + 2w) \mu \right) - \mathrm{F}\right]}},$$

and the velocity in feet per second v attained after travelling a distance of x feet will be :—

$$v = \sqrt{\frac{2gx\left[\sin \alpha (nw - cl) - \cos \alpha \left(l (c + r) \frac{d}{\mathrm{D}} \mu_1 + n (\mathrm{W} + 2w) \mu \right) - \mathrm{F}\right]}{n (\mathrm{W} + 2w) + (c + r) l + \mathrm{M}}},$$

where M is the weight of the drum and its fittings and g the acceleration due to gravity.

All the above expressions are approximations, but are accurate enough for practical purposes.

When the slope is not uniform, the calculations become more complicated. If H be the total vertical fall of the incline and L its horizontal length, it is usually sufficient, with the low gradients prevailing in collieries, to use the above formulas, putting $\alpha = \tan^{-1} \frac{\mathrm{H}}{\mathrm{L}}$. As the denominator of the expression given above for tan α increases with x, it is obvious that the incline should, whenever possible, flatten going downwards, or be concave, though not so much so as to cause the rope to rise too high above the rails. The exact shape of the curve is not very important; it may with advantage be a parabola, which may be set out by making the height h at any point distant y ft. horizontally from the foot of the incline $= \frac{y^2 \mathrm{H}}{\mathrm{L}^2}$. The rope will then follow the curve whenever the relations are such that $\mathrm{H} = \frac{cl^2}{4\mathrm{T}}$, where T is the tension of the rope.

Main-and-Tail Rope Haulage.

Main-and-Tail Rope Haulage.—Loaded tubs in sets up to 40 are hauled outbye by motors (steam-engines, compressed-air engines or electro-motors) at speeds up to 20 miles per hour, whilst the empty tubs are hauled inbye by means of the tail rope. The size of the engine depends upon the pull to be exercised when one set (nearly always the full set) is in its least favourable position. Let T be the tension in the rope in such position, made up of the weight of the set plus rope × sine of angle of inclination of the roadway, the friction of the set and of both ropes on the rollers and the pull required to accelerate the moving parts. Let C be the diameter of the steam cylinders in inches, one of which is alone assumed to be effective at the start, let K C be the stroke of the engine in feet (K is usually $\frac{1}{2}$ to $\frac{2}{3}$), S the steam pressure in lbs. per sq. in., z the ratio of the number of teeth in the spur wheel on the drum shaft to the number of teeth in the pinion on the crankshaft, D the diameter of the drum in feet, then

$$\mathrm{C} = \sqrt[3]{\frac{4\mathrm{DT}}{\pi \mathrm{SK}z}}$$

For any portion of the trip except the start (i.e. with set already in motion), both cylinders are effective, and the value as found above must be divided by $\sqrt{2}$.

These engines are usually small and run at a piston speed of 500 to 800 ft. per min.

Endless Chain and Endless Rope.

Endless Chain and Endless Rope.—Endless chain is now rarely used except on steep gradients and for short distances; it is less reliable than endless rope on long roads, requires more power and is rather more expensive to work, but admits of rather higher speeds; it may work up to 6 miles per hour; endless rope rarely exceeds 4 miles.

The following calculations apply to both methods unless otherwise stated :—

If Q be the quantity of mineral in tons to be transported per hour, W the weight in lbs. carried by one tub, V the speed of haulage in miles per hour, f the distance apart of the tub in feet, then

$$f = 2{\cdot}36 \frac{V \cdot W}{Q}.$$

Endless chain is always over-tub haulage, endless rope may be over-tub or under-tub. In over-tub haulage the tubs must be so near together that the rope does not touch the ground between them. Let T be the least tension in the hauling rope or chain (i.e. between the two tubs nearest the driving pulley on the empty side), let c be the weight of the rope or chain per foot, h the height of the tub, then the distance f_1 of the tubs apart is given by

$$f_1 = \sqrt{\frac{8hT}{c}}$$

If f is greater than f_1 empty tubs must be run on the full side.

The pull to be exerted by the engine driving the haulage is

$$\mu\Big[n\ (2w + W) + 2c \cdot l\Big] \cos \alpha \pm W \sin \alpha,$$

using the same notation as above, n being the number of tubs on any one side of the rope at any time, so that $n = \frac{l}{f}$; the lower sign is used when the gradient is with the full tubs, the upper one when against it. If this expression has the $-$ sign, the arrangement is self-acting.

Cost of Haulage.

Cost of Underground Haulage.

System of Haulage.	Average Gradient for Full Tubs.	Cost in Pence per Ton per Mile.							
		Ropes or Chains.	Tubs.	Grease and Oil.	Coals.	Repairs to Engines and Boilers.	Maintenance of Way.	Labour.	Total.
Tail Rope	Rise 1 in 213	·276	·114	·186	·558	·098	·064	·583	1·879
Endless Chain	„ 1 „ 59	·083	·173	·155	·256	·072	·068	·572	1·379
Endless Rope	„ 1 „ 36	·252	·309	·138	·323	·196	·083	1·692	2·993

Cost of Secondary Haulage in North of England Collieries.

	Average Distance.	Tons per Animal.	Cost per Ton in Pence.			
			Wages.	Maintenance.	Interest & Deprecn.	Total.
Pony putting . .	180 yds.	27·0	1·584	0·500	0·068	2·152
Horse driving . .	423 „	30·0	0·531	0·615	0·087	1·233
Putting and driving.	603 „	14·1	2·115	1·115	0·155	3·385

(Trans. Inst. Min. Eng. xv. 1897, p. 136.)

Telegrams:
'Daglish, St. Helens.'

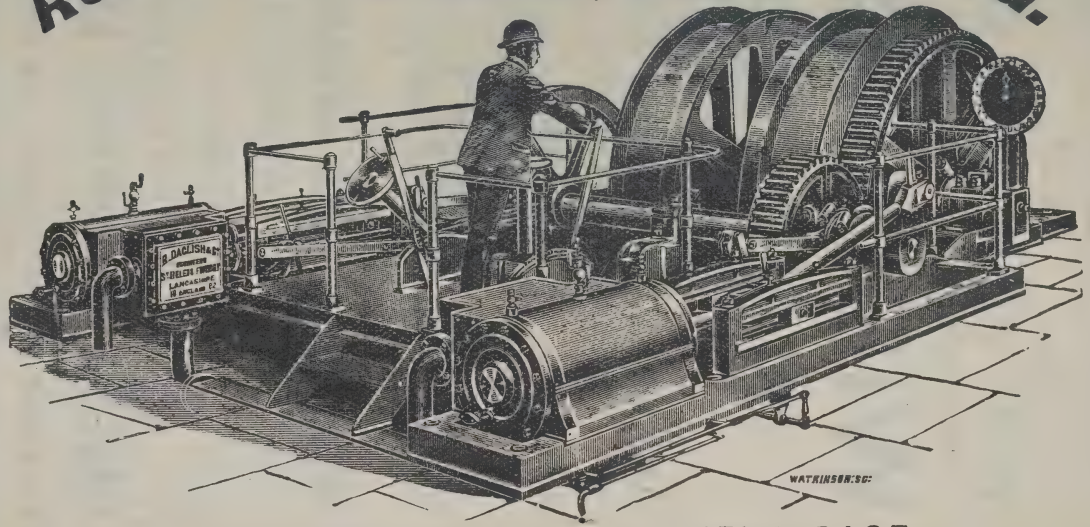
Established
1798.

ROBT. DAGLISH & CO., Ltd.

TELEPHONE No. 23.

ST. HELENS FOUNDRY, ENGINE, AND BOILER WORKS,

St. Helens, Lanc.



FOR SPECIALITIES SEE NEXT PAGE

F 2188

Telegrams:
'Daglish, St. Helens.'

Telephone
No. 23.

Established
1798.

ROBT. DAGLISH & CO., Ltd.

Specialities:—

WINDING ENGINES,

FITTED WITH

DAGLISH'S PATENT AUTOMATIC CUT-OFF AND THROW-OUT GEARS.

Daglish's Patent Automatic Cut-off and Throw-out Gears applied to Existing Engines

SAVE 25% TO 60% OF STEAM.

PATENT SIMPLEX

OVERWINDER AND OVERSPEEDER

Steel Conical Winding Drums.

Pit Cages.

TAR STILLS & AUTO-CLAVES

CHEMICAL AND DYE WORKS PLANT

AIR COMPRESSORS.

HAULING & PUMPING ENGINES.

ST. HELENS FOUNDRY, ENGINE, AND BOILER WORKS,
ST. HELENS, LANC. [*See preceding page*

Cost of underground locomotive haulage in Westphalia in 1912, including redemption of capital outlay :—

Petrol	2·51	pence	per ton-mile.
Continuous current (with conductors)	2·16	,,	,,
Alternating ,, ,, ,,	1·58	,,	,,
Continuous ,, (with accumulators)	2·65	,,	,,
Compressed air	2·12	,,	,,

So-called fireless locomotives using superheated water, and oil or coke-fired steam locomotives are also used.

Steam Mine Locomotives.

Mine locomotives (steam) usually have cylinders 5 ins. to 8 ins. diameter, stroke 1½ diameters, driving wheels 20 ins. to 30 ins. diameter, wheel base 3 ft. to 6 ft., weight complete 4 to 15 tons, drawbar pull ⅛ to ¼ weight. Boiler pressure 120 to 150 lbs. Speed with full load in miles per hour ⅓ diameter of driving wheel in inches.

When D is piston diameter, *l* length of stroke, *d* diameter of driving wheel, all in inches, and P the gauge pressure of the boiler in lbs. per sq. in., then drawbar pull = approximately $\frac{0{\cdot}85\ P\ l\ D^2}{d}$

Compressed Air Locomotives.

Compressed air locomotives are worked at 600 to 1,000 lbs. per sq. in. gauge pressure, charged from underground receivers, in which air is compressed to 50 to 100 lbs. higher. Pressure is reduced to about 150 lbs. per sq. in. before the air enters the cylinders. The formula above given for drawbar pull may be used, P being the pressure of air as supplied to the cylinders, writing 0·95 instead of 0·85.

Electric Locomotives.

Electric locomotives.—With trolley wires may use either continuous or alternating current. Weight complete is usually 7 to 15 tons, and drawbar pull ⅛ to ⅛, usually ⅛ of weight. 75 per cent. to 80 per cent. of electric input is converted into tractive effort, 1 per cent. to 2 per cent. of which will move the locomotive on the level, the remainder being available for hauling load. Speed on the level usually 6 to 8 miles per hour.

With accumulators, small locomotives are used in places for secondary haulage. The B.E.V. locomotive has a battery capacity of 193 amps. at 65 volts, and can pull or push two 3-ton trucks on the level. Their use is on the increase in this country.

WINDING

In sinking pits, the excavated material is usually hoisted in steel buckets or hoppits, usually unguided, and usually single. The load is thus wholly unbalanced, geared engines are often used, and the winding speed is slow. Such buckets have capacities of 25 to 50 cubic feet, say 30 to 60 cwts., the weight of the bucket being from ½ to ⅔ of its load. For ordinary colliery work cages carrying two to twelve tubs are used, always in pairs running on wooden, rail or rope guides ; in the Pennsylvania anthracite mines large skips are sometimes used instead of cages.

Skips are largely used instead of cages in metalliferous mines ; when the mineral has to be crushed the fact that the skip breaks the mineral up more than does the cage is no drawback. Self-dumping skips are used on large mines, whilst underground bins and loading stations at the shaft enable the skips to be filled very quickly. Skips usually hold from 20 to 100 cubic feet, say up to about 5 tons of rock ; they are made of ¼ in. to ⅜ in. steel plate.

In some Illinois collieries, where the coal is to be crushed afterwards, skips about 6 ft. × 6 ft. × 12 ft. 6 ins., holding about 12 tons of coal, are used ; the speed of winding is up to 1,600 ft. per min. ; the average power consumption is 0·485 kw. hour per ton of coal ; up to 1,000 tons of coal has been hoisted per hour from a depth of 200 yards.

On the Continent the total load lifted is about : cage 30 per cent., tubs 20 per cent., coals 50 per cent. In Great Britain the cage usually weighs 35 to 45 per cent. of the total load, or approximately as much as the useful load of coals lifted. It is carried by bridle chains, usually six in number. Their factor of safety should be at least 10, and the size of the chains may be calculated thus :

Let *d* be the diameter of the chain in eighths of an inch, and W the safe working load in tons, then $d = \sqrt{10W}$.

Slack adds greatly to strain on rope; according to numerous experiments, if the pull required to lift a given cage with rope taut be taken as 1, it requires a pull equal 1·5 to 1·7 with 3 ins. of slack, to 2–2·25 with 6 ins., 2·25 to 2·5 with 9 ins., and up to a pull of 3 with 12 ins.

The velocity of winding varies from 15 to 75 ft. per second; a rule given by O'Donahue is: allow a speed of 20 ft. per second for shafts up to 200 yards in depth, and add 5 ft. per second for every additional 100 yards.

Wooden guides are usually 3 ins. × 4 ins. to 4 ins. × 6 ins.; rail guides 50 to 70 lbs. per yard. Rope guides made of single strand of 7 to 15 wires each $\frac{1}{8}$ to $\frac{1}{4}$ in. diameter, stretched by weight of $1\frac{1}{2}$ to 5 tons; weight is often calculated at 1 ton for every 250 yards depth of shaft. The friction on the guides is but small; it usually amounts to about 0·025 of the total load on the rope with wooden or rail guides and 0·02 of the load with wire rope guides.

Size of Winding Engine.

To calculate the size of the winding engine the conditions of the wind must be known or assumed. The diameter of the cylinders must be such that (*a*) one cylinder is capable of starting the unbalanced load, and (*b*) that the two cylinders taking steam on the full stroke shall be capable of accelerating the total load to be set in motion.

If w be the weight of a cage and fittings with the empty tubs, W the weight of minerals lifted per wind, h the depth of the shaft in feet, c the weight of the rope in lbs. per foot, v the velocity in feet per second up to which the load is to be accelerated during a lift of f feet; let P be the steam pressure in lbs. per sq. in., d the diameter of the piston in ins., S the length of the stroke in feet, D the diameter of the drum in feet, M the weight of drum, pulleys, etc., and allowing 20 per cent. to cover the friction in the shaft, of the pulleys, drum, and engine, etc., then to fulfil condition (*a*)

$$d = \sqrt{\frac{\mathrm{D}\,(\mathrm{W} + ch)}{0{\cdot}589\ \mathrm{P.S.}}}.$$

To fulfil condition (*b*)

$$d = \sqrt{\frac{4\,\mathrm{D}\left[\left(\mathrm{W} + c\,(h - f)\right)f + (\mathrm{W} + 2w + 1{\cdot}5\,ch + 0{\cdot}5\,\mathrm{M})\,\frac{v^2}{2g}\right]}{3\ .\ \mathrm{P}.f.\mathrm{S}.}}$$

The larger value of d as found by (*a*) or (*b*) should be adopted.

This formula only applies to the ordinary form of winding engine with the drum carried direct on the crankshaft and the two cranks at right angles.

Usually $\mathrm{S} = \frac{d}{6}$ and the length of the connecting rod is $2\frac{1}{2} - 3\,\mathrm{S}$. Average piston speed 500 ft. per min., varying from 300 to 800 ft.

If the load is partially or wholly balanced, the formula must be correspondingly modified.

Once the load has been accelerated to its full speed, the steam admission is reduced by means of valve gears with variable cut-offs, and during the last part of the wind work must be absorbed so as to retard the load and bring it to rest gradually; powerful brakes are employed or the engine may be reversed as well as the brakes applied.

The weight of the rope may be balanced by:—

1. Chain counterbalance, suitable for slow winding only, and adding enormously to the weight to be accelerated.

2. Balance rope beneath the cages; this adds to the weight to be accelerated, but the chief objection is the additional strain put upon the cappings of the winding ropes. Some engineers use a balance rope heavier than the winding rope, so as to overbalance the latter, to help the engine to accelerate the load at start and to aid in retardation at the finish of the wind.

3. The conical or scroll drum. The ascending load is attached to the end of the rope which is at the small end of the drum, and the descending load to the end at the large end. Using the same notation as before, but calling r the mean radius of the drum, r_s the smaller radius, rd the

larger, Q_a the resistance due to the ascending load and Q_d the force derived from the descending load, and n the total number of revolutions of the drum during the wind :—

$$r = \frac{r_a + r_d}{2} = \frac{h}{2\pi n}$$

$$r_a = r\left(1 - \frac{hc}{Q_a + Q_d + hc}\right); \qquad r_d = r\left(1 + \frac{hc}{Q_a + Q_d + hc}\right);$$

$$\frac{r_a}{r_d} = \frac{Q_a + Q_d}{Q_a + Q_d + 2hc}$$

If δ be the diameter of the rope the width of the drum will be approximately $1{\cdot}5\ n\delta$.

Cylindro-conical drums, giving partial counterbalance (where most needed) are often used.

Flat ropes wound on a reel are equivalent to a spiral drum; they will counterbalance in the three main positions where

$$r_d - r_a = nt \text{ and } r = \sqrt{\frac{Q + Q_d + hc}{4\pi c}}\, t,$$

where t is the thickness of the flat rope.

The time of banking varies considerably; it may be averaged at about 10 to 15 seconds for one deck and 25 to 45 seconds for double decks. Up to 3,000 tons may be wound in 10 hours, but 2,000 tons is not often exceeded.

The consumption of coal in winding engines varies from 0·5 to 1·5 per cent. of the weight of coals wound. Steam consumption 50 to 100 lbs. per shaft h.p. hour.

The cost of a winding engine and boilers erected varies from about 3,500*l.* to about 10,000*l.*

The cost of winding, exclusive of interest and depreciation on the winding plant, varies from about 3*s.* to 10*s.* 6*d.* per 100 tons wound.

Electric Winding Plants.

Electric winding plants are coming increasingly into favour; according to Mr. Mountain (*Trans. Inst. M. E.* xxxi., p. 329) the first cost of electric winders is considerably in excess of steam winders, so that interest and depreciation of the plant form serious items in the working costs. Some of the large geared electric winders in use on the Rand raise a 3-ton load from a depth of 2,500 ft., taking 2,000 e.h.p. An electric winder at a Durham pit raises 63 cwts. of coal per wind from 1,350 ft., uses 3-phase induction motor, 700 h.p., 2,900 volts; motor runs at 230 r.p.m., geared 5·45 to 1; cylindro-conical drum 10·20 ft. diam., weighing 45¾ tons; overall efficiency 51 per cent.

A winder in a South Wales pit uses 2,000 volts alternating, lifts 55 cwts. from 600 ft., uses 174 kw. per wind; drum cylindro-conical, 8 ft. to 13 ft.; overall efficiency, 48·25 per cent.

Electric Winders on Witwatersrand.

Name.	Depth in ft.	Tons (2,000 lbs.) per hour.	Weight of Mineral.	Weight of Skip.	Maximum Rope Speed.	Drum Diameter.	Winding Rope Diameter.	Tail Rope Diameter.	H.P.	System.
			lbs.	lbs.	ft. per min.	ft.	in.	in.		
City Deep . .	3,210	157·5	9,000	8,000	3,500	11	$1\frac{9}{16}$	$1\frac{9}{16}$	1,600	A.C.
Village Deep . .	4,200	152·0	10,600	7,000	3,500	11	$1\frac{9}{16}$	$1\frac{3}{8}$	1,600	A.C.
Brakpan . . .	3,800	180·0	10,000	6,000	3,500	11	$1\frac{3}{8}$	$1\frac{1}{4}$	1,450	Ward-Leonard
Village Deep, Turf Shaft	4,093	150·0	10,000	7,000	3,500	12	$1\frac{1}{2}$	—	1,600	A.C.

The last-named winder (Whiting hoist) shows an overall efficiency of 77 per cent.

(*J. F. Perry*, Trans. Nat. Assoc. Col. Man., xv. p. 299.)

Headgears.

Headgears.—Steel-framed headgears usually range from ⅝ to 1 ton per foot of height, and cost erected 12*l.* to 18*l.* per ton; headgears composed of angles and joists only, not lattice girders, weigh ⅝ to ⅝ ton per foot of height. Wooden headgears weigh about ½ ton per foot of height and cost 10*l.* to 12*l.* per ton. The size of the main legs of timber headgears is given approximately by the expression $A = 0{\cdot}03\ H^2\sqrt{W}$, where W is the total working load on the winding ropes in tons, H the height in feet of the headgear from the ground to the pulley centres, and A the area of the cross-section of the main leg; the area of the backstay = 0·64 A. (*R. Boyle*, Scott. Inst. Min. Stud. 1908.)

Pulleys.

Pulleys.—Usually 10 to 20 ft. in diameter, mostly of the same diameter as the drum. Pillow blocks may be carried on strong springs to diminish shock at starting.

If W be the weight of a pulley in cwts. and d its diameter in ft., $W = 9{\cdot}2\,(d-8)$ approximately for large colliery headgear pulleys. $W = \frac{d^2}{4}$ is a useful approximation, but is too low for pulleys under 6 ft. in diameter.

The angle of lead from the drum to the head gear pulleys should not exceed 2° on either side of the centre line; the horizontal distance between the drum and pulley centres should not exceed 150 ft., otherwise the rope is apt to surge.

The first Koepe winder, supported directly over the shaft, thus dispensing with the usual headgear and pulleys, to be erected in this country, is in operation at Plenmeller Colliery, Northumberland. The Koepe driving pulley is 11 ft. 6 ins. in diameter, driven through single reduction gearing at 200 r.p.m. by a 240 h.p., d.c. motor, fitted with Ward-Leonard control. Current is supplied by a 200 kw., 350 volt generator direct coupled to a 3-phase 50 cycle 600 volt induction motor running at 730 r.p.m. The depth of the shaft is 815 ft., and single deck cages taking 3 tubs holding altogether 48 cwts. of coal are used. The whole of the hoisting machinery is contained in a two-storied steel-framed house with corrugated iron sides and roof mounted on a tall lattice-girder framework. An overall efficiency of 60 per cent. is attained. (*Trans. Inst. Min. Eng.*, lv. p. 170.)

On the Rand, hoisting with skips costs 8*d.* to 1*s.* per ton from depth of about 1,000 ft.

ROPES FOR HAULING AND WINDING.

Weight in lbs. of rope of circumference C inches per yard :—

Of ordinary wire rope with hemp core	=	0·47 to 0·48 C^2.
„ „ „ „ „ wire „	=	0·54 to 0·56 C^2.
„ locked coil rope	=	0·76 C^2.
„ all steel guide ropes	=	0·64 to 0·65 C^2.
„ hemp ropes	=	0·18 to 0·20 C^2.
„ coir „	=	0·12 C^2.
„ aloes „	=	0·10 C^2.

The number of wires of diameter d in a wire rope of diameter D is approximately $0{\cdot}75\ \frac{D^2}{d^2}$.

The breaking load of a rope of circumference C inches in tons is approximately $\kappa\ C^2$, where $\kappa = 0{\cdot}2$ to 0·3 for ordinary hemp, up to 0·6 for best hemp, 0·4 for aloes fibre, 1·5 for charcoal iron, 1·75 for mild steel, 2·0 for best patent steel, 2·5 for best plough steel, 3·0 for special improved plough steel, and 4·0 for extra special improved plough steel.

The British Association of Wire Rope Manufacturers has adopted the following distinctive nomenclature for the steel wire ordinarily used in rope manufacture :—

Description.	*Breaking Strain.*
Best patent steel wire	80 to 90 tons per sq. in.
Special improved patent steel wire	90 to 100 „ „
Best plough steel wire	100 to 110 „ „
Special improved plough steel wire	110 to 120 „ „
Extra special improved plough steel wire	above 120 „ „

Mild steel used for special purposes has a breaking strength of 25 to 80 tons per sq. in.

For wire ropes of 6 strands of 7 wires deduct 5% off sum of strength of wires.
„ 6 „ 12 „ „ 10% „ „ „ „
„ 6 „ 30 „ „ 15% „ „ „ „
For locked coil ropes deduct . . . 5% „ „ „ „

MEMBERS OF THE NATIONAL UNION OF MANUFACTURERS INCORPORATED

PREVENTION OF CORROSION IN LOCKED COIL ROPES.

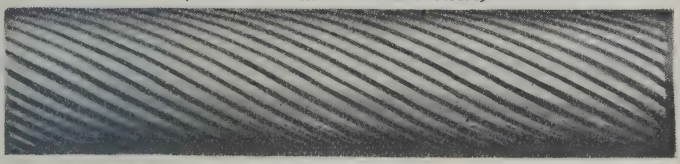
F B I
MEMBER OF THE FEDERATION OF BRITISH INDUSTRIES

NOTE:—Users of Locked Coil Ropes—and we as manufacturers—have in the past long felt the urgent need for some more certain protection against the risks and dangers resulting from insidious deterioration of Locked Coil Ropes caused by internal corrosion, than that afforded by internal application of even the best of dressings during manufacture. The risk is present alike in Winding Shafts of Mines, due to bad water, steam or vapour, or in Aerial Ropes where the inaccessibility of standing Ropes on long spans renders any efficient operation of rope dressing almost impracticable.

It will therefore be of particular interest to all users of this type of rope to learn that we have, after much experimental work, now introduced a process by which we are in a position to offer a Locked Coil Wire Rope in which each separate wire is coated with a heavy layer of metallic covering, thus providing valuable protection against corrosion, and at the same time ensuring accuracy of section and perfect locking.

We have pleasure in introducing this type of rope to your notice, under the title of:—

CRADOCK'S
"SILVERLOCK"
(REGISTERED TRADE MARK)




LOCKED COIL ROPE.

GEORGE CRADOCK & CO.,
LIMITED,
WAKEFIELD, ENGLAND.

See next page, also announcements facing pages 852 and 853.

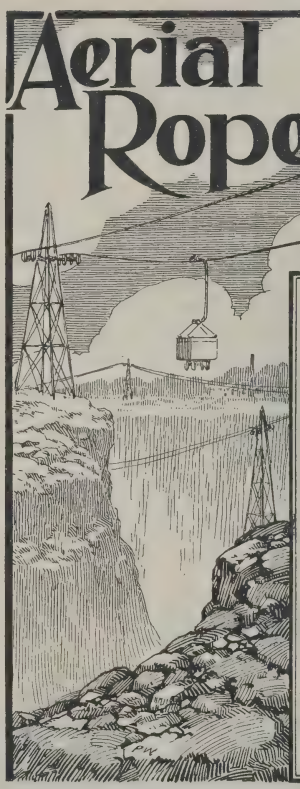Aerial Ropeways



SAVE TRANSPORT CHARGES

Send us your enquiries for:

AERIAL ROPEWAYS
CABLEWAYS
ROPE CHUTES
ETC.

See our recently published Brochure on these rapid and inexpensive methods of conveyance.

GEORGE CRADOCK & CO.,

LIMITED,

WAKEFIELD, ENGLAND.

See previous page also announcements facing pages 852 and 853

Wire ropes should never be bent round a drum or pulley whose diameter $<150D$ or $1500d$; in Belgium diameters of pulleys $>750d$ for flat ropes or $>1000d$ for round ropes are allowed.

The maximum bending stress in pounds per square inch produced by bending a rope round a pulley of diameter Δ is theoretically $E\frac{d}{\Delta}$, where E is the modulus of elasticity of the wire used; it ranges from 10,000,000 to 30,000,000 lbs. Owing to the strain not acting directly at right angles to the cross-section of the whole rope, it is found in practice that the mean stress is more correctly represented by the expression $\frac{3}{8}E\frac{d}{\Delta}$. According to R. W. Chapman (*Proc. Austr. Inst. Min. Eng.*, vol. iii., No. 3, April 1908), if a is the angle of pitch of the wires in a strand and b of the strands in a rope, the bending stress is $E\frac{d}{\Delta}\cos^2 a, \cos^2 b$.

If s be the mean bending stress as above, T the breaking strength in lbs. per sq. in., m the factor of safety (ratio of total breaking load to total working load), W the total load to be carried, and A the total cross-section of steel in the rope, $A = \frac{mW}{T-s}$.

For ordinary winding ropes $A = 0{\cdot}6\ D^2$ approximately.
Factor of safety for haulages 5 to 6, for winding ropes 8 to 10.
Coefficients of friction of wire rope :—


Dry rope on a grooved iron drum . .	0·120	Greased rope on a wood filled sheave	0·140
Wet " " " " . .	0·085	Dry rope on rubber or leather filling .	0·495
Greased " " " . .	0·070	Wet " " " " .	0·400
Dry rope on a wood filled sheave . .	0·235	Greased " " " .	0·205
Wet " " " " . .	0·170		

According to G. Raw (*Trans. Inst. Min. Eng.*, lv., p. 180) the coefficient of friction of a slightly oiled flattened strand rope upon an elm-filled sheave, fibres on end, is between 0·3 and 0·35.


The resistance to bending of a rope under tension T lbs. round a pulley of radius r ft. $= 1{\cdot}26 + 0{\cdot}002276\frac{T}{r}$ (*Weisbach*). The maximum admissible stress in a medium wire rope may be taken as averaging 5,000 times the weight of 1 foot of the rope.

Flattened Strand Ropes.

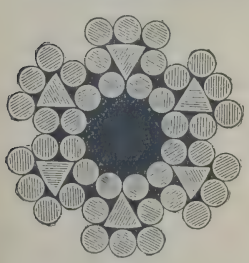
Flattened strand ropes are constructed of strands each of which has a flattened surface exposed for wear throughout its entire length, so that the wear due to friction in working over pulleys is distributed over a larger number of wires than is the case with ordinary round stranded



No. 48.
Haulage Rope.

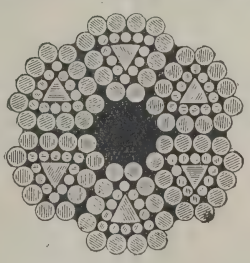

No. 49.
Winding Rope.

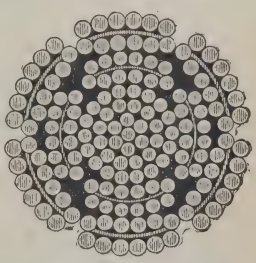

No. 71.
Flexible Crane Rope
(Non-rotating).

ropes. In the latter the wear is very severe on the crown wires of each strand, which are, consequently, considerably reduced in sectional area before any appreciable wear has taken place in the adjoining wires. The smooth surface of flattened strand ropes materially reduces wear and tear on drums and pulleys; owing to the wear being so light on the ropes, it is not necessary to have so large a margin between the working load and the breaking strain as in ropes of ordinary make. Being more compact, they contain a larger metallic area than ordinary ropes, and therefore a flattened strand rope is of smaller size than an ordinary rope of equal breaking

strain, and is not so liable to be forced out of shape by the crushing stress it has to sustain. When required, flattened strand ropes are made non-spinning for winding and sinking purposes. They are very suitable as balance ropes, as, being absolutely dead, they can be used with or without pulleys in the sump.

Flattened strand haulage ropes splice more effectively than ordinary ropes, as the core is slightly smaller than the strands, and there is consequently less risk of the splice drawing. This construction is of special utility in ropes used for power transmission purposes, aerial ropeways, etc., where an efficient splice is essential. The greater surface of flattened strand ropes increases the holding power of grips or clips used in haulage work. For use on cranes and lifts, these smaller ropes possess special advantages, as the construction gives greater strength than the ordinary make without increase in size or loss of flexibility. Non-rotating ropes of special formation are in great demand for crane work, particularly for cranes used in the erection of large buildings, and on quays and shipping wharves, as any tendency of the rope to spin is entirely obviated.

Circum.	Diameter.			Approximate Weight.		Approximate Breaking Strains.				
				Per fthm.	Per metre.	Best Patent Steel.	Special Improved Patent Steel.	Best Plough Steel.	Special Improved Plough Steel.	Extra Special Improved Plough Steel.
Ins.	mm.	Ins.	mm.	Lbs.	Kilos.	Tons.	Tons.	Tons.	Tons.	Tons.
1	25	$\frac{5}{16}$	8	1·14	·29	3·53	3·92	4·36	4·55	4·99
1¼	31	$\frac{3}{8}$	10	1·71	·42	5·51	6·22	6·9	7·2	7·92
1½	38	$\frac{15}{32}$	12	2·51	·63	8·1	9·04	10·01	10·49	11·53
1¾	44	$\frac{9}{16}$	14	3·43	·85	11·09	12·38	13·69	14·34	15·77
2	50	$\frac{5}{8}$	16	4·57	1·14	14·54	16·21	17·95	18·79	20·66
2¼	57	$\frac{23}{32}$	18	5·71	1·42	18·43	20·59	22·8	23·87	26·24
2½	60	$\frac{3}{4}$	19	6·4	1·6	20·36	22·73	25·18	26·38	29·
2¼	63	$\frac{13}{16}$	·795	20	7·09	1·76	22·31	24·95	27·58	28·8	31·68
2½	69	$\frac{7}{8}$	·875	22	8·57	2·17	27·13	30·31	33·53	35·14	38·64
3	76	$\frac{15}{16}$	·954	24	10·29	2·55	32·39	36·2	40·04	41·92	46·1
3⅛	79	1	·994	25	10·86	2·7	34·92	39·05	43·15	45·19	49·7
3¼	82	$1\frac{1}{32}$	1·03	26	12·	2·97	36·12	40·38	44·7	46·8	51·48
3½	88	$1\frac{1}{8}$	1·11	28	13·94	3·43	43·62	48·77	53·82	56·48	62·12
3¾	94	$1\frac{3}{16}$	1·19	30	16·	4·	51·02	57·02	63·	66·02	72·62
4	101	$1\frac{1}{4}$	1·27	32	18·29	4·57	56·71	63·23	69·84	73·12	80·42
4¼	107	$1\frac{13}{32}$	1·35	34	20·57	5·14	70·04	78·25	86·68	90·68	98·92
4½	114	$1\frac{7}{16}$	1·43	36	22·86	5·71	78·	87·28	96·47	101·10	110·25
5	127	$1\frac{5}{8}$	1·59	40	28·57	7·08	97·32	108·63	120·13	125·75	137·18
5¼	133	$1\frac{11}{16}$	1·67	42	31·43	7·8	104·75	117·13	129·44	135·56	147·88
5½	139	$1\frac{3}{4}$	1·75	44	34·51	8·56	118·44	132·34	146·33	153·34	167·28
5¾	146	$1\frac{13}{16}$	1·83	46	37·6	9·33	128·52	143·78	159·06	166·57	181·70
6	152	$1\frac{7}{8}$	1·91	48	41·14	10·2	139·62	156·17	172·42	180·68	197·10
6¼	158	2	1·99	50	44·57	11·	152·97	171·02	189·01	198·03	216·

NOTE.—The figures given above are calculated on flattened strand ropes, having six strands with hemp main core, see No. 49, p. 2123.

(*John & Edwin Wright Ltd., Birmingham.*)

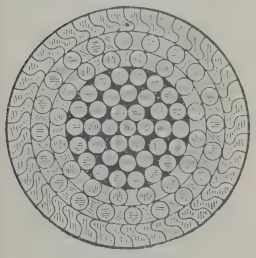
Locked Coil Ropes.

Locked coil ropes are in many cases advantageous where heavy loads have to be raised from great depths. Strength for strength, they are of less diameter than ordinary ropes, and consequently admit of corresponding reduction in width of drum, thus minimising lateral friction on drums and pulleys. They are absolutely free from any tendency to rotate, and are therefore of special utility in sinking operations and for winding in shafts where there is not much clearance, as the possibility of collision between the cages is obviated. Frictional wear on guides is also very much reduced by the use of locked coil ropes in winding. They are of longer duration than any other form of rope, as owing to their smooth surface the external wear is evenly distributed over the periphery of the rope, and internal friction, which is so marked a feature of ordinary ropes, is reduced to a minimum. In the event of any wire being broken in use, it is held in position and does not, as in an ordinary rope, unravel and lay across the adjacent wires, causing other fractures in working over drums and pulleys. The tendency to internal corrosion is less in locked coil ropes than in any other type of rope, as during the process of manufacture the successive annular layers of wires of which the ropes are composed are coated with a special


rust and acid proof lubricant, which cannot be worn off during work owing to the protection afforded by the interlocking wires of the outer cover. In consequence of the wear on these ropes being so light, they may be worked with a lower margin of safety than is the case with ordinary ropes, as with the latter, in estimating factor of safety required, provision has to be made for the rapid wear which takes place.

As guide ropes, the advantages of the locked coil construction may be readily understood when it is borne in mind that, in the event of a rod breaking in the ordinary twisted guide rope, it would strand out from the rope, and be caught by the cage gland with disastrous results; in a locked coil rope the broken rod would be securely held in position.

Locked coil ropes are eminently desirable as standing ropes for aerial ropeways, as their smooth surface affords very easy running for the wheels of the carrier; consequently less haulage power is required and wear and tear considerably reduced.



No. 63.
Winding Rope.

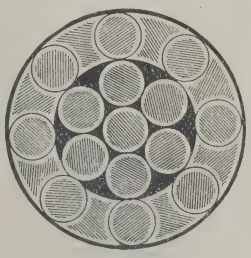

No. 64.
Guide Rope.



No. 66.
Aerial Rope.

Locked Coil Steel Wire Ropes for Winding, Sinking, etc.

Guides, Rubber Ropes, Standing Ropes for Aerial Ropeways, etc.

Circum.	Diameter.			Approximate Weight.		Approximate Breaking Strain.		Minimum Diameter of Drum and Pulley.	Approximate Breaking Strain.		
				Per fthm.	Per metre.	Special Improved Patent Steel.	Special Improved Plough Steel.		Special Mild Steel.	Best Patent Steel.	Special Improved Patent Steel.
Ins.	mm.	Ins.	mm.	Lbs.	Kilos.	Tons.	Tons.	Feet.	Tons.	Tons.	Tons.
3⅛	79	1	·994	25	15½	3·86	49	60	9½	23	30	46
3¼	82	1 1/32	1·03	26	16½	4·1	54	70	9¾	25	34	50
3½	88	1 1/16	1·11	28	18	4·5	65	80	10⅜	31	41	62
3¾	94	1 3/16	1·19	30	21	5·21	75	87	11¼	36	48	72
4	101	1¼	1·27	32	24	5·95	86	100	12	41	55	82
4¼	107	1 5/32	1·35	34	26½	6·45	95	111	12¾	45	60	90
4½	114	1 7/16	1·43	36	30	7·44	107	123	13½	51	68	102
4¾	120	1½	1·51	38	34	8·43	118	140	14¼	57	76	114
5	127	1 5/8	1·59	40	38	9·43	132	154	15	63	84	126
5¼	133	1 11/16	1·67	42	41	10·25	144	170	15¾	68	91	136
5½	139	1¾	1·75	44	45	11·16	157	185	16½	74	99	148
5¾	146	1 13/16	1·83	46	49	12·23	173	203	17¼	82	109	164
6	152	1⅞	1·91	48	53	13·14	190	222	18	90	120	180
6¼	158	2	1·98	50	59	14·71	203	243	18¾			
6½	165	2 1/32	2·06	52	62	15·5	215	260	19½			
6¾	171	2 5/32	2·14	54	65	16·24	235	281	20¼			
7	177	2 3/16	2·22	56	74	18·44	253	303	21			

(*John & Edwin Wright Ltd., Birmingham.*)

Size and Weight in Lbs. per Yard, and Safe Working Load in Cwts., of Round Wire Ropes.

Iron Ropes.

Circumference in Inches.	Weight in Lbs. per Yard.	Working Load in Cwts.	Circumference in Inches.	Weight in Lbs. per Yard.	Working Load in Cwts.	Circumference in Inches.	Weight in Lbs. per Yard.	Working Load in Cwts.	Circumference in Inches.	Weight in Lbs. per Yard.	Working Load in Cwts.
Best Charcoal Iron.											
1	$\frac{1}{3}$	4	$2\frac{3}{8}$	$2\frac{1}{4}$	20	$3\frac{3}{8}$	$4\frac{1}{3}$	36	$4\frac{1}{2}$	9	72
$1\frac{1}{8}$	$\frac{3}{4}$	6	$2\frac{1}{2}$	$2\frac{3}{8}$	22	$3\frac{1}{2}$	5	40	$4\frac{5}{8}$	$9\frac{1}{2}$	76
$1\frac{1}{4}$	1	8	3	24	$3\frac{5}{8}$	$5\frac{1}{2}$	44	$4\frac{3}{4}$	10	80	
$1\frac{3}{8}$	$1\frac{1}{4}$	10	$3\frac{1}{4}$	26	$3\frac{3}{4}$	6	48	5	11	88	
$1\frac{1}{2}$	$1\frac{1}{3}$	12	$3\frac{3}{8}$	28	$3\frac{7}{8}$	$6\frac{1}{4}$	52	$5\frac{1}{4}$	$11\frac{3}{4}$	94	
$1\frac{5}{8}$	$1\frac{3}{4}$	14	$3\frac{1}{2}$	30	4	7	56	$5\frac{3}{8}$	$12\frac{1}{2}$	100	
2	2	16	4	32	$4\frac{1}{8}$	$7\frac{1}{2}$	60	6	15	120	
$2\frac{1}{8}$	$2\frac{1}{4}$	18	$4\frac{1}{4}$	34	$4\frac{3}{8}$	8	64	$6\frac{1}{4}$	$16\frac{1}{2}$	132	

Steel Ropes.

Circumference in Inches.	Weight in Lbs. per Yard.	Working Load in Cwts.	Circumference in Inches.	Weight in Lbs. per Yard.	Working Load in Cwts.	Circumference in Inches.	Weight in Lbs. per Yard.	Working Load in Cwts.	Circumference in Inches.	Weight in Lbs. per Yard.	Working Load in Cwts.
Best Crucible Steel.											
1	$\frac{1}{3}$	6	$2\frac{1}{4}$	$2\frac{1}{4}$	30	$3\frac{1}{8}$	4	56	$4\frac{1}{4}$	$7\frac{1}{2}$	100
$1\frac{1}{4}$	$\frac{3}{4}$	8	$2\frac{3}{8}$	$2\frac{1}{2}$	32	$3\frac{3}{8}$	$4\frac{1}{2}$	60	$4\frac{5}{8}$	9	120
$1\frac{3}{8}$	1	10	$2\frac{1}{2}$	$2\frac{3}{4}$	36	$3\frac{1}{2}$	5	64	$4\frac{3}{4}$	10	132
$1\frac{1}{2}$	$1\frac{1}{4}$	12	$2\frac{5}{8}$	3	40	$3\frac{5}{8}$	$5\frac{1}{2}$	72	5	11	154
$1\frac{5}{8}$	$1\frac{1}{3}$	16	$2\frac{3}{4}$	$3\frac{1}{4}$	44	$3\frac{3}{4}$	6	76	$5\frac{1}{4}$	$12\frac{1}{2}$	175
$1\frac{7}{8}$	$1\frac{1}{2}$	20	$2\frac{7}{8}$	$3\frac{1}{2}$	48	$3\frac{7}{8}$	$6\frac{1}{2}$	80	$5\frac{3}{8}$	$13\frac{1}{2}$	189
2	$1\frac{3}{4}$	22	3	$3\frac{3}{4}$	52	4	7	94	6	15	210
$2\frac{1}{8}$	2	26									
Plough Steel.											
1	$\frac{1}{3}$	10	$2\frac{1}{4}$	2	36	3	$3\frac{3}{4}$	72	$3\frac{7}{8}$	$6\frac{1}{2}$	120
$1\frac{1}{4}$	$\frac{3}{4}$	12	$2\frac{3}{8}$	$2\frac{1}{4}$	44	$3\frac{1}{8}$	4	76	4	7	132
$1\frac{3}{8}$	1	16	$2\frac{1}{2}$	$2\frac{1}{2}$	48	$3\frac{1}{4}$	$4\frac{1}{4}$	80	$4\frac{1}{8}$	8	154
$1\frac{1}{2}$	$1\frac{1}{4}$	22	$2\frac{5}{8}$	$2\frac{3}{4}$	52	$3\frac{3}{8}$	$4\frac{1}{2}$	88	$4\frac{1}{2}$	9	175
$1\frac{5}{8}$	$1\frac{1}{3}$	26	$2\frac{3}{4}$	3	56	$3\frac{1}{2}$	$5\frac{1}{3}$	94	5	11	189
2	$1\frac{1}{4}$	32	$2\frac{7}{8}$	$3\frac{1}{4}$	64	$3\frac{3}{4}$	6	100			

Flat Ropes.

W = width, in inches. t = thickness, in inches. k = 35 for charcoal iron, 5 for crucible 70 for plough steel.

Safe working load = Wtk cwts.

Size and Weight in Lbs. per Yard, and Safe Working Load in Cwts., of Flat Wire Ropes.

Dimensions in Inches.	Weight in Lbs. per Yard.	Working Load in Cwts.	Dimensions in Inches.	Weight in Lbs. per Yard.	Working Load in Cwts.	Dimensions in Inches.	Weight in Lbs. per Yard.	Working Load in Cwts.	Dimensions in Inches.	Weight in Lbs. per Yard.	Working Load in Cwts.
Best Charcoal Iron.											
$2\frac{1}{4}\times\frac{1}{2}$	5	40	$3\times\frac{5}{8}$	8	64	$4\times\frac{11}{16}$	11	88	$4\frac{5}{8}\times\frac{3}{4}$	$15\frac{1}{2}$	124
$2\frac{1}{2}\times\frac{1}{2}$	6	48	$3\frac{1}{4}\times\frac{5}{8}$	9	72	$4\frac{1}{4}\times\frac{11}{16}$	$12\frac{1}{2}$	100	$4\frac{5}{8}\times\frac{3}{4}$	17	136
$2\frac{3}{4}\times\frac{1}{2}$	7	56	$3\frac{3}{4}\times\frac{5}{8}$	10	80	$4\frac{1}{2}\times\frac{11}{16}$	14	112	$4\frac{5}{8}\times\frac{3}{4}$	18	144
Best Crucible Steel.											
$2\frac{1}{4}\times\frac{1}{2}$	5	64	$2\frac{3}{4}\times\frac{5}{8}$	7	80	$3\frac{1}{4}\times\frac{5}{8}$	9	124	$3\frac{3}{4}\times\frac{11}{16}$	11	144
$2\frac{1}{2}\times\frac{1}{2}$	6	72	$3\times\frac{5}{8}$	8	100	$3\frac{1}{2}\times\frac{5}{8}$	10	136	$4\frac{1}{2}\times\frac{3}{4}$	$15\frac{1}{2}$	180
Plough Steel.											
$2\frac{1}{4}\times\frac{1}{2}$	5	80	$2\frac{3}{4}\times\frac{5}{8}$	7	124	$3\times\frac{5}{8}$	8	144	$3\frac{1}{2}\times\frac{5}{8}$	10	180
$2\frac{1}{2}\times\frac{1}{2}$	6	100									

(See also pages 256, 805.)

Steel Wire Ropes for Oil-well Drilling.

(Allan, Whyte & Co., Ltd., Rutherglen, Glasgow.)

Wire ropes are largely employed in drilling oil-wells, particularly where the American system of drilling is in use, which is known as the Californian Cable Rig. This system uses a drilling line for manipulating the tools, a casing line for manipulating the casing, and a sand line for cleaning out the wells. The two former are generally 6 × 19 construction, and the latter 6 × 7.

The Russian or Galician system employs jointed rods in place of drilling lines, but wire ropes are used for cleaning out the wells and for manipulating the casing and the string of tools. The sand, pump, or bailing lines are usually 6 × 7 construction, and the other ropes, which run up to $1\frac{1}{2}$ ins. diameter, are 6 × 19, 6 × 24, or 6 × 30.

Oil-well drilling, being exceptionally severe, calls for ropes of high quality.

Galvanized ropes are sometimes advisable on account of the corrosive action of the water in the wells.

It is a matter of general practice to have the drilling ropes left-hand lay.

Electrical Cables for Collieries.

See Mines and Quarries Form No. 11, Mines Dept. (*April* 1921).*

PUMPS AND PUMPING.

Cornish pumps from 4 ft. to 12 ft. stroke, 6 ins. to 30 ins. diameter, 12 to 16 strokes per min.; piston speeds vary from 60 to 120 ft. per min. A rule sometimes adopted is that speed in feet per second $= \sqrt{l}$, where l is the length of stroke in feet. Ram pumps work at speeds of 100 to 200 ft. per minute.

If n be number of complete strokes (i.e. up and down strokes) per min., and d the diameter of the ram or bucket, the theoretical discharge G in gallons per min. is given by $G=0{\cdot}034d^2\,n.l.$ The actual discharge is less than this by the slip, which ranges from 3 per cent. to 30 per cent.

* Printed and published by H.M. Stationery Office. Price 1*s.* net; 1*s.* 2*d.* post free.

in extreme cases. In practice it is usually between 10 per cent. and 15 per cent. It must be deducted from the theoretical discharge to get the actual discharge. Maximum velocity of water in rising main 200 to 300 ft. per min., rarely exceeds 100 ft. in small pumps; maximum velocity in windbore, 40 ft. per min.

Pressure at bottom of rising main = pressure due to static head + pressure required to overcome resistance of pipe.

If v be the velocity of discharge in feet per second, H the vertical head in feet, L the length in feet of the pipe, D its diameter in inches, and P the total pressure at bottom of rising main, then,

$$P = 0{\cdot}341\,D^2\left(H + 0{\cdot}024\left(\frac{L}{12D}\right)^4\frac{v^2}{2g}\right)$$

The pressure in the steam cylinder must be capable of overcoming this pressure, allowing for the mechanical efficiency of the engine (say 0·66).

The content of a pipe in gallons of water = $0{\cdot}034\,D^2L$.

The thickness of a pipe can be calculated thus :—

Thickness in inches = 0·000125 P.D. + 0·5.

Thickness of pump-barrel = $0{\cdot}5 + \frac{P.D.}{2{,}000}$, where P is pressure in lbs. per sq. in.

Weight of pipe in lbs. = $2{\cdot}5\,L\,(D^2 - d^2)$, where D and d are external and internal diameters. The flange = weight of 1 ft. of pipe.

Horse-power in the water lifted = $\frac{g\,H}{3{,}300}$, where g is the actual delivery in gallons per min.

The 'duty' of a Cornish pumping engine is the number of millions of pounds of water lifted one foot high by the consumption of 112 lbs. of coal (before 1856 of one bushel = 94 lbs., and in America of 100 lbs. of coal) under the boilers. To convert duty into lbs. of coal burnt per h.p. in the water, divide 222 by the duty. It is always theoretical discharge that is taken in calculating duty. Cornish engines have worked with as little as 1·5 lb. coal per h.p.; 2·5 to 3 lbs. is a usual figure.

For double-acting pumps the formula for discharge previously given becomes

$$G = 0{\cdot}068\,d^2\,n.l.$$

If A be the area of the piston, n number of strokes per minute, S length of stroke, b the height of the water barometer, l the length of the windbore, a its area, h the vertical height of the suction lift, g the acceleration of gravity,

$$a > 0{\cdot}0055\,\frac{A n^2 S l}{g(b-h)}$$ for single-acting pumps, and $> 0{\cdot}00275\,\frac{A n^2 S l}{g(b-h)}$ for double-acting pumps,

or the piston will rise faster than the water can follow it, and hammering will result.

The air-vessel should have a volume = 4 times that of barrel for single-acting, and 1·6 times for double-acting pumps. (*Weisbach.*)

Centrifugal Pumps.

Let u be peripheral velocity of impeller in ft. per sec.

- r radius of the impeller in feet.
- n number of revolutions per second.
- d depth of openings in impeller in feet.
- i number of impellers in series.
- h height of total lift in feet.

$u = 2\,n\,\pi\,r$. Velocity of radial water discharge from impeller = K u, where K is a coefficient between 0·1 and 0·3, averaging 0·2. Quantity of water discharged per second = $K\,u\,2\,\pi\,r\,d = 4\,K\,n\,\pi^2\,r^2\,d$ cub. ft. $h = c\,i\,\frac{u^2}{2g}$, where c is a coefficient that varies considerably, but is mostly between 0·75 and 1.

Mechanical efficiency (m) is between 0·5 and 0·8, usually about 0·7.

Hence h.p. required $= \frac{8\ K\ c\ \pi^4\ n^3\ r^4\ i\ d}{8{\cdot}8\ m\ g}$, or taking average values h.p. = about $\frac{2}{3}\ n^3\ r^4\ i\ d$.

Direct coupled motor-driven centrifugal pumps to pump 1,500 gallons p.m. to a height of 1,000 ft. have been found to have an overall efficiency of 71·6 per cent.; electrically driven ram pumps would have a similar efficiency of 80 per cent. (*Prest & Leggat.*)

(See also PUMPS, page 1135.)

VENTILATION.

Mine Gases and Ventilation.

Normal air contains 79 vols. nitrogen, 21 vols. oxygen, carbonic acid 0·06 to 0·11 per cent. With 17·0 vols. of oxygen a candle is extinguished, but breathing is still possible; with 15·2 vols. of oxygen breathing becomes more difficult; with 10 vols. of oxygen, very difficult; and with 5 or 6 vols. practically impossible. Prussian rule for volume of air in mines is 70 cubic feet per min. per man underground, reckoning each horse as four men; it must never amount to less than 53 cubic feet per ton of daily output.

The blood in a man's body is capable of absorbing about one pint (about 20 per cent. of its volume) of either oxygen or carbonic oxide when saturated. If it be half saturated with carbonic oxide, unconsciousness sets in, and with higher proportions death follows. In air containing 0·1 per cent. of carbonic oxide the blood would become half saturated in about an hour in the case of a man at rest, and in about half an hour in the case of a man taking exercise. Anything above 0·15 per cent. of carbonic oxide must be considered dangerous; 0·16 per cent. will cause slight distress to mice in an hour, 0·2 per cent. distress in 8 minutes, 0·3 per cent. distress in 4 minutes, 0·45 per cent. distress in 2 minutes and collapse in 4 minutes, 0·57 per cent. distress in 1 minute, collapse in 6½ minutes, and death in 12½ minutes. With canaries 0·09 per cent. causes distress in one hour, 0·15 per cent. distress in 3 minutes, fall from perch in 18 minutes, 0·2 per cent. distress in 1½ minutes, fall from perch in 5 minutes, and 0·3 per cent. fall from perch in 2½ minutes.

Fire-damp.—Fire-damp consists essentially (up to 95 per cent. or more) of marsh gas or methane, CH_4, the remainder consisting of nitrogen and carbonic acid; hydrogen and some of the higher hydrocarbons have also been found in some samples. Haller and Moureu have found helium with traces of neon (0·003–0·05 per cent.), and argon with traces of krypton and xenon (0·003–0·04 per cent.) in fire-damp. A mixture of air and marsh gas will explode if the mixture contains between 5 and 15 per cent. of marsh gas by volume. The maximum of explosive violence is attained with 9 to 10 per cent. of marsh gas. The igniting point is between 650° and 750° C., and there is always a perceptible 'lag' or delay in the ignition, the amount of which depends upon the temperature. According to Taffanel and Le Floch, mixtures containing only 3 per cent. of marsh gas will ignite at 680° C. and as much as 30 per cent. at 875°. In a mixture of 6·5 per cent. of marsh gas with air, the quantity of gas burnt per second varies from 0·00075 per cent. at 535° C. to 0·05 per cent. at 640° C. According to H. Le Chatelier the igniting point of acetylene is 450° C., hydrogen 550° C., methane and carbonic oxide 650° C. The velocity of propagation of ignition of methane ranges from 0·03 m. per sec. with 6 per cent. of methane to a maximum of 0·61 m. per sec. with 12 per cent., and falls again to 0·1 m. per sec. with 16 per cent. of methane in air. The velocity of the explosive wave in a mixture of methane with pure oxygen is 2,500 m. per sec. Marsh gas has been given off in quantities up to 4,500 cubic feet per ton of coal wrought, and has been shown to exist in coal under pressures up to 40 atmospheres. It is on record that in one mine as much as four million cubic feet of fire-damp has been given off in 24 hours.

Experiments on the ignition of mixtures of methane and air by electric sparks have been recorded by Dr. Thornton (*Trans. Inst. Min. Eng.*, xliv. p. 145, and xlvi. p. 112); the most inflammable mixture is one containing about 7 per cent. of methane. With sparks between copper poles the least continuous current capable of igniting a 9 per cent. mixture was found to be:—

50	100	240	480 volts.
4·0	0·9	0·175	0·05 amps.

With iron poles slightly greater currents are required. With alternating currents of low periodicity, the current required is far greater, ranging from 3 times at 50 volts to 12½ times at 500 volts. The higher the frequency, the larger the current required for ignition.

Principles of Ventilation.

The difference of pressure producing ventilating currents in mines is measured by the water-gauge; a column of 1 in. of water corresponds to about 66 ft. of air at 60° F. and 30 ins. of baro-

metric pressure. The theoretical velocity of air due to such pressure is given by the expression $v = 66\sqrt{h}$, where v is the velocity in feet per second and h the water-gauge in inches. If the friction in the airways of a mine is taken into account, according to Murgue—

$$h = K\frac{l\,p\,v^2}{a} \text{ or } h = K\frac{l\,p\,Q^2}{a^3}$$

where l is the length of the air passage, p its perimeter, a its area, all in feet, and Q the quantity of air in cubic feet per second. Values of coefficient K: for drifts, bricked and arched, K = 0·000,0012; in ordinary rock, untimbered, K = 0·000,0034: timbered in the usual way, dimensions taken inside timbers, K = 0·000,0057. If the quantities and velocities be given in thousands of feet per minute, these coefficients become 0·00033, 0·00094 and 0·00156 respectively; some engineers use Mr. Fairley's coefficient, which is 0·002. The critical velocity of air flowing in circular pipes $= \frac{18}{D}$ feet per min., where D is the diameter of the pipe in feet.

The work required to move a quantity Q of air under a water-gauge of h inches = 5·2 hQ foot-pounds.

Mr. J. T. Storrow has found that the quantity of air flowing through material under 0·25 in. in size at a slow rate varies directly with the pressure and not with the square root.
(*Trans. Inst. Min. Eng.*, lv. 313.)

Measurement of flow of air. — In a pipe circular in section a velocity equal to the mean flow is at 0·15 of radius from the wall of the pipe. In a mine drift the mean of two measurements halfway between roof and floor and one-sixth of the width of the airway from either side will approximate to the mean velocity of the air in the drift. The mean velocity is between 0·7 and 0·85 of the maximum velocity at the centre of the drift, averaging 0·78.

With the ordinary plain Pitot tube, if v be the velocity of airflow in feet per second and h the water-gauge in inches, $v = 66\sqrt{h}$; with the double Pitot tube (one branch facing the other pointing in the direction of the flow) $v = 56{\cdot}5\sqrt{h}$.

If the pressure of air on either side of a regulator or other diaphragm with an aperture of a square feet be determined by water-gauge, and the difference of gauge pressure be d inches, the quantity of air flowing is $40\,a\sqrt{d}$ cubic feet.

Natural Ventilation and Furnace Ventilation.

Natural Ventilation and Furnace Ventilation.—If there be two shafts, the mean temperature of the air in each of which is respectively T and t (in degrees Fahrenheit), the water-gauge due to this difference of temperature will be $\frac{H}{66}\left(\frac{T-t}{459+T}\right)$, where H is the depth of the pit, assuming that the temperature of the atmosphere is 60° and the pressure 30 ins., under which conditions a cubic foot of air weighs 0·0765 lb.; under any barometric pressure of β inches and temperature $t°$ Fahrenheit, the weight of a cubic foot of air is $\frac{1{\cdot}326\,\beta}{459+t}$, by means of which formula the necessary correction can be applied. The number of heat units required to produce the above water-gauge will be $\frac{1{\cdot}326\ Q\ \beta\ (T-t)}{459+t} \times 0{\cdot}2375 = \frac{0{\cdot}315\ Q\ \beta\ (T-t)}{459+t}$ heat units per second.

The grate area is often taken $= \frac{34}{\sqrt{H}} \times \frac{5{\cdot}2\ hQ}{550}$ sq. ft.

In practice, to pass 300,000 cubic feet of air per min. with a 2-in. water-gauge about one ton of coal is burnt per hour.

Fan Ventilation.

Fan ventilation.—If u be the peripheral velocity of the fan blades in feet per second, the theoretical water gauge produced $= \frac{u^2}{68g} = \frac{u^2}{2180}$.

The manometrical efficiency of a fan ranges from about 0·45 for an open-running fan up to about 0·9 for a good modern enclosed fan.

The volumetric efficiency under given conditions is the volume of air actually passed by the fan divided by the volume of the fan × number of revolutions.

The mechanical efficiency is the horse-power required to drive the fan (or the fan and fan-engine, as the case may be) divided by the horse-power in the quantity of air moved = $\frac{5{\cdot}2\ hQ}{550}$. It varies from about 45 to about 75 per cent. in different types of fans.

The equivalent orifice of a mine $o = 0{\cdot}4\ \frac{q}{\sqrt{h}}$, where q represents the quantity of air in thousands of feet per minute, and o the area in sq. ft. The equivalent orifice of British mines is usually between 20 and 30 sq. ft.

If H be the initial water-gauge of a given fan (maximum water-gauge, produced on exhausting out of a closed vessel), the equivalent orifice of a fan, working on a mine with equivalent orifice o, should be $= o\sqrt{\frac{h}{H-h}}$. The inlet area of a fan should be about 20 per cent. greater than its equivalent orifice. The equivalent orifice of a fan should be about three times that of the mine on which it works. The velocity at which air enters the fan orifice should be between 1,000 and 1,500 ft. per min. If k be the manometric efficiency of any fan, according to Murgue—

$$u = \sqrt{\frac{g\ 68\ h}{k}}.$$

To find the horse-power of a motor or engine required to drive a fan under average mine conditions, multiply the number of cubic feet of air by the water gauge and divide this product by 4,500. Example: If a fan is delivering 100,000 cub. ft. of air at 2-in. water gauge, what should be the horse-power of the motor or engine required to drive it?

$$\text{H.P.} = \frac{100{,}000 \times 2}{4{,}500} = 44{\cdot}4. \qquad (\textit{Machinery.})$$

REGULATORS.

Regulators.—If A be the area in sq. ft. of a regulator which is required to produce as much resistance to the flow of air as a roadway of length l, perimeter p, both in feet, a area in sq. ft., K = Murgue's coefficient of friction as above when the quantity of air is expressed in thousands of cubic feet per minute and the pressure in inches of water-gauge, then $A = 0{\cdot}4\sqrt{\frac{a^3}{K\,p\,l}}$. The regulator should be placed behind the last man in the split.

Safety Lamps.

The gauze should contain not less than 784 meshes per square inch.

TABLE SHOWING AVERAGE CANDLE-POWER OF VARIOUS LAMPS (*a*) AT BEGINNING, AND (*b*) AT END OF TEN HOURS' BURNING WITH FIVE DIFFERENT OILS.

Lamp.	No. 1 Oil.		No. 2 Oil.		No. 3 Oil.		No. 4 Oil.		No. 5 Oil.	
	(*a*)	(*b*)	(*a*)	(*b*)	(*a*)	(*b*)	(*a*)	(*b*)	(*a*)	(*b*)
Marsaut	0·73	0·63	0·75	0·64	0·74	0·63	0·72	0·64	0·72	0·64
Donald	0·50	0·37	0·49	0·43	0·48	0·43	0·48	0·44	0·48	0·42
Mueseler	0·54	0·42	0·49	0·40	0·46	0·41	0·49	0·40	0·49	0·38
Davy	0·54	0·44	0·83	0·69	0·78	0·70	0·82	0·75	0·81	0·72
'Geordie'	0·46	0·36	—	—	—	—	—	—	—	—
Clanny	0·78	0·72	—	—	—	—	—	—	—	—
Scotch Davy	0·59	0·48	—	—	—	—	—	—	—	—
Deflector	0·96	0·90	—	—	—	—	—	—	—	—

TABLE SHOWING COST IN PENCE PER 1,000 LAMPS OF ONE AVERAGE CANDLE-POWER HOUR, WITH DIFFERENT OILS.

Oil.	Marsaut.	Donald.	Mueseler.	Davy.	'Geordie.'	Clanny.	Scotch Davy.	Deflector
No. 1	11½	22	14½	18	16	11½	17½	11½
No. 2	19½	33¾	32	19	—	—	—	—
No. 3	25½	43	43½	26½	—	—	—	—
No. 4	35	56	59½	42½	—	—	—	—
No. 5	45¼	73	75¾	43¾	—	—	—	—

The oils used were as follows :—

Oil.	Specific Gravity.	Composition, per Cent.		Cost per Gallon.
		Mineral.	Vegetable.	*s.* *d.*
No. 1	0·820	100	0	0 9
No. 2	0·841	70	30	1 6
No. 3	0·844	50	50	1 9
No. 4	0 865	30	70	2 3
No. 5	0·889	0	100	2 9

Lamps burning benzine of sp. gr. 0·765, costing 1*s.* per gallon, gave the following results :—

	Candle-power.		Cost in pence per 1,000 lamp per average c.p. hour.
	At Beginning.	At End.	
Wolf	0·99	0·94	16½
Protector	0·72	0·66	25½

Gas Caps.

Gas caps are shown in an ordinary safety lamp with the flame turned down so as just not to show any white light, when introduced into an atmosphere containing small amounts of marsh gas or methane, approximately as follows :—

2 % of marsh gas. Cap ¼ in., just visible except at extreme tip.
3 % „ „ „ ½ in., fully formed.
4 % „ „ „ ¾ in., well defined.
4½% of marsh gas. Cap 1 in., well defined.
5 % „ „ „ 2½ ins. „ „
5½% „ „ „ 4 ins. „ „
6 % „ „ „ fills the safety lamp.

Gas-testing lamps burning alcohol will show clearly as little as 0·2 per cent. of marsh gas.

Coal Dust.

Coal-dust.—Three ounces of coal-dust per cubic yard of gallery space is sufficient to produce an explosive mixture; excess of coal-dust prevents neither the initiation nor the propagation of an explosion. Coal-dust giving less than 12 per cent. of volatile matter is practically incapable of initiating an explosion. At least 50 per cent. of inert stone-dust is required to prevent the initiation of an explosion. If less than 75 per cent. of the dust passes the 200 sieve it is difficult to initiate an explosion (abstracted from the Lievin experiments).

The temperature of ignition of coal-dust is about 1,000°C. Mixed with air and introduced into a heated vessel the temperature may be as low as 590°; there is very little lag (*Taffanel and Le Floch*).

Rescue Apparatus.

There are three main types of rescue apparatus :—

(1) The supply of oxygen is maintained by means of compressed oxygen carried in steel cylinders.

(2) The supply of oxygen is obtained from liquid air.

(3) Oxygen is chemically generated from peroxides, usually sodium-potassium peroxide.

In 1 and 2 the expired carbonic acid is absorbed, usually by caustic soda. in 3 the reagent that evolves the oxygen also absorbs the carbonic acid.

Particulars of some forms are as follows :—

Apparatus.	Weight.	Oxygen Capacity.
	Lbs.	Cubic Feet.
Pneumatogen (Type II.)	14½	5·8
Draeger	36–39	8·9
Shamrock	36	9·7
Fleuss	31	8·0
Weg	About 30	5·3
Proto	37	8·5
Meco	39½	8·5
Salvus	16	3·0
Aerolith	22	?
Aerophor	30	?

It is estimated that 120 cubic inches of oxygen per min. is ample for the severest exercise; a man at rest requires about 15 cubic inches, and climbing hills 90 cubic inches per min. The Aerolith uses liquid air containing about two parts of oxygen to one of nitrogen; it is stated that one gallon is sufficient for three hours' work.

The Aerophor holds 10 lbs. of liquid air, equal to about 125 cubic feet.

The following has been found to be a man's average consumption of oxygen per minute, gas dry, at N.T.P.

Rate of doing Work.	Breathing.			
	Air.		Oxygen.	
	Litres.	Cub. in.	Litres.	Cub. in.
At rest	0·36	22	0·32	19·5
3,000 ft.-lbs. per min.	1·12	68·3	0·97	59·2
6,000 " "	1·74	106·2	1·54	95
9,000 " "	2·33	142·2	2·16	131·8

The most economical rate of walking when travelling a flat road and wearing a rescue apparatus—*i.e.* the rate at which a maximum distance can be covered for a given supply of oxygen—is about 2½ miles per hour.

('*Second Report of the Mine Rescue Research Committee of the Department of Scientific and Industrial Research.*')

When the wet-bulb temperature is much above 80°F., a man cannot remain long at work; he can stand a wet-bulb temperature of 120°F. for about five minutes. (*J. S. Haldane.*)

To Detect Carbon Monoxide in the Air.—A Technical Paper (No. 11) of the United States Bureau of Mines suggests the following simple test capable of detecting as little as 0·03 per cent. of carbon monoxide in the air. One or two drops of blood from a pricked finger are diluted with water until this assumes a buff-yellow colour. Some of this discoloured water is placed in two 100 cubic centimetre test tubes, and one of the tubes is to be taken into the mine, where one-half is to be poured away at the place where the air is to be tested, the mine air taking the place of the water poured away. The tube is then to be corked, taken to the surface, and to be shaken for about ten minutes. If the air in the test tube contains CO, the pink colour of the liquid will indicate the presence of hæmoglobin on comparing the tube with the other test tube filled with the normal fluid. Mr. Ivor Graham has shown that carbon monoxide is a normal constituent of the air of coal mines over 1,500 ft. deep, being produced by the slow oxidation of carbonaceous material at the coal face, in the roads and in the goaf; it is usually under 0·005 per cent., but in a few cases 0·012 per cent. has been found.

('*Trans. Inst. Min. Eng.*,' Sept. 1920.)

Spontaneous Combustion.

Work in the Doncaster Coal Owners' Laboratory has shown that the liability of a coal to spontaneous combustion in the goaf depends, other things being equal, upon its capacity for absorbing oxygen. It appears that a coal, 100 grammes of which ground to 200 mesh, absorbs less than 200 c.c. in 96 hours at 30°C., is only liable to gob fires when the working conditions especially favour the latter. Coals liable to fire absorb over 300 c.c. in the same time. Presence of pyrites, especially when finely divided, increases the liability to spontaneous combustion.

Fire Extinction.

Investigations have been made recently into the scientific side of mud-jet working for fire extinction in colliery workings, and it has been decided that the material of the mud, some of which should be of a lime and some of a clay character, should consist of sifted earth of 5 mm. mesh, boiler ash, dust from the cleaning of blast-furnace gas, and even combustible material, such as the refuse of coal washing, can be added to make up bulk without any risk should nothing more suitable be at hand. In the majority of instances the mud tank can be so placed as to operate by gravity, but steam or compressed air pressure can be used. It has been found that if a tank is placed at a height of, say, 15 yards, it will force the mud a horizontal distance of 150 yards, even allowing for fairly sharp bends in the conducting pipes. (*Fire.*)

Electric Signalling in Coal Mines.

A circular issued by the Home Office points out that while there is no difficulty in constructing bells and relays that will comply with the requirements laid down—i.e. which will not 'spark'—most of those in ordinary use in coal mines do not comply with the provision of General Regulation 132; and it states that in mines to which this regulation applies steps must be taken without delay to bring into compliance with the regulation any existing installations which

do not already comply, while no new apparatus must be installed except such as does strictly comply. The fact is emphasised in the report that with the usual type of bell and magnitude of battery at present employed, nearly every break-flash that occurs when the bare signal wires are separated would ignite a mixture of firedamp and air containing between 7·5 and 9·5 per cent. of methane, were such a mixture to surround the wires at the time.

Relays, although not requiring for their action so great a battery power as bells, have owing to their higher inductance a lower 'igniting-current' at which the break-flash on the signal wires becomes dangerous. At the present time, with few exceptions, the battery power used on relays is in excess of that sufficient to give a dangerous break-flash at the signal wires. The commonest kinds of relays are dangerous when used with a battery of more than four wet Leclanché cells, or with any current in excess of the current given by such a battery.

The report shows in detail how the bare wire system of electrical signalling as commonly employed can be rendered quite secure from any danger of the ignition of inflammable gases by the break-flash at the signal wires or at the contacts of the signalling instruments.

In order to secure a safe bare-wire signalling system it is necessary in the first place that the battery power employed on any one circuit should be limited, and, in the second place, that the signalling instrument, whether bell or relay, should comply with certain requirements set out in the report.

The maximum pressure allowed by the General Regulation (No. 134 (a)) for a signalling circuit is 25 volts, and from the point of view of safety a pressure of 25 volts is not excessive provided that, as is usual, wet Leclanché cells (quart size) are employed.

Systems in which the battery used consists of dry primary cells or secondary cells, or in which continuous or alternating current generators are employed, can be rendered safe if, in addition to the use of anti-sparking devices, sufficient non-inductive resistances are permanently installed in the circuit.

Both bells and relays should have flame-tight covers (preferably locked), and should be so constructed and maintained that when included in a circuit with a battery at 25 volts the break-flash produced, when bare signal wires are separated after giving a signal, is incapable of igniting an 8 per cent. methane air mixture. (*Times Engineering Supplement.*)

ORE DRESSING AND COAL WASHING.

(For details see 'The Dressing of Minerals,' by Henry Louis, from which the following is mainly abstracted.)

The operations included under the head of dressing comprise all the operations between the extraction of the crude mineral from the mine and rendering it merchantable, thus forming a link between the operations of the miner and the metallurgist. By common consent, gold milling is generally looked upon as a dressing operation, though it is doubtful whether cyanidation should also be included.

The various operations consist of :—

Hand picking or sorting.

Comminution (coarse breaking or crushing and fine breaking or grinding).

Sizing (preliminary or rough sizing and final or fine sizing).

Classifying.

Separation by differences of specific gravity, magnetism, electric conductivity, or surface tension.

Usually a more or less complicated series of operations is required, especially in the case of complex ores, and these are usually indicated by means of flow sheets.

Let the weight of feed to any concentration process be A and its assay a per cent., the weight and assay of concentrates be B and b and of tails C and c respectively, then the

$$\text{Enrichment ratio} = \frac{b}{a} = \frac{\%\ \text{Recovery}}{\%\ \text{Concentration}}.$$

$$\%\ \text{Concentration} = \frac{100\text{B}}{\text{A}} = \frac{100(a-c)}{b-c}.$$

$$\%\ \text{Recovery} = \frac{100b(a-c)}{a(b-c)} = \frac{\text{B}100b}{\text{A}a} \cdot \text{A} = \frac{\text{B}(b-c)}{a-c}.$$

$$\%\ \text{Efficiency of concentration} = 100\frac{\text{B}}{\text{A}}\left(\frac{b}{a} - \frac{100-b}{100-a}\right) = 100\frac{a-c}{b-c}\left(\frac{b}{a} - \frac{100-b}{100-a}\right) =$$

$$100\ \frac{\%\ \text{Recovery} - \%\ \text{Concentration}}{\%\ \text{Waste in feed}}.$$

(*R. T. Hancock.*)

Sorting is performed either on floors or on picking belts or tables. An ordinary picking belt may be of iron plates 4 ft. wide, 50 to 100 ft. long, travelling at 40 to 65 ft. per minute. Pickers stand on both sides, 7 ft. to 15 ft. apart; each picker can treat 1–3 tons of coals per hour.

Power required to drive, 2½ to 5 h.p. Upkeep, about 50*l.* per annum.

Rubber-covered canvas belts about 32 ins. wide are also used, and will carry 25 to 50 tons per hour at speeds of 30 to 60 ft. per minute.

Circular tables are 3 to 4 ft. wide, 10 ft. to 18 ft. in diameter, revolving with a peripheral speed of 40 to 60 ft. per minute, and can deal with 30 to 70 tons of mineral per hour.

Comminution.—Rough breaking is done by jaw breakers, either reciprocating like those of the Blake, Dodge, etc., type, or gyrating like the Gates type. The former have been built to take pieces up to 5 ft. by 7 ft., requiring 300 h.p. to drive, and breaking 300 tons per hour. Smaller breakers usually break 1 ton per hour for a consumption of 2–3 h.p. The gyrating crusher is better suited to very large outputs, but cannot take such large pieces, and appears to be rather more economical of power.

Fine Crushing.—Rolls are used for medium and fine crushing. Let r be the radius of the particle to be broken and d the radius of the particles in the crushed product (both considered as spheres); the minimum radius of the roll should be $> 25\ (r-d)$.

For fine crushing to about ¼-in. mesh the following table shows the general practice:—

Rolls.		Revs. per minute.	Horse-power required.	Cwts. crushed per hour.
Diam.	Face.			
10½ ins.	10½ ins.	130	3	25
12½ ,,	10½ ,,	110	4½	45
16 ,,	10½ ,,	90	6½	65
21 ,,	10½ ,,	75	9½	100
27 ,,	11 ,,	45	12½	145
37 ,,	12 ,,	45	16	200

The peripheral speed should be greater the finer the product required; for grinding to 40 mesh the speed should be 1,000 ft. per minute.

In large plants three or four sets of rolls are placed in series so as gradually to reduce the ore to the desired size. At Mount Morgan, such a plant consisted of eight sets of rolls in two series of four, thus:—

26 ins. diam.,	15 ins. face,	set	⅜ ins. apart,	112 revs. per min.
26 ,,	15 ,,	,,	$\frac{3}{16}$,, ,,	,,
30 ,,	16 ,,	,,	$\frac{1}{16}$,, ,,	,,
30 ,,	16 ,,	in contact	,,	,,

The total power consumption was 100 h.p. and the crushing capacity 125 tons per 24 hours crushed to 20 mesh (0·025 in.); the wear on the steel roll-shells was 0·108 lb. of steel per ton of ore crushed.

Stamps.—The ordinary gravitation stamp is used more largely for gold milling than for other purposes, but also for crushing tinstone, etc. The complete stamp consists of the head, shoe, stem and tappet, the weight of which may be up to 1,500 lbs. The relative weights are about 30, 17, 40, 13. It is lifted by a cam forming the involute of a circle; if h be the lift of the stamp, r the radius of the pitch circle of the involute, and a the angular motion of the cam during the lift, $h = \frac{\pi r a}{180}$. The speed is usually about 90 drops per minute.

If n be the number of drops per minute, h the drop in inches, s the number of stamps, and w the weight of a stamp in pounds, the power required is approximately $\frac{nhsw}{300{,}000}$. (For a more exact formula see 'A Handbook of Gold Milling,' by H. Louis.) The average crushing capacity is 2–8 tons per 24 hours for a 1,000 lb. stamp. The Husband atmospheric stamp with two heads requires 35 h.p. to work it, and can crush 40 tons of hard tinstone per 24 hours down to 0·048 in.

Steam stamps are used mainly for crushing the copper-bearing rocks of the Lake Superior Mines, down to about ¼-in. mesh. One such stamp will crush 10 tons per hour, the efficiency being about 1·75 tons per i.h.p. per 24 hours.

Ball mills have been made both for dry and wet crushing. The Krupp mill is a dry-crushing mill; the No. 5 size, which is largely used, is 86 ins. diameter by 46 ins. length, makes 20–25 r.p.m., weighs 182 cwts., and a set of balls weighs 18 cwts. At Mount Morgan these

mills require 13 h.p. and crush 22·7 tons per 24 hours to 20 mesh (0·025 in.). The balls wear at the rate of 0·725 lb. and the hunch plates at the rate of 0·681 lb. per ton of ore crushed.

Wet crushing ball mills are 60 ins. to 80 ins. in diameter and about 40 ins. long. A charge of balls for such a mill weighs about 2 tons; it is run at 25 to 30 r.p.m., takes from 25 to 35 h.p. to drive it, and will crush 25 to 100 tons down to 0·02 mesh per 24 hours; the water consumption is about 65 gallons per minute.

The tube mill is also used wet or dry, and is in effect an elongated ball mill, 3 ft. to 5 ft. in diameter and 13 ft. to 26 ft. long. A tube mill 4 ft. in diameter, 16 ft. 6 ins. long, crushed in Western Australia 38 tons of sand per 24 hours, 95 per cent. of the product being finer than 100 mesh, requiring 30 h.p. to drive it. Such mills are lined with silex, chilled iron, or hard steel bars, and are usually charged with flints. According to Mr. Davidson, the best number of r.p.m. $=200 \div \sqrt{d}$, where d is the internal diameter in inches; the weight of flints in pounds should be $N \div 44$, where N is the internal capacity of the mill in cubic feet. Western Australian practice corresponds nearly to $N \div 60$.

The Marathon mill uses rods in place of balls; a mill 3 ft. diam., 7 ft. long, charged with 7,000 lbs. of rods $\frac{1}{2}$ in. to 2 in. diam., running at 30 r.p.m., crushed 18 tons per hour with a consumption of 12·5 h.p., using 42 U.S.A. gallons of water per minute. The feed was below $\frac{1}{4}$-in. mesh and the product was ground to $\frac{1}{14}$-in. mesh, 14 per cent. being below $\frac{1}{200}$-in. mesh. The wear of the line plates was 0·14 lb. and of the rods 0·4 lb. per ton of feed.

(*Trans. Amer. Inst. Min. Eng.*, lv., p. 678; lvii., p. 355.)

The Hardinge tube mill has the form of two cones base to base. An 8 ft. Hardinge mill requires 50 h.p. to drive it, and requires about 10 h.p. hours per ton crushed to about 48 mesh.

An 8 ft. × 22 ft. mill crushed 200–250 tons per 24 hrs. using about 56 h.p., with a charge of 5 tons of Danish pebbles wearing at the rate of 2·16 lbs. per ton of feed; with steel balls instead of pebbles 360–400 tons were crushed per 24 hours.

(*Trans. Amer. Inst. Min. Eng.*, lv., p. 678.)

The Marcy mill is a short mill (5–6 ft.) with perforated diaphragm at the discharge end, from 2 ins. to 48 mesh. An 8 ft. by 6 ft. mill driven by a 225 h.p. motor crushes 550 tons per 24 hours at 24 r.p.m., carrying 30,000 lbs. chrome steel balls.

(*C. T. Van Winkle, Trans. Amer. Inst. Min. Eng.*, vol. lix. (1918), p. 227.)

The Huntingdon mill is made in three sizes, 3 ft. 6 ins., 5 ft. and 6 ft. diam.; No. 2 is most used; it weighs about 5 tons; consumes 12 h.p.; makes 60–70 r.p.m., and will crush about 10 tons per 24 hours to about 15 mesh.

The Arrastra is 10 to 20 ft. in diameter, has usually four dragstones, 6–8 cwts. in weight. At 6 to 12 r.p.m. a charge of 1 to 3 tons is ground in 2–3 hours.

The Chilian mill has 2–3 rollers, 4 to 6 ft. in diameter, takes up to 75 h.p., and crushes up to 150 tons per 24 hours.

Sizing.—For coarse screening fixed grizzlies or 'jigging' screens are used. For medium and fine screening mostly trommels, 8 ft. to 2 ft. in diameter by 12 ft. to 3 ft. long; the peripheral velocity is usually 50 to 200 ft. per minute. The slopes may vary from 5° to 14°, averaging about 7°. A set of seven trommels, 3 ft. diam., 5 ft. long, will size about 7 tons of ordinary crushed material per hour, and require up to 5 h.p. to drive it.

Classification.—This term applies to the separation into groups of equal falling particles. The terminal velocity of a particle falling freely in water is approximately $V = 2{\cdot}6\sqrt{D(S-1)}$, where V is the velocity in meters per second, D the diameter in meters of the screen mesh through which the particle just passes, and S the density of the mineral. This velocity will be attained after the particle has fallen a distance equal to $V^2 \div 4$ approximately. When V is less than 0·5 to 1, according to the substance, the law on which these formulas are based (friction $\propto$ velocity^2 and viscosity negligible) no longer holds good. The particles fall more slowly, obey a different physical law, and are known as slimes, which are incapable of classification.

Spitzkasten: the first box should be 2 ft. wide for 10 cub. ft. pulp per minute, or 1–2 cwts. of solid matter; boxes may increase in geometrical progression with factor of 1·5; length of first box about 6 ft., increasing by 3 ft. for each successive box.

Trough classifiers 10 to 20 ft. long, 1 ft. wide at narrow end, will treat 100 tons per 24 hours, with 100 cub. ft. of water per ton of crushed material.

Jigs.—The following represents the general modern practice:—

Diam. of particle .	0·25	0·50	0·75	1·00	1·25	1·50	1·75	2·00
Length of stroke .	0·4	1·2	1·55	1·8	2·0	2·15	2·3	2·4
No. of strokes per min.	200	160	145	130	125	125	125	125

Round buddle; diam. 18 ft. to 25 ft.; arms 5–10 r.p.m. Capacity 1½–3 cub. ft. per min., carrying 28 to 56 lbs. material; time of filling 3–10 hours.

Slime table; diam. 15 ft. to 25 ft.; ½–1 r.p.m. Pulp 1½–3 cub. ft. per min., carrying 4 to 7 lbs. per cub. ft. Clear water 1½–3 cub. ft. per min. Power required ½–1½ h.p.

Frue vanner; belt surface 4 ft. by 12 ft.; fall 3 ins. to 6 ins.; travel 6 ft. per min.; strokes 200 per min. Capacity 0·25 to 0·5 cub. ft. pulp per min.; 5 to 8 tons material 24 hours. Clear water ¼ of pulp. Power required ½ h.p.

Lühring vanner; belt surface 3 ft. 6 ins. by 12 ft.; travel 8–12 ft. per min.; 160–180 strokes per min. Capacity 2½–7½ tons per 24 hours; clear water 1–2 cub. ft. per min. Power required ⅓–½ h.p.

Wilfley table; 16 ft. long, 6 ft. wide, tapering to 3 ft. Will take particles up to ½ in. 240 strokes per min., ¾ in. long. Capacity 25 to 50 tons per 24 hours. Clear water 1 to 3 cub. ft. per min. Power required 1 h.p.

Coal Washing.

Coal as it comes from the mine is first screened, usually over a 2 ins. to 2¾ ins. screen; the oversize drops on to picking belts, where shale, dirty coal, etc., is picked out. The undersize is taken to a washery, especially when it is required for coke-making. A jigging screen with ¾-in. holes will screen about 1 ton per hour for each 0·75 sq. ft. of screening surface.

When the separation of the clean coal from the accompanying shaly matter is easy, or when the products are not required in the highest possible state of purity, a simple form of washer may be used. Such is, e.g., the Elliott trough washer, capable of treating 5 to 10 tons of small coal per hour with a water consumption of 1,750 gallons per ton of coal washed. The Blackett washer is similar in principle, but the fixed trough with the moving dam-plates is replaced by a revolving drum within which is a spiral baffle-plate; it will treat 10 tons of small coal per hour, requiring 3,000 gallons of water in circulation per ton of coal washed. The Robinson washer works on the principle of a spitzkasten, with upward flow of water and a revolving stirrer; it can treat 15 to 20 tons of small coal per hour.

The purity of the washed coal is usually determined by floating it in solutions of known specific gravity; coal that floats in solutions of sp. gr. 1·35 to 1·45 is considered clean coal. Most plants for such complete washing make use of jigs (bashes or boxes), and the coarser refuse is sometimes crushed and re-washed. See Flow Sheet No. I, p. 2210.

The Coppée Washery is typical of the more usual form of plant. The unwashed coal, say under 2 ins. to 3 ins., is sized before washing. The washing is carried out in two types of boxes, viz.: (*a*) Small coal feldspar boxes, which treat all the coal below ½ in.; (*b*) nut coal type of box, which treats the various sizes below 3 ins. and above ½ in. These sizes vary according to local conditions and the requirements of the market. The nut washers are 8 ft. deep, and the sieves are 5 ft. long and 3 ft. to 5 ft. wide, each washer treating 2·5 to 3·5 tons per hour per foot of width of screen. The more important data affecting the operations of nut washers are shown in the following table:—

Size of Nuts.	Depth of Layer o Shale on Sieve.	Length of Stroke.	No. of Strokes per Minute.	Mesh of Sieve.
¼ in. to ½ in.	2½ ins.	2½ ins.	80	1/10 in.
½ ,, ,, 1 ,,	3 ,,	3 ,,	75	⅛ ,,
1 ,, ,, 2 ins.	3½ ,,	3½ ,,	70	¼ ,,
2 ins. ,, 3½ ,,	4¼ ,,	4¾ ,,	65	3/10 ,,
3½ ,, ,, 5 ,,	5½ ,,	6¾ ,,	60	5/10 ,,

The Feldspar Washer is built in two compartments, each 4 ft. long, making a total length of 8 ft. by 2 ft. 6 ins. wide, the box being 5 ft. deep; such a washer can wash 7 to 10 tons of small coal per hour up to ½ in. in size. The following are the leading data:—

	1st Compartment.	2nd Compartment.
Thickness of layer of feldspar	2½ ins.	2½ ins.
,, ,, shale	2/10 in.	2/10 in.
Size of pieces of feldspar	2/10 in. to 1 in.	2/10 in. to 5/10 in.
Length of stroke	0·55 in.	0·47 in.
No. of strokes per minute	165	165
Mesh of screen	0·55 in.	0·47 in.

A plant to wash 100 tons per hour, 50 per cent. on nut washers and 50 per cent. on feldspar washers, would require four of the former, 4 ft. wide, and six of the latter. Such a plant would require in circulation about 135,000 gallons of water, and make-up water amounting to between 2,800 and 3,500 gallons per hour.

When the refuse from the nut washers contains sufficient intergrown coal to be worth treating, it is crushed, generally in a disintegrator, and the crushed material is re-washed on feldspar washers.

A coal washery may require from 1·5 to 3·5 h.p. for each ton of unwashed coal treated per hour, varying with (*a*) the total output of the washery (a large washery requiring a relatively smaller h.p. per ton); (*b*) the quantity of interstratified coal, and whether the larger size is crushed and washed together with the smaller size, or whether the smaller size only is re-washed: (*c*) the type and capacity of draining and storage bunkers, and whether apparatus is installed for mixing the various products.

Messrs. Simon-Carves, Limited, build washeries on the so-called Baum principle, in which washing precedes classification. The slack below about 2 ins. is delivered to a bash having an area of about 0·8 sq. ft. per ton per hour; the washed coal then passes to a screen of about ⅜-in. mesh; the over-size is clean coal, and the under-size goes to a second bash having an area of about 1 sq. ft. per ton of coal per hour, the product being clean coal and refuse. The dirt produced in the first washing can be further crushed and washed over again if necessary. A plant to treat 100 tons of slack per hour would, therefore, require a first bash with an area of 80 sq. ft., and a second bash with an area of 100 sq. ft.; the water in circulation would be about 130,000 gallons per hour, and the make-up water required about 2,500 gallons.

In the United States small coal is being largely washed on shaking tables of the Wilfley type; such a table will treat 5 to 8 tons per hour of coal under ⅜-in. mesh, requiring about 1 h.p.

Magnetic Separation.

Maxima of magnetic susceptibility of minerals by volume in C.G.S.

Soft iron		400
Magnetite (pure crystallised)	Piedmont	3·12
Magnetite	Hay Tor, Devonshire	1·44
Magnetite	Altenfjord, Norway	0·27
Magnetite	Lake Champlain, U.S.A.	0·234
Magnetite (altered carbonate, impure)	Bettwys Garmon, Carnarvonshire	0·06
Red Hæmatite	?	0·00073
Red Hæmatite (crystallised)	Cumberland	0·00017
Specular Hæmatite	Nova Scotia	0·00106
" "	?	0·0005
Brown Hæmatite	?	0·00042
Brown Hæmatite (pure crystallised)	Nova Scotia	0·00011
Franklinite	New Jersey	0·0037
"	" "	0·00253
Ferrous Sulphide	Artificial	0·064
Spathic Ore	?	0·000559
Clayband	?	0·00069
Impure Carbonate Ore	Northamptonshire	0·00056
Ilmenite	India	0·00147
Monazite	Travancore	0·000069
Zircon	Ceylon	0·00000055
Pleonaste	?	0·000102
Gahnite	?	0·000054

Common non-ferrous minerals, e.g. mica, quartz, felspar, calcite have susceptibilities < 0·000001. 'Strongly' magnetic minerals have susceptibilities > 0·001. 'Feebly' magnetic minerals between 0·001 and 0·0001. (After Prof. Ernest Wilson.)

Magnetic separators: (1) For minerals of high magnetic susceptibility:—

Dry working, e.g. Wenström: drum 30 ins. diam., 24 ins. face. Capacity 5–7 tons per hour; will take lumps up to 7 lbs.; 30 r.p.m. Current 15 amperes at 120 volts.

Wet working, e.g. Gröndal: 24 ins. wide, 24 ins. diam., 100 r.p.m. Capacity up to 3·5 tons per hour. Current 10 amperes at 110 volts.

(2) For minerals of low magnetic susceptibility:—

Dry working, e.g. Rowand-Wetherill. Belt 18 ins. wide, three electro-magnets taking respectively 5, 15, and 30 amperes at 110 volts. Capacity, 0·25 to 1 ton per hour.

Wet working, e.g. Ulrich.

Flotation Processes.

These may be classified as follows:—

I. *Film Flotation*, utilising differences of surface tension on particles at an air-water interface—e.g. De Bavay, Macquisten processes.

II. *Oil Flotation*, utilising differences of surface tension in an oil-water medium where the particles are buoyed up by oil—e.g. First Elmore process.

III. *Adhesive Processes*, utilising differences of surface tension between particles and oil or grease, causing differential adhesion to oiled or greased surfaces—e.g. Murex, Cattermole, greased-plate processes.

IV. *Froth Flotation*, utilising differences of surface tension at gas-water interfaces, where the particles are buoyed up by bubbles of gas:—

(*a*) Where the bubbles are produced by chemical action—e.g. Potter, Delprat processes.

(*b*) Where the bubbles are produced by releasing the air dissolved in water—e.g. Elmore vacuum process.

(*c*) Where the bubbles are produced by mechanical means—e.g. Minerals Separation, Callow, Janey, K. & K., Rork processes.

(See also 'Froth Flotation: its Commercial Application and its Influence on Modern Concentration and Smelting Practice,' Walter Broadbridge, *Bull. Inst. M.M.*, January 1920.)

Costs of Flotation Machines.

Tons capacity for 24 hours.	First Cost per ton of daily capacity.		Operating Costs per ton daily capacity.	
	Mechanical Agitation.	Pneumatic Agitation.	Mechanical Agitation.	Pneumatic Agitation.
25	\$30–50	\$25–40	\$0·20–0·75	—
50	25–45	12–20	—	\$0·20–0·75
100	20–40	8–12	0·35	0·35
250	15–35	6–8	0·28	—
1,000	12–25	4–6	0·17	0·17

(*Ralston.*)

Reagents used:—

Gangue modifying:—Acids, alkalies, silicates, carbonates, and other salts.

Froth producing:—Soluble oils, essential oils, cresylic acid, amyl alcohol, etc.

Froth stabilising:—Insoluble oils, petroleum, etc.

Surface Tension of Liquids against Air.

		Dynes per sq. cm.			Dynes per sq. cm.
Water	(at 0° C.)	75·8	Water with 0·14 per cent. cresol	(at 23° C.)	71·5
Water	(,, 20° C.)	75·1	Water with 0·14 per cent. amyl alcohol	(,, 23° C.)	68·4
Phenol	(,, 41° C.)	37·0	Water with 0·134 per cent. saponine	(,, 23° C.)	48·7
Cresol	...	34·8	Water with eucalyptus 'solute'.	(,, 20° C.)	44·6
Olive oil	...	32·0			
Petroleum	...	27·7			
Turpentine	...	25·6			

Dilute sulphuric acid reduces the contact angle and hysteresis range of that angle far more for quartz, silicates, and oxides than it does for metallic sulphides; oiling the latter greatly increases the contact angle and the hysteresis range.

(*H. L. Sulman*, 'A Contribution to the Study of Flotation,' *Bull. Inst. Min. Met.*, November 1919.)

The Inspiration Consolidated Copper Company's plant at Miami, Arizona, treats 15,000 tons in 24 hours. The ore contains 1¾ per cent. of copper, mainly in finely disseminated sulphides. Flotation reagents used, 1¾ lbs. per ton of ore. Recovery, 85 per cent. of total copper, 90 per cent. of copper present as sulphide; concentrates contain 20 per cent. of copper.

(*Trans. Amer. Inst. Min. Eng.*, lv., 1916, p. 576.)

Finely-ground coal may be froth-floated from shale, using 1 lb. of cresol and ½ lb. of paraffin per ton of coaly shale; the latter contains about 65 per cent. of ash, the clean coal about 8 per cent.

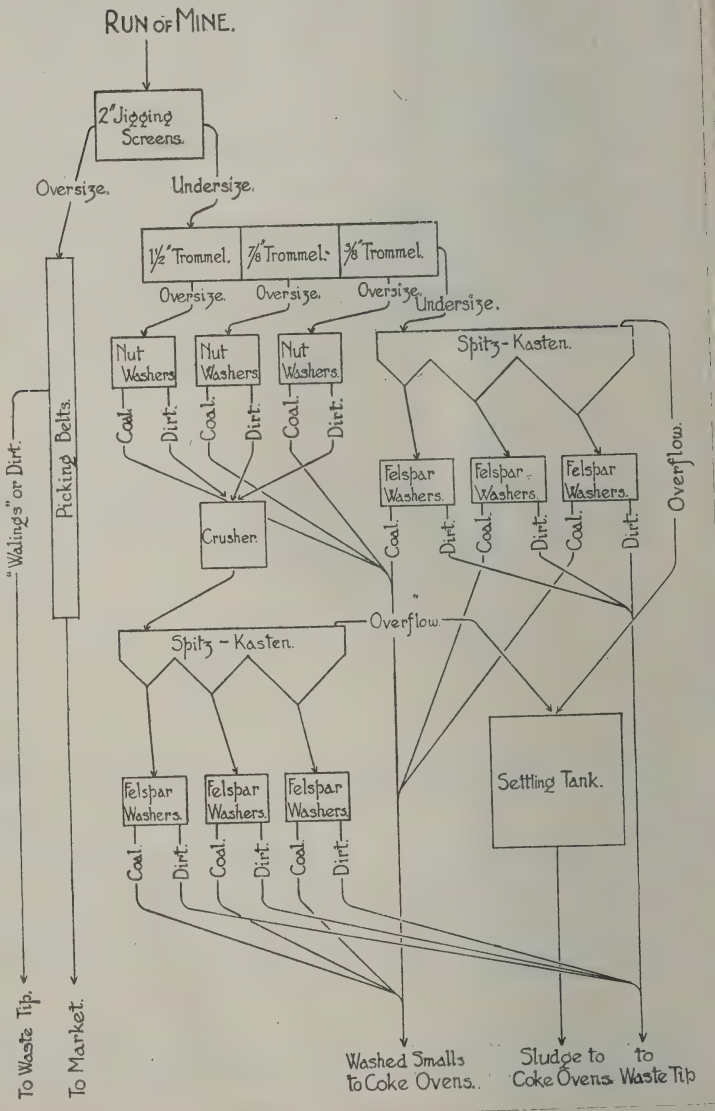
Electrostatic Separation is used in some special cases—e.g. for concentrating rosin blende, molybdenite, and graphite (Blake-Marsden and Huff processes).

FLOW SHEETS.

The diagrams given on pp. 2210–2216 are specimen flow sheets, illustrating the sequence of operations in certain typical cases:—


I. Coking coal. II. Low grade magnetic iron ore. III. Quartz carrying cupriferous pyrites. IV. Lake Superior copper ore. V. Lead ore. VI. Tinstone containing wolfram. VII. and VIII. Copper ore by Froth Flotation.

FLOW SHEET I.



RUN OF MINE.
2" Jigging Screens.
Oversize.
Undersize.
1½" Trommel.
⅞" Trommel.
⅜" Trommel.
Oversize.
Oversize.
Oversize.
Undersize.
Nut Washers
Nut Washers
Nut Washers
Coal.
Dirt.
Coal.
Dirt.
Coal.
Dirt.
Spitz-Kasten.
Felspar Washers.
Felspar Washers.
Felspar Washers.
Coal.
Dirt.
Coal.
Dirt.
Coal.
Dirt.
Overflow.
Crusher.
Overflow.
Spitz-Kasten.
Settling Tank.
Felspar Washers.
Felspar Washers.
Felspar Washers.
Coal.
Dirt.
Coal.
Dirt.
Coal.
Dirt.
"Walings" or Dirt.
Picking Belts.
To Waste Tip.
To Market.
Washed Smalls to Coke Ovens.
Sludge to Coke Ovens.
to Waste Tip


FLOW SHEET II.

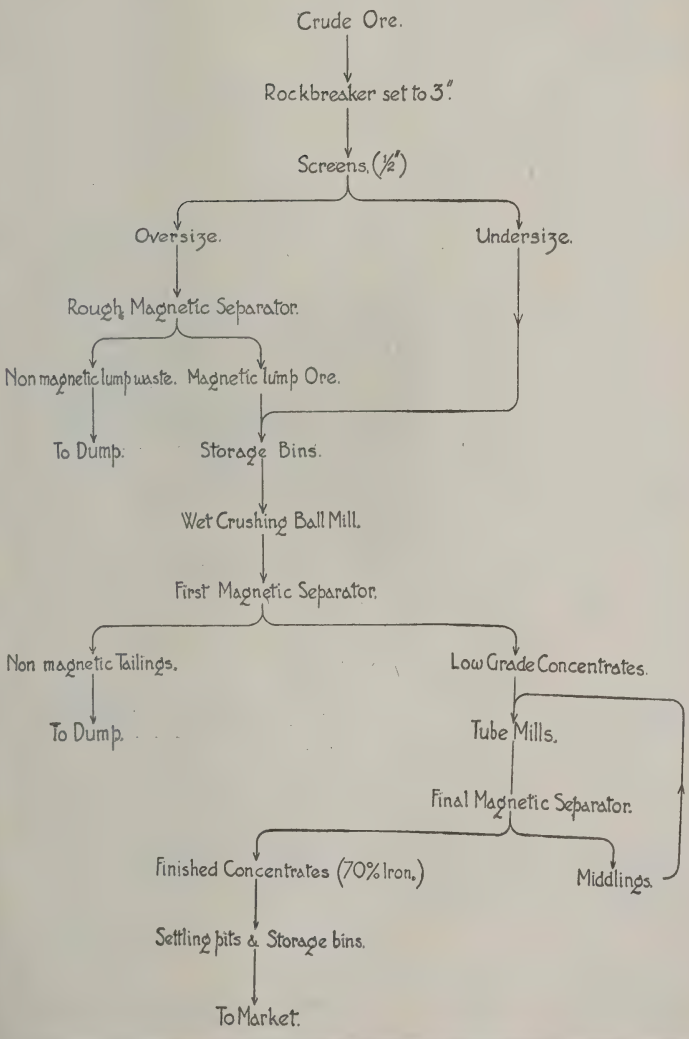LOW GRADE MAGNETIC IRON ORE. (with about 25% IRON.)



FLOW SHEET III.

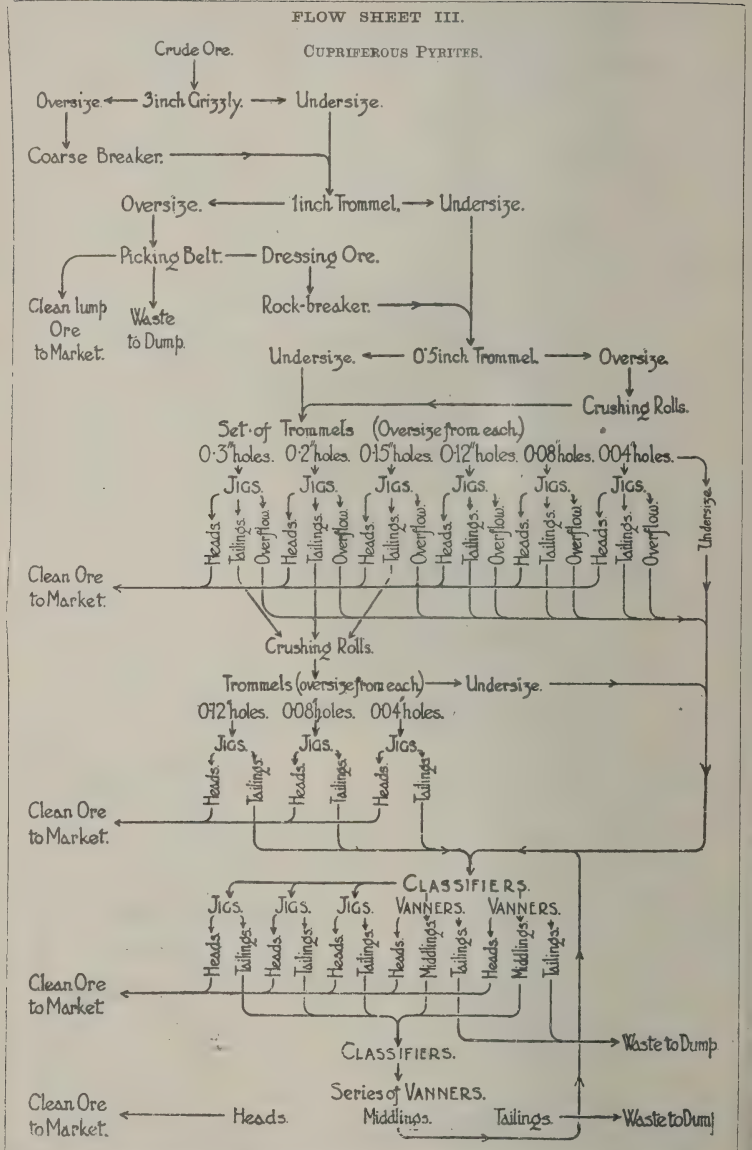


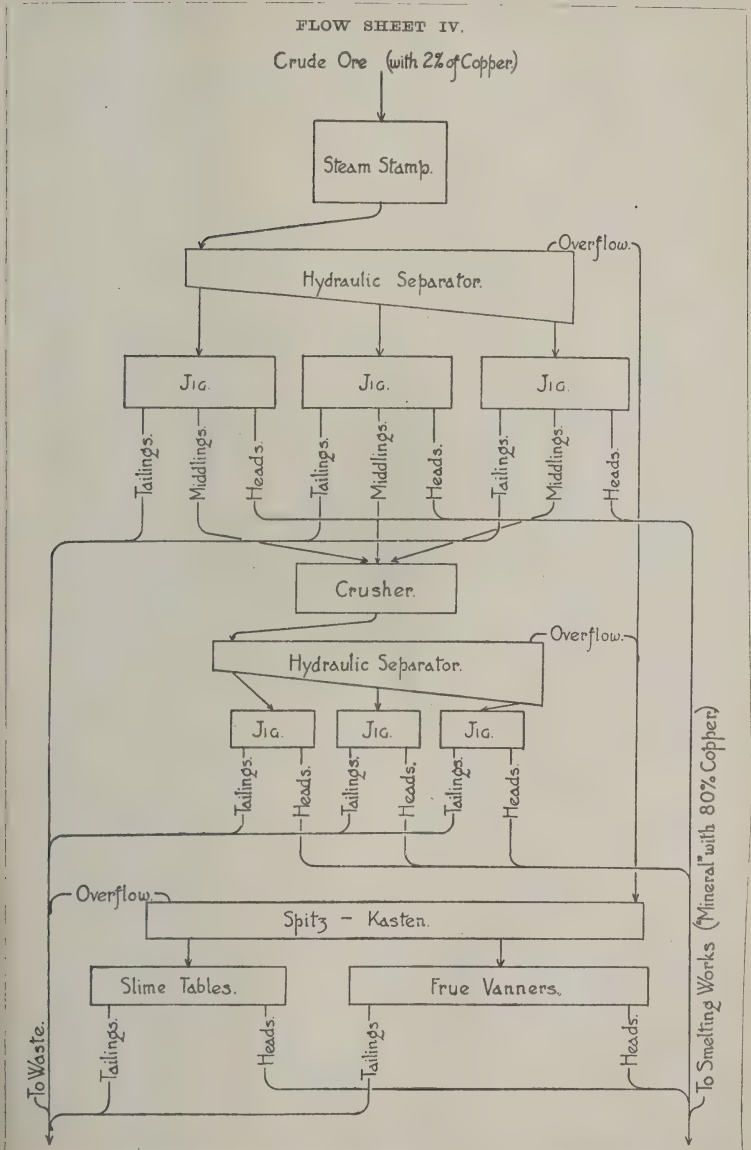
FLOW SHEET IV.
Crude Ore (with 2% of Copper)
Steam Stamp.
Overflow.
Hydraulic Separator.
Jig.
Jig.
Jig.
Tailings.
Middlings.
Heads.
Tailings.
Middlings.
Heads.
Tailings.
Middlings.
Heads.
Crusher.
Overflow.
Hydraulic Separator.
Jig.
Jig.
Jig.
Tailings.
Heads.
Tailings.
Heads.
Tailings.
Heads.
Overflow.
Spitz - Kasten.
Slime Tables.
Frue Vanners.
Tailings.
Heads.
Tailings.
Heads.
To Waste.
To Smelting Works (Mineral with 80% Copper)

FLOW SHEET V.

Lead Ore.
Crude Ore Bin.
Breaker.
Conveyor & Picking Belt.
Coarse Rolls.
Trommel (1)
Undersize.
Oversize.
Elevator
Trommels
3/4"
5/8"
1/2"
3 mesh
16 mesh
Jigs
I
II
III
IV
V
VI
VII
Hydraulic Classifier
Medium Rolls.
Fine Rolls.
Wilfley Tables.
Tailing Launder.
Concentrates Bin.

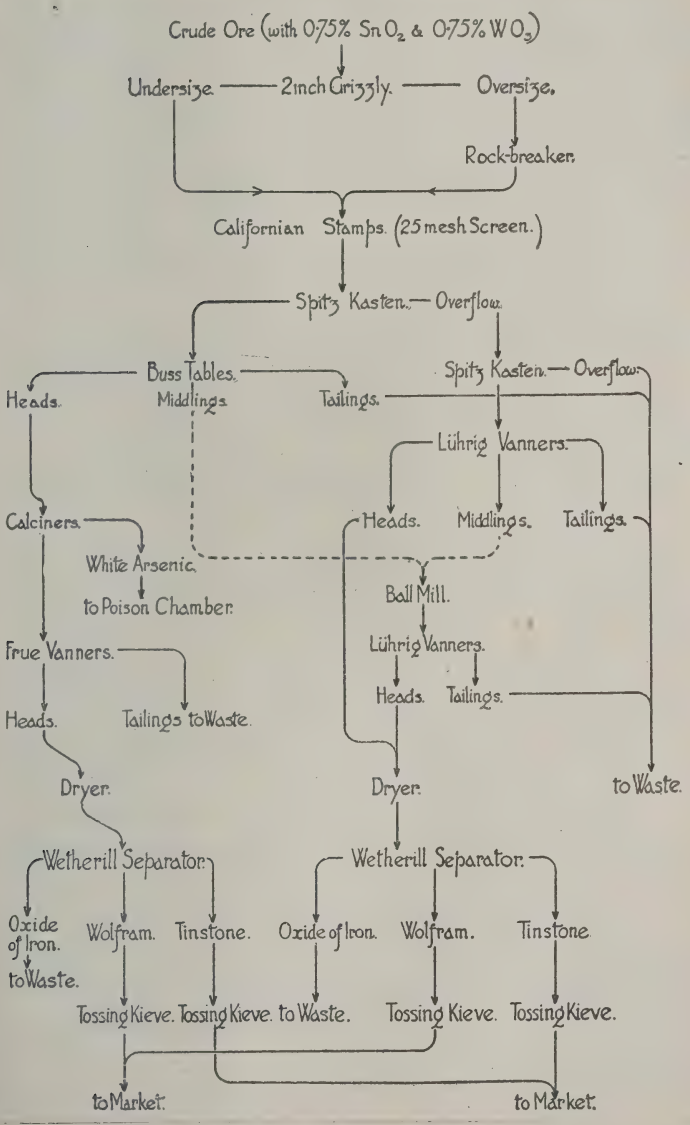
FLOW SHEET VI.



TREATMENT OF COPPER ORE BY FROTH FLOTATION.


FLOW SHEET VII.

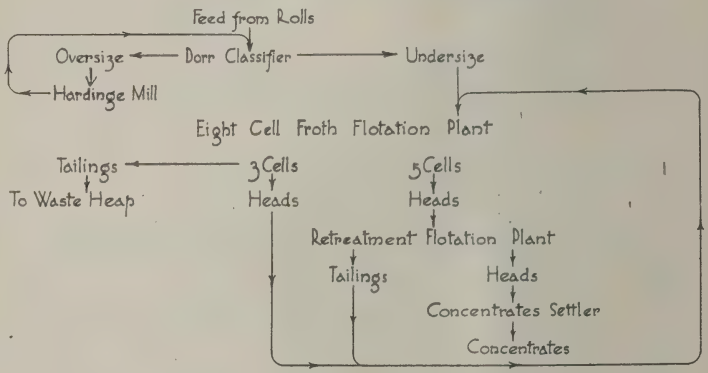Where the Frothing Agent is added in the Flotation Boxes.



FLOW SHEET VIII.

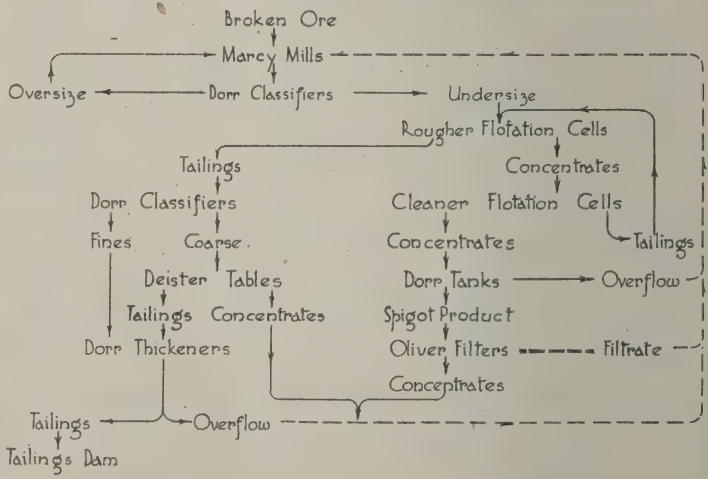Where the Frothing Agent is added during Grinding.



GOLD MILLING.

With the improvements in the cyanide practice and also with the exhaustion of the rich free milling surface ores of various camps, which rendered such improvements necessary, have come changes in the process of treating gold ores. Instead of the simple Californian practice of crushing by 900 lb. stamps to about 40 mesh, amalgamating either in or outside the battery, concentrating the sulphides on vanners or shaking tables, chlorinating the concentrates, and sometimes treating the tailings by cyanidation, the 'all-sliming' process has come into force.

As practised on the Rand, the ore is screened through grizzlies with bars 2⅜ ins. apart the oversize going to a sorting belt, thence to a crusher. The ore passes into a feeder, thence to stamps weighing 2,000 lbs. per head, where it is crushed to pass a 10-mesh discharge screen. The pulp is classified in cones and the coarse product delivered to tube mills where it is slimed. The product of the tube mills, together with the overflow from the classifying cones, is delivered to the amalgamating tables. From the tables it is again classified, the sands being cyanided direct, and the slimes treated by air agitation, then filter-pressed or vacuum-filtered.

The most vital changes from the old practice to the new have been: the use of the heavy gravity stamp merely as a preliminary coarse crusher for the tube mills; the adoption of the tube mills for fine grinding and the employment of the tall, air-agitation tanks and of filters.

The practice is modified in each district, the modification depending largely upon the nature of the ore. In some camps silver ores are being successfully treated by fine crushing and cyaniding.

Stamps.

The duty of stamps depends upon the nature of the ore, the weight of the stamp, its speed and drop, the size of the aperture of discharge screen, and the height of the discharge. The following table gives the duty per stamp in various districts:—

DUTY OF STAMPS.

Mine or District.	Weight of Stamp.	Drop in Inches	Number of drops per Min.	Screen Aperture.	Discharge in Inches.	Tons Crushed per head per 24 Hrs.	Remarks.
California . .	900 lbs.	7	90	900 per sq. in.	4	3	Gold Quartz
Melones, Cal. .	1,000 ,,	7	104	20 mesh	—	4·41	
Tonopah Mill, U.S.A.	1,050 ,,	6½	104	slot ·04 in. wide	2½	5·09	Gold and Silver
Montana-Tonopah, U.S.A.	1,050 ,,	7	100	20 mesh	3	3·3	Gold and Silver
Tonopah Belmont, U.S.A.	1,050 ,,	6	104	24 mesh	—	3·7	,,
Goldfield, U.S.A..	1,050 ,,	7	108	12 mesh	—	6	,,
Komata Reefs Mine	1,030 ,,	6½	100	4½ holes per in.	4	5	Gold
Luipaards Vlei Rand	1,629 ,,	8½	98·6	200 holes per sq. in.	4	9·6	,,
Simmer & Jack East	1,550 ,,	8	96	200 holes per sq. in.	3½	8·3	,,
Waihi Grand Junction	1,110 ,,	7	105	5 to 10 mesh	1½	7·6	,,
Oroya Brownhill.	1,100 ,,	7¾	108	10 mesh	2	6·48	,,
Ivanhoe . .	1,192 ,,	7½	104	225 mesh	2	5½	,,
Gt. Fingall . .	1,150 ,,	8	106	12 mesh	3	7	,,
Mysore Gold Mine, Mysore, India	1,150 ,,	7·5	96	1,200, 625 and 400 per sq. in.	3	3·63	,,

It is claimed that the new 2,000 lb. stamps of the Goldfield, (S.A.) are capable of crushing 26 tons of ore per stamp per 24 hours by introducing an elimination screen to 'bypass' the fine material from the rock bins direct to the tube mill and using screens with aperture of ·284 inch.

Amount of water varies on the Rand, from 5 to 10 tons of battery water to one of ore, depending upon the duty. In Western Australia the amount of water required is 4 to 8 gallons of water per stamp per minute.

Power per stamp.—The 2,000 lb. stamp requires 5 h.p. per stamp. In Nevada, for 1,250 lb. stamp 3·5 h.p. per stamp is used. At the Goldfield Con. in Nevada with 140 stamps, fine grinding and cyaniding, 1,500 h.p. is supplied to the mill or 1·73 h.p. per ton of ore milled.

Cost of Equipment of Gold Mills.

The following is the comparative cost of gold mills, including all machinery and buildings :—

Mill.	Number of Stamps.	Cost of Machinery and Plant.	Cost per Stamp.
Rand Mill	200	£334,000	£1,670
New Kleinfontein	200	420,480	2,102
Wit Deep	200	346,210	1,731
Robinson Central Deep	100 and Tube Mill	234,013	2,340
Great Fingall	,,	193,745	1,937
El Oro	,,	160,000	1,600

In Nevada, the cost of complete plants doing fine grinding and slimes filtering is 1,400*l.* a stamp.

Tube Mills

are used as secondary crushers following the stamps. On the Rand they are most efficient when fed with ore that has been crushed through a screen the apertures of which are ·27 in. or say ¼ in. They are here 25 feet in length by 5½ feet in diameter, and one tube mill crushes the product of 10 stamps. Each tube mill requires 100 h.p. to drive it. In New Zealand tube mills are 16 ft. by 4 ft. revolving at 29 r.p.m., and driven by 25 h.p. motor. The feed is 1½ parts of water by weight to 1 part of ore. In 22 months a tube mill ground 28,500 tons of hard quartz, 50 per cent. of which passed through a 200-mesh screen.

At Pachuca 90 h.p. is used for a 5 ft. 6 ins. by 22 ft. tube mill. Output 140 tons per day through a 60-mesh screen.

At Waihi Grand Junction tube mills 19 ft. 3 ins. long by 4 ft. 8 ins. diameter require 42 h.p. Those 16 ft. 3 ins. long by 4 ft. 3 ins. diameter require 25 h.p. They consume 2·89 lbs. of flint pebbles per ton of ore crushed at stamps. They are run at 27 r.p.m.

Chilian Mills.

Chilian mills are employed either for crushing preliminary to amalgamation, in which case the gold is partly amalgamated in the mill itself, or they are used in lieu of the tube mill as fine grinders following the stamps.

For crushing ores for direct amalgamation the so-called slow speed Chilian mills are well adapted. Machines of this type are extensively employed in Russia and Siberia. They are expensive in first cost, but the power, labour, and repair cost are very low. Furthermore they are notable for their simplicity, requiring little close or skilled attention.

A slow speed Chilian mill was employed in California on hard close quartzose gold ore. It ran at 8 to 10 r.p.m. It had four runners each weighing 1,200 lbs. travelling on a steel die 3 ins. thick with 5 ins. face and 7 ft. outside diameter, 4½ tons of rock in a tank above and sustained by the axles giving additional crushing weight. Twenty tons of ore per 24 hours were crushed with a 4 in. discharge, and 88·1 per cent. extraction obtained 0·85 per cent. of the ore passed through a 100-mesh screen. One man per shift handled the mill. Cost of ore crushed 6*s.* per ton. Gasoline power was used consuming under heaviest load 2·17 gallons of distillate per hour. (*A. McLaren.*)

The standard type of Chilian mills used in Russia is 7 ft. to 10½ ft. in diameter with 2 runners 5½ to 6½ ft. in diameter, and from 7 to 12 ins. in width. The speed is 11 r.p.m. The discharge is 8 to 10 ins. Feed is about 1 in. and discharge screen slotted. The water is 6·5 to 10·1 times the ore in weight and duty is 16 to 24 tons per 24 hours. The power required is 7 to 12 h.p.

Rapid-running Chilian mills were used as fine grinders after the stamps in the Goldfield Consolidated mill in Nevada on fairly soft ore. There 140 stamps were in operation and six 6 ft. Chilian mills crushing from 4-mesh to 16-mesh were installed. These were operated at 32 r.p.m. Their capacity was 75 tons per 24 hours and the power required 35 h.p. each. The cost of crushing by these mills is given at 5*d.* per ton of ore milled. (*J. W. Hutchinson.*)

At Cripple Creek a 6-ft. Chilian mill running at 33 r.p.m. reduces 4 tons of ore per hour, 60 per cent. of which will pass a 150-mesh screen. The feed passed a ⅜-in. aperture.

Rolls.

Where a relatively small tonnage is to be crushed coarse, as for example when coarse concentration is employed or where the ore is porous and is cyanided coarse, it is the practice to use rolls. They are cheaper than gravity-stamps in first cost, repairs, labour, and power, and are not complicated by screens.

In South Dakota the ore, a hard, close-grained Cambrian quartzite, carrying from 5 dwts. to 7 dwts. per ton, is crushed by rolls. The ore is fed to two 16 by 36 in. rolls used as cracking rolls, and two others of the same size are used as finishing rolls. The final product goes through a $\frac{1}{4}$ in. mesh direct to the cyaniding vats. The rolls require 100 h.p. The milling and cyaniding cost is 2*s.* 2*d.* per ton and 14,800 tons of ore are treated monthly.

Ball Mills.

Krupp ball mills are used extensively in Kalgoorlie where 44 are at work. Size No. 5 will crush up to 45 tons of ore per day consuming 25 h.p. No. 8 will crush 90 tons per day requiring 50 to 60 h.p. About 45 per cent. of the product from a 25-mesh screen will pass 150-mesh. It is charged with 1 or 2 tons of steel balls and revolves from 21 to 25 times per minute. They work well on either wet or dry ores. The wear and tear of liners, hunch and scoop plates cost 4·64*d.* per ton milled.

Milling Costs.

The following are the milling costs of different stamp mills :—

Mill.	Stamps.	Tons Crushed Monthly.	Cost of Milling per ton.	Rate of Wages per day.	Remarks.
Tonopah, U.S.A.	100	15,000	12*s.*	18*s.*	Silver Gold ore
Goldfield Con., U.S.A.	140	29,500	9*s.*	18*s.*	
Ivanhoe	100	16,600	8*s.* 9*d.*	12*s.* to 14*s.*	Bromo-cyanide treatment of slimes
Oroya Brownhill	50	8,950	17*s.*	12*s.* to 14*s.*	
Gt. Boulder	—	14,800	12*s.* 4*d.*	12*s.* to 14*s.*	Dry crushing with Griffin mills. Roasting.
Melones, Cal.	100	12,000	1*s.* 1½*d.*	10*s.*	Cheap power, labour and supplies
New Unified (Rand)	—	10,000	1*s.* 4*d.*	—	Milling only
Simmer East	—	—	2*s.* 6*d.*	—	

On the Rand, cost of milling of those companies using tube mills varies from 4*s.* 10*d.* to 8*s.* 8*d.* per ton of ore.

In California, with free milling ores and cheap water power, milling costs average from 2*s.* to 4*s.* per ton. In Alaska, with large tonnages of soft, free milling ore treated daily and no cyaniding or fine grinding the costs are about 1*s.* per ton of ore.

Horse-Power per Ton of Ore Treated per Day.

Type of Mill.	Mesh.	Horse-power.
Stamps and vanners	20 to 40	0·75 to 1·0
Coarse concentration	10 to 20	0·5 to 0·8
Combination-stamp	16 to 30	1·5 to 1·75
Chloridising stamp (dry)	to 16	2·0 to 2·5
Chloridising stamp (wet)	to 40	4·0 to 4·5
Magnetic separator	—	0·25 to 0·5
Cyanidation (dry) roll-crushing	20 to 30	0·5 to 0·8
Cyanidation (wet), stamp crushing and sliming	to 80	0·75 to 1·5

(*J. A. Barr*, 'Testing for Metallurgical Processes.')

Standards Adopted by the Institution of Mining and Metallurgy.

1 oz. of fine gold = value 85*s.*
1 ton = 2,000 lbs. (avordupois).
1 miner's inch = a flow 1½ cubic ft. of water per minute.
1 sluice head = „ 60 „ „
1 gallon of water = 10 lbs. at 34°.

Temperatures are to be expressed in centigrade.
Screen apertures and diameters of wire are equal, giving 25 per cent. screening area.

GOLD AND SILVER TABLES.

It is the practice of Continental and South American engineers to report the values of ore in grammes per metric ton. English engineers generally employ the method of quoting values in grs. and dwts., in some cases per long ton of 2,240 lbs., in others per short ton of 2,000 lbs.

TABLE for Conversion of Grammes per Metric Ton into Grains, etc., per Long and Short Ton.

Grammes per Metric Ton.	Per Short Ton.		Per Statute Ton.		Grammes per Metric Ton.	Per Short Ton.		Per Statute Ton.	
	Dwts.	Grs.	Dwts.	Grs.		Dwts.	Grs.	Dwts.	Grs.
1	0	14	0	15·7	6	3	12	3	22
2	1	4	1	7	7	4	2	4	14
3	1	18	1	23	8	4	16	5	5
4	2	8	2	15	9	5	6	5	21
5	2	22	3	6	10	5	10	6	13

TABLE for Conversion of Dwts. per Ton into Grammes per Metric Ton; the equivalent of Dwts. per Short Ton is given in the first column, per Statute Ton in the second.

Dwts.	Grammes per Metric Ton.				Dwts.	Grammes per Metric Ton.			
	Dwts.	Grs.	Dwts.	Grs.		Dwts.	Grs.	Dwts.	Grs.
1	1	71	1	53	6	10	29	9	18
2	3	43	3	06	7	12	00	10	71
3	5	14	4	59	8	13	71	12	24
4	6	86	6	12	9	15	43	13	28
5	8	57	7	65	10	17	14	15	31

Alluvial or Placer Mining.

Deposits of auriferous or tin-bearing alluvial gravels are termed placers, alluvial drifts, or more simply alluvials. They are classified as shallow or superficial and deep-lying, sometimes called deep leads. Deep leads are accumulations of gravel from extinct or ancient rivers. They are mostly capped by igneous flows, as in California and Victoria, though sometimes they may be buried under recent gravels or drift, as at Lightning Creek, B.C., and the Lena Goldfields in Siberia.

The methods of mining used to exploit deposits of this character resemble pillar and stall in some cases and long wall in others. In California the gravel beds can be attacked by means of adits which also serve as drains for the large amount of water present. When the topography of the ground permits adits being used, the cost of mining is low, as at the Hidden Treasure, California, where the costs average 4*s.* 6*d.* per cub. yd. of gravel washed. In the Deep Leads of Victoria, where the pumping charges were unusually large (eleven million gallons per day being raised from one mine), the total cost per cub. yd. was 12*s.* to 15*s.* At the Lena Goldfields the total cost is from 20*s.* to 30*s.* per cub. yd. of gravel washed.

Superficial Deposits.—All gravel under 60 feet in thickness may be termed shallow or superficial gravels. Surface gravels are worked by the following methods:—

Panning.—A miner can pan ½ cub. yard to 1 cub. yd. of gravel per 10-hour shift, depending on character of ground and nearness to water; 100 pans per day is a good day's work. Gravel in place is usually estimated at 3,000 lbs. per cub. yd., and the standard sheet iron pan 16 ins. diam. at top and 10½ ins. diam. at bottom will hold 20 lbs.; 150 pans full will make a cub. yd. of dirt.

Rocker.—A man can rock ordinarily from 2 to 3 cubic yards of gravel per day, and save, in practical mining, 90 per cent. of the gold. In alluvial examinations the rocker plays a most important role, and is used in conjunction with the pan for determining the gold contents of any parcel of gravel. When used for this purpose, the design of the rocker differs slightly from that of the ordinary miner's rocker. A well-designed rocker, carefully employed, should save practically all the gold. The plans of most rockers, as published from time to time, are those of the ordinary mining rocker, which is too short and set on too great a grade for use in saving fine gold. If much fine gold is present in the gravel, it will be advisable to use a strip of common Brussels carpet, laid along the floor of the rocker. This carpet is held in place by cleats and so can be easily removed in cleaning up.

Long Tom or short sluice can handle 3 to 10 cub. yds. of dirt per day, depending on the amount of water available and the character of the dirt.

Hand Sluicing.—Capacity of a sluice box depends upon the amount of water, grade of sluice, deposition of tailings, and character of gravel. No capacity can be given. Grade of sluice varies from 2 ins. to 21 ins. per box (12 ft.). An ordinary sluice box is made from 2-in. planks, and is 12 ins. wide by 12 ft. long.

Grade and Duty of Sluices.

Grade and Duty of Sluices.—The relation of actual width to the best ratio of quantity to width may not be very significant, but there is a notable increase in efficiency in passing from the smallest widths to the larger, and boxes less than 1 ft. wide are to be avoided, especially if the gravel is coarse. Treating 30 to 40 mesh sand on a 1 per cent. grade (say 1¼ in. per 12 ft. box), one sluice head of water requires a channel 2 ft. wide to enable it to attain maximum duty. On a 2 per cent. grade, half a sluice head requires 2 ft. of width, the quantity of water required for maximum duty with a fixed width diminishing with increasing grade, but at what rate there are insufficient data to determine. Apparently the best width required for constant quantity of water varies directly as the grade. Coarser material requires a greater depth of water, and for 4 to 6 mesh gravel on a 2 per cent. grade, 1 ft. of width per sluice head is indicated. Variations up to 50 per cent. in the water make little difference to its duty, consequently the actual position of the optimum is not easily determined. Naturally the capacity of the sluice itself is correspondingly varied, and the mode of transportation and the saving are doubtless affected in any case.

The rate at which duty varies with slope is the resultant of so many variables that no law can be stated for all cases. In the neighbourhood of the best conditions the Utah experiments support the approximate rule that duty (water, width, and material being constant) varies as the 1·75th power of the grade. A single experiment with natural gravel on low grades by the U.S. Geol. Survey gave the 1·84th power. (*R. T. Hancock.*)

Good modern practice provides about 1 ft. of sluice-box width for every 2 cub. yds. of average material treated per hour, and 3,000 gallons of water per cub. yd. treated on a grade of 6 ins. to 12 ft.

Besides the ordinary feeding of sluice box by means of hand shovelling, many modified methods of feeding and disposing of tailings are employed. In Russia and Siberia the favourite method in use is to transport the gravel to and from the sluice box (here greatly modified from the plain open sluice box) by the employment of horses and small carts. This is a most expensive system and the yardage treated is small. Other variations are: the use of wheel barrows, tramming by cars, handling gravel by means of derricks, digging gravels by means of steam shovels, and loading into cars or direct into sluice, feeding sluice by means of scrapers operated by horses or steam power (drag-line scrapers).

The methods of preventing accumulation of tailings are to deposit them in running water or to remove them by means of drags, belt or link elevators, or hydraulic elevators.

HYDRAULIC MINING.

Hydraulicing proper is the method of mining by which jets of water under high pressure are thrown against a gravel bank, thereby undermining the gravel which falls, and is carried by the current into the sluice. The necessary pressure is obtained either by natural means, i.e. by conveying the water from some source having a greater elevation than the working face, or by pumping directly into the supply pipe by powerful pumps. In the former case water is conveyed to the working by means of pipes, flumes or ditches. Ditches are generally most convenient and economical for conveying water for long distances, but sometimes the nature of the ground is such (either too porous or too rocky and difficult to excavate) that a flume becomes cheaper. When lumber is abundant wooden flumes are built, but in many cases, especially in the tropics, where wood rots rapidly, sheet steel flumes are preferable. Steel flume per foot, including rivets, angle iron, etc., ready for transport, costs from 4*s.* to 1*l.*; the sizes vary from a cross-section of 1·28 sq. ft. to 20·48 sq. ft. From the ditch or flume the water is fed through a strainer into a pressure box. From here, a pipe leads to the Y's, which in turn lead to the monitors or giants.

Monitors or Giants.

Monitors or Giants.—These are appliances consisting of a base for attachment to the pipe line and a long conical reducing piece, arranged with one or more joints so that it can be rotated in any direction horizontally and through a very wide angle vertically. The smaller or conical end is fitted with a nozzle butt to which different sizes of nozzles may be attached as circumstances may require. Modern giants are fitted with deflectors, attachments on the butts whereby the giant is turned or deflected by means of the force of the water itself. The high-pressure giants also have ball-bearing joints.

Nozzles from 2 ins. up to 10 ins. are used, working under heads or pressure from 100 up to 600 ft. or more.

The amount of gravel which can be washed down will depend upon its nature, upon the volume and pressure of the stream of water issuing from the nozzle, and is also dependent in no small degree upon the skill of the operator who handles the giant.

The following gives the approximate amount of gravel washed under various heads :—

Effective Head in Feet.	Size of Nozzle.	Flow in Cub. Ft. per Minute.	Approximate amount of Gravel in 24 hours in Cub. Yds.	Weight of Giant. Lbs.	Price of Double Jointed Ball Bearing Giant.
					£
100	2 ins.	104·88	160	120	28
200		148·32	230		
300		181·61	280		
400		209·82	320		
100	4 ins.	420·06	650	225	55
200		594·00	930		
300		727·56	1,130		
400		840·12	1,300		
100	6 ins.	944·58	1,460	335	66
200		1335·72	2,000		
300		1634·08	2,540		
400		1889·16	2,920		
100	8 ins.	1679·82	2,600	600	97
200		2375·46	3,600		
300		2909·58	4,500		
400		3239·70	5,300		
100	10 ins.	2624	4,080	690	107
200		3711	5,760		
300		4545	7,050		
400		5248	8,140		

(*Hendry.*)

Hydraulic Monitors and Pelton Wheel Jets.

J. J. Garrard (*Trans. I.M.M.* 1917) gives a table of discharges in cubic feet per minute for different sizes of nozzles and various heads derived from the formula : Delivery in cub. ft. per min. $= 3{\cdot}75\, d^2\sqrt{P}$, where d = diameter of nozzle opening in ins. and P = gauge pressure in lbs. per sq. in., or effective head $\times 0{\cdot}4326$. An equivalent formula given by him is $2{\cdot}468\, d^2\sqrt{h}$, where h = effective head in ft. The factor 2·468 allows for a nozzle contraction coefficient of 0·94, whereas Hendry's figures in the above table are based on the theoretical value 2·624, and make no such allowance.

Costs.

The costs per cub. yd. were at North Bloomfield 2·05*d.* per cub. yd. and at La Grange 3*d.*

In British Columbia one and a half million cub. yds. were mined and washed at a working cost of 0·97*d.*

In Northern California placer ground containing only 1·26*d.* per cub. yd. has been profitably worked. The amount of gravel washed was 1,251,399 cub. yds., yielding 6,330*l.* The profit obtained was 821*l.*

Hydraulic and other Elevators.

When a hydraulic mine possesses an insufficient slope of bed rock for moving material (the lightest grade permissible being 220 ft. to the mile) other methods of disposing of the gravel 'piped' must be employed. Where water under pressure is cheap and abundant the hydraulic elevators are employed. They are of the pipe type—either Hendry, Evans or Campbell and the Giant Elevator.

The pipe elevator operates on the principle of an injector. Water under pressure is discharged through a nozzle set within a steel jacket, creating a vacuum, and causing water and sand and gravel fed into intake to rise to a height corresponding to 10 per cent. of the head under which the water is applied.

Three sizes are made: 10-inch throat 3½–4½ inch nozzle, using 300 to 500 ins. of water; 12-inch throat 4½–5 inch nozzle, 500 to 750 ins. of water; 15-inch throat, 750 to 1,000 ins. They weigh about a ton and cost 250*l.*

In South Oregon, U.S.A., at the Weimer placer mine, two hydraulic elevators are employed to handle the gravels. One of them has a lift of 39 ft., and operating with a head of 330 ft., uses 11 cub. ft. of water per sec., besides taking all water from two No. 2 Giants. The second elevator has a lift of 9 ft., a head of 125, and uses 18 cub. ft. of water per sec. besides all the water from the first elevator. This makes a final discharge of 40 cub. ft. per sec.

Giant Elevators.

Giant Elevators.—Besides undermining and cutting the gravel it has been discovered that gravel can be effectively 'driven' up a slope or incline to a raised line of sluices by means of the power of water under pressure. An elevator based on this principle is termed a 'stacker.'

In California a stacker was operated as follows: A chute was built sloping upwards at 30°. This was 4 ft. wide by 24 ft. long and constructed of 1½-inch planks. Riffles 2 ins. apart and with a drop of 2½ ins. between were laid across the bottom. These were covered by an iron grizzly. At the foot of this chute a 3-foot sump was dug in which was set up a hydraulic elevator with a 12-inch throat and worked by a 5-inch giant. This elevator, working under a 90-foot head, elevated to 16 ft. vertically the seepage, fine and water from two field-giants.

Twenty feet in front of the stacker was installed the 3-inch drive giant. Two 4-inch field-giants wash the gravel to the chute and the drive giant forces it up the stack, the fine material falling through the grizzly and down the riffles to the elevator, which raises it to the sluice-boxes.

The field-giants handled 600 cub. yds. per 24 hours, and the gravel could easily be raised to 25 ft. vertically by means of the drive giant. The cost of handling material exclusive of equipment was under 2½*d.* per cub. yd. (*S. S. Smith.*)

Ruble Elevator.

Ruble Elevator.—The Ruble elevator is constructed on the above principle, but it is more portable and does away with the hydraulic elevator. It is also self-contained, as the sluice-box is part of the machine.

In Idaho, U.S.A., this elevator has been tried with excellent results (*see* Porter, T.A.I.M.E., 1909, for a detailed description of this elevator). The following points are claimed to its merit: 1. It handles larger rocks with less water than other types of elevators. Handles boulders up to 1 ton in weight. 2. It dispenses with the boulder crew, either at the mine, ground, sluice-box or dump. 3. It saves the gold and the gold-saving department may be protected by lock and key. 4. The gravel is picked up in close proximity to the giants, the gold immediately extracted, and the boulders and other waste material dropped back on bedrock previously worked off, instead of being transported a long distance to the dump. It makes its own dump.

Mechanical Elevator.

Mechanical Elevator.—In regions where water is neither cheap nor abundant, in handling gravel or tailings, resort must be made to some form of mechanical elevators. A mechanical elevator was erected some years ago on Bonanza Creek, Alaska. This was made of a frame of steel, 49 ft. high, mounted on wheels. The gravel was elevated by a bucket line of the close-connected type, 76 buckets in all, each with a capacity of 3 cub. ft. each. These discharged at a rate of 26 per min. directly into a sluice-box. The pit was drained by means of a 12-inch centrifugal pump, assisted by a hydraulic jet. The power was 200 h.p. in all, 35 for the bucket line and 165–175 for the pumps. The actual capacity per day was 1,500 yds. (*T. A. Rickard*). The first cost of this machine was high, and in actual running it proved costly in operation and repairs. Another machine of the same type, but employing a heavy dredge bucket, is being erected in Eastern Canada. No results of actual working are yet to hand.

Centrifugal Pumps.

Centrifugal Pumps as a means of elevating gravel and tailings have been extensively employed in Australia. It is claimed that with wood fuel at 7*s.* per ton of 50 cub. ft. and European rate of wages paid, to elevate tailings with pumps should not cost more than 2½*d.* per cub. yd. of solid. Thompson & Co., of Victoria, are the makers of gravel pumps suitable for this class of work. Their pumps vary in size from 3½ ins. to 16 ins. The capacity of solids per hour from 7 to 150 cub. yds. The indicated horse-power from 2½ to 583. The combined suction and delivery head from 10 feet to 100. An installation of this kind possesses the advantage of being cheaper to erect and easier to move than the belt or bucket type of elevators mentioned. However, where there is an undue amount of large stones present in the gravel, the latter type is preferable.

Dredging.

The most important form of alluvial mining is dredging. In 1913 there were 70 dredges at work in California alone, 55 in Russia and Siberia, and 30 in New Zealand. When all conditions requisite for successful working are present, when the ground has been properly proved and well designed and effective dredge installed, then this type of mining is the safest and surest of all forms of mining investment.

Dredging properties call for certain conditions, and unless these exist the success of the enterprise suffers. The conditions are: 1. The presence of gold, which should be evenly distributed throughout the gravels. 2. Sufficient gravel to warrant the installation of at least one dredge. 3. Soft even bedrock. 4. Absence of boulders. 5. Absence of permanently frozen ground. 6. Absence of great amount of clay. 7. Absence of floods. 8. Surface should be of an even contour—not rough and broken. 9. The ground should retain sufficient water to float dredge (50 miner's ins.). 10. The economic conditions, i.e. labour, transport, climate, vary inversely with amount of gold in gravel.

Broad flood plains or ancient lake gravels form more suitable dredging ground than does deposit, situated in narrow rocky gulches. Frozen ground cannot be dredged without preliminary thawing. Dredging of gravels lying in rapid rivers is risky as there is always danger of losing the dredge by sudden floods. Gravels from 10 ft. to those 60 ft. below water and 20 ft. above have been successfully dredged.

The modern gold dredge consists of a hull or pontoon of wood or steel upon which is mounted the digging device, a line of buckets capable of being raised or lowered; the washing plant; the gold-saving tables; the stacker or elevator which disposes of the tailings, the sand-pump and the motors or engines. The dredge digs the gravel, washes it, extracts the gold and disposes of it in the form of tailings. It digs its own pit. Suction dredges are used at times. There are two types of bucket dredges, the New Zealand and the American type. The latter has been evolved from the New Zealand dredge to suit conditions existing at Oroville, and it now forms a distinct type and is used on all properties controlled by American capital.

Both types have their advocates and both their utility.

Briefly, the New Zealand type of dredge is a lightly constructed, light-powered boat of steel pontoons, with open connected buckets, and employs a headline in digging. Its first cost is low, its capacity small, and it is better adapted to work in ground of a loose, easy-digging nature. It is too lightly built for heavy ground.

The Californian or American dredge is costly, very heavily built, with close-connected buckets, digs with spuds, and till lately built with wooden hulls.

For properties where the transport is high, as in parts of Siberia, and where heavy repairs are difficult, a well-built New Zealand type of dredge, with ample stock of spares, is preferable. Indeed, its choice is imperative in some cases, for the high transport costs to some properties exclude the use of the ponderous American type of dredge. On the other hand, cheap transport, access to machine shops, and with heavy or stiff semi-cemented gravel, or large deep deposit of fair digging gravel (the latter permitting the handling of enormous daily yardages) are conditions favourable to the use of the American dredge.

The following figures relate to both the Californian and New Zealand types of dredge. In the former case the dredges quoted are of the Standard American type, i.e. built with wooden hulls, the stacker of the rubber-belt type and the dredges electrical equipped throughout. The cost includes erection in America. The yardages given, while estimated, have been actually accomplished in Oroville ground.

CALIFORNIAN TYPE.

Size of Buckets.	Estimated capacity per month. In cub. yds.	Digging Depth below Water Line.	Weight exclusive of Hull.	Price Erected.	Horse Power.
Cub. Ft.		Ft.	Tons.	£	
3	45,000– 60,000	36	350	12,000	180
5	90,000–110,000	36	520	16,000	220
7	110,000–150,000	35	576	19,000	300
8½	150,000–185,000	48	1,000	36,000	560*
13	250,000–280,000	40	1,100	50,000	415

* This includes 100 h.p. for pump for two monitors or giants.

In the following figures of New Zealand type the dredges referred to are built in England, and the price is f.o.b. London. The weights include steel hull. The capacities are over-estimated in this case, as the yardage given has never been accomplished in actual practice. For actual capacity the yardages quoted should be reduced from 25 per cent. to 50 per cent. according to conditions of ground.

In Siberia the following yardages were realised by this type during a season of seven months : 4½ ft. dredge, 165,100 cub. yards ; 5 ft. dredge, 190,500 cub. yds. ; 6 ft. dredge, 228,600 cub. yds. ; 7 ft. dredge, 254,000 cub. yds.

These dredgers are equipped with an open connected bucket line and a pan stacker, except the first, which has no elevator but discharges from a sluice in the rear. They are all steam driven.

NEW ZEALAND TYPE.

Size of Buckets.	Estimated Capacity. In cub. yds.	Digging Depth below Water Line.	Weight including Hull.	Price, f.o.b. London.	Horse Power.
Cub. Ft.		Ft.	Tons.	£	
3	30,000	20	100	3,000	35
4	40,000	20	180	7,000	—
5	50,000	26	220	8,000	56
6	60,000	40	280	9,100	—
7	74,000	32	350	11,500	180
3½	—	20	235	4,400	50
5	—	20	250	4,625	60

Note.—The figures for two last dredges are for machinery only. The hulls of these were of wood.

Cost of Dredging.

The Cost of Dredging depends on the character of the ground, the climate, transport, labour, power, yardage treated, make of the dredges, and the personal equation of the management. It varies greatly. In countries where seasons are short and labour and supplies high, i.e. in the Far North, Alaska and Siberia, the costs are highest. In Alaska 2,300,000 cub. yds. were dredged at a cost of 1*s.* 4*d* per cub. yd. This included thawing charge amounting to 7½*d.* per cub. yd. In Siberia the cost with one 5-ft. open connected dredge averages about 6*d.* per cub. yd.

In California a dredge having 3½ ft. bucket digging in ordinary loose gravel and sand had an average working cost for six years of 3·9*d.* per cub. yd. The new 16-ft. cub. ft. dredge in California, handling 300,000 cub. yds. a month, is working at a cost of 1*d.* per cub. yd.

DATA ON OPERATION OF CALIFORNIAN DREDGES.

Capacity of Buckets.	Period of Observation.	Actual Operating Time.	Gravel Dug per month.	Depth of Gravel.	Cost per cub. yd.	Character of Ground.
Cub. Ft.	Months.	Per Cent.	Cub. Yds.	Ft.		
3	12	82·3	38,200	27	3·50*d.*	Favourable
3½	12	83·7	38,400	35	3·66*d.*	Compact
5	12	—	67,600	36	3·32*d.*	Medium
7	12	79·0	84,700	28	2·20*d.*	Compact
7½	12	73·2	113,900	70	2·08*d.*	Medium
8	6	72·2	97,000	42	1·96*d.*	Light
13½	8	77·7	225,000	19	1·15*d.*	Fine and light

At Waipoi, New Zealand, 212,000 cub. yds. of soft ground were handled in 45 weeks at a cost of 3·3½*d.* per cub. yd.

In Victoria, during 2,006 weeks 14,927,269 cub. yds. of material were handled by 50 dredges at a cost of 2·67*d.*

Thirteen dredges operating in California for the Natomas Consolidated in 1914 handled 25,850,000 cub. yds. at a total cost of 5·8 cents per yd. Of these one handled nearly 2,000,000 at 2·5 cents and another over 2,000,000 at 7·14 cents. Ten dredges of the Yuba Consolidated operating in California in the same year handled 17,000,000 cub. yds. at a cost of 4·40 cents per cub. yd., varying from 3·29 to 6·86 cents. The Conrey Company in Montana, between 1906 and 1915, treated 32,000,000 cub. yds. at 5·91 cents, the cost ranging from 9·79 cents in 1906 to 5·99 cents in 1915. The gradual reduction in total costs was mainly due to the increasing yardage as larger and more powerful dredges were installed, the increased yardage lowering the indirect or overhead charges. Direct operating charges did not vary much, averaging 5·91 cents. The dredges of a company operating in Colorado handled in 1914 3,000,000 cub. yds., at 5·9 cents. One dredge in Idaho in 1914 handled 4,670,000 cub. yds.—a world's record—at a total cost of 2·77 cents per cub. yd. In Colombia, South America, the Pato dredge in 1914 handled 920,000 cub. yds. at an operating cost of 18·4 cents and a total cost of 23·2 cents per cubic yard. This was an 8-ft. bucket dredge. The 5-ft. Gumaos dredge in the Philippines handled 1,850,000 cub. yds. in twenty-seven months at a cost of about 12 cents per cub. yd. In Alaska in 1917 seven dredges of the Yukon Gold Co. operated 151 days at Dawson, handling 4,583,326 cub. yds. at an average cost of 25·81 cents per cub. yd. Sixty-five acres, or 60 per cent. of the ground, was frozen and required thawing by steam. At Idatarod the company's dredges operated 192 days, handling 871,045 cub. yds., at 48·1 cents. The company's five dredges in California handled 6,161,941 cub. yds. at an average cost of 3·71 cents per cub. yd. Hydraulicing operations treated 2,143,444 cub. yds. at 11·8 cents, the duty of the water being 4·18 cub. yds. per miner's inch. (*Bull.* 121, *U.S. Bureau of Mines.*)

SECTION XXXVI

PART II

MINERAL VALUATION.

(By Professor Henry Louis, M.A., D.Sc., A.R.S.M., M.Inst.C.E., etc.)

General Principles.

Under the head of Mineral Valuation are included two somewhat different valuations, namely, that of a mineral property, whether worked or not, and that of a mine as a going concern ; the difference arises from the fact that the proprietor of the minerals does not as a rule work them himself, but disposes of them, usually for a royalty, to the mine-owner who works them. In cases where the mine-owner is also the proprietor of the minerals, it is generally more convenient to value the mine, the royalty derivable from the ownership of the minerals being included as a part of the profit derivable from the mining operations.

In either case it is necessary to determine the present value of a number of annuities, the latter being the annual revenue derived from the royalties or the profits, as the case may be.

The amount of the royalty per ton is generally known or can be closely approximated, being the price paid or to be paid for the mineral in its unsevered condition as it lies in the deposit.

The profit per ton must be estimated from the probable cost of working and the probable value of the mineral in its marketable condition.

The tonnage to be wrought annually must be estimated, having due regard to all the conditions of the deposit, and should be taken to be the amount that can be extracted, so as to produce the maximum total profit over the period under consideration. It is obvious that a deposit worked out with excessive rapidity will yield no profit when the interest on the capital outlay required to so work it exceeds the profit derivable from working ; on the other hand, if worked excessively slowly, the standing charges may exceed such profit. Between these extremes lies the rate of economic working ; it will generally be found that there is a considerable range of working rate, within which the economic results are practically uniform, and the best rate within that range is usually determined by market conditions or other purely commercial considerations.

The probable total quantity of mineral that can be economically produced from the property must next be calculated, meaning thereby the amount which is as likely to be exceeded as to be fallen short of ; it is obvious that the quantity that can actually be produced from any property can never be known until the property has been exhausted, when the information is naturally valueless. Hence the question becomes one of probabilities, never one of actually ascertained figures, and must always be considered as subject to the laws of probability in the mathematical sense. The quantity thus estimated divided by the estimated or proposed annual output determines the probable life of the property ; if the latter is held under mineral lease, the period of which is less than the probable life, the length of the lease is substituted for the probable life in the calculations.

In the following formulas, the annual income = annual tonnage × royalty per ton, or annual tonnage × profit per ton, as the case may be, will be designated by a.

The number of years of life of the property or of the lease will be designated by n.

The problem then becomes that of determining in the first instance the present value (P) of a series of annuities of £a for a term of n years.

Generally the ordinary compound interest formulas apply, which show that X pounds invested at a rate of interest i per unit will amount in n years to $X(1+i)^n$, and conversely the present value of Y pounds payable at the end of n years, allowing interest at rate i, is

$$\frac{Y}{(1+i)^n}$$

(See page 3.)

The main difficulty in all mineral valuations lies in determining the proper rate of interest to allow. The rate of interest in operations in which there is practically no risk, that is to say where the probability of the payment of capital and interest in full is practically unity, may be taken to be the rate obtainable by investment in such securities as Trustee Stocks. In all mining operations the risk is always greater, or in other words the probability of payment is less, hence a higher rate of interest is demanded to cover the risk. If i be the safe rate of interest the risk rate may be expressed by ri, where r is a number greater than unity, depending upon the conditions of the case, and which may conveniently be described as the risk factor; it may also be defined as the reciprocal of the fraction representing the probability of success, and is therefore greater the more hazardous the nature of the enterprise. In practice the risk factor ranges from 2 to 5, being lowest in well-proved bedded deposits, the uniformity of which has been determined by experience, and highest in veins or masses in which values are known to be very irregularly distributed. It is less where money is invested merely in the purchase of a mineral property than when it is invested in a mining enterprise, because royalties form a first charge on revenue and are almost invariably secured on the assets of the mining enterprise, whereas the latter can take only remainder profits, which are totally unsecured.

The determination of a proper risk factor is the principal problem that the mining engineer has to solve in valuations.

Present Value.

Let $ri=s$, so that s is the rate of interest *per unit* that is required in any given case.

Some writers call i the 'accumulative' and s the 'remunerative' rate of interest; the term 'risk rate' will be adhered to here in order to emphasise that the high rate is required in compensation for the risk that the investor runs. Of course i is governed by the money market, and is the rate of interest paid on investments in Government stocks and similar first-class securities; it will be noted that s varies directly with i.

The value of the mineral property or mine *at the moment of commencing profitable operations* is therefore P, the present value of n annuities of $£a$. This should obviously be equal to the present value of sums of $£a$ payable at the end of each of the first, second, third, etc., years up to the end of the nth year, and this sum

$$=\frac{a}{s}\left(1-\frac{1}{(1+s)^n}\right).$$

It is sometimes useful to remember that, if A is the present value of $£a$ due at the end of n years,

$$\mathrm{P}=\frac{a-\mathrm{A}}{s}.$$

The expression for present value given above is often spoken of as Inwood's formula. Calculations are easily made by this formula; the table on page 6, which gives the present value of an annuity payable at the end of each year for a varying number of years and at various rates of interest, obviates this calculation, as it is only necessary to multiply the present value taken from the table by the amount of the annuity. The table gives the values of

$$\frac{(1+s)^n-1}{s(1+s)^n}$$

for different values of n and s; in the headings of the table the rates of interest are given per cent. and not per unit. Again, the sum of n annuities of $£a$ payable at the end of each year up to the end of the nth year is

$$\frac{a}{s}\left((1+s)^n-1\right),$$

and the present value of this sum is

$$\frac{a}{s}\cdot\frac{(1+s)^n-1}{(1+s)^n}$$

as before. Again, the annuity may be looked upon as part interest on the present value, the remainder being applied annually to the reduction of the capital, interest being paid each year on the unredeemed portion of the capital. If calculated on this basis the same result is obtained.

There is yet another method of looking at the problem. The annuity exceeds the simple interest on the present value by an amount equal to $a-Ps$ in each year; if this difference be allowed to accumulate at rate s for n years it will amount to

$$\frac{a}{s}\cdot\frac{(1+s)^n-1}{(1+s)^n}=\mathrm{P},$$

that is to say, to the original capital, as it obviously should do, because the purchaser of an annuity, spending each year only the interest on the capital invested, should get back his capital at the end of the period, because this operation would be equivalent to investing the capital at the given rate of interest during the given term of years.

This last method of looking at annuities has given rise to another method of calculating them, known from its originator as Hoskold's method. He considers that the risk rate of interest s should be allowed upon the capital, but that the difference between the annuity and the interest $(a-Ps)$ should be looked upon as accumulating at a safe rate i because it is not necessarily invested in the risky mining operation. This view gives rise to the formula

$$P=\frac{a-is}{\frac{i}{(1+i)^n-1}+s}.$$

This value may be taken out from any ordinary tables as follows:—

$$\frac{(1+i)^n-1}{i}$$

is the amount of £1 at interest i for n years, and the reciprocal

$$\frac{i}{(1+i)^n-1}$$

is the sinking fund for the repayment of £1, i.e. the sum to be set aside annually and allowed to accumulate at interest i in order to amount to £1 in n years. These values are obtained from tables (see pp. 3 and 9). The denominator of the fraction in Hoskold's formula can be taken out by adding the risk rate to the sinking fund for £1 at interest i for n years.

This method is often used, but is not one that fairly answers all the tests of a true annuity formula. Nevertheless, it is used by valuers on the grounds that the difference between the annuity and the simple interest cannot, in fact, be invested at the risk rate s, but must be invested at the safe rate i, and that this method, therefore, more correctly represents what would obtain in actual practice.

Hoskold's method depends upon considering only one out of the various methods in which the true annuity formula may be looked at; obviously the two can be made to give the same result by selecting suitable risk factors in each case. Thus if r is the risk factor in Inwood's formula, and r' in Hoskold's method, the present values will be the same whichever formula be used, when

$$r'=\frac{r(1+ri)^n}{(1+ri)^n-1}-\frac{1}{(1+i)^n-1}.$$

It follows that r' must be greater than r; in other words Hoskold's method allows a rate of interest higher than the stipulated risk rate, and hence puts a lower present value on a given annuity. It need hardly be said that both his method and the ordinary method provide equally for the replacement of the original capital, if suitable sums are set aside in each case out of the annuities received.

Increasing and Decreasing Values.

The above methods of valuing mineral properties tacitly assume that the mine will forthwith commence to produce at its full rate of output and will continue to do so until the mineral is worked out; this is, of course, not the case in practice, a mine only reaching its full output after several years, and this gradually declining again as the deposit approaches exhaustion. There would be no difficulty in allowing for this in the valuation, but as a rule it is neglected; as has already been pointed out, the figures on which the valuation is based are only probable, not actual figures, so that there is no use in endeavouring to attain minute accuracy in these computations.

There is obviously no difficulty in introducing these refinements if it is considered desirable; the computation is made as above for the estimated period of full production deferred during the period of production at a lower rate than the full output; the income expected in each year of output less than full output is calculated and its present value is determined, and all these present values are added together to obtain the total present value of the property.

If preferred, calculations can also be made directly, whether the annuity increase or decrease in arithmetical or in geometrical ratio. Let c be the income in the first year and let it increase or decrease by b each year, so that the income for the second year is $c \pm b$, for the third year $c \pm 2b$, etc., during n years. Then the present value of this annuity on the Inwood method is :—

$$c\left(\frac{(1+s)^n-1}{(1+s)^n s}\right) \pm \frac{b}{s}\left(\frac{(1+s)^{n-1}-1}{(1+s)^{n-1}s}\right) \mp \left(\frac{(n-1)b}{s} \cdot \frac{1}{(1+s)^n}\right).$$

These values can be taken out from the tables: the first expression is, as before, the present value of £c for n years at rate s; the second is the present value of £$\frac{b}{s}$ for $(n-1)$ years at rate s, and the third is the principal which will amount to £$\frac{(n-1)b}{s}$ in n years at rate s. (See Present Value Table, p. 11.)

If Hoskold's method be used, the present value is :—

$$\frac{c+\frac{b}{i}}{\frac{i}{(1+i)^n-1}+s} \mp \frac{nb}{i-s+s(1+i)^n}.$$

The first part of this expression is the present value of an annuity of £$\left(c+\frac{b}{i}\right)$ calculated for n years by Hoskold's method; in the second expression $s(1+i)^n$ is the amount of £s at interest i for n years (see table, p. 3).

Again, let c be the income for the first year and let it increase geometrically by a ratio k, so that the income for the second year is ck, for the third ck^2 . . . etc., during n years. Then the present value of the annuity on Inwood's method is

$$\frac{c}{(1+i)^n} \cdot \frac{k^n-(1+i)}{k-(1+i)}, \text{ or, if } \frac{k}{1+i} = f, \text{ it is } \frac{c}{1+i} \cdot \frac{f^n-1}{f-1}.$$

On Hoskold's method the present value becomes :

$$c \cdot \frac{(1+i)^n-k}{1+i-k} \cdot \frac{i}{i+s[(1+i)^n-1]}.$$

All the above calculations are based upon the hypothesis that the annuity is paid at the end of each year; in practice royalties are mostly paid quarterly, and mining dividends at least half-yearly. To meet this point, for n substitute $2n$, and for s substitute $\frac{s}{2}$ when payments are made half-yearly, these becoming $4n$ and $\frac{s}{4}$ respectively when payments are made quarterly.

Dead-rent.

In computing the present value of mineral royalties 'certain rent' or 'dead-rent' has sometimes to be taken into account. Mineral leases usually stipulate for a definite dead-rent, which may be in addition to the variable royalty, or may be a merging dead-rent, that is to say that the amount of royalty to be paid is determined by the tonnage which is in excess of that which corresponds to the dead-rent at the agreed royalty rate. As the dead-rent is payable in full, whatever the results of the mining operations, its present value must be calculated not on the mining risk rate of interest, but on a rate obtained by multiplying the standard safe rate by a factor depending only on the financial stability of the lessee. This consideration may be neglected when the dead-rent is very small compared with the expected annual royalty, but must be taken into account when it is considerable, the present value of the whole royalty, in the case of an additive dead-rent, or of the excess of royalty, in the case of a merging dead-rent, being computed as above and added to the present value of the dead-rent.

Relinquishment.

When, as is often the case, the lessee has power to relinquish the lease after a given number of years or at stated intervals, there is a risk that the lease may be cancelled because the mine proves unprofitable or because the deposit is exhausted, and the rate of interest applicable to the

dead-rent during the definitely fixed period is estimated as above, but it must be multiplied by a risk factor representing the probability of such relinquishment in computing the present value of the dead-rent during the successive periods. Here, again, the difficulty of the problem consists entirely in determining the proper probability factor.

Deferment.

In opening a mine there is always a period of development during which no mineral is produced, or at any rate none is produced profitably, whilst the main capital expenditure in the way of shafts, adits, plant, machinery, etc., is incurred. The present value at the commencement of the profit-producing period as found above must therefore be looked upon as deferred for the requisite number of years and the actual value determined. If V be the actual value at the commencement of mining operations and d the number of years occupied in development

$$V = \frac{P}{(1+s)^d}.$$

The risk rate of interest must be taken, because the capital is being spent and is subject to the full risks of the mining operation.

The annuity formula and deferred value formula may be combined, thus :—

$$V = \frac{a}{s} \cdot \frac{(1+s)^n - 1}{(1+s)^{(n+d)}}.$$

It is, however, better as a rule to make the computation in the two stages, as above.

The table on page 11 facilitates calculation of actual values; it gives the present value of 1*l.* due at the end of a varying number of years at varying rates of interest; the present value taken from the table and multiplied by P gives the value of V. This table gives the values of

$$\frac{1}{(1+s)^d}$$

for different values of d and s, rates of interest being expressed in the headings as percentage rates.

Mr. O'Donahue has proposed a method of calculating deferments that has some analogy with Hoskold's method of computing the present values of annuities, being also a two-rate method. He considers that simple interest at the risk rate s should be allowed on the actual value V, whilst the interest assumed to fall due accumulates at the safe rate i, whence

$$V = \frac{P}{1 + \frac{s}{i}\left[(1+i)^d - 1\right]}.$$

Since interest is never in fact paid nor payable on the actual value, this method cannot be recommended. This formula and the ordinary deferment formula may be connected as follows :— Let r be the risk factor in the ordinary method and r' the risk factor when O'Donahue's method of deferment is employed ; then

$$r' = \frac{(1+ir)^d - 1}{(1+i)^d - 1} \text{ and } r = \frac{\sqrt{1 + r'[(1+i)^d - 1]} - 1}{i}.$$

In some cases, however, where two different rates are involved, another method must be adopted. In the most general case, it is required to determine the present value, V, of a mine that will take d years to develop, during which time no profits are earned, and which will then yield a profit of £a per annum during n years, it being a condition that the original capital shall bear interest at the risk rate s, but that all accumulations can only be invested at the ordinary investment rate i. At the end of the n years the investor is entitled to receive back his capital plus the accumulations of interest (Vs per annum) at the rate i or

$$V + Vs\,\frac{(1+i)^n + \quad - 1}{i}.$$

This must be equal to the amount of an annuity of a per annum for n years, or

$$\frac{a}{2}\left[(1+i)^n - 1\right].$$

Equating :—

$$V = \frac{a\left[(1+i)^n - 1\right]}{i + s\left[(1+i)^{n+d} - 1\right]}.$$

This is the same result as follows from the method of calculating deferred annuities, published by Mr. George King in his 'Theory of Finance.' Further, if $d = 0$, the above formula becomes the ordinary Hoskold formula given above.

Capital Expenditure.

From the present value, V, as determined by any of the above methods, the capital necessary to bring the mine into full work must be deducted in order to obtain the value of the mineral property ; if the capital expenditure is spread over several years, the present value of this deferred expenditure must be computed at the ordinary investment rate i, and the sum thus found deducted from V.

Deferred Development.

It occasionally happens that the valuation is required of a mineral property which it is not intended to commence to develop for a number of years ; in this case the present value must be calculated as the present value of a sum V, the payment of which is deferred for the given period at a rate of interest i per unit. The risk rate of interest must not be taken into account, because there is no mining and therefore no mining risk. If the value of V has been properly determined, making all due allowance for mining risks, the problem resolves itself into determining what capital sum must be invested in safe securities in order to produce the sum V at the time when mining operations are to be commenced. Special attention is drawn to this point, because mistakes are often made in confusing the rate of interest required during the development period and the rate required during the period preceding development, the latter depending on ordinary acutarial considerations and not on the risks incidental to mining.

Investment Value.

Finally, in comparing investments in mines or in minera properties with other investments of capital, the effect of Income Tax as well as of Mineral Rights and Increment Value Duties must be taken into account. Mines and minerals both constitute wasting assets, but income tax is charged upon the gross revenue derived therefrom, hence not only on the true revenue, but also on that portion of the gross revenue that ought to be looked upon as forming a sinking fund set aside to replace the original capital at the end of operations ; mineral rights duties specifically affect only mineral properties and thus constitute an additional charge upon these. In both these respects, therefore, these investments are at a disadvantage compared with ordinary investments, a fact that requires due consideration in computing mineral valuations as a basis for the investment of capital.

SECTION XXXVII

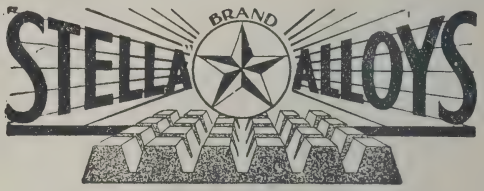
METALLURGY

By Owen W. Ellis, M.Sc. (B'ham.), A.M Inst.C.E.

(With contributions by A. H. Allen, M.I.E.E., F. J. Cook, Frank Foster, M.Sc., L. C. Harvey, Colin Livingston, D. Richardson, Wh.Exh., A.M.I.M.E., Dempster Smith, M.Sc., M.I.Mech.E., and others.)

UNITED BRASSFOUNDERS & ENGINEERS LIMITED.

UBEL UBEL



The demand for definite standards of uniform quality in special alloys led to the production of the world-favoured STELLA BRAND.

STELLA ALLOYS are known the world over for their unfailing reliability, their freedom from impurity and their uniformity.

MANGANESE COPPER
PHOSPHOR TIN
PHOSPHOR COPPER
FERRO COPPER
FERRO ZINC
SILICON COPPER
METALLIC MANGANESE

EXTRUDED BRASS & BRONZE BARS

UBEL Extruded Brass & Bronze Bars possess these advantages :—

1.—They are of uniform density and strength.
2.—Surfaces are smooth—there are no surface blemishes, flaws or blow-holes.
3.—Each part is of extreme accuracy, close to size and highly finished all over.
4.—Made by standardized processes that permit of larger production, lower selling prices, and speedy delivery.

Makers of all Sections of high-speed Turning and Screwing Extruded Brass Bars, Extruded Bars in Naval Brass, Naval and Manganese Bronze, Yellow Metal, Red Metal, etc., for Turning, Stamping and Forging. Brass Bolts and Nuts and General Turned Work from the Bar.

CATALOGUE SECTION 'B'
Free on Application.

Codes :—A B C 5th Edition ; Leiber.
Telephone : 3134 Central (3 lines).
Telegrams : 'Stork,' Manchester.

United Brassfounders and Engineers Limited

FIVE WORKS — HEAD OFFICE EMPRESS FOUNDRY — UBEL — 3,000 WORKERS — CORNBROOK MANCHESTER ENGLAND

Depots also at London, Glasgow, Newcastle, Birmingham, Belfast, Cardiff, and all principal world centres.

SECTION XXXVII

METALLURGY

By Owen W. Ellis, M.Sc. (B'ham.), A.M.Inst.C.E.

(With contributions by A. H. Allen, M.I.E.E., F. J. Cook, Frank Foster, M.Sc., L. C. Harvey, Colin Livingston, D. Richardson, Wh.Exh., A.M.I.M.E., Dempster Smith, M.Sc., M.I.Mech.E., and others.)

FURNACES.

CLASSIFICATION OF FURNACES.

Furnaces in which the Charge and the Fuel are Intermingled.

1. Hearth Furnaces.

(*a*) With blast. Forge for smithing. Grate for zinc-white manufacture.

(*b*) Without blast. Heap and stall for coking and roasting. Trough for liquation and drossing.

2. Shaft Furnaces.

(*a*) With forced draught. Blast furnaces for smelting ores of iron, copper, lead, etc. (see p. 2236). Cupolas for iron-foundry practice (see p. 2251).

(*b*) With induced draught. Only rarely employed.

(*c*) With natural draught. Furnaces for smelting readily fusible ores. Kilns for calcining, roasting, etc.

Furnaces in which the Charge and the Fuel are Separate.

1. Reverberatory Furnaces (Radiation).

(*a*) With forced draught. Furnaces for the refining of metals and the smelting of ores.

(*b*) With natural draught. Furnaces for the roasting of ores. Furnaces for the manufacture of wrought iron, etc.

2. Crucible, Retort, Muffle, etc., Furnaces (Conduction).

(*a*) With solid, liquid or gaseous fuel (see p. 2254).

(*b*) With electricity (see p. 2259).

Furnaces in which the Charge Supplies its own Fuel.

(*a*) Preheated furnaces with solid charge. Kilns for ore-roasting. Beehive coke ovens.
(*b*) Preheated furnaces with liquid charge. Converters for refining, etc.
(*c*) Non-preheated furnaces with solid fuel. Blast-roasting furnaces with up and down draught.

Electric Furnaces Heated by Resistance Effects.

(*a*) The charge is included in the electric circuit. Héroult aluminium furnace. Kjellin induction furnace (see p. 2259).
(*b*) The charge is heated by means of an electrically-heated conductor (see p. 2259).

Electric Furnaces Heated by Arc Effects.

(*a*) Direct heating. The charge forms one or both poles of an electric arc (see p. 2259).
(*b*) Indirect heating. The charge is enclosed in a space heated by an electric arc (see p. 2259).

Electric Furnaces Heated by Combined Resistance and Arc Effects.

Girod, Greaves-Etchells, Héroult, etc., steel furnaces (see p. 2259).

SHAFT FURNACES.

BLAST FURNACES.

(*Revised and amplified by Colin Livingston.*)


Table I.—Comparison of Basic and Foundry Practice.

Kind of Iron.	Analysis.			Ore Mixture.				Average Daily Tonnage.	Fuel per Ton RailR. Wght.	Limestone per Ton.	Stove Heats.	Top Heats.
	Si.	P.	S.	Soft Hematite.	Hard Hematite.	Magnetite.	Mill Products.					
Basic .	0·49	0·769	0·040	19·6	47·6	27·8	5·0	575	1,962	916	1,157	386
Foundry .	1·80	0·787	0·034	23·5	38·0	31·4	7·1	483	2,236	803	1,180	528


Table II.—Blast Records for Different Periods.

Period.	Total Tonnage.	Daily Average.	Average Fuel per Ton.	Average Stone per Ton.	Ore Mixture.			
					Hard Hematite.	Soft Hematite.	Magnetite.	Mill Products.
1 . .	328,251	360	2,730	1,294	33	30	21	16
2 .	507,631	456	2,325	1,080	39	29	23	9
3* . .	464,434	512	2,097	878	43	23	28	6
4 . . .	362,963	491	2,191	963	44	16	33	7

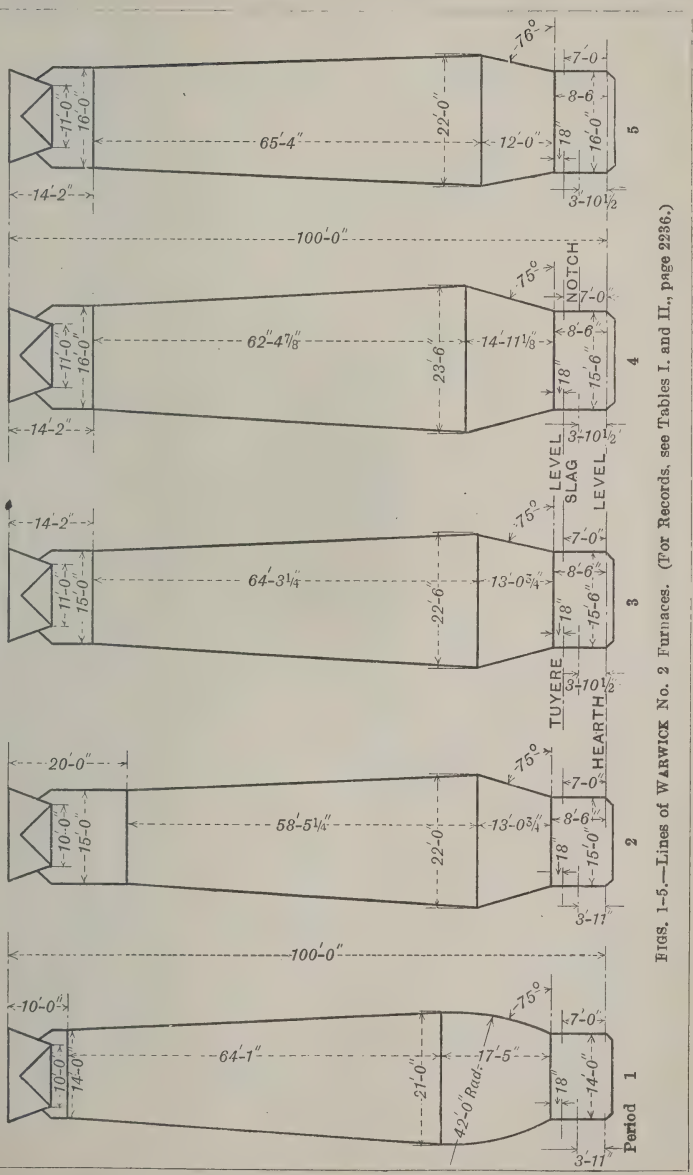* Dry Air Plant installed. (*E. S. Cook.*)



FIGS. 1–5.—Lines of WARWICK No. 2 Furnaces. (For Records, see Tables I. and II., page 2236.)

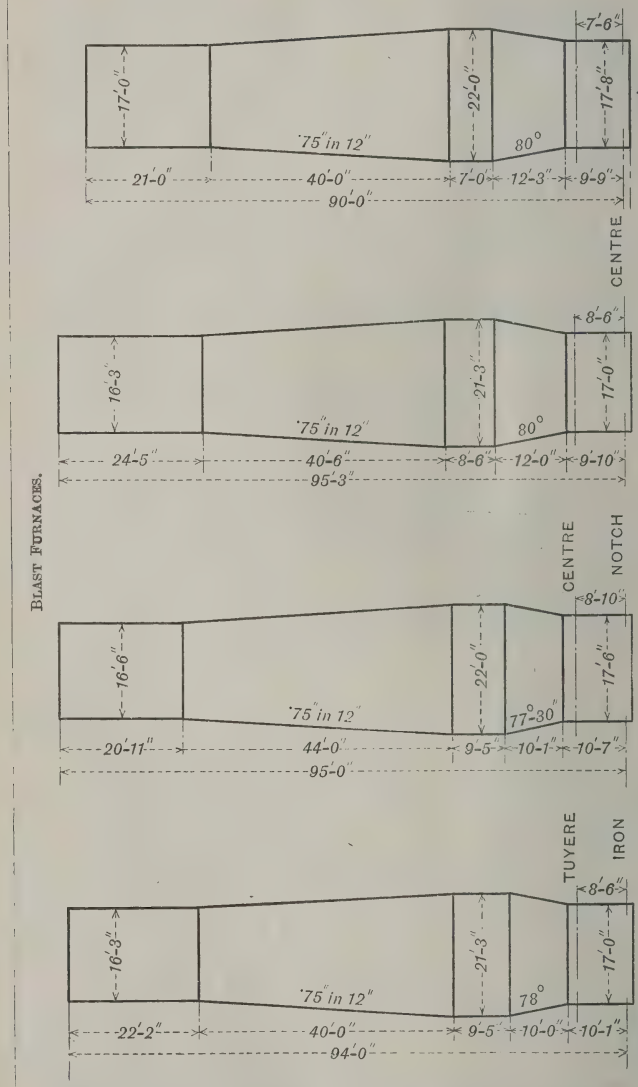

FIGS. 6-9.—Lines of ILLINOIS STEEL CO.'S (South Chicago, Ill.) Furnaces.
(For Records, see Tables III. and IV., page 2239.)

TABLE III.—AVERAGE BLAST-FURNACE PRACTICE FOR YEAR 1st MAY 1913 TO 1ST MAY 1914.

Pounds per Ton of Iron.

Process.	Average Daily Production.	Ore Scale Cinder	Coke.	Stone	Excess of Scrap used over prod.	Flue Dust Produced.	Per Cent. Mesaba Ore.	Actual Yield.	Cubic Feet of Air per Min.	Blast Pressure.	Temperature		Iron Analysis.			Slag Analysis.			
											Blast.	Top.	Si.	S.	Mn.	SiO_2.	Al_2O_3.	CaO.	MgO.
Bessemer . .	501	4,136	1,927	863	23	207	73·9	53·63	48,850	15·3	1,068	330	1·39	0·034	0·68	35·60	13·44	—	2·06
Basic . .	493	4,471	1,961	849	51	160	85·5	49·08	45,660	16·3	996	266	0·97	0·038	1·72	34·71	14·48	—	3·40
Extent of Coke Saving with High Heats and Favourable Lines in Bessemer Practice.																			
E. Furnace:																			
Sept. 1913 .	525	4,012	1,691	677	88	175	92·9	53·24	47,750	15·1	1,225	317	1·30	0·034	0·61	36·25	10·21	45·58	2·13
Oct. 1913 .	514	4,047	1,711	774	113	171	93·0	52·85	46,390	16·2	1,251	306	1·48	0·043	0·60	37·40	11·47	46·55	2·07
Dec. 1913 .	536	3,852	1,705	780	109	201	83·7	55·69	45,510	15·7	1,250	300	1·33	0·041	0·71	36·12	11·48	48·46	1·96
No. 4 Furnace:																			
March 1914 .	518	4,062	1,744	781	17	193	67·4	54·76	41,140	15·7	1,170	274	1·29	0·025	0·59	33·48	15·67	45·39	3·85
April 1914 .	543	4,003	1,702	752	73	227	66·5	54·40	42,950	16·0	1,196	283	1·23	0·027	0·56	34·63	15·01	45·63	2·83


TABLE IV.—SPIEGEL PRACTICE.

With Furnace Lining that had already produced 644,815 Tons Iron.

Product.	Total Tons.	Daily Average.	Coke per Ton.	Coal per Ton.	Temperature, degrees Fah.		Average Grade.	Per Cent. Mn. in Slag.
					Blast.	Top.		
Ferromanganese, December 1913	3,870	125	3,896	288	1,470	550	80% Mn.	5·81
Spiegel, February – March, 1914	6,528	272	2,858		1,167	607	19% Mn.	2·18
Ferrosilicon, March–April 1914	7,396	161	3,867		1,214	676	11% Si.	

(*H. H. Brassert.*)

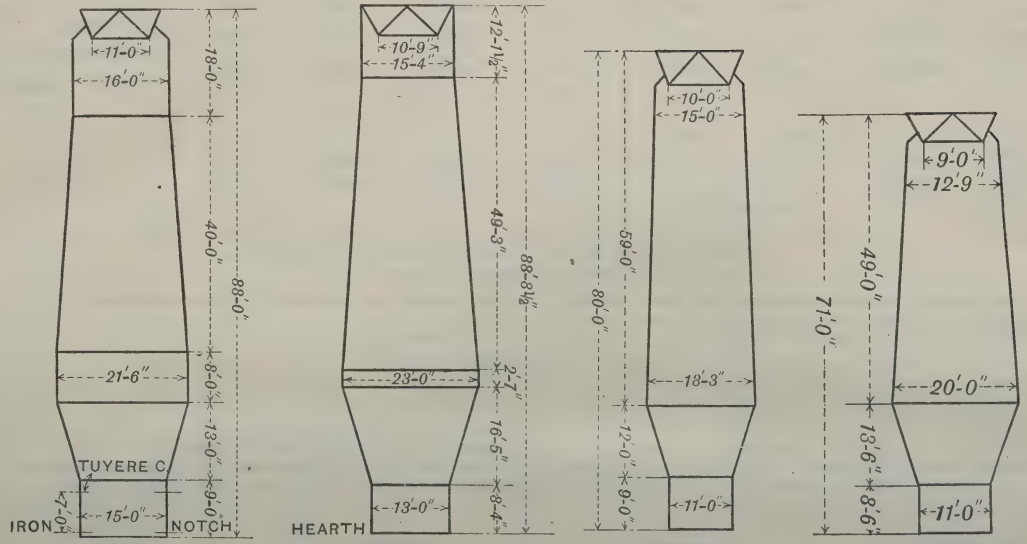BLAST FURNACES.



FIGS. 10-13. Lines of Modern Furnaces.

BLAST-FURNACE MATERIALS AND PRODUCTS.

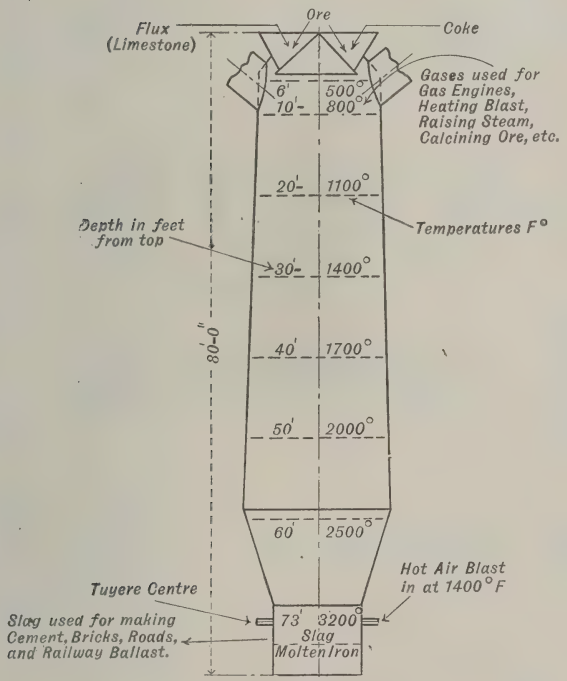
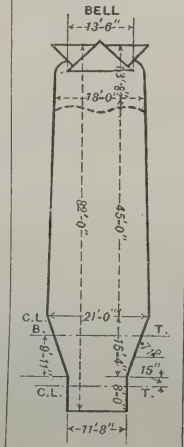
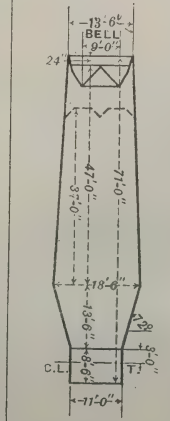
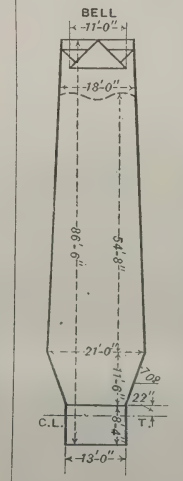
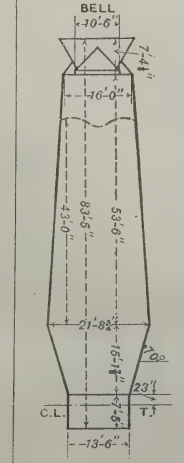
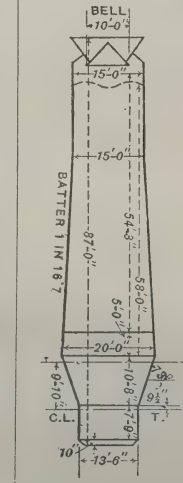


FIG. 14

SCHEDULE OF BLAST-FURNACE DATA.—*British Practice, January* 1920.

	DATA.	Frodingham Iron and Steel Co., No. 1 Furnace.	Staveley Coal and Iron Co., Ltd., Devonshire Works, No. 1 Furnace.	Dorman, Long & Co., Ltd.	North-Eastern Steel Co.	Guest, Keen & Nettlefold, Dowlais, No. 4 Furnace.
	Description of Furnace.					
1	Internal Lines of Furnace.					
2	Charging gear . .	Double bell. Hopper revolved whilst charging.	Single bell. Double hoppers above sealed with flat plates.	Single bell. Hand-charged.	Single bell. Hand-charged.	Hand-barrow charged

3	Method of bosh cooling	Bosh jacket sprayed with water. Above tuyeres copper plate coolers inserted into bosh walls.	Sahlin patent water-cooled spiral bosh, thin lined interior.	Three rows of bronze coolers in open cast-iron boxes.	Steel plate bosh, thin lined, water-sprayed exterior.	Copper bosh plate coolers.
4	Proportion. Area of Bell / Area of Stockline = for	13′ 6″ Bell = 1 18′ 0″ S.L. = 1·77	9′ 0″ Bell = 1 13′ 6″ S.L. = 2·25	11′ 0″ Bell = 1 18′ 0″ S.L. = 2·68	10′ 6″ Bell = 1 16′ 0″ S.L. = 2·32	10′ 0″ Bell = 1 15′ 0″ S.L. = 2·25
	Area of Stockline / Area of Bosh = for	18′ 0″ S.L. = 1 21′ 0″ Bosh = 1·36	13′ 6″ S.L. = 1 18′ 6″ Bosh = 1·87	18′ 0″ S.L. = 1 21′ 0″ Bosh = 1·36	16′ 0″ S.L. = 1 21′ 8¾″ Bosh = 1·84	15′ 0″ S.L. = 1 20′ 0″ Bosh = 1·77
5	Output (tons per week)	1,000 to 1,100	750 to 800	1,300 to 1,500	1,450 to 1,550	2,000 to 2,200
6	Nett blowing time per week after allowing for casting and tuyering	164 hrs.	164 hrs.	163 hrs.	160 hrs.	165 hrs.
7	Average rate of making iron per hour after allowing for stoppages	6·4 tons	4·73 tons	8·59 tons	9·38 tons	12·8 tons
8	Class of iron	Basic	Foundry	Cleveland	Basic	Hæmatite
9	Analysis per cent. Carbon	Not stated	3·55	3·5	3·10	3·7 to 3·9
	Silicon	0·8	3·10	2·25	1·31	1·5 „ 2·0
	Phos.	1·69	1·43	1·40	2·27	under 0·06
	Sulphur	0·07	0·026	0·08	0·10	„ 0·05
	Man.	1·60	0·81	0·60	1·40	1·25
10	Iron produced per sq. foot hearth per hour	138 lbs.	111·7 lbs.	145 lbs.	147 lbs.	200·5 lbs.
11	Iron produced per sq. foot bosh per hour	41·33 lbs.	39·4 lbs.	55·6 lbs.	56·6 lbs.	91·3 lbs.
12	Burden per ton of iron: Ore, raw	46 cwts.	60·5 cwts.	Nil	Foreign 18·55 cwts.	39·32 cwts.
	Ore, calc.	26 „	2·25 „	47·5 cwts.	ironstone & foreign 15·67 „	Nil
	Limestone	Nil	12·0 „	Nil	limestone & phos. chalk 3·74 „	6·56 cwts.
	Cinder	6 cwts. including scale, etc.	Nil	11·0 cwts.	Nil	Nil
	Scale, etc.	2 cwts.	„	Nil	2·97 „	„
	Basic slag		„	„	Nil	„
	Total	80 cwts.	74·75 cwts.	58·5 cwts.	40·93 „	45·88 cwts.
13	Pig iron yield per cent. on all burden charged, excluding coke	25 per cent.	26·7 per cent.	34·18 per cent.	48·8 per cent.	43·5 per cent.

SCHEDULE OF BLAST-FURNACE DATA.—*continued.*

	DATA.		Frodingham Iron and Steel Co., No. 1 Furnace.	Staveley Coal and Iron Co., Ltd., Devonshire Works, No. 1 Furnace.	Dorman, Long & Co., Ltd.	North-Eastern Steel Co.	Guest, Keen & Nettlefold, Dowlais, No. 4 Furnace.
14	Character of burden		As loaded from Frodingham face about 30 per cent. broken.	Rough, 20 per cent.; medium, 35 per cent.; fine, 45 per cent.; only big lumps broken.	Lumps, 50 per cent.; rubble, 30 per cent.; fine, 20 per cent.	Lumps and rubble, 76 per cent.; small, 24 per cent.; Swedish ore broken occasionally.	Rough, 25 per cent.; medium, 35 per cent.; small, 40 per cent.
15	Volume occupied by burden per ton of iron	Burden	106 cub. ft.	92 cub. ft.	84·3 cub. ft.	44·85 cub. ft.	45·2 cub. ft.
		Coke	117 „	118 „	86·0 „	56·15 „	74·3 „
		Total	223 „	210 „	170·3 „	101·0 „	119·5 „
16	Volume of burden in furnace	Hearth	831 cub. ft.	807 cub. ft.	1,106 cub. ft.	1,060 cub. ft.	1,216 cub. ft.
		Bosh	2,835 „	2,518 „	2,543 „	3,757 „	2,558 „
		Stack	13,814 „	7,572 „	16,546 „	12,569 „	13,314 „
		Total	17,480 „	10,897 „	20,195 „	17,386 „	17,088 „
17	Furnace capacity per ton of iron per hour	Hearth	130 cub. ft.	170 cub. ft.	129 cub. ft.	113 cub. ft.	95 cub. ft.
		Bosh	443 „	532 „	297 „	401 „	199 „
		Stack	2,144 „	160 „	1,924 „	1,340 „	1,040 „
		Total	2,717 „	2,303 „	2,350 „	1,854 „	1,334 „
18	Observed time material in furnace		17 hrs.	18 to 20 hrs.	15 hrs.	16 to 17 hrs.	15 to 18 hrs.
19	Weight of slag per ton of iron		30 cwts.	27 cwts.	28 to 30 cwts.	17 cwts.	10 to 12 cwts.
20	Analysis of slag per cent.	SiO_2	32·0	27·9	32·0	33·23	32 to 34
		CaO	44·0	46·62	36·0	38·22	41 „ 44
		Al_2O_3	16·5	18·46	28·0	17 97	12 „ 14
		FeO	1·5	1·21	—	1·4	—
		MgO	3·5	2·52	—	5·4	6 to 7
		MnO	2·0	0·37	—	2·24	—
21	Analysis of exit gases per cent.		By Vol. By Weight.	By Vol. By Weight.	By Vol. By Weight.	By Vol. By Weight.	By Vol. By Weight.
		CO_2	7·0 10·91	10·37 15·76	9·5 14·21	7·6 11·82	12·5 18·65
		CO	30·8 30·80	26·86 26·00	29·5 28·73	30·4 29·34	23·0 21·85
		H	4·1 0·29	1·38 0·09	1·0 0·08	2·65 0·19	2·0 0·13
		CH^4	Nil Nil	1·75 0·95	Nil Nil	Nil Nil	Nil Nil
		N	58·1 58·00	59·68 57·20	60·0 57·48	59·35 58·65	62·5 59·37

22	Temp. of exit gases .	392° F.	250° to 350° F	570° to 650° F.	850° F.	350° to 450° F.
23	Density of gas per cubic foot at 32° F. and atmos. pressure	0·0783 lbs.	0·0835 lbs.	0·0817 lbs.	0·0797 lbs.	0·082 lbs.
24	Volume of gas per lb. at 32° F. and atmos.	12·77 cub. ft.	11·97 cub. ft.	12·22 cub. ft.	12·54 cub. ft.	12·19 cub. ft.
25	Calorific value of gas B.Th.U.'s per cubic ft. at atmos. and 32° F.	122·5 B.Th.U.'s.	117·6 B.Th.U.'s.	104·4 B.Th.U.'s.	113·3 B.Th.U.'s.	85 B.Th.U.'s.
26	Coke per ton of iron .	31·5 cwts.	31·5 cwts.	23 cwts.	21·08 cwts.	18·78 cwts.
27	Character of coke .	South Yorkshire, too soft for good work.	Derbyshire, fairly soft.	Mixture of best Durham with patent oven coke Prop. 1 to 3 or 4. Mechanically good.	Hard.	Good.
	Analysis per cent. Ash .	11·8	12·46	9·0	10·0	11·5
	Analysis per cent. Moisture	8·5	8·0	4·5	3·5	4·0
	Analysis per cent. Carbon .	79·0	79·0	86·0	86·0	84·0
28	Carbon per ton of iron	24·88 cwts. 2,786·56 lbs.	24·88 cwts. 2,786 lbs.	19·78 cwts. 2,215 lbs.	18·13 cwts. 2,030 lbs.	15·77 cwts. 1,766 lbs.
29	Carbon consumed per square foot of hearth per hour	172 lbs.	138·7 lbs.	143·4 lbs.	133·2 lbs.	158·1 lbs.
30	Carbon consumed per square foot of bosh per hour	51·47 lbs.	49·2 lbs.	55 lbs.	51·3 lbs.	71·9 lbs.
31	Pressure of blast .	10 lbs. sq. in.	6 lbs. sq. in.	6·5 lbs. sq. in.	11 lbs. sq. in.	10 to 12 lbs. sq. in.
32	Temperature of blast .	850° F.	1,200° F. From equaliser.	1,260° to 1,350° F.	1,400° F.	1,400° F.
33	Density of hot blast per cubic foot at blast temp. and pressure	0·0508 lbs.	0·034 lbs.	0·033 lbs.	0·037 lbs.	0·037 lbs.
34	Volume of hot blast per lb. at blast temp. and pressure	19·6 cub. ft.	29·34 cub. ft.	30·3 cub. ft.	26·8 cub. ft.	26·8 cub. ft.
35	Calculated blast per ton of metal — Weight .	126 cwts.	123·5 cwts.	98·9 cwts.	90·89 cwts.	86·4 cwts.
	Calculated blast per ton of metal — Vol. at 80°F	190,700 cub. ft.	186,900 cub. ft.	147,400 cub. ft.	137,300 cub. ft.	130,800 cub. ft.
	Calculated blast per ton of metal — Vol. at blast temp. & press.	277,600 „	407,800 „	335,100 „	272,800 „	259,900 „

SCHEDULE OF BLAST-FURNACE DATA.*—*continued.*

	DATA.	Frodingham Iron and Steel Co., No. 1 Furnace.	Staveley Coal and Iron Co., Ltd., Devonshire Works, No. 1 Furnace.	Dorman, Long & Co., Ltd.	North-Eastern Steel Co.	Guest, Keen & Nettlefold Dowlais, No. 4 Furnace.
	No. & dia.	10–6″ dia.	10–5″ dia.	12–6″ dia.	10–6″ dia.	12–5″ dia.
36	Hearth tuyeres — Area	282·7 sq. ins.	196 sq. ins.	339·2 sq. ins.	282·7 sq. ins.	235·2 sq. ins.
	Hearth tuyeres — Area per ton of iron per hour	44·2 „	41·5 „	39·5 „	30·1 „	18·4 „
	Bosh tuyeres — No. & dia.	5–4″ dia. (in full use)	None	None	None	4–6″ dia. used in emergency)
37	Bosh tuyeres — Area	62·8 sq. ins.				113 sq. ins.
	Bosh tuyeres — Area per ton of iron per hour	9·8 „				8·8 „
38	Total tuyere area per ton of iron per hour	54·0 sq. ins.	41·5 sq. ins.	39·5 sq. ins.	30·1 sq. ins.	18·4 sq. ins.
39	Calculated velocity thro' tuyeres	216 ft. per sec.	393 ft. per sec.	339 ft. per sec.	362 ft. per sec.	565 ft. per sec.
40	Kinetic energy per 100 cubic feet of blast leaving tuyeres	3,680 ft.-lbs.	8,154 ft.-lbs.	5,889 ft.-lbs.	7,530 ft.-lbs.	18,340 ft.-lbs.
41	Penetrative force = Kinetic energy (40) / Rad. of hearth in ft.²	640 lbs.	1,484 lbs.	905 lbs.	1,116 lbs.	2,717 lbs.
42	Pressure fall equivalent to tuyere velocity	0·25 lbs. per sq. in.	0·56 lbs. per sq. in.	0·4 lbs. per sq. in.	0·52 lbs. per sq. in.	1·27 lbs. per sq. in.
43	Calculated pressure in furnace hearth	9·25 „ „	4·94 „ „	5·6 „ „	9·98 „ „	9·23 „ „
44	Gas per ton of iron (calculated)	167·3 cwts.	166·3 cwts.	132·4 cwts.	119 cwts.	112 cwts.
45	Volume of exit gases per ton of iron. Gases at 32° and atmos.	239,300 cub. ft.	224,400 cub. ft.	181,500 cub. ft.	167,200 cub. ft.	153,600 cub. ft.
46	Vol. of exit gases per hr.	1,531,520 cub. ft.	1,061,412 cub. ft.	1,559,085 cub. ft.	1,568,330 cub. ft.	1,966,080 cub. ft.
47	Calculated pressure at bosh level	7·2 lbs. per sq. in.	3·7 lbs. per sq. in.	4·75 lbs. per sq. in.	7·6 lbs. per sq. in.	7·8 lbs. per sq. in.
48	Assumed temperature between 2,400° and 2,700° F.	2,600° F.	2,600° F.	2,700° F.	2,700° F.	2,700° F.

* The above table, compiled by F. Clements, has been abstracted from *The Journal of the Iron and Steel Institute*, vol. ci., 1920, to which

TABLE V.—COMPARATIVE LABOUR COSTS FOR 24 HOURS' OPERATION. TWO SHIFTS. (AMERICAN PRACTICE 1916.)

Job.	Old Type Blast Furnace, Nov. 6, 1916. Output 303 Tons.				Modern Blast Furnace, Oct. 28, 1916. Output 409 Tons.			
	No. of Men.	Hours.	Rate. Cents.	Amount. Dollars.	No. of Men.	Hours.	Rate. Cents.	Amount. Dollars.
Top fillers	6	72	23	16·56	—	—	—	—
Weighers	2	24	22·5	5·40	—	—	—	—
Bottom fillers	18	216	21	45·36	—	—	—	—
Barrowmen	16	192	20·5	39·36	—	—	—	—
Sweepers	2	24	20	4·80	2	24	21	5·04
Larrymen	—	—	—	—	2	24	26·5	6·36
Larry helpers	—	—	—	—	2	24	21	5·04
Scrap loaders	4	48	20	9·60	3	36	21	7·56
Stockhouse foremen	1	12	24	2·88	2	48	22	10·56
Car unloaders	6	72	25	18·00	2	24	23	5·52
Furnace keepers	2	24	24·5	5·88	2	24	26	6·24
First helpers	2	24	22	5·28	2	24	23	5·52
Second helpers	4	48	21	10·48	4	48	20	9·60
Slagmen	2	24	21	5·04	2	24	21	5·04
Clay mixer	1	10	20	2·00	2	24	21	5·04
Hot blast stove tender	2	24	21·5	5·16	2	24	24	5·76
Hot blast stove labour	1	10	20·5	2·05	2	24	21	5·04
Flue dust wheeler	1	10	20	2·00	2	24	21	5·04
Engineers	2	24	25	6·24	2	24	20·5	6·84
Oilers	2	24	21	5·04	2	24	22	5·28
Machinists	1	11	32	3·52	1	10	35	3·50
Machinist helper	1	11	23	2·53	1	10	26	2·60
Piggery foremen	—	—	—	—	2	24	30	7·20
Moulder	—	—	—	—	2	24	32	7·68
Piggery clay mixer	—	—	—	—	4	48	23	11·04
Flow regulator (flowman)	—	—	—	—	2	24	22	5·28
Piggery labour	—	—	—	—	4	48	21	10·08
Totals	76	904	—	$197·18	51	632	—	$146·86
Average	—	—	$0·2238	—	—	—	$0·2350	—
Casting, approximate	12	—	—	$36·00	nil	—	—	nil
Labour cost per ton	—	—	—	$233·18 / $0·769	—	—	—	$146·86 / $0·359

(Charles Reitell.)

A blast furnace should be designed to suit the materials used in smelting; successful designs can best be accomplished by keeping in view the best practice with particular materials. No general formula for the design of all blast furnaces, for a given output, is possible. The following points are common to all successful blast furnace plants, and should be kept in view, in new construction :—

The aim of all blast-furnace work is the production of a good marketable iron at the lowest cost. Low costs rest chiefly on low fuel consumption; low fuel consumption is governed by the quantity of fuel, dryness and temperature of blast, with correct furnace lines for the ores smelted.

Blast temperature is entirely one of stove capacity; it is essential that stove capacity should be on the generous side.

Output will depend on capacity of furnace, diameter of hearth, and will vary according to materials used, quantity and pressure of blast, dry or wet blast, temperature of blast; blast pressure should be able easily to penetrate to centre of furnace.

Bosh line angles are found to vary very little; short steep bosh lines are a decided advantage with most materials. Leading American blast-furnacemen attribute some of their remarkable results, in part, to low steep boshes and large hearths.

Furnaces with hearths 20′ 9″ in diameter are in successful operation.

TABLE VI.—CONDITIONS WHICH NORMALLY RESULT FROM VARIATIONS IN HEARTH DIAMETERS.

(*a*) Hearth Diameter in Ft. and number Tuyeres.	(*b*) Hearth Area in Sq. Ft.	(*c*) Air needed per Minute per sq. ft. of Hearth consuming 6,000 lbs. Coke in 24 hours.	(*d*) Air needed by Furnace per Minute.	(*e*) Number of Revolutions of Engine with Air Cylinder 84 × 60.	(*f*) Total Heating Surface required in Stoves combined.	(*g*) Pig Produced and Coke Consumed at Fuel Consumption of 2,240 lbs.	(*h*) Boiler Capacity required at 8 per ton coke.	(*i*) Diameter of Tuyeres.	(*j*) Minimum Diameter of Bustle Pipe.	(*k*) Bosh Diameter.
		Cub. Ft.	Cub. Ft.		Sq. Ft.	Tons.	H.P.	Ins.	Ins.	Ft.
8	50·3	230	11,600	31·5	58,000	135	1,100	4·5	12·5	12·5
9	63·6	230	14,600	39·5	73,000	170	1,400	4·5	14	14·25
10	78·5	230	18,000	48·5	90,000	210	1,700	5	15·5	16
11	95·0	230	21,800	59·0	109,000	250	2,000	5·5	17	17·25
12	113·0	230	26,000	70·0	130,000	300	2,400	5·5	18·5	18·75
13	132·7	230	30,500	82·0	152,500	350	2,800	5·5	20	20·5
14	154·0	230	35,400	95·0	177,000	410	3,300	6	21·5	22
15	176·7	230	40,600	110·0	203,000	475	3,800	6	23	23·75
16	201·0	230	46,200	125·0	231,000	540	4,300	6	24·5	25·5
17	227·0	230	52,200	141·0	261,000	610	4,900	6·5	26	27
Assumed $0·7854 \times a^2$		$\frac{6000 \times 55}{1440}$	$(b) \times (c)$	$\frac{(d)}{10000} \times 27$	$5 \times (d)$	$\frac{6000}{2240} \times (b)$	$8 \times (g)$	$\sqrt{\frac{(d)}{100 \times (a)} \div 0·7854}$	$\sqrt{\frac{(d)}{100} \div 0·7854}$	$\sqrt{2\frac{1}{2} \times (b) \div 0·7854}$

(*Forsythe.*)

In general practice, furnace shafts should have a batter of at least ·625 in. in 12 ins.; where fine ores are smelted this could be considerably increased with advantage. Diameter of bell should be 4 ft. to 4 ft. 6 ins. smaller than diameter of throat.

The furnace should be entirely enclosed in a strong steel shell, from the hearth level up.

All parts of furnace top work should be securely fixed to main shell structure.

In designing blast-furnace details the main considerations should be (1) efficiency, (2) strength, (3) simplicity.

The number of gas offtakes should be such that the gas leaves furnace as slowly as possible, so as to avoid carrying dust over to flues.

The height of furnace varies from 80 to 100 feet; with the materials used, each district has come to fix the height found most suitable for its particular conditions.

Sufficient relief area, by bleeders or explosion doors, should be provided on top of furnace to prevent injury from slips; the relief should, if possible, be directly upwards.

For hearth well and boshing nothing but the best quality of fire-brick should be used. The bricks should not be too large, so that they may be thoroughly burned.

For the upper lining a fire-brick with more wear resisting qualities can be used.

Care should be taken that all bricks when laid are properly bedded and tight built, with fire-clay joints as thin as possible.

In relining a furnace, the bear in old hearth need not be removed, but simply levelled to start building well on.

This will save much hard work and expense—experience will prove that nothing better for a hearth can be put in.

Some means should be taken to preserve the upper lines of furnace from wear where stock from bell strikes brickwork; a satisfactory way of doing this is to insert with brickwork alternate layers of cast iron or steel plates. In normal working, the stock level should be kept just high enough to allow bell to swing freely when full open.

The number of tuyeres is not so important (if sufficient area for output is provided) as equal distribution and penetrative power of blast.

There should always be a reserve of blowing power available after providing for normal maximum requirements.

Where blast-furnace gas is fully utilised and gas economy a necessity, the blowing should be done by gas engines. Where there is a surplus of gas the turbo-blower can be installed with advantage, and will prove an ideal blowing engine. Reciprocating steam-blowing engines are still being installed, but only in cases where conditions make it unsuitable or inconvenient to discard existing plant.

Cooling.—Apart from tuyeres, jumbos, and hearthcooling, any cooling appliances provided for the bosh or upper lining should be carefully considered; external or spray-cooling has the great advantage that leakage of water into the furnace is prevented, or rather more easily detected. The trouble caused by water leakage from blocks inserted in the building is considerable, and can never be fully known; it is often when the damage is done the leak is located. The latest practice is to spray-cool the bosh and sometimes the entire outside shell; by this means a much thinner brickwork can be used, the furnace preserves its original lines longer, and the lining has a longer life. Table V. illustrates the saving in labour costs with modern methods.

Stoves.—Should be as simple in design and equipment as possible, with ample facilities for cleaning and inspection, and have a good chimney draught.

Using unwashed gas, chequers should not have less than 9-in. by 9-in. openings; with washed gas smaller chequer openings can be used, giving greatly increased heating surface for same size of shell, and higher blast temperatures and lower chimney temperatures for same gas consumption. Openings 3½ ins. × 3½ ins. with 2-in. thick walls have proved satisfactory in practice.

In latest practice for heating stoves the gas and air is forced by special fan into combustion chamber, the stove burns more gas, which gives higher and more regular temperatures, with a saving up to 25 per cent. in stove construction for a given production.

Preheating the blast before entering the stove proper is in successful operation with increased average temperatures.

It is decided economy to clean blast-furnace gas, as better results are obtained.

It is no advantage to go beyond 1,550°F. in stove heats, any fuel economy being more than off-set by stove repairs.

Better results with certain ores will sometimes be obtained by running on lower blast heats; this may seem to conflict with theory, but in blast-furnace work it is often the case that sound theory follows successful practice.

Uniform ore mixtures and quality of fuel and flux should be kept in view, rather than frequent changes of ore mixture, with varying qualities of fuel and flux. It is an advantage to break hard dense ores, especially magnetites.

The approximate saving in lbs. of coke per ton of iron by increase in blast temperature is as follows:—

1,000°	to	1,100° F.,	50 lbs.
1,100	,,	1,200° ,,	40 ,,
1,200	,,	1,300° ,,	30 ,,
1,300	,,	1,400° ,,	20 ,,

Dry Blast.—Average results with dry blast give a saving of 10 per cent. in fuel consumption with 10 per cent. increase in output, more regular grade of metal, and more regular working conditions.

A blast furnace in its working and results responds readily to improper treatment; proper regulation of flux has much to do with this, and the formation of a correct slag is all important.

The slag should not be too basic or limey; this causes the furnace to become stocky and gob up. If the slag is too acid the furnace will drive harder, but trouble is sure to result with grade and quality of pig.

When the lime content of slag is high it will prove profitable to make such slag into cement; the slag form from furnaces making Bessemer iron will generally be found suitable for this purpose. Most blast-furnace slags can be easily made into first-class building bricks.

The slightest indication of irregular furnace working should be promptly attended to and put right; irregular conditions will probably show first in change of slag or irregular settling of stock. The appearance and degree of fluidity of the slag is the furnaceman's best indication of working conditions.

Irregular working at tuyeres is generally caused by water leakage from jumbos and tuyere blocks. It is quite possible for tuyeres to be shut by water leakage, in spite of very careful watching.

No tuyere in a regular working furnace will close while the blast is on except by water leakage.

Irregular working at tuyeres is sometimes caused by an alteration in burden; in this case every tuyere will give trouble, which will continue till the trouble has been put right.

The best way to open tuyeres that may have been hard closed by slips, irregular working, or water leakage, is by the application of oxygen; the apparatus used is simple and cheap: the worst stuck tuyere can be opened in a few minutes.

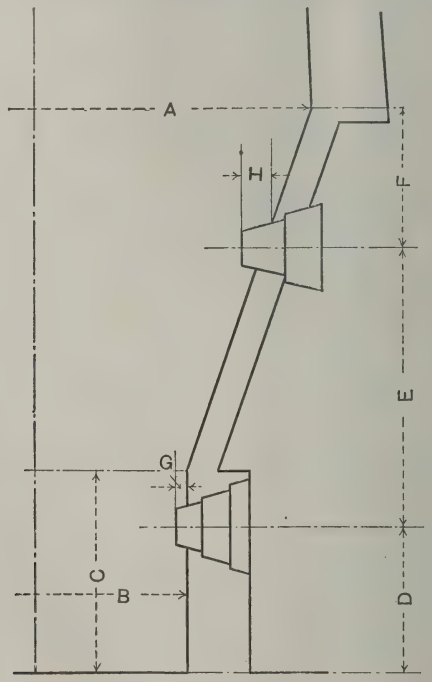


FIG. 20.—Bosh Tuyere.

Bosh tuyeres it is claimed increase the output of a furnace 20 per cent. with a slight increase in fuel consumption and more regular working. Fig. 20 and Table VII. give sizes and position of bosh tuyeres from actual practice.

TABLE VII.—BOSH TUYERES.

(*See Fig.* 20.)

Furnace.	A	B	C	D	E	F	G	H	Tuyeres. Bosh No.	Tuyeres. Bosh Dia.	Tuyeres. Main No.	Tuyeres. Main Dia.
	ft. in.	ft. in.	ft. in.	ft. in.	ft. in.	ft. in.	in.	in.		in.		in.
1	20 0	12 6	8 0	5 6	9 0	6 0	6	4	5	4	8	5
1 (*a*)	18 6	11 6	7 6	5 3	5 5	9 4	6	4	6	4	8	5
2	21 0	13 0	—	6 6	10 7	2 6	9	—	6	3	12	5–6
3	19 10	11 0	—	5 6	6 6	12 9	9 to	5	5	4 to 3½	9	6
3 (*a*)	19 10	11 0	—	5 6	7 6	11 9	3	5			9	6
4	20 0	12 6	—	7 10	10 7½	0 10½	9	6	4	6	8	5½
5	19 0	11 0	—	5 3	9 5	3 10	6	4	5	4	8	5
5 (*a*)	21 9	12 6	—	7 0	10 9½	3 11½	6	4	5	4	10	6
6	19 8	11 0	7 3	5 3	9 4	5 10	6	2½	4	2½	8	5
6 (*a*)	19 8	11 0	7 3	5 3	11 0	4 2	6	3	4	4	8	5

(*J. S. Hollings.*)

Flue Dust.—The treatment of flue dust has developed into a distinct branch of blast furnace work; the true solution of the problem is to keep the dust in the furnace, thereby increasing production and reducing costs. Flue dust is caused chiefly by (1) fine ores; (2) soft fuel; (3) hard driving; briquetting or sintering gets over the first, but furnace design will need to be adapted to surmount the second and third. Table III., page 2239, gives some striking figures of the production of flue dust per ton of iron in a modern furnace. The recovery of potash from the flue dust and gases has now passed from the theoretical to the practical stage.

'HEENAN' BLAST-FURNACE GAS CLEANSERS.

We are informed by Messrs. Heenan & Froude, Ltd., Worcester, that they have developed a new type of cleanser for dealing with blast-furnace gas. This is capable of dealing with heavy volumes of dust, and is so arranged as to extract a large percentage of the water vapour contained in the hot crude gas.

CUPOLAS.

BLAST-QUANTITY AND PRESSURE IN CUPOLA WORKING.

An average of 120—in terms of quantity of air in pounds, multiplied by $\sqrt{}$ pressure in ounces—is required to melt one ton of ordinary phosphoric iron.

The maximum output of metal melted per hour is more nearly comparative to diameters of cupolas than areas of same.

The maximum output of a cupola will be obtained when the pressure and quantity of the blast in ounces and pounds per minute respectively are so adjusted that $\frac{W\sqrt{P}}{D} = 330$, D being the diameter of the melting zone in feet. Any further increase in the product $W\sqrt{P}$ results in excessive oxidation of the metal in the cupola.

Iron melted in a cupola is affected in hardness directly as the pressure of blast used, so that the total area of the tuyeres employed should be regulated according to the class of iron being melted, small areas being used when greater hardness is required.

The height of the cupola from the top tuyeres to the charging-door sill should *not be less* than two and a half to three times the diameter across the melting zone.

The coke consumption in a well-designed cupola need not be more than 0·075 lb. to 0·09 lb. per pound of ordinary phosphoric iron melted, when the coke contains from 90 to 92 per cent. of carbon. (*F. J. Cook.*)

CENTRIFUGAL FANS FOR CUPOLAS AND SMITH'S FIRES.

To give the high pressure required to supply air to Cupolas and Smith's Fires the fans must be of the 'centrifugal' type and suitably designed. They usually have smaller inlets and outlets than those used for ventilating, as pressure, not volume, is the essential feature.

Care is required in the choice of a suitable fan, as the efficiency varies within wide limits with the design.

CENTRIFUGAL FANS FOR CUPOLAS, SMITH'S FIRES, ETC.

No. of Fan.	For Cupolas.				For Smith's Fires.		
	Dia. of Cupola.	Tons per Hour.	Speed r.p.m.	Power B.H.P.	No. of Tuyeres.	Speed r.p.m.	Power B.H.P.
1	—	—	—	—	3	3,825	$\frac{3}{4}$
2	18	1	4,100	$2\frac{3}{4}$	6	3,050	$1\frac{1}{2}$
3	18	$1\frac{1}{2}$	3,150	4	10	2,440	$2\frac{1}{2}$
4	24	$2\frac{1}{2}$	2,950	7	15	2,280	$4\frac{3}{4}$
5	36	$3\frac{1}{2}$	2,600	10	20	2,030	$6\frac{1}{2}$
6	42	$4\frac{1}{2}$	2,230	14	28	1,810	10
7	48	6	2,050	20	37	1,510	13
8	54	8	1,800	26	50	1,400	18
9	60	10	1,600	35	60	1,250	24
10	66	13	1,450	42	80	1,080	32

The duct to the cupola or fires should be made at least as large as the fan outlet; in long lengths it should be made larger, so as to reduce friction, which increases the power to no purpose. If the ducts are below ground cast iron is the best material; sheet-steel ducts $\frac{1}{8}$ in. thick, with flanged joints, are also very suitable, especially if carried above ground. If earthenware pipes are used great care must be taken to lay them straight, with good, sound, and permanent joints.

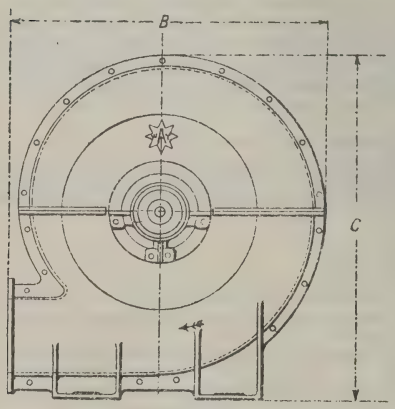


FIG. 21.

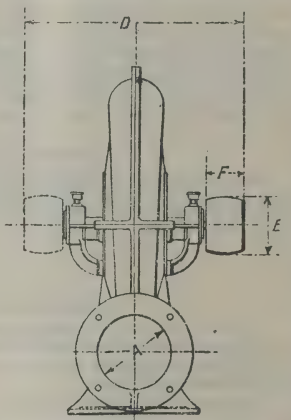


FIG. 22.

APPROXIMATE DIMENSIONS IN INCHES.

No.	A.	B.	C.	D.	E.	F.
1	4	17	19	14	3	$2\frac{1}{2}$
2	5	21	24	17	$3\frac{1}{2}$	3
3	6	26	29	20	$4\frac{1}{4}$	$3\frac{1}{2}$
4	7	30	33	22	5	4
5	8	34	37	24	6	4
6	9	39	43	27	7	$4\frac{1}{2}$
7	10	44	49	30	8	5
8	12	50	55	34	9	5
9	14	58	63	38	10	$5\frac{1}{2}$
10	16	67	73	44	12	6

(*Oswald Stott.*)

VELOCITIES AND VOLUMES OF AIR AT VARIOUS PRESSURES.

Pressure. Ins. Water Gauge.	Pressure. Ozs. per sq. in.	Velocity of outflow. Corresponding ft. per sec.	Volume through 1¼ in. tuyere = 1·2 sq. in. cu. ft. per min.	Volume through 10 sq. ins. of Orifice cu. ft. per min.	Air h.p. with 10 sq. ins. Orifice.
½	0·3	46·4	23·2	193	0·015
¾	0·45	56·9	28·4	237	0·028
1	0·6	65·6	32·8	273	0·043
1½	0·9	80·4	40·2	335	0·079
2	1·2	92·8	46·5	387	0·122
3	1·8	113·4	57	473	0·223
4	2·4	130·8	65·5	545	0·343
5	3	145·8	73	608	0·478
6	3·5	160	80	667	0·630
8	4·7	183·9	92	766	0·965
10	5·9	205·2	103	855	1·35
12	7	224·5	112	935	1·77
14	8·2	241·6	121	1,007	2·22
16	9·4	258·2	129	1,075	2·71
20	11·8	287·0	143	1,195	3·77
24	14	313·0	157	1,304	4·93
28	16·5	336·8	169	1,404	6·18
32	19	357·9	180	1,492	7·51

DETAILS OF DISCHARGE NOZZLES, ETC.

Size No.	Diam. Discharge Nozzle.	Overall Sizes. Length.	Breadth.	Height.	Melting Capacity Tons per hour.	Cupola Diam.	Speed of Fan.	Pressure inches Water.	B.H.P.
	Ins.	Ins.	Ins.	Ins.		Ins.			
0	4	17½	14	18	½– ¾	15	4,800	10	1½
1	4⅞	20	16½	21	¾– 1¼	16	4,700	12	2½
2	5⅜	23	18	24	1¼– 1¾	18	4,100	12	3¾
3	6¼	27	21	28	1¾– 2½	20	3,700	14	5¾
4	7⅜	31½	26	33	2½– 3½	26	3,200	14	7½
5	8⅞	37½	29½	39½	3½– 4½	29	2,900	16	12
6	10½	43	34	45½	4½– 6	35	2,750	16	15
7	12	50½	41	52	7 – 9½	41	2,300	18	27
8	13⅞	58	46	59	10 –14	53	2,100	18	40
9	16	67	51½	69½	13 –17	70	1,800	20	50
10	18½	76½	61	80½	17 –23	80	1,600	20	66

(Sturtevant.)

MUFFLE FURNACES.

Heat Treatment of Metals in Coal-gas Furnaces.

Furnaces of the oven and muffle types heated by several different systems—natural draught, air blast, 'Lopress'—are manufactured for annealing, normalising, case-hardening, tempering, forging, and other heat treatments of iron, steel, and the non-ferrous metals.

Fig. 23 shows an oven furnace heated by the 'Lopress' system, in which gas at ordinary main pressure is used in conjunction with air at approximately 4-in to 6-in. water gauge. No compressor is necessary, the requisite air supply at this pressure being derived from a fan. Very rapid heating and much higher temperatures can be obtained compared with natural-draught heated furnaces. The 'greasy' flame so essential to annealing work on a large scale can be produced to perfection, while economy is ensured by regeneration of the air supply to the burners.

It is difficult to give comprehensive figures, as heat treatments differ so much, both in duration and intensity.

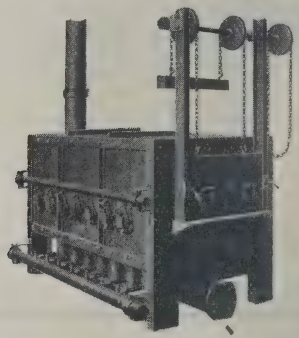


FIG. 23.

The following are figures from actual practice :—

Operation.	Load.	Duration.	Cub. ft. ton.
Annealing H.S. steel . . .	3½ tons	8 hrs.	3,000
,, steel	3½ tons	15½ hrs.	6,000
,, C.I. parts packed in filings in boxes	2,000 lbs.	3 hrs.	3,360

High-speed Tool Steel.*

In no heat treatment of metal is uniformity of furnace temperature more important than in the treatment of high-speed steel. Tool makers nearly always state the exact temperature required for various processes.

The furnace shown in fig. 24, page 2255, enables any temperature to be quickly reached and regularly maintained down to the very narrow limits frequently required by particular steels.

* See also p. 980.



Typical example of **Radiation** Gas Oven Furnaces installed at a modern works for case-hardening and other heat treatment processes.

Radiation

Gas and Solid Fuel Furnaces

Used by all leading Engineering Firms, Steel Manufacturers, Automobile and Motor Cycle Makers, Aero-Engine Makers, etc. **Radiation** Heat-treating plant has helped to build and maintain standards of efficiency, endurance and finish that are to-day world famous. Every **Radiation** Furnace that leaves our Works is destined to uphold the reputation of its Manufacturer *and its user.* Send for Furnace List.

Radiation
LIMITED
FURNACE DEPARTMENT
164-172 Queen Victoria Street, London, E.C. 4

Associating the Furnace patents, designs and manufacturing resources of

Brayshaw Furnaces & Tools Ltd.

The Davis Furnace Co.

Fletcher Russell & Co. Ltd.

The Richmond Gas Stove & Meter Co. Ltd.

John Wright & Co.

CHALK, ABERCROMBIE & CO.

Engineers and Metal Merchants.

Plant and Machinery
of all kinds
Purchased & Dismantled

Dealers in

Iron and Steel Scrap,
Non-Ferrous Metals,
. . etc., etc. . .

YARD :
Partick West Station (Caledonian Railway)
OFFICE and STORE :
5 Robertson Street, Partick, Glasgow
Telegrams : 'Equator, Glasgow.' Telephone : Western 1756.

F. 2255

Whatever the composition of the steel, this furnace enables the operator to produce good tools giving the maximum of service and avoiding the waste of expensive material and time due to under, over or irregular heating, etc.

The upper chamber is heated by waste heat from the lower, and serves to preheat the tools, etc., before they are put into the lower chamber, thus raising them to a medium temperature preparatory to the final rapid heating necessary to bring them to the hardening temperature.

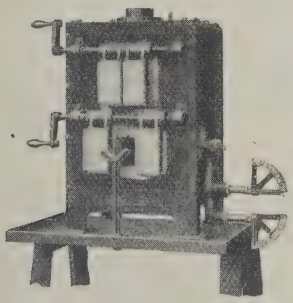


FIG. 24.

CRUCIBLE MELTING FURNACES.

(L. C. Harvey.)

Numerous types of melting furnaces have been designed to meet the wide scope of demand for such plants, and some of these patterns are referred to hereunder.

'Lift-out Crucible' or Pit Type Furnaces.—These are supplied where requirements of molten metal are small, or in cases where it is preferable to melt in relatively small capacity crucibles. *Natural Draught Coke Furnaces* can be either connected up to one main flue and chimney or can be provided with smaller collecting flues, each flue having a chimney to serve a small number of fires, or again, each fire can have its own small stack.

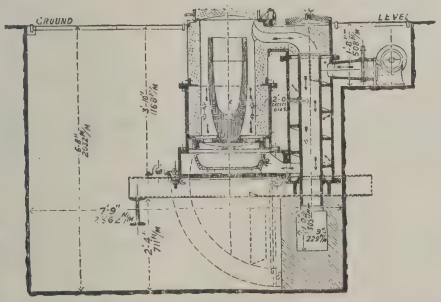


FIG. 25.—Furnace for Coke and Forced Draught. Sectional view, showing ground level.

Forced Draught Coke Furnaces (fig. 25) can be similarly arranged as regards provision for exhausting the waste gases, and as they are not dependent upon chimney pull the heights of stacks are considerably less than those required for natural draught furnaces.

MELTING FIGURES FOR COPPER.

Fuel.	Types of Furnaces and Range of Crucible Capacities.	Most useful Sizes for General Work.	Melting Times, etc., for the larger of the more useful Sizes mentioned.		
			First Heat.	Subsequent Heats.	Fuel Consumption by Weight for full Working Day.
			H. M.	H. M.	
Foundry Coke. 12,960 B.T.U. per lb.	Pit Furnace :—				
	Natural draught . 40 to 400 lbs.	150 to 200 lbs.	1 30	1 0	40 per cent.
	Forced draught . 40 to 350 lbs.	200 lbs.	1 20	0 50	24 „
	Tilting Furnaces . 200 lbs. to ½ ton	400 to 600 lbs.	2 0	1 30	16 „
Fuel Oil. 19,700 B.T.U. per lb.	Pit Furnaces . 40 to 350 lbs.	150 to 200 lbs.	1 10	0 45	20 „
	Tilting Furnaces . 250 to 800 lbs.	250 to 600 lbs.	2 30	1 30	12 „
Producer Gas. 140 B.T.U. per cub. ft.	Pit Furnaces . 100 to 300 lbs.	100 to 200 lbs. (multiple type 6–12 crucibles)	2 0	1 30	30 cub. ft. per lb. of metal.
	Tilting Furnaces . 250 to 800 lbs.	400 to 600 lbs.	2 30	1 30	20 cub. ft. per lb. of metal.

It is usual to supply air from a blower or fan of sufficient capacity to feed any number up to the whole of the plant. Forced draught offers the advantages of (*a*) independence of atmospheric conditions, and, therefore, absence of variation in chimney pull; (*b*) quicker heating qualities of furnaces; (*c*) a greater degree of heat intensity than is possible under all conditions in natural draught furnaces.

Oil-fired Furnaces.—These can be fitted with burners to work with compressed air at 20-30 lbs. per square inch, depending to a large extent upon the temperature desired, the higher pressure effecting a more perfect atomisation of heavy grades of fuel, or with low pressure burners which run with a pressure of only $\frac{3}{4}$ lb. per square inch for all temperatures up to that necessary for melting mild steel and nickel.

The former require an air compressor, which is a relatively expensive machine, and may develop 5 to 10 h.p. per burner, whereas the latter needs only the ordinary open high-speed fan, and the burners will take $1\frac{1}{2}$ to $2\frac{1}{2}$ h.p. according to size of the furnace, etc. Almost any grade of commercial fuel oil can be used with either type of burner, and this is fed to the burners by gravity.

The 'Radiation' Gas or Oil-Fired (Pit Type) Crucible Furnace.

(*Radiation, Ltd.*)

This furnace (for use with air blast) is specially suitable for melting copper, brass, nickel, aluminium, and other non-ferrous metals. The furnaces are made in sizes for melting from 60 lbs. to 300 lbs. of brass (or equivalent bulk of other non-ferrous metals) and they embody all improvements suggested by modern experience; they contain many exclusive and patented features.

Capacities and Dimensions of Radiation Furnaces.

Capacity of Crucible in Brass.	Outside Dimensions of Crucible.		Floor Space Overall.		Height.	Size of Gas and Air Connections.
	Height.	Diameter.	Depth.	Width including flue		
lbs.	ins.	ins.	ins.	ins.	ins.	ins.
60	$11\frac{3}{4}$	$7\frac{7}{8}$	47	56	33	1
100	14	9	47	58	35	$1\frac{1}{4}$
150	$16\frac{3}{4}$	$10\frac{1}{4}$	48	63	36	$1\frac{1}{2}$
200	18	10	50	63	41	$1\frac{1}{2}$
300	$20\frac{1}{2}$	$12\frac{3}{4}$	53	66	43	$1\frac{1}{2}$

Only one burner is used to operate, except in larger sizes, and quadrant cocks on gas and air connections are fitted, and are easily adjustable to give complete combustion and high efficiency.

The following are typical results obtained :—

MELTING OF COPPER—Pouring temp. 1200° C.		
Average per lb.—	C. feet.	B.Th.U.
For 5 Melts . .	3·70	1,924
„ 6 „ . .	3·50	1,820
„ 7 „ . .	3·35	1,742

MELTING OF BRASS—Pouring temp. 1000° C.		
Average per lb.—	C. feet.	B.Th.U.
For 6 Melts . .	2·25	1,203
„ 12 „ . .	1·92	1,031
„ 15 „ . .	1·86	996

Exceptional economy in gas (or oil) consumption is insured by means of the patented pre-heating arrangements for both metal and air supply.

The material saving effected is shown by the following summary. The figures given are for melting yellow brass.

	Gas Consumption per Pound of Metal melted.	
Number of consecutive melts	4	6
With no pre-heater	3·10 cubic ft.	2·91 cubic ft.
Brass only pre-heated	2·72 „ „	2·48 „ „
Brass and air pre-heated	2·42 „ „	2·17 „ „

At a foundry using a 100-lb. crucible, the following results were obtained, covering a full week's working under ordinary foundry conditions: Charge, electric bronze (ingots and scrap); nature of work, sand castings; gas consumption (per 100-lb. melt), 300 cu. ft.; No. of heats per 8-hr. shift, 11; Average time per melt, 42 mins.; life of crucible, 34 melts per pot.

In one day consisting of 12 working hours, 1011 lbs. of electric bronze were melted and cast, also one pot of aluminium. But for loss of heat during meal hour, a still greater output would have been attained.

Producer Gas can be applied to lift-out crucible furnaces if these are made in the multiple form, viz. several crucibles in one common melting chamber, or several crucibles in separate chambers, but exhausting into one air or gas heating regenerator.

For ordinary low-power producer gas, 135 to 175 B.Th.U. per cubic foot, it is essential to preheat the air or gas supply to about 300° C. for efficient melting of copper alloys; for iron and higher temperature melting, both the gas and air should be supplied at about this temperature.

When using high-power gas, such as water gas of roughly 280 B.Th.U. value per cubic foot, no preheating is required for melting temperature up to about 1,400° C.

Tilting Furnaces *for Coke Fuel* are always of the forced draught pattern, for one of their chief features, quick heating, would be greatly impaired if worked on natural draught. This type of furnace is more efficient than the pit type, and it has the important advantage of melting in greater bulk than can be handled in a lift-out crucible—up to ½ ton of metal at one charge—and the further advantage of making it possible to mechanically tilt the furnace on a fixed front trunnion, so that the metal can be poured direct into ladles or moulds. In the portable pattern the body portion holding the crucible can be transported by means of an overhead crane to the point at which the molten metal is wanted.

Furnaces for Oil Fuel.—The remarks made above in connection with pit furnaces apply also to the tilting pattern. The economy in oil when melting, say, ½ ton of metal in one crucible with one burner, will be very marked, compared with, say, five burners for five 200-lb. size pit furnaces, and the consequent saving in power for air blowers is equal in proportion.

Producer Gas can be applied to tilting furnaces as for pit furnaces, but tilting furnaces being of greater capacity than the latter it becomes possible to run single furnaces with producer gas, the heat in the waste gas being utilised to warm the incoming air or gas supply. For copper alloys it is usual only to preheat the air.

The table on page 2257 gives an indication of the melting times, etc., for copper. Calculations can be readily made within approximate limits for metals of other known melting points.

ELECTRIC FURNACES.

(A. H. Allen, M.I.E.E., and Owen W. Ellis, M.Sc.)

The classification of electric furnaces has already been dealt with (pp. 2235–2236). It remains to treat in detail of these furnaces and their application industrially.

Electric Furnaces Heated by Resistance Effects.

Those furnaces of this type in which the charge is included in the electric circuit (fig. 26) are of indirect interest only to the engineer. They are employed largely in the manufacture of aluminium, carborundum, calcium carbide, etc.

Those furnaces of this type in which the charge is heated by means of an electrically-heated conductor find extensive employment in laboratories, and are coming into more general use for the annealing and thermal treatment of steel and the melting and heat treatment of non-ferrous alloys.

The smaller furnaces, such as are used in laboratories, are often made after the style of gas-heated muffle furnaces, but in place of gas jets, wire of platinum or incorrodible alloy, heated by the passage of an electric current, is wound round the body of the chamber. Another type consists of a tube of carbon, cut into a spiral or helix, through which the current flows.

Discussing furnaces of the larger type, T. F. Baily states that a 150-kw. annealing furnace heating 1,000 lbs. of steel to 900° C. in one hour consumes 300 kw. hours per ton. With regard to melting in a shop working 24 hours per day, the following costs were recorded :—

	s.	*d.*
Electricity, 400 kw. hours per ton at ½*d.*	16	8
Metal loss, 1 per cent. zinc at 5*d.* per lb.	8	4
Labour, 1 man per 600 lbs. per hour at ⅛*d.* per hour .	5	0
Renewals and repairs	4	2
Total per ton of brass melted	£1 14	2

These furnaces are provided with separate heating elements of carbonaceous material, which do not come into contact with the charge, but are made incandescent by the current passing through them, and thus heat the interior of the furnace chamber.

Induction furnaces (figs. 27 and 28), which may be classed under this head, find employment in the manufacture of steel. They are able to hold their own against other types of steel-melting furnaces on account of their steady current consumption and low power consumption in the melting of cold stock, but suffer from certain disadvantages of a well-defined character. The heat being generated in the metal and only conducted to the slag renders it impossible to work a fluid basic slag, with the result that desulphurisation of the charge is not so efficiently carried out as in the case of furnaces of the resistance or arc-resistance type. Nor can dephosphorisation be so perfectly attained, since the design of these furnaces militates against ready and complete removal of the oxidising slag needed for the removal of phosphorus. A further disadvantage arises as a result of the continuous circulation of the molten metal in the bath which leads to the erosion of the lining. This, in addition to the corrosive effect of the slag, leads to high figures for lining repairs.

Were the induction furnace of more flexible character and efficient design, it should find wide application in the melting of brass containing as high as 50 per cent. zinc. At present this type of furnace is being experimented with in the direction of non-ferrous alloy melting.

Electric Furnaces heated by Arc Effects.

Only furnaces in which indirect heating of the charge (fig. 29) is carried out, are of interest in this connection. The Stassano furnace is the most striking example of this type. The power consumption of arc furnaces is high, and fluctuations in the value of this factor are, when the furnace is being employed in the fusion of cold stock, of high magnitude.

In the melting of copper alloys the indirect arc furnace may be employed economically in large units. For melting brass containing not more than 10 per cent. zinc it has also been used.

Electric Furnaces heated by Combined Resistance and Arc Effects.

By far the largest number of electric furnaces in use industrially are of this type. In this class of furnace an arc is struck between the extremities of vertical electrodes and the liquid or solid furnace charge (fig. 30). In many furnaces of this type negative electrodes are built into the furnace bottom or sides so that current is forced to flow through the bath (fig. 31). In both cases the bath is heated by (i) the heat of the arc and (ii) the heat produced by the resistance of the steel and slag to the passage of electric current.

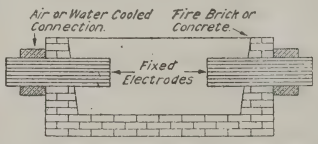


FIG. 26.

Cross Section of Resistance Furnace. Current passes from one electrode through the charge to the other electrode.

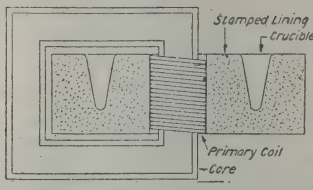


FIG. 27.

Cross Section of Single Ring Induction Furnace.

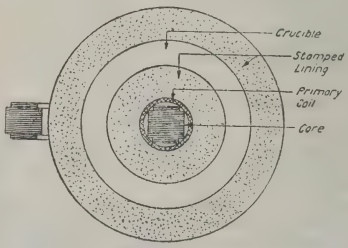


FIG. 28.

Cross Section in Horizontal Plane of Single Ring Induction Furnace.

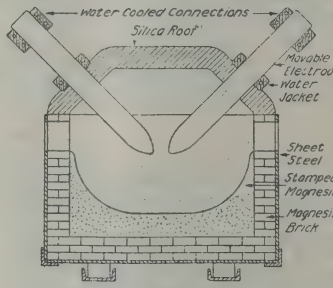


FIG. 29.

Cross Section Indirect Heating Arc Furnace. Current arcs from one electrode to the other above charge.

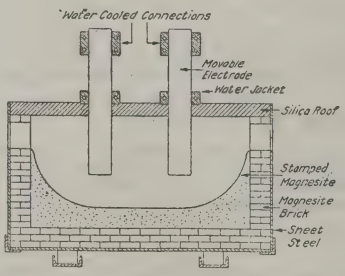


FIG. 30.

Cross Section Direct Heating Arc Furnace. Current arcs from one electrode to charge and from charge to other electrode.


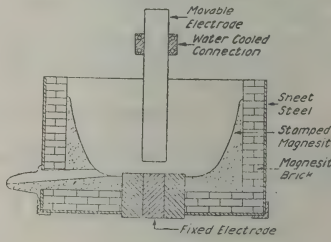


FIG. 31.

Cross Section of Smothered Arc Furnace. Current arcs from the electrode to the charge in which the electrode is plunged and the current passes through the charge to the lower fixed electrode.

ELECTRIC FURNACES

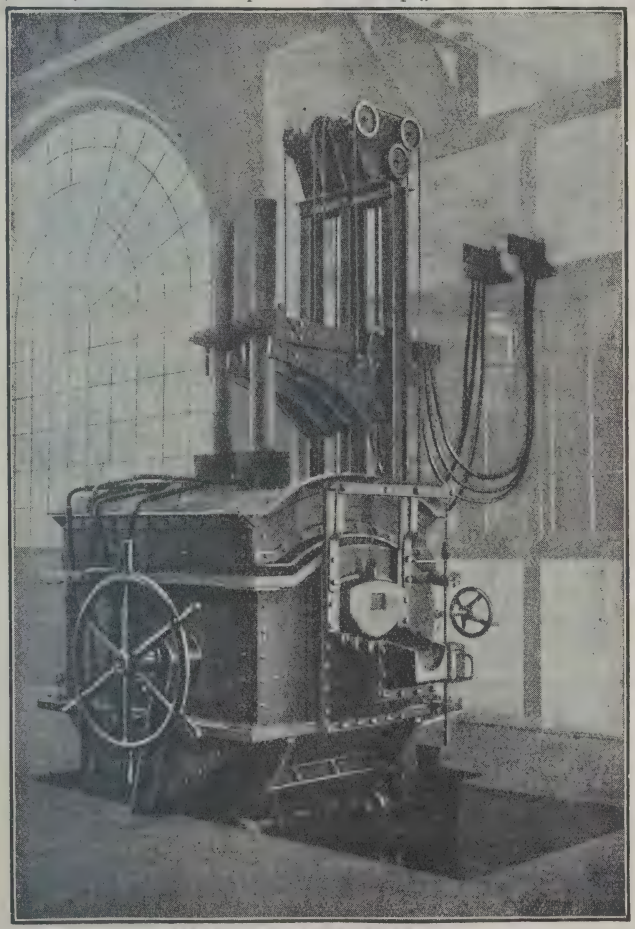For the manufacture of all kinds of steel, from the cheapest scrap, and for the production of pig iron from ore.




HALF TON STEEL FURNACE.

ELECTRO-METALS, LTD. —56 Kingsway,— London, W.C. 2.

F. 2260

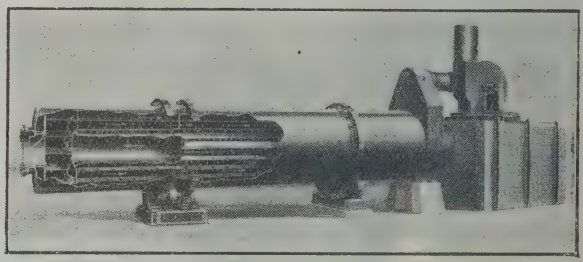DRYING PLANT



OUR DOUBLE-SHELL ROTARY DRYER

has a high thermal efficiency, is inexpensive to operate and has a simple robust construction. Due to the several different designs and sizes in which it is made, it is applicable for drying a very wide range of materials.

ELECTRO-METALS, LTD.

Head Office: 56 KINGSWAY, LONDON, W.C.2.

The electrodes, which are of graphite or amorphous carbon, are capable of movement in a direction parallel to their axis and are controlled, either by hand or by electrical device, so as to retain the arc at as constant a length as may be desired either for melting, refining, heating, etc., of the metal. In certain cases the practice of completely immersing the electrode in the molten charge—thus utilising the resistance effect of the electric current only—is in vogue.

For making steel the arc resistance type of furnace is that chiefly used, the charge generally consisting of scrap steel. The composition of electric steel can be very accurately controlled, and the proportions of sulphur and phosphorus in the final product can be reduced to mere traces. An improvement in quality is, therefore, to be expected. The most widely used arc-resistance furnace is the Héroult, of which, according to the Society for Electrical Development, 181 were in operation on January 1, 1917, 84 of these being in the United States and Canada. These and similar furnaces are largely used for making small castings in steel, malleable iron, and cast iron, their capacities ranging from 1 to 20 tons ; 6-ton furnaces are very common. Other well-known furnaces of this class are the Girod, Nathusius, Keller, Grouwall, Electro-metals, and Greaves-Erchells. Each of these furnaces is possessed of special characteristics which appeal to individual users. While steel melting and refining, and the production of steel and iron castings, occupy the vast majority of electric furnaces, all the foregoing types can be, and have been, used for melting brass, copper, etc., though it is questionable whether their use for such purposes can be considered as expedient.

Arc-resistance furnaces for steel melting are most frequently lined with basic refractory materials. Acid-lined furnaces are, however, employed, chiefly to melt down high-grade raw materials. The necessity for utilising such materials, for which high prices must be paid, renders the mere melting process a costly one. Further, as the treatment of molten steel on an acid hearth leads to an appreciable gain in those elements, sulphur and phosphorus, most to be avoided, the process is still further limited in its application.

The process employed for the production of steel in basic-lined arc-resistance furnaces is determined by (*i*) the stock on hand and (*ii*) the product desired.

Should the stock on hand be of fair quality, i.e. containing contents of sulphur and phosphorus not above 0·06 per cent., the process may consist of (*i*) the application to the charge of a basic oxidising slag and (*ii*) the conversion of this slag, by means of suitable additions of coal dust and lime, into a reducing slag, which is allowed to remain in contact with the molten steel during the operations of teeming from the furnace and of casting from the ladle. Such additions of ferro-alloys as are required to bring the steel up to the standard required are made when the slag is as completely reducing in character as is possible under the conditions imposed by practice.

If the stock on hand is of poor quality, i.e. should it consist of scrap containing high (from 0·06 to 0·20 per cent.) sulphur and phosphorus, or if it is desired to specially refine stock of fair quality, the first slag—the basic oxidising slag—is removed from the surface of the steel in the furnace. The removal of this slag implies the removal of the major portion of the phosphorus from the steel, and unless the removal be very complete a return of phosphorus to the steel may be expected, the content of phosphorus returning to the steel under these conditions being roughly proportional to the amount of slag allowed to remain upon the charge. Occasionally it may be necessary to apply a further oxidising slag to the metal in the bath ; generally, however, one slag only is made. The first slag having been removed, deoxidation and desulphurisation are effected by the medium of a slag composed largely of calcium silicate. The 'physic' required to provide for carbon, manganese, etc., in the finished steel may be added immediately after the first slag has been removed. Generally speaking, the additions are made at a later stage in the process. The complete deoxidation of the metal is made evident by the appearance of the slag, which, the above conditions prevailing, decrepitates spontaneously and is practically white when cool.

Melting and refining carried out on a basic hearth results in a practically complete loss of carbon, silicon and manganese, and a very appreciable loss of sulphur, phosphorus and such elements as chromium, molybdenum, etc.

The possible uses of the electric furnace in the steel foundry have been tabulated by J. H. Hall :—

Melt scrap . . .	Impure : eliminate phosphorus and sulphur. Pure : get hot and cast. Alloy steels.
Melt pig and more or less scrap. Eliminate C, Si, Mn.	Impure : eliminate phosphorus and sulphur. Pure : get hot and cast.
Treat hot metal . .	From cupola : eliminate C, Si, Mn, S and P. From acid Bessemer or open hearth : eliminate S and P. From basic open hearth : eliminate S and P.
Melt pig and scrap and treat cupola metal	Eliminate C, P and S without loss of Mn and Si. (Greene's process.)

The arc-resistance furnace proved to be of value during the war in the preparation of high-grade pig iron to replace the Swedish pig iron so much sought after for the preparation of high-grade steels.

According to E. K. Scott, a 10-cwt. steel-melting furnace running 9 charges a day will do as much as 36 crucible-steel furnace holes, each accommodating two 56-lb. pots, and can be operated by one man and an ammeter boy, whereas the crucible furnaces require 15 men, most of them skilled. The electric furnace, with its transformer and switch-gear, occupies one quarter as much space as the crucible plant, and costs half as much to instal. It can deal with a charge consisting entirely of turnings, millings, etc., whilst in the crucible-steel process only a very limited quantity of turnings can be used. The renewal of the furnace linings costs less than that of crucibles for the same output. Consequently the electric-steel furnace has been largely adopted in Sheffield in place of crucible furnaces.

The chief **losses** in electric furnaces are due to radiation from the walls and conduction through the electrodes. Since the radiation losses increase as the square and the capacity as the cube of the linear dimensions of furnaces, it is obvious that large installations are more economical than small ones. Conduction losses can be reduced to a minimum by suitably designing the electrodes.

Although, with coal at 14*s.* per ton and electrical energy at ½*d.* per kw.-hour, the latter costs twenty-eight times as much as the former per British thermal unit purchased, the efficiency with which the electrical energy is applied is so much higher that the difference is largely neutralised, and in the case of crucible steel is completely wiped out. In addition, the labour cost is greatly reduced with electric furnaces and there is a considerable economy of space and buildings, while the steel produced is of higher quality and uniformity than by any other method.

A useful method of calculating heat flow through the furnace walls, etc., has been developed by Carl Hering on the lines of Ohm's law. If—

W = heat flow in watts,
T = drop in temperature in degrees C.,
R = thermal resistance in 'thermal ohms.' Then—

$$W = T/R.$$

A thermal ohm is that thermal resistance which requires a drop of temperature of 1° C. to produce one watt of heat flow and = 4·2 gramme-calorie units; 1 gramme-calorie unit of thermal resistance = 0·24 thermal ohm.

Assuming that the electrodes are of uniform section, and that no lateral loss of heat takes place—conditions which are only approximately fulfilled in practice—Hering finds that the total loss of heat through the cold end of the electrode equals the sum of the loss by heat conduction alone (i.e. when no current is flowing) and half the T^2R loss. This combined loss is least when the loss by heat conduction alone equals half the T^2R loss; the total loss then equals the T^2R loss, and no heat will be conducted out of the furnace by the electrodes. This minimum loss is dependent only on the material of the electrodes, the current, and the temperature, but not on the absolute dimensions: it fixes the ratio of cross-section of electrode to length. In the case of a furnace working at 1,400° C., the cool end of the electrode being at 100° C., the length of the electrode 20 ins., and the current 10,000 amperes, the following dimensions were given by Hering's method of calculation: –

Carbon, 12·5 ins. diameter, loss of power in electrode 23·4 kw.
Graphite, 7·1 ins. diameter, loss of power 15·1 kw.
Iron, 4·8 ins. diameter, loss of power 4·6 kw. (*Stansfield.*)

F. T. Snyder states that in the case of a furnace melting 1,000 tons of steel a month, the cost of renewing the electrodes, plus the cost of the heat conducted out of the furnace by them, represents an expenditure of some 1,200*l.* a year per electrode. Hence the type of furnace having the fewest electrodes has an advantage in this respect. By using the metal bath as one terminal of the arc, a furnace can be operated with one carbon electrode per arc. The furnace lining becomes conducting at very high temperatures, and this fact limits the voltage between two electrodes passing through the same roof to a maximum of 110 volts to avoid serious leakage of current. The bulk of the cost of renewing refractory linings is due to roof wear round the

electrodes, and for the size of furnace above mentioned can be kept down to 800*l.* per annum per electrode. The higher the power input the quicker is the heating and the greater the efficiency of the furnace. With three electrodes the limit of power is soon reached, owing to lack of room to space the electrodes sufficiently far apart to prevent current leakage through the roof lining, but with a single electrode there is no such limit to the power input.

The power, etc., provided in connection with Héroult furnaces used by the United States Steel Corporation are given in the following table, which applies to cold charges; if the charge is put into the furnace in a molten condition about half this power suffices :—

POWER REQUIRED FOR ELECTRIC FURNACES.

Size of Furnace, tons.	Transformer capacity, kva.	Amperes, per phase.	Square inches Copper, per phase.
1	375	2,250	3
2	600	3,600	5
3	750	4,500	6
4	900	5,400	7
6	1,200	7,200	9
10	2,000	12,000	16
15	3,000	18,000	24

The voltage used in arc furnaces depends upon the current and the length of the arc. In three-phase furnaces it ranges between 75 and 100 volts, and in single-phase furnaces between 150 and 200 volts. In resistance furnaces the voltage at starting, with a cold charge, may be 400 volts, decreasing as the charge heats up to 35–60 volts. The consumption of the electrodes varies widely according to the conditions obtaining, from 3½ to 20 lbs. per ton of steel produced. The furnace bottoms last from 1 to 3 years, the walls from 100 to 300 heats, and the roof from 50 to 200 heats. To make ordinary carbon steel of crucible quality with a 6-ton furnace requires from 550 to 750 kw.-hours per ton, starting cold. In smaller furnaces the input per ton is greater. The following figures for a Rennerfelt furnace are due to C. H. Vom Baur.

ENERGY REQUIRED IN TREATING VARIOUS METALS.

	Kw.-hours per ton.
Melting red brass	168
„ pure copper	197
„ white iron	290
„ gray iron	325
„ 80 per cent. ferro-manganese	441
„ and refining steel scrap on a basic bottom	700

The power factor of the arc resistance furnace varies from 85 per cent. to more than 90 per cent.: that of the resistance type from 90 to 97 per cent.; that of the induction furnace varies from 50 to 60 per cent. only.

The efficiency of a Héroult furnace was tested with a charge consisting of 5,733 lbs. steel scrap, 430 lbs. iron ore, 346 lbs. lime. The input was 215 kws. for the first hour, at 110 volts, and afterwards 342 kws. The total time taken to melt the charge was 5⅛ hours, and the total energy input for melting was 1,680 kw.-hours. The ratio of heat utilised to heat supplied (the efficiency) was 76·5 per cent. The time required for the purification and carburisation of the steel was 3 hours, and the result was 5,161 lbs. of tool steel. The total consumption of energy was 2,580 kw.-hours, or 0·171 e.h.p.-year per ton of steel.

The leads from transformers to electric furnaces should be as short and direct as possible, and close together, as the voltage drop due to their self-inductance and the very large currents is considerable, resulting in a low power factor. The conductors should be wide thin bars, or tubes, to prevent loss of energy due to the tendency of alternating current to flow in the skin of the conductor.

ELECTRICAL RESISTIVITY OF MATERIALS, OHMS PER INCH CUBE.

Material.	Cold.	Hot.	Temperature ° C.
Graphite	0·00034	0·00031	100–2000
Carbon	0·0018	0·0014	100–2000
Silicate slag	∞	1 to 2	Molten
Fire bricks (various)	∞	8 to 24	850
		24 to 300	815

(*Stansfield.*)

FURNACE CONSTRUCTION.

The following are points requiring special attention in the construction of furnaces :—

1. Sections of furnaces such as are exposed to differing physical and chemical actions should be united in such a manner as to allow of free and independent movement and as to be subject to independent condition.

2. Such sections as are exposed to high temperatures should be made thin and should, when possible, be water-cooled; such sections as are exposed to low temperatures should be made of such a thickness as will reduce thermal losses due to radiation and conduction to a minimum.

3. The interiors of furnaces should be constructed so as to resist mechanical, physical and chemical wear. With this end in view choice must be made of suitable materials of construction and of efficient design. In this connection note should be made of the following factors :—

(*a*) The action of heat.
(*b*) The erosive and corrosive actions of flame, slag, etc.
(*c*) The mechanical wear due to abrasion by the solid charge, etc.

4. The exteriors of furnaces should be supported and strengthened in such a way as to allow of the free expansion and contraction of the body. The foundations of all furnaces must be of a strong and rigid character.

MELTING POINTS OF REFRACTORY MATERIALS.

	° C.
Alumina (pure)	2010†
Bauxite	1820†
Bauxite brick	1565 to 1785†
Bauxite clay	1795†
Chromite	2180†
Chromite brick	2050†
Fireclay brick—Highest grade	1843*
General grade	1650 (average)*
Ditto	1649 (average of 41 samples)†
Ganister	1700 to 1800
Kaolin	1735 to 1740†
Magnesia brick	2165
Silica—Pure	1750†
Pure	1830*
Pure, with 14·5 per cent. alumina	1690*
Pure, with 63·0 per cent. alumina	1890*
Brick	1700 to 1750†

The melting points have been considered to be those temperatures at which the material in question was first seen to flow easily.

* Boudouard.
† Kanolt—'Iron and Coal Trades Review,' vol. lxxxv. p. 309.

FURNACE EFFICIENCY.

The thermal efficiency of furnaces may be stated either absolutely or relatively :—

$$\text{Absolute furnace efficiency} = \frac{\text{Net thermal effect produced}}{\text{Calorific power of the fuel}}.$$

$$\text{Relative thermal efficiency} = \frac{\text{Net thermal effect produced}}{\text{Actual calories realised}}.$$

Owing to the large variation in the actual number of calories realised in individual furnaces it is general to employ the former of the above ratios. In order that a determination of the absolute efficiency of a given furnace may be made, a knowledge of the heat-absorbing and the heat-producing factors that are likely to be encountered in practice, of which a number are tabulated below, is required.

(*A*) Heat-absorbing Factors.

1. Heat absorbed by fume, gases, etc.
2. Heat removed by such solids and liquids as are periodically or continuously removed rom the furnace.
3. Heat lost by radiation and conduction.
4. Heat absorbed owing to endothermic reactions within the furnace.

(*B*) Heat-producing Factors.

1. Heat supplied to the furnace by the combustion of fuel either inside or outside the furnace.
2. Heat added by such solids and liquids as are periodically or continuously charged into the furnace.
3. Heat gained owing to exothermic reactions within the furnace.

The thermal efficiency of the furnace is represented by the ratio of the heat-absorbing factors to the heat-producing factors.

Latent Heat of Fusion of Metals.

The latent heat of fusion is the number of gram calories required to convert one gram of substance from solid into liquid without change of temperature :—

Mercury	2·8 calories.	Platinum	27·1 calories.
Lead*	5·5 ,,	Sodium	31·7 ,,
Bismuth*	10·2 ,,	Palladium	36·3 ,,
Cadmium*	10·8 ,,	Manganese*	36·7 ,,
Tin*	13·8 ,,	Antimony*	38·9 ,,
Potassium	15·7 ,,	Copper	41·0 ,,
Gold*	15·9 ,,	Nickel*	56·1 ,,
Iron	(See note).	Cobalt*	58·2 ,,
Silver*	26·0 calories.	Aluminium*	94·0 ,,
Zinc*	23·0 ,,		

* Values after Wüst. ' Stahl und Eisen,' 1918, 38, 177.

NOTE.—The latent heat of fusion of iron as determined by Campbell (and confirmed by Desch) from freezing-point depression data is 20·1. C. Brisker (1908), as a result of an examination of Carpenter and Keeling's freezing-point determinations of the iron-carbon system, has arrived at the value 31·6 for this element. Grumer gives values of 23 and 33 for gray and white cast iron respectively. Wüst obtained the value 49·4 for this factor.

Heat and Electrical Energy required for Fusion of Metals.

The following table (after Stansfield) gives the heat and electrical energy required to melt various metals, per lb. :—

	Calb.*	Watt-hours.		Calb.*	Watt-hours.
Tin	28	15	Copper	162	85
Lead	16	8	Cast iron (gray)	245	129
Zinc	68	36	Tool steel (1 % C.)	300	158
Aluminium	258	136	Wrought iron	343	181
Brass	130	69			

(See also p. 2263.)

* *Calb.*—The amount of heat required to raise one pound of water through one degree Centigrade.

Calorie.—The amount of heat required to raise one gram of water through one degree Centigrade.

TEMPERATURE CONTROL OF FURNACES—PYROMETRY.

Determination of Calorific Intensity.

The calorific intensity of a substance is the theoretical maximum temperature attained during the perfect combustion of the same in air at 0° C. and 760 mm. pressure, and is inversely proportional to the time occupied in attaining to this temperature. The calorific intensity of a substance may be determined by calculation or by experiment.

Calculation.

Let C = the calorific power of the substance.
T = the rise in temperature during combustion.
$w, w', w'', — =$ the weights of the products of combustion.
$s, s', s'', — =$ the specific heats of the products of combustion.

Then

$$T = \frac{C}{ws + w's' + w''s'' + \text{etc. etc.}}$$

for the fuel at 0° C. and 760 mm. pressure.

The calorific intensity of a fuel (by formula) will be seen to be directly proportional to the calorific power of the fuel and inversely proportional to the weights and the specific heats of the products of combustion.

The calorific power can be raised by

(*a*) Superheating the fuel.
(*b*) Superheating the air needed for the combustion of the fuel.
(*c*) Using a minimum of excess air.
(*d*) Increasing the proportion of oxygen in the air.
(*e*) Reducing the proportion of incombustible material in the fuel.

Experiment.

The calorific intensity of a fuel may be determined by experiment. For the purpose in question a variety of instruments has been designed, almost every thermal property of matter having been employed as a basis for the construction and calibration of these instruments, which are generally known as pyrometers.

Reference may be made to the Bulletin of the United States Geographical Survey, No. 54 (1889), where the following classification of the properties on which the construction of pyrometers has been founded is given :—

1. Dilatation of solids:
   (*a*) A single solid.
   (*b*) Two solids acting differentially.
2. Dilatation of liquids.
3. Dilatation of gases:
   (*a*) Expansion measured in volume, manometrically.
   (*b*) Expansion measured in pressure, manometrically.
   (*c*) Expansion measured in volume, by displacement.
4. Vapour tension.
5. Dissociation.
6. Fusion.
7. Ebullition.
8. Specific heat.
9. Heat conduction.
10. Heat radiation.
11. Viscosity:
    (*a*) Of solids.
    (*b*) Of liquids.
    (*c*) Of gases.
12. Spectrophotometry and colour. Rotary polarisation.
13. Acoustics (wave length).
14. Thermo-electrics.
15. Magnetic moment.
16. Miscellaneous.

Expansion Type Thermometers.

The mercurial thermometer is most important for use at about atmospheric temperatures, largely on account of the wide range of temperatures through which mercury is liquid, —39° C. to 357° C. If a high-grade mercurial thermometer has been calibrated at the National

Physical Laboratory, it is possible to measure temperatures throughout its range to an accuracy of 0·001° C. By the use of inert gases (nitrogen or carbon dioxide) under pressure in the tube of a thermometer, the boiling point of the mercury may be raised to allow temperatures up to 540° C. to be determined, at which temperature the glass softens. Quartz thermometers containing mercury under pressure can be used up to 700° C. By using tin instead of mercury the maximum limit may be raised to 1000° C. Steel tube mercurial thermometers, in which the capillary is attached to a form of a Bourdon pressure gauge, are not easily broken, and may be relied upon up to 540° C.

Fusion Pyrometers.

Observations of the fusion of metals, alloys, salts or mixtures of salts enable the observer to judge the temperature reached in a furnace at the moment of fusion, given that the temperature of fusion of the material employed is known prior to its introduction into the furnace. Fusion pyrometers are most suitable for the registration of maximum temperatures, after the attainment of which the source of heat may be eliminated and the furnace or heated object allowed to cool.

Metals.

The base metals have the disadvantage of ready oxidation; the precious metals offer only a limited number of definite temperatures.

Alloys.

Only eutectic alloys (see p. 2272) and solid solutions (see p. 2272) are of value. Base metal alloys being subject to oxidation, only precious metal alloys remain as suitable fusion pyrometers. Both the alloys of silver and gold and those of gold and platinum have been employed for pyrometric work, the latter, according to Séger, being satisfactory up to a temperature of 1200° C. only.

Salts.

The following are the melting points of a number of metallic salts that have found use in pyrometric work :—

Salt.	Melting Point
Calcium nitrate	561° C.
Strontium nitrate	570 ,,
Barium nitrate	593 ,,
Potassium iodide	705 ,,
Potassium bromide	750 ,,
Potassium chloride	790 ,,
Sodium chloride	800 ,,
Sodium carbonate	849 ,,
Sodium sulphate	880 ,,
Barium chloride	960 ,,
Potassium sulphate	1050 ,,

Mixtures of Salts.

Under this heading may be included two important types of fusion pyrometers :—

(*a*) Séger cones.
(*b*) Sentinel pyrometers.

Séger Cones.

These are small three-sided pyramids, each about 2½ ins. high and about ½ in. wide at the base. The term 'cone' is rather misleading, as they are more pyramidal than conical. They are made of a finely ground mixture of felspar, china clay, and flint, the composition of the mixture depending on the temperature to be indicated. For the lower members of the series other mixtures are used.

These cones were invented by the late Dr. Séger of Berlin, in order to provide some means of recording the effect of heat on various porcelains. Their shape and composition are such that when heated to their indicating temperature at a reasonably slow rate and under suitable conditions they bend over slowly from the upright position possessed by them when placed in the kiln or oven and gradually form an arch. When the top has almost reached the same level as the base the indicating temperature is reached. A further rise in temperature will cause the cone to collapse and form a shapeless, glazed mass.

It is customary to employ three different cones at a time; the first will indicate a temperature about 20 degrees Cent. below the one required to be known, the second cone will indicate the desired temperature (such as the finishing temperature of a glaze) and the third cone will serve as an indicator that the required temperature has not been exceeded by 20 degrees. The composition of the cones is such that the difference in temperature shown between two successive cones is about 20 degrees, though they are not quite regular in this respect.

It is important to remember that Séger cones do not serve as strict indicators of temperature in the sense that a thermometer does. If heated too rapidly a much higher temperature may be reached than is normally required to bend a cone, and which they are supposed to indicate. Under ordinary conditions of use, however, it is easy to find which cones correspond to the temperatures or conditions of heating which it is required to control, and Séger cones are, therefore, invaluable when they are rightly used. They serve as excellent indicators of the effect of heat on pottery and similar materials, and as it is this, rather than the mere momentary temperature which is important, they have advantages not possessed by a pyrometer or high temperature thermometer.

They were originally made only at Dr. Séger's laboratory in Berlin, but since 1914 they have also been made at the Pottery School, Stoke-on-Trent, and sold by Messrs. Keeling & Walker, Sutherland Mills, Stoke-on-Trent.

Owing to their cheapness and the difficulty of ensuring their accuracy when made by amateurs it is usually better to purchase the cones rather than to attempt to make them.

The following temperatures are those nominally associated with Seger cones, but, as explained above, it is preferable to refer to the number of the cone rather than to the temperature.

SÉGER CONES AND TEMPERATURES.

Séger Cone.	Deg. Cent.	Deg. Fah.	Séger Cone.	Deg. Cent.	Deg. Fah.	Séger Cone.	Deg. Cent.	Deg. Fah.	Séger Cone.	Deg. Cent.	Deg. Fah.
022	600	1112	07*a*	960	1760	9	1280	2336	29	1650	3002
021	650	1202	06*a*	980	1796	10	1300	2372	30	1670	3038
020	670	1238	05*a*	1000	1832	11	1320	2408	31	1690	3074
019	690	1274	04*a*	1020	1868	12	1350	2462	32	1710	3110
018	710	1310	03*a*	1040	1904	13	1380	2516	33	1730	3146
017	730	1346	02*a*	1060	1940	14	1410	2570	34	1750	3182
016	750	1382	01*a*	1080	1976	15	1435	2615	35	1770	3218
015*a*	790	1454	1*a*	1100	2012	16	1460	2660	36	1790	3254
014*a*	815	1499	2*a*	1120	2048	17	1480	2696	37	1825	3317
013*a*	835	1535	3*a*	1140	2084	18	1500	2732	38	1850	3362
012*a*	855	1571	4*a*	1160	2120	19	1520	2768	39	1880	3416
011*a*	880	1616	5*a*	1180	2156	20	1530	2786	40	1920	3488
010*a*	900	1652	6*a*	1200	2192	26	1580	2876	41	1960	3560
09*a*	920	1688	7	1230	2246	27	1610	2930	42	2000	3632
08*a*	940	1724	8	1250	2282	28	1630	2966	—	—	—

The chemical composition of the older Séger cones Nos. 1 to 36, together with the ingredients used in the manufacture of the same, are given in the following table for the convenience of those unable to obtain cones readily, but who may have raw materials available. The ingredients are finely divided before mixing. Dextrin is employed as a binder. The materials as employed by Dr. Séger, and considered to be sufficiently pure for the purpose in question, gave the following analyses:—

	Rostrand Feldspar.	Zettlitz Kaolin.	Norwegian Quartz.	Carrara Marble.
	Per cent.	Per cent.	Per cent	Per cent.
Silica	64·32	46·87	98·52	1·00
Alumina	19·41	38·56	1·04	0·12
Ferric oxide	0·14	0·83	0·04	
Lime	trace	trace	—	54·93
Magnesia	0·35	trace	—	0·20
Potash	12·90	1·06	0·40	—
Soda	2·10		—	—
Loss on ignition	0·57	12·73	—	—
Carbon dioxide	—	—	—	43·76

Cone No.	K_2O	CaO	Fe_2O_3	Al_2O_3	SiO_2	Feld-spar.	Mar-ble.	Quartz	Fe_2O_3	Zettlitz Kaolin.	Melting Point.
1	0·3	0·7	0·20	·3	4	83·55	35	66	16·0	—	1150° C.
2	0·3	0·7	0·1	0·4	4	83·55	35	60	8·0	12·95	1170° C.
3	0·3	0·7	0·05	0·45	4	83·55	35	57	4·0	91·43	1190° C.
4	0·3	0·7	—	0·5	4	83·55	35	54	—	25·90	1210° C.
5	0·3	0·7	—	0·5	5	83·55	35	84	—	25·90	1230° C.
6	0·3	0·7	—	0·6	6	83·55	35	108	—	38·85	1250° C.
7	0·3	0·7	—	0·7	7	83·55	35	132	—	51·80	1270° C.
8	0·3	0·7	—	0·8	8	83·55	35	156	—	64·75	1290° C.
9	0·3	0·7	—	0·9	9	83·55	35	180	—	77·70	1310° C.
10	0·3	0·7	—	1·0	10	83·55	35	204	—	90·65	1330° C.
11	0·3	0·7	—	1·2	12	83·55	35	252	—	116·55	1350° C.
12	0·3	0·7	—	1·4	14	83·55	35	300	—	142·45	1370° C.
13	0·3	0·7	—	1·6	16	83·55	35	348	—	168·35	1390° C.
14	0·3	0·7	—	1·8	18	83·55	35	396	—	194·25	1410° C.
15	0·3	0·7	—	2·1	21	83·55	35	468	—	233·10	1430° C.
16	0·3	0·7	—	2·4	24	83·55	35	540	—	271·95	1450° C.
17	0·3	0·7	—	2·7	27	83·55	35	612	—	310·80	1470° C.
18	0·3	0·7	—	3·1	31	83·55	35	708	—	362·60	1490° C.
19	0·3	0·7	—	3·5	35	83·55	35	804	—	414·40	1510° C.
20	0·3	0·7	—	3·9	39	83·55	35	900	—	466·20	1530° C.
21	0·3	0·7	—	4·4	44	83·55	35	1020	—	530·95	1550° C.
22	0·3	0·7	—	4·9	49	83·55	35	1140	—	595·70	1570° C.
23	0·3	0·7	—	5·4	54	83·55	35	1260	—	660·45	1590° C.
24	0·3	0·7	—	6·0	60	83·55	35	1404	—	738·15	1610° C.
25	0·3	0·7	—	6·6	66	83·55	35	1548	—	815·85	1630° C.
26	0·3	0·7	—	7·2	72	83·55	35	1692	—	893·55	1650° C.
27	0·3	0·7	—	20·0	200	83·55	35	4764	—	2551·13	1670° C.
28	—	—	—	1·0	10	—	—	240	—	129·50	1690° C.
29	—	—	—	1·0	8	—	—	180	—	129·50	1710° C.
30	—	—	—	1·0	6	—	—	120	—	129·50	1730° C.
31	—	—	—	1·0	5	—	—	90	—	129·50	1750° C.
32	—	—	—	1·0	4	—	—	60	—	129·50	1770° C
33	—	—	—	1·0	3	—	—	30	—	129·50	1790° C.
34	—	—	—	1·0	2·5	—	—	15	—	129·50	1810° C.
35	—	—	—	1·0	2						1830° C.
36	—	—	—	1·0	1·5	Zettlitz Kaolin		Rackonitz Shale Clay			1850° C.

The composition of Rackonitz shale clay is as follows:—

Silica . . 52·50 per cent.	Magnesia . 0·54 per cent.	Potash and soda . traces	
Alumina . 45·22 „	Lime . . 0·50 „	Loss on ignition . 0·78 per cent.	
Iron oxide . 0·81 „			

SENTINEL PYROMETERS.

These are small cylinders, measuring about ¾ in. by ½ in. and manufactured from salt mixtures of definite melting points. Only such mixtures can be utilised as are formed of salts that neither dissociate nor corrode when in the molten state. Brearley states that 'mixtures of salts, after being melted together and ground to a very fine powder, may be made into an adhesive paste with vaseline, and applied to many purposes for which no ordinary pyrometer is available. In the smith's hearth, for example, a tool may be heated to low redness and smeared near the point with a small portion of a paste whose melting point is, say, 770° C. The tool is then reheated directly in the fire or protected from the coke by a piece of scrap, wrought or cast iron piping, until the white mark left by the thin layer of the salt mixture disappears. This indicates that the steel itself has nearly reached the desired temperature and may be quenched.' Following are the melting points of a number of mixtures of salts.

Salt.	Parts by Weight.	Salt.	Parts by Weight.	Deg.
Potassium carbonate .	50	Potassium chloride	50	580 C.
Sodium chloride . .	30	Ditto	70	625 C.
Ditto	42	Ditto	58	655 C.
Potassium sulphate .	20	Sodium sulphate	80	825 C.
Ditto	30	Ditto	70	830 C.
Ditto	50	Ditto	50	850 C.

Heat Radiation Pyrometers.

In this type of instrument the relation between the effect of radiant heat on suitably chosen thermal elements and the temperature of the radiating body is observed. The Féry Radiation Pyrometer (Cambridge Scientific and Paul Instrument Co.) is an example of this class of instrument.

In this pyrometer the rays from the hot body are received on a concave mirror, which can so be adjusted that the rays form a heat image which covers a small sensitive element permanently fixed on a line through the axis of the mirror. The sensitive element consists of a delicately adjusted thermo-couple, which delivers current to a millivoltmeter, calibrated, if desired, to read the temperature of the body, whence the heat rays are emanating, directly. In both cases suitable means are provided for ensuring that the sensitive element is completely covered by the image of the radiant body.

In order that correct results may be obtained when using pyrometers of the radiation type it is necessary that the hot body sighted should be enclosed within a vessel whose walls are approximately at the same temperature as the body itself. If this precaution is not observed the reading obtained will be lower than the true temperature of the body, the degree of inaccuracy being dependent almost entirely on the nature of the surface of the body in question.

Optical Pyrometers.

Approximate estimations of the temperatures of incandescent bodies may be made by visual observation. Numerous colour scales have been proposed, but those due to Howe and Taylor and White are generally accepted as the most accurate. The following table (based on one by Howe) is of value in this connection.

Taylor and White.		Howe.	
Name of colour.	Degree C.	Name of colour	Degree C.
—	—	Lowest visible red in the dark	470
—	—	Lowest visible red in daylight	475
Dull red, blood red, low red	566	Dull red	550–625
Dark cherry red	635	—	—
Cherry, full red	746	Full cherry	700
Light red, bright cherry, light cherry	843	Light red	850
Orange	899	—	—
Light orange	941	—	—
Yellow	996	Full yellow	950-1000
Light yellow	1079	Light yellow	1050
White	1205	White	1150

The design of optical pyrometers is dependent on the fact that the intensity of the light rays emitted from an incandescent 'black body' is directly proportional to the temperature of the 'body.'

The Mésuré and Nouel Pyrometric Telescope consists of two suitably mounted Nicol prisms, so adjusted that their planes are at right angles to one another when the scale of the instrument is at zero and between which is placed a quartz plate cut perpendicularly to its axis. When the incandescent body is observed through the instrument it is necessary to rotate one of the Nicols in order to extinguish the emitted light. The angle of rotation is proportional to the thickness of the quartz plate, which is a constant for any given instrument, and inversely proportional to the square root of the wave length of the observed light. The wave length of the observed light being proportional to the intensity of the light, the angle of rotation of the analyser or polariser is a measure of the temperature of the incandescent body.

The Cornu-Le Chatelier Photometric Pyrometer is designed to measure the intensity of the light emitted by an incandescent body by reducing this intensity until it corresponds to that of the light emitted by a standard lamp. The reduction required is inversely proportional to the temperature of the hot body.

The Wanner Photometric Pyrometer likewise compares the intensities of the lights emitted by the incandescent body and a standard body respectively. In this instrument, however, spectra of the two sources of light are, firstly, broken up into two polarised planes at right angles to one another; secondly, adjusted so that only the narrow red bands of each spectrum are transmitted

further; and, thirdly, so brought into vision that the intensity of either field, both being in visual contact, can be strengthened or weakened, until they are equally intense, by rotation of a Nicol prism. The amount of rotation, which can be observed on a suitably situated scale, serves to measure the intensity of the emitted light, and hence to define the required temperature.

The Cambridge Optical Pyrometer is, in principle, the same as the foregoing, and is invaluable for temperature measurements between 700° and 4000° C.

Thermo-Electric Pyrometers.

This type of pyrometer is dependent for its action upon the fact that a current is produced within a closed circuit formed of two dissimilar metals when the junction between the two metals is heated, the current being proportional to the absolute temperature of the junction.

The essential features of this pyrometer are two thin insulated rods or wires of dissimilar metals coupled at one of their ends and connected at their other ends to separate leads. The connection between the two metals and the leads, which is known as the 'cold-junction,' is enclosed within suitably designed apparatus that can be retained at a known constant temperature. The leads from the 'cold-junction' pass to some form of electrical instrument capable of registering or recording changes in the P. D. produced in the now closed circuit when the thermo-couple is heated or cooled.

The number of metals and alloys available for the manufacture of thermo-couples are few. The following are among those most generally employed :—

Couple.	Range.
Platinum—platinum rhodium	Up to 1400° C.
Platinum—platinum iridium	„ 1000 „
Nickel—nickel chromium	„ 800 „
Silver constantan	„ 600 „
Copper constantan	„ 500 „
Iron constantan	„ 500 „

For the estimation of temperatures above the melting-point of platinum the iridium-iridium-ruthenium couple has been suggested, but it is considered unlikely that the same would prove efficient, on account of the known volatility of iridium at such temperatures.

Union between couple *wires* is effected by fusion in the electric arc or oxyhydrogen flame in the case of couples having a platinum base, by soldering or brazing in the case of base-metal couples or by twisting. Union between the wires and the leads can be effected as above or by means of electrical clamps.

The couple wires, when in use, are generally protected by tubes of nichrome, fireclay, silica or glazed porcelain, the last being particularly useful when it is desired to defend the wires against the deleterious action of hot gases. When necessary, protection is afforded these tubes by enclosing them in steel jackets.

Heavier types of thermo-electric pyrometers consist of a *rod* of one metal fitted tightly into one end of a cylinder concentric with the rod and of another metal and insulated from the same by suitable means.

Calibration of thermo-electric pyrometers is effected by immersing the protected couple in substances or the vapour of substances whose melting or boiling points are known. The couple, being subject to like thermal changes as the substance, causes a fluctuation in the current flowing within the closed circuit, which fluctuation is registered by the instrument within the circuit. For example, while solidification of a metal in which the protected couple is immersed is in progress a constant reading is obtained on the instrument. This value is observed, and is recorded on a graph against the melting point of the metal as ordinate. A series of such points may be obtained by employing a number of metals in similar manner to that already described, and, these points being united, a curve is obtained from which the temperature corresponding to any given reading of the instrument may be abstracted.

The following are the melting points on the thermo-dynamic scale used by the Washington Bureau of Standards as standard temperatures in the standardisation of thermometers and pyrometers :—

Mercury	−38·9° C.	Antimony	630·0° C.	Nickel	1452° C.
Tin	231·9 „	Aluminium	658·7 „	Iron	1520 „
Cadmium	320·9 „	Silver	960·5 „	Palladium	1549 „
Lead	327·4 „	Gold	1063·0 „	Platinum	1755 „
Zinc	419·4 „	Copper	1083·0 „	Tungsten	3000 „

At temperatures of 1000° C. the error is of the order of 0·1° C., at the melting point of platinum 5° C., at that of tungsten 100° C. A further table of other standard temperatures is given in which the following are included :—Normal boiling-point of oxygen 180·0°, sublimation of carbon

dioxide in an inert liquid 78·5°, normal boiling point of water 100°, of naphthalene 217·96°, of benzophenone 305·9°, of sulphur 444·6°, freezing point of sodium chloride 801° C.

In the *Physical Review* the melting point of rhodium is estimated to be at 1907 or 1968° C. and that of iridium as 2292 or 2388° C. That of silicon is placed at 1434 or 1452° C. and that of palladium at 1548 or 1576° C. The reason for the two figures is due to the fact that the calculations are based on different estimates of the melting-point of platinum, which has been placed at 1745° C. by some experimenters and at 1789° C. by others.

Electric Resistance Pyrometers.

In these instruments advantage is taken of the change of resistance of a wire with temperature. Platinum wire is generally employed. The essential features of the commercial apparatus are a coil of fine platinum wire, enclosed in a suitably designed protecting tube, a cell or accumulator for the supply of current to the wire and an indicator or recorder on which the temperature may be read off directly.

In the original type of this instrument errors due to the residual strain and impurities in the lead wires entered, but later instruments are designed with 'compensating wires,' whose component parts are equal in resistance to and are so arranged that they are heated to the same temperature as corresponding parts of the lead wires. Changes in resistance in the lead wires are compensated by equal changes in the 'compensating wires.'

The resistance pyrometer (after Callendar) is represented diagrammatically in fig. 32.

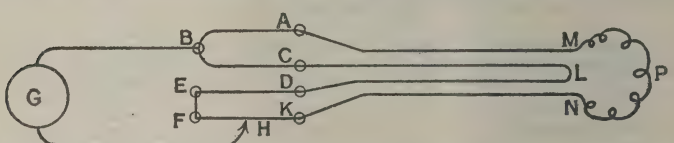


FIG. 32.

P represents the pyrometer coil; AM, KN the lead wires; CL, DL the 'compensating wires'; FK a bridge wire with scale, so arranged that 1 cm. length of the same corresponds to 1° C. rise or fall of the temperature, H the sliding contact piece, and G a galvanometer. AB and BC are wires of equal resistance. DE represents a set of resistance coils. In practice AB, BC and DE can be replaced by a post office box. Balance is obtained by the adjustment of the resistances in DE and the sliding of the contact piece H. The resistance of the pyrometer coil is given by the sum of the coils DE and the bridge wire scale reading.

Resistance pyrometers are accurate from 0° C. to 1000° C., and are employed industrially wherever reliable measurement is essential. They suffer owing to their high first cost and their fragile character. There are, however, large numbers of this type of pyrometer in use commercially.

METALS AND ALLOYS.

ALLOYS.

There are three well-recognised types of alloys:—

(i) Conglomerates of metals, or of metals and non-metals.
(ii) Homogeneous mixtures of metals, or of metals and non-metals.
(iii) Inter-metallic compounds, or compounds of metals with non-metals.

(i.)

In this type of alloy the component elements or their compounds crystallise out from the molten alloy in a practically pure state, and the addition of one component to the other results —within certain limits—in a lowering of the solidifying point of the resulting alloy. The alloy having the lowest solidifying point in such a series is called the 'eutectic.' Lead-tin alloys are of this type.

(ii.)

In this type of alloy the component metals do not crystallise out from the molten alloy in the pure state, but contain on freezing more or less of each other in solid solution. Copper-nickel alloys are of this type.

(iii.)

Inter-metallic compounds behave similarly to pure metals, crystallising in like manner. Copper and zinc form a compound $Cu_2 Zn_3$, which is extremely hard and brittle.

IRON.

IRON (FERRITE).

Chemically pure iron is not an article of commerce at the present time. Iron has been obtained by electrolytic deposition of a degree of purity greater than 99·9 per cent. iron, while the American Rolling Mills Co. manufacture a commercial product (American Ingot Iron), which they claim to contain 99·94 per cent. of iron. The Skelton Iron Co. have produced by the basic open-hearth process iron with as little as 0·13 per cent. of impurities.

Stead, by extrapolation, has arrived at the following figures for the approximate mechanical properties of pure unworked iron :—

Yield point	9 tons per square inch.	Elongation .	51 per cent. (length/area = 8).
Maximum stress	17 ditto.	Reduction in area	84 per cent.

The term 'ferrite' is applied to pure iron when it is considered as a microscopical constituent of iron or steel. Pure iron is composed of polyhedral crystallites of ferrite.

Commercial iron is always contaminated by the presence of the following elements—carbon, manganese, silicon, sulphur, and phosphorus; also arsenic, molybdenum, etc. All these elements have effect on the iron in which they occur and are frequently added with a view to obtain alloys having more or less definite physical and mechanical properties.

WROUGHT IRON.

Wrought iron is iron low in carbon content, which in course of production is in a pasty condition, owing to the fact of its being worked at a temperature too low to render it fluid. It contains a relatively large percentage of non-metallic impurities in the form of slag, which may be readily seen when the iron is examined microscopically, and which, therefore, serves, among other features, to distinguish this product from steel. The percentage of carbon in wrought iron rarely exceeds 0·15 per cent., and the total of other elements present in the metal is generally less than 0·25 per cent. Wrought iron is not appreciably hardened by quenching.

The fracture of wrought iron is fibrous in appearance and is occasionally characterised by the presence of somewhat large proportions of non-metallic inclusions.

WROUGHT-IRON (*or Mitis*) CASTINGS.

If a small amount of aluminium is added to a charge of wrought iron which has been heated until pasty, the iron immediately liquefies, and can be poured into castings having all the properties of wrought iron except fibre, and as sound as if of cast iron. These castings are called 'Mitis' castings because of their softness in contrast with cast-iron castings.

The best results are obtained by using Swedish scrap iron or English hematite iron, that is, materials containing less than 0·1 per cent. of phosphorus, which is a very injurious ingredient if present in much larger quantity. Using a mixture with poorer quality of iron, with phosphorus running up to 0·15 per cent., good results may still be obtained—that is, the castings still compare favourably with ordinary malleable castings. The following mixture for melting has been used :—Mitis scrap, 35 per cent.; hematite muck bar, 35; wrought-iron punchings, 12½; soft steel scrap (0·1 per cent. carbon), 12½, white pig iron, 3; ferro-silicon (10 per cent. silicon), 1; ferro-aluminium (6 per cent. aluminium), ½.

In general it may be said that if iron free from impurities is used very good castings are obtained; if iron is used with a large percentage of phosphorus, proportionately brittle and unsatisfactory castings result.

The ferro-aluminium used should be, for similar reasons, free from any considerable amount of such impurities as generally injure wrought iron.

PIG IRON.

Typical Analyses of Pig Iron, etc.

The following list of analyses is taken from Dr. W. H. Hatfield's book, 'Cast Iron in the Light of Modern Research.' It is published with the kind permission of the author and of the publishers, Messrs. C. Griffin & Co. Ltd.

West Coast Hematites.

Brand.	G.C.	C.C.	Si.	S.	P.	Mn.	Mn.	Cu.
No. 1 .	3·750	·300	2·60	·02	·045	trace	·50	·04
„ 2 .	3·500	·460	2·40	·03	·045	trace	·50	·04
„ 3 .	3·250	·540	2·10	·04	·045	trace	·50	·04
„ 4 .	2·800	1·000	1·65	·10	·045	trace	·50	·04
„ 5 .	2·400	1·600	1·20	·20	·045	trace	·50	·04
Mottled	1·600	1·950	·90	·25	·045	trace	·20	·04
White .	trace	3 250	·65	·30	·045	trace	·10	·04
		From Native Ores only.					Average Actual Mn. and Cu.	
Special .	3·75	·300	2·60	·02	·02	0·500		

East Coast Hematites. ('Seaton.')

Brand.	G.C.	C.C.	Si.	S.	P.	Mn.	Cu.
No. 1	3·725	·300	2·50	·02	·05	1·00	·05
„ 2	3·525	·450	2·25	·03	·05	1·00	·05
„ 3	3·150	·560	2·00	·04	·05	1·00	·05
„ 4	2·750	1·000	1·50	·10	·05	1·00	·05
„ 5	2·450	1·550	1·00	·20	·05	·75	·05
Mottled	1·500	2·050	·75	·25	·05	·50	·05
White	trace	3·150	·65	·30	·05	·50	·05
Special No. 1	3·525	·300	2·50	·015	·03	1·00	·05
„ „ 2	3·350	·400	2·25	·020	·03	1·00	·05
„ „ 3	3·00	·500	2·00	·025	·03	1·00	·05

Scotch Hematites. Welsh Hematites.

These are practically of the same composition as the East Coast Hematites.

Bessemer Basic. ('Carlton.')

G.C.	C.C.	Si.	S.	P.	Mn.
Traces	2·65	·35 to 1·00	·05	2·850	1·50

'Ferro' Alloys.

Brand.	C.	Si.	S.	P.	Mn.
Ferro-Manganese	6·640	·610	·028	·180	80·100
Ferro-Silicon	1·300	11·000	·040	·060	2·500
„ (Electro)	·270	28·520	·040	·040	·400
Silico-Spiegel	1·700	11·000	·040	·049	18·320
„ (Special)	·690	20·900	·018	·097	55·760
Spiegel	4·500	·900	·030	·070	18·000

NOTE.—Ferro-Manganese is usually 80·00 Mn.
Ferro-Silicon varies from 8·00 to 16·00 Si.
Silico-Spiegel varies from 10·00 to 14·00 and 18·00 to 20·00 Mn.
Spiegel varies from 10·00 to 25·00 Mn.

Scotch Pig Iron. ('Carron.')

Brand.	G.C.	C.C.	Si.	S.	P.	Mn.
No. 1	3·500	·140	2·800	·035	·880	1·450
„ 2	3·370	·250	2·275	·045	·907	1·450
„ 3 Soft	3·280	·180	2·650	·038	·902	1·400
„ 3 Foundry	3·350	·200	2·150	·055	·907	1·311
„ 3 Close	3·170	·280	1·750	·050	·905	1·420
„ 4	3·160	·290	1·570	·060	·905	1·450

Yorkshire Pig Iron. ('Clarence.')

Brand.	G.C.	C.C.	Si.	S.	P.	Mn.
No. 1	3·030	·30	3·170	·03	1·600	·50
„ 3	3·050	·30	2·800	·03	1·570	·60
„ 4 Foundry	2·990	·43	2·240	·06	1·540	·52
„ 4 Forge	2·750	·55	1·850	·10	1·560	·50
Mottled	1·490	1·65	1·270	·18	1·510	·40
White	·100	3·10	·880	·28	1·570	·38

Lincolnshire Iron. ('Redbourne.')

Brand.	G.C.	C.C.	Si.	S.	P.	Mn.
No. 3 Foundry	3·100	·560	2·751	·038	1·326	1·680
„ 4 Foundry	2·816	·751	2·610	·045	1·318	1·589
Grey Forge	2·525	·895	2·508	·056	1·316	1·456
No. 4 Close	2·459	·945	2·452	·059	1·296	1·344
Mottled	1·480	1·520	1·325	·100	1·296	1·130
White	·675	2·285	·450	·155	1·295	1·100

Derbyshire Irons. ('Renishaw.')

Brand.	G.C.	C.C.	Si.	S.	P.	Mn.
No. 1	3·410	Trace	2·939	·036	1·680	·362
„ 2	3·260	1·79	2·146	·034	1·62	·707
„ 3	3·850	·112	2·333	·024	1·581	·572
„ 4 Foundry	3·300	·225	2·099	·053	1·771	·647
Close Forge	2·800	·330	1·819	·079	1·730	·520
Mottled	1·550	1·560	1·200	·200	1·500	·350
White	2·650	·100	·450	·250	1·350	·250
Glazy	3·450	Trace	4·500	·070	1·600	·610

Northampton and District Irons. ('Holwell.')

Brand.	G.C.	C.C.	Si.	S.	P.	Mn.
No. 1 Foundry	3·350	—	2·612	·022	1·190	·490
„ 2 „	3·650	—	2·473	·036	1·173	·403
„ 3 „	3·850	—	2·379	·041	1·190	·403
„ 4 „	3·350	—	2·333	·047	1·255	·389
„ 4 Forge	2·971	—	2·331	·056	1·088	·484
„ 5 „	1·750	—	1·376	·062	·929	·245
Mottled	1·540	—	1·261	·225	·970	·217
White	·840	—	1·049	·305	·937	·188
Glazy	2·500	—	4·850	·028	1·285	·532

Welsh Iron.

Brand.	G.C.	C.C.	Si.	S.	P.	Mn.
Grey Forge	3·02	Trace	2·56	·05	1·47	·43
Foundry	3·30	Trace	3·26	Trace	1·75	·34

Yorkshire Cold Blast. Ex. Sir I. Lowthian Bell.

Brand.	G.C.	C.C.	Si.	S.	P.	Mn.
No. 1	3·421	·583	1·708	·073	·630	1·606
„ 2	3·155	·581	1·646	·070	·635	1·472
„ 3	3·361	·393	1·382	·063	·602	1·475
„ 4	3·308	·319	1·381	·081	·602	1·169

Staffordshire Irons (Cold Blast). ('Glazebrook.')

Brand.	G.C.	C.C.	Si.	S.	P.	Mn.
No. 1	3·07	—	1·48	·03	·43	·96
„ 2	3·04	—	1·27	·04	·34	·80
„ 3	3·12	—	1·16	·05	·44	·94
„ 4	3·03	—	·83	·04	·31	·27
„ 5	2·81	—	·57	·06	·29	·13

Staffordshire Iron (Semi-Cold Blast).

Brand.	G.C.	C.C.	Si.	S.	P.	Mn.
No. 3 . .	3·10	·75	1·50	·03	·25	·50
„ 4 . .	2·92	·81	1·22	·04	·49	·75
„ 5 . .	2·78	·51	·93	·03	·30	·68

Malleable Cast Pig Iron.

West Coast Refined.

Brand.	C.	Si.	S.	P.	Mn.
Grey	3·80	1·25	·10	·05	·10
Mottled	3·45	·70–1·00	·10–·25	·05	·10
White	3·20	·60	·30	·05	·10

East Coast Refined. ('S.C.M.')

Brand.	C.	Si.	S.	P.	Mn.
Grey	3·80	1·00	·08	·05	·80
Mottled	3·40	·50–·85	·10–·20	·05	·60
White	3·10	·45	·25	·05	·40

CAST IRON.

Foundry Practice.

1.

The physical and mechanical properties of the products of the cast-iron foundry are almost entirely dependent on the condition of the carbon in these products. The carbon in cast iron can occur either in a free state, as graphite, or in combination with iron, as a carbide of iron, Fe_3C, or with iron and manganese, as a double carbide $(Fe, Mn)_3C$. Foundry practice consists almost entirely of the control of the degree of graphitisation of the carbides present in the cast iron produced.

The graphitisation of these carbides tends to increase—

(*a*) With the temperature.
(*b*) With deceleration of cooling.
(*c*) With the content of silicon, nickel, or aluminium.
(*d*) With the number of graphite nuclei in the iron.
(*e*) With the total content of carbon.

Graphitisation is prohibited—

(*a*) By the presence of sulphur, oxygen, vanadium, or chromium.
(*b*) By the presence of manganese under certain conditions.
(*c*) By acceleration of cooling.

It will be seen that by the variation of the above factors an immense number of conditions can be obtained. It is in the scientific control of these that much of the success in foundry practice lies.

2. The Influence of Carbon on Cast Iron.

The strength, hardness, density of structure, etc., of cast iron are dependent almost entirely on the relative quantities of carbide and graphite in the same.

An increase in the ratio $\frac{\text{Carbide}}{\text{Graphite}}$ leads to—

(*a*) An increase in hardness, brittleness, and density of structure.
(*b*) A decrease in machinability and ductility.

The strength of cast iron reaches a maximum when the combined carbon content is between 0·80 per cent. and 1·00 per cent.; if the combined carbon content given above is exceeded a reduction in strength, which only terminates when the carbon is entirely in the form of carbide, is witnessed. The following figures, given by Howe, are of value in this connection :—

As the tensile strength increases	From less than 20,000 lbs. per sq. in.	To more than 35,000 lbs. per sq. in.	Or by more than 15,000 lbs. per sq. in.
The total carbon content decreases .	from 3·69 per cent.	to 2·98 per cent.	or by 0·71 per cent.
The graphite content decreases . .	from 3·12 „	to 2·22 „	or by 0·90 „
The combined carbon content increases	from 0·57 „	to 0·76 „	or by 0·19 „

The above table classifies the results of an examination of 180 samples of cast iron taken without selection.

According to Dr. Stead (British Foundrymen's Association Proceedings, 1915), an increase of each 0·1 per cent. of graphite may reduce transverse strength by 2 cwts. and tensile strength by 0·8 ton per square inch.

The fusibility of the iron carbon alloys increases as the total carbon content increases up to about 4·30 per cent.; beyond this point the melting points of the alloys are raised by additions of carbon. Other effects of increased total carbon are decreased tensile strength, increased machinability and decreased chilling power. The last phenomenon is occasioned by the difficulty of retaining carbon as carbide, which naturally increases as the amount of carbon to be thus retained increases. Given suitable means for preventing graphitisation, every increase in the content of total carbon leads to an increase in the hardness of the chilled surface of the alloy in question.

The machining of cast iron containing more than 0·80 per cent. of combined carbon is practically impossible.

3. The Influence of Silicon on Cast Iron.

Silicon varies from 0·20 to 4·00 per cent. in cast iron, but rarely exceeds 3·50 per cent. or falls below 0·50 per cent. It is present in cast iron, in all probability, as silicide of iron (FeSi), which is dissolved in the pure iron, or ferrite, of the alloy. The presence of this compound tends to strengthen and harden the ferrite. Silicon, however, has the effect of rendering cementite unstable, with the result that there is a tendency towards the formation of ferrite and graphite. Starting with white cast iron, the addition of silicon up to 1·00 per cent. results in an almost proportional decrease in the chilling power of the iron. Again, the addition of silicon to white cast iron leads to an increase in the strength of the resulting irons; this factor reaches a maximum when the content of combined carbon in the alloy is between 0·80 per cent. and 1·00 per cent. As the silicon percentage is further raised so are the combined carbon content and the strength of the cast iron lowered. When the silicon content is above 2·00 per cent. its hardening effect on ferrite is noticeable, iron relatively hard to machine being occasionally improved by a reduction of the silicon content.

The presence of silicon leads to a depression of the melting-point of cast iron; in similar manner the percentage of carbon in the eutectic alloy is reduced from 4·30 per cent. to 3·40 per cent. as the percentage of silicon increases up to 3·00.

Silicon has the effect of reducing the shrinkage of cast iron.

As a means of determining the correct proportions of carbon and silicon in cast iron, the following formula has, according to Mr. F. J. Cook, been used with marked success in practical working :—

$$X = \frac{C}{4{\cdot}26 - \frac{Si}{3{\cdot}6}},$$

where

C = *total* carbon in percentage;
Si = silicon in percentage.

The elements carbon and silicon are in the best proportion when the value of X is as given below :—

For Ordinary work such as pans, grates, easily machined casting and pipes	X = 0·9 to 1
Locomotive cylinder (maximum transverse strength)	„ = 0·83
Steam, gas Diesel and hydraulic cylinders (maximum tensile strength)	„ = 0·76 to 0·82
Chilled castings	„ = 0·75 to 0·8
Acid resisting	„ = 0·85

4. The Influence of Sulphur on Cast Iron.

Sulphur combines with iron to form a sulphide having a low melting-point, which occurs in steel in the form of ovoids, oval laminæ or membranes enveloping the ferrite grains. The presence of this sulphide is the cause of red shortness.

In cast iron this sulphide may modify the properties of the alloy owing to its manner of aggregation, but it is deleterious chiefly on account of its tendency to segregate and its powerful effect on shrinkage, which it increases. Sulphur tends to restrain graphitisation, hence it increases the chilling power of cast iron and may, therefore, be termed a hardening agent. This element should, however, be employed with great caution, if at all, in this capacity, on account of the objectionable properties previously stated. The presence of sulphur makes the molten metal thick and sluggish, giving rise to blowholes, yet this element in fair proportions, say 0·12 per cent., adds considerably to the wearing properties and strength of the metal. In every case, however, sulphurous iron *must* be cast as hot as possible if trouble is to be avoided.

Manganese and silicon are employed to counteract the evil effects of sulphur. Manganese reacts with iron sulphide, with resulting formation of manganese sulphide and liberation of iron. Under certain circumstances manganese sulphide is removable from cast iron, but even when retained its effects are not so deleterious as are those of iron sulphide. Silicon, owing to its strong tendency to induce graphitisation, resists the effect of sulphur in tending to retain carbon in the combined condition; it does not remove sulphur, nor does it prohibit the shrinkage due to sulphur or reduce the tendency towards cracking.

Sulphur is frequently limited by specification to 0·05 per cent., but in the hands of experienced and careful workers as much as 0·20 per cent. can be allowed without ensuing unsoundness. If the sulphur content of an iron is to be low the conditions under which it is prepared must be such that sulphur tends to be eliminated. Hence, coke low in sulphur must be used and suitable fluxes should be employed in the furnace for removing sulphur from the metal, e.g. lime, fluor spar or manganous oxide.

5. The Influence of Manganese on Cast Iron.

Manganese and iron unite to form a series of solid solutions whose freezing-point curve lies entirely between the freezing points of the component metals. The freezing points of all the alloys of pure iron and pure manganese are below that of pure iron. The freezing point of cast iron is depressed by the addition of manganese, not only on the above account but also owing to an increase in the degree of solubility of carbon in cast iron, which is brought about by the fact that the affinity of manganese for carbon is greater than that of iron for carbon. The depression of the freezing point reaches a maximum when the percentage of manganese is about 13.

The alloys of iron and manganese (pure) are harder than pure iron. Manganese therefore would, normally, have the effect of hardening the ferrite of cast iron were it not for the fact that its affinity, firstly for sulphur, and secondly for carbon, prohibits its solution in the ferrite.

Manganese, when added to cast iron, combines in the first place with such sulphur as is present in the iron; any excess above that required for the formation of manganese sulphide unites with iron carbide, with the formation of a double carbide of iron and manganese.

The quantity of manganese required to effect the entire conversion of the iron sulphide in the alloy into manganese sulphide is considerably more than that indicated by the equation—

$$FeS + Mn = MnS + Fe.$$

Manganese sulphide is characterised by the following physical properties:—

(1) High melting point[2]–1400° C.;

(2) Insolubility in molten iron;

(3) Low specific gravity;

all of which assist in bringing about the separation of both manganese and sulphur from the molten alloy. Rapid cooling of the molten alloy leads to the more or less complete retention of manganese sulphide in the resulting solid alloy; slow cooling assists in separating the sulphide and bringing it into contact with the slag found on the surface of the alloy when the same is, for example, in the ladle. When the metal does not remain long enough in the ladle, or is not hot enough for the above to take place quickly, the manganese sulphide will be found on the top part of the casting in the form of hard spots, which are difficult to tool. Iron sulphide is deleterious in its action upon iron and steel. Manganese sulphide, though not beneficial, is of a somewhat neutral character. Manganese is, therefore, valuable as a desulphuriser.

Such manganese as is present in cast iron in excess of that required for the transformation of iron sulphide into manganese sulphide combines with the carbide of iron to form a double carbide, as stated above. Manganese is generally considered to induce the retention of the carbon in combination. This is true, but this effect does not make itself felt until the manganese content is well above that usually found in foundry irons. Hence, though hardness is increased by the addition of manganese, the cause is not usually the retention of carbon as carbide.

On the whole it may be said that, owing to (1) the tendency of manganese to produce brittleness and coarse crystallisation, and (2) its activity as a deoxidiser, it is inadvisable to add manganese to cast iron for the sole purpose of increasing hardness and chilling power.

Manganese increases the shrinkage of cast iron.

6. The Influence of Phosphorus on Cast Iron.

Phosphorus combines with iron to form a number of compounds, of which one, that containing three molecules of iron to each molecule of phosphorus, is of common occurrence in cast iron. The presence of phosphorus effects a reduction in the melting-point of cast iron and a reduction in the total carbon content of cast iron.

As the phosphorus content of cast iron is increased up to about 0·40 per cent, so is the strength of the cast iron increased. Further additions of phosphorus appear to have but slight effect on the strength of cast iron until the percentage reaches about 0·75 per cent. Above this point the alloys are liable to be brittle, and unless fluidity is more important than strength 0·75 per cent. of phosphorus should not be exceeded. For thin castings in general, which are not required to be strong, the phosphorus can be increased to 1·5 per cent. or more, but in thin castings such as automobile cylinders, which are required to withstand wear and tear, not more than 0·30 per cent. of phosphorus should be allowed, owing to the slight tendency towards segregation of high phosphide irons.

Semi-Steel.

Semi-steel is simply cast iron made from a furnace charge of cast iron to which **mild steel or wrought iron** has been added. Additions of **from 10 to 25 per cent. of steel** are usual, but 30 and occasionally 40 per cent. are not unknown. As steel is low in carbon, silicon and phosphorus, the final cast iron (for it is still a true cast iron) is low in these elements. The steel should be added as sheared clippings or other small pieces, but not as borings, which take up too much sulphur. Iron appears not to take up sulphur from gases, but only by direct contact with the coke, hence the air furnace gives irons lower in sulphur than the cupola and is specially suited for melting steel with pig irons. **Perfectly good results are,** with care, obtainable from the cupola. There is, however, a tendency for the more fluid portions of a cupola burden of cast iron and steel to run first. Hence the first tap from the cupola is generally higher in carbon content than succeeding taps.

(*The above note on semi-steel is based on a paper read before the Manchester Association of Engineers by Mr. Frank Foster, M.Sc.*)

Tests for Cast Iron.

(Abstract of paper read by Mr. F. J. Cook before the Staffordshire Iron and Steel Institute, January 20, 1917.)

Important tests which are of use as a guide to foundrymen are :—

(1) Keep's shrinkage test ;
(2) Transverse test ;
(3) Hardness test ;
(4) Casting temperature or fluidity test ;
(5) Impact test.

(1) **Keep's Test** consists of casting ½ in. square bars between iron yokes, the ends of which are 12 ins. apart. When the bars have cooled down the shrinkage is shown by the difference between the length of the bars and the gap in the yoke in which they were cast ; this is usually measured by inserting a taper graduated wedge in the gap and measuring off the dimension of the space.

This test is quite a comparative one, and when the amount of shrinkage which is associated with the most satisfactory castings has been arrived at, any deviation can be rectified by a little addition of silicon if the shrinkage becomes too high and *vice versa* when it is too low.

Under normal conditions a shrinkage of 0·183 in. = 1 per cent. silicon, and, to take the other extreme, 3·5 per cent. silicon is associated with 0·123 in. shrinkage.

(2) **Transverse Test.**—The following table gives average particulars of shrinkage, deflection and breaking load obtained with various classes of iron :—

Class of Material.	Shrinkage.	Deflection.	Breaking load.
	in.	in.	lbs.
Tough strong Iron	0·160	0·25	550
Hard „ „	0·168	0·22	630
Soft Iron	0·123	0·18	423
Mottled Iron	0·207	0·11	375
White Iron	0·226	0·08	250

from which it will be seen that to obtain a big deflection strong irons are necessary.

(3) **Hardness.**—The most handy and reliable form of test is the 'drill test,' as all other methods deal with surface hardness only. The test may be made as follows :—Cast the metal into bars 1½ in. diameter, ½ in. being shaped off one side to give a flat surface to work upon, and

move the outside skin. Drill four holes $\frac{3}{4}$ in. diameter, to a depth of 1 in., then the number of revolutions required to drill to this depth (the mean of the four holes being taken) indicates the general hardness. The angle of the drill should be ground exactly the same for each test, by means of a suitable guide on the grinding machine. It is also essential to keep the same drill for the purpose, and preferably, two drills should be used and two holes drilled with each, which minimises many discrepancies which otherwise might come in. The efficiency of drills is materially affected by the sharpness of their point, and as cast iron is often not homogeneous and may contain more or less hard spots a false result may be obtained owing to the point becoming unduly dulled by striking a hard spot in the early stages of the test. To avoid this a hole $\frac{1}{8}$ in. diameter should be first drilled, which affords clearance for the point of the drill and ensures the full cutting edge coming into operation. It is obviously necessary that the same weight be attached to the drill and also that it runs at the same number of revolutions per minute for each test.

(4) **Casting Temperature.**—Low silicon cast iron is very prone to the effects of casting temperature, and some irons employed for such purpose are also liable to liquid contraction. A handy workshop test for casting temperature with this class of iron consists in making bars of the general dimensions shown in fig. 33. When cold the bars are broken through the line AB, the condition of the fracture giving an indication of the temperature at which

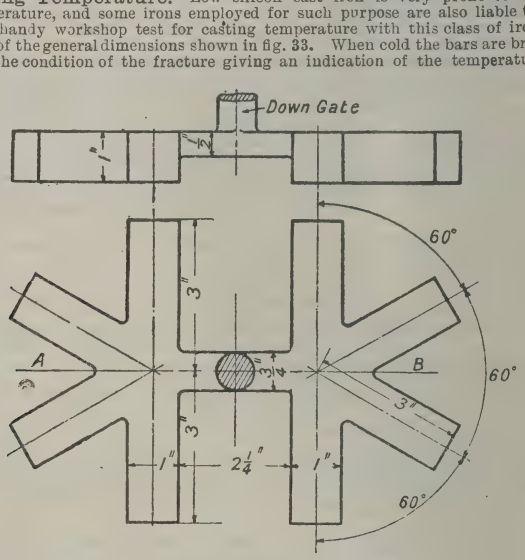


FIG. 33.

the metal was poured. Passing from the correct temperature (which is usually as hot as can be obtained from the cupola) to very low, the following fractures will be observed—perfectly solid and homogeneous, then slight whitish centre, then brown centres of varying sizes and depth of colour as temperature is lowered and then black centre; with the latter is always associated open cavities, and immediately above them is invariably found a gas hole.

For softer cast iron, which can be cast at a lower temperature without suffering the same effects as low silicon irons, a test bar in the form of a wedge is a very useful guide as to the fluidity of the metal. Dimensions of such a test-bar used by the British Chuck and Piston Ring Co. are length 9 ins., width 1 in., $\frac{3}{8}$ in. thick at the largest end tapering to $\frac{1}{32}$ at the smaller, the bars being run from the thick end.

(5) **Impact Test.**—A satisfactory test is on bars 40 mm. square (1·57 in.) supported on knife edges 160 mm. (6·3 ins.) apart, and by dropping a weight of 12 kilos (26·5 lbs.) from a height of 30 cm. (11·8 ins.) increasing the height of drop by increments of 5 cm. (1·9 in.) until such times as the sample breaks, the height at which the bar eventually fractures being taken as the impact figure. Attached to the weight, in such a manner as to strike the bar parallel to the supporting knife edges, and the centre of same, is another knife edge. The face of all the knife edges should be rounded $\frac{1}{16}$ in. radius.

A result of 55 cm. (21·5 ins.) is none too high for the work named, although this is quite a severe test. The maximum attained, as far as is known, has been 80 cm. (31·3 in.).

Analyses and Mechanical Properties of Cast Iron.

TABLE OF STANDARDS FOR BRITISH IRON CASTINGS.

	Steam Cylinders.	Frames.	Flywheels.	General.
Total carbon	2·9	3·3	3·5	3·5
Combined carbon	0·9–0·95		0·37	
Silicon	1·1–1·3	1·6	2·0	1·7–2·2
Manganese	0·6–0·9	0·65	0·4–0·5	0·3–0·4
Phosphorus	0·4–0·6	0·5	0·9	0·4–1·4
Sulphur, under	0·15	0·15	0·15	0·15
Transverse load, cwt.	35–46	34–38	30–33	29–32
„ deflection, inches	0·5	0·5	0·35–0·45	0·3–0·5
Tensile, tons sq. in.	12–14	11–13	11–14	9–11

Transverse tests are made on bars 3 ft. span, 2 ins. by 1 in. rectangular section, 1 in. face vertical.

TABLE OF TYPICAL ANALYSES OF BRITISH IRON CASTINGS.

(*F. M. Thomas, Birmingham Metallurgical Society.*)

Castings.	Combined Carbon.	Graphite Carbon.	Silicon.	Manganese.	Phosphorus.	Sulphur.
Cylinders and hydraulic	·6–·75	2·5–2·8	1·0–1·3	·5–·7	·45– ·7	·08–·12
Heavy machinery	·45–·60	2·8–3·0	1·2–1·5	·6–·85	·4– ·6	·06–·08
General castings	·35–·45	3·0–3·2	2·0–2·25	–1·0	1·0–1·3	·06–·08
Ornamental, thin	·08–·15	3·2–3·6	2·5–2·8	–1·0	1·3–1·5	·03–·04

TABLE OF STANDARDS FOR AMERICAN IRON CASTINGS.

(*Dr. J. J. Porter's Report to the American Foundrymen's Association in* 1910.)

	Total Carbon.	Combined Carbon.	Silicon.	Manganese.	Phosphorus.	Sulphur.
Air and ammonia cylinders	3·0–3·3	—	1·0–1·75	·7– ·9	·3–·5	U ·09
Motor car cylinders	3·0–3·25	·55–·65	1·75–2·00	·6– ·8	·4–·5	U ·08
Bedplates	—	—	1·25–1·75	·6– ·8	·3–·5	U ·10
Chilled castings	—	—	·75–1·25	·8–1·2	·2–·4	·08–·10
„ wheels	3·5–3·7	·6–·8	·6–·7	·5– ·6	·3–·4	·08–·10
Engine frames	—	—	1·25–2·0	·6–1·0	·3–·5	U ·09
Flywheels	—	—	1·5 –2·25	·5– ·7	·4–·6	U ·08
Gas engine cylinders	3·0–3·3	—	1·0 –1·75	·7– ·9	·2–·4	U ·08
Gears, heavy	Low	—	1·0 –1·5	·8–1·0	·3–·5	·08–·10
„ small	—	—	2·0 –2·5	·6– ·8	·5–·7	U ·08
Hydraulic cylinders, heavy	Low	—	·8 –1·2	·8–1·0	·2–·4	U ·10
„ „ medium	Low	—	1·2 –1·6	·7– ·9	·3–·5	U ·09
Locomotive cylinders	—	—	1·0 –1·5	·8–1·0	·3–·5	·08–·10
Machinery, cast, heavy	Low	—	1·0 –1·5	·8–1·0	·3–·5	U ·10
„ „ light	—	—	2·0 –2·5	·5– ·7	·5–·7	U ·08
Pipes	—	—	1·5 –2·0	·6– ·8	·5–·8	U ·10
Pipe fittings	—	—	1·75–2·5	·6– ·8	·5–·8	U ·08
Piston rings	Low	—	1·5 –2·0	·4– ·6	·3–·5	U ·08
Pulleys, heavy	—	—	1·75–2·25	·6– ·8	·5–·7	U ·09
„ light	—	—	2·25–2·75	·5– ·7	·6–·8	U ·08
Steam cylinders, heavy	Low	—	1·0 –1·25	·8–1·0	·2–·4	U ·10
„ „ medium	—	—	1·25–1·75	·7– ·9	·3–·5	U ·09
Valves, large	—	—	1·25–1·75	·8–1·0	·2–·4	U ·09
„ small	Low	—	1·75–2·25	·6– ·8	·3–·5	U ·08
Water heaters	—	—	2·0 –2·25	·6– ·8	·3–·5	U ·08

NOTE.—U indicates 'under.'

TABLE OF STANDARDS FOR GERMAN IRON CASTINGS.

	Gas Cylinders.	Steam Cylinder. No liner.	Steam Cylinder. With liner.	Beds and Standards	General Machinery	Piston Rings and Special Small Work.
Total carbon	2·9–3·2	3·2–3·4	3·4–3·5	3·4–3·6	3·5–3·8	3·0–3·3
Silicon	·9–1·0	1·0–1·2	1·3–1·5	1·4–1·6	1·5–1·9	1·2–1·5
Manganese	·6– ·9	·6– ·8	·6– ·7	·5– ·7	·5– ·6	·7– ·8
Phosphorus	·1– ·2	·3– ·5	·4– ·5	·5– ·8	·8–1·0	·6– ·8
Sulphur	·08–·09	·08–·09	·08–·09	·08–·09	·08–·10	·07–·08
Copper, under	·05	·05	Trace	·06–·08	·08–·10	·03
Metal thickness, mm.	50–100	35–55	35–55	35–100	10–35	10–40
Tensile strength, tons	16·5–14·0	14·0–11·4	12·7–10·2	11·4–8·9	10·2– 7·6	14·0–11·4
Bending stress, tons	28·6–25·4	26·7–24·1	24·1–20·3	22·2–19·0	19·0–16·5	25·4–22·2
Deflection, mm.	22–7	18–8	15–10	18–8	16–10	25–12
Diam. test bar, mm.	40–100	40–80	40–80	30–80	30–50	30–50
Span „ „	1,000	1,000	1,000	1,000	1,000	1,000
E., lbs. sq. in., about	12,100,000	15,600,000	14,200,000	13,500,000	13,100,000	12,800,000

E—modulus of elasticity.

The above is taken from the practice of a large German engineering firm as published in the German technical press in 1908. The test bars are round, of the varying diameters stated: all cross-breaking loads being on one metre (39·37 ins.) span.

STEEL.*

The term 'steel' is applied in a general sense to those alloys of iron and carbon whose carbon is present entirely, or almost entirely, in the combined condition and whose total carbon content does not exceed 2·00 per cent. In a special sense the term is applied to alloys of iron and carbon with elements which are generally in excess of the carbon and whose presence considerably modifies the resulting alloys; such alloys are generally named 'special steels.'

The pure alloys of iron and carbon are unknown commercially. Steel is always contaminated by some or all of the elements—manganese, silicon, sulphur and phosphorus. The effect of these elements on steel is considered below.

1. THE INFLUENCE OF CARBON ON THE PROPERTIES OF STEEL.

Carbon exists in steel in various forms and combinations, the following being those most generally recognised:—

(*a*) Free Carbon.

1. GRAPHITIC CARBON.

Rarely found in steels, as it is generally produced only when the alloy has taken up more carbon than it can retain in solution on solidification—about 2 per cent.

2. TEMPER CARBON.

Present in steels containing upwards of 1·0 per cent. carbon, which have been heated to redness. It is mainly found in white pig irons that have been subjected to annealing and tempering.

(*b*) Cement Carbon.

The carbide Fe_3C, which is known as 'cementite,' when considered as a microscopical constituent of steel. It exists in unhardened steels. The carbide is soluble in nitric acid of 1·20 sp. gr., giving a brown solution, which is of value in the estimation of the carbon percentage of steels.

(*c*) Hardening (Solution) Carbon.

Occurs in quenched steels, of which the tenacity, hardness and brittleness increase, within limits, as the percentage of hardening carbon in the steels increases.

* See also 'Tool Steel,' p. 980.

Stead states that 'the influence of carbon on the properties of normalised steel,' i.e. steel that has been heated to a temperature above that of all its critical points and cooled in air 'containing less than 0·90 per cent. carbon, approximates to the following average :—

EFFECT OF 0·1 PER CENT. CARBON.

Yield point is raised	1·78 tons sq. in.
Maximum stress is raised	4·18 ,,
Elongation is reduced	4·33 per cent.
Reduction of area is reduced	7·27 ,,

The figures represent material with only small quantities of manganese.'

Sauveur suggests the following formula for the average maximum stress of hypo-eutectoid (containing less than 0·83 per cent. carbon) steel, containing from 0·20 per cent. to 0·80 per cent. manganese :—

$$T = 22{\cdot}3 + 4{\cdot}02\ C \text{ (tons sq. in.).}$$

where T = Maximum stress.
and C = Carbon content.

For hyper-eutectoid steel (containing over 0·83 per cent. carbon) he suggests the following :—

$$T = 63{\cdot}4 - 9{\cdot}2\ C \text{ (tons sq. in.),}$$

which formula must, however, be employed with considerable judgment. (See also p. 2284.)

The maximum degree of hardness of steel is reached when the carbon content is 0·90 per cent.

2. THE INFLUENCE OF SILICON ON THE PROPERTIES OF STEEL.

Iron and silicon combine to form a compound, iron-silicide (FeSi), which, in all probability, forms a series of solid solutions with iron. It is, then, in the form of a solid solution that silicon occurs in steel.

The influence of silicon on the properties of steel increases with the percentage of carbon. In the case of low carbon steel silicon up to 1·75 per cent. increases the yield point and tensile strength without reducing the ductility; beyond this percentage increase of tenacity is accompanied by a serious loss of ductility. The silicon content of carefully manufactured mild steel rarely exceeds 0·20 per cent. Generally speaking, high carbon steels are benefited by the presence of silicon.

Silicon produces soundness in cast steel and is largely used in the manufacture of basic open-hearth steel. The effect of silicon on the mechanical properties of steel is somewhat variable and no definite figures are, therefore, quoted in this connection.

3. THE INFLUENCE OF MANGANESE ON THE PROPERTIES OF STEEL.

Manganese is present in steel owing to its premeditated addition—made with a view to deoxidise the decarburised metal in the steel furnace. It also acts as a 'desulphuriser,' in the sense that it modifies the action of sulphur on steel. Provided the manganese content of a given steel is sufficient to retain the sulphur therein almost entirely, if not entirely, in the form of manganese sulphide, the deleterious effects of sulphur will be avoided. This statement does not mean, however, that the quantities of manganese and sulphur that may be present in a given steel are unlimited.

Manganese combines, in the first instance, with the sulphur in the steel (see note on Manganese in Cast Iron). Any excess of manganese over the amount required to form manganese sulphide combines with some of the carbon to form manganese carbide (Mn_3C).

The effect of manganese on the physical properties of steel is not known with certainty. Harbord considers that for mild steel and rail steel the less the content of manganese above that required to ensure solid ingots and freedom from red shortness the better. The manganese content of mild steel for boiler plate and structural work should be limited to 0·60 per cent. The presence of 1·00 per cent. of manganese in medium high carbon steel does not induce brittleness; in high carbon tool steels not more than 0·50 per cent. should be permitted, owing to the liability to fracture during the process of quenching incurred thereby. It seems likely that the mechanical properties are varied too slightly and too vaguely as to be of note if manganese be present in quantities of less than 1·25 per cent.

4. THE INFLUENCE OF SULPHUR ON THE PROPERTIES OF STEEL.

Sulphur occurs in steel in combination either with manganese or with iron. The compound of manganese and sulphur has a high melting point, low specific gravity, and occurs almost always in the form of globules or ovoids (*Arnold*). It may seriously affect the properties of steel if present in large quantities, but its presence is not nearly so deleterious as is that of iron sulphide. The latter compound has a low melting point and can occur not only in the form of globules or ovoids

but as meshwork surrounding the crystals of ferrite in steel. The low melting point of this compound is generally considered to be the cause of the red shortness of sulphurous steels, which red shortness is, of course, considerably aggravated when the iron sulphide surrounds the crystal grains.

The above serves to show that manganese modifies the effects of sulphur and, since manganese has a greater affinity for sulphur than has iron, the manganese content of steel is frequently adjusted with these modifying effects in view.

Sulphur appears (i) to reduce the yield point, maximum stress and percentage elongation of steel, (ii) to increase the percentage reduction of area and the resistance to shock, and (iii) to increase the cutting freedom of steel during machining. Certain steels specially noted for the last feature are known having a content of sulphur of 0·15 per cent. Such a sulphur content is out of the question for steel that is to be welded or to be manufactured into rails or material for structural purposes. Steel that requires to be welded should contain not more than 0·06 per cent. of sulphur, while such as is to be employed for rails or constructional work should have an upper limit of 0·08 per cent. of sulphur. It is advisable when consideration is taken of the sulphur content of a steel to take note also of the percentage of manganese in the same.

5. The Influence of Phosphorus on the Properties of Steel.

The small amount of this element usually present in steel is held in solid solution by the iron as phosphide of iron (Fe_3P). Phosphorus is supposed by some to enlarge the grain of steel, thus inducing the dangerous characteristic of cold-shortness to steel.

The effect of phosphorus becomes more noticeable as the carbon content of steel is raised. In low carbon steels not more than 0·10 per cent. is, as a general rule, allowable, while for most purposes—e.g. constructional steel—0·06 per cent. should not be exceeded. Certain steels contain quantities in excess of 0·10 per cent., but owing to the liability of steels containing much above 0·08 per cent. of this element to failure under shock, the last figure may be considered as a safe limit for most purposes. In high carbon steels the effect of phosphorus is much more noticeable, an increase of 0·01 per cent. being quite noticeable (*Howe*) in 1·00 per cent. carbon steel. A limit of 0·04 per cent. is considered advisable in the latter steels.

Stead quotes the following figures for the effect of 0·10 per cent. of phosphorus on the mechanical properties of steel :—

Yield point is raised	2·5 tons per sq. in.
Max. stress is raised	2·4 ,,
Elongation is reduced	0·7 per cent.
Reduction is reduced	1·5 ,,

The specific work required to produce rupture decreases as the content of phosphorus increases.

6. The Tenacity of Steel as affected by the above Elements.

McWilliam quotes the following formula :—

$$T = 38000 + [800 + 4(C - 20)]\,C + 1205 + [100 + 2\,(C - 20)]\,Mn + 1000\,P$$

as representing the maximum stress value of normalised basic steel in pounds per square inch. There is a difference between steels of acid and basic origin such as renders the formula of little value for purposes of determining the properties of steel of the former type.

7. The Influence of Nickel on the Properties of Steel.

The following are results of tests of nickel steel made by the St. Jacques Steel Works :—

1. 2 to 5 per cent. of nickel. Resistance increases with percentage, especially when carbon content is low. When carbon reaches 0·50 per cent., nickel has little influence. Forges and rolls well. When hardened, ratio of elastic limit to ultimate resistance is very great.

2. 10 to 20 per cent. nickel. Resistance increases with percentage of nicked. An addition of 0·10 per cent. of carbon increases ultimate resistance from 19 tons to 41 tons. With 2·0 per cent. nickel resistance is 69 tons. With increased carbon up to certain limit, over 127 tons can be obtained. Resistance with 10 per cent. nickel decreases when carbon is 0·50 per cent. These steels do not harden much, and do not harden at all when the carbon is higher than 0·10 per cent.; 20 per cent. nickel steel never hardens. All are very brittle. They forge and roll well, but when containing more than 0·10 per cent. carbon they cannot be machined.

3. 20 to 25 per cent. of nickel. Elastic limit, as well as ultimate resistance, is low. They have great elongation, and are nearly free from brittleness. When forged at a low temperature without annealing, elastic limit increases notably, and has reached 35 tons with an ultimate resistance of 51 tons, and an elongation of 25 per cent. With less than 1 per cent. carbon the steel can be easily forged and rolled. With 1 per cent. of carbon, can be forged between 500° and 1,000° with light blows. Machining is difficult, but not impossible.

An ultimate resistance of 40 tons can be obtained from 3 per cent. nickel steel with ·175 per cent. of carbon, when to obtain this strength in ordinary steel would require at least ·50 per cent. of carbon, sufficient to make the material so brittle as to be unreliable.

In general, the elastic limit of nickel steel is above 50 per cent. of ultimate resistance.

Nickel steel cannot be machined as easily as low carbon steel.

SPECIFICATION FOR 3 PER CENT. NICKEL STEEL.

Description.	Tensile Strength in Tons per Sq. In.		Minimum Elongation.	Elastic Limit.	
	Minimum.	Maximum.			
Crank pins	35	37	25 per cent. in 2 ins.	½ of ultimate	Oil-tempered.
Piston rods	35	37	25 ,, ,,	,, ,,	
Driving axles	33	36	30 ,, ,,	,, ,,	
Side rods	27	30	25 ,, ,,	,, ,,	
Friction plates	27	30	20 ,, ,,	,, ,,	
Stay bolts	26	30	20 ,, ,,	,, ,,	

NOTES ON STEEL SPECIFICATIONS.

(*Frank Foster, M.Sc.*)

Steel Forgings.—These should be of Siemens-Martin open-hearth make, and in this country it is usual to specify acid steel. In Germany and America basic steel is usual.

The test bars should conform to British standards or the value of the elongation is misleading. The parallel portion of a test piece should extend not less than one-quarter of the diameter beyond each gauge mark. The test piece may conform to one of the following after machining :—

Diam. 0·564 in., area 0·25 sq. in., gauge length 2 ins.
Diam. 0·798 in., area 0·50 sq. in., gauge length 3 ins.
Diam. 0·977 in., area 0·75 sq. in., gauge length 3·5 ins.

The following are suitable test requirements, all forgings being well annealed after leaving the hammer or being rough machined :—

Forging.	Tensile, tons sq. in.	Elongation per cent.
Crankshafts and general	28–32	27–23
Piston rods	33–37	22–20
Connecting rods and pins	30–35	25–20

The carbon content varies from 0·2 to 0·35 per cent., according to tensile strength ; 0·3 per cent. carbon giving, according to H. Brearley, 34 tons tensile and 30 per cent. elongation with 52 per cent. reduction in area.

Nickel Steel.—It is usual to specify that nickel steel shall contain 3·5 per cent. of nickel, but it may fall as low as 3 per cent. It is not usual to make mention of heat treatment, although this enables the qualities to be improved. Forgings of this character, with 3 to 4 per cent. nickel, are chiefly used for heavy connecting rod bolts and important valve spindles ; also, at times, for piston rods. Typical tests results are 35 to 48 tons tensile, and 18 to 22 per cent. elongation.

According to H. Brearley and others the most reliable material for rapidly applied shock loads, of which an aeroplane engine valve with spindle is a good example, is a 25 per cent. nickel steel.

20 per cent. of nickel renders steel non-corrodible.

Nickel-Chrome Steel.—Occasionally engine builders require a specially strong, tough, and hard steel, say for pins under severe loading. It is perhaps best in these special cases to put oneself in the hands of a good steel firm, but it may be of interest to note that nickel-chrome steel is much used in such cases. It is air-hardening and can thus be cooled slowly to avoid contraction stresses after heat treatment. According to Brearley (Manchester Association Engineers, October 1914) the tensile strength varies from 42 to 130 tons, and the elongation from 30 to 10 per cent. with from 66 to 35 per cent. reduction in area, according to the heat treatment.

American Forgings.—For large forgings tensile strength not less than 75,000 lbs. (33·5 tons) ; elastic limit not less than 40,000 lbs. (17·8 tons) ; elongation not less than 20 per cent. in 2 ins. with a reduction in area of 45 per cent. Forgings to contain about 0·4 per cent. carbon and not over 0·04 of sulphur or phosphorus. To be thoroughly annealed.

Cast Steel.—Steel castings are made by firms specialising in the business and rarely by the engine-builders. As a rule a very vague specification is drawn up and no tests are called for.

Of whatever quality it is important that steel castings should be well annealed. According to Prof. Arnold about 180 hours total time is required for this.

Test bars should be cast on the work and machined before testing.

For hydraulic and steam or gas engine work the tensile strength should lie between 28 and 33 tons per square inch with an elongation of 20 per cent. or over, on a standard test piece. A test piece 1 in. wide by ½ in. thick should stand bending through an angle of 90° with an inner radius of one inch.

For heavy gear wheels the above tests may be specified, but better wearing qualities are obtained with a higher carbon content, giving a tensile strength of 35 to 40 tons per square inch and an elongation of about 12 to 15 per cent.

Chemical tests are seldom specified and are rarely necessary, provided the mechanical tests are satisfactory. The usual run of castings contain about 0·3 per cent. carbon.

Bar Stock.—Rolled and drawn bars, both bright and black, are largely used in engine construction, and the following notes are based on the British Standard specification. Two qualities, 1 and 2, are to be as follows:—

Quality.	1.	2.
Tensile, tons, not less	28	35
Elongation, per cent.	14–17	12–14·5
Carbon, per cent.	0·25	0·40
Manganese	0·85	1·00
Silicon	0·20	0·20
Phosphorus	0·06	0·06
Sulphur	0·06	0·06

The test pieces must be cut from the stock bars and not machined. Bending tests are advisable, especially with cold drawn and reeled bars, as these do not prove perfectly reliable in practice. (*Frank Foster, M.Sc.*)

Cobaltron Steel Alloy (Patent).

This alloy (patent) introduced by Messrs. Darwin and Milner, of Sheffield, is made by adding cobalt to chromium-carbon steel. The maximum temperature necessary for the hardening is 1000° C. (tungsten steel requires from 1250° to 1350° for the best results) and hardening is said to be satisfactory when the steel is allowed to cool naturally in still air. Analysis of cobaltron shows that the following elements approximate to the amounts stated below:—

Carbon	About 1·5 per cent.	Molybdenum	About 1·25 per cent.
Cobalt	,, 2·25 ,,	Tungsten	,, 0·25 ,,
Chromium	,, 11·0 ,,		

'Heenan' Oil Coolers for Heat Treatment of Steel.

The continuous introduction of hot steel into oil quenching tanks naturally heats up the oil, which retains heat for a long time, and rapidly becomes too hot to permit of the process being carried on.

Owing to the poor heat conductivity of oil, such arrangements as water-jacketing the tank or inserting pipe coils through which water is circulated are ineffective, the cool surfaces affecting only that portion of the oil in immediate contact therewith, while allowing the main body to remain over-heated.

The 'Heenan' system of oil cooling is to extract the hot oil by means of a suitable centrifugal pump, and pass it through a 'Heenan' oil cooler before returning it to the quenching tank. This oil cooler is built up on lines similar to those of the water cooler described on page 1107. In effect, oil is spread over a large cooling surface with which cool air from the surrounding atmosphere is then drawn into contact. Circulating water is not used.

This machine has been applied amongst other purposes to quenching processes in connection with the hardening and tempering of gun tubes, rifle barrels, steel tools, gear wheels, springs, aeroplane engine parts, etc.

CASE-HARDENING.

The case-hardening of steel is dependent upon the fact that above certain temperatures the affinity of iron for carbon is so great that when iron or steel is heated at these temperatures in contact with suitably chosen carbonaceous materials ready absorption of carbon supervenes. The quantity of carbon that can be absorbed by iron or steel under the above conditions varies according to the following factors—

1. The composition of the iron or steel.
2. The temperature at which the process is conducted.
3. The length of time during which the process is continued.
4. The nature of the carburising material.

The Composition of the Iron or Steel.

Case-hardening, in the accepted sense, is rarely practised on steel containing more than 0·20 per cent. of carbon or 0·40 per cent. of manganese. The process is stated by Guillet to be hindered by the presence of nickel, silicon and aluminium, and hastened in the presence of manganese, tungsten, chromium and molybdenum.

The Temperature at which the Process is Conducted.

The process is best conducted at temperatures above the critical range of the iron or steel treated. The usual temperatures for carburisation vary from 900° C. to 1000° C. The higher the temperature of carburisation the greater the rate of absorption of carbon and the deeper the effect of absorption.

The Length of Time during which the Process is Continued.

This factor can only be determined by experiment. It is generally considered that the best results are obtained when the carbon content of the surface layers of the case-hardened material are of eutectoid composition (about 0·90 per cent. C.).

The Nature of the Carburising Material.

The carburising material may be either solid, liquid or gaseous. Solid materials are employed more generally than are liquid or gaseous materials.

Solid Case-hardening Materials.

For the purpose of obtaining deep 'cases' the articles to be hardened are packed in a suitably designed box with solid case-hardening substances or mixtures of substances, of which the following are examples :—

Charcoal (animal or wood).
Charred leather.
Crushed bone or horn.
Barium carbonate 40 per cent. and charcoal 60 per cent. (Caron's mixture).
Charcoal (wood) 95 per cent. and soda ash 5 per cent.
Charcoal (wood) 90 per cent. and common salt 10 per cent. (Guillet).

As case-hardening composition is bought by weight, and is required to fill up the case-hardening boxes, the specific gravity is an important consideration. The speed of conduction of heat through various depths of carburising material requires determining by experiment. A good case-hardening material should not diminish in volume appreciably during the carburising operation, and should be free from sulphur and phosphorus.

The box should be of plate iron not less than $\frac{1}{8}$ to $\frac{1}{4}$ inch thick. The lid of the box has two holes pierced in it for drawing testing-pieces out if required. For small articles a piece of wrought-iron tube, plugged or capped at one end, may be used ; the other end is closed by a second plug fastened with an iron pin passing through it and the pipe, the whole being luted with fine clay. The articles being previously finished, except polishing, are put into the box in alternate layers with the carburising mixture, commencing at the bottom of the box with carburising mixture to the thickness of about $\frac{3}{4}$ inch ; upon this a layer of the articles is placed, then another of carburising mixture about one-third the thickness of the first, and so on until the box is nearly full, finishing with carburising mixture about the thickness of the first layer, leaving room every way for the expansion of the articles by the heat, otherwise they will bend each other in the box. The packing completed, the lid is put on, the box luted and placed in a suitable furnace. The contents of the box require to be very gradually and uniformly heated to redness, and retained at this heat for the period required for the depth of caburisation desired. The depth of carburisation depends on the length of time the temperature is kept up. For testing pieces plain pieces of the same kind of iron as the articles may be used. They require to be brightened, and are placed, at the time of the packing of the box, in the central part, in such a manner that they may be readily pulled out through the holes in the lid, either by a piece of iron wire attached or by being made long enough to project through the holes, so that they may be gripped with pliers ; the holes are luted the same as are the other parts. When the articles are sufficiently carburised the box is drawn from the fire, the lid taken off, and the contents are immersed in pure cold water ; taken out when cold they are ready for polishing. To prevent rusting the articles may be dried by riddling in a sieve with dry saw-dust, after which they are wiped with a greasy cloth. If the articles be immersed in oil instead of water they will be much tougher but less hard, though sufficiently so for some purposes. It is not necessary to immerse them direct from the box, as it answers equally as well to allow them to remain in the box till cool, and then reheat them in an open fire and immerse them separately.

When the case-hardening is required to terminate at any particular part of the article, the part needed to be soft may be bound with iron wire and cased with loam. This prevents the iron from absorbing carbon at that part. The loam requires to be gradually dried on the article previous to putting in the box, otherwise it will crack. 'Harbee,' in a letter to *Engineering* (August 15, 1913), states that, in order to 'stop off' that portion of the article required to be kept soft, a thin coating of copper (one thousandth of an inch in thickness is sufficient) electrolytically deposited will effectually resist any attack of the case-hardening material. After case-hardening the film of copper can be readily removed by the aid of a pocket knife. Copper plating, however, is expensive. Another method is to cover the part needing protection with a copper tube (this is the most satisfactory method when the shape of the work will allow the use of the tube) or to paint it with a protecting paint (paint can be made from china clay and blacklead or from sodium silicate and sand). A frequent procedure is to carburise an object and allow it to cool in the box, finally machining off the carburised portion before quenching wherever it is desired to keep the surface soft. It is of course necessary to leave sufficient metal on the object before carburising in order to ensure complete removal of all carburised metal before quenching. With long objects, one end of which requires hardening while the other is to remain soft, it is possible to carburise the entire length, then reheat and quench one end only, allowing the other end to cool in air.

For the purpose of superficial case-hardening it is necessary only to heat the iron or steel to be treated to redness, to sprinkle one or other of the following finely powdered compounds or mixtures on the surfaces to be hardened, and to plunge the iron so treated into pure cold water. This method is simple and speedy, but the case obtained is insufficiently thick to resist much wear.

Potassium cyanide.
Potassium ferrocyanide.
Potassium ferrocyanide and potassium bichromate.
Sodium ferrocyanide 90 per cent. and anhydrous sodium carbonate 10 per cent.
Sodium ferrocyanide 80 per cent., anhydrous sodium carbonate 10 per cent., and potassium ferrocyanide 10 per cent.

Liquid Case-hardening Materials.

The immersion of steel articles in a bath of molten potassium cyanide (the fumes of which are of a highly poisonous nature) heated to 850° C. results in the formation of very hard but shallow cases.

Gaseous Case-hardening Materials.

The following gases have been employed for case-hardening iron and steel—illuminating gas, carbon monoxide, acetylene and petroleum vapour. All, according to Brearley, are supposed to be more effective if they are led through a solution containing ammonia, or otherwise are partly saturated with ammonia gas before entering the furnace. By increasing the pressure of the gaseous mixture it is possible to increase the rate of carburisation.

Thermal Treatment of Case-hardened Materials.

Quenching.—If the quenching takes place directly after the carburising operation, the resulting product is liable to possess a coarse structure in both the core and the case. In order to improve the structure it is better to allow the work to cool in the box after cementation, and then reheat it in a separate operation. The reheat may be made bare in the furnace, but with large objects which take long periods to obtain the desired temperature it is advisable to protect them from decarburisation by covering them with charcoal or old case-hardening mixture. This second reheat is most satisfactory at temperatures of about 780° to 820° C. It is claimed that very good results may be obtained by reheating twice, first with a view to refining the core and secondly to refine the case. A sample treatment of this description is :—

1. Carburise at 900° C. and allow to cool in box.
2. Reheat at 900° C. bare, and allow to cool in air.
3. Reheat bare for 20 minutes at 810° C. and quench in water.

Another common treatment which is said to yield fine core structures is to reheat twice and quench after each reheat, e.g. :—

1. Carburise at 920° C.
2. Reheat to 900° C. and quench in oil.
3. Reheat to 810° C. and quench in water.

In order to refine the cores of case-hardened articles it is advisable to heat the same to at least 875° C. (unless the carbon content of the core is above 0·20 per cent.) and quench. This treatment refines the core of the article but coarsens the case, hence it is necessary to reheat, to a temperature somewhat above the critical range corresponding to the carbon content of the case (775° C. to 825° C.), subsequently quenching the article in water, or in oil.

Oxy-Acetylene Welding *and* Cutting Plants

TRADE **'OXALENE'** MARK

ACETYLENE GENERATORS: Stationary and Portable

WELDING BLOWPIPES: Single and with Exchangeable Nozzles

CUTTING BLOWPIPES: to cut from $\frac{1}{8}$" to 20" thickness

ROLLER GUIDES AND TRAMMELS

OXYGEN PRESSURE REGULATORS: with two gauges, for Contents and Working Pressure

ACETYLENE PRESSURE REGULATORS: with two gauges, for High-pressure System

All other Accessories and Welding Rods and Fluxes for welding any metal and cutting iron and steel

SATISFACTION GUARANTEED

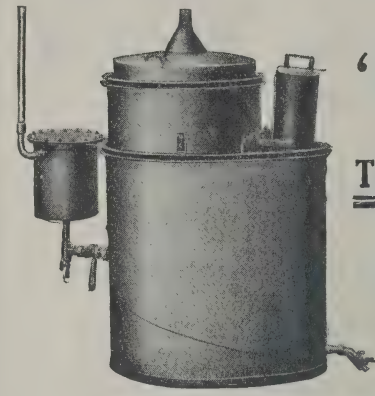
'OXALENE' OUTFITS save gas, save labour, save time. Cheapest in use. *Ask for Catalogue 'S'*

SOLE MAKERS:

HOGGETT, YOUNG & CO.

17 Essex Road, London, N. 1

Phone—North 1752 Telegrams—'Weldoxacet, London'
Codes—Marconi and A B C (5th Edition)



TRADE

'OXALENE'

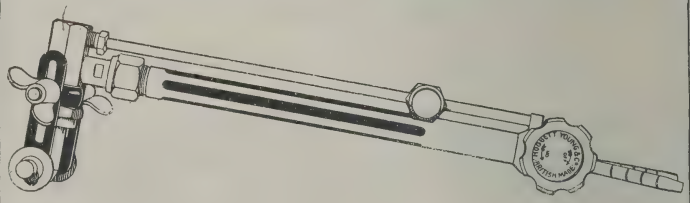
MARK.

THE ACETYLENE GENERATOR

that always delivers PURE and COOL Gas, without waste, and greatly reduces your carbide bill.



THE WELDING BLOWPIPE, that works without trouble and much reduces your oxygen bill.



THE CUTTING BLOWPIPE, that cuts clean, quick and easy, with lowest consumption of oxygen. It will reduce your oxygen bill enormously.

SOLE MAKERS—

HOGGETT, YOUNG & CO.

17 ESSEX ROAD, LONDON, N.1.

F. 2289

Quenching in water results in a much more rapid cooling than oil quenching; the former is necessary for ball races, cams, and all parts which have to be subjected to hard wear and require extreme hardness (80 to 90 scleroscope). Oil quenching of correctly carburised mild steel results in a hardness of 50 to 70 scleroscope. Small objects cool more rapidly, and therefore become harder than large objects undergoing the same treatment.

Tempering of the quenched articles still further improves the properties of the same.

OXY-ACETYLENE WELDING AND CUTTING.

(Contributed by D. Richardson, Wh. Exh., A.M.I.M.E., Capt. R.A.F.)

EQUIPMENT.

The apparatus required for an oxy-acetylene installation usually comprises a generator for generating the acetylene gas, which may be a fixed or portable plant, the most portable type of plant uses compressed or dissolved acetylene in portable safety cylinders instead of a generator; chemical and mechanical purifying apparatus; oxygen apparatus for the production of oxygen, or the use of oxygen in cylinders; oxygen regulator for lowering the pressure of the gas after it leaves the cylinder, to the pressure required for the blowpipe, and, in the case of dissolved acetylene, an acetylene regulator for the same purpose; hydraulic safety valve or other safety device; welding and cutting blowpipes of various capacities; accessories, such as flexible tubing, goggles, welding benches, blowpipe support, preheating devices, tools, jigs, filling materials, etc. etc.

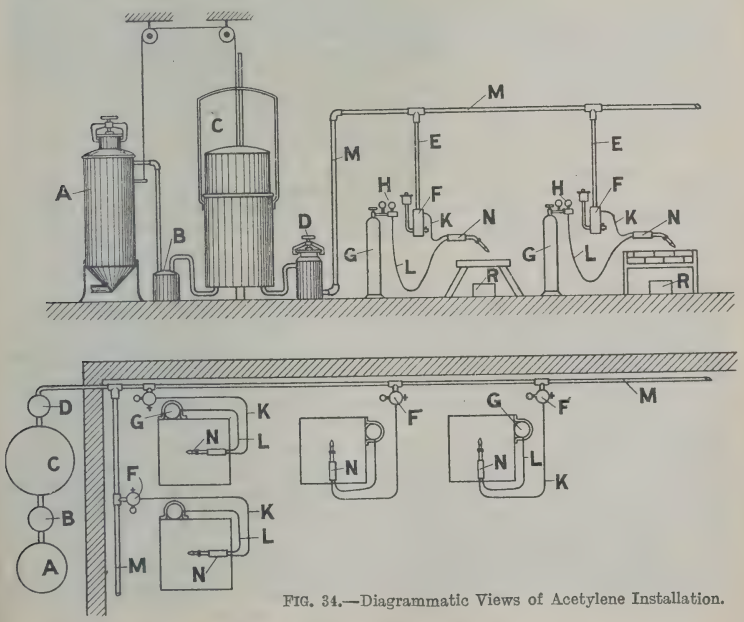


FIG. 34.—Diagrammatic Views of Acetylene Installation.

Fig. 34 shows in diagrammatic form an elevation and plan of the general lay-out of an acetylene welding and cutting installation. The letters refer to the same details in both views.

The acetylene generator, shown at A, is usually automatic, that is, the generation of gas is controlled entirely by the gasholder regulating the water supply or the carbide supply; B is a condenser, washer, and water-seal; C is a gasholder, consisting of a tank to contain the water-seal and a bell to store the gas; D is a purifying chamber and filter. The main piping, M, is

connected to the purifying chamber and forms a complete circuit of the welding shop ; branch pipes, E, are taken from the main for supplying acetylene to each welding station ; F is the hydraulic safety valve or other safety device ; a flexible tube, K, connects the hydraulic safety valve to the welding or cutting blowpipe, N ; G is the oxygen cylinder, on to which is screwed the oxygen regulator H ; a flexible tube, L, connects the oxygen supply to the blowpipe N ; two common types of welding benches are shown.

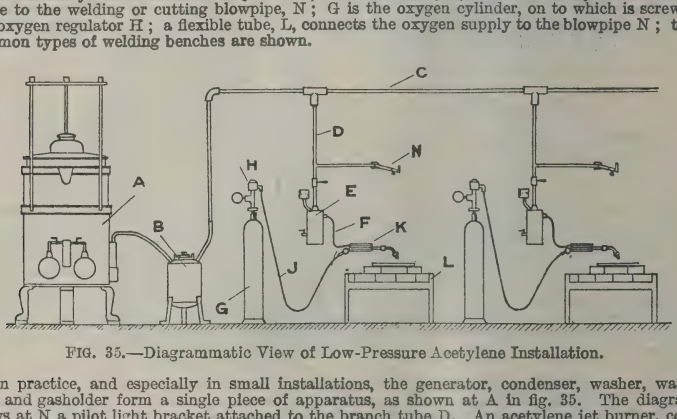


FIG. 35.—Diagrammatic View of Low-Pressure Acetylene Installation.

In practice, and especially in small installations, the generator, condenser, washer, water seal, and gasholder form a single piece of apparatus, as shown at A in fig. 35. The diagram shows at N a pilot light bracket attached to the branch tube D. An acetylene jet burner, consuming about 5 litres of acetylene per hour, screwed into the bracket, forms an efficient and economical method of lighting the blowpipe. The burner should be at least 18 inches from the hydraulic safety valve and not more than 6 ft. above floor level.

OXYGEN SUPPLY.

The oxygen may be obtained in cylinders or may be produced on the premises. There are three processes for the production, namely :—(1) By the chemical process ; (2) by the electrolysis of water ; (3) by the liquid-air process. The first is practically obsolete, and the second is generally used for producing oxygen on the premises. The gas can then be charged into cylinders or piped into the welding shop from large tanks into which it has been compressed. The cylinders supplied by manufacturers usually contain 100 cub. ft. of gas at a pressure of 1,800 lbs. per sq. in. Care must be taken against leakages, and particular care must be exercised not to oil or grease any part of the oxygen apparatus or supply line. Dust and moisture should be expelled by opening the cylinder valve before the cylinder is put into use. Repairs to cylinder valves should not be attempted by the user, and full cylinders should be handled carefully. No attempt should be made to transfer oxygen from one cylinder to another by rigging up some form of communicating tube. A cylinder valve should never be opened suddenly when the oxygen regulator is attached. In the event of the oxygen supply being restricted owing to the freezing of the cylinder valve, only hot water should be used to put it right. Leakages can be discovered by the hissing noise produced by the escaping oxygen, by the use of soap-suds spread over likely places, or by closing the blowpipe, cylinder and regulator valves and noting how long the pressure holds up on the gauges.

For estimating costs of welding, the following table will be found useful. The table gives the number of cubic feet of oxygen remaining in a 100 cub. ft. cylinder corresponding to various readings of the high-pressure gauge on the oxygen regulator. The amount of oxygen indicated by the gauge reading is more or less approximate as it depends upon the temperature of the oxygen. For practical work the deviations can be ignored, and would not affect the usefulness of the table.

Gauge Pressure in Atmospheres.	Cubic Feet of Oxygen in Cylinder.	Gauge Pressure in Atmospheres.	Cubic Feet of Oxygen in Cylinder.
10	8·3	70	58·4
20	16·7	80	66·7
30	25·0	90	75·0
40	33·4	100	83·4
50	41·7	110	91·7
60	50·0	120	100·0

Cables :
OXHYCARBON, LONDON.
A B C Code, 5th Edition.

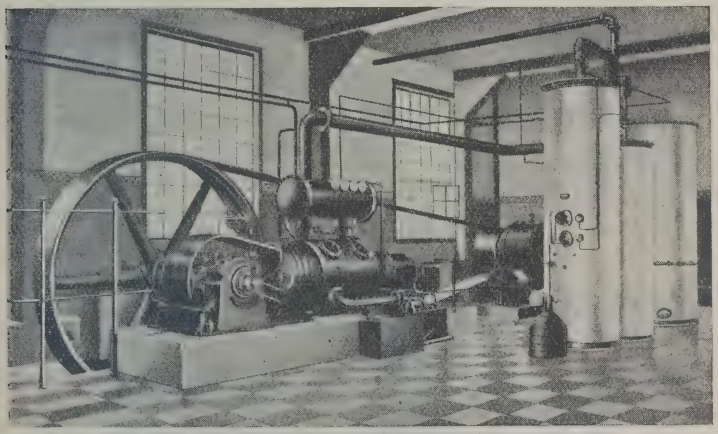
The

Telegrams :
OXHYCARBON, KINCROSS, LONDON.
Telephone : NORTH 3266.

OXHYCARBON CO.

24 PANCRAS ROAD,
LONDON, N.W. 1.

The Oxhycarbon Oxygen & Liquid Air Producing Plants




THE OXHYCARBON OXYGEN PRODUCING PLANT.

4 Stages : Air Compressor.—Separator.—Air Cooler.—Motor.

In works where the consumption of Oxygen is over 50 cylinders of 100 c.b. ft. per week, an installation of the above plant will quickly pay for itself. Estimates for plant giving working costs etc. sent on application.

The Oxhycarbon Oxy-Acetylene Rivet Cutter

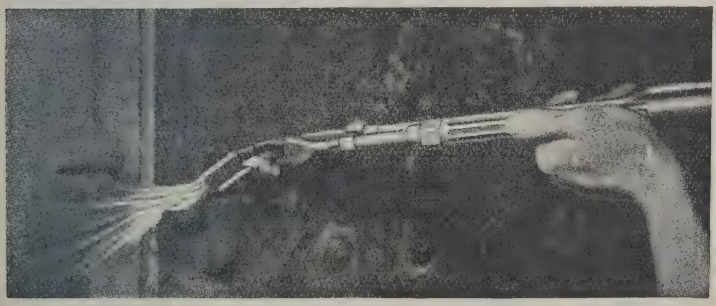The latest, quickest and cheapest means of removing rivet heads, flanges off girders, etc.



PRICES ON APPLICATION.

We hold the largest stock in Great Britain of Oxy-Acetylene Welding and Cutting accessories, Acetylene Generators, etc. We also stock Welding Wires and Rods for Mild Steel, Cast Iron, Brass, Aluminium and Copper, also Flux for same.

PRICE LISTS or Estimates on Application to Head Office, **24 Pancras Rd., LONDON, N.W. 1.**

F. 2290

Cables :
OXHYCARBON, LONDON.
A B C Code, 5th Edition.

The

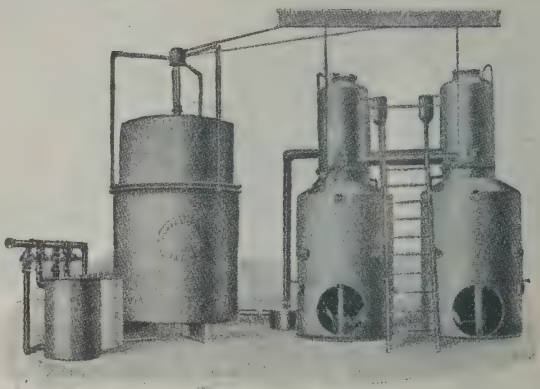
Telegrams :
OXHYCARBON, KINCROSS, LONDON.
Telephone : NORTH 3266.

OXHYCARBON CO.


24 PANCRAS ROAD, LONDON, N.W. 1.

Specialists in Oxy-Acetylene Welding Plants, Oxygen and Liquid Air Plants, Acetylene Generators, Oxy-Acetylene Blowpipes, Cutters, Pressure Regulators, Accessories, Repairs, etc.

The OXHYCARBON 'OVERFLOOR' Acetylene Generator



ACETYLENE GENERATORS taking Charges from 5 lbs. to 2,240 lbs.




Perfect Welding Flame.

Smallest Consumption of Oxygen.

THE 'OXHYCARBON' Oxy-Acetylene BLOWPIPE.

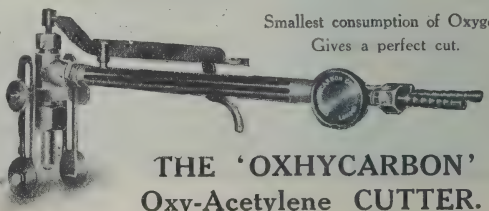Agencies :
GLASGOW, NEWCASTLE, LEEDS, MANCHESTER, NOTTINGHAM, BIRMINGHAM, CARDIFF, BRISTOL, READING and DERBY.



Smallest consumption of Oxygen.
Gives a perfect cut.

THE 'OXHYCARBON' Oxy-Acetylene CUTTER.

The Oxhycarbon Cutter and Blowpipes have been imitated by many but equalled by none.

Oxygen is supplied to the trade at prices which vary according to the size of the cylinder, quantity required, and other conditions. Cylinders are loaned, or may be purchased outright. Demurrage charges are made on hired cylinders when retained above a certain period. Oxygen cylinders are conveyed by the railway companies under strict regulations and conditions.

Acetylene Supply.

The acetylene may be obtained in cylinders, when it is generally known as dissolved acetylene, or may be generated on the premises. The precautions in handling acetylene cylinders are much the same as for oxygen cylinders. The gas should not be drawn off at too high a rate; in other words, the greater the demand the larger the cylinder. For general work cylinders containing 200 or 300 cub. ft. of gas at a pressure of 225 lbs. per sq. in. are advisable.

Before the gas is compressed into cylinders it is first purified and dried by several processes, and then compressed in solid drawn seamless steel cylinders, filled with a patent porous filling substance, throughout the pores of which a film of acetone is held in suspension.

The acetylene and oxygen being under high pressure a perfectly even mixture of both gases can be maintained in the blowpipe and the pressure varied according to requirements. The elimination of the injector device, necessary in low-pressure blowpipes, and the hydraulic safety valve are advantages claimed for dissolved acetylene or the High Pressure System, as it is called. Dissolved acetylene can be used with any type of oxy-acetylene blowpipe.

No demurrage charges for the use of cylinders are made on hired cylinders returned within thirty days of despatch, so that it is not necessary to purchase cylinders, although these can be supplied.

The amount of acetylene in a cylinder cannot be determined, as in the case of oxygen, by the pressure gauge. The only accurate method of calculating the gas used from, or left in, a cylinder is by weighing before and after use. For calculating the volume of acetylene used the following are the equivalents:

1·1 ozs. of acetylene = 1 cub. ft. (approx.)
1 lb. „ „ = 14·5 „ „

The design and layout of a generating plant must be such that the acetylene reaches the blowpipe in a good condition, in sufficient quantity and at sufficient pressure, otherwise the welds will be porous, brittle, and burnt. The acetylene generator should be of good and solid construction, and the gasholder capable of storing all gas generated under working conditions or after stoppage of work. There should be no signs of polymerisation of the gas even when working at the maximum delivery. The cross-section of tubes, pipes, and passages through valves should be such that the gas flows normally at the maximum delivery without loss of pressure. The pressure of gas should be as high as possible, and at least equal to 6 ins. of water pressure in the case of small plants and 8 to 10 ins. in larger plants. The pressure should remain practically constant and not vary more than ½ in. water pressure. The charging and cleaning of the plant should not result in any appreciable waste of gas, and without introducing sufficient air to interfere with the working of the blowpipe. The generator should comply with the recommendations of the British Acetylene and Welding Association. The size of carbide suitable for the type of generator should be used. The choice of carbide-to-water, water-to-carbide, etc., generating plants depends on several factors, such as location, class of work, etc.

The Carbic system of generation is based upon the use of a carbic cake, which consists of specially prepared and treated carbide compressed into cylindrical cakes. It is claimed that the process renders every particle of carbide impervious to moisture, so that generation can only take place while water is in actual contact with the cake. Freedom from danger in handling, and from after-generation, convenience in handling, elimination of waste and purity of gas are factors which have led to the success of this system.

Overloading of the plant is a common cause of defective welds. In carbide-to-water generators an allowance of not more than one cubic foot of acetylene per hour for each pound of carbide in the rated charge is recommended. In the case of water-to-carbide generators the maximum rate of gas consumption should be half this value. In well-designed generators the yield of acetylene gas from the generator will be 85 to 90 per cent. of the carbide yield. Practically, for every 10 lbs. of carbide used in the generator a yield of 40 cub. ft. of gas at the blowpipe can be assumed. The proper care, cleaning, charging, and maintenance of generators is of first importance if reliable welds are required. Leakages of acetylene should be traced by means of soap-suds and never with naked lights.

The acetylene generating plant should be installed in a well-ventilated shed or building, or in a lean-to having no direct communication with a workshop or adjacent building, and no unauthorised person should be allowed to enter the building. Where artificial light is required in a generator house or near a generator, electric incandescent bulbs, encased in outer gas-tight globes, should be used. A conspicuous notice prohibiting lights or smoking should be exhibited on the outside of the generator house. Generators should be cleaned and charged in daylight. Electric switches, fuses, etc., should be placed outside a generator house, or they should be so

constructed that risks due to sparking or fusing are avoided. To comply with existing regulations, a licence under the Petroleum Acts (fee 5*s.* per annum) must be obtained from the local authority for the storage of carbide, where a stock of more than 28 lbs. is kept. A raised platform in the generator house should be provided for the storage of carbide. Drums containing carbide should not be placed in the welding shop or near a flame. Care must be exercised in opening drums to avoid striking sparks; a proper drum opener should be provided for this purpose.

Purification of the gas must be efficient, and the care and maintenance of the purifying chamber is very important. The cross-sectional area of the purifier should be ample, and the depth of purifying material should not exceed that specified by the makers, otherwise loss of pressure and overheating of the gas will take place. The quality of the gas can be simply and quickly tested by the use of a white absorbent paper, saturated with a 10 per cent. solution of silver nitrate and exposed to the gas. Should the paper turn black after a few seconds' exposure, the gas is unsuitable for welding purposes.

The chief impurities found in acetylene gas are (*a*) those which affect the quality of the weld, such as sulphur, phosphorus, silicon, finely subdivided lime; and (*b*) those which affect the cost of the weld, such as hydrogen and hydrogen compounds, nitrogen and nitrogen compounds, and water vapour. An efficient chemical purifier must be provided capable of removing sulphur and phosphorus compounds, the acetylene must pass through an efficient water-scrubber to remove or partially remove the impurities soluble in water and, finally, the gas should be filtered to remove solid impurities not eliminated by washing or chemical purification. A first-class purifying material will generally remove chemical impurities, moisture, and lime dust which are a common cause of defective welds.

Oxygen and Acetylene Regulators.

Regulators in common use to reduce the pressure of gases are of the diaphragm type, and may be roughly divided into two classes—first, where the pressure of the gas closes the inlet, and, second, where the inlet is closed by a spring. They are designed to automatically deliver gas to the blowpipe at any uniform pressure to which the regulator is set. Oxygen regulators are usually equpiped with two gauges, a high-pressure gauge, which shows the pressure of gas in the cylinder, and a low-pressure gauge. For successful welding the regulator should be provided with a low-pressure gauge, giving the pressure at which the gas is delivered to the blowpipe. Regulators must be kept in good order, otherwise defective welds are inevitable. Regulators intended for use when welding should not be used when cutting unless the work is within the range of the regulator. It is dangerous to use oil, grease, or any organic material for lubrication. If it becomes necessary to lubricate the pressure-regulating screw, or to repack a needle valve, make use of a little glycerine. The pressure-adjusting screw should always be released after ceasing work and before changing from one cylinder to another.

Acetylene regulators are painted red and have a left-hand screw thread corresponding to that on the standard valves of acetylene cylinders. Regulators for oxygen are painted black and have a right-hand screw thread. Any possible confusion is obviated by this distinction.

Cylinder valves should be opened very slowly so that pressure does not come on to the gauges or diaphragm suddenly. The proper working of regulators largely depends upon the care given them. They should not be left in places where dirt or dust may get into the interior, and be deposited on the seat or inlet nozzle, and they should never be repaired by inexperienced workmen.

Hydraulic Safety Valves.

These are indispensable in low-pressure installations, i.e. where the acetylene is generated on the premises. Their function is to provide a water-seal and, more important, to prevent explosive mixtures entering the acetylene piping or generating plant. The valve should be chosen so that the maximum supply of gas is obtained without burning the metal. Safety devices based on mechanical principles, such as valves, etc., may more or less prevent the return of the flame, but are not infallible in preventing the formation of explosive mixtures.

Hydraulic safety valves should be charged and examined daily, and should be installed so as to facilitate filling to the proper level. In general, the valve should be charged with water whilst the acetylene tap admitting gas to the valve is open. No safety valve should have more than one outlet to which a blowpipe can be connected.

Piping and Flexible Tubes.

The piping should be large enough to avoid loss of pressure. The size of piping should be dependent upon its length and the maximum supply of gas required. Piping and connections should be installed by workmen experienced in the installation of acetylene apparatus. All cocks, valves, unions, and joints should be full bore, and the installation should be thoroughly tested when the system is completed. It should not show a loss of pressure exceeding two inches of mercury within twelve hours when subjected to a pressure equal to a column of fifteen inches of mercury. Acetylene piping should be painted a distinctive colour.

The flexible tubes conveying the gases to the blowpipe should not be too long, too flexible, or too rigid. Armoured hose is not necessary or recommended for ordinary welding and cutting

EVERYTHING *for* OXY-ACETYLENE WELDING and CUTTING

DISSOLVED ACETYLENE
In Cold-Drawn Seamless Cylinders
for High-Pressure Welding and Cutting

ACETYLENE GENERATING PLANTS
For Low-Pressure Welding and Cutting

OXY-ACETYLENE EQUIPMENTS.
Blowpipes, Fluxes, Welding Wires, Trolleys, etc.

WELDING ACCESSORIES & SUNDRIES.
A-L Sundries cover every requirement
from Gloves and Goggles to Rubber
:: Tubing and Pipe Clips ::

A-L DISSOLVED ACETYLENE IS DRY and of the HIGHEST PURITY

Allen-Liversidge Ltd.

106 VICTORIA STREET, LONDON, S.W.1

Factories.

LONDON (5 factories), BELFAST, GLASGOW, HULL,
CARDIFF, LIVERPOOL, NEWCASTLE,
MELBOURNE and SYDNEY (N.S.W.)

F. 2292

OXY-ACETYLENE WELDING



and

CUTTING OUTFITS

Acetylene Lighting Installations.

—

Acetylene Flare Lights and Portable Lamps for industrial use.

—

ACETYLENE GENERATORS for all purposes.

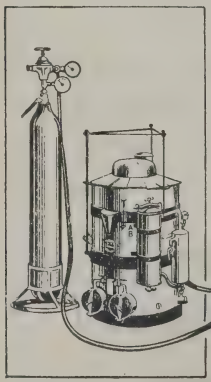
—

BLOWPIPES for Welding or Cutting.

PRESSURE REGULATORS for Oxygen or Acetylene.

WELDING RODS & FLUXES for all metals.

And Accessories of every description.



IMPORTERS OF CALCIUM CARBIDE.

THORN & HODDLE ACETYLENE CO. LTD.

151 VICTORIA STREET, WESTMINSTER, S.W.1

Telegrams: 'Incanto, Sowest.' Telephone: Victoria 6666.

F. 2293

operations. Avoid greasing the ends of the tube to facilitate fixing to the blowpipe or other connectors; use water. Tube clips for securing the tube firmly to the connectors should be used in preference to wire, etc.

Flexible tubing should be examined regularly, and defective tubing should never be used. Special care should be taken to avoid the interchange of the oxygen and acetylene tubes when connecting up to the blowpipe. Both acetylene and oxygen tubing should be blown through occasionally, so that dirt and dust will not be carried into the blowpipe.

Welding Blowpipes.

Welding blowpipes are classified in relation to the pressure of the acetylene. Low-pressure blowpipes are those fitted with an injector to aspirate the acetylene, which is supplied from a generator under a pressure of 6 to 12 inches of water. Medium-pressure blowpipes, sometimes called positive pressure, use acetylene generated in a pressure generator at a pressure up to 15 lbs. per sq. in. An injector or partial injector forms part of the blowpipe. High-pressure blowpipes use the acetylene supplied from acetylene cylinders, and are designed to mix acetylene and oxygen in equal volumes. No injector is required, and a change of nozzle with a corresponding adjustment of pressures is all that is required when changing over from welding one section to another.

In the low-pressure system efficient mixing of the gases in the blowpipe is very necessary. The oxygen and acetylene should mix in approximately equal proportions. Oxygen and acetylene should not pass through the flame in a free state, otherwise oxidising or carbonising flames, both injurious to the metal, may be obtained. A proper mixture produces a correct or so-called 'neutral' or 'normal' flame. To obtain this, well-designed blowpipes carefully adjusted to the oxygen pressure recommended by the maker are essential. A typical low-pressure blowpipe

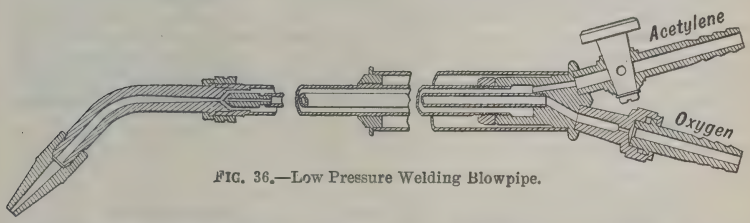


Fig. 36.—Low Pressure Welding Blowpipe.

working on the injector principle is shown in fig. 36, and the character of the flames produced under different conditions of mixing are shown in figs. 37, 38, and 39.

The size or power of blowpipe which should be used depends upon the thickness to be welded. Too small a power produces the defects of adhesion, inclusion of oxide, overheating, and burning of the welds. Too large a power produces a molten bath which is much too large, holes, and adhesion in the lower part of the weld.

A good practical rule in welding steel is that the hourly consumption of acetylene should be 4½ to 5½ cub. ft. (120 to 160 litres) for every $\frac{1}{16}$ in. in thickness.



Fig. 37.




Fig. 38.



Fig. 39.

A very useful table can be made up from these figures, in which the approximate bore of the nozzle orifice is included.

POWER OF BLOWPIPE FOR IRON AND STEEL.

Thickness of Material in inches.	Consumption of Acetylene per Hour.		Bore of Nozzle in $\frac{1}{64}$ inch.
	In Litres.	In Cub. Feet.	
22 gauge	60–80	2¼–2¾	2
$\frac{1}{16}$	120–160	4¼–5⅔	3
$\frac{1}{8}$	240–320	8½–11	3 full
$\frac{3}{16}$	360–480	12¾–16½	4
$\frac{1}{4}$	480–640	17–22	5
$\frac{3}{8}$	720–960	25½–33	6
$\frac{1}{2}$	960–1280	34–44	7
$\frac{5}{8}$	1200–1600	42½–55	8

The figure denoting the power of blowpipe is usually supplied by the maker, and is sometimes marked on the blowpipe. In welding materials other than wrought iron and steel the power of blowpipe to be used is dependent upon the material, its dimensions, and whether preheating has been adopted. As a general rule the power of blowpipe is greater for other metals, as in melting, for example, cast iron, copper, or aluminium, more heat is required to melt a given weight of the metal and, in addition, the high temperature part of the flame is held further from the molten metal.

It is necessary to emphasise that the white cone of the flame should never be brought into contact with the molten metal, and that its distance from the molten metal depends upon the kind of metal and its thickness.

All blowpipes should be carefully handled and treated as precision tools. Carefully avoid the use of grease or oil, and never dismantle a blowpipe with a view to overhauling, as this may lead to irregular working after assembling. In the event of obstruction of the nozzle a soft brass wire should be used for cleaning. Dust in the interior of the blowpipe can be removed by blowing oxygen through from the nozzle end. In the case of back-firing due to overheating the tip should be cooled in water, taking care to close the acetylene valve and to leave the oxygen valve slightly open.

Back-firing, which is a common cause of defective and expensive welds, may be due to one of the following causes :—

(*a*) Faulty design and manipulation of the blowpipe.
(*b*) Enlarging the nozzle orifice when removing obstructions.
(*c*) Working in confined spaces or with an accumulation of slag on the nozzle.
(*d*) Necessity for overhauling and internal cleaning.
(*e*) Restricted and fluctuation in the acetylene supply due to bad lay-out, exhausted purifier, etc.
(*f*) Defective hydraulic safety valves leading to air and moisture being carried with the gas.
(*g*) Defective oxygen regulators.
(*h*) Presence of solid matter in the gas either from the acetylene generator or inferior flexible tubing.

GOGGLES.

For welding with acetylene it is necessary to protect the eyes with goggles fitted with suitable coloured glasses. There are a great many different kinds of special safety glasses on the market and many combinations of ordinary coloured glass are in common use. The eyes must be protected from injurious rays, the heat and glare from the work and from particles of hot metal that fly up from the weld. To obtain the clearest definition or visibility with the least amount of glare, the selection of the colour tint in safety glasses should properly be decided by an expert; the depth of the tint may be determined best by the operator himself, owing to the individual difference which will permit one man to see clearly through a glass that would be too dark for another man. Amber, dark-amber, or dark-amber-green glasses are the most efficient protection. Glasses showing blue or violet tints should be avoided, except in certain combinations where they are used to obscure other colours.

Filling Materials.

The necessity for employing the best materials for every welding operation cannot be too strongly emphasised. It is only by using the most suitable filling-in wires, rods, and fluxes, specially manufactured and controlled for each particular metal or alloy, that the most satisfactory work can be done.

Thin material may frequently be welded by bringing the edges into contact and melting them together, but generally a filling material or 'welding rod' is melted into the groove or crack.

ACETYLENE EQUIPMENT

OF ALL KINDS

Manufactured and Supplied by

Allen-Liversidge Ltd.

with which are amalgamated

Imperial Light Ltd. and Dissolved Acetylene Co. Ltd.

Dissolved Acetylene Cylinders and Gas

for

Welding and Metal Cutting
Lighting of Automobiles,
Commercial Vehicles,
Harbour and Coast Lights.

Portable Lamps, Hand Lamps, Miners' and Contractors' Lamps, 'Imperial' Flarelights, Searchlights, Carbide, etc., etc.

Address:

106 VICTORIA STREET, LONDON, S.W. 1.

Branches and Agencies throughout the World.

Telegrams: 'Aceterator, Sowest, London.' Telephone: Victoria 4155.

F. 2294



BRAND

FLUXES

For Oxy-Acetylene Welding

Manufactured from reliable formulæ and under control of a recognised Oxy-Acetylene Welding Expert.

Fluxes *for* Cast Iron, Medium and Hard Steels, Copper, Brasses, Bronzes, Steel Castings, Nickel Steel, Ferro-Nickel and Aluminium and its Alloys, &c. Silicated Cast Iron Rods 'made to specification,' Welding Wires and Accessories.

CORRECT NON-FERROUS WIRES.
Stocks held.

'SUDER' BRONZE for Brazing Malleable Iron.
'SUDER' BRAND CASE-HARDENING COMPOUND, for the Box Process.
THE IMPROVED 'CASE MAKER.'

Price List and information on any class of Welding on application to:—

THE DISTRICT CHEMICAL CO., LTD.
1 FENCHURCH AVENUE, LONDON, E.C. 3.

Filling materials must not only be of the correct chemical requirements so as to replace loss in the molten zone, to counteract the tendency of the metal to oxidise, to assist in making the molten metal flow readily, or to break down oxides when formed, but they should also act satisfactorily under the blowpipe.

The choice of the right size of welding rod is important, and melting of the rod should take place in the molten bath and not in the flame. The following table gives the sizes of wire for 'forward' welding iron and steel. In the case of other metals the figures hold good, except for very thin material, when a size of not less than $\frac{1}{16}$ in. should be used.

SIZES OF WIRE FOR WELDING IRON AND STEEL ('FORWARD' WELDING).

Thickness of Material.	Size of Welding Rod.		
	S.W.G.	Decimal equivalent.	Nearest $\frac{1}{64}$.
Gauge 20			
,, 19	16	0·064	4
,, 18			
$\frac{1}{16}$ inch	15	0·072	5
$\frac{1}{8}$,,	12	0·104	7
$\frac{3}{16}$,,	9	0·144	9
$\frac{1}{4}$,,	6	0·192	12
$\frac{5}{16}$,,	5	0·212	14
$\frac{3}{8}$,,	3	0·252	16
$\frac{7}{16}$,,			
$\frac{1}{2}$,,	2	0·276	18
$\frac{9}{16}$,,			
$\frac{5}{8}$,,			
$\frac{3}{4}$,,	0	0·324	21

The following table also gives the sizes of wire for 'backward' welding; it should be pointed out that this method of welding is more reliable and economical than 'forward' welding, and is rapidly displacing the latter for the welding of iron and steel.

Thickness of Material.	Size of Welding Wire.		
	S.W.G.	Decimal Equivalent.	Nearest $\frac{1}{64}$.
$\frac{1}{8}$ in.	14	0·081	5
$\frac{5}{32}$ to $\frac{3}{16}$,,	11	0·116	8
$\frac{1}{4}$ to $\frac{9}{32}$,,	8	0·160	10
$\frac{11}{32}$ to $\frac{13}{32}$,,	6	0·192	12
above $\frac{13}{32}$,,	4	0·232	15

Fluxes.

It is not always possible to include deoxidisers and special elements in the welding rod itself. By using a combination of chemicals in the form of a powder, liquid, or paste, known as a flux, the difficulties of producing sound and reliable welds is overcome. A flux is used for the purpose of cleaning the parts to be welded, for eliminating and preventing the formation of oxide, for replacing elements burnt out by the flame, and, when melted, protecting the surface of the molten metal from the action of the flame and the formation of blowholes. A flux is necessary in welding steel, cast iron, copper, aluminium, etc.; for successful welding the proper flux should be used, and as the welding rod and flux are important factors in welding they should only be obtained from reliable manufacturers.

Preparation of the Work.

One of the first principles of sound welding is securing complete fusion and perfect union of the filling material and the edges of the parts to be welded. To ensure this, good preparation is necessary, which includes, as a rule, the cleaning of the edges and the welding wire, the bevelling or chamfering of the edges, the adjustment and maintenance of the parts in position, and allowance for expansion and contraction effects. In general, the preparation of the parts varies according to the thickness and nature of the metal and upon the organisation and equipment of the workshop.

Cleaning the parts to be welded and the welding rod is essential. Bevelling is necessary for materials $\frac{1}{4}$ in. and above in thickness. Bevelling ensures good penetration, increase in ductility and strength, economy, and reduces the overheating effects. The angle of the bevel depends upon the thickness of material and whether 'forward' or 'backward' welding is practised. All metals from $\frac{1}{4}$ inch up to $\frac{3}{8}$ inch, and in some cases $\frac{1}{2}$ inch, should be bevelled from one side only. Where possible, pieces exceeding $\frac{1}{2}$ inch should be bevelled from both sides. In forward welding the V formed by the two bevelled plates should be about 90°. In backward welding for material up to $\frac{1}{2}$ inch an angle of about 45°, and above $\frac{1}{2}$ inch an angle of 60° can be used. The bevel should extend to the bottom of the plate, and thorough penetration and complete fusion should be obtained. In repair work preparation of the work is a very important feature and will save considerable time and keep the cost of welding low. In the case of aluminium repairs, for example, good judgment means success, and bad judgment a ruined casting.

Expansion and Contraction.

It is impossible to produce satisfactory work unless expansion and contraction effects are properly allowed for. Warpage and internal strains, followed by failure, are the common result of welders failing to master this subject. The methods commonly employed are, in the case of thin sheets, tacking; in the case of heavier material and castings, setting the plates so as to form an angle, heating the entire work, partial heating, heating restraining members, breaking a member so that expansion and contraction can take place freely, bending or springing the material, etc.

If the expansion can take place in all directions, it will give the welder no trouble. If, however, the welding takes place at a point that is confined by various parts or by the particular construction of a piece, it is then necessary to give it due consideration.

The resultant effect of contraction must be considered equally with that of expansion, as failures, cracks, etc., can often be traced to neglect to allow for this property.

Preheating.

This may be partial or total, depending upon the work in hand, and is mainly employed with a view to (*a*) allowing for expansion and contraction, (*b*) decreasing the cost of welding, and (*c*) producing a more homogeneous joint. Preheating is usually carried out with the welding blowpipe, oil or gas burners, charcoal, or other suitable fuel. The method used should be governed by the particular work in hand.

No general rules can be given for preheating temperatures, as the degree of heat necessary will, of course, depend upon the size and shape of the object to be welded. As a general rule, however, cast iron should be preheated to a dull red heat for small and simple castings, and to a blood-red heat for large or complex castings; aluminium and its alloys should be preheated very carefully, as too high a temperature will lead to the collapse of the article being welded.

Preheating machines burning paraffin and giving a flame of high calorific value, smokeless and transparent, have been introduced and give satisfactory results where portability and a powerful flame are required.

After Treatment of Welds.

Improvement in the structure of welds with a consequent increase in strength and ductility are the result of proper after treatment of welds. Thermal or mechanical treatment, or both, carried out in a correct manner is always beneficial, except in the case of defective welds.

Strength of Welds.

With proper equipment and suitable filling materials, the strength of the weld will depend mainly upon the care and skill of the operator. A good operator should be able to obtain welds 95 per cent. the strength of the original material; for the average welder 85 per cent. should be taken as the lower limit of strength.

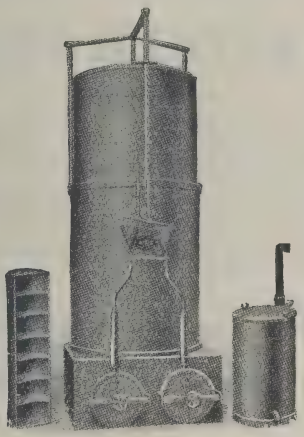
Steel Welding.

The welding of wrought iron and mild steel is apparently simple; in reality it is somewhat difficult to produce strong and reliable welds. Oxidation is the most serious defect, and this must be reduced to a minimum, in view of the fact that up to the present no reliable flux has been discovered. Welding wires containing a small percentage of vanadium have recently been introduced, with highly satisfactory results. To produce the minimum of oxidation the blowpipe must be well designed and handled efficiently, and the parts to be welded must be thoroughly cleaned. Expansion and contraction must receive proper consideration. The welding rod should be a material low in phosphorus and sulphur, and free from oxide. The use of ordinary iron or mild steel wire is unsatisfactory, and welding wire, such as 'Suder' or 'Ferrox,' made specially for the oxy-acetylene process, should be insisted upon. It will be found that economy is on the side of the scientific but more costly product.

COMPLETE OUTFITS FOR

OXY-ACETYLENE WELDING & CUTTING

Acetylene Generating Plant,
Atoz Flares & Portable Lamps.



ATOZ BLOWPIPES; ATOZ Hydraulic Back Pressure Valves; Oxygen & Acetylene Pressure Regulators; Welding Wire; Silicated Cast Iron Rods; ATOZ FLUXES.

'Klenzol' Purifying Material insures Pure Gas.

ACETYLENE CORPORATION LTD.,

49 VICTORIA STREET, LONDON, S.W. 1, ENGLAND

WRITE FOR CATALOGUES

FERROX COMPANY LIMITED

FERROX

Manufacturers of Welding
Wire, Rods and Fluxes for

OXY-ACETYLENE WELDING

□ □ □

FERROX for Iron, Steel, Wrought Iron and Malleable Cast Iron—requires no flux.

FERROX is the finest and most scientifically prepared Welding Wire produced and is used all over the World.

FERROX is particularly suitable for Building up operations by the Bare Wire Arc Process.

FROXITE A special composite rod for Hard Welds—particularly suitable for Railway and Tramway repairs.

SIFROX A Cast Iron Rod with high Silicon content—giving a weld which is easily machined.

SIFLUX Specially prepared Flux for use with SIFROX.

Aluminium, Brass, Copper, Phosphor-Bronze Rods and Rods for Nickel Steel, Chrome Steel and Manganese Steel Welding.
Fluxes for use with the same.

Use FERROX materials and you will use THE BEST.

FERROX COMPANY LIMITED
12 Grosvenor Gardens, London, S.W. 1

The following specification data in connection with the welding wire for iron and mild steel are of importance. The surface of the wire is to be smooth, of uniform homogeneous structure, free from irregularities in surface hardness, segregation, oxides, pipe, seams, etc. Diameter shall not vary more than ± 3 per cent. of the diameter specified. The chemical composition to be within the following limits :—

Carbon	not more than	0·10 per cent.
Silicon	,,	0·08 ,,
Manganese	,,	0·15 ,,
Sulphur	,,	0·04 ,,
Phosphorus	,,	0·04 ,,

The surface shall be smooth and free from scale, rust, oil, or grease. In the hands of an experienced welder the wire shall demonstrate good weldability, and shall flow smoothly and evenly without any unusual characteristics.

The following table is of use as a guide in ordering welding wire :—

Size, inches	$\frac{1}{16}$	$\frac{3}{32}$	$\frac{1}{8}$	$\frac{6}{32}$	$\frac{3}{16}$	$\frac{1}{4}$	$\frac{5}{16}$	$\frac{3}{8}$
Lbs. per 100 ft. .	1·04	2·3	4·1	6·5	9·3	16·7	26	37·5
Ft. per 100 lbs. .	9,615	4,273	2,403	1,537	1,067	600	383	266

The flame must be carefully regulated and held so that the tip of the white cone is about $\frac{1}{8}$ in. from the surface of the molten metal. The blowpipe must be given a motion which will cause the flame to describe a series of overlapping circles in the case of light and medium sheets, and oscillated in a series of semicircles in the case of heavy sections. A variation of these movements has been introduced which gives more economical and better welds. The welding rod, in this case, follows the flame instead of preceding it, and the flame is directed towards the starting point instead of towards the finishing point. The blowpipe is given a slight gyratory motion, whilst the welding rod is given a more or less elliptical or longitudinal motion. This method of welding is known as ' backward ' welding. Subsequent thermal treatment will improve the structure of steel welds and materially increase the strength and toughness of the weld. Hammering may be resorted to with good effect, provided the hammering is not too vigorous or done at too low a temperature.

The following table gives the speed at which the welding of mild steel plates can be done under average conditions :

Thickness of Plate in Inches.	Speed of Welding.	
	Feet per Hour.	Feet per Hour for Average Day's Work.
$\frac{3}{64}$	30 to 33	23 to 26
$\frac{5}{64}$	20 ,, 21	16 ,, 20
$\frac{1}{8}$	15 ,, 16	13
$\frac{5}{32}$	13 ,, 15	10
$\frac{13}{64}$	10 ,, 12	9
$\frac{1}{4}$	9 ,, 10	$7\frac{1}{2}$
$\frac{9}{32}$	8 ,, 9	$6\frac{1}{2}$
$\frac{21}{64}$	7 ,, $7\frac{1}{2}$	6
$\frac{23}{64}$	$5\frac{1}{2}$,, 6	5
$\frac{13}{32}$	$4\frac{1}{4}$,, $4\frac{1}{2}$	$3\frac{1}{4}$
$\frac{15}{32}$	$3\frac{1}{4}$,, $3\frac{1}{2}$	$2\frac{1}{2}$ to 3
$\frac{1}{2}$	$2\frac{1}{4}$,, $2\frac{1}{2}$	$1\frac{1}{2}$,, 2

Owing to metallurgical changes that take place when melting medium and hard steels with the blowpipe, the welds obtained are invariably unsatisfactory. It is possible to get fair results on medium steels, but a flux, rapid welding, and thermal after treatment, which requires skill to properly carry out, are necessary.

The data at hand shows that for welding medium carbon steel, welding wire having a carbon content ranging from 0·06 to 0·60 per cent. are of no particular value.

For welding high carbon steel and worn surfaces where great resistance to abrasive wear is desired and where machining is not necessary, a welding wire containing 0·60 to 0·75 per cent. of carbon and 0·60 to 0·90 per cent. of manganese is desirable.

For welding mild steel and to produce a weld of greater strength but of lower ductility than that obtained with ordinary welding wire, the wire should contain 0·15 to 0·25 per cent. of carbon, 3·25 to 3·75 per cent. of nickel and 0·5 to 0·8 per cent. of manganese.

Alloy steels, such as chrome and manganese steel, are weldable, provided the percentage of carbon does not bring them into the range of medium and hard steels, which is frequently the case. The welding wire should be of the same character as the steel, and a flux must be used. In the case of nickel steel it is necessary to use a flux which will form a varnish over the molten metal and prevent the absorption of the gases from the flame of the blowpipe.

Cast-Iron Welding.

The two principal defects in cast-iron welding are the production of hard spots and blowholes in the weld and subsequent cracks or fractures in the weld or adjacent metal. The oxide formed must be removed or destroyed by the use of a flux. Expansion and contraction should be considered as of great importance. Preheating should be used to some extent in all cast-ironwelding. The welding rod must be of good material and specially made for this purpose. One great trouble with cast-iron rods in general is that the quality is by no means uniform. This is especially true with the cheaper and uncontrolled products. Rods made from ordinary cast iron produce blowholes and hard spots. The parts must be thoroughly cleaned, and in the case of cracks their extension must be prevented by drilling holes a short distance from the ends in the direction the crack would follow. The weld should be arranged horizontally, and where this cannot be arranged carbon blocks should be used to prevent the metal flowing away. To protect machined surfaces during preheating operations they should be coated with flaked graphite and oil. This can be made into a paste and painted on, or the surfaces can be oiled and the graphite dusted on. The graphite must be coarse, as fine flake is not satisfactory. The flame must be held so that the tip of the white cone is between $\frac{1}{4}$ and $\frac{3}{4}$ in. from the molten metal, the distance depending on the thickness of the metal. The after treatment consists in annealing and allowing the metal to cool very slowly.

Certain cast irons of great strength and in which the carbon is in the combined state are practically unweldable. Cast iron which has been submitted to the heat of a fire for a considerable time is frequently unweldable. The metal in both cases melts under the blowpipe in a distinctly different manner from ordinary cast iron, and the welder should have no difficulty in recognising that the blowpipe should not be applied to make a joint.

Malleable Cast Iron.

It is difficult to produce satisfactory joints on malleable cast iron by welding. The welds are hard, brittle, and porous. The best results are obtained by brazing with the oxy-acetylene blowpipe, using the same methods of preparation as for cast iron, and using tobin or manganese bronze as a filling material.

The introduction of acetylene for brazing purposes provides a fuel which has the highest known flame temperature and high calorific value. By using dissolved acetylene with a special brazing blowpipe no air-bellows or oxygen is necessary, as the blowpipe is atmospheric and a clean and relatively small flame is obtained.

Aluminium Welding.

Sheet aluminium welding can be handled in very much the same way as steel as regards preparation and allowance for expansion and contraction. The principal difficulty lies in the formation of the oxide, which must be dealt with by an energetic and reliable flux. The filling material is pure aluminium wire; before starting to weld, the wire and parts to be welded must be thoroughly cleaned by scraping. A delicate hand and considerable practice is necessary, especially on thin material. The flame must be carefully regulated and the tip of the white cone should be from $\frac{1}{4}$ to $\frac{3}{4}$ in. from the molten metal. After welding, the welds should be thoroughly washed with warm water and, where possible, internal strains should be removed by annealing. The structure and strength of the metal in the welded zone are improved by hammering when cold.

Aluminium castings are generally alloys of copper, zinc, and aluminium. The material expands greatly and is very weak at high temperatures, consequently contraction strains are likely to produce cracks and distortion unless the work is properly handled. In welding castings—crank cases, for example—it is often necessary to preheat them either completely or partially. The preheating must be done carefully, otherwise the casting may collapse. For supporting the casting evenly and lining up, carbon putty is useful. For missing parts, and where the welder is not well skilled in this class of work, it is advisable to back up with sheet copper or galvanised iron. In rigging up jobs for repairs, care must be taken that expansion and contraction effects are not interfered with. The parts should be carefully cleaned and free from oil and grease. A good grade of filling material of average composition is necessary; pure aluminium wire should not be used. The acetylene should be pure and the blowpipe should give a soft, non-oxidising flame. The casting should be reheated slightly to remove any local strains and then allowed to cool very slowly.

Each "No. 20" Carbic Cake produces 10 cu. ft. of pure acetylene



THE success of the CARBIC CUTTING and WELDING SYSTEM is due to Carbic Cake—specially prepared carbide compressed into cakes—each of which is *guaranteed* to produce a definite quantity of gas. Generation can *only* take place when Carbic Cake is in direct contact with water. There is no waste whatever as each cake produces 'full pressure' gas until completely used up.

The Carbic Cutting and Welding Generator is the most portable and simple in action. A few hours acquaintance enables any unskilled workman to completely master its principles.

THE CARBIC CUTTING and WELDING SYSTEM

is indispensable in Railway and Engineering Works, Shipyards, and Repair Depots of every description.

¶ *Send for the Carbic Book. A Postcard brings it free.*

Carbic SYSTEM

CARBIC Limited, *Specialists in Acetylene*
51 HOLBORN VIADUCT, LONDON, E.C.1

Branches: Liverpool, Newcastle-on-Tyne, Glasgow, Leeds, Cardiff and Southampton.

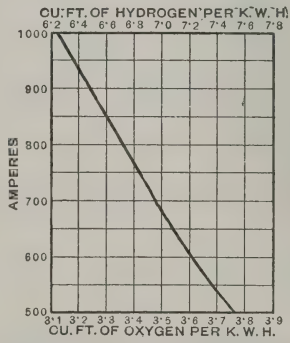
F. 2298

OXYGEN IOC SYSTEM HYDROGEN


GENERATORS

Produce OXYGEN 99%, HYDROGEN 99·5%
Guaranteed Purity direct from the Cells.

Plants in actual operation show average results :
Oxygen 99·6%, Hydrogen 99·8% Purity.



K.W.H. Production at various currents.

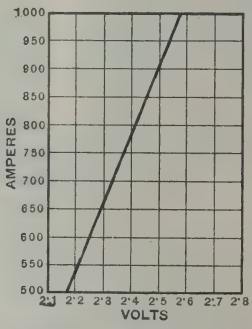

Relation between voltage and current per cell.

The Plant occupies little space, requires the minimum of attention, and upkeep charges are almost negligible. Big economies are being effected by using high purity Oxy-hydrogen for cutting by numbers of firms that have ——————installed our plants.——————

DEMONSTRATIONS WILLINGLY GIVEN FREE.
:: *Send for Full Particulars and List of Users.* ::

THE INTEGRAL OXYGEN CO. LTD.

Operating Patents of INTERNATIONAL OXYGEN CO., NEW YORK
(Plants for producing 10 to 500 cubic feet of Oxygen per hour).

THE INTERNATIONAL ELECTROLYTIC PLANT Co. Ltd.

Operating A. EDGAR KNOWLES' Patents (Plants for producing 500 cubic feet of Oxygen per hour and upwards),

City Electricity Works, NEW CRANE STREET, CHESTER

Copper Welding.

Copper may be welded, but only with difficulty. It oxidises very readily and the oxide dissolves in the copper. The flame must be carefully regulated. Without a correct welding rod, which contains a small quantity of phosphorus, it is impossible to satisfactorily weld copper. A flux is useful. Preheating to avoid adhesion is necessary. The tip of the white cone should be about $\frac{1}{8}$ in. from the surface of the molten metal. The welds should be hammered at a dull-red heat to improve their ductility and strength, and afterwards annealed.

Brass and Bronze Welding.

These are only welded indifferently without the correct welding rods. The filling material for brasses and bronzes should be almost of the same composition, and in the case of brass should contain a little aluminium, and in the case of bronze a little phosphorus and traces of aluminium. Bronze filling materials are cast. Fluxes should be used in both cases, and the power of the flame should be the same or slightly higher than that for copper, that is, distinctly higher than for steel plates of the same thickness. The position of the flame is the same as for copper. The after treatment of the welds consists in annealing at definite temperatures.

Lead Welding.

The oxy-acetylene blowpipe is rapidly supplanting the older methods of welding lead, or lead burning as it is generally called. It has proved superior in convenience, quality of joints, and economy. A small type of blowpipe is required, consuming from $\frac{1}{2}$ to 6 cub. ft. per hour. When it is necessary to fill up a hole or to build up any part of a lead object, the work is facilitated by using a mould or a backing of steel plate.

Nickel Welding.

Nickel when melted has the property of readily absorbing gases, especially oxygen. The welds obtained are very porous, and it is extremely difficult to obtain satisfactory welds. A method which has given fair results consists in placing the two parts to be welded on a heated anvil and then heating the parts to a white heat with the blowpipe, afterwards carefully hammering the parts together.

Machines for Welding.

Acetylene welding machines for the manufacture of tubes have been in use for many years. The development of automatic welding machines for the manufacture of tanks, etc., is more recent. For repetition work machines have been designed which accomplish the work in less time with comparatively unskilled men. The machines consist of two parts, (*a*) holding devices for the work, and (*b*) apparatus for carrying the blowpipes, with or without motion, over the seam.

Recent developments in welding machines have been mainly in the direction of the use of multi-jet blowpipes. In order to obtain speed it was recognised that more than a single jet of flame should be employed, and from two jets in tandem it has become customary to employ a large number of jets extending for a considerable distance along the line of the weld. The defects of this method have been overcome by distributing the heating at opposite sides of the centre line of the seam. The welded section produced in this way is wider, stronger, and more certain to penetrate than is the case with the narrow weld made by a central line of flame.

Training Welders.

An oxy-acetylene welder has been defined as a person who has the requisite manipulative skill and technical knowledge to successfully operate welding and cutting apparatus, and, at the same time, has skill in the operation of hand tools used in the preparation and finishing of the work in connection with welding, and also has a reasonable amount of ingenuity. He must also have a knowledge of accuracy commensurate with the type of work to be welded. Naturally, a trade in which so much depends on the personal equation has drawn attention to the need of training men to produce sound work. No doubt the best method is that which expounds principles followed by practice under expert supervision. Welding skill grows rapidly under a well-worked-out system of exercises which aim at developing skill in making typical welds on various metals. Testing the welds is also an important requisite of a training course. Classes for training welders are held in the principal centres, and manufacturing concerns who train their workmen must follow methods depending upon the size of shop and class of work.

A common error is to attempt work, especially repair work, in a shop where the tools and apparatus for successful all-round welding are not provided, or to endeavour to repair jobs which are beyond the capacity of the welder. It is much more economic, in such cases, to hand over work of this character to firms specialising in general repairs who have the necessary equipment for carrying out and testing the work, and welders who are not mere blowpipe operators.

Testing Welds.

The importance of testing welds has, in recent years, become very great. It is well known that the quality of a weld cannot be assumed from the general appearance, finish, etc. At the present time the usual methods of testing include tensile and impact tests on specimens welded under identical conditions as the work, microscopic examination of specimens, bending and hammering tests, and X-ray examination. In the latter the actual welds can be examined, and flaws, blowholes, and other defects discovered.

During the past year the American Bureau of Welding have drawn up Standards for Testing Welds which are intended primarily to serve as a standard uniform basis for testing and comparing sample welds as distinguished from welds on structures. The testing of the latter must necessarily be by non-destructive methods which would therefore be, in general, quite different from those employed in examining sample welds made for the purpose of testing a welder's proficiency, comparing welding wires, or comparing welding methods. For the shop standard a bending test is recommended; for the commercial standard, a bending and tensile test.

CUTTING.

Wrought iron, steel, and steel castings can be cut with the ordinary cutting blowpipe, and with a special cutting blowpipe, or the ordinary cutting blowpipe operated in a special manner, cast iron can be cut.


The cutting blowpipe usually consists of a compound jet made up of one or more heating flames with a pure oxygen jet in the centre. A spot of the metal is first heated to a bright red heat with the heating flame, and then the oxygen jet is turned on. It has been proved that only partial combustion takes place, the phenomenon of cutting being really a disintegration by the current of gases from the blowpipes. The oxy-hydrogen flame is often used for cutting in place of acetylene. Material up to 36 ins, has been cut. The same acetylene equipment is used for cutting as for welding. For heavy cuts special regulators are used. There are two kinds of cutting blowpipes, known as the 'central' and 'following jet' types. Mechanical contrivances have been devised for special forms and shapes and for heavy cutting. One type of machine, known as the Godfrey Universal, uses as its cutting instrument the oxy-hydrogen or the oxy-acetylene blowpipe. It has the full range of movements found on a machine tool intended for universal use. The degree of accuracy is such that accurate gear teeth can be cut, and 1, 2, or any desired number of thousandths can be left for finishing. Fifteen inches of ½-in. plate can be cut in less than one minute at a cost of less than one penny for oxygen. When it is desired to cut a piece out of the centre of a plate it may be necessary to drill a hole to get a quick start.

The following table is an abstract from the manufacturers' table of cutting data.

TABLE OF APPROXIMATE METAL-CUTTING RESULTS.

Thickness of Plate.	Oxygen pressure at Regulator Outlet.	Consumption of Oxygen per hour.	Foot run of Metal cut per hour.	Oxygen consumed per foot run of cut.
Ins.	Lbs. per sq. in.	Cub. ft.	Ft.	Cub. ft.
¼	24	48	65	·75
½	28	60	60	1
1	32	88	40	2·2
1½	39	105	30	3·5
2	45	125	25	5
3	52	180	20	9
4	58	300	20	15
5	65	420	20	21
6	70	432	18	24
8	80	504	18	28
9	95	510	17	30
11	115	620	13	48
14	125	900	12	75
17	130	1,350	12	112

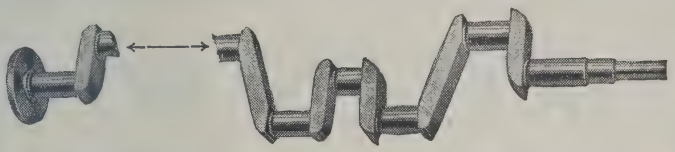Blowpipes have now been placed on the market for cutting steel under water. Under-water cutting is based on the fact that the water must be forced away from the heating flame and cutting jet. With an efficient arrangement an ordinary hand-cutter can be adapted for cutting



Can a Crankshaft be Welded?

Here is the proof from a man who knows.

IS WELDING RELIABLE?

'Q.E.D.,' in 'The Motor' of September 1st, enquires whether a welded crankshaft can be relied upon. The answer is emphatically 'yes,' provided the work is carried out by a specialist who knows his work. I had a crankshaft belonging to one of our cars welded by Barimar over five years ago. The car has since run 20,000 miles, and the repaired shaft is still as good as ever. Most welding firms, judging by their own experience, do not recommend such repairs, but that does not do away with the fact that a welded crankshaft repaired by a specialist, properly equipped with up-to-date tools and machinery, will certainly stand up to its work.

PEUGEOT (ENGLAND) LTD.,
H. DERMIGNY,
Works Manager.

Barimar can say with certainty that a Crankshaft repaired under the Barimar Guarantee is, in most cases, stronger than a new one, delivery is quicker, and it shows a large saving in cost.

The Barimar Metallurgical Process for Repairing Scored Cylinders makes a permanent, 'Money-back' repair in THREE DAYS. AIR-COOLED, WATER-COOLED, STEAM, OIL, any type of cylinders made right. No welding, no regrinding of bores, no new pistons needed. Write for Scored Cylinder Folder 'T.R.'

The Barimar Book. — 'THE WELDING TEST.' Barimar Scientific Welding does things that no other process can do. Write across your letter heading 'Manual T.R.,' attach 6d. in stamps and post to Barimar. Omit stamps if you have a repair to be made now.

How to send Repairs to Barimar. Remove all fittings, attach two adhesive labels bearing your name and address as sender, and consign carriage paid to 'T.R. Dept., Barimar Limited, 10 Poland Street, London, W. 1,' or to the nearest service depot. Post a letter advising despatch and giving full instructions for repair.

Address all Repairs to 'T.R. Dept.'

Telegrams: 'Bariquamar, Reg. London.'

BARIMAR LIMITED

Telephone: Gerrard 8173

The World's Scientific Master Welders

10 POLAND ST., LONDON, W. 1.

HOME SERVICE DEPOTS.

Birmingham: 116-117 Charles Henry St.

Manchester: 65 Brunswick St. Ardwick Green.

Newcastle-on-Tyne: 31 The Close, Quayside.

Leeds: 117 Vicar Lane.

Cardiff: 19 Westbourne Crescent, Canton Bridge.

Glasgow: 134 West George Lane.

Ireland:
185 Great Brunswick Street, Dublin.

Barimar Branch Factories are now in operation throughout the World.

F. 2300

OXYGEN *and* HYDROGEN

IN LARGE OR SMALL QUANTITIES

ALSO

PLANTS FOR PRODUCTION OF

Oxygen and Hydrogen by Electrolysis
Oxygen by Liquefaction of Air
Acetylene for Welding and Cutting
Medically Pure Oxygen from Oxylithe
Oxygen from Oxygenite

COMPLETE INSTALLATIONS FOR

Oxy-Acetylene Welding and Cutting
Cinematograph Projector Lighting

ALL ACCESSORIES SUPPLIED

Blowpipes, Regulators, Flowmeters, Cylinders, Cylinder Valves, Face Masks for Medical Work, Containers, Vaporizers, Controls for Liquid Oxygen

Our Plants Make Your Own Gas Cheaply

Hydrogen, Oxygen & Plant Co. Ltd.

ALBEMARLE MANSIONS 1 ALBEMARLE STREET
PICCADILLY **LONDON**
Phone: Gerrard 986 *Telegrams:* 'Hopcogen, Piccy, London'

F. 2301

under water. In salvage work steel plates have been cut at a depth of 40 ft. Various re-lighting devices for lighting the flame when it becomes extinguished have been successfully introduced.

The cutting blowpipe for cast iron is of the same character as that used for cutting steel, except that an ordinary iron tube fitted with several wires in the interior is used for the cutting operation An ordinary iron tube, of approximately $\frac{5}{16}$ in. internal diameter and an exterior diameter of $\frac{3}{4}$ in., containing three wires of 12 gauge, gives the most regular and satisfactory results for the demolition of castings, etc. The pressure of oxygen varies, according to the thickness to be cut, between 70 and 150 pounds per square inch. The process of cutting cast iron consists of piercing a series of holes along the desired line of cut; the cutting operation is much more rapid than appears at first sight.

TABLE OF CAST IRON CUTTING RESULTS.

Thickness of Cast Iron. In Inches.	Time necessary to perforate. In Seconds.	Diameter of Holes. In Inches.
$\frac{3}{4}$	7	$\frac{3}{4}$ to 1
$1\frac{9}{16}$	10	,,
4	20	,,
8	40	,,
25	120	,,

ELECTRIC WELDING AND CUTTING.

(Contributed by D. Richardson, Wh. Exh., A.M.I.M.E., Capt. R.A.F.)

Electric welding processes can be placed in two distinct groups, one producing heat by the resistance of the metal being welded to the passage of the current, the other using the heat of the electric arc. They are known as Resistance Welding and Arc Welding, respectively. These two main groups have formed the basis for many processes of welding. The differences rest entirely on methods and special applications. The subdivisions are as follows:—

Arc Welding.

(1) Carbon electrode.
(2) Metallic electrode.
  (*a*) Bare electrode.
  (*b*) Covered electrode.
(3) Electro-percussive welding.
(4) Electric blowpipe.

Resistance Welding.

(1) Butt welding.
(2) Spot welding.
(3) Seam or line welding.
(4) Button and disc welding.
(5) Bridge welding.
(6) Multiple electrode welding.
(7) Point or projection welding.

The many systems of welding which have developed from these main groups are generally associated with the inventor's name or company exploiting the process, such as:—

Benardos System.
Slavianoff System.
Kjellberg System.
Zerener System.
Thomson System.
Premier Electric System.
Alloy Welding Processes.
Quasi-Arc Process.
Cyc-arc Process.

ARC WELDING.

The three chief requisites are:—

(1) A suitable form of electrical energy and control.
(2) Electrode material of proper physical, chemical, and electrical characteristics.
(3) A trained and experienced welder.

Carbon Arc Welding.

The characteristic principle of this process, commonly known as the Benardos process, is that an electric arc is held between the metals to be joined, which forms one electrode of the circuit, and a carbon rod or pencil manipulated by the welder which forms the other electrode. By placing the carbon electrode in contact with the metal, thus closing the circuit, and instantly

withdrawing it again, an electric arc is formed between the two electrodes and, owing to the high temperature of the arc the metal is melted. Steel up to $\frac{3}{32}$ is satisfactorily melted together without using a filling material, but for greater thicknesses a 'melt bar' is melted into place by the heat of the arc. Automatic machines for repetition work on thin materials and equipped with carbon electrodes are in use. Experience has shown that the metal to be welded should be the positive electrode, and the carbon the negative electrode. If this order is reversed, a shorter arc is obtained and particles of carbon can enter the molten metal and cause brittleness.

The current used is direct, the voltage being from 60 to 90, and the amperes vary from 250 to 600, depending upon the thickness of the metal.

Where the carbon electrode is used it has been found that the graphite electrode, as distinguished from the hard carbon electrode, yields longer life. Probably the chief field of usefulness for the carbon electrode is for cutting or for rapid repair welding where strength of weld is not as important as the speed of doing the work.

Metallic Arc Welding.

The use of metallic electrodes for arc welding has proved more satisfactory than the use of carbon or graphite electrodes, which necessitate feeding the new metal into the arc by means of a rod or wire. A very wide variety of metal electrodes are used.

Bare Electrode.

The Slavianoff System, using a bare metal electrode, has not been developed in this country to any extent. There is considerable discussion as to the efficiency of bare electrodes, and although it may be possible to successfully weld mild steel with such electrodes, where toughness is desirable or necessary, or for the welding of steel alloys, a special coating will give better and, in many cases, the only successful results. The decision of Lloyd's in approving the use of covered electrodes has not caused the adherents of the bare-metal electrode to abandon their position. The use of copper, nickel, and bronze electrodes for special purposes has been carried out successfully using the electrode bare. The use of manganese steel, containing about 12 per cent. manganese, as an electrode has proved successful either as a bare wire or using one of the several types of coverings.

Covered Electrodes.

The use of covered electrodes aims at improving the metal in the weld and, where necessary, allowing the use of special alloy steels, etc. Covered electrodes may be placed in two general classes, the first class being the electrode which has a heavy covering of scientifically prepared material containing a deoxidizer. The second class of covered electrode is of the type which has a very thin coating on the wire which aims at obtaining the same results as the heavy covered electrodes without the disadvantage of manipulating the heavy coating of slag deposited during the welding operation.

Kjellberg System.

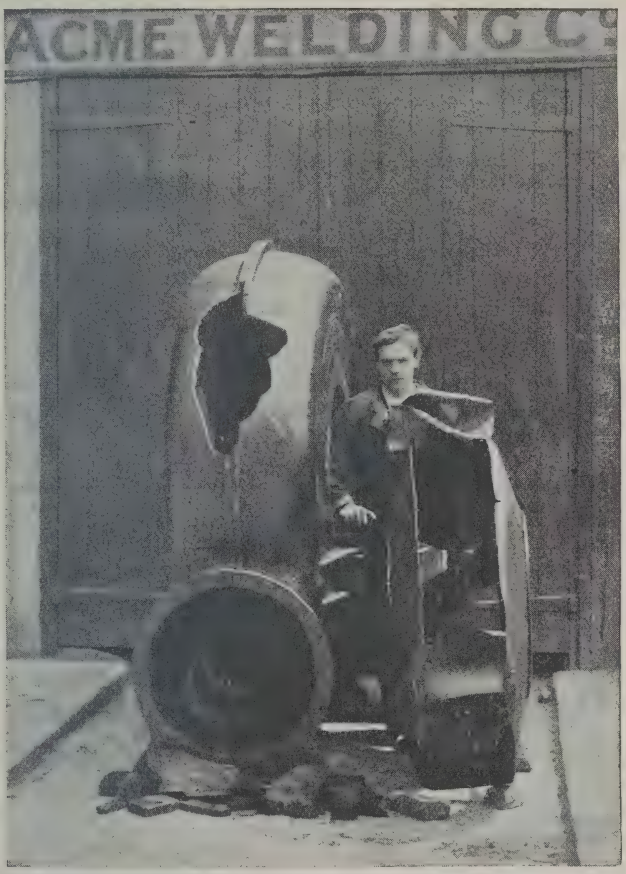
The effect of refractory coverings on the metal electrode was first discovered by Kjellberg. In the Kjellberg process, controlled by the *Anglo-Swedish Electric Welding Co., Ltd.*, the steel rod is covered with a coating or sleeve of normally non-conducting materials, that is to say, conductors of the second class, the function of the cover being, amongst other things, to direct the metal where it is required, to protect the fused metal from oxidation, and to make up the loss in the arc, of certain constituents of the iron or steel forming the object.

In carrying out the process the covered rod is held in a clip or holder connected to a continuous current supply, and forms the positive pole, the object forming the negative, though in some cases the poles are reversed.

The covering is removed from the end of the rod to enable the current to pass and an arc is struck between the rod and the object. As soon as the arc is struck a portion of the metal of the object, having an area approximately equal to the section of the rod, fuses together with metal from the end of the rod, and at the same time the covering, which is of a friable nature, partly fuses and breaks away at the same rate as the metal of the rod is deposited. In this way metal can be gradually deposited on an object until a sufficient quantity has been obtained for the purpose required. From time to time the deposited metal is hammered so as to consolidate it in exactly the same way as a weld made in the fire.

A further advantage of the covering on the rod is that the tensile strength of the weld can be varied within certain limits to suit the purpose required. For example, by this process a tensile strength of from 20 to 35 tons per sq. in. can be obtained. It is possible also to obtain various degrees of hardness merely by altering the composition of the covering.

The use of welding rods covered in accordance with Kjellberg's Patent has rendered it possible to do a large amount of work that could not be successfully undertaken before. As the metal is deposited in small quantities and the heat is localised within a very small area the danger of setting up internal stresses is reduced to a minimum. There is no limit to the size of the work that can be undertaken.



Extensive Repairs to this cast-iron fan-casing were carried out in **48 HOURS** by the

Acme Welding Co. Ltd.

Scientific Welders of all Metals by

OXY-ACETYLENE and ELECTRIC ARC PROCESSES.

236/8 PENTONVILLE ROAD, LONDON, N.1

Telephones: London—805 Holborn. Newcastle—Office, 2373 Central; Works, 3239 Central.

Branch Works—NEWCASTLE-UPON-TYNE.

Telegrams: Acmelding, Kincross, London. Pumping, Newcastle.

Electric Arc Welding

(KJELLBERG PROCESS)

for the repair of Marine and Land Boilers, and Machinery of every description.

Cracks, corrosion and wastage made good.

Most suitable also for new work, such as welding Flanges or Branches on Steam Pipes, etc., or for Boilers, Tanks, etc.

The KJELLBERG SYSTEM is the SPEEDIEST, the MOST RELIABLE, and the BEST.

The Anglo-Swedish Electric Welding Co., Ltd.

WOOD WHARF, GREENWICH, LONDON, S.E. 10.

Branches:

15 Forth Street, Pollokshields, Glasgow.

Glasshouse Street, St. Peters, Newcastle-on-Tyne.

Western Anglo-Swedish Electric Welding Co., Ltd.

6 MOUNT STUART SQUARE, CARDIFF.

North-Western Anglo-Swedish Electric Welding Co., Ltd.

38-44 Beau Street, LIVERPOOL.

The following table shows the results of mechanical and other tests on welds made by this process:

RESULTS OF TESTS ON WELDS MADE BY THE KJELLBERG PROCESS.

Tests.	Lloyd's Requirements.	Results Obtained.
Tensile (average of 10 pieces).	Not less than 90 per cent. of the strength of plate.	Over 100 per cent. of the strength of the plates, the average tensile strength of which was 29 tons per sq. in.
Alternating stress.	5,000,000 reversals of a stress of 6 tons per sq. in.	5,000,000 reversals of a stress of 11·7 tons per sq. in.
Impact.	Two blows from a falling weight of 2 cwts. from a height of 9 ft. on a ½ in. welded plate, and 4 cwts. from a height of 12 ft. on a ½ in. welded plate.	Withstood without the slightest sign of cracking.
Modulus of elasticity of deposited metal.		13,100 tons per sq. in. Practically the same as good quality steel plate.
Chemical analysis of deposited metal.		Quite satisfactory, the carbon and manganese being largely retained.
Microphotographs.		Completely satisfactory, the junction between original and deposited metal being well merged with no sharp line of demarcation and the effect of the heat being in nowise injurious.

The tests were carried out by Professor B. P Haigh, D.Sc., M.B.E., A.M.Inst.C.E., Royal Naval College, Greenwich, at the works of Messrs. David Kirkaldy & Son.

The results of resistance tests made on tramway rail joints are as follows :—

No. 1. Fish-plated and welded, no bolts. Drop 3 millivolts or $R=2{\cdot}00\times10^{-5}$ ohms.

No. 2. Fish-plated and welded, but with bolts. Drop 2·4 millivolts or $R=1{\cdot}60\times10^{-5}$ ohms.

No. 3. Fish-plated and copper bonded in ordinary way, *not welded*. Drop 8·8 millivolts or $R=5{\cdot}87\times10^{-5}$ ohms.

No. 4. Butt-welded all round, no fish-plates. Drop 3·5 millivolts or $R=2{\cdot}33\times10^{-5}$ ohms.

Solid Rail. Drop 3·4 millivolts or $R=2{\cdot}465\times10^{-5}$ ohms.

Length tested, 3 ft with 150 amps. passing through rail.

Quasi-Arc System.

In this process, controlled by the *Quasi-Arc Co., Ltd.*, the electric arc is superseded by a quasi (or partial) arc, which is brought about by a slag covering around the wire of the ordinary metal electrode. The electrode known as the Quasi-Arc Electrode, according to British Patent Specifications 11079–12 and 13538–13, consists of a steel wire core with an aluminium wire running beside it and covered with a wrapping of *blue* asbestos suitably treated.

In making a weld or reinforcing a worn surface the electrode is held in an insulated holder connected by flexible leads to the positive pole of an electric generator and an arc is struck between the electrode and the work carrying the negative connection ; this arc is immediately destroyed and a quasi-arc formed and maintained, owing to the blue asbestos covering passing into the molten state and acting as a secondary conductor maintaining electrical connection between the work and the metallic core of the electrode.

The welding operation is continued by holding the point of the electrode just under the surface of the molten slag, and the quasi-arc is thus maintained and metal is deposited on the work continuously and with regularity.

Blue asbestos, being a ferrous silicate and an acid flux, can, in the molten condition, combine with and remove oxide or scale from work, so that it is not necessary to clean the latter in order to obtain a good junction between the electrode metal and the work. The molten steel and adjacent work, from the time of fusion until in the solid condition, is covered with this acid flux, so that oxygen from the atmosphere is prevented from entering the weld and oxidising the steel and forming blow holes. This is considerably helped by the presence of the aluminium wire, which readily takes up oxygen. The slag formed on the surface of the weld is of great advantage, as it covers the weld uniformly and allows the steel to cool much more slowly, thus adding to its mechanical strength, and when cool is easily removed.

The heat of the arc is localised to the weld, and the junction between the work and the welding metal is complete and free from oxide inclusions and shows a gradual diffusion of carbon from the work into the metal.

The following tables give the comparative strength of riveted and quasi-arc welded joints :—

TABLE SHOWING COMPARATIVE TENSILE TESTS OF QUASI-ARC-ELECTRICALLY WELDED JOINTS, AGAINST RIVETED JOINTS.

QUASI-ARC WELDED LAP JOINTS.

Specimens of Mild Steel.	Dimensions.			Sectional Area sq. in.	Tons Max. Stress.		Remarks.
	Overlap.	Breadth.	Thickness.		Total.	Per sq. in.	
Plain bar .		5·5 in.	·25 in.	1·375	39·3	28·55	
Welded bar .	1·5 in.	6 in.	·25 in.	1·5	40·1	26·7	Broke 6 in. clear of weld.
Plain bar .		2 in.	·50 in.	1·0	28·4	28·4	
Welded bar .	2 in.	5 in.	·50 in.	2·5	64·75	25·9	Broke 5 in. clear of weld.
Plain bar .		2 in.	·75 in.	1·5	42·0	28·0	
Welded bar .	2·25 in.	5 in.	·75 in.	3·75	89·5	23·85	Broke 5½ in. clear of weld.

TREBLE RIVETED LAP JOINTS.

Specimens of Mild Steel.	Dimensions.			Rivets.		Sectional Area sq. in.	Tons Max. Stress.		Remarks.
	Overlap.	Breadth.	Thickness.	Diameter.	Spacing.		Total.	Per sq. in.	
Plain bar . .		2 in.	·50 in.			1·0	27·4	27·4	
Riveted bar .	7·5 in.	18·25 in.	·526 in.	¾ in. dia.	2·625 in.	9·6	165·5	17·21	Broke through outer line of rivet holes.
Riveted bar .	9 in.	18·625in.	·489 in.	⅞ in. dia.	3·125 in.	9·1	172·0	18·91	

The quasi-arc process has been authorised by the British and Foreign Admiralties, Lloyd's Register of Shipping, the British Corporation for the Survey and Registry of Shipping, and Det Norske Veritas, for use in the more important parts in ship construction.

Note on Corrosion, in relation to Quasi-Arc Welding.

In view of the importance which the subject of corrosion bears to that of welding, the following notes on this matter may be added :—

Fundamentally, corrosion is electrolytic in character, and depends on the difference in potential of contiguous areas.

Commercial iron and steel contain areas which in the presence of an electrolyte (which may be merely atmospheric moisture) are capable of forming voltaic circuits, the necessary conditions being afforded by the presence of small particles of impurities or by local conditions of strain in the metal itself. These impurities or strains give rise to areas of higher electrolytic potential, and form electro-positive points which are first attacked by the corroding agent. Thus, in a caulked joint, corrosion will commence at the caulking, and similarly a riveted joint will be attacked round the rivet head, owing to the local strains in the metal at these points.

In a welded joint, if the metal at the weld be less pure than the surrounding metal, the weld will be first attacked. Similarly, if the added metal be not homogeneous, local differences in potential in the weld itself will cause corrosion at the weld.

A microscopic examination of the metal deposited by the Quasi-Arc process shows it to be of great purity, and the usual laboratory tests show it to be always electro-negative to the surrounding metal. Hence it follows that a Quasi-Arc weld will have a high factor of resistance to corrosive influences.

"ABCAR" BRAND
CALCIUM CARBIDE

ALL BRITISH

LARGEST BRITISH MANUFACTURERS

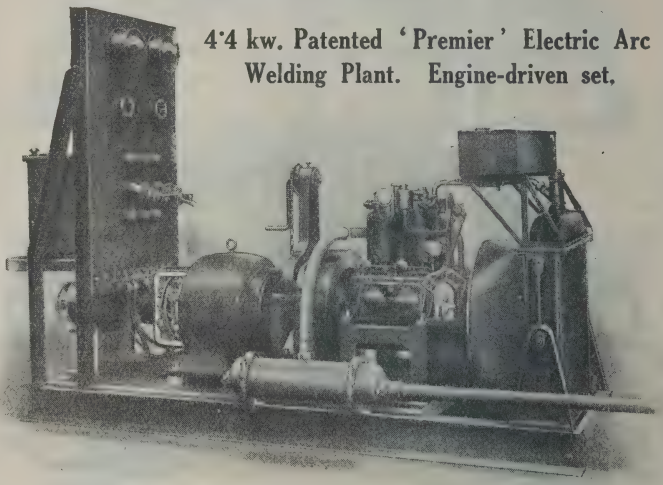
BRITISH CELLULOSE
& CHEMICAL MFG. CO. LTD.
BINGHAM CALCIUM CARBIDE CO. LTD.

Sole Sales Agents:
CHAS. BINGHAM & CO. LTD.,
11 Queen Victoria St.,
London, E.C. 4.

THE

'PREMIER' ARC WELDER

The world's most efficient Electric Welding Plant.



4·4 kw. Patented 'Premier' Electric Arc Welding Plant. Engine-driven set.

All types of Electric Welding Plant supplied. Highest Efficiency. Economical and Reliable. Electric Welding Repairs and Construction of all Descriptions.

ELECTRODES

Prices and full particulars of 'Premier' Electrodes on application.

The Premier Electric Welding Co. Ltd.

Head Office:

Bank Buildings, St. James's Street, LONDON, S.W. 1.

Telephone :·Regent 3294. Telegrams : 'Premelwel,' St. James, London.

Also at BELFAST, GLASGOW, LIVERPOOL, LEITH, NEWCASTLE, SWANSEA, ABERDEEN AND SHEFFIELD.

F. 2305

Alloy Welding Processes System.

The 'A.W.P.' electrodes are flux-covered electrodes, in which the coating and the metal core have been specially selected to give the best results as regards tensile strength and ductility, combined with ease of application and reliable and uniform results. The electrodes are coated by special machinery designed to suit the flux and deposit a perfectly even, concentric, and correctly proportioned amount of flux around the rod.

The slag produced is of such low specific gravity and high viscosity that it does not in any way impede the flow of the metal, or mix with the molten metal and get trapped when cooling. In making a second run the slag need not be removed except by slight brushing to remove dust and loose pieces. The electrodes produce a stable, even, and quiet arc, and the metal is evenly deposited and easily controlled. Special alloy electrodes can be supplied to successfully weld any particular specification of steel.

Arc welding plant to meet all conditions, portable and self-contained, and for use on alternating and direct current supplies, have been designed from efficiency and economy points of view. The 'A.W.P.' electrodes can be used on alternating or direct current. If the operator is on direct current from a separate generator the voltage should be adjusted by the shunt regulator to as near 60 volts as possible. If welding with alternating current a non-inductive grid resistance should not be used in the circuit to adjust the current. An adjustable choking coil, which provides the same variation in current in addition to steadying the arc and saving power, should be obtained.

Premier System.

The flux-coated wire electrodes of the *Premier Electric Welding Co., Ltd.*, is an alloy wire of carefully controlled composition, which is coated with a thin coating of non-metallic substances. The metal of the electrode is chosen with a view to producing a sound weld with a low nitrogen content and with consistently good mechanical properties. The coating on the electrode does not produce a layer of slag which has to be removed by chipping, but is there for the purpose of producing a steady arc and keeping the nitrogen and oxygen content of the weld at the lowest possible point. Four types of electrodes, classified according to requirements, are available—viz., standard electrode for general service, cast iron, high carbon, and manganese steel; in addition special electrodes will be made where necessary.

The Premier System of arc welding aims at distributing the current at the required welding voltage without any mechanical control whatsoever. This is obtained by the use of a dynamo of a special type connected with the arc through a special reactance coil in the main circuit. This coil absorbs no appreciable energy, but effectively damps out any sudden rise in current and at the same time helps momentarily to build up the current when any sudden break takes place. The reactance coil largely prevents breaking of the arc, thus reducing the skill required in electrode manipulation and eliminating flaws in the weld. It is claimed that with the Premier plant the consumption is less than one-third that of ordinary welding dynamos.

Electro-percussive Welding.

This is a process which is chiefly intended for manufacturing applications in which large quantities of duplicate parts are to be produced. The underlying principles utilised in percussive welding were discovered in 1905 by Mr. J. Chubb, of the Westinghouse Company. Following his original experiments, machines were developed for welding metals in wire form of rather small cross-section. Widely different physical properties offered no obstacle, and ductile welds can be made with copper and aluminium, platinum and lead. Electrical devices are used whereby a rapid small separation of the parts to be welded causes an intense arc to melt the surfaces. At the proper moment a forging-hammer forges the pieces together. The advantages claimed for the process are (*a*) power saved; (*b*) time of welding negligible; (*c*) welds of unequal sections are possible; (*d*) welds of unlike metals can be made; (*e*) uniform welds; (*f*) cost of finishing welds reduced. Recent results have shown that percussive welding has many valuable applications, especially in non-ferrous and steel-alloy welding.

Electric Blowpipe Welding.

In this process the electric blowpipe is essentially a horizontal-flame arc lamp using two carbons mounted like the letter V. The process was introduced by Dr. Zerener in 1890, and is usually known as the Zerener system. The flame of the arc was directed away or deflected downwards by means of an electro-magnet in series with the arc. The apparatus is bulky and complicated and for even moderate-sized work it must be suspended from above. This method of welding eliminates the passage of the current through the work. It is in use in several plants in Germany. The Voltex Process is a variation of the Zerener method in which the carbon electrodes are impregnated with metallic oxide which s vaporised by the flame of the arc.

Arc Welding Equipment.

Electric-arc welding may be done with any direct-current arc, having a reasonable degree of stability and sufficient amount of heat to accomplish fusion. The design of the welding machine affects the cost of welding. The necessity for a special machine rests upon economic factors, and the differences between the various types used are differences of power, cost of operation, difference of speed of operation due to the relative stability of the arc.

The question of direct or alternating current raises many interesting points which have never been clearly determined. Comparative data by independent authorities is missing, and the question of whether direct-current welding is faster or slower, whether flux-covered electrodes enable direct-current to take the lead in welding speed, whether the practical losses in motor generator and resistance compares favourably or otherwise with the alternating-current system, etc., etc., are questions which are answered by contradictory claims by both parties to this controversy. However, there are advocates for both systems, and equipment can be obtained for arc welding with direct or alternating current.

The successful application of arc welding is largely dependent upon the selection of the proper equipment. There are two systems in general use—(*a*) Single operator system, where a separate machine is provided for each operator, each machine receiving its current supply from the supply circuit; (*b*) Multiple operator system, where more than one operator receives current direct from the same machine, but each operator is provided with a control panel which enables him to vary the current without interfering with the other operators.

The equipment consists of a motor generator, control panel, and accessories. When using alternating current use is made of a transformer to reduce the distribution voltage to that suitable for the weld.

Amongst the accessories are protective equipment and electrode holders.

Protective Equipment.

The intense glare emitted in the process of arc welding consists of a combination of invisible infra-red rays, visible light rays, and invisible ultra-violet rays, and special safety devices are required to protect the operator from their harmful effects. For light electric welding it is necessary only to protect the eyes with goggles fitted with suitable coloured glasses. Hand shields are made for medium-weight electric welding work which can be done with one hand. They serve the double purpose of protecting the eyes of the operator and also shielding the face from the heat rays and ultra-violet radiations. For heavy electric welding it is common practice to use a helmet or hood which provides protection for the eyes, head, face, and neck, and leaves the hands free. For the protection of the hands and wrists leather gloves are used. These devices are subject to modifications to meet the requirements of special work. With regard to the tint of the protective glasses, a reference to the note on goggles in the section on oxy-acetylene welding will be useful.

Automatic Arc Welding.

Depositing metal using an automatic feed for the electrode results in a materially increased rate of deposition. Machines have been developed which are capable of welding steel 0·109 inches thick at the rate of 22 ins. per minute. This method of depositing metal is particularly advantageous on sections of uniform shape upon which a considerable amount of metal is to be deposited. Automatic welding does not eliminate the human element in welding, but does in certain cases greatly increase the speed of the process, and in other cases obtains results which are beyond the limitations of manual operation.

Resistance Welding.

There is a marked distinction between the joining of metals by the two electric processes, viz., arc welding and resistance welding. In the former the heat is localised through the action of the electric arc and no pressure is applied; in the latter the heat is localised by the resistance to the flow of the current and pressure is used.

The process of resistance welding is based upon the phenomenon that a poor conductor of electric current will heat if current is forced through it, or that a good conductor will also heat if enough current is passed through it, and that the heating effect will be greater if alternating current is used than if direct current is used. Since an imperfect joint, such as the abutting ends of two pieces of metal, or the lapping of two pieces of metal which are to be welded, is a poor conductor and offers great resistance to the passage of the current, it will naturally heat and finally cause the metal to fuse and flow sufficiently to weld. In practice the operation is very rapid because comparatively large amounts of current are used.

For this type of welding a single-phase alternating current of any commercial frequency is used. The transformer in the machine will take the current from an ordinary shop circuit and reduce it to a suitable welding current.

Resistance welding is only suitable for duplicate or repetition work. In general one machine is designed for handling pieces of the same metal and for making joints of similar design. Repair jobs have been done in special cases, but it is only in rare cases that such an adaptation is attempted.

A resistance welding machine is simply a single-phase transformer having a secondary of one or two turns, the voltage required between the terminals being only five to ten volts, and the current being limited only by the size of the pieces to be handled. The transformer is built into a heavy frame which supports the clamping jaws to handle the work and mechanical devices to regulate the heat and pressure. The machine has reached a high degree of perfection, and large savings of time and labour have resulted in production work. The principle involved has been applied in the construction of a variety of machines indicated in the following definitions

Butt Welding

Consists in joining pieces end to end, securing complete fusion of the entire cross-section of the pieces. The pieces to be welded are placed in the clamping jaws, one of which is stationary and the other movable; enough pressure is exerted to bring the ends into contact and the current is then turned on. As soon as the welding temperature is reached the operator increases the pressure, thus forcing the pieces together, and turns off the current. Nearly all metals used commercially have been welded by this process.

Seam or Line Welding

Consists in joining pieces along a continuous line or seam, usually by moving the joint in the path of the current, so that fusion is secured continuously. The process combines the features of butt and spot welding. Machinery has been developed very successfully, but is limited to work on light stock and short seams. Standard seam welders are usually equipped with two electrodes, one connected to the work and the other a roller running over the seam, or both electrodes may be converging rollers, with the converging edges resting on opposite parts of the work near the edge to be welded. The work is passed beneath the rollers, which carry the current into the metal, and makes a continuous line of welding. The work must be carefully cleaned and be securely held by the machine to get good results.

Spot Welding

Consists in pressing the pieces together while passing the current through them, and localising the flow of the current so that the weld is confined to 'spots' between the electrodes, which are used to secure the pressure.

The material to be welded is placed between copper die points supported on the ends of two arms, and the points are brought firmly together on the metal by the use of either foot or motive power. The current is then turned on. The metal, being a poor conductor, becomes heated, and when heated to a sufficient degree, pressure is applied. In the case of automatic control, the current is turned on and off and the necessary welding pressure applied automatically by controlling mechanism usually driven by a variable-speed motor. The majority of commercial metals can be spot welded, but it is essential that the metal to be welded should offer a considerable resistance to the electric current, otherwise sufficient heat cannot be generated. The spot welding of light materials guarantees a successful product and increased production.

During the past few years considerable investigation has been carried out with regard to heavy spot welding for ships and constructional work. Large machines capable of supplying a welding current up to 100,000 amperes, and equipped to exert a pressure up to 30,000 lbs. per square inch on each spot, have been constructed. The main difficulties which have been encountered are, briefly, electrode-tip protection and the preparation of the materials to be welded. Two secondary considerations have been the separation of the electrodes and the shape of the head of the spot welder.

Button or Disc Welding.

Where very thick work is to be spot welded it is often desirable to find means to localise the current and cut down the amount of pressure required. Small metal discs or buttons can be used for this purpose placed between the head of the welder and the metal to be welded. Disc-depression welding differs from button welding in that in the disc-depression method an annular depression is provided in one of the sheets, around the disc. The method makes possible the use of a comparatively light machine for welding heavy steel plate, and also the use of less power and time for making the welds.

Bridge Welding

Is used to join thin sheets edge to edge without overlapping and without reducing the dimensions of the pieces. The sheets are brought together in their correct position, and then thin strips or discs are spot welded across the joint.

Multiple Electrode Welding.

Time and power can frequently be saved by making several welds at once, in which case the spot welder is equipped with two or more electrodes. It is advisable to have projections on one of the pieces to be welded to assist in localising the current. Successful multiple welding requires a separate transformer for each weld.

Point or Projection Welding.

In this method the metal to be welded is provided with points or projections. The points are brought in line with each other, and the welding effect is to provide a smaller contact point which increases the resistance and allows the weld to be made with the consumption of less time

and power. Ridge welding is the same as point welding, except that, instead of a single point a ridge is raised in the metals in such a way that the ridges on the two pieces come together in the form of a cross.

Combinations of all the above processes have been made for special jobs. Sometimes it is only necessary to make a change in the construction of the electrodes to make a machine do work of a varied character

Arc-welding Applications.

The application of arc welding to repair and manufacturing are very extensive, but its application should be made with a full knowledge of the possibilities and limitations of the process. In the welding of iron and steel, with their great variety of physical properties, a familiarity with the wide range of conditions is necessary to meet and solve the problems presented. In welding cast iron, copper, brass, aluminium, etc., the application of arc welding should be looked upon as in the experimental stages when welds with physical, chemical, and mechanical propert es similar to the base metal are required.

Cost of Arc Welding.

The cost of doing electric arc welding with the metal electrode process depends upon several variable factors, such as : (1) the price of labour ; (2) the characteristics of the arc, (*a*) arc easy to maintain, (*b*) arc difficult to maintain, (*c*) amount of heat available ; (3) the cost of power ; (4) the cost of electrodes ; (5) supervision required, (*a*) production work, (*b*) work of a varied character ; (6) interest charge on equipment.

See also 'Electric Welding,' Vol. ccviii (April 1921), *Proc. Inst. C.E.*

ELECTRIC ARC CUTTING.

Although cutting with a blowpipe has many advantages over electric arc cutting, yet there are many places where the electric arc can be used advantageously. The groove is not so narrow as that cut with a blowpipe, nor is the surface cut as clean.

The electric arc will cut any metal, ferrous or non-ferrous, and has been found particularly useful for the cutting of cast iron. The thickness that can be economically cut by the arc varies from 4 to 6 inches, for straight cutting. The current necessary for cutting operations on general and heavy cutting varies from 800 to 1,200 amperes. The voltage of the cutting arc varies between 25 and 45, a good average being 37.

It will be seen that heavy values of current are required, and special apparatus has been designed so that the arc could be controlled with these heavy currents. An important part of these developments is the design of a handle to protect the operator, hold the electrode, and to carry 1,000 amperes. A small item like the use of pure graphite instead of carbon for electrodes means the difference between success and failure.

Increase of current means larger electrodes and hence more metal to be cut out. The latest development for this work is a low resistance graphite and the approximate sizes for various current densities are as follows :—200 amperes, $\frac{1}{4}$ to $\frac{3}{8}$ in. electrodes ; 300 to 400 amperes $\frac{3}{8}$ to $\frac{1}{2}$ inch electrodes ; 400 to 600 amperes, $\frac{1}{2}$ to $\frac{5}{8}$ in. ; 600 to 800 amperes, $\frac{5}{8}$ to $\frac{3}{4}$ in. ; 800 to 1,200 amperes, $\frac{3}{4}$ to 1 in. electrodes.

Cutting on heavy sections is generally best accomplished from the underneath side or from a vertical face tipped slightly greater than 90 degrees so that the molten metal can flow away, although the action is not entirely simply melting metal. In cutting with the arc a reasonably smooth surface can be made by paying attention to one side only, or the cut may be made rough and trimmed up smooth by a second application of the arc.

Recent developments consist of a special electrode for cutting with the arc, and for such work as piercing holes. This special electrode, covered with a coating giving off free oxygen under the temperature of the arc, gasifies the entire metal melted, so that the boring action is uninterrupted after once started. This electrode is used by starting the arc and immediately pushing the electrode into the puddle. After the hole is through the piece it can be widened to any size or shape by drawing the arc around its edges. This type of electrode only takes from 250 to 350 amperes.

Thermit Welding.

This process consists in uniting the parts to be welded by pouring between them molten metal at a sufficiently high temperature to fuse them, so that on cooling union is perfected. The parts to be welded, where fractured, are cut away in order to leave a space for the molten metal. The Thermit mixture is composed of powdered aluminium and iron oxide. The two are intimately mixed, and heated at a point by a special ignition powder. At the temperature produced by igniting this powder, the aluminium reacts very energetically with the oxygen in the iron oxide. The reaction spreads rapidly throughout the mass in the crucible and produces a quantity of fluid metal, covered with a slag of alumina. The temperature set up by the reaction has been ascertained to be about 5,400° F. The crucible is a lined sheet-iron cone. It is suspended over the parts to be welded, and when the reaction is complete it is tapped, the metal running into the mould which has been built round the fracture. The weld is usually larger than the original section, and the mould may be made from a wax pattern fitted around the fracture. The wax is melted out with a preheating torch, leaving a space for the

Thermit metal, and the parts then preheated to a bright red heat before tapping the crucible. Iron oxide produces a very mild material, and it is usual to mix in with the Thermit compound small pieces of steel and ferro-manganese in certain proportions, so that the metal produced is similar to ordinary mild steel.

The welding of tramrails is carried out by means of the Thermit process. The rail-ends are carefully butted at the joint, and the weld made by running (into a suitably shaped mould) the superheated liquid steel along the base and web of the rails, followed by a slag which covers the head of the rail and raises it to a welding temperature. The rails are then drawn together by special clamps, with the result that the base and web of the rails are welded by fusion with the liquid Thermit metal, and the head is butt-welded.

CORROSION OF METALS.*

Corrosion of Iron.

Professor T. Turner in his book on 'Iron' says the results of the experiments of the Admiralty Committees which issued report in 1877 and 1880 led to the conclusion that common iron was less affected by corrosion than best Yorkshire iron, which is in accordance with the statement of Gmelin that phosphorus diminishes corrosion in iron.

In these experimente :—

Common iron resisted corrosion better than Yorkshire iron 9·6 per cent.

Yorkshire iron resisted corrosion better than mild steel, 16 per cent.

In another series of experiments conducted by D. Phillips, in Cardigan Bay, and lasting for seven years, it was found that the average corrosion of mild steel during the whole period was 126 per cent. more than wrought iron.

The independent experiments conducted by T. Andrews also showed that wrought iron corroded less rapidly than mild steel when the cleaned metallic surfaces were exposed to the action of the water.

Iron rusts very quickly when immersed in water from bogs and marshes which contain a large quantity of carbonic acid, derived from decayed vegetable matter.

Iron does not rust in dry air.

Iron subject to vibration rusts slowly. Railway rails in running roads where trains are passing frequently rust much less than those in sidings which are little used. Rails which are kept in reserve and not in use rust more quickly still.

Thin iron rusts more rapidly than thick, because the expansion and contraction owing to changes of temperature throws off the scales more quickly.

In moist air, steel rusts more rapidly than wrought iron, and wrought rusts more rapidly than cast. (See table, page 252.)

Cast iron in salt water becomes in time soft and porous. The smoother the surface of iron the more slowly it rusts.

Once rust forms the process goes on more rapidly; rust being a porous substance it absorbs moisture and acids from the atmosphere.

Protection of Iron from Rust.

The types of coating applied to iron and steel for their protection may be classified as follows :—

1. Adherent coatings. 2. Compound coatings.

1. Adherent Coatings.

These may be metallic or non-metallic in character. Of methods for the production of metallic coatings of this type the following are the most noteworthy examples :—

(*a*) Galvanising.—This is a process which has for its object the coating of the material with zinc. Two processes, known respectively as hot galvanising and electro-galvanising, are employed for attaining the desired object.

Hot galvanising consists in the immersion of the object to be protected from corrosion in molten zinc or spelter, the surface of which is largely protected from oxidation by a supernatant layer of ammonium chloride. Modifications of the simple process briefly described in the last sentence are known under the following names, Winiwarter's process, Kufler's process, Bedson's process, Reese's process, Porter's process, etc.

The amount of zinc on modern galvanised sheets varies from 1 to 2·5 oz. per square foot coated. The coating generally contains from 0·25 to 1·00 per cent. of lead and from 2 to 6 per cent. of iron.

The most obvious disadvantages of galvanising are two in number: first, the iron or steel coated has to be raised in temperature for the desired effect to be attained; second, a layer of weak zinc-iron alloy forms at some point intermediate between the true zinc layer and the iron or steel upon which it is designed to rest. This thin lamina of weak alloy, mainly the compound $FeZn_7$, may be insufficient in a majority of cases to cause trouble, but a serious reduction in tensile strength is frequently brought about as a result of the presence of this weak material in fine gauge wires and sheets.

* See also page 252.

Electro galvanising (cold galvanising) consists in the deposition of zinc electrolytically upon the object to be protected from corrosion, a soluble zinc salt being employed as electrolyte. The most important process under this head is that of S. Cowper-Coles, wherein an electrolyte of zinc sulphate is used, the electrolyte being continuously regenerated by circulation through tanks containing zinc dust. The methods of cold galvanising associated with the names of Heathfield, Powick, Pottkoff, Rawson, Wagner, Walker, etc., are worthy of note. Particulars of their processes are obtainable in the technical press.

The electrolytic process leads to the formation of an intermediate lamina of only minute thickness. In this particular the coating produced by the electrolytic process is an improvement upon that obtaining as a result of hot galvanising. It is, however, porous, and in this respect is inferior to the zinc coating produced in the dipping process. No marked superiority can be claimed for either of the processes.

Electro galvanising has made great progress during the past few years, and may now be regarded as an efficient method of rustproofing. By its means a wide range of articles may be coated with a film of zinc which, while ample to protect from oxidation, does not affect ductility or tensile strength. The fact that perfect cleanliness must be achieved before the adherence of zinc can take place prevents dirty patches on the article becoming coated. The main cause of failure with hot galvanised work is the covering up, through the surface tension of molten spelter, of dirty or scaly places, which blister or otherwise fail in a comparatively short time. A commercially protective coating is obtained with a deposit of 4 oz. per square yard of surface. The deposit is practically pure, lead being the chief adulterant, then only in a fraction per cent. Accurately machined parts can be assembled after coating, this overcoming a difficulty ever present in the past. Hot galvanised bolts must have the thread bared before the nut will fit. Cold galvanising coats the thread so that the configuration is not destroyed, and unless the nut is a very tight fit the zinc remains on the thread and thus protects it against corrosion.

Admiralty specifications require a deposit of 0·86 oz. of electro-deposited zinc per sq. foot of surface of the articles treated.

(*b*) Tin plating is a process similar to hot galvanising, tin being the coating metal. The protection afforded to iron and steel by tin is less effective than is that of zinc.

(*c*) Terne plating consists of the coating of the material to be protected with an alloy of lead containing from 50 to 75 per cent. of tin (generally 70 per cent. tin).

(*d*) Lohmanising—in this process the metals to be protected are (i) pickled in an acid bath, (ii) dipped into a salt bath which deposits a metallic salt over the entire surface of the body, (iii) immersed in a bath of molten alloy of zinc, lead and tin heated to a temperature of from 500 to 600° C. The composition of the tin-lead-zinc alloy is varied to suit the material being treated.

(*e*) Electro-plating—the coating of iron and steel electrolytically with copper, nickel, etc., is well known.

(*f*) Copper 'clothing'—the casting of copper round or the welding of copper to steel and the rolling of the resultant material to the required shape and dimensions has been practised, e.g. Monnot process, Willis process, etc. (vide *Iron Trade Review*, vol. li. 479).

(*g*) Nickel 'clothing'—processes similar to the Monnot and Willis processes have been successfully applied to the coating of iron and steel with nickel and cupro-nickel.

(*h*) Metallic spraying—the application of liquid metal in finely subdivided form by a spraying machine has been accomplished by M. U. Schoop, whose process, 'the Schoop process,' allows of the coating of iron or steel with an adherent layer of tin, lead or zinc, the material being coated remaining meanwhile at the ordinary temperature. The material under treatment must be scrupulously clean if adhesion of the finely-divided spray is to be perfected (vide *Metal Industry*, vol. xvi. 41).

Of methods for the production of non-metallic coatings of this type the following are the most noteworthy examples :—

(*a*) *Painting* (see page 2355)—The term 'paint' is applied to such substances as are employed as protective coatings in liquid form, but which under the action of oxygen dry and finally become hard and resistant. Paints are composed of :—

(*i*) solid substance in a state of fine division (pigment);
(*ii*) liquid in which the solid is held in suspension (vehicle); and, frequently,
(*iii*) salts of manganese, etc., for the purpose of hastening oxidation of the vehicle (drier).

Friend (*Carnegie Schol. Mem.* vol. ix. 1918, 117) summarises the conclusions respecting painted ironwork exposed to atmospheric corrosion as follows :—

1. The practical value of acceleration tests is shown to be very small in the present state of our knowledge. Reliable results can only be obtained from tests carried out under conditions closely resembling those required in practice.

2. Addition of pigment to oil increases the efficiency of the latter as a protective paint until a maximum is reached. After this, further addition of pigment causes deterioration. The best results are obtainable from paints possessing as high a percentage of good oil as is compatible with good body and any other working property that has to be considered.

3. Linseed oil on setting expands by some 3·3 per cent.; this is the primary cause of crinkling. Further oxidation causes a decrease in volume; this in time leads to cracking.

4. Linoxyn is permeable to moisture. The permeability is reduced by heating in absence of air, the oil increasing in density, viscosity, and molecular weight.

5. Polymerised linseed oil affords a better protection than raw oil when used as a paint vehicle.

6. The functions of a pigment are to toughen the film and render it less permeable to water vapour and oxygen. It also reduces the expansion of the oil on setting and thus minimises the tendency to crinkle.

7. A thick coat of paint protects the underlying metal more efficiently than a thin coat, provided the coat is not so thick that running or crinkling takes place.

8. The very best results are obtained by multiple coats. Two thin coats are better than one thick one of equal weight.

9. Thinners enable thin coats of paint to be applied. Turpentine leaves a very slight residue behind upon evaporation, but its effect on the efficiency of the paint is small.

10. Other things being equal, the most permanent paints are those containing black or red pigments, since these absorb the shorter rays of light and prevent them from hastening the destructive oxidation of the linoxyn by the air.

11. Finer pigments afford more efficient protection than coarse pigments, since they are more thoroughly in contact with the oil.

12. Iron structures should be painted whilst their scale is still on after loosely adherent flakes and rust have been scraped off. The paint will last rather longer than if applied to the pickled or sand-blasted surface, and the labour of removing the scale is saved.

13. Experiments with rusty plates are not conclusive, but suggest that the rust need not be so carefully removed, prior to painting, as is usually thought to be necessary.

(*b*) Varnishing—the term 'varnish' is applied to such liquids as are produced by the solution of gums, resins, etc., in volatile substances such as spirit, turpentine, fusel oil, etc. Varnishes are open to the objection that they are not entirely impervious to gases and liquids. The application of several coats of varnish and the stoving of such articles as have been varnished tend to increase the efficiency of these types of protective. The former method of treatment is, of course, costly; the latter can only be employed where relatively small articles are being dealt with.

Frequently mineral oxides, etc., are added to give 'body' to varnishes, and such protectives are far preferable to the mere gum or resin solutions mentioned above. Provided the solvent utilised in manufacture is not too volatile and the substances employed to give 'body' to the varnish do not act injuriously upon either the iron or the solute, these varnishes are of considerable value. Of materials employed to give 'body' to varnishes, calcined hematite ores and the mixture of finely-divided zinc and zinc oxide ('blue powder') obtained in the distillation of zinc, are the most effective. (*Lewes.*)

(*c*) Coating with bituminous substances—the substances tar, pitch and asphalt, together with other tar products of like nature, form excellent protective coatings for iron and steel. Care requires to be taken to ensure the absence of acid or alkaline substances from these bituminous materials. Where the articles to be coated can be heated without deleterious effect most excellent 'enamels' can be produced by applying warm tar to the same as hot. A variety of coatings may be obtained by altering the relative temperatures of the articles to be treated and the bituminous material employed in treatment (*cf.* Angus Smith's process, page 2358).

(*d*) Coating with Portland cement—the use of cements as a protective coating is frequent where the same can be afforded suitable support. In many cases the difficulty of attachment of the protective coating more than counterbalances the rigidity and adherent properties of the cement. Consideration must, of course, be taken of the possible effect of metallic expansion and contraction upon the cement coating applied, and cement should only be utilised where it can be applied in relatively thick coatings and where one can be assured that rupture of the hardened cement will be unlikely.

(*e*) *Enamelling.*—The enamelling of iron and steel is frequently conducted with a view to afford protection to the same. The enamels employed are boro-silicates of sodium, potassium, calcium, and aluminium. Finely-divided glass, flint or quartz forms the general source of the silica; felspar or clay that of the alumina. To render enamels translucent fluorspar is added, while borax furnishes the anhydride of boron required to complete the true enamel. Soda ash and pearl ash are utilised as fluxes. As oxidising agents the nitrates of sodium and potassium and manganese dioxide are used in light- and dark-coloured enamels respectively. To give adhesiveness to such enamels as come into direct contact with the metals to be coated, oxide of cobalt is employed. The following oxides are used as colouring agents:—

White, oxide of tin; blue, oxide of cobalt; violet, oxide of manganese; brown, oxide of manganese; grey, oxide of nickel; green, oxides of copper or of chromium; yellow, oxides of uranium or of titanium; red, oxides of iron, selenium, or of gold.

The enamel is put on either as a powder or as a suspension. It may be applied in one coat either by dipping, by spraying, or by powdering. Sometimes, however, a non-vitreous base material is applied and burned in to make it adherent, after which the true enamel is introduced to the surface to be coated. In any case the finely-divided particles which form the basis of the enamel are fused together in a solid coating of boro-silicate by subjecting the same to a temperature of about 1,000°C. The process generally requires from 3 to 4 minutes.

A process similar in some respects to that of enamelling is Ward's inoxidising process, which consists of the application of a solution of a silicate to the iron or steel to be protected. The articles so prepared are heated to such a temperature as will cause partial fusion of the silicate to occur and union of the same with the iron finally to ensue (*cf.* also Dode's inoxidising process).

It is obvious from the above that enamelling can be applied to relatively few articles of importance to the engineer.

2. Compound Coatings.

The term ' compound ' is applied here to such protective coatings as are produced by chemical action, the ultimate result of which is the formation of a chemical compound, such, for example, as magnetic oxide of iron (Fe_3O_4), iron-zinc ($FeZn_3$), etc. The compounds formed may be, as already noted, either chemical (in the general sense of the term) or intermetallic (in the specialised sense of the term).

Chemical Compounds.

Barff's process consists in passing superheated steam over the objects, which are heated in an air-tight retort to about 260° C.; for the formation of a more perfect protective coating higher temperatures are necessary (650° C.). Articles so treated are said to be ' barffed.' Relatively small objects only can be treated as above. The coating formed consists of the mixed oxides of iron (Fe_2O_3 and Fe_3O_4).

The Bower-Barff process is an improvement on the above, and consists in the heating of the objects to be protected to about 900° C., at the attainment of which temperature superheated steam is introduced to the same, which has the effect of producing a coating of the mixed oxide already referred to. This operation having continued for about twenty minutes, carbon monoxide is injected into the retort for a period of from fifteen to twenty-five minutes, during which time the entire reduction of the coating to the condition of magnetic oxide of iron is completed.

The Gesner process treats iron and steel at a moderately high temperature (550° C. to 650° C.) in a retort whereinto may be introduced an atmosphere of steam. The preliminary heating occupies twenty minutes; the steam is then allowed to react with the oxide formed in the first operation for about half an hour, when naphtha is introduced and allowed to remain in contact with the material under treatment for about ten minutes. Finally, steam is again introduced. The whole sequence of operations occupies about one hour and twenty minutes.

The Parker ' dry ' process.—Under a patent assigned to the Parker Rust-proof Company, of Detroit, the formation of an adherent coating of oxide may be obtained by first heating the objects to be treated to about 600° F. and then subjecting them to fumes of the acid metaphosphates of strontium, molybdenum and tungsten.

The Hans Renold process.—Remove all grease or oil from the articles to be treated by suspending in a bath of hot lyco (11 oz. per gal.) for about three minutes, wash in cold running water for a few seconds, then suspend from cathode brass bars by steel hooks in an electrolytic bath (KCN, 98 per cent. pure, 4 oz. per gal. of water), iron plates forming the anodes. Leave here for five minutes, and when a current of 25 amps. at 8–10 volts is passed through the bath all foreign matter on the surface will be removed. Wash off the cyanide by means of hot water to facilitate drying.

Heat the articles to 700° C., then quench in cotton-seed oil by immersing in the main body of the quenching tank for seven or eight seconds before allowing to fall to the bottom.

Dry by heated sawdust and hot-air blast (dried and filtered by passing through calcium chloride and cotton wool).

Insufficient oxidation results in the finished bodies having a grey appearance, due to the atmosphere of the furnace containing too much gas. Blistering is due to overheating.

Villon's process consists in subjecting the iron or steel to be protected to the vapour of sulphur, as a result of which treatment the monosulphide of iron is found.

The Bertand process requires that the articles to be treated be thoroughly cleaned by sand-blasting or similar means before they are immersed in a bath, such as will lead to the deposition of copper upon the same as a result of reaction between the iron and a suitable electrolyte. The deposition may be achieved by the application of electricity or by more purely chemical means. After thorough washing the articles are heated in an oxidising atmosphere to a temperature of about 600° C., which treatment leads to the formation of a fairly adherent coating of magnetic oxide of iron.

The De Meietin's process depends upon the formation of a coating of magnetic oxide (Fe_3O_4) upon iron or steel which is placed as the positive pole in a bath of distilled water, maintained at a temperature of from 70° C. to 80° C., a current of electricity being passed through it. The oxide coating is adherent, provided the current density is not over great, and may be rubbed and polished. This method is of value in the treatment of such articles as cannot be submitted to any processes which might tend to temper or anneal the objects under treatment.

The Parker ' wet ' process (patent) consists in the immersion of the iron or steel to be protected in a bath of a 1½ per cent. solution of the acid metaphosphates of tungsten, molybdenum, or any of the metals of the third, fourth or fifth group of elements.

The Coslett Process (Coslettising).—Cast iron or steel articles treated by this process are not only rendered rust-proof but improved in appearance.

The articles to be treated should be perfectly clean and free from tin, nickel, or grease.

The best results are obtained on a frosted surface, such as is left by sand-blasting or pickling. Sand-blasting is to be preferred, as any traces of acid render the treatment ineffectual.

The coslettising bath is prepared by heating in a cast-iron or welded steel tank a sufficient quantity of distilled water to easily cover the articles to be treated. When boiling add for every gallon of water in the bath (1) two ounces of phosphoric acid (syrupy sp. gr. 1·5); (2) one ounce of iron filings. This should be carried out in the open or under an uptake, as the reaction results in the formation of disagreeable fumes. When this reaction has ceased the bath is ready for use.

The articles should be placed in the bath as soon as possible after sand-blasting, and should be gently boiled for two hours.

A second tank should be prepared containing distilled water, which should be heated in time to wash the articles as taken from the coslettising bath.

At the expiration of the specified time the articles should be taken from the coslettising bath and placed directly into the hot water and thoroughly scrubbed with a stiff bristle brush.

They may then be dried off, and if heavy will dry quickly themselves, but if light should be placed in an externally heated oven.

As soon as dry and while warm they should be dipped in a mixture of lubricating oil and turps substitute, in the proportion of 2 to 1, and left to drain. When cold, surplus oil may be removed with clean waste or wiper.

To allow for evaporation of bath a mixture similar to that in the bath should be made up and added as required.

To keep the bath at the correct strength it is necessary to titrate a sample of the bath with $\frac{1}{10}$ normal sodium hydrate. To make this test, 10 c.c. of the bath should be placed in a conical flask, a few drops of phenolphthalein solution being introduced as an indicator. The $\frac{1}{10}$ normal sodium hydrate should be added from a burette, until a permanent pink tinge is given to the liquid in the flask. The amount of sodium hydrate dropped into the flask should be noted, and if the bath is correct this amount will be 10 c.c. If more sodium hydrate is used, the bath is too strong and will require diluting with distilled water; if less is used, the bath is weak and will require the addition of phosphoric acid and iron filings in the given proportion.

The appearance of the deposit obtained on the article is a rough guide to the state of the bath. The proper deposit is of a uniform dull black colour, but if the bath is too strong this black coat is covered with a pearly white deposit which will not scrub off. If the bath is too weak the articles appear unevenly covered with a thin grey coat.

Granulated zinc may be used in place of iron filings, in which case the articles appear to be coated with metallic zinc.

The need for the absolute cleanliness of the articles before treatment cannot be too strongly emphasised, and they should not be handled after cleaning, or before they are finally oiled.

Intermetallic Compounds.

Sherardising.—The articles to be coated are first cleaned and dipped in an acid bath as for galvanising; they are then put in a suitable retort which is, if possible, airtight, and are surrounded with 'blue powder'; the retort is then raised to a temperature of 500° or 600° F.

If the retort cannot be made airtight, about 3 per cent. of finely-powdered carbon should be mixed with the zinc to prevent the formation of zinc oxide.

The heat is kept up for a few hours, after which it is allowed to gradually decrease.

A coating is formed which consists mainly of an intermetallic compound of zinc and iron ($FeZn_3$).

Calorising.—A somewhat similar process to the above, in which aluminium powder is utilised as the agent and wherein the resultant protective coating consists chiefly of an intermetallic compound of iron and aluminium.

Rustless Iron.

The composition of rustless iron (carbon, 0·7; silicon, 0·8; manganese, 0·12; chrome, 11·7 and nickel, 0·57) is, except for a variation in the carbon content, the same as that of the steel possessing similar qualities.

Colouring Metals Electrolytically.

Chiefly in grey, so as to give the effect of old metal, is largely carried out.

When the colouring is only to be partial, a shellac or asphalt varnish is applied to the parts it is desired to leave untouched. The *Ironmonger* points out that with cyanide baths the retention of the varnish on the metal is almost impossible, and that in all such cases it is desirable to use a bath of acid reaction.

For a grey surface on iron a bath of the following composition is recommended:—

12 litres water.		100 grammes white arsenic.	
4 „	crude hydrochloric.	100 „	green vitriol.

1 litre of ferrous chloride solution.

As usual with acid baths, a considerable strength of current is required. Plates of carbon are used as anodes.

The bath can be used for colouring silver, nickel, German silver, etc., and by altering the composition of the bath and the current from grey to a deep black is produced; but the black adheres very indifferently—a high current is necessary for the latter. (*Horobin.*)

Electro-Deposition of Iron.

A bath that will give very satisfactory results is composed of 75 grms. of ferrous ammonium sulphate to 1 litre of water, with a current density of 1 amp. per 30 sq. cms. To ensure a uniform deposit the anode should be moved about the work by means of a small motor. A good anode is made up of 16 S.W.G. Swedish iron wire wound into the form of a cylinder and thoroughly annealed. The temperature of the solution should be kept above 68° F., and it is desirable to decant and settle it every three days or so to remove oxides of foreign matter which cause roughness in the deposited metal.

It has been found possible to coat with a layer 2 mm. thick any cylindrical wrought iron or steel surface. Properly done this layer cannot be chipped off with a chisel, and when carbonised and hardened the dividing line, shown by microphotographs, entirely disappears. The surface can be filed or ground and given a high finish.

(*B. H. Thomas*, '*Institution of Automobile Engineers.*')

COPPER.

Copper containing at least 99·95 per cent. of the pure element is produced on a commercial scale in large quantities. The average tenacity of cast copper is about 10 tons per square inch, that of worked copper is about 15 tons per square inch, while Roberts-Austen quotes the following figures for the mechanical properties of slowly annealed, hammered, rolled bars of copper of a high degree of purity :—

Elastic limit	1·16 tons per sq. in.
Maximum stress	13·47 ,,
Elongation	37·0 per cent.
Reduction of area	61·0 ,,

Impurities in Commercial Copper.

Arsenic.

Arsenic increases the hardness and the tenacity of copper. When present in moderate quantities it increases the percentage elongation of the metal. It improves the rigidity and strength of copper at high temperatures, hence, for fire-box plates, the use of copper containing from 0·3 per cent. to 0·5 per cent. of arsenic is frequently specified. In copper that is to be employed in the manufacture of brass subsequently to be cold-worked, not more than 0·05 per cent. of arsenic should be allowed.

Antimony.

Antimony is similar in action to arsenic, but it should be limited to traces in such copper as is to be used for the manufacture of brass that is to be cold-worked.

Bismuth.

Bismuth being the most deleterious element that can be present in copper, owing to its tendency to induce red-shortness, not more than traces of this element should be allowed.

Iron.

Iron is rarely present in copper in more than traces.

Lead.

Lead is, after bismuth, the most objectionable impurity likely to be present in copper, although it is of value in metal that is to be rolled into sheets, on account of its softening effect on copper. Not more than the smallest quantities of this element should be allowed in copper for cold-worked brass.

Nickel.

Nickel hardens copper, but is in no way deleterious when present in such amounts as are usual in commercial copper.

Oxygen.

Oxygen in small quantity does not have any very radical effect on the mechanical properties of copper. It is important in bringing copper up to the ' pitch,' and in combining with deleterious impurities to form insoluble and infusible compounds, thus separating and distributing these impurities and rendering them harmless.

Sulphur.

Sulphur tends to embrittle copper, but is rarely present in refined copper.

Tellurium.

Tellurium is similar to sulphur in its action on copper.

Silver, Tin and Zinc.

Silver, tin and zinc are sometimes present in copper, but are rarely present in such quantity as to have much effect on the metal.

It has been found practically impossible to cast copper which is mechanically sound and of high electrical conductivity, on account of the porous metal that is obtained. By an addition of boron this can be accomplished. One per cent. of boron suboxide flux—equivalent to 0·08 to 0·1 per cent. of boron suboxide—is added to the copper, and a casting that is commercially sound is obtained.

ZINC.

Zinc is marketed in two forms—as sheet zinc (see Sheet Zinc Trade Gauge, page 2391) and as spelter, i.e. flat rectangular ingots from 1 to 2 inches in thickness. The tenacity of zinc as cast is about 1 ton per square inch, and its elongation is practically nil. Zinc, after compression under a stress of 20 tons per square inch at 100° C., has a tenacity of about 11 tons per square inch.

It is ductile between 212° F. and 302° F. and can then be shaped as required. But when either above or below these limits it becomes brittle and unpliant, and therefore not adapted for treatment. It melts at about 786° F. if volatilisation is guarded against.

Impurities in Commercial Zinc.

Arsenic.

Arsenic is a common impurity in spelter. It does not occur in such quantity as to have a deleterious effect upon the mechanical properties of spelter or of such alloys as contain it. It is, however, an objectionable ingredient in such zinc as is to be employed in the production of hydrogen.

Cadmium.

Cadmium is nearly always present in zinc; in electrolytic varieties of the metal it rarely exceeds 0·07 per cent., in other varieties as much as 0·40 per cent. is found. The effect of this element is to harden spelter and to make it more brittle. Cadmium is, on this account, objectionable when the zinc has to be rolled into sheet or to be used for galvanising telegraph wires. In zinc for the manufacture of brass subsequently to be cold-worked as much as 0·20 per cent. of cadmium may safely be allowed.

Copper.

Copper tends to harden zinc, but is rarely present in quantity sufficient to effect radical change in the metal.

Iron.

Iron hardens and embrittles zinc. Its presence tends to the formation of dross in the galvanising process.

Such zinc as is to be used in the manufacture of cold-worked brass should not contain above 0·10 per cent. of iron. Electrolytic spelters rarely contain above 0·025 per cent.; as much as 2·5 per cent. of iron is, however, to be found in certain zincs.

Lead.

Lead is present in certain brands of zinc up to 2·5 per cent. The purer brands of spelter contain up to 0·20 per cent. of lead. The presence of lead is not deleterious where the spelter containing it is to be used for general brass manufacture, but where brass is to be cold-worked or specially treated care must be taken that the spelter used has not too high a content of lead.

Lead in moderate quantity tends to make zinc softer in rolling. When present in quantities in excess of 0·7 per cent. it tends to the production of serious cracks in slush castings of zinc.

Other elements occasionally present in spelter in traces are sulphur and carbon.

TIN.

The London Metal Exchange form of contract (1911) for the purchase of tin recognises two classes of tin—Class A, tin assaying not less than 99·75 per cent. of pure metal; Class B, tin assaying not less than 99 per cent. of pure metal.

The tensile strength of cast tin varies (according to Thurston) from 2,000 to 6,000 lbs. per square inch. The elongation is, for all practical purposes, nil.

The principal impurities in commercial tin are lead, iron, copper and arsenic. Sulphur, silver, bismuth and antimony are of frequent occurrence.

NICKEL.

Nickel containing small quantities only of impurities is a commercial article. On account of its readiness to occlude carbon monoxide and other gases, and its affinity for carbon, it is difficult to obtain nickel in a pure state in the cast condition. Parker, experimenting on pure, dead soft, wrought nickel, has arrived at the following figures for the mechanical properties of nickel :—

Elastic limit	6–10 tons per sq. in.
Maximum stress	18–20 ,,
Elongation	8–15 per cent.

Impurities in Commercial Nickel.

Carbon.

Carbon is present in nickel up to 0·20 per cent., though it rarely exceeds 0·15 per cent. It has an embrittling effect on nickel when in the form of graphite, but when combined with nickel as nickel carbide it has a strengthening effect.

Cobalt.

Cobalt has a strengthening and hardening effect on nickel, but in the quantities—up to 1·00 per cent.—usually found in commercial nickel, this element has but little effect.

Copper.

Cōpper is similar to cobalt in its action, but rarely exceeds 0·20 per cent. in amount.

Arsenic.

Arsenic should not exceed about 0·025 per cent. in such nickel as is to be subjected to cold-work, or in alloys for a similar purpose.

Iron.

Iron has an effect on nickel similar to that of cobalt and chromium, but, being rarely present in quantities in excess of 0·75 per cent., its presence is scarcely noticeable.

Silicon.

As much as 0·30 per cent. of siliceous matter can be present in commercial nickel. Its effect on the properties of the nickel is uncertain.

Sulphur.

Sulphur is occasionally noted in samples of nickel.

Nickel, if it is to be satisfactory for the manufacture of copper-nickel alloys for cold-working, should be free from all unreduced oxides.

ALUMINIUM.

Aluminium which contains up to 99·9 per cent. of the pure element can be produced on a commercial scale, but the commercial metal is rarely above 99·5 per cent. pure. The mechanical properties of cast aluminium are as follows :—

Elastic limit	3–4 tons per sq. in.
Maximum stress	5–7 ,,
Elongation	3–4 per cent.

The tenacity of hard-rolled aluminium can be as high as 18 tons per square inch.

Annealing Sheet Aluminium.

1. Prepare a mixture of ordinary whiting and oil, mixed to the consistency of thick paste. Coat the metal on both sides with this preparation, and place it on a clean fire or in a furnace, allowing it to remain until the oil in the paste becomes ignited. When this occurs withdraw the work from the furnace and allow it to cool gradually. The coat of whiting should then be removed from the surface of the metal by washing and brushing.

2. Heat the metal to a dull red colour, perceptible in the dark, and cool slowly. With this method care must be exercised to get an equal annealing temperature distributed over the entire surface of the work.

3. Heat the sheet aluminium until pine-wood sawdust just glows when sprinkled on it, which indicates a temperature of about 750° F. At this temperature a dry match-stick will just char when rubbed on the metal. (*A. Eyles*, '*Machinery*,' *Aug.* 11, 1921.)

The Protection of Aluminium from Corrosion.

Aluminium and its alloys can be efficiently protected against atmospheric corrosion under the most severe conditions only by the use of an enamel or varnish paint. Oil paints are very inferior in protective power to those referred to above.

Impurities in Commercial Aluminium.

Copper.

Copper is present in aluminium in quantities up to 0·10 per cent., which quantities are insufficient to affect the properties of the metal noticeably.

ALUMINIUM CASTINGS

OF EVERY DESCRIPTION.

We make a Speciality of Aeronautical and Automobile Work.

We are making many thousands of **Aluminium Die Castings** weekly under the celebrated **Cothias** process—in many cases **entirely eliminating** machining operations, and we hold the sole manufacturing rights in the British : Empire for this process. :

Chemical and Physical tests are made on our own premises, and our **Castings**, both **Sand** and **Die**, are produced under the most up-to-date and :: scientific methods. ::

Sole makers of the **Birmal Aluminium Pistons**, thousands of which are running to-day in a highly satisfactory manner under the most severe :: :: conditions. :: ::

Highest Class Castings to Government Specifications

□

Prompt Delivery.

BIRMINGHAM ALUMINIUM CASTING (1903) CO., Ltd.,

Cambridge Street Works,

BIRMINGHAM.

METALS

Every description of specially graded
SCRAP COPPER, GUN METAL,
BRASS, MANGANESE BRONZE,
PHOSPHOR BRONZE, &c., &c.,
——————at Lowest Prices.

Buyers of Old Condenser Tubes,
Metals, Steel Boiler Tubes, . .
Metallic Ashes, Residues, &c., &c.

INQUIRIES SOLICITED.

J. B. GARNHAM & SONS

44/47 Devonshire St., Theobald's Road, London, W.C. 1

ESTABLISHED 1867.

Telegraphic Address:
'Garnham, Westcent, London.'

Cable Address:
'Garnham, London.'

Telephone: Museum 4116.

A B C Codes (4th and 5th Ed.)
and Lieber's Code.

Iron.

Iron has the effect of hardening aluminium, but is never present in sufficient amount to cause appreciable change in the physical properties of the metal. The iron content varies generally from 0·25 to 0·75 per cent.

Silicon.

Silicon is always present in aluminium, varying in percentage from 0·25 to 0·50 per cent. Occasionally the upper limit given is exceeded; excessive quantities of silicon render aluminium susceptible to atmospheric corrosion.

Sodium.

Sodium is now occasionally, though rarely, noted in aluminium.

Copper, Nickel, Zinc, and Magnesium.

Copper, zinc, nickel, and magnesium harden aluminium and are frequently employed for the purpose in question. They are rarely, with the exception of copper, present in commercial aluminium.

MAGNESIUM.

Magnesium, which is a lighter metal than aluminium, promises to play an important part in the future of light alloys, particularly for aircraft construction.

NON-FERROUS ALLOYS.

COPPER AND ZINC.

The alloys of copper and zinc containing over 50 per cent. of copper are generally termed 'brasses.' The mechanical properties of these alloys have been the subject of numerous investigations; in this connection such authorities as Thurston, Charpy, Lohr, Guillet, etc., should be consulted.

Below are given the results of Guillet's tests on the brasses. His tests were carried out upon material which was worked, then heated for ten minutes at 750°C. in a salt bath and finally cooled in air.

Alloy Composition.	Yield Point.	Max. Stress.	Elongation per cent. on 100 mm.	Hardness.
Copper.				
100 per cent.	2·09	14·28	52·5	48/49
98 ,,	1·64	14·41	58·0	48/50
96 ,,	2·59	15·27	57·5	52
90 ,,	3·54	16·43	54·0	55/58
85 ,,	3·35	16·43	58·0	57/58
80 ,,	4·17	18·52	72·0	60/63
75 ,,	4·49	19·47	77·0	60/62
72 ,,	4·69	19·59	77·5	60/61
70 ,,	4·65	19·59	73·5	60/64
67 ,,	4·49	19·02	72·5	56/60
65 ,,	4·69	19·25	73·0	62
62 ,,	6·59	23·06	57·0	80/81
60 ,,	6·95	23·76	50·0	81/82
58 ,,	4·27	25·15	51·0	92/95
56 ,,	7·33	21·06	40·0	121/131

Figs. 40 and 41 show the relation existing between the mechanical properties of the pure brasses and their copper content.

The casting temperatures of these alloys are of exceptional moment. The following tests show the influence of varying casting temperature on the tensile properties of 40 5 per cent. zinc-copper alloy castings poured from one crucible within a short interval of each other. Chemically the three castings were identical.

Casting Temperature °C.	Maximum Stress per Square Inch.	Elongation per cent.
1,038	12·45	6·0
943	16·28	9·5
934	18·88	15·0

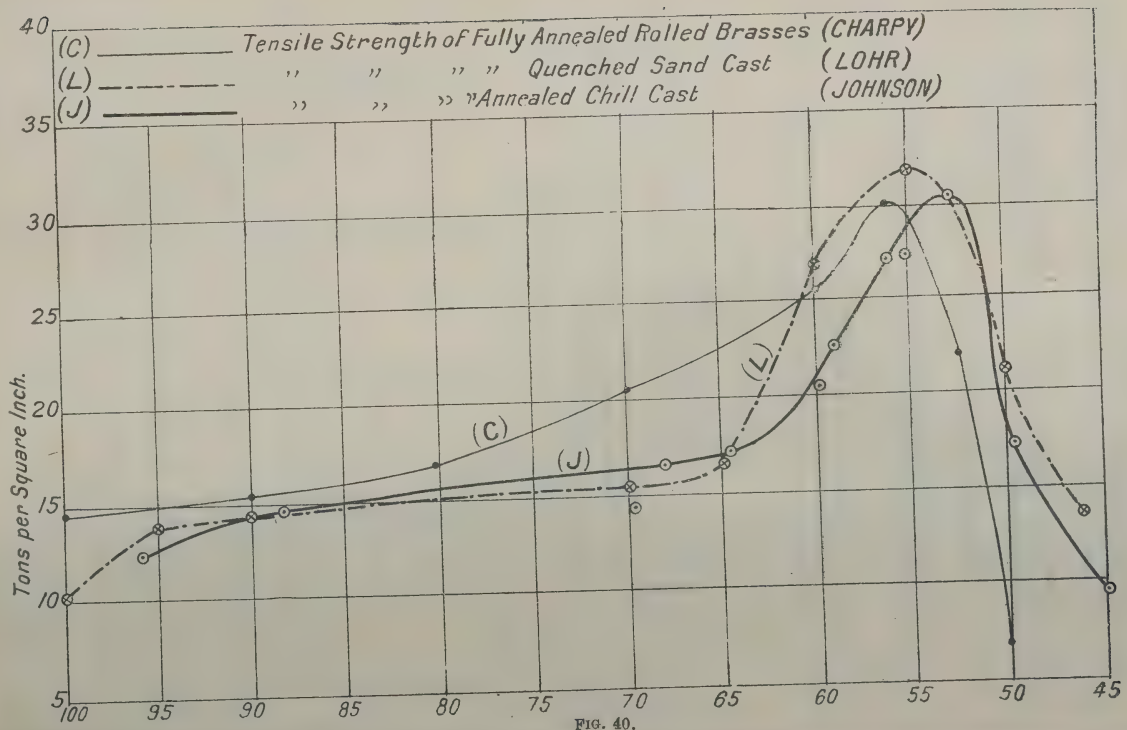

(C) Tensile Strength of Fully Annealed Rolled Brasses (CHARPY)
(L) " " " " Quenched Sand Cast (LOHR)
(J) " " " " Annealed Chill Cast (JOHNSON)
Tons per Square Inch.
40
35
30
25
20
15
10
5
100
95
90
85
80
75
70
65
60
55
50
45
(C)
(J)
(L)

FIG. 40.

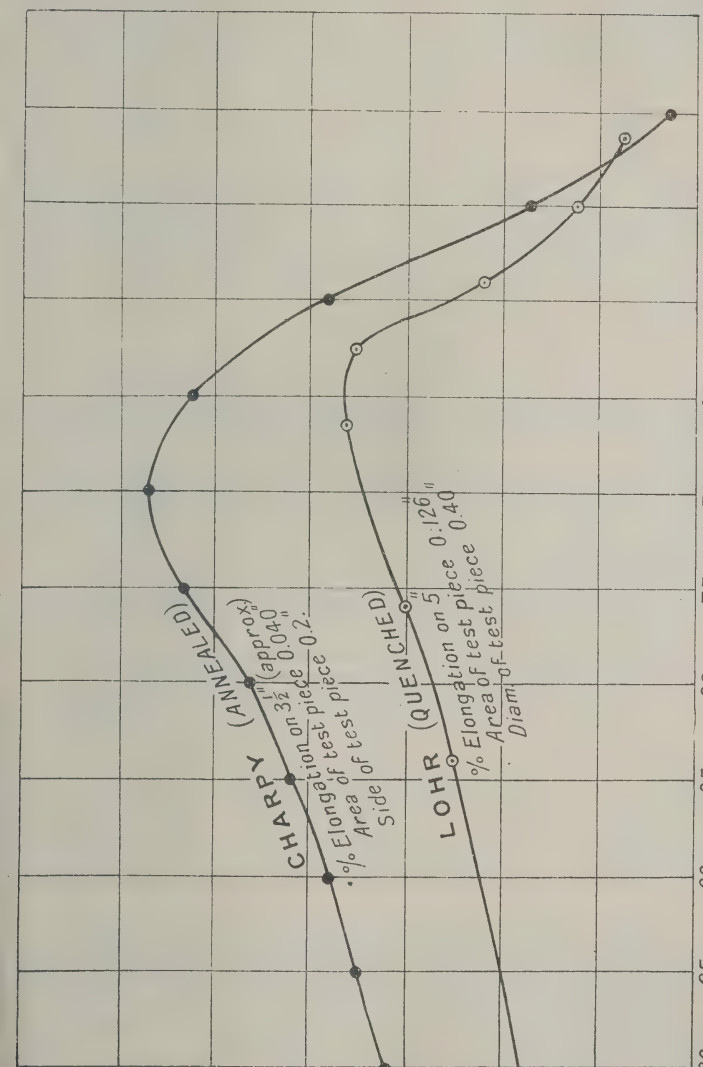

CHARPY (ANNEALED)
% Elongation on 3½" (approx.)
Area of test piece 0.040"
Side of test piece 0.2"
LOHR (QUENCHED)
% Elongation on 5"
Area of test piece 0.126"
Diam. of test piece 0.40
70
60
50
40
30
20
10
0
100
95
90
85
80
75
70
65
60
55
50
45

FIG. 41.

In every case with other alloys similar temperature variations have a similar effect on the mechanical properties. The following results obtained from manganese bronze were obtained by Guillemin :—

Casting Temperature °C.	Maximum Stress. Tons per Sq. In.	Elongation per cent.
1,400	15·2	13
1,300	19·7	45
1,250	21·6	35
1,200	22·9	30

In judging a suitable pouring temperature the appearance of the alloy in ladle or crucible may be used as a guide. With manganese bronzes this appearance is somewhat confused by the aluminium present, for, as is well known, this imparts a characteristic skin to the surface of the molten alloy. The practical effect of this is to make the alloy appear colder and less fluid than is really the case. Careful observation readily overcomes this difficulty.

There is little doubt that the pyrometer is, in the hands of careful workers, the best means of determining the temperatures of metal or alloy in the ladle or crucible.

(See also Zinc-Tin Alloys, page 2335.)

Cast Brass.

Cast brass is somewhat variable in composition, but usually contains about 66 per cent. of copper, this percentage being that found in English standard brass.

The metals employed in the production of cast brass are not generally selected with such care as are those used in the manufacture of malleable brass. Lead, tin and iron are common impurities.

Lead in proportions varying from 1 to 3 per cent. is frequently added for the purpose of facilitating machining. It reduces the tenacity and hardness and increases the corrodibility of the resulting alloy, and is liable to segregate in those parts of the castings that solidify latest on cooling.

Tin tends to harden brass and is added in quantities up to 3 per cent., though 2 per cent. is not generally exceeded.

Iron hardens and increases the tenacity of brass.

The presence of more than one of these elements in quantity is to be deprecated, as their combined effects on the mechanical properties of the resulting alloy are likely to be injurious.

The mechanical properties of cast brass of average composition (66 per cent. of copper) and containing only small quantities of impurities or added elements are :—

Yield point, 6 tons per sq. in.; Tenacity, 14 tons per sq. in.; Elongation, 40 per cent.

A number of alloys, adapted for particular purposes, are tabulated below :—

Alloy.	Cu. Per cent.	Zn. Per cent.	Other Metals. Per cent.
Very delicate castings	86·00	14·00	—
Good yellow brass	75·00	25·00	Sn. 2·00
Name plates	86·00	9·00	Sn. 3·00; Pb. 2·00
Small castings (red)	90·00	10·00	,, ,,
Taps, cocks, etc.	78·00	14·00	Sn. 3·00; Pb. 3·00
Fine castings (yellow)	71·00	24·00	Sn. 2·00; Pb. 3·00
Hydraulic pumps	58·00	38·00	Sn. 2·00; Fe. 2·00

Ductile Brass.

The brasses containing upwards of 63 per cent. of copper are ductile and malleable at ordinary temperatures, provided that the metals used in the production of the alloys be of the best quality, and that the alloys be well annealed during working. The most suitable annealing temperatures for ductile brass are between 650° C. and 700° C.

Lead is admissible in alloys that are to be rolled into sheet, but is injurious in alloys that are to be drawn into wire. It should not be present in such quantity as is liable to create trouble at the annealing furnace.

The most ductile of the brasses contains 70 per cent. of copper and possesses the following mechanical properties when fully annealed subsequent to rolling :—

Yield point . 10 tons per sq. in.; Elongation . 60 per cent. on 2 ins.;
maximum stress . 23 ,, ; Hardness (Brinell) 120.

PHOSPHOR BRONZE

Cog Wheel Brand

Chill Cast, Solid and Cored Sticks
and Half Bearings.
Castings to Pattern.

Ingots—Sheet—Strip—Rod—Wire—Tube.

◆ ◆

WHITE ANTIFRICTION METALS

All Grades — including 'Babbitts,' 'Magnolia,' 'Plastic' 'Copper Hardened,' 'White Brass,' 'White Navy Bronze,' etc., etc.

◆ ◆

MANGANESE BRONZE

◆ ◆

Gun Metal

Cog Wheel Brand

INGOTS AND CASTINGS.

◆ ◆

PHOSPHOR BRONZE CO., LTD.

SUMNER ST., SOUTHWARK, LONDON.

CHESTER STREET, ASTON, BIRMINGHAM.

The

Manganese Bronze & Brass Co.

LIMITED,

wish to remove a mistaken impression that they are Manufacturers only of Propellers and Bronze Alloys used in special trades, as one or other of their productions can be employed with economy in every Engineering shop in the world.

At Ipswich they extrude, roll and draw

Brass or Bronze Bars of every section

High Strength Bars for constructional purposes ;

Hydraulic and other Tubes ; Sheets ;

Pump Rod and Valve Spindle Forgings, of Immadium and 'Parsons' Manganese Bronze';

Solid Brasses, for hot necks and mill bearings generally, of 'Damaxine' Antifrictional Alloy, and 'Parsons' White Brass' for filling Motor, High-speed Turbine, & Marine Engine Bearings.

COMPANY'S WORKS:

HANDFORD WORKS, IPSWICH and
ST. DAVID'S WHARF, WEST FERRY ROAD,
MILLWALL, LONDON.

COMMERCIAL OFFICES (for all correspondence):

210/218 Caxton House, WESTMINSTER, LONDON, S.W.

F. 2321

Hot-forgeable Brass.

The alloys of copper and zinc containing from 59 to 61 per cent. of copper are characterised by their ability to withstand hot rolling at temperatures ranging from 500° C. to 800° C. They are employed in sheet form for the sheathing of wooden ships and in bar form for the manufacture of bolts, fastenings, etc. They are forgeable under the drop hammer and, hence, are frequently used in the manufacture of stampings. In this last connection it is particularly noteworthy that constancy of composition must be attained, on account of the large variations in machining properties accounted for by small changes in the copper content. The alloys in the range 57 to 63 per cent. of copper are forgeable, though not capable of withstanding rolling, in the temperature range already stated, and may be considered here.

All the above alloys are retained in a harder, stronger, and less ductile condition if quenched from temperatures between 750° C. and 800° C. than if allowed to cool slowly. They are liable to spontaneous cracking if worked at temperatures below 600° C., which liability, if thought to be inherent, can be lessened if the alloys are annealed at temperatures between 200° C. and 300° C., subsequent to working. The best temperatures for annealing, with a view to reducing variations in the mechanical properties due to variations in the mechanical and thermal treatment, are below rather than above 650° C. The temperature range (750° C.–800° C.) is, according to Stead, a dangerous one in which to conduct the annealing of hot-forgeable brass.

The average mechanical properties of fully annealed cast 60/40 brass are as follows :—

Yield point . . .	10 tons per sq. in.;	Elongation . . .	35 per cent.;
Maximum stress .	25 ,, ;	Hardness (Brinell) .	85.

Drawn rod of 60/40 composition is obtainable having the following average mechanical properties :—

Yield point .	28 tons per sq. in.;	Elongation . .	20–30 per cent. on 2 ins.;
Maximum stress .	32 ,, ;	Hardness (Brinell)	140.

The last factor appears to be dependent on the diameter of the rod in question, being least when the diameter of the rod is greatest. On account of the almost infinite variety of hot- and cold-working possible in the treatment of these alloys almost infinite variations in mechanical properties are obtainable.

Effect of certain Metals on Brass.

TIN.

Naval Brass.

Tin raises the tenacity, increases the hardness and resistance to corrosion and lessens the elongation of the 60/40 alloy, to which it is added commercially to make Naval brass. The latter contains 60–62 per cent. copper, 1–1½ per cent. tin, and the rest zinc. Not more than 2 per cent. of tin should ever be present; 4 per cent. induces great brittleness.

IRON.

Iron increases the tenacity and hardness of brass. The difficulty of dissolving iron in brass was first overcome by a special process, the invention of Dick (see also p. 2323), whose alloy, generally containing 55–57 per cent. copper, 42 per cent. zinc, 1–2 per cent. of iron and traces of phosphorus, is well known.

Iron is now generally added to brass in the form of ferromanganese, an alloy of iron and manganese which is readily dissolved in molten brass.

MANGANESE.

Manganese 'Bronze.'

Manganese is added to brass with a view to improve the mechanical properties of the same. The resulting alloys are divisible into two classes.

(*a*) Alloys in which either no manganese or traces only of manganese are present, i.e. alloys to which the element has been added for purposes of deoxidation.

(*b*) Alloys in which appreciable quantities of manganese are retained in solution. These may be subdivided into (i) such as are suitable for rolling into rod and containing up to 0·05 per cent. of manganese, and (ii) such as are suitable for casting and containing less than 60 per cent. of copper, and up to 2·0 per cent. of manganese.

The manganese is introduced into the alloys by the addition of ferromanganese or cupro-manganese.

These alloys are forgeable when heated to temperatures above 750° C. They resist the corrosive action of sea water, and are employed in the manufacture of ships' propellers. Iron, aluminium and tin are generally present in manganese 'bronze.'

The analyses of the alloys known under this name are varied in accordance with the character and nature of the purpose for which they are combined, and as the results depend entirely upon

expert treatment in handling, we have obtained through the courtesy of the Manganese Bronze and Brass Co., Ltd., London, the tests on manganese bronzes recorded below.

TESTS OF MANGANESE BRONZE (CARRIED OUT BY MESSRS. BURSTALL & MONKHOUSE AT THEIR LABORATORY IN WESTMINSTER.)

STEAM CASTINGS—FOR SUPERHEATED STEAM.

Test.	Maximum Stress Tons per sq. in.	Yield Point Tons per sq. in.	Elongation in 2 ins. Per cent.
Immadium Alloy			
Cold Test	36·0	17·0	15·0
Temperature Test 500° F.	23·5	9·5	22·5
Gun-metal (for comparison)			
Cold Test	16·5	9·25	15·0
Temperature Test 420° F.	14·0	3·50	11·0

NOTE.—The Immadium temperature test pieces were maintained at a temperature of 500° F. for two hours before test was carried out, and the yield point is assumed to be reached when a permanent set of 0·003 in. on a length of 2 ins. is obtained. In Immadium the elongation is increased at high temperature, while a reduction is shown in gun-metal.

VALVE SPINDLES AND PUMP RODS.

Diameter of test piece, 0·563 in. (Steel), 0·550 in. (Immadium).
Length of parallel part, 10 ins. „ 10 ins. „

Torsion Test.	Actual Twisting moment in inch tons.		Stress per sq. in. on Outer Fibre.	
	At Limit.	At Break	At Limit.	At Break
			Tons.	Tons.
Immadium Alloy	0·345	1·105	10·61	33·89
Steel Test (for comparison)	0·375	1·07	10·71	30·59

Tensile Test.	Quality.	Tensile Strength per sq. in.	Elastic Limit per sq. in.	Elongation. in 2″
		Tons.	Tons.	Per cent.
Immadium Alloy (Hot rolled or forged)	No. I. High	40	20	20 to 25
	No. II. Medium	37	18	25 to 30
	No. III. Mild	34	17	30 to 35

SOLID DRAWN TUBES AND CYLINDER CASTINGS.

Test.	Diameter.	Thickness.	Test Pressure.
Pressure.	Ins.	Ins.	Lbs. per sq. in.
Parsons No. 1 Alloy Solid Drawn Tubes	1·625	$\frac{3}{16}$	10,000 without leakage.
Parsons No. 2 Alloy Cylinder Castings.	Tested satisfactorily up to		8,000 „ „
Parsons No. 2 Alloy Recoil Cylinder Castings	„	„	6,500 „ „

NOTE.—Ultimate tensile strength of above mentioned alloys—from 30 to 34 tons per sq. in. Yield point 15 to 20 tons per sq. in., elongation 20 to 30 per cent. in 2 inches.

TESTS OF MANGANESE BRONZE (*continued*).

GENERAL CASTINGS—HEAVY.

Test.	Maximum Stress Tons per Sq. In.	Yield Point. Tons per Sq. In.	Elongation in 2 Ins. per Cent.
Turbadium	42	19 to 20	15 to 18
Immadium alloys	33 to 37	17 ,, 19	15 ,, 21
Parsons No. 1 alloy	32	16	15 ,, 25

CROTORITE BRONZE.

This new alloy is one of The Manganese Bronze & Brass Co.'s specialities, is zinc free, of steel-like qualities, and particularly recommended for bars and forgings subject to corrosion and high temperature.

Tests—500° to 600° F.—18–20 tons elastic limit, 30–32 tons maximum stress, 20–30 per cent. elongation; with no loss of physical properties after prolonged heating; and at 800°F. the elastic limit is 17 tons [illegible]".

As a casting alloy the physical tests are more than double cast gun-metal.

DELTA BRAND ALLOYS.

The metals and alloys sold by the Delta Metal Co., Ltd. (of London and Birmingham), under their registered trade-mark 'Delta,' are employed for a very great variety of purposes, the composition varying widely according to the requirements and purposes for which each of these metals or alloys is more particularly adapted. Some of them are based upon the introduction and chemical combination of definite quantities of iron and other elements in copper-zinc alloys. The effect of iron on brass has already been noted; the difficulty of introducing it in definite quantities was first overcome by the late Mr. Alexander Dick, the founder of the Delta Metal Co., Ltd., who adopted the name 'Delta' (the Greek equivalent of the initial letter of his name) as a trade-mark. In most of the alloys which may be classed under the 'Brasses,' the copper content lies between 57 and 62 per cent., that of zinc between 42 and 38 per cent., whilst some contain iron, phosphorus, manganese, or other metals, up to a total of about 2 per cent.

The following alloys, designated by the trade name 'Delta,' and manufactured by the Delta Metal Co. Ltd., find wide application.

Delta Bronze Nos. I and IV are practically incorrodible, and consequently of very great durability, even when used in strongly corrosive mine-waters, etc.; they are not attacked by sea-water, and resist acids much better than other copper alloys. On account of their great strength and resistance to corrosion, these alloys are largely used for parts of marine engines and mining and hydraulic plant which require a strength not less than that of the best steel, but at the same time freedom from corrosion—such as pump rods, piston rods, shafts, cranks, plungers, spindles, rams, etc. For propellers and propeller blades, Delta bronze is in great demand, and it is also successfully used for parts of ordnance, etc.

These alloys are malleable bronzes of very great strength, exceeding, even in the cast state, the strength of mild steel. They can be cast with facility, and will produce perfectly sound and homogeneous castings. When heated to a dull red heat, they become soft and highly malleable, and can then be readily forged, stamped, rolled, or pressed, to any extent required. These operations increase the strength considerably, as will be seen by the following copies of tests.

Description of Metal.	Diameter. In.	Area. Sq. in.	Ultimate Strength. Tons per sq. in.	Elongation in 2 ins. Per cent.	Reduction of Area. Per cent.
		Delta Bronze, No. I.			
Cast	0·500	0·1963	41·30	20·0	20·4
Extruded bars	0·502	0·1979	49·82	26·0	24·9
		Delta Bronze, No. IV.			
Cast	0·611	0·293	23·89	21·0	20·1
Extruded bar	0·500	0·1963	37·1	27·0	20·0

Extrusion Process.

The process of extruding copper and its alloys, the invention of the late Mr. Alexander Dick, developed and worked by the Delta Metal Co., Ltd., of London and Birmingham, under numerous subsequent new patents and improvements, consists of the pressing or squeezing of heated metals through dies of any desired cross section, by hydraulic pressure varying according to the section to be produced and the character of the metal operated upon.

Dick's extruded bars have a perfectly smooth and uniform surface, free from cracks or other defects; size and shape are of the greatest accuracy, and owing to their superior finish, machining is reduced to a minimum. The Company are able to produce extruded rods as ordinary round or pinion wire weighing a fraction of a pound per foot per run, to heavy round, square or hexagon rods, or other sections, more or less complicated, weighing as much as half a cwt. and over per foot. The facility of manipulation ensures rapid output, so that sections not regularly kept in stock can be supplied at very short notice.

The Delta Metal Co., Ltd., are not only the original, but claim to be also the largest manufacturers of extruded rods and sections. They supply these in various metals and alloys: in 'Delta' bronzes Nos. I, II, IV, and VII, Heagard bronze, manganese and aluminium bronze, brass, yellow metal, naval brass, etc.

They make a speciality of high-speed turning and screwing brass ('Delta' Brand and 'Dixtrudo' Brand) in every variety of shapes and sections. This material, like the stampings and pressings in brass, bronze, and copper made by the Delta Metal Co., Ltd., is used largely for repetition work and mass production, and supersedes castings.

United Brassfounders Extruded Bars.

Extruded brass and bronze bars of all sections—i.e. round, square, hexagon, flat, angle, tee, channel, etc.—in brass, yellow metal, red metal, naval brass and bronze, copper, manganese bronze, and aluminium bronze, etc., are manufactured by *United Brassfounders and Engineers Ltd.* special care being taken to obtain uniformity of composition, close limits to size, and free-cutting qualities.

Bull's Metals.

Bull's Metals are strong, malleable alloys of good casting qualities, and equal to good gunmetal in resistance to corrosion. They are manufactured in two qualities, No. II and No. III.

Alloy No. II is suitable for founding purposes, and extensively used for propellers and propeller blades, parts of guns and gun carriages, requiring the strength of cast steel with great toughness and resistance to corrosion.

Alloy No. III is very malleable and can be rolled, forged, stamped, or otherwise wrought at a red heat; this metal also casts well. Its composition ensures great resistance to corrosion and wear. It is absolutely non-magnetic.

Rolled in round, hexagon, angle, and section bars, or into sheets and plates; forged or stamped Bull's metal is used for pump rods, centrifugal pump spindles, rams, stern shafts, sluice valve spindles, parts of marine and hydraulic machinery generally. Forged propeller blades, propeller studs and nuts. Bolts, nuts, screws, studs, and nails. Parts of torpedoes and torpedo boats, ordnance, ammunition, etc. Condenser plates, strainer plates, doctor blades. Hull plates and angles for launches, torpedo boats, yachts, sailing and rowing boats.

The elastic and ultimate resistance to tensile, crushing, and torsional stresses are greater in the case of wrought Bull's metal than in mild steel, and higher working strains may therefore be used with Bull's metal. Where resistance to the action of water or chemicals enters as an important factor, Bull's metal, whether wrought or cast, becomes specially superior to steel.

Tensile Tests of Bull's Metals.

Dimensions.	Area. square inch.	Reduction area at fracture.	Extension.	Ultimate Stress.	Remarks.
Diam. Inch.		Per cent.	Per cent.	Tons per sq. in.	
0·749	0·4406	22·1	23·6 on 8 ins.	31·41	Forged.
0·623	0·3048	37·9	3·1 ,,	39·93	Rolled, hard finish.
0·690	0·3739	37·8	29·0 ,,	35·01	Rolled, medium finish.
0·688	0·3717	30·6	29·0 on 6 ins.	31·47	Cast medium.
0·750	0·4418	24·2	22·0 on 3 ins.	38·68	Cast hard.

NICKEL.

Nickel Silver.

The alloys of copper, nickel and zinc containing from 45 per cent. to 65 per cent. of copper, 5 per cent. to 30 per cent. of nickel and 15 per cent. to 25 per cent. of zinc are of commercial importance and are classified under the general title of 'nickel silver.' The metals employed in the manufacture of these alloys must, if the same are to be used in the production of cold-worked articles, be of the highest degree of purity. For the manufacture of castings, metals of a lesser purity may be used.

Lead, tin, iron and unreduced oxides are the impurities generally present in nickel silver. Lead is occasionally added to nickel silver in quantities up to 3 per cent. when the same is to be employed for casting. Tin in quantities upwards of 2 per cent. has a hardening and embrittling effect on the alloy, while iron in similar quantity has a hardening effect only. The addition of any of these elements results in injury rather than benefit to the alloys and especially increases the corrodibility of the same.

The effect on the mechanical properties of nickel silver of almost constant copper content of increasing the nickel content has been admirably shown by Thompson (Institute of Metals, March 1916), from whose paper on 'The Annealing of Nickel Silver' the following table is taken :—

TENSILE TESTS ON CAST BARS.

Cu.	Zn.	Ni.	Mn. added.	Yield Pt. Tons per sq. in.	Maximum Stress. Tons per sq. in.	Elongation. Per cent. on 2 ins.	Reduction of area. Per cent.
60·6	31·7	7·6	—	7·16	16·88	34·5	37·2
60·2	31·8	7·8	0·25	6·60	15·28	46·5	46·9
61·8	21·7	16·4	—	9·00	17·80	39·5	32·7
61·2	23·2	15·5	0·25	8·12	18·36	39·0	45·9
61·6	15·9	22·4	—	8·52	17·20	24·5	26·7
61·6	18·5	19·8	0·25	8·24	19·36	32·5	33·5
55·7	26·7	17·4	—	9·04	17·12	33·5	37·8
54·3	29·7	15·8	0·25	8·92	16·88	38·5	40·0
56·2	27·6	16·3	1·50	9·04	17·96	44·0	41·1
61·2	9·8	28·6	—	8·76	19·72	32·0	36·7
60·4	11·4	27·9	0·25	10·32	23·68	29·0	29·7
60·9	13·2	26·7	1·50	10·88	24·16	35·0	33·1

Other results of his research show that the tendency of commercial nickel silver to 'burn' is increased (*a*) by increasing the nickel content, (*b*) as the ratio of the zinc to the copper is increased, and (*c*) with the amount of impurities present.

The following alloy is stated to be possessed of the best all-round properties :—

Copper, 46 per cent. ; Nickel, 39 per cent. ; Zinc, 20 per cent.

Platinoid.

Platinoid, introduced by Mr. F. W. Martin, is a kind of German-silver, with an addition of 1 to 2 per cent. of tungsten. The latter, in the form of phosphor-tungsten, is first melted together with a certain quantity of copper. In order to remove the phosphorus and a part of the tungsten, both of which separate dross, the resulting compound is several times remelted. Finally an alloy of a beautiful white colour is obtained, which when polished closely resembles silver, and retains its lustre for a long time. Platinoid has the properties of German-silver in a pre-eminent degree. It shows great electrical resistance, which remains almost constant at different temperatures, and is about 1½ greater than that of German-silver.

ALUMINIUM.

Aluminium Brass.

Aluminium acts as a deoxidiser and is added to cast and hot-forgeable brass, for the purpose of improving their mechanical properties, in quantities varying from 0·3 to 1·5 per cent.

Typical tests of cast aluminium brass, containing 38 per cent. of zinc, 2 per cent. of aluminium, and 2 per cent. of lead, are :—

Yield point	18 tons per sq. in.
Maximum stress	34 ,,
Elongation	12 per cent.

Melting Points of Commercial Brasses.

(*Gillett & Norton.*)

	Copper.	Zinc. (as desired).	Tin. (as desired).	Lead. (as desired).	Copper. (by analysis).	Zinc. (by analysis).	Tin. (by analysis).	Lead. (by analysis).	No. of Tests.	Melting Point.
Red brass	85	5	5	5	—	—	—	—	8	970°C.
Low-grade red brass	82	10	3	5	81·5	10·4	3·1	5·0	4	980°C.
Half yellow, half red	75	20	2	3	75·0	20·0	2·0	3·0	3	920°C.
Cast yellow brass	67	31	—	2	66·9	30·8	—	2·3	4	895°C.
Naval brass	61·5	37	1·5	—	61·7	36·9	1·4	—	5	855°C.
Manganese brass	Copper 56, Zinc 41, Iron 1·5, Tin 0·9 per cent. Aluminium 0·45, Manganese 0·15 per cent.								6	870°C.

COPPER AND TIN.

Gun-metal.

The alloys of copper and tin containing upwards of 86 per cent. of copper are possessed of high tenacity and elasticity. Those containing from 89 to 91 per cent. of copper are the most important and are known as ' gun-metals.'

The addition of tin to these bronzes results in an increase in the hardness of the resulting alloy. Gun-metal is rarely manufactured from specially selected metals and frequently contains lead, zinc, etc. The Admiralty specification for gun-metal is as follows :

Copper	88 per cent.
Tin	10 ,,
Zinc	2 ,,

the specified tests for this material being

Maximum stress	14 tons per sq. in.
Elongation	7½ per cent.

Gun-metal containing 90 per cent. of copper and 10 per cent. of tin should give the following tests :—

Yield point	7 tons per sq. in.
Maximum stress	15 ,,
Elongation	15 per cent. on 2 ins.

Bell-metal.

The alloys of copper and tin containing from 75 to 86 per cent. of copper are used in the manufacture of bells ; iron, zinc and lead are frequently added to the alloys either for cheapness or variety of tone.

Effect of Certain Elements on Bronze.

ZINC.

Gun-metal, Bearing Metal, etc.

The alloys of copper, tin and zinc are rarely, if ever, free from elements such as lead, iron, etc. These alloys may be divided into two classes :—

(i) Alloys containing from 7 to 12 per cent. of tin, up to 6 per cent. of zinc, and up to 2·5 per cent. of lead. These alloys, among which may be noted gun-metal to the Admiralty specification, are used in the manufacture of castings, such as cocks, stuffing-boxes and pump barrels, and for bearings which are subject to but little friction.

(ii) Alloys containing from 12 to 20 per cent. of tin, up to 5 per cent., though rarely more than 2·5 per cent., of zinc and up to 5 per cent. of lead. These alloys are used in the manufacture of heavy bearings, e.g. railway wagon and locomotive axle boxes. The majority of alloys of this class contain from 14 to 16 per cent. of tin and from 1·5 to 2·5 per cent. of zinc.

Zinc combines with the oxides and free oxygen of the bronzes, producing greater fluidity in the molten state, and hence freedom from ' pinholes ' in the solid state.

LEAD.

Bearing Metal, etc.

The best bronzes should contain not more than 0·15 per cent. of lead, on account of its deleterious effect on the mechanical properties of these alloys generally.

Bearing metals having a bronze matrix and containing up to 40 per cent. of lead are in common use. A usual composition for bearings of this type is :—

Copper	64 per cent.
Lead	30 ,,
Tin	5 ,,
Nickel	1 ,,

The nickel is added to prevent the liquation of the lead. It increases the rate of cooling of the alloy and thus assists in the retention of the lead in the finely divided form.

Lead does not alloy with bronze, but separates out of the molten mass, as the same cools, in the form of globules. The lead bronzes may, therefore, be considered to consist of a network of bronze whose meshes enclose the lead content of the alloys in question.

PHOSPHORUS.

Phosphor Bronze.

Phosphorus acts as a deoxidiser and is added in small quantities for the purpose of deoxidation to copper. Not more than 0·15 per cent. is allowable.

The term 'phosphor bronze' is applied to the alloys grouped below.

(i) Bronzes to which phosphorus has been added as a deoxidiser and containing either no phosphorus or merely traces of the element.

(ii) Bronzes containing less than 9 per cent. of tin and up to 0·25 per cent. of phosphorus. These alloys are forgeable and are relatively non-corrodible. They are employed for rolling and drawing into wire and rod, and in the manufacture of general castings; in the latter case lead is occasionally added in quantities up to 5 per cent. The forgeable alloys of this group generally contain less than 5 per cent. of tin.

(iii) Bronzes containing from 8 to 14 per cent. of tin and from 0·25 per cent. to 1·00 per cent. of phosphorus. These alloys are employed for casting purposes in the manufacture of machine parts likely to be exposed to great friction. Lead up to 5 per cent. is added in certain cases.

Phosphorus is added to these alloys in the form of phosphor copper or phosphor tin.

The tensile strength of phosphor bronze varies from 14 to 18 tons per square inch, and the elongation from 6 to 10 per cent.

Delta Metal Alloys.

(The Delta Metal Co. Ltd.)

Delta Bronze No. V is an improved bearing metal of great strength and durability, and comparatively low price. It is particularly suitable for reducing friction at heavy pressures and high speeds, and is used for worm wheels for large cranes and other heavy machinery, hot neck rolls, locomotive slide valves, axle box, coupling, and connecting rod bushes, railway and carriage bearings, bushes, sliding surfaces, and other parts of machinery subject to heavy frictional wear. The metal is easy to tool, and requires no special precautions in casting.

Another metal used in lieu of phosphor bronze or gun-metal is 'Delta' Bronze No. VI, which produces fine, close-grained castings of great strength.

Melting Points of Commercial Bronzes.

(Gillett & Norton.)

	Copper.	Tin. (as desired).	Lead. (as desired).	Zinc. (as desired).	Copper. (by analysis).	Tin. (by analysis).	Lead. (by analysis).	Zinc. (by analysis).	No. of Tests.	Melting Point.
Gun-metal	88	10	—	2	—	—	—	—	4	995°C.
Leaded gun-metal	85·5	9·5	3	2	85·4	9·7	3·0	1·9	6	980°C.
Leaded bronze	80	10	10	—	—	—	—	—	3	945°C.
Bronze with zinc	85	10	—	5	84·6	19·4	—	5·0	4	980°C.

COPPER AND ALUMINIUM.

Aluminium Bronze.

The alloys known as the 'aluminium bronzes' are solid solutions of copper and aluminium containing not less than 88 per cent. of copper. Of these alloys that containing 10 per cent. of aluminium is the strongest, though the alloys containing less than this percentage are of industrial importance. These 'bronzes' are of use, firstly, on account of their valuable mechanical properties and, secondly, on account of their resistance to corrosion. They are malleable both when hot and when cold; the alloys containing between 8 and 12 per cent. of aluminium are affected in a marked degree by heat-treatment.

Following are tabulated the mechanical properties of some of these alloys :—

Percentage of Aluminium.	Yield Point. Tons sq. in.	Max. Stress. Tons sq. in.	Elongation. Per cent. on 4 in.	Remarks.
2·5	—	20·0	40·	Cast.
5·0		25·0	55·	Cast.
10·0	18·0	35·0	25·	Cast in chill.
10·0	18·0	46·0	25·	Cast rod reduced 25 per cent. by forging hot. Annealed.
10·0	15·0	40·0	30·	Rolled bar.
10·0	40·0	50·0	3·	Rolled bar quenched at 900° C.

The following are tests of the 'R3' and 'R4' aluminium bronzes, manufactured by the British Aluminium Company :—

R3 Bronze.—Average breaking load, 34·04 tons ; average elongation, 21 per cent. ; maximum breaking load, 37·6 tons ; maximum elongation, 35 per cent. ; minimum breaking load, 32·8 tons ; minimum elongation, 12·5 per cent.

R4 Bronze.—Average breaking load, 41·8 tons ; average elongation, 9·75 per cent. ; maximum breaking load, 43·7 tons ; maximum elongation, 13 per cent. ; minimum breaking load, 39·8 tons ; minimum elongation, 6·5 per cent.

COPPER AND MANGANESE.

Manganese Bronze, Manganin.

The term 'manganese bronze' is applied to copper-zinc alloys of 60/40 composition to which small quantities of manganese have been added (see Manganese Bronze, p. 2321). There are, however, alloys of copper and manganese of industrial application which rightly should be admitted under this heading. The alloys of copper and manganese containing up to 5 per cent. of the latter element are harder and tougher than is copper. Those containing from 2 to 4 per cent. of manganese are frequently employed in situations where high temperatures are existent, on account of their retention of their mechanical properties under these conditions.

The following figures represent the results obtainable by stamping certain of these alloys at a red-heat (*circa* 800° C.) :—

Copper.	Manganese.	Maximum Stress.	Elongation. Per cent.
97	3	18·5	32
96	4	21·0	60

Manganin is the name applied to an alloy of copper, manganese, nickel and iron, characterised by low electrical conductivity and almost zero temperature coefficient. It is employed in the construction of electrical resistance coils. The composition is somewhat variable, but the following figures will serve to indicate its approximate analysis :—

Copper . .	80 to 84 per cent.	Nickel . . .	up to 12 per cent.
Manganese . .	4 to 15 ,,	Iron . . .	Difference.

'Stella' Alloys.

(*United Brassfounders and Engineers Ltd.*)

Under the name 'Stella,' manganese copper, ferro-zinc, manganese bronze, silicon copper, phosphor tin and copper and other special alloys are manufactured by the above Company.

'Stella' brand manganese copper is a product made by a special process which gives a thoroughly homogeneous mixture. In its preparation all impurities are removed and absolute uniformity and purity are guaranteed. The manipulation of manganese bronze castings is greatly facilitated if the manganese is introduced in the form of manganese copper, instead of ferro-manganese, owing to the fact that manganese copper melts at a lower temperature than copper, consequently overheating during alloying is impossible and uniformly good results are secured, whereas ferro-manganese will only melt at a temperature considerably above the melting point of cast iron, and in order to alloy same in the manufacture of manganese bronze a very high furnace temperature is necessary. Thus it invariably happens that the metal is considerably overheated, with the result that great harm is done to the manganese bronze, and little if any benefit is derived from the addition of the manganese.

Under the names 'Mammoth' and 'Stork' special bearing alloys are made by this firm. The 'Mammoth' alloy has great power of resistance under heavy loads, whilst 'Stork' metal is not only one of the cheapest of its kind for light work, such as bearings for line shafts, but has an exceptionally low friction coefficient. In one experiment 'Mammoth' metal withstood a maximum load of 4,355 lbs. with a temperature rise of 104° F., whilst 'Stella' metal withstood a load of 4,310 lbs. (rather less than that for the 'Mammoth'), but the temperature rise did not exceed 63° F. 'Stork' metal, although the load resistance did not exceed 3,025 lbs., had a temperature rise of but 59° F., the temperature rise experiments in all cases being made with equal loads. Each alloy has, therefore, special features.

COPPER AND NICKEL.


Cupro-nickel, Constantan, etc.

The alloys of copper and nickel containing upwards of 50 per cent. of copper are of industrial importance. The alloys may be divided into three classes.

(i) Alloys containing up to 5 per cent. of nickel and having the property of resisting high temperatures without undue deterioration. Of these alloys those containing from 2 to 3 per cent. of nickel have been employed in the manufacture of locomotive firebox tubes. Following are the mechanical properties of the 2 per cent. alloy :—

Maximum Stress.	Elongation. Per cent.	Remarks.
45·0	5·0	Hard rolled.
30·0	45·0	Hard rolled and annealed at 650° C.

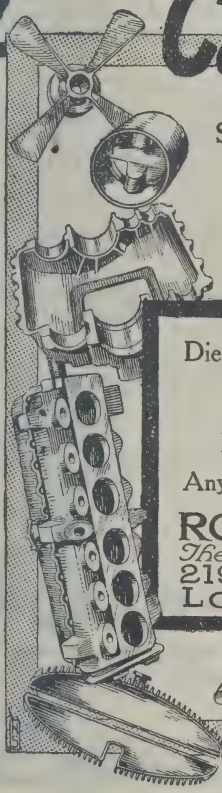Aluminium Castings




Sand Castings
Die Castings
for Motor and
Kindred Trades.

Die Pistons. Cycle Crank Cases. Gear Boxes. Chain Covers. Sand Machine Moulding.

Any size and Quantity.

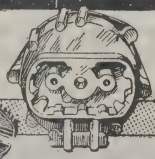ROBT. W. COAN,
The Aluminium Foundry
219, Goswell Road,
London, E.C.1.



COAN CASTS CLEAN CRANK CASES

Original maker of Cast Aluminium Number Plates for Motors.
Patentee of New 'Combine' Step-Mat and Scraper.
WRITE FOR BOOKLETS.

F. 2328

ALUMINIUM CASTINGS

OF
EVERY DESCRIPTION
SAND or DIE
FOR MOTORS
2 H.P. to 600 H.P.

Telephones
3846 CITY
4879 CENTRAL

Telegrams
KRANKASES
ISLING. LONDON

R.W. COAN
The Aluminium Foundry
219, GOSWELL ROAD
LONDON. E.C.



Original maker of Cast Aluminium Number Plates for Motors.
Patentee of New 'Combine' Step-Mat and Scraper.

WRITE FOR BOOKLETS.

Those of the 5 per cent. alloy are very similar in character.

(ii) Alloys containing from 15 to 25 per cent. of nickel and valuable on account of their ability to withstand cold working.

For the best results with these alloys only the purest metals should be employed, as small quantities of such elements as iron, silicon and sulphur are detrimental to the malleability and ductility of the resultant alloy. The maximum percentages of impurities allowable in nickel for this high-class work should be 0·050 per cent. of arsenic, 2 per cent. of cobalt, and 1·5 per cent. of other metallic impurities. The metal should be free from all unreduced oxides. Cupro-manganese, 25–50 per cent., is commonly employed as a deoxidiser in the manufacture of these nickel copper alloys, upwards of 0·25 per cent. being added to charges containing 30 per cent. of scrap. Following are the mechanical properties of the 20 per cent. alloy :—

Maximum Stress.	Elongation. Per cent.	Remarks.
40·0	5·0	Hard rolled.
20·0	35·0	Hard rolled and annealed.

The alloy containing 25 per cent. of nickel has been successfully employed in the manufacture of firebox plates.

(iii) Alloys having low electrical conductivities and whose temperature coefficients of electrical conductivity are practically nil. The 40–45 per cent. nickel alloy, known as 'constantan,' can be drawn into wire, and is employed in the construction of resistance coils and base-metal thermo-couples. Another alloy of this type, containing only 25 per cent. of nickel and 0·5 per cent. of iron, is known as 'nickeline.'

Nickel and Chromium.

Certain of the alloys of nickel and chromium now find use industrially. Of these alloys 'Nichrome,' under which trade name a number are sold, is of importance on account of its high electrical resistivity and incorrodibility. Nichrome is largely used in the manufacture of wire or electrical resistances and in the production of heat-treatment boxes, pyrometer protection tubes, crucibles, ladles, etc. Nichrome has also found use as a couple element in conjunction with Constantan (*see* above).

ALUMINIUM AND ZINC.

The alloys of aluminium and zinc are of importance as light alloys, their specific gravities varying uniformly from 2·7 to 3·3 as their zinc content increases up to 30 per cent., which may be considered the limiting percentage for those alloys of this series that may be termed 'light.' All those alloys containing upwards of 70 per cent. of aluminium are forgeable at temperatures between 300° C. and 400° C.

These alloys do not allow of their use in casting into intricate shapes, but for all plain casting purposes they are quite satisfactory. Under certain conditions these alloys corrode rapidly; the use of high-grade spelter in their manufacture eliminates this defect. The machining properties of these alloys improve as the zinc content increases.

Below are tabulated certain of the results of tests reported by Messrs. Rosenhain and Archbutt to the Alloys Research Committee of the Institution of Mechanical Engineers.

Zinc. Approx. Per cent.	Condition of Alloy.	Yield Point. Tons per sq. in.	Max. Stress. Tons per sq. in.	Elongation. Per cent. on 2 ins.
5	1	2·70	5·20	16·0
	2	2·80	6·60	29·0
	4	4·30	7·48	33·0
11	1	6·40	9·41	8·0
	2	5·00	10·24	16·0
	3	9·42	13·78	33·0 (on 1 in.)
15	1	9·60	11·14	2·0
	2	5·80	11·69	8·5
	3	11·61	17·92	31·0 (on 1 in.)
	4	6·80	16·38	33·0
20	1	10·00	13·07	0·7
	2	7·80	13·87	4·0
	4	17·30	22·64	20·5
25	1	nil	16·26	1·0
	2	9·10	13·50	3·5
	3	20·24	24·03	27·0 (on 1 in.)
	4	25·00	27·09	16·5
30	1	11·70	16·63	1·5
	2	10·30	17·92	3·0

1. Sand-casting.
2. Chill-casting.
3. Hot-rolled bars, ½ in. diam.
4. ditto 1¼ in. diam.

The addition of copper to certain of the aluminium-zinc alloys improves the mechanical properties of the same. The average results of certain tests on chill-castings of the aluminium-zinc-copper series are given below.

Zinc. Per cent.	Copper. Per cent.	Yield Point. Tons sq. in.	Max. Stress. Tons sq. in.	Elongation. Per cent.
19	1	9·5	14·9	5·5
19	2	12·5	16·5	5·7
20	2	10·4	14·0	3·3
20	3	11·5	16·8	4·5
20	4	10·4	15·3	3·8

OTHER ALLOYS OF ALUMINIUM.

Magnalium.

Magnalium is the name applied to a series of alloys having an aluminium-magnesium base, containing from 1·5 to 10·0 per cent. of magnesium and varying proportions of other elements, e.g. copper, tin, nickel, lead.

The table below gives the analyses of certain of these alloys, together with the uses to which they are generally put.

Use of Alloy.	Magnesium.	Copper.	Nickel.	Tin.	Lead.
Strong castings . .	1·60	1·76	1·16	nil	nil
General ditto . .	1·60	1·76	nil	traces	traces
Rolling and drawing .	1·58	0·21	nil	3·15	0·72

"Vickers' Duralumin."

"Vickers' Duralumin" is the trade name applied to a series of quaternary alloys of aluminium, copper, manganese and magnesium, containing over 90 per cent. of aluminium and possessed of high tenacity and hardness. The presence of magnesium confers the property of cumulative hardening on certain aluminium alloys—i.e. subsequent to suitable thermal treatment the hardness of the alloy increases slowly to a maximum, which is attained after several days.

Following are typical analyses of "Vickers' Duralumin":—

Copper.	Manganese.	Magnesium.	Silicon.	Iron.	Aluminium.
3·62	0·35	0·87	0·62	0.045	Diff.
3·00	1·00	2·00	—	1·000	Diff.
3·60	0·40	—	0·50	0·600	Diff.

The specific gravity varies between 2·77 and 2·84. The melting point is about 650° C. "Vickers' Duralumin" can be rolled, forged, and drawn when hot or cold. According to the purpose for which it may be required, the composition can be modified and the treatment so arranged that the material is susceptible to forging, rolling, and drawing, or it may be arranged that the greatest hardness, with corresponding smaller extension, can be produced. The following table gives a summary in which the properties of "Vickers' Duralumin" vary by such modifications in the composition and treatment.

Description of the Alloy.	Specific Gravity.	Yield Point. Tons per sq. in.	Max. Stress. Tons per sq. in.	Elongation. Per cent.	Contraction.	Brinell Hardness.
H	2·77	12·06	22·25	23	34	98
681d	2·84	16·5	29·20	18	26	125

These values are for soft rolled plates of 7 mm. thickness.

"Vickers' Duralumin" is supplied in sheets, bars, wires, strips, forgings, stampings, various sections and tubes.

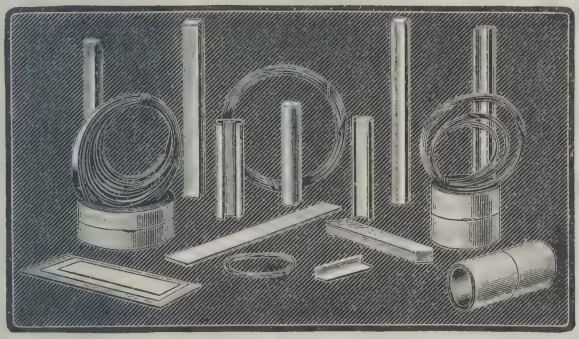
"VICKERS' DURALUMIN"

(Regd. Trade Mark)

SPECIFIC GRAVITY 2·8.

TENSILE STRENGTH UP TO 35 TONS.

AN ALLOY OF ALUMINIUM WITH THE STRENGTH AND HARDNESS OF MILD STEEL BUT HAVING ONLY ONE THIRD OF ITS WEIGHT.



It is an ideal substitute for Aluminium, Nickel Silver, Brass, Copper, Nickel-plated and Silvered Articles, and is the only substitute for Steel where Lightness combined with the Strength of that Metal is required.

For Aeroplanes, Dirigibles, Hydroplanes, Motor Car, Yacht and Boat Fittings.

For Scientific Apparatus, Instruments of precision, Orthopædic Apparatus, and Hospital Supplies, etc.

Manufacturers:

Messrs. JAMES BOOTH & CO. (1915) LTD.

ARGYLE STREET, NECHELLS, BIRMINGHAM.

Proprietors:

VICKERS LIMITED.

Head Office: VICKERS HOUSE, BROADWAY, LONDON, S.W. 1.

F. 2330

BOOKS. ✶ ✶ ✶ BOOKS

B. T. BATSFORD, LTD.,

Scientific & Technical Booksellers,

94 HIGH HOLBORN, LONDON,

HAVE

The Largest Stock in Great Britain

OF

NEW AND SECOND-HAND BOOKS

DEALING WITH

Civil, Mechanical, Electrical, and Marine Engineering, Ship Building, Mining & Metallurgy, Arts, Trades, Manufactures, Architecture and Building, &c.

Complete Sets and Portions of Sets of

SCIENTIFIC PERIODICALS AND PROCEEDINGS, TRANSACTIONS OF SCIENTIFIC SOCIETIES, &c.

The Whole on Sale at Very Moderate Prices.

THE WORKS OF ALL TECHNICAL PUBLISHERS, ENGLISH AND AMERICAN, KEPT IN STOCK.

SPECIAL ATTENTION GIVEN TO COLONIAL AND FOREIGN ORDERS.

B. T. BATSFORD, Ltd., 94 High Holborn, LONDON.

Catalogues free. Telephone: 7693 Central.

Wolframinium.

Wolframinium is an alloy of tungsten, copper and aluminium. Its specific gravity (2·74) is about the same as pure aluminium; its tensile strength cast in sand 10 tons per square inch, in chills 12 to 13 tons per square inch, forged 15 tons per square inch, rolled or drawn 15 to 20 tons per square inch. Its elongation is 3 to 5 per cent. when hard, but 10 to 20 per cent. when properly annealed. It can be worked as easily as copper, can be forged, rolled, and drawn either hot or cold, takes a high polish and does not tarnish.

Romanium.

Romanium is an alloy of tungsten, nickel and aluminium. Its specific gravity (2·75) is a trifle higher than that of pure aluminium, its melting point about the same, its tensile strength equal to that of Wolframinium, but it is much harder and is also of greater elasticity. It can be worked either hot or cold, forged, rolled, drawn, stamped, etc. etc. It is specially recommended for large castings, large plates and angle bars for shipbuilding and machinery.

BEARING METALS.*

The requisite properties of good bearing metals are hardness, to resist wear; strength, to bear compression; and plasticity, to allow of ready adjustment of the supported body on the bearing.

Two types of bearing metal are known:—

(*a*) Bearing metals in which the hard constituents of the alloy are distributed indiscriminately throughout a soft matrix.

(*b*) Bearing metals of spongy character; the network of the sponge being moderately hard and tough, the meshwork being soft and plastic.

These types can be grouped according to composition as follows:—

(i) Brasses and bronzes containing compounds of copper with tin, phosphorus, etc.

(ii) Bronzes containing appreciable quantities of lead.

(iii) Alloys having a tin base and containing compounds of tin with antimony, copper, etc.

(iv) Alloys having a lead base and containing compounds of tin with antimony, etc.

(v) General alloys possessed of the characteristics required of a bearing metal.

Of the above, types (i) and (ii) have been considered under the heading of 'Brass' and 'Bronze' (*q.v.*), types (iii) and (iv) are known as 'white' metals, while the majority of the alloys of type (v) can be termed 'white metals.' Of types (iii), (iv) and (v) it has been observed that metals whose atomic weight divided by their specific gravity gives a high number are good anti-friction metals, while the reverse is the case for metals which have a low quotient. Hence the use of lead and antimony for bearing alloys. In using white metal for bearings the best practice is to use the bearings wholly of white metal, discarding the cast-iron shells and using up the old bearings with the addition of a small further quantity of the more volatile constituents. White metal must be melted in a clean vessel and at as low a temperature as possible. Dross and scum in the metal tends to rapid heating in service. For the metals to be properly alloyed the high as well as the low melting points of these must be reached, but care must be taken not to overheat the alloy. For a thorough alloying a temperature of about 500° C. (930° F.) and less has been found to be sufficient. The molten metal should be stirred with a stick of pine, and a layer of charcoal always kept on the surface to prevent oxidation. The rate of cooling affects the size of the crystals and also the wearing quality. As a general rule cooling too slowly and pouring too cold produces a coarse crystal formation which is liable to heat quickly in use. In the case of the tin-antimony alloys it has been found that the best size for the tin-antimony compound cubes is 0·25 mm. edge. Pouring too hot on the other hand results in a soft metal. The shell should be heated to a temperature of 100° C. to 150° C. (212° F. to 300° F.) before pouring the metal into it, as this not only prevents blow-holes, but reduces the tendency of the lining shrinking away from the shell. The bearing should not be disturbed while the lining is solidifying, since vibration tends to enlarge the crystals and produce brittleness. The matrix of the lining should be just stiff enough to support the crystals, and the latter should be as numerous as is consistent with these, lying clear of each other and thereby causing brittleness. A Brinell hardness of 23·5 for an alloy with a lead base and 30 for a tin base has been found to give excellent results.

* See also Bearing Pressures, page 897.

ALLOYS HAVING A TIN BASE.

Tin-Antimony Alloys.

These alloys, which are of type (*a*) above, are the basis of Britannia metal. The following table indicates the uses of certain of these alloys.

Tin.	Antimony.	Use of Alloy.
86	14	For seats of stop-cocks.
80	20	For plugs of stop-cocks.
79	21	Metal for bearings.
67	33	Very hard alloy, which forms the extreme limit of the ordinary tin-antimony alloys (*Hiorns*).

Babbitt, Genuine.

This alloy, whose composition is as follows,

Tin, 83·3 ; Antimony, 11·1 ; Copper, 5·6 ;

is used on important bearings under heavy loads, such as crank-shaft, crank-pin and cross-head pin journals. Closely similar alloys are employed for the axleboxes of the leading railways of the world. Several of the French railways, however, use the following alloy, which is lower in tin.

Tin, 67 ; Antimony, 22 to 11 ; Copper, 11 to 22.

Babbitt Metal, General.

In cast-iron boxes, for light work: 50 parts tin, 5 parts antimony, 1 part copper ; for heavy work : 46 parts tin, 8 parts antimony, 4 parts copper. In brass boxes: 64 parts copper, 8 parts tin, 1 part zinc. The bearing to be lined with the metal is first tinned with the Babbitt metal mixed with twice its weight of tin.

Babbitt Metal, Plastic Metal, and Phosphor Bronze.

(*The Delta Metal Co. Ltd.*)

These metals are supplied by the Delta Metal Co. Ltd., in various grades ; phosphor bronze is supplied in three qualities, A, B and C. The A quality is a hard bearing metal specially suitable for worm-wheels, bushes, crank pins, bearings, etc. ; B quality phosphor bronze is a bearing metal more suitable for general purposes, whilst the C grade is adapted for large pinions, worms, etc. The Co. also supply various grades of Babbit, plastic, and other lining metals, for various speeds and pressures.

Admiralty White Metal.

Tin, 86·0 ; Antimony, 8·5 ; Copper, 5·5.

ALLOYS HAVING A LEAD BASE.

Lead-Antimony Alloys.

These alloys should not contain more than 18 per cent. of antimony if they are not to be brittle. Such as do contain upwards of 18 per cent. of antimony must be given suitable support. The following table indicates the increase of Brinell hardness numbers of these alloys with increase of antimony.

Antimony. Per cent.	Brinell Hardness Number. 10 mm. 100 kilos.
2	9 approx.
5	12 ,,
10	16 ,,
15	17 ,,
20	21 ,,

The 25 per cent. antimony alloy is used by the Eastern Railroad of France as a lining for cross-head slides, rod brasses and axle-bearings.

'Magnolia.'

Lead, 80; Antimony, 14; Tin, 6.
Lead, 79; Antimony, 20; Tin, Copper, etc., 1.

Other Ternary Alloys having a Lead Base.

Following is a list of ternary alloys of lead, tin and antimony, showing the mechanical properties of the same :—

No.	Lead (by difference).	Tin.	Antimony.	Yield Point. Tons per sq. in.	Tenacity. Tons per sq. in.	Elongation per cent. $l = 4\sqrt{a}$	Compression. Load in Tons required to compress to Half Length.	Brinell Hardness Number. 10 mm. ball. 200 kilos.
1	88·0	4·1	7·9	2·14	2·41	1·5	12·7	15·2
2	86·5	8·6	4·9	2·14	3·22	3·0	N.O.	15·1
3	81·8	13·1	5·1	2·68	3·35	2·0	N.O.	16·7
4	76·8	14·8	8·4	2·81	3·08	1·0	N.O.	18·0
5	72·6	22·1	5·3	N.O.	2·41	—	8·9	16·8
6	65·7	28·7	5·6	2·95	3·75	1·5	N.O.	15·1
7	85·2	4·6	10·2	4·01	6·17	10·5	12·6	23·2
8	82·0	8·9	9·1	3·86	6·43	13·0	11·0	25·4
9	75·1	14·7	10·2	3·75	6·43	5·5	N.O.	26·4
10	71·0	18·6	10·4	4·01	5·09	1·5	9·0 C.	23·2
11	66·8	23·0	10·2	3·75	5·36	1·0	N.O.	24·0
12	79·6	4·5	15·9	3·08	5·22	4·0	N.O.	25·6
13	77·1	8·6	14·3	Broken in machining			11·6	31·0
14	66·4	19·0	14·6	3·48	5·36	—	10·7 S.O.	32·0
15	66·0	18·9	15·1	3·48	5·36	1·5	9·7 S.O.	27·6
16	70·1	4·6	25·3	Broken in machining			12·5 S.O.	26·6
17	68·8	9·1	22·1	4·55	4·55	—	9·8 *	37·0
18	64·1	13·9	22·0	4·28	5·09	—	10·0 *	35·6
19	72·2	4·5	23·3	3·48	3·48	—	8·8 *	27·8
20*	65·0	10·0	25·0	Broken in machining			8·3 *	33·6
21	64·2	5·9	29·9	3·75	5·62	1·0	6·5 *	28·8

N.O.—Not observed. C.—Cracks in compression test-piece.
S.C.—Slight cracks in compression test-piece. * Failed without compression to half length.

The results contained in this table are considered sufficient to merit the following conclusions: (1) that the effect of the presence of the tin-antimony compound in these alloys is such as to render the same brittle and weak; (2) that the general mechanical properties of the lead-tin-antimony alloys containing less than about 15 per cent. of tin are improved by the addition of antimony in quantities not exceeding about 10 per cent.

Hughes recommends the following alloy for metallic packings :—

Lead, 70; Antimony, 13; Tin, 17;

while the following alloys are used as lining by the Eastern Railroad of France :—

	Lead.	Antimony.	Tin.
1	70	20	10
2	80	8	12

1. For eccentric straps and bronze slide valves.
2. Special alloys for metallic rod packing.

Ternary alloys of lead, antimony and copper are also in use. These alloys should contain from 15 to 25 per cent. of antimony and not more than 10 per cent. of copper.

Anti-Friction Alloys.

(The Delta Metal Co. Ltd.)

Delta White Antifriction Metals, Nos. IX and IXa, are used for lining bearings, bushes, etc., and are particularly suitable for heavy bearings such as those of marine engines, for railway trucks, dynamos, etc., as they do not wear, heat, or cut the journals; they are also cheap.

The application of the metals presents no difficulties whatever; the parts required to be lined should be thoroughly cleaned, and when the metal is melted (which may be done in a ladle, over a slow fire, taking care not to overheat it) it is applied in the usual way. The melting point is about 450°C.

Richards' Plastic White Metal.

The chief qualities and advantages of this metal are durability, adhesiveness, self-tinning and antifrictional properties, minimum of contraction and linear expansion when passing from the plastic to the solid state.

This alloy can be applied to many kinds of metals, including gun-metal, steel, wrought and cast iron, also aluminium, by its own self-adhesiveness, and when properly applied no abrasive force will remove it, thus dispensing with the trouble and expense of recessing or pegging, an important matter when time for repairs is limited.

It can also be used for lining up worn parts of machinery in addition to bearings. It has a low coefficient of friction, thus saving very considerably on the cost of lubrication.

Even should lubrication be neglected for a period, the metal will not run out of the bearing, but being of a plastic character, when it becomes over-heated, will simply deposit from one place to another, and thus solidify itself when in contact with lower temperatures surrounding the body of the bearing. By this means it also prevents the possibility of cutting the crankshaft or other parts that may come in contact with it.

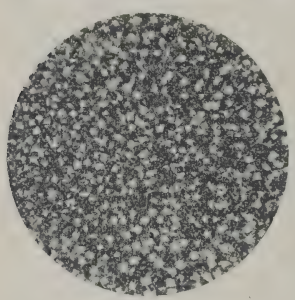


Fig. 42.—Micrograph of Richards' Plastic Metal (Magnified 50 Diameters).

The metal being self-tinning, no tinman's solder or tin is required to first coat the parts to be relined.

Its specific gravity being as much as 33 per cent. lighter than a lead basis alloy, less weight of metal is necessary for lining.

The metal itself has a particularly fine structure, which is attained by a special process of alloying. This structure is not affected by reheating, during its period of use, or when remelting, unless an exceedingly high temperature is attained. It can therefore be used over and over again.

This plastic metal has been extensively used for motor transport engines, aero engines, stationary engines, and pump work, for lining up bearing shells, and for die casting. It is particularly suitable for this last purpose. In order to produce solid die castings it is essential that the metal should be cast under pressure at a low temperature so as to preclude, by the retention of the metal as a solid rather than a fluid, the possibility of air holes and segregation of the alloy.

Richards' Plastic White Metal lends itself to these conditions. After prolonged trials it has been found that bearings made by this process are eminently suited to the onerous duties to which aircraft bearings are subjected.

The manufacturers of this alloy and bearings are Messrs. J. H. Richards & Co. Ltd., Cato Street North, Saltley, Birmingham.

Hoyt's Metals.

(*The Hoyt Metal Co. of Great Britain, Ltd., Deodar Road, Putney, S.W.* 15.)

Hoyt's Standard Babbitt or Anti-friction Metals are made in eight qualities, this range being sufficient to meet the conditions in every class of machinery. The two highest qualities are 'Number Eleven' Alloy and the I.C.E. ('Internal Combustion Engine') Brand.

'Number Eleven' Alloy was, during the war, largely used for the bearings of aircraft engines, nearly 800 tons being supplied in 1918 for this purpose alone. This metal is also stated to give excellent results in the bearings of automobile engines, marine petrol and oil engines, steam turbines, marine steam engines, Diesel engines, etc. Its specific gravity is 7·34, the weight per cubic inch being ·263 lbs. Approximately 100 lbs. of 'Number Eleven' Alloy will go as far as 113 lbs. of a high-grade metal of, say, 8·5 specific gravity.

'Number Eleven' Alloy is in use by the British Admiralty for certain important work. It is of higher quality than the Air Ministry's *Specification L.* 9 for Anti-friction Metal for Aviation Engines.

The I.C.E. ('Internal Combustion Engine') Brand has been used extensively for many years by British and Continental motor-car manufacturers. It was used during the war by the British Army Mechanical Transport, the I.C.E. Brand being adopted as standard after many tests. The metal is largely used for high-speed steam engines, locomotives, steam pumps, marine engines, air compressors, etc.

The Hoyt Metal Company supply their various metals also in the form of die-cast bearings which are true to ·001 in., having a good finish, and are ready to fit, machining being unnecessary.

The Hoyt Metal Company publish a set of notes on the subject of white metalling; these can be obtained on application.

Miscellaneous Metals for Bearings and Engine Parts.

The following special mixtures are stated to be satisfactory for the duty mentioned :—

For Lining.	Tin.	Lead.	Zinc.	Antimony.	Copper.	Bismuth.
Dynamos—high speed	88	—	—	8	3·5	0·5
Marine engines	77	17	—	3	3	—
Eccentrics	5	78	—	15	2	0·25
Submerged bearings	40	48	—	10	2	—
Main bearings	34	44	—	16	6	—
Slides, thrusts	63	—	30	2·5	2·5	—
Railway trucks	42	—	56	—	2	—
Axle-boxes (by analysis)	74·22	13·50	1·80	6·55	3·60	—
Loco and carriage bearings (Italian Railways)	38	37	—	25	—	—
Carriage bearings (German Railroad)	20	60	—	20	—	—
Bearings for rock-breaking machinery	10	—	80	10	—	—
Loco. bearings (A. Allan & Sons)	5·5	35	—	—	59·5	—
Cross-head slides and rod bearings (Eastern Railway, France)	0	65	—	25	10	—
Axle bearings and connecting rods for heavy engines (Eastern Railway, France)	83·3	—	—	11·12	5·5	—
Eccentric straps and slide valves (Eastern Railway, France)	10	70	—	20	—	—
Passenger and freight car bearings (A. Allan & Sons)	4·5	45	—	—	50·5	—
Loco. bearings (Dewrance)	33	—	—	45	22	—
Loco. and wagon axle boxes (Fenton's alloy)	14·5	—	80	—	5·5	—
Bearings, sleeves, slides and guide gibs (U.S. Navy)	12·5 to 14·5	1	2·5 to 4·5	—	82 to 84	—
Pivot bearings (Hoyle's alloy)	46	42	—	12	—	—
Lining, bearings and crank pin bearings (moderate speed) (Parsons' white brass)	68	0·5	30·5	—	1	—
Metallic rod packing (Eastern Railway, France)	12	80	—	8	—	—
Piston packing rings	—	50	—	—	50	—
	13	1	1	—	85	—
Pump and pump chambers and gun-metal valves	10	1·5	1·5	—	87	—
Cog wheels	9	25	—	—	56	—
	10	10	—	—	80	—
Anti-acid metal (by analysis)	78·84	14·75	—	Trace	3·70	—
Plastic metal	80	10	—	1	8	1
Genuine Babbitt (hard)	80	—	—	10	10	—
" " (No. 2)	83	—	—	9	8	—
Universal bearing metal	6	78	—	16	—	0·25
Anti-friction castings	24	—	80	—	4	—
Bearings for high-speed machines	—	—	14 to 18	—	82 to 86	—
" " "	17	—	—	77	6	—
" " "	18·5			76	5·5	

ZINC-TIN ALLOYS.

Zinc and tin form a series of eutectiferous alloys, some of which are of value as bearing metals. The alloys, in common with all bearing metals, are very susceptible to differences in casting

temperature, as may be gathered from the following table, which gives in detail the effect of varying the temperature of casting an alloy of 70 per cent. of zinc and 30 per cent. of tin :—

Casting Temperature.	Maximum Stress.	Elongation. Per cent.	Stress to compress to half length.
525° C.	5·09	3·0	7·7
500° C.	6·17	3·0	13·6
475° C.	6·56	8·0	15·4
450° C.	7·37	17·5	14·8
425° C.	7·37	35·5	15·0
400° C.	7·24	20·0	15·8

The above figures are for chill castings.

The alloys of zinc and tin containing from 25 to 75 per cent. of zinc possess, when in the chill cast condition, tenacities varying from 6·0 to 6·5 tons per square inch, percentage elongations varying from 30 to 45, and are compressible to half-length under stresses (calculated on the original areas of the test-pieces) varying from 13 to 17 tons per square inch. The eutectic melts at about 200° C. and contains 16 atomic per cent. of zinc.

In order that these alloys may approximate more closely to type A (*q.v.*) bearing metal, the zinc-tin series containing no relatively hard constituent, copper and antimony are frequently added. The addition of one or both of these constituents results in the formation of a bearing metal in which the hard compounds of antimony and zinc, etc., are indiscriminately distributed throughout the eutectiferous matrix. The following are analyses of certain alloys of this type :—

Zinc.	Tin.	Copper.	Antimony.	Use of Alloy.
80	14·5	5·5	—	Fenton's alloy for locomotive axle-boxes.
69	26·0	5·0	—	Propeller bush.
88	2·0	8·0	2·0	Bearing metal for general use.

In this connection it may be noted that ternary alloys generally are far preferable to complicated mixtures and usually fulfil all the requirements of good bearing metals.

A French report on new anti-friction metals includes trials of alloys consisting chiefly of aluminium, cadmium, magnesium, and especially of zinc. Such alloys were designed to reduce as far as possible the use of copper, tin, lead, and antimony, and the most satisfactory results are stated to have been given by a compound of 63·3 per cent. of zinc, 21·3 per cent. of tin, 12 per cent. of lead, and 3·3 per cent. of copper.

FUSIBLE METALS.

With the following combinations of metals, which form ' eutectiferous ' alloys, it is possible to prepare an alloy having a melting point lower than that of any member of the series.

Series.	Alloy with Lowest Melting Point (Eutectic).	Melting Point.
Bismuth-lead	57·4 per cent. Bismuth	124·5° C.
Bismuth-tin	56·7 „ „	137° C.
Bismuth-cadmium	60 „ „	146° C.
Cadmium-tin	52 „ Cadmium	177° C.
Lead-tin	36·5 „ Lead	180° C.
Cadmium-lead	17·4 „ Cadmium	247·3° C.

By the addition of one or both of the residual metals to any of the above combinations, systems of ternary and quaternary alloys, having individual members with melting points lower than those of all other members of these systems and less than those of the eutectics given above, may be obtained. These ternary and quaternary alloys are the true 'fusible metals.'

The alloys of lead, tin and bismuth are of value for the following purposes :—

(i) The manufacture of casts of delicate objects that would be damaged if subjected to high temperatures. The following alloys are recommended for this purpose :—

Bismuth	59·2	50·0	50·0	50·0
Lead	27·3	31·2	30·0	25·0
Tin	13·5	18·8	20·0	25·0

These alloys expand considerably on cooling and are valuable also for the taking of impressions from dies, medals, etc.

(ii) Fusion pyrometers. Parkes and Martin recommend the following fusible metals as pyrometers for the tempering of steel tools. The article to be treated is placed on a plate of the alloy, which is heated till it melts. The tool, being then in the required condition, is quenched in water.

TABLE OF MELTING POINT OF BISMUTH-LEAD-TIN ALLOYS.

Bismuth.	Lead.	Tin.	Melting Pt.	Bismuth.	Lead.	Tin.	Melting Pt.
50·0	31·2	18·8	94° C.	16·6	33·2	50·2	158° C.
47·0	35·5	17·7	98° C.	16·0	36·0	48·0	155° C.
42·1	42·1	15·8	108° C.	15·3	38·8	45·9	154° C.
40·0	40·0	20·0	113° C.	14·8	40·2	45·0	153° C.
36·5	36·5	27·0	117° C.	14·0	43·0	43·0	154° C.
33·3	33·3	33·3	123° C.	13·7	44·8	41·5	160° C.
30·8	38·4	30·8	130° C.	13·3	46·6	40·1	165° C.
28·5	43·0	28·5	132° C.	12·8	49·0	38·2	172° C.
25·0	50·0	25·0	149° C.	12·5	50·0	37·5	178° C.
23·5	47·0	29·5	151° C.	11·7	46·8	41·5	167° C.
22·2	44·4	33·4	143° C.	11·4	45·6	43·0	165° C.
21·0	42·0	57·0	143° C.	11·2	44·4	44·4	160° C.
20·0	40·0	40·0	145° C.	10·8	43·2	46·0	159° C.
19·0	38·0	43·0	148° C.	10·5	42·0	47·5	160° C.
18·1	36·2	45·7	151° C.	10·2	41·0	49·5	161° C.
17·3	34·6	48·1	155° C.	10·0	40·0	50·0	162° C.

(iii) Soft solders. For the union of metal to glass, e.g. in the manufacture of paraffin lamps, the following alloy has been suggested :—

Lead, 40·0 ; Bismuth, 33·4 ; Tin, 26·6.

(iv) Fusible plugs.

The above alloys are nearly all of a brittle character. For the manufacture of ductile fusible alloys the use of cadmium in place of bismuth is recommended.

The following table includes the best known of the other fusible metals :—

Alloy.	Cadmium.	Lead.	Tin.	Bismuth.	Melting Pt.
Fusible alloy . .	12·5	25·0	12·5	50·0	55·5° C.
Lipowitz's alloy .	10·0	26·6	13·3	50·0	60–68° C.
Woods' alloy . .	15·4	30·8	15·4	38·4	71° C.
Fusible alloy . .	34·5	27·5	10	27·5	75° C.
,, ,, . .	6·2	34·5	9·3	50·0	77° C.
,, ,, . .	25	25	50	—	86° C.
,, ,, . .	16·6	—	33·3	50·1	95° C.
,, ,, . .	11·1	—	33·3	55·6	95° C.
,, ,, . .	25	—	25	50	95° C.

Spence's Metal.

This compound is obtained by melting the three sulphides of iron, zinc and lead with sulphur. The product is a dark grey mass of great tenacity, small power of conducting heat, a specific gravity of 3·4, a melting point of 160° C. In congealing it expands like bismuth and type metal, and resists in a remarkable degree the action of atmospheric influences, alkalies and acids, even of aquaregia, its surface scarcely being affected after having been exposed to the action of the latter for four weeks. Its property of expanding in congealing, and therefore filling completely all depressions of the mould, makes it particularly available for castings. If the compound is poured on a plate on which the impression of the hand has been made, the cast will show all the lines and the pores of the palm.

It has been used for jointing gas and water pipes.

For further particulars see Patent Specification No. 2706, 1879.

Type-Metal.

Metal.	Parts.								
	Lead.	Anti-mony.	Tin.	Copper.	Zinc.	Nickel.	Cobalt.	Bis-muth.	Alu-minium.
Ordinary . .	75–80	20–25	..	0·4					
French . .	55	30	15						
English, No. 1 .	55	22·7	22·3						
,, No. 2 .	61·3	18·5	20·7						
,, No. 3 .	69·2	19·5	9·1	1·7					
Ehrhardt's, No. 1	3	..	4	4	80				
,, No. 2	2	..	3	2	93				
Besley's . .	100	30	20	8	..	8	5	2	
Cambrien's . .	..	..	..	50	..	..	..	..	10

Non-Magnetic Alloys.

These alloys are used as substitutes for steel wherever it is employed in the works of watches. The composition of the alloys varies from 45 to 75 parts of palladium, 15 to 30 parts of copper, 20 to 25 parts of silver, with sometimes the addition of small proportions of iron, steel, nickel, gold and platinum. These alloys are claimed to be unoxidisable in moist air, to preserve their elasticity indefinitely, not to vary sensibly with changes of temperature, and to remain uninfluenced by proximity to dynamos.

Another non-magnetic alloy, recently brought out by Messrs. Ostermann & Lacroix, of Geneva, Switzerland, is made of from 30 to 40 parts of gold, 30 to 40 parts of palladium, 0·1 to 5 parts of

rhodium, 10 to 20 parts of copper, 0·1 to 5 parts of manganese, and the same proportions of silver and platinum. The copper and manganese are first mixed, after which the other articles are added; or all the metals may be put into a crucible at the same time, the manganese being used for the bottom layer.

A non-magnetic variety of 'Bull's Metal' is manufactured and sold as No. III. and is being adopted for funnels and other erections of warships where the material must possess the mechanical properties of steel without its magnetic influence.

The Delta Metal Co. Ltd., supply under their "Delta" Brand non-magnetic metals (bronze and brass) to meet special requirements.

GENERAL ALLOYS.

Alloy.	Copper.	Zinc.	Tin.	Nickel.	Lead.	Antimony.	Bismuth.
Babbitt's metal	3·7	..	89	..	..	7·3	
Bell metal (bronze)—							
Musical bells	87·5	..	12·5				
Gongs	81·6	..	18·4				
House bells	77	..	23				
Church bells	69	..	31				
" "	80	5·6	10·1	..	4·3		
Brass, red	87	13					
" common	75	25					
" wire	67	33					
" yellow, fine	66	34					
" Muntz metal	60	40					
" sheathing metal	56	45					
" red	86	11·1	2·9				
" rolled	74·3	22·3	3·4				
" white	69·8	25·8	4·4				
" yellow	67·2	31·2	1·6				
" statuary	91·4	5·5	1·4	..	1·7		
Britannia metal	..	..	25	..	..	25	
When fused, add	..	..	..	..	..	25	25
Bronze, gun-metal, small	93	..	7				
" medals	93	..	7				
" mathematical instruments	92·2	..	7·8				
" gun-metal, large	90	..	10				
" wheels, valves	90	..	10				
" machinery bearings	87·5	..	12·5				
" lathe bushes	80	..	20				
" telescope mirrors	66·6	..	33·4				
" rivets	64	..	36				
" very tenacious	88·9	2·8	8·3				
" common	84·3	5·2	10·5				
" " hard	79·3	6·4	14·3				
" machinery bearings, hard	77·4	7	15·6				
" speculum metal	50	21	29				
Chinese white copper	40·4	25·4	2·6	31·6			
German-silver	33·3	33·4	..	33·3			
Alloy that expands in cooling	..	..	..	..	75	16·7	8·3
Pewter, best	..	..	86	..	..	14	
" common	..	..	80	..	20		
Printing type	..	..	..	..	80	20	
Type and stereotype plates	..	..	..	..	69	15·5	15·5
White metal	7·4	7·4	28·4	..	..	56·8	

SOLDERS AND SOLDERING.

The following notes are published with the kind permission of the Editor of 'The Metal Industry.' (See 'The Metal Industry,' vol. 9, No. 4.)

Points to be Observed for Successful Soldering.

Attention should be paid to the following points if success is to be attained in soldering or brazing :—

1. In the preparation of the solder, uniformity of composition should be aimed at. Readily volatile or oxidisable constituents should be retained.

2. In the choice of the solder, consideration should be taken of the fusibility of the solder. The melting point of the solder should be less than that of the metal to be soldered. It should be noted, however, that the more nearly the melting point of the solder approaches that of the metal to be soldered the better is the union obtained, although the more difficult is the operation of soldering. It should be considered whether the solder will mingle perfectly with the surfaces to be united. One having mechanical and physical properties as nearly as possible approximating to those of the metals to be united should be used. One whose mechanical and physical properties will not be subsequently modified by any treatment—thermal or otherwise—should be employed.

3. In the operation of soldering, thorough mechanical and chemical cleanliness of the surfaces to be united must be obtained, e.g. by scraping, filing, grinding, etc., and by dipping in suitable chemical reagents. A source of heat both smokeless and sufficiently hot to raise the temperature of the sections to be united above the melting point of the solder is necessary. A suitable flux must be used.

Fluxes.

Fluxes are used to protect the surfaces of the metal to be united from the oxidising action of the atmosphere during the process of heating. The presence of any non-metallic materials, such as oxides or carbonates, on the surfaces to be joined, effectually prohibits perfect union. As the process of heating a metal in the air always leads to the formation of a film of oxide on its surface means must be employed to protect the surface. Use is made of readily fusible salts and of oils that are non-volatile at the temperature of soldering for this purpose. For hard-soldering borax is practically the only flux employed. It is applied as a paste with a brush to the surfaces of small articles, and as a powder to those of larger articles. For soft-soldering a variety of materials is used, the following list giving the most important of these, together with their uses.

(i) Zinc chloride is used for the soldering of sheet metal, copper alloys and bright iron. It is poisonous and corrosive, and is on these accounts unsuited (*a*) for the soldering of tins destined to contain food, and (*b*) for the production of delicate work, e.g. electric fuses.

Zinc Chloride Solution.

Kill 2 quarts hydrochloric acid with all the zinc it will take up. Add a quart of water or add part until zinc is fairly dissolved. A quart of glycerine which has been mixed with a quart of alcohol is then added to the solution.

This fluid is used for all kinds of soldering, especially with greasy and dirty connections and iron. It is claimed that glycerine prevents rust, which plays havoc with other soldering solutions containing hydrochloric acid. (*Street Railway Journal.*)

Zinc Chloride Paste.

1 lb. vaseline or petrolatum ; 1 oz. (fluid) saturated solution of chloride of zinc.

The use of petrolatum instead of vaseline is recommended. While they are identical in composition, the name 'vaseline' is registered as a trade-mark, and commands a higher price on this account. Petrolatum is much cheaper. The chloride of zinc solution is made by dissolving as much zinc in strong muriatic acid as it will take up. An excess of zinc should be present, and all the acid neutralised. This will form a thick, oily solution. The petrolatum and chloride of zinc are mixed and thoroughly incorporated by means of a mortar and pestle or by vigorous stirring. The advantage of this soldering paste lies in the fact that it does not spatter and is not corrosive.

(ii) Ammonium chloride is used as a flux when soldering copper and iron.

(iii) Ammonium phosphate is used when treating with tin, zinc, copper and brass ware. It is non-corrosive and non-poisonous, but is somewhat refractory.

(iv) Hydrochloric acid is employed when dealing with zinc and zinc-coated ware.

(v) Lactic acid is useful in connection with copper and its alloys, but has the disadvantage of producing a tarnish on the surfaces adjacent to the soldered surfaces.

(vi) Venice turpentine and Gallipoli oil are used (separately) when soldering pewter or Britannia metal.

(vii) Russian tallow is employed when soldering heavy lead work.

(viii) Palm oil is employed in the treatment of light lead work.

(ix) Resin is an advantageous flux when subsequent corrosion is likely to be deleterious. It is used on soft alloys and tinware.

Hard Solders.

The hard solders may be divided into two groups, each of which will be considered separately in succeeding paragraphs—brazing or 'spelter' solders and silver solders.

Brazing or 'Spelter' Solders.

The basis of the brazing or 'spelter' solders ('spelters' they are commonly called) is brass. As the percentage of zinc is increased in the brasses so does their utility as solders for the more readily fusible metals and alloys increase. There is, however, a limit beyond which the addition of zinc to these alloys serves no useful purpose, owing to the fact that the resulting alloys are, on account of their brittleness and weakness, of no practical value. This limiting value is at about 45 per cent. of zinc. The particular alloy which is in most general use contains 50 per cent. of zinc and melts at about 875° C. (1607° F.). It is employed in brazing general brass work, which is possessed of melting points varying from about 890° C. (1634° F.) to about 1000° C. (1832° F.). For brazing metals, etc., having higher melting points than the above, brasses containing a less percentage of zinc are used. Thus, for the soldering of general iron-work the brass containing 35 per cent. of zinc is used, while for the brazing of copper and light ironwork that having 40 per cent. of zinc is employed. The most malleable solder contains some 30 per cent. of zinc, but its refractory nature somewhat subtracts from its value.

For certain purposes, the above alloys, owing to their yellow colour, are prohibited. Occasionally—e.g. in the brazing of nickel silver and iron—whiter alloys are required. For this purpose alloys containing nickel are employed, of which the following are examples :—

Copper per cent.	Zinc per cent.	Nickel per cent.
37·50	50·00	12·50
35·00	57·00	8·00

Other white solders, for use in the brazing of brass and more fusible than 'spelters,' contain a percentage of tin. Two such solders are given below :—

Copper per cent.	Zinc per cent.	Tin per cent.
43·34	6·66	50·00
57·50	25·00	17·50

Silver Solders.

Silver solders are employed for soldering gold, silver, copper, iron, and their alloys, the flux generally used being borax, though with very hard solders—i.e. solders having high melting points—powdered glass is sometimes of value.

Such as are suitable for general soldering and brazing, and containing an excess of base metal, are tabulated below :—

Copper per cent.	Silver per cent.	Zinc per cent.	Uses.
90—95	10—5	—	Solder for thin sheets of mild steel.
55·0	45·0	—	Alloy for instrument-makers; tough and fluid
50·0	30·0	20·0	Solder for small brass work.
46·0	38·5	15·5	Solder for bronze and nickel silver.
43·0	9·0	48·0	Solder for general work on copper alloys.

Tin-Lead Solders.

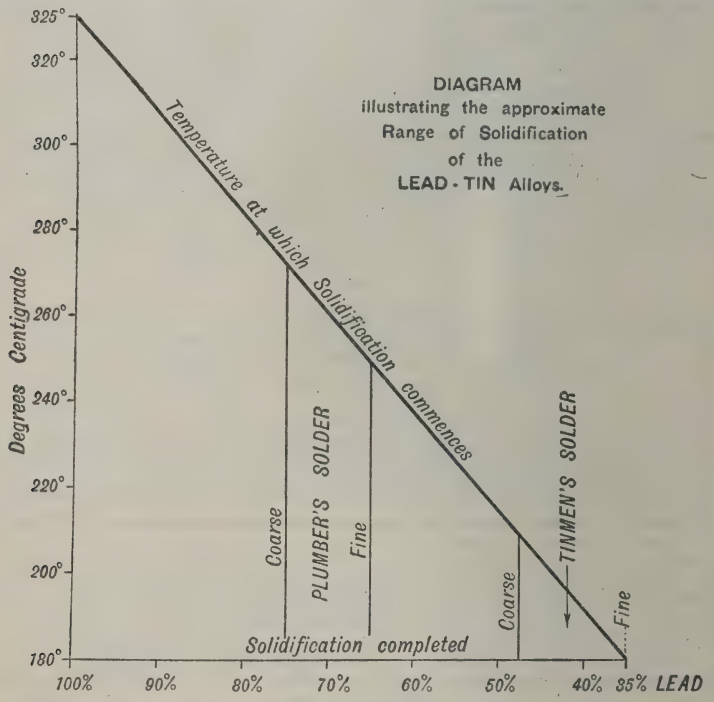
Tin and lead form a series of alloys, of which only those containing upwards of 35 per cent. of lead are employed as solders. These alloys may be divided into two classes, those that solidify at practically one definite temperature and those which are pasty over a considerable range of temperature before they become completely solid. The former are used as tinmen's solders, the latter as plumbers' solders, their value to each of these craftsmen being dependent on the properties associated with their solidification already mentioned. The diagram on page 2342 indicates the ranges of composition of the two types of solder already mentioned.

It will be seen that fine tinmen's solder solidifies at a definite temperature of 180° C. (356° F.), while coarse tinmen's solder commences to solidify at about 209° C. (408° F.), passes through a pasty stage, and finally completely solidifies at 180° C. (356° F.). Soft solder is the name given to the alloy containing 50 per cent. of lead, whilst the fine plumbers' solder, used in making 'wiped' joints, which commences to solidify at about 250° C. (482° F.), contains 66·6 per cent. of lead. A solder frequently used for the union of tinplate contains about 90·0 per cent. of lead, and hence has a very marked pasty range of temperature.

The appearance of the tin-lead solders affords some idea as to their value. The surface of good solder should be smooth and even and rectangular castings of the same should have a distinct furrow along the centre of their upper surface. The presence of zinc, though only traces of this metal be present, causes the free surface of the solder to become minutely crystalline. Bismuth, copper and silver do not affect the surface condition of solders when present in

quantities varying from 0·2 per cent. in the case of the last metal to 1·0 per cent in the case of the first, while antimony up to 2·0 per cent. improves, rather than otherwise, the surface condition. The presence of any of these elements leads to a reduction of the melting point of the solder.

To prevent hot solder sticking to work mix common whiting or cold-water paint with wood alcohol, and paint the part that is to be protected. The hot solder will not stick, even if the piece is held in the melted alloy. Water will do as well as alcohol to mix the paint; but alcohol



is the most convenient, inasmuch as it can be used without waiting for the paint to dry. If water is used the paint must be thoroughly dry, as otherwise the moisture will cause the solder to fly.

Bismuth Solders.

These solders are alloys of bismuth, tin and lead, and are in general more fusible than the tin-lead solders. The useful alloys contain from 20 per cent. to 65 per cent. of lead, from 12 per cent. to 55 per cent. of tin, and from 12 per cent to 55 per cent. of bismuth. The alloys containing the higher percentages of bismuth are the most fusible of these solders, which are employed for general pewtering. The solder containing about 50 per cent. of bismuth and 20 per cent. of tin has the lowest melting point of the series, its value being 96° C. (205° F.).

Aluminium Soldering.

The only process that can be recommended for the uniting of aluminium when the union is to be possessed of strength and durability is welding (see p. 2298). In certain instances the soldering of aluminium to itself or to other metals may, however, be resorted to. The process of soldering is considerably cheaper than is that of welding, and this, of itself, is worthy of consideration. The soldering of aluminium, however, presents numerous disadvantages owing (i) to the ready oxidation of aluminium and the difficulty of removing the oxide formed when

the metal is heated, and (ii) to the rapid disintegration under the influence of moisture of soldered joints owing to the electropositive nature of aluminium with respect to those metals that may be usefully employed in the manufacture of solders.

The aluminium solders may be divided into four main groups.

1. Alloys having an aluminium-zinc base and containing varying proportions of copper. These alloys contain from 50 per cent. to 95 per cent. of zinc and from 5 per cent. to 30 per cent. of copper.

2. Alloys having a zinc-tin base and containing small proportions of such elements as aluminium (up to 12·5 per cent.), copper (up to 2·5 per cent.), phosphorus (in traces), etc. These alloys contain from 30 per cent. to 80 per cent. of tin.

3. Alloys of cadmium and zinc or possessed of a cadmium-zinc base. The cadmium content in these alloys rarely, if ever, exceeds 30 per cent.

4. Alloys that are members of none of the above well defined groups of alloys.

Of group 1 solders, those aluminium-zinc alloys, containing from 3 per cent. to 30 per cent. of aluminium have been largely employed for general soldering. For light aluminium work, where somewhat stronger solders are required, an alloy consisting of 80 per cent. of zinc, 12 per cent. of aluminium and 8 per cent. of copper has been found to be of value, while for heavier aluminium work a solder containing 90 per cent. of zinc, 6 per cent. of aluminium and 4 per cent. of copper is useful.

Of group 2 solders, the most satisfactory alloy (according to the *Iron Age*) consists of 69 per cent. tin, 2·5 per cent. of 10 per cent. phosphor tin, 26 per cent. of zinc and 2·5 per cent. of aluminium. To avoid loss of the more easily volatile of these metals, the aluminium is melted first, zinc is then added in small pieces, then tin in small pieces, and lastly the phosphor tin. No acid is used, the solder being self-fluxing, but the surfaces to be soldered or joined are covered with a thin coat of solder in the usual way, and then brought together, heated with a soldering copper (iron), blow-pipe, or torch, until the solder already upon them is melted, when pressure is applied and the joint is made. The aluminium must be heated to about 660° F. before it can be soldered.

Of group 3, solders it can be stated that most satisfactory results have been obtained with the alloys of cadmium and zinc containing from 20 per cent. to 30 per cent. of cadmium, both as regards strength and durability.

In preparing aluminium for soldering, the parts to be united must first be scraped or filed, in order that the thin skin of oxide always present on aluminium that has been exposed to the atmosphere may be completely removed.

It is scarcely necessary to state that all oil, grease, or organic matter must be completely removed from the parts to be soldered. In practically all cases solders for aluminium are best applied without a flux. Generally speaking, the process of soldering aluminium is identical with that of ordinary soft soldering. It is well, however, in the case of aluminium soldering, to heat the parts to be united until the solder will just melt upon the surfaces to be joined and then to rub the solder into the metal with a wire brush or rod, in order that intimate contact may be made between the solder and the metal to be soldered. The strength of the joint depends to a large extent on the thoroughness with which this preliminary treatment is conducted. Soldering is then continued in the usual manner.

Cold Solder (Amalgam Solder).

By shaking finely-divided copper with mercury in a little dilute sulphuric acid an amalgam can be prepared which may be used to unite joints at ordinary temperatures. The amalgam is formed into pellets, which are heated till mercury begins to exude from the surface. These pellets are wiped free from mercury and are then rubbed to a soft paste in a mortar. The surfaces to be united are first treated with sodium amalgam (sodium 2 per cent.), the soft paste of copper amalgam being then applied. The surfaces to be joined are then tightly pressed together, the union being completed in about three hours.

Soldering Aluminium Bronze.

To solder aluminium bronze with ordinary soft (pewter) solder : Cleanse well the parts to be joined from dirt and grease. Then place the parts to be soldered in a strong solution of sulphate of copper, and place in the bath a rod of soft iron, touching the parts to be joined. After a while a copper-like surface will be seen on the metal. Remove from bath, rinse quite clean and brighten the surfaces. These surfaces can then be tinned by using a fluid consisting of zinc dissolved in hydrochloric acid in the ordinary way with common soft solder. If the surface is not coppered an aluminium alloy must be used.

Soldering Cast Iron.

(1.)

If the part of iron to be soldered is cast iron that is hard and thin, it should be polished on an emery wheel and made clean and bright. Then dip it in potash water, after which dip it for an instant in clean water, and wash quickly with undiluted hydrochloric acid of the ordinary strength ; go over it with powdered resin and solder made from half tin and half lead. This must be done quickly, before the surface has time to dry.

(2)

File the surface clean, and wash as before: wipe it over with a flux made of sheet zinc dissolved in hydrochloric acid until it is supercharged, or is a saturated solution and has been diluted with its own quantity of water; then sprinkle powdered sal ammoniac on it, and heat it on a charcoal fire until the sal ammoniac smokes. Dip it in melted tin, and then remove, and rap off the surplus tin.

To solder Metal to Glass.

Coat metal with platinum, and fuse latter to glass. Paint glass, after warming with neutralised solution of chloride of platinum mixed with essential oil of camomile. Heat gently till oil is expelled, and then raise temperature to dark red heat; the chloride becomes reduced, and platinum is deposited on the glass. The platinum or layer of copper is deposited by electro-deposition. To this layer metals can be soldered.

CASTING AND FOUNDING.

Moulding-sand.

(1.)

1 cubic foot sharply burnt and pulverised pure fire-clay; 60 cubic inches sugar; 2 quarts water ½ quart paraffin oil. No lime or charcoal must be included in the mixture. Thoroughly mix. Suitable for castings of ingot iron.

(2.)

93 parts pure quartz sand; 7 parts clay free from lime; the latter acts as a cement for the former.

(3.)

For small castings:—Red sand 3 parts by measure; coal dust (finely sifted), 1 part by measure.

(4.)

For large castings:—Red sand, 3 parts by measure; coal dust (finely sifted), 1 part by measure; chopped straw, or dried horse manure, ½ part by measure.

The latter makes the sand light and porous, facilitating the release of the gases. As the sand becomes impoverished by being burnt, the coal dust is renewed from time to time. If paraffin is used to damp the mould, black sand will bind and can then be dried as when red sand is used.

Moulding-sand which has partially lost its cementing power may have it restored by mixing with fresh sand.

Green, or floor sand that has 'gone dead' (dehydrated) is frequently revived with Birmingham or Mansfield sand. Bunter sand, and also Barrow sand, have been found very good for the same purpose.

When the metal touches the clay bond the clay is undoubtedly killed, but not so the ferruginous bond, and long-life sand is generally rich in the latter.

Ferruginous bond in moulding sand is usually the cause of the production of a smooth, sound surface to the casting, particularly in the case of steel. In non-ferrous practice it is usual to ensure the smoothness of the skin by painting the surface of the mould or 'facing' it with a layer of finer sand (facing sand) or a wash.

The washes used for painting the moulds in non-ferrous work have usually either china clay or a graphitic substance as base. Graphite (plumbago) is itself used at other times. 'Scotch blacking,' which is a mixture of charcoal and graphite, is employed.

A suspension of the powder in water may be assisted by the addition of a little borax or molasses.

Cores.

For the making of 'cores' in British foundries a 'compo' moulding sand is made from ordinary sand such as Mansfield and broken fragments of graphite crucibles ground and mixed.

The admixture of the coarser material ensures good venting of cores; at times the sand alone is used.

Oil-bonded cores (where the oil is generally a commercial linseed, such as 'Baltic seed oil'), unlike those used in steel founding, have not met with much success in non-ferrous founding at home, but are adopted extensively in America, where a fairly coarse high-silica sand is the base. Sands from Lumberton and Howell, N.J., are so used. (*Horobin.*)

To repair Castings by Burning on.

A piece of machine-framing, the necks of rolls, or a standard which has been broken or found defective, may be repaired as follows: First cut away the defective parts down to the sound metal; build a coke fire round the part of the casting which is to be repaired until it is brought to a bright red-heat, then dust over the surface of the cut metal with powdered glass or borax. Then apply a hollow loam mould of the desired part to the casting, properly secured in position and provided with a hole for the exit of the metal. Pour very hot liquid cast iron into the mould, and allow it to flow away until the cut surface of the original metal of the casting can be felt with an iron bar to have become soft and pasty by contact with the hot liquid iron. Then stop the exit hole and allow the metal in the mould to set. If the operation has been properly performed the casting should, when struck, ring with the same sound as a single good casting, thus showing that the old and new metal are perfectly united.

DRYING STOVES

'ADELPHI' FORCED DRAUGHT SYSTEM

(Using Low Grade Fuels)

ALSO

PRODUCER, COAL GAS, or OIL FIRED.

Installations complete with Rolling Shutter or Asbestos Panelled Doors and Stove Carriages.

PORTABLE MOULD DRIERS.

ANNEALING FURNACES.

HEATING FURNACES of all kinds.

SAVING 50 PER CENT.

NO SMOKE. NO DUST.

MUIR, MURRAY & Co.

Adelphi Works, Paisley.

Telephone: 2004. Telegrams: 'Murite Paisley.'

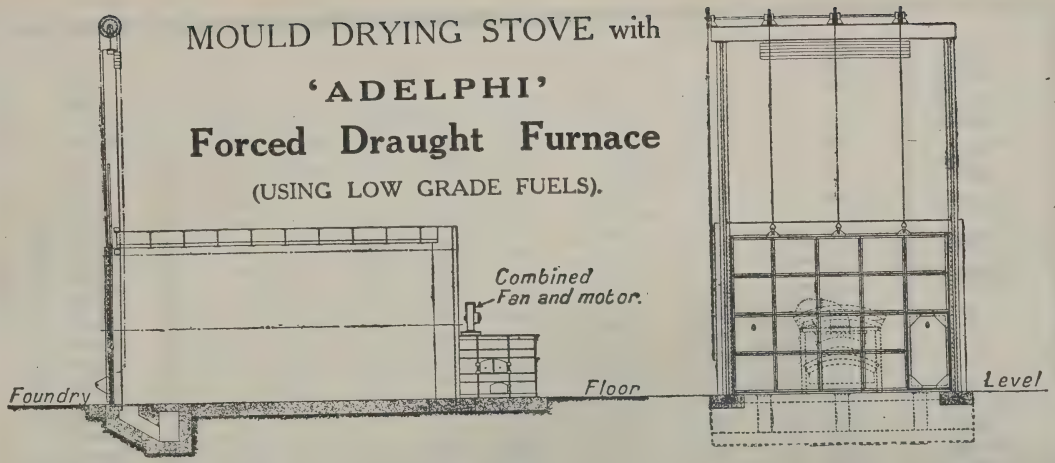
F. 2344

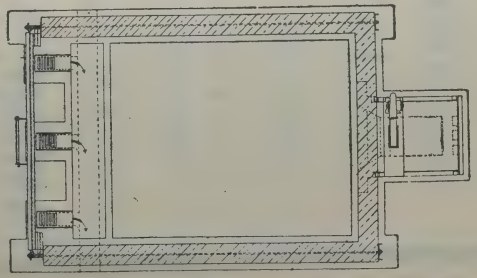
MOULD DRYING STOVE with

'ADELPHI'

Forced Draught Furnace

(USING LOW GRADE FUELS).





MUIR, MURRAY & CO.

Adelphi Works,

PAISLEY.

Telephone : 2004. Telegrams : 'MURITE, PAISLEY.'

Pattern Composition.

A composition that has many advantages over wood for making small patterns can be made as follows:—With hot water mix into a thick paste three parts by volume of starch, one part ground glue, two parts fine resinous sawdust. The sawdust should not be added until the starch and glue have been dissolved by the water. After the ingredients are thoroughly mixed, heat the whole to 190°F., and continue the heating until the whole becomes a hard mass, then allow to cool, and remove from the receptacle. The resulting composition is a strong, hard, horn-like substance, that can be machined, sand-papered and varnished just as can wood. The principal advantages of this composition over wood lie in the fact that it has no grain, and therefore turned and complicated patterns made from it do not have to be built up or glued together, and that for the same reason it is easier to turn and machine, and offers a smoother surface when finished. It is also more fireproof than wood and not so readily affected by atmospheric changes.

(*American Machinist.*)

Shrinkage of Castings.

The allowance for shrinking in casting should be for each foot in length:—

	Parts of an Inch.		Parts of an Inch.
For cast-iron pipes	·125 = $\frac{1}{8}$	Brass	·17 = $\frac{3}{16}$
„ beams and girders	·1 = $\frac{1}{10}$	Lead	·31 = $\frac{5}{16}$
„ cylinders, large	·094 = $\frac{3}{32}$	Zinc	·25 = $\frac{1}{4}$
„ „ small	·06 = $\frac{1}{16}$	Copper	·17 = $\frac{3}{16}$
In thick breadth	·156 = $\frac{5}{32}$	Tin	·25 = $\frac{1}{4}$
In thin breadth	·156 = $\frac{5}{32}$	Bismuth	·156 = $\frac{5}{32}$

Pickle for Castings.

A large proportion of the loose sand on castings may be removed in the 'tumbling' process, but the adhering sand and scale of oxide, which soon destroy the cutting edge of the tools, are best reduced by a pickle. Several compositions are used for this purpose, and the following have met with general approval.

(See also 'Lubrication Troubles,' p 912.)

Sulphuric Acid Pickle.—Ordinary commercial sulphuric acid and water in the proportion of 1 of the former to 30 of the latter. In this case the castings are required to remain in the pickle for about 10 hours, and are then washed with hot water to remove all trace of the acid and prevent rusting.

Hydrofluoric Acid Pickle.—This acid is slower in its action and not so liable to cause corrosion as the above. The castings, however, should be first tumbled in order to remove loose sand (as the sand neutralises the solution very much more quickly than the iron) and then immersed in a mixture containing 1 of hydrofluoric acid to 15 of water. The bath should be maintained at a temperature of 120°F. by a steam coil. The castings are then washed in clean hot water and sometimes in hot water with a small proportion of lime (about 1 lb. of lime to 8 gallons of water).

The baths are best made of oak, wood pinned, with no exposed metal fastenings and well lined with asphaltum. The attendant should be furnished with wooden clogs, strong leather apron and rubber gloves to protect him from the acid.

The acid should be added *very slowly* to the *water* and well stirred in the process. Never add the water to the acid, otherwise the acid vapour will be carried all over the place.

Dips for Castings.

Special for Electro-galvanising.—For preparing work for electro-galvanising the following can be used with advantage, but for no other solution except, perhaps, copper: Add to the dilute acid ½ lb. of sheet zinc to each 25 gals. of solution, adding additional amount occasionally as it works out.

Bright Dip for Iron.—Work that has been pickled in the ordinary way to remove sand and scale, and then dried, usually has a dull-black appearance. If the work is to be polished, the black will be removed and the colour restored in the polishing process; but if it is to be plated, or if it is to be left with parts of iron showing, the work should be run through the bright dip. This will bring it out white, improving the appearance and tending to make it take on a white deposit if it is to be nickelled. This dip is composed of:—

Hydrofluoric acid, 24 oz. Nitric acid, 10 oz. Metallic zinc, 2 oz. Water, 2 gals.

Work that is to be dipped should be strung on copper wire, and swirled around in the solution for a few seconds, rinsed in cold and then very hot water, and dried in sawdust. Articles should not be allowed to stay in the dip any time, as they would be spoiled and the solution ruined.

Satin-finish Dips.—Brass work requiring a satin finish may be dipped for a few seconds into a mixture consisting of:—

(1) Hydrofluoric acid, 1 part; Water, 3 parts;

then dried and run through the bright dip (4) to give it a lustre. If not satined enough the operation may be repeated.

(2) Hydrofluoric acid, 2 parts; Nitric acid, 1 part; Muriatic acid, ½ part; Water, 5 parts. After which the work may be rinsed, dried, and run through the bright dip (4) if necessary.

(3) Hydrofluoric acid, 2 parts; Nitric acid, 1 part; Water, 10 parts.

The following is a *bright dip* for copper, brass, bronze, or German silver :—

(4) Hydrofluoric acid, 4 quarts; Nitric acid, 3 quarts; Common salt, small handful.

Mechanical Treatment of Metals and Alloys.

Method of Treatment.	Details of Method to be avoided.	Consequences of Details of Method of Work.
Hot working . .	1. Excess 'reduction' or rate of 'reduction.'	Cracking of metal.
	2. Deficient 'reduction' or rate of 'reduction.'	Coarse, weak metal.
	3. Excess temperature at commencement.	Weak, brittle metal and formation of fissures therein.
	4. Deficient temperature at conclusion.	Internal strain and consequent hardening. Possible 'season cracking.'
	5. Retention of scale on metal during operations.	Rough and pitted surface and possible cracking.
Cold working . .	1. Excess 'reduction' or rate of 'reduction,' without annealing.	Surface cracking and hollow drawing. Strain-hardening.
	2. Deficient 'reduction' or rate of 'reduction.'	Insufficient hardening — where hardening is expected.
	3. Unequal 'reduction' . . .	'Season cracking' or cracking during annealing.

Heat Treatment of Metals.

Method of Treatment.	Details of Method to be avoided.	Consequences of Details of Method of Work.
Annealing . .	1. At too high a temperature .	'Burning' and 'over-heating' in steel and brass. Brittleness and sponginess generally, owing to abnormal grain size.
	2. At too low a temperature . .	Insufficient structure change.
	3. For too long a period — at correct temperature.	Diffusion and aggregation of micro-constituents of metal or alloy.
	4. Careless charging in or firing of furnace.	Sudden access of heat may lead to cracking of cold metal.
	5. In an injurious atmosphere or in contact with injurious substances.	Copper is injured by reducing gases, steel by oxidising gases. Water and oil have injurious effects in many cases.
Quenching . .	1. From too high a temperature .	Cracking, warping and brittleness.
	2. From too low a temperature .	The object of the operation is defeated.
	3. Unequal	Warping.
Tempering .	1. At too high a temperature	Removes the effects of quenching.
	2. At too low a temperature.	Does not remove the effects of quenching sufficiently.
	3. Unequal	Lack of uniformity and consequent failure.

SECTION XXXVIII

EXPLOSIVES

(Contributed by Professor W. R. Hodgkinson, F.R.S. (Edin.), Ph.D., F.I.C., C.B.E.)

SECTION XXXVIII

EXPLOSIVES.

(Contributed by Professor W. R. Hodgkinson, F.R.S. (Edin.), Ph.D., F.I.C., C.B.E.)

Explosives may be classified into 'Propellants,' which are required to produce a rapid but steady rise in pressure in some kind of firearm; others may be termed 'Detonators,' or the less definite term 'High Explosive.' The latter are practically instantaneous in action and produce a wave or vibration of high velocity. Under certain conditions some substances may behave as belonging to either class.

The first propellant, 'Black Powder,' has since 1770 (about) consisted of nitre 75 per cent., charcoal 15 per cent., and sulphur 10 per cent. Practically all the gases, which may be 700 times the volume of the powder, arise from the nitre, the volume varying according to the density of the powder and to the conditions at burning.

Gunpowders do not detonate, but may give a very rapid rise of pressure if burnt in a closed space. Being porous, though dense, the first formed and very hot gases are driven through the remainder of the charge, igniting it *en masse*.

Cordite.

Cordites and the like are practically the most satisfactory propellants invented; owing to their gelatine-like structure they are non-pervious to gases. All true colloids show this property in some degree; the rate of burning can therefore be well regulated by the area of surface, volume of gas, and temperature. Owing to their composition, these explosives are practically smokeless. The cold-gas volume (i.e. volume at ordinary temperature) is in the region of 1,000 times that of the powder, and the temperature seldom less than 2,000° C., and may be above 3,000° C., according to composition. 'Cordite' proper consists of gelatinised high grade gun-cotton with a certain amount of nitroglycerine and a mineral jelly incorporated while the gelatinising agent is still present, the agent eventually drying off. A number of varieties of these powders are made with lower grades of gun-cotton, their physical properties being much the same. These powders are not easily detonated and are useless for blasting purposes.

Gun-cotton.

'Gun-cotton' and 'Cellulose Nitrates' are made by the action of a cool mixture of nitric and sulphuric acids on cleaned cotton waste or the like. Strength of acids, temperature, and time of contact determine the extent and nature of nitration. Real gun-cotton contains about 13·8 per cent. of nitrogen, nearly corresponding to $C_6H_7O_2(NO_3)_3$.

Varieties of nitrated cellulose containing 10 to 11 per cent., or less, nitric-nitrogen than real gun-cotton are also used in some classes of propellants.

Gun-cotton is unaffected by water and does not burn if containing about 10 per cent. of moisture. When dry it ignites at between 160° and 180° C. It burns without smoke and is easily detonated by a sharp blow on a hard surface. When wet it can only be detonated by a primer of dry gun-cotton. When pulped and pressed into slabs, gun-cotton (13·8 per cent. N.) is used for blasting; its action is very local.

Nitroglycerine.

Nitroglycerine is formed by the action of mixed nitric and sulphuric acids on glycerine at a low temperature. It is a colourless oily liquid of sp. gr. 1·6. It freezes easily, and melts at 4° C. It is practically insoluble in, and unaffected by, water. Solid or liquid, it is easily detonated by percussion or by heating to about 150° C., hence the danger of thawing the solid nitroglycerine. As a liquid it is unpractical as an explosive, but when mechanically absorbed into a porous inert material, or incorporated in the substance of a jelly, useful preparations result.

Dynamite.

'Dynamites' which fulfil most of the requirements for blasting, and are reasonably safe, consist of nitroglycerine incorporated in kieselguhr, cork charcoal, and the like non-gritty powders. Generally some metallic nitrate, colouring or binding dope is added. Dynamites can be detonated by fulminate detonators. They are comparatively safe to handle and store for a moderate time in a place of medium temperature. Water may cause the extrusion of nitroglycerine from most forms of dynamite.

Gelignite.

'Gelignites' are mainly a thin jelly of a low grade gun-cotton in nitroglycerine; warm nitroglycerine is usually the gelatinising agent, but others may be employed. They may contain about 90 per cent. nitroglycerine. They are plastic, waterproof, and more powerful and convenient than ordinary dynamites. They should be stored in a place of cool oven temperature. Most of the gelignites are doped, for some real or imaginary object.

Permitted Explosives.

'Permitted Explosives' for use in mines are such that comply more or less perfectly to certain tests, such as non-ignition of fire damp or coal dust, not producing a dangerous amount of poisonous fumes, considerable range of safety in storage and use. In many of these explosives, ammonia nitrate is the main oxygen carrier, the combustibles being benzene derivatives such as nitrobenzene, nitronaphthalene, and the like, with or without wood meal or inert powders to cool the flash.

Perchlorate of ammonia is the chief active material in some blasting compositions for civil or military use (cheddites). They are useful in fiery mines, as a quantity of hydrochloric acid gas is produced on explosion which acts as a damper of flame. Almost any kind of organic matters may be used in this class. Paraffin wax is often used, as, amongst other properties, it is waterproof.

Perchlorate compositions are stable and keep well, but all are liable to explode on moderately strong percussion. Generally they simply burn violently on ignition by a flame.

Ordinary chlorate compositions should be completely barred, as they are never safe and are erratic in use.

Detonators.

Detonators are substances employed to start the disruptive explosion or detonation of other compounds which alone may not explode by a flame or a moderately hard blow. Owing to the extreme rapidity of their explosion, detonators initiate a molecular decomposition of the main explosive, or it responds to the wave blow of the detonator.

Mercury fulminate, $HgN_2C_2O_2$, is the oldest and most commonly used detonator. It may be used alone or diluted with nitre, antimony sulphide, potassium chlorate, or even inert substances in some proportion, in order to regulate its sensitiveness, or reduce or modify the manner of exploding.

Cap and igniting compositions contain same proportion of $KNO_3Sb_2S_3$ and $KClO_3$.

Small quantities of fulminate, say 2 grams, may flash off if fired open, but the flimsiest cover will cause it to detonate on firing by a flame contact. A very slight suddenly applied pressure causes detonation. Its function in cap compositions is to respond to the blow of the hammer and ignite the other ingredients.

Lead azide, PbN_6, acts similarly to fulminate, is stronger and quicker in action, but probably not so amenable to regulation as fulminate.

Fuses.

These are, generally, some arrangement for firing an explosive at a desired moment. They consist, as a rule, of finely ground black powder contained in a paper tube protected by tape, machine-wound over it and waterproofed by some resinous or pitchy composition. Rate of burning may be controlled by fineness of powder, and in some cases by its composition, diameter of tube, etc.

In military fuses the powder has to burn along a circuitous route of determinable length in a metal container.

Fuses for blasting are packed in barrels and cases containing 300 or 500 coils of 24 ft. length. The average rate of burning of safety fuses is 75 to 90 secs. per yard. (See also 'Trinitrotoluene.') The fuse end is inserted in the detonator cap, which is then secured in proper contact with the explosive cartridge or charge, which may be tamped in the bore hole or not according to nature of explosive. (See also 'Blasting,' page 2166.)

Lyddite, or Picric Acid.

Lyddite, or picric acid, $C_6H_2OH(NO_2)_3$, is mainly a military explosive. It is somewhat difficult to detonate, otherwise there is no reason against its use for rock blasting. When some quantity is burnt there is a liability for it to pass into the detonation stage. The chief danger in connection with it is the liability to form metallic compounds (picrates), which are extremely sensitive to heat, friction, or percussion. There are several related substances with similar properties and uses, such as dinitrophenol, nitrocresols, etc.

Trinitrotoluene.

Trinitrotoluene (T.N.T.) and trinitroxylene (and other stages of nitration of toluene, xylene, etc.) are mainly military explosives, but T.N.T. has been used for some time in instantaneous fuses for civil work. Under proper conditions all these substances could be used for blasting.

Amatols.

Amatols (of various catagories) are essentially ammonia nitrate compositions with T.N.T. and similar substances. The violence of their explosion is increased by the addition of small quantities of powdered aluminium, magnesium, and other substances.

Amatols have a great future as blasting agents, but some of them are very sensitive and are not quite waterproof.

Blasting Machines.

Dynamo Electrical Blasting Machines (supplied by *Fleming & Company*, 31 *Robertson Street, Glasgow*) are specially built to explode all blasting charges with absolute safety, either in stone quarries, coal mines, or oil shale workings. Being water and damp proof they are always ready for action.

SECTION XXXIX

WORKSHOP RECIPES, PROCESSES, ETC.

PAINTING — LACQUERS AND BRONZES — VARNISHES — CEMENTS AND GLUES—LUBRICANTS AND OILS—CLEANING - COMPOSITIONS — COPYING - PROCESSES — MISCELLANEOUS



REDUCE
YOUR
PAINTING COSTS
By Installing

The Aerograph
REG° TRADE MARK

METHOD OF PAINTING

The system is easy to install and easy to operate—the average worker becoming proficient in all its uses in a very short time. Painting costs reduced by 75 per cent., and we can supply plants for every class of work, including portable equipments for painting interior and exterior of buildings and all constructional work.

THE AEROGRAPH CO. Ltd.
Inventors and Pioneers of Spray Painting
43 HOLBORN VIADUCT, LONDON, E.C. 1
Phone : 2041 Holborn. Telegrams : 'Aerography, London.'

SECTION XXXIX

PAINTING — LACQUERS AND BRONZES — VARNISHES — CEMENTS AND GLUES—LUBRICANTS AND OILS—CLEANING-COMPOSITIONS — COPYING-PROCESSES — MISCELLANEOUS.

(All Parts by Weight unless otherwise Specified.)

PAINTING.

PAINTING WOODWORK.

A mixture of linseed oil and white lead is the best preservative of wood. The linseed is the preservative; the white lead gives body and opacity. Spirits of turpentine is added as a solvent, to enable the paint to penetrate into the pores of the material; the solvent should be light and easily evaporated.

Boiled linseed oil dries quicker than raw, but is darker and thicker than the latter.

TO REMOVE OIL PAINT.

2 lbs. washing soda, ½ lb. quicklime, mixed to consistence of cream, spread on, and kept moist for an hour. The paint can then be washed off.

GLAZIER'S PUTTY.

Whiting and raw linseed oil, well beaten up.

TO REMOVE OLD PUTTY.

Paint it with nitric or hydrochloric acid, and after about an hour it will be soft enough to remove; or a hot iron will soften it at once.

PAINTING.

In painting woodwork for the first time, kill knots with coating of fresh slaked lime; then in 24 hours scrape off, and paint knots with mixture of red and white lead and linseed oil: or use red-lead powder mixed with strong glue size, and apply warm—the work can then be gone on with in a few minutes; when dry, smooth with pumice stone. Next put on priming coat. All holes are then stopped with glazier's putty, and the required coats added; each coat in good work is rubbed smooth with glass-paper before adding another.

Painting required to have no gloss has an additional coat, made with turpentine only, and no oil, called a *flatting coat.*

For old work, if much soiled, wash with soap and water and scour; if foul with smoke and grease, wash with lime and water; then commence with *second* coat.

New woodwork should have 4 coats; for periodical repainting 2 are sufficient.

PRIMING.

This generally consists of a mixture of white lead and red lead, irrespective of the colour to be used in finishing. The lead mixture is diluted with boiled linseed oil and a small quantity of turpentine.

PAINTING IRONWORK.

For new ironwork 3 coats Torbay or other oxide of iron paint answers well; 1 lb. mixed with oil will cover from 8 to 12 yards. For periodical painting, 2 coats. For the first, or first and second coats on iron, red lead is very generally used; 1 lb. mixed with oil will cover about 5½ yards.

SYRONITE ANTI-RUST PAINT.

Syronite (*Messrs. Pinchin, Johnson & Co. Ltd.*) is a thin transparent syrup which can be painted upon new ironwork before, during, or after erection, or upon existing structures that are already rusting. If the structure is in a bad state before the Syronite treatment is under-

taken, the surface is first well brushed with a stiff wire brush to remove all loose rust. A coat of Syronite is then applied, its action being to penetrate through any remaining rust and cause this to shed off. When shedding has taken place, another coat is applied, and then the treatment is complete.

Pigments can be combined with Syronite when required.

A peculiar feature of the material is its capacity for 'creeping' or spreading. Ordinary paint stays exactly where the brush leaves it, and as the brush cannot always get under and along joints, round rivets, etc., these parts do not get equal protection with the general surface, but Syronite on a metal surface will permeate into every crevice, thus effectually insulating the iron and protecting it against corrosion.

Minerva Bright-part Coating and Rust Preventive.

This preventive (*Messrs. Pinchin, Johnson & Co. Ltd.*) is intended for brushing on machinery bright parts prior to leaving the foundry or finishing shop, to prevent rust forming during transit and erection. It dries almost immediately with a firm, elastic, damp and acid-resisting surface that will not come off through ordinary handling. When it is desired to remove the coating, it is only necessary to wipe the surface over with a cloth damped with turpentine, petroleum, or benzine, when the coating will at once disappear, and the parts can then be polished up to a bright condition.

Minerva Machinery Finishes.

These finishes (*Messrs. Pinchin, Johnson & Co. Ltd.*) embrace one, two, and three-coat work. For loose or rough metal with surface defects, air-holes, etc., an iron-filler, known as 'Indurine, is used straight in the plastic form supplied. It is spread with a knife or leather over all bad places, so as to bring them up to the proper level, and sets 'iron hard' very rapidly. For clean castings the 'Indurine' is thinned down with 'Indurine Blender' until of a suitable consistency for brushing on. Thus applied it will bring the whole surface up level and hard, ready for sandpapering smooth to take paint. In addition its anti-corrosive character acts as a preventive against rust.

Minerva 'Intermediate Coat' is a glossy black made with a special medium and supplied in ready-to-use consistency. It is brushed direct on to the filled iron after first removing all traces of oil, grease or dirt. On account of the special medium employed in its manufacture, it grips tenaciously, dries quickly with a tough, elastic surface that is grease, oil, spirit, and acid proof, and which will be affected neither by sulphurous nor other chemically laden fumes. For an extra substantial effect, a second coat of this paint can be applied when the first is quite hard and dry.

Minerva 'Finish' is made in four standard shades from grey to black. This paint is applied upon the 'Intermediate Coat' when this is bone dry. It spreads freely, has great covering capacity, and dries rapidly with a solid, grease and oil-proof surface—perfectly flat, half gloss and full gloss finish.

'Cuirass' Anti-corrosive Paint.

Cuirass is in black only, but its merit over oxide paints is that it does not blister in tropical climates and it does not crack in arctic climates. Engineers of various railroads testify that five years after painting girders no rust is shown. The paint is insulating, and is also acid-resisting. It is claimed to cover three to four times the surface of oxide paints. The great covering power of Cuirass paint is due to the exceedingly fine particles of which it is composed. The 'pigment' of ordinary paint is obtained by grinding between rollers, the 'pigment' of Cuirass is obtained chemically, the particles being but the size of a microbe, hence the covering and penetrating power of the paint. It is stated that Cuirass does not blister and does not oxidise.

See also pp. 2356, 2357.

Preservative for Ironwork.

(1.)

Coal-tar boiled till the watery vapour and naphtha are expelled, and mixed when cold with ½ pint of naphtha and the same amount of boiled oil to each gallon of tar.

(2.)

Experiments carried out by the Military Engineering Department at Brest have shown that as an effective preservative for metal work coal tar is rendered far more efficient by the addition of a small quantity of quicklime, in the proportion of one part of lime to two parts of tar. The mixture, after being heated to the boiling point, is brushed upon the ironwork at a temperature of about 120°F. The tar should be used over a coating of red lead.

(3.)

A valuable rust-inhibitive coating for general priming or finishing work may be prepared from sublimed blue lead. Two parts of blue lead and one part of linseed oil containing about 5 per cent. of turpentine drier make a paint of the right consistency. When this paint is used for top-coat work in marine exposures—battleship gray—the addition of 1 per cent. of carbon black to the blue lead aids in the maintenance of the colour.

Rust Proof Coating for Iron or Steel.

Linseed oil, 25 parts; calcium resinate, 36 parts; manganese borate, ½ part; lead acetate 1 part; naphtha, 37½ parts; artificial graphite, 25 parts. These are mixed and applied to the

Syronite
ANTI-RUST PAINT

BEST PRESERVATIVE FOR ALL KINDS OF EXPOSED IRONWORK.

SYRONITE treatment pays for itself over and over again. It :—

(1) Prevents rust getting a hold on new work.

(2) Completely checks the spread of corrosion on existing structures, no matter how badly affected.

(3) Conserves the life and strength of IRON and reduces maintenance costs to the very minimum.

For samples and full particulars, please apply,

PINCHIN, JOHNSON & Co., Ltd.

(Associated with WILKINSON, HEYWOOD & CLARK, LTD.),

Varnish, Color, Paint, and Enamel Manufacturers,

General Buildings, Aldwych, London, W.C. 2

Also please see pages 415, 1966, 1967, 2353, and 2354 for particulars of other Special Paints.

Foliac

GRAPHITE

And the FOLIAC GRAPHITE
PRODUCTIONS manufactured
. . . therefrom are . . .

THE WORLD'S HIGHEST STANDARDS

And as such will bear favourable
comparison with any in price as
. . . well as quality. . . .

Write for particulars, samples and prices to:

GRAPHITE PRODUCTS, Ltd.

218-220 Queen's Road, Battersea
LONDON, S.W.8

Telegrams:
'Lustroso, Phone, London.'

Telephone:
Battersea 227.

metal by brushing, or dipping, or any other method. The article is then baked at 300° F. for one hour and 40 minutes. The coating is highly lustrous and resistant to corrosion.—*American Machinist.*

Note on Iron-work Painting.

According to experiments published in the *Bulletin de la Société des Ingenieurs Civils de France*, a number of coats of paint form a much less effective rust preventive for metal than a single layer does. Iron plates well cleaned and polished were coated, some with one coat and some with two, three, or more coats of paint, and then exposed to the action of steam for a whole day, after which the paint was removed and the plates were examined. The first was as bright as it was before exposure to steam, the second showed a few rust spots, the third was still more attacked, and the fourth entirely so. This result is stated to be due to the fact that the deeper layers dry badly and tend to dissolve the uppermost coating, increasing its porosity to air and moisture.

Painting Zinc.

Dissolve 1 part chloride of copper, 1 nitrate of copper, and 1 sal ammoniac, in 64 of water, and add 1 part commercial hydrochloric acid. Paint the zinc with this, and leave to dry for 24 hours. Any oil colour will then firmly adhere to it.

To Paint in imitation of Ground Glass.

White lead, 4 parts; boiled oil, 3 parts; spirits of turpentine, 1 part; add a small quantity of dryers. The colour must be exceedingly thin, and put on the panes of glass with a large brush in as even a manner as possible. Dab the paint over lightly with a pad of cotton-wool covered with an old linen rag.

Hydraulic Cement Paint.

Hydraulic cement mixed with oil forms an incombustible and waterproof paint for roofs of buildings, outhouses, etc.

Outside Whitewash.

Slaked lime, ½ bushel. Add common salt, 1 lb.; sulphate of zinc, ½ lb.; sweet milk, 1 gallon.

Flexible Paint.

Used for painting on canvas. 2½ lbs. good yellow soap dissolved in 1½ gallon boiling water; grind the hot solution with 3½ gallons of good oil paint.

Red Paint, quick drying (8 to 20 Minutes).

(Used for Pillar-boxes.)

Japanner's gold size	40 per cent.
Red lead	60 „

When dry, varnish with outside oak varnish.

Waterproof Paints.*

For General Purposes.

(1.)

2 gallons linseed oil, boiled with 11 ozs. each of rosin and litharge, 1½ oz. each of minium and umber; add gradually 8 ozs. of sulphate of zinc and a solution of 12 ozs. of potassium hydrate, and a like quantity of alum in 4 gallons of water. For preparing the ground colour, compound 10 lbs. of chalk and 2 lbs. of zinc white with ¾ gallon of water in which 1½ oz. of alum has been previously dissolved, and mix with this a solution of 1½ lb. of glue in ½ gallon of water. This ground paint is mixed with 4 to 5 lbs. of the above composition, and the mixture diluted with petroleum.

(2.)

12 ozs. of melted rosin, thoroughly mixed with 6 gallons of fish oil and 1 lb. of melted sulphur, and some ochre or any other colouring substance rubbed up with linseed oil. Apply several coats of the hot composition with a brush. The first coat should be very thin. Suitable for either wood or stone.

For Casks and Waterspouts.

Boiled oil, 1 part; charcoal, finely powdered, 1 part. Mix to consistence of paint.

For Vessels and Submarine Works.

Sulphate of copper, 400 lbs.; grape sugar, 100 lbs.; concentrated solution of potash, 200 lbs. The precipitate of hydrated oxide of copper formed by heating this mixture is filtered, dried, and

* It has been proved that no paint film, of which linseed oil is one of the chief constituents, can be made *thoroughly* impervious to moisture.

mixed with 8 lbs. of 75 per cent. carbolic acid. Heat the mass moderately, and add about 12 gallons of crude linseed oil. When the paint is to be used it is reduced with linseed oil, and then applied. This composition is claimed to prevent the deposition of marine animals on the surface to which it is applied.

Paints for Waterproofing Outside Walls.

(1.)

Rosin, 4¼ ozs.; litharge, 3 ozs., boiled in 1 pint of clear linseed oil until the wooden spatula used for stirring becomes brown. Give the walls 2 or 3 coats of this, preferably on a hot and dry summer's day.

(2.)

A solution of paraffin wax in heavy coal-tar oil is excellent for painting houses, and especially walls exposed to the action of the weather. Several exper ments in painting damp walls with this solution have given very satisfactory results. Wall-paper which formerly became moist and detached from the walls during rainy weather remained perfectly dry after the wall had been painted with this solution, which is prepared by dissolving 1 part of paraffin wax in 2 to 3 parts of coal-tar oil at a moderate heat. A sufficient quantity of oil must be used so that the solution does not entirely congeal on cooling. To heat the paint while applying it, place the vessel containing it in hot water. It is best to apply the solution on a warm day, when the bricks are dry. Generally 1 coat is sufficient, but even if 2 coats are given the cost is considerably less than that of oil paint.

'Cuirass' Waterproofing.

This paint is applied for waterproofing worn zinc, lead, leaky felts (of any make), concrete, damp walls. It is ready mixed and is applied cold with a brush.

Paint for Wooden Floors.

Soak 2 ozs. good light-coloured glue in cold water for 12 hours, and dissolve it with constant stirring in thick milk of lime (prepared from 1 lb. of caustic lime) heated to the boiling-point. Stir in 8¾ ozs. linseed oil. Mix with any colour not affected by lime, and dilute with water if necessary. For yellow-brown or brown-red colours, boil in the ground colour ¼th of its volume of a solution of shellac and borax. A coat of varnish produces a bright surface.

Paint for Red Brick Floors.

Wash the bricks with soap-water containing ¼th part of carbonate of soda. Dissolve 1 part of glue in 16 of boiling water and 4 parts of red ochre, and stir the mass thoroughly together. Apply 2 coats of this to the bricks, and then give a coat of linseed oil varnish.

Preservative Solution for Stonework.

1 part white shellac, dissolved in 8 parts wood spirit. Apply to surface by means of a watering pot provided with a rose.

Paint for Roofs.

Pulverised slate (argillaceous schist), 35 parts; pulverised mica slate (mica schist), 30 parts; pulverised rosin, 35 parts; mix with ½ its volume of pure coal-tar, and boil to a fluid mass. This paint gives a very durable and pliant coating, which does not melt in the greatest heat of summer nor crack or break in the greatest cold. It resists moisture, and retains its lustre and smooth surface. It will last for 4 or 5 years.

Paints for Preserving Wooden Posts.

(1.)

50 parts rosin, 40 parts powdered chalk, 4 parts linseed oil; melt together in an iron boiler, add 1 part of natural cupric oxide, and stir very carefully into the mixture 1 part of sulphuric acid. Apply with a stiff brush. When dry the mass forms a coating as hard as stone.

(2.)

1¾ part rosin (melted), 48 parts fish oil, 1½ part sulphur. When the mixture is thoroughly combined and liquid, add sufficient ochre rubbed up with linseed oil to give the desired shade of colour. Apply the mass while still warm in as thin a coat as possible, and in a few days, when the first coat is dry, repeat the operation.

Paint for Felt Roofing.

Washed graphite, 2 parts; red ochre, 2 parts; cement, 16 parts; barium sulphate, 16 parts; plumbic oxide, 6 parts. These materials to be ground in an oil varnish prepared as follows: 100 parts of good linseed oil are boiled for 8 hours in a copper boiler with 5 per cent. of pyrolusite. 10 parts of flowers of sulphur and 20 parts of French pitch are then dissolved in the mixture, and the mass filtered before it becomes cold. 25 lbs. of this composition and 1½ gallons of linseed oil varnish or linseed oil, for reducing the paint, are sufficient to give 2 coats to 1,000 square feet of roof surface. The first coat, while still wet, is uniformly covered with fine dry sand by means of a sieve. The sanding should be done during the progress of the painting, so that the workman is

not obliged to step on to the wet paint. The free sand is renewed with a broom before the second coat is given, and it is best to apply this 8 days after the first. The second coat need not be sanded, its purpose being to combine with the first to form an insoluble mass hard as stone, and to give to the roof a neat, finished appearance.

'Cuirass' Roofing.

Cuirass Liquid Proofing waterproofs felts and leaky roofs of whatever make, and lead, zinc, concrete, asphalt, etc.

Quickly-drying Oil Paint.

Boil for 15 minutes in an earthenware pot 1 part of soft curd soap in 3 parts of water. Pour the mass through a colander, wash it with cold water, and press out the water in a linen cloth. To 1 part of the curd soap add $\frac{1}{4}$ part of unslaked lime and $\frac{3}{4}$ part of water. Triturate the fat slime thus formed in oil or water with the necessary pigments. Walls, ceilings, stairs—in short, anything of stone, plaster of Paris, or zinc—can be painted with this. If the paint is to be used on wood, add $\frac{1}{4}$ part of linseed oil. Ochre, chrome yellow, Berlin blue, indigo, lead, and zinc, are best adapted for colouring substances. The mixture dries so quickly that 3 coats can be applied in a day. It is entirely without odour, and is about one-third the cost of ordinary oil paint.

Fire-resisting Paint.

(1.)

20 lbs. finely pulverised glass, 20 lbs. finely pulverised porcelain, 20 lbs. any sort of stone in powder, 10 lbs. calcined lime, and 30 lbs. water glass (silicate of soda). The solid elements having been powdered as finely as possible and sifted, are moistened and then intimately mixed with the water glass. This yields a syrupy mass that may be employed for painting, either alone or mixed with colour. The coating is applied with a brush, as other paints are, as uniformly as possible over the surface to be protected. The first coat hardens immediately, and a second one may be applied 6 hours or more afterwards; two coats are sufficient. The paint must be used immediately after it is made up.

(2.)

The most practical means so far discovered by the United States Forest Products Laboratory, Madison, Wis., for economically rendering small quantities of wood fire-resistant consists in the use of fire-retardant paints. Ordinary whitewash or calcimine has proved in tests to be as fire-resistant as any paint covering tried, and it also possesses the advantages of cheapness and ease of application. While it will not prevent the burning of wood continuously exposed to a high temperature, a good coat of calcimine will decrease the likelihood of a blaze spreading from small sources of fire, such as flying sparks and matches. Calcimine is naturally more effective for interior than for exterior use. For work of the latter class the Forest Products Laboratory has developed an effective paint composed of linseed oil, zinc borate, and chrome green, which has maintained its fire-resisting properties through more than three years of exposure to the weather.

Heat-indicating Paint.

A paint for indicating an excessive rise of temperature in machinery bearings is composed essentially of a mixture of the double iodide of silver and mercury and copper mercuric iodide. The former is a pale yellow powder at normal temperatures, but turns to a vivid carmine at 90° to 100° C., while the copper salt, which is normally of a strong scarlet vermilion, changes to a chocolate brown at 60° to 70° C. A mixture of the two in the proportion of 85 per cent. of the copper salt and 15 per cent. of the silver changes promptly from vermilion to nearly black at 60° to 70° C. The paint is made with the aid of white shellac spirit varnish (100 grms. of the mixture to 70 cub. cm. of the spirit), and is applied in the form of a band or bull's-eye to the bearing. After the paint has become dry it is to receive a coat of colourless oil-proof varnish.

See also p. 898.

Painting Portland Cement.

Portland cement work which is to be painted must be thoroughly hardened and dry. It is advisable to let the work stand for a year before oil paints are applied. The durability of the paint will be assured by, first, brushing over the surface with dilute sulphuric acid—one part of acid to 100 parts water—and allowed to dry before painting. A preparatory coating for oil paint is a solution of common water glass in three or four parts of water. Two applications of this, followed by a washing with water, and then another application of water glass, will be found effective.

Coal-Tar Paint.

(1) Coal-tar, 8 parts; Portland cement, 1 part; kerosene oil, 1 part. (2) Coal-tar 16, Portland cement 4, and kerosene 3 parts. The Portland cement neutralises the action of the tar on iron and steel, while the kerosene acts as dryers. It is suitable for painting ironwork of all kinds, and is a satisfactory coating, it is said, for ships' sides, and may also be used on galvanised iron.

'Foliac' Ontar Composition.

This composition (*Graphite Products, Ltd., Battersea, S.W.*) is a coating for application over tar or bitumen coating in order that linseed oil paints may be used. Oil paints cannot

ordinarily be used on top of tar or bitumen, because these always strike through the superimposed coats of paint, and cause, *inter alia*, discoloration.

Graphite Paint.

The best and longest records of satisfactory protection against corrosion are said to be held by graphite paints containing silica in intimate admixture with the tough crystalline graphite. An example of this is the 'Foliac' silica-graphite paint manufactured by *Graphite Products Ltd., Battersea*, which is British manufacture throughout, and has been specified for a large number of steel structures, including Admiralty airship sheds, oil fuel tanks, and gas holders, Office of Works and Ministry of Munitions explosives and filling factories, docks and harbours for transit sheds, cranes, etc., and railways for bridges, station roofs, wagons, signal work, etc. The relative covering power of the paint is high, and it is therefore economical in use.

Bituminous Paints.

Bituminous paint is a good preventive to rust as it adheres closely to the material to be protected, it is strongly resistant to sulphurous vapours prevalent in the air of industrial centres, and very few of the mineral acids attack it, with the exception of nitric acid. Nitrous fumes have little or no action on the better bituminous paints. A good bituminous paint should dry within four or five hours, and the chances of injury by rain or similar eventualities during the setting are, therefore, correspondingly small. A high-class bituminous paint may be applied at a cost of something like a farthing per square foot with two coats of the paint applied. The life of a well-compounded bituminous paint extends up to twenty years' efficient protection.

Luminous Paint.

Mix 50 parts of lime with 20 parts of flowers of sulphur, heat them together in a closed crucible until all fumes cease to be evolved. When quite cold grind the product up with varnish or paint which is quite free from lead. Luminous paint produced from oyster shells is the most efficient in retaining its luminosity after dark. Take clean shells and, after washing them in warm water, place them in the fire for half an hour, and when cool, after removal, pound them up very small and fine, taking away any grey portions as being of no use, then put this powder in a crucible with alternate layers of flowers of sulphur, place on the lid and cement it round with sand made into a stiff paste with beer; as soon as this is dry, place the crucible in the fire and bake for one hour. Wait until quite cold before opening the lid. The product should be white; any grey portions must be separated as non-luminous. Sift it through fine muslin, and mix with either varnish or gum water. For use with buoys or in places exposed to the weather, varnish of the best quality only must be used.

LACQUERS AND BRONZES.

Lacquer for Iron and Steel.

Mastic, 10 parts; camphor, 5 parts; sandarach, 15 parts; elemi, 5 parts. Dissolve in alcohol and apply without heat.

A Rustless Coating for Steel.

A solution of white wax in benzine applied with a camel-hair brush. When the film of wax hardens, the bulk of it is wiped off with a chamois leather, just sufficient remaining to prevent rust, but not to be noticeable.

Angus Smith's Coating for Pipes.

Coal Tar 1 cwt., Tallow 7 lbs., Quick Lime (slaked) 10 lbs., Pine Resin 4 lbs., Coal Naphtha, sufficient to thin the composition to a degree suitable for proper coating. Heat mixture, and immerse pipes, and allow to remain until the same temperature is diffused through the mass; then withdraw pipes. This treatment leaves a very firm and hard coating of pitch. It is very essential that the mixture be heated to a proper degree, viz., 350° to 450° F. If heated too much the pitch will not adhere properly, but will scale off.

Bronzing Liquids.

(1.)

Sulphate of copper, 1 oz.; sweet spirits of nitre, 1 oz.; water, 1 pint.

(2.)

Solution of chloride of platinum, laid on surface with a feather. When dry, blacklead over with an ordinary blacklead brush, and then lacquer.

(3.)

Boil 1 oz. of ammonium carbonate and a like quantity of blue vitriol in 1¼ pint of vinegar until the latter is nearly evaporated. Then add 1¼ pint of vinegar in which has been dissolved ½ drachm of oxalic acid and a like quantity of sal ammoniac. Place the mixture (known as Walker's Chemical Bronze) over the fire until it commences to boil, then allow it to cool; filter, and put by in well-closed bottles.

If a medal, etc., is to be bronzed, it is first thoroughly cleansed, then heated, and the liquid applied by means of a badger-hair brush. In a short time boiling water is poured over the medal, and when dry it is rubbed with a cotton rag dipped in oil, and then with dry cotton.

Browning for Gun Barrels.

Tincture of muriate of iron, 1 oz.; nitric ether, 1 oz.; sulphate of copper, 4 scruples; rain-water, 1 pint. When the barrel is finished let it remain in lime-water for a short time; then scratchbrush and apply bronzing.

Lacquer for Gun Barrels after Browning.

Shellac, 1 oz.; dragon's blood, ¼ oz.; rectified spirit, 1 quart. Dissolve and filter.

To Chemically Blacken Brass.

Dissolve copper in nitric acid (out of doors) until all action ceases; when cold decant into another jar.

Sand-blast work, or clean in hot lye and soda; dry in sawdust; heat to 212° F.; immerse in the (cold) nitrate solution; remove and heat again sufficiently to dry off solution and burn off green colour; repeat if necessary; cool and free from oxide by brushing; dip in ammonia; rub dry with soft cloth or in sawdust—work is then brown. To make it dead black, heat just enough not to burn hands, and rub with soft leather and fine olive oil; heat, to dry oil.

Highly-polished work, if well cleaned and dipped in commercial ammonia before applying nitrate, will take a permanent black.

Sand-blasted work takes a black that cannot be removed by ordinary wear.

Black-bronzing Aluminium.

(1) Immerse the articles, after being thoroughly cleaned, in a hot solution containing 8 oz. of white arsenic, 8 oz. of iron sulphate, ¾ gallon of hydrochloric acid, and ¾ gallon of water. When sufficiently blackened the articles are removed, washed and lacquered. A more adhesive deposit may be obtained by adding to the solution a small quantity of ammonium molybdate and yellow prussiate of potash. (2) Paint the articles with a solution made by dissolving 60 grammes of copper chloride in 300 c.c. of water and add ammonia in excess to re-dissolve the precipitate first formed. Then heat the articles, care being taken not to melt the aluminium. A deeper black may be got by repeating the process, or by dipping the articles in a solution of sodium sulphide.

Black Finish on Steel Shears, etc.

Prepare a saturated solution of caustic soda and add about ½ lb. of saltpetre to a five-gallon solution. Boil the solution for a short time, and allow it to cool. The clear liquid should only be used, and this should be brought to the boiling point in an iron kettle. The articles should be wired as for plating and immersed in the solution. The articles will take on a grey colour at once with black underneath, and should be left in the solution until the grey finish disappears and a beautiful black remains. Rinse the articles in cold water, dry in sawdust and oil with linseed oil, and wipe clean. The resulting finish will be a fine blue-black that wears well.

VARNISHES.

Incombustible Varnish for Wood.

An application of a solution of equal parts of alum and isinglass to the place exposed to the flame prevents ignition, but not the transmission of heat. By coating wooden vessels with this varnish fluids may be boiled in them over an ordinary fire.

Varnish for Wood not acted upon by Boiling Water.

Boil in an untinned copper boiler 750 parts of linseed oil. Suspend in this, in a bag which must not touch the bottom, 150 parts of litharge and 90 parts of pulverised minium. Let the oil boil until it has assumed a dark brown colour; then remove the bag, and replace it by one containing 7 to 8 bulbs of garlic. Now melt 500 parts of pulverised amber in 60 parts of linseed oil over a strong fire; add it while boiling to the prepared linseed oil, and let it boil for 2 to 3 minutes longer, stirring it vigorously. Then take it from the fire, allow it to settle, pour off the clear liquid, and when cold put it in bottles, which should be hermetically closed.

Quick-drying Varnish.

A quick-drying varnish that is less liable to crack than that made from kauri gum is made in the United States from the nuts of the Chinese wood oil tree (*Aleurites fordii*). The tung (or wood) oil has also been found of special value for waterproofing cement.

Varnish to prevent India-rubber Gas-tubing from Leaking.

Treacle, 1½ part; gum arabic, 2 parts; white wine, 7 parts; strong alcohol, 3½ parts.

Waterproofing Material.

A new French material for waterproofing leather, cloth, paper, and other materials, consists of a mixture of eight parts of amylacetate and four of castor oil, with one part of sulphur chloride stirred into it. This forms a jelly, giving off hydrochloric acid; it liquefies after being kept tightly covered a few days, and, the acid being then neutralised with barium carbonate, gives a colourless solution on filtering. To make a varnish, nitrocellulose is dissolved in the liquid after the addition of alcohol or benzine.

CEMENTS AND GLUES.

CEMENTS.

Rust Joint.

Quick-setting.

1 lb. sal ammoniac in powder; 2 lbs. flowers of sulphur; 80 lbs. iron filings or borings. Mix to a paste with water.

Slow-setting.

2 lbs. sal ammoniac in powder; 1 lb. flowers of sulphur; 200 lbs. iron filings or borings. Mix to a paste with water. This cement is better than the quick-setting, if the joint is not required for immediate use.

For Steam Boilers, Steam Pipes, etc.

(1.)

Soft.

Red or white lead in oil, 4 parts; iron borings, 2 to 3 parts.

(2.)

Hard.

Iron borings and salt water, and a small quantity of sal ammoniac with fresh water.

(3.)

5 lbs. Paris white, 5 lbs. yellow ochre, 10 lbs. litharge, 5 lbs. red lead, 4 lbs. black oxide of manganese. The whole is to be well mixed, and a little asbestos and boiled oil added. This soon becomes nearly as hard as the iron itself.

This cement is also excellent for making fluid-pressure joints.

(4.)

Take white lead ground in oil, and add dry red lead sufficient to make a stiff putty. Pound this on a block of iron or stone until it becomes soft, continuing to add red lead until the mass will no longer soften or stick to the fingers. Interpose this putty between the flanges of the steam-pipe joints. This will make the best joint known.

For Leaky Iron Pipes.

In cases where caulking, plugging, or other mechanical means of stopping leaks in iron pipes cannot be adopted, a cement made by mixing finely pulverised black manganese oxide and raw linseed oil into a thick paste will usually be found effective. It should be thoroughly forced into the leak, and the pipe should be kept warm enough to absorb or remove the oil from the manganese. In about twenty-four hours the cement should be as hard as the iron, and should adhere thoroughly, so that leakage does not again occur.

Fire-resisting Cement for Iron Pipes.

Iron filings, 10 parts; brick clay, 20 parts; China clay or fireclay, 15 parts; common salt solution, 8 parts.

For Iron Stove-pipes and for filling Cracks in Stoves.

Pulverised brick clay, 1 part; wood ashes, 1 part. Add a little salt, and mix to consistence of syrup.

To fasten Iron to Iron.

(1.)

Sulphur, 6 parts; white lead, 6 parts; borax, 1 part. When composition is to be applied, wet with strong sulphuric acid and smear on surfaces, which must be at once pressed together. Allow one week to dry.

(2.)

Equal parts of litharge, red lead, and sufficient glycerine to form a paste. This cement is said to be waterproof, fireproof, and to resist the action of alkalies.

For Holes in Castings.

Flowers of sulphur, 1 part; sal-ammoniac, 2 parts; iron filings or borings, 80 parts. Mix to a thick paste with water.

To fasten Iron to Stone.

(1.)

Iron filings, 20 parts; plaster of Paris, 50 parts; sal ammoniac, 3 parts. Mix to a thin paste with weak vinegar.

(2.)

Sulphur, 1 part; pitch, 1 part.

To fasten Iron to Marble.

A cement for making repairs on switchboards when iron or other metal has to be fastened to marble may be made from thirty parts plaster of Paris, ten parts iron filings, and half-part sal ammoniac. These, states the *American Machinist*, are mixed with acetic acid to form a thin paste. This cement must always be used immediately after being mixed.

To fasten Metal to Wood.

In order to fasten metal to wood without the use of nails or screws, the metal parts may be roughened by the use of dilute sulphuric acid. As soon as the metal has been wiped dry, it is glued on with the best joiner's glue to which a little glycerine has been added. This process is not only adapted for small plates or slabs, but also larger ones, but care must be taken that they touch the roughened wood surface evenly throughout.

Cement for fastening Metal Letters upon Glass, Marble, Wood, etc.

Copal varnish, 15 parts; linseed-oil varnish, 5 parts; oil of turpentine, 5 parts; glue, 5 parts. The glue is dissolved by placing the mixture in a water-bath. When the solution is complete 10 parts of slaked lime are added to it.

A Strong General Cement.

4 ozs. clear gum arabic, 3 ozs. fine starch, 2 ozs. white sugar. Dissolve gum in water; then dissolve starch and sugar in gum solution; boil mixture in a water-bath until starch becomes clear. Add a few drops of oil of cloves.

To fix Paper to Metals.

Gum tragacanth, 30 grammes; gum acacia, 120 grammes; water, 500 cubic centimetres. Dissolve, filter, and add 2½ grammes of thymol in 120 cubic centimetres of glycerine. Add water to make up bulk of 1 litre.

To fix Cloth to Metal or Wood Rollers.

Glue, 1 part; isinglass, 1 part. Soak in small quantity of water for 10 or 12 hours. Then boil, and add pure tannin till it becomes thick. Apply hot.

To fasten Leather to Metal.

Digest one part of coarsely crushed gall-nuts with eight parts of distilled water about six hours, and filter through linen. Then pour one part of cold water over one part of glue, leave it to stand for twenty-four hours, and heat the whole, whereby a concentrated glue solution is obtained. Now coat the leather with the warm gall-nut extract, bring the glue solution on the roughened and warm metal, lay the leather on it, press it firmly, and allow it to dry in the air. The leather will adhere so firmly to the metal that it cannot be separated without tearing it.

To cement Leather on Iron Pulleys.

Roughen pulley with old file. Glue leather to pulley with glue, 1 part; glycerine, 1 part.

To cement Rubber upon Metal.

Soak pulverised shellac in 10 times its weight of strong ammonia. The result will be a transparent mass, which becomes liquid in 3 to 4 weeks without the use of water. This fluid makes the rubber soft, but after the evaporation of the ammonia it becomes hard, and impermeable to gases and fluids.

To join Leather Driving-belts.

Mix 10 parts of bisulphide of carbon and 1 of oil of turpentine, and dissolve in it a sufficient quantity of gutta-percha to form a paste. The pieces of leather to be joined are cleansed from oil and grease by laying a rag upon their surfaces and placing a hot iron upon it. Both pieces are then spread with the cement, and subjected to pressure until the cement has become dry.

To cement Leather to Leather.

Soak ordinary glue or isinglass for 12 hours in sufficient cold water to cover it. Boil, and add pure tannin until the solution becomes sticky and has the appearance of white of egg.

Cement for mending Rubber Goods.

Bisulphide of carbon, 26 parts; gutta-percha, 2 parts; caoutchouc, 4 parts; fish glue, 1 part.

Cement for Mending Celluloid and Hard Rubber.

For celluloid goods prepare a cement made by dissolving one part of camphor in four parts of alcohol, and adding an equal amount of shellac to the camphor solution. The cement must be applied hot. For hard rubber articles use a melted mixture of gutta-percha and genuine asphalt, which is likewise applied hot. The celluloid as well as the hard rubber goods must have the fractured surfaces kept pressed together until the cement has cooled.

To Cement Wood to Tin.

1 part yellow wax melted: stir in 2 parts gutta percha chips until quite dissolved, then dissolve therein 2 parts shellac and $\frac{1}{10}$th part boiled linseed oil. Apply melted cement to dried surface of wood and tin, and press two surfaces together for 24 hours.

Cement for quickly closing Leaky Places in Barrels.

Tallow, 25 parts; wax, 20 parts; lard, 40 parts; sifted wood ashes, 25 parts. Mix together by heating, and apply to the defective place by means of a heated knife-blade.

Cutler's Cements for fastening the Blades of Knives into Handles.

1. Rosin, 4 parts; beeswax, 1 part; brick dust, 1 part.
2. Rosin, 4 parts; pitch, 4 parts; tallow, 2 parts; brick dust, 2 parts.

Cement for Marble.

Four parts finely-powdered gypsum; 1 part finely-powdered gum arabic. Mix intimately, then with a cold solution of borax make into a mortar-like paste. Use the paste as a cement. Leave the cemented parts for several days undisturbed so that the cement shall thoroughly set.

Cement for Glass.

15 parts caoutchouc in 60 parts chloroform; add about 35 parts mastic, and allow to stand without heat for eight days.

Cement is elastic and transparent; additional caoutchouc increases elasticity.

Oil Resisting Cement.

For use in certain engineering work a cement is often required which will withstand the action of paraffin or petroleum jelly. Recent investigations show that this can be made by boiling rosin with one-third its weight in caustic soda and one and two-thirds its weight of water. After cooling the water separates and can be thrown away, the residue being then made into a plastic state with plaster of Paris. It is said that a joint made with this will stand any ordinary conditions.

Plastic Cements.*

(*J. B. Barnitt.*)

Asphalt and Pitch.

Asphalt in benzol is useful as an adhesive for uniting glass for photographic and microscopical uses, also for coating wood, concrete, brick work steel, etc., where the melted asphalt would be too thick to apply readily. Benzol is the cheapest and most satisfactory solvent. For waterproofing, melted asphalt with a small amount of paraffin added, and in particular cases boiled oil, is used:—

(*a*) Refined lake asphalt.

(*b*) Asphalt, 4 parts; paraffin, 1 part.

* *The General Chemical Bulletin*, Laurel Hill Laboratory, Feb. 1917.

(*c*) Asphalt, 10 parts; paraffin, 2 parts; boiled oil, 1 part.
Any of the above may be thinned with hot benzol or toluol.
(*d*) Pitch, 8 parts; resin, 6 parts; wax, 1 part; plaster, ¼ to ½ part.
(*e*) Pitch, 8 parts; resin, 7 parts; sulphur, 2 parts; stone-powder, 1 part.
Compositions (*d*) and (*e*) are used to unite slate slabs and stoneware for engineering and chemical purposes.
The following are plastic cements for caulking:—
(*f*) Pitch, 3 parts; shellac, 2 parts; pure crude rubber, 1 part.
(*g*) Pitch, 1 part; shellac, 1 part; rubber substitute, 1 part.
(*f*) and (*g*) are mixed by melting over a burner.

Resin, Shellac, and Wax.

A strong stone cement having little body and applied in layers.
(*a*) Resin, 8 parts; wax, 1 part; turpentine, 1 part. For nitric and hydrochloric acid vapours.
(*b*) Resin, 1 part; sulphur, 1 part; fireclay, 2 parts. Sulphur gives great hardness and permanency in resin cements.
Good waterproofing cements are:—
(*c*) Resin, 1 part; wax, 1 part; powdered stone, 2 parts.
(*d*) Shellac, 5 parts; wax, 1 part; turpentine, 1 part; chalk, 8 to 10 parts.
For a soft airtight paste for ground glass surfaces:—
(*e*) Wax, 1 part; vaseline, 1 part.
A strong cement without body for metals (not copper), porcelain and glass.
(*f*) Powdered shellac, 1 part; ammonia water, 10 parts. Allow to stand until solution is effected.

Rubber.

As a leather cement:—
(*a*) Asphalt, 1 part; resin, 1 part; gutta percha, 4 parts; carbon disulphide, 20 parts.
As a resistant to acid vapours:—
(*b*) Rubber, 1 part; linseed oil, 2 parts; fireclay, 3 parts.
A plain rubber cement:—
(*c*) Cut crude rubber in small pieces and then add carbon disulphide or benzol, allowing the rubber to dissolve.
Corks and wood are made impervious to water by soaking them in the above solution.

Linseed Oil.

For aqueous vapours:—
(*a*) China clay and linseed oil.
(*b*) Lime and linseed oil, forming the well-known putty.
(*c*) Red or white lead and linseed oil.
The above mixtures become very strong when set, and are best diluted with powdered glass, clay, or graphite.
(*d*) Oxide of iron and linseed oil.

Casein, Albumen, and Glue.

Cements of this nature are resistant to moderate heat and oil vapours but not to acid fumes.
(*a*) Finely-powdered casein, 12 parts; fresh slaked lime, 50 parts; fine sand, 50 parts; and enough water to make a thick mass.
A strong cement for ground unions standing a moderate heat.
(*b*) Casein in fine powder, 1 part; rubbed with silicate of soda, 3 parts.
(*c*) White of egg made into a paste with slaked lime. This should be used immediately after being made up.
A composition for soaking corks, wood packing, etc., to render impervious to oil vapours:—
(*d*) Gelatine, 2 parts; glycerine, 1 part; water, 6 parts.

Silicate and Oxychloride Cements.

For oil vapours standing highest heat:—
(*a*) Paste of sodium silicate and asbestos.
For gaskets for superheated steam retorts, furnaces, etc.:—
(*b*) Sodium silicate and glass.
(*c*) Sodium silicate, 50 parts; asbestos, 15 parts; slaked lime, 10 parts.
A metal cement:—
(*d*) Sodium silicate, 1 part; oxides of zinc, lead, or iron, singly or mixed, 1 part.
(*e*) Zinc oxide, 2 parts; zinc chloride, 1 part; water to make a paste.
(*f*) Magnesium oxide, 2 parts; magnesium chloride, 1 part; water to make a paste.

Flour and Starch.

(*a*) Flaxseed makes a very tough cement, but does not withstand water.
(*b*) Flour and molasses to a stiff paste.

(2.)

Tallow, 8 lbs.; palm oil, 10 lbs. Heat to 212° F., and well stir.

Antifriction Grease.

(1.)

Tallow, 100 lbs.; palm oil, 70 lbs. Boil together, and when cooled to 80°F. strain through a sieve and mix with 28 lbs. common soda and 1½ gallon of water.

(2.)

Blacklead, 1 part; lard, 4 parts.

Rosin-Oil Soap.

90 lbs. powdered slaked lime, stirred into 100 lbs. rosin oil. Heat the mixture, constantly stirring it until a uniform paste of the consistence of syrup is obtained. This rosin oil is a component of all the patent wagon greases.

Blue Patent Grease.

2 lbs. powdered slaked lime, heated in 550 lbs. of crude rosin oil for 1 hour, and then allowed to cool. Skim the oil, and stir in 10 to 12 lbs. of rosin-oil soap, until the compound is of a buttery consistency and of a blue colour.

Yellow Patent Grease.

1 part turpentine, 20 parts caustic lye. Add to 350 parts of blue grease.

Black Patent Grease.

2 parts lampblack, 110 parts blue grease.

Patent Palm-Oil Wagon Grease.

Melt 10 lbs. rosin-oil soap in 10 lbs. palm oil; add 550 lbs. rosin oil, with as much rosin-oil soap as will give the whole the consistence of butter; finally, add 7½ to 10 lbs. of caustic soda lye.

Adhesive Grease for Machine Belts.

Lubricate the belts with fish oil to which 10 per cent. of tallow has been added. This will make them flexible, and augment their friction on the pulleys.

Grease for Waterproofing Leather.

Oleic acid, 24 parts; crude stearic acid, 6 parts; ammoniacal soap, 18 parts; extract of tannin, 6 parts; water, 24 parts. Melt the oleic acid together with the stearic acid; then add gradually the ammoniacal soap, the extract of tannin, and finally the water. The ammoniacal soap is obtained by adding to heated oleic acid caustic ammonia until, after continued stirring, the odour of ammonia remains apparent and the whole congeals to a jelly-like mass.

Cooling Compound for Hot Bearings.

(1.)

Mercurial ointment mixed with black cylinder oil and applied every quarter of an hour, or as often as expedient. The following is also recommended as a good cooling compound for heavy bearings:—Tallow, 2 lbs.; plumbago, 6 ozs.; sugar of lead, 4 ozs. Melt the tallow with gentle heat, and add the other ingredients, stirring until cold. For lubricating gearing, wooden cogs, etc., nothing better need be used than a thin mixture of soft soap and black lead.

(2.)

For cooling a hot bearing Professor Lecocq, of the Charleroi Higher Industrial School, recommends that the oil usually employed for lubrication be dissolved in an equal quantity of petroleum spirit, the evaporation of which latter will, he says, afford the cooling desired.

Watchmaker's Oil.

Expose the best olive oil to a temperature a few degrees below the freezing point, which will cause all foreign substances to separate. Pour off carefully the supernatant clear oil, and filter through a cup of linden wood or pith of elder wood. By this process an oil is obtained which will remain liquid for several years, and does not attack the delicate machinery.

Neat's-foot oil treated in the above manner furnishes a less useful oil, since it loses much fatty matter by exposure to cold.

A very useful oil is obtained by dissolving 1 part of pure neat's-foot oil in 3 of pure benzine. Allow the compound to remain for several days in a closed vessel; then filter, and expose the solution to a temperature of 40° F., at which it is again filtered, and the benzine distilled off. The oil should be kept in small, dark vials protected from the air.

A very fine lubricant for clocks and watches is, according to Artemus, obtained by mixing 2 parts of solar oil with 1 of rape-seed oil.

To test the fitness of Oils for Lubricating Watches and Clocks.

Pour a drop of the oil to be tested upon different metal plates, as iron, brass, tin, lead, etc.; keep them in a place free from dust, and examine the drops during 8 to 14 days in regard to their liquidity. Oil remaining liquid after the lapse of this time can be safely used.

Viscosity of Various Standard Oils.

Description.	Viscosity.	
	At 70° F.	At 120° F.
Sperm oil	100	45
Whale oil	190	70
Olive oil	213	75
Lard oil	225	78
Neatsfoot oil	247	80
Rape-seed oil	250	88
Axle oil	600	120
Valve oil	—	550
Cylinder oil	—	700

In the above table sperm oil is taken as the standard for viscosity at 70° F.

The viscosity of thick oils can be greatly reduced by adding 8 per cent. of naphthalene to the oil.

An objectionable characteristic in an oil is its tendency to become resinous with use, due to the oil undergoing the process of oxidation. This change in the oil indicates, to some extent, the degree of refining process the oil has undergone. A simple test can be made in the following way:—Place a small quantity of oil in a glass beaker and put in a nearly equal amount of nitric acid. Should the oil have no tendency to gum, the acid and oil will combine and get very thick, while should there be any objectionable characteristic the oil will remain thin.

CLEANING AND PRESERVATIVE COMPOSITIONS.

To clean Brass.

Oxalic acid, 1 oz.; Rotten stone, 6 oz.; powdered gum arabic, ½ oz.; sweet oil, 1 oz. Rub on with piece of rag.

Soap for cleaning Metal-work.

The soaps used for cleaning metal-work usually consist of mixtures of vaseline, oleic acid, and fat, mixed with a small quantity of rouge. When freshly prepared they leave nothing to be desired; but, unfortunately, such mixtures soon turn rancid and become unfit for use. A newer soap for metal-work, which is stated to be free from this objection, is made from cocoanut butter in the following way:—2·5 kilogrammes of the butter are melted in an iron vessel, together with a little water, and to the mixture is added, with constant stirring, 180 grammes of chalk, 87·5 grammes of alum, 87·5 grammes of cream of tartar, and 87·5 grammes of white lead. This mixture is then poured into moulds and allowed to solidify. The soap so obtained is made into a paste with water, rubbed over the metal to be cleaned, and finally removed by a dry rag or chamois leather.

To clean Grease from Paper.

(1.)

Warm the spotted part, and press blotting-paper upon it until all the grease is extracted that is practicable by this method; then with a brush apply very hot turpentine, and wash off with alcohol.

(2.)

Apply benzine collas freely to the spot.

To clean Marble.

Powdered chalk, 1 part; powdered pumice stone, 1 part; soda, 2 parts. Mix with water. Paint over marble; then clean, and wash off with soap and water.

To clean Grease from Stone or Marble.

Soft soap, 1 part; fuller's earth, 2 parts; potash, 1 part. Mix with boiling water. Lay it on the spots, and let it remain for a few hours.

A Solvent for Rust.

It is often very difficult, and sometimes impossible, to remove rust from articles made of iron. Those which are very thickly coated are most easily cleaned by being immersed in a solution (nearly saturated) of chloride of tin. The length of time they remain in this bath is determined by the thickness of the coating of rust. Generally twelve to twenty-four hours is long enough.

To cleanse Paint Brushes from Dried-in Paint.

Suspend the brush in a tumbler containing a solution of 1 part of crystallised sodium carbonate in 3 of water, in such a manner that it hangs several inches from the bottom of the tumbler. Let it stand from 12 to 24 hours in a moderately warm place (140° to 150° F.). The dried paint will be softened so much that it can be easily washed out with soap and water. Brushes which have become as hard as stone can be restored by this process.

To Remove Rust from Iron.

(1.)

Freely apply turpentine or paraffin oil, leave for twelve hours, and then rub with the finest emery cloth.

(2.)

Dip in strong hot potash bath, for about ½ hour. Then immerse in a cold muriatic acid pickling solution—2 parts water, 1 acid. This removes rust in a few minutes, the metal being attacked but very little. Without the potash it will take about 65 minutes against 4 when both baths are used. The appearance of the rust when treated is black and soft and it can almost be entirely rubbed off with the hands. The metal so treated has a smooth, glossy finish.

(3.)

A dip of 40 parts of muriatic acid and 60 parts of water is effective for removing rust. After the rust has been removed, it is necessary to dip the steel in a strong alkaline bath to remove every trace of acid. The alkaline solution usually employed for this purpose is composed of 2 oz. each of soda ash, sodium cyanide, and caustic lime.

To Remove Rust from Iron Electrically.

A very simple and effective way of cleaning rusted iron articles, no matter how badly they are rusted, consists in attaching a piece of ordinary zinc to the articles, and then letting them lie in water to which a little sulphuric acid is added. They should be left immersed for several days, or a week, until the rust has entirely disappeared, the time depending on how deeply they were rusted. If there is much rust, a little sulphuric acid should be added occasionally. The essential part of the process is that the zinc must be in good electrical contact with the iron; a good way is to twist an iron wire tightly around the object, and connect this with the zinc, for which a remnant of a battery zinc is suitable, as it has a binding post. Besides the simplicity of this process, it has the great advantage that the iron itself is not attacked in the least as long as the zinc is in good electrical contact with it. When there is only a little rust, a galvanised iron wire wrapped around the object will take the place of the zinc, provided the acid is not too strong. The articles will come out a dark grey or black colour, and should then be washed thoroughly and oiled. The method is specially applicable to objects with sharp corners or edges, or to files and other articles on which buffing wheels ought not to be used. The rusted iron and the zinc make a short-circuited battery, the action of which reduces the rust back to iron, this action continuing as long as any rust is left.

To keep Machinery from Rusting.

Take 1 oz. of camphor, dissolve it in 1 lb. of melted lard; mix with it (after removing the scum) as much fine blacklead as will give it an iron colour. Clean the machinery, and smear it with this mixture. After 24 hours rub clean with soft linen cloth. It is stated that this mixture will keep machinery clean for months under ordinary circumstances.

To protect Iron and Steel from Rust.

The following method is but little known, although it deserves preference over many others: Add $1\frac{3}{4}$ pints of cold water to 7 ozs. of quicklime. Let the mixture stand until the supernatant fluid is entirely clear. Then pour this off, and mix it with enough olive oil to form a thick cream, or rather to the consistency of melted and recongealed butter. Grease the articles of iron or steel with this compound, and then wrap them up in paper; or, if this cannot be done, apply the mixture somewhat more thickly.

To keep Tools from Rusting.

Half-ounce camphor dissolved in 1 lb. melted lard; skim and mix in as much black-lead as will give it an iron colour. Smear tools, and after 24 hours rub clean with soft linen cloth.

Or, 6 oz. lard to 1 oz. rosin. When semi-fluid it is ready for use.

Or, use vaseline, to which, when warm, a little powdered camphor has been added.

Removing Rust from Tools.

Tools which have become very rusty should be treated with a chemical solution, instead of trying to scour the rust off by means of emery cloth. A good solution for removing rust may be made as follows. Into one quart of distilled water dissolve, little by little, sufficient chloride of tin to obtain a saturated solution, that is, until the water will not dissolve any more of the salt. Put the tool into a receptacle containing the solution and let it stand over night. In the morning rinse the solution off in running water and dry thoroughly with a piece of chamois or cloth.

(*W. S. S.*, '*Machinery.*')

Rustless Steel.

Recent research has shown that a protective influence against the rusting of steel is exerted by a copper content that would be described by an analyst as a trace. By increasing the copper content from ·01 per cent. to ·03 per cent. the corrosion is decreased by 30 to 40 per cent. Steel with a considerable excess of sulphur can be protected by a copper percentage of ·15.

Blueing Steel.

Outfit.

The outfit consists of a cast-iron kettle, one tank for boiling water, and one tank for oil (aquiline). The mixture consists of nine parts of saltpetre, by weight, and one part pyrolusite. The articles are hung in perforated baskets. A scraper is necessary for the melting kettle to stir the solution and to scrape the sediment from the bottom.

Method.

The desired temperature for treatment is obtained when all the mixture has melted and begun to boil, and when a pinch of fine sawdust thrown in bursts into flame the moment it reaches the surface. The temperature must be kept constant to give good results. In operation, the full basket may be hung on the chain at one end of a lever and lowered into the solution. The articles are left in for three minutes, then are slowly lifted out to allow the surplus solution to drain off; they are then dipped into hot water to clean off the solution; after the water has drained off, the articles are dipped into the oil and taken out as quickly as possible and allowed to drain. It is essential to note that there be no rust on the work, and that red-hot cast iron is attacked by these chemicals.

BLUEING SMALL SCREWS.

Use a boiling bath composed of:

Water	1 gallon.
Hyposulphite of soda	2 ozs.
Acetate of lead	2 „

The hyposulphite of soda and the acetate of lead are first dissolved in the water and the whole is then brought up to boiling point. The work, which must be absolutely clean and free of grease, and preferably polished, is immersed in the bath for a few seconds, and then withdrawn. At first the work will be a kind of yellow, changing to red and then to blue almost immediately. The work is rinsed in water and quickly dried. Changing the length of time during which the work is immersed in the bath will give varying depths of colour. When the desired tint is obtained note the time immersed, and give subsequent dippings the same period in the bath.

The brilliancy of the blues obtained by the above method is greatly enhanced if the work is copper plated before immersion in the colouring bath. The plating may be accomplished by the dipping process. To a quantity of distilled water add all the copper sulphate it will dissolve, then for every four ounces of distilled water add from 10 to 14 drops of sulphuric acid. Start with 10 drops in the first instance and add more sulphuric acid if required. Before coppering it is absolutely essential that the work be free from grease. It should be noted that in all colouring processes the higher the initial polish on the work the greater the brilliance of the finished work.

(*'Machinery.'*)

Blueing Small Hardened Steel Springs Without Heating.

Thoroughly clean the springs in boiling lime water and afterwards remove any remaining lime by means of a brush. Dip the springs in a nitric acid bath; wipe clean and oil; linseed oil is generally used for this purpose. (*W. R., 'Machinery.'*)

Waterproof and Fireproof Boards.

The boards are first laid in a waterglass solution of 5° to 10° Bé., where they are left 10 to 12 hours, when they are taken out and allowed to drip off. After drying, they are placed in a solution (gravity 2° to 3° Bé.) of calcium chloride, magnesium chloride, and ammonium chloride. In this they are left four to six hours, and after dripping off and drying again, they are ready for use.

COPYING PROCESSES.

Glycerine-Jelly Process.

(1.)

8 ozs. glycerine, 2 ozs. best glue; to the glue add 8 ozs. of water, and when dissolved stir in glycerine. Pour the mixture into a zinc dish, and as soon as it sets it is ready for use. Use aniline ink.

(2.)

16 ozs. glycerine, 8 ozs. golden syrup, 3 ozs. flake gelatine, 16 ozs. water. Soak gelatine in water for 10 hours; heat gently in water bath; add glycerine and golden syrup. Pour into dish. Use aniline ink.

(3.)

Gelatine, 1 lb.; water, 2 lbs.; glycerine, 5 lbs. Melt together and pour in shell dish. For the ink: aniline violet, 1 oz.; water, 5 ozs.; methylated spirit, 1 oz.

(4.)

Whiting to fill dish; glycerine in sufficient quantity to mix the whiting to the consistency of glaziers' putty. Press into dish and smooth with knife, and finally with small indiarubber squeegee. For ink use violet aniline, ½ oz.; sugar, ½ drachm; boiling water, 2 ozs.; when cold add 1 drachm each of alcohol and glycerine and 2 drops carbolic acid.

Write or draw original on dry smooth paper with a pen well filled with the aniline ink. Directly it is quite dry place it face down for 1 to 5 minutes, according to number of copies required, on composition, the surface of which must previously be moistened with water and dried with paper (newspaper will do); gently smooth down with hand to remove air bubbles. On peeling it off a negative is left on the composition. To take copies, apply to the negative sheet after sheet of any paper, smoothing them down with slight pressure, and removing them at first as quickly as possible; but as the copies become faint the paper may be left down longer on the negative, or it may be damped before putting down. The copies having been taken, sponge off the negative immediately with cold water, or tepid water if it does not come off readily. When the surface is worn and uneven, re-melt composition; a little glycerine may have to be added at each re-melting.

(5.)

The following formula for making hectograph pads is given by Mr. H. E. Smith in the 'American Engineer and Railroad Journal': Clear hide glue, 1 lb.; water, 1½ pint; glycerine, 2½ pints. The glue should be of a good quality, and the kind that comes in transparent, light-brown sheets, as the white or brown opaque glue does not give as good results. Break the glue into small pieces and soak it in the water over-night in a covered vessel. Then melt it in a water-bath, and add the glycerine, which should previously be heated to the same temperature as the melted glue. Stir only as much as is necessary to mix the glue and the glycerine, as too much stirring introduces air bubbles, which are difficult to remove. Pour the hot mixture through a cheese-cloth bag into the pans. When the pans are filled and the jelly is still quite fluid, sweep off air bubbles or impurities from the surface with the edge of a card. Let the pans stand 48 hours before using. This formula calls for much less water than usually required by other formulas, since it is preferred to secure the requisite softness by means of the glycerine, which does not evaporate and allow the pads to dry out and harden, as does the water.

In writing the original copy always use hard, glazed paper, and write with hectograph ink. In making the negative moisten the surface of the pad with a cold wet sponge, wiping off the excess of moisture. Dry off with a newspaper, and let it stand for two minutes. Place the original face down on the pad for from one to three minutes, rubbing down to a perfect contact, and then carefully remove. In printing apply a clean sheet of any kind of paper so that it touches the hectograph at all points, rubbing as little as possible. Never use hot water for removing the negative; as soon as the copies are all made, wash off with a sponge and cold water and dry off well with a newspaper. Never let the pad stand with ink in it after the copies are made, and always keep it closed when not in use.

Blakeley Process.

The following process, devised by Mr. R. W. Blakeley, of Pendleton, Manchester, is a modification of the glycerine-jelly process, but dispenses with the glycerine-jelly.

Take a pad of 10 to 12 sheets of tissue paper, damp well and screw up for a minute between damping sheets in the ordinary letter-copying press to distribute the moisture evenly. The pad should be thoroughly damp—if too dry it will not take up the ink from the original and if too wet the ink will run.

The original is drawn on any hard-surfaced paper with aniline ink, such as violet blue copying ink, and then placed face down on the damp tissue paper pad and screwed up in the press for five minutes; this gives the negative on the damp pad, from which copies are taken by screwing up blank sheets with the negative in the press. For the first copy 20 seconds in the press is enough. For the fifth or sixth 45 or 50 seconds is required.

As the negative pad loses moisture to every copy this damping cloth under the negative is redamped every half-dozen copies or so.

Autocopyist.

Tough paper is coated by means of a sponge, at a temperature of 120°F., with a gelatine (flake) 5 ozs.; glycerine, 5 drachms; water, 20 ozs.; and then allowed to dry.

The best paper to use is either prepared vegetable tracing-paper, or else vegetable-parchment paper.

The prepared paper is stretched tightly over a felted wooden block or board. The original is written or drawn on smooth paper with an ink composed of a saturated solution of alum tinged with aniline black, and then applied to the prepared paper as in the glycerine process. An inked roller (lithographic ink) is then passed over the surface, a sheet of paper laid on the latter, and a felted roller passed briskly over two or three times, and the paper taken off. One hundred to two hundred sharp, clear copies can thus be obtained. The prepared paper cannot be cleaned and used a second time.

Cyclostyle.

A stencil is formed by writing or drawing on prepared paper with a pen fitted with a revolving perforator. Copies are taken by passing over the stencil an india-rubber scraper charged with lithographic ink thinned with lard-oil.

Blue Photographic Copying-Process.

Draw design on thin paper. Brush paper over with a solution of (1), and dry in the dark.

(1.)

Double citrate of iron and ammonia, 44 grs.; water, 1 oz.

Expose under plan, which is pressed out flat by a sheet of plate-glass, and develop with solution (2).

(2.)

Ferrocyanide of potassium, 50 grs.; water, 1 oz.

Wash with water slightly acidulated with hydrochloric acid, and then in water alone, and dry.

This gives white lines on a blue ground, or a negative of the drawing.

The following gives blue lines on a white ground, or a positive print:—

Sensitising solution—

(1.)

Ferric chloride, 50 grs.; oxalic acid, 25 grs.; water, 1 oz.

Develop with

(2.)

Ferrocyanide of potassium, 80 grs.; water, 1 oz.

All the steps being the same as in the other process.

BLACK PHOTOGRAPHIC COPYING-PROCESS.—TO COPY DRAWINGS IN BLACK LINES ON WHITE GROUND.

(1.)

The following process has been patented by A. Colas, of Neuilly, France. Paper is prepared with the following solution :—½ oz. each of sulphate of iron, sesquichloride of iron, gelatine, and tartaric acid, in 10½ ozs. of distilled water. The paper, kept flat, is stored in a dark closet. When exposed to the light beneath a transparent drawing, the parts influenced by the light lose their greenish-yellow colour. It is afterwards dipped into a bath made of 7 ozs. of gallic acid, ¾ fluid oz. of alcohol, and 1 quart of water. The greenish-yellow lines turn black at once, and the sheet requires only to be rinsed in water.

(2).

The following is known as the 'Polygraphic' method :—A solution of ½ oz. of aniline colour and 8 drops of glacial acetic acid in 3½ fluid ozs. of water is used as an ink in this process. Japanese paper, a copying press, and a smooth, polished zinc plate are used for producing copies. The paper, after the corners have been moistened, is spread out upon the zinc plate. On the top of the paper is placed a linen cloth, first soaked in water and then wrung out, and on the top of this a sheet of waterproof paper. A cushion formed of ordinary paper by folding it several times together is pressed upon the zinc plate thus prepared. The side of the sheet written on is placed upon the sheet fastened on the zinc plate, and on the top of this a sheet of paper of the same size. The sheets of paper which are to receive the copy must be damped. It is now pressed ; in a few minutes the impression will be ready, which can be used at once for 20 to 25 copies. After the impression is drawn off the Japanese paper is removed and the zinc plate washed and cleansed. If 2 pages of a sheet have to be copied, the pages must be enveloped in sheets of paper, which will prevent the ink from one page depositing itself on the other.

The Ferrocyanide Process.

This process, by which it is possible to make direct positive prints, was the first step taken towards important improvements in the reproduction of drawings. The ferrocyanide paper is prepared with a sensitising solution, the nature of which varies according to the class of work to be done. The following are two formulas :

	Grammes.		Grammes.
1. Perchloride of iron	80	2. Tartaric acid	90
Gum	120	Persulphate of iron	110
Citric acid	30	Perchloride of iron	120
Water	1,000	Gum solution	1,000

This paper when prepared is of a yellow colour ; when exposed to light beneath the tracing important changes take place in the sensitised surface which is not protected by the lines of the drawing. The salts of iron are reduced, the exposed surface becomes white, and as soon as the drawing appears in yellow lines, which can be ascertained by raising the back of the frame, the paper is removed and put in a ferrocyanide or potassium bath, which immediately forms Prussian blue by combining with the iron salts that are not reduced, that is to say, in those parts of the sheet that have been protected from the light. In this way the drawing is developed in a bright blue tint. The sheet is afterwards washed, and then placed in a bleaching bath made up in the proportion of 40 grammes of sulphuric acid and 1,000 grammes of water ; finally, the sheet is subjected to a liberal washing, and any spots which do not appear to have been completely bleached are treated with a soft brush.

PHOTO-COPYING.

The simplest outfit for photo-copying consists of a flat frame, a developing bath and rubber squeegee, cutting and trimming table and knife, drying racks, and some metal tubes to hold the sensitised papers. The frame (of ash or oak) has a plate-glass front, a thick sheet of felt, back boards saw cut and battened, pressure bars and springs. In each frame there should be an equal number of boards and bars, and all bars and boards should be interchangeable.

The developing bath consists of an oblong shallow tray ; the larger sizes are fitted with outfall socket and plug. These baths are usually stocked (in zinc) up to 56 ins. by 36 ins. ; for larger sizes, wooden baths lead-lined, or simply made water-tight and provided with a glass or slate slab at the bottom, are generally used. The bath should be fixed with a fall of about ½ in. per ft., so that the water used in developing will flow off readily.

The cutting table is simply a board fitted with a strip of zinc about 6 ins. wide on the upper side, running the full length, and close to the edge. A piece of felt should be tacked to the opposite edge of the table sufficiently large to cover the whole table. This can be drawn over undeveloped prints or sensitised papers. Such a board may be very conveniently supported on trestles. It is often the practice to substitute for the trestles a cabinet of drawers, in which tracings and finished prints can be stored.

The metal tubes for holding the papers should be of tin or zinc, with sliding lids and at least twice the diameter of the roll of paper before unwrapping, otherwise, when unwrapped, it will expand and be difficult to remove. The simplest form of rack for natural drying consists of two brackets attached to a wall, about 3 ft. 6 ins. apart; clips are attached to the prints when in the bath, a rod is slipped through and the whole hung on the brackets.

A flat squeegee is frequently used for removing the superfluous moisture from the prints whilst lying in the bath. It consists of a thin strip of rubber about 10 ins. long secured in a wooden handle.

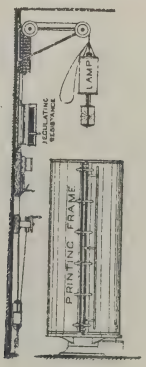


FIG. 1.

The outfit above described is suitable for offices having good daylight and no great pressure of copying work. For large and rapid outputs an electrical outfit is necessary.

Such a machine, capable of taking two tracings, is shown in fig. 1. It is made in several sizes varying from 40 ins. by 27 ins. to 60 ins. by 40 ins. The tracings are clamped closely around a glass cylinder, inside which an arc lamp is alternately raised and lowered until the prints have been fully exposed.

An improved type of copier for a considerably larger output is shown in fig. 2. It enables prints from tracings of any length up to that of a complete roll of paper (30 or 32 feet) to be produced in one piece. The paper A, fed with tracings B, travels slowly downwards between the

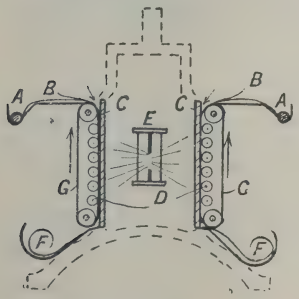


FIG. 2.

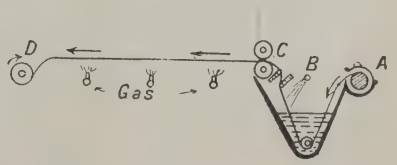


FIG. 3.

glass plate C and an endless blanket G pressed against it by the geared rollers D, passing several fixed arc lamps or one travelling one, E, after which it emerges and rolls up at F ready for trimming and washing.

Continuous printing machines, which are in two sizes, for paper either 30 or 40 ins. wide, are made single or double, the latter printing simultaneously two rolls of paper as in fig. 2. The speed can be varied from 4 feet per minute to 6 minutes per foot on either side so that fast and slow work can be done simultaneously. Fig. 3 shows a 'washing machine.' The roll of prints is placed in the trough A, passed through a running water-bath and spray B, between squeegees and rollers C, over a series of gas burners, and rolled up dry at D.

Trimming in quantities is usually effected with a guillotine for large work and a trimmer of the Merrett type for smaller sizes.

TRACING.

Place the sheet of paper over the drawing to be copied, and lightly rub it over with a ball of wool saturated with benzine; this renders the paper transparent temporarily, when the tracing can readily be made. The benzine by evaporation leaves the paper opaque as before. The benzine must be absolutely pure to secure good results.

MISCELLANEOUS.

To Prevent Rusting-in of Screws.

In machines exposed to heat or moist air the screws soon rust in, even with the use of oil, which later on renders it difficult to take the machines apart. By dipping the screws before use in a thin paste of graphite and oil they can be readily taken out, even after years.

Drilling Glass.

To drill holes in glass a common steel drill, well made and well tempered, is the best tool. Moisten with turpentine in which some camphor has been dissolved. Dilute sulphuric acid is also equally good.

To drill a large hole in thin glass, make in a piece of wood a hole of the size required, and fasten the wood with beeswax upon the glass so as to act as a guide. A piece of brass or copper tubing, of the size of the hole required, is placed in the hole in the wood and supplied with emery powder and water, and is twirled round between the fingers or by means of a bow-string. This will cut a hole in a few minutes.

To Divide Glass Bottles.

Breaking glass tubes or vessels with a clean edge by the aid of a string dipped in an inflammable oil is a well-known method, but the latter is not suitable for large vessels, such as a carboy to break such vessels, fill to point required with cold water, then pour boiling oil over surface of water: before oil has time to cool, dash cold water on outside of vessel, when a clean break is said to result. *(Engineer.)*

To Cut Glass Tubing of Large Diameter.

Nick the glass tube with a file or a cutter at the point where the fracture is desired. Wrap three or four thicknesses of blotting paper around the tube about $\frac{1}{8}$ in. from each side of the mark, the blotting paper being held in place by copper wires. Soak the blotters with water, and expose the narrow section of tube between the two wet blotters to the heat of a bunsen burner. The flame will cause a fracture starting at the file nick and extending in almost a straight line around the tube. *(Power.)*

Cutting Glass under Water.

Cutting a glass dial with a pair of scissors may seem difficult, but it is not, although the job must be done under water and both the glass and scissors must be submerged. A good way is to first cut a paper the size or shape of the glass desired; place it on the under side of the glass for a pattern. It is not expected that it is possible to cut through the centre of a large piece of glass but by trimming a little at a time a good job can be done. The cutting sensation is a good deal the same as that of cutting cardboard. *(A. Dube, 'Power.')*

To make Ivory and Bone Permanently White.

Hydrated oxide of zinc is dissolved in ammonia and the articles laid in it. To remove the yellow tint, a few drops of an aqueous solution of blue vitriol is added, until the latter, on being shaken up, turns blue; after impregnation the articles are repeatedly washed with cold water, dried in the air and polished.

Zinc-oxide of ammonia solution is prepared as follows:—40 parts by weight water mixed with 25 parts of pure zinc, with (after a quarter of an hour) 50 parts concentrated hydrochloric acid added.

To the zinc solution 150 parts hot water is added then (gradually stirring the while) caustic ammonia, until the precipitated white hydrated oxide of zinc is dissolved.

(Scientific American.)

Hard Rubber.

The finest grade of hard rubber, such as is found in a good comb or fountain pen, may contain 75 per cent. rubber and 25 per cent. sulphur, and may have been vulcanised ten hours. The specific gravity of pure hard rubber ranges from 1·12 to 1·25. The tensile strength in the finest and purest grades may be over three tons and the dielectric strength is specified by the United States Navy for sheets at 10,000 volts per $\frac{1}{32}$ in. of thickness.

Fibre.

There are three kinds of fibre in general use—viz., two kinds of vulcanised fibre, known as hard and flexible, and horn fibre.

The flexible is restricted to such uses as pump valves, washers and gaskets. The tensile strength of vulcanised fibre varies from 10,000 lbs. to 20,000 lbs. per sq. in. (as compared with 3,000 lbs. to 6,000 lbs. for leather). Its resistance to compression varies from 40,000 lbs. to 60,000 lbs. per sq. in. (for wood it varies from 3,000 lbs. to 11,000 lbs.). Its resistance to shearing varies from 9,000 lbs. to 13,000 lbs. per sq. in. (compared to wood, with the grain, 225 lbs. to 906 lbs.; to aluminium casting, 12,000 lbs.; and to aluminium forgings, 16,000 lbs.). There is no clearly defined elastic limit, but it approximates 4,000 lbs., and there is no permanent set even at rupture point. The specific gravity is about 1·3, varying from 1·2 to 1·5 (sp. gr. of pure aluminium in a cast state is 2·58; of cork, 0·24; of wood, 0·35 to 1·33). It possesses the strength and density of a metal, yet is elastic and nearly as light as hardwood. A square foot of $\frac{1}{8}$ in. fibre weighs about $\frac{7}{8}$ lb. and the same area of 1 in. stock about 7 lbs.—i.e., about 20 cub. ins. to the pound.

Vulcanised fibre is insoluble in all the ordinary solvents, and is not affected by immersion in alcohol, ammonia, benzine, or any of the animal, vegetable, or mineral oils. It absorbs water freely, and swells when wet, but is not otherwise injured.

When heated, fibre does not melt or soften, but at a high temperature it chars and loses its elasticity. Vulcanised fibre is not brittle, and will stand a great amount of pounding and rough usage. It can be machined, and will take a fine polish, but cannot be moulded.

One of the purposes to which vulcanised fibre is being applied is the thrust bearings in light, sensitive, drilling machines. Ball bearings cause endless trouble in this position if one of the balls fractures or chips, and it has been found that a fibre disc answers the purpose admirably. The permeability of the fibre to oil renders it self-lubricating, and its life under these conditions is remarkable.

To True Grindstones.

Drive at a moderate speed and true up with a piece of iron tube. Keep turning the tube, which should be held at right angles, and turn it as the edge grinds away. The stone should be *dry*, not wet.

To Face Oilstones.

Take a piece of iron with even or straight face (it ought to be planed), scatter a little emery or fine sand on the iron plate, add a little water, and rub the face of the stone, renewing the emery or sand and water as requisite, finishing with an addition of water without emery or sand.

Ink for Writing on Metal.

Chloride of platinum, $\frac{1}{4}$ oz.; soft water, 1 pint. Use with a quill pen.

Etching and Etching Fluids.

The nearest approach to a perfect ground for general purposes is beeswax of the proper consistency, which can be easily applied in any desired thickness. Before applying the wax it is important that the surface be thoroughly clean and absolutely dry, and the difference in temperature between the wax and the article to be etched should be slight. If it is necessary to dip the piece into melted wax, the article should be kept immersed for a few moments until it acquires the same temperature as the molten wax.

The following fluids have been tried on various substances and found to work satisfactorily :

Iron and Steel.—Hydrochloric acid (full strength) should be used. Nitric acid however must not be used.

Brass.—Nitric acid.

Copper.—A mixture containing 2 parts of nitric acid and 1 part sulphuric acid.

Silver.—Nitric acid, 3 parts; water, 1 part.

Gold.—A mixture containing 1 part of nitric acid and 3 parts of hydrochloric acid. This mixture should be prepared just before being applied, and should be used warm, under a hood or fume closet.

Platinum.—The same mixture as that used for gold

Lead.—Nitric acid.

Aluminium.—A 10 per cent. solution of caustic soda or potash.

Zinc.—A mixture containing equal parts of hydrochloric acid and water, used warm.

Glass.—Hydrofluoric acid. The article may be immersed in the liquid acid for a few minutes or it may be exposed to the fumes for five to fifteen minutes. Extreme caution should be used in handling this acid, using rubber gloves for the hands and a lead or hard rubber container for the acid. Contact with the skin will cause severe burns, and the action seems to be continuous, producing burns far more severe than those caused by the mineral acids.

All of the acids may be used full strength and will act instantly, but if the etching is to be of considerable depth most of them may be diluted with water before applying. This will require more time, but will produce a cleaner cut. The exception to this is the mixture of gold and platinum, which must always be used full strength and applied as warm as the melting point of the wax will permit. (*A. Schleimer*, '*Machinery.*')

To Bend Zinc Tubes.

Put a cork into one end and fill with slightly damp sand well rammed in, then close with another cork; heat the tube until it is just uncomfortably hot to the hand, and then bend round a bit of board sawn to the required curve.

To Drill Hard Steel.

Use turpentine instead of oil; it will drill readily when the drill will not touch the metal with oil.

Aluminium Working.

One of the best lubricants for cutting aluminium in the lathe is kerosine oil; this prevents tearing, and enables a better finish to be obtained.

To Clean Files.

Files clogged with tin or lead can be cleaned by a few seconds in strong nitric acid. For iron filings, use blue vitrol; rinse in water, and dip in nitric. For copper or brass, use nitric several times; for zinc, dilute sulphuric acid. After any of these treatments, rinse the files in water, brush vigorously, and dry in sawdust, or by burning alcohol on the file.

To Remove a Stubborn Nut.

Heat the spanner end and place on nut for a moment or two; this will expand the nut only, whereas using a blow-lamp, etc., heats both nut and bolt. If the above method fails the nut should be split.

Steel-Facing Electrotypes.

A film of pure iron of such hardness as to resemble steel (hence the process is named 'steel-facing') may be deposited on the face of an electrotype. The solution for the purpose is made as follows:—Dissolve 1 lb. of iron sulphate (green vitriol) in half a gallon of rain-water, and add a solution of ammonium carbonate until all the iron has been precipitated. Wash the precipitate by pouring on water and allowing to settle, finally draining off all water possible. Then dissolve the wet precipitate in just sufficient sulphuric acid to avoid having any free acid, and use this as the depositing solution in as concentrated a form as possible. As the solution has a tendency to become acid by working it, this must be corrected by using an anode plate of pure iron eight times larger than the electrotype to be faced, and placing a plate of platinum in the solution, attached to the iron anode, when the solution is not at work.

Another solution, suitable to larger operations, is made as follows:—Dissolve 56 lbs. of ammonium carbonate in 35 gallons of water. In this place a large anode of charcoal iron, and a small cathode of the same connected with a battery, and dissolve into the solution until a test strip of copper is nicely coated with iron in a few minutes. Work this, and all other iron solutions, with a weak current—a battery of Daniell cells will do—keep the anode clean, and add free ammonium carbonate as required. The voltage necessary to work any solution and give best results must be found by experience, always bearing in mind that iron solutions yield their metal in best condition at a low voltage. Iron solutions are also liable to change from atmospheric influences, the iron in solution being oxide by contact with light and air. To minimise this trouble, keep the solutions covered. If a moderately thick coat of iron is desired, the electrotype must be taken out every four or five minutes, and the face scrubbed in clean water, then replaced in the bath. When the coat is thick enough it should be well washed in hot water and rapidly dried, then oiled, and then brushed over with benzine. If not used at once it must be protected from rust by coating with a film of wax.

Silvering a Mirror.

(14 square inches area.)

Well scrub glass with brush, soap, and hot water; rinse repeatedly in cold water; soak in nitric acid for few minutes; rinse in distilled water. Do not touch surface after soap stage.

Solutions.

(*a*)

Silver nitrate	50 grs.
Distilled water	1 oz.

(*b*)

Grape sugar	50 grs.
Distilled water	1 oz.

(*c*)

Caustic potash	50 grs.
Distilled water	1 oz.

Add strong ammonia drop by drop to (*a*), when a yellowish precipitate will form, and later liquid will clear. No more ammonia must then be added; swirl after each drop. Add (*c*), when black precipitate will form; add ammonia drop by drop until solution clears; add 2½ ozs. distilled water and mix in sugar solution (*b*). *Immediately* put into dish and carefully insert glass with face (downwards) just below the surface. When sugar is added solution becomes cloudy, so it should only be added when quite ready for use. Leave glass undisturbed for 30 minutes. Remove glass and again wash in distilled water. Drain for few minutes and swish off any drops of water. If cloudy, polish with a pad of cotton wool covered with soft chamois leather and jewellers' rouge, by light circular strokes. Lacquer with No. 2 cold colourless lacquer from Messrs. Gedge, 90 St. John's Street, Clerkenwell. Back with Brunswick black.

Size of Clock Dials.

Allow 1 ft. diameter for every 10 ft. from the ground, and then add 6 ins. to this; thus, if the dial is to be 40 ft. from the ground, the diameter should be 4 ft. 6 ins.

Flow of Sand.

The velocity of flow of sand and other fine materials through openings of various shapes and in different circumstances is determined mainly by the size of the particles and of the opening, but is slightly diminished by angularity of the particles or by moisture on them. The specific gravity of the particles, the height of the material above the opening, and the shape of the upper contour of the material have little effect. If D is the diameter of the opening, *d* that of the particles, both in inches, the mean velocity of flow V in feet per second is given with sufficient accuracy for most practical purposes by the equation, $V = (D - 2d)/\sqrt{D}$.

(***Hersam***: *Journal of the Franklin Institute.*)

Wire Drawing.

With Diamond Dies.—The diamonds used are partly natural stones and partly chips from large stones used in jewellery; some of them also are stones which have proved too hard for the jeweller to polish. For a hole ·055 in. in diameter a 5-carat stone is needed, whilst stones weighing half-a-carat suffice for dies with holes from ·014 in. down to ·009 in. in diameter and under. In copper wire the smallest size made commercially is 0·002 in. in diameter. Thirteen diamonds are needed to reduce the wire from ·010 in. in diameter to 0·003 in. in diameter. Wires thinner than ·002 in. in diameter are exceedingly expensive to make. A lot drawn for exhibition purposes from ·0022 in. in diameter down to ·001 in. in diameter took 7 drafts. The life of the diamonds when drawing copper wire is six months to a year, provided the stones are of good size, hard, smooth, and well drilled. The weight produced per operator per day falls very rapidly as the size of the wire is reduced. Thus, whilst one man will produce 1,100 lbs. per day of No. 22 (B. and S. gauge), he can only draw 45 lbs. of No. 40 (B. and S.). Diamonds are also used for drawing steel, though they are not economical, nor do they produce a better quality of wire than steel die-plates; but if fine steel wire is wanted very round and true to size, the diamond dies seem necessary. A steel die will not keep to size for more than one coil of No. 33 wire or finer. The life of a diamond is much shorter on steel than on copper, averaging only about three days, when it must be polished out for the next larger size. The surface produced on steel wire is not so smooth when diamonds are used as it is with steel. The speed at which the wire is drawn appears to have little effect on the life of the diamond die, which depends solely on the length passed through. About 200 lbs. weight of steel wire can be drawn through a No. 32 (B. and S.) diamond die-plate before it is off size, 15 lbs. through holes ·005 in. to ·003 in. in diameter, and less than 1 lb. through holes smaller than ·002 in. in diameter. The smallest commercial size is ·0025 in. steel brush wire, drawn from low or medium carbon steel. Difficulty was at one time experienced in drawing hard music wire smaller than ·012 in. in diameter without breaking the diamond; but nowadays it can be drawn as small as ·005 in. in diameter, using 2 to 2½-carat diamonds for the dies. Below about ·009 in. or ·008 in. diameter, however, music wire becomes very curly, and no method of keeping it straight has yet been discovered. (*S. Barnett.*)

Cracks in Metal.

A crack in a piece of metal is prevented from extending further by the well-known means of drilling a hole where the rent ends; but when the hole is not bored on just that spot the crack is apt to continue beyond the hole. To facilitate the search for the exact point, moisten the cracked surface with petroleum, then wipe it, and immediately rub it with chalk. The oil that has penetrated into the crack exudes, and thus indicates with precision where the crack stops.

Rendering Celluloid Incombustible.

In order to overcome the undesirable quality of celluloid to ignite, a French chemist has adopted the following method: An ether-alcohol solution of celluloid is made; then an ether-alcohol solution of ferric perchloride. The two solutions are mixed, and a clear syrupy liquid is obtained, of yellow colour, yielding no precipitates. The liquid is poured into a suitable vessel and is left for spontaneous evaporation, and a substance of shell-colour is produced, which, after washing and drying, gives the desired result. The celluloid thus treated loses none of its properties of pliability and transparency, and is not only uninflammable, but it is also incombustible.

Another method by which the celluloid may be rendered uninflammable, based on the same principle, consists in mixing bromide of camphor with cotton powder, adding castor-oil to soften the substance so that it may be less brittle. This product, though more easily prepared, is, however, not incombustible like the former preparation.

Wood-worms in Westminster Hall Roof.

The extermination of the *Xestobium tessellatum* in the oak roofing of Westminster Hall has been effected by spraying the timber with a mixture of 50 per cent. tetrachlorethane, 6 per cent. cedar wood oil, 2 per cent. solvent soap, 2 per cent. paraffin wax, and 40 per cent. trichlorethylene. The tetrachlorethane is a perfect insecticide, but it is so dangerous that those who handle it must use gas masks.

It is stated that the most effective means of treating oak work when attacked with wood-worm is to give it several coats of paraffin, well soaked into the wood. This should be done by a careful workman, making quite sure that every hole has been well soaked with the paraffin; if treated with paraffin it does not damage the oak, but has a tendency to improve the colour.

Thermostatic Metal.

Thermostatic metal, manufactured by the *British Thomson-Houston Company, Ltd.*, in appearance a homogeneous metal, is formed of two metal strips having widely different coefficients of expansion. The two metals are welded together along their entire length, and are quite inseparable under normal working conditions. When the duplex strip is subjected to change of temperature, one half will expand more quickly than the other, causing the strip to bend. A single degree of temperature change is said to affect its curvature to a measurable extent, and practically instantaneously. In bending, it exerts a force sufficient for the direct operation of levers, the opening and closing of ventilators, etc. The metal can be cut, stamped, or machined. It is supplied in various thicknesses from 0·015 in. to 0·25 in.

SECTION XL

PART I

LENGTHS — SURFACES — WEIGHTS — CAPACITIES — WIRE GAUGES — FOREIGN WEIGHTS, MEASURES, AND MONEY, WITH THEIR ENGLISH EQUIVALENTS—SIZES OF PAPER
(pages 2381–2400)

(Revised by S. W. Attwell, of the National Physical Laboratory.)

PART II

THE METRIC SYSTEM IN CONNECTION WITH INTERNATIONAL TRADE. (pages 2401–2403)

(Contributed by A. H. Allen, M.I.E.E.)

SECTION XL

PART I

LENGTHS—SURFACES—WEIGHTS—CAPACITIES—FOREIGN MEASURES—WIRE-GAUGES—SIZES OF PAPER, etc.

(Revised by S. W. Attwell, of the National Physical Laboratory.)

The accepted relations of English Imperial to International Metric Measures are thus given by the Standards Office of the Board of Trade:

1 inch = 25·399978 mm.; 1 metre = 39·370113 inches; 1 gallon = 4·5459631 litres; 1 litre = 1·75980 pint; 1 pound = 0·453592 43 kilogram; 1 kilogram = 2·2046223 pounds.

In 1893 the United States of America recognised the metre as the fundamental standard of length, and adopted the conversion value of 1 metre = 39·37 inches.

10 penny diameters = 1 ft.; halfpenny = 1 inch; 5-shilling piece = 1½ inch. Weight of: 3 pennies, 1 five-shilling piece, or 5 shillings, each = 1 oz.

LENGTHS.

English.

The length of the standard yard of 36 inches is such that a pendulum vibrating seconds of mean time, temperature 62° F., at the level of the sea and latitude of Greenwich, has a length of 39·1393 inches.

Miles.	Furlongs.	Chains.	Rods.	Yards.	Feet.	Inches.
1	8	80	320	1,760	5,280	63,360
·125	1	10	40	220	660	7,920
·0125	·1	1	4	22	66	792
·003125	·025	·25	1	5·5	16·5	198
·00056818	·0045454	·045454	.181818	1	3	36
·00018939	·00151515	·01515151	·060606	·33333	1	12
·000015783	·000126262	·001262626	·0050505	·0277777	·083333	1

GUNTER'S SURVEYING CHAIN.

7·92 inches = 1 link. 100 links = 1 chain 4 rods, or 22 yards. 80 chains = 1 mile.

ROPES AND CABLES.

1 cable-length = 120 fathoms = 720 feet. 1 fathom = 6 feet.

GEOGRAPHICAL AND NAUTICAL MEASURES.

1 degree of a great circle of the earth round the equator = 69·174 statute miles = 365,239 feet. 1 nautical mile (knot) = 6,080 feet. 1 telegraph mile = 6,087 feet.

LOG-LINE.

The log-line should be about 150 fathoms long, and 10 fathoms from the log to the first knot on the line. If half-a-minute glass is used, it will be 51 feet between each succeeding knot. For 28-seconds glass it will be 47·6 feet = 7·93 fathoms per knot. This is the length of knot by calculation, but practically it is shortened to 7·5 fathoms per knot for 28-seconds glass.

Metric System.*

Name.	Ins.	Feet.	Yards.	Miles.
Millimetre†	·03937	·003281		
Centimetre‡	·39370113	·032808		
Decimetre	3·9370113	·3280843	·10936	
Metre	39·370113	3·280843	1·0936143	
Decametre	393·70113	32·80843	10·936143	
Hectometre	Road	328·0843	109·36143	·06213718
Kilometre	measures.	3280·843	1093·6143	·6213718
Myriametre		32808·43	10936·143	6·213718

† Nearly the $\frac{1}{25}$th part of an inch. ‡ Full $\frac{3}{8}$ inch.
§ Very nearly 3 ft. 3$\frac{3}{8}$ ins., which is too long by only 1 part in 8,056.

Conversion of English Inches into Centimetres.

Ins.	0	1	2	3	4	5	6	7	8	9
	Cms.	Cms.	Cms.	Cms.	Cms.	Cms.	Cms.	Cms.	Cms.	Cms.
0	·00	2·54	5·08	7·62	10·16	12·70	15·24	17·78	20·32	22·86
10	25·40	27·94	30·48	33·02	35·56	38·10	40·64	43·18	45·72	48·26
20	50·80	53·34	55·88	58·42	60·96	63·50	66·04	68·58	71·12	72·66
30	76·20	78·74	81·28	83·82	86·36	88·90	91·44	93·98	96·52	99·06
40	101·60	104·14	106·68	109·22	111·76	114·30	116·84	119·38	121·92	124·46
50	127·00	129·54	132·08	134·62	137·16	139·70	142·24	144·78	147·32	149·86
60	152·40	154·94	157·48	160·02	162·56	165·10	167·64	170·18	172·72	175·26
70	177·80	180·34	182·88	185·42	187·96	190·50	193·04	195·58	198·12	200·66
80	203·20	205·74	208·28	210·82	213·36	215·90	218·44	220·98	223·52	226·06
90	228·60	231·14	233·68	236·22	238·76	241·30	243·84	246·38	248·92	251·46
100	254·00	256·54	259·08	261·62	264·16	266·70	269·24	271·78	274·32	276·86

The above table is correct throughout to within 1 part in 1,000,000.


Conversion of Centimetres into English Inches.

Cms.	0	1	2	3	4	5	6	7	8	9
	Ins	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.	Ins.
0	·0000	·3937	·7874	1·1811	1·5748	1·9685	2·3622	2·7559	3·1496	3·5433
10	3·9370	4·3307	4·7244	5·1181	5·5118	5·9055	6·2992	6·6929	7·0866	7·4803
20	7·8740	8·2677	8·6614	9·0551	9·4488	9·8425	10·236	10·630	11·024	11·417
30	11·811	12·205	12·598	12·992	13·386	13·780	14·173	14·567	14·961	15·354
40	15·748	16·142	16·535	16·929	17·323	17·717	18·110	18·504	18·898	19·291
50	19·685	20·079	20·472	20·866	21·260	21·654	22·047	22·441	22·835	23·228
60	23·622	24·016	24·409	24·803	25·197	25·591	25·984	26·378	26·772	27·165
70	27·559	27·953	28·346	28·740	29·134	29·528	29·921	30·315	30·709	31·102
80	31·496	31·890	32·283	32·677	33·071	33·465	33·858	34·252	34·646	35·039
90	35·433	35·827	36·221	36·614	37·008	37·402	37·795	38·189	38·583	38·976
100	39·370	39·764	40·158	40·551	40·945	41·339	41·732	42·126	42·520	42·913

Conversion of English Feet into Metres.

Ft.	0	1	2	3	4	5	6	7	8	9
	Metres.	Metres.	Metres.	Metres.	Metres.	Metres.	Metres.	Metres.	Metres.	Metres.
0	·0000	·3048	·6096	·9144	1·2192	1·5240	1·8288	2·1336	2·4384	2·7432
10	3·0480	3·3528	3·6576	3·9624	4·2672	4·5720	4·8768	5·1816	5·4864	5·7912
20	6·0960	6·4008	6·7056	7·0104	7·3152	7·6200	7·9248	8·2296	8·5344	8·8392
30	9·1440	9·4488	9·7536	10·058	10·363	10·668	10·973	11·278	11·582	11·887
40	12·192	12·497	12·802	13·106	13·411	13·716	14·021	14·326	14·630	14·935
50	15·240	15·545	15·850	16·154	16·459	16·764	17·069	17·374	17·678	17·983
60	18·288	18·593	18·898	19·202	19·507	19·812	20·117	20·422	20·726	21·031
70	21·336	21·641	21·946	22·250	22·555	22·860	23·165	23·470	23·774	24·079
80	24·384	24·689	24·994	25·298	25·603	25·908	26·213	26·518	26·822	27·127
90	27·432	27·737	28·042	28·346	28·651	28·956	29·261	29·566	29·870	30·175
100	30·480	30·785	31·090	31·394	31·699	32·004	32·309	32·614	32·918	33·223

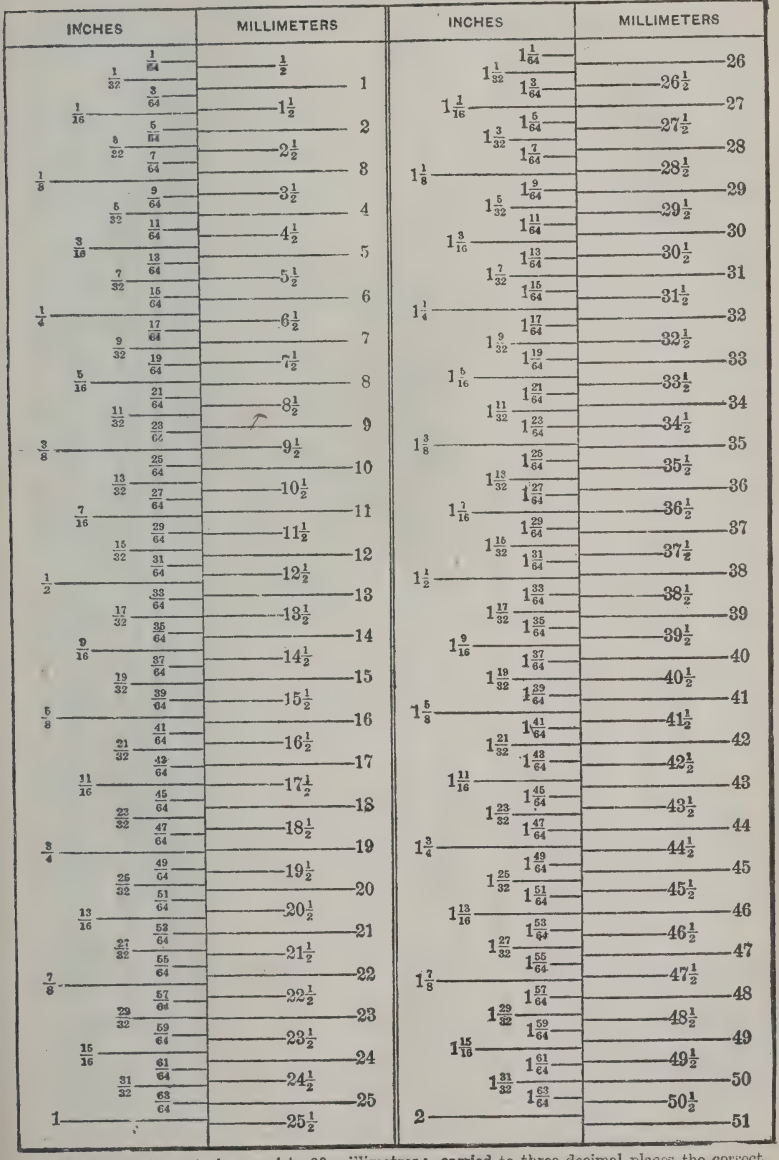* See also page 2401.



$\frac{23}{32}$ inch is shown to be equal to 23 millimetres; carried to three decimal places the correct value would be 23·019 millimetres.

Inches reduced to Decimals of a Foot.

Ins.	Foot.	Ins.	Foot.	Ins.	Foot.	Ins.	Foot.	Ins.	Foot.	Ins.	Foot.
0	·0000	2	·1667	4	·3333	6	·5000	8	·6667	10	·8333
1/32	·0026	1/32	·1693	1/32	·3359	1/32	·5026	1/32	·6693	1/32	·8359
1/16	·0052	1/16	·1719	1/16	·3385	1/16	·5052	1/16	·6719	1/16	·8385
3/32	·0078	3/32	·1745	3/32	·3411	3/32	·5078	3/32	·6745	3/32	·8411
1/8	·0104	1/8	·1771	1/8	·3438	1/8	·5104	1/8	·6771	1/8	·8438
5/32	·0130	5/32	·1797	5/32	·3464	5/32	·5130	5/32	·6797	5/32	·8464
3/16	·0156	3/16	·1823	3/16	·3490	3/16	·5156	3/16	·6823	3/16	·8490
7/32	·0182	7/32	·1849	7/32	·3516	7/32	·5182	7/32	·6849	7/32	·8516
1/4	·0208	1/4	·1875	1/4	·3542	1/4	·5208	1/4	·6875	1/4	·8542
9/32	·0234	9/32	·1901	9/32	·3568	9/32	·5234	9/32	·6901	9/32	·8568
5/16	·0260	5/16	·1927	5/16	·3594	5/16	·5260	5/16	·6927	5/16	·8594
11/32	·0286	11/32	·1953	11/32	·3620	11/32	·5286	11/32	·6953	11/32	·8620
3/8	·0313	3/8	·1979	3/8	·3646	3/8	·5313	3/8	·6979	3/8	·8646
13/32	·0339	13/32	·2005	13/32	·3672	13/32	·5339	13/32	·7005	13/32	·8672
7/16	·0365	7/16	·2031	7/16	·3698	7/16	·5365	7/16	·7031	7/16	·8698
15/32	·0391	15/32	·2057	15/32	·3724	15/32	·5391	15/32	·7057	15/32	·8724
1/2	·0417	1/2	·2083	1/2	·3750	1/2	·5417	1/2	·7083	1/2	·8750
17/32	·0443	17/32	·2109	17/32	·3776	17/32	·5443	17/32	·7109	17/32	·8776
9/16	·0469	9/16	·2135	9/16	·3802	9/16	·5469	9/16	·7135	9/16	·8802
19/32	·0495	19/32	·2161	19/32	·3828	19/32	·5495	19/32	·7161	19/32	·8828
5/8	·0521	5/8	·2188	5/8	·3854	5/8	·5521	5/8	·7188	5/8	·8854
21/32	·0547	21/32	·2214	21/32	·3880	21/32	·5547	21/32	·7214	21/32	·8880
11/16	·0573	11/16	·2240	11/16	·3906	11/16	·5573	11/16	·7240	11/16	·8906
23/32	·0599	23/32	·2266	23/32	·3932	23/32	·5599	23/32	·7266	23/32	·8932
3/4	·0625	3/4	·2292	3/4	·3958	3/4	·5625	3/4	·7292	3/4	·8958
25/32	·0651	25/32	·2318	25/32	·3984	25/32	·5651	25/32	·7318	25/32	·8984
13/16	·0677	13/16	·2344	13/16	·4010	13/16	·5677	13/16	·7344	13/16	·9010
27/32	·0703	27/32	·2370	27/32	·4036	27/32	·5703	27/32	·7370	27/32	·9036
7/8	·0729	7/8	·2396	7/8	·4063	7/8	·5729	7/8	·7396	7/8	·9063
29/32	·0755	29/32	·2422	29/32	·4089	29/32	·5755	29/32	·7422	29/32	·9089
15/16	·0781	15/16	·2448	15/16	·4115	15/16	·5781	15/16	·7448	15/16	·9115
31/32	·0807	31/32	·2474	31/32	·4141	31/32	·5807	31/32	·7474	31/32	·9141
1	·0833	**3**	·2500	**5**	·4167	**7**	·5833	**9**	·7500	**11**	·9167
1/32	·0859	1/32	·2526	1/32	·4193	1/32	·5859	1/32	·7526	1/32	·9193
1/16	·0885	1/16	·2552	1/16	·4219	1/16	·5885	1/16	·7552	1/16	·9219
3/32	·0911	3/32	·2578	3/32	·4245	3/32	·5911	3/32	·7578	3/32	·9245
1/8	·0938	1/8	·2604	1/8	·4271	1/8	·5938	1/8	·7604	1/8	·9271
5/32	·0964	5/32	·2630	5/32	·4297	5/32	·5964	5/32	·7630	5/32	·9297
3/16	·0990	3/16	·2656	3/16	·4323	3/16	·5990	3/16	·7656	3/16	·9323
7/32	·1016	7/32	·2682	7/32	·4349	7/32	·6016	7/32	·7682	7/32	·9349
1/4	·1042	1/4	·2708	1/4	·4375	1/4	·6042	1/4	·7708	1/4	·9375
9/32	·1068	9/32	·2734	9/32	·4401	9/32	·6068	9/32	·7734	9/32	·9401
5/16	·1094	5/16	·2760	5/16	·4427	5/16	·6094	5/16	·7760	5/16	·9427
11/32	·1120	11/32	·2786	11/32	·4453	11/32	·6120	11/32	·7786	11/32	·9453
3/8	·1146	3/8	·2813	3/8	·4479	3/8	·6146	3/8	·7813	3/8	·9479
13/32	·1172	13/32	·2839	13/32	·4505	13/32	·6172	13/32	·7839	13/32	·9505
7/16	·1198	7/16	·2865	7/16	·4531	7/16	·6198	7/16	·7865	7/16	·9531
15/32	·1224	15/32	·2891	15/32	·4557	15/32	·6224	15/32	·7891	15/32	·9557
1/2	·1250	1/2	·2917	1/2	·4583	1/2	·6250	1/2	·7917	1/2	·9583
17/32	·1276	17/32	·2943	17/32	·4609	17/32	·6276	17/32	·7943	17/32	·9609
9/16	·1302	9/16	·2969	9/16	·4635	9/16	·6302	9/16	·7969	9/16	·9635
19/32	·1328	19/32	·2995	19/32	·4661	19/32	·6328	19/32	·7995	19/32	·9661
5/8	·1354	5/8	·3021	5/8	·4688	5/8	·6354	5/8	·8021	5/8	·9688
21/32	·1380	21/32	·3047	21/32	·4714	21/32	·6380	21/32	·8047	21/32	·9714
11/16	·1406	11/16	·3073	11/16	·4740	11/16	·6406	11/16	·8073	11/16	·9740
23/32	·1432	23/32	·3099	23/32	·4766	23/32	·6432	23/32	·8099	23/32	·9766
3/4	·1458	3/4	·3125	3/4	·4792	3/4	·6458	3/4	·8125	3/4	·9792
25/32	·1484	25/32	·3151	25/32	·4818	25/32	·6484	25/32	·8151	25/32	·9818
13/16	·1510	13/16	·3177	13/16	·4844	13/16	·6510	13/16	·8177	13/16	·9844
27/32	·1536	27/32	·3203	27/32	·4870	27/32	·6536	27/32	·8203	27/32	·9870
7/8	·1563	7/8	·3229	7/8	·4896	7/8	·6563	7/8	·8229	7/8	·9896
29/32	·1589	29/32	·3255	29/32	·4922	29/32	·6589	29/32	·8255	29/32	·9922
15/16	·1615	15/16	·3281	15/16	·4948	15/16	·6615	15/16	·8281	15/16	·9948
31/32	·1641	31/32	·3307	31/32	·4974	31/32	·6641	31/32	·8307	31/32	·9974

To reduce Inches to Decimals of an Inch, use the Table, page 105.

Conversion of Metres into English Feet.

Metres.	0	1	2	3	4	5	6	7	8	9
	Ft.	Ft.	Ft.	Ft.	Ft.	Ft.	Ft.	Ft.	Ft.	Ft.
0	·0000	3·2808	6·5617	9·8425	13·123	16·404	19·685	22·966	26·247	29·528
10	32·808	36·089	39·370	42·651	45·932	49·213	52·493	55·774	59·055	62·336
20	65·617	68·898	72·179	75·459	78·740	82·021	85·302	88·583	91·864	95·144
30	98·425	101·71	104·99	108·27	111·55	114·83	118·11	121·39	124·67	127·95
40	131·23	134·51	137·80	141·08	144·36	147·64	150·92	154·20	157·48	160·76
50	164·04	167·32	170·60	173·88	177·17	180·45	183·73	187·01	190·29	193·57
60	196·85	200·13	203·41	206·69	209·97	213·25	216·54	219·82	223·10	226·38
70	229·66	232·94	236·22	239·50	242·78	246·06	249·34	252·62	255·91	259·19
80	262·47	265·75	269·03	272·31	275·59	278·87	282·15	285·43	288·71	292·00
90	295·28	298·56	301·84	305·12	308·40	311·68	314·96	318·24	321·52	324·80
100	328·08	331·37	334·65	337·93	341·21	344·49	347·77	351·05	354·33	337·61

Conversion of English Statute Miles into Kilometres.

Miles.	0	1	2	3	4	5	6	7	8	9
	Kiloms.	Kiloms.	Kiloms.	Kiloms.	Kiloms.	Kiloms.	Kiloms.	Kiloms.	Kilom.	Kilom.
0	·0000	1·6093	3·2187	4·8280	6·4374	8·0467	9·6561	11·265	12 875	14·484
10	16 093	17·703	19 312	20·921	22·531	24·140	25·749	27·359	28·968	30·578
20	32·187	33·796	35·406	37·015	38·624	40·234	41·843	43 452	45·062	46·671
30	48·280	49·890	51 499	53·108	54·718	56·327	57·936	59·546	61·155	62·764
40	64 374	65·983	67·592	69·202	70·811	72·420	74·030	75·639	77·248	78·858
50	80·467	82·076	83·686	85·295	86·905	88·514	90·123	91·733	93·342	94·951
60	96·561	98·170	99·779	101·39	103·00	104·61	106·22	107·83	109·44	111·04
70	112·65	114·26	115·87	117·48	119·09	120·70	122·31	123·92	125·53	127·14
80	128·75	130·36	131·97	133·58	135·18	136·79	138·40	140·01	141·62	143·23
90	144·84	146·45	148·06	149·67	151·28	152·89	154·50	156·11	157·72	159·32
100	160·93	162·54	164·15	165·76	167·37	168·98	170·59	172·20	173·81	175·42

Conversion of Kilometres into English Statute Miles.

Kiloms.	0	1	2	3	4	5	6	7	8	9
	Miles.	Miles.	Miles.	Miles.	Miles.	Miles.	Miles.	Miles.	Miles.	Miles
0	·0000	·6214	1·2427	1·8641	2·4855	3·1069	3·7282	4·3496	4·9710	5·5923
10	6·2137	6·8351	7·4565	8·0778	8·6992	9·3206	9·9419	10·563	11·185	11·806
20	12·427	13·049	13·670	14·292	14·913	15·534	16·156	16·777	17·398	18·020
30	18·641	19·263	19·884	20·505	21·127	21·748	22·369	22·991	23·612	24·234
40	24·855	25·476	26·098	26·719	27·340	27·962	28·583	29·204	29·826	30·447
50	31·069	31·690	32·311	32·933	33·554	34·175	34·797	35·418	36·040	36·661
60	37·282	37·904	38·525	39·146	39·768	40·389	41·011	41·632	42·253	42·875
70	43·496	44·117	44·739	45·360	45·982	46·603	47·224	47·846	48·467	49·088
80	49·710	50·331	50·952	51·574	52·195	52·817	53·438	54·059	54·681	55·302
90	55·923	56·545	57·166	57·788	58·409	59·030	59·652	60·273	60·894	61·516
100	62·137	62·759	63·380	64·001	64·623	65·244	65·865	66·487	67·108	67·730

SURFACES.

English.

Sq. Miles.	Acres.	Sq.Chains.	Sq. Rods.	Sq. Yards.	Sq. Feet.	Sq.Inches.
1	640	6,400	102,400	3,097,600	27,878,400	4,014,489,600
·001562	1	10	160	4,840	43,560	6,272,640
·0001562	·1	1	16	484	4,356	627,264
·000009766	.00625	·0625	1	30·25	272·25	39,204
·000000323	.0002066	·002066	·033	1	9	1,296
·0000000359	·00002296	·0002296	·00367	·1111111	1	144
·00000000025	·000000159	·00000159	·00002551	·0007716	·006945	1

Metrical.

Name.	Sq. Ins.	Sq. Ft.	Sq. Yards.	Acres.
Sq. Millimetre . .	·00155	·00001076	·0000012	
Sq. Centimetre. .	·1550	·0010764	·0001196	
Sq. Decimetre . .	15·50006	·1076393	·0119599	
Sq. Metre, or Centiare	1550·006	10·76393	1·195992	·000247
Sq. Decametre, or Are	1550006	1076·393	119·5992	·024711
Sq. Hectometre or Hectare . .	—	107639·3	11959·92	2·471058
Sq. Kilometre . .	·3861029 sq.	—	1195992	247·1058
Sq. Myriametre .	38·61029 miles	—	—	24710·58

WEIGHTS.

English.

One cubic inch of distilled water (weighed in air against brass weights) at temperature 62° F., the barometer being at 30 ins., weighs 252·326 grains, of which 7,000 go to the pound avoirdupois, and 5,760 to the pound troy.

AVOIRDUPOIS.

Ton.	Cwts.	Pounds.	Ounces.	Drams.
1	20	2240	35840	573440
·05	1	112	1792	28672
·00044643	·0089286	1	16	256
·0000279	·000558	·0625	1	16
·000001744	·00003488	·003906	·0625	1

TROY.

Pound.	Ounces.	Dwts.	Grains.	Pound Avoir.
1	12	240	5760	·822857
·083333	1	20	480	·068571
·004166	·05	1	24	·00342857
·0001736	·002083333	·0416666	1	·000142857
1·215278	14·58333	291·6666	7000	1

APOTHECARIES'.

Pound.	Ounces.	Drams.	Scruples.	Grains.
1	12	96	288	5760
·08333	1	8	24	480
·01041666	·125	1	3	60
·0034722	·0416666	·3333	1	20
·00017361	·0020833	·016666	·05	1

Metrical.

1 gramme=15·432356 grains, and is the weight of a cubic centimetre of distilled water in vacuo at 4° Centigrade, or 39·2° Fahr.

Weight.	Grammes.	Avoirdupois Ounces.	Avoirdupois Lbs.	Cwts.	Ton	Grains.
Milligramme .	·001	—	—	—	—	·015
Centigramme .	·01	—	—	—	—	·154
Decigramme .	·1	—	—	—	—	1·543
Gramme . .	1	·035	·0022	—	—	15·432356
Decagramme .	10	·35	·022			
Hectogramme	100	3·527	·22046			
Kilogramme .	1000	35·2739	2·204622	·019	·00098	
Myriagramme	10000	—	22·04622	·1968	·00984	
Quintal . .	100000	—	220·4622	1·9684	·0984	
Millier or Bar	1000000	—	2204·622	19·68413	·984206	

Conversion of Metrical to English Weights.

Grammes to Grains.		Kilogrammes to Ounces. (Avoir.)		Kilogrammes to Pounds. (Avoir.)	
1=15·432356	6=92·594138	1=35·27396	6=211·64374	1=2·204622	6=13·227734
2=30·864713	7=108·02649	2=70·54791	7=246·91770	2=4·409245	7=15·432356
3=46·297069	8=123·45885	3=105·82187	8=282·19166	3=6·613867	8=17·636978
4=61·729426	9=138·89121	4=141·09583	9=317·46561	4=8·818489	9=19·841601
5=77·161782		5=176·36978		5=11·023111	

A milligramme is about $\frac{1}{65}$ grain.

Conversion of English to Metrical Weights.

Grains to Grammes.	Ounces (Avoir.) to Grammes.	Pounds (Avoir.) to Kilogrammes.	Hundredweights to Kilogrammes.
1=·0647989	1= 28·34953	1= ·4535924	1= 50·80235
2=·1295978	2= 56·69905	2= ·9071849	2=101·6047
3=·1943968	3= 85·04858	3=1·360777	3=152·4071
4=·2591957	4=113·3981	4=1·814370	4=203·2094
5=·3239946	5=141·7476	5=2·267962	5=254·0118
6=·3887935	6=170·0972	6=2·721555	6=304·8141
7=·4535924	7=198·4467	7=3·175147	7=355·6165
8=·5183914	8=226·7962	8=3·628739	8=406·4188
9=·5831903	9=255·1457	9=4·082332	9=457·2212

The Metric Carat.

By decision of the Standards Department of the Board of Trade, the metric carat of 200 milligrams, and its necessary multiples and sub-multiples, are standard weights in the United Kingdom.

CAPACITIES.

English.

Gallon.—The standard gallon (*International Bureau of Standards, Paris*, 1921) measures 277·420 cubic inches, and contains 10 lbs. (avoir.) weight of distilled water (weighed in air against brass weights) at the temperature of 62° F., the barometer being at 30 ins.

Dry Measure.

Cu. Yard.	Bushels.	Cu. Feet.	Pecks.	Gallons.	Cu. Ins.
1	21·0223	27	84·089	168·179	46656
·047568	1	1·28435	4	8	2219·35
·037037	·7786	1	3·1144	6·22884	1728
·011892	·25	·32109	1	2	554·838
	·125	·16054	·5	1	277·419
		·00579	·001802	·0036047	1

Liquid Measure.

Gallon.	Quarts.	Pints.	Gills.	Cub. Ins.
1	4	8	32	277·419
·25	1	2	8	69·355
·125	·5	1	4	34·677
·03125	·125	·25	1	8·6693
·0036047	·014419	·028837	·11535	1

Apothecaries' Measures.

Gallon (C) = 8 pints (O) ; 1 pint = 20 fluid ounces (oz. weight of water).
Ounce (℥) = 8 drachms (ʒ) = 480 minims (♏) = 720 drops (gtt).
One wine-glass = 4 tablespoonfuls = 16 teaspoonfuls = 2 ounces.
Symbols.—f. or fl., fluid ; ss., one half ; aa., for each. Thus, f℥ss. means ½ a fluid ounce.

Conversion of Metrical to English Capacities.

Cub. Centimetres to Cub. Ins.	Litres to Fluid Ounces.	Litres to Pints.	Litres to Gallons.
1=·061024	1= 35·1961	1= 1·75980	1= ·219975
2=·122048	2= 70·3921	2= 3·51961	2= ·439951
3=·183072	3=105·5882	3= 5·27941	3= ·659926
4=·244096	4=140·7842	4= 7·03921	4= ·879902
5=·305120	5=175·9803	5= 8·79902	5=1·099877
6=·366143	6=211·1764	6=10·55882	6=1·319852
7=·427167	7=246·3724	7=12·31862	7=1·539828
8=·488191	8=281·5685	8=14·07842	8=1·759803
9=·549215	9=316·7646	9=15·83823	9=1·979779

The capacity of a litre is approximately that of a cube each side of which is a decimetre. One litre equals 1000·027 cubic centimetres.

Conversion of English to Metrical Capacities.

Cub. Ins. to Cub. Centimetres.	Fluid Ounces to Cubic Centimetres.	Pints to Litres.	Gallons to Litres.
1= 16·3870	1= 28·413	1= ·568245	1= 4·54596
2= 32·7740	2= 56·826	2=1·136491	2= 9·09193
3= 49·1611	3= 85·239	3=1·704736	3=13·63789
4= 65·5481	4=113·652	4=2·272982	4=18·18385
5= 81·9351	5=142·065	5=2·841227	5=22·72982
6= 98·3221	6=170·478	6=3·409472	6=27·27578
7=114·7091	7=198·891	7=3·977718	7=31·82174
8=131·0962	8=227·304	8=4·545963	8=36·36770
9=147·4832	9=255·717	9=5·114209	9=40·91367

Angle Measurement by the Opening of a Two-foot Rule.

Opening Rule.	Fractions of an Inch.															
	0		1/8		1/4		3/8		1/2		5/8		3/4		7/8	
Ins.	°	′	°	′	°	′	°	′	°	′	°	′	°	′	°	′
0	0			36	1	12	1	47	2	23	2	59	3	35	4	11
1	4	47	5	22	5	58	6	34	7	10	7	46	8	22	8	58
2	9	34	10	10	10	46	11	22	11	57	12	34	13	10	13	46
3	14	22	14	58	15	34	16	10	16	46	17	22	17	59	18	35
4	19	11	19	48	20	24	21	0	21	37	22	13	22	50	23	26
5	24	3	24	39	25	16	25	53	26	30	27	7	27	43	28	20
6	28	57	29	34	30	11	30	48	31	26	32	3	32	40	33	18
7	33	55	34	32	35	10	35	48	36	25	37	3	37	41	38	19
8	38	57	39	35	40	13	40	51	41	29	42	7	42	46	43	24
9	44	3	44	42	45	20	45	59	46	38	47	17	47	56	48	36
10	49	15	49	54	50	34	51	14	51	53	52	33	53	13	53	53
11	54	34	55	14	55	54	56	35	57	16	57	57	58	38	59	19
12	60	0	60	41	61	23	62	5	62	47	63	29	64	11	64	53
13	65	35	66	18	67	1	67	44	68	27	69	11	69	54	70	38
14	71	22	72	6	72	51	73	35	74	20	75	5	75	51	76	36
15	77	22	78	8	78	54	79	41	80	27	81	14	82	2	82	49
16	83	37	84	25	85	14	86	3	86	52	87	41	88	31	89	21
17	90	12	91	3	91	54	92	46	93	38	94	31	95	24	96	17
18	97	11	98	5	99	0	99	56	100	51	101	48	102	45	103	43
19	104	41	105	40	106	40	107	40	108	41	109	43	110	45	111	49
20	112	53	113	58	115	5	116	12	117	20	118	30	119	40	120	52

PRESSURES

Conversion of Kilogrammes per Square Centimetre to Pounds per Square Inch.

Kilos. per Sq. Cm.	0	·1	·2	·3	·4	·5	·6	·7	·8	·9
	Pounds per Square Inch.									
0	0·000	1·4223	2·8447	4·2670	5·6893	7·1117	8·5340	9·9563	11·379	12·801
1	14·223	15·646	17·068	18·490	19·913	21·335	22·757	24·180	25·602	27·024
2	28·447	29·869	31·291	32·714	34·136	35·558	36·981	38·403	39·825	41·248
3	42·670	44·092	45·515	46·937	48·359	49·782	51·204	52·626	54·049	55·471
4	56·893	58·316	59·738	61·160	62·583	64·005	65·427	66·850	68·272	69·694
5	71·117	72·539	73·961	75·384	76·806	78·228	79·651	81·073	82·495	83·918
6	85·340	86·762	88·185	89·607	91·029	92·452	93·874	95·296	96·719	98·141
7	99·563	100·99	102·41	103·83	105·25	106·67	108·10	109·52	110·94	112·36
8	113·79	115·21	116·63	118·05	119·48	120·90	122·32	123·74	125·17	126·59
9	128·01	129·43	130·85	132·28	133·70	135·12	136·54	137·97	139·39	140·81
10	142·23	143·66	145·08	146·50	147·92	149·34	150·77	152·19	153·61	155·03

Conversion of Pounds per Square Inch to Kilogrammes per Square Centimetre.

Lbs. per Sq. In.	0	1	2	3	4	5	6	7	8	9
	Kilogrammes per Square Centimetre.									
0	0·0000	·07031	·14061	·21092	·28123	·35154	·42184	·49215	·56246	·63276
10	·70307	·77338	·84369	·91399	·98430	1·0546	1·1249	1·1952	1·2655	1·3358
20	1·4061	1·4764	1·5468	1·6171	1·6874	1·7577	1·8280	1·8983	1·9686	2·0389
30	2·1092	2·1795	2·2498	2·3201	2·3904	2·4607	2·5311	2·6014	2·6717	2·7420
40	2·8123	2·8826	2·9529	3·0232	3·0935	3·1638	3·2341	3·3044	3·3747	3·4450
50	3·5154	3·5857	3·6560	3·7263	3·7966	3·8669	3·9372	4·0075	4·0778	4·1481
60	4·2184	4·2887	4·3590	4·4293	4·4997	4·5700	4·6403	4·7106	4·7809	4·8512
70	4·9215	4·9918	5·0621	5·1324	5·2027	5·2730	5·3433	5·4136	5·4840	5·5543
80	5·6246	5·6949	5·7652	5 8355	5·9058	5·9761	6·0464	6·1167	6·1870	6·2573
90	6·3276	6·3979	6·4683	6·5386	6·6089	6·6792	6·7495	6·8198	6·8901	6·9604
100	7·0307	7·1010	7·1713	7·2416	7·3119	7·3822	7·4526	7·5229	7·5932	7·6635

Conversion of Pounds to Tons.

Tons = Pounds × 0·00044643.

Pounds.	Tons.	Pounds.	Tons.	Pounds.	Tons.	Pounds.	Tons.
1,000	0·446	24,000	10·714	47,000	20·982	88,000	39·286
2,000	0·893	25,000	11·161	48,000	21·429	90,000	40·179
3,000	1·339	26,000	11·607	49,000	21·875	92,000	41·072
4,000	1·786	27,000	12·053	50,000	22·321	94,000	41·964
5,000	2·232	28,000	12·500	51,000	22·768	96,000	42·857
6,000	2·679	29,000	12·946	52,000	23·214	98,000	43·750
7,000	3·125	30,000	13·393	54,000	24·107	100,000	44·643
8,000	3·571	31,000	13·839	56,000	25·000	110,000	49·107
9,000	4·018	32,000	14·286	58,000	25·893	120,000	53·572
10,000	4·464	33,000	14·732	60,000	26·786	130,000	58·036
11,000	4·911	34,000	15·179	62,000	27·679	140,000	62·500
12,000	5·357	35,000	15·625	64,000	28·572	150,000	66·965
13,000	5·804	36,000	16·071	66,000	29·464	160,000	71·429
14,000	6·250	37,000	16·518	68,000	30·357	170,000	75·893
15,000	6·696	38,000	16·964	70,000	31·250	180,000	80·357
16,000	7·143	39,000	17·411	72,000	32·143	190,000	84·822
17,000	7·589	40,000	17·857	74,000	33·036	200,000	89·286
18,000	8·036	41,000	18·304	76,000	33·929	210,000	93·750
19,000	8·482	42,000	18·750	78,000	34·822	220,000	98·215
20,000	8·929	43,000	19·196	80,000	35·714	230,000	102·680
21,000	9·375	44,000	19·643	82,000	36·607	240,000	107·140
22,000	9·821	45,000	20·089	84,000	37·500	250,000	111·610
23,000	10·268	46,000	20·536	86,000	38·393	260,000	116·072

Corresponding Heights of Barometer in Millimetres and English Inches.

Milli-metres.	English Inches.	Milli-metres.	English Inches.	Milli-metres.	English Inches.
720	28·347	739	29·095	758	29·843
721	28·386	740	29·134	759	29·882
722	28·425	741	29·174	760	29·922
723	28·465	742	29·213	761	29·961
724	28·504	743	29·252	762	30·000
725	28·543	744	29·292	763	30·039
726	28·583	745	29·331	764	30·079
727	28·622	746	29·370	765	30·118
728	28·662	747	29·410	766	30·158
729	28·701	748	29·449	767	30·197
730	28·740	749	29·488	768	30·236
731	28·780	750	29·528	769	30·276
732	28·819	751	29·567	770	30·315
733	28·858	752	29·606	771	30·355
734	28·898	753	29·645	772	30·394
735	28·937	754	29·685	773	30·433
736	28·976	755	29·724	774	30·473
737	29·016	756	29·764	775	30·512
738	29·055	757	29·803		

COMPARISON OF VARIOUS FOREIGN AND ENGLISH MEASURES.

Country.	Measure.	English Value.	Country.	Measure.	English Value.
America	Bushel	2150·4 cu. ins.	Germany	Morgen	27,484 sq. feet
,,	Gallon (dry)	268·80 cu. ins.	,,	Pfund	1·01 to 1·23 lbs.
,,	,, (fluid)	231 cu. ins.	India	Seer	32·914 oz.
,,	Peck	537·605 cu. ins.	,,	Tola	180 grains
,,	Pint	28·875 cu. ins.	Netherlands	Myle	3,281 feet
,,	Quart	57·750 cu. ins.	Norway	Centner	110·231 lbs.
Austria	Joch	1·422 acres	,,	Mile	4·6803 miles
,,	Klafter	6·2213 feet	,,	Morgen	27,484 sq. feet
Bengal	Maund	74·667 lbs.	Russia	Archine	28 inches
Canada	Mino	2,339 cu. ins.	,,	Dessatine	2·69977 acres
China	Catty or Gin	1·3333 lbs.	,,	Dola	·68573 grains
,,	Li	608·5 yds.	,,	Pud or Pood	36·112 lbs.
,,	Picul	133·33 lbs.	,,	Sagene	7 feet
,,	Tael	583 grains	,,	Verst	3,500 feet
Denmark	Centner	110·231 lbs.	Spain	Arroba	25·35 lbs.
,,	Mile	4·6803 miles	,,	,,	2·77 gallons
,,	Morgen	27,484 sq. feet	Sweden	Mile	6·64 miles
France	Aune	47·245 inches	,,	Tunnland	1·2198 acres
,,	Brasse	5·328 feet	Turkey	Archin	26·9 inches
,,	Lieu	6,077 yds.	,,	Oke	2·829 lbs.
Germany	Centner	110·231 lbs.	,,	Pie	25·69 inches
,,	Mile	4·6803 miles	Vienna	Centner	123·46 lbs.

BIRMINGHAM WIRE-GAUGE.

Number.	Dimensions.	Number.	Dimensions.	Number.	Dimensions.	Number.	Dimensions.
	Mils.		Mils.		Mils.		Mils.
0000	454	7	180	17	58	27	16
000	425	8	165	18	49	28	14
00	380	9	148	19	42	29	13
0	340	10	134	20	35	30	12
1	300	11	120	21	32	31	10
2	284	12	109	22	28	32	9
3	259	13	95	23	25	33	8
4	238	14	83	24	22	34	7
5	220	15	72	25	20	35	5
6	203	16	65	26	18	36	4

BIRMINGHAM WIRE-GAUGE FOR SILVER AND GOLD.

No.	Ins.	No.	Ins.	No.	Ins.	No.	Ins.	No.	Ins.	No.	Ins.	No.	Ins.	No.	Ins.
1	·004	6	·013	11	·029	16	·051	21	·072	25	·095	29	·120	33	·145
2	·005	7	·015	12	·034	17	·057	22	·074	26	·103	30	·126	34	·148
3	·008	8	·016	13	·036	18	·061	23	·077	27	·113	31	·133	35	·158
4	·010	9	·019	14	·041	19	·064	24	·082	28	·120	32	·143	36	·167
5	·013	10	·024	15	·047	20	·067								

SHEET ZINC TRADE GAUGE.

No.	Ins.	No.	Ins.	No.	Ins.	No.	Ins.	No.	Ins.	No.	Ins.	No.	Ins.	No.	Ins.
1	·00395	5	·0097	9	·0177	12	·0260	15	·0375	18	·0526	21	·0699	24	·0915
2	·00554	6	·0114	10	·0196	13	·0292	16	·0426	19	·0577	22	·0768	25	·0980
3	·0067	7	·0132	11	·0228	14	·0323	17	·0478	20	·0632	23	·0843	26	·1052
4	·0082	8	·0149												

(See also page 221.)

Standard Wire-Gauge.*

No.	Diameters.			No.	Diameters.			No.	Diameters.		
	Mils.†	Differences.	Millimètres.		Mils.	Differences.	Millimètres.		Mils.	Differences.	Millimètres.
0,000,000	500	..	12·70	13	92	12	2·34	32	10·8	·8	·274
000,000	464	36	11·78	14	80	12	2·03	33	10·0	·8	·254
00,000	432	32	10·97	15	72	8	1·83	34	9·2	·8	·234
0,000	400	32	10·16	16	64	8	1·63	35	8·4	·8	·213
000	372	28	9·45	17	56	8	1·42	36	7·6	·8	·193
00	348	24	8·84	18	48	8	1·22	37	6·8	·8	·173
0	324	24	8·23	19	40	8	1·016	38	6·0	·8	·152
1	300	24	7·62	20	36	4	·914	39	5·2	·8	·132
2	276	24	7·01	21	32	4	·813	40	4·8	·4	·122
3	252	24	6·40	22	28	4	·711	41	4·4	·4	·112
4	232	20	5·89	23	24	4	·610	42	4·0	·4	·102
5	212	20	5·38	24	22	2	·559	43	3·6	·4	·0914
6	192	20	4·88	25	20	2	·508	44	3·2	·4	·0813
7	176	16	4·47	26	18	2	·457	45	2·8	·4	·0711
8	160	16	4·06	27	16·4	1·6	·417	46	2·4	·4	·0610
9	144	16	3·66	28	14·8	1·6	·376	47	2·0	·4	·0508
10	128	16	3·25	29	13·6	1·2	·345	48	1·6	·4	·0406
11	116	12	2·95	30	12·4	1·2	·315	49	1·2	·4	·0305
12	104	12	2·64	31	11·6	·8	·295	50	1·0	·2	·0254

* This gauge is the only legal standard wire-gauge for the United Kingdom.
† 1 Mil. = $\frac{1}{1000}$th of an inch.

Warrington Wire-Gauge.

Mark.	Size.	Mark.	Size.	Mark.	Size.	Mark.	Size.
No.	Inch.	No.	Inch.	No.	Inch.	No.	Inch.
7/0	$\frac{1}{2}$	2	·274	10	·133	16	·0625, or $\frac{1}{16}$
6/0	$\frac{15}{32}$	3	·25, or $\frac{1}{4}$	10½	·125, or $\frac{1}{8}$	17	·053
5/0	$\frac{7}{16}$	4	·229	11	·117	18	·047
4/0	$\frac{13}{32}$	5	·209	12	·10, or $\frac{1}{10}$	19	·041
3/0	$\frac{3}{8}$	6	·191	13	·090	20	·036
2/0	$\frac{11}{32}$	7	·174	14	·079	21	·0315, or $\frac{1}{32}$
0	·326	8	·159	15	·069	22	·028
1	·300	9	·146				

Whitworth's Wire-Gauge, in Decimals of an Inch.

Mark.	Size.	Mark.	Size.	Mark.	Size.	Mark.	Size.	Mark.	Size.
1	·001	14	·014	34	·034	85	·085	240	·240
2	·002	15	·015	36	·036	90	·090	260	·260
3	·003	16	·016	38	·038	95	·095	280	·280
4	·004	17	·017	40	·040	100	·100	300	·300
5	·005	18	·018	45	·045	110	·110	325	·325
6	·006	19	·019	50	·050	120	·120	350	·350
7	·007	20	·020	55	·055	135	·135	375	·375
8	·008	22	·022	60	·060	150	·150	400	·400
9	·009	24	·024	65	·065	165	·165	425	·425
10	·010	26	·026	70	·070	180	·180	450	·450
11	·011	28	·028	75	·075	200	·200	475	·475
12	·012	30	·030	80	·080	220	·220	500	·500
13	·013	32	·032						

Birmingham Gauge ('B.G.') for Sheets and Hoops

(Legalised by the Board of Trade Nov. 1, 1914.)

Descriptive Number.	Equivalents in parts of an Inch.	Descriptive Number.	Equivalents in parts of an Inch.
No.	Inch	No.	Inch.
15/0 B.G.	1·000	20 B.G.	·0392
14/0 B.G.	·9583	21 B.G.	·0349
13/0 B.G.	·9167	22 B.G.	·03125
12/0 B.G.	·8750	23 B.G.	·02782
11/0 B.G.	·8333	24 B.G.	·02476
10/0 B.G.	·7917	25 B.G.	·02204
9/0 B.G.	·750	26 B.G.	·01961
8/0 B.G.	·7083	27 B.G.	·01745
7/0 B.G.	·6666	28 B.G.	·015625
6/0 B.G.	·625	29 B.G.	·0139
5/0 B.G.	·5883	30 B.G.	·0123
4/0 B.G.	·5416	31 B.G.	·0110
3/0 B.G.	·500	32 B.G.	·0098
2/0 B.G.	·4452	33 B.G.	·0087
1/0 B.G.	·3964	34 B.G.	·0077
1 B.G.	·3532	35 B.G.	·0069
2 B.G.	·3147	36 B.G.	·0061
3 B.G.	·2804	37 B.G.	·0054
4 B.G.	·250	38 B.G.	·0048
5 B.G.	·2225	39 B.G.	·0043
6 B.G.	·1981	40 B.G.	·00386
7 B.G.	·1764	41 B.G.	·00343
8 B.G.	·1570	42 B.G.	·00306
9 B.G.	·1398	43 B.G.	·00272
10 B.G.	·1250	44 B.G.	·00242
11 B.G.	·1113	45 B.G.	·00215
12 B.G.	·0991	46 B.G.	·00192
13 B.G.	·0882	47 B.G.	·00170
14 B.G.	·0785	48 B.G.	·00152
15 B.G.	·0699	49 B.G.	·00135
16 B.G.	·0625	50 B.G.	·00120
17 B.G.	·0556	51 B.G.	·00107
18 B.G.	·0495	52 B.G.	·00095
19 B.G.	·0440		

STUBS' STEEL WIRE GAUGE (DIMENSIONS IN MILS.).

No.	Mils.	No.	Mils.	No.	Mils.	No.	Mils.	No.	Mils.	No.	Mils.
Z	413	Q	332	H	266	1	227	9	194	17	172
Y	404	P	323	G	261	2	219	10	191	18	168
X	397	O	316	F	257	3	212	11	188	19	164
W	386	N	302	E	250	4	207	12	185	20	161
V	377	M	295	D	246	5	204	13	182	21	157
U	368	L	290	C	242	6	201	14	180	22	155
T	358	K	281	B	238	7	199	15	178	23	153
S	348	J	277	A	234	8	197	16	175	24	151
R	339	I	272								

TABLE SHOWING RELATIVE VALUES OF STANDARD, BIRMINGHAM, AND AMERICAN (BROWN AND SHARPE) WIRE GAUGES.

S.W.G.	B.W.G.	A.W.G.	Equivalent in Mils.	Equivalent in Mms.	S.W.G.	B.W.G.	A.W.G.	Equivalent in Mils.	Equivalent in Mms.	S.W.G.	B.W.G.	A.W.G.	Equivalent in Mils.	Equivalent in Mms.	S.W.G.	B.W.G.	A.W.G.	Equivalent in Mils.	Equivalent in Mms.
7/0			500	12·699	5			212	5·384	15	15	13	072	1·828	28	28	27	014	3555
6/0			464	11·785				204	5·181		16		065	1·650	29	29		013	3300
		0000	460	11·683		6	4	203	5·156	16		14	064	1·625			28	0122	3046
			454	11·531	6			192	4·876		17		058	1·472	30	30		012	2800
5/0	0000		432	10·972		7	5	182	4·622	17		15	057	1·447	31		29	011	2743
	000		425	10·794	7			180	4·571				056	1·421	32			0108	2743
000		000	409	10·388		8	6	176	4·470		18	16	050	1·270	33	31	30	010	2539
	00		400	10·159	7			165	4·191				049	1·244	34	32	31	009	2300
0000			380	9·651			6	162	4·114	18			048	1·218	35	33	32	008	2031
		00	372	9·448	8			160	4·064			17	045	1·142	36		33	007	1777
000			365	9·271		9		148	3·759		19		042	1·066	37			0068	1727
		00	348	8·839	9		7	144	3·657	19		18	040	1·016	38		34	006	1523
00			340	8·635		10		134	3·403	20		19	036	9140			35	0056	1422
	0		336	8·535	10		8	128	3·251		20		035	8886	39	35	36	005	1269
		0	325	8·254		11		120	3·047	21	21	20	032	8124	40			0048	1219
0			324	8·229	11			116	2·946	22	22		030	7617	41		37	0044	1118
1	1		300	7·620		12	9	114	2·895	22		21	0284	7213	42	36	38	004	1015
		1	289	7·340	12			109	2·768		23		028	7109	43		39	0036	0914
	2		284	7·213		13	10	104	2·641	23		22	0253	6126	44		40	0032	0813
2			276	7·010	13			102	2·590		24		025	6347	45			0028	0713
	3		259	6·578		14		095	2·412	24		23	024	6093	46			0024	0610
		2	257	6·527			11	090	2·286	25	25	24	022	5585	47			002	0507
3			252	6·400	14			092	2·336	24		23	022	5078	48			0016	0406
	4		238	6·045			12	083	2·108	26	26	25	018	4570	49			0012	0305
4			232	5·892		15		080	2·032	27	27	26	016	4062	50			001	0253
		3	229	5·816	15														
	5		220	5·588															

(For American Wire Gauges, see page 2395.)

American Wire Gauges.

Different Standards for Wire Gauges in use in the United States.

Dimensions of Sizes in Decimal Parts of an Inch.

Number of Wire Gauge.	American or Brown and Sharpe.	Birmingham or Stubs' Wire.	Washburn and Moen Mfg. Co., Worcester, Mass.	Imperial Wire Gauge.	Stubs' Steel Wire.	U.S. Standard for Plate.	Number of Wire Gauge.
000000	—	—	—	·464	—	·46875	000000
00000	—	—	—	·432	—	·4375	00000
0000	·46	·454	·3938	·400	—	·40625	0000
000	·40964	·425	·3625	·372	—	·375	000
00	·3648	·38	·3310	·348	—	·34375	00
0	·32486	·34	·3065	·324	—	·3125	0
1	·2893	·3	·2830	·300	·227	·28125	1
2	·25763	·284	·2625	·276	·219	·265625	2
3	·22942	·259	·2437	·252	·212	·25	3
4	·20431	·238	·2253	·232	·207	·234375	4
5	·18194	·22	·2070	·212	·204	·21875	5
6	·16202	·203	·1920	·192	·201	·203125	6
7	·14428	·18	·1770	·176	·199	·1875	7
8	·12849	·165	·1620	·160	·197	·171875	8
9	·11443	·148	·1483	·144	·194	·15625	9
10	·10189	·134	·1350	·128	·191	·140625	10
11	·090742	·12	·1205	·116	·188	·125	11
12	·080808	·109	·1055	·104	·185	·109375	12
13	·071961	·095	·0915	·092	·182	·09375	13
14	·064084	·083	·0800	·080	·180	·078125	14
15	·057068	·072	·0720	·072	·178	·0703125	15
16	·05082	·065	·0625	·064	·175	·0625	16
17	·045257	·058	·0540	·056	·172	·05625	17
18	·040303	·049	·0475	·048	·168	·05	18
19	·03589	·042	·0410	·040	·164	·04375	19
20	·031961	·035	·0348	·036	·161	·0375	20
21	·028462	·032	·03175	·032	·157	·034375	21
22	·025347	·028	·0286	·028	·155	·03125	22
23	·022571	·025	·0258	·024	·153	·028125	23
24	·0201	·022	·0230	·022	·151	·025	24
25	·0179	·02	·0204	·020	·148	·021875	25
26	·01594	·018	·0181	·018	·146	·01875	26
27	·014195	·016	·0173	·0164	·143	·0171875	27
28	·012641	·014	·0162	·0149	·139	·015625	28
29	·011257	·013	·0150	·0136	·134	·0140625	29
30	·010025	·012	·0140	·0124	·127	·0125	30
31	·008928	·01	·0132	·0116	·120	·0109375	31
32	·00795	·009	·0128	·0108	·115	·01015625	32
33	·00708	·008	·0118	·0100	·112	·009375	33
34	·006304	·007	·0104	·0092	·110	·00859375	34
35	·005614	·005	·0095	·0084	·108	·0078125	35
36	·005	·004	·0090	·0076	·106	·00703125	36
37	·004453	—	—	·0068	·103	·006640625	37
38	·003965	—	—	·0060	·101	·00625	38
39	·003531	—	—	·0052	·099	—	39
40	·003144	—	—	·0048	·097	—	40

Care should be taken to distinguish the difference between Stubs' Iron Wire Gauge and Stubs' Steel Wire Gauge. The former is commonly known as the English Standard Wire or Birmingham Wire Gauge, and designates the Stubs' *Soft* wire sizes.

The Stubs' Steel Wire Gauge is the one employed in measuring drawn steel wire or drill rods of Stubs' make, and is also used by some makers of American drill rods.

(*Brown and Sharpe.*)

VARIOUS FOREIGN WEIGHTS, MEASURES AND MONEY WITH ENGLISH EQUIVALENT VALUES. (*Compiled from B.O.T. Returns.*)

Country.	Length.	Area.	Weight.	Capacity.	Money.	English Value.
	—	—	—	Bushel (Winchester).	—	0·9694 imp. bushel.
	—	—	—	Gallon (Old English).	—	0·833 imp. gallon.
	—	—	Barrel (flour) . .	—	—	196 lbs. avoir.
1. U.S. America	—	—	Short Ton . . .	—	—	2,000 lbs. avoir.
	—	—	Long „ . . .	—	—	2,240 „ „
	—	—	—	—	Dollar . .	4*s.* 2*d.*
	Mètre . .	—	—	—	—	1·09 yard.
	Kilomètre .	—	—	—	—	0·621 mile.
	—	Sq. Kilometre =100 Hectares	—	—	—	0·386 sq. mile.
	—	Are	—	—	—	0·0247 acre.
	—	Hectare . . .	—	—	—	2·47 acres.
	—	—	—	Cubic Mètre .	—	1·308 cubic yards.
2. Austria .	—	—	Kilogramme . .	—	—	2·204 lbs. avoir.
	—	—	Quintæ Metrique Centner.	—	—	220·4 lbs. avoir.
	—	—	Tonne . . .	—	—	2,204 lbs. avoir.
	—	—	—	Hectolitre (liquid) .	—	22 imp. gallons.
	—	—	—	„ (cereals) .	—	2·75 imp. bushels.
	—	—	—	—	Krone (100 Heller).	10*d.*
3. Belgium . .	Weights and	measures as No. 2.	—	—	Franc . . .	9·6*d.*
4. Bulgaria . .	„ „	„ „	—	—	Lew . . .	9·6*d.*
	Ts'un . .	—	—	—	—	1·41 inches.
	Ch'ih . .	—	—	—	—	1·175 feet.
	Chang . .	—	—	—	—	11·75 „
	Li . .	—	—	—	—	2,115 „
5. China .	—	—	Tael	—	—	1·33 ozs.
	—	—	Catty	—	—	1·33 lbs. avoir.
	—	—	Picul	—	—	133⅓ „ „
	—	—	—	—	Haikwan Tael .	6*s.* 8*d.*
	Danskmil .	—	—	—	—	4·68 miles.
	Geo. mil .	—	—	—	—	4·61 „
	—	Geo. sq. mil .	—	—	—	21·195 sq. miles.
	—	Töndeland . .	—	—	—	1·36 acres.
	—	—	Pund	—	—	1·102 lbs. avoir.
6. Denmark .	—	—	—	Tonde (corn) . .	—	3·8 imp. bushels.
	—	—	—	„ (coal) . .	—	4·6775 bushels.
	—	—	—	„ (beer) . .	—	28·92 imp. gallons.
	—	—	—	Pot . . .	—	0·213 „ „
	—	—	—	—	Krone . . .	1*s.* 1½*d.*

	Pic (textiles)	—	—	—	—	—	—	—	—	22·85 inches.
	—	Feddan (land)	—	—	—	—	—	—	—	1·04 acre.
	—	—	—	Oke	—	—	—	—	—	2·75136 lbs. avoir.
	—	—	—	Cantar	—	—	—	—	—	99·05 „ „
7. Egypt	—	—	—	Ardet (wheat, maize)	—	—	—	—	—	324·6 „ „
	—	—	—	„ (barley)	—	—	—	—	—	242·1 „ „
	—	—	—	„ (rice)	—	—	—	—	—	418·2 „ „
	—	—	—	—	—	—	—	Piastre	—	2·46*d.*
8. Finland	Same as	No. 2	—	—	—	—	—	Mark (100 Penni)	—	9·6*d.* (about).
9. France	„ „	„	—	—	—	—	—	Franc	—	9·6*d.*
10. German Empire	„ „	„	—	—	—	—	—	Mark (100 Pfennige)	—	11·8*d.*
	—	—	—	Occque	—	—	—	—	—	2·84 lbs. avoir.
	—	—	—	Quintal	—	—	—	—	—	123·2 „ „
11. Greece	—	—	—	Livre	—	—	—	—	—	1·1 „ „
	—	—	—	Drachme	—	—	—	—	—	⅛ oz. avoir.
	—	—	—	—	—	—	—	Drachma	—	9·6*d.*
12. Holland	Same as	No. 2	—	—	—	—	—	Gulden	—	1*s.* 8*d.*
13. Hungary	„ „	„	—	—	—	—	—	Korona (100 Fillar)	—	10*d.*
14. Italy	„ „	„	—	—	—	—	—	Lira	—	9·6*d.*
	Ri	—	—	—	—	—	—	—	—	2·4403 miles.
	Cho	—	—	—	—	—	—	—	—	5·423 chains.
	Ken	—	—	—	—	—	—	—	—	1·9884 yards.
	—	Sq. Ri	—	—	—	—	—	—	—	5·9553 sq. miles.
	—	Cho (land)	—	—	—	—	—	—	—	2·4507 acres.
	—	Tsubo	—	—	—	—	—	—	—	3·9538 sq. yards.
	—	—	—	Kwan	—	—	—	—	—	8·2673 lbs. avoir.
15. Japan	—	—	—	Ken	—	—	—	—	—	1·3228 „ „
	—	—	—	—	—	—	Koku (wet)	—	—	39·7033 gallons.
	—	—	—	—	—	—	„ (dry)	—	—	4·9629 bushels.
	—	—	—	—	—	—	„ (cap. of vessel)	—	—	$\frac{1}{10}$ of a ton.
	—	—	—	—	—	—	Sho (wet)	—	—	1·5881 quarts.
	—	—	—	—	—	—	„ (dry)	—	—	0·1985 peck.
	—	—	—	—	—	—	—	Yen = 100 Sen	—	2*s.* ½*d.*
16. Norway	Same as	No. 2	—	—	—	—	—	Krone	—	1*s.* 1⅛*d.*
17. Portugal	„ „	„	—	—	—	—	—	Milreis	—	4*s.* 6*d.*
18. Roumania	„ „	„	—	—	—	—	—	Leu	—	9·6*d.*
	Verst	—	—	—	—	—	—	—	—	0·663 mile.
	—	Sq. verst	—	—	—	—	—	—	—	0·44 sq. mile.
	—	Dessiatine	—	—	—	—	—	—	—	2·7 acres.
	—	—	—	Pood	—	—	—	—	—	36 lbs. avoir.
19. Russia	—	—	—	Berkovets	—	—	—	—	—	360 „ „
	—	—	—	—	—	—	Tchetvert	—	—	5·77 imp. bushels.
	—	—	—	—	—	—	Vedro	—	—	2·7 imp. gallons.
	—	—	—	—	—	—	—	Rouble	—	2*s.* 1½*d.*
20. Serbia	Same as	No. 2	—	—	—	—	—	Dinar	—	9·6*d.*
21. Spain	„ „	„	—	—	—	—	—	Peseta	—	9·6*d.*
22. Sweden	„ „	„	—	—	—	—	—	Krona	—	1*s.* 1⅛*d.*
23. Switzerland	„ „	„	—	—	—	—	—	Franc	—	9·6*d.*

FOREIGN MONEY EQUIVALENTS, WEIGHTS AND MEASURES.

(Extracted from 'The British Engineers' Export Journal,' October 1919.)

FOREIGN MONEY INTO ENGLISH EQUIVALENTS.

Country.	Standard Coin.	British Value.	Part of £1.
Abyssinia	Talari	£0 2 0	·1
Aden	Rupee	0 1 4	·06
Argentine	Peso (gold)	0 4 0	·2
,,	Peso (paper)	0 1 10	·10
Australia	Sovereign	1 0 0	1·0
Bahama Islands	Bank of Nassau Note	1 0 0	1·0
,, ,,	,, ,,	0 4 0	·2
Belgium	Franc	*0 0 9½	·04
Bermudas	Sovereign	1 0 0	1·0
Bolivia	Boliviano (silver)	0 1 7½	·08
Brazil	Milreis	0 2 3	·11
British Guiana	Dollar	0 4 2	·21
Br. Honduras	Dollar	0 4 1½	·29
Bulgaria	Lew	*0 0 9½	·04
Canada	Dollar	0 4 1½	·21
Ceylon	Rupee	0 1 6	·07
Chile	Peso Fuerte (gold)	0 1 6	·07
,,	,, (paper)	*0 1 4	·06
China	10 Mace=1Tael.	0 4 11	·25
Colombia	Peso (gold)	0 3 11½	·2
Costa Rica	Colon	0 1 10	·09
Cuba	Peso	0 4 1½	·21
Cyprus	Piastre	0 0 1½	·006
Denmark	Krone	0 1 1½	·05
East Africa	Rupee	0 1 4	·06
Ecuador	Sucre	0 2 0	·1
Egypt	£E	1 0 6½	1·62
Falkland Islands	Sovereign	1 0 0	1·0
Federated Malay States	Dollar	0 2 4	·12
Fiji	Sovereign	1 0 0	1·0
France	Franc	*0 0 9½	·04
Gambia	Sovereign	1 0 0	1·0
Gold Coast	,,	1 0 0	1·0
Germany	Mark	*0 0 11⅜	·05
Greece	Drachma	0 0 9½	·04
Guatemala	Peso	0 4 0	·2
Haiti	Gourda	0 4 0	·2
Holland	Gulden	£0 1 8	·09
Honduras	Peso	0 4 0	·2
Hong Kong	Dollar	Varies.	—
India	Rupee	0 1 4	·06
Italy	Lira	0 0 9½	·04
Jamaica	Sovereign	1 0 0	1·0
Japan	Yen	0 2 1½	·11
Liberia	Dollar (U.S.)	0 4 2	·21
Mauritius	Rupee	0 1 6	·08
Mexico	Dollar	0 2 0	·1
Montenegro	Perper	0 0 10	·04
Morocco	Piastre	0 3 0	·15
Newfoundland	Dollar	0 4 1½	·21
New Zealand	Sovereign	1 0 0	1·0
Nicaragua	Corduba	0 4 0	·2
Nigeria	Sovereign	1 0 0	1·0
Norway	Krone	0 1 1½	·05
Oman	Molmadi	0 1 0½	·05
Panama	Dollar	0 4 2	·21
Paraguay	Peso	0 4 0	·2
Persia	Kran	0 0 4	·165
Peru	Libra or 10 sols	1 0 0	1·0
Portugal	Escuda	0 4 5½	·21
Rumania	Len	0 0 9½	·4
Russia	Rouble	0 2 1½	·11
Salvador	Peso	0 3 11½	·18
Sarawak	Dollar	0 2 0	·1
Serbia	Dinar	0 0 9½	·04
Seychelles	Rupee	0 1 4	·07
Siam	Tical	0 1 6	·08
Sierra Leone	Sovereign	1 0 0	1·0
Spain	Peseta	0 0 9½	·04
Strts. Settlements	Dollar	0 2 4	·12
Switzerland	Franc	0 0 9½	·04
Tonkin	Piastre	0 4 0	·2
Turkey	Piastre	0 0 2·10	·01
Uganda	Rupee	0 1 4	·06
United States	Dollar	0 4 2	·21
Venezuela	Bolivaro	0 0 9½	·04

* Nominal value.

FOREIGN MEASURES INTO ENGLISH EQUIVALENTS.

Country.	Foreign Measure.	British Measure.
China	1 Ts'un	1·41 in.
	1 Ch'ih	14·1 in.
	1 Chang	11·75 ft.
	1 Li	586 yds. 2 ft.
Egypt	1 Feddan	1·08808 acres.
Greece	1 Pike	27 in.
	1 Ken	5·965 ft.
Japan	1 Cho	117 yds. 1 ft.
	1 Ri	2·44 miles.
Russia	1 Vershok	1·75 in.
	1 Arshin	28 in.
	1 Sajene	7 ft.
	1 Verst	0·663 mile.
	1 Sq. Verst	0·4394 sq. mile.
	1 Dessiatine	2·70 acres.
Turkey	1 Donum	1096·76 sq. yds.

FOREIGN WEIGHTS INTO ENGLISH EQUIVALENTS.

Country.	Foreign Weight.	British Weight.
China	1 Liang or Tael	1·3 oz.
	1 Chin or Catty	1·3 lb.
	1 Picul	133 lb.
Egypt	1 Okis	1·3207 oz.
	1 Roti	·99049 lb.
	1 Oke	2·7513 lb.
	1 Quantar	99·049 lb.
Greece	1 Livre	1·05 lb.
	1 Oke	2·80 lb.
	1 Stator	123·20 lb.
Russia	1 Pound	·9 lb.
	1 Pood	26 lb.
Turkey	1 Oke	2·83 lb.
	1 Cantar	125 lb.

Greek Alphabet.

Cap.	Small.	Name.	Special Application.
A	α	Alpha	
B	β	Beta	X-rays.
Γ	γ	Gamma	Adiabatic expansion.
Δ	δ	Delta	Cap. Δ, 3-phase connection (electrical).
E	ϵ	Epsilon	Base of natural logarithms = 2·718281.
Z	ζ	Zeta	
H	η	Eta	Efficiency.
Θ	θ	Theta	Usually designates an angle.
I	ι	Iota	
K	κ	Kappa	Radius of gyration.
Λ	λ	Lambda	Ratio of specific heats of a gas (p. 1545).
M	μ	Mu	μ Coefficient of friction; also relative magnetic permeability.
N	ν	Nu	
Ξ	ξ	Xi	
O	o	Omicron	
Π	π	Pi	Ratio of circum. of circle to diam. = 3·14159.
P	ρ	Rho	Radius.
Σ	ς	Sigma	Σ Sum of series.
T	τ	Tau	
Y	υ	Upsilon	
Φ	ϕ	Phi	Entropy (p. 1547). Angle of lag in alternating current circuits.
X	χ	Chi	
Ψ	ψ	Psi	Velocity coefficient turbine blades (p. 1561).
Ω	ω	Omega	Ω Megohm, ω ohm (electrical resistance). ω Angular velocity in radians per sec. (p. 1545).

Sizes of Paper and Books.

Sizes of Drawing-Paper.

	Ins. Ins.		Ins. Ins.		Ins. Ins.
Antiquarian .	52 × 31	Columbia .	34 × 23	Super royal .	27 × 19
" extra	56 × 40	Elephant .	27½ × 22¼	Royal . .	24 × 19
Double elephant	40 × 26	Double crown	42 × 22	Medium . .	22 × 17
Atlas . . .	33 × 26	Imperial .	30 × 21	Demy . .	20 × 15

Sizes of Paper used for Printing Books, etc.

	Ins. Ins.		Ins. Ins.		Ins. Ins.
Foolscap . .	13½ × 17	Medium	18 × 23	Super royal	20 × 27
Crown . . .	15 × 20	Royal . .	20 × 25½	Imperial .	22½ × 31
Demy . . .	17½ × 22½				

Most of these papers are also made double size.

Sizes of Books.

Broadside, folio, quarto (4to), octavo (8vo), 12mo, 16mo, 18mo, 32mo, 48mo.
These names indicate the number of pages in the half-sheet; for instance, an octavo has 8 pages in the half-sheet. A crown octavo is about 5 ins. × 8 ins.

A ream of paper contains 20 quires of 24 sheets each. A bale is 10 reams. A roll of parchment is 60 skins.

Sizes and Descriptions of Type.

The following descriptions of type have been used in the printing of this book :—

LONG PRIMER SMALL CAPITALS.
BOURGEOIS CAPITALS.
Bourgeois Roman.
Bourgeois Italic.
MINION CAPITALS.
Minion Small Capitals.
NONPAREIL ANTIQUE CAPS.

Nonpareil Antique.
NONPAREIL CAPITALS.
Nonpareil Small Capitals.
Nonpareil Roman.
Nonpareil Italic.
PEARL ANTIQUE CAPITALS.
Pearl Roman.
Pearl Italic.
Diamond Italic.

SECTION XL

PART II

THE METRIC SYSTEM IN CONNECTION WITH INTERNATIONAL TRADE.

(*A. H. Allen, M.I.E.E.*)

The decimal multiples and submultiples of the metre (the length standard) in general use are the kilometre (1,000 m.), centimetre ($\frac{1}{100}$ m.), and millimetre ($\frac{1}{1000}$ m.); in scientific work the micron ($\frac{1}{1000000}$ m.) is used. In surface measurements the square metre, centimetre, and millimetre are used for industrial purposes, and the are (100 sq. metres), hectare (100 ares or 10,000 sq. metres), and the square kilometre (1,000,000 sq. metres), for land measurement. For the measurement of volume the principal unit is the litre ($\frac{1}{1000}$ cub. metre or 1,000 cub. centimetres); the cubic metre and the cubic centimetre ($\frac{1}{1000000}$ cub. metre) are in common use.

The units of weight are the gramme, the kilogram (1,000 grammes, or the weight of a litre of water at its maximum density), and the metric ton (1,000 kilograms): the quintal (100 kilograms) is also used in commerce, and submultiples of the gramme in laboratory work. The following are the abbreviations employed to denote the units, their metric and English equivalents, and approximate values of the latter:—

Name.	Abbn.	Metric Equivt.	English Equivt.	Approx. Value.
Millimetre	mm.	0·001 m.	0·03937 inch	$\frac{1}{25\frac{3}{8}}$ inch
Centimetre	cm.	0·01 m.	0·3937 inch	$\frac{3}{8}$ inch
Metre	m.	1·0 m.	1·0936 yard	$1\frac{1}{10}$ yard
Kilometre	km.	1,000 m.	0·6214 mile	$\frac{5}{8}$ mile
Square centimetre	cm^2.	0·0001 m^2.	0·155 square inch	$\frac{5}{32}$ square inch
Square millimetre	mm^2.	0·000001 m^2.	0·00155 square in.	$\frac{1}{645}$ square inch
Square metre	m^2.	1·0 m^2.	1·196 square yard	$1\frac{1}{6}$ square yard
Are	a.	100 m^2.	0·02471 acre	$\frac{1}{40}$ acre
Hectare	ha.	10,000 m^2.	2·471 acres	$2\frac{1}{2}$ acres
Square kilometre	km^2.	1,000,000 m^2.	0·3861 square mile	$\frac{3}{8}$ square mile
Cubic centimetre	cm^3.	$\frac{1}{1000000}$ m^3.	0·0610 cubic inch	$\frac{1}{16}$ cubic inch
Litre	l.	$\frac{1}{1000}$ m^3.	1·7598 pints	$1\frac{3}{4}$ pint
Cubic metre	m^3.	1·0 m^3.	1·308 cubic yard	$1\frac{1}{3}$ cubic yard
Gramme	gm.	$\frac{1}{1000}$ kg.	0·03527 oz.	$\frac{1}{28}$ oz.
Kilogram	kg.	1·0 kg.	2·2046 lb.	$2\frac{1}{4}$ lb.
Quintal	ql.	100 kg.	1·9684 cwt.	2 cwt.
Metric ton	t.	1,000 kg.	0·9842 ton	1 ton

Some misapprehension exists with regard to the difficulty of conversion from English to metric measures and *vice versa*. When such operations are necessary, they are readily performed with the aid of printed tables, of which many varieties are available at small cost. But, in point of fact, conversion would not be required except on rare occasions if the metric units were in general use. Under the conditions existing in this country, conversions from one English unit to another are constantly called for, as in reducing cwt. to lb., or feet to miles, involving calculations at least as arduous as the conversion from English to metric measures, but when the use of the metric system is universal similar changes will be made by simply moving the decimal point. Thus, to reduce 25·78 kilometres to metres, all that is required is to write down 25,780 metres, and to find the volume occupied by 47·31 litres one need only write down 47,310 cubic centimetres, or 0·04731 cubic metre. Only during the process of changing from the present units to the metric system would conversion be frequently necessary.

Another common error is to suppose that the convenient binary divisions of a unit, especially the half and quarter, could not, or should not, be used in connection with the metric system; on the contrary, in countries which have adopted the metric system these divisions are in common use, and there is no reason why other vulgar fractions should not be employed, if desired, except that by doing so a great deal of unnecessary labour would be incurred, as in the case of the English units at present, and one of the greatest advantages of the metric system would be needlessly sacrificed. In workshops where the inch subdivided into sixty-fourths is now used, it is necessary, in order to employ screw micrometers or verniers, to make use of printed tables for converting these awkward fractions into decimals of an inch, and in order to avoid this grave inconvenience some manufacturing firms dimension their drawings entirely in inches and mils. These difficulties are never experienced where the metric system is in vogue.

Again, in finding the weight of a body of irregular shape from the drawings, a common requirement in engineering work, it is necessary to ascertain the volume in, say, cubic inches, and multiply this by the weight of a cubic inch, which must be obtained from tables, and if the tables give the weight per cubic foot but not per cubic inch, as often happens, one or other figure must be converted with the multiplier or divisor 1,728; or if the specific gravity of the material only is obtainable, this has to be multiplied by the weight of a cubic inch of water in order to obtain the weight of a cubic inch of the material. In the metric system, on the other hand, nothing but the specific gravity is ever necessary; this multiplied into the volume in cubic centimetres at once gives the weight of the body in grammes, from which the weight in kilograms or tons is obviously obtained by shifting the decimal point three or six places to the left without any calculation.

In the engineering industries there is much to gain by the adoption of the metric system, in addition to the commercial advantage resulting from the use of the same units as our foreign customers. Drawings would be figured throughout in millimetres, thus avoiding the necessity of marking the denominations of the units, with the resulting liability to error, and the difficulties of adding up a series of dimensions involving eighths, sixteenths, and thirty-seconds correctly would be obviated, whilst much time would be saved. Where calculations were necessary, the trouble and time involved in reducing fractional dimensions to decimals would be avoided, and the liability to error in this operation would be removed. It may be argued that error will arise in placing the decimal point; if this is so, it applies equally to the English measures, for this question only arises when multiplication or division is involved, the position of the point remaining unaltered in addition and subtraction, and if an error of this kind were made it would be so large as to be readily discovered by inspection.

During the war, still more than in peace time, it has been found necessary in many workshops to use both English and metric measures side by side; no difficulty has been experienced as a result of this, works managers stating that the workmen readily adopt the metric measures, whilst in cases where jigs and gauges are used they need not even know what the dimensions are. In all work for which limit gauges are used, the dimensions are always stated in decimals, whether English or metric. In changing from one system to the other, the gauges need not be altered at all; it is the size of the part, not the name of the size, that is important. This applies also to jigs and templates. In the case of screw threads, which are usually cut with dies and taps, the Whitworth standards can be retained, as the only measurements required relate to the size of the stock, not to the threads. The dimensions of screws smaller than the smallest true Whitworth size ($\frac{1}{4}$ inch) were standardised years ago by a British Association Committee, on the metric system, and need not be changed. Metric screws can, if desired, be cut in a lathe with an English leading screw, if one wheel is added to the change wheels, having 63 or 127 teeth.

An important question is that of the metric unit which takes the place of the mil, or one-thousandth of an inch, which under modern conditions of accuracy of workmanship is very generally employed as the actual working unit of length for fitted parts, although the fact may not be so generally realised. The answer is that the one-hundredth of a millimetre admirably meets the requirements, being practically equal to four-tenths of a mil. For very fine work, dimensions are frequently stated in tenths of a mil, but are usually accompanied with a tolerance or margin of error which reduces the limit of accuracy to something like half a mil. The latter is, in fact, according to the National Physical Laboratory, in a report to the Engineering Standards Committee,* a degree of accuracy of measurement which is seldom attained in the workshop, and of course the accuracy of the work is still lower, except in the tool-room, where entirely special conditions obtain. In the report above referred to, it was shown, as the result of a long investigation, that the average error was over $1\frac{1}{2}$ mils, and individual errors amounted often to two or three mils, even in the case of high-class workmanship on plain cylindrical work. Hence the hundredth of a millimetre provides sufficient margin for all purposes in the workshop, and where extreme accuracy is necessary, as in making gauges and other tool-room operations, the thousandth of a millimetre (less than half a ten-thousandth of an inch) is the utmost that is required. As a matter of fact, a large proportion of workshop dimensions can be stated with sufficient accuracy to the nearest millimetre, and even in the case of machined and fitted parts the great majority of dimensions need not be figured to a finer subdivision than one-tenth of a millimetre. Hence

* Now the British Engineering Standard Association.

there is no necessity for a 'string of decimals,' even when converting inch measurements on a drawing to millimetres; if the metric equivalents are given to the tenth of a millimetre the departure from exactitude cannot be as great as two mils, and if they are given to the hundredth, i.e. to two decimal places, the inaccuracy cannot exceed one-fifth of a mil. On the other hand, in accurate work requiring the use of gauges, with dimensions given to a finer value than $\frac{1}{500}$ inch, decimal figures are freely used in English measures, running to the third and even the fourth place on drawings figured in inches, and lists of standard sizes and tolerances, such as those issued by the British Engineering Standards Association, absolutely bristle with decimals. Such dimensions cannot be stated in 32nds and 64ths. Thus there is no novelty in the use of the decimal system in connection with inch measurements, and those who have to use these drawings are already of necessity familiar with the handling of decimals. As a matter of fact, they are obliged to keep at hand printed tables of decimal equivalents for the binary subdivisions of the inch.

Perhaps the chief objection to the use of the metric system in British workshops is the fact that much of the raw material, such as metal rods and bars, sheets, etc., is obtainable at present only in round figures based on the inch, and the dimensions of this material in some cases control those of the machines and tools (but mainly the tools) by which they will be worked upon. As it is desirable to use round figures wherever possible, especially for stock material, the adoption of the metric system would necessitate eventually slight modifications of all such standard sizes, to make them even millimetres or decimals of a millimetre, and during the transitional stage stocks of both denominations would have to be made and sold. This, however, would be a temporary matter, and could hardly outweigh the advantages of falling into line with the vast bulk of our foreign customers in this respect.

SECTION XLI

PATENTS, TRADE MARKS, AND DESIGNS

SECTION XLI

PATENTS, TRADE MARKS, AND DESIGNS.

(Contributed by C. G. Redfern, A.M.I.Mech.E.)

PATENTS.

Application for a patent must be made by the inventor or inventors either alone or in conjunction with one or more co-applicants or a limited company. By inventor is understood either the actual inventor or a person who first introduces an invention from abroad or to whom an invention is communicated from abroad.

When an application is made it is accompanied by either a 'provisional' or a 'complete' specification. In the former case the specification must describe the nature of the invention, but need not particularly describe the same, and the applicant has the right to use and publish the invention during nine months from the date of application, which time may be employed in perfecting the invention and in applying for foreign patents. This protection against the consequences of use and publication is known as Provisional Protection. Should a complete specification not be filed within the prescribed period of nine months, the application is deemed to be abandoned, and no official publication of the provisional specification takes place. When the application is accompanied by a complete specification, full protection is obtained from the date of the acceptance, and between this date and that of the sealing of the patent the applicant has all the privileges and rights accorded by the patent, except that he will not be entitled to institute any proceeding for infringement, unless and until a patent for the invention has been granted.

When a provisional specification has been filed and it is not desired to abandon the application, a complete specification must be filed within nine months from the date of filing the provisional specification; one month's extension of this time, however, can be obtained on payment of a fee. In such a case the complete specification must describe substantially the same invention as that the nature of which is disclosed in the provisional specification; if not, the Comptroller may require the complete specification to be amended to avoid any disconformity between the two specifications.

A complete specification—whether filed with the application or after a provisional specification—must fully describe (if necessary with the assistance of drawings) the manner of carrying out the invention in practice, and at the same time clearly and correctly point out the features of novelty by a distinct statement of the invention claimed. The complete specification on being filed is submitted to an examiner who makes an investigation to ascertain whether the invention described therein has been wholly or in part claimed or described in any specification (other than a provisional specification not followed by a complete specification) published before the date of the application, and deposited pursuant to any application for a patent made in the United Kingdom within fifty years next before the date of the application, or in the complete specification of any prior application, although such complete specification may not have been filed when the application was made. If any anticipating specifications are found, the applicant will have the opportunity of amending the specification, and, if the amendment is not effected to the satisfaction of the Comptroller, the Comptroller may insert a reference to any of the prior specifications in the specification by way of notice to the public. Where the Comptroller is satisfied that the invention has been wholly and specifically claimed, he may refuse to grant a patent.

When an applicant has two or more provisional applications running concurrently and the subject-matter of such applications is of such a nature as to constitute a single invention which may properly be covered by one patent, the Comptroller may accept one complete specification in respect of the whole of such applications and grant a single patent thereon bearing the date of the earliest of such applications; in case of legal proceedings, however, the respective dates of the several applications may be considered.

Patents of addition for improvements in, or modifications of, an invention already patented may be applied for for any unexpired term of the original patent, and no renewal fees, other than those payable in respect of such original patent, will be payable.

Great Britain is a party to the International Convention for the protection of industrial property, under which an applicant for a patent in any one of the States being parties to the Convention may obtain priority in any of the other States—that is to say, an application may be made in any of such States, notwithstanding that publication of the invention may have been made therein, providing that such application be filed within twelve months from the date of the original application.

When a complete specification has been accepted such acceptance is advertised, and the specification will be open to public inspection. Notice of opposition to the grant of a patent may be given at any time within two months from the date of such advertisement, but on the following grounds only, viz. :—

(*a*) That the invention was obtained from the opponent or from a person of whom he is the legal representative.

(*b*) That the invention has been published in the complete specification of a British patent filed in the United Kingdom within fifty years before the date of application for the patent, the grant of which is being opposed, or has been made available to the public by publication in any document (other than a British specification) published in the United Kingdom prior to the application.

(*bb*) That the invention has been claimed in the complete specification of a British patent which, though not published at the date of the application for a patent, the grant of which is opposed, was deposited pursuant to an application for a patent which is, or will be, of prior date to such patent.

(*c*) That the nature of the invention or the manner in which it is to be performed is not sufficiently or fairly described in the complete specification.

(*d*) That the complete specification includes matter not in the provisional specification, and forms the subject of an application made by the opponent in the interval between the leaving of the provisional and complete specifications.

(*e*) That, in case of an application under the International Convention, the specification describes or claims an invention other than that for which protection has been applied for in a foreign state or British possession, and that such other invention forms the subject of an application made by the opponent in the interval between the leaving of the application in the foreign state or British possession and the leaving of the application in the United Kingdom.

If there is no opposition, or, in case of opposition, if the determination is in favour of the grant of a patent, the Comptroller causes a patent to be sealed.

The decision of the Comptroller in most cases is subject to appeal to the Law Officer.

Letters Patent extend to Great Britain, Ireland, and the Isle of Man, and are granted for sixteen years, subject to the payment of renewal fees commencing at 5*l.* in respect of the fifth year, and increasing 1*l.* for each succeeding year during the term of the patent, the last payment being 16*l.* These renewal fees are payable before the commencement of the year in respect of which the payment is made, but extensions of time for making these payments up to three months can be obtained, with the addition of a fine, and in the event of a patent lapsing through the non-payment of a fee, the Comptroller is empowered to revive the patent on certain conditions.

At any time after the sealing of a patent the Comptroller may, if requested by the patentee, cause the patent to be endorsed with the words 'licences of right' and any person shall then be entitled, as of right, to a licence under the patent upon such terms as, in default of agreement, may be settled by the Comptroller.

Furthermore, any person interested may apply to the Comptroller alleging that there has been an abuse of the monopoly rights under a patent and asking for relief. Such rights will be deemed to have been abused, if, after four years from the date of the patent, the invention—being capable of being worked in the United Kingdom—is not being worked on a commercial scale; or if such working is being prevented or hindered by the importation from abroad of the patented article; or if the demand for the patented article is not being met to an adequate extent and on reasonable terms; or if trade or industry is being prejudiced by refusal to grant licences, or by conditions attached by the patentee to the purchase, or use of the patented article or to the working of the patented process. If the Comptroller is satisfied that an abuse of the monopoly rights has been proved, he may order the patent to be indorsed with the words 'licences of right' and grant a licence to the applicant on such terms as he may think expedient; or he may order the patent to be revoked.

For 'PATENT SPECIFICATION DRAWINGS,' see page 176.

TRADE MARKS.

Trade marks are registered under the Trade Marks Act of 1905 as amended by the Act of 1919, which provides that a registrable Trade Mark must contain, or consist of, at least one of the following essential particulars :—

1. The name of a company, individual, or firm represented in a special or particular manner

2. The signature of the applicant for registration or some predecessor in his business.

3. An invented word or invented words.

4. A word or words having no direct reference to the character or quality of the goods, and not being, according to its ordinary signification, a geographical name or a surname.

5. Any other distinctive mark; but a name, signature or word or words, other than such as fall within the descriptions in the above paragraphs 1, 2, 3, and 4, shall not be registrable under the provisions of this paragraph except upon evidence of its distinctiveness.

Provision is also made for the registration of any special or distinctive word or words, letter, numeral, or combination of letters or numerals used as a Trade Mark by the applicant or his predecessors in business before the 13th August, 1875, and which has continued to be used down to the date of the application for registration.

The Trade Marks Act of 1905 as amended by the Act of 1919 provides for a new kind of registration of Trade Marks whereby certain marks, not registrable under the principal Act, can now be registered, provided they have been in *bona-fide* use in the United Kingdom for not less than two years. For this purpose the Register is divided into two parts called Part A and Part B, the new kind of marks being registered in Part B.

An application for registration is made on a form bearing the necessary stamp and should be accompanied by four additional representations of the mark properly mounted. The application is then examined and the mark compared with other marks on record in the Trade Marks Office (this provision may be dispensed with in the case of application to register in Part B), and if, in the opinion of the registrar, any mark or marks be found having such resemblance to the mark sought to be registered as to be calculated to deceive, the applicant will be notified of the conflicting mark or marks, and if, within one month from the date of issuing such notice, no action is taken by the applicant the application will be deemed to be abandoned. Should, however, the applicant so desire, the registrar will appoint a hearing in order that the applicant may attend before him, when the registrar will decide whether the application can proceed. Appeal can be taken from the decision of the registrar to the Board of Trade.

When an application is allowed the mark is advertised in the Official Journal of the Trade Marks Office. The application is then open to opposition for one month from the date of the Journal in which the advertisement appears, and should no opposition be entered the registrar will, upon payment of the registration fee, issue his certificate of registration.

The term of registration of a Trade Mark is fourteen years and may be renewed.

DESIGNS.

For articles which do not form the subject of a patent, protection may in some cases be obtained by design registration where the novelty consists of shape, pattern or ornamentation. Copyright is granted for five years and is renewable for a further similar term, and it is within the discretion of the Comptroller of Patents and Designs to extend the term of a copyright for a third period of five years.

SECTION XLII

COST OF ENGINEERING WORKS

(Contributed by John T. Rea, Author of 'How to Estimate')

SECTION XLII

COST OF ENGINEERING WORKS.*

(Contributed by John T. Rea, Author of 'How to Estimate.')

BORING.

Percussion boring by the ordinary 'English' method to depths of 500 ft. costs 10*s.* to 20*s.* per foot, advancing 2 to 6 ft. per 24 hours.

Rope boring for oil, salt, etc., holes 6 to 15 ins. diameter, 20 to 60 ft. per day, costs 2*s.* to 8*s.* per foot. Plant for a hole 2,000 ft. deep weighs 80 tons, and costs about 2,000*l.*

Diamond boring in hard rock, 5 ins. diameter, costs in this country 8*s.* per foot down to 500 ft., and 12*s.* to 18*s.* down to 1,500 ft. Advance, 5 to 10 ft. per day. Bort 'diamonds' are 2*l.* to 3*l.* per carat for the softer rocks, and carbon 6*l.* to 12*l.* per carat for the harder ones. Boreholes above 6 ins. diameter are thus almost prohibitive for expense.

Chilled shot method for relatively large boreholes, 6 in. diameter, in hard ground, costs 10*s.* to 12*s.* per foot. It is slower but cheaper than diamond boring.

Actual Costs—The following are from practical pre-war experience :—	Per ft. s.	d.
Rope boring at Middlesbrough, 8 ins. diameter, to depths of 1,000 ft., at rate of 60 ft. per day	8	0
Ditto. in Pennsylvania and Ohio, 6 to 15 ins. diameter, at rate of 20 ft. per day, average contract price	6	0
Diamond boring in Scotland, 5 ins. diameter, to depth of 1,800 ft., advancing about 6 ft. per day	6	4
Ditto. in British Columbia, 2,200 ft. deep, at rate of 10 ft. per day	8	6
Ditto. in Nova Scotia, 2 ins. diameter, sunk by the Government in fairly hard ground to depths of 200 to 400 ft. in 1913, averaged	9	0
Ditto. in Victoria, also sunk by the Government, averaged in the coal measures in 1912	9	3
Ditto ditto. in the harder rocks	14	0
Chilled shot 6 in. Government boreholes in Nova Scotia in 1913, averaged	10	6
Some important boreholes of the world—		
Bezuidenville, Transvaal, 5,800 ft.	42	0
Czechow, Rybnik, Upper Silesia, 7,350 ft.	43	4
Paruschowitz, Silesia, 6,572 ft. (12 in. bore decreasing to 2¾ in.)	11	6
Schladebach, Prussia, 5,737 ft.	21	2

BREAKWATERS.

Breakwaters formed of large rough blocks of stone as a foundation with heavy masonry walls above, forming a harbour. Average width 300 ft., and average depth 50 ft. below low-water mark. 150*l.* to 300*l.* per foot run complete.

Alderney.—Composite type of rubble mound and upright wall above. Mound terminates 12 to 15 ft. below low water. 338 ft. wide at base and 36 ft. at top. 90 ft. mean depth of water. 259*l.* per foot run.

Algiers.—Mound type, with large random concrete blocks surrounding the rubble. 50 ft. mean depth of water. 122*l.* per foot run.

Bizerta.—Composite type, with wall built on caisson system. 58 ft. mean depth of water. 60*l.* per foot run.

* All prices mentioned are pre-war figures unless otherwise stated.

Colombo.—South-west breakwater, 1874–85, is 4,212 ft. long, built of concrete blocks weighing 18 to 30 tons, on the sloping bond system, and cost 705,200*l.*, or 167*l.* per foot run. Extension to ditto as a further protective arm, 1907–12, is 1,800 ft. long, also of concrete blocks, and cost 380,000*l.*, or 211*l.* per foot run.

North-east breakwater, 1894–7, is 1,100 ft. long, and constructed as a rubble embankment; the north-west or island breakwater, 1900–6, is 2,657 ft. long, and made of concrete; the two together cost 500,000*l.*, or 133*l.* per foot run.

Total length of the four breakwaters about 9,770 ft., with five lighthouses on them, and total cost 1,585,200*l.*, or an average of 162*l.* per foot run. Depth of sea, 30 to 36 ft. at low water. Rise of tide at Ceylon is only 2 ft. Engineers, Sir John Coode, Son, and Mathews.

Dover.—Wall type, composed of concrete blocks weighing 26 to 40 tons, 82 ft. wide at base and 40 ft. at top. Depth of water, 61 ft. high; 42 ft. low. 415*l.* per foot run.

Holyhead.—Composite type, with very predominant mound of rough rubble stone, 400 ft. average width at base and 40 ft. at top. Sea and harbour walls built upon the mound. 54 ft. mean depth of water. 163*l.* per foot run.

Marseilles.—Mound type. Outer casing of concrete blocks, 25 tons each, and average thickness 14 to 20 ft. Inner casing of rubble stones, 2 to 5 tons weight, about 12 ft. thick. Rubble hearting, ½ to 2 tons stones, and 6 ft. thick. 35 ft. mean depth of water. Joliette section, 72*l.* per foot run, and new section, 109*l.* per foot run.

Naples.—Composite type. 93 ft. mean depth of water. 186*l.* per foot run.

Plymouth (1811–48).—Rubble mound with walls on top, nearly a mile long. Slope of 5 to 1 seawards. 360 ft. wide at base and 43 ft. at top. Average depth, 45 ft. below low-water mark. Absorbed 3,670,440 tons of rubble and 22,150 cubic yards of masonry. Engineer, Sir John Rennie. 250*l.* per foot run.

Portland.—Mound type with large rubble blocks and heavy masonry wall above, 270 ft. wide at base. The largest of its kind in England and in two portions—inner about 2,000 ft. long and outer over 6,000 ft., with 400 ft. opening between them. Depth of water, 58 ft. high; 51 ft. low. 6 million tons of stone used. Convict labour. Total cost, 1,250,000*l.* 140*l.* per foot run.

Maintenance.—This is less for walls than for rubble mounds, as the latter are greatly affected by wave action, and need constant repair. Cost varies according to situation and exposure, and rarely exceeded 1*l.* per foot run per annum, pre-war. For some time it averaged 1*s.* 3*d.* at Holyhead, 7*s.* at Geneva, and 13*s.* at Naples.

(See also page 1324.)

BRIDGES.

Types.—(1) Arched, (2) Cantilever, (3) Girder or lattice, (4) Movable (bascule or lifting, rolling, swing, and transporter), (5) Pontoon (with barrels, boats, planks, &c.), (6) Suspension, (7) Trestle (with very high steel or wood framework piers, and (8) Viaducts or "land" bridges

Costs include foundations, piers, abutments, approaches, footpaths, machinery, etc., complete.

Description.	Span.	Number of Spans.	Cost per ft. sup.
	ft. ft.		
Brick or masonry	50 to 100	Single	£1 to £2
	50 „ 100	Multiple	£2 „ £4
Ordinary concrete	30 „ 50	Single	15*s* „ £1
	30 „ 50	Multiple	£2 „ £3
Reinforced concrete	50 „ 100	Single	10*s*. „ £1
	50 „ 100	Multiple	£1 „ £2
Steel bascule or lifting	50 „ 100	Single	£3 „ £5
	100 „ 200	Multiple	£5 „ £8
Steel girder or lattice	50 „ 100	Single	£1 „ £3
	50 „ 100	Multiple	£2 „ £5
Steel suspension	50 „ 100	Single	£1 „ £2
	100 „ 200	Multiple	£2 „ £4
Steel swing	50 „ 100	Single	£2 „ £3
	100 „ 200	Multiple	£3 „ £5

Brooklyn Bridge (1870–83).—Wire cable suspension bridge over the East River, connecting New York with Brooklyn. 5,990 ft. total length, including 1,596 ft. central span from tower to tower, two spans of 930 ft. from the towers to anchorage on either side, and the approaches of

ironwork and masonry, 1,563 ft. on New York side and 971 ft. on Brooklyn side. Width 85 ft., divided into five passage ways for vehicles, trams, and foot passengers. Clear height above high water 135 ft. in centre and 118 ft. at towers, giving a free passage to shipping. Towers 277 ft. above high water, upon rock foundation 80 ft. below surface of river and 40 ft. beneath its bed. Supporting the spans are four cables nearly 16 ins. diameter, and 3,758 ft. long, with anchorages of solid stone masonry weighing 60,000 tons each, and rising 90 ft. above river's edge. Each cable contains 5,282 galvanised steel wires in 19 separate strands, of 278 lengths, and each strand has over 200 miles of continuous wire. Wires laid parallel, not twisted, with spiral wire wrapping. Deflection of cables between towers is 128 ft. Engineer, John A. Roebling. Total cost, including approaches, 3,100,000*l.*, or 518*l.* per ft. run, or 6*l.* per ft. sup.

Forth Bridge, Scotland (1882–90).—At South Queensferry, near Edinburgh. Steel latticework, with two main cantilever spans 1,710 ft. each, and 24 land spans, 42 to 688 ft. each. Each cantilever 680 ft. long, united by a girder 350 ft. span. The steel towers supporting the cantilevers are 361 ft. high. 50,960 tons of steel employed and 6½ millions of rivets. Complete length. 8,100 ft., and with approaches, 8,300 ft.; width, 30 ft. Double line railway. Height of railroad, 152 ft. above high water. Main piers of masonry, and concrete foundations in rock, 70 ft. below high water. Central pier of granite standing on the islet of Inchgarvie. Engineers, Sir John Fowler and Sir Benjamin Baker. Contractors, Sir Wm. Arrol & Co. Total cost, including approaches, 1,700,000*l.*, or 205*l.* per ft. run, or 7*l.* per ft. sup.

Gokteik Viaduct (1901).—For a single track on the Burmah railway, and about 80 miles from Mandalay. The highest steel trestle bridge in the world, the 15 trestles varying from 250 ft. to 320 ft. in height. Comprises 10 spans of 120 ft. and 7 spans of 60 ft., or 17 spans altogether, formed with lattice or truss girders. Total length between abutments, 2,260 ft. Total cost, 61,000*l.*, or 3*l.* 10*s.* per ft. sup.

Holyhead, Britannia Tubular Bridge (1845–50).—Across the Menai Straits. Continuous double tube of wrought-iron plates, each tube 15 ft. wide by 23 ft. high at ends, and 30 ft. at centre, with one railway line in each. Two main spans of 460 ft. each, two smaller spans of 230 ft., and two shore spans of 65 ft., or a total length of 1,510 ft. Each tube weighs 4,680 tons, and is fixed 100 ft. above high water. Two abutments, and three masonry piers or towers, the highest of which is 230 ft. Complete distance, with approaches, 1,560 ft. Engineers, Robert Stephenson, assisted by Sir Wm. Fairbairn and Professor E. Hodgkinson. Total cost, including approaches 608,000*l.*, or 390*l.* per ft. run, or 13*l.* per ft. sup.

Kingston Bridge, Surrey (1825–8).—Brick and stone. Five elliptical arches: middle arch 60 ft. span, other arches 56 ft. and 52 ft. span. Ratio of piers to spans, 1 : 6. Bridge, 382 ft. long and 25 ft. wide. Bridge itself 26,800*l.*; approaches and other works, 13,200*l.* Total cost, 40,000*l.*, or 105*l.* per ft. run, or 4*l.* per ft. sup.

London Bridge (1824–31).—Stone bridge of five elliptical arches over the Thames and of handsome design, connecting the City of London with the borough of Southwark, and replacing the 12th century stone bridge Centre span 152 ft., rising 30 ft. above Trinity high-water mark, arches on each side 140 ft. spans, and abutment arches 130 ft. Total length 1,005 ft., and 56 ft. outside width. Two centre piers 24 ft. thick, exterior stones of granite and interior halt Bramley Fall and half Painshaw, Derbyshire; granite voussoirs. General depth of foundations 30 ft. below low water. Engineer, John Rennie, and completed by his son Sir John Rennie. Contractor's tender for the bridge alone was 425,081*l.*, but actual cost was 1,458,310*l.*, or 1,451*l.* per ft. run, or 26*l.* per ft. sup.

Newcastle High-level Bridge (opened 1849).—Example of a true bowstring arch in which there is no cross bracing, with six spans of 125 ft. each. Total length 1,373 ft., and 37 ft. external width. Superstructure is supported on five intermediate piers and eight land piers, four at each side, latter with arched abutments. Height of soffit above high-water, 83 ft. Arched ribs of cast iron and ties of wrought iron. 4,728 tons of cast iron and 321 tons of wrought iron were employed. A carriage roadway passes underneath the railway, the bridge supporting both. Engineer, Robert Stephenson. Total cost, 243,000*l.*, or 177*l.* per ft. run, or 5*l.* per ft. sup.

Niagara Suspension Bridge (1852–5).—Connects the United States with Canada. A wire-rope suspension bridge for road and railway, with a single span of 821 ft., centre to centre of piers and 245 ft. above the water. Superstructure is a hollow rectangular box, 24 ft. wide × 18 ft. deep, on the top of which the railway is laid, while the bottom forms a roadway for public traffic both floors being constructed of timber beams, etc. Railway floor is suspended from two wire cables, 10 ins. diameter, at intervals of 5 ft., and the lower floor by two similar cables. 120 stays. Two masonry towers at each end of the bridge, 60 ft. high, 15 ft. square at base, tapering to 8 ft. square at top, and pierced by an arch. Anchor chains embedded in masonry 7 ft. × 3 ft., and 25 to 35 ft. deep. Engineer, John A. Roebling. Total cost, 80,000*l.*, or 97*l.* per ft. run or 4*l.* per ft. sup.

Tower Bridge, London (1890–4).—Steel, with two fixed shore suspension spans 270 ft. each, and a lifting central span of 200 ft. Two large steel towers encased with stone, with two bascules or drawbridges in the centre and connected at top by a high-level footbridge, 140 ft. above high water.

Bascules weigh 1,000 tons each, and are raised and lowered by hydraulic machinery, which is contained in the chambers of the piers supporting the towers, each pier being 180 ft. long × 70 ft. wide. Staircases and hydraulic lifts are provided in the towers for foot passengers crossing the high-level bridge when the bascules are raised for the passage of shipping. Complete length, with approaches, 2,980 ft. Width of fixed spans between parapets, 60 ft., and breadth across centre span 50 ft. Engineer, Sir John Wolfe Barry. Sir Horace Jones, the City Architect, designed the architectural details. Contractors: Sir John Jackson for foundations; Sir Wm. Arrol & Co. for steelwork; and Sir W. G. Armstrong & Co. for hydraulic machinery. Total cost, including machinery and approaches, 903,000*l.*, or 303*l.* per ft. run, or 5*l.* per ft. sup.

Westminster Bridge, *London* (1853–62).—Road bridge over the Thames, with cast and wrought iron arches of 120 ft. span and 20 ft. high. 1,160 ft. long and 83 ft. wide. Engineer, Thomas Page. Contractors, Messrs. Mare. Total cost, 235,000*l.*, or 203*l.* per ft. run, or 2*l.* per ft. sup.

Bridges of Concrete.

Coulouvrenière Bridge, *Geneva* (1895–6).—Across the Rhone, 351 ft. wide, and total length of bridge over the abutments 492 ft. Width between parapets 61 ft. 4 ins., two footways 12 ft. 6 ins. each, with a carriageway 36 ft. 4 ins. between the kerbs. Two large arches with spans 131 ft. 3 ins., and rise of 17 ft. 6 ins. Arches 3 ft. 3 ins. thick at both springings and centre, about 4 ft. 6 ins. at the haunches, and steel pivoted. Two smaller arches, 35 ft. 5 ins., and 39 ft. 4 ins., but are not pivoted, being elliptical. Very handsome bridge. Arches, spandrels, 9 spandrel walls, 2 ft. thick, 12-in. top table, and filling, all of concrete, 1 to $4\frac{1}{2}$, 6, 7, and 8. Piled abutments. Facing of spandrel walls, columns, cornice, and parapet of stone. Wooden centres were used, with sand boxes for adjusting and striking. Total cost, 68,000*l.*, or 138*l.* per ft. run, or 2*l.* 5*s.* per ft. sup. of roadway and footpaths. Cost per cubic yard, including centering and scaffolding, was 3*l.* 2*s.* 3*d.*

Eyach Bridge, *Hohenzollern* (1895).—Designed by Herr Max Leibbrand, of Sigmaringen. A single span of 98 ft. 5 ins., with a rise of 9 ft. 10 ins. Concrete arch and table, 1 to $7\frac{1}{2}$, and foundations to abutments, 1 to 9, which are piled. Pivots or joints made of granite instead of iron or lead. Bridge is 143 ft. long, 12 ft. 6 ins. total width, with roadway 7 ft. 6 ins. wide, and each footpath 2 ft. 6 ins. The footpaths overhang the arch on either side, and were formed of old iron rails. Plain iron railing as parapet. Cost, 900*l.*, or 6*l.* per ft. run, or 10*s.* per ft. sup.

Kirchheim Bridge, *Württemburg* (1897).—Over the Neckar, which is 361 ft. wide at this point, with 230 ft. of foreshore, or a total of 591 ft. Designed by President von Leibbrand, chief engineer to the State of Württemburg. Length of bridge from outside to outside of abutments, 592 ft., and space between parapets 17 ft. 8 ins., including road, 12 ft. 8 ins., and two footways, 2 ft. 6 ins. each; open iron parapets. Four spans of concrete arches, 124 ft. 8 ins. each, with a rise at the centre of 18 ft. Thickness of arch at crown, 2 ft. 8 ins., increasing to 3 ft. at springing. Concrete piers 7 ft. 6 ins. thick at springing level, faced with stone at water level; cutwaters also faced with stone. Concrete in arches and abutments, 1 to $7\frac{1}{2}$, spandrel walls, tables, etc., 1 to 9, and foundations for piers, 1 to 4. Concrete on face was tooled and coloured, and concrete in piers rendered 2 ins. thick with 1 Portland cement and 2 sand. Lead joints in the centres and springings of arches 6 to 7 ins. wide, bedded and recessed in stone. Screw jacks were used for striking the centres in place of folding wedges or sand boxes. Cost, 7,000*l.*, or 12*l.* per ft. run, or 13*s.* 5*d.* per ft. sup. of bridge table. Approaches, 2,250*l.* in addition.

Munderkingen Bridge, *Württemburg* (1893).—Over the Danube. Designed by President von Leibbrand. One span only of 164 ft., and rise 16 ft. 5 ins. Thickness of arch at centre 3·28 ft., at springing 3·61 ft., and at haunches 4·26 ft. The first concrete bridge where steel pivots on bearing boxes were used, one set at each abutment and one set at the crown. Internal and external spandrel walls, abutments, horizontal and intermediate tables, cornice, and arch itself, were of concrete, 1 to $7\frac{1}{2}$, and tinted. Spandrel face of limestone, and ornamental open iron parapet. Cost of bridge, including piled abutments, 3,600*l.*, or 21*l.* per ft. run, or 13*s.* 6*d.* per ft. sup. of road and footway surface. Approaches, 1,000*l.* in addition.

Neckarhausen Bridge, *Hohenzollern* (1900).—Over the Neckar. Designed by Herr Max Leibbrand, of Sigmaringen. The handsomest concrete bridge in Germany, the concrete being coloured, and no stone used. A single concrete arch of 164 ft. clear span, with a rise of 15 ft. Arch ring 2 ft. 10 ins. thick at the centre, 3 ft. at the springing, and 4 ft. at the haunches. The arch is tapered on plan, being 1 ft. 8 ins. wider at the springing than at the centre. Concrete spandrel columns and arches over, instead of solid spandrel walls and haunches, thus reducing both material and dead load. Arches pivoted with steel pins and cast-iron brackets or bearings, and those carrying roadway were strengthened with iron rails built into the top and abutments. Concrete in arch 1 to $7\frac{1}{2}$, faced with $\frac{3}{8}$-in. spalls of limestone. Voussoirs, cornice, etc., were coloured. Width of macadam roadway 13 ft., and overhanging footpaths 2 ft. 6 ins., which is a cheap method. Centering was supported on temporary piles, with screw jacks for striking. Cost, 3,000*l.*, or 17*l.* per ft. run, or 19*s.* 5*d.* per ft. sup. Long approaches, 5,000*l.* in addition.

BRIDGES OF REINFORCED CONCRETE.

Spans, 50, 75, or 100 ft. External width, including parapets, 25 ft. Height, from mean water level to underside of elliptical arch, 13 ft. 11*s.* to 15*s.* per ft. sup.

Items.	Cost.		
	50 ft. Span.	75 ft. Span.	100 ft. Span.
	£	£	£
Excavations	70	111	184
Concrete	251	462	667
Centering	129	240	341
Reinforcing Steel	104	194	277
Preliminaries 10 per cent.	55	100	147
Contractors' Profit, etc., 15 per cent.	91	166	242
Total Cost	700	1,273	1,858

Alexandra Bridge, Pietermaritzburg (1914-15).—Reinforced concrete on the Kahn system. 170 ft. long × 30 ft. wide between the parapets, with two 5-ft. footpaths cantilevered over a 20-ft. roadway. Central arch 75 ft. span, and a half arch 38 ft. span at each end Cost, including 5 per cent. for designs and supervision, 5,906*l.* for the bridge and 4,008*l.* for the approaches = 9,914*l.* total. 52*l.* per ft. run, or 2*l.* per ft. sup.

Chatellerault Bridge, France (1900).—Across the river Vienne, and is formed entirely of ferro-concrete on the Hennebique system. Centre span 164 ft. and two side spans 135 ft. each, with rises of respectively 16 ft. and 13 ft., and a width between the parapets of 26 ft. 3 ins., excluding two cantilevered footways which overhang 3 ft. 5 ins. Spans of four arched concrete ribs, 35 ins. deep × 19 ins. wide at springings, tapering to 9 ins. square at the soffit, and extrados connected together by an arched table. Roadway and footpaths supported by spandrel pillars, 8 ins. square, and longitudinal concrete beams, the top table being 10 ins. thick at the centre, tapering to 5 ins. at kerb. The bridge only weighs 250 lbs. per ft. sup. Cost, 8,000*l.*, or 18*l.* per ft. run, or 12*s.* 6*d.* per ft. sup.

Pontypridd Bridge (1908).—Over the river Toll. Reinforced concrete on the Hennebique system, with the two piers on reinforced concrete piles. Total length 170 ft., and width 30 ft. Central river span 117 ft. Total, 3,600*l.* 21*l.* per ft. run, or 14*s.* per ft. sup.

Warrington Bridge (1913).—Over the river Mersey. Largest single-span reinforced concrete bridge in England, on the Considère system. River walls and abutments also of reinforced concrete. Clear span 134 ft., width 80 ft. between parapet walls, and ten parabolic ribs supporting uprights and cross beams on which rest 6½ in. floor slabs. Roadway has wood-block paving, and footpaths have concrete slabs. Total cost, including approaches, 24,000*l.*, or 34*s.* per ft. sup. ditto.

CANALS.

Barge or Boat Canals.

Basingstoke Canal (1794).—From Basingstoke to the river Wey. Length, 37 miles, including 29 locks. Total cost, 166,000*l.* Cost per mile, construction works only, 4,486*l.*

Bridgewater Canal (1759-61).—In Lancashire, from Worsley to Manchester. Originated by the Duke of Bridgewater to bring coal from his mines, and first length only 10 miles. 50 ft. wide and 5½ ft. deep, with vertical stone walls instead of banks. The Barton aqueduct carried the canal over the river Irwell. Engineer, James Brindley. The Bridgewater Canal has since been purchased by the Manchester Ship Canal Co. Length, 34½ miles. Total cost, 235,000*l.* Cost per mile, construction works only, 6,812*l.*

Dortmund and Ems Canal (1890-1900).—From Dortmund to the North Sea at Emden. Part of the 157 miles total length includes canalisation of the river Ems. Bottom width 59 ft., and depth 8 ft. Works include 1 canal lift, 3 masonry aqueducts, 185 bridges, and 20 masonry locks, 220 ft. long each. Artificial canal portion cost 29,000*l.* per mile, and river canalisation portion 14,000*l.* per mile. The locks were 15,000*l.* each, and the weirs 8,500*l.* each. Total cost, 3,970,000*l.*, including 400,000*l.* for land. Cost per mile, including land, 25,286*l.*, and construction works only, 22,740*l.*

Ecbing Canal.—In Holland. Length, 28 miles. Cost per mile, 7,580*l.*

Grand Junction.—Width at water level, 36 ft., and 24 ft. at bottom. Cost per mile, including land, etc., 19,500*l.*

Ulster Canal (1826-41).—Unites Lough Neagh with the Upper Lough Erne. Length, 46 miles Total cost, 200,000*l.* Cost per mile, construction works only, 4,350*l.*

Worcester and Birmingham Canal.—Original cost per mile, 20,000*l.*

Ship Canals.

Amsterdam Canal (1865–80).—Connects Amsterdam with the North Sea *via* Lake Y and Wyker Meer, in a westerly direction. Comprises a dam, 4,462 ft. long, shutting off Lake Y from the Zuider Zee. There are 5 locks, sluiceways, 3 swing bridges, and a harbour of 260 acres, with two breakwaters, 5,070 ft. long each, at the North Sea entrance. Canal is 88 ft. wide at bottom, and 23 ft. deep. 21,000,000 cubic yards of material were excavated and dredged, and 13,000 acres of land reclaimed. Engineers, Sir John C. Hawshaw and Mr. Dirke. Length, 16 miles. Whole expenditure, 3,000,000*l*; but construction works only, 2,590,000. Cost per mile respectively, 187,500*l*. and 161,875*l*.

Caledonian Canal (1804–23).—Connects Loch Eil with Inverness Firth, and Lochs Ness, Oich, and Lochy in between. The summit-level of 102 ft. is overcome by 26 locks, 13 on either side, each about 170 ft. long × 40 ft. wide. 22 miles of artificial or canal navigation, and 38 miles of natural lake navigation. Canal is 120 ft. wide at water level, 50 ft. at bottom, and 18 ft. deep. Engineer, Thomas Telford. Length, 22 miles. Total cost, 1,000,000. Cost per mile, including land, etc., 45,455*l*.

Corinth Canal (1890–3).—Between Gulf of Corinth and Gulf of Ægina. Bottom width, 72 ft., and average depth, 26 ft. Earth and soft rock. No locks. Length, 4 miles. Total cost, 1,000,000*l*. Cost per mile, construction works only, 250,000*l*.

Cronstadt and St. Petersburg Canal.—Average width, 240 ft., and average depth, 21 ft. No locks. Total length, 16 miles, including 10 miles of bay channel and 5 miles of canal proper. Total cost, 2,000,000*l*. Cost per mile of total length, 125,000*l*.

Kiel Canal (1887–95).—Or Kaiser Wilhelm Canal, from Elbe in the North Sea to Kiel in the Baltic. Mostly through marshes or shallow lakes, and river valleys, with tidal waterway throughout. Original dimensions: surface width 226 ft., bottom width 72 ft., and depth 30 ft. (since increased to 334½ ft., 144½ ft., and 36 ft. respectively). Two entrance locks, originally 492 ft. long × 82 ft. wide × 32 ft. deep over sill (now enlarged to 1,083 ft. × 147½ ft. × 45 ft., and constructed in concrete, each lock having three pairs of caissons dividing the chambers into lengths of 725 ft. and 330 ft.). The works for broadening and deepening were completed in 1914. Breakwaters at each end. Length, 61 miles. Total cost, including land purchase, 7,800,000*l*. Cost per mile, ditto, 127,870*l*.

Manchester Canal (1887–93).—From Eastham, near Liverpool, to Manchester. 15 miles canal proper, and 21 miles tidal waterway, or 36 miles total. 170 ft. wide at water level, 120 ft. at bottom, and 26 ft. minimum depth (now increased to 28 ft.). Four sets of locks, with an average lift of 15 ft. each, thus raising the water level of the canal at Manchester to 60 ft. above mean sea-level at Liverpool. The locks vary from 600 ft. × 80 ft. to 150 ft. × 30 ft., and the lock gates are moved by hydraulic machinery. The works include 160 acres of docks, with warehouses, machinery, and 95 miles of railway sidings, 6 high-level bridges, 7 swing bridges, and the Barton swing aqueduct for the Bridgewater Canal, which had to be bought. 52,000,000 cubic yards of excavation, and the plant used in construction cost 980,000*l*. Annual maintenance averages 2,000*l*. per mile of canal, and 400*l*. per acre of docks. Details of total cost:

	£
Purchase of Bridgewater Canal	1,783,000
Land and compensation	1,167,000
Constructing the canal and docks	9,000,000
Interest on capital during construction	1,050,000
Law charges, Parliamentary expenses, etc.	500,000
Total	13,500,000

Cost per mile of total length, complete, including all foregoing expenses . . 375,000
Cost per mile of ditto, construction works only, canal and docks. . . 250,000

Panama Canal (1904–15).—From Colon, on the Atlantic, to Panama on the Pacific. The Panama Canal Company was floated in 1879, with Ferdinand de Lesseps as President, and the canal begun in 1881. The French scheme was abandoned in 1889, after only 12 miles had been cut out of 54, and fifty million pounds spent, when the United States Government took over and started the American project in 1904 as now completed. Colonel (now General) G. W. Goethals, U.S.A. Engineers, was chairman of the Canal Commission which worked out the type and salient features.

Total length along axis, 50½ miles, but only 41½ miles within coastlines. The opening channel at sea-level, from Limon Bay in the Atlantic to Gatun, is 7 miles long by 500 ft. wide and 41 ft. deep. At Gatun are 3 twin locks to raise vessels to the summit canal level, 85 ft. above sea, also a dam, 8,000 ft. long, 1,500 to 2,000 ft. thick at the base, and 115 ft. high, forming the artificial Gatun Lake, 164 sq. miles area, through which ships pass in a channel 500 to 1,000 ft. wide and 45 ft. deep. After 23½ miles of Gatun Lake the Gaillard (formerly Culebra) Cut extends for 8 miles, with a channel 300 ft. wide. Then a single twin lock at Pedro Miguel to the small Miraflores Lake, where a channel, 1½ miles long by 500 ft. wide and 45 ft. deep, leads to Miriflores itself. Here two twin locks lower vessels to the Pacific sea-level, and a channel, 8 miles long,

also 500 ft. wide and 45 ft. deep, conducts them to deep water in Panama Bay. In addition there are 2⅜ miles in locks and alongside approach walls. About 26 miles are artificial canal work, out of the total distance of 50½ miles.

Width varies from 300 to 1,000 ft., and depth 40 to 45 ft. The six pairs of locks are 1,000 ft. long × 110 ft. wide, with intermediate gates to divide them into two sections of 600 ft. and 400 ft., and 6 pairs of lock gates with steel frames and plates. The gates vary from 46 ft. to 82 ft. high, and the largest weighs 730 tons. Maximum number of employees at one time was 50,000. Completed in 1914; opened in 1915.

In addition to General Goethals, other engineers were Messrs. S. B. Williamson, chief of the Pacific Division, Gaillard, Sibert, Hodges, Goldwork, Schildhauer, Cornish, Zinn, Nichols, Alfred Noble, and others.

Total cost, including purchase money, 75,000,000*l.* Cost per mile, ditto, 1,485,100*l.*

Suez Canal (1860–9).—Between Port Said on the Mediterranean and Suez on the Red Sea. M. Ferdinand de Lesseps, engineer and promoter. Total length all but 100 miles, including 60 miles through shallow lakes with and without dredging, and the rest actual canal formed by cutting. Sandy soil and a little rock. 90,000,000 cubic yards of material excavated and dredged, and 25,000 labourers employed. Canal is 420 ft. wide at water level, 108 ft. at bottom, and 39 ft. average depth. Originally 197 ft., 72 ft., and 26 ft. respectively. No locks, as the canal is level throughout. Harbour constructed at each end by breakwaters and moles, 6,000 to 7,000 ft. long, enclosing 450 acres. At the Suez entrance there is a tidal range of 6 ft. average at springs.

Total cost, including promotion, 20,000,000*l.*; but for construction works only 10,680,000*l.* Cost per mile respectively, 200,000*l.* and 106,800*l.*

(See pages 1373, 1374.)

DOCKS.

Cardiff, Liverpool, and London wet docks, including wharves, gates, locks, machinery, etc.:

20,000*l.* to 35,000*l.* per acre of water area.

Aberdeen, Glasgow, and Portsmouth, dry or graving docks for repairs, including equipment:

2*l.* to 4*l.* per yard cube of internal capacity.

Steel floating docks for repairs, in terms of lifting power	10*l.* to 15*l.* per ton.
Dock gates of greenheart, 70 to 90 ft. wide and 40 to 50 ft. high, including hydraulic machinery	40*s.* to 50*s.* per ft. sup.
Ditto of steel, ditto ditto	30*s.* to 40*s.* „
Caissons, traversing or floating, 60 to 90 ft. wide, and 30 to 40 ft. high, including hydraulic machinery	50*s.* to 100*s.* per ft. sup. of waterway.
Dock walls, of concrete, stone, or granite, with concrete backing, including digging	25*s.* to 45*s.* per yd. cube.

Actual Costs of wet docks, including dock walls, gates, locks, machinery, etc.:—

	Per acre of Water Area. £
Avonmouth Docks, near Bristol	22,500
Barry Docks, near Cardiff. Water area, 70 acres. Total cost, 900,000*l.*	12,860
Cardiff. Water area, 50 acres. Total cost, 1,500,000*l.*	30,000
„ Bute Dock Extension. Water area, 35 acres	22,000
„ West Bute Dock. Water area, 22 acres Total cost, 400,000*l*	18,180
„ Roath Dock. Water area, 33 acres. Total cost, 500,000*l.*	15,150
Glasgow, Queen's Dock	24,500
Hull, Alexandra Dock	28,900
Immingham, near Grimsby. Water area, 56 acres. Total cost, including land, railway sidings, dock sheds, coal hoists, etc., 2,600,000*l.*	46,430
Liverpool, Alexandra Dock	23,300
„ North Extension. Water area, 83 acres. Total cost, 2,640,000*l.*	31,810
London, St. Katherine's Docks	36,000
Newport, South Alexandra Docks. Water area, 20 acres. Total cost, 500,000*l.*	25,000
Swansea, Prince of Wales' Dock	18,600

Actual Costs of dry or graving docks for repairs, including equipment :—

	Per yard cube of internal capacity. £	*s.*	*d.*
Aberdeen. Internal size, 524 ft. × 73 ft. at surface level. Total 46,000*l.*	1	15	0
Belfast (1905–12). Length over all, 901 ft. Total cost, 350,000*l.*	2	1	0
Glasgow. Internal capacity, 81,555 yds. cube. Stone and concrete	2	9	0
Hartlepool. Brick and concrete, 570 ft. × 75 ft. × 17 ft. deep	1	8	0
Liverpool. Gladstone Dock (1910–13). Total cost, 500,000*l.*	1	13	0
Otago, New Zealand. Internal capacity, 37,000 yds. cube. Total 75,000*l.*	2	0	0
Portsmouth. Granite with brick and concrete backing ; 42 ft. deep	2	0	0

(See also pages 1327, 1339.)

Drainage.

4-in. and 6-in. stoneware drains, jointed in cement, including trenches 3 ft. deep and concrete bed, 6 ins. thick	2*s.* to 3*s.* per ft. run.
Ditto ditto with manholes, ventilating pipes, etc.	5*s.* to 6*s.* per ft. run.
Manholes and inspection chambers, 3 ft. × 2 ft. 6 ins. × 3 ft. 6 ins. deep, complete, including digging, concrete, brick sides, iron cover, etc.	8*l.* to 10*l.* each.
Add extra for every additional ft. in depth	16*s.* to 18*s.* per ft. deep.
Drains and sewers for estate development and town planning schemes	200*l.* to 400*l.* per acre.
Drainage and sewage disposal works for cities and towns	3*l.* to 6*l.* per inhabitant, 20*l.* to 30*l.* per house.

Reconstruction of Drainage, Stanhope Lines, Aldershot (1893).—Combined water carriage system with 4 in., 6 in., 9 in., and 12 in. glazed stoneware pipes (total, 54,670 yds. run), 2 to 6 ft. deep, 500 Jennings' latrines, 500 urinal stalls, 80 w.c.'s, with 3 gal. flushing cisterns, 200 gal. galvanised iron automatic cisterns, and 16 100-gal. brick automatic flushing tanks, with disposal of sewage by irrigation on War Department land. Occupation of barracks, 8,000 adults, 200 children, and 200 horses. Total cost, exclusive of sewage disposal works, 20,500*l.*, or 2*l.* 10*s.* per head of occupation exclusive of horses ; 7*s.* 6*d.* per yd. run of excavation.

Drainage of Land

Agricultural, or subsoil, unglazed earthenware drain pipes laid dry in 12 in. or 15 in. lengths, without jointing material and ends simply abutting. Depths and distances apart vary according to nature of soil. Cost includes digging, filling, pipes, and laying.

	Cost per acre.
In compact or heavy soils, drains 5 to 8 yds. apart, and 2 ft. 6 ins. to 3 ft. deep	6*l.* to 10*l.*
In medium soils, drains 9 to 10 yds. apart, and 3 ft. to 3 ft. 6 ins. deep	5*l.* to 6*l.*
In porous or light soils, drains 11 to 22 yds. apart, and 3 ft. 6 ins. to 4 ft. 6 ins. deep	4*l.* to 5*l.*

Dredging.

Costs include use of plant, dredging, and removing and depositing excavated material at sea. Steam dredgers cost 10,000*l.* to 40,000*l.* each ; hopper and dredger barges, 300*l.* to 1,000*l.*

Description.	Material.	Per yd. cube.	Per ton.
Bucket dredging, or 'ladder dredging'	Mud, sand, or soft clay	1*s.* to 2*s.*	9*d.* to 1*s.*
	Gravel or stiff clay	2*s.* „ 3*s.*	1*s.* „ 2*s.*
Grab dredging, or 'grapple dredging'	Mud, sand, or soft clay	2*s.* „ 4*s.*	1*s.* „ 2*s.*
	Gravel or stiff clay	3*s.* „ 5*s.*	2*s.* „ 3*s.*
Hand dredging, or 'bag and spoon dredging'	Mud, sand, or soft clay	3*s.* „ 4*s.*	2*s.* „ 3*s.*
	Gravel or stiff clay	4*s.* „ 6*s.*	3*s.* „ 4*s.*
Pump dredging, 'suction or hydraulic dredging'	Mud, sand, or peat	6*d.* „ 1*s.*	4*d.* „ 9*d.*

Blyth Harbour, Northumberland.—Actual cost of blasting and rock dredging:—

	s.	d.
Boring in hard sandstone	1	9
Explosives for blasting	1	4
Dredging, including repairs but nothing for the use of plant	3	0
Total per yard cube	6	1

Manchester.—Actual cost per yard cube of rock dredging on the Manchester Ship Canal during April 1907, by the Lobnitz rock-breaking dredgers:—The price of one rock-cutter was 6,800*l.*, and if 4 per cent. is allowed for interest, and 2½ per cent. for depreciation, the additional cost per yard cube is 2½*d.*, as added; 17,060 cubic yards were broken, the rock being sandstone, of varying hardness, with some stiff marl.

	s.	d.
Breaking, excluding cost of plant, but including maintenance and repairs	0	5½
Dredging	0	5½
Barging and tipping	0	6¾
Towage	0	2½
	1	8½
Add interest and depreciation on cost of plant	0	2½
Total per yard cube	1	10½

Similar work at Blyth cost 1*s.* 2½*d.* per yd. cube, and on the Suez Canal 1*s.* 4*d.*, average, exclusive of raising the rock by dredgers and carrying it away. Ordinary drilling, blasting, and dredging is more expensive—2*s.* 2½*d.* per yd. cube more.

Newry.—After blasting the bottom in a depth of 6 to 8 ft. at low water, the material was removed by dredging at 4*s.* to 5*s.* per yd. cube.

Severn.—Blasting and dredging the marl beds, 4*s.* per yd. cube.

Tees.—Blasting and dredging. In 1875 holes were drilled in the bed of the river Tees 7 to 9 ft. deep and 10 ft. apart, from a dredger; then dynamite blasting in 2 lb. charges. Average depth of rock blasted 4 ft. 6 ins., oolite shale. 110,000 yds. cube were blasted at 3*s.* 1*d.* per yd. cube, so as to be lifted by the dredger.

Ladder dredging in the Tees, mostly in hard boulder clay and lifting stones and tree trunks, cost 1*s.* 6¾*d.* per yd. cube.

Thames.—Contract cost of lifting ballast and clay by ladder or bucket dredgers from the Thames below London Bridge has varied from 1*s.* 4*d.* to 2*s.* 6*d.* per yd. cube, depending on distance material had to be conveyed.

Sand pump dredging 1*d.* or less per cubic yd., and grab dredging 2*d.* to 6*d.*, according to distance spoil has to be taken.

(See also pages 1348, 1349, 1350.)

ELECTRIC POWER STATIONS.

Town.	Total Cost.	Cost of Land and Buildings.	Kilowatts Housed.	Cost of Buildings per Kilowatt.	Total Cost per Kilowatt.
	£	£	No.	£	£
Brighton	717,738	149,431	5,400	28	133
Bristol	671,616	53,550	9,050	6	74
Chichester	20,000	600 not land	200	3	100
Glasgow	1,368,134	211,172	10,993	19	124
Hackney	280,982	42,394	3,372	13	83
Metropolitan	1,802,383	435,777	18,500	24	97
Newcastle	1,192,442	169,675	20,000	8	55
Tonbridge	22,420	7,228	120	6	187
Tunbridge Wells	81,134	13,207	1,170	11	69

	£	£
Electric light installations for cities and towns, with buildings, plant, and mains complete	80 to 130	per kilowatt.
	3 „ 5	per 8 c.p. lamp.
Steam plant power stations	24	per kilowatt.
Oil plant power stations	23 „ 25	„
Capital cost of generating stations	20	„

Power and electric stations generally, brick, exclusive of plant and machinery. 10*l.* to 25*l.* per kilowatt	6*d.* to 8*d.* per f.c.
Aldershot electric lighting station (1902). Brick walls and slated roof	6½*d.* ,,
Curragh electric light generating station (1913–14). For three 100-h.p. Diesel oil engines, 66 kilowatts per engine, with a 750 ampere hour battery and accessory machinery. Contains a basement for engine beds, silencer chamber, and oil-fuel store, and above, on ground level, an engine-room, battery-room, store-room, two offices, and lavatory. Brick walls in cement mortar, 1 to 3, concrete foundations, engine beds and floors, steel sashes, steel roof, boarded and covered with asbestos slates. 99,700 ft. cube. Building only, exclusive of plant and machinery. Total, 2,080*l.*	5*d.* ,,
Building, including plant and machinery. Total, 7,456*l.*	1*s.* 6*d.* ,,
Cost of foregoing per kilowatt housed, 10*l.* to 38*l.*	
Extension to Curragh electric light station (1920–21). For one additional 100-h.p. Diesel oil engine and plant, 66 kilos, the extension of engine-room and exhaust pit being 12 ft. long, and same width and height as existing building. Construction also similar. A corrugated iron workshop, 18 ft. × 12 ft., is attached to the end of the brick extension, and included in total cost and cubing. Lump sum tender for both together. 17,600 ft. cube total. 17*l.* external services in addition. Building only, exclusive of plant and machinery. Total, 2,188*l.*	2*s.* 5¾*d.* ,,
Building, including plant and machinery. Total, 5,188*l.*	5*s.* 10¾*d.* ,,
Cost of foregoing per kilowatt housed, 33*l.* to 79*l.*	
East Ham electric power station, including tramway sheds and offices. Built by direct labour under the borough engineer. Total, 26,020*l.*	5½*d* ,,
Salisbury engine-room and boiler-house (1904). Brick walls and slated roof	6½*d.* ,,
Usual charges for current for electric lighting	2*d.* to 3*d.* per unit.
Ditto for heating and power purposes	1*d.* to 2*d.* ,,

(See also page 1898.)

Engineering Factories.

Engineering factories, brick, exclusive of machinery . . . . . 4*d.* to 7*d.* per f.c.

Material	52 per cent.
Labour	37 ,,
Power	5 ,,
Other costs	6 ,,
	100 ,,

Esplanades.

Marine Drive, Scarborough (1907).—Road 40 ft. wide, parade 20 ft. wide, and sea-wall 20 to 40 ft. high. Of concrete, on deep filling at base of cliff. Length, 1,400 yds. Total, 102,400*l.*, or 73*l.* per yd. run.

Gas Works.

Gasworks.—Gasworks complete, including buildings, plant, and distributing mains:

	Small Towns.	Large Towns or Cities.
Per head of population	30*s.* to 40*s.*	40*s.* to 50*s.*
Per ton of coal carbonised per annum	5*l.* to 6*l.*	6*l.* to 7*l.*
Per million cubic ft. of gas produced per annum	500*l.* to 600*l.*	600*l.* to 700*l.*

Land.—Area of land for the erection of works at least 2 acres per million cubic feet of gas per maximum diem.

Proportionate Capital Expenditure.—Including works, distribution plant, etc.:—

On buildings and works	38 per cent.
On district mains	55 ,,
On Parliamentary, promotion, and engineer's expenses	7 ,,
	100

Proportionate Cost of Parts.—Including buildings and plant :—

Retort house, including benches, fireclay retorts, etc.	25 per cent.
Purification buildings, with purifiers, gas scrubbers, etc.	30 ,,
Gasholders, iron or steel, with guide framing, brick-lined tanks, concrete bottoms, and excavation	40 ,,
Station meter-house, meter, and miscellaneous	5 ,,
	100

Retort-houses.—Including foundations and brickwork to benches, etc. :—

Exclusive of plant or machinery	5*d.* to 6*d.* per f.c.
Including retorts, ironwork, and fittings	1*s.* to 2*s.* ,,

Glover-West's system for vertical gas retorts, Belfast (1913) :—
70,950*l.* for a plant to carbonise 480 tons of coal per 24 hours,
=148*l.* ,, ,, 1 ton ,, ,,

Gasholders.—Steel or iron telescopic holders, including guide framing, etc. :—

	Per 1,000 cub. ft. of capacity. £ £
Single-lift holders, up to about 50,000 cub. ft.	25 to 28
If of the spiral type, 25 per cent. less	20 ,, 22
Two-lift holders, about 250,000 cub. ft. capacity	16 ,, 20
If spirally guided, about 50 per cent. less	8 ,, 10
Large holders, from 2 to 3 million cub. ft. capacity	9 ,, 12
The 10½-million holder at Manchester cost	5
The 12-million holder at East Greenwich Works cost	5 guineas

(See pages 2064, 2069, 2076, 2080.)

Harbours.

Artificial harbours complete, including reclamation of land, dredging, enclosure walls, breakwaters, landing stages, lighting, buoys, cranes, etc.

5,000*l.* to 10,000*l.* per water acre enclosed.

Colombo Harbour (1874–1914).—On the west coast of Ceylon and entirely artificial. It ranks twelfth among the greatest seaports, and there is ample space for 50 steamers besides smaller craft. The enclosed area is 650 acres (over a square mile), and depth 30 to 36 ft. at low water. Rise of tide at Ceylon is only 2 ft.

South-west breakwater, 1874–85, is 4,212 ft. long, built of concrete blocks weighing 18 to 30 tons on the sloping bond system, and cost 705,200*l.*, or 167*l.* per ft. run. Extension to ditto as a further protective arm, 1907–12, is 1,800 ft. long, also of concrete blocks, and cost 380,000*l.*, or 211*l.* per ft. run. North-east breakwater, 1894–7, is 1,100 ft. long, and constructed as a rubble embankment; the north-west or island breakwater, 1900–6, is 2,657 ft. long, and made of concrete; the two together cost 500,000*l.*, or 133*l.* per ft. run. Total length of the four breakwaters about 9,770 ft., with 5 lighthouses on them, and total cost 1,585,200*l.* Graving dock, 1900–4, is 700 ft. long, 85 ft. wide, and cost 400,000*l.*; patent slip, 1900–3, is 800 ft. long, and cost 43,000*l.*; coaling depot, on 24 acres of reclaimed land, has a frontage of 2,200 ft. with 18 jetties, and cost 163,000*l.* Other services, 821,900*l.* Total expenditure from 1874 to 1914 (forty years) was 3,013,100*l.* The small Fishery Harbour immediately to the northward has a rubble arm 800 ft. long, and cost 12,000*l.* The engineers were Sir John Coode, Son, and Mathews; and the resident engineers, Sir John Kyle, M.I.C.E., Mr. J. H. Bostock, M.I.C.E., Mr. John Kyle, M.I.C.E. (son of Sir John), and Mr. A. D. Prouse, M.I.C.E.

4,636*l.* per water acre enclosed; 162*l.* per ft. run, average of breakwaters.

Dover Harbour (1898–1909).—Original Admiralty Pier, 1,000 ft. long, was built in 1847–71. Dover Harbour Board then constructed a small commercial harbour of their own in 1890, between the existing Admiralty Pier and a new east pier, of 56 acres net area, afterwards increased to 75 acres by reclaiming the foreshore. The National Harbour was proceeded with in 1898-1909, and comprised the extension of the western breakwater, or old Admiralty Pier, from 1,000 to 3,000 ft., an eastern arm, 3,320 ft., and an isolated breakwater in the middle, 4,200 ft. Total sheltering works, 9,520 ft., or nearly 2 miles long, with two entrances 740 ft. and 650 ft. wide and 42 ft. deep at low water, enclosing 610 acres, exclusive of the 75 acres in the Commercial Harbour. Height of breakwaters from bottom of foundation to parapet top 60 to 126 ft. or an average of 90 ft., with 50 ft. average depth below low-water level, and 50 ft. average thickness, built of concrete blocks weighing 10 to 40 tons each and faced with granite above low-water level. Works include a sea-wall, 3,850 ft. long, to protect base of cliffs, a lesser sea-wall, 700 ft., and reclaiming about 20 acres of land. Engineers, Sir John Coode, Son & Mathews. Contractors, Messrs. S. Pearson & Son, Ltd. National Harbour, 610 acres, cost 4,000,000*l.*, and inside Commercial Harbour, 75 acres, 1,250,000*l.*, or a total of 685 acres and 5,250,000*l.*

National Harbour :	6,557*l.* per water acre enclosed ;	420*l.* per ft. run of breakwater.
Commercial Harbour :	16,666*l.* ,, ,, ,, ;	131*l.* ,, ,, ,,
The two combined :	7,664*l.* ,, ,, ,, ;	551*l.* ,, ,, ,,

(Breakwaters, see pages 1324, 2413.)

Heating.

The fewer the radiators, and the longer the run, the higher the cost per radiator. 15 ft. sup. of radiator should be supplied for every 1,000 cubic feet of space to be heated. Cost includes fittings complete, but is exclusive of boiler-house and buildings.

Heating buildings with boilers, pipes, and radiators . . . . . 1*l.* to 4*l.* per 1,000 f.c.
Low-pressure hot-water heating . . . . . 8*l.* „ 10*l.* per radiator.
Hot-water work inside a building . . . . . 1*s.* 6*d.* per ft. run.

(See also pp. 2104, 2115, 2116.)

Landing Slips.

Landing Slips, Milford Haven (1894).—Formed of Portland cement concrete, with shingle supplied by contractor, and 8 ft. wide × 3 ft. high, on 18-in. foundations. In tidework, and not exceeding 40 yards from shore. Excavation in boulders and shingle on beach. 30*s.* per foot run.

Lighthouses.

Lighthouses. (All of Granite).	Date.	Height of Focal Plane above High Water.	Engineer.	Total Cost.	Cubical Contents.	Cost per Ft. Cub. of Masonry.
		Ft.		£	f.c.	£ *s.* *d.*
Ar'men, Finistre, France	1867-81	94	L. Reynand	37,692	32,400	1 3 3
Bell or Inchcape Rock, Forfarshire	1808-11	117	R. Stevenson	55,820	28 530	1 19 0
Bishop Rock, Scilly Isles	1851-58	110	J. Walker	34,560	35,209	0 19 8
Bishop Rock, strengthening and part reconstruction	1883-87	146	Sir J. N. Douglass	64.889	45,080	1 8 9
Dhu Heartach, West of Scotland	1866-72	145	D. & T. Stevenson	72,584	42,050	1 14 6
Eddystone (third lighthouse), off Plymouth	1756-59	72	J. Smeaton	40,000	13,343	3 0 0
Eddystone (fourth lighthouse)	1878-82	133	Sir J. N. Douglass	59,255	65,198	0 18 2
Fastnet, S.W. Ireland	1899-1904	158	W. Douglass	79.000	62.600	1 5 6
Great Basses, Ceylon	1870-73	108	Sir J .N. Douglass	63,560	47,808	1 6 7
Hanois, Alderney	1862	100	J. Walker, Burges, and Cooper	25,296	24.542	1 0 7
Longships, Land's End	1872	110	Sir J. N. Douglass	43,870	47,610	0 18 5
Minot's Ledge, Boston, Mass.	1855-60	89	General Barnard	62,500	36,322	1 17 2
Skerryvore, Argyllshire	1838-44	158	A. Stevenson	72,200	58,580	1 4 8
Smalls, Bristol Channel	1856-61	114	J. Walker	50.125	46,386	1 1 7
Spectacle Reef, Lake Huron	1870-74	93	General Poe	78,125	42,742	1 16 2
Wolf Rock, Land's End	1862-69	110	J. Walker and Sir J. N. Douglass	62,726	59,070	1 1 3

Lighthouse, Kovilam Point, Northern Province, Ceylon (1914-16).—Tower is supported on reinforced concrete platform over hardwood piles, and built of dressed coral stone in lime mortar, cement rendered externally. Walls 2 ft. 7½ ins. thick above plinth, carried up with a uniform thickness at a batter of 1 in 48. Internal diameter of tower 8 ft. 3 ins., and height from top of foundation to reinforced concrete cap 91 ft. Fourth order light visible for 16 miles, and focal plane 97½ ft. above mean sea level. Cost, exclusive of lantern and ironwork above the cap, 1,730*l.*, or 1*s.* 6*d.* per foot cube.

Lighting.—A complete gasworks plant for a lighthouse costs about 800*l.*
Annual expenditure for gas lighting, where works are installed . . . . 72*l.* per light.
„ „ „ „ where gas is supplied from elsewhere . 32*l.* „

A first-class electric lighthouse installation, including optical apparatus, lantern, dynamos, engines, air compressor, siren, etc., but not buildings, costs about 6,000*l.*

Maintenance.—Average annual cost of maintenance of an English shore lighthouse, with two keepers, is 280*l.*

Average annual cost of maintenance of an English shore lighthouse, with three keepers and a siren fog signal, is 450*l.*

Annual maintenance of a rock lighthouse, with four keepers and an explosive fog signal, is about 800*l.*; and of an electric light station 1,100*l.*

Lightships.—Steel lightships, of average size, with power driven compressed air siren, cost about 16,000*l.*

Annual maintenance of ditto, including periodical overhaul, 1,320*l.*

Usual limits.—Length	80 to 114 ft.
Beam	20 „ 24 „
Depth moulded	13 „ 16 „
Tonnage	155 „ 280 „

(See also page 1356.)

LIGHTING.

Buildings.—Cost of gas and electric lighting inside buildings, including service pipes, stop-cocks, ordinary brackets, pendants, switches, wiring, and other articles, fixed complete, but excluding meters, external gas mains, generators, etc.

	s.	*s.*	
Acetylene	20 to	40	per light.
Coal gas	30 „	50	„
Electric	25 „	50	„

Wiring, including all necessary wire, switches, fuses, lamps, holders, casings, etc., but not electroliers or shades, 15*s.* to 40*s.* per lamp.

Installing artificial lighting per 100 points, including oil-engine, dynamo, wires, lamps, etc., but excluding buildings :

Acetylene.	Petrol Gas.	Electric Light.
100*l.* to 200*l.*	150*l.* to 200*l.*	200*l.* to 300*l.*

Acetylene.—Cost of upkeep consists mainly in the purchase of carbide with occasional renewal of burners. A 25 c.p. burner of ordinary type consumes about 1 f.c. of gas per hour, which demands $\frac{1}{6}$ lb. carbide. With calcium carbide at 15*s.* per cwt. the cost of such a burner works out at $\frac{1}{2}d.$ per hour. Total upkeep of a 100-light installation is between 20*l.* and 30*l.*, according to number of hours lights are used.

Gas Lighting of the Castle, Carlisle (1896).—Supply from City of Carlisle Gas Company's mains through a 600-light dry meter supplied by Company. 4 in., 3 in., and 2 in. cast-iron mains and 1½ in. to ¼ in. galvanised wrought-iron service pipes, underground pipes 3 to 3½ ft. deep. Fittings include 19 governors, 10 valves, 20 stopcocks, 10 dry meters, 572 burners, 10 Wenham lights, 12 Schulke lights, 20 Deimel lights, 18 Welsbach incandescent lights, 12 Sugg's lights, etc. Occupation of barracks, 731 adults and 72 married quarters.

Total, 1,144*l.* 36*s.* per light or point. 28*s.* per head.

Gas Lighting of Strensall Camp, near York.—Completed 1915, in extension of the York Gas Co.'s mains. Cost includes 3-in. external steel mains, 2-in to ¾-in. wrought-iron branches, brick meter-house and meters, siphons, stopcocks, burners, excavation, fixing, etc., complete, in huts and 40 married quarters for about 1,260, total of officers, N.C.O.'s, and men. 376 incandescent burners and 584 flat-flame burners, or 960 lights altogether.

Total, 1,780*l.* 37*s.* per light or point. 28*s.* per head.

Electric Lighting, Army Pay Offices, York.—Feb. 1915. 84 electric lights, mostly of 100 c.p. each, including opal glass shades, wiring, cords, switches, fuses, etc., but not cable into building or any plant, as taken from the Corporation electric main in road. 18 officers and 300 clerks.

Total, 91*l.* 22*s.* per light or point. 6*s.* per head.

Electric Lighting, Army Pay Offices Extension, York.—Aug. 1916. One-storey corrugated iron building, lined with plaster slabs. 136 electric lights, mostly of 100 c.p. and 50 c.p. metal filament lamps, including pendants, opal and holophane glass shades, wiring, cords, 109 switches, fuses, distribution boards, etc. Direct-current supply on the three-wire system taken from the Corporation electric main in adjacent road. 24 officers and 400 clerks.

Total, 137*l.* 20*s.* per light or point. 6*s.* 6*d.* per head.

Railway Coaches.—	£
Cost of fitting a railway coach with electric light	130
„ „ „ „ incandescent gas	34
Annual maintenance of an electric lit railway coach	13
„ „ a gas „ „	7

STREET LIGHTING AT CROYDON.

(1910.)

Type of Lamp.	Number of Lamps.	Distance Apart.	Total Cost.	Average c.p. per Mile.	Cost per c.p. per Annum.
	No.	Yds.	£	c.p.	*d.*
Incandescent gas .	2,137	80	7,062	839	15·86
Incandescent electric	90	66	288	1,373	13·71
Electric arcs . .	428	65	7,212	10,537	11·32

LOCKS.

Including foundations, invert, walls, gates, sills, machinery, lock-keeper's cottage, etc.

Brick and concrete	Per yd.cu. of internal capacity 30*s.* to 50*s.*
Stone and concrete	" " " " 40*s.* " 60*s.*
Canal locks	each 5,000*l.* to 15,000*l.*
River locks	" 15,000*l.* " 30,000*l.*

MARINE PIERS.

Timber and iron piers for seaside places, with creosoted fir or iron screw piles, averaging 40 ft. long and driven up to 15 ft. in sand or shingle, including braces, ties, timber decking, railings, tarring, gates, seats, etc.

Gangway or promenade portion	8*s.* to 12*s.* per ft. sup.
Landing stage or head to pier	10*s.* " 16*s.* "

Military Pier, Tilbury (1896).—450 ft. long by 16 ft. wide, or 7,200 ft. sup. Height above h.w.o.s.t. level, 4 ft., and above l.w.o.s.t. level, 20 ft. Foundation, 3 ft. of mud over 20 ft. of chalk, the distance bored. Substructure of wrought-iron piles, 10 ft. apart, with rod iron braces, on which are fixed wrought-iron girders with intermediate joists supporting timber decking. 18-in. gauge tramway rails, 24 lbs. per yard, and steam crane to lift 10 tons. Total cost, including 500*l.* for hoisting machinery, 3,200*l.*, or 8*s.* 11*d.* per ft. sup.

Batticaloa Jetty, Eastern Province, Ceylon (1900).—Timber pier, 50 ft. long, with return portion 22 ft. long, and 10 ft. wide. Cost, 5*s.* 6*d.* per ft. sup.

Galle Jetty, Southern Province, Ceylon (1916).—Jetty is 162 ft. long × 20 ft. wide, carried on concrete cylinders 6 ft. diameter, spaced 20 ft. centre to centre longitudinally and 14 ft. transversely, end pair being taken down to a depth of 20 ft. Special cylinders, 8 ft. diameter, form seats for two 3-ton cranes. Jetty is roofed for a length of 137 ft. Cost, 4,923*l.*, or 1*l.* 10*s.* per ft. sup. Cost of cylinders sunk, 6 ft. diameter, 3*l.* 19*s.*, and 8 ft. diameter, 5*l.* 3*s.*, per ft. run.

Kalkudah Jetty, Eastern Province, Ceylon (1901).—Jetty of iron, with wooden joists and planking, 165 ft. long × 28 ft. wide, and landings. Piles of H-iron section, 9 ins. × 7 ins., carried through a stratum of sand about 8 ft. into the coral bed of 1 to 2 ft. thick. Cross bracing, walings, fenders, etc. Corrugated iron roof over 122 ft. of length, supported on iron principals carried by H-iron standards, 8 ins. × 6 ins. Water 8 ft. deep at end of pier. Cost, including crane seat, 2,516*l.*, or 11*s.* per ft. sup. of platform area.

Paddiruppu Jetty, Eastern Province, Ceylon (1900).—70 ft. long with a tee head 30 ft. × 6 ft. wide, constructed of Palu timber with brick abutment. Cost, 8*s.* per ft. sup.

MINING.

(See Section XXXVI., page 2153.)

PILE DRIVING

(See page 502.)

RAILWAYS.

Average cost of railways, main lines, 4 ft. 8½ in. gauge, double track, total capital expenditure, including land and all charges :—

	£	£
In England	35,000 to	45,000 per mile.
„ Scotland	25,000 „	35,000 „
„ Ireland (5 ft. 3 in. gauge)	20,000 „	25,000 „
„ Europe	15,000 „	25,000 „
„ India (5 ft. 6 in. and metre gauge)	12,000 „	25,000 „
„ Norway, light railways, 3 ft. 6 in. gauge	5,000 „	10,000 „
„ Queensland „ „ „	7,000 „	15,000 „
„ United States	8,000 „	12,000 „
Single line railways in poor districts of Scotland and Ireland	5,000 „	7,000 „

(See also page 653.)

PROPORTIONATE COST OF PARTS.

Earthworks	24 per cent.
Tunnels	10 „
Permanent way, including ballast	12 „
Sidings	3 „
Junctions and signals	1 „
Bridges and viaducts	9 „
Culverts and drainage	5 „
Stations and buildings	6 „
Construction only	70 „
Land and compensation	15 „
Rolling stock	10 „
Legal expenses	5 „
	100

	£	£
Main lines, construction work and stations only	10,000 to	20,000 per mile.
Light railways „ „ „ „	1,000 „	3,000 „
Permanent way, single line, light construction, 4 ft. 8½ in. gauge, in flat country, cuttings and banks averaging 3 ft., rails 55 lbs. per yard, ballast 15 ins. deep, including stations and permanent works, but excluding land and rolling stock	5,000 „	6,000 „
Ditto, heavy construction, 75-lb. rails, and 24 ins. ballast	6,000 „	8,000 „
Yearly maintenance of permanent way	200 „	250 „
Rolling stock, single line, depends on kind of traffic	700 „	1,000 „
Permanent way, double line, in excess of above figures	50 „	75 per cent.
Rolling stock „ „ „ „	10 „	30 „

Working expenses in England average 50 per cent. of the gross receipts.
„ „ Scotland „ 45 „ „ „
„ „ Ireland „ 40 „ „ „
Average gross receipts, 4*s.* to 6*s.* per train mile.

Railway Footbridges.—Of iron or steel, including foundations, supports, girders, floor, staircases, lattice sides, etc., erected complete, 5 ft. wide.
250*l.* to 350*l.* each, 30 to 40 ft. span, or 15*s.* to 20*s.* per ft. sup.

Railway Viaducts.—On the Great Western Railway there are a great many viaducts, especially in Cornwall, commencing at 50 to 60 ft. deep, and being as much as 90 or 100 ft., and even up to 150 ft., in the centre of the gorge. They are, as a rule, about 60 ft. spans between the piers, which is found to be the economical width. Segmental arches nearly, but not quite, semi-circular, 3 ft. thick at centre, and 3 ft. 9 ins. at the springing. Piers, 7 ft. 6 ins. wide at the top, tapering on every side at 1 in 32. This gives a pressure of about 8 tons per square foot on the masonry. The cost comes out for such a structure, carrying two lines of way, at 1*l.* per yard forward per foot high, measured from ground to rail. That is, for example, a viaduct 200 yards long, and averaging 70 ft. in depth, will cost 14,000*l.*

Avon Viaduct.—On the Midland Railway, and of brick. 720 ft. long, 51 ft. high, and 11 arches of 50 ft. span. Cost, 14,000*l.*, or 19*l.* per ft. run.

Congleton Viaduct.—On the Manchester and Birmingham Railway, and of stone. 3,080 ft. long, or over ½ mile, and 106 ft. high. Cost, 113,000*l.*, or 37*l.* per ft. run.

Dove Viaduct.—On the same line, and of brick. 1,716 ft. long, 88 ft. high, and 23 arches of 63 ft. span. Cost, 54,000*l.*, or 32*l.* per ft. run.

Viaduct over the River Eye, Berwickshire (1889).—Six openings of 50 ft. clear span, 55 ft. 3 ins. between centres of piers, and extreme height above bed of stream 60 ft. Total length of bridge 331 ft. and 15 ft. wide; single track. Abutments of 1 to 7 concrete. Five piers, 45 ft. high and 12 ft. wide at top, with 9-in. and 18-in. brick face and concrete hearting, and 9-in. brick wall up the centre. Superstructure of lattice main girders 8 ft. apart, with cross girders of 10-in. × 5-in. rolled iron joists, 40 lbs. per ft. run. Flooring of 4-in. planking, and the rails carried by longitudinal beams, 14 ins. × 12 ins. Cost, 3,700*l.*, or 11*l.* per ft. run, or 15*s.* per ft. sup.

Viaduct on the Gifford Light Railway, Haddingtonshire (1900).—Four spans of 42 ft. 8 ins., centre to centre of three piers, with 1 to 6 concrete foundations. Height to rail level above the bed of stream is 50 ft., and length over all 194 ft. by 18 ft. wide; single track. Masonry piers, haunches, and abutments, and brick arches over openings. Cost, 2,043*l.*, or 11*l.* per ft. run, or 12*s.* per ft. sup.

New York Elevated Railroad (1872-80).—Steam traction. Two lines of way supported on square wrought-iron lattice-work columns, let into cast-iron base blocks founded on brickwork and concrete, at distances of 37 to 44 ft. apart. Rails of Vignoles or flange pattern, of Bessemer steel, weighing 50 lbs. per yd. run, spiked to cross timber sleepers and guarded by longitudinal timbers. Sharpest curve is 90-ft. radius. Steepest gradient, 1 in 50 for a length of 800 yds. Stations about ¼ mile apart, with platforms 200 ft. long and 13 ft wide. No payment was made for way-leave along the streets, nor for compensation to frontages. Length, 35 miles. Total cost, 2,870,000*l.* Cost per mile of double track :—

	£
Foundations, columns, girders, superstructure, and permanent way	57,696
Railway stations and platforms	12,000
Rolling stock, 5 locomotives and 12 cars	11,680
Per mile of double track	81,376

Tube or Underground Railways.—Electric traction, as constructed in London. Two tracks, 4 ft. 8½ in. gauge, each laid in a separate tunnel, 11 to 12 ft. diameter. 300,000*l.* to 600,000*l.* per mile of double track.

	£	
London (Central), 6 miles. 13 stations	580,000	per mile of double track.
London (Waterloo and City), 1½ miles	340,000	„ „ „

Steam Traction.—Two tracks, 4-ft. 8½-in. gauge, laid in elliptical tunnel, 29 ft. wide and 17 ft. high, of 27-in. brickwork on concrete foundations.

	£	
London (Metropolitan), 1860-84	600,000	per mile of double track.
London (Metropolitan District)	250,000	„ „ „

Both the foregoing have since been converted to electric traction.

Cost of electrification only, exclusive of power stations, sub-stations, rolling stock, etc., 5,000*l.* to 10,000*l.* per mile of double track.

Cost of Indian Railways.—For the year 1895 the capital cost (rupee at 1*s.* 3¼*d.*) of Indian railways was :—

	£	
Standard gauge, 5 ft. 6 ins.	10,095	average cost per mile.
Metre gauge, 3 ft. 3⅜ ins.	4,519	„ „
Special gauges, 2 ft. 6 ins. and 2 ft.	2,093	„ „

London Railway Stations.

Particulars.	Cannon Street, London, South-Eastern Railway.		Charing Cross, London, South-Eastern Railway.	
	Total.	Per F.S.	Total.	Per F.S.
		£ *s.* *d.*		£ *s.* *d.*
Area, exclusive of forecourt	F.S. 152,632	—	F.S. 103,672	—
Cost of substructure	£ 74,962	0 9 10	£ 41,422	0 8 0
Cost of superstructure	£157,262	1 0 7	£111,604	1 1 6
Total costs	£232,224	1 10 5	£153,026	1 9 6
Cost of land	£572,370	3 15 7	£302,808	2 18 5

Charing Cross Station has since been rebuilt with a different type of roof.

Light Railways.

Narrow-gauge Railways.—Approximate cost, including works and rolling stock, cuttings and embankments 2 ft. deep, and ballast 6 ins. to 14 ins. deep.

Gauge.	Weight of Engines exclusive of Tender.	Max. Load per Wheel.	Weight per Yard of each Rail.	Cost per Mile.
Ft. Ins.	Tons.	Tons.	Lbs.	£ £
2 0	6	1	20	1,500 to 2,000
2 6	9	1½	25	2,500 „ 3,000
3 0	12	2	30	3,000 „ 3,500
3 3½	17	3	40	3,500 „ 4,500
3 6	20	3½	50	4,000 „ 5,000

Belgium.—Over 1,000 miles of minor lines have been constructed at a cost, including rolling stock and all outlay, of rather less than 3,000*l.* a mile. These are generally on the metre gauge (3 ft. 3⅜ ins.), and as many of them appear to be laid on the roads the cost of land is very small. They earn about 6*l.* per mile per week, and working expenses are 66 per cent., or 4*l.* per mile per week. Net earnings of 2*l.* per mile per week give a return for over 3 per cent. per annum on the capital.

England.—In England a line on the standard gauge, with no heavy works, would cost twice as much as the Belgian metre gauge railways, or say 6,000*l.* per mile. As regards land, a light railway can seldom do with less than an average width of 1 chain (66 ft.) or 8 acres per mile, and this at 100*l.* per acre comes to 800*l.* per mile. Hence to run the line on a strip of green alongside a road would save a good deal of expense, but this might involve bad gradients and sharp curves and the maximum speed would be reduced. The following are some actual costs :—

Clogher Valley Railway, Ireland.—Length 37 miles, 3 ft. gauge, 45-lb. rail, and runs for the most part on the side of the road. Cost, 3,500*l.* per mile. It earns about 4*l.* per mile per week, but this is mostly absorbed in working expenses.

Wisbech and Upwell Light Railway, Cambridgeshire.—Length 5¾ miles, with 2 miles of sidings, standard gauge, 50-lb. rail, and runs mostly on the edge of the road. Cost, excluding sidings, 7,000*l.* per mile of line. The earnings are about 9*l.*, and the expenses 7*l.* per mile per week.

Agrails.—The Decauville tracks of the new light railways, or 'agrails' as they are called, did admirable service at the front, both in France and Belgium. They can be laid at a cost of 2,500*l.* per mile, and are now being put forward as a rival or as an adjunct to motor lorry traffic, to save the costly wear and tear of roads and to relieve congestion. They can be run on the edge of existing roads, with sidings on the various farms, but are only suitable for comparatively flat districts. The old narrow-gauge railways were too solidly and expensively built, but the agrails are of very light construction and should prove most useful.

River Canalisation, see page 1373.

River Regulation, see page 1371.

Roads.

	£ £	
Main roads, 30 to 40 ft. wide, for heavy traffic, constructed complete, including bottoming, metalling, gravelling, watering, and steam rolling	3,000 to 5,000	per mile.
By-roads, 20 to 30 ft. wide, for light traffic, and ditto ditto ditto	1,000 „ 3,000	„

Maintenance of Roads.

	£ £	
City roads	300 to 400	per mile per annum.
Urban main roads	200 „ 300	„ „
County main roads	100 „ 200	„ „
County by-roads	50 „ 100	„ „
English rural public roads	30 „ 40	„ „
Scotch „ „	20 „ 30	„ „
Irish „ „	10 „ 20	„ „
Inferior country roads	7 „ 15	„ „

	s. d.	s. d.	
Asphalt paving in London	0 6	to 1 0	per y.s. per annum.
Granite sett " "	1 0	" 1 4	" "
Wood-block " "	1 0	" 1 6	" "
Ordinary macadam "	1 0	" 2 0	" "
Tarred macadam "	0 4	" 0 9	" "

Cost per Head.—Cost per head of population for maintenance, repair, and improvements to roads, 6*s.* to 7*s.* per annum.

Damages.—Cost of maintenance has increased about 30 per cent. within recent years owing to traction engine and motor traffic. Damage through traction engines, steam lorries or carts is often assessed at 1*d.* to 2*d.* per ton per mile conveyed over the road. Damage by 'extraordinary traffic' sometimes 2*l.* to 3*l.* per mile.

Supervision.—Cost of supervision, including county surveyor's and clerk's salaries, office expenses, audit of urban accounts, etc., 3 to 6 per cent. on cost of maintenance.

(See also 'Roads,' Section XIV, p. 701.)

ROOFS.

	£ £	
Roofs, light, corrugated iron, 18 to 22 gauge, exclusive of iron or steel trusses	2 to 3	per square.
Roofs for light cheap sheds and buildings, including trusses, corrugated sheeting, gutters, etc., fixed complete	5 " 8	"
Roofs, ordinary steel and iron, including purlins, boarding, gutters, etc.	5 " 10	"
Roofs, railway station platform, with glass	10 " 20	"
" " termini, over 150 ft. span, fixed complete	30 " 45	"
Roof trusses, delivered only, for galv. iron	4*s.*	per foot of span.
" " " for slates	8*s.*	"

Railway Station Roofs.

Railway and Station.	Span of Roof	Covered Area.	Cost per Square of 100 F. S.	Additional for one Gable.
	Feet.	Sq. Yds.	£ s. d.	£ s. d.
London, Brighton and South Coast Railway, Victoria Station	120	—	27 13 4	with gable
London & North-Western Railway, New Lime Street Station	212	—	30 0 0	—
Midland Railway, St. Pancras Station	240	18,822	31 11 0	4 7 0
South-Eastern Railway, Cannon Street Station (1867)	190	13,875	43 10 0	6 0 0
South-Eastern Railway, Charing Cross Station	166	8,888	34 0 0	6 0 0

Victoria Station and Charing Cross Station have since been entirely rebuilt.

SEWAGE WORKS.

Sewage disposal works for cities and towns	3*l.* to 6*l.* per inhabitant.
Bacteria filter-beds with earth embankments and floors, completed with clay puddle, and filled in with clinker or coke breeze 3 ft. deep	5*s.* to 10*s.* per yd. sup.
Ditto with concrete walls, and clinker or coke breeze 4 ft. deep	20*s.* to 30*s.* "

Precipitation and sludge tanks in the north-west of England, to treat a million gallons of sewage daily, built in 1910. From actual tenders received.

	£
Scheme with cast-iron tank plates	7,000
" " brickwork in cement	6,000
" " reinforced concrete	4,500

Strensall Camp Sewage Works, near York (1914–16).—For 1,000 nominal number of troops at 20 gals. per head per day, or 20,000 gals. sewage per day. Lift system, ground being low and sandy. Drainage connections comprised replacing 86 e.c.'s by w.c.'s, 18 additional w.c.'s, or 104 total w.c.'s, 234 gullies, and 80 manholes, with 4-in. and 6-in. stoneware drains gravitating to the ejectors. Brick engine shed, 15 ft. by 14 ft., for air compressor plant with 2 gas engines, and 4 ejector pits, with 12-in. concrete walls lined with $\frac{3}{8}$-in. cast-iron plates, and concrete floors with expanded metal: pits octagonal in plan, 12 ft. internal diameter and 12 ft. average depth,

containing 5 pneumatic ejectors, 25 gallons each, 1 pit holding 2 ejectors. 2½ in. steel compressed air mains from engine-house to ejectors, which raise sewage to the 5-in. and 6-in. cast-iron rising main drains and thence 1,700 yards (about a mile) to the outfall works. Total lift for sewage 19 feet. Outfall works include two reinforced 6-in. concrete tanks, 20 ft. × 10 ft. × 6 ft. each, containing 7,500 gallons, or 15,000 gallons altogether; two brick sludge beds, 20 ft. × 10 ft. × 3 ft. each, with 10-in. screened ashes at bottom and 4-in. agricultural drains on 6-in. concrete floor; two circular filter beds, 46 ft. diameter, with rubble sides and reinforced concrete floors filled with 5-ft. furnace clinker, ½-in. to 4-in. gauge, the liquid sewage being distributed by a revolving sprinkler delivering 84,000 gallons per day. Special filter tiles on floor for aeration, concrete surface channel all round, and effluent then taken by waterways for land irrigation prior to discharging into existing ditch. Cost under five separate contracts:—

	£
Drainage connections, w.c.'s, stoneware drains, and manholes	2,710
Brick engine shed, and four concrete and iron ejector pits	775
Five ejectors, compressors, two gas engines, 2½-in. steel air mains, and 5-in. and 6-in. cast-iron main drains	1,837
Outfall works, including tool house, wire fence, and entrance road	2,035
Preparation of 13 acres of land, waterways and ditches for effluent	493
Total cost	7,850

Cost per head, 7*l.* 17*s.*, or 892*l.* 10*s.* per 1,000 gals. per day treated.

Steam Excavating.

The 'Ruston Crane Navvy' is made in five standard sizes with bucket capacities varying from ⅝ to 4 cubic yards capacity and weighing from 16 to 120 tons net, and will do the work of from 30 to 200 men. The cost may be reckoned from 2*d.* to 6*d.* per yard cube; the harder the material the greater the saving. A medium size machine fitted with a 2¾ cubic yard bucket will readily excavate and load into wagons 800 to 1,000 tons of ironstone or stiff clay per day of 8 hours at a pre-war cost of 2*d.* per cubic yard, or 3*d.* including interest, depreciation and repairs. The following can be reckoned upon as a fair average output under ordinarily good working conditions in a day of 8 hours:

Machine with	⅝	cubic yard bucket	200	in medium clay	to 450 in sand
,,	1½	,, ,,	300	,, boulder clay	,, 800 ,,
,,	2	,, ,,	400	,, well-blasted rock	,, 1,000 ,,
,,	2¾	,, ,,	500	,, ,,	,, 1,500 ,,
,,	4	,, ,,	800	,, ,,	,, 2,500 ,,

A 'Wilson' excavator will dig 400 to 630 yards cube per working day, at a rate of 1*d.* to 6*d.* per yard delivered into wagons, a gang of 14 men being required.

A 'Whitaker' machine will do as much as 720 yards cube per day, but the average is 500 yards at a price of ¾*d.* per yard. The buckets are 1½ yard cube capacity, the crane 10 tons, and the total weight of the machine 32 tons.

French and German endless bucket excavators are particularly useful for digging in light soil or stiff clay, and to a depth of 16 or 20 ft. at a time. The average day's work is 1,200 to 1,500 yards cube at a cost of 5*d.* per yard. They need 35 men in attendance.

Stationary or travelling steam cranes may be employed to work iron or wooden skips, which are like large buckets or boxes respectively, and hold ½, ¾, or 1 yard cube, made to discharge from the crane over a wagon Woodford's patent steel skips are best, self-righting, and with safety catch.

In working grabs, the cost in some cases may be taken as about half the price of hand labour, the saving is greater when under water. When dredging Limerick harbour with a Priestman's grab the average cost of dredging and discharging was 1¾*d.* per ton.

Tanks.

Tanks, cast-iron, 5,000 to 10,000 gals., supplied only.	1*s.* 6*d.* to 2*s.* per f.c.,	3*d.* to 4*d.* per gal.
,, wrot.-iron ,, ,, ,, ,,	2*s.* to 2*s.* 6*d.* ,,	4*d.* ,, 5*d.* ,,
Galvanised wrot.-iron square cisterns, 14 W.G., 50 to 500 gals. capacity, exclusive of fixing	2*s.* 6*d.* to 4*s.* ,,	5*d.* ,, 8*d.* ,,
Add if covered in at top	6*d.* to 1*s.* ,,	1*d.* ,, 2*d.* ,,

Telephones.

Providing and fixing complete, including copper line weighing 150 lbs. per mile, with poles, brackets, insulators, etc.

25*l.* for ¼ mile; 30*l.* for ½ mile; 38*l.* for 1 mile; and beyond, 30*l.* per mile.

Tramways.

Approximate Cost per Mile.	Single Track. £ £	Double Track. £ £
Electric tramways, overhead trolley system, with span wires, including buildings and equipment, but exclusive of generating station for electricity	9,000 to 12,000	15,000 to 20,000
Ditto, ditto, with side brackets or centre poles	7,000 „ 10,000	14,000 „ 18,000
Overhead equipment, including supports :—		
Span wire construction	1,200 „ 1,500	1,600 „ 2,000
Bracket arm construction	900 „ 1,200	1,300 „ 1,700
Permanent way, granite setts :—		
3 ft. 6 in. gauge, 100 lb. rails	4,000 „ 5,000	8,000 „ 9,000
4 ft. 8½ in. gauge, 100 lb. rails	5,000 „ 6,000	9,000 „ 10,000
Conduit system, centre slot, with underground wires, including special work	12,000 „ 15,000	23,000 „ 28,000
Cable tramways, mechanical, with underground cables, etc.	15,000 „ 20,000	25,000 „ 30,000
Horse tramways, with stables, cars, etc.	6,000 „ 9,000	12,000 „ 15,000
Steam tramways, with locomotives and cars	7,000 „ 10,000	13,000 „ 16,000

The cost of line per mile varies according to power station, plant, number of cars, cables, class of paving for permanent way, gauge and weight of tram-rails, etc.

Proportionate Cost of Parts.

	Per cent.
Permanent-way construction	50
Overhead construction	10
Street alterations, etc.	5
Cables, feeder pillars, etc.	10
Power stations, buildings, plant, etc.	8
Tramcars	7
Supervision and incidental expenses	5
Compensation and legal charges	5
	100

Cars per mile of single line	3 to 6
Motor terminal voltage	500 to 550

Trolley vehicle system of electric railless traction :—	£ £
Capital cost per mile of route, double wire	2,000 to 3,000
Good overhead work, per mile	1,200 „ 1,500
Vehicles, cost of each	700 „ 800
Obtaining Parliamentary powers	1,000 „ 5,000
Cost of working per car mile	5*d.* „ 6*d.*
Traffic receipts per car mile	6*d.* „ 11*d.*

Actual Costs of Tramways per Mile.

Parts of Construction.	Edinburgh Cable Conduit.	South London (1903). Electric Conduit.	Electrical Overhead Trolley System. Glasgow.	Huddersfield.	Leeds.	Sunderland.
	£	£	£	£	£	£
Permanent-way construction	14,431	13,460	5,849	5,589	5,600	6,810
Overhead construction	—	—	776	928	1,173	720
Street alterations, etc.	890	134	—	245	—	522
Cables, feeder pillars, etc.	221	2,301	3,068	904	1,000	312
Power stations, buildings, plant, etc.	7,994	3,933	7,188	1,440	3,477	1,543
Tramcars	1,780	4,363	2,573	1,125	1,875	2,240
Supervision and incidental expenses	1,000	915	348	50	—	380
Total cost per mile of single track	26,316	25,106	19,802	10,281	13,125	12,527
Cars per mile of single track	4·1	6·1	5·25	2	2·91	3·4
Length of single track in miles	35	16	130	35	81	21
Motor terminal voltage	—	550	500	500	500	500

	£
Aberdeen, overhead trolley system, 4 ft. 8½ in. gauge, exclusive of generating station, cost per mile of double track	13,400
Darwen, overhead trolley system, 4 ft. gauge, exclusive of power station, total 35,000*l.*, per mile of double track	13,000
Dover, overhead trolley system, 3 ft. 6 in. gauge, exclusive of power station, total 28,000*l.*, per mile of single track	7,000
Manchester (1905), overhead trolley system, current provided by the lighting station, cost per mile of track	12,500
Permanent way, cables, and electrical equipment only, per mile of track	6,575
Portsmouth, overhead trolley system, 4 ft. 7¾ in. 'Scotch' gauge, exclusive of power station, but including taking up old tram lines and concrete foundations and new ditto, cost per mile of double track	21,000
Ditto, including power station and machinery, ditto	23,900
Staffordshire, Bristol, and Coventry, capital expenditure on electric tramways per mile of single track, average	12,000
Wolverhampton, permanent way, electrical equipment, and cables, on the Lorain surface contact system, per mile	8,600

Working Expenses.	Per car mile. *d.*
Aberdeen, electric overhead trolley system, including interest on sinking fund	9·00
Birmingham, 1890–1, electric accumulator	9·90
" " cable traction	6·33
" " horse traction	9·79
" " steam traction	10·99
Dover, overhead trolley system, including interest on sinking fund	8·75
London County Council conduit tramways worked on purchased current, in 1905–6	8·02
Staffordshire, Bristol, and Coventry electric trams	6·30
Modern electric trolley lines generating their own current work	5*d.* to 6*d.*
" " " where current is purchased	6*d.* to 7¼*d.*

The Peak Cable Tramway, Hong-Kong (1888).—Rises 1,207 ft. in a total length of 4,690 ft. Maximum gradient 1 in 2, and minimum 1 in 25. Three intermediate stations, and top and bottom termini. Single track 5 ft. gauge of two 30-lb. rails, and steel sleepers 24 lbs. per yard. Midway crossing place 130 ft. in the clear, above which the track is formed of three rails. Power-house at summit, with two engines, boilers, etc. Steel haulage cable, 3½ in. circumference, weighing 2 lbs. per ft. run. Rolling stock consists of two cars, each holding 45 passengers, and one ascends while the other descends, 9 minutes per trip. Total cost, 20,000*l.*, or at the rate of 22,516*l.* per mile.

(See also page 677.)

Tunnels.

Chab Tunnel (1897–8).—On the Mari-Attock Railway, Punjab, India. Constructed between June, 1897, and July, 1898, through sandstone. Length, 1,312 ft., or about ¼ mile, of which 312 ft. were cut and cover. Average progress per day, 1½ yds. Total cost, 18,690*l.* (equivalent to 74,760*l.* per mile), or 43*l.* per yard run. Maximum altitude above sea-level 1,350 ft., and greatest depth of axis beneath surface 150 ft.

Single track in horseshoe-shaped tunnel, lined with brickwork 5 to 6 bricks thick, or 26 to 31 ins., internal diameter at centre 15 ft., and internal height 19 ft. Backing of round stones found on the local hill slopes.

Tunnel Maintenance.—Cost of reinstating five 3 to 6-ring double-track railway tunnels, Clayton, Cliftonville, Balcombe, Rotherfield or Crowborough, and Mickleham, in chalk, clay, and sand, in the south of England, built between 1837 and 1875 and repaired between 1887 and 1917, including cutting out the inner ring and replacing by a brindle ring in cement, sometimes an additional ring, or part of the tunnel inverted, toe wall built to the footings, parts of the wall re-lined, or spaces behind walls and over arches filled with concrete, etc., the work being carried out day and night during traffic by contract or departmentally, a single line being run at night, and taking various periods of from three to eight years to complete.

11*l.* to 20*l.* per lineal yard.

Other tunnels requiring more extensive repairs, such as shoring, bad portions cut out, and completely rebuilt, use of cement gun, etc.

30*l.* to 250*l.* per lineal yard.

Water Towers.

Water towers, brick, exclusive of tanks and pipes, 1*s.* to 1*s.* 4*d.* per ft. cu. 2*s.* to 5*s.* per gal.
Water supply inside a building, including service pipes, taps, etc. 2*l.* 10*s.* to 3*l.* per tap.

Beverley Water Tower, Yorkshire (1915).—Built of reinforced concrete on the Hennebique system. Two circular tanks, one within the other, the inner one holding 4,000 gals. and the other

Tunnel.	Date.	Time to Construct.	Length.	Progress per Day of 24 Hours.	Total Cost.	Cost per Mile.	Cost per Yard Run.	Maximum Altitude above Sea Level.	Greatest depth of Axis beneath Surface.	Remarks.
	Years.	Years.	Miles.	Yds. Run.	£	£	£	Ft.	Ft.	
Arlberg .	1880–84	4	6⅓	9	1,204,000	190,100	108	4,300	1,600	In Austria. Two lines of track in single tunnel, 25 ft. 3 ins. wide × 21 ft. high, partly lined with masonry.
Mont Cenis	1857–71	14	7½	3	3,000,000	400,000	227	4,248	4,090	France to Italy. One tunnel, 26 ft. 3 ins. wide × 24 ft. 7 ins. high, with double track. Through solid granite, and lined with brick and stone.
Rotherhithe	1904–08	4	1⅓	1⅔	1,250,000	1,041,700	587	—	—	One tube, 30 ft. diameter. Top 7 ft. below bed of Thames. Fitzmaurice, engineer. 4,863 ft. between portals, and 1,400 ft. directly under the river. Max. progress in 1 day 10½ ft.
Severn .	1873–86	13	4½	2	2,000,000	444,400	252	—	100	Width 26 ft. × 25 ft. high. Double track. Water-logged ground and expensive pumping. Hawshaw, Hayter, and Richardson, engineers.
Simplon .	1898–1905	7	2⅓	10	3,120,000	253,000	144	2,313	7,005	Switzerland to Italy. Two single-track tunnels, each 16 ft. 5 ins. wide × 19 ft. 6 ins. high, 56 ft. apart, axis to axis. Enlarged 1911, at a cost of 1,600,000*l.* A. Brandt, engineer.
St. Gothard	1872–82	10	9⅓	6	9,080,000	972,900	553	3,787	6,076	Switzerland to Italy. Two lines of way in a single tunnel, 26 ft. 3 ins. wide × 24 ft. 7 ins. high, in granite, lined with masonry. Louis Favre, engineer.
Thames .	1825–43	18	½	⅓	482,000	1,928,000	1,300	—	—	Between Rotherhithe and Wapping. Brunel, engineer. Delay in completion due to water difficulties. Foot subway, with spiral stairways at each end. Used since 1865 as a tunnel by East London Electric Rly., and lengthened to 1¼ mile.

It is generally cheaper to tunnel than to make a cutting over 50 ft. in depth, but a good deal depends upon whether earth is required

7,200 gals., or a total of 11,200 gals. Extreme diameter 34 ft., and 10 ft. internal depth, with three 6-in. cast-iron outlets, 4-in. sides, 2-in. curved dome top, 4-in. bottom, with beams under, supported on three 12-in. × 12-in. columns or legs, 30 ft. high, with 12-in. × 8-in. braces to latter and half-way up. Total height from ground level to top of tank, 42 ft. 6 ins. Concrete foundations, 2 ft. deep. Cost, including materials and erection, 312*l.*, or 27*l.* 17*s.* per 1,000 gals.

Bramham Moor Water Tower, near Tadcaster, Yorkshire (1916).—Designed by the Trussed Concrete Steel Co. Two united rectangular tanks, 4,000 gals. and 6,000 gals., or a total of 10,000 gals.; two iron ladders inside the tanks for cleaning purposes, and 3-in. cast-iron outlets; 5-in. sides, 3½-in. flat top, 6-in. bottom, with 24-in. × 10-in. beams under, supported on four 10-in. × 10-in. columns or legs, 20 ft. high, with 10-in. × 6-in. braces to latter and half-way up. Foundations 2 ft. 6 ins. deep in addition. Cost, including materials and erection, 298*l.*, or 29*l.* 16*s.* per 1,000 gals.

Curragh Water Tower (1900).—Heavily built, 34 ft. square externally and 94 ft. high above ground. 6 stories. Concrete foundations 6 ft. thick, brick walls in cement 45 ins. thick below to 22 ins. at top. Flat concrete roof, asphalted. Contains two cast-iron tanks, 20,000 gals. each, or 40,000 gals. total. Lower floors used as a fire engine station. Building only, 9,300*l.*; cast-iron tanks and pipes, 1,630*l.*; special fittings, 70*l.* Total, 11,000*l.*

1*s.* 4*d.* per ft. cu. 275*l.* per 1,000 gals

WATERWORKS.

Waterworks, comprising reservoirs, filter beds, mains, valves, hydrants, etc., complete :

	£		
Birmingham	3	per head of population	
Dublin	2	,,	,,
Edinburgh	3½	,,	,,
Glasgow	3	,,	,,
Liverpool	4	,,	,,
Manchester	3	,,	,,
Generally speaking	2*l.* to 4	,,	,,
Small waterworks in Ireland (20 to 25 galls. per head.)	2*l.* to 2½	,,	,,

Batticaloa Water Supply, Eastern Province, Ceylon (1915–16).—Supplies a population of 6,000 with about 20 gals. per head per day. One central well 10 ft. diameter, and two auxiliary wells same diameter, connected by adits 500 ft. long, yielding 180,000 gals. per day. From the central well the water is pumped through a 7-in. steel delivery main to the reservoir, 4 miles distant, from which the town is supplied by gravitation by 2-in. and 1½-in. distributing mains to 75 standpipes. 11¼ miles of pumping and service mains altogether. Pumping machinery in duplicate, 3-in. centrifugal pumps, belt-driven by 18 B.H.P. oil engines, each pump capable of delivering 10,000 gals. per hour against a total head of 60 ft., or a total pumping capacity of 100,000 gals. per diem working 10 hours. Wells lined with 12-in. concrete, roofed with concrete slabs. Storage reservoir of 100,000 gals., with concrete walls faced in brick cement rendered and roofed with corrugated iron on steel trusses. Cost, 9,533*l.*, or 95*l.* per 1,000 gals., or 1*l.* 12*s.* per head of population supplied.

New Magdalen Barracks Water Supply, Oxford (1896).—Supply from City of Oxford Water Company's mains, constant service, Siemens' meter supplied by Company. Davey's lift and force pump worked by steam power, and 6 in. cast-iron mains, 3 in. cast-iron domestic supply mains, and 1½ in., 1 in., ¾ in., and ½ in. galvanised wrought-iron service pipes, 3 to 4½ ft. deep. Reserve tank of 13,000 gals. for fire purposes, 60 ft. high on Armoury roof, 18 fire hydrants, 20 sluice valves, 40 stop valves, 280 bib valves, 50 3-gal. flushing cisterns to w.c.'s, and 6 200-gal. cisterns to latrines. Occupation of barracks, 500 adults, 100 children, and 5 horses. Total cost, including 80*l.* for machinery and erection, 3,500*l.*, or 5*l.* 16*s.* 8*d.* per head of occupation, exclusive of horses. 6*s.* 6*d.* per yd. run of excavation, exclusive of machinery, but inclusive of all fitments.

(See also page 1297.)

IMPOUNDING RESERVOIRS.

Impounding reservoirs for gravitation waterworks to large towns, including excavations, embankments, etc.

200*l.* to 700*l.* per million gallons storage.

	£		
Arnfield, for Manchester waterworks	432	per million gals. storage.	
Crowden ,, ,,	561	,,	,,
Hollingworth ,, ,,	458	,,	,,
Tellowfold ,, ,,	722	,,	,,
Monmouth	912	,,	,,
Rooden, for Oldham	491	,,	,,
Sheffield waterworks, structures only	210	,,	,,
Ditto, including Parliamentary expenses, payments for compensation, etc.	485	,,	,,
Swansea	550	,,	,,
Swinshaw, for Ashton-under-Lyne and Stalybridge	405	,,	,,
Walshaw Dean, for Halifax	469	,,	,,

Scraping Water Mains.

Various Towns.—Actual cost by pipe scraper driven by water pressure and supplied by Glenfield & Kennedy, Ltd., Kilmarnock:—

Year.	Place.	Diam. of Main.	Length of Main.	Total Cost.	Cost per Mile.	Cost per Yd. Run.	Obstructions removed, other than corrosion.	Gain in Delivery after Scraping.
		Ins.	Miles. yds.	£	£ s. d.	s. d.		Per cent.
1880	Bradford	18	4 1,100	634	137 1 7	1 $6\frac{3}{4}$	Stones, lead, crowbar, etc.	56
1883	Whitehaven	11	3 1,223	516	81 19 5	$11\frac{1}{2}$	Mussels, stones, and lead	28
1885		13	2 1,056					
1887	Omagh	6	2 792	53	21 12 8	3	Lead and defective castings	300
1887	Roubaix	24	4 1,162	425	91 3 11	1 $0\frac{1}{2}$	Calcareous matter	—
1890	Dumfries	8	4 0	113	22 12 0	3	Stones	—
		9	1 0					
1891	Lanark	7	6 880	75	11 10 9	$1\frac{1}{2}$	Lead, wood, and stones	34
1891	Newport	5†	0 75	8	187 14 8	2 $1\frac{1}{2}$	†High-pressure hydraulic main	—
1892	Burntisland	8	3 1,320	252	67 4 0	$9\frac{1}{2}$	Lead, wood, and stones	43
1894	Waterford	13	8 0	212	26 10 0	$3\frac{1}{2}$	Broken pipe, rope	40
1895	Cupar-Fife	7	3 880	67	19 2 10	$2\frac{1}{2}$	Broken pipe, rabbit	52
1895	Merthyr-Tydvil	12	6 770	178	27 13 0	$3\frac{3}{4}$	Broken pipe, lead, and stones	82
1896		14	5 617	318	59 8 8	8	About 400 stones	30
1897	Alfreton	7	4 0	57	14 5 0	2	Pieces of pipe and stones	30
1897	Cumnock	5	1 880	52	25 15 4	$3\frac{1}{2}$	Bad joints, stones, etc.	50
		6	0 912					
1898	Kirriemuir	6	6 0	78	13 0 0	$1\frac{3}{4}$	Bad joints	75
1899	Dunfermline	12	14 0	270	19 5 8	$2\frac{1}{4}$	Lead and stones	30
1899	Plymouth	24	1 880	300	200 0 0	2 $3\frac{1}{4}$	—	—
1899	Tarapaca, South America	5	.	714	12 15 0	$1\frac{3}{4}$	Chisel and piece of metal	27
		7	56 0				Stones and metal	27
		9					30 tons of incrustation	22
1900	Innerleithen	6	0 1,300	60	81 4 7	11	Stones and piece of wood	60
1900	Pontypridd Water Works	9	4 880	277	23 1 8	$3\frac{1}{2}$	Stones, 36 lbs. lead, cast iron.	Gain of 100 ft. head.
		10	4 880				Piece of wood, gate hinge	
		12	3 0				Steel bar and a bolt	
1900	Cockermouth	15	7 880	470	62 13 4	$8\frac{1}{2}$	Stones and 3 tons corrosion	99
1900	Mossel Bay, South Africa	4	8 1,170	785	36 4 8	5	Lead, yarn, and metal	88
		$4\frac{1}{2}$	1 0					
		5	12 0					44
1902	Pelotas, Brazil	12	9 830	450	47 10 2	$6\frac{1}{2}$	Large stones, etc.	

Curragh Old Waterworks Pumping Station.—Different dates, 1859, 1907, 1915, and 1921. Includes concrete reservoir, corrugated iron fence, brick engine house, boiler house, chimney shaft, workshop, coal yard, engineer's cottage, and new corrugated iron engine shed, engineer's hut, concrete tanks, old and new wells with bored Artesian tubes, 112 ft. and 276 ft. total depths respectively, barbed wire fencing, water-main connections, and 1,550*l.* worth of machinery, complete . . . . . 9,550*l.* total cost.

13½-in. Artesian bored tube well (1907), including boring 52 ft. deep sunk in sand and gravel from the bottom of existing dug well which is 8½ ft. diameter and 59 ft. deep . . . . . 3*l.* 5*s.* per ft. in depth.

Ditto including men's time, fixing plant, testing, and carriage, and hire of compressor . . . . . 7*l.* 10*s.* ditto.

(The cost of this Artesian well is included in the 9,550*l.* total.)

Curragh Old Waterworks Reservoir (1887–93). In connection with pumping station. Uncovered, with puddle clay embankments, stone-lined. Steel fence all round. Size, 320 ft. × 260 ft. × 6 ft. deep, and holds 3,100,000 gals. Total, 2,760*l.* 1½*d.* per foot cube. Reservoir now disused . . . . . 18*s.* per 1,000 gals.

Selby Waterworks Reservoir (1908). 800,000 gals. 12-in. concrete floor, brick walls, 50½ ins. thick at base and 22½ ins. at top, 6-in. concrete roof in arches of 7 ft. span. Total, 4,800*l.* . . . . . 6*l.* per 1,000 gals.

In the London Metropolitan area—

Cost of pumping averages 43 per cent. of the entire maintenance expenditure.
Cost of pumping alone averages 50*s.* per million gallons.
Repairs and renewals of water-mains and pipes, 34*s.* per million gallons.
Maintenance of water-mains or pipe-way, 24*l.* per mile.
Cost of filtration, 7*s.* 5*d.* per million gallons.

Assuan Dam (1902–12).—Built for irrigation purposes at the head of the first cataract of the Nile, about 600 miles above Cairo. The original dam was of granite rubble masonry founded on a similar rock, which has dykes of softer igneous material. It was 1½ miles long, 100 ft. thick at base, with a maximum height from its foundation of 130 ft. The greatest difference of level of water above and below dam is 67 ft. Dam of local granite in Portland cement, and total weight of masonry is over a million tons. 180 sluice openings, closed by steel gates. When full the reservoir affects the depth of river for 140 miles above dam. Navigation is provided by a ladder of five locks, each 260 ft. long and 32 ft. wide. First dam was finished in 1902, and held 220,000 million gallons, at a cost of 2,500,000*l.*, or 11*l.* 7*s.* 3*d.* per million gallons. Engineer, Sir Wm. Willcocks, and contractor, Sir John Aird.

Between 1907 and 1912 the dam was raised 26 ft., and also thickened by 16 ft. on the downstream side, so as to contain an extra 310,000 million gallons, at a cost of 1,500,000*l.*, or 4*l.* 16*s.* 9*d.* per additional million gallons. Sir Benjamin Baker, consulting engineer.

Total capacity, 530,000 million gallons, and total cost, 4,000,000*l.*, or 7*l.* 10*s.* 7*d.* per million gallons as finally completed.

Scraping Water Mains.

Ayr.—Scraping 14-in. and 16-in. cast-iron water mains, 14½ miles long, at Ayr, between Loch Findas and the service reservoir at Dairymple, in 1915. Pipes laid 28 years before, but incrustation reduced capacity by 30 per cent. Scraper weighed 3 cwts., and was driven by a pressure of 15 ft. head of water. When this pressure was unobtainable the instrument was pulled through by a chain. Pipes were divided into sections with inspection boxes, and each section was done twice, the scraper travelling at the rate of 2 miles an hour. Capacity of mains was at once increased by 37 per cent.

For 14-in. pipes the scraping alone cost 13*l.* 8*s.* per mile, or 2*d.* per yd. run.
„ 16-in. „ „ „ 12*l.* „ „ 1⅞*d.* „
„ 14-in. pipes the total cost was 34*l.* 5*s.* „ „ 4¾*d.* „
„ 16-in. „ „ „ 46*l.* 10*s.* „ „ 6½*d.* „

Srcaping is necessary every 3 years, owing to rapid reincrustation.

SECTION XLIII

LEGAL NOTES FOR ENGINEERS

Contributed by W. Valentine Ball, O.B.E., M.A., of the North-Eastern Circuit, Barrister-at-Law.

Author of 'The Law Affecting Engineers' (Constable & Co.); 'The National Form of Building Contract' (published by The Local Government Journal), and Joint Editor of 'Emden's Building Contracts,' 4th Edition (Butterworth & Co.)

SECTION XLIII

LEGAL NOTES FOR ENGINEERS.*

(Contributed by W. Valentine Ball, O.B.E., M A., Barrister-at-Law.)

(1) Legal Status of an Engineer. (2) Fees. (3) Employment of an Engineer. (i.) *Generally*; (ii.) *Employment Abroad*; (iii.) *Wrongful Dismissal*; (iv.) *The Restrictive Covenant*; (v.) *Engineers and Compensation for Accidents*; (vi.) *Engineers and the National Insurance Act*; (vii.) *Effect of War on Contracts.* (4) Secret Commissions. (5) Disclosure of Secrets. (6) Rights of an Engineer to the Inventions of a Servant. (7) The Engineer as Witness. (i.) *Generally*; (ii.) *Arrangements as to Fees*; (iii.) *Evidence before Parliamentary Committees.* (8) Liability for Negligence. (9) Rights, Powers, and Duties of an Engineer under a Contract for Works. (i.) *Generally*; (ii.) *Specifications*; (iii.) *Plans and Drawings*; (iv.) *Extras*; (v.) *Certificates*; (vi.) *Penalties and Bonuses*; (vii.) *Defects, Repairs, and Maintenance*; (viii.) *Subcontractors and Specialists*; (ix.) *Whether the Employer's Engineer can act as Arbitrator in Relation to Disputes Arising under a Contract.* (10) The Engineer as Arbitrator. (i.) *Generally*; (ii.) *Who may be Arbitrator*; (iii.) *Proceedings before the Arbitrator*; (iv.) *The Award*; (v.) *Time for Making the Award*; (vi.) *The Fees of an Arbitrator*; (vii.) *Stating a Case for the Opinion of the Court*; (viii.) *Costs of a Reference.* (11) Notes on Sale and Purchase of Machinery. (12) Relief when Contract Difficult to Perform because of the War.

(1) LEGAL STATUS OF AN ENGINEER.

Any person may describe himself or practise as an engineer, as the word engineer is not a term of art in the legal sense. Although the Institution of Civil Engineers may make rules of professional etiquette to be observed by its members, compliance with such rules will not be enforced in a court of law, save in so far as they involve a restatement of the ordinary law. For instance a rule which states that no consulting engineer shall advertise could not be enforced, whereas infringement of a rule that 'he shall not pay by commission or otherwise anyone who introduces clients' might offend against the common law (*Panama Telegraph Co.* v. *India Rubber Co.* (1875) L. R. 10 Ch. 515) or against the Secret Commissions Act.

(2) FEES.

If an engineer is consulted, there is an implied contract to pay him reasonable remuneration (*Manson* v. *Baillie* (1855) 2 Mac. H. L. Cas. 80). It is more satisfactory, however, to provide for payment of fees beforehand. In the case of a contract to design and supervise erection of works it is well to provide for payment of $\frac{1}{3}$ on signing the contract, $\frac{1}{3}$ when half the contract price has been paid to the contractor, and $\frac{1}{3}$ when the contractor has been fully paid. Provision should also be made for (1) payment for plans and drawings in case the works are abandoned; (2) travelling and hotel expenses. There is, of course, no fixed scale of remuneration for the engineer, but in deciding what is a reasonable charge, the Court would have regard to (i.) the standing of the engineer; (ii.) the nature and extent of the work undertaken and carried out. It is no answer to a claim for fees (*a*) that a particular undertaking has proved to be a failure if the failure was not due to any fault of the engineer—as where, for instance, an engineer is employed merely to *supervise* the erection of a dam which bursts on completion; or where an engineer is employed to draw plans for a newly invented machine which fails to work (*aliter* if the employer was relying on the engineer's skill and judgment: *Duncan* v. *Blundell* (1820) 3 Stark. N.P. 6); (*b*) that the work in question is not completed, if the failure to complete is not due to the engineer. Where an engineer is to be paid on completion and the work is abandoned before the time, the engineer is entitled to what is due for services rendered, and to what he has lost by not being allowed to complete the contract (*Horton* v. *Hemsley* (1908) *Times*, February 19).

* See also 'Legal Points for Road Engineers,' p. 704.

(3) EMPLOYMENT OF AN ENGINEER.

(i.) **Generally.**—Where an engineer is to be employed for more than a year certain, the agreement must be in writing; and this is so, even if the employment is terminable at any time by six months' notice on either side (*Hanau* v. *Ehrlich* (1912), A.C. 39). The document must set forth all the terms. It is safer, however, to have the terms of an agreement always put into writing. Special care should be taken to (*a*) specify the times when the salary is to be paid; (*b*) provide for the contingency of illness, as illness does not necessarily determine the contract, nor will it justify dismissal without regular notice, unless the employee is so smitten with disease that he can never be expected to work again (*Cuckson* v. *Stones* (1858) 1 E. & E. 248); (*c*) provide for the notice which may be given on either side to determine the contract. If nothing is specified in the agreement, an engineer employed at a yearly salary is entitled to a year's notice (*Buckingham* v. *Surrey and Hants Canal Co.* (1882) 46 L. T. 885). An engineer wrongfully quitting his employment without notice forfeits the salary due for the part of the current year which he has served. The fact that a contract of employment for an indefinite period contains no express term as to notice to be given for its determination does not exclude the implication that such a notice is required (*Payzu* v. *Hannaford* 34 T. L. R. 442). The suspension of servant from his duties which prevents his earning his commission may amount to a wrongful dismissal (*Rubel* v. *Vos* 34 T. L. R. 171). Dismissal without notice is only justifiable in a case of gross misconduct. If the 'employer' is a company or a municipal corporation or other local authority it is safer to insist that the contract be under seal. The Public Health Act, 1875, s. 174 (1) provides that every contract made by an urban authority whereof the value or amount exceeds 50*l.* shall be in writing and sealed with the common seal of such authority. A surveyor who prepared plans for a local board under a verbal contract was held entitled to recover nothing (*Hunt* v. *Wimbledon Local Board* (1878) L. R. 4 C. D. D. 48). Close examination of a contract between an engineer and a local authority may, however, show that it is not within this section (see *Douglass* v. *Rhyl U.D.C.* (1913) 2 Ch. 407). Where the engineer is in the employment of a local authority he must have no interest in any contract into which that body enters (see *Melliss* v. *Shirley Local Board* (1885) L. R. 14 Q.B.D. 911). An attempt was recently made to raise the question whether a consulting engineer is liable to pay excess profits duty under s. 39 of the Finance Act, 1915, but the Court of Chancery refused to decide the point, leaving it to the King's Bench Division (*Smeeton* v. *Attorney-General* 35 T. L. R. 706).

(ii.) **Employment Abroad.**—Where an engineer is about to accept employment abroad, he should be careful to see that provision is made for the payment of travelling and other expenses. No agreement to pay travelling expenses would be implied from an undertaking, say, to employ an engineer at a salary of 1,000*l.* a year at Malacca as from January 1, 1913. It is also well to provide in the agreement that any disputes which may arise shall be determined either by arbitration or according to English law.

(iii.) **Wrongful Dismissal.**—If an engineer is wrongfully dismissed, it is his duty to reduce the damages as far as possible by taking other employment if he can procure it (see *Storey* v. *Fulham Steel Works* (1908) 23 T. L. R. 306). The damages are then ascertained by subtracting what he has earned from what he would have earned.

(iv.) **The Restrictive Covenant.**—When employing an assistant, an engineer may find it necessary to bind him not to set up close by in competition. A restrictive covenant is legal, if it is not too wide; it must be only what is reasonably necessary for the protection of the parties. A covenant to prevent a dentist practising within 200 miles of York was held to be too wide (*Horner* v. *Graves*, 7 Bing. 735). On the other hand, a covenant which bound a canvasser not to enter an employment 'within twenty-five miles of London where the plaintiffs carry on business' was held by the House of Lords to be unreasonable (*Provident Clothing and Supply Co.* v. *Mason* (1913) 29 T. L. R. 727). Care should be taken not to make the restriction perpetual unless that is absolutely necessary, for the Court criticises a perpetual covenant more closely (*Eastes* v. *Russ* (1915) 30 T. L. R. 237). In a recent case the validity of a covenant affecting a man who was employed as works engineer at a bottleworks was considered (*Forsters* v. *Suggett* 35 T. L. R. 87).

(v.) **Engineers and Compensation for Accidents.**—An engineer whose remuneration (e.g. money, board and lodging, etc.) amounts to less than 250*l.* in the service of an employer is probably entitled to the benefits of the Workmen's Compensation Act, 1906.

(vi.) **Engineers and the National Insurance Act.**—A nice question may arise as to whether, say, a station engineer must be treated as an employed contributor within the meaning of the National Insurance Act, 1911. That act covers employment in any contract of service subject to the proviso that persons earning more than 160*l.** otherwise than in manual labour need not be insured. It is submitted that the station engineer earning less than 160*l.* must be insured, but that the consulting engineer who receives an annual fee of 100*l.* for advising a firm or company need not be insured. His is a contract not 'of service' but 'for services'—a distinction which has been drawn in the Court of Appeal.

* By the National Health Insurance Act, 1919, now raised to 250*l.*

(vii.) **Effect of War on Contracts.**—Contracts entered into during the war, between British citizens and the citizens of States at war with Great Britain, were illegal and could not be enforced, unless a licence to trade was granted to one of the belligerents. Subject, however, to certain exceptions, contracts entered into by the citizens of one belligerent State with citizens of another belligerent State before the outbreak of hostilities between their respective states are not dissolved by the outbreak of war but suspended until the war is over. During suspension no performance of the contract is permitted, nor will any action on it be entertained in English Courts, even though the cause of action arose before the war. But the war being now over the mutual obligations of performance and the rights of action revive. The exceptions are (*a*) Contracts entered into before the outbreak of hostilities which will inure to the aid of the enemy or which involve any dealing with the enemy (see *Furtado* v. *Rogers*, 3 Bos. & P. 91); and (*b*) Contracts entered into before the outbreak of hostilities which from their nature cannot be merely suspended (*Griswold* v. *Waddington* (1818) 16 Johnson's Rep. 438).

(4) SECRET COMMISSIONS.

The receipt of a secret commission or a bribe by an engineer would clearly justify his dismissal (*Boston Deep Sea Fishing Co.* v. *Ansell* (1888) 39 Ch. D. 339). In such a case there is a presumption that he was influenced, against his employers' interest, by the bribe (see *Hovenden* v. *Millhoff* (1900) 83 L. T. 11).

(5) DISCLOSURE OF SECRETS.

An engineer may be employed to do work of a confidential nature for others; or he may have to employ workmen to do confidential work for him (e.g. by employing a workman to make a model of a new and patentable machine). The law implies an agreement by the servant to keep his master's secrets, and he may be restrained by injunction from disclosing them (*Alperton Rubber Co.* v. *Manning and Others* (1917) 116 L. T. 499; 33 T. L. R. 205).

(6) RIGHTS OF AN ENGINEER TO THE INVENTIONS OF A SERVANT.

If a servant invents a machine in his employer's time and even when using his employer's materials, the invention does not become the property of the employer so as to prevent the servant taking out a patent for it (*Heald's Case*, 8 R. P. C. 430). But if the servant were to steal an idea and endeavour to patent it either before or after the termination of the service, the employer could oppose the grant of a patent in respect of it (*Thwaites' Application*, 9 R. P. C. 515). And if the servant obtains a grant of a patent in respect of the invention, he can only hold it as trustee for his employers (*British Reinforced Concrete Engineering Co.* v. *Lind* (1917) 33 T. L. R. 170). The engineer when employing a servant should take care to provide, by the agreement, that the inventions of the servant shall belong to him; but when himself entering into a contract of service he should be careful to sign nothing which will abrogate his rights.

(7) THE ENGINEER AS WITNESS.

(i.) **Generally.**—As the engineer frequently comes into contact with the law and the lawyers in the capacity of a *witness*, a few notes of a practical character on the duties of a witness may be found useful.

When invited to give evidence as an expert the engineer should: (*a*) arrange for a qualifying fee to be paid in any event; (*b*) examine the plans and documents, and, if necessary, obtain a view of the *locus in quo* before consenting to give evidence; (*c*) warn the parties consulting him of all the difficulties which are manifest to him; (*d*) ascertain, if possible, the contentions which are going to be put forward by the other side, and make himself familiar with any views which they may have published upon the matters in dispute. Having consented to give evidence, the engineer should (*a*) be ready to satisfy the lawyers with regard to any technical point which may be raised in consultation; (*b*) listen to the arguments and evidence in Court, and be prepared to deal with any points made by witnesses on the other side; (*c*) bring with him any entries in his diary or any notes which he may have made *at the time* with reference to the matters in dispute, for he may use such notes to refresh his memory. Thus, if an engineer has to report as to the condition of a structure, he may use in the witness box the notes which he made on the spot. But he could not use a copy of such notes unless he was prepared to produce the original; (*d*) make and bring to court a plan or model of the structure or machine under discussion, as this will save much wordy explanation; (*e*) search in libraries and in the published proceedings of the various institutions for any books and papers dealing with the matters in hand—especially any papers written by himself, in order that he may not be confronted with an adverse opinion given on a former occasion. A witness should bear in mind that it is his duty to state facts and express opinions, not to advocate the cause. As soon as he appears to be taking a biassed view or attempting to fight the case it is more than likely that the tribunal will pay little heed to his evidence. A candid answer to an awkward question is often less dangerous than a long and evasive statement. In *Crosfield and Sons, Ltd.* v. *Techno-Chemical Laboratories Ltd.* (1913) 29 T. L. R. 378 Neville, J., expressed some views as to the function of an expert witness which may be thus summarised:—

(*a*) It is not competent in any action for witnesses to express their opinion upon any of the issues, whether of law or fact, which the Court or a jury has to determine.

(*b*) In patent cases, expert evidence is often necessary (i) to explain words or terms of science or art, or to inform the Court in case the import of a word in a document to be construed differs from its popular meaning; (ii) to instruct the Court in the laws of science; (iii) to describe the state of public knowledge at the date of the patent. 'It is rare,' added his lordship, 'to find any substantial difference of opinion between eminent experts upon matters of science whenever it is possible to dissociate the question from immediate connection with the issues in the action.'

(ii.) **Arrangements as to Fees.**—On being *subpœnaed* one is bound to attend as a witness provided sufficient conduct money is paid with the subpœna. Failure to attend might lead to an action for damages, while in the County Court the judge has power to fine a witness for non-attendance. A witness may refuse to give evidence until his expenses have been paid (*Newton* v. *Harland* (1840) 1 M. & G. 956). It should be noticed that the person liable to pay the fees is the party to the litigation, not the solicitor, unless he has expressly made himself liable (*Lee* v. *Everest* (1857) 26 L. J. Ex. 334). In order to save trouble it is best to arrange for and if possible secure payment of fees in advance. The fees 'allowed on taxation,' that is to say, the fees which an unsuccessful litigant will be ordered to pay in respect of witnesses called by the other side, are very small, but the party calling the witness will have to pay his agreed fee whatever it is. Where a case is tried at assizes in the town where the engineer lives or in London (when the engineer lives in London), the fee allowed is 1*l.* 1*s.* *per diem*, or where the engineer lives away from the town 1*l.* 1*s.* to 3*l.* 3*s.* But the taxing masters may also allow a qualifying fee of so much a day varying with the magnitude of the case. In 1875 a fee of 7*l.* 7*s.* was not considered excessive payment to a scientific witness. It is probable that a larger sum would be allowed at the present day. In addition he is allowed the travelling expenses reasonably and actually paid. In County Courts the fee allowed for qualifying to give evidence on Scale B is 1*l.* 1*s.* to 3*l.* 3*s.*; on Scale C, 1*l.* 1*s.* to 5*l.* 5*s.*; for attending Court on trial (*per diem*), Scale B, 1*l.* 1*s.* to 2*l.* 2*s.*; Scale C, 1*l.* 1*s.* to 3*l.* 3*s.*

The above scales were fixed before the war, and have not been altered. So far as they can the taxing masters will probably grant the maximum owing to high prices.

(iii.) **Evidence before Parliamentary Committees.**—When an engineer is summoned to appear as a witness before a committee of either House of Parliament he looks for his fees to the party who summons him—whether he is the promoter or an opponent. According to May's 'Parliamentary Practice' (1906) p. 434, an engineer summoned as a witness before a committee should report himself to the committee clerk on his arrival in London, or he will not be allowed his expenses for residence prior to the day of making his report; 3*l.* 3*s.* a day is the parliamentary allowance, but of course as between the engineer and the party summoning him the *quantum* of the fee is a matter of agreement.

(8) LIABILITY FOR NEGLIGENCE.

The liability of an engineer for negligence is similar to that of any other professional man. To render him liable it is not enough that there has been a less degree of skill than some other professional man might have shown. A fair average degree of skill is all that can be insisted upon (*Lamphier* v. *Phipos* (1838) 8 Car. & P. 475). If an engineer were so careless in the preparation of a tender that the cost of the works was grossly underestimated, he would probably be liable to pay damages, and he certainly could not recover his fees (*Moneypenny* v. *Hartland* (1826) 2 C. & P. 379). An engineer should be acquainted with any local bye-laws appertaining to the work in hand (*Monks* v. *Dillon* (1884) 12 L. R. Ir. 321). On the principle of *respondeat superior*, an engineer is responsible for the acts or defaults of assistants employed by him (*Mackersy* v. *Ramsays* (1842) 9 C. & F. 818). The question 'To whom is the engineer liable for negligence?' depends upon the conditions of employment. If he is engineer in relation to a large contract, he is not liable for anything done by him in his capacity as arbitrator between the employer and the contractor; but he is liable for damage resulting from negligence in supervision, e.g., failure to examine and test work before it is hidden from view (*Leicester Guardians* v. *Trollope* (1911) 75 J. P. 197). The contractor, however, could not sue the engineer for an error in the specifications on the basis of which he made his tender. Where, however, the 'quantities' are prepared by the engineer, and his fees for their preparation are paid by the contractor, it is conceived that he could be sued for damages resulting from an error in those quantities (*Bolt* v. *Thomas*, 'The Law Affecting Engineers,' p. 58). If an engineer order extras without authority, the contractor may possibly sue him for damages for breach of warranty of authority (*Randall* v. *Trimen* (1856) 18 C.B. 786). The amount of damages recoverable for negligence is to be measured by the loss which the plaintiff has suffered. In *Saunders* v. *Broadstairs Local Board* (1890) 2 H. B. C. 160, two engineers claimed fees for preparing surveys, obtaining tenders, and superintending the execution of a contract for certain drainage works. The board counterclaimed for negligence and were awarded 2,046*l.*, the amount overpaid to the contractor by reason of the negligence of the engineers in over-certifying the quantities; 2,400*l.* estimated cost of doing bad work over again; 240*l.* actual cost of repairs already done to defective work. Damages recovered by a workman against his employer for an accident might also be recovered from the engineer if it were shown that the accident was caused by the engineer's negligence (*Mosdell* v. *Mitchell*, 'Times,' January 20, 1891).

(9) RIGHTS, POWERS, AND DUTIES OF AN ENGINEER UNDER A CONTRACT FOR WORKS.

(i.) **Generally.**—Common forms of contract for large works usually set forth the powers, etc., of the engineer very clearly. The preparation of the contract is generally left to a lawyer, but the engineer should be on his guard against allowing a common printed form to be applied indiscriminately to the construction of works of a special nature. When difficulties arise it may be found that the common form does not provide for their elucidation.

(ii.) **Specifications.**—The contract should contain a clause providing that the employer will not be responsible for any mistakes or inaccuracies in the specifications which form part of the contract. Such a clause will, in the absence of fraud, afford him protection (*Pearson* v. *Dublin Corporation* (1907) A. C. 357). There should also be a clause calling the would-be contractor's attention to the fact that he must make surveys and borings for himself before making his tender. In that case, if unforeseen difficulties are met with the employer will not be responsible (*Thorn* v. *Mayor of London* (1876) L. R. 1 A.C. 120). Again, where a man undertakes to make e.g. sound hydraulic cylinders according to a specification, capable of withstanding a certain pressure, he takes upon himself the risk of the cylinders being able to withstand the named pressure when made according to the specification (*Hydraulic Co.* v. *Spencer* (1886) 2 T. L. R. 554). Carelessness in the preparation of a specification may involve the employer in added expense, for which the engineer may be liable (*Moneypenny* v. *Hartland* (1828) 2 C. & P. 378).

(iii.) **Plans and Drawings.**—These form part of the contract, and may, in the absence of a disclaiming clause, operate as a warranty that dimensions, measurements, etc., are correct. A clause disclaiming responsibility for accuracy should therefore be inserted in the contract. The engineer has no implied authority to alter plans and drawings so as to increase or lessen the burden imposed upon the contractor (*Cooper* v. *Langdon* (1841) 9 M. & W. 60). Delay in supplying the necessary plans and drawings may excuse the contractor from carrying out the work within the contract time (*Roberts* v. *Bury Commissioners* (1869) L. R. 5 C. P. 310). It is for the engineer who prepares them to see that they conform to local bye-laws (*Cubitt* v. *Smith* (1864) 11 L. T. 298). Plans and drawings made for the purpose of carrying out works are the property of the employer—not of the engineer (*Gibbon* v. *Pease* (1905) 1 K.B. 810). As to copyright in plans, see the Copyright Act, 1911, s. 5.

(iv.) **Extras.**—The duty of deciding what are 'extras' within the meaning of the contract is usually entrusted to the engineer. He has no implied authority to order extras (*Cooper* v. *Langdon* (1841) 9 M. & W. 60), although an agreement to work *to the satisfaction* of an engineer has been held to give him implied authority to order extras (*Robertson* v. *Jarvie* (1910) 45 S. L. R. 260). It has been held, however, that where the plaintiffs were employed by an architect (whose functions, for this purpose, correspond to those of an engineer) to supply door handles and door furniture for a building, and shortly before the delivery of the goods he informed the defendants, who were the builders, that the goods were being supplied by the plaintiffs, the defendants who used the goods in the building were liable to pay for them (*Ramsden* v. *Chessum* (1914) 78 J. P. 49). Extras should be authorised in the manner provided by the contract, which usually provides that all extras shall be ordered in writing (*Russell* v. *Sa da Baudeira* (1862) 13 C. B. N. S. 149); but, in the case of a contract with a local authority, which must be under seal, the order for extras need not be under seal (*Williams* v. *Barmouth Urban Council* (1897) 77 L. T. 383). If a written certificate is rendered necessary by the contract, nothing else will suffice; but in a recent case a contractor proceeded with extra work as required by an engineer without any written order. On his claiming payment, an arbitrator found that the engineer was wrong and unreasonable, and that the work and materials required by him were not included in the contract. After much litigation the House of Lords eventually held that this decision was correct (*Brodie* v. *Cardiff Corporation* (1919) 120 L. T. 417). Although the whole scheme of works cannot be altered by virtue of the extra clause (*R.* v. *Peto*, 1 Y. & J. 37) power to *vary* the work will give the engineer authority to substitute one piece of machinery for another of which it is well known to be the mechanical equivalent (*Stevens* v. *Mewes & Davies*, Court of Appeal, June 7, 1910; Emden's 'Building Contracts,' Supplement 1911). The engineer should therefore see that he has power to *vary* the work. The engineer's decision as to what are extras may or may not be subject to revision in accordance with the arbitration clause. So far as the contractor is concerned, the fact that the engineer has given his final certificate (see *sub. tit. Certificates post*) may involve a final decision as to what is and what is not an extra (*Connor* v. *Belfast Water Commissioners* (1871) 5 L. R. Ir. C. L. 55). Power to extend the time for completion is generally given to the engineer. It may be that owing to the action of the Government acting under the Defence of the Realm Acts, the performance of a contract for works becomes illegal during the continuance of the War. In such a case it is conceived that no extension of time by the engineer will avail to keep the contract alive (see *Metropolitan Water Board* v. *Dick, Kerr & Co.* 34 T. L. R. 111).

(v.) **Certificates.**—It is the duty of an engineer in relation to a contract for large works to grant or withhold the certificates upon which the contractor is paid. 'Progress certificates' are given from time to time as the work proceeds. They generally authorise payment to the extent of

80 per cent. upon the contract value of the work done from time to time. The remaining 20 per cent. is kept back usually, as to 15 per cent. until the final certificate is granted and as to 5 per cent. until the end of some stated period after the final certificate. This 20 per cent. is called the retention money (see *West Yorkshire Bank Ltd.* v. *Isherwood Bros.* (1912) 28 T. L. R. 593). The 'final certificate' is granted when the work is finished to the satisfaction of the engineer, and the contractor can sue for nothing until it has been granted (*Wallace* v. *Brandon and Byshottles U.D.C.* (1905) 2 K. B. C. 392). In deciding as to certificates the engineer acts as an arbitrator, and his decisions cannot be called in question (*Wadsworth* v. *Smith* (1871) L. R. 6 Q.B. 322); nor can he be compelled, and is better advised not to give reasons for his decision (*Stevenson* v. *Watson* (1879) L. R. 4 C.P. D. 148). No action lies against him for negligence in relation to certificates (*ib.*) (but see the case of *Goddard* v. *Ferguson*, *infra*). In exercising his discretion he must act as an arbitrator between employer and contractor (*Chambers* v. *Goldthorpe* (1901) 1 K.B. 624). It may, however, be that the decision of the engineer as to a certificate is subject to the arbitration clause, which has been held to be the case in relation to the form of contract approved by the Royal Institute of British Architects (*Robins* v. *Goddard* (1905) 1 K.B. 294). A fraudulent agreement between the employer and the engineer would however affect the validity of a certificate (*Kellett* v. *New Mills U.D.C.* (1900) 2 H. B. C. 330). The certificate of the engineer may be made a condition precedent to the contractor's right of action against the employer. If so an action cannot be maintained unless there has been improper dealing between the engineer and the employer (*Eaglesham* v. *McMaster* (1920) 2 K. B. 169). The statement that an engineer is not liable for negligence in relation to a certificate does not appear to be supported by the case of *Goddard* v. *Ferguson* (referred to by Mr. Saxon Snell in a paper read by him at the Royal Institute of British Architects, April 15, 1912). It was there held that an architect who grants a certificate which is successfully challenged by an employer in an action brought against him by a builder to recover the amount so certified to be due to him, is liable to repay to the employer the costs incurred by him in resisting the builder's claim. The Official Referee held the architect liable on the ground that when acting as agent for the building owner in granting certificates, he must be held responsible for the reasonable and probable consequences of giving a certificate subsequently held to be inaccurate or excessive. Certificates should always be given in writing in a formal manner. No engineer should pass any contract which does not contain a provision to this effect. As to when an engineer is disqualified from granting certificates, see paragraph ix., *infra*. An engineer has no right to delegate the power to grant a certificate to a subordinate, e.g. to the resident engineer (*Freeman & Sons* v. *Middleton Electric Traction Co.*, per Hamilton, J., July 15, 1910; Court of Appeal, January, 1911; Emden's 'Building Contracts,' Supplement, 1911).

(vi.) **Penalties and Bonuses.**—The question whether the contractor must pay penalties or not depends almost entirely upon the engineer. Penalties are imposed if the work is not carried out in accordance with the provisions of the contract as to time. The fact that extras are ordered will excuse the contractor from compliance with the conditions as to time (*Dodd* v. *Churton* (1897) 1 Q.B. 562), but the jurisdiction of the engineer does not extend to deciding this point (*Gallivan* v. *Killarney Urban Council* (1912) 2 Ir. R. 356). To avoid complication, however, it is best to insert a clause in the contract giving the engineer power to extend the time. With regard to the penalty clause generally nice questions sometimes arise as to whether it is capable of enforcement. If it is unreasonable on the ground that the punishment is too severe, the Court may refuse to enforce it; and it is for this reason that the words 'the sums to be regarded as liquidated damages and not as a penalty' are usually inserted after the sum named. The breach of an engineering contract involves damage of so uncertain a nature that the courts will generally treat the sum which the parties themselves have named as liquidated damages. Penalties will not be imposed if (*a*) the delay was caused by the act or default of the employer (*Thornhill* v. *Neats* (1860) 8 C. B. N. S. 831); (*b*) if there is delay in setting out the site or in delivering plans (*Roberts* v. *Bury Improvement Commissioners* (1870) L. R. 5 C. P. 310). The fact that the contractor has been delayed by a strike of his workmen, however, affords no excuse for delay (*Budgett* v. *Rimington & Co.* (1890) 25 Q.B. D. 320), nor, apparently, is the employer to be held liable for the acts of third parties causing delay (*Porter* v. *Tottenham U.C.* (1915) 1 K. B. 776). While a penalty clause is usually optional, it is obligatory in contracts made with certain local authorities (see Public Health Act (1875) s. 174 (2)). A bonus clause is sometimes inserted by virtue of which a contractor is enabled so much extra for expedition. If a contract contains such a clause, and the engineer has power to extend the time, it seems that his power to extend must be exercised not to enable the contractor to earn the bonus but only to avoid penalties (*Ware* v. *Lyttelton Harbour Board* (1882) 1 N. Z. R. 191).

(vii.) **Defects, Repairs, and Maintenance.**—In contracts relating to the erection of machinery clauses should be inserted providing for any defects which appear either before or after the issue of the final certificate. A useful form of this clause will be found in the printed conditions of contract issued by the Institution of Electrical Engineers. Its importance will be recognised when it is pointed out that when it is absent the final certificate of the engineer may possibly bar any further claim by the employer (*Lord Bateman* v. *Thompson* (1875) 2 H. B. C. 25). The time for the remedy of defects should be prolonged as much as possible, inasmuch as the very fact of there being a defects clause impliedly releases the contractor from liability for defects appearing after the stated time (*Sharp* v. *Great Western Railway Co.* (1841) 11 L. J. Ex. 17). The contractor can only be called upon to repair and maintain when compelled to do so by a repairing clause and a maintenance clause. The employer must give notice of want of repair. Mainte-

nance should be provided for in cases where the machinery or work is of a special character which is best known to the contractor. In the absence of any clause relating to defects and maintenance, it does not follow that on payment of the full price the employer thereby waives all claim for damages for work improperly done. It is a question of fact having regard to all the circumstances of the case whether the settlement was final and complete.

(viii.) **Subcontractors and Specialists**.—Most modern contracts involve the employment of subcontractors or specialists. A clause should be inserted in the head contract prohibiting the employment of any subcontractor or specialist unless approved by the engineer. In the absence of such a clause, the contractor might, possibly, farm out portions of the work to all and sundry (*British Waggon Co.* v. *Lea* (1880) 5 Q.B. D. 149). The engineer, apparently, has no implied authority to employ subcontractors (*Cowan* v. *Goderich* (1859) 10 U. C. C. P. 87). It is often well to specify the names of manufacturers of the raw materials which are to be used in the body of the contract. In order to preserve his right to supervise the work of any subcontractor or specialist, the engineer should secure the insertion in the head contract of a clause providing that payments to subcontractors shall be made by the contractor only upon the certificates of the engineer. It is also well to secure the insertion of a clause to the effect that, in the event of the contractor becoming insolvent, the subcontractor or specialist may be paid directly by the employer. All responsibility for delay or negligence on the part of a subcontractor is generally by a special clause, placed upon the contractor (see, generally, *Crittall* v. *L. C. C.* (1910) 75 J. P. 203; *Hampton* v. *Glamorgan County Council* (1916) 115 L. T. R. 426, and the case of *Ramsden* v. *Chessum*, cited, *supra*, s. (9) (v) (i.)).

(ix.) **Whether the Employer's Engineer can act as Arbitrator in Relation to Disputes Arising under a Contract.**—The position of the engineer in relation to a large contract has been rendered very difficult by certain recent decisions of the courts. In theory he is agent for the employer in the preparation of plans and specifications and in the supervision of the work, and he is arbitrator or *quasi* arbitrator between the employer and contractor in granting certificates, approving work done, granting extensions of time, etc. Sometimes he is made sole arbitrator to decide all disputes between the employer and the contractor, and a serious question has arisen in several recent cases as to how far a contractor can be forced to accept his decision whether in the matter of granting certificates, etc., or as arbitrator. In *Jackson* v. *Barry Railway Co.* (1893) 1 Ch. 238, it was held that the fact of the employer's engineer having expressed a view of the matter in dispute hostile to the contractor was not a sufficient justification for refusing to allow him to act as arbitrator in relation to that dispute. The Court of Appeal pointed out that the contractors had agreed to this form of reference, and what they relied on was the professional honour, practice, and intelligence of the engineer. There was nothing in the circumstances of the case to render it improbable that he would not arrive at an honest decision.

In *Ives* v. *Willans* (1894, 2 Ch. 478) the same result was arrived at, although, in giving judgment Lord Justice Davey said: 'No doubt in a sense the engineer will be the judge of his own conduct, and no doubt that is a position which *prima facie* raises some surprise in a judicial mind: but that is the contract of the parties.' As already indicated later decisions appear to have practically altered the law, although the judges always took care to say that *Ives* v. *Willans* is still good law. The result of the recent cases may be thus summarised. A contractor will not be bound to submit to the arbitrament of the employer's engineer (*a*) if the matter in issue is an unseemly personal dispute raising a vindictive feeling between the engineer and the contractor, and the engineer has so strongly expressed his view that it amounts to a prejudgment (*Nuttall* v. *Manchester Corporation* (1893) 8 T. L. R. 513); (*b*) if the nature of the dispute is such that the cross-examination of the engineer is essential (*Freeman* v. *Chester R. D. C.* (1911) 1 K.B. 783); (*c*) if the matter in issue is something outside the original agreement, e.g., a dispute as to whether the engineer and contractor had agreed to vary the original agreement (*Aird* v. *Bristol Corporation* (1913) A. C. 241); (*d*) if the conduct of the engineer himself is practically the only point in dispute (*Blackwell* v. *Derby Corporation* (1909) 75 J. P. 129). Finally, it was held in *Roberts* v. *Hickman* (1913) A. C. 229 that the grant of a certificate by an architect will not be a condition precedent to the builder's right to sue if, by writing letters to the employer, and allowing himself to be influenced by their views, the architect has disqualified himself from acting judicially although guilty of no fraud or improper conduct.

If the method of arbitration provided for in many existing forms of contract is declared to be impossible for any of the above reasons the only alternative is litigation, a method of settling disputes which employers, contractors, and engineers always seem to desire to avoid. What can be done to avoid such a calamity in relation to future contracts? The following courses are open. Insert a clause (*a*) referring all disputes to an arbitrator to be mutually agreed or to be nominated by the president of one of the Institutes (see, e.g., the form approved by the Institution of Electrical Engineers, clause 47); or (*b*) referring disputes to a *named* arbitrator; or (*c*) refer disputes to the president of one of the Institutes whoever he may be. The first of these suggestions appears to offer the best practical solution of the difficulty. The writer, however ventures to make the following suggestion which might possibly work in practice. Frame the arbitration clause so as to leave the decision of every question arising under the contract to the engineer but subject to a proviso that should it appear to the Court on an application to stay any action or proceeding brought in relation to the contract that the engineer is disqualified from acting as arbitrator the matters in dispute will be referred to an engineer to be agreed between

the parties, or failing agreement to be nominated by the president of the Institution of Civil Engineers. Another alternative is suggested by Mr. E. J. Rimmer in his Arbitration Clause in Engineering Contracts' (Constable & Co.). It is that a proviso should be added to the arbitration clause stating that if any action is brought the defendant may either (*a*) have the action stayed or (*b*) have the matter referred to an independent arbitrator appointed in one or other of the manners above suggested.

(10) THE ENGINEER AS ARBITRATOR.

(i.) **Generally.**—Engineers are frequently called upon to act as arbitrators to decide disputes of a technical nature wholly unconnected with any contract in which the engineer has been employed. Arbitrations are conducted in accordance with the provisions of the Arbitration Act, 1889. An arbitrator may be appointed (*a*) by the Court; (*b*) by the terms of the contract itself; or (*c*) by a person nominated for that purpose in the contract, e.g., the president of the Institution of Civil Engineers. As to appointment by the Court, this occasionally takes place when a prolonged scientific enquiry is necessary. A 'referee' of this kind may have power either to wholly dispose of the dispute or make an enquiry and report to the Court, in which latter case the Court itself gives the judgment after considering the report. As references of this kind are rare in practice they will not be further dealt with.

As a rule the engineer finds himself made arbitrator pursuant to the arbitration clause in an agreement. Any dispute arising under any contract may thus be referred, and the parties will as a general rule be bound to proceed to arbitration for the purpose of settling a dispute instead of bringing an action at law. Where a contract contains an arbitration clause, if one party commences an action, the other may apply to the Court to stay the action pending a reference, and the action will generally be stayed, unless there is some good reason for not allowing the arbitration to proceed. For instance, in a recent case a contractor alleged that he had been induced by fraudulent representations as to the nature of the soil to enter into a particular sewerage contract, and brought an action for fraudulent misrepresentation. It was held that such an action ought not to be sent to arbitration (*Monro* v. *Bognor Urban District Council* (1915) 84 L.J. K. B. 1091). (See also par. 9, ix. *supra*.)

(ii.) **Who may be Arbitrator.**—Any person upon whom the parties agree may act as arbitrator. Thus if in contract with a local authority it is specified that the borough engineer shall be arbitrator there is no objection to his so acting, and the contractor can be compelled to accept his award (*Ives* v. *Willans, supra*, 2 Ch. 478). That is the broad rule, but the Court, as has been shown, always has power to refuse to enforce the arbitration clause in a case where it is obvious that the arbitrator ought not to act owing to bias, etc. Frequently the clause provides for the appointment of an arbitrator by each party with power to the arbitrators in case of differences to appoint an umpire. When this is done the umpire and arbitrators generally find it convenient to sit together to decide the case.

(iii.) **Proceedings before the Arbitrator.**—Witnesses must be sworn in the usual way. Due notice must be given to either party of the time when it is proposed to hold the sitting. In a case of great complexity it is well to have a preliminary sitting in order to require the parties to formulate the points in difference between them. By this means the issues may be considerably narrowed. The arbitrator should hear both sides, who may be represented by solicitor or counsel. He must never hold private communication with one party on the subject matter of the reference. He has no power to examine witnesses in the absence of the parties. An arbitrator who takes evidence in the absence of, and without notice to, a tenant, is guilty of legal misconduct, for which his award may be set aside (*In re O'Connor*, 88 L. J. K. B. 1242). It is for the arbitrator to decide every question whether of law or fact. He may, however, consult a solicitor or, for that matter, any other expert on legal points. Indeed the writer was recently concerned in a case in which, with the consent of the parties, the arbitrator had his solicitor sitting by his side. He should take full notes of the evidence, unless, as is frequently the case, the parties agree to have a shorthand note.

(iv.) **The Award.**—If the case is complex, the engineer is well advised to consult his solicitor as to the form of the award. The following are the features of a valid award, which should be in writing. (*a*) *It must not exceed the submission.* Thus if the question submitted was whether the stone used for building a dam was according to specification, the arbitrator would have no power to award that the stone used was better than as specified and that the employer must pay for it. (*b*) *It must extend to all matters in dispute.* If several distinct questions are referred and the arbitrator omits to decide upon any one of them, the whole award is bad. If in the case mentioned he were asked to decide (i.) was the stone as specified; (ii.) was it suitable for the purpose, he would have to decide both questions. (*c*) *It must be certain.* The award must be so framed that its meaning is clear to the parties; but according to a legal maxim, that is certain which is capable of being rendered certain. Thus to award that A. and B. shall pay a debt in the proportion in which A. and B. hold shares in a ship is a sufficiently definite award (*Watson* v. *Watson* (1671)

Sty. 28). (*d*) *It must be final.* The award must peremptorily state the arbitrator's finding. A mere expression of opinion that A. ought to pay B. such sum as C. thinks proper would not be a final award. Finally (*e*) *it must not be impossible, unreasonable, inconsistent,* or *illegal.* An award which directed that one party should do something illegal, e.g. trespass upon the land of another would be invalid.

(v.) **Time for Making an Award.**—In the absence of agreement, an award must be made (*a*) within three months of the date of entering on the reference, or (*b*) within three months after having been called on to act by notice in writing from one of the parties, or (*c*) on or before any later day to which the arbitrator may by writing under his hand extend the time for making the award (Arbitration Act, 1889, Schedule 1 (c)). The power to extend the time is important in the case of a long and complicated reference, but it must be exercised within the period of three months above referred to. Unless the arbitrator extends the time, or the parties agree to allow him to do so, an application must be made to the Court to extend the time ; and such an application may be made whether the time for making the award has expired or not (*ib.*, s. 9).

(vi.) **The Fees of an Arbitrator.**—The arbitrator should name his fee beforehand. It is best fixed at so much *per diem* for the hearing. If no preliminary arrangement is made, he is entitled to charge what is fair and reasonable, and he can keep back his award until the fees are paid (*Ponsford* v. *Swain*, J. & H. 433). When deciding in the award as to costs he should state who is to pay his fees ; but he may insist upon their being paid by the party who takes up the award. He should not reveal his decision until after these formalities have been observed. Sometimes the *quantum* of an arbitrator's fees is left to the decision of a taxing master. On such a taxation, if the evidence goes to show that, in the opinion of persons in the same profession as the arbitrator, that his charges are fair and reasonable, the taxing master must allow them. In *Mason* v. *Lovatt* (1907, 23 T. L. R. 486) a quantity surveyor was allowed to charge 527*l.* 10*s.* for a reference which lasted 22 days, the arbitrator subsequently taking 13 days to consider his opinion. In *Llandrindod Wells Water Co.* v. *Hawksley* (1904, 20 T. L. R. 241) the fees of an umpire and two arbitrators all being engineers were allowed at 476*l.* 12*s.*, in respect of a reference which lasted 2 days. The arbitrator should state how his fees are made up.

(vii.) **Stating a Case for the Opinion of the Court.**—Where a specific question is referred to an arbitrator, and he decides it, the fact that his decision is erroneous in point of law does not make the award bad on its face so as to admit of its being set aside (*In re King and Duveen* (1913) 2 K. B. 32) ; nor will the mere fact that the dispute involves questions of law induce the Court to stay a reference to arbitration (*Rowe* v. *Crossley* (1913) 108 L. T. 11). But where a point of law arises during a reference, the arbitrator, if he does not care to decide it, may state a case for the opinion of the Court (Arbitration Act, 1889, s. 19), or the Court may compel him to state a case (*ib.*). He can also make his award in the form of a special case, leaving it to the Court to decide how the judgment shall be entered.

(viii.) **Costs of a Reference.**—The question of costs should be carefully considered, as the expenses of a reference are often wholly out of proportion to the sum in dispute. In litigation the general rule is ' costs follow the event '—an application of the maxim *væ victis.* Unless the submission contains some special term as to costs, the arbitrator has full power to decide who is to pay them. He may award costs to be taxed ' as between solicitor and client '—which means that the successful party is nearly indemnified—or he may award costs to be taxed as between litigants in the ordinary way. He may also, in his discretion, award a fixed sum for costs (Arbitration Act, 1889, Schedule I. (i)), or he may declare that each party shall pay his own costs. In deciding whether to make a defendant pay costs, the arbitrator should (it is submitted) consider the nature of any offer made before the proceedings were commenced. Thus supposing a contractor claimed 5,000*l.* and the building owner made a firm offer of 4,000*l.* which was refused. After hearing the evidence, the arbitrator awards 4,000*l.* or less. In such a case he would be justified in disallowing the contractor any costs. An arbitrator can only make a successful plaintiff pay costs in exceptional circumstances as when (e.g.) it appears that although successful he should not have prosecuted his claim. It was held, however, in a case arising under the Small Holdings Act, 1908, the arbitrator in the exercise of his powers under that Act had wider powers in the matter of costs than a High Court judge (*Gray* v. *Baron Ashburton*, 115 L. T. R. 729).

(11) NOTES ON SALE AND PURCHASE OF MACHINERY.

The question which most frequently arises on the sale of machinery, motor cars, etc., is what is the warranty of fitness ? Sometimes, of course, there is an express written warranty, but in the absence of that the matter is regulated by section 14 of the Sale of Goods Act, 1893, which provides (in effect) that there is no implied warranty or condition as to the quality or fitness for any particular purpose of goods supplied under a contract of sale, except (1) where the buyer expressly makes known the purpose for which the goods are required so as to show that the buyer relies on the seller's skill or judgment and the goods are of a description which it is in the

course of the seller's business to supply (whether he be the manufacturer or not) there is an implied condition that the goods shall be reasonably fit for such purpose; provided that in the case of the sale of a specified article under its patent or other trade name, there is no implied condition as to its fitness for any particular purpose; (2) where the goods are bought by description from a seller who deals in goods of that description (whether he be the manufacturer or not) there is an implied condition that the goods shall be of merchantable quality; provided that if the buyer has examined the goods there shall be no implied condition as regards defects which such examination ought to have revealed; (3) an implied warranty or condition as to quality or fitness for a particular purpose may be annexed by the usage of trade; (4) an express warranty or condition does not negative a warranty or condition implied by the Sale of Goods Act unless inconsistent therewith. The result of these provisions is that in certain cases the vendor is made liable for latent defects, that is to say, for defects which would not be discoverable on an ordinary examination of the article. Sometimes a contract for the sale of machinery contains provisions for payment of the price by instalments after production of the certificate of the engineer that such instalments are due and payable. It was held in a Scotch case (*Howden* v. *Powell Duffryn Steam Coal Co.* (1912), S. C. 920 Ct. of Sess.) that where, in such circumstances, part of the machinery was rejected, but the manufacturers refused to accept the rejection, the production of the engineer's certificate was not a condition precedent to the right to recover payment.

(12) RELIEF WHEN CONTRACT DIFFICULT TO PERFORM BECAUSE OF THE WAR.

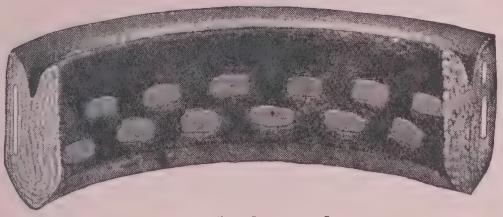
By an Act passed on July 10, 1917 (The Courts (Emergency Powers) Act, 1917, s. 1), a measure of relief is expressly given to persons who are unable to perform certain agreements in consequence of the war. This Act was considerably extended by the Courts (Emergency Powers) Act, 1919, by s. 1 (1) (*a*), of which upon an application by any party to a contract made before January 1, 1917, if the Court is satisfied that owing to the prevention or restriction of, or the delay in the supply or delivery of materials, or the diversion or insufficiency of labour or the shortage of shipping, or the alteration of trade conditions, occasioned by the war the contract cannot be enforced according to its terms without serious hardship, the Court may, after considering all the circumstances of the case and the position of all the parties to the contract and any offer which may have been made by any party for a variation of the contract, suspend or annul or with the consent of the parties amend as from such date as the Court may think fit, or stay any proceedings for the enforcement of, the contract or any term thereof or any rights arising thereunder on such conditions as the Court may think fit. The phrase 'alteration of trade conditions' includes an alteration which is due to the rise in the cost of materials and labour. This was decided in *North Metropolitan Electric Power Supply Co.* v. *Stoke Newington Boro Council* (1921), 37 T.L.R. 196, a case in which Mr. Justice Lawrence annulled certain agreements entered into for the supply of electrical energy. The word 'enforced' is not confined to enforced by action, but means put in force or given effect to (*United States Cable Co.* v. *Western Union Teleg. Co.*, 123 L.T. 232). The second class referred in s. 1 (2) of the Act of 1917 (as amended by the Act of 1919) comprises any contract whatever, any term of which cannot be enforced without serious hardship owing to any restriction or direction imposed or given by or in pursuance of any enactment relating to the defence of the realm or any regulation made thereunder, or owing to the acquisition or user by or on behalf of the Crown for the purposes of the war of any ship or other property. With regard to this class of contract, it has been held that where administrative action has had the effect of raising the price of goods in the open market, but has had no other effect, there is no serious hardship within the meaning of the Act (*Wauters* v. *Association Internationale*, 34 T.L.R. 577). Where, however, the defendant was under contract to pay a rent of 2,100*l.* for a building the erection of which was discontinued pursuant to an order of the Ministry of Munitions, the Court granted relief, and reduced the rent to 500*l.* (*Electric Pavilions, Marble Arch, Ltd.*, v. *Lorden*, 34 T.L.R. 542).

JAMES WALKER & Co.
LIMITED

WALKER'S TRADE MARK LION PACKING

'LION' Patent Expanding STEAM PACKING

The King of Packings



It holds the highest place among Packings. . . . . .
The Metal Pins form an anti-friction wearing surface and reduce friction to a minimum. . . . . .
It expands automatically to the varying pressures of steam. . . . .
The Materials used in the manufacture are of the finest possible quality.

Write for Catalogue No. 91

Full Particulars from Sole Patentees and Manufacturers—

JAMES WALKER & CO. LTD.

LION WORKS, GARFORD STREET
WEST INDIA DOCKS, LONDON, E.14

Telephone: East 4253 (3 lines). Telegrams: 'Lioncelle, Pop, London.'

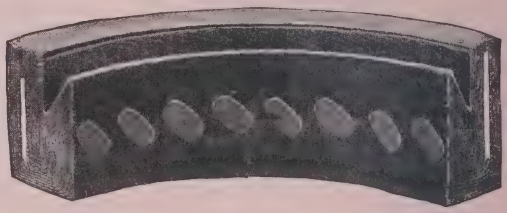
See also end of Index.

JAMES WALKER & Co.
LIMITED

WALKER'S LION PACKING TRADE MARK

'LION' Patent Automatic Hydraulic Packing

The King of Packings



It acts like a ram leather.

The only packing that offers at the same time highest packing efficiency and longest wearing quality.

There is no packing to equal it for Accumulators, Presses, Pumps, and all Hydraulic Work.

Write for Catalogue No. 91

Full Particulars from Sole Patentees and Manufacturers—

JAMES WALKER & CO. LTD.

LION WORKS, GARFORD STREET
WEST INDIA DOCKS, LONDON, E.14

Telephone: East 4253 (3 lines). Telegrams: 'Lioncelle, Pop, London.'

See also end of Index.

INDEX

(*A concise* SUMMARY OF ENGINEERING PROGRESS DURING 1921 *immediately precedes page* 1 *of book.*)

ABN

ABNEY reflecting level, 158
Abrasive materials, 1003
Abrasive wheels and blocks, 431
——, guards for, 1010
—— mounting, 1008
Absolute strength of materials, 261
—— zero of temperature, 191
Absorption dynamometer, 129
——, losses by, in reservoirs, 1271
——, rainfall, 1281
Absorptive powers of coloured glass, 1360
Acceleration, 120
—— train, 582
Accles & Pollock limit arms for micrometers, 757
Accumulated work, 121, 122
Accumulators, electric, 1878
—— acid for, 1879
—— battery rooms, 1881
—— charging, 1880
—— discharging, 1880
—— Edison nickel-iron, 1882
—— Hart, 1881
—— specific gravity of acid for, 1880
—— heat, 1528
Acetylene, 1354, 1360, 1827, 1829, 2094, 2289
—— blow-pipe welding, 2289
——, dissolved, 1354, 1360, 1827, 2096
—— for internal combustion engines, 1827
—— lighthouses, 1360
—— lighting, 2097
—— welding, 688
Acid, carbonic, refrigerating machine, 1101
—— for electric accumulators, 1879
Activated sludge process, 1261, 1262
Acts, London Building, 378, 381
Adams, Prof. H., on tall chimney design, 516
Adhesion of locomotives, 582
Adhesive strength of mortars, 253
Adiabatic expansion, gas, 1637
—— heat-drop, 1553
Adie's cement-testing machines, 403
Administration of roads and streets, 701
Admiralty coefficients, 1985, 1986
Admiralty gun-metal, 2326

AIR

Admiralty oil fuel for Diesel engines, 1823
—— specification for oil fuel, 1822, 1823
—— tests for iron, 267
—— steel, 264
—— rivets, 265
—— white metal, 2332
Adulteration of metals, to discover, by specific gravity, 210
Aërial British speed records, 1753
—— Derby, 1753
—— ropeways, 810
Aëro condenser, Hudson's, 2123
Aeroplane engines, 1705
—— A.B.C., 1714
—— Armstrong Siddeley, 1716
—— Cosmos Jupiter, 1712
—— Galloway, 1715
—— Gnome, 1709
—— Le Rhône, 1711
—— Napier, 1715
—— production of, 1708
—— Rolls-Royce, 1714
—— Salmson, 1714
—— Sunbeam, 1715
—— Zeitlin, 1711
—— flights, notable, 1752
—— propellers, 1749
Aeroplanes, 1745
—— airscrews for, 1749
—— commercial, 1754
—— control of, 1749
—— horse-power of, 1748
—— oxygen, apparatus for, 176
—— prediction of performance, 1750
—— skin friction of, 1748
—— stability of, 1749
—— wind pressure, 1742
—— wings of, 1747
—— wood for, 1749
Air and oxygen required for combustion of gas, 1826, 2087
—— blast, cupola, 2251
——, compressed, horse-power in, 1077, 1087
—— driving power hammers by, 1027
—— mining drilling by, 2163, 2165
—— range of temperature for refrigeration, 1100

AIR

Air, compressed, water raising by, 1269
compression, 1075
—— table of, 1077
—— compressors, 1076
—— Belliss high-speed forced lubrication, 1081
—— Brotherhood's 1077, 1078
—— Fullerton, 1079
—— lubrication of, 1083
—— power required to drive, 1076
—— Westinghouse, 1081
—— coolers and filters, Heenan, 1891
—— cooling, 2127
—— machines, 1099, 1100, 1891
——, thermal units required for, 1101
—— craft, propellers for, 1749
—— discharge nozzles, 2253
——, distribution of, for ventilation, 2127
—— ducts, 2128
—— ejector, Mirrlees-Leblanc, 1625
—— engines, hot-, 1701
——, expansion of, by heat, 201, 1070
—— filters, Heenan, 1891
——, flow of, through nozzle, 1072
—— friction, 1072
—— per sq. foot of plane (aeroplanes), 1748
—— heater and condenser, 2123
—— humidification, 2127
—— lift pumps, 1169
——, liquid, 1070
—— mains, 996
—— metering, 1311
——, moisture in, 1639
——, movement of, caused by difference of temperature, 2129
—— outlets, discharge from, 2136
—— passing through nozzle, weight of, 1072
—— petrol gas, 2098
—— pipes, 2128
—— propellers, 2129, 2131
—— pump ventilator, Boyle's, 2129
—— pumps, Bailey, 1084
—— condenser, 1617
—— Dexine valves for, 1152
—— dual, Weir's, 1620
—— Edwards', 1623
—— Leblanc, 1624
—— Mirrlees-Leblanc ejector, 1625
—— steam engine, 1623
—— receivers, 2165
—— refrigerating machines, 1100
—— regulators, mining, 2201
—— required for combustion of gas, 1826
—— oil fuel, 1822
—— mine drilling, 2163
—— ventilation, 2127
——, resistance of, to plane surface, 1071
—— train, 577
——, saturated, vapour in, 1100, 1640
—— -service cocks for mine drilling, 2166
—— ships for commercial purposes, 1754
——, oxygen apparatus for, 1759
——, standard data for calculations, 1757
—— velocity and pressure, 1071
—— volume, 2253
——, velocity of sound through, 201
—— washing, 2127
Alcohol, 1812

AME

Alcohol, reduction of volume under pressure, 215
—— water mixtures, calorific value of, 1813
Alden power brake, 130
Alderney breakwater, 1324
Algebra, 1
Alignment of crankshafts and engine parts,
—— pins, 1593 [1591, 1676
Allan, Whyte & Co.'s steel wire ropes for oil well drilling, 2197
Allen-Liverside, Ltd., acetylene, 688, 2096, 2097
Allen oil engines, 1685
Allen's link motion valve gear, 1612
Allen West lifting magnets, 801
Alloy Welding Processes, A.W.P. electrodes,
Alloys, 2267, 2272 [2305
—— ferro, 2274
—— for parts of locomotives, 613
——, general, 2339
—— melting-points of, 188
—— non-ferrous, 2317
—— non-magnetic, 2338
—— resistivities and conductivities of, 1856
—— tensile strength of, 248
Alluvial mining, 2161, 2220
Alternating-current circuits, sizes of mains for, 1922
—— generators, 1887
—— lines, voltage drop in, 1920
—— motors, 1909
—— turbo-generators, 1889
Alternating currents, 1919
Alumina, melting-point of, 426
Aluminium, 2316, 2325
—— alloys, 2325, 2327, 2329, 2330
—— annealing sheet, 2316
—— bar and strip, weight of, 222
—— brass, 2325
—— bronze, 2327
—— solder for, 2343
—— cables, 1929
—— conductors, 1930
—— corrosion of, 2316
—— flat bars, 222
—— impurities in, 2316
—— sheet, annealing, 2316
—— sheet, weight of, 223
—— soldering, 2342
—— stranded cables, 1933
—— tubing, weight of, 239
——, v. copper for electrical conductors,
—— welding, 2298 [1931
—— working, 2376
Amatols, explosive, 2350
American belting practice, 831
—— blast furnaces, 2238, 2240
—— canal locks, 1383
—— locomotives, 572, 577
—— iron castings, 2281
—— railway rails, 536
—— screw threads, 1031, 1037, 1038
—— sewers, 1245
—— standard gas pipe threads, 1044
—— nuts and bolts, 1045
—— pipe flanges, 1059
—— screw threads, 1037
—— standards for cast-iron, 2281
—— steel sheet piling, 501
—— turbines (water), 1207
—— wire gauge, 2394, 2395

AMM

Ammeters, Weston standard, 1935
Ammonia, gas, refrigerating effect of, 1103
——— properties of anhydrous, 1102
——— pumps packing, 1101
———, sulphate of, 2085
Ammoniacal liquor, gas, 2086
Amortization table, 12
Anderson, Thomas, Ltd., cork insulation, 1110
Anderson's Rok and Rokalba roofing, 337, 338
Anemometer, hot wire, 1319
——— Robinson, 1072
Aneroid, Steward Hypsometric, 159
Angle and tee iron, Henderson & Glass', 224
——— steel ——— 225
——— iron, weight of, 224
——— measurement by foot rule, 2388
——— of an arc of a circle, 49
——— of teeth, spiral, 886
——— steel, weight of, 217
———, twisting of shafts, 260
Angles and leads of railway crossings, 556
——— lengths of slopes, 489
——— at circumference of a circle, 20
——— semi-circle, 20
———, bisection of, 20
——— British standard, 317
——— bulb, British standard, 318
———, complement of, 60
——— equal, British standard, 317
——— in a parallelogram, 20
———, measurement of, 59
——— of repose of soil, 491
——— slopes, 489
———, roof, 328
——— supplement of, 60
——— tangential, for chords, 560
——— trigonometrical ratios of, 62
——— trisection of, 20
———, unequal, British standard, 317
Anglo-Swedish Electric Welding Co.'s 'Kjellberg' process, 2302
Angold magazine flame arc lamp, 1945
Angular contact slabs for boilers, 1430
——— functions, 14
Angus Smith's composition, 2358
Anhydrous ammonia, properties of, 1102
——— refrigerating machine, 1101
——— carbonic acid refrigerating machine, 1101
——— dioxide, properties of, 1102
Animal power, 135, 136 [
——— notes on, 137
Annealed and bright iron wire, sizes, weights, and breaking stresses of, 254
Annealing furnaces, 2254
Annison's side-groove steel piling, 500
Annual compass variation, 162
——— sinking fund table, 9
Annuities, 4
Annuity table, 5
Anthracite wastes, 1775
Anti-friction Delta metal, 2333
——— metallic packing, 1599
Anti-rust paint, 2353
Apothecaries' measures, 2387
Apparatus, rescue, for mines, 2202
Appleby, E. G., & Co.'s gas producers, 1835
——— ——— Phœnix electro-lifting magnets, 800

ASS

Appliances, lifting, arrangements in, 804
——— timber, for quays, 1339
Arbitrator, engineer as, 2448
Arbitrator's fees, 2449
Arc lamps, 1945
——— of circle, angle of, 49
——— chord of, 49
——— length of, 49
——— radius of, 49
Arc welding, 2301
Arched bridge, reinforced concrete, 468
Arches, 467, 520
——— centering of, 522
——— keystones of, 521
——— reinforced concrete, 467
——— setting out, 520
——— stone, 521
——— thickness of, 522
——— to find depth of keystone of, 521
Archstones, pressure on, 522
Area computation, Simson's rule for, 143
——— Weddle's rule for, 24
———, effective, of chimneys, 517
———, grate, of locomotive boilers, 596
——— of circles, 41, 48
——— ellipse, 29
——— parabola, 30
——— safety valves, Board of Trade rules, 1497
——— segment of circle, 49, 56
——— spherical triangles, 69
——— squares, 48
——— steam cylinders, 1992
——— passages, 1597
——— triangles, 62
Areas, calculation of, from co-ordinates, 142
———, safety valve, 1497
Arithmetical progression, 2
Armouring of electric supply cables, 1862
Arms, pulley, 1063
Arrangement of refrigerating chambers on ships, 1119
——— steam turbines in ships, 1994
Arrol, Sir W., & Co.'s tower cranes, 791, 792,
Artesian well pumps, 1137 [793
——— wells, 1288
Artificial bacterial methods, sewage, 1255
——— daylight, 2146
——— seasoning of timber, 366
——— stone, 406
Asbestos building sheets, 400
Asbestos-cement, 'Fibrent,' 335, 336
——— building sheets, 335
——— cushioned flue cover, 1429
——— seam inspection blocks and covers, 1430
——— seating blocks, 1429
——— millboard for electrical insulation, 1968
——— packed water gauges, Winn's, 1500
——— packing, 1597
——— rings and joints, 1436
——— sheets, roofing, 335, 336
Ascension pipes of gasworks, 2075
Ashlar masonry, 388
Ashwell & Nesbit's pneumatic coal conveying
Asphalt flooring, 407 [plants, 824
——— paving, 734
Asserson's formula for circular sewers, 1245
Association electricity supply cables, 1857
———, British, screw-thread, 1031, 1036
Assouan dam, 1294

Aster motor-car engine, 1721
Astronomy, 164
—— —— in field work, 165
Atlantic cargo steamers, 1988
———— liners, 1991
Atmosphere, the, 1069, 1741
———— ———— pressure of, 1069
———— ———— temperature of, 190
Atomic weights, 207
Atomisers, liquid fuel, 1819
Attemperator, brine, Webb's, 1115
Attenuation and formulæ for telephones, 1960
Audible sea signals, 1362
Australian mines, 2182
———— timber, strength of, 364
Auto Recorder Co.'s CO_2 recorder, 1768, 1769
Autocopyist, 2371
Automatic brakes, 631
———— ———— Board of Trade regulations for, 661
———— ————, Westinghouse, 631
———— control gear, electrical, 1917
———— forced lubrication, V.S.M. system, 916
———— reversing drive for planing machines, 940
———— tools, lubrication of, 911
———— vacuum brake, 635
———— water recorder for steam engines, Lea's, 1581
Automobiles, horse-power necessary to propel, 1739
Averager, Goodman's hatchet, for indicator diagrams, 1406
Averaging experimental results, 111
Aviation, civil, 1753
A.W. High-speed steel, 975
Axle boxes, 627
Axles, carriage and waggon, 606
———— crank, of locomotives, 594, 606
———— diameter of, 922
———— straight, of locomotives, 606
Azimuth, determination of, 167, 168, 172

B. Th.U. (British Thermal Unit), 193, 1391, 2086, 2103
Babbitt metal, 2332
Babcock & Wilcox boilers, 1492, 2016, 2017
———— ———— electric crab crane, 787
———— ———— mechanical stoker, 1784
———— ———— superheater, 1517, 1518, 1520
Back pressure and extraction engines, 1539
———— ———— turbines (steam), 1578
Bacterial treatment of sewage, 1255
Bailey, W. H., & Co.'s vacuum pump, 1084
Baker oil separator, 1456
'Balagrip' belt dressing, 837
Balancers, static, 1924
Balata belting, 831, 840
Balk dams, single, 505
Ball and socket joint, 603
—— bearing drilling machines, 959
———— ———— grease, sternol, 905
—— bearings, 899
———— ———— lubrication of, 905
———— ———— Skefko, 900, 902
—— mills, Krupp, gold mining, 2219
Ballast, 548
Ballistic pendulum, 126
Balls, cast-iron, weight of, 216
———— metal, weight of, 218
Baltic yellow fir girders, 340
———— ———— joists, 341
Bandsaws, 977
Banki turbines, 1215
Bar aluminium, weight of, 222
—— cast iron, weight of, 215
—— copper, weight of, 220
—— brass, weight of, 220
—— iron, tests for, 267
—— lead, weight of, 220
—— metals, weight of, 215, 220, 222
—— steel, tests for, 264
—— weights, slide rule constants for, 110
'Bareau' cement, 400
Barff process for protecting iron, 2312
Barnes' formula for water velocity, 1367
Barometer, height of, in millimetres, 195
Barometric condenser, 1623
Barrow and cart runs, 491
Bars, fire, 1782, 2014
—— for reinforced concrete, 447, 448
——, steel, Admiralty tests, 264
———— Indian Government tests, 274
—— T, 317
Base line, to measure, across a river, 143
——, measured, to reduce to level of sea, 148
Basic bricks, 427
Baths, tempering, for cutting tools, 988
Batteries, Ironclad-Exide, 696
———— primary, 1878
Battery rooms for accumulators, 1881
Bauxite bricks, 426
Bazin's formula for channels for irrigation, 1274
—— —— ———— flow of water in pipes, 1192
Beam, to cut best, from log, 260, 365
———— ————, stiffest, from log, 365
Beams, 298, 442, 445, 451, 456
———— British standard, 319
———— broad flange, 314
———— building up, 325
———— continuous, 299
———— deflection of, 288, 299, 327, 459
———— I, 312, 313
———— inverted, 454
———— jointing, 823
———— of various sections, values of coefficient, 259
————, pine, breaking weight of, 264
———— rectangular, solid, 298, 451, 456
———— reinforced concrete, 449
———— safe limit of loading, 313
———— scarfing, 324
————, straining-joint of, 326
———— strength and stiffness of, 326
———— stresses in, 287, 437, 454
———— T, 438, 459
———— timber, weight of, 372
———— yellow pine, breaking weight of, 264
Beardmore Humphrey pump, 1166
———— ———— oil engines, 1685, 2052
———— ———— Tosi Diesel engines, 1674
Bearing metals, 2058, 2326, 2331
———— pressures, 897, 1589
———— springs, 607, 628
———— surface for girder ends, 493

BEA

Bearing surfaces, locomotive, 594
Bearings, ball, 899
——— lubrication of, 905
——— crane, 794
——— engine, 1593
——— fixed, 552
——— heating of, 898
——— locomotive, 594
——— motor-car, 1725
——— moving, 552
——— permi-sible loads on, 902
——— roller, 904
——— Skefko, 900, 902
——— thrust, 905
——— turbine, 1569
Beck water meter, 1314
Beldam packings, 1600, 1602, 1603
Bell buoys, 1352
—— metal, 2526
Belliss high-speed forced lubrication air compressor, 1081
Belliss & Morcom Diesel engines, 1671
——— forced lubrication, 1539, 1730
——— high-speed engines, 1539
——— pneumatic hose couplings, 996
——— steam turbine thrust bearings, 906
Bell's United Asbestos Co's. 'Hurcan' building slabs, 401
——— 'Poilite' tiles, 335
Bells, fog, 1362
Belt conveyors, 819
—— dressing, 837
—— driving, Tullis on, 838
—— driving with quarter twist, 839
—— joints, cement for, 837
—— pulleys, 838
—— tension, 834
Belting, 829
——— American practice in regard to, 831
——— Balata, 831, 840
——— chain or link, 840
——— coefficients of friction of, 840
——— Dick's Balata, 831
——— German practice in regard to, 832
——— 'Gripoly,' 841
——— leather, 829
——— Reddaway or camel hair, 832
——— steel, 841
——— strength of, 838
Belts, compounding, 838
—— cross-sections of, 833
—— jointing, 836
—— leather, oiling, and greasing, 837
—— length of, 835
—— link or chain, 840
—— power transmitted by, 829, 831
—— putting on heavy, 839
—— rules for, 834
Bending moments, 292
Bends for steam pipes, 1433
——, unbalanced pressures on water pipe, 1308
Benjamin Electric Ltd. reflectors, 2141
Benn friction clutch, 857
Bennis boilers, tests of, 1466
——— chain grate stoker, 1788
——— coking stoker, 1788
——— compressed air furnace, 1785

BOA

Bennis conveyors, 821
——— self-cleaning stoker, 1785
——— sprinkler stoker, 1785
Benzine, 1808
Benzol, 1811, 2082
Bessemer basic iron, 2274
Beton, 395
Bevel wheel teeth, 827
Bills, railway, standing orders for, 663
—— tramway, standing orders for, 697
Binders, wrought-iron, 339
Binomial theorem, 13
Bins, reinforced concrete, 464
Birmingham gauge for sheets and hoops, 2393
——— wire gauge, 2391
Bisection of an angle, 20
Bismuth solder, 2342
Bits, steel mining, sharpening, 2162
Bitumen sheeting, Callender's, 376, 1291
Bituminous carpeting, 726
—— —— macadam roads, 726
——— —— suction producers, 1842
Bizerta breakwater, 1327
Blackening brass, 2359
Blackett conveyor, 821
Blackett's wire-rope socket, 853
Blackstone oil engines, 1682, 1694
Blades and caulking pieces for steam turbines, 1564
———, impulse, for steam turbines, pitch of, 1562
Blading efficiency of steam turbines, 1565
Blakeley copying process, 2371
Blast-furnace gas, 1844
——— ——— gas cleansers, 'Heenan,' 2251
——— ——— hearths, 2248
——— ——— materials and products, 2241
——— ——— practice, 2239
——— furnaces, 2236
——— ——— American, 2240
——— ——— British, 2242
——— ——— German, 2240
Blasting, 2166
——— machines, 2350
———, rock, 1350
Block-in-course masonry, 388
Blocks, abrasive, 431
——— and terra-cotta, 424
———, boiler, 425
——— ——— Pearson's patent, 1428
—— ——, furnace lining, 429
—— ——, hollow, 424
Blow, energy of a, 1023
Blower valve, Jenkins', 1463
Blowers, power variation of, 2132
——— rotary, for ventilation, 2132
——— Sturtevant, for ventilation, 2131
Blowpipe cutting, 2300
——— welding, acetylene, 2293
Blue bricks, Staffordshire, 423
Blue photographic copying process, 2371
Blueing steel, 2369
Board of Trade annual report on railways, 653
——— —— regulations with reference to electric lines, 1934
——— ——— regulations with reference to railways, 657
——— ——— regulations with reference to electric tramways, 690

BOA

Board of Trade regulations with reference to tramways and light railways on public roads, 689
——— report on steel rails, 547
——— rules for automatic brakes, 661
——— electric tramways, 690
——— safety valve areas, 1497
——— springs, 1498
——— shafts, 923
——— switch-board for electric traction, 691
Boards, fireproofing and waterproofing, 2370
——— flooring, 342
——— ———, weight of, 372
Bodies, falling, 119
——— impact of, 119, 120
——— rotating, energy of, 126
Boiler blocks, 425, 1429
——— bricks, 423
——— butt straps, 1420
——— casings, 2074
——— chimney and flue area, 1412
——— chimneys, sizes of, 519
——— cleaners, mechanical, Hulburd's, 1457
——— combustion chambers, iron for screw stays of, 1418
——— composition, Harris', 1440
——— coverings, Crown, 1439
——— covers, Pearson's patent, 1429
———, cylindrical marine, 2014, 2016
——— design, 1411
——— draught, 1412, 2014
——— efficiency, 1465, 1466, 1469
——— feed and service pumps, 1143
——— feed water evaporators, 2030
——— fittings, 1497
——— flanging, pressures required for, 1414
——— flat plates, 1421
——— flues, working strength of, 1415
——— foundations, 1428
——— furnaces, 1421
——— ——— corrugated, 1421
——— ——— girders, 1422
——— ——— plain, 1421
——— ——— plates for, 1421
——— ——— stays for, 1422
——— graphite, Foliac, 1441
——— improvements, modern, 1428
——— inspection, 1424
——— lagging, 1438
——— legislation, 1424
——— mountings, Hopkinson's standard specification for, 1510
——— plant efficiency, 1468, 1469
——— plants, typical, average working figures of, 1468
——— plates, multitubular, thickness of, 1473, 1476
——— plugs, fusible, 1431
——— pressure required for pumping, 1150
——— rivet bars, 1416
——— riveting, pressures required for, 1414
——— safety valves, 1423, 1497
——— seams, flanged, 1415
——— ——— welded, 1414
——— setting, 1427
——— settings, leaky, 1431

BOI

Boiler shells, 1414, 1419
——— ——— strength of, 1414
——— ——— thickness of plates of, 2016
——— stay bars, 1416
——— steel, Indian Government test for, 274
——— surfaces, 2013
——— tests, table of, 1466
——— tube brushes and scrapers, Simplex patent, 1459
——— tubes, 1425
——— ——— charcoal iron, lapwelded, 1425
——— ——— locomotive, life of, 596
——— ——— soot removers, 1458
——— ——— steel, 1426
——— ——— surface of, 1425
——— ——— weight of, 1425
Boilerine, 1440, 1441
——— radiator tablets, 1731
——— 'Rosseline' compound, 1662
Boilers, 596, 1411, 2012
——— Babcock & Wilcox, 1492, 2016
——— Clarke-Chapman, 1486, 2020
——— Cochran, 1480
——— Coltman, 1541
——— combustion rate of, 1412
——— Cornish, 1470
——— cotton mill, 769
——— cross-type, 1494
——— cylindrical, length of, 2014
——— cylindrical marine, 2014, 2016
——— ———, diameter of tubes of, 2016
——— 'Economic,' Paxman, 1428, 1479
——— 'Essex' tubular, 1478
——— evaporation of, 1412, 1480
——— 'Express,' 2019
——— Galloway, 1471, 1489
——— gas-fired, Kirke, 1846
——— grate area of, 596, 1412
——— heat transmission in, 1412
——— heating surface of, 596, 1412, 2014
——— Howden, 1495
——— Lancashire, 1470
——— life of, 1497, 2024
——— locomotive, 596, 1473, 1476
——— ——— grate areas and heating surfaces of, 596
——— ——— iron castings for, 612
——— ——— plates for, 610, 612
——— ——— rivets for, 611
——— ——— specification of plates for, 611
——— ——— steel castings for, 609
——— ——— tubes for, 610, 611
——— loss of heat conductivity in, 1439
——— main cylindrical type, 1418
——— marine, 1416, 2012
——— ——— furnaces and firebars of, 2014
——— ——— heating surface of, 2014
——— ——— length of, 2014
——— ——— life of, 1497, 2024
——— ——— weight of, 2018
——— multitubular, 1473, 1482
——— Niclausse, 1482, 2020
——— Paxman 'Economic,' 1428, 1479
——— portable, 1454
——— preventives of corrosion in, 1441
——— ——— ——— scale in, 1440
——— priming of, 1349

BOI

Boilers, riveted joints of, 1420
——— Robey, 1473, 1476
——— setting, 1427
——— leaky, 1431
——— ship, 2012
——— coal combustion, 2012
——— draught, 2014
——— furnaces and firebars, 2014
——— heating surface, 2014
——— length of cylindrical, 2014
——— tube diameter, 2016
——— steel, 1414
——— soot, effect of, in, 1439
——— Spencer-Hopwood, 1496
——— Stirling, 1448
——— Thompson, 1473, 1474, 1475, 1490
——— Thornycroft, 2019
——— types of, 1470
——— steamship, 2013
——— vertical, Cochran patent, 1480
——— waste heat, Kirke's, 1850
——— water softening for, 1442
——— water-tube for land service, 1482
——— marine service, 2016
——— welded seams in, 1414
——— White-Foster, 2019
——— Woodeson, 1486, 2020
——— working pressure to be allowed in, 2016
——— Yarrow, 1496, 2019
Boiling-points of saturated solutions of salts, 195
——— water, 195
Bolection mouldings, 417
Bolinder oil engines, 1687
Bolt and nut machines, cutting speeds of, 974
—— forcers, hydraulic, 1240
—— heads, British standard hexagonal, 1046
——— round, 1052
——— weight of, 241
Bolt-pins, French, 1050
Bolt securers, 1064
Bolted sectional dock, 1340
Boltheads and nuts, weights of, 241
Bolts and nuts, 1044
——— American, 1045
——— for railway plant, specification for, 538
——— French standard, 1051
——— Whitworth's, 1044, 1045
Bolts, foundation, 1592
—— French, 1049
Bonds for brickwork, 375
——— electric tramway rails, 686
——— masonry, 389
Bone, to make permanently white, 2374
Books and paper, sizes of, 2399
Booth's formula for strength of boiler flues, 1415
——— report on blast-furnace gas, 1844
——— table of properties of gases, 196
Bore-holes, 2161
Boring (mining), 2160
——— cost of, 2162, 2413
——— diamond rock-, 2161
——— machines, 973
——— power for, 940
——— mills, power for, 973
Bosh tuyeres, 2250
Bosses and pulley arms, 1063
Bottles, glass, to divide, 2374

BRE

Bourdon pressure gauge, 1503
Boving & Co.'s Banki turbine, 1215
——— turbo pumps, 1157
Bowsprits, iron and steel, 269
Box keys, 1056
—— sextant, 157
—— spanners, 1056
Boxes, axle, 627
Boyer long-stroke pneumatic hammer, 994
Boyle's air pump ventilator, 2129
Brackets, 349
Bradford steam trap, 1521
Brake, driver's equalising valve for, 634
——— horse-power, 1400
——— linings, 797, 825, 826, 861
——— rims, cooling, 129
——— thermal efficiencies of gas engines, 1659
——— petrol engines, 1729
Brakes, 618, 631, 796
——— automatic, vacuum, 635
———, Westinghouse, 631
——— Board of Trade Rules for, 661
——— crane, 796
——— electric, 693
——— electro-mechanical, 1913
——— Ferodo surfaces for, 797, 826, 861
——— locomotive, 618
——— power measurement, 126
——— Alden, 130
——— Brotherhood fluid friction, 130
——— fan, 132
——— Froude's, 130
——— Hirn's rope, 126
——— hydraulic, 129
——— Prony, 127
——— Reynold's hydraulic, 129
——— Ringelmann's, 128
——— water-pipe absorption, 129
———, railway, power required by, 631
Brass, aluminium, 2325
—— balls, weight of, 218
—— bars, weight of, 220
——, blackening, 2359
—— cast, 2320
—— ductile, 2320
—— effect of certain metals on, 2321
—— naval, 2321
—— hot-forgeable, 2321
—— melting point of, 2326
—— pipes, weight of, 229
——, rolled, weight of, 220
—— sheets and bars, weight of, 220
——, to clean, 2367
—— tubes for locomotive boilers, 610
———, seamless, weight of, 238
——, weight of castings in, 241
—— welding, 2299
—— wire, weight of, 241
Braziers' copper rivets, weight of, 243
Breakages in gas and oil engines, 1663
Breakdown cranes, 790
Breakdown voltage, 1969
Breakers, rock, 1351
Breaking ground (mining), cost of, 2180
—— load on steel rails, 548
—— stresses of annealed and bright iron wire, 254

BRE

Breaking stresses of galvanised telegraph wire, 255
——— hard drawn copper wire, 255
——— iron and steel wire, 255
——— steel wire ropes, 256
——— stresses of wire and wire ropes, 254
——— weights of pine beams, 264
Breakwaters, 1324
———, cost of, 2413
Breeze concrete, 395
Breguet, ejectair, 1626
Brick floor paint, 2356
——— noggings, 377
——— retaining-walls, 511
——— roads, 732
Bricks, 374, 422
——— basic, 427
——— bauxite, 426
——— blue, 422
———, Staffordshire, 423
——— boiler, 423
——— building, specification for, 424
——— carbon, 426
——— cement-concrete, 422
——— chromite, 426
——— chuff, 422
——— colliery, 422
——— common, 422
——— crozzle, 422
——— crushing strength of, 253, 423, 428
——— cutter, 422
——— engineering, 422
——— facing, 422
——— fire, 426
——— fireclay, specification for, 428
——— furnace, 429
——— ganister, 426
——— glazed, 422
——— grizzle, 422
——— kinds of, 422
——— magnesia, 426
——— malm, 422
——— melting point of, 426
——— neutral, 427
——— paviour, 422
——— place, 422
——— porosity of, 424
——— pressed, 422
——— rattler, test for, 424
——— rubber, 422
——— sand-lime, 422
——— semi-bauxite, 426
——— semi-dry, 422
——— semi-plastic, 422
——— silica, 426
——— specification for, 428
——— sizes of, 374, 423, 428
——— specification for, 424
——— Staffordshire, 422
——— stiff plastic, 422
——— stock, 422
——— strength of, 253, 423, 428
——— tests of, 424
——— wire-cut, 422
Brickwork, 374
——— bonds, 375
——— of wells, 1288
———, reinforcements for, 344
——— strength of, 253

BRI

Bridge, arched, reinforced concrete, 468
Bridge, Clyde, 529
——— expansion rollers, 550
——— materials, unit loads on, 529
——— piers, cylinder, 529
——— rivets, 303
Bridges, 524
——— British standard steel for, 264
——— cost of, 2414
——— formulæ for spans of, 550
——— foundations of, safe loads on, 529
——— skin friction on, 529
——— impact in, 550
——— railway, 549
——— piers for, 550
——— reinforced concrete, 468
——— rolling load on, 305
——— stress on, 551
——— superstructures of, 524
——— swing, 550
——— timber, life of, 530
——— velocities on, 527
——— waterway of, 527
Bridging joists, 341
Bright iron wire, sizes, weights, and breaking stresses of, 254
Brine attemperator, Webb's, 1113
———, calcium, 1105
Brinell hardness numbers, 1002
Briquette fuel, 1781
Britannia electric lamps, Siemens', 1944
British Admiralty specification for oil for Diesel engines, 1823
——— oil fuel for the Navy, 1822
British Aluminium Co.'s aluminium bronze, 2328
——— conductors, 1929
——— weight of aluminium, 222, 223, 239
British and Allied Manufacturers' Association, specification for turbine forgings, 1573
British Architects, Royal Institute of, experiments on strength of brickwork, 253
——— Report on Reinforced Concrete, 435
British Association screw threads, 1031, 1036, 1037
——— canals, 1374
——— cylinder (steam) ratios, 1589
——— driving chain manufacturers, 863
——— 'Fibrocement,' 335, 336
——— Government Standard cargo vessels, [1989
——— Hele-Shaw clutch, 855
——— Isles, rainfall in, 1279
——— locomotives, recent additions, 567
——— types of, 574
——— Ljungstrom marine turbine, 2002, 2006, 2007, 2008
——— Niclausse boiler, 1482, 2020, 2023
——— railway rails, dimensions of, 533
——— Reinforced Concrete Engineering Co.'s system, 448
——— Standard bolts and nuts, and bolt heads, 1046
——— bridge steel, 264
——— building construction steel, 262
——— cable soldering sockets, 1870
——— cast-iron, water, gas, and sewage pipes, 245

BRI

British Standard castle nuts, 1047
—— channels, 318
—— charcoal-iron lapwelded boiler tubes, 1425
—— conduits, electrical wiring, 1872
—— creosote, 371
—— electrical machinery, 1913
—— electricity supply cables, 1857
—— metres, 1939
—— fine screw threads, 1033, 1035, 1048
—— flue pipes, 2109
—— gas pipes, 245
—— heads for small screws, 1042
—— heating pipes, 2108
—— hexagonal nuts and bolt heads, 1046
—— hot-water fittings, 2109
—— limit gauges, 754
—— locomotive steel tubes, 1426
—— low-pressure heating pipes, 2108
—— metallic resistance materials,
—— pipe flanges, 1057 [1869
—— threads, 1043
—— Portland cement, 404
—— rails, 533
—— railway rolling stock material, 606
—— safe loads on bridge struts, 525
—— screw heads, 1042
—— screw-threads, 1032, 1033, 1035, 1043, 1047, 1048, 1049
—— sections, 315
—— sewer pipes, 1246
—— smoke pipes, 2109
—— spanners, 1055
—— steam turbines, 1579
—— steel for bridges, 264
—— for building construction, 264
—— for shipbuilding, 268
—— electrical conduits, 1872
—— for bridges and buildings, 268
—— tubes, 1426
—— switch gear, 1916
—— telegraph and telephone poles, 1962
—— tensile test pieces, 1417
—— tolerances, 754
—— tramway poles, 691
—— rails, 673
—— water pipes, 245
—— Whitworth screw threads, 1031, 1032
—— Steel Piling Co's hammers, 497
—— steel piling system, 499
—— thermal unit (B.Th.U.), 193, 1391, 2086, 2103
—— units required to cool air, 1101
—— Thomson-Houston electric-light fittings, 2146
—— Mazda lamps, 1943
—— Pitot tube meters, 1311
—— Thermostatic metal, 2378
—— Westinghouse tramway motors, 1905

BUO

Broaching, 949
Broad flange beams, Skelton's, 314
Bromell's (Crockatt's) patent boiler tube brushes and scrapers, 1459
—— valve reseater, 1464
Bronze, aluminium, 2327
—— effect of certain metals on, 2326
—— manganese, 2321, 2328
—— melting-point of, 2327
—— phosphor, 2327
—— turbadium, 2323
—— welding, 2299
Bronzes and lacquers, 2358
Bronzing liquids, 2358
Brooke's quick-change universal drill jig, 963
—— valve re-facer, 1464
Brooklands standard motor engine classes, 1722
Brotherhood air compressors, 1077, 1078, 1079
—— fluid-friction dynamometer, 130
—— gas engines, 1652
—— oil engines, 1686
—— pressure gauge tester, 1504
Broughton Copper Co.'s brass and copper tubes, 236, 237, 238
Browett-Lindley gas engines, 1655
Brown Curtis steam turbines for ships, 2002
Brownlie, D., economiser data, 1525
—— working figures of boiler plants, 1468, 1469
Bruce Peebles' motor converters, 1896
Bruges and Crimp's formula for discharging capacity of sewers, 1245
Brushes and scrapers, Simplex patent boiler tube, 1459
Buffer springs, 628
Building Acts, London, 378, 381
—— blocks, hollow, 425
—— bricks, specification of, 424
—— materials and construction, 355
—— Products, Ltd., Rigifix for reinforced concrete, 475
—— waterproofing materials, 400
—— sheets, 'Ægis,' 400
—— asbestos cement, 335
—— slabs, Bell's 'Hurcan,' 401
—— up beams, 325
—— walls, 376
—— walls, rules for, 376, 378, 381
Buildings, British standard steel for, 264
—— effect of weight of, on retaining walls, 510
—— heating, 2103
—— shoring, 507
—— structural steelwork for, London County Council Act, 381
Bulb angles, British standard, 318
—— furnaces, 1421
—— plates, British standard, 318
Bulk of rock, earth, etc., 481
Bull-head rails, 533
Bull's metal, tensile strength of, 2324
—— metals, 2058, 2324, 2339
—— Metal Co. metal for propellers, 2058
Bullivant's steel wire ropes, tables of, 256, 257
Buoy moorings, 1352
Buoyage, 1352
Buoyancy, centre of, in ships, 1976
Buoys, 1352

BUO

Buoys, bell, 1352
——— channel demarcation by, 1353
——— gas, 1352
——— luminous, 1352
——— whistling, 1352
Burdon oil-gas heater, 986
Bureau Véritas rules for safety valves, 1498
——————— steamship shafts, 925
——————— tests for chain cables and ropes, 271
——————— iron, 270
——————— steel, 270
——————— forgings, 270
——————— rivets, 270
Burkli-Zeigler's formula for rate at which rainfall reaches a sewer, 1245
Burls' horse-power formula for motor cars, 1730
Burmeister & Wain Diesel engine, 2037
Burners for gas, 2087
Bursting strength of tubes, 275
Bushes, steel, to reduce diameter of, 999
Butler, E., on windmills, 1073
Butler, S. & Co., locomotive cranes, 789
By-product recovery gas producer plant, Mond, 1840

CAB

CABLE, cab-tyre sheathed, 1865
——— length, 2381
——— 'Maconite' sheathed, 1967
——— system for electric tramways, 688
Cables, aluminium, 1929
——— chain, Bureau Véritas tests for, 272
——— Lloyd's tests for, 269
——— electric, for collieries, 2197
——— electric jointing, 1866
——————— testing, 1867
——— electricity supply, 1863
——— Henley's, 1873
——— sags on aluminium, 1933
——— specification for, 1865, 1870
——— three-core, 1874
——— two-core, 1874
Cab-tyre sheathed cable, 1865
Caird & Rayner's boiler feed and service steam pumps, 1143
——————— evaporator, 2029, 2030
Caissons, 503, 1335
Calcium brine, 1105
Calculus, differential, 14
——— integral, 16
Caledonian Railway carriages, 622
——— locomotives, 570
——— waggons, 623
Californian experiments on evaporation, 1272
——————— type dredger, miniog, 2224
Callendar's tables of properties of saturated steam, 1392
Callender, G. M., & Co.'s bitumensheeting, 376,
Callendrite for reservoirs, 1291, 1292 [1291
Calorie, 191, 2056
Calorific value of coal, 1774
——— properties of fuels, 1774
——— value of alcohol-water mixtures, 1813
——————— coal gas, 1828
——————— gaseous fuels, 1824
——————— liquid fuels, 1825
——————— refuse, 1804
——————— solid, liquid, and gaseous fuels, table of, 1825
Calorific value of various fuels, 1774
Calorising iron, 2313
Camber of joists, 339
——— roads, 720
Camel hair belting, Reddaway's, 832
Camellaird 'Fullagar' engine, 1656, 2050, 2051,
——————— water gauge, 1503 [2056
Cambridge & Paul, Anemometer, 1319
——————— CO_2 recorder, 1768
——————— meters, 1311
——————— pyrometers, 2270, 2271
Campbell gas engines, 1645
——————— producer, 1835
——————— oil engines, 1685, 1692, 1695
Canal bank protection, 1384
——— capacity, development of, 1374
——— curves, 1384
——— lifts, 1379
——— locks, 1379
——— traction and haulage, 1385
Canalisation of rivers, 1371
Canals, American, 1376
——— Continental, 1375
——— cost of, 1373, 2417
——— French, 1375
——— German, 1375, 1376, 1378, 1386
——— lateral, 1373
——— loss of water on, 1273, 1384
——— ship, 1385
——— Swedish, 1376
——— United Kingdom, 1366, 1374, 1386
——————— cost of, 1376
Candles, standard, 2137
Cane-sugar machinery, 775
Capacities of irrigation canals, mean velocity,
Capacity measures, 2287 [1274
——— of pumps, 1138
——— of sewers, 1245
Capped nuts, 1053
Carat, the metric, 2387
'Carbic' acetylene plant, 2291
Carbon bricks, 426
——— combustion of, 194
———, heat absorbed in the metamorphic conversion of, 191
——————— generated by combustion of one pound, 191
——— monoxide, detection of, in mines, 1827
——— steel, 980
Carbonic acid refrigerating machines, 1101
Carbons, electric-light, 1945
Carburation, 1707
Carburetted water gas, 2084
Carburettors, 1707, 1731
Card indicator, to take, 1408
Carels Diesel engine, 1674, 2041, 2043, 2044,
Cargo steamers, Atlantic, 1988 [2056
——————— British Government standard,
Carlton iron, 2274 [1989
Carnot hot-air engine, 1702
Carpeting, bituminous, of roads, 726
Carriage, railway, axles, 606
——————— tyres, 606
——— springs for motor-cars, 1738
——— way, width of, 719
Carriages, railway, 619
——————— electric lighting, 628
——————— heating by steam, 630
——————— steel for, 612
——————— wheels of, 627

CAR

Carriers for pneumatic despatch tubes, 1085
———, pressure required to drive through pneumatic tube, 1089
——— transit time of, through tubes, 1089
Carron iron, 2274
Cars, electric tramway, 689
—— motor, 1733
—— —— steel for, 1723
Cart and barrow runs, 491
Cartridge sight-glasses, Hulburd's, 1501
Carts and waggons, loads of, 491
Cascade motors, 1912
Case-hardening, 2286
—— —— —— furnaces, 2254
Casella dumpy level, 160
——— theodolite, 160
Casings, boiler, 2024
Cast brass, 2320
——— —— copper, iron, and lead balls, 218
—— iron, 2276
——— ——— American standards for, 2281
——— ——— analyses of, 2281
——— ——— balls, weight of, 216, 218
——— ——— British standards for, 2281
——— ——— columns, 302
——— ——— German standards for, 2281
——— ——— hydraulic piping, thickness of, 244
——— ——— muff couplings, 1063
——— ——— pillars, 383
——— ——— pipes, 228, 230, 1307, 2089
——— ———, flanges of, 1057
—— —— ——— standard sockets for, 1307
——— ——— ——— weight of, 228, 230, 2089
——— ——— pressure flanges, 1131
—— —— sheet, bar, and ball, weight of, 216
——— ——— soldering, 2343
—— —— standards for, 2281
——— ——— tensile strength of, at different temperatures, 247
——— —— tests for, 2279
——— ——— tooth, to compute depth of, 877
——— ——— water-pipe fittings, weights of, 234
——— ———, weight of castings in, 241
——— ——— welding, 2298
—— steel, 2286
Casting and founding, 2344
Castings, dips for, 2345
——— ——— iron, for locomotives, 612
——— ——— Mitis, 2273
——— ——— pickle for, 2345
—— —— shrinkage of, 2345
—— —— —— steel, for locomotives, 609
——— ——— steel, tests of, 271
——— ——— to repair, 2344
——— ——— weight of metal, compared with wood patterns, 241
Castle nuts, British standard, 1047
Catalytic sulphuric acid for accumulators, 1879
Catenary, 35
——— ——— trolley construction on electric tramways, 686
Caulking hammers, 996
——— ——— pieces and blades for Parsons' steam turbines, 1564
Ceiling joists, 341
Ceilings, expanded metal suspended, 346
Cellar drainer, Willcox-Penberthy, 1151
Cells, battery, dry, 1878
Celluloid, flexure of, 263
———, rendering incombustible, 2378
Cement, 'Bareau,' 400

CHA

Cement belt joint, 837
——— ——— concrete, 395
——— ——— gun, 400
——— ——— iron pipe, 2360
——— ——— joints for water mains, 1133
——— ———, Keenes', 401
——— ——— mortar, 391
——— ——— ——— Portland, tinting, 394
——— ——— Portland, 402
——— ——— refractory, 431
——— ——— ——— ——— specification for, 429
——— ——— Roman, 401, 431
——— ——— testing machines, 403
Cements, 401, 431, 2360
———, plastic, 2362
Centering of arches, 522
Centigrade-Fahrenheit conversion table, 183
Centre of buoyancy of ships, 1976
——— flotation of ships, 1976
——— gravity, 115
——— oscillation, 123
——— percussion, 123
Centreless grinding, 1012
Centrifugal fans, 2129, 2252
——— ——— ——— for cupolas, 2252
——— ——— ——— ——— smiths' fires, 2252
——— ——— force, 123
——— ——— pumps, 1154, 2198
——— ——— ———, classification of, 1155
——— ——— ——— Mather & Platt, 1161
——— ——— ——— ———, packing for, 1157
Chain belts, 840
——— cables, tests for, 269, 270
——— gearing, 863
——— ——— Association of British Driving Chain Manufacturers, 863
——— ——— centre distance between shafts, 864
——— ——— clearance, 865
——— ——— desirable conditions for, 863
——— ——— disposition of drives, 865
——— ——— erection, 865
Chain gearing lubrication, 865
——— ——— maintenance, 865
——— ——— roller type, Association standards, 866, 868
——— ——— ——— ——— cutter forms for, 866
——— ——— wheels for, 864
——— grate stoker, Babcock & Wilcox, 1784
——— ——— Bennis, 1788
——— ——, Gunter's, 141, 2381
——— helice pump, 1140
——— loads, safe, 280
——— lubrication, 865
——— ——, Morse, 868
——— or link belts, 840
——— rings, 280
——— ——, surveying, Gunter's, 141, 2381
——— Westinghouse rocker joint, 868
Chaining, 141
——— over sloping ground, 145
Chains (*see* Cables)
———, crane, 794
——— driving, 863
——— iron, strength of, 278
——— precautions in the use of, 282
——— proportion of rings for standard short link, 281
——— railway coupling, 628
——— strength of 278

CHA

Chains, Westinghouse rocker joint, 868
Chamber, flushing, capacity of, 1251
Chambers for cold storage, 1119
Chance Bros. lighthouse optical apparatus, 1353, 1354, 1355, 1356, 1357, 1358, 1359, 1360
Channel curves, 1369
———, demarcation of, by buoys, 1351
——— training works, 1368
Channels, British standard, 318
———, flow of water in, 1190
——— velocity of water in, 1190
Charcoal iron lapwelded boiler tubes, 1425
———, wood, 1781
Charging accumulators, 1880
Chemical elements, melting points of, 187
——— purification of water, 1297
——— treatment of sewage, 1253
Chemistry, electro, 1877
Chicago electric tramway rail bond, 686
Chilian mills (mining), 2218
Chimney area, boiler, 1412
——— gasworks, 2072
——— foundations, safe load on, 493
——— gases, velocity of, 518
——— shafts, stability of, 515
Chimneys, 515
——— dimensions of, 515
——— draught required for, 520
——— effective area of, 517
——— house heating, 2114
——— Kent's table of sizes, 519
——— rate of combustion, etc., 519
——— scaffolding of, 516
——— tall, 516
——— temperature of flues, 518
China clay, 421
Chisels, cold, 998
Chloride Electrical Storage Co.'s Ironclad-Exide batteries, 696
Chordal pitch of wheels, 872
Chords of a circle, 49
——— tangential angles for, 560
Chrome nickel steel, 2285
Chromite bricks, 426
Chucks, magnetic, 567
Chuff bricks, 422
Circle, 40
——— angles at circumference of, 20
——— equation to, 34
——— involute of, 40
Circles, angles of arcs of, 49
——— areas of arcs of, 41, 48
——— segments of, 49, 56
——— chords of, 49
——— circumferences and areas of, 41
——— lengths of arcs of, 49
——— radii of arcs of, 49
——— segments, chords, and zones of, 49
——— zones of, solidity of, 49
——— surfaces of, 49
Circular reservoirs or bins, reinforced concrete, 464
——— saws, 977
——— sewers, 1245
——— spindles, 26
Circulating pumps, condenser, 1617
Circumference of a wheel, to compute, 873
——— an ellipse, 29
——— circle, angles at, 20
——— semicircle, angles at, 20

COA

Circumferences and areas of circles, 41
Circumferential figures, 116
Clapboards, 372
Clark & Stanfield's floating docks, 1342
Clark's formula for locomotive traction, 578
Clarke, Chapman & Co.'s steam pump, 1141
——— marine water-tube boiler, 2020
——— superheater, 1486
——— Woodeson boiler, 1486, 2020, 2022
Clay, china, 421
Clays and earths, 421
Clean files, to, 2376
Cleaners, boiler, mechanical, Hulburd's, 1457
Cleaning-compositions, 2367
Clearance surfaces, steam cylinder, 1593
Clerk-Lanchester gas-engine starter, 1660
Clinograph, Harrison's, 178
Clock dials, size of, 2377
——-type springs, 935
Clocks, electric, and time service, 1953
Clutches, 854
——— Benn, 857
——— Coil, 859
——— Disc friction, 859
——— Ferodo friction surfaces, 861
——— Hele-Shaw, 855
——— Johnson, 857
——— Magnetic, 860
——— Trip centrifugal, 858
——— Weston, 855
Clyde bridge, 529
CO_2 Recorders, 1768
Coal, 2156
——— analysis of, 1774
——— briquette, 1781
——— classification, 2156
——— calorific value of, 1774, 1775
——— combustion and smoke, 1782
——— in marine boilers, 2012
———, composition of, 1773, 2070
——— consumption and chimney dimensions, 517
——— in locomotives, 616
——— marine boilers, 2013
——— ships, Admiralty coefficient applied to, 1986
——— conveying plant, pneumatic, 824
——— conveyors, 821
———, cost of getting, 2178
——— cutters, 2175
——— 'Hardiax,' 2176
——— cutting, cost of, 2175
——— distillation, products of, 2071
——— dust, 2202
———, evaporative power of, 1776
——— gas, calorific value of, 1828
——— fuel, 1829
——— furnaces, 2254
——— purification of, 2076
——— high temperature distillation of, 1777
———, impurities in, 1775
——— low temperature distillation of, 1777
——— mine legislative enactments, 2154
———, mines, electric signalling in, 2203
———, pulverised, fuel, 1795
——— saving by control of boiler plants, 1468, 1469

COA

Coal, specific gravity of, 2157
—— storage, 1775, 2065
———— loss of thermal value by, 1775
———— gasworks, 2065
——, stowage space for, 1775
—— tar fuel, 1813
——— paint, 2357
—— washing, 2207
——, weight of, 2157
Coaling appliances, 1338
Coalite, 1777
Cobaltron steel alloy, 2286
Cochran boilers, 1480
Cockburn's geared turbine (steam) control, 2012
———— throttle valve, 1461
Cock handles, proportions of, 1054
Cocks, injection, condenser, 1629
———, Willcox fullway, 1465
Coefficient, beam, value of, 259
———— gravity, 122
Coefficients, Admiralty, 1985, 1986
———— applied to coal consumption, 1986
———— displacement, ships, 1974
———— lubricant, 898
———— of friction, for leather belts and ropes, 840
———— table of, 120
Coffer or Puddle dams, 503
Coffering of mines, 2171
Coignet reinforced concrete piles, 494
———— system, 447
Coil clutch, 859
Coils, loading, for telephone circuits, 1960
Coke, 1469, 1777, 2070, 2071, 2157
—— as a boiler fuel, 1469, 1778
——, composition of, 2070
—— used in gas manufacture, 2071
Coke-oven gas, 1829
Coking stoker, Bennis, 1788
Cold chisels, 999
Cold, greatest artificial, 185
Cold-air refrigerating machine, 1099
——-punched nuts, weight of, 241
—— sawing, 975
—— solder, 2343
—— storage, 1109
———— rooms, piping, 1112
Cole, Marchent, and Morley, Diesel engines, 1671
Collar-beam roofs, 329
Colliery bricks, 422
———, electric cables for, 2197
——— ropes, 2192
—— —— tubs, 2186
Colour of smoke, 1784
Coloured glass, absorptive powers of, 1360
Colouring metals electrically, 2313
Colouring Portland cement mortar, 394
Colours, 202
——— of different temperatures, 189
——— of tempered steel, 988
Columbia rail bond, 687
Columns, 299
———— cast iron, 302
———— reinforced concrete, 460
———— safe loads on, 460, 461

COM

Columns, safe load on, 494
———— strength of, 302
Combination of colours, 202
Combinations, 14
Combustion, 1767
———— —— and heat, 193
———— value of usual gaseous fuels, 1824, 1846
———— —— heat generated by one pound of carbon, 191
————, internal, turbines, 1698
———— of carbon, 194
———— —— coal, and smoke, 1782
———— in marine boilers, 2012
———— fuel, draught required for, 520
———— gas, weight of air or oxygen necessary for, 1826
———— rate of boilers, 1412
———— for different draught pressures, 519
————, spontaneous, in mines, 2203
———— table of heat of, 192, 194
Commercial aeroplanes, 1754
———— efficiency of direct-current motors, 1904
Commissions, secret, 2443
Common bricks, 422
———— logarithms, 84
———— rafters, 331
Commutation pole motors, direct-current, 1908
Commutator, single-phase, motors, 1913
Compass, prismatic, 160
———— variation, annual, 162
———— to find, 161
Complement of an angle, 60
Composition, Angus Smith's, 2358
———— Harris' boiler, 1440
———— nails, weight of, 243
———— of gases, 2070
———— —— grinding wheels, 1003
Compound and simple locomotives, cylinders of, 591
———— dredgers, 1347
———— —— engines, steam pressure in, 1993
———— interest table, 3
———— pendulum, 122
———— steel girders, 315
Compounding locomotives, 591
Compressed-air drilling plants, 2165
———— furnace, Bennis, 1785
———— hammers, 1027
————, horse-power, 1076, 1087
———— pumping by, 1169
———— —— range of temperature for refrigeration, 1100
———— water-raising by, 1169
—— —— gas, heating, 986
Compression, air, 1075
———— motor-car, 1728
———— —— of materials, resistance to, 247
———— system of refrigeration, 1097
Compressive strength of concrete, 398
Compressors, air, 1076
————, Belliss, 1081
———— —— Brotherhood, 1077, 1078
———— —— —— Fullerton, 1079
———— —— —— power required to drive, 1076
———— Westinghouse, 1081

COM

Compressors for drilling plant, 2163
——————, indicator diagrams of, 1103
—————— refrigeration, 1099
Computation, Simson's rule for area, 143
Concave lens, 203
Concrete, 395
——— blocks, 400
——— breeze, 395
——— bridges, reinforced, cost of, 2416
——— cement, 395
———, condensation on, 393
——— dams, 1194
———, effect of sea water on, 398
——— expanded steel, reinforcement for, 344, 347, 349
——— floors, 753
——————— deadening noise through, 753
——————— dusty, treatment of, 399
——————— oil stains on, 753
———, leakage through, to prevent, 399
——— lime, 395
——— mixing, 396
——— piles, reinforced, 460, 462, 496
——————————— Coignet, 494
——— pipes, reinforced, 464, 1192
———, placing, 397
——— prevention of cracking and scaling of, 399
——— proportions for, 395
——— raw materials for, 395
——— reinforced, 395, 435
——————— floors, 448
——————— roads, 731
——— roads, 729
———, rust prevention in, 399
——— ships, 2059
——— slag, 395
———, strength of, 398
——— tiles, 409
———, volume of, 397
——— waterproofing of, 399
——— weight of, 211, 398
Condensation on concrete, 393
Condensed steam, measurement of, 1628
Condenser and air-heater, 2123
——— air pumps, 1617
——— barometric, 1623
——— circulating pumps, 1617
——— ejector, 1622
——— injection cocks, 1629
——— refrigeration, 1099
——— tube packing, 1616
——— tube plates, 1615
——— tubes, 1615
——— Weir-uniflux, 1620, 2031
Condensers, 779, 1613
——— gas, 2065
——— jet, 1617
——— steam, 1613
——— surface, 1615
Condensing plant, Weir, 1620, 2031
Conductivity of aluminium, 1930
——— wires, electric tramway, 686
Conductor rail, electrical, leakage, 669
Conductors, aluminium, 1930
——— armouring of electric light, 1862
——— currents in, 1856
——— electrical, aluminium and copper, 1931
——— Henley's, 1873

COO

Conductors jointing electric light, 1866
——— lightning, rules for, 1955
——— testing, 1867
——— thickness of dielectric of, 1861
Conduits, electrical, 1871
——— dimensions of steel, 1873
——— Simplex fittings, 1871
——— steel, British standard specification for, 1872
——— tramway, 694
——— expanded steel concrete, 349
Cones, Seger, 2267
Conic frustum, 116
——— sections, 27
Conical coverings, reinforced concrete, 466
——— pendulum, 123
Connecting pipes of steam indicator, 1409
——— rings, strength of, 280
——— rods, motor car, 1726
Connections of iron pipes, 235
Considère reinforced concrete system, 447
Consolidated Pneumatic Tool Co.'s Boyer long stroke hammer, 994
——————————— giant drill, 995
Constantan alloy, 2329
Construction cost of railways, 548, 653, 2427
——— of breakwaters, 1325
——————————cost of, 1324, 2413
——— lighthouses, cost of, 1355, 2424
——— overhead electric tramways, 684
Constructions, geometry, 18
Consumption of coal in locomotives, 616
——————————— marine boilers, 2013
——— gas per head of population, 2064
——— oil in locomotives, 616
——— steam, 1400, 1579
——— typical, 1403
——— water for domestic purposes, 1298
——————————— in locomotives, 616
Content sizes of timber, 364
Continental canals, 1375
Contract for works, engineer's rights and powers, 2445
Control, Cockburn's steam turbine, 2012
——— gear, automatic, electrical, 1917
——— levers (railway signals), 637
———, tramway motor, 682
Conversion by slide-rule gauge points, 109
——— factors for refrigeration, 1122
——— of degrees Centigrade into Fahrenheit, 183
Converters, motor, Peebles, 1896
——— rotary, 'G.E.C.,' 1894
Convex mirrors, 203
——— or shell surface, 116
Conveyors, 819
——— and elevators, gas works, 2076
———, belt, 819
——— coal, 821
——— D.B., 821, 822
———, pneumatic, 824
Cooking, electric, 1957
Cooling brake rims, 129
——— compounds for hot bearings, 2366
——— machine, air, 1099, 1891
——————— —, water, 1107
——— motor-cars, 1731
——— towers, Hudson's, 1527

COO

Cooling water for condensers, 1613
——— internal combustion engines, [1661
'Cooloricid,' 1593
Copings, 377
Copper, 2314
——— balls, weight of, 218
——— bars, weight of, 220
———, electrolytic, 263
——— impurities in, 2314
——— jointings, seamless soft, Hulburd's, [601
——— melting, 2265
——— furnaces, 2256
——— nails, weight of, 242
——— ore, 2159
——— pipes, weight of, 229, 236
——— plates for locomotive fire-boxes, 610
——— rivets, weight of, 243
——— rods for locomotive stay-bolts, 610
———, rolled, weight of, 220
——— sheet and bar, weight of, 215, 220
——— steam pipes, 1432, 1435
———, tensile strength of, at different temperatures, 251
——— tubes for locomotive boilers, 610
——— feed pipes, 611
———, seamless, weight of, 236
——— *v.* aluminium for electrical conductors, 1931
———, weight of castings in, 241
——— welding, 2299
——— wire, hard-drawn, strength of, 255
——— weight of, 241
——— wires, resistance of, to alternating currents, 1922
Copying-processes, 2370
Corbelling, 377
Cordite explosive, 2349
Core boring, 2161
Cork insulation for cold storage, 1110
———, Anderson, Thomas, Ltd., 1110
Cornish and Lancashire boilers, 1470
——— pumps, 2198
Corridor trains, weights of, 619
Corrosion in boilers, preventives of, 1441
——— Cumberland system of preventing, 1441, 1527
——— of iron, 252, 2309
——— metals, 252
——— soft steel, wrought iron, and nickel steel, 252
——— steel, iron, and Delta metal, 252
——— zinc and lead water pipes, 418
Corrugated furnaces, 1421
Corrugated-iron galvanised sheets, 308, 311, 373
——— roofing, 308, 311, 373
———, strength of, 311
Cosines, table of, 63
Coslettising iron, 2312
Cost of boring (mining), 2413
——— breaking ground, mining, 2180
——— breakwaters, 1324, 2413
——— bridges, 2414
——— canals, 1373, 2417
——— in United Kingdom, 1375
——— lateral, 1373
——— coal cutting, 2175
——— coal mining, 2178
——— cotton mill electrical driving, 772

COT

Cost of docks, 1327, 1339, 2419
——— drainage, 2420
——— dredging, 1348, 2224, 2420
——— plant, 2420
——— drilling rock, 1350
——— electric power stations, 2421
——— electrical energy, 1898
——— engineering factories, 2422
——— esplanades, 2422
——— excavating, steam, 2431
——— floating docks, 1339
——— gas purifiers, 2080
——— gasworks, 2064, 2422
——— goldmill equipment, 2218
——— graving docks, 1339
——— harbours, 2423
——— heating, 2424
——— impounding reservoirs, 2435
——— irrigation, 1277
——— landing slips, 2424
——— lateral canals, 1373
——— lifting by hydraulic power, 1128
——— light railways, 654, 2429
——— lighthouses, 1356, 2424
——— lighting, gas and electric, 2425
——— locks, 2426
——— London motor 'buses, working, 1735
——— marine piers, 2426
——— milling, gold, 2218
——— mining operations, 2182
——— paving, street, 735
——— quay walls, 1331
——— railways, 548, 653, 2427
——— reinforced concrete bridges, 2417
——— reservoirs, 2435
——— river canalisation, 1373
——— regulation, 1371
——— roads, 705, 2429
——— rock removal, subaqueous, 1350
——— roofs, 2430
——— scraping water mains, 2436, 2437
——— sewage works, 2430
——— sinking mining shafts, 2169
——— steam excavating, 2431
——— steel bars, estimating, 761
——— streetlighting, 2426
——— paving, 735
——— surface tarring roads, 725
——— tanks, 2431
——— telephones, 2431
——— tramway working, 693, 2433
——— tramways, 677, 2432
——— tunnels, 2433
——— underground haulage, 2188
——— water towers, 2433
——— waterworks, 2435
——— working electric tramways, 693, 2433
——— English railways, 653
——— motor omnibuses, 1735
Cotangents, table of, 63
Cotton machinery, power required for, 771
——— mill boilers, 769
——— mills, 766
——— costs of electrical driving, 772
——— horse-power required for, 771
——— Lancashire, machinery in, 770
——— machine sizes, 774
——— ropes, 849
——— splicing, 851
——— silicate, 1109

COT

Cotton yarn measurement, 770
Counterbalancing locomotive driving-wheels, 595
Country roads, 718
Couple roof, 329
Couplings, 928, 1063
——— flexible, 928
——— muff, 1063
——— pipe, for automatic brake, 634
——— railway, 628
Course, damp, in walls, 376
Coverings, Crown boiler, 1439
——— domes and conical, reinforced concrete, 466
——— roof, 326
——— steam pipes, loss of heat from, 1437
——— relative value of, 1438
Cracks in metal, repair of, 2378
Crane-Bennett steam traps, 1522
——— valves, 1461
——— bearings, 794
——— brakes, 796
——— chains, 794
——— electro-lifting magnets, 799
——— gearing, 794
——— hooks, 795
——— ropes, 794, 805
——— black steel wire, 256
——— shafts, 794
——— valves, 1461
Cranes, 783
——— breakdown steam, 790
——— derrick, 789
——— electric, 784
——— electrical equipment of, 798
——— floating, 1337
——— general data of, 792
——— notes on, 783
——— giant, 793
——— Goliath, 786
——— hand, 783
——— hydraulic, 783
——— locomotive, 789
——— overhead travelling, 784
——— quay, 1336
——— shipbuilding, 791
——— structures, 792
——— tower, 791
——— travelling, 784
——— wharf, 790
Cranetilt steam traps, 1522
Crank axles of locomotives, 594, 606
——— chamber, lubrication of, 909
——— pin, diameter of, 923
——— shaft alignment, 1591, 1676
——— shaft-bearing lubrication, 910
——— shafts, 925
——— of Diesel engines, 1675
——— motor-car engines, torsional vibration in, 1724
——— paddle steamers, Bureau Véritas rules, 927
——— screw steamers, Bureau Véritas rules, 925
——— steamers, Lloyd's rules, 924
Cranked gimbal dial, Stanley's, 156
Cranks, motor car, 1723
Creosote, British standard, 371
——— oil, 370

CUR

Creosoting, 369, 538, 728, 740
——— plants, 369
Crewe electric railway signals, 643
Cribs, 505
Crimp and Bruges' formula for discharging capacity of sewers, 1245
Critical velocity, irrigation canals, 1275
——— in rivers, 1368
Crockatt, W. & Sons' Simplex boiler tube brushes, 1459
——— valve reseaters, 1464
——— water gauges, 1503
Crompton's alternators, 1888, 1889
——— D.C. motors, 1904
——— induction motors, 1911
Cropping machines, power for, 974
Crosby feed-water regulator, 1452
——— indicator (steam), 1409
Crossings, railway, leads and angles of, 556
——— level, 660
——— rule for leads of, 559
——— tables and leads of angles of, 558
——— tramway, 677
Crossley's gas engines, 1643
——— oil engines, 1690
——— Premier' gas engines, 1650
——— suction gas plant, 1836, 1842
Crossovers, 548, 677
——— Hadfield's, 677
Cross sections of belts, 833
Croton dam, the, 1292
Crotorite bronze, 2323
Crowds, weight of, 135
'Crown' bond for electric tramway rails, 687
——— coverings for boilers, 1439
Croydon street lighting, 2426
Crucible melting furnaces, 2255
Crucibles, 430
Cruickshank Smith, value of paints, 414
Crushing mills, 775
——— strength of bricks, 423, 428
——— timber, 261
C.T.S. cable, 1865
Cube roots, table of, 72
Cubes, table of, 72
'Cuirass' paints, 2354, 2356
——— roofing, 2357
Culvert, discharge from submerged orifice of, 1245
Cumberland electrolytic process for preventing corrosion, 1441, 1527
Cupolas, 2251
——— centrifugal fans for, 2251
Cupro-nickel alloys, 2328
Current, alternating, motors, 1909
——— meters, 1184, 1367
Currents, alternating, 1919
——— in conductors, laws of, 1856
Curvature, radii of, railway rails, 556
Curve, logarithmic, 35
Curves, canal, 1384
——— cycloidal, 33, 35
——— differential coefficients of, 16
——— equations to, 34
——— of displacement of ships, 1975
———, radii of, table of, 561
——— railway, 555, 556, 559
——— crossing, 558
——— ranging, 559
——— resistance of, 579

CUR

Curves, railway, setting out by offsets, 560
——— superelevation of outer rail for, [555
——— tables for calculating, 561
——— transition, 564
Cutter dredgers, suction, 1347
Cutters, coal, 2176, 2177
———, the 'Hardiax,' 2176, 2177
———, milling, 945
——— speed of, 945
——— pitch of teeth of, 949
——— tube, 998
——— wood, sharpening angles of, 990
Cutting edges of drills, 952
——— electric arc, 2308
——— lubricants, 993
——— machines for bolts and nuts, speed of, [974
———, metal, 939
———, oxy-acetylene, 2300
——— speeds of lathe tools, 991
——— tools, angles of, 990
——— tempering, 980, 984, 988
Cuttings, railway, walls for, 508
——— to determine volume of earth in, [479
Cyanogen, 2081
Cycle engineers' screw threads, 1041
Cyclic variation recorder, Mirrlees, 1679
Cycloid, 33
——— to construct, 21
Cycloidal curves, 33
——— teeth, 879
Cyclostyle, 2371
Cylinder area ratios (marine engines), 1992
——— bridge piers, 529
——— diameter (marine engines), calculation of, 1994
——— ratios, 1589
——— of marine engines, 1992
——— sinking by pneumatic process, 498
Cylinders, allowable pressure, in, 277
——— engine, 592, 1992
———, hydrant hydraulic, thickness of, 1130
———, for foundations, 498
——— of compound and simple locomotives of equivalent power, 591
——— locomotives, 591
——— gas and oil engines, lubrication of, 909
——— hydrostatic presses, thickness of metal of, 1237
——— locomotives 592
——— marine engines, 1992, 1994
———, sinking by pneumatic process, 498
——— locomotive, 2 and 4, relative areas of, 591
——— steam, lubrication of, 909
——— thick, allowable pressure in, 277
Cylindrical iron boilers, marine, length of, 2014
——— diameter of tubes of, 2016
——— sewers, brickwork for, 1288
——— valves for locomotives, 592

D

D.A. (acetylene), 1354, 1360, 1827, 2096
——— rail welding, 688
Daimler (Knight) motor-car engines, 1717
Dam, Assouan, 1294

DET

Dam, Croton, 1292
——— Vyrnwy, 1292
Dampcourse, 376
Dampness in walls, to remedy, 407, 2358
Dams, 503, 1184, 1290
——— balk, 505
——— coffer, or puddle, 503
——— design of, 1186
——— earth, 1184, 1290
——— masonry, 1184, 1290
——— Molesworth's rules for, 1290
——— puddle, 503
——— Rankine's rule for, 1290
——— reinforced concrete, 1184
——— rock-fill, 1184
——— spillway, 1187
——— stability of, 1186
——— timber, 1184
Danish regulations for working lifts, 1239
Davey-Paxman Economic boiler, 1428, 1479
——— Essex boiler, 1478
——— gas engines, 1647
——— portable engines, 1542
——— positive valve gear engine, 1532
Dawson, Philip, tensile strength of copper, 251
Day, C., on tar fuel for Diesel engines, 1817
Daylight, artificial, 2146
D.B. patent conveyors, 821, 822
Deacon water meter, 1314
Dead-weight of ships, 1983
Deals, standards of, 364
Decimal equivalent of fractions, 105
Decimals of a £, to reduce shillings to, 105
Decking, expanded steel concrete, 347
Decomposition of light in the spectrum, 202
Deep mine shafts, 2175
——— wells, water-raising from, by compressed air, 1169
Deflection of beams, 299, 327, 459
Degree, length of, in latitude and longitude, 163
Degrees of temperature, conversion of, 183
——— value of, 186
Deighton furnaces, 1421
Delta metal, 248, 249, 252, 898, 2058, 2323, 2324, 3227, 2332, 2333, 2339
——— corrosion of, 252
Density, change of, by heat, 200
Depositing floating dock, 1341
Depreciation, electrical machinery, 1901
——— of plant and machinery, 757
Depth of keystones for arches, 521
Derbyshire iron, 2275
Derrick cranes, 789
Design of ball bearings for big loads, 902
——— engines, 1589
——— locomotives, 575
——— propellers, 2058
——— reinforced concrete structures, 449
Designs, registration of, 2409
Despatch tubes, pneumatic, 1085
Destructors, refuse, 1804
——— Heenan, 1804
——— Horsfall, 1806
——— Pontypridd, 1804, 1805
——— Rotterdam, 1805
Details of permanent way, 539, 546, 549
Detectors, ground, 1927
Detonators, 2167, 2350

Development of water-power, 1175
Dewar, greatest artificial cold produced by, 185
Dexine sheets, steam joints, 1436
——— valves, 1152
Dexonite, 1968
Deydol, distemper, 415
Deydolene, 415
Diagram factor (steam indicator), 1993
——— of steam indicator, to interpret, 1407
Diagrams, indicator, of compressors, 1103
Dial, cranked gimbal, Stanley's, 156
Dials, clock, size of, 2377
Diameter of axles, 922, 925
——— crank pins, 923
——— marine engine cylinders, 1994
——— rivet holes, 303
——— shafting, 920, 922
——— steam main for heating, 2105
——— tubes of cylindrical marine boilers,
——— wheels, 872 [2016
Diamond rock-boring, 2161
Diaphragm gland loss in steam turbines, 1566
——— of theodolites, 152
——— valve for railway signals, 636
Dick's balata belting, 831
Dielectric strength of an insulator, 1969
———, thickness of, in conductors, 1859
Diesel engines (*see* Oil engines, Diesel)
Differential calculus, 14
Dilatation by heat, 200
Dimensions of bullhead rails, 534
——— cast iron pipes, 228
——— chimneys, 515
——— flat-bottomed rails, 536
——— hoop iron, 240
——— output, and weights of Diesel marine engines, 2054
——— Paxman Essex boilers, 1478
——— rails, 533
——— ships, 1973
——— steam boilers and engines, Colt-
Dip of horizon, 147 [man, 1541
Dipper dredgers, 1344
Direct-acting feed pumps, 1141
——— current commutation-pole motors, 1908
——— generators, 1882
———, Mather & Platt, 1884
———, Westinghouse, 1882
———, Witton, 1886
——— motors, 1901
——— efficiencies of, 1904
———, speed regulation of, 1904
——— series-wound motors, 1905
Direct current traction motors, 1908
Disc drum type turbines, 1566
——— friction clutch, 859
——— in turbines, 1567
Discharge of rivers, 1178
——— water from reciprocating pumps, 1138
——— submerged orifice of a culvert, 1245
——— in sewers, 1245
——— through orifices, 1196
——— pipes, 1249, 1297, 1300, 1304, 1306
Discharging accumulators, 1880
Disclosure of secrets, 2443

Discount, 4
Displacement (ship), coefficients of, 1974
——— curves of ships, 1975
Dissolved acetylene, 1354, 1360, 1827, 2096
Distance at which sounds can be heard, 201
——— measurements, 143
——— of objects at sea, 164
——— sun from earth, 164
——— visible from lighthouses, 1358
Distances, spherical, 69
Distemper, Deydol, 415
Distillation of coal, products from, 2071
Distillers, water, 778
Distribution of air, 2127
District Chemical Co.'s 'Suder' welding wire, [2296
Divide a given line, to, 18
——— an angle, to, 20
Diving, 1362
——— bells, 1363
Division plate of turbines (water), 1209
Dock, bolted sectional, 1341
——— depositing floating, 1342
——— gates, 1331
———, Havana floating, 1342
——— offshore, 1342
——— sectional pontoon, 1341
Dock wall, Hull, 1328
——— Liverpool, 1328
——— Manchester, 1328
——— stresses in, 1330
Dock walls, 1330
Docking condition of vessels, 1977
Docks, 1327
——— cost of, 1327, 1339, 2419
——— floating, 1339
——— graving, 1339
——— cost of, 1339
——— offshore, 1341
——— wet, 1327
Domes and conical coverings, reinforced con-
Dorman motor car engine, 1720 [crete, 466
Dorman, Long & Co., tables of I beams, 312
Double-acting force pump, 1136
——— steam engines, horse-power of, 1399
——— floor, 338
——— helical gear curves, 1582
——— gearing, 1581
——— gears, turbine, 1581
——— reduction marine turbine gears, 2009
Dover breakwater, 1324
Dowelling, 389
Dowson gas, 1832
——— Moore producer, 1834
——— producers, 1832, 1842
Doxford Diesel engines, 2046, 2047, 2056
Draft of ships, 1974
——— tube (water turbine), 1220
Drag bar conveyors, 821
Drain pipes, 425
——— comparative value of, 1308
Drainage, cost of, 2420
——— house, 1263
——— road, 720
Drainer, cellar, Willcox-Penberthy, 1151
Drains, flushing, 1250
——— protective distance from wells, 1288
Draught, mechanical, 1791, 2014
———, boiler, 1412, 2014

Draught of ships' boilers, 2014
——— pressures, rate of combustion for, 519
——— required for efficient combustion of [fuel, 520
——— retarder, 599
Draughtsmen, kink for, 179
Drawbars, railway, 628
Drawhooks, railway, 628
Drawing, 175
——— illustrations of materials, 177
——— paper, sizes of, 2399
——— pen, Stanley's patent, 178
———, wire, 2377
Drawing board edge, 179
Drawings for patent specifications, 176
Drawn-wire electric lamps, 1943
Dredgers, compound, 1347
——— dipper, 1345
——— grab or grapple, 1345
——— hopper service, 1348
——— hydraulic, 1346
——— ladder, 1344
——— sand pump, 1340
——— suction, 1346
——— cutter, 1347
Dredging, 1344
——— cost of, 1348, 2224, 2420
——— operations, 1348
——— plant, 1348
——— mining, 2224
——— pump, 1346
——— river, 1370
Dressing, belt, 837
——— ores, 2204
Drifts, 2167
——— timbering, 2168
Drill, giant pneumatic, 995
——— Hardy-Simplex rock, 2164
——— protector, Brown's, 958
——— sizes for tapping, 1060, 1061
———, Van Dorn, 961
——— Westool portable, 960
Drill-jig, quick-change universal, 963
Drilling, 952
——— and blasting rock, 1350
——— appliances, 963
———, diamond, 2161
——— glass, 2374
——— hard steel, 2376
——— machine, vice for, gravity, 963
——— machines, 959
——— power for, 973
——— thrust bearings for, 960
———, mining, 2162, 2181
——— notes on, 957
——— plant (mining), compressed air, 2165
———, power for, 973
——— shot holes, 2162
Drills, 952
——— cutting edges of, 952
———, Firth's speedicut, 953
——— grinding, 954
——— pneumatic, 996
——— portable electric, 960
——— rock, 2162, 2164
——— Hardy-Simplex, 2164
——— speed of, 954
——— twist, 952
———, Morse taper measures, 956
Drive, automatic reversing, for planing machines, 940

Driver's equalising brake valve, 634
Driving belts, 827
——— Tullis on, 838
——— chains, standard, 863
———, Westinghouse, 868
——— electric power, in workshops, 758
——— ropes, 772, 842
——— sizes of, 849
———wheels of locomotives, counterbalancing, 595
Drop-stamp, Massey's, 1028
Drop-valve engine, Galloway, 1538
——— reversing and overwinding gear, Robey, 1534
Drought, effect of, on roads, 721
Drum disc type steam turbines, 1566
Drums, rope, sizes of, 853
Dry battery cells, 1878
——— grinding, 1006
——— measure, 2387
——— purification plant, gas, 2067
Dryers, steam, 1527
Drying and heating, 2122
——— apparatus, timber, 366
——— machinery, 2124
——— of woods, 208
Dual air pump, Weir-Uniflux, 1620
Dubbing for fire-hose, 2150
Ductile brass, 2320
Dummy loss in steam turbines, 1567
Dumpy level, 156
——— adjustment of, 157
——— Casella, 160
Dunbar Scott's auxiliary top and side telescope, 153
Duplex packing, Beldam, 1602
Dura battery cells, 1878
Durability of timber, 363
——— wire ropes, 803
Duralumin alloy (Vickers), 2330
Dust, coal, 2202
Duty of engines, 1404
——— mining stamps, 2217
Dwellings, London Building Act, 378
Dykes, longitudinal, 1369
Dynamics, 119
Dynamite, 2349
Dynamometer, Brotherhood fluid friction, 130
——— fan, 132
——— Froude's water, 130
——— waterpipe absorption, 129

EARTH, angle of repose of, 491
——— dams, 1184, 1290
———, excavation of, 481
——— method of getting, 488
——— polar radius of, 164
——— pressure of, on retaining walls, 508
——— radius of, and distance from sun, 164
——— temperature of, 190
——— transporting, 488
——— volume of, in cuttings, 479
Earths and clays, 421
——— specific gravity of, 211
Earthwork, 479
——— tables, 480, 482
East Coast iron, 2276
East, true, to determine, 162

EBO

Ebonite, sheet and rod, 227
——, specific gravity of, 214
'Economic' boiler, Paxman's, 1428, 1479
Economical speeds of ships, 1986
Economisers, 1524
—— ——, Green's, 1525
—— —— Hudson's, 1525
Economy of fuel in cargo steamers, 1988
—— —— high-pressure steam working, 1404
Eddystone lighthouse, 1355
Edison nickel-iron accumulator, 1882
Edwards air-pump, 1623
Effective area of chimney, 517
Efficiency curves, steam power plant, 1629
—— of boilers, 1465, 1468, 1469
—— electric motors, 1904, 1913
—— engines, 1402
—— impulse steam turbines, 1560
—— motor-car engines, 1729
—— open fire grates, 2103
—— radio-telegraphic plant, 1964
—— rope driving, 850
—— steam boiler plants, 1468
—— steam turbines, 1553
——, thermal, of fuels, 1771
Effluents, sewage, standard of purity, 1262
Egg-shaped sewers, 1248
Egyptian yarn, 768
Ejectair, Hick-Breguet, 1626
Ejector, air pump, Mirrlees-Leblanc, 1625
—— condenser, 1622
—— steam-jet pump, Willcox's, 1508
Elastic fluids, specific gravities of, 215
Elasticity, modulus of, Young's, 263
Electric accumulators, 1878
—— —— acid for, 1879
—— arc cutting, 2308
—— lamps, 1945
—— battery vehicles, 695
—— brakes, 693
—— cables for collieries, 2197
—— circuits and fire streams, 2149
—— clocks and time service, 1953
——, Gent's, 1953
—— Pulsynetic System, 1953
—— conductors, aluminium *v.* copper, 1931
—— Control Co.'s automatic control gear, 1917
—— cooking, 1957
—— cranes, 784, 798
—— drills, portable, 960
—— driving of cotton mills, 772
—— energy, cost of, 1898
—— engineering, 1855
—— furnaces, 2259
—— —— power required for, 2263
—— fuses, 1946
—— heating, 1957
—— installation cables, 1870
—— insulating materials, 1966
—— lamps, 1942
—— lifts, 806
—— light cables, 1857, 1863
—— —— jointing, 1866
—— —— Silvertown, 1857
—— —— testing, 1867
—— carbons, 1945
—— conductors, jointing, 1866
—— fire-risk rules, 1949

ELE

Electric light fire-risk rules, Institution of Electrical Engineers, 1949
—— —— fittings, modern, 2145
—— —— mains, testing, 1867
—— lighting of factories, 2145
—— —— railway carriages, 628
—— locomotives, 668, 2189
—— machinery, British standard for, 1915
—— —— depreciation, 1901
—— measuring instruments, 1935
——, Evershed, 1940
—— meters, 1938
—— specification for, 1939
—— motors, 1901
——, rating of, 1915
—— power, cost of, 1898
—— driving in workshops, 753
—— factor improvement, 1924
—— stations, cost of, 2421
—— precipitation of smoke and dust, 1958
—— propulsion of ships, 1587
—— railways, 668
—— railway signalling, 640
—— resistance pyrometers, 2272
—— resistivity of metals and alloys, 1856
—— signalling in coal mines, 2203
—— supply cables, 1863
—— —— standard sizes of, 1858
—— testing electricity supply mains, 1867
—— time service, 1953
—— traction, 667
——, main line, 669
——, rail-less, 694
—— tramways, 683
—— Board of Trade memorandum, 689
—— regulations for, 690
—— rules, 690
—— cable system for, 688
—— cars for, 689
—— conduit system, 694
—— cost of working, 693
—— equipment of, 683
—— foundation, 676
—— guard wire for, 686
—— overhead construction, 684
—— poles for, 685
—— rail bounding, 686
—— return of, 686
—— welding, 688
—— span wire for, 686
—— trolley wire for, 685
—— trolleys for, 684
—— transformers, 1922
—— transmission, turbines (steam), 1587
—— trucks, industrial, 694
—— units, 1855
—— vehicle equipment of the London Fire Brigade, 2149
—— vehicles, battery, 694, 742
—— ware, 426
—— welding, 2301
—— winding, 808
—— plants, mining, 2191
—— wiring, British standard specification for, 1872
—— Henley system, 1873
—— Simplex steel conduit system, 1871

ELE

Electrically operated points and signals,
——— Crewe system, 643
——— Siemens' system, 646
——— Westinghouse system, 640
Electricity in agriculture, 1958
——— meters, 1938
——— supply cables, 1857, 1863
——— ——— ——— ———for collieries, 2197
——— ——— mains, British standard, [1858
——— *v.* gas, 2088
——— works, refuse destructors, 1804
Electro-chemistry, 1877
——— galvanising, 2310
——— magnets, lifting, 799, 972
——— mechanical brakes, 1916
——— pneumatic railway signalling system, Westinghouse, 640
——— Metals Ltd. flexible coupling, 928, 929
——— ——— ——— rotary drying machines, [2124
Electrolytes, resistivity of, 1877
Electrolytic copper, 263
Electrotypes, steel facing, 2376
Elevators, Giant, mining, 2221
——— grain, 1338
——— hydraulic, mining, 2221
———, mechanical, mining, 2223
——— Ruble, mining, 2223
Ellipse, 28
——— equation to, 34
——— to construct an, 21
Elliptic full-way cock, Willcox's, 1465
Elliston, Evans & Jackson's electro-mechanical brakes, 1916
Elongation produced by stress, 263
Embankments, labour upon, 136
——— ——— slopes of, 489
Emery wheel guards, 1010
———, safety of, 1010
———speeds, 1007
Empire Roller bearings, 904
Energy, electrical, cost of, 1898
——— luminous, 203
——— of a blow, 1023
——— rotating body, 126
Engineering bricks, 422
——— ———factories, cost of, 2422
——— ———, sanitary, 1245
———--Standards Committee's specifications (*see* British Standards)
———works, cost of, 2422
———workshops, 745
Engineers as arbitrators, 2448
——— witnesses, 2443
———, employment of, 2442
——— evidence before committees, 2444
——— fees, 2441
———, legal notes for, 2441
——— status of, 2441
——— liability for negligence, 2444
——— rights and inventions, 2443
——— powers, and duties, under contract, 2445
———, road, legal points for, 704
Engines, aeroplane, 1705
——— A.B.C., 1714
——— Armstrong Siddeley, 1716
——— Cosmos-Jupiter, 1712
——— Gnome, 1709

ENG

Engines, aeroplane, Le Rhône, 1711
——— Napier, 1715
——— production of, 1708
——— Rolls-Royce, 1714
——— Salmson, 1714
——— Sunbeam, 1715
——— Zeitlin, 1711
——— alloys for parts of locomotive, 613
——— back pressure and extraction, 1539
——— bearing pressures, 1590
——— bearings, 1593
——— Coltman steam, 1541
——— cylinders, 591, 1992
——— Daimler (Knight) motor-car, 1717
——— Davey-Paxman steam, 1532, 1542
——— ——— gas, 1647
——— design, 1589
——— ——— of ships, 1992
——— Diesel, 1667
——— ———, crankshafts, 1675
——— dimensions of steam, 1541
——— duty of, 1404
——— economy of high-pressure working, [1404
——— efficiency of, 1402
——— expansions in various types of, 1399
——— failures of parts of gas and oil, 1663
——— flywheels, 1594, 1663
——— frames of, 1592
——— Galloway steam, 1538
——— gas (*see* Gas engines)
——— governor, 123, 1596
——— high-speed Belliss & Morcom, 1539
——— hot-air, 1701
——— kerosene, 1694
——— locomotive, 567
——— ——— ——— power of, 582
——— marine, cylinders of, 1992, 1994
——— metals for marine, 2058
——— motor-car, 1717
——— ——— ——— Aster, 1721
——— ——— ——— Brooklands Standard, 1722
——— ——— ——— Daimler-Knight, 1717
——— ——— ——— Dorman, 1720
——— ——— ——— Napier, 1719
——— ——— ——— Tylor, 1720
——— ——— ——— weight of, 1730
——— ——— ——— White & Poppe, 1721
——— ——— ——— Wolseley, 1717
——— oil (*see* Oil engines)
——— parts, alignment of, 1676
——— Paxman steam, 1532, 1542
——— petrol, rating of, 1729
——— ——— valves of, 1727
——— ——— weight of, 1730
——— pistons, 1604
——— portable Davey-Paxman, 1542
———--, Rider hot-air, 1703
——— Robey high-speed steam, 1536
——— ——— ——— ———, measurements of, 1538
——— ——— steam, 1534
——— speed of locomotive, 581
——— steam expansion table, 1398
——— ——— horse-power of, 1399
——— *v.* oil, 2057
——— Stirling, hot-air, 1702
——— stresses, 1590
——— tests, typical, 1403
——— torsional vibration in, 1724
——— traction, 713

ENG

Engines, triple-expansion, 1993
——— types for various duties, 1529
——— uniflow, 1530
——— water-pressure, 1199
——— steam consumption of, 1405
English Electric Co.'s alternating current generators, 1887
——— Britannia lamps, 1944
——— Diesel engines, 1672
——— direct current traction motors, 1908
——— induction motors, 1914
——— Pelton wheel regulator, [1205
——— lengths, 2381
——— small motors, 1914
——— standard screw thread, 1031
Entrance locks, 1332
Epicycloid, the, 34
Epicycloidal wheel teeth, 878
Equal angle iron, 317
Equation of time, 162
Equations to curves, 34
Equatorial parallax of sun, 164
——— radius of earth, 164
Equilibrium of retaining-walls, 509
Equipment of gold mills, cost of, 2218
Equivalents of fractions, decimal, 105
Erith tunnel dryers for timber seasoning, 367
Erosion of river banks, 1368
Esplanades, cost of, 2422
Essex tubular boiler, 1478
Estimate, railway, House of Commons rules
——— sheet for ships, 1987 [for, 663
——— tramway, House of Commons rules for, 697
Estimating painters' work, 414
Ether, reduction of volume under pressure, 215
Evaporative power of coal, 1776
Evaporation and humidity, 1268
———, annual, 1269
——— boiler, 1412
——— Californian experiments on, 1272
——— factors, 1776
——— from ice, 1273
——— water surface, 1267
———, fuel cost of, 1780
——— losses by, 1271
——— of Cochran boilers, 1480
——— from soil, 1272
Evaporators, 2028
——— Caird & Rayner, 2030
——— for trade liquids, 777
———, Mirrlees Watson Co., 776
——— multiple-effect, 778
——— Row, 2030
——— Royles, 2030
——— Weir, 2031
Everest theodolite, 151
Evershed Electrical Measuring Instruments, 1940
Excavation, 481
———, cost of, 2133
Excavations, slopes of, 489
Excavator machines, 481
Excelsior packing, Beldam, 1602
Excess, spherical, 148
Exhaust steam, heating by, 2111
——— oil separator, 1456
——— pipes, 1434

FEE

Exhausters, gas, 2068
——— Sturtevant, for ventilation, 2131
Exide battery, 696
Expanded Metal Co.'s expanded metal, 344
——— metallic mesh work, 448
——— flooring, 347
——— lathings, 344
——— partitions, 344
——— suspended ceilings, 346
——— steel concrete pipes, conduits, sewers,
——— reinforcement, 344 [349
——— work encasing, 346
Expansion, isothermal and adiabatic, 1637
——— of air by heat, 201, 1070
——— fire bricks, 428
——— steam, 1398, 1992
——— substances by heat, 200
Expansions in various types of engines, 1399
Expenditure, railway, 654
Experimental results, averaging, 111
Explosive signals, sea, 1362
Explosives, 2349
——— mining, 2147, 2349
———, permitted, 2350
Exponential and hyperbolic functions, 103
——— logarithmic functions, 15
Express type water-tube boiler, 2019
Extruded metal, 249, 2324
Extinguishers, fire, 2149
'Eyre' bearing metals for marine engines, 2059
Eytelwein's formula for discharge from submerged orifice of a culvert, 1245
——— water pipes, 1297

FABRIC linings, 826
Facing bricks, 422
Factories, cost of, 2422
——— engineering, 745
——— lighting of, 2144
——— reinforced concrete, 475
Factory and workshop lighting, 2144
——— work, reinforced concrete for, 475
Fahrenheit-Centigrade conversion table, 183
Failures of parts of gas and oil engines, 1663
Fairbairn's rules for diameters of rivets, 303
Falling bodies, 119
Fan dynamometer, 132
Fans, centrifugal, 2129, 2131, 2252
——— cupola, 2251
——— ventilating, 2129
——— wing, 2132
Feed pipes, locomotive, 603, 611
——— pumps, 1141, 1731
——— pumps, Caird & Rayner, 1143
——— Clarke Chapman direct-acting, 1141
——— Weir, 1143
——— water, 1442
——— heaters, 1451
——— Weir, 601, 2032
———, oil elimination from, 1456
——— regulator, Crosby, 1452
——— Warner, 1454
——— regulators, 1452
——— saving of fuel by heating, 1452
——— softeners, 1442
——— softening and purifying, 1442
Fees, arbitrator's, 2449
——— engineer's, 2441

FEE

Feet, decimals of, inches reduced to, 2384
Felt-covered steam pipes, loss of heat from, 1437
—— roofing paint, 2356
—— underlining for roofs, 411
—— wipers for machine slides, 979
Ferodo friction surfaces, 797, 825, 826, 861
Ferrite, 2273
Ferro alloys, 2274
Ferro-concrete, 435
————————, rust prevention in, 399
—— —— —— vessels, Lloyd's rules for, 2060
Ferrox welding wire, 2296
Fibre, 2375
'Fibrent' asbestos cement, 335, 336
———— sheets, 336
———— slates, 336
———— tiles, 336
Field work, astronomy in, 165
Fielding & Platt gas engine, 1648
—— —— —— —— —— starter, 1661
———————— hydraulic riveter, 1241
Files, 998
—— resharpening, 998
—— to clean, 2376
Filters, Heenan air, 1891
———— pulsometer 'Torrent,' 1295
Filtration, 1295
———— of oil, 915
Fine screw threads, British standard, 1033,
Finishes, 'Minerva' machinery, 2354 [1048
Fir beams, breaking weight of, 264
—— girders, 340
—— joists, 341
Fire bars, 1782, 2014
—— boxes, locomotive, 597
—— —— —— —— —— life of, 597
—— bricks, 426
—— —— —— expansion of, 428
—— Brigade, London, electrical vehicle equip-
—— extinction, 2147 [ment of, 2149
—— —— —— —— —— in mines, 2203
—— extinguishers, 2148
—— hose, dubbing for, 2150
—— proof paint, 2357
—— proofing boards, 2370
—— resistance, reinforced concrete, 435
—— —— —— —— standards of, 2147
—— resisting floors, 343, 349, 448
—— —— —— glue, 2364
—— —— —— materials, 349, 2147
—— risk rules for electric lighting, Institution
of Electrical Engineers, 1949
—— streams, 2147
—— streams and electric circuits, 2149
Fireclay bricks, specification for, 428
Fireclays, 427
—— —— —— used on gasworks, 427
Fire grates, open, efficiency of, 2103
Fire-resisting cements, 437
Fires, smith's, centrifugal fans for, 2252
Firetube superheaters, 597
Firth, Thos., & Sons', high-speed drills, 953
—— —— —— —— —— steel for turbine blading,
Fishing beams, 323 [1573
Fittings, boiler, 1497, 1510
———— cast-iron pipe, 234
———— Henley's electric light, 1873
———— hot water, British standard, 2109
———— Simplex electric light, 1871
———— trolley wire, 685

FLO

Five-drum boilers, Galloway, 1489
Flange beams, broad, 314
Flanged rails, 536
Flanges of pipes, 1057, 1131
Flanging, pressures required for, 1414
Flash temperatures, 201
—— —— —— —— —— of oils, 914
Flat bars, rolled aluminium, weight of, 222
—— bottomed rails, 536
—— plates of boilers, 1421
—— rolled iron, weight of, 218
—— —— —— steel, weight of, 220
—— ropes, 2196
—— steel, weight of, 220
Flattened strand ropes, J. & E. Wright's, 2193
Fleming & Co.'s blasting machine, 2350
———— —— —— cement gun, 400
—— —— —— —— —— 'Tarco,' 726
Flexible cords, electric light, 1863
———— couplings, 928
—— —— —— metallic tubing, 604, 996, 2166
———— paint, 2355
———— steel-wire ropes, T. & W. Smith's, 805
Float method of measuring water flowing in
Floating cranes, 1338 [stream, 1183, 1366
———— docks, 1339
—— —— —— —— cost of, 1339
—— —— —— —— list of, 1340
—— —— —— —— notes on, 1341
Floats for measuring water flowing in streams,
1366
Flood discharges, rainfall, 1282
Floor joists, 338, 339
—— —— —— —— ventilation of, 343
—— —— —, single jointed, 338
—— —— —— slabs, 455
—— —— —— space for machine tools, 752
Flooring, asphalt, 407
———— boards, 342
—— —— —— —— —— secret joints in, 342
—— —— —— —, expanded metal, 347
—— —— —— lock-woven mesh, 448
—— —— —— weight of, 372
Floors, 338
———— concrete, 753
—— —— —— —— —— oil stains on, 753
———— double, 338
———— fire resisting, 343, 349, 448
———— framed, 338
—— —— —— of engineering workshops, 750
———— reinforced concrete, 448
———— safe load on, 494
———— single joisted, 338
———— to paint, 2356
———— wall plates for, 339
—— —— —— wooden girders for, 339
Flotation, centre of, of ships, 1976
———— machines, mining, 2209
Flour milling, 765
Flow of air through nozzle, 1072
———— gas in mains, 2090
———— rivers, 1178, 1366
———— sand, 2377
———— sewage, hourly variation of, 1252
———— steam through orifices, 1397
—— —— —— —— —— pipes, 1396
—— —— —— —— —— turbines, 1545
———— water through orifices, 1196
—— —— —— —— —— —— pipes, flumes, and
channels, 1190

Flow sheets, mining, 2209
Flowmeter, ship refrigeration, 1114
Flue cover, asbestos cushioned, 1429
—— gases, composition of, 1767
—— or smoke pipes, British standard, 2109
—— temperature, to determine, 518
Flues, boiler, working strength of, 1415
Fluid friction, Brotherhood dynamometer, 130
Fluids, elastic, specific gravities of, 215
Flumes of turbines, flow of water in, 1190
Flushing chambers, 1251
———— sewers, 1250
Fluxes, 2295, 2340
Flywheels, 842, 1663
———————— gas engine, 1663
———————— rope-driving, table of, 842
Focal length of concave lens, 203
———————— convex mirror, 203
Fog bells, 1362
'Foliac' boiler graphite, 1441
———— graphite paint, 2358
———— lubricating graphite, 911
———— 'Ontar' composition, 2357
Foot-rule, angle measurement by, 2388
Force by screw, 119
——, centrifugal, 123
—— pumps, 1136, 1629
——, tractive, of locomotives, 582
Forced draught, 1791, 2014
———— ———— stoker, Bennis, 1785
————lubrication, 916, 1539, 1730
Forcers, bolt, hydraulic, 1240
Forces, parallelogram of, 118
Foreign horse-powers, 1400
———— measures, 2391
———— money, 2396, 2398
———— weights and measures, 2396
Forests and rainfall, 1285
Forgeable brass, 2321
Forgings, steel, locomotive, 609
———————— tests, 270
Fottinger, hydraulic steam turbine transmission, 1583, 2011
Foundation bolts, 1592
———————— sinking by freezing process, 503
Foundations, 492
———————— bridge, 529
———————— chimney, safe load on, 492
———————— electric tramway, 676
———————— for steam hammers, 1024
———————— freezing process of sinking, 503
———————— of boilers, 1428
———————— retaining walls, 510
———————— walls, 384
———————— on different soils, 493
————————, piled, 494
———————— pneumatic, frictional resistance of, 503
———————— safe load on, 493
———————— bridge, 529
———————— skin friction on bridge, 529
———————— tramway, 676
Founding and casting, 2344
Foundry practice, 2276
Fourth powers, table of, 84
Fox's corrugated furnaces, 1424
Fractions, decimal equivalents of, 105
Fram fire-resisting floor, 448, 449
Framed floors, 338
Frames of engines, 1592

Francis' table of shafting supports, 922
———— turbines (water), 1207
Freezing mixtures, 189
———— process of sinking foundations, 503
———— temperatures, 189
French bolts, 1049
———- nuts, washers, and bolt pins, 1050
———- Government regulations with reference to reinforced concrete, 464
———- locomotives, 590
———- screw threads, 1037
———- standard bolts and nuts, 1051
Fret saws, 979
Friction clutches, 854
————, coefficient of, for leather belts and ropes, 840
———— coefficients, table of, 120
———— in gas mains, 2090
———— lifters for hammers, 1028
———— linings, 861
———— lubricants, coefficients of, 897
———— of air, 1072
———————— per sq. ft. of plane, 1748
————, skin, aeroplane, 1748
———————— of bridge foundations, 529
———— surfaces, Ferodo, 797, 825, 826, 861
————, table of coefficients of, 120
Frictional properties of standard oils, 914
———— resistance of pneumatic foundations, 503
Froude air filter, 1891
———— water cooler, 1107, 1661
———————— dynamometer, 130
Frustum, conic, 116
———— pyramidal, 116
Fuel and costs, electricity works, 1804
——, briquette, 1781
—— calorific values, 1825
—— coal tar, 1815
—— coke, 1469, 1777, 1778, 2070, 2071, 2157
—— coke, as a boiler, 1469, 1778
—— consumption of, in locomotives, 616
—— curve, gaseous, 1631
—— economisers, Green's, 1525
—— evaporative power of, 1776
—— for Diesel engines, 1817
———— petrol engines, 1809, 1810
—— gaseous, air required for complete combustion of, 1847
—— gaseous, for engines, 1824, 1828
—— liquid, 614, 1807
———— atomisers, 1819
———————— burners, 1824
—— oil, combustion of, air required for, 1822
———— for marine engines, 2028
———————— the Navy, 1822
—— oils, properties of, 1815
——, petrol, 1809
—— petroleum, 1807
—— pulverised coal, 1795
—— pumps for tar-oil engines, 1816
—— required for heating buildings, 2114
—— saved by heating feed water, 1452
——, solid, 1773
—— total draught required for efficient combustion of, 520
—— Wallsend-Howden patent liquid fuel system, 1820
—— wood, 1780
Fullagar Diesel engine, 2050

FUL

Fullagar gas engines, 1656
Fuller coal pulverising plants, 1795
—— slide rule, 107
Fullerton air compressors, 1079, 1081
Full-way cock, Willcox's, 1465
—— valves, United Brassfounders and Engineers Ltd., 1460
Functions, angular, 14
—— exponential and hyperbolic, table of, 15
—— hyperbolic, 101
—— logarithmic, 15
—— of two variables, 16
——, trigonometrical, relation to each other, 60
Fund table, annual sinking, 9
Furnace, blast, table of air for, 2253
—— bricks, 429
—— construction, 2264
—— efficiency, 2265
—— firing with liquid fuel, 1818
—— linings, 429
—— ventilation of mines, 2200
Furnaces, 2235
—— and fire-bars of steam ships, 2014
—— annealing, 2254
—— blast, 2236
—— gas from, 1844
—— bulb, 1421
—— case-hardening, 2254
—— coal gas, 2254
—— copper melting, 2256
—— corrugated, 1421
—— crucible melting, 2255
—— electric, 2259
—— heat-treating, 2254
—— lift-out crucible, or pit type, 2255
—— lining for, 429
—— metallurgical, 2235
—— Mond gas, 1842
—— muffle, 2254
—— oil-fired, 2257
—— Radiation crucible, 2259
—— shaft, 2236
—— temperature, control of, 2266
—— tilting, 2258
Fuses, electrical, 1946
——, mining, 2167, 2350
Fusible boiler plugs, 1431
—— metals, 2336
Fusing currents for copper wires, 1946
Fusion of metals, latent heat of, 2265
—— pyrometers. 2267
—— temperatures, 187

GAS

GALLAGHER & CROMPTON'S baffle bridge, 1778, 1779
Galloway aero engine, 1715
—— boilers, 1471, 1489
—— drop piston valve engine, 1538
—— gas engine, 1655
—— reversing rolling-mill engine, 1539
—— superheaters, 1516, 1517
—— uniflow steam engine, 1531
—— water tube boiler, 1489
Galvanised iron corrugated sheets, 308, 311
——, painting, 311
—— telegraph wires, 255
Galvanised roofing, paint for, 311
—— steel-wire ropes, tests, 271
Galvanising, 2309
Ganister bricks, 426
Gardner gas engine, 1652
Gas, 2063
—— acetylene, 1353, 1359, 1827, 1829, 2094, 2291
—— adiabatic expansion of, 1637
—— ammonia, refrigerating effect of, 1101
—— and oil engines, failures of parts of, 1663
—— ascension pipes, 2075
——, blast furnace, 1844
—— buoys, 1352
—— burners, 2087
——, calorific value of, 1828
—— caps of safety lamps, 2202
——, coal, air necessary for combustion of, 1826, 2087
——, calorific value of, 1828
—— coal and coke, composition of, 2070
——, coke oven, 1829
—— coke used as fuel for, 2071
—— composition of, 2070
—— compressed, 986
—— condensers, 2065
—— consumption per head of population, 2064
——, distillation products of, 2071
—— Dowson, 1832
——, dry purification plant, 2067
—— drying by, 2122
—— engines, 1643
—— breakages of parts of, 1663
—— Brotherhood, 1652
—— Browett-Lindley, 1655
—— Campbell, 1645
—— cooling water for, 1661
—— Crossley, 1643
—— Davey-Paxman, 1647
—— Fielding & Platt, 1648
—— fixing, 1664
—— flywheels, 1663
—— Fullagar, 1656
—— Galloway, 1655
—— Gardner, 1652
—— gaseous fuels for, 1828
—— Grice, 1651
—— Hindley, 1647
—— Hornsby & Ruston, 1645
—— Lilleshall, 1653
—— Lindley-Browett, 1655
—— Lloyd's rules for marine, 1698
—— lubrication of, 909
—— marine, 1659
—— National, 1646
—— parts of, 1662
—— Premier, 1650
—— prices of, 1659
—— Rosseline for, 1662
—— Ruston & Hornsby, 1645
—— starters, 1660
—— Tangye, 1651
—— thermal efficiency of, 1659
—— types of, 1643
—— valves of, 1663
—— Vickers, 1647
—— weights of, 1659
—— benzol from, 2082
—— cyanogen, 2081

GAS

Gas exhausters, 2066
—— fired boilers, Kirke, 1846
——, flow of, in mains, 2090
—— high pressure, compressor for, 1078
———— in works, 753
—— holder tanks, 2069
—— holders, 2068
——, hot water supply by, 2122
—— hydraulic mains, 2075
——, impurities in, 2078
——, incandescent burners, 2087
—— isothermal expansion of, 1637
—— lighting of factories, 2144
—— liquor, 2077, 2086
—— mains, 2070, 2075
———, foul, 2075
———— friction in, 2090
———— Pole's formula for, 2090
———— Unwin's formula, 2090
—— memoranda, 2086
—— metering, 1311
—— meters, 1317, 2091
——, Mond, 1838
—— naphthalene, 2081
—— natural, 1828
—— number of feet to produce 1 ton of refrigeration, 1103
—— parliamentary regulations in reference to, 2063
—— petrol air, 2098
—— pipes, 2088
———— British standard, 245
———— threads of, 1042
———— weight of, 228, 2089
—— plant, Mond, 1838
———— suction, Campbell, 1835
———————— Crossley's, 1836
———————— Dowson, 1832
———————— Ruston, 1842, 1844
—— power units, 1635
—— pressures, 2090
——, producer, 1830
———— composition of, 1831, 2072
—— producers, 1832
———— Campbell, 1835
———— Kerpely, 1835
———— Mond, 1838
———— Moore, 1834
—— production, coke required for, 2071
—— purification, 2067, 2076, 2079, 2080, 2081
—— purifiers, cost of, 2080
—— Referee's tests, 2091
—— retort house, 2064
———— governors, 2076
—— retorts, 430, 2064, 2074
————, bench fittings, 2075
———— benches, 2073
————, specification for, 430
—— scrubbers and washers, 2066
—— storage capacity, 2068
—— suction plant, Campbell, 1835
———————— Crossley, 1836
———————— Dowson, 1832
———————— Ruston, 1842
—— tar, 2075
—— testing, 2091
—— *v.* electricity, 2083
——, volume of oxygen and air to burn, 1826, 2087

GEA

Gas washers and scrubbers, 2066
——, water, 1844, 2083
———— producer, 1844
—— works, capital expenditure on, 2064
———— coal storage, 1775, 2065
———— condensers, 2065
———— conveyors and elevators, 2076
———— cost of, 2064, 2422
———— exhausters, 2066
———— fireclays used on, 427
———— grate and chimney area, 2072
———— land required for, 2064
———— mains, 2070, 2075
———— parliamentary, 2063
———— retort house of, 2064
———— temperatures, 2072
———— terms, 2086
Gaseous fuel curve, 1631
———— fuels, 1824
———————— for gas engines, 1828
————————, heat value of, 1828, 1831
Gases and vapours, mass and bulk of, 1636
———— at high temperatures, specific heat of, 191
————, chimney, velocity of, 518
———— composition of, 2070
———— mine, 2199
———— producer, heat values of, 1831
———— properties of, 193
———— specific gravities of, 209, 215
———— specific heat of, 191
Gaskets, metallic, for steam-pipe joints, 1436
Gates, dock, 1331
————, head, 1189
———— sluice, 1232
Gathering-grounds for water, 1295
Gauge glass protectors, 1500
———— glasses, 1502
———— points, conversion by slide rule, 109
———————— table of, for slide rule, 109
————, water, Winn's asbestos packed, 1500
Gauges, limit, 754
———— of railways, 549
————, pressure, 1503
————————, Brotherhood's tester, 1504
————, vacuum, 1504
———— water, 1500
———————— defects in, 1802
———— wire, 2391
Gavey on telephones, 1960
Gear, automatic control, electrical, 1917
———— ratios of motor cars, 1740
————, rawhide, lubrication of, 884
———— Robey drop valve, 1534
———— slide valve, 1605
Geared turbines, 1585, 2008
Gearing, chain, 863
———— helical, 885
————————, strength of, 886
———— Maag, 882
———— mill, 878
———— motor car, 1740
———— Parsons, 2009
———— rawhide, 884
———— Seymour's, resilient, 884
———— spur, 880
———— steel, 884
———— tooth, 871
———— turbine (steam), Parsons, 2009
———— wheel, helical, 885

GEA

Gearing, worm, 890
Gears, double helical, 1581
——— heat-treated, 883
——— non-resonant, 884
——— oil-toughened, 883
——— rawhide, lubrication of, 884
——— reduction, 1581, 2008
—— —— resilient steel, Seymour's 884
———, turbine, 888, 1581, 2008
G. E. C. alternating-current turbo-generator, 1889
——— angold magazine lamp, 1945
——— rotary converter starting and controlling, 1894
——— 'Osram' Lamps, 1944
——— Rotary converters, 1891
——— 'Witton' direct-current generator, 1886
Gees wheel teeth, 888
Gelatine blasting powder, 2349
——— dynamite, 2349
Gelignite explosive, 2349
General Electric Co. (see G. E. C.)
Generators, alternating current, 1887
——————————— turbo, 1889
——————— care of, 1883
—— —— direct current, 1882
——————— ——————, Mather and Platt, 1884
——————— ——————, Westinghouse, 1882
——————— ——————, Witton, 1886
——————— turbo, 1889
Gent & Co.'s electric clocks, 1953
Geodetic formulæ, 172
Geographical measures, 2381
Geometrical progression, 2
Geometry, 18
German belting practice, 832
——————— canals, 1375, 1378, 1386
Giant cranes, 793
——— elevators, mining, 2223
——— turbine (water), Little, 1209
Gilkes' Pelton wheel regulator, 1201, 1203
——— ——— wheels, 1202
——— turbine (water) governor, 1224
——— turbines (water), 1212, 1213, 1225, 1228
Gimbal dial, cranked, Stanley's, 156
Girders, 287, 449
——— Baltic yellow fir, 340
——— boiler, 1422
——— compound steel, 315
——— reinforced concrete, 449
——— riveted, 302
——— safe loads on bearing surface for ends of, 493
——— steel, 315
——— ———, deflection of, 292
——— wooden, for floors, 339
Girder-work, riveted joints in, 302
'Glandoline' packing lubricant, 1602
Glands, water, steam turbine, 1568
Glass and glazing, 412
—— bottles, to divide, 2374
——, coloured, absorptive powers of, 1360
—— cutting, 2374
—— drilling, 2374
—— tubing, to cut, 2374
Glazed bricks, 422
——— tiles, 424
Glazier, constants of labour for, 413

GRE

Glazier's putty, 413
Glazing and glass, 412
——— of lighthouses, 1359
Glue, holding power of, 254
Glues, 2364
Glutinous solutions, evaporators for, 778
Glycerine jelly process of copying, 2370
Gnome aeroplane engines, 1709
Gold and silver tables, 2220
—— milling, 2217
—— mills, cost of, 2218, 2219
——, wire gauge for, 2391
Goliath cranes, 786
Gooch's link motion valve gear, 1611
Goodman, Prof., on ball and roller bearings, 899
——————— conveyors, 819
Goodman's hatchet indicator diagram averager, 1406
Gordon superheater, 1515, 1517
Gordon, J., & Co., pipe lines, 1233
——————— sluice gates, 1232
——————— spear and deflector regulator, 1203
Governor of steam engine, 123, 1596
Governors, Pelton wheel, 1200
——————— relay, 1597
——————— retort house, 2076
——————— turbine (water), 1222
Grab or grapple dredger, 1344
Grade and duty of sluices (mining), 2221
Gradients, railway, resistance due to, 580
Grading of roads, 722
Gradiometer, 157
Grain elevators, 1338
Graphite, 911, 1441
——————— for boilers, 'Foliac,' 1441
——————— lubrication, 911
——————— paint, 2358
Grapple or grab dredger, 1345
Grate area, boiler, 596, 1412
——————— gasworks, 2072
——————— in locomotives, 596
Graving docks, 1339
——————— cost of, 1339
Gravity bucket conveyors, 823
———, centre of, 115
——————— coefficient of, 122
——————— drilling machine vice, 963
———, specific, 208
——————— of elastic fluids, 215
——————— woods, 212, 214
Greases, 2259
Greasing leather belts, 837
Great Britain Ordnance maps, 146
——— Central Railway carriages, 621
——————— locomotives, 568
——————— waggons, 621
——— Eastern Railway carriages, 624
——————— locomotives, 572
——————— waggons, 624
——— Northern Railway carriages, 620
——————— locomotives, 572
——————— waggons, 620
——— Western Railway locomotives, 568
Greek alphabet, 2399
Green's economiser, 1524, 1525
Gresham's hot water combination injector, 605
Grey process broad flange beams, 314

GRI

Grice gas engine, 1651
Grinder, Van Dorn tool post, 1009
Grinding, 1003
——·—— allowances, 1015
——-—— centreless, 1012
——·——, dry, 1006
——·——, examples of, 1015
——-—— internal, 1013
——·——, lubrication, 1006
——·—— machines, 1008
——·—— procedure, 1011
——·—— surface, 1014
——·——, wet, 1006
——·—— wheels, 1004
——·——·——, composition of, 1003
Grindstone speed, 1004
Grindstones, 1003
——·——·——, to true, 2375
'Gripwell' belting syrup, 837
Grizzle bricks, 422
Gromets, asbestos tube, 1616
Grooves for rope-driving, 846
——·——·——·——·——·—— Hart's improved, 850
Ground detectors (electrical), 1927
——·—— glass, to imitate, 2355
——·—— sills, 1369
——·——, sloping, chaining over, 145
Groynes, 1368
Guard wire for electric tramways, 686
——·—— for rope drives, 845
Guards for abrasive wheels, 1010
Guest & Chrimes rotary water meters, 1312
Gun-cotton, 2349
'Gunite' cement, 400
Gun-metal, 2326
——·——·—— tensile strength of, 252
——·——·——, weight of castings in, 242
Gunpowder, 2349
Gunter's chain, 141, 2381
Guyot's steam atomiser, 1819
Gwilt's rule for building walls, 377
Gyration, radius of, 124

HEA

Hard woods, 356
Hardening and tempering steel, 980, 982, 984
——·——·—— high-speed tools, 980
——·——·—— plaster, 2365
'Hardiax' coal cutter, 2176
Hardness numbers, Brinell, 1002
——·——·—— of materials, 1000
——·——·——·—— water, 1298
Hardy Patent Pick Co.'s coal cutter, 2176
——·—— Simplex air-hammer rock drill, 2164
Hargreaves', Hick, Diesel engines, 1676
Harling's clinograph, 178
Harmonical progression, 2
Harris' boiler composition, 1440
Harrison's clinograph, 176
——·——·—— formula for strength of boiler flues, 1415
Hart electrical accumulators, 1879, 1880, 1881
Hart, Thomas, on rope-driving, 850, 851, 852
Hart's improved rope groove, 850
Harvey, L. O., on pulverised coal, 1795
Haswell's table of transverse strength of materials, 262
Haulage, 853, 2181
——·—— canal, 1385
——·—— cost of, 2188
——·—— drums, 853
——·——·——, horse-power required for, 853
——·—— mining, 2181
——·——·—— pulleys, 853
——·—— underground, cost of, 2189
——·—— wire ropes for, 256, 853, 2192
Hauling and winding, ropes for, 2192
Havana floating dock, 1342
Hawsers, Lloyd's tests for, 269
Hay, Maryon & Co.'s turbine governors, 1222
Hayward Tyler & Co.'s hot-air engines, 1704
Head gates, 1189
—— races of turbines (water), design of, 1190
—— required to deliver water through pipes, 1303
Headgears, mining, 2192
Heading joints, 342
Heads for small screws, 1042
Hearths, blast furnace, 2248
Heat, 183
——-absorbed in the metamorphic conversions of combustion of carbon, 191
——-accumulators, 1528
——-and combustion, 192
——-change of density by, 200
——-drop, adiabatic, in steam turbines, 1553
——-, expansion of air by, 201, 1070
——·——·—— or dilatation by, 200
—— generated by combustion of one pound of carbon, 191
——·—— -indicating paint, 898, 2357
——·—— -insulating materials, 431
——·——·——·—— value of roofing material, 334
——-, latent, 191
——·—— loss of, from steam pipes, 1437
——·—— losses in heating buildings, 2104
—— of combustion, table of, 194
——·——·——-superheated steam, 1393
——·—— resisting materials, 349, 426
—— specific, 191

HEA

Heat, specific, of steam, 1394
——— transmission in boilers, 1412
——— through insulation, 1111
——— -treated gears, 883
——— -treating furnaces, 2254
——— treatment of metals, 2254, 2346
——— springs, 935
———, units of, 193, 1391, 2086, 2103
——— value of gaseous fuels, 1828, 1831
——— producer gas, 1831
Heater, Row feed-water, 1451
——— Weir feed-water, 2032
Heating and drying, 2122
——— bearings, 898
——— buildings, 2103
——— boilers for, 2114
——— cost of, 2104
——— plenum system, 2112
——— radiators for, 2117
——— by compressed gas, 986
——— exhaust steam, 2111
——— hot water, 2104
——— steam, 2107
———, cost of, 2424
——— electric, 2122
——— feed water, 1451
——— fuel saved by, 1452
———, fuel required for, 2114
——— horticultural, 2117
——— (industrial) by Mond gas, 1842
——— pipes, British standard, low pressure, 2108
———railway carriages by steam, 630
———surface of boilers, 596, 1412, 2014
——— locomotives, 596
——— superheaters, 1515
———water, 2120
Hedley's mining surveying instruments, 156
Heel-straps of wooden roofs, 332
Heenan air filter, 1891
——— blast-furnace gas cleanser, 2251
——— oil coolers for heat treatment of steel, 2286
——— refuse destructor, 1804
——— water cooler, 1107, 1661
Heenan & Froude's dynamometer, 130
Height of an object, to measure, 145
Heights, table of dip and distance of horizon, 147
Hele-Shaw clutch, 855
Helical gearing, 885, 1581
——— strength of, 886
——— or spiral springs, 608, 931, 1688
——— springs for locomotives, 608
——— tooth-gearing, 885
Helix, screw, to construct, 21
Hematites, 2273
Hemp ropes, strength of, 283
Henderson & Glass' angle and tee iron, 224
——— steel, 225, 226
Hendry's hydraulic mining table, 2222
Henley wiring system, 1873
Hennebique reinforced concrete system, 447
Herbert, Alfred, Ltd., cutters, 949
——— grinding allowances, 1015
——— milling machines, 975
Hexagon nuts and bolts, American, 1045
——— British standard, 1046

HOR

Hexagon nuts and bolts, Whitworth, 1044
Hick-Breguet Ejectair, 1626
——, Hargreaves Diesel engines, 1672
High-pressure compressors, 1078
——— gas in works, 753
——— turbo pumps, 1157
——— working, steam, economy of, 1404
——— speed drills, 953
——— engines, Belliss & Morcom, 1539
——— Robey, 1536
——— steels, 981
——— steel scrap, to identify, 981
——— tool steel, 980, 2254
——— furnaces, 2254
——— temperature distillation of coal, 1777
Highway authorities, 702
——— bridges, loads on, 305
——— statistics, 705
Hind's Rowan's pistons, 1604
Hindley marine gas engine, 1647
Hirn's rope brake, 128
Hodgson fan dynamometer, 132
Hoffmann roller bearing, 904
Hoists, regulations for Danish, 1239
Holden's steam atomiser, 1819
Holding power of glue, 254
Hollow building-blocks, 425
——— cylinders, allowable pressure in, 277
——— ram hydraulic bolt forcer, 1240
——— shafts, 920
——— walls, 376
Holm, Dr., on flash temperatures, 201
Holyhead breakwater, 1323
Hooks, crane, 795
Hoop-iron, dimensions of, 240
——— weight of, 240
Hopkinson-Ferranti stop valve, 1459
Hopkinson's specification of boiler mountings, 1510
——— torsion meter, 133
Hopper service dredging, 1348
Hopwood-Spencer boiler, 1496
Horizon, dip of, 147
Horizontal sun-dial, 173
Hornsby oil engines, 1691, 1693
Hornsby-Ruston gas engines, 1645
Horse-power, aeroplane, frictional resistance, [1748
——— brake, 1400
——— chimney, 517
——— cotton machinery, 771
——— foreign, 1400
——— for haulage, 853
——— formulæ for motor cars, 1730
——— in compressed air, 1087
———, indicated, 1399
——— link belt, 840
——— of aeroplanes, 1748
——— locomotives, 582
——— motor cars, 1730, 1739
——— ore mining, 2219
——— ropes, 847
——— shafting, 919, 921
——— steam engines, 1399
——— water, 1176
——— wheel teeth, to compute, 877
——— required for cupola fans, 2252

Horse-power, required for wood-working machinery, 976
——— to cool air, 1000
——— move plane surface against the air, 1071
——— pump water, 1126, 1127, 1128
——— raise water, table of, 1126
——— work pneumatic-tubes, 1086
———, skin effective, of ships, 1984
——— standard for different nations, 1399
——— transmitted by belts, 829, 831
——— ropes, 847
——— wheels, 877
———, wave effective, of ships, 1984
Horses, power of, 135
'Horsfall' destructor system, 1806
Horticultural heating, 2117
Hose, fire, to preserve, 2150
Hot-air engines, 1701
——— efficiency of, 1704
——— Rider, 1703
——— Robinson, 1703
——— Stirling, 1702
—— bearings, cooling compound for, 2366
—— forgeable brass, 2321
—— water circulation, 2105
——— fittings, British standard, 2109
———, heating by, 2104
——— supply, 2120
Hour angle, to find, 172
House drainage, 1263
——— heating, 2103
——— tubes, pneumatic, 1090
——— walls, 376
Houses, struts between, 507
Howden boiler, 1495
Howden-Wallsend oil fuel system, 1820, 2028
Howden's forced-draught system, 1793, 2014
Howes turbines (water), 1209, 1210, 1211
Hoyt's metals, 2334
Hudson aero condenser, 2123
——— cooling towers, 1527
——— economisers, 1525
Hulburd's cartridge sight-glasses, 1501
——— mechanical boiler cleaners, 1457
——— seamless soft copper jointings, 601
——— 'Servo' steam regulator, 1455
Hull dock wall, 1328
Humidification of air, 2127
Humidity and evaporation, 1268
Humphrey internal combustion pump, 1166
——— magnetic chucks, 967
Hunt synchronous motor, 1913
'Hurcan' building slabs, 401
Hutton's table for rate of combustion for draught pressures, 519
Hyatt roller bearing, 904
Hydraulic bolt forcers, Young's, 1240
——— brake, 129
——— cement, paint for, 2355
——— cylinders, thickness of, 1130
——— dredgers, 1346
——— elevators, mining, 2182
——— gas mains, 2075
——— leathers, 1152

Hydraulic lifts, 1238
——— limes, 391
——— mains, gas, 2075
———, pressure in, 1128
———, size of, 1130
——— mining, 2221
——— monitors, mining, 2221
——— pipes and cylinders, thickness of, 244, 1128
——— ram, 1237
——— riveters, Tweddell's, 1241
——— steam turbine transmitter, Fottinger's, 1583, 2011
——— transmission, 1583
Hydraulics, 1125
Hydro-electric plants, 1228
Hydrogen, 1826
Hydrometer scales, 192
Hydrostatic press, 1237
——— thickness of cylinders of 1237
Hyperbola, 31
——— equation to, 35
Hyperbolic and exponential functions, table of, 103
——— functions, 101
——— or natural logarithms, table of, 100
Hypocycloid, 34
Hypsometric Aneroid, Steward's, 159

I BEAMS, dimensions and properties of, 312
——— safe loads on, 313
Ice evaporation, 1273
—— making, 1107
———plant, 1106
Identification of stars, 164
Ignition, motor car, 1726
——— temperatures, 185, 1772
Igranic Electric Co.'s magnetic clutch, 860
Illuminated buoys, Pintsch's, 1352
Illumination, 2137
———, calculation of, 2142
——— electrical, 2142
——— lighthouse, 1358
——— reflectors, 2140
Immadium alloy, 2322
Impact of bodies, 119, 120
——— on railway bridges, 550
Impounding reservoirs, cost of, 2435
Impulse blades, turbines (steam), 1562
——— of wind, 1072
——— turbines, steam, 1557
Inaccessible objects, to ascertain distance of, 143
Incandescent burners, 2087
——— electric lamps, 1942
——— mantles, 2088
Inches reduced to decimals of a foot, 2384
Inclined plane, 120
Inclines, mining, 2187
Inclining experiment on ships, 1977
Inclinometer, Lister's, 151
Incrustation of water pipes, 1298
Indented bar for reinforced concrete, 448
India, rainfall in, 1285
——— survey maps of, 147

IND

Indian Government tests for steel, 274
Indiarubber & Gutta Percha Co.'s electricity supply cables, 1857, 1866
Indicated horse-power of steam engines, 1399
Indicator (steam engine), 1405
——— card, 1408
——— connecting pipes, 1409
———, Crosby, 1409
——— diagram averager, 1406
———, to interpret, 1407
——— diagrams of compressors, 1103
——— piston, 1409
——— Simplex, 1409
——— stability and trim, of ships, Ralston's, 1979
Induction motors, 1910
Industrial heating, Mond gas for, 1842
Inertia, moments of, 125, 327
Injection cocks, condenser, 1629
Injector, Penberthy, 1505
Injectors, 1505
——— locomotive, 604
——— notes on, 1508
Ink for writing on metal, 2375
Inspection, boiler, 1424
Institution of Electrical Engineers fire-risk rules for electric lighting, 1949
——— regulations for the electrical equipment of ships, 1946
——— Mining and Metallurgy, standards, 2219
Instrument screw threads, 1036
Instruments, electric measuring, 1935
——— mining surveying, 156
——— surveying, 149
Insulated conductors, 1861
———, specification for, 1865, 1870
Insulating materials, electrical, 1966
——— asbestos millboard, 1968
——— Dexonite, 1968
——— Maconite, 1967
——— varnishes, 1966
Insulation, cold storage, 1109
———, cork, for cold storage, 1110
——— of electrical conductors, 1861
———, paper, electrical, Willesden, 1968
——— for cold storage, 1110
——— ship refrigeration, 1117
——— slagwool, for cold storage, 1109
——— transmission of heat through, 1111
Insulator, dielectric strength of, 1969
Integral calculus, 14
Intensity of illumination, 2140
——— for different places, 2140, 2144
Interest, 3
Interlocking steel piles, 499
Internal combustion engines, 1643
——— cooling water for, 1661
——— pump, Humphrey, 1166
——— turbines, 1698
——— stresses, girders, 291
International system metrical screw threads, 1038
Inventions, and engineers' rights, 2443

IRO

Inverted beams, 454
Involute of a circle, 40
——— wheel teeth, 879
Inward-flow turbines (water), 1217
Iron, 2273
——, Admiralty tests for, 267
——— angle and tee, weight of, 224
——— balls, weight of, 216, 218
——, Barff process for protection of, 2312
——— binders, 339
——— boiler tubes, weight of, 1425
——— boilers, 1411
——— bowsprits, tests of, 269
——— calorising, 2313
——— cast, 2276
——— bar, ball, and sheet, weight of, 216
——— flanges, 1131, 1057
——— pipes, tables of, 228, 230, 1307, 2089
——— weight of, 228, 230, 1307, 2089
——— soldering, 2343
——— castings for engines, 2281
——— locomotives, 612
——— chains, strength of, 278
——— columns, cast, 302
——, corrosion of, 252, 2309
——— crankshafts, Bureau Véritas rules for, 925
——— electro-deposition of, 2314
——, ferrite, 2273
——— flat rolled, weight of, 218
——— galvanised, corrugated, 311
——— painting, 311
——— galvanising, 2309
——— hoop, weight and dimensions of, 240
——— masts, tests of, 269
——— nails, weight of, 242
——— paddle shafts, Bureau Véritas rules for, 927
——, pig, 2273
——— pillars, cast, 383
——— pipe cement, 2360
——— pipes, cast, weight of, 228, 1307, 2089
——— soil, 1265
——— water, incrustation of, 1298
——, protection of from rust, 2309
——— railway bridges, 550
——— rings, strength of, 283
——— rivets, weight of, 243
——— rolled, flat, weight of, 218
——— rolled joists, 339
——— roofing, corrugated, 308, 311, 373
——— ropes, mining, 2192
——— rustless, 2313
——, rust-proof coating for, 2309
——— sheet, weight of, 215
——— sheets, galvanised corrugated, 308, 311, 373
——— sherardising, 2313
——— soil-pipes, 1265
——— straps for wood roofs, 332
——, strength of corrugated, 311
——— tee, weight of, 224
——, tensile strength of, at high and low temperatures, 249
——— tests of, Bureau Véritas, 273
——— tubes, boiler, 1425, 1949
——— tyres on roads, 718
——, weight of castings, 241
——— wire, annealed and bright, sizes, weights and breaking stresses of, 254

Iron wire, breaking stresses of, 254
——— weight of, 241
—— wrought, 2273
———————, binders, 339
———————— corrosion of, 252, 2309
———————— tubes, weight of, 231
—— yards, tests of, 269
Ironclad Exide lead battery, 696
Ironstone, 2158
Ironwork, painting, 2353
———, preservative, 2354
——— Syronite paint for, 2353
Irrigation, 1267
——— canals, critical velocity, 1275
———————— water losses from, 1273
——— costs, 1277
——— water, duty of, 1277
Isothermal expansion of gas, 1637
Ivory, to make permanently white, 2374

JACKETS, steam, 1523
Japan, weights and measures, 2397
J.B.R. steel tool shanks, 990
Jenkins' blower valve, 1463
Jenkins, W. J., & Co.'s D.B. patent conveyors, 821
Jet condensers, 1617
Jetties, 1368
Jig-back aerial ropeways, 819
Johnson friction clutch, 857
Jointing beams, 323
——— belts, 836
——— electric light conductors, 1866
——— materials for pipes, weight of, 244
Jointings, copper, Hulburd's, 601
Joints, ball and socket, 603
——— belt, cement for, 837
——— boiler, strength of riveted, 1420
——— cement, for water mains, 1133
——— Dexine sheets for, 1436
——— edge, 342
——— heading, 342
——— house drainage, 1263
——— in boilers, riveted, 1420
——— electric-light cables, 1866
——— leather belting, 836
———, packings, motor cars, 1738
——— pipe, 1130
——— riveted, 302, 304, 1420
———, secret, in flooring boards, 342
——— sewer pipe, 1266
——— steam pipe, 1435
———————— metallic gaskets for, 1436
——— straining beam, 326
——— T, 324
——— tramway rail, 676
——— Universoline paste for, 1436
——— water pipe, 1130, 1306
———, wooden roof, 332
———————, secret, in flooring boards, 342
Joists, bridging, 341
——— camber of, 339
——— ceiling, 341
——— floor, 338
——— floor, ventilation of, 343
——— rolled iron, 340

Joists, wood, 341, 372
Junctions and points, railway, 658
Jute serving, electrical conductors, 1859

KAHN bar for reinforced concrete, 448
Kaiser Wilhelm ship canal, 1386
'Kapok,' 2097
Keenes' cement, 401
Kennicott system of water softening, 1446
Kent, G., meters, 1313, 1314, 1317
Kent's chimney table, 517
——— meters, 1311, 1313, 1314, 1317, 1320
Kenyon on coverings for steam pipes, 1439
———————— rope driving, 842
Kermode oil burner, 1819
Kerner-Greenwood, condensation on concrete. 398
Kerosene, 1808
Kerpely gas producer, 1835
Kestner Evaporator Co.'s hydrometer scales, 192
Keys, 546, 1058
——— box spanner, 1056
——— spanner, 1056
Keystones, 521
King George V Dock, 1327
King-posts, 328
———————— roofs, 330
King's pneumatic coal-conveying plant, 824
Kirkaldy, strength of lead pipes, 277
Kirke, gas-fired boiler, 1846
——— waste heat boiler, 1850
Kjellberg process electric welding, 2302
Knight (Daimler) motor-car engines, 1717
Knots, scaffolding, 521
Krupp ball mills, mining, 2219
Krupp-Diesel engines for submarines, 2053
Kutter's formula, velocity of water in pipes, 1191, 1298

LABOUR for glaziers, constants of, 413
——— produced by animal power, 136
———————— upon embankments, 136
Labyrinth packings, turbine (steam), 1566
Laced butt-joint, for driving belts, 836
Laces for belts, 836
La Cour-Peebles' motor converters, 1896
Lacquers and bronzes, 2358
Ladder dredgers, 1344
Lagging, boiler, notes on, 1438
La Guayra breakwater, 1326
Lakes, temperature of, 190
Laminated springs for locomotives, 607
———————— motor cars, 1738
Lamps, electric, 1942
———————— Angold arc, 1945
———————— arc, 1945
———————— Britannia, 1944
———————— carbons for, 1945
———————— incandescent, 1912
———————— Mazda, 1943
———————— metal filament, 1942
———————— Osram, 1944
——— miner's safety, 2201

LAN

Lancashire and Yorkshire Railway carriages, 623
——— locomotives, 570
——— waggons, 623
Lancashire boilers, 1470
——— cotton mills, machinery, in, 770
Lanchester-Clerk gas-engine starter, 1660
——— torsional vibration damper, 1724
Land required for railways, 552
—— treatment of sewage, 1254
—— type boiler, Babcock & Wilcox, 1492
Landing slips, cost of, 2424
Lang Lay ropes, 853
Lap joints for belting, 837
Lapwelded charcoal iron boiler tubes, 1425
Lassen-Hjort water softening and purifying plant, 1450
Latent heat, 191
——— of fusion of metals, 2265
Lateral canals, 1373
——— cost of, 1373
——— strength of materials, 257
Lathe tools, cutting speeds, 991
Lathes, 939
——— power required to drive, 973
———, speed of, 939
Lathing and plastering, 409
Lathings, expanded metal, 344
Latitude and longitude, length of a degree in, 163
———, to deduce, 166
Laws relating to engineers, 2441
Lea automatic water recorder for steam engines, 1628
—— water meters, 1311
—— weir recorders, 1316
Lead alloys, 2326
—— balls, weight of, 218
—— bars, weight of, 220
—— ore, 2159
—— pipes, formulæ for weight of, 229
——— soil, 1265
——— strength of, 277
——— weight of, 229, 1308
—— plumbing, 418
——, rolled, weight of, 220
—— sheet, weight of, 221
——— reinforced, 252
—— tensile strength of, 248
—— water pipes, corrosion of, 418
—— welding, 2299
Leading material, 489
Leads and angles of railway crossings, 556
Leakage, electric rail conductor, 669
——— through concrete, 399
———, water, tracing, 1298
Leaks in steam pipes, 1436
Leaky boiler settings, 1431
Leather belting, 829
——— friction, coefficients of, 842
——— joints in, 836
———, Reddaway's, 832
——— belts, oiling and greasing, 837
——— length of, 835
——— hose, preservation of, 2150
Leathers, hydraulic, 1152
——— pump, 1152
——— ram or U, 1152

LIG

Leblanc air-pumps, 1624
Leblanc-Mirrlees air pump, 1625
Leeds Forge bulb furnaces, 1421
——— corrugated furnaces, 1421
Legal notes for engineers, 2441
——— points for road engineers, 704
——— speed limit, motor vehicles, 716
——— status of engineers, 2441
Legislation, boiler, 1424
Length measures, 2381
——— of a degree in latitude and longitude, 163
——— belts, 835
——— tramway rails, 676
Lengths and angles of slopes, 489
——— of arcs of circles, 49
——— ropes and cables, 2381
Lens, concave, 203
Levees, 1369
Level, Abney reflecting, 158
——— crossings, railway, 660
———, dumpy, 156
——— adjustment of, 157
Levelling, 156
Levers, 117
Lewis, 385
Lewis & Tylor's 'Gripoly' belting, 841
——— Construction Co.'s system of reinforced concrete, 448
——— working load on machine-cut spur wheels, 877
Liability for engineer's negligence, 2444
Life of boilers, 1497
——— boiler tubes, locomotive, 596
——— fire boxes, locomotive, 597
——— machinery, electrical, 1901
——— marine boilers, 2024
——— timber bridges, 530
Lift-out crucible, or pit type furnaces, 2255
Lifting appliances, arrangements in, 802
——— electro-magnets, 799, 972
——— stones, 384
——— tackle, design of, 795
Lifts, canal, 1379
——— Danish regulations for working, 1239
——— electric, 806
——— specification for, 806
——— hydraulic, 1238
——— steel-wire ropes for, 805
Light, 202
——— decomposition of, in the spectrum, 202
——— electric, reflectors, 2140
——— from gas-burners, 2087
——— railways, 552, 654, 689
——— cost of, 654, 2429
——— electric locomotives for, 553
———, standards of, 2137
——— velocity of, 202
——— Wells', 2099
Lighthouse illumination, sources of, 1358
——— optical apparatus, Chance Bros., 1354, 1355, 1358, 1359, 1360, 1361
Lighthouses, 1356
——— cost of, 1356, 2424
——— distance visible from, 1358
———, glazing of, 1360
——— lightning conductors for, 1360
Lighting, 2137
——— acetylene, 2097

LIG

Lighting, cost of, 2425
——— electric, of factories, 2145
——————— railway carriages, 628
——— factories and workshops, 2145
——— fittings, electric, modern, 2145
——, incandescent gas, 2087
——— petrol air gas, 2098
Lightning conductors for lighthouses, 1360
———————, Phœnix rules, 1956
——————— rules for, 1955
——— Rod Conference, 1955
Lights for lighthouses, 1356
Lightships, 1354
'Lignite, 1780
——— tars, 1815
Lilleshall gas engines, 1653
Lime mortar, 391
——— purification of gas, 2079
Limes, hydraulic, 391
Limit arms for micrometers, 757
——— gauges, 754
——— British standard, 754
———, Newall's, 756
——— of safe loading of beams, 313
Lincolnshire iron, 2275
Lindsay's fire-resisting floors, 349
Line, to divide a, 18
——, to draw a parallel, 19
Liners, Atlantic, 1991
Lining, brake, 797, 826, 861
——— felt, 411
——— for furnaces, 429
——— reservoirs, 1291
——, Willesden paper, 411
Link belts, 840
——— motion, 1605
——————— Allen's valve gear, 1612
——————— Gooch's valve gear, 1611
——————— locomotive valve gear, 1609
——————— Stephenson valve gear, 1610
——————— Walschaert valve gear, 593
——— or chain belts, 842
Lintels, 342
'Lion' metallic packing, J. Walker & Co.'s, 1600, 1601
Liquid air, 1070
——— fuel oil-gas burners, 986
——— fuels, 614, 1807
———, furnace firing with, 1818
——— measures, 2387
Liquids, reduction of volume of under pressure, 215
——— specific gravities of, 209, 212
Liquor, gas, 2077, 2086
Lister's inclinometer, 151
Little Giant turbine (water), 1209
Liverpool dock-wall, 1328
Ljungström steam turbine, 2002, 2006, 2007, 2008
Lloyd's rules for boiler safety valves, 1498
——————— chains and hawsers, 269
——————— ferro-concrete vessels, 2060
——————— marine internal combustion engines, 1698
——————— masts, bowsprits, and yards, 269
——————— refrigerating machinery, 1119
——————— standing rigging, 269
——————— steamship shafts, 924

LOC

Lloyd's rules for (tentative) application of electric arc welding to ship construction, 2060
——— tests of steel, 268
Load of different materials, equivalents of, 491
——— on foundations, 493
——— rails, breaking, 548
——— roofs, 373
———, safe, on chimney foundations, 493
——————— columns, 494
——————— floors, 494
——————— girders, 493
——————— materials, 493
——————— ordinary foundations, 493
——————— piles, 497
——————— formulæ for, 497
——————— reinforced concrete, 460
——————— walls, 494
——— which foundations will bear, 493
Loading beams, safe limit of, 261
——— coils for telephone circuits, 1960
Loads carried by piles, 495
———, eccentric, 299
——— safe, of crane chains, 279
——— of carts and waggons, 491
——— on highway bridges, 305
——— on reinforced concrete piles, 496
———, road regulations for, 713
——— rolling, 305
——————— on railway bridges, 305
——— safe, on bridge struts, 525, 526
Local Government Board's requirements with regard to sewage purification plants, 1258
Lock nuts, 1053
Lock-woven mesh for reinforced concrete work, 449
Locked-coil ropes, 812, 2194
——————— J. & E. Wright's, 2194
Locks, canal, cost of, 2426
——— entrance, 1332
——— on canals, 1379, 1383
Locomotive bearing surfaces, 594
——————— boiler tubes, 596, 610
——————— boilers, 596, 1473
——————— brass tubes for, 610
——————— copper plates for, 610
——————— tubes for, 596, 610
——————— grate areas and heating surfaces of, 596
——————— iron castings for, 612
——————— rivets for, 612
——————— rods for, 610
——————— specification of material for, 600
——————— steel castings for, 609
——————— steel tubes for, 596, 611
——————— brakes, 631
——————— coal consumption, 616
——————— contract specification, 613
——————— cranes, 789
——————— cylinders, 591, 592
——————— draught retarder, 599
——————— driving-wheels, counterbalancing, 595
——————— economy in France, 590
——————— feed pipes, 603, 611
——————— feed-water heater, Weir, 601
——————— fireboxes, 597
——————— copper plates for, 610

LOC

Locomotive fireboxes, life of, 597
——— frames, steel for, 612
——— fuel consumption, 516
——— injectors, 604
——— jointings, copper, Hulburd's, 601
——— link motion, 593, 1609
——— literature, 567
——— oil consumption, 616
——— superheaters, 597
——— tenders, 618
——— tubes, 596, 610, 611, 1426
——— types, 574
——— tyres, 595, 607
——— water consumption, 616
——— troughs, 618
——— wheel base, 595
——— wheels, 595
Locomotives, 567
——— adhesion of, 582
——— alloys for parts of, 613
——— American, 572, 577
——— British, recent additions to, 567
———, general types, 574
——— bearing surfaces of, 594
——— Caledonian Railway, 570
——— castings for, 609, 612
——— compound cylinders of, 591
——— compounding, 589
——— consumption of fuel in, 616
——— consumption of water in, 616
——— copper rods for, 610
——— tubes for, 596, 610
——— crank axles of, 594, 606
——— cylinders of simple and compound of equivalent power, 591
——— design of, 575
——— electric, 2150
——— for light railways, 553
——— examination of, in running sheds, 617
——— forgings for, 609
——— French, 590
——— Great Central Railway, 568
——— Eastern Railway, 568
——— Northern Railway, 568
——— Western Railway, 568
——— horse-power of, 582
——— liquid fuel for, 614
——— London and North-Western Railway, 568
——— South-Western Railway, 568
——— London, Brighton and South Coast Railway, 570
——— Midland Railway, 568
——— mine, 2189
——— modern high power, French, 590
——— North British Railway, 570
——— Eastern Railway, 570
——— Stumpf, 592
——— parts of, 587, 592
——— piston speeds of, 582
——— power of, 582
——— pulverised coal for, 1799
——— South-Eastern and Chatham Railway, 570
——— springs of, 607
——— steel castings for, 609
——— forgings for, 609

LOW

Locomotives, steel plates for, 612
——— straight axles of, 606
——— Stumpf, 592
——— superheaters, 597
——— tender tools for, 617
——— tyres for wheels of, 595, 607
——— valve gear, 593
——— valves of, 592
——— weights of parts of, 587
——— wheel base of, 595
Logarithmic and exponential functions, 15
——— curve, 35
Logarithms, common, table of, 84
——— hyperbolic or natural, 100
Log-line, 2381
Logs, storing, 368
—— to cut best beam from, 260, 365
——— stiffest beam from, 365
London and N.W. Railway corridor trains, 620
——— locomotives, 568
——— permanent way, 539
——— specification for bolts, nuts, screws, and spikes, 538
——— South Western Railway carriages, 619
——— locomotives, 568
——— waggons, 620
———, Brighton and South Coast Railway carriages, 626
———, Brighton and South Coast Railway locomotives, 570
——— waggons, 626
——— Building Acts, 378
——— County Council regulations with reference to reinforced concrete, 439
——— regulations with reference to structural steelwork, 381
——— regulations for water closets, 1264
——— fire brigade, electric vehicle equipment, 2149
——— motor 'buses, cost of working, 1735
——— refuse, calorific value of, 1804
——— street paving, 734
——— tube railways, 670
Longimetry, 22
Longitude and latitude, length of a degree in, 163
———, to determine, 169
Longitudinal metacentre of ships, 1978
Longridge's formula for strength of boiler-flues, 1415
Long stroke hammer, Boyer new, 994
Lopress oven furnaces, 2254
Lorries, petrol-electric, 697
Loss of heat from steam pipes, 1437
——— power in machine shops, 979
——— strength in steel rails, 547
——— water on canals, 1384
Losses, turbine (steam), 1566
Low-pressure and astern marine steam turbines, Parsons', 1999
——— steam heating, 2107
Low temperature distillation of coal, 1777

LOW

Low water, to reduce a sounding to, 149
Lubricant for ball bearings, 905
Lubricants, 2365
——— coefficients of friction of, 898
——— cutting, 993
——— packing, 1602
——— safe pressures for, 898
Lubricating bricks, 'Sternoline,' 913
——— oil, recovery of, 915
——— tests for, 914
Lubrication, 909
——— air compressor, 1083
——— automatic tool, 911
——— ball bearing, 905
——— chain gearing, 865
——— crank chamber, 909
——— crankshaft bearing, 910
——— cylinder, 909, 1730
——— drills, 957
——— dynamo, 910
——— forced, 916, 1539, 1730
——— gas engine, 913
——— graphite, 911
——— motor-car, 1730
——— oil engine, 909
——— oils, standard, physical properties
——— , rawhide pinion, 884 [of, 2367
——— ring, 910
——— roller bearing, 905
——— steam, gas, and oil cylinder, 909
——— turbine, 910
——— V.S.M. system, 916
——— wire rope, 854
Lubricators, 916
Luminous buoys, 1351
——— energy, 203
Lyddite, or picric acid explosive, 2350

MAAG tooth gearing, 882
Macadam, tar, 724
Machine-cutters, sharpening angles of, 990
——— handles, proportions of, 1054
——— hand wheels, proportions of, 1055
——— shop power losses, 979
——— tools, 939
——— floor space for, 752
——— power required for, 972
——— wood, speed of, 978
——— work tables of, 1064
——— vice, gravity drilling, 963
Machinery, cane sugar, 775
——— cotton, power for, 771
——— depreciation of, 757
——— electrical, British standards, 1915
——— finishes, 2354
——— in Lancashire cotton mills, 770
——— , life of, electrical, 1901
——— purchase of, 2449
——— refrigerating, 1095
——— Lloyd's rules, 1119
——— , sale and purchase of, 2449
——— sugar cane, 775
——— weight of, in ships, 1982
——— wood-working, 976
Machines, bolt and nut, cutting, 974
——— boring, 973
——— cement testing, 403
——— drilling, 959

MAR

Machines, excavator, 481, 2431
——— for cotton mills, sizes of, 774
——— , grinding, 1008
——— Macintosh pneumatic tyre, 1736
——— 'Maconite' insulation, 1967
——— metal cutting, 939
——— milling, 943
——— mortising, 978
——— planing, 940
——— tests, 942
——— screwing, 964
Macintosh, C., & Co., tyres, 1736
'Maconite' insulation, 1967
Magnalium alloy, 2330
Magnesia or magnesite bricks, 426
Magnesium, 2317
Magnetic chucks, 967
——— clutches, 860
——— separation, mining, 2208
Magnets, electro lifting, 799
Magnolia alloy, 2333
Main driving ropes, 770
——— line electric traction, 669
——— roads, 710
——— steam pipes, copper, 1435
——— tail rope haulage, 2187
Mains, electric-supply, for alternating currents, 1922
——— testing, 1867
——— gas, 2070, 2075
——— hydraulic, pressure in, 1128
——— size of, 1130
Maintenance and renewal of waterworks, 1297
——— of roads, 705, 2429
——— cost per mile, 705
Malm bricks, 422
Man, power of, 135
Manchester dock-wall, 1328
——— ship canal, 1386
Manganese bronze, 2321, 2328
Manganese Bronze and Brass Co.'s alloys, 2321, 2322, 2323, 2328
Manganin, 2328
Manila ropes, 283
——— testing and preservation of, 283
Mantles, gas, 2088
Maps of India Survey Dept., 147
——— , Ordnance, scales of, 146
Marble, to clean, 2368
Marine boilers, Babcock & Wilcox, 1494, 2017
——— Clarke, Chapman, 2020
——— combustion of coal in, 2012
——— cylindrical, 2014, 2016
——— draught of, 2014
——— life of, 2024
——— standard conditions for design and construction of, 1416,
——— surfaces of, 2014
——— Thornycroft, 2019
——— Woodeson, 2020
——— Yarrow, 2019
——— Diesel engines, 2035
——— engineering, 1973
——— engines, cylinder diameters, 1994
——— diagram factor, 1993
——— gas, 1659
——— metals for, 2058
——— oil fuel for, 2028, 2057
——— piston speed of, 1993

MAR

Marine engines, recipro-turbine machinery, 1994
——— gas and oil engines, Lloyd's rules, [1698
——— oil engines, 2035
——— piers, cost of, 2426
——— steam turbines, 1995
——— Brown-Curtis, 2002
——— Ljungström, 2002, 2008
——— Parsons, 1999
——— superheaters, 2024
——— turbine gears, reduction, 2008
——— water-tube boilers, 2016
Marine & Locomotive Superheaters, Ltd., superheater, 597, 598
Marks, scribe, 365
Marsh gas, 1827
Marshall oil engines, 1685
Maryon, J. F., sluice measurement, 1182
——— turbine governors, 1222
Masonry, 384
——— ashlar, 388
——— block-in-course, 388
——— bonds, 389
——— dams, 1184, 1290
———, descriptions of, 385
——— dowelling, 389
——— measurement and valuation of, 389
——— rubble, 387
——— strength of, 253
——— valuation of, 389
Mason's stair-treads, 351
Massey, B. & S., drop stamps, 1028
——— power hammers, 1021
——— patent compressed-air hammer, 1027
Masts, iron and steel, Lloyd's tests of, 269
Material, leading, 489
Materials, absolute ultimate strength of, 261
——— drawing, illustrations of, 177
——— electric, 1966
——— equivalents of a load of, 491
——— fire-resisting, 349, 426
——— hardness of, 1000
——— heat insulating, 431
——— insulating, electrical, 1966
———, for cold storage, 1109
——— lateral strength of, 257
——— refractory, 426
——— resistance of, to compression, 247
——— roofing, 335
——— safe load on, 493
——— shrinkage of, 481
——— strength of, 247
——— tensile strength of, 248
——— transverse strength of, 262
Mather & Platt centrifugal and turbine pumps, 1161
——— direct current generators, 1884
Maxima and minima, 15
Mazda drawn-wire electric lamps, 1943
McKenzie Holland & Westinghouse electric railway signals, 643
McPhail & Simpson superheater, 1516, 1517
Mean pressure of steam, 1406, 1992
——— refractions, table of, 171
Measure height of an object, to, 145
Measured base, to reduce to level of sea, 148
Measurement and valuation of masonry, 389
———, cotton yarn, 770
——— distance, 143

MET

Measurement of angles, 59, 2388
——— power by brake, 126
——— water flowing in a stream, 1178, 1182
——— velocity in a stream, 1367
———, sluice, 1182
——— subtense, by tacheometer, 155
——— weir, 1178
Measurers, geographical and nautical, 2381
Measures and weights, 2381
——— foreign, 2396
———, foreign and English, 2391
Measuring instruments, electric, 1938
———, Evershed, 1940
——— open streams, 1182
Meat-carrying steamer, 1116
Mechanical boiler-cleaners, Hulburd's, 1457
——— draught, 1791, 2014
——— Howden system, 1793
——— Musgrave system, 1792
——— Sturtevant system, 1792
——— drilling, mining, 2162
——— efficiency of petrol engines, 1729
——— elevator, mining, 2222
——— stokers, 1784
Melting furnaces, crucible, 2255
——— metals, power required for, 2263, 2265
Melting-point of brass, 2326
——— bricks, 426
——— bronze, 2327
——— refractory materials, 188, 426
Melting-points, 187, 426
Men, power of, 135
Mensuration, 141
Mercury, reduction of volume under pressure, 215
Meridians, convergence of, 173
Meshwork, metallic, 448
Metacentre, longitudinal, of ships, 1978
——— transverse, of ships, 1976
Metal, Babbitt, 2332
——— balls, weight of, 218
———, bell, 2326
——— Bull's, 2324
——— for propellers, 2058
———, cracks in, to stop, 2378
——— cutting machines, 939
———, Delta, 248, 249, 252, 2058, 2323, 2324, 2327, 2333, 2339
——— expanded, 344, 448
——— filament electric lamps, 1942
——— for marine engines, 2058
———, gun, 2326
——— tensile strength of, 249
——— hand sawing, 976
———, ink for writing on, 2375
——— phosphor bronze, 2327
——— road, rocks used for, 737
——— sawing, power required for, 976
——— sheet, specification of, 221
——— sheets and bars, weight of, 220
——— Spence's, 2338
——— thickness of, for hydrostatic press cylinders, 1237
——— type, 2338
——— white, 2334
——— work, to clean, 2367

MET

Metallic flexible tubing, 604, 996, 2166
—— —— gaskets for steam pipes, 1436
—— —— mesh, lock knot, 448
—— —— meshwork, reinforced concrete, 448
—— —— packing, 'Beldam,' 1602
—— —— 'Lion,' 1600
—— —— piston-rod packing, United Kingdom, 1599
—— —— United States, 1598
—— —— resistance materials, 1869
Metalliferous minerals, 2158
Metallurgy, 2235
—— —— Admiralty white metal, 2332
—— —— air velocities and volumes for cupolas, 2253
—— —— alloys and metals, 2272
—— —— alloys, general, 2339
—— —— aluminium, 2316, 2325
—— —— alloys, 2325, 2329, 2330
—— —— Babbitt metal, 2332
—— —— bearing metals, 2326, 2331
—— —— bell metal, 2326
—— —— brass, 2320
—— —— bronze, 2321, 2323, 2326, 2327, 2328
—— —— Bull's metals, 2324
—— —— case-hardening, 2286
—— —— casting and founding, 2344
—— —— cast iron, 2276
—— —— cobaltron steel alloy, 2286
—— —— constantan, 2328
—— —— copper, 2314
—— —— corrosion of iron, 252, 2309
—— —— cupolas, 2251
—— —— cupro-nickel, 2328
—— —— Delta metals, 248, 249, 252, 2058, 2323, 2324, 2327, 2333, 2339
—— —— Duralumin (Vickers), 2330
—— —— electric welding, 2301
—— —— extrusion process, 2324
—— —— ferrite, 2273
—— —— foundry practice, 2276
—— —— furnace construction, 2264
—— —— efficiency, 2265
—— —— furnaces, 2235
—— —— fusible metal, 2336
—— —— gun metal, 2326
—— —— heat energy required to melt metals, 2265
—— —— treatment of metals, 2346
—— —— hematites, 2273
—— —— Immadium alloy, 2322
—— —— iron (ferrite), 2273
—— —— latent heat of fusion of metals, 2265
—— —— lead, 2326
—— —— manganese bronze, 2321, 2328
—— —— Magnalium, 2330
—— —— magnesium, 2317
—— —— Magnolia, 2333
—— —— manganin, 2328
—— —— mechanical treatment of metals and alloys, 2346
—— —— metals and alloys, 2272
—— —— nickel, 2316, 2325
—— —— nickel silver, 2325
—— —— non-ferrous alloys, 2317
—— —— non-magnetic alloys, 2338
—— —— patterns for castings, 2345
—— —— platinoid, 2325

MIL

Metallurgy pyrometry, 2266
—— —— refractory materials, 2264
—— —— Richard's plastic white metal, 2334
—— —— Romanium, 2331
—— —— solders and soldering, 2340
—— —— Spence's metal, 2338
—— —— standards, 2219
—— —— steel, 2282
—— —— steel specifications, 2284
—— —— 'Stella' alloys, 2328
—— —— Turbadium bronze, 2323
—— —— type metal, 2338
—— —— Vickers' Duralumin, 2330
—— —— welding, 2301
—— —— Wolframinium, 2331
—— —— zinc, 2315
Metals, adulteration of, to discover, 210
—— bearing, 2326, 2331
—— colouring electrically, 2313
—— corrosion of, 252, 2309
—— expansion of, 200
—— fusible, 2336
—— heat energy required to melt, 2268
—— treatment of, 2346
—— latent heat of fusion of, 2265
—— marine engine, 2058
—— propeller, 2058
—— resistivity of, 1856
—— sheet, specification of, 221
—— specific gravity of, 210
—— tensile strength of, 248
—— at different temperatures, 249
—— weight of square foot of, 215
Metcalfe's exhaust steam injector, 604
Metering water, air, gas, and steam, 1311
Meters, electricity, 1938
—— specification for, 1939
—— for measuring water flowing in stream, 1184, 1367
——, gas, 1317, 2091
—— steam, 1320
—— torsion, Hopkinson's, 133
—— water, 1313
Methane, 1827
Metre gauge railways, 558
Metric carat, 2387
—— pressures, 2389
—— system, 2382, 2401
Metrical screw threads, 1038
Metropolitan Buildings Act (*see* London Building Act)
—— —— Paving Committee's Report, 735, 736
—— —— Referees' gas tests, 2091
—— —— Water Board standard sockets, 1306
Michell thrust block, 906, 2034
Micrometers, 757
Micrometric theodolite, 153
Midland Railway locomotives, 568
—— permanent way, 543
Mild steel pillars, 383
—— steel, treatment of, 266
Mileage, road, in relation to population and area, 705
Mill gearing, 878
Milling cutters, 944
——, flour, 765
—— gold, cost of, 2218, 2219

MIL

Milling machines, 943
——————— power for, 974, 975
——— speeds and feeds, 975
Mills and millwork, 765
——, ball, gold mining, 2219
——— Chilian, mining, 2218
——— cotton, 766
——————— electrical driving, 772
——— crushing, 775
——— gold, 2218
————— cost of, 2218
——— mule spinning, 769
——— oil, 774
——— ring spinning, 769
——— rolls, mining, 2218
——— sugar, 775
——— tube, mining, 2218
——— wind, 1073
Mine, legal definition of a, 2153
——— valuation, 2227
Mineral deposits, classification of, 2155
———, legal definition of, 2153
——— mixtures, calculation of, 2160
Minerals, ownership of, 2153
Minerva bright part coatings, 2354
——— machinery finishes, 2354
——— rust preventive, 2354
Mines, Australian, 2182
——— deep shafts of, 2175
——— electric signalling in, 2203
——— fire extinction in, 2203
——— gases in, 2199
——— legislative enactments relating to, 2154
——— locomotives for, 2189
——— pumping in, 2197, 2223
——— rescue apparatus for, 2202
——— spontaneous combustion in, 2203
——— subsidences from, 2178
——— valuation of, 2227
——— ventilation of, 2199
Minima and maxima, 15
Mining, 2153
——— alluvial, 2161, 2220
——— boring, 2160
——— branches of, 2156
——— cables, electrical, 2197
——— centrifugal pumps, 2198, 2223
——— coal, 2156
———, coal cutters, 2175
——— coffering, 2171
——— colliery, electric cables for, 2197
——— compressed air for, 2163, 2165
——— cost of, 2180, 2182
——— detonators, 2167
——— dredging, 2224
——— dressing of ores, 2204
——— drifts, 2167
——— drilling, 2162
——— explosives, 2166, 2349
——— flotation processes and machines, 2209
——— flow sheets, 2209
——— fuses, 2167, 2350
———, gold, 2217
——— haulage, 2181
——— headgears, 2192
——— hydraulic, 2221
——— inclines, 2187
——— magnetic separation, 2208
——— metallurgy standards, 2219

MOR

Mining, monitors or giants, 2221
———-operations, cost of, 2182
———-pillars, 2177
———, placer, 2220
———-pulleys, 2192
———-pumping, 2197, 2223
——— rescue apparatus, 2202
———, rock drills for, 2164
———-ropes, 256, 805, 853, 2192
———-safety lamps, 2201
———-shaft pillars, 2177
———————sinking, 2169
———-shafts, 2169
——— ———-cost of sinking, 2169
———-shot holes, 2162
———-sizing, 2206
———-sluices, 2221
———-stamps, 2205, 2217
———-standards, 2219
———-subsidences, 2178
———-surveying instruments, 156
———-tubbing, 2171
———-tube mills, 2218
———-tubs, 2186
———-veins and masses, 2179
———-winding, 2189
———-winzing and raising, 2173
———-working costs of coal, 2178
Ministry of Transport, 703
Mirrlees' cyclic variation recorder, 1679
Mirrlees-Diesel engines, 1668, 1670
Mirrlees fuel pump for tar oil, 1816
Mirrlees-Leblanc ejector air-pump, 1624, 1625
Mirrlees Watson Co., air pumps, 1625
——————— evaporators, 776, 777, 778, 779
——————— sugar-crushing plants, 775
——————— water distillers, 779
Mirrors, convex, 203
——— to silver, 2376
Mississippi river bank protection, 1368
———————, dredging plant on, 1370
———————, levee on, 1372
Mitis castings, 2273
Mixtures, freezing, 189
——— non-freezing, 189
Modulus of elasticity, Young's, 263
Moisture in air, 1639
Molesworth's rules for dams, 1290
Moments, bending, 292
———of inertia, 125, 297, 327
Mond bituminous suction producers, 1-42
——— by-product recovery gas producer plant, 1840
——— gas, 1830, 1838
——— ——industrial heating plants, 1842
Money, foreign, 2396
Monitors or giants, mining, 2221
Monoplanes, wings of, 1747
Monsoon rainfalls, India, 1267
Moore gas producer, 1834
Morcom & Belliss Diesel engines, 1671
Morrish's rule for centre of buoyancy of ships, 1976
Morse chain drives, 868
——— taper measures for twist drills, 956
Mortar, Portland cement, tinting, 394
Mortars, 391

MOR

Mortars, adhesive strength of, 253
——— and cements, refractory, specification for, 429
———, choice of, 394
———— coloured, 394
———— mixing, 394
———— proportions for, 393
———— raw materials for, 392
———— refractory, 429
Mortise and tenon, 325
Mortising-machines, 978
Motion, uniform, 119
Motor-'buses, London, cost of working, 1735
Motor-car bearings, 1725
———— Brooklands standard engines, 1722
———— carburettors, 1731
———— compression, 1728
———— connecting rods, 1726
———— cooling, 1731
———— cranks, 1723
———— crank-shafts, 1723
————, torsional vibration of, 1724
———— engines, 1717
———— air-cooled, 1721
———— Aster, 1721
———— Daimler, 1717
———— design, 1721
———— Dorman, 1720
———— efficiency of, 1729
———— Napier, 1719
———— torsional vibration in, 1724
———— Tylor, 1720
———— valve springs, 1737
———— weight of, 1730
———— White and Poppe, 1721
———— Wolseley, 1717
———— gearing, 1740
———— helical springs, 1688
———— horse-power, 1730, 1739
———— necessary to propel, 1739
———— ignition, 1726
———— joint packings, 1738
———— lubrication, 1730
———— pistons, 1725
———— power rating, 1729
———— radiator tablets, Boilerine, 1731
———— rating for taxation, 716
———— power, 1729
———— road regulations, 713
———— springs, 1738
———— steel, 1723
———— traction, 1739
———— tyres, 1736
———— valves, 1727
Motor-cars, 1733
———— steam, railway, 618
———— converters, Peebles, 1896
———— omnibuses, 1734
———— ———, cost of working, 741, 1735
———, synchronous, 1909
Motors, alternating current, 1909
——— cascade (Sandycroft), 1912
——— commercial efficiency of, 1904
——— commutation pole traction, 1908
——— direct current, 1901
———— series wound, 1905
———— speed regulation of, 1904

NOR

Motors, induction, 1910
——— polyphase, 1911
——— railway, test curves of, 1907
——— Sandycroft, cascade, 1912
——— single phase commutator, 1913
——— small, 1914
——— synchronous, 1909
——— tramway, 1905
——— Westinghouse, 1905
Moulded dimensions of ships, 1973
Moulding-sand, 2344
Mouldings, 417
Mountings, boiler, Hopkinson specifications, 1510
Moving bearings, bridge, 552
Muff couplings, 1063
Muffle furnaces, 2254
Mule spinning mill, 769
Multiple effect evaporator, 778
Multitubular boilers, 1473
Multivane centrifugal fan, 2131
Murray's tables of radii of curves, 561
Musgrave mechanical draught system, 1792

NAILS, composition, weight of, 243
—— copper, weight of, 242
———— slating, 410
———— wrought-iron, weight of, 242
N.A.P. tyres, 1736
Naphthalene, 2081
Napier aeroplane engine, 1715
——— motor-car engine, 1719
Narrow-gauge, or light, railways, 552, 654
National Gas Engine Co.'s gas engines, 1646
———— oil engines, 1696
Natural gas, 1828
———— logarithms, table of, 100
——— sines, tangents, etc., table of, 63
Nautical measures, 2381
Naval architecture, 1973
——— brass, 2321
Navigable waterways, 1365
Navigation of rivers, 1366
Navy, oil fuel for, 1822
Negligence, engineer's liability for, 2444
Neptune Diesel engine, 2046
———— electric tramway rail bond, 687
Neutral bricks, 427
New Boyer long-stroke hammer, 994
New Destructor Co.'s 'Horsfall' system, 1806
New Zealand type of mining dredger, 2225
Newall's limit gauges, 756
Nickel, 2316, 2325
——— chrome steel, 2285
———, impurities in, 2316
——— silver, 2325
——— steel, 252, 2284
——— ——— welding, 2299
Niclausse boiler, 1482, 2020, 2023
Nicol, E. W. L. on, coke as boiler fuel, 1778
Nitro-glycerine, 2349
Noggings, brick, 377
Non-corrodible steel, 2369
Non-ferrous alloys, 2317
Non-freezing mixtures, 189
Non-magnetic alloys, 2338
Non-resonant gears, 884
Northampton iron, 2275

NOR

North British Railway carriages, 625
—— —— —— —— locomotives, 570
—— —— —— —— waggons, 625
North Eastern superheaters, 2025
—— —— —— Railway carriages, 622
—— —— —— —— locomotives, 570
—— —— —— —— waggons, 622
Norton & Heald grinding machines, 1015
Notch, rectangular, method of calculating quantity of water flowing in a stream, 1178
——, V,' automatic water recorder for steam engines, 1628
—— —— —— method of calculating quantity of water flowing in a stream, 1178
Nozzles, air, 2253
—— —— steam turbine, 1552
Nut and bolt machines, cutting speeds of, 974
——, to remove a stubborn, 2376
Nuts and bolt-heads, British standard hexagonal, 1046
—— —— —— —— weights of, 241
—— —— bolts, 542, 1044
—— —— —— American, 1045
—— —— —— Whitworth, 1044, 1045
——, washers, and bolt pins, French, 1050
—— —— capped, 1053
—— —— castle, British standard, 1047
—— —— cold punched, number per 100 lbs., 241
—— —— lock, 1053

OAK

OAK work, preservation of, 2378
Obach dry battery, 1878
Objects at sea, distance of, 164
Oblique-angled spherical triangles, formulæ for, 70
—— —— —— —— triangles, formulæ for, 62
Observations, timing, 170
'Occentoline,' 1515
Octagonal steel, weight of, 220
Offsets, setting out curves by, 560
Offshore dock, 1342
Oil burners, safe use of, 1824
—— consumption of locomotives, 616
—— elimination from feed-water, 1456
—— engines, Diesel, 1667, 2035
—— —— —— —— Beardmore, 1685, 2052
—— —— —— —— Belliss & Morcom, 1671
—— —— —— —— Burmeister & Wain, 2037
—— —— —— —— —— Camellaird Fullagar, 2050
—— —— —— —— Carels, 2041
—— —— —— —— coal-tar fuel for, 1817
—— —— —— —— Cole, Marchent & Morley, 1671
—— —— —— —— cost of, 1675
—— —— —— —— crank shafts, 1675
—— —— —— —— Doxford, 2046
—— —— —— —— English Electric Co.'s, 1672
—— —— —— —— four-cylinder, 1670
—— —— —— —— Fullagar, 2050
—— —— —— —— Hick, Hargreaves, 1672
—— —— —— —— marine, 2035
—— —— —— —— —

OPT

Optical pyrometers, 2270
Optics, 202
Orders, standing, for railway bills, 663
——————— tramway bills, 697
Ordnance scale maps, 146
——— Survey scales, 146
Ore dressing, 2204
——, horse-power per ton required to treat, 2219
Ores, copper, tin, lead, zinc, 2159
Orifice of a culvert, discharge from the submerged, 1245
Orifices, discharge of water through, 1196
——— flow of steam through, 1397
Orwell electric vehicles, 695, 696, 742
Oscillation, centre of, 123
Osram electric lamps, 1944
Outer rail, superelevation of, 555
Output of Diesel marine engines, 2054
Overall dimensions of ships, 1973
Overhead electric cranes, 784
——————— tramways, 683
——————— transmission lines, 1933
——— runways, 789
——— travelling cranes, 784
Oxy-acetylene cutting, 2300
——— welding, 2289
Oxygen and air required for combustion of gas, 1826, 2087
——————— volume necessary for combustion per cubic foot of gas, 1826
——— apparatus for airships and aeroplanes, 1759
——— liquid, 1761

PAX

PACKING, centrifugal pump, 1157
——— condenser, 1616
——— engine joints of motor cars, 1738
———, labyrinth, turbine, 1566
——— leather, 1152
——— lubricants, 1602
——— ———, metallic, 'Beldam,' 1602, 1603
——— ——— ——— for piston rods, United Kingdom, 1599
——————————————— United States, 1598
——————— 'Lion,' 1600, 1601
——— ——— pump, 1153
——————— rings of pistons, metal for, 2335
——— ——— ——— ——— Rowan, 1604
——— Walker, J., & Co.'s 'Lion,' 1600
——— Woodite, 1501
Packings, 1597
Paddle-engine shafts, 927
Paint, brick floor, 2356
——— brushes, to clean, 2368
———, coal tar, 2357
——— felt roofing, 2356
——— fireproof, 2357
——— flexible, 2355
——— 'Foliac' 'Ontar' composition, 2357
——— galvanised roofing, 311
——— graphite, 2358
——— ground glass, 2355
——— heat-indicating, 898, 2357
——— hydraulic cement, 2355
——— 'Minerva' machinery finish, 2354
——— ——— rust preventive, 2354
Paint, oil, quick drying, 2357
——— red, quick drying, 2355
——— removal of, 2353
——— roof, 2356
——— 'Syronite' anti-rust, 2353
——— value of, 414
——— waterproof, 2355
——— waterproofing boards, 2370
——————— wall, 2356
——— wooden floor, 2356
——————— post preserving, 2356
Painters' work, constants of labour for, 416
——————— valuation and estimate of, 414
Painting, 413, 2353
——— floors, 2356
——— fresh cemented surfaces, 414
——— galvanised iron, 311
——— ironwork, 2353, 2355
——— Portland cement, 2357
——— ships' bottoms, 2059
——— spray, 415
——— woodwork, 2353.
——— zinc, 2355
Palatine Engineering Co.'s water meters, 1312
Palladeum cork slabs, 1110, 1111
Panama Canal, 1387
Paperhanging, 416
Paper insulation, cold storage, Willesden, 1110
——————— electrical, Willesden, 1968
———, sound-proofing, Willesden, 350
———-underlining, Willesden, 411
Papers and books, sizes of, 2399
Parabola, 30
——— area of, 30
——— equation to, 34
Parabolic spindle, 26
Parachutes, 1762
Parallax, equatorial, of sun, 164
———, sun's, in altitude, 166, 171
Parallel line, to draw a, 19
Parallelogram, angles in a, 20
——————— of forces, 118
Parkes and Martin, melting points of alloys, 188
Parsons geared turbines, 1999
——— steam turbine, blades and caulking pieces for, 1564
——— steam turbines for ships, 2014
——— turbine gearing, 2009
Partitions, 350
——— ——— expanded metal, 344
Parts of gas engines, 1662
——— locomotives, 587, 592
——————— weights of, 587
Passages, steam, area of, 1597
Passenger trains, effect of gradients on speed of, 580
Paste, 2365
Patent Specification Drawings, 176
Patents, 2407
Pattern composition, 2345
Patterns, weight compared with castings, 241
Pavements, tractive effort on, 718
——— ——— wood, 734
Paving, asphalt, 734
——— Committee's Report, Metropolitan, 734
———, cost of, 735, 736
——— streets of London, 734
Paxman 'Economic' boiler, 1428, 1479

PAX

Paxman engines, 1532, 1542
——— Essex boiler, 1478
——— gas engines, 1647
——— portable engines, 1542
——— positive valve gear engine, 1532
Pearson's, E. J. & J., asbestos cushioned seating blocks and flue covers, 1429 1430, [1431
Peat, 1780
Peebles motor converters, 1896
Pelton wheel regulators, 1200
——— ——— table, 1202
——— wheels, 1199
Pen, drawing, Stanley's patent, 178
Penberthy cellar drainer, 1151
——— — injector, 1505
Pendulum, 122
Percussion, centre of, 123
Perfector reinforced concrete system, 448
Permanent way, 549, 689
——— ——— Board of Trade regulations with reference to, 660
——— ——— details of, 549
——— ——— tramways and light railways, 689
Permitted explosives, 2350
Permutations, 13
Permutit water softener, 1299, 1444
Perpendicular line, to draw a, 18
Petrol, 1809
——— air gas, 2026
——— electric lorries, 697
——— engine compression, 1728
——— engines (*see* Motor car engines)
——— ———, efficiency of, 1729
——— ——— ——fuels for, 1810
——— ——— ——power rating of, 1729
——— ——— ——valves of, 1727
Petrol engines, weight of, 1730
Petroleum, 1807
——— ——— fuel, properties of, 1814
Petter-Vickers oil engines, 1683
Phœnix lifting magnets, 800
——— ——— Office rules for lightning conductors, 1956
Phosphor bronze, 2327
——— ——— ——springs, 934
Photo-copying, 2372
Photometers, 2138
Physical properties of standard oils for lubrication, 914
Pickle for castings, 2345
Picric acid, or lyddite, explosive, 2350
Piers, 524
——— for iron railway bridges, 550
———, marine, cost of, 2426
Pig iron, 2273
Pile, Coignet reinforced concrete, 494
——— sinking with water jet, 496
Piled foundations, 494
Piles, 460, 462, 494
——— concrete, 460, 462
——— formulæ for safe load on, 497
——— interlocking steel, 499
——— loads carried by, 495
——— reinforced concrete, loads on, 496
——— safe load on, 497
——— screw, 498
——— Simplex concrete, 496
Piling hammers, 497

PIP

Piling, sheet steel, 499
Pillars, British standard, 319
——— cast iron, 383
——— mild steel, 383
——— mining, 2177
——— reinforced concrete, 438
——— shaft, 2177
——— wooden, 372
——— wrought iron, 383
Pilot packing, Beldam, 1602
Pinchin, Johnson & Co., 'Deydol' distemper 415
——— ——— ——— ——— insulating varnishes, 1966
——— ——— ——— ——— machinery finishes, 2354
——— ——— ——— 'Minerva' bright part coating and rust preventive, 2354
——— ——— ——— 'Syronite' anti-rust paint, 2353
Pine, breaking weight of, 264
Pinions, 872, 873
Pins, crank, diameter of, 923
Pintsch's illuminated buoys, 1352
Pipe bends, unbalanced pressures on, 1308
——— couplings for automatic brakes, 634
——— coverings, 1438
——— flanges, 1057
——— ——— American standard, 1059
——— ——— British standard, 1057
——— hangers, 1434
——— jointing materials, weight of, 244
——— joints, cement, 1133
——— ———, 'Victaulic,' 1132
——— lines, 1283
——— supports, 1193
——— threads, 1042
——— ——— American standard, 1044
——— ——— British standard, 1043
——— ——— Whitworth standard, 1042
——— unions, 1130
Pipes, aluminium, 239
——— Angus Smith's composition for, 2358
——— brass, weight of, 229
——— British standard flue or smoke, 2100
——— ——— ——— ——— low-pressure heating 2108,
——— cast-iron, 228, 230, 245, 1307, 2089
——— ——— ———, weight of, 228, 230, 1307, 2089
——— copper, weight of, 229, 236
——— design of, 1192
——— discharge of water through, 1190, 1249, 1297, 1300, 1305, 1306
——— drain, 425, 1265, 1308
——— exhaust, 1434
——— expanded steel concrete, 349
——— flanges of, 1057
——— flow of steam through, 1396
——— ——— water through, 1190, 1249, 1297, 1300, 1305, 1306
——— flue, 2109
——— for waterworks, 1297
——— gas, 228, 2089
——— ——— British standard, 245
——— ———, threads of, 1042
——— ———, weight of, 228, 2089
——— heating, 2036, 2105, 2108
——— hydraulic, thickness of, 1128
——— iron soil, weight of, 1265

Pipes, iron, water and hydraulic, thickness of, 1130
—— lead soil, 1265
——, strength of, 277
—— weight of, 229, 1265
—— pressure in, 1128, 1192
—— rain-water, 418
—— reinforced concrete, 464, 1192
—— salt glazed, for sewers, 425, 1246
—— screw threads of, 1040
—— sewage, British standard, 245
—— smoke, 2109
—— socket, and fittings, 235
—— soil, 1265
—— speed of water through, 1128, 1302
—— steam, 1432
—— bends, 1433
—— copper, 1433
—— coverings of, 1438
—— exhaust, 1434
—— joints of, 1435
—— leaks in, 1436
—— loss of heat from, 1438
—— of boilers, 1432
—— steel bends, 1433
—— thickness of, 1433
—— valves of, 1459
—— weight of, 228, 233
—— steel, design of, 1192
—— thicknesses of, 244, 1128
—— velocity of water in, 1128, 1190, 1249, 1297, 1300, 1304, 1306
—— water, 228, 245, 1297
—— British standard, 245
—— corrosion of, 418, 1298
—— hammer in, 1235
—— incrustation of, 1298
—— joints in, 1130, 1306
—— threads of, 1042
—— weight of, 228
—— wood stave, 1194
—— wrought-iron, 228, 2089
—— weight of, 228, 2089
Piping for cold-storage rooms, 1112
Piston of steam indicator, 1409
—— nut-lock plate, 1604
—— packing-rings, metal for, 2335
—— 'Lion,' 1600
—— Rowan, 1604
—— United Kingdom metallic, 1599
—— United States metallic, 1598
—— packings, 1597
—— speed of locomotives, 582
—— marine engines, 1993
Pistons, 1604
—— motor car, 1725
Pitch of broach teeth, 950
—— cutter teeth, 949
—— impulse blades of steam turbines, 1562
—— wheels, 872, 874, 875
Pitot pressure tubes, 1367
Pit type furnaces, 2255
Placer mining, 2220
Plane figures, centre of gravity of, 115
——, inclined, 120
—— surface power required to move against air, 1071

Plane table (survey instrument), 158
Planes, skin friction of, 1748
Planimetry, 23
Planing machine tests, 942
—— machines, 940
—— power for, 974
—— speed table for, 943
Planks, timber, 364
Plans, railway, House of Commons rules for, 663
—— tramway, House of Commons rules for, 697
Plant, depreciation of, 757
—— ice making, 1106
Plaster, 2365
——, hardening, 2365
—— of Paris, 2365
Plastering and lathing, 409
Plasters, 406
Plasterwork, expanded metal lathings for, 344
Plastic cements, 2362
—— white metal, Richards', 2334
Plates, bulb, 318
—— copper, for locomotive fire boxes, 610
—— for locomotive boilers, specification of, 610
——, steel, for locomotive boilers, 611
—— frames, 612
——, Indian Government tests, 274
—— thickness of, Robey boilers, 1473
—— tin and terne, weight of, 240
—— wall, 339
Platinoid, 2325
Platinum, tensile strength of, 248
Player's pneumatic power hammer, 1026
Plenum ventilation system, 2134
—— heating system, 2112
Plugs, fusible boiler, 1431
Plumbing, 418
Plunger pump, 1136
Plymouth breakwater, 1325
Pneumatic air mains, 996
—— caulking hammers, 996
—— coal conveying plant, 824
—— despatch tubes, 1085
—— drills, 996
—— foundations, frictional resistance of, 503
—— hammer, Boyer long stroke, 994
—— hose couplings, 996
—— house tubes, 1090
—— power hammers, 1024
—— Massey, 1024
—— Player, 1026
—— process of sinking cylinders, 498
—— railway signals, 637
—— receivers, 996
—— riveting, 997
—— tools, care of, 997
—— for salvage work, 996
—— portable, 994
—— tubing, flexible, for locomotives, 604
—— mining, 2166
—— tools, 996
—— tyres, 1736
'Poilite' asbestos cement building sheets, 335
—— roofing tiles, 335
Points and crossings of tramways, 677

POI

Points and junctions of railways, 658
——— signals, Siemens' electrically operated, 646
———, gauge, conversion of, by slide rule, 109
Polar radius of earth, 164
Pole plate of roofs, 332
—— star, to find, 164
———variation of compass by, 161
Poles for electric tramways, 685, 691
——, strength and stiffness of, 326
—— taper tramway, 692
—— telegraph and telephone, 1962
Pole's formula for flow of gas in mains, 2090
Polishing, 1018
Pollock, Bolinder oil engine, 1687
Polygon, to construct a, 21
Polygraphic copying process, 2372
Polyphase motors, 1911
——— efficiencies of, 1913
Pontoon sectional dock, 1341
Pontypridd test of Heenan's refuse destructor, 1804
Porosity of bricks, 424
Portable boiler, Babcock & Wilcox, 1494
——— electric drills, 960
——— engines, Davey Paxman's, 1542
——— pneumatic tools, 994
Portland cement, 402
——— British standard, 404
——— mortar, tints, 394
——— painting, 2357
——— reinforced concrete, 435
——— testing, 402
——— machine, Adie's, 303
——— tinting, 394
Positive valve gear engine, Paxman's, 1532
Post Office telegraph wire, 255
Posts, timber, weight of, 372
Potter, F. W., & Co.'s wing fan, 2132
Pound, to reduce shillings to a decimal of, 108
Pounds to tons conversion table, 2390
Power, absorptive, of coloured glass, 1360
——, animal, 135
——— labour produced by, 135
—— brakes for measurement of, 126
——— Alden's, 130
——— Brotherhood fluid friction, 130
——— fan, 132
——— Froude's, 130
——— Hirn's rope, 126
——— Prony, 127
——— Reynold's hydraulic, 129
——— Ringelmann's, 128
——— water-pipe absorption, 129
—— electric driving, in workshops, 753
—— electrical, cost of, 1898
—— factor improvement, electrical, 1924
———, polyphase motor, 1913
—— Gas Corporation, Mond gas, 1838
—— gas units, 1635
—— hammers, 1021
—— heating, Mond gas for, 1842
——, holding, of glue, 254
—— in pumps, loss by friction, 1153

PRE

Power losses in machine shops, 979
—— of Diesel marine engines, 2056
——— electric locomotives, 553
——— fall of water, to compute, 1153
——— horses, 135
——— locomotives, 582
——— men, 135
——— surfaces, reflecting, 2137
——— Plant Co., Ltd., on helical gearing, 886
——— turbine gears, 888, 2009, 2011
——— plant efficiency curves, 1629
——— rating, motor cars, 1729
——— required by railway brakes, 631
——— for aeroplanes, 1748
——— bolt and nut machines, 974
——— cotton machinery, 771
——— drilling, boring, and screwing machines, 973
——— machine tools, 972
——— metal sawing, 975
——— planing machines, 974
——— punching, shearing, and cropping machines, 974
——— shaping and slotting machines, 973
——— wood-working machines, 976
——— required to compress free air, 1087
——— drive air-compressors, 1076
——— lathes, 973
——— move plane surface against the air, 1071
——— pump water, 1127
——— work pneumatic tubes, 1086
——— stations, electric, cost of, 2352
———, tide, 1175
——— transmission of, by chain driving, 863
——— cotton ropes, 847
——— leather belting, 829
——— link belts, 840
——— steel shafting, 921
——— variation of a blower, 2132
———, water, 1175
——— windmill, 1073
Powers, fourth, table of, 84
Practice, workshop, 754
Premier electric welding system, 2305
——— gas engine, 1650
Present value, 4
——— table, 11
Preservation of oak work, 2378
——— ropes, 283
——— timber, 368
Preservative compositions, 2354, 2367
——— for iron work, 2354
——— stone work, 2356
——— wood posts, 2356
Press, hydrostatic, 1237
Pressed bricks, 422
Pressure, acceleration produced by, 120
——— and temperatures of air at heights, 1742
——— flanges, cast-iron, 1131
——— for pneumatic tyres, 1736
——— gauge tester, Brotherhood's, 1504

PRE

Pressure gauges, 1503
——— in cylinders, allowable, 277
——— hydraulic mains, 1128
——— in pipes, 1192
——— of atmosphere, 1069
——— earth on retaining walls, 508
——— steam, mean, 1398, 1992
——— water, 1125
——— on retaining walls, 508
——— wind and weight of snow on roofs, 334
——— on archstones, 522
——— producing acceleration, 120
——— required to drive carrier through pneumatic tube, 1089
——— tanks, 2165
——— tubes, Pitot, 1367
——— unions, 1131
———, volume reduced by, 215
——— wind, on railway structures, 662
——— roofs, 338
——— working, pneumatic despatch tubes, 1086
Pressures, boiling points of water at various, 195
——— draught, rate of combustion, 519
——— for riveting and flanging, 1414
———, gas, 2090
——— metric, 2389
——— unbalanced, on pipe bends, 1308
Preventives of corrosion in boilers, 1441
——— scale in boilers, 1440
——— and corrosion in boilers, Cumberland system, 1441
Price's rule for superelevation of outer rail of railway curve, 555
Primary batteries, 1878
Priming of boilers, 1439
——— paint, 2353
Prismatic compass, 158
Producer, bituminous suction gas, 1842
———-gas, 1830, 2072
———composition of, 1831, 2072
———-heat value of, 1831
———water, 1844
Producers, gas, 1830, 2072
——— Campbell, 1835
——— Crossley, 1836
——— Kerpely, 1835
——— Mond, 1838
——— Moore, 1834
Progression, arithmetical, 2
——— geometrical, 2
——— harmonical, 2
Prony brake, 127
——— formula for water velocity, 1367
Propeller design, 2058
——— shafts, Board of Trade rules, 923
——— Bureau Véritas rules, 927
——— Lloyd's rules, 924
Propellers, aeroplane, 1749
——— air, 2129, 2131
——— screw, metals for, 2058
Properties of aluminium *v.* copper for electrical conductors, 1931
——— gases, 193
——— saturated steam, 1329
Proportion, 1
Proportions of wheel teeth, 874

PUM

Propulsion, reduction gear for, 1534, 2008
Protection of iron from rust, 2309, 2354
Protective distance of wells from drains, 1288
Protector, gauge glass, Winn's, 1500
'Prufit' cement, 400
'Prufitol' waterproofing solution, 400
Puddle, 422
——- dams, 503
Pugging, 326
Pulley arms and bosses, 1063
——— speeds for cotton mills, 774
Pulleys, 117
——— belt, 838
——— haulage, 853
———, how to put rope on, 852
——— mining, 2192
Pulsometer high lift pump, 1165
——— 'Torrent' filter, 1295
——— refrigerating apparatus, 1122
——— steam pump, 1150
Pulsynetic electric clock system, 1953
Pulverised coal fuel, 1795
Pump balancing, 1136
———barrels, 1136
———buckets, 1136
———dredgers, 1346
———leathers, 1152
———openings, 1629
———packings, 1153
———valves, 1136
——— materials for, 1152
Pumping, boiler pressure required for, 1150
——— by compressed air, 1169
——— from wells, 1137
——— in mines, 2197, 2223
——— machinery, air, 1087
——— water, horse-power required for, 1128
Pumps, 1135, 1623
——— air, 1617, 1623
———lift, 1169
——— artesian well, 1137
——— boiler feed and service, 1143
——— Boving's turbo, 1157
——— Caird & Rayner steam, 1143
——— capacity of, 1138
——— centrifugal, 1154, 2198
——— Mather & Platt, 1161
———, packing for, 1157
——— chain helice, 1140
——— circulating, condenser, 1617
——— Clarke, Chapman steam, 1141
——— Cornish, 2198
——— Edwards air, 1623
——— feed, 1141, 1143, 1147, 1629
——— force, 1136, 1629
——— Humphrey internal combustion, 1166
——— Leblanc air, 1624
——— lifting, 1135
——— mining, 2197
——— Mirrlees-Leblanc ejector air, 1625
——— plunger, 1136
——— Pulsometer, high-lift turbine pump, 1165
——— steam pump, 1150
——— reciprocating, discharge from, 1138
——— roto-feed steam, Weir, 1147

PUM

Pumps, semi-rotary, 1138
——— sinking, 1161
——— steam, 1141
——— suction, 1135
——— turbine, Mather & Platt, 1161
——— turbo, 1157
——— 'Ubel' semi-rotary, 1139
——— vacuum, Bailey's, 1084
——— Victoria turbo, 1157, 1159
——— Warner-Anthony steam, 1147
——— Weir direct-acting steam, 1143
——— roto-feed steam, 1147
——— Willcox semi-rotary, 1138
——— Willcox's ejector steam-jet, 1508
——— wind, 1074
Punched nuts, cold, number per 100 lb., 241
Punching machines, power for, 974
Purchase of machinery, 2449
Purification of gas, 2076
——— water, 1297, 1448
Purifier and water softener, Royle's, 1448
Purifiers, gas, cost of, 2080
——— steam, 1527
Purifying water for boilers, 1442
Purity of sewage effluents, standard of, 1262
——— water, standard of, 1297
'Purser' cock and air-saver, 2166
Push plate conveyors, 823
Putty, 413, 2353
Pyrometers, fusion, 2267
Pyrometry, 2266

QUASI-ARC electric welding, 2303
Quay cranes, 1337
Quay walls, cost of, 1332
Quayside appliances, 1337
——— transporters, 1338
Queen-post roof, 331
——— posts, 328
Quenching baths for tempering cutting tools, 988
——— liquids, 988
Quick change universal drill jig, 963
——— drying red paint, 2355
——— varnish, 2359

RACES, head, 1190
Racks, strainer, 1189, 1232
Radial inward flow turbines, 1217
Radiant heaters, 2114
Radiation crucible furnaces, 2257
Radiator shutters for aeroplane engines, 1708
——— tablets, Boflerine, 1731
Radiators, 2114
———, Westinghouse, 2117
Radii of curvature for rails, 556
——— curves, table of, 561
Radio-telegraphy, 1962
Radius, equatorial, of earth and sun, 164
——— of bends for steam pipes, 1433
——— gyration, 124
——— wheel or pinion, 873
Rafters, 331
Rail bonds, 686

RAI

Rail chairs, screws for, 538
——— conductor leakage on electric tramways, 669
——— joints, tramways, 676
———, outer, superelevation of, 555
——— return of electric tramways, 686
——— welding, 688
Railless electric traction, 694
Rails, 533
——— British standard, 533
——— bullhead, 533
——— dimensions of, 533
——— electric tramway, 672
——— flat-bottomed or flanged, 536
——— radii of curvature and versed sines, 556
——— Sandberg, 675
——— steel, Board of Trade report on, 547
———, breaking load on, 548
——— tramway, 671
——— British standard, 673
——— weight of, 547
Railway Bills, Standing Orders of House of Commons for, 663
——— bridges, 549, 659
——— allowance for impact on, 550
——— rolling load on, 305
——— carriages, axle boxes, 627
——— wheels of, 627
——— electric lighting of, 628
——— heating by steam, 630
——— construction, cost of, 548
——— crossings, angles and leads of, 556
——— curves, 556
——— ranging out, 559
——— resistance of, 579
——— superelevation of outer rail for, 555
——— cuttings, volume of earth in, 479
——— walls of, 508
——— electrification, standards for, 671
——— expenditure and receipts in United Kingdom, 654
——— gradients, resistance due to, 580
——— level crossings, 660
———, light, Board of Trade memo., 689
——— locomotives, Caledonian, 570
——— Great Central, 568
——— Great Eastern, 568
——— Great Northern, 568
——— Great Western, 568
——— London and North-Western, 568
——— London and South-Western, 570
——— London, Brighton and South Coast, 570
——— Midland, 568
——— North British, 569
——— North-Eastern, 570
——— South-Eastern and Chatham, 570
——— motor cars, steam, 618
——— motors, Siemens, 1908
——— single-phase, 1913
——— permanent way, 539, 689
——— rolling stock, 619
——— material, British standard specification, 606
——— sidings, 658

RAI

Railway Signal Co.'s 'Crewe' all-electric signal system, 642
——— signals, 636
——— statistics, 655
——— structures, use of steel in, 662
——— wind pressure on, 662
——— waggons, 619-627
——— springs of, 628
——— working, single lines, 661
Railways, 533
——— Board of Trade regulations for, 657
——— cost of, 548, 653, 2427
——— electric, 668
——— gauges of, 549
——— land required for, 552
——— light, 553
——— cost of, 654
——— narrow-gauge, 522, 654
——— of United Kingdom, table of, 654
———, resistance to traction on level, 578
——— tube, London, 670, 2438
Rainfall, 1279
——— quantities and rates, 1281
Rainfalls, absorption and evaporation, 1281
——— and forests, 1285
———, flood discharge, 1282
——— heavy, in various countries, 1284
——— in British Isles, 1279
———, monsoon, India, 1267
Rain gauges, 1285
Rain-water pipes, 418
Raising and winzing, mining, 2173
Ralston's stability and trim indicator, ship, 1979
Ram leathers, 1152
Rammed furnace linings, 429
Ramoneur boiler tube cleaner, 1458
Rams, hydraulic, 1237
Ranging, 141
——— out curves, 559
Rankine, formula for safe load on piles, 497
——— on masonry, 389
——— rules for dams, 1290
Ransome concrete mixer, 397
——— steel sheet piling, 499
Ransomes, Sims & Jefferies, Orwell electric vehicles and trucks, 695
Rapid cutting tool steels, 980
Rating of electrical machinery, 1915
——— motor cars, 716, 1729
Ratio, 1
Ratios, cylinder area, ship, 1992
——— trigonometrical, 61
Rattler test for bricks, 424
Raw hide gears, 884
Reaction turbines, steam, 1562
——— water, 1206
Receipts, United Kingdom railway, 653
Receivers, air, 2165
Recipes, workshop, 2353
Recipro-turbine machinery, 1994
Reciprocals, table of, 71
Reciprocating pumps, discharge from, 1138
Recorder, CO_2, 1768
——— Lea's automatic water, for steam engines, 1628
——— Mirrlees cyclic variation, 1679
Rectangular beams, 298, 451, 456
——— pine, breaking strain of, 264
——— notch method of measuring quantity of water flowing in a stream, 1178

REI

Rectangular slabs, reinforced concrete, 455
Reddaway, F., & Co.'s belting, 832, 833
Redfern, C. G., on patents, 2407
Reduce shillings to decimal of pound, 108
Reducing valves, 1509
Reduction gear for steam turbines, 888, 1578, 2008, 2009
——— of volume under pressure, 215
Refacers, valve, 1464
Reflecting level, Abney, 158
——— power of surfaces, 2137
——— shades, 2143
Reflectors, 2140
——— Benjamin, 2141
Refractions, mean, table of, 171
Refractory cements, 431
——— materials, 426
——— melting points of, 188, 426
——— mortars, 429
——— and cement, specification for, 429
'Refrax' window water level, 1501
Refrigerating machinery, 1095
——— Pulsometer, 1122
——— for ships, 1117
———, Lloyd's rules, 1119
——— notes on, 1100
Refrigeration, 1095
——— compression system, 1097
——— ship, 1112
Refrigerator, 1099
Refuse, calorific value of, 1804
——— destructors, 1804
——— Heenan's test, 1804
——— 'Horsfall,' 1806
——— Pontypridd, 1805
——— Rotterdam, 1805
Registered dimensions of ships, 1973
Regulations, Danish, for working lifts, 1239
——— fire risk, 1949
——— railway, Board of Trade, 657
——— reinforced concrete, 439
——— road, for heavy motor cars, 713
——— traction engines, 713
——— wheels and road, 714
——— steelwork, 381
Regulator, air, mining, 2201
——— feed water, 1452
——— Crosby, 1452
——— Pelton wheel, 1200
——— steam, Hulburd's, 1455
——— turbine, water, 1221
Reinforced concrete, 435
——— arches, 467
———, bars for, 447, 448
——— beams, 459
——— bins, 464
——— bridges, cost of, 2417
——— columns, 460
——— dams, 1184
——— domes, 466
———, expanded metal for, 344
——— factory, 475
——— fire resisting floors, 448
———, French Government regulations, 464
——— L.C.C. regulations, 439
——— lock-woven mesh, 448
——— 'Perfector' system, 448

REI

Reinforced concrete pile, 'Coignet,' 494
——— Simplex, 496
——— piles, 496, 460, 462
——— loads on, 496
——— pillars, 438, 439
——— pipes, 464, 1192
——— , practical notes on, 473
——— , Report of Royal Institute of British Architects on, 435
——— reservoirs, 464
——— roads, 731
——— structures, designs, 449
——— , table of sectional area of rods, 474
——— walls, 462
——— work, specification for, 462
——— sheet lead 252
Reinforcing rods, areas of, 474
Reisert's feedwater softener, 1448
'Reliance' gauge glass protector, 1500
Renewal of waterworks, 1297
Rennie dock, 1341
Renold process for preventing corrosion, 2312
Repairing worn stone steps, 351
Repose, angles of, of soils, 491
Rescue apparatus for mines, 2202
Re-seating and re-facing valves, 1464
Reservoir, Assuan, 1294
Reservoirs, 1294
——— circular reinforced concrete, 464
——— evaporation and absorption from, 1271
——— general arrangement of, 1294
——— impounding, cost of, 2435
——— lining of, 1291
——— storage, 1294, 1369
Re-sharpening files, 998
Resilient steel gears, Seymour's patent, 884
Resistance, fire, 2147
——— reinforced concrete, 435
——— frictional, pneumatic foundations, 503
——— of air to train, 577
——— curves to train, 579
——— friction to train, 576
——— gradients on railways, 580
——— ships, 1984
——— tension members to lateral vibrations, 1750
——— wood to reversals of stress, 1749
——— to air of plane surface, 1071
——— compression strength of materials, [247
——— motion on roads, 1739
——— torsional rupture, 257
——— traction, 576, 677, 717, 1739
——— on a level railroad, 578
——— pavements, 718
——— roads, 717
——— tramways, 677
——— welding, 2306
Resistivity, electrical, of electrolytes, 1877
——— metals, 1856
Retaining-walls, 508
——— brick, 511
——— effect of weight of buildings on, 510
——— equilibrium of, 509
——— foundations of, 510
——— pressure of earth on, 508
——— water on, 508
——— rules for, 511

ROA

Retaining-walls, table of contents in cubic yards, 514
——— Trautwine's rule for, 512
——— wharf, 514
Retarder, draught, Robinson's, for locomotives, [599
Retort house governors, 2076
——— of gasworks, 2064
Retorts, gas, 430, 2064, 2074
——— specification for, 430
Reversing drive, automatic, for planing machines, 940
Revolutions of wheels or pinions, to compute, 873
Reynolds' hydraulic brake, 129
Rib bar for reinforced concrete, 448
Ricardo motor car piston, 1725
Richards' plastic white metal, 2334
Rider hot-air engine, 1703
Ridge board of roofs, 332
Ridged roof truss multipliers, 310
Rigging, steel wire standing, 269
Right-angled triangles, plane, formulæ for, 62
——— spherical, formulæ for, 69
'Rigifix' bolt hanger, for reinforced concrete, 475
Rims of brakes, cooling, 129
Ring lubrication, 910
——— spinning mills, 769
Ringelmann's brake, 128
——— smoke charts, 1783
Rings, chain, 280
——— for standard short-link chains, 281
——— , iron, strength of, 283
——— of pistons, packing metal for, 2335
——— Rowan's, 1604
River banks, erosion of, 1368
——— canalisation, 1371
——— dredging, 1370
——— regulating works in United States, 1372
——— regulation, cost of, 1371
Rivers, cost of canalisation of, 1373
——— critical velocity in, 1368
——— flow and discharge of, 1180, 1366
——— navigation of, 1366
——— to measure base line across, 143
——— width of, 144
——— raise the height of, by a weir, 1197
——— velocity of flow in, 1366
Rivet bars, 1416
Riveted girder-work, 302
——— joints, 302, 304
——— of boilers, 1420
Riveters, hydraulic, 1241
Riveting, 302, 304
——— and flanging, pressures required for, 1414
——— boilers, 1420
——— pneumatic, 997
Rivets, 265, 270, 302 612, 1417
——— and plates, strength of, 303
——— , bridge, 303
——— , copper, weight of, 243
——— for locomotive boilers, 611
——— , iron, 1416, 1417
——— weight of, 243
——— steel, 265, 270, 612, 1417
——— strength of, 303, 1420
Road administration, 701
——— Board, 701
——— Laboratory Reports, 738, 739

ROA

Road Board Laboratory tests of road stones, 738
—— camber, 720
—— carpet, waterproof, 723
—— costs, data, 740
—— crusts, 721
—— drainage, 720
—— engineers, legal points for, 704
——, London, paving, 734
—— maintenance costs, 705, 706, 2333
—— metal, 709
—— mileage in relation to population and area, 705
—— regulations for wheels and loads, 713
—— resistance to traction, 717
—— scavenging, 736
—— specification, wood paved, 727
—— statistics, 705
—— surface tarring, 724
—— tar macadam, 724
—— traffic, 719
—— watering, 736
—— wearing layers, 721
—— width of, 719
—— wood paving, 727
Roads, approximate grading analysis, 722
—— bituminous macadam, 726
—— brick, 732
—— concrete, 729
—— cost of, 705, 2429
—— country, 718
—— effect of drought on, 721
—— main, 710
—— maintenance cost of, 705, 706, 2429
—— reinforced concrete, 731
—— resistance to traction on, 717, 1739
—— slipperiness of, 726
Robey boilers, 1473, 1476
—— drop valve gear, 1534
—— high speed engines, 1536
—— oil engines, 1687
Robinson anemometer, 1072
—— draught retarder, 599
—— hot-air engine, 1703
—— superheater, 599, 2024
Robson oil engines, 1696
Rock blasting, 1350
—— boring, 2061
—— breakers, sub-aqueous, 1351
——, bulk of, 481
—— drilling and blasting, 1350
—— drills, 2164
—— Hardy-Simplex air hammer, 2164
—— fill dams, 1184
——, sub-aqueous, removal of, 1350
Rocker joint chains, 868
Rocks used for road metal, 737
Rods, connecting, motor car, 1726
—— copper, for locomotives, 610
—— round and sq. for reinforced concrete, 474
'Rok' roofing, 337
'Rokalba' roofing, 337
Rolled copper, lead, and brass, sheet and bars, weight of, 220
—— iron, flat, weight of, 218
—— steel joists, 339
—— steel, flat, weight of, 220
—— girders, 523
Roller bearings, 904
—— lubrication of, 905
—— tube cutter, 998

ROP

Rollers, bridge-expansion, 550
—— steam, 716
Rolling loads, on railway bridges, 305
—— mill engine, Galloway, 1539
—— period of ships, 1971
—— stock of railways, 619
——, railway, British standard specification for, 606
Rolls, gold mining, 2218
Roman cement, 401, 431
'Romanium' alloy, 2331
Roofing, corrugated-iron, 373
—— 'Cuirass,' 2357
—— expanded steel concrete, 347
—— galvanised, paint for, 311
—— materials, 334
—— heat-insulating value of, 334
——, 'Rok,' 337
—— 'Rokalba,' 338
—— 'Ruberoid,' 328, 336
—— self-supporting, 309
—— sheets, asbestos, 335, 336
—— tiles, 424
—— 'Fibrent,' 336
——, 'Poilite,' 335
——, zinc, 418
Roofs, 328, 373
—— angles of, 328, 373
—— collar beam, 329
—— corrugated-iron for, 373
—— cost of, 2430
—— coverings of, 328
—— dimensions of parts of, 374
—— joints of wooden, 332
—— king-post, 320
—— load on, 373
—— paint for, 2356
—— pole-plate of, 332
—— pressure of wind and weight of snow on, 338
—— queen-post, 331
—— ridge-board of, 332
—— ridged, truss multipliers, 310
—— scantlings for, 330
—— self-supporting, 309
—— single-span or couple, 329
—— steel, framing and covering, 306
—— tie beam of, 332
—— wall-plate of, 330
—— weight of parts of, 328
—— snow on, 334
—— wind pressure on, 334
—— wooden, parts of, 374
—— workshop, 306, 745
Rooms, battery, 1881
—— cold storage, piping of, 1112
Roots, cube, table of, 72
—— square, table of, 72
Rope brake, Hirn's, 126
—— driving, 842
—— flywheels for, 842
—— efficiency of, 850
—— haulage, 2192
—— socket, 853
Ropes and cables, lengths, 2381
——, cotton, 842, 849
——, crane, 794, 805
——, T. & W. Smith's, 805
—— driving, 772, 842
—— guard for, 845

Ropes, driving, power, of 847
——————, sizes of, 847, 849
——————, speed of, 843
—— flat, 2196
—— flattened strand, J. & E. Wright's, 2193
—— flexible steel wire, T. & W. Smith's, 805
—— galvanised steel wire, tests for, 271
—— haulage, 256, 257, 853, 2192
—— hemp, strength of, 283
—— horse-power transmitted by, 847
—— iron, weight of, 2196
—— Lang lay wire, 853
—— locked coil, 812, 2194
—— mining, 256, 805, 853, 2192
—— preservation of, 283
—— round, 2196
—— Smith's, T. & W., flexible wire, 805
—— splicing 851
—— steel wire, flexible, 283, 805, 2196
——————J. & E. Wright's, 2193
—— strength of, 256, 283
—— testing, 283
—— weight of, 805, 2192, 2196
—— winding, 2192
—— wire, Bullivants', 256
—— —— durability of, 803
—— —— haulage, 256, 257, 853, 2192
—— —— preservation of, 283
—— —— lubrication of, 854
—— working strength of, 2196
Ropeways, aerial, 810
'Rosseline,' 1662
Rotary air-pump, Leblanc, 1624
—— blowers, 2132
—— converters, 1891
—— Meter Co.'s rotary or turbine meters, 1311, 1312
—— pump, semi-, 'Ubel,' 1138
——————, Willcox, 1139
Rotating body, energy of, 126
Roto-feed pump, Weir, 1147
Rotterdam refuse-destructor, 1805
Round mining ropes, 2192
—— steel, weight of, 220, 2192
—— timber, solidity of, 373
—— wire ropes, 256, 2192
Rowan's pistons, 1604
Rowley, on spur gearing, 880
Row's evaporator, 2030
—— feed-water heater, 1451
Royal Commission on sewage, 1262
—— Institute of British Architects Report on reinforced concrete, 435
—————————— Report on strength of bricks, 253
Royles Ltd. evaporator, 2030
—— feed-water heater, 1451
—— water softener and purifier, 1448
Rubber, hard, 2375
—— specification for vulcanised insulated wires and cables, 1865, 1870
—— tensile strength of, 249
—— tyres, 718
Rubble masonry, 387
'Ruberoid' roofing, 328, 336, 337
Ruble elevator, mining, 2223
Rudders, 1987
Ruggles-Coles drying machine, 2124
Rule for leads of railway crossings, 559
——, slide, 105
—— Fuller, 107
—— table of gauge points for, 109
Runs, barrow and cart, 491
Runways, overhead, 789
Rupture, torsional, of woods by shock, 257
Russell, J., & Co., Ltd., table of weight of pipes, 228
Russian weights and measures, 2397
Rust cleaning, 2368
—— prevention in ferro-concrete, 399
—— proofing, iron, 2309, 2248
Rustless iron, 2313
—— steel, 2285, 2369
Ruston crankshift alignment indicator, 1591
Ruston-Hornsby gas engines, 1645
—— oil engines, 1691, 1693
—— suction gas plant, 1842, 1844
Ruston excavator, 2431
Rylands' table of iron wire, 254
—— steel wire, 255

SAFE chain loads, 280
—— dimension limit for rolled steel, 315
—— steel girders, 315
—— limit of loading wood and iron beams, 261
—— load on bearing surface end of girders, [493
—— bolts and nuts, 1045
—— brick walls, 494
—— bridge struts, 525
—— chimney foundations, 493
—— columns, 494
—— floors, 494
—— materials, 493
—— ordinary foundations, 493
—— piles, 497
—— load on reinforced concrete, 460
—— stanchions, 300, 303
—— stone walls, 494
—— pressures for lubricants, 898
—— on bearings, 897
—— working load, chains, 280
——————, ropes, 283
Safety, factor of, 298
—— lamps, 2201
—— oil fuel burning, 1824
—— valves, 1423, 1497
—— areas of, 1497
—— Board of Trade rule, 1497
—— Bureau Véritas rules, 1498
—— Lloyd's rules, 1498
—— notes on, 1499
—— springs of, Board of Trade rule, 1498
Sag of conductors, 1933
Sags of aluminium stranded cables, 1933
St. Helens Cable & Rubber Co.'s cab-tyre sheathed cable, 1865
Sale and purchase of machinery, 2449
Salt-glazed pipes, 425, 1246
—— ware, 425
Salt solutions, boiling-points of, 195
Salts, 2267
Salvage work, pneumatic tools for, 996
—— ; flow of, 2377

SAN

Sand, mortar, test for impurities in, 392
——- moulding, 2344
—— pump dredgers, 1346
Sandb-rg rails, 675
Sandblast process of recutting files, 998
Sand blasting, 1018
Sanders' formula for safe load on piles, 497
Sand-lime bricks, 422
Sandy Bay breakwater, 1325
Sandycroft Cascade motor, 1912
——— ——— Hunt motor, 1913
Sanitary engineering, 1245
——— ware, 426
Saturated salt solutions, boiling points of, 195
—— —— steam, properties of, 1392, 1393, 1614
——— vapour in air, 1101, 1640
Sawing, cold steel, 975
——— machinery, 977
——— metal, hand, 976
Saws, band, 977
——— fret, 979
—— back, 979
Scaffolding, 505
——— knots, 506
—— —— of chimneys, 516
Scale in boilers, preventives of, 1440
Scales for surveys, 146
——, thermometer, 183
Scantlings for roofs, 330
Scarfing beams, 524
Scavenging, road, 736
Schmidt superheater, 597
Schmott's table of frictional resistance of pneumatic foundations, 503
Schneider Diesel engines, 1672
Scleroscope, Shore's, 1001
Scoop wheels, 1169
Scotch pig iron, 2274
Scott and Mountain tables of horse-power for haulage, 854
Scott Dunbar auxiliary top and side telescope, 153
Scott-Snell, petrol air gas, 2098
Scraper conveyors, 821
Scrapers and brushes, Simplex patent boiler tube, 1459
Scraping water mains, cost of, 2436, 2437
Screw, force by, 119
——— heads, standard, 1042
——— helix, to construct a, 21
——— piles, 498
——— steamers, shafts of, 925
——— taps and tapping, 1060
——— threads, American, 1031, 1037, 1038
——— ——— British Association, 1031, 1036, 1037
——— —— British standard Whitworth, 1032
——— —— cycle, Engineers' Institute standard, 1041
——— —— fine, British standard, 1033, 1038, 1048
——— ——— forms of, 1031
——— ——— French standard, 1037
——— —— International or metrical, 1038
——— —— on water and gas pipes, 1042
——— ——, Sellers, 1031, 1037
——— ——— standard, 1031

SEW

Screw threads, Swiss or Thury, 1031, 1036
——— ——— Whitworth, 1031, 1032, 1038
Screwing and tapping machines, power for, 973
——— machines, 964
'Screwol,' 967
Screws, 1031
——— prevent rusting in, 2374
——— small, heads for, 1042
——— steel, for rail chairs, specification for, 538
——— threads of, 1031
——— weight of, 243
——— wood, 1040, 1041
Scribe marks, 365
Scrubbers, gas, 2067
Scullery sink, 1263
Sea, distance of objects at, 164
—— level, to reduce a measured base to, 148
——, temperature of the, 190
Seam inspection blocks and covers, asbestos cushioned, 1429
Seamless brass tubes, weight of, 238
——— copper tubes, weight of, 236
——— soft copper jointings, Hulburd's, 601
Seasoning timber, 214, 365
—— —— ——— shrinkage by, 368
—— —— woods, increase of strength by, 263
Seating block, asbestos cushioned, Pearson's, 1429
Secret commissions, 2443
——— joints in flooring boards, 342
Secrets, disclosure of, 2443
Sectional dock, pontoon, 1341
Sectioning, electric tramways, trolleys, 683
Sections, British standard, 315
——— conic, 27
——— railway, House of Commons rules for, 664
Seewer Pelton wheel regulator, 1205
Seger cones, 2268
Segments of a circle, 49, 56
Sellers' bolts and nuts, 1045
——— screw threads, 1031, 1037
Semi bauxite bricks, 426
Semicircle, angles at circumference of, 20
Semi-Diesel engines (*see* Oil engines)
Semi-rotary pump, Willcox, 1138
——— —— 'Ubel,' 1139
Semi-steel, 2279
Sentinel pyrometers, 2269
Separators, oil, 1456
——— steam and water, 1527
Series, 13
——— wound direct-current motors, 1905
Service reservoirs, 1291
'Servo' steam regulators, 1455
Setting, boiler, 1427
——— out arches, 520
——— stones, 385
Settings, boiler, leaky, 1431
Sewage, bacterial treatment of, 1255
——— disposal, Royal Commission on, standard of purity for sewage effluents, 1262
——— effluents, standard of purity, 1262
——— hourly variation of flow of, 1252
——— land treatment of, 1254
——— Local Government Board's requirements, 1258

SEW

Sewage pipes, British standard, 245
——— sludge, 1254
——— ——— activated process, 1261
——— treatment of, 1252
——— works, cost of, 2430
Sewerage systems, 1250
Sewers, 1245
——— brickwork for, 1288
——— circular, 1245
——— discharging capacity of, 1245
——— egg-shaped, 1248
——— expanded steel concrete, 349
——— flushing, 1250
——— rate at which rainfall reaches, 1245
——— salt-glazed pipes for, 425, 1246
——— storm water, discharge of, 1283
——— ventilation of, 1251
Sextant, box, 157
Seymour's resilient steel gears, 884
Shaft furnaces, 2236
——— pillars, 2177
——— sinking, mining, 2169, 2172, 2173, 2174
Shafting, 919
——— diameter of, 920, 922
——— horse-power of, 920
——— lubrication of, 910
——— speed of, 921, 922
——— steam turbine, 924, 927
——— steel, 921
——— supports of, 920
——— wrought-iron, 919, 922
Shafts, chimney, stability of, 515
——— crane, 794
——— crank, 925
——— for paddle engines, 927
——— hollow, 920
——— mine, 2169
——— deep, 2175
——— oil engine, 1699
——— propeller, tunnel, and thrust, Bureau Véritas rules, 927
——— steamship, 924
——— Board of Trade rules for, 923
——— Bureau Véritas rules for, 925
——— Lloyd's rules for, 924
——— twisting angle of, 260
——— ventilating, 2136
Shale oil, 1809
Shaping and slotting machines, power for, 973
Sharpening angles of wood machine cutters, 990
——— files, 998
——— steel mining bits, 2162
Shaw, Hele-, friction clutch, 855
Shear reinforcement, 438
Shearing machines, power for, 974
——— stresses, 292, 454
Sheet aluminium, weight of, 223
——— brass, weight of, 220
——— copper, weight of, 220
——— iron, galvanised corrugated, 308, 311
——— weight of, 215
——— lead, weight of, 220, 221
——— reinforced, 252
——— metals, specification of, 221
——— weights of, 215, 216, 220
——— steel piling, 499

SHO

Sheet zinc, trade gauge, 2391
——— weight of, 221
Sheeting for reservoirs, 1291
Sheets and hoops, Birmingham gauge for, 2393
——— asbestos roofing, 335, 336
——— steel, Indian Government tests, 274
Shell or convex surface, centre of gravity of, 116
Shells, boiler, 1414, 1419
——— strength of, 1414
Sherardising iron, 2313
Shillings reduced to decimal of pound, 108
Shingles, 372
Shipbuilding, Bureau Véritas tests for steel and iron, 270
——— cranes, 791
——— Lloyd's tests for steel, 268
——— steel, British standard specification for, 268
Ship canals, 1385
——— construction, Lloyd's rules for the application of electric arc welding to, 2060
——— Lloyds rules for ferro-concrete vessels, 2060
——— propulsion, electrical, 1586
——— refrigeration, 1112
——— steel, tests, 272, 273
Ships, boilers, design of, 1992
——— bottoms, painting of, 2059
——— cargo, fuel economy, 1988
——— centre of buoyancy, 1976
——— flotation, 1976
——— coal consumption, 1986
——— coefficients of displacement, 1974
——— concrete, 2059
——— deadweight, 1983
——— dimensions, 1973
——— displacement curves, 1975
——— draft, 1974
——— economical speed, 1986
——— electrical equipment of, Institution of Electrical Engineers regulations, 1946
——— engine and boiler design, 1992
——— estimate sheets of, 1987
——— horse-power of, 1984
——— inclining experiment, 1977
——— iron and steel for building, 268, 270, 272, 273
——— longitudinal metacentre, 1978
——— machinery, weight of, 1982
——— moulded dimensions, 1973
——— overall dimensions, 1973
——— propulsion, electrical, 1586
——— refrigerating machinery for, 1117
——— registered dimensions, 1973
——— resistance of, 1984
——— rolling period of, 1977
——— skin effective horse-power, 1984
——— stability, 1977
——— and trim indicator, Ralston's, 1979
——— steam turbines, 1545, 1995
——— ——— arrangement of, 1996
——— transverse metacentre, 1976
——— wave effective horse-power, 1984
——— weights, 1981
——— of machinery, 1982
——— wetted surface, 1975
Shore scleroscope, 1001

SHO

Shoring buildings, 507
Short-link chains, standard, 281
Shot holes, drilling, 2162
Shouldered tenon, 325
Shrinkage of castings, 2315
——— materials, 481
——— timber, 365
Side-groove steel piling (Annison's), 500
Side slopes, form of, 489
Sides of squares, 48
Sidings, railway, 658
Siemens' Britannia lamps, 1944
——— dry battery cells, 1878
——— Dura cells, 1878
——— ebonite, 227
——— electric winders, 808
——— Hopkinson-Thring torsionmeter, 133
——— inert battery cells, 1878
——— -Obach dry batteries, 1878
——— rotary meters, 1312
——— system of electrically operated points and signals, 646
——— Torsionmeter, 133
Sieves, standard, 430
Sight glasses, Hulburd's cartridge, 1501
Signalling, electric, in coal mines, 2203
Signals, railway, 637
——— sea, audible, 1362
——— explosive, 1362
——— submarine sound, 1362
Signs and symbols, algebraical, 1
Silica bricks, 426
——— specification for, 428
Silicate cotton or slag wool, 350, 1109, 1439
Silos, reinforced concrete, 465
Silver and gold tables, 2220
——— solder, 2341
——— tensile strength of, 248
——— wire gauge for, 2391
Silvering mirrors, 2377
Silvertown electricity-supply cables, 1857
——— instructions *re* joints of electrical conductors, 1866
Simple and compound locomotives, cylinders of equivalent power, 591
——— interest, 3
——— pendulum, 122
Simplex concrete pile, 496
——— gas-engine starter, 1661
——— indicator, steam, 1409
——— patent boiler tube brushes and scrapers, 1459
——— steel conduit system of electric-light wiring, 1871
——— valve re-seater, 1464
Simpson's flowmeter refrigeration, 1114
Simson's rule for area computation, 143
Sinclair water-tube boiler, 1490
Sines, table of, 63
——— versed, for rails, 556
Single-acting force pump, 1136
——— altitude of the sun, to find variation of compass by, 161
——— balk dams, 505
——— joisted floor, 338
——— joists, Baltic yellow fir, 341
——— lines of railway, working, 661
——— phase commutator motor, 1913
——— induction motor, 1909
——— sided docks, 1342

SMO

Single-span roof, 329
Sinh, table of values of, 39
Sink, scullery, 1263
Sinking cylinders, pneumatic process, 498
——— foundations by freezing process, 503
——— fund table, annual, 9
——— pumps, 1161
——— , shaft, mining, 2169
——— wells, 1287
Sinks and water-closets, 1263
Sirens, 1362
Size, 415
——— of annealed and bright iron wire, 254
——— books and paper, 2399
——— bricks, 374, 423, 428
——— clock dials, 2377
——— haulage wire ropes, 853
——— mining ropes, 2196
——— Paxman 'Economic' boilers, 1479
——— Essex vertical boilers, 1478
——— pulleys and drums, 853
——— slates, 411
——— steam hammers, 1022
——— timber, 364
——— type, 2400
Sizing, mining, 2206
Skefko ball bearings, 900, 902
Skelton's table of broad flange beams, 314
——— tables of safe loads on bridge struts, 525, 526
Skin effective horse-power of ships, 1884
——— friction of aeroplane, 1748
Slabs, floor, concrete, 455
Slag concrete, 395
——— wool insulation, 350, 1109, 1439
Slates, 'Fibrent' asbestos-cement, 335
——— sizes of, 410
——— underlining, 411
——— weight of, 411
Slating, 409
——— nails, 410
Sleepers, 538
——— creosoting, 538
Slide rule, 105
——— constants for bar weights, 110
——— Fuller, 107
——— table of gauge points for, 109
——— valve gear, 1605
Slides, felt wipers for, 979
Slings, safe working loads for, 282
Slopes, angles and lengths of, 489
——— chaining on, 145
——— of excavations and embankments, 489
——— , side, form of, 489
Sloping ground, chaining over, 145
Slotting and shaping machines, power for, 973
Sludge, sewage, 1254
Sluice gates, 1232
——— measurement, 1182
Sluices, mining, 2221
——— , grade and duty of, 2221
Smith, Angus, composition, 2358
Smith, T. & W., Ltd., flexible steel wire crane ropes, 805
Smith, Major & Stevens, electric lifts, 808
Smith's fires, centrifugal fans for, 2252
Smoke and coal combustion, 1782

SMO

Smoke and dust precipitation, electrical, 1958
—— flue pipes, British standard, 2109
—— charts, 1783
——, colour of, 1784
Snercold petrol air gas plants, 2098, 2099
Snifting valves, 1091
Snow, weight of, 338
Socket, Blackett's wire-rope, 853
—— joints, standard Metropolitan Water Board, 1306
—— British Standard for cables, 1870
—— pipes and fittings, 235
Softening water, 1299, 1442
Soft woods, 351
Soil evaporation, 1272
—— pipes, 1265
Soils, angles of repose of, 491
—— foundations on different, 493
—— weight of cubic yard of, 491
Solder, 413, 2340
—— aluminium, 2342
—— bronze, 2343
—— cast iron, 2343
—— cold, 2343
Soldering, 2340
—— cast iron, 2343
Solid figures, centre of gravity of, 115
—— fuels, 1773
Solidity of circle zones, 49
—— round and square timber, 373
Solids, specific gravity of, 209
——, surface of, 24
—— velocity of sound through, 202
Solutions, boiling-points of, 195
—— glutinous, standard evaporators for, 778
Soot, effect of, on boilers, 1439
—— removers, boiler tube, 1459
Sound, 201
——, distance of transmission of, 201
—— signals submarine, 1362
——, velocity of, 201
—— through solids, 202
Soundings, surveying, 148
—— to reduce, to low water, 149
South Eastern & Chatham Rly. locomotives, 570
South, to determine by watch, 162
Space, floor, for machine tools, 752
—— stowage of coal, 1775
Span, length of, overhead wires, 1932
—— wire for electric tramways, 686
Spanners, 1055
—— box, 1056
—— British standard, 1055
—— dimensions of, 1056
Spans of bridges, formulæ for, 550
Speaking-tubes, 202
Specific gravities and weights, 207
—— table of, 210
—— of ebonite, 214
—— elastic fluids, 215
—— gases, 209
—— liquids, 209, 212
—— metals, 210
—— solids, 209, 211
—— water, 208
—— woods, 212, 214
—— gravity, 208
—— of accumulator acid, 1880

SPE

Specific gravity of coal, 2157
—— heat, 190
—— of gases, 191
—— steam, 1394
Specification, Admiralty, oil fuel, 1822, 1823
—— British standard, bull head rails, 533
——, charcoal iron lapwelded boiler tubes, 1425
—— creosote oil, 370
—— electric meters, 1939
—— flat-bottomed rails, 536
—— poles for electric tramway, 691
—— Portland cement, 404
—— railway rolling stock, material for, 606
—— steel for bridges, 264
—— steel conduits, 1872
—— steel for shipbuilding, 268
—— tramway poles 691
—— boiler mountings, Hopkinson's, 1510
—— building bricks, 424
—— coal tar fuel for Diesel engines, 1817
—— creosote oil, 370
—— electric generators, 1882, 1887
—— lifts, 806
—— rotary converter, G.E.C., 1891
—— fireclay bricks, 428
—— gas retorts, 430
—— nickel steel, 2286
—— plates for locomotive boilers, 611
—— refractory mortars & cement, 429
—— reinforced concrete work, 471
—— sheet metals, 221
—— silica bricks, 428
—— steel, 2285
—— bolts, screws for rail chairs, spikes, 538
—— 3 per cent. nickel steel, 2286
—— tramways, British Engineering Standards Association, 672
—— vulcanised rubber electricity supply cables, 1870
—— wood paved roadway, 727
Spectrum, 202
—— decomposition of light in the, 202
Speed, critical turbine (steam), 1572
—— reduction gear, turbine, 888, 1581, 2009
—— regulation, direct current motors, 1904
—— of bolt and nut machines, 974
—— centrifugal pumps, 1155

SPE

Speed of cotton machinery pulleys, 771, 774
——— cutting, carbon steel lathe tools, 991
——— drills, 954
——— emery wheels, 1007
——— grinding wheels, 1007
——— grindstones, 1004
——— lathes, 939
——— locomotive pistons, 582
——— marine engine pistons, 1993
——— milling cutters, 945
——— planing machines, 940
——— shafting, 922
——— ships, economical, 1986
——— water through pipes, 1128, 1302
'Speedicut' twist drills, 953
Spelter solder, 2341
Spence's metal, 2338
Spencer-Bonecourt gas-fired boilers, 1846
——— waste heat boiler, 1850
——— Hopwood boiler, 1496
———, John, Ltd., table of wrought iron tubes, [231
Spherical distances, 69
——— excess, 148
——— oblique-angled triangles, 70
——— right-angled triangles, 69
——— triangles, 69
——— areas of, 70
——— trigonometry, 69
Spigot joints, cast-iron pipes for waterworks, 1307
Spikes, railway, 538
Spillway dams, 1187
Spindle, circular and parabolic, 26
Spinning mills, 769
———, ring, 769
Spiral angle of teeth, 856
——— or helical springs, 608, 931
——— points of railway curves, 565
Spirals, 38
Splicing driving ropes, 851
Spontaneous combustion in mines, 2203
——— ignition, temperatures of, 1772
Spray painting, 415
Springs, 931
——— bearing, 607, 628
——— buffer, 628
——— carriage motor car, 1738
——— clock type, 935
——— compression, 936
——— heat treatment of, 935
——— helical, 608, 931
——— laminated, 607
——— manufacture of, 936
——— of locomotives, 607, 608
——— motor cars, 1738
——— railway carriages and waggons, 607, 628
——— safety valves, Board of Trade rules for, 1498
——— phosphor bronze, 934
——— spiral or helical, 608, 931
——— valve, motor engines, 1737
——— volute and helical, for locomotives, 608
Sprinkler stoker, Bennis, 1785
Spur gearing, 830
Square root, 13
——— roots, table of, 72
——— steel, weight of, 220
——— timber, solidity of, 733

STA

Squares, sides of, 48
——— table of, 72
——— areas of, 48
Stability and trim indicator, ship, 1979
——— of chimney-shafts, 515
——— dams 1186
——— ships, 1977
Staffordshire blue bricks, 423
——— cold-blast iron, 2275
Stair-treads, Mason's, 351
Stairs, 351
Stamps, drop, 1028
——— duty of, mining, 2217
——— gold milling, 2217
——— mining, 2205, 2217
Stanchions, mild steel, 300, 301
Standard aluminium cables, 1929
——— American screw threads, 1037
——— bends for steam pipes, 1433
——— candles, 2137
——— conditions for design of marine boilers, 1416
——— creosote, 371
——— cycle screw threads, 1041
——— driving chains, 863
——— electrical machinery, 1915
——— electricity supply meters, 1939
——— flue pipes, 2109
——— foreign horse-powers, 1400
——— French screw threads, 1037
——— hot water pipes and fittings, 2108, 2109
——— insulating varnishes, 1966
——— marine boilers, 1416
——— of purity of sewage effluents, 1262
——— oils for lubrication, 914
——— pipe flanges, American, 1059
——— threads, 1044
——— Portland cement, 404
——— purity of water, 1297
——— railway electrification, 671
——— railway rails, 533, 538
——— materials, 606
——— screw gauge, 1031
——— heads, 1042
——— taps, 1060
——— sections, 315
——— short-link chains, proportion of rings for, 281
——— sieves, 430
——— sizes of conductors for electric supply mains, 1860
——— steel conduits, 1872
——— trolley wheels, 684
——— tubular poles for electric tramways, 691
——— weights of cast iron water pipes, 228
——— wire gauge, 2392 (*see also* 'British standard')
Standards of deals, 364
——— fire resistance, 2147
——— light, 2137
———, mining and metallurgy, 2219
——— Newall, 756
Standing Orders of House of Commons for Railway Bills, 663
——— for Tramway Bills, 697
Standing rigging, steel wire, 369

STA

Stanley's cranked gimbal dial, 156
——— drawing pen, 178
——— Fuller slide rule, 107
——— gradiometer, 157
——— surveying instruments, 149–158
Star, Pole, to find, 164
Stars, identification of, 164
Starters for gas-engines, 1660
Static balancers, 1924
Statics, 115
Stations, railway, 658
Statistics, highway, 705
———, railway, 655
Status, legal, of engineers, 2441
Stay bars of boilers, 1416
Steam, 1391
———and water separators, 1527
———atomiser, Guyot's, 1819
——— Holden's, 1819
———boiler plant, efficiency of, 1468, 1469
———boilers, size of chimneys for, 519
———, buildings warmed by, 2111
———condensers, 1613
———consumption, 1400, 1579
——— of steam-hammers, 1022
——— winding engines, 1405
———, theoretical, 1400
——— typical, 1403
———diagram factor, 1993
———dryers and purifiers, and water separators, 1527
———engines, Coltman, 1541
——— engines, Davey Paxman portable, 1542
——— positive valve gear, 1532
——— governor of, 123, 1596
———, horse-power of, 1399
——— indicator of, 1405
——— portable, 1542
——— excavating, cost of, 2431
——— , exhaust, heating by, 2111
——— pipes, 1434
——— expansion of, 1397, 1992
——— flow of, through orifices, 1397
——— pipes, 1396
——— turbines, 1545
———hammers, 1021
——— formula for, 1023
——— heating of railway carriages, 630
——— buildings by, 2107, 2111
——— jackets, 1523
——— main, area and diameter of (heating), 2105
———meters, 1320
———passages, area of, 1597
———pipes, 1432
——— bends for, 1433
——— copper, 1432, 1435
——— coverings for, 1438
——— exhaust, 1434
——— joints of, 1435
——— leaks in, 1436
——— loss of heat from, 1437
——— steel bends, 1433
——— thickness of, 1433
——— valves of, 1459
——— weight of, 228, 233
——— power plant efficiency curves, 1629
———, pressure and temperature of, 1392

STE

Steam pressure in cylinders of compound and triple-expansion engines, 1993
——— pressures corresponding to temperatures, 1392
———, properties of saturated, 1392, 1614
——— pumps, 1141
——— Caird & Rayner, 1143
——— Clarke, Chapman, 1141
——— Warner-Anthony, 1147
——— Weir, 1143, 1147
——— purifiers, 1527
——— radiators, 2117
——— railway cars, 618
——— regulators, 1455
——— rollers, 716
———, saturated, properties of, 1392, 1393, 1614
——— saving by superheating, 1404
——— separators, 1527
———, specific heat of, 1394
——— superheated, 1394, 1513
——— effect of, on steel, 249
——— heat of, 1395
——— superheaters, 597, 1514, 2024
———, temperature and pressure of, for vacuum, in inches, 1614
——— of, 1394
——— trap, Bradford, 1521
——— Cranetilt, 1522
———, 'Ubel fullbore,' 1521
——— traps, 1521
——— general notes on, 1523
——— turbine, consumption of steam in, 1512
——— marine, Brown Curtis, 2002
——— Ljungström, 2008
——— Parsons, 1999
——— shafting, 924, 927
——— turbines, 1545, 1995
——— marine, 1995
——— vacua, high temperatures of, 1394
——— valves, area of, 1597
——— v. oil engines, 2057
——— waggons, working costs of, 742
———, work done by, 1400, 1401
Steamers, cargo, 1988
——— meat-carrying, 1114
Steamship boilers, various types of, 2013
——— shafts, Board of Trade rules for, 923
——— Bureau Véritas rules for, 925
——— Lloyd's rules for, 924
Steamships, arrangement of turbines in, 1996
Steel, 2282
——— Admiralty tests for, 264, 268
——— alloy, Cobaltron, 2286
——— angle and tee, weight of, 225
——— bar, Indian Government tests, 274
——— bars, estimating cost of, 761
——— , tests for, 266, 274
——— beams, Skelton's table of, 314
——— belting, 841
——— bends for steam pipes, 1433
——— bits, sharpening, 2162
———, boiler, 1414
——— boiler plates, 1421
——— stays, 1422
——— Indian Government tests, 274

SUL

Sulphurous-anhydride refrigerating machines, 1101
Sulzer Diesel engines, 1673, 1674, 2044
Sulzer-Maag gears, 882
Sulzer submarine engines, 2054
Summerson, T., & Sons' resilient steel gears (Seymour's patent). 884, 885
Sun, to find variation of compass by single altitude of, 161
Sun's parallax in altitude, 166, 171
—— radius and distance from earth, 164
Sunbeam aeroplane engine, 1715
Superelevation of outer rail, 555
Sundial, horizontal, 173
Superheat, economy of, 1514
Superheated steam, 1394, 1513
——————, degree of, 1513
——————, economy of, 1514
——————, effect on steel, 249
——————, heat of, 1395
——————'Occentoline' oil for, 1515
Superheater Corporation's 'Robinson' superheater, 599, 2024
Superheaters, 597, 1514, 2024
—— —— Babcock & Wilcox, 1517
—— —— Clarke, Chapman & Co., 1486
—— —— Galloway, 1517
—— —— Gordon, 1515
—— —— heating surface of, 1514
—— —— locomotive, 597
—— —— McPhail & Simpson's, 1517
—— —— North Eastern, 2025
—— —— Robinson, 599, 2024
—— —— Schmidt, 597
—— —— Sugden, 601, 1519, 2027
—— —— Thompson, 1519
'Super-Screwol,' 967
Superstructures of bridges, 524
Supplement of an angle, 60
Supply cables, electricity, 1857, 1863
Supports of shafting, 920
—— —— —— —— Francis' table, 922
Surcharged wall, 510
Surface condensers, 1615
—— measures, 2385
—— of boiler tubes, 1425
—— circle zone, 49
—— solids, 24
—— tarring of roads, 724
——, wetted, of ships, 1975
Surfaces, 2385
—— boiler, 2013
—— Ferodo friction, 797, 826, 861
—— reflecting power of, 2137
Surveying, 141
—— chain, 2381
—— instruments, 149
—— mining, 156
——, rate of, 143
—— soundings, 148
—— telemeter, Steward, 159
Surveys, scales for, 146
Suspended ceilings, expanded metal, 346
Sutcliffe Bros. 'Crown' coverings for boilers and pipes, 1439
Swan, Hunter & Wigham Richardson, marine oil engine, 2046
—— —— —— —— on floating docks, 1341–1344
Swing bridges, 550

TEL

Swiss screw thread, 1031, 1036
Switch and transformer oil, 1968
Switch-board for electric traction, Board of Trade, 691
Switch gear, British Standard, 1916
Sykes' electro-mechanical railway signals, 651
Symbols and signs, algebraical, 1
Synchronous motors, 1909
Synchroscope, 1937
'Syronite' anti-rust paint, 2353

T BARS, 317
T beams, 438
T joint, 324
Tacheometer, subtense measurements, 155
Tail haulage, 854, 2187
Tall chimneys, 516
Tangential angles for chords, table of, 560
Tangents, table of, 63
Tangye gas engines, 1651
—— —— —— starter, 1661
Tank locomotives, 570
Tanks, cost of, 2431
—— pressure, 2165
—— water, 1308
Tap grinding, 1061
Taper measures for twist drills, 956
—— poles, electric tramways, 692
Tapping, 1061
—— and screwing machines, power for, 973
Tapping, drill sizes for, 1060
—— screw, 1060
Taps, screw, Whitworth standard, 1060
Tar distillates, 1813
—— distillation, 2082
—— fuels, 1817
—— macadam, 724
—— oil fuel for Diesel engines, 1817
——, properties of, 1815
'Tarco,' 726
Tarring roads, 724
Tee iron, weight of, 224
—— slots in cast-iron tables, 1064
—— steel, weight of, 225
Teeth, bevel wheel, 887
—— cycloidal, 879
—— epicycloidal, 878
—— gearing, helical, 885
——, Gee's, 888
—— involute, 879
——of cutters, pitch of, 949
—— wheels, construction of, 875
——, spiral angle of, 886
Telegraph radio plant, 1962
—— —— wire, breaking strains of, 255
Telegraphs and signals of railways, 637
Telemeter, Steward surveying, 159
Telephones, attenuation and formulæ, 1960
—— —— cost of, 2431
—— —— loading coils for circuits, 1960
Telephony, 1959
Telescope, Dunbar & Scott's auxiliary top and side, 153
Telford road crust, 723

TEM

Temperature, absolute zero of, 191
——————and pressure of air at heights, 1742
—— —— —— —— steam, for vacuum, in inches, 1614
—— ——, casting, 2280
—— —— changes, resisting, in furnaces, 426
—— —— control of furnaces, 2266
—— ——, movement of air caused by difference of, 2120
——————of atmosphere, 190
—— —— cold storage chambers, 1119
—— —— earth, 190
—— —— —— fines, to determine, 518
—— —— —— lakes and seas, 190
—— ——, range of, for refrigeration, 1100
—— —— —— regulation, 2118
—— —— —— stress due to, 252
—— —— —— tables, 183
Temperatures, colours of different, 189
—— —— —— contract, 2119
—— —— —— -- flash, 201
—— —— —— freezing, 189
—— —— —— gas works, 2072
—— —— —— ignition, 185
—— —— —— miscellaneous, 185
—— —— —— of spontaneous ignition, 1772
—— —— —— steam at high vacua, 1394
—— —— ——, tensile strength of copper at different, 251
—— —— —— —— —— —— of steel at different, 249, 251
Tempered steel, colours of, 988
Tempering and hardening steel, 980, 982, 984
—— —— —— cutting tools, 980, 984
—— —— —— —— —— quenching baths for, 988
Tenders, locomotive, 618
Tenon and mortice, 325
——, tusk or shouldered, 325
Tenoning machines, 977, 979
Tensile strength of alloys, 248
—— —— —— —— Bull's metal, 2324
—— —— —— —— copper at different temperatures, 251
—— —— —— —— Delta metal, 248, 249, 252
—— —— —— —— gun-metal at different temperatures, 252
—— —— —— —— materials, 247
—— —— —— —— metals, alloys, and woods, 248
—— —— —— —— —— —— at different temperatures, 249
—— —— —— —— rubber, 248
—— —— —— —— steel at different temperatures, 249, 251
—— —— tests, Bull's metal, 2324
Tension in beams, 454
Terra-cotta, 424
Testing apparatus, pressure gauge, 1504
—— —— electric-light cables, 1867
—— —— gas, 2091
—— —— machines for Portland cement, Adie's, 403
—— —— water, 1297
Tests, Admiralty, for iron, 267
—— —— —— —— —— steel, 264
—— —— boiler covering slab, 1430

THO

Tests, boiler, table of, 1466
—— —— Bureau Véritas chain cable, 271
—— —— engine, typical, 1403
—— —— for flat-bottomed rails, 538
—— —— —— iron, Bureau Véritas, 270, 271
—— —— —— steel bars, Admiralty, 265
—— —— —— —— —— castings, Bureau Véritas, 271
—— —— —— —— —— forgings, Bureau Véritas, 270
—— —— —— —— —— rivets, Admiralty, 265
—— —— —— —— —— —— —— Bureau Véritas, 270
—— ——, galvanised steel wire rope, 271
—— —— Lloyd's, for chain hawsers, 269
—— —— —— —— —— iron and steel, 268
—— —— —— —— —— steel shipbuilding, 268
—— —— of bullhead rails, 534
—— —— planing machines, 942
—— —— steel, for ships, British standard, 268
—— —— —— —— —— —— —— Bureau Véritas, 270
—— —— —— —— —— —— —— Lloyd's, 268
—— —— —— —— —— Indian Government, 274
—— —— —— —— stones, road, 738
—— ——, rattler, for bricks, 424
—— —— tensile, Bull's metal, 2324
—— —— —— —— —— Delta metal, 248, 249, 252
—— —— turbine (steam), 1575
Theodolite, adjustment of, 149
—— —— —— —— Casella, 160
—— —— —— —— Everest, 151
—— —— —— —— micrometric, 153
—— —— —— —— ranging out railway curves with, 559
—— —— —— —— the plain, 149
—— —— —— —— transit, 152
—— —— —— —— —— —— tunnelling, 152
Thermal efficiencies of gas engines, 1659
—— —— —— —— —— —— petrol engines, 1729
—— —— —— —— —— —— steam power plant, 1629
—— —— —— —— efficiency curve, 1772
—— —— —— —— influences, railway permanent way, 547
—— —— —— —— units, British, 193, 1391, 2086, 2103
—— —— —— —— —— —— —— —— required to cool air, 1101
Thermionic valves, 1964
Thermit welding, 688, 2308
Thermo-electric pyrometers, 2271
Thermometer scale conversion chart, 186
—— —— —— —— —— —— scales, 183
Thermometers, expansion type, 2266
Thermostatic metal, 2378
Thickness of arches, 522
—— —— —— —— armouring of electricity supply cables, 1862
—— —— —— —— boiler plates, 1473
—— —— —— —— cylinders of hydrostatic presses, 1237
—— —— —— —— gas, water, and hydraulic pipes, 244, 1128
—— —— —— —— hydraulic pipes and cylinders, 244, 1128
—— —— —— —— steam pipes, 1433
—— —— —— —— walls, 377
'Thomas' gas meter, 1317
—— —— —— —— pressure gauge, 1503
Thompson boiler, 1470, 1471, 1473 1474, 1475, 1490

THO

Thompson superheater, 1519, 1520
—— water-tube boiler, 1490, 1491
Thornycroft boilers, 2019
—— oil fuel system, 1822, 2019
Thorp gas meter, 1318
Threads of pipes, 1042
—— screws, 1031
Three-core cables, 1874
Thring-Hopkinson torsionmeter, 133
Throttle valve, Cockburns, 1461
Thrust bearings, 905
—— block, Michell, 906
—— shafts, Bureau Véritas rules for, 927
Thury's screw thread, 1031, 1036
Thwaite's blast-furnace gas, 1844
—— rope brake, 126
Tide power, 1175
Tie-beam of roof, 332
Tiles, 424
—— 'Fibrent,' 336
—— glazed, 424
—— paving, 424
—— roofing, 424
—— 'Poilite,' 335
Tiling, 412
Tilting furnaces, 2258
Timber, 355
—— appliances, 1339
——, Australian, 364
—— beams, weight of, 372
—— bridges, life of, 530
—— content sizes of, 364
—— creosoting, 369, 538, 728, 740
—— crushing strength of, 261
—— dams, 1184
——, drying apparatus for, 366
—— durability of, 363
—— flooring, weight of, 372
—— joists, weight of, 372
—— measures, 355
—— planks, 364
—— posts, weight of, 372
——, preservation of, 368
—— seasoning, 214, 365
—— selection of, 365
—— shrinkage of, 365, 368
—— solidity of, 372
—— square and round, solidity of, 372
—— weights and sizes of, 364
—— of green and seasoned, 368
—— work, weight of, 372
Timbering drifts, 2168
—— trenches, 507
Time, equation of, 162
—— required for seasoning timber, 366
—— service, electric, 1953
——, to determine, 167
—— transit, pneumatic tube, 1087
Tin, 2315
—— ore, 2159
——, tensile strength of, 248
Tinplates, weight of, 240
Tinting Portland cement, 394
Tip clearance loss, steam turbine, 1569
—— waggons, 492
Tolerances for bolts, 1047, 1048
—— fine screw threads, 1033
—— nuts, 1048, 1049
Tool shanks, 990
—— steels, high-speed, 980, 2254

TRA

Tool, steels, high-speed, furnaces for, 2254
Tools, 939
—— automatic, lubrication of, 911
—— carbon steel for, 980
—— cutting angles of, 990
—— grinder, Van Dorn, 1009
—— machine, 939
—— floor space for, 752
—— power required for, 972
—— portable pneumatic, 994
—— quenching baths for tempering cutting,
—— shape of, 989 [988
Tooth gearing, to compute, 871
——, helical, 885
——, to compute depth of cast-iron, 877
—— H.P. of, 877
Torrent filter, Pulsometer, 1295
Torsion meter, Hopkinson's, 133
Torsional rupture by shock, of woods, 257
—— vibration in motor-car engines, 1724
Tosi-Diesel engines, 1674
Tough rubber compound (C.T.S.), 1865
Tower cranes, 791
Towers, water-cooling, 1527
—— water, cost of, 2433
Tracing, 2374
Traction, canal, 1385
—— electric, 667
——, Board of Trade regulations for, 690
—— electric, railless, 694
—— engines, road regulations for, 713
—— motors, commutation pole, 1908
—— resistance, on a level railroad, 578
—— on roads, 717
Tractive force of locomotives, 582
—— resistance on pavements, 718
—— tramways, 677
Trade-marks, 2408
Traffic, road, 719
Train acceleration, 582
—— lighting, 628
—— resistance, 578
—— formulæ for, 578
—— wheels, 627
Trains, corridor, weight of, 619
—— resistance of, to air, 577
—— table of speed of, 581
Tramways, 671
—— Bills for, House of Commons Standing Orders, 697
—— cost of construction of, 677, 2432
—— working, 2433
—— electric, 683
—— Board of Trade regulations, 689
—— brakes for, 693
—— cable system, 688
—— cars for, 689
—— conduit system, 694
—— cost of working, 693, 2433
—— equipment of, 683
—— guard wire for, 686
—— permanent way for, 689
—— poles for, 685, 691
—— rail bonding, 686
—— return of, 686
—— welding, 688
—— span wire for, 686
—— trolley wire for, 685

TRA

Tramways, electric, trolleys, 684
——— foundations for, 676
——— motor control, 682
——— motors, Westinghouse, 1905
——— points and crossings of, 677
——— rails for, 671, 676
——— tractive resistance on, 677
——— tyres and axles for, 671
Transformers, electric, 1922
——— oil for, 1968
Transit theodolite, 152
——— time, pneumatic tubes, 1085
——— tunnelling, theodolite, 152
Transition curves, 564
Transmission, hydraulic, steam turbine, 1583, 2011
———lines, overhead, 1933
———of heat through insulation, 1100
——— power by leather belting, 829
——— ropes, 849
——— steel shafting, 921
———, telephonic, 1959
Transport, Ministry of, 703
Transporters, quay side, 1337
Transporting earth, 489
Transverse metacentre of ships, 1976
——— strength of corrugated iron, 311
——— materials, 262
Traps, steam, 1521
——— general notes on, 1523
Trass mortar, 391
Trautwine rule for retaining-walls, 512
Travelling cranes, 784
Treads, Mason's stair, 351
Treatment of mild steel, 266
——— sewage, 1253
Trenches, timbering, 507
Triangles, area of spherical, 70
——— formulæ for, 62
——— oblique-angled spherical, 70
——— right-angled spherical, [69
Triangulation, 142
Tribrach system, 150
Trigonometrical functions, relation to each other, 60
——— ratios, 61
——— tables, 63
Trigonometry, 59
——— spherical, 69
Trim indicator, ship, Ralston's, 1979
Trinitrotoluene explosive, 2350
Trip centrifugal clutch, 858
Triple expansion engines, steam pressure in, 1993
——— valve for Westinghouse brake, 631
Trisection of angles, 20
Trochoid, the, 34
Trolley construction, catenary, electric tramway, 684
——— system of electric tramways, 683
——— wheels, electric tramway, 684
——— wire, electric tramway, 685
——— fittings, 685
Trolleys for electric tramways, 684
Tropical rainfall, 1285
Trucks, industrial electric, 694
Truss multipliers for ridged roofs, 310
Tubbing of mines, 2171
Tube boilers, water, 1482 2016

TUR

Tube cleaners, 1458
——— couplings, 996
——— cutters, 998
——— mills, mining, 2218
——— condenser, 1615
——— railways, cost of construction, 2428
——— London, 670
Tubes, aluminium, weight of, 239
——— boiler, 596, 1425
——— brushes and scrapers, 1459
——— charcoal iron lapwelded, 1425
——— locomotive, 596, 610, 611
——— surface of, 1425
——— weight of, 1425
——— brass, seamless, weight of, 238
——— bursting strength of, 275
——— condenser, 1615
——— copper, weight of, 236
——— diameter of, cylindrical marine boiler, [2016
——— house, pneumatic, 1090
——— locomotive boiler, 596
——— marine boiler, 2016
——— pneumatic despatch, 1085
——— power required for working, 1086
——— pressure, Pitot, 1367
——— speaking, 202
——— strength of, 276
——— velocity and discharge of water through, 1190, 1302
——— weight of wrought iron, 228, 2089
——— zinc, to bend, 2376
Tubing, aluminium, weight of, 239
——— metallic flexible, 604, 996, 2166
Tubs, colliery, 2186
Tubular boilers, multi-, 1473
Tubular poles for electric tramways, 691
——— standard, 692
Tullis, John, on belt-driving, 838
Tunnel shafts, Board of Trade rules for, 923
——— Bureau Véritas rules for, 927
Tunnelling transit theodolite, 152
Tunnels, 554
——— cost of, 2433
Turbadium bronze, 2323
Turbine gears, 888, 1581, 2009
——— marine, double reduction, 2009
——— pumps, Mather & Platt, 1161
——— shafting, steam, 924, 927
Turbines (steam), 1545, 1995
——— arrangement of, 1996
——— back pressure, 1578
——— bearings of, 1569
——— blading of, 1562
——— British standard specification for, [1579
——— Brown-Curtis, 2002
——— carry-over energy, 1561
——— Cookburns' geared control, 2012
——— consumption of steam in, 1512
——— corrections for steam conditions, 1575
——— critical speeds of, 1572
——— design of, 1565
——— disc drum type, 1566
——— friction in, 1567
——— double helical gear for, 886, 1581
——— dummy loss in, 1569
——— efficiency of, 1553
——— electrical transmission, 1587

Turbines, flow of steam in, 1545
——— forgings for, 1573
——— glands, 1568
——— high-pressure, 1578
——— hydraulic transmission, 1583, 2011
——— impulse, 1557
——— installations of geared, 1585
——— internal combustion, 1698
——— labyrinth packings of, 1566
——— Ljungström, 2002, 2008
——— losses in, 1566
——— low pressure, 1578
——— lubrication of, 910, 1570
——— materials for construction of, 1572
——— mixed pressure, 1578
——— nozzles of, 1552
——— packing, labyrinth, 1566
——— Parsons geared, 1576
——— ——— gearing for, 2009
——— Parsons, steam blades and caulking pieces for, 1564
——— reaction, 1565
——— reducing, 1578
——— reduction gears, 888, 1581, 2008, 2009
——— ship, 1995
——— ———, arrangement of, 1996
——— tests of, 1575
——— tip clearance loss of, 1569
——— types of, 1578
——— water glands of, 1568
——— windage loss in, 1567
——— (water), 1206
——— ——— American, 1207
——— ——— Banki, 1215
——— ——— classification of, 1206
——— ——— draft tube of, 1220
——— ——— flumes of, 1190
——— ——— Francis, 1207, 1213
——— ——— Gilkes, 1212
——— ——— governors of, 1222
——— ——— Howbs, 1209
——— ——— Little Giant, 1209
——— ——— radial inward-flow, 1217
——— ——— reaction, 1206
——— ——— regulation of, 1221
——— ——— runners of, 1216
——— ——— sluice gates, 1232
——— ——— strainer racks, 1189, 1232
——— ——— Turgo, 1212
——— ——— Turgo-Francis, 1213
——— ——— types of, 1207
Turbo-alternator, G.E.C., 1889
Turbo pumps, 1157
Turgo-Francis turbine, 1213
Turgo turbine, 1212
Turner Brothers asbestos millboard tubes for electrical resistances, 1968
——— ——— compressed asbestos fibre rings, 1436
——— ——— ——— ——— ——— ——— tube gromets, 1616
——— ——— ——— 'Gripwell' belting syrup,
——— ——— ——— hair beltings, 833 [837
——— ——— ——— pump packings, 1101, 1153
——— ——— ——— 'Veelos' balata belting, 840
Turner, E. R. & F., on flour mills, 765
Turnouts, Hadfield's, 677
Turntables, 659
Tusk tenon, 325

Tuyeres, 2250
Tweddell's hydraulic riveter, 1241
Twist drills, 952
——— ——— ——— Firth's, 953
——— ——— ——— taper measures for, 956
Twisting angle of shafts, 260
Two-core cables, 1874
Tylor motor car engine, 1720
Type metal, 2338
Tyres, carriage and waggon railway, 607
——— for locomotive wheels, 607
——— ——— motor cars, 1736
——— ——— railway-waggon wheels, 607
——— —, influence of width of, 717
——— N.A.P., 1736
——— pneumatic, 1736
——— pneumatic Macintosh, 1736
——— rubber and iron, 718

U LEATHERS, 1152
'Ubel' Air Service cocks, 2166
'Ubel' Bourdon pressure gauges, 1503
——— extruded metals, 2324
——— fullway valves, 1460
——— injectors, 1507
——— Penberthy injectors, 1507
——— pressure gauges, 1503
——— 'Purser' cock and air-saver, 2166
——— 'Refrax' window water level, 1501
——— 'Reliance' gauge glass protector, 1500
——— semi-rotary pumps, 1139
——— spring plug air cock, 2166
——— steam trap, 1521
——— 'Stella' alloys, 2328
——— stop valves, 1460
——— 'Thomas' duplex pressure gauge, 1503
——— vacuum gauges, 1503
Ultimate strength of materials, 261
Underfeed stokers, 1784, 1788
Underground haulage, cost of, 2188
——— ——— railways, cost of, 2428
Underlining slates, 411
Unequal angles, standard sections with, 317
Uniflow steam engine, 1530
——— ——— ——— ———, Galloway, 1531
Uniflux condenser, Weir, 1620, 2031
Uniform motion, 119
Union flexible coupling, 928
Unions, pipe, 1130
Unit, British Thermal, 193, 1391, 2086, 2103
United Brassfounders and Engineers, Ltd., *see* 'Ubel'
——— Flexible Metallic Tubing Co., tubing, 603, 604, 996, 2166
——— Kingdom metallic piston-rod packing, 1599
——— ——— ——— statistics of railway expenditure, 654
——— ——— ——— ——— waterways in, 1366
——— States Bureau of Standards, melting points, 187
——— ——— metallic packing, 1598
——— ——— railway statistics, 655
——— ——— river regulation works, 1372
——— Water Softeners Ltd., Lassen-Hjort system, 1450

UNI

United Water Softeners Ltd., Permutit process, 1299, 1444, 1445, 1446
Units, electrical, 1855
——— gas, power, 1635
——— of heat, 193, 1391, 2086, 2103
'Universoline' steam pipe jointing paste, 1436
Unwin's formula for flow of gas in mains, 2090
——— formulæ for strength of chains, 278
Urinals, 1266
——— painting of, 1266

VIC

'V' NOTCH method of calculating quantity of water flowing in a stream, 1180
——— water recorder for steam engines, 1628
——— weir recorder, 1316
V.S.M. lubrication system, 916
Vacuum brake, 635
——— correction for steam turbines, 1556
——— evaporators for sugar mills, 776
——— gauges, 1503
——— ———, testing, 1504
——— pump, Bailey's, 1084
———, temperature and pressure of steam in inches, 1614
Valuation of masonry, 389
——— mines, 2227
——— painters' work, 414
Value of degrees of temperature, 186
——— paints, 414
———, present and discount, 4
——— ———, table, 11
Valve, Brooke re-facer, 1464
——— Cockburn throttle, 1461
———diaphragm for railway signals, 637
———, Driver's equalising brake, 634
———gear, 1605
——— drop, 1534
——— for locomotives, 592
———, improved triple brake, 631
———, Jenkins' blower, 1463
———materials, 1152
———opening, 592
———re-facers, 1464
———setting, motor cars, 1728
——— springs for motor engines, 1737
Valves, 1459
——— cast-iron, fullway sluice, 1460
——— Crane-Bennett, 1461
——— cylindrical, 593
——— Dexine, 1152
——— fullway, 1460
——— locomotive, 592
——— motor-car, 1727
——— of gas, oil, and petrol engines, 1663
———, pump, 1136, 1152
——— reducing, 1509
——— safety, 1423, 1497
——— safety, areas, 1497
——— ——— Board of Trade rules for, 1497
——— ——— Bureau Véritas rules for, 1498
——— ——— Lloyd's rules for, 1498
——— slide, 1605
Valves slide, gear, 1605
——— ——— pipe, 1459
——— sniffting, 1091
——— steam area of, 1597
——— stop, 1459
——— thermionic, 1964
Van Dorn portable electric drill, 961
——— ——— tool post grinder, 1009
Vans, electric, 694
Vapour, saturated, in air, 1100
Variables, functions of two, 16
Variation of compass, annual, 162
——— ——— ——— to find, 161
Varnishes, 2359
——— ——— insulating, 1966
——— ——— quick drying, 2359
——— ———, waterproofing, 2360
'Veelos' balata belting, 840
Vegetable oils, manufacture of, 774
Vehicles, electric battery, 695, 742
Vein mining, 2179
Velocities of water through bridges, 527
Velocity and discharge of water, 1300
——— ——— pressure of air, 1071
——— coefficient of steam turbines, 1561
———, critical, irrigation canals, 1275
——— mean, of canals, 1274
——— of a blow, steam hammer, 1023
——— ——— pinion, 873
——— chimney gases, 518
——— light, 202
——— pinion, to compute, 873
——— sound, 201
——— water in channels, 1190
——— ——— ——— pipes, 1128, 1190, 1249, 1297, 1300, 1304, 1306
——— ——— ——— rivers, 1366
——— wind, 1072
——— wood-working machinery, 976
Vena contracta, 1196
Ventilation, 2127
———air cooling, 2127
———air ducts, 2127
——— ———air necessary for, 2127
———fans, 2129
———, furnace, mining, 2200
——— mechanical, notes on, 2135
——— ——— of floor joists, 343
——— mines, 2199
——— sewers, 1251
Ventilating shafts, size of, 2136
Ventilator, Boyle's air pump, 2129
Venturi water meter, 1314
Versed sines for rails, table of, 556
Vertical boilers, 1478, 1480
Viaducts, railway, Board of Trade regulations with reference to, 659
Vice gripping, 1000
Vickers' aeroplanes, 1752, 1753
——— Auto forced lubrication system, 916
——— automatic reversing drive, 940
——— Diesel engine for submarines, 2054
——— 'Duralumin,' 2330
——— gas engine, 1647
——— oil engine, 1690
Vickers (*see also* Westinghouse)
Vickers-Petter oil engines, 1683
——— ——— semi-Diesel engines, 1683
Victoria turbo-pumps, 1157, 1159

VIC

Victaulic pipe joint, 1132
Viscosity of oils, 2367
Voltage, breakdown, 1969
——— drop in alternating current lines, 1920
Voltmeters, Weston standard, 1935
Volume, blast, 2253
———of air to burn gas, 1826, 2087
——— earth in cuttings, 479
——— liquids reduced by pressure, 215
——— pneumatic despatch tubes, 1086
Volute and helical springs for locomotives, 608
Vulcanised rubber for wires and cables, 1865, 1870
Vulcanising wood, 369
Vyrnwy dam, 1292

WAT

WAGGON axles, railway, 606
——— tyres, railway, 607
Waggons and carts, loads of, 491
——— railway, 619–626
——— steam, working costs of, 742
——— steel for, 612
——— tip, 492
Walker, J., & Co.'s, Ltd., 'Lion' metallic packing, 1600
Wall-breakwaters, 1326
Wall paint, 2356
Wall-plates of floors, 339
——— roofs, 339
Wallpaper, number of pieces required for room, [416
Walls, 376, 526
——— damp course for, 376
——— dampness of, to remedy, 407, 2356
——— dock, 1331
——— foundations of, 384
——— hollow, 376
——— London Building Act rules, 378
——— quay, cost of, 1331
——— railway cutting, 508
——— retaining-, 508
——— brick, 511
——— equilibrium of, 509
——— foundations of, 510
——— pressure of earth on, 508
——— water on, 508
——— rules for, 511
——— weight of buildings on, 510
——— rules for building, 376
——— stone and brick, safe loads on, 494
——— surcharged, 510
——— tables of contents in cubic yards, 514
——— thickness of, 377
——— warehouse, London Building Act rules, 380
——— wharf, 514
Wallsend-Howden liquid fuel system, 1820
Walschaert valve gear, 593
Ward Leonard system of electric winding, 808
Ware, electrical, 426
———, salt-glazed, 1246
——— sanitary, 426
Warehouse walls, 380
Warner hydraulic automatic feed water regulator, 1454
——— Anthony steam pump, 1147
Warner wind pump, 1075
Warrington wire-gauge, 2392
Washers, air, 2127
——— and scrubbers, gas, 2066
——— nuts, and bolt-pins, French, 1050
——— weight of, 242
Washing coal, 2207
Waste heat boilers, Kirke's, 1850
——— weir capacities, 1277
Wastes of sinks, 1263
Watch, determination of south by means of, [162
——— screw threads, 1036
Watches, non-magnetic alloy for, 2338
——— oil for, 2366
——— testing, 2367
Water, 208
——— and steam separators, 1527
——— Board, Metropolitan, standard pipe-sockets, 1306
———, boiling-points of, 195
——— canal, loss of, 1384
——— closets, 1266
——— London County Council regulations, 1266
———, consumption of, 1298
——— cooler, Heenan, 1107
——— cooling for aeroplane engines, 1708
——— internal combustion engines, 1661
——— steam condensers, 1613
——— towers, 1527
———, cost of lifting by, 1128
——— data, 1125
——— discharge of, through orifices, 1196
——— pipes, 1190, 1249, 1297, 1300, 1304, 1306
——— sewers, 1249
———distillers, 778
———dynamometer, Froude, 130
——— engines, effective power of, 1175
———, evaporation from, 1267
——— feed, 1442
——— elimination of oil from, 1456
——— heating, 1451
——— regulators, 1452
——— saving of fuel by heating, 1452
——— softeners, 1442
——— flow of, through pipes, flumes, and channels, 1190
———flowing in streams, to determine quantity of, 1178, 1182
——— over weirs, table for, 1180
——— through pipes, head required for, 1176, 1249
——— gas, 1844, 2083
———gauges, 1500
———, defects in, 1502
——— unbreakable, 1503
———, general data of, 1125
———glands, steam turbine, 1568
———hammer in pipes, 1235
———, hardness of, 1298
——— horse power required to raise, table of, 1126, 1127, 1128
——— hot, supply of, 2120
——— in channels, velocity of, 1190
——— in 1000 cubic feet of air when saturated, 1100
——— pipes, velocity of, 1128, 1190, 1249, 1297, 1300, 1304, 1306

WAT

Water in wells, quantity, 1288
—— level, 'Refrax' window, 1501
—— losses from irrigation canals, 1273
—— main pipes, cast-iron, weight of, 228
——mains, cement joints for, 1133
—— —— cost of scraping, 2436
—— —— metering, 1311
—— —— meters, 1313
——pipe absorption dynamometer, 129
—— —— bends, unbalanced pressure on, 1308
—— —— fittings, weight of, 228, 234
—— —— joints, 1130, 1306
—— —— screw threads, 244, 1042
——pipes, 1297
—— —— British standard, 245
—— —— incrustation & corrosion of, 1298
—— —— iron, weight of, 228
—— —— lead, corrosion of, 418
—— —— —, weight of, 1308
—— —— main, cast-iron, weight of, 228
—— —— thickness of, 244
—— —— threads of, 1042
—— —— zinc, corrosion of, 418
—— power, development of, 1175
——, power required to pump, 1128
—— power, to compute, 1175
—— pressure, 1125
—— —— engines, 1199
—— —— on retaining walls, 508
—— —— —, table of, 1126
——, purification of, 1297
—— purity standard of, 1297
——raiser, Willcox's, 1508
——raising by compressed air, 1169
——recorder, Lea's automatic, for steam engines, 1628
—— reduction of volume under pressure, 215
——separators, dryers, and purifiers, steam, 1527
——, sluice measurement, 1182
——softening, 1299
—— —— Kennicott system, 1446
—— —— Lassen-Hjort system, 1450
—— —— Permutit system, 1299, 1444
—— —— Royles' Reisert's system, 1448
—— —— Zeolytic process, 1444
——, specific gravity of, 208
—— standard of purity of, 1297
—— supply, irrigation, 1267
—— tanks, 1308
Water testing, 1297
——, to raise temperature of, by steam, 1396
—— reduce sounding to low, 149
——towers, cost of, 2433
——troughs, locomotive, 618
——tube boilers for land service, 1482
—— —— marine service, 2016
——, velocity of, in pipes and channels, 1128, 1190, 1249, 1297, 1300, 1304, 1306
—— —— Prony formula for, 1367
—— weight of, 208, 1125
Watering roads, 736
Waterproof paints, 2355
Waterproofing boards, 2370
—— —— concrete, 399

WEI

Waterway of bridges, 527
Waterways in United Kingdom, 1366
—— —, navigable, 1365
Waterworks, 1290
—— —— cast-iron sockets for pipes, 1307
—— —— cost of, 2435
—— —— maintenance of, 1297
—— —— towers, cost of, 2433
Wave action on breakwater, 1324
—— effective horse-power of ships, 1984
Waygood-Otis, Ltd., electric lifts, 808
Weaving shed, 768
Webb's brine attemperator, 1115
Weddle's rule for area computation, 24
Wedge, 118
Wedges, 325
Weight, breaking, of pine 264
—— dead, ships, 1983
—— of aluminium bar and strip, 222
—— —— —— sheet, 223
—— —— —— tubing, 239
—— —— —— wire, 1930
—— angle iron, 224
—— —— steel, 225
—— annealed and bright iron wire, 254
—— atmosphere, 1069
—— balls of various metals, 218
—— boiler tubes, 1425
—— bolt heads, 241
—— brass bars, 220
—— —— pipes, 229, 238
—— —— tubes, seamless, 238
—— —— wire, 241
—— braziers' copper rivets, 243
—— buildings, effect of, on retaining-walls, 510
—— cast-iron gas pipes, 228, 2089
—— —— pipe fittings, 235
—— —— pipes, 228
—— —— water pipes, 228
—— castings from wood patterns, 241
—— —— in brass, 241
—— —— cast iron, 241
—— —— copper, 241
—— —— gun-metal, 241
—— —— zinc, 241
—— coal, 2157
—— composition nails, 243
—— copper bars, 220
—— —— nails, 242
—— —— pipes, 229, 236
—— —— rivets, 243
—— —— tubes, seamless, 236
—— —— wire, 241
—— crowds, 135
—— cubic yard of soils, 491
—— Diesel engines, 1675,
—— —— marine engines, 2054
—— engines, motor car, 1730
—— —— Robey, 1538
—— flat rolled iron, 218
—— —— steel, 220
—— foot square of metals, 215
—— gas-pipes, 228, 2089
—— hoop-iron, 240
—— iron rivets, 243
—— iron wire, 241
—— —, wrought, 217
—— lead bars, 220

WEI

Weight of lead pipes, 229, 1308
——— formulæ for, 229
——— locomotive parts, 587
——— machinery on ships, 1982
——— marine boilers, 2018
——— Diesel engines, 2054
——— metal sheets and bars, 220
——— motor-car engines, 1730
——— nails, 242, 243
——— nut and bolt heads, 241
——— nuts, cold-punched, 241
——— octagonal steel, 220
——— parts of locomotives, 587
——— petrol engines, 1730
——— pipe-jointing material, 244
——— pipes, 228
——— pneumatic power hammers, 1026
——— rails, 547
——— railway carriages and trains, 619
——— rolled lead, copper, and brass, sheet and bars, 220
——— roofs, 328
——— ropes, steel, 805, 2196
——— round steel, 220
——— screws, 243
——— seamless brass tubes, 238
——— copper tubes, 236
——— sheet, bar, and ball metals, 215
——— cast iron, 216
——— lead, 221
——— zinc, 221
——— ship machinery, 1982
——— ships, 1981
——— slates, 411
——— snow, 334
——— soil pipes, 1266
——— soils, 491
——— solids and liquids, 210
——— square steel, 220
——— steam engines, 1541
——— and boilers, 1541
——— hammers, 1022
——— pipes, 228, 233
——— steel, 217, 220
——— wire, 241
——— , wrought, 217
——— Stirling boilers, 1489
——— stone, 390
——— tee iron, 224
——— steel, 225
——— timber, 364, 368
——— work, 372
——— tinplates, 240
——— tubes, 228
——— washers, 242
——— water, 208, 1125
——— pipes, 228
——— wire, 241
——— wrought-copper nails, 242
——— iron and steel, 217
——— nails, 241
——— pipes, 228, 2089
——— tubes, 231
Weights, 2386
——— and measures, 2381
——— foreign, 2396, 2398
——— sizes of timber, 364, 368
——— specific gravities, 207
——— , atomic, 207
——— , bar, slide rule constants for, 110

WES

Weights of and safe loads on compound steel girders, 315
Weir, G. & J., direct-acting steam feed pump, 1143
——— evaporators, 2031
——— feed water heater, 601, 2032
——— roto-feed pump, 1147
——— Uniflux condenser, 1620, 2031
Weir measurement, water, 1178
——— recorders, 1316
——— , waste capacities, 1277
Weirs, to raise a river a certain height by, 1197
——— water flowing over, tables for, 1180
Weir-Uniflux condenser, 1620, 2031
Weisbach's formula for safe load on piles, 497
Weld testing, 2300
Welded boiler seams, 1414
Welding, 2289
——— acetylene, 688, 2289
——— aluminium, 2298
——— brass, 2299
——— copper, 2299
——— , electric, 2301
——— arc, Lloyd's rules for application to ship construction, 2060
——— Kjellberg process, 2302
——— Quasi-arc, 2303
——— lead, 2299
——— machines, 2299
——— nickel, 2299
——— , oxy-acetylene blowpipe for, 2293
——— rails, 688
——— , resistance, 2306
——— steel, 2296
——— , thermit, 688, 2308
Weldless steel tubes for locomotive boilers, 611
Welds, strength of, 2296
Well pumps, 1137
——— sinking, 1287
Wells, 1286
——— A. C., & Co., light, 2099
——— waste oil filter, 916
——— artesian, 1288
——— pumps, 1137
——— brickwork of, 1286
——— gas-engine starter, 1660
——— light, 2099
——— , protective distance from drains, 1288
——— pumping from, 1137
——— by compressed air, 1169
——— , quantity of water in, 1288
——— steining of, 1286
——— to increase yield of, 1287
Welsh iron, 2275
Werkspoor Diesel engine, 2041
West Coast iron, 2276
West, true, to determine, 162
Western Electric Co. loading coils, 1960
Westinghouse air compressor, 1080, 1081
——— automatic brake, 631
——— direct-current generators, 1882
——— motors, 1901
——— electro-pneumatic railway signalling system, 640
——— -Morse driving chains, 868
——— motors, 1905
——— radiators, 2117

WES

Westinghouse rocker joint chains, 868
——————— system of heating railway carriages, 630
——————— tramway motors, 1905
Westminster Hall roof, preservation of, 2378
Westminster Tool and Electric Co.'s drills, 960, 961
Weston friction coupling, 855
Weston standard ammeters and voltmeters, 1935
——— synchroscope, 1937
Westool portable electric drill, 960, 961
Wet docks, 1327
——— — cost of, 1327, 2419
—— grinding, 1006
Wetted surface of ships, 1975
Wharf cranes, 790
——— walls, 514
Wheel base of locomotives, 595
——— emery, guards, 978, 1010
——————— safety of, 1010
———teeth, bevel, 887
——— teeth, to design, 878
Wheels, abrasive, 431, 1004
——— —— ——— speed of, 1005
———, emery, 1004
——————— speed of, 1005
——— fly, rope driving, table of, 842
——— grinding, 431
——— hand, proportions of, 1055
——— horse-power transmitted by, 875
——— locomotive, counterbalancing, 595
——————————— tyres of, 595, 607
——— Pelton, 1199
——— pitch of, 871, 872, 873
——— railway waggon and carriage, 627
——— road regulations for, 713
——— scoop, 1169
——— teeth of, 875
——— train of, 874
——— trolley tram, 684
Whistling buoys, 1351
Whitaker excavator, 2431
White Diesel engines, 2050, 2052
White-Foster water-tube boiler, 2019
White metal alloy, 2334
White-Poppe motor car engine, 1721
Whitewash, 415, 2355
Whiting, 416
Whitworth nuts and bolts, 1044, 1045
——————— screw threads, 1031, 1032, 1038
——————— standard pipe threads, 1042
Whitworth standard screws for watch and instrument makers, 1036
——————————— taps, 1060
——————— wire gauge, 2392
Width of river, to measure, 144
——— roads, 719
Wigglesworth's clutches, 858
Wilcox & Babcock boilers, 1492, 2017
Willcox ejector steam-jet pump, 1508
——— fullway cock, 1465
——— -Penberthy cellar drainer, 1151
———————injector, 1505
——— Ramoneur boiler tube cleaner, 1458
——— semi-rotary pump, 1138
Willesden paper, 350, 411, 1110, 1968
Wilson excavator, 2431
Wind, impulse of, 1072

WIT

Wind mills, 1073
——————— power of, 1073
Wind-power control, 1073
——— pressure on aeroplanes, 1742
——————— and weight of snow on roofs, 334
——— ——— ——— railway structures, Board of Trade recommendations with reference to, 662
———pumps, 1074
Windage loss in steam turbines, 1567
Winding engines, electric, 808
——————— steam consumption of, 1405
———, mining, 853, 2189
———, wire ropes for, 256, 257, 2192
Wing fan, F. W. Potter & Co., 2132
Wings of aeroplanes, 1747
Winn's asbestos packed water-gauge, 1500
——— gauge-glass protector, 1500
——— screwing machines, 964
——— tube cutter, 998
——— valve refacer, 1464
Winzing and raising in mining, 2173
Wipers for slides, 979
Wire, annealed and bright iron, Rylands', 254
——— copper, weight of, 241
———cut bricks, 422
———drawing, 2377
———gauge indicator, 1065
———gauges, 2391
———guard for electric tramways, 686
———, hard-drawn copper, 241
——— iron and steel, breaking strains, 255
——— iron, breaking strains of, 254
———rigging, steel, Lloyd's tests for, 269
———ropes, 256, 257, 805, 853, 2192
——————— Allan, Whyte & Co.'s, 2197
——————— Bullivants', 256, 257
——————— durability of, 803
——————— flat, 2196
——— ——— flexible steel, 256, 257, 805
——— ———for winding, 256, 2192
———————, galvanised steel, tests for, 271
——— — , lubrication of, 854
——— ——— preservation of, 280
——————— Smith's, T. & W., 805
——————— sockets for, 853
——— ——— Wright's, J. & E., 2193
Wire, Rylands', 254
———span, for electric tramways, 686
———springs, safe loads for, 932
———, steel, breaking strains of, 254
——— telegraph, 255
——— trolley, for electric tramways, 684
——— weight of, 241
Wireless telegraphy, 1962
Wires, copper, resistance of, to alternating currents, 1922
——— insulated, specification for, 1865, [1870
——— resistivity of, 1856
——— strength of, for tramways, 686
Wiring, electric-light systems, Institution of Electrical Engineers' rules for, 1949
——— for electric light, Henley system, 1873
——————— ——— Simplex Steel Conduit system, 1871
——————————— specification of, 1872
Witness, engineer as, 2443

WIT

Witton direct current generator, 1886
'Wolframinium' alloy, 2331
Wolseley motor-car engines, 1717
Wood, aeroplane, 1749
——— beams, breaking weight of, 264
——— charcoal fuel, 1781
——— fuel, 1780
——— girders for floors, 339
———, machine cutters, sharpening angles of, 990
Wood paved roadway specification, 727
———pavements, 734
———pillars, 372
———post paint, 2356
———preservative processes, 369
——— ———, 'Sternocarbol,' 368
———refuse suction gas producer, 1844
———roadways, 727
———roofs, 373
——— joints of, 332
———screws, 1040, 1041
———stairs, 352
———stave pipes, 1194
———, vulcanising, 369
———working machinery, power required for, 976,
——— ——— ——— speeds of, 978
Woodeson boilers, 1486, 2020
——— feed pump, 1141
Woodite packing, 1501, 1502
Woods, 356
——— drying and seasoning of, 214
——— hard, 356
——— resistance of, to torsional rupture by shock, 257
Woods seasoning, increase of strength by, 263
——— soft, 356
——— specific gravities of, 212, 214
——— stiffness of, 257
——— tensile strength of, 248
——— weight per cubic foot, 212, 372
Woodwork painting, 2353
Woodworking machinery, power required for, 976
Wool, slag, 350, 1109, 1439
Work, 121
———, accumulated, 121, 122
———done by steam, 1400
———on inclined plane, 120
Work-tables of machine tools, 1064
Working aluminium, 2376
——— costs of getting coal, 2178
——— load on crane chains, 280
——— pressure allowed in boilers, 2016
——— strength of boiler flues, 1415
——— ——— ropes, 283, 2196
——— stresses, reinforced concrete, 437
Works contract, powers of an engineer, 2445
———, gas, cost of, 2064
——— use of high-pressure gas in, 753

ZON

Workshop lighting, 2144
——— practice, 754
——— recipes, 2353
——— roofs, 306, 745
Workshops, engineering, construction of, 745
World electrical transmission systems, 1928
Worm gearing, 890
W. R. Patents, Ltd., CO_2 indicator, 1768, 1769, 1770
Wright, J. & E., Ltd., flattened strand wire ropes, 2193
——— ——— ——— locked coil wire ropes, 2194, 2195
Wrought-copper nails, weight of, 242
Wrought-iron, 2273
——— bends for steam pipes, 1433
——— binders, 339
——— castings, 2273
——— ———, corrosion of, 252, 2309
——— ——— nails, weight of, 242
——— ——— pillars, 383
——— ——— pipes, 228, 244, 2089
——— ——— shafting, 919, 922
——— ——— tubes, weight of, 231, 2089
——— ———, weight of, 217

YARD, cubic, different soils, weight of a, 491
Yards, iron and steel, Lloyd's tests for, 269
Yarn cotton measurement, 770
———, Egyptian, 768
Yarrow boilers, 1496, 2016, 2019, 2020, 2021
Yellow pine, breaking weight of, 264
Yorkshire cold-blast iron, 2275
——— pig iron, 2274
Young's hydraulic bolt forcer, 1240
——— modulus of elasticity, 263

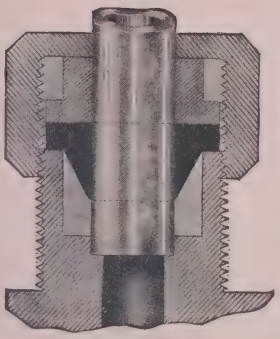
ZEOLITES, water filtration over, 1299
Zeolytic exchange process, water softening, 1299, 1444
Zero of temperature, absolute, 191
Zeuner valve gear, 1605
Zinc, 2315
———castings, weight of, 241
———, impurities in, 2315
——— ore, 2159
——— painting on, 2355
———roofing, 418
———, sheet, trade gauge, 2391
——— ———, weight of, 221
——— tensile strength of, 248
——— tubes, to bend, 2376
——— water pipes, corrosion of, 418
Zones of a circle, 49

WALKER'S 'WALLICO'
CONE GAUGE GLASS RINGS

Do not become hard.

—

Can be used again and again.




Easily replaceable.

—

Send for free Sample Ring.

'EMERALD' EXPANSION GLAND PACKING

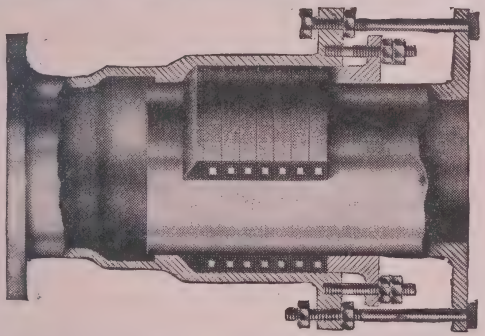RESILIENT



DURABLE

A positive cure for one of the most troublesome joints with which Engineers have to contend.

JAMES WALKER & CO. LTD.

LION WORKS, GARFORD STREET,
WEST INDIA DOCK RD., LONDON, E.14.

Telephone: East 4253 (3 lines). Telegrams: 'Lioncelle, Pop, London.'
Write for Catalogue No. 91.

See also beginning of Index.

'GOLDEN WALKERITE'

IS THE BEST TYPE OF

COMPRESSED ASBESTOS FIBRE

OR

'ITE' JOINTING

For Steam, Water, Acid, Petroleum, Ammonia, etc.



Motor Joints a Speciality

In Sheets 40×40, 80×40, 36×60 and 54×63, $\frac{1}{64}$-in thick upwards.

Genuine British Manufacture

JAMES WALKER & CO. LTD.

LION WORKS, GARFORD STREET,
WEST INDIA DOCK RD., LONDON, E.14.

Telephone : East 4253 (3 lines). Telegrams : 'Lioncelle, Pop, London.'
Write for Catalogue No. 91.

See also beginning of Index.

THE ENGINEER'S YEAR-BOOK ALPHABETICAL DIRECTORY OF ADVERTISERS' NAMES, WITH ADDRESSES, 1922.

INDEX ALPHABÉTIQUE DES ANNONCEURS, AVEC LEURS ADRESSES, 1922.

(Pour le Répertoire analytique des spécialités annoncées voir pages 2541 à 2611

INDICE ALFABETICO DELLE DITTE ANNUNZIATRICI COI LORO INDIRIZZI, 1922.

(Per il Guida classificata delle specialità annunziate vedansi pagine 2541 a 2611.)

GUÍA ALFABÉTICA DE NOMBRES DE ANUNCIADORES CON SUS SEÑAS, 1922.

(Véase la Guia clasificada de artículos especiales de los anunciadores en las páginas 2541 á 2611.)

АЛФАВИТНЫЙ УКАЗАТЕЛЬ ФИРМЪ ЗА 1922 ГОДЪ.

(Подробный Указатель Спеціальностей анонсодателей—см. стр. 2541-2611.)

PAGE

Acetylene Corporation of Gt. Britain, Ltd., 49 Victoria Street, Westminster, S.W. 1; 166 Buchanan Street, Glasgow; 19 Crow Street, Dublin. Works: 19 Esher Street, Westminster, S.W. 1 ... ... *facing page* 2296

Ackroyd & Best, Ltd., Beacon Works, Texas Street, Morley, near Leeds *white page at end of book* 2718

Acme Welding Co., Ltd., 236/8 Pentonville Road, London, N. 1. Works: Northdown Road, Islington, London, N. 1; Branch Works: Newcastle-upon-Tyne *facing page* 2302

Activated Sludge, Ltd., 14 Howick Place, Victoria Street, Westminster, S.W.1. *facing pages* 1260, 1261

For Classified Directory of Advertisers' Specialities, also Glossaries of French, Italian, Spanish, & Russian Trade Terms, see pp. 2541 &c.

PAGE

Adie, Patrick, 45 Horseferry Road, Westminster, S.W. 1. ... ...*facing pages* 402, 403

Aerograph Co., Ltd., 43 Holborn Viaduct, London, E.C. 1 ... ... *facing page* 2353

Alexander, Herbert, & Co., Ltd., Charmouth Street, Leeds; and 1 Gt. Scotland Yard, London, S.W. 1 ... ...*facing page* 1781

Allan, Whyte & Co., Ltd., Clyde Patent Wire Rope Works, Rutherglen, Glasgow; and 5 East India Avenue, Leadenhall Street, London, E.C. 3 ... ...*facing pages* 254, 255

Allen-Liversidge, Ltd. (with which are amalgamated Imperial Light, Ltd., and Dissolved Acetylene Co., Ltd.), 106 Victoria Street, Westminster, S.W. 1 *facing pages,* 2292, 2294

Alley & MacLellan, Ltd., Sentinel Works, Polmadie, Glasgow; Sentinel Valve Works, Bromyard Road, Worcester; and 139 Grosvenor Road, Westminster, S.W. 1 *facing pages* 1460, 1461

Alloy Welding Processes, Ltd., 14-16 Cockspur Street, London, S.W. 1. *grey page in front of book* xxxiii

Anderson, D., & Son, Ltd., Lagan Felt Works, Belfast; and Roach Road Works, Old Ford, London, E. 3 ... ...*facing pages* 328, 329

Anderson, Thomas, Ltd., 53-62 Derby Road, Canada Dock, Liverpool; and at London, Belfast, Glasgow, Southampton, Manchester, and Barrow ...*facing pages* 1110, 1111

Andrews, Thomas, & Co., Ltd., Royds Works, Attercliffe Road, Sheffield *white page at end of book* 2700

Anglo-Swedish Electric Welding Co., Ltd., Wood Wharf, Greenwich, London, S.E. 10; 15 Forth Street, Pollokshields, Glasgow; and Glasshouse Street, St. Peter's, Newcastle-on-Tyne; Middlesbrough and Southampton ...*facing page* 2303

Angus, George, & Co., Ltd., St. John's Leather Works, Newcastle-on-Tyne, and 7 Bury Street, London, E.C. 3 ... ...*facing page* 884

Appleby, E. G., & Co, Ltd., 70 Victoria Street, Westminster, S.W. 1 *facing page* 1835

Armstrong College, University of Durham, Newcastle-on-Tyne *white page at end of book* 2730

Armstrong, Sir W. G., Whitworth, & Co., Ltd., 8 Gt. George Street, Westminster, S.W. 1; Machine Tool Works, Openshaw, Manchester; and Newcastle-on-Tyne ... ...*facing pages* 567, 1228

Arnold, Ed., & Co., 41-43 Maddox Street, London, W. 1 ... ... *facing page* 2165

Arrol, Sir William, & Co., Ltd., 85 Preston Street, Bridgeton, Glasgow, Parkhead, Glasgow; and 59 Palace Street, Westminster, S.W. 1 ... ...*facing pages* 792, 793

Ashwell & Nesbit, Ltd., Barkby Lane, Leicester; 12 Great James Street, Bedford Row, London, W.C. 1; 3 York Street, Manchester; St. Peter's Gate, Nottingham; 233A St. Vincent Street, Glasgow; and Royal Liver Building, Liverpool *white page at end of book* 2712

Association of British Driving Chain Manufacturers, Bassishaw House, Basinghall Street, London, E.C. 2 ... ...*facing pages* 864, 865

Ateliers de Constructions Electriques de Charleroi, 56 Victoria Street, London, S.W. 1. ... ...*facing pages* 1894, 1895

Atlas Steel Foundry & Engineering Co., Ltd., Atlas Steel Works, Armadale, West Lothian; Broad Street House, New Broad Street, London, E.C. 2; 15 Piccadilly, Manchester; and 28 Charles Street, Cardiff ... ...*white page at end of book* 2703

FOR CLASSIFIED DIRECTORY OF ADVERTISERS' SPECIALITIES, ALSO GLOSSARIES OF FRENCH, ITALIAN, SPANISH, & RUSSIAN TRADE TERMS, SEE PP. 2541 &c.

PAGE

Attwater & Sons, Hopwood Street Mill, Preston ... *grey page in front of book* xl

Automatic Standard Screw Co., Ltd., Charles Street, Halifax, Eng. *facing pages* 1032, 1033

'Auto' Recorder Company, Kent Street Works, Leicester, England *facing page* 1776

Babcock & Wilcox, Ltd., Oriel House, Farringdon Street, London, E.C. 4; Renfrew and Dumbarton, Scotland; and Oldbury, England ... ... *facing pages* 1493, 2016

Bailey, Sir W. H., & Co., Ltd., Albion Works, Regent Road, Salford *facing page* 1623

Bakers (Leeds), Ltd., Union Works, Sayner Road, Hunslet, Leeds ... *facing page* 1456

Barimar, Ltd., 10 Poland Street, Oxford Street, London, W. 1 ... *facing page* 2300

Barwells, Limited, Hockley Nut, Bolt, and Rivet Works, Brookfields Road, Birmingham; and 118 Cannon Street, London, E.C. 4 ... ... *facing page* 1031

Batsford, B. T., Ltd., 94 High Holborn, London, W.C. 1 *facing pages* 271, 337, 412, 1526, 2331

Beardmore, William, & Co., Ltd., Parkhead Works, Glasgow; and 36 Victoria Street, Westminster, S.W. 1 ... ... *grey pages in front of book* xxix, xxx [*and facing pages* 574, 575, 1674, 1675

Beldam Packing and Rubber Co., Ltd., 1 and 2 Gracechurch Street, London, E.C. 3. Works: Brentford, Middlesex ... ... *grey page in front of book* xxxix

Belliss & Morcom, Ltd., Ledsam Street Works, Birmingham, and 8 Victoria Street, Westminster, S.W. 1 ... ... *facing pages* 1082, 1540

Bell's United Asbestos Co., Ltd., Southwark Street, London, S.E. 1 *facing pages* 334, 335, 1432

Benjamin Electric, Ltd., Tariff Road, Northumberland Park, Tottenham, London, N. 17 ... ... *facing pages* 2140, 2141

Benn Brothers, Ltd., 'Gas World' Office, 8 Bouverie Street, London, E.C. 4 *facing page* 2035

Bennis, Ed., & Co., Ltd., Little Hulton, Bolton, and 28 Victoria Street, Westminster, S.W. 1 ... ... *first grey page at end of book* 2733

Berk, F. W., & Co., Ltd., 1 Fenchurch Avenue, London, E.C. 3. Works: Abbey Mills Chemical Works, Stratford, London, E. 15; and Pentrepoth, near Swansea *facing page* 1882

Berry, Henry, & Co., Ltd., Croydon Works, Hunslet, Leeds *white page at end of book* 2706

Bingham Calcium Carbide Co., Ltd., 11 Queen Victoria Street, London, E.C. 4 *facing page* 2304

Bingham, Charles & Co., Ltd., 11 Queen Victoria Street, London, E.C. 4 *facing page* 2304

Birmingham Aluminium Casting (1903) Co., Ltd., Cambridge Street Works, Birmingham ... ... *facing page* 2316

Birmingham, University of, Birmingham ... ... *white page at end of book* 2723

Boilerine, Ltd., 885A to 897 Old Kent Road, London, S.E. 15; and Union Bank Chambers, Southampton ... ... *facing page* 1492

FOR CLASSIFIED DIRECTORY OF ADVERTISERS' SPECIALITIES, ALSO GLOSSARIES OF FRENCH, ITALIAN, SPANISH, & RUSSIAN TRADE TERMS, SEE PP. 2541 &C.

PAGE

Booth, James, & Co. (1915), Ltd., Argyle Street, Nechells, Birmingham *grey page in front of book* xxxi

Boving & Co, Ltd., Imperial Buildings, 56 Kingsway, London, W.C. 2. Works: Stoke-on-Trent ... ... *facing pages* 1156, 1157, 1174, 1175

Boyle, Robert & Son, 64 Holborn Viaduct, London, E.C. 1 ... ... *facing page* 2130

Briquette Machinery, Ltd., Charmouth Street, Leeds; and 1 Gt. Scotland Yard, London, S.W. 1 ... ... *facing page* 1781

British Aluminium Co., Ltd., 109 Queen Victoria Street, London, E.C. 4. Stores: 22 Aldersgate Street, London, E.C. 1 ... ... *grey page in front of book* xvii

British Barimar-Thermit Welding Co., Ltd., 10 Poland Street, Oxford Street, London, W. 1 ... ... *facing page* 2300

British Cellulose & Chemical Manufacturing Co., Ltd., 11 Queen Victoria Street, London, E.C. 4 ... ... *facing page* 2304

British Commercial Gas Association (Wm. M. Mason, Secretary), 30 Grosvenor Gardens, Westminster, S.W. 1 ... ... *facing pages* 1828, 1829

British Fibrocement Works, Ltd., 22/23 Laurence Pountney Lane, Cannon Street, London, E.C. 4. Works: Erith, Kent ... ... *facing page* 336

British Hele-Shaw Patent Clutch Co., Ltd., Suthers Street, Werneth, Oldham *facing page* 855

British Ljungstrom Marine Turbine Co., Ltd., 195 Strand, London, W.C. 2 *facing pages* 2006, 2007

British Niclausse Boiler Co., Ltd., Clock House, Arundel Street, Strand, London, W.C. 2 ... ... *facing pages* 1484, 2020

British Oxygen Co., Ltd., Angel Road, Upper Edmonton, London, N. 18; East Greenwich, London, S.E. 10; and at Manchester, Birmingham, Leeds, Liverpool, Newcastle-on-Tyne, Glasgow, and Cardiff ... ... *grey page in front of book* xxi

British Thomson-Houston Co., Ltd., London: 83 Cannon Street, and Mazda House, Upper Thames Street, E.C. 4. Works: Rugby ... ... *facing page* 1943

Brotherhood, Peter, Ltd., Peterborough; Central House, Kingsway, London, W.C. 2; Mansfield Chambers, St. Ann's Square, Manchester; Commercial Union Buildings, Pilgrim Street, Newcastle-on-Tyne; and 48 West Regent Street, Glasgow *facing pages* 1076, 1077, 1098, 1099

Broughton Copper Co., Ltd., Broughton Copper Works, Manchester; Ditton Copper Works, Widnes; 6 Broad Street Place, London, E.C. 2; and Hyde Park Street, Glasgow ... ... *facing pages* 236, 237

Brownlie & Green, Ltd., Church Street, Cheetham, Manchester; 2 Austin Friars, London, E.C. 2; and 94 Hope Street, Glasgow ... ... *facing page* 1465

Bruce Peebles & Co., Ltd., Edinburgh ... ... *facing pages* 1896, 1897

Bruntons, Wire Mills, Musselburgh, Scotland ... ... *facing page* 802

Buckley, W. W., & Sons, Christ Church Square, Hulme, Manchester *facing page* 883

Building Products Ltd., Columbia House, 44/46 King's Road, Sloane Square, London, S.W. 3 ... ... *grey page in front of book* xli

Bullivant & Co., Ltd., 72 Mark Lane, London, E.C. 3; and Millwall, London, E. 14 *grey pages inside back cover* 2734, 2735

FOR CLASSIFIED DIRECTORY OF ADVERTISERS' SPECIALITIES, ALSO GLOSSARIES OF FRENCH, ITALIAN, SPANISH, & RUSSIAN TRADE TERMS, SEE PP. 2541 &c.

PAGE

Bullivant's Engineering & Contracting Co., Ltd., 72 Mark Lane, London, E.C. 3. Works: Millwall, London, E. 14 .. .. *grey pages at end of book* 2734,2735

Bull's Metal and Melloid Co., Ltd., Yoker, near Glasgow ... ... *facing pages* 2058, 2059

Butler, Samuel, & Co., Ltd., Grangefield Works, Stanningley, nr. Leeds. London Office: 9 Victoria Street, Westminster, S.W. 1 ... ... *facing pages* 788, 789

Butters Bros., & Co., McLellan Street, Glasgow; Loveday Street, Johannesburg, South Africa; McGill Street, Montreal, Canada; 52 Pitt Street, Sydney, Australia; and 28 Rue de Belzunce, Paris ... ... *facing pages* 790, 791

Buxton Lime Firms Co., Ltd., Royal Exchange, Buxton; 11 Queen Victoria Street, London, E.C. 4; 79 Piccadilly, Manchester; and 162 Crown Street, Liverpool *facing pages* 355, 1442, 1443

Caird & Rayner, 777 Commercial Road, Limehouse, London, E. 14 ... *facing pages* 1412, 1413

Callender, George M., & Co., Ltd., 25 Victoria Street, Westminster, S.W. 1; and Bow, London, E. 3 ... ... *facing pages* 1290, 1291

Cambridge & Paul Instrument Co., Ltd., 45 Grosvenor Place, Westminster, S.W. 1; and Carlyle Road, Cambridge, England ... ... *facing page* 1767

Cammell, Laird & Co., Ltd., Cyclops Works, Sheffield; Ordnance Steel Works, Grimesthorpe; Birkenhead; and 3 Central Buildings, Westminster, S.W. 1 *facing page* 2050

Campbell Gas Engine Co., Ltd., Halifax, England; and 73A Queen Victoria Street, London, E.C. 4 ... ... *grey page in front of book* vi, *and facing pages* 1645, 1692

Carbic, Ltd., Walworth House, 51 Holborn Viaduct, London, E.C. 1 *facing page* 2298

Carels Diesel and Steam Engines (London), Ltd., Carlton House, Regent Street, London, S.W. 1 ... ... *facing page* 1682

Casella, C. F., & Co., Ltd., 49/50 Parliament Street, Westminster, London, S.W. 1 *facing page* 141

Cement Marketing Co., Ltd., 8 Lloyd's Avenue E.C. 3; 143 Grosvenor Road, S.W. 1; and Hollick's Wharf, Riverside, Greenwich, London, S.E. 10 *facing page* 446

Central Heating Company, Ltd., 26 Denman Street, London, S.E. 1; 2 Mark Lane, Leeds; and Richmond Bldgs., Brighton ... ... *facing page* 2103

Chalk, Abercrombie & Co., 5 Robertson Street, Partick, Glasgow ... *facing page* 2255

Chance Brothers & Co., Ltd., Lighthouse Works, Smethwick, Birmingham *facing page* 1362

Chaplin, Alex., & Co., Ltd., 89 Helen Street, Govan, Glasgow ... *facing pages* 786, 787

Chatwin, Thomas, Ltd., Victoria Works, Great Tindal Street, Birmingham *grey page in front of book* xxviii

Chemical Engineering & Wilton's Patent Furnace Co., Ltd., 76 Victoria Street, London, S.W. 1. Works: Hendon, London, N.W. 4. ... ... *facing page* 1785

Chloride Electrical Storage Co., Ltd., Clifton Junction, Manchester; 57 Victoria Street, Westminster, S.W. 1; 220 Shaftesbury Avenue, London, W.C. 2; and Calcutta, Bombay, and Sydney ... ... *facing page* 697

Clarke, Chapman & Co., Ltd., Victoria Works, Gateshead-on-Tyne; 50 Fenchurch Street, London, E.C. 3; and at Glasgow, Manchester, Cardiff ... *facing pages* 1591, 1973

FOR CLASSIFIED DIRECTORY OF ADVERTISERS' SPECIALITIES, ALSO GLOSSARIES OF FRENCH, ITALIAN, SPANISH, & RUSSIAN TRADE TERMS, SEE PP. 2541 &C.

'PAGE

Clay Cross Co., Ltd., Clay Cross, near Chesterfield ... ... *facing pages* 232, 1780

Coan, Robert W., The Aluminium Foundry, 219 Goswell Road, London, E.C. 1 *facing pages* 2328, 2329

Cochran & Co., Annan, Ltd., Annan, Scotland; and 7c Lower Belgrave Street, London, S.W. ... ... *facing page* 1482

Cockburns, Ltd., Clydesdale Engineering Works, Cardonald, near Glasgow *facing pages* 1970, 1971

Cole, Henry A., & Co., Ltd., Coronet Works, King Street, Liverpool; and Beaufort Road Works, Birkenhead ... ... *facing page* 834

Consolidated Brake and Engineering Co., Ltd., 15 Dean's Yard, Westminster, S.W. 1. Works: Slough ... ... *grey page in front of book* ix

Consolidated Pneumatic Tool Co., Ltd., Egyptian House, 170 Piccadilly, London, W. 1. Works: Fraserburgh, Scotland ... ... *facing page* 996

Constable & Co., Ltd., 10 Orange Street, London, W.C. 2 ... ... *facing page* 2051

Cooper & Greig, Ltd., Britannia Works, Dundee; and 17 Victoria Street, Westminster, S.W. 1 ... ... *facing page* 2017

'Coventry' Chain Co., Ltd., Spon End Works, Coventry; 47 Victoria Street, Westminster, S.W. 1; and 233 Deansgate, Manchester .. ... *facing pages* 864, 865

Cradley Boiler Co., Ltd., Cradley Heath, Staffs ... ... *facing page* 1491

Cradock, George, & Co., Ltd., Wakefield; 7 East India Avenue, London, E.C. 3; Bainbridge Buildings, Surrey Street, Sheffield; Union Bank Chambers, Sydney, N.S.W.; Consolidated Buildings, Johannesburg; 1 Mission Row, Calcutta; and 169 Cordova Street West, Vancouver, B.C. ... ... *facing pages* 852, 853, 2192, 2193

Craigpark Electric Cable Co., Ltd., Flemington Street, Springburn, Glasgow; 17 Victoria Street, Westminster, S.W. 1; and 49 Deansgate, Manchester *facing page* 1863

Crane-Bennett, Ltd., 45/51 Leman Street, London, E. 1; 32 Oxford Road, Manchester; Lloyd's Bank Chambers, New Street, Birmingham; Leeds; Glasgow; Cardiff; and Nacton Works, Ipswich ... ... *facing page* 1459

Crockatt, W., & Sons, Ltd., 64 Daruley Street, Glasgow; and 12 Bath Street, Liverpool ... ... *facing page* 1464

Crompton & Co., Ltd., Salisbury House, London Wall, E.C. 2; and Arc Works, Chelmsford, Essex ... ... *facing page* 1888

Crosby Valve and Engineering Co., Ltd., 41/42 Foley Street, London, W. 1 *grey page in front of book* xiv

Crossley Brothers, Ltd., Openshaw, Manchester; and 139 & 141 Queen Victoria Street, London, E.C. 4 ... ... *facing pages* 1644, 1690

Crystal Palace School of Practical Engineering, Sydenham, London, S.E. 19 *white page at end of book* 2722

Cutting, R. C., & Co., Vulcan House, 56 Ludgate Hill, London, E.C. 4 *facing page* 1955

Daglish, Robt., & Co., Ltd., St. Helens, Lancs ... ... *facing pages* 2188, 2189

Davey, Paxman & Co., Ltd., Colchester; and 78 Queen Victoria Street, London, E.C. 4 ... ... *grey page* iv, *and back of title-page* xlix

Dawson, James, & Son, Ltd., Boultham Works, Lincoln, Eng. London Office: 60 Victoria St., Westminster, S.W. 1 ... ... *facing page* 830

Deighton's Patent Flue and Tube Co., Ltd., Vulcan Works, Pepper Road, Leeds; and 30 Great St. Helen's, London, E.C. 3 ... ... *facing pages* 1420, 1421

FOR CLASSIFIED DIRECTORY OF ADVERTISERS' SPECIALITIES, ALSO GLOSSARIES OF FRENCH, ITALIAN, SPANISH, & RUSSIAN TRADE TERMS, SEE PP. 2541 &c.

PAGE

Delta Metal Company, Ltd., Delta Works, East Greenwich, London, S.E. 10; and Dartmouth Street, Birmingham ... ... *facing pages* 248, 249

Dempster, Robert, & Sons, Ltd., Rosemount Ironworks, Elland, Yorks *facing page* 2064

Dempster, R. & J., Ltd., Gas Plant Works, Manchester; and 34 Victoria Street, London, S.W. 1 ... ... *facing page* 2084

Dexine, Ltd., Abbey Lane, Stratford, London, E. 15; 74 South Castle Street, Liverpool; and 65 West Regent Street, Glasgow ... ... *facing pages* 1152, 1433

Dick, R. & J., Ltd., Greenhead Works, Glasgow; and 46 Watling Street, London, E.C. 4 ... ... *facing page* 829

Dissolved Acetylene Co., Ltd. (amalgamated with Allen-Liversidge, Ltd.), 268-270 South Lambeth Road, London, S.W. 8; and Glasgow, Birmingham, Manchester, Bristol, and Newcastle-on-Tyne ... ... *facing pages* 2292, 2294

District Chemical Co., Ltd., 1 Fenchurch Avenue, London, E.C. 3 *facing page* 2295

Dowson & Mason Gas Plant Co., Ltd., Alma Works, Levenshulme, Manchester *facing page* 1834

Doxford, William, & Sons, Ltd., Pallion Yard, Sunderland; and 77 Gracechurch Street, London, E.C. 3 ... ... *facing page* 2035

Driving Chain Manufacturers (Association of British), Bassishaw House, Basinghall Street, London, E.C. 2 ... ... *facing pages* 864, 865

Earle, Bourne & Co., Ltd., Heath Street South, Birmingham; Clock House, Arundel Street, Strand, London, W.C. 2; 82 Market Street, Manchester; 72 Waterloo Street, Glasgow; and at Paris ... ... *white page at end of book* 2705

Electric Control, Ltd., 177 Reid Street, Bridgeton, Glasgow; and Queen Anne's Chambers, Tothill Street, Westminster, S.W. 1 ... ... *facing pages* 1918, 1919

'Electrical Review,' The, 4 Ludgate Hill, London, E.C. 4 *white page at end of book* 2716

'Electricity,' 36 Maiden Lane, Strand, London, W.C. 2 ... ... *facing page* 1883

Electro-Metals, Ltd., Imperial Buildings, 56 Kingsway, London, W.C. 2 *facing pages* 922, 2260, 2261

Elliston, Evans & Jackson, Ltd., 13 Cross Street, Finsbury, London, E.C. 2 *facing pages* 1916, 1917

'Engineer,' The, 33 Norfolk Street, Strand, London, W.C. 2 *grey pages in front of book* vii, viii

English Electric Company, Ltd., Queen's House, Kingsway, London, W.C. 2. Works: Preston, Coventry, Bradford, Stafford, and Rugby. Branch Offices: Birmingham, Cardiff, Glasgow, Liverpool, Manchester, Newcastle-on-Tyne, and Sheffield, Buenos Ayres, Rio de Janeiro, Montreal, Calcutta, Bombay, Madras, Tokio, Wellington, N.Z., Cape Town, and Singapore *grey page in front of book* xix *and facing pages* 667, 1177, 1558, 1673, 1908

Evershed & Vignoles, Ltd., Acton Lane Works, Chiswick, London, W. 4 *facing page* 1940

Expanded Metal Co., Ltd., York Mansion, Petty France, Westminster, S.W. 1; and Stranton Works, West Hartlepool ... ... *facing pages* 344, 345

Eyre Smelting Co., Ltd., Merton Abbey, London, S.W. 19; and Barden Road Works, Tonbridge, Kent ... ... *facing pages* 2040, 2041

Ferodo, Ltd., Sovereign Mills, Chapel-en-le-Frith; and 222 Tottenham Court Road, London, W. 1 ... ... *facing pages* 795, 856

FOR CLASSIFIED DIRECTORY OF ADVERTISERS' SPECIALITIES, ALSO GLOSSARIES OF FRENCH, ITALIAN, SPANISH, & RUSSIAN TRADE TERMS, SEE PP. 2541 &c.

PAGE

Ferrox Company, Ltd., 12 Grosvenor Gardens, London, S.W. 1. Works: Wolverhampton ... ... *facing page* 2297

Fielding & Platt, Ltd., Atlas Works, Gloucester; and 73A Queen Victoria Street, London, E.C. 4 ... ... *facing pages* 1240, 1241

Findlay, Alex., & Co., Ltd., Motherwell, Scotland; and 9 Victoria Street, Westminster, S.W. 1 ... ... *facing page* 287

Firth, Thos., & Sons, Ltd., Norfolk Works, Savile Street East, Sheffield; and 8 The Sanctuary, Westminster, S.W. 1 ... ... *facing pages* 980, 981

Fleming & Co., 31 Robertson Street, Glasgow ... ... *facing page* 701

Flower & Everett, Ltd., 7 Grosvenor Road, Westminster, S.W. 1 ... *facing pages* 1344, 1345

Foster Brothers, Ltd., Regent House, Kingsway, London, W.C. 2; and Lea Brook Tube Works, Wednesbury ... ... *facing page* 1516

Foster Instrument Co., Letchworth, Herts, England ... ... *facing page* 988

Fram (London), Ltd., 135 Grosvenor Road, Westminster, S.W. 1 ... *facing page* 435

Fullerton, Hodgart & Barclay, Ltd., Vulcan Foundry and Engine Works, Paisley ... ... *facing page* 1078, 1079

Gallagher & Crompton, 3 Upper Cleminson Street, Salford, Manchester; Romiley, nr. Stockport; 3 Creechurch Lane, London, E.C. 3; and 1 Windsor Place, Cardiff ... ... *facing page* 1790

Galloways, Ltd., Knott Mill Ironworks, Manchester... ... ... *facing pages* 1470, 1471

Gandy Belt Manufacturing Co., Ltd., Wheatland Works, Seacombe, Cheshire; 97 Queen Victoria Street, London, E.C. 4; 141 Moor Street, Birmingham; 31 Corporation Street, Manchester, etc. ... ... *facing page* 831

Garnham, J. B., & Sons, 44/47 Devonshire Street, Theobald's Road, London, W.C.1 *facing page* 2317

General Electric Co., Ltd., Magnet House, Kingsway, London, W.C. 2; Witton Engineering Works, near Birmingham; and Fraser & Chalmers' Engineering Works, Erith, Kent ... ... *facing pages* 1889, 1942

Gent & Co., Ltd., Faraday Works, Leicester; 25 Victoria Street, Westminster, S.W. 1; 52 Blackett Street, Newcastle-on-Tyne; and 116 Hope Street, Glasgow *facing page* 1954

Gibbons Bros., Ltd., Dibdale Works, Dudley, Worc.; 142 and 143 Palace Chambers, Westminster, S.W. 1 ... ... *facing page* 2065

Gibson, John, 63 Coleman Street, London, E.C. 2 ... ... *white page at end of book* 2719

Gilkes (Gilbert) & Co., Ltd., Kendal, England; and 46 Queen Victoria Street, London, E.C. 4 ... ... *facing page* 1217

Gilman, Frank, 9 Westfield Road, Birmingham ... ... *facing page* 1457

Glasgow Royal Technical College, Glasgow ... ... *white page at end of book* 2726

Gordon, James, & Co., Ltd., Windsor House, Kingsway, London, W.C. 2 *facing pages* 1176, 1204, 1205, 1216

Gordon Superheating Company, Regent House, Kingsway, London, W.C. 2 *facing page* 1517

Govan Shafting and Engineering Co., Ltd., Merryland Street, Govan, Glasgow; and 108 Fenchurch Street, London, E.C. 3 ... ... *facing page* 923

Graphite Products, Ltd., 218–220 Queen's Road, Battersea, London, S.W. 8 *facing page* 2355

FOR CLASSIFIED DIRECTORY OF ADVERTISERS' SPECIALITIES, ALSO GLOSSARIES OF FRENCH, ITALIAN, SPANISH, & RUSSIAN TRADE TERMS, SEE PP. 2541 &c.

PAGE

Green E., & Son, Ltd., Wakefield; 2 Exchange Street, Manchester; Glasgow; and Hastings House, Norfolk Street, Strand, London, W.C. 2 ... ... *facing pages* 770, 771

Greening, N., & Sons, Ltd., 16 Finsbury Street, London, E.C. 2; and at Warrington *white page at end of book* 2710

Griffin, Charles, & Co., Ltd., Exeter Street, Strand, London, W.C. 2 *facing page* 1309

Griffin, John J., & Sons, Ltd., Kemble Street, Kingsway, London, W.C. 2 *white page at end of book* 2717

Guest & Chrimes, Ltd., Rotherham. London Address: 4-5 Adam Street, Adelphi, W.C. 2 ... ... *facing page* 1308

Hadfields, Ltd., Sheffield; and Norfolk House, Laurence Pountney Hill, London, E.C. 4 ... ... *facing page* 2034

Halesowen Steel Co., Ltd., Halesowen, near Birmingham *grey page in front of book* xxxvii

Hardenite Steel Co., Ltd. (Export Dept. of Thomas Andrews & Co., Ltd.), Hardenite Steel Works, and Royd's Works, Sheffield ... *white page at end of book* 2700

Hardy Patent Pick Co., Ltd., Sheffield; and 17 Queen Victoria Street, London, E.C. 4 ... ... *grey page facing inside front cover* ii

Harley, Conyngham & Watt Ltd., 581/2 Mansion House Chambers, Queen Victoria Street, London, E.C. 4 ... ... *facing page* 1139

Harling, W. H., 117 Moorgate, London, E.C. 2; and Grosvenor Works, Clapton, London, E. 5 ... ... *facing pages* 148, 178

Hart Accumulator Co., Ltd., Marshgate Lane, Stratford, London, E. 15; 36 Victoria Street, Westminster, S.W. 1; Temple Chambers, 33 Brazennose Street, Manchester; and Princes Chambers, Corporation Street, Birmingham ... *facing pages* 1878, 1879

Hart, Thomas, Ltd., 12-14 Town Hall Street, Blackburn ... ... *facing page* 847

Harvey, G. A., & Co. (London), Ltd., Greenwich Metal Works, Woolwich Road, London, S.E. 7 ... ... *grey page in front of book* xlvi

Harvey, L. C., 25 Victoria Street, Westminster, S.W. 1 ... ... *facing page* 1805

Hay, Maryon & Co., Ltd., 14 Bride Lane, Ludgate Circus, London, E.C. 4 *facing pages* 1125, 1198, 1199, 1229

Heenan & Froude, Ltd., 4 Chapel Walks, Manchester; Worcester Engineering Works, Worcester; Newton Heath Ironworks, Manchester; 150 New Bond Street, London, W. 1; and 79 West Regent Street, Glasgow ... *facing pages* 130, 1661, 1804

Henderson & Glass, Vulcan Street, Liverpool ... ... *facing pages* 224, 225

Hendry, James, Ltd., 252 Main Street, Bridgeton, Glasgow; 16 Union Court, Old Broad Street, E.C. 2; Daimler House, Paradise Street, Birmingham; and Consolidated Buildings, Johannesburg ... ... *between pages* 840, 841

Henley's, W. T., Telegraph Works Co., Ltd., 13 and 14 Blomfield Street, London Wall, London, E.C. 2; North Woolwich, E. 16; and Gravesend, Kent *grey page facing title-page* xlvii

Heriot-Watt College, Edinburgh ... ... *white page at end of book* 2725

Hick, Hargreaves & Co., Ltd., Bolton, England; and 90 Temple Chambers, Temple Avenue, London, E.C. 4 ... ... *facing pages* 1627, 1672

Hind, John, & Sons, Ltd., 75 Great George's Street, Belfast ... ... *facing page* 1604

Hoggett, Young & Co., 17 Essex Road, London, N. 1 ... ... *facing pages* 2288, 2289

Hollings & Guest, Ltd., Thimble Mill Lane, Birmingham *grey page in front of book* xxxvi

FOR CLASSIFIED DIRECTORY OF ADVERTISERS' SPECIALITIES, ALSO GLOSSARIES OF FRENCH, ITALIAN, SPANISH, & RUSSIAN TRADE TERMS, SEE PP. 2541 &C.

PAGE

Holst, K., & Co., 1 Victoria Street, Westminster, London, S.W. 1 ... *facing page* 448

Holt & Willetts, Lion Works, Cradley Heath, Staffs; 87 Bishopsgate, London, E.C. 2; 62 Buchanan Street, Glasgow; Temple Chambers, Brazennose Street, Manchester; Exchange Buildings, Birmingham; 31 Queen Street, Cardiff; 23 Rue Bichat, Paris; 231 Elizabeth Street, Melbourne; Montreal; and 92 Chambers Street, New York... ... ...*grey page in front of book* xxiii

Hopkinson, J., & Co., Ltd., Britannia Works, Huddersfield; Imperial House, 17 Kingsway, London, W.C. 2; 41 Bothwell Street, Glasgow, etc. *grey page in front of book* xi

Horton & Son, Ltd., New Alma Works, Darlaston, South Staffs; and 110 Cannon Street, London, E.C. 4... ... ... *white page at end of book* 2704

Howden, James, & Co., Ltd., 195 Scotland Street, Glasgow; 9 Billiter Square, London, E.C. 3; Caxton House, Westminster, S.W. 1; Cunard Building, Liverpool; 86 Cross Street, Manchester; Milburn House, Newcastle-on-Tyne; and 277 Broadway, New York, U.S.A. ... ...*facing page* 1820

Howes, S., Co., 64 Mark Lane, London, E.C. 3 ... ...*facing pages* 1210, 1211

Hudson Economiser Co., Gloucester House, 110 Bishopsgate, London, E.C. 2. Works: Luton, Beds ... ... *facing page* 956

Hulburd Engineering Co., Ltd., St. Bene't Chambers, Fenchurch Street, London, E.C. 3 ... ... *grey page in front of book* xiii

Humphreys, J. H., & Sons, Horsedge Electrical Works, Oldham, England *facing page* 972

Hunton, C. A. & Sons, 110 Bishopsgate, London, E.C. 2. Show Rooms: 71 Southwark Street, London, S.E. 1 ... ... *facing page* 956

Hydraulic Gears, Ltd., Beavor Lane, Hammersmith, London, W. 6 *grey page in front of book* xxxv

Hydrogen, Oxygen and Plant Co., Ltd., 1 Albemarle Street, Piccadilly, London, W. 1 ... ...*facing page* 2301

Imperial College of Science and Technology, South Kensington, London, S.W. 7 ... ...*white page at end of book* 2720

India Rubber, Gutta Percha, and Telegraph Works Co., Ltd., 106 Cannon Street, London, E.C., 4; and Silvertown, London, E. 16 ... ... *facing pages* 1866, 1867

Ingersoll-Rand Co., Ltd., 165 Queen Victoria Street, London, E.C. 4; 20 Renfrew Street, Glasgow; and 196 Deansgate, Manchester ... *grey page in front of book* xliv

Integral Oxygen Co., Ltd., New Crane Street, Chester ... ...*facing page* 2299

International Electrolytic Plant Co., Ltd., New Crane Street, Chester; and 21 Bennett's Hill, Birmingham ... ...*facing page* 2299

Jackman, Joseph, & Co., Ltd., Persberg Steel, Tool, and File Works, Attercliffe Common, Sheffield ... ... *white page at end of book* 2699

'J.B.R.' Tool Co., Ltd., Chell Street, Longsight, Manchester ... ... *facing page* 989

Jenkins, W. J., & Co., Ltd., Retford, Notts ... ...*facing page* 2063

Johnson & Phillips, Ltd., Victoria Works, Charlton, S.E. 7; and 12 Union Court, Old Broad Street, London, E.C. 2 ... ...*facing pages* 1864, 1865

Jones, A. A., & Shipman, Ltd., New Century Works, Leicester; and 163 King Street East, Toronto, Canada ... ...*grey page in front of book* xxxii

FOR CLASSIFIED DIRECTORY OF ADVERTISERS' SPECIALITIES, ALSO GLOSSARIES OF FRENCH, ITALIAN, SPANISH, & RUSSIAN TRADE TERMS, SEE PP. 2541 &c.

PAGE

Kaye, Joseph, & Sons, Ltd., 93 High Holborn, London, W.C. 1 ; and Lock Works, Leeds ... ... *white page at end of book* 2708

Keay, E. C. & J., Ltd., Princes Chambers, Corporation Street, Birmingham ; and James Bridge Works, Darlaston ... ... *facing page* 300

Kennicott Water Softener Co. (Proprietors: **John Thompson Water Tube Boilers, Ltd.**), Wolverhampton ; and 180 Fleet Street, London, E.C. 4 ... ... *facing page* 1445

Kent, George, Ltd., 199/201 High Holborn, London, W.C. 1. Works : Luton, Beds *facing page* 1311

Kenyon, Wm., & Sons, Ltd., Chapel Field Works, Dukinfield, near Manchester ; and 95-97 Finsbury Pavement, London, E.C. 2 ... ... *facing pages* 846, 1438

King's College, University of London, Strand, London, W.C. 2 *white page at end of book* 2721

Kirkstall Forge, Ltd., Kirkstall Forge, near Leeds ... ... *facing pages* 920, 921

Lamson Pneumatic Tube Co., Ltd., 20 Cheapside, London, E.C. 2 ; and 6 & 7 Hythe Road, Willesden, London, N.W. 10 ... ... *facing page* 1085

Lancashire Telluric Cement Co. (Sutcliffe Bros. & Bryce, Ltd.), Park Works, Godley, near Manchester ... ... *facing page* 1439

Lancaster & Tonge, Ltd., Pendleton, Manchester ... ... *facing page* 1605

Lea Recorder Company, Ltd., 28 Deansgate, Manchester ... *facing page* 1455

Leeds Engineering and Hydraulic Co., Ltd., Rodley, near Leeds *white page at end of book* 270

Leeds, University of, Leeds ... ... *white page at end of book* 2727

Lift & Hoist Co., Ltd. (The), Prince Street, Deptford, London, S.E. 8 *white page at end of book* 2714

Liverpool Electric Cable Co., Ltd., Linacre Lane, Bootle, Liverpool *facing page* 1862

Liverpool, University of, Brownlow Hill, Liverpool ... *white page at end of book* 2728

Lockwood (Crosby) & Son, 7 Stationers' Hall Court, Ludgate Hill, London, E.C. 4 *facing pages* 447, 566, 1083, 1084, 1509, 1622

London Coke Committee, 84 Horseferry Road, Westminster, S.W. 1 *facing page* 1777

London Electric Wire Company & Smiths, Ltd., Playhouse Yard, Golden Lane, London, E.C. 1 ; and Anaconda Works, Salford, Manchester ... *facing page* 1859

Longmans, Green & Co., 39 Paternoster Row, London, E.C. 4 ; New York, Bombay, and Calcutta ... ... *facing page* 1660

Loughborough Technical College, Loughborough ... *white page at end of book* 2729

Macintosh Cable Co., Ltd., 22/23 Jewin Street, London, E.C. 1 ; Ashbourne Road Mills, Derby ; 176/178 Rice Lane, Walton, Liverpool ... ... *facing pages* 1868, 1869

Macintosh, Charles, & Co., Ltd., Cambridge Street, Manchester ; 22/23 Jewin Street, London, E.C. 1 ; 58 Dale Street, Liverpool ; 5 Royal Exchange Square, Glasgow ; and 9 Trinity Street, Dublin ... ... *facing pages* 1732, 1733

McCorquodale & Co., Ltd. (John Gibson, Agent), 63 Coleman Street, London, E.C. 2 ... ... *white page at end of book* 2719

McPhail & Simpson, Ettingshall Works, Wolverhampton ... ... *facing page* 1515

Manganese Bronze and Brass Co., Ltd., 210 Caxton House, Westminster, S.W. 1 ... ... *facing page* 2321

FOR CLASSIFIED DIRECTORY OF ADVERTISERS' SPECIALITIES, ALSO GLOSSARIES OF FRENCH, ITALIAN, SPANISH, & RUSSIAN TRADE TERMS, SEE PP. 2541 &c.

PAGE

Marine & Locomotive Superheaters, Ltd., Trafford Park, Manchester; and 195 Strand, London, W.C. 2 ... ... *facing pages* 2024, 2025

Markt & Co. (London), Ltd., 98/100 Clerkenwell Road, London, E.C. 1 *grey page in front of book* xlii

Massey, B. & S., Ltd., Openshaw, Manchester; 28 Victoria Street, Westminster, S.W. 1; 110 Bothwell Street, Glasgow; Dock Street, Newport; and 93 Ann Street, Belfast ... ... *grey page in front of book* iii

Mather & Platt, Ltd., Salford, Manchester; Park Works, Manchester; and 14 Great Smith Street, Westminster, S.W. 1 ... ...*grey pages in front of book* xxv, xxvi

Metropolitan-Vickers Electrical Co., Ltd., Trafford Park, Manchester *facing page* 1559

Mirrlees, Bickerton & Day, Ltd., Hazel Grove, near Stockport; and 7 Grosvenor Gardens, Westminster, S.W. 1 ... ... *facing page* 1668

Mirrlees Watson Co., Ltd., Scotland Street, Glasgow; and 7 Grosvenor Gardens, London, S.W. 1 ... ... *facing pages* 776, 777, 1626

Mitchell's Emery Wheel Co., Star Works, Openshaw, Manchester; and 52 Queen Victoria Street, London, E.C. 4 ... ... *white page at end of book* 2715

Modern Office Equipment Co., Ltd., 8 Waterloo Street, Glasgow *facing 'Contents'* lvii

Muir, Murray, & Co., Adelphi Works, Paisley ... ...*facing pages* 2344, 2345

Mumford Bailey & Preston, 22/23 Clerkenwell Close, London, E.C. 1 *facing page* 2101

Musgrave & Co., Ltd., St. Ann's Ironworks, Belfast; Sardinia House, Kingsway, London, W.C. 2; 42 Deansgate, Manchester; 24 Queen Street, Cardiff; and at Paris ... ... *facing pages* 1529, 1791

Napier, D., & Son, Ltd., 14 New Burlington Street, London, W. 1. Works; Acton, London, W. 3 ... ...*facing pages* 1714, 1715

Newall, R. S., & Son, Ltd., 19 Royal Exchange Square, Glasgow. Head Office and Works: Linacre, Liverpool ... ...*facing pages* 256, 257

Nobel Industries, Ltd., Nobel House, Buckingham Gate, London, S.W. 1 *facing pages* 2166, 2167

North British Rubber Co., Ltd., Castle Mills, Edinburgh; 204 Tottenham Court Road, London, W. 1; 14 Cumberland Street, Manchester, etc. *facing pages* 836, 837

North-Eastern Marine Engineering Co., Ltd., Wallsend-on-Tyne; Sunderland; Tower Building, Liverpool; and 22 Billiter Street, London, E.C. 3 *facing pages* 2026, 2027

Nottingham, University College of, Nottingham *white page at end of book* 2731

Oxy-acetylene Welding Co., Ltd., 21A St. Vincent Crescent, Finnieston, Glasgow *grey page in front of book* xxxiv

Oxhycarbon Co., 24 Pancras Road, London, N.W. 1 ... ...*facing pages* 2290, 2291

Palatine Engineering Co., Ltd., Hawthorne Road, Bootle, near Liverpool *white page at end of book* 2713

Patent Lightning Crusher Co., Ltd., 14A Rosebery Avenue, London, E.C. 1 *grey page in front of book* xliii

Pearson, E. J. & J., Ltd., Stourbridge ... ...*facing pages* 1424, 1425

Peebles (Bruce) & Co., Ltd., Edinburgh ... ...*facing pages* 1896, 1897

FOR CLASSIFIED DIRECTORY OF ADVERTISERS' SPECIALITIES, ALSO GLOSSARIES OF FRENCH, ITALIAN, SPANISH, & RUSSIAN TRADE TERMS, SEE PP. 2541 &c.

PAGE

Pegg & Ellam Jones, Ltd., Derby, England; and 96 Newgate Street, London, E.C. 1 ... ... *facing page* 413

Periam, Herbert W., Ltd., Floodgate Street Works, Birmingham *grey page in front of book* xxiv

Phosphor Bronze Co., Ltd., 87, 89 & 91 Sumner Street, Southwark, London, S.E. 1; and Chester Street, Aston, Birmingham ... ... *facing page* 2320

Piggott, Thomas, & Co., Ltd., Atlas Works, Spring Hill, Birmingham *white page at end of book* 2709

Pinchin, Johnson & Co., Ltd., General Buildings, Aldwych, London, W.C. 2; and at Birmingham and Toronto ... ... *facing pages* 414, 415, 964, 965, 1855, 2354

Player, W. & J., Smithfield Works, Sherlock Street, Birmingham *facing page* 1023

Pochin (E. Arnold) & Bro., Trafford Park, Manchester ... ... *facing page* 885

Positive Lock Washer Co., 80–84 James Watt Street, Glasgow ... *facing page* 857

Potter, F. W., & Co., Phipp Street, Great Eastern Street, London, E.C. 2 *grey page in front of book* xlv

Power-Gas Corporation, Ltd., Parkfield Works, Stockton-on-Tees; 39 Victoria Street, Westminster, S.W. 1; and at Glasgow, Manchester, Leeds, etc. *facing pages* 1832, 1833

Power Plant Co., Ltd., West Drayton, Middlesex ... ... *facing pages* 886, 887

Premier Cooler and Engineering Co., Ltd., Shalford, near Guildford, Surrey; and 3 & 5, Queen Street, Cheapside, London, E.C. 4 ... ... *facing page* 1527

Premier Electric Welding Co., Ltd., Bank Buildings, St. James's Street, London, S.W. 1; and at Belfast, Glasgow, Liverpool, Leith, Newcastle-on-Tyne, Swansea, and Aberdeen ... ... *facing page* 2305

Premier Gas Engine Co., Ltd., Sandiacre, nr. Nottingham .. *facing page* 1644

Pulsometer Engineering Co., Ltd., Nine Elms Ironworks, Reading, Berks. London Office: 11 Tothill Street, Westminster, S.W. 1; and at Birmingham, Cardiff, Glasgow, Leeds, Liverpool, and Manchester ... ... *facing pages* 1153

Radiation, Ltd., 164–172 Queen Victoria Street, London, E.C. 4; and Academy Street, Warrington ... ... *facing page* 2254

Railway and General Engineering Co., Ltd., Midland Works, Nottingham *facing page* 536

Railway Signal Co., Ltd., 40 Broadway, Westminster, S.W. 1; and Fazakerley, Liverpool ... ... *facing page* 639

Ransome Machinery Co. (1920), Ltd., 14/16 Grosvenor Gardens, Westminster, London, S.W. 1 ... ... *facing page* 449

Ransomes, Sims & Jefferies, Ltd., Orwell Works, Ipswich; and 46 Queen Victoria Street, London, E.C. 4 ... ... *facing pages* 696, 1541

Rapid Magnetting Machine Co., Ltd., Magnet Works, Lombard Street, Birmingham ... ... *facing page* 973

Reddaway, F., & Co., Ltd., Pendleton, Manchester; and 50–51 Lime Street, London, E.C. 3 ... ... *facing pages* 832, 833

Redpath, Brown & Co., Ltd., 2 St. Andrew Square, Edinburgh; 19 Waterloo Street, Glasgow; 22 Laurence Pountney Lane, Cannon Street, London, E.C. 4; Trafford Park, Manchester; and Newcastle-on-Tyne ... ... *facing pages* 312, 313

FOR CLASSIFIED DIRECTORY OF ADVERTISERS' SPECIALITIES, ALSO GLOSSARIES OF FRENCH, ITALIAN, SPANISH, & RUSSIAN TRADE TERMS, SEE PP. 2541 &c.

PAGE

Rees Roturbo Manufacturing Co., Ltd., Wolverhampton; and Hastings House, Norfolk Street, Strand, London, W.C. 2 ... ...*facing page* 1149

Renold (Hans), Ltd., Burnage Works, Didsbury, Manchester; Kingsway House, 101-107 Kingsway, London, W.C. 2; and 86 St. Vincent Street, Glasgow *facing pages* 864, 865

Rentell, S., & Co., Ltd., 36 Maiden Lane, Strand, London, W.C. 2 ... *facing page* 1883

Richardsons, Westgarth & Co., Ltd., Hartlepool Engine Works, Hartlepool; Middlesbro'; Sunderland; and 4 Lloyd's Avenue, London, E.C. 3 ... *facing page* 2012

Robertson, William, Ltd., Latchford, Warrington ... *white page at end of book* 2732

Robey & Co., Ltd., Globe Works, Lincoln; and 91 Queen Victoria Street, London, E.C. 4 ... ... *facing page* 1474

Ross, R. G., & Son (late Glen & Ross), Greenhead, Glasgow ... *facing page* 1022

Royal College of Science for Ireland, Upper Merrion Street, Dublin *white page at end of book* 2724

Royles, Ltd., Irlam, near Manchester; Suffolk House, Laurence Pountney Hill, London, E.C. 4; 65 Waterloo Street, Glasgow; 26 Grey Street, Newcastle-on-Tyne; and 7 Sweeting Street, Liverpool ... ...*facing pages* 1498, 1499

Ruberoid Company, Ltd., 28 Waterloo House, 81-83 Knightrider Street, London, E.C. 4; and Brimsdown, Middlesex ... ... *facing page* 323

Russell, John & Co., Ltd., Alma Tube Works and Cyclops Iron Works, Walsall; Belmont Brass Works, Birmingham; London: 145 Queen Victoria Street, E.C. 4; 234 Upper Thames Street, E.C. 4; 150 Charing Cross Road, W.C.2; 58 Commercial Street, E. 1; 43 Newington Butts, S.E. 11; London Road, Manchester; 15 Wellington Street, Leeds; and Colston Street, Bristol ... ... *facing page* 1414

Ruston & Hornsby, Ltd., Sheaf Ironworks, Lincoln; Spittlegate Ironworks, Grantham; and Stockport ... ...*facing pages* 1691, 1693

St. Bride's Press, Ltd., 24 Bride Lane, Fleet Street, London, E.C. 4 ... *facing page* 179

St. Helens Cable and Rubber Co., Ltd., Warrington; and 174 King's Cross Road, London, W.C. 1 ... ... *facing page* 1858

Sanderson Bros. & Newbould, Ltd., Newhall Road, Sheffield *grey page in front of book* xxvii

Sandycroft, Ltd., Sandycroft, nr. Chester. London Office: 4 Broad Street Place, E.C. 2 ... ... *facing page* 1909

Scientific Publishing Co., 53 New Bailey Street, Manchester... ... *facing page* 1458

Scottish Tube Co., Ltd., 34 Robertson Street, Glasgow; 54 Old Broad Street, London, E.C. 2; 14 Chapel Street, Victoria Bridge, Manchester; Leeds; and 19 Queen Street, Newcastle-on-Tyne. Sydney (N.S.W.); Wellington (N.Z.); Johannesburg, Cape Town, and Durban (S.A.) ... ...*facing pages* 1302, 1303

Shaw, John, & Sons (Wolverhampton), Ltd., Wolverhampton; 118-122 Holborn, London, E.C. 1; and 3A Burgh Quay, Dublin *white page at end of book* 2711

Shropshire Iron Co., Ltd., Hadley, near Wellington, Salop; 10 Bush Lane, Cannon Street, London, E.C. 4; and 30 Exchange Street East, Liverpool *grey page in front of book* v

Side Groove Steel Piling Supply Co., Ltd., 17 Victoria Street, Westminster, London, S.W. 1, and 16 Water Lane, Gt. Tower Street, London, E.C. 3 *facing page* 479

Siebe, Gorman & Co., Ltd., 187 Westminster Bridge Road, and Neptune Works, Lambeth, London, S.E. 1 ... ... *facing page* 1363

FOR CLASSIFIED DIRECTORY OF ADVERTISERS' SPECIALITIES, ALSO GLOSSARIES OF FRENCH, ITALIAN, SPANISH, & RUSSIAN TRADE TERMS, SEE PP. 2541 &c.

PAGE

Siemens Bros. & Co., Ltd., Palace Place Mansions, Kensington Court, London, W. 8, and Woolwich, London, S.E. 18 ... ... *grey page in front of book* xx

Simplex Conduits, Ltd., Garrison Lane, Birmingham; 113-117 Charing Cross Road, London, W.C. 2; Manchester, Glasgow, Newcastle, Liverpool, and Bristol *grey page in front of book* xxii

Skefko Ball Bearing Co., Ltd., Skefko Works, Luton; 59 Kingsway, London, W.C. 2; and 45 Bothwell Street, Glasgow ... ... *facing page* 897

Skelton, H. J., & Co., Ltd., Royal London House, Finsbury Square, London, E.C. 2 *facing page* 270

Skelton, R. A. & Co., Moorgate Station Chambers, Moorfields, London, E.C. 2 *facing page* 301

Smethwick Stamping Company, Ltd., Bridge Street, Smethwick, Birmingham; and 120 Victoria Street, Westminster, S.W. 1 ... ...*white page at end of book* 2702

Smith, Frederick, & Co. (incorporated in **London Electric Wire Co. and Smiths, Ltd.**), Anaconda Works, Salford, Manchester; and Playhouse Yard, Golden Lane, London, E.C. 1 ... ... *facing page* 1859

Smith, Major, & Stevens, Ltd., Abbey Works, Northampton; and 17 Bolan Street, Battersea Bridge Road, London, S.W. 11 ... ... *facing pages* 806, 807

Southgate Pile Driver Co., 16 Water Lane, Gt. Tower Street, London, E.C. 3 *facing page* 479

Spencer-Bonecourt, Ltd., Parliament Mansions, Victoria Street, London, S.W. 1. Works: Hitchin, Herts ... ... *facing pages* 1496, 1846, 1847

Spottiswoode, Ballantyne & Co., Ltd., 1 New-street Square, London, E.C. 4; and The Hythe, Colchester ... ... *facing page* 233

Stanley, W. F., & Co., Ltd., Great Turnstile, Holborn, and 286 High Holborn, London, W.C. 1; 13 Railway Approach, London Bridge, S.E. 1; 8 Victoria Street, Westminster, S.W. 1; and 68 Queen Street, Glasgow ... ... *facing pages* 106, 107

Starrett, L. S., Co. (of Great Britain), Ltd., 36-37 Upper Thames Street, London, E.C. 4; and Athol, Mass., U.S.A. *facing 'Summary of Engineering Progress' in front of book* lxiii

Sterns, Ltd., Royal London House, Finsbury Square, London, E.C. 2 *facing pages* 910, 911

Steven, A. & P., 181 St. James' Road, Glasgow ... ... *facing page* 784

Steward, J. H., Ltd., 406 and 457 Strand, London, W.C. 2 ... ... *facing page* 149

Stewarts & Lloyds, Ltd., 41 Oswald Street, Glasgow; Broad Street Chambers, Birmingham; Winchester House, Old Broad Street, E.C. 2, and 157 Upper Thames Street, London, E.C. 4 ... ... *facing 'Contents'* lx, lxi

Stirling Boiler Co., Ltd., 54 Victoria Street, Westminster, S.W. 1; and 45 Hope Street, Glasgow ... ... *facing page* 1483

Sturtevant Engineering Co., Ltd., 147 Queen Victoria Street, London, E.C. 4; and at Glasgow and Paris ... ... *facing page* 2131

Sugden, T., Ltd., 180 Fleet Street, London, E.C. 4; Belfast, Bristol, Cardiff, Glasgow, Leeds, Manchester, Newcastle-on-Tyne and Sheffield ... ... *facing pages* 1518, 1519

Sullivan, H. W., Winchester House, London, E.C. 2 ... ... *facing page* 1941

Sulzer Bros., 31 Bedford Square, London, W.C. 1; and Manchester, Glasgow, and Swansea. Works: Winterthur, Switzerland ... ... *facing pages* 882, 1669

Summerson, Thomas, & Sons, Ltd., Albert Hill Foundry, Darlington; 32 Victoria Street, Westminster, London, S.W. 1 ... ... *facing pages* 534, 535

FOR CLASSIFIED DIRECTORY OF ADVERTISERS' SPECIALITIES, ALSO GLOSSARIES OF FRENCH, ITALIAN, SPANISH, & RUSSIAN TRADE TERMS, SEE PP. 2541 &c.

PAGE

Superheater Corporation, Ltd., 14 New Burlington Street, London, W. 1
facing page 600

Superheater Units, Ltd., 4 Castle Square, Swansea; and at London, Glasgow, Manchester, etc. ... ... *facing page* 1514

'Surveyor' The, 24 Bride Lane, Fleet Street, London, E.C. 4 179

Sutcliffe Bros. & Bryce, Ltd., Park Works, Godley, near Manchester; and Seal Wharf, Stratford, London, E. 15 ... ... *facing page* 1439

Swain, John, & Son, Ltd., Columbia House, 89-90 Shoe Lane, London, E.C. 4
facing page 131

Swan, Hunter & Wigham Richardson, Ltd., Wallsend and Walker-on-Tyne; 21 Russell Square, London, W.C. 1; and 31 James Street, Liverpool
grey page in front of book xxxviii

Talbot-Stead Tube Co., Ltd., Birchills, Walsall, Staffs. London Office: 346 Strand, W.C. 2 ... ... *facing page* 1415

Taylor & Hubbard, Kent Street Works, Leicester ... ... *facing page* 783

Thompson, John (Wolverhampton), Ltd., Wolverhampton; Windsor House, Kingsway, London, W.C. 2; Dudley; and 17 Sterndale Road, Sheffield
facing pages 1475, 1490, 1520

Thompson (John) Water Tube Boilers, Ltd., Wolverhampton; and Windsor House, Kingsway, London, W.C. 2 ... ... *facing page* 1490

Thorn & Hoddle Acetylene Co., Ltd., 151 Victoria Street, Westminster, London, S.W. 1. Works: Harris Street, Camberwell, London, S.E. 5 ... *facing page* 2293

Thornycroft, John I., & Co., Ltd., 10 Grosvenor Place, London, S.W. 1; Southampton and Basingstoke ... ... *facing page* 1821

Tomey, Joseph, & Sons, Ltd., Catherine Street, Aston, Birmingham; and 5 Exchange Parade, Southwark Street, London, S.E. 1 ... ... *facing page* 1497

Tubes, Ltd., Birmingham; LONDON AGENT: **H. S. Davenport,** 37 St. Mary Axe, London, E.C. 3 ... ... *white page at end of book* 2701

Tullis, D. & J., Ltd., Kilbowie Ironworks, Clydebank; and Sardinia House, Sardinia Street, Kingsway, London, W.C. 2 ... ... *facing page* 957

Tullis, John, & Son, Ltd., St. Ann's Leather Works, Glasgow; and 5 Lloyd's Avenue, London, E.C. 3 ... ... *facing pages* 838, 839

Underfeed Stoker Co., Ltd., Coventry House, South Place, London, E.C. 2
facing page 1784

Union Cable Co., Ltd., Dagenham Dock, Essex ... ... *facing page* 1861

United Brassfounders and Engineers, Ltd., Empress Foundry, Cornbrook, Manchester; Dyehouse Works, Woodchester, near Stroud, Glos; Holloway Head, Birmingham; and 45 Kingsway, London, W.C. 2
grey page in front of book xviii, *and facing pages* 1138, 1500, 1501, 1504, 1505, 2164, 2235

United Flexible Metallic Tubing Co., Ltd., 112 Queen Victoria Street, London, E.C. 4; and Ponders End, Middlesex ... ... *facing pages* 533, 2153

United Kingdom Self-Adjusting Anti-friction Metallic Packing Syndicate, Ltd., 14 Cook Street, Liverpool ... ... *facing page* 1599

FOR CLASSIFIED DIRECTORY OF ADVERTISERS' SPECIALITIES, ALSO GLOSSARIES OF FRENCH, ITALIAN, SPANISH, & RUSSIAN TRADE TERMS, SEE PP. 2541 &c.

PAGE

United States Metallic Packing Co., Ltd., Soho Works, Allerton Road, Bradford, England ; 116 Fenchurch St., London, E.C. 3, and branches *facing pages* 1521, 1598

United Water Softeners, Ltd., Imperial House, Kingsway, London, W.C. 2 *facing page* 1444

Vickers, Ltd., Vickers House, Broadway, Westminster, London, S.W. 1 *facing page* 2330

Vickers-Petters, Ltd., 75B Queen Victoria Street, London, E.C. 4 ; 140 Victoria Street, Bristol ; 30 Lower Sackville Street, Dublin ; and 163 Hope Street, Glasgow. Works : Ipswich .. .. *facing page* 1683

Walker, James, & Co., Ltd., Lion Works, Garford Street, West India Dock Road, London, E. 14 ; Liverpool, Glasgow, Newcastle, and Cardiff (*pink pages at commencement and end of Index to book*) ... ... *facing pages* 2450, 2451, 2520, 2521

Walker, William, & Sons, Ltd., Bolton, England ... ... *facing page* 835

Ward, Thos. W., Ltd., Albion Works, Savile Street, Sheffield; and 18 Billiter Street, London, E.C. 3... ... ...*grey page in front of book* xii

Warner, Robert, & Co. (Engineers), Ltd., 14-16 Cockspur Street, London, S.W. 1. Works : Walton-on-the-Naze, Essex ... ...*facing pages* 1148, 1454

Waygood-Otis, Ltd., 54/55 Fetter Lane, London, E.C. 4 ; 62/63 Lionel Street, Birmingham. Works : Falmouth Road, London, S.E. 1 ... ... *facing page* 785

Weir, G. & J., Ltd., Cathcart, Glasgow ; 77 Billiter Buildings, Billiter Street, London, E.C. 3 ; and Bank Chambers, 26 Mosley Street, Newcastle-on-Tyne *facing pages* 601, 1146, 1147, 1822, 1823, 1994, 1995

Weldless Steel Tube Co., Ltd., Icknield Port Road, Birmingham ; Wednesfield, nr. Wolverhampton ; and 39 Lime Street, London, E.C. 3 ... ... *facing page* 1485

Wells, A. C., & Co., 102, 103 & 104 Midland Road, St. Pancras, London, N.W. 1 ; and Carnarvon Street, Cheetham, Manchester ... ... *facing page* 2100

Western Electric Co., Ltd., Norfolk House, Victoria Embankment, London, W.C. 4 ; North Woolwich, London, E. 16 ; and at Birmingham, Cardiff, Glasgow, Leeds, Manchester, Sydney, Johannesburg, and Buenos Ayres ... *facing page* 1860

Westinghouse Brake and Saxby Signal Co., Ltd., 82 YorkRoad, King's Cross, London, N. 1 ; and Chippenham, Wilts *grey page in front of book* x, *and facing page* 638

Westinghouse Morse Chain Co., Ltd., The Chaineries, Letchworth, Herts *grey page in front of book* xvi

Westminster Tool and Electric Co., Westool Works, Putney, London, S.W. 15 *facing page* 997

Weston Electrical Instrument Co., Ltd., Audrey House, Ely Place, Holborn, London, E.C. 1 ; and Newark, N.J., U.S.A. ... ... *facing pages* 1934, 1935

White, J. Samuel, & Co., Ltd., East Cowes, Isle of Wight ; 28 Victoria Street, Westminster, S.W. 1 ; and 310 Royal Liver Building, Liverpool ... *facing page* 2013

White, R., & Sons, Widnes, Lancs ... ... *facing page* 537

White's Injectors, Ltd., Church Street, Pendleton, Manchester ... *facing page* 1508

Whitecross Company, Ltd., Warrington ; and 110 Fenchurch Street, London, E.C. 3 ... ... *facing page* 803

Willcox, W. H., & Co., Ltd., 32-38 Southwark Street, London, S.E. 1 *first grey page inside front cover* i

FOR CLASSIFIED DIRECTORY OF ADVERTISERS' SPECIALITIES, ALSO GLOSSARIES OF FRENCH, ITALIAN, SPANISH, & RUSSIAN TRADE TERMS, SEE PP. 2541 &C.

PAGE

Winn, Charles, & Co., Ltd., St. Thomas Works, Granville Street, Birmingham; and at Glasgow, Newcastle-on-Tyne, and Cardiff ... ... *facing pages* 1426, 1427

Woodite Co., Mitcham Common, Surrey ... ... *facing pages* 1502, 1503

Worthington-Simpson, Ltd., Queen's House, Kingsway, London, W.C. 2. Works: Newark-on-Trent; and 101 Grosvenor Road, Westminster, London, S.W. 1 *facing pages* 1144, 1145

Wright, John & Edwin, Ltd., Universe Works, Birmingham; Salisbury House, London Wall, London, E.C 2; Tower Buildings, Liverpool; Bank Chambers, Fargate, Sheffield; Park Place, Cardiff; Sydney; Calcutta; Montreal; and Paris *facing page* 854

Wright, Joseph, & Co., Ltd., Tipton, Staffs ... ... *facing page* 794

'W.R.' Patents, Ltd., 139 Queen Victoria Street, London, E.C. 2. Works: Greek Street, Leeds ... ... *grey page in front of book* xv

Yarrow & Co., Ltd., Scotstoun, Glasgow (formerly of Poplar, London) *facing page* 2021

Youngs, Ryland Street Works, Birmingham; and 9 Queen Street Place, London, E.C. 4 *facing pages* 216, 217

FOR CLASSIFIED DIRECTORY OF ADVERTISERS' SPECIALITIES, ALSO GLOSSARIES OF FRENCH, ITALIAN, SPANISH, & RUSSIAN TRADE TERMS, SEE PP. 2541 &C.

THE ENGINEER'S YEAR-BOOK CLASSIFIED DIRECTORY OF LEADING ENGINEERING AND ALLIED FIRMS ADVERTISING IN THE 1922 EDITION.

A RELIABLE GUIDE FOR THE USE OF BUYERS OF ENGINEERING MATERIALS, MACHINERY, TOOLS, PLANT, APPLIANCES, ETC.

For Advertisers' Addresses, and Positions of their Announcements in the 'Year-Book,' consult foregoing Alphabetical List, pages 2521 to 2538.

The aim of the Proprietors of 'The Engineer's Year-Book' is to include in this publication only the most reputable firms' announcements, so that readers desiring to order, or specify, the various specialities advertised, may do so with confidence.

***** French, Italian, Spanish, and Russian translations of the terms used in this Directory are given on pages 2613 to 2698.**

RÉPERTOIRE ANALYTIQUE DES ANNONCEURS POUR 1922.

Guide pratique des acheteurs de matériaux pour constructions mécaniques, de machines, d'outils, outillages, appareils, etc.

Les propriétaires de 'The Engineer's Year-Book' (L'Annuaire de l'Ingénieur) se sont efforcés de ne faire figurer dans la présente publication que les annonces des maisons les mieux réputées ; les lecteurs désireux de commander ou de spécifier les différentes spécialités annoncées peuvent donc le faire en toute confiance.

On trouvera pages 2613-2632 la liste des équivalents de ces termes en Français.

Pour les adresses des Annonceurs et les renvois à leurs annonces dans l'Annuaire, voir l'Index alphabétique ci-dessus, pages 2521-2538.

GUIDA CLASSIFICATA DELLE DITTE DI MAGGIOR IMPORTANZA CHE HANNO DEGLI ANNUNCI NELL' EDIZIONE DEL 1922.

Ai compratori di materiale per la meccanica, e di macchinario in genere, questa Guida è assai utile.

I proprietari della 'Engineer's Year-Book' (l' Annuario dell' Ingegnere) si sono limitati a pubblicare in questa guida solo i nomi delle case più rinomate ; i lettori che desiderano ordinare o specificare specialità comprese in questi annunci lo possono quindi fare con tutta sicurezza.

A pagina 2633-2652 trovasi la traduzione in italiano dei termini usati in questo elenco.

Per gli indirizzi delle ditte aventi degli annunci ed il posto dove detti annunci appaiono nella guida vedesi l' elenco alfabetico a pagine 2521-2538.

GUÍA CLASIFICADA DE ANUNCIADORES PARA 1922

Esta Guía es muy conveniente para los compradores de materiales de ingeniería, maquinaria, herramientas, instalaciones, utensilios, etc.

La aspiración de los propietarios de 'The Engineer's Year-Book' ('El Anuario del Ingeniero') es incluir en esta publicación solamente los anuncios de las casas de la mejor reputación ; así es que los lectores que deseen pedir ó especificar cualquiera de los diversos artículos anunciados pueden hacerlo así con confianza.

Una traducción de los términos equivalentes en Castellano se hallará en la lista, páginas 2653-2673.

Para señas de anunciadores y referencias á sus anuncios, consúltese la precedente Lista alfabética, paginas 2521-2538.

ПОДРОБНЫЙ УКАЗАТЕЛЬ СПЕЦІАЛЬНОСТЕЙ АНОНСОДАТЕЛЕЙ 1922 г.

Удобное Руководство для Покупателей Инженерныхъ матеріаловъ, инструментовъ, машинъ, приспособленій, принадлежностей и пр. и пр.

Редакція 'The Engineer's Year-Book' (Инженерный Ежегодникъ) въ настоящемъ изданіи включила объявленія лишь первоклассныхъ фирмъ, такъ что читатель можетъ съ полной увѣренностью снестись съ любой изъ этихъ фирмъ или помѣстить свои заказы на любыя изъ указанныхъ спеціальностей.

Переводъ терминовъ данъ также на Французскомъ и Италіянскомъ и Испанскомъ и Русскомъ языкахъ— см. стр. 2675-2698.

Адреса фирмъ и свѣдѣнія объ ихъ спеціальностяхъ въ 'The Engineer's Year Book' (Инженерный Ежегодникъ)—см. предыдущій алфавитный списокъ— стр. 2521–2538.

CLASSIFIED DIRECTORY OF ADVERTISERS' MANUFACTURES AND SPECIALITIES.

A RELIABLE GUIDE FOR BUYERS OF ENGINEERING MATERIALS, MACHINERY, TOOLS, PLANT, APPLIANCES, ETC.

*** French, Italian, Spanish, and Russian translations of the Terms used in this Directory are given on pages 2613 to 2698.

Abrasive Wheels.

Mitchell's Emery Wheel Co.

Accumulator Acid.

Berk, F. W., & Co., Ltd.
Hart Accumulator Co., Ltd.

Accumulators.

See Batteries.

Accumulators (Hydraulic).

Berry, Henry, & Co., Ltd.
Hollings & Guest, Ltd.
Leeds Engineering & Hydraulic Co., Ltd.

Acetylene.

Allen-Liversidge, Ltd.
Bingham, Charles, & Co., Ltd.
District Chemical Co., Ltd.
Hoggett, Young & Co.

Acetylene Buoys and Beacons.

Chance Brothers & Co., Ltd.

Acetylene Generating Plants.

Acetylene Corporation of Gt. Britain, Ltd.
Carbic, Ltd.

Acetylene Generating Plants—*continued.*

Ferrox Company, Ltd.
Harley, Conyngham, & Watt, Ltd.
Hydrogen, Oxygen & Plant Co., Ltd.
Oxhycarbon Co.
Thorn & Hoddle Acetylene Co., Ltd.

Activated Sludge Plants.

Activated Sludge, Ltd.

Admiralty Gunmetal Ingots.

Broughton Copper Co., Ltd.
Bull's Metal & Melloid Co., Ltd.
Delta Metal Co., Ltd.
Eyre Smelting Co., Ltd.

Advisory Engineers.

Ashwell & Nesbit, Ltd.
Brownlie & Green, Ltd.
Harvey, L. C.

Aerial Grinders (Electric).

Humphreys, J. H., & Sons.

Aerial Ropeways.

Bruntons.
Bullivant & Co., Ltd.

For Advertisers' Addresses and positions of their announcements, consult foregoing Alphabetical List, pages 2521 to 2538.

Aerial Ropeways—*continued.*

Cradock, George, & Co., Ltd.
Dempster, Robert, & Sons, Ltd.
Newall, R. S., & Son, Ltd.
White, R., & Sons.

Aero Engines.

Beardmore, Wm., & Co., Ltd.
Napier, D., & Son, Ltd.

Aeronautical Engineers.

Beardmore, Wm., & Co., Ltd.
Napier, D., & Son, Ltd.

Aeroplane Accessories.

Bruntons.
Coan, Robert W.
Ferrox Company, Ltd.
India Rubber, Gutta Percha, and Telegraph Works Co., Ltd.
North British Rubber Co., Ltd. (Tyres).

Aeroplane Builders.

Beardmore, Wm., & Co., Ltd.
Vickers, Ltd.
White, J. Samuel, & Co., Ltd.

Aeroplane Steel Wire Strands and Cables.

Bruntons.
Cradock, George, & Co., Ltd.

Agricultural Tools and Machinery.

Hardy Patent Pick Co., Ltd.
Markt & Co. (London), Ltd.
Ransomes, Sims & Jefferies, Ltd.
Sanderson, Bros. & Newbould, Ltd.

Air Compressors.

Aerograph Co., Ltd.
Alley & MacLellan, Ltd.
Bailey, Sir W. H., & Co., Ltd.
Belliss & Morcom, Ltd.
Brotherhood, Peter, Ltd.
Consolidated Pneumatic Tool Co., Ltd
Daglish, Robt., & Co., Ltd.
Davey, Paxman & Co., Ltd.
Fleming & Co. (Glasgow).
Fullerton, Hodgart, & Barclay, Ltd.
Hardy Patent Pick Co., Ltd.
Heenan & Froude, Ltd.
Ingersoll-Rand Co., Ltd.
Lamson Pneumatic Tube Co., Ltd.
Robey & Co., Ltd.
Siebe, Gorman & Co., Ltd.
United States Metallic Packing Co., Ltd.
Westinghouse Brake and Saxby Signal Co., Ltd.
Westminster Tool and Electric Co.
Worthington-Simpson, Ltd.

Air-Cooling and Humidifying Apparatus.

Heenan & Froude, Ltd.
Hudson Economiser Co.
Ingersoll-Rand Co., Ltd.
Mather & Platt, Ltd.
Potter, F. W., & Co.
Sturtevant Engineering Co., Ltd.

Air Filters.

Heenan & Froude, Ltd.
Premier Cooler and Engineering Co. Ltd.

Air Heaters.

Ashwell & Nesbit, Ltd.
Royles, Ltd.

See also HEATING & VENTILATING.

Air Hoists.

Consolidated Pneumatic Tool Co., Ltd.
United States Metallic Packing Co., Ltd.

Air Meters.

Kent, George, Ltd.

Air-Pump Discharge (Measurement of).

Lea Recorder Co., Ltd.

Air Pumps.

Bailey, Sir W. H., & Co., Ltd.
Caird & Rayner.
Clarke, Chapman & Co., Ltd.
Hick, Hargreaves & Co., Ltd.
Mirrlees Watson Co., Ltd. (Mirrlees Leblanc Rotary Air Pumps and Steam Ejector Air Pumps).
Rees Roturbo Manufacturing Co., Ltd. (Rotary).
Siebe, Gorman & Co., Ltd.
Warner, Robert, & Co. (Eng.), Ltd.
Weir, G. & J., Ltd.
Westinghouse Brake and Saxby Signal Co., Ltd.

Air Receivers.

Ingersoll-Rand Co., Ltd.

Aircraft Manufacturers.

See AEROPLANE BUILDERS.

Aircraft Steels.

Firth, Thos., & Sons, Ltd.

Air Hardening Gear Steel.

Firth, Thos., & Sons, Ltd.

Alloy Steel Manufacturers.

Andrews, Thomas, & Co., Ltd.
Beardmore, Wm., & Co., Ltd.
Firth, Thos., & Sons, Ltd.
Skelton, H. J., & Co., Ltd.
Vickers, Ltd.

Alloys.

Bingham, Charles & Co., Ltd.
British Aluminium Co., Ltd.
Broughton Copper Co., Ltd.
Bull's Metal & Melloid Co., Ltd.
Delta Metal Co., Ltd.
Eyre Smelting Co., Ltd.
Phosphor Bronze Co., Ltd.
United Brassfounders and Engineers, Ltd. ('Stella').
Vickers, Ltd. ('Duralumin,' Regd. Trade Mark, Vickers' Special Alloy).

Alternators.

Bruce Peebles & Co., Ltd.
Crompton & Co., Ltd.
English Electric Co., Ltd.
General Electric Co., Ltd.
Johnson & Phillips, Ltd.
Mather & Platt, Ltd.
Peebles (Bruce) & Co., Ltd.

Aluminium (Ingots, Sheets, Tube, Wire, Cable, Sections, etc.).

British Aluminium Co., Ltd.
London Electric Wire Co. & Smiths, Ltd.
Ward, Thos. W., Ltd.

Aluminium Castings and Fittings for All Trades.

Birmingham Aluminium Casting (1903) Co., Ltd.
Coan, Robert W.

Aluminium Powder.
Ferrox Company, Ltd.

Aluminium Studs, Bolts and Nuts.
Horton & Son, Ltd.

Ammeters.
See INSTRUMENTS (ELECTRICAL).

Ammonia Concentration Plants.
Power-Gas Corporation, Ltd.

Ammunition.
Fleming & Co. (Glasgow).
Nobel Industries, Ltd.

Analysis of Gases.
'Auto' Recorder Co.
Brownlie & Green, Ltd.
'W. R.' Patents, Ltd.

Anchors.
Wright, Joseph, & Co., Ltd.

Animal Residuals (Complete Plants for dealing with).
Cradley Boiler Co., Ltd.

Annealing and Tempering Furnaces and Pots.
Muir, Murray & Co.
Power-Gas Corporation, Ltd. ('*Mond Gas*').
Radiation, Ltd.

Anti-corrosive Paint.
Pinchin, Johnson & Co., Ltd.

Anti-friction Metals.
See ALLOYS.

Arc Lamps.
See ELECTRIC LIGHT FITTINGS.

Artesian Well Engineers.
Hardy Patent Pick Co., Ltd.
Mather & Platt, Ltd.
Warner, Robert, & Co. (Eng.), Ltd.

Asbestos Cement Corrugated Roofing Sheets.
British Fibrocement Works, Ltd.

Asbestos Cement Flat Sheets for Walls, Partitions, Ceilings, etc.
British Fibrocement Works, Ltd.

Asbestos Cement Roofing Tiles.
Bell's United Asbestos Co., Ltd. ('Poilite').
British Fibrocement Works, Ltd.

Asbestos Cement Sheet and Tile Making Machinery.
Alexander (Herbert) & Co., Ltd.

Asbestos Coverings & Mattresses.
Anderson, Thomas, Ltd.
Bell's United Asbestos Co., Ltd.
Kenyon, Wm., & Sons, Ltd.
Sutcliffe Bros. & Bryce, Ltd.

Asbestos Goods, Fittings, Packing, etc.
Anderson, Thomas, Ltd.
Angus, George, & Co., Ltd.
Attwater & Sons.
Beldam Packing & Rubber Co., Ltd.
Bell's United Asbestos Co., Ltd.
British Fibrocement Works, Ltd.
Kenyon, Wm., & Sons, Ltd.
Pearson, E. J. & J., Ltd.
Sutcliffe Bros. & Bryce, Ltd.
Walker, James, & Co., Ltd. ('Lion').
Willcox, W. H., & Co., Ltd.

Asbestos Packing ('Lion')

Walker, James, & Co., Ltd.

Asphalte.

Buxton Lime Firms Co., Ltd.
Callender, George M., & Co., Ltd.

Automatic Controllers (Electric).

Electric Control, Ltd.
Elliston, Evans & Jackson, Ltd.

Automatic Sprinklers.

Mather & Platt, Ltd.

Axles (Railway).

Beardmore, Wm., & Co., Ltd.
Firth, Thos., & Sons, Ltd.
Hadfields, Ltd.
Vickers, Ltd.

Balata Belting.

Cole, Henry A., & Co., Ltd. ('Colata' Brand)
Dawson, James, & Son, Ltd.
Dick, R. & J., Ltd. (Original Balata Brand)
Gandy Belt Manufacturing Co., Ltd.
India Rubber, Gutta Percha, and Telegraph Works Co., Ltd.
North British Rubber Co., Ltd.
Walker, William, & Sons, Ltd.

Balls and Ball Bearings.

Skefko Ball Bearing Co., Ltd.

Barge Builders and Owners.

Flower & Everett, Ltd.
Swan, Hunter, & Wigham Richardson, Ltd.

Barometers.

Casella, C. F., & Co., Ltd.
Harling, W. H.
Stanley, W. F., & Co., Ltd.
Steward, J. H., Ltd.

Batteries (Electrical Storage).

Berk, F. W., & Co., Ltd. (Acids for)
Chloride Electrical Storage Co., Ltd.
English Electric Co., Ltd.
Eyre Smelting Co., Ltd. (Non-encrusting Zincs for).
General Electric Co., Ltd.
Hart Accumulator Co., Ltd.
India Rubber, Gutta Percha, and Telegraph Works Co., Ltd.
Siemens Bros. & Co., Ltd.

Battery Switchboards.

Hart Accumulator Co., Ltd.

Beams ('Grey Process') Broad Flange.

R. A. Skelton & Co.

Bearing Metals, etc.

Broughton Copper Co., Ltd.
Bull's Metal and Melloid Co., Ltd.
Delta Metal Co., Ltd.
Eyre Smelting Co., Ltd.
Manganese Bronze and Brass Co., Ltd. (Parsons' White Brass).
Phosphor Bronze Co., Ltd.
United Brassfounders and Engineers, Ltd. ('Stella').
Youngs.

Bearings (Ball).

Skefko Ball Bearing Co., Ltd.

Bells (Electric).

Gent & Co., Ltd.

Belt and Rope Pulleys.

Gandy Belt Manufacturing Co., Ltd.
Hick, Hargreaves & Co., Ltd.

Belting, etc.—Leather, Cotton, Hair, India Rubber, etc.

Angus, George, & Co., Ltd.
Attwater & Sons.
Cole, Henry A., & Co., Ltd.
Dawson, James, & Son, Ltd.
Dick, R. & J., Ltd. (Original Balata)
Gandy Belt Manufacturing Co., Ltd.
Hendry, James, Ltd. (Leather).
Henley's, W. T., Telegraph Works Co., Ltd.
India Rubber, Gutta Percha, and Telegraph Works Co., Ltd.
Macintosh, Charles, & Co., Ltd.
North British Rubber Co., Ltd. (India Rubber).
Reddaway, F., & Co., Ltd.
Tullis, John, & Son, Ltd.
Walker, James, & Co., Ltd.
Walker, William, & Sons, Ltd.
Willcox, W. H., & Co., Ltd.
Woodite Co.

Belting Cream.

Sterns, Ltd.
Sutcliffe Bros. & Bryce, Ltd.

Bending Presses.

Berry, Henry, & Co., Ltd.
Fielding & Platt, Ltd.
Hollings & Guest, Ltd.
Leeds Engineering & Hydraulic Co., Ltd.

Benzol Plants.

Dempster, R. & J., Ltd.
Power-Gas Corporation, Ltd. (*'Mond Gas'*).

Billets (Steel).

Firth, Thos., & Son, Ltd.

Bitumen Damp-proof Sheeting.

Building Products, Ltd.
Callender, George M., & Co Ltd. ('Callendrite').

Blast Furnace Plant.

Galloways, Ltd.
Heenan & Froude, Ltd.
Sturtevant Engineering Co., Ltd.

Blast Furnace Tuyeres.

Palatine Engineering Co., Ltd.

Blasting Powder.

Fleming & Co. (Glasgow).
Nobel Industries, Ltd.

Bleaching, Dyeing, and Finishing Machinery.

Mather & Platt, Ltd.

Blood Drying Plant.

Cradley Boiler Co., Ltd.

Blowers.

See FANS.

Blowers (Steam Flue).

White's Injectors, Ltd.

Blowpipes (Acetylene Welding & Cutting).

Acetylene Corporation of Gt. Britain, Ltd.
Ferrox Company, Ltd.
Hoggett, Young & Co.
Oxhycarbon Co.
Thorn & Hoddle Acetylene Co., Ltd.

Boiler and Pipe Coverings.

Anderson, Thomas, Ltd.
Bell's United Asbestos Co., Ltd.
British Fibrocement Works, Ltd.
Kenyon, Wm., & Sons, Ltd.
Pearson, E. J. & J., Ltd.
Sutcliffe Bros. & Bryce, Ltd.

Boiler Blocks and Covers.

Pearson, E. J. & J., Ltd.

Boiler Cleaners (Mechanical and Electrical).

Crockatt, W., & Sons, Ltd.
Gilman, Frank.
Hulburd Engineering Co., Ltd.
Willcox, W. H., & Co., Ltd.

Boiler Composition (for inside use).

Boilerine, Ltd.
Sterns, Ltd.
Sutcliffe Bros. & Bryce, Ltd.

Boiler Feed Filters.

See FEED WATER.

Boiler Feed Pumps.

Bailey, Sir W. H., & Co., Ltd.
Boving & Co., Ltd.
Caird & Rayner.
Clarke, Chapman & Co., Ltd.
North Eastern Marine Engineering Co., Ltd.
Pulsometer Engineering Co., Ltd.
Rees Roturbo Manufacturing Co., Ltd. (Rotary).
Royles, Ltd.
Warner, Robert, & Co. (Eng.), Ltd.
Weir, G. & J., Ltd.
Westinghouse Brake and Saxby Signal Co., Ltd.
Worthington-Simpson, Ltd.

Boiler Feed Water, Oil Elimination from.

Bakers (Leeds), Ltd.
Hudson Economiser Co.
Kennicott Water Softener Co.
North Eastern Marine Engineering Co., Ltd.
United Water Softeners, Ltd.

Boiler Fittings.

See ENGINE AND BOILER FITTINGS.

Boiler Flue Gases (Analysis of).

'Auto' Recorder Co.

Boiler Furnaces.

Bennis, Ed., & Co., Ltd.
Deighton's Patent Flue and Tube Co., Ltd.
Dowson & Mason Gas Plant Co., Ltd.
Gallagher & Crompton.
Underfeed Stoker Co., Ltd.

'Boilerine.'

Boilerine, Ltd.

Boiler Maker's Furnaces.

Muir, Murray & Co.

Boiler Manufacturers.

Babcock & Wilcox, Ltd.
Beardmore, Wm., & Co., Ltd.
British Ljungstrom Marine Turbine Co., Ltd.
British Niclausse Boiler Co., Ltd.
Clarke, Chapman & Co., Ltd.
Cochran & Co. (Annan), Ltd.
Cooper & Greig, Ltd.
Cradley Boiler Co., Ltd. (Vertical).
Daglish, Robt., & Co., Ltd.
Davey, Paxman & Co., Ltd.
Deighton's Patent Flue and Tube Co., Ltd.
Doxford, William, & Sons, Ltd.
Galloways, Ltd.
Heenan & Froude, Ltd.
Howden, James, & Co., Ltd.
Hudson Economiser Co.
North Eastern Marine Engineering Co., Ltd.
Ransomes, Sims & Jefferies, Ltd.
Richardsons, Westgarth & Co., Ltd.
Robey & Co., Ltd.
Ruston & Hornsby, Ltd.
Spencer-Bonecourt, Ltd.
Stirling Boiler Co., Ltd.
Sulzer Bros.
Swan, Hunter, & Wigham Richardson, Ltd.

Boiler Manufacturers—*continued.*

Thompson, John (Wolverhampton), Ltd.
Thompson (John) Water Tube Boilers, Ltd.
Thornycroft, John I., & Co., Ltd.
Vickers, Ltd.
Ward, Thos. W., Ltd.
White, J. Samuel, & Co., Ltd.
Yarrow & Co., Ltd.

Boiler Mountings.

Alley & MacLellan, Ltd.
Cockburns, Ltd.
Crosby Valve & Engineering Co., Ltd.
Hopkinson, J., & Co., Ltd.
Royles, Ltd.
Thompson, John (Wolverhampton), Ltd.
United Brassfounders and Engineers, Ltd.
White's Injectors, Ltd.
Winn, Charles, & Co., Ltd.

See also Engine and Boiler Fittings.

Boiler Plates (Steel).

Beardmore, Wm., & Co., Ltd.
Skelton, H. J., & Co., Ltd.

Boiler Preservatives.

Angus, George, & Co., Ltd.
Boilerine, Ltd.
Kennicott Water Softener Co.
Sterns, Ltd.
Sutcliffe Bros. & Bryce, Ltd.
United Water Softeners, Ltd.

Boiler Repairs (Electric Arc Welding for).

Anglo-Swedish Electric Welding Co., Ltd. (Kjellberg Process).
Vickers, Ltd.

Boiler Seatings.

Pearson, E. J. & J., Ltd.

Boiler Setting.

Pearson, E. J. & J., Ltd.

Boiler Settings (Improved).

Pearson, E. J. & J., Ltd.

Boiler Tubes.

Booth, James, & Co. (1915), Ltd.
Metallic Seamless Tube Co., Ltd.
Russell, John, & Co., Ltd.
Scottish Tube Co., Ltd.
Stewarts & Lloyds, Ltd.
Talbot-Stead Tube Co., Ltd.
Tubes, Ltd.
Weldless Steel Tube Co., Ltd.

Bolt Forcers.

Youngs.

Bolts and Nuts (Iron, Steel, Copper, Naval Brass, etc.).

Automatic Standard Screw Co., Ltd.
Barwells, Ltd.
Bull's Metal and Melloid Co., Ltd.
Horton & Son, Ltd.
Manganese Bronze and Brass Co., Ltd. (Naval Brass).
Periam, Herbert W., Ltd.
Talbot-Stead Tube Co., Ltd.

Bomb-proof Netting.

Bruntons.

Books and Journals, Scientific.

Arnold, Edward, & Co.
Batsford, B. T., Ltd.
Benn Brothers, Ltd. ('Gas World').
Constable & Co., Ltd.
'Electrical Review' (The).
'Electricity.'
'Engineer' (The).
Gibson, John (Agent for McCorquodale & Co.'s publications).
Griffin, Charles, & Co., Ltd.

Books and Journals, Scientific— *continued.*

Griffin, John J., & Sons, Ltd.
Lockwood (Crosby) & Son.
Longmans, Green & Co.
Rentell, S., & Co., Ltd.
Scientific Publishing Co.
'Surveyor' (The)

Boring and Facing Machines.

Tullis, D. & J., Ltd.

Boring Machines for Rock and Coal.

Consolidated Pneumatic Tool Co., Ltd.
Fleming & Co. (Glasgow).
Hardy Patent Pick Co., Ltd.

Boring Tool Makers (Artesian).

Hardy Patent Pick Co., Ltd.

Brake and Clutch Linings.

Ferodo, Ltd.

Brake Blocks.

Angus, George, & Co., Ltd.
Ferodo, Ltd.
India Rubber, Gutta Percha, and Telegraph Works Co., Ltd.
Railway & General Engineering Co., Ltd.
Summerson, Thomas, & Sons, Ltd.

Brakes (Dynamometers).

Brotherhood, Peter, Ltd.
Heenan & Froude, Ltd.

Brakes (Electro-Mechanical).

Elliston, Evans & Jackson, Ltd.

Brakes (Railway).

Consolidated Brake and Engineering Co., Ltd.
Westinghouse Brake and Saxby Signal Co., Ltd.

Brass and Bronze.

Barwells, Ltd.
Booth, James, & Co. (1915), Ltd.
Broughton Copper Co., Ltd.
Bull's Metal and Melloid Co., Ltd.
Delta Metal Co., Ltd.
Eyre Smelting Co., Ltd.
Ferrox Company, Ltd.
Garnham, J. B., & Sons.
Lancaster & Tonge, Ltd.
McPhail & Simpson.
Manganese Bronze and Brass Co., Ltd. (Castings and Forgings).
Swan, Hunter, & Wigham Richardson, Ltd. (Castings).
United Brassfounders and Engineers, Ltd. (Extruded Bars of all Sections).

Brass and Copper Bolts and Nuts.

See BOLTS AND NUTS.

Brass Founders and Finishers.

Ackroyd & Best, Ltd.
Guest & Chrimes, Ltd.
North Eastern Marine Engineering Co., Ltd.
Railway & General Engineering Co., Ltd.
United Brassfounders and Engineers, Ltd.
White's Injectors, Ltd.

Brick and Tile Making Machinery.

Alexander (Herbert) & Co., Ltd.
Vickers, Ltd.

Bridges, Girders, etc.

Arrol, Sir William, & Co., Ltd.
Bennis, Ed., & Co., Ltd.
Butler, Samuel, & Co., Ltd.
Findlay, Alex., & Co., Ltd.
Hadfields, Ltd.
Heenan & Froude, Ltd.

Bridges, Girders, etc.—*continued.*
Henderson & Glass.
Holst, K., & Co.
Keay, E. C. & J., Ltd.
Redpath, Brown & Co., Ltd.
Thompson, John (Wolverhampton), Ltd.
Ward, Thos. W., Ltd.

Bridges (Wire Rope Suspension).
Bruntons.
Cradock, George, & Co., Ltd.

Bright Part Coatings.
Pegg & Ellam Jones, Ltd.
Pinchin, Johnson & Co., Ltd. ('Minerva').

Bright Steel Manufacturers.
Andrews, Thomas, & Co., Ltd.
Govan Shafting & Engineering Co., Ltd.
Halesowen Steel Co., Ltd.
Robertson, Wm., Ltd.

Briquette Machinery.
Briquette Machinery, Ltd.

Bronze.
See BRASS AND BRONZE.

Building Construction Plant.
Ransome Machinery Co. (1920), Ltd.

Buildings (Protection of, from Lightning).
Cutting, R. C., & Co.

Buildings (Waterproofing of).
Building Products, Ltd.
Callender, George M., & Co., Ltd.

Bullet Proof Steel Plates.
Firth, Thos., & Sons, Ltd.

Bull's Metal and Melloid.
Bull's Metal and Melloid Co., Ltd.

Buoys and Beacons.
Chance Brothers & Co., Ltd.

Bush Valves for Air Pumps.
Beldam Packing and Rubber Co., Ltd.
Dexine, Ltd.

By-product Recovery Plants.
Dempster, R. & J., Ltd.
Dowson & Mason Gas Plant Co., Ltd.
Harley, Conyngham & Watt, Ltd.
Piggott, Thomas, & Co., Ltd.
Power-Gas Corporation, Ltd. (*'Mond Gas'*).

Cable Laying Machinery.
Clarke, Chapman & Co., Ltd.
Johnson & Phillips, Ltd.
Siemens Bros. & Co., Ltd.
Taylor & Hubbard.

Cables for Shipping, Haulage, etc.
Allan, Whyte & Co., Ltd.
Bruntons.
Cradock, George, & Co., Ltd.

Cables: Telegraph, Telephone, Electric Light, and Submarine.
Ateliers de Constructions Electriques de Charleroi
British Aluminium Co., Ltd.
British Thomson-Houston Co., Ltd.
Craigpark Electric Cable Co., Ltd.
General Electric Co., Ltd.
Henley's, W. T., Telegraph Works Co., Ltd.
India Rubber, Gutta Percha, and Telegraph Works Co., Ltd.
Johnson & Phillips, Ltd.

Cables: Telegraph, Telephone, Electric Light, and Submarine— *continued.*

Liverpool Electric Cable Co., Ltd.
London Electric Wire Co. & Smiths, Ltd.
Macintosh Cable Co., Ltd.
Metallic Seamless Tube Co., Ltd.
St. Helens Cable and Rubber Co., Ltd.
Siemens Bros. & Co., Ltd.
Smith, Frederick, & Co.
Union Cable Co., Ltd.
Western Electric Co., Ltd.

Cableways.

Cradock, George, & Co., Ltd.

Cableways and Runways.

Bruntons.
Bullivant & Co., Ltd.
White, R., & Sons.

'Cab Tyre Sheathed' Cables.

Henley's, W. T., Telegraph Works Co., Ltd.
Johnson & Phillips, Ltd.
St. Helens Cable and Rubber Co., Ltd.

Caissons (Builders of).

Swan, Hunter, & Wigham Richardson, Ltd.

Calculators (Wages).

Gibson, John.

'Callendrite' Dampcourse and Sheeting.

Callender, George M., & Co., Ltd.

Calorifiers.

Royles, Ltd.

Calorimeters for Fuel Testing.

Griffin, John J., & Sons, Ltd.

'Camel' Hair, 'Camel' Brand Belting (sole makers of).

Reddaway, F., & Co., Ltd.

Cameras and Shutters.

Griffin, John J., & Sons, Ltd.

Carbide of Calcium.

Allen-Liversidge, Ltd.
Bingham, Charles, & Co., Ltd.
District Chemical Co., Ltd.
Hoggett, Young & Co.
Thorn & Hoddle Acetylene Co., Ltd.

Carriages and Wagons (Railway).

Cammell, Laird & Co., Ltd.

Cartridge Machinery.

Fielding & Platt, Ltd.

Case Hardening.

Andrews, Thomas, & Co., Ltd.
District Chemical Co., Ltd.

Case-Hardening Steels.

Firth, Thos., & Sons, Ltd.

Cast Iron Pipes for Water and Gas Purposes.

Clay Cross Co., Ltd.

Cast Iron Tanks.

Clay Cross Co., Ltd.

Cast Iron Tubbing and Curbs for Collieries.

Clay Cross Co., Ltd.

Castings and Forgings.

Ackroyd & Best, Ltd.
Armstrong, Sir W. G., Whitworth & Co., Ltd.
Atlas Steel Foundry & Engineering Co., Ltd. (Steel).

Castings and Forgings—
continued.

Beardmore, Wm., & Co., Ltd.
Birmingham Aluminium Casting (1903) Co., Ltd.
Bull's Metal and Melloid Co., Ltd.
Cammell, Laird & Co., Ltd.
Carels Diesel & Steam Engines (London), Ltd.
Clay Cross Co., Ltd.
Coan, Robert W.
Daglish, Robert, & Co., Ltd.
Delta Metal Co., Ltd. (Brass & Bronze).
Eyre Smelting Co., Ltd.
Firth, Thos., & Sons, Ltd.
Hadfields, Ltd.
Hardy Patent Pick Co., Ltd.
Harley, Conyngham & Watt, Ltd.
Heenan & Froude, Ltd.
Horton & Son, Ltd.
Jackman, Joseph, & Co., Ltd.
Kirkstall Forge, Ltd.
McPhail & Simpson.
Manganese Bronze and Brass Co., Ltd. (Brass and Bronze).
North Eastern Marine Engineering Co., Ltd.
Phosphor Bronze Co., Ltd.
Power Plant Co., Ltd.
Railway and General Engineering Co., Ltd.
Skelton, H. J., & Co., Ltd.
Smethwick Stamping Co., Ltd.
Stewarts & Lloyds, Ltd.
Summerson, Thomas, & Sons, Ltd. (Iron & Steel).
Swan, Hunter, & Wigham Richardson, Ltd.
United Brassfounders and Engineers, Ltd. (Brass, Gunmetal, Phosphor Bronze, etc.).
Vickers, Ltd.
Wright, Joseph, & Co., Ltd.

Cement.

Cement Marketing Co., Ltd. (Portland, Keenes', Parian).

Cement Machinery.

Alexander (Herbert) & Co., Ltd.
Howes, S., Co.
Sturtevant Engineering Co., Ltd.

Cement Slates and Boards.

Bell's United Asbestos Co., Ltd. ('Poilite').
British Fibrocement Works, Ltd.

Cement Testing Machines.

Adie, Patrick.
Bailey, Sir W. H., & Co., Ltd.

Cement, Waterproofing of.

Building Products, Ltd.

Centre Grinders (Electric).

Humphreys, J. H., & Sons.

Centrifugal Pumps.
See Pumps.

Chains and Chain Cables.

Wright, Joseph, & Co., Ltd.

Chains and Chain Driving.

Westinghouse Morse Chain Co., Ltd.

Chalk.

Cement Marketing Co., Ltd.

Charging & Discharging Machinery for Gasworks and Coke Ovens.

Arrol, Sir William, & Co., Ltd.
Jenkins, W. J., & Co., Ltd.

Chemical and Electro-Chemical Apparatus.

Griffin, John J., & Sons, Ltd.
Siemens Bros. & Co., Ltd.

For Advertisers' Addresses and positions of their announcements, consult foregoing Alphabetical List, pages 2521 to 2538.

Chemical Plant and Machinery.

British Aluminium Co., Ltd.
Chemical Engineering & Wilton's Patent Furnace Co., Ltd.
Daglish, Robt., & Co., Ltd.
Dowson & Mason Gas Plant Co., Ltd.
Harley, Conyngham & Watt, Ltd.
Power-Gas Corporation, Ltd. ('*Mond Gas*').
Thompson, John (Wolverhampton), Ltd.

Chemicals.

Berk, F. W., & Co., Ltd.
Bingham, Charles, & Co., Ltd.
Buxton Lime Firms Co., Ltd.
District Chemical Co., Ltd.

Chimney Stacks.

Babcock & Wilcox, Ltd.
Bennis, Ed., & Co., Ltd.
British Niclausse Boiler Co., Ltd.
Cutting, R. C., & Co. (Contractors for Erection and Repair of).
Dowson & Mason Gas Plant Co., Ltd. (Steel).
Thompson, John (Wolverhampton), Ltd.

Chrome-Vanadium Steels.

Firth, Thos., & Sons, Ltd.

Chucks (Magnetic).

Humphreys, J. H., & Sons.
Rapid Magnetting Machine Co., Ltd.

Clocks (Electric).

See ELECTRIC CLOCKS.

Clutch Linings.

Ferodo, Ltd.

Clutches.

British Hele-Shaw Patent Clutch Co., Ltd.
Ferodo, Ltd.

Coal, Coke, and Ash Handling Plants.

Jenkins, W. J., & Co., Ltd.

Coal Drills and Cutters.

Consolidated Pneumatic Tool Co., Ltd.
Fleming & Co. (Glasgow).
Hardy Patent Pick Co., Ltd.

Coal Economy Specialists.

Brownlie & Green, Ltd.
Harvey, L. C.

Coal Furnaces.

See FURNACES.

Coal Grinding, Elevating, and Conveying Machinery.

Briquette Machinery, Ltd.
Harley, Conyngham & Watt, Ltd.

Coal Washing Machinery.

Briquette Machinery, Ltd.

Coatings (Bright Part) and Machinery Finishes.

Pegg & Ellam Jones, Ltd.
Pinchin, Johnson & Co., Ltd. ('Minerva').

Cocks (Brass) for Water, Steam, and Gas.

Guest & Chrimes, Ltd.

CO_2 Recorders.

'Auto' Recorder Co.
Cambridge and Paul Instrument Co., Ltd. (Electrical).
Underfeed Stoker Co., Ltd.
'W. R.' Patents, Ltd.

Coke and its Industrial Applications.

Gallagher & Crompton.
London Coke Committee.

Coke-oven Plant.

Dempster, R. & J., Ltd.
Jenkins, W. J., & Co., Ltd.

Cold Storage.

Anderson, Thomas, Ltd.
British Oxygen Co., Ltd.
Heenan & Froude, Ltd.
Ruberoid Co., Ltd.

Collapsible Gates.

Potter, F. W., & Co.

Colleges (Engineering).

Armstrong College, Newcastle-on-Tyne.
Birmingham University.
Crystal Palace School of Practical Engineering, London.
Glasgow Royal Technical College.
Heriot-Watt College, Edinburgh.
Imperial College of Science and Technology, London.
King's College, London.
Leeds University.
Liverpool University.
Loughborough Technical College.
Nottingham University College.
Royal College of Science for Ireland, Dublin.

Collieries (Electrical Equipment of).

Ateliers de Constructions Electriques de Charleroi.
Peebles (Bruce) & Co., Ltd.

Collieries (Steel Wire Ropes for).

Allan, Whyte & Co., Ltd.
Bruntons.
Bullivant & Co., Ltd.
Cradock, George, & Co., Ltd.
Newall, R. S., & Son, Ltd.
Wright, John & Edwin, Ltd.

Colliery Plant.

Bennis, Ed., & Co., Ltd.
British Hele-Shaw Patent Clutch Co., Ltd.
Bullivant & Co., Ltd.
Butters, Bros. & Co.
Clarke, Chapman & Co., Ltd.
Clay Cross Co., Ltd.
Crompton & Co., Ltd.
Daglish, Robt., & Co., Ltd.
English Electric Co., Ltd.
Findlay, Alex., & Co., Ltd.
Fleming & Co. (Glasgow).
Hadfields, Ltd.
Hardy Patent Pick Co., Ltd.
Harley, Conyngham & Watt, Ltd.
Hart, Thomas, Ltd.
Heenan & Froude, Ltd.
Henley's, W. T., Telegraph Works Co., Ltd.
Kenyon, Wm., & Sons, Ltd.
Leeds Engineering and Hydraulic Co., Ltd.
Liverpool Electric Cable Co., Ltd.
Patent Lightning Crusher Co., Ltd.
Railway and General Engineering Co., Ltd.
Ransomes, Sims & Jefferies, Ltd.
Robey & Co., Ltd.
Spencer-Bonecourt, Ltd.
Stewarts & Lloyds, Ltd.
Ward, Thos. W., Ltd.

Colours, Paints, and Varnishes.

Pegg & Ellam Jones, Ltd.
Pinchin, Johnson & Co., Ltd. ('Minerva,' etc.).

Columns and Castings for Sewage, Gas, and Water Works.

Clay Cross Co., Ltd.

For Advertisers' Addresses and positions of their announcements, consult foregoing Alphabetical List, pages 2521 to 2538.

Compressed Paper Pinions.

Angus, George, & Co., Ltd.
Pochin, E. Arnold, & Bro.

Concrete Mixers.

Ransome Machinery Co. (1920), Ltd.

Concrete Placing Plants.

Ransome Machinery Co. (1920), Ltd.

Concrete (Reinforced) Construction.

Arrol, Sir William, & Co., Ltd.
Expanded Metal Co., Ltd.
Fram (London), Ltd.
Holst, K., & Co.

Concrete (Reinforcement for).

Expanded Metal Co., Ltd.

Condenser Tubes (Copper).

See COPPER TUBES.

Condensers, Evaporators, Water Softening and Distilling Apparatus, etc.

Babcock & Wilcox, Ltd.
Bailey, Sir W. H., & Co., Ltd.
Belliss & Morcom, Ltd.
Caird & Rayner.
Clarke, Chapman & Co., Ltd.
Crockatt, W., & Sons, Ltd.
Davey, Paxman & Co., Ltd.
Harley, Conyngham & Watt, Ltd.
Heenan & Froude, Ltd.
Hick, Hargreaves & Co., Ltd.
Hudson Economiser Co.
Hunton, C. A., & Sons.

Condensers, Evaporators, Water Softening and Distilling Apparatus, etc.—*continued.*

Mirrlees Watson Co., Ltd.
North Eastern Marine Engineering Co., Ltd.
Rees Roturbo Manufacturing Co., Ltd. (Rotary Jet).
Richardsons, Westgarth & Co., Ltd.
Royles, Ltd.
Thompson, John (Wolverhampton), Ltd.
Weir, G. & J., Ltd.
Worthington-Simpson, Ltd.

Conduits.

See 'STEEL CONDUITS' and 'WIRING SYSTEMS.'

Contractors' Tools and Plant.

Building Products, Ltd.
Consolidated Pneumatic Tool Co., Ltd.
Hardy Patent Pick Co., Ltd.
Ransomes Machinery Co. (1920), Ltd.
White, R., & Sons.

'Contraflo' Kinetic Condensers.

Vickers, Ltd.

Controllers and Liquid Starters.

Electric Control, Ltd.
Elliston, Evans & Jackson, Ltd.
Sandycroft, Ltd.

Converters (Motor).

Ateliers de Constructions Electriques de Charleroi.
Peebles (Bruce) & Co., Ltd. (Peebles-la Cour).

Conveyors.

Angus, George, & Co., Ltd.
Ashwell & Nesbit, Ltd. (Pneumatic Plants).
Babcock & Wilcox, Ltd.
Bennis, Ed., & Co., Ltd.
British Niclausse Boiler Co., Ltd.
Bullivant & Co., Ltd.
Butler, Samuel, & Co., Ltd.
Butters, Bros. & Co.
Dempster, Robert, & Sons, Ltd.
Gibbons Bros., Ltd.
Hadfields, Ltd.
Hardy Patent Pick Co., Ltd.
Harley, Conyngham & Watt, Ltd
Hart, Thomas, Ltd.
Heenan & Froude, Ltd.
Holt & Willetts.
Jenkins, W. J., & Co., Ltd.
Lamson Pneumatic Tube Co., Ltd.
Mather & Platt, Ltd.
Reddaway, F., & Co., Ltd.
Sandycroft, Ltd.
Sturtevant Engineering Co., Ltd.
Tullis, John, & Son, Ltd.
White, R., & Sons.

See also Belting.

Cooling Towers.

Heenan & Froude, Ltd.
Hudson Economiser Co.
Hunton, C. A., & Sons.
Premier Cooler and Engineering Co., Ltd.
Richardsons, Westgarth & Co., Ltd.

Copper.

Booth, James, & Co. (1915), Ltd.
Broughton Copper Co., Ltd.
Garnham, J. B., & Sons.

Copper, Brass, & Gunmetal Tubes.

Booth, James, & Co. (1915), Ltd.
Broughton Copper Co., Ltd.

Copper Forgings.

Delta Metal Co., Ltd.

Copper Jointing Rings.

Hulburd Engineering Co., Ltd.

Copper Rods and Sections.

Delta Metal Co., Ltd.

Copper Smelters and Wire Manufacturers.

Broughton Copper Co., Ltd.
Delta Metal Co., Ltd.
London Electric Wire Co. & Smiths, Ltd.
Shropshire Iron Co., Ltd.
Smith, Frederick, & Co.

Coppersmiths.

Hulburd Engineering Co., Ltd.
North Eastern Marine Engineering Co., Ltd.
Swan, Hunter, & Wigham Richardson, Ltd.

Coppersmiths' Work.

United Brassfounders and Engineers, Ltd.

Core Drills.

Fleming & Co. (Glasgow).

Corrugated Tiles and Sheets (Asbestos Cement).

British Fibrocement Works, Ltd.

Costs and Time Recorders.
Modern Office Equipment Co., Ltd.

Cotton Belting.
Angus, George, & Co., Ltd.
Attwater & Sons.
Cole, Henry A., & Co., Ltd.
Dawson, James, & Son, Ltd.
Gandy Belt Manufacturing Co., Ltd.
Reddaway, F., & Co., Ltd.
Tullis, John, & Son, Ltd.
Willcox, W. H., & Co., Ltd.

Cotton Driving Ropes.
Hart, Thomas, Ltd. ('Lambeth').
Kenyon, Wm., & Sons, Ltd. (Patent Inter-Stranded).

Counting Instruments.
Markt & Co. (London), Ltd.

Couplings (Flexible).
See FLEXIBLE COUPLINGS.

Coverings for Boilers, etc.
Boving & Co., Ltd.
Kenyon, Wm., & Sons, Ltd.
Pearson, E. J. & J., Ltd.
Sutcliffe Bros. & Bryce, Ltd. ('Crown').

Crab Winches.
Holt & Willetts
Youngs.

Crane Chains and Hooks.
Wright, Joseph, & Co., Ltd.

Cranes.
See LIFTING AND HOISTING MACHINERY.

Crucible Cast Steels.
Firth, Thos., & Sons, Ltd.

Crucible Furnaces.
Radiation, Ltd.

Crucibles.
Graphite Products, Ltd. (Dixon's).
Pearson, E. J. & J., Ltd.

Crude Oil Engines.
See OIL ENGINES.

Crushing and Pulverising Machinery.
Alexander (Herbert) & Co., Ltd.
Hadfields, Ltd.
Hardy Patent Pick Co., Ltd.
Howes, S., Co.
Patent Lightning Crusher Co., Ltd.
Robey & Co., Ltd.
Sandycroft, Ltd.
Sturtevant Engineering Co., Ltd.

Cylinders.
Allen-Liversidge, Ltd.
Birmingham Aluminium Casting (1903) Co., Ltd.
Broughton Copper Co., Ltd.
Stewarts & Lloyds, Ltd.
Tubes, Ltd.
Weldless Steel Tube Co., Ltd.

Damp Course & Bitumen Sheeting.
Building Products, Ltd.
Callender, George M., & Co., Ltd. ('Callendrite').

'Decolite' Fireproof Flooring.
Bell's United Asbestos Co., Ltd.

Delta Metals.
Delta Metal Co., Ltd.

Demagnetisers.
Humphreys, J. H., & Sons.

Destructors (Magnetic Separators for).
Rapid Magnetting Machine Co., Ltd.

Destructors (Refuse).
Heenan & Froude, Ltd.

'Dexine.'
Dexine, Ltd.

Die Steel.
Firth, Thos., & Sons, Ltd.

Diesel and Semi-Diesel Engines.
Beardmore, Wm., & Co., Ltd.
Belliss & Morcom, Ltd.
Campbell Gas Engine Co., Ltd.
Carels Diesel & Steam Engines (London), Ltd.
Davey, Paxman & Co., Ltd.
Doxford, William, & Sons, Ltd.
English Electric Co., Ltd.
Fielding & Platt, Ltd.
Hick, Hargreaves & Co., Ltd.
Mirrlees, Bickerton & Day, Ltd.
North Eastern Marine Engineering Co., Ltd.
Ruston & Hornsby, Ltd.
Sulzer Bros.
Swan, Hunter, & Wigham Richardson, Ltd. ('Neptune' polar type).
Vickers, Ltd.
Vickers-Petters, Ltd.
White, J. Samuel, & Co., Ltd.

Digesters.
Cradley Boiler Co., Ltd.

Distemper.
Pegg & Ellam Jones, Ltd.
Pinchin, Johnson & Co., Ltd. ('Deydol').

Distilling Apparatus (Fresh Water).
Caird & Rayner.
Mirrlees Watson Co., Ltd.
Richardsons, Westgarth & Co., Ltd.
Royles, Ltd.

Diving Apparatus.
Siebe, Gorman & Co., Ltd.

'Dixtampo' Yellow Metal Rods for Hot Stamping and Forging.
Delta Metal Co., Ltd.

'Dixtrudo' High-speed Brass Screwing and Turning Rods.
Delta Metal Co., Ltd.

Dock Gates (Builders of).
Swan, Hunter, & Wigham Richardson, Ltd.

Dock Owners.
Swan, Hunter, & Wigham Richardson, Ltd.

Docks (Floating).
Swan, Hunter, & Wigham Richardson, Ltd.
Vickers, Ltd.

Drawing Office Requisites.
Cambridge & Paul Instrument Co., Ltd.
Casella, C. F., & Co., Ltd.
Harling, W. H.
Stanley, W. F., & Co., Ltd.
Steward, J. H., Ltd.

Dredge Plant.
Clarke, Chapman & Co., Ltd.
Flower & Everett, Ltd.
Hadfields, Ltd.
Robey & Co., Ltd.

FOR ADVERTISERS' ADDRESSES AND POSITIONS OF THEIR ANNOUNCEMENTS, CONSULT FOREGOING ALPHABETICAL LIST, PAGES 2521 TO 2538.

Dredgers (Steel Wire Ropes for).

Allan, Whyte & Co., Ltd.
Newall, R. S., & Son, Ltd.

Dredging Contractors.

Flower & Everett, Ltd.

Drills and Drilling Machines.

Chatwin, Thomas, Ltd.
Clarke, Chapman & Co., Ltd.
Consolidated Pneumatic Tool Co., Ltd.
Firth, Thos., & Sons, Ltd.
Fleming & Co. (Glasgow).
Hardy Patent Pick Co., Ltd.
Humphreys, J. H., & Sons (Portable Electric).
Jones, A. A., & Shipman, Ltd.
Shaw, John, & Sons (Wolverhampton), Ltd.
Tullis, D. & J., Ltd. (Radial, Vertical, and Horizontal).
United States Metallic Packing Co., Ltd. (Portable Electric).
Ward, Thos. W., Ltd.
Westminster Tool and Electric Co.

Driving Bands, Ropes, etc.

Angus, George, & Co., Ltd.
Cole, Henry A., & Co., Ltd.
Dawson, James, & Son, Ltd.
Hart, Thomas, Ltd.
Henley's, W. T., Telegraph Works Co., Ltd.
India Rubber, Gutta Percha, and Telegraph Works Co., Ltd.
Kenyon, Wm., & Sons, Ltd.
Reddaway, F., & Co., Ltd.
Tullis, John, & Son, Ltd.
Walker, William, & Sons, Ltd.
Willcox, W. H., & Co., Ltd.

Driving Chains.

British Driving Chain Manufacturers (Assn. of).
Coventry Chain Co., Ltd.
Renold (Hans), Ltd.
Westinghouse Morse Chain Co., Ltd.

Drop Forgings.

Smethwick Stamping Co., Ltd.

Drop Stamps and Presses.

Massey, B. & S., Ltd.

Dry Dock Owners.

Swan, Hunter, & Wigham Richardson, Ltd.

Drying Apparatus.

Central Heating Co., Ltd.
Cradley Boiler Co., Ltd. (Blood).
Electro-Metals, Ltd.
Harley, Conyngham & Watt, Ltd.
Heenan & Froude, Ltd.
Mather & Platt, Ltd.
Muir, Murray & Co.
Musgrave & Co., Ltd.
Potter, F. W., & Co.
Royles, Ltd.
Sturtevant Engineering Co., Ltd.
Tullis, D. & J., Ltd.

Drying Stoves.

Muir, Murray & Co.

'Duralumin' (Regd. Trade Mark, Vickers' Special Alloy).

Vickers, Ltd.

Dynamite.

Fleming & Co. (Glasgow).
Nobel Industries, Ltd.

Dynamo Brushes.

Potter, F. W., & Co.

Dynamometers.

Brotherhood, Peter, Ltd.
Heenan & Froude, Ltd.

Dynamos and Motors.

Ateliers de Constructions Electriques de Charleroi.
Bruce Peebles & Co., Ltd.

Dynamos and Motors—*continued.*
Clarke, Chapman & Co., Ltd.
Crompton & Co., Ltd.
English Electric Co., Ltd.
General Electric Co., Ltd.
India Rubber, Gutta Percha, and Telegraph Works Co., Ltd.
Johnson & Phillips, Ltd.
Mather & Platt, Ltd.
Peebles (Bruce) & Co., Ltd.
Rees Roturbo Manufacturing Co., Ltd.
Sandycroft, Ltd.
Sturtevant Engineering Co., Ltd.
Vickers, Ltd.
Western Electric Co., Ltd.

Ebonite.
Attwater & Sons.
Dexine, Ltd.
India Rubber, Gutta Percha, and Telegraph Works Co., Ltd.
St. Helens Cable and Rubber Co., Ltd.
Siemens Bros. & Co., Ltd.

Economisers (Fuel).
Babcock & Wilcox, Ltd.
Bennis, Ed., & Co., Ltd.
British Niclausse Boiler Co., Ltd.
Clay Cross Co., Ltd.
Green, E., & Son, Ltd.
Hudson Economiser Co.
Spencer-Bonecourt, Ltd.
Thompson, John (Wolverhampton), Ltd.
'W. R.' Patents, Ltd.

Educational Institutions.
See COLLEGES and SCHOOLS.

Ejectors (Pneumatic) for lifting Sewage and other liquids.
Activated Sludge, Ltd.

Electric Blowers.
Westminster Tool and Electric Co.

Electric Cables.
See CABLES: TELEGRAPH, TELEPHONE, ELECTRIC LIGHT AND SUBMARINE.

Electric Cables ('C.T.S.' Type).
See 'CAB TYRE SHEATHED' CABLES.

Electric Clocks.
General Electric Co., Ltd.
Gent & Co., Ltd. ('Pulsynetic' System).

Electric Fans.
See FANS.

Electric Furnaces.
Boving & Co., Ltd.
Electro-Metals, Ltd.
Griffin, John J., & Sons, Ltd.
Nobel Industries, Ltd.

Electric Generators.
See DYNAMOS AND MOTORS.

Electric Heating and Cooking Apparatus.
British Thomson-Houston Co., Ltd.
English Electric Co., Ltd.
General Electric Co., Ltd.
Simplex Conduits, Ltd.

Electric Lifts and Cranes.
Appleby, E. G., & Co., Ltd.
Ateliers de Constructions Electriques de Charleroi.
Babcock & Wilcox, Ltd.
Butters, Bros. & Co.
Butler, Samuel, & Co., Ltd. (Overhead Cranes).

Electric Lifts and Cranes—*continued.*

Chaplin, Alex., & Co., Ltd.
Clarke, Chapman & Co., Ltd.
Elliston, Evans & Jackson, Ltd.
General Electric Co., Ltd.
Harley, Conyngham & Watt, Ltd.
Holt & Willetts.
Lift and Hoist Co., Ltd. (The).
Smith, Major & Stevens, Ltd.
Steven, A. & P.
Taylor & Hubbard.
Waygood-Otis, Ltd.

Electric Light Fittings and Electrical Accessories.

Automatic Standard Screw Co., Ltd.
Benjamin Electric, Ltd.
British Thomson-Houston Co., Ltd. (Mazda Lamps).
Clarke, Chapman & Co., Ltd.
Craigpark Electric Cable Co., Ltd.
Crompton & Co., Ltd.
English Electric Co., Ltd.
General Electric Co., Ltd.
Gent & Co., Ltd.
Guest & Chrimes, Ltd. (Incandescent Lamps).
Henley's, W. T., Telegraph Works Co., Ltd.
India Rubber, Gutta Percha, and Telegraph Works Co., Ltd.
Johnson & Phillips, Ltd.
Liverpool Electric Cable Co., Ltd.
Positive Lock Washer Co.
Potter, F. W., & Co.
St. Helens Cable and Rubber Co., Ltd.
Siemens Bros. & Co., Ltd.
Simplex Conduits, Ltd.
Sturtevant Engineering Co., Ltd.
Union Cable Co., Ltd.
Western Electric Co., Ltd.
Winn, Charles, & Co., Ltd.

Electric Lighting Contractors.

British Thomson-Houston Co., Ltd.
Clarke, Chapman & Co., Ltd.
Craigpark Electric Cable Co., Ltd.
Crompton & Co., Ltd.
English Electric Co., Ltd.
Henley's, W T., Telegraph Works Co., Ltd.
India Rubber, Gutta Percha and Telegraph Works Co., Ltd.
Johnson & Phillips, Ltd.
Liverpool Electric Cable Co., Ltd.
St. Helens Cable and Rubber Co., Ltd.
Union Cable Co., Ltd.
Western Electric Co., Ltd.
Weston Electrical Instrument Co., Ltd.

Electric Motors.

See DYNAMOS AND MOTORS.

Electric Portable Drills and Hammers.

Consolidated Pneumatic Tool Co., Ltd.
Humphreys, J. H., & Sons.
United States Metallic Packing Co., Ltd.
Westminster Tool and Electric Co.

Electric Railways and Tramways.

Ateliers de Constructions Electriques de Charleroi.
Clarke, Chapman & Co., Ltd.
Craigpark Electric Cable Co., Ltd.
English Electric Co., Ltd.
Hadfields, Ltd.
Henley's, W. T., Telegraph Works Co., Ltd.
India Rubber, Gutta Percha, and Telegraph Works Co., Ltd.
Liverpool Electric Cable Co., Ltd.
Mather & Platt, Ltd.

FOR ADVERTISERS' ADDRESSES AND POSITIONS OF THEIR ANNOUNCEMENTS, CONSULT FOREGOING ALPHABETICAL LIST, PAGES 2521 TO 2538.

Electric Railways and Tramways. —*continued.*

Macintosh Cable Co., Ltd.
Union Cable Co., Ltd.
Western Electric Co., Ltd.

Electric Ship Propulsion.

British Ljungstrom Marine Turbine Co., Ltd.

Electric Steel Manufacturers.

Andrews, Thomas, & Co., Ltd.
Firth, Thos., & Sons, Ltd.

Electric Welding.

Acme Welding Co., Ltd.
Alloy Welding Processes, Ltd.
Anglo-Swedish Electric Welding Co., Ltd. (Kjellberg Process).
Barimar, Ltd.
Ferrox Company, Ltd.
Oxy-acetylene Welding Co., Ltd.
Premier Electric Welding Co., Ltd. (Equipment, Repairs, and Construction Work).
Stewarts & Lloyds, Ltd.

Electric Wiring Systems.

See WIRING SYSTEMS (FLEXIBLE)

Electrical Engineers.

Ateliers de Constructions Electriques de Charleroi.
Alloy Welding Processes, Ltd.
Armstrong, Sir W. G., Whitworth & Co., Ltd.
Benjamin Electric, Ltd.
British Thomson-Houston Co., Ltd.
Bruce Peebles & Co., Ltd.
Clarke, Chapman & Co., Ltd.
Craigpark Electric Cable Co., Ltd.

Electrical Engineers—*continued.*

Crompton & Co., Ltd.
Electric Control, Ltd.
English Electric Co., Ltd.
General Electric Co., Ltd.
Gent & Co., Ltd.
Henley's, W. T., Telegraph Works Co., Ltd.
India Rubber, Gutta Percha, and Telegraph Works Co., Ltd.
Johnson & Phillips, Ltd.
Liverpool Electric Cable Co., Ltd.
Macintosh Cable Co., Ltd.
Mather & Platt, Ltd.
Peebles (Bruce) & Co., Ltd.
Railway Signal Co., Ltd.
Rees Roturbo Manufacturing Co., Ltd.
St. Helens Cable and Rubber Co., Ltd.
Siemens Bros. & Co., Ltd.
Simplex Conduits, Ltd.
Sturtevant Engineering Co., Ltd.
Sullivan, H. W.
Union Cable Co., Ltd.
Vickers, Ltd.
Western Electric Co., Ltd.
Weston Electrical Instrument Co., Ltd.

Electrical Instruments & Apparatus.

See INSTRUMENTS AND APPARATUS (ELECTRICAL).

Electrical Storage Cells and Batteries.

See STORAGE CELLS.

Electrodes (for Electric Arc Welding)

Premier Electric Welding Co., Ltd.

Elevators.

See LIFTING AND HOISTING.

Emery Wheels, Machinery, etc.

Mitchell's Emery Wheel Co.

Enamels, Colours, and Varnishes.

Pegg & Ellam Jones, Ltd.
Pinchin, Johnson & Co., Ltd. ('Minerva').

End Mills.

Firth, Thos., & Sons, Ltd.

'Endural' Electric Cables.

Henley's, W. T., Telegraph Works Co., Ltd.

Engine and Boiler Fittings, Boiler Furnaces, Tubes, etc.

'Auto' Recorder Co.
Babcock & Wilcox, Ltd.
Bailey, Sir W. H., & Co., Ltd.
Bakers (Leeds), Ltd.
Beardmore, Wm., & Co., Ltd.
Beldam Packing and Rubber Co., Ltd
Bennis, Ed., & Co., Ltd. (Stokers).
British Niclausse Boiler Co., Ltd.
Brotherhood, Peter, Ltd.
Broughton Copper Co., Ltd.
Bull's Metal & Melloid Co., Ltd.
Caird & Rayner.
Chemical Engineering & Wilton's Patent Furnace Co., Ltd.
Clarke, Chapman & Co., Ltd.
Cockburns, Ltd.
Cooper & Greig, Ltd.
Crockatt, W., & Sons, Ltd.
Crosby Valve and Engineering Co., Ltd.
Davey, Paxman & Co., Ltd.
Deighton's Patent Flue and Tube Co., Ltd.
Gallagher & Crompton.
Galloways, Ltd.
Green, E., & Son, Ltd.
Heenan & Froude, Ltd.
Hind, John, & Sons, Ltd.
Hopkinson, J., & Co., Ltd.

Engine and Boiler Fittings, Boiler Furnaces, Tubes, etc.—*cont.*

Howden, James, & Co., Ltd.
Hudson Economiser Co.
Hulburd Engineering Co., Ltd.
Kennicott Water Softener Co.
Lea Recorder Co., Ltd.
McPhail & Simpson.
Massey, B. & S., Ltd.
Mirrlees Watson Co., Ltd.
North Eastern Marine Engineering Co., Ltd.
Pearson, E. J. & J., Ltd.
Royles, Ltd.
Scottish Tube Co., Ltd.
Spencer-Bonecourt, Ltd.
Stewarts & Lloyds, Ltd. (Tubes).
Stirling Boiler Co., Ltd.
Sturtevant Engineering Co., Ltd.
Superheater Corporation, Ltd.
Swan, Hunter, & Wigham Richardson, Ltd.
Thompson, John (Wolverhampton), Ltd.
Tomey, Joseph, & Sons, Ltd.
Tubes, Ltd.
Underfeed Stoker Co., Ltd.
United Brassfounders and Engineers, Ltd.
United Kingdom Metallic Packing Syndicate, Ltd.
United States Metallic Packing Co., Ltd.
United Water Softeners, Ltd.
Vickers, Ltd.
Walker, James, & Co., Ltd.
Weir, G. & J., Ltd.
Weldless Steel Tube Co., Ltd.
Willcox, W. H., & Co., Ltd.
Winn, Charles, & Co., Ltd.

Engine Packing.

Anderson, Thomas, Ltd.
Angus, George, & Co., Ltd.

'FOR ADVERTISERS' ADDRESSES AND POSITIONS OF THEIR ANNOUNCEMENTS, CONSULT FOREGOING ALPHABETICAL LIST, PAGES 2521 TO 2538.

Engine Packing—*continued.*

Attwater & Sons.
Beldam Packing & Rubber Co., Ltd.
British Fibrocement Works, Ltd.
Bull's Metal and Melloid Co., Ltd.
Dexine, Ltd.
Henley's, W. T., Telegraph Works Co., Ltd.
Hind, John, & Sons, Ltd.
Hulburd Engineering Co., Ltd.
India Rubber, Gutta Percha, and Telegraph Works Co., Ltd.
Lancaster & Tonge, Ltd.
Leeds Engineering & Hydraulic Co., Ltd.
Reddaway, F., & Co., Ltd.
United Kingdom Metallic Packing Syndicate, Ltd.
United States Metallic Packing Co., Ltd.
Walker, James, & Co., Ltd. ('Lion').
Willcox, W. H., & Co., Ltd.
Winn, Charles, & Co., Ltd.
Woodite Co.

Engine Packing ('Lion').

Walker, James, & Co., Ltd.

Engineering and Railway Supplies.

See RAILWAY AND TRAMWAY PLANT.

Engineering Photography.

Griffin, John J., & Sons, Ltd.

Engineering Training.

See COLLEGES.

Engineers (Advisory).

Ashwell & Nesbit, Ltd.
Brownlie & Green, Ltd.
Harvey, L. C.

Engineers (Aeronautical).

See AERONAUTICAL ENGINEERS.

Engineers (Electrical).

See ELECTRICAL ENGINEERS.

Engineers (Fuel Economy).

Brownlie & Green, Ltd.
London Coke Committee.
Sugden, T., Ltd.

Engineers (Hydraulic).

Berry, Henry, & Co., Ltd.
Boving & Co., Ltd.
Fielding & Platt, Ltd.
Gilkes, Gilbert, & Co., Ltd.
Gordon, James, & Co., Ltd.
Hay, Maryon & Co., Ltd.
Hollings & Guest, Ltd.
Howden, James, & Co., Ltd.
Howes, S., Co.
Leeds Engineering & Hydraulic Co., Ltd.
Mather & Platt, Ltd.
Rees Roturbo Manufacturing Co., Ltd.

Engineers (Lighthouse).

Chance Brothers & Co., Ltd.

Engineers (Mechanical).

Aerograph Co., Ltd.
Daglish, Robert, & Co., Ltd.
Butters Bros. & Co.
Chalk, Abercrombie & Co.
Govan Shafting and Engineering Co., Ltd.
Harley, Conyngham & Watt, Ltd.
Nobel Industries, Ltd.
Spencer-Bonecourt, Ltd.
Vickers, Ltd.
Walker, James, & Co., Ltd.

Engineers' Tools and Fittings.

Armstrong, Sir W. G., Whitworth & Co., Ltd.
Beardmore, Wm., & Co., Ltd.
Chatwin, Thomas, Ltd.
Clarke, Chapman & Co., Ltd.
Consolidated Pneumatic Tool Co., Ltd.
Crockatt, W., & Sons, Ltd.
English Electric Co., Ltd.
Fielding & Platt, Ltd.
Firth, Thos., & Sons, Ltd.
Hardy Patent Pick Co., Ltd.
Heenan & Froude, Ltd.
Hind, John, & Sons, Ltd.
"J.B.R." Tool Co., Ltd.
Jackman, Joseph, & Co., Ltd.
Jones, A. A., & Shipman, Ltd.
Massey, B. & S., Ltd.
Mitchell's Emery Wheel Co.
Player, W. & J.
Ransomes, Sims & Jefferies, Ltd.
Shaw, John, & Sons (Wolverhampton), Ltd.
Simplex Conduits, Ltd.
Starrett, L. S., Co. (Great Britain), Ltd.
Tullis, D. & J., Ltd. (Radial, Vertical, and Horizontal).
United States Metallic Packing Co., Ltd.
Vickers, Ltd.
Ward, Thos. W., Ltd.
Westminster Tool and Electric Co.
Willcox, W. H., & Co., Ltd.
Winn, Charles, & Co., Ltd.
Youngs.

Engines (Steam).

See STEAM ENGINES.

Engravers, Draughtsmen, and Printers.

Spottiswoode, Ballantyne & Co., Ltd
Swain, John, & Son, Ltd.

Evaporators, Condensers, Water Distilling Apparatus, etc.

Babcock & Wilcox, Ltd.
British Niclausse Boiler Co., Ltd.
Caird & Rayner.
Clarke, Chapman & Co., Ltd.
Fullerton, Hodgart & Barclay, Ltd. (Foster's Patent).
Heenan & Froude, Ltd.
McPhail & Simpson.
Mirrlees Watson Co., Ltd.
North Eastern Marine Engineering Co., Ltd.
Richardsons, Westgarth & Co., Ltd.
Royles, Ltd.
Spencer-Bonecourt, Ltd.
Weir, G. & J., Ltd.

Evaporators for Sugar and Trade Liquors.

Mirrlees Watson Co., Ltd.

Excavators and Transporters.

Ruston & Hornsby, Ltd. (Steam).
Taylor & Hubbard.

Exhaust Heat Boilers.

Ruston & Hornsby, Ltd.

Expanded Metal.

Expanded Metal Co., Ltd.

Explosives.

Fleming & Co. (Glasgow).
Nobel Industries, Ltd.

Extensometers.

Foster Instrument Co.

Extruded Metals.

Booth, James, & Co. (1915), Ltd.
British Aluminium Co., Ltd.
Delta Metal Co., Ltd.
Manganese Bronze and Brass Co., Ltd. (Brass and Bronze).
Phosphor Bronze Co., Ltd.
United Brassfounders and Engineers Ltd. (Brass and Bronze Bars).

Factories (Lighting of).

Allen-Liversidge, Ltd.
Benjamin Electric, Ltd.
Wells, A. C., & Co.

Factory Buildings (Constructors of)

Holst, K., & Co.
Skelton, R. A., & Co.

Fans: Blowing, Exhaust, Electric, etc.

Brotherhood, Peter, Ltd.
Daglish, Robt., & Co., Ltd.
English Electric Co., Ltd.
General Electric Co., Ltd.
Gilkes, Gilbert, & Co., Ltd.
Heenan & Froude, Ltd.
Howden, James, & Co., Ltd.
Musgrave & Co., Ltd.
Potter, F. W., & Co.
Sturtevant Engineering Co., Ltd.
Western Electric Co., Ltd.
Westminster Tool and Electric Co.

Feed-Water Heaters, Filters and Purifiers.

Ashwell & Nesbit, Ltd.
Babcock & Wilcox, Ltd.
Bailey, Sir W. H., & Co., Ltd.
Bakers (Leeds), Ltd.

Feed-Water Heaters, Filters, and Purifiers—*continued.*

British Niclausse Boiler Co., Ltd.
Buxton Lime Firms Co., Ltd.
Caird & Rayner.
Clarke, Chapman & Co., Ltd.
Cockburns, Ltd.
Crockatt, W., & Sons, Ltd.
Green, E., & Son, Ltd.
Hudson Economiser Co.
Hunton, C. A., & Sons.
Kennicott Water Softener Co.
Lancaster & Tonge, Ltd.
McPhail & Simpson.
North Eastern Marine Engineering Co., Ltd.
Royles, Ltd.
Sturtevant Engineering Co., Ltd.
United Water Softeners, Ltd. ('Permutit').
Weir, G. & J., Ltd.
Worthington-Simpson, Ltd.

Feed-Water (Measurement of).

Lea Recorder Co., Ltd.

Felt and Felt Roofs.

Anderson, D., & Son, Ltd.
Angus, George, & Co., Ltd.
Callender, George M., & Co., Ltd.
Reddaway, F., & Co., Ltd.
Ruberoid Co., Ltd.

Felts for Printing Machinery, Paper Making, and Calico Printing Machinery.

Reddaway, F., & Co., Ltd.

'Ferodo' Friction Linings.

Ferodo, Ltd.

Ferries (Wire Rope).

Cradock, George, & Co., Ltd.

Ferro-Concrete.

See REINFORCED CONCRETE.

"Fibrent" Asbestos Cement Slates, Corrugated and Flat Sheets.

British Fibrocement Works, Ltd.

Fibre (Vulcanised).

Angus, George, & Co., Ltd.
Attwater & Sons.
India Rubber, Gutta Percha, and Telegraph Works Co., Ltd.
Reddaway, F., & Co., Ltd.

Files.

Andrews, Thomas, & Co., Ltd.
Firth, Thos., & Sons, Ltd.
Vickers, Ltd.

Filing and Card Index Cabinets.

Modern Office Equipment Co., Ltd.

Filtering Apparatus.

Caird & Rayner.
Cockburns, Ltd.
Harley, Conyngham & Watt, Ltd.
Heenan & Froude, Ltd.
Mather & Platt, Ltd.
Mirrlees Watson Co., Ltd.
Royles, Ltd.
United Water Softeners, Ltd.

Fire Alarms.

Gent & Co., Ltd.
Mather & Platt, Ltd.
Siemens Bros. & Co., Ltd.

Fire Bricks and Fire Clay Goods.

Pearson, E. J. & J., Ltd.

Fire Extinguishing Appliances.

Attwater & Sons.
Guest & Chrimes, Ltd.
Mather & Platt, Ltd.
Reddaway, F., & Co., Ltd.
Smethwick Stamping Co., Ltd.
United Brassfounders & Engineers, Ltd.
Warner, Robert, & Co. (Eng.), Ltd.
Winn, Charles, & Co., Ltd.

Firth's Stainless Steel.

Firth, Thos., & Sons, Ltd.

Fireproof Partition and Wall Sheets.

British Fibrocement Works, Ltd.

Flexible Couplings.

Boving & Co., Ltd.
Electro-Metals, Ltd.
Power Plant Co., Ltd.
United Flexible Metallic Tubing Co., Ltd.

Flexible Metallic Tubing.

United Flexible Metallic Tubing Co., Ltd.

Floating Dock Builders.

Swan, Hunter, & Wigham Richardson, Ltd.
Vickers, Ltd.

Floors, etc. (Fire-resisting).

Bell's United Asbestos Co., Ltd.
Building Products, Ltd.
Expanded Metal Co., Ltd.
Fram (London), Ltd.
Holst, K., & Co.

Flour-milling Machinery.

Hardy Patent Pick Co., Ltd.
Howes, S., Co.
Ransomes, Sims & Jefferies, Ltd.

Flue Covers and Linings.

Pearson, E. J. & J., Ltd.

Fluxes for Oxy-acetylene Welding.

Thorn & Hoddle Acetylene Co., Ltd.

Fog Signal Manufacturers.

Chance Brothers & Co., Ltd.

'Foliac' Boiler Graphite.

Graphite Products, Ltd.

'Foliac' Graphite Pipe Joint Compound.

Graphite Products, Ltd.

'Foliac' Graphite Specialities.

Graphite Products, Ltd.

'Foliac' Silica-Graphite Paint.

Graphite Products, Ltd.

Forced and Induced Draught Apparatus.

Bennis, Ed., & Co., Ltd.
Chemical Engineering & Wilton's Patent Furnace, Co., Ltd.
Heenan & Froude, Ltd.
Howden, James, & Co., Ltd.
Musgrave & Co., Ltd.
Potter, F. W., & Co.
Sturtevant Engineering Co., Ltd.
White's Injectors, Ltd.

Forges (Portable).

Hardy Patent Pick Co., Ltd.
Sturtevant Engineering Co., Ltd.

Forging Furnaces.

See Furnaces.

Forging Hammers.

Massey, B. & S., Ltd.
Player, W. & J.
Ross, R. G., & Son, Ltd.

Forging Presses.

Berry, Henry, & Co., Ltd.
Fielding & Platt, Ltd.
Hollings & Guest, Ltd.
Leeds Engineering & Hydraulic Co., Ltd.

Forgings and Castings.

See Castings and Forgings.

Founders.

Nobel Industries, Ltd.
North Eastern Marine Engineering Co., Ltd.

Foundry Plant.

English Electric Co., Ltd.
Heenan & Froude, Ltd.
Muir, Murray & Co.
Sturtevant Engineering Co., Ltd.
Willcox, W. H., & Co., Ltd.

Friction Clutches.

British Hele-Shaw Patent Clutch Co., Ltd.
Mather & Platt, Ltd.
Power Plant Co., Ltd.
Reddaway, F., & Co., Ltd.

For Advertisers' Addresses and positions of their announcements, consult foregoing Alphabetical List, pages 2521 to 2538.

Friction Linings.

Ferodo, Ltd.

Fuel Economisers.

See ECONOMISERS.

Fuel Economy Systems.

British Commercial Gas Association.
Brownlie & Green, Ltd.
Central Heating Co., Ltd.
London Coke Committee.
Mumford, Bailey & Preston.
Sugden, T., Ltd.

Furnaces (Boiler).

See ENGINE AND BOILER FITTINGS.

Furnaces (Electric).

Boving & Co., Ltd.
Electro-Metals, Ltd.
Griffin, John J., & Sons, Ltd.
Nobel Industries, Ltd.

Furnaces for Marine and Land Boilers.

Chemical Engineering & Wilton's Patent Furnace Co., Ltd.
Gallagher & Crompton.
Piggott, Thomas, & Co., Ltd.

Furnaces (Gas and Oil Heated and Industrial).

Appleby, E. G., & Co., Ltd.
Bennis, Ed., & Co., Ltd.
Chemical Engineering & Wilton's Patent Furnace Co., Ltd.
Crossley Brothers, Ltd.
Dowson & Mason Gas Plant Co., Ltd.
Gibbons Bros., Ltd.
Harley, Conyngham & Watt, Ltd.
Harvey, L. C.

Furnaces (Gas and Oil Heated and Industrial)—*continued.*

Heenan & Froude, Ltd.
Howden, James, & Co., Ltd.
Massey, B. & S., Ltd.
Muir, Murray & Co.
Pearson, E. J. & J., Ltd.
Power-Gas Corporation, Ltd. (*'Mond Gas'*).
Radiation, Ltd.

Furnaces (Non-ferrous Metal).

Harvey, L. C.
Radiation, Ltd.

Galvanised Iron and Steel Manufacturers.

Harvey, G. A., & Co. (London), Ltd.

Galvanisers.

Harvey, G. A., & Co. (London), Ltd.
Shropshire Iron Co., Ltd.

Galvanising Plant.

Muir, Murray & Co.

Gas and its Industrial Applications.

British Commercial Gas Association.

Gas Cleaning Plant.

Appleby, E. G., & Co., Ltd.
Dempster, R. & J., Ltd.
Dowson & Mason Gas Plant Co., Ltd.
Power-Gas Corporation, Ltd. (*'Mond Gas'*).

Gas Engine Packing.

United States Metallic Packing Co., Ltd.

Gas Furnaces.

See Furnaces.

Gas Holders.

Dempster, R. & J., Ltd.
Dempster, Robert, & Sons, Ltd.

See also Gas Works Plant.

Gas Meters.

Guest & Chrimes, Ltd. (Wet and Dry).
Kent, George, Ltd.
Power-Gas Corporation, Ltd.
Radiation Ltd.

Gas, Oil, and Petrol Engines.

Beardmore, Wm., & Co., Ltd.
Bennis, Ed., & Co., Ltd.
British Hele-Shaw Patent Clutch Co., Ltd.
Brotherhood, Peter, Ltd.
Campbell Gas Engine Co., Ltd.
Clarke, Chapman & Co., Ltd.
Consolidated Pneumatic Tool Co., Ltd.
Crossley Brothers, Ltd.
Davey, Paxman & Co., Ltd.
Fielding & Platt, Ltd.
Galloways, Ltd.
Markt & Co. (London), Ltd.
Mather & Platt, Ltd.
Mirrlees, Bickerton & Day, Ltd.
Napier, D., & Son, Ltd.
Power-Gas Corporation, Ltd. ('*Mond Gas*').
Premier Gas Engine Co., Ltd.
Robey & Co., Ltd.
Ruston & Hornsby, Ltd.
Thornycroft, John I., & Co., Ltd.
Vickers, Ltd.
Vickers-Petters, Ltd.
Westinghouse Brake and Saxby Signal Co., Ltd.
White, J. Samuel, & Co., Ltd.

Gas Producers.

Appleby, E. G., & Co., Ltd.
Bennis, Ed., & Co., Ltd.
Campbell Gas Engine Co., Ltd.
Crossley Brothers, Ltd.
Davey, Paxman & Co., Ltd.
Dowson & Mason Gas Plant Co., Ltd.
Fielding & Platt, Ltd.
Mirrlees, Bickerton & Day, Ltd.
Power-Gas Corporation, Ltd. ('*Mond Gas*').
Premier Gas Engine Co., Ltd.
Ruston & Hornsby, Ltd.

Gas Retorts.

Pearson, E. J. & J., Ltd.

Gas Tubes and Fittings.

Clay Cross Co., Ltd. (Cast Iron).
Foster Brothers, Ltd.
Russell, John, & Co., Ltd.
Scottish Tube Co., Ltd.
Stewarts & Lloyds, Ltd.
Talbot-Stead Tube Co., Ltd.
Tubes, Ltd.
Weldless Steel Tube Co., Ltd.

Gas Washing Fans.

Jenkins, W. J., & Co., Ltd.
Power-Gas Corporation, Ltd. ('*Mond Gas*').

Gas Works Plant.

Dempster, R. & J., Ltd.
Dempster, Robert, & Sons, Ltd.
Gibbons Bros., Ltd.
Jenkins, W. J., & Co., Ltd.
Piggott, Thomas, & Co., Ltd.

Gauge Glasses.

Crockatt, W., & Sons, Ltd.
Tomey, Joseph, & Sons, Ltd. ('Eureka').

For Advertisers' Addresses and positions of their announcements, consult foregoing Alphabetical List, pages 2521 to 2538.

Gauge Glass Protectors.

Tomey, Joseph, & Sons, Ltd.
United Brassfounders and Engineers, Ltd.

Gauge Glass Rings.

Crockatt, W., & Sons, Ltd.
Dexine, Ltd. ('Dexine').
Walker, James, & Co., Ltd. ('Wallico' Cone).
Woodite Co. ('Woodite').

Gauge Glass Washers.

Tomey, Joseph, & Sons, Ltd.

Gauges.

See STEAM GAUGES.

Gear Cutting Machines.

Angus, George, & Co., Ltd.

Geared Turbine Auxiliaries.

Atlas Steel Foundry & Engineering Co., Ltd.
Beardmore, Wm., & Co., Ltd.
Cockburns, Ltd.
Metropolitan-Vickers Electrical Co., Ltd.
North Eastern Marine Engineering Co., Ltd.
Power Plant Co., Ltd.
Weir, G. & J., Ltd.

Gearing.

Angus, George, & Co., Ltd.
Buckley, W. W., & Sons.
Daglish, Robert, & Co., Ltd.
Hadfields, Ltd.
Kirkstall Forge, Ltd.

Gearing—*continued.*

Pochin, E. Arnold, & Bro.
Power Plant Co., Ltd.
Robey & Co., Ltd.

Gears (Raw Hide).

Angus, George, & Co., Ltd.
Buckley, W. W., & Sons.
Pochin, E. Arnold, & Bro.

Generators (Electric).

See DYNAMOS AND MOTORS.

Girders, Bridges, etc.

See STRUCTURAL IRON AND STEEL WORK.

Glassware, for Ships' Lighting, etc.

Ackroyd & Best, Ltd.

Governors (Hydraulic).

Boving & Co., Ltd.
Gilkes, Gilbert, & Co., Ltd.
Gordon, James, & Co., Ltd.
Hay, Maryon & Co., Ltd.

Governors (Steam Engine).

Boving & Co., Ltd.
Davey, Paxman & Co., Ltd.
Ransomes, Sims & Jefferies, Ltd.
United Brassfounders & Engineers, Ltd
Winn, Charles, & Co., Ltd.

Grabbing Cranes (Electric).

Chaplin, Alex., & Co., Ltd.

Grain and Seed Cleaning Machinery.

Howes, S., Co.

Graphite.

Graphite Products, Ltd. ('Foliac').
Sterns, Ltd.

Graving Dock Owners.

Swan, Hunter, & Wigham Richardson, Ltd.

Grease (Lubricating).

Sterns, Ltd.
Willcox, W. H., & Co., Ltd.

Grease Separators.

Bakers (Leeds), Ltd.
Hudson Economiser Co.
Kennicott Water Softener Co.
Royles, Ltd.

Grinders.

See Grinding Machinery.

Grinding Machinery.

Consolidated Pneumatic Tool Co., Ltd.
Hadfields, Ltd.
Hardy Patent Pick Co., Ltd.
Howes, S., Co.
Humphreys, J. H., & Sons (Portable Electric).
Jones, A. A., & Shipman, Ltd.
Patent Lightning Crusher Co., Ltd.
Ransomes, Sims & Jefferies, Ltd.
Sturtevant Engineering Co., Ltd.

Grinding Machinery (Abrading).

Mitchell's Emery Wheel Co.

'Grinnell' Sprinklers.

Mather & Platt, Ltd.

Grouting Machines.

Side Groove Steel Piling Supply Co., Ltd.

Gun and Ammunition Works.

Beardmore, Wm., & Co., Ltd.
Vickers, Ltd.

Gunmetal Ingots.

Broughton Copper Co., Ltd.
Bull's Metal and Melloid Co., Ltd.
Delta Metal Co., Ltd.
Eyre Smelting Co., Ltd.
Phosphor Bronze Co., Ltd.

Gyroscopes.

Swan, Hunter, & Wigham Richardson, Ltd.

Hack Saw Blades.

Firth, Thos., & Sons, Ltd.
Sanderson Bros. & Newbould, Ltd.
Starrett, L. S., Co. (Great Britain), Ltd.

Hack Saws and Machines.

Hunton, C. A., & Sons.
Shaw, John, & Sons (Wolverhampton), Ltd.

Hammers (Pile Driving).

Side Groove Steel Piling Supply Co., Ltd.

Hammers (Steam, Compressed Air, Pneumatic Power, etc.).

Consolidated Pneumatic Tool Co., Ltd.
Massey, B. & S., Ltd.
Player, W. & J.
Ross, R. G., & Son, Ltd. (Rigby's Patent).
United States Metallic Packing Co., Ltd. (Electric Portable).

Hand Cranes.

See Lifting and Hoisting Machinery, etc.

Hauling Plant.

See Winding and Hauling.

Hawsers (Galvanised Steel Wire).

Allan, Whyte, & Co., Ltd.
Cradock, George, & Co., Ltd.
Newall, R. S., & Son, Ltd.
Whitecross Co., Ltd.

Heat Treatment of Metals.

Power-Gas Corporation, Ltd.

Heating for Railway Carriages.

Westinghouse Brake and Saxby Signal Co., Ltd.

Heating Plant (Gas).

Power-Gas Corporation, Ltd. ('*Mond Gas*').

Heating, Ventilating, etc.

Ashwell & Nesbit, Ltd.
Boyle, Robert, & Son.
Central Heating Co., Ltd.
Coan, Robert W.
English Electric Co., Ltd.
General Electric Co., Ltd.
Heenan & Froude, Ltd.
Howden, James, & Co., Ltd.
Hudson Economiser Co.
Mumford Bailey & Preston.
Musgrave & Co., Ltd.
Potter, F. W., & Co.
Royles, Ltd.
Simplex Conduits, Ltd.
Spencer-Bonecourt, Ltd.
Sturtevant Engineering Co., Ltd.
Sulzer Bros.
Westinghouse Brake and Saxby Signal Co., Ltd.

Helical Gearing.

Angus, George, & Co., Ltd.
Buckley, W. W., & Sons.
Power Plant Co., Ltd.

High Speed and Silver Steel Drill Rods.

Bruntons.
Robertson, Wm., Ltd.
Vickers, Ltd.

High Speed Tool Steel.

Andrews, Thomas, & Co., Ltd.
Armstrong, Sir W. G., Whitworth & Co., Ltd.
Beardmore, Wm., & Co., Ltd.
Firth, Thos., & Sons, Ltd.
Hadfields, Ltd.
Jackman, Joseph, & Co., Ltd.
Robertson, Wm., Ltd.
Sanderson Bros & Newbould, Ltd.
Vickers, Ltd.

High Tensile Steels.

Firth, Thos., & Sons, Ltd.

Hoists.

See LIFTING AND HOISTING.

Hollow Rods and Sections (Brass, Copper, etc.).

Delta Metal Co., Ltd.

Horizontal Boring and Facing Machines.

Tullis, D. & J., Ltd.

Hose (Flexible Metallic).

United Flexible Metallic Tubing Co., Ltd.

Hose for Fire Brigades, Mills, etc.

Angus, George, & Co., Ltd.
Attwater & Sons.
Macintosh, Charles, & Co., Ltd. (Rubber).

Hose for Fire Brigades, Mills, etc. —*continued.*

Reddaway, F., & Co., Ltd.
Tullis, John, & Son, Ltd.
Winn, Charles, & Co., Ltd.

Hose Pipes, Leather and Canvas Hose, etc.

Angus, George, & Co., Ltd.
Henley's, W. T., Telegraph Works Co., Ltd.
India Rubber, Gutta Percha, and Telegraph Works Co., Ltd.
Reddaway, F., & Co., Ltd.
Tullis, John, & Son, Ltd.
Willcox, W. H., & Co., Ltd.
Winn, Charles, & Co., Ltd.
Woodite Co.

Hot Water Supply Boilers.

Royles, Ltd.

Hydraulic Gauges.

Tomey, Joseph, & Sons, Ltd.

Hydraulic Lifts.

See LIFTING AND HOISTING.

Hydraulic Machines, Tools, and Appliances, etc.

Armstrong, Sir W. G., Whitworth & Co., Ltd.
Berry, Henry, & Co., Ltd.
Electric Control, Ltd.
Fielding & Platt, Ltd. (Tweddell's System).
Fullerton, Hodgart & Barclay, Ltd. (Pumps).
Hadfields, Ltd.
Heenan & Froude, Ltd.
Hollings & Guest, Ltd.
Holt & Willetts.
Hydraulic Gears, Ltd.

Hydraulic Machines, Tools, and Appliances, etc.—*continued.*

Leeds Engineering & Hydraulic Co., Ltd.
Massey, B. & S., Ltd.
Mather & Platt, Ltd.
Swan, Hunter, & Wigham Richardson, Ltd.
Youngs.

Hydraulic Plants and Appliances

Boving & Co., Ltd.
English Electric Co., Ltd.
Gilkes, Gilbert, & Co., Ltd.
Gordon, James, & Co., Ltd.
Hay, Maryon, & Co., Ltd.
Howden, James, & Co., Ltd.
Howes, S., Co.
Kent, George, Ltd.

Hydraulic Tubes and Pipes.

Broughton Copper Co., Ltd.
Foster Brothers, Ltd.
Russell, John, & Co., Ltd.
Scottish Tube Co., Ltd.
Stewarts & Lloyds, Ltd.
Talbot-Stead Tube Co., Ltd.
Tubes, Ltd.
Weldless Steel Tube Co., Ltd.

Hydrochloric Acid.

Berk, F. W., & Co., Ltd.

Hydro-Electric Plants.

Armstrong, Sir W. G., Whitworth & Co., Ltd.
Boving & Co., Ltd.
English Electric Co., Ltd.
Gordon, James, & Co., Ltd.
Hay, Maryon, & Co., Ltd.

Hydrological Chemists.

Boilerine, Ltd.

Ice-making Machinery.

See REFRIGERATING MACHINERY.

India Rubber, Gutta Percha, and Bitumen Manufacturers.

Angus, George, & Co., Ltd.
Attwater & Sons.
Beldam Packing & Rubber Co., Ltd.
Callender, George M., & Co., Ltd.
Craigpark Electric Cable Co., Ltd.
Henley's, W. T., Telegraph Works Co., Ltd.
India Rubber, Gutta Percha, and Telegraph Works Co., Ltd.
Johnson & Phillips, Ltd.
Liverpool Electric Cable Co., Ltd.
Macintosh, Charles, & Co., Ltd.
Macintosh Cable Co., Ltd.
North British Rubber Co., Ltd.
Reddaway, F., & Co., Ltd.
St. Helens Cable and Rubber Co., Ltd.
Siemens Bros. & Co., Ltd.
Union Cable Co., Ltd.
Walker, James, & Co., Ltd. ('Lion').
Woodite Co.

Indicators (Steam Engine).

Bailey, Sir W. H., & Co., Ltd.
Crosby Valve & Engineering Co., Ltd.

Industrial Gas Furnaces and Plants.

Crossley Brothers, Ltd.
Muir, Murray, & Co.
Power-Gas Corporation, Ltd. (*'Mond Gas'*).
Radiation, Ltd.

Ingot Metals.

British Aluminium Co., Ltd.
Broughton Copper Co., Ltd.

Ingot Metals—*continued.*

Bull's Metal and Melloid Co., Ltd.
Delta Metal Co., Ltd.
Manganese Bronze and Brass Co., Ltd. (Brass and Bronze).

Injectors, Ejectors, and General Jet Appliances.

See STEAM INJECTORS.

Inspection Blocks for Boilers.

Pearson, E. J. & J., Ltd.

Instruments and Apparatus (Electrical).

Cambridge & Paul Instrument Co., Ltd.
Coan, Robert W.
Crompton & Co., Ltd.
Electric Control, Ltd.
Electro-Metals, Ltd.
English Electric Co., Ltd.
Evershed & Vignoles, Ltd.
General Electric Co., Ltd.
Gent & Co., Ltd.
Hart Accumulator Co., Ltd.
India Rubber, Gutta Percha, and Telegraph Works Co., Ltd.
Johnson & Phillips, Ltd.
Lamson Pneumatic Tube Co., Ltd.
Railway Signal Co., Ltd.
Siemens Bros. & Co., Ltd.
Sullivan, H. W.
Union Cable Co., Ltd.
Western Electric Co., Ltd.
Weston Electrical Instrument Co., Ltd.

Instruments: Surveying, Mathematical, Drawing, etc.

Adie, Patrick.
Cambridge & Paul Instrument Co., Ltd.
Casella, C. F., & Co., Ltd.
Griffin, John J., & Sons, Ltd.

Instruments: Surveying, Mathematical, Drawing, etc.—*continued.*

Harling, W. H.
Hind, John, & Sons, Ltd.
Stanley, W. F., & Co., Ltd.
Steward, J. H., Ltd.

Insulating Materials.

Anderson, Thomas, Ltd.
Angus, George, & Co., Ltd.
Attwater & Sons (Mica, Leatheroid, Fibre, etc.).
Beldam Packing and Rubber Co., Ltd.
Bell's United Asbestos Co., Ltd.
Callender, George M., & Co., Ltd.
Craigpark Electric Cable Co., Ltd.
Dexine, Ltd.
Henley's, W. T., Telegraph Works Co., Ltd.
India Rubber, Gutta Percha, and Telegraph Works Co., Ltd.
Johnson & Phillips, Ltd.
Kenyon, Wm., & Sons, Ltd.
Macintosh Cable Co., Ltd.
Ruberoid Co., Ltd.
Siemens Bros. & Co., Ltd.
Sterns, Ltd.
Sutcliffe Bros. & Bryce, Ltd.
Union Cable Co., Ltd.
Woodite Co.

Insulating Varnishes and Compounds.

Pinchin, Johnson & Co., Ltd. ('The Standard').
Siemens Bros. & Co., Ltd.

Insulators.

Anderson, Thomas, Ltd.
Angus, George, & Co., Ltd.
English Electric Co., Ltd.

Insulators—*continued.*

India Rubber, Gutta Percha, and Telegraph Works Co., Ltd.
Siemens Bros. & Co., Ltd.

Interheaters and Reheaters.

McPhail & Simpson.

Internal Combustion Engines.

See Gas, Oil, and Petrol Engines.

Iron and Steel Manufacturers and Merchants.

Andrews, Thomas, & Co., Ltd.
Armstrong, Sir W. G., Whitworth & Co., Ltd.
Bruntons.
Cradock, George, & Co., Ltd.
Hadfields, Ltd.
Hardy Patent Pick Co., Ltd.
Henderson & Glass.
Jackman, Joseph, & Co., Ltd.
Keay, E. C. & J., Ltd.
Kirkstall Forge, Ltd.
Redpath, Brown & Co., Ltd.
Sanderson Bros. & Newbould, Ltd.
Shropshire Iron Co., Ltd.
Skelton, H. J., & Co., Ltd.
Skelton, R. A., & Co.
Stewarts & Lloyds, Ltd.
Ward, Thos. W., Ltd.

Iron and Steel Scrap.

Chalk, Abercrombie & Co.
Garnham, J. B., & Sons.
Ward, Thos. W., Ltd.

Iron and Steel Tubes.

See Tubes and Fittings.

Iron Tubes.

See Tubes and Fittings.

Jacks (Hydraulic and Screw).

Arrol, Sir William, & Co., Ltd.
Holt & Willetts.
Youngs.

Jointing Cement.

Kenyon, Wm., & Sons, Ltd. ('Kisol').
Sterns, Ltd.

Jointing Materials.

Angus, George, & Co., Ltd.
Beldam Packing and Rubber Co., Ltd.
British Fibrocement Works, Ltd.
Dexine, Ltd.
Graphite Products, Ltd.
Hulburd Engineering Co., Ltd.
India Rubber, Gutta Percha, and Telegraph Works Co., Ltd.
Kenyon, Wm., & Sons, Ltd.
Sterns, Ltd.
Walker, James, & Co., Ltd. ('Lion' and 'Walkerite').
Willcox, W. H., & Co., Ltd.
Woodite Co.

Joints ('Lion' and 'Walkerite').

Walker, James, & Co., Ltd.

Joists (Steel).

Findlay, Alex., & Co., Ltd.
Fram (London), Ltd.
Henderson & Glass.
Redpath, Brown & Co., Ltd.
Skelton, R. A., & Co.
Ward, Thos. W., Ltd.

Journals (Technical).

See BOOKS AND JOURNALS.

'Kisol' Cement for Boilers, Steam Pipes, etc.

Kenyon, Wm., & Sons, Ltd.

Lamps (Electric).

See ELECTRIC LIGHT FITTINGS, ETC.

Lamps (Industrial).

Allen-Liversidge, Ltd.
Carbic, Ltd.
Kaye, Joseph, & Sons, Ltd.
Wells, A. C., & Co.

Lamps (Brazing and Oil Engine).

Ackroyd & Best, Ltd.
Shaw, John, & Sons (Wolverhampton), Ltd.

Lamps (Torch, Bunker, etc., for Engineers generally).

Kaye, Joseph, & Sons, Ltd.

Lancashire Boiler Settings (Improved).

Pearson, E. J. & J., Ltd.

Lathes.

See TOOL MAKERS.

Launches (Steam and Motor).

White, J. Samuel, & Co., Ltd.

Leather Belting.

See BELTING.

Lift Enclosures.

Holt & Willetts.
Potter, F. W., & Co.
Smith, Major, & Stevens, Ltd.
Steven, A. & P.
Waygood-Otis, Ltd.

Lifting and Hoisting Machinery and Lifting Tackle.

Appleby, E. G., & Co., Ltd.
Arrol, Sir William, & Co., Ltd.
Babcock & Wilcox, Ltd.
Berry, Henry, & Co., Ltd.
Bullivant & Co., Ltd.
Butler, Samuel & Co., Ltd. (Steam Travelling Cranes).
Butters Bros. & Co.
Chaplin, Alex., & Co., Ltd.
Clarke, Chapman & Co., Ltd.
Consolidated Pneumatic Tool Co., Ltd.
Dempster, Robert, & Sons, Ltd.
Elliston, Evans & Jackson, Ltd.
English Electric Co., Ltd.
Fielding & Platt, Ltd.
Hadfields, Ltd.
Hardy Patent Pick Co., Ltd.
Harley, Conyngham & Watt, Ltd.
Holt & Willetts.
Leeds Engineering and Hydraulic Co., Ltd.
Lift & Hoist Co., Ltd. (The).
Power Plant Co., Ltd.
Ransomes Machinery Co. (1920), Ltd.
Sandycroft, Ltd.
Smith, Major, & Stevens, Ltd.
Steven, A. & P.
Taylor & Hubbard.
United States Metallic Packing Co., Ltd.
Waygood-Otis, Ltd.
Wright, Joseph, & Co., Ltd.
Youngs.

Lifting Magnets.

Appleby, E. G., & Co., Ltd.
Holt & Willetts.
Westminster Tool and Electric Co.

Lighterage.

Flower & Everett, Ltd.

Lighthouse Apparatus Manufacturers.

Chance Brothers & Co., Ltd.

Lighting and Heating (Acetylene Gas Plants for).

Acetylene Corporation of Gt. Britain, Ltd.
Ackroyd & Best, Ltd.
Allen-Liversidge, Ltd.
Bingham, Charles, & Co., Ltd.
Carbic, Ltd.
Hoggett, Young & Co.
Oxhycarbon Co.
Thorn & Hoddle Acetylene Co., Ltd.
Wells, A. C., & Co.

Lighting (Train).

Carbic, Ltd.

Lightning Conductors.

Cutting, R. C., & Co.
Siemens Bros. & Co., Ltd.

Lime and Limestone.

Buxton Lime Firms Co., Ltd.
Cement Marketing Co., Ltd.

'Lion' Packing.

Walker, James, & Co., Ltd.

Liquid Air.

British Oxygen Co., Ltd.
Oxhycarbon Co. (Producing Plants).

Liquid Starters and Controllers.

Electric Control, Ltd.
Elliston, Evans & Jackson, Ltd.

For Advertisers' Addresses and positions of their announcements, consult foregoing Alphabetical List, pages 2521 to 2538.

Loading and Transport Plants.

Arrol, Sir William, & Co., Ltd.
Bullivant & Co., Ltd.
Butler, Samuel, & Co., Ltd.
Butters Bros. & Co.
Chaplin, Alex., & Co., Ltd.
Ransomes Machinery Co. (1920), Ltd.

Locks, Bolts, etc.

Kaye, Joseph, & Sons, Ltd.

Locomotive Superheated Packing.

United States Metallic Packing Co., Ltd.

Locomotive Superheaters.

Marine & Locomotive Superheaters, Ltd.
Sugden T., Ltd.
Superheater Corporation, Ltd.

Locomotives.

Armstrong, Sir W. G., Whitworth & Co., Ltd.
Beardmore, Wm., & Co., Ltd.
Robey & Co., Ltd.

Loose Leaf Ledgers.

Modern Office Equipment Co., Ltd.

Lubricating Compounds.

Sterns, Ltd.

Lubricating Devices.

United Brassfounders & Engineers, Ltd.

Lubricator Glasses.

Tomey, Joseph, & Sons, Ltd.

Lubricators and Lubricants.

Crosby Valve and Engineering Co., Ltd.
Graphite Products, Ltd. ('Foliac').
Hulburd Engineering Co., Ltd.
Sterns, Ltd.
United Kingdom Metallic Packing Syndicate, Ltd.
United States Metallic Packing Co., Ltd.
Willcox, W. H., & Co., Ltd.

Machine and Hand Tools.

See ENGINEERS' TOOLS AND FITTINGS, *also* TOOL MAKERS.

Machine Output Recorders.

Gent & Co., Ltd.

Machine Screws.

Automatic Standard Screw Co., Ltd.
Barwells, Ltd.
Horton & Son, Ltd.
Periam, Herbert W., Ltd.

Machinery (Electro-Magnets).

Electric Control, Ltd.
Rapid Magnetting Machine Co., Ltd.

Machinery Finishes.

Pegg & Ellam Jones, Ltd.
Pinchin, Johnson & Co., Ltd. ('Minerva').

Machinery Guards.

Potter, F. W., & Co.

Machinery Steel Manufacturers.

Andrews, Thomas, & Co., Ltd.
Beardmore, Wm., & Co., Ltd.

Macintoshes and Oilskins.

Macintosh, Charles, & Co., Ltd.

Magnet Steel.

Firth, Thos., & Sons, Ltd.

Magnetic Chucks.

Humphreys, J. H., & Sons.
Rapid Magnetting Machine Co., Ltd.

Magnetic Separators.

Hardy Patent Pick Co., Ltd.
Rapid Magnetting Machine Co., Ltd.

Manganese and Manganese Alloys.

Manganese Bronze & Brass Co., Ltd.

Manganese Bronze.

Broughton Copper Co., Ltd.
Bull's Metal and Melloid Co., Ltd.
Delta Metal Co., Ltd.
Garnham, J. B., & Sons.
Manganese Bronze & Brass Co., Ltd. (Castings and Forgings).
Phosphor Bronze Co., Ltd. (Ingots & Castings).

Manganese Steel.

Firth, Thos., & Sons, Ltd.
Hadfields, Ltd. ('Era').

Marine Engines, Boilers, and Auxiliary Machinery.

Armstrong, Sir W. G., Whitworth & Co., Ltd.
Babcock & Wilcox, Ltd.
Beardmore, Wm., & Co., Ltd.
British Ljungstrom Marine Turbine Co., Ltd.
British Niclausse Boiler Co., Ltd.

Marine Engines, Boilers, and Auxiliary Machinery *—continued.*

Brotherhood, Peter, Ltd.
Caird & Rayner.
Cammell, Laird & Co., Ltd.
Clarke, Chapman & Co., Ltd.
Cochran & Co. (Annan), Ltd.
Cooper & Greig, Ltd.
Doxford, William, & Sons, Ltd.
Howden, James, & Co., Ltd.
Mirrlees Watson Co., Ltd.
North Eastern Marine Engineering Co., Ltd.
Richardsons, Westgarth & Co., Ltd.
Spencer-Bonecourt, Ltd.
Swan, Hunter, & Wigham Richardson, Ltd.
Thornycroft, John I., & Co., Ltd.
Weir, G. & J., Ltd.
White, J. Samuel, & Co., Ltd.
Yarrow & Co., Ltd.

Marine Glues.

Crockatt, W., & Sons, Ltd.

Marine Oil Engines.

Beardmore, Wm., & Co., Ltd.
Cammell, Laird & Co., Ltd.
Campbell Gas Engine Co., Ltd.
Crossley Bros., Ltd.
Doxford, William, & Sons, Ltd.
Mirrlees, Bickerton & Day, Ltd.
North Eastern Marine Engineering Co., Ltd.
Swan, Hunter, & Wigham Richardson, Ltd.
Thornycroft, John I., & Co., Ltd.
Vickers, Ltd.
Vickers-Petters, Ltd.
Westinghouse Brake and Saxby Signal Co., Ltd.
White, J. Samuel, & Co., Ltd.

For Advertisers' Addresses and positions of their announcements, consult foregoing Alphabetical List, pages 2521 to 2538.

Marine Superheaters.

Gordon Superheating Co.
Marine & Locomotive Superheaters, Ltd.
McPhail & Simpson.
North Eastern Marine Engineering Co., Ltd.
Sugden, T., Ltd.
Superheater Corporation, Ltd.

Mathematical, Drawing, and Surveying Instruments.

Adie, Patrick.
Cambridge & Paul Instrument Co., Ltd.
Casella, C. F., & Co., Ltd.
Griffin, John J., & Sons, Ltd.
Harling, W. H.
Stanley, W. F., & Co., Ltd.
Steward, J. H., Ltd.

Measuring Instruments (Electrical).

See INSTRUMENTS.

Mechanical Rubber Goods.

India Rubber, Gutta Percha & Telegraph Works Co., Ltd.
Macintosh, Charles, & Co., Ltd.
North British Rubber Co., Ltd.

Mechanical Stokers.

Babcock & Wilcox, Ltd.
Bennis, Ed., & Co., Ltd.
British Niclausse Boiler Co., Ltd.
Spencer-Bonecourt, Ltd.
Stirling Boiler Co., Ltd.
Thompson, John (Wolverhampton), Ltd.
Underfeed Stoker Co., Ltd.

'Mesmeric' Case-Hardening Steel.

Firth, Thos., & Sons, Ltd.

Metal Cutting and Welding.

Acetylene Corporation of Gt. Britain, Ltd.
Acme Welding Co., Ltd.
Allen-Liversidge, Ltd.
Alloy Welding Processes, Ltd.
Anglo-Swedish Electric Welding Co., Ltd. (Kjellberg Process).
Barimar, Ltd.
British Oxygen Co., Ltd.
District Chemical Co., Ltd.
Ferrox Company, Ltd.
Hoggett, Young & Co.
International Electrolytic Plant Co., Ltd.
Oxhycarbon Co.
Oxy-acetylene Welding Co., Ltd.
Premier Electric Welding Co., Ltd.
Thorn & Hoddle Acetylene Co., Ltd.

Metal Filament Lamps.

British Thomson-Houston Co., Ltd.
English Electric Co., Ltd
General Electric Co., Ltd.
Siemens Bros. & Co., Ltd.

Metal Melting Plants.

Harvey, L. C.
Power-Gas Corporation, Ltd. ('*Mond Gas*').

Metal Merchants.

Chalk, Abercrombie, & Co.
Garnham, J. B., & Sons.
Ward, Thos. W., Ltd.

Metallic Packing.

See ENGINE PACKING.

Metallic Piston Rod Packing ('Lion').

Walker, James, & Co., Ltd.

Metallic Piston Rod Packing ('The Lancaster').

Lancaster & Tonge, Ltd.

Metallic Piston Rod Packing ('United States').

United States Metallic Packing Co., Ltd.

Metal Scrap.

See SCRAP METALS.

Metallic Tubing (Flexible).

United Flexible Metallic Tubing Co., Ltd.

Metallurgical Engineers.

Acme Welding Co , Ltd.
Barimar, Ltd.
Electro-Metals, Ltd.
Oxhycarbon Co
Oxy-acetylene Welding Co., Ltd.
Premier Electric Welding Co., Ltd.
Sand croft Ltd.

Metals: Bearing, Anti-friction, etc.

Barwells, Ltd.
British Aluminium Co., Ltd.
Broughton Copper Co., Ltd.
Bull's Metal and Melloid Co., Ltd.
Delta Metal Co., Ltd.
Eyre Smelting Co., Ltd.
Phosphor Bronze Co. Ltd.
Rapid Magnetting Machine Co., Ltd. (Scrap Metals).
United Brassfounders and Engineers, Ltd. ('Stella').
Vickers, Ltd. ('Duralumin,' Regd. Trade Mark, Vickers Special Alloy).
Youngs.

Metals (Scrap).

Chalk, Abercrombie & Co. (Iron, Steel, and Non-Ferrous).
Garnham, J B., & Sons.
Ward, Thos. W., Ltd.

Meteorological Instruments.

Casella, C. F., & Co., Ltd.
Harling, W. H
Stanley, W. F., & Co., Ltd.
Steward, J. H., Ltd.

Meters (Air, Gas, Steam and Water).

Guest & Chrimes, Ltd.
Kent, George, Ltd.
Palatine Engineering Co., Ltd.
Power-Gas Corporation, Ltd.
Radiation, Ltd.
Worthington-Simpson Ltd.

Mica.

Attwater & Sons.

Micrometers.

Starrett, L. S., Co. (Great Britain), Ltd.

Microscopes.

Casella, C. F. & Co., Ltd.
Griffin, John J., & Sons, Ltd.
Harling, W. H.
Stanley, W. F., & Co., Ltd.
Steward, J. H., Ltd.

Mill Bandings and Twines.

Hart, Thomas, Ltd.
Kenyon, Wm., & Sons, Ltd.

Mill Gearing, Shafting, etc.

See SHAFTING AND GEARING.

Milling Cutters and Blanks.

Firth, Thos., & Sons, Ltd.

Mills (Pulverizing).

Hadfields, Ltd.
Patent Lightning Crusher Co., Ltd.

Mineral Wool.

Bell's United Asbestos Co., Ltd.
Kenyon, Wm., & Sons, Ltd.
Sutcliffe Bros. & Bryce, Ltd.

FOR ADVERTISERS' ADDRESSES AND POSITIONS OF THEIR ANNOUNCEMENTS, CONSULT FOREGOING ALPHABETICAL LIST, PAGES 2521 TO 2538.

Miners' Safety Lamps.

Ackroyd & Best, Ltd.

'Minerva' Paints.

Pinchin, Johnson & Co., Ltd.

Minimeters.

Hunton, C. A., & Sons.

Mining and Hauling Chains.

Wright, Joseph, & Co., Ltd.

Mining and Hauling Plant.

Atlas Steel Foundry & Engineering Co., Ltd.
Babcock & Wilcox, Ltd.
Bennis, Ed., & Co., Ltd.
British Hele-Shaw Patent Clutch Co., Ltd.
Bullivant & Co., Ltd.
Butler, Samuel, & Co., Ltd.
Butters Bros. & Co.
Clarke, Chapman & Co., Ltd.
Consolidated Pneumatic Tool Co., Ltd.
Cradock, George, & Co., Ltd.
Crompton & Co., Ltd.
Daglish, Robt., & Co., Ltd.
Davey, Paxman & Co., Ltd.
Electric Control, Ltd.
English Electric Co., Ltd.
Findlay, Alex., & Co., Ltd.
Fleming & Co. (Glasgow).
Gent & Co., Ltd.
Hadfields, Ltd.
Hardy Patent Pick Co., Ltd.
Hart, Thomas, Ltd.
Henley's, W. T., Telegraph Works Co., Ltd.
Kenyon, Wm., & Sons, Ltd.
Leeds Engineering and Hydraulic Co., Ltd.
Patent Lightning Crusher Co., Ltd.
Ransomes, Sims & Jefferies, Ltd.

Mining and Hauling Plant—*cont.*

Robey & Co., Ltd.
Ruston & Hornsby, Ltd.
Sandycroft, Ltd.
Spencer-Bonecourt, Ltd.
Sturtevant Engineering Co., Ltd.
United Flexible Metallic Tubing Co., Ltd.

Mining Cables and Accessories.

Electric Control, Ltd.
Henley's, W. T., Telegraph Works Co., Ltd.
India Rubber, Gutta Percha, and Telegraph Works Co., Ltd.
Johnson & Phillips, Ltd.
Macintosh Cable Co., Ltd.
Positive Lock Washer Co.
St. Helens Cable and Rubber Co., Ltd.
Siemens Bros. & Co., Ltd.

Mining Explosives.

Fleming & Co. (Glasgow).
Nobel Industries, Ltd.

Mining Machinery.

See MINING AND HAULING PLANT.

Mining Signals (Watertight).

Gent & Co., Ltd.
Siemens Bros. & Co., Ltd.

Mining Steel.

Andrews, Thomas, & Co., Ltd.
Firth, Thos., & Sons, Ltd.

Mining Tools.

Consolidated Pneumatic Tool Co., Ltd.
Fleming & Co. (Glasgow).
Hardy Patent Pick Co., Ltd.

Mond Gas Plants.

Power-Gas Corporation, Ltd. (*Sole Patentees and Manufacturers*).

Motor Car Accessories.

Coan, Robert W.
Napier, D., & Son, Ltd.
Vickers, Ltd. ('Duralumin' for, Registered Trade Mark, Vickers' Special Alloy).

Motor Cars.

Napier, D., & Son, Ltd.

Motor Chassis Frames.

Beardmore, Wm., & Co., Ltd.
Vickers, Ltd.

Motor Converters.

Ateliers de Constructions Electriques de Charleroi.
Peebles (Bruce) & Co., Ltd. (*Peebles-la Cour*).

Motor Lubricants.

Graphite Products, Ltd.
Sterns, Ltd.
Willcox, W. H., & Co., Ltd.

Motor Starters.

Sandycroft, Ltd.

Motor Tyres.

Macintosh, Charles, & Co., Ltd. (N.A.P. and 'Titan').
North British Rubber Co., Ltd.

Motor Vehicles (Commercial).

Napier, D., & Son, Ltd.
Thornycroft, John I., & Co., Ltd.

Multiple Effect Evaporators.

Mirrlees Watson Co., Ltd.

Nickel & Nickel Chrome Steels.

Firth, Thos., & Sons, Ltd.

Nitric Acid.

Berk, F. W., & Co., Ltd.

Nitrogen.

British Oxygen Co., Ltd.

Nuts.

Automatic Standard Screw Co., Ltd.
Barwells, Ltd.
Periam, Herbert W., Ltd.

Office Furniture.

Modern Office Equipment Co., Ltd.

Office Systems (Finger Tip).

Modern Office Equipment Co., Ltd.

Oil Burning Installations.

Chemical Engineering & Wilton's Patent Furnace Co., Ltd.
Doxford, William, & Sons, Ltd.
Howden, James, & Co., Ltd.
Thornycroft, John I., & Co., Ltd.

Oil Cabinets.

Kaye, Joseph, & Sons, Ltd.
Wells, A. C., & Co.

Oil Eliminators.

Bakers (Leeds), Ltd.
Hudson Economiser Co.
Kennicott Water Softener Co.
North Eastern Marine Engineering Co., Ltd.
Premier Cooler & Engineering Co., Ltd.
Royles, Ltd.
United Water Softeners, Ltd.

Oil Feeders and Cans.

Kaye, Joseph, & Sons, Ltd.

Oil Filters.

Wells, A. C., & Co.

For Advertisers' Addresses and positions of their announcements, consult foregoing Alphabetical List, pages 2521 to 2538.

Oil Furnaces.

See FURNACES.

Oil, Gas, and Petrol Engines.

Armstrong, Sir W. G., Whitworth & Co., Ltd
Beardmore, Wm., & Co., Ltd
Belliss & Morcom, Ltd.
Bennis, Ed., & Co., Ltd.
British Hele-Shaw Patent Clutch Co., Ltd.
Brotherhood, Peter, Ltd.
Campbell Gas-Engine Co., Ltd.
Clarke, Chapman & Co., Ltd.
Consolidated Pneumatic Tool Co., Ltd.
Crossley Brothers, Ltd.
Davey, Paxman & Co., Ltd.
Doxford, William, & Sons, Ltd.
English Electric Co., Ltd.
Fielding & Platt, Ltd.
Hick, Hargreaves & Co., Ltd.
Markt & Co. (London), Ltd.
Mather & Platt, Ltd.
Mirrlees, Bickerton & Day, Ltd.
North Eastern Marine Engineering Co., Ltd.
Power-Gas Corporation, Ltd. (*'Mond Gas'*).
Premier Gas Engine Co., Ltd.
Robey & Co., Ltd.
Ruston & Hornsby, Ltd.
Sulzer Bros.
Swan, Hunter, & Wigham Richardson, Ltd.
Thornycroft, John I., & Co., Ltd.
Vickers, Ltd.
Vickers-Petters, Ltd.
Westinghouse Brake and Saxby Signal Co., Ltd.
White, J. Samuel, & Co., Ltd.
Worthington-Simpson, Ltd.

Oil Locomotives (Internal Combustion).

Ruston & Hornsby, Ltd.

Oil Mill Machinery.

Hydraulic Gears, Ltd.
Waygood-Otis, Ltd.
Worthington-Simpson, Ltd. (Pumps).

Oil Presses.

Hollings & Guest, Ltd.

Oil Tank Ships (Builders of).

Swan, Hunter, & Wigham Richardson, Ltd.

Oil Well Ropes.

Allan, Whyte & Co., Ltd.
Cradock, George, & Co., Ltd.
Newall, R. S., & Son, Ltd.

Oils, Lubricating Compounds, etc.

Graphite Products, Ltd.
Sterns, Ltd.
Willcox, W. H., & Co., Ltd.

Overhead Cranes and Runways.

Arrol, Sir William & Co., Ltd.
Butler, Samuel, & Co., Ltd.
Butters Bros. & Co.
Chaplin, Alex., & Co., Ltd.

Oxy-Acetylene Welding and Cutting.

Acetylene Corporation of Gt. Britain, Ltd.
Acme Welding Co., Ltd.
Allen-Liversidge, Ltd.
Alloy Welding Processes, Ltd.
Barimar, Ltd.
Bingham, Charles, & Co., Ltd.

FOR ADVERTISERS' ADDRESSES AND POSITIONS OF THEIR ANNOUNCEMENTS, CONSULT FOREGOING ALPHABETICAL LIST, PAGES 2521 TO 2538.

Oxy-Acetylene Welding and Cutting—*continued.*

British Oxygen Co., Ltd.
Carbic, Ltd.
Coan, Robert W.
District Chemical Co., Ltd.
Ferrox Company, Ltd.
Harley, Conyngham & Watt, Ltd.
Hoggett, Young & Co.
Hydrogen, Oxygen & Plant Co., Ltd. (Accessories for).
Oxhycarbon Co.
Oxy-acetylene Welding Co., Ltd.
Thorn & Hoddle Acetylene Co., Ltd.

Oxygen.

British Oxygen Co., Ltd.
Integral Oxygen Co., Ltd.

Oxygen and Hydrogen Generating Plants.

International Electrolytic Plant Co., Ltd.
Oxhycarbon Co.
Oxygen, Hydrogen & Plant Co., Ltd.

Packing ('Lion').

Walker, James, & Co., Ltd.

Packing (Steam).

See Engine Packing.

Packing ('United States').

United States Metallic Packing Co., Ltd.

Painting Machines.

Aerograph Co., Ltd.
Wells, A. C., & Co.

Paints, Colours, Enamels, and Varnishes.

Pegg & Ellam Jones, Ltd.
Pinchin, Johnson & Co., Ltd. ('Minerva').

Paints for Preserving Iron and Steel Work.

Callender, G. M., & Co., Ltd. ('Bitusol').
Graphite Products, Ltd.
Pegg & Ellam Jones, Ltd.
Pinchin, Johnson & Co., Ltd. ('Minerva' and 'Syronite').
Ruberoid Co., Ltd. ('Flexduro').

Paper and Pulp Making Machinery.

Boving & Co., Ltd.
Daglish, Robt., & Co., Ltd.

Paper Makers' Felts.

Reddaway, F., & Co., Ltd.

Paper Pinions.

Angus, George, & Co., Ltd.
Pochin, E. Arnold, & Bro.

Partition Contractors and Fireproof Builders.

Bell's United Asbestos Co., Ltd.
British Fibrocement Works, Ltd.
Expanded Metal Co., Ltd.
Fram (London), Ltd.

Pelton Wheels.

Boving & Co., Ltd.
Gilkes, Gilbert, & Co., Ltd.
Gordon, James, & Co., Ltd.
Hay, Maryon & Co., Ltd.
Howes, S., Co.

Perforated Metals.

Greening, N., & Sons, Ltd.
Harvey, G. A., & Co. (London), Ltd.

Petrol Air Gas Machines.

Kent, George, Ltd.

Petrol Engines.

See OIL AND GAS ENGINES.

Phosphor Bronze.

Broughton Copper Co., Ltd.
Bull's Metal and Melloid Co., Ltd.
Delta Metal Co., Ltd.
Eyre Smelting Co., Ltd.
Ferrox Company, Ltd.
Garnham, J. B., & Sons.
Phosphor Bronze Co., Ltd. (Ingots, Sheets, Strips, Rods, Wires, and Tubes).

Photographic Apparatus.

Griffin, John J., & Sons, Ltd.

Picks, Shovels, etc.

Hadfields, Ltd.
Hardy Patent Pick Co., Ltd.

Pig Iron.

Clay Cross Co., Ltd.
Skelton, H. J., & Co., Ltd.

Pile Driving Equipment.

Ransome Machinery Co. (1920), Ltd.
Side Groove Steel Piling Supply Co., Ltd.

Pile Driving Frames.

Ransome Machinery Co. (1920), Ltd.
Side Groove Steel Piling Supply Co., Ltd.

Pipe Bending Machines.

Berry, Henry, & Co., Ltd.
Fielding & Platt, Ltd.

Pipe Coverings.

Bell's United Asbestos Co., Ltd.
British Fibrocement Works, Ltd.
Kenyon, Wm., & Sons, Ltd.
Sutcliffe Bros. & Bryce, Ltd. ('Crown').
Thompson, John (Wolverhampton), Ltd.
Willcox, W. H., & Co., Ltd.

Pipe Fitters' Tools.

Crane-Bennett, Ltd.

Pipe Hangers.

Crane-Bennett, Ltd.

Pipe Lines.

Armstrong, Sir W. G., Whitworth & Co, Ltd.
Boving & Co., Ltd.
Foster Brothers, Ltd.
Gordon, James & Co., Ltd.
Hay, Maryon & Co., Ltd.
Russell, John, & Co., Ltd.
Scottish Tube Co., Ltd.
Thompson, John (Wolverhampton), Ltd.

Pipes and Fittings.

See TUBES AND FITTINGS.

Piston Packing.

Hind, John, & Sons, Ltd. ('Rowan').
Lancaster & Tonge, Ltd.
Walker, James, & Co., Ltd. ('Lion').

Piston Rings.

Hind, John, & Sons, Ltd. ('Rowan').
Lancaster & Tonge, Ltd. ('Limit').
Leeds Engineering and Hydraulic Co., Ltd.
Mather & Platt, Ltd.

Planing, Slotting, Screwing, and Shaping Machines.

Fielding & Platt, Ltd.
Ward, Thos. W., Ltd.
Winn, Charles, & Co., Ltd.

Planished Steel Sheets.

Firth, Thos., & Sons, Ltd.

Plaster.

Cement Marketing Co., Ltd.

Plumbers' Brasswork.

Crane-Bennett, Ltd.
Guest & Chrimes, Ltd.
United Brassfounders and Engineers, Ltd.

Pneumatic Despatch Tubes, etc.

Lamson Pneumatic Tube Co., Ltd.

Pneumatic Tools and Appliances.

Armstrong, Sir W. G., Whitworth & Co., Ltd.
Consolidated Pneumatic Tool Co., Ltd.
Fielding & Platt, Ltd.
Fleming & Co. (Glasgow).
Gilman, Frank.
Ingersoll-Rand Co., Ltd.
Massey, B. & S., Ltd.
United States Metallic Packing Co., Ltd.

'Poilite' Asbestos Sheets and Roofing Tiles.

Bell's United Asbestos Co., Ltd.

Polishing Machinery.

Mitchell's Emery Wheel Co.
Rapid Magnetting Machine Co., Ltd.

Portable Electric Drills and Hammers.

See ELECTRIC PORTABLE DRILLS AND HAMMERS.

Portable Engines.

Davey, Paxman & Co., Ltd.
Markt & Co. (London), Ltd.
Ransomes, Sims & Jefferies, Ltd.
Robey & Co., Ltd.
Ruston & Hornsby, Ltd.

Portable Railways.

White, R., & Sons.

Portland Cement.

Cement Marketing Co., Ltd.

Portland Cement (Testing Machines for).

Adie, Patrick.
Bailey, Sir W. H , & Co., Ltd.

Powdered Coal Plants.

Harvey, L. C.

Power Hammers.

See HAMMERS.

Power Plant (Gas).

Power-Gas Corporation, Ltd. (*'Mond Gas'*).

Power Presses.

Nobel Industries, Ltd.

Power Transmission Appliances.

Angus, George, & Co., Ltd.
British Driving Chain Manufacturers (Assn. of).
British Hele-Shaw Patent Clutch Co., Ltd.
Coventry Chain Co., Ltd.
Cradock, George, & Co., Ltd.

Power Transmission Appliances —*continued.*

Dawson, James, & Son, Ltd.
Firth, Thos., & Sons, Ltd.
Gandy Belt Manufacturing Co., Ltd.
Hart, Thomas, Ltd.
Kenyon, Wm., & Sons, Ltd.
Kirkstall Forge, Ltd.
Power Plant Co., Ltd.
Reddaway, F., & Co., Ltd.
Renold (Hans), Ltd.
Skefko Ball Bearing Co., Ltd.
Westinghouse Morse Chain Co., Ltd.

Preservatives (Boiler).

Angus, George, & Co., Ltd.
Boilerine, Ltd.
Graphite Products, Ltd.
Kennicott Water Softener Co.
Sterns, Ltd.
Sutcliffe Bros. & Bryce, Ltd.
United Water Softeners, Ltd.

Preservatives (Wood).

Sterns, Ltd.

Pressed Steel Underframes and Bogies.

Findlay, Alex., & Co., Ltd.

Printers, Lithographers, Draughtsmen, and Engravers.

Gibson, John.
Spottiswoode, Ballantyne & Co., Ltd.
Swain, J., & Son, Ltd.

Producer Gas Plants.

See GAS PRODUCERS.

Propeller Shafts.

North Eastern Marine Engineering Co., Ltd.

Propeller Starters (Hydraulic).

Youngs.

Propellers.

Bull's Metal and Melloid Co., Ltd.
Hadfields, Ltd.
Howden, James, & Co., Ltd.
Manganese Bronze and Brass Co., Ltd.
North Eastern Marine Engineering Co., Ltd.
Premier Cooler and Engineering Co., Ltd. (Aeroplane).
Thornycroft, John I., & Co., Ltd.

Publications (Technical).

See BOOKS AND JOURNALS.

Pulleys.

See BELT AND ROPE PULLEYS.

Pulley Blocks.

Holt & Willetts.
Youngs.

Pulp-making Machinery.

Boving & Co., Ltd.
Daglish, Robt., & Co., Ltd.

Pulverizer Mills.

Patent Lightning Crusher Co., Ltd.

Pump Buckets.

Crockatt, W., & Sons, Ltd.
Dexine, Ltd.

Pumps and Pumping Machinery

Ateliers de Constructions Electriques de Charleroi.
Bailey, Sir W. H., & Co., Ltd.
Bakers (Leeds), Ltd.
Beldam Packing and Rubber Co., Ltd. (Valves for).

Pumps and Pumping Machinery—*continued.*

Berry, Henry, & Co., Ltd.
Boving & Co., Ltd.
Caird & Rayner.
Campbell Gas Engine Co., Ltd.
Clarke, Chapman & Co., Ltd.
Daglish, Robt., & Co., Ltd.
Davey, Paxman & Co., Ltd.
Electric Control, Ltd.
English Electric Co., Ltd.
Fielding & Platt, Ltd.
Fleming & Co. (Glasgow).
Fullerton, Hodgart & Barclay, Ltd. (Hydraulic).
Gilkes, Gilbert, & Co., Ltd. (Centrifugal).
Hollings & Guest, Ltd. (Hydraulic).
Hydraulic Gears, Ltd.
Ingersoll-Rand Co., Ltd. (Cameron).
Leeds Engineering and Hydraulic Co., Ltd.
Mather & Platt, Ltd.
Mirrlees Watson Co., Ltd. (Vacuum).
North Eastern Marine Engineering Co., Ltd.
Pulsometer Engineering Co., Ltd. (Vacuum and Centrifugal).
Ransomes, Sims & Jefferies, Ltd.
Rees Roturbo Manufacturing Co., Ltd. (Roturbo, Turbine, and Rotary).
Ruston & Hornsby, Ltd.
Siebe, Gorman & Co., Ltd. (Vacuum).
Sulzer Bros.
Thompson, John (Wolverhampton), Ltd.
United Brassfounders and Engineers, Ltd. (Semi-Rotary).
Warner, Robert, & Co. (Eng.), Ltd.
Weir, G. & J., Ltd.
Westinghouse Brake and Saxby Signal Co., Ltd.
Willcox, W. H., & Co., Ltd.
Winn, Charles, & Co., Ltd.
Worthington-Simpson, Ltd.

Punching, Shearing, and Bending Machines.

Berry, Henry, & Co., Ltd.
Fielding & Platt, Ltd.
Leeds Engineering and Hydraulic Co, Ltd.
Youngs.

Pyrometers.

Bailey, Sir W. H., & Co., Ltd.
Cambridge & Paul Instrument Co.,Ltd.
Crompton & Co., Ltd.
Foster Instrument Co.
Griffin, John J., & Sons, Ltd.
Siemens Bros. & Co., Ltd.
Sugden, T., Ltd.

Quarrying Tools.

Fleming & Co. (Glasgow).
Hardy Patent Pick Co., Ltd.

Quasi-Arc Welding Accessories and Electrodes.

Ferrox Company, Ltd.

Radial Drilling and Tapping Machines.

Jones, A. A., & Shipman, Ltd.
Tullis, D. & J., Ltd.

Radio Telegraphy Apparatus.

Siemens Bros. & Co., Ltd.
Sullivan, H. W.

Rails and Fastenings.

Hadfields, Ltd.
Railway and General Engineering Co., Ltd.
Skelton, H. J., & Co., Ltd.
Summerson, Thomas, & Sons, Ltd.
White, R., & Sons.

Railway Brakes.

Consolidated Brake and Engineering Co., Ltd.
Westinghouse Brake and Saxby Signal Co., Ltd.

For Advertisers' Addresses and positions of their announcements, consult foregoing Alphabetical List, pages 2521 to 2538.

Railway Couplings.

Firth, Thos., & Sons, Ltd.

Railway Crankshafts.

Firth, Thos., & Sons, Ltd.

Railway Points and Crossings.

Hadfields, Ltd.
Railway and General Engineering Co., Ltd.
Summerson, Thomas, & Sons, Ltd.
White, R., & Sons.

Railway Ramps.

Summerson, Thomas, & Sons, Ltd.

Railway Re-railing Ramps.

Firth, Thos., & Sons, Ltd.

Railway and Tramway Plant.

British Aluminium Co., Ltd.
British Hele-Shaw Patent Clutch Co., Ltd.
Bullivant & Co., Ltd.
Clarke, Chapman & Co., Ltd.
English Electric Co., Ltd.
Eyre Smelting Co., Ltd. (Brasses).
Findlay, Alex., & Co., Ltd.
Hadfields, Ltd.
Hardy Patent Pick Co., Ltd.
Harley, Conyngham & Watt, Ltd.
Heenan & Froude, Ltd.
Henley's, W. T., Telegraph Works Co., Ltd.
India Rubber, Gutta Percha, and Telegraph Works Co., Ltd.
Kirkstall Forge, Ltd.
Liverpool Electric Cable Co., Ltd.
Macintosh Cable Co., Ltd.
Mather & Platt, Ltd.
Positive Lock Washer Co.
Railway and General Engineering Co., Ltd.

Railway and Tramway Plant—*continued.*

Railway Signal Co., Ltd.
Reddaway, F., & Co., Ltd.
Skelton, H. J., & Co., Ltd.
Smethwick Stamping Co , Ltd.
Summerson, Thomas, & Sons, Ltd.
Union Cable Co., Ltd.
United Flexible Metallic Tubing Co., Ltd.
Western Electric Co., Ltd.
Westinghouse Brake and Saxby Signal Co., Ltd.
White, R., & Sons.
Youngs.

Railway Signals and Safety Appliances.

Keay, E. C. & J., Ltd.
Railway Signal Co., Ltd.
Siemens Bros. & Co., Ltd.
Westinghouse Brake and Saxby Signal Co., Ltd.

Railway Stop Blocks.

Summerson, Thomas, & Sons, Ltd.
White, R., & Sons.

Railway Tyres & Axles.

Firth, Thos., & Sons, Ltd.

Railway Wheel Centres.

Firth, Thos., & Sons, Ltd.

Railways: Light, Portable, etc.

Hardy Patent Pick Co., Ltd.

Raw Hide Pinions.

Angus, George, & Co., Ltd.
Buckley, W. W., & Sons.

FOR ADVERTISERS' ADDRESSES AND POSITIONS OF THEIR ANNOUNCEMENTS CONSULT FOREGOING ALPHABETICAL LIST, PAGES 2521 TO 2538.

Reamers and Taps.

Chatwin, Thomas, Ltd.
Firth, Thos., & Sons, Ltd.
Vickers, Ltd.

Recorders (Time).

Gent & Co., Ltd.
Modern Office Equipment Co., Ltd.

Recorders (Water).

Gent & Co., Ltd.
Kent, George, Ltd.
Lea Recorder Co., Ltd.
Palatine Engineering Co., Ltd.

Recording Instruments.

Auto Recorder Co.
Bailey, Sir W. H., & Co., Ltd.
Cambridge & Paul Instrument Co., Ltd.
Evershed & Vignoles, Ltd.
Gent & Co., Ltd.
Heenan & Froude, Ltd.
Kent, George, Ltd.
Lea Recorder Co., Ltd.
Palatine Engineering Co., Ltd.
Sullivan, H. W.
'W. R.' Patents, Ltd.
Weston Electrical Instrument Co., Ltd.

Recovery Plants.

McPhail & Simpson.
Power-Gas Corporation, Ltd. (*'Mond Gas'*).

Reducing Valves.

See VALVES AND COCKS.

Reduction Gears.

Beardmore, Wm., & Co., Ltd.
Pochin, E. Arnold, & Bro.

Refrigerating Machinery.

British Oxygen Co., Ltd.
Brotherhood, Peter, Ltd.
Pulsometer Engineering Co., Ltd.
Sulzer Bros.

Refrigerating Tubes and Coils.

Booth, James, & Co. (1915), Ltd.
Scottish Tube Co., Ltd.

Refuse Destructors.

Heenan & Froude, Ltd.

Regulators (Feed Water).

Crosby Valve and Engineering Co., Ltd.

Reinforced Concrete Construction.

Building Products, Ltd.
Expanded Metal Co., Ltd.
Fram (London), Ltd.
Holst, K. & Co.

Reservoirs (Waterproofing of).

Callender, George M., & Co., Ltd. ('Callendrite').

Respirators.

Siebe, Gorman & Co., Ltd.

Rigging for Aircraft.

Cradock, George, & Co., Ltd.

Riveted Steel Pipes.

Piggott, Thomas, & Co., Ltd.

Riveters (Electric).

United States Metallic Packing Co., Ltd.

Riveters (Hydraulic & Pneumatic).

Arrol, Sir William, & Co., Ltd.
Berry, Henry, & Co., Ltd.
Consolidated Pneumatic Tool Co., Ltd.
Fielding & Platt, Ltd. (Tweddell's System).
Hollings & Guest, Ltd.
Leeds Engineering and Hydraulic Co., Ltd.

Rivets (Iron, Steel, Copper, Naval Brass, etc.).

Automatic Standard Screw Co., Ltd.
Barwells, Ltd.
British Aluminium Co., Ltd.
Periam, Herbert W., Ltd.

Road Tarring Appliances.

Fleming & Co. (Glasgow).

Rock Drills.

Consolidated Pneumatic Tool Co., Ltd.
Fleming & Co. (Glasgow).
Hardy Patent Pick Co., Ltd.
Ingersoll-Rand Co., Ltd.

'Rok' Roofing.

Anderson, D., & Son, Ltd.

Rolled Metals.

Earle, Bourne & Co., Ltd. (Brass and Copper).

Rolling Mill Engines.

Galloways, Ltd.
Hick, Hargreaves & Co., Ltd.

Rolling Mills (Electrical Equipment of).

Peebles (Bruce) & Co., Ltd.

Rolling Stock.

See RAILWAY AND TRAMWAY PLANT.

Roofing Compounds.

Building Products, Ltd.

Roofing Contractors.

Anderson, D., & Son, Ltd.
Bell's United Asbestos Co., Ltd. ('Poilite').

Roofing Contractors—*continued.*

British Fibrocement Works, Ltd.
Butler, Samuel, & Co., Ltd.
Callender, George M., & Co., Ltd.
Findlay, Alex., & Co., Ltd.
Fram (London), Ltd.
Keay, E. C. & J., Ltd.
Redpath, Brown & Co., Ltd.
Ruberoid Co., Ltd.

Roofing Felts.

Anderson, D., & Son, Ltd.
Building Products, Ltd.

Roofs, Iron Buildings, etc.

Anderson, D., & Son, Ltd.
Bell's United Asbestos Co., Ltd. ('Poilite').
British Aluminium Co., Ltd.
Butler, Samuel, & Co., Ltd.
Expanded Metal Co., Ltd.
Findlay, Alex., & Co., Ltd.
Fram (London), Ltd.
Gibbons Bros., Ltd.
Harley, Conyngham & Watt, Ltd.
Heenan & Froude, Ltd.
Henderson & Glass.
Keay, E. C. & J., Ltd.
Redpath, Brown & Co., Ltd.
Ruberoid Co., Ltd.
Skelton, R. A., & Co.
Thompson, John (Wolverhampton), Ltd.
Ward, Thos. W., Ltd.

Rope Pulleys.

See BELT AND ROPE PULLEYS.

Ropes: Wire, Hemp, Manilla, Leather, Cotton, and Asbestos.

Allan, Whyte & Co., Ltd.
Angus, George, & Co., Ltd.
Bruntons.

Ropes: Wire, Hemp, Manilla, Leather, Cotton and Asbestos— *continued.*

Bullivant & Co., Ltd.
Cradock, George, & Co., Ltd. (Steel Wire).
Hart, Thomas, Ltd. ('Lambeth' Cotton).
Kenyon, Wm., & Sons, Ltd. (Patent Inter-Stranded Cotton).
Newall, R. S., & Son, Ltd.
Shropshire Iron Co., Ltd.
Whitecross Co., Ltd.
Willcox, W. H., & Co., Ltd.
Wright, John & Edwin, Ltd.

Ropeways (Aerial).

See AERIAL ROPEWAYS.

'Rosseline' (for Gas and Oil Engines).

Boilerine, Ltd.

Rotary Converters.

Ateliers de Constructions Electriques de Charleroi.
Peebles (Bruce) & Co., Ltd.
Vickers, Ltd.

'Ruberoid' Roofing.

Ruberoid Co., Ltd.

Rust Preventives.

Callender, G. M., & Co., Ltd. ('Bitusol').
Crockatt, W., & Sons, Ltd. (Anti-Rust Varnish).
Graphite Products, Ltd.
Pegg & Ellam Jones, Ltd.
Pinchin, Johnson & Co., Ltd. ('Minerva' and 'Syronite').

Rustless Steel.

Firth, Thos., & Sons, Ltd.

Saws for Wood & Metal Cutting.

Firth, Thos., & Sons, Ltd.

Scale and Corrosion in Boilers (Preventives of).

Bakers (Leeds), Ltd.
Boilerine, Ltd.
Hudson Economiser Co.
Hulburd Engineering Co., Ltd.
Kennicott Water Softener Co.
Royles, Ltd.
Sutcliffe Bros. & Bryce, Ltd.
United Water Softeners, Ltd.

Scaling Tools.

Crockatt, W., & Sons, Ltd.
Gilman, Frank.

Schools and Colleges (Engineering).

Armstrong College, Newcastle-on-Tyne.
Birmingham University.
Crystal Palace School of Practical Engineering, London.
Glasgow Royal Technical College.
Heriot-Watt College, Edinburgh.
Imperial College of Science and Technology, London.
King's College, London.
Leeds University.
Liverpool University.
Loughborough Technical College.
Nottingham University College.
Royal College of Science for Ireland, Dublin.

Scientific Instruments.

Cambridge & Paul Instrument Co., Ltd.
Casella, C. F., & Co., Ltd.
Foster Instrument Co.
Griffin, John J., & Sons, Ltd.
Harling, W. H.
Stanley, W. F., & Co., Ltd.
Steward, J. H., Ltd.
Sugden T., Ltd.
Vickers, Ltd. ('Duralumin' for, Regd. Trade Mark, Vickers' Special Alloy).

FOR ADVERTISERS' ADDRESSES AND POSITIONS OF THEIR ANNOUNCEMENTS, CONSULT FOREGOING ALPHABETICAL LIST, PAGES 2521 TO 2538.

Scrap Metals.

Chalk, Abercrombie & Co. (Iron, Steel, and Non-Ferrous).
Garnham, J. B., & Sons.
Ward, Thos. W., Ltd.

Scrap Presses.

Hollings & Guest, Ltd.

Screw Propellers.

Bull's Metal and Melloid Co., Ltd.
Firth, Thos., & Sons, Ltd.
Hadfields, Ltd.
Howden, James, & Co., Ltd.
Manganese Bronze and Brass Co., Ltd.
North Eastern Marine Engineering Co., Ltd.
Thornycroft, John I., & Co., Ltd.

Screwing Machines.

Chatwin, Thomas, Ltd.
Winn, Charles, & Co., Ltd.

Screwing Oil.

Sterns, Ltd. ('Screwol').

Screws (Iron, Steel, Copper, & Naval Brass).

Automatic Standard Screw Co., Ltd.
Barwells, Ltd.
Horton & Son, Ltd.
Periam, Herbert W., Ltd.

Searchlights (Oxy-Acetylene).

Acetylene Corporation of Gt. Britain Ltd.
Chance Brothers & Co., Ltd.

Sections and Rods (Extruded), Brass, Bronze, etc.

Delta Metal Co., Ltd.
Phosphor Bronze Co., Ltd.
United Brassfounders and Engineers, Ltd.

Sections (Steel).

Bruntons.
Keay, E. C. & J., Ltd.
Redpath, Brown & Co., Ltd.

Semi-Diesel Engines.

See DIESEL AND SEMI-DIESEL ENGINES.

Separation of Oil from Condensed Steam.

Bakers (Leeds), Ltd.
Hudson Economiser Co.
Kennicott Water Softener Co.
North Eastern Marine Engineering Co., Ltd.
Premier Cooler and Engineering Co., Ltd.
Royles, Ltd.
United Water Softeners, Ltd.

Separators (Magnetic).

Hardy Patent Pick Co., Ltd.
Rapid Magnetting Machine Co., Ltd.

Settings (Boiler).

Pearson, E. J. & J., Ltd.

Settings (Retort).

Gibbons Bros., Ltd.

Sewage Purification.

Activated Sludge, Ltd. (*Activated Sludge Process*).
Buxton Lime Firms Co., Ltd.

Shafting and Gearing.

Andrews, Thomas, & Co., Ltd.
Angus, George, & Co., Ltd.
Beardmore, Wm., & Co., Ltd.
British Hele-Shaw Patent Clutch Co., Ltd.
Daglish, Robt., & Co., Ltd.
Electro-Metals, Ltd.

Shafting and Gearing—*continued.*

Firth, Thos., & Sons, Ltd.
Govan Shafting & Engineering Co., Ltd.
Hadfields, Ltd.
Hardy Patent Pick Co., Ltd.
Kirkstall Forge, Ltd.
North Eastern Marine Engineering Co., Ltd. (for Marine purposes).
Power Plant Co., Ltd.
Robertson, Wm., Ltd.
Westinghouse Brake and Saxby Signal Co., Ltd.

Shearing, Punching, Bending, and Shaping Machines.

Berry, Henry, & Co., Ltd.
Fielding & Platt, Ltd.
Leeds Engineering and Hydraulic Co., Ltd.
Youngs.

Sheet Metal Work, Cylinder Cases, etc.

Greening, N., & Sons, Ltd.
Kenyon, Wm., & Sons, Ltd.

Shell Presses.

Hollings & Guest, Ltd.

Ship Builders.

Beardmore, Wm., & Co., Ltd.
Cammell, Laird & Co., Ltd.
Cochran & Co. (Annan), Ltd.
Doxford, William, & Sons, Ltd.
Spencer-Bonecourt, Ltd.
Swan, Hunter, & Wigham Richardson, Ltd.
Thornycroft, John I., & Co., Ltd.
Vickers, Ltd.
White, J. Samuel, & Co., Ltd.
Yarrow & Co., Ltd.

Ship and Engine Repairers.

Beardmore, Wm., & Co., Ltd.
North Eastern Marine Engineering Co., Ltd. (Engines).
Swan, Hunter, & Wigham Richardson, Ltd.
Thornycroft, John I., & Co., Ltd.
Vickers, Ltd.
Yarrow & Co., Ltd.

Shipping Tackle.

Wright, Joseph, & Co., Ltd.

Ships' Insulation.

Anderson, Thomas, Ltd.

Shipyard Furnaces.

Muir, Murray & Co.

Shoes and Dies.

Firth, Thos., & Sons, Ltd.

Siemens Martin Steel.

Firth, Thos., & Sons, Ltd.

Sieves and Screens.

Greening, N., & Sons, Ltd.
Potter, F. W., & Co.

Signals.

See Railway Signals.

Silicate Cotton and Slag Wool Coverings.

Kenyon, Wm., & Sons, Ltd.
Sutcliffe Bros. & Bryce, Ltd.

Slide Rules.

See Instruments, Mathematical, etc.

Slide Valves.

Bailey, Sir W. H., & Co., Ltd.
Bull's Metal and Melloid Co., Ltd.
Hopkinson, J., & Co., Ltd.

Sluice Gates and Valves.

Alley & MacLellan, Ltd.
Boving & Co., Ltd.
Guest & Chrimes, Ltd. (Valves for Water, Steam, Sewage, and Gas).
Premier Cooler and Engineering Co., Ltd.

Smiths' Hearths and Plant.

Hardy Patent Pick Co., Ltd.
Massey, B. & S., Ltd.

Smoke Helmets.

Siebe, Gorman & Co., Ltd.

Smoke Preventers and Steam Generators.

British Niclausse Boiler Co., Ltd.
Central Heating Co., Ltd.
Green, E., & Son, Ltd.
Heenan & Froude, Ltd.
Howden, James, & Co., Ltd.

Soldering Machines.

Gilkes, Gilbert, & Co., Ltd.

Solid Rubber Cables.

See CABLES.

Soot Removers.

Willcox, W. H., & Co., Ltd.

'Speedicut' High-Speed Steel.

Firth, Thos., & Sons, Ltd.

'Speedicut' High-Speed Tools.

Firth, Thos., & Sons, Ltd.

Spraying Machines.

Aerograph Co., Ltd.
Building Products, Ltd.
Wells, A. C., & Co.

Springs.

Cockburns, Ltd.
Lancaster & Tonge, Ltd. (all descriptions).
Skelton, H. J., & Co., Ltd.

Sprinklers (Automatic).

Mather & Platt, Ltd. ('Grinnell').

Spur and Bevel Gearing.

Angus, George, & Co., Ltd.
Buckley, W. W., & Sons.
Daglish, Robt., & Co., Ltd.
Pochin, E. Arnold, & Bro.
Power Plant Co., Ltd.

Squares.

Starrett, L. S., Co. (Great Britain), Ltd.

Stainless and Rustless Steel.

Firth, Thos., & Sons, Ltd.

Staircases (Fire-resisting).

Expanded Metal Co., Ltd.
Fram (London), Ltd.

Stair Treads.

British Aluminium Co., Ltd.
Dexine, Ltd.
Potter, F. W., & Co.

FOR ADVERTISERS' ADDRESSES AND POSITIONS OF THEIR ANNOUNCEMENTS, CONSULT FOREGOING ALPHABETICAL LIST, PAGES 2521 TO 2538.

Stampings.

Ackroyd & Best, Ltd.
Armstrong, Sir W. G., Whitworth & Co., Ltd.
Automatic Standard Screw Co., Ltd.
Delta Metal Co., Ltd.
Horton & Son, Ltd.
Smethwick Stamping Co., Ltd.
Vickers, Ltd.

Stamps (Friction and Steam Drop).

Massey, B. & S., Ltd.

Stanchions (Steel).

Findlay, Alex., & Co., Ltd.
Henderson & Glass.
Keay, E. C. & J., Ltd.
Redpath, Brown & Co., Ltd.
Skelton, R. A., & Co.
Ward, Thos. W., Ltd.

Steam Boilers.

See BOILER MANUFACTURERS.

Steam, Compressed Air, and Pneumatic Power Hammers.

Massey, B. & S., Ltd.
Player, W. & J.

Steam Diesel Engines.

Carels Diesel & Steam Engines (London), Ltd.

Steam Dryers and Purifiers.

Alley & MacLellan, Ltd.
Bakers (Leeds), Ltd.
Foster Brothers, Ltd.
Hopkinson, J., & Co., Ltd.
Lancaster & Tonge, Ltd.
North Eastern Marine Engineering Co., Ltd.
Royles, Ltd.
United States Metallic Packing Co., Ltd.

Steam Engines.

Babcock & Wilcox, Ltd.
Beardmore, Wm., & Co., Ltd.
Belliss & Morcom, Ltd.
Brotherhood, Peter, Ltd.
Carels Diesel & Steam Engines (London), Ltd. (Drop Valve and Uniflow).
Clarke, Chapman & Co., Ltd.
Cochran & Co. (Annan), Ltd.
Cooper & Greig, Ltd. (Marine).
Daglish, Robt., & Co., Ltd.
Davey, Paxman & Co., Ltd.
Fielding & Platt, Ltd.
Galloways, Ltd.
Hick, Hargreaves & Co., Ltd.
Howden, James, & Co., Ltd.
North Eastern Marine Engineering Co., Ltd.
Ransomes, Sims & Jefferies, Ltd.
Robey & Co., Ltd.
Sulzer Bros.
Swan, Hunter, & Wigham Richardson, Ltd.
Thompson, John (Wolverhampton), Ltd.
Thornycroft, John I., & Co., Ltd.
Vickers, Ltd.
Ward, Thos. W., Ltd.
White, J. Samuel, & Co., Ltd.
Yarrow & Co., Ltd.

Steam Gauges, Cocks, Water Gauges, Safety Valves, Slide Valves, Indicators, Steam Traps, etc.

Alley & MacLellan, Ltd.
Bailey, Sir W. H., & Co., Ltd.
Bakers (Leeds), Ltd.
Cockburns, Ltd.
Crane-Bennett, Ltd.
Crockatt, W., & Sons, Ltd.
Crosby Valve and Engineering Co., Ltd.

FOR ADVERTISERS' ADDRESSES AND POSITIONS OF THEIR ANNOUNCEMENTS, CONSULT FOREGOING ALPHABETICAL LIST, PAGES 2521 TO 2538.

Steam Gauges, Cocks, Water Gauges, Safety Valves, Slide Valves, Indicators, Steam Traps, etc.—*cont.*

Dexine, Ltd.
Hopkinson, J., & Co., Ltd.
Hulburd Engineering Co., Ltd.
Lancaster & Tonge, Ltd.
Premier Cooler and Engineering Co., Ltd. (Steam Traps).
Royles, Ltd.
Tomey, Joseph, & Sons, Ltd. (Makers of all classes of Pressure and Hydraulic Gauges).
United Brassfounders and Engineers, Ltd. (Pressure and Vacuum).
United States Metallic Packing Co., Ltd. ('Bradford' Steam Trap).
Westinghouse Brake and Saxby Signal Co., Ltd.
Willcox, W. H., & Co., Ltd.
Winn, Charles, & Co., Ltd.
Woodite Co.

Steam Hammers.

See HAMMERS

Steam Heating Tubes (Flexible).

United Flexible Metallic Tubing Co., Ltd.

Steam Injectors.

Bailey, Sir W. H., & Co., Ltd.
Hopkinson, J., & Co., Ltd.
Thompson, John (Wolverhampton), Ltd.
United Brassfounders and Engineers, Ltd.
White's Injectors, Ltd.
Willcox, W. H., & Co., Ltd.

Steam Jointing.

See JOINTING MATERIALS.

Steam Meters.

Kent, George, Ltd.

Steam Packing.

Angus, George, & Co., Ltd.
Attwater & Sons.
Beldam Packing and Rubber Co., Ltd.
British Fibrocement Works, Ltd.
Dexine, Ltd.
Henley's, W. T., Telegraph Works Co., Ltd.
Hind, John, & Sons, Ltd.
Hulburd Engineering Co., Ltd.
India Rubber, Gutta Percha, and Telegraph Works Co., Ltd.
Lancaster & Tonge, Ltd.
Reddaway, F., & Co., Ltd.
Sterns, Ltd.
United Kingdom Metallic Packing Syndicate, Ltd.
United States Metallic Packing Co., Ltd.
Walker, James, & Co., Ltd. ('Lion').
Willcox, W. H., & Co., Ltd.
Winn, Charles, & Co., Ltd.
Woodite Co.

Steam Packing ('Lion').

Walker, James, & Co., Ltd.

Steam Pipes.

See TUBES.

Steam Pumps.

See PUMPS.

Steam Saving Appliances.

Ashwell & Nesbit, Ltd.

Steam Ships, Launches, and Yachts.

Beardmore, Wm., & Co., Ltd.
Cochran & Co. (Annan), Ltd.
Swan, Hunter, & Wigham Richardson, Ltd.
Thornycroft, John I., & Co., Ltd.

FOR ADVERTISERS' ADDRESSES AND POSITIONS OF THEIR ANNOUNCEMENTS, CONSULT FOREGOING ALPHABETICAL LIST, PAGES 2521 TO 2538.

Steam Ships, Launches, and Yachts —*continued.*

Vickers, Ltd.
White, J. Samuel, & Co., Ltd.
Yarrow & Co., Ltd.

Steam Traps.

See Steam Gauges, etc.

Steam Turbines and Fittings.

Beardmore, Wm., & Co., Ltd.
Belliss & Morcom, Ltd.
British Ljungstrom Marine Turbine Co., Ltd.
Brotherhood, Peter, Ltd.
Cockburns, Ltd.
Howden, James, & Co., Ltd.
Mather & Platt, Ltd.
Metropolitan-Vickers Electrical Co., Ltd.
North Eastern Marine Engineering Co., Ltd.
Rees Roturbo Manufacturing Co., Ltd. (Turbines up to 200 H.P.).
Richardsons, Westgarth & Co., Ltd.
Sturtevant Engineering Co., Ltd.
Swan, Hunter, & Wigham Richardson, Ltd.
Thornycroft, John I., & Co., Ltd.
Vickers, Ltd.
White, J. Samuel, & Co., Ltd.
Yarrow & Co., Ltd.

Steel (Blooms and Billets).

Beardmore, Wm., & Co., Ltd.
Cradock, George, & Co., Ltd.

Steel Conduits for Electric Wiring.

General Electric Co., Ltd.
Simplex Conduits, Ltd.
Stewarts & Lloyds, Ltd.

Steel Forgings and Castings.

See Castings and Forgings.

Steel Manufacturers and Merchants.

Andrews, Thomas, & Co., Ltd.
Armstrong, Sir W. G., Whitworth & Co., Ltd.
Atlas Steel Foundry & Engineering Co., Ltd.
Beardmore, Wm., & Co., Ltd.
Cammell, Laird & Co., Ltd.
Cradock, George, & Co., Ltd. (Nickel and other Alloy Steels).
Firth, Thos., & Sons, Ltd.
Hadfields, Ltd.
Halesowen Steel Co., Ltd.
Hardy Patent Pick Co., Ltd.
Henderson & Glass.
'J. B. R.' Tool Co., Ltd.
Jackman, Joseph, & Co., Ltd.
Keay, E. C. & J., Ltd.
Kirkstall Forge, Ltd.
Redpath, Brown & Co., Ltd.
Robertson, Wm., Ltd.
Sanderson Bros. & Newbould, Ltd.
Shropshire Iron Co., Ltd.
Skelton, H. J., & Co., Ltd.
Skelton, R. A., & Co.
Stewarts & Lloyds, Ltd.
Talbot-Stead Tube Co., Ltd.
Vickers, Ltd.
Ward, Thos. W., Ltd.

Steel Rails and Accessories.

Beardmore, Wm., & Co., Ltd.
Hadfields, Ltd.
Railway and General Engineering Co., Ltd.
Skelton, H. J., & Co., Ltd.
Summerson, Thomas, & Sons, Ltd.
White, R., & Sons.

Steel Rods.

Firth, Thos., & Sons, Ltd.

For Advertisers' Addresses and positions of their announcements, consult foregoing Alphabetical List, pages 2521 to 2538.

Steel Rules.

Starrett, L. S., Co. (Great Britain), Ltd.

Steel Sheet Piling.

Ransome Machinery Co. (1920), Ltd.
Side Groove Steel Piling Supply Co., Ltd.

Steel Tubes.

See TUBES AND FITTINGS.

Stokers (Mechanical).

See MECHANICAL STOKERS.

Stone Channelling Machines.

Fleming & Co. (Glasgow).

Stone Pulverizing Mills.

Patent Lightning Crusher Co., Ltd.

Stop and Sluice Valves.

United Brassfounders and Engineers, Ltd.

Storage Battery Switchboards.

Hart Accumulator Co., Ltd.

Storage Cells and Batteries.

Chloride Electrical Storage Co., Ltd.
English Electric Co., Ltd.
Eyre Smelting Co., Ltd. (Zincs for).
General Electric Co., Ltd.
Hart Accumulator Co., Ltd.
India Rubber, Gutta Percha, and Telegraph Works Co., Ltd.
Siemens Bros. & Co., Ltd.

Stoves.

Hollings & Guest, Ltd.
Radiation, Ltd.

Strainmeters.

Foster Instrument Co.

Structural Iron and Steel Work, etc.

Babcock & Wilcox, Ltd.
Bennis, Ed., & Co., Ltd.
British Niclausse Boiler Co., Ltd.
Butler, Samuel, & Co., Ltd.
Expanded Metal Co., Ltd.
Findlay, Alex., & Co., Ltd.
Fram (London), Ltd.
Gibbons Bros., Ltd.
Hadfields, Ltd.
Hardy Patent Pick Co., Ltd.
Harley, Conyngham & Watt, Ltd.
Heenan & Froude, Ltd.
Henderson & Glass.
Jenkins, W. J., & Co., Ltd. (for Coke Ovens and Gas Works).
Keay, E. C. & J., Ltd.
Railway and General Engineering Co. Ltd.
Redpath, Brown & Co., Ltd.
Skelton, H. J., & Co., Ltd.
Skelton, R. A., & Co.
Thompson, John (Wolverhampton), Ltd.
Ward, Thos. W., Ltd.

Submarine Cables.

See CABLES.

Suction Gas Plants.

Appleby, E. G., & Co., Ltd.
Campbell Gas Engine Co., Ltd.
Crossley Brothers, Ltd.
Davey, Paxman & Co., Ltd.
Dowson & Mason Gas Plant Co., Ltd.
Fielding & Platt, Ltd.
Mirrlees, Bickerton & Day, Ltd.
Power-Gas Corporation, Ltd. (' *Mond Gas* ').
Ruston & Hornsby, Ltd.

FOR ADVERTISERS' ADDRESSES AND POSITIONS OF THEIR ANNOUNCEMENTS, CONSULT FOREGOING ALPHABETICAL LIST, PAGES 2521 TO 2538.

Sugar Mills and Machinery.

Harley, Conyngham & Watt, Ltd.
Mirrlees Watson Co., Ltd.
Robey & Co., Ltd.
Ruston & Hornsby, Ltd.

Sulphuric Acid.

Berk, F. W., & Co., Ltd.
District Chemical Co., Ltd.
Hart Accumulator Co., Ltd.

Superheaters and Steam Pipes.

Babcock & Wilcox, Ltd.
British Niclausse Boiler Co., Ltd.
Clarke, Chapman & Co., Ltd.
Davey, Paxman & Co., Ltd.
Galloways, Ltd.
Gordon, James, & Co., Ltd.
Gordon Superheating Co.
Howden, James, & Co., Ltd.
Hulburd Engineering Co., Ltd.
Marine & Locomotive Superheaters, Ltd.
McPhail & Simpson.
North Eastern Marine Engineering Co., Ltd.
Spencer-Bonecourt, Ltd.
Stirling Boiler Co., Ltd.
Sugden, T., Ltd.
Superheater Corporation, Ltd.
Superheater Units, Ltd.
Thompson, John (Wolverhampton), Ltd.
Yarrow & Co., Ltd.

Surface Combustion.

Spencer - Bonecourt, Ltd. (Kirke's Patents).

Surface Gauges.

Starrett, L. S., Co. (Great Britain), Ltd.

Surveying and Drawing Instruments.

Adie, Patrick.
Cambridge & Paul Instrument Co., Ltd.
Casella, C. F., & Co., Ltd.
Griffin, John J., & Sons, Ltd.
Harling, W. H.
Stanley, W. F., & Co., Ltd.
Steward, J. H., Ltd.

Switch Gear.

Crompton & Co., Ltd.
Electric Control, Ltd.
Elliston, Evans & Jackson, Ltd.
English Electric Co., Ltd.
Potter, F. W., & Co.

'Syronite' Rust Preventive.

Pinchin, Johnson & Co., Ltd.

Tachometers.

Boving & Co., Ltd.
Electro-Metals, Ltd.
Markt & Co. (London), Ltd.

Tanks and Cisterns.

Cradley Boiler Co., Ltd.
Harvey, G. A., & Co. (London), Ltd.
Holst, K., & Co.
Piggott, Thomas, & Co., Ltd. (Patent Pressed Steel).

Taps and Dies.

Chatwin, Thomas, Ltd.

Tar Distillation and Dehydrating Plants.

Harley, Conyngham & Watt, Ltd.
Power-Gas Corporation, Ltd. (*'Mond Gas'*).

Tar Extractors.

Dempster, R. & J., Ltd.
Jenkins, W. J., & Co., Ltd.
Power-Gas Corporation, Ltd. (*'Mond Gas'*).

FOR ADVERTISERS' ADDRESSES AND POSITIONS OF THEIR ANNOUNCEMENTS, CONSULT FOREGOING ALPHABETICAL LIST, PAGES 2521 TO 2538.

Tar Macadam & Asphalt Plants.

Ransome Machinery Co. (1920), Ltd

Tea Shoots.

Cradock, George, & Co., Ltd.

Technical Training.

See SCHOOLS AND COLLEGES.

Telegraph Engineers.

Craigpark Electric Cable Co., Ltd.
General Electric Co., Ltd.
Henley's, W. T., Telegraph Works Co., Ltd.
India Rubber, Gutta Percha, and Telegraph Works Co., Ltd.
Johnson & Phillips, Ltd.
Liverpool Electric Cable Co., Ltd.
Macintosh Cable Co., Ltd.
St. Helens Cable and Rubber Co., Ltd.
Siemens Bros. & Co., Ltd.
Sullivan, H. W.
Union Cable Co., Ltd.
Western Electric Co., Ltd.

Telegraph Insulator Bolts and all kinds of Ironwork for Telegraph and Telephone.

Henley's, W. T., Telegraph Works Co., Ltd.
Horton & Son, Ltd.
India Rubber, Gutta Percha, and Telegraph Works Co., Ltd.
Johnson & Phillips, Ltd.
Siemens Brothers & Co., Ltd.

Telegraph Poles (Iron).

Siemens Bros. & Co., Ltd.

Telegraph Wire.

See WIRE.

Telephone Equipment.

General Electric Co., Ltd.
Gent & Co., Ltd.
Henley's, W. T., Telegraph Works Co., Ltd.
Siemens Bros. & Co., Ltd.
Sullivan, H. W.
Western Electric Co., Ltd.

Telphers.

Dempster, Robert, & Sons, Ltd.
Jenkins, W. J., & Co., Ltd.

Tempering Furnaces.

See FURNACES.

Testing Instruments (Electrical).

See INSTRUMENTS.

Testing Machines.

Foster Instrument Co.

Testing Machines for Portland Cement.

Adie, Patrick.
Bailey, Sir W. H., & Co., Ltd.

Textile Machinery.

Mather & Platt, Ltd.

'Thermit' Welding.

British Barimar-Thermit Welding Co., Ltd.

Thermometers.

Cambridge & Paul Instrument Co., Ltd.
Casella, C. F., & Co., Ltd.
Foster Instrument Co.
Griffin, John J., & Sons, Ltd.
Harling, W. H.

Thermometers—*continued.*

Siemens Bros. & Co., Ltd.
Stanley, W. F., & Co., Ltd.
Steward, J. H., Ltd.
Sugden, T., Ltd.

Thrust Bearings.

Skefko Ball Bearing Co., Ltd.
Vickers, Ltd.

Time Recorders.

Gent & Co., Ltd.
Modern Office Equipment Co., Ltd.

Tip Wagons.

Ransome Machinery Co. (1920), Ltd.
White, R., & Sons.

Tool Makers, Machinists, etc.

Armstrong, Sir W. G., Whitworth & Co., Ltd.
Beardmore, Wm., & Co., Ltd.
Berry, Henry, & Co., Ltd.
Chatwin, Thomas, Ltd.
Clarke, Chapman & Co., Ltd.
Consolidated Pneumatic Tool Co., Ltd.
Crockatt, W., & Sons, Ltd.
English Electric Co., Ltd.
Fielding & Platt, Ltd.
Firth, Thos., & Sons, Ltd.
Gilman, Frank.
Hardy Patent Pick Co., Ltd.
Hind, John, & Sons, Ltd.
'J. B. R.' Tool Co., Ltd.
Jackman, Joseph, & Co., Ltd.
Jones, A. A., & Shipman, Ltd.
Leeds Engineering and Hydraulic Co., Ltd.
Massey, B. & S., Ltd.
Mitchell's Emery Wheel Co.
Player, W. & J.

Tool Makers, Machinists, etc.—*continued.*

Ransomes, Sims & Jefferies, Ltd.
Shaw, John, & Sons (Wolverhampton), Ltd.
Siemens Bros. & Co., Ltd.
Simplex Conduits, Ltd.
Starrett, L. S., Co. (Great Britain), Ltd.
Tullis, D. & J., Ltd. (Radial, Vertical, and Horizontal).
United States Metallic Packing Co., Ltd.
Ward, Thos. W., Ltd.
Westminster Tool and Electric Co.
Willcox, W. H., & Co., Ltd.
Winn, Charles, & Co., Ltd.
Youngs.

Tool Steel.

Andrews, Thomas, & Co., Ltd.
Armstrong, Sir W. G., Whitworth & Co., Ltd.
Firth, Thos., & Sons, Ltd. (High Speed and Carbon).
Hadfields, Ltd.
Hardy Patent Pick Co., Ltd.
'J.B. R.' Tool Co., Ltd.
Jackman, Joseph, & Co., Ltd.
Sanderson Brothers & Newbould, Ltd.
Vickers, Ltd.

Torpedo Defence Nets.

Bullivant & Co., Ltd.

Traction Engines (Steam and Electric).

Davey, Paxman & Co., Ltd.
Ransomes, Sims & Jefferies, Ltd.
Robey & Co., Ltd.
Ruston & Hornsby, Ltd.
Vickers-Petters, Ltd.

FOR ADVERTISERS' ADDRESSES AND POSITIONS OF THEIR ANNOUNCEMENTS, CONSULT FOREGOING ALPHABETICAL LIST, PAGES 2521 TO 2538.

Tractor Lubricants.

Sterns, Ltd.

Train Lighting Plant.

Vickers, Ltd.

Tramways & Railways (Electrical).

See ELECTRIC RAILWAYS AND TRAMWAYS.

Tramways (Steel Wire Ropes for).

Bruntons.
Bullivant & Co., Ltd.
Cradock, George, & Co., Ltd.
Whitecross Company, Ltd.
Wright, John & Edwin, Ltd.

Tramways (Wire Rope).

Bruntons.
Bullivant & Co., Ltd.

Tube Cleaners.

Crockatt, W., & Sons, Ltd.
Gilman, Frank.
Hulburd Engineering Co., Ltd.
Willcox, W. H., & Co., Ltd.

Tubes and Fittings.

Babcock & Wilcox, Ltd.
British Aluminium Co., Ltd.
British Niclausse Boiler Co., Ltd.
Broughton Copper Co., Ltd.
Bull's Metal and Melloid Co., Ltd.
Clay Cross Co., Ltd. (Cast Iron).
Crane-Bennett, Ltd. (Malleable and Soft Cast Iron).
Deighton's Patent Flue and Tube Co., Ltd.
Earle, Bourne & Co., Ltd. (Brass and Copper).
Foster Brothers, Ltd. (Iron and Steel).

Tubes and Fittings—*continued.*

Gordon Superheating Co. (Steam Pipes).
Leeds Engineering and Hydraulic Co., Ltd.
McPhail & Simpson.
Royles, Ltd.
Russell, John, & Co., Ltd. (Solid Drawn Seamless Steel, High Pressure Tubes, for Steam, Water, and Electric Power Installations).
Scottish Tube Co., Ltd. (Iron and Steel).
Stewarts & Lloyds, Ltd. (Iron and Steel).
Talbot-Stead Tube Co., Ltd. (Iron and Steel).
Tubes, Ltd. (Iron and Steel).
United Flexible Metallic Tubing Co., Ltd.
Vickers, Ltd. (Weldless Drawn Steel).
Weldless Steel Tube Co., Ltd. (Iron and Steel).

See also STEEL CONDUITS.

Tubes (Pneumatic).

Booth, James, & Co. (1915), Ltd.
Lamson Pneumatic Tube Co., Ltd.

Tubing (Flexible Metallic).

United Flexible Metallic Tubing Co., Ltd.

Tunnelling Plants.

Fleming & Co. (Glasgow).

Turbine Blading.

Bruntons.

Turbine Gears.

See GEARED TURBINES.

Turbine Pumps.

Pulsometer Engineering Co., Ltd.

Turbines (Steam).

See STEAM TURBINES.

Turbines, Water Wheels, and Water Motors.

Armstrong, Sir W. G., Whitworth & Co., Ltd.
Boving & Co., Ltd.
Gilkes, Gilbert, & Co., Ltd.
Gordon, James, & Co., Ltd.
Hay, Maryon & Co., Ltd.
Howden, James, & Co., Ltd.
Howes, S., Co.

Turbo Alternators.

Metropolitan-Vickers Electrical Co., Ltd.
Peebles (Bruce) & Co., Ltd.
Vickers, Ltd.

Turbo Generators.

See DYNAMOS AND MOTORS.

Turbo Pumps.

Boving & Co., Ltd.
Mather & Platt, Ltd.
Metropolitan-Vickers Electrical Co., Ltd.
Rees Roturbo Manufacturing Co., Ltd.
Weir, G. & J., Ltd.

Turned Work (any Metal).

Automatic Standard Screw Co., Ltd.

Turntables.

Summerson, Thomas, & Sons, Ltd.
White, R., & Sons.

'Tweddell's System,' Hydraulic Machinery.

Fielding & Platt, Ltd.

Twist Drills.

Firth, Thos., & Sons, Ltd.
Hunton, C. A., & Sons.
Shaw, John, & Sons (Wolverhampton), Ltd.
Vickers, Ltd.

Typewriters.

Modern Office Equipment Co., Ltd.

Tyre Presses.

Hollings & Guest, Ltd.
North British Rubber Co., Ltd. (For affixing Band Tyres to Vehicle Wheels).

Underframes and Bogies.

Findlay, Alex., & Co., Ltd.

Vacuum and Steam Traps.

Bailey, Sir W. H., & Co., Ltd.
Premier Cooler and Engineering Co., Ltd.
United States Metallic Packing Co., Ltd.

Vacuum Evaporators for Chemical Liquids.

Harley, Conyngham & Watt, Ltd.
Mirrlees Watson Co., Ltd.

Vacuum Pans (Concentrating).

Mirrlees Watson Co., Ltd.

Vacuum Pumps.

See PUMPS.

Valve Castings.

Firth, Thos., & Sons, Ltd.

Valve Reseaters.

Crockatt, W., & Sons, Ltd.
Winn, Charles, & Co., Ltd.

Valves and Cocks.

Alley & MacLellan, Ltd.
Angus, George, & Co., Ltd.
Bailey, Sir W. H., & Co., Ltd.
Beldam Packing and Rubber Co., Ltd.
Cockburns, Ltd.
Crane-Bennett, Ltd.

FOR ADVERTISERS' ADDRESSES AND POSITIONS OF THEIR ANNOUNCEMENTS, CONSULT FOREGOING ALPHABETICAL LIST, PAGES 2521 TO 2538.

Valves and Cocks—*continued.*

Crosby Valve and Engineering Co., Ltd.
Crockatt, W., & Sons, Ltd.
Dexine, Ltd.
Dowson & Mason Gas Plant Co., Ltd. (Gas).
Fielding & Platt, Ltd.
Hopkinson, J., & Co., Ltd.
Hulburd Engineering Co., Ltd.
India Rubber, Gutta Percha, and Telegraph Works Co., Ltd.
Leeds Engineering and Hydraulic Co., Ltd.
North British Rubber Co., Ltd. (Rubber Valves).
Palatine Engineering Co., Ltd.
Power-Gas Corporation, Ltd. ('*Mond Gas*') (Gas).
Reddaway, F., & Co., Ltd.
Royles, Ltd.
United Brassfounders and Engineers, Ltd.
Walker, James, & Co., Ltd.
Weir, G. & J., Ltd.
Willcox, W. H., & Co., Ltd.
Winn, Charles, & Co., Ltd.
Woodite Co.

Variable Capacity Pressure Pumps.

Hydraulic Gears, Ltd.

Variable Speed Oil Transmission Gears.

Hydraulic Gears, Ltd.

Varnishes.

Crockatt, W., & Sons, Ltd. (Anti-Rust Varnish).
Pegg & Ellam Jones, Ltd.
Pinchin, Johnson & Co., Ltd. ('Minerva').

Ventilating Engineers.

Ashwell & Nesbit, Ltd.
Boyle, Robert, & Son.
Central Heating Co., Ltd.
Heenan & Froude, Ltd.
Howden, James, & Co., Ltd.
Mumford Bailey & Preston.
Musgrave & Co., Ltd.
Potter, F. W., & Co.
Sturtevant Engineering Co., Ltd.

Ventilating, Heating, etc.

Boyle, Robert, & Son.
Central Heating Co., Ltd.
Daglish, Robt., & Co., Ltd.
English Electric Co., Ltd.
General Electric Co., Ltd.
Heenan & Froude, Ltd.
Howden, James, & Co., Ltd.
Mumford Bailey & Preston.
Musgrave & Co., Ltd.
Potter, F. W., & Co.
Royles, Ltd.
Sturtevant Engineering Co., Ltd.
Western Electric Co., Ltd.

Ventilating Shafts.

Harvey, G. A., & Co. (London), Ltd.

Vertical Drilling Machines.

Jones, A. A., & Shipman, Ltd.
Tullis, D. & J., Ltd.

Voltmeters.

See INSTRUMENTS (ELECTRICAL).

Vulcanite and Vulcanised Fibre.

Angus, George, & Co., Ltd.
Attwater & Sons.
India Rubber, Gutta Percha, and Telegraph Works Co., Ltd.
North British Rubber Co., Ltd.
Reddaway, F., & Co., Ltd.

FOR ADVERTISERS' ADDRESSES AND POSITIONS OF THEIR ANNOUNCEMENTS, CONSULT FOREGOING ALPHABETICAL LIST, PAGES 2521 TO 2538.

Wages Calculators.

Gibson, John (Agent for McCorquodale & Co.'s Publications).

Walker's ('Lion') Packings.

Walker, James, & Co., Ltd.

Wall and Ceiling Sheets.

Bell's United Asbestos Co., Ltd. ('Poilite').
British Fibrocement Works, Ltd.

Washers.

Automatic Standard Screw Co., Ltd.
Horton & Son, Ltd.
Periam, Herbert W., Ltd.
Positive Lock Washer Co.

Waste Water Meters.

Palatine Engineering Co., Ltd.

Water Cooling Apparatus.

Heenan & Froude, Ltd.
Hudson Economiser Co.
Premier Cooler and Engineering Co., Ltd.

Water Distilling Apparatus, etc.

Caird & Rayner.
Mirrlees Watson Co., Ltd.
Richardsons, Westgarth & Co., Ltd.
Royles, Ltd.

See also CONDENSERS.

Water Gas Plants.

Dempster, R. & J., Ltd.
Power-Gas Corporation, Ltd. ('*Mond Gas*').

Water Gauges, etc.

See STEAM GAUGES.

Water Level Indicators.

Gent & Co., Ltd.
India Rubber, Gutta Percha, and Telegraph Works Co., Ltd.

Water Meters and Water Fittings.

Gordon, James, & Co., Ltd.
Guest & Chrimes, Ltd.
Kent, George, Ltd.
Palatine Engineering Co., Ltd.

Water Power Engineers.

Boving & Co., Ltd.
Daglish, Robt., & Co., Ltd.
English Electric Co., Ltd.
Gilkes, Gilbert, & Co., Ltd.
Gordon, James, & Co., Ltd.
Hay, Maryon & Co., Ltd.
Howes, S., Co.
Mather & Platt, Ltd.

Water Raising.

Activated Sludge, Ltd.
White's Injectors, Ltd.

Water Recorders.

Bailey, Sir W. H., & Co., Ltd.
Gent & Co., Ltd.
Gordon, James, & Co., Ltd.
Heenan & Froude, Ltd.
Lea Recorder Co., Ltd.
Kent, George, Ltd.
Palatine Engineering Co., Ltd.

Water Regulators.

Crosby Valve and Engineering Co., Ltd. (Feed Water).
Gordon, James, & Co., Ltd.

Water Softening and Purifying Apparatus.

Babcock & Wilcox, Ltd.
Bakers (Leeds), Ltd.
Buxton Lime Firms Co., Ltd. (Lime for).
Caird & Rayner.
Kennicott Water Softener Co.
Mather & Platt, Ltd.
Royles, Ltd. (Reisert's System).
Thompson, John (Wolverhampton), Ltd.
Underfeed Stoker Co., Ltd. ('Usco' System).
United Water Softeners, Ltd. ('Permutit' and 'Lassen-Hjort' Systems).

See also FEED WATER HEATERS, ETC.

Water Towers.

Holst, K., & Co.
Hudson Economiser Co.
Premier Cooler and Engineering Co., Ltd.

Water-Tube Boilers.

See BOILER MANUFACTURERS.

Water Wheels, Water Motors, and Turbines.

Boving & Co., Ltd.
Gilkes, Gilbert, & Co., Ltd.
Gordon, James, & Co., Ltd.
Hay, Maryon & Co., Ltd.
Howden, James, & Co., Ltd.
Howes, S., Co.

Waterproofing Compounds.

Building Products, Ltd.
Callender, George M., & Co., Ltd. ('Callendrite').

Weighing Machines.

Bennis, Ed., & Co., Ltd.
Howes, S., Co.

Welded Steel Pipes.

Harley, Conyngham & Watt, Ltd.
Piggott, Thomas, & Co., Ltd.

Welded Tanks.

Harley, Conyngham & Watt, Ltd.

Welding and Cutting of Metals.

Acetylene Corporation of Gt. Britain, Ltd.
Acme Welding Co., Ltd.
Allen-Liversidge, Ltd.
Alloy Welding Processes, Ltd.
Anglo-Swedish Electric Welding Co., Ltd. (Kjellberg Process).
Barimar, Ltd.
British Oxygen Co., Ltd.
Carbic, Ltd.
Coan, Robert W.
District Chemical Co., Ltd.
Ferrox Company, Ltd.
Harley, Conyngham & Watt, Ltd.
Harvey, G. A., & Co. (London), Ltd.
Hoggett, Young & Co.
Oxhycarbon Co.
Oxy-acetylene Welding Co., Ltd.
Premier Electric Welding Co., Ltd.
Stewarts & Lloyds, Ltd.
Thorn & Hoddle Acetylene Co., Ltd.

Wheel Gearing.

Angus, George, & Co., Ltd.
Atlas Steel Foundry & Engineering Co., Ltd.
Buckley, W. W., & Sons.
Daglish, Robert, & Co., Ltd.
Firth, Thos., & Sons, Ltd.
Hadfields, Ltd.
Kirkstall Forge, Ltd.
Lancaster & Tonge, Ltd.
Pochin, E. Arnold, & Bro.
Power Plant Co., Ltd.

Wheels (Steel).

Atlas Steel Foundry & Engineering Co., Ltd.

White Anti-Friction Metals.

Phosphor Bronze Co., Ltd.

Whiting.

Cement Marketing Co., Ltd.

Winches (Friction).

Ransome Machinery Co. (1920), Ltd.
Side Groove Steel Piling Supply Co., Ltd.

Winding and Hauling Engines and Plant.

Clarke, Chapman & Co., Ltd.
Crompton & Co., Ltd.
Daglish, Robt., & Co., Ltd.
Davey, Paxman & Co., Ltd.
Ferodo, Ltd.
Fullerton, Hodgart & Barclay, Ltd.
Galloways, Ltd.
Hadfields, Ltd.
Heenan & Froude, Ltd.
Power Plant Co., Ltd.
Ransomes, Sims & Jefferies, Ltd.
Robey & Co., Ltd.
Ruston & Hornsby, Ltd.

Winding and Hauling Ropes.

Allan, Whyte & Co., Ltd.
Bruntons (Wire Ropes).
Bullivant & Co., Ltd. (Wire Ropes).
Cradock, George, & Co., Ltd. (Wire Ropes).
Hart, Thomas, Ltd. ('Lambeth' Cotton Ropes).
Kenyon, Wm., & Sons, Ltd. (Cotton Ropes).
Newall, R. S., & Son, Ltd.
Whitecross Co., Ltd.
Wright, John & Edwin, Ltd.

See also ROPES.

Wire Brushes.

Greening, N., & Sons, Ltd.

Wire Gauze.

Greening, N., & Sons, Ltd.
Harvey, G. A., & Co. (London), Ltd.
Potter, F. W., & Co.

Wire Manufacturers.

British Aluminium Co., Ltd.
Bruntons.
Bullivant & Co., Ltd.
Cradock, George, & Co., Ltd. (Iron and Steel).
Delta Metal Co., Ltd.
Firth, Thos., & Sons, Ltd. (Stainless Steel).
London Electric Wire Co. & Smiths, Ltd.
Robertson, Wm., Ltd.
Shropshire Iron Co., Ltd.
Smith, Frederick, & Co.
Whitecross Company, Ltd. (Telegraph).

Wire (Insulated) Manufacturers.

Craigpark Electric Cable Co., Ltd.
English Electric Co., Ltd.
General Electric Co., Ltd.
Henley's, W. T., Telegraph Works Co., Ltd.
India Rubber, Gutta Percha, and Telegraph Works Co., Ltd.
Johnson & Phillips, Ltd.
Liverpool Electric Cable Co., Ltd.
London Electric Wire Co. & Smiths, Ltd.
St. Helens Cable and Rubber Co., Ltd.
Siemens Bros. & Co., Ltd.
Union Cable Co., Ltd.
Western Electric Co., Ltd.

FOR ADVERTISERS' ADDRESSES AND POSITIONS OF THEIR ANNOUNCEMENTS, CONSULT FOREGOING ALPHABETICAL LIST, PAGES 2521 TO 2538.

Wire Rope Tramways.

Bruntons.
Bullivant & Co., Ltd.
Cradock, George, & Co., Ltd.
Wright, John & Edwin, Ltd.

Wire Ropes.

Allan, Whyte & Co., Ltd.
Bruntons.
Bullivant & Co., Ltd.
Cradock, George, & Co., Ltd.
Newall, R. S., & Son, Ltd.
Whitecross Company, Ltd.
Wright, John & Edwin, Ltd. (Flattened Strand & Locked Coil).

Wire Ropeways.

Bruntons.
Bullivant & Co., Ltd.
Cradock, George, & Co., Ltd.
White, R., & Sons.
Wright, John & Edwin, Ltd.

Wire Work and Woven Wire.

Greening, N., & Sons, Ltd.
Harvey, G. A., & Co. (London), Ltd.
Potter, F. W., & Co.

Wireless Telegraphy Apparatus.

Gent & Co., Ltd.
Siemens Bros. & Co., Ltd.
Sullivan, H. W.

Wiring Systems (Flexible).

Henley's, W. T., Telegraph Works Co., Ltd.
St. Helens Cable and Rubber Co., Ltd.
Siemens Bros. & Co., Ltd.

'Woodite,' for Steam, Electrical, and Hydraulic Packings.

Woodite Co.

Wood Preservatives.

Sterns, Ltd.

Wood-Working Machinery.

English Electric Co Ltd.
Robey & Co., Ltd.

Workshops (Lighting of).

Allen-Liversidge, Ltd.
Benjamin Electric, Ltd.
Wells, A. C., & Co.

Worm Gearing.

George Angus & Co., Ltd.

Wrought and Sheet Ironwork.

Harvey, G. A., & Co. (London), Ltd.
Kenyon, Wm., & Sons, Ltd.
Potter, F. W., & Co.

Zincs (Non-encrusting) for Primary Batteries.

Eyre Smelting Co., Ltd. (Bamber's).
Siemens Bros. & Co., Ltd.

FOR ADVERTISERS' ADDRESSES AND POSITIONS OF THEIR ANNOUNCEMENTS, CONSULT FOREGOING ALPHABETICAL LIST, PAGES 2521 TO 2538.

TRADUCTION DES RUBRIQUES FIGURANT DANS LE 'RÉPERTOIRE ANALYTIQUE DES SPÉCIALITÉS ANNONCÉES' (pages 2541–2611).

Pour les noms des fabricants des spécialités ci-dessous, se reporter aux rubriques correspondantes en anglais dans le 'Classified Directory and Buyers' Guide' (*'Répertoire Analytique des Annonceurs'*), *pages* 2541–2611.
Pour les adresses des Annonceurs et les renvois à leurs annonces dans l'Annuaire, voir l'Index alphabétique, pages 2521–2538.

FRANÇAIS.	ANGLAIS.
A	
Accessoires d'aéroplanes	Aeroplane Accessories
Accessoires de machines et de chaudières, foyers, tubes, etc.	Engine and Boiler Fittings, Boiler Furnaces, Tubes, etc.
Accessoires pour chaudronniers	Coppersmiths' Work
Accouplements flexibles	Flexible Couplings
Accumulateurs	Accumulators. *See* Batteries
Accumulateurs (Éléments et Batteries d')	Storage Cells and Batteries
Accumulateurs (Tableaux de distribution pour)	Storage Battery Switchboards
Accumulateurs électriques	Storage Cells
Accumulateurs hydrauliques	Accumulators (Hydraulic)
Acétylène	Acetylene
Acide azotique	Nitric Acid
Acide chlorhydrique	Hydrochloric Acid
Acide pour accumulateurs	Accumulator Acid
Acide sulfurique	Sulphuric Acid
Acier à aimant	Magnet Steel
Acier à haute résistance à la traction	High Tensile Steel
Acier à outils	Tool Steel
Acier au chrome-vanadium	Chrome - Vanadium Steels
Acier au nickel et au nickel-chrome	Nickel and Nickel Chrome Steels
Acier au manganèse	Manganese Steel
Acier (blooms et billettes)	Steel (Blooms and Billets)
Acier brillant, Fabricants de	Bright Steel Manufacturers
Acier compound	Case Hardening Steels
Acier d'appareils d'aviation	Aircraft Steels
Acier de machine trempé à l'air	Air Hardening Gear Steel
Acier électrique, Fabricants de	Electric Steel Manufacturers
Acier en barres	Steel Rods
Acier fondu au creuset	Crucible Cast Steels
Acier immaculable et sans rouille	Stainless and Rustless Steel
Acier immaculable de Firth	Firth's Stainless Steel
Acier pour boutterelles et étampes	Die Steels
Acier pour machines, Fabricants de	Machinery Steel Manufacturers
Acier rapide à outils	High-Speed Tool Steel
Acier rapide 'Speedicut'	'Speedicut' High Speed Steels
Acier sans-rouille	Rustless Steel
Acier Siemens-Martin	Siemens - Martin Steel
Aéronautique (Ingénieurs)	Aeronautical Engineers
Aéronautique, moteurs pour	Aero Engines
Aiguillages et croisements de chemin de fer	Railway Points and Crossings

FRANÇAIS.	ANGLAIS.	FRANÇAIS.	ANGLAIS.
Air liquide	Liquid Air	Appareils à goudronner les rues	Road Tarring Appliances
Alésoirs et tarauds	Reamers and Taps	Appareils à nettoyer les chaudières (Mécaniques et électriques)	Boiler Cleaners (Mechanical and Electrical)
Alimentateurs d'huile et burettes	Oil Feeders and Cans	Appareils à plonger	Diving Apparatus
Alliages	Alloys	Appareils à poser le béton	Concrete Placing Plants
Alliages d'acier, Fabricants de	Alloy Steel Manufacturers	Appareils à rafraîchir et à humidifier l'air	Air-Cooling and Humidifying Apparatus
Alternateurs	Alternators	Appareils à refroidissement d'eau	Water-Cooling Apparatus
Aluminium (lingots, feuilles, tubes, fils, câbles, sections, etc.)	Aluminium (Ingots, Sheets, Tube, Wire, Cables, Sections, etc.)	Appareils automatiques pour la conduite des feux	Mechanical Stokers
Aluminium en poudre	Aluminium Powder	Appareils chimiques et électro-chimiques	Chemical and Electro-Chemical Apparatus
Amiante (Produits, garnitures, etc.)	Asbestos Goods, Fittings, etc.	Appareils de chauffage au gaz	Heating Plant (Gas)
Amiante (Recouvrements et matelas d')	Asbestos Coverings and Mattresses	Appareils de graissage	Lubricating Devices
Ammoniaque (Installations pour la concentration de l')	Ammonia Concentration Plants	Appareils de halage	Hauling Plant. *See* Winding and Hauling
Analyse des gaz de fumée	Boiler Flue Gases (Analysis of)	Appareils de levage	Lifting and Hoisting Machinery
Ancres	Anchors	Appareils de manutention du charbon, du coke et de la cendre	Coal, Coke, and Ash Handling Plants
Anneaux pour verres d'indicateurs de niveau	Gauge Glass Rings	Appareils de mise en marche pour moteurs	Motor Starters
Anneaux et bagues de cuivre pour jointures	Copper Jointing Rings	Appareils de pesage	Weighing Machines
Anti-incrustant pour chaudières (pour usage interne)	Boiler Composition (for inside use)	Appareils de phares, Fabricants de	Lighthouse Apparatus Manufacturers
Antirouille 'Syronite'	'Syronite,' Rust Preventive	Appareils de radio-télégraphie	Radio - Telegraphy Apparatus
Antirouille 'Foliac'	'Foliac' Silica—Graphite Paint Rust Preventive	Appareils de récupération	Recovery Plants
Antirouilles	Water Softening and Purifying Apparatus. *See also* Feed Water Heaters, etc.	Appareils de séchage	Drying Apparatus
Appareils à adoucir et purifier l'eau. *Voir aussi* Réchauffeurs d'eau d'alimentation	Powdered Coal Plants	Appareils de télégraphie sans fil	Wireless Telegraphic Apparatus
Appareils à charbon pulvérisé	Water-Distilling Apparatus, etc. *See also* Condensers	Appareils de tirage par refoulement ou par aspiration	Forced and Induced Draught Apparatus
Appareils à distiller l'eau, etc. *Voir aussi* Condenseurs	Filtering Apparatus	Appareils de transmission de la force motrice	Power Transmission Appliances
Appareils à filtrer	Bolt Forcers		
Appareils à forcer les boulons			

Pour les noms des fabricants des spécialités ci-dessus, se reporter aux rubriques correspondantes en anglais dans le 'Classified Directory and Buyers' Guide' ('Répertoire Analytique des Annonceurs'), pages 2541–2611.

FRANÇAIS.	ANGLAIS.
Appareils électriques pour le chauffage et la cuisine	Electric Heating and Cooking Apparatus
Appareils extincteurs d'incendies	Fire Extinguishing Appliances
Appareils générateurs d'acétylène	Acetylene Generating Plants
Appareils générateurs d'oxygène et d'hydrogène	Oxygen and Hydrogen Generating Plants
Appareils hydro-électriques	Hydro-Electric Plants
Appareils mesureurs pour mines	Minemeters
Appareils photographiques	Photographic Apparatus
Appareils photographiques et obturateurs	Cameras and Shutters
Appareils pour dessiquer le sang	Blood Drying Plants
Appareils pour la distillation de l'eau douce	Distilling Apparatus (Fresh Water)
Appareils pour l'éclairage électrique et accessoires électriques	Electric Light Fittings and Electrical Accessories
Appareils 'Sonnettes' pour enfoncer le pilotis	Pile-Driving Equipments
Appareils vérificateurs	Testing Machines
Apprêts pour machines	Machinery Finishes
Arbres coudes de locomotives	Railway Crankshafts
Arbres de propulseurs	Propeller Shafts
Arbres de transmission et engrenages	Shafting and Gearing
Armatures pour béton	Concrete (Reinforcement for)
Articles de verre pour l'éclairage des navires, etc.	Glassware for Ships' Lighting, etc.
Ascenseurs hydrauliques	Hydraulic Lifts. *See* Lifting and Hoisting
Asphalte	Asphalte
Ateliers (Éclairage des)	Workshops (Lighting of)
Attelages de train	Railway Couplings
Automobiles	Motor Cars
Automobiles, accessoires de	Motor Car Accessories
Auxiliaires de turbines à engrenage	Geared Turbine Auxiliaries
Avertisseurs d'incendie	Fire Alarms
Avions, Fabricants de (*voir* Aéroplanes, Constructeurs de)	Aircraft Manufacturers. *See* Aeroplane Builders
Azote	Nitrogen
B	
Bacs (Câbles métalliques pour)	Ferries (Wire Rope)
Baguettes de laiton 'Dixtrudo' pour filetage et tournage à grande vitesse	'Dixtrudo' High-speed Brass Screwing and Turning Rods
Baguettes de métal jaune 'Dixtampo' pour étampage et forgeage à chaud	'Dixtampo' Yellow Metal Rods for Hot Stamping and Forging
Balais pour dynamos	Dynamo Brushes
Bandages et essieus de voiture de C.D.F.	Railway Tyres and Axles
Bandages pour véhicules automobiles	Motor Tyres
Bandes et ficelles pour usines	Mill Bandings and Twines
Baromètres	Barometers
Bâtiments (Imperméabilisation des)	Buildings (Waterproofing of)
Bâtiments (Protection contre la foudre)	Buildings (Protection of, from Lightning)
Bâtiments	Buildings
Bâtiments d'usines (Construction de)	Factory Buildings (Construction of)
Bâtis de sonnettes pour enfoncer les pilotis	Pile-Driving Frames
Batteries d'accumulateurs électriques	Batteries (Electrical Storage)
Berceaux de chaudières	Boiler Seatings
Béton armé	Ferro-Concrete. *See* Reinforced Concrete

Pour les noms des fabricants des spécialités ci-dessus, se reporter aux rubriques correspondantes en anglais dans le 'Classified Directory and Buyers' Guide' ('Repertoire Analytique des Annoncers'), pages 2541 2611.

FRANÇAIS.	ANGLAIS.
Billes et paliers à billes	Balls and Ball-Bearings
Billettes ou largets d'acier	Billets (Steel)
Blanc d'Espagne	Whiting
Blochets d'arrêt de chemins de fer	Railway Stop Blocks
Blocks-appuis et couvertures pour chaudières	Boiler Blocks and Covers
'Boilerine'	'Boilerine'
Bouées et balises	Buoys and Beacons
Bouées et balises à l'acétylène	Acetylene Buoys and Beacons
Boulons et écrous (Fer, acier, cuivre, bronze de marine, etc.)	Bolts and Nuts (Iron, Steel, Copper, Naval Brass, etc.)
Boulons pour isolateurs télégraphiques, et tous genres de ferrures pour Télégraphie et Téléphonie	Telegraph Insulator Bolts and all kinds of Ironwork for Telegraph and Telephone
Bourrage marque 'Lion'	Engine Packing ('Lion')
Bourrages métalliques pour tiges de piston marque 'The Lancaster'	Metallic Piston Rod Packings ('The Lancaster')
Bourrage métallique pour tiges de pistons, marque 'Lion'	Metallic Piston Rod Packing ('Lion')
Bourrage métallique pour tiges de pistons, marque 'United States'	Metallic Piston Rod Packing ('United States')
Bourrages pour machines	Engine Packing
Bourrages pour machines à vapeur	Packing (Steam). *See* Engine Packing
Bourrages pour moteurs à gaz	Gas Engine Packing
Bourrages Walker marque 'Lion'	Walker's ('Lion') Packings
Boutons, écrous & boulons d'aluminium	Aluminium Studs, Bolts, and Nuts
Briques réfractaires et articles en argile réfractaire	Fire Bricks and Fire Clay Goods
Bronze	Bronze. *See* Brass and Bronze
Bronze au manganèse	Manganese Bronze
Bronze en lingots	Gunmetal Ingots
Bronze en lingots pour la marine	Admiralty Gun-Metal Ingots
Bronze phosphoreux	Phosphor Bronze
Brosses en fil de fer	Wire Brushes
Broyeurs aériens (électriques)	Aerial Grinders, Electric

C

Câbles (télégraphiques, téléphoniques, sous-marins, pour l'éclairage électrique)	Cables: Telegraph, Telephone, Electric Light, and Submarine
Câbles aériens porteurs	Cableways
Câbles d'extraction et de halage	Winding and Hauling Ropes
Câbles de transmission en coton	Cotton Driving Ropes
Câbles électriques	Electric Cables
Câbles électriques ('Type C.T.S.') *Voir* Câbles 'Recouverts de Pneumatiques de Voitures'	Electric Cables ('C.T.S.' Type) (see 'Cab Tyre Sheathed' Cables)
Câbles et accessoires de mines	Mining Cables and Accessories
Câbles et cordons d'acier pour aéroplanes	Aeroplane Steel Wire Strands and Cables
Câbles métalliques	Wire Ropes
Câbles métalliques (Tramways à)	Wire Rope Tramways
Câbles our la navigation, le halage, etc.	Cables for Shipping, Haulage, etc.
Câbles pour puits à pétrole	Oil Well Ropes
Câbles sous gaîne, 'Cab Tyre'	'Cab Tyre' Sheathed Cables
Cages d'ascenseurs	Lift Enclosures
Caissons (Constructeurs de)	Caissons (Builders of)

Pour les noms des fabricants des spécialités ci-dessus, se reporter aux rubriques correspondantes en anglais dans le 'Classified Directory and Buyers' Guide' ('Répertoire Analytique des Annonceurs'), pages 2541–2611.

FRANÇAIS.	ANGLAIS.
Calculateurs de salaires	Calculators (Wages)
Calorifiants	Calorifiers
Calorimètres pour l'essai des combustibles	Calorimeters for Fuel Testing
Canalisations	Conduits. *See* 'Steel Conduits' and 'Wiring Systems'
Canons et Munitions, Fabriques de	Gun and Ammunition Works
Caoutchouc massif (Câbles en)	Solid Rubber Cables. *See* Cables
Carbure de calcium	Carbide of Calcium
Casques à fumée	Smoke Helmets
Chaînes de transmission	Driving Chains
Chaînes et câbles-chaînes	Chains and Chain Cables
Chaînes et crochets de grues	Crane Chains and Hooks
Chalands (Constructeurs et propriétaires de)	Barge Builders and Owners
Chaloupes (à vapeur et à moteur)	Launches (Steam and Motor)
Chalumeaux (pour soudure autogène et coupe des métaux à l'acetylène)	Blowpipes (Acetylene Welding and Cutting)
Châssis et bogies	Underframes and Bogies
Châssis et bogies en acier embouti	Pressed Steel Underframes and Bogies
Châssis pour automobiles	Motor Chassis Frames
Châteaux d'eau	Water Towers
Chaudières (Accessoires de)	Boiler Fittings. *See* Engine and Boiler Fittings
Chaudières à l'eau chaude	Hot Water Supply Boilers
Chaudières à réchauffage	Exhaust Heat Boilers
Chaudières à vapeur. *Voir* Constructeurs de chaudières	Steam Boilers. *See* Boiler Manufacturers
Chaudières de concentration par le vide	Vacuum Pans (Concentrating)
Chaudières tubulaires. *Voir* Constructeurs de chaudières	Water-Tube Boilers. *See* Boiler Manufacturers
Chaudronniers de cuivre	Coppersmiths
Chauffage des voitures de chemins de fer	Heating for Railway Carriages
Chauffage, ventilation, etc.	Heating, Ventilating, etc.
Chaux et calcaires	Lime and Limestone
Cheminées	Chimney stacks
Chemins de fer transportables	Portable Railways
Chemins de fer: Voies portatives, voies étroites, etc.	Railways: Light, Portable, etc.
Chemins de fer et tramways électriques	Electric Railways and Tramways
Chemins de roulement aériens	Overhead Runways
Chimistes hydrologiques	Hydrological Chemists
Ciment de Portland	Portland Cement
Ciment de Portland (Machines à essayer le)	Portland Cement (Testing Machines for)
Ciment graphite 'Foliac' pour chaudières, tuyaux de vapeur, gaz, air, et eau	'Foliac' Graphite Pipe Joint Compound
Ciment, imperméabilisation du	Cement, Waterproofing of
Ciment 'Kisol' pour chaudières, tuyaux de vapeur, etc.	'Kisol' Cement for Boilers, Steam Pipes, etc.
Ciment pour joints	Jointing Cement
Ciments (Portland, Keene et Parian)	Cements (Portland, Keenes', & Parian)
Classeurs ordinaires et classeurs américains pour bureaux	Filing and CardIndex Cabinets
Colle marine	Marine Glues
Collèges d'arts et manufactures	Colleges (Engineering)

Pour les noms des fabricants des spécialités ci-dessus, se reporter aux rubriques correspondantes en anglais dans le 'Classified Directory and Buyers' Guide' ('*Répertoire Analytique des Annonceurs*'), *pages* 2541-2611.

FRANÇAIS.	ANGLAIS.
Colonnes et pièces coulées pour égouts, gaz et conduites d'eau	Columns and Castings for Sewage, Gas, and Water Works
Combustion de surface	Surface Combustion
Commandes par chaînes	Chains and Chain Driving
Composés lubrifiants	Lubricating Compounds
Composés pour toiture	Roofing Compounds
Compresseurs d'air	Air-Compressors
Compteurs d'air	Air Meters
Compteurs à gaz	Gas Meters
Compteurs à l'eau	Water Meters
Compteurs d'eau	Recorders (Water)
Compteurs d'eau d'évacuation	Waste Water Meters
Compteurs de vapeur	Steam Meters
Condenseurs, évaporateurs, appareils pour adoucir et distiller l'eau, etc.	Condensers, Evaporators, Water Softening and Distilling Apparatus, etc.
Condenseurs kinétiques 'Contraflo'	'Contraflo' Kinetic Condensers
Conduites	Pipe Lines
Conservation par le froid	Cold Storage
Constructeurs d'aéroplanes	Aeroplane Builders
Constructeurs d'appareils de ventilation	Ventilating Engineers
Constructeurs de chaudières	Boiler Manufacturers
Constructeurs de docks flottants	Floating Dock Builders
Constructeurs de navires	Ship Builders
Constructions en béton armé	Concrete (Reinforced) Construction
Constructions en fer et en acier, etc.	Structural Iron and Steel Work, etc.
Contrôleurs électriques automatiques	Automatic Controllers (Electric)
Contrôleurs et démarreurs à liquide	Controllers and Liquid Starters
Convertisseurs Rotatifs	Rotary Converters
Convoyeurs. *Voir aussi* Courroies	Conveyors. *See also* Belting
Cordes et câbles : en fils métalliques, chanvre, manille, cuir, coton et amiante	Ropes : Wire, Hemp, Manilla, Leather, Cotton, and Asbestos
Cornues à gaz	Gas Retorts
Coulées pour soupapes	Valve Castings
Couleurs, peintures et vernis	Colours, Paints, and Varnishes
Courroies, câbles, etc., de transmission	Driving Bands, Ropes, etc.
Courroies de Balata	Balata Belting
Courroies de coton	Cotton Belting
Courroies de cuir. *Voir* Courroies	Leather Belting. *See* Belting
Courroies en poil de chameau marque 'Camel' (Seuls fabricants des)	'Camel' Hair 'Camel' Brand Belting (Sole makers of)
Courroies, etc. (cuir, coton, poils, caoutchouc, etc.)	Belting, etc. : Leather, Cotton, Hair, India Rubber, etc.
Couvertures et revêtements de carneaux	Flue Covers and Linings
Craie	Chalk
Creusets	Crucibles
Cribles et tamis	Sieves and Screens
Cuivre	Copper
Cylindres	Cylinders

D

Dalles et planches en ciment	Cement Slates and Boards
Déchargement par allèges	Lighterage
Découpage et soudure autogène des métaux	Metal Cutting and Welding
Démagnétiseurs	Demagnetizers
Démarreurs à liquide et combinateurs	Liquid Starters and Controllers
Démarreurs hydrauliques à hélice	Propeller Starters (Hydraulic)

Pour les noms des fabricants des spécialités ci-dessus, se reporter aux rubriques correspondantes en anglais dans le 'Classified Directory and Buyers' Guide' ('Répertoire Analytique des Annonceurs'), pages 2541–2611.

FRANÇAIS.	ANGLAIS.	FRANÇAIS.	ANGLAIS.
Destructeurs (Séparateurs magnétiques pour)	Destructors (Magnetic Separators for)	Electrodes (pour la soudure à l'arc électrique)	Electrodes (for Electric Arc Welding)
Destructeurs de déchets	Destructors (Refuse)	Éléments et batteries d'accumulateurs électriques. *Voir* Accumulateurs électriques	Electrical Storage Cells and Batteries. *See* Storage Cells
Détrempe	Distemper		
'Dexine'	'Dexine'		
Digesteurs	Digesters		
Dispositifs pour économiser la vapeur	Steam-saving Appliances	Élévateurs. *Voir* Levage et halage	Elevators. *See* Lifting and Hoisting
		Éliminateurs d'huile	Oil Eliminators
Distillation de goudron et matériel pour la déhydratation	Tar Distillation and Dehydrating Plants	Émaux, couleurs et vernis	Enamels, Colours, and Varnishes
		Embrayages	Clutches
		Embrayages à frottement	Friction Clutches
Docks flottants	Docks (Floating)		
Dragues (câble d'acier pour)	Dredgers (Steel Wire Rope for)	Enduits imperméabilisants	Waterproofing Compounds
'Duralumin'	'Duralumin'	Enduits pour parties brillantes	Bright Part Coatings
'Vickers'	Vickers'		
Dynamite	Dynamite	Enduits pour parties brillantes et apprêts pour machines	Coatings (Bright Part) and Machinery Finishes
Dynamomètres	Dynamometers		
Dynamos et moteurs	Dynamos and Motors		
		'Endural' Câbles électriques	'Endural' Electric Cables
		Engrenages	Gearing
E		Engrenages à vis sans fin	Worm Gearing
Eau d'alimentation des chaudières (Élimination de l'huile de l')	Boiler Feed-Water, Oil Elimination from	Engrenages, arbres de transmission, etc., pour usines. *Voir* Arbres de transmission et ehgrenages	Mill Gearing, Shafting, etc. *See* Shafting and Gearing
Ébonite	Ebonite		
Éclairage des trains	Lighting (Train)		
Éclairage des usines	Factories (Lighting of)		
Éclairage et chauffage (Installations de gaz acétylène pour)	Lighting and Heating (Acetylene Gas Plants for)	Engrenages cylindriques et coniques	Spur and Bevel Gearing
		Engrenages de réduction	Reduction Gears
Écoles et collèges de mécanique	Schools and Colleges (Engineering)	Engrenages de turbines. *Voir* Turbines à engrenages	Turbine Gears. *See* Geared Turbines
Économiseurs de combustible	Fuel Economisers. *See* Economisers		
Écrous	Nuts	Engrenages en cuir vert	Gears (Raw Hide)
Électriques (Instruments et appareils)	Electrical Instruments and Apparatus. *See* Instruments and Apparatus (Electrical)	Engrenages hélicoïdaux	Helical Gearing
		Enregistreurs à eau	Water Recorders
		Enregistreurs d'acide carbonique	CO_2 Recorders
Électro-aimants de levage	Lifting Magnets	Enregistreurs de dépenses et de temps	Costs and Time Recorders

Pour les noms des fabricants des spécialités ci-dessus, se reporter aux rubriques correspondantes en anglais dans le 'Classified Directory and Buyers' Guide' ('Répertoire Analytique des Annonceurs'), pages 2541–2611.

FRANÇAIS.	ANGLAIS.
Enregistreurs de rendements de machines	Machine Output Recorders
Enseignement mécanique. *Voir* Collèges	Engineering Training. *See* Colleges
Enseignement technique. *Voir* Écoles et Collèges	Technical Training. *See* Schools and Colleges
Entrepreneurs d'éclairage électrique	Electric Lighting Contractors
Entrepreneurs de cloisons et constructions incombustibles	Partition Contractors and Fireproof Builders
Entrepreneurs de dragage	Dredging Contractors
Entrepreneurs de toitures	Roofing Contractors
Équerres	Squares
Équipements téléphoniques	Telephone Equipment
Escaliers incombustibles	Staircases (Fire-Resisting)
Essais électriques (Instruments d'). *Voir* Instruments	Testing Instruments (Electrical). *See* Instruments
Essieux (Chemins de fer)	Axles (Railway)
Étampages	Stampings
Étriers de suspension à tuyaux	Pipe Hangers
Étuves de séchage	Drying Stoves
Évaporateurs à effet multiple	Multiple Effect Evaporators
Evaporateurs à vide pour liquides chimiques	Vacuum Evaporators for Chemical Liquids
Évaporateurs, condenseurs, Appareils pour la distillation de l'eau, etc.	Evaporators, Condensers, Water Distilling Apparatus, etc.
Évaporateurs pour l'industrie sucrière et des liqueurs	Evaporators for Sugar and Trade Liquors
Excavateurs et transporteurs	Excavators and Transporters
Explosifs	Explosives
Explosifs pour mines	Mining Explosives
Extinction d'incendies (Installations automatiques d')	Sprinklers (Automatic)
Extracteurs de goudron	Tar Extractors
F	
Fabricants de caoutchouc, gutta-percha et bitume	India Rubber, Gutta Percha, and Bitumen Manufacturers
Fabricants de chaudières	Boiler Manufacturers
Fabricants de fils isolés	Wire (Insulated) Manufacturers
Fabricants de fils métalliques	Wire Manufacturers
Fabricants de signaux pour temps brumeux	Fog Signal Manufacturers
Fabricants d'outils de forage de puits artésiens	Boring Tool Makers (Artesian)
Fabricants d'outils, machinistes, etc.	Tool Makers, Machinists, etc.
Fabricants et marchands d'acier	Steel Manufacturers and Merchants
Fabricants et marchands de fer et d'acier	Iron and Steel Manufacturers and Merchants
Fer et acier galvanisés, Fabricants de	Galvanised Iron and Steel Manufacturers
Fers et aciers pour constructions	Structural Iron and Steel Work
Feuilles et tuiles d'amiante marque 'Poilite'	'Poilite' Asbestos Sheets and Roofing Tiles
Feuilles 'Rok' pour toitures	'Rok' roofing
Feutre et toitures de feutre	Felt and Felt Roofs
Feutres pour fabricants de papier	Paper Makers' Felts
Feutres pour imprimeries, papeteries et imprimeries sur étoffes	Felts for Printing Machinery, Paper Making, and Calico Printing Machinery
Feutres pour toitures	Roofing Felts
Feux et outillage de forges	Smiths' Hearths and Plant

Pour les noms des fabricants des specialités ci-dessus, se reporter aux rubriques correspondantes en anglais dans le 'Classified Directory and Buyers' Guide' ('Répertoire Analytique des Annonceurs'), pages 2541–2611.

FRANÇAIS.	ANGLAIS.
Fibre vulcanisée	Fibre (Vulcanised)
'Fibrent,' tôles d'amiante cimentée plates et ondulées	'Fibrent' Asbestos Cement Corrugated and Flat Sheets
Filets de fil en fer à l'épreuve des bombes	Bomb-proof Netting
Filets pare-torpilles	Torpedo Defence Nets
Fils télégraphiques	Telegraph Wire. *See* Wire
Filtres d'air	Air Filters
Filtres d'eau d'alimentation de chaudières. *Voir* Eau d'alimentation	Boiler Feed Filters. *See* Feed Water
Filtres d'huile	Oil Filters
Fondeurs	Founders
Fondeurs de cuivre	Brass Founders
Fonte coulée	Cast Iron
Fonte en gueuses	Pig Iron
Forges portatives	Forges (Portable)
Fourneaux de forge	Forging Furnaces. *See* Furnaces
Fournitures pour bureaux de dessins	Drawing Office Requisites
Fournitures pour constructions mécaniques et chemins de fer. *Voir* Matériel de chemins de fer et de tramways	Engineering and Railway Supplies. *See* Railway and Tramway Plant
Fours à creusets	Crucible Furnaces
Fours à gaz	Gas Furnaces. *See* Furnaces
Fours à recuire et à adoucir	Annealing and Tempering Furnaces
Fours chauffés au gaz et au pétrole et fours industriels	Furnaces (Gas and Oil Heated and Industrial)
Fours électriques	Furnaces (Electric)
Fours et matériels industriels à gaz	Industrial Gas Furnaces and Plants
Fours métalliques exempts de fer	Furnaces (Non-ferrous Metal)
Foyers à houille	Coal Furnaces. *See* Furnaces
Foyers de chaudières	Boiler Furnaces
Foyers de chaudières. *Voir* Accessoires de machines et de chaudières	Furnaces (Boiler). *See* Engine and Boiler Fittings
Foyers de chaudières, tubes, etc.	Boiler Furnaces, Tubes, etc.
Foyers pour chaudières maritimes et terrestres	Furnaces for Marine and Land Boilers
Fraises	Milling Cutters
Freins de chemins de fer	Brakes (Railway)
Freins dynamométriques	Brakes (Dynamometers)
Freins (Electro-Mécaniques)	Brakes (Electro-Mechanical)
Fumifuges et générateurs de vapeur	Smoke Preventers and Steam Generators
G	
Galvanisateurs	Galvanisers
Garde-fous pour machines	Machinery Guards
Garniture 'Lion'	'Lion' Packing
Garniture d'amiante (marque 'Lion')	Asbestos Packing ('Lion')
Garniture marque 'United States'	Packing ('United States')
Garniture pour surchauffeurs de locomotives	Locomotive Superheated Packing
Garnitures d'embrayages	Clutch Linings
Garnitures de chaudières. *Voir aussi* Accessoires de machines et chaudières	Boiler Mountings. *See also* Engine and Boiler Fittings
Garnitures de freins et d'embrayages	Brake and Clutch Linings
Garnitures de joints	Jointing Materials
Garnitures de pistons	Piston Packing
Garnitures métalliques. *Voir* Bourrages pour machines	Metallic Packing. *See* Engine Packing
Garnitures pour machines à vapeur	Steam Packing
Gaze métallique	Wire Gauze

Pour les noms des fabricants des spécialités ci-dessus, se reporter aux rubriques correspondantes en anglais dans le 'Classified Directory and Buyers' Guide' ('Répertoire Analytique des Annonceurs'), pages 2541–2611.

FRANÇAIS.	ANGLAIS.
Gazogènes	Gas Producers
Génératrices électriques. *Voir* Dynamos et Moteurs	Generators (Electric). *See* Dynamos and Motors
Graisse (pour graisseurs)	Grease (Lubricating)
Graisseurs et graisses	Lubricators and Lubricants
Grand-livres bibliorhaptes	Loose Leaf Ledgers
Graphite	Graphite
Graphite 'Foliac' Antiencrustante pour Chaudières	'Foliac' Boiler Graphite
Graveurs, dessinateurs et imprimeurs	Engravers, Draughtsmen, and Printers
Gréement pour Aéroplanes et Ballons Dirigeables	Rigging for Aircraft
Grues. *Voir* Appareils de levage	Cranes. *See* Lifting and Hoisting Machinery
Grues à main. *Voir* Appareils de levage	Hand Cranes. *See* Lifting and Hoisting Machinery
Grues preneuses (électriques)	Grabbing Cranes (Electric)
Gyroscopes	Gyroscopes
H	
Haussières (en acier galvanisé)	Hawsers (Galvanized Steel Wire)
Hélices	Propellers, Screw Propellers
Horloges électriques	Clocks, Electric. *See* Electric Clocks
Horloges enregistreuses	Time Recorders
Houillières (câbles d'acier pour)	Collieries (Steel Wire Ropes for)
Houillières (équipement électrique pour)	Collieries (Electrical Equipment of)
Huild pour filetage	Screwing Oil
Huiles, composés lubrifiants, etc.	Oils, Lubricating Compounds, etc.
Hydrofuge et revêtement au bitume	Damp Course and Bitumen Sheeting
Hydrofuge et revêtement 'Callendrite'	'Callendrite' Dampcourse and Sheeting
I	
Imperméables et Vêtements en toile vernie	Mackintoshes and Oilskins
Imperméabilisation des réservoirs	Reservoirs (Waterproofing of)
Imprimeurs, lithographes, dessinateurs et graveurs	Printers, Lithographers, Draughtsmen, and Engravers
Incendies (Installations automatiques d'extinction d')	'Grinnell' Sprinklers
Indicateurs d'effort (de tension)	Strainmeters
Indicateurs d'élongation	Extensometers
Indicateurs de niveau d'eau	Water Level Indicators
Indicateurs de vitesse marins	Marine Speed Indicator
Indicateurs pour machines à vapeur	Indicators (Steam Engine)
Ingénieurs (Aéronautiques). Voir Aéronautiques (Ingénieurs)	Engineers (Aeronautical). See Aeronautical Engineers
Ingénieurs-Conseils	Advisory Engineers
Ingénieurs électriciens	Electrical Engineers
Ingénieurs pour économie du combustible	Engineers (Fuel Economy)
Ingénieurs hydrauliques	Engineers (Hydraulic), Water-Power Engineers
Ingénieurs mécaniciens	Engineers (Mechanical)
Ingénieurs métallurgiques	Metallurgical Engineers
Ingénieurs (Phares)	Engineers (Lighthouse)
Ingénieurs télégraphistes	Telegraph Engineers

Pour les noms des fabricants des spécialités ci-dessus, se reporter aux rubriques correspondantes en anglais dans le 'Classified Directory and Buyers' Guide' ('Répertoire Analytique des Annonceurs'), pages 2541–2611.

FRANÇAIS.	ANGLAIS.
Injecteurs, Ejecteurs et appareils généraux à jet. *Voir* Injecteurs pour machines à vapeur	Injectors, Ejectors, and General Jet Appliances. *See* Steam Injectors
Injecteurs pour machines à vapeur	Steam Injectors
Installation de chaudières	Boiler Setting
Installation pour goudronnage, macadamisation et asphaltage	Tar Macadam and Asphalt Plant
Installations à gaz pauvre. *Voir* Gazogènes	Producer Gas Plants. *See* Gas Producers
Installations à gaz pauvre par aspiration	Suction Gas Plants
Installations automatiques d'extinction d'incendies	Automatic Sprinklers
Installations d'éclairage des trains	Train Lighting Plant
Installations de chargement et de transport	Loading and Transport Plants
Installations de construction d'édifices	Building Construction Plant
Installations de distribution	Switch Gear
Installations de gaz à l'eau	Water Gas Plants
Installations et appareils hydrauliques	Hydraulic Plants and Appliances
Installations gazogènes Mond	Mond Gas Plants
Installations pour le forage des puits de pétrole	Oil-Burning Installations
Installation pour galvaniser	Galvanising Plant
Institutions d'enseignement. *Voir* Collèges et Écoles	Educational Institutions. *See* Colleges and Schools
Instruments aéronautiques	Aeronautical Instruments
Instruments d'arpentage, de mathématiques, de dessin, etc.	Instruments: Surveying, Mathematical, Drawing, etc.
Instruments d'arpentage et de dessin	Surveying and Drawing Instruments
Instruments enregistreurs	Recording Instruments
Instruments et appareils électriques	Instruments and Apparatus (Electrical)
Instruments météorologiques	Meteorological Instruments
Instruments scientifiques	Scientific Instruments
Instruments scientifiques, de dessin et d'arpentage	Mathematical, Drawing, and Surveying Instruments
Isolateurs	Insulators
J	
Joints ('Lion' et 'Walkerite')	Joints ('Lion' and 'Walkerite')
Joints étanches à la vapeur. *Voir* Matériaux pour joints	Steam Jointing. *See* Jointing Materials
Journaux techniques. *Voir* Livres et journaux	Journals (Technical). *See* Books and Journals
L	
Laine de scorie	Mineral Wool
Laiton et bronze	Brass and Bronze
Lames de scies alternatives	Hack Saw Blades
Laminoirs (Équipement électrique pour)	RollingMills (Electrical Equipment of)
Lampes à l'arc	Arc Lamps
Lampes à filaments métalliques	Metal Filament Lamps
Lampes: à souder et à moteurs d'huile	Lamps: Brazing and Oil Engine
Lampes de sûreté de mineurs	Miners' SafetyLamps

Pour les noms des fabricants des spécialités ci-dessus, se reporter aux rubrique correspondantes en anglais dans le 'Classified Directory and Buyers' Guide' ('Répertoire Analytique des Annonceurs'), pages 2541–2611.

FRANÇAIS.	ANGLAIS.
Lampes électriques	Lamps (Electric)
Lampes industrielles	Lamps (Industrial)
Lampes : Torches pour soutes et pour mécaniciens en général	Lamps; Torch, Bunker, etc., for Engineers generally
Le Gaz et ses applications à l'industrie	Gas and its Industrial Applications
Levage et montage	Lifting and Hoisting
Lignes de telphérage	Telphers
Limes	Files
Livres et journaux scientifiques	Books and Journals, Scientific
Locomotives	Locomotives
Locomotives à pétrole (combustion interne)	Oil Locomotives (Internal Combustion)
Logements de chaudières	Settings (Boiler)
Logements de chaudières (perfectionnés)	Boiler Settings (Improved)
Logements de chaudières de Lancashire (perfectionnés)	Lancashire Boiler Settings (Improved)
Logements de cornues	Settings (Retort)
Lubrifiants pour moteurs	Motor Lubricants
M	
Machines automatiques, Fabricants de	Automatic Machine Makers
Machines à aléser et à dresser	Boring and Facing Machines
Machines à blanchir, teindre et apprêter	Bleaching, Dyeing, and Finishing Machinery
Machines à broyer, élever et transporter le charbon	Coal Grinding, Elevating and Conveying Machinery
Machines à broyer et à pulvériser	Crushing and Pulverising Machinery
Machines à calculer	Counting Instruments
Machines à cintrer les tuyaux	Pipe-Bending Machines
Machines à ciment	Cement Machinery
Machines à cisailler, poinçonner et cintrer	Shearing, Punching, and Bending Machines
Machines à écrire	Typewriters
Machines à électro-aimants	Machinery (Electro-Magnets)
Machines à essayer le ciment	Cement Testing Machines
Machines à essayer le ciment de Portland	Testing Machines for Portland Cement
Machines à fabriquer le papier et la pâte à papier	Paper and Pulp Making Machinery
Machines à fabriquer les briques et les tuiles	Brick- and Tile-making Machinery
Machines à fabriquer les briquettes	Briquette Machinery
Machines à fabriquer les cartouches	Cartridge Machinery
Machines à fabriquer les feuilles et les tuiles en ciment d'amiante	Asbestos Cement Sheet- and Tile-making Machinery
Machines à faire la glace. *Voir* Machines réfrigérantes	Ice-making Machinery. *See* Refrigerating Machinery
Machines à fileter	Screwing Machines
Machines à fraiser	Milling Machines
Machines à jointoyer	Grouting Machines
Machines à laver le charbon	Coal-washing Machinery
Machines à meuler	Grinding Machinery (Abrading)
Machines à moudre	Grinding Machinery
Machines à nettoyer les grains et semences	Grain and Seed Cleaning Machinery
Machines à peindre	Painting Machines
Machines à poinçonner, cisailler et cintrer	Punching, Shearing, and Bending Machines
Machines à polir	Polishing Machinery
Machines à poser les câbles	Cable-laying Machinery

Pour les noms des fabricants des spécialités ci-dessus, se reporter aux rubriques correspondantes en anglais dans le 'Classified Directory and Buyers' Guide' ('Répertoire Analytique des Annonceurs'), pages 2541–2611.

FRANÇAIS.	ANGLAIS.
Machines à raboter, mortaiser, fileter et étaux-limeurs	Planing, Slotting, Screwing, and Shaping Machines
Machines à raboter les roues d'engrenage	Gear Cutting Machines
Machines à réduire en pulpe	Pulp-making Machinery
Machines à souder	Soldering Machines
Machines à travailler le bois	Wood-working Machinery
Machines à vapeur	Steam Engines
Machines de chargement et de déchargement pour usines à gaz et fours à coke	Charging and Discharging Machinery for Gasworks and Coke Ovens
Machines de levage et de halage et palans	Lifting and Hoisting Machinery and Lifting Tackle
Machines de sondage (pour roches et houille)	Boring Machines for Rock and Coal
Machines d'huilerie	Oil Mill Machinery
Machines et appareils d'extraction et de halage	Winding and Hauling Engines and Plant
Machines et appareils pour mines. *Voir* Installations de mines et d'extraction	Mining Machinery. (*See* Mining and Hauling Plant)
Machines hydrauliques	Engines (Hydraulic)
Machines hydrauliques système 'Tweddell'	'Tweddell's System' Hydraulic Machinery
Machines locomobiles	Portable Engines
Machines, outils et appareils hydrauliques, etc.	Hydraulic Machines, Tools and Appliances, etc.
Machines-outils et outils à main. *Voir* Outils et accessoires de Mécaniciens. *Voir aussi* Fabricants d'outils	Machine and Hand Tools. *See* Engineers' Tools and Fittings, *also* Tool Makers
Machines pour minoteries	Flour-Milling Machinery
Machines pour usines de laminage	Rolling Mill Engines
Machines réfrigérantes	Refrigerating Machinery
Machines textiles	Textile Machinery
Malaxeurs de béton	Concrete Mixers
Manches à thé	Tea Shoots
Mandrins électromagnétiques	Magnetic Chucks
Manganèse et alliages de manganèse	Manganese and Manganese Alloys
Manomètres, robinets, indicateurs de niveau d'eau, soupapes de sûreté, tiroirs, indicateurs, séparateurs d'eau de condensation, etc.	Steam Gauges, Cocks, Water Gauges, Safety Valves, Slide Valves, Indicators, Steam Traps, etc.
Marches d'escaliers	Stair Treads
Marteaux de forge	Foundry Hammers
Marteaux mécaniques. *Voir* Marteaux	Power Hammers. *See* Hammers
Marteaux mécaniques à vapeur, à l'air comprimé et pneumatiques	Steam, Compressed Air, and Pneumatic Power Hammers
Marteaux-pilons. *Voir* Marteaux	Steam Hammers. *See* Hammers
Marteaux-pilons, marteaux à l'air comprimé, marteaux pneumatiques, etc.	Hammers (Steam, Compressed Air, Pneumatic Power, etc.)
Marteaux (sonnettes pour enfoncer les pilotis)	Hammers (Pile Driving)
Matériaux pour joints	Jointing Materials
Matériel de chemins de fer et de tramways	Railway and Tramway Plant
Matériel d'épuration du gaz	Gas Cleaning Plant
Matériel d'exploitation houillère	Colliery Plant
Matériel d'usines à gaz	Gas Works Plant
Matériel de dragage	Dredge Plan
Matériel de fonderie	Foundry Plant

Pour les noms des fabricants des spécialités ci-dessus, se reporter aux rubriques correspondantes en anglais dans le 'Classified Directory and Buyers' Guide' ('Répertoire Analytique des Annonceurs'), pages 2541-2611.

FRANÇAIS.	ANGLAIS.	FRANÇAIS.	ANGLAIS.
Matériel de fonderie	Metal Melting Plants	Meules à centrer (électriques)	Centre Grinders (Electric)
Matériel de hauts-fourneaux	Blast Furnace Plant	Meules d'émeri, machines, etc.	Emery Wheels, Machinery, etc.
Matériel de mines et d'extraction	Mining and Hauling Chains	Mica	Mica
Matériel de percement de tunnels	Tunnelling Plants	Micromètres	Micrometers
Matériel de recouvrement des produits secondaires	By-product Recovery Plants	Microscopes	Microscopes
Matériel roulant. *Voir* Matériel de chemins de fer et de tramways	Rolling Stock. *See* Railway and Tramway Plant	Mond, Installations gazogènes de	Mond Gas Plants
Matières isolantes	Insulating Materials	Monte-charges. *Voir* Levage et Montage	Hoists. *See* Lifting and Hoisting
Mécanisme de transmission lubrifié pour vitesse variable	Variable Speed Oil Transmission Gears	Monte-charges et grues électriques	Electric Lifts and Cranes
Mèches et perceuses	Drills and Drilling Machines	Moteurs à benzol	Benzol Plants
'Mésmeric,' acier trempé à la surface	'Mesmeric' Case Hardening Steel	Moteurs à essence—gaz d'air	Petrol Air Gas Machines
Mesurage de l'eau d'alimentation	Feed-Water (Measurement of)	Moteurs à l'essence. *Voir* Moteurs à pétrole et à gaz	Petrol Engines. *See* Oil and Gas Engines
Mesures électriques. *Voir* Instruments	Measuring Instruments (Electrical). *See* Instruments	Moteurs à gaz	Power Plant (Gas)
Métal 'Bull's' et 'Melloid'	Bull's Metal and Melloid	Moteurs à gaz, à pétrole et à l'essence	Gas, Oil, and Petrol Engines
Métal 'Delta'	Delta Metal	Moteurs à pétrole, à gaz et à l'essence	Oil, Gas, and Petrol Engines
Métal déployé	Expanded Metal	Moteurs à pétrole lourd. *Voir* Moteurs à pétrole	Crude Oil Engines. *See* Oil Engines
Métaux anti-friction	Anti-friction Metals	Moteurs Diesel et semi-Diesel	Diesel and Semi-Diesel Engines
Métaux blancs anti-friction	White Anti-Friction Metals	Moteurs Diesel à vapeur	Steam Diesel Engines
Métaux de ramasse	Metals (Scrap)	Moteurs électriques. *Voir* Dynamos et Moteurs	Electric Motors. *See* Dynamos and Motors
Métaux en lingots	Ingot Metals	Moteurs marins à pétrole	Marine Oil Engines
Métaux perforés	Perforated Metals	Moteurs marins, chaudières et machines auxiliaires marines	Marine Engines, Boiler, and Auxiliary Machinery
Métaux laminés	Rolled Metals	Moulages et pièces forgées	Castings and Forgings
Métaux pour coussinets, etc.	Bearing Metals, etc.	Moulins (broyeurs-pulvérisateurs)	Mills (Pulverising)
Métaux pour coussinets, anti-friction, etc.	Metals: Bearing-Anti-friction, etc.	Moulins broyeurs-pulvérisateurs de pierre	Stone Pulverising Mills
Métaux refoulés	Extruded Metals	Moulins et machines pour sucreries	Sugar Mills and Machinery
Meubles de bureau	Office Furniture	Moutons à friction et à vapeur	Stamps (Friction and Steam Drop)
Meules	Abrasive Wheels	Moutons et presses	Drop Stamps and Presses
Meules. *Voir* Machines à broyer	Grinders. *See* Grinding Machinery		

Pour les noms des fabricants des spécialités ci-dessus, se reporter aux rubriques correspondantes en anglais dans le 'Classified Directory and Buyers' Guide' ('Répertoire Analytique des Annonceurs'), pages 2541–2611.

FRANÇAIS.	ANGLAIS.
N	
Navires, chaloupes et yachts à vapeur	Steam Ships, Launches, and Yachts
Navires pétroliers (Constructeurs de)	Oil Tank Ships (Builders of)
Négociants en métaux	Metal Merchants
Nettoie-tubes	Tube Cleaners
Niveaux d'eau. *Voir* Indicateurs pour machines à vapeur	Water Gauges etc. *See* Steam Gauges
O	
Oscillographes	Oscillographs
Outillage d'exploitations minières	Mining Tools
Outillage et accessoires pour mécaniciens	Engineers' Tools and Fittings
Outillage et matériel d'entrepreneurs	Contractors' Tools and Plant
Outillage pour exploitations de carrières	Quarrying Tools
Outillages et machines pour fabriques de produits chimiques	Chemical Plant and Machinery
Outils détartreurs	Scaling Tools
Outils et appareils pneumatiques	Pneumatic Tools and Appliances
Outils pour monteurs de tuyaux	Pipe Fitters' Tools
Ouvrages en cuivre pour plombiers	Plumbers' Brasswork
Ouvrages en fer forgé et en tôle	Wrought and Sheet Ironwork
Oxygène	Oxygen
P	
Packing 'Lion' pour machines à vapeur	Steam Packing ('Lion')
Palans	Pulley Blocks
Palans de navires	Shipping Tackle
Paliers à billes	Bearings (Ball)
Paliers à galets	Roller Bearings
Paliers de butée	Thrust Bearings
Parafoudres	Lightning Conductors
Parquetages, etc., incombustibles	Floors etc. (Fire-Resisting)
Parquetage incombustible 'Decolite'	'Decolite' Fireproof Flooring
Pâte pour courroies	Belting Cream
Patins et bouterelles (étampes)	Shoes and Dies
Peinture anti-corrosive	Anti-Corrosive Paint
Peinture Silica-Graphite 'Foliac'	'Foliac' Silica-Graphite Paint
Peintures, couleurs, émaux et vernis	Paints, Colours, Enamels, and Varnishes
Peintures 'Minerva'	'Minerva' Paints
Peintures pour la préservation du fer et de l'acier	Paints for preserving Iron and Steel Work
Perceuses et marteaux-perforateurs électriques portatifs	Electric Portable Drills and Hammers
Perceuses radiales et machines à tarauder	Radial Drilling and Tapping Machines
Perceuses verticales	Vertical Drilling Machines
Perforatrices	Rock Drills
Perforatrices et haveuses pour houillères	Coal Drills and Cutters
Pétrole (Foyers à). *Voir* Foyers	Oil Furnaces. *See* Furnaces
Photographie de machines	Engineering Photography
Pics, pelles, etc.	Picks, Shovels, etc.
Pièces de forge et moulages. *Voir* Moulages et pièces de forge	Forgings and Castings. *See* Castings and Forgings
Pièces forgées en cuivre	Copper Forgings
Pièces forgées et moulages en acier. *Voir* Moulages et pièces de forge	Steel Forgings and Castings. *See* Castings and Forgings
Pignons en cuir vert	Raw Hide Pinions

Pour les noms des fabricants des spécialités ci-dessus, se reporter aux rubriques correspondantes en anglais dans le 'Classified Directory and Buyers' Guide' (*"Répertoire Analytique des Annonceurs"*), *pages* 2541–2611.

FRANÇAIS.	ANGLAIS.
Pignons en papier	Paper Pinions
Pignons en papier comprimé	Compressed Paper Pinions
Pilotis en tôle d'acier	Piles (Steel Sheet)
Pistons de pompes	Pump Buckets
Placards à huiles	Oil Cabinets
Planimètres	Surface Gauges
Plaques d'acier rabotées	Planished Steel Sheets
Plaques tournantes	Turntables
Plâtre	Plaster
Pompes à l'air	Air Pumps
Pompes à pression à capacité variable	Variable Capacity Pressure Pumps
Pompes à turbines	Turbine Pumps
Pompes à vapeur. *Voir* Pompes	Steam Pumps. *See* Pumps
Pompes centrifuges	Centrifugal Pumps. *See* Pumps
Pompes d'alimentation pour chaudières	Boiler Feed Pumps
Pompes et machines d'épuisement	Pumps and Pumping Machinery
Pompes 'Roturbo'	Roturbo Pumps
Ponts (Câbles d'acier pour suspension de)	Bridges (Wire Rope Suspension)
Ponts, poutres, etc.	Bridges, Girders, etc.
Portes pliantes	Collapsible Gates
Poteaux télégraphiques en fer	Telegraph Poles (Iron)
Poudre de mine	Blasting Powder
Poulies	Pulleys
Poulies à câble. *Voir* Poulies à courroie et à corde	Rope Pulleys. *See* Belt and Rope Pulleys
Poulies pour courroies et cordes	Belt and Rope Pulleys
Poutres, ponts, etc. *Voir* Fers et Aciers pour constructions	Girders, Bridges, etc. *See* Structural Iron and Steel Work
Poutres (procédé Grey) à larges brides	Beams (Grey Process) Broad Flange
Préservatifs pour le bois	Preservatives (Wood)
Presses à bandages	Tyre Presses
Presses à cintrer	Scrap Presses
Presses à déchets	Drawing Presses
Presses à forger	Forging Presses
Presses à l'huile	Oil Presses
Presses à l'obus	Shell Presses
Presses mécaniques	Power Presses
Produits chimiques	Chemicals
Produits en caoutchouc pour la mécanique	Mechanical Rubber Goods
Projecteurs (phares) oxy-acétylène	Searchlights (Oxy-acetylene)
Propriétaires de bassins de radoub	Dry Dock Owners, Graving Dock Owners
Propriétaires de docks	Dock Owners
Propulsion des navires par l'électricité	Electric Ship Propulsion
Protecteurs d'indicateurs de niveau	Gauge Glass Protectors
Publications techniques. *Voir* Livres et journaux	Publications (Technical). *See* Books and Journals
Puits artésiens (Foreurs de)	Artesian Well Engineers
Purgeurs d'eau de condensation. *Voir* Manomètres etc.	Steam Traps. *See* Steam Gauges etc.
Purgeurs d'eau de condensation automatiques et par le vide	Vacuum and Steam Traps
Purification des eaux d'égout	Sewage Purification
Pyromètres	Pyrometers
R	
Rails en acier et accessoires	Steel Rails and Accessories
Rails et accessoires de fixation	Rails and Fastenings
Ramasse (Métaux de)	Scrap Metals
Rampes de chemins de fer	Railway Ramps
Ranchers en acier	Stanchions (Steel)
Récepteurs d'air	Air Receivers
Réchauffeurs et échauffeurs intermédiaires	Interheaters and Reheaters

Pour les noms des fabricants des specialités ci-dessus, se reporter aux rubriques correspondantes en anglais dans le 'Classified Directory and Buyers' Guide' ('Répertoire Analytique des Annonceurs'), pages 2541–2611.

FRANÇAIS.	ANGLAIS.
Réchauffeurs, filtres et purificateurs d'eau d'alimentation	Feed-Water Heaters, Filters and Purifiers
Récipients pour gaz. *Voir* Appareils pour usines à gaz	Gas Holders. *See* Gas Works Plant
Recuisage	Annealing
Recuit. *Voir* Fours à recuire	Tempering Furnaces. *See* Furnaces
Règles à calculer. *Voir* Instruments scientifiques etc.	Slide Rules. *See* Instruments, Mathematical, etc.
Règles en acier	Steel Rules
Régulateurs d'eau d'alimentation	Water Regulators (Feed)
Régulateurs pour machines à vapeur	Governors (Steam Engine)
Réparations de navires et de machines	Ship and Engine Repairers
Réparation des chaudières (Soudure à l'arc électrique pour la)	Boiler Repairs (Electric Arc Welding for)
Réservoirs soudés	Welded Tanks
Réservoirs en fonte	Cast Iron Tanks
Réservoirs et citernes	Tanks and Cisterns
Résidus d'origine animale (Appareils complets pour traiter les)	Animal Residuals (Complete Plants for dealing with
Respirateurs	Respirators
Ressorts	Springs
Revêtement hydrofuge au bitume	Bitumen Damp-proof Sheeting
Revêtements en coton silicaté et en laine de scorie	Silicate Cotton and Slag Wool Coverings
Revêtements pour chaudières etc.	Coverings for Boilers, etc.
Revêtements pour chaudières et tuyaux	Boiler and Pipe Coverings
Revêtements pour murs et plafonds	Wall and Ceiling Sheets
Revêtements pour tuyaux	Pipe Coverings
Riblons de fer et d'acier	Iron and Steel Scrap
Rivets en fer, acier, cuivre, bronze de marine, etc.	Rivets (Iron, Steel, Copper, Naval Brass, etc.)
Riveuses électriques	Riveters (Electric)
Riveuses hydrauliques et pneumatiques	Riveters (Hydraulic and Pneumatic)
Robinets en cuivre pour eau, vapeur et gaz	Cocks (Brass) for Water, Steam, and Gas
Rodeurs de sièges de soupapes	Valve Reseaters
Rondelles	Washers
Rondelles pour verres d'indicateurs de niveau	Gauge Glass Washers
'Rosseline' (pour moteurs à gaz et à pétrole)	'Rosseline' (for Gas and Oil Engines)
Roues d'engrenage	Wheel Gearing
Roues, moteurs et turbines hydrauliques	Water Wheels, Water Motors, and Turbines
Roues Pelton	Pelton Wheels

S

Sabots de freins	Brake Blocks
Salaires (Calculateurs de)	Wages Calculators
Scies à couper les métaux et machines	Hack Saws and Machines
Scies pour bois et métaux	Saws for Wood and Metal Cutting
Sécheurs et épurateurs de vapeur	Steam Dryers and Purifiers
Sections (acier)	Sections (Steel)
Sections refoulées brevetées en laiton, bronze, etc.	Sections (Patent Extruded), Brass, Bronze, etc.
Segments de pistons	Piston Rings
Séparateurs de graisse	Grease Separators
Séparateurs de suie	Soot Removers
Séparateurs électromagnétiques	Separators(Magnetic)
Séparateurs magnétiques	Magnetic Separators

Pour les noms des fabricants des specialités ci-dessus, se reporter aux rubriques correspondantes en anglais dans le 'Classified Directory and Buyers' Guide' ('Répertoire Analytique des Annonceurs'), pages 2541–2611.

FRANÇAIS.	ANGLAIS.
Séparation de l'huile de l'eau de condensation	Separation of Oil from Condensed Steam
Serrures, verrous, etc.	Locks, Bolts, etc.
Signaux. *Voir* Chemins de fer—Signaux	Signals. *See* Railway Signals
Signaux de chemins de fer et dispositifs de sûreté	Railway Signals and Safety Appliances
Signaux étanches pour mines	Mining Signals (Watertight)
Solives en acier	Joists (Steel)
Sondeuses à carottage	Core Drills
Sonnettes (électrique)	Bells (Electric)
Soudure électrique	Electric Welding
Soudure 'Thermit'	'Thermit' Welding
Soudure et découpage de métaux	Welding and Cutting of Metals
Soudure oxy-acétylénique	Oxy-Acetylene Welding
Souffleries. *Voir* Ventilateurs	Blowers. *See* Fans
Souffleurs de carneaux	Flue Blowers
Souffleurs électriques	Electric Blowers
Souffleurs pour carneaux	Blowers (Steam Flue
Soupapes à manchon pour pompes à l'air	Bush Valves for Air Pumps
Soupapes d'arrêt et vannes	Stop and Sluice Valves
Soupapes de réduction. *Voir* Soupapes	Reducing Valves. *See* Valves
Soupapes et robinets	Valves and Cocks
Spécialistes pour l'économie de la houille	Coal Economy Specialists
Spécialités de Graphite 'Foliac'	'Foliac' 'Graphite Specialities
Substances pour conserver le bois	Wood Preservatives
Surchauffeurs	Superheaters
Surchauffeurs de locomotives	Locomotive Superheaters
Surchauffeurs marins	Marine Superheaters
Surfaces de frottement	Friction Surfaces
Surfaces de frottement 'Ferodo'	'Ferodo' Friction Surfaces
Systèmes de conducteurs flexibles	Wiring Systems (Flexible)
Systèmes de placement de conducteurs électriques. *Voir* Systèmes de placement de fils électriques flexibles	Electric Wiring Systems. *See* Wiring Systems (Flexible)
Systèmes pour l'économie du combustible	Fuel Economy Systems
Systèmes spéciaux pour bureaux	Office Systems

T

Tableaux de distribution des accumulateurs	Battery Switchboards
Tachymètres	Tachometers
Taquets ou sabots de mise en rail (plaques d'accès)	Railway Re-railing Ramps
Tarauds et filières	Taps and Dies
Tarières rubanées ou américaines	Twist Drills
Tartrifuges et antirouilles pour chaudières	Scale and Corrosion in Boilers (Preventives of)
Tartrifuges pour chaudières	Boiler Preservatives
Thermomètres	Thermometers
Tiges de forets en acier à marche rapide et acier argenté	High Speed and Silver Steel Drill Rods
Tiges et sections creuses (en laiton, cuivre, etc.)	Hollow Rods and Sections (Brass, Copper, etc.)
Tiges et sections de cuivre	Copper Rods and Sections
Tiroirs	Slide Valves
Tissus et ouvrages en fils métalliques	Wire Work and Woven Wire
Toits, constructions en fer, etc.	Roofs, Iron Buildings, etc.
Toiture 'Ruberoid'	'Ruberoid' Roofing
Tôles à chaudières (acier)	Boiler Plates (Steel)

Pour les noms des fabricants des specialités ci-dessus, se reporter aux rubriques correspondantes en anglais dans le 'Classified Directory and Buyers' Guide' ('*Répertoire Analytique des Annonceurs*'), *pages* 2541–2611.

FRANÇAIS.	ANGLAIS.
Tôles d'acier imperforable	Bullet-proof Steel Plates
Tôles de toiture d'amiante cimentées ondulées	Asbestos Cement Corrugated Roofing Sheets
Tôles découpées, enveloppes de cylindres, etc.	Sheet Metal Work, Cylinder Cases, etc.
Tôles plates d'amiante cimentée (pour murailles, cloisons, plafonds, etc.)	Asbestos Cement Flat Sheets (for Walls, Partitions Ceilings, etc.)
Tôles réfractaires pour cloisons et murailles	Fireproof Partition and Wall Sheets
Tournage (tout métal)	Turned Work (any Metal)
Tours. *Voir* Fabricants d'outils	Lathes. *See* Tool Makers
Tours et outils à grande vitesse	'Speedicut' High-Speed Tools
Tours réfrigérantes	Cooling Towers
Tracteurs, Lubrifiants pour	Tractor Lubricants
Tracteurs à vapeur et électriques	Traction Engines (Steam and Electric)
Trains finisseurs	End Mills
Traitement des métaux par le chaleur	Heat Treatment of Metals
Tramways à câble métallique	Tramways (Wire Rope)
Tramways, Câbles aériens en acier pour	Tramways (Steel Wire Ropes for)
Tramways et Chemins de fer électriques. *Voir* Chemins de fer et Tramways électriques	Tramways and Railways (Electrical). *See* Electric Railways and Tramways
Trancheuses mécaniques	Stone Channelling Machines
Transformateurs en cascade	Motor Converters
Transporteurs aériens par câbles	Wire Ropeways
Transporteurs par câbles	Cableways
Transporteurs par câbles aériens	Aerial Ropeways
Trempe de surface	Case Hardening
Treuils (à vapeur, à l'électricité, à l'essence	Winches (Steam, Electric & Petrol)
Treuils (friction)	Winches (Friction)
Treuils roulants	Crab Winches
Tubes	Tubes
Tubes à dépêches pneumatiques etc.	Pneumatic Despatch Tubes etc.
Tubes d'acier. *Voir* Tubes	Steel Tubes. *See* Tubes
Tubes d'acier pour canalisations électriques	Steel Conduits for Electric Wiring
Tubes de chaudières	Boiler Tubes
Tubes de condenseurs (cuivre rouge) *Voir* Tubes de cuivre rouge	Condenser Tubes (Copper). *See* Copper Tubes
Tubes de cuivre rouge	Copper Tubes
Tubes en fer	Iron Tubes. *See* Tubes
Tubes en fer et en acier	Iron and Steel Tubes
Tubes et accessoires	Tubes and Fittings
Tubes et serpentine réfrigérateurs	Refrigerating Tubes and Coils
Tubes et tuyaux hydrauliques	Hydraulic Tubes and Pipes
Tubes métalliques flexibles	Tubing (Flexible Metallic)
Tubes pneumatiques	Tubes (Pneumatic)
Tubulures d'observation pour chaudières	Inspection Blocks for Boilers
Tuiles d'amiante	Asbestos Roofing Tiles
Tuiles et tôles ondulées (Ciment-Amiante)	Corrugated Tiles and Sheets (Asbestos-Cement)
Turbines, Ailes de	Turbine Blading
Turbines à vapeur	Turbines (Steam). *See* Steam Turbines
Turbines à vapeur et accessoires	Steam Turbines and Fittings
Turbines, roues hydrauliques et moteurs hydrauliques	Turbines, Water Wheels, and Water Motors

Pour les noms des fabricants des spécialités ci-dessus, se reporter aux rubriques correspondantes en anglais dans le 'Classified Directory and Buyers' Guide' ('*Répertoire Analytique des Annonceurs*'), *pages* 2541–2611.

FRANÇAIS.	ANGLAIS.	FRANÇAIS.	ANGLAIS.
Turbo-alternateurs	Turbo Alternators	Ventilateurs : soufflants, aspirants, électriques, etc.	Fans : Blowing, Exhaust, Electric, etc.
Turbo - génératrices. *Voir* Dynamos et Moteurs	Turbo - Generators. *See* Dynamos and Motors	Ventilateurs électriques. *Voir* Ventilateurs	Electric Fans. *See* Fans
Turbo-pompes	Turbo-Pumps	Ventilateurs épurateurs de gaz	Gas Washing Fans
Tuyaux. *Voir* Tubes	Pipes. *See* Tubes	Ventilation, chauffage, etc.	Ventilating, Heating, etc.
Tuyaux d'acier rivetés	Riveted Steel Pipes	Vérins hydrauliques et à vis	Jacks (Hydraulic and Screw)
Tuyaux d'acier soudés à l'autogène	Welded Steel Pipes	Vernis	Varnishes
Tuyaux de fonte pour eau et gaz	Cast Iron Pipes for Water and Gas Purposes	Vernis et enduits isolants	Insulating Varnishes and Compounds
Tuyaux de vapeur. *Voir* Tubes	Steam Pipes. *See* Tubes	Verres d'indicateurs de niveau d'eau	Gauge Glasses
Tuyaux de ventilation	Ventilating Shafts	Verres pour graisseurs	Lubricating Glasses
Tuyaux et accessoires pour gaz	Gas Tubes and Fittings	Vide (Pompes à). *Voir* Pompes	Vacuum Pumps. *See* Pumps
Tuyaux flexibles en cuir et en toile etc.	Hose Pipes, Leather and Canvas Hose, etc.	Vieux métaux	Metal Scrap. *See* Scrap Metals
Tuyaux flexibles pour brigades de pompiers, usines, etc.	Hose for Fire Brigades, Mills, etc.	Vis (fer, acier, cuivre et bronze marin)	Screws (Iron, Steel, Copper, and Naval Brass)
Tuyaux flexibles pour le chauffage à vapeur	Steam Heating Tubes (Flexible)	Vis mécaniques	Machine Screws
Tuyaux métalliques flexibles	Hose (Flexible Metallic), Metallic Tubing (Flexible)	Voitures et wagons de chemins de fer	Carriages and Wagons (Railway)
Tuyères de haut fourneaux	Blast Furnace Tuyères	Voltmètres. *Voir* Instruments électriques	Voltmeters. *See* Instruments (Electrical)
		Vulcanite et fibre vulcanisée	Vulcanite and Vulcanised Fibre
U			
Ustensiles et machines agricoles	Agricultural Tools and Machinery	W	
		Wagons à bascule	Tip Wagons
V		' Woodite '	' Woodite '
Vannes et robinets-vannes	Sluice Gates and Valves		
Vannes pour docks (Constructeurs de)	Dock Gates (Builders of)		
Vaporisateurs	Spraying Machines	Z	
Véhicules à traction motrice (pour le commerce)	Motor Vehicles (Commercial)	Zincs non incrustants pour piles	Zincs (Non-encrusting for Primary Batteries)

Pour les noms des fabricants des spécialités ci-dessus, se reporter aux rubriques correspondantes en anglais dans le ' Classified Directory and Buyers' Guide ' (' Repertoire Analytique des Annonceurs '), pages 2541-2611.

TRADUZIONE DELLE RUBRICHE CHE FIGURANO NELLA GUIDA CLASSIFICATA DELLE VARIE SPECIALITÀ COMPRESE NEGLI ANNUNCI (pag. 2541–2611).

Per i nomi dei fabbricanti delle specialità elencate su questa pagina il lettore è pregato di vedere le rubriche corrispondenti in lingua inglese nel 'Classified Directory and Buyers' Guide' ('Guida classificata degli annunci'), pag. 2541–2611. Per gli indirizzi delle ditte aventi degli annunci ed il posto dove detti annunci appaiono nella guida vedesi l'elenco alfabetico a pagine 2521–2538.

ITALIANO.	INGLESE.
A	
Accessori di bronzo	Gunmetal fittings
Accessori per aeroplani	Aeroplane Accessories
Accessori per automobili	Motor Car Accessories
Accessori per caldaie	Boiler Fittings. *See* Engine and Boiler Fittings
Accessori per motrici e caldaie, focolari, tubi, ecc.	Engine and Boiler Fittings, Boiler Furnaces, Tubes, etc.
Acciai a tempera di superficie	Case Hardening Steels
Acciai al cromo-vanadio	Chrome - Vanadium Steels
Acciai al nichelio ed al cromo-nichelio	Nickel and Nickel Chrome Steels
Acciai fusi al crogiuolo	Crucible Cast Steels
Acciai per aviazione	Aircraft Steels
Acciai per stampi	Die Steels
Acciaio a tempera d'aria per ingranaggi	Air Hardening Gear Steel
Acciaio ad alta tensione	High Tensile Steel
Acciaio al manganese	Manganese Steel
Acciaio (lingotti)	Steel (Blooms and Billets)
Acciaio elettrico, Fabbricanti di	Electric Steel Manufacturers
Acciaio immacolato ed irruginibile	Stainless and Rustless Steel
Acciaio in lamiere per piloni	Steel Sheet Piling
Acciaio irruginibile	Rustless Steel
Acciaio irruginibile di Firth	Firth's Stainless Steel
Acciaio lucente, Fabbricanti di	Bright Steel Manufacturers
Acciaio 'Mesmeric' a tempera di superficie	'Mesmeric' Case Hardening Steel
Acciaio per macchine, Fabbricanti di	Machinery Steel Manufacturers
Acciaio per magneti	Magnet Steel
Acciaio per utensili	Tool Steel
Acciaio rapido per utensili	High-Speed Tool Steel
Acciaio rapido 'Speedicut'	'Speedicut' High-speed Steels
Acciaio Siemens - Martin	Siemens - Martin Steel
Accoppiamenti ferroviari	Railway Couplings
Accumulatori	Accumulators. *See* Batteries
Accumulatori (di elementi e batterie)	Storage Cells and Batteries
Accumulatori elettrici	Storage Cells
Accumulatori idraulici	Accumulators (Hydraulic)
Acetilene	Acetylene
Acetilene, Boe da segnale e gavitelli ad	Acetylene Buoys and Beacons
Acetilene, Impianti per generare	Acetylene Generating Plants
Acido idrocloridico	Hydrochloric Acid
Acido nitrico	Nitric Acid

ITALIANO.	INGLESE.	ITALIANO.	INGLESE.
Acido per accumulatori	Accumulator Acid	Apparecchi chimici ed elettro-chimici	Chemical and Electro-Chemical Apparatus
Acido solforico	Sulphuric Acid		
Acqua di alimentazione (misurazione dell')	Feed-Water (Measurement of)	Apparecchi di Radio-Telegrafia	Radio-Telegraphic Apparatus
		Apparecchi di ricupero	Recovery Plants
Acqua per alimentazione caldaie (Eliminazione dell' olio dall')	Boiler Feed-Water, Oil elimination from	Apparecchi di riscaldamento a gas	Heating Plant (Gas)
		Apparecchi di sollevamento	Lifting and Hoisting
Affilatrici di punte	Drill Sharpeners	Apparecchi di sollevamento	Lifting and Hoisting Machinery
Alberi ferroviari a gomito	Railway Crank-shafts	Apparecchi d trazione	Hauling Plant. *See* Winding and Hauling
Alesatori per sedi di valvole	Valve Reseaters		
Alesatoi e maschi	Reamers and Taps	Apparecchi elettrici per il riscaldamento e per la cucina	Electric Heating and Cooking Apparatus
Alluminio (lingotti, fogli, tubi, fili, cavi, sezioni, ecc.)	Aluminium (Ingots, Sheets, Tubes, Wire, Cables, Sections, etc.)		
Alluminio, Polvere d'	Aluminium Powder	Apparecchi e macchine per sollevamento	Lifting and Hoisting Machinery and Lifting Tackle
Alternatori	Alternators	Apparecchi fotografici	Photographic Apparatus
Alternatori a turbina	Turbo Alternators	Apparecchi fotografici e otturatori	Cameras and Shutters
Amianto (articoli, guarnizioni, ecc.)	Asbestos Goods, Fittings, etc.	Apparecchi interruttori	Switch Gear
Amianto (rivestimenti e materassi)	Asbestos Coverings and Mattresses	Apparecchi per catramazione stradale	Road Tarring Appliances
Analisi dei gas prodotti dalla combustione nelle caldaie	Boiler Flue Gases (Analysis of)	Apparecchi per essiccare (Essiccatoi)	Drying Apparatus
Ancore	Anchors	Apparecchi per estinguere incendi	Fire Extinguishing Appliances
Anelli per giunti di rame	Copper Jointing Rings	Apparecchi per filtrare	Filtering Apparatus
Anelli per tubi di vetro per livelli	Gauge Glass Rings	Apparecchi per forzare i bulloni	Bolt Forcers
Anelli per pistone	Piston Rings	Apparecchi per galvanizzare	Galvanisers
Anelli per vetri di livello d' acqua	Gauge Glass Washers	Apparecchi per il raffreddamento ad acqua	Water-Cooling Apparatus
Antiruggine 'Syronite'	'Syronite' Rust-Preventive	Apparecchi per il tiraggio forzato per aspirazione e pressione	Forced and Induced Draught Apparatus
Apparecchi automatici per estinguere incendi, marca 'Grinnell'	'Grinnell' Sprinklers		
Apparecchi automatici per l'alimentazione del fuoco nelle caldaie	Mechanical Stokers	Apparecchi per la distillazione dell'acqua dolce	Distilling Apparatus (Fresh Water)

Per i nomi dei fabbricanti delle specialità elencate su questa pagina il lettore è pregato di vedere le rubriche corrispondenti in lingua inglese nel 'Classified Directory and Buyers' Guide' ('Guida classificata degli annunci'), pag. 2541-2611.

ITALIANO.	INGLESE.
Apparecchi per la distillazione del l'acqua ecc. *Vedere anche* Condensatori	Water Distilling Apparatus etc. *See also* Condensers
Apparecchi per la pulizia delle caldaie	Boiler Cleaners (Mechanical and Electrical)
Apparecchi per la trasmissione della forza motrice	Power Transmission Appliances
Apparecchi per l'illuminazione elettrica ed accessori per uso elettrico	Electric Light Fittings and Electrical Accessories
Apparecchi per maneggiare il carbone, il coke e la cenere	Coal, Coke, and Ash Handling Plants
Apparecchi per neutralizzare e purificare l'acqua. *Vedere anche* Riscaldatori dell' acqua d' alimentazione ecc.	Water Softening and Purifying Apparatus. *See also* Feed Water Heaters etc.
Apparecchi per palombari	Diving Apparatus
Apparecchi per pesare	Weighing Machines
Apparecchi per rinfrescare ed inumidire l'aria	Air-Cooling and Humidifying Apparatus
Apparecchi per telegrafia senza fili	Wireless Telegraphic Apparatus
Argani	Crab Winches
Aria liquida	Liquid Air
Armature per cemento armato	Concrete (Reinforcement for)
Arnesi di Piombino	Pipe Fitters' Tools
Articoli di gomma elastica meccanica	Mechanical Rubber Goods
Ascensori idraulici	Hydraulic Lifts. *See* Lifting and Hoisting
Asfalto	Asphalte
Assi d'elica	Propeller Shafts
Assi (ferroviari)	Axles (Railway)
Attrezzatura navale	Shipping Tackle
Attrezzatura per aeroplani e dirigibili	Rigging for Air Craft
Attrezzi e macchine agricole	Agricultural Tools and Machinery
Ausiliari per turbine ad ingranaggio	Geared Turbine Auxiliaries
Autocarri (commerciali)	Motor Vehicles (Commercial)
Automobili	Motor Cars
Automobili, Starters per	Motor Starters

B

Bacchette di metallo giallo 'Dixtampo' per stampatura e forgiatura a caldo	'Dixtampo' Yellow Metal Rods for Hot Stamping and Forging
Bacchette di ottone 'Dixtrudo' per filettatura e tornitura a grande velocità	'Dixtrudo' High Speed Brass Screwing and Turning Rods
Bacini galeggianti	Docks (Floating)
Barometri	Barometers
Batterie (Accumulatori)	Batteries Electrical Storage)
Batterie di accumulatori elettrici	Electrical Storage Cells and Batteries. *See* Storage Cells
Battipali, quipaggiamento per	Pile Driving Equipments
Battipali, Telai per	Pile Driving Frames
Bianco di Spagna	Whiting
Billette (acciaio	Billets Steel)
Blocchi d' appoggio ferroviari	Railway Stop Blocks
Blocchi di sostegno e rivestimenti per caldaie	Boiler Blocks and Covers
Boe e gavitelli	Buoys and Beacons
'Bollerine'	'Boilerine'
Bronzo	Bronze. *See* Brass and Bronze
Bronzo al manganese	Manganese Bronze
Bronzo fosforoso	Phosphor Bronze
Bulloni e dadi (ferro, acciaio, rame, bronzo marino, ecc.)	Bolts and Nuts (iron, steel, copper, naval brass, etc.)
Bulloni, Chiodi e serraviti d' alluminio	Aluminium Studs, Bolts and Nuts

Per i nomi dei fabbricanti delle specialità elencate su questa pagina il lettore è pregato di vedere le rubriche corrispondenti in lingua inglese nel 'Classified Directory and Buyers' Guide' ('Guida classificata degli annunci'), pag. 2541–2611.

ITALIANO.	INGLESE.
Bulloni isolatori per telegrafo ed ogni genere di lavoro in ferro per telegrafo e telefono	Telegraph Insulator Bolts and all kinds of Ironwork for Telegraph and Telephone
C	
Caisson (Fabbricanti di)	Caisson (Builders of)
Calce e pietra calcarea	Lime and Limestone
Calcestruzzo, Impianti per fondamenti di	Concrete Placing Plants
Calcestruzzo, Mescolatori di	Concrete Mixers
Calcolatori di paghe	Wages Calculators
Calcolatori (paghe)	Calculators (Wages)
Calcolatrici	Counting Instruments
Caldaie a tubi d'acqua. *Vedere* Fabbricanti caldaie	Watertube Boilers *See* Boiler Manufacturers
Caldaie a vapore. *Vedi* Fabbricanti caldaie	Steam Boilers. *See* Boiler Manufacturers
Caldaie marine e terrestri, Forni per	Furnaces for Marine and Land Boilers
Caldaie per la concentrazione del vuoto	Vacuum Pans (concentrating)
Caldaie per la fornitura d'acqua calda	Hot Water Supply Boilers
Caldaie riscaldate dal calore dello scappamento	Exhaust Heat Boilers
Caloriferi	Calorifiers
Calorimetri per l'assaggio dei combustibili	Calorimeters for Fuel Testing
Camini	Chimney Stacks
Campanelli (elettrici)	Bells (Electric)
Cannelli (Saldatura e tagliatura ad acetelene)	Blowpipes (Acetylene Welding and Cutting)
Cantieri navali	Ship Builders
Carbone polverizzato, Impianti di	Powdered Coal Plants
Carburo di calce	Carbide of Calcium
Carburo di calcio	Calcium Carbide
Carri (ferroviari)	Wagons (Railway)
Casellari per documenti e classificazione d'Indirizzi	Filing and Card Index Cabinets
Cassette di distribuzione	Slide Valves
Catene di comando	Driving Chains
Catene e cavi-catene	Chains and Chain Cables
Catene e comando a catena	Chains and Chain Driving
Catene e ganci per grue	Crane Chains and Hooks
Catene per miniere e di trazione	Mining and Hauling Chains
Cavi armati 'Cab Tyre'	'Cab Tyre' Sheathed Cables
Cavi da miniera ed accessori	Mining Cables and Accessories
Cavi (di filo di acciaio zincato)	Hawsers (Galvanized Steel Wire)
Cavi elettrici 'Endural'	'Endural' Electric Cables
Cavi elettrici. *Vedi* Cavi: Telegrafo, Telefono, Luce Elettrica e Sommergibile	Electric Cables. *See* Cables: Telegraph, Telephone, Electric Light and Submarine
Cavi elettrici (Tipo 'C.T.S.'). *Vedi* Cavi 'Cab Tyre Sheathed'	Electric Cables ('C.T.S.' Type). *See* 'Cab Tyre Sheathed' Cables
Cavi per la navigazione, trazione, ecc.	Cables for Shipping, Haulage, etc.
Cavi per pozzi petroliferi	Oil Well Ropes
Cavi solidi di gomma	Solid Rubber Cables. *See* Cables
Cavi (telegrafici, telefonici, per luce elettrica e sottomarini)	Cables: Telegraph, Telephone, Electric Light and Submarine
Celle frigorifere	Cold Storage
Cementi (Portland, Keene e di Paro)	Cements (Portland, Keenes', & Parian)
Cemento armato	Ferro-Concrete. *See* Reinforced Concrete

Per i nomi dei fabbricanti delle specialità elencate su questa pagina il lettore è pregato di vedere le rubriche corrispondenti in lingua inglese nel 'Classified Directory and Buyers' Guide' (*'Guida classificata degli annunci'*), *pag.* 2541-2611.

ITALIANO.	INGLESE.	ITALIANO.	INGLESE.
Cemento d'amianto e tegole, Macchine per fabbricare lastre di	Asbestos Cement Sheet and Tile Making Machinery	Colori, vernici e copali	Colours, Paints and Varnishes
Cemento d'amianto 'Fobrent'—lastre ondulate e piatte	'Fibrent' Asbestos Cement Corrugated and Flat Sheets	Combustione superficiale	Surface Combustion
Cemento di Portland	Portland Cement	Composizione di grafite 'Foliac' per guarnizioni di tubi	'Foliac' Graphite Pipe Joint Compound
Cemento, Impermeabilizzazione di	Cement, Waterproofing of	Composizioni impermeabili	Waterproofing Compounds
Cemento 'Kisol' per caldaie, tubi di vapore, ecc.	'Kisol' Cement for Boilers, Steam Pipes, etc.	Composizioni per parti lucide	Bright Part Coatings
Cemento per giunti	Jointing Cement	Composizioni per parti lucide e macchine	Coatings (Bright Part) and Machinery Finishes
Cemento Portland (Macchine per assaggio di)	Portland Cement (Testing Machines for)	Composizioni per preservare le caldaie	Boiler Preservatives
Ceppi per freni	Brake Blocks	Composti lubrificanti	Lubricating Compounds
Chassis e carrelli	Underframes and Bogies	Composizioni per tetti	Roofing Compounds
Chassis e carrelli in acciaio pressato	Pressed Steel Underframes and Bogies	Compressori d'aria	Air Compressors
Chimici idrologici	Hydrological Chemists	Condensatori a energia cinetica	'Contraflo' Kinetic Condensers
Chiodi (ferro, acciaio, rame, bronzo marino, ecc.)	Rivets (Iron, Steel, Copper, Naval Brass, etc.)	Condensatori, Evaporatori, Apparecchi per addolcire l'acqua, e per la sua distillazione, ecc.	Condensers, Evaporators, Water Softening and Distilling Apparatus, etc.
Chiuse e valvole a saracinesca	Sluice Gates and Valves	Condotti	Conduits
Chiuse per bacini (Costruttori di)	Dock Gates (Builders of)	Condotti	Pipe Lines
Cilindri	Cylinders	Contatori d'acido carbonico	CO_2 Recorders
Cinghie, corde, ecc.	Driving Bands, Ropes, etc.	Contatori d'acqua	Recorders (Water)
Cinghie di balata	Balata Belting	Contatori d'acqua	Water Recorders
Cinghie di cotone	Cotton Belting	Contatori d'acqua	Water Meters
Cinghie di cuoio. *Vedere* Cinghie	Leather Belting. *See* Belting	Contatori d'aria	Air Meters
Cinghie di pelo di cammello Marca 'Cammello' (Unici fabbricanti di)	'Camel' Hair, 'Camel' Brand Belting (Sole Makers of)	Contatori di gas	Gas Meters
Cinghie ecc.: Cuoio, cotone, pelo, gomma, ecc.	Belting etc., Leather, Cotton, Hair, Indiarubber, etc.	Contatori di vapore	Steam Meters
Cisterne saldate	Welded Tanks	Contatori (aria)	Meters (Air)
Colle marine	Marine Glues	Contatori (gas)	Meters (Gas)
Collegi (d'ingegneria)	Colleges (Engineering)	Contatori (vapore)	Meters (Steam)
Colonne, e fusioni per fogne, gas e acqua potabile	Columns and Castings for Sewage, Gas, and Water Works	Contatori (acqua)	Meters (Water)
		Contatori del rendimento delle macchine	Machine Output Recorders
		Contatori per acqua da scarico	Waste Water Meters
		Contatori per miniere	Minemeters

Per i nomi dei fabbricanti delle specialità elencate su questa pagina il lettore è pregato di vedere le rubriche corrispondenti in lingua inglese nel 'Classified Directory and Buyers' Guide' (*'Guida classificata degli annunci'*), *pag.* 2541–2611.

ITALIANO.	INGLESE.
Convertitori	Rotary Converters
Copali	Varnishes
Copali e materie isolanti	Insulating Varnishes and Compounds
Coperchi e rivestimenti per condotte fumo	Flue Covers and Linings
Coperture di silicato di cotone e lana di scorie	Silicate Cotton and Slag Wool Coverings
Coperture per caldaie e tubi	Boiler and Pipe Coverings
Coperture per tetti 'Rok'	'Rok' Roofing
Coperture pe tetti 'Ruberoid'	'Ruberoid' Roofing
Corde di acciaio e cavi per eroplani	Aeroplane Steel Wire Strands and Cables
Corde: metalliche di canapa, manilla, cuoio, cotone, ed amianto	Ropes: Wire, Hemp, Manilla, Leather, Cotton, Asbestos
Corredi telefonici	Telephone Equipment
Costruttori aeronautici. *V.* Costruttori di aeroplani	Aircraft Manufacturers. *See* Aeroplane Builders
Costruttori di aeroplani	Aeroplane Builders
Costruttori di apparecchi per la ventilazione	Ventilating Engineers
Costruttori di bacini galeggianti	Floating Dock Builders
Costruttori di caldaie	Boiler Manufacturers
Costruttori di Pozzi Artesiani	Artesian Well Engineers
Costruttori e proprietari di barconi	Barge Builders and Owners
Costruzioni in cemento armato	Concrete (Reinforced) Construction
Costruzioni in ferro, in acciaio, ecc.	Structural Iron and Steel Work, etc.
Cristalleria per l'illuminazione di navi, ecc.	Glassware for Ships Lighting, etc.
Crivelli e Buratti	Sieves and Screens
Crogiuoli	Crucibles

ITALIANO.	INGLESE.
Cuscinetti a sfere	Bearings (Ball)
Cuscinetti di spinta	Thrust Bearings
D	
Dadi	Nuts
Demagnetizzatori	Demagnetizers
'Dexine'	'Dexine'
Digestitori	Digesters
Dinamite	Dynamite
Dinamo e motori	Dynamos and Motors
Dinamometri	Dynamometers
Disincrostanti per caldaie (per uso interno)	Boiler Composition (for inside use)
Dispositivi per Lubricazione	Lubricating Devices
Distruttori (Destructors) di immondizie	Destructors (Refuse)
Draghe (Funi di filo d'acciaio per)	Dredgers (Steel Wire Rope for)
'Duralumin'	'Duralumin'
E	
Ebonite	Ebonite
Economia di carbone, Specialisti di	Coal Economy Specialists
Economia di combustibile, Sistemi per	Fuel Economy Systems
Economizzatori, di combustibili	Fuel Economisers. *See* Economisers
Elettrodi (per saldatura ad arco elettrico)	Electrodes (for Electric Arc Welding)
Elevatori. *Vedere* Apparecchi di sollevamento	Elevators. *See* Lifting and Hoisting
Eliche	Propellers, Screw Propellers
Eliminatori dell' olio	Oil Eliminators
Elmi contro il fumo	Smoke Helmets
Escavatori e trasportatori	Excavators and Transporters

Per i nomi dei fabbricanti delle specialità elencate su questa pagina il lettore è pregato di vedere le rubriche corrispondenti in lingua inglese nel 'Classified Directory and Buyers' Guide' ('Guida classificata degli annunci'), pag. 2541-2611.

ITALIANO.	INGLESE.
Esplosivi	Explosives
Esplosivi per miniere	Mining Explosives
Essiccatoi e depuratori a vapore	Steam Dryers and Purifiers
Estintori (automatici)	Sprinklers (Automatic)
Estrattori del catrame	Tar Extractors
Evaporatori a vacuo per liquidi chimici	Vacuum Evaporators for Chemical Liquids
Evaporatori ad effetto multiplo	Multiple Effect Evaporators
Evaporatori, condensatori, impianti per la distillazione dell' acqua	Evaporators, Condensers, Water Distilling Apparatus, etc.
Evaporatori per zucchero e liquori	Evaporators for Sugar and Trade Liquors
F	
Fabbricanti di filo isolato	Wire (Insulated) Manufacturers
Fabbricanti di filo metallico	Wire Manufacturers
Fabbricanti di gomma, gutta-percha e bitume	India Rubber, Gutta Percha, and Bitumen Manufacturers
Fabbricanti di macchine utensili	Tool Makers, Machinists, etc.
Fabbricanti di utensili per trivellare (pozzi artesiani)	Boring Tool Makers (Artesian)
Fabbricanti e commercianti di acciaio	Steel Manufacturers and Merchants
Fabbricanti e commercianti di ferro e acciaio	Iron and Steel Manufacturers and Merchants
Fabbricati per officine (Costruzione dei medesimi)	Factory Buildings (Construction of)
Fabbricati (per render impermeabile i)	Buildings (Waterproofing of)
Fabbricati (protezione contro il fulmine dei)	Buildings, Protection of, from Lightning
Fabbricati	Buildings
Fabbriche di armi e munizioni	Gun and Ammunition Works
Fari, Fabb. di, Apparecchi per	Lighthouse Apparatus Manufacturers
Feltri per macchine tipografiche	Felts for Printing Machinery
Feltri per tettoie	Roofing Felts
Feltro e tetti di feltro	Felt and Felt Roofs
Feltro per fabbricanti di carta	Paper Makers' Felts
Ferri ed acciai per costruzioni	Structural Iron and Steel Work
Ferro ed acciaio galvanizzati, Fabbricanti di	Galvanised Iron and Steel Manufacturers
Ferro ed accacio, Rottami di	Iron and Steel Scrap
Ferrovie aeree (funicolare)	Cableways
Ferrovie a scartamento ridotto, portatili, ecc.	Railways; Light, Portable, etc.
Ferrovie e tramvie elettriche	Electric Railways and Tramways
Ferrovie portatili	Portable Railways
Fettuccie e spaghi per cotonifici	Mill Bandings and Twines
Fibbra vulcanizzata	Fibre (vulcanised)
Filo telegrafico	Telegraph Wire' *See* Wire
Filovie	Wire Ropeways
Filtri d' aria	Air Filters
Filtri per l' acqua d'alimentazione delle caldaie	Boiler Feed Filters *See* Feed Water
Filtri per l' olio	Oil Filters
Focolai (caldaie). *Vedi* Accessori per motrici e caldaie	Furnaces (Boiler). *See* Engine and Boiler Fittings
Focolai per caldaie	Boiler Furnaces
Fogli di amianto 'Poilite' e tegole per tetti	'Poilite' Asbestos Sheets and Roofing Tiles
Fogli incatramati	Dampcourse and Bitumen Sheeting

Per i nomi dei fabbricanti delle specialità elencate su questa pagina il lettore è pregato di vedere le rubriche corrispondenti in lingua inglese nel 'Classified Directory and Buyers' Guide' ('Guida classificata degli annunci'), pag. 2541–2611.

ITALIANO.	INGLESE.	ITALIANO.	INGLESE.
Fogli incatramati marca 'Callendrite'	'Callendrite' Dampcourse and Sheeting	Freni (elettro-meccanici)	Brakes (Electro-Mechanical)
Fondazioni di caldaie	Boiler Settings	Freni (per materiale ferroviario)	Brakes (Railways)
Fondazioni per caldaie	Settings (Boiler)	Fresa con coda	End Mills
Fondazioni per caldaie Lancashire (perfezionate)	Lancashire Boiler Settings (Improved)	Fresatrici	Milling Machines
Fondazioni perfezionate per caldaie	Boiler Settings (Improved)	Frese	Milling Cutters
Fonderie	Founders	Fucine da fabbro e relativi impianti	Smiths' Hearths and Plant
Fonderie di ottone	Brass Founders	Fucine portatili	Forges (Portable)
Forni a carbone	Coal Furnaces. *See* Furnaces	Funi d'estrazione e di trazione	Winding and Hauling Ropes
Forni a crogiuolo	Crucible Furnaces	Funi di comando di cotone	Cotton DrivingRopes
Forni ad olio. *Vedere* Forni	Oil Furnaces. *See* Furnaces	Funi metalliche	Wire Ropes
Forni a gas	Gas Furnaces. *See* Furnaces	Funi per pozzi petroliferi	Oil Well Ropes
Forni a gas ed impianti industriali	Industrial Gas Furnaces and Plants	Funicolari	Wire Rope Tramways
Forni da essicazione	Drying Stoves	Fusioni e pezzi forgiati	Castings and Forgings
Forni da forgia	Forging Furnaces. *See* Furnaces		
Forni di cottura e di tempera	Annealing and Tempering Furnaces	**G**	
Forni elettrici	Furnaces (Electric)	Gabbie di puleggia	Pulley Blocks
Forni e tubi per caldaie ecc.	Boiler Furnaces, Tubes etc.	Gabbie per ascensori	Lift Enclosures
Forni (industriali con riscaldamento a gas e ad olio)	Furnaces (Gas and Oil Heated and Industrial)	Gas e le sue applicazione nelle industrie	Gas and its Industrial Applications
Forni per metalli escluso il ferro	Furnaces (Non-ferrous Metal)	Gasogeni	Gas Producers
Forni per tempera. *Vedere* Forni	Tempering Furnaces. *See* Furnaces	Gasometri. *Vedere* Macchinari per officine a gas	Gas Holders. *See* Gas Works Plant
Forniture per disegnatori	Drawing Office Requisites	Generatori elettrici. *Vedere* Dinamo e Motori	Generators (Electric). *See* Dynamos and Motors
Forniture per la meccanica e per le ferrovie	Engineering and Railway Supplies. *See* Railway and Tramway Plant	Gesso	Chalk
Fotografia tecnica	Engineering Photography	Getti per valvole	Valve Castings
Frantoi per polverizzatori di pietre	Stone Pulverising Mills	Ghisa	Cast Iron
Freni(dinamometrici)	Brakes (Dynamometers)	Ghisa in pani	Pig Iron
		Giornali a fogli liberi	Loose Leaf Ledgers
		Giornali (tecnici). *Vedere* Libri e giornali	Journals (Technical). *See* Books and Journals
		Giroscopi	Gyroscopes
		Giunti a frizione	Friction Clutches
		Giunti flessibili	Flexible Couplings
		Gomma, Macchinario per	Rubber Machinery

Per i nomi dei fabbricanti delle specialità elencate su questa pagina il lettore è pregato di vedere le rubriche corrispondenti in lingua inglese nel 'Classified Directory and Buyers' Guide' (*'Guida classificata degli annunci'*), *pag.* 2541-2611.

ITALIANO.	INGLESE.	ITALIANO.	INGLESE.
Gomme per Automobili	Motor Tyres	Guarnizioni metalliche per stantuffo ('Lion')	Metallic Piston Rod Packing ('Lion')
Grafite 'Foliac' specialità	'Foliac' Graphite Specialities	Guarnizioni metalliche per stantuffo ('United States')	Metallic Piston Rod Packing ('United States')
Grafite 'Foliac' per caldaie	'Foliac' Boiler Graphite	Guarnizioni per giunti	Jointing Materials
Grafite 'Foliac' per tubature, Composizione di	'Foliac' Graphite Pipe Joint Compound	Guarnizioni per macchine	Engine Packing
Grafite-silica 'Foliac,' Pittura di	'Foliac' Silica-Graphite Paint	Guarnizioni per motori a gas	Gas Engine Packing
Grafite (piombaggine)	Graphite	Guarnizioni per motrici ('Lion')	Engine Packing ('Lion')
Grasso lubrificante	Grease (Lubricating)	Guarnizioni per motrici a vapore. *Vedere* Guarnizioni per giunti	Steam Jointing. *See* Jointing Materials
Grue	Cranes. *See* Lifting and Hoisting Machinery	Guarnizioni per stantuffi	Piston Packing
Grue a cucchiaio (elettriche)	Grabbing Cranes (Electric)	Guarnizioni per surriscaldatori di locomotive	Locomotive Superheated Packing
Grue a mano	Hand Cranes. *See* Lifting and Hoisting Machinery	Guarnizioni per vapore	Steam Packing
Grue a ponte	Overhead Runways	Guarnizioni per vapore 'Lion'	Steam Packing 'Lion
Guardie per livelli	Gauge Glass Protectors	Guarnizioni (vapore)	Packing (Steam). *See* Engine Packing
Guarniture interne per freni e giunti a frizione	Brake and Clutch Linings	Guarnizioni Walker marca 'Lion'	Walker's ('Lion') Packings
Guarniture interne per giunti a frizione	Clutch Linings		
Guarniture per caldaie. *Vedere anche* Accessori per motrici e caldaie	Boiler Mountings. *See also* Engine and Boiler Fittings	I	
Guarnizioni d'amianto marca 'Lion'	Asbestos Packing 'Lion'	Illuminazione degli stabilimenti	Factories (Lighting of)
Guarnizioni ('Lion' e 'Walkerite')	Joints ('Lion' and 'Walkerite')	Illuminazione dei treni	Lighting (Train)
Guarnizioni metalliche dell' asta dello stantuffo ('The Lancaster')	Metallic Piston Rod Packings ('The Lancaster')	Illuminazione delle officine	Workshop (Lighting of)
Guarnizioni marca 'Lion'	'Lion' Packing	Illuminazione e riscaldamento (Impianto a gas acetilene per)	Lighting and Heating (Acetylene Gas Plants for)
Guarnizioni marca 'United States'	Packing 'United States'	Impermeabili Mackintosh ed Incerate	Mackintoshes and Oilskins
Guarnizioni metalliche	Metallic Packing. *See* Engine Packing	Impianti a gas povero. *Vedere* Gasogeni	Producer Gas Plants. *See also* Gas Producers

Per i nomi dei fabbricanti delle specialità elencate su questa pagina il lettore è pregato di vedere le rubriche corrispondenti in lingua inglese nel 'Classified Directory and Buyers' Guide' ('Guida classificata degli annunci'), pag. 2541–2611.

ITALIANO.	INGLESE.	ITALIANO.	INGLESE.
Impianti a gas povero ad aspirazione	Suction Gas Plants	Incrostazioni e corrosioni nelle caldaie (Preservativi contro le)	Scale and Corrosion in Boiler (Preventives of)
Impianti al benzolo	Benzol Plants	Indicatori delle velocità per navi	Marine Speed Indicators
Impianti automatici per l'estinzione di incendi	Automatic Sprinklers	Indicatori del livello d'acqua	Water Level Indicators
Impianti di forza motrice a gas	Power Plant (Gas)	Indicatori (per motrici a vapore)	Indicators (Steam Engine)
Impianti di gas ad acqua	Water Gas Plants	Ingegneri aeronautici	Aeronautical Engineers
Impianti e macchinari per industrie chimiche	Chemical Plant and Machinery	Ingegneri consultanti	Advisory Engineers
Impianti idraulici ed apparecchi	Hydraulic Plants and Appliances	Ingegneri (Economia di combustibile)	Engineers (Fuel Economy)
Impianti idro-elettrici	Hydro-Electric Plants	Ingegneri (Fari)	Engineers (Lighthouse)
Impianto di catrame macadam ed asfalto	Tar Macadam and Asphalt Plant	Ingegneri elettrotecnici	Electrical Engineers
Impianto edilizio	Building Construction Plant	Ingegneri idraulici	Engineers (Hydraulic) Water-Power Engineers
Impianto per galvanizzazione	Galvanising Plant	Ingegneri meccanici	Engineers (Mechanical)
Impianti per gas 'Mond'	Mond Gas Plants	Ingegneri metallurgici	Metallurgical Engineers
Impianti per il caricamento e trasportatori	Loading and Transport Plants	Ingegneri telegrafisti	Telegraph Engineers
Impianti per la concentrazione dell'ammoniaca	Ammonia Concentration Plants	Ingranaggi	Gearing
Impianti per la distillazione e depurimento del catrame	Tar Distillation and Dehydrating Plants	Ingranaggi, alberi di trasmissione ecc.	Mill Gearing, Shafting, etc. *See* Shafting and Gearing
Impianti per l'illuminazione dei treni	Train Lighting Plant	Ingranaggi cilindrici e conici	Spur and Bevel Gearing
Imprese per costruzioni di fabbricati incombustibili	Partition Contractors and Fireproof Builders	Ingranaggi di riduzione	Reduction Gears
Imprese per costruzioni di tetti	Roofing Contractors	Ingranaggi elicoidali	Helical Gearing
Imprese per dragaggio	Dredging Contractors	Ingranaggi in cuoio verde	Gears (Raw Hide)
Imprese per luce elettrica	Electric Lighting Contractors	Ingranaggi per turbine. *Vedere* Turbine ad ingranaggi	Turbine Gears. *See* Geared Turbines
Incisori, disegnatori e tipografi	Engravers, Draughtsmen, and Printers	Ingranaggio a vite perpetua	Worm Gearing
		Injettori, Ejettori, ed Apparecchi generali per spruzzo. *Vedere* Injettori per caldaie a vapore	Injectors, Ejectors and General Jet Appliances. *See* Steam Injectors

Per i nomi dei fabbricanti delle specialità elencate su questa pagina il lettore è pregato di vedere le rubriche corrispondenti in lingua inglese nel 'Classified Directory and Buyers' Guide' ('*Guida classificata degli annunci*'), *pag.* 2541–2611.

ITALIANO.	INGLESE.
Injettori per caldaie a vapore	Steam Injectors
Insegnamento meccanico. *Vedere* Collegi	Engineering Training. *See* Colleges
Insegnamento tecnico. *Vedere* Scuole e Collegi	Technical Training. *See* Schools and Colleges
Intonaco	Plaster
Isolatori	Insulators
Istituti tecnici. *Vedere* Collegi e Scuole	Educational Institutions. *See* Colleges and Schools
Istrumenti aeronautici	Aeronautical instruments
Istrumenti meteorologici	Meteorological Instruments
Istrumenti di prova (elettrici). *Vedere* Istrumenti	Testing Instruments (Electrical). *See* Instruments
L	
Lame dritte per seghe	Hack Saw Blades
Lamiere di acciaio	Steel Sheets
Lamiere di acciaio piallate	Planished Steel Sheets
Lamiere per caldaie (acciaio)	Boiler Plates (Steel
Lamiere stagnate	Tin Plates
Laminatoi (macchinario elettrico per laminatoi)	Rolling Mills (Electrical Equipment of)
Lampade ad arco	Arc Lamps
Lampade a filamento metallico	Metal Filament Lamps
Lampade di sicurezza per minatori	Miners' Safety Lamps
Lampade elettriche	Lamps (Electric)
Lampade industriali	Lamps (Industrial)
Lampade; per saldare e per motore ad olio	Lamps: Brazing and Oil Engine
Lampade, torcie, chiusure, ecc., per ingegneri in generale	Lamps: Torch, Bunker, etc., for Engineers generally
Lana minerale	Mineral Wool
Lancie (a vapore ed a motore)	Launches (Steam and Motor)
Lastre d'acciaio a prova di palla	Bullet Proof Steel Plates
Lastre ondulate di cemento d'amianto per tetti	Asbestos Cement Corrugated Roofing Sheets
Lastre piatte di cemento d'amianto (per muri, pareti, soffitti, ecc.)	Asbestos Cement Flat Sheets (for Walls, Partitions, Ceilings etc.)
Lastre refrattarie per pareti e per muri	Fireproof Partition and Wall Sheets
Lastre (rame ed ottone)	Plates (Copper and Brass)
Lavori al tornio (qualunque metallo)	Turned Work (any Metal)
Lavori in ferro ed in lamiera	Wrought and Sheet Iron Work
Lavori in lamierino e coperture di cilindri ecc.	Sheet Metal Work, Cylinder Cases, etc.
Lavori in ottone di piombino	Plumbers' Brasswork
Lavoro di pressa	Presswork
Lavori di ramiere	Coppersmiths' Work
Leghe	Alloys
Leghe d'acciaio, Fabbricanti di	Alloy Steel Manufacturers
Legname, Preservativi di	Wood Preservatives
Libri e giornali scientifici	Books and Journals, Scientific
Lime	Files
Lingotti di bronzo	Gunmetal Ingots
Lingotti di bronzo per la Marina	Admiralty Gunmetal Ingots
Livelli d' acqua ecc. *Vedere* Manometri	Water Gauges etc. *See* Steam Gauges
Locomobili	Portable Engines
Locomotive	Locomotives
Locomotive ad olio (a scoppio)	Oil Locomotives (Internal Combustion)
Locomotive trattori (a vapore ed elettriche)	Traction Engines (Steam and Electrical)
Lubrificanti per motori	Motor Lubricants
Lubrificanti per trattrici	Tractor Lubricants
Lubrificatori e lubrificanti	Lubricators and Lubricants

Per i nomi dei fabbricanti delle specialità elencate su questa pagina il lettore è pregato di vedere le rubriche corrispondenti in lingua inglese nel 'Classified Directory and Buyers' Guide' (*'Guida classificata degli annunci'*), *pag.* 2541-2611.

ITALIANO.	INGLESE.
M	
Macchinari per alti forni	Blast Furnace Plant
Macchinari per dragaggio	Dredge Plant
Macchinari per fonderie	Foundry Plant
Macchinari per il ricupero dei prodotti secondari	By-Product Recovery Plants
Macchinari per la depurazione del gas	Gas Cleaning Plant
Macchinari per la perforazione delle gallerie	Tunnelling Plants
Macchinari per miniere da carbone	Colliery Plant
Macchinari per officine a gas	Gas Works Plant
Macchinario per miniere	Mining Machinery *See* Mining and Hauling Plants
Macchinario per il tè	Tea Shoots
Macchine automatiche, Fabb. di	Automatic Machine Makers
Macchine ad imbianchire, per la tintura e prettatura	Bleaching, Dyeing, and Finishing Machinery
Macchine caricatrici e scaricatrici per officine a gas e forni a coke	Charging and Discharging Machinery for Gas Works and Coke Ovens
Macchine cesoie, punzonatrici e per centrare	Shearing, Punching, and Bending Machines
Macchine da scrivere	Typewriters
Macchine di prova	Testing Machines
Macchine frantumatrici	Grinding Machinery
Macchine idrauliche sistema 'Tweddell'	'Tweddell's' System Hydraulic Machinery
Macchine idrauliche, utensili, apparecchi idraulici, ecc.	Hydraulic Machines, Tools and Appliances, etc.
Macchine lucidatrici	Polishing Machinery
Macchine (Magneto-elettriche)	Machinery (Electro-Magnets)
Macchine per alesare e spianare	Boring and Facing Machines
Macchine per filettare	Screwing Machines
Macchine per frantumare e polverizzare	Crushing and Pulverising Machinery
Macchine per fresare ingranaggi	Gear Cutting Machines
Macchine frigorifere	Refrigerating Machinery
Macchine per il cemento	Cement Machinery
Macchine per inverniciare	Painting Machines
Macchine per la fabbricazione della carta e della cellulosa	Paper and Pulp-Making Machinery
Macchine per la fabbricazione delle cartuccie	Cartridge Machinery
Macchine per la fabbricazione de ghiaccio. *Vedere* Macchine frigorifere	Ice-Making Machinery. *See* Refrigerating Machinery
Macchine per la fabbricazione della carta e per la stampatura del cotone	Paper-Making and Calico - Printing Machinery
Macchine per la fabbricazione della cellulosa	Pulp-Making Machinery
Macchine per la lavorazione del legno	Wood-Working Machinery
Macchine per la lavorazione della pietra	Stone Channelling Machines
Macchine per la lavatura del carbone	Coal Washing Machinery
Macchine per la posa dei cavi	Cable-Laying Machinery
Macchine per la prova del cemento	Cement-Testing Machines
Macchine per la prova del cemento Portland	Testing Machines for Portland Cement

Per i nomi dei fabbricanti delle specialità elencate su questa pagina il lettore è pregato di vedere le rubriche corrispondenti in lingua inglese nel 'Classified Directory and Buyers' Guide' ('Guida classificata degli annunci'), pag. 2541–2611.

ITALIANO.	INGLESE.	ITALIANO.	INGLESE.
Macchine per la pulitura del frumento e dei semi	Grain and Seed Cleaning Machinery	Martelli per forgiatori	Foundry Hammers
Macchine per mattonelle di combustibile brevettato	Briquette Machinery	Martelli meccanici. *Vedere* Martelli	Power Hammers. *See* Hammers
Macchine per mulini da grano	Flour-Milling Machinery	Martinetti (idraulici e a vite)	Jacks (Hydraulic and Screw)
Macchine per oleifici	Oil Mill Machinery	Maschi e filiere	Taps and Dies
Macchine piegatubi	Pipe-bending Machines	Materiale mobile per ferrovie e tramvie	Railway and Tramway Plant
Macchine soffianti. *Vedere* Ventilatori	Blowers. *See* Fans	Materiale per fonderia	Metal-Melting Plants
Macchine per spruzzare. Spruzzatrici	Spraying Machines	Materiale rotabile. *Vedere* Macchinari per ferrovie e tramvie	Rolling Stock. *See* Railway and Tramway Plant
Macchine tessili	Textile Machinery	Materie isolanti	Insulating Materials
Macchine utensili ed utensili a mano. *Vedere* Utensili per meccanici ed accessori, così pure fabbricanti di utensili	Machine and Hand Tools. *See* Engineers' Tools and Fittings, *also* Tool Makers	Mattoni e tegole, Macchine per fabbricare	Brick- and Tile-Making Machinery
Macinazione del carbone, elevatrici e trasportatrici	Coal Grinding, Elevating, and Conveying Machinery	Mattoni refrattari ed articoli di terra refrattaria	Firebricks and Fire Clay Goods
Magli a vapore, ad aria compressa e pneumatici	Steam, Compressed Air, and Pneumatic Power Hammers	Meccanismi di trasmissione ad olio a velocità variabile	Variable Speed Oil Transmission Gears
Magli a vapore. *Vedere* Magli	Steam Hammers. *See* Hammers	Meccanismi registratori di spese e tempo	Costs and Time Recorders
Magli (Battipali)	Hammers (Pile Driving)	Metalli antifrizione	Anti-Friction Metals
Magli (vapore, aria compressa, pneumatici, ecc.)	Hammers (Steam, Compressed Air, Pneumatic Power, etc.)	Metalli bianchi antifrizione	White Anti-friction Metals
Magneti di sollevamento	Lifting Magnets	Metalli in lingotti	Ingot Metals
Mandrini magnetici	Magnetic Chucks	Metalli laminati	Rolled Metals
Manganese e leghe di manganese	Manganese and Manganese Alloys	Metalli lavorati in sagome	Expanded Metal
Manicotti	Clutches	Metalli, Negozianti di	Metal Merchants
Manometri per vapore, rubinetti, livelli d'acqua, valvole di sicurezza, cassetti, indicatori, scaricatori dell' acqua di condensazione, ecc.	Steam Gauges, Cocks, Water Gauges, Safety Valves Slide Valves, Indicators, Steam Traps, etc.	Metalli per cuscinetti ecc.	Bearing Metals etc.
		Metalli per cuscinetti, antifrizione, ecc.	Metals: Bearing, Anti-Friction, etc.
		Metalli perforati	Perforated Metals
		Metalli (rottame)	Metals (Scrap)
		Metalli trafilati	Extruded Metals
		Metallo 'Bull's' e 'Melloid'	Bull's Metal and Melloid
		Metallo 'Delta'	Delta Metal
		Mica	Mica
		Micrometri	Micrometers
		Microscopi	Microscopes

Per i nomi dei fabbricanti delle specialità elencate su questa pagina il lettore è pregato di vedere le rubriche corrispondenti in lingua inglese nel 'Classified Directory and Buyers' Guide' (*'Guida classificata degli annunci'*), *pag.* 2541-2611.

ITALIANO.	INGLESE.	ITALIANO.	INGLESE.
Miniere da carbone (Funi di acciaio per)	Collieries (Steel Wire Ropes for)	Motori idraulici	Engines (Hydraulic)
		Motori tipo marina ad olio	Marine Oil Engines
Miniere di carbone (Macchinario elettrico per)	Collieries (Electrical Equipment of)	Motori tipo marina, caldaie e macchine ausiliari	Marine Engines, Boiler and Auxiliary Machinery
Misuratori degli sforzi	Strainmeters	Motrici a vapore	Steam Engines
		Motrici per laminatoi	Rolling Mill Engine
Misuratori dell' allungamento	Extensometers	Mulini e macchinario per lo zucchero	Sugar Mills and Machinery
Mistura di colla per verniciatori	Distemper		
Mola aerea (elettrica)	Aerial Grinders (Electric)		
		N	
Mole	Abrasive Wheels		
Mole a centro (elettriche)	Centre Grinders (Electric)	Navi serbatoi (costruttori di)	Oil Tank Ships (Builders of)
Mole a smeriglio. *Vedi* Macchine frantumatrici	Grinders. *See* Grinding Machinery	Nebbia, Fabbricanti di segnali da	Fog Signal Manufacturers
		Nettatubi	Tube Cleaners
Mole a smeriglio macchine, ecc.	Emery Wheels, Machinery, etc.	Nitrogeno	Nitrogen
Molini (polverizzatori)	Mills (Pulverizing)		
		O	
Molle	Springs		
Montacarichi. *Vedere* Apparecchi di sollevamento	Hoists. *See* Lifting and Hoisting	Oliatori ed apparecchi di alimentazione d'olio	Oil Feeders and Cans
Montacarichi e grue elettriche	Electric Lifts and Cranes	Olii, composizioni lubrificanti, ecc.	Oils, Lubricating Compounds, etc.
Montanti di acciaio	Stanchions (Steel)	Olio, Istallazioni ad	Oil Burning Installations
Motori di aviazione	Aero Engines		
Motori a benzina. *Vedere* Motori ad olio ed a gas	Petrol Engines. *See* Oil and Gas Engines	Olio per filettare	Screwing Oil
		Orologi elettrici	Clocks, Electric. *See* Electric Clocks
Motori ad olio, gas e benzina	Oil, Gas, and Petrol Engines	Orologi registratori	Time Recorders
		Oscillografi	Oscillographs
Motori ad olio pesante. *Vedere* Motori a petrolio	Crude Oil Engines. *See* Oil Engines	Ossigeno	Oxygen
		Ossigeno ed idrogeno, Generatori di	Oxygen and Hydrogen Generating Plants
Motori Diesel a vapore	Steam Diesel Engines		
		Ottone e bronzo	Brass and Bronze
Motori Diesel e Semi-Diesel	Diesel and Semi-Diesel Engines		
Motori a gas d'aria di petrolio	Petrol Air Gas Machines	P	
Motori a gas, olio e benzina	Gas, Oil, and Petrol Engines	Pali di turbine	Turbine Blading
		Pali telegrafici (ferro)	Telegraph Poles (iron)
Motori elettrici. *Vedere* Dinamo e motori	Electric Motors. *See* Dynamos and Motors	Parafulmini	Lightning Conductors

Per i nomi dei fabbricanti delle specialità elencate su questa pagina il lettore è pregato di vedere le rubriche corrispondenti in lingua inglese nel ' Classified Directory and Buyers' Guide ' (' Guida classificata degli annunci '), *pag.* 2541-2611.

ITALIANO.	INGLESE.	ITALIANO.	INGLESE.
Parafumo e generatori di vapore	Smoke Preventers and Steam Generators	Pompe ad aria	Air Pumps
		Pompe a pressione di capacità variabile	Variable Capacity Pressure Pumps
Paragradini	Stair Treads		
Pasta per cinghie	Belting Cream	Pompe a turbina	Turbine Pumps
Pattini e stampi	Shoes and Dies	Pompe a vapore. *Vedere* Pompe	Steam Pumps. *See* Pumps
Pavimenti ecc. (incombustibili)	Floors etc. (Fire-Resisting)	Pompe a vuoto. *Vedere* Pompe	Vacuum Pumps. *See* Pumps
Pavimenti incombustibili 'Decolite'	'Decolite' Fireproof Flooring	Pompe centrifughe. *Vedere* Pompe	Centrifugal Pumps. *See* Pumps
		Pompe ed impianti di sollevamento d'acqua	Pumps and Pumping Machinery
Perforatrici da carbone e tagliatrici	Coal Drills and Cutters		
Perforatrici da roccia	Rock Drills	Pompe per caldaie	Boiler Feed Pumps
Perforatrici d sondaggio	Core Drills	Pompe Roturbo	Roturbo Pumps
		Ponti (pensili)	Bridges (Wire Rope Suspension)
Perforatrici per roccie e per carbone	Boring Machines for Rock and Coal	Ponti, travate, ecc.	Bridges, Girders, etc.
		Porte pieghevoli	Collapsible Gates
Pezzi forgiati e fusioni. *Vedere* Fusioni e pezzi forgiati	Forgings and Castings. *See* Castings and Forgings	Preservativi (del legno)	Preservatives (Wood)
		Presse a centrare	Bending Presses
Pezzi forgiati in acciaio e fusioni. *Vedere* Fusioni e pezzi forgiati	Steel Forgings and Castings. *See* Castings and Forgings	Presse a forza meccanica	Power Presses
		Presse ad olio	Oil Presses
		Presse per cerchioni	Tyre Presses
Pezzi fucinati di rame	Copper Forgings	Presse per forgiare	Forging Presses
		Presse per obici	Shell Presses
Pezzi pressati a forza idraulica	Hydraulic Pressings	Presse per rottame	Scrap Presses
		Prodotti chimici	Chemicals
Piallatrici, mortizzatrici, filettatrici e limatrici	Planing, Slotting, Screwing, and Shaping Machines	Proiettori (Ossiacetelene)	Searchlights (Oxyacetylene)
		Proprietari di bacini	Dock Owners
Piattaforme giranti	Turn-tables	Proprietari di bacini di carenaggio	Dry Dock Owners, Graving Dock Owners
Picconi, badili, ecc.	Picks, Shovels, etc.		
Pignoni di carta	Paper Pinions		
Pignoni di carta compressa	Compressed Paper Pinions	Propulsione elettrica delle navi	Electric Ship Propulsion
Pignoni di cuoio	Raw Hide Pinions	Pubblicazioni (tecniche). *Vedere* Libri e giornali	Publications (Technical). *See* Books and Journals
Piloni (a lamiera d'acciaio)	Piles (Steel Sheet)		
		Puleggie	Pulleys
Pipette per olio	Oil cans	Puleggie per cinghie di transmissione e corde	Belt and Rope Pulleys
Pirometri	Pyrometers		
Piroscafi, lancie e yachts a vapore	Steam Ships, Launches, and Yachts	Puleggie per corde. *Vedi* Puleggie per cinghie e corde	Rope Pulleys. *See* Belt and Rope Pulleys
Pistoni per pompa	Pump Buckets	Punte americane	Twist Drills
Pittura anticorrosiva	Anti-corrosive Paint		
Planimetri	Surface Gauges		
Polvere da mina	Blasting Powder		

Per i nomi dei fabbricanti delle specialità elencate su questa pagina il lettore è pregato di vedere le rubriche corrispondenti in lingua inglese nel 'Classified Directory and Buyers' Guide' ('Guida classificata degli annunci'), pag. 2541–2611.

ITALIANO.	INGLESE.
Punzonatrici, cesoie e macchine a centrare	Punching, Shearing, and Bending Machines
Punzoni e stampi	Punches and Dies
Purificazione dell' acqua della fo na	Sewage Purification
Q	
Quadri e avviatori a liquido	Controllers and Liquid Starters
Quadri per batterie di accumulatori	Storage Battery Switchboards
Quadri per batterie elettriche	Battery Switchboards
R	
Ramai	Coppersmiths
Rame	Copper
Rampe ferroviarie	Railway Ramps
Recipienti per olio	Oil Cabinets
Regolatori d' acqua (d' alimentazione)	Water Regulators (Feed)
Regolatori (per motrici a vapore)	Governors (Steam Engine)
Regole in acciaio	Steel Rules
Regoli calcolatori. *Vedere* Strumenti matematici ecc.	Slide Rules. *See* Instruments, Mathematical, etc.
Reostati d' avviamento a liquido e controllori	Liquid Starters and Controllers
Reostati elettrici automatici	Automatic Controllers (Electric)
Residui animali (Impianti completi per la lavorazione di)	Animal Residuals (complete Plants for dealing with)
Respiratori	Respirators
Rete metallica	Wire Gauze
Rete metalliche e filo ferro	Wire Work and Woven Wire
Reti para-siluri	Torpedo Defence Nets
Reticolato a prova di bomba	Bomb-proof Netting
Ribaditrici elettriche	Riveters (Electric)
Ribaditrici idrauliche e pneumatiche	Riveters (Hydraulic and Pneumatic)
Riempitrici di gesso	Grouting Machines
Riparazioni di caldaie (saldatura ad arco elettrico per)	Boiler Repairs (Electric Arc Welding for)
Riparazioni di navi e di motrici	Ship and Engine Repairers
Ripari per macchine	Machinery Guards
Riscaldamento, ventilazione, ecc.	Heating, Ventilating, etc.
Riscaldamento per vetture ferroviarie	Heating for Railway Carriages
Riscaldatori e riscaldatori intermedi	Interheaters and Reheaters
Riscaldatori, filtri e purificatori dell' acqua d'alimentazione	Feed-Water Heaters, Filters and Purifiers
Rivestimenti per caldaie ecc.	Coverings for Boilers etc.
Rivestimenti per muri e soffitti	Wall and Ceiling sheets
Rivestimento impermeabile al catrame	Bitumen Damp-Proof Sheeting
Rivestimento per tubi	Pipe Coverings
Rondelle	Washers
'Rosseline' per motori a gas e ad olio	'Rosseline' (for Gas and Oil Engines)
Rotaie d' acciaio ed accessori	Steel Rails and Accessories
Rotaie e mezzi d'attacco	Rails and Fastenings
Rottame di metallo	Scrap Metals
Rubinetti (ottone) per acqua, vapore e gas	Cocks (Brass) for Water, Steam, and Gas
Ruote dentate	Wheel Gearing
Ruote idrauliche, motori e turbine idrauliche	Water Wheels, Water Motors and Turbines
Ruote Pelton	Pelton Wheels
S	
Saldatrici	Soldering Machines
Saldatura a 'Thermit'	'Thermit' Welding

Per i nomi dei fabbricanti delle specialità elencate su questa pagina il lettore è pregato di vedere le rubriche corrispondenti in lingua inglese nel 'Classified Directory and Buyers' Guide' (*'Guida classificata degli annunci'*), *pag.* 2541–2611.

ITALIANO.	INGLESE.	ITALIANO.	INGLESE.
Saldatura all' ossigeno e acetilene	Oxy-Acetylene Welding	Serbatoi d'aria	Air Receivers
Saldatura elettrica	Electric Welding	Serbatoi e cisterne	Tanks and Cisterns
Saldatura e trancia-tura dei metalli	Welding and Cutting of Metals	Serbatoi di ghisa	Cast-Iron Tanks
Sale e Cerchioni ferroviari	Railway Tyres and Axles	Serbatoi (per rendere impermeabile gli)	Reservoirs (Waterproofing of)
Sangue, Impianti per dissecazione di	Blood Drying Plants	Serrature, catenacci, ecc.	Locks, Bolts, etc.
Saracinesche e valvole d'arresto	Stop and Sluice Valves	Sezioni (acciaio)	Sections (Steel)
Sbarco per chiatte	Lighterage	Sezioni trafilate brevettate di bronzo, ottone, ecc.	Sections (Patent Extruded), Brass, Bronze, etc.
Scale incombustibili	Staircase (Fire Resisting)	Sfere e cuscinetti a sfere	Balls and Ball-Bearings
Scambi e livelli ferroviari	Railway Points and Crossings	Sistemi di conduttura (flessibili)	Wiring Systems (Flexible)
Scaricatori. *Vedere* Manometri ecc.	Steam Traps. *See* Steam Gauges etc.	Sistemi per la montatura del filo elettrico. *Vedi* Sistemi per montare il filo (flessibile)	Electric Wiring Systems. *See* Wiring Systems (Flexible)
Scaricatori di vapore ed a vuoto	Vacuum and Steam Traps		
Scarpe di accesso	Railway Re-railing Ramp	Smalti, colori e copali	Enamels, colours and varnishes
Scuole e collegi di ingegneria	Schools and Colleges (Engineering)	Sopporti a rulli	Roller Bearings
Sedi per caldaie	Boiler Seatings	Sopporti per tubi	Pipe Hangers
Sedi (per forni da gas)	Settings (Retort)	Spazzole di filo metallico	Wire Brushes
Seghe a mano ed a macchina	Hack Saws and Machines	Spazzole per motori elettrici	Dynamo Brushes
Seghe per legname e per metalli	Saws for Wood and Metal Cutting	Squadre	Squares
Segnali d'incendio	Fire Alarms	Stampature	Stampings
Segnali. *Vedere* Segnali ferroviari	Signals. *See* Railway Signals	Stampi a frizione ed a vapore	Stamps (Friction and Steam Drop)
Segnali ferroviari ed apparecchi di sicurezza	Railway Signals and Safety Appliances	Stampi e presse	Drop Stamps and Presses
Segnali per miniere (impermeabili)	Mining Signals (Watertight)	Stanghe e sezioni di rame	Copper Rods and Sections
Separatori a magnete	Magnetic Separators	Stanghe vuote e sezioni (ottone, rame, ecc.)	Hollow Rods and Sections (Brass, Copper, etc.)
Separatori della fuligine	Soot Removers	Steli di trapani di acciaio rapido ed argentato	High Speed and Silver Steel Drill Rods
Separatori dell' olio dall' acqua di condensazione	Separation of Oil from Condensed Steam	Strumenti di topografia, matematica e disegno	Instruments: Surveying, Mathematical, Drawing, etc.
Separatori di grasso	Grease Separators	Strumenti ed apparecchi elettrici	Instruments and Apparatus (Electrical)
Separatori (magnetici)	Separators (Magnetic)		
Separatori magnetici per 'Destructers' (distruttori di immondizie)	Destructors (Magnetic Separators for)		

Per i nomi dei fabbricanti delle specialità elencate su questa pagina il lettore è pregato di vedere le rubriche corrispondenti in lingua inglese nel 'Classified Directory and Buyers' Guide' ('*Guida classificata degli annunci*'), *pag.* 2541–2611.

ITALIANO.	INGLESE.
Strumenti ed apparecchi elettrici	Electrical Instruments and Apparatus. *See* Instruments and Apparatus (Electrical)
Strumenti misuratori (elettrici). *Vedere* Strumenti	Measuring Instruments (Electrical). *See* Instruments
Strumenti per la topografia e disegno	Surveying and Drawing Instruments
Strumenti per matematica, disegno e topografia	Mathematical, Drawing, and Surveying Instruments
Strumenti registratori	Recording Instruments
Strumenti scientifici	Scientific Instruments
Superfici di attrito	Friction Surfaces
Superfici di attrito 'Ferodo'	'Ferodo' Friction Surfaces
Surriscaldatori	Superheaters
Surriscaldatori per locomotive	Locomotive Superheaters
Surriscaldatori tipo marina	Marine Superheaters
T	
Tacometri	Tachometers
Tegole e lamiere ondulate (Cemento all' amianto)	Corrugated Tiles and Sheets (Asbestos-Cement)
Taglio e saldatura autogena dei metalli	Metal Cutting and Welding
Tegole di amianto	Asbestos Roofing Tiles
Tegole e tavole di cemento	Cement Slates and Boards
Telai per automobili (chassis)	Motor Chassis Frames
Telferaggio (linee di)	Telphers
Tempera della superficie	Case Hardening
Termometri	Thermometers
Tetti, Fabbricati in ferro ecc.	Roofs, Iron Buildings, etc.
Tipografi, litografi, disegnatori e incisori	Printers, Lithographers, Draughtsmen, and Engravers
Torni. *Vedere* Costruttori macchine utensili	Lathes. *See* Tool Makers
Torri d'acqua	Water Towers
Torri di raffreddamento	Cooling Towers
Traghetti a barcone (a mezzo di cavi)	Ferries (Wire Rope)
Tramvie e ferrovie (elettriche). *Vedere* Ferrovie e tramvie elettriche	Tramways and Railways (Electrical). *See* Electric Railways and Tramways
Tramvie (funicolari)	Tramways (Wire Rope)
Tramvie (funi di acciaio per)	Tramways (Steel Wire Ropes for)
Trapani e magli elettrici portatili	Electric Portable Drills and Hammers
Trapani e perforatrici	Drills and Drilling Machines
Trapani radiali e macchine per filettare	Radial Drilling and Tapping Machines
Trapani verticali	Vertical Drilling Machines
Trasformatori a cascata	Motor Converters
Trasmissioni ed ingranaggi	Shafting and Gearing
Trasportatori. *Vedere anche* Cinghie	Conveyors. *See also* Belting
Trasportatori aerei	Aerial Ropeways
Trasportatori con fune metallica	Cableways
Trattamento al caldo di metalli	Heat Treatment of Metals
Travate, ponti, ecc. *Vedere* Lavori in ferro ed acciaio	Girders, Bridges, etc. *See* Structural Iron and Steel Wor
Travate (processo Grey) a flangia larga	Beams (Grey process) Broad Flange

Per i nomi dei fabbricanti delle specialità elencate su questa pagina il lettore è pregato di vedere le rubriche corrispondenti in lingua inglese nel 'Classified Directory and Buyers' Guide' ('Guida classificata degli annunci'), pag. 2541–2611.

ITALIANO.	INGLESE.
Travi in acciaio	Joists (Steel)
Tubatura d'acciaio saldata	Welded Steel Pipes
Tubatura d'ispezione per caldaie	Inspection Blocks for Boilers
Tubi	Tubes
Tubi d'acciaio. *Vedere* Tubi	Steel Tubes. *See* Tubes
Tubi d'acciaio per fili elettrici	Steel Conduits for Electric Wiring
Tubi d'acciaio ribaditi	Riveted Steel Pipes
Tubi di ferro. *Vedere* Tubi	Iron Tubes. *See* Tubes
Tubi di ferro e di acciaio	Iron and Steel Tubes
Tubi di ghisa per acqua e gas	Cast Iron Pipes for Water and Gas purposes
Tubi di rame	Copper Tubes
Tubi ed accessori	Tubes and Fittings
Tubi ed accessori per gas	Gas Tubes and Fittings
Tubi e serpentine per refrigeranti	Refrigerating Tubes and Coils
Tubi flessibili in cuoio, tela, ecc.	Hose Pipes, Leather and Canvas Hose, etc.
Tubi flessibili metallici	Hose (Flexible Metallic), Metallic Tubing (Flexible)
Tubi flessibili per riscaldamento a vapore	Steam Heating Tubes (Flexible)
Tubi idraulici	Hydraulic Tubes and Pipes
Tubi (metallici flessibili)	Tubing (Flexible Metallic)
Tubi per caldaie	Boiler Tubes
Tubi per condensatori (rame). *Vedere* Tubi di rame	Condenser Tubes (Copper). *See* Copper Tubes
Tubi per corpi di pompieri, stabilimenti, ecc.	Hose for Fire Brigades, Mills, etc.
Tubi per posta pneumatica	Pneumatic Despatch Tubes etc.
Tubi (pneumatici)	Tubes (Pneumatic)
Tubi vapore. *Vedere* Tubi	Steam Pipes. *See* Tubes
Tubiere per alti forni	Blast Furnace Tuyères
Turbine a vapore ed accessori	Steam Turbines and Fittings
Turbine, ruote idrauliche e motori idraulici	Turbines, Water Wheels and Water Motors
Turbine (Vapore). *Vedere* Turbine a vapore	Turbines (Steam) *See* Steam Turbines
Turbo-Generatori. *Vedere* Dinamo e motori	Turbo-Generators. *See* Dynamos and Motors
Turbo-Pompe	Turbo-Pumps
U	
Ufficio, Mobilia per	Office Furniture
Ufficio, Sistemi di	Office Systems
Utensili da miniera	Mining Tools
Utensili ed accessori per meccanici	Engineers' Tools and Fittings
Utensili ed apparecchi pneumatici	Pneumatic Tools and Appliances
Utensili ed impianti per impresari	Contractors' Tools and Plant
Utensili per cavi	Quarrying Tools
Utensili per disincrostare	Scaling Tools
Utensili rapidi 'Speedicum'	'Speedicum' High-Speed Tools
V	
Vagoni a bilico	Tip Wagons
Valvole a manicotto per pompe d'aria	Bush Valves for Air Pumps
Valvole di riduzione. *Vedere* Valvole	Reducing Valves. *See* Valves
Valvole e rubinetti	Valves and Cocks
Vapore, Apparecchi per economizzare	Steam Saving Appliances
Ventilatori depuratori del gas	Gas Washing Fans

Per i nomi dei fabbricanti delle specialità elencate su questa pagina il lettore è pregato di vedere le rubriche corrispondenti in lingua inglese nel 'Classified Directory and Buyers' Guide' ('Guide classificata degli annunci'), pag. **2541-2611.**

ITALIANO.	INGLESE.	ITALIANO.	INGLESE.
Ventilatori	Ventilating Shafts	Vetri per indicatori di livello	Gauge Glasses
Ventilatori elettrici	Electric Blowers	Vetri per lubrificatori	Lubricating Glasses
Ventilatori elettrici. *Vedere* Ventilatori	Electric Fans. *See* Fans	Vetture e vagoni ferroviari	Carriages and Wagons (Railway)
Ventilatori per tiraggio forzato	Blowers (Steam Flue)	Viti (ferro, acciaio, rame e bronzo marino)	Screws (Iron, Steel, Copper and Naval Brass)
Ventilatori: soffianti, aspiranti, elettrici, ecc.	Fans: Blowing, Exhaust, Electric, etc.	Viti meccaniche	Machine Screws
Ventilazione, riscaldamento, ecc.	Ventilating, Heating, etc.	Voltometri. *Vedere* Strumenti (Elettrici)	Voltmeters. *See* Instruments (Electrical)
Verghe d'acciaio	Steel Rods	Vulcanite e fibbra vulcanizzata	Vulcanite and Vulcanised Fibre
Vericelli a motore e relativo impianto	Winding and Hauling Engines and Plant	**W**	
Vernici antiruggine per ferro e acciaio	Paints for Preserving Iron and Steel Work	'Woodite'	'Woodite'
Vernici, colori, smalti e copali	Paints, Colours, Enamels and Varnishes	**Z**	
Vernici 'Minerva'	'Minerva' Paints	Zinco (non incrostante per pile)	Zincs (Non-encrusting for Primary Batteries)
Vernici per macchine	Machinery Finishes		
Verricelli (a frizione)	Winches (Friction)		

Per i nomi dei fabbricanti delle specialità elencate su questa pagina il lettore è pregato di vedere le rubriche corrispondenti in lingua inglese nel 'Classified Directory and Buyers' Guide' ('Guida classificata degli annunci'), pag. 2541–2611.

TRADUCCIÓN DE LOS TÍTULOS CONTENIDOS EN LA 'GUÍA CLASIFICADA DE ANUNCIOS' DE ARTICULOS ESPECIALES (páginas 2541-2611).

Para hallar los nombres de los fabricantes de los artículos especiales mencionados, refiéranse á los títulos equivalentes en inglés en la Classified Directory and Buyers' Guide ('Guía Clasificada de Anuncios'), páginas 2541–2611. *Para señas de anunciadores y referencias á sus anuncios, consúltese la precedente Lista alfabética, páginas* 2521–2538.

ESPAÑOL.	INGLÉS.
A	
Abrazaderas de Indicadores de Cristal	Gauge Glass Rings
Accesorios de Aeroplanos	Aeroplane Accessories
Accesorios de Calderas. *Véase* Accesorios de Máquinas y Calderas	Boiler Fittings. *See* Engine and Boiler Fittings
Accesorios de Máquinas y Calderas, Hornos y Tubos de Calderas, etca.	Engine and Boiler Fittings, Boiler Furnaces, Tubes, etc.
Aceite para Roscar	Screwing Oil
Aceiteras y Alcuzas	Oil Feeders and Cans
Aceites, Composiciones Lubricantes, etc.	Oils, Lubricating Compounds, etc.
Acero Brillante, Fabricantes de	Bright Steel Manufacturers
Acero con Manganeso	Manganese Steel
Acero de Aleación, Fabricantes de	Alloy Steel Manufacturers
Acero de Firth que no se mancha	Firth's Stainless Steel
Acero de gran resistencia a la tensión	High Tensile Steel
Acero Eléctrico, Fabricantes de	Electric Steel Manufacturers
Acero 'Mesmeric' templado superficialmente	'Mesmeric' Case Hardening Steel
Acero para aparatos aéreos	Aircraft Steels
Acero para engranajes que se templa al aire	Air Hardening Gear Steel
Acero para Herramientas	Tool Steel
Acero para Herramientas de Gran Velocidad	High Speed Tool Steel
Acero para imanes	Magnet Steel
Acero para Maquinaria, Fabricantes de	Machinery Steel Manufacturers
Acero que no se mancha ni se oxida	Stainless and Rustless Steel
Acero que no se oxida	Rustless Steel
Aceros al Cromo-Vanadio	Chrome - Vanadium Steels
Aceros al níquel y níquel-cromo	Nickel and Nickel Chrome Steels
Aceros fundidos en crisol	Crucible Cast Steels
Aceros para matrices	Die Steels
Aceros Siemens-Martin	Siemens - Martin Steel
Aceros 'Speedicut' para grandes velocidades	'Speedicut' High-speed Steels
Aceros templados superficialmente	Case Hardening Steels
Acetileno	Acetylene
Acetileno, Boyas y Valisas de	Acetylene Buoys and Beacons
Acetileno, Instalaciones Generadoras de	Acetylene Generating Plants
Acido Clorhídrico	Hydrochloric Acid
Acido Nítrico	Nitric Acid
Acido para Acumuladores	Accumulator Acid
Acido Sulfúrico	Sulphuric Acid

ESPAÑOL.	INGLÉS.	ESPAÑOL.	INGLÉS.
Acumuladores. *Véase* Baterías	Accumulators. *See* Batteries	Amianto-cemento en hojas acanaladas para tejados	Asbestos Cement Corrugated Roofing Sheets.
Acumuladores Hidráulicos	Accumulators (Hydraulic)	Amianto-cemento en hojas lisas (para tabiques, cielos rasos, etc.)	Asbestos Cement Flat Sheets (for Walls, Partitions, Ceilings, etc.)
Aerómetros	Air Meters	Amianto - cemento 'Fibrent' en hojas acanaladas y lisas	Fibrent Asbestos Cement Corrugated and Flat Sheets.
Aeronáutica (Ingenieros)	Aeronautical Engineers	Amianto 'Poilite' en Hojas y Tejas	'Poilite' Asbestos Sheets and Roofing Tiles
Aeronáutica (Motores)	Aero Engines	Análisis de Gases de la Chimenea de la Cadera	Boiler Flue Gases (Analysis of)
Aeroplanos, Constructores de	Aeroplane Builders	Anclas	Anchors
Afiladores de Taladros	Drill Sharpeners	Anillos de Cobre para Juntas	Copper Jointing Rings
Agua Caliente, Calderas de Abastecimiento	Hot Water Supply Boilers	Anillos de Embolos	Piston Rings
Agua de Alimentación de Calderas (Eliminación de Aceite del)	Boiler Feed Water (Oil Elimination from)	Aparatos Conmutadores	Switch Gear
Agujas y Pasos de Nivel de Ferrocarriles	Railway Points and Crossings	Aparatos de Alumbrado Eléctrico	Electric Light Fittings, etc.
Ahogahumos y Generadoras de Vapor	SmokePreventers and Steam Generators	Aparatos de Arrancada de Automóviles	Motor Starters
Aire Líquido	Liquid Air	Aparatos de Arrancada (Líquido) y Refrenadores	Liquid Starters and Controllers
Aisladores	Insulators	Aparatos de Buzos	Diving Apparatus
Alambre	Wire	Aparatos de Telégrafos sin Hilos	Wireless Telegraphic Apparatus
Alambre para Telégrafos. *Véase* Alambre	Telegraph Wire. *See* Wire	Aparatos de Tiro Forzado e Inducido	Forced and Induced Draught Apparatus
Alarmas de Incendios	Fire Alarms	Aparatos de transmisión de aceite con velocidad v riable	Variable Speed Oil Transmission Gears
Aleaciones	Alloys	Aparatos Economizadores de Vapor	Steam-saving Appliances
Aljibes de Hierro Colado	Cast-Iron Tanks	Aparatos Eléctricos de Calefacción y Cocina	Electric Heating and Cooking Apparatus
Alquitranar Caminos, Utensilios para	Road Tarring Appliances	Aparatos Filtrantes	Filtering Apparatus
Alternadores	Alternators	Aparatos Fotográficos	Photographic Apparatus
Alumbrado de Fábricas	Factories (Lighting of)	Aparatos para Destilar Agua. *Véase también* Condensadores	Water Distilling Apparatus, etc. *See also* Condensers
Alumbrado de Talleres	Workshops (Lighting of)		
Alumbrado de Trenes	Lighting (Train)		
Alumbrado y Calefacción (Instalaciones de Gas Acetileno)	Lighting and Heating (Acetylene Gas Plants for)		
Aluminio en Polvo	Aluminium Powder		
Aluminio (Lingotes, Planchas, Tubos, Alambre, Cables, Secciones, etca.)	Aluminium (Ingots, Sheets, Tube, Wire Cable, Sections, etc.)		

Para hallar los nombres de los fabricantes de los artículos especiales antes mencionados, refiéranse á los títulos equivalentes en inglés en la Classified Directory and Buyers' Guide ('Guía Clasificada de Anuncios'), páginas 2541-2611.

ESPAÑOL.	INGLÉS.
Aparatos para Destilar Agua Potable	Distilling Apparatus (Fresh Water)
Aparatos para Dulcificar y Purificar Agua. *Véase también* Calentadores de Agua de Alimentación	Water Softening and Purifying Apparatus. *See also* Feed Water Heaters, etc.
Aparatos para Echar a Andar Propulsores (Hidráulicos)	Propeller Starters (Hydraulic)
Aparatos para Enfriar Agua	Water-Cooling Apparatus
Aparatos para Extinguir Incendios	Fire Extinguishing Appliances
Aparatos para Medir la Elasticidad	Extensometers
Aparatos para Medir la Tensión	Strainmeters
Aparatos para Refrigerar y Humedecer el Aire	Air-Cooling and Humidifying Apparatus
Aparatos para Secar	Drying Apparatus
Aparatos Químicos y Electroquímicos	Chemical and Electro-Chemical Apparatus
Aparatos Radiotelegráficos	Radio - Telegraphic Apparatus
Aparatos Sopladores Eléctricos	Electric Blowers
Aparatos Soplantes: de Expulsión, Extracción, Eléctricos, etca.	Fans: Blowing, Exhaust, Electric, etc
Aparatos Soplantes Eléctricos. *Véase* Aparatos Soplantes	Electric Fans. *See* Fans
Aparatos Soplantes para Purificar el Gas	Gas Washing Fans
Aparatos y Accesorios de Alumbrado Eléctrico	Electric Light Fittings and Electrical Accessories
Aparejos Navales	Shipping Tackle
Arandelas	Washers
Arandelas de Indicadores de Cristal	Gauge Glass Washers
Armazones Inferiores y Carretillas de Acero Comprimido	Pressed Steel Underframes and Bogies
Armazones Inferiores y Carretillas de Locomotoras	Underframes and Bogies
Artículos, Accesorios, etca., de Amianto	Asbestos Goods, Fittings, etc.
Artículos de caucho para maquinaria	Mechanical Rubber Goods
Artículos Especiales de Grafito 'Foliac'	'Foliac' Graphite Specialities
Artículos para Dibujantes y Delineadores	Drawing Office Requisites
Ascensores Eléctricos y Gruas Eléctricas	Electric Lifts and Cranes
Asentamiento de Calderas	Boiler Setting
Asentamientos de Calderas Perfeccionados	Boiler Settings (Improved)
Asentamientos Perfeccionados de Calderas de Lancashire	Lancashire Boiler Settings (Improved)
Asfalto	Asphalte
Asientos de Calderas	Boiler Seatings
Automóviles	Motor Cars
Automóviles, Accesorios de	Motor Car Accessories
B	
Barcas para Cruzar Ríos (Cuerdas de Alambre para)	Ferries (Wire Rope)
Barnices	Varnishes
Barnices para Metales Pulimentados y Preparaciones para Perfeccionar Maquinaria	Coatings (Bright Part) and Machinery finishes
Barnices y Composiciones Aisladores	Insulating Varnishes and Compounds
Barometros	Barometers
Barras 'Dixtrudo' para hacer y Tornear Tornillos de Bronce a Gran Velocidad	'Dixtrudo' High-Speed Brass Screwing and Turning Rods
Bastidores completos de Automóviles	Motor Châssis Frames

Para hallar los nombres de los fabricantes de los artículos especiales antes mencionados, refiéranse á los títulos equivalentes en inglés en la Classified Directory and Buyers' Guide ('Guía Clasificada de Anuncios'), páginas 2541-2611.

ESPAÑOL.	INGLÉS.	ESPAÑOL.	INGLÉS.
Baterías (Acumulación Eléctrica)	Batteries (Electrical Storage)	Cables Eléctricos. *Véase* Cables: Telégrafo, Teléfono, Alumbrado Eléctrico y Submarinos	Electric Cables. *See* Cables: Telegraph, Telephone, Electric Light and Submarine
Bloques para Facilitar la Inspección de Calderas	Inspection Blocks for Boilers	Cables Eléctricos (Tipo 'C.T.S.')	Electric Cables ('C.T.S.' Type). *See* 'Cab Tyre Sheathed' Cable
Bloques y Cubiertas para Calderas	Boiler Blocks and Covers	Cables Eléctricos 'Endural'	'Endural' Electric Cables
'Boilerine'	'Boilerine'	Cables Forrados 'Cab Tyre'	'Cab Tyre' Sheathed Cables
Bolas y Cojinetes de Bolas	Balls and Ball Bearings	Cables Submarinos. *Véase* Cables	Submarine Cables. *See* Cables
Bombas Atmosféricas de Vacío. *Véase* Bombas	Vacuum Pumps. *See* Pumps	Cables: Telégrafo, Teléfono, Alumbrado Eléctrico y Submarinos	Cables: Telegraph, Telephone, Electric Light, and Submarine
Bombas Centrífugas. *Véase* Bombas	Centrifugal Pumps. *See* Pumps	Cables y Accesorios para Explotación de Minas	Mining Cables and Accessories
Bombas de Aire	Air Pumps	Cabrestantes	Crab Winches
Bombas de Alimentación de Calderas	Boiler Feed Pumps	Cadenas de Transmisión	Driving Chains
Bombas de presión de capacidad variable	Variable Capacity Pressure Pumps	Cadenas para Explotación de Minas y Arrastre	Mining and Hauling Chains
Bombas de turbina	Turbine Pumps	Cadenas y Cables de Cadena	Chains and Chain Cables
Bombas de Vapor. *Véase* Bombas	Steam Pumps. *See* Pumps	Cadenas y Ganchos para Gruas	Crane Chains and Hooks
Bombas 'Roturbo'	Roturbo Pumps	Cadenas y Transmisión de Fuerza por Cadenas	Chains and Chain Drivings
Bombas y Maquinaria para Elevar e Impulsar Líquidos	Pumps and Pumping Machinery	Cajas de Ascensores	Lift Enclosures
Boyas y Valisas	Buoys and Beacons	Cajas de Escaleras Resistentes al Fuego	Staircases (Fire-resisting)
Bronce. *Véase* Latón y Bronce	Bronze. *See* Brass and Bronze	Cajas para Registrar Papeles e Indice de tarjetas	Filing and Card Index Cabinets
Bronce con Manganeso	Manganese Bronze	Cal y Piedra Caliza	Lime and Limestone
Bronce Fosfórico	Phosphor Bronze	Calabrotes de Alambre de Acero Galvanizado	Hawsers (Galvanised Steel Wire)
Bronces para Calderas. *Véase también* Accesorios de Máquinas y Calderas	Boiler Mountings *See also* Engine and Boiler Fittings	Calculadores de Jornales	Wages Calculators
Buques, Lanchas y Yates de Vapor	Steam Ships, Launches, and Yachts	Calderas de Calor Agotado	Exhaust Heat Boilers
		Calderas de Tubos de Agua. *Véase* Fabricantes de Calderas	Water-Tube Boilers. *See* Boiler Manufacturers
C			
Cables Aéreos	Cableways		
Cables Aéreos	Aerial Ropeways, Wire Ropeways		
Cables de Caucho Sólido. *Véase* Cables	Solid Rubber Cables. *See* Cables		

Para hallar los nombres de los fabricantes de los artículos especiales antes mencionados, refiéranse á los títulos equivalentes en inglés en la Classified Directory and Buyers' Guide ('Guía Clasificada de Anuncios'), páginas 2541-2611.

ESPAÑOL.	INGLÉS.
Calderas de Vapor. *Véase* Fabricantes de Calderas	Steam Boilers. *See* Boiler Manufacturers
Caldereros	Coppersmiths
Calefacción de Coches de Ferrocarril	Heating for Railway Carriages
Calefacción, Ventilación, etc.	Heating, Ventilating etc.
Calentadores de Agua de Alimentación Filtros y Purificadores	Feed-Water Heaters, Filters and Purifiers
'Callendrite,' Forro de Paredes contra la Humedad	'Callendrite' Dampcourse and Sheeting
Caloríferos	Calorifiers
Calorimetros para Probar Combustibles	Calorimeters for Fuel Testing
Cámaras Fotográficas y Tapadoras de Diafragmas	Cameras and Shutters
Camisas de Calderas y Tubos	Boiler and Pipe Coverings
Camisas para Calderas etc.	Coverings for Boilers etc.
Campanas Eléctricas	Bells (Electric)
Cañones y Municiones, Fábricas de	Gun and Ammunition Works
Capotes impermeables y encerados	Mackintoshes and Oilskins
Carbón pulverizado, Instalaciones para	Powdered Coal Plants
Carburo de Calcio	Carbide of Calcium
Cascos contra el Humo	Smoke Helmets
Cedazos y Cribas	Sieves and Screens
Cemento de Portland	Portland Cement
Cemento de Portland (Máquinas para Hacer Pruebas)	Portland Cement (Testing Machines for)
Cemento, Impermeabilidad del	Cement, Waterproofing of
Cemento 'Kisol' para Calderas, Tubos de Vapor, etca.	'Kisol' Cement for Boilers, Steam Pipes, etc.
Cemento para Juntas	Jointing Cement
Cementos (Portland, Keenes', & Parian)	Cements (Portland, Keenes', and Parian)
Cepillos de Alambre	Wire Brushes
Cerraduras, Pernos, etc.	Locks, Bolts, etc.
Chapas de acero	Steel Sheets
Chapas de acero alisadas	Planished Steel Sheets
Chapas de Acero para Pilotes	Steel Sheet Piling
Chapas para Revestir Paredes y Ciélos Rasos	Wall and Ceiling Sheets
Chimenea de Ventilación	Ventilating Shafts
Chimeneas	Chimney Stacks
Cilindros	Cylinders
Cinc en Piezas contra Incrustaciones para Baterias Primarias	Zincs (Non-encrusting for Primary Batteries
Cobre	Copper
Coches y Vagones de Ferrocarril	Carriages & Wagons (Railway)
Cojinetes de Bolas	Bearings (Ball)
Cojinetes de Empuje	Thrust Bearings
Cojinetes de Fundición Resfriada	Bearings (Chill Cast
Cojinetes de rodillos	Roller Bearings
Colas Marinas	Marine Glues
Colegios de Ingeniería	Colleges (Engineering)
Colores, Pinturas y Barnices	Colours, Paints, and Varnishes
Columnas y Piezas de Fundición para Obras de Alcantarillado, Gas y Agua	Columns and Castings for Sewage, Gas, and Water Works
Combustibles, sistemas de economizarlos	Fuel Economy Systems
Combustión Superficial	Surface Combustion
Composición de Grafito 'Foliac' para Juntas de Tubos	'Foliac' Graphite Pipe Joint Compound
Composición Desincrustadora para usarla en el Interior de las Calderas	Boiler Composition (for inside use)

Para hallar los nombres de los fabricantes de los artículos especiales antes mencionados, refiéranse á los títulos equivalentes en inglés en la Classified Directory and Buyers' Guide ('Guía Clasificada de Anuncios'), páginas 2541-2611

ESPAÑOL.	INGLÉS.
Composiciones Impermeables	Waterproofing Compounds
Composiciones Lubricantes	Lubricating Compounds
Composiciones para Resguardar Piezas de Metal Pulimentadas	Bright Part Coatings
Compresores de Aire	Air-Compressors
Compuertas de Esclusa y Válvulas	Sluice Gates and Valves
Condensadores Cinemáticos 'Contraflo'	'Contraflo' Kinetic Condensers
Condensadores, Evaporadores, Aparatos para Dulcificar y Destilar el Agua, etca.	Condensers, Evaporators, Water Softening and Distilling Apparatus, etc.
Conductos. *Véase* Conductos de Acero y Sistemas de Alambres Eléctricos	Conduits. *See* 'Stee Conduits' and 'Wiring Systems'
Conductos de Acero para Alambres Eléctricos	Steel Conduits for Electric Wiring
Conductos para Descargar Té	Tea Shoots
Conexiones Flexibles	Flexible Couplings
Conos de Fricción	Friction Clutches
Construcciones de Hormigón Armado	Reinforced Concrete Construction
Constructores de Buques	Ship Builders
Constructores de Buques Aljibes para Petróleo	Oil Tank Ships (Builders of)
Constructores de Cajas Hidráulicas y Puertas de Diques	Caissons (Builders of)
Constructores de Diques Flotantes	Floating Dock Builders
Constructores de Puertas de Entrada de Diques	Dock Gates (Builders of)
Constructores y Armadores de Barcazas	Barge Builders and Owners
Contadores de Agua	Meters (Water)
Contadores de Agua Perdida	Waste Water Meters
Contadores de aire	Meters (Air)
Contadores de gas	Gas Meters
Contadores de vapor	Steam Meters
Contadores para minas	Minemeters
Contratistas de Alumbrado Eléctrico	Electric Lighting Contractors
Contratistas de Dragado	Dredging Contractors
Contratistas de Paredes Divisorias y Constructores de Obras contra Incendios	Partition Contractors and Fireproof Builders
Contratistas de Tejados	Roofing Contractors
Cordones y Cables de Alambre de Acero para Aeroplanos	Aeroplane Steel Wire Strands and Cables
Correaje de Transmisión de Balata	Balata Belting
Correas de Algodón para Transmisión	Cotton Belting
Correas de Cuero. *Véase* Correas de Transmisión	Leather Belting. *See* Belting
Correas de Transmisión de Pelo de Camello, Unicos Fabricantes de la Marca 'Camel'	'Camel' Hair, 'Camel' Brand Belting (Sole Makers of)
Correas de Transmisión, etca., de Cuero, Algodón, Pelo, Caucho, etca.	Belting, etc.—Leather, Cotton, Hair, India Rubber, etc.
Correas y Cuerdas de Transmisión, etca.	Driving Bands, Ropes, etc.
Corte y Soldadura de Metales	Metal Cutting and Welding
Crema para Correas de Transmisión	Belting Cream
Crisoles	Crucibles
Cristalería para Alumbrado de Buques etc.	Glassware for Ships' Lighting etc.
Cuartos Fuertos de Acero o de Albañilería	Strong Rooms (Steel or Masonry)

Para hallar los nombres de los fabricantes de los artículos especiales antes mencionados, refiéranse á los títulos equivalentes en inglés en la Classified Directory and Buyers' Guide ('Guía Clasificada de Anuncios'), páginas 2541-2611.

ESPAÑOL.	INGLÉS.
Cubiertas de Algodón con Silicato y Lana de Escoria	Silicate Cotton and Slag Wool Coverings
Cubiertas y Colchones de Amianto	Asbestos Coverings and Mattresses
Cubiertas y Forros de Humeros	Flue Covers and Linings
Cuerdas de Alambre	Wire Ropes
Cuerdas de Alambre, Cáñamo, Abacá, Cuero, Algodón y Amianto	Ropes: Wire, Hemp, Manilla, Leather, Cotton, and Asbestos
Cuerdas de Algodón para Transmisión	Cotton Driving Ropes
Cuerdas para Buques, para Tracción, etc.	Cables for Shipping, Haulage, etc.
Cuerdas para Enrollar y para Tracción	Winding and Hauling Ropes
Cuerdas para Pozos de Aceite	Oil Well Ropes
Cuerpos de Bombas	Pump Buckets
D	
Dados de Poleas	Pulley Blocks
Dados inferiores y matrices	Shoes and Dies
'Decolite': Material para Suelos Resistente al Fuego	'Decolite' Fireproof Flooring
Depósitos de Aceites	Oil Cabinets
Depósitos de Agua (Impermeabilidad de)	Reservoirs (Waterproofing of)
Depósitos para Conservar en Frio	Cold Storage
Depuradoras de Gas	Gas Cleaning Plant
Desmagnetizadores	Demagnetizers
Desperdicios de metales	Scrap Metals
Destructores de Basura	Refuse Destructors
'Dexine'	'Dexine'
Digestores	Digesters
Dinamita	Dynamite
Dinamómetros	Dynamometers
Dinamos y Motores	Dynamos and Motors
Diques Flotantes	Docks (Floating)
Dragas (cuerdas de alambre de acero para)	Dredgers (Steel Wire Rope for)
Dragas y Elementos para Dragar	Dredge Plant
'Duralumin'	'Duralumin'
E	
Ebonita	Ebonite
Economía de Carbón, Especialistas en	Coal Economy Specialists
Economizadores	Economisers
Economizadores de Combustible. *Véase* Economizadores	Fuel Economisers. *See* Economisers
Edificios	Buildings
Edificios (Impermeabilidad de)	Buildings (Waterproofing of)
Edificios para Fábricas (Construcción de)	Factory Buildings (Construction of)
Edificios (Protección contra Exhalaciones Eléctricas)	Buildings (Protection of, from Lightning)
Ejercicio de Ingeniería. *Véase* Colegios	Engineering Training. *See* Colleges
Ejes de cigüeña para locomotoras	Railway Crankshafts
Ejes de Hélice	Propeller Shafts
Ejes para Ferrocarriles	Axles (Railway)
Ejes Superiores para Movimiento de Gruas etc.	Overhead Runways
Ejes y Engranajes	Shafting and Gearing
Electrodos para soldadores de arco eléctrico	Electrodes (for Electric Arc Welding)
Elevadores. *Véase* Maquinaria para Elevar Pesos	Elevators. *See* Lifting and Hoisting
Eliminadores de Aceite	Oil Eliminators
Embragues	Clutches
Empaquetadura ('Estados Unidos')	Packing ('United States')
Empaquetadura (Vapor). *Véase* Empaquetadura de Máquinas	Packing (Steam). *See* Engine Packing
Empaquetadura de Amianto ('Lion')	Asbestos Packing ('Lion')

Para hallar los nombres de los fabricantes de los artículos especiales antes mencionados, refiéranse á los títulos equivalentes en inglés en la Classified Directory and Buyers' Guide ('Guía Clasificada de Anuncios'), páginas 2541-2611.

ESPAÑOL.	INGLÉS.
Empaquetadura de Embolos	Piston Packing
Empaquetadura de Máquinas	Engine Packing
Empaquetadura de Máquinas (' Lion ')	Engine Packing (' Lion ')
Empaquetadura de Vapor	Steam Packing
Empaquetadura de Vapor (' Lion ')	Steam Packing (' Lion ')
Empaquetadura ' Lion '	' Lion ' Packing
Empaquetadura ' Lion ' de Walker	Walker's (' Lion ') Packings
Empaquetadura Metálica. *Véase* Empaquetadura de Máquinas	Metallic Packing. *See* Engine Packing
Empaquetadura Metálica ' Estados Unidos ' para Varillas de Émbolo	Metallic Piston Rod Packing (' United States ')
Empaquetadura Metálica ' Lion ' para Varillas de Émbolo	Metallic Piston Rod Packing (' Lion ')
Empaquetadura para Máquinas de Gas	Gas Engine Packing
Empaquetadura Recalentada para Locomotoras	Locomotive Superheated Packing
Empaquetaduras Metálicas para Vástagos de Embolos (' The Lancaster ')	Metallic Piston Rod Packings (' The Lancaster ')
Empujadores de Pernos	Bolt Forcers
Enganches de ferrocarril	Railway Couplings
Engranaje de Ruedas	Wheel Gearing
Engranaje de Tornillo sin fin	Worm Gearing
Engranaje Espiral	Helical Gearing
Engranajes	Gearing
Engranajes (Cuero a Pelo)	Gears (Raw Hide)
Engranajes de Reducción	Reduction Gears
Engranajes de Turbinas. *Véase* Turbinas con Engranaje	Turbine Gears. *See* Geared Turbines
Engranajes Rectos y Cónicos	Spur and Bevel Gearing
Engranajes y Ejes para Fábricas, etc. *Véase* Ejes y Engranajes	Mill Gearing, Shafting, etc. *See* Shafting and Gearing
Enrejados á prueba de bomba	Bomb-proof Netting
Enseñanza Técnica Práctica. *Véase* Escuelas y Colegios	Technical Training. *See* Schools and Colleges
Entrecalentadores y Recalentadores	Interheaters and Reheaters
Equipo de Teléfonos	Telephone Equipment
Escamas y Corrosión de las Calderas (Preventivos de)	Scale and Corrosion in Boilers (Preventives of)
Escobillas de Dínamos	Dynamo Brushes
Escuadras de Acero	Squares
Escudos de Protección para Maquinaria	Machinery Guards
Escuelas y Colegios de Ingenieros	Schools and Colleges (Engineering)
Esmaltes, Colores y Barnices	Enamels, Colours, and Varnishes
Establecimiento de Ferrocarriles y Tranvías	Railway and Tramway Plant
Estampación Metálica	Stampings
Estufas para secar	Drying Stoves
Evaporadores, Condensadores, Aparatos Destiladores de Agua, etca.	Evaporators, Condensers, Water Distilling Apparatus, etc.
Evaporadores al Vacío para Líquidos Químicos	Vacuum Evaporators for Chemical Liquids
Evaporadores de Efecto Múltiple	Multiple Effect Evaporators
Excavadoras eléctricas	Grabbing Cranes (Electric)
Excavadoras y Transportadoras	Excavators and Transporters
Explosivos	Explosives
Explosivos para Minas	Mining Explosives
Extractores de Alquitrán	Tar Extractors

Para hallar los nombres de los fabricantes de los artículos especiales antes mencionados, refiéranse á los títulos equivalentes en inglés en la Classified Directory and Buyers' Guide (' Guía Clasificada de Anuncios '), páginas 2541–2611.

ESPAÑOL.	INGLÉS.
F	
Fabricantes de Alambre	Wire Manufacturers
Fabricantes de Alambres Aislados	Wire (Insulated) Manufacturers
Fabricantes de Calderas	Boiler Manufacturers
Fabricantes de Caucho, Gutapercha y Betún	India Rubber, Gutta Percha, and Bitumen Manufacturers
Fabricantes de Herramientas, Maquinistas, etca.	Tool Makers, Machinists, etc.
Fabricantes de Herramientas para Hacer Pozos Artesianos	Boring Tool Makers (Artesian)
Fabricantes y Comerciantes de Acero	Steel Manufacturers and Merchants
Fabricantes y Comerciantes de Hierro y Acero	Iron and Steel Manufacturers and Merchants
Fajas y Guita para Fábricas	Mill Bandings and Twines
Faros, fabricantes de aparatos de	Lighthouse Apparatus Manufacturers
Ferrocarriles Económicos, Portátiles, etca.	Railways: Light, Portable, etc.
Ferrocarriles Portátiles	Portable Railways
Ferrocarriles y Tranvías Eléctricos	Electric Railways and Tramways
Fibra Vulcanizada	Fibre (Vulcanised)
Fieltro y Techos de Fieltro	Felt and Felt Roofs
Fieltros para Fabricantes de Papel	Paper Makers' Felts
Fieltros para Máquinas de Imprimir, Maquinaria para Fabricar Papel y para Estampar Telas de Algodón	Felts for Printing Machinery, Paper Making, and Calico Printing Machinery
Fieltros para Tejados	Roofing Felts
Filtradores de Aire	Air Filters
Filtros de Aceites	Oil Filters
Filtros de Alimentación de Calderas. *Véase* Agua de Alimentación	Boiler Feed Filters. *See* Feed Waters
Forros de Paredes Resistentes á la Humedad	Damp Course and Bitumen Sheeting
Forros Embetunados contra la Humedad	Bitumen Damp-proof Sheeting
Forros para Tubos	Pipe Coverings
Fotografía de Ingeniería	Engineering Photography
Fraguas ó Instalaciones de Herrería	Smiths' Hearths and Plant
Fraguas Portátiles	Forges (Portable)
Frenos Automáticos Eléctricos	Automatic Controllers (Electric)
Frenos de Ferrocarriles	Railway Brakes
Frenos (Dinamómetros)	Brakes (Dynamometers)
Frenos (Electromecánicos)	Brakes (Electro-Mechanical)
Frenos (Ferrocarril)	Brakes (Railway)
Fresa escoriadora con espiga	End Mills
Fresas	Milling Cutters
Fresas. *Véase* Maquinaria para Fresar	Grinders. *See* Grinding Machinery
Fresas de Taladro y Machos de Tarraja	Reamers and Taps
Fundidores	Founders
Fundidores de Latón	Brass Founders
G	
Gabarraje	Lighterage
Galvanización, Instalaciones de	Galvanising Plant
Galvanizadores	Galvanisers
Gas y sus Aplicaciones Industriales	Gas and its Industrial Applications
Gasómetros. *Véase* Instalación de Fábricas de Gas	Gas Holders. *See* Gas Works Plant

Para hallar los nombres de los fabricantes de los artículos especiales antes mencionados, refiéranse á los títulos equivalentes en inglés en la Classified Directory and Buyers' Guide ('Guía Clasificada de Anuncios'), páginas 2541–2611.

ESPAÑOL.	INGLÉS.
Gatos Hidráulicos y de Tornillo para Levantar Pesos	Jacks (Hydraulic and Screw)
Generadores Eléctricos. *Véase* Dinamos y Motores	Generators (Electric). *See* Dynamos and Motors
Giroscopios	Gyroscopes
Grabadores, Delineantes e Impresores	Engravers, Draughtsmen, and Printers
Grafito	Graphite
Grafito, especialidades de, 'Foliac'	'Foliac' Graphite Specialities
Grafito 'Foliac' para Calderas	'Foliac' Boiler Graphite
Grasa Lubricante	Grease (Lubricating)
Greda	Chalk
Grifos de Latón para Agua, Vapor y Gas	Cocks (Brass) for Water, Steam, and Gas
Gruas. *Véase* Maquinaria para Elevar Pesos	Cranes. *See* Lifting and Hoisting Machinery
Gruas a Brazo. *Véase* Maquinaria de Elevar Pesos	Hand Cranes. *See* Lifting and Hoisting Machinery

H

Hélices Propulsoras	Screw Propellers
Herraje de Chapas y de Hierro Batido	Wrought and Sheet Ironwork
Herramientas de ajustadores de tubos	Pipe Fitters' Tools
Herramientas de Mano y Mecánicas. *Véase* Herramientas y Accesorios para Ingenieros	Machine and Hand Tools. *See* Engineers' Tools and Fittings. *Also* Tool Makers
Herramientas para Explotar Canteras	Quarrying Tools
Herramientas para Minas	Mining Tools
Herramientas para Rascar Metales	Scaling Tools
Herramientas 'Speedicum' para grandes velocidades	'Speedicum' High-Speed Tools
Herramientas y Accesorios para Ingenieros	Engineers' Tools and Fittings
Herramientas y Maquinaria para la Agricultura	Agricultural Tools and Machinery
Herramientas y Máquinas para Contratistas de Obras	Contractors' Tools and Plant
Herramientas y Utensilios Neumáticos	Pneumatic Tools and Appliances
Hierro en Lingotes	Pig Iron
Hierro Fundido	Cast Iron
Hierro y acero en recortes	Iron and Steel Scrap
Hierro y Acero Galvanizados, Fabricantes de	Galvanised Iron and Steel Manufacturers
Hojas de Sierras Tajaderas	Hack Saw Blades
Hojas incombustibles para divisiones y paredes	Fireproof Partition and Wall Sheets
Hormigón Armado. *Véase* Construcciones de Hormigón Armado	Ferro-Concrete. *See* Reinforced Concrete
Hormigón, instalaciones para	Concrete Placing Plants
Hornos (Metal no Férrico)	Furnaces (Non-Ferrous Metal)
Hornos Calentados con Gas y Petróleo e Industriales	Furnaces (Gas and Oil Heated and Industrial)
Hornos de Aceite. *Véase* Hornos	Oil Furnaces. *See* Furnaces
Hornos de Calderas	Boiler Furnaces
Hornos de Calderas. *Véase* Accesorios de Máquinas y Calderas	Furnaces (Boiler). *See* Engine and Boiler Fittings
Hornos de Carbón. *Véase* Hornos etca.	Coal Furnaces. *See* Furnaces
Hornos de Crisol	Crucible Furnaces
Hornos de Forjar. *Véase* Hornos	Forging Furnaces. *See* Furnaces
Hornos de Gas. *Véase* Hornos	Gas Furnaces. *See* Furnaces
Hornos de Recocido y Temple	Annealing and Tempering Furnaces

Para hallar los nombres de los fabricantes de los artículos especiales antes mencionados, refiéranse á los títulos equivalentes en inglés en la Classified Directory and Buyers' Guide ('Guía Clasificada de Anuncios'), páginas 2541–2611.

ESPAÑOL.	INGLÉS.
Hornos e Instalaciones de Gas Industriales	Industrial Gas Furnaces and Plants
Hornos Eléctricos	Electric Furnaces
Hornos para Calderas Marítimas y Terrestres	Furnaces for Marine and Land Boilers
Hornos para Templar. *Véase* Hornos	Tempering Furnaces. *See* Furnaces
I	
Imánes para Atraer Cuerpos	Lifting Magnets
Impresores, Litógrafos, Delineantes y Grabadores	Printers, Lithographers, Draughtsmen, and Engravers
Indicadores (Máquinas de Vapor)	Indicators (Steam Engine)
Indicadores de Cristal	Gauge Glasses
Indicadores de Nivel de Agua	Water Level Indicators
Indicadores de Nivel de Agua, etca. *Véase* Manómetros	Water Gauges, etc. *See* Steam Gauges
Indicadores Hidráulicos	Hydraulic Gauges
Indicadores Marinos de Velocidad	Marine Speed Indicator
Ingenieros consultores	Advisory Engineers
Ingenieros (Aeronáuticos). *Véase* Aeronautica (Ingenieros)	Engineers (Aeronautical). *See* Aeronautical Engineers
Ingenieros (Economía de combustible)	Engineers (Fuel Economy)
Ingenieros (Faros)	Engineers (Light house)
Ingenieros de Fuerza Hidráulica	Water Power Engineers
Ingenieros de Pozos Artesianos	Artesian Well Engineers
Ingenieros Metalúrgicos	Metallurgical Engineers
Ingenieros de Telégrafos	Telegraph Engineers
Ingenieros de Ventilación	Ventilating Engineers
Ingenieros Eléctricos	Electrical Engineers
Ingenieros Hidráulicos	Engineers (Hydraulic)
Ingenieros Mecánicos	Engineers (Mechanical)
Instalación de Altos Hornos	Blast Furnace Plant
Instalación de Alumbrado de Trenes	Train Lighting Plant
Instalación de Fabricas de Fundición	Foundry Plant
Instalación de Fábricas de Gas	Gas Works Plant
Instalación de Gas para Calefacción	Heating Plant (Gas)
Instalaciones de Benzole	Benzol Plants
Instalaciones de Carga y Transporte	Loading and Transport Plants
Instalaciones de Gas de Agua	Water Gas Plants
Instalaciones de Gas de Succión	Suction Gas Plants
Instalaciones de Gas Mond	Mond Gas Plants
Instalaciones de Gas para Producir Energía Mecánica	Power Plants (Gas
Instalaciones de Petróleo	Oil Burning Installations
Instalaciones Generadoras de Oxígeno e Hidrógeno	Oxygen and Hydrogen Generating Plants
Instalaciones de Tracción. *Véase* Máquinas de Izar y Tirar	Hauling Plant. *See* Winding and Hauling
Instalaciones Hidro-Eléctricas	Hydro-Electric Plants
Instalaciones para Aprovechar Materias	Recovery Plants
Instalaciones para construcción de edificios	Building Construction Plant
Instalaciones para el Manejo de Carbón, Coque y Cenizas	Coal, Coke, and Ash Handling Plants
Instalaciones para Explotación de Minas y Arrastres	Mining and Hauling Plant

Para hallar los nombres de los fabricantes de los artículos especiales antes mencionados, refiéranse á los títulos equivalentes en inglés en la Classified Directory and Buyers' Guide ('Guía Clasificada de Anuncios'), páginas 2541-2611.

ESPAÑOL.	INGLÉS.
Instalaciones para Fundir Metales	Metal Melting Plants
Instalaciones para Producir Gas. *Véase* Productores de Gas	Producer Gas Plants. *See* Gas Producers
Instalaciones para Recuperar Productos Secundarios	By-product Recovery Plants
Instalaciones y Maquinaria para Industrias Químicas	Chemical Plant and Machinery
Instalaciones y Utensilios Hidráulicos	Hydraulic Plants and Appliances
Instituciones de Instrucción. *Véase* Colegios y Escuelas	Educational Institutions. *See* Colleges and Schools
Instrumentos Científicos	Scientific Instruments
Instrumentos de Aeronautica	Aeronautical Instruments
Instrumentos de Agrimensura, Matemáticas, Dibujo, etc.	Instruments: Surveying, Mathematical, Drawing, etc.
Instrumentos de Agrimensura y Dibujo	Surveying and Drawing Instruments
Instrumentos de Matemáticas, Dibujo y Agrimensura	Mathematical, Drawing, and Surveying Instruments
Instrumentos Eléctricos de Medición. *Véase* Instrumentos	Measuring Instruments (Electrical). *See* Instruments
Instrumentos Meteorológicos	Meteorological Instruments
Instrumentos para conta	Counting Instruments
Instrumentos para Pruebas Eléctricas. *Véase* Instrumentos	Testing Instruments (Electrical). *See* Instruments
Instrumentos Registradores	Recording Instruments
Instrumentos y Aparatos Eléctricos. *Véase* Instrumentos y Aparatos (Eléctricos)	Electrical Instruments and Apparatus. *See* Instruments and Apparatus (Electrical)
Inyectores, Expulsores y Accesorios Generales. *Véase* Inyectores de Vapor	Injectors, Ejectors, and General Jet Appliances. *See* Steam Injectors
Inyectores de Vapor	Steam Injectors
J	
Jarcias para Aeroplanos etca.	Rigging for Air Craft
Juntas de Vapor. *Véase* Materiales para Juntas	Steam Jointing. *See* Jointing Materials
Juntas Flexibles. *Véase* Conexiones Flexibles	Couplings (Flexible). *See* Flexible Coupings
Juntas ('Lion' y 'Walkerite')	Joints ('Lion' and 'Walkerite')
L	
Ladrillos Refractarios y Artículos de Arcilla Refractaria	Fire Bricks and Fire Clay Goods
Laminadores (Equipo Eléctrico de)	Rolling Mills (Electrical Equipment of)
Lamparas: para Soldar y Máquina de Petróleo	Lamps: Brazing and Oil Engine
Lámparas de Arco. *Véase* Aparatos para Alumbrado Eléctrico	Arc Lamps. *See* Electric Light Fittings
Lámparas de Filamento Metálico	Metal Filament Lamps
Lámparas de Seguridad para Mineros	Miners' Safety Lamps
Lámparas Eléctricas. *Véase* Aparatos de Alumbrado Eléctrico, etca.	Lamps (Electric). *See* Electric Light Fittings, etc.
Lámparas Industriales	Lamps (Industrial)
Lámparas y Antorchas para Carboneras y Maquinistas etc.	Lamps: Torch, Bunker, etc., for Engineers generally
Lana de Escoria	Mineral Wool

Para hallar los nombres de los fabricantes de los artículos especiales antes mencionados, refiéranse á los títulos equivalentes en inglés en la Classified Directory and Buyers' Guide ('Guía Clasificada de Anuncios'), páginas 2541-2611.

ESPAÑOL.	INGLÉS.
Lanchas de Vapor y de Motor	Launches (Steam and Motor)
Latón y Bronce	Brass and Bronze
Libros Mayores de Hojas Sueltas	Loose Leaf Ledgers
Libros y Periódicos Científicos	Books and Journals, Scientific
Limas	Files
Limpiadores de Calderas (Mecánicos y Eléctricos)	Boiler Cleaners (Mechanical and Electrical)
Limpiatubos	Tube Cleaners
Líneas de Tubos	Pipe Lines
Lingotes de acero	Billets (Steel)
Lingotes de Bronce de Cañón	Gunmetal Ingots
Lingotes de Bronce de Cañón para el Almirantazgo	Admiralty Gun-metal Ingots
Llantas de automóviles	Motor Tyres
Llantas y ejes para ferrocarril	Railway Tyres and Axles
Locomotoras	Locomotives
Locomotoras de Petróleo (combustión interna)	Oil Locomotives (Internal Combustion)
Lubricadores y Lubricantes	Lubricator and Lubricants
Lubricantes para Motores	Motor Lubricants
Lubricantes para Tractores	Tractor Lubricants

M

Macádam con alquitrán y asfalto, instalaciones para	Tar Macadam and Asphalt Plant
Machos de Tarraja y Dados	Taps and Dies
Mandriles Magnéticos	Magnetic Chucks
Manganeso y Aleaciones de Manganeso	Manganese and Manganese Alloys
Mangueras Flexibles Metálicas	Hose (Flexible Metallic)
Mangueras para Bomberos, Fábricas, etc.	Hose for Fire Brigades, Mills, etc.
Manómetros, Grifos, Indicadores de Nivel de Agua, Válvulas de Seguridad, Valvulas de Distribución, Indicadores, Válvulas de Retención de Vapor, etc.	Steam Gauges, Cocks, Water Gauges, Safety Valves, Slide Valves, Indicators, Steam Traps, etc.
Maquinaria de Carga y Descarga para Fábricas de Gas y Hornos de Coque	Charging and Discharging Machinery for Gasworks and Coke Ovens
Maquinaria Hidráulica, 'Sistema de Tweddell'	'Tweddell's System,' Hydraulic Machinery
Maquinaria para Amolar	Grinding Machinery
Maquinaria para Amolar y Desgastar	Grinding Machinery (Abrading)
Maquinaria para Blanquear, teñir y Aderezar	Bleaching, Dyeing, and Finishing Machinery
Maquinaria para Cemento	Cement Machinery
Maquinaria para Destilar y Deshidratar el Alquitrán	Tar Distillation and Dehydrating Plant
Maquinaria para Elevar Pesos y Aparejos para Izar	Lifting and Hoisting Machinery and Lifting Tackle
Maquinaria para Fabricar Briquetas	Briquette Machinery
Maquinaria para Fabricar Cartuchos	Cartridge Machinery
Maquinaria para Fabricar Hielo. *Véase* Maquinaria Refrigerante	Ice-making Machinery. *See* Refrigerating Machinery
Maquinaria para Fabricar Hojas y Tejas de Cemento de Amianto	Asbestos Cement Sheet- and Tile-making Machinery
Maquinaria para Fabricar Ladrillos y Tejas	Brick- and Tile-making Machinery
Maquinaria para Fabricar Papel y Pasta para Papel	Paper and Pulp-making Machinery

Para hallar los nombres de los fabricantes de los artículos especiales antes mencionados, refiéranse á los títulos equivalentes en inglés en la Classified Directory and Buyers' Guide ('Guía Clasificada de Anuncios'), páginas 2541-2611.

ESPAÑOL.	INGLÉS.
Maquinaria para Hacer Pasta para Papel	Pulp-making Machinery
Maquinaria para Hacer Tuneles	Tunnelling Plants
Maquinaria para la Concentración del Amoníaco	Ammonia Concentration Plants
Maquinaria para Labrar Madera	Wood-working Machinery
Maquinaria para Lavar Carbón	Coal-washing Machinery
Maquinaria para Limpiar Cereales y Semillas	Grain and Seed Cleaning Machinery
Maquinaria para Minas de Carbón	Colliery Plant
Maquinaria para Moler, Elevar y Conducir Carbón	Coal Grinding, Elevating and Conveying Machinery
Maquinaria para Pulimentar	Polishing Machinery
Maquinaria para Tejer	Textile Machinery
Maquinaria para Tender Cables	Cable-Laying Machinery
Maquinaria para Trabajos de Minas. *Véase* Instalaciones de Minería y Tracción	Mining Machinery. *See* Mining and Hauling Plant
Maquinaria para Triturar y Pulverizar	Crushing and Pulverising Machinery
Maquinaria Refrigerante	Refrigerating Machinery
Maquinas Automáticas, Fabricantes de	Automatic Machine Makers
Máquinas de adujar con eje flexible	Flexible Shaft Coiling Machines
Máquinas de Escribir	Typewriters
Máquinas de Fresar	Milling Machines
Máquinas de Gasolina. *Véase* Máquinas de Petróleo y de Ga	Petrol Engines. *See* Oil and Gas Engines
Máquinas de Izar y Tirar	Winding and Hauling
Máquinas de Gasolina y Aire con Gas	Petrol Air Gas Machines
Máquinas de Perforación Radial y para Taladrar	Radial Drilling and Tapping Machines
Máquinas de Petróleo, de Gas y de Esencia de Petróleo	Oil, Gas, and Petrol Engines
Máquinas de Tornillos	Screwing Machines
Máquinas de Tracción, de Vapor y Eléctricas	Traction Engines (Steam and Electric)
Máquinas de Vapor	Steam Engines
Máquinas de vapor Diesel	Steam Diesel Engines
Máquinas de Volar, Constructores de. *Véase* Aeroplanes de Constructores	Aircraft Manufacturers. *See* Aeroplane Builders
Máquinas Electromagnéticas	Machinery (Electro-Magnets)
Máquinas, Herramientas y Utensilios Hidráulicos, etca.	Hydraulic Machines, Tools and Appliances, etc.
Máquinas Laminadoras	Rolling Mill Engines
Máquinas Marinas de Petróleo	Marine Oil Engines
Máquinas Motrices de Aceite Crudo. *Véase* Máquinas de Petróleo	Crude Oil Engines. *See* Oil Engines
Máquinas Motrices de Gas, Petróleo y Gasolina	Gas, Oil, and Petrol Engines
Máquinas Motrices de Vapor. *Véase* Máquinas de Vapor	Engines (Steam). *See* Steam Engines
Máquinas Motrices Diesel y Semi-Diesel	Diesel and Semi-Diesel Engines
Máquinas Motrices é Instalaciones de Izar y Tirar	Winding and Hauling Engines and Plant
Máquinas Motrices Hidráulicas	Engines (Hydraulic)
Máquinas Motrices Móviles	Portable Engines
Máquinas para Agujerear, Cortar y Combar	Punching, Shearing, and Bending Machines

Para hallar los nombres de los fabricantes de los artículos especiales antes mencionados, refiéranse á los títulos equivalentes en inglés en la Classified Directory and Buyers' Guide ('Guía Clasificada de Anuncios'), páginas 2541–2611.

ESPAÑOL.	INGLÉS.
Máquinas para Cepillar, Escoplear, Atornillar y Moldear	Planing, Slotting, Screwing, and Shaping Machines
Máquinas para Combar Tubos	Pipe Bending Machines
Máquinas para Cortar, Agujerear y Cimbrar	Shearing, Punching, and Bending Machines
Máquinas para Dentar Engranes	Gear Cutting Machines
Máquinas para Elevar. *Véase* Maquinaria para Elevar Pesos, etc.	Hoists. *See* Lifting and Hoisting
Máquinas para Estriar Piedra	Stone Channelling Machines
Máquinas para Hacer Pruebas	Testing Machines
Máquinas para mezclar mortero	Grouting Machines
Máquinas para Pesar, Básculas	Weighing Machines
Máquinas para Pintar	Painting Machines
Máquinas para Probar Cemento	Cement Testing Machines
Máquinas para Pruebas de Cemento de Portland	Testing Machines for Portland Cement
Máquinas para Renovar Asientos de Válvulas	Valve Reseaters
Máquinas para Soldar	Soldering Machines
Máquinas para Sondear en Roca y Carbón	Boring Machines for Rock and Coal
Máquinas para Taladrar y para Igualar Superficies	Boring and Facing Machines
Máquinas Verticales para Taladrar	Vertical Drilling Machines
Máquinas y Calderas Marinas y Maquinaria Auxiliar	Marine Engines, Boilers, and Auxiliary Machinery
Martillos de Forjar	Forging Hammers
Martillos de Golpe y Martinetes	Drop Stamps and Presses
Martinetes (de Fricción y de Caida Libre de Vapor)	Stamps (Friction and Steam Drop)
Martinetes de Fuerza Mecánica. *Véase* Martinetes de Vapor	Power Hammers. *See* Hammers
Martinetes de Vapor. *Véase* Martinetes	Steam Hammers. *See* Hammers
Martinetes de Vapor, de Aire Comprimido, Neumáticos, etca.	Hammers (Steam, Compressed Air, Pneumatic Power, etc.)
Martinetes para Clavar Estacas	Hammers (Pile Driving)
Material Rodante. *Véase* Establecimiento de Ferrocarriles y Tranvias	Rolling Stock. *See* Railway and Tramway Plant
Materiales Aisladores	Insulating Materials
Materiales para Juntas	Jointing Materials
Materiales 'Rok' para Tejados	'Rok' Roofing
Mecanismos Lubricantes	Lubricating Devices
Medición de Agua de Alimentación	Feed-Water (Measurement of)
Medidas ó Codos Acero	Steel Rules
Menaje de Oficinas	Office Furniture
Metal de Bull y Melloid	Bull's Metal and Melloid
Metal Delta	Delta Metal
Metal en recortes *Véase* recortes de Metal	Metal Scrap. *See* Scrap Metals
Metal Expansivo	Expanded Metal
Metales blancos para disminuir la fricción	White Anti-friction Metals
Metales, Comerciantes en	Metal Merchants
Metales en Lingotes	Ingot Metals
Metales Exturbados	Extruded Metals
Metales Laminados	Rolled Metals
Metales para Cojinetes etc.	Bearing Metals etc.
Metales Perforados	Perforated Metals
Metales: para Cojinetes, Antifricción, etc.	Metals: Bearing, Anti-friction, etc.
Metales para Disminuir la Fricción	Anti-friction Metals

Para hallar los nombres de los fabricantes de los artículos especiales antes mencionados, refiéranse á los títulos equivalentes en inglés en la Classified Directory and Buyers' Guide ('Guia Clasificada de Anuncios'), páginas 2541–2611.

ESPAÑOL.	INGLÉS.
Mezcladoras de hormigón	Concrete Mixers
Mica	Mica
Micrómetros	Micrometers
Microscopios	Microscopes
Minas de Carbón (Cuerdas de Alambre de Acero para)	Collieries (Steel Wire Ropes for)
Minas de Carbón (Equipo Eléctrico de)	Collieries (Electrical Equipment of)
Molinetes de Fricción	Winches (Friction)
Molinos Aereos Eléctricos	Aerial Grinders(Electric)
Molinos de Aceite	Oil Mill Machinery
Molinos de Centrar (Eléctricos)	Centre Grinders (Electric)
Molinos para Pulverizar iedra	Stone Pulverising Mills
Molinos Harineros	Flour - Milling Machinery
Molinos Pulverizadores	Mills (Pulverising)
Montacargas Hidráulicos. *Véase* Maquinaria para Elevar Pesos, etca.	Hydraulic Lifts. *See* Lifting and Hoisting
Montaje de Retortas	Settings (Retort)
Motores Eléctricos. *Véase* Dinamos y Motores	Electric Motors. *See* Dynamos and Motors
Muelles y Resortes	Springs
N	
Niebla, fabricantes de señales para	Fog Signal Manufacturers
Nitrógeno	Nitrogen
O	
Obra de Alambre y Alambre Tejido	Wire Work and Woven Wire
Obra de Caldereros	Coppersmiths' Work
Obra de Latón de Plomeros	Plumbers' Brass-work
Obra de Metal en Planchas, Cubiertas de Cilindros, etc.	Sheet Metal Work Cylinder Cases, etc.
Obras de Edificación de Hierro y Acero	Structural Iron and Steel Work, etc.
Oscilógrafos	Oscillographs
Oxígeno	Oxygen
P	
Palastros y Lingotes de Acero	Steel (Blooms and Billets)
Paleros Mecánicos	Mechanical Stokers
Paleros (Mecánicos). *Véase* Paleros Mecánicos	Stokers (Mechanical). *See* Mechanical Stokers
Paletas de Turbina	Turbine Blading
Pantómetras. *Véase* Instrumentos de Matemáticas, etca.	Slide Rules. *See* Instruments, Mathematical, etc.
Pararrayos	Lightning Conductors
Peldaños	Stair Treads
Periódicos Técnicos. *Véase* Libros y Periódicos	Journals (Technical). *See* Books and Journals
Pernos Aisladores de Telégrafo y toda clase de obra de Hierro para Telégrafo y Teléfono	Telegraph Insulator Bolts and all kinds of Ironwork for Telegraph and Telephone
Pernos y Tuercas de Hierro, Acero, Cobre, Bronce Naval, etca.	Bolts and Nuts (Iron, Steel, Copper, Naval Brass, etc.)
Pernos y Tuercas de Latón y Cobre. *Véase* Pernos y Tuercas de Hierro, etca.	Brass and Copper Bolts and Nuts. *See* Bolts and Nuts
Picos y Palas, etca.	Picks, Shovels, etc.
Piezas de Acero Forjado y Fundido. *Véase* Piezas Fundidas y Forjadas	Steel Forgings and Castings. *See* Castings and Forgings
Piezas de Cobre Forjadas	Copper Forgings
Piezas Forjadas y Fundidas. *Véase* Piezas Fundidas y Forjadas	Forgings and Castings *See* Castings and Forgings
Piezas fundidas para válvulas	Valve Castings

Para hallar los nombres de los fabricantes de los artículos especiales antes mencionados, refiéranse á los títulos equivalentes en inglés en la Classified Directory and Buyers' Guide (' *Guía Clasificada de Anuncios* '), *páginas* 2541–2611.

ESPAÑOL.	INGLÉS.
Piezas Fundidas y Forjadas	Castings and Forgings
Piezas Prensadas Hidráulicamente	Hydraulic Pressings
Pilas y Baterías de Acumulación	Storage Cells and Batteries
Pilas y Baterías de Acumulación Eléctrica. *Véase* Baterías (Acumulación Eléctrica)	Electrical Storage Cells and Batteries. *See* Storage Cells
Pilotes, Armaduras para Clavarlos	Pile Driving Frames
Pilotes (Chapa de Acero)	Piles (Steel Sheet)
Pilotes, Equipos para Clavarlos	Pile Driving Equipments
Piñones de Cuero al Pelo	Raw Hide Pinions
Piñones de Papel	Paper Pinions
Piñones de Papel Comprimido	Compressed Paper Pinions
Pintura al Temple	Distemper
PinturaAnticorrosiva	Anti-corrosive Paint
Pintura Silica-Grafito 'Foliac'	'Foliac' Silica-Graphite Paint
Pinturas, Colores, Esmaltes y Barnices	Paints, Colours, Enamels and Varnishes
Pinturas 'Minerva'	'Minerva' Paints
Pinturas para Conservar Obra de Hierro y Acero	Paints for Preserving Iron and Steel Work
Pirómetros	Pyrometers
Pizarras y Planchas de Cemento	Cement Slates and Boards
Planchas de acero a prueba de balas	Bullet-Proof Steel Plates
Planchas de Acero para Calderas	Boiler Plates (Steel)
Planchas para Suelos	Plates (Floor)
Planímetros	Surface Gauges
Plataformas giratorias	Turntables
Poleas	Pulleys
Poleas para Correas y Cuerdas de Transmisión	Belt and Rope Pulleys
Poleas para Cuerdas. *Véase* Poleas para Correas y Cuerdas de Transmisión	Rope Pulleys. *See* Belt and Rope Pulleys
Pólvora para Barrenos	Blasting Powder
Postes de Hierro para Telégrafos	Telegraph Poles(Iron)
Pozos de Petróleo (Cuerdas para)	Oil Well Ropes
Prensas con Fuerza Motriz	Power Presses
Prensas de Aceite	Oil Presses
Prensas de Cimbrar	Bending Presses
Prensas de Forjar	Forging Presses
Prensas para Desperdicios de Metales	Scrap Presses
Prensas para Hacer Bombas	Shell Presses
Prensas para Llantas	Tyre Presses
Preparaciones para última Mano á las Máquinas	Machinery Finishes
Preservativos (Calderas)	Preservatives (Boiler)
Preservativos de Calderas	Boiler Preservatives
Preservativos (Madera)	Preservatives (Wood)
Preservativos de la Madera	Wood Preservatives
Preventivos del Moho	Rust Preventives
Productores de Gas	Gas Producers
Productos Químicos	Chemicals
Propietarios de Diques	Dock Owners
Propietarios de Diques de Carena	Dry Dock Owners, Graving Dock Owners
Propulsión Electrica de Buques	Electric Ship Propulsion
Propulsores	Propellers
Protectores de Indicadores de Cristal	Gauge Glass Protectors
Provisión de Ingeniería y Material de Ferrocarriles. *Véase* Establecimiento de Ferrocarriles y Tranvías	Engineering and Railway Supplies. *See* Railway and Tramway Plant
Publicaciones Técnicas. *Véase* Libros y Periódicos	Publications (Technical). *See* Books and Journals
Puentes Colgantes de Cables de Alambre	Bridges (Wire Rope Suspension)
Puentes, Vigas, etca.	Bridges, Girders, etc.

Para hallar los nombres de los fabricantes de los artículos especiales antes mencionados, refiéranse á los títulos equivalentes en inglés en la Classified Directory and Buyers' Guide ('Guía Clasificada de Anuncios'), páginas 2541-2611.

ESPAÑOL.	INGLÉS.
Puertas Abatibles	Collapsible Gates
Pulverizadores (Molinos)	Pulveriser Mills
Puntales de Acero	Stanchions (Steel)
Punzones y Matrices	Punches and Dies
Purificación de Aguas de Albañal	Sewage Purification
Q	
Químicos Hidrológicos	Hydrological Chemists
R	
Rampa de encarrilamiento	Railway Re-railing Ramps
Rampas de ferrocarriles	Railway Ramps
Recalentadores	Superheaters
Recalentadores de Locomotoras	Locomotive Superheaters
Recalentadores Marinos	Marine Superheaters
Recipientes de Aire	Air Receivers
Recortes y Desperdicios de Metales	Metals (Scrap)
Redes de Defensa contra Torpedos	Torpedo Defence Nets
Reflectores (Oxiacetileno)	Searchlights (Oxyacetylene)
Refrenadores y Aparatos de Arrancada (Liquido)	Controllers and Liquid Starters
Refuerzos de Embragues	Clutch Linings
Refuerzos de Frenos y Embragues	Brake and Clutch Linings
Refuerzos para Hormigón Armado	Concrete (Reinforcement for)
Registradores de Agua	Water Recorders
Registradores de CO_2	CO_2 Recorders
Registradores de Gastos y Tiempo	Costs and Time Recorders
Registradores de la Producción de Cada Máquina	Machine Output Recorders
Registradores de Tiempo	Time Recorders
Reguladores de Agua de Alimentación	Water Regulators (Feed)
Reguladores de Máquinas de Vapor	Governors (Steam Engine)
Reguladores Hidráulicos	Governors (Hydraulic)
Relojes Eléctricos	Electric Clocks
Remachadoras Eléctricas	Riveters (Electric)
Remachadoras Hidráulicas y Neumáticas	Riveters (Hydraulic and Pneumatic)
Remaches de Hierro, Acero, Cobre, Bronce Naval etca.	Rivets (Iron, Steel, Copper, Naval Brass, etc.)
Removedores de Hollín	Soot Removers
Reparación deBuques y de Máquinas Motrices	Ship and Engine Repairers
Residuos animales (Instalaciones completas para su tratamiento)	Animal Residuals (Complete Plants for dealing with)
Respiradores	Respirators
Retortas de Gas	Gas Retorts
Rieles y Accesorios de Acero	Steel Rails and Accessories
Rieles y clavazón	Rails and Fastenings
Rociadoras	Spraying Machines
Rociadores Automáticos	Automatic Sprinklers
Rociadores 'Grinnell' (para Apagar Fuegos)	'Grinnell' Sprinkler
'Rosseline' (para Máquinas de Gas y de Petróleo)	'Rosseline' (for Gas and Oil Engines)
Ruberoid,' Material para Tejados	'Ruberoid' Roofing
Ruedas de Amolar	Abrasive Wheels
Ruedas de Esmeril Maquinaria, etca.	Emery Wheels, Machinery, etc.
Ruedas de Pelton	Pelton Wheels
Ruedas Hidráulicas, Motores Hidráulicos y Turbinas	Water Wheels, Water Motors, and Turbines

Para hallar los nombres de los fabricantes de los artículos especiales antes mencionados, refiéranse á los títulos equivalentes en inglés en la Classified Directory and Buyers' Guide ('Guía Clasificada de Anuncios'), páginas 2541–2611.

ESPAÑOL.	INGLÉS.
S	
Sangre, Instalaciones para secamiento de	Blood Drying Plants
Secaderos y Purificadores de Vapor	Steam Dryers and Purifiers
Secciones de Acero	Sections (Steel)
Secciones de (Metales Exturbados, con Privilegio de Invención) Bronce, Latón, etca.	Sections (Patent Extruded), Brass, Bronze, etc.
Señales. *Véase* Señales de Ferrocarriles	Signals. *See* Railway Signals
Señales de Ferrocarriles y Utensilios de Seguridad	Railway Signals and Safety Appliances
Señales Impermeables Herméticas para Minas	Mining Signals (Water-tight)
Separación de Aceite del Vapor Condensado	Separation of Oil from Condensed Steam
Separadores de Grasa	Grease Separators
Separadores Magnéticos	Magnetic Separators
Separadores Magnéticos para Destructores	Destructors (Magnetic Separators for)
Sierras para cortar madera y metales	Saws for Wood and Metal Cutting
Sierras y Máquinas para Cortar Metales	Hack Saws and Machines
Sistemas de Alambres Eléctricos Flexibles	Wiring Systems (Flexible)
Sistemas de Instalación de Alambres eléctricos. *Véase* Sistemas de instalación de Alambres Flexibles)	Electric Wiring Systems. *See* Wiring Systems (Flexible)
Sistemas de oficinas	Office Systems
Soldadura á Martillo y Corte de Metales	Welding and Cutting of Metals
Soldadura de Arco Eléctrico para Reparar Calderas	Boiler Repairs (Electric Arc Welding for)
Soldadura de Oxiacetileno	Oxy-AcetyleneWelding
Soldadura Eléctrica	Electric Welding
Soldadura 'Thermit'	'Thermit' Welding
Sondas de Investigación de Minas	Core Drills
Sopletes de Acetileno para Solda y Cortar	Blowpipes (Acetylene Welding & Cutting)
Sopladores. *Véase* Aparatos Soplantes	Blowers. *See* Fans
Sopladores de Chimenea de Vapor	Blowers (Steam Flue)
Soportes de tubos	Pipe Hangers
Suelos etca. (Resistentes al Fuego)	Floors, etc. (Fire Resisting)
Superficies de Fricción	Friction Surfaces
Superficies de Fricción de 'Ferodo'	'Ferodo' Friction Surfaces
'Syronite,' para Evitar el Moho	'Syronite,' Rust Preventive
T	
Tableros de conmutadores de batería	Battery Switchboards
Tableros de conmutadores de baterías de acumulación	Storage Battery Switchboards
Tachones, Pernos y Tuercas de Aluminio	Aluminium Studs, Bolts and Nuts
Tachos al Vacío Concentradores)	Vacuum Pans (Concentrating)
Tachos y Pailas para Azucar y otras Industrias	Evaporators for Sugar and Trade Liquors
Taladros para Perforar Rocas	Rock Drills
Taladros Salomónicos	Twist Drills
Taladros y Cinceles para Minas de Carbón	Coal Drills and Cutters
Taladros y Máquinas para Taladrar	Drills and Drilling Machines
Taladros y Martinetes Portátiles Eléctricos	Electric Portable Drills and Hammers
Tanques soldados	Welded Tanks
Tanques y Cisternas	Tanks and Cisterns
Taquímetros	Tachometers

Para hallar los nombres de los fabricantes de los artículos especiales antes mencionados, refiéranse á los títulos equivalentes en inglés en la Classified Directory and Buyers' Guide ('Guia Clasificada de Anuncios'), páginas 2541–2611.

ESPAÑOL.	INGLÉS.
Tejados, Composiciones para	Roofing Compounds
Tejados, Edificios de Hierro, etca.	Roofs, Iron Buildings etc.
Tejas de Amianto	Asbestos Roofing Tiles
Tejas y Hojas acanaladas (Amianto-Cemento)	Corrugated Tiles and Sheets (Asbestos-Cement)
Tela metálica	Wire Gauze
Temple superficial	Case Hardening
Termómetros	Thermometers
Tiza	Whiting
Toberas de hornos de fundición	Blast Furnace Tuyères
Topes de Ferrocarriles	Railway Stop Blocks
Tornería de Metale	Turned Work (any Metal)
Tornillos Hechos á Máquina	Machine Screws
Tornillos (Hierro, Acero, Cobre y Bronce Naval)	Screws (Iron, Steel, Copper, and Naval Brass)
Tornos. *Véase* Fabricantos de Herramientas	Lathes. *See* Tool Makers
Torres de Agua	Water Towers
Torres de Enfriamiento	Cooling Towers
Transformadores en Cascada	Motor Converters.
Transformadores Rotatorios	Rotary Converters
Transportadores. *Véase también* Correas de Transmisión	Conveyors. *See also* Belting
Transportadores de Telpher	Telphers
Tranvías (Cuerdas de Alambre de Acero para)	Tramways (Steel Wire Ropes for)
Tranvías de Cuerda de Alambre	Wire Rope Tramways
Tranvías y Ferrocarriles Eléctricos. *Véase* Ferrocarriles y Tranvías Eléctricos	Tramways and Railways (Electrical). *See* Electric Railways and Tramways
Trapiches y Maquinaria para Fabricar Azucar	Sugar Mills and Machinery
Tratamiento de Metales por Medio del Calor	Heat Treatment of Metals
Tubería Flexible Metálica	Tubing (Flexible Metallic)
Tubería de Hierro Colado para la Conducción de Agua y Gas	Cast-Iron Pipes for Water and Gas Purposes
Tubería Metálica Flexible	Flexible Metallic Tubing
Tubos. *Véase* Tubos y Accesorios, etca.	Pipes. *See* Tubes
Tubos de Acero. *Véase* Tubos	Steel Tubes. *See* Tubes
Tubos de Acero Remachados	Riveted Steel Pipes
Tubos de Acero Soldados a Martillo	Welded Steel Pipes
Tubos de Calderas	Boiler Tubes
Tubos de Cobre	Copper Tubes
Tubos de Hierro. *Véase* Tubos	Iron Tubes. *See* Tubes
Tubos de Hierro y de Acero	Iron and Steel Tubes
Tubos de Manguera, Mangueras de Cuero y de Lona, etca.	Hose Pipes, Leather and Canvas Hose, etc.
Tubos de Vapor. *Véase* Tubos	Steam Pipes. *See* Tubes
Tubos Flexibles para Calefacción á Vapor	Steam Heating Tubes (Flexible)
Tubos Hidráulicos	Hydraulic Tubes and Pipes
Tubos Neumáticos	Tubes (Pneumatic)
Tubos Neumáticos para Conducir Despaches, etc.	Pneumatic Despatch Tubes, etc.
Tubos para Condensadores (Cobre). *Véase* Tubos de Cobre	Condenser Tubes (Copper). *See* Copper Tubes
Tubos para Locomotoras	Loco Tubes
Tubos y Accesorios	Tubes and Fittings
Tubos y Aparatos de Gas	Gas Tubes and Fittings
Tubos y Serpentines para Refrigerar	Refrigerating Tubes and Coils
Tuercas	Nuts

Para hallar los nombres de los fabricantes de los artículos especiales antes mencionados, refiéranse á los títulos equivalentes en inglés en la Classified Directory and Buyers' Guide ('*Guia Clasificada de Anuncios*'), *páginas* 2541–2611

ESPAÑOL.	INGLÉS.
Turbinas con Engranaje (Auxiliares)	Geared Turbine Auxiliaries
Turbinas de Vapor. *Véase* Turbinas de Vapor y sus Accesorios	Turbines (Steam). *See* Steam Turbines
Turbinas de Vapor y sus Accesorios	Steam Turbines and Fittings
Turbinas, Ruedas Hidráulicas y Motores Hidráulicos	Turbines, Water Wheels, and Water Motors
Turboalternadores	Turbo Alternators
Turbo-Bombas	Turbo-Pumps
Turbo - Generadores. *Véase* Dínamos y Motores	Turbo - Generators *See* Dynamos and Motors
U	
Utensilios para Transmisión de Fuerza	Power Transmission Appliances
V	
Vagones de Volteo	Tip Wagons
Válvulas de Cierre y de Compuerta	Stop and Sluice Valves
Válvulas y Grifos	Valves and Cocks
Válvulas Atmosféricas y de Retención de Vapor	Vacuum and Steam Traps
Válvulas de Cojinete para Bombas de Aire	Bush Valves for Air Pumps
Válvulas de Distribución	Slide Valves
Válvulas de Reducción. *Véase* Valvulas	Reducing Valves. *See* Valves
Válvulas de Retención de Vapor. *Véase* Manómetros, etca.	Steam Traps. *See* Steam Gauges, etc.
Vapor (contadores de)	Steam Meters
Varillas Ahuecadas y Secciones de Latón, Cobre, etca.	Hollow Rods and Sections (Brass, Copper, etc.)
Varillas de acero	Steel Rods
Varillas de cobre	Rods (Copper)
Varillas de Metal Amarillo 'Dixtampo' para Estampar en Caliente y Forjar	'Dixtampo' Yellow Metal Rods for Hot Stamping and Forging
Varillas y Secciones de Cobre	Copper Rods and Sections
Vasos de Vidrio para Lubricadores	Lubricator Glasses
Vástagos de Taladros de Acero para grandes velocidades y Acero con plata	High Speed and Silver Steel Drill Rods
Vehículos Automóviles Comerciales	Motor Vehicles (Commercial)
Ventilación, Calefacción, etc.	Ventilating, Heating, etc.
Vias de Cables Aéreos	Cableways
Vigas (procedimiento de Grey) con reborde ancho	Beams (Grey process) Broad Flange
Vigas, Puentes, etca. *Véase* Obras de Edificación de Hierro y Acero	Girders, Bridges, etc. *See* Structural Iron and Steel Work
Viguetas de Acero	Joists (Steel)
Voltímetros. *Véase* Instrumentos Eléctricos	Voltmeters. *See* Instruments (Electrical)
Vulcanita y Fibra Vulcanizada	Vulcanite and Vulcanised Fibre
W	
'Woodite'	'Woodite'
Y	
Yeso	Plaster
Z	
Zapatos de Frenos	Brake Blocks

Para hallar los nombres de los fabricantes de los artículos especiales antes mencionados, refiéranse á los títulos equivalentes en inglés en la Classified Directory and Buyers' Guide ('Guía Clasificada de Anuncios'), páginas 2541-2611.

ПЕРЕВОДЪ ЗАГОЛОВКОВЪ ПОДРОБНАГО УКАЗАТЕЛЯ СПЕЦІАЛЬНОСТЕЙ АНОНСОДАТЕЛЕЙ—стр. 2541—2611.

Листъ фабрикантовъ по вышеуказаннымъ спеціальностямъ—см. соотвѣтствующіе англійскіе заголовки въ Подробномъ Указателѣ Анонсодателей, на стр. 2541—2611. Адреса фирмъ и свѣдѣнія объ ихъ спеціальностяхъ въ ‚The Engineer's Year-Book' (Инженерный Ежегодникъ)—см. предыдущій алфавитный списокъ—стр. 2521—2538.

ПО РУССКИ.	ПО АНГЛІЙСКИ.	ПО РУССКИ.	ПО АНГЛІЙСКИ.
А		Альтернаторы	Alternators
Автоматическіе контролеры (электрическіе)	Automatic Controllers (Electric)	Алюминіевые сплавы для штамповыхъ отливокъ	Aluminium Die Casting Alloys.
Автоматическ. брызгалки	Automatic Sprinklers	Алюминіевые шпильки, болты и гайки	Aluminium Studs, Bolts, and Nuts
Автоматическихъ машинъ, фабр.	Automatic Machine Makers	Алюминіевыя полосы съ зарубками	Aluminium Notched Bars.
Автомобильныя принадлежности	Motor-Car Accessories	Алюминіевый порошокъ	Aluminium Powder.
Азбесто-цементные волнистые кровельные листы	Asbestos Cement Corrugated Roofing Sheets	Алюминій (слитки, листы, трубки, проволока, кабели, фасоны и пр.)	Aluminium (Ingots, Sheets, Tube, Wire, Cable, Sections, etc.)
Азбесто-цементные кровельные листы и черепицы ‚Этернитъ' (плоскіе и волнистые)	'Eternit' Asbestos Cement Roofing Tiles and Sheets (Flat and Corrugated)	Анализъ дымоваго газа въ котлахъ	Boiler Flue Gases (Analysis)
Азбесто-цементные плоскіе листы для стѣнъ, перегородокъ, потолковъ, и т. д.	Asbestos Cement Flat Sheets, etc.	Антифрикціонные металлы	Antifriction Metals
		Аппараты для безпроволочнаго телеграфа	Wireless Telegraphic Apparatus
		Аппараты для дистилляціи воды, см. также Конденсаторы	Water Distilling Apparatus (see also 'Condensers')
Азбестовая набивка ‚Ліонъ'	Asbestos Packing ('Lion')	Аппараты для нагрѣванія (газовые)	Heating Plant (Gas)
Азбестовая прокладка и фашинные тюфяки	Asbestos Coverings and Mattresses	Аппараты для очищенія и смягченія воды — см. также Нагрѣватели питательной воды и пр.	Water Softening and Purifying Apparatus (see also 'Feed Water Heaters, etc.')
Азбестовые листы и кровельныя черепицы ‚Пуалитъ'	'Poilite' Asbestos Sheets and Roofing Tiles	Аппараты для очищенія газа	Gas Cleaning Plant
Азбестовыя издѣлія, приспособл. и пр.	Asbestos Goods, Fittings, etc.	Аппараты для пожарной тревоги	Fire Alarms
Азбестовыя кровельныя черепицы	Asbestos Roofing Tiles	Аппараты для регистрованія производительности машины	Machine Output Recorders
Азотная кислота	Nitric Acid	Аппараты для сбереженія пара	Steam Saving Appliances
Азотъ	Nitrogen		
Аккумуляторы—см. Батареи	Accumulators—(see 'Batteries')		
Аккумуляторы (гидравлическіе)	Accumulators (Hydraulic)		

ПО РУССКИ	ПО АНГЛІЙСКИ.	ПО РУССКИ.	ПО АНГЛІЙСКИ.
Аппараты для сбереженія топлива — см. Экономайзеры	Fuel Economisers (see 'Economisers')	Барометры	Barometers
Аппараты для экстракта смолы	Tar Extractors	Батареи (электрическія аккумуляторныя)	Batteries (Electrical Storage)
Аппараты для электрическаго передвиженія, разгрузки и пр.	Telphers	Башмаки для наводки на рельсы	Railway Re-railing Ramps
		Башмаки и упорки (штампы)	Shoes and Dies
Арматура для бетона	Concrete (Reinforcement for)	Безопасныя рудничныя лампы	Miner's Safety Lamps
Арматура котловъ — см. Арматура къ машинамъ и котламъ	Boiler Fittings (see 'Engine and Boiler Fittings')	Бензино - воздушныя машины	Petrol Air Gas Machines
		Бензолевыя машины	Benzol Plants
Арматура котловъ — см. также Арматура къ машинамъ и котламъ	Boiler Mountings (see also 'Engine and Boiler Fittings')	Блестящей стали, фабр.	Bright Steel Manufacturers
		Блоки для наблюденія надъ котлами.	Inspection Blocks for Boilers
Арматура къ машинамъ и котламъ, котельныя топки, трубы и пр.	Engine and Boiler Fittings, Boiler Furnaces, Tubes, etc.	Болванки (стальныя)	Billets (Steel)
		Болты и гайки (желѣзные, стальные, мѣдные, изъ морской мѣди и пр.)	Bolts and Nuts (Iron, Steel, Copper, Naval Brass, etc.)
Асфальтъ	Asphalte	‚Бойлеринъ'	'Boilerine'
Ацетилено - газовыя машины для освѣщенія и отопленія	Lighting and Heating, Acetylene Gas Plants for	Бронза — см. Латунь и бронза	Bronze (see 'Brass and Bronze')
		Бронзовая отливка для адмиралтейства	Admiralty Gunmetal Ingots
Ацетиленовые буойи и баканы	Acetylene Buoys and Beacons	Бронированныя комнаты (стальныя или каменной кладки)	Strong Rooms (Steel or Masonry)
Ацетиленовыя генераторныя установки	Acetylene Generating Plants	Брусья (мѣдные)	Rods (Copper)
		Брызгалки (автоматическія)	Sprinklers (Automatic)
Ацетиленъ	Acetylene	Брызгалки ‚Гриннель'	'Grinnell' Sprinklers
Аэронавтическіе инструменты	Aeronautical Instruments	Бумага (непромокаемая)	Paper (Waterproof)
Аэронавтическія механическія мастерскія	Aeronautical Engineers	Бумажныя шестерни	Paper Pinions
		Буойи и баканы	Buoys and Beacons
Аэроплановъ, строители	Aeroplane Builders	Бурильныя машины для камня и угля	Boring Machines for Rock and Coal
		Быстрорѣжущая инструментальная сталь	High - speed Tool Steel
Б		Быстрорѣжущая сталь ‚Спидикутъ'	'Speedicut' High-speed Steels
Балки (стальныя)	Joists (Steel)	**В**	
Балки, мосты и пр. — см. Желѣзныя и стальныя сооруженія	Girders, Bridges, etc. (see 'Structural Iron and Steel Work')	Вагонныя сцѣпки	Railway Couplings
Балки съ широкими фланцами (по способу Грэя)	Beams (Grey process), Broad Flange.	Вагонныя шины и оси	Railway Tyres and Axles

Листъ фабрикантовъ по вышеуказаннымъ спеціальностямъ — см. соотвѣтствующіе англійскіе заголовки въ ‚Подробномъ указателѣ Анонсодателей' на стр. 2541—2611.

ПО РУССКИ.	ПО АНГЛІЙСКИ.
Вагоны (Жел. Дор.)	Wagons (Railway)
Вагоны (Пассажирскіе и Товарные)	Carriages and Wagons (Railway)
Вагранки	Cupolas
Вакуумные и Паровые отводчики	Vacuum and Steam Traps
Вакуумныя чашки (концентраціонныя)	Vacuum Pans (Concentrating)
Вакуумъ-испарители для химическихъ жидкостей	Vacuum Evaporators for Chemical Liquids
Вакуумъ насосы—см. Насосы	Vacuum Pumps (see 'Pumps')
Валы и приводы	Shafting and Gearing
Вентиляторы: воздухогувные, выпускные, электрическіе и пр.	Fans (Blowing, Exhaust, Electric, etc.)
Вентиляціонные валы	Ventilating Shafts
Вентиляціонные техники	Ventilating Engineers
Вентиляція, Отопленіе и пр.	Ventilating, Heating, etc.
Веревочныя подвѣски для летательныхъ машинъ	Rigging for Air Craft
Вертикальные сверлильные станки	Vertical Drilling Machines
Вещества, предохраняющія отъ ржавчины	Rust Preventives
Взрывающій порохъ	Blasting Powder
Взрывчатыя вещества	Explosives
Вилльесденская бумага и парусина	Willesden Paper and Canvas
Винтовое зацѣпленіе	Helical Gearing
Винтовые валы	Propeller Shafts.
Винтовые реостаты (Гидравлическіе)	Propeller Starters (Hydraulic)
Винторѣзные станки	Screwing Machines
Винты (желѣзные, стальные мѣдные, изъ морской мѣди)	Screws (Iron, Steel, Copper and Naval Brass)
Владѣльцы доковъ	Dock Owners
Владѣльцы сухихъ доковъ	Dry Dock Owners
Воздухомѣры	Air Meters
Водоизмѣрители и пр.—см. Паровые манометры	Water Gauges, etc. (see 'Steam Gauges')
Водолазные аппараты	Diving Apparatus
Водомѣрныя стекла	Gauge Glasses
Водомѣры	Water Meters
Водонапорныя башни	Water Towers
Водонепроницаемые составы	Waterproofing Compounds
Водонепроницаемые составы для зданій	Buildings (Waterproofing of)
Водоохладители	Water-cooling Apparatus
Водорегиструющіе аппараты	Water Recorders
Водотрубные котлы—см. Котельные Заводчики	Water-tube Boilers (see 'Boiler Manufacturers')
Водяныя колеса, Водяные двигатели и Турбины	Water Wheels, Water Motors and Turbines
Водяныя краски	Distemper
Воздуходувки для камина	Flue Blowers
Воздухолетательныхъ машинъ, фабр. (см. Аэропланов, строители)	Aircraft Manufacturers (see Aeroplane Builders)
Воздушные компрессоры	Air-Compressors
Воздушные насосы	Air Pumps
Воздушные рельсовые пути	Overhead Runways
Воздушные фильтры	Air Filters
Воздушныя камеры	Air Receivers
Волнистыя черепицы и плиты (изъ азбестоваго цемента)	Corrugated Tiles and Sheets (Asbestos-Cement)
Волочильныя машины	Wire-drawing Machinery
Вольтметры—см. Инструменты (Электрическіе)	Voltmeters (see Instruments — Electrical')
Войлокъ для бумажныхъ фабрикъ	Paper Makers' Felts

Листъ фабрикантовъ по вышеуказаннымъ спеціальностямъ—см. соотвѣтствующіе англійскіе заголовки въ 'Подробномъ указателѣ Анонсодателей' на стр. 2541—2611.

ПО РУССКИ.	ПО АНГЛІЙСКИ.	ПО РУССКИ.	ПО АНГЛІЙСКИ.
Войлокъ для печатныхъ машинъ, машинъ для производства бумаги и набивной бумажной ткани	Felts for Printing Machinery, Paper Making, and Calico Printing Machinery	Генераторы (электрическіе)—см. Динамо и двигатели	Generators (Electric) (see 'Dynamos and Motors')
Вращающіеся конвертеры	Rotary Converters	Гибкія металлическія трубы	Flexible Metallic Tubing
Вспомогательныя турбинныя передачи	Geared Turbine Auxiliaries	Гибкое сцѣпленіе	Flexible Couplings
Вторичные элементы и батареи	Storage Cells and Batteries	Гидравлическіе лифты—см. Подъемныя машины	Hydraulic Lifts (see 'Lifting and Hoisting')
Вулканитъ и вулканизированная фибра	Vulcanite and Vulcanised Fibre	Гидравлическіе манометры	Hydraulic Gauges
Выдѣлка инструментовъ, машинисты и пр.	Tool Makers, Machinists, etc.	Гидравлическія машинныя установки, приспособленія и пр.	Hydraulic Plants and Appliances
		Гидравлическія машины, инструменты и пр.	Hydraulic Machines, Tools and Appliances, etc.
Г		Гидравлическія машины системы „Тведделя"	'Tweddell's System' Hydraulic Machinery
Газогольдеры (см. газовыхъ заводовъ оборудованіе)	Gas Holders (see 'Gas Works Plant')	Гидравлическія трубы и трубопрозоды	Hydraulic Tubes and Pipes
Газовые генераторы	Gas Producers	Гидравлическія штамповки	Hydraulic Pressings
Газовые, нефтяные и керосиновые двигатели	Gas, Oil, and Petrol Engines	Гидрологическіе химики	Hydrological Chemists
Газовые счетчики	Gas Meters	Гидротехники (Техники для оборудованія водяной силы)	Water-power Engineers
Газовыя реторты	Gas Retorts	Гидро-электрическія установки	Hydro-Electric Plants
Газовыя топки (печи)—см. Топки, плавильныя печи	Gas Furnaces (see 'Furnaces')	Гироскопы	Gyroscopes
Газовыя трубы и приспособленія	Gas Tubes and Fittings	Граверы, чертежники и типографы	Engravers, Draughtsmen, and Printers
Газогенераторныя установки съ всасываніемъ	Suction Gas Plants	Графитъ	Graphite
Газоочистительные вентиляторы	Gas Washing Fans	Графитъ для котловъ „Зодіакъ"	'Foliac' Boiler Graphite
Газъ и его примѣненіе къ промышленности	Gas and its Industrial Applications	Графитныя спеціальности „Зодіакъ"	'Foliac' Graphite Specialities
Гайки	Nuts	Графитовый составъ „Зодіакъ" для набивки трубъ	'Foliac' Graphite Pipe Joint Compound
Гальванизаторы (машины для оцинкованія)	Galvanisers	Гребные винты	Screw Propellers
Гальванопластическія мастерскія	Metal (Electro Depositors)	Громоотводы	Lightning Conductors
		Грузоподъемныя машины—см. Подъемныя машины	Hoists (see 'Lifting and Hoisting')

Листъ фабрикантовъ по вышеуказаннымъ спеціальностямъ—см. соотвѣтствующіе англійскіе заголовки въ „Подробномъ указателѣ Анонсодателей" на стр. 2541—2611.

ПО РУССКИ.	ПО АНГЛІЙСКИ.
Д	
Двери (для желѣзныхъ комнатъ и замуравленныхъ шкаповъ)	Doors (Strong Room and Party Wall)
Двигатели (Гидравлическіе)	Engines (Hydraulic)
Двигатели (Паровые) —см. паровые двигатели	Engines (Steam) (see 'Steam Engines')
Двигатели Дизель и полу-Дизель	Diesel and Semi-Diesel Engines
Двигатели для аэропдановъ	Aero Engines
Двигатели, работающіе на сырой нефти	Crude Oil Engines (see 'Oil Engines')
‚Дексинъ'	'Dexine'
Деструкторы (машины для уничтоженія мусора.)	Destructors (Refuse)
‚Дикстампо'— Штанги изъ желтаго металла для штампованія и ковки въ горячемъ видѣ	'Dixtampo' Yellow Metal Rods for Hot Stamping and Forging
‚Дикструдо' Быстроходныя мѣдерѣзательныя и обтачивающія штанги	'Dixtrudo' High-speed Brass Screwing and Turning Rods
Динамитъ	Dynamite
Динамо и Двигатели	Dynamos and Motors
Динамометры	Dynamometers
Доки (плавучіе)	Docks (Floating)
Домкраты (гидравлическіе и винтовые)	Jacks (Hydraulic and Screw)
Дорогъ (арматура для)	Roads (Reinforcement for)
Дрели и Сверлильные Станки	Drills and Drilling Machines
Дымовыя каски (для пожарныхъ)	Smoke Helmets
Дымовыя (печныя) Трубы	Chimney Stacks
Ж	
Желѣзнодорожное и Трамвайное оборудованіе	Railway and Tramway Plant
Желѣзнодорожные тормазы	Railway Brakes
Желѣзнодорожныя стрѣлки и крестовины	Railway Points and Crossings
Желѣзнодорожныя упорныя скобы	Railway Stop Blocks
Желѣзныя дороги: легкія, переносныя и пр.	Railways (Light, Portable, etc.)
Желѣзныя и стальныя сооруженія	Structural Iron and Steel Work
Желѣзныя и стальныя трубы	Iron and Steel Tubes
Желѣзныя трубы — см. Трубы	Iron Tubes (see 'Tubes')
Желѣзобетонное строительство	Ferro-Concrete (see 'Reinforced Concrete')
Желѣзобетонъ — см. Желѣзобетонное строительство	Concrete (Reinforced) Construction
Жесть (бѣлая)	Tin Plates
Животные остатки (полныя установки для использованія таковыхъ)	Animal Residuals (Complete Plants for Dealing with)
Жидкіе пусковые реостаты и контролеры	Liquid Starters and Controllers
Жидкій воздухъ	Liquid Air
Жироотдѣлители	Grease Separators
Журналы (Технические)—см. Книги и журналы	Journals (Technical) (see 'Books and Journals')
З	
Заводскихъ зданій (постройка)	Factory Buildings (Construction of)
Загибающіе прессы	Bending Presses
Заграды (изъ желѣза и стали)	Fencing (Iron and Steel)
Задвижки и клапаны	Sluice Gates and Valves
Заклепки (Желѣзныя, стальныя, изъ морской мѣди и пр.)	Rivets (Iron, Steel, Copper, Naval Brass, etc.)

Листъ фабрикантовъ по вышеуказаннымъ спеціальностямъ—см. соотвѣтствующіе англійскіе заголовки въ ‚Подробномъ указателѣ Анонсодателей' на стр. 2541—2611.

ПО РУССКИ.	ПО АНГЛІЙСКИ.
Замазка для соединеній (муфтъ)	Jointing Cement
Замазка „Кисоль" для котловъ, паровыхъ трубъ и пр.	'Kisol' Cement for Boilers, Steam Pipes, etc.
Замазочные матеріалы	Jointing Materials
Замки, болты и пр.	Locks, Bolts, etc.
Запорные клапаны и задвижки	Stop and Sluice Valves
Зацѣпленіе	Gearing
Защитныя сѣти для торпедъ	Torpedo Defence Nets
Звенья водомѣрныхъ стеколъ	Gauge Glass Rings
Звонки (электрическіе)	Bells (Electric)
Земледѣльческія орудія и машины	Agricultural Tools and Machinery
Землемѣрные и чертежные инструменты	Surveying and Drawing Instruments
Землечерпалка (стальной троссъ для)	Dredgers (Steel Wire Rope for)
Землечерпательныя машины	Dredge Plant
„Зодіакъ" котельный графитъ	'Foliac' Boiler Graphite
Золотники	Slide Valves
Зубчатая и коническая зубчатая передача	Spur and Bevel Gearing
И	
Известь и известнякъ	Lime and Limestone
Изданія (Техническія)—см. Книги и Журналы	Publications (Technical) (see 'Books and Journals')
Измѣрители для шахтъ	Minemeters
Измѣрители растяжимости	Extensometers
Измѣрители силы напряженія	Strainmeters
Изолирующіе матеріалы	Insulating Materials
Изоляторы	Insulators
Изоляціонные лаки и составы	Insulating Varnishes and Compounds
Индикаторы (паровыхъ котловъ)	Indicators (Steam Engine)
Инжекторы, эжекторы и разные струйчатые приборы —см. Паровые инжекторы	Injectors, Ejectors, and General Jet Appliances (see 'Steam Injectors')
Инженерная фотографія	Engineering Photography
Инженерное обученіе —см. Колледжи	Engineering Training (see 'Colleges')
Инженерные и желѣзнодорожные поставщики — см. Желѣзнодорожное и трамвайное оборудованіе	Engineering and Railway Supplies (see 'Railway and Tramway Plant')
Инженерные инструменты и принадлежности	Engineers' Tools and Fittings
Инженеры (гидравлическіе)	Engineers (Hydraulic)
Инженеры (механики)	Engineers (Mechanical)
Инженеры-консультанты	Advisory Engineers
Инженеры-металурги	Metallurgical Engineers
Инженеры-электротехники	Electrical Engineers
Инженеры (по части экономіи топлива)	Engineers (Fuel Economy)
Инженеры (по устройству маяковъ)	Engineers (Lighthouse)
Инструментальная сталь	Tool Steel
Инструментные заводы	Tool Makers
Инструменты для измѣренія (электрическіе) — см. Инструменты	Measuring Instruments (Electrical) (see 'Instruments')
Инструменты для каменоломенъ	Quarrying Tools
Инструменты: для межеванія, готовальни, чертежные и пр.	Instruments (Surveying, Mathematical, Drawing, etc.)

Листъ фабрикантовъ по вышеуказаннымъ спеціальностямъ—см. соотвѣтствующіе англійскіе заголовки въ „Подробномъ указателѣ Анонсодателей" на стр. 2541—2611.

ПО РУССКИ.	ПО АНГЛІЙСКИ.
Инструменты для производства испытаній (электрическіе) — см. Инструменты	Testing Instruments (Electrical) (see 'Instruments')
Инструменты для снятія накипи (котельнаго камня)	Scaling Tools
Инструменты и аппараты (электрическіе)	Instruments and Apparatus (Electrical)
Инструменты изъ быторѣжущей стали ‚Спидикутъ'	'Speedicut' High Speed Tools
Инструменты, научные	Scientific Instruments
Испарители для сахара, ликеровъ и пр.	Evaporators for Sugar and Trade Liquors
Испарители, конденсаторы, аппараты для дистилляціи воды и пр.	Evaporators, Condensers, Water Distilling Apparatus, etc.
Испарители многократнаго эффекта	Multiple Effect Evaporators
К	
Кабели: Телеграфные, телефонные, для электрическаго освѣщенія и подводные	Cables (Telegraph, Telephone, Electric Light, and Submarine)
Кабели для мореходства, подъема и пр.	Cables for Shipping, Haulage, etc.
Кабели изъ массивной резины — см. Кабели	Solid Rubber Cables (see 'Cables')
Кабельные пути	Cableways
Кабельныя воздушныя дороги	Aerial Ropeways
Кабестановъ, фабр.	Capstan Lathe Makers
Калильныя печи — см. Топки, плавильныя печи	Tempering Furnaces (see 'Furnaces')
‚Каллендритъ' непромокаемые гудронные листы	'Callendrite' Damp-course and Sheeting
Калориметры для испытанія топлива	Calorimeters for Fuel Testing
Калориферы	Calorifiers

ПО РУССКИ	ПО АНГЛІЙСКИ.
Кальціевый карбидъ	Calcium Carbide
Каменноугольныхъ копей (канаты изъ стальной проволоки для)	Collieries (Steel Wire Ropes for)
Каменноугольныхъ копей (электрическое устройство)	Collieries (Electrical Equipment of)
Камеры и затворы	Cameras and Shutters
Камнебурильныя машины	Rock Drills
Канатные трамваи	Wire Rope Tramways
Канаты: проволочные, пеньковые, манилла, кожаные, хлопчато-бумажные и асбестовые	Ropes (Wire, Hemp, Manilla, Leather, Cotton, and Asbestos)
Канаты для нефтяныхъ источниковъ	Oil Well Ropes
Канаты и жгуты изъ стальной проволоки для аэроплановъ	Aeroplane Steel Wire Strands & Cables
Карбидъ кальція	Carbide of Calcium
Каскадные конверторы (патенты—Peebles - la Cour)	Motor Converters (Peebles-la Cour Patents)
Кинитическіе конденсаторы марки ‚Контрафло' ‚Кирассъ' (фабричныя марки)	'Contraflo' Kinetic Condensers 'Cuirass'
Кирки, лопаты и пр.	Picks, Shovels, etc.
Кислородныя и водородныя генераторныя установки)	Oxygen and Hydrogen Generating Plants
Кислородъ	Oxygen
Кислота для аккумуляторовъ	Accumulator Acid
Кислотостойкіе чаны	Acid Resisting Pans
Клапаны и краны	Valves and Cocks
Клапаны съ втулками для воздушныхъ насосовъ	Bush Valves for Air Pumps
Клепальныя машины (гидравлическія и пневматическія)	Riveters (Hydraulic and Pneumatic)

Листъ фабрикантовъ по вышеуказаннымъ спеціальностямъ—см. соотвѣтствующіе англійскіе заголовки въ ‚Подробномъ указателѣ Анонсодателей' на стр. 2541—2611.

ПО РУССКИ.	ПО АНГЛІЙСКИ.
Клепальныя машины (электрическія)	Riveters (Electric)
Клепанныя стальныя трубы	Riveted Steel Pipes
Книги и Журналы, научные	Books and Journals, Scientific
Ковкія отливки	Malleable Castings
Ковочные молота	Forging Hammers
Ковочные прессы	Forging Presses
Кожаные приводные ремни — см. Приводные ремни	Leather Belting (see 'Belting')
Колеса Пелтона	Pelton Wheels
Колесное зацѣпленіе	Wheel Gearing
Колледжи (инженерные)	Colleges (Engineering)
Колокольные заводы	Bell Founders
Колонны и чугунныя приспособленія для стока грязной воды, для газа и для водопроводовъ	Columns and Castings for Sewage, Gas, and Water Works
Комплектъ частей къ замочной шайбѣ	Lock-Washer Equipment
Конденсаторы, испарители, машины для очистки и перегонки воды и пр.	Condensers, Evaporators, Water Softening and Distilling Apparatus etc.
Конденсаторы пара (конденсаціонные горшки) — см. Паровые манометры и пр.	Steam Traps (see 'Steam Gauges, etc.')
Конторская мебель	Office Furniture
Конторскіе книги съ свободно вынимающимися страницами	Loose Leaf Ledgers
Конторскія системы	Office Systems
Котельная листовая сталь	Boiler Plates (Steel)
Котельные заводы	Boiler Manaufcturers
Котельныя топки	Boiler Furnaces
Котельныя трубы	Boiler Tubes
Котлы для подогрѣванія мятымъ паромъ	Exhaust Heat Boilers
Котлы для снабженія горячей воды	Hot Water Supply Boilers
Конвертеры (каскадные) (патенты — Peebles - la Cour)	Converters (Motor (Peebles-la Cour Patents)
Котлы, употребляющіеся въ химическомъ производствѣ	Digesters
Краны (изъ желтой мѣди) для воды, пара и газа	Cocks (Brass) for Water, Steam and Gas
Краны—см. Подъемныя машины	Cranes (see 'Lifting and Hoisting Machinery')
Красильныя машины	Painting Machines
Краски „Минерва"	'Minerva' Paints
Краски для предохраненія желѣзныхъ и стальныхъ сооруженій	Paints for Preserving Iron and Steel Work
Краска противъ разъѣданія	Anti-Corrosive Paint.
Краски и лаки	Colours, Paints and Varnishes
Краски, эмали и лаки	Paints, Colours, Enamels and Varnishes
Краскотерки	Paint Mills
Кремнево-графитная краска „Зодіакъ"	Foliac Silica Graphite Paint
Кровельныя папки	Roofing Felts
Кровли, Руберойдъ'	'Ruberoid' Roofing
Крытый кабель „Кэбъ Тайръ"	'Cab Tyre' Sheathed Cables
Крыши (кровли), желѣзныя зданія и пр.	Roofs, Iron Buildings, etc.
Кузнечные горны и приспособленія	Smiths' Hearths and Plant
Кузнечныя топки — см. Топки, плавильныя печи	Forging Furnaces (see 'Furnaces')
Кузницы (переносныя)	Forges (Portable)
Кэссоновъ (строители)	Caissons (Builders of)
Л	
Лаки	Varnishes

Листъ фабрикантовъ по вышеуказаннымъ спеціальностямъ—см. соотвѣтствующіе англійскіе заголовки въ „Подробномъ указателѣ Анонсодателей" на стр. 2541—2611.

ПО РУССКИ.	ПО АНГЛІЙСКИ.
Лампы: Паяльныя и для двигателей для жидкаго топлива	Lamps (Brazing and Oil Engine)
Лампы: факели, для ларей и т. д., и вообще для всѣхъ надобностей механиковъ	Lamps (Torch, Bunker, etc., for Engineers generally)
Лампы (рабочія)	Lamps (Industrial)
Лампы (электрическія) — см. Приспособленія для электрическаго освѣщенія и пр.	Lamps (Electric)(see 'Electric Light Fittings, etc.')
Латунные и мѣдные болты и гайки — см. Болты и гайки	Brass and Copper Bolts and Nuts (see 'Bolts and Nuts')
Латунь и бронза	Brass and Bronze
Латунь и мѣдь (листовая и обручная)	Brass and Copper (Sheet and Strip)
Лебедки (паровыя, электрическія и бензиновыя)	Winches (Steam, Electric and Petrol)
Лебедки (фрикціонныя)	Winches (Friction)
Легкіе грузовые автомобили	Motor Vehicles (Commercial)
Листы (мѣдные и латунные)	Plates (Copper and Brass)
Литейные заводы	Founders
Литейные ковши	Foundry Ladles
Литейный чугунъ	Cast Iron
Литые металлы	Ingot Metals
„Ліонъ" набивка	'Lion' Packing
Лодки (паровыя и моторныя)	Launches (Steam and Motor)
Локомотивныя трубы	Loco Tubes
Локомотивы	Locomotives
Локомотивы для жидкаго топлива (внутренняго сгоранія)	Oil Locomotives (Internal Combustion)
Локоморы (тракторы), паровые и электрическіе	Traction Engines (Steam and Electric)
Ломъ металловъ	Scrap Metals
Лѣстницы (огнеупорныя)	Staircases (Fire-Resisting)

ПО РУССКИ.	ПО АНГЛІЙСКИ.
М	
Магнитная сталь	Magnet Steel
Магнитные патроны	Magnetic Chucks
Магнитные сепараторы	Magnetic Separators
Магнитные сепараторы для деструкторовъ	Destructors, Magnetic Separators for
Мазь для ремней	Belting Cream
Марганецъ и марганцовые сплавы	Manganese and Manganese Alloys
Марганцевая бронза	Manganese Bronze
Марганцевая сталь	Manganese Steel
Масленки и Смазочныя масла	Lubricators and Lubricants
Масленки ручныя, всякаго рода	Oil Feeders and Cans
Масло (смазочное)	Grease (Lubricating)
Масло для употребленія при нарѣзкѣ винтовъ	Screwing Oil
Маслоотдѣлители для питательной воды для котловъ	Boiler Feed-water, Oil Elimination from
Маслоуловители	Oil Eliminators
Математическіе, чертежные и измѣрительные инструменты	Mathematical, Drawing, and Surveying Instruments
Матеріалъ для желѣзо-бетона	Fabric (Reinforcing)
Матеріалъ марки „Рокъ" для крытія крышъ	'Rok' Roofing
Машинная набивка „Ліонъ"	Engine Packing ('Lion')
Машинная сталь закаленная на воздухѣ	Air-hardening Gear Steel
Машинные винты (болты)	Machine Screws
Машинные и ручные инструменты — см. Инженерные инструменты и принадлежности, также Инструментные заводы	Machine and Hand Tools (see 'Engineers' Tools and Fittings,' also 'Tool Makers')

Листъ фабрикантовъ по вышеуказаннымъ спеціальностямъ—см. соотвѣтствующіе англійскіе заголовки въ „Подробномъ указателѣ Анонсодателей" на стр. 2541—2611.

ПО РУССКИ.	ПО АНГЛІЙСКИ.	ПО РУССКИ.	ПО АНГЛІЙСКИ.
Машинные приводы, приводные валы и пр. — см. Валы и приводы	Mill Gearing, Shafting, etc. (see 'Shafting and Gearing')	Машины для нефтепрогонныхъ заводовъ	Oil Mill Machinery
Машинные ремни и бичевки	Mill Banding and Twines	Машины для оборудованія газовыхъ заводовъ	Gasworks Plant
Машины (электромагнитныя)	Machinery (Electro-Magnets)	Машины для оборудованія заводовъ для сахарнаго производства	Sugar Mills and Machinery
Машины для бороздованія камня	Stone-channelling Machines	Машины для оборудованія копей—см. Установки для оборудованія копей и подъемныя установки	Mining Machinery (see 'Mining and Hauling Plants')
Машины для буренія и облицовки	Boring and Facing Machines	Машины (станки) для обрабатыванія дерева	Wood-working Machinery
Машины для бѣленія, крашенія и отдѣлки	Bleaching, Dyeing and Finishing Machinery	Машины для обработки резины	Rubber Machinery
Машины для взвѣшиванія, вѣсы	Weighing Machines	Машины для охлажденія и овлажненія	Air-cooling and Humidifying Apparatus
Машины для выдѣлки брикетовъ	Briquette Machinery	Машины для подъема	Hauling Plant (see 'Winding and Hauling')
Машины для выдѣлки кирпичей и черепицъ	Brick and Tile Making Machinery	Машины для полировки	Polishing Machinery
Машины для выдѣлки плитъ и черепицъ изъ асбестоваго цемента	Asbestos Cement Sheet and Tile Making Machinery	Машины для производства бумаги и древесной массы	Paper and Pulp Making Machinery
Машины для генераторнаго газа—см. Газовые генераторы	Producer Gas Plants (see 'Gas Producers')	Машины для производства льда—см. Холодильныя машины	Ice-making Machinery (see 'Refrigerating Machinery')
Машины для дистиллированія (свѣжей воды)	Distilling Apparatus (Fresh Water)	Машины для производства патроновъ	Cartridge Machinery
Машины для загрузки и выгрузки для газовыхъ заводовъ и коксовальныхъ печей	Charging and Discharging Machinery for Gasworks and Coke Ovens	Машины для производства химическихъ продуктовъ	Chemical Plant and Machinery
Машины для испытанія цемента	Cement-testing Machines	Машины для производства цемента	Cement Machinery
Машины для кольцеванія гибкихъ валовъ	Flexible Shaft-Coiling Machines	Машины для прокладки кабелей	Cable-laying Machinery
Машины для литейнъ	Foundry Plant	Машины для промывки угля	Coal Washing Machinery
Машины для мукомольныхъ мельницъ	Flour Milling Machinery	Машины для раздробленія и пульвиризированія	Crushing and Pulverising Machinery
Машины для нагрузки и транспорта	Loading and Transport Plants		

Листъ фабрикантовъ по вышеуказаннымъ спеціальностямъ—см. соотвѣтствующіе англійскіе заголовки въ „Подробномъ указателѣ Анонсодателей" на стр. 2541—2611.

ПО РУССКИ.	ПО АНГЛІЙСКИ	ПО РУССКИ.	ПО АНГЛІЙСКИ.
Машины для размельченія угля и Элеваторы и Транспортеры для угля	Coal Grinding, Elevating and Conveying Machinery	Металлъ „Буллъ" и Меллоидъ	Bull's Metal and Melloid
Машины для сгибанія трубъ	Pipe-bending Machines	Металлъ Дельта	Delta Metal
Машины для тунельныхъ работъ	Tunnelling Plants	Металлъ для подшипниковъ и пр.	Bearing Metals, etc.
Машины для угольныхъ копей	Colliery Plant	Металлы: для подшипниковъ, антифрикціонный и пр.	Metals (Bearing Anti-friction, etc.)
Машины для улавливанія побочныхъ продуктовъ	Bye-Product Recovery Plants	Металлы (ломъ)	Metals (Scrap)
Машины для уничтоженія мусора	Refuse Destructors	Металлы съ продырявленными отверстіями	Perforated Metals
Машины для чистки зерна и семянъ	Grain and Seed Cleaning Machinery	Метеорологическіе инструменты	Meteorological Instruments
Машины и инструменты для строительныхъ работъ	Contractors' Tools and Plant	Метчики и матрицы	Taps and Dies
Машины и топки на отходящихъ газахъ	Industrial Gas Furnaces and Plants	Механическіе кочегары	Mechanical Stokers
Мельницы (размельчительныя)	Mills (Pulverizing)	Механическіе молота—см. Молота	Power Hammers (see 'Hammers')
Мельницы для размельченія камня	Stone Pulverizing Mills	Механическія мастерскія (Аэронавтическія) см. „Аэронавтическія Механическія Мастерскія"	Engineers, (Aeronautical) see 'Aeronautical Engineers
Металлическая набивка — см. Набивка машинъ	Metallic Packing (see 'Engine Packing')	Микрометры	Micrometers
Металлическая набивка для поршневыхъ штоковъ (марки „Lancaster")	Metallic Piston Rod Packings ('The Lancaster')	Микроскопы	Microscopes
Металлическая набивка поршневого штока „Ліонъ"	Metallic Piston Packing ('Lion')	Минеральная шерсть	Mineral Wool
Металлическая набивка поршневого штока „Юнайтедъ Стэйтсъ"	Metallic Piston Rod Packing ('United States')	Молота (паровые, компрессорные, пневматическіе и пр.)	Hammers (Steam, Compressed Air, Pneumatic Power, etc.)
Металлическіе листы, цилиндрическія коробки (кожухи) и пр.	Sheet Metal Work Cylinder Cases, etc.	Молоты (для вбиванія свай)	Hammers (Pile Driving)
Металлическія трубы (гибкія)	Metallic Tubing (Flexible)	Морской клей	Marine Glues
Металлурги сты (Электро-)	Metallurgists, Electro	Мосты висячіе (на проволочныхъ канатахъ)	Bridges (Wire Rope Suspension)
		Мосты, фермы (балки) и пр.	Bridges, Girders, etc.
		Мѣдники (Мѣдно-литейны)	Coppersmiths
		Мѣдно-литейщики	Brass Founders
		Мѣдные стержни и фасонная мѣдь	Copper Rods and Sections
		Мѣдныя издѣлія	Coppersmiths' Work
		Мѣдныя ковки	Copper Forgings
		Мѣдныя принадлежности для свинцоработъ	Plumbers' Brass-work

Листъ фабрикантовъ по вышеуказаннымъ спеціальностямъ—см. соотвѣтствующіе англійскіе заголовки въ „Подробномъ указателѣ Анонсодателей" на стр. 2541—2611.

ПО РУССКИ.	ПО АНГЛІЙСКИ.	ПО РУССКИ.	ПО АНГЛІЙСКИ.
Мѣдныя соединительныя кольца	Copper Jointing Rings	Нефтяные двигатели—см. Нефтяные и газовые двигатели	Petrol Engines (see 'Oil and Gas Engines')
Мѣхи—см. Вентиляторы	Blowers (see 'Fans')	Нефтяныя топки—см. Топки (печи)	Oil Furnaces (see 'Furnaces')
Мѣхи (паропроводные)	Blowers (Steam Flue)	Никкелевая и никкелево-хромовая сталь	Nickel and Nickel-Chrome Steels
Мѣшалки для бетона	Concrete Mixers.	Ножи для ножницъ (всѣхъ размѣровъ)	Shear Blades (all sizes)
Н		Нормализированіе	Normalizing
Набивка Валькера „Ліонъ"	Walker's ('Lion') Packing	**О**	
Набивка „Вудайтъ"	'Woodite'	Обмазка (блестящихъ частей) и апретура машинъ	Coatings (Bright Part) and Machinery Finishes
Набивка для нефтяныхъ двигателей	Gas-engine Packing	Обмотка котловъ и трубъ	Boiler and Pipe Coverings
Набивка „Ліонъ"	Packing ('Lion')	Обмотка трубъ	Pipe Coverings
Набивка машинъ	Engine Packing	Обмуровка котловъ	Boiler Setting
Набивка (паровая)—см. Набивка машинъ	Packing (Steam) (see 'Engine Packing')	Обмуровка котловъ (усовершенствованная)	Boiler Settings (Improved)
Набивка поршня	Piston Packing	Оборудованіе для осмоленія, мощенія и асфальтованія дорогъ	Tar, Macadam and Asphalt Plant
Набивка „Юнайтедъ Стейтсъ"	Packing ('United States')	Оборудованіе для сооруженія построекъ	Building Construction Plant
Нагрѣватели питательной воды, фильтры и очистители	Feed-water Heaters, Filters and Purifiers	Оборудованіе доменныхъ печей	Blast Furnace Plant
Наждачныя колеса, машины и пр.	Emery Wheels, Machinery, etc.	Оборудованіе производства водянаго газа	Water Gas Plants
Напильники	Files	Оборудованіе производства газа системы „Мондъ"	Mond Gas Plants
Насосы	Pumps	Обработка металловъ нагрѣваніемъ	Heat Treatment of Metals
Насосы и машины для насасыванія	Pumps and Pumping Machinery	Обшивка изъ волокнистаго шлака и шлаковой шерсти	Silicate Cotton and Slag Wool Coverings
Насосы перемѣнной емкости	Variable Capacity Pressure Pumps	Огнеупорный кирпичъ и продукты изъ огнеупорной глины	Fire Bricks and Fire Clay Goods
Наугольники	Squares	Огнеупорный полъ „Деколитъ"	'Decolite' Fireproof Flooring
Непромокаемые гудронные листы	Damp-course and Bitumen Sheeting	Огнеупорныя листы для перегородокъ и стѣнъ	Fireproof Partition and Wall Sheets
Непромокаемые листы гудрона (толя)	Bitumen Damp-proof Sheeting		
Нержавѣющая сталь	Rustless Steel		
Нержавѣющая сталь „Фирта"	Firth's Stainless Steel		
Несгораемые шкафы и желѣзныя комнаты (сопротивляющіеся огню и взлому)	Safes and Strong Rooms (Fire and Burglar Resisting)		
Нефтяные, газовые и керосиновые двигатели	Oil, Gas and Petrol Engines		

Листъ фабрикантовъ по вышеуказаннымъ спеціальностямъ—см. соотвѣтствующіе англійскіе заголовки въ „Подробномъ указателѣ Анонсодателей" на стр. 2541—2611.

ПО РУССКИ.	ПО АНГЛІЙСКИ.
Огражденія для лифтовъ (подъемныхъ машинъ)	Lift Enclosures
Окись - ацетиленовая сварка	Oxy-Acetylene Welding
Опоры (усовершенст.) ланкаширскихъ котловъ (котлы съ двумя жаровыми трубами)	Lancashire Boiler Settings (Improved)
Опрокидывающіеся вагоны	Tip Wagons
Оружейные и аммуниціонные заводы	Gun and Ammunition Works
Освѣщеніе мастерскихъ	Workshops (Lighting of)
Освѣщеніе поѣздовъ	Lighting (Train)
Освѣщеніе фабрикъ и заводовъ	Factories, Lighting of
Осцилографы	Oscillographs
Отводчики (конденсаціонные горшки) и очистители пара	Steam Dryers and Purifiers
Отдѣленіе масла отъ сгущеннаго пара	Separation of Oil from Condensed Steam
Отдѣлка (апретура) машинъ	Machinery Finishes
Отдѣлочные станы	End Mills
Отливка для клапановъ	Valve Castings
Отливки (ковкія) марки „Black Heart“	Black - Heart Castings (Malleable)
Отливка изъ стальныхъ сплавовъ	Steel Alloy Castings
Отливки и фасонныя ковки	Castings and Forgings
Отопленіе, вентиляція и пр.	Heating, Ventilating, etc.
Отопленіе для жел.-дор. вагоновъ	Heating for Railway Carriages
Охлаждающія башни	Cooling Towers
Оцинкованнаго желѣза и стали, фабр.	Galvanized Iron and Steel Manufacturers
Оцинковочныхъ мастерскихъ, оборудованіе	Galvanizing Plant
Очистители сточныхъ водъ	Sewage Purification

ПО РУССКИ.	ПО АНГЛІЙСКИ.
П	
Палатки и будки	Tents and Shelters
Паровая замазка—см. Замазочные матеріалы	Steam Jointing (see ‘Jointing Materials’)
Паровозные колѣнчатые валы	Railway Crankshafts
Паровозныя трубы	Loco Tubes
Паровые двигатели	Steam Engines
Паровые инжекторы	Steam Injectors
Паровые, компрессорные и пневматическіе молота	Steam, Compressed Air and Pneumatic Power Hammers
Паровые котлы—см. Котельные заводы	Steam Boilers (see ‘Boiler Manufacturers’)
Паровые манометры, краны, водомѣрныя стекла, предохранительные клапаны, золотники, индикаторы, конденсаціонные горшки и пр.	Steam Gauges, Cocks, Water Gauges, Safety Valves, Slide Valves, Indicators, Steam Traps, etc.
Паровые молота—см. Молота	Steam Hammers (see ‘Hammers’)
Паровые насосы—см. Насосы	Steam Pumps (see ‘Pumps’)
Паровыхъ машинъ набивка	Steam Packing
Паровыхъ машинъ набивка „Ліонъ“	Steam Packing (‘Lion’)
Паровыя судна, лодки и яхты	Steam Ships, Launches and Yachts
Паровыя Турбины и приспособленія	Steam Turbines and Fittings
Пароизмѣрители	Steam Meters
Паромовъ (металлическіе канаты для)	Ferries (Wire Rope)
Паропроводныя трубы—см. Трубы	Steam Pipes (see ‘Tubes’)
Пароструйные инжекторы	Steam Injectors
Патроны	Chucks (Lathe)
Патроны (магнитные)	Chucks (Magnetic)
Патрубки котловъ	Boiler Seatings
Паяльныя машины	Soldering Machines

Листъ фабрикантовъ по вышеуказаннымъ спеціальностямъ—см. соотвѣтствующіе англійскіе заголовки въ „Подробномъ указателѣ Анонсодателей“ на стр. 2541—2611.

ПО РУССКИ.	ПО АНГЛІЙСКИ.	ПО РУССКИ.	ПО АНГЛІЙСКИ.
Паяльныя трубки (для алюминіевой сварки и разрѣзанія)	Blowpipes (Acetylene Welding and Cutting)	Пневматическіе инструменты и приспособленія	Pneumatic Tools and Appliances
Перегрѣватели	Superheaters	Пневматическія трубы для телеграммъ и пр.	Pneumatic Despatch Tubes, etc.
Перегрѣватели для локомотивовъ	Locomotive Superheaters	Поверхности для спуска товаровъ	Runways
Перегрѣтая набивка для локомотивовъ	Locomotive Superheated Packing	Поверхностная цементація	Case Hardening
Передаточные ремни, канаты и пр.	Driving Bands, Ropes, etc.	Поверхностное сгораніе	Surface Combustion
Передаточныя цѣпи	Driving Chains	Поворотные столы	Turntables
Передачи и зацѣпленія	Shafting and Gearing	Поворотныя и подъемныя машины и приспособленія	Winding and Hauling Engines and Plant
Перекрытіе и облицовка дымохода	Flue Covers and Linings	Поворотныя лебедки	Crab Winches
Переносные электрическіе дрели и молота	Electric Portable Drills and Hammers	Подвижной составъ —см. Желѣзно-дорожное и трамвайное оборудованіе	Rolling Stock (see 'Railway and Tramway Plant')
Переносныя желѣзныя дороги	Portable Railways	Подводные кабели—см. Кабели	Submarine Cables (see 'Cables')
Переносныя машины	Portable Engines	Подвѣсные шлифовальные станки (электрическіе)	Aerial Grinders (Electric)
Печи для закалки и затвердѣнія	Annealing and Tempering Furnaces	Подрядчики и строители стѣнокъ и огнеупорныхъ сооруженій	Partition Contractors and Fireproof Builders
Пестовые молота (фрикціонные и паровые)	Stamps (Friction and Steam Drop)	Подрядчики по землечерпательнымъ работамъ	Dredging Contractors
Пильныя ленты (для ножевокъ для металловъ)	Hack Saw Blades	Подрядчики по строенію крышъ	Roofing Contractors
Пилы для дерева и металловъ	Saws for Wood and Metal Cutting	Подрядчики электрическаго освѣщенія	Electric Lighting Contractors
Пирометры	Pyrometers	Подставки и крышки для котловъ	Boiler Blocks and Covers
Питательной воды (измѣреніе)	Feed-water, Measurement of	Подшипники (кокильной отливки)	Bearings (Chill Cast)
Питательные насосы для котловъ	Boiler Feed Pumps	Подшипники (шариковые)	Bearings (Ball)
Пишущія машины	Typewriters	Подъемные канаты	Winding & Hauling Ropes
Плавильныя печи (для металловъ кромѣ желѣза)	Furnaces (non-ferrous metal)	Подъемные магниты	Lifting Magnets
Пластичный металлъ (Ричардса)	Plastic Meta (Richards)	Подъемныя машины и полиспасты (сложные блоки)	Lifting and Hoisting Machinery and Lifting Tackle
Плиты и черепицы (плоскія и волнистыя) для кровлепокрытій изъ асбестоваго цемента ‚Everite'	'Everite' Asbestos-Cement Roofing Sheets and Tiles (Flat and Corrugated)		

Листъ фабрикантовъ по вышеуказаннымъ спеціальностямъ—см. соотвѣтствующіе англійскіе заголовки въ ‚Подробномъ указателѣ Анонсодателей' на стр. 2541—2611.

ПО РУССКИ.	ПО АНГЛІЙСКИ	ПО РУССКИ.	ПО АНГЛІЙСКИ.
Пожарныя кишки (трубы), гибкія металлическія	Hose (Flexible Metallic)	Предохранительныя средства отъ разъѣданія	Corrosion, Prevention of
Покрытія для котловъ и пр.	Coverings for Boilers, etc.	Прессованные металлы	Extruded Metals
Полиспасты	Pulley Blocks	Прессованныя издѣлія	Presswork
Полоса ковкой стали	Mild Steel Strips	Прессы для лома	Scrap Presses
Полоса стали холодной прокатки	Cold-rolled Steel Strip	Прессы для масла	Oil Presses
Полукруглые алюминіевые прутья для сталедѣлательныхъ заводовъ	Steel Makers' Half-round Aluminium Sticks	Прессы для снарядовъ	Shell Presses
Полы и пр. (огнеустойкіе)	Floors, etc. (Fire-resisting)	Прессы для шинъ	Tyre Presses
Портландскій цементъ (машины для испытанія)	Portland Cement, Testing Machines for	Приборы, водолазные	Diving Apparatus
Портовые шлюзы	Dock Gates, Builders of	Приборы для испытанія портландскаго цемента	Testing Machines for Portland Cement
Поршневыя кольца	Piston Rings	Приборы для отдѣленія желѣза	Separators (Magnetic)
Поршни насоса	Pump Buckets	Приборы для производства испытаній	Testing Machines
Постройки	Buildings	Приборы для просмаливанія	Road Tarring Appliances
Починки котловъ сварка (вольтовой другой для)	Boiler Repairs, Electric Arc Welding for	Приборы для тушенія пожаровъ	Fire Extinguishing Appliances
Предохраненія отъ молній для зданій	Buildings, Protection of from Lightning	Приборы для форсированной и искусственной тяги	Forced and Induced Draught Apparatus
Предохранительные ободки для водомѣрныхъ стеколъ	Gauge Glass Protectors	Приводные прессы	Power Presses
Предохранительныя приспособленія для котловъ	Machinery Guards	Приводные ремни и пр., кожаные, бумажные, волосяные, каучуковые и пр.	Belting, etc. (Leather, Cotton, Hair, India-rubber, etc.)
Предохранительныя приспособленія для машинъ	Boiler Preservatives	Приводные ремни изъ балаты	Balata Belting
Предохранительныя средства (для дерева)	Preservatives (Wood)	Приводныя ножевки и машины	Hacksaws and Machines
Предохранительныя средства (для котловъ)	Preservatives (Boiler)	Приводы (изъ сырой кожи)	Gears (Raw Hide)
Предохранительныя средства отъ образованія накипи въ котлахъ и разъѣданія	Scale and Corrosion in Boilers, Preventives of	Придаваніе водонепроницаемости цементу	Cement, Waterproofing of
		Принадлежности для производства дугообразной сварки и электроды	Quasi-Arc Welding Accessories and Electrodes
		Принадлежности для чертежныхъ работъ	Drawing Office Requisities
		Приспособленія для аэроплановъ	Aeroplane Accessories
		Приспособленія для передачи силы	Power Transmission Appliances

Листъ фабрикантовъ по вышеуказаннымъ спеціальностямъ—см. соотвѣтствующіе англійскіе заголовки въ „Подробномъ указателѣ Анонсодателей" на стр. 2541—2611.

ПО РУССКИ.	ПО АНГЛІЙСКИ.
Приспособленія для предотвращенія дыма и производства пара	Smoke Preventers and Steam Generators
Приспособленія для угля, кокса и золы	Coal, Coke and Ash Handling Plants
Приспособленія для удаленія сажи	Soot Removers
Приспособленія для урегулированія клапановъ	Valve Reseaters
Приспособленія для форсированія болтовъ	Bolt Forcers
Приспособленія для электрическаго освѣщенія и электрическія принадлежности	Electric Light Fittings and Electrical Accessories
Пробковыя плиты и оболочки для покрытія трубъ	Cork Slabs and Pipe Covering
Проволочная прокладка (гибкая)	Wiring Systems (Flexible)
Проволочная ткань	Wire Gauze
Проволочные канаты	Wire Ropes
Проволочныя издѣлія и плетеная проволока	Wire Work and Woven Wire
Проволочныя канатныя дороги	Wire Ropeways
Проволочныя щетки	Wire Brushes
Провода—см. Стальныя изолирующія трубы и системы электрическихъ проводовъ	Conduits (see 'Steel Conduits and Wiring Systems')
Провѣтриваніе, вентиляція	Ventilation
Производство бурильныхъ инструментовъ (артезіанскихъ)	Boring Tool Makers (Artesian)
Прожекторы (оксиацетиленовые)	Searchlights (Oxyacetylene)
Производство аппаратовъ для маяковъ	Lighthouse Apparatus Manufacturers
Производство (изоляціонной) проволоки	Wire (Insulated) Manufacturers
Производство и торговля желѣзомъ и сталью	Iron and Steel Manufacturers and Merchants
Производство проволоки	Wire Manufacturers
Производство стали и торговля	Steel Manufacturers and Merchants
Производство туманныхъ сигналовъ	Fog Signal Manufacturers
Прокатанные металлы	Rolled Metals
Прокатныхъ становъ (электрическое устройство)	Rolling Mills (Electrical Equipment of)
Прокатныя машины	Rolling Mill Engines
Промежуточные нагрѣватели и перегрѣватели	Interheaters and Reheaters
Пропеллеры	Propellers
Пуле-непробиваемая листовая сталь	Bullet-Proof Steel Plates
Пунсоны и штампы	Punches and Dies
Пусковые реостаты и жидкіе пусковые реостаты	Controllers and Liquid Starters
Пустотѣлые стержни и профили (изъ желтой и красной мѣди и проч.)	Hollow Rods and Sections (Brass, Copper, etc.)

Р

Радіально-сверлильные и нарѣзочные станки	Radial Drilling and Tapping Machines
Радіо - телеграфные аппараты	Radio - Telegraphy Apparatus
Разбрызгивающія машины	Spraying Machines
Развертки и метчики	Reamers and Taps
Разгрузка судовъ	Lighterage
Раздвижные калибры, Счетныя линейки (штангециркуля)см. Инструменты, математическіе и пр.	Slide Rules (see 'Instruments, Mathematical, etc.')
Размагнители	Demagnetizers
Размельчительныя мельницы	Pulverizer Mills
Разрѣзаніе и сварка металловъ	Metal Cutting and Welding

Листъ фабрикантовъ по вышеуказаннымъ спеціальностямъ—см. соотвѣтствующіе англійскіе заголовки въ „Подробномъ указателѣ Анонсодателей" на стр. 2541—2611.

ПО РУССКИ.	ПО АНГЛІЙСКИ.	ПО РУССКИ.	ПО АНГЛІЙСКИ.
Рамы для вбиванія свай	Pile Driving Frames	„Росселинъ" (для газовыхъ и нефтяныхъ двигателей)	'Rosseline' (for Gas and Oil Engines)
Рамы и шкворни	Underframes and Bogies	Роликовые подшипники	Roller Bearings
Распредѣлительная установка	Switch Gear	Ротаціонные турбинные насосы „Ротурбо"	'Roturbo' Pumps
Распредѣлительныя доски для аккумуляторовъ	Battery Switchboards	Рудничные инструменты	Mining Tools
Распредѣлительныя доски для аккумуляторовъ	Storage Battery Switchboards	Рудничные кабели и приспособленія	Mining Cables and Accessories
Расширяющійся (прокатанный) металлъ	Expanded Metal	Рудничные сигнальные приборы (водонепроницаемые)	Mining Signals (Watertight)
Револьверные токарные станки	Turret Lathes	Рудничныя взрывчатыя вещества	Mining Explosives
Региструющіе аппараты (для воды)	Recorders (Water)	Рудничныя и подъемныя машины	Mining and Hauling Plant
Региструющіе счетчики времени	Time Recorders	Рудничныя и подъемныя цѣпи	Mining and Hauling Chains
Регуляторы (Гидравлическіе)	Governors (Hydraulic)	Ручные краны (см. Лифты и подъемныя машины	Hand Cranes (see 'Lifting & Hoisting Machinery')
Регуляторы (Паровыхъ двигателей)	Governors (Steam Engine)	**С**	
Регуляторы (питательной воды)	Regulators (Feed-water)	Самопишущіе измѣрительные инструменты	Recording Instruments
Редукціонные клапаны—см. Клапаны	Reducing Valves (see 'Valves')	Сваи изъ листовой стали	Steel Sheet Piling
Редукціонныя зубчатыя колеса	Reduction Gears	Сваи (изъ лист. стали)	Piles (Steel Sheet)
Резервуары (водонепроницаемые)	Reservoirs, Water-proofing of	Сваренные резервуары	Welded Tanks
Резервуары для масла	Oil Cabinets	Сваренныя стальныя трубы	Welded Steel Pipes
Резервуары и цистерны	Tanks and Cisterns	Сварка и разрѣзаніе металловъ	Welding and Cutting of Metals
Резиновыя, каучуковыя и битуменныя производства	India-rubber, Guttapercha, and Bitumen Manufacturers	Сварка процессомъ „Термитъ"	'Thermit' Welding
Рельсы и скрѣпленія	Rails and Fastenings	Сварочное и листовое желѣзо	Wrought and Sheet Ironwork
Ремни изъ верблюжьей шерсти марки „Камель" — единственные фабриканты этихъ ремней	'Camel' Hair, 'Camel' Brand Belting (Sole Makers of)	Сверла и рѣзцы для угля	Coal Drills and Cutters
Ремонтъ судовъ и машинъ	Ship and Engine Repairers	Сверлильные стержни изъ быстрорѣжущей и серебристой стали.	High-Speed and Silver Steel Drill Rods
Ресмусы	Surface Gauges		
Респираторы	Respirators		
Рессоры (пружины)	Springs		

Листъ фабрикантовъ по вышеуказаннымъ спеціальностямъ—см. соотвѣтствующіе англійскіе заголовки въ „Подробномъ указателѣ Анонсодателей" на стр. 2541—2611.

ПО РУССКИ.	ПО АНГЛІЙСКИ.	ПО РУССКИ.	ПО АНГЛІЙСКИ.
Сигналы — см. Сигналы для желѣзныхъ дорогъ	Signals (see 'Railway Signals')	Составъ для предохраненія блестящихъ частей машинъ	Bright-part Coatings
Сигнальные и предохранительные приборы для желѣзныхъ дорогъ	Railway Signals and Safety Appliances	Составы для кровлепокрытій	Roofing Compounds
Силикато-графитная краска „Зодіакъ"	'Foliac' Silica-Graphite Paint	Спеціалисты по устройству установокъ экономіи топлива	Coal Economy Specialists
„Сиронитъ" — средство, предохраняющее отъ ржавчины	'Syronite' Rust Preventive	Спеціальной стали, фабр.	Alloy Steel Manufacturers
Система „Snercold" для безопаснаго храненія, транспорта и измѣриванія воспламеняемыхъ жидкостей	'Snercold' System of Safety Storage, Transport and Measuring of Inflammable Liquids	Спиральныя сверла	Twist Drills
Системы электрической проводки (см. Системы прокладки проводовъ (гибкихъ)	Electric Wiring Systems (see 'Wiring Systems (Flexible)'	Сплавы	Alloys
Сита и грохоты	Sieves and Screens	Спускные жолобы для чая	Tea Shoots
Складныя ворота (двери)	Collapsible Gates	Средства для предохраненія дерева	Wood Preservatives
Слитки бронзовой отливки (томпака)	Gunmetal Ingots	Средство противъ котельнаго камня (для внутренняго употребленія)	Boiler Composition (for inside use)
Слюда	Mica	Стали для машинъ, фабр.	Machinery Steel Manufacturers
Смазки, смазочные матеріалы и пр.	Oils, Lubricating Compounds, etc.	Сталь (въ штыкахъ и квадратныхъ болванкахъ)	Steel (Blooms and Billets)
Смазочная передача для перемѣнныхъ скоростей	Variable Speed Oil Transmission Gears	Сталь высокаго напряженія	High Tensile Steels
Смазочные матеріалы для двигателей	Motor Lubricants	Сталь для авіаціонныхъ приборовъ	Aircraft Steels
Смазочные приборы	Lubricating Devices	Сталь для штамповъ	Die Steels
Смазочныя вещества для трактеровъ	Tractor Lubricants	Сталь Сименсъ-Мартэна	Siemens-Martin Steel
Смазочныя средства	Lubricating Compounds	Сталь съ закаленной поверхностью	Case-hardening Steels
Соединенія (замазки) „Ліонъ" и „Валькеритъ"	Joints ('Lion' and 'Walkerite')	Сталь съ закаленной поверхностью „Месмерикъ"	'Mesmeric' Case-hardening Steel
Соляная кислота	Hydrochloric Acid	Стальные брусья	Steel Rods
Сооруженія, остовы „Треллитъ" изъ легкой стали	Buildings, 'Trellit,' Light Steel Framed	Стальные листы	Steel Sheets
Сопла для доменныхъ печей	Blast Furnace Tuyeres.	Стальные рельсы и принадлежности	Steel Rails and Accessories
		Стальные ящики для храненія продуктовъ и стальные чуланы	Steel Storage Bins and Racks
		Стальныя изолирующія трубы и системы электрическихъ проводовъ	Steel Conduits and Wiring Systems

Листъ фабрикантовъ по вышеуказаннымъ спеціальностямъ—см. соотвѣтствующіе англійскіе заголовки въ „Подробномъ указателѣ Анонсодателей" на стр. 2541—2611.

ПО РУССКИ.	ПО АНГЛІЙСКИ.
Стальныя линейки	Steel Rules
Стальныя трубы — см. Трубы	Steel Tubes (see 'Tubes')
Стальныя трубы для электрической проводки	Steel Conduits for Electrical Wiring
Станины и телѣжки изъ прессованной стали	Pressed Steel Underframes and Bogies
Станки—см. Инструментные заводы	Lathes (see 'Tool Makers')
Станки для пробиванія дыръ, разрѣзанія и сгибанія	Punching, Shearing and Bending Machines
Станки для фрезованія зубчатыхъ колесъ	Gear Cutting Machines
Стартеры для моторовъ	Motor Starters
Стеклянныя вещи для надобностей освѣщенія и т. п.	Glassware for Ships' Lighting, etc.
Стеклянныя масленки	Lubricating Glasses
‚Стеллитъ' для инструментовъ	Stellite for Tools
Стойки (стальныя)	Stanchions (Steel)
Строгательныя, долбежныя, винторѣзныя и поперечно-строгательныя (шепингъ) машины	Planing, Slotting, Screwing, and Shaping Machines
Строители артезіанскихъ колодцевъ	Artesian Well Engineers
Строители и владѣльцы баржъ	Barge Builders and Owners
Строители плавучихъ доковъ	Floating Dock Builders
Строительныя(фасонныя) желѣзо и сталь	Structural Iron and Steel Work, etc.
Строительство изъ желѣзобетона	Reinforced Concrete Construction
Струганные стальные листы	Planished Steel Sheets
Ступени для лѣстницъ	Stair Treads
Судна для перевозки нефти (строители)	Oil-tank Ships, Builders of
Судовые нефтяные двигатели	Marine Oil Engines
Судовые перегрѣватели	Marine Superheaters
Судовые тахометры	Marine Speed Indicators
Судовыя паровыя машины, котлы и вспомогательныя машины	Marine Engines, Boilers and Auxiliary Machinery
Судовыя принадлежности	Shipping Tackle
Судостроители	Ship Builders
Сухіе доки	Graving Dock Owners
Сушильные аппараты	Drying Apparatus
Счетные приборы	Counting Instruments.
Счетныя машины (для рабочей платы)	Calculators (Wages)
Счетчики времени	Recorders (Time)
Счетчики (для воздуха)	Meters (Air)
Счетчики (для газа)	Meters (Gas)
Счетчики (для пара)	Meters (Steam)
Счетчики для рабочей платы	Wages Calculators
Счетчики углекислоты	CO_2 Recorders
Счетчики утечки воды	Waste Water Meters
Сцѣпленія (муфты)	Clutches
Сцѣпленія (муфты) упругія — см. Упругое сцѣпленіе	Couplings (Flexible) (see 'Flexible Couplings')
Сѣрная кислота	Sulphuric Acid
Сѣрнокислая мѣдь (мѣдный купоросъ)	Sulphate of Copper
Сѣтки испытанныя противъ бомбъ	Bomb-Proof Netting
Сѣченія (патент. пресованныя) латуни, бронзы и пр.	Sections (Patent Extruded), Brass, Bronze, etc.
Т	
Тахометры	Tachometers
Текстильныя машины	Textile Machinery
Телеграфная проволока—см. Проволока	Telegraph Wire (see 'Wire')

Листъ фабрикантовъ по вышеуказаннымъ спеціальностямъ—см. соотвѣтствующіе англійскіе заголовки въ ‚Подробномъ указателѣ Анонсодателей' на стр. 2541—2611.

ПО РУССКИ.	ПО АНГЛІЙСКИ.	ПО РУССКИ.	ПО АНГЛІЙСКИ.
Телеграфные изоляціонные болты и всякаго рода желѣзныя издѣлія для телеграфовъ и телефоновъ	Telegraph Insulator Bolts and all kinds of Ironwork for Telegraph and Telephone	Тормазы (динамометры)	Brakes (Dynamometers)
Телеграфные инженеры	Telegraph Engineers	Тормазы (желѣзнодорожные)	Brakes (Railway)
Телеграфные столбы (желѣзные)	Telegraph Poles (Iron)	Тормазы (электромеханическіе)	Brakes (Electro-Mechanical)
Телефонное устройство	Telephone Equipment	Тормазы съ колодками	Brake Blocks
Термометры	Thermometers	Точильные (шлифовальные) круги	Abrasive Wheels
Техническое обученіе—см. Колледжи и училища	Technical Training (see 'Schools and Colleges')	Точильные приборы для дрелей (сверлъ)	Drill Sharpeners
Тигельная сталь	Crucible Cast Steels	Точильные станки	Grinding Machinery
Тигельныя печи	Crucible Furnaces	Точильныя машины	Grinding Machinery
Тигли	Crucibles	Трамваевъ (стальные проволочные канаты для)	Tramways (Steel Wire Ropes for)
Типографы, литографы, чертежники и граверы	Printers, Lithographers, Draughtsmen and Engravers	Трамваи (канатные)	Tramways (Wire Rope)
Токарныя издѣлія (изъ любого металла)	Turned Work (any Metal)	Трамваи и желѣзныя дороги (электрическіе)—см. Электрическіе жел. дор. и трамваи	Tramways and Railways (Electrical) (see 'Electrical Railways and Tramways')
Толь и толевыя кровли	Felt and Felt Roofs	Транспортеры — см. также Приводные ремни	Conveyors (see also 'Belting')
Топки (плавильныя печи)	Furnaces	‚Треллитъ' остовы для сооруженій изъ легкой стали	'Trellit' Light Steel Framed Buildings
Топки (котельныя) см. Арматура къ машинамъ и котламъ	Furnaces (Boiler) (see 'Engine and Boiler Fittings')	Тросы (изъ оцинкованной стальной проволоки)	Hawsers (Galvanised Steel Wire)
Топки (печи),отапливаемыя жидкимъ топливомъ, газомъ и отходящими газами	Furnaces (Gas and Oil Heated and Industrial)	Трубоочистители	Tube Cleaners
Топки для судовыхъ и стаціонарныхъ котловъ	Furnaces for Marine and Land Boilers	Трубопроводы — см. Трубы	Pipes (see 'Tubes')
Топки съ автоматической нагрузкой — см. Механическіе кочегары	Stokers (Mechanical) (see 'Mechanical Stokers')	Трубы (гибкія, металлическія)	Tubing (Flexible Metallic)
Топки (печи) электрическія	Furnaces (Electric)	Трубы (гибкія) для пароваго отопленія	Steam Heating Tubes (Flexible)
Топливо-сберегательныя системы	Fuel Economy Systems	Трубы (пневматическія)	Tubes (Pneumatic)
		Трубы конденсатора (мѣдныя) — см. Мѣдныя трубы	Condenser Tubes (Copper) (see 'Copper Tubes')
		Трубы (кишки) для пожарныхъ командъ, фабрикъ и заводовъ и пр.	Hose for Fire Brigades, Mills, etc.
		Трубы и принадлежности	Tubes and Fittings

Листъ фабрикантовъ по вышеуказаннымъ спеціальностямъ—см. соотвѣтствующіе англійскіе заголовки въ ‚Подробномъ указателѣ Анонсодателей' на стр. 2541—2611.

ПО РУССКИ.	ПО АНГЛІЙСКИ.	ПО РУССКИ.	ПО АНГЛІЙСКИ.
Турбины (Паровыя) — см. Паровыя турбины	Turbines (Steam) (see 'Steam Turbines')	Установки для бетонныхъ работъ	Concrete Placing Plants
Турбины, водяныя колеса и водяные двигатели	Turbines, Water Wheels, and Water Motors	Установки для измельченія угля	Powdered Coal Plants
Турбины съ зубчатыми передачами	Geared Turbines	Установки для концентраціи амміака	Ammonia Concentration Plants
Турбинные насосы	Turbo Pumps	Установка для провариванія и отвлаживанія смолы	Tar Distillation and Dehydrating Plants
Турбинныя лопатки	Turbine Blading	Установки для сушенія крови	Blood Drying Plants
Турбинныя передачи —см. Турбины съ зубчатыми передачами	Turbine Gears (see 'Geared Turbines')	Установки нефтянаго отопленія	Oil Burning Installations
Турбо-Альтернаторы	Turbo Alternators	Устройство для вбиванія свай	Pile Driving Equipments
Турбо-генераторы — см. Динамо и двигатели	Turbo-Generators (see 'Dynamos and Motors')	Устройства освѣщенія на поѣздахъ	Train Lighting Plant
		Учебныя заведенія —см. Колледжи и училища	Educational Institutions (see 'Colleges and Schools')
У		Училища и колледжи	Schools and Colleges
Угольники (угольныя линейки)	Angles	**Ф**	
Угольныя топки — см. Топки, плавильныя печи	Coal Furnaces (see 'Furnaces')	Фасонная сталь	Sections (Steel)
Ударные штанцы (песты) съ барабаномъ и прессы	Drop Stamps and Presses	Фасонныя ковки и отливки—см. Отливки и фасонныя ковки	Forgings and Castings (see 'Castings and Forgings')
Указатели уровня воды	Water Level Indicators	‚Феродо' фрикціонная поверхность	'Ferodo' Friction Surfaces
Упорные подшипники	Thrust Bearings	Фибра (вулканизированная)	Fibre (Vulcanised)
Управленіе судами при помощи электричества	Electric Ship Propulsion	‚Фибрентъ' азбестоцементные волнистые и плоскіе листы	'Fibrent' Asbestos Cement Corrugated and Flat Sheets
Упругое сцѣпленіе	Flexible Couplings	Фильтры	Filtering Apparatus
Установка газовыхъ двигателей	Power Plant (Gas)	Фильтры для масла	Oil Filters
Установка котловъ	Settings (Boiler)	Фильтры для питанія котловъ — см. Питательная вода	Boiler Feed Filters (see 'Feed-water')
Установка для плавленія металловъ	Metal Melting Plants	Фосфорная бронза	Phosphor Bronze
Установка для производства проволочныхъ гвоздей	Wire-Nail Making Machinery	Фотографическіе аппараты	Photographic Apparatus
Установка для производства проволоки	Wire-Working Machinery	Фотостать	Photostat
Установка для производства пружинъ	Spring making Machinery	Фрезовальныя машины	Milling Machines
Установка реторть	Settings (Retort)		

Листъ фабрикантовъ по вышеуказаннымъ спеціальностямъ—см. соотвѣтствующіе англійскіе заголовки въ ‚Подробномъ указателѣ Анонсодателей' на стр. 2541—2611.

ПО РУССКИ.	ПО АНГЛІЙСКИ.
Фрикціонная поверхность муфты	Friction Surfaces
Фрикціонное сцѣпленіе	Friction Clutches
Футеровка муфтъ (сцѣпленій)	Clutch Linings
Футеровка (прокладка) тормазовъ и муфтъ	Brake and Clutch Linings
Х	
Химическіе и электро-химическіе аппараты	Chemical and Electro-Chemical Apparatus
Химическіе продукты	Chemicals
Хлопчатобумажные канаты	Cotton Driving Ropes
Хлопчатобумажные ремни	Cotton Belting
Холодильники	Cold Storage
Холодильныя машины	Refrigerating Machinery
Холодильныя трубы и змѣевики	Refrigerating Tubes and Coils
Хромо-ванадіевая сталь	Chrome-Vanadian Steels
Ц	
Цементные шиферы и доски	Cement Slates and Boards
Центробѣжные насосы—см. Насосы	Centrifugal Pumps (see 'Pumps')
Центровыя сверла	Core Drills
Цилиндры	Cylinders
Цинкъ (не покрывающійся накипью) — для аккумуляторовъ	Zincs (non-encrusting for Primary Batteries)
Цѣпи и крюки для крановъ	Crane Chains and Hooks
Цѣпи и цѣпная передача	Chains and Chain Driving
Цѣпи и цѣпные кабели	Chains and Chain Cables
Ч	
Часы для контроля времени и расходовъ	Costs and Time Recorders
Часы (электрическіе) — см. Электрическіе часы	Clocks (Electric) (see 'Electricks')
Червячные механизмы	Worm Gearing
Черная жесть	Black Plates
Чистители для котловъ (механическіе и электрическіе)	Boiler Cleaners (Mechanical and Electrical)
Чугунъ въ болванкахъ	Pig Iron
Чугунные резервуары	Cast Iron Tanks
Чугунныя трубы для воды и газа	Cast Iron Pipes for Water and Gas Purposes
Ш	
Шасси для автомобилей	Motor Chassis Frames
Шайбы	Washers
Шайбы (пластинки) для водомѣрныхъ стеколъ	Gauge Glass Washers
Шарашки, фрезера	Milling Cutters
Шарики и шариковые подшипники	Balls and Ball Bearings
Шестерни изъ сжатой бумаги	Compressed Paper Pinions
Шестерни изъ сырой кожи	Raw Hide Pinions
Шкафы для папокъ и карточной системы	Filing and Card Index Cabinets
Шкивы	Pulleys
Шкивы для пенькоковыхъ канатовъ—см. Шкивы для ремней и для пенькоковыхъ канатовъ	Rope Pulleys (see 'Belt and Rope Pulleys')

Листъ фабрикантовъ по вышеуказаннымъ спеціальностямъ—см. соотвѣтствующіе англійскіе заголовки въ „Подробномъ указателѣ Анонсодателей" на стр. 2541—2611.

ПО РУССКИ.	ПО АНГЛІЙСКИ.	ПО РУССКИ.	ПО АНГЛІЙСКИ.
Шкивы для ремней и для пеньковыхъ канатовъ	Belt and Rope Pulleys	Электрическіе инструменты и аппараты—см. Инструменты и аппараты (Электрическіе)	Electrical Instruments and Apparatus (see 'Instruments and Apparatus (Electrical)')
Шланги, кожаныя и холщевыя и пр.	Hose Pipes, Leather and Canvas Hose etc.	Электрическіе кабели (см. Кабели : Телеграфные, Телефонные, Освѣтительные и Подводные)	Electric Cables (see 'Cables: Telegraph, Telephone, Electric Light and Submarine')
Шлифовальные станки—см. Машины для точки	Grinders (see 'Grinding Machinery')		
Шлифовальные станки (электрическіе) съ центрами	Centre Grinders (Electric)	Электрическіе кабели (типа ‚C.T.S.') — см. Кабели типа ‚C.T.S.'	Electric Cables ('C.T.S.' Type) (see '"Cab Tyre Sheathed" Cables')
Шпунты для стѣнъ и потолковъ	Wall and Ceiling Sheets		
Штамповки	Stampings	Электрическіе кабели марки ‚Эндураль'	'Endural' Electric Cables
Щ		Электрическіе нагрѣвательные и кухонные аппараты	Electric Heating and Cooking Apparatus
Щетки для динамо	Dynamo Brushes	Электрическіе часы	Electric Clocks
Э		Электрическія воздуходувки	Electric Blowers
Эбонитъ	Ebonite		
Экономайзеры	Economisers	Электрическія дуговыя лампы, фонари—см. Приспособленія для электрическаго освѣщенія	Arc Lamps (see 'Electric Light Fittings')
Экскаваторы и транспортеры	Excavators and Transporters		
Элеваторы—см. Подъемныя машины	Elevators (see 'Lifting and Hoisting')		
Электрическая сварка	Electric Welding	Электрическія желѣзныя дороги и трамваи	Electric Railways and Tramways
Электрическіе аккумуляторы и батареи—см. Вторичные элементы	Electrical Storage Cells and Batteries (see 'Storage Cells')	Электрическія лампы съ калильной ниткой	Metal Filament Lamps
Электрическіе вентиляторы—см. Вентиляторы	Electric Fans (see 'Fans')	Электрическія подъемныя машины и краны	Electric Lifts and Cranes
Электрическіе двигатели — см. Динамо и Двигатели	Electric Motors (see 'Dynamos and Motors')	Электрическія топки	Electric Furnaces
		Электрическое дугообразное сварочное оборудованіе	Electric Quasi-Arc Welding Equipment

Листъ фабрикантовъ по вышеуказаннымъ спеціальностямъ—см. соотвѣтствующіе англійскіе заголовки въ ‚Подробномъ указателѣ Анонсодателей' на стр. 2541—2611.

ПО РУССКИ.	ПО АНГЛІЙСКИ.	ПО РУССКИ.	ПО АНГЛІЙСКИ.
Электрической стали, фабр.	Electric Steel Manufacturers	Эмаль, глазурь, краски и лаки	Enamels, Colours and Varnishes
Электролитъ (спеціальный)	Electrolyte (Special)	Я	
Электрохимики	Electro Chemists	Якоря	Anchors

Листъ фабрикантовъ по вышеуказаннымъ спеціальностямъ—см. соотвѣтствующіе англійскіе заголовки въ „Подробномъ указателѣ Анонсодателей" на стр. 2541—2611.

Printed in England at THE BALLANTYNE PRESS
SPOTTISWOODE, BALLANTYNE & CO. LTD.
Colchester, London & Eton

ON ADMIRALTY LIST.

Label: Lilac and Gold.

Label: Silver and Red.

'BIG J' BRAND
HIGH-SPEED TOOL STEEL and
'JACKSBERG' (Reg. No. 310,963-4599S),
Water Hardening HIGHER Speed Tool Steel
for Heavy and Quick Turning, Boring, Planing, Slotting and Shaping Tools, Drills, Milling Cutters, &c.

GRADE D.C.S.
Label: Pale Blue and Chocolate.

DIAMOND CAST STEEL.
For Turning Hard Chilled Rolls, Cutters, Turning, Planing and Finishing Tools, Drawing Dies, &c.

GRADE 1.
Label: Deep Yellow and Black.

SILVER CAST STEEL.
For Dies, Taps, Drills, Cutters, Turning, Boring, Planing and Slotting Tools, Chasers, Hobs, Reamers, Chisels, Mill Bills, Cups, Snaps, Punches, Milling Cutters, Shear Blades, &c.

GRADE 2.
Label: Light Yellow and Red.

BEST CAST STEEL.
For all kinds of Mechanical Engineering, Boilermaking, Shipbuilding, Railway and Mining purposes.

GRADE 3
Label: Deep Green & White.

WARRANTED CAST STEEL.
For Miners' Drills, Quarrying, Stone Planing and Smiths Tools, Coal Cutters, &c.

GRADE 4.
Label: Deep Red and White.

CAST STEEL.
For Miner's Drills, Jumpers, Wedges, Spindles, Masons' Tools, Hammers, Picks, Smiths' Tools, Drifts, &c.

'JACKMANIZED' STEEL.
(Registered Nos. 288, 733-4262 S.)

GRADE J.Z.
Label: Red, White and Blue.

For Dredger Bucket Pins, Bushes, Tumbler Shafts, Cross-head, Gudgeon, Crank, Sheave, Gallows, Bollard and Cam Roller Pins, Conveyor Bolts and Spindles, Disintegrator and Slide Bars, &c.
(This material is a substitute for Case-hardened Iron and Steel.)

SHEAR, BLISTER, WELDING, SPRING, TENACIOUS, VANADIUM, NICKEL-CHROME, BESSEMER, AND SIEMENS STEEL.

NOTE.—When ordering Steel DO NOT OMIT TO SPECIFY THE CLASS OF TOOL FOR WHICH IT IS REQUIRED.
In Heating Steel for the purpose of Forging and Hardening, DO NOT FORGET that it appears hotter than it really is on a dull day, or in a dark place, and much cooler on a bright day or in a very light place.

MANUFACTURED BY

JOSEPH JACKMAN & CO. LTD.,

Persberg Steel, Tool and File Works,

ATTERCLIFFE COMMON, SHEFFIELD.

THOMAS ANDREWS & Co. Ltd.

ROYDS WORKS & HARDENITE STEEL WORKS, SHEFFIELD

"MONARCH"

HIGH-SPEED TOOL STEEL.

No. 1 MONARCH
For Drills, Milling Cutters, &c.

SUPER-MONARCH
For all Lathe and Planing Tools.

SUPER-SUPER MONARCH
For Special Hard Materials.

"HARDENITE"

BEST CAST TOOL STEEL

For
Chisels, Setts, Smiths' Tools,
Punches, Snaps, Taps, Dies,
and all
General Engineering Tools.

Ask for our list of Alloy Steels, giving analyses, heat-treatment and tests

Export Department: **THE HARDENITE STEEL CO. LTD.**

HARDENITE STEEL WORKS & ROYDS WORKS, SHEFFIELD

London Office: **Cannon Street House, 110 Cannon Street, E.C. 4**

WELDLESS STEEL TUBES

For

Water-Tube Boilers,
Superheaters,
Shafting,
Hydraulic Work,
Boring Rods, &c.

TUBES LIMITED,

BIRMINGHAM.

Telegrams: 'Cylinders, Birmingham.'

DROP FORGINGS

IN

Mild Steels.
Carbon ,,
Nickel ,,
Nickel Chrome Steels.
Chrome Vanadium ,,
Chromium ,,
Stainless ,,

We place at your disposal years of experience in making Drop Forgings. We also make a speciality of the Heat Treatments of all Steel and Alloy Forgings. Send us your enquiries.

THE SMETHWICK STAMPING COMPANY, LIMITED.

Bridge Street, SMETHWICK.

THE ATLAS STEEL FOUNDRY AND ENGINEERING CO., LTD.

ATLAS STEEL WORKS, ARMADALE,
WEST LOTHIAN, SCOTLAND.

Telegrams: (two words) 'Atlas, Armadale, West Lothian.' | Code ABC (5th Edition). | Telephone: No. 11 Bathgate.

On Admiralty, War Office, Lloyds, British Corporation, British Railways, and Crown Agents' Lists.

Steel Founders, Machinists, and General Engineers.

MAKERS OF

STEEL CASTINGS

BY THE SIEMENS-MARTIN OPEN-HEARTH PROCESS.

Producing Units up to 12 tons for Shipbuilders, Engineers, and Steel Works Plant.

Castings for Marine and Land Steam Turbines, Valves, Bends and Specials, Gear Wheels and Blanks Machine Moulded and from full Patterns.

PATTERN MAKING TO THE TRADE.

London Office:

BROAD ST. HOUSE, NEW BROAD STREET, E.C.2.

Agencies:

Cardiff - - - -	**28 Charles Street**
Manchester - - -	**15 Piccadilly**

ESTABLISHED 1825

HORTON & SON LTD

Alma and New Alma Works Darlaston

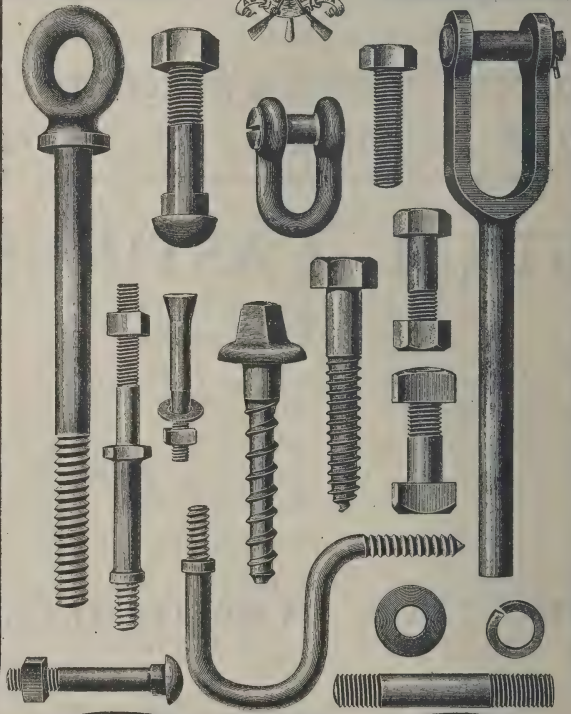
Telegrams
HORTON
DARLASTON
HORTON
LONDON

Telephones
DARLASTON 1 & 59
1620 CITY
LONDON

Manufacturers of BOLTS & NUTS in IRON & STEEL & NAVAL BRASS DROP FORGINGS

AUSTRALIAN REPRESENTATIVE
BOX 866
G.P.O
SYDNEY

REGISTERED TRADE MARK



EARLE, BOURNE & CO. LTD
SEAMLESS
BRASS & COPPER TUBES
CONTRACTORS TO THE ADMIRALTY AND INDIAN OFFICE
BIRMINGHAM ROLLING & TUBE MILLS

HENRY BERRY & CO. LTD.
LEEDS

London Office: 38 VICTORIA ST., WESTMINSTER, S.W.

SPECIALITY:

HYDRAULIC MACHINERY

OF ALL TYPES AND SIZES FOR

Riveting	Joggling
Punching	Wheel Bossing
Shearing	Tank Makers
Pressing	Boiler Makers
Lifting	Bridge Builders
Bending	Ship Builders
Forging	Wagon Builders
Flanging	Steel Works
Stamping	Docks, etc., etc.
Straightening	

REGISTERED TRADE MARK

THE LEEDS ENGINEERING AND HYDRAULIC CO. Ltd.,

RODLEY, LEEDS.

Contractors to British and Foreign Governments.

Telegrams: 'PUMPS, RODLEY.' *Telephone*: 160 STANNINGLEY.
Code: A B C, 5th Edition. MARCONI INTERNATIONAL.



Makers of **HYDRAULIC MACHINERY**

Pumps, Accumulators, Intensifiers, Presses, Benders, Riveters, Valves and Accessories.

CRANES, LIFTS, HOISTS, etc., etc.

Send us your Enquiries.

Contractors to H.M. Navy, also H.M. War Department, Home Office, and Indian State Railway and other British Railway Companies.

KAYE'S PATENT SERRATED SEAMLESS STEEL OIL CANS,

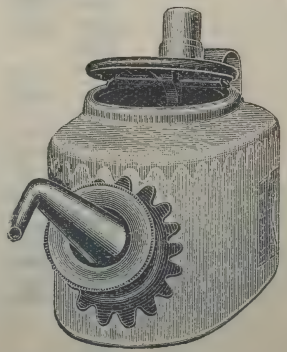
With Patent Seamless Spouts and Patent Feed-Holes.

SAMPLE POST FREE, 4/- EACH.



NONE ARE GENUINE THAT DO NOT BEAR THE K LABEL.

Also in Copper or Brass for Electrical purposes.



Telegrams:
'Wedge, Leeds.'
'Lockencan, Westcent, London.'

Telephone:
London, Holborn, 1847.
Leeds, 21855.

SOLE MAKERS—

JOSEPH KAYE & SONS, Ltd., 93 High Holborn, LONDON, W.C. 1,

AND OILCAN WORKS, LEEDS.

THOMAS PIGGOTT & Co Ld.

ATLAS WORKS.
SPRING HILL. BIRMINGHAM.

CORRUGATED FURNACES TO ANY SURVEY.
MORISON. FOX & DEIGHTON SECTIONS.

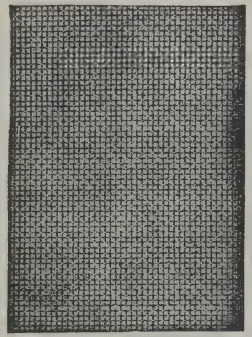
BY PRODUCT PLANT FOR
BENZOL - TAR - OILS
SULPHATE OF AMMONIA.
BENZOL STILLS
TAR STILLS

PRESSED STEEL TANKS AND CONDENSERS. RIVETTED PIPES.

TANKS FOR OIL STORAGE. GAS HOLDERS. WELDED PIPES

T P & Co Ld ATLAS WORKS BIRMINGHAM

COKE CARS
COKE QUENCHERS
COKE OVEN DOORS
CAST IRON PREHEATERS
HEAT EXCHANGERS. DEPHLEGMATORS





ESTABLISHED 1799.


N: GREENING & SONS LIMITED


Manufacturers

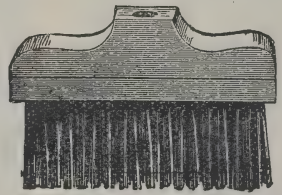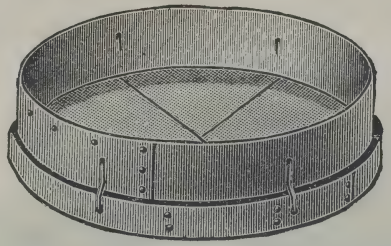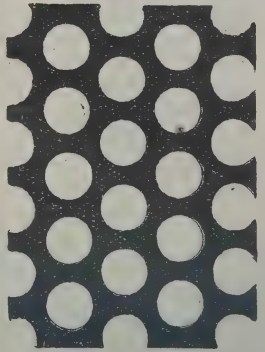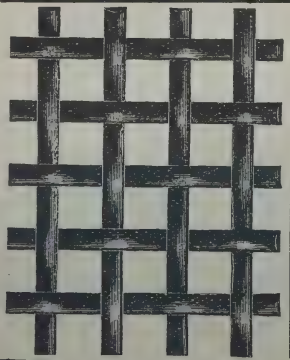WARRINGTON & LONDON.









WOVEN WIRE. WIRE BRUSHES.
WIRE GAUZE. RIDDLES & SIEVES.
WIRE WORK. PERFORATED METALS.

LONDON WAREHOUSE:

16 FINSBURY STREET, E.C.2.

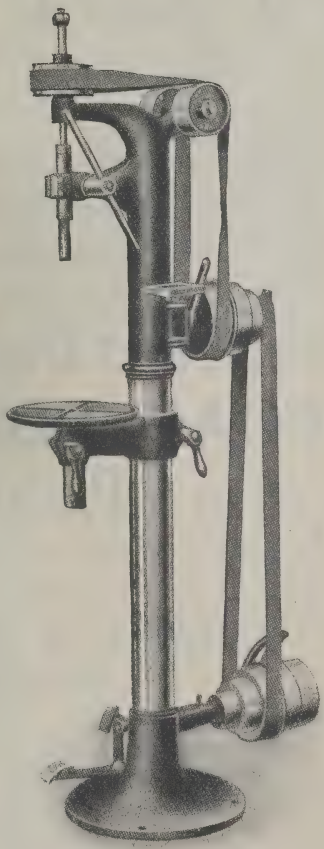
'GOVERNOR' SENSITIVE DRILLING MACHINES

BENCH AND PILLAR.

FIVE DIFFERENT SIZES OR PATTERNS.

HIGH-CLASS BRITISH WORKMANSHIP AND DESIGN, NOT ROUGH HALF FINISHED MACHINES.

MAY WE SEND YOU A LIST?



JOHN SHAW & SONS

(Wolverhampton) Ltd.,

WOLVERHAMPTON.

By the adoption of our Systems for the

UTILISATION OF WASTE HEAT

Savings have been effected from 15% to 50%

Reports and Estimates on application

Save labour by means of our

PNEUMATIC COAL CONVEYING PLANT

For Description and Illustration of same see page 824 of this issue

---

ASHWELL & NESBIT LTD.

ENGINEERS

12 GT. JAMES STREET,
BEDFORD ROW,
LONDON, W.C. 1

Works:
BARKBY LANE,
LEICESTER

Also at

BIRMINGHAM · GLASGOW · MANCHESTER & LIVERPOOL

PALATINE ENGINEERING CO., LIMITED.

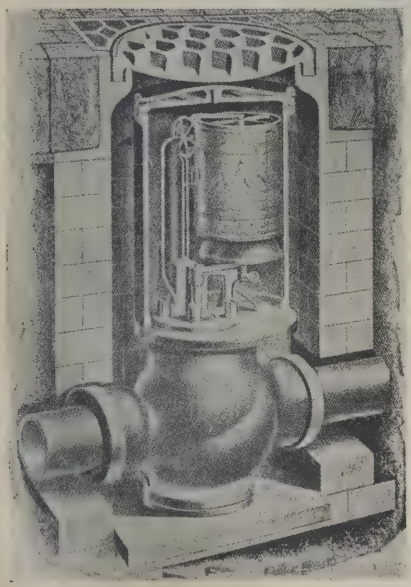
Hawthorne Road,
BOOTLE,
Nr. LIVERPOOL

—

THIS LEAK

and many larger





have been discovered by

THIS METER

We shall be pleased to quote you for installing a Waste-Detecting System, or any kind of Water Meter or Water Measuring Apparatus.

Deacon Waste-Detecting, Meters. Weir Level Recorders. Electric Water-Level Recorders. Lord Kelvin's Integrating Meters, Kelvin Taps, &c.

THE LIFT & HOIST CO. LTD.

——place their 55 years' experience as——

SPECIALISTS

in the manufacture of . .

HAND POWER

- Dinner Lifts
- Service Lifts
- Passenger Lifts
- Warehouse Lifts
- Invalid Lifts
- Mortuary Lifts
- Cellar Hoists
- Luggage Lifts
- Motor Car Lifts
- Cranes

Electric and Hydraulic Lifts
Revolving Shutters
Collapsible Gates
Iron and Steel Spiral Staircases

at your disposal. The services of our representatives are at your command to advise and talk matters over with you. You can send us your enquiries with the utmost confidence in the knowledge that they will receive the attention of an expert.

Write to DEPT. E for a copy of our Illustrated Catalogue.


PRINCE STREET, DEPTFORD, S.E.8

'Phone: New Cross 49 (2 lines). Telegrams: 'Endless, London.'

MITCHELL'S
EMERY WHEEL CO.

ESTABLISHED 1862.

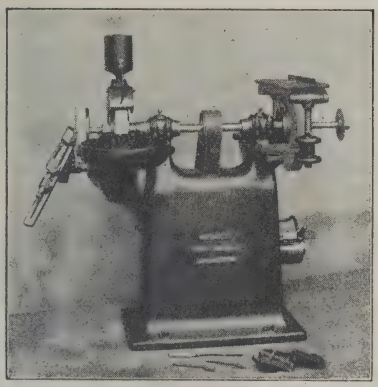Telegrams
'Diameter'
Manchester.



Telephone:
3575 Central.

Combination Grinding Machine.

HIGH-CLASS
GRINDING WHEELS
in the
Most Efficient Abrasives.

UP-TO-DATE
GRINDING MACHINES
For all classes of work.

Star Works, Openshaw,
MANCHESTER.

The Voice of a Great Industry

To-day, every man engaged in an industry and who desires to maintain or improve his position in that industry must keep himself fully up to date in regard to its latest phases.

The aim of the Electrical Review is to provide that information in the fullest degree and at the same time to assist the expansion and development of the British Electrical Industry in every possible way.

Manufacturers are reminded that quite apart from the immense circulation of the Electrical Review in the home market, it is also to be found in every civilized country where electrical development is in progress or may be expected.

An advertisement in its pages will secure circulation ALL OVER THE WORLD and there is literally no other method of publicity which is one half so effective for so small a cost.

The Electrical Review has devoted itself for nearly 50 years to the interests of the Electrical Industry and it has no other interests outside that industry. Not without reason, therefore, has it been called 'The Voice of the Industry' and you may rest assured that whatever position you may occcupy in the electrical world you will secure the latest and most authoritative information in regard to all that is taking place, from the pages of

The 'Electrical Review'

PRICE SIXPENCE WEEKLY

From any Newsagent in town or country.

YEARLY SUBSCRIPTION RATES

United Kingdom	£1 14 8	per annum
Canada	£1 12 6	do.
Colonial and Foreign	£2 1 6	do.

Postage Free. *Scale of Advertisement Charges on Application.*

THE ELECTRICAL REVIEW, LIMITED.

4 LUDGATE HILL - - LONDON, E.C. 4.

GRIFFIN'S

CALORIMETERS FOR FUEL TESTING.

The 'BOYS' Gas Calorimeter, officially prescribed by the Metropolitan Gas Referees.

Calorimeters for testing Coals, Oils, &c.

THERMO-ELECTRIC PYROMETERS

for temperatures up to 1,600° C. Suitable for temperatures of flue gases.

ELECTRIC FURNACES

for experimental work;
for estimation of carbon in steel.

GYROSCOPES.

SLIDE RULES AND CURVE PAPER.

CHEMICAL APPARATUS AND CHEMICALS. THERMOMETERS.

SCIENTIFIC BOOKS.

JOHN J. GRIFFIN & SONS, LIMITED,

KEMBLE STREET,

KINGSWAY, LONDON, W.C. 2.



Makers of

ACETYLENE LAMPS

For Mines, Quarries, etc.



SAFETY LAMPS giving more light than Electric Lamps. Spare parts always in stock.

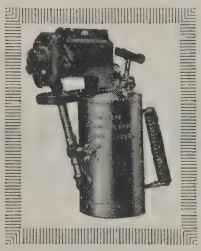
Actual Makers of

CLEAR CRYSTAL GLASSWARE

For Railways, Engineers and Shipbuilders.

Iron & Brass Castings. Brass Stampings, and Brass & Steel Machined Parts. Greasers for Pit Tubs or Corves. Cement for repairing and re-building furnaces. Brazing Lamps for Shipbuilders' and Engineers' Work.


ACKROYD & BEST, LTD.



MORLEY, LEEDS.

Telephones:
86 & 104 Morley.

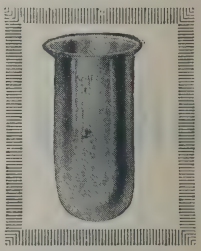Telegraphic Address:
'Lamps, Morley, Leeds.'



A B C

Railway Rates Books

Showing the

Actual Rates

On all Classes of Goods from the following centres:

London 84s., Liverpool 80s., Glasgow 80s., Belfast 42s., Manchester 80s., Leeds 40s., Birmingham 70s., West Bromwich 40s.; Middlesbro', Stockton and West Hartlepool 42s.; Hull, Goole, and Grimsby 40s.; Bristol 30s.; Swansea and District 42s.; Cardiff, Barry and Newport 42s.; Newcastle-on-Tyne, South Shields, and Sunderland 42s.; Walsall 21s.; Wolverhampton and district 42s.; Nottingham 42s.; Sheffield 40s.; South Staffordshire and East Worcestershire, &c., 42s.; Bradford 42s.; Leicester 42s. To Stations and Ports in United Kingdom and Continental Ports.

New Books for London, Birmingham, Manchester and Liverpool in the press. Those for other towns and at enhanced prices ready later.

WAGES TABLES

At 44, 45, 47, 48,* 49½,* 50, 52,* 52½,* 53,* 54,* 55½, 56 and 57 hours a week by **Sixpenny Advances** to 50s., 1s. 6d. each; ditto to 70s. and for a double week, 9s. each. **HOURLY** Tables, each farthing to 1s. 6d., 10s. 6d.; by ⅛th, ⅑th and ⅒th of a penny, 10s. 6d each net. Also Books with higher rates.

* Books to £5 a week, 13s. net.

CALCULATORS of all kinds.

JOHN GIBSON, 63 Coleman Street, London, E.C. 2.
Tel. No. 5990 London Wall.

Sole Agent for the Publications of - - McCORQUODALE & Co., Ltd.

THESE BOOKS MAY BE HAD OF ALL BOOKSELLERS.

ENGINEERING TRAINING

Imperial College of Science and Technology.

VISITOR—H.M. THE KING.

CITY & GUILDS (ENGINEERING) COLLEGE,

Exhibition Road, South Kensington, London, S.W. 7.

The City and Guilds (Engineering) College, the Engineering Section of the Imperial College, provides complete Courses of Instruction leading up to, and including, the highest specialised instruction with the object of fitting Students to take leading positions in the industrial world as Civil, Mechanical or Electrical Engineers, Scientific Advisers, Investigators or Experts in the Engineering industries, and for those already qualified who desire to take up more advanced courses of training and research in connection with the branches of Engineering in which they are specially interested.

The Departments of the College are as follow :—

ENGINEERING, MECHANICAL, AND MOTIVE POWER INCLUDING AERONAUTICAL—

Under the direction of Prof. Dalby, F.R.S., M.Inst.C.E.

ENGINEERING, CIVIL, AND SURVEYING—

Under the direction of Prof. Dixon, M.Inst.C.E.

ENGINEERING, ELECTRICAL—

Under the direction of Prof. Mather, F.R.S., M.I.E.E.

MECHANICS AND MATHEMATICS—

Under the direction of Prof. Forsyth, F.R.S.

The following Diplomas are awarded to Students who satisfactorily complete a full Course of from two to four years :—

The Associateship of the City and Guilds of London Institute (A.C.G.I.).

For admission to the Courses qualifying for this Diploma candidates are required to pass the Entrance or Matriculation Examination of the College held in September (application to be made not later than the first Monday) ; or to have passed the Matriculation of the University of London in certain subjects.

The Diploma of the Imperial College (D.I.C.).

(For advanced specialised or fourth-year work.)

Further information and the Prospectus of the College may be obtained on application to the Registrar.

LONDON

ENGINEERING TRAINING

UNIVERSITY OF LONDON, KING'S COLLEGE.

FACULTY OF ENGINEERING.

Complete COURSES of STUDY, extending over either three or four years, are arranged in

CIVIL, MECHANICAL, and ELECTRICAL ENGINEERING

for the Engineering Degrees of the University of London and for the Diploma and Certificate of the College.

The four years' course provides, in addition to the academic training, opportunity for practical training in 'Works.'

HEADS OF DEPARTMENTS.

Professor G. COOK, D.Sc., A.M.Inst.C.E., A.M.I.Mech.E., Mechanical Engineering.
Professor A. H. JAMESON, M.Sc., M.Inst.C.E., Civil Engineering.
Professor E. WILSON, M.Inst.C.E., M.I.E.E. (*Dean*), Electrical Engineering.
Professor S. A. F. WHITE, M.A.
Professor J. B. Dale, M.A. } Mathematics.
Professor SAMUEL SMILES, O.B.E., D.Sc., F.I.C.,
Prof. A. J. ALLMAND, M.C., D.Sc., F.I.C. [F.R.S.] } Chemistry.
Professor O. W. RICHARDSON, D.Sc., F.R.S., Physics.
Professor W. T. GORDON, D.Sc., F.R.S.E., Geology.

Considerable extensions have been made to the Engineering Department. These include large additional drawing-office, lecture room and laboratory for Strength of Materials and Hydraulics for the Civil and Mechanical Departments, and Research Rooms, including Wireless Telegraphy, for the Electrical Engineering Department. Large additions have been made to the equipment of the Laboratories in the three Departments for purposes of teaching and research.

For full information apply to the Secretary, King's College, Strand, W.C. 2.

LONDON

[5 H

ENGINEERING TRAINING

The Crystal Palace School of Practical Engineering

Founded 1872.

Mechanical, Civil, Colonial and other Divisions.

Principal—
J. W. WILSON,
M.Inst.C.E., M.Inst.Mech.E., F.S.E.

Vice-Principal—
MAURICE WILSON
A.M.Inst.C.E., F.S.E.

ASSISTED BY A STAFF OF LECTURERS AND INSTRUCTORS.

The School may be Inspected on application to the Principal, from whom all further information may be obtained.

This School was established for the purpose of providing Students of any branch of Engineering with thorough practical and theoretical instruction in the rudiments of the profession and in the manipulation of materials. The institution has since been largely extended.

The School is approved by the Council of the Institution of Civil Engineers, and Students who pass through its complete course and otherwise comply with the current regulations of the Institution are eligible for their Examinations; they are also eligible for election as Graduates of the Institution of Mechanical Engineers, Associates of the Society of Engineers, Students of the Institution of Electrical Engineers, etc.

The usual age for admission to the School is 16 to 17 years, but there is no limit as to the age of Students. They may commence work at the beginning of any term.

Mechanical Engineering (First Year).

The Students spend one Term each in the Drawing Office, the Pattern Shop and Foundry, and the Fitting and Smith's Shop, besides attending Lectures on 'Steam and the Steam Engine,' 'Railways: their Construction and Appliances,' 'Materials and their Manufacture,' etc.

Civil Engineering (Second Year).

The first Term in this section is devoted to Practical Preparation by actual Levelling, Surveying, Theodolite work, etc., of Plans for a complete Public Work, and the necessary Plans, Estimates, etc., for Parliament.

The second Term is devoted to the Preparation of Working Plans, Calculations, Estimates, etc., of the said Work for the Contractors.

The third Term is utilised for Original Designing, Theory of Structures, and other necessary Calculations, Specifications, etc., for Bridge, Re-inforced Concrete and other Work, and reporting upon existing Engineering Works.

Debates are held to afford Students an opportunity of gaining confidence in public professional speaking.

At the meetings of the 'Crystal Palace Engineering Society' (affiliated to the Society of Engineers) Students read and discuss papers on Professional subjects. Professional visits to Engineering Works are made from time to time.

Of the Students who have passed through the School, many have obtained appointments as Chief Engineers at home and abroad; and over 1,200 are employed in Engineering Work in various Countries in the World.

LONDON

ENGINEERING TRAINING

University of Birmingham.

Chancellor—THE RT. HON. LORD ROBERT CECIL, K.C., M.P.
Vice-Chancellor—SIR GILBERT BARLING, C.B., F.R.C.S.
Principal—C. GRANT ROBERTSON, M.A., C.V.O.
Vice-Principal—SIR WILLIAM ASHLEY, M.A., M.Com.
Secretary—GEO. H. MORLEY, M.Com.

Departments of Civil, Mechanical & Electrical Engineering.

The FULL COURSES EXTEND OVER FOUR YEARS, and students who enter after Matriculation and who pass successfully the Examinations at the end of each year WILL BE ENTITLED to the DEGREE of BACHELOR OF SCIENCE in the branch of Engineering to which they devote themselves.

The Technical Engineering Classes include:—

Lectures on the Strength of Materials, Theory of Steam, Gas, and other Heat Engines, Hydraulics, Machine Design, Strength of Structures, Distribution of Power.

Drawing: Design of Tools, Prime Motors, Dynamos, and other forms of Machinery.

Courses in Civil Engineering, including Constructional Work in Masonry and Steel, Railway Work, Dams, Bridges, and Water Engineering.

Field Work: Practical Surveying in the Field throughout the Summer Term.

Engineering Laboratory: Determination of the Strength of Materials, including Compressive, Bending, Tensile, and Torsion Tests, Experimental Study of the Steam Engine and Boiler, Frictional Efficiency Tests, the Flow of Water over Weirs and through Orifices, etc.

Lectures and Demonstrations on all branches of Electrical Engineering.

Electrical Laboratory: Testing of Continuous and Alternate Current Machinery: Electrical Instruments, Meters, Lamps and Batteries: Insulation and Magnetic Testing Work.

The Courses also include Instruction in Mathematics, Physics, Chemistry, Geology, and Metallurgy.

For detailed Syllabus, with full particulars of University Regulations, Lecture and Laboratory Courses, Fees, Scholarships, etc., apply to the Secretary.

BIRMINGHAM

5 H 2

ENGINEERING TRAINING

DEPARTMENT OF AGRICULTURE & TECHNICAL INSTRUCTION FOR IRELAND.

Royal College of Science

FOR IRELAND, DUBLIN.

FACULTY OF ENGINEERING.

The course for the Associateship in Engineering extends for a period of four years, or, in special circumstances, three years.

The course includes all subjects necessary for a thorough education in the general scientific principles common to all branches of Engineering, but special emphasis is laid on Mechanical and Electrical work.

The College is equipped with workshops and laboratories containing a most comprehensive and modern installation of machines, engines, etc.

The fees for the four years' course total £75.

Several Scholarships, entitling the holder to a maintenance allowance for four years with free tuition, are attached to the College.

Special facilities and Studentships are available for qualified students desirous of carrying on research.

Full particulars may be had on application to the Registrar, Royal College of Science, Upper Merrion Street, Dublin.

DUBLIN

ENGINEERING TRAINING

Heriot-Watt College,

EDINBURGH.

Governors—THE GOVERNORS OF GEORGE HERIOT'S TRUST.

Chairman—THE RIGHT HON. THE LORD PROVOST.

Convener of Heriot-Watt College Committee—JUDGE ALEXANDER BARRIE, J.P.

Principal—A. P. LAURIE, M.A., D.Sc., F.R.S.E., sometime Fellow of King's College, Cambridge.

DAY TECHNICAL COLLEGE

COURSES OF INSTRUCTION IN

MECHANICAL ENGINEERING, ELECTRICAL ENGINEERING, APPLIED CHEMISTRY, MINING.

The Heriot-Watt College offers complete Courses of Instruction in these subjects, and a Diploma or Certificate at the end of the Course.

The complete Diploma Courses in Mechanical Engineering and Electrical Engineering last over three years, and in Applied and Analytical Chemistry over four years.

The Diploma Course in Mining (Coal, Metalliferous and Oil) lasts over three years.

Many of the Classes are recognised by the **UNIVERSITY OF EDINBURGH** as qualifying for the Degree of B.Sc. in Pure Science and Engineering, so that a student can qualify for these Degrees by taking the necessary additional Courses at the University and passing the University Examinations.

The Lectures and Laboratory Work in Elementary Chemistry, running through the Winter and the Summer Session, qualify for the first B.Sc. in Chemistry, and the further Chemistry instruction for the B.Sc. can be had at the Heriot-Watt College.

The College is also recognised by the **INSTITUTE OF CHEMISTRY**, and complete Courses of Instruction are provided for students who wish to prepare for the examination of the Institute. In the Chemistry Department there are also Courses in Bio-Chemistry, and in Pharmaceutics for the Professional Examinations of the Pharmaceutical Society.

Special arrangements have been made for **POST-GRADUATE COURSES** in **ELECTRICAL ENGINEERING, PRIME MOVERS,** and **APPLIED CHEMISTRY.** Students wishing to take these post-graduate Courses must either hold the B.Sc. of some University or the Diploma of the Heriot-Watt College or of the Royal Technical College, Glasgow.

There is also a Course extending over two Winter Sessions for Clerks of Works, Builders' Clerks, and Surveyors' Apprentices.

EVENING CLASSES.—Advanced Classes in various Departments of Pure and Applied Science, Commerce, and Languages, which will prove of use to students who have already taken a Degree or who are studying for a Degree, are held in the College in the Evening.

FEES.—Day Classes. Composition Fees for Diploma Courses, £23 to £31 10*s.* per annum. **Evening Classes,** 7*s.* 6*d.* to £3 3*s.*

All particulars regarding the College Classes, both Day and Evening, can be obtained from the PRINCIPAL at the College.

For the Scheme for Degrees in Civil, Electrical, Mechanical, and Mining Engineering, arranged with the University of Edinburgh, see University Calendar, or the Calendar of Heriot-Watt College.

EDINBURGH

ENGINEERING TRAINING



The Royal Technical College, GLASGOW.

The College is affiliated to the University of Glasgow, and the Degrees of the University in Engineering and Applied Chemistry are open to its students.

The Diploma of the College is granted in the following Departments :—

CIVIL ENGINEERING.
Professor GEORGE MONCUR, B.Sc., M.Inst.C.E.

MECHANICAL ENGINEERING.
Professor of Mechanics, JOHN G. LONGBOTTOM, A.R.C.S.
Professor of Mechanical Engineering, A. L. MELLANBY, D.Sc.

ELECTRICAL ENGINEERING.
Professor MAGNUS MACLEAN, M.A., D.Sc., LL.D., F.R.S.E.

MINING ENGINEERING.
Professor DANIEL BURNS, M.Inst.M.E.

NAVAL ARCHITECTURE.
Lecturer, Mr. WM. M. GRAY, B.Sc., M.I.N.A.

CHEMISTRY.
Director of the School of Chemistry, and "Young" Professor of Technical Chemistry—THOMAS GRAY, D.Sc., Ph.D., F.I.C.
Professor of Organic Chemistry—FORSYTH J. WILSON, D.Sc., Ph.D., F.I.C.
Professor of Inorganic and Analytical Chemistry—ROBERT M. CAVEN, D.Sc., F.I.C.

METALLURGY.
Professor JOHN H. ANDREW, D.Sc.

BUILDING.
Professor CHARLES GOURLAY, B.Sc., A.R.I.B.A.

TEXTILE MANUFACTURE.
Lecturer, Mr. WM. WATSON.

DYEING.
Lecturer, Mr. ALEC B. STEVEN, B.Sc., F.I.C.

SUGAR MANUFACTURE.
Lecturer, Mr. T. H. P. HERIOT, F.I.C., F.C.S.

A Course for a Joint Diploma in Architecture has been arranged in conjunction with the Glasgow School of Art.

The Diploma Course extends over either three or four sessions, and the fee per session is Twenty-five Guineas.

Full Courses of Instruction are also provided in the Schools of Navigation and Wireless Telegraphy.

Prospectuses (free) will be sent on application to the Director.

GLASGOW

ENGINEERING TRAINING

THE

University of Leeds.

Three or Four Year Courses in

Civil Engineering.
Mechanical Engineering.
Electrical Engineering.
Gas and Fuel Engineering.
Mining.
Metallurgy.
Applied Chemistry.
Geology.

Prospectuses may be obtained (without charge) from

The Secretary,
The University,
Leeds.

LEEDS

ENGINEERING TRAINING

The University of Liverpool

FACULTY OF ENGINEERING.

DEAN:

Professor T. B. ABELL, O.B.E., M.Eng., R.C.N.C. RET., M.INST. N.A.

PROFESSORS AND LECTURERS.

Engineering:
Harrison Professor—W. H. WATKINSON, M.Eng., M.Inst.C.E., M.I.Mech.E., M.I.E.E.
Robert Rankin Professor of Engineering (Thermodynamics of Heat Engines)—G. E. SCHOLES, M.B.E., M.Sc., A.M.I.A.E.
John William Hughes Professor of Engineering (Strength of Materials)—W. MASON, D.Sc., Victoria, M.Inst.C.E., A.M.I.Mech.E.

Electrical Engineering:
David Jardine Professor—E. W. MARCHANT, D.Sc., M.I.E.E.
Lecturer in Electrical Machinery—F. J. TEAGO, M.Sc., M.I.E.E.

Civil Engineering: Professor S. W. PERROTT, M.A.I., M.Inst.C.E.

Naval Architecture:
Professor T. B. ABELL, O.B.E., M.Eng., R.C.N.C. ret., M.Inst.N.A.

Engineering Design and Drawing:
Professor J. WEMYSS ANDERSON, M.Eng., M.Inst.C.E., M.I.Mech.E.

Refrigeration:
John William Hughes Professor of Engineering—J. WEMYSS ANDERSON, M.Eng., M.Inst.C.E., M.I.Mech.E.

Metallurgy:
Henry Bell Wortley Professor—C. O. BANNISTER, Assoc. R.S.M., F.I.C.

Marine Engineering: Professor ABELL. Professor WATKINSON. Professor WEMYSS ANDERSON.

Mathematics:
Professor F. S. CAREY, M.A. Professor J. PROUDMAN, M.A., D.Sc.

Physics:
Lyon Jones Professor—L. R. WILBERFORCE, M.A.
Senior Lecturer—J. RICE, M.A.

Chemistry: Grant Professor of Inorganic Chemistry—E. C. C. BALY, C.B.E., M.Sc., F.R.S. Senior Lecturer in Analytical Chemistry—J. SMEATH THOMAS, D.Sc.

Geology:
George Herdman Professor—P. G. H. BOSWELL, O.B.E., D.Sc., M.Inst.M.M., F.G.S.

ASSOCIATE PROFESSORS:

Railway Engineering:
Sir J. A. F. ASPINALL, M.Eng., M.Inst.C.E., M.I.Mech.E.

Municipal Engineering:
J. A. BRODIE, M.Eng., P.Inst.C.E., M.I.Mech.E.

Municipal Electrical Engineering:
Vacant.

Dock and Harbour Engineering:
T. R. WILTON, M.A., Assoc.M.Inst.C.E., M.Cons.E.

The Prospectus of the Faculty may be obtained on application to the undersigned,
EDWARD CAREY, Registrar.

LIVERPOOL

ENGINEERING TRAINING

LOUGHBOROUGH COLLEGE,

LEICESTERSHIRE,

H. SCHOFIELD, M.B.E., B.Sc.(Hons.)Lond., A.R.C.Sc.Lond., Assoc.M.Inst.C.E., Principal.

DEPARTMENTS OF MECHANICAL, CIVIL, AUTOMOBILE AND ELECTRICAL ENGINEERING AND CHEMICAL TECHNOLOGY.

DEGREE AND DIPLOMA COURSES are arranged in the Theory and Practice of Engineering.

The Workshops of the College provide accommodation for 500 Students working at the same time.

The equipment is on most modern and comprehensive lines, and comprises Plant for Turning, Fitting, Milling, Grinding, Automatic Lathe Operating and Tool Setting, Tool and Gauge Making, Foundry Work, Pattern Making, Drawing Office Work, Heat Treatment, Viewing and Testing of all kinds, including Micrography and Radiography.

None but first-class work of a productive character is undertaken by the Students, working under the skilled supervision of a fully qualified Technical Staff.

The complete Course covers a period of five years, during which Works training in all the above sections will be given, and this will be accompanied by a full Theoretical Course of Instruction in the College Lecture Rooms and Laboratories.

Intending Students should be at least sixteen years of age, and have had a good Public School or Secondary Education.

The Fee is £50 per Session, there being three Terms in the Session.

Boarding accommodation is provided in Hostels attached to the College, full particulars of which, together with Illustrated Prospectus, will be forwarded upon application to the Registrar.

LOUGHBOROUGH

ENGINEERING TRAINING

UNIVERSITY OF DURHAM

Armstrong College

NEWCASTLE-UPON-TYNE

DEPARTMENTS OF

Mechanical · Marine · Civil
and Electrical Engineering

Naval Architecture · Mining
Metallurgy · Agriculture

AND OF

Pure Science
Arts and Commerce

Full Particulars may be obtained on application to
THE REGISTRAR,
Armstrong College, Newcastle-upon-Tyne

ENGINEERING TRAINING

University College of Nottingham.

Principal - - W. H. HEATON, M.A.

MECHANICAL, ELECTRICAL, and MINING ENGINEERING.

Heads of Departments:

Engineering - Professor C. H. BULLEID, M.A., A.M.I.C.E.
Technology - Professor W. ROBINSON, M.E., M.I.E.E.
Mining - - Professor W. H. McMILLAN, B.Sc., M.I.M.E.

DEGREE COURSES.

The College provides complete courses of study extending over three or four years for the Degrees of London University in Engineering and Mining.

DIPLOMA COURSES.

The Course for the Associateship of the University College of Nottingham in Engineering, Mining, or Mine Surveying extends over three years. Short courses for special purposes can be arranged.

The subjects comprised in the above courses are: Mathematics, Physics, Chemistry, Metallurgy, Machine Drawing and Design, Heat Engines, Hydraulics, Strength of Materials, Theory of Structures, Surveying, Theory of Machines, Electrical Technology and Design, Geology, Petroleum Technology, Mining, Mine Surveying, etc.

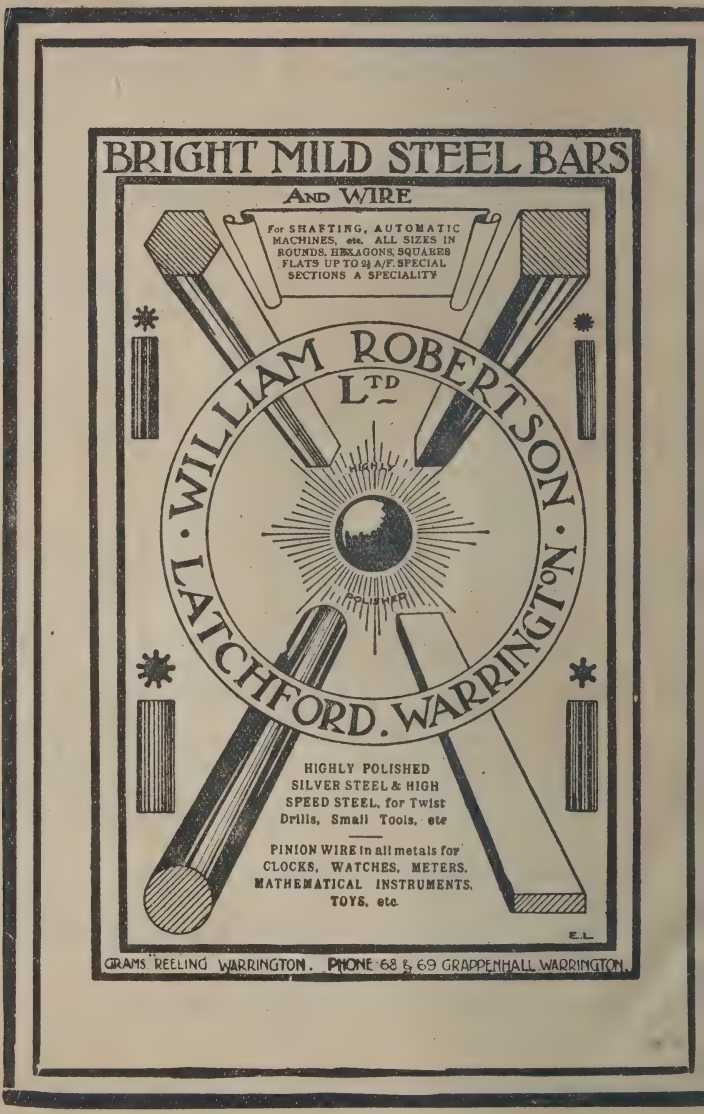
The Mechanical and Electrical Engineering and Mining Laboratories are fully equipped with the latest apparatus and testing machinery. Metal-working tools of all types are provided in the workshops.


ENTRANCE EXAMINATION.

For those who have not passed the London University Matriculation or an equivalent examination an Entrance Examination is held in July and September.

Prospectus and all particulars may be obtained from
THE REGISTRAR.

NOTTINGHAM


BRIGHT MILD STEEL BARS
AND WIRE
For SHAFTING, AUTOMATIC MACHINES, etc. ALL SIZES IN ROUNDS, HEXAGONS, SQUARES FLATS UP TO 2¼ A/F. SPECIAL SECTIONS A SPECIALITY
WILLIAM ROBERTSON LTD
LATCHFORD. WARRINGTON
HIGHLY POLISHED
SILVER STEEL & HIGH SPEED STEEL, for Twist Drills, Small Tools, etc
PINION WIRE in all metals for CLOCKS, WATCHES, METERS, MATHEMATICAL INSTRUMENTS, TOYS, etc.
E.L.
GRAMS "REELING" WARRINGTON. PHONE 68 & 69 GRAPPENHALL WARRINGTON.

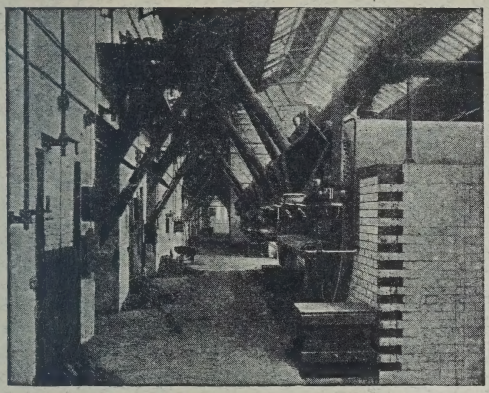

The Station with the Lowest Costs

TO attain this enviable position—to be at the *bottom* for low running costs and at the top for efficiency—is the aim of every ambitious station engineer. The stations with the established reputations are those which have installed 'Bennis' Machine Stokers and coal-handling plant. The truth of our assertion can be easily tested by reference to Garcke's Manual.

OUR catalogue on 'Coal and Ash Plant' is now available. If you are looking for ways and means of economising labour in power houses, you will find it in this book, which is packed with interesting information, figures, and photographs of actual installations. We shall be pleased to send the book on request. Ask for Catalogue YB 724.

ED. BENNIS & CO. LTD.,

LITTLE HULTON, BOLTON,

And 28 Victoria Street, Westminster, London, S.W. 1.

BULLIVANT AND CO., LIMITED

WIRE ROPES

(See tables, pages 256, 257).

For Ships' Hawsers, Running and Standing Rigging, Cranes, Lifts, Hoists, Derricks, &c., &c.

MINING ROPES

WIRE ROPES for Hauling and Winding and all Mining operations.

Ropes for Suspension Bridges, Aerial Ropeways, &c.

72 MARK LANE, LONDON, E.C. 3.

WORKS: MILLWALL, E. 14.

'Phone: Av. 2108. Tels.: "Bullivants (Fen), London."

BULLIVANTS
ENGINEERING & CONTRACTING Co., Ltd.

Designers of and Contractors for

ENDLESS ROPE & MAIN & TAIL HAULAGES, complete.

CANAL HAULAGES.

ELEVATORS, CONVEYORS, and CRUSHING and SCREENING PLANT.

BUNKERS, SHOOTS.

WIRE ROPE SUSPENSION BRIDGES.

TOWING WINCHES, &c., &c.

72 MARK LANE, LONDON, E.C. 3.

WORKS: MILLWALL, E. 14.

'Phone: Av. 2108. Tels.: "Bullivants (Fen), London."

3 0112 115706811